# ETSI TS 134 123-1 V8.5.0 (2009-02)

*Technical Specification*

**Universal Mobile Telecommunications System (UMTS);**
**LTE;**
**User Equipment (UE) conformance specification;**
**Part 1: Protocol conformance specification**
**(3GPP TS 34.123-1 version 8.5.0 Release 8)**



Reference
RTS/TSGR-0534123-1v850

Keywords
LTE, UMTS

***ETSI***

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

***Important notice***

Individual copies of the present document can be downloaded from:
http://www.etsi.org

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.
Information on the current status of this and other ETSI documents is available at
http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, please send your comment to one of the following services:
http://portal.etsi.org/chaircor/ETSI_support.asp

***Copyright Notification***

No part may be reproduced except as authorized by written permission.
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2009.
All rights reserved.

**DECT**™, **PLUGTESTS**™, **UMTS**™, **TIPHON**™, the TIPHON logo and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members.
**3GPP**™ is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.
**LTE**™ is a Trade Mark of ETSI currently being registered
for the benefit of its Members and of the 3GPP Organizational Partners.
**GSM**® and the GSM logo are Trade Marks registered and owned by the GSM Association.

# Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: *"Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards"*, which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://www.etsi.org/legal/home.htm).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

# Foreword

This Technical Specification (TS) has been produced by the ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp .

# Contents

Intellectual Property Rights ..... 2
Foreword ..... 2
Foreword ..... 56
Introduction ..... 56
1 Scope ..... 57
2 References ..... 57
3 Definitions and abbreviations ..... 59
3.1 Definitions ..... 59
3.2 Abbreviations ..... 59
4 Overview ..... 59
4.1 Test Methodology ..... 59
4.1.1 Testing of optional functions and procedures ..... 59
4.1.2 Test interfaces and facilities ..... 59
4.2 Implicit Testing ..... 60
5 Reference Conditions ..... 60
5.1 Generic setup procedures ..... 60
6 Idle mode operations ..... 60
6.1 In a pure 3G environment ..... 63
6.1.1 PLMN selection ..... 63
6.1.1.1 PLMN selection of RPLMN, HPLMN, UPLMN and OPLMN; Manual mode ..... 63
6.1.1.2 PLMN selection of "Other PLMN / access technology combinations"; Manual mode ..... 66
6.1.1.3 PLMN selection; independence of RF level and preferred PLMN; Manual mode ..... 68
6.1.1.4 PLMN selection of RPLMN, HPLMN, UPLMN and OPLMN; Automatic mode ..... 71
6.1.1.5 PLMN selection of "Other PLMN / access technology combinations"; Automatic mode ..... 73
6.1.1.6 Void ..... 75
6.1.1.7 Cell reselection of ePLMN in manual mode ..... 75
6.1.1.8 PLMN selection in shared network environment, Automatic mode ..... 77
6.1.1.9 PLMN selection in shared network environment, Manual Mode ..... 80
6.1.1.10 Presentation of additional information during PLMN selection; Manual mode ..... 83
6.1.1.11 Steering of Roaming ..... 86
6.1.1.12 Displaying EHPLMNs in manual mode ..... 87
6.1.1.13 PLMN selection of RPLMN or (E)HPLMN; Automatic mode ..... 91
6.1.1.14 Network selection mode at switch-on ..... 93
6.1.1.15 Exception in manual network selection mode when HPLMN is available at power-on ..... 96
6.1.2 Cell selection and reselection ..... 100
6.1.2.1 Cell reselection ..... 100
6.1.2.1a Cell reselection for inter-band operation ..... 103
6.1.2.2 Cell reselection using Qhyst, Qoffset and Treselection ..... 104
6.1.2.3 HCS Cell reselection ..... 107
6.1.2.4 HCS Cell reselection using reselection timing parameters for the H criterion ..... 109
6.1.2.5 HCS Cell reselection using reselection timing parameters for the R criterion ..... 113
6.1.2.6 Emergency calls ..... 116
6.1.2.7 Void ..... 118
6.1.2.8 Cell reselection: Equivalent PLMN ..... 118
6.1.2.9 Void ..... 122
6.1.2.9a Cell reselection using cell status and cell reservations – Type “A” USIM ..... 122
6.1.2.9b Cell reselection using cell status and cell reservations – Type “B” USIM ..... 124
6.1.2.10 HCS inter-frequency cell reselection ..... 126
6.1.2.10a HCS inter-frequency cell reselection for inter-band operation ..... 128
6.1.2.11 Cell reselection in shared network environment ..... 128
6.1.3 MBSFN Cluster selection and reselection (3.84/7.68 Mcps TDD) ..... 132

6.1.3.1 MBSFN only service recognition ..... 132
6.1.3.2 Suitable PLMN selection; MBSFN Frequency List present (unicast carrier) ..... 136
6.1.3.3 Suitable PLMN search; MBSFN Frequency List not present (unicast carrier) ..... 141
6.1.3.4 Cell reservations and access restrictions; Normal access class only ..... 147
6.1.3.5 Cell reservations and access restrictions; Operator access class ..... 152
6.1.3.6 Cell reservations and access restrictions; Home country services access class ..... 159
6.1.3.7 Inter frequency neighbour reselection / Service activation ..... 160
6.1.3.8 Inter frequency neighbour reselection / Activation of higher priority service ..... 164
6.2 Multi-mode environment (2G/3G case) ..... 168
6.2.1 PLMN and RAT selection ..... 168
6.2.1.1 Selection of the correct PLMN and associated RAT ..... 168
6.2.1.2 Selection of RAT for HPLMN; Manual mode ..... 170
6.2.1.3 Selection of RAT for UPLMN; Manual mode ..... 173
6.2.1.4 Selection of RAT for OPLMN; Manual mode ..... 175
6.2.1.5 Selection of "Other PLMN / access technology combinations"; Manual mode ..... 177
6.2.1.6 Selection of RAT for HPLMN; Automatic mode ..... 180
6.2.1.7 Selection of RAT for UPLMN; Automatic mode ..... 182
6.2.1.8 Selection of RAT for OPLMN; Automatic mode ..... 184
6.2.1.9 Selection of "Other PLMN / access technology combinations"; Automatic mode ..... 186
6.2.1.10 Selection of PLMN and RAT in shared network environment, Automatic mode ..... 188
6.2.1.11 Selection of PLMN and RAT in shared network environment, Manual Mode ..... 191
6.2.2 Cell selection and reselection ..... 195
6.2.2.1 Cell reselection if cell becomes barred or S<0; UTRAN to GSM ..... 195
6.2.2.2 Cell reselection if cell becomes barred or C1<0; GSM to UTRAN ..... 197
6.2.2.3 Cell reselection timings; GSM to UTRAN ..... 201
6.2.2.4 Cell reselection in multi-mode shared network environment ..... 205
6.2.2.5 Cell reselection using SIB18; UTRAN to GSM ..... 209

7 Layer 2 ..... 214
7.1 MAC ..... 214
7.1.1 Mapping between logical channels and transport channels ..... 214
7.1.1.1 CCCH mapped to RACH/FACH / Invalid TCTF ..... 214
7.1.1.2 DTCH or DCCH mapped to RACH/FACH / Invalid TCTF ..... 220
7.1.1.3 DTCH or DCCH mapped to RACH/FACH / Invalid C/T Field ..... 224
7.1.1.4 DTCH or DCCH mapped to RACH/FACH / Invalid UE ID Type Field ..... 226
7.1.1.5 DTCH or DCCH mapped to RACH/FACH / Incorrect UE ID ..... 228
7.1.1.6 DTCH or DCCH mapped to DSCH or USCH ..... 230
7.1.1.7 DTCH or DCCH mapped to CPCH ..... 233
7.1.1.8 DTCH or DCCH mapped to DCH / Invalid C/T Field ..... 236
7.1.1.9 MTCH mapped to FACH / Invalid TCTF (3.84/7.68 Mcps TDD MBSFN) ..... 239
7.1.1.10 MTCH mapped to FACH / Invalid MBMS-Id (3.84/7.68 Mcps TDD MBSFN) ..... 247
7.1.2 RACH/FACH procedures ..... 254
7.1.2.1 Selection and control of Power Level ..... 254
7.1.2.1.1 Void ..... 254
7.1.2.1.2 Selection and control of Power Level (3,84 Mcps TDD option) ..... 254
7.1.2.1.3 Selection and control of Power Level (1,28 Mcps TDD option) ..... 254
7.1.2.2 Correct application of Dynamic Persistence ..... 256
7.1.2.2.1 Void ..... 256
7.1.2.2.2 Correct application of Dynamic Persistence (3.84 Mcps TDD option) ..... 256
7.1.2.2.3 Void ..... 256
7.1.2.3 Correct Selection of RACH parameters ..... 256
7.1.2.3.1 Correct Selection of RACH parameters (FDD) ..... 256
7.1.2.3.2 Correct Selection of RACH parameters (3.84 Mcps TDD option) ..... 261
7.1.2.3.3 Correct Selection of RACH parameters (1.28 Mcps TDD option) ..... 261
7.1.2.4 Correct Detection and Response to FPACH (1.28 Mcps TDD option) ..... 262
7.1.2.4a Access Service class selection for RACH transmission ..... 265
7.1.2.5 Void ..... 271
7.1.3 Priority handling between data flows of one UE ..... 271
7.1.3.1 Priority handling between data flows of one UE ..... 271
7.1.3.2 TFC Selection ..... 273
7.1.4 Control of CPCH transmissions. ..... 281
7.1.4.1 Control of CPCH transmissions for FDD ..... 281

7.1.5 HS-DSCH MAC-hs ..... 287
7.1.5.1 MAC-hs reordering and stall avoidance ..... 287
7.1.5.2 MAC-hs priority queue handling ..... 291
7.1.5.3 MAC-hs PDU header handling ..... 292
7.1.5.4 MAC-hs retransmissions ..... 295
7.1.5.5 MAC-hs reset ..... 298
7.1.5.6 MAC-hs transport block size selection ..... 300
7.1.5.7 MAC-hs transport block size selection (3.84 Mcps TDD) ..... 309
7.1.5.8 MAC-hs transport block size selection (7.68 Mcps TDD) ..... 315
7.1.5a HS-DSCH MAC-ehs ..... 321
7.1.5a.1 MAC-ehs multiplexing / multiple logical channels on same queue ..... 321
7.1.5a.2 MAC-ehs multiplexing / multiple logical channels on multiple queues ..... 323
7.1.5a.3 MAC-ehs segmentation / UE handling of partial and full PDUs ..... 324
7.1.5a.4 MAC-ehs reordering and stall avoidance ..... 328
7.1.5a.5 MAC-ehs transport block size selection ..... 334
7.1.5a.5.1 Generic test procedure for the MAC-ehs transport block size selection test cases ..... 334
7.1.5a.5.2 MAC-ehs transport block size selection / QPSK and 16QAM ..... 341
7.1.5a.5.3 MAC-ehs transport block size selection / 64QAM ..... 349
7.1.5a.6 UE Identification on HS-SCCH in CELL_FACH ..... 349
7.1.5b HS-SCCH Less Operation ..... 352
7.1.5b.1 HARQ procedure for HS-SCCH less operation ..... 352
7.1.6 E-DCH MAC-es/e ..... 357
7.1.6.1 MAC-es/e multiplexing ..... 357
7.1.6.1.2 MAC-es/e multiplexing with RRC restrictions ..... 359
7.1.6.1.3 Correct settings of MAC-es/e header fields ..... 361
7.1.6.2 MAC-es/e – Scheduling ..... 363
7.1.6.2.1 Correct settings of MAC-es/e scheduling information ..... 363
7.1.6.2.2 Happy bit setting ..... 369
7.1.6.2.3 MAC-es/e non-scheduled transmissions ..... 371
7.1.6.2.4 MAC-es/e correct handling of scheduled transmissions when absolute grant varies ..... 374
7.1.6.2.5 MAC-es/e de-activation and re-activation of HARQ processes ..... 377
7.1.6.2.6 MAC-es/e correct handling of relative grants ..... 380
7.1.6.2.7 MAC-es/e correct handling of absolute grants on Primary and Secondary E-RNTI ..... 385
7.1.6.2.8 MAC-es/e combined non-scheduled and scheduled transmissions ..... 388
7.1.6.2.9 MAC-es/e Correct handling of HARQ profile power offsets ..... 392
7.1.6.2.9a MAC-es/e Correct handling of HARQ profile (1.28Mcps TDD) ..... 396
7.1.6.2.10 MAC-es/e Correct handling of minimum set of E-TFCI ..... 400
7.1.6.2.10a Smallest E-TFC (1.28Mcps TDD) ..... 404
7.1.6.2.11 MAC-es/e correct handling of absolute and relative grants in discontinuous downlink reception operation ..... 407
7.1.6.3 MAC-es/e- E-TFC selection ..... 413
7.1.6.3.1 MAC-es/e E-TFC priority ..... 413
7.1.6.3.2 MAC-es/e transport block size selection/ UL QPSK ..... 415
7.1.6.3.2a MAC-es/e transport block size selection/UL 16QAM ..... 421
7.1.6.3.3 Impact on E-TFCI selection on MAC at UE for UL DRX at Node B/ MAC Inactivity Threshold>1 ..... 427
7.1.6.3.4 Impact on E-TFCI selection on MAC at UE for UL DRX at Node B/ MAC Inactivity Threshold =1 ..... 430
7.1.6.3.5 MAC-es/e transport block size selection(1.28Mcps TDD) ..... 432
7.1.6.4 MAC-es/e - E-DCH retransmissions ..... 436
7.1.6.4.1 MAC-es/e process handling ..... 436
7.1.6.4.2 MAC-es/e maximum number of retransmissions ..... 439
7.1.6.4.3 MAC-es/e Correct handling of MAC-es/e reset ..... 442
7.1.6a E-DCH MAC-es/e for 3.84 and 7.68Mcps TDD ..... 444
7.1.6a.1 MAC-es/e multiplexing ..... 444
7.1.6a.1.2 MAC-es/e multiplexing with RRC restrictions ..... 446
7.1.6a.1.3 Correct settings of MAC-es/e header fields ..... 448
7.1.6a.2 MAC-es/e – Scheduling ..... 450
7.1.6a.2.1 Correct settings of MAC-es/e scheduling information ..... 450
7.1.6a.2.2 Correct settings of MAC-es/e scheduling information when scheduling delay timer expires ..... 454
7.1.6a.2.3 MAC-es/e correct handling of scheduled transmissions ..... 456
7.1.6a.2.4 MAC-es/e combined non-scheduled and scheduled transmissions ..... 458

7.1.6a.2.5 MAC-es/e Correct handling of HARQ profile power offsets ..... 460
7.1.6a.3 MAC-es/e- E-TFC selection ..... 464
7.1.6a.3.1 MAC-es/e E-TFC priority ..... 464
7.1.6a.3.2 MAC-es/e transport block size selection/ UL QPSK ..... 466
7.1.6a.4 MAC-es/e - E-DCH retransmissions ..... 478
7.1.6a.4.1 MAC-es/e process handling ..... 478
7.1.6a.4.2 MAC-es/e maximum number of retransmissions ..... 481
7.2 RLC testing ..... 483
7.2.0 General ..... 483
7.2.0.1 Radio bearer setup ..... 483
7.2.1 Transparent mode ..... 483
7.2.1.1 Segmentation and reassembly ..... 483
7.2.2 Unacknowledged mode ..... 484
7.2.2.1 General information for UM tests ..... 484
7.2.2.2 Segmentation and reassembly / Selection of 7 or 15 bit "Length Indicators" ..... 484
7.2.2.3 Segmentation and reassembly / 7-bit "Length Indicators" / Padding ..... 486
7.2.2.4 Segmentation and Reassembly / 7-bit "Length Indicators" / LI = 0 ..... 487
7.2.2.5 Reassembly / 7-bit "Length Indicators" / Invalid LI value ..... 489
7.2.2.6 Reassembly / 7-bit "Length Indicators" / LI value > PDU size ..... 490
7.2.2.7 Reassembly / 7-bit "Length Indicators" / First data octet LI ..... 491
7.2.2.8 Segmentation and reassembly / 15-bit "Length Indicators" / Padding ..... 493
7.2.2.9 Segmentation and Reassembly / 15-bit "Length Indicators" / LI = 0 ..... 494
7.2.2.10 Segmentation and reassembly / 15-bit "Length Indicators" / One octet short LI ..... 495
7.2.2.11 Reassembly / 15-bit "Length Indicators" / Invalid LI value ..... 496
7.2.2.12 Reassembly / 15-bit "Length Indicators" / LI value > PDU size ..... 497
7.2.2.13 Reassembly / 15-bit "Length Indicators" / First data octet LI ..... 499
7.2.2.14 Flexible handling of RLC PDU sizes for UM RLC in downlink ..... 500
7.2.2.15 Flexible handling of RLC PDU sizes for UM RLC in uplink ..... 502
7.2.2a Unacknowledged mode (3.84/7.68 Mcps TDD MBSFN) ..... 505
7.2.2a.1 P-T-M Radio bearer setup ..... 505
7.2.2a.2 Reassembly / 7-bit "Length Indicators" / Invalid LI value (3.84/7.68 Mcps TDD MBSFN) ..... 506
7.2.2a.3 Reassembly / 7-bit "Length Indicators" / LI value > PDU size (3.84/7.68 Mcps TDD MBSFN) ..... 508
7.2.2a.4 Reassembly / 7-bit "Length Indicators" / First data octet LI (3.84/7.68 Mcps TDD MBSFN) ..... 509
7.2.2a.5 Reassembly / 15-bit "Length Indicators" / Invalid LI value (3.84/7.68 Mcps TDD MBSFN) ..... 511
7.2.2a.6 Reassembly / 15-bit "Length Indicators" / LI value > PDU size (3.84/7.68 Mcps TDD MBSFN) ..... 512
7.2.2a.7 Reassembly / 15-bit "Length Indicators" / First data octet LI (3.84/7.68 Mcps TDD MBSFN) ..... 514
7.2.3 Acknowledged mode ..... 515
7.2.3.1 General information for AM tests ..... 515
7.2.3.2 Segmentation and reassembly / Selection of 7 or 15 bit Length Indicators ..... 516
7.2.3.3 Segmentation and Reassembly / 7-bit "Length Indicators" / Padding or Piggy-backed Status ..... 518
7.2.3.4 Segmentation and Reassembly / 7-bit "Length Indicators" / LI = 0 ..... 520
7.2.3.5 Reassembly / 7-bit "Length Indicators" / Reserved LI value ..... 522
7.2.3.6 Reassembly / 7-bit "Length Indicators" / LI value > PDU size ..... 523
7.2.3.7 Segmentation and Reassembly / 15-bit "Length Indicators" / Padding or Piggy-backed Status ..... 524
7.2.3.8 Segmentation and Reassembly / 15-bit "Length Indicators" / LI = 0 ..... 526
7.2.3.9 Segmentation and reassembly / 15-bit "Length Indicators" / One octet short LI ..... 527
7.2.3.10 Reassembly / 15-bit "Length Indicators" / Reserved LI value ..... 529
7.2.3.11 Reassembly / 15-bit "Length Indicators" / LI value > PDU size ..... 530
7.2.3.12 Correct use of Sequence Numbering ..... 531
7.2.3.13 Control of Transmit Window ..... 533
7.2.3.14 Control of Receive Window ..... 537
7.2.3.15 Polling for status / Last PDU in transmission queue ..... 539
7.2.3.16 Polling for status / Last PDU in retransmission queue ..... 541
7.2.3.17 Polling for status / Poll every Poll_PDU PDUs ..... 543
7.2.3.18 Polling for status / Poll every Poll_SDU SDUs ..... 545
7.2.3.19 Polling for status / Timer triggered polling (Timer_Poll_Periodic) ..... 547
7.2.3.20 Polling for status / Polling on Poll_Window% of transmission window ..... 549
7.2.3.21 Polling for status / Operation of Timer_Poll timer / Timer expiry ..... 551
7.2.3.22 Polling for status / Operation of Timer_Poll timer / Stopping Timer_Poll timer ..... 553
7.2.3.23 Polling for status / Operation of Timer_Poll timer / Restart of the Timer_Poll timer ..... 555
7.2.3.24 Polling for status / Operation of timer Timer_Poll_Prohibit ..... 557
7.2.3.25 Receiver Status Triggers / Detection of missing PDUs ..... 559

7.2.3.26 Receiver Status Triggers / Operation of timer Timer_Status_Periodic ..... 561
7.2.3.27 Receiver Status Triggers / Operation of timer Timer_Status_Prohibit ..... 562
7.2.3.28 Status reporting / Abnormal conditions / Reception of LIST SUFI with Length set to zero ..... 564
7.2.3.29 Timer based discard, with explicit signalling / Expiry of Timer_Discard ..... 566
7.2.3.29a Timer based discard, with explicit signalling / Expiry of Timer_Discard when Timer_STATUS_prohibit is active ..... 568
7.2.3.30 Timer based discard, with explicit signalling / Obsolete MRW_ACK ..... 568
7.2.3.31 Timer based discard, with explicit signalling / Failure of MRW procedure ..... 570
7.2.3.32 SDU discard after MaxDAT-1 number of transmissions ..... 572
7.2.3.33 Operation of the RLC Reset procedure / UE Originated ..... 574
7.2.3.34 Operation of the RLC Reset procedure / UE Terminated ..... 578
7.2.3.35 Reconfiguration of RLC parameters by upper layers ..... 579
7.2.3.36 Flexible handling of RLC PDU sizes for AM RLC ..... 582
7.2.3.38 Flexible handling of RLC PDU sizes for AM RLC in uplink ..... 585
7.2.4 MBMS ..... 587
7.2.4.1 Void ..... 587
7.2.4.2 MTCH duplicate avoidance and reordering / MBMS Broadcast Service ..... 587
7.2.4.2m MTCH duplicate avoidance and reordering / MBMS Multicast Service ..... 590
7.2.4.3 MCCH Out Of Sequence Delivery handling / MBMS Broadcast Service ..... 591
7.2.4.3m MCCH Out Of Sequence Delivery handling / MBMS Multicast Service ..... 594
7.2.4.3s MCCH Out Of Sequence Delivery handling / MBMS Broadcast Service (3.84/7.68 Mcps TDD MBSFN) ..... 595
7.3 PDCP ..... 603
7.3.1 General ..... 603
7.3.1.1 General assumptions ..... 603
7.3.1.2 Common Test sequences and Default message contents for PDCP ..... 603
7.3.1.2.1 Common Test sequences for PDCP ..... 604
7.3.1.2.2 Default PDCP Message Contents ..... 607
7.3.2 IP Header Compression and PID assignment ..... 609
7.3.2.1 UE in RLC AM ..... 609
7.3.2.1.1 Transmission of uncompressed Header ..... 609
7.3.2.1.2 Transmission of compressed Header ..... 617
7.3.2.2 UE in RLC UM ..... 625
7.3.2.2.1 Transmission of uncompressed Header ..... 625
7.3.2.2.2 Transmission of compressed Header ..... 632
7.3.2.2.3 Extension of used compression methods ..... 639
7.3.2.2.4 Compression type used for different entities ..... 645
7.3.2.2.5 Reception of not defined PID values ..... 651
7.3.3 PDCP sequence numbering when lossless SRNS Relocation ..... 655
7.3.3.1 Data transmission if lossless SRNS Relocation is supported ..... 655
7.3.3.2 Synchronisation of PDCP sequence numbers ..... 660
7.3.3.3 PDCP Sequence Numbering and Data Forwarding - Reception of reserved PDU type ..... 666
7.3.3.4 PDCP Sequence Number synchronization – Reception of invalid next expected receive Sequence Number ..... 666
7.3.3.5 UTRAN MOBILITY INFORMATION: Lossless SRNS relocation in CELL_FACH (without pending of ciphering) ..... 666
7.3.3.6 Cell Update: Lossless SRNS relocation in CELL_FACH (without pending of ciphering) ..... 674
7.3.3.7 URA Update: Lossless SRNS relocation in CELL_FACH (without pending of ciphering) ..... 683
7.3.3.8 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Lossless SRNS relocation) (without pending of ciphering) ..... 690
7.3.3.9 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Lossless SRNS relocation) (without pending of ciphering) ..... 702
7.3.3.10 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (Lossless SRNS relocation) (without pending of ciphering) ..... 715
7.3.3.11 Transport Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Lossless SRNS relocation) (without pending of ciphering) ..... 723
7.3.4 PDCP configuration testing ..... 731
7.3.4.1 PDCP configuration behaviour while RRC Radio bearer setup procedure ..... 731
7.3.4.2 PDCP configuration behaviour while RRC Radio bearer release procedure ..... 731
7.3.4.3 PDCP configuration behaviour while RRC Cell Update procedure ..... 731
7.3.4.4 PDCP configuration behaviour for an invalid RRC configuration ..... 731
7.3.5 PDCP RoHC testing ..... 731

7.3.5.1 General ..... 731
7.3.5.1.1 Preamble for extended RoHC conformance testing ..... 731
7.3.5.2 Compression / Decompression of a UDP/RTP/IPv6 header flow ..... 732
7.3.5.2.1 UDP/RTP/IPv6 Unacknowledged - unidirectional Mode (U-Mode) ..... 732
7.3.5.2.2 UDP/RTP/IPv6 Unacknowledged - Normal U-mode Transmission (without ack) ..... 732
7.3.5.2.3 UDP/RTP/IPv6 Unacknowledged - Bi-directional Optimistic Mode (O-Mode) ..... 732
7.3.5.2.4 UDP/RTP/IPv6 Unacknowledged - Bi-directional Reliable Mode (R-Mode) ..... 732
7.3.5.2.5 UDP/RTP/IPv6 Unacknowledged - Transition Mode ..... 732
7.3.5.2.6 UDP/RTP/IPv6 Unacknowledged - Flow Parameters ..... 732
7.3.5.2.7 UDP/RTP/IPv6 Acknowledged - unidirectional Mode (U-Mode) ..... 732
7.3.5.2.8 UDP/RTP/IPv6 Acknowledged - Normal U-mode Transmission (without ack) using the UE as compressor ..... 733
7.3.5.2.9 UDP/RTP/IPv6 Acknowledged - Bi-directional Optimistic Mode (O-Mode) ..... 733
7.3.5.2.10 UDP/RTP/IPv6 Acknowledged - Bi-directional Reliable Mode (R-Mode) ..... 733
7.3.5.2.11 UDP/RTP/IPv6 Acknowledged - Transition Mode ..... 733
7.3.5.2.12 UDP/RTP/IPv6 Acknowledged - Flow Parameters ..... 733
7.3.5.3 ROHC Profile 2,3 and 4. Compression / Decompression of a UDP/IPv6 or ESP/IPv6 or IPv6 header flow ..... 733
7.3.5.3.1 UDP/IPv6 or ESP/IPv6 or IPv6 Unacknowledged - unidirectional Mode (U-Mode) ..... 733
7.3.5.3.2 UDP/IPv6 or ESP/IPv6 or IPv6 Unacknowledged - Normal U-mode Transmission (without ack) ..... 733
7.3.6 PDCP RoHC performance testing ..... 736
7.3.6.1 General ..... 736
7.3.6.1.1 Generic ROHC performance test procedure ..... 737
7.3.6.2 Base test of ROHC RTP O-mode compressor ..... 738
7.3.6.3 Base test of ROHC RTP R-mode compressor ..... 742
7.3.6.4 Re-establishment of TS function after DTX in O-mode ..... 747
7.3.6.5 Re-establishment of TS function after DTX in R-mode ..... 750
7.3.6.6 Compressor response to single lost packets in O-mode ..... 754
7.3.6.7 Compressor response to single lost packets in R-mode ..... 755
7.3.6.8 TS function during DTX with varying delta in O-mode ..... 755
7.3.6.9 TS function during DTX with varying delta in R-mode ..... 758
7.3.6.10 SRNS relocation for ROHC RTP O-mode compressor ..... 762
7.3.7 PDCP AMR Data PDU testing ..... 767
7.3.7.1 PDCP AMR Data PDU testing ..... 767
7.4 BMC ..... 771
7.4.1 BMC RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 771
7.4.1.1 Transport channel parameters of BMC RAB and SRBs for CCCH, SRB for DCCH, and SRB for BCCH ..... 771
7.4.1.2 TFCS ..... 772
7.4.1.3 Physical channel parameters ..... 772
7.4.2 General BMC message reception ..... 772
7.4.2.1 UE in RRC Idle mode ..... 772
7.4.2.2 UE in RRC Connected mode, state CELL_PCH ..... 774
7.4.2.3 UE in RRC Connected mode, state URA_PCH ..... 777
7.4.2.4 UE in RRC Idle mode (ANSI-41 CB data) ..... 779
7.4.2.5 UE in RRC Connected mode, state CELL_PCH (ANSI-41 CB data) ..... 781
7.4.2.6 UE in RRC Connected mode, state URA_PCH (ANSI-41 CB data) ..... 784
7.4.3 BMC message reception procedure ..... 786
7.4.3.1 Reception of certain CBS message types ..... 786

8 Radio Resource Control RRC ..... 792
8.1 RRC Connection Management Procedure ..... 792
8.1.1 Paging ..... 792
8.1.1.1 Paging for Connection in idle mode ..... 792
8.1.1.2 Paging for Connection in connected mode (CELL_PCH) ..... 796
8.1.1.3 Paging for Connection in connected mode (URA_PCH) ..... 799
8.1.1.4 Paging for notification of BCCH modification in idle mode ..... 801
8.1.1.5 Paging for notification of BCCH modification in connected mode (CELL_PCH) ..... 805
8.1.1.5a Paging on HS-DSCH for notification of BCCH modification in CELL_PCH ..... 809
8.1.1.6 Paging for notification of BCCH modification in connected mode (URA_PCH) ..... 812

8.1.1.6a Paging for notification of synchronised BCCH modification in idle mode using BCCH modification time ....816
8.1.1.7 Paging for Connection in connected mode (CELL_DCH) ....821
8.1.1.8 Paging for Connection in connected mode (CELL_FACH) ....824
8.1.1.9 Paging for Connection in idle mode (multiple paging records) ....826
8.1.1.10 Paging for Connection in connected mode (URA_PCH, multiple paging records) ....832
8.1.1.11 Paging for Connection in idle mode (Shared Network Environment) ....838
8.1.1.12 Paging for Connection in connected mode (CELL_PCH) without HS-SCCH ....843
8.1.2 RRC Connection Establishment ....847
8.1.2.1 RRC Connection Establishment in CELL_DCH state: Success ....847
8.1.2.1a RRC Connection Establishment in CELL_DCH state: Success (TDD Only) ....852
8.1.2.2 RRC Connection Establishment: Success after T300 timeout ....856
8.1.2.3 RRC Connection Establishment: Failure (V300 is greater than N300) ....874
8.1.2.4 RRC Connection Establishment: Reject ("wait time" is not equal to 0) ....876
8.1.2.5 RRC Connection Establishment: Reject ("wait time" is not equal to 0 and V300 is greater than N300) ....880
8.1.2.6 RRC Connection Establishment: Reject ("wait time" is set to 0) ....883
8.1.2.7 RRC Connection Establishment in CELL_FACH state: Success ....885
8.1.2.8 Void ....889
8.1.2.9 RRC Connection Establishment: Success after Physical channel failure and Failure after Invalid configuration ....889
8.1.2.10 RRC connection establishment in CELL_DCH on another frequency ....893
8.1.2.10a RRC connection establishment in CELL_DCH on another frequency in a different frequency band ....896
8.1.2.11 RRC Connection Establishment in FACH state (Frequency modification): Success ....897
8.1.2.12 RRC Connection Establishment: Reject with interRATInfo is set to GSM ....901
8.1.2.13 RRC Connection Establishment: Reject with InterRATInfo is set to GSM and selection to the designated system fails ....903
8.1.2.14 RRC Connection Establishment using the default configuration for 3.4 kbps signalling bearers ....904
8.1.2.15 RRC Connection Establishment using the default configuration for 13.6 kbps signalling bearers ....908
8.1.2.16 RRC Connection Establishment / Domain Specific Access Control: Success ....910
8.1.2.17 RRC Connection Establishment for transition from Idle Mode to CELL_DCH: Success (start of E-DCH transmission) ....915
8.1.2.18 RRC Connection Establishment using the default configuration for HS-DSCH / E-DCH signalling bearers ....924
8.1.2.19 RRC Connection Establishment for transition from Idle Mode to CELL_DCH: Success (start of discontinuous uplink transmission and downlink reception) ....926
8.1.2.20 RRC Connection Establishment for transition from Idle Mode to CELL_FACH: Success (Start of HS-DSCH Reception) ....930
8.1.3 RRC Connection Release ....934
8.1.3.1 RRC Connection Release in CELL_DCH state: Success ....934
8.1.3.2 RRC Connection Release using on DCCH in CELL_FACH state: Success ....936
8.1.3.3 RRC Connection Release using on CCCH in CELL_FACH state: Success ....938
8.1.3.4 RRC Connection Release in CELL_FACH state: Failure ....940
8.1.3.5 RRC Connection Release in CELL_FACH state: Invalid message ....941
8.1.3.6 RRC Connection Release in CELL_DCH state (Frequency modification): Success ....944
8.1.3.7 RRC Connection Release in CELL_FACH state (Frequency modification): Success ....948
8.1.3.8 Void ....951
8.1.3.9 RRC Connection Release in CELL_DCH state (Network Authentication Failure): Success ....951
8.1.4 Void ....957
8.1.5 UE capability ....957
8.1.5.1 UE Capability in CELL_DCH state: Success ....957
8.1.5.2 UE Capability in CELL_DCH state: Success after T304 timeout ....962
8.1.5.3 UE Capability in CELL_DCH state: Failure (After N304 re-transmissions) ....964
8.1.5.4 UE Capability in CELL_FACH state: Success ....969
8.1.5.5 UE Capability in CELL_FACH state: Success after T304 timeout ....973
8.1.5.6 UE Capability Information/ Reporting Of InterRAT Specific UE RadioAccessCapability ....975
8.1.6 Direct Transfer ....977
8.1.6.1 Direct Transfer in CELL DCH state (invalid message reception and no signalling connection exists) ....977
8.1.6.2 Direct Transfer in CELL FACH state (invalid message reception and no signalling connection exists) ....979

8.1.6.3 Measurement Report on INITIAL DIRECT TRANSFER message and UPLINK DIRECT TRANSFER message ..... 981
8.1.6.4 UPLINK Direct Transfer (RLC re-establishment) ..... 988
8.1.6.5 Initial Direct Transfer: Inclusion of establishment cause ..... 992
8.1.7 Security mode command ..... 993
8.1.7.1 Security mode command in CELL_DCH state (CS Domain) ..... 993
8.1.7.1b Security mode command in CELL_DCH state (PS Domain) ..... 998
8.1.7.1c Security mode control in CELL_DCH state (CN Domain switch and new keys at RRC message sequence number wrap around) ..... 1004
8.1.7.1d Security mode control in CELL_DCH state interrupted by a cell update ..... 1010
8.1.7.2 Security mode command in CELL_FACH state ..... 1015
8.1.7.3 Security mode command in CELL_DCH state (UEA2/UIA2, CS Domain) ..... 1019
8.1.7.3b Security mode command in CELL_DCH state (UEA2/UIA2, PS Domain) ..... 1020
8.1.7.3c Security mode control in CELL_DCH state (UEA2/UIA2, CN Domain switch and new keys at RRC message sequence number wrap around) ..... 1021
8.1.7.3d Security mode control in CELL_DCH state interrupted by a cell update (UEA2/UIA2) ..... 1022
8.1.7.4 Security mode command in CELL_FACH state (UEA2/UIA2) ..... 1023
8.1.8 Counter check ..... 1024
8.1.8.1 Counter check in CELL_DCH state, with symmetric RAB ..... 1024
8.1.8.2 Counter check in CELL_FACH state ..... 1028
8.1.8.3 Counter check in CELL_DCH state, with asymmetric RAB ..... 1032
8.1.9 Signalling Connection Release Indication ..... 1042
8.1.9a Signalling Connection Release Indication (RLC re-establishment): CS signalling connection release ..... 1044
8.1.9b Signalling Connection Release Indication (RLC re-establishment): PS signalling connection release ..... 1047
8.1.10 Broadcast of system information ..... 1050
8.1.10.1 Dynamic change of segmentation, concatenation & scheduling and handling of unsupported information blocks ..... 1050
8.1.11 Signalling Connection Release (Invalid configuration) ..... 1070
8.1.12 Integrity Protection ..... 1074
8.2 Radio Bearer control procedure ..... 1078
8.2.1 Radio Bearer Establishment ..... 1078
8.2.1.1 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success ..... 1078
8.2.1.1a Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (TDD Only) ..... 1079
8.2.1.2 Void ..... 1081
8.2.1.3 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Failure (Unsupported configuration) ..... 1081
8.2.1.4 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Failure (Physical channel Failure and successful reversion to old configuration) ..... 1084
8.2.1.5 Void ..... 1088
8.2.1.6 Void ..... 1088
8.2.1.7 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Failure (Invalid message reception and Invalid configuration) ..... 1088
8.2.1.8 Radio Bearer Establishment for transition from CELL_DCH to CELL_FACH: Success ..... 1092
8.2.1.9 Radio Bearer Establishment for transition from CELL_DCH to CELL_FACH: Success (Cell re-selection) ..... 1094
8.2.1.10 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success ..... 1097
8.2.1.10a Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success (TDD Only) ..... 1098
8.2.1.11 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Failure (Unsupported configuration) ..... 1100
8.2.1.12 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Failure (Physical channel Failure and successful reversion to old configuration) ..... 1103
8.2.1.13 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Failure (Physical channel Failure and cell reselection) ..... 1106
8.2.1.14 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Failure (Incompatible simultaneous reconfiguration) ..... 1110
8.2.1.15 Void ..... 1113
8.2.1.16 Radio Bearer Establishment for transition from CELL_FACH to CELL_FACH: Success ..... 1113
8.2.1.17 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: success (Subsequently received) ..... 1115

8.2.1.18 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success (Subsequently received) ..... 1117
8.2.1.19 Void ..... 1120
8.2.1.20 Void ..... 1120
8.2.1.21 Void ..... 1120
8.2.1.22 Radio Bearer Establishment for transition from CELL_DCH to CELL_FACH (Frequency modification): Success ..... 1120
8.2.1.23 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH (Frequency modification): Success ..... 1123
8.2.1.24 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH (Frequency modification): Success ..... 1125
8.2.1.24a Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH (Inter band handover): Success ..... 1128
8.2.1.25 Radio Bearer Establishment for transition from CELL_FACH to CELL_FACH (Frequency modification): Success ..... 1129
8.2.1.26 Void ..... 1131
8.2.1.27 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (two radio links, start of HS-DSCH reception) ..... 1131
8.2.1.27a Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (start of HS-DSCH reception) ..... 1138
8.2.1.27b Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (start of HS-DSCH reception) ..... 1141
8.2.1.28 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (RB mapping for both DL DCH and HS-DSCH in cell without HS-DSCH support) ..... 1145
8.2.1.29 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, uplink TFCS restriction and start of HS-DSCH reception) ..... 1150
8.2.1.30 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialised hard handover to another frequency, start of HS-DSCH reception) ..... 1156
8.2.1.31 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success (start of HS-DSCH reception) ..... 1162
8.2.1.32 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success (start of HS-DSCH reception with frequency modification) ..... 1167
8.2.1.33 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Unsynchronised RL Reconfiguration) ..... 1174
8.2.1.34 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Unsynchronised RL Reconfiguration with frequency modification) ..... 1176
8.2.1.34a Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Unsynchronised RL Reconfiguration with inter band handover) ..... 1179
8.2.1.35 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (start of E-DCH transmission) ..... 1179
8.2.1.36 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (hard handover to another frequency, start of E-DCH transmission) ..... 1188
8.2.1.36a Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH using F-DPCH: Success (hard handover to another frequency, start of E-DCH transmission, F-DPCH configured) 1198
8.2.1.37 Void ..... 1199
8.2.1.38 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (start of discontinuous uplink transmission) ..... 1199
8.2.1.39 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (start of HS-SCCH less operation) ..... 1204
8.2.1.40 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (hard handover to another frequency, start of discontinuous uplink transmission) ..... 1206
8.2.1.41 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (UL DPCCH slot format #4) ..... 1209
8.2.2 Radio Bearer Reconfiguration ..... 1211
8.2.2.1 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success ..... 1211
8.2.2.1a Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (TDD Only) ..... 1221
8.2.2.2 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Failure (Unsupported configuration) ..... 1231
8.2.2.3 Void ..... 1234
8.2.2.4 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Failure (Physical channel failure and cell reselection) ..... 1234

8.2.2.5 Void....1239
8.2.2.6 Void....1239
8.2.2.7 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (Continue and stop)....1239
8.2.2.8 Radio Bearer Reconfiguration from CELL_DCH to CELL_FACH: Success....1242
8.2.2.9 Radio Bearer Reconfiguration from CELL_DCH to CELL_FACH: Success (Cell re-selection).....1246
8.2.2.10 Radio Bearer Reconfiguration: from CELL_FACH to CELL_DCH including modification of previously signalled CELL_DCH configuration: Success....1251
8.2.2.11 Radio Bearer Reconfiguration from CELL_FACH to CELL_DCH: Failure (Unsupported configuration)....1255
8.2.2.11a Radio Bearer Reconfiguration from CELL_FACH to CELL_DCH: Failure (Unsupported configuration) (1.28 Mcps TDD Only)....1257
8.2.2.12 Void....1259
8.2.2.13 Void....1259
8.2.2.14 Void....1259
8.2.2.15 Void....1259
8.2.2.16 Void....1259
8.2.2.17 Radio Bearer Reconfiguration from CELL_FACH to CELL_FACH: Success....1259
8.2.2.18 Radio Bearer Reconfiguration from CELL_FACH to CELL_FACH: Success (Cell re-selection)...1263
8.2.2.19 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (Subsequently received)....1268
8.2.2.20 Void....1281
8.2.2.21 Void....1281
8.2.2.22 Void....1281
8.2.2.23 Radio Bearer Reconfiguration from CELL_FACH to CELL_PCH: Success....1281
8.2.2.24 Void....1285
8.2.2.25 Void....1285
8.2.2.26 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (Incompatible Simultaneous Reconfiguration)....1285
8.2.2.27 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH (Frequency modification): Success....1289
8.2.2.28 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_FACH (Transport channel type switching with frequency modification): Success....1291
8.2.2.29 Void....1294
8.2.2.30 Void....1294
8.2.2.31 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH (Frequency modification): Success....1294
8.2.2.32 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_FACH (Frequency modification): Success....1297
8.2.2.33 Void....1300
8.2.2.34 Radio Bearer Reconfiguration for transition from CELL_FACH to URA_PCH (Frequency modification): Success....1300
8.2.2.35 Radio Bearer Reconfiguration from CELL_DCH to CELL_FACH: Successful channel switching with multiple PS RABs established....1303
8.2.2.36 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of HS-DSCH reception)....1315
8.2.2.36a Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of HS-DSCH reception)....1327
8.2.2.37 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_FACH and from CELL_FACH to CELL_DCH: Success (start and stop of HS-DSCH reception)....1332
8.2.2.38 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (with active HS-DSCH reception)....1344
8.2.2.39 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialised hard handover to another frequency, start and stop of HS-DSCH reception)....1348
8.2.2.40 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_FACH and from CELL_FACH to CELL_DCH: Success (frequency modification, start and stop of HS-DSCH reception)....1357
8.2.2.41 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of HS-DSCH reception, during an active CS bearer)....1373
8.2.2.42 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialised hard handover to another frequency, start and stop of HS-DSCH reception, during an active CS bearer)....1380

8.2.2.43 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Seamless SRNS relocation, without pending of ciphering, frequency modification) ..... 1390
8.2.2.43a Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Seamless SRNS relocation, UEA2/UIA2, without pending of ciphering, frequency modification) ..... 1414
8.2.2.43b Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Seamless SRNS relocation, change of ciphering and integrity protection algorithms, frequency modification) ..... 1415
8.2.2.44 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (With active E-DCH transmission) ..... 1433
8.2.2.44a Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (With active E-DCH transmission, F-DPCH configured) ..... 1437
8.2.2.45 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (start and stop of E-DCH transmission) ..... 1438
8.2.2.46 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (hard handover to another frequency, start and stop of E-DCH transmission) ..... 1459
8.2.2.47 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (frequency modification, start and stop of E-DCH transmission) ..... 1479
8.2.2.47a Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (frequency modification, start and stop of E-DCH transmission, F-DPCH Configured) ..... 1512
8.2.2.48 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of E-DCH transmission) ..... 1520
8.2.2.49 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_PCH: Success (stop of E-DCH transmission) ..... 1539
8.2.2.50 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (from speech to speech plus PS data with modification of downlink spreading factor) ..... 1551
8.2.2.51 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (With active discontinuous uplink transmission) ..... 1556
8.2.2.52 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (start and stop of discontinuous uplink transmission) ..... 1559
8.2.2.53 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (hard handover to another frequency, start and stop of discontinuous uplink transmission) ..... 1570
8.2.2.54 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (frequency modification, start and stop of discontinuous uplink transmission) ..... 1582
8.2.2.55 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of discontinuous uplink transmission) ..... 1594
8.2.2.56 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_PCH: Success (stop of discontinuous uplink transmission) ..... 1604
8.2.2.57 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (Reconfiguration between fixed and flexible AM RLC, Serving HS-DSCH cell change between MAC-hs and MAC-ehs) ..... 1610
8.2.2.58 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Reconfigurations between CS voice over DCH and CS voice over HSPA) ..... 1625
8.2.2.59 Radio Bearer Reconfiguration from Cell FACH ( Cell supporting HS-DSCH in Cell FACH) to CELL_FACH( Cell not supporting HS-DSCH in Cell FACH): Success (Cell re-selection) ..... 1627
8.2.2.60 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_FACH and CELL_FACH to CELL_DCH: Success (with ongoing HS-DSCH reception) ..... 1634
8.2.3 Radio Bearer Release ..... 1643
8.2.3.1 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success ..... 1643
8.2.3.1a Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (TDD Only) ..... 1644
8.2.3.2 Void ..... 1647
8.2.3.3 Void ..... 1647
8.2.3.4 Void ..... 1647
8.2.3.5 Void ..... 1647
8.2.3.6 Void ..... 1647
8.2.3.7 Radio Bearer Release for transition from CELL_DCH to CELL_FACH: Success ..... 1647
8.2.3.8 Radio Bearer Release for transition from CELL_DCH to CELL_FACH: Success (Cell re-selection) ..... 1649
8.2.3.9 Radio Bearer Release for transition from CELL_FACH to CELL_DCH: Success ..... 1652

8.2.3.10 Void....1653
8.2.3.11 Radio Bearer Release for transition from CELL_FACH to CELL_DCH: Failure (Physical channel failure and successful reversion to old configuration)....1653
8.2.3.12 Void....1657
8.2.3.13 Void....1657
8.2.3.14 Void....1657
8.2.3.15 Radio Bearer Release for transition from CELL_FACH to CELL_FACH: Success....1657
8.2.3.16 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (Subsequently received)....1661
8.2.3.17 Radio Bearer Release for transition from CELL_FACH to CELL_DCH: Success (Subsequently received)....1663
8.2.3.18 Radio Bearer Release from CELL_DCH to CELL_PCH: Success....1665
8.2.3.19 Radio Bearer Release from CELL_DCH to URA_PCH: Success....1668
8.2.3.20 Radio Bearer Release for transition from CELL_DCH to CELL_FACH (Frequency modification): Success....1670
8.2.3.21 Radio Bearer Release from CELL_DCH to CELL_PCH (Frequency modification): Success....1673
8.2.3.22 Radio Bearer Release for transition from CELL_FACH to CELL_PCH: Success....1677
8.2.3.23 Radio Bearer Release for transition from CELL_FACH to URA_PCH: Success....1679
8.2.3.24 Radio Bearer Release for transition from CELL_DCH to CELL_DCH (Frequency modification): Success....1681
8.2.3.25 Radio Bearer Release for transition from CELL_DCH to URA_PCH (Frequency modification): Success....1683
8.2.3.26 Radio Bearer Release for transition from CELL_FACH to CELL_PCH (Frequency modification): Success....1686
8.2.3.27 Radio Bearer Release for transition from CELL_FACH to URA_PCH (Frequency modification): Success....1688
8.2.3.28 Radio Bearer Release for transition from CELL_FACH to CELL_FACH (Frequency modification): Success....1691
8.2.3.29 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Associated with signalling connection release during simultaneous PS and CS call....1693
8.2.3.30 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (stop of HS-DSCH reception)....1696
8.2.3.31 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (With active HS-DSCH reception)....1698
8.2.3.31a Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (With active HS-DSCH reception)....1701
8.2.3.32 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialised hard handover to another frequency, with active HS-DSCH reception)....1704
8.2.3.33 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (stop of HS-DSCH reception with frequency modification)....1709
8.2.3.34 Radio Bearer Release for transition from CELL_DCH to CELL_FACH: Success (stop of HS-DSCH reception with frequency modification)....1713
8.2.3.35 Radio Bearer Release for transition from CELL_DCH to CELL_PCH: Success (stop of HS-DSCH reception)....1715
8.2.3.36 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (frequency modification, stop of E-DCH transmission)....1718
8.2.3.37 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (frequency modification, stop of discontinuous uplink transmission)....1727
8.2.4 Transport channel reconfiguration....1732
8.2.4.1 Transport channel reconfiguration (Timing re-initialised hard handover with transmission rate modification) from CELL_DCH to CELL_DCH: Success....1732
8.2.4.1a Transport channel reconfiguration (Transmission Rate Modification) from CELL_DCH to CELL_DCH of the same cell: Success....1736
8.2.4.2 Void....1739
8.2.4.3 Transport channel reconfiguration from CELL_DCH to CELL_DCH: Failure (Physical channel failure and reversion to old configuration)....1739
8.2.4.4 Transport channel reconfiguration from CELL_DCH to CELL_DCH: Failure (Physical channel failure and cell reselection)....1744
8.2.4.4a Transport channel reconfiguration from CELL_DCH to CELL_DCH: Failure (Physical channel failure and cell reselection) (1.28 Mcps TDD Only)....1748
8.2.4.5 Void....1753
8.2.4.6 Void....1753

8.2.4.7 Void....1753
8.2.4.8 Void....1753
8.2.4.9 Void....1753
8.2.4.10 Transport channel reconfiguration from CELL_FACH to CELL_DCH: Success....1753
8.2.4.10a Transport channel reconfiguration from CELL_FACH to CELL_DCH: Success(1.28 Mcps TDD Only)....1755
8.2.4.11 Void....1758
8.2.4.12 Void....1758
8.2.4.13 Void....1758
8.2.4.14 Void....1758
8.2.4.15 Void....1758
8.2.4.16 Void....1758
8.2.4.17 Void....1758
8.2.4.18 Transport Channel Reconfiguration from CELL_DCH to CELL_DCH: Success (Subsequently received)....1758
8.2.4.19 Transport Channel Reconfiguration from CELL_FACH to CELL_DCH: Success (Subsequently received)....1760
8.2.4.20 Void....1763
8.2.4.21 Void....1763
8.2.4.22 Void....1763
8.2.4.23 Void....1763
8.2.4.24 Transport channel reconfiguration from CELL_DCH to CELL_DCH: Success with uplink transmission rate modification....1763
8.2.4.25 Transport channel reconfiguration from CELL_FACH to CELL_DCH (Frequency modification): Success....1767
8.2.4.26 Void....1769
8.2.4.27 Void....1769
8.2.4.28 Void....1769
8.2.4.29 Transport Channel Reconfiguration for transition from CELL_DCH to CELL_DCH (Frequency modification): Success....1769
8.2.4.30 Void....1772
8.2.4.31 Void....1772
8.2.4.32 Void....1772
8.2.4.33 Void....1772
8.2.4.34 Void....1772
8.2.4.35 Void....1772
8.2.4.36 Transport Channel Reconfiguration from CELL_DCH to CELL_DCH: Success (with active HS-DSCH reception, not changing the value of TTI during UL rate modification)....1772
8.2.4.36a Transport Channel Reconfiguration from CELL_DCH to CELL_DCH: Success (with active HS-DSCH reception, not changing the value of TTI during UL rate modification) (TDD)....1779
8.2.5 Transport format combination control....1784
8.2.5.1 Void....1784
8.2.5.2 Void....1784
8.2.5.3 Void....1784
8.2.5.4 Transport format combination control in CELL_DCH: Failure (Invalid configuration)....1784
8.2.6 Physical channel reconfiguration....1787
8.2.6.1 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Success....1787
8.2.6.1a Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Success (1.28 Mcps TDD Only)....1790
8.2.6.2 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Failure (Unsupported configuration)....1793
8.2.6.3 Void....1796
8.2.6.4 Void....1796
8.2.6.5 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Failure (Incompatible simultaneous reconfiguration)....1796
8.2.6.6 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Failure (Invalid message reception and Invalid configuration)....1799
8.2.6.7 Physical channel reconfiguration for transition from CELL_DCH to CELL_FACH: Success....1803
8.2.6.8 Physical channel reconfiguration for transition from CELL_DCH to CELL_FACH: Success (Cell re-selection)....1804
8.2.6.9 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Success....1807

8.2.6.9a Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Success(1.28 Mcps TDD Only) ....1810
8.2.6.10 Void....1812
8.2.6.11 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Failure (Physical channel failure and successful reversion to old configuration) ....1812
8.2.6.12 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Failure (Physical channel failure and cell update ) ....1816
8.2.6.13 Void....1820
8.2.6.14 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Failure (Invalid message reception and Invalid configuration) ....1820
8.2.6.15 Void....1825
8.2.6.16 Void....1825
8.2.6.17 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Success (Subsequently received) ....1825
8.2.6.18 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Success (Subsequently received) ....1827
8.2.6.19 Physical Channel Reconfiguration from CELL_DCH to CELL_PCH: Success ....1830
8.2.6.20 Physical Channel Reconfiguration from CELL_DCH to URA_PCH: Success ....1833
8.2.6.21 Physical Channel Reconfiguration from CELL_FACH to URA_PCH: Success ....1835
8.2.6.22 Physical Channel Reconfiguration from CELL_FACH to CELL_PCH: Success ....1836
8.2.6.23 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing maintain): Success ....1837
8.2.6.24 Void....1840
8.2.6.25 Physical channel reconfiguration for transition from CELL_DCH to CELL_FACH (Frequency modification): Success ....1840
8.2.6.26 Physical Channel Reconfiguration from CELL_DCH to CELL_PCH (Frequency modification): Success ....1843
8.2.6.27 Physical channel reconfiguration from CELL_FACH to CELL_PCH: Success ....1846
8.2.6.28 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Downlink channelisation code modification): Success ....1848
8.2.6.29 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Compressed mode initiation): Success ....1850
8.2.6.30 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Modify active set cell): Success ....1856
8.2.6.31 Physical channel reconfiguration transition from CELL_FACH to URA_PCH: Success ....1858
8.2.6.32 Physical channel reconfiguration for transition from CELL_DCH to URA_PCH (Frequency band modification): Success ....1860
8.2.6.33 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH (Frequency band modification): Success ....1863
8.2.6.34 Physical channel reconfiguration from CELL_FACH to CELL_PCH (Frequency band modification): Success ....1865
8.2.6.35 Physical channel reconfiguration for transition from CELL_FACH to URA_PCH (Frequency band modification): Success ....1868
8.2.6.36 Physical channel reconfiguration for transition from CELL_FACH to CELL_FACH (Frequency band modification): Success ....1871
8.2.6.37 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing re-initialised) ....1874
8.2.6.37a Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing re-initialised) (1.28 Mcps TDD) ....1895
8.2.6.37b Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency band cell with timing re-initialised) ....1905
8.2.6.38 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing re-initialised): Failure (Physical channel failure and reversion to old channel) ....1905
8.2.6.39 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Seamless SRNS relocation) (without pending of ciphering) ....1919
8.2.6.39a Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving HS-DSCH cell change without MAC-hs reset) ....1926
8.2.6.39b Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving HS-DSCH cell change with MAC-hs reset) ....1945
8.2.6.39c Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving HS-DSCH cell change without MAC-hs reset) (TDD) ....1964

8.2.6.40 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Two radio links, change of HS-PDSCH configuration) ..... 1972
8.2.6.40a Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (change of HS-PDSCH configuration) ..... 1977
8.2.6.41 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialised hard handover to another frequency, signalling only) ..... 1981
8.2.6.42 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, Serving HS-DSCH cell change) ..... 1984
8.2.6.43 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Seamless SRNS relocation with pending of ciphering) ..... 1996
8.2.6.44 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Failure (Radio link failure in new configuration) ..... 2004
8.2.6.45 Physical Channel Reconfiguration for transition from CELL_DCH to URA_PCH: Failure (Radio link failure in old configuration) ..... 2011
8.2.6.46 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing re-initialised. Serving HS-DSCH cell change): Failure (Physical channel failure and reversion to old channel) ..... 2013
8.2.6.47 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Compressed mode initiation, with active HS-DSCH reception): Success ..... 2021
8.2.6.48 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, serving HS-DSCH cell change, compressed mode) ..... 2027
8.2.6.48a Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, serving HS-DSCH cell change, with measurement report) for 3.84 Mcps TDD ..... 2035
8.2.6.49 Physical Channel Reconfiguration from CELL_DCH to URA_PCH: Success (stop of HS-DSCH reception) ..... 2041
8.2.6.50 Physical Channel Reconfiguration for transition from CELL_DCH to URA_PCH: Success (frequency modification, stop of E-DCH transmission) ..... 2044
8.2.6.51 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving E-DCH cell change) ..... 2048
8.2.6.52 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, Serving E-DCH cell change, compressed mode) ..... 2074
8.2.6.53 Void ..... 2089
8.2.6.54 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Failure (Timing re-initialized hard handover, Serving E-DCH cell change, physical channel failure and reversion to old channel) ..... 2089
8.2.6.55 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start of discontinuous uplink transmission and downlink reception) ..... 2095
8.2.6.56 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start of HS-SCCH less operation) ..... 2099
8.2.6.57 Physical Channel Reconfiguration for transition from CELL_DCH to URA_PCH: Success (frequency modification, stop of discontinuous uplink transmission) ..... 2101
8.2.6.58 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving E-DCH cell change with discontinuous uplink transmission) ..... 2105
8.2.6.59 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, Serving E-DCH cell change with discontinuous uplink transmission) ..... 2119
8.2.6.60 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Failure (Timing re-initialised hard handover, Serving E-DCH cell change with discontinuous uplink transmission, physical channel failure and reversion to old channel) ..... 2129
8.2.6.61 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (CQI reporting reduction) ..... 2133
8.2.7 Physical Shared Channel Allocation [TDD only] ..... 2136
8.2.8 PUSCH capacity request [TDD only] ..... 2136
8.2.9 Void ..... 2136
8.3 RRC connection mobility procedure ..... 2137
8.3.1 Cell Update ..... 2137
8.3.1.1 Cell Update: cell reselection in CELL_FACH ..... 2137
8.3.1.1a Cell Update: cell reselection in CELL_FACH (Cells belong to different frequency bands) ..... 2149
8.3.1.1b Cell Update: cell reselection in CELL_FACH(TDD) ..... 2151

8.3.1.2 Cell Update: cell reselection in CELL_PCH ..... 2164
8.3.1.3 Cell Update: periodical cell update in CELL_FACH ..... 2167
8.3.1.3a Cell Update: periodical cell update in CELL_FACH (1.28 Mcps TDD Only) ..... 2174
8.3.1.4 Cell Update: periodical cell update in CELL_PCH ..... 2183
8.3.1.5 Cell Update: UL data transmission in URA_PCH ..... 2188
8.3.1.6 Cell Update: UL data transmission in CELL_PCH ..... 2191
8.3.1.7 Void ..... 2194
8.3.1.8 Void ..... 2194
8.3.1.9 Cell Update: re-entering of service area after T305 expiry and being out of service area ..... 2194
8.3.1.10 Cell Update: expiry of T307 after T305 expiry and being out of service area ..... 2198
8.3.1.11 Cell Update: Success after T302 time-out ..... 2200
8.3.1.12 Cell Update: Failure (After Maximum Re-transmissions) ..... 2202
8.3.1.13 Cell Update: Reception of Invalid CELL UPDATE CONFIRM Message ..... 2204
8.3.1.14 Cell Update: Incompatible simultaneous reconfiguration ..... 2207
8.3.1.15 Cell Update: Unrecoverable error in Acknowledged Mode RLC SRB ..... 2209
8.3.1.16 Void ..... 2215
8.3.1.17 Cell Update: Failure (UTRAN initiate an RRC connection release procedure on CCCH) ..... 2215
8.3.1.18 Cell Update: Radio Link Failure (T314>0, T315=0), CS RAB established ..... 2217
8.3.1.19 Void ..... 2223
8.3.1.20 Cell Update: Reception of CELL UPDATE CONFIRM Message that causes invalid configuration ..... 2223
8.3.1.21 Cell Update: Cell reselection to cell of another PLMN belonging to the equivalent PLMN list ..... 2225
8.3.1.22 Cell update: Restricted cell reselection to a cell belonging to forbidden LA list (Cell_FACH) ..... 2228
8.3.1.23 Cell Update: HCS cell reselection in CELL_FACH ..... 2232
8.3.1.24 Cell Update: HCS cell reselection in CELL_PCH ..... 2249
8.3.1.25 CELL UPDATE: Radio Link Failure (T314=0, T315=0) ..... 2267
8.3.1.26 Cell Update: Radio Link Failure (T314>0, T315=0), PS RAB established ..... 2269
8.3.1.27 Cell Update: Radio Link Failure (T314=0, T315>0), CS RAB ..... 2274
8.3.1.28 Cell Update: Radio Link Failure (T314=0, T315>0), PS RAB ..... 2276
8.3.1.29 Cell Update: Radio Link Failure (T314>0, T315>0), CS RAB ..... 2280
8.3.1.30 Cell Update: Radio Link Failure (T314>0, T315>0), PS RAB ..... 2284
8.3.1.31 Cell Update: re-entering of service area from URA_PCH after T316 expiry but before T317 expiry ..... 2290
8.3.1.32 Cell Update: Transition from URA_PCH to CELL_DCH, start of HS-DSCH reception ..... 2294
8.3.1.33 Cell Update: Transition from CELL_PCH to CELL_DCH, start of HS-DSCH reception, frequency modification ..... 2299
8.3.1.33a Cell Update: Transition from CELL_PCH to CELL_DCH, start of HS-DSCH reception, frequency modification(TDD) ..... 2308
8.3.1.34 Cell Update: Transition from CELL_DCH to CELL_FACH, stop of HS-DSCH reception ..... 2314
8.3.1.35 Cell Update: Transition from CELL_DCH to CELL_DCH, with active HS-DSCH reception ..... 2323
8.3.1.36 Cell Update: Transition from CELL_DCH to CELL_FACH (stop of HS-DSCH reception with frequency modification) ..... 2327
8.3.1.37 Cell Update: Transition from CELL_DCH to CELL_DCH (with active HS-DSCH reception and frequency modification) ..... 2335
8.3.1.38 Cell Update: state specific handling of Treselection and Qhyst for cell reselection in CELL_FACH ..... 2340
8.3.1.39 Cell Update: state specific handling of Treselection and Qhyst for cell reselection in CELL_PCH. 2343
8.3.1.40 Cell update: Transition from CELL_PCH to CELL_DCH, inclusion of establishment cause ..... 2347
8.3.1.41 Cell Update: Transition from URA_PCH to CELL_DCH: Success (start of E-DCH transmission) 2350
8.3.1.42 Cell Update: Transition from CELL_PCH to CELL_DCH: Success (frequency modification, start of E-DCH transmission) ..... 2358
8.3.1.42a Cell Update: Transition from CELL_PCH to CELL_DCH: Success (frequency modification, start of E-DCH transmission, F-DPCH Configured) ..... 2395
8.3.1.43 Cell Update: Radio Link Failure, with active E-DCH transmission ..... 2404
8.3.1.44 Cell Update: Transition from CELL_PCH to CELL_DCH: Success (frequency modification, start of discontinuous uplink transmission) ..... 2415
8.3.1.45 Cell Update: Radio Link Failure, with active discontinuous uplink transmission ..... 2430
8.3.1.46 Cell Update: Transition from URA_PCH to CELL_DCH: Success (start of discontinuous uplink transmission) ..... 2438
8.3.1.47 Cell Update: cell reselection in CELL_FACH (Reselection between cell not supporting HS-PDSCH in CELL_FACH and cell supporting HS-PDSCH is CELL_FACH) ..... 2445
8.3.2 URA Update ..... 2450

8.3.2.1 URA Update: Change of URA ..... 2450
8.3.2.1a URA Update: Change of URA (Cells belong to different frequency bands) ..... 2456
8.3.2.2 URA Update: Periodical URA update and Reception of Invalid message ..... 2457
8.3.2.3 Void ..... 2460
8.3.2.4 URA Update: loss of service after expiry of timers T307 and T305 ..... 2460
8.3.2.5 URA Update: Success after Confirmation error of URA-ID list ..... 2463
8.3.2.6 URA Update: Failure (V302 is greater than N302: Confirmation error of URA-ID list) ..... 2466
8.3.2.7 URA Update: Success after T302 timeout ..... 2469
8.3.2.8 Void ..... 2471
8.3.2.9 URA Update: Failure (UTRAN initiate an RRC connection release procedure on CCCH) ..... 2471
8.3.2.10 URA Update: Reception of URA UPDATE CONFIRM message that causes invalid configuration ..... 2473
8.3.2.11 URA Update: Cell reselection to cell of another PLMN belonging to the equivalent PLMN list ..... 2475
8.3.2.12 Restricted cell reselection to a cell belonging to forbidden LA list (URA_PCH) ..... 2478
8.3.2.13 URA Update: Change of URA due to HCS Cell Reselection ..... 2480
8.3.3 UTRAN Mobility Information ..... 2493
8.3.3.1 UTRAN Mobility Information: Success ..... 2493
8.3.3.2 UTRAN Mobility Information: Failure (Invalid message reception) ..... 2496
8.3.3.3 UTRAN MOBILITY INFORMATION: Seamless SRNS relocation in CELL_DCH (without pending of ciphering) ..... 2499
8.3.3.4 UTRAN Mobility Information: Shared Network ..... 2505
8.3.4 Active set update in soft handover (FDD) ..... 2508
8.3.4.1 Active set update in soft handover: Radio Link addition ..... 2508
8.3.4.2 Active set update in soft handover: Radio Link removal ..... 2514
8.3.4.3 Active set update in soft handover: Combined radio link addition and removal ..... 2521
8.3.4.4 Active set update in soft handover: Invalid Configuration ..... 2531
8.3.4.5 Active set update in soft handover: Reception of an ACTIVE SET UPDATE message in wrong state ..... 2534
8.3.4.6 Void ..... 2537
8.3.4.7 Active set update in soft handover: Invalid Message Reception ..... 2537
8.3.4.8 Active set update in soft handover: Radio Link addition in multiple radio link environment ..... 2541
8.3.4.9 Active set update in soft handover: Radio Link removal (stop of HS-PDSCH reception) ..... 2557
8.3.4.10 Active set update in soft handover: Radio Link addition and serving HS-DSCH / E-DCH cell change ..... 2563
8.3.4.11 Active set update in soft handover: Radio Link addition and serving HS-DSCH / E-DCH cell change, with discontinuous uplink transmission ..... 2568
8.3.5 Hard Handover ..... 2580
8.3.6 Inter-system hard handover from GSM to UTRAN ..... 2580
8.3.7 Inter-system hard handover from UTRAN to GSM ..... 2580
8.3.7.1 Inter system handover from UTRAN/To GSM/Speech/Success ..... 2584
8.3.7.1a Inter system handover from UTRAN/To GSM/Speech/Success with A5/3 ciphering ..... 2587
8.3.7.1b Inter system handover from UTRAN/To GSM/Speech/Success with UEA2/UIA2 and A5/3 ciphering ..... 2588
8.3.7.2 Inter system handover from UTRAN/To GSM/Data/Same data rate/Success ..... 2588
8.3.7.2a Inter system handover from UTRAN/To GSM/Data/Same data rate/Extended Rates/Success ..... 2592
8.3.7.3 Inter system handover from UTRAN/To GSM/Data/Data rate down grading/Success ..... 2596
8.3.7.3a Inter system handover from UTRAN/To GSM/Data/Data rate down grading/Extended Rates/Success ..... 2599
8.3.7.4 Inter system handover from UTRAN/To GSM/Speech/Establishment/Success ..... 2602
8.3.7.5 Inter system handover from UTRAN/To GSM/Speech/Failure ..... 2604
8.3.7.6 Inter system handover from UTRAN/To GSM/Speech/Failure (L2 Establishment) ..... 2610
8.3.7.7 Inter system handover from UTRAN/To GSM/Speech/Failure (L1 Synchronization) ..... 2612
8.3.7.8 Inter system handover from UTRAN/To GSM/Speech/Failure (Invalid Inter-RAT message) ..... 2614
8.3.7.9 Inter system handover from UTRAN/To GSM/Speech/Failure (Unsupported configuration) ..... 2616
8.3.7.10 Inter system handover from UTRAN/To GSM/Speech/Failure (Reception by UE in CELL_FACH) ..... 2618
8.3.7.11 Inter system handover from UTRAN/To GSM/Speech/Failure (Invalid message reception) ..... 2620
8.3.7.12 Inter system handover from UTRAN/To GSM/Speech/Failure (Physical channel Failure and Reversion Failure) ..... 2622
8.3.7.13 Inter system handover from UTRAN/To GSM/ success / call under establishment ..... 2628
8.3.7.14 Inter system handover from UTRAN/To GSM/Speech/Success (stop of HS-DSCH reception) ..... 2631
8.3.7.15 Inter system handover from UTRAN/To GSM/Speech/Failure(stop of HS-DSCH reception) ..... 2638

8.3.7.16 Inter system handover from UTRAN/To GSM/Simultaneous CS and PS domain services/Success/TBF Establishment Success ..... 2641
8.3.7.17 Inter system handover from UTRAN/To GSM/DTM Support/Simultaneous CS and PS domain services/Success ..... 2645
8.3.8 Inter system cell reselection to UTRAN ..... 2648
8.3.9 Inter system cell reselection from UTRAN ..... 2649
8.3.9.1 Cell reselection if cell becomes barred or S<0; UTRAN to GPRS (CELL_FACH) ..... 2652
8.3.9.2 Cell reselection if cell becomes barred or S<0; UTRAN to GPRS (URA_PCH) ..... 2655
8.3.9.3 Cell reselection if cell rank changes; UTRAN to GPRS (UE in CELL_FACH fails to complete an inter-RAT cell reselection) ..... 2657
8.3.9.4 Cell reselection if S<0; UTRAN to GPRS (UE in CELL_PCH fails to complete an inter-RAT cell reselection) ..... 2659
8.3.9.5 Successful Cell Reselection with RAU – $Q_{offset}$ value modification; UTRAN to GPRS (CELL_FACH) ..... 2660
8.3.11 Inter-RAT cell change order from UTRAN ..... 2663
8.3.11.1 Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Success ..... 2663
8.3.11.1a Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Success with UEA2/UIA2, GEA2 ciphering ..... 2665
8.3.11.1b Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Success with UEA2/UIA2 and GEA3 ciphering ..... 2666
8.3.11.2 Inter-RAT cell change order from UTRAN/To GPRS/CELL_FACH/Success ..... 2666
8.3.11.3 Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Failure (T309 expiry) ..... 2669
8.3.11.4 Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Failure (Physical channel Failure and Reversion Failure) ..... 2671
8.3.11.5 Inter-RAT cell change order from UTRAN/To GPRS/CELL_FACH/Failure (T309 expiry) ..... 2679
8.3.11.6 Inter-RAT cell change order from UTRAN/To GPRS/CELL_FACH/Failure (Physical channel Failure and Reversion Failure) ..... 2681
8.3.11.7 Inter-RAT cell change order from UTRAN/To GPRS/ Failure (Unsupported configuration) ..... 2685
8.3.11.8 Inter-RAT cell change order from UTRAN/To GPRS/ Failure (Invalid Inter-RAT message) ..... 2686
8.3.11.9 Inter-RAT Cell Change Order from UTRAN to GPRS/CELL_DCH/Success (stop of HS-DSCH reception) ..... 2688
8.3.11.10 Inter-RAT Cell Change Order from UTRAN to GPRS/CELL_DCH/Failure (Physical channel Failure) ..... 2691
8.3.11.11 Inter-RAT cell change order from UTRAN/To GPRS/CELL_FACH/No RAB established/Success ..... 2694
8.3.11.12 Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Network Assisted Cell Change/Success ..... 2696
8.3.11.13 Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Network Assisted Cell Change with Invalid SI/Success ..... 2699
8.3.11.14 Inter-RAT Cell Change Order from UTRAN to GPRS/CELL_DCH/Success (stop of E-DCH transmission) ..... 2701
8.3.11.15 Inter-RAT Cell Change Order from UTRAN to GPRS/CELL_DCH/Success (stop of discontinuous uplink transmission) ..... 2703
8.4 Measurement procedure ..... 2707
8.4.1 Measurement Control and Report ..... 2707
8.4.1.1 Measurement Control and Report: Intra-frequency measurement for transition from idle mode to CELL_DCH state (FDD) ..... 2707
8.4.1.1A Measurement Control and Report: Intra-frequency measurement for transition from idle mode to CELL_DCH state (TDD) ..... 2720
8.4.1.2 Measurement Control and Report: Inter-frequency measurement for transition from idle mode to CELL_DCH state (FDD) ..... 2731
8.4.1.2A Measurement Control and Report: Inter-frequency measurement for transition from idle mode to CELL_DCH state (TDD) ..... 2743
8.4.1.2B Measurement Control and Report: Inter-band measurement for transition from idle mode to CELL_DCH state (FDD) ..... 2751
8.4.1.3 Measurement Control and Report: Intra-frequency measurement for transition from idle mode to CELL_FACH state (FDD) ..... 2752
8.4.1.3A Measurement Control and Report: Intra-frequency measurement for transition from idle mode to CELL_FACH state (TDD) ..... 2758
8.4.1.4 Measurement Control and Report: Inter-frequency measurement for transition from idle mode to CELL_FACH state (FDD) ..... 2764

8.4.1.4A Measurement Control and Report: Inter-frequency measurement for transition from idle mode to CELL_FACH state (TDD) ..... 2767
8.4.1.5 Measurement Control and Report: Intra-frequency measurement for transition from CELL_DCH to CELL_FACH state (FDD) ..... 2770
8.4.1.5A Measurement Control and Report: Intra-frequency measurement for transition from CELL_DCH to CELL_FACH state (TDD) ..... 2780
8.4.1.6 Measurement Control and Report: Inter-frequency measurement for transition from CELL_DCH to CELL_FACH state (FDD) ..... 2790
8.4.1.6A Measurement Control and Report: Inter-frequency measurement for transition from CELL_DCH to CELL_FACH state (TDD) ..... 2797
8.4.1.7 Measurement Control and Report: Intra-frequency measurement for transition from CELL_FACH to CELL_DCH state (FDD) ..... 2802
8.4.1.7A Measurement Control and Report: Intra-frequency measurement for transition from CELL_FACH to CELL_DCH state (TDD) ..... 2822
8.4.1.8 Measurement Control and Report: Inter-frequency measurement for transition from CELL_FACH to CELL_DCH state (FDD) ..... 2844
8.4.1.8A Measurement Control and Report: Inter-frequency measurement for transition from CELL_FACH to CELL_DCH state (TDD) ..... 2857
8.4.1.9 Measurement Control and Report: Unsupported measurement in the UE ..... 2864
8.4.1.10 Measurement Control and Report: Failure (Invalid Message Reception) ..... 2868
8.4.1.11 Void ..... 2870
8.4.1.12 Void ..... 2870
8.4.1.13 Void ..... 2870
8.4.1.14 Measurement Control and Report: Cell forbidden to affect reporting range (FDD) ..... 2870
8.4.1.15 Measurement Control and Report: Configuration Incomplete ..... 2883
8.4.1.16 Measurement Control and Report: Traffic volume measurement for transition from idle mode to CELL_FACH state ..... 2894
8.4.1.17 Measurement Control and Report: Traffic volume measurement for transition from idle mode to CELL_DCH state ..... 2901
8.4.1.18 Measurement Control and Report: Traffic volume measurement for transition from CELL_FACH state to CELL_DCH state ..... 2907
8.4.1.19 Measurement Control and Report: Traffic volume measurement for transition from CELL_DCH to CELL_FACH state ..... 2916
8.4.1.20 Void ..... 2924
8.4.1.21 Void ..... 2924
8.4.1.22 Measurement Control and Report: Quality measurements ..... 2924
8.4.1.23 Measurement Control and Report: Intra-frequency measurement for events 1C and 1D ..... 2927
8.4.1.24 Measurement Control and Report: Inter-frequency measurement for event 2A ..... 2937
8.4.1.24A Measurement Control and Report: Inter-band measurement for event 2A ..... 2949
8.4.1.25 Measurement Control and Report: Inter-frequency measurement for events 2B and 2E ..... 2950
8.4.1.25A Measurement Control and Report: Inter-band measurement for events 2B and 2E ..... 2965
8.4.1.26 Measurement Control and Report: Measurement for events 2D and 2F ..... 2966
8.4.1.27 Measurement Control and Report: UE internal measurement for events 6A and 6B ..... 2973
8.4.1.28 Measurement Control and Report: UE internal measurement for events 6F (FDD) and 6G ..... 2977
8.4.1.28A Measurement Control and Report: UE internal measurement for event 6F (1.28 Mcps TDD) ..... 2981
8.4.1.29 Measurement Control and Report: Event based Traffic Volume measurement in CELL_FACH state. ..... 2983
8.4.1.30 Measurement Control and Report: Event based Traffic Volume measurement in CELL_DCH state. ..... 2999
8.4.1.31 Measurement Control and Report: Inter-RAT measurement in CELL_DCH state ..... 3005
8.4.1.32 Void ..... 3016
8.4.1.33 Measurement Control and Report: Inter-RAT measurement, event 3a ..... 3016
8.4.1.34 Measurement Control and Report: Inter-RAT measurement, event 3b ..... 3025
8.4.1.35 Measurement Control and Report: Inter-RAT measurement, event 3c ..... 3036
8.4.1.36 Measurement Control and Report: Inter-RAT measurement, event 3d ..... 3043
8.4.1.37 Measurement Control and Report: UE internal measurement, event 6c ..... 3054
8.4.1.38 Measurement Control and Report: UE internal measurement, event 6d ..... 3058
8.4.1.39 Measurement Control and Report: UE internal measurement, event 6e ..... 3062
8.4.1.40 Measurement Control and Report: Inter-RAT measurement, event 3C, in CELL_DCH state using sparse compressed mode pattern ..... 3066
8.4.1.41 Measurement Control and Report: Additional Measurements list ..... 3074
8.4.1.42 Measurement Control and Report: Change of Compressed Mode Method ..... 3083

8.4.1.43 Measurement Control and Report: Compressed Mode Reconfiguration ....3098
8.4.1.44 Measurement Control and Report: Intra-frequency measurement for events 1H and 1I (TDD)....3116
8.4.1.45 Measurement Control and Report: Intra-frequency measurement for event 1G (TDD) ....3123
8.4.1.46 Void....3130
8.4.1.47 Measurement Control and Report: Event triggered periodic measurement for event 1B (FDD)....3130
8.4.1.48 Measurement Control and Report: Combined Inter-frequency measurement for event 2b and Inter-RAT measurement, event 3a (FDD)....3141
8.4.1.49 Measurement Control and Report: Intra-frequency measurement for event 1J....3152
8.4.1.50 Measurement reporting when moving from CELL_PCH to CELL_FACH....3162
8.5 MBMS Specific Procedures....3169
8.5.1 MBMS Session Start....3169
8.5.1.1 MBMS PTP Session Start at MCCH Acquisition in Idle mode / MBMS Selected Service....3169
8.5.1.1m MBMS PTP Session Start at MCCH Acquisition in Idle mode / MBMS Multicast Service ....3176
8.5.1.2 MBMS PTP Session Start at MCCH Notification in CELL_PCH / MBMS Selected Service ....3178
8.5.1.2m MBMS PTP Session Start at MCCH Notification in CELL_PCH / MBMS Multicast Service....3181
8.5.1.3 MBMS PTM Session Start at MCCH Acquisition in CELL_FACH state / MBMS Broadcast Service....3182
8.5.1.3m MBMS PTM Session Start at MCCH Acquisition in CELL_FACH state / MBMS Multicast Service....3185
8.5.1.4 MBMS PTM Session Start at MCCH Notification in CELL_DCH state / MBMS Broadcast Service....3186
8.5.1.4m MBMS PTM Session Start at MCCH Notification in CELL_DCH state / MBMS Multicast Service....3198
8.5.1.5 MBMS PTM Session Start at MCCH Acquisition in CELL_DCH (for a non-MBMS service) when entering into an MBMS cell (UE capable of MBMS p-t-m reception in CELL_DCH) / MBMS Broadcast Service....3198
8.5.1.5m MBMS PTM Session Start at MCCH Acquisition in CELL_DCH (for a non-MBMS service) when entering into an MBMS cell (UE capable of MBMS p-t-m reception in CELL_DCH) / MBMS Multicast Service....3201
8.5.1.6 Void....3202
8.5.1.6m Void....3202
8.5.1.7 Void....3202
8.5.1.7m Void....3202
8.5.1.8 Void....3202
8.5.1.9 MBMS PTM Session Start at MCCH Notification in Idle Mode / MBMS Broadcast Service....3202
8.5.1.9m MBMS PTM Session Start at MCCH Notification in Idle Mode / MBMS Multicast Service....3206
8.5.1.10 Void....3206
8.5.1.11 MBMS PTP Session Start at MCCH Notification in Idle Mode / MBMS Selected Service....3206
8.5.1.11m MBMS PTP Session Start at MCCH Notification in Idle Mode / MBMS Multicast Service ....3210
8.5.1.12 MBMS PTP Session Start at MCCH Notification in URA_PCH / MBMS Selected Service ....3212
8.5.1.12m MBMS PTP Session Start at MCCH Notification in URA_PCH / MBMS Multicast Service ....3216
8.5.1.13 MBMS PTP Session Start at MCCH Notification in CELL_FACH / MBMS Selected Service....3217
8.5.1.13m MBMS PTP Session Start at MCCH Notification in CELL_FACH / MBMS Multicast Service....3221
8.5.1.14 MBMS PTM Session Start at MCCH Acquisition / MBSFN mode (TDD)....3222
8.5.1.15 MBMS PTM Session Start at MCCH Notification / MBSFN mode (TDD)....3226
8.5.2 MBMS Session Reconfiguration ....3231
8.5.2.1 MBMS PTP Session Reconfiguration – Change of Activated Service / MBMS Selected Service...3231
8.5.2.2 MBMS PTM Session Reconfiguration – Transfer Mode Change to PTP / MBMS Selected Service....3236
8.5.2.2m MBMS PTM Session Reconfiguration - Transfer Mode Change to PTP / MBMS Multicast Service....3240
8.5.2.3 MBMS PTP Session Reconfiguration - Transfer mode change to PTM / MBMS Selected Service 3242
8.5.2.3m MBMS PTP Session Reconfiguration - Transfer mode change to PTM / MBMS Multicast Service....3246
8.5.2.4 MBMS PTM Session Reconfiguration – MTCH data rate change / MBMS Broadcast Service....3248
8.5.2.4m MBMS PTM Session Reconfiguration – MTCH data rate change / MBMS Multicast Service ....3252
8.5.2.5 MBMS PTM Session Reconfiguration - MTCH Data Rate Change / MBSFN mode (3.84/7.68 Mcps TDD) ....3253
8.5.3 MBMS Frequency Layer Convergence and Dispersion ....3257
8.5.3.1 MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in Idle mode / MBMS Selected Service....3257

8.5.3.1m MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in Idle mode / MBMS Multicast Service ..... 3263
8.5.3.2 MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in CELL_PCH / MBMS Broadcast Service ..... 3264
8.5.3.2m MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in CELL_PCH / MBMS Multicast Service ..... 3270
8.5.3.3 MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in CELL_FACH / MBMS Broadcast Service ..... 3271
8.5.3.3m MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in CELL_FACH / MBMS Multicast Service ..... 3278
8.5.3.4 MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (Idle Mode) / MBMS Broadcast Service ..... 3279
8.5.3.4m MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (Idle Mode) / MBMS Multicast Service ..... 3282
8.5.3.5 MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (URA_PCH) / MBMS Broadcast Service ..... 3283
8.5.3.5m MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (URA_PCH) / MBMS Multicast Service ..... 3287
8.5.3.6 MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (CELL_FACH) / MBMS Broadcast Service ..... 3287
8.5.3.6m MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (CELL_FACH) / MBMS Multicast Service ..... 3291
8.5.4 MBMS Modification Request ..... 3292
8.5.4.1 Transmission of the MBMS Selected Services Information when entering RRC connected mode and CELL_DCH state / MBMS Selected Service ..... 3292
8.5.4.2 Modification of the MBMS Selected Services list whilst in URA_PCH & Cell_FACH / MBMS Selected Service ..... 3294
8.5.4.3 Testing of the MBMS Selected Services indication from the network whilst in CELL_DCH / MBMS Selected Service ..... 3299
8.5.5 MBMS Counting ..... 3302
8.5.5.1 MBMS Counting in Idle Mode / MBMS Selected Service ..... 3302
8.5.5.1m MBMS Counting in Idle Mode / MBMS Multicast Service ..... 3305
8.5.5.2 MBMS Counting in CELL_FACH / MBMS Selected Service ..... 3307
8.5.5.2m MBMS Counting in CELL_FACH / MBMS Multicast Service ..... 3311
8.5.5.3 MBMS No Counting in CELL_DCH / MBMS Selected Service ..... 3312
8.5.5.3m MBMS No Counting in CELL_DCH / MBMS Multicast Service ..... 3315
8.5.5.4 MBMS Counting in CELL_PCH / MBMS Selected Service ..... 3316
8.5.5.4m MBMS Counting in CELL_PCH / MBMS Multicast Service ..... 3320
8.5.5.5 Void ..... 3322
8.5.5.6 Void ..... 3322
8.5.5.7 RRC Connection establishment for MBMS Counting :Success after T318 Timeout/ MBMS Selected Service ..... 3322
8.5.5.7m RRC Connection establishment for MBMS Counting :Success after T318 Timeout / MBMS Multicast Service ..... 3327
8.5.5.8 RRC Connection establishment for MBMS Counting :Success after MAC Layer Failure Indication/ MBMS Selected Service ..... 3328
8.5.5.8m RRC Connection establishment for MBMS Counting :Success after MAC Layer Failure Indication / MBMS Multicast Service ..... 3333
8.5.6 MBMS Controlling Cell Change ..... 3334
8.5.6.1 MBMS Controlling Cell Change - Idle mode - Frequency Layer Convergence – HCS Not Used / MBMS Selected Service ..... 3334
8.5.6.1m MBMS Controlling Cell Change - Idle mode - Frequency Layer Convergence – HCS Not Used / MBMS Multicast Service ..... 3339
8.5.6.2 MBMS Controlling Cell Change in CELL_FACH during ongoing session / MBMS Broadcast Service ..... 3340
8.5.6.2m MBMS Controlling Cell Change in CELL_FACH during ongoing session / MBMS Multicast Service ..... 3345
8.5.6.3 MBMS Controlling Cell Change in CELL_PCH during ongoing session / MBMS Broadcast Service ..... 3346
8.5.6.3m MBMS Controlling Cell Change in CELL_PCH during ongoing session / MBMS Multicast Service ..... 3353

8.5.6.4 MBMS Controlling Cell Change - Idle mode - Frequency Layer Convergence – With HCS / MBMS Selected Service ....3353
8.5.6.4m MBMS Controlling Cell Change - Idle mode - Frequency Layer Convergence – With HCS / MBMS Multicast Service ....3360
8.5.6.5 MBMS Controlling Cell Change in CELL_DCH during ongoing session / MBMS Broadcast Service ....3361
8.5.6.5m MBMS Controlling Cell Change in CELL_DCH during ongoing session / MBMS Multicast Service ....3366
8.5.7 MBSFN Specific Procedures (3.84/7.68 Mcps TDD) ....3367
8.5.7.1 Cell Update: cell reselection in CELL_PCH (unicast carrier) during ongoing MBMS session in MBSFN mode ....3367
8.5.7.2 Re-acquire MCCH - modified MBSFN inter frequency neighbour list / All MBSFN services notified ....3371
8.5.7.3 Re-acquire MCCH - modified MBSFN inter frequency neighbour list / MBSFN services not notified ....3379
8.5.7.4 MBSFN TDM Information / TDM services de-multiplexing ....3387

9 Elementary procedures of mobility management ....3393
9.1 TMSI reallocation ....3393
9.2 Authentication ....3396
9.2.1 Authentication accepted ....3396
9.2.2 Authentication rejected by the network ....3397
9.2.3 Authentication rejected by the UE (MAC code failure) ....3400
9.2.4 Authentication rejected by the UE (SQN failure) ....3402
9.2.5 Authentication rejected by the UE / fraudulent network ....3404
9.3 Identification ....3407
9.3.1 General Identification ....3407
9.3.2 Handling of IMSI shorter than the maximum length ....3408
9.4 Location updating ....3411
9.4.1 Location updating / accepted ....3411
9.4.2 Location updating / rejected ....3414
9.4.2.1 Location updating / rejected / IMSI invalid ....3414
9.4.2.2 Location updating / rejected / PLMN not allowed ....3417
9.4.2.3 Location updating / rejected / location area not allowed ....3423
9.4.2.4 Location updating / rejected / roaming not allowed in this location area ....3426
9.4.2.5 Location updating / rejected / No Suitable Cells In Location Area ....3435
9.4.3 Location updating / abnormal cases ....3437
9.4.3.1 Void ....3437
9.4.3.2 Location updating / abnormal cases / attempt counter less or equal to 4, LAI different ....3437
9.4.3.3 Location updating / abnormal cases / attempt counter equal to 4 ....3443
9.4.3.4 Location updating / abnormal cases / attempt counter less or equal to 4, stored LAI equal to broadcast LAI ....3453
9.4.3.5 Location updating / abnormal cases / Failure due to non-integrity protection ....3463
9.4.3.6 Location updating /abnormal cases / CS domain is changed from barred to unbarred because of domain specific access control ....3465
9.4.4 Location updating / release / expiry of T3240 ....3466
9.4.5 Location updating / periodic ....3468
9.4.5.1 Location updating / periodic spread ....3468
9.4.5.2 Location updating / periodic normal / test 1 ....3469
9.4.5.3 Location updating / periodic normal / test 2 ....3472
9.4.5.4 Location updating / periodic search for HPLMN or higher priority PLMN when in VPLMN ....3474
9.4.5.4.1 Location updating / periodic search for HPLMN or higher priority PLMN / UE waits time T ....3474
9.4.5.4.2 Location updating / periodic search for HPLMN or higher priority PLMN / UE in manual mode ....3477
9.4.5.4.3 Location updating / periodic search for HPLMN or higher priority PLMN / UE waits at least two minutes and at most T minutes ....3478
9.4.5.4.4 Location updating/periodic search of the higher priority PLMN, VPLMN in a foreign country – higher priority/UE is in automatic mode. ....3480
9.4.5.4.5 Location updating/periodic search of the higher priority PLMN, VPLMN in a foreign country – lower priority/UE is in automatic mode. ....3481
9.4.5.4.6 Location updating/periodic search of the higher priority PLMN, VPLMN in a foreign country – List of EPLMN contain HPLMN /UE is in automatic mode. ....3483

9.4.6 Location updating / interworking of attach and periodic ....3485
9.4.7 Location Updating / accept with replacement or deletion of Equivalent PLMN list ....3487
9.4.8 Location Updating after UE power off ....3490
9.4.9 Location Updating / Accept, Interaction between Equivalent PLMNs and Forbidden PLMNs. ....3492
9.5 MM connection ....3493
9.5.1 Introduction....3493
9.5.2 MM connection / establishment in security mode ....3493
9.5.3 Void ....3495
9.5.4 MM connection / establishment rejected ....3495
9.5.5 MM connection / establishment rejected cause 4 ....3496
9.5.6 MM connection / expiry T3230 ....3497
9.5.7 MM connection / abortion by the network....3499
9.5.7.1 MM connection / abortion by the network / cause #6 ....3499
9.5.7.2 MM connection / abortion by the network / cause not equal to #6 ....3501
9.5.8 MM connection / follow-on request pending....3503
9.5.8.1 MM connection / follow-on request pending / test 1 ....3503
9.5.8.2 MM connection / follow-on request pending / test 2 ....3504
9.5.8.3 MM connection / follow-on request pending / test 3 ....3506
9.5.9 MM connection / abnormal cases / CS domain barred because of domain specific access control....3507
10 Circuit Switched Call Control (CC) ....3510
10.1 Circuit switched Call Control (CC) state machine verification....3510
10.1.1 General on CC state machine verification ....3510
10.1.2 Establishment of an outgoing call....3511
10.1.2.1 Outgoing call / U0 null state ....3513
10.1.2.1.1 Outgoing call / U0 null state / MM connection requested ....3513
10.1.2.2 Outgoing call / U0.1 MM connection pending....3514
10.1.2.2.1 Outgoing call / U0.1 MM connection pending / CM service rejected....3514
10.1.2.2.2 Outgoing call / U0.1 MM connection pending / CM service accepted....3515
10.1.2.2.3 Outgoing call / U0.1 MM connection pending / lower layer failure....3516
10.1.2.3 Outgoing call / U1 call initiated ....3518
10.1.2.3.1 Outgoing call / U1 call initiated / receiving CALL PROCEEDING ....3518
10.1.2.3.2 Outgoing call / U1 call initiated / rejecting with RELEASE COMPLETE ....3519
10.1.2.3.3 Outgoing call / U1 call initiated / T303 expiry....3520
10.1.2.3.4 Outgoing call / U1 call initiated / lower layer failure ....3521
10.1.2.3.5 Outgoing call / U1 call initiated / receiving ALERTING....3522
10.1.2.3.6 Outgoing call / U1 call initiated / entering state U10 ....3523
10.1.2.3.7 Outgoing call / U1 call initiated / unknown message received....3524
10.1.2.4 Outgoing call / U3 Mobile originating call proceeding....3525
10.1.2.4.1 Outgoing call / U3 Mobile originating call proceeding / ALERTING received....3525
10.1.2.4.2 Outgoing call / U3 Mobile originating call proceeding / CONNECT received....3526
10.1.2.4.3 Outgoing call / U3 Mobile originating call proceeding / PROGRESS received without in band information ....3527
10.1.2.4.4 Outgoing call / U3 Mobile originating call proceeding / PROGRESS with in band information ....3529
10.1.2.4.5 Outgoing call / U3 Mobile originating call proceeding / DISCONNECT with in band tones....3530
10.1.2.4.6 Outgoing call / U3 Mobile originating call proceeding / DISCONNECT without in band tones ....3532
10.1.2.4.7 Outgoing call / U3 Mobile originating call proceeding / RELEASE received ....3533
10.1.2.4.8 Outgoing call / U3 Mobile originating call proceeding / termination requested by the user ....3535
10.1.2.4.9 Outgoing call / U3 Mobile originating call proceeding / traffic channel allocation ....3536
10.1.2.4.10 Outgoing call / U3 Mobile originating call proceeding / timer T310 time-out....3537
10.1.2.4.11 Outgoing call / U3 Mobile originating call proceeding / lower layer failure....3538
10.1.2.4.12 Outgoing call / U3 Mobile originating call proceeding / unknown message received ....3540
10.1.2.4.13 Outgoing call / U3 Mobile originating call proceeding / Internal alerting indication....3541
10.1.2.5 Outgoing call / U4 call delivered ....3542
10.1.2.5.1 Outgoing call / U4 call delivered / CONNECT received ....3542
10.1.2.5.2 Outgoing call / U4 call delivered / termination requested by the user....3543
10.1.2.5.3 Outgoing call / U4 call delivered / DISCONNECT with in band tones ....3544
10.1.2.5.4 Outgoing call / U4 call delivered / DISCONNECT without in band tones ....3546
10.1.2.5.5 Outgoing call / U4 call delivered / RELEASE received....3547
10.1.2.5.6 Outgoing call / U4 call delivered / lower layer failure ....3548

10.1.2.5.7 Outgoing call / U4 call delivered / traffic channel allocation ....3549
10.1.2.5.8 Outgoing call / U4 call delivered / unknown message received ....3550
10.1.2.6 U10 active ....3551
10.1.2.6.1 U10 active / termination requested by the user ....3551
10.1.2.6.2 U10 active / RELEASE received ....3552
10.1.2.6.3 U10 active / DISCONNECT with in band tones ....3553
10.1.2.6.4 U10 active / DISCONNECT without in band tones ....3555
10.1.2.6.5 U10 active / RELEASE COMPLETE received ....3556
10.1.2.6.6 U10 active / SETUP received ....3557
10.1.2.7 U11 disconnect request ....3559
10.1.2.7.1 U11 disconnect request / clear collision ....3559
10.1.2.7.2 U11 disconnect request / RELEASE received ....3560
10.1.2.7.3 U11 disconnect request / timer T305 time-out ....3561
10.1.2.7.4 U11 disconnect request / lower layer failure ....3562
10.1.2.7.5 U11 disconnect request / unknown message received ....3563
10.1.2.8 U12 disconnect indication ....3564
10.1.2.8.1 U12 disconnect indication / call releasing requested by the user ....3564
10.1.2.8.2 U12 disconnect indication / RELEASE received ....3565
10.1.2.8.3 U12 disconnect indication / lower layer failure ....3566
10.1.2.8.4 U12 disconnect indication / unknown message received ....3568
10.1.2.9 Outgoing call / U19 release request ....3569
10.1.2.9.1 Outgoing call / U19 release request / timer T308 time-out ....3569
10.1.2.9.2 Outgoing call / U19 release request / 2nd timer T308 time-out ....3570
10.1.2.9.3 Outgoing call / U19 release request / RELEASE received ....3571
10.1.2.9.4 Outgoing call / U19 release request / RELEASE COMPLETE received ....3572
10.1.2.9.5 Outgoing call / U19 release request / lower layer failure ....3573
10.1.3 Establishment of an incoming call / Initial conditions ....3574
10.1.3.1 Incoming call / U0 null state ....3576
10.1.3.1.1 Incoming call / U0 null state / SETUP received with a non supported bearer capability ....3576
10.1.3.2 Incoming call / U6 call present ....3577
10.1.3.2.1 Incoming call / U6 call present / automatic call rejection ....3577
10.1.3.3 Incoming call / U9 mobile terminating call confirmed ....3579
10.1.3.3.1 Incoming call / U9 mobile terminating call confirmed / alerting or immediate connecting ....3579
10.1.3.3.2 Incoming call / U9 mobile terminating call confirmed / DTCH assignment ....3580
10.1.3.3.3 Void ....3581
10.1.3.3.4 Incoming call / U9 mobile terminating call confirmed / DISCONNECT received ....3581
10.1.3.3.5 Incoming call / U9 mobile terminating call confirmed / RELEASE received ....3583
10.1.3.3.6 Incoming call / U9 mobile terminating call confirmed / lower layer failure ....3584
10.1.3.3.7 Incoming call / U9 mobile terminating call confirmed / unknown message received ....3585
10.1.3.4 Incoming call / U7 call received ....3586
10.1.3.4.1 Incoming call / U7 call received / call accepted ....3586
10.1.3.4.2 Incoming call / U7 call received / termination requested by the user ....3587
10.1.3.4.3 Incoming call / U7 call received / DISCONNECT received ....3588
10.1.3.4.4 Incoming call / U7 call received / RELEASE received ....3590
10.1.3.4.5 Incoming call / U7 call received / lower layer failure ....3591
10.1.3.4.6 Incoming call / U7 call received / unknown message received ....3592
10.1.3.4.7 Incoming call / U7 call received / DTCH assignment ....3593
10.1.3.4.8 Incoming call / U7 call received / RELEASE COMPLETE received ....3594
10.1.3.5 Incoming call / U8 connect request ....3596
10.1.3.5.1 Incoming call / U8 connect request / CONNECT acknowledged ....3596
10.1.3.5.2 Incoming call / U8 connect request / timer T313 time-out ....3597
10.1.3.5.3 Incoming call / U8 connect request / termination requested by the user ....3598
10.1.3.5.4 Incoming call / U8 connect request / DISCONNECT received with in-band information ....3599
10.1.3.5.5 Incoming call / U8 connect request / DISCONNECT received without in-band information ....3601
10.1.3.5.6 Incoming call / U8 connect request / RELEASE received ....3602
10.1.3.5.7 Incoming call / U8 connect request / lower layer failure ....3603
10.1.3.5.8 Incoming call / U8 connect request / DTCH assignment ....3604
10.1.3.5.9 Incoming call / U8 connect request / unknown message received ....3605
10.1.4 In call functions ....3606
10.1.4.1 In-call functions / DTMF information transfer ....3606
10.1.4.1.1 In-call functions / DTMF information transfer / basic procedures ....3606
10.1.4.2 In-call functions / user notification ....3608

10.1.4.2.1 In-call functions / User notification / UE terminated....3608
10.1.4.3 In-call functions / channel changes....3609
10.1.4.3.1 In-call functions / channel changes / a successful channel change in active state/ Hard handover....3609
10.1.4.3.2 In-call functions / channel changes / an unsuccessful channel change in active mode/Hard handover....3610
10.1.4.4 In-call functions / UE terminated in-call modification....3611
10.1.4.4.1 In-call functions / UE terminated in-call modification / modify when new mode is not supported....3611
10.1.4.5 In-call functions / UE originated in-call modification....3611
10.1.4.5.1 In-call functions / UE originated in-call modification / a successful case of modifying....3611
10.1.4.5.2 In-call functions / UE originated in-call modification / modify rejected....3611
10.1.4.5.3 In-call functions / UE originated in-call modification / an abnormal case of acceptance....3612
10.1.4.5.4 In-call functions / UE originated in-call modification / an abnormal case of rejection....3612
10.1.4.5.5 In-call functions / UE originated in-call modification / time-out of timer T323....3612
10.1.4.5.6 In-call functions / UE originated in-call modification / a successful channel change in state mobile originating modify....3612
10.1.4.5.7 In-call functions / UE originated in-call modification / an unsuccessful channel change in state mobile originating modify....3612
10.1.4.5.8 In-call functions / UE originated in-call modification / unknown message received....3612
10.1.4.5.9 In-call functions / UE originated in-call modification / a release complete received....3612
10.2 Call Re-establishment....3612
10.2.1 Void....3612
10.3 User to user signalling....3612

11 Session Management Procedures....3614
11.1 PDP context activation....3614
11.1.1 Initiated by the UE....3614
11.1.1.1 Attach initiated by context activation/QoS Offered by Network is the QoS Requested....3614
11.1.1.1a Attach initiated by context activation/QoS Offered by Network is the QoS Requested/Correct handling of QoS extensions for rates above 8640 kbps....3617
11.1.1.2 QoS offered by the network is a lower QoS....3621
11.1.1.2.1 Void....3621
11.1.1.2.2 Void....3621
11.1.2 PDP context activation requested by the network, successful and unsuccessful....3621
11.1.3 Abnormal Cases....3624
11.1.3.1 T3380 Expiry....3624
11.1.3.2 Collision of UE initiated and network requested PDP context activation....3625
11.1.3.3 Network initiated PDP context activation request for an already activated PDP context (on the UE side)....3627
11.1.4 Secondary PDP context activation procedures....3629
11.1.4.1 Successful Secondary PDP Context Activation Procedure Initiated by the UE....3629
11.1.4.1.1 QoS Offered by Network is the QoS Requested....3629
11.1.4.1.2 QoS Offered by Network is a lower QoS....3631
11.1.4.2 Unsuccessful Secondary PDP Context Activation Procedure Initiated by the UE....3632
11.1.4.3 Abnormal cases....3634
11.1.4.3.1 T3380 Expiry....3634
11.2 PDP context modification procedure....3635
11.2.1 Network initiated PDP context modification....3635
11.2.2 UE initiated PDP context modification....3637
11.2.2.1 UE initiated PDP Context Modification accepted by network....3637
11.2.2.2 UE initiated PDP Context Modification not accepted by the network....3639
11.2.3 Abnormal cases....3640
11.2.3.1 T3381 Expiry....3640
11.2.3.2 Collision of UE and network initiated PDP context modification procedures....3642
11.3 PDP context deactivation procedures....3643
11.3.1 PDP context deactivation initiated by the UE....3643
11.3.2 PDP context deactivation initiated by the network....3646
11.3.3 Abnormal cases....3648
11.3.3.1 T3390 Expiry....3648
11.3.3.2 Collision of UE and network initiated PDP context deactivation requests....3650
11.4 Unknown or Unforeseen Transaction Identifier/Non-semantical Mandatory Information Element Errors....3651

11.4.1 Error cases ....3651
11.5 MBMS Context Activation ....3654
11.5.1m MBMS Context Activation requested by the network, Successful and Unsuccessful procedure / MBMS Multicast Service ....3654
11.5.2m Abnormal Cases ....3658
11.5.2.1m T3380 Expiry / MBMS Multicast Service ....3658
11.5.2.2m Network initiated MBMS context activation request for an already activated context (on the UE side) / MBMS Multicast Service ....3659
11.6 MBMS Context deactivation ....3661
11.6.1m MBMS Context deactivation requested by the network, Successful / MBMS Multicast Service ....3661
11.6.2 Void ....3665
11.6.3 Void ....3665
11.7m Network Feature Support IE for MBMS / MBMS Multicast Service ....3665
11.8 MBMS Service Request ....3669
11.8.1m MBMS Service request procedure not accepted by the network / MBMS Multicast Service ....3669
11.8.2 MBMS Service Request procedure collision with Routing Area Update/ MBMS Selected Service ....3671
11.8.2m MBMS Service Request procedure collision with Routing Area Update / MBMS Multicast Service ....3673

12 Elementary procedure for Packet Switched Mobility Management ....3674
12.1 Applicability, default conditions and default messages ....3674
12.2 PS attach procedure ....3675
12.2.1 Normal PS attach ....3675
12.2.1.1 PS attach / accepted ....3675
12.2.1.2 PS attach / rejected / IMSI invalid / illegal UE ....3679
12.2.1.3 PS attach / rejected / IMSI invalid / PS services not allowed ....3682
12.2.1.4 PS attach / rejected / PLMN not allowed ....3685
12.2.1.5a PS attach / rejected / roaming not allowed in this location area ....3690
12.2.1.5b PS attach / rejected / No Suitable Cells In Location Area ....3702
12.2.1.5c PS attach / rejected / Location area not allowed ....3704
12.2.1.5d PS attach / rejected / PS services not allowed in this PLMN ....3707
12.2.1.6 PS attach / abnormal cases / access barred due to access class control ....3710
12.2.1.7 PS attach / abnormal cases / change of routing area ....3714
12.2.1.8 PS attach / abnormal cases / power off ....3716
12.2.1.9 PS attach / abnormal cases / PS detach procedure collision ....3717
12.2.1.10 PS attach / abnormal cases / Failure due to non-integrity protection ....3719
12.2.1.11 PS attach / accepted / follow-on request pending indicator set ....3721
12.2.1.12 PS attach / abnormal cases / access barred due to domain specific access restriction for PS domain ....3724
12.2.2 Combined PS attach ....3726
12.2.2.1 Combined PS attach / PS and non-PS attach accepted ....3726
12.2.2.2 Combined PS attach / PS only attach accepted ....3731
12.2.2.3 Combined PS attach / PS attach while IMSI attach ....3738
12.2.2.4 Combined PS attach / rejected / IMSI invalid / illegal ME ....3740
12.2.2.5 Combined PS attach / rejected / PS services and non-PS services not allowed ....3743
12.2.2.6 Combined PS attach / rejected / PS services not allowed ....3746
12.2.2.7a Combined PS attach / rejected / location area not allowed ....3749
12.2.2.7b Combined PS attach / rejected / No Suitable Cells In Location Area ....3754
12.2.2.7c Combined PS attach / rejected / Roaming not allowed in this location area ....3757
12.2.2.7d Combined PS attach / rejected / PS services not allowed in this PLMN ....3759
12.2.2.8 Combined PS attach / abnormal cases / attempt counter check / miscellaneous reject causes ....3762
12.2.2.9 Combined PS attach / abnormal cases / PS detach procedure collision ....3766
12.3 PS detach procedure ....3768
12.3.1 UE initiated PS detach procedure ....3768
12.3.1.1 PS detach / power off / accepted ....3768
12.3.1.2 PS detach / accepted ....3770
12.3.1.3 PS detach / abnormal cases / attempt counter check / procedure timeout ....3772
12.3.1.4 PS detach / abnormal cases / GMM common procedure collision ....3775
12.3.1.5 PS detach / power off / accepted / PS/IMSI detach ....3778
12.3.1.6 PS detach / accepted / PS/IMSI detach ....3779
12.3.1.7 PS detach / accepted / IMSI detach ....3782
12.3.1.8 PS detach / abnormal cases / change of cell into new routing area ....3784
12.3.1.9 PS detach / abnormal cases / PS detach procedure collision ....3787

12.3.2 Network initiated PS detach procedure....3789
12.3.2.1 PS detach / re-attach not required / accepted....3789
12.3.2.2 PS detach / rejected / IMSI invalid / PS services not allowed....3790
12.3.2.3 PS detach / IMSI detach / accepted....3793
12.3.2.4 PS detach / re-attach requested / accepted....3796
12.3.2.5 PS detach / rejected / location area not allowed....3798
12.3.2.6 PS detach / rejected / No Suitable Cells In Location Area....3803
12.3.2.7 PS detach / rejected / Roaming not allowed in this location area....3806
12.3.2.8 PS detach / rejected / PS services not allowed in this PLMN....3810
12.4 Routing area updating procedure....3815
12.4.1 Normal routing area updating....3815
12.4.1.1a Routing area updating / accepted....3815
12.4.1.1b Routing area updating / accepted / Signalling connection re-establishment....3819
12.4.1.1c Void....3821
12.4.1.1dm Handling of MBMS context status information in ROUTING AREA UPDATE procedure/ MBMS Multicast Service....3821
12.4.1.2 Routing area updating / rejected / IMSI invalid / illegal ME....3825
12.4.1.3 Routing area updating / rejected / UE identity cannot be derived by the network....3828
12.4.1.4a Routing area updating / rejected / location area not allowed....3831
12.4.1.4b Routing area updating / rejected / No Suitable Cells In Location Area....3836
12.4.1.4c Routing area updating / rejected / PS services not allowed in this PLMN....3838
12.4.1.4d Routing area updating / rejected / Roaming not allowed in this location area....3843
12.4.1.5 Routing area updating / abnormal cases / attempt counter check / miscellaneous reject causes....3850
12.4.1.6 Routing area updating / abnormal cases / change of cell into new routing area....3854
12.4.1.7 Void....3856
12.4.1.8 Routing area updating / abnormal cases / P-TMSI reallocation procedure collision....3856
12.4.2 Combined routing area updating....3859
12.4.2.1 Combined routing area updating / combined RA/LA accepted....3859
12.4.2.2 Combined routing area updating / UE in CS operation at change of RA....3862
12.4.2.3 Combined routing area updating / RA only accepted....3865
12.4.2.3a Void....3873
12.4.2.4 Combined routing area updating / rejected / PLMN not allowed....3873
12.4.2.5a Combined routing area updating / rejected / roaming not allowed in this location area....3877
12.4.2.5b Combined routing area updating / rejected / No Suitable Cells In Location Area....3885
12.4.2.5c Combined routing area updating / rejected / Location area not allowed....3889
12.4.2.5d Combined routing area updating / rejected / PS services not allowed in this PLMN....3891
12.4.2.6 Combined routing area updating / abnormal cases / access barred due to access class control....3894
12.4.2.7 Combined routing area updating / abnormal cases / attempt counter check / procedure timeout....3899
12.4.2.8 Combined routing area updating / abnormal cases / change of cell into new routing area....3903
12.4.2.9 Void....3906
12.4.2.10 Combined routing area updating / abnormal cases / PS detach procedure collision....3906
12.4.2.11 Combined routing area updating / abnormal cases / access barred due to domain specific access restriction for CS domain....3909
12.4.2.12 Combined routing area updating / abnormal cases / access barred due to domain specific access restriction for PS domain....3912
12.4.3 Periodic routing area updating....3915
12.4.3.1 Periodic routing area updating / accepted....3915
12.4.3.2 Periodic routing area updating / accepted / T3312 default value....3916
12.4.3.3 Periodic routing area updating / no cell available / network mode I....3918
12.4.3.4 Periodic routing area updating / no cell available....3921
12.5 P-TMSI reallocation....3922
12.6 PS authentication....3925
12.6.1 Test of authentication....3925
12.6.1.1 Authentication accepted....3925
12.6.1.2 Authentication rejected by the network....3928
12.6.1.3 Authentication rejected by the UE....3931
12.6.1.3.1 GMM cause 'MAC failure'....3931
12.6.1.3.2 GMM cause 'Synch failure'....3934
12.6.1.3.3 Authentication rejected by the UE / fraudulent network....3937
12.6.2 Void....3940
12.7 Identification procedure....3940
12.7.1 General Identification....3940

12.8 GMM READY timer handling....3943
12.9 Service Request procedure (UMTS Only)....3946
12.9.1 Service Request Initiated by UE Procedure....3946
12.9.2 Service Request Initiated by Network Procedure....3948
12.9.3 Service Request / rejected / Illegal MS....3950
12.9.4 Service Request / rejected / PS services not allowed....3954
12.9.5 Service Request / rejected / MS identity cannot be derived by the network....3958
12.9.6 Service Request / rejected / PLMN not allowed....3961
12.9.7a Service Request / rejected / No PDP context activated....3964
12.9.7b Service Request / rejected / No Suitable Cells In Location Area....3967
12.9.7c Service Request / rejected / Roaming not allowed in this location area....3970
12.9.8 Service Request / Abnormal cases / Access barred due to access class control....3973
12.9.9 Service Request / Abnormal cases / Routing area update procedure is triggered....3975
12.9.10 Service Request / Abnormal cases / Power off....3979
12.9.11 Service Request / Abnormal cases / Service request procedure collision....3981
12.9.12 Service Request / RAB re-establishment / UE initiated / Single PDP context....3983
12.9.13 Service Request / RAB re-establishment / UE initiated / multiple PDP contexts....3986
12.9.14 Service Request / RAB re-establishment / Network initiated / single PDP context....3988
12.9.15 Service Request / abnormal cases / access barred due to domain specific access restriction for PS domain....3989
12.9.16 MBMS SERVICE REQUEST / counting / MBMS Selected Service....3992
12.9.16m MBMS SERVICE REQUEST / counting / MBMS Multicast Service....3993
12.9.17 MBMS SERVICE REQUEST / point to point RBs / MBMS Selected Service....3994
12.9.17m MBMS SERVICE REQUEST / point to point RBs / MBMS Multicast Service....3996
12.9.18m Handling of MBMS context status information in SERVICE REQUEST and SERVICE ACCEPT messages / MBMS Multicast Service....3997

13 General Tests....4000
13.1 Emergency call / general....4000
13.2 Emergency call....4000
13.2.1 Emergency call / with USIM....4000
13.2.1.1 Emergency call / with USIM / accept case....4000
13.2.2 Emergency call / without USIM....4002
13.2.2.1 Emergency call / without USIM / accept case....4002
13.2.2.2 Emergency call / without USIM / reject case....4004

14 Interoperability Radio Bearer Tests....4007
14.1 General information for interoperability radio bearer tests....4007
14.1.1 Generic radio bearer test procedure for single RB configurations....4007
14.1.1a Generic radio bearer test procedure for standalone AMR RB configurations using SRB#5 for TFC control....4009
14.1.2 Generic test procedure for testing multi-RB combinations and simultaneous signalling....4011
14.1.2a Generic test procedure for testing multi-RB combinations and simultaneous signalling in case of DSCH....4015
14.1.3 General information interoperability radio bearer tests for HS-DSCH....4023
14.1.3.1 HS-DSCH radio bearer test parameters....4023
14.1.3.2 Selecting TFRC test points....4024
14.1.3.2.1 Principle for non-enhanced Layer 2....4024
14.1.3.2.1a Principle for enhanced Layer 2....4025
14.1.3.3 TFRC test points for MAC-d PDU size=336....4026
14.1.3.4 TFRC test points for MAC-d PDU size=656....4035
14.1.3.4b TB test points for enhanced Layer 2....4039
14.1.3.4b.1 TFRC test points for MAC-ehs and QPSK with fixed MAC-d PDU size=336....4040
14.1.3.4b.2 TFRC test points for MAC-ehs and fixed MAC-d PDU size=656 or flexible MAC-d PDU size; or for radio bearer combinations with mix of fixed and flexible MAC-d PDU sizes....4043
14.1.3.5 Generic test procedure for HS-DSCH radio bearer combinations with non-enhanced Layer 2....4052
14.1.3.5a Generic test procedure for HS-DSCH radio bearer combinations with enhanced Layer 2....4055
14.1.3.6 Generic test procedure for HS-DSCH radio bearer combinations with AMR RB configurations using SRB#5 for TFC control....4059
14.1.4 General information interoperability radio bearer tests for E-DCH and HS-DSCH combinations....4063
14.1.4.1 Generic test procedure for HS-DSCH and E-DCH radio bearer combinations....4063

14.1.4.1a Generic test procedure for HS-DSCH and E-DCH radio bearer combinations with downlink enhanced Layer 2 ....4066
14.1.4.2 Generic test procedure for HS-DSCH and E-DCH radio bearer combinations with AMR RB configurations using SRB#5 for TFC control ....4066
14.1.5 Generic test procedure for radio bearers on MTCH....4069
14.1.6 Generic test procedure for MBMS PTP radio bearers for HS-DSCH combinations ....4071
14.2 Combinations on DPCH....4074
14.2.1 Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH ....4074
14.2.2 Stand-alone UL:3.4 DL:3.4 kbps SRBs for DCCH ....4074
14.2.3 Stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH ....4074
14.2.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH..4074
14.2.4a Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....4076
14.2.4b Conversational / speech / UL:(12.2 7.4 5.9 4.75) DL:(12.2 7.4 5.9 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH + DL:0.15 kbps SRB#5 for DCCH ....4079
14.2.5 Conversational / speech / UL:10.2 DL:10.2 kbps / CS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH.4081
14.2.5a Conversational / speech / UL:(10.2, 6.7, 5.9, 4.75) DL:(10.2, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....4082
14.2.6 Conversational / speech / UL:7.95 DL:7.95 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH..4085
14.2.7 Conversational / speech / UL:7.4 DL:7.4 kbps / CS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH.....4086
14.2.7a Conversational / speech / UL:(7.4, 6.7, 5.9, 4.75) DL:(7.4, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....4088
14.2.8 Conversational / speech / UL:6.7 DL:6.7 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.....4090
14.2.9 Conversational / speech / UL:5.9 DL:5.9 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.....4091
14.2.10 Conversational / speech / UL:5.15 DL:5.15 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH..4093
14.2.11 Conversational / speech / UL:4.75 DL:4.75 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH..4094
14.2.12 Conversational / unknown / UL:28.8 DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4096
14.2.13 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....4098
14.2.13.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI ....4098
14.2.13.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI ....4099
14.2.14 Conversational / unknown / UL:32 DL:32 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....4101
14.2.14.1 Conversational / unknown / UL:32 DL:32 kbps / CS RAB / 20 ms TTI ....4101
14.2.14.2 Conversational / unknown / UL:32 DL:32 kbps / CS RAB / 40 ms TTI ....4102
14.2.15 Streaming / unknown / UL:14.4/DL:14.4 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4103
14.2.16 Streaming / unknown / UL:28.8/DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4105
14.2.17 Streaming / unknown / UL:57.6/DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4106
14.2.18 Void ....4109
14.2.19 Void ....4109
14.2.20 Void ....4109
14.2.21 Void ....4109
14.2.22 Void ....4109
14.2.23 Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH .....4109
14.2.23.1 Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC,10 ms TTI)....4109
14.2.23.2 Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 20 ms TTI)....4110
14.2.23.3 Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 10 ms TTI)....4111
14.2.23.4 Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 20 ms TTI)....4111
14.2.23a Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. .....4112
14.2.23a.1 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / CC ....4112
14.2.23a.2 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / TC ....4113
14.2.23b Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....4113
14.2.23c Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....4115
14.2.23d Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH....4117
14.2.24 Void ....4118
14.2.25 Interactive or background / UL:32 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4118
14.2.25.1 Interactive or background / UL:32 DL: 64 kbps / PS RAB / (TC, 10 ms TTI)....4118
14.2.25.2 Interactive or background / UL:32 DL: 64 kbps / PS RAB / (TC, 20 ms TTI)....4120
14.2.25.3 Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 10 ms TTI)....4121
14.2.25.4 Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 20 ms TTI)....4121

14.2.26 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4122
14.2.27 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ...4124
14.2.28 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH .4126
14.2.29 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ..4128
14.2.30 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH 4130
14.2.31 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ..4132
14.2.31.1 Interactive or background / UL:64 DL:256 kbps / PS RAB / 10 ms TTI.....4132
14.2.31.2 Interactive or background / UL:64 DL:256 kbps / PS RAB / 20 ms TTI.....4134
14.2.32 Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ..4136
14.2.32.1 Interactive or background / UL:64 DL:384 kbps / PS RAB / 10 ms TTI.....4136
14.2.32.2 Interactive or background / UL:64 DL:384 kbps / PS RAB / 20 ms TTI.....4138
14.2.33 Interactive or background / UL:128 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH 4141
14.2.33.1 Interactive or background / UL:128 DL:384 kbps / PS RAB / 10 ms TTI.....4141
14.2.33.2 Interactive or background / UL:128 DL:384 kbps / PS RAB / 20 ms TTI.....4143
14.2.34 Interactive or background / UL:384 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH .4146
14.2.34.1 Interactive or background / UL:384 DL:384 kbps / PS RAB / 10 ms TTI.....4146
14.2.34.2 Interactive or background / UL:384 DL:384 kbps / PS RAB / 20 ms TTI.....4148
14.2.35 Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH .4151
14.2.35.1 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 10 ms TTI.....4151
14.2.35.2 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 20 ms TTI.....4154
14.2.36 Void .....4158
14.2.37 Void .....4158
14.2.38 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.....4158
14.2.38.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 20 ms TTI) .....4158
14.2.38.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 10 ms TTI) .....4161
14.2.38.3 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 20 ms TTI) .....4164
14.2.38.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 10 ms TTI) .....4164
14.2.38a Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:0 DL:0 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. .....4164
14.2.38b Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. .....4165
14.2.38c Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.....4168
14.2.38d Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. .....4173
14.2.38e Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:0 DL:0 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. .....4178
14.2.38f Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. .....4181
14.2.38g Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....4186
14.2.38h Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....4193
14.2.38i Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....4201
14.2.38j Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ..4211
14.2.39 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH.....4222
14.2.39.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (TC, 10 ms TTI) .....4222
14.2.39.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (TC, 20 ms TTI) .....4227
14.2.39.3 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 10 ms TTI) .....4233

14.2.39.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 20 ms TTI) ....4233
14.2.40 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH....4233
14.2.41 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....4238
14.2.42 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....4244
14.2.42.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB / 10 ms TTI ....4244
14.2.42.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB / 20 ms TTI ....4250
14.2.43 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....4257
14.2.43.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB / 10 ms TTI ....4257
14.2.43.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB / 20 ms TTI ....4263
14.2.44 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....4271
14.2.44.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB / 10 ms TTI....4271
14.2.44.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB / 20 ms TTI....4280
14.2.45 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming / unknown / UL:57.6 DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4295
14.2.46 Void ....4300
14.2.47 Void ....4300
14.2.48 Void ....4300
14.2.49 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4300
14.2.49.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI....4300
14.2.49.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI ....4303
14.2.49a Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL(12.2 7.95 5.9 4.75) kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH (20ms TTI)....4306
14.2.49a.1 Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL(12.2 7.95 5.9 4.75) kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH (40ms TTI)....4311
14.2.50 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4316
14.2.50.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 20 ms TTI....4316
14.2.50.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 40 ms TTI....4319
14.2.51 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....4321
14.2.51.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:64 DL:64 kbps / PS RAB....4321
14.2.51.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:64 DL:64 kbps / PS RAB....4324
14.2.51a Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or Background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....4328
14.2.51a.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:8 DL:8 kbps / PS RAB....4328
14.2.51a.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:8 DL:8 kbps / PS RAB....4331
14.2.51b Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or Background / UL:16 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....4333

14.2.51b.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:16 DL:64 kbps / PS RAB ....4333
14.2.51b.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:16 DL:64 kbps / PS RAB ....4336
14.2.52 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4340
14.2.52.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:64 DL:128 kbps / PS RAB ....4340
14.2.52.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:64 DL:128 kbps / PS RAB ....4344
14.2.53 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4348
14.2.53.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:128 DL:128 kbps / PS RAB ....4348
14.2.53.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:128 DL:128 kbps / PS RAB ....4352
14.2.54 Void ....4356
14.2.55 Void ....4356
14.2.56 Interactive or background / UL:8 DL:8 kbps / PS RAB + Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....4356
14.2.57 Interactive or background / UL:64 DL:64 kbps / PS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4358
14.2.58 Streaming / unknown / UL:16 DL:64 kbps / PS RAB + Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....4362
14.2.58a Streaming / unknown / UL:16 DL:128 kbps / PS RAB + Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....4365
14.2.59 Void ....4372
14.2.60 Void ....4372
14.2.61 Void ....4372
14.2.62 Conversational / speech / UL:(12.65 8.85 6.6) DL:(12.65 8.85 6.6) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH + DL:0.15 kbps SRB#5 for DCCH. ....4372
14.2.63 Interactive or background / UL:64 DL:768 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4374
14.2.63.1 Interactive or background / UL:64 DL:768 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH/ 10 ms TTI ....4374
14.2.63.2 Interactive or background / UL:64 DL:768 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / 20 ms TTI ....4377
14.3 Combinations on PDSCH and DPCH ....4381
14.3.1 Void ....4381
14.3.2 Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....4381
14.3.2.1 Interactive or background / UL:64 DL:384 kbps / PS RAB / 10 ms TTI ....4381
14.3.2.2 Interactive or background / UL:64 DL:384 kbps / PS RAB / 20 ms TTI ....4383
14.3.3 Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH 4385
14.3.3.1 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 10 ms TTI ....4385
14.3.3.2 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 20 ms TTI ....4388
14.3.4 Void ....4393
14.3.5 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4393
14.3.5.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 10 ms TTI ....4393
14.3.5.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 20 ms TTI ....4398
14.3.6 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4404
14.3.6.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 10 ms TTI ....4404
14.3.6.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 10 ms TTI ....4411
14.4 Combinations on SCCPCH ....4420
14.4.1 Stand-alone signalling RB for PCCH ....4420
14.4.2 Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ....4420
14.4.2.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ....4421

14.4.2.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ....4422
14.4.2.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ....4423
14.4.2a Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ....4425
14.4.2a.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ....4428
14.4.2a.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ....4429
14.4.2a.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH 4431
14.4.3 Interactive/Background 32 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH ....4432
14.4.4 RB for CTCH + SRB for CCCH +SRB for BCCH ....4434
14.4.5 64.8kbps RB for MTCH with 80 ms TTI / MBMS Broadcast Service ....4436
14.4.5m 64.8kbps RB for MTCH with 80 ms TTI / MBMS Multicast Service ....4437
14.4.6 129.6 kbps RB for MTCH with 80 ms TTI / MBMS Broadcast Service ....4438
14.4.6m 129.6 kbps RB for MTCH with 80 ms TTI / MBMS Multicast Service ....4440
14.4.7 259.2 kbps RB for MTCH with 40 ms TTI / MBMS Broadcast Service ....4440
14.4.7m 259.2 kbps RB for MTCH with 40 ms TTI / MBMS Multicast Service ....4442
14.5 Combinations on PRACH ....4443
14.5.1 Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH ....4443
14.5.2 Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH ....4443
14.6 Combinations on DPCH and HS-PDSCH ....4443
14.6.1 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4443
14.6.1a Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4449
14.6.1b Interactive or background / UL:64 DL: [max bit rate depending on UE category] with Fixed RLC and MAC-ehs PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: QPSK and 16QAM ....4452
14.6.1c Interactive or background / UL:64 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: 64QAM ....4456
14.6.1d Interactive or background / UL:64 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: QPSK, 16QAM and MIMO ....4458
14.6.2 Interactive or background / UL:384 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4460
14.6.3 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4463
14.6.3a Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4469
14.6.4 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4473
14.6.4a Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4477
14.6.5 Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4482
14.6.5a Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4486
14.6.6 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4490
14.6.6a Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: QPSK and 16QAM ....4500

14.6.6b Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: 64QAM ..... 4508
14.6.6c Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: QPSK, 16QAM and MIMO ..... 4513
14.6.7 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4519
14.6.8 Conversational / speech / UL:(12.65 8.85 6.6) DL:(12.65 8.85 6.6) kbps / CS RAB + Interactive or Background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH + DL:0.15 kbps SRB#5 for DCCH ..... 4531
14.6.9 Streaming MBMS PTP / unknown / UL:16 DL: [max bit rate depending on UE category] kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / MBMS Selected Service ..... 4537
14.6.9m Streaming MBMS PTP / unknown / UL:16 DL: [max bit rate depending on UE category] kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / MBMS Multicast Service ..... 4539
14.6.10 Streaming MBMS PTP / unknown / UL:16 DL: [max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / MBMS Selected Service ..... 4539
14.6.10m Streaming MBMS PTP / unknown / UL:16 DL: [max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / MBMS Multicast Service ..... 4543
14.7 Combinations on DPCH, HS-PDSCH and E-DPDCH ..... 4543
14.7.1 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH 4544
14.7.1a Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH/ UL 16QAM ..... 4545
14.7.2 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH ..... 4547
14.7.3 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH .. 4548
14.7.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4548
14.7.5 Streaming or interative or background / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH ..... 4552
14.7.6 Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or Interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL: :[max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH ..... 4554
14.7.6a Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or Interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL: :[max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH/ UL 16QAM ..... 4557

14.7.6b Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps with Flexible RLC and MAC-ehs / PS RAB + Streaming or Interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB + UL:[max bit rate depending on UE category and TTI] DL: :[max bit rate depending on UE category] SRBs for DCCH on E-DCH and SRBs with Fixed RLC and MAC-ehs on HS-DSCH / UL: QPSK and DL: QPSK ..... 4560
14.7.7 Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or Interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + Streaming or Interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL: :[max ..... bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH ..... 4563
14.7.8 Conversational / speech / UL:(12.65 8.85 6.6) DL:(12.65 8.85 6.6) kbps / CS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH + DL:0.15 kbps SRB#5 for DCCH ..... 4570
14.7.9 Conversational / speech / UL:(12.2, 7.95, 5.9, 4.75) kbps DL: (12.2, 7.95, 5.9, 4.75) kbps / CS RAB on E-DCH and HS-DSCH + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH ..... 4575
14.7.10 Conversational / speech / UL:(12.65, 8.85, 6.6) kbps DL: (12.65, 8.85, 6.6) kbps / CS RAB on E-DCH and HS-DSCH + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH ..... 4577

15 Supplementary Services ..... 4580

16 Short message service (SMS) ..... 4581
16.1 Short message service point to point on CS mode ..... 4581
16.1.1 SMS mobile terminated ..... 4581
16.1.2 SMS mobile originated ..... 4587
16.1.3 Test of memory full condition and memory available notification: ..... 4590
16.1.4 Test of the status report capabilities and of SMS-COMMAND: ..... 4593
16.1.5 Test of message class 0 to 3 ..... 4596
16.1.5.1 Short message class 0 ..... 4596
16.1.5.2 Test of class 1 short messages ..... 4598
16.1.5.3 Test of class 2 short messages ..... 4600
16.1.5.4 Test of class 3 short messages ..... 4603
16.1.6 Test of short message type 0 (R99 and REL-4 UE) ..... 4603
16.1.6a Test of short message type 0 (≥ REL-5 UE) ..... 4604
16.1.7 Test of the replace mechanism for SM type 1-7 ..... 4607
16.1.8 Test of the reply path scheme ..... 4609
16.1.9 Multiple SMS mobile originated ..... 4612
16.1.9.1 UE in idle mode ..... 4612
16.1.9.2 UE in active mode ..... 4615
16.1.10 Test of capabilities of simultaneously receiving a short message whilst sending a mobile originated short message ..... 4618
16.2 Short message service point to point on PS mode ..... 4619
16.2.1 SMS mobile terminated ..... 4619
16.2.2 SMS mobile originated ..... 4626
16.2.3 Test of memory full condition and memory available notification: ..... 4629
16.2.4 Test of the status report capabilities and of SMS-COMMAND: ..... 4633
16.2.5 Test of message class 0 to 3 ..... 4636
16.2.5.1 Short message class 0 ..... 4636
16.2.5.2 Test of class 1 short messages ..... 4638
16.2.5.3 Test of class 2 short messages ..... 4639
16.2.5.4 Test of class 3 short messages ..... 4642
16.2.6 Test of short message type 0 (R99 and REL-4 UE) ..... 4642
16.2.6a Test of short message type 0 (≥ REL-5 UE) ..... 4644
16.2.7 Test of the replace mechanism for SM type 1-7 ..... 4646
16.2.8 Test of the reply path scheme ..... 4649
16.2.9 Multiple SMS mobile originated ..... 4651

16.2.9.1 UE in idle mode ....4651
16.2.9.2 UE in active mode ....4651
16.2.10 Test of capabilities of simultaneously receiving a short message whilst sending a mobile originated short message ....4651
16.3 Short message service cell broadcast ....4653
16.4 Default message contents: ....4655
16.4.1 Default message contents for SM-CP protocol ....4655
16.4.2 Default message contents for SM-RP protocol ....4656
16.4.3 Default message contents for SM-TP protocol ....4657

17 Specific features ....4658
17.1 Test of autocalling restrictions ....4658
17.1.1 General ....4658
17.1.2 Constraining the access to a single number (TS 22.001 category 3) ....4658
17.1.3 Constraining the access to a single number (TS 22.001 categories 1 and 2) ....4660
17.1.4 Behaviour of the UE when its list of blacklisted numbers is full ....4661
17.2 Location Services ....4662
17.2.1 Default conditions during LCS tests ....4662
17.2.1.1 Default system information ....4662
17.2.1.2 Simulated A-GPS environment ....4662
17.2.1.3 A-GPS assistance data sets ....4662
17.2.1.3.1 Adequate assistance data for UE-based A-GPS ....4663
17.2.1.3.2 Inadequate assistance data for UE-based A-GPS ....4663
17.2.1.3.3 Adequate assistance data for UE-assisted A-GPS ....4663
17.2.1.3.4 Inadequate assistance data for UE-assisted A-GPS ....4664
17.2.1.3.5 Response to assistance data requests from UE ....4664
17.2.2 Assisted GPS Network Induced Tests ....4665
17.2.2.1 LCS Network Induced location request/ UE-Based GPS/ Emergency Call / with USIM ....4665
17.2.2.2 LCS Network Induced location request/ UE-Based GPS/ Emergency Call / without USIM ....4671
17.2.2.3 LCS Network induced location request/ UE-Assisted GPS/ Emergency call/ With USIM ....4676
17.2.2.4 LCS Network induced location request/ UE-Assisted GPS/ Emergency call/ Without USIM ....4681
17.2.3 Assisted GPS Mobile Originated Tests ....4686
17.2.3.1 Void ....4686
17.2.3.2 LCS Mobile originated location request/ UE-Based GPS/ Position estimate request/ Success ....4686
17.2.3.3 LCS Mobile originated location request/ UE-Based or UE-Assisted GPS/ Assistance data request/ Success ....4691
17.2.3.4 LCS Mobile originated location request/ UE-Assisted GPS/ Position Estimate/ Success ....4693
17.2.3.5 Void ....4699
17.2.3.6 LCS Mobile originated location request/ UE-Based GPS/ Transfer to third party/ Success ....4699
17.2.3.7 LCS Mobile originated location request/ UE-Assisted GPS/ Transfer to third party/ Success ....4705
17.2.3.8 LCS Mobile originated location request/ UE-Based or UE-Assisted GPS/ Assistance data request/ Failure ....4710
17.2.3.9 LCS Mobile originated location request/ UE-Based GPS/ Position estimate request/ Failure ....4712
17.2.4 Assisted GPS Mobile Terminated Tests ....4718
17.2.4.1 LCS Mobile terminated location request/ UE-Based GPS ....4718
17.2.4.2 LCS Mobile-terminated location request/UE-Based GPS/ Request for additional assistance data/ Success ....4724
17.2.4.3 LCS Mobile-terminated location request/UE-Based GPS/ Failure – Not Enough Satellites ....4731
17.2.4.4 LCS Mobile terminated location request/ UE-Assisted GPS/ Success ....4738
17.2.4.5 LCS Mobile terminated location request/ UE-Assisted GPS/ Request for additional assistance data/ Success ....4743
17.2.4.6 LCS Mobile terminated location request/ UE-Based GPS/ Privacy Verification/ Location Allowed if No Response ....4748
17.2.4.7 LCS Mobile terminated location request/ UE-Based GPS/ Privacy Verification/ Location Not Allowed if No Response ....4758
17.2.4.8 LCS Mobile terminated location request/ UE-Assisted GPS/ Privacy Verification/ Location Allowed if No Response ....4764
17.2.4.9 LCS Mobile terminated location request/ UE-Assisted GPS/ Privacy Verification/ Location Not Allowed if No Response ....4775
17.2.4.10 LCS Mobile terminated location request/ UE-Based or UE-Assisted GPS/ Configuration Incomplete ....4782

18 Multi-Layer Functional Tests ..... 4786
18.1 Radio Bearer Tests for 1.28 Mcps TDD option ..... 4786
18.1.1 General information for radio bearer tests (1.28 Mcps TDD) ..... 4786
18.1.1.1 Generic radio bearer test procedure for Single RB configuration ..... 4786
18.1.1.2 Generic test procedure for testing multi-RB configuration and simulateneous signalling ..... 4786
18.1.1.3 Generic test procedure radio bearers on MTCH ..... 4786
18.1.1.4 General information interoperability radio bearer tests for E-DCH and HS-DSCH combinations ..... 4786
18.1.2 Combinations on DPCH ..... 4786
18.1.2.1 Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH ..... 4786
18.1.2.2 Stand-alone UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4787
18.1.2.3 Stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH ..... 4787
18.1.2.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4787
18.1.2.4a Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH(TDD) ..... 4788
18.1.2.5 Conversational / speech / UL:10.2 DL:10.2 kbps / CS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ..... 4790
18.1.2.6 Conversational / speech / UL:7.95 DL:7.95 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4792
18.1.2.7 Conversational / speech / UL:7.4 DL:7.4 kbps / CS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4793
18.1.2.8 Conversational / speech / UL:6.7 DL:6.7 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4795
18.1.2.9 Conversational / speech / UL:5.9 DL:5.9 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4796
18.1.2.10 Conversational / speech / UL:5.15 DL:5.15 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH ..... 4798
18.1.2.11 Conversational / speech / UL:4.75 DL:4.75 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH ..... 4799
18.1.2.12 Conversational / unknown / UL:28.8 DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4801
18.1.2.13 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4802
18.1.2.13.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI ..... 4802
18.1.2.13.1a Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI(TDD) ..... 4804
18.1.2.13.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI ..... 4806
18.1.2.14 Conversational / unknown / UL:32 DL:32 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4807
18.1.2.14.1 Conversational / unknown / UL:32 DL:32 kbps / CS RAB / 20 ms TTI ..... 4807
18.1.2.14.2 Conversational / unknown / UL:32 DL:32 kbps / CS RAB / 40 ms TTI ..... 4808
18.1.2.15 Streaming / unknown / UL:14.4/DL:14.4 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4810
18.1.2.16 Streaming / unknown / UL:28.8/DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4811
18.1.2.17 Streaming / unknown / UL:57.6/DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4813
18.1.2.18 Streaming / unknown / UL:0 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4816
18.1.2.19 Streaming / unknown / UL:64 DL:0 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4817
18.1.2.20 Void ..... 4820
18.1.2.21 Void ..... 4820
18.1.2.22 Void ..... 4820
18.1.2.23 Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4820
18.1.2.23.1 Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC,10 ms TTI) ..... 4820
18.1.2.23.2 Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 20 ms TTI) ..... 4821
18.1.2.23.3 Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 10 ms TTI) ..... 4822
18.1.2.23.4 Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 20 ms TTI) ..... 4822
18.1.2.24 Interactive or background / UL:64 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4822
18.1.2.24.1 Interactive or background / UL:64 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / TC ..... 4822
18.1.2.24.2 Interactive or background / UL:64 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / CC ..... 4824
18.1.2.25 Interactive or background / UL:32 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4824
18.1.2.25.1 Interactive or background / UL:32 DL: 64 kbps / PS RAB / (TC, 10 ms TTI) ..... 4824
18.1.2.25.2 Interactive or background / UL:32 DL: 64 kbps / PS RAB / (TC, 20 ms TTI) ..... 4826

18.1.2.25.3 Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 10 ms TTI) ....4828
18.1.2.25.4 Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 20 ms TTI) ....4828
18.1.2.26 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4828
18.1.2.27 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4830
18.1.2.28 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4832
18.1.2.29 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....4834
18.1.2.30 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....4836
18.1.2.31 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....4838
18.1.2.31.1 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH/ 10 ms TTI ....4838
18.1.2.31.2 Interactive or background / UL:64 DL:256 kbps / PS RAB / 20 ms TTI ....4840
18.1.2.32 Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....4842
18.1.2.32.1 Interactive or background / UL:64 DL:384 kbps / PS RAB / 10 ms TTI ....4842
18.1.2.32.2 Interactive or background / UL:64 DL:384 kbps / PS RAB / 20 ms TTI ....4844
18.1.2.33 Interactive or background / UL:128 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....4847
18.1.2.33.1 Interactive or background / UL:128 DL:384 kbps / PS RAB / 10 ms TTI ....4847
18.1.2.33.2 Interactive or background / UL:128 DL:384 kbps / PS RAB / 20 ms TTI ....4849
18.1.2.34 Interactive or background / UL:384 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4851
18.1.2.34.1 Interactive or background / UL:384 DL:384 kbps / PS RAB / 10 ms TTI ....4851
18.1.2.34.2 Interactive or background / UL:384 DL:384 kbps / PS RAB / 20 ms TTI ....4853
18.1.2.35 Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4856
18.1.2.35.1 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 10 ms TTI ....4856
18.1.2.35.2 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 20 ms TTI ....4859
18.1.2.36 Interactive or background / UL:128 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4862
18.1.2.36.1 Interactive or background / UL:128 DL:2048 kbps / PS RAB / 10 ms TTI ....4862
18.1.2.36.2 Interactive or background / UL:128 DL:2048 kbps / PS RAB / 20 ms TTI ....4865
18.1.2.37 Interactive or background / UL:384 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4868
18.1.2.37.1 Interactive or background / UL:384 DL:2048 kbps / PS RAB / 10 ms TTI ....4868
18.1.2.37.2 Interactive or background / UL:384 DL:2048 kbps / PS RAB / 20 ms TTI ....4871
18.1.2.38 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....4875
18.1.2.38.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 20 ms TTI) ....4875
18.1.2.38.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 10 ms TTI) ....4878
18.1.2.38.3 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 20 ms TTI) ....4880
18.1.2.38.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 10 ms TTI) ....4880
18.1.2.39 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH ....4880
18.1.2.39.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (TC, 10 ms TTI) ....4880
18.1.2.39.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (TC, 20 ms TTI) ....4885
18.1.2.39.3 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 10 ms TTI) ....4890
18.1.2.39.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 20 ms TTI) ....4890

18.1.2.40 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH ..... 4890
18.1.2.41 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4895
18.1.2.42 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4899
18.1.2.42.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB / 10 ms TTI ..... 4899
18.1.2.42.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB / 20 ms TTI ..... 4904
18.1.2.43 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4910
18.1.2.43.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB / 10 ms TTI ..... 4910
18.1.2.43.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB / 20 ms TTI ..... 4916
18.1.2.44 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4923
18.1.2.44.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB / 10 ms TTI ..... 4923
18.1.2.44.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB / 20 ms TTI ..... 4931
18.1.2.45 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming / unknown / UL:57.6 DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4944
18.1.2.46 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming / unknown / UL:0 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4949
18.1.2.47 Void ..... 4953
18.1.2.48 Void ..... 4953
18.1.2.49 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4953
18.1.2.49.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI ..... 4953
18.1.2.49.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI ..... 4956
18.1.2.50 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4958
18.1.2.50.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 20 ms TTI ..... 4958
18.1.2.50.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 40 ms TTI ..... 4960
18.1.2.51 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4963
18.1.2.51.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:64 DL:64 kbps / PS RAB ..... 4963
18.1.2.51.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:64 DL:64 kbps / PS RAB ..... 4966
18.1.2.52 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4969
18.1.2.52.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:64 DL:128 kbps / PS RAB ..... 4969
18.1.2.52.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:64 DL:128 kbps / PS RAB ..... 4973
18.1.2.53 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4977
18.1.2.53.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:128 DL:128 kbps / PS RAB ..... 4977
18.1.2.53.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:128 DL:128 kbps / PS RAB ..... 4980
18.1.2.54 Interactive or background / UL:64 DL:128 kbps / PS RAB + Streaming / unknown / UL:0 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 4984
18.1.3 Combinations on SCCPCH ..... 4990
18.1.3.1 Stand-alone signalling RB for PCCH ..... 4990

18.1.3.2 Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH 4990
18.1.3.2.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ....4990
18.1.3.2.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ....4991
18.1.3.2.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ....4993
18.1.3.3 Interactive/Background 32 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH ....4994
18.1.3.4 64.8kbps RB for MTCH with 40 ms TTI ....4995
18.1.3.5 129.6 kbps RB for MTCH with 40 ms TTI ....4997
18.1.3.6 259.2 kbps RB for MTCH with 40 ms TTI ....4998
18.1.4 Combinations on PRACH ....5000
18.1.4.1 Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH ....5000
18.1.5 Combinations on DPCH and HS-PDSCH ....5000
18.1.5.1 Interactive or background / UL:8 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5) ....5000
18.1.5.1.2 Test purpose ....5003
18.1.5.1.3 Method of test ....5003
18.1.5.1.4 Test requirements ....5004
18.1.5.1a Interactive or background / UL:8 (multiframe) DL: [max bit rate depending on UE category] / PS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH (multiframe) (REL-5) ....5005
18.1.5.2 Interactive or background / UL:16 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5) ....5007
18.1.5.2a Interactive or background / UL:16(multiframe) DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH(multiframe) (REL-5) ....5009
18.1.5.3 Interactive or background / UL:32 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5) ....5011
18.1.5.3a Interactive or background / UL:32(multiframe) DL: [max bit rate depending on UE category] / PS RAB +UL:3.4 DL:3.4 kbps SRBs for DCCH(multiframe) (REL-5) ....5013
18.1.5.4 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5) ....5015
18.1.5.5 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5) ....5018
18.1.5.6 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5) ....5021
18.1.5.7 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5) ....5025
18.1.5.8 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5029
18.1.6.1 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH 5033
18.1.6.1a Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH/ UL 16QAM ....5034
18.1.6.2 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH ....5036
18.1.6.3 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH ..5036
18.1.6.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5037
18.1.6.5 Streaming or interative or background / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH ....5040
18.2 Radio Bearer Tests for 3.84 Mcps TDD option ....5042

18.2.1 General information for radio bearer tests (3.84 Mcps TDD) ..... 5042
18.2.1.1 Generic radio bearer test procedure for Single RB configuration ..... 5042
18.2.1.2 Generic test procedure for testing multi-RB configuration and simultaneous signalling ..... 5042
18.2.1.2a Generic test procedure for testing multi-RB combinations and simultaneous signalling in case of DSCH ..... 5042
18.2.1.3 Generic test procedure for testing Single Speech Radio Bearers on USCH/DSCH channels and multiple radio configuration signalling on RACH/FACH ..... 5049
18.2.1.4 General information interoperability radio bearer tests for HS-DSCH ..... 5053
18.2.1.4.1 HS-DSCH radio bearer test parameters ..... 5053
18.2.1.4.2 Selecting TFRC test points ..... 5053
18.2.1.4.3 TFRC test points for MAC-d PDU size=336 ..... 5055
18.2.1.4.4 TFRC test points for MAC-d PDU size=656 ..... 5095
18.2.1.5 Generic test procedure for radio bearers on MTCH ..... 5117
18.2.1.6 Generic test procedure for radio bearers on MBSFN MTCH ..... 5117
18.2.1.7 General information for interoperability radio bearer tests for E-DCH and HS-DSCH combinations ..... 5119
18.2.1.7.1 Generic test procedure for HS-DSCH and E-DCH radio bearer combinations ..... 5119
18.2.2 Combinations on DPCH ..... 5122
18.2.2.1 Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH ..... 5122
18.2.2.1a Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH (multiframe) ..... 5122
18.2.2.2 Stand-alone UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5122
18.2.2.3 Stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH ..... 5123
18.2.2.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5123
18.2.2.4a Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ..... 5124
18.2.2.5 Conversational / speech / UL:10.2 DL:10.2 kbps / CS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ..... 5127
18.2.2.5a Conversational / speech / UL:(10.2, 6.7, 5.9, 4.75) DL:(10.2, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ..... 5128
18.2.2.6 Conversational / speech / UL:7.95 DL:7.95 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5131
18.2.2.7 Conversational / speech / UL:7.4 DL:7.4 kbps / CS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5132
18.2.2.7a Conversational / speech / UL:(7.4, 6.7, 5.9, 4.75) DL:(7.4, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ..... 5134
18.2.2.8 Conversational / speech / UL:6.7 DL:6.7 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5136
18.2.2.9 Conversational / speech / UL:5.9 DL:5.9 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5137
18.2.2.10 Conversational / speech / UL:5.15 DL:5.15 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH ..... 5139
18.2.2.11 Conversational / speech / UL:4.75 DL:4.75 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH ..... 5140
18.2.2.12 Conversational / unknown / UL:28.8 DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5142
18.2.2.13 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5143
18.2.2.14 Conversational / unknown / UL:32 DL:32 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5145
18.2.2.15 Streaming / unknown / UL:14.4/DL:14.4 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5146
18.2.2.16 Streaming / unknown / UL:28.8/DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5147
18.2.2.17 Streaming / unknown / UL:57.6/DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5148
18.2.2.18 Void ..... 5151
18.2.2.19 Void ..... 5151
18.2.2.20 Void ..... 5151
18.2.2.21 Void ..... 5151
18.2.2.22 Void ..... 5151
18.2.2.23 Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5151
18.2.2.23.1 Interactive or background / UL:32 DL:8 kbps / PS RAB / (Payload size 320) ..... 5151
18.2.2.23.2 Interactive or background / UL:32 DL:8 kbps / PS RAB / Payload size 128 ..... 5152
18.2.2.23a Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ..... 5154

18.2.2.23a.1 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 40 ms TTI ..... 5154
18.2.2.23a.2 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 80 ms TTI ..... 5155
18.2.2.23b Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ..... 5155
18.2.2.23b.1 Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320. ..... 5155
18.2.2.23b.2 Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128. ..... 5157
18.2.2.23c Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ..... 5158
18.2.2.23c.1 Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320. ..... 5158
18.2.2.23c.2 Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128. ..... 5160
18.2.2.23d Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH. ..... 5163
18.2.2.23d.1 Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320. ..... 5163
18.2.2.23d.2 Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128. ..... 5164
18.2.2.24 Void ..... 5166
18.2.2.25 Interactive or background / UL:32 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5166
18.2.2.25.1 Interactive or background / UL:32 DL: 64 kbps / PS RAB / Payload size 320 ..... 5166
18.2.2.25.2 Interactive or background / UL:32 DL: 64 kbps / PS RAB / Payload 128 ..... 5167
18.2.2.26 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5169
18.2.2.26.1 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1 ..... 5169
18.2.2.26.2 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2 ..... 5172
18.2.2.27 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5174
18.2.2.27.1 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1 ..... 5174
18.2.2.27.2 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2 ..... 5176
18.2.2.28 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5179
18.2.2.28.1 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1 ..... 5179
18.2.2.28.2 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2 ..... 5181
18.2.2.29 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ..... 5183
18.2.2.29.1 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 320 ..... 5183
18.2.2.29.2 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2 ..... 5186
18.2.2.30 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ..... 5188
18.2.2.30.1 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 320, TTI 20 ms ..... 5188
18.2.2.30.2 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 128, TTI 40 ms ..... 5190
18.2.2.31 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ..... 5193
18.2.2.31.1 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH/ Payload 320, 10 ms TTI Down Link, Physical Configuration 1 ..... 5193

18.2.2.31.2 Interactive or background / UL:64 DL:256 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2 ..... 5195
18.2.2.32 Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ..... 5198
18.2.2.32.1 Interactive or background / UL:64 DL:384 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1 ..... 5198
18.2.2.32.2 Interactive or background / UL:64 DL:384 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2 ..... 5200
18.2.2.33 Interactive or background / UL:128 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ..... 5204
18.2.2.33.1 Interactive or background / UL:128 DL:384 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1 ..... 5204
18.2.2.33.2 Interactive or background / UL:128 DL:384 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2 ..... 5206
18.2.2.34 Interactive or background / UL:384 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5210
18.2.2.34.1 Interactive or background / UL:384 DL:384 kbps / PS RAB / 10 ms TTI, Physical Configuration 1 ..... 5210
18.2.2.34.2 Interactive or background / UL:384 DL:384 kbps / PS RAB / 20 ms TTI, Physical Configuration 2 ..... 5212
18.2.2.35 Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ..... 5216
18.2.2.35.1 Interactive or background / UL:64 DL:2048 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1 ..... 5216
18.2.2.35.2 Interactive or background / UL:64 DL:2048 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2 ..... 5219
18.2.2.36 Void ..... 5223
18.2.2.37 Void ..... 5223
18.2.3 Combinations on PDSCH, SCCPCH, PUSCH and PRACH ..... 5224
18.2.3.1 Interactive or background / UL: 64 DL: 256 kbps / PS RAB + UL: 3.4/16.8 DL: 3.4/33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5224
18.2.3.1.1 Interactive or background / UL: 64(payload 320) DL: 256 kbps (10 ms TTI) / PS RAB + UL: 3.4/16.8 DL: 3.4/33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5224
18.2.3.1.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5228
18.2.3.1.3 Interactive or background / UL: 64(337 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5231
18.2.3.1.4 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH 64 kbps + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5235
18.2.3.2 Interactive or background / UL: 64 DL: 384 kbps / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5238
18.2.3.2.1 Interactive or background / UL: 64(337 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5238
18.2.3.2.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 384 kbps / PS RAB/10 ms TTI/145 bits TBS (337 bit TBS – 10 ms TTI) + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5241
18.2.3.2.3 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5244
18.2.3.2.4 Interactive or background / UL: 64 (145 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 20 ms TTI) / PS RAB+ UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5248
18.2.3.3 Interactive or background / UL: 64 DL: 2048 kbps/ PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5251
18.2.3.3.1 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ..... 5251

18.2.3.3.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5256
18.2.3.3.3 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB+ UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5260
18.2.3.3.4 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5267
18.2.3.4 Interactive or background / UL: 384 DL: 2048 kbps / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5272
18.2.3.4.1 Interactive or background / UL: 384 DL (337 bit TBS – 20 ms TTI): 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB+ UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5272
18.2.3.4.2 Interactive or background / UL: 384(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5276
18.2.3.4.3 Interactive or background / UL: 384 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5280
18.2.3.4.4 Interactive or background / UL: 384(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5285
18.2.4 Combinations on PDSCH, SCCPCH, DPCH, PUSCH and PRACH....5290
18.2.4.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 256 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5290
18.2.4.1.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 kbps (320 bit payload – 20 ms TTI) DL: 256 kbps (320 bit payload – 10 ms TTI) / PS RAB/ + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5290
18.2.4.1.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 256 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH....5295
18.2.4.1.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 256 kbps (320 bit payload – 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH....5299
18.2.4.1.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 256 kbps (320 bit payload – 20 ms TTI)/ PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH....5305
18.2.4.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 384 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH+ DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5310
18.2.4.2.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (320 bit payload – 20 ms TTI) DL: 384 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH....5310
18.2.4.2.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (128 bit payload - 20 ms TTI) DL: 384 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH....5314
18.2.4.2.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 384 kbps (320 bit payload – 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH....5319
18.2.4.2.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 384 kbps (320 bit payload – 20 ms TTI)/ PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH....5324

18.2.4.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 2048 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5329
18.2.4.3.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 2048 kbps (640 bit payload - 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5329
18.2.4.3.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (128 bit payload - 20 ms TTI) DL: 2048 kbps (640 bit payload - 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5336
18.2.4.3.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 2048 kbps (640 bit payload - 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5342
18.2.4.3.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 2048 kbps (640 bit payload - 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5351
18.2.4 Void ..... 5359
18.2.5 Combinations on SCCPCH ..... 5359
18.2.5.1 Stand-alone signalling RB for PCCH ..... 5359
18.2.5.1.1 Stand-alone signalling RB for PCCH at 12 kbps ..... 5359
18.2.5.1.2 Stand-alone signalling RB for PCCH at 8 kbps ..... 5360
18.2.5.2 Interactive/Background PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5361
18.2.5.2.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5361
18.2.5.2.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5362
18.2.5.2.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5364
18.2.5.2a Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5365
18.2.5.2a.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5369
18.2.5.2a.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5370
18.2.5.2a.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5372
18.2.5.2b SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5374
18.2.5.3 Interactive/Background RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH ..... 5375
18.2.5.3.1 Interactive/Background 32 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH ..... 5375
18.2.5.3.2 Interactive/Background 16 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH ..... 5376
18.2.5.3a SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH ..... 5378
18.2.5.3a.1 SRBs for PCCH at 12 kbps + SRB for CCCH + SRB for DCCH + SRB for BCCH at 32 kbps. 5378
18.2.5.3a.2 SRBs for PCCH at 8 kbps kbps + SRB for CCCH + SRB for DCCH + SRB for BCCH at 16 kbps ..... 5379
18.2.5.4 RB for CTCH + SRB for CCCH +SRB for BCCH. ..... 5380
18.2.5.5 64.8kbps RB for MTCH with 80 ms TTI ..... 5382
18.2.5.5.1 Conformance Requirement ..... 5382
18.2.5.6 129.6 kbps RB for MTCH with 80 ms TTI ..... 5383
18.2.5.7 259.2 kbps RB for MTCH with 40 ms TTI ..... 5385
18.2.5.8 124.4kbps RB for MBSFN MTCH with 80 ms TTI ..... 5387
18.2.5.9 320.4kbps RB for MBSFN MTCH with 80 ms TTI ..... 5388
18.2.5.10 497.6kbps RB for MBSFN MTCH with 80 ms TTI ..... 5389
18.2.6 Combinations on PRACH ..... 5390
18.2.6.1 SRB for CCCH + SRB for DCCH ..... 5390
18.2.6.2 Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH ..... 5390

18.2.6.3 Interactive/Background 12.8 kbps PS RAB + Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH....5390
18.2.7 Combinations on DPCH and HS-PDSCH....5391
18.2.7.1 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5391
18.2.7.1.1 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size....5391
18.2.7.1.2 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size....5396
18.2.7.2 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5399
18.2.7.2.1 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size....5399
18.2.7.2.2 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size....5402
18.2.7.3 Interactive or background / UL:384 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5405
18.2.7.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5408
18.2.7.5 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5412
18.2.7.5.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB, UL 336bit block size....5412
18.2.7.5.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB, UL 144bit block size....5416
18.2.7.6 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5420
18.2.7.7 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5424
18.2.7.7.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 336bit block size....5424
18.2.7.7.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 144bit block size....5428
18.2.7.8 Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5432
18.2.7.9 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5436
18.2.7.9.1 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 340bit block size....5436
18.2.7.9.1 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 148bit block size....5440
18.2.7.10 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5443
18.2.7.10.1 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size....5443
18.2.7.10.2 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size....5449
18.2.8 Combinations on DPCH, HS-DSCH and E-PUCH....5455
18.2.8.1 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH....5455
18.2.8.3 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH....5456

18.2.8.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5457
18.2.8.5 Streaming or interactive or background / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH....5460
18.3 Radio Bearer Tests for 7.68 Mcps TDD option....5462
18.3.1 General information for radio bearer tests (7.68 Mcps TDD)....5462
18.3.1.1 Generic radio bearer test procedure for Single RB configuration....5462
18.3.1.2 Generic test procedure for testing multi-RB configuration and simultaneous signalling....5462
18.3.1.2a Generic test procedure for testing multi-RB combinations and simultaneous signalling in case of DSCH....5462
18.3.1.3 Generic test procedure for testing Single Speech Radio Bearers on USCH/DSCH channels and multiple radio configuration signalling on RACH/FACH....5469
18.3.1.4 General information interoperability radio bearer tests for HS-DSCH....5473
18.3.1.4.1 HS-DSCH radio bearer test parameters....5473
18.3.1.4.2 Selecting TFRC test points....5473
18.3.1.4.3 TFRC test points for MAC-d PDU size=336....5474
18.3.1.4.4 TFRC test points for MAC-d PDU size=656....5556
18.3.1.5 Generic test procedure radio bearers on MTCH....5601
18.3.1.6 Generic test procedure for radio bearers on MBSFN MTCH....5601
18.3.1.7 General information for interoperability radio bearer tests for E-DCH and HS-DSCH combinations....5604
18.3.1.7.1 Generic test procedure for HS-DSCH and E-DCH radio bearer combinations....5604
18.3.2 Combinations on DPCH....5607
18.3.2.1 Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH....5607
18.3.2.1a Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH (multiframe)....5607
18.3.2.2 Stand-alone UL:3.4 DL:3.4 kbps SRBs for DCCH....5607
18.3.2.3 Stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH....5608
18.3.2.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5608
18.3.2.4a Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5609
18.3.2.5 Conversational / speech / UL:10.2 DL:10.2 kbps / CS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH....5612
18.3.2.5a Conversational / speech / UL:(10.2, 6.7, 5.9, 4.75) DL:(10.2, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5613
18.3.2.6 Conversational / speech / UL:7.95 DL:7.95 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5616
18.3.2.7 Conversational / speech / UL:7.4 DL:7.4 kbps / CS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH....5617
18.3.2.7a Conversational / speech / UL:(7.4, 6.7, 5.9, 4.75) DL:(7.4, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5619
18.3.2.8 Conversational / speech / UL:6.7 DL:6.7 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5621
18.3.2.9 Conversational / speech / UL:5.9 DL:5.9 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5622
18.3.2.10 Conversational / speech / UL:5.15 DL:5.15 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH....5624
18.3.2.11 Conversational / speech / UL:4.75 DL:4.75 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH....5625
18.3.2.12 Conversational / unknown / UL:28.8 DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5627
18.3.2.13 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5628
18.3.2.14 Conversational / unknown / UL:32 DL:32 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5630
18.3.2.15 Streaming / unknown / UL:14.4/DL:14.4 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5631
18.3.2.16 Streaming / unknown / UL:28.8/DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5633
18.3.2.17 Streaming / unknown / UL:57.6/DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5634

18.3.2.18 Void....5637
18.3.2.19 Void....5637
18.3.2.20 Void....5637
18.3.2.21 Void....5637
18.3.2.22 Void....5637
18.3.2.23 Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH .5637
18.3.2.23.1 Interactive or background / UL:32 DL:8 kbps / PS RAB / (Payload size 320) ....5637
18.3.2.23.2 Interactive or background / UL:32 DL:8 kbps / PS RAB / Payload size 128....5638
18.3.2.23a Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ..5640
18.3.2.23a.1 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 40 ms TTI....5640
18.3.2.23a.2 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 80 ms TTI....5641
18.3.2.23b Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....5641
18.3.2.23b.1 Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320.....5641
18.3.2.23b.2 Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128.....5643
18.3.2.23c Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH. ....5644
18.3.2.23c.1 Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320.....5644
18.3.2.23c.2 Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128.....5646
18.3.2.23d Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH.....5649
18.3.2.23d.1 Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320. ....5649
18.3.2.23d.2 Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128. ....5650
18.3.2.24 Void....5652
18.3.2.25 Interactive or background / UL:32 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5652
18.3.2.25.1 Interactive or background / UL:32 DL: 64 kbps / PS RAB / Payload size 320....5652
18.3.2.25.2 Interactive or background / UL:32 DL: 64 kbps / PS RAB / Payload 128....5654
18.3.2.26 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5656
18.3.2.26.1 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1 ....5656
18.3.2.26.2 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2 ....5658
18.3.2.27 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5661
18.3.2.27.1 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1 ....5661
18.3.2.27.2 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2 ....5663
18.3.2.28 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5666
18.3.2.28.1 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1 ....5666
18.3.2.28.2 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2 ....5668
18.3.2.29 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....5671
18.3.2.29.1 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 320....5671
18.3.2.29.2 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2 ....5673
18.3.2.30 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....5676

18.3.2.30.1 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 320, TTI 20 ms ....5676
18.3.2.30.2 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 128, TTI 40 ms ....5678
18.3.2.31 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....5680
18.3.2.31.1 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH/ Payload 320, 10 ms TTI Down Link, Physical Configuration 1 ....5680
18.3.2.31.2 Interactive or background / UL:64 DL:256 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2 ....5682
18.3.2.32 Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....5685
18.3.2.32.1 Interactive or background / UL:64 DL:384 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1 ....5685
18.3.2.32.2 Interactive or background / UL:64 DL:384 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2 ....5688
18.3.2.33 Interactive or background / UL:128 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH ....5691
18.3.2.33.1 Interactive or background / UL:128 DL:384 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1 ....5691
18.3.2.33.2 Interactive or background / UL:128 DL:384 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2 ....5693
18.3.2.34 Interactive or background / UL:384 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5697
18.3.2.34.1 Interactive or background / UL:384 DL:384 kbps / PS RAB / 10 ms TTI, Physical Configuration 1 ....5697
18.3.2.34.2 Interactive or background / UL:384 DL:384 kbps / PS RAB / 20 ms TTI, Physical Configuration 2 ....5700
18.3.2.35 Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5703
18.3.2.35.1 Interactive or background / UL:64 DL:2048 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1 ....5703
18.3.2.35.2 Interactive or background / UL:64 DL:2048 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2 ....5706
18.3.2.36 Void ....5710
18.3.2.37 Void ....5710
18.3.3 Combinations on PDSCH, SCCPCH, PUSCH and PRACH ....5711
18.3.3.1 Interactive or background / UL: 64 DL: 256 kbps / PS RAB + UL: 3.4/16.8 DL: 3.4/33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5711
18.3.3.1.1 Interactive or background / UL: 64(payload 320) DL: 256 kbps (10 ms TTI) / PS RAB + UL: 3.4/16.8 DL: 3.4/33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5711
18.3.3.1.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5716
18.3.3.1.3 Interactive or background / UL: 64(337 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5719
18.3.3.1.4 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH 64 kbps + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5722
18.3.3.2 Interactive or background / UL: 64 DL: 384 kbps / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5725
18.3.3.2.1 Interactive or background / UL: 64(337 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5725
18.3.3.2.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 384 kbps / PS RAB/10 ms TTI/145 bits TBS (337 bit TBS – 10 ms TTI) + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5728
18.3.3.2.3 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5731

18.3.3.2.4 Interactive or background / UL: 64 (145 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 20 ms TTI) / PS RAB+ UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5735
18.3.3.3 Interactive or background / UL: 64 DL: 2048 kbps/ PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5740
18.3.3.3.1 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5740
18.3.3.3.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5746
18.3.3.3.3 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB+ UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5750
18.3.3.3.4 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5756
18.3.3.4 Interactive or background / UL: 384 DL: 2048 kbps / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5761
18.3.3.4.1 Interactive or background / UL: 384 DL (337 bit TBS – 20 ms TTI): 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB+ UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5761
18.3.3.4.2 Interactive or background / UL: 384(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5765
18.3.3.4.3 Interactive or background / UL: 384 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5769
18.3.3.4.4 Interactive or background / UL: 384(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH ....5774
18.3.4 Combinations on PDSCH, SCCPCH, DPCH, PUSCH and PRACH ....5779
18.3.4.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 256 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5779
18.3.4.1.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 kbps (320 bit payload – 20 ms TTI) DL: 256 kbps (320 bit payload – 10 ms TTI) / PS RAB/ + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5779
18.3.4.1.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 256 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5784
18.3.4.1.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 256 kbps (320 bit payload – 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5788
18.3.4.1.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 256 kbps (320 bit payload – 20 ms TTI)/ PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5794
18.3.4.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 384 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH+ DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5799
18.3.4.2.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (320 bit payload – 20 ms TTI) DL: 384 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5799
18.3.4.2.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (128 bit payload - 20 ms TTI) DL: 384 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ....5803

18.3.4.2.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 384 kbps (320 bit payload – 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5808
18.3.4.2.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 384 kbps (320 bit payload – 20 ms TTI)/ PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5813
18.3.4.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 2048 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5818
18.3.4.3.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 2048 kbps (640 bit payload - 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5818
18.3.4.3.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (128 bit payload - 20 ms TTI) DL: 2048 kbps (640 bit payload - 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5825
18.3.4.3.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 2048 kbps (640 bit payload - 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5831
18.3.4.3.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 2048 kbps (640 bit payload - 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH ..... 5840
18.3.4 Void ..... 5848
18.3.5 Combinations on SCCPCH ..... 5848
18.3.5.1 Stand-alone signalling RB for PCCH ..... 5848
18.3.5.1.1 Stand-alone signalling RB for PCCH at 12 kbps ..... 5848
18.3.5.1.2 Stand-alone signalling RB for PCCH at 8 kbps ..... 5849
18.3.5.2 Interactive/Background PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5850
18.3.5.2.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5850
18.3.5.2.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5852
18.3.5.2.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5853
18.3.5.2a Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5854
18.3.5.2a.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5858
18.3.5.2a.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5859
18.3.5.2a.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5861
18.3.5.2b SRBs for CCCH + SRB for DCCH + SRB for BCCH ..... 5863
18.3.5.3 Interactive/Background RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH ..... 5864
18.3.5.3.1 Interactive/Background 32 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH ..... 5864
18.3.5.3.2 Interactive/Background 16 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH ..... 5866
18.3.5.3a SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH ..... 5867
18.3.5.3a.1 SRBs for PCCH at 12 kbps + SRB for CCCH + SRB for DCCH + SRB for BCCH at 32 kbps. 5867
18.3.5.3a.2 SRBs for PCCH at 8 kbps kbps + SRB for CCCH + SRB for DCCH + SRB for BCCH at 16 kbps ..... 5868
18.3.5.4 RB for CTCH + SRB for CCCH +SRB for BCCH. ..... 5869
18.3.5.5 64.8kbps RB for MTCH with 80 ms TTI ..... 5871
18.3.5.5.1 Conformance Requirement ..... 5871

18.3.5.6 129.6 kbps RB for MTCH with 80 ms TTI ....5873
18.3.5.7 259.2 kbps RB for MTCH with 40 ms TTI ....5874
18.3.5.8 124.4kbps RB for MBSFN MTCH with 80 ms TTI ....5876
18.3.5.9 320.4 kbps RB for MBSFN MTCH with 80 ms TTI ....5877
18.3.5.9.2 Test purpose ....5878
18.3.5.10 497.6 kbps RB for MBSFN MTCH with 80 ms TTI ....5878
18.3.6 Combinations on PRACH ....5879
18.3.6.1 SRB for CCCH + SRB for DCCH ....5879
18.3.6.2 Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH ....5880
18.3.6.3 Interactive/Background 12.8 kbps PS RAB + Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH ....5880
18.3.7 Combinations on DPCH and HS-PDSCH ....5880
18.3.7.1 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5880
18.3.7.1.1 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size ....5880
18.3.7.1.2 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size ....5885
18.3.7.2 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5888
18.3.7.2.1 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size ....5888
18.3.7.2.2 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size ....5891
18.3.7.3 Interactive or background / UL:384 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5894
18.3.7.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5897
18.3.7.5 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5902
18.3.7.5.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB, UL 336bit block size ....5902
18.3.7.5.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB, UL 144bit block size ....5906
18.3.7.6 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5910
18.3.7.7 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5914
18.3.7.7.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 336bit block size ....5914
18.3.7.7.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 144bit block size ....5919
18.3.7.8 Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5923
18.3.7.9 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5927
18.3.7.9.1 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 340bit block size ....5927
18.3.7.9.1 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 148bit block size ....5931
18.3.7.10 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH ....5935
18.3.7.10.1 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size ....5935

18.3.7.10.2 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size....5940
18.3.8 Combinations on DPCH, HS-DSCH and E-PUCH....5945
18.3.8.1 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH....5945
18.3.8.3 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH....5947
18.3.8.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH....5947
18.3.8.5 Streaming or interactive or background / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH....5951

**Annex A (normative): Default RRC Message Contents....5953**

**Annex B (informative): Void....5954**

**Annex C (normative): Generic Test Procedures to Check UE's State....5955**
C.1 Verify that UE is in Idle Mode State....5955
C.2 Verify that UE is in CELL_FACH State....5957
C.3 Verify that UE is in CELL_DCH State....5958
C.4 Verify that UE is in CELL_PCH State....5959
C.5 Verify that UE is in URA_PCH State....5961

**Annex D (normative): Generic procedure to use before and following inter-RAT handover/cell change order signalling test cases....5963**
D.1 Preamble for UTRAN to GERAN test cases....5963
D.2 Postamble to be used following for inter-RAT handover / cell change order test cases....5963
D.2.1 UTRAN to GERAN handover in CS....5963
D.2.2 UTRAN to GERAN handover in CS+PS....5964
D.2.3 UTRAN to GERAN cell change in PS (in PMM-CONNECTED)....5964

**Annex E (informative): Change history....5965**

History....6028

# Foreword

This Technical Specification (TS) has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

x the first digit:

1 presented to TSG for information;

2 presented to TSG for approval;

3 or greater indicates TSG approved document under change control.

y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.

z the third digit is incremented when editorial only changes have been incorporated in the document.

# Introduction

The present document is the first part of a multi-part conformance specification valid for 3GPP Release 1999, 3GPP Release 4 and 3GPP Release 5. 3GPP TS 34.123-2 [11] contains a pro-forma for the Implementation Conformance Statement (ICS) and an applicability table, indicating the release from which each tescase is applicable. 3GPP TS 34.123-3 [12] contains a detailed and executable description of the test cases written in a standard testing language, TTCN, as defined in ISO/IEC 9646.

For at least a minimum set of services, the prose descriptions of test cases will have a matching detailed test case implemented in TTCN [12].

For Release 1999, the minimum set of services are defined as:

- voice calls;
- emergency calls;
- SMS (both Point-to-point and Cell broadcast);
- Circuit Switched data at up to 64 k bits/second;
- fax;

including the underlying layers to support these services.

Release 1999 will also include the areas:

- auto-calling restrictions.

The present document may contain descriptions of tests for additional services, but these tests may not have matching TTCN test cases.

The present document will not contain any tests on the USIM, or the interface between the UE and the USIM. These tests are documented elsewhere.

# 1 Scope

The present document specifies the protocol conformance testing for the 3rd Generation User Equipment (UE).

This is the first part of a multi-part test specification. The following information can be found in this part:

- the overall test structure;
- the test configurations;
- the conformance requirement and reference to the core specifications;
- the test purposes; and
- a brief description of the test procedure, the specific test requirements and short message exchange table.

The following information relevant to testing can be found in accompanying specifications:

- the default setting of the test parameters [9];
- the applicability of each test case [11].

A detailed description of the expected sequence of messages can be found in the 3rd part of this test specification.

The Implementation Conformance Statement (ICS) pro-forma can be found in the 2nd part of the present document.

The present document is valid for UE implemented according to 3GPP Release 1999, 3GPP Release 4 or 3GPP Release 5.

# 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document in the same Release as the present document.
  - For a Release 1999 UE, references to 3GPP documents are to version 3.x.y, when available.
  - For a Release 4 UE, references to 3GPP documents are to version 4.x.y, when available.
  - For a Release 5 UE, references to 3GPP documents are to version 5.x.y, when available.
  - For a Release 6 UE, references to 3GPP documents are to version 6.x.y, when available.
  - For a Release 7 UE, references to 3GPP documents are to version 7.x.y, when available.
  - For a Release 8 UE, references to 3GPP documents are to version 8.x.y, when available.

[1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".

[2] 3GPP TS 23.003: "Numbering, Addressing and Identification".

[3] 3GPP TS 23.122: "Non-Access-Stratum functions related to Mobile Station (MS) in idle mode".

[4] 3GPP TS 24.008: "Mobile Radio Interface Layer 3 specification; Core Network Protocols; Stage 3".

[5] 3GPP TS 25.214: "Physical layer procedures (FDD)".

[6] 3GPP TS 25.321: "MAC protocol specification".

[7] 3GPP TS 25.322: "RLC protocol specification".

[8] 3GPP TS 25.331: "RRC Protocol Specification".

[9] 3GPP TS 34.108: "Common Test Environments for User Equipment (UE) Conformance Testing".

[10] 3GPP TS 34.109: "Terminal logical test interface; Special conformance testing functions".

[11] 3GPP TS 34.123-2: "User Equipment (UE) conformance specification; Part 2: Implementation Conformance Statement (ICS) proforma specification".

[12] 3GPP TS 34.123-3: "User Equipment (UE) conformance specification; Part 3: Abstract Test Suites (ATS)".

[13] 3GPP TS 51.010-1: "Mobile Station (MS) conformance specification; Part 1: Conformance specification ".

[14] ISO/IEC 9646 (all parts): "Information technology - Open Systems Interconnection - Conformance testing methodology and framework".

[15] 3GPP TS 25.304: "UE Procedures in Idle Mode and Procedures for Cell Reselection in Connected Mode".

[16] 3GPP TS 34.121: "Terminal Conformance Specification; Radio Transmission and Reception (FDD)".

[17] 3GPP TS 34.122: "Terminal Conformance Specification; Radio Transmission and Reception (TDD)".

[18] 3GPP TS 31.102: "Characteristics of the USIM Application".

[19] 3GPP TS 25.224: "Physical Layer Procedures (TDD)".

[20] 3GPP TS 25.215: "Physical layer - Measurements (FDD)".

[21] 3GPP TS 25.101: "UE Radio Transmission and Reception (FDD)".

[22] 3GPP TS 25.123: "Requirements for support of radio resource management (TDD)".

[23] 3GPP TS 25.133: "Requirements for Support of Radio Resource Management (FDD)".

[24] 3GPP TS 03.22: "Functions related to Mobile Station (MS) in idle mode and group receive mode".

[25] 3GPP TS 04.18: "Mobile radio interface layer 3 specification; Radio Resource Control Protocol".

[26] 3GPP TS 05.08: "Radio Subsystem Link Control".

[27] 3GPP TS 22.001: "Principles of circuit telecommunication services supported by a Public Land Mobile Network (PLMN)".

[28] 3GPP TS 24.007: "Mobile radio interface signalling layer 3; General aspects".

[29] 3GPP TS 25.211: "Physical channels and mapping of transport channels onto physical channels (FDD)".

[30] 3GPP TS 25.323: "Packet Data Convergence Protocol (PDCP) Specification".

[31] 3GPP TS 33.102: "3G Security; Security Architecture".

[32] 3GPP TS 23.060: "General Packet Radio Service (GPRS) Service description; Stage 2".

[33] Void.

[34] 3GPP TS 23.040: "Technical realization of the Short Message Service (SMS)".

[35] 3GPP TS 23.038: "Alphabets and language-specific information".

[36] 3GPP TS 24.011: "Point-to-Point (PP) Short Message Service (SMS) support on mobile radio interface".

[37] 3GPP TS 25.324: "Broadcast/Multicast Control BMC".

[38] 3GPP TS 23.041: "Technical realization of Cell Broadcast Service (CBS)".

[39] RFC 2507: "IP Header Compression".

[40] RFC 3095: "RObust Header Compression (ROHC): Framework and four profiles: RTP, UDP, ESP, and uncompressed".

[41] RFC 4815: "RObust Header Compression (ROHC): Corrections and Clarifications to RFC 3095".

[42] 3GPP TS 23.228: “IP Multimedia Subsystem (IMS)”.

[43] 3GPP TS 22.246: “Multimedia Broadcast/Multicast Service (MBMS) user services; Stage 1”

[44] 3GPP TS 23.246: “Multimedia Broadcast/Multicast Service (MBMS); Architecture and functional description”

# 3 Definitions and abbreviations

## 3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 apply, unless specified below:

**example:** text used to clarify abstract rules by applying them literally

**Floor**: Floor(x) is the largest integer smaller than or equal to x.

**Ceil**: Ceil (x) is the smallest integer larger than or equal to x.

## 3.2 Abbreviations

For the purposes of the present document, the abbreviations specified in TR 21.905 apply, with any additional abbreviations specified below:

SS System Simulator

# 4 Overview

## 4.1 Test Methodology

### 4.1.1 Testing of optional functions and procedures

Any function or procedure which is optional, as indicated in the present document , may be subject to a conformance test if it is implemented in the UE.

A declaration by the apparatus supplier (ICS) is used to determine whether an optional function/procedure has been implemented.

### 4.1.2 Test interfaces and facilities

Detailed descriptions of the UE test interfaces and special facilities for testing are provided in [10].

## 4.2 Implicit Testing

For some 3GPP signalling and protocol features conformance is not verified explicitly in the present document. This does not imply that correct functioning of these features is not essential, but that these are implicitly tested to a sufficient degree in other tests.

# 5 Reference Conditions

The reference environments used by all signalling and protocol tests are specified in TS 34.108. Where a test requires an environment that is different, this will be specified in the test itself.

## 5.1 Generic setup procedures

A set of basic generic procedures for radio resource signalling, and generic setup procedures for layer 3 NAS signalling are described in TS 34.108 clause 7. These procedures are used in numerous test cases throughout the present document.

# 6 Idle mode operations

In the following paragraphs some explanatory text is given concerning the nature of the tests in this clause and the general behaviour of the SS is described.

Since the conformance requirements of most of the tests in this clause cannot be tested explicitly, testing is done implicitly by testing the UE behaviour from its responses to the SS.

In some cases, a test is performed in multiple stages in order that the requirements can be tested within the above constraints.

For any UE all the carriers are in its supported band(s) of operation.

Unless otherwise stated in the method of test, in all of the tests of this clause:

- the default values of the system information data fields given in TS 34.108 are used;
- the UE is equipped with a USIM containing default values. The USIM is in the idle updated state in the default location area with a TMSI assigned at the beginning of each test;
- default cell numbering as defined in TS 34.108 clause 6.1 have been used in the cell selection and re-selection test cases;
- the cells shall be configured such that Squal>0 (FDD only) and Srxlev>0 while applying Qqualmin (FDD only) and Qrxlevmin in table 6.1. In addition, for an FDD cell, the measured primary CPICH RSCP value shall be greater than or equal to -95 dBm (definition of High Quality cell, see TS 25.304, clause 5.1.2.2). In addition, for a TDD cell, the measured P-CCPCH RSCP shall be greater than or equal to –84 dBm (definition of High Quality cell, see TS 25.304, clause 5.1.2.2).

Three different methods A, B and C are applied in the tests:

Method A:

- the SS is continuously paging the UE on all cells at the start of the test and does not respond to RACH requests from the UE (which causes a cell reselection). Where a test specifies that the UE is not paged on a particular cell, only idle paging is transmitted. This method is similar to the one used in TS 51.010-1, clause 20.

Method B:

- the SS is continuously paging the UE on all cells at the start of the test and responds to RACH requests from the UE with an IMMEDIATE ASSIGNMENT REJECT (GERAN cell) or RRC CONNECTION REJECT (UTRAN cell) message which causes the UE to return to Idle mode. Where a test specifies that the UE is not paged in a particular cell, only idle paging is transmitted.

Method C:

- no continuously paging as in method A or B. Normal response to RACH requests so Location Updating and Calls can be done.

In case a test specifies that UE shall read System Information on BCCH while camped on a UTRAN cell, SS shall notify UE on the BCCH modification by sending a PAGING TYPE 1 message to UE. This message shall contain IE BCCH Modification Info with the following settings:

| Information Element | Value/remark |
|---|---|
| BCCH modification info | |
| MIB Value Tag | Set to the same value as the value tag of the MIB after the BCCH modification |
| BCCH Modification time | Not present |

**Table 6.1: Default values of the system information fields**

| Parameter | Setting |
|---|---|
| IMSI attach/detach | Method A, B: Not allowed<br>Method C: Allowed |
| Intra-frequency cell re-selection indicator | Set to allowed if IE Cell Barred is set to barred; otherwise this IE Not Present |
| Cell_selection_and_reselection_quality_measure | CPICH RSCP (FDD) |
| Qqualmin (FDD only) | -24 dB |
| Qrxlevmin (FDD) | -115 dBm |
| Qrxlevmin (TDD) | -103 dBm |
| DRX cycle length | 1,28 s |

For a UE camping in a FDD cell, CPICH_Ec/Io and SCH_Ec/Io shall fulfill requirements in TS 25.133, clause 8.1.2.2.1: The UE is able to identify a new detectable cell belonging to the monitored set within $T_{identify\ intra}$ when CPICH Ec/Io $\geq$ -20 dB and SCH_Ec/Io $\geq$ -20 dB.

For a UE camping in a TDD cell, the UE shall be able to identify a new detectable cell belonging to the monitored set within $T_{identify\ intra}$ when fulfill requirements in TS 25.123, clause 8.1.2.2. for TDD 3.84 Mcps option and 8.1A.2.2 for TDD 1.28 Mcps option.

It is a UE option whether to indicate access technologies to the user (TS 23.122, clause 4.4.3.1.2). Therefore, for combined UTRAN/GSM tests, it is indicated in parentheses which access technology shall be indicated to the user if the UE has this capability.

If a parameter is indicated with a *, it means that the parameter is calculated internally in the UE and is only shown for clarification of the test procedure.

The PLMN numbers indicated in table 6.2 are used in test cases to associate a cell with an MCC and MNC for that cell. If no PLMN is explicitly specified, the default value is PLMN 1.

**Table 6.2: Location Area Information (LAI) in System Information type 3 messages broadcast on the BCCH (GSM) or System Information Block Type 1 broadcast on the BCH (UMTS)**

| PLMN | MCC1 | MCC2 | MCC3 | MNC1 | MNC2 | MNC3 | LAC |
|---|---|---|---|---|---|---|---|
| 1 | 0 | 0 | 1 | 0 | 1 | Not present | x |
| 2 | 0 | 0 | 2 | 1 | 1 | Not present | x |
| 3 | 0 | 0 | 3 | 2 | 1 | Not present | x |
| 4 | 0 | 0 | 4 | 3 | 1 | Not present | x |
| 5 | 0 | 0 | 5 | 4 | 1 | Not present | x |
| 6 | 0 | 0 | 6 | 5 | 1 | Not present | x |
| 7 | 0 | 0 | 7 | 6 | 1 | Not present | x |
| 8 | 0 | 0 | 8 | 7 | 1 | Not present | x |
| 9 | 0 | 0 | 9 | 0 | 2 | Not present | x |
| 10 | 0 | 1 | 0 | 1 | 2 | Not present | x |
| 11 | 0 | 1 | 1 | 2 | 2 | Not present | x |
| 12 | 0 | 1 | 2 | 3 | 2 | Not present | x |
| NOTE: 'x' denotes any value. | | | | | | | |

References: TS 23.122, annex A and TS 23.003, clause 2.

The test channel numbers indicated in tables 6.3, 6.4, 6.4a and 6.5 are used in test cases to associate a cell with a frequency for that cell. The frequencies for GSM and DCS cells in table 6.5 are identical to those used in TS 51.010-1, clause 26.3.1. The RF signal levels are given in table 6.5 for GSM cells, in table 6.3 for UTRAN FDD cells, in table 6.4 for UTRAN TDD cells 3.84 Mcps option and in table 6.4a for UTRAN TDD cells 1.28 Mcps option. If no channel is explicitly specified, the default value is Test Channel 1.

Note: The following list contains the test case(s) which simultaneously configure(s) 4 or more than 4 channels and make(s) use of these tables: test 9.4.5.4.1.

**Table 6.3: UTRA (FDD) test frequencies**

| Test Channel: | 1 | 2 | 3 | 4 | Unit |
|---|---|---|---|---|---|
| **RF signal level** | -60 | -65 | -70 | -75 | CPICH_Ec dBm / 3.84 MHz |
| **Band I** | 9 613 | 9 663 | 9 713 | 9 763 | Uplink UARFCN |
| **Band II** | 9 263 | 9 313 | 9 363 | 9 413 | Uplink UARFCN |
| **Band III** | 938 | 988 | 1 038 | 1 088 | Uplink UARFCN |
| **Band IV** | 1 313 | 1 363 | 1 413 | 1 463 | Uplink UARFCN |
| **Band V (*)** | 4 133 | 4 158 | 4 183 | 4 208 | Uplink UARFCN |
| **Band VI (*)** | 812 | 837 | Void | Void | Uplink UARFCN |
| **Band VII** | 2 013 | 2 063 | 2 113 | 2 163 | Uplink UARFCN |
| **Band VIII (**)** | 2 713 | 2 763 | 2 813 | 2 862 | Uplink UARFCN |
| **Band IX** | 8 762 | 8 812 | 8 862 | 8 912 | Uplink UARFCN |
| **Band X** | 2888 | 2938 | 2988 | 3038 | Uplink UARFCN |
| **Band XI (*)** | 3487 | 3512 | 3537 | 3562 | Uplink UARFCN |
| **Band XII (*)** | 3613 | 3638 | 3663 | Void | Uplink UARFCN |
| **Band XIII (*)** | 3842 | 3867 | Void | Void | Uplink UARFCN |
| **Band XIV (*)** | 3942 | 3967 | Void | Void | Uplink UARFCN |

Note: Bands marked with (*) use a 5 MHz spacing between test channels because the total available bandwidth is limited. Other bands use a 10 MHz spacing between test channels. For Band VIII (**) test channel 4 is only 9.8 MHz separated from test channel 3. Test cases which use more than the currently defined test channels in Table 6.3 can not be executed and are not applicable for Band VI, XII, XIII, XIV.

**Table 6.3A: Void**

References: TS 34.108, clause 5.1.1 and TS 34.121, clause 4.

**Table 6.4: UTRA TDD test frequencies (3.84 Mcps option)**

| | Band a | | Band b | | Band c | |
|---|---|---|---|---|---|---|
| **Test Channel** | **P-CCPCH_ RSCP [dBm]** | **UARFCN** | **P-CCPCH_ RSCP [dBm]** | **UARFCN** | **P-CCPCH_ RSCP [dBm]** | **UARFCN** |
| 1 | -54 | 9 513 | -54 | 9 263 | -54 | 9563 |
| 2 | -59 | 9 550 | -59 | 9 400 | -59 | 9577 |
| 3 | -64 | 9 587 | -64 | 9 537 | -64 | 9591 |
| 4 | -69 | 10 063 | -69 | 9 663 | -69 | 9605 |
| 5 | -74 | 10 087 | -74 | 9 800 | -74 | 9619 |
| 6 | -79 | 10 112 | -79 | 9 937 | -79 | 9637 |

**Table 6.4a: UTRA TDD test frequencies (1.28 Mcps option)**

| | Band a | | Band b | | Band c | |
|---|---|---|---|---|---|---|
| Test Channel | P-CCPCH_ RSCP [dBm] | UARFCN | P-CCPCH_ RSCP [dBm] | UARFCN | P-CCPCH_ RSCP [dBm] | UARFCN |
| 1 | -54 | 9 505 | -54 | 9 255 | -54 | 9555 |
| 2 | -59 | 9 550 | -59 | 9 400 | -59 | 9573 |
| 3 | -64 | 9 595 | -64 | 9 545 | -64 | 9591 |
| 4 | -69 | 10 055 | -69 | 9 655 | -69 | 9608 |
| 5 | -74 | 10 088 | -74 | 9 800 | -74 | 9626 |
| 6 | -79 | 10 120 | -79 | 9 945 | -79 | 9645 |

References: TS 34.108, clause 5.1.2 and TS 34.122, clause 4.

**Table 6.5: GSM/DCS test frequencies and levels**

| Test Channel: | 1 | 2 | 3 | Unit |
|---|---|---|---|---|
| RF signal level | +65 / -48 | +63 / -50 | +61 / -52 | dBµVemf( ) / dBm |
| GSM 450 | 259 | 261 | 267 | BCCH ARFCN |
| DCS 480 | 306 | 308 | 314 | BCCH ARFCN |
| GSM 710/ GSM 750/ T-GSM 810 | 441 | 452 | 461 | BCCH ARFCN |
| GSM 850 | 251 | 224 | 212 | BCCH ARFCN |
| GSM 900 | 1 | 7 | 39 | BCCH ARFCN |
| DCS 1800 | 885 | 830 | 703 | BCCH ARFCN |
| PCS 1900 | 800 | 703 | 610 | BCCH ARFCN |
| Multiband 450/900 | 1 | 261 | 267 | BCCH ARFCN |
| Multiband 480/900 | 1 | 308 | 314 | BCCH ARFCN |
| Multiband 450/1800 | 885 | 261 | 267 | BCCH ARFCN |
| Multiband 480/1800 | 885 | 308 | 314 | BCCH ARFCN |
| Multiband 900/1800 | 885 | 7 | 39 | BCCH ARFCN |

Note: The test channels using GSM/DCS test frequencies defined in Table 6.5 are also used in interRAT measurement test cases of section 8.4.

For GSM 710 and T-GSM 810 Bands, ARFCNs are defined using Dynamic Mapping. The information about dynamic mapping is provided by System Information type 15 and the required parameters are defined in 3GPP 51.010-1[13], Table 20.1d.

# 6.1 In a pure 3G environment

## 6.1.1 PLMN selection

### 6.1.1.1 PLMN selection of RPLMN, HPLMN, UPLMN and OPLMN; Manual mode

#### 6.1.1.1.1 Definition

Test to verify that the UE can present the available PLMNs in priority order to the user when asked to do so in manual mode and that the displayed PLMNs can be selected / reselected by the user. If available, the RPLMN shall be selected at switch-on, otherwise the displayed list shall include in priority order HPLMN, User-PLMN and Operator-PLMN. The last priority in the list is "Other PLMN/access technology combinations" which is not included in this test.

Only UTRAN cells and a UE equipped with a USIM with Radio Access Technology fields set to UTRAN are considered.

#### 6.1.1.1.2 Conformance requirement

1. At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see TS 23.122, clause 4.5.2) attempts to perform a Location Registration.

   If successful registration is achieved, the MS indicates the selected PLMN.

If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows either Automatic or Manual Network Selection Mode Procedure depending on its operating mode.

2. Manual Network Selection Mode Procedure:

   The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS.

   If displayed, PLMNs meeting the criteria above are presented in the following order:

   2.1 HPLMN;

   2.2 PLMNs contained in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.3 PLMNs contained in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.4 Other PLMN/access technology combinations with received high quality signal in random order;

   2.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

   If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

3. If a "PLMN not allowed" message is received by an MS in response to an LR request from a VPLMN, that VPLMN is added to a list of "forbidden PLMNs" in the SIM and thereafter that VPLMN will not be accessed by the MS when in automatic mode. A PLMN is removed from the "forbidden PLMNs" list if, after a subsequent manual selection of that PLMN, there is a successful LR. This list is retained when the MS is switched off or the SIM is removed. The HPLMN shall not be stored on the list of "forbidden PLMNs".

References

1. TS 23.122, clause 4.4.3.1;
2. TS 23.122, clause 4.4.3.1.2;
3. TS 23.122, clause 3.1.

NOTE: TS 31.102 defines the USIM fields.

#### 6.1.1.1.3 Test purpose

1. To verify that if available, the RPLMN is selected at switch-on.
2. To verify that in Manual Network Selection Mode Procedure, the UE presents the HPLMN, UPLMN and OPLMN in a prioritized order.

#### 6.1.1.1.4 Method of test

Initial conditions

The UE is in manual PLMN selection mode.

Cell levels are from table 6.3. (FDD).

All Radio Access Technology USIM fields and cells are UTRAN.

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | -60 | -54 | 1 | PLMN 1 |
| Cell 2 | -65 | -59 | 2 | PLMN 2 |
| Cell 4 | -75 | -69 | 3 | PLMN 4 |
| Cell 5 | -80 | -74 | 4 | PLMN 5 |

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{LOCI}$ | | PLMN 1 |
| $EF_{PLMNwAcT}$ | $1^{st}$ | PLMN 4 |
| $EF_{OPLMNwAcT}$ | $1^{st}$ | PLMN 5 |

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN2.

Test procedure

Method C is applied.

a) The SS activates 4 cells and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) Cell 1 is switched off.

e) PLMN 4 shall be selected when the PLMN list is presented.

f) The SS waits for random access requests from the UE.

g) Cell 4 is switched off.

h) Void

i) PLMN 5 shall be selected (the list is already available).

j) The SS waits for random access requests from the UE.

k) Cell 5 is switched off.

l) PLMN 2 shall be selected when the PLMN list is presented.

m) The SS waits for random access requests from the UE.

n) Cell 2 is switched off.

6.1.1.1.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 1.

2) In step e), the list shall be presented. The priority shall be as follows: PLMN 2, PLMN 4 and PLMN 5.

3) In step f), the response from the UE shall be on Cell 4. The displayed PLMN shall be PLMN 4.

4) In step j), the response from the UE shall be on Cell 5. The displayed PLMN shall be PLMN 5.

5) In step l), the list shall be presented. The priority shall be as follows: PLMN 2.

6) In step m), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN 2.

### 6.1.1.2 PLMN selection of "Other PLMN / access technology combinations"; Manual mode

#### 6.1.1.2.1 Definition

Test to verify that the UE can present the available high quality signal PLMNs in random order to the user when asked to do so in manual mode and that the displayed PLMNs can be selected / reselected by the user. Forbidden PLMNs shall also by displayed in the list.

Only UTRAN cells and a UE equipped with a USIM with Radio Access Technology fields set to UTRAN are considered.

#### 6.1.1.2.2 Conformance requirement

1. At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see TS 23.122, clause 4.5.2) attempts to perform a Location Registration.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows either Automatic or Manual Network Selection Mode Procedure depending on its operating mode.

2. Manual Network Selection Mode Procedure:

   The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS.

   If displayed, PLMNs meeting the criteria above are presented in the following order:

   2.1 HPLMN;

   2.2 PLMNs contained in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.3 PLMNs contained in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.4 Other PLMN/access technology combinations with received high quality signal in random order;

   2.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   In 2.5, the MS shall order the PLMN/access technology combinations in order of decreasing signal quality within each access technology. The order between PLMN/access technology combinations with different access technologies is an MS implementation issue.

   The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

   If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

3. If a "PLMN not allowed" message is received by an MS in response to an LR request from a VPLMN, that VPLMN is added to a list of "forbidden PLMNs" in the SIM and thereafter that VPLMN will not be accessed by the MS when in automatic mode. A PLMN is removed from the "forbidden PLMNs" list if, after a subsequent manual selection of that PLMN, there is a successful LR. This list is retained when the MS is switched off or the SIM is removed. The HPLMN shall not be stored on the list of "forbidden PLMNs".

4. The UE shall scan all RF channels in the UTRA band according to its capabilities to find available PLMNs. On each carrier, the UE shall search for the strongest cell according to the cell search procedures (for FDD, see TS 25.214, and TDD, see TS 25.224) and read its system information, in order to find out which PLMN the cell belongs to. If the UE can read the PLMN identity, the found PLMN shall be reported to the NAS as a high quality PLMN (but without the RSCP value), provided that the following high quality criterion is fulfilled:

   - For an FDD cell, the measured primary CPICH RSCP value shall be greater than or equal to -95 dBm.

   - For a TDD cell, the measured P-CCPCH RSCP shall be greater than or equal to –84 dBm.

   Found PLMNs that do not satisfy the high quality criterion, but for which the UE has been able to read the PLMN identities are reported to the NAS together with the CPICH RSCP value for UTRA FDD cells and P-CCPCH RSCP for UTRA TDD cells.

References

1. TS 23.122, clause 4.4.3.1.
2. TS 23.122, clause 4.4.3.1.2.
3. TS 23.122, clause 3.1.
4. TS 25.304, clause 5.1.2.2.

NOTE: TS 31.102 defines the USIM fields.

#### 6.1.1.2.3 Test purpose

1. To verify that in Manual Network Selection Mode Procedure, the UE presents "Other PLMN/access technology combinations" in a random order according to conformance requirement 2.4. UE requirement on measurement accuracy for PLMN selection is not specified in core specifications. Therefore, the ordering of PLMNs according to conformance requirement 2.5 is not tested.
2. To verify that forbidden PLMNs are also displayed in the list.

#### 6.1.1.2.4 Method of test

Initial conditions

The UE is in manual PLMN selection mode.

All Radio Access Technology USIM fields and cells are UTRAN.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | High Quality signal | Test Channel | PLMN |
|---|---|---|---|---|---|
| Cell 1 | -85 | -74 | Yes | 1 | PLMN 6 |
| Cell 2 | -80 | -69 | Yes | 2 | PLMN 7 |
| Cell 3 | -80 | -69 | Yes | 3 | PLMN 8 |
| Cell 4 | -80 | -69 | Yes | 4 | PLMN 10 |

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{LOCI}$ | | PLMN 6 |
| $EF_{FPLMN}$ | PLMN 10 | |

Test procedure

Method C is applied.

a) The SS activates cells 1-4 and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) PLMN 6 shall be selected when the PLMN list is presented.

d) The SS waits for random access requests from the UE.

e) Cell 1 is switched off.

f) PLMN 7 shall be selected when the PLMN list is presented.

g) The SS waits for random access requests from the UE.

h) Cell 2 is switched off.

i) PLMN 8 shall be selected when the PLMN list is presented.

j) The SS waits for random access requests from the UE.

k) Cell 3 is switched off.

l) PLMN 10 shall be selected when the PLMN list is presented. The SS shall accept the Registration Request from the UE.

m) Cell 4 is switched off.

#### 6.1.1.2.5 Test Requirements

1) In step c), the list shall be presented. The priority shall be as follows: PLMN 6 followed by PLMN 7, PLMN 8 and PLMN 10 in random order.

2) In step d), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 6.

3) In step f), the list shall be presented. The priority shall be as follows: PLMN 7, PLMN 8 and PLMN 10 in random order.

4) In step g), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN 7.

5) In step i), the list shall be presented. The priority shall be as follows: PLMN 8 and PLMN 10 in random order.

6) In step j), the response from the UE shall be on Cell 3. The displayed PLMN shall be PLMN 8.

7) In step l), the list shall be presented containing only PLMN 10. The UE shall perform successful registration on Cell 4.

8) After step m), the UE shall inform that no network is available.

### 6.1.1.3 PLMN selection; independence of RF level and preferred PLMN; Manual mode

#### 6.1.1.3.1 Definition

Test to verify that in Manual Network Selection Mode, the UE is able to obtain normal service on a PLMN which is neither the better nor a preferred PLMN and that it tries to obtain service on a VPLMN if and only if the user selects it manually.

#### 6.1.1.3.2 Conformance requirement

1. At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see TS 23.122, clause 4.5.2) attempts to perform a Location Registration.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows either Automatic or Manual Network Selection Mode Procedure depending on its operating mode.

2. Manual Network Selection Mode Procedure:

The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS.

If displayed, PLMNs meeting the criteria above are presented in the following order:

2.1 HPLMN;

2.2 PLMNs contained in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

2.3 PLMNs contained in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

2.4 Other PLMN/access technology combinations with received high quality signal in random order;

2.5 Other PLMN/access technology combinations in order of decreasing signal quality.

The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

References

1. TS 23.122, clause 4.4.3.1.
2. TS 23.122, clause 4.4.3.1.2

NOTE: TS 31.102 defines the USIM fields.

#### 6.1.1.3.3 Test purpose

1. To verify that the selected PLMN at switch-on is the HPLMN.
2. To verify that in Manual Network Selection Mode Procedure the UE tries to obtain service on a VPLMN if and only if the user selects it manually.
3. To verify that the UE is able to obtain normal service on a PLMN which is neither the better nor a prefered PLMN.

#### 6.1.1.3.4 Method of test

Initial conditions

The UE is in manual PLMN selection mode.

"IMSI attach" flag in the BCCH is set to allowed.

For FDD only:

Step a-d:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|---|
| Test Channel | | 1 | 2 | 3 |
| CPICH_Ec | dBm/3.84 MHz | -60 | -70 | OFF |
| PLMN | | 1 | 2 | 3 |

Step e-f:

| | | | | |
|---|---|---|---|---|
| CPICH_Ec | dBm/3.84 MHz | -60 -> OFF | -70 | OFF |

Step g-h:

| | | | | |
|---|---|---|---|---|
| CPICH_Ec | dBm/3.84 MHz | OFF | -70 | OFF -> -60 |

Step i-l:

| | | | | |
|---|---|---|---|---|
| CPICH_Ec | dBm/3.84 MHz | OFF | -70 -> OFF | -60 |

For TDD only:

Step a-d:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|---|
| Test Channel | | 1 | 2 | 3 |
| P-CCPCH RSCP | dBm | -69 | -74 | OFF |
| PLMN | | 1 | 2 | 3 |

Step e-f:

| | | | | |
|---|---|---|---|---|
| P-CCPCH RSCP | | -69 -> OFF | -74 | OFF |

Step g-h:

| | | | | |
|---|---|---|---|---|
| P-CCPCH RSCP | | OFF | -74 | OFF -> -69 |

Step k-l:

| | | | | |
|---|---|---|---|---|
| P-CCPCH RSCP | | OFF | -74 -> OFF | -69 |

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{LOCI}$ | | |
| $EF_{PLMNwAcT}$ | $1^{st}$ | PLMN 3 |

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

Test procedure

Method C is applied.

a) The SS activates cells 1 and 2.

b) The UE is switched on.

c) PLMN 1 is selected manually.

d) The SS waits for random access requests from the UE. A complete Location Update is done.

e) Cell 1 is switched off.

f) The SS waits to see if there is any random access request from the UE.

g) Cell 3 is switched on.

h) The SS waits to see if there is any random access request from the UE.

i) PLMN 2 is selected manually.

j) The SS waits for random access requests from the UE. A complete Location Update is done.

k) Cell 2 is switched off.

l) The SS waits to see if there is any random access request from the UE.

#### 6.1.1.3.5 Test Requirements

1) In step d), there shall be a response on Cell 1. The selected PLMN shall be PLMN 1.

2) In step f), there shall be no response from the UE within 2 min.

3) In step h), there shall be no response from the UE within 2 min.

4) In step j), there shall be a response on Cell 2. The selected PLMN shall be PLMN 2.

5) In step l), there shall be no response from the UE within 2 min.

### 6.1.1.4 PLMN selection of RPLMN, HPLMN, UPLMN and OPLMN; Automatic mode

#### 6.1.1.4.1 Definition

Test to verify that in Automatic Network Selection Mode, the UE selects PLMNs in a prioritized order. If available, the RPLMN shall be selected at switch-on, otherwise the list shall include in priority order HPLMN, User-PLMN and Operator-PLMN. The last priority in the list is "Other PLMN/access technology combinations" which is not included in this test.

Only UTRAN cells and a UE equipped with a USIM with Radio Access Technology fields set to UTRAN are considered.

#### 6.1.1.4.2 Conformance requirement

1. At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see TS 23.122, clause 4.5.2) attempts to perform a Location Registration.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows either Automatic or Manual Network Selection Mode Procedure depending on its operating mode.

2. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMNs, if available and allowable in the following order:

   2.1 HPLMN (if not previously selected);

   2.2 Each PLMN in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.3 Each PLMN in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.4 Other PLMN/access technology combinations with received high quality signal in random order;

   2.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If registration cannot be achieved because no PLMNs are available and allowable, the MS indicates "no service" to the user, waits until a new PLMN is available and allowable and then repeats the procedure.

If there were one or more PLMNs which were available and allowable, but an LR failure made registration on those PLMNs unsuccessful or an entry in the "forbidden LAs for regional provision of service" list prevented a registration attempt, the MS selects the first such PLMN again and enters a limited service state.

3. If a "PLMN not allowed" message is received by an MS in response to an LR request from a VPLMN, that VPLMN is added to a list of "forbidden PLMNs" in the SIM and thereafter that VPLMN will not be accessed by the MS when in automatic mode. A PLMN is removed from the "forbidden PLMNs" list if, after a subsequent manual selection of that PLMN, there is a successful LR. This list is retained when the MS is switched off or the SIM is removed. The HPLMN shall not be stored on the list of "forbidden PLMNs".

References

1. TS 23.122, clause 4.4.3.1.
2. TS 23.122, clause 4.4.3.1.1.
3. TS 23.122, clause 3.1.

NOTE: TS 31.102 defines the USIM fields.

#### 6.1.1.4.3 Test purpose

1. To verify that if available, the RPLMN is selected at switch-on.
2. To verify that in Automatic Network Selection Mode Procedure, the UE selects the RPLMN, HPLMN, UPLMN and OPLMN in a prioritized order.

#### 6.1.1.4.4 Method of test

Initial conditions

The UE is in automatic PLMN selection mode.

"IMSI attach" flag in the BCCH is set to allowed.

Cell levels are from table 6.3 (FDD).

All Radio Access Technology USIM fields and cells are UTRAN.

In the System Information broadcast in each cell, the neighbouring cell list does not contain any cell belonging to the other PLMN's.

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | -60 | -54 | 1 | PLMN 2 |
| Cell 2 | -65 | -59 | 2 | PLMN 1 |
| Cell 4 | -75 | -69 | 3 | PLMN 4 |
| Cell 5 | -80 | -74 | 4 | PLMN 5 |

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{PLMNwAcT}$ | 1st | PLMN 4 |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 5 |

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

UE is previously registered on PLMN2, before switched off.

Test procedure

Method C is applied.

a) The SS activates 4 cells and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) Cell 1 is switched off.

e) The SS waits for random access requests from the UE.

f) Cell 2 is switched off.

g) The SS waits for random access requests from the UE.

i) Cell 4 is switched off.

j) The SS waits for random access requests from the UE.

k) Cell 5 is switched off.

#### 6.1.1.4.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 2.

2) In step e), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN 1.

3) In step g), the response from the UE shall be on Cell 4. The displayed PLMN shall be PLMN 4.

4) In step j), the response from the UE shall be on Cell 5. The displayed PLMN shall be PLMN 5.

### 6.1.1.5 PLMN selection of "Other PLMN / access technology combinations"; Automatic mode

#### 6.1.1.5.1 Definition

Test to verify that in Automatic Network Selection Mode, the UE selects high quality signal PLMNs in a random order.

Only UTRAN cells and a UE equipped with a USIM with Radio Access Technology fields set to UTRAN are considered.

#### 6.1.1.5.2 Conformance requirement

1. At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see TS 23.122, clause 4.5.2) attempts to perform a Location Registration.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows either Automatic or Manual Network Selection Mode Procedure depending on its operating mode.

2. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMNs, if available and allowable in the following order:

   2.1 HPLMN (if not previously selected);

   2.2 Each PLMN in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.3 Each PLMN in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.4 Other PLMN/access technology combinations with received high quality signal in random order;

   2.5 Other PLMN/access technology combinations in order of decreasing signal quality.

In 2.5, the MS shall order the PLMN/access technology combinations in order of decreasing signal quality within each access technology. The order between PLMN/access technology combinations with different access technologies is an MS implementation issue.

If successful registration is achieved, the MS indicates the selected PLMN.

If registration cannot be achieved because no PLMNs are available and allowable, the MS indicates "no service" to the user, waits until a new PLMN is available and allowable and then repeats the procedure.

If there were one or more PLMNs which were available and allowable, but an LR failure made registration on those PLMNs unsuccessful or an entry in the "forbidden LAs for regional provision of service" list prevented a registration attempt, the MS selects the first such PLMN again and enters a limited service state.

3. If a "PLMN not allowed" message is received by an MS in response to an LR request from a VPLMN, that VPLMN is added to a list of "forbidden PLMNs" in the SIM and thereafter that VPLMN will not be accessed by the MS when in automatic mode. A PLMN is removed from the "forbidden PLMNs" list if, after a subsequent manual selection of that PLMN, there is a successful LR. This list is retained when the MS is switched off or the SIM is removed. The HPLMN shall not be stored on the list of "forbidden PLMNs".

4. The UE shall scan all RF channels in the UTRA band according to its capabilities to find available PLMNs. On each carrier, the UE shall search for the strongest cell according to the cell search procedures (for FDD, see TS 25.214, and TDD, see TS 25.224) and read its system information, in order to find out which PLMN the cell belongs to. If the UE can read the PLMN identity, the found PLMN shall be reported to the NAS as a high quality PLMN (but without the RSCP value), provided that the following high quality criterion is fulfilled:

   - For an FDD cell, the measured primary CPICH RSCP value shall be greater than or equal to -95 dBm.
   - For a TDD cell, the measured P-CCPCH RSCP shall be greater than or equal to –84 dBm.

   Found PLMNs that do not satisfy the high quality criterion, but for which the UE has been able to read the PLMN identities are reported to the NAS together with the CPICH RSCP value for UTRA FDD cells and P-CCPCH RSCP for UTRA TDD cells.

References

1. TS 23.122, clause 4.4.3.1.
2. TS 23.122, clause 4.4.3.1.1.
3. TS 23.122, clause 3.1.
4. TS 25.304, clause 5.1.2.2.

NOTE: TS 31.102 defines the USIM fields.

#### 6.1.1.5.3 Test purpose

1. To verify that in Automatic Network Selection Mode Procedure, the UE selects "Other PLMN/access technology combinations" in a random order according to conformance requirement 2.4. UE requirement on measurement accuracy for PLMN selection is not specified in core specifications. Therefore, the ordering of PLMNs according to conformance requirement 2.5 is not tested.

#### 6.1.1.5.4 Method of test

Initial conditions

The UE is in automatic PLMN selection mode.

All Radio Access Technology USIM fields and cells are UTRAN.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | High Quality signal | Test Channel | PLMN |
|---|---|---|---|---|---|
| Cell 1 | -85 | -74 | Yes | 1 | PLMN 6 |
| Cell 2 | -80 | -69 | Yes | 2 | PLMN 7 |
| Cell 3 | -80 | -69 | Yes | 3 | PLMN 8 |

UE is previously registered on PLMN6, before switched off.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{LOCI}$ | | PLMN 6 |

Test procedure

Method C is applied.

a) The SS activates cells 1-3 and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) Cell 1 is switched off.

e) The SS waits for random access requests from the UE.

f) The cell associated to the currently shown PLMN shall be switched off.

g) The SS waits for random access requests from the UE.

#### 6.1.1.5.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 6.

2) In step e), the response from the UE shall be on either Cell 2 or 3. The displayed PLMN shall be the one associated with the cell on which the response was received.

3) In step g), the response from the UE shall be on either Cell 2 or 3 (excluding the cell in step 2). The displayed PLMN shall be the one associated with the cell on which the response was received.

### 6.1.1.6 Void

### 6.1.1.7 Cell reselection of ePLMN in manual mode

#### 6.1.1.7.1 Definition

Test to verify that the UE shall be able to reselect to a cell of another PLMN declared as equivalent PLMN to the registered PLMN in the manual mode.

#### 6.1.1.7.2 Conformance requirement

B) Manual network selection mode

Once the UE has registered on a PLMN selected by the user, the UE shall not automatically register on a different PLMN unless:

i) The new PLMN is declared as an equivalent PLMN by the registered PLMN;

or,

ii) The user selects automatic mode.

References:

TS 22.011 clause 3.2.2.2B

6.1.1.7.3 Test purpose

To verify that in Manual Network Selection Mode Procedure, the UE can perform cell reselection to an equivalent PLMN.

6.1.1.7.4 Method of test

Initial conditions

The UE is in manual PLMN selection mode and has successfully selected a PLMN in manual PLMN selection mode.

Cell_selection_and_reselection_quality_measure is CPICH_RSCP (FDD).

All Radio Access Technology USIM fields and cells are UTRAN.

Each cell shall include the other cells as neighbouring cells in System Information Block Type 11.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | -78 | -69 | 1 | PLMN 1 |
| Cell 4 | -62 | -54 | 2 | PLMN 2 |
| Cell7 | -68 | -64 | 3 | PLMN 3 |

Values of the system information fields applicable for this test case.to fullfill the criteria of Cell-Reselecton

| Parameter | Setting |
|---|---|
| IMSI attach/detach | Method A, B: Not allowed<br>Method C: Allowed |
| Cell_selection_and_reselection_quality_measure | CPICH RSCP (FDD) |
| Qqualmin (FDD only) | -16 dB |
| Qrxlevmin (FDD) | -115 dBm |
| Qrxlevmin (TDD) | -103 dBm |
| DRX cycle length | 1,28 s |

PLMN1 is the HPLMN.

UE is previously registered on PLMN1, before switched off.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{LOCI}$ | | PLMN 1 |

Test procedure

a) The SS activates cells 1.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) A Location Update Accept message shall be sent on reception of a Location Update message from the UE. The Location Update Accept message shall include PLMN3 in the equivalent PLMN list. For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure. In these cases, the GMM Attach Accept message shall include PLMN3 in the equivalent PLMN list.

e) Cell 4 and 7 are activated.

#### 6.1.1.7.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 1.

2) In step e), the UE shall perform a cell reselection and Location Update or Routing Area Update to PLMN 3, which is equivalent to PLMN1.

### 6.1.1.8 PLMN selection in shared network environment, Automatic mode

#### 6.1.1.8.1 Definition

Test to verify that when operating in automatic PLMN selection mode in shared network environment, the UE selects PLMNs in a prioritized order according to TS 23.122. Forbidden PLMNs shall not be selected. RPLMN shall be selected at switch-on, otherwise the list shall include in priority order HPLMN, User-PLMN and Operator-PLMN. The last priority in the list is "Other PLMN/access technology combinations" which is not included in this test.

Only UTRAN cells and a UE equipped with a USIM with Radio Access Technology fields set to UTRAN are considered.

#### 6.1.1.8.2 Conformance requirement

1. At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see TS 23.122, clause 4.5.2) attempts to perform a Location Registration.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows either Automatic or Manual Network Selection Mode Procedure depending on its operating mode.

2. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMNs, if available and allowable in the following order:

   2.1 HPLMN (if not previously selected);

   2.2 Each PLMN in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.3 Each PLMN in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.4 Other PLMN/access technology combinations with received high quality signal in random order;

   2.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If registration cannot be achieved because no PLMNs are available and allowable, the MS indicates "no service" to the user, waits until a new PLMN is available and allowable and then repeats the procedure.

   If there were one or more PLMNs which were available and allowable, but an LR failure made registration on those PLMNs unsuccessful or an entry in the "forbidden LAs for regional provision of service" list prevented a registration attempt, the MS selects the first such PLMN again and enters a limited service state.

3. If a "PLMN not allowed" message is received by an MS in response to an LR request from a VPLMN, that VPLMN is added to a list of "forbidden PLMNs" in the SIM and thereafter that VPLMN will not be accessed by the MS when in automatic mode. A PLMN is removed from the "forbidden PLMNs" list if, after a subsequent manual selection of that PLMN, there is a successful LR. This list is retained when the MS is switched off or the SIM is removed. The HPLMN shall not be stored on the list of "forbidden PLMNs".

References

1. TS 23.122, clause 4.4.3.1.

2. TS 23.122, clause 4.4.3.1.1.

3. TS 23.122, clause 3.1.

NOTE: TS 31.102 defines the USIM fields.

#### 6.1.1.8.3 Test purpose

1. To verify that if available, the RPLMN is selected at switch-on.
2. To verify that in Automatic Network Selection Mode, the UE selects the RPLMN, HPLMN, UPLMN and OPLMN in a prioritized order.
3. To verify that forbidden PLMNs are not selected.

For all paragraphs above, it is verified that the UE behaves in accordance with the core specification TS 23.122 when operating in shared network environment. Independence of RF level is also implicitly tested.

#### 6.1.1.8.4 Method of test

Initial conditions

System Simulator:

Cell levels are from table 6.3 (Band I).

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | Test Channel |
|---|---|---|
| Cell 1 | -65 | 1 |
| Cell 3 | -70 | 2 |
| Cell 5 | -80 | 3 |
| Cell 6 | -85 | 4 |

The reference system configuration from TS34.108 clause 6.1 are used in all cells, with modifications in the Master Information Block according to the table below.

| | |
|---|---|
| - MIB value tag | Set to (Current MIB value tag + 1) |
| - Supported PLMN types | |
| - PLMN type | GSM-MAP |
| - PLMN identity | |
| - MCC digit | See table below |
| - MNC digit | See table below |
| - Multiple PLMN List | |
| - MIB PLMN Identity | See table below |
| - Multiple PLMNs (1) | |
| - MCC | See table below |
| - MNC | See table below |
| - Multiple PLMNs (2) | |
| - MCC | See table below |
| - MNC | See table below |

The MIB PLMN Identity, PLMN codes and LAC broadcasted on the BCCH in each cell shall be configured as defined in the table below.

| Cell | MIB PLMN Identity | PLMN Identity | | Multiple PLMNs (1) | | Multiple PLMNs (2) | | LAC |
|---|---|---|---|---|---|---|---|---|
| | | MCC digits | MNC digits | MCC digits | MNC digits | MCC digits | MNC digits | |
| 1 | FALSE | PLMN 5 | PLMN 5 | PLMN 10 | PLMN 10 | PLMN 6 | PLMN 6 | X |
| 3 | TRUE | PLMN 5 | PLMN 5 | - | PLMN 9 | - | PLMN 7 | X |
| 5 | FALSE | PLMN 5 | PLMN 5 | - | PLMN 1 | - | PLMN 7 | X |
| 6 | FALSE | PLMN 5 | PLMN 5 | - | PLMN 1 | - | PLMN 2 | X |
| NOTE: the "–" (dash) denotes "not present", and "X" denotes "any value" | | | | | | | | |

The definition of each PLMN code is found in table below.

| PLMN | MCC digit | | | MNC digit | | |
|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 1 | 2 | 3 |
| 1 | 0 | 0 | 1 | 0 | 1 | - |
| 2 | 0 | 0 | 1 | 0 | 2 | - |
| 3 | 0 | 0 | 1 | 0 | 3 | - |
| 4 | 0 | 0 | 1 | 0 | 4 | - |
| 5 | 0 | 0 | 1 | 0 | 5 | - |
| 6 | 0 | 0 | 1 | 0 | 6 | - |
| 7 | 0 | 0 | 1 | 0 | 7 | - |
| 8 | 0 | 0 | 1 | 0 | 8 | - |
| 9 | 0 | 0 | 1 | 0 | 9 | - |
| 10 | 0 | 0 | 2 | 1 | 0 | - |

NOTE: "–" (dash) denotes "not present"

UE:

The UE is in automatic PLMN selection mode, and equipped with a USIM containing default values except for those listed below. All Radio Access Technology USIM fields are UTRAN.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{PLMNwAcT}$ | 1st | PLMN 7 |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 5 |
| | 2nd | PLMN 6 |
| $EF_{FPLMN}$ | PLMN 7 | |

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

UE is previously registered on PLMN2, before switched off.

Test procedure:

Method C is applied.

a) The SS activates all cells and monitors the cells for random access requests from the UE

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) Cell 6 is switched off.

e) The SS waits for random access requests from the UE.

f) Cell 5 is switched off.

g) The SS waits for random access requests from the UE.

h) Cell 3 is switched off.

i) The SS waits for random access requests from the UE.

j) Cell 1 is switched off.

#### 6.1.1.8.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 6. The displayed PLMN shall be PLMN 2.

2) In step e), the response from the UE shall be on Cell 5. The displayed PLMN shall be PLMN 1.

3) In step g), the response from the UE shall be on Cell 3. The displayed PLMN shall be PLMN 5.

4) In step i), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 6.

5) After step j), the UE shall inform that no service or no network is available.

### 6.1.1.9 PLMN selection in shared network environment, Manual Mode

#### 6.1.1.9.1 Definition

Test to verify that the UE can present the available PLMNs in priority order to the user when asked to do so in manual mode and that the displayed PLMNs can be selected / reselected by the user. The test is performed in shared network environment. All PLMNs shall be displayed in the list, including forbidden PLMNs and PLMNs in the “Multiple PLMN list”. If available, the RPLMN shall be selected at switch-on, otherwise the displayed list shall include in priority order HPLMN, User-PLMN, Operator-PLMN and "Other PLMN/access technology combinations. Only UTRAN cells and a UE equipped with a USIM with Radio Access Technology fields set to UTRAN are considered.

#### 6.1.1.9.2 Conformance requirement

1. At switch on or recovery from lack of coverage

   At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see clause 4.5.2) attempts to perform a Location Registration.

   EXCEPTION: In A/Gb mode an MS with voice capability, shall not search for CPBCCH carriers. In A/Gb mode an MS not supporting packet services shall not search for CPBCCH carriers.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows one of the following two procedures depending on its operating mode.

   EXCEPTION: If registration is not possible on recovery from lack of coverage due to the registered PLMN being unavailable, a MS attached to GPRS services may, optionally, continue looking for the registered PLMN for an implementation dependent time.

   NOTE: A MS attached to GPRS services should use the above exception only if one or more PDP contexts are currently active.

2. Manual Network Selection Mode Procedure:

   The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS. An MS which supports GSM COMPACT shall also indicate GSM COMPACT PLMNs (which use PBCCH).

   If displayed, PLMNs meeting the criteria above are presented in the following order:

   i)- HPLMN;

   ii)- PLMN/access technology combinations contained in the " User Controlled PLMN Selector with Access Technology " data file in the SIM (in priority order);

   iii)- PLMN/access technology combinations contained in the "Operator Controlled PLMN Selector with Access Technology" data file in the SIM (in priority order);

   iv)- other PLMN/access technology combinations with received high quality signal in random order;

   v)- other PLMN/access technology combinations in order of decreasing signal quality.

   In ii and iii, an MS using a SIM without access technology information storage (i.e. the "User Controlled PLMN Selector with Access Technology" and the "Operator Controlled PLMN Selector with Access Technology" data files are not present) shall instead present the PLMNs contained in the "PLMN Selector" data file in the SIM (in priority order).

   In v, requirement h) in clause 4.4.3.1.1 applies.

   In GSM COMPACT, the non support of voice services shall be indicated to the user.

The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

Once the UE has registered on a PLMN selected by the user, the UE shall not automatically register on a different PLMN unless:

i) the new PLMN is declared as an equivalent PLMN by the registered PLMN; or

ii) the user selects automatic mode.

NOTE 1: It is an MS implementation option whether to indicate access technologies to the user. If the MS does display access technologies, then the access technology used should be the access technology chosen by the user for that PLMN. If the MS does not display access technologies, then the access technology chosen for a particular PLMN should be the highest priority available access technology for that PLMN, if the associated access technologies have a priority order.

If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

NOTE 2: High quality signal is defined in the appropriate AS specification.

3. If a "PLMN not allowed" message is received by an MS in response to an LR request from a VPLMN, that VPLMN is added to a list of "forbidden PLMNs" in the SIM and thereafter that VPLMN will not be accessed by the MS when in automatic mode. A PLMN is removed from the "forbidden PLMNs" list if, after a subsequent manual selection of that PLMN, there is a successful LR. This list is retained when the MS is switched off or the SIM is removed. The HPLMN shall not be stored on the list of "forbidden PLMNs".

References

1. TS 23.122, clause 4.4.3.1
2. TS 23.122, clause 4.4.3.1.2
3. TS 23.122, clause 3.1.

NOTE: TS 31.102 defines the USIM fields.

#### 6.1.1.9.3 Test purpose

1. To verify that all PLMNs broadcasted in the IEs “Multiple PLMN list” are displayed to the user in Manual Selection Mode, even if present in the “forbidden PLMNs” list on the USIM.
2. To verify that the PLMN in the IE “PLMN Identity” is displayed/not displayed according to the value of the IE “MIB PLMN Identity”.
3. To verify that it is possible to select any PLMN on the displayed list, and that the UE subsequently attempts to register on the selected PLMN.
4. To verify that the UE in general behaves according to TS 23.122 in Shared Network environment (Manual Mode).

6.1.1.9.4 Method of test

Initial conditions

Cell levels are from table 6.3. (FDD).

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | Test Channel |
|---|---|---|
| Cell 1 | -85 | 1 |
| Cell 2 | -80 | 2 |
| Cell 3 | -75 | 3 |
| Cell 4 | -70 | 4 |

The reference system configuration from TS34.108 clause 6.1 are used in all cells, with the following modifications:

Master Information Block

| | |
|---|---|
| - MIB value tag | Set to (Current MIB value tag + 1) |
| - Supported PLMN types | |
| - PLMN type | GSM-MAP |
| - PLMN identity | |
| - MCC digit | See table below |
| - MNC digit | See table below |
| - Multiple PLMN List | |
| - MIB PLMN Identity | See table below |
| - Multiple PLMNs (1) | |
| - MCC | See table below |
| - MNC | See table below |
| - Multiple PLMNs (2) | |
| - MCC | See table below |
| - MNC | See table below |

The MIB PLMN Identity and PLMN codes broadcasted on the BCCH in each cell shall be configured as defined in the table below.

| Cell | MIB PLMN Identity | PLMN Identity | | Multiple PLMNs (1) | | Multiple PLMNs (2) | |
|---|---|---|---|---|---|---|---|
| | | MCC digits | MNC digits | MCC digits | MNC digits | MCC digits | MNC digits |
| 1 | FALSE | PLMN 3 | PLMN 3 | - | PLMN 2 | - | PLMN 4 |
| 2 | FALSE | PLMN 4 | PLMN 4 | - | PLMN 3 | - | PLMN 1 |
| 3 | FALSE | PLMN 5 | PLMN 5 | - | PLMN 3 | - | PLMN 4 |
| 4 | TRUE | PLMN 4 | PLMN 4 | PLMN 5 | PLMN 5 | PLMN 6 | PLMN 6 |

The definition of each PLMN code is found in table below.

| PLMN | MCC digit | | | MNC digit | | |
|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 1 | 2 | 3 |
| 1 | 0 | 0 | 1 | 0 | 1 | - |
| 2 | 0 | 0 | 1 | 0 | 2 | - |
| 3 | 0 | 0 | 1 | 0 | 3 | - |
| 4 | 0 | 0 | 1 | 0 | 4 | - |
| 5 | 0 | 0 | 1 | 0 | 5 | - |
| 6 | 0 | 0 | 2 | 0 | 6 | - |

NOTE: "–" (dash) denotes "not present"

The UE is in manual PLMN selection mode and equipped with a USIM containing default values except for those listed below. The UE has successfully selected a PLMN in manual PLMN selection mode. All Radio Access Technology USIM fields are set to UTRAN. The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{PLMNwAcT}$ | 1st | PLMN 3 |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 4 |
| | 2nd | PLMN 5 |
| $EF_{FPLMN}$ | PLMN 5 | |

UE is previously registered on PLMN2, before switched off.

Test procedure

Method C is applied.

a) The SS activates cells 1-4 and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) Cell 1 is switched off.

e) PLMN 1 (HPLMN) shall be selected when the PLMN list is presented.

f) The SS waits for random access requests from the UE.

g) Cell 2 is switched off.

h) PLMN 3 shall be selected when the PLMN list is presented.

i) The SS waits for random access requests from the UE.

j) Cell 3 is switched off.

k) PLMN 5 shall be selected when the PLMN list is presented.

l) The SS waits for random access requests from the UE.

m) Cell 4 is switched off.

#### 6.1.1.9.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 2.

2) In step e), the list shall be presented. The priority shall be as follows: PLMN 1, PLMN 3, PLMN 4, PLMN 5, PLMN 6.

3) In step f), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN 1.

4) In step h), the list shall be presented. The priority shall be as follows: PLMN 3, PLMN 4, PLMN 5, PLMN 6.

6) In step i), the response from the UE shall be on Cell 3. The displayed PLMN shall be PLMN 3.

7) In step k), the list shall be presented. The priority shall be as follows: PLMN 4, PLMN 5, PLMN 6.

8) In step l), the response from the UE shall be on Cell 4. The displayed PLMN shall be PLMN 5.

9) After step m), the UE shall inform that no network belonging to PLMN 1 to 6 is available.

### 6.1.1.10 Presentation of additional information during PLMN selection; Manual mode

#### 6.1.1.10.1 Definition

Test to verify that in Manual Network Selection Mode, the UE displays additional information about the available PLMNs.

#### 6.1.1.10.2 Conformance requirement

The HPLMN may provide on the SIM additional information on the available PLMNs. If this information is provided then the MS shall indicate it to the user. This information, provided as free text may include:

- preferred partner,
- roaming agreement status,
- supported services

Furthermore, the MS may indicate whether the available PLMNs are present on the EHPLMN list, the Forbidden list, the User Controlled PLMN List or the Operator Controlled PLMN List. The MS may also indicate that the PLMN is not present on any of these lists.

References

1. TS 23.122, clause 4.4.3.1.2.

#### 6.1.1.10.3 Test purpose

To verify that in manual network selection mode if additional information is available on the SIM/USIM about the available PLMNs that information is displayed to the user.

#### 6.1.1.10.4 Method of test

Initial conditions

The UE is in automatic PLMN selection mode.

"IMSI attach" flag in the BCCH is set to allowed.

Cell levels are from table 6.3 for FDD and from table 6.4 for TDD.

All Radio Access Technology USIM fields and cells are UTRAN.

In the System Information broadcast in each cell, the neighbouring cell list does not contain any cell belonging to the other PLMN's.

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | -60 | -54 | 1 | PLMN 1 |
| Cell 2 | -65 | -59 | 2 | PLMN 2 |
| Cell 4 | -75 | -69 | 3 | PLMN 4 |
| Cell 5 | -80 | -74 | 4 | PLMN 5 |

UE is previously registered on PLMN1 before switched off.

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{PLMNwAcT}$ | 1st | PLMN 2 |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 5 |
| $EF_{FPLMN}$ | 1st | PLMN 4 |

Contents of $EF_{OPL}$:

| Location Area Identity | PLMN Network Name Record Identifier |
|---|---|
| MCC and MNC of PLMN1+all LAC* | 1 |
| MCC and MNC of PLMN2+all LAC* | 2 |
| MCC and MNC of PLMN4+all LAC* | 3 |
| MCC and MNC of PLMN5+all LAC* | 4 |
| *A value of '0000' stored in bytes 4 to 5 and a value of 'FFFE' stored in bytes 6 to 7 shall be used to indicate the entire range of LACs for the given PLMN. | |

Contents of $EF_{PNN}$:

| Record order | Full name for network | Short name for network | PLMN Additional Information |
|---|---|---|---|
| 1st | Test network PLMN1 | PLMN1 | PLMN1 offers voice call, SMS and PS data services. |
| 2nd | Test network PLMN2 | PLMN2 | PLMN2 offers voice call services. |
| 3rd | Test network PLMN4 | PLMN4 | [field is empty] |
| 4th | Test network PLMN5 | PLMN5 | PLMN5 offers PS data services. |

The $EF_{EHPLMN}$ list is empty.

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

Related ICS/IXIT statements

Indicating whether a PLMN is present on a PLMN list stored on the USIM Yes/No

Presentation of indication of PLMN Additional Information

Test procedure

Method C is applied.

a) The SS activates 4 cells and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The UE is switched to manual network selection mode and it is made to display the available PLMNs

e) The user selects PLMN2

f) The SS waits for random access requests from the UE.

### 6.1.1.10.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 1.

2) In step d) the UE shall indicate:
- For PLMN1 the UE shall indicate that “PLMN1 offers voice call, SMS and PS data services.”.
- For PLMN2 the UE shall indicate that “PLMN2 offers voice call services.”.
If the UE supports “Indicating whether a PLMN is present on a PLMN list stored on the USIM” the UE shall indicate that PLMN2 is present on the the User Controlled PLMN List.
- If the UE supports “Indicating whether a PLMN is present on a PLMN list stored on the USIM” the UE shall indicate that PLMN4 is present on the Forbidden list.
-For PLMN5 the UE shall indicating that “PLMN5 offers PS data services.”.
If the UE supports “Indicating whether a PLMN is present on a PLMN list stored on the USIM” the UE shall indicate that PLMN5 is present on the Operator Controlled PLMN List.

3) In step f), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN 2.

## 6.1.1.11 Steering of Roaming

### 6.1.1.11.1 Definition

Test to verify that in Automatic Network Selection Mode, the UE selects PLMNs in the correct order according to the parameters provided by both the USIM and Steering of Roaming procedure.

### 6.1.1.11.2 Conformance requirement

If the MS receives a USAT REFRESH command qualifier (3GPP 31.111) of type "Steering of Roaming", the MS shall:

a) replace the highest priority entries in the "Operator Controlled PLMN Selector with Access Technology" list with the list provided in the REFRESH command;

b) delete the PLMNs identified by the list in the REFRESH command from the Forbidden PLMN list and from the Forbidden PLMNs for GPRS service list, if they are present in these lists. This includes any information stored in the SIM and the ME internal memory;

c) take the new information into account in subsequent attempts to access a higher priority PLMN; and

d) attempt to obtain service on a higher priority PLMN as specified in subclause 4.4.3.3 by acting as if timer T that controls periodic attempts has expired.

In order to avoid unnecessary signalling, the network operator should avoid repeatedly using steering of roaming of a particular MS.

#### References

TS 23.122, clause 4.4.6

NOTE: TS 31.102 defines the USIM fields.

### 6.1.1.11.3 Test purpose

1. To confirm that the UE respects the Preferred PLMN & Forbidden List in the USIM.

2. To confirm that the UE deletes a network from Forbidden Lists and selects that network if directed by a Steering of Roaming procedure.

3. To confirm that the UE selects a network of lower priority if directed by a Steering of Roaming procedure.

4. To confirm correct updating of USIM in consequence to the Steering of Roaming procedure.

### 6.1.1.11.4 Method of test

#### Initial conditions

The UE is in automatic PLMN selection mode.

Cell levels are from table 6.3 for FDD and from table 6.4 for TDD.

All Radio Access Technology USIM fields and cells are UTRAN.

In the System Information broadcast in each cell, the neighbouring cell list does not contain any cell belonging to the other PLMN's.

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | -60 | -54 | 1 | PLMN 2 |
| Cell 2 | -65 | -59 | 2 | PLMN 4 |
| Cell 3 | -70 | -64 | 3 | PLMN 3 |

The UE is equipped with a USIM containing default values except for those listed below (steps a – c).

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{OPLMNwAcT}$ | 1st | PLMN 2 |
| | 2nd | PLMN 3 |
| | 3rd | PLMN 4 |
| $EF_{FPLMN}$ | PLMN 2 | |

The HPLMN (MCC+MNC) of the IMSI for USIM is set to PLMN 1.

Test procedure

Method C is applied.

a) The SS activates all 3 cells and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The SS sends an SMS to the UE with USAT REFRESH command qualifier of type "Steering of Roaming" and containing PLMN 2 as parameter.

e) The SS waits for random access requests from the UE.

f) The UE is switched off.

g) The UE is switched on.

h) The SS waits for random access requests from the UE.

i) The SS sends an SMS to the UE with USAT REFRESH command qualifier of type "Steering of Roaming" and containing PLMN 4 and PLMN 3 as parameter.

j) The SS waits for random access requests from the UE.

k) Cell 2 is switched off.

l) The SS waits for random access requests from the UE.

m) The UE is switched off.

n) Cell 2 is switched on.

o) The UE is switched on.

p) The SS waits for random access requests from the UE.

#### 6.1.1.11.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 3. The displayed PLMN shall be PLMN 3

2) In step e), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 2.

3) In step h), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 2

4) In step j), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN 4.

5) In step l), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN 3

6) In step p), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN 3.

### 6.1.1.12 Displaying EHPLMNs in manual mode

#### 6.1.1.12.1 Definition

Test to verify that in Manual Network Selection Mode, the UE is able to display HPLMN and EHPLMNs in the correct order according to the parameters provided by the USIM.

#### 6.1.1.12.2 Conformance requirement

1. The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS. An MS which supports GSM COMPACT shall also indicate GSM COMPACT PLMNs (which use PBCCH).

If displayed, PLMNs meeting the criteria above are presented in the following order:

i)- either the HPLMN (if the EHPLMN list is not present or is empty) or, if one or more of the EHPLMNs are available then based on an optional data field on the SIM either only the highest priority available EHPLMN is to be presented to the user or all available EHPLMNs are presented to the user in priority order. If the data field is not present on the SIM, then only the highest priority available EHPLMN is presented;

…

2. If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows one of the following two procedures depending on its PLMN selection operating mode. At switch on, if the MS provides the optional feature of user preferred PLMN selection operating mode at switch on then this operating mode shall be used.

EXCEPTION: At switch on, if the MS is in manual mode and neither registered PLMN nor PLMN that is equivalent to it is available but EHPLMN is available, then instead of performing the manual network selection mode procedure of clause 4.4.3.1.2 the MS may select and attempt registration on the highest priority EHPLMN. If the EHPLMN list is not available or is empty and the HPLMN is available, then the MS may select and attempt registration on the HPLMN. The MS shall remain in manual mode.

NOTE 1: If successful registration is achieved, then the current serving PLMN becomes the registered PLMN and the MS does not store the previous registered PLMN for later use.

References

1. TS 23.122, clause 4.4.3.1.2

2. TS 23.122, clause 4.4.3.1

NOTE: TS 31.102 defines the USIM fields.

#### 6.1.1.12.3 Test purpose

1. To confirm that if the $EF_{EHPLMN}$ (Equivalent HPLMN) data field on the USIM is present but there are no EHPLMNs available, only the HPLMN is displayed.

2. To confirm that if EHPLMNs are available and the $EF_{EHPLMN}$ (Equivalent HPLMN) data field on the USIM is present then depending on the USIM settings of $EF_{EHPLMNPI}$ (Equivalent HPLMN Presentation Indication) either all available EHPLMNs are displayed in priority order or only the highest priority EHPLMN is displayed.

3. To confirm that if EHPLMNs are available but the $EF_{EHPLMNPI}$ (Equivalent HPLMN Presentation Indication) data field on the USIM is not present, only the highest priority EHPLMN is displayed.

#### 6.1.1.12.4 Method of test

Initial conditions

The UE is in manual PLMN selection mode.

Cell levels are from table 6.3 for FDD and from table 6.4 for TDD.

All Radio Access Technology USIM fields and cells are UTRAN.

In the System Information broadcast in each cell, the neighbouring cell list does not contain any cell belonging to the other PLMN's.

Steps a) – e)

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | off | off | 1 | PLMN 3 |
| Cell 2 | off | off | 2 | PLMN 2 |
| Cell 3 | -70 | -64 | 3 | PLMN 1 |
| Cell 4 | off | off | 4 | PLMN 4 |

Steps f) – t)

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | -60 | -54 | 1 | PLMN 3 |
| Cell 2 | -65 | -59 | 2 | PLMN 2 |
| Cell 3 | -70 | -64 | 3 | PLMN 1 |
| Cell 4 | -75 | -69 | 4 | PLMN 4 |

The UE is equipped with a USIM A containing default values except for those listed below (steps a – h).

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{EHPLMN}$ | 1st | PLMN 4 |
| | 2nd | PLMN 2 |
| | 3rd | PLMN 1 |
| $EF_{UST}$ | Service n°71 Equivalent HPLMN and Service n°73 Equivalent HPLMN Presentation Indication available | |
| $EF_{EHPLMNPI}$ | '02' - Display all the available EHPLMNs | |

The UE is equipped with a USIM B containing default values except for those listed below (steps i – l).

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{EHPLMN}$ | 1st | PLMN 2 |
| | 2nd | PLMN 3 |
| | 3rd | PLMN 1 |
| $EF_{UST}$ | Service n°71 Equivalent HPLMN and Service n°73 Equivalent HPLMN Presentation Indication available | |
| $EF_{EHPLMNPI}$ | '01' - Display the highest-priority available EHPLMN only | |

The UE is equipped with a USIM C containing default values except for those listed below (steps m – o).

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{EHPLMN}$ | 1st | PLMN 3 |
| | 2nd | PLMN 4 |
| | 3rd | PLMN 1 |
| $EF_{UST}$ | Service n°71 Equivalent HPLMN available | |
| $EF_{EHPLMNPI}$ | Not present | |

The HPLMN (MCC+MNC) of the IMSI for USIM is set to PLMN 1 (steps a – p).

UE is previously registered on PLMN5, before switched off.

Test procedure

Method C is applied.

a) The SS activates 1 cell and monitors the cells for random access requests from the UE.

b) The UE is switched on, equipped with USIM A.

c) The SS waits to see if there are any random access requests from the UE. The UE is made to display the available PLMNs. If not yet selected, the UE is made to select the available PLMN.

d) The SS waits for random access requests from the UE, if not done in step c).

e) The SS activates all 4 cells and monitors the cells for random access requests from the UE.

f) The UE is made to display the available PLMNs. The UE is made to select the highest priority EHPLMN.

g) The SS waits for random access requests from the UE.

h) The UE is switched off.

i) The UE is switched on, equipped with USIM B, UE is previously registered to PLMN5 to assign $EF_{LOCI}$.

j) The SS waits to see if there are any random access requests from the UE. The UE is made to display the available PLMNs. If not yet selected, the UE is made to select the displayed EHPLMN.

k) The SS waits for random access requests from the UE, if not done in step j).

l) The UE is switched off.

m) The UE is switched on, equipped with USIM C, UE is previously registered to PLMN5 to assign $EF_{LOCI}$.

n) The SS waits to see if there are any random access requests from the UE. The UE is made to display the available PLMNs. If not yet selected, the UE is made to select the displayed EHPLMN.

o) The SS waits for random access requests from the UE, if not done in step n).

p) The UE is switched off.

### 6.1.1.12.5 Test Requirements

1) In step c), the UE shall indicate that only PLMN 1 is available.

2) If UE supports “Exception to manual network selection mode at switch-on” the response from UE shall come in step c) otherwise the response from UE shall come in step d). In both cases, the response from the UE shall be on Cell 3. The displayed PLMN shall be PLMN 1.

3) In step f), the UE shall indicate that PLMN 4, PLMN 2, PLMN 1 and PLMN 3 (non-EHPLMN) are available in this priority order.

4) In step g), the response from the UE shall be on Cell 4. The displayed PLMN shall be PLMN 4.

5) In step j), the UE shall indicate that PLMN 2 and PLMN 4 (non-EHPLMN) are available in this priority order.

6) If UE supports “Exception to manual network selection mode at switch-on” the response from UE shall come in step j) otherwise the response from UE shall come in step k). In both cases, the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN 2.

7) In step n), the UE shall indicate that PLMN 3 and PLMN 2 (non-EHPLMN) are available in this priority order.

8) If UE supports “Exception to manual network selection mode at switch-on” the response from UE shall come in step n) otherwise the response from UE shall come in step o). In both cases, the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 3.

## 6.1.1.13 PLMN selection of RPLMN or (E)HPLMN; Automatic mode

### 6.1.1.13.1 Definition

Test to verify that in Automatic Network Selection Mode, the UE selects PLMNs in the correct order according to the setting of $EF_{LRPLMNSI}$. If $EF_{LRPLMNSI}$ is available and the field is set to "01", at switch-on the UE shall select the HPLMN (if EHPLMN list is empty or not present), or the highest priority EHPLMN among the available ones, in priority over the last RPLMN. If $EF_{LRPLMNSI}$ is set to "00" the last RPLMN shall be selected at switch-on.

### 6.1.1.13.2 Conformance requirement

1. Equivalent HPLMN list: To allow provision for multiple HPLMN codes, PLMN codes that are present within this list shall replace the HPLMN code derived from the IMSI for PLMN selection purposes. This list is stored on the USIM and is known as the EHPLMN list. The EHPLMN list may also contain the HPLMN code derived from the IMSI. If the HPLMN code derived from the IMSI is not present in the EHPLMN list then it shall be treated as a Visited PLMN for PLMN selection purposes.

2. At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see TS 23.122, clause 4.5.2) attempts to perform a Location Registration.

   EXCEPTION: As an alternative option to this, if the MS is in automatic network selection mode and it finds coverage of an EHPLMN, the MS may register to the highest priority EHPLMN available and not return to the registered PLMN. If the EHPLMN list is not present or is empty, and the HPLMN is available, the MS may register on the HPLMN and not return to the registered PLMN. The operator shall be able to control by SIM configuration whether an MS that supports this option shall perform this alternative behaviour.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows one of the following two procedures depending on its PLMN selection operating mode. At switch on, if the MS provides the optional feature of user preferred PLMN selection operating mode at switch on then this operating mode shall be used.

3. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMNs, if available and allowable in the following order:

   i) either the HPLMN (if the EHPLMN list is not present or is empty) or the highest priority EHPLMN that is available (if the EHPLMN list is present) ;

   ii) Each PLMN/access technology combination in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   iii) Each PLMN/access technology combination in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   iv) Other PLMN/access technology combinations with received high quality signal in random order;

   v) Other PLMN/access technology combinations in order of decreasing signal quality.

   ...

   If successful registration is achieved, the MS indicates the selected PLMN.

   If registration cannot be achieved because no PLMNs are available and allowable, the MS indicates "no service" to the user, waits until a new PLMN is available and allowable and then repeats the procedure.

   If there were one or more PLMNs which were available and allowable, but an LR failure made registration on those PLMNs unsuccessful or an entry in any of the lists "forbidden LAs for roaming", or "forbidden LAs for regional provision of service" prevented a registration attempt, the MS selects the first such PLMN again and enters a limited service state.

References

1. TS 23.122, clause 1.2
2. TS 23.122, clause 4.4.3.1.
3. TS 23.122, clause 4.4.3.1.1.

NOTE: TS 31.102 defines the USIM fields.

### 6.1.1.13.3 Test purpose

1. To verify that the highest priority EHPLMN of the available ones is selected at switch-on, if and only if $EF_{LRPLMNSI}$ = "01".

### 6.1.1.13.4 Method of test

Initial conditions

The UE is in automatic PLMN selection mode.

"IMSI attach" flag in the BCCH is set to allowed.

Cell levels are from table 6.3 for FDD and from table 6.4 for TDD.

All Radio Access Technology USIM fields and cells are UTRAN.

In the System Information broadcast in each cell, the neighbouring cell list does not contain any cell belonging to the other PLMN's.

Steps a) – d) and i)-k)

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | -60 | -54 | 1 | PLMN 2 |
| Cell 2 | -65 | -59 | 2 | PLMN 1 |
| Cell 4 | -75 | -69 | 3 | PLMN 4 |
| Cell 5 | -80 | -74 | 4 | PLMN 5 |

Steps e) – h)

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | -60 | -54 | 1 | PLMN 2 |
| Cell 2 | off | off | 2 | PLMN 1 |
| Cell 4 | off | off | 3 | PLMN 4 |
| Cell 5 | off | off | 4 | PLMN 5 |

The UE is equipped with a USIM containing default values except for those listed below.

USIM A

| USIM field | LRPLMNSI |
|---|---|
| $EF_{LRPLMNSI}$ | 01 |

USIM B

| USIM field | LRPLMNSI |
|---|---|
| $EF_{LRPLMNSI}$ | 00 |

USIM A & USIM B

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{EHPLMN}$ | 1st | PLMN 5 |
| $EF_{EHPLMN}$ | 2nd | PLMN 4 |

The HPLMN (MCC+MNC) of the IMSI for USIM A and USIM B is set to PLMN1.

UE with USIM A is previously registered on PLMN2, before switched off.

Test procedure

Method C is applied.

a) The SS activates all 4 cells and monitors the cells for random access requests from the UE.

b) The UE is switched on with a USIM setting according to USIM-A inserted.

c) The SS waits for random access requests from the UE.

d) The UE is switched off and a USIM with settings according to USIM B is inserted.

e) The SS deactivates cells 2,4 and 5 and monitors cell 1 for random access requests from the UE.

f) The UE is switched on.

g) The SS waits for random access requests from the UE.

h) The UE is switched off.

i) The SS activates all 4 cells and monitors the cells for random access requests from the UE.

j) The UE is switched on.

k) The SS waits for random access requests from the UE.

#### 6.1.1.13.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 5. The displayed PLMN shall be PLMN 5.

2) In step g), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN2.

3) In step k), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN2.

### 6.1.1.14 Network selection mode at switch-on

#### 6.1.1.14.1 Definition

Test to verify that the UE uses the optional feature of user preferred PLMN selection operating mode at switch on.

#### 6.1.1.14.2 Conformance requirement

1. If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows one of the following two procedures depending on its PLMN selection operating mode. At switch on, if the MS provides the optional feature of user preferred PLMN selection operating mode at switch on then this operating mode shall be used.

The UE shall support both manual and automatic network selection mechanisms (modes). The UE shall select the last mode used, as the default mode, at every switch-on.

As an optional feature of the ME, the user shall be able to set a preference in the ME for the mode that shall be used at switch on. If set then the ME shall select this preference rather than the default mode.

NOTE: By defaulting to the last mode used, e.g. manual network selection, the undesired automatic selection of an adjacent PLMN instead of the desired HPLMN in border areas, can be avoided at switch-on.

The user shall be given the opportunity to change mode at any time.

Except as defined below, the MMI shall be at the discretion of the UE manufacturer.

The UE shall contain display functions by which Available PLMNs and the Selected PLMN can be indicated.

In shared networks a radio access network can be part of more than one PLMN. This shall be transparent to the user, i.e. the UE shall be able to indicate those PLMNs to the user, and the UE shall support network selection among those PLMNs, as in non-shared networks.

2. Manual Network Selection Mode Procedure:

   The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS.

   If displayed, PLMNs meeting the criteria above are presented in the following order:

   2.1 HPLMN;

   2.2 PLMNs contained in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.3 PLMNs contained in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.4 Other PLMN/access technology combinations with received high quality signal in random order;

   2.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

   If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

3. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMNs, if available and allowable in the following order:

   2.1 HPLMN (if not previously selected);

   2.2 Each PLMN in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.3 Each PLMN in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   2.4 Other PLMN/access technology combinations with received high quality signal in random order;

   2.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If registration cannot be achieved because no PLMNs are available and allowable, the MS indicates "no service" to the user, waits until a new PLMN is available and allowable and then repeats the procedure.

If there were one or more PLMNs which were available and allowable, but an LR failure made registration on those PLMNs unsuccessful or an entry in the "forbidden LAs for regional provision of service" list prevented a registration attempt, the MS selects the first such PLMN again and enters a limited service state.

References

1. TS 22.011, clause 3.2.1
2. TS 23.122, clause 4.4.3.1
3. TS 23.122, clause 4.4.3.1.1
4. TS 23.122, clause 3.4.3.1.2

NOTE: TS 31.102 defines the USIM fields.

### 6.1.1.14.3 Test purpose

1. To verify that the user is allowed to configure what network selection mode should be used at switch-on.
2. To verify that this information is not stored on the USIM.

### 6.1.1.14.4 Method of test

Initial conditions

"IMSI attach" flag in the BCCH is set to allowed.

Cell levels are from table 6.3 for FDD and from table 6.4 for TDD.

All Radio Access Technology USIM fields and cells are UTRAN.

In the System Information broadcast in each cell, the neighbouring cell list does not contain any cell belonging to the other PLMN's.

The UE is in manual PLMN selection mode.

The user set the optional feature "PLMN selection operation mode at switch on" to automatic network selection.

All Radio Access Technology USIM fields and cells are UTRAN.

Steps a) – e)

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 4 | -75 | -69 | 3 | PLMN 4 ~~(u)~~ |
| Cell 5 | -80 | -74 | 4 | PLMN 5 ~~(o)~~ |

Steps f) – j)

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 4 | OFF | OFF | 3 | PLMN 4 |
| Cell 5 | -80 | -74 | 4 | PLMN 5 |

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{LOCI}$ | | PLMN 2~~1~~2 |
| $EF_{PLMNwAcT}$ | 1st | PLMN 4 |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 5 |

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1 ~~2~~.

Related ICS/IXIT statement(s)

- UEs supporting NW selection mode at switch-on yes/no

Test procedure

Method C is applied.

a) The SS activates both 4 cells and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The UE is set to automatic NW selection mode, the optional feature “PLMN selection operation mode at switch on” is set to manual NW selection.

e) The UE is switched off

f) The SS deactivates cell 4 and monitors the cells for random access request from the UE.

g) The UE is switched on

h) The SS waits for random access requests from the UE.

#### 6.1.1.14.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 4. The displayed PLMN shall be PLMN4.

2) In step h), The UE does not send a response on any cell.

### 6.1.1.15 Exception in manual network selection mode when HPLMN is available at power-on

#### 6.1.1.15.1 Definition

Test to verify that UE in Manual Network Selection Mode at switch on, when neither the RPLMN nor any equivalent PLMN to the RPLMN is available then the UE may optional select the highest priority PLMN In the EHPLMN list or select the HPLMN if EHPLMN list is not available or empty.

#### 6.1.1.15.2 Conformance requirement

1. Equivalent HPLMN list: To allow provision for multiple HPLMN codes, PLMN codes that are present within this list shall replace the HPLMN code derived from the IMSI for PLMN selection purposes. This list is stored on the USIM and is known as the EHPLMN list. The EHPLMN list may also contain the HPLMN code derived from the IMSI. If the HPLMN code derived from the IMSI is not present in the EHPLMN list then it shall be treated as a Visited PLMN for PLMN selection purposes.

2. At switch on, or following recovery from lack of coverage, the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see clause 4.5.2) attempts to perform a Location Registration.

   …

   If successful registration is achieved, the MS indicates the selected PLMN.

   If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows one of the following two procedures depending on its PLMN selection operating mode. At switch on, if the MS provides the optional feature of user preferred PLMN selection operating mode at switch on then this operating mode shall be used.

   EXCEPTION: At switch on, if the MS is in manual mode and neither registered PLMN nor PLMN that is equivalent to it is available but EHPLMN is available, then instead of performing the manual network selection mode procedure of clause 4.4.3.1.2 the MS may select and attempt registration on the highest priority EHPLMN.

If the EHPLMN list is not available or is empty and the HPLMN is available, then the MS may select and attempt registration on the HPLMN. The MS shall remain in manual mode.

NOTE 1: If successful registration is achieved, then the current serving PLMN becomes the registered PLMN and the MS does not store the previous registered PLMN for later use.

3. Manual Network Selection Mode Procedure:

The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS. An MS which supports GSM COMPACT shall also indicate GSM COMPACT PLMNs (which use PBCCH).

If displayed, PLMNs meeting the criteria above are presented in the following order:

i)- either the HPLMN (if the EHPLMN list is not present or is empty) or, if one or more of the EHPLMNs are available then based on an optional data field on the SIM either only the highest priority available EHPLMN is to be presented to the user or all available EHPLMNs are presented to the user in priority order. If the data field is not present on the SIM, then only the highest priority available EHPLMN is presented;

ii)- PLMN/access technology combinations contained in the " User Controlled PLMN Selector with Access Technology " data file in the SIM (in priority order);

iii)- PLMN/access technology combinations contained in the "Operator Controlled PLMN Selector with Access Technology" data file in the SIM (in priority order);

iv)- other PLMN/access technology combinations with received high quality signal in random order;

v)- other PLMN/access technology combinations in order of decreasing signal quality.

In ii and iii, an MS using a SIM without access technology information storage (i.e. the "User Controlled PLMN Selector with Access Technology" and the "Operator Controlled PLMN Selector with Access Technology" data files are not present) shall instead present the PLMNs contained in the "PLMN Selector" data file in the SIM (in priority order).

In v, requirement h) in clause 4.4.3.1.1 applies.

In GSM COMPACT, the non support of voice services shall be indicated to the user.

The HPLMN may provide on the SIM additional information on the available PLMNs. If this information is provided then the MS shall indicate it to the user. This information, provided as free text may include:

- preferred partner,
- roaming agreement status,
- supported services

Furthermore, the MS may indicate whether the available PLMNs are present on the EHPLMN list, the Forbidden list, the User Controlled PLMN List or the Operator Controlled PLMN List. The MS may also indicate that the PLMN is not present on any of these lists.

The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

Once the UE has registered on a PLMN selected by the user, the UE shall not automatically register on a different PLMN unless:

i) the new PLMN is declared as an equivalent PLMN by the registered PLMN; or

ii) the user selects automatic mode.

NOTE 1: It is an MS implementation option whether to indicate access technologies to the user. If the MS does display access technologies, then the access technology used should be the access technology chosen by the user for that PLMN. If the MS does not display access technologies, then the access technology chosen for a particular PLMN should be the highest priority available access technology for that PLMN, if the associated access technologies have a priority order.

If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

NOTE 2: High quality signal is defined in the appropriate AS specification.

References

1. TS 23.122, clause 1.2
2. TS 23.122, clause 4.4.3.1.
3. TS 23.122, clause 4.4.3.1.2.

NOTE: TS 31.102 defines the USIM fields.

### 6.1.1.15.3 Test purpose

1. To verify that a UE supporting the exception to manual network selection mode when HPLMN is available at power-on selects the highest priority available EHPLMN at switch on when the RPLMN or a PLMN equivalent to it is not available at switch-on.
2. To verify that a UE supporting the exception to manual network selection procedure mode when HPLMN is available at power-on selects the HPLMN when neither the RPLMN (or a PLMN equivalent to it) nor EHPLMNs are available (or EHPLMN list is empty).

### 6.1.1.15.4 Method of test

Initial conditions

The UE is in manual PLMN selection mode.

"IMSI attach" flag in the BCCH is set to allowed.

Cell levels are from table 6.3 for FDD and from table 6.4 for TDD.

All Radio Access Technology USIM fields and cells are UTRAN.

In the System Information broadcast in each cell, the neighbouring cell list does not contain any cell belonging to the other PLMN's.

Steps a) – d) and steps i) – l)

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | -60 | -54 | 1 | PLMN 2 |
| Cell 2 | OFF | OFF | 2 | PLMN 1 |
| Cell 4 | OFF | OFF | 3 | PLMN 4 |
| Cell 5 | OFF | OFF | 4 | PLMN 5 |

Steps e) – h) and steps m) – o)

| Cell | CPICH_ Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_ RSCP [dBm] (TDD) | Test Channel | PLMN |
|---|---|---|---|---|
| Cell 1 | OFF | OFF | 1 | PLMN 2 |
| Cell 2 | -65 | -59 | 2 | PLMN 1 |
| Cell 4 | -75 | -69 | 3 | PLMN 4 |
| Cell 5 | -80 | -74 | 4 | PLMN 5 |

The UE is equipped with a USIM containing default values except for those listed below.

USIM A

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{EHPLMN}$ | 1st | PLMN 5 |
| $EF_{EHPLMN}$ | 2nd | PLMN 4 |

USIM B

- $EF_{EHPLMN}$ not present

USIM A and USIM B

- The HPLMN (MCC+MNC) of the IMSI set to PLMN1.
- $EF_{LOCI}$ set to PLMN2

UE is switched off.

Test procedure

Method C is applied.

a) The SS activates Cell 1 and monitors the cell for random access requests from the UE.

b) The UE is switched on with a USIM setting according to USIM-A inserted.

c) The SS waits for random access requests from the UE. See note 1.

d) The UE is switched off.

e) The SS deactivate Cell 1and activates Cell 2, Cell 4 and Cell 5 and monitors the cells for random access requests from the UE.

f) The UE is switched on.

g) The SS waits for random access requests from the UE. See Note 2.

h) The UE is switched off and a USIM with settings according to USIM B is inserted.

i) The SS activates Cell 1and deactivates Cell 2, Cell 3 and Cell 5 and monitors the cells for random access requests from the UE.

j) The UE is switched on.

k) The SS waits for random access requests from the UE. See note 1.

l) The UE is switched off.

m) The SS deactivate Cell 1and activates Cell 2, Cell 4 and Cell 5 and monitors the cells for random access requests from the UE.

n) The UE is switched on.

o) The SS waits for random access requests from the UE. See note 3.

Note 1. UE is expected to register on Cell 1 and set the previously registered PLMN on the USIM to PLMN2.

Note 2. As previously registered PLMN2 is not available and list of EHPLMN exists then UE is expected to send random access requests on the cell belonging to the highest priority PLMN (PLMN5) on the EHPLMN list.

Note 3. As previously registered PLMN2 is not available and EHPLMN list does not exist then UE is expected to send random access requests on the cell belonging to the HPLMN (PLMN1).

#### 6.1.1.15.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN2.

2) In step g), the response from the UE shall be on Cell 5. The displayed PLMN shall be PLMN5 (highest priority PLMN In EHPLMN list).

3) In step k), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN2.

4) In step o), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN1 (HPLMN).

## 6.1.2 Cell selection and reselection

### 6.1.2.1 Cell reselection

#### 6.1.2.1.1 Definition

Test to verify that the UE performs the cell reselection correctly for intra/inter-frequency cells if the serving cell becomes barred or S<0.

#### 6.1.2.1.2 Conformance requirement

1. When camped on a cell, the UE shall regularly search for a better cell according to the cell reselection criteria. If a better cell is found, that cell is selected. The change of cell may imply a change of RAT.

2. A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

   2.1 The cell is part of the selected PLMN or of a PLMN considered as equivalent by the UE according to the information provided by the NAS.

   2.2 The cell is not barred.

   2.3 The cell is not part of the list of "forbidden LAs for roaming".

   2.4 The cell selection criteria are fulfilled.

3. When camped normally, the UE shall execute the cell reselection evaluation process on the following occasions/triggers:

   3.1 UE internal triggers, so as to meet performance as specified in TS 25.133 for FDD mode and in TS 25.123 for TDD mode.

   3.2 When information on the BCCH used for the cell reselection evaluation procedure has been modified.

4. Cell Reselection Criteria:

   4.1 The UE shall perform ranking of all cells that fulfil the S criterion.

   4.2 The cells shall be ranked according to the R criteria, deriving Qmeas,n and Qmeas,s and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in TS 25.133 and TS 25.123 for FDD, TDD and GSM cells, respectively.

   The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$.

If the usage of HCS is indicated in system information, $TEMP_OFFSET1_n$ is used for $TEMP_OFFSET_n$ to calculate $TO_n$. If it is indicated in system information that HCS is not used, $TEMP_OFFSET_n$ is not applied when calculating $R_n$. The best ranked cell is the cell with the highest R value.

If a TDD cell is ranked as the best cell, the UE shall perform cell re-selection to that TDD cell.

If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell.

4.3 In all cases, the UE shall reselect the new cell, only if the the following conditions are met:

- the new cell is better ranked than the serving cell during a time interval Treselection.
- more than 1 second has elapsed since the UE camped on the current serving cell.

5. When cell status "barred" is indicated, the UE shall select another cell according to the following rule:

5.1 If the "Intra-frequency cell re-selection indicator" IE in Cell Access Restriction IE is set to value "allowed", the UE may select another cell on the same frequency if selection/re-selection criteria are fulfilled.

- If the UE is camping on another cell, the UE shall exclude the barred cell from the neighbouring cell list until the expiry of a time interval $T_{barred}$. The time interval $T_{barred}$ is sent via system information in a barred cell together with Cell status information in the Cell Access Restriction IE.
- If the UE does not select another cell, and the barred cell remains to be the "best" one, the UE shall after expiry of the time interval $T_{barred}$ again check whether the status of the barred cell has changed.

5.2 If the "Intra-frequency cell re-selection indicator" IE is set to "not allowed" the UE shall not re-select a cell on the same frequency as the barred cell. For emergency call, the Intra-frequency cell re-selection indicator IE" shall be ignored, i.e. even if it is set to "not allowed" the UE may select another intra-frequency cell.

References

1. TS 25.304, clause 5.2.1.
2. TS 25.304, clause 4.3.
3. TS 25.304, clause 5.2.5.1.
4. TS 25.304, clause 5.2.6.1.4.
5. TS 25.304, clause 5.3.1.1.

#### 6.1.2.1.3 Test purpose

1. To verify that the UE performs cell reselection on the following occasions:

   1.1 Serving cell becomes barred;

   1.2 S<0 for serving cell.

2. To verify conformance requirement 5.

NOTE: Reselection triggered by the cell becoming a part of a forbidden registration area is tested in clause 9.4.2.3 and clause 9.4.2.4.

#### 6.1.2.1.4 Method of test

Initial conditions

Treselection, Qhyst, Qoffset, TEMP_OFFSET and PENALTY_TIME are not used, so the cell-ranking criterion R equals CPICH_RSCP for FDD cells, and P-CCPCH RSCP for TDD cells.

Step a-c (FDD):

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 |
|---|---|---|---|---|
| Test Channel | | 1 | 1 | 2 |
| LAC | | 0001 | 0002 | 0003 |
| CPICH_Ec | dBm/3.84 MHz | -60 | -67 | -80 |
| Qrxlevmin | dBm | -115 | -115 | -115 |
| Qqualmin | dB | -16 | -16 | -16 |
| Srxlev* | dBm | 55 | 48 | 35 |
| CellBarred | | Not barred | Not barred | Not barred |

Step a-c (TDD):

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 |
|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -69 | -74 | -79 |
| Qrxlevmin | dBm | -103 | -103 | -103 |
| Srxlev* | dB | 34 | 29 | 24 |

Step d-f:

| | | | | |
|---|---|---|---|---|
| CellBarred | | Not barred -> Barred | Not barred | Not barred |
| Intra-frequency cell re-selection indicator | | Not allowed | | |
| Tbarred | | 10s | | |

Step g-h:

| | | | | |
|---|---|---|---|---|
| Intra-frequency cell re-selection indicator | | Not Allowed -> Allowed | | |

Step i-k:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 |
|---|---|---|---|---|
| CellBarred | | Barred -> Not barred | Not barred | Not barred |

Step l-m (FDD):

| | | | | |
|---|---|---|---|---|
| Qrxlevmin | dBm | -115 -> -51 | -115 | -115 |
| Qqualmin | dB | -16 | -16 | -16 |
| Srxlev* | dBm | 55 -> -9 | 48 | 35 |

Step l-m (TDD):

| | | | | |
|---|---|---|---|---|
| Qrxlevmin | | -103 -> -59 | -103 | -103 |
| Srxlev* | | 34 -> -10 | 29 | 24 |

### Test procedure

Method C is applied.

a) The SS activates Cell 1, 2 and 4 and monitors them for random access requests from the UE.

b) The UE is switched on.

c) The SS waits to see if there are any random access requests from the UE.

d) The SS sets Cell 1 to be barred. The SS notifies UE of the BCCH modification.

e) The SS waits to see if there are any random access requests from the UE.

f) The SS sets "Intra-frequency cell re-selection indicator" to "Allowed". The SS notifies UE of the BCCH modification.

g) The SS waits to see if there are any random access requests from the UE.

h) The UE is switched off.

i) The SS sets Cell 1 to be not barred.

j) The UE is switched on.

k) The SS waits to see if there are any random access requests from the UE.

l) For FDD cell, Qrxlevmin is increased to -51 dBm, so S will become negative.
For TDD cell, Qrxlevmin is increased to -59 dBm, so S will become negative.
The SS notifies UE of the BCCH modification

m) The SS waits for random access requests from the UE.

#### 6.1.2.1.5 Test requirements

1) In step c), after the UE has responded on Cell 1, it shall not respond on any other cell within 1 min.

2) In step e), the UE shall respond on Cell 4.

3) In step g), the UE shall respond on Cell 2.

4) In step k), after the UE has responded on Cell 1, it shall not respond on any other cell within 1 min.

5) In step m), the UE shall respond on Cell 2.

### 6.1.2.1a Cell reselection for inter-band operation

#### 6.1.2.1a.1 Definition

This test case is identical to test case 6.1.2.1 except that the cell to be reselected is on a different frequency band.

#### 6.1.2.1a.2 Conformance requirement

Same conformance requirement as in clause 6.1.2.1.2.

#### 6.1.2.1a.3 Test purpose

Same test purpose as in clause 6.1.2.1.3 except that the cell to be reselected is on a different frequency band.

#### 6.1.2.1a.4 Method of test

##### Initial conditions

Same initial conditions as in clause 6.1.2.1.4 except that cells 1and 2 use test channel 1 as specified in Table 6.3 for the primary band and that cell 4 uses test channel 2 as specified in Table 6.3 for the secondary band. Primary and secondary bands are selected according to PIXIT parameters.

##### Related ICS/IXIT statement(s)

- UE supports multiple bands simultaneously yes/no

##### Test procedure

Same test procedure as in clause 6.1.2.1.4.

Note: If the UE supports more than 2 frequency bands, the test may be executed for various band combinations.

#### 6.1.2.1a.5 Test requirements

Same test requirement as in clause 6.1.2.1.5.

## 6.1.2.2 Cell reselection using Qhyst, Qoffset and Treselection

### 6.1.2.2.1 Definition

Test to verify that the UE performs the cell reselection correctly if system information parameters Qoffset, Qhyst and Treselection are applied for non-hierarchical cell structures. TEMP_OFFSET and PENALTY_TIME are only applicable when HCS is applied and are tested in clauses 6.1.2.4 and 6.1.2.5.

### 6.1.2.2.2 Conformance requirement

1. When camped normally, the UE shall execute the cell reselection evaluation process on the following occasions/triggers:

   1.1 UE internal triggers, so as to meet performance as specified in TS 25.133 for FDD mode and in TS 25.123 for TDD mode.

   1.2 When information on the BCCH used for the cell reselection evaluation procedure has been modified.

2. Cell Reselection Criteria:

   2.1 The UE shall perform ranking of all cells that fulfil the S criterion.

   2.2 The cells shall be ranked according to the R criteria, deriving Qmeas,n and Qmeas,s and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in TS 25.133 and TS 25.123 for FDD, TDD and GSM cells, respectively.

   The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$.

   If the usage of HCS is indicated in system information, $TEMP_OFFSET1_n$ is used for $TEMP_OFFSET_n$ to calculate $TO_n$. If it is indicated in system information that HCS is not used, $TEMP_OFFSET_n$ is not applied when calculating $R_n$. The best ranked cell is the cell with the highest R value.

   If a TDD cell is ranked as the best cell, the UE shall perform cell re-selection to that TDD cell.

   If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell.

   2.3 In all cases, the UE shall reselect the new cell, only if the the following conditions are met:

   - the new cell is better ranked than the serving cell during a time interval Treselection.
   - more than 1 second has elapsed since the UE camped on the current serving cell.

### References

1. TS 25.304, clause 5.2.5.1.
2. TS 25.304, clause 5.2.6.1.4.

### 6.1.2.2.3 Test purpose

1. To verify that the UE calculates R from Qhyst and Qoffset and that the modification of these parameters on the BCCH triggers the cell reselection evaluation process. TEMP_OFFSET and PENALTY_TIME are not applied.
2. To verify that the UE reselects the new cell, if the cell reselection criteria are fulfilled during a time interval Treselection.

6.1.2.2.4 Method of test

Initial conditions

For FDD only:

Step a-c:

| Parameter | Unit | Cell 1 | Cell 2 |
|---|---|---|---|
| Test channel | | 1 | 1 |
| LAC | | 0001 | 0002 |
| CPICH_Ec | dBm/3.84 MHz | -60 | -68 |
| $Qhyst1_s$ | dB | 20 | 0 |
| $R_s$* | dB | -40 | -68 |
| $R_n$* | dB | -68 | -60 |

Step d-e:

| | | | |
|---|---|---|---|
| CPICH_Ec | dBm/3.84 MHz | -60 -> -68 | -68 -> -60 |
| $R_s$* | dB | -40 -> -48 | -68 -> -60 |
| $R_n$* | dB | -68 -> -60 | -60 -> -68 |

Step f-g:

| | | | |
|---|---|---|---|
| $Qhyst1_s$ | dB | 20 -> 0 | 0 |
| $R_s$* | dB | -48 -> -68 | -60 |
| $R_n$* | dB | -60 | -68 |

Step h-j:

| | | | |
|---|---|---|---|
| CPICH_Ec | dBm/3.84 MHz | -68 -> -60 | -60 -> -68 |
| $Qoffset1_{s,n}$ | dBm | 0 -> 20 | 0 |
| $R_s$* | dBm | -68 -> -60 | -60 -> -68 |
| $R_n$* | dBm | -60 -> -88 | -68 -> -60 |

Step k-l:

| | | | |
|---|---|---|---|
| CPICH_Ec | dBm/3.84 MHz | -60 -> -68 | -68 -> -60 |
| $R_s$* | dB | -60 -> -68 | -68 -> -60 |
| $R_n$* | dB | -88 -> -80 | -60 -> -68 |

Step m-n:

| | | | |
|---|---|---|---|
| $Qoffset1_{s,n}$ | dB | 20 -> 0 | 0 |
| $R_s$* | dB | -68 | -60 |
| $R_n$* | dB | -80 -> -60 | -68 |

Step o-p:

| | | | |
|---|---|---|---|
| $Treselection_s$ | s | 30 | 0 |

For TDD only:

Step a-c:

| Parameter | Unit | Cell 1 | Cell 2 |
|---|---|---|---|
| P-CCPCH RSCP | dBm | -69 | -79 |
| $Qhyst1_s$ | dB | 10 | 0 |
| $R_s$* | dB | -59 | -79 |
| $R_n$* | dB | -79 | -69 |

Step d-e:

| | | | |
|---|---|---|---|
| P-CCPCH RSCP | dBm | -69 -> -79 | -79 -> -69 |
| $R_s$* | dB | -59 -> -69 | -79 ->-69 |
| $R_n$* | dB | -79 -> -69 | -69 ->-79 |

Step f-g:

| | | | |
|---|---|---|---|
| $Qhyst1_s$ | dB | 10 -> 0 | 0 |
| $R_s$* | dB | -69 -> -79 | -69 |
| $R_n$* | dB | -69 | -79 |

Step h-j:

| | | | |
|---|---|---|---|
| P-CCPCH RSCP | dBm | -79 -> -69 | -69 ->-79 |
| $Qoffset1_{s,n}$ | dB | 0 -> 10 | 0 |
| $R_s$* | dB | - 79 ->-69 | -69 ->-79 |
| $R_n$* | dB | - 69 -> -79 | -79 ->-69 |

Step k-l:

| | | | |
|---|---|---|---|
| P-CCPCH RSCP | dBm | -69 -> -79 | -79 -> -69 |
| $R_s$* | dB | -69 -> -79 | -79 -> -69 |
| $R_n$* | dB | -79 -> -89 | -69 -> -79 |

Step m-n:

| | | | |
|---|---|---|---|
| $Qoffset1_{s,n}$ | dB | 10 -> 0 | 0 |
| $R_s$* | dB | -79 | -69 |
| $R_n$* | dB | -89 -> -79 | -79 |

Step o-p:

| | | | |
|---|---|---|---|
| $Treselection_s$ | s | 0 -> 30 | 0 |

Test procedure

Method C is applied.

a) The SS activates Cell 1 and 2 and monitors them for random access requests from the UE.

b) The UE is switched on.

c) The SS waits to see if there is any random access requests from the UE.

d) The SS changes the level of Cell 1 and 2 and waits for 10 s (TS 25.133, A.4.2.1.2 for FDD mode and TS 25.123, A.4.2.1.2 for TDD mode).

e) The SS waits to see if there is any random access requests from the UE.

f) The SS resets Qhyst for Cell 1 and notifies UE of the BCCH modification.

g) The SS waits for random access requests from the UE.

h) The UE is switched off. The SS changes the level of Cell 1 and Cell 2. The SS changes Qoffset in Cell 1.

i) The UE is switched on.

j) The SS waits to see if there is any random access requests from the UE.

k) The SS changes the level of Cell 1 and 2 and waits for 10 s (TS 25.133, clause A.4.2.1.2 for FDD mode and TS 25.123, clause A.4.2.1.2 for TDD mode).

l) The SS waits to see if there is any random access requests from the UE.

m) The SS resets Qoffset for Cell 1, and notifies UE of the BCCH modification.

n) The SS waits for random access requests from the UE.

o) Step h-n) is repeated except that Treselection is 30 s

#### 6.1.2.2.5 Test Requirements

1) In step c), after the UE has responded on Cell 1, it shall not respond on any other cell within 1 min.

2) In step e), there shall not be any random access requests on any cell.

3) In step g), the UE shall respond on Cell 2.

4) In step j), the UE shall select a cell to camp on. In case the UE has selected Cell 2, it shall make a reselection to Cell 1 within 10s (TS 25.133, clause A.4.2.1.2 for FDD mode and TS 25.123, clause A.4.2.1.2 for TDD mode).

5) In step l), there shall not be any random access requests on any cell.

6) In step n), the UE shall respond on Cell 2.

7) In step o), the UE shall respond as in previous steps except that when reselecting to Cell 2, there shall be no response from the UE on Cell 2 within 28 s of notifying UE on the BCCH modification, but the UE shall respond on Cell 2 within 35 s.

NOTE: Minimum time set by Treselection – 2 s tolerance. Maximum time set by Treselection + 1 280 msec. for DRX cycle + 1280 ms for system information block type scheduling + 2 s tolerance.

### 6.1.2.3 HCS Cell reselection

#### 6.1.2.3.1 Definition

Test to verify that the UE performs the cell reselection correctly for hierarchical cell structures. This shall be done according to the HCS priority, the received signal quality value Q and the quality level threshold criterion H.

#### 6.1.2.3.2 Conformance requirement

1. When camped normally, the UE shall execute the cell reselection evaluation process on the following occasions/triggers:

   1.1 UE internal triggers, so as to meet performance as specified in TS 25.133 for FDD mode and in TS 25.123 for TDD mode.

   1.2 When information on the BCCH used for the cell reselection evaluation procedure has been modified.

2. Cell Reselection Criteria for hierarchical cells:

   2.1 The quality level threshold criterion H for hierarchical cell structures is used to determine whether prioritised ranking according to hierarchical cell re-selection rules shall apply, and is calculated from the Q, Qhcs, TEMP_OFFSET and PENALTY_TIME parameters.

   2.2 The UE shall perform ranking of all cells that fulfil the S criterion among all cells that have the highest HCS_PRIO among those cells that fulfil the criterion H >= 0.

2.3 The cells shall be ranked according to the R criteria. The best ranked cell is the cell with the highest R value. If an FDD cell is ranked as the best cell, the UE shall perform cell re-selection to that FDD cell. If a TDD cell is ranked as the best cell, the UE shall perform cell re-selection to that TDD cell.

2.4 In all cases, the UE shall reselect the new cell, only if the cell reselection criteria are fulfilled during a time interval Treselection.

2.5 The cell-ranking criterion R is derived from Q, Qhyst, Qoffset, TEMP_OFFSET, PENALTY_TIME.

References

1. TS 25.304, clause 5.2.2.
2. TS 25.304, clause 5.2.6.1.4.

### 6.1.2.3.3 Test purpose

1. Verify that the UE ignores cells with H<0 for reselection and that H is calculated from Qhcs. The modification of this parameter on the BCCH shall trigger the cell reselection evaluation process.
2. Verify that the UE ranks cells based on both HCS priority and R. Qhyst, Qoffset, TEMP_OFFSET, PENALTY_TIME and Treselection are not applied so R equals CPICH_RSCP for FDD cells, and P-CCPCH RSCP for TDD cells.

### 6.1.2.3.4 Method of test

Initial conditions

SS shall indicate in System Information that HCS is in use.

Each cell shall include the other cells as neighbouring cells in System Information Block Type 11.

For FDD only:

Step a-c:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|---|
| Test channel | | 1 | 2 | 2 |
| LAC | | 0001 | 0002 | 0003 |
| CPICH_Ec | dBm/3.84 MHz | -70 | -65 | -70 |
| HCS priority | | 6 | 7 | 7 |
| $Qhcs_s$ | dBm | -80 | -50 | -50 |
| $Qhcs_{n=1}$ | dBm | n/a | -80 | -80 |
| $Qhcs_{n=2}$ | dBm | -50 | n/a | -50 |
| $Qhcs_{n=3}$ | dBm | -50 | -50 | n/a |
| $H_s$* | dB | 10 | -15 | -20 |
| $H_{n=1}$* | dB | n/a | 10 | 10 |
| $H_{n=2}$* | dB | -15 | n/a | -15 |
| $H_{n=3}$* | dB | -20 | -20 | n/a |

Step d-e:

| | | | | |
|---|---|---|---|---|
| $Qhcs_s$ | dBm | -80 | -50 | -50 -> -80 |
| $Qhcs_{n=3}$ | dBm | -50 -> -80 | -50 -> -80 | n/a |
| $H_s$* | dB | 10 | -15 | -20 -> 10 |
| $H_{n=3}$* | dB | -20 -> 10 | -20 -> 10 | n/a |

Step f-g:

| | | | | |
|---|---|---|---|---|
| $Qhcs_s$ | dBm | -80 | -50 -> -80 | -80 |
| $Qhcs_{n=2}$ | dBm | -50 -> -80 | n/a | -50 -> -80 |
| $H_s$* | dB | 10 | -15 -> 15 | 10 |
| $H_{n=2}$* | dB | -15 -> 15 | n/a | -15 -> 15 |

For TDD only:

Step a-c:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -69 | -74 | -79 |
| HCS priority | | 6 | 7 | 7 |
| $Qhcs_s$ | dBm | -89 | -59 | -59 |
| $Qhcs_{n=1}$ | dBm | n/a | -89 | -89 |
| $Qhcs_{n=2}$ | dBm | -59 | n/a | -59 |
| $Qhcs_{n=3}$ | dBm | -59 | -59 | n/a |
| $H_s$* | dB | 20 | -15 | -20 |
| $H_{n=1}$* | dB | n/a | 20 | 20 |
| $H_{n=2}$* | dB | -15 | n/a | -15 |
| $H_{n=3}$* | dB | -20 | -20 | n/a |

Step d-e:

| | | | | |
|---|---|---|---|---|
| $Qhcs_s$ | dBm | -89 | -59 | -59 -> -89 |
| $Qhcs_{n=3}$ | dBm | -59 -> -89 | -59 -> -89 | n/a |
| $H_s$* | dB | 20 | -15 | -20 -> 10 |
| $H_{n=3}$* | dB | -20 -> 10 | -20 -> 10 | n/a |

Step f-g:

| | | | | |
|---|---|---|---|---|
| $Qhcs_s$ | dBm | -89 | -59 -> -89 | -89 |
| $Qhcs_{n=2}$ | dBm | -59 -> -89 | n/a | -59 -> -89 |
| $H_s$* | dB | 20 | -15 -> 15 | 10 |
| $H_{n=2}$* | dB | -15 -> 15 | n/a | -15 -> 15 |

Test procedure

Method C is applied.

a) The SS activates the cells 1-3 and monitors them for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The SS changes Qhcs for Cell 3, and notifies UE of the BCCH modification.

e) The SS waits for random access requests from the UE.

f) The SS changes Qhcs for Cell 2, and notifies UE of the BCCH modification.

g) The SS waits for random access requests from the UE.

#### 6.1.2.3.5 Test requirements

1) In step c), after the UE has responded on Cell 1, it shall not respond on any other cell within 1 min.

2) In step e), the UE shall respond on Cell 3.

3) In step g), the UE shall respond on Cell 2.

### 6.1.2.4 HCS Cell reselection using reselection timing parameters for the H criterion

#### 6.1.2.4.1 Definition

Test to verify that the UE performs the cell reselection correctly for hierarchical cell structures using TEMP_OFFSET and PENALTY_TIME applied to the H criterion.

#### 6.1.2.4.2 Conformance requirement

1. When camped normally, the UE shall execute the cell reselection evaluation process on the following occasions/triggers:

   1.1 UE internal triggers, so as to meet performance as specified in TS 25.133 for FDD mode and in TS 25.123 for TDD mode.

   1.2 When information on the BCCH used for the cell reselection evaluation procedure has been modified.

2. Cell Reselection Criteria for hierarchical cells:

   2.1 The quality level threshold criterion H for hierarchical cell structures is used to determine whether prioritised ranking according to hierarchical cell re-selection rules shall apply, and is calculated from the Q, Qhcs, TEMP_OFFSET and PENALTY_TIME parameters.

   2.2 The UE shall perform ranking of all cells that fulfil the S criterion among all cells that have the highest HCS_PRIO among those cells that fulfil the criterion H >= 0.

   2.3 The cells shall be ranked according to the R criteria. The best ranked cell is the cell with the highest R value. If an FDD cell is ranked as the best cell, the UE shall perform cell re-selection to that FDD cell. If a TDD cell is ranked as the best cell, the UE shall perform cell re-selection to that TDD cell.

   2.4 In all cases, the UE shall reselect the new cell, only if the cell reselection criteria are fulfilled during a time interval Treselection.

   2.5 The cell-ranking criterion R is derived from Q, Qhyst, Qoffset, TEMP_OFFSET and PENALTY_TIME.

3. $TEMP_OFFSET_n$ applies an offset to the H criteria for the duration of $PENALTY_TIME_n$ after the timer $T_n$ has started for that cell. $T_n$ shall be started from zero when $Q_{meas,n} > Qhcs_n$ . TEMP_OFFSET is only applied to the H criteria if the cells have different HCS priorities.

References

1. TS 25.304, clause 5.2.2.

2,3. TS 25.304, clause 5.2.6.1.4.

#### 6.1.2.4.3 Test purpose

1. Verify that TEMP_OFFSET is applied to the H criterion for a period of PENALTY_TIME and that the timer is started when $Q_{meas,n} > Qhcs_n$ if serving and neighbour cell have different HCS priorities.

#### 6.1.2.4.4 Method of test

Initial conditions

Cell_selection_and_reselection_quality_measure is CPICH_RSCP (FDD).

Each cell includes the other cells in the inter-frequency neighbour cell list in System Information Block Type 11.

For FDD only:

Step a-c:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|---|
| Test channel | | 1 | 2 | 3 |
| LAC | | 0001 | 0002 | 0003 |
| CPICH_Ec | dBm/3.84 MHz | -60 | -70 | -70 |
| HCS priority | | 2 | 4 | 7 |
| $Qhcs_s$ | dBm | -80 | -50 | -50 |
| $Qhcs_{n=1}$ | dBm | n/a | -80 | -80 |
| $Qhcs_{n=2}$ | dBm | -50 | n/a | -50 |
| $Qhcs_{n=3}$ | dBm | -50 | -50 | n/a |
| $TEMP_OFFSET1_{n=1}$ | dB | n/a | 0 | 0 |
| $TEMP_OFFSET1_{n=2}$ | dB | inf | n/a | 0 |
| $TEMP_OFFSET1_{n=3}$ | dB | inf | inf | n/a |
| $H_s$* | dB | 20 | -20 | -20 |
| $H_{n=1}$* | dB | n/a | 20 | 20 |
| $H_{n=2}$* | dBm | -20 | n/a | -20 |
| $H_{n=3}$* | dBm | -20 | -20 | n/a |
| $PENALTY_TIME_{n=1}$ | sec | n/a | 0 | 0 |
| $PENALTY_TIME_{n=2}$ | sec | 40 | n/a | 0 |
| $PENALTY_TIME_{n=3}$ | sec | 60 | 60 | n/a |

Step d-e:

| | | | | |
|---|---|---|---|---|
| $Qhcs_s$ | dBm | -80 | -50 -> -85 | -50 |
| $Qhcs_{n=2}$ | dBm | -50 -> -85 | n/a | -50 -> -85 |
| $Qhcs_{n=3}$ | dBm | -50 | -50 | n/a |
| $H_s$* | dB | 20 | -20 -> 15 | -20 |
| $H_{n=2}$* | dB | -inf -> 15 (after 40 sec) | n/a | -20 -> 15 |
| $H_{n=3}$* | dB | -20 | -20 | n/a |

Step f-g:

| | | | | |
|---|---|---|---|---|
| $Qhcs_s$ | dBm | -80 | -85 | -50 -> -80 |
| $Qhcs_{n=1}$ | dBm | n/a | -80 | -80 |
| $Qhcs_{n=2}$ | dBm | -85 | n/a | -85 |
| $Qhcs_{n=3}$ | dBm | -50->80 | 50->-80 | n/a |
| $H_s$* | dB | 20 | 15 | -20 -> 10 |
| $H_{n=1}$* | dB | n/a | 20 | 20 |
| $H_{n=2}$* | dB | 15 | n/a | 15 |
| $H_{n=3}$* | dB | -inf -> 10 (after 60 sec) | -inf -> 10 (after 60 sec) | n/a |

For TDD only:

Step a-c:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -69 | -74 | -74 |
| HCS priority | | 2 | 4 | 7 |
| $Qhcs_s$ | dBm | -89 | -54 | -54 |
| $Qhcs_{n=1}$ | dBm | n/a | -89 | -89 |
| $Qhcs_{n=2}$ | dBm | -54 | n/a | -54 |
| $Qhcs_{n=3}$ | dBm | -54 | -54 | n/a |
| $TEMP_OFFSET1_{n=1}$ | dB | n/a | 0 | 0 |
| $TEMP_OFFSET1_{n=2}$ | dB | inf | n/a | 0 |
| $TEMP_OFFSET1_{n=3}$ | dB | inf | inf | n/a |
| $H_s$* | dB | 20 | -20 | -20 |
| $H_{n=1}$* | dB | n/a | 20 | 20 |
| $H_{n=2}$* | dB | -20 | n/a | -20 |
| $H_{n=3}$* | dB | -20 | -20 | n/a |
| $PENALTY_TIME_{n=1}$ | sec | n/a | 0 | 0 |
| $PENALTY_TIME_{n=2}$ | sec | 40 | n/a | 0 |
| $PENALTY_TIME_{n=3}$ | sec | 60 | 60 | n/a |

Step d-e:

| | | | | |
|---|---|---|---|---|
| $Qhcs_s$ | dBm | -89 | -54 -> -94 | -54 |
| $Qhcs_{n=2}$ | dBm | -54 -> -94 | n/a | -54 -> -94 |
| $Qhcs_{n=3}$ | dBm | -54 | -54 | n/a |
| $H_s$* | dB | 20 | -20 -> 20 | -20 |
| $H_{n=2}$* | dB | -inf -> 20 (after 40 sec) | n/a | -20 -> 20 |
| $H_{n=3}$* | dB | -inf | -inf | n/a |

Step g-f:

| | | | | |
|---|---|---|---|---|
| $Qhcs_s$ | dBm | -89 | -94 | -54 ->-84 |
| $Qhcs_{n=1}$ | dBm | na | -89 | -89 |
| $Qhcs_{n=2}$ | dBm | -94 | n/a | -94 |
| $Qhcs_{n=3}$ | dBm | -54->84 | -54->-84 | n/a |
| $H_s$* | dB | 20 | 20 | -20 ->10 |
| $H_{n=1}$* | dB | n/a | 20 | 20 |
| $H_{n=2}$* | dB | 20 | n/a | 20 |
| $H_{n=3}$* | dB | -inf ->10 (after 60 sec) | -inf ->10 (after 60 sec) | n/a |

Test procedure

Method C is applied.

a) The SS activates the cells 1-3 and monitors them for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The SS changes Qhcs for Cell 2, and notifies UE of the BCCH modification.

e) The SS waits for random access requests from the UE.

f) The SS changes Qhcs for Cell 3, and notifies UE of the BCCH modification.

g) The SS waits for random access requests from the UE.

6.1.2.4.5 Test requirements

1) In step c), after the UE has responded on Cell 1, it shall not respond on any other cell within 1 min.

2) In step e), there shall be no response from the UE on Cell 2 within 38 s after changing the parameters in step d), but the UE shall respond on Cell 2 within 49 s (see NOTE1).

3) In step g),There shall be no response from the UE on Cell 3 within 58 s after changing the parameters in step f), but the UE shall respond on Cell 3 within 69 s (see NOTE2).

NOTE1: Minimum time set by PENALTY_TIME (cell 2) - 2 s tolerance. Maximum time set by PENALTY_TIME (cell 2) + 1 280 msec. for DRX cycle + 2 s tolerance + 5 s tolerance (for UE to read System Information).

NOTE2: Minimum time set by PENALTY_TIME (cell 3) - 2 s tolerance. Maximum time set by PENALTY_TIME (cell 3) + 1 280 msec. for DRX cycle + 2 s tolerance + 5 s tolerance (for UE to read System Information).

### 6.1.2.5 HCS Cell reselection using reselection timing parameters for the R criterion

#### 6.1.2.5.1 Definition

Test to verify that the UE performs the cell reselection correctly for hierarchical cell structures using TEMP_OFFSET and PENALTY_TIME applied to the R criterion.

#### 6.1.2.5.2 Conformance requirement

1. When camped normally, the UE shall execute the cell reselection evaluation process on the following occasions/triggers:

   1.1 UE internal triggers, so as to meet performance as specified in TS 25.133 for FDD mode and in TS 25.123 for TDD mode.

   1.2 When information on the BCCH used for the cell reselection evaluation procedure has been modified.

2. Cell Reselection Criteria for hierarchical cells:

   2.1 The quality level threshold criterion H for hierarchical cell structures is used to determine whether prioritised ranking according to hierarchical cell re-selection rules shall apply, and is calculated from the Q, Qhcs, TEMP_OFFSET and PENALTY_TIME parameters.

   2.2 The UE shall perform ranking of all cells that fulfil the S criterion among all cells, not considering HCS priority levels, if no cell fulfil the criterion H>=0.

   2.3 The cells shall be ranked according to the R criteria. The best ranked cell is the cell with the highest R value. If a FDD cell is ranked as the best cell, the UE shall perform cell re-selection to that FDD cell. If a TDD cell is ranked as the best cell, the UE shall perform cell re-selection to that TDD cell.

   2.4 In all cases, the UE shall reselect the new cell, only if the cell reselection criteria are fulfilled during a time interval Treselection.

   2.5 The cell-ranking criterion R is derived from Q, Qhyst, Qoffset, TEMP_OFFSET, PENALTY_TIME.

3. $TEMP_OFFSET_n$ applies an offset to the R criteria for the duration of $PENALTY_TIME_n$ after the timer $T_n$ has started for that cell. $T_n$ shall be started from zero when $Q_{meas,n} > Q_{meas,s} + Qoffset2_{s,n}$. TEMP_OFFSET is only applied to the R criteria if the cells have identical priorities.

References

1. TS 25.304, clause 5.2.2.

2,3. TS 25.304, clause 5.2.6.1.4.

#### 6.1.2.5.3 Test purpose

1. Verify that TEMP_OFFSET is applied to the R criterion for a period of PENALTY_TIME if serving and neighbour cell have identical HCS priorities and that the timer is started when $Q_{meas,n} > Q_{meas,s} + Qoffset1_{s,n}$.

#### 6.1.2.5.4 Method of test

Initial conditions

Cell_selection_and_reselection_quality_measure is CPICH_RSCP (FDD).

For FDD only:

Step a-c:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|---|
| LAC | | 0001 | 0002 | 0003 |
| CPICH_Ec | dBm/3.84 MHz | -60 | -70 | -75 |
| HCS priority | | 1 | 1 | 1 |
| $Qhcs_s$ | dBm | -80 | -80 | -80 |
| $TEMP_OFFSET1_{n=1}$ | dB | n/a | 0 | 0 |
| $TEMP_OFFSET1_{n=2}$ | dBm | inf | n/a | 0 |
| $TEMP_OFFSET1_{n=3}$ | dBm | inf | inf | n/a |
| $PENALTY_TIME_{n=1}$ | sec | n/a | 0 | 0 |
| $PENALTY_TIME_{n=2}$ | sec | 40 | n/a | 0 |
| $PENALTY_TIME_{n=3}$ | sec | 60 | 60 | n/a |
| $H_s$* | dBm | 20 | 10 | 5 |
| $H_{n=1}$* | dB | n/a | 20 | 20 |
| $H_{n=2}$* | dBm | 10 | n/a | 10 |
| $H_{n=3}$* | dBm | 5 | 5 | n/a |
| $R_s$* | dBm | -60 | -70 | -75 |
| $R_{n=1}$* | dBm | n/a | -60 | -60 |
| $R_{n=2}$* | dBm | -70 | n/a | -70 |
| $R_{n=3}$* | dBm | -75 | -75 | n/a |

Step d-e:

| | | | | |
|---|---|---|---|---|
| CPICH_Ec | dBm/3.84 MHz | -60 -> -70 | -70 -> -65 | -75 |
| $R_s$* | dBm | -60 -> -70 | -70 -> -65 | -75 |
| $R_{n=1}$* | dBm | n/a | -60 -> -70 | -60 -> -70 |
| $R_{n=2}$* | dBm | -inf -> -65 (after 40 sec) | n/a | -70 -> -65 |
| $R_{n=3}$* | dBm | -75 | --75 | n/a |

Step f-g:

| | | | | |
|---|---|---|---|---|
| CPICH_Ec | dBm/3.84 MHz | -70 | -65 | -75 -> -60 |
| $R_s$* | dBm | -70 | -65 | -75->-60 |
| $R_{n=1}$* | dBm | n/a | -70 | -70 |
| $R_{n=2}$* | dBm | -65 | n/a | -65 |
| $R_{n=3}$* | dBm | -inf -> -60 (after 60 sec) | -inf -> -60 (after 60 sec) | n/a |

For TDD only:

Step a-c:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -69 | -79 | -84 |
| HCS priority | | 1 | 1 | 1 |
| $Qhcs_s$ | dBm | -89 | -89 | -89 |
| $TEMP_OFFSET1_{n=1}$ | dB | n/a | 0 | 0 |
| $TEMP_OFFSET1_{n=2}$ | dB | inf | n/a | 0 |
| $TEMP_OFFSET1_{n=3}$ | dB | inf | inf | n/a |
| $PENALTY_TIME_{n=2}$ | sec | n/a | 0 | 0 |
| $PENALTY_TIME_{n=2}$ | sec | 40 | n/a | 0 |
| $PENALTY_TIME_{n=3}$ | sec | 60 | 60 | n/a |
| $H_s$* | dB | 20 | 10 | 5 |
| $H_{n=1}$* | dB | n/a | 20 | 20 |
| $H_{n=2}$* | dB | 10 | n/a | 10 |
| $H_{n=3}$* | dB | 5 | 5 | n/a |
| $R_s$* | dBm | -69 | -79 | -84 |
| $R_{n=1}$* | dBm | n/a | -69 | -69 |
| $R_{n=2}$* | dBm | -79 | n/a | -79 |
| $R_{n=3}$* | dBm | -84 | -84 | n/a |

Step d-e:

| | | | | |
|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -69 -> -79 | -79 -> -74 | -84 |
| $R_s$* | dBm | -69 -> -79 | -79 -> -74 | -84 |
| $R_{n=1}$* | dBm | n/a | -69 -> -79 | -69 -> -79 |
| $R_{n=2}$* | dBm | -inf -> -74 (after 40 sec) | n/a | -79 -> -74 |
| $R_{n=3}$* | dBm | -84 | -84 | n/a |

Step f-g:

| | | | | |
|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -79 | -74 | -84 -> -69 |
| $R_s$* | dBm | -79 | -74 | -84 -> -69 |
| $R_{n=1}$* | dBm | n/a | -79 | -79 |
| $R_{n=2}$* | dBm | -74 | n/a | -74 |
| $R_{n=3}$* | dBm | -inf -> -69 (after 60 sec) | -inf -> -69 (after 60 sec) | n/a |

Test procedure

Method C is applied.

a) The SS activates the cells 1-3 and monitors them for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The SS changes the power level of Cell 1-2.

e) The SS waits for random access requests from the UE.

f) The SS changes the power level of Cell 3.

g) The SS waits for random access requests from the UE.

#### 6.1.2.5.5 Test requirements

1) In step c), after the UE has responded on Cell 1, it shall not respond on any other cell within 1 min.

2) In step e), there shall be no response from the UE on Cell 2 within 38 s after changing the parameters in step d), but the UE shall respond on Cell 2 within 50 s (see NOTE1).

3) In step g), there shall be no response from the UE on Cell 3 within 58 s after changing the parameters in step f), but the UE shall respond on Cell 2 within 70 s (see NOTE2).

NOTE1: Minimum time set by PENALTY_TIME (cell 2) – 2 s tolerance. Maximum time set by PENALTY_TIME (cell 2) + 6.4 s ($T_{evaluateFDD}$ from TS 25.133, table 4.1 for FDD mode and $T_{evaluateTDD}$ from TS 25.123, table 4.1 for TDD mode) + 1 280 msec + 2 s tolerance.

NOTE2: Minimum time set by PENALTY_TIME (cell 3) – 2 s tolerance. Maximum time set by PENALTY_TIME (cell 3) + 6.4 s ($T_{evaluateFDD}$ from TS 25.133, table 4.1 for FDD mode and $T_{evaluateTDD}$ from TS 25.123, table 4.1 for TDD mode) + 1 280 msec + 2 s tolerance.

### 6.1.2.6 Emergency calls

#### 6.1.2.6.1 Definition

Test to verify that the UE shall be able to initiate emergency calls when no suitable cells of the selected PLMN are available, but at least one acceptable cell is available.

#### 6.1.2.6.2 Conformance requirement

1. Acceptable cell:

   An "acceptable cell" is a cell on which the UE may camp to obtain limited service (originate emergency calls). Such a cell shall fulfil the following requirements, which is the minimum set of requirements to initiate an emergency call in a UTRAN network:

   1.1 The cell is not barred;

   1.2 The cell selection criteria are fulfilled.

2. A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

   2.1 The cell is part of the selected PLMN or, of a PLMN considered as equivalent by the UE according to the information provided by the NAS.

   2.2 The cell is not barred.

   2.3 The cell is not part of the list of "forbidden LAs for roaming".

   2.4 The cell selection criteria are fulfilled.

3. If the UE is unable to find any suitable cell of selected PLMN the UE shall enter the *Any cell selection* state.

4. Any Cell Selection State: In this state, the UE shall attempt to find an acceptable cell of an any PLMN to camp on, trying all RATs that are supported by the UE and searching first for a high quality cell. The UE, which is not camped on any cell, shall stay in this state until an acceptable cell is found.

5. Camped on Any Cell State: In this state the UE obtains limited service. The UE shall regularly attempt to find a suitable cell of the selected PLMN, trying RATs that are supported by the UE. If a suitable cell is found, this causes an exit to the Camped normally State.

6. In the Camped on Any Cell State, the UE shall perform the cell reselection evaluation process on the following occasions/triggers:

6.1 UE internal triggers, so as to meet performance as specified in TS 25.133 for FDD mode and TS 25.123 for TDD mode.

6.2 When information on the BCCH used for the cell reselection evaluation procedure has been modified.

References

1. TS 25.304, clause 4.3.
2. TS 25.304, clause 4.3.
3. TS 25.304, clause 5.2.2.1.
4. TS 25.304, clause 5.2.8.
5. TS 25.304, clause 5.2.2.5.
6. TS 25.304, clause 5.2.9.1.

#### 6.1.2.6.3 Test purpose

1. To verify that the UE shall be able to initiate emergency calls when no suitable cells of the selected PLMN are available, but at least one acceptable cell is available.
2. To verify that the UE selects a cell with S>0 and CellBarred = Not Barred (i.e. an "acceptable cell") when no suitable cells of the selected PLMN are available.
3. To verify that the UE ranks the acceptable cells according to the cell-ranking criterion R which in this test case equals Q as Qhyst, Qoffset, TEMP_OFFSET and PENALTY_TIME parameters are not used. Treselection is not used either.

#### 6.1.2.6.4 Method of test

Initial conditions

In step a-d, Cell 1 and 4 are neither suitable nor acceptable cells. Cell 7 is an acceptable cell but not suitable.

In step e-f, both Cell 1 and 7 are acceptable cells.

Prior to performing the actual test procedure PLMN3 is set as forbidden PLMN, so that the USIM will contain the following information:

| USIM field | PLMN |
|---|---|
| $EF_{FPLMN}$ | PLMN 3 |

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

All cells in this test case belong to PLMN 3.

Each cell shall include the other cells in the neighbour cell list in System Information Block Type 11.

Step a-d:

For FDD only:

| Parameter | Unit | Cell 1 | Cell 4 | Cell 7 |
|---|---|---|---|---|
| Test Channel | | 1 | 2 | 3 |
| CPICH_Ec | dBm/3.84 MHz | -65 | -60 | -70 |
| Qrxlevmin | dBm | -81 | -51 | -81 |
| Qqualmin | dB | -16 | -16 | -16 |
| Srxlev* | dB | 16 | -9 | 11 |
| CellBarred | | Barred | Not barred | Not barred |
| Tbarred | | 10s | | |

For TDD only:

| Parameter | Unit | Cell 1 | Cell 3 | Cell 7 |
|---|---|---|---|---|
| Test Channel | | 1 | 2 | 3 |
| P-CCPCH RSCP | dBm | -69 | -64 | -74 |
| CellBarred | | Barred | Not barred | Not barred |
| Tbarred | | 10s | | |

Step e-f:

| | | | | |
|---|---|---|---|---|
| CellBarred | | Barred -> Not barred | 0 | 0 |

Test procedure

Method C is applied.

a) The SS activates the cells and monitors them for random access requests from the UE.

b) The UE is switched on.

c) 50 s after switch on, an emergency call is initiated on the UE.

d) The SS waits for random access request from the UE.

e) The SS changes the CellBarred of Cell 1 to 'Not barred'.

f) After 30 s an emergency call is initiated on the UE.

g) The SS waits for random access request from the UE.

#### 6.1.2.6.5 Test requirements

1) In step d), the first access from the UE shall be on Cell 7.

2) In step g), the first access from the UE shall be on Cell 1.

### 6.1.2.7 Void

### 6.1.2.8 Cell reselection: Equivalent PLMN

#### 6.1.2.8.1 Definition

Test to verify that the UE performs the cell reselection correctly to a cell belonging to a PLMN Equivalent to the registered PLMN, if the serving cell of registered PLMN becomes barred or S<0.

#### 6.1.2.8.2 Conformance requirement

1. When camped on a cell, the UE shall regularly search for a better cell according to the cell reselection criteria. If a better cell is found, that cell is selected. The change of cell may imply a change of RAT.

2. A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

   2.1 The cell is part of the selected PLMN or of a PLMN considered as equivalent by the UE according to the information provided by the NAS

   2.2 The cell is not barred

   2.3 The cell is not part of the list of "forbidden LAs for roaming"

   2.4 The cell selection criteria are fulfilled

3. When camped normally, the UE shall execute the cell reselection evaluation process on the following occasions/triggers:

3.1 UE internal triggers, so as to meet performance as specified in TS 25.133 for FDD mode and in TS 25.123 for TDD mode.

3.2 When information on the BCCH used for the cell reselection evaluation procedure has been modified

4. Cell Reselection Criteria:

4.1 The UE shall perform ranking of all cells that fulfil the S criterion

4.2 The cells shall be ranked according to the R criteria, deriving Qmeas,n and Qmeas,s and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in TS 25.133 and TS 25.123 for FDD, TDD and GSM cells, respectively.

The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$.

If the usage of HCS is indicated in system information, $TEMP_OFFSET1_n$ is used for $TEMP_OFFSET_n$ to calculate $TO_n$. If it is indicated in system information that HCS is not used, $TEMP_OFFSET_n$ is not applied when calculating $R_n$. The best ranked cell is the cell with the highest R value.

If a TDD cell is ranked as the best cell, the UE shall perform cell re-selection to that TDD cell.

If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell.

4.3 In all cases, the UE shall reselect the new cell, only if the the following conditions are met:

- the new cell is better ranked than the serving cell during a time interval Treselection.
- more than 1 second has elapsed since the UE camped on the current serving cell.

5. When cell status "barred" is indicated, the UE shall select another cell according to the following rule:

5.1 If the "Intra-frequency cell re-selection indicator" IE in Cell Access Restriction IE is set to value "allowed", the UE may select another cell on the same frequency if selection/re-selection criteria are fulfilled.

- If the UE is camping on another cell, the UE shall exclude the barred cell from the neighbouring cell list until the expiry of a time interval $T_{barred}$. The time interval $T_{barred}$ is sent via system information in a barred cell together with Cell status information in the Cell Access Restriction IE.
- If the UE does not select another cell, and the barred cell remains to be the "best" one, the UE shall after expiry of the time interval $T_{barred}$ again check whether the status of the barred cell has changed.

5.2 If the "Intra-frequency cell re-selection indicator" IE is set to "not allowed" the UE shall not re-select a cell on the same frequency as the barred cell. For emergency call, the Intra-frequency cell re-selection indicator IE" shall be ignored, i.e. even if it is set to "not allowed" the UE may select another intra-frequency cell.

References

1. TS 25.304, 5.2.1
2. TS 25.304, 4.3
3. TS 25.304, 5.2.5.1
4. TS 25.304, 5.2.6.1.4
5. TS 25.304, 5.3.1.1

#### 6.1.2.8.3 Test purpose

1. To confirm that the UE treats the cell of the equivalent PLMN as a cell of the current PLMN.
2. To verify that the UE performs cell reselection on the following occasions:

2.1 Serving cell becomes barred.

2.2 S<0 for serving cell.

3. To verify conformance requirement 5.

NOTE: Reselection triggered by the cell becoming a part of a forbidden registration area is tested in clause 9.4.2.3 "Location updating / rejected / location area not allowed" and 9.4.2.4 "Location updating / rejected / roaming not allowed in this LA".

#### 6.1.2.8.4 Method of test

Initial conditions

Treselection, Qhyst, Qoffset, TEMP_OFFSET and PENALTY_TIME are not used, so the cell-ranking criterion R equals CPICH_RSCP for FDD cells, and P-CCPCH RSCP for TDD cells.

The UE is Idle Updated on PLMN1 in cell 1.

Cell 1 indicates in System Information Block Type 11 that Cell 2 and Cell 4 are neighbouring cells.

Cell 2 indicates in System Information Block Type 11 that Cell 1 and Cell 4 are neighbouring cells.

Cell 4 indicates in System Information Block Type 11 that Cell 1 and Cell 2 are neighbouring cells.

Step a-c (FDD):

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 |
|---|---|---|---|---|
| Test Channel | | 1 | 1 | 2 |
| PLMN | | PLMN 1 | PLMN 2 | PLMN 3 |
| CPICH_Ec | dBm/ 3.84 MHz | -60 | -67 | -80 |
| Qrxlevmin | dBm | -115 | -115 | -115 |
| Qqualmin | dB | -16 | -16 | -16 |
| Srxlev* | dB | 55 | 48 | 35 |
| CellBarred | | Not barred | Not barred | Not barred |

Step a-c (TDD):

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 |
|---|---|---|---|---|
| Test Channel | | 1 | 1 | 2 |
| PLMN | | PLMN 1 | PLMN 2 | PLMN 3 |
| P-CCPCH RSCP | dBm | -69 | -74 | -79 |
| Qrxlevmin | dBm | -103 | -103 | -103 |
| Srxlev* | dB | 34 | 29 | 24 |

Step d-f:

| | | | | |
|---|---|---|---|---|
| CellBarred | | Not barred->Barred | | |
| Intra-frequency cell re-selection indicator | | Not Allowed | | |
| Tbarred | s | 10 | | |

Step g-h:

| | | | | |
|---|---|---|---|---|
| Intra-frequency cell re-selection indicator | | Not Allowed -> Allowed | | |

Step i-k:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 |
|---|---|---|---|---|
| CellBarred | | Barred -> Not barred | Not barred | Not barred |

Step l-m (FDD):

| | | | | |
|---|---|---|---|---|
| Qrxlevmin | dBm | -115 -> -51 | -115 | -115 |
| Qqualmin | dB | -16 | -16 | -16 |
| Srxlev* | dBm | 55 -> -9 | 48 | 35 |

Step l-m (TDD):

| | | | | |
|---|---|---|---|---|
| Qrxlevmin | dBm | -103 -> -59 | -103 | -103 |
| Srxlev* | dBm | 34 -> -10 | 29 | 24 |

### Test procedure

Method C is applied.

a) The UE is switched off. The SS activates Cell 2 and 4.

b) The UE is switched on.

c) The SS waits for random access requests from the UE. A complete Location Update is done. SS specifies PLMN 2 and 3 are Equivalent to PLMN 1 in Location Update Accept Message. For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure. In these cases, the GMM Attach Accept message shall include PLMN2 and PLMN3 in the equivalent PLMN list.

d) The SS sets Cell 1 to be barred. The SS notifies UE of the BCCH modification.

e) The SS waits for random access requests from the UE. A complete Location Update is done. SS specifies PLMN 1 and 2 are Equivalent to PLMN 3 in Location Update Accept Message. For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM Routing Area Updating procedure. In these cases, the Routing Area Update Accept message shall include PLMN1 and PLMN2 in the equivalent PLMN list.

f) The SS sets "Intra-frequency cell re-selection indicator" to "Allowed".

g) The SS waits for random access requests from the UE. A complete Location Update is done. SS specifies PLMN 1 and 3 are Equivalent to PLMN 2 in Location Update Accept Message. For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by a Routing Area Updating procedure. In these cases, the Routing Area Update Accept message shall include PLMN1 and PLMN3 in the equivalent PLMN list.

h) Void

i) The SS sets Cell 1 to be not barred.

j) Void

k) The SS waits for random access requests from the UE. A complete Location Update is done. SS specifies PLMN 2 and 3 are Equivalent to PLMN 1 in Location Update Accept Message. For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by a Routing Area Updating procedure. In these cases, the Routing Area Update Accept message shall include PLMN2 and PLMN3 in the equivalent PLMN list.

l) For FDD cell, Qrxlevmin is increased to -51 dBm, so S will become negative.
For TDD cell, Qrxlevmin is increased to -59 dBm, so S will become negative.
The SS notifies UE of the BCCH modification

m) The SS waits for random access requests from the UE.

#### 6.1.2.8.5 Test requirements

1) In step c), after the UE has responded on Cell 1, it shall not respond on any other cell within 1 min.

2) In step e), the UE shall respond on Cell 4.

3) In step g), the UE shall respond on Cell 2.

4) In step k), the UE shall respond on Cell 1. After the UE has responded on Cell 1, it shall not respond on any other cell within 1 min.

5) In step m), the UE shall respond on Cell 2.

### 6.1.2.9 Void

### 6.1.2.9a Cell reselection using cell status and cell reservations – Type "A" USIM

#### 6.1.2.9a.1 Definition

Test to verify that the UE correctly interprets cell status and cell reservations when performing cell reselection.

#### 6.1.2.9a.2 Conformance requirement

1. When cell status is indicated as "not barred", "not reserved" for operator use and "not reserved" for future extension (Cell Reservation Extension),

   - the UE may select/re-select this cell during the cell selection and cell re-selection procedures in Idle mode and in Connected mode.

2. When cell status is indicated as "not barred", "not reserved" for operator use and "reserved" for future extension (Cell Reservation Extension),

   - UEs shall behave as if cell status "barred" is indicated using the value "not allowed" in the IE "Intra-frequency cell re-selection indicator" and the maximum value for $T_{barred}$, see [8] (see also below).

3. When cell status is indicated as "not barred" and "reserved" for operator use,

   - UEs assigned to Access Class 11 or 15 may select/re-select this cell if in the home PLMN.

   - UEs assigned to an Access Class in the range 0 to 9 and 12 to 14 shall behave as if cell status "barred" is indicated using the value "not allowed" in the IE "Intra-frequency cell re-selection indicator" and the maximum value for $T_{barred}$, see [8] (see also below).

4. When cell status "barred" is indicated,

   - The UE is not permitted to select/re-select this cell, not even for emergency calls.

   - The UE shall ignore the "Cell Reserved for future extension (Cell Reservation Extension) use" IE.

   - The UE shall select another cell according to the following rule:

     - If the "Intra-frequency cell re-selection indicator" IE in Cell Access Restriction IE is set to value "allowed", the UE may select another cell on the same frequency if selection/re-selection criteria are fulfilled.

       - If the UE is camping on another cell, the UE shall exclude the barred cell from the neighbouring cell list until the expiry of a time interval $T_{barred}$. The time interval $T_{barred}$ is sent via system information in a barred cell together with Cell status information in the Cell Access Restriction IE.

       - If the UE does not select another cell, and the barred cell remains to be the "best" one, the UE shall after expiry of the time interval $T_{barred}$ again check whether the status of the barred cell has changed.

     - If the "Intra-frequency cell re-selection indicator" IE is set to "not allowed" the UE shall not re-select a cell on the same frequency as the barred cell. For emergency call, the Intra-frequency cell re-selection indicator IE" shall be ignored, i.e. even if it is set to "not allowed" the UE may select another intra-frequency cell.

- If the barred cell remains to be the "best" one, the UE shall after expiry of the time interval $T_{barred}$ again check whether the status of the barred cell has changed.

The reselection to another cell may also include a change of RAT.

Reference(s)

3GPP TS 25.304, clause 5.3.1.1

### 6.1.2.9a.3 Test purpose

1. To verify that when cell status is indicated as "not barred" and "reserved" for operator use,

   - UEs assigned to an Access Class in the range 0 to 9 shall behave as if cell status "barred" is indicated using the value "not allowed" in the IE "Intra-frequency cell re-selection indicator" and the maximum value for $T_{barred}$.

### 6.1.2.9a.4 Method of test

Initial conditions

Use of USIM with "Type A" $EF_{ACC}$ as defined in TS 34.108.

Step a-c (FDD):

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 |
|---|---|---|---|---|
| Test Channel | | 1 | 1 | 2 |
| LAC | | 0001 | 0002 | 0003 |
| CPICH_Ec | dBm/3.84 MHz | -58 | -68 | -78 |
| Qqualmin | dB | -16 | -24 | -16 |
| Qrxlevmin | dBm | -83 | -83 | -83 |
| Srxlev* | dB | 25 | 15 | 5 |
| Cell Reserved for operator use | | not reserved | not reserved | not reserved |
| Cell Reservation Extension | | not reserved | not reserved | not reserved |

Step a-c (TDD):

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 |
|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -69 | -74 | -79 |
| Qrxlevmin | dBm | -83 | -83 | -83 |
| Srxlev* | dB | 15 | 10 | 5 |

Step d-e:

| | | | | |
|---|---|---|---|---|
| Cell Reserved for operator use | | not reserved -> reserved | not reserved | not reserved |
| Cell Reservation Extension | | not reserved | not reserved | not reserved |

Step f-g:

| | | | | |
|---|---|---|---|---|
| Cell Reserved for operator use | | reserved -> not reserved | not reserved | not reserved |
| Cell Reservation Extension | | not reserved | not reserved | not reserved |

Related ICS/IXIT Statement(s)

None

Test procedure

Method C applied.

a) The SS activates Cell 1, 2 and 4, and monitors them for random access requests from the UE.

b) The UE is switched on.

c) The SS waits to see if there are any random access requests from the UE.

d) The SS sets Cell 1 to "reserved" for operator use. The SS notifies UE of the BCCH modification.

e) The SS waits to see if there are any random access requests from the UE.

f) The SS sets Cell 1 to "not reserved" for operator use.

g) The SS waits to see if there are any random access requests from the UE.

#### 6.1.2.9a.5 Test requirements

1) In step c), the UE shall respond on Cell 1.

2) In step e), the UE shall respond on Cell 4.

3) In step g), the UE shall respond on Cell 1 after 1280 seconds (maximum value for Tbarred) from SS notified UE of the BCCH modification in Cell 1 in step d).

### 6.1.2.9b Cell reselection using cell status and cell reservations – Type “B” USIM

#### 6.1.2.9b.1 Definition

This test case is identical to test case 6.1.2.9a except that the USIM used for this test case is of type “B”.

#### 6.1.2.9b.2 Conformance requirement

Same conformance requirement as in clause 6.1.2.9a.2

#### 6.1.2.9b.3 Test purpose

1. To verify that when cell status is indicated as "not barred", "not reserved" for operator use and "reserved" for future extension (Cell Reservation Extension),

   - UEs behave as if cell status "barred" is indicated using the value "not allowed" in the IE "Intra-frequency cell re-selection indicator" and the maximum value for $T_{barred}$.

2. To verify that when cell status is indicated as "not barred" and "reserved" for operator use,

   - UEs assigned to Access Class 11-15 may select/re-select this cell if in the home PLMN.

#### 6.1.2.9b.4 Method of test

Initial conditions

Test procedure: Use of USIM with "Type B" $EF_{ACC}$ as defined in TS 34.108.

Step a-c (FDD):

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 |
|---|---|---|---|---|
| LAC | | 0001 | 0002 | 0003 |
| Test Channel | | 1 | 1 | 2 |
| CPICH_Ec | dBm/3.84 MHz | -58 | -68 | -78 |
| Qqualmin | dB | -16 | -24 | -16 |
| Qrxlevmin | dBm | -83 | -83 | -83 |
| Srxlev* | dB | 25 | 15 | 5 |
| Cell Reserved for operator use | | not reserved | not reserved | not reserved |
| Cell Reservation Extension | | not reserved | not reserved | not reserved |

Step a-c (TDD):

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 |
|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -68 | -73 | -78 |
| Qrxlevmin | dBm | -83 | -83 | -83 |
| Srxlev* | dB | 15 | 10 | 5 |

Step d-e:

| | | | | |
|---|---|---|---|---|
| Cell Reserved for operator use | | not reserved | not reserved | not reserved |
| Cell Reservation Extension | | not reserved -> reserved | not reserved | not reserved |

Step f-g:

| | | | | |
|---|---|---|---|---|
| Cell Reserved for operator use | | not reserved -> reserved | not reserved | not reserved |
| Cell Reservation Extension | | reserved | not reserved | not reserved |

### Related ICS/IXIT Statement(s)

None

### Test procedure

Method C applied.

a) The SS activates Cell 1, 2 and 4, and monitors them for random access requests from the UE.

b) The UE is switched on.

c) The SS waits to see if there are any random access requests from the UE.

d) The SS sets Cell 1 to "reserved" for future extension. The SS notifies UE of the BCCH modification.

e The SS waits to see if there are any r random access requests from the UE.

f The SS sets Cell 1 to "reserved" for operator use.

g) The SS waits to see if there are any random access requests from the UE.

### 6.1.2.9b.5 Test requirements

1) In step c), the UE shall respond on Cell 1.

2) In step e), the UE shall respond on Cell 4.

3) In step g), the UE shall respond on Cell 1 after 1280 seconds (maximum value for Tbarred) from SS notified UE of the BCCH modification in Cell 1 in step d).

## 6.1.2.10 HCS inter-frequency cell reselection

### 6.1.2.10.1 Definition

Test to verify that the UE performs inter-frequency cell reselection correctly for hierarchical cell structures in FDD. This shall be done according to the received signal quality value Q and the quality level thresholds Sintrasearch, Sintersearch and SsearchHCS.

### 6.1.2.10.2 Conformance requirement

1. When camped normally, the UE shall execute the cell reselection evaluation process on the following occasions/triggers:

   1.1 UE internal triggers, so as to meet performance as specified in TS 25.133 for FDD mode.

   1.2 When information on the BCCH used for the cell reselection evaluation procedure has been modified.

2. Cell Reselection Criteria for hierarchical cells:

   2.1 The quality level thresholds for measurement rules for cell reselection can be used to control inter-frequency cell reselections. Intra-frequency cell reselections shall still be performed if Sintrasearch is not sent.

   2.2 The quality level threshold criterion H for hierarchical cell structures is used to determine whether prioritised ranking according to hierarchical cell re-selection rules shall apply, and is calculated from the Q, Qhcs, TEMP_OFFSET and PENALTY_TIME parameters.

   2.3 The UE shall perform ranking of all cells that fulfil the S criterion among all cells that have the highest HCS_PRIO among those cells that fulfil the criterion H >= 0.

   2.4 The cells shall be ranked according to the R criteria. The best ranked cell is the cell with the highest R value. If an FDD cell is ranked as the best cell, the UE shall perform cell re-selection to that FDD cell. If a TDD cell is ranked as the best cell, the UE shall perform cell re-selection to that TDD cell.

   2.5 In all cases, the UE shall reselect the new cell, only if the cell reselection criteria are fulfilled during a time interval Treselection.

   2.6 The cell-ranking criterion R is derived from Q, Qhyst, Qoffset, TEMP_OFFSET, PENALTY_TIME.

References

1. TS 25.304, clause 5.2.2.
2. TS 25.304, clause 5.2.6.1.2.
3. TS 25.304, clause 5.2.6.1.4.

### 6.1.2.10.3 Test purpose

1. Verify that in FDD the UE ignores inter-frequency cells for reselection when the inter-frequency cells have equal or lower HCS priority than the serving cell, and Sintraseach is not sent, and Sintersearch < Squal and SsearchHCS < Srxlev.
2. Verify that in FDD the UE reselect to an inter-frequency cells when Sintraseach is not sent, and Sintersearch < Squal but SsearchHCS > Srxlev. The modification of this parameter on the BCCH shall trigger the cell reselection evaluation process. Qhyst, Qoffset, TEMP_OFFSET, PENALTY_TIME and Treselection are not applied so R equals CPICH_RSCP for FDD cells.

### 6.1.2.10.4 Method of test

Initial conditions

SS shall indicate in System Information that HCS is in use.

Each cell shall include the other cells as neighbouring cells in System Information Block Type 11.

For FDD only:

Step a- d:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|---|
| Test Channel | | 1 | 1 | 2 |
| LAC | | 0001 | 0002 | 0003 |
| HCS priority | | 6 | 6 | 6 |
| CPICH_Ec | dBm/3.84 MHz | -70 | -65 | -60 |
| CPICH_Ec/No | dB | -11 | -6 | -5 |
| Qrxlevmin | dBm | -109 | -105 | -99 |
| Qqualmin | dB | -24 | -24 | -24 |
| Srxlev* | dB | 39 | 40 | 39 |
| Squal* | dB | 13 | 18 | 19 |
| Sintrasearch | dB | 8 | 8 | 8 |
| Sintersearch | dB | 8 | 8 | 8 |
| SsearchHCS | dB | 31 | 31 | 31 |
| $Qhcs_s$ | dBm | -80 | -80 | -80 |
| $Qhcs_{n=1}$ | dBm | n/a | -80 | -80 |
| $Qhcs_{n=2}$ | dBm | -80 | n/a | -80 |
| $Qhcs_{n=4}$ | dBm | -80 | -80 | n/a |
| $H_s$* | dB | 10 | 15 | 20 |
| $H_{n=1}$* | dB | n/a | 10 | 10 |
| $H_{n=2}$* | dB | 15 | n/a | 15 |
| $H_{n=4}$* | dB | 20 | 20 | n/a |

Step e-f:

| | | | | |
|---|---|---|---|---|
| Sintrasearch | dB | 8 -> n/a | 8 -> n/a | 8 -> n/a |

Step g-h:

| | | | | |
|---|---|---|---|---|
| Srxlev* | dB | 39 | 40->20 | 39 |
| Qrxlevmin | dBm | -109 | -105 -> -85 | -99 |

Test procedure

Method C is applied.

a) The SS activates cell 1.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The SS activates cells 2 and 3 and monitors them for random access requests from the UE.

e) The SS stops the transmission of Sintrasearch in all cells, and notifies UE of the BCCH modification.

f) The SS waits for random access requests from the UE.

g) The SS changes Qrxlevmin for Cell 2, and notifies UE of the BCCH modification.

h) The SS waits for random access requests from the UE.

6.1.2.10.5 Test requirements

1) In step c, the UE shall respond on cell 1.

2) In step d, the UE shall not respond on cell 2 or 3.

3) In step f), the UE shall respond on Cell 2.

4) In step h), the UE shall respond on Cell 3.

## 6.1.2.10a HCS inter-frequency cell reselection for inter-band operation

### 6.1.2.10a.1 Definition

This test case is identical to test case 6.1.2.10 except that the inter-frequency cell to be reselected is on a different frequency band.

### 6.1.2.10a.2 Conformance requirement

Same conformance requirement as in clause 6.1.2.10.2.

### 6.1.2.10a.3 Test purpose

Same test purpose as in clause 6.1.2.10.3 except that the inter-frequency cell to be reselected is on a different frequency band.

### 6.1.2.10a.4 Method of test

#### Initial conditions

Same initial conditions as in clause 6.1.2.10.4 except that cells 1and 2 use test channel 1 as specified in Table 6.3 for the primary band and that cell 3 uses test channel 2 as specified in Table 6.3 for the secondary band. Primary and secondary bands are selected according to PIXIT parameters.

#### Related ICS/IXIT statement(s)

- UE supports multiple bands simultaneously yes/no

#### Test procedure

Same test procedure as in clause 6.1.2.10.4.

Note: If the UE supports more than 2 frequency bands, the test may be executed for various band combinations.

### 6.1.2.10a.5 Test requirements

Same test requirement as in clause 6.1.2.10.5.

## 6.1.2.11 Cell reselection in shared network environment

### 6.1.2.11.1 Definition

Test to verify that the UE performs cell reselection according to core specification 25.304 in a shared network environment (FDD). Correct handling of equivalent PLMNs is also verified.

### 6.1.2.11.2 Conformance requirement

1. suitable cell:

   A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

   - The cell shall be part of either:
     - the selected PLMN, or:
     - the registered PLMN, or:
     - a PLMN of the Equivalent PLMN list

     according to the latest information provided by the NAS.
   - The cell is not barred, see subclause 5.3.1.1;
   - The cell is part of at least one LA that is not part of the list of "forbidden LAs for roaming" [9], which belongs to a PLMN that fulfills the first bullet above;
   - The cell selection criteria are fulfilled, see subclause 5.2.3.1.2.

If the IE “Multiple PLMN List” [4] is broadcast in the cell, the cell is considered to be part of all LAs with LAIs constructed from the PLMN identities in the “Multiple PLMN List” and the LAC broadcast in the cell.

2. When camped on a cell, the UE shall regularly search for a better cell according to the cell reselection criteria. If a better cell is found, that cell is selected. The change of cell may imply a change of RAT.

3. When camped normally, the UE shall perform the following tasks:

   - select and monitor the indicated PICH and PCH of the cell as specified in clause 8 according to information sent in system information;

   - monitor relevant System Information. This is specified in [4];

   - perform necessary measurements for the cell reselection evaluation procedure;

   - execute the cell reselection evaluation process on the following occasions/triggers:

     1) UE internal triggers, so as to meet performance as specified in [10] and [11];

     2) When information on the BCCH used for the cell reselection evaluation procedure has been modified

4. Cell Reselection Criteria:

   4.1 If HCS is not used in the serving cell the UE shall perform ranking of all cells that fulfil the criterion S, among:

   - all measured cells (see subclause 5.2.6.1.1).

   4.2 The cells shall be ranked according to the R criteria, deriving Qmeas,n and Qmeas,s and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in TS 25.133 and TS 25.123 for FDD, TDD and GSM cells, respectively.

   The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$.

   …

   If the usage of HCS is indicated in system information, $TEMP_OFFSET1_n$ is used for $TEMP_OFFSET_n$ to calculate $TO_n$. If it is indicated in system information that HCS is not used, $TEMP_OFFSET_n$ is not applied when calculating $R_n$. The best ranked cell is the cell with the highest R value.

   …

   If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell.

   4.3 In all cases, the UE shall reselect the new cell, only if the the following conditions are met:

   - the new cell is better ranked than the serving cell during a time interval Treselection.

   …

   - more than 1 second has elapsed since the UE camped on the current serving cell.

5. Location Registration

   In the UE, the AS shall report registration area information to the NAS.

   If the UE reads more than one PLMN identity in the current cell, the UE shall report the found PLMN identities that make the cell suitable in the registration area information to NAS.

6. Location updating accepted by the network

   The network may also send a list of "equivalent PLMNs" in the LOCATION UPDATING ACCEPT message. Each entry of the list contains a PLMN code (MCC+MNC). The mobile station shall store the list, as provided by the network, except that any PLMN code that is already in the "forbidden PLMN list" shall be removed from the "equivalent PLMNs" list before it is stored by the mobile station. In addition the mobile station shall add to

the stored list the PLMN code of the registered PLMN that sent the list. All PLMNs in the stored list shall be regarded as equivalent to each other for PLMN selection, cell selection/re-selection and handover. The stored list in the mobile station shall be replaced on each occurrence of the LOCATION UPDATING ACCEPT message. If no list is contained in the message, then the stored list in the mobile station shall be deleted. The list shall be stored in the mobile station while switched off so that it can be used for PLMN selection after switch on.

,References

1. TS 25.304, 4.3
2. TS 25.304, 5.2.1
3. TS 25.304, 5.2.5.1
4. TS 25.304, 5.2.6.1.4
5. TS 25.304, 5.5
6. TS 24.008, 4.4.4.6

### 6.1.2.11.3 Test purpose

1. To verify that the UE is able to reselect to a higher ranked cell in shared network environment.
2. To verify that the UE treats a cell of an Equivalent PLMN as a cell of the Registered PLMN for cell reselection in shared network environment.
3. To verify that the UE respects the IE “MIB PLMN Identity” in Camped Normally state.
4. To verify correct behavior if the stored Equivalent PLMN list is deleted on reception of Location Area Update Accept or Routing Area Update Accept message not containing an Equivalent PLMN list.

### 6.1.2.11.4 Method of test

Initial conditions

The UE is equipped with a USIM containing default values. The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

Cell reselection parameters are set to default values, so the cell-ranking criterion R equals CPICH_RSCP.

Each cell indicates in System Information Block Type 11 that all other cells are neighbouring cells.

Cell 2, Cell 4 and Cell 7 are switched off.

The reference system configuration from TS34.108 clause 6.1 are used in all cells, with the following modifications:

Master Information Block

| | |
|---|---|
| - MIB value tag | Set to (Current MIB value tag + 1) |
| - Supported PLMN types | |
| - PLMN type | GSM-MAP |
| - PLMN identity | |
| - MCC digit | See table below |
| - MNC digit | See table below |
| - Multiple PLMN List | |
| - MIB PLMN Identity | See table below |
| - Multiple PLMNs (1) | |
| - MCC | See table below |
| - MNC | See table below |
| - Multiple PLMNs (2) | |
| - MCC | See table below |
| - MNC | See table below |

The MIB PLMN Identity and PLMN codes broadcasted on the BCCH in each cell shall be configured as defined in the table below.

| Cell | MIB PLMN Identity | PLMN Identity | | Multiple PLMNs (1) | | Multiple PLMNs (2) | |
|---|---|---|---|---|---|---|---|
| | | MCC digits | MNC digits | MCC digits | MNC digits | MCC digits | MNC digits |
| 1 | TRUE | PLMN 1 | PLMN 1 | - | PLMN 2 | - | PLMN 3 |
| 2 | FALSE | PLMN 3 | PLMN 3 | - | PLMN 2 | - | PLMN 1 |
| 4 | FALSE | PLMN 4 | PLMN 4 | - | PLMN 5 | - | PLMN 6 |
| 7 | FALSE | PLMN 6 | PLMN 6 | - | PLMN 5 | - | PLMN 4 |

The definition of each PLMN code is found in table below.

| PLMN | MCC digit | | | MNC digit | | |
|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 1 | 2 | 3 |
| 1 | 0 | 0 | 1 | 0 | 1 | - |
| 2 | 0 | 0 | 1 | 0 | 2 | - |
| 3 | 0 | 0 | 1 | 0 | 3 | - |
| 4 | 0 | 0 | 1 | 0 | 4 | - |
| 5 | 0 | 0 | 1 | 0 | 5 | - |
| 6 | 0 | 0 | 1 | 0 | 6 | - |

NOTE: "–" (dash) denotes "not present"

System Information Block type 1

The GSM-MAP NAS system information (LAC) broadcasted on the BCCH in each cell shall be configured as defined below.

| | |
|---|---|
| - CN common GSM-MAP NAS system information | |
| - GSM-MAP NAS system information | See table below |

System Information Block type 3 and 4

| Parameter | Cell 1 | Cell 2 | Cell 4 | Cell 7 |
|---|---|---|---|---|
| q_QualMin | -24 | -16 | -16 | -24 |

| Cell | LAC |
|---|---|
| 1 | 1 |
| 2 | 2 |
| 4 | 4 |
| 7 | 7 |

Step a-e

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 | Cell 7 |
|---|---|---|---|---|---|
| Test Channel | | 1 | 1 | 2 | 3 |
| CPICH_Ec | dBm/ 3.84 MHz | -84 | -78 | -72 | -66 |

Step f-g

| Parameter | Unit | Cell 1 | Cell 2 | Cell 4 | Cell 7 |
|---|---|---|---|---|---|
| CPICH_Ec | dBm/ 3.84 MHz | -84 -> -60 | -78 -> -60 | -72 | -66 |

Test procedure

Method C is applied.

a) The UE is switched on.

b) The SS waits for random access requests from the UE. A complete Location Update is done. For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure.

c) Cell 2, Cell 4 and Cell 7 are switched on.

d) The SS waits for random access requests from the UE. A complete Location Update is done. SS specifies PLMN 6 as Equivalent to PLMN1 in Location Update Accept Message. For UE that supports both CS and PS domains or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM Routing Area Updating procedure. In these cases, the Routing Area Update Accept message shall include PLMN6 in the equivalent PLMN list.

e) The SS waits for random access requests from the UE. A complete Location Update is done. For UE that supports both CS and PS domains or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure.

f) The SS changes the levels of Cell 1 and Cell 2.

g) The SS waits for random access requests from the UE.

#### 6.1.2.11.5 Test requirements

1) In step b), the UE shall respond on Cell 1.

2) In step d), the UE shall respond on Cell 2.

3) In step e), the UE shall respond on Cell 4.

4) In step g), the UE shall not respond on Cell 1, Cell 2 or Cell 5 within 1 min.

## 6.1.3 MBSFN Cluster selection and reselection (3.84/7.68 Mcps TDD)

### 6.1.3.1 MBSFN only service recognition

#### 6.1.3.1.1 Definition

Test to verify that a UE supporting both transmit and receive functions on 3.48 Mcps TDD or 7.68 Mcps TDD correctly distinguishes an MBSFN only mode cluster from a TDD unicast carrier cell and performs the procedures for either MBSFN cluster selection or UTRAN unicast carrier cell selection as appropriate. The TDD unicast carrier cell may have some (but not all) timeslots assigned to TDD MBSFN.

#### 6.1.3.1.2 Conformance requirement

The MS shall perform registration on the PLMN if the MS is capable of services which require registration. In both automatic and manual modes, the concept of registration on a PLMN is used. An MS successfully registers on a PLMN if:

a) The MS has found a suitable cell of the PLMN to camp on; and

b) An LR request from the MS has been accepted in the registration area of the cell on which the MS is camped (see table 1).

…

The registration on the selected PLMN and the location registration are only necessary if the MS is capable of services which require registration. Otherwise, the PLMN selection procedures are performed without registration.

…

At switch on, or following recovery from lack of coverage, the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see clause 4.5.2) attempts to perform a Location Registration.

…

suitable cell:

A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

- The cell shall be part of either:
  - the selected PLMN, or:
  - the registered PLMN, or:
  - a PLMN of the Equivalent PLMN list

  according to the latest information provided by the NAS.
- The cell is not barred, see subclause 5.3.1.1;
- The cell is part of at least one LA that is not part of the list of "forbidden LAs for roaming" [9], which belongs to a PLMN that fulfills the first bullet above;
- The cell selection criteria are fulfilled, see subclause 5.2.3.1.2.

If the IE “Multiple PLMN List” [4] is broadcast in the cell, the cell is considered to be part of all LAs with LAIs constructed from the PLMN identities in the “Multiple PLMN List” and the LAC broadcast in the cell.

…

suitable MBSFN cluster:

A cell is part of an MBSFN cluster if it is indicated in system information [4]. An MBSFN cluster provides exclusively MBMS services. A suitable MBSFN cluster shall fulfil all the following requirements:

- For FDD and 3.84/7.68 Mcps TDD the MBSFN cluster shall be part of either:
  - the registered PLMN, or:
  - a PLMN of the Equivalent PLMN list

The MBSFN cluster shall be indicated as:

- providing MBSFN only service

…

The UE shall search for MBSFN clusters if the frequencies on which MBSFN clusters are available are not indicated in the cell that the UE is camping on for normal service if the mobile is configured to receive services via MBSFN mode. Details of the process are not specified.

…

When camped on a MBSFN cluster, the UE shall perform the following tasks:

- receive the MCCH as specified in clause 8.4 and in [4];

…

If the IE "MBSFN only service" is set to TRUE the UE shall:

1> consider this cell to operate in MBSFN mode;

1> for TDD consider that all slots operate in MBSFN mode;

1> for FDD and 3.84/7.68 Mcps TDD if the UE capabilities allow the reception of MBSFN in addition to the normal UE operation the UE may receive MBMS services from this cell in accordance with requirements for selection of a cell providing only MBSFN as specified in [4]. For 1.28 Mcps TDD, if the UE capabilities allow the reception of MBSFN in addition to the normal UE operation the UE may get synchronized to the MBSFN cluster as specified in [4].

…

A cell provides MBMS service in MBSFN mode if it is indicated so in system information, see subclause 8.1.1.6.3. A UE that supports MBSFN operation may receive MBMS services via a cell operating in MBSFN mode. For FDD and 3.84/7.68 Mcps TDD in order to receive an MBMS service via a MBSFN cluster the UE shall select the MBSFN cluster as specified in [4] in addition to selecting a cell for normal camping as specified in [4].

…

For FDD and 3.84/7.68 Mcps TDD if the IE "MBSFN frequency list" is not included in system information block 11 and if services are listed in the variable MBMS_ACTIVATED_SERVICES a UE supporting reception of MBMS service in MBSFN mode shall search for cells providing MBMS service in MBSFN mode.

…

If the variable MBMS_ACTIVATED_services is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS or an MBSFN cluster, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

References

TS 23.122, 4.4.2, 4.4.3, 4.4.3.1

TS 25.304, 4.3, 6.3.1.1, 6.3.1.2

TS 25.331, 8.1.1.6.3, 8.5.43, 8.6.9.9ac, 8.7.2.2

#### 6.1.3.1.3 Test purpose

1. To verify that the UE initiates PLMN registration following selection of a cell that does not indicate MBSFN only mode.

2. To verify that the UE performs PLMN selection procedures without registration in an MBSFN only mode cluster.

#### 6.1.3.1.4 Method of test

Initial condition

System Simulator:

MBSFN carrier: 1 cell, Cell 31 (PLMN1). In addition to broadcasting System Information, MCCH messages are transmitted by the SS using MBMS configuration C2 and Default1 MCCH scheduling (One ongoing session) according to subclause 11.2 of TS 34.108.

Unicast carrier: 1 cell, Cell 1 (PLMN1) with default configuration. The unicast carrier cell shall support TDD 3.84 Mcps or 7.68 Mcps as appropriate to UE.

User Equipment:

The UE is switched off.

The UE is equipped with a Test-USIM containing default values. The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode available on UE Yes/No.

- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

a) The UE is switched on.

b) The UE registers as specified in clause 7.2.2 of TS 34.108 on the unicast carrier Cell 1. On the unicast carrier Cell 1, a Location Update Accept message shall be sent on reception of a Location Updating Request message from the UE. The Location Updating Accept message shall include PLMN2 in the equivalent PLMN list. For a UE that supports both CS and PS domains or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure. In these cases, the GMM Attach Accept message shall include PLMN2 in the equivalent PLMN list.

c) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE. The SS then sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MCCH of Cell 31.

d) The SS activates Cell 31.

e) One MBMS service from the list of services available on the Dedicated National Carrier (see TS 34.108 clause 11.2) is activated on the UE.

f) The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

g) The UE camps on Cell 31 on the MBSFN carrier. The UE shall perform the MCCH acquisition procedure. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

Expected sequence

| Step | Direction | | Carrier | Message | Comments |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | UE | | U | | The UE is switched on and camps on unicast carrier Cell 1. |
| 2 | → | | U | LOCATION UPDATING REQUEST | For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure |
| 3 | ← | | U | LOCATION UPDATING ACCEPT | |
| 4 | → | | U | TMSI REALLOCATION COMPLETE | |
| 5 | ← | | U | ACTIVATE RB TEST MODE | |
| 6 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 7 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for the selected national service on Cell 31. |
| 8 | SS | | M | | Cell 31 is activated |
| 9 | UE | | M | | MBMS National Service 1 is activated. |
| 10 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 5 | |
| 11 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing session. (Service activated at the UE). 124 kbps PS RAB |
| 12 | UE | | M | | The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. |

| Step | Direction | | Carrier | Message | Comments |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 13 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 14 | ← | | U | OPEN UE TEST LOOP | |
| 15 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 16 | ← | | U | DEACTIVATE RB TEST MODE | |
| 17 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carrier and in TS 34.108 clause 9.1.1 or clause 9.1.2 for the unicast carrier:

There are no exceptions for this test case.

#### 6.1.3.1.5 Test requirements

1) The UE sends a LOCATION UPDATING REQUEST message on the unicast carrier at step 2.

2) The UE sends a CLOSE UE TEST LOOP COMPLETE message on the unicast carrier at step 13.

### 6.1.3.2 Suitable PLMN selection; MBSFN Frequency List present (unicast carrier)

#### 6.1.3.2.1 Definition

Test to verify that the UE performs selection of a suitable MBSFN cluster which is part of the registered PLMN or which is in the stored list of Equivalent PLMN, when the MBSFN Frequency List is present in the SIB11of the unicast carrier on which the UE has registered.

#### 6.1.3.2.2 Conformance requirement

suitable MBSFN cluster:

A cell is part of an MBSFN cluster if it is indicated in system information [4]. An MBSFN cluster provides exclusively MBMS services. A suitable MBSFN cluster shall fulfil all the following requirements:

- For FDD and 3.84/7.68 Mcps TDD the MBSFN cluster shall be part of either:
  - the registered PLMN, or:
  - a PLMN of the Equivalent PLMN list

The MBSFN cluster shall be indicated as:

- providing MBSFN only service

For FDD and 3.84/7.68 Mcps TDD MBSFN cluster selection/reselection process for MBSFN clusters operating on the same frequency shall be based on reception quality. Details of the process are not specified.

…

When camped on a MBSFN cluster, the UE shall perform the following tasks:

- receive the MCCH as specified in clause 8.4 and in [4];

…

A cell provides MBMS service in MBSFN mode if it is indicated so in system information, see subclause 8.1.1.6.3. A UE that supports MBSFN operation may receive MBMS services via a cell operating in MBSFN mode. For FDD and 3.84/7.68 Mcps TDD in order to receive an MBMS service via a MBSFN cluster the UE shall select the MBSFN cluster as specified in [4] in addition to selecting a cell for normal camping as specified in [4].

…

MBSFN frequency list

For FDD and 3.84/7.68 Mcps TDD this IE may be included in system information block 11 in a cell which is not providing MBMS service in MBSFN mode in order to provide information about frequencies providing MBMS service in MBSFN mode.

…

If the variable MBMS_ACTIVATED_services is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS or an MBSFN cluster, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

References

TS 25.304, 4.3, 6.3.1.2

TS 25.331, 8.5.43, 8.6.9.9ac, 8.7.2.2

#### 6.1.3.2.3 Test purpose

1. To verify that when SIB11 of the unicast carrier that a UE is camped on contains IE MBSFN Frequency List, a UE supporting reception of MBMS service in MBSFN mode will select a suitable MBSFN cluster if services are listed in the variable MBMS_ACTIVATED_SERVICE.
2. To verify that the UE when selecting a suitable MBSFN cluster will select an available MBSFN cluster of the registered PLMN (unicast carrier).
3. To verify that the UE when selecting a suitable MBSFN cluster will select an available MBSFN cluster of a PLMN in the stored list of Equivalent PLMN.
4. To verify that the UE having selected a suitable MBSFN cluster will start to acquire the MCCH.

#### 6.1.3.2.4 Method of test

Initial condition

System Simulator:

MBSFN carrier(s): 6 cells. Cell 31 (PLMN1), Cell 32 (PLMN2), Cell 33 (PLMN1), Cell 34 (PLMN2), Cell 35 (PLMN3) and Cell 37 (PLMN3) are all switched off.

Unicast carrier: 1 cell, Cell 1 (PLMN1) default configuration.

Note: The IE MBSFN frequency list is included in SIB11 of Cell 1.

User Equipment:

The UE is switched off.

The UE is equipped with a Test-USIM containing default values. The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

The SS shall apply the downlink power settings as shown below:

Step 1-7:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 33 | Cell 34 | Cell 35 | Cell 37 |
|---|---|---|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | OFF | OFF | OFF | OFF | OFF | OFF |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - | - | - | - |

Step 8-19:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 33 | Cell 34 | Cell 35 | Cell 37 |
|---|---|---|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | OFF | -69 | OFF | -69 | -59 | -59 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - | - | - | - |

Step 20-34:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 33 | Cell 34 | Cell 35 | Cell 37 |
|---|---|---|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | -69 | OFF | -69 | OFF | -59 | -59 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - | - | - | - |

a) The UE is switched on.

b) The UE registers as specified in clause 7.2.2 of TS 34.108 on the unicast carrier Cell 1. On the unicast carrier Cell 1, a Location Update Accept message shall be sent on reception of a Location Updating Request message from the UE. The Location Updating Accept message shall include PLMN2 in the equivalent PLMN list. For a UE that supports both CS and PS domains or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure. In these cases, the GMM Attach Accept message shall include PLMN2 in the equivalent PLMN list.

c) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE. The SS then sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH (Transmission identity corresponding to the activated National Service 1).

d) The SS activates Cell 32, Cell 34, Cell 35 and Cell 37. The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS on all these cells using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

e) After the UE is switched on in step 1 the UE starts searching for an MBSFN cell. Cell search on the MBSFN carrier is independent and not time synchronised with the message sequence on the unicast carrier. One MBMS service (National Service 1) from the list of services available is activated at this stage to ensure MBSFN cell search continues.

f) The UE camps on Cell 32 or Cell 34, recognising PLMN2 as an Equivalent PLMN to the registered PLMN on the unicast carrier. The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

g) The UE shall perform the MCCH acquisition procedure. The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION, the MBMS UNMODIFIED SERVICES INFORMATION, the MBMS GENERAL INFORMATION, the MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M INFORMATION.

h) The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

i) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the activated service on Cell 32. The SS then broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the activated service on Cell 34.

j) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

k) The SS sends OPEN UE TEST LOOP. The UE responds with OPEN UE TEST LOOP COMPLETE.

l) The SS switches off Cell 32 and Cell 34. The SS activates Cell 31 and Cell 33.

m) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH (Transmission identity corresponding to the activated National Service 1).

n) The UE camps on Cell 31 or Cell 33. The UE shall perform the MCCH acquisition procedure. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

o) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the activated service on Cell 31. The SS then broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the activated service on Cell 33.

p) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comments |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | SYSTEM INFORMATION BLOCK TYPE 11 | The UE is switched on and it camps on unicast carrier Cell 1. The IE MBSFN frequency list is present in SIB 11 on the BCCH. |
| 2 | → | | U | LOCATION UPDATING REQUEST | For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure |
| 3 | ← | | U | LOCATION UPDATING ACCEPT | IE Equivalent PLMNs contains PLMN2. PLMN2 is maintained in Equivalent PLMN list of UE. |
| 4 | → | | U | TMSI REALLOCATION COMPLETE | |
| 5 | ← | | U | ACTIVATE RB TEST MODE | |
| 6 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 7 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for the selected national service |
| 8 | SS | | M | | Cells 32, 34, 35 and 37 are switched ON |
| **9** | **UE** | | **M** | | MBMS National Service 1 is activated. UE performs cell search and selects Cell 32 or Cell 34. |

| Step | Direction | | Carrier | Message | Comments |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 10 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 5 | |
| 11 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. 124 kbps PS RAB |
| 12 | UE | | **M** | | The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. |
| 13 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 14 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 32. |
| 15 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 34. |
| 16 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 17 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 18 | ← | | U | OPEN UE TEST LOOP | |
| 19 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 20 | SS | | M | | Cell 32 and Cell 34 are switched OFF. Cell 31 and Cell 33 are switched ON. |
| 21 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for the selected national service |
| 22 | UE | | M | | UE performs cell search and selects Cell 31 or Cell 33. |
| 23 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 5 | |
| 24 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. 124 kbps PS RAB |
| 25 | UE | | M | | The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. |
| 26 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 27 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 31. |
| 28 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 33. |
| 29 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 30 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 31 | ← | | U | OPEN UE TEST LOOP | |
| 32 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 33 | ← | | U | DEACTIVATE RB TEST MODE | |
| 34 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

Contents of System Information Block type 11 (Step 1)

| | |
|---|---|
| …<br>- MBSFN frequency list | |
| - MBSFN frequency | |
| - CHOICE *mode* | TDD |

| | |
|---|---|
| - UARFCN (Nt) | Refer to clause 6.1 "Simulated network environments" for frequency "f1" |
| - MBSFN frequency | |
| - CHOICE *mode* | TDD |
| - UARFCN (Nt) | Refer to clause 6.1 "Simulated network environments" for frequency "f2" |

MBMS UNMODIFIED SERVICES INFORMATION (Step 11 and Step 24)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| Unmodified service list | 4 services | Rel-6 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 1) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 2) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 3) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 4) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |

#### 6.1.3.2.5 Test requirements

1) After step 17, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0.

2) After step 30, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0.

### 6.1.3.3 Suitable PLMN search; MBSFN Frequency List not present (unicast carrier)

#### 6.1.3.3.1 Definition

Test to verify that the UE performs a search and then selection of a suitable MBSFN cluster which is part of the registered PLMN or which is in the stored list of Equivalent PLMN, when the MBSFN Frequency List is not present in the SIB11of the unicast carrier on which the UE has registered.

6.1.3.3.2 Conformance requirement

suitable MBSFN cluster:

A cell is part of an MBSFN cluster if it is indicated in system information [4]. An MBSFN cluster provides exclusively MBMS services. A suitable MBSFN cluster shall fulfil all the following requirements:

- For FDD and 3.84/7.68 Mcps TDD the MBSFN cluster shall be part of either:
  - the registered PLMN, or:
  - a PLMN of the Equivalent PLMN list

The MBSFN cluster shall be indicated as:

- providing MBSFN only service

For FDD and 3.84/7.68 Mcps TDD MBSFN cluster selection/reselection process for MBSFN clusters operating on the same frequency shall be based on reception quality. Details of the process are not specified.

…

The UE shall search for MBSFN clusters if the frequencies on which MBSFN clusters are available are not indicated in the cell that the UE is camping on for normal service if the mobile is configured to receive services via MBSFN mode. Details of the process are not specified.

…

When camped on a MBSFN cluster, the UE shall perform the following tasks:

- receive the MCCH as specified in clause 8.4 and in [4];

…

A cell provides MBMS service in MBSFN mode if it is indicated so in system information, see subclause 8.1.1.6.3. A UE that supports MBSFN operation may receive MBMS services via a cell operating in MBSFN mode. For FDD and 3.84/7.68 Mcps TDD in order to receive an MBMS service via a MBSFN cluster the UE shall select the MBSFN cluster as specified in [4] in addition to selecting a cell for normal camping as specified in [4].

…

For FDD and 3.84/7.68 Mcps TDD if the IE "MBSFN frequency list" is not included in system information block 11 and if services are listed in the variable MBMS_ACTIVATED_SERVICES a UE supporting reception of MBMS service in MBSFN mode shall search for cells providing MBMS service in MBSFN mode.

…

If the variable MBMS_ACTIVATED_services is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS or an MBSFN cluster, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

…

The Mobile Equipment shall store a list of "equivalent PLMNs". This list is replaced or deleted at the end of each location update procedure, routing area update procedure and GPRS attach procedure. The stored list consists of a list of equivalent PLMNs as downloaded by the network plus the PLMN code of the registeredPLMN that downloaded the list. The stored list shall not be deleted when the MS is switched off. The stored list shall be deleted if the SIM/USIM is removed. The maximum number of possible entries in the stored list is 16.

References

TS 25.304, 4.3, 6.3.1.1, 6.3.1.2

TS 25.331, 8.5.43, 8.6.9.9ac, 8.7.2.2

TS 24.008, 4.4.1

#### 6.1.3.3.3 Test purpose

1. To verify that when SIB11 of the unicast carrier that a UE is camped on does not contain IE MBSFN Frequency List, a UE supporting reception of MBMS service in MBSFN mode will search for a suitable MBSFN cluster if services are listed in the variable MBMS_ACTIVATED_SERVICES.

2. To verify that the UE when selecting a MBSFN cluster will select a suitable MBSFN cluster of the registered PLMN (unicast carrier).

3. To verify that the UE when selecting a MBSFN cluster will select a suitable MBSFN cluster of a PLMN in the stored list of Equivalent PLMN.

4. To verify that the UE having selected a suitable MBSFN cluster will start to acquire the MCCH.

#### 6.1.3.3.4 Method of test

##### Initial condition

System Simulator:

MBSFN carrier(s): 3 cells. Cell 31 (PLMN1), Cell 32 (PLMN2) and Cell 37 (PLMN3) are all switched off.

Unicast carrier: 1 cell, Cell 1 (PLMN1) default configuration.

Note: The IE MBSFN frequency list is not included in SIB11 of Cell 1.

User Equipment:

The UE is switched off.

The UE is equipped with a Test-USIM containing default values. The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

##### Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

##### Test procedure

The SS shall apply the downlink power settings as shown below:

Step 1-7:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 37 |
|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | OFF | OFF | OFF |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

Step 8-19:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 37 |
|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | OFF | -69 | -59 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

Step 20-34:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 37 |
|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | -69 | OFF | -59 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

a) The UE is switched on.

b) The UE registers as specified in clause 7.2.2 of TS 34.108 on the unicast carrier Cell 1. On the unicast carrier Cell 1, a Location Update Accept message shall be sent on reception of a Location Updating Request message from the UE. The Location Updating Accept message shall include PLMN2 in the equivalent PLMN list. For a UE that supports both CS and PS domains or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure. In these cases, the GMM Attach Accept message shall include PLMN2 in the equivalent PLMN list.

c) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE. The SS then sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH (Transmission identity corresponding to the activated National Service 1).

d) The SS activates Cell 32 and Cell 37. The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS on all these cells using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

e) After the UE is switched on in step 1 the UE starts searching for an MBSFN cell. Cell search on the MBSFN carrier is independent and not time synchronised with the message sequence on the unicast carrier. One MBMS service (National Service 1) from the list of services available is activated at this stage to ensure MBSFN cell search continues.

f) The UE camps on Cell 32, recognising PLMN2 as an Equivalent PLMN to the registered PLMN on the unicast carrier. The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

g) The UE shall perform the MCCH acquisition procedure. The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION, the MBMS UNMODIFIED SERVICES INFORMATION, the MBMS GENERAL INFORMATION, the MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M INFORMATION.

h) The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

i) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the activated service on Cell 32.

j) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

k) The SS sends OPEN UE TEST LOOP. The UE responds with OPEN UE TEST LOOP COMPLETE.

l) The SS switches off Cell 32. The SS activates Cell 31.

m) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH (Transmission identity corresponding to the activated National Service 1).

n) The UE camps on Cell 31. The UE shall perform the MCCH acquisition procedure. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes

the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

o) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the activated service on Cell 31.

p) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comments |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | SYSTEM INFORMATION BLOCK TYPE 11 | The UE is switched on and it camps on unicast carrier Cell 1. The IE MBSFN frequency list is not present in SIB 11 on the BCCH. |
| 2 | → | | U | LOCATION UPDATING REQUEST | For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure |
| 3 | ← | | U | LOCATION UPDATING ACCEPT | IE Equivalent PLMNs contains PLMN2. PLMN2 is maintained in Equivalent PLMN list of UE. |
| 4 | → | | U | TMSI REALLOCATION COMPLETE | |
| 5 | ← | | U | ACTIVATE RB TEST MODE | |
| 6 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 7 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for the selected national service |
| 8 | SS | | M | | Cells 32 and 37 are switched ON |
| 9 | UE | | M | | MBMS National Service 1 is activated. UE performs cell search and selects Cell 32. |
| 10 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 5 | |
| 11 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. 124 kbps PS RAB |
| 12 | UE | | M | | The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. |
| 13 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 14 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 32. |
| 15 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 16 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 17 | ← | | U | OPEN UE TEST LOOP | |
| 18 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 19 | SS | | M | | Cell 32 is switched OFF. Cell 31 is switched ON. |
| 20 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for the selected national service |

| Step | Direction | | Carrier | Message | Comments |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 21 | UE | | M | | UE performs cell search and selects Cell 31. |
| 22 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 5 | |
| 23 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. 124 kbps PS RAB |
| 24 | UE | | M | | The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. |
| 25 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 26 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 31. |
| 27 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 28 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 29 | ← | | U | OPEN UE TEST LOOP | |
| 30 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 31 | ← | | U | DEACTIVATE RB TEST MODE | |
| 32 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carrier and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

MBMS UNMODIFIED SERVICES INFORMATION (Step 11 and Step 23)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| Unmodified service list | 4 services | Rel-6 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 1) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 2) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 3) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 4) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |

#### 6.1.3.3.5 Test requirements

1) After step 16, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0.

2) After step 28, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0.

### 6.1.3.4 Cell reservations and access restrictions; Normal access class only

#### 6.1.3.4.1 Definition

Test to verify that a UE, not assigned to any of the special access classes (Access Classes 11 to 15), performs selection of a suitable MBSFN cluster in accordance with the cell reservations and access restrictions signalled over the air interface.

#### 6.1.3.4.2 Conformance requirement

For an MBSFN cluster (see [4]) when cell status is indicated "not reserved" for operator use and "not reserved" for future extension (Cell Reservation Extension),

- All UEs shall treat this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures.

For an MBSFN cluster (see [4]) when cell status is indicated as "not reserved" for operator use and "reserved" for future extension (Cell Reservation Extension),

- UEs shall not consider this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures. The UE may choose to not recheck the status of this MBSFN cluster during the time indicated by $T_{barred}$.

For an MBSFN cluster (see [4]) when cell status is indicated as "reserved" for operator use,

- UEs assigned to Access Class 11 or 15 shall treat this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures.

- UEs assigned to an Access Class in the range 0 to 9 and 12 to 14 shall not consider this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures The UE may choose to not recheck the status of this MBSFN cluster during the time indicated by $T_{barred}$.

…

The UE shall search for MBSFN clusters if the frequencies on which MBSFN clusters are available are not indicated in the cell that the UE is camping on for normal service if the mobile is configured to receive services via MBSFN mode. Details of the process are not specified.

…

When camped on a MBSFN cluster, the UE shall perform the following tasks:

- receive the MCCH as specified in clause 8.4 and in [4];

…

A cell provides MBMS service in MBSFN mode if it is indicated so in system information, see subclause 8.1.1.6.3. A UE that supports MBSFN operation may receive MBMS services via a cell operating in MBSFN mode. For FDD and 3.84/7.68 Mcps TDD in order to receive an MBMS service via a MBSFN cluster the UE shall select the MBSFN cluster as specified in [4] in addition to selecting a cell for normal camping as specified in [4].

…

If the variable MBMS_ACTIVATED_services is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS or an MBSFN cluster, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

References

TS 25.304, 5.3a, 6.3.1.1, 6.3.1.2

TS 25.331, 8.5.43, 8.7.2.2

#### 6.1.3.4.3 Test purpose

1. To verify that a UE not assigned to any of the special access classes (Access Classes 11 to 15), supporting reception of MBMS service in MBSFN mode, will search for a suitable MBSFN cluster if services are listed in the variable MBMS_ACTIVATED_SERVICES.

2. To verify that a UE not assigned to any of the special access classes (Access Classes 11 to 15), when selecting a suitable MBSFN cluster will not select an MBSFN cluster when the cell status is indicated as "not reserved" for operator use and is indicated as "reserved" for future extension.

3. To verify that a UE not assigned to any of the special access classes (Access Classes 11 to 15), when selecting a suitable MBSFN cluster will not select an MBSFN cluster when the cell status is indicated as "reserved" for operator use.

4. To verify that a UE not assigned to any of the special access classes (Access Classes 11 to 15), when selecting a suitable MBSFN cluster will select an MBSFN cluster when the cell status is indicated as "not reserved" for operator use and "not reserved" for future extension.

5. To verify that the UE having selected a suitable MBSFN cluster will start to acquire the MCCH.

#### 6.1.3.4.4 Method of test

Initial condition

System Simulator:

MBSFN carrier: 3 cells, Cell 31 (PLMN1), Cell 32 (PLMN1) and Cell 37 (PLMN1) which are all switched off.

Unicast carrier: 1 cell, Cell 1 (PLMN1) default configuration.

User Equipment:

The UE is switched off.

The UE is equipped with a Test-USIM containing default values. The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode available on UE Yes/No.

  Support of TDD transmit and receive functions available on UE Yes/No.

- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

The SS shall apply the downlink power settings as shown below:

Step 1-7:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 37 |
|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | OFF | OFF | OFF |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

Step 8-16:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 37 |
|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | OFF | -59 | -59 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

Step 17-29:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 37 |
|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | -69 | -59 | -59 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

a) The UE is switched on.

b) The UE registers as specified in clause 7.2.2 of TS 34.108 on the unicast carrier Cell 1. On the unicast carrier Cell 1, a Location Update Accept message shall be sent on reception of a Location Updating Request message from the UE. For a UE that supports both CS and PS domains or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure.

c) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE. The SS then sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH (Transmission identity corresponding to the activated National Service 1).

d) The SS activates Cell 32 and Cell 37. Cell 32 indicates 'reserved' for future extension in the Cell Access Restriction IE of SIB3. Cell 37 indicates 'reserved' for operator use in the Cell Access Restriction IE of SIB3. The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to

broadcasting System Information, MCCH messages are transmitted by the SS on these cells using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

e) After the UE is switched on in step 1 the UE starts searching for an MBSFN cell. Cell search on the MBSFN carrier is independent and not time synchronised with the message sequence on the unicast carrier. One MBMS service (National Service 1) from the list of services available is activated at this stage to ensure MBSFN cell search continues. The UE performs cluster selection but is unable to find a suitable MBSFN cluster.

f) SS delays for a period of time greater than or equal to 10 times the $T_{barred}$ setting used in the Cell Access Restriction IE on Cells 32 and 37 (say 120 seconds). Note: If the UE sends CLOSE UE TEST LOOP COMPLETE at this stage then a test failure is recorded.

g) The SS sends OPEN UE TEST LOOP. The UE responds with OPEN UE TEST LOOP COMPLETE.

h) MBMS National Service 1 is de-activated at the UE.

i) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH (Transmission identity corresponding to National Service 2).

j) The SS activates Cell 31.

k) MBMS service (National Service 2) from the list of services available is activated to ensure MBSFN cell search continues.

l) The UE camps on Cell 31. The UE shall perform the MCCH acquisition procedure. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

m) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for National Service 2 on Cell 31.

n) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comments |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | SYSTEM INFORMATION BLOCK TYPE 11 | The UE is switched on and it camps on unicast carrier Cell 1. |
| 2 | → | | U | LOCATION UPDATING REQUEST | For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure |
| 3 | ← | | U | LOCATION UPDATING ACCEPT | |
| 4 | → | | U | TMSI REALLOCATION COMPLETE | |
| 5 | ← | | U | ACTIVATE RB TEST MODE | |
| 6 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 7 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for National Service 1 |
| 8 | SS | | M | | Cells 32 and 37 are switched ON |

| Step | Direction | | Carrier | Message | Comments |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 9 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 3 | On Cell 32 the SIB3 contains the IE Cell Reservation Extension set to 'reserved'. |
| 10 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 3 | On Cell 37 the SIB3 contains the IE Cell Reserved for operator use set to 'reserved'. |
| 11 | ← | | M | MBMS MCCH Message Configuration C2 | Cell 32 and Cell 37: No modified services. Two ongoing services (National Services 1 and 2). 124 kbps PS RAB |
| 12 | UE | | M | | MBMS National Service 1 is activated. UE performs cell search but is unable to find a suitable MBSFN cluster. |
| 13 | SS | | M | | SS delays for >= 10*$T_{barred}$ (e.g. 120s). Note: If CLOSE UE TEST LOOP COMPLETE is received a test failure is recorded. |
| 14 | ← | | U | OPEN UE TEST LOOP | |
| 11 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 15 | UE | | M | | MBMS National Service 1 is de-activated. |
| 16 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for National Service 2 is included. |
| 17 | SS | | M | | Cell 31 is switched ON. |
| 18 | SS | | M | | MBMS National Service 2 is activated. |
| 19 | UE | | M | | UE performs cell search and selects Cell 31. |
| 20 | ← | | M | MBMS MCCH Message Configuration C2 | Cell 31, 32 and Cell 37: No modified services. Two ongoing services (National Services 1 and 2). 124 kbps PS RAB |
| 21 | UE | | M | | The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. |
| 22 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 23 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 31 for National Service 2. |
| 24 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 25 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 26 | ← | | U | OPEN UE TEST LOOP | |
| 27 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 28 | ← | | U | DEACTIVATE RB TEST MODE | |
| 29 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carrier and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

SYSTEM INFORMATION BLOCK TYPE 3 for Cell 32 (Step 9)

| Information Element | Value/remark |
|---|---|
| …<br>- $T_{barred}$<br>- Cell Reserved for operator use<br>- Cell Reservation Extension | <br>10<br>not reserved<br>reserved |

SYSTEM INFORMATION BLOCK TYPE 3 for Cell 37 (Step 10)

| Information Element | Value/remark |
|---|---|
| …<br>- $T_{barred}$<br>- Cell Reserved for operator use<br>- Cell Reservation Extension | <br>10<br>reserved<br>not reserved |

MBMS UNMODIFIED SERVICES INFORMATION (Step 11 and Step 20)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| Unmodified service list | 4 services | Rel-6 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 1) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 2) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 3) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 4) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |

#### 6.1.3.4.5 Test requirements

1) At step 13, CLOSE UE TEST LOOP COMPLETE shall not be received from the UE.

2) After step 25, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0.

### 6.1.3.5 Cell reservations and access restrictions; Operator access class

#### 6.1.3.5.1 Definition

Test to verify that a UE, assigned to one of the Access Classes 11 or 15, performs selection of a suitable MBSFN cluster in accordance with the cell reservations and access restrictions signalled over the air interface.

#### 6.1.3.5.2 Conformance requirement

For an MBSFN cluster (see [4]) when cell status is indicated "not reserved" for operator use and "not reserved" for future extension (Cell Reservation Extension),

- All UEs shall treat this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures.

For an MBSFN cluster (see [4]) when cell status is indicated as "not reserved" for operator use and "reserved" for future extension (Cell Reservation Extension),

- UEs shall not consider this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures. The UE may choose to not recheck the status of this MBSFN cluster during the time indicated by $T_{barred}$.

For an MBSFN cluster (see [4]) when cell status is indicated as "reserved" for operator use,

- UEs assigned to Access Class 11 or 15 shall treat this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures.

- UEs assigned to an Access Class in the range 0 to 9 and 12 to 14 shall not consider this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures The UE may choose to not recheck the status of this MBSFN cluster during the time indicated by $T_{barred}$.

…

The UE shall search for MBSFN clusters if the frequencies on which MBSFN clusters are available are not indicated in the cell that the UE is camping on for normal service if the mobile is configured to receive services via MBSFN mode. Details of the process are not specified.

…

When camped on a MBSFN cluster, the UE shall perform the following tasks:

- receive the MCCH as specified in clause 8.4 and in [4];

…

A cell provides MBMS service in MBSFN mode if it is indicated so in system information, see subclause 8.1.1.6.3. A UE that supports MBSFN operation may receive MBMS services via a cell operating in MBSFN mode. For FDD and 3.84/7.68 Mcps TDD in order to receive an MBMS service via a MBSFN cluster the UE shall select the MBSFN cluster as specified in [4] in addition to selecting a cell for normal camping as specified in [4].

…

If the variable MBMS_ACTIVATED_services is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS or an MBSFN cluster, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

#### References

TS 25.304, 5.3a, 6.3.1.1, 6.3.1.2

TS 25.331, 8.5.43, 8.7.2.2

#### 6.1.3.5.3 Test purpose

1. To verify that a UE assigned to one of the Access Classes 11 or 15 (in addition to one of the Access Classes 0 to 9), supporting reception of MBMS service in MBSFN mode, will search for a suitable MBSFN cluster if services are listed in the variable MBMS_ACTIVATED_SERVICES.

2. To verify that a UE assigned to one of the Access Classes 11 or 15 (in addition to one of the Access Classes 0 to 9), when selecting a suitable MBSFN cluster will not select an MBSFN cluster when the cell status is indicated as "not reserved" for operator use and is indicated as "reserved" for future extension.

3. To verify that a UE assigned to one of the Access Classes 11 or 15 (in addition to one of the Access Classes 0 to 9), when selecting a suitable MBSFN cluster will select an MBSFN cluster when the cell status is indicated as "reserved" for operator use and is indicated as "not reserved" for future extension.

4. To verify that a UE assigned to one of the Access Classes 11 or 15 (in addition to one of the Access Classes 0 to 9), when selecting a suitable MBSFN cluster will select an MBSFN cluster when the cell status is indicated as "not reserved" for operator use and "not reserved" for future extension.

5. To verify that the UE having selected a suitable MBSFN cluster will start to acquire the MCCH.

#### 6.1.3.5.4 Method of test

##### Initial condition

System Simulator:

MBSFN carrier: 3 cells, Cell 31 (PLMN1), Cell 32 (PLMN1) and Cell 37 (PLMN1) all are switched off.

Unicast carrier: 1 cell, Cell 1 (PLMN1) default configuration.

User Equipment:

The UE is switched off.

The UE is equipped with a Test-USIM containing default values with the exception that the field $EF_{ACC}$ (Access Control Class) of the Test-USIM shall be be set as per "Type C" in clause 8.3.2.15.

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

##### Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

##### Test procedure

The SS shall apply the downlink power settings as shown below:

Step 1-7:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 37 |
|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | OFF | OFF | OFF |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

Step 8-16:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 37 |
|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | OFF | -59 | OFF |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

Step 17-30:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 37 |
|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | OFF | -59 | -69 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

Step 31-43:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 32 | Cell 37 |
|---|---|---|---|---|---|
| P-CCPCH RSCP | dBm | -60 | -69 | -59 | OFF |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

a) The UE is switched on.

b) The UE registers as specified in clause 7.2.2 of TS 34.108 on the unicast carrier Cell 1. On the unicast carrier Cell 1, a Location Update Accept message shall be sent on reception of a Location Updating Request message from the UE. For a UE that supports both CS and PS domains or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure.

c) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE. The SS then sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH (Transmission identity corresponding to the activated National Service 1).

d) The SS activates Cell 32. Cell 32 indicates 'reserved' for future extension in the Cell Access Restriction IE of SIB3. The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS on these cells using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

e) After the UE is switched on in step 1 the UE starts searching for an MBSFN cell. Cell search on the MBSFN carrier is independent and not time synchronised with the message sequence on the unicast carrier. One MBMS service (National Service 1) from the list of services available is activated at this stage to ensure MBSFN cell search continues. The UE performs cluster selection but is unable to find a suitable MBSFN cluster.

f) SS delays for a period of time greater than or equal to 10 times the $T_{barred}$ setting used in the Cell Access Restriction IE on Cells 32 (say 120 seconds). Note: If the UE sends CLOSE UE TEST LOOP COMPLETE at this stage then a test failure is recorded.

g) The SS sends OPEN UE TEST LOOP. The UE responds with OPEN UE TEST LOOP COMPLETE.

h) MBMS National Service 1 is de-activated at the UE.

i) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH (Transmission identity corresponding to National Service 2).

j) The SS activates Cell 37 as well as Cell 32. Cell 37 indicates 'reserved' for operator use in the Cell Access Restriction IE of SIB3. The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS on these cells using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

k) MBMS service (National Service 2) from the list of services available is activated to ensure MBSFN cell search continues.

l) The UE camps on Cell 37. The UE shall perform the MCCH acquisition procedure. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

m) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for National Service 2 on Cell 37.

n) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

o) The SS sends OPEN UE TEST LOOP. The UE responds with OPEN UE TEST LOOP COMPLETE.

p) MBMS National Service 2 is de-activated at the UE.

q) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH (Transmission identity corresponding to National Service 3).

r) The SS switches off Cell 37. The SS activates Cell 31 as well as Cell 32. The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS on these cells using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

s) MBMS service (National Service 3) from the list of services available is activated to ensure MBSFN cell search continues.

t) The UE camps on Cell 31. The UE shall perform the MCCH acquisition procedure. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

u) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for National Service 2 on Cell 31.

v) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comments |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | SYSTEM INFORMATION BLOCK TYPE 11 | The UE is switched on and it camps on unicast carrier Cell 1. |
| 2 | → | | U | LOCATION UPDATING REQUEST | For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure |
| 3 | ← | | U | LOCATION UPDATING ACCEPT | |
| 4 | → | | U | TMSI REALLOCATION COMPLETE | |
| 5 | ← | | U | ACTIVATE RB TEST MODE | |
| 6 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 7 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for National Service 1 |
| 8 | SS | | M | | Cells 32 is switched ON |
| 9 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 3 | On Cell 32 the SIB3 contains the IE Cell Reservation Extension set to 'reserved'. |
| 10 | ← | | M | MBMS MCCH Message Configuration C2 | Cell 32: No modified services. Three ongoing services (National Services 1, 2 and 3). 124 kbps PS RAB |
| 11 | UE | | M | | MBMS National Service 1 is activated. UE performs cell search but is unable to find a suitable MBSFN cluster. |
| 12 | SS | | M | | SS delays for >= 10*$T_{barred}$ (e.g. 120s). Note: If CLOSE UE TEST LOOP COMPLETE is received a test failure is recorded. |
| 13 | ← | | U | OPEN UE TEST LOOP | |
| 14 | → | | U | OPEN UE TEST LOOP COMPLETE | |

| Step | Direction | | Carrier | Message | Comments |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 15 | UE | | M | | MBMS National Service 1 is de-activated. |
| 16 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for National Service 2 is included. |
| 17 | SS | | M | | Cell 37 is switched ON. |
| 18 | SS | | M | | MBMS National Service 2 is activated. |
| 19 | UE | | M | | UE performs cell search and selects Cell 37. |
| 20 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 3 | On Cell 37 the SIB3 contains the IE Cell Reserved for operator use set to 'reserved'. |
| 21 | ← | | M | MBMS MCCH Message Configuration C2 | Cell 32 and Cell 37: No modified services. Three ongoing services (National Services 1, 2 and 3). 124 kbps PS RAB |
| 22 | UE | | M | | The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. |
| 23 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 24 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 37 for National Service 2. |
| 25 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 26 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 27 | ← | | U | OPEN UE TEST LOOP | |
| 28 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 29 | UE | | M | | MBMS National Service 2 is de-activated. |
| 30 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for National Service 3 is included. |
| 31 | SS | | M | | Cell 37 is switched OFF. Cell 31 is switched ON. |
| 32 | SS | | M | | MBMS National Service 3 is activated. |
| 33 | UE | | M | | UE performs cell search and selects Cell 31. |
| 34 | ← | | M | MBMS MCCH Message Configuration C2 | Cell 31 and Cell 32: No modified services. Three ongoing services (National Services 1, 2 and 3). 124 kbps PS RAB |
| 35 | UE | | M | | The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. |
| 36 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 37 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 31 for National Service 3. |
| 38 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 39 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 40 | ← | | U | OPEN UE TEST LOOP | |
| 41 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 42 | ← | | U | DEACTIVATE RB TEST MODE | |
| 43 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carrier and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

SYSTEM INFORMATION BLOCK TYPE 3 for Cell 32 (Step 9)

| Information Element | Value/remark |
|---|---|
| …<br>- $T_{barred}$<br>- Cell Reserved for operator use<br>- Cell Reservation Extension | <br>10<br>not reserved<br>reserved |

SYSTEM INFORMATION BLOCK TYPE 3 for Cell 37 (Step 20)

| Information Element | Value/remark |
|---|---|
| …<br>- $T_{barred}$<br>- Cell Reserved for operator use<br>- Cell Reservation Extension | <br>10<br>reserved<br>not reserved |

MBMS UNMODIFIED SERVICES INFORMATION (Step 10, Step 21 and Step 34)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| Unmodified service list | 4 services | Rel-6 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 1) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 2) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 3) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 4) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |

### 6.1.3.5.5 Test requirements

1) At step 12, CLOSE UE TEST LOOP COMPLETE shall not be received from the UE.

2) After step 26, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0.

3) After step 39, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0.

### 6.1.3.6 Cell reservations and access restrictions; Home country services access class

#### 6.1.3.6.1 Definition

Test to verify that a UE, assigned to one of the Access Classes 12, 13 or 14, performs selection of a suitable MBSFN cluster in accordance with the cell reservations and access restrictions signalled over the air interface.

#### 6.1.3.6.2 Conformance requirement

For an MBSFN cluster (see [4]) when cell status is indicated "not reserved" for operator use and "not reserved" for future extension (Cell Reservation Extension),

- All UEs shall treat this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures.

For an MBSFN cluster (see [4]) when cell status is indicated as "not reserved" for operator use and "reserved" for future extension (Cell Reservation Extension),

- UEs shall not consider this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures. The UE may choose to not recheck the status of this MBSFN cluster during the time indicated by $T_{barred}$.

For an MBSFN cluster (see [4]) when cell status is indicated as "reserved" for operator use,

- UEs assigned to Access Class 11 or 15 shall treat this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures.

- UEs assigned to an Access Class in the range 0 to 9 and 12 to 14 shall not consider this MBSFN cluster as candidate during the MBSFN cluster selection and MBSFN cluster re-selection procedures The UE may choose to not recheck the status of this MBSFN cluster during the time indicated by $T_{barred}$.

…

The UE shall search for MBSFN clusters if the frequencies on which MBSFN clusters are available are not indicated in the cell that the UE is camping on for normal service if the mobile is configured to receive services via MBSFN mode. Details of the process are not specified.

…

When camped on a MBSFN cluster, the UE shall perform the following tasks:

- receive the MCCH as specified in clause 8.4 and in [4];

…

A cell provides MBMS service in MBSFN mode if it is indicated so in system information, see subclause 8.1.1.6.3. A UE that supports MBSFN operation may receive MBMS services via a cell operating in MBSFN mode. For FDD and 3.84/7.68 Mcps TDD in order to receive an MBMS service via a MBSFN cluster the UE shall select the MBSFN cluster as specified in [4] in addition to selecting a cell for normal camping as specified in [4].

…

If the variable MBMS_ACTIVATED_services is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS or an MBSFN cluster, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

References

TS 25.304, 5.3a, 6.3.1.1, 6.3.1.2

TS 25.331, 8.5.43, 8.7.2.2

#### 6.1.3.6.3 Test purpose

1. To verify that a UE, assigned to just one of the Access Classes 12, 13 or 14 (in addition to one of the Access Classes 0 to 9), supporting reception of MBMS service in MBSFN mode, will search for a suitable MBSFN cluster if services are listed in the variable MBMS_ACTIVATED_SERVICES.

2. To verify that a UE, assigned to just one of the Access Classes 12, 13 or 14 (in addition to one of the Access Classes 0 to 9), when selecting a suitable MBSFN cluster will not select an MBSFN cluster when the cell status is indicated as "not reserved" for operator use and is indicated as "reserved" for future extension.

3. To verify that a UE, assigned to just one of the Access Classes 12, 13 or 14 (in addition to one of the Access Classes 0 to 9), when selecting a suitable MBSFN cluster will not select an MBSFN cluster when the cell status is indicated as "reserved" for operator use.

4. To verify that a UE, assigned to just one of the Access Classes 12, 13 or 14 (in addition to one of the Access Classes 0 to 9), when selecting a suitable MBSFN cluster will select an MBSFN cluster when the cell status is indicated as "not reserved" for operator use and "not reserved" for future extension.

5. To verify that the UE having selected a suitable MBSFN cluster will start to acquire the MCCH.

#### 6.1.3.6.4 Method of test

Refer to the "Method of test" in clause 6.1.3.4.4 with the following exception:

The UE is equipped with a Test-USIM containing default values with the exception that the field $EF_{ACC}$ (Access Control Class) of the Test-USIM shall be be set as per "Type D" in clause 8.3.2.15.

#### 6.1.3.6.5 Test requirements

Refer to the "Test requirements" in clause 6.1.3.4.5.

### 6.1.3.7 Inter frequency neighbour reselection / Service activation

#### 6.1.3.7.1 Definition

This test is applicable for UEs that support MBMS broadcast services in MBSFN mode and which support either both TDD transmit and receive functions or TDD MBSFN receive only function.

#### 6.1.3.7.2 Conformance requirement

Upon detection of one MBSFN cluster all other frequencies on which MBMS service is provided in MBSFN mode for one of the PLMN assigned to the MBSFN cluster are indicate as specified in [4].

The UE chooses the frequency for the MBSFN cluster to be received based on the information on the services that are provided on the MBSFN clusters of those frequencies.

…

If the variable MBMS_ACTIVATED_SERVICES is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS or an MBSFN cluster, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

…

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

...

For cells operating in MBSFN mode as indicated in subclause 8.1.1.6.3 the UE shall immediately acquire the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise for cells operating in MBSFN mode as indicated in subclause 8.1.1.6.3, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

If the UE selects to another cell, the UE shall re-establish the RLC entity used for MCCH reception.

…

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

…

Upon completing the reception of the MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION messages for an activated MBMS service, the UE shall:

1> if the UE is already receiving an MTCH and does not have the capability to receive the new service in addition:

2> the UE behaviour is undefined.

NOTE: In this case, the UE may request upper layers to prioritise the services and only receive the service(s) prioritised by upper layers.

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;

1> if the UE previously received the service by means of a p-t-m radio bearer from a cell belonging to another MBMS cell group:

2> re-establish RLC;

2> re-initialise PDCP.

1> start immediately to use the indicated configuration unless specified otherwise;

1> start or continue receiving the indicated p-t-m radio bearers depending on its UE capabilities.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information i.e. the MBMS MODIFIED SERVICES INFORMATION message, MBMS UNMODIFIED SERVICES INFORMATION message, MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION message should be acquired in the same modification period.

Reference

3GPP TS 25.304 clauses 6.3.1.3.

3GPP TS 25.331 clauses 8.7.2.2, 8.7.2.3, 8.7.1.3, 8.6.9.6, 8.7.5.3.

### 6.1.3.7.3 Test purpose

1. To verify that on indication from upper layers that there has been a change to the activated service(s) the UE will perform a cluster reselection to an inter frequency neighbour cluster providing the required MBMS service .

2. To verify that the UE starts the reception of the activated MBMS service after reselection to the inter frequency neighbour MBSFN cluster.

### 6.1.3.7.4 Method of test

Initial condition

System Simulator:

- MBSFN carrier: 2 cells, Cell 31 (PLMN1) and Cell 33 (PLMN1). Cell 31 is powered off. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 33 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.

- Unicast carrier : 1 cell, Cell 1 with default parameters.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.

- The UE is in MBSFN Idle mode with no activated service as specified in clause 7.6.3 of TS 34.108.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode application available on UE Yes/No.

- Support of TDD transmit and receive functions available on UE Yes/No.

- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

**Table 8.5.1.14**

| Parameter | Unit | Cell 1 | | Cell 31 | | Cell 33 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Ch. 1 | | Ch. 2 | | Ch. 3 | |
| CPICH Ec (FDD) | dBm / 3.84MHz | -60 | -60 | - | - | - | - |
| P-CCPCH RSCP (TDD) | dBM | -60 | -60 | OFF | -60 | -60 | -60 |

Table 8.5.1.1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution.

a) The UE is camping on Cell 1 and Cell 33. The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE. The SS then sends CLOSE UE TEST LOOP to activate RLC SDU counting on MTCH (Transmission identity indicating the MBMS National Service 1 (see TS 34.108 clause 11.2.4). The UE responds with CLOSE UE TEST LOOP COMPLETE.

b) The SS powers on Cell 31 at T1.

c) National Service 1 ongoing on MBSFN Cell 31 (see TS 34.108 clause 11.2.4) is selected at the UE. The UE determines from the MBMS UNMODIFIED SERVICES INFORMATION and MBMS GENERAL

INFORMATION messages on the MCCH of Cell 33 that the selected National Service is available on inter frequency neighbour cell 31.

d) The UE reselects to MBSFN carrier on URFCN Ch. 3 and camps on Cell 31. The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

e) The UE shall perform the MCCH acquisition procedure. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

f) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for National Service 1 on Cell 31.

g) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| | ← | | M | MBMS MCCH Message Configuration C1 | Cell 33: No ongoing sessions |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated with Short Transmission Identity for National Service 1 on Cell 31. |
| 5 | SS | | | | The SS powers on Cell 31 (T1). |
| 6 | UE | | M | | National Service 1, available on Cell 31, is selected at the UE. |
| 6 | UE | | M | | The UE reselects to Cell 31 and starts to acquire the MCCH. |
| 7 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 5 | |
| | ← | | M | MBMS MCCH Message Configuration C2 | Cell 31: No modified services. One ongoing session. (National Service 1). 124 kbps PS RAB |
| 15 | UE | | M | | The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. |
| 4 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 16 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 31 for National Service 1. |
| 17 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 18 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 19 | ← | | U | OPEN UE TEST LOOP | |
| 20 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 21 | ← | | U | DEACTIVATE RB TEST MODE | |
| 22 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1 with the following exceptions:

There are no exceptions for this test case.

#### 6.1.3.7.5 Test requirements

1) After step 18, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0.

### 6.1.3.8 Inter frequency neighbour reselection / Activation of higher priority service

#### 6.1.3.8.1 Definition

This test is applicable for UEs that support MBMS broadcast services in MBSFN mode and which support either both TDD transmit and receive functions or TDD MBSFN receive only function.

#### 6.1.3.8.2 Conformance requirement

If the cell is operating in MBSFN mode according to subclause 8.1.1.6.3 the UE shall:

1> if for two or more services included in variable MBMS_ACTIVATED_SERVICES the IE "MBSFN cluster frequency" is available:

2> request from upper layers the priorities of the different MBMS services included in variable MBMS_ACTIVATED_SERVICES for which the IE "MBSFN cluster frequency" is available;

2> if the IE "MBSFN cluster frequency" is available for the service with the highest priority included in variable MBMS_ACTIVATED_SERVICES:

3> tune to the frequency indicated in the IE "MBSFN cluster frequency" of that service.

…

The UE may:

1> monitor the MBMS notification Indicator Channel (MICH);

1> if a notification on the MICH for one or more of the MBMS services included in the variable MBMS_ACTIVATED_SERVICES is detected:

2> acquire the MBMS MODIFIED SERVICES INFORMATION message with delaying the reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3;

2> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if not monitoring MICH during the current or the previous modification period:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

…

Upon receiving the MBMS MODIFIED SERVICES INFORMATION message, the UE shall act as follows for each of the services included in this messages provided that the service is included in variable MBMS_ACTIVATED_SERVICES and upper layers indicate that the session has not yet been received correctly (referred to as 'applicable services'):

…

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following

…

1> perform the MBMS frequency selection procedure as specified in subclause 8.5.27;

Reference

3GPP TS 25.331 clauses 8.6.9.9ab, 8.7.3.3.1, 8.7.3.4.

### 6.1.3.8.3 Test purpose

1. To verify that the UE correctly handles the notification procedure after receiving the MBMS MODIFIED SERVICES INFORMATION message via MCCH indicating a change in available services.
2. To verify that the UE acts upon service priority indications from upper layers that require a change in MBSFN cluster frequency.
3. To verify that the UE acquires the MBMS information on MCCH after selecting the new MBSFN cluster.
4. To verify that the UE, after acquiring the MBMS information on MCCH, starts the p-t-m reception of the higher priority MBMS service.

### 6.1.3.8.4 Method of test

Initial condition

System Simulator:

- MBSFN carrier: 2 cells, Cell 31 (PLMN1) and Cell 33 (PLMN1). Cell 31 is powered off. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 33 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.
- Unicast carrier : 1 cell, Cell 1 with default parameters.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.
    - The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected (i.e. it is included in MBMS_ACTIVATED_SERVICES variable) a local service that will start on MBSFN Cell 33 (see TS 34.108 clause 11.2.4) during the test. The UE has configured this MBMS service to have a low priority.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode application available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

**Table 8.5.1.14**

| Parameter | Unit | Cell 1 | | Cell 31 | | Cell 33 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Ch. 1 | | Ch. 2 | | Ch. 3 | |
| CPICH Ec (FDD) | dBm / 3.84MHz | -60 | -60 | - | - | - | - |
| P-CCPCH RSCP (TDD) | dBM | -60 | -60 | OFF | -60 | -60 | -60 |

Table 8.5.1.1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution.

a) The UE is camping on Cell 1 and Cell 33. The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

b) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH of Cell 33 (Transmission identity of the activated local service)

c) The SS notifies on MCCH about the start of an MBMS session, corresponding to the national service activated by the UE. For one modification period. MCCH messages are transmitted by the SS on Cell 33 using MBMS configuration C4 (one PTM session starting) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

d) MCCH messages are then transmitted by the SS on Cell 33 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

e) The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

f) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the selected local service on Cell 33.

g) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

h) The SS sends OPEN UE TEST LOOP. The UE responds with OPEN UE TEST LOOP COMPLETE.

i) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH (Transmission identity corresponding to National Service 1).

j) The SS powers on Cell 31 (T1). In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. National Service 1 is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

k) National Service 1 is activated at the UE and is configured to have a high priority.

l) The UE determines from the MBMS UNMODIFIED SERVICES INFORMATION and MBMS GENERAL INFORMATION message that the activated local service is available on inter frequency neighbour cell 31. The UE requests from upper layers the priorities of the activated national service on Cell 31 and the activated local service on Cell 33. The UE decides that reselection to Cell 31 is required in order to receive the higher priority national service. The UE reselects to MBSFN carrier on URFCN Ch. 2 and camps on Cell 31.

m) On Cell 31 the SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

n) The UE shall perform the MCCH acquisition procedure. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

o) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for National Service 1 on Cell 31.

p) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for the selected local service |
| **4** | ← | | M | MBMS MCCH Message Configuration C4 | Includes the national service activated at UE in the modified services list for one modification period. |
| **5** | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing national service corresponding to that activated at the UE. 124 kbps PS RAB |
| 6 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| **7** | **SS** | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 33. |
| 8 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 9 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 10 | ← | | U | OPEN UE TEST LOOP | |
| 11 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 12 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for National service 1 on Cell 31. |
| 13 | SS | | M | | The SS powers on Cell 31 (T1). |
| 14 | UE | | M | | National Service 1 ongoing on Cell 31 is activated at the UE and configured to have a high priority. |
| 15 | UE | | M | | The UE reselects to Cell 31 and starts to acquire the MCCH. |
| 16 | ← | | M | MBMS MCCH Message Configuration C2 | Cell 31: No modified services. One ongoing national service corresponding to that activated at the UE. 124 kbps PS RAB |
| 17 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 18 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH of Cell 31. |
| 19 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 20 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 21 | ← | | U | OPEN UE TEST LOOP | |
| 22 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 23 | ← | | U | DEACTIVATE RB TEST MODE | |
| 24 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1 with the following exceptions:

There are no exceptions for this test case.

#### 6.1.3.8.5 Test requirements

1) After step 9, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0.

2) After step 20, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0.

# 6.2 Multi-mode environment (2G/3G case)

For Inter-RAT idle mode test cases cells belonging to different RAT shall use different LAC and RAC.

## 6.2.1 PLMN and RAT selection

### 6.2.1.1 Selection of the correct PLMN and associated RAT

#### 6.2.1.1.1 Definition

Test to verify that the UE selects the correct combination of PLMN and associated access technology according to the fields on the USIM.

#### 6.2.1.1.2 Conformance requirement

1. At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see TS 23.122, clause 4.5.2) attempts to perform a Location Registration.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows either Automatic or Manual Network Selection Mode Procedure depending on its operating mode.

2. The "HPLMN Selector with Access Technology", "User Controlled PLMN Selector with Access Technology" and "Operator Controlled PLMN Selector with Access Technology" data fields in the SIM include associated access technologies for each PLMN entry. The PLMN/access technology combinations are listed in priority order. If an entry includes more than one access technology, then no priority is defined for the preferred access technology and the priority is an implementation issue.

3. To allow provision for multiple HPLMN codes, the HPLMN access technologies are stored on the SIM together with PLMN codes. This version of the specification does not support multiple HLPMN codes and the "HPLMN Selector with Access Technology" data field is only used by the MS to get the HPLMN access technologies. The HPLMN code is the PLMN code included in the IMSI.

4. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMNs, if available and allowable in the following order:

   i) HPLMN (if not previously selected);

   ii) Each PLMN in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   iii) Each PLMN in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   iv) Other PLMN/access technology combinations with received high quality signal in random order;

   v) Other PLMN/access technology combinations in order of decreasing signal quality.

5. In i [HPLMN (if not previously selected)], the MS shall search for all access technologies it is capable of. No priority is defined for the preferred access technology and the priority is an implementation issue, but "HPLMN Selector with Access Technology" data field on the SIM may be used to optimise the procedure.

References

1. TS 23.122, clause 4.4.3.1.
2. TS 23.122, clause 4.4.3
3. TS 23.122, clause 4.4.3
4. TS 23.122, clause 4.4.3.1.1
5. TS 23.122 (Rel-6), clause 4.4.3.1.1 f)

NOTE: TS 31.102 defines the USIM fields.

#### 6.2.1.1.3 Test purpose

1. To verify that the UE selects the correct combination of HPLMN/access technology combination according to the fields on the USIM. If the UE is not using HPLMN Selector with Access Technology data field on the USIM there is no priority order for the RAT.

#### 6.2.1.1.4 Method of test

Related ICS/IXIT statements

- Access technology priority supported in HPLMNwACT field – yes/no.

Initial conditions

The UE is in automatic PLMN selection mode.

Cell levels are from tables 6.3, 6.4 and 6.5.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_RSCP [dBm] (TDD) | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|
| Cell 2 | -70 | -59 | 1 | PLMN 1 | UTRAN |
| Cell 3 | -75 | -64 | 2 | PLMN 2 | UTRAN |

| Cell | RF signal level [dBm] | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 1 | -48 | 1 | PLMN 1 | GSM |
| Cell 4 | -50 | 2 | PLMN 2 | GSM |

The UE is equipped with a USIM containing default values except for those listed below.

USIM A

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{HPLMNwAcT}$ | 1st | PLMN1 | GSM |
| | 2nd | PLMN1 | UTRAN |

The HPLMN (MCC+MNC) of the IMSI for USIM A is set to PLMN1.

USIM B

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{HPLMNwAcT}$ | 1st | PLMN2 | UTRAN |
| | 2nd | PLMN2 | GSM |

The HPLMN (MCC+MNC) of the IMSI for USIM B is set to PLMN2.

Test procedure

Method C is applied.

a) The SS activates cells 1-4 and monitors the cells for random access requests from the UE. The UE shall have a USIM with settings according to USIM A.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The UE is switched off and a USIM with settings according to USIM B is inserted.

e) The UE is switched on.

f) The SS waits for random access requests from the UE.

#### 6.2.1.1.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN1 (GSM). If the UE is not using HPLMN Selector with Access Technology data field on the USIM, the response from the UE shall be either on Cell 1 or Cell 2. The displayed PLMN shall be either PLMN1 (GSM) or PLMN1 (UTRAN).

2) In step f), the response from the UE shall be on Cell 3. The displayed PLMN shall be PLMN2 (UTRAN). If the UE is not using HPLMN Selector with Access Technology data field on the USIM, the response from the UE shall be either on Cell 3 or Cell 4. The displayed PLMN shall be either PLMN2 (GSM) or PLMN2 (UTRAN).

### 6.2.1.2 Selection of RAT for HPLMN; Manual mode

#### 6.2.1.2.1 Definition

Test to verify that the UE selects the HPLMN RAT according to the HPLMN RAT priority list on the USIM. If no RAT on the list is available, the UE shall try to obtain registration on the same PLMN using other UE-supported RATs.

#### 6.2.1.2.2 Conformance requirement

1. To allow provision for multiple HPLMN codes, the HPLMN access technologies are stored on the SIM together with PLMN codes. This version of the specification does not support multiple HLPMN codes and the "HPLMN Selector with Access Technology" data field is only used by the MS to get the HPLMN access technologies. The HPLMN code is the PLMN code included in the IMSI.

2. For HPLMN, the MS shall search for all access technologies it is capable of. The MS shall start its search using the access technologies stored in the "HPLMN Selector with Access Technology" data field on the SIM in priority order (i.e. the PLMN/access technology combinations are listed in priority order, if an entry includes more than one access technology then no priority is defined for the preferred access technology and the priority is an implementation issue).

3. Manual Network Selection Mode Procedure:

   The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS.

   If displayed, PLMNs meeting the criteria above are presented in the following order:

   3.1 HPLMN;

   3.2 PLMNs contained in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   3.3 PLMNs contained in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   3.4 Other PLMN/access technology combinations with received high quality signal in random order;

   3.5 Other PLMN/access technology combinations in order of decreasing signal quality.

The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

NOTE: It is an MS implementation option whether to indicate access technologies to the user. If the MS does display access technologies, then the access technology used should be the access technology chosen by the user for that PLMN. If the MS does not display access technologies, then the access technology chosen for a particular PLMN should be the highest priority available access technology for that PLMN, if the associated access technologies have a priority order.

References

1. TS 23.122, clause 4.4.3.
2. TS 23.122, clause 4.4.3.1.1 (f).
3. TS 23.122, clause 4.4.3.1.2.

NOTE: TS 31.102 defines the USIM fields.

#### 6.2.1.2.3 Test purpose

1. To verify that:

   1.1 the UE searches for a HPLMN RAT according to the HPLMN Selector with Access Technology data field on the USIM in priority order.

   1.2 If no RAT on the priority list is available, the UE tries to obtain registration on the same PLMN using other UE-supported RATs.

#### 6.2.1.2.4 Method of test

Initial conditions

The UE is in manual PLMN selection mode.

Cell levels are from tables 6.3, 6.4 and 6.5.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_RSCP [dBm] (TDD) | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|
| Cell 1 | -72 | -59 | 1 | PLMN 2 | UTRAN |
| Cell 3 | -75 | -64 | 2 | PLMN 3 | UTRAN |

| Cell | RF signal level [dBm] | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 2 | -48 | 1 | PLMN 2 | GSM |
| Cell 4 | -50 | 2 | PLMN 3 | GSM |

The UE is equipped with a USIM containing default values except for those listed below.

USIM A

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{LOCI}$ | | PLMN 1 | |
| $EF_{HPLMNwAcT}$ | 1st | PLMN2 | UTRAN |
| | 2nd | PLMN2 | GSM |

The HPLMN (MCC+MNC) of the IMSI for USIM A is set to PLMN2.

USIM B

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{LOCI}$ | | PLMN 1 | |
| $EF_{HPLMNwAcT}$ | 1st | PLMN2 | UTRAN |
| | 2nd | PLMN2 | |

The HPLMN (MCC+MNC) of the IMSI for USIM B is set to PLMN2.

Test procedure

Method C is applied.

a) The SS activates cells 1-4 and monitors the cells for random access requests from the UE. The UE shall have a USIM with settings according to USIM A.

b) The UE is switched on.

c) PLMN2 (UTRAN) shall be selected when the PLMN list is presented.

d) The SS waits for random access requests from the UE.

e) Cell 1 is switched off.

f) PLMN2 (GSM) shall be selected when the PLMN list is presented.

g) The SS waits for random access requests from the UE.

h) The UE is switched off and a USIM with settings according to USIM B is inserted. All cells except Cell 1 are active.

i) The UE is switched on.

j) PLMN2 (GSM) shall be selected when the PLMN list is presented.

k) The SS waits for random access requests from the UE.

### 6.2.1.2.5 Test Requirements

1) In step c), the list shall be presented. It shall contain as highest priority PLMN2 (UTRAN as number 1 on the list and GSM as number 2).

2) In step d), the response from the UE shall be on Cell 1 (1st priority RAT for $EF_{HPLMNwAcT}$). The displayed PLMN shall be PLMN2 (UTRAN).

3) In step f), the list shall be presented. It shall contain as highest priority PLMN2 (GSM).

4) In step g), the response from the UE shall be on Cell 2 (2nd priority RAT for $EF_{HPLMNwAcT}$). The displayed PLMN shall be PLMN2 (GSM).

5) In step j), the list shall be presented. It shall contain as highest priority PLMN2 (GSM).

6) In step k), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN2 (GSM). (PLMN2 is not available on UTRAN so registration on the same PLMN is attempted using other UE-supported RATs).

### 6.2.1.3 Selection of RAT for UPLMN; Manual mode

#### 6.2.1.3.1 Definition

Test to verify that the UE selects the UPLMN RAT according to the UPLMN RAT priority list on the USIM. If no PLMN/RAT on the UPLMN RAT priority list is available then the UE shall search for PLMNs in the OPLMN list.

#### 6.2.1.3.2 Conformance requirement

1. Manual Network Selection Mode Procedure:

   The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS.

   If displayed, PLMNs meeting the criteria above are presented in the following order:

   1.1 HPLMN;

   1.2 PLMNs contained in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.3 PLMNs contained in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.4 Other PLMN/access technology combinations with received high quality signal in random order;

   1.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

   If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

NOTE: It is an MS implementation option whether to indicate access technologies to the user. If the MS does display access technologies, then the access technology used should be the access technology chosen by the user for that PLMN. If the MS does not display access technologies, then the access technology chosen for a particular PLMN should be the highest priority available access technology for that PLMN, if the associated access technologies have a priority order.

References

1. TS 23.122, clause 4.4.3.1.2.

NOTE: TS 31.102 defines the USIM fields.

#### 6.2.1.3.3 Test purpose

1. To verify that:

   1.1 the UE selects the UPLMN RAT according to the UPLMN RAT priority list on the USIM.

   1.2 If no RAT on the UPLMN RAT priority list is available, the UE searches for PLMNs in the OPLMN list.

#### 6.2.1.3.4 Method of test

Initial conditions

The UE is in manual PLMN selection mode.

Cell levels are from tables 6.3, 6.4 and 6.5.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_RSCP [dBm] (TDD) | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|
| Cell 1 | -72 | -59 | 1 | PLMN 3 | UTRAN |
| Cell 3 | -75 | -64 | 2 | PLMN 4 | UTRAN |
| Cell 5 | -78 | -69 | 3 | PLMN 5 | UTRAN |

| Cell | RF signal level [dBm] | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 2 | -48 | 1 | PLMN 3 | GSM |
| Cell 4 | -50 | 2 | PLMN 4 | GSM |

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{LOCI}$ | | PLMN 1 | |
| $EF_{HPLMNwAcT}$ | 1st | PLMN2 | UTRAN |
| | 2nd | PLMN2 | GSM |
| $EF_{PLMNwAcT}$ | 1st | PLMN 3 | UTRAN |
| | 2nd | PLMN 4 | GSM |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 5 | UTRAN |
| | 2nd | PLMN 6 | GSM |

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN2.

### Test procedure

Method C is applied.

a) The SS activates cells 1-5 and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) PLMN3 (UTRAN) shall be selected when the PLMN list is presented.

d) The SS waits for random access requests from the UE.

e) Cell 1 and Cell 2 are switched off. See note.

f) PLMN4 (GSM) shall be selected when the PLMN list is presented.

g) The SS waits for random access requests from the UE.

h) Cell 4 and Cell 3 are switched off. See note.

i) PLMN5 (UTRAN) shall be selected when the PLMN list is presented.

j) The SS waits for random access requests from the UE.

NOTE: When the serving cell (Cell 1 in step e and Cell 4 in step h) is switched off then the UE will trigger the recovery from lack of coverage scenario (TS 23.122 clause 4.4.3.1). The UE will search for a cell within the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the UE is capable of. Thus Cell 2 in step e and Cell 3 in step h need to be switched off.

### 6.2.1.3.5 Test Requirements

1) In step c), the list shall be presented. It shall contain in priority PLMN3 (UTRAN), PLMN4 (GSM), other PLMNs.

2) In step d), the response from the UE shall be on Cell 1 (1st priority RAT for $EF_{PLMNwAcT}$). The displayed PLMN shall be PLMN3 (UTRAN).

3) In step f), the list shall be presented. It shall contain in priority PLMN4 (GSM), PLMN5 (UTRAN), other PLMNs.

4) In step g), the response from the UE shall be on Cell 4 (2nd priority RAT for $EF_{PLMNwACT}$). The displayed PLMN shall be PLMN4 (GSM).

5) In step i), the list shall be presented. It shall contain as highest priority PLMN5 (UTRAN).

6) In step j), the response from the UE shall be on Cell 5 (1st priority RAT for $EF_{OPLMNwAcT}$). The displayed PLMN shall be PLMN5 (UTRAN).

### 6.2.1.4 Selection of RAT for OPLMN; Manual mode

#### 6.2.1.4.1 Definition

Test to verify that the UE selects the OPLMN RAT according to the OPLMN RAT priority list on the USIM. If no PLMN/RAT on the OPLMN RAT priority list is available then the UE shall search for other PLMN/access technology combinations with received high quality signal in random order.

#### 6.2.1.4.2 Conformance requirement

1. Manual Network Selection Mode Procedure:

   The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS.

   If displayed, PLMNs meeting the criteria above are presented in the following order:

   1.1 HPLMN;

   1.2 PLMNs contained in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.3 PLMNs contained in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.4 Other PLMN/access technology combinations with received high quality signal in random order;

   1.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

   If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

NOTE: It is an MS implementation option whether to indicate access technologies to the user. If the MS does display access technologies, then the access technology used should be the access technology chosen by the user for that PLMN. If the MS does not display access technologies, then the access technology chosen for a particular PLMN should be the highest priority available access technology for that PLMN, if the associated access technologies have a priority order.

#### References

1. TS 23.122, clause 4.4.3.1.2.

NOTE: TS 31.102 defines the USIM fields.

#### 6.2.1.4.3 Test purpose

1. To verify that:

   1.1 the UE selects the OPLMN RAT according to the OPLMN RAT priority list on the USIM.

   1.2 If no PLMN/RAT on the OPLMN RAT priority list is available, the UE searches for "other PLMN/access technology combinations with received high quality signal in random order".

#### 6.2.1.4.4 Method of test

##### Initial conditions

The UE is in manual PLMN selection mode.

Cell levels are from tables 6.3, 6.4 and 6.5.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_RSCP [dBm] (TDD) | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|
| Cell 1 | -72 | -59 | 1 | PLMN 5 | UTRAN |
| Cell 3 | -75 | -64 | 2 | PLMN 6 | UTRAN |
| Cell 5 | -78 | -69 | 3 | PLMN 7 | UTRAN |

| Cell | RF signal level [dBm] | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 2 | -48 | 1 | PLMN 5 | GSM |
| Cell 4 | -50 | 2 | PLMN 6 | GSM |

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{LOCI}$ | | PLMN 1 | |
| $EF_{HPLMNwAcT}$ | 1st | PLMN2 | UTRAN |
| | 2nd | PLMN2 | GSM |
| $EF_{PLMNwAcT}$ | 1st | PLMN 3 | UTRAN |
| | 2nd | PLMN 4 | GSM |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 5 | UTRAN |
| | 2nd | PLMN 6 | GSM |

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN2.

##### Test procedure

Method C is applied.

a) The SS activates cells 1-5 and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) PLMN5 (UTRAN) shall be selected when the PLMN list is presented.

d) The SS waits for random access requests from the UE.

e) Cell 1 and Cell2 are switched off. See note.

f) PLMN6 (GSM) shall be selected when the PLMN list is presented.

g) The SS waits for random access requests from the UE.

h) Cell 4 and Cell 3 are switched off. See note.

i) PLMN7 (UTRAN) shall be selected when the PLMN list is presented.

j) The SS waits for random access requests from the UE.

NOTE: When the serving cell (Cell 1 in step e and Cell 4 in step h) is switched off then the UE will trigger the recovery from lack of coverage scenario (TS 23.122 clause 4.4.3.1). The UE will search for a cell within the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the UE is capable of. Thus Cell 2 in step e and Cell 3 in step h need to be switched off.

#### 6.2.1.4.5 Test Requirements

1) In step c), the list shall be presented. It shall contain in priority PLMN5 (UTRAN), PLMN6 (GSM), other PLMNs.

2) In step d), the response from the UE shall be on Cell 1 ($1^{st}$ priority RAT for $EF_{OPLMNwAcT}$). The displayed PLMN shall be PLMN5 (UTRAN).

3) In step f), the list shall be presented. It shall contain as highest priority PLMN6 (GSM) followed by PLMN5 (GSM), PLMN6 (UTRAN) and PLMN7 (UTRAN) in random order.

4) In step g), the response from the UE shall be on Cell 4 ($2^{nd}$ priority RAT for $EF_{OPLMNwAcT}$). The displayed PLMN shall be PLMN6 (GSM).

5) In step i), the list shall be presented. It shall contain PLMN5 (GSM), PLMN6 (UTRAN) and PLMN7 (UTRAN) in random order.

6) In step j), the response from the UE shall be on Cell 5. The displayed PLMN shall be PLMN7 (UTRAN).

### 6.2.1.5 Selection of "Other PLMN / access technology combinations"; Manual mode

#### 6.2.1.5.1 Definition

Test to verify that if neither RPLMN, HPLMN, UPLMN nor OPLMN is available, the UE tries to obtain registration on "Other PLMN/access technology combinations with received high quality signal in random order". Forbidden PLMNs shall also by displayed in the list.

#### 6.2.1.5.2 Conformance requirement

1. Manual Network Selection Mode Procedure:

   The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the MS.

   If displayed, PLMNs meeting the criteria above are presented in the following order:

   1.1 HPLMN;

   1.2 PLMNs contained in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.3 PLMNs contained in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.4 Other PLMN/access technology combinations with received high quality signal in random order;

   1.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   In 1.5, the MS shall order the PLMN/access technology combinations in order of decreasing signal quality within each access technology. The order between PLMN/access technology combinations with different access technologies is an MS implementation issue.

   The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

NOTE: It is an MS implementation option whether to indicate access technologies to the user. If the MS does display access technologies, then the access technology used should be the access technology chosen by the user for that PLMN. If the MS does not display access technologies, then the access technology chosen for a particular PLMN should be the highest priority available access technology for that PLMN, if the associated access technologies have a priority order.

2. UTRA case: The UE shall scan all RF channels in the UTRA band according to its capabilities to find available PLMNs. On each carrier, the UE shall search for the strongest cell according to the cell search procedures (for FDD, see TS 25.214, and TDD, see TS 25.224) and read its system information, in order to find out which PLMN the cell belongs to. If the UE can read the PLMN identity, the found PLMN shall be reported to the NAS as a high quality PLMN (but without the RSCP value), provided that the following high quality criterion is fulfilled:

   - For an FDD cell, the measured primary CPICH RSCP value shall be greater than or equal to -95 dBm.
   - For a TDD cell, the measured P-CCPCH RSCP value shall be greater than or equal to –84 dBm.

   Found PLMNs that do not satisfy the high quality criterion, but for which the UE has been able to read the PLMN identities are reported to the NAS together with the CPICH RSCP value for UTRA FDD cells and P-CCPCH RSCP for UTRA TDD cells.

3. GSM case: A PLMN shall be understood to be received with high quality signal if the signal level is above -85 dBm.

References

1. TS 23.122, clause 4.4.3.1.2.
2. TS 25.304, clause 5.1.2.2.
3. TS 03.22, clause 4.4.3.

NOTE: TS 31.102 defines the USIM fields.

#### 6.2.1.5.3 Test purpose

1. To verify that if neither RPLMN, HPLMN, UPLMN nor OPLMN is available, the UE tries to obtain registration on "Other PLMN/access technology combinations with received high quality signal in random order".
2. To verify that forbidden PLMNs are also displayed in the list.

#### 6.2.1.5.4 Method of test

Initial conditions

The UE is in manual PLMN selection mode.

Cell levels are from tables 6.3, 6.4 and 6.5.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_RSCP [dBm] (TDD) | High Quality signal | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|---|
| Cell 1 | -80 | -74 | Yes | 1 | PLMN 7 | UTRAN |
| Cell 3 | -80 | -69 | Yes | 2 | PLMN 9 | UTRAN |

| Cell | RF signal level [dBm] | High Quality signal | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|
| Cell 2 | -65 | Yes | 1 | PLMN 8 | GSM |
| Cell 4 | -65 | Yes | 3 | PLMN 11 | GSM |

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{LOCI}$ | | PLMN 7 | |
| $EF_{FPLMN}$ | PLMN 8 | | |
| | PLMN 9 | | |

### Test procedure

Method C is applied.

a) The SS activates cells 1-4 and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) PLMN7 shall be selected when the PLMN list is presented.

d) The SS waits for random access requests from the UE.

e) Cell 1 is switched off.

f) PLMN8 shall be selected when the PLMN list is presented. The SS shall accept the Registration Request from the UE.

g) The SS waits for random access requests from the UE.

h) Cell 2 is switched off.

i) PLMN9 shall be selected when the PLMN list is presented. The SS shall accept the Registration Request from the UE.

j) The SS waits for random access requests from the UE.

k) Cell 3 is switched off.

l) PLMN11 shall be selected when the PLMN list is presented.

m) The SS waits for random access requests from the UE.

n) Cell 4 is switched off.

### 6.2.1.5.5 Test Requirements

In all steps, the PLMN priority list shall be as follows: PLMN7, PLMN8, PLMN9 and PLMN11 in random order.

1) In step c), the list shall be presented and contain PLMN7, 8, 9, 11.

2) In step d), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN7.

3) In step f), the list shall be presented and contain PLMN 8, 9, 11.

4) In step g), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN8.

5) In step i), the list shall be presented and contain PLMN9, 11.

6) In step j), the response from the UE shall be on Cell 3. The displayed PLMN shall be PLMN9.

7) In step l), the list shall be presented and contain PLMN11. The displayed PLMN shall be PLMN11.

8) After step n), the UE shall inform that no network is available

### 6.2.1.6 Selection of RAT for HPLMN; Automatic mode

#### 6.2.1.6.1 Definition

Test to verify that the UE selects the HPLMN RAT according to the HPLMN RAT priority list on the USIM. If no RAT on the list is available, the UE shall try to obtain registration on the same PLMN using other UE-supported RATs.

#### 6.2.1.6.2 Conformance requirement

1. To allow provision for multiple HPLMN codes, the HPLMN access technologies are stored on the SIM together with PLMN codes. This version of the specification does not support multiple HLPMN codes and the "HPLMN Selector with Access Technology" data field is only used by the MS to get the HPLMN access technologies. The HPLMN code is the PLMN code included in the IMSI.

2. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMNs, if available and allowable in the following order:

   i) HPLMN (if not previously selected);

   ii) Each PLMN in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   iii) Each PLMN in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   iv) Other PLMN/access technology combinations with received high quality signal in random order;

   v) Other PLMN/access technology combinations in order of decreasing signal quality.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If registration cannot be achieved because no PLMNs are available and allowable, the MS indicates "no service" to the user, waits until a new PLMN is available and allowable and then repeats the procedure.

   If there were one or more PLMNs which were available and allowable, but an LR failure made registration on those PLMNs unsuccessful or an entry in the "forbidden LAs for regional provision of service" list prevented a registration attempt, the MS selects the first such PLMN again and enters a limited service state.

Alternative 3a for R99, Rel-4 and Rel-5:

3a. In i [HPLMN (if not previously selected)], the MS shall search for all access technologies it is capable of. The MS shall start its search using the access technologies stored in the "HPLMN Selector with Access Technology" data field on the SIM in priority order as defined in 23.122 clause 4.4.3 (i.e. the PLMN/access technology combinations are listed in priority order, if an entry includes more than one access technology then no priority is defined for the preferred access technology and the priority is an implementation issue).

Alternative 3b for all releases (from R99 onwards):

3b. In i [HPLMN (if not previously selected)], the MS shall search for all access technologies it is capable of. No priority is defined for the preferred access technology and the priority is an implementation issue, but “HPLMN Selector with Access Technology” data field on the SIM may be used to optimise the procedure.

References

1. TS 23.122, clause 4.4.3.

2. TS 23.122, clause 4.4.3.1.1.

3a. TS 23.122, clause 4.4.3.1.1 f)

3b. TS 23.122 (Rel-6), clause 4.4.3.1.1 f)

NOTE: TS 31.102 defines the USIM fields.

#### 6.2.1.6.3 Test purpose

1. To verify that:

1.1 the UE searches for a HPLMN RAT according to the HPLMN Selector with Access Technology data field on the USIM in priority order. If the UE is not using HPLMN Selector with Access Technology data field on the USIM, there is no priority order for the RAT.

1.2 If no RAT on the priority list is available, the UE tries to obtain registration on the same PLMN using other UE-supported RATs.

#### 6.2.1.6.4 Method of test

##### Related ICS/IXIT statements

- Access technology priority supported in HPLMNwACT field – yes/no.

##### Initial conditions

The UE is in automatic PLMN selection mode.

Cell levels are from tables 6.3, 6.4 and 6.5.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_RSCP [dBm] (TDD) | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|
| Cell 1 | -70 | -59 | 1 | PLMN 2 | UTRAN |
| Cell 3 | -60 | -60 | 2 | PLMN 3 | UTRAN |

| Cell | RF signal level [dBm] | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 2 | -48 | 1 | PLMN 2 | GSM |

The UE is equipped with a USIM containing default values except for those listed below.

USIM A

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{HPLMNwAcT}$ | 1st | PLMN2 | UTRAN |
| | 2nd | PLMN2 | GSM |
| $EF_{PLMNwAcT}$ | 1ST | PLMN3 | UTRAN |

The HPLMN (MCC+MNC) of the IMSI for USIM A is set to PLMN2.

USIM B

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{HPLMNwAcT}$ | 1st | PLMN2 | UTRAN |
| | 2nd | PLMN2 | |
| $EF_{PLMNwAcT}$ | 1ST | PLMN3 | UTRAN |

The HPLMN (MCC+MNC) of the IMSI for USIM B is set to PLMN2.

##### Test procedure

Method C is applied.

a) The SS activates cells 1-3 and monitors the cells for random access requests from the UE. The UE shall have a USIM with settings according to USIM A.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The UE is switched off. All cells except Cell 1 are active.

e) The SS waits for random access requests from the UE.

f) The UE is switched off and a USIM with settings according to USIM B is inserted. All cells except Cell 1 are active.

g) The UE is switched on.

h) The SS waits for random access requests from the UE.

#### 6.2.1.6.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1 (1st priority RAT for $EF_{HPLMNwAcT}$). The displayed PLMN shall be PLMN2 (UTRAN). If the UE is not using HPLMN Selector with Access Technology data field on the USIM, the response from the UE shall be either on Cell 1 or Cell 2. The displayed PLMN shall be PLMN2 (either UTRAN or GSM).

2) In step e), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN2 (GSM).

3) In step h), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN2 (GSM).

### 6.2.1.7 Selection of RAT for UPLMN; Automatic mode

#### 6.2.1.7.1 Definition

Test to verify that the UE selects the UPLMN RAT according to the UPLMN RAT priority list on the USIM. If no PLMN/RAT on the UPLMN RAT priority list is available then the UE shall search for PLMNs in the OPLMN list.

#### 6.2.1.7.2 Conformance requirement

1. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMNs, if available and allowable in the following order:

   1.1 HPLMN (if not previously selected);

   1.2 Each PLMN in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.3 Each PLMN in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.4 Other PLMN/access technology combinations with received high quality signal in random order;

   1.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If registration cannot be achieved because no PLMNs are available and allowable, the MS indicates "no service" to the user, waits until a new PLMN is available and allowable and then repeats the procedure.

   If there were one or more PLMNs which were available and allowable, but an LR failure made registration on those PLMNs unsuccessful or an entry in the "forbidden LAs for regional provision of service" list prevented a registration attempt, the MS selects the first such PLMN again and enters a limited service state.

References

1. TS 23.122, clause 4.4.3.1.1.

NOTE: TS 31.102 defines the USIM fields.

#### 6.2.1.7.3 Test purpose

1. To verify that:

   1.1 the UE selects the UPLMN RAT according to the UPLMN RAT priority list on the USIM.

   1.2 If no PLMN/RAT on the UPLMN RAT priority list is available, the UE searches for PLMNs in the OPLMN list.

#### 6.2.1.7.4 Method of test

##### Initial conditions

The UE is in automatic PLMN selection mode.

Cell levels are from tables 6.3, 6.4 and 6.5.

In system information broadcast in each cell, the neighbouring cell list does not contain any other cell belonging to the same PLMN.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH [dBm] (TDD) | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|
| Cell 1 | -70 | -59 | 1 | PLMN 3 | UTRAN |
| Cell 3 | -75 | -64 | 2 | PLMN 4 | UTRAN |
| Cell 5 | -80 | -69 | 3 | PLMN 5 | UTRAN |

| Cell | RF signal level [dBm] | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 2 | -48 | 1 | PLMN 3 | GSM |
| Cell 4 | -50 | 2 | PLMN 4 | GSM |

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{HPLMNwAcT}$ | 1st | PLMN2 | UTRAN |
| | 2nd | PLMN2 | GSM |
| $EF_{PLMNwAcT}$ | 1st | PLMN 3 | UTRAN |
| | 2nd | PLMN 4 | GSM |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 5 | UTRAN |
| | 2nd | PLMN 6 | GSM |

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN2.

UE is previously registered on PLMN 1, before switched off.

##### Test procedure

Method C is applied.

a) The SS activates cells 1-5 and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE. As no cell exists for neither registered PLMN (PLMN1) nor home PLMN/RAT (PLMN2, UTRAN or GSM) the UE shall select Cell 1 (1st priority PLMN/RAT in $EF_{PLMNwAcT}$).

d) Cell 1 and Cell 2 are switched off. See note.

e) The SS waits for random access requests from the UE. As no cell exists for neither registered PLMN (PLMN3 registered at step c), home PLMN (PLMN2, UTRAN or GSM) nor any cells for the 1st priority PLMN/RAT in $EF_{PLMNwAcT}$ (PLMN3/UTRAN) then UE shall select Cell 4 (2nd priority PLMN/RAT in $EF_{PLMNwAcT}$).

f) Cell 4 and Cell 3 are switched off. See note.

g) The SS waits for random access requests from the UE. As no cell exists for neither registered PLMN (PLMN4 registered at step e), home PLMN (PLMN2, UTRAN or GSM) nor user controlled PLMN/RAT (PLMN3/UTRAN or PLMN4/GSM) then UE shall select Cell 5 (1st priority RAT for $EF_{OPLMNwAcT}$).

NOTE: When the serving cell (Cell 1 in step d and Cell 4 in step f) is switched off then the UE will trigger the recovery from lack of coverage scenario (TS 23.122 clause 4.4.3.1). The UE will search for a cell within the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the UE is capable of. Thus need Cell 2 in step d and Cell 3 in step f to be switched off.

#### 6.2.1.7.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1 (1st priority RAT for $EF_{PLMNwAcT}$). The displayed PLMN shall be PLMN3 (UTRAN).

2) In step e), the response from the UE shall be on Cell 4 (2nd priority RAT for $EF_{PLMNwAcT}$). The displayed PLMN shall be PLMN4 (GSM).

3) In step g), the response from the UE shall be on Cell 5 (1st priority RAT for $EF_{OPLMNwAcT}$). The displayed PLMN shall be PLMN5 (UTRAN).

### 6.2.1.8 Selection of RAT for OPLMN; Automatic mode

#### 6.2.1.8.1 Definition

Test to verify that the UE selects the OPLMN RAT according to the OPLMN RAT priority list on the USIM. If no PLMN/RAT on the OPLMN list is available then the UE shall search for other PLMN/access technology combinations with received high quality signal in random order.

#### 6.2.1.8.2 Conformance requirement

1. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMNs, if available and allowable in the following order:

   1.1 HPLMN (if not previously selected);

   1.2 Each PLMN in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.3 Each PLMN in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.4 Other PLMN/access technology combinations with received high quality signal in random order;

   1.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If registration cannot be achieved because no PLMNs are available and allowable, the MS indicates "no service" to the user, waits until a new PLMN is available and allowable and then repeats the procedure.

   If there were one or more PLMNs which were available and allowable, but an LR failure made registration on those PLMNs unsuccessful or an entry in the "forbidden LAs for regional provision of service" list prevented a registration attempt, the MS selects the first such PLMN again and enters a limited service state.

References

1. TS 23.122, clause 4.4.3.1.1.

NOTE: TS 31.102 defines the USIM fields.

#### 6.2.1.8.3 Test purpose

1. To verify that:

   1.1 the UE selects the OPLMN RAT according to the OPLMN RAT priority list on the USIM.

   1.2 If no PLMN/RAT on the OPLMN RAT priority list is available, the UE searches for "other PLMN/access technology combinations with received high quality signal in random order".

#### 6.2.1.8.4 Method of test

##### Initial conditions

The UE is in automatic PLMN selection mode.

Cell levels are from tables 6.3, 6.4 and 6.5.

In system information broadcast in each cell, the neighbouring cell list does not contain any other cell belonging to the same PLMN.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_RSCP [dBm] (TDD) | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|
| Cell 1 | -70 | -59 | 1 | PLMN 5 | UTRAN |
| Cell 3 | -75 | -64 | 2 | PLMN 6 | UTRAN |
| Cell 5 | -80 | -69 | 3 | PLMN 7 | UTRAN |

| Cell | RF signal level [dBm] | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 2 | -48 | 1 | PLMN 5 | GSM |
| Cell 4 | -50 | 2 | PLMN 6 | GSM |

The UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{HPLMNwAcT}$ | 1st | PLMN2 | UTRAN |
| | 2nd | PLMN2 | GSM |
| $EF_{PLMNwAcT}$ | 1st | PLMN 3 | UTRAN |
| | 2nd | PLMN 4 | GSM |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 5 | UTRAN |
| | 2nd | PLMN 6 | GSM |

The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN2.

UE is previously registered on PLMN 1, before switched off.

##### Test procedure

Method C is applied.

a) The SS activates cells 1-5 and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE. As no cell exists for neither registered PLMN (PLMN1), home PLMN/RAT (PLMN2, UTRAN or GSM) nor user controlled PLMN/RAT (PLMN3/UTRAN or PLMN4/GSM) then the UE shall select Cell 1 (1st priority RAT for $EF_{OPLMNwAcT}$).

d) Cell 1 and Cell 2 are switched off. See note.

e) The SS waits for random access requests from the UE. As no cell exists for neither registered PLMN (PLMN5 registered in step c), home PLMN/RAT (PLMN2, UTRAN or GSM), user controlled PLMN/RAT

(PLMN3/UTRAN or PLMN4/GSM) nor any cells for the 1st priority PLMN/RAT in $EF_{OPLMNwAcT}$ (PLMN5/UTRAN) then UE shall select Cell 4 (2nd priority PLMN/RAT in $EF_{OPLMNwAcT}$).

f) Cell 4 and Cell 3 are switched off. See note.

g) The SS waits for random access requests from the UE. As no cell exists for neither registered PLMN (PLMN6 registered in step e ), home PLMN/RAT (PLMN2, UTRAN or GSM), user controlled PLMN/RAT (PLMN3/UTRAN or PLMN4/GSM) nor operator controlled PLMN/RAT (PLMN5/UTRAN or PLMN6/GSM) then UE shall select another PLMN/access technology combinations with received high quality signal in random order (Cell 5).

NOTE: When the serving cell (Cell 1 in step d and Cell 4 in step f) is switched off then the UE will trigger the recovery from lack of coverage scenario (TS 23.122 clause 4.4.3.1). The UE will search for a cell within the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the UE is capable of. Thus need Cell 2 in step d and Cell 3 in step f to be switched off.

#### 6.2.1.8.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 1 (1st priority RAT for $EF_{OPLMNwAcT}$). The displayed PLMN shall be PLMN5 (UTRAN).

2) In step e), the response from the UE shall be on Cell 4 (2nd priority RAT for $EF_{OPLMNwAcT}$). The displayed PLMN shall be PLMN6 (GSM).

3) In step g), the response from the UE shall be on either Cell 5 (other PLMN/access technology combination) with associated PLMN7 (UTRAN) shown.

### 6.2.1.9 Selection of "Other PLMN / access technology combinations"; Automatic mode

#### 6.2.1.9.1 Definition

Test to verify that if neither RPLMN, HPLMN, UPLMN nor OPLMN is available, the UE tries to obtain registration on "Other PLMN/access technology combinations with received high quality signal in random order".

#### 6.2.1.9.2 Conformance requirement

1. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMNs, if available and allowable in the following order:

   1.1 HPLMN (if not previously selected);

   1.2 Each PLMN in the "User Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.3 Each PLMN in the "Operator Controlled PLMN Selector with Access Technology" data field in the SIM (in priority order);

   1.4 Other PLMN/access technology combinations with received high quality signal in random order;

   1.5 Other PLMN/access technology combinations in order of decreasing signal quality.

   In 1.5, the MS shall order the PLMN/access technology combinations in order of decreasing signal quality within each access technology. The order between PLMN/access technology combinations with different access technologies is an MS implementation issue.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If registration cannot be achieved because no PLMNs are available and allowable, the MS indicates "no service" to the user, waits until a new PLMN is available and allowable and then repeats the procedure.

   If there were one or more PLMNs which were available and allowable, but an LR failure made registration on those PLMNs unsuccessful or an entry in the "forbidden LAs for regional provision of service" list prevented a registration attempt, the MS selects the first such PLMN again and enters a limited service state.

2. UTRA case: The UE shall scan all RF channels in the UTRA band according to its capabilities to find available PLMNs. On each carrier, the UE shall search for the strongest cell according to the cell search procedures (for FDD, see TS 25.214, and TDD, see TS 25.224) and read its system information, in order to find out which PLMN the cell belongs to. If the UE can read the PLMN identity, the found PLMN shall be reported to the NAS as a high quality PLMN (but without the RSCP value), provided that the following high quality criterion is fulfilled:

   - For an FDD cell, the measured primary CPICH RSCP value shall be greater than or equal to -95 dBm.
   - For a TDD cell, the measured P-CCPCH RSCP shall be greater than or equal to –84 dBm.

   Found PLMNs that do not satisfy the high quality criterion, but for which the UE has been able to read the PLMN identities are reported to the NAS together with the CPICH RSCP value for UTRA FDD cells and P-CCPCH RSCP for UTRA TDD cells.

3. GSM case: A PLMN shall be understood to be received with high quality signal if the signal level is above -85 dBm.

References

1. TS 23.122, clause 4.4.3.1.1.
2. TS 25.304, clause 5.1.2.2.
3. TS 03.22, clause 4.4.3.

NOTE: TS 31.102 defines the USIM fields.

### 6.2.1.9.3 Test purpose

1. To verify that if neither RPLMN, HPLMN, UPLMN nor OPLMN is available, the UE tries to obtain registration on "Other PLMN/access technology combinations with received high quality signal in random order".

### 6.2.1.9.4 Method of test

Initial conditions

The UE is in automatic PLMN selection mode.

Cell levels are from tables 6.3, 6.4 and 6.5.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | P-CCPCH_RSCP [dBm] (TDD) | "High Quality signal" | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|---|
| Cell 1 | -80 | -69 | Yes | 1 | PLMN 7 | UTRAN |
| Cell 3 | -80 | -69 | Yes | 2 | PLMN 9 | UTRAN |

| Cell | RF signal level [dBm] | "High Quality signal" | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|---|
| Cell 2 | -65 | Yes | 1 | PLMN 8 | GSM |

UE is previously registered on PLMN7, before switched off.

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{LOCI}$ | | PLMN 7 | |

Test procedure

Method C is applied.

a) The SS activates cells 1-3 and monitors the cells for random access requests from the UE.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The cell on which a response was received, is switched off.

e) Step c-d) is repeated until the UE informs that no network is available.

#### 6.2.1.9.5 Test Requirements

1) In step c), the displayed PLMN is noted.

2) When the test procedure has finished, the noted PLMNs shall have appeared in the following order: PLMN7 first, then PLMN8 or PLMN9 in random order.

### 6.2.1.10 Selection of PLMN and RAT in shared network environment, Automatic mode

#### 6.2.1.10.1 Definition

Test to verify that the UE selects the correct combination of PLMN and associated access technology according to the fields on the USIM in a shared network environment.

#### 6.2.1.10.2 Conformance requirement

1. At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see TS 23.122, clause 4.5.2) attempts to perform a Location Registration.

   If successful registration is achieved, the MS indicates the selected PLMN.

   If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows either Automatic or Manual Network Selection Mode Procedure depending on its operating mode.

2. The "HPLMN Selector with Access Technology", "User Controlled PLMN Selector with Access Technology" and "Operator Controlled PLMN Selector with Access Technology" data files in the SIM include associated access technologies for each PLMN entry, see 3GPP TS 31.102. The PLMN/access technology combinations are listed in priority order. If an entry indicates more than one access technology, then no priority is defined for the access technologies within this entry and the priority applied to each access technology within this entry is an implementation issue.

3. The MS shall not use the PLMN codes contained in the "HPLMN Selector with Access Technology" data file.

NOTE 1: To allow provision for multiple HPLMN codes, the HPLMN access technologies are stored on the SIM together with PLMN codes. This version of the specification does not support multiple HLPMN codes and the "HPLMN Selector with Access Technology" data file is only used by the MS to get the HPLMN access technologies. The HPLMN code is the PLMN code included in the IMSI.

4. Automatic Network Selection Mode Procedure:

   The MS selects and attempts registration on other PLMN/access technology combinations, if available and allowable, in the following order:

   i) HPLMN (if not previously selected);

   ii) each PLMN/access technology combination in the "User Controlled PLMN Selector with Access Technology" data file in the SIM (in priority order);

   iii) each PLMN/access technology combination in the "Operator Controlled PLMN Selector with Access Technology" data file in the SIM (in priority order);

   iv) other PLMN/access technology combinations with received high quality signal in random order;

   v) other PLMN/access technology combinations in order of decreasing signal quality.

5. In i [HPLMN (if not previously selected)], the MS shall search for all access technologies it is capable of. No priority is defined for the preferred access technology and the priority is an implementation issue, but "HPLMN Selector with Access Technology" data field on the SIM may be used to optimise the procedure.

References

1. TS 23.122, clause 4.4.3.1.
2. TS 23.122, clause 4.4.3
3. TS 23.122, clause 4.4.3
4. TS 23.122, clause 4.4.3.1.1
5. TS 23.122 , clause 4.4.3.1.1 f)

NOTE: TS 31.102 defines the USIM fields.

### 6.2.1.10.3 Test purpose

To verify that the UE selects the correct combination of HPLMN/access technology combination according to the fields on the USIM. If the UE is not using HPLMN Selector with Access Technology data field on the USIM there is no priority order for the RAT. The test is performed in a shared network environment.

### 6.2.1.10.4 Method of test

Related ICS/IXIT statements

- Access technology priority supported in HPLMNwACT field – yes/no.

Initial conditions

The PLMN codes (MCC+MNC) used throughout the test are defined in the table below:

| PLMN | MCC digit | | | MNC digit | | |
|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 1 | 2 | 3 |
| 1 | 0 | 0 | 1 | 0 | 1 | - |
| 5 | 0 | 0 | 1 | 0 | 5 | - |
| 7 | 0 | 0 | 1 | 0 | 7 | - |

NOTE: The "–" (dash) denotes "not present".

System simulator:

Cell levels are from tables 6.3 and 6.5.

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 1 | -60 | 1 | PLMN5 | UTRAN |

| Cell | RF signal level [dBm] | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 2 | -48 | 1 | PLMN1 | GSM |
| Cell 3 | -58 | 2 | PLMN7 | GSM |

The reference system configuration from TS34.108 clause 6.1 are used in all cells, with modifications in the Master Information Block of Cell 1 according to the table below.

| | |
|---|---|
| - MIB value tag | Set to (Current MIB value tag + 1) |
| - Supported PLMN types | |

| | |
|---|---|
| - PLMN type | GSM-MAP |
| - PLMN identity | |
| - MCC digit | PLMN5 |
| - MNC digit | PLMN5 |
| - Multiple PLMN List | |
| - MIB PLMN Identity | FALSE |
| - Multiple PLMNs (1) | |
| - MCC | Not present |
| - MNC | PLMN1 |
| - Multiple PLMNs (2) | |
| - MCC | Not present |
| - MNC | PLMN7 |

UE:

The UE is in automatic PLMN selection mode, and equipped with a USIM containing default values except for those listed below.

USIM A

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{HPLMNwAcT}$ | 1st | PLMN1 | GSM |
| | 2nd | PLMN1 | UTRAN |

The HPLMN (MCC+MNC) of the IMSI for USIM A is set to PLMN1.

USIM B

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{HPLMNwAcT}$ | 1st | PLMN7 | UTRAN |
| | 2nd | PLMN7 | GSM |

The HPLMN (MCC+MNC) of the IMSI for USIM B is set to PLMN7.

### Test procedure

Method C is applied.

a) The SS activates cells 1-3 and monitors all cells for random access requests from the UE. The UE shall have a USIM with settings according to USIM A.

b) The UE is switched on.

c) The SS waits for random access requests from the UE.

d) The UE is switched off and a USIM with settings according to USIM B is inserted.

e) The UE is switched on.

f) The SS waits for random access requests from the UE.

### 6.2.1.10.5 Test Requirements

1) In step c), the response from the UE shall be on Cell 2. The displayed PLMN shall be PLMN1 (GSM). If the UE is not using HPLMN Selector with Access Technology data field on the USIM, the response from the UE shall be either on Cell 1 or Cell 2. The displayed PLMN shall be either PLMN1 (GSM) or PLMN1 (UTRAN).

2) In step f), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN7 (UTRAN). If the UE is not using HPLMN Selector with Access Technology data field on the USIM, the response from the UE shall be either on Cell 1 or Cell 3. The displayed PLMN shall be either PLMN7 (GSM) or PLMN7 (UTRAN).

## 6.2.1.11 Selection of PLMN and RAT in shared network environment, Manual Mode

### 6.2.1.11.1 Definition

Test to verify that the UE can present the available PLMNs in priority order to the user when asked to do so in multi-mode Shared Network environment (Manual Mode). This includes PLMNs broadcasted in UTRAN cells (IE “PLMN Identity”, UTRAN IE “Multiple PLMN list” ) and in GSM cells. The test also verifies that displayed PLMNs can be selected by the user and that the UE attempts to access the selected PLMN. After successful registration, the selected PLMN shall be displayed to the user. The order of the displayed PLMNs shall be as specified by TS 23.122.

### 6.2.1.11.2 Conformance requirement

1a. At switch on or recovery from lack of coverage

At switch on, or following recovery from lack of coverage,the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see clause 4.5.2) attempts to perform a Location Registration.

EXCEPTION: In A/Gb mode an MS with voice capability, shall not search for CPBCCH carriers. In A/Gb mode an MS not supporting packet services shall not search for CPBCCH carriers.

If successful registration is achieved, the MS indicates the selected PLMN.

If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows one of the following two procedures depending on its operating mode.

EXCEPTION: If registration is not possible on recovery from lack of coverage due to the registered PLMN being unavailable, a MS attached to GPRS services may, optionally, continue looking for the registered PLMN for an implementation dependent time.

NOTE: A MS attached to GPRS services should use the above exception only if one or more PDP contexts are currently active.

1b. At switch on, or following recovery from lack of coverage, the MS selects the registered PLMN or equivalent PLMN (if it is available) using all access technologies that the MS is capable of and if necessary (in the case of recovery from lack of coverage, see clause 4.5.2) attempts to perform a Location Registration.

EXCEPTION: In A/Gb mode an MS with voice capability, shall not search for CPBCCH carriers. In A/Gb mode an MS not supporting packet services shall not search for CPBCCH carriers.

If successful registration is achieved, the MS indicates the selected PLMN.

If there is no registered PLMN, or if registration is not possible due to the PLMN being unavailable or registration failure, the MS follows one of the following two procedures depending on its PLMN selection operating mode.

EXCEPTION: At switch on, if the MS is in manual mode and neither registered PLMN nor PLMN that is equivalent to it is available but EHPLMN is available, then instead of performing the manual network selection mode procedure of clause 4.4.3.1.2 the MS may select and attempt registration on the highest priority EHPLMN. If the EHPLMN list is not available or is empty and the HPLMN is available, then the MS may select and attempt registration on the HPLMN. The MS shall remain in manual mode.

NOTE 1: If successful registration is achieved, then the current serving PLMN becomes the registered PLMN and the MS does not store the previous registered PLMN for later use.

EXCEPTION: If registration is not possible on recovery from lack of coverage due to the registered PLMN being unavailable, an MS attached to GPRS services may, optionally, continue looking for the registered PLMN for an implementation dependent time.

NOTE2: An MS attached to GPRS services should use the above exception only if one or more PDP contexts are currently active.

2. Manual Network Selection Mode Procedure:

The MS indicates whether there are any PLMNs, which are available using all supported access technologies. This includes PLMNs in the "forbidden PLMNs" list and PLMNs which only offer services not supported by the

MS. An MS which supports GSM COMPACT shall also indicate GSM COMPACT PLMNs (which use PBCCH).

If displayed, PLMNs meeting the criteria above are presented in the following order:

i)- HPLMN;

ii)- PLMN/access technology combinations contained in the " User Controlled PLMN Selector with Access Technology " data file in the SIM (in priority order);

iii)- PLMN/access technology combinations contained in the "Operator Controlled PLMN Selector with Access Technology" data file in the SIM (in priority order);

iv)- other PLMN/access technology combinations with received high quality signal in random order;

v)- other PLMN/access technology combinations in order of decreasing signal quality.

In ii and iii, an MS using a SIM without access technology information storage (i.e. the "User Controlled PLMN Selector with Access Technology" and the "Operator Controlled PLMN Selector with Access Technology" data files are not present) shall instead present the PLMNs contained in the "PLMN Selector" data file in the SIM (in priority order).

In v, requirement h) in clause 4.4.3.1.1 applies.

In GSM COMPACT, the non support of voice services shall be indicated to the user.

The user may select his desired PLMN and the MS then initiates registration on this PLMN using the access technology chosen by the user for that PLMN or using the highest priority available access technology for that PLMN, if the associated access technologies have a priority order. (This may take place at any time during the presentation of PLMNs). For such a registration, the MS shall ignore the contents of the "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" and "forbidden PLMNs" lists.

Once the UE has registered on a PLMN selected by the user, the UE shall not automatically register on a different PLMN unless:

i) the new PLMN is declared as an equivalent PLMN by the registered PLMN; or

ii) the user selects automatic mode.

NOTE 1: It is an MS implementation option whether to indicate access technologies to the user. If the MS does display access technologies, then the access technology used should be the access technology chosen by the user for that PLMN. If the MS does not display access technologies, then the access technology chosen for a particular PLMN should be the highest priority available access technology for that PLMN, if the associated access technologies have a priority order.

If the user does not select a PLMN, the selected PLMN shall be the one that was selected before the PLMN selection procedure started. If no such PLMN was selected or that PLMN is no longer available, then the MS shall attempt to camp on any acceptable cell and enter the limited service state.

NOTE 2: High quality signal is defined in the appropriate AS specification.

3. If a "PLMN not allowed" message is received by an MS in response to an LR request from a VPLMN, that VPLMN is added to a list of "forbidden PLMNs" in the SIM and thereafter that VPLMN will not be accessed by the MS when in automatic mode. A PLMN is removed from the "forbidden PLMNs" list if, after a subsequent manual selection of that PLMN, there is a successful LR. This list is retained when the MS is switched off or the SIM is removed. The HPLMN shall not be stored on the list of "forbidden PLMNs".

References

1a. TS 23.122, clause 4.4.3.1

1b. TS 23.122 (Rel-7), clause 4.4.3.1

2. TS 23.122, clause 4.4.3.1.2

NOTE: TS 31.102 defines the USIM fields.

#### 6.2.1.11.3 Test purpose

1. To verify that all PLMNs available are displayed to the user in multi-mode Shared Network environment (Manual Mode). This includes for the UTRAN cells, PLMNs broadcasted in IE "PLMN Identity" and IE "Multiple PLMN list", as well as the PLMNs broadcasted by GSM cells. The available PLMNs shall be displayed in priority order according to TS 23.122.

2. To verify that it is possible to manually select any PLMN, regardless of RAT, from the displayed list, and that the UE subsequently attempts to register on the selected PLMN/RAT.

3. To verify that the UE in general behaves according to TS 23.122 in multi-mode Shared Network environment (Manual Mode).

#### 6.2.1.11.4 Method of test

Initial conditions

Cell levels are from table 6.5 (GSM) and 6.3 (UTRAN FDD).

| Cell | RF signal level [dBm] | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 9 | -48 | 1 | PLMN 9 | GSM |
| Cell 10 | -50 | 2 | PLMN 10 | GSM |

| Cell | CPICH_Ec [dBm/3.84 MHz] (FDD) | Test Channel | PLMN | Radio Access Technology |
|---|---|---|---|---|
| Cell 1 | -60 | 1 | See below | UTRAN |
| Cell 4 | -65 | 2 | See below | UTRAN |

The reference system configuration from TS34.108 clause 6.1 are used in the UTRAN cells, with the following modifications:

Master Information Block

| | |
|---|---|
| - MIB value tag | 1Set to (Current MIB value tag + 1) |
| - Supported PLMN types | |
| - PLMN type | GSM-MAP |
| - PLMN identity | |
| - MCC digit | See table below |
| - MNC digit | See table below |
| - Multiple PLMN List | |
| - MIB PLMN Identity | See table below |
| - Multiple PLMNs (1) | |
| - MCC | See table below |
| - MNC | See table below |
| - Multiple PLMNs (2) | |
| - MCC | See table below |
| - MNC | See table below |

The MIB PLMN Identity and PLMN codes broadcasted on the BCCH in each cell shall be configured as defined in the table below.

| Cell | MIB PLMN Identity | PLMN Identity | | Multiple PLMNs (1) | | Multiple PLMNs (2) | |
|---|---|---|---|---|---|---|---|
| | | MCC digits | MNC digits | MCC digits | MNC digits | MCC digits | MNC digits |
| 1 | TRUE | PLMN 1 | PLMN 1 | - | PLMN 2 | - | PLMN 3 |
| 4 | FALSE | PLMN 4 | PLMN 4 | - | PLMN 5 | - | PLMN 10 |

NOTE: "–" (dash) denotes "not present"

The definition of each PLMN code is found in table below.

| PLMN | MCC digit | | | MNC digit | | |
|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 1 | 2 | 3 |
| 1 | 0 | 0 | 1 | 0 | 1 | - |
| 2 | 0 | 0 | 1 | 0 | 2 | - |
| 3 | 0 | 0 | 1 | 0 | 3 | - |
| 4 | 0 | 0 | 1 | 0 | 4 | - |
| 5 | 0 | 0 | 1 | 0 | 5 | - |
| 6 | 0 | 0 | 1 | 0 | 6 | - |
| 9 | 0 | 0 | 1 | 0 | 9 | - |
| 10 | 0 | 0 | 1 | 1 | 0 | - |

NOTE: "–" (dash) denotes "not present"

The UE is in manual PLMN selection mode and equipped with a USIM containing default values except for those listed below. The UE has successfully selected a PLMN in manual PLMN selection mode. The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

| USIM field | Priority | PLMN | Access Technology Identifier |
|---|---|---|---|
| $EF_{PLMNwAcT}$ | 1st | PLMN 10 | GSM |
| | 2nd | PLMN 9 | GSM |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 2 | UTRAN |

### Test procedure

Method C is applied.

a) The SS activates all cells and monitors the cells for random access requests from the UE.

b) The UE is switched on. Instead of performing the manual network selection mode procedure the UE may select and attempt registration on the HPLMN (PLMN 1). The SS shall reject the registration attempt, the UE shall remain in manual mode and the test execution shall continue.

c) PLMN 9 shall be selected when the list is displayed.

d) The SS waits for random access requests from the UE.

e) Cell 9 is switched off.

f) PLMN 2 shall be selected when the list is displayed.

g) The SS waits for random access requests from the UE.

h) Cell 1 is switched off.

i) PLMN 10 shall be selected when the list is displayed.

j) The SS waits for random access requests from the UE.

#### 6.2.1.11.5 Test Requirements

1) In step c), the list shall be presented. The priority shall be as follows PLMN 1, PLMN 10, PLMN 9, PLMN 2, other PLMNs.

2) In step d), the response from the UE shall be on Cell 9. The displayed PLMN shall be PLMN 9. If indication of RAT is supported, the displayed PLMN shall be PLMN 9 (GSM)

3) In step f), the list shall be presented. The priority shall be as follows: PLMN 1, PLMN 10, PLMN 2, other PLMNs.

4) In step g), the response from the UE shall be on Cell 1. The displayed PLMN shall be PLMN 2. If indication of RAT is supported, the displayed PLMN shall be PLMN 2 (UTRAN).

5) In step i), the list shall be presented. The priority shall be as follows: PLMN 10, PLMN 5.

6) In step j), the response from the UE shall be on either Cell 4 or Cell 10. The displayed PLMN shall be PLMN 10.

## 6.2.2 Cell selection and reselection

### 6.2.2.1 Cell reselection if cell becomes barred or S<0; UTRAN to GSM

#### 6.2.2.1.1 Definition

Test to verify that if both a GSM and UTRAN network is available, the UE performs cell reselection from UTRAN to GSM if the UTRAN cell becomes barred or S falls below zero.

#### 6.2.2.1.2 Conformance requirement

1. When camped on a cell, the UE shall regularly search for a better cell according to the cell reselection criteria. If a better cell is found, that cell is selected. The change of cell may imply a change of RAT.

2. A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

   2.1 The cell is part of the selected PLMN or, of a PLMN considered as equivalent by the UE according to the information provided by the NAS.

   2.2 The cell is not barred.

   2.3 The cell is not part of the list of "forbidden LAs for roaming".

   2.4 The cell selection criteria are fulfilled.

3. When camped normally, the UE shall execute the cell reselection evaluation process on the following occasions/triggers:

   3.1 UE internal triggers, so as to meet performance as specified in TS 25.133 for FDD and TS 25.123 for TDD.

   3.2 When information on the BCCH used for the cell reselection evaluation procedure has been modified.

4. Cell Reselection Criteria:

   4.1 The UE shall perform ranking of all cells that fulfil the S criterion.

   4.2 The cells shall be ranked according to the R criteria, deriving Qmeas,n and Qmeas,s and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in TS 25.133 and TS 25.123 for FDD, TDD and GSM cells, respectively.

   The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$.

   If the usage of HCS is indicated in system information, $TEMP_OFFSET1_n$ is used for $TEMP_OFFSET_n$ to calculate $TO_n$. If it is indicated in system information that HCS is not used, $TEMP_OFFSET_n$ is not applied when calculating $R_n$. The best ranked cell is the cell with the highest R value.

If a TDD or GSM cell is ranked as the best cell, then the UE shall perform cell re-selection to that TDD or GSM cell.

4.3 In all cases, the UE shall reselect the new cell, only if the the following conditions are met:

- the new cell is better ranked than the serving cell during a time interval Treselection.
- more than 1 second has elapsed since the UE camped on the current serving cell.

References

1. TS 25.304, clause 5.2.1.
2. TS 25.304, clause 4.3.
3. TS 25.304, clause 5.2.5.1.
4. TS 25.304, clause 5.2.6.1.4.

#### 6.2.2.1.3 Test purpose

1. To verify that the UE performs cell reselection from UTRAN to GSM on the following occasions:

   1.1 Serving cell becomes barred.

   1.2 S<0 for serving cell.

#### 6.2.2.1.4 Method of test

Initial conditions

UE is idle updated on cell 1.

All cells belong to the same PLMN.

The Inter-RAT Cell Info List of Cell 1 (UTRAN) refers to Cell 9 (GSM) and Cell 10 (GSM).

The 3G Neighbour Cell Description of Cell 9 (GSM) and Cell 10 (GSM) refers to Cell 1 (UTRAN)

Step a-c:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Test Channel | | 1 |
| CPICH_Ec (FDD) | dBm / 3.84 MHz | -60 |
| P-CCPCH_RSCP (TDD) | dBm | -60 |
| Qrxlevmin | dBm | -79 |
| Srxlev* | dBm | 19 |
| CellBarred | | Not barred |
| S-search RAT | dB | +20 |

| Parameter | Unit | Cell 9 (GSM) | Cell 10 (GSM) |
|---|---|---|---|
| Test Channel | | 1 | 2 |
| RF Signal Level | dBm | -80 | -87 |
| RXLEV_ACCESS_MIN | dBm | -100 | -100 |
| C1* | dBm | 20 | 13 |
| FDD_Qmin | dB | -20 | -20 |
| FDD_Qoffset | dBm | 0 | 0 |

Step d-f:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| CellBarred | | Not barred -> Barred |
| Tbarred | s | 80 |

Step g:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| CPICH_Ec (FDD) | dBm/ 3.84 MHz | -90 |
| P-CCPCH_RSCP (TDD) | dBm | -90 |
| Srxlev* | dB | 19->-11 |

Test procedure

Method B is applied.

a) The SS activates cells 9, and 10. The SS monitors cells 9 and 10 for random access requests from the UE.

b) Void

c) Void

d) The SS sets Cell 1 to be barred. The SS notifies UE of the BCCH modification

e) The SS waits for random access request from the UE.

f) The UE is switched off. The SS sets Cell 1 to be not barred

g) Step a-e) is repeated except that in step d), the signal level is reduced, so S will become negative instead of being barred.

#### 6.2.2.1.5 Test Requirements

1) In step a), after the UE has responded on Cell 1, it shall not respond on any other cell within 1 min.

2) In step e), the UE shall respond on Cell 9.

3) In step g), the UE shall respond on Cell 9 after the signal level is reduced.

### 6.2.2.2 Cell reselection if cell becomes barred or C1<0; GSM to UTRAN

#### 6.2.2.2.1 Definition

Test to verify that if both a GSM and UTRAN network is available, the UE performs cell reselection from GSM to UTRAN if the GSM cell becomes barred or the path loss criterion C1 falls below zero for a period of 5 s.

#### 6.2.2.2.2 Conformance requirement

1. At least every 5 s the MS shall calculate the value of C1 and C2 for the serving cell and re-calculate C1 and C2 values for non serving cells (if necessary). The MS shall then check whether:

   1.1 The path loss criterion (C1) for current serving cell falls below zero for a period of 5 s. This indicates that the path loss to the cell has become too high.

2. While camped on a cell of the registered PLMN ("camped normally"), the MS may need to select a different cell ("normal cell reselection" state). The following events trigger a cell reselection:

   2.1 The path loss criterion parameter C1 (see TS 03.22, clause 3.6) indicates that the path loss to the cell has become too high;

   2.2 The cell camped on (current serving cell) has become barred.

References

1. TS 05.08, clause 6.6.2.
2. TS 03.22, clause 4.5.

#### 6.2.2.2.3 Test purpose

1. To verify that the UE performs cell reselection from GSM to UTRAN on the following occasions:

   1.1 Serving cell becomes barred.

   1.2 The path loss criterion C1 for serving cell falls below zero for a period of 5 s.

#### 6.2.2.2.4 Method of test

Initial conditions

UE is idle updated on Cell 9.

Cell 9:

The SS transmitted system information for Cell 1 and Cell 2 shall be according to TS 34.108, clause 6.1.4 with the following exceptions:

The 3G Neighbour Cell Description of Cell 9 (GSM) refers Cell 1 (UTRAN) and Cell 2 (UTRAN).

SYSTEM INFORMATION TYPE 3 REST OCTETS

- SI2q indicated on BCCH Extended

SYSTEM INFORMATION TYPE 2QUATER

| Information Element | Value/remark |
|---|---|
| < **RR management Protocol Discriminator** bit (4) > | ‘0110'B |
| < **Skip Indicator** : bit (4) > | ‘0000'B |
| < **Message type** : bit (8) > | ‘0000 0111’B |
| < **SI2 quarter Rest Octets** > | |
| < **BA_IND** : bit > | 0 |
| < **3G_BA_IND** : bit > | 0 |
| < **MP_CHANGE_MARK** : bit > | 0 |
| < **SI2quater _INDEX** : bit (4) > | ‘0000’B |
| < **SI2quater_COUNT** : bit (4) > | ‘0000’B |
| 0 \| 1 < **Measurement_Parameters Description >** | 0 |
| 0 \| 1 < **GPRS_Real Time Difference Description >** | 0 |
| 0 \| 1 < **GPSR_BSIC Description >** | 0 |
| 0 \| 1 < **GPRS_REPORT PRIORITY Description >** | 0 |
| 0 \| 1 < **GPRS_Measurement_Parameters Description >** | 0 |
| 0 \| 1 < **NC Measurement Parameters >** | 0 |
| 0 \| 1 < **extension length** > | 0 |
| 0 \| 1 < **3G Neighbour Cell Description >** | 1 |
| 0 \| 1 < **Index_Start_3G** : bit (7) > | 0 |
| 0 \| 1 < **Absolute_Index_Start_EMR** : bit (7) > | 0 |
| 0 \| 1 < **UTRAN FDD Description >** | 1 |
| 0 \| 1 < **Bandwidth_FDD** : bit (3) > | 0 |
| 1 < **Repeated UTRAN FDD Neighbour Cells >** ** 0 | 1 |
| 0 < **FDD-ARFCN** : bit (14) > | 0 See TS 34.108, clause 6.1.5, table 6.1.1 |
| < **FDD_Indic0** : bit > | 0 |
| < **NR_OF_FDD_CELLS** : bit (5) > | ‘00010’B |
| < **FDD_CELL_INFORMATION Field >** | 19 bits<br>Scrambling code according to TS 34.108, clause 6.1.4, Default settings for cell No.1 and cell No.2 |
| 1 < **Repeated UTRAN FDD Neighbour Cells >** ** 0 | 0 |
| 0 \| 1 < **UTRAN TDD Description >** | 0 |
| 0 \| 1 < **3G MEASUREMENT Parameters Description >** | 1 |
| < **Qsearch_I :** bit (4) > | ‘0111’B (Always) |
| < **Qsearch_C_Initial :** bit (1) > | 0 |
| 0 \| 1 < **FDD_Qoffset** : bit (4) > | 1 ‘1000’B (0 dB) |
| < **FDD_REP_QUANT** : bit (1) > | 0 |
| < **FDD_MULTIRAT_REPORTING** : bit (2) > | ‘00’B |
| < **FDD_Qmin** : bit (3) > | ’000’B (-20 dB) |
| 0 \| 1 < **TDD_Qoffset** : bit (4) > | 0 |
| 0 \| 1 < **GPRS_3G_MEASUREMENT Parameters Description >** | 1 |
| < **Qsearch_P** : bit (4) > | ‘1111’B (Never) |
| < **3G_SEARCH_PRIO** : bit > | 0 |
| 0 \| 1 < **FDD_REP_QUANT** : bit > | 0 |
| 0 \| 1 < **FDD_REPORTING_OFFSET** : bit (3) > | 0 |
| 0 \| 1 < **TDD_MULTIRAT_REPORTING** : bit (2) > | 0 |
| 0 \| 1 < **TDD_REPORTING_OFFSET** : bit (3) > | 0 |

Cell 1 and Cell 2:

The SS transmitted system information for Cell 1 and Cell 2 shall be according to TS 34.108, clause 6.1.4 with the following exceptions:

The Inter-RAT Cell Info List of Cell 1 (UTRAN) and Cell 2 (UTRAN) refers to Cell 9 (GSM).

Step a-c:

| Parameter | Unit | Cell 9 (GSM) |
|---|---|---|
| Test Channel | | 1 |
| RF Signal Level | dBm | -50 |
| RXLEV_ACCESS_MIN | dBm | -70 |
| MS_TXPWR_MAX_CCH | dBm | Max. output power of UE |
| FDD_Qmin | dB | -20 |
| FDD_Qoffset | dB | 0 |
| CELL_BAR_ACCESS | | Not barred |
| C1* | dB | 20 |

| Parameter | Unit | Cell 1 (UTRAN) | Cell 2 (UTRAN) |
|---|---|---|---|
| P-CCPCH_RSCP (TDD) | dBm | -65 | -72 |
| CPICH_Ec (FDD) | dBm/3.84 MHz | -65 | -72 |
| Qrxlevmin | dBm | -101 | -101 |
| Srxlev* | dB | 36 | 29 |

Step d-e:

| Parameter | Unit | Cell 9 (GSM) |
|---|---|---|
| CELL_BAR_ACCESS | | Not barred -> Barred |

Step f-g:

| Parameter | Unit | Cell 9 (GSM) |
|---|---|---|
| RF Signal Level | dBm | -50 -> -80 (4sec) -> -50 |
| C1* | dB | 20 -> -10 (4sec) -> 20 |

Step h:

| Parameter | Unit | Cell 9 (GSM) |
|---|---|---|
| RF Signal Level | dBm | -50 -> -80 |
| C1* | dB | 20 -> -10 |

Test procedure

Method C is applied.

a) The SS activates cells 1, and 2. The SS monitors cells 1 and 2 for random access requests from the UE.

b) Void.

c) Void

d) The SS sets Cell 9 to be barred. The SS notifies UE of the BCCH modification

e) The SS waits for random access request from the UE.

f) The UE is switched off. The SS sets Cell 9 to be not barred and deactivates cells 1 and 2.

g) The UE is switched on. The SS waits until UE is idle updated on Cell 9.

h) Step a-e) is repeated except that in step d), the SS reduces signal level on Cell 9 to –80 dBm for 4 s and then raises the level back to –50 dBm (C1 becomes –10 dBm during this period).

i) The SS reduces signal level on Cell 9 to –80 dBm.

j) The SS waits for random access request from the UE.

#### 6.2.2.2.5 Test Requirements

1) In step a), there shall not be any random access requests on any cell within 1 min.

2) In step e), the UE shall respond on Cell 1, the RRC Connection Request cause shall be "interRAT_CellReselection".

3) In step h), there shall be no access on Cell 1 within 30 s, after having reduced the signal level on Cell 9.

4) In step j), the UE shall respond on Cell 1, the RRC Connection Request cause shall be "interRAT_CellReselection".

### 6.2.2.3 Cell reselection timings; GSM to UTRAN

#### 6.2.2.3.1 Definition

Test to verify that the UE meets the cell reselection timing requirements when both a GSM and UTRAN network is available.

#### 6.2.2.3.2 Conformance requirement

1. If the 3G Cell Reselection list (see TS 04.18) includes UTRAN frequencies, the MS shall, at least every 5 s update the value RLA_C for the serving cell and each of the at least 6 strongest non-serving GSM cells.

   1.1 The MS shall then reselect a suitable UTRAN cell if its measured RSCP value exceeds the value of RLA_C for the serving cell and all of the suitable non-serving GSM cells by the value XXX_Qoffset for a period of 5 s and, for FDD, the UTRAN cells measured Ec/No value is equal or greater than the value FDD_Qmin.

   - Ec/No and RSCP are the measured quantities.

   - FDD_Qmin and XXX_Qoffset are broadcast on BCCH of the serving cell. XXX indicates other radio access technology/mode.

   1.2 In case of a cell reselection occurring within the previous 15 s, XXX_Qoffset is increased by 5 dB.

   1.3 Cell reselection to UTRAN shall not occur within 5 s after the MS has reselected a GSM cell from an UTRAN cell if a suitable GSM cell can be found.

   1.4 If more than one UTRAN cell fulfils the above criteria, the UE shall select the cell with the greatest RSCP value.

2. The MS shall be able to identify and select a new best UTRAN cell on a frequency, which is part of the 3G Cell Reselection list, within 30 s after it has been activated under the condition that there is only one UTRAN frequency in the list and under good radio conditions.

   The allowed time is increased by 30 s for each additional UTRAN frequency in the 3G Cell Reselection list. However, multiple UTRAN cells on the same frequency in the neighbour cell list does not increase the allowed time.

NOTE: Definitions of measurements are in TS 25.215 and TS 25.101 for FDD mode, in TS 25.225 and TS 25.102 for TDD mode, clause 3.2 and TS 05.08, clause 6.1.

#### References

1. TS 05.08, clause 6.6.5.

2. TS 05.08, clause 6.6.4.

#### 6.2.2.3.3 Test purpose

1. To verify that:

   1.1 The UE meets conformance requirement 1.1 and additionally, that no cell reselection is performed if the period is less than 5 s

   1.3 The UE meets conformance requirement 1.3.

#### 6.2.2.3.4 Method of test

UE is idle updated on Cell 1.

Cell 9:

The SS transmitted system information for Cell 1 shall be according to TS 34.108, clause 6.1.4 with the following exceptions:

The 3G Neighbour Cell Description of Cell 9 (GSM) refers to Cell 1 (UTRAN).

SYSTEM INFORMATION TYPE 3 REST OCTETS

- SI2q indicated on BCCH Norm

SYSTEM INFORMATION TYPE 2QUATER

| Information Element | Value/remark |
|---|---|
| < **RR management Protocol Discriminator** bit (4) > | ‘0110'B |
| < **Skip Indicator** : bit (4) > | ‘0000'B |
| < **Message type** : bit (8) > | ‘0000 0111’B |
| < **SI2 quarter Rest Octets** > | |
| < **BA_IND** : bit > | 0 |
| < **3G_BA_IND** : bit > | 0 |
| < **MP_CHANGE_MARK** : bit > | 0 |
| < **SI2quater _INDEX** : bit (4) > | ‘0000’B |
| < **SI2quater_COUNT** : bit (4) > | ‘0000’B |
| 0 \| 1 < **Measurement_Parameters Description >** | 0 |
| 0 \| 1 < **GPRS_Real Time Difference Description >** | 0 |
| 0 \| 1 < **GPSR_BSIC Description >** | 0 |
| 0 \| 1 < **GPRS_REPORT PRIORITY Description >** | 0 |
| 0 \| 1 < **GPRS_Measurement_Parameters Description >** | 0 |
| 0 \| 1 < **NC Measurement Parameters >** | 0 |
| 0 \| 1 < **extension length** > | 0 |
| 0 \| 1 < **3G Neighbour Cell Description >** | 1 |
| 0 \| 1 < **Index_Start_3G** : bit (7) > | 0 |
| 0 \| 1 < **Absolute_Index_Start_EMR** : bit (7) > | 0 |
| 0 \| 1 < **UTRAN FDD Description >** | 1 |
| 0 \| 1 < **Bandwidth_FDD** : bit (3) > | 0 |
| 1 < **Repeated UTRAN FDD Neighbour Cells >** ** 0 | 1 |
| 0 < **FDD-ARFCN** : bit (14) > | 0 See TS 34.108, clause 6.1.5, table 6.1.1 |
| < **FDD_Indic0** : bit > | 0 |
| < **NR_OF_FDD_CELLS** : bit (5) > | ‘00001’B |
| < **FDD_CELL_INFORMATION Field >** | 10 bits<br>Scrambling code according to TS 34.108, clause 6.1.4, Default settings for cell No.1 |
| 1 < **Repeated UTRAN FDD Neighbour Cells >** ** 0 | 0 |
| 0 \| 1 < **UTRAN TDD Description >** | 0 |
| 0 \| 1 < **3G MEASUREMENT Parameters Description >** | 1 |
| < **Qsearch_I :** bit (4) > | ‘0111’B (Always) |
| < **Qsearch_C_Initial :** bit (1) > | 0 |
| 0 \| 1 < **FDD_Qoffset** : bit (4) > | 1 ‘1001’B (4dB) |
| < **FDD_REP_QUANT** : bit (1) > | 0 |
| < **FDD_MULTIRAT_REPORTING** : bit (2) > | ‘00’B |
| < **FDD_Qmin** : bit (3) > | ’000’B (-20 dB) |
| 0 \| 1 < **TDD_Qoffset** : bit (4) > | 0 |
| 0 \| 1 < **GPRS_3G_MEASUREMENT Parameters Description >** | 1 |
| < **Qsearch_P** : bit (4) > | ‘1111’B (Never) |
| < **3G_SEARCH_PRIO** : bit > | 0 |
| 0 \| 1 < **FDD_REP_QUANT** : bit > | 0 |
| 0 \| 1 < **FDD_REPORTING_OFFSET** : bit (3) > | 0 |
| 0 \| 1 < **TDD_MULTIRAT_REPORTING** : bit (2) > | 0 |
| 0 \| 1 < **TDD_REPORTING_OFFSET** : bit (3) > | 0 |

Cell 1:

The SS transmitted system information for Cell 1 shall be according to TS 34.108, clause 6.1.4 with the following exceptions:

The Inter-RAT Cell Info List of Cell 1 (UTRAN) refers to Cell 9 (GSM).

Step a-c:

| Parameter | Unit | Cell 9 (GSM) |
|---|---|---|
| Test Channel | | 1 |
| RF Signal Level | dBm | -66 |
| RXLEV_ACCESS_MIN | dBm | -100 |
| MS_TXPWR_MAX_CCH | dBm | Max. output power of UE |
| FDD_Qmin | dBm | -20 |
| FDD_Qoffset | dB | 4 |

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Test Channel | | 1 |
| CPICH_Ec (FDD) | dBm / 3.84 MHz | -74 |
| P-CCPCH_RSCP (TDD) | dBm | -74 |
| Qrxlevmin | dBm | -101 |
| Srxlev* | dB | 27 |
| S-search RAT | dB | +20 |

Step d:

| Parameter | Unit | Cell 9 (GSM) |
|---|---|---|
| RF Signal Level | dBm | -66 -> -85 (4 s) -> -66 |

Step f-g:

| Parameter | Unit | Cell 9 (GSM) |
|---|---|---|
| RF Signal Level | dBm | -66 -> -83 (4 s) -> -66 |

Step h-i:

| Parameter | Unit | Cell 9 (GSM) |
|---|---|---|
| RF Signal Level | dBm | -66 -> -83 |

Test procedure

NOTE: Step a-d): Test purpose 1.3. Step f-i): test purpose 1.1.

A combination of Method B and Method C is applied.

a) The SS activates Cell 9.

b) Void

c) Void.

d) Once the random access request is received on Cell 9, the SS starts paging the UE continuously on Cell 1, and changes the power level of cell 9 to -85 dBm for 4 s (RSCP will then exceed RLA_C value of Cell 9 by 11dB,

which is more than XXX_Qoffset+5dB) and then change back to -66 dBm and see if there is any random access request on cell 1 for 20 s. To avoid that the UE enters dedicated mode (performing the Location Update procedure) during this time, the SS rejects the random access received on Cell 9 with wait indication set to 30 s.

e) When the second random access request is received on Cell 9 (after 30 s), the SS stops paging and performs the Location Update procedure to register the UE on Cell 9.

f) The SS decreases the transmit level of Cell 9 to –83 dBm for a period of 4 s (RSCP will then exceed RLA_C value of Cell 9 by 9dB, which is more than XXX_Qoffset) and then changes the level back to –66 dBm.

g) The SS waits 20 s to see if there is any random access request from the UE on Cell 1.

h) The SS sets the transmit level of Cell 9 to –83 dBm.

i) The SS waits 20 s to see if there is any random access request from the UE on Cell 1. (The UE should revert to Cell 1 due to cell reselection).

j) The SS performs the Location Update procedure (or Routing Area Update procedure for UE that supports PS) to register the UE on Cell 1.

#### 6.2.2.3.5 Test Requirements

1) In stepd), there shall be no access on Cell 1.

2) In step g), there shall be no access on Cell 1.

3) In step i), the UE shall send random access on Cell 1.

### 6.2.2.4 Cell reselection in multi-mode shared network environment

#### 6.2.2.4.1 Definition

Test to verify that the UE performs cell reselection according to core specification 25.304 in multi-mode shared network environment (FDD). It is verified that the UE reselects from a shared UTRAN cell in case of a higher ranked GSM cell or if the serving UTRAN cell becomes unsuitable. It is also verified that the UE is able to return to a shared UTRAN cell in case of loss of GSM coverage.

#### 6.2.2.4.2 Conformance requirement

1. suitable cell:

   A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

   - The cell shall be part of either:
     - the selected PLMN, or:
     - the registered PLMN, or:
     - a PLMN of the Equivalent PLMN list

     according to the latest information provided by the NAS.
   - The cell is not barred, see subclause 5.3.1.1;
   - The cell is part of at least one LA that is not part of the list of "forbidden LAs for roaming" [9], which belongs to a PLMN that fulfills the first bullet above;
   - The cell selection criteria are fulfilled, see subclause 5.2.3.1.2.

     If the IE “Multiple PLMN List” [4] is broadcast in the cell, the cell is considered to be part of all LAs with LAIs constructed from the PLMN identities in the “Multiple PLMN List” and the LAC broadcast in the cell.

2. When camped on a cell, the UE shall regularly search for a better cell according to the cell reselection criteria. If a better cell is found, that cell is selected. The change of cell may imply a change of RAT.

3. When camped normally, the UE shall perform the following tasks:

   - select and monitor the indicated PICH and PCH of the cell as specified in clause 8 according to information sent in system information;

   - monitor relevant System Information. This is specified in [4];

   - perform necessary measurements for the cell reselection evaluation procedure;

   - execute the cell reselection evaluation process on the following occasions/triggers:

     1) UE internal triggers, so as to meet performance as specified in [10] and [11];

     2) When information on the BCCH used for the cell reselection evaluation procedure has been modified

4. Cell Reselection Criteria:

   4.1 If HCS is not used in the serving cell the UE shall perform ranking of all cells that fulfil the criterion S, among:

   - all measured cells (see subclause 5.2.6.1.1).

   4.2 The cells shall be ranked according to the R criteria, deriving Qmeas,n and Qmeas,s and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in TS 25.133 and TS 25.123 for FDD, TDD and GSM cells, respectively.

   The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$.

   …

   If the usage of HCS is indicated in system information, $TEMP_OFFSET1_n$ is used for $TEMP_OFFSET_n$ to calculate $TO_n$. If it is indicated in system information that HCS is not used, $TEMP_OFFSET_n$ is not applied when calculating $R_n$. The best ranked cell is the cell with the highest R value.

   …

   If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell.

   4.3 In all cases, the UE shall reselect the new cell, only if the the following conditions are met:

   - the new cell is better ranked than the serving cell during a time interval Treselection.

   …

   - more than 1 second has elapsed since the UE camped on the current serving cell.

5. Location Registration

   In the UE, the AS shall report registration area information to the NAS.

   If the UE reads more than one PLMN identity in the current cell, the UE shall report the found PLMN identities that make the cell suitable in the registration area information to NAS.

,References

1. TS 25.304, 4.3

2. TS 25.304, 5.2.1

3. TS 25.304, 5.2.5.1

4. TS 25.304, 5.2.6.1.4

5. TS 25.304, 5.5

6.2.2.4.3 Test purpose

1. To verify that the UE is able to reselect to a higher ranked cell (UTRAN->GSM) in multi-mode shared network environment.

3. To verify that the UE is able to reselect to a GSM cell when the serving shared network UTRAN cell becomes unsuitable (S<0).

4. To verify that the UE is able to return to a shared network UTRAN cell when coverage is lost while camping on a GSM cell.

6.2.2.4.4 Method of test

Initial conditions

The UE is equipped with a USIM containing default values. The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

Cell reselection parameters are set to default values, so the cell-ranking criterion R equals CPICH_RSCP / RF Signal Level.

The Inter-RAT Cell Info List of Cell 1 (UTRAN) refers to Cell 9 (GSM) and Cell 10 (GSM).

The 3G Neighbour Cell Description of Cell 9 (GSM) and Cell 10 (GSM) refers to Cell 1 (UTRAN)

Cell parameters are defined in the table below. Cell 9 and 10 are switched off.

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Test Channel | | 1 |
| PLMN | | PLMN 1 |
| LAC | | 0001 |
| CPICH_Ec (FDD) | dBm / 3.84 MHz | -60 |
| Qrxlevmin | dBm | -99 |
| Srxlev* | dB | 39 |
| S-search RAT | dB | Not sent |

| Parameter | Unit | Cell 9 (GSM) | Cell 10 (GSM) |
|---|---|---|---|
| Test Channel | | 1 | 2 |
| PLMN | | PLMN 1 | PLMN 1 |
| LAC | | 0009 | 0010 |
| RF Signal Level | dBm | -75 | -80 |
| RXLEV_ACCESS_MIN | dBm | -100 | -100 |
| C1* | dB | 25 | 20 |
| FDD_Qmin | dB | -20 | -20 |
| FDD_Qoffset | dBm | 0 | 0 |

The reference system configuration from TS34.108 clause 6.1 are used in all cells, with the following modifications:

Master Information Block

| | |
|---|---|
| - MIB value tag | Set to (Current MIB value tag + 1) |
| - Supported PLMN types | |
| - PLMN type | GSM-MAP |
| - PLMN identity | |
| - MCC digit | See table below |
| - MNC digit | See table below |
| - Multiple PLMN List | |
| - MIB PLMN Identity | See table below |
| - Multiple PLMNs (1) | |
| - MCC | See table below |
| - MNC | See table below |
| - Multiple PLMNs (2) | |

| | |
|---|---|
| - MCC | See table below |
| - MNC | See table below |

The MIB PLMN Identity and PLMN codes broadcasted on the BCCH in each cell shall be configured as defined in the table below.

| Cell | MIB PLMN Identity | PLMN Identity | | Multiple PLMNs (1) | | Multiple PLMNs (2) | |
|---|---|---|---|---|---|---|---|
| | | MCC digits | MNC digits | MCC digits | MNC digits | MCC digits | MNC digits |
| 1 | FALSE | PLMN 3 | PLMN 3 | - | PLMN 2 | - | PLMN 1 |

The definition of each PLMN code is found in table below.

| **PLMN** | **MCC digit** | | | **MNC digit** | | |
|---|---|---|---|---|---|---|
| | **1** | **2** | **3** | **1** | **2** | **3** |
| 1 | 0 | 0 | 1 | 0 | 1 | - |
| 2 | 0 | 0 | 1 | 0 | 2 | - |
| 3 | 0 | 0 | 1 | 0 | 3 | - |
| 4 | 0 | 0 | 2 | 0 | 1 | - |

NOTE: "–" (dash) denotes "not present"

Step e-h

| **Parameter** | **Unit** | **Cell 1 (UTRAN)** |
|---|---|---|
| CPICH_Ec | dBm / 3.84 MHz | -60 -> -85 |

Step i-k

| **Parameter** | **Unit** | **Cell 1 (UTRAN)** |
|---|---|---|
| CPICH_Ec | dBm / 3.84 MHz | -85 -> -60 |
| Qrxlevmin | dBm | -99 -> -65 |
| Srxlev* | dB | 6 |

Step k-m

| **Parameter** | **Unit** | **Cell 9 (GSM)** |
|---|---|---|
| PLMN | | PLMN 1 -> PLMN 4 |

Step l-m

| **Parameter** | **Unit** | **Cell 1 (UTRAN)** |
|---|---|---|
| CPICH_Ec | dBm / 3.84 MHz | -60 -> -70 |

## Test procedure

Method C is applied.

a) The UE is switched on.

b) The SS waits for random access requests from the UE. A complete Location Update is done. For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure.

c) The SS activates Cell 9 and Cell 10.

d) The SS waits for random access requests from the UE.

e) The SS changes the level of Cell 1.

f) The SS waits for random access requests from the UE.

g) Cell 9 and Cell 10 are switched off.

h) The SS waits for random access requests from the UE.

i) The UE is switched off. The SS modifies the level and Qrxlevmin of Cell 1.

j) The UE is switched on. A complete Location Update is done. For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure.

k) Cell 9 and Cell 10 are activated using new PLMN 4 in Cell 9.

l) The SS changes the level of Cell 1.

m) The SS waits for random access requests from the UE.

#### 6.2.2.4.5 Test requirements

1) In step b), the UE shall respond on Cell 1. The displayed PLMN shall be PLMN 1 (UTRAN).

2) In step d), the UE shall not respond on Cell 9 or Cell 10 for 1 min.

3) In step f), the UE shall respond on Cell 9. The displayed PLMN shall be PLMN 1 (GSM).

4) In step h), the UE shall respond on Cell 1. The displayed PLMN shall be PLMN 1 (UTRAN).

5) In step m), the UE shall respond on Cell 10. The displayed PLMN shall be PLMN 1 (GSM).

NOTE: The RAT requirements (within brackets) apply only if UE supports indication of RAT to the user.

### 6.2.2.5 Cell reselection using SIB18; UTRAN to GSM

#### 6.2.2.5.1 Definition

Test to verify that the UE performs cell reselection according to core specifications 25.331 and 25.304 in multi-mode environment (FDD) when SIB18 present. It is verified that the UE reselects from a UTRAN cell to the GSM cell allowed by SIB18, even if other GSM cells are better ranked.

#### 6.2.2.5.2 Conformance requirement

1. suitable cell:

   A "suitable cell" is a cell on whic the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

   - The cell shall be part of either:
     - the selected PLMN, or:
     - the registered PLMN, or:
     - a PLMN of the Equivalent PLMN list

     according to the latest information provided by the NAS.
   - The cell is not barred, see subclause 5.3.1.1;
   - The cell is part of at least one LA that is not part of the list of "forbidden LAs for roaming" [9], which belongs to a PLMN that fulfills the first bullet above;

- The cell selection criteria are fulfilled, see subclause 5.2.3.1.2.

  If the IE “Multiple PLMN List” [4] is broadcast in the cell, the cell is considered to be part of all LAs with LAIs constructed from the PLMN identities in the “Multiple PLMN List” and the LAC broadcast in the cell.

2. When camped on a cell, the UE shall regularly search for a better cell according to the cell reselection criteria. If a better cell is found, that cell is selected. The change of cell may imply a change of RAT.

3. When camped normally, the UE shall perform the following tasks:

   - select and monitor the indicated PICH and PCH of the cell as specified in clause 8 according to information sent in system information;

   - monitor relevant System Information. This is specified in [4];

   - perform necessary measurements for the cell reselection evaluation procedure;

   - execute the cell reselection evaluation process on the following occasions/triggers:

     1) UE internal triggers, so as to meet performance as specified in [10] and [11];

     2) When information on the BCCH used for the cell reselection evaluation procedure has been modified

4. Cell Reselection Criteria:

   4.1 If HCS is not used in the serving cell the UE shall perform ranking of all cells that fulfil the criterion S, among:

   - all measured cells (see subclause 5.2.6.1.1).

   4.2 The cells shall be ranked according to the R criteria, deriving Qmeas,n and Qmeas,s and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in TS 25.133 and TS 25.123 for FDD, TDD and GSM cells, respectively.

   The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$.

   …

   If the usage of HCS is indicated in system information, $TEMP_OFFSET1_n$ is used for $TEMP_OFFSET_n$ to calculate $TO_n$. If it is indicated in system information that HCS is not used, $TEMP_OFFSET_n$ is not applied when calculating $R_n$. The best ranked cell is the cell with the highest R value.

   …

   If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell.

   4.3 In all cases, the UE shall reselect the new cell, only if the the following conditions are met:

   - the new cell is better ranked than the serving cell during a time interval Treselection.

   …

   - more than 1 second has elapsed since the UE camped on the current serving cell.

5. Location Registration

   In the UE, the AS shall report registration area information to the NAS.

   If the UE reads more than one PLMN identity in the current cell, the UE shall report the found PLMN identities that make the cell suitable in the registration area information to NAS.

6. If the System Information Block type 18 is present, a UE shall obtain knowledge of the PLMN identity of the neighbour cells to be considered for cell reselection, and shall behave as specified in this subclause and in subclause 8.5.14a.

The UE should store all the relevant IEs included in this system information block.

A UE in idle mode shall act according to the following rules:

1> any PLMN list of a given type (IEs "PLMNs of intra-frequency cells list", "PLMNs of inter-frequency cells list", "PLMNs of inter-RAT cell lists") included in the IE "Idle mode PLMN identities" is paired with the list of cells of the same type derived from System Information Block type 11;

1> the PLMN identity located at a given rank in the PLMN list is that of the cell with the same ranking in the paired list of cells, the cells being considered in the increasing order of their associated identities ("Intra-frequency cell id", "Inter-frequency cell id", "Inter-RAT cell id");

1> if no identity is indicated for the first PLMN in a list, the UE shall assume that the neighbouring cell broadcasts the same PLMN configuration (i.e. IE "PLMN Identity" and IE "Multiple PLMN List") as the current cell;

1> if no identity is indicated for another entry in the list, the UE shall assume that the neighbouring cell broadcasts the same PLMN configuration (i.e. IE "PLMN Identity" and IE "Multiple PLMN List") as the previous cell in the list;

1> if the number of identities in a PLMN list exceeds the number of neighbour cells in the paired list (if any), the extra PLMN identities are considered as unnecessary and ignored;

1> if the number of identities in a PLMN list (if any) is lower than the number of neighbour cells in the paired list, the missing PLMN identities are replaced by the PLMN configuration for the last cell in the list.

7. Neighbour cells list narrowing for cell reselection

While a UE is camping on a suitable cell, a UE having performed the PLMN identification of the neighbour cells as specified in subclause 8.1.1.6.18 shall narrow the cell list to be used for cell reselection ([4]) to those neighbour cells for which:

The PLMN identity is part of the PLMNs that can make a cell suitable as defined in [4].

,References

1. TS 25.304, 4.3
2. TS 25.304, 5.2.1
3. TS 25.304, 5.2.5.1
4. TS 25.304, 5.2.6.1.4
5. TS 25.304, 5.5
6. TS 25.331, 8.1.1.6.18
7. TS 25.331, 8.5.14

#### 6.2.2.5.3 Test purpose

To verify that the UE is able to read the information broadcasted in SIB18 and use the information for cell reselection according to core spec 25.331.

#### 6.2.2.5.4 Method of test

Initial conditions

The UE is equipped with a USIM containing default values.

Cell reselection parameters are set to default values, so the cell-ranking criterion R equals CPICH_RSCP / RF Signal Level.

The Inter-RAT Cell Info List of Cell 1 (UTRAN) refers to Cell 9 (GSM) and Cell 10 (GSM).

The 3G Neighbour Cell Description of Cell 9 (GSM) and Cell 10 (GSM) refers to Cell 1 (UTRAN)

Cell parameters are defined in the table below. Cell 9 and 10 are switched off.

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Test Channel | | 1 |
| PLMN | | PLMN 1 |
| LAC | | 0001 |
| CPICH_Ec (FDD) | dBm / 3.84 MHz | -60 |
| Qrxlevmin | dBm | -99 |
| Srxlev* | dB | 39 |
| S-search RAT | dB | Not sent |

| Parameter | Unit | Cell 9 (GSM) | Cell 10 (GSM) |
|---|---|---|---|
| Test Channel | | 1 | 2 |
| PLMN | | PLMN 1 | PLMN 1 |
| LAC | | 0009 | 0010 |
| RF Signal Level | dBm | -70 | -80 |
| RXLEV_ACCESS_MIN | dBm | -100 | -100 |
| C1* | dB | 30 | 20 |
| FDD_Qmin | dB | -20 | -20 |
| FDD_Qoffset | dBm | 0 | 0 |

The reference system configuration from TS34.108 clause 6.1 are used in all cells, with the following modifications:

SYSTEM INFORMATION BLOCK TYPE18

| | |
|---|---|
| - Idle mode PLMN identities | |
| - PLMNs of intra-frequency cells list | Not present |
| - PLMNs of inter-frequency cells list | Not present |
| - PLMNs of inter-RAT cells list | |
| - PLMN identity (1) | PLMN2 |
| - PLMN identity (2) | PLMN1 |
| - Connected mode PLMN identities | Not present |

Step e-f

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| CPICH_Ec | dBm / 3.84 MHz | -60 -> -85 |
| Srxlev* | dB | 39 ->14 |

## Test procedure

Method C is applied.

a) The UE is switched on.

b) The SS waits for random access requests from the UE. A complete Location Update is done. For UE that supports both CS and PS domain or PS domain only, the Location Updating procedure could be replaced by the appropriate GMM registration procedure.

c) The SS activates Cell 9 and Cell 10.

d) The SS checks during 1 minute for random access requests from the UE.

e) The SS changes the level of Cell 1.

f) The SS waits for random access requests from the UE.

#### 6.2.2.5.5 Test requirements

1) In step b), the UE shall respond on Cell 1
2) In step d), the UE shall not respond on Cell 9 or Cell 10.
3) In step f), the UE shall respond on Cell 10.

# 7 Layer 2

## 7.1 MAC

General

If not otherwise mentioned, the same procedures as used in RRC test specification (TS 34.123-1 clause 8) or in the generic setup procedures (TS 34.108 clause 7) applies to reach initial conditions for MAC testing.

If not explicitly described, the same message contents and settings are applied as described in the RRC test description default settings.

In some MAC test cases, which are explicitly mentioned, the RLC in the system simulator is operated in Transparent Mode (RLC TM) for the tested channel. Accordingly, no RLC header will be added by the RLC entity. Also, there is no header included by the MAC protocol. in the system simulator. The UE, however, shall always be configured as specified in TS 34.108 for the respective test case.

Where RLC TM is used, the payload size in the system simulator is set to the value, that corresponds to the transport block size expected by the UE for the respective configuration. The bit positions which are interpreted as RLC and MAC headers by the UE, are included into the RLC payload by the system simulator.

For test cases where AM RLC is employed in either UE, SS, or both, the default parameter settings as defined in clause 7.2.3.1 are applicable if not mentioned otherwise.

### 7.1.1 Mapping between logical channels and transport channels

#### 7.1.1.1 CCCH mapped to RACH/FACH / Invalid TCTF


##### 7.1.1.1.1 Definition

This tests that the MAC applies the correct header to the MAC PDU according to the type of logical channel carried on the RACH/FACH transport channel. Incorrect application of MAC headers would result in inoperation of the UE.

##### 7.1.1.1.2 Conformance requirement

CCCH mapped to RACH/FACH:

- TCTF field is included in MAC header.




The following fields are defined for the MAC header:

- Target Channel Type Field
  …

**Coding of the Target Channel Type Field on FACH for FDD**

| TCTF | Designation |
|---|---|
| 00 | BCCH |
| 01000000 | CCCH |
| 01000001-01111111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |
| 10000000 | CTCH |
| 10000001-10111111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |
| 11 | DCCH or DTCH over FACH |

**Coding of the Target Channel Type Field on FACH for TDD**

| TCTF | Designation |
|---|---|
| 000 | BCCH |
| 001 | CCCH |
| 010 | CTCH |
| 01100 | DCCH or DTCH over FACH |
| 01101-01111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |
| 100 | SHCCH |
| 101-111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |

Reference(s)

TS 25.321 clauses 9.2.1 and 9.2.1.4.

7.1.1.1.3 Test purpose

1. To verify that the UE discards PDUs with reserved or incorrect values in the TCTF field.
2. To verify that the TCTF field is correctly applied when a CCCH is mapped to the RACH/FACH.

7.1.1.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

The SCCPCH is configured as specified in TS 34.108 clause 6.10.2.4.3.3 (FDD) , 6.11.5.4.4.3(1.28Mcps TDD) (Interactive/Background 32 kbps RAB + SRB for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH) with the following exceptions for the FACH:

FDD:

| | | | |
|---|---|---|---|
| Higher layer | RAB/signalling RB | | SRB#0 |
| | User of Radio Bearer | | Test |
| RLC | Logical channel type | | CCCH |
| | RLC mode | | TM |
| | Payload sizes, bit | | 168 |
| | Max data rate, bps | | 33600 (alt. 50400) |
| | RLC header, bit | | 0 |
| MAC | MAC header, bit | | 0 (note) |
| | MAC multiplexing | | Simulated by SS |
| Layer 1 | TrCH type | | FACH |
| | TB sizes, bit | | 168 |
| | TFS | TF0, bits | 0 x 168 |
| | | TF1, bits | 1 x 168 |
| | | TF2, bits | 2 x 168 |
| | | TF3, bits | N/A (alt. 3 x 168) |
| | TTI, ms | | 10 |
| | Coding type | | CC 1/2 |
| | CRC, bit | | 16 |
| | Max number of bits/TTI before rate matching | | 752 (alt. 1136) |
| | RM attribute | | 200-240 |
| NOTE: | The SS MAC layer must be configured not to add a MAC header so that the header can be added by the test case in order to create the necessary invalid values. | | |

TDD:

| | | | |
|---|---|---|---|
| Higher layer | RAB/signalling RB | | SRB#0 |
| | User of Radio Bearer | | Test |
| RLC | Logical channel type | | CCCH |
| | RLC mode | | TM |
| | Payload sizes, bit | | 171 |
| | Max data rate, bps | | 33600 (alt. 50400) |
| | RLC header, bit | | 0 |
| MAC | MAC header, bit | | 0 (note) |
| | MAC multiplexing | | Simulated by SS |
| Layer 1 | TrCH type | | FACH |
| | TB sizes, bit | | 171 |
| | TFS | TF0, bits | 0 x 171 |
| | | TF1, bits | 1 x 171 |
| | | TF2, bits | 2 x 171 |
| | | TF3, bits | 3 x 171 |
| | | TF4, bits | 4x 171 |
| | | TF5, bits | N/A (alt. 5x 171) |
| | | TF6, bits | N/A (alt. 6 x 171) |
| | TTI, ms | | 20 |
| | Coding type | | CC 1/2 |
| | CRC, bit | | 16 |
| | Max number of bits/TTI before rate matching | | 1528 (alt. 2292) |
| | RM attribute | | 200-240 |
| NOTE: | The SS MAC layer must be configured not to add a MAC header so that the header can be added by the test case in order to create the necessary invalid values. | | |

And using the configuration in TS 34.108 clause 6.10.2.4.3.3 (FDD), 6.11.5.4.4.3(1.28Mcps TDD) for the PCH.

The TFCS should be configured as specified in clause 6.10.2.4.3.3.1.4 (FDD), 6.11.5.4.4.3.1.4(1.28Mcps TDD).

User Equipment:

The UE shall operate under normal test conditions, Ciphering Off.

The Test-USIM shall be inserted.

The SS starts broadcasting the System Information as specified in TS 34.108 clause 6.1, using the configuration for the PRACH and SCCPCH (signalled in SYSTEM INFORMATION 5) as follows:

1. The SCCPCH is configured as specified in TS 34.108 clause 6.10.2.4.3.3 (FDD), 6.11.5.4.4.3(1.28Mcps TDD) (Interactive/Background 32 kbps RAB + SRB for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH).

2. The PRACH is configured as specified in TS 34.108 clause 6.10.2.4.4.1(FDD), 6.11.5.4.5.2(TDD).

The SS follows the procedure in TS 34.108 clause 7.2.2.1 (CS UE) or 7.2.2.2 (PS UE) so that the UE shall be in idle mode and registered.

Test procedure

a) The SS pages the UE.

b) The SS waits for the first RRC CONNECTION REQUEST message to arrive on the PRACH/CCCH.

c) The SS responds with an RRC CONNECTION SETUP message (specified in TS 34.108 cclause 9: Contents of RRC CONNECTION SETUP message: UM (Transition to CELL_FACH)(FDD), or UM (Transition to CELL_FACH) (1.28 Mcps TDD option). In this case the SS will transmit the message in 152 bit for FDD and 160 bits for TDD (note) segments, with a valid UM RLC header and with the MAC header set as follows:

FDD:

| Field | Value |
|---|---|
| TCTF | 01000001'B |

TDD:

| Field | Value |
|---|---|
| TCTF | 101'B |

d) The SS waits for retransmission of the RRC CONNECTION REQUEST on the PRACH/CCCH due to expiry of timer T300. If no retransmission is received steps a) and b) are repeated.

e) The SS repeats steps c) and d), with the TCTF field set as follows:

FDD:

| Iteration | TCTF Value |
|---|---|
| 2 | (void) |
| 3 | 10000000'B |
| 4 | 10000001'B |
| 5 | (void) |

TDD:

| Iteration | TCTF Value |
|---|---|
| 2 | 010'B |
| 3 | 01111'B |
| 4 | (void)' |
| 5 | (void) |
| 6 | (void) |

f) The SS repeats steps c) and d), with the TCTF field set as to 01000000'B(FDD), 001’B(TDD).

Expected sequence

FDD:

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE 1 | |
| 2 | → | | RRC CONNECTION REQUEST | |
| 3 | - | | Void | |
| 4 | - | | Void | |
| 5 | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 1)) | Sent with incorrect TCTF = 0100 0001'B |
| | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 2)) | Sent with incorrect TCTF = 0100 0001'B |
| | | | … | |
| | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT n)) | Sent with incorrect TCTF = 0100 0001'B |
| 6 | → | | RRC CONNECTION REQUEST | If this message is not received then the PAGING TYPE 1 message as in step 1 shall be sent again. |
| 7 | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 1)) | Sent with incorrect TCTF = 1000 0000'B |
| | ← | | MAC PDU(TCTF, UE-ID, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 2)) | Sent with incorrect TCTF = 1000 0000'B |
| | | | … | |
| | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT n)) | Sent with incorrect TCTF = 1000 0000'B |
| 8 | → | | RRC CONNECTION REQUEST | If this message is not received then the PAGING TYPE 1 message as in step 1 shall be sent again. |
| 9 | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 1)) | Sent with incorrect TCTF = 1000 0001'B |
| | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 2)) | Sent with incorrect TCTF = 1000 0001'B |
| | | | … | |
| | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT n)) | Sent with incorrect TCTF = 1000 0001'B |
| 10 | → | | RRC CONNECTION REQUEST | If this message is not received then the PAGING TYPE 1 message as in step 1 shall be sent again. |
| 11 | - | | Void | |
| 12 | - | | Void | |
| 13 | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 1)) | Sent with correct TCTF = 0100 0000'B |
| | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 2)) | Sent with correct TCTF = 0100 0000'B |
| | | | … | |
| | ← | | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT n)) | Sent with correct TCTF = 0100 0000'B |
| 14 | → | | RRC CONNECTION SETUP COMPLETE | TCTF Field is recognised as correct for the DCCH |

TDD:

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | PAGING TYPE 1 | |
| 2 | | → | RRC CONNECTION REQUEST | |
| 3 | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 1)) | Sent with incorrect TCTF = 101'B |
| | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 2)) | Sent with incorrect TCTF =101'B |
| | | | … | |
| | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT n)) | Sent with incorrect TCTF = 101'B |
| 4 | | → | RRC CONNECTION REQUEST | |
| 5 | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 1)) | Sent with incorrect TCTF = 010'B |
| | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 2)) | Sent with incorrect TCTF = 010'B |
| | | | … | |
| | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT n)) | Sent with incorrect TCTF = 010'B |
| 6 | | → | RRC CONNECTION REQUEST | |
| 7 | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 1)) | Sent with incorrect TCTF = 01111'B |
| | | ← | MAC PDU(TCTF, UE-ID, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 2)) | Sent with incorrect TCTF =01111'B |
| | | | … | |
| | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT n)) | Sent with incorrect TCTF = 01111'B |
| 8 | | → | RRC CONNECTION REQUEST | |
| 9 | | - | void | |
| | | - | void | |
| | | | … | |
| | | - | void | |
| 10 | | - | void | |
| 11 | | - | void | |
| | | - | void | |
| | | | … | |
| | | - | void | |
| 12 | | - | void | |
| 13 | | - | void | |
| | | - | void | |
| | | | … | |
| | | - | void | |
| 14 | | - | void | |
| 15 | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 1)) | Sent with correct TCTF = 001'B |
| | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT 2)) | Sent with correct TCTF = 001'B |
| | | | … | |
| | | ← | MAC PDU(TCTF, RLC UM PDU(SN, RRC CONNECTION SETUP SEGMENT n)) | Sent with correct TCTF = 001'B |
| 16 | | → | RRC CONNECTION SETUP COMPLETE | TCTF Field is recognised as correct for the CCCH |

Specific Message Contents

None.

7.1.1.1.5 Test Requirement

On the first iteration, and on each iteration in step e) the UE should not recognise the RRC CONNECTION SETUP message and therefore should either retransmit the RRC CONNECTION REQUEST after each expiry of T300 (the UE

should send up to N300=3 RRC CONNECTION REQUESTs before abandoning the procedure) or not respond (if N300 RRC CONNECTION REQUESTs have already been sent).

On the final iteration the UE should respond with an RRC CONNECTION SETUP COMPLETE message.

## 7.1.1.2 DTCH or DCCH mapped to RACH/FACH / Invalid TCTF

### 7.1.1.2.1 Definition

This tests that the MAC applies the correct header to the MAC PDU according to the type of logical channel carried on the RACH/FACH transport channel. Incorrect application of MAC headers would result in inoperation of the UE.

### 7.1.1.2.2 Conformance requirement

DTCH or DCCH mapped to RACH/FACH:

TCTF field, C/T field, UE-Id type field and UE-Id are included in the MAC header.

The following fields are defined for the MAC header:

- Target Channel Type Field
  …

**Coding of the Target Channel Type Field on FACH for FDD**

| TCTF | Designation |
|---|---|
| 00 | BCCH |
| 01000000 | CCCH |
| 01000001-01111111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |
| 10000000 | CTCH |
| 10000001-10111111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |
| 11 | DCCH or DTCH over FACH |

**Coding of the Target Channel Type Field on FACH for TDD**

| TCTF | Designation |
|---|---|
| 000 | BCCH |
| 001 | CCCH |
| 010 | CTCH |
| 01100 | DCCH or DTCH over FACH |
| 01101-01111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |
| 100 | SHCCH |
| 101-111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |

### Reference(s)

TS 25.321 clauses 9.2.1 and 9.2.1.1 c).

7.1.1.2.3 Test purpose

1. To verify that the UE discards PDUs with reserved or incorrect values in the TCTF field.
2. To verify that the TCTF field, C/T field, UE-Id type and UE-Id field are correctly applied when a DTCH or DCCH is mapped to the RACH/FACH.

7.1.1.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

The SCCPCH is configured as specified in TS 34.108 clause 6.10.2.4.3.3(FDD) and 6.11.5.4.4.3(1.28Mcps TDD) (Interactive/Background 32 kbps RAB + SRB for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH) with the following exceptions for the FACH:

FDD:

| | | | |
|---|---|---|---|
| Higher layer | RAB/signalling RB | | RB#3 (SRB#3) |
| | User of Radio Bearer | | Test |
| RLC | Logical channel type | | DCCH |
| | RLC mode | | TM |
| | Payload sizes, bit | | 168 |
| | Max data rate, bps | | 33600 (alt. 50400) |
| | RLC header, bit | | 0 |
| MAC | MAC header, bit | | 0 (note) |
| | MAC multiplexing | | Simulated by SS |
| Layer 1 | TrCH type | | FACH |
| | TB sizes, bit | | 168 |
| | TFS | TF0, bits | 0 x 168 |
| | | TF1, bits | 1 x 168 |
| | | TF2, bits | 2 x 168 |
| | | TF3, bits | N/A (alt. 3 x 168) |
| | TTI, ms | | 10 |
| | Coding type | | CC ½ |
| | CRC, bit | | 16 |
| | Max number of bits/TTI before rate matching | | 752 (alt. 1136) |
| | RM attribute | | 200-240 |
| NOTE: | The SS MAC layer must be configured not to add a MAC header so that the header can be added by the test case in order to create the necessary invalid values. | | |

TDD:

| | | |
|---|---|---|
| Higher layer | RAB/signalling RB | RB#3 (SRB#3) |
| | User of Radio Bearer | Test |
| RLC | Logical channel type | DCCH |
| | RLC mode | TM |
| | Payload sizes, bit | 171 |
| | Max data rate, bps | 33600 (alt. 50400) |

| | | | |
|---|---|---|---|
| | RLC header, bit | | 0 |
| MAC | MAC header, bit | | 0 (note) |
| | MAC multiplexing | | Simulated by SS |
| Layer 1 | TrCH type | | FACH |
| | TB sizes, bit | | 171 |
| | TFS | TF0, bits | 0 x 171 |
| | | TF1, bits | 1 x 171 |
| | | TF2, bits | 2 x 171 |
| | | TF3, bits | 3 x 171 |
| | | TF4, bits | 4x 171 |
| | | TF5, bits | N/A (alt. 5x 171) |
| | | TF6, bits | N/A (alt. 6 x 171) |
| | TTI, ms | | 20 |
| | Coding type | | CC 1/2 |
| | CRC, bit | | 16 |
| | Max number of bits/TTI before rate matching | | 1528 (alt. 2292) |
| | RM attribute | | 200-240 |
| NOTE: | The SS MAC layer must be configured not to add a MAC header so that the header can be added by the test case in order to create the necessary invalid values. | | |

and using the configuration in TS 34.108 clause 6.10.2.4.3.3 (FDD), 6.11.5.4.4.3(1.28Mcps TDD) for the PCH.

The TFCS should be configured as specified in clause 6.10.2.4.3.3.1.4 (FDD), 6.11.5.4.4.3.1.4(1.28Mcps TDD).

User Equipment:

The UE shall operate under normal test conditions, Ciphering Off.

The Test-USIM shall be inserted.

The SS starts broadcasting the System Information as specified in TS 34.108 clause 6.1, using the configuration for the PRACH and SCCPCH (signalled in SYSTEM INFORMATION 5) as follows:

1. The SCCPCH is configured as specified in TS 34.108 clause 6.10.2.4.3.3 (FDD), 6.11.5.4.4.3(1.28Mcps TDD) (Interactive/Background 32 kbps RAB + SRB for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH).

2. The PRACH is configured as specified in TS 34.108 clause 6.10.2.4.4.1 (FDD), 6.11.5.4.5.2(1.28Mcps TDD).

The SS follows the procedure in TS 34.108 clause 7.4.2.1 (Mobile Terminated) so that the UE shall be in state BGP 6-2 (CS-CELL_FACH_INITIAL) or 6-4 PS-CELL_FACH_INITIAL.

Test procedure

a) The SS receives the PAGING RESPONSE or SERVICE REQUEST (depending on domain) message from the UE and checks the TCTF field.

b) The SS transmits MAC PDUs containing RLC AM PDUs containing a DIRECT TRANSFER message containing an AUTHENTICATION REQUEST message.

   1. Dummy octet string for NAS Message, of size sufficient enough to fit in one RLC PDU of 144 bits, including the correct RLC AM header.

   2. The IE CN Domain Identity is Set to PS Domain ( if UE initial state is 6-2) or CS Domain (if UE initial state is 6-4) (no signalling connection for this domain exists).

   3. The polling bit in RLC header is set for transmission of RLC STATUS PDU.

The MAC header shall be set as follows:

| Field | Value |
|---|---|
| TCTF | 01000001'B(FDD), 101(TDD) |
| UE ID Type | C-RNTI |
| UE ID | As set in RRC CONNECTION SETUP message. |
| C/T | Logical Channel ID for SRB #3 (AM-DCCH NAS High Priority) |

Where a TCTF size of 8-bits is used, 6-bits from the RLC payload shall be discarded.

c) The SS checks that UE shall neither transmit RRC Status message on SRB2 nor RLC Status PDU on SRB3.

d) The SS again transmits MAC PDUs as in b) above, but this time uses the correct TCTF of 11'B for FDD, 01100'B for TDD. The sequence numbers in the RLC headers shall be identical with those sent in b).

e) SS Receives RLC Status PDU on SRB #3 acknowledging the receipt of the above RLC PDU.

f) The SS receives a RRC STATUS message on the uplink DCCH using AM RLC on SRB # 2.

g) The SS repeats steps b), c), d) e) and f), with the TCTF field set as follows in step b):

FDD:

| Iteration | TCTF Value |
|---|---|
| 2 | 01111111'B |
| 3 | 10000000'B |
| 4 | 10000001'B |
| 5 | 10111111'B |

TDD:

| Iteration | TCTF Value |
|---|---|
| 2 | 110'B |
| 3 | 010'B |
| 4 | 01111'B |
| 5 | 01101'B |

Expected sequence

FDD:

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | PAGING RESPONSE/SERVICE REQUEST | Check TCTF |
| 2 | ← | | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with incorrect TCTF = 01000001'B, 01111111'B, 10000000'B, 10000001'B, or 10111111'B |
| 2a | | | wait for T = 3 s | SS checks that UE shall neither transmit RRC-Status message on SRB 2 nor RLC Status PDU on SRB 3<br>See note 1 below |
| 3 | ← | | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with correct TCTF = 11'B |
| 4 | → | | RLC-STATUS-PDU | ACK PDUs with SN = x and TCTF Field is recognised as correct for the DCCH.<br>See note 2 below |
| 5 | → | | RRC Status message | |
| NOTE 1: UE will Transmit Signalling Connection Release Indication on expiry of MM Timer T3240 or GMM Timer T3317.<br>NOTE 2: RRC Status message may be received before RLC Status PDU. | | | | |

TDD:

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | PAGING RESPONSE | Check TCTF |
| 2 | ← | | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with incorrect TCTF = 101'B, 110'B, 010'B, 01111'B, or 01101'B |
| 2 | ← | | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with incorrect TCTF = 010101'B, 110'B, 010'B, 01111'B, or 01101'B |
| 2a | | | wait for T = 3 s | SS checks that UE shall neither transmit RRC-Status message on SRB 2 nor RLC Status PDU on SRB 3<br>See note 1 below |
| 3 | ← | | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with correct TCTF = 01100'B |
| 4 | → | | RLC-STATUS-PDU | ACK PDUs with SN = x and TCTF Field is recognised as correct for the DCCH.<br>See note 2 below |
| 5 | → | | RRC Status message | |
| NOTE 1: UE will Transmit Signalling Connection Release Indication on expiry of MM Timer T3240 or GMM Timer T3317.<br>NOTE 2: RRC Status message may be received before RLC Status PDU. | | | | |

Steps 2 – 5 of above expected sequence are repeated for iterations 2 to 5. Note: For iteration k the SN in steps 2 and 4 starts with x + (k –1).

Specific Message Contents

None

#### 7.1.1.2.5 Test Requirement

In step a) the TCTF field should have the value '01'B. Note that this may be implied from receipt of the PAGING RESPONSE/SERVICE REQUEST message correctly by the SS test script.

During the test the SS shall request an RLC status report with every transmitted PDU by setting of the Polling Bit. The UE shall not send any STATUS PDUs indicating missing PDUs.

At the end of each iteration (steps 4 and 5 of expected sequence) the SS shall receive an RRC Status message on SRB # 2, and RLC Status PDU on SRB # 3 with TCTF field set to value '01' B for FDD, '0100' B for TDD.

### 7.1.1.3 DTCH or DCCH mapped to RACH/FACH / Invalid C/T Field

#### 7.1.1.3.1 Definition

This tests that the MAC applies the correct header to the MAC PDU according to the type of logical channel carried on the RACH/FACH transport channel. Incorrect application of MAC headers would result in inoperation of the UE.

#### 7.1.1.3.2 Conformance requirement

DTCH or DCCH mapped to RACH/FACH:

TCTF field, C/T field, UE-Id type field and UE-Id are included in the MAC header.

The following fields are defined for the MAC header:

- C/T field
  The C/T field provides identification of the logical channel instance when multiple logical channels are carried on the same transport channel…

**Structure of the C/T field**

| C/T field | Designation |
|---|---|
| 0000 | Logical channel 1 |
| 0001 | Logical channel 2 |
| ... | ... |
| 1110 | Logical channel 15 |
| 1111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |

Reference(s)

TS 25.321 clauses 9.2.1 and 9.2.1.1 c).

7.1.1.3.3 Test purpose

1. To verify that the UE discards PDUs with reserved or incorrect values in C/T field.
2. To verify that the TCTF field, C/T field, UE-Id type and UE-Id field are correctly applied when a DTCH or DCCH is mapped to the RACH/FACH.

7.1.1.3.4 Method of test

Initial conditions

System Simulator:

See clause 7.1.1.2.4.

User Equipment:

See clause 7.1.1.2.4.

Test procedure

a) The SS receives the PAGING RESPONSE message from the UE and checks the C/T field.

b) The SS transmits MAC PDUs containing RLC AM PDUs containing a DIRECT TRANSFER message containing.

1. Dummy octet string for NAS Message, of size sufficient enough to fit in one RLC PDU of 144 bits, including the correct RLC AM header.
2. The IE CN Domain Identity is Set to PS Domain (no signalling connection for this domain exists).
3. The polling bit in RLC header is set for Transmission of RLC STATUS PDU.

The MAC header shall be set as follows:

| Field | Value |
|---|---|
| TCTF | 11'B |
| UE ID Type | C-RNTI |
| UE ID | As set in RRC CONNECTION SETUP message. |
| C/T | 0111'B |

c) The SS checks that UE shall neither transmit RRC Status message on SRB2 nor RLC Status PDU on.

d) The SS again transmits MAC PDUs as in b) above, but this time uses the correct C/T value for AM-DCCH NAS High Priority of 0010'B. The sequence numbers in the RLC headers shall be identical with those sent in b).

e) SS receives RLC Status PDU on SRB #3 acknowledging the receipt of the above RLC PDU.

f) The SS receives a RRC STATUS message on the uplink DCCH using AM RLC on SRB # 2.

g) The SS repeats steps b), c), d), e) and f), with the C/T field set as follows:

| Iteration | C/T Value |
|---|---|
| 2 | 1111'B |

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | → | PAGING RESPONSE | Check C/T field |
| 2 | | ← | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with incorrect C/T = 0111'B, or 1111'B. |
| 2a | | | wait for T = 5 s | SS checks that UE shall neither transmit RRC-Status message on SRB 2 nor RLC Status PDU on SRB 3.<br>See note 1 below. |
| 3 | | ← | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with correct C/T = 0010'B |
| 4 | | → | RLC-STATUS-PDU | ACK PDUs with SN = x<br>C/T Field is recognised as correct for the DCCH.<br>See note 2 below. |
| 5 | | → | RRC Status message | |
| NOTE 1: UE will Transmit Signalling Connection Release Indication on expiry of MM Timer T3240 or GMM Timer T3317.<br>NOTE 2: RRC Status message may be received before RLC Status PDU. | | | | |

Steps 2 to 5 of the expected sequence are repeated for iteration 2. Note: For iteration k the SN in steps 2 and 4 starts with x + (k –1).

Specific Message Contents

None

#### 7.1.1.3.5 Test Requirement

In step a) the C/T field should be set to the Logical Channel ID for SRB #3 (0010'B). Note that this may be implied from receipt of the PAGING RESPONSE message correctly by the SS test script.

During the test the SS shall request RLC status report with every transmitted PDU by setting of the Polling Bit. The UE shall not send any STATUS PDUs indicating missing PDUs.

At the end of each iteration (steps 4 and 5 of expected sequence) the SS shall receive a RLC Status PDU on SRB # 3, with C/T field set to value '0010'B and RRC Status message on SRB # 2.

### 7.1.1.4 DTCH or DCCH mapped to RACH/FACH / Invalid UE ID Type Field

#### 7.1.1.4.1 Definition

This tests that the MAC applies the correct header to the MAC PDU according to the type of logical channel carried on the RACH/FACH transport channel. Incorrect application of MAC headers would result in inoperation of the UE.

#### 7.1.1.4.2 Conformance requirement

DTCH or DCCH mapped to RACH/FACH:

TCTF field, C/T field, UE-Id type field and UE-Id are included in the MAC header.

The following fields are defined for the MAC header:

- UE-Id Type
  The UE-Id Type field is needed to ensure correct decoding of the UE-Id field in MAC Headers.

**Table 9.2.1.7: UE-Id Type field definition**

| UE-Id Type field 2 bits | UE-Id Type |
|---|---|
| 00 | U-RNTI |
| 01 | C-RNTI |
| 10 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |
| 11 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |

Reference(s)

TS 25.321 clauses 9.2.1 and 9.2.1.1 c).

7.1.1.4.3 Test purpose

1. To verify that the UE discards PDUs with reserved values in UE-Id type field.
2. To verify that the TCTF field, C/T field, UE-Id type and UE-Id field are correctly applied when a DTCH or DCCH is mapped to the RACH/FACH.

7.1.1.4.4 Method of test

Initial conditions

System Simulator:

See clause 7.1.1.2.4.

User Equipment:

See clause 7.1.1.2.4.

Test procedure

a) The SS receives the PAGING RESPONSE message from the UE and checks the UE-Id Type field.

b) The SS transmits MAC PDUs containing RLC AM PDUs containing a DIRECT TRANSFER message containing.

1. Dummy octet string for NAS Message, of size sufficient enough to fit in one RLC PDU of 144 bits, including the correct RLC AM header.
2. The IE CN Domain Identity is Set to PS Domain (no signalling connection for this domain exists)
3. The polling bit in RLC header is set for transmission of RLC STATUS PDU.

The MAC header shall be set as follows:

| Field | Value |
|---|---|
| TCTF | 11'B |
| UE ID Type | 10'B |
| UE ID | As set in RRC CONNECTION SETUP message. |
| C/T | Logical Channel ID for SRB #3 (AM-DCCH NAS High Priority): 0010'B |

c) The SS checks that UE shall neither transmit RRC Status message on SRB2 nor RLC Status PDU on SRB3.

d) The SS again transmits MAC PDUs as in b) above, but this time uses the correct UE-Id type value for C-RNTI of 01'B. The sequence numbers in the RLC headers shall be identical with those sent in b).

e) SS Receives RLC Status PDU on SRB #3 acknowledging the receipt of the above RLC PDU.

f) The SS receives a RRC STATUS message on the uplink DCCH using AM RLC on SRB # 2

g) The SS repeats steps b), c), d), e) and f), with the UE-Id type field set as follows in step b):

| Iteration | UE-Id type Value |
|---|---|
| 2 | 11'B |

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | PAGING RESPONSE | Check UE-Id Type |
| 2 | ← | | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with incorrect UE-Id Type = 10'B, or 11'B. |
| 2a | | | wait for T = 5 s | SS checks that UE shall neither transmit RRC-Status message on SRB 2 nor RLC Status PDU on SRB 3. See note 1 below. |
| 3 | ← | | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with correct UE-Id Type = 01'B |
| 4 | → | | RLC-STATUS-PDU | ACK PDU with SN = x<br>UE-Id is recognised as correct for the UE.<br>See note 2 below. |
| 5 | → | | RRC Status message | RRC |
| NOTE 1: UE will Transmit Signalling Connection Release Indication on expiry of MM Timer T3240 or GMM Timer T3317.<br>NOTE 2: RRC Status message may be received before RLC Status PDU. | | | | |

Steps 2 to 5 of the expected sequence are repeated for iteration 2. Note: For iteration k the SN in step 2 and 4 starts with x + (k –1).

Specific Message Contents

None

#### 7.1.1.4.5 Test Requirement

In step a) the UE-Id Type field should be set to 01'B. Note that this may be implied from receipt of the PAGING RESPONSE message correctly by the SS test script.

During the test the SS request an RLC status report with every transmitted PDU by setting of the Polling Bit. The UE shall not send any STATUS PDUs indicating missing PDUs.

At the end of each iteration (steps 4 and 5 of expected sequence) the SS shall receive a RLC Status PDU on SRB # 3, with UE Id type correctly set to '01'B and RRC Status message on SRB # 2.

### 7.1.1.5 DTCH or DCCH mapped to RACH/FACH / Incorrect UE ID

#### 7.1.1.5.1 Definition

This tests that the MAC applies the correct header to the MAC PDU according to the type of logical channel carried on the RACH/FACH transport channel. Incorrect application of MAC headers would result in inoperation of the UE.

#### 7.1.1.5.2 Conformance requirement

DTCH or DCCH mapped to RACH/FACH:

TCTF field, C/T field, UE-Id type field and UE-Id are included in the MAC header.

The following fields are defined for the MAC header:

- UE-Id
  The UE-Id field provides an identifier of the UE on common transport channels…

**Lengths of UE Id field**

| UE Id type | Length of UE Id field |
|---|---|
| U-RNTI | 32 bits |
| C-RNTI | 16 bits |

Reference(s)

TS 25.321 clauses 9.2.1 and 9.2.1.1 c).

7.1.1.5.3 Test purpose

1. To verify that the UE ignores PDUs with UE-Ids that do not match the Id allocated to it.
2. To verify that the TCTF field, C/T field, UE-Id type and UE-Id field are correctly applied when a DTCH or DCCH is mapped to the RACH/FACH.

7.1.1.5.4 Method of test

Initial conditions

System Simulator:

See clause 7.1.1.2.4.

User Equipment:

See clause 7.1.1.2.4.

Test procedure

a) The SS receives the PAGING RESPONSE message from the UE and checks the UE-Id field.

b) The SS transmits MAC PDUs containing RLC AM PDUs containing a DIRECT TRANSFER message containing.

1. Dummy Octet String for NAS Message, of size sufficient enough to fit in one RLC PDU of 144 bits, including the correct RLC AM header.
2. The IE CN Domain Identity is Sset to PS Domain (no signalling connection for this domain exists)
3. The polling bit in RLC header is set for transmission of RLC STATUS PDU.

The MAC header shall be set as follows:

| Field | Value |
|---|---|
| TCTF | 11'B |
| UE ID Type | C-RNTI |
| UE ID | Address allocated in RRC CONNECTION SETUP message + 1. |
| C/T | Logical Channel ID for SRB #3 (AM-DCCH NAS High Priority): 0010'B |

c) The SS checks that UE shall neither transmit RRC Status message on SRB2 nor RLC Status PDU on SRB3.

d) The SS again transmits MAC PDUs as in b) above, but this time uses the correct UE-Id value of the address allocated in the RRC CONNECTION SETUP message. The sequence numbers in the RLC headers shall be identical with those sent in b).

e) SS Receives RLC Status PDU on SRB #3 acknowledging the receipt of the above RLC PDU

f) The SS receives a RRC STATUS message on the uplink DCCH using AM RLC on SRB # 2.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | PAGING RESPONSE | Check UE-Id |
| 2 | ← | | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with incorrect UE-Id = C-RNTI+1 |
| 2a | | | wait for T = 10 s | SS checks that UE shall neither transmit RRC-Status message on SRB 2 nor RLC Status PDU on SRB 3.<br>See note 1 below. |
| 3 | ← | | MAC PDU(TCTF, UE-ID, C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with correct UE-Id = C-RNTI |
| 4 | → | | RLC-STATUS-PDU | ACK PDUs with SN = x<br>UE-Id is recognised as correct for the UE.<br>See note 2 below. |
| 5 | → | | RRC Status message | |
| NOTE 1: UE will Transmit Signalling Connection Release Indication on expiry of MM Timer T3240 or GMM Timer T3317.<br>NOTE 2: RRC Status message may be received before RLC Status PDU. | | | | |

Specific Message Contents

None

#### 7.1.1.5.5 Test Requirement

In step a) the UE-Id field should be set to the C-RNTI allocated in the RRC CONNECTION SETUP message. Note that this may be implied from receipt of the PAGING RESPONSE message correctly by the SS test script.

During the test the SS shall request an RLC status report with every transmitted PDU by setting of the Polling Bit. The UE shall not send any STATUS PDUs indicating missing PDUs.

At the end of the expected sequence (steps 4 and 5) the SS shall receive receive RLC Status PDU on SRB # 3 with correct C-RNTI and RRC Status message on SRB # 2.

### 7.1.1.6 DTCH or DCCH mapped to DSCH or USCH

#### 7.1.1.6.1 Definition and applicability

Applicable for if mode TDD only or FDD only is supported. In FDD applicable only to R99 and Rel-4 UEs.

#### 7.1.1.6.2 Conformance requirement

The TCTF field is included in the MAC header for TDD only. The UE-Id type and UE-Id are included in the MAC header for FDD only. The C/T field is included if multiplexing on MAC is applied.

Reference(s)

TS 25.321 clause 9.2.1.1.

#### 7.1.1.6.3 Test purpose

To verify when DTCH or DCCH is mapped to DSCH or USCH, the TCTF field is applied for TDD only, the UE-Id type and UE-Id are applied for FDD only. If multiplexing on MAC is applied, C/T field is included, otherwise, the C/T field is not included in the MAC header.

#### 7.1.1.6.4 Method of test

Initial conditions

System Simulator:

- 1 cell, default parameters. Ciphering Off.

User Equipment:

- The UE shall operate under normal test conditions, Ciphering Off.
- The Test-USIM shall be inserted.

The UE is in Connected mode and a connection is established as described in the TS 34.123-1, 7.3 PDCP testing, clause "Setup a UE originated PS session using IP Header compression in AM RLC (using Loop back test mode 1).

Related ICS/IXIT Statement(s)

TBD

Foreseen Final State of the UE

Test procedure

a) The SS sends a certain data block to the UE.

b) After having received the data block via configured mapped channels, the UE forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its MAC configuration to the SS.

c) The SS receives the returned data block and checks its MAC header whether the TCTF is applied for TDD only, or the UE-Id type and UE-Id are applied for FDD onlyand the C/T field shall not be applied.

d) The SS configures the RLC.

e) The SS starts a Radio Bearer Reconfiguration procedure to be connected in RLC transparent mode and configures the Radio Bearer for multiplexing.

f) The SS sends a certain data block to the UE.

g) After having received the data block via configured mapped channels, the UE forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its MAC configuration to the SS.

h) The SS receives the returned data block and check its MAC header whether the TCTF is applied for TDD only, or the UE-Id type and UE-Id are applied for FDD only and the C/T field is applied.

i) The SS reconfigures its RLC mode to be in AM.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DATA BLOCK | The SS sends one data block with MAC header, sets TCTF as "DCCH or DTCH over USCH or DSCH" for TDD only, or sets UE-Id type as "C-RNTI", and UE-Id as C-RNTI of UE for FDD only. |
| 2 | → | | LOOP BACK DATA BLOCK | SS receives the loop back data block from the Uplink RB and checks the MAC header. |
| 3 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |
| 4 | ← | | RADIO BEARER RECONFIGURE | Reconfigures the downlink and uplink radio bearer as multiplexing . |
| 5 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 6 | | | | SS sends CMAC_MAC_HEADER_REQ with disable_mac_header and CRLC_CONFIG_REQ with RLC mode as "Transparent mode". |
| 7 | ← | | DATA BLOCK | The SS sends one data block with MAC header, sets TCTF as "DCCH or DTCH over USCH or DSCH" for TDD only, or sets UE-Id type as "C-RNTI", and UE-Id as C-RNTI of UE for FDD only and C/T field is included. |
| 8 | → | | LOOP BACK DATA BLOCK | SS receives the loop back data block from the Uplink RB and checks the MAC header. |
| 9 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |

Specific Message Contents

RADIO BEARER SET UP:

| Information Element | Value/remark |
|---|---|
| RLC info<br>- RLC mode | <br>AM RLC |
| RB mapping info<br>-Downlink<br>- Number of logical channels<br>- Downlink transport channel type | <br><br>1<br>DSCH |
| -Uplink<br>- Number of logical channels<br>- Uplink transport channel type | <br>1<br>USCH |

RADIO BEARER RECONFIGURE:

| Information Element | Value/remark |
|---|---|
| RLC info<br>- RLC mode | <br>AM RLC |
| RB mapping info<br>-Downlink<br>- Number of logical channels<br>- Downlink transport channel type<br>-Uplink<br>- Number of logical channels<br>- Uplink transport channel type | <br><br>2<br>DSCH<br><br>2<br>USCH |

#### 7.1.1.6.5 Test requirements

TCTF field in the MAC header of loop back data block is "DTCH or DCCH over DSCH or USCH" for TDD only. The UE-ID type and UE-Id are applied in the MAC header for FDD only. If multiplexing on MAC is applied, C/T field is included, otherwise, C/T field is not included.

### 7.1.1.7 DTCH or DCCH mapped to CPCH

#### 7.1.1.7.1 Definition and applicability

All UEs which support CPCH.

#### 7.1.1.7.2 Conformance requirement

UE-Id type field and UE-Id are included in the MAC header. The C/T field is included in the MAC header if multiplexing on MAC is applied.

Reference(s)

TS 25.321 clauses 9.2.1.1 and 11.3.

TS 25.214 clause 6.2.

TS 25.211 clause 5.3.3.11.

#### 7.1.1.7.3 Test purpose

To verify when DTCH or DCCH mapped to CPCH, UE-Id type field and UE-Id are included in the MAC header. if multiplexing on MAC is applied, the C/T field is included in the MAC header, otherwise, C/T field is not included.

#### 7.1.1.7.4 Method of test

Initial conditions

System Simulator:

- 1 cell, default parameters, Ciphering Off.

User Equipment:

- The UE shall operate under normal test conditions, Ciphering Off.
- The Test-USIM shall be inserted.

The UE is in Connected mode and a connection is established as described in the TS 34.123-1, 7.3 PDCP testing, clause "Setup a UE originated PS session using IP Header compression in UM RLC (using Loop back test mode 1).

Related ICS/IXIT Statement(s)

TBD

Foreseen Final State of the UE

Test procedure

a) The SS sends SIBs 7, 8, and 9, sends CSICH information and waits 30 s.

b) The SS reconfigures its RLC mode to be in transparent mode RLC. Afterwards its sends a certain data block to the UE.

c) After having received the data block via configured mapped channels, the UE forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its MAC configuration to the SS.

d) The SS receives the returned data block and checks its MAC header, whether a UE-Id type and a UE-Id are included.

e) The SS reconfigures its RLC mode to be in AM.

f) The SS starts a Radio Bearer Reconfiguration procedure to be connected in RLC transparent mode and configures the Radio Bearer for multiplexing.

g) The SS sends the next data block via its MAC entity with MAC header, including the UE-Id type as "C-RNTI" and UE-Id as C-RNTI of the UE.C/T field.

h) After having received the data block via configured mapped channels, the UE forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its MAC configuration to the SS.

i) The SS receives the returned data block and checks its MAC header, whether UE-Id type, UE-Id field are included and C/T field is applied or not.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SIBs 7, 8 and 9 and CSICH information | Containing default settings for CPCH. |
| 2 | ← | | DATA BLOCK | The SS sends one data block with MAC header, sets UE-Id type as "C-RNTI", and UE-Id as C-RNTI of UE. |
| 3 | → | | LOOP BACK DATA BLOCK | SS receives the loop back data block from the Uplink RB and checks the MAC header. |
| 4 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |
| 5 | ← | | RADIO BEARER RECONFIGURE | Reconfigures the downlink and uplink radio bearer as multiplexing. |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 7 | | | | SS sends CMAC_MAC_HEADER_REQ with disable_mac_header and CRLC_CONFIG_REQ with RLC mode as "Transparent mode". |
| 8 | ← | | DATA BLOCK | The SS sends one data block with MAC header, sets UE-Id type as "C-RNTI", and UE-Id as C-RNTI of UE. |
| 9 | → | | LOOP BACK DATA BLOCK | SS receives the loop back data block from the Uplink RB and checks the MAC header. |
| 10 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |

Specific Message Contents

RADIO BEARER SET UP:

| Information Element | Value/remark |
|---|---|
| RLC info<br>- RLC mode | <br>AM RLC |
| RB mapping info<br>-Downlink<br>- Number of logical channels<br>- Downlink transport channel type | <br><br>1<br>FACH |
| -Uplink<br>- Number of logical channels<br>- Uplink transport channel type | <br>1<br>CPCH |

RADIO BEARER RECONFIGURE:

| Information Element | Value/remark |
|---|---|
| RLC info<br>- RLC mode | <br>AM RLC |
| RB mapping info<br>-Downlink<br>- Number of logical channels<br>- Downlink transport channel type<br>-Uplink<br>- Number of logical channels<br>- Uplink transport channel type | <br><br><br>2<br>FACH<br><br>2<br>CPCH |

PRACH persistence level info in System Information Block type 7

| Information Element | Value/Remark |
|---|---|
| PRACHs listed in SIB 5<br>- Dynamic persistence level<br><br>PRACHs listed in SIB 6<br>- Dynamic persistence level | <br>All set to 8, which maps to minimum persistence value, no access allowed<br><br>All set to 8, which maps to minimum persistence value, no access allowed |

CPCH parameters in System Information Block type 8

| Information Element | Value/Remark |
|---|---|
| Back off control parameters | |
| - $N_{ap_retrans_max}$ | 15 |
| - $N_{access_fails}$ | 15 |
| - $NF_{bo_no\ aich}$ | 15 |
| - $NS_{bo_busy}$ | 15 |
| - $NF_{bo_all_busy}$ | 15 |
| - $NF_{bo_mismatch}$ | 15 |
| - $T_{CPCH}$ | 0 |
| Power Control Algorithm | algorithm 1 |
| TPC step size | 1 |
| DL DPCCH BER | 15 |

CPCH set info in System Information Block type 8

| Information Element | Value/Remark |
|---|---|
| AP preamble scrambling code | 16 |
| AP-AICH channelisation code | 15 |
| CD preamble scrambling code | 17 |
| CD/CA-ICH channelisation code | 16 |
| DeltaPp-m | 0 |
| UL DPCCH Slot Format | 1 |
| N_start_message | 8 |
| CPCH status indication mode | PA mode |
| PCPCH Channel #1 info | |
| - UL scrambling code | 18 |
| - DL channelisation code | 15 |
| - PCP length | 8 |
| - UCSM info | |
| - Minimum spreading factor | 64 |
| - NF_max | 64 |
| - AP signature | 15 |
| PCPCH Channel #2 info | |
| - UL scrambling code | 19 |
| - DL channelisation code | 14 |
| - PCP length | 8 |
| - UCSM info | |
| - Minimum spreading factor | 64 |
| - NF_max | 64 |
| - AP signature | 14 |

PCPCH persistence level info in System Information Block type 9

| Information Element | Value/Remark |
|---|---|
| CPCH set persistence levels | |
| - PCPCH persistence level | Both set to 1, immediate access allowed |

CSICH Information broadcast by SS PHY

| Information Element | Value/Remark |
|---|---|
| PCPCH Channel Availability (PCA) : | |
| -PCA1 | Available |
| -PCA2 | Available |

#### 7.1.1.7.5 Test requirements

The UE-Id type and UE-Id field are included in the MAC header. When multiplexing on MAC is not applied, C/T field is included in the MAC header. Otherwise, C/T field is not included.

### 7.1.1.8 DTCH or DCCH mapped to DCH / Invalid C/T Field

#### 7.1.1.8.1 Definition

This tests that the MAC applies the correct header to the MAC PDU according to the type of logical channel carried on the DCH transport channel. Incorrect application of MAC headers would result in inoperation of the UE.

#### 7.1.1.8.2 Conformance requirement

DTCH or DCCH mapped to DCH, no multiplexing of dedicated channels on MAC: -no MAC header is required.

DTCH or DCCH mapped to DCH, with multiplexing of dedicated channels on MAC: -C/T field is included in MAC header.

The following fields are defined for the MAC header:

- C/T field
  The C/T field provides identification of the logical channel instance when multiple logical channels are carried on the same transport channel…

**Structure of the C/T field**

| C/T field | Designation |
|---|---|
| 0000 | Logical channel 1 |
| 0001 | Logical channel 2 |
| ... | ... |
| 1110 | Logical channel 15 |
| 1111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |

Reference(s)

TS 25.321 clauses 9.2.1 and 9.2.1.1 b).

7.1.1.8.3 Test purpose

1. To verify that the UE discards PDUs with reserved or incorrect values in C/T field.
2. To verify that the C/T field is correctly applied when a DTCH or DCCH is mapped to a DCH.

7.1.1.8.4 Method of test

Initial conditions

System Simulator:

- 1 cell, default parameters, Ciphering Off.

  The DCH/DPCH is configured as specified in TS 34.108 clause 6.10.2.4.1.2 (FDD), 6.11.5.4.1.2(1.28Mcps TDD): (Stand-alone UL:3.4 DL:3.4 kbps SRBs for DCCH) with the following exception:

| | | | |
|---|---|---|---|
| Higher layer | RAB/signalling RB | | RB#3 (SRB#3) |
| | User of Radio Bearer | | NAS_DT<br>High prio |
| RLC | Logical channel type | | DCCH |
| | RLC mode | | TM |
| | Payload sizes, bit | | 148 |
| | Max data rate, bps | | 3700 |
| | RLC header, bit | | 0 |
| MAC | MAC header, bit | | 0 (note) |
| | MAC multiplexing | | Simulated by SS |
| Layer 1 | TrCH type | | DCH |
| | TB sizes, bit | | 148 |
| | TFS | TF0, bits | 0 x 148 |
| | | TF1, bits | 1 x 148 |
| | TTI, ms | | 40 |
| | Coding type | | CC 1/3 |
| | CRC, bit | | 16 |
| | Max number of bits/TTI before rate matching | | 516 |
| | Uplink: Max number of bits/radio frame before rate matching | | 129 |
| | RM attribute | | 155-165 |
| NOTE: The SS MAC layer must be configured not to add a MAC header so that the header can be added by the test case in order to create the necessary invalid values. | | | |

The TFCS should be configured as specified in clause 6.10.2.4.1.2.1.1.2 (FDD), 6.11.5.4.1.2.1.1.2(1.28 Mcps TDD).

User Equipment:

The UE shall operate under normal test conditions, Ciphering Off.

The Test-USIM shall be inserted.

The SS starts broadcasting the System Information as specified in TS 34.108 clause 6.1, using the configuration for the PRACH and SCCPCH (signalled in SYSTEM INFORMATION 5) as follows:

1. The SCCPCH is configured as specified in TS 34.108 clause 6.10.2.4.3.3 (FDD), 6.11.5.4.4.3(1.28Mcps TDD) (Interactive/Background 32 kbps RAB + SRB for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH).
2. The PRACH is configured as specified in TS 34.108 clause 6.10.2.4.4.1 (FDD), 6.11.5.4.5.2(1.28Mcps TDD).

The SS follows the procedure in TS 34.108 clause 7.4.2.1 (Mobile Terminated) so that the UE shall be in state BGP 6-1 (CS-CELL_DCH_INITIAL). During this procedure the RRC CONNECTION SETUP message shall allocate a DCH to carry the signalling radio bearers as follows:

1. The DCH/DPCH is configured as specified in TS 34.108 clause 6.10.2.4.1.2 (FDD), 6.11.5.4.1.2(1.28Mcps TDD): Stand-alone UL:3.4 DL:3.4 kbps SRBs for DCCH).

Test procedure

a) The SS receives the PAGING RESPONSE message from the UE and checks the C/T field.

b) The SS transmits MAC PDUs containing RLC AM PDUs containing a DIRECT TRANSFER message containing

1. Dummy octet string for NAS Message, of size sufficient enough to fit in one RLC PDU of 144 bits, including the correct RLC AM header.
2. The IE CN Domain Identity is Set to PS Domain (no signalling connection for this Domain exists).
3. The polling bit in RLC header is set for transmission of RLC STATUS PDU.

The MAC header shall be set as follows:

| Field | Value |
|---|---|
| C/T | '0111'B |

c) The SS checks that UE shall neither transmit RRC Status message on SRB2 nor RLC Status PDU on SRB3.

d) The SS again transmits MAC PDUs as in b) above, but this time uses the correct C/T value for AM-DCCH NAS High Priority of 0010'B. The sequence numbers in the RLC headers shall be identical with those sent in b).

e) SS Receives RLC Status PDU on SRB #3 acknowledging the receipt of the above RLC PDU.

f) The SS receives a RRC STATUS message on the uplink DCCH using AM RLC on SRB # 2.

g) The SS repeats steps b), c), d), e) and f), with the C/T field set as follows in step b):

| Iteration | C/T Value |
|---|---|
| 2 | 1111'B |

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | PAGING RESPONSE | Check C/T field |
| 2 | ← | | MAC PDU(C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with incorrect C/T = 0111'B, or 1111'B |
| 2a | | | wait for T = 5 s | SS checks that UE shall neither transmit RRC-Status message on SRB 2 nor RLC Status PDU on SRB 3.<br>See note 1 below. |
| 3 | ← | | MAC PDU(C/T, RLC AM PDU(SN=x, DIRECT TRANSFER)) | Sent with correct C/T = 0010'B |
| 4 | → | | RLC-STATUS-PDU | ACK PDUs with SN = x<br>C/T Field is recognised as correct for the DCCH.<br>See note 2 below. |
| 5 | → | | RRC Status message | |
| NOTE 1: UE will Transmit Signalling Connection Release Indication on expiry of MM Timer T3240 or GMM Timer T3317.<br>NOTE 2: RRC Status message may be received before RLC Status PDU. | | | | |

Steps 2 to 5 of the expected sequence are repeated for iteration 2. Note: For iteration 2 the SN in steps 2 and 4 starts with x+1.

Specific Message Contents

None

#### 7.1.1.8.5 Test Requirement

In step a) the C/T field should be set to the Logical Channel ID for SRB #3 (0010'B). Note that this may be implied from receipt of the PAGING RESPONSE message correctly by the SS test script.

During the test the SS shall request RLC status reports with every transmitted PDU by setting of the Polling Bit. The UE shall not send any STATUS PDUs indicating missing PDUs.

At the end of each iteration (steps 4 and 5 of expected sequence) the SS shall receive a RLC Status PDU on SRB # 3 with C/T field set to '0010'B and RRC Status message on SRB # 2.

### 7.1.1.9 MTCH mapped to FACH / Invalid TCTF (3.84/7.68 Mcps TDD MBSFN)

#### 7.1.1.9.1 Definition

This tests that the MAC applies the correct header to the MAC PDU according to the type of logical channel carried on the FACH transport channel. Incorrect application of MAC headers would result in inoperation of the UE.

#### 7.1.1.9.2 Conformance requirement

MTCH mapped to FACH:

The TCTF field and MBMS-Id field are included in the MAC header for MTCH

…

**Table 9.2.1.1: Coding of the Target Channel Type Field on FACH for TDD**

| TCTF | Designation |
|---|---|
| 000 | BCCH |
| 001 | CCCH |
| 010 | CTCH |
| 01100 | DCCH or DTCH over FACH |
| 01101 | MCCH |
| 01110 | MTCH |
| 01111 | MSCH |
| 100 | SHCCH |
| 101-111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |

Reference(s)

TS 25.321 clauses 9.2.1 and 9.2.1.8.

7.1.1.9.3 Test purpose

1. To verify that the UE discards PDUs with reserved or incorrect values in the TCTF field.
2. To verify that the TCTF field is correctly applied when a MTCH is mapped to the FACH.

7.1.1.9.4 Method of test

Initial conditions

System Simulator:

Unicast carrier: 1 cell, Cell 1 with default configuration.

- MBSFN carriers: 1 cell, Cell 31 has default parameters. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.

The configuration of the S-CCPCH which will carry the MTCH is based upon that specified in TS 34.108 clause 6.11.1c (3.84 Mcps TDD) and 6.11.1d (7.68 Mcps TDD) 8kbps RB for MBSFN MTCH with the following exceptions for the FACH:

| | | | |
|---|---|---|---|
| Higher layer | RAB/signalling RB | | RAB |
| | User of Radio Bearer | | Test |
| RLC | Logical channel type | | MTCH |
| | RLC mode | | TM |
| | Payload sizes, bit | | 345 |
| | Max data rate, bps | | 8200 |
| | UMD PDU header, bit | | 0 |
| MAC | MAC header, bit | | 0 (note) |
| | MAC multiplexing | | Simulated by SS |
| Layer 1 | TrCH type | | FACH |
| | TB sizes, bit | | 345 |
| | TFS | TF0, bits | 0x345 |
| | | TF1, bits | 1x345 |
| | TTI, ms | | 40 |
| | Coding type | | TC |
| | CRC, bit | | 16 |
| | Max number of bits/TTI after channel coding | | 1095 |
| | Max number of bits/radio frame before rate matching | | 274 |
| | RM attribute | | 128 |
| NOTE: The SS MAC layer must be configured not to add a MAC header so that the header can be added by the test case in order to create the necessary invalid values. | | | |

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.

- The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected (i.e. it is included in MBMS_ACTIVATED_SERVICES variable) a national service for which there will be a session starting on MBSFN Cell 31 (see TS 34.108 clause 11.2.4).

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode available on UE Yes/No.

- Support of TDD transmit and receive functions available on UE Yes/No.

- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

a) The UE is camping on Cell 1 and Cell 31. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 (no session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

c) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on Cell 31 MTCH (Transmission identity indicating the MBMS activated service).

d) The SS notifies on MCCH about the start of an MBMS session for one modification period. MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C4 (one PTM session starting) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

e) MCCH messages are then transmitted by the SS on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

f) The SS waits for the UE to start reception of the MBMS data on MTCH according to the specified service activation time. The UE closes the test loop. The UE sends CLOSE UE TEST LOOP COMPLETE.

g) The SS transmits MAC PDUs containing RLC UM PDUs containing an octet string representing dummy traffic data, of size sufficient enough to fit in one RLC PDU of 338 bits, including the correct RLC UM header.

The MAC header shall be set as follows:

| Field | Value |
|---|---|
| TCTF | 101'B |
| MBMS-Id | 0000'B |

h) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE corresponds to zero received RLC SDUs. The SS records the value.

i) The SS again transmits MAC PDUs as in b) above, but this time uses the correct TCTF of 01110'B. Where a TCTF size of 5-bits is used, 2-bits from the RLC payload (specified above as 338 bits) shall be discarded. The sequence numbers in the RLC headers shall be identical with those sent in b).

j) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0. The SS records the value.

k) The SS repeats steps g), h), i) and j), with the TCTF field set as follows in step g):

| Iteration | TCTF Value |
|---|---|
| 2 | 110'B |
| 3 | 111'B |
| 4 | 001'B |
| 5 | 010'B |
| 6 | 100'B |
| 7 | 01100'B |

NOTE 1: For a UE in UE test loop mode 3 the RLC SDU counter value is only reset upon reception of the CLOSE UE TEST LOOP message configuring UE test loop mode 3. To enable the SS to measure the number of received RLC SDUs for the different sub-tests the SS needs to record the reported values for each sub-test and perform the checking of the reported value relative to the previously reported value.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated on Cell 31 for the selected national service on MTCH. |
| 4 | ← | | M | MBMS MCCH Message Configuration C4 | Includes the national service activated at UE in the modified services list for one modification period. |
| 5 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. |
| 6 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE establishes the MTCH according to the activation time and closes the test loop. |
| 7 | SS | | M | | The SS repeats steps 8 - 15 for each invalid TCTF value. |
| 8 | | | | MAC PDU(TCTF, MBMS-Id, RLC UM PDU(SN=x)) | Sent with invalid TCTF = 101'B, 110'B, 111'B, 001'B, 010'B, 100'B and 01100'B |
| 9 | | | | | SS waits for T = 2 s |
| 10 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 11 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to zero. The SS records the value. |
| 12 | | | | MAC PDU(TCTF, MBMS-Id, RLC UM PDU(SN=x)) | Sent with correct TCTF = 01110'B |
| 13 | | | | | SS waits for T = 2 s |
| 14 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 15 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. The SS records the value. |
| 16 | ← | | U | OPEN UE TEST LOOP | |
| 17 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 18 | ← | | U | DEACTIVATE RB TEST MODE | |
| 19 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Steps 8 – 15 of the above expected sequence are repeated for iterations 2 to 7. Note: For iteration k the SN in steps 8 and 12 starts with x + (k –1).

Specific Message Contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

MBMS COMMON P-T-M RB INFORMATION (Step 4 and Step 5) (3.84 Mcps)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| RB information list | 1 entry in the list | Rel-6 |
| - RB identity | | |
| - MBMS Common RB identity | 14 | |
| - PDCP info | | |
| - Support for lossless SRNS relocation | Not Present | |
| - Max PDCP SN window size | Not Present | |
| - PDCP PDU header | absent | |
| - Header compression information | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RLC info | | |
| - DL UM RLC LI size | 7 | |
| - DL Duplication Avoidance and Reordering info | Not Present | |
| - DL Out of sequence delivery info | Not Present | |
| TrCh information for each TrCh | 1 entry in the list | Rel-6 |
| - Transport channel identity | | |
| - MBMS Common TrCh identity | 1 | |
| - TFS | | |
| - CHOICE *Transport channel type* | Common transport channels | |
| - Dynamic Transport Format Information | | |
| - RLC Size | Refer to TrCh parameters defined above | |
| - Number of TBs and TTI List | (This IE is repeated for each TFI) | |
| - Number of Transport blocks | Refer to TrCh parameters defined above | |
| - CHOICE *mode* | TDD | |
| - Transmission Time Interval | Not Present | |
| - CHOICE *Logical Channel List* | ALL | |
| - no data | | |
| - Semi-static Transport Format information | | |
| - Transmission time interval | Refer to TrCh parameters defined above | |
| - Type of channel coding | Turbo | |
| - Coding Rate | Not Present | |
| - Rate matching attribute | Refer to TrCh parameters defined above | |
| - CRC size | Refer to TrCh parameters defined above | |
| TrCh information for each CCTrCh | Not Present<br>(Default TFCS applies for each CCTrCh) | Rel-6 |
| PhyCh information | 1 entry in list | Rel-6 |
| - PhyCh identity | | |
| - MBMS Common PhyCh identity | 23 | |
| - Secondary CCPCH info MBMS | | |
| - CHOICE *mode* | 1.28/3.84 Mcps TDD | |
| - Common timeslot info MBMS | | |
| - 2nd interleaving mode | Frame | |
| - TFCI coding | Reference to clause 6.11.1c | |
| - Puncturing limit | Reference to clause 6.11.1c | |
| - Downlink Timeslots and Codes | | |
| - First individual timeslot info | | |
| - Timeslot number | | |
| - CHOICE *TDD option* | 3.84 Mcps | |
| - Timeslot number | 1 | |
| - TFCI existence | TRUE | |
| - Midamble Shift and burst type | | |
| - CHOICE *TDD option* | 3.84 Mcps TDD | |
| - CHOICE Burst Type | MBSFN Burst Type | Rel-7 |
| - no data | | Rel-7 |
| - CHOICE *TDD option* | 3.84Mcps TDD | |
| - no data | | |
| - First timeslot channelisation codes | | |
| - CHOICE *codes representation* | Consecutive codes | |
| - First channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - Last channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - CHOICE *more timeslots* | No more timeslots | |
| - no data | | |
| - Modulation | Reference to clause 6.11.1c | Rel-7 |

MBMS COMMON P-T-M RB INFORMATION (Step 4 and Step 5) (7.68 Mcps)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-7 |
| RB information list | 1 entry in the list | Rel-7 |
| - RB identity | | |
| - MBMS Common RB identity | 14 | |
| - PDCP info | | |
| - Support for lossless SRNS relocation | Not Present | |
| - Max PDCP SN window size | Not Present | |
| - PDCP PDU header | absent | |
| - Header compression information | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RLC info | | |
| - DL UM RLC LI size | 7 | |
| - DL Duplication Avoidance and Reordering info | Not Present | |
| - DL Out of sequence delivery info | Not Present | |
| TrCh information for each TrCh | 1 entry in the list | Rel-7 |
| - Transport channel identity | | |
| - MBMS Common TrCh identity | 1 | |
| - TFS | | |
| - CHOICE *Transport channel type* | Common transport channels | |
| - Dynamic Transport Format Information | | |
| - RLC Size | Refer to TrCh parameters defined above | |
| - Number of TBs and TTI List | (This IE is repeated for each TFI) | |
| - Number of Transport blocks | Refer to TrCh parameters defined above | |
| - CHOICE *mode* | TDD | |
| - Transmission Time Interval | Not Present | |
| - CHOICE *Logical Channel List* | ALL | |
| - no data | | |
| - Semi-static Transport Format information | | |
| - Transmission time interval | Refer to TrCh parameters defined above | |
| - Type of channel coding | Turbo | |
| - Coding Rate | Not Present | |
| - Rate matching attribute | Refer to TrCh parameters defined above | |
| - CRC size | Refer to TrCh parameters defined above | |
| TrCh information for each CCTrCh | Not Present<br>(Default TFCS applies for each CCTrCh) | Rel-7 |
| PhyCh information | 1 entry in list | Rel-7 |
| - PhyCh identity | | |
| - MBMS Common PhyCh identity | 23 | |
| - Secondary CCPCH info MBMS | | |
| - CHOICE *mode* | 7.68 Mcps TDD | |
| - Common timeslot info MBMS | | |
| - 2nd interleaving mode | Frame | |
| - TFCI coding | Reference to clause 6.11.1d | |
| - Puncturing limit | Reference to clause 6.11.1d | |
| - Downlink Timeslots and Codes VHCR | | |
| - First Individual timeslot info | | |
| - Timeslot number | | |
| - CHOICE *TDD option* | 7.68 Mcps option | |
| Timeslot number | 1 | |
| - TFCI existence | TRUE | |
| - Midamble Shift and burst type | | |
| - CHOICE *TDD option* | 7.68 Mcps TDD | |
| - CHOICE *Burst Type* | MBSFN Burst Type | |
| - no data | Default | |
| - CHOICE *TDD option* | 7.68Mcps TDD | |
| - no data | | |
| - First timeslot channelisation codes VHCR | | |
| - CHOICE *codes representation* | Consecutive codes | |
| - First channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - Last channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - CHOICE more timeslots | No more timeslots | |
| - no data | | |
| - Modulation | Reference to clause 6.11.1d | |

MBMS CURRENT CELL P-T-M RB INFORMATION (Step 4 and Step 5)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| S-CCPCH list | Contains 1 S-CCPCH | Rel-6 |
| - S-CCPCH identity | Not Present | |
| - Secondary CCPCH info | 23 | |
| - MBMS Soft Combining Timing Offset | Not Present | |
| - TrCh information common for all TrCh | Not Present (MD) | |
| - TrCH information list | | |
| - TrCh information | 1 | |
| - RB information list | | |
| - RB information | | |
| - RB information | 14 | |
| - MBMS short transmission ID | Reference to the service which is being provided on this RB. | |
| - MBMS logical channel identity | 1 | |
| - L1 combining status | Not Present | |
| - MSCH configuration information | Not Present | |
| S-CCPCH in SIB type 5 | Not Present | Rel-6 |
| MBSFN TDM Info List | Not Present | Rel-7 |

#### 7.1.1.9.5 Test Requirement

1) At step 11 on each iteration, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to zero received RLC SDUs for Cell 31 MTCH.

2) At step 15 on each iteration, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to > 0 received RLC SDUs for Cell 31 MTCH.

### 7.1.1.10 MTCH mapped to FACH / Invalid MBMS-Id (3.84/7.68 Mcps TDD MBSFN)

#### 7.1.1.10.1 Definition

This tests that the MAC applies the correct header to the MAC PDU according to the type of logical channel carried on the FACH transport channel. Incorrect application of MAC headers would result in inoperation of the UE.

#### 7.1.1.10.2 Conformance requirement

MTCH mapped to FACH:

The TCTF field and MBMS-Id field are included in the MAC header for MTCH

…

**Table 9.2.1.8: Structure of the MBMS-Id field**

| MBMS-Id field | MBMS logical channel identity [7] |
|---|---|
| 0000 | 1 |
| 0001 | 2 |
| ... | ... |
| 1110 | 15 |
| 1111 | Reserved (PDUs with this coding will be discarded by this version of the protocol) |

Reference(s)

TS 25.321 clauses 9.2.1 and 9.2.1.8.

7.1.1.10.3 Test purpose

1. To verify that the UE discards PDUs with reserved or incorrect values in the MBMS-Id field.
2. To verify that the MBMS-Id field is correctly applied when a MTCH is mapped to the FACH.

7.1.1.10.4 Method of test

Initial conditions

System Simulator:

Unicast carrier: 1 cell, Cell 1 with default configuration.

- MBSFN carriers: 1 cell, Cell 31 has default parameters. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.

The configuration of the S-CCPCH which will carry the MTCH is based upon that specified in TS 34.108 clause 6.11.1c (3.84 Mcps TDD) and 6.11.1d (7.68 Mcps TDD) 8kbps RB for MBSFN MTCH with the following exceptions for the FACH:

| | | | |
|---|---|---|---|
| Higher layer | RAB/signalling RB | | RAB |
| | User of Radio Bearer | | Test |
| RLC | Logical channel type | | MTCH |
| | RLC mode | | TM |
| | Payload sizes, bit | | 345 |
| | Max data rate, bps | | 8200 |
| | UMD PDU header, bit | | 0 |
| MAC | MAC header, bit | | 0 (note) |
| | MAC multiplexing | | Simulated by SS |
| Layer 1 | TrCH type | | FACH |
| | TB sizes, bit | | 345 |
| | TFS | TF0, bits | 0x345 |
| | | TF1, bits | 1x345 |
| | TTI, ms | | 40 |
| | Coding type | | TC |
| | CRC, bit | | 16 |
| | Max number of bits/TTI after channel coding | | 1095 |
| | Max number of bits/radio frame before rate matching | | 274 |
| | RM attribute | | 128 |
| NOTE: The SS MAC layer must be configured not to add a MAC header so that the header can be added by the test case in order to create the necessary invalid values. | | | |

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.
- The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected (i.e. it is included in MBMS_ACTIVATED_SERVICES variable) a national service for which there will be a session starting on MBSFN Cell 31 (see TS 34.108 clause 11.2.4).

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

a) The UE is camping on Cell 1 and Cell 31. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 (no session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

c) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on Cell 31 MTCH (Transmission identity indicating the MBMS activated service).

d) The SS notifies on MCCH about the start of an MBMS session for one modification period. MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C4 (one PTM session starting) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

e) MCCH messages are then transmitted by the SS on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

f) The SS waits for the UE to start reception of the MBMS data on MTCH according to the specified service activation time. The UE closes the test loop. The UE sends CLOSE UE TEST LOOP COMPLETE.

g) The SS transmits MAC PDUs containing RLC UM PDUs containing an octet string representing dummy traffic data, of size sufficient enough to fit in one RLC PDU of 336 bits, including the correct RLC UM header.

The MAC header shall be set as follows:

| Field | Value |
|---|---|
| TCTF | 01110'B |
| MBMS-Id | 1111'B |

h) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE corresponds to zero received RLC SDUs. The SS records the value.

i) The SS again transmits MAC PDUs as in b) above, but this time uses a valid MBMS-Id of 1110’B. The sequence numbers in the RLC headers shall be identical with those sent in b).

j) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE corresponds to > 0 received RLC SDUs

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated on Cell 31 for the selected national service on MTCH. |
| 4 | ← | | M | MBMS MCCH Message Configuration C4 | Includes the national service activated at UE in the modified services list for one modification period. |
| 5 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. |
| 6 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE establishes the MTCH according to the activation time and closes the test loop. |
| 7 | | | | MAC PDU(TCTF, MBMS-Id, RLC UM PDU(SN=x)) | Sent with reserved MBMS-Id = 1111'B |
| 8 | | | | | SS waits for T = 2 s |
| 9 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 10 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to zero. The SS records the value. |
| 11 | | | | MAC PDU(TCTF, MBMS-Id, RLC UM PDU(SN=x)) | Sent with valid MBMS-Id = 1110'B |
| 12 | | | | | SS waits for T = 2 s |
| 13 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 14 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 15 | ← | | U | OPEN UE TEST LOOP | |
| 16 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 17 | ← | | U | DEACTIVATE RB TEST MODE | |
| 18 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific Message Contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

MBMS COMMON P-T-M RB INFORMATION (Step 4 and Step 5) (3.84 Mcps)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| RB information list | 1 entry in the list | Rel-6 |
| - RB identity | | |
| - MBMS Common RB identity | 14 | |
| - PDCP info | | |
| - Support for lossless SRNS relocation | Not Present | |
| - Max PDCP SN window size | Not Present | |
| - PDCP PDU header | absent | |
| - Header compression information | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RLC info | | |
| - DL UM RLC LI size | 15 | |
| - DL Duplication Avoidance and Reordering info | Not Present | |
| - DL Out of sequence delivery info | Not Present | |
| TrCh information for each TrCh | 1 entry in the list | Rel-6 |
| - Transport channel identity | | |
| - MBMS Common TrCh identity | 1 | |
| - TFS | | |
| - CHOICE *Transport channel type* | Common transport channels | |
| - Dynamic Transport Format Information | | |
| - RLC Size | Refer to TrCh parameters defined above | |
| - Number of TBs and TTI List | (This IE is repeated for each TFI) | |
| - Number of Transport blocks | Refer to TrCh parameters defined above | |
| - CHOICE *mode* | TDD | |
| - Transmission Time Interval | Not Present | |
| - CHOICE *Logical Channel List* | ALL | |
| - no data | | |
| - Semi-static Transport Format information | | |
| - Transmission time interval | Refer to TrCh parameters defined above | |
| - Type of channel coding | Turbo | |
| - Coding Rate | Not Present | |
| - Rate matching attribute | Refer to TrCh parameters defined above | |
| - CRC size | Refer to TrCh parameters defined above | |
| TrCh information for each CCTrCh | Not Present<br>(Default TFCS applies for each CCTrCh) | Rel-6 |
| PhyCh information | 1 entry in list | Rel-6 |
| - PhyCh identity | | |
| - MBMS Common PhyCh identity | 23 | |
| - Secondary CCPCH info MBMS | | |
| - CHOICE *mode* | 1.28/3.84 Mcps TDD | |
| - Common timeslot info MBMS | | |
| - 2nd interleaving mode | Frame | |
| - TFCI coding | Reference to clause 6.11.1c | |
| - Puncturing limit | Reference to clause 6.11.1c | |
| - Downlink Timeslots and Codes | | |
| - First individual timeslot info | | |
| - Timeslot number | | |
| - CHOICE *TDD option* | 3.84 Mcps | |
| - Timeslot number | 1 | |
| - TFCI existence | TRUE | |
| - Midamble Shift and burst type | | |
| - CHOICE *TDD option* | 3.84 Mcps TDD | |
| - CHOICE Burst Type | MBSFN Burst Type | Rel-7 |
| - no data | | Rel-7 |
| - CHOICE *TDD option* | 3.84Mcps TDD | |
| - no data | | |
| - First timeslot channelisation codes | | |
| - CHOICE *codes representation* | Consecutive codes | |
| - First channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - Last channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - CHOICE *more timeslots* | No more timeslots | |
| - no data | | |
| - Modulation | Reference to clause 6.11.1c | Rel-7 |

MBMS COMMON P-T-M RB INFORMATION (Step 4 and Step 5) (7.68 Mcps)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-7 |
| RB information list | 1 entry in the list | Rel-7 |
| - RB identity | | |
| - MBMS Common RB identity | 14 | |
| - PDCP info | | |
| - Support for lossless SRNS relocation | Not Present | |
| - Max PDCP SN window size | Not Present | |
| - PDCP PDU header | absent | |
| - Header compression information | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RLC info | | |
| - DL UM RLC LI size | 15 | |
| - DL Duplication Avoidance and Reordering info | Not Present | |
| - DL Out of sequence delivery info | Not Present | |
| TrCh information for each TrCh | 1 entry in the list | Rel-7 |
| - Transport channel identity | | |
| - MBMS Common TrCh identity | 1 | |
| - TFS | | |
| - CHOICE *Transport channel type* | Common transport channels | |
| - Dynamic Transport Format Information | | |
| - RLC Size | Refer to TrCh parameters defined above | |
| - Number of TBs and TTI List | (This IE is repeated for each TFI) | |
| - Number of Transport blocks | Refer to TrCh parameters defined above | |
| - CHOICE *mode* | TDD | |
| - Transmission Time Interval | Not Present | |
| - CHOICE *Logical Channel List* | ALL | |
| - no data | | |
| - Semi-static Transport Format information | | |
| - Transmission time interval | Refer to TrCh parameters defined above | |
| - Type of channel coding | Turbo | |
| - Coding Rate | Not Present | |
| - Rate matching attribute | Refer to TrCh parameters defined above | |
| - CRC size | Refer to TrCh parameters defined above | |
| TrCh information for each CCTrCh | Not Present<br>(Default TFCS applies for each CCTrCh) | Rel-7 |
| PhyCh information | 1 entry in list | Rel-7 |
| - PhyCh identity | | |
| - MBMS Common PhyCh identity | 23 | |
| - Secondary CCPCH info MBMS | | |
| - CHOICE *mode* | 7.68 Mcps TDD | |
| - Common timeslot info MBMS | | |
| - 2nd interleaving mode | Frame | |
| - TFCI coding | Reference to clause 6.11.1d | |
| - Puncturing limit | Reference to clause 6.11.1d | |
| - Downlink Timeslots and Codes VHCR | | |
| - First Individual timeslot info | | |
| - Timeslot number | | |
| - CHOICE *TDD option* | 7.68 Mcps option | |
| Timeslot number | 1 | |
| - TFCI existence | TRUE | |
| - Midamble Shift and burst type | | |
| - CHOICE *TDD option* | 7.68 Mcps TDD | |
| - CHOICE *Burst Type* | MBSFN Burst Type | |
| - no data | Default | |
| - CHOICE *TDD option* | 7.68Mcps TDD | |
| - no data | | |
| - First timeslot channelisation codes VHCR | | |
| - CHOICE *codes representation* | Consecutive codes | |
| - First channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - Last channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - CHOICE more timeslots | No more timeslots | |
| - no data | | |
| - Modulation | Reference to clause 6.11.1d | |

MBMS CURRENT CELL P-T-M RB INFORMATION (Step 4 and Step 5)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| S-CCPCH list | Contains 1 S-CCPCH | Rel-6 |
| - S-CCPCH identity | Not Present | |
| - Secondary CCPCH info | 23 | |
| - MBMS Soft Combining Timing Offset | Not Present | |
| - TrCh information common for all TrCh | Not Present (MD) | |
| - TrCH information list | | |
| - TrCh information | 1 | |
| - RB information list | | |
| - RB information | | |
| - RB information | 14 | |
| - MBMS short transmission ID | Reference to the service which is being provided on this RB. | |
| - MBMS logical channel identity | 1 | |
| - L1 combining status | Not Present | |
| - MSCH configuration information | Not Present | |
| S-CCPCH in SIB type 5 | Not Present | Rel-6 |
| MBSFN TDM Info List | Not Present | Rel-7 |

#### 7.1.1.10.5 Test Requirement

1) At step 10 on each iteration, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to zero received RLC SDUs for Cell 31 MTCH.

2) At step 14 on each iteration, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to > 0 received RLC SDUs for Cell 31 MTCH.

## 7.1.2 RACH/FACH procedures

### 7.1.2.1 Selection and control of Power Level

#### 7.1.2.1.1 Void

NOTE Test case "Selection and control of Power Level (FDD)" has been removed as the test purpose is implicitely tested by radio resource management test cases in TS 34.121 clause 8.4.2.1 and 8.4.2.2.

#### 7.1.2.1.2 Selection and control of Power Level (3,84 Mcps TDD option)

(FFS)

#### 7.1.2.1.3 Selection and control of Power Level (1,28 Mcps TDD option)

##### 7.1.2.1.3.1 Definition and applicability

All TDD 1,28 Mcps UE

##### 7.1.2.1.3.2 Conformance requirement

1. The UE sets the initial preamble transmit power to the value $P_{UpPCH}$ given in clause 8.5.7 of TS 25.331.

2. If the UE does not receive an acknowledgement on the FPACH then the UE increases the preamble transmission power by the specified increment $Pwr_{ramp}$.

3. The UE ceases power ramping after the maximum number of pre-amble increments permitted has been completed.

4. Where the UE is permitted to complete a number of power ramping cycles, the UE returns to the initial transmit power (no increment applied) at the start of each cycle. The number of cycles completed before the UE ceases transmission should equal the maximum number of permitted power ramping cycles.

5. The UE does not transmit on PRACH resources.

Reference(s)

TS 25.224 clause 5.6.

TS 25.331 clause 8.5.7.

TS 25.321 clause 11.2.3.

7.1.2.1.3.3 Test Purpose

To verify that:

- the UE selects the correct preamble transmit powers during a power ramp cycle, taking account of the desired UpPCH receive power and power ramp step specified in the BCH layer 3 message SIB 5,
- the number of steps in a power ramp cycle and the number of power ramp cycles completed when no reply is received from the UTRAN is equal to the values specified for these parameters in the BCH layer 3 messages SIB 5,
- the UE does not transmit on the PRACH resources specified in the BCH message SIB 5.

7.1.2.1.3.4 Method of test

Initial conditions

The UE is attached to the network and in idle mode.

Related ICS/IXT Statement(s)

TBD

Foreseen Final State of the UE

The same as the initial condition.

Test procedure

a) The SS pages the UE to initiate the RACH access procedure;

b) The SS does not respond to UpPCH transmissions received from the UE;

c) The SS measures the power level of each UpPCH code that the UE transmits;

d) The SS monitors the PRACH resources to ensure that no transmissions are received from the UE;

e) The procedure is continued until the maximum permitted power ramping cycles, and within each power ramping cycle, the maximum number of UpPCH transmissions have been made. The UpPCH and PRACH channels are then continued for time, tbd, to ensure that no further transmissions are made by the UE.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <– | PAGE | |
| 2 | | -> | UpPCH | $P_{UpPCH} = L_{PCCPCH} + PRX_{UpPCHdes}$ |
| 3 | | -> | UpPCH | $P_{UpPCH} = L_{PCCPCH} + PRX_{UpPCHdes} + Pwr_{ramp}$ |
| 4 | | | …… | |
| 5 | | -> | UpPCH | $P_{UpPCH} = L_{PCCPCH} + PRX_{UpPCHdes} + n.\ Pwr_{ramp}$ |
| 6 | | -> | UpPCH | $P_{UpPCH} = L_{PCCPCH} + PRX_{UpPCHdes}$ |
| 7 | | -> | UpPCH | $P_{UpPCH} = L_{PCCPCH} + PRX_{UpPCHdes} + Pwr_{ramp}$ |
| 8 | | | …… | |
| 9 | | -> | UpPCH | $P_{UpPCH} = L_{PCCPCH} + PRX_{UpPCHdes} + n.\ Pwr_{ramp}$ |
| 10 | | | Wait for time-period | |

#### 7.1.2.1.3.5 Test requirements

The power of the first UpPCH transmission should equal $P_{UpPCH} = L_{PCCPCH} + PRX_{UpPCHdes}$, subsequent transmissions should increase in power by $Pwr_{ramp}$ until the maximum permitted number of steps in a power ramping cycle has been completed. The power ramping cycle should be repeated Mmax times before the UE ceases to transmit. The UE should not transmit on any PRACH resources.

### 7.1.2.2 Correct application of Dynamic Persistence

#### 7.1.2.2.1 Void

NOTE Test case "Correct application of Dynamic Persistence (FDD)" has been removed as the test purpose is implicitely tested by radio resource management test cases in TS 34.121.

#### 7.1.2.2.2 Correct application of Dynamic Persistence (3.84 Mcps TDD option)

(FFS)

#### 7.1.2.2.3 Void

### 7.1.2.3 Correct Selection of RACH parameters

#### 7.1.2.3.1 Correct Selection of RACH parameters (FDD)

##### 7.1.2.3.1.1 Definition

The physical random access procedure described in this subclause is initiated upon request of a PHY-Data-REQ primitive from the MAC sublayer.

The UE selection of "PRACH system information" is described in TS 25.331 clause 8.5.17.

##### 7.1.2.3.1.2 Conformance requirement

A. The physical random-access procedure shall be performed as follows:

1 Derive the available uplink access slots, in the next full access slot set, for the set of available RACH sub-channels within the given ASC with the help of TS 25.214, subclauses 6.1.1. and 6.1.2. Randomly select one access slot among the ones previously determined. If there is no access slot available in the selected set, randomly select one uplink access slot corresponding to the set of available RACH sub-channels within the given ASC from the next access slot set. The random function shall be such that each of the allowed selections is chosen with equal probability.

2 Randomly select a signature from the set of available signatures within the given ASC. The random function shall be such that each of the allowed selections is chosen with equal probability.

3 Set the Preamble Retransmission Counter to Preamble Retrans Max.

…

5 … Transmit a preamble using the selected uplink access slot, signature, and preamble transmission power.

6 If no positive or negative acquisition indicator (AI ≠ +1 nor –1) corresponding to the selected signature is detected in the downlink access slot corresponding to the selected uplink access slot:

6.1 Select the next available access slot in the set of available RACH sub-channels within the given ASC.

6.2 Randomly select a new signature from the set of available signatures within the given ASC. The random function shall be such that each of the allowed selections is chosen with equal probability.

…

6.4 Decrease the Preamble Retransmission Counter by one.

6.5 If the Preamble Retransmission Counter > 0 then repeat from step 5. Otherwise pass L1 status ("No ack on AICH") to the higher layers (MAC) and exit the physical random access procedure.

7 If a negative acquisition indicator corresponding to the selected signature is detected in the downlink access slot corresponding to the selected uplink access slot, pass L1 status ("Nack on AICH received") to the higher layers (MAC) and exit the physical random access procedure.

8 Transmit the random access message three or four uplink access slots after the uplink access slot of the last transmitted preamble depending on the AICH transmission timing parameter. Transmission power of the control part of the random access message should be $P_{p\text{-}m}$ [dB] higher than the power of the last transmitted preamble. Transmission power of the data part of the random access message is set according to subclause 5.1.1.2.

9 Pass L1 status "RACH message transmitted" to the higher layers and exit the physical random access procedure.

Reference(s)

TS 25.214 clause 6.1.

#### 7.1.2.3.1.3 Test purpose

To verify that:

A1 the UE, initially:

- determines the ASC for the given Access Class (AC).
- derives the available uplink access slots, in the next full access slot set, for the set of available RACH sub-channels within the given ASC with the help of TS 25.214, subclauses 6.1.1. and 6.1.2. and randomly select one access slot among the ones previously determined.
- randomly select a new signature from the set of available signatures within the given ASC.

A2 the UE, when not receiving any reply from UTRAN:

- selects the next available access slot in the set of available RACH sub-channels within the given ASC.
- randomly select a new signature from the set of available signatures within the given ASC.
- does not transmit on the PRACH resources specified in the BCH message SIB 5/SIB 5bis after that the physical random access procedure is terminated.

A3 the UE, when detecting a negative acquisition indicator:

- does not transmit on the PRACH resources specified in the BCH message SIB 5/SIB 5bisafter that the physical random access procedure is terminated.

A4 the UE, when detecting a positive acquisition indicator:

- transmits the random access message three or four uplink access slots after the uplink access slot of the last transmitted preamble depending on the AICH transmission timing parameter.
- terminates the random access procedure.

#### 7.1.2.3.1.4 Method of test

Initial conditions

The UE shall be attached to the network and in idle mode.

The UE shall use Access Class AC#0-9, which provides permission to use ASC#0 for the initial access.

Preamble Retrans Max parameter in SIB5/SIB5bis set to 5.

Maximum number of preamble retransmission cycles in SIB 5/SIB 5bis is set to Mmax = 1.

2 ASC settings (ASC#0 and ASC#1) are defined (with default parameters) in SIB5/SIB 5bis, except that the parameter assigned sub channel number is set as follows:

ASC#0 Assigned sub channel number = '0001'B

ASC#1 Assigned sub channel number = '0010'B

The available sub-channel number defined in SIB5/SIB 5bis is set to '1111 1111 1111'B. Note: this value allows RACH transmission on all sub-channels defined by "Assigned sub channel number" above.

Related ICS/IXIT Statement(s)

TBD

Foreseen Final State of the UE

The same as the initial conditions.

Test procedure

a) The SS pages the UE until it performs a RACH access.

b) The SS measures the access slot and preamble signature used.

c) The SS does not acknowledge the RACH access, causing the UE to retry.

d) The SS again measures the access slot and preamble signature used.

e) The SS repeats the procedure from step c) until the maximum number of retries "Preamble Retrans Max"have been attempted, and monitors the RACH channel for 10 seconds to ensure that no further RACH accesses occur.

f) The SS pages the UE until it performs a RACH access.

g) The SS measures the the access slot and preamble signature used.

h) The SS responds with a negative acquisition indicator on the AICH.

i) The SS monitors the RACH channel for 10 seconds to ensure that no further RACH accesses occur.

j) The SS pages the UE until it performs a RACH access.

k) The SS measures the access slot used.

l) The SS acknowledges the RACH access normally.

m) The SS measures the first access slot used in the PRACH message part.

n) The SS monitors the RACH channel for 10 seconds to ensure that no further RACH accesses occur.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGE | Preamble Retransmission Counter = 5 |
| 2 | → | | Access Preamble | Access slot used = n, where n is defined by the table in clause 7.1.2.3.1.5<br>Signature used = any from {$P_0$ .. $P_7$}<br>Preamble Retransmission Counter = 4 |
| 3 | → | | Access Preamble | Access slot used = mod(n+3,15)<br>Signature used = any from {$P_0$ .. $P_7$}<br>Preamble Retransmission Counter = 3 |
| 4 | → | | Access Preamble | Access slot used = mod(n+6,15)<br>Signature used = any from {$P_0$ .. $P_7$}<br>Preamble Retransmission Counter = 2 |
| 5 | → | | Access Preamble | Access slot used = mod(n+9,15)<br>Signature used = any from {$P_0$ .. $P_7$}<br>Preamble Retransmission Counter = 1 |
| 6 | → | | Access Preamble | Access slot used = mod(n+12,15)<br>Signature used = any from {$P_0$ .. $P_7$}<br>Preamble Retransmission Counter = 0 |
| 7 | | | Wait for T = 10s | SS monitors for RACH access attempts |
| 8 | ← | | PAGE | |
| 9 | → | | Access Preamble | Access slot used = n, where n is defined by the table in clause 7.1.2.3.1.5<br>Signature used = any from {$P_0$ .. $P_7$} |
| 10 | ← | | AICH = NEG ACQUISITION IND | |
| 11 | | | Wait for T = 10s | SS monitors for RACH access attempts |
| 12 | ← | | PAGE | |
| 13 | → | | Access Preamble | Access slot used = n, where n is defined by the table in clause 7.1.2.3.1.5<br>Signature used = any from {$P_0$ .. $P_7$} |
| 14 | ← | | AICH = POS ACQUISITION IND | |
| 15 | → | | RRC_CONNECTION_REQUEST | Message part. Access slot used = mod(n+3, 15) |
| 16 | | | Wait for T = 10s | SS monitors for RACH access attempts |

Specific Message Contents

Use the default parameter values for the system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions

Contents of System Information Block type 1

| Information Element | Value/Remark |
|---|---|
| - UE Timers and constants in connected mode<br>-N300 | <br>0 |

PRACH power offset info, PRACH info, and PRACH partitioning in System Information Block type 5/System Information Block type 5bis

| Information Element | Value/Remark |
|---|---|
| PRACH info | |
| - CHOICE | FDD |
| - Available Sub Channel number | '1111 1111 1111'B |
| PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#0) |
| - Available signature End Index | 7 (ASC#0) |
| - Assigned Sub-channel Number | '0001'B |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#1) |
| - Available signature End Index | 7 (ASC#1) |
| - Assigned Sub-channel Number | '0010'B |
| PRACH power offset | |
| - Preamble Retrans Max | 5 |

7.1.2.3.1.5 Test requirements

A1

At step 2

- the SS shall receive a PRACH preamble using an access slot as defined below and using a preamble signature from the set of preamble signatures $\{P_0 .. P_7\}$. See TS 25.213, clause 4.3.3.3 for a list of preamble codes.

- the access slot selected for the first access preamble can be any of the shaded table entries given below for ASC#0, depending on SFN (Note: the table entries which are not shaded are not allowed for ASC#0):

| SFN modulo 8 of corresponding P-CCPCH frame | Sub-channel number | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 |
| 0 | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | | | | |
| 1 | 12 | 13 | 14 | | | | | | 8 | 9 | 10 | 11 |
| 2 | | | | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | |
| 3 | 9 | 10 | 11 | 12 | 13 | 14 | | | | | | 8 |
| 4 | 6 | 7 | | | | | 0 | 1 | 2 | 3 | 4 | 5 |
| 5 | | | 8 | 9 | 10 | 11 | 12 | 13 | 14 | | | |
| 6 | 3 | 4 | 5 | 6 | 7 | | | | | 0 | 1 | 2 |
| 7 | | | | | | 8 | 9 | 10 | 11 | 12 | 13 | 14 |

A2

At steps 3, 4, 5, and 6

- the SS shall receive a PRACH preamble using access slot mod(n + 3, 15), where n is the access slot used in the previous step, and using a preamble signature from the set of preamble signatures $\{P_0 .. P_7\}$. See TS 25.213, clause 4.3.3.3 for a list of preamble codes.

At step 7

- the SS shall not receive on the PRACH resources specified in the BCH message SIB 5/SIB 5bis after that the physical random access procedure is terminated.

A3

At step 11

- the SS shall not receive on the PRACH resources specified in the BCH message SIB 5/SIB 5bis after that the physical random access procedure is terminated.

A4

At step 15

- the SS shall receive the random access message three access slots after the uplink access slot of the preamble received in step 13.

At step 11

- the SS shall not receive on the PRACH resources specified in the BCH message SIB 5/SIB 5bis after that the physical random access procedure is terminated.

#### 7.1.2.3.2 Correct Selection of RACH parameters (3.84 Mcps TDD option)

(FFS)

#### 7.1.2.3.3 Correct Selection of RACH parameters (1.28 Mcps TDD option)

##### 7.1.2.3.3.1 Definition and applicability

All TDD 1.28 Mcps UE

##### 7.1.2.3.3.2 Conformance requirement

That the UE selects UpPCH codes and UpPCH sub-channels that are defined for the ASC that the UE should adopt based on its AC (when the RACH message to be transmitted is an 'RRC Connection Request'). Parameters are defined in the SIB 5 messages received by the UE.

Reference(s)

TS25.224 clauses 4.7.1 and 5.6.

TS25.321 clause 11.2.3.

##### 7.1.2.3.3.3 Test Purpose

To verify that the UE selects UpPCH codes and sub-channels that are allocated to the ASC that the UE should adopt based on its AC.

##### 7.1.2.3.3.4 Method of test

Initial conditions

The UE is attached to the network and in idle mode. The Sim card should be configured so that the UE can adopt a known ASC based on its AC. The SS will broadcast SIB 5 messages that allocate to each ASC subsets of the total UpPCH codes and sub-channels.

Related ICS/IXT Statement(s)

TBD

Foreseen Final State of the UE

The same as the initial condition.

Test procedure

The test procedure is similar to that specified for test 7.1.2.1.3. In place of power level the test monitors the UpPCH codes that are used for the UE's UpPCH transmissions and the sub-channels in which they are made.

a) The SS pages the UE to initiate the RACH access procedure;

b) The SS does not respond to UpPCH transmissions received from the UE;

c) The SS identifies the UpPCH codes on which the UE transmits;

d) The SS identifies the system frame numbers of the frames in which the UE's UpPCH transmissions are received;

e) The procedure is continued until the maximum permitted power ramping cycles, and within each power ramping cycle, the maximum number of UpPCH transmissions have been made.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <– | PAGE | |
| 2 | | -> | UpPCH | Code and sub-channel should be valid. |
| 3 | | -> | UpPCH | Code and sub-channel should be valid. |
| 4 | | | …… | |
| 5 | | -> | UpPCH | Code and sub-channel should be valid. |
| 6 | | -> | UpPCH | Code and sub-channel should be valid. |
| 7 | | -> | UpPCH | Code and sub-channel should be valid. |
| 8 | | | …… | |
| 9 | | -> | UpPCH | Code and sub-channel should be valid. |

#### 7.1.2.3.3.5 Test Requirements

The UpPCH transmissions should be made in sub-channels and using codes that are allocated to the ASC that the UE should adopt based on its AC.

### 7.1.2.4 Correct Detection and Response to FPACH (1.28 Mcps TDD option)

#### 7.1.2.4.1 Definition and applicability

All TDD 1,28 Mcps UE.

#### 7.1.2.4.2 Conformance requirement

That the UE:

1. Receives and acts upon an FPACH message transmitted within WT sub-frames of the UE transmitting a UpPCH code, provided that:
   - The FPACH was transmitted in the FPACH resource associated with the UpPCH code used by the UE; and
   - The FPACH message correctly identifies the UpPCH codes identity and the number of sub-frames between the UpPCH and the FPACH transmissions.
2. Responds to the valid FPACH by transmitting an 'RRC Connection Request' message in the PRACH resources associated with the FPACH. The transmission should:
   - Occupy the PRACH resource associated with the FPACH and the sub-channel in which the FPACH was received for the duration of the TTI;
   - Be made with a timing correction and a transmission power that are based on information received in the FPACH.
3. Does not respond to FPACH messages that are transmitted, within WT sub-frames of the UE UpPCH transmission, in FPACH resources that are not associated with the UpPCH code that the UE used. Nor should it respond to FPACH messages that are received on the correct FPACH resources within WT sub-frames but which contain the incorrect UpPCH code identifier or an incorrect indication of the number of sub-frames elapsed between the UpPCH and FPACH transmissions.

Reference(s)

TS 25.224 clauses 4.7.1, 5.2.3, 5.6.

TS 25.331 clause 8.5.7.

TS 25.321 clause 11.2.3.

#### 7.1.2.4.3 Test Purpose

To verify that:

- The UE does not respond to FPACH transmissions that are either, received on incorrect FPACH resources, or are received on correct resources and within WT sub-frames of the UpPCH transmission, but which do not contain the correct UpPCH identity or elapsed sub-frames.
- The UE does respond to an FPACH transmission that is received, within WT sub-frames of the UpPCH transmission, on the correct FPACH resources for the UpPCH code that was used, provided that the FPACH contains the identity of the UpPCH code and the number of sub-frames elapsed between the UpPCH and the FPACH transmissions.
- The UE response is to transmit an 'RRC Connection Request' message on the PRACH resources that are associated with the FPACH taking account of the timing correction and power adjustment parameters received in the FPACH.

#### 7.1.2.4.4 Method of test

##### Initial conditions

The UE is attached to the network and in idle mode. The SS BCH SIB 5 message will specify that there are two or more FPACH associated with the UpPCH code set in a single PRACH system information. The UpPCH code set must include one or more odd and one or more even numbered codes.

##### Related ICS/IXT Statement(s)

TBD

##### Foreseen Final State of the UE

The same as the initial condition.

##### Test procedure

The test procedure consists of a number of stages:

a) The SS pages the UE to initiate RACH access.

b) When UpPCH transmissions are received from the UE the SS should transmit FPACH responses within WT sub-frames of each UpPCH transmission but on an incorrect FPACH resource for the UpPCH code used. It is noted that the UE may change the code used for each UpPCH transmission randomly amongst those available to its ASC.

c) The PRACH resources associated with all of the FPACH should be monitored for a transmission from the UE.

d) The SS pages the UE to initiate RACH access.

e) When UpPCH transmissions are received from the UE the SS should transmit FPACH responses within WT sub-frames of each UpPCH transmission on the correct FPACH resource for the UpPCH code used. The FPACH transmission should contain a signature reference number that is different from that of the UpPCH code that was used by the UE.

f) The PRACH resources associated with all of the FPACH should be monitored for a transmission from the UE.

g) The SS pages the UE to initiate RACH access.

h) When UpPCH transmissions are received from the UE the SS should transmit FPACH responses within WT sub-frames of each UpPCH transmission on the correct FPACH resource for the UpPCH code used. The FPACH transmission should contain a relative sub-frame number that is different from that defined by the elapsed number of frames between the UpPCH and the FPACH transmissions.

i) The PRACH resources associated with all of the FPACH should be monitored for a transmission from the UE.

j) The SS pages the UE to initiate RACH access.

k) When UpPCH transmissions are received from the UE the SS should transmit an FPACH response on the correct FPACH resources for the UpPCH code that was used by the UE. The FPACH response should include correct values for the signature reference and relative sub-frame number fields. The FPACH should also include known entries for the Received starting position of the UpPCH ($UpPCH_{POS}$) and the Transmit Power Level Command for RACH ($PRX_{PRACHdes}$) fields.

l) The SS should monitor the PRACH resources associated with the FPACH commencing two or three sub-frames (depending upon the sub-frame in which the FPACH was transmitted and the length of the TTI) following the sub-frame in which the FPACH was transmitted and continuing for the number of sub-frames in the RACH TTI. The power level of the PRACH transmissions and the time of arrival of their mid-ambles should be measured. The SS should continue to monitor the UpPCH slot to ensure that the UE has ceased UpPCH transmissions.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | PAGE | |
| 2 | | -> | UpPCH | |
| 3 | | <- | FPACH | Incorrect FPACH resources |
| 4 | | -> | UpPCH | |
| 5 | | | ……. | |
| 6 | | <- | PAGE | |
| 7 | | -> | UpPCH | |
| 8 | | <- | FPACH | Incorrect signature reference |
| 9 | | -> | UpPCH | |
| 10 | | | …… | |
| 11 | | <- | PAGE | |
| 12 | | -> | UpPCH | |
| 13 | | <- | FPACH | Incorrect relative sub-frame number |
| 14 | | -> | UpPCH | |
| 15 | | | ……. | |
| 16 | | <- | PAGE | |
| 17 | | -> | UpPCH | |
| 18 | | <- | FPACH | Correct resources and information fields |
| 19 | | -> | RRC Connection Request | $P_{PRACH} = L_{PCCPCH} + PRX_{PRACHdes} +(i-1)*Pwr_{ramp}$, $UpPCH_{ADV} + UpPCH_{POS}$- 8×16Tc |

### 7.1.2.4.5 Test Requirements

The UE should not respond to FPACH transmissions, which are made on the incorrect FPACH resources for the UpPCH code that the UE uses. The UE should continue to transmit UpPCH until the permitted maximum number of power ramping cycles is complete.

The UE should not respond to FPACH transmissions which are made within WT sub-frames of a UpPCH transmission and on the correct FPACH resources for the UpPCH code that it used if the FPACH contains either an incorrect signature reference number or an incorrect relative sub-frame number. The UE should continue to transmit UpPCH until the permitted maximum number of power ramping cycles is complete.

The UE should respond to an FPACH received within WT sub-frames of a UpPCH transmission if the FPACH is received on the correct FPACH resources for the UpPCH code used and if it contains valid information fields. The UE should cease transmitting UpPCH bursts and transmit an RRC Connection Request message using the PRACH resources that are associated with the FPACH and the sub-frame in which the FPACH was received. The transmission should commence two or three sub-frames after that containing the FPACH (dependent upon the sub-frame in which the FPACH was transmitted and the length of the TTI) and is made in all sub-frames within the TTI. Each PRACH burst should be made using the transmission power:

$$P_{PRACH} = L_{PCCPCH} + PRX_{PRACHdes} + (i-1)*Pwr_{ramp}$$

Where i is the number of transmission attempts on UpPCH, i=1…Max SYNC_UL Transmissions.When the power used by the UE for the UpPCH transmission acknowledged by the FPACH was:

$$P_{UpPCH} = L_{PCCPCH} + PRX_{UpPCHdes} +(i-1)*Pwr_{ramp}$$

And $PRACH_{ADV}$,i.e., the offset from the start of the PRACH slot of the UE's transmission measured by SS shall be

$UpPCH_{ADV}$+$UpPCH_{POS}$ - 8×16Tc chips, to an accuracy of 1/8 chip.

Where $UpPCH_{ADV}$ denotes the offset from the start of the UpPCH slot of the UE's transmission measured by SS and $UpPCH_{POS}$ is the timing correction signalled to the UE in the FPACH.

## 7.1.2.4a Access Service class selection for RACH transmission

### 7.1.2.4a.1 Definition and applicability

All UE.

### 7.1.2.4a.2 Conformance requirement

The following ASC selection scheme shall be applied, where NumASC is the highest available ASC number and MinMLP the highest logical channel priority assigned to one logical channel:

- In case all TBs in the TB set have the same MLP, select ASC=min(NumASC, MLP).
- In case TBs in a TB set have different priority, determine the highest priority level MinMLP and select ASC=min(NumASC, MinMLP).

Reference(s)

TS 25.321 clause 11.2.1.

### 7.1.2.4a.3 Test purpose

To verify that MAC selects ASC correctly.

### 7.1.2.4a.4 Method of test

Initial conditions

System Simulator:

- SYSTEM INFORMATION BLOCK TYPE 7 (see specific message contents).
- 1 cell, default parameters, Ciphering Off.

User Equipment:

- The UE shall operate under normal test conditions, Ciphering Off.
- The Test-USIM shall be inserted

  The SS starts broadcasting the System Information as specified in TS 34.108 clause 6.1, using the configuration for the PRACH and SCCPCH (signalled in SYSTEM INFORMATION BLOCK types 5 and 6) as follows:

  1. The SCCPCH is configured as specified in TS 34.108 clause 6.10.2.4.3.3 (Interactive/Background 32 kbps RAB + SRB for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH).
  2. The PRACH is configured as specified in TS 34.108 clause 6.10.2.4.4.1.

  The SS follows the procedure in TS 34.108 clause 7.4.2.6 (initiated by Mobile Terminated connection) so that the UE shall be in state BGP 6-11 (PS-DCCH+DTCH_FACH) with the following exceptions:

  1. The MAC Logical channel Priority (MLP) of the user RB is set to 8.
  2. The Timer Poll for RB20 will be Omitted in Radio Bearer Setup message to UE.

The user RB is placed into loop-back mode 1 each with the UL SDU size set to 39 bytes.

Related ICS/IXIT Statement(s)

TBD

Foreseen Final State of the UE

Test procedure

a) The SS sends 1 RLC SDU of size 10 bytes on the downlink user RB.

The SS waits to receive uplink data on RACH TrCH via the user RB.

Note: As all access slots are allowed, correct reception of loop backed PDU by SS, implicitly checks correct selection of ASC.

b) The SS reconfigures the transmitted system information as follows:

Only one ASC setting (ASC#0) is defined, with default parameters, except that the parameter "Assigned sub channel number" is set as follows:

ASC#0 Assigned sub channel number = '0010'B

The available sub-channel number defined in system information is set to '1111 1111 1111'B (default parameter setting). Note: this value allows RACH transmission on any sub-channel defined by "Assigned sub channel number" above.

The SS then updates System Information Block 6, sends a SYSTEM INFORMATION CHANGE INDICATION message to the UE and waits 10 s for the UE to take the system information change into account.

c) The SS sends 1 RLC SDU of size 10 bytes on the downlink user RB.

d) The SS waits to receive uplink data on RACH TrCH via the user RB, then checks that the access slots and preamble signatures used correspond to ASC#0, i.e. the access slot selected for the first access preamble can be any of the shaded table entries given below for ASC#0, depending on SFN. The acces slot used for the Message part shall be the access slot used for preamble (for which SS ACK's) + 3. (Note: the table entries which are not shaded are not allowed for ASC#0):

| SFN modulo 8 of corresponding P-CCPCH frame | **Sub-channel number** | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 |
| 0 | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | | | | |
| 1 | 12 | 13 | 14 | | | | | | 8 | 9 | 10 | 11 |
| 2 | | | | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | |
| 3 | 9 | 10 | 11 | 12 | 13 | 14 | | | | | | 8 |
| 4 | 6 | 7 | | | | | 0 | 1 | 2 | 3 | 4 | 5 |
| 5 | | | 8 | 9 | 10 | 11 | 12 | 13 | 14 | | | |
| 6 | 3 | 4 | 5 | 6 | 7 | | | | | 0 | 1 | 2 |
| 7 | | | | | | 8 | 9 | 10 | 11 | 12 | 13 | 14 |

e) The SS reconfigures the transmitted system information as follows:

Four ASC settings (ASC#0 to ASC#3) are defined (with default parameters), except that the parameter assigned sub channel number is set as follows:

ASC#0 Assigned sub channel number = '0100'B

ASC#1 Assigned sub channel number = '0001'B

ASC#2 Assigned sub channel number = '0010'B

ASC#3 Assigned sub channel number = '0000'B (i.e. no sub channel is assigned)

The available sub-channel number defined in system information is set to '1111 1111 1111'B (default parameter setting). Note: this value allows RACH transmission on all sub-channels defined by "Assigned sub channel number" above.

The SS then updates System Information Block 6, sends a SYSTEM INFORMATION CHANGE INDICATION message to the UE and waits 10 s for the UE to take the system information change into account.

f) The SS sends 1 RLC SDU of size 10 bytes on the downlink user RB.

g) The SS waits 10 s to ensure no uplink data is received on RACH TrCH via the user RB.

h) The SS then reconfigures the uplink user RB to have a MAC Logical channel Priority of 1 by sending Radio Bearer Reconfiguration message on the DCCH using UM RLC.

i) The SS sends 1 RLC SDU of size 10 bytes on the downlink user RB.

j) The SS waits to receive uplink data on RACH TrCH via the user RB, then checks that the access slots and preamble signatures used correspond to ASC#1, i.e. the access slot selected for the first access preamble can be any of the shaded table entries given below for ASC#1, depending on SFN. The acces slot used for the Message part shall be the access slot used for preamble (for which SS ACK's) + 3.SS will receive 2 loop backed PDU's. One the loop backed PDU of step I, and the second one due to RLC layer transmission/retransmission of loop backed PDU of step f. As 'In sequence Delivery' will be enabled, the loop backed PDU of step f shall arrive before loop backed PDU of step i. (Note: the table entries which are not shaded are not allowed for ASC#1):

| SFN modulo 8 of corresponding P-CCPCH frame | **Sub-channel number** | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 |
| 0 | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | | | | |
| 1 | 12 | 13 | 14 | | | | | | 8 | 9 | 10 | 11 |
| 2 | | | | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | |
| 3 | 9 | 10 | 11 | 12 | 13 | 14 | | | | | | 8 |
| 4 | 6 | 7 | | | | | 0 | 1 | 2 | 3 | 4 | 5 |
| 5 | | | 8 | 9 | 10 | 11 | 12 | 13 | 14 | | | |
| 6 | 3 | 4 | 5 | 6 | 7 | | | | | 0 | 1 | 2 |
| 7 | | | | | | 8 | 9 | 10 | 11 | 12 | 13 | 14 |

k) The SS may optionally release the radio bearer.

Expected sequence

| **Step** | **Direction** | | **Message** | **Comments** |
|---|---|---|---|---|
| | **UE** | **SS** | | |
| 1 | ← | | RLC PDU | |
| 1a | → | | RLC PDU | |
| 2 | ← | | SYSTEM INFORMATION CHANGE INDICATION | Modified system information |
| 3 | ← | | RLC PDU | |
| 4 | → | | RLC PDU | SS checks ASC parameters (ASC#0) |
| 5 | ← | | SYSTEM INFORMATION CHANGE INDICATION | Modified system information |
| 6 | ← | | RLC PDU | |
| 6a | | | | SS waits to check no RLC PDUs are received |
| 7 | ← | | RB RECONFIGURATION | User RB MLP = 1 |
| 7a | → | | RLC PDU | Optional step, see note 1<br>SS checks ASC parameters (ASC#1)(transmission/retransmission of loop backed PDU of step 6) |
| 7b | → | | RB RCONFIGURATION COMPLETE | |
| 7c | → | | RLC PDU | Optional step, see note 1<br>SS checks ASC parameters (ASC#1)(transmission/retransmission of loop backed PDU of step 6) |
| 8 | ← | | RLC PDU | |
| 8a | → | | RLC PDU | Optional step, see note 1<br>SS checks ASC parameters (ASC#1) (transmission/retransmission of loop backed PDU of step 6) |
| 9 | → | | RLC PDU | SS checks ASC parameters (ASC#1) |
| 10 | ↔ | | RB RELEASE | optional |
| Note 1: Loop backed RLC PDU of step 6 can be received either at step 7a or at step 7c or at step 8a | | | | |

Specific Message Contents

System Information Block type 7

Use the same System Information Block Type 7 message as found in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - PRACHs listed in system information block type6<br>- Dynamic persistence level | <br>2 |

System Information Block type 6 (Step 2)

Use the same System Information Block Type 6 message as found in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - PRACH system information list | |
| - PRACH system information | |
| - PRACH info | |
| - CHOICE mode | FDD |
| - Available Signature | '0000 0000 1111 1111'B |
| - Available SF | 64 |
| - Preamble scrambling code number | 0 |
| - Puncturing Limit | 1.00 |
| - Available Sub Channel number | '1111 1111 1111'B |
| - Transport Channel Identity | 15 |
| - RACH TFS | |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC size | 168 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 1 |
| - CHOICE Mode | FDD |
| - CHOICE Logical Channel List | Configured |
| - RLC size | 360 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 1 |
| - CHOICE Mode | FDD |
| - CHOICE Logical Channel List | Configured |
| - Semi-static Transport Format information | |
| - Transmission time interval | 20 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 150 |
| - CRC size | 16 |
| - RACH TFCS | |
| - CHOICE TFCI signalling | Normal |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS complete reconfiguration information | |
| - CHOICE CTFC Size | 2 bit |
| - CTFC information | 0 |
| - Power offset information | |
| - CHOICE Gain Factors | Computed Gain Factor |
| - Reference TFC ID | 0 |
| - CHOICE Mode | FDD |
| - Power offset Pp-m | 0 dB |
| - CTFC information | 1 |
| - Power offset information | |
| - CHOICE Gain Factors | Signalled Gain Factor |
| - CHOICE mode | FDD |
| - Gain factor ßc | 11 |
| - Gain factor ßd | 15 |
| - Reference TFC ID | 0 |
| - CHOICE Mode | FDD |
| - Power offset Pp-m | 0 dB |
| - PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 |
| - Available signature End Index | 7 |
| - Assigned Sub-Channel Number | '0010'B<br>The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - Persistence scaling factor | Not Present |
| - AC-to-ASC mapping table | |
| - AC-to-ASC mapping | 0 (AC0-9) |
| - AC-to-ASC mapping | 0 (AC10) |

| | |
|---|---|
| - AC-to-ASC mapping | 0 (AC11) |
| - AC-to-ASC mapping | 0 (AC12) |
| - AC-to-ASC mapping | 0 (AC13) |
| - AC-to-ASC mapping | 0 (AC14) |
| - AC-to-ASC mapping | 0 (AC15) |
| - CHOICE mode | FDD |
| - Primary CPICH TX power | 31 |
| - Constant value | -10 |
| - PRACH power offset | |
| - Power Ramp Step | 3dB |
| - Preamble Retrans Max | 4 |
| - RACH transmission parameters | |
| - Mmax | 2 |
| - NB01min | 3 slot |
| - NB01max | 10 slot |
| - AICH info | |
| - Channelisation code | 3 |
| - STTD indicator | FALSE |
| - AICH transmission timing | 0 |

RADIO BEARER RECONFIGURATION (FDD) (Step 7)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_FACH from CELL_FACH in PS" as found inclause 9 of TS 34.108, with the following exceptions:

| | |
|---|---|
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |

### 7.1.2.4a.5 Test requirements

In step 1a, SS implicitly checks ASC parameters by receiving correctly the loop backed PDU.

In step 4, the access slots and preamble signatures used on the PRACH TrCH on which the RLC PDU was received shall correspond to configured legal values for the allowed ASC#0.

In step 6a, no PDUs shall be received on PRACH.

In step 9, the access slots and preamble signatures used on the PRACH TrCH on which the RLC PDU was received shall correspond to configured legal values for the allowed ASC#1.

#### 7.1.2.5 Void

NOTE Test case "Control of RACH transmissions for FDD mode" has been removed as the test purpose is implicitely tested by radio resource management test case in TS 34.121 clause 8.4.2.3.

### 7.1.3 Priority handling between data flows of one UE

#### 7.1.3.1 Priority handling between data flows of one UE

##### 7.1.3.1.1 Definition and applicability

##### 7.1.3.1.2 Conformance requirement

When selecting between the Transport Format Combinations in the given Transport FormatCombination Set, priorities of the data flows to be mapped onto the corresponding Transport Channels can be taken into account.

The chosen TFC shall be selected from within the set of valid TFCs and shall satisfy the following criteria in the order in which they are listed below:

1. No other TFC shall allow the transmission of more highest priority data than the chosen TFC.
2. No other TFC shall allow the transmission of more data from the next lower priority logical channels. Apply this criterion recursively for the remaining priority levels.
3. No other TFC shall have a lower bit rate than the chosen TFC.

The above rules for TFC selection in the UE shall apply to DCH, and the same rules shall apply for TF selection on RACH.

Reference(s)

TS 25.301 clause 5.3.1.2.

TS 25.321, clause 11.4.

##### 7.1.3.1.3 Test purpose

To verify that the UE prioritise signalling compared to data on a lower priority logical channel.

##### 7.1.3.1.4 Method of test

Initial conditions

System Simulator:

- 1 cell, default parameters, Ciphering Off.

User Equipment:

- The UE shall operate under normal test conditions, Ciphering Off.
- The Test-USIM shall be inserted.

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 7-bit "Length Indicator" tests described in 3G TS 34.108 clause 6.11.1 is used.

For radio bearer setup the following settings shall be used in both CS and PS mode:

- Re-establishment Timer: useT314
- MAC logical channel priority: 7
- UL Logical Channel Identity:7

- DL Logical Channel Identity:7

Let UM_7_PayloadSize denote the RAB payload size in octets.

Related ICS/IXIT Statement(s)

None

Test procedure

a The SS closes the test loop using UE test loop mode 1 with the UL SDU size set to (UM_7_PayloadSize * 25) - 2 bytes. See note 1.

b. The SS transmits a TRANSPORT FORMAT COMBINATION CONTROL message using AM_RLC on the DCCH, which indicates that only transport format minimum set is allowed on the uplink for DCH transport channel on the DTCH. I.e. the restricted uplink transport format set shall be (DCCH, UM RLC 7 bit LI RB)=(TF0, TF0), (TF1, TF0) and (TF0, TF1).

c. The SS transmits a MEASUREMENT CONTROL message requesting periodic reporting with a period of 250ms.

d. The SS sends one RLC SDUs of size floor (UM_7_PayloadSize) - 1 bytes to the UE. The UE is expected to loop this data back in one RLC SDU, segmented into a total of 25 RLC PDUs.

e. The SS waits until data is returned in uplink.

f. The SS checks that the UE transmits alternating measurement reports and data.

Note 1: Having UE to return 25 PDUs corresponds to 25*TTI (40 ms) = 1 second of continous data transmission. SDU size shall be (UM_7_PayloadSize * 25) - 2 to account for presence of Special “Length Indicator” indicating “beginning of an SDU” in the first PDU for a Rel5 and later UE and presence of Special “Length Indicator” indcating end of SDU in the last PDU. As the periodic measurement interval is 250ms this will guarantee that data transmission will be interupted by transmission of measurement reports in uplink.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 2 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 3 | <-- | | RADIO BEARER SETUP (DCCH) | RRC |
| 4 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 5 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1 with UL RLC SDU size parameter set to achieve UE to transmit 25 PDUs in uplink. |
| 6 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 7 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to transport format minimum set (DCCH, AM RLC 7 bit LI RB)=(TF0, TF0), (TF1, TF0) and (TF0, TF1). |
| 8 | <-- | | MEASUREMENT CONTROL (DCCH) | SS sends a MEASUREMENT CONTROL message requesting periodic reporting at 250 ms interval. |
| 9 | <-- | | Downlink RLC PDU | SS sends a SDU fit into one PDU. |
| 10 | --> | | Uplink RLC PDUs | SS starts receiving RLC PDUs from the UE on the UM RLC RB |
| 11 | --> | | MEASUREMENT REPORT (DCCH) | SS checks that at least one MEASUREMENT REPORT message is received within 500 ms (=2 x reporting interval) |
| 12 | --> | | Uplink RLC PDUs | SS checks that UE resumes returning RLC PDUs from the UE on the UM RLC RB |

#### 7.1.3.1.5 Test requirements

1. After step 10 the UE shall transmit a MEASUREMENT REPORT message within 500 ms.
2. After step 11 the UE shall resume data transmission.

### 7.1.3.2 TFC Selection

#### 7.1.3.2.1 Definition and applicability

All UEs

#### 7.1.3.2.2 Conformance requirement

Before selecting a TFC, i.e. at every boundary of the shortest TTI, or prior to each transmission on PRACH the set of valid TFCs shall be established. All TFCs in the set of valid TFCs shall:

1. belong to the TFCS.

1a. not be restricted by higher layer signalling (e.g. TFC Control, see [7]).

2. not be in the Blocked state.
3. be compatible with the RLC configuration.
4. not require RLC to produce padding PDUs (see [6] for definition).
5. not carry more bits than can be transmitted in a TTI (e.g. when compressed mode by higher layer scheduling is used and the presence of compressed frames reduces the number of bits that can be transmitted in a TTI using the Minimum SF configured).

[...]

The chosen TFC shall be selected from within the set of valid TFCs and shall satisfy the following criteria in the order in which they are listed below:

1. No other TFC shall allow the transmission of more highest priority data than the chosen TFC.
2. No other TFC shall allow the transmission of more data from the next lower priority logical channels. Apply this criterion recursively for the remaining priority levels.
3. No other TFC shall have a lower bit rate than the chosen TFC.

In FDD mode the above rules for TFC selection in the UE shall apply to DCH, and the same rules shall apply for TF selection on RACH.

[...]

Reference(s)

TS 25.301 clause 5.3.1.2.

TS 25.321, clause 11.4.

#### 7.1.3.2.3 Test purpose

1. To verify that the UE supports a TFCS that does not allow simultaneus transmission of max data rate on all transport channels.

2. To verify that the UE selects a TFC according to the rule that no other TFC shall allow the transmission of more highest priority data than the chosen TFC.

3. To verify that the UE selects a TFC according to the rule that no other TFC shall allow the transmission of more data from the next lower priority logical channels.

#### 7.1.3.2.4 Method of test

Initial conditions

System Simulator:

- 1 cell, default parameters, Ciphering Off.

User Equipment:

- The UE shall operate under normal test conditions, Ciphering Off.
- The Test-USIM shall be inserted.

RRC Connection Sestup procedure is executed with the following exeception for SRB 2

| Parameter | Value |
|---|---|
| Polling Info | |
| - Timer poll prohibit | 500 |

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the following exceptions:

A radio bearer configuration for "Streaming / unknown / UL:16 DL:64 kbps / PS RAB + Interactive or background / UL:16 DL:64 kbps / PS RAB + UL:13.6 DL:13.6 kbps SRBs for DCCH" is configured. This is a modified version of the radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.58 (FDD) clause 6.10.3.4.1.58 (3.85 Mcps TDD) for "Streaming / unknown / UL:16 DL:64 kbps / PS RAB + Interactive or background / UL: 8 DL: 8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH" RAB with the following modifications:

NOTE This radio bearer configuration has been selected to provide for a representative test scenario for how UTRAN configures the TFCS such that the data rate can be increased on one transport channel when there is no (or low) activity on the other transport channels, e.g. to provide for improved signalling performance (13.6 kbps) when there is no data transmitted.

Uplink Transport channel parameters for Streaming / unknown / UL:16 kbps / PS RAB

| Higher layer | RAB/Signalling RB | | **RAB** |
|---|---|---|---|
| RLC | Logical channel type | | DTCH |
| | RLC mode | | AM |
| | Payload sizes, bit | | 320 |
| | Max data rate, bps | | 16000 |
| | AMD PDU header, bit | | 16 |
| MAC | MAC header, bit | | 0 |
| | MAC multiplexing | | N/A |
| Layer 1 | TrCH type | | DCH |
| | TB sizes, bit | | 336 |
| | TFS | TF0, bits | 0x336 |
| | | TF1, bits | 1x336 |
| | TTI, ms | | 20 |
| | Coding type | | TC |
| | CRC, bit | | 16 |
| | Max number of bits/TTI after channel coding | | 1068 |
| | Uplink: Max number of bits/radio frame before rate matching | | 534 |
| | RM attribute | | 135-175 |

Uplink Transport channel parameters for Interactive or background / UL:16 kbps / PS RAB

| Higher layer | RAB/Signalling RB | | **RAB** |
|---|---|---|---|
| RLC | Logical channel type | | DTCH |
| | RLC mode | | AM |
| | Payload sizes, bit | | 320 |
| | Max data rate, bps | | 16000 |
| | AMD PDU header, bit | | 16 |
| MAC | MAC header, bit | | 0 |
| | MAC multiplexing | | N/A |
| Layer 1 | TrCH type | | DCH |
| | TB sizes, bit | | 336 |
| | TFS | TF0, bits | 0x336 |
| | | TF1, bits | 1x336 |
| | | TF2, bits | 2x336 |
| | TTI, ms | | 40 |
| | Coding type | | TC |
| | CRC, bit | | 16 |
| | Max number of bits/TTI after channel coding | | 2124 |
| | Uplink: Max number of bits/radio frame before rate matching | | 531 |
| | RM attribute | | 135-175 |

Uplink Transport channel parameters for UL:13.6 kbps SRBs for DCCH

| | | | | | | |
|---|---|---|---|---|---|---|
| Higher layer | RAB/signalling RB | | **SRB#1** | **SRB#2** | **SRB#3** | **SRB#4** |
| | User of Radio Bearer | | RRC | RRC | NAS_DT High prio | NAS_DT Low prio |
| RLC | Logical channel type | | DCCH | DCCH | DCCH | DCCH |
| | RLC mode | | UM | AM | AM | AM |
| | Payload sizes, bit | | 136 | 128 | 128 | 128 |
| | Max data rate, bps | | 13600 | 12800 | 12800 | 12800 |
| | AMD/UMD PDU header, bit | | 8 | 16 | 16 | 16 |
| MAC | MAC header, bit | | 4 | 4 | 4 | 4 |
| | MAC multiplexing | | 4 logical channel multiplexing | | | |
| Layer 1 | TrCH type | | DCH | | | |
| | TB sizes, bit | | 148 (alt 0, 148) | | | |
| | TFS | TF0, bits | 0x148 (alt 1x0) | | | |
| | | TF1, bits | 1x148 | | | |
| | | TF2, bits | 2x148 | | | |
| | | TF3, bits | 4x148 | | | |
| | TTI, ms | | 40 | | | |
| | Coding type | | CC 1/3 | | | |
| | CRC, bit | | 16 | | | |
| | Max number of bits/TTI before rate matching | | ~2064 | | | |
| | Uplink: Max number of bits/radio frame before rate matching | | ~516 | | | |
| | RM attribute | | 155-185 | | | |

Uplink TFCS

| | |
|---|---|
| TFCS size | 15 |
| TFCS | (Streaming RAB, Interactive RAB, DCCH)=<br>(TF0,TF0,TF0), (TF1,TF0,TF0), (TF0,TF1,TF0), (TF0,TF2,TF0), (TF1,TF1,TF0),<br>(TF0,TF0,TF1), (TF1,TF0,TF1), (TF1,TF0,TF2), (TF1,TF0,TF3), (TF0,TF1,TF1), (TF0,TF1,TF2),<br>(TF0,TF1,TF3), (TF1,TF1,TF1),<br>(TF0,TF0,TF2), (TF0,TF0,TF3) |

Uplink Physical channel parameters (FDD)

| | | |
|---|---|---|
| DPCH Uplink | Min spreading factor | 32 |
| | Max number of DPDCH data bits/radio frame | 1200 |
| | Puncturing Limit | 1.0 |

Uplink Physical channel parameters (3.84Mcps TDD)

| | | |
|---|---|---|
| DPCH Uplink | Midamble | 512 chips |
| | Codes and time slots | SF8 x 1 code x 1 time slot +<br>SF16 x 1code x 1 time slot |
| | Max. Number of data bits/radio frame | 696 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.72 (alt. 0.68) |

Downlink Transport channel parameters for Streaming / unknown / DL:64 kbps / PS RAB

| Higher layer | RAB/Signalling RB | | **RAB** |
|---|---|---|---|
| RLC | Logical channel type | | DTCH |
| | RLC mode | | AM |
| | Payload sizes, bit | | 640 |
| | Max data rate, bps | | 64000 |
| | AM PDU header, bit | | 16 |
| MAC | MAC header, bit | | 0 |
| | MAC multiplexing | | N/A |
| Layer 1 | TrCH type | | DCH |
| | TB sizes, bit | | 656 |
| | TFS | TF0, bits | 0x656 |
| | | TF1, bits | 1x656 |
| | | TF2, bits | 2x656 |
| | | TF3, bits | 4x656 |
| | TTI, ms | | 40 |
| | Coding type | | TC |
| | CRC, bit | | 16 |
| | Max number of bits/TTI after channel coding | | 8076 |
| | RM attribute | | 125-165 |

Downlink Transport channel parameters for Interactive or background / DL:64 kbps / PS RAB

| Higher Layer | RAB/Signalling RB | | **RAB** |
|---|---|---|---|
| RLC | Logical channel type | | DTCH |
| | RLC mode | | AM |
| | Payload sizes, bit | | 320 |
| | Max data rate, bps | | 64000 |
| | AMD PDU header, bit | | 16 |
| MAC | MAC header, bit | | 0 |
| | MAC multiplexing | | N/A |
| Layer 1 | TrCH type | | DCH |
| | TB sizes, bit | | 336 |
| | TFS | TF0, bits | 0x336 |
| | | TF1, bits | 1x336 |
| | | TF2, bits | 2x336 |
| | | TF3, bits | 4x336 |
| | | TF4, bits | 8x336 |
| | TTI, ms | | 40 |
| | Coding type | | TC |
| | CRC, bit | | 16 |
| | Max number of bits/TTI after channel coding | | 8460 |
| | RM attribute | | 135-175 |

Downlink Transport channel parameters for DL:13.6 kbps SRBs for DCCH

| Higher layer | RAB/signalling RB | | **SRB#1** | **SRB#2** | **SRB#3** | **SRB#4** |
|---|---|---|---|---|---|---|
| | User of Radio Bearer | | RRC | RRC | NAS_DT High prio | NAS_DT Low prio |
| RLC | Logical channel type | | DCCH | DCCH | DCCH | DCCH |
| | RLC mode | | UM | AM | AM | AM |
| | Payload sizes, bit | | 136 | 128 | 128 | 128 |
| | Max data rate, bps | | 13600 | 12800 | 12800 | 12800 |
| | AMD/UMD PDU header, bit | | 8 | 16 | 16 | 16 |
| MAC | MAC header, bit | | 4 | 4 | 4 | 4 |
| | MAC multiplexing | | 4 logical channel multiplexing | | | |
| Layer 1 | TrCH type | | DCH | | | |
| | TB sizes, bit | | 148 (alt 0, 148) (note) | | | |
| | TFS | TF0, bits | 0x148 (alt 1x0) (note) | | | |

| | | | |
|---|---|---|---|
| | | TF1, bits | 1x148 |
| | | TF2, bits | 2x148 |
| | | TF3, bits | 4x148 |
| | | | |
| | TTI, ms | | 40 |
| | Coding type | | CC 1/3 |
| | CRC, bit | | 16 |
| | Max number of bits/TTI before rate matching | | 2064 |
| | RM attribute | | 155-230 |
| NOTE: alternative parameters enable the measurement "transport channel BLER" in the UE. | | | |

Downlink TFCS

| | |
|---|---|
| TFCS size | 22 |
| TFCS | ((Streaming RAB, Interactive RAB, DCCH)=<br>(TF0,TF0,TF0), (TF1,TF0,TF0), (TF2,TF0,TF0), (TF3,TF0,TF0),<br>(TF0,TF1,TF0), (TF1,TF1,TF0), (TF2,TF1,TF0), (TF3,TF1,TF0),<br>(TF0,TF2,TF0), (TF0,TF3,TF0), (TF0,TF4,TF0),<br>(TF0,TF0,TF1), (TF1,TF0,TF1), (TF2,TF0,TF1), (TF3,TF0,TF1),<br>(TF0,TF1,TF1), (TF1,TF1,TF1), (TF2,TF1,TF1), (TF3,TF1,TF1),<br>(TF0,TF0,TF2), (TF3, TF0, TF2), (TF0,TF0,TF3) |

Downlink Physical channel parameters (FDD)

| | | | |
|---|---|---|---|
| DPCH Downlink | DTX position | | Flexible |
| | Spreading factor | | 32 |
| | DPCCH | Number of TFCI bits/slot | 8 |
| | | Number of TPC bits/slot | 4 |
| | | Number of Pilot bits/slot | 8 |
| | DPDCH | Number of data bits/slot | 140 |
| | | Number of data bits/frame | 2100 |

Downlink Physical channel parameters (3.84 Mcps TDD)

| | | |
|---|---|---|
| DPCH Downlink | Midamble | 256 chips |
| | Codes and time slots | SF16 x 6 codes x 1 time slot |
| | Max. Number of data bits/radio frame | 1640 bits |
| | TFCI code word | 16 bits |
| | Puncturing limit | 0.64 |

The logical channel priorities are set according to the following:

| **Radio Bearer** | **Logical Channel Priority** |
|---|---|
| RB1 (DCCH) | 3 |
| RB2 (DCCH) | 3 |
| RB3 (DCCH) | 4 |
| RB4 (DCCH) | 5 |
| RB 5 (streaming/unknown) | 2 |
| RB 6 (Interactive/ background) | 7 |

Let PayloadSize denote the RAB payload size in octets.

Related ICS/IXIT Statement(s)

None

Test procedure

In the following, the Streaming/ unknown radio bearer is denoted RB 5, the Interactive/ background radio bearer is denoted RB 6, the payload size for RB5 is denoted RB5_PayloadSize and the payload size for RB6 is denoted RB6_PayloadSize.

a) The SS closes the test loop using UE test loop mode 1 with the UL SDU size set to (RB5_PayloadSize * 25) - 1 bytes for RB5 and to (RB6_PayloadSize * 25) - 1 bytes for RB6. See note 1.

b) The SS transmits a MEASUREMENT CONTROL message requesting periodic reporting with a period of 250ms.

c) The SS sends two RLC SDUs of size floor ( RB6_PayloadSize) - 1 bytes to the UE on RB 6. The UE is expected to loop this data back in two RLC SDUs, segmented into a total of 50 RLC PDUs.

d) The SS checks that data is returned in uplink

e) The SS waits until a measurement report is received and checks that the UE transmits the measurement report and data on RB6 simultaneously using a TFC that maximises the data rate for the SRB.

f) The SS waits until the UE has looped back all data

g) The SS sends two RLC SDUs of size floor ( RB5_PayloadSize) - 1 bytes to the UE on RB 5. The UE is expected to loop this data back in two RLC SDUs, segmented into a total of 50 RLC PDUs.

h) The SS sends two RLC SDUs of size floor (RB6_PayloadSize) - 1 bytes to the UE on RB 6. The UE is expected to loop this data back in two RLC SDUs, segmented into a total of 50 RLC PDUs.

i) The SS checks that data is returned in uplink on RB5 and RB6 simultaneously.

j) The SS waits until a measurement report is received and checks that during the reception of the measurement report, at least once data is also received on RB5 simultaneously, but not on RB6.

Note 1. Having UE to return 50 PDUs corresponds to 50*TTI (20 ms) = 1 second of continous data transmission. As the periodic measurement interval is 250ms this will guarantee that data transmission will be interupted by transmission of measurement reports in uplink. To keep the uplink SDU size below the limit (1500 octets) of the Max SDU size parameter associated with PDP context establishment then two downlink PDUs is used to generate the 50 uplink PDUs (uplink SDU size= 1000 octets).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <-- | ACTIVATE RB TEST MODE (DCCH) | TC |
| 2 | | --> | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 3 | | <-- | RADIO BEARER SETUP (DCCH) | RRC |
| 4 | | --> | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 5 | | <-- | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1 with UL RLC SDU size parameter for RB5 and RB6 set to achieve UE to transmit 50 PDUs in uplink. |
| 6 | | --> | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 7 | | <-- | MEASUREMENT CONTROL (DCCH) | SS sends a MEASUREMENT CONTROL message requesting periodic reporting at 250 ms interval. |
| 8 | | <-- | 2 x Downlink RLC PDU on RB6 | SS sends two SDUs fit into two PDUs on RB6. |
| 9 | | --> | Uplink RLC PDUs | SS starts receiving RLC PDUs from the UE on RB6 |
| 10 | | --> | MEASUREMENT REPORT (DCCH) | SS checks that at least one MEASUREMENT REPORT message is received within 500 ms (=2 x reporting interval) simultaneous with RB 6 data. |
| 11 | | --> | Uplink RLC PDUs | SS checks that UE continues returning RLC PDUs on RB6 |
| 12 | | <-- | 2 x Downlink RLC PDU on RB5 | SS sends two SDUs fit into two PDUs on RB5. |
| 13 | | <-- | 2 x Downlink RLC PDU on RB6 | SS sends two SDUs fit into two PDUs on RB6. |
| 14 | | --> | Uplink RLC PDUs | SS starts receiving RLC PDUs from the UE on RB5 and RB6 |
| 15 | | --> | MEASUREMENT REPORT (DCCH) and simultaneous data on RB5 and RB6 | SS checks that at least one MEASUREMENT REPORT message is received within 500 ms (=2 x reporting interval) simultaneous with RB 5 data but not on RB6 [Note 1]. |
| 16 | | --> | Uplink RLC PDUs | SS continues receiving RLC PDUs from the UE on RB5 and RB6 |

### 7.1.3.2.5 Test requirements

1. After step 8 the UE shall loopback data on RB6 using the transport format that carries the maximum amount of data (2 PDUs per TTI)

2. After step 10 the UE shall transmit a MEASUREMENT REPORT message within 500 ms.

3. After step 10 and during the reception of the MEASUREMENT REPORT message, data shall also be received on RB6

4. After step 13, the UE shall loopback data simultaneously on RB5 and RB6 using a TFC that carries data for both transport channels.

5. After step 15 the UE shall transmit a MEASUREMENT REPORT message within 500 ms

6. After step 15 and during the reception of the MEASUREMENT REPORT, the UE shall at least once simultaneously transmit data on RB5 but not on RB6 [Note 1].

Note 1: Due to the complexity of test case implementation, the SS verifies at least once that the UE transmits one Measurement report simultaneously with data on RB5 but not on RB6.

## 7.1.4 Control of CPCH transmissions.

### 7.1.4.1 Control of CPCH transmissions for FDD

#### 7.1.4.1.1 Definition and applicability

All UEs which support CPCH.

#### 7.1.4.1.2 Conformance requirement

1. If counter M is not less than N_access_fails, the UE shall execute an access failure error procedure and the CPCH access procedure ends.
2. If the sum of the Frame Count Transmitted counter plus the number of frames in the next TTI is larger than NF_max, the UE shall exit the CPCH transmission procedure.
3. If the CSICH information indicates no PCPCH is available, the UE shall not attempt CPCH access.
4. If the CPCH Persistency levels are all set to 8, the UE shall not attempt CPCH access.
5. If the SS issues an immediate Emergency Stop command in the DL-DPCCH for CPCH, the UE shall abort CPCH access.

Reference(s)

TS 25.321 clause 11.3

TS 25.214 clause 6.

TS 25.211 clause 5.3.3.11.

#### 7.1.4.1.3 Test purpose

To verify that the MAC entity control CPCH transmission correctly.

#### 7.1.4.1.4 Method of test

Initial conditions

System Simulator:

- 1 cell, default parameters, Ciphering Off.

User Equipment:

- The UE shall operate under normal test conditions, Ciphering Off.
- The Test-USIM shall be inserted.

The UE is in Connected mode and a connection is established as described in the TS 34.123-1, clause 7.3 PDCP testing, clause "Setup a UE originated PS session using IP Header compression in AM RLC (using Loop back test mode 1).

Related ICS/IXIT Statement(s)

TBD

Foreseen Final State of the UE

The same as the initial conditions.

Test procedure

a) The SS ends SIBs 7, 8 and 9, sends CSICH information and waits 30 s.

b) The SS configures its RLC entity for"Transparent Mode".

c) The SS sends certain DATA BLOCKS to UE with UE-Id type and UE-Id field.

d) After having received the data block via configured mapped channels, the UE forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its MAC configuration to the SS.

e) The SS receives returned DATA BLOCKS.

f) The SS configures its RLC entity for"AM mode.

g) The SS starts the RB reconfiguration procedure by sending the RADIO BEARER RECONFIGURATION message.

h) After having received the UE confimation for the reconfiguration procedure, the SS configures its RLC entity for"Transparent Mode".

i) The SS sends SIB 8 on BCH with parameter : N_access_fails = 0 and waits 30 s.

j) The SS sends certain DATA BLOCKS.

k) The SS shall not receive any LOOP BACK DATA BLOCKS within 30 s.

l) The SS configures its RLC entity for"AM mode".

m) The SS starts the RB reconfiguration procedure by sending the RADIO BEARER RECONFIGURATION message.

n) The SS receives RADIO BEARER RECONFIGURE COMPLETE.

o) After having received the UE confimation for the reconfiguration procedure, the SS configures its RLC entity for"Transparent Mode".

p) The SS sends SIB 8 on BCH with parameter : NF_max = 0 and waits 30 s.

q) The SS sends certain DATA BLOCKS.

r) The SS shall not receive any returned DATA BLOCKS within 30 s.

s) The SS configures its RLC entity for"AM mode".

t) The SS starts the RB reconfiguration procedure by sending the RADIO BEARER RECONFIGURATION message.

u) The SS receives RADIO BEARER RECONFIGURE COMPLETE.

v) After having received the UE confimation for the reconfiguration procedure, the SS configures its RLC entity for"Transparent Mode".

w) The SS sends SIB 8 on BCH and waits 30 s.

x) The SS continuously sends CSICH information with PCA1=PCA2= NOT AVAILABLE.

y) The SS sends certain DATA BLOCKS.

z) The SS shall not receive any returned DATA BLOCKS within 30 s.

aa) The SS configures its RLC entity for"AM mode".

bb) The SS starts the RB reconfiguration procedure by sending the RADIO BEARER RECONFIGURATION message.

cc) The SS receives RADIO BEARER RECONFIGURE COMPLETE.

dd) After having received the UE confimation for the reconfiguration procedure, the SS configures its RLC entity for"Transparent Mode".

ee) The SS sends CSICH information with PCA1=PCA2= AVAILABLE and the SS PHY is configured to send CPCH Emergency Stop message in all DL DPCCHs for CPCH after N_start_message frames.

ff) The SS sends certain DATA BLOCKS.

gg) The SS shall not receive any returned DATA BLOCKS within 30 s.

hh) The SS configures its RLC entity for"AM mode".

ii) The SS starts the RB reconfiguration procedure by sending the RADIO BEARER RECONFIGURATION message.

jj) The SS receives RADIO BEARER RECONFIGURE COMPLETE.

kk) After having received the UE confimation for the reconfiguration procedure, the SS configures its RLC entity for"Transparent Mode".

ll) The SS sends SIB 9 on BCH with the CPCH persistence levels set to 8, no access allowed.

mm) The SS sends certain DATA BLOCKS.

nn) The SS shall not receive any returned DATA BLOCKS within 30 s.

oo) The SS configures its RLC entity for"AM mode".

pp) The SS starts the RB reconfiguration procedure by sending the RADIO BEARER RECONFIGURATION message.

qq) The SS receives RADIO BEARER RECONFIGURE COMPLETE.

rr) After having received the UE confimation for the reconfiguration procedure, the SS configures its RLC entity for"Transparent Mode".

ss) The SS sends SIB 9 on BCH with the CPCH persistence levels set to 1, immediate access allowed.

tt) The SS sends certain DATA BLOCKS.

uu) The SS receives returned DATA BLOCKS.

vv) The SS configures its RLC entity for"AM mode".

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SIBs 7, 8 and 9 and CSICH information | Containing default settings for CPCH |
| 2 | | | | SS sends CMAC_MAC_HEADER_REQ with disable_mac_header and CRLC_CONFIG_REQ with RLC mode as "Transparent mode". |
| 3 | ← | | DATA BLOCKS | |
| 4 | → | | LOOP BACK DATA BLOCKS | |
| 5 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |
| 6 | ← | | RADIO BEARER RECONFIGURATION | |
| 7 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 8 | | | | SS sends CMAC_MAC_HEADER_REQ with disable_mac_header and CRLC_CONFIG_REQ with RLC mode as "Transparent mode". |
| 9 | ← | | SIB 8 | N_access_fails = 0 |
| 10 | ← | | DATA BLOCK | |
| 11 | | | | The SS can't receive loop back data blocks from UE in 30s. |
| 12 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |
| 13 | ← | | RADIO BEARER RECONFIGURATION | |
| 14 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 15 | | | | SS sends CMAC_MAC_HEADER_REQ with disable_mac_header and CRLC_CONFIG_REQ with RLC mode as "Transparent mode". |
| 16 | ← | | SIB 8 | NF_max = 0 |
| 17 | ← | | DATA BLOCK | UE was trigged to send data block. |
| 18 | | | | The SS can't receive data from UE in 30s |
| 19 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |
| 20 | ← | | RADIO BEARER RECONFIGURATION | |
| 21 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 22 | | | | SS sends CMAC_MAC_HEADER_REQ with disable_mac_header and CRLC_CONFIG_REQ with RLC mode as "Transparent mode". |
| 23 | ← | | SIB 8 and CSICH information | PCA1=PCA2= NOT AVAILABLE |
| 24 | ← | | DATA BLOCK | |
| 25 | | | | The SS can't receive data from UE in 30s |
| 26 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |
| 27 | ← | | RADIO BEARER RECONFIGURATION | |
| 28 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 29 | | | | SS sends CMAC_MAC_HEADER_REQ with disable_mac_header and CRLC_CONFIG_REQ with RLC mode as "Transparent mode". |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 30 | ← | | SIB 8 and CSICH information | PCA1=PCA2=AVAILABLE |
| 31 | | | | SS sends a CPCH-Estop command in all DLDPCCHs for CPCH after N_start_message frames |
| 32 | ← | | DATA BLOCK | |
| 33 | | | | The SS can't receive data from UE in 30s |
| 34 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |
| 35 | ← | | RADIO BEARER RECONFIGURATION | |
| 36 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 37 | | | | SS sends CMAC_MAC_HEADER_REQ with disable_mac_header and CRLC_CONFIG_REQ with RLC mode as "Transparent mode". |
| 38 | ← | | SIB 9 | CPCH Persistence levels set to 8; no access allowed |
| 39 | ← | | DATA BLOCK | |
| 40 | | | | The SS can't receive data from UE in 30s |
| 41 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |
| 42 | ← | | RADIO BEARER RECONFIGURATION | |
| 43 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 44 | | | | SS sends CMAC_MAC_HEADER_REQ with disable_mac_header and CRLC_CONFIG_REQ with RLC mode as "Transparent mode". |
| 45 | ← | | SIB 9 | CPCH Persistence levels set to 1; immediate access allowed |
| 46 | ← | | DATA BLOCK | |
| 47 | → | | LOOP BACK DATA BLOCKS | |
| 48 | | | | SS sends CMAC_MAC_HEADER_REQ with enable_mac_header and CRLC_CONFIG_REQ with RLC mode as "AM mode". |

Specific Message Contents

RADIO BEARER SET UP:

| Information Element | Value/remark |
|---|---|
| RLC info<br>- RLC mode | <br>AM RLC |
| RB mapping info<br>-Downlink<br>- Number of logical channels<br>- Downlink transport channel type | <br><br>1<br>FACH |
| -Uplink<br>- Number of logical channels<br>- Uplink transport channel type | <br>1<br>CPCH |

PRACH persistence level info in System Information Block type 7

| Information Element | Value/Remark |
|---|---|
| PRACHs listed in SIB 5/SIB 5bis<br>- Dynamic persistence level<br><br>PRACHs listed in SIB 6<br>- Dynamic persistence level | <br><br>All set to 8, which maps to minimum persistence value, no access allowed<br><br><br>All set to 8,which maps to minimum persistence value, no access allowed |

CPCH parameters in System Information Block type 8

| Information Element | Value/Remark |
|---|---|
| Back off control parameters | |
| - $N_{ap_retrans_max}$ | 15 |
| - $N_{access_fails}$ | 15 |
| - $NF_{bo_no\ aich}$ | 15 |
| - $NS_{bo_busy}$ | 15 |
| - $NF_{bo_all_busy}$ | 15 |
| - $NF_{bo_mismatch}$ | 15 |
| - $T_{CPCH}$ | 0 |
| Power Control Algorithm | algorithm 1 |
| TPC step size | 1 |
| DL DPCCH BER | 15 |

CPCH set info in System Information Block type 8

| Information Element | Value/Remark |
|---|---|
| AP preamble scrambling code | 16 |
| AP-AICH channelisation code | 15 |
| CD preamble scrambling code | 17 |
| CD/CA-ICH channelisation code | 16 |
| DeltaPp-m | 0 |
| UL DPCCH Slot Format | 1 |
| N_start_message | 8 |
| CPCH status indication mode | PA mode |
| PCPCH Channel #1 info | |
| - UL scrambling code | 18 |
| - DL channelisation code | 15 |
| - PCP length | 8 |
| - UCSM info | |
| - Minimum spreading factor | 64 |
| - NF_max | 64 |
| - AP signature | 15 |
| PCPCH Channel #2 info | |
| - UL scrambling code | 19 |
| - DL channelisation code | 14 |
| - PCP length | 8 |
| - UCSM info | |
| - Minimum spreading factor | 64 |
| - NF_max | 64 |
| - AP signature | 14 |

PCPCH persistence level info in System Information Block type 9

| Information Element | Value/Remark |
|---|---|
| CPCH set persistence levels<br>- PCPCH persistence level | <br>Both set to 1, immediate access allowed |

CSICH Information broadcast by SS PHY

| Information Element | Value/Remark |
|---|---|
| PCPCH Channel Availability (PCA) :<br>-PCA1<br>-PCA2 | <br>Available<br>Available |

#### 7.1.4.1.5 Test requirements

The SS can't receives data blocks from UE when N_access_fails or NF_max set as 0.

The SS can't receives data blocks from UE when NF_max set as 0.

The SS can't receives data blocks from UE when CSICH info indicates channels not available.

The SS can't receives data blocks from UE when CPCH Persistency level set to 8.

The SS can't receives data blocks from UE when Emergency Stop message terminates access.

## 7.1.5 HS-DSCH MAC-hs

### 7.1.5.1 MAC-hs reordering and stall avoidance

#### 7.1.5.1.1 Definition and applicability

All UEs which support HS-PDSCH.

#### 7.1.5.1.2 Conformance requirement

When a MAC-hs PDU with TSN = SN is received:

- If SN is within the receiver window:
  - if SN < next_expected_TSN, or this MAC-hs PDU has previously been received:
    - the MAC-hs PDU shall be discarded.
    - else:
  - the MAC-hs PDU is placed in the reordering buffer at the place indicated by the TSN.
- If SN is outside the receiver window:
  - the received MAC-hs PDU shall be placed above the highest received TSN in the reordering buffer, at the position indicated by SN;
  - RcvWindow_UpperEdge shall be set to SN thus advancing the receiver window;
  - any MAC-hs PDUs with TSN ≤ RcvWindow_UpperEdge – RECEIVE_WINDOW_SIZE, i.e. outside the receiver window after its position is updated, shall be removed from the reordering buffer and be delivered to the disassembly entity;
  - next_expected_TSN shall be set to RcvWindow_UpperEdge – RECEIVE_WINDOW_SIZE + 1;
- All received MAC-hs PDUs with consecutive TSNs from next_expected_TSN (included) up to the first not received MAC-hs PDU are delivered to the disassembly entity.
- next_expected_TSN shall be advanced to the TSN of this first not received MAC-hs PDU.

[...]

If no timer T1 is active:

- the timer T1 shall be started when a MAC-hs PDU with TSN > next_expected_TSN is correctly received.
- T1_TSN shall be set to the TSN of this MAC-hs PDU.

If a timer T1 is already active:

- no additional timer shall be started, i.e. only one timer T1 may be active at a given time.

The timer T1 shall be stopped if:

- the MAC-hs PDU with TSN = T1_TSN can be delivered to the disassembly entity before the timer expires.

When the timer T1expires and T1_TSN > next_expected_TSN:

- all correctly received MAC-hs PDUs with TSN > next_expected_TSN up to and including T1_TSN-1 shall be delivered to the disassembly entity;

- all correctly received MAC-hs PDUs up to the next not received MAC-hs PDU shall be delivered to the disassembly entity.

- next_expected_TSN shall be set to the TSN of the next not received MAC-hs PDU.

When the timer T1 is stopped or expires, and there still exist some received MAC-hs PDUs that can not be delivered to higher layer:

- timer T1 is started

- set T1_TSN to the highest TSN among those of the MAC-hs PDUs that can not be delivered.

[...]

Reference(s)

TS 25.321 clauses 11.6.2.3.1, 11.6.2.3.2

#### 7.1.5.1.3 Test purpose

1. To confirm that the UE performs MAC-hs reordering and delivers RLC PDUs in order to RLC.

2. To confirm that the UE performs stall avoidance in case of missing MAC-hs PDUs based on a) window based stall avoidance and b) timer based stall avoidance.

#### 7.1.5.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” as specified in TS 34.108, clause 6.10.2.4.5.1. The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 32 |
| MAC-hs reordering timer T1 | 400 ms |
| Polling Info | |
| - Timer poll prohibit | Not Present |
| - Timer_poll | Not Present |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Let T be the value of MAC-hs reordering timer T1 parameter.

Test procedure

In this test procedure each MAC-hs PDU contains one RLC PDU carrying one SDU of size 39 octets and one length indicator indicating the end of the SDU.

a) The SS transmits a MAC-hs PDU with Transmission Sequence Number (TSN) = 0 containing an RLC PDU with SN=0.

b) The SS checks that the RLC PDU with SN=0 is looped back

c) The SS transmits a MAC-hs PDU with TSN = 1 containing an RLC PDU with SN=1.

d) The SS checks that the RLC PDU with SN=1 is looped back

e) The SS repeats the transmission of the MAC-hs PDUs in step a) and c) with identical content except that the RLC PDUs have SN 2,3

f) The SS checks that no data is looped back (the data is discarded in the UE)

g) The SS transmits a MAC-hs PDU with TSN = 3 containing an RLC PDU with SN=3

h) The SS waits 400 ms and checks that no data is looped back and no RLC status report is received during that time

i) The SS transmits a MAC-hs PDU with TSN = 2 containing an RLC PDU with SN=2

j) The SS checks that the RLC PDUs with SN = 2,3 are looped back

k) The SS transmits a MAC-hs PDU with TSN = 6 containing an RLC PDU with SN=4

l) The SS transmits a MAC-hs PDU with TSN = 7 containing an RLC PDU with SN=5

m) The SS transmits a MAC-hs PDU with TSN = 38 containing an RLC PDU with SN=6

n) The SS checks that the RLC PDU with SN = 4 and 5 is looped back but the RLC PDU with SN = 6 is not looped back

o) The SS waits 400 ms and checks that the RLC PDU with SN = 6 is looped back after this time

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MAC-hs PDU with TSN = 0, containing RLC PDU with SN = 0 | |
| 2 | → | | RLC PDU with SN 0 | |
| 3 | ← | | MAC-hs PDU with TSN = 1, containing RLC PDU with SN = 1 | |
| 4 | → | | RLC PDU with SN 1 | |
| 5 | ← | | MAC-hs PDU with TSN = 0, containing RLC PDU with SN = 2 | The duplicated data is discarded in the UE |
| 6 | ← | | MAC-hs PDU with TSN = 1, containing RLC PDU with SN = 3 | The duplicated data is discarded in the UE |
| 7 | ← | | MAC-hs PDU with TSN = 3, containing RLC PDU with SN = 3 | |
| 8 | | | SS waits T ms and checks that no data is looped back and no RLC status report is received | The waiting time may need to be adjusted to assure that T1 has not expired in the UE |
| 9 | ← | | MAC-hs PDU with TSN = 2, containing RLC PDU with SN = 2 | |
| 10 | → | | RLC PDUs with SN 2,3 | |
| 11 | ← | | MAC-hs PDU with TSN = 6, containing RLC PDU with SN = 4 | |
| 12 | ← | | MAC-hs PDU with TSN = 7, containing RLC PDU with SN = 5 | |
| 13 | ← | | MAC-hs PDU with TSN = 38, containing RLC PDU with SN = 6 | SS need to transmit this PDU before timer T1 in UE expires (400 ms after reception of MAC-hs PDU with TSN=6). Note: $T_A$ |
| 14 | → | | RLC PDUs with SN 4,5 | The RLC PDUs with SN = 4,5 is looped back after reception of the MAC_hs PDU in step 13, i.e. before timer T1 expires |
| 15 | | | SS waits T ms and checks that the RLC PDU with SN = 6 is not looped back during this time | |
| 16 | → | | RLC PDU with SN 6 | The RLC PDU with SN = 6 is looped back after expiry of T1. Note: $T_B$ |

NOTE 1: The RLC SN in step 5,6 is increased since otherwise the data would be discarded by RLC even if the MAC-hs reordering does not work correctly. SInce the data is discarded the same RLC SN can be reused later in the test sequence.
NOTE 2: In step 8 the absence of an RLC status report is used to check that the RLC PDU with SN = 3 is not delivered to RLC. If the RLC PDU was delivered to RLC the gap in the SN would trigger a status report (detection of missing PDUs).
NOTE3: In step13, the timer T1 is restarted in the UE since the PDU with TSN = 38 can not be delivered to higher layers.
NOTE 4: General timer tolerance as defined by 34.108 sub-clause 4.2.3 applies.

Specific Message Contents

None

7.1.5.1.5 Test requirements

1. After step 1, the RLC PDU with SN = 0 shall be looped back
2. After step 3, the RLC PDU with SN = 1 shall be looped back
3. After step 5 and 6 , no data shall be looped back
4. After step 7, no data shall be looped back and no RLC status report shall be received
5. After step 9, the RLC PDUs with SN = 2,3 shall be looped back
6. After step 13, the RLC PDUs with SN = 4,5 shall be looped back

7. In step 16, the RLC PDU with SN = 6 shall be looped back and $T_B - T_A$ shall be equal to T ms .

## 7.1.5.2 MAC-hs priority queue handling

### 7.1.5.2.1 Definition and applicability

All UEs which support HS-PDSCH.

### 7.1.5.2.2 Conformance requirement

Reordering Queue distribution:

The reordering queue distribution function routes the MAC-hs PDUs to the correct reordering buffer based on the Queue ID.

[...]

The HARQ process processes the Queue ID in the received MAC-hs PDUs. The UE shall:

- arrange the received MAC-hs PDUs in queues based on the Queue ID.

[...]

Reference(s)

TS 25.321 clauses 4.2.3.3 and 11.6.2.2

### 7.1.5.2.3 Test purpose

1. To confirm that the UE handles several priority queues, where different radio bearers are mapped to different queues.

### 7.1.5.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration "5 x Interactive or background / UL: 8 kbps DL: [max bit rate depending on UE category] / UM PS RAB" as specified in TS 34.108, clause 6.11.4a.1 with the logical channel, transport channel and queue identities set to:

| Logical Channel ID | MAC-d flow (DL) | Queue ID | Comment |
|---|---|---|---|
| 7 | 1 | 0 | RB5 |
| 8 | 1 | 0 | RB6 |
| 9 | 2 | 1 | RB7 |
| 10 | 2 | 2 | RB8 |
| 13 | 3 | 3 | RB9 |
| NOTE 1: LCH 7-8 emulates logical channels with the same priority whereas LCH 9-10 emulates logical channels with different priorities.<br>NOTE 2: The radio bearer numbers refer to the radio bearers as specified in TS 34.108 clause 6.11.4a.1. | | | |

The following parameters are specific for this test case:

| | |
|---|---|
| - Timer poll prohibit | Not Present |
| - Timer_poll | Not Present |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 40 octets for RB5, RB6 and 39 octets for RB7, RB8, RB9.

Test procedure

In this test procedure each MAC-hs PDU contains one RLC PDU carrying one SDU of size 39 or 40 octets (depending on the RB Identity, see Initial conditions) and one length indicator indicating the end of the SDU.

a) The SS transmits a MAC-hs PDU where:

1. The TSN = 0
2. The Queue ID = 0
3. The MAC-hs PDU contains an RLC PDU with SN=0.

b) The SS checks that the RLC PDU with SN=0 is looped back and checks that the logical channel IDs are correct.

c) The SS repeats steps a), b) with the Logical channel ID, Queue ID and TSN field set as follows:

| Iteration | Logical Channel ID | Queue ID Value | TSN Value |
|---|---|---|---|
| 1 | 7 | 0 | 0 |
| 2 | 8 | 0 | 1 |
| 3 | 9 | 1 | 0 |
| 4 | 10 | 2 | 0 |
| 5 | 13 | 3 | 0 |

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MAC-hs PDU containing an RLC PDU with SN = 0. The Logical channel ID, Queue ID and TSN are set according to the table above. | |
| 2 | → | | RLC PDU with SN = 0 | |

Steps 1 to 2 of the expected sequence are repeated for iteration 2-5.

#### 7.1.5.2.5 Test requirements

1. In step 2, for each iteration, the RLC PDU with SN=0 shall be looped back with the logical channel ID as specified by the table below:

| Iteration | Logical Channel ID |
|---|---|
| 1 | 7 |
| 2 | 8 |
| 3 | 9 |
| 4 | 10 |
| 5 | 13 |
| NOTE: Logical Channel ID 13 is the Uplink Logical Channel Identity of RB9. | |


### 7.1.5.3 MAC-hs PDU header handling

#### 7.1.5.3.1 Definition and applicability

All UEs which support HS-PDSCH.

7.1.5.3.2 Conformance requirement

MAC PDU (HS-DSCH):

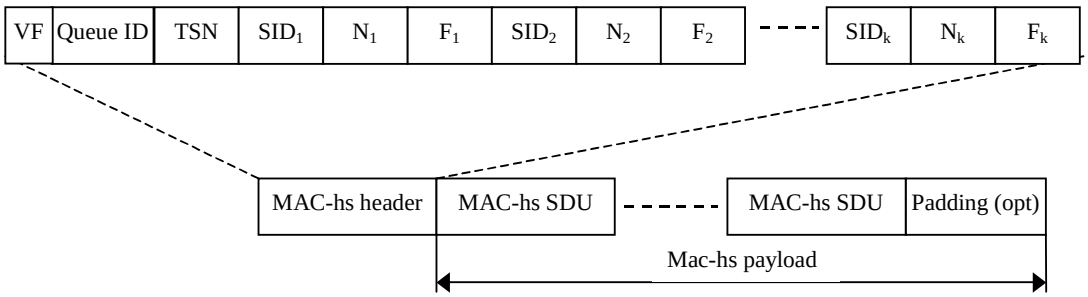


[...]

The following fields are included in the MAC header for HS-DSCH:

- Version Flag (VF):
  The VF field is a one bit flag providing extension capabilities of the MAC-hs PDU format. The VF field shall be set to zero and the value one is reserved in this version of the protocol.

- Queue identifier (Queue ID):
  The Queue ID field provides identification of the reordering queue in the receiver, in order to support independent buffer handling of data belonging to different reordering queues. The length of the Queue ID field is 3 bit.

- Transmission Sequence Number (TSN):
  The TSN field provides an identifier for the transmission sequence number on the HS-DSCH. The TSN field is used for reordering purposes to support in-sequence delivery to higher layers. The length of the TSN field is 6 bit.

- Size index identifier (SID):
  The SID fields identifies the size of a set of consecutive MAC-d PDUs. The MAC-d PDU size for a given SID is configured by higher layers and is independent for each Queue ID. The length of the SID field is 3 bit.

- Number of MAC-D PDUs (N):
  The number of consecutive MAC-d PDUs with equal size is identified with the N field. The length of the N field is 7 bits. In FDD mode, the maximum number of PDUs transmitted in a single TTI shall be assumed to be 70. In 1.28 Mcps TDD mode, the maximum number of PDUs transmitted in a single TTI shall be assumed to be 45. In 3.84 Mcps TDD mode, the maximum number of PDUs transmitted in a single TTI shall be assumed to be 318. If more PDUs than the defined maximum number of PDUs for the corresponding mode are received, the UE behaviour is unspecified.

- Flag (F):
  The F field is a flag indicating if more fields are present in the MAC-hs header or not. If the F field is set to "0" the F field is followed by an additional set of SID, N and F fields. If the F field is set to "1" the F field is followed by a MAC-d PDU. The maximum number of MAC-hs header extensions, i.e. number of fields F set to “0”, in a single TTI shall be assumed to be 7. If more extensions than the maximum defined for the corresponding mode are included in a TTI, the UE behaviour is unspecified.

[...]

a) Use of reserved coding in the MAC header

   If the MAC entity receives a MAC PDU with a header field using a value marked as reserved for this version of the protocol, it shall discard the PDU, unless explicitly mentioned otherwise.

b) Inconsistent MAC header

   If the MAC entity receives a MAC PDU with a header inconsistent with the configuration received from RRC, it shall discard the PDU. E.g.: In case DTCH is mapped to RACH/FACH, the MAC entity shall discard a PDU with a C/T field indicating a logical channel number that is not configured.

[...]

Reference(s)

TS 25.321 clauses 9.1.4, 9.2.2, 10

7.1.5.3.3 Test purpose

1. To confirm that the UE discards PDUs with reserved values of the fields in the MAC header
2. To confirm that the UE discards PDUs with values in the MAC header that are inconsistent with the RRC configuration.
3. To confirm that the UE correctly reads the MAC header and disassembles the MAC-hs PDU into MAC-d PDUs and delivers the MAC-d PDUs to the RLC layer.

7.1.5.3.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” as specified in TS 34.108, clause 6.10.2.4.5.1. The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| UMD_PDU_size1 | 136 bit |
| UMD_PDU_size2 | 328 bit |
| Queue ID | 0 |
| Size Index Identifier (SID) | SID =0: 136 bit<br>SID =1: 328 bit |
| MAC-hs reordering timer T1 | 400 ms |
| MAC-hs receiver window size | 32 |

The RB is configured with 2 RLC PDU sizes UMD_PDU_size1 and UMD_PDU_size2.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Let T be the value of MAC-hs reordering timer T1 parameter.

Test procedure

a) The SS transmits a MAC-hs PDU containing:

8 RLC UMD PDUs where:

RLC PDUs with SN= 0, 2, 4, 6has the PDU size UMD_PDU_size1 and contains one SDU of length 14 octets .

RLC PDUs with SN= 1, 3, 5, 7 has the PDU size UMD_PDU_size2 and contains one SDU of length 38 octets .

The first RLC PDU with SN=0 will have two Length Indicators. The first Length Indicator will be set to 1111100 (starting of the SDU) and the second length Indicator will have the exact size of the first PDU.

The remaining RLC PDUs will also have two length Indicators. The first LI will have the exact size of the PDU and the second LI will be set to 1111111(the rest of the RLC PDU has padding bits and the number padding bits will be zero).The MAC fields in the MAC-hs header shall be set according to 25.321 with the following exception:

| Field | Value |
|---|---|
| Version flag VF | 1 |

b) The SS checks that the UE does not loop back any data (since the MAC-hs PDU in the previous step is discarded)

c) The SS again transmits a MAC-hs PDU as in a) above, but this time sets the fields in the MAC-hs header according to 25.321 with the following exception:

| Field | Value |
|---|---|
| Size index identifier (SID) | SID =2: 136 bit<br>SID =3: 328 bit |

The sequence numbers in the RLC headers shall be identical with those sent in a).

d) The SS checks that the UE does not loop back any data (since the MAC-hs PDU in the previous step is discarded)

e) The SS again transmits a MAC-hs PDU as in a) above, but this time sets the fields in the MAC-hs header according to 25.321. The sequence numbers in the RLC headers shall be identical with those sent in a).

f) The SS checks that the UE loops back 8 RLC PDUs and checks the sequence numbers of the RLC PDUs

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MAC-hs PDU with a reserved value of the version flag | discarded by the UE |
| 2 | | | wait for T ms | SS checks that no RLC PDUs are looped back (note) |
| 3 | ← | | MAC-hs PDU with a value of the size index identifier that is inconsistent with RRC configuration | discarded by the UE |
| 4 | | | wait for T ms | SS checks that no RLC PDUs are looped back (note) |
| 5 | ← | | MAC-hs PDU with correct values of the MAC-hs header | Accepted by the UE and the contained data is looped back. |
| 6 | → | | RLC PDUs with SN 0,1, ...,7 | |
| NOTE General timer tolerance as defined by 34.108 sub-clause 4.2.3 applies. | | | | |

Specific Message Contents

See test procedure

#### 7.1.5.3.5 Test requirements

1. After step 1, no data shall be looped back to the SS
2. After step 3, no data shall be looped back to the SS
3. After step 5, the RLC PDUs with SN =0,1, ...,7 shall be looped back to the SS

### 7.1.5.4 MAC-hs retransmissions

#### 7.1.5.4.1 Definition and applicability

All UEs which support HS-PDSCH.

#### 7.1.5.4.2 Conformance requirement

[...]

The UE shall:

- if the New Data Indicator has been incremented compared to the value in the previous received transmission in this HARQ process or this is the first received transmission in the HARQ process:

- replace the data currently in the soft buffer for this HARQ process with the received data.
- if the Transport Block Size index value is equal to 111111 (FDD only):
  - generate a positive acknowledgement (ACK) of the data in this HARQ process;
  - discard the received data;
  - assume that the data has been successfully decoded.

- if the New Data Indicator is identical to the value used in the previous received transmission in the HARQ process:
  - if the Transport Block Size index value is equal to 111111 (FDD only):
    - assume that the transport block size is identical to the last valid transport block size signalled for this HARQ process.
  - if the data has not yet been successfully decoded:
    - combine the received data with the data currently in the soft buffer for this HARQ process.
- if the data in the soft buffer has been successfully decoded and no error was detected:
  - deliver the decoded MAC-hs PDU to the reordering entity;
  - generate a positive acknowledgement (ACK) of the data in this HARQ process.
- else:
  - generate a negative acknowledgement (NAK) of the data in this HARQ process;
- schedule the generated positive or negative acknowledgement for transmission and the time of transmission relative to the reception of data in a HARQ process is configured by upper layer.

[...]

Reference(s)

TS 25.321 clauses 11.6.22

#### 7.1.5.4.3 Test purpose

1. To confirm that the UE correctly transmit positive and negative acknowledgements when receiving MAC-hs PDUs

#### 7.1.5.4.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” as specified in TS 34.108, clause 6.10.2.4.5.1. The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Polling info | |
| - Timer Poll Prohibit | Not Present |
| - Timer_poll | Not Present |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Test procedure

In this test procedure each MAC-hs PDU contains one RLC PDU carrying one SDU of size 39 octets and one length indicator indicating the end of the SDU.

a) The SS transmits a MAC-hs PDU where:

1. The TSN = 0
2. The HARQ process id = 0
3. The Queue ID = 0
4. The MAC-hs PDU contains an RLC PDU with SN=0.
5. The physical layer CRC is modified such that the CRC check in the UE will fail

b) The SS checks that a negative acknowledgement is received for the correct HARQ process and no RLC PDU loop backed by UE

c) The SS transmits a MAC-hs PDU with the same content as in step a) but where the CRC is correct

d) The SS checks that a postivive acknowledgement is received for the correct HARQ process and RLC PDU is loop backed by UE.

e) The SS repeats steps a), b), c) & d) with the HARQ process, TSN and RLC SN set as follows for iteration 2 to 8:

| Iteration | HARQ process | TSN | RLC SN |
|---|---|---|---|
| 1 | 0 | 0 | 0 |
| 2 | 1 | 1 | 1 |
| 3 | 2 | 2 | 2 |
| 4 | 3 | 3 | 3 |
| 5 | 4 | 4 | 4 |
| 6 | 5 | 5 | 5 |
| 7 | 6 | 6 | 6 |
| 8 | 7 | 7 | 7 |

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MAC-hs PDU sent in process N | Erroneous CRC |
| 2 | → | | MAC-hs negative acknowledgement with process id = N | |
| 2a | | | | SS checks for 5 sec that UE does not send loop backed PDU |
| 3 | ← | | MAC-hs PDU sent in process N | |
| 4 | → | | MAC-hs positive acknowledgement with process id = N | |
| 5 | → | | RLC Loop Backed PDU | |
| NOTE: The process id N in step 1-4 is taken from the table in the Test procedure description above. | | | | |

Steps 1 to 5 of the expected sequence are repeated for iteration 2-8.

7.1.5.4.5 Test requirements

1. After step 1, a MAC-hs negative acknowledgement shall be received for the correct HARQ process
2. After step 3, a MAC-hs positive acknowledgement shall be received for the correct HARQ process

## 7.1.5.5 MAC-hs reset

### 7.1.5.5.1 Definition and applicability

All UEs which support HS-PDSCH.

### 7.1.5.5.2 Conformance requirement

Rel-5 and Rel-6:

If a reset of the MAC-hs entity is requested by upper layers, the UE shall:

- flush soft buffer for all configured HARQ processes;
- stop all active re-ordering release timer (T1) and set all timer T1 to their initial value;
- start TSN with value 0 for the next transmission on every configured HARQ process;
- initialise the variables RcvWindow_UpperEdge and next_expected_TSN to their initial values;
- disassemble all MAC-hs PDUs in the re-ordering buffer and deliver all MAC-d PDUs to the MAC-d entity;
- flush the re-ordering buffer.

and then:

- indicate to all AM RLC entities mapped on HS-DSCH to generate a status report.

[...]

Rel-7:

If a reset of the MAC-hs entity is requested by upper layers, the UE shall at the activation time indicated by higher layers:

- flush soft buffer for all configured HARQ processes;
- stop all active re-ordering release timer (T1) and set all timer T1 to their initial value;
- start TSN with value 0 for the next transmission on every configured HARQ process;
- initialise the variables RcvWindow_UpperEdge and next_expected_TSN to their initial values;
- disassemble all MAC-hs PDUs in the re-ordering buffer and deliver all MAC-d PDUs to the MAC-d entity;
- flush the re-ordering buffer.

[...]

Reference(s)

TS 25.321 clause 11.6.2.5

### 7.1.5.5.3 Test purpose

1. To confirm that the UE flushes the reordering buffer and delivers all MAC-d PDUs in the buffer to higher layers upon reset.
2. To confirm that the UE initializes the TSN and next_expected_TSN to their initial values.

### 7.1.5.5.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off

User Equipment:

The SS establishes the reference radio bearer configuration "Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH" as specified in TS 34.108, clause 6.10.2.4.5.1. The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 32 |
| MAC-hs reordering timer T1 | 400 ms |
| Polling Info | |
| - Timer poll prohibit | Not Present |
| - Timer poll | Disabled |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

### Test procedure

In this test procedure each MAC-hs PDU contains one RLC PDU carrying one SDU of size 39 octets and one length indicator indicating the end of the SDU.

a) The SS transmits a MAC-hs PDU with Transmission Sequence Number (TSN) = 0 containing an RLC PDU with SN=0

b) The SS checks that the RLC PDU with SN=0 is looped back

b) The SS transmits 2 MAC-hs PDUs with TSN = 2,3 containing the RLC PDUs with SN=1,2

c) The SS initiates a MAC-hs reset by transmitting a PHYSICAL CHANNEL RECONFIGURATION message

d) The SS checks that the RLC PDUs with SN=1,2 are looped back

e) The UE may send an RLC status report

d) The SS transmits a MAC-hs PDU with TSN = 0 containing an RLC PDU with SN=3

e) The SS checks that the RLC PDU with SN=3 is looped back

### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MAC-hs PDU with TSN = 0, containing RLC PDU with SN = 0 | |
| 2 | → | | RLC PDU with SN 0 | |
| 3 | ← | | MAC-hs PDU with TSN = 2, containing RLC PDU with SN = 1 | |
| 4 | ← | | MAC-hs PDU with TSN = 3, containing RLC PDU with SN = 2 | |
| 5 | ← | | SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to trigger a MAC-hs reset | |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 7 | → | | RLC PDUs with SN 1,2 | The RLC PDUs are delivered directly after the MAC-hs reset i.e. before T1 expires. |
| 8 | → | | RLC status report | Optional |
| 9 | ← | | MAC-hs PDU with TSN = 0, containing RLC PDU with SN = 3 | |
| 10 | → | | RLC PDU with SN 3 | |
| NOTE: Steps 6-8 may occur in different order. | | | | |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 5)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Downlink information common for all radio links<br>- MAC-hs reset indicator | TRUE |

#### 7.1.5.5.5 Test requirements

1. After step 1, the RLC PDU with SN = 0 shall be looped back
2. After step 5, the RLC PDUs with SN = 1,2 shall be looped back
3. After step 9, the RLC PDU with SN=3 shall be looped back

### 7.1.5.6 MAC-hs transport block size selection

#### 7.1.5.6.1 Definition and applicability

All UEs which support HS-PDSCH and FDD.

#### 7.1.5.6.2 Conformance requirement

For HS-DSCH the transport block size is derived from the value signalled on the HS-SCCH. The mapping between the TFRI value and the transport block size for each mode is specified below:

For all transmissions of a transport block, the transport block size is derived from the TFRI value as specified below, except only in those cases of retransmissions where the Node-B selects a combination for which no mapping exists between the original transport block size and the selected combination of channelisation Code set and modulation type. In such cases, the transport block size index value signalled to the UE shall be set to 111111, i.e., $k_i$=63.

Let $k_i$ be the TFRI signalled on the HS-SCCH value and let $k_{0,i}$ be the value in the table 7.1.5.6.1 corresponding to the modulation and the number of codes signalled on the HS-SCCH. Let $k_t$ be the sum of the two values: $k_t = k_i + k_{0,i}$. The transport block size $L(k_t)$ can be obtained by accessing the position $k_t$ in the table in Annex A (normative) or by using the formula below (informative):

If $k_t < 40$

$$L(k_t) = 125 + 12 \cdot k_t$$

else

$$L(k_t) = \lfloor L_{\min} p^{k_t} \rfloor$$

$$p = 2085/2048$$

$$L_{\min} = 296$$

end

**Table 7.1.5.6.1: Values of $k_{0,i}$ for different numbers of channelization codes and modulation schemes**

| Combination *i* | Modulation scheme | Number of channelization codes | $k_{0,i}$ |
|---|---|---|---|
| 0 | QPSK | 1 | 1 |
| 1 | | 2 | 40 |
| 2 | | 3 | 63 |
| 3 | | 4 | 79 |
| 4 | | 5 | 92 |
| 5 | | 6 | 102 |
| 6 | | 7 | 111 |
| 7 | | 8 | 118 |
| 8 | | 9 | 125 |
| 9 | | 10 | 131 |
| 10 | | 11 | 136 |
| 11 | | 12 | 141 |
| 12 | | 13 | 145 |
| 13 | | 14 | 150 |
| 14 | | 15 | 153 |
| 15 | 16QAM | 1 | 40 |
| 16 | | 2 | 79 |
| 17 | | 3 | 102 |
| 18 | | 4 | 118 |
| 19 | | 5 | 131 |
| 20 | | 6 | 141 |
| 21 | | 7 | 150 |
| 22 | | 8 | 157 |
| 23 | | 9 | 164 |
| 24 | | 10 | 169 |
| 25 | | 11 | 175 |
| 26 | | 12 | 180 |
| 27 | | 13 | 184 |
| 28 | | 14 | 188 |
| 29 | | 15 | 192 |

……

The following table provides the mapping between $k_t$ (as per the definition above) and the HS-DSCH Transport Block Size ($L(k_t)$):

| Index | TB Size | Index | TB Size | Index | TB Size |
|---|---|---|---|---|---|
| 1 | 137 | 86 | 1380 | 171 | 6324 |
| 2 | 149 | 87 | 1405 | 172 | 6438 |
| 3 | 161 | 88 | 1430 | 173 | 6554 |
| 4 | 173 | 89 | 1456 | 174 | 6673 |
| 5 | 185 | 90 | 1483 | 175 | 6793 |
| 6 | 197 | 91 | 1509 | 176 | 6916 |
| 7 | 209 | 92 | 1537 | 177 | 7041 |
| 8 | 221 | 93 | 1564 | 178 | 7168 |
| 9 | 233 | 94 | 1593 | 179 | 7298 |
| 10 | 245 | 95 | 1621 | 180 | 7430 |
| 11 | 257 | 96 | 1651 | 181 | 7564 |
| 12 | 269 | 97 | 1681 | 182 | 7700 |
| 13 | 281 | 98 | 1711 | 183 | 7840 |
| 14 | 293 | 99 | 1742 | 184 | 7981 |
| 15 | 305 | 100 | 1773 | 185 | 8125 |
| 16 | 317 | 101 | 1805 | 186 | 8272 |
| 17 | 329 | 102 | 1838 | 187 | 8422 |
| 18 | 341 | 103 | 1871 | 188 | 8574 |
| 19 | 353 | 104 | 1905 | 189 | 8729 |
| 20 | 365 | 105 | 1939 | 190 | 8886 |
| 21 | 377 | 106 | 1974 | 191 | 9047 |
| 22 | 389 | 107 | 2010 | 192 | 9210 |
| 23 | 401 | 108 | 2046 | 193 | 9377 |
| 24 | 413 | 109 | 2083 | 194 | 9546 |
| 25 | 425 | 110 | 2121 | 195 | 9719 |
| 26 | 437 | 111 | 2159 | 196 | 9894 |
| 27 | 449 | 112 | 2198 | 197 | 10073 |
| 28 | 461 | 113 | 2238 | 198 | 10255 |
| 29 | 473 | 114 | 2279 | 199 | 10440 |
| 30 | 485 | 115 | 2320 | 200 | 10629 |
| 31 | 497 | 116 | 2362 | 201 | 10821 |
| 32 | 509 | 117 | 2404 | 202 | 11017 |
| 33 | 521 | 118 | 2448 | 203 | 11216 |
| 34 | 533 | 119 | 2492 | 204 | 11418 |
| 35 | 545 | 120 | 2537 | 205 | 11625 |
| 36 | 557 | 121 | 2583 | 206 | 11835 |
| 37 | 569 | 122 | 2630 | 207 | 12048 |
| 38 | 581 | 123 | 2677 | 208 | 12266 |
| 39 | 593 | 124 | 2726 | 209 | 12488 |
| 40 | 605 | 125 | 2775 | 210 | 12713 |
| 41 | 616 | 126 | 2825 | 211 | 12943 |
| 42 | 627 | 127 | 2876 | 212 | 13177 |
| 43 | 639 | 128 | 2928 | 213 | 13415 |
| 44 | 650 | 129 | 2981 | 214 | 13657 |
| 45 | 662 | 130 | 3035 | 215 | 13904 |
| 46 | 674 | 131 | 3090 | 216 | 14155 |
| 47 | 686 | 132 | 3145 | 217 | 14411 |
| 48 | 699 | 133 | 3202 | 218 | 14671 |
| 49 | 711 | 134 | 3260 | 219 | 14936 |
| 50 | 724 | 135 | 3319 | 220 | 15206 |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 737 | 136 | 3379 | 221 | 15481 |
| 52 | 751 | 137 | 3440 | 222 | 15761 |
| 53 | 764 | 138 | 3502 | 223 | 16045 |
| 54 | 778 | 139 | 3565 | 224 | 16335 |
| 55 | 792 | 140 | 3630 | 225 | 16630 |
| 56 | 806 | 141 | 3695 | 226 | 16931 |
| 57 | 821 | 142 | 3762 | 227 | 17237 |
| 58 | 836 | 143 | 3830 | 228 | 17548 |
| 59 | 851 | 144 | 3899 | 229 | 17865 |
| 60 | 866 | 145 | 3970 | 230 | 18188 |
| 61 | 882 | 146 | 4042 | 231 | 18517 |
| 62 | 898 | 147 | 4115 | 232 | 18851 |
| 63 | 914 | 148 | 4189 | 233 | 19192 |
| 64 | 931 | 149 | 4265 | 234 | 19538 |
| 65 | 947 | 150 | 4342 | 235 | 19891 |
| 66 | 964 | 151 | 4420 | 236 | 20251 |
| 67 | 982 | 152 | 4500 | 237 | 20617 |
| 68 | 1000 | 153 | 4581 | 238 | 20989 |
| 69 | 1018 | 154 | 4664 | 239 | 21368 |
| 70 | 1036 | 155 | 4748 | 240 | 21754 |
| 71 | 1055 | 156 | 4834 | 241 | 22147 |
| 72 | 1074 | 157 | 4921 | 242 | 22548 |
| 73 | 1093 | 158 | 5010 | 243 | 22955 |
| 74 | 1113 | 159 | 5101 | 244 | 23370 |
| 75 | 1133 | 160 | 5193 | 245 | 23792 |
| 76 | 1154 | 161 | 5287 | 246 | 24222 |
| 77 | 1175 | 162 | 5382 | 247 | 24659 |
| 78 | 1196 | 163 | 5480 | 248 | 25105 |
| 79 | 1217 | 164 | 5579 | 249 | 25558 |
| 80 | 1239 | 165 | 5680 | 250 | 26020 |
| 81 | 1262 | 166 | 5782 | 251 | 26490 |
| 82 | 1285 | 167 | 5887 | 252 | 26969 |
| 83 | 1308 | 168 | 5993 | 253 | 27456 |
| 84 | 1331 | 169 | 6101 | 254 | 27952 |
| 85 | 1356 | 170 | 6211 | | |

Reference(s)

3GPP TS 25.321, 9.2.3, 9.2.3.1 and Annex A

#### 7.1.5.6.3 Test purpose

To verify that the UE selects the correct transport block size based on the TFRI value signalled on the HS-SCCH.

#### 7.1.5.6.4 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

Definition of test variables:

$N_{\underline{codes}}$ Number of HS-DSCH codes (1..15, maximum number dependent on UE category)

$M$ Type of modulation scheme (QPSK, 16QAM)

$k_i$ TFRI signalled on the HS-SCCH value

$K_{0,I}$ See table 7.1.5.6.2

$k_t$ Transport Block Size index $(=k_i + k_{0,I})$, see table 7.1.5.6.3

$TB_{size}$ Transport Block size

$N_{PDUs}$ Number of MAC-d PDUs

*MAC-hs_header_size* MAC-hs header size for the reference HS-DSCH radio bearer configuration under test.

*MAC-d_PDU_size* MAC-d PDU size for the reference HS-DSCH radio bearer configuration under test.

**Table 7.1.5.6.2: Values of $k_{0,i}$ for different numbers of channelization codes and modulation schemes**

| Combination *I* | Modulation scheme | Number of channelization codes | $k_{0,i}$ |
|---|---|---|---|
| 0 | QPSK | 1 | 1 |
| 1 | | 2 | 40 |
| 2 | | 3 | 63 |
| 3 | | 4 | 79 |
| 4 | | 5 | 92 |
| 5 | | 6 | 102 |
| 6 | | 7 | 111 |
| 7 | | 8 | 118 |
| 8 | | 9 | 125 |
| 9 | | 10 | 131 |
| 10 | | 11 | 136 |
| 11 | | 12 | 141 |
| 12 | | 13 | 145 |
| 13 | | 14 | 150 |
| 14 | | 15 | 153 |
| 15 | 16QAM | 1 | 40 |
| 16 | | 2 | 79 |
| 17 | | 3 | 102 |
| 18 | | 4 | 118 |
| 19 | | 5 | 131 |
| 20 | | 6 | 141 |
| 21 | | 7 | 150 |
| 22 | | 8 | 157 |
| 23 | | 9 | 164 |
| 24 | | 10 | 169 |
| 25 | | 11 | 175 |
| 26 | | 12 | 180 |
| 27 | | 13 | 184 |
| 28 | | 14 | 188 |
| 29 | | 15 | 192 |

**Table 7.1.5.6.3: Mapping of HS-DSCH Transport Block Size for FDD to value of index $k_t$ (=$k_i$ + $k_{0,I}$)**

| Index | TB Size | Index | TB Size | Index | TB Size |
|---|---|---|---|---|---|
| 1 | 137 | 86 | 1380 | 171 | 6324 |
| 2 | 149 | 87 | 1405 | 172 | 6438 |
| 3 | 161 | 88 | 1430 | 173 | 6554 |
| 4 | 173 | 89 | 1456 | 174 | 6673 |
| 5 | 185 | 90 | 1483 | 175 | 6793 |
| 6 | 197 | 91 | 1509 | 176 | 6916 |
| 7 | 209 | 92 | 1537 | 177 | 7041 |
| 8 | 221 | 93 | 1564 | 178 | 7168 |
| 9 | 233 | 94 | 1593 | 179 | 7298 |
| 10 | 245 | 95 | 1621 | 180 | 7430 |
| 11 | 257 | 96 | 1651 | 181 | 7564 |
| 12 | 269 | 97 | 1681 | 182 | 7700 |
| 13 | 281 | 98 | 1711 | 183 | 7840 |
| 14 | 293 | 99 | 1742 | 184 | 7981 |
| 15 | 305 | 100 | 1773 | 185 | 8125 |
| 16 | 317 | 101 | 1805 | 186 | 8272 |
| 17 | 329 | 102 | 1838 | 187 | 8422 |
| 18 | 341 | 103 | 1871 | 188 | 8574 |
| 19 | 353 | 104 | 1905 | 189 | 8729 |
| 20 | 365 | 105 | 1939 | 190 | 8886 |
| 21 | 377 | 106 | 1974 | 191 | 9047 |
| 22 | 389 | 107 | 2010 | 192 | 9210 |
| 23 | 401 | 108 | 2046 | 193 | 9377 |
| 24 | 413 | 109 | 2083 | 194 | 9546 |
| 25 | 425 | 110 | 2121 | 195 | 9719 |
| 26 | 437 | 111 | 2159 | 196 | 9894 |
| 27 | 449 | 112 | 2198 | 197 | 10073 |
| 28 | 461 | 113 | 2238 | 198 | 10255 |
| 29 | 473 | 114 | 2279 | 199 | 10440 |
| 30 | 485 | 115 | 2320 | 200 | 10629 |
| 31 | 497 | 116 | 2362 | 201 | 10821 |
| 32 | 509 | 117 | 2404 | 202 | 11017 |
| 33 | 521 | 118 | 2448 | 203 | 11216 |
| 34 | 533 | 119 | 2492 | 204 | 11418 |
| 35 | 545 | 120 | 2537 | 205 | 11625 |
| 36 | 557 | 121 | 2583 | 206 | 11835 |
| 37 | 569 | 122 | 2630 | 207 | 12048 |
| 38 | 581 | 123 | 2677 | 208 | 12266 |
| 39 | 593 | 124 | 2726 | 209 | 12488 |
| 40 | 605 | 125 | 2775 | 210 | 12713 |
| 41 | 616 | 126 | 2825 | 211 | 12943 |
| 42 | 627 | 127 | 2876 | 212 | 13177 |
| 43 | 639 | 128 | 2928 | 213 | 13415 |
| 44 | 650 | 129 | 2981 | 214 | 13657 |
| 45 | 662 | 130 | 3035 | 215 | 13904 |
| 46 | 674 | 131 | 3090 | 216 | 14155 |
| 47 | 686 | 132 | 3145 | 217 | 14411 |
| 48 | 699 | 133 | 3202 | 218 | 14671 |
| 49 | 711 | 134 | 3260 | 219 | 14936 |
| 50 | 724 | 135 | 3319 | 220 | 15206 |
| 51 | 737 | 136 | 3379 | 221 | 15481 |

| | | | | | |
|---|---|---|---|---|---|
| 52 | 751 | 137 | 3440 | 222 | 15761 |
| 53 | 764 | 138 | 3502 | 223 | 16045 |
| 54 | 778 | 139 | 3565 | 224 | 16335 |
| 55 | 792 | 140 | 3630 | 225 | 16630 |
| 56 | 806 | 141 | 3695 | 226 | 16931 |
| 57 | 821 | 142 | 3762 | 227 | 17237 |
| 58 | 836 | 143 | 3830 | 228 | 17548 |
| 59 | 851 | 144 | 3899 | 229 | 17865 |
| 60 | 866 | 145 | 3970 | 230 | 18188 |
| 61 | 882 | 146 | 4042 | 231 | 18517 |
| 62 | 898 | 147 | 4115 | 232 | 18851 |
| 63 | 914 | 148 | 4189 | 233 | 19192 |
| 64 | 931 | 149 | 4265 | 234 | 19538 |
| 65 | 947 | 150 | 4342 | 235 | 19891 |
| 66 | 964 | 151 | 4420 | 236 | 20251 |
| 67 | 982 | 152 | 4500 | 237 | 20617 |
| 68 | 1000 | 153 | 4581 | 238 | 20989 |
| 69 | 1018 | 154 | 4664 | 239 | 21368 |
| 70 | 1036 | 155 | 4748 | 240 | 21754 |
| 71 | 1055 | 156 | 4834 | 241 | 22147 |
| 72 | 1074 | 157 | 4921 | 242 | 22548 |
| 73 | 1093 | 158 | 5010 | 243 | 22955 |
| 74 | 1113 | 159 | 5101 | 244 | 23370 |
| 75 | 1133 | 160 | 5193 | 245 | 23792 |
| 76 | 1154 | 161 | 5287 | 246 | 24222 |
| 77 | 1175 | 162 | 5382 | 247 | 24659 |
| 78 | 1196 | 163 | 5480 | 248 | 25105 |
| 79 | 1217 | 164 | 5579 | 249 | 25558 |
| 80 | 1239 | 165 | 5680 | 250 | 26020 |
| 81 | 1262 | 166 | 5782 | 251 | 26490 |
| 82 | 1285 | 167 | 5887 | 252 | 26969 |
| 83 | 1308 | 168 | 5993 | 253 | 27456 |
| 84 | 1331 | 169 | 6101 | 254 | 27952 |
| 85 | 1356 | 170 | 6211 | | |

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off

User Equipment:

UE in idle mode

The following parameters are specific for this test case:

Common for all UE categories:

| Parameter | Value |
|---|---|
| MAC-d PDU size | 336 bits |
| MAC-hs receiver window size | 16 |
| Number of HARQ processes | 1 |
| Number of reordering queues | 1 |

UE Category 1 to 4:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 128 |
| RLC Receiving window size | 512 |

UE Category 5 and 6:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 256 |
| RLC Receiving window size | 512 |

UE Category 7 and 8:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 1536 |

UE Category 9 and 10:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 2047 |

UE Category 11 and 12:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 128 |
| RLC Receiving window size | 1024 |

Test procedure

a) The SS establishes the reference radio bearer configuration "Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH" as specified in TS 34.108, clause 6.10.2.4.5.1. See note 1.

b) The SS closes the test loop using UE test loop mode 1 setting the UL RLC SDU size parameter to 39 octets (312 bits).

c) The SS sets *M*= QPSK.

d) The SS sets $N_{\underline{codes}}$ = 1.

e) The SS sets $k_{0,i}$ to the value according to table 7.1.5.6.2 based on the actual value of *M* and $N_{\underline{codes}}$.

f) The SS sets the test parameter $k_i$ to 0.

g) The SS calculates the index value $k_t$ (=$k_i$ + $k_{0,I}$) and look up the transport block size, $TB_{size}$, for the actual $k_t$ in table 7.1.5.6.3

If $TB_{size}$ is bigger than the UE capability for "Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI" then SS continues with step n) else step h). See note 2.

h) The SS calculates the coding rate using *Coding_rate* = $(TB_{size} + N_{CRC}) / (N_{codes} \cdot N_{phy_bits})$.

If *Coding_rate* falls within any of the ranges defined in table 14.1.3.2.1 then SS continues with step m), else proceed with step i). See note 4.

i) The SS calculates the maximum number of MAC-d PDUs that fits into the MAC-hs transport block:

$N_{PDUs}$ = floor(($TB_{size}$ – *MAC-hs_header_size)* / *MAC-d_PDU_size)*

If $N_{PDUs}$ is bigger than 70 then SS continues with step n) else j).

j) The SS creates a MAC-hs PDU of size $TB_{size}$ containing $N_{PDUs}$ MAC-d PDUs + padding. The payload data of the MAC-d PDUs contains 4 RLC SDUs of size $N_{PDUs}$ * MAC-d PDU payload size / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). See note 3.

k) The SS configures the HARQ transmission parameters according to TS 34.108 [9], table 6.1.5.1 based on the actual value of *M*. Then the SS transmits the MAC-hs PDU.

l) The SS checks that the UE returned RLC SDUs has the same content as the first 312 bits of the test data sent by the SS in downlink.

m) The SS increments the test parameter $k_i$ by 1. If $k_i$ is less than 63 then SS repeats steps g) to m).

n) The SS increments the test parameter $N_{\underline{codes}}$*by 1*. If $N_{\underline{codes}}$ is less or equal to the UE capability for *"Maximum number of HS-DSCH codes received"* then the SS repeats test steps e) to n) else continue with step o). See note 2.

o) If *Modulation* = QPSK and UE capability for *"Supported modulation"* is 16QAM then the SS sets the test parameter *Modulation* to 16QAM and repeats steps d) to o) else continue with step p). See note 2.

p) The SS opens the UE test loop.

q) The SS release the radio bearer.

r) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test.

NOTE 2: See table 14.1.3.1.1 in section 14.1.3.1 for FDD HS-DSCH physical layer and RLC and MAC-hs capability parameters and there values for different UE FDD HS-DSCH physical layer categories (UE categories). The capability parameters having impact on the test procedure are: "Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI", *"Maximum number of HS-DSCH codes received" and "Supported modulation"*

NOTE 3: The test data for transport channels on HS-DSCH is divided into 4 RLC SDUs to keep the SDU size not to exceed 1500 octets (limit of SDU size in SM).

NOTE 4: See table 14.1.3.2.1 in section 14.1.3.2 for those values of coding rate that must be avoided because of turbo coder irregularities.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| 7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| 9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| 12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 13 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is set to 39 octets |
| 14 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15 | SS | | | The SS calculates test data for the first TFRC (TFRI,$N_{codes}$ and *M*). |
| 16 | <-- | | DOWNLINK MAC-hs PDU (4 x RLC SDU) | Send test data. The MAC-hs PDU contains 4 RLC SDUs |
| 17 | --> | | UPLINK RLC SDUs | The SS checks that the content of the received UL RLC SDUs are correct |
| 18 | SS | | | The SS calculates test data for next TFRC and repeat steps 16 to 18 until all TFRCs have been tested. |
| 19 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 20 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 21 | | | RB RELEASE | RRC |
| 22 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 23 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |
| Note 1: In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message. | | | | |

#### 7.1.5.6.5 Test requirements

For each TFRC the UE shall return a UL RLC SDUs with the same content as the first 312 bits of the test data sent by the SS in downlink.

### 7.1.5.7 MAC-hs transport block size selection (3.84 Mcps TDD)

#### 7.1.5.7.1 Definition and applicability

All 3.84 Mcps TDD UEs which support HS-PDSCH.

#### 7.1.5.7.2 Conformance requirement

For HS-DSCH the transport block size is derived from the value signalled on the HS-SCCH. The mapping between the TFRI value and the transport block size for each mode is specified below:

Let *k* be the signalled TFRI value, then the corresponding HS-DSCH transport block size $L_k$ is given by :

If *k*=1..510

$$L_k = \lfloor L_{\min} p^k \rfloor$$

$$p = \frac{8313}{8192}$$

$$L_{\min} = 57$$

If $k$ = 511

$L_k$ = 102000

If $k$=0, $L_k$ indicates NULL and shall not be used to signal a transport block size in the TFRI.

Transport block sizes calculated by this formula shall equal the values indicated in Table 7.1.5.7.2

**Table 7.1.5.7.2: HSDPA Transport Block Sizes for 3.84 Mcps TDD**

| TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] |
|---|---|---|---|---|---|---|---|
| 0 | NULL | 128 | 372 | 256 | 2432 | 384 | 15890 |
| 1 | 57 | 129 | 377 | 257 | 2468 | 385 | 16124 |
| 2 | 58 | 130 | 383 | 258 | 2504 | 386 | 16362 |
| 3 | 59 | 131 | 389 | 259 | 2541 | 387 | 16604 |
| 4 | 60 | 132 | 394 | 260 | 2579 | 388 | 16849 |
| 5 | 61 | 133 | 400 | 261 | 2617 | 389 | 17098 |
| 6 | 62 | 134 | 406 | 262 | 2656 | 390 | 17351 |
| 7 | 63 | 135 | 412 | 263 | 2695 | 391 | 17607 |
| 8 | 64 | 136 | 418 | 264 | 2735 | 392 | 17867 |
| 9 | 65 | 137 | 424 | 265 | 2775 | 393 | 18131 |
| 10 | 66 | 138 | 431 | 266 | 2816 | 394 | 18399 |
| 11 | 66 | 139 | 437 | 267 | 2858 | 395 | 18671 |
| 12 | 67 | 140 | 443 | 268 | 2900 | 396 | 18946 |
| 13 | 68 | 141 | 450 | 269 | 2943 | 397 | 19226 |
| 14 | 69 | 142 | 457 | 270 | 2986 | 398 | 19510 |
| 15 | 71 | 143 | 463 | 271 | 3030 | 399 | 19798 |
| 16 | 72 | 144 | 470 | 272 | 3075 | 400 | 20091 |
| 17 | 73 | 145 | 477 | 273 | 3121 | 401 | 20388 |
| 18 | 74 | 146 | 484 | 274 | 3167 | 402 | 20689 |
| 19 | 75 | 147 | 491 | 275 | 3213 | 403 | 20994 |
| 20 | 76 | 148 | 499 | 276 | 3261 | 404 | 21304 |
| 21 | 77 | 149 | 506 | 277 | 3309 | 405 | 21619 |
| 22 | 78 | 150 | 514 | 278 | 3358 | 406 | 21938 |
| 23 | 79 | 151 | 521 | 279 | 3408 | 407 | 22263 |
| 24 | 81 | 152 | 529 | 280 | 3458 | 408 | 22591 |
| 25 | 82 | 153 | 537 | 281 | 3509 | 409 | 22925 |
| 26 | 83 | 154 | 545 | 282 | 3561 | 410 | 23264 |
| 27 | 84 | 155 | 553 | 283 | 3613 | 411 | 23607 |
| 28 | 85 | 156 | 561 | 284 | 3667 | 412 | 23956 |
| 29 | 87 | 157 | 569 | 285 | 3721 | 413 | 24310 |
| 30 | 88 | 158 | 578 | 286 | 3776 | 414 | 24669 |
| 31 | 89 | 159 | 586 | 287 | 3832 | 415 | 25033 |
| 32 | 91 | 160 | 595 | 288 | 3888 | 416 | 25403 |
| 33 | 92 | 161 | 604 | 289 | 3946 | 417 | 25778 |
| 34 | 93 | 162 | 613 | 290 | 4004 | 418 | 26159 |
| 35 | 95 | 163 | 622 | 291 | 4063 | 419 | 26545 |
| 36 | 96 | 164 | 631 | 292 | 4123 | 420 | 26938 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 37 | 98 | 165 | 640 | 293 | 4184 | 421 | 27335 |
| 38 | 99 | 166 | 650 | 294 | 4246 | 422 | 27739 |
| 39 | 100 | 167 | 659 | 295 | 4309 | 423 | 28149 |
| 40 | 102 | 168 | 669 | 296 | 4372 | 424 | 28565 |
| 41 | 103 | 169 | 679 | 297 | 4437 | 425 | 28987 |
| 42 | 105 | 170 | 689 | 298 | 4502 | 426 | 29415 |
| 43 | 107 | 171 | 699 | 299 | 4569 | 427 | 29849 |
| 44 | 108 | 172 | 709 | 300 | 4636 | 428 | 30290 |
| 45 | 110 | 173 | 720 | 301 | 4705 | 429 | 30738 |
| 46 | 111 | 174 | 730 | 302 | 4774 | 430 | 31192 |
| 47 | 113 | 175 | 741 | 303 | 4845 | 431 | 31652 |
| 48 | 115 | 176 | 752 | 304 | 4916 | 432 | 32120 |
| 49 | 116 | 177 | 763 | 305 | 4989 | 433 | 32594 |
| 50 | 118 | 178 | 775 | 306 | 5063 | 434 | 33076 |
| 51 | 120 | 179 | 786 | 307 | 5138 | 435 | 33564 |
| 52 | 122 | 180 | 798 | 308 | 5213 | 436 | 34060 |
| 53 | 123 | 181 | 809 | 309 | 5290 | 437 | 34563 |
| 54 | 125 | 182 | 821 | 310 | 5369 | 438 | 35074 |
| 55 | 127 | 183 | 834 | 311 | 5448 | 439 | 35592 |
| 56 | 129 | 184 | 846 | 312 | 5528 | 440 | 36117 |
| 57 | 131 | 185 | 858 | 313 | 5610 | 441 | 36651 |
| 58 | 133 | 186 | 871 | 314 | 5693 | 442 | 37192 |
| 59 | 135 | 187 | 884 | 315 | 5777 | 443 | 37742 |
| 60 | 137 | 188 | 897 | 316 | 5862 | 444 | 38299 |
| 61 | 139 | 189 | 910 | 317 | 5949 | 445 | 38865 |
| 62 | 141 | 190 | 924 | 318 | 6037 | 446 | 39439 |
| 63 | 143 | 191 | 937 | 319 | 6126 | 447 | 40021 |
| 64 | 145 | 192 | 951 | 320 | 6217 | 448 | 40613 |
| 65 | 147 | 193 | 965 | 321 | 6308 | 449 | 41212 |
| 66 | 150 | 194 | 980 | 322 | 6402 | 450 | 41821 |
| 67 | 152 | 195 | 994 | 323 | 6496 | 451 | 42439 |
| 68 | 154 | 196 | 1009 | 324 | 6592 | 452 | 43066 |
| 69 | 156 | 197 | 1024 | 325 | 6689 | 453 | 43702 |
| 70 | 159 | 198 | 1039 | 326 | 6788 | 454 | 44347 |
| 71 | 161 | 199 | 1054 | 327 | 6889 | 455 | 45002 |
| 72 | 163 | 200 | 1070 | 328 | 6990 | 456 | 45667 |
| 73 | 166 | 201 | 1085 | 329 | 7094 | 457 | 46342 |
| 74 | 168 | 202 | 1101 | 330 | 7198 | 458 | 47026 |
| 75 | 171 | 203 | 1118 | 331 | 7305 | 459 | 47721 |
| 76 | 173 | 204 | 1134 | 332 | 7413 | 460 | 48426 |
| 77 | 176 | 205 | 1151 | 333 | 7522 | 461 | 49141 |
| 78 | 178 | 206 | 1168 | 334 | 7633 | 462 | 49867 |
| 79 | 181 | 207 | 1185 | 335 | 7746 | 463 | 50603 |
| 80 | 184 | 208 | 1203 | 336 | 7860 | 464 | 51351 |
| 81 | 186 | 209 | 1221 | 337 | 7976 | 465 | 52109 |
| 82 | 189 | 210 | 1239 | 338 | 8094 | 466 | 52879 |
| 83 | 192 | 211 | 1257 | 339 | 8214 | 467 | 53660 |
| 84 | 195 | 212 | 1276 | 340 | 8335 | 468 | 54453 |
| 85 | 198 | 213 | 1294 | 341 | 8458 | 469 | 55257 |
| 86 | 201 | 214 | 1313 | 342 | 8583 | 470 | 56073 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 87 | 204 | 215 | 1333 | 343 | 8710 | 471 | 56901 |
| 88 | 207 | 216 | 1353 | 344 | 8839 | 472 | 57742 |
| 89 | 210 | 217 | 1373 | 345 | 8969 | 473 | 58595 |
| 90 | 213 | 218 | 1393 | 346 | 9102 | 474 | 59460 |
| 91 | 216 | 219 | 1413 | 347 | 9236 | 475 | 60338 |
| 92 | 219 | 220 | 1434 | 348 | 9373 | 476 | 61230 |
| 93 | 222 | 221 | 1456 | 349 | 9511 | 477 | 62134 |
| 94 | 226 | 222 | 1477 | 350 | 9652 | 478 | 63052 |
| 95 | 229 | 223 | 1499 | 351 | 9794 | 479 | 63983 |
| 96 | 232 | 224 | 1521 | 352 | 9939 | 480 | 64928 |
| 97 | 236 | 225 | 1543 | 353 | 10086 | 481 | 65887 |
| 98 | 239 | 226 | 1566 | 354 | 10235 | 482 | 66860 |
| 99 | 243 | 227 | 1589 | 355 | 10386 | 483 | 67848 |
| 100 | 246 | 228 | 1613 | 356 | 10539 | 484 | 68850 |
| 101 | 250 | 229 | 1637 | 357 | 10695 | 485 | 69867 |
| 102 | 254 | 230 | 1661 | 358 | 10853 | 486 | 70899 |
| 103 | 258 | 231 | 1685 | 359 | 11013 | 487 | 71946 |
| 104 | 261 | 232 | 1710 | 360 | 11176 | 488 | 73009 |
| 105 | 265 | 233 | 1736 | 361 | 11341 | 489 | 74087 |
| 106 | 269 | 234 | 1761 | 362 | 11508 | 490 | 75182 |
| 107 | 273 | 235 | 1787 | 363 | 11678 | 491 | 76292 |
| 108 | 277 | 236 | 1814 | 364 | 11851 | 492 | 77419 |
| 109 | 281 | 237 | 1840 | 365 | 12026 | 493 | 78563 |
| 110 | 285 | 238 | 1868 | 366 | 12204 | 494 | 79723 |
| 111 | 290 | 239 | 1895 | 367 | 12384 | 495 | 80901 |
| 112 | 294 | 240 | 1923 | 368 | 12567 | 496 | 82095 |
| 113 | 298 | 241 | 1952 | 369 | 12752 | 497 | 83308 |
| 114 | 303 | 242 | 1981 | 370 | 12941 | 498 | 84539 |
| 115 | 307 | 243 | 2010 | 371 | 13132 | 499 | 85787 |
| 116 | 312 | 244 | 2039 | 372 | 13326 | 500 | 87054 |
| 117 | 316 | 245 | 2070 | 373 | 13523 | 501 | 88340 |
| 118 | 321 | 246 | 2100 | 374 | 13722 | 502 | 89645 |
| 119 | 326 | 247 | 2131 | 375 | 13925 | 503 | 90969 |
| 120 | 331 | 248 | 2163 | 376 | 14131 | 504 | 92313 |
| 121 | 336 | 249 | 2195 | 377 | 14340 | 505 | 93676 |
| 122 | 340 | 250 | 2227 | 378 | 14551 | 506 | 95060 |
| 123 | 346 | 251 | 2260 | 379 | 14766 | 507 | 96464 |
| 124 | 351 | 252 | 2293 | 380 | 14984 | 508 | 97889 |
| 125 | 356 | 253 | 2327 | 381 | 15206 | 509 | 99335 |
| 126 | 361 | 254 | 2362 | 382 | 15430 | 510 | 100802 |
| 127 | 366 | 255 | 2397 | 383 | 15658 | 511 | 102000 |

Reference(s)

3GPP TS 25.321 Section 9.2.3.2

### 7.1.5.7.3 Test purpose

To verify that the UE selects the correct transport block size based on the TFRI value signalled on the HS-SCCH.

### 7.1.5.7.4 Method of test

Definition of test variables:

| | |
|---|---|
| $N_{\underline{slots}}$ | Number of HS-DSCH slots (2, 4, 6 or 12 dependent on UE category) |
| $N_{codes}$ | Number of HS-DSCH codes per timeslot, 1 to 16 |
| $k$ | TFRI signalled on the HS-SCCH value (see Table 7.1.5.7.2) |
| $TB_{size}$ | Transport Block size (see Table 7.1.5.7.2) |
| $N_{PDUs}$ | Number of MAC-d PDUs |
| *MAC-hs_header_size* | MAC-hs header size for the reference HS-DSCH radio bearer configuration under test. |
| *MAC-d_PDU_size* | MAC-d PDU size for the reference HS-DSCH radio bearer configuration under test. |

### Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off

User Equipment:

UE in idle mode

The following parameters are specific for this test case:

Common for all UE categories:

| Parameter | Value |
|---|---|
| MAC-d PDU size | 336 bits |
| MAC-hs receiver window size | 16 |
| Number of HARQ processes | 1 |
| Number of reordering queues | 1 |

UE Category 1 to 4:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 128 |
| RLC Receiving window size | 512 |

UE Category 5 and 6:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 256 |
| RLC Receiving window size | 512 |

UE Category 7 and 8:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 1536 |

UE Category 9:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 2047 |

Test procedure

a) The SS establishes the reference radio bearer configuration "Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH" as specified in TS 34.108, clause 6.10.3.4.6.1. See note 1.

b) The SS closes the test loop using UE test loop mode 1 setting the UL RLC SDU size parameter to 39 octets (312 bits).

c) The SS sets $N_{slots}$ = *2*.

d) The SS sets $N_{\underline{codes}}$ = 1.

e) The SS calculates $TB_{size}$ and k for $N_{slots}$ and $N_{codes}$ according to table 7.1.5.7.2

f) If $TB_{size}$ is bigger than the UE capability for "Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI" then SS continues with step l) else step g). See note 2.

g) The SS calculates the maximum number of MAC-d PDUs that fits into the MAC-hs transport block:

$$N_{PDUs} = \text{floor}((TB_{size} - MAC\text{-}hs_header_size) / MAC\text{-}d_PDU_size)$$

If $N_{PDUs}$ is bigger than 318 then SS continues with step m) else i).

h) The SS creates a MAC-hs PDU of size $TB_{size}$ containing $N_{PDUs}$ MAC-d PDUs + padding. The payload data of the MAC-d PDUs contains 4 RLC SDUs of size $N_{PDUs}$ * MAC-d PDU payload size / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). See note 3.

i) The SS transmits the MAC-hs PDU.

j) The SS checks that the UE returned RLC SDUs has the same content as the first 312 bits of the test data sent by the SS in downlink.

k) The SS increments $N_{codes}$ by 1.If $N_{codes}$ is $\leq$16 then SS repeats steps e) to k).

l) The SS sets $N_{\underline{slots}}$ *to the next category supported by the UE and repeats steps d) to l).* If there are no more categories supported by the UE (i.e. all categories have been tested) then the test is completed via steps m) through q). See note 2.

m) The SS opens the UE test loop.

n) The SS release the radio bearer.

o) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test.

NOTE 2: See table 18.2.1.4.1.1 in section 18.2.1.4.1 for 3.84 Mcps TDD HS-DSCH physical layer, RLC and MAC-hs capability parameters and the values for different UE 3.84 Mcps TDD HS-DSCH physical layer categories (UE categories). The capability parameters having impact on the test procedure are: "Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI" and "Maximum number of HS-DSCH timeslots per TTI"

NOTE 3: The test data for transport channels on HS-DSCH is divided into 4 RLC SDUs to keep the SDU size not to exceed 1500 octets (limit of SDU size in SM).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| 7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| 9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| 12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 13 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is set to 39 octets |
| 14 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15 | SS | | | The SS calculates test data for the first TFRC |
| 16 | <-- | | DOWNLINK MAC-hs PDU (4 x RLC SDU) | Send test data. The MAC-hs PDU contains 4 RLC SDUs |
| 17 | --> | | UPLINK RLC SDUs | The SS checks that the content of the received UL RLC SDUs are correct |
| 18 | SS | | | The SS calculates test data for next TFRC and repeat steps 16 to 18 until all TFRCs have been tested. |
| 19 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 20 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 21 | | | RB RELEASE | RRC |
| 22 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 23 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |
| Note 1: In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message. | | | | |

#### 7.1.5.7.5 Test requirements

For each TFRC the UE shall return a UL RLC SDUs with the same content as the first 312 bits of the test data sent by the SS in downlink.

### 7.1.5.8 MAC-hs transport block size selection (7.68 Mcps TDD)

#### 7.1.5.8.1 Definition and applicability

All 7.68 Mcps TDD UEs which support HS-PDSCH.

#### 7.1.5.8.2 Conformance requirement

For HS-DSCH the transport block size is derived from the value signalled on the HS-SCCH. The mapping between the TFRI value and the transport block size for each mode is specified below:

Let $k$ be the signalled TFRI value, then the corresponding HS-DSCH transport block size $L_k$ is given by :

If $k$=1..510

$$L_k = \lfloor L_{\min} p^k \rfloor$$

$$p = \frac{33297}{32768}$$

$$L_{\min} = 57$$

If $k$ = 511

$L_k$ = 204000

If $k$=0, $L_k$ indicates NULL and shall not be used to signal a transport block size in the TFRI.

Transport block sizes calculated by this formula shall equal the values indicated in Table 7.1.5.8.2

**Table 7.1.5.8.2: HSDPA Transport Block Sizes for 7.68 Mcps TDD**

| TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] |
|---|---|---|---|---|---|---|---|
| 0 | NULL | 128 | 442 | 256 | 3438 | 384 | 26709 |
| 1 | 57 | 129 | 449 | 257 | 3494 | 385 | 27140 |
| 2 | 58 | 130 | 457 | 258 | 3550 | 386 | 27578 |
| 3 | 59 | 131 | 464 | 259 | 3607 | 387 | 28023 |
| 4 | 60 | 132 | 472 | 260 | 3666 | 388 | 28476 |
| 5 | 61 | 133 | 479 | 261 | 3725 | 389 | 28935 |
| 6 | 62 | 134 | 487 | 262 | 3785 | 390 | 29402 |
| 7 | 63 | 135 | 495 | 263 | 3846 | 391 | 29877 |
| 8 | 64 | 136 | 503 | 264 | 3908 | 392 | 30360 |
| 9 | 65 | 137 | 511 | 265 | 3971 | 393 | 30850 |
| 10 | 66 | 138 | 519 | 266 | 4035 | 394 | 31348 |
| 11 | 67 | 139 | 528 | 267 | 4101 | 395 | 31854 |
| 12 | 69 | 140 | 536 | 268 | 4167 | 396 | 32368 |
| 13 | 70 | 141 | 545 | 269 | 4234 | 397 | 32891 |
| 14 | 71 | 142 | 553 | 270 | 4302 | 398 | 33422 |
| 15 | 72 | 143 | 562 | 271 | 4372 | 399 | 33961 |
| 16 | 73 | 144 | 572 | 272 | 4443 | 400 | 34509 |
| 17 | 74 | 145 | 581 | 273 | 4514 | 401 | 35066 |
| 18 | 76 | 146 | 590 | 274 | 4587 | 402 | 35633 |
| 19 | 77 | 147 | 600 | 275 | 4661 | 403 | 36208 |
| 20 | 78 | 148 | 609 | 276 | 4736 | 404 | 36792 |
| 21 | 79 | 149 | 619 | 277 | 4813 | 405 | 37386 |
| 22 | 81 | 150 | 629 | 278 | 4891 | 406 | 37990 |
| 23 | 82 | 151 | 639 | 279 | 4970 | 407 | 38603 |
| 24 | 83 | 152 | 650 | 280 | 5050 | 408 | 39226 |
| 25 | 85 | 153 | 660 | 281 | 5131 | 409 | 39860 |
| 26 | 86 | 154 | 671 | 282 | 5214 | 410 | 40503 |
| 27 | 87 | 155 | 682 | 283 | 5298 | 411 | 41157 |
| 28 | 89 | 156 | 693 | 284 | 5384 | 412 | 41822 |
| 29 | 90 | 157 | 704 | 285 | 5471 | 413 | 42497 |
| 30 | 92 | 158 | 715 | 286 | 5559 | 414 | 43183 |
| 31 | 93 | 159 | 727 | 287 | 5649 | 415 | 43880 |
| 32 | 95 | 160 | 739 | 288 | 5740 | 416 | 44588 |
| 33 | 96 | 161 | 751 | 289 | 5833 | 417 | 45308 |
| 34 | 98 | 162 | 763 | 290 | 5927 | 418 | 46040 |
| 35 | 99 | 163 | 775 | 291 | 6023 | 419 | 46783 |
| 36 | 101 | 164 | 787 | 292 | 6120 | 420 | 47538 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 37 | 103 | 165 | 800 | 293 | 6219 | 421 | 48306 |
| 38 | 104 | 166 | 813 | 294 | 6319 | 422 | 49085 |
| 39 | 106 | 167 | 826 | 295 | 6421 | 423 | 49878 |
| 40 | 108 | 168 | 840 | 296 | 6525 | 424 | 50683 |
| 41 | 109 | 169 | 853 | 297 | 6630 | 425 | 51501 |
| 42 | 111 | 170 | 867 | 298 | 6737 | 426 | 52333 |
| 43 | 113 | 171 | 881 | 299 | 6846 | 427 | 53178 |
| 44 | 115 | 172 | 895 | 300 | 6957 | 428 | 54036 |
| 45 | 117 | 173 | 910 | 301 | 7069 | 429 | 54908 |
| 46 | 119 | 174 | 924 | 302 | 7183 | 430 | 55795 |
| 47 | 120 | 175 | 939 | 303 | 7299 | 431 | 56696 |
| 48 | 122 | 176 | 954 | 304 | 7417 | 432 | 57611 |
| 49 | 124 | 177 | 970 | 305 | 7537 | 433 | 58541 |
| 50 | 126 | 178 | 986 | 306 | 7658 | 434 | 59486 |
| 51 | 128 | 179 | 1001 | 307 | 7782 | 435 | 60446 |
| 52 | 131 | 180 | 1018 | 308 | 7908 | 436 | 61422 |
| 53 | 133 | 181 | 1034 | 309 | 8035 | 437 | 62414 |
| 54 | 135 | 182 | 1051 | 310 | 8165 | 438 | 63421 |
| 55 | 137 | 183 | 1068 | 311 | 8297 | 439 | 64445 |
| 56 | 139 | 184 | 1085 | 312 | 8431 | 440 | 65486 |
| 57 | 142 | 185 | 1103 | 313 | 8567 | 441 | 66543 |
| 58 | 144 | 186 | 1120 | 314 | 8705 | 442 | 67617 |
| 59 | 146 | 187 | 1138 | 315 | 8846 | 443 | 68709 |
| 60 | 148 | 188 | 1157 | 316 | 8988 | 444 | 69818 |
| 61 | 151 | 189 | 1175 | 317 | 9134 | 445 | 70945 |
| 62 | 153 | 190 | 1194 | 318 | 9281 | 446 | 72091 |
| 63 | 156 | 191 | 1214 | 319 | 9431 | 447 | 73254 |
| 64 | 158 | 192 | 1233 | 320 | 9583 | 448 | 74437 |
| 65 | 161 | 193 | 1253 | 321 | 9738 | 449 | 75639 |
| 66 | 164 | 194 | 1274 | 322 | 9895 | 450 | 76860 |
| 67 | 166 | 195 | 1294 | 323 | 10055 | 451 | 78101 |
| 68 | 169 | 196 | 1315 | 324 | 10217 | 452 | 79361 |
| 69 | 172 | 197 | 1336 | 325 | 10382 | 453 | 80643 |
| 70 | 174 | 198 | 1358 | 326 | 10550 | 454 | 81945 |
| 71 | 177 | 199 | 1380 | 327 | 10720 | 455 | 83267 |
| 72 | 180 | 200 | 1402 | 328 | 10893 | 456 | 84612 |
| 73 | 183 | 201 | 1425 | 329 | 11069 | 457 | 85978 |
| 74 | 186 | 202 | 1448 | 330 | 11248 | 458 | 87366 |
| 75 | 189 | 203 | 1471 | 331 | 11429 | 459 | 88776 |
| 76 | 192 | 204 | 1495 | 332 | 11614 | 460 | 90209 |
| 77 | 195 | 205 | 1519 | 333 | 11801 | 461 | 91666 |
| 78 | 198 | 206 | 1543 | 334 | 11992 | 462 | 93145 |
| 79 | 201 | 207 | 1568 | 335 | 12185 | 463 | 94649 |
| 80 | 205 | 208 | 1594 | 336 | 12382 | 464 | 96177 |
| 81 | 208 | 209 | 1619 | 337 | 12582 | 465 | 97730 |
| 82 | 211 | 210 | 1646 | 338 | 12785 | 466 | 99308 |
| 83 | 215 | 211 | 1672 | 339 | 12992 | 467 | 100911 |
| 84 | 218 | 212 | 1699 | 340 | 13201 | 468 | 102540 |
| 85 | 222 | 213 | 1727 | 341 | 13414 | 469 | 104195 |
| 86 | 225 | 214 | 1755 | 342 | 13631 | 470 | 105877 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 87 | 229 | 215 | 1783 | 343 | 13851 | 471 | 107587 |
| 88 | 233 | 216 | 1812 | 344 | 14075 | 472 | 109324 |
| 89 | 237 | 217 | 1841 | 345 | 14302 | 473 | 111088 |
| 90 | 240 | 218 | 1871 | 346 | 14533 | 474 | 112882 |
| 91 | 244 | 219 | 1901 | 347 | 14767 | 475 | 114704 |
| 92 | 248 | 220 | 1932 | 348 | 15006 | 476 | 116556 |
| 93 | 252 | 221 | 1963 | 349 | 15248 | 477 | 118438 |
| 94 | 256 | 222 | 1994 | 350 | 15494 | 478 | 120350 |
| 95 | 260 | 223 | 2027 | 351 | 15744 | 479 | 122293 |
| 96 | 265 | 224 | 2059 | 352 | 15999 | 480 | 124267 |
| 97 | 269 | 225 | 2093 | 353 | 16257 | 481 | 126273 |
| 98 | 273 | 226 | 2126 | 354 | 16519 | 482 | 128312 |
| 99 | 278 | 227 | 2161 | 355 | 16786 | 483 | 130383 |
| 100 | 282 | 228 | 2196 | 356 | 17057 | 484 | 132488 |
| 101 | 287 | 229 | 2231 | 357 | 17332 | 485 | 134627 |
| 102 | 291 | 230 | 2267 | 358 | 17612 | 486 | 136800 |
| 103 | 296 | 231 | 2304 | 359 | 17897 | 487 | 139009 |
| 104 | 301 | 232 | 2341 | 360 | 18185 | 488 | 141253 |
| 105 | 306 | 233 | 2379 | 361 | 18479 | 489 | 143533 |
| 106 | 311 | 234 | 2417 | 362 | 18777 | 490 | 145850 |
| 107 | 316 | 235 | 2456 | 363 | 19081 | 491 | 148205 |
| 108 | 321 | 236 | 2496 | 364 | 19389 | 492 | 150597 |
| 109 | 326 | 237 | 2536 | 365 | 19702 | 493 | 153029 |
| 110 | 331 | 238 | 2577 | 366 | 20020 | 494 | 155499 |
| 111 | 337 | 239 | 2619 | 367 | 20343 | 495 | 158010 |
| 112 | 342 | 240 | 2661 | 368 | 20671 | 496 | 160560 |
| 113 | 348 | 241 | 2704 | 369 | 21005 | 497 | 163152 |
| 114 | 353 | 242 | 2748 | 370 | 21344 | 498 | 165786 |
| 115 | 359 | 243 | 2792 | 371 | 21689 | 499 | 168463 |
| 116 | 365 | 244 | 2837 | 372 | 22039 | 500 | 171182 |
| 117 | 371 | 245 | 2883 | 373 | 22395 | 501 | 173946 |
| 118 | 377 | 246 | 2929 | 374 | 22756 | 502 | 176754 |
| 119 | 383 | 247 | 2977 | 375 | 23124 | 503 | 179608 |
| 120 | 389 | 248 | 3025 | 376 | 23497 | 504 | 182507 |
| 121 | 395 | 249 | 3074 | 377 | 23876 | 505 | 185454 |
| 122 | 402 | 250 | 3123 | 378 | 24262 | 506 | 188447 |
| 123 | 408 | 251 | 3174 | 379 | 24653 | 507 | 191490 |
| 124 | 415 | 252 | 3225 | 380 | 25051 | 508 | 194581 |
| 125 | 421 | 253 | 3277 | 381 | 25456 | 509 | 197722 |
| 126 | 428 | 254 | 3330 | 382 | 25867 | 510 | 200914 |
| 127 | 435 | 255 | 3384 | 383 | 26284 | 511 | 204000 |

Reference(s)

3GPP TS 25.321 Section 9.2.3.2a

### 7.1.5.8.3 Test purpose

To verify that the UE selects the correct transport block size based on the TFRI value signalled on the HS-SCCH.

### 7.1.5.8.4 Method of test

Definition of test variables:

| | |
|---|---|
| $N_{slots}$ | Number of HS-DSCH slots (1, 2, 3, 4, 5, 8 or 12 dependent on UE category) |
| $N_{codes}$ | Number of HS-DSCH codes per timeslot, 1 to 16 |
| k | TFRI signalled on the HS-SCCH value (see Table 7.1.5.8.2) |
| $TB_{size}$ | Transport Block size (see Table 7.1.5.8.2) |
| $N_{PDUs}$ | Number of MAC-d PDUs |
| MAC-hs_header_size | MAC-hs header size for the reference HS-DSCH radio bearer configuration under test. |
| MAC-d_PDU_size | MAC-d PDU size for the reference HS-DSCH radio bearer configuration under test. |

### Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off

User Equipment:

UE in idle mode

The following parameters are specific for this test case:

Common for all UE categories:

| Parameter | Value |
|---|---|
| MAC-d PDU size | 336 bits |
| MAC-hs receiver window size | 16 |
| Number of HARQ processes | 1 |
| Number of reordering queues | 1 |

UE Category 1 to 4:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 128 |
| RLC Receiving window size | 512 |

UE Category 5 and 6:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 256 |
| RLC Receiving window size | 512 |

UE Category 7 to 10:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 1536 |

UE Category 11 to 12:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 768 |
| RLC Receiving window size | 3072 |

UE Category 13:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 1024 |
| RLC Receiving window size | 4095 |

Test procedure

a) The SS establishes the reference radio bearer configuration "Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH" as specified in TS 34.108, clause 6.10.3.4.6.1. See note 1.

b) The SS closes the test loop using UE test loop mode 1 setting the UL RLC SDU size parameter to 39 octets (312 bits).

c) The SS sets $N_{slots} = 2$.

d) The SS sets $N_{codes} = 1$.

e) The SS calculates $TB_{size}$ and k for $N_{slots}$ and $N_{codes}$ according to table 7.1.5.8.2

f) If $TB_{size}$ is bigger than the UE capability for "Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI" then SS continues with step l) else step g). See note 2.

g) The SS calculates the maximum number of MAC-d PDUs that fits into the MAC-hs transport block:

$N_{PDUs}$ = floor(($TB_{size}$ – *MAC-hs_header_size)* / *MAC-d_PDU_size)*

If $N_{PDUs}$ is bigger than 318 then SS continues with step m) else i).

h) The SS creates a MAC-hs PDU of size $TB_{size}$ containing $N_{PDUs}$ MAC-d PDUs + padding. The payload data of the MAC-d PDUs contains 4 RLC SDUs of size $N_{PDUs}$ * MAC-d PDU payload size / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). See note 3.

i) The SS transmits the MAC-hs PDU.

j) The SS checks that the UE returned RLC SDUs has the same content as the first 312 bits of the test data sent by the SS in downlink.

k) The SS increments $N_{codes}$ by 1.If $N_{codes}$ is $\leq$16 then SS repeats steps e) to k).

l) The SS sets $N_{slots}$ *to the next category supported by the UE and repeats steps d) to l).* If there are no more categories supported by the UE (i.e. all categories have been tested) then the test is completed via steps m) through q). See note 2.

m) The SS opens the UE test loop.

n) The SS release the radio bearer.

o) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test.

NOTE 2: See table 18.2.1.4.1.1 in section 18.2.1.4.1 for 3.84 Mcps TDD HS-DSCH physical layer, RLC and MAC-hs capability parameters and the values for different UE 3.84 Mcps TDD HS-DSCH physical layer categories (UE categories). The capability parameters having impact on the test procedure are: "Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI" and "Maximum number of HS-DSCH timeslots per TTI"

NOTE 3: The test data for transport channels on HS-DSCH is divided into 4 RLC SDUs to keep the SDU size not to exceed 1500 octets (limit of SDU size in SM).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| 7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| 9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| 12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 13 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is set to 39 octets |
| 14 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15 | SS | | | The SS calculates test data for the first TFRC |
| 16 | <-- | | DOWNLINK MAC-hs PDU (4 x RLC SDU) | Send test data. The MAC-hs PDU contains 4 RLC SDUs |
| 17 | --> | | UPLINK RLC SDUs | The SS checks that the content of the received UL RLC SDUs are correct |
| 18 | SS | | | The SS calculates test data for next TFRC and repeat steps 16 to 18 until all TFRCs have been tested. |
| 19 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 20 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 21 | | | RB RELEASE | RRC |
| 22 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 23 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |
| Note 1: In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message. | | | | |

#### 7.1.5.8.5 Test requirements

For each TFRC the UE shall return a UL RLC SDUs with the same content as the first 312 bits of the test data sent by the SS in downlink.

## 7.1.5a HS-DSCH MAC-ehs

### 7.1.5a.1 MAC-ehs multiplexing / multiple logical channels on same queue

#### 7.1.5a.1.1 Definition and applicability

All UEs which support MAC-ehs.

#### 7.1.5a.1.2 Conformance requirement

- LCH-ID demultiplexing:
  The demultiplexing entity routes the MAC-ehs SDUs to correct logical channel based on the received logical channel identifier.

- The following is allowed:
  The MAC-ehs SDUs included in a MAC-ehs PDU can have a different size and a different priority and can be mapped to different priority queues.

[...]

When MAC-ehs is configured, a MAC PDU for HS-DSCH consists of one MAC-ehs header and one or more reordering PDUs. Each reordering PDU consists of one or more reordering SDUs belonging to the same priority queue. Each reordering SDU equals a complete MAC-ehs SDU or a segment of a MAC-ehs SDU. Each MAC-ehs SDU equals a MAC-d PDU or a MAC-c PDU (FDD only). The LCH-ID and L fields are repeated per reordering SDU. The TSN and SI fields are repeated per reordering PDU.

The presence of the $TSN_i$ and $SI_i$ fields is based on the value of the $LCH\text{-}ID_i$; if the $LCH\text{-}ID_i$ is mapped to the same reordering queue as $LCH\text{-}ID_{i-1}$, there is no $TSN_i$ or $SI_i$ field. The mapping of the LCH-ID to the reordering queue is provided by upper layers [7]. The $TSN_1$ and $SI_1$ fields are always present.

[...]

For each MAC-d or MAC-c PDU that is delivered to the demultiplexing entity, the UE shall:

- route MAC-d or MAC-c PDU to the correct logical channel based on the corresponding LCH ID field.

Reference(s)

TS 25.321 clauses 4.2.3.5, 9.1.4, 11.6.4.7

### 7.1.5a.1.3 Test purpose

To confirm that the UE handles multiple logical channels, mapped to same Mac-ehs queue.

### 7.1.5a.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration 3 x Interactive or background / UL: 8 kbps DL: [max bit rate depending on UE category] / UM PS RAB as specified in TS 34.108, clause 6.11.4f.1 with the logical channel, MAC-ehs queue identities set to:

| Logical Channel ID | Mac-ehs Queue ID | Comment |
|---|---|---|
| 7 | 0 | RB5 |
| 8 | 0 | RB6 |
| 9 | 0 | RB7 |

DL MAC header type is set as MAC-ehs.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB5, RB6 and RB7 and RLC Mode as UM.

Test procedure

In this test procedure each DL RLC PDU consists of one RLC SDU of size 39 octets , special LI and length indicator indicating the end of the SDU.

a) The SS transmits a MAC-ehs PDU where:

1. The TSN1 = 0, TSN2, TSN3 are not present

2. contains 3 MAC-ehs SDU's one each from each RB.

b) The SS checks that the RLC PDU's are looped back and checks that the logical channel IDs are correct.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MAC-ehs PDU containing 3 RLC PDU's with TSN = 0. Each RLC corresponds to different RB's configured | MAC-ehs header consists of LCH1[6], L1[42],TSN1[0], SI1[00],F1[0] LCH2[7],L2[42],F2[0], LCH3[8],L3[42],F3[1] all values are in decimal. See NOTE1 |
| 2 | → | | Loop Backed RLC PDU's on RB5, RB6 and RB7 | |
| NOTE1: The SS will send the LCH Id one less than the LCH Id signalled to the UE as per TS 25.321 section 9.2.2 | | | | |

Specific Message Contents

None

7.1.5a.1.5 Test requirements

In Step 2, SS receives one loop backed RLC PDU on RB5, RB6 and RB7.

## 7.1.5a.2 MAC-ehs multiplexing / multiple logical channels on multiple queues

7.1.5a.2.1 Definition and applicability

All UEs which support MAC-ehs.

7.1.5a.2.2 Conformance requirement

- LCH-ID demultiplexing:
  The demultiplexing entity routes the MAC-ehs SDUs to correct logical channel based on the received logical channel identifier.

- The following is allowed:
  The MAC-ehs SDUs included in a MAC-ehs PDU can have a different size and a different priority and can be mapped to different priority queues.

[...]

When MAC-ehs is configured, a MAC PDU for HS-DSCH consists of one MAC-ehs header and one or more reordering PDUs. Each reordering PDU consists of one or more reordering SDUs belonging to the same priority queue. Each reordering SDU equals a complete MAC-ehs SDU or a segment of a MAC-ehs SDU. Each MAC-ehs SDU equals a MAC-d PDU or a MAC-c PDU (FDD only). The LCH-ID and L fields are repeated per reordering SDU. The TSN and SI fields are repeated per reordering PDU.

The presence of the $TSN_i$ and $SI_i$ fields is based on the value of the $LCH\text{-}ID_i$; if the $LCH\text{-}ID_i$ is mapped to the same reordering queue as $LCH\text{-}ID_{i-1}$, there is no $TSN_i$ or $SI_i$ field. The mapping of the LCH-ID to the reordering queue is provided by upper layers [7]. The $TSN_1$ and $SI_1$ fields are always present.

[...]

For each MAC-d or MAC-c PDU that is delivered to the demultiplexing entity, the UE shall:

- route MAC-d or MAC-c PDU to the correct logical channel based on the corresponding LCH ID field.

Reference(s)

TS 25.321 clauses 4.2.3.5, 9.1.4, 11.6.4.7

7.1.5a.2.3 Test purpose

To confirm that the UE handles multiple logical channels, mapped to different Mac-ehs queues.

7.1.5a.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration 3 x Interactive or background / UL: 8 kbps DL: [max bit rate depending on UE category] / UM PS RAB as specified in TS 34.108, clause 6.11.4f.1 with the logical channel, MAC-ehs queue identities set to:

| Logical Channel ID | Mac-ehs Queue ID | Comment |
|---|---|---|
| 7 | 0 | RB5 |
| 8 | 1 | RB6 |
| 9 | 2 | RB7 |

DL MAC header type is set as MAC-ehs.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB5, RB6 and RB7 and RLC Mode as UM.

Test procedure

In this test procedure each DL RLC PDU consists of one RLC SDU of size 39 octets , special LI and length indicator indicating the end of the SDU.

a) The SS transmits a MAC-ehs PDU where:

1. The TSN1 = 0, TSN2=0, TSN3=0

2. contains 3 MAC-ehs SDU's one each from each RB.

b) The SS checks that the RLC PDU's are looped back and checks that the logical channel IDs are correct.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MAC-ehs PDU containing 3 RLC PDU's with all TSN's = 0. Each RLC PDU corresponds to different RB's configured on different MAC-ehs queues | MAC-ehs header consists of LCH1[6], L1[42], TSN1[0], SI1[0], F1[0] LCH2[7], L2[42], TSN2[0], SI2[0], F2[0] LCH3[8], L3[42], TSN3[0], SI3[0], F3[1] where all values are in decimal. See NOTE1 |
| 2 | → | | Loop Backed RLC PDU on RB5, RB6 and RB7 | |
| NOTE1: The SS will send the LCH Id one less than the LCH Id signalled to the UE as per TS 25.321 section 9.2.2 | | | | |

Specific Message Contents

None.

7.1.5a.2.5 Test requirements

In Step 2, SS receives one loop backed RLC PDU on RB5, RB6 and RB7.

## 7.1.5a.3 MAC-ehs segmentation / UE handling of partial and full PDUs

### 7.1.5a.3.1 Definition and applicability

All UEs which support MAC-ehs.

7.1.5a.3.2 Conformance requirement

If MAC-ehs is configured by upper layers [7], the parameters for the MAC header are:

…

- Segmentation Indication (SI)

  The SI field indicates if the MAC-ehs SDU has been segmented. Table 9.2.2-1 shows the 2 bit SI field.

**Table 9.2.2-1: Structure of the SI field**

| SI Field | Segmentation indication |
|---|---|
| **00** | The first reordering SDU of the reordering PDU is a completeMAC-ehs SDU.<br>The last reordering SDU of the reordering PDU is a complete MAC-ehs SDU. |
| **01** | If there are more than one reordering SDUs in the reordering PDU, the last reordering SDU of the reordering PDU is a complete MAC-ehs SDU.<br>The first reordering SDU of the reordering PDU is the last segment of a MAC-ehs SDU. |
| **10** | If there are more than one reordering SDUs in the reordering PDU, the first reordering SDU of the reordering PDU is a complete MAC-ehs SDU.<br>The last reordering SDU of the reordering PDU is the first segment of a MAC-ehs SDU. |
| **11** | If there are more than one reordering SDUs in the reordering PDU, the first reordering SDU of the reordering PDU is the last segment of a MAC-ehs SDU and the last reordering SDU of reordering PDU is the first segment of a MAC-ehs SDU.<br>If there is only one reordering SDU in the reordering PDU, the reordering SDU is a middle segment of a MAC-ehs SDU. |

[…]

The reassembly unit processes the SI field associated with a reordering PDU. The UE shall:

- if SI field is set to “00”:
  - deliver all MAC-d or MAC-c PDUs corresponding to MAC-ehs SDUs in the reordering PDU to demultiplexing entity;
  - discard any previously stored segment of MAC-ehs SDU.
- if SI field is set to “01”:
  - if the received and stored segments of a MAC-ehs SDU are consecutive:
    - combine the first reordering SDU with the stored segment of MAC-ehs SDU;
    - deliver the MAC-d or MAC-c PDU corresponding to the combined MAC-ehs SDU to demultiplexing entity.
  - if the received and stored segments of MAC-ehs SDU are not consecutive
    - discard the first received reordering SDU and the stored segment of MAC-ehs SDU.
  - deliver all MAC-d or MAC-c PDUs corresponding to subsequent MAC-ehs SDUs in the reordering queue to demultiplexing entity;
- if SI field is set to “10”:
  - deliver all MAC-d or MAC-c PDUs corresponding to all but last reordering SDU in the reordering PDU to the demultiplexing entity;

- discard any previously stored segment of MAC-ehs SDU and store the last reordering SDU of the received reordering PDU

- if SI field is set to "11":
  - if the received and stored MAC-ehs SDUs are consecutive:
    - if there is only one reordering SDU in the reordering PDU:
      - combine the received reordering SDU with the stored segment of MAC-ehs SDU:
    - if is more than one reordering SDUs in the reordering PDU:
      - combine the first received reordering SDU with the stored segment MAC-ehs SDU;
      - deliver the MAC-d or MAC-c PDU corresponding to the combined MAC-ehs SDU to demultiplexing entity.
      - deliver all MAC-d or MAC-c PDUs corresponding to all but last reordering SDU in the reordering PDU to demultiplexing entity;
      - discard any previously stored segment of MAC-ehs SDU and store the last reordering SDU of the received reordering PDU.
  - if the received and stored segments of the MAC-ehs SDU are not consecutive:
    - discard the first received reordering SDU and the stored segment of MAC-ehs SDU;
    - if is more than one reordering SDUs in the reordering PDU:
      - deliver all MAC-d or MAC-c PDUs corresponding to all but first and last reordering SDUs in the reordering PDU to demultiplexing entity and store the last reordering SDU of the received reordering PDU.

Reference(s)

TS 25.321 clauses 9.2.2, 11.6.4.6

#### 7.1.5a.3.3 Test purpose

1. To test UE is able to handle all 4 SI values.
2 To test UE is able to combine MAC-ehs SDU segments from consecutive MAC-ehs PDU's
3. To test UE discards stored MAC-ehs SDU segment, if it cannot be combined.

#### 7.1.5a.3.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration 1 x Interactive or background / UL: 8 kbps DL: [max bit rate depending on UE category] / UM PS RAB as specified in TS 34.108, clause 6.11.4f.2 with the logical channel, MAC-ehs queue identity set to:

| Logical Channel ID | Mac-ehs Queue ID | Comment |
|---|---|---|
| 7 | 0 | RB5 |

DL MAC header type is set as MAC-ehs.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets and RLC Mode as UM.

Test procedure

In this test procedure each DL RLC PDU consists of one RLC SDU of size 39 octets , special LI and length indicator indicating the end of the SDU.

a) The SS transmits a MAC-ehs PDU:

The TSN = 0, SI =10, and containing one full MAC-ehs SDU 1 and one segment of MAC-ehs SDU 2.

b) UE loops back the RLC PDU corresponding to full MAC-ehs SDU 1 and stores the segment of MAC-ehs SDU 2.

c) The SS transmits a MAC-ehs PDU :

The TSN=1, SI=01, and containing remaining part of the MAC-ehs SDU 2 and a full MAC-ehs SDU3.

d) UE transmits 2 loop back PDU's corresponding to MAC-ehs SDU's 2 and 3.

e) The SS transmits a MAC-ehs PDU:

The TSN=2, SI=11, and containing a segment of the MAC-ehs SDU 4, a full MAC-ehs SDU5 and a segment of MAC-ehs SDU 6.

f) UE discards, segment of MAC-ehs SDU4, loop backs RLC PDU corresponding to MAC-ehs SDU5 and stores segment of MAC-ehs SDU 6.

g) The SS transmits a MAC-ehs PDU:

The TSN=3, SI=00, and containing one full MAC-ehs SDU 7.

h) UE discards stored segment of MAC-ehs SDU6, and loops back RLC PDU corresponding to MAC-ehs SDU 7.

i) The SS transmits a MAC-ehs PDU:

The TSN=4, SI=10, and containing first segment of MAC-ehs SDU 8.

j) The SS transmits a MAC-ehs PDU:

The TSN=5, SI=11, and containing second segment of MAC-ehs SDU 8.

k) The SS transmits a MAC-ehs PDU:

The TSN=6, SI=01, and containing last segment of MAC-ehs SDU 8.

l) UE transmits loop back PDU corresponding to MAC-ehs SDU 8.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MAC-ehs SDU, TSN=0 | TSN=0, SI=10<br>Contains full MAC-ehs SDU1 and segment of MAC-ehs SDU2 |
| 2 | → | | RLC PDU corresponding to MAC-ehs SDU1 | |
| 3 | ← | | MAC-ehs SDU, TSN=1 | TSN=1, SI=01<br>Contains segment of MAC-ehs SDU2 and full MAC-ehs SDU3 and |
| 4 | → | | RLC PDU corresponding to MAC-ehs SDU2 | |
| 5 | → | | RLC PDU corresponding to MAC-ehs SDU3 | |
| 6 | ← | | MAC-ehs SDU, TSN=2 | TSN=2, SI=11<br>Contains segment of MAC-ehs SDU4, full MAC-ehs SDU5 and segment of MAC-ehs SDU6 |
| 7 | → | | RLC PDU corresponding to MAC-ehs SDU5 | |
| 8 | | | | SS Waits for 5 seconds to see no further loop back PDU's are received |
| 9 | ← | | MAC-ehs SDU, TSN=3 | TSN=3, SI=00<br>Contains full MAC-ehs SDU7 |
| 10 | → | | RLC PDU corresponding to MAC-ehs SDU7 | |
| 11 | ← | | MAC-ehs SDU, TSN=4 | TSN=4, SI=10<br>Contains [first] segment of MAC-ehs SDU8 |
| 12 | ← | | MAC-ehs SDU, TSN=5 | TSN=5, SI=11<br>Contains second segment of MAC-ehs SDU8 [ SDU not yet completed] |
| 13 | ← | | MAC-ehs SDU, TSN=6 | TSN=6, SI=01<br>Contains last[third] segment of MAC-ehs SDU8 |
| 14 | → | | RLC PDU corresponding to MAC-ehs SDU8 | |
| 15 | | | | SS Waits for 5 seconds to see no further loop back PDU's are received |

Specific Message Contents

None.

#### 7.1.5a.3.5 Test requirements

a) In step 2, UE loop backs RLC PDU corresponding to MAC-ehs SDU1.

b) In step 4 and 5, UE loop backs RLC PDU's corresponding to MAC-ehs SDU's 2 and 3.

c) In Step 7, UE loops back RLC PDU corresponding to MAC-ehs SDU5

d) In step 8, no RLC PDU's are received by SS.

e) In Step 10, UE loops back RLC PDU corresponding to MAC-ehs SDU7

f) In Step 14, UE loops back RLC PDU corresponding to MAC-ehs SDU8

g) In step 15, no RLC PDU's are received by SS

### 7.1.5a.4 MAC-ehs reordering and stall avoidance

#### 7.1.5a.4.1 Definition and applicability

All UEs which support MAC-ehs.

#### 7.1.5a.4.2 Conformance requirement

The SI field indicates if the MAC-ehs SDU has been segmented. Table 9.2.2-1 shows the 2 bit SI field.

**Table 9.2.2-1: Structure of the SI field**

| SI Field | Segmentation indication |
|---|---|
| **00** | The first reordering SDU of the reordering PDU is a completeMAC-ehs SDU.<br>The last reordering SDU of the reordering PDU is a complete MAC-ehs SDU. |
| **01** | If there are more than one reordering SDUs in the reordering PDU, the last reordering SDU of the reordering PDU is a complete MAC-ehs SDU.<br>The first reordering SDU of the reordering PDU is the last segment of a MAC-ehs SDU. |
| **10** | If there are more than one reordering SDUs in the reordering PDU, the first reordering SDU of the reordering PDU is a complete MAC-ehs SDU.<br>The last reordering SDU of the reordering PDU is the first segment of a MAC-ehs SDU. |
| **11** | If there are more than one reordering SDUs in the reordering PDU, the first reordering SDU of the reordering PDU is the last segment of a MAC-ehs SDU and the last reordering SDU of reordering PDU is the first segment of a MAC-ehs SDU.<br>If there is only one reordering SDU in the reordering PDU, the reordering SDU is a middle segment of a MAC-ehs SDU. |

[…]

When a reordering PDU with TSN = SN is received:

- if SN is within the receiver window:
  - if SN < next_expected_TSN, or this reordering PDU has previously been received:
    - the reordering PDU shall be discarded;
  - else:
    - the reordering PDU shall be placed in the reordering buffer at the place indicated by the TSN.
- if SN is outside the receiver window:
  - the received reordering PDU shall be placed above the highest received TSN in the reordering buffer, at the position indicated by SN;
  - RcvWindow_UpperEdge shall be set to SN thus advancing the receiver window;
  - any reordering PDU with TSN ≤ RcvWindow_UpperEdge – RECEIVE_WINDOW_SIZE, i.e. outside the receiver window after its position is updated, shall be removed from the reordering buffer and be delivered to the reassembly entity;
  - if next_expected_TSN is below the updated receiver window:
    - next_expected_TSN shall be set to RcvWindow_UpperEdge – RECEIVE_WINDOW_SIZE + 1;
- if the reordering PDU with TSN = next_expected_TSN is stored in the reordering buffer:
  - all received reordering PDUs with consecutive TSNs from next_expected_TSN (included) up to the first not received reordering PDU shall be delivered to the reassembly entity;
  - next_expected_TSN shall be advanced to the TSN of this first not received reordering PDU.

[...]

If no timer T1 is active:

- the timer T1 shall be started when a reordering PDU with TSN > next_expected_TSN is correctly received.

- T1_TSN shall be set to the TSN of this reordering PDU.

If a timer T1 is already active:

- no additional timer shall be started, i.e. only one timer T1 may be active at a given time.

The timer T1 shall be stopped if:

- the reordering PDU with TSN = T1_TSN can be delivered to the reassembly entity before the timer expires.

When the timer T1expires and T1_TSN > next_expected_TSN:

- all correctly received reordering PDUs with TSN > next_expected_TSN up to and including T1_TSN-1 shall be delivered to the reassembly entity;
- all correctly received reordering PDUs up to the next not received reordering PDU shall be delivered to the reassembly entity.
- next_expected_TSN shall be set to the TSN of the next not received reordering PDU.

When the timer T1 is stopped or expires, and there still exist some received reordering PDUs that can not be delivered to higher layer:

- timer T1 is started
- set T1_TSN to the highest TSN among those of the reordering PDUs that can not be delivered.

[...]

The reassembly unit processes the SI field associated with a reordering PDU. The UE shall:

- if SI field is set to “00”:
  - deliver all MAC-d or MAC-c PDUs corresponding to MAC-ehs SDUs in the reordering PDU to demultiplexing entity;
  - discard any previously stored segment of MAC-ehs SDU.
- if SI field is set to “01”:
  - if the received and stored segments of a MAC-ehs SDU are consecutive:
    - combine the first reordering SDU with the stored segment of MAC-ehs SDU;
    - deliver the MAC-d or MAC-c PDU corresponding to the combined MAC-ehs SDU to demultiplexing entity.
  - if the received and stored segments of MAC-ehs SDU are not consecutive
    - discard the first received reordering SDU and the stored segment of MAC-ehs SDU.
  - deliver all MAC-d or MAC-c PDUs corresponding to subsequent MAC-ehs SDUs in the reordering queue to demultiplexing entity;
- if SI field is set to “10”:
  - deliver all MAC-d or MAC-c PDUs corresponding to all but last reordering SDU in the reordering PDU to the demultiplexing entity;
  - discard any previously stored segment of MAC-ehs SDU and store the last reordering SDU of the received reordering PDU
- if SI field is set to “11”:
  - if the received and stored MAC-ehs SDUs are consecutive:
    - if there is only one reordering SDU in the reordering PDU:

- combine the received reordering SDU with the stored segment of MAC-ehs SDU:

- if is more than one reordering SDUs in the reordering PDU:
  - combine the first received reordering SDU with the stored segment MAC-ehs SDU;
  - deliver the MAC-d or MAC-c PDU corresponding to the combined MAC-ehs SDU to demultiplexing entity.
  - deliver all MAC-d or MAC-c PDUs corresponding to all but last reordering SDU in the reordering PDU to demultiplexing entity;
  - discard any previously stored segment of MAC-ehs SDU and store the last reordering SDU of the received reordering PDU.

- if the received and stored segments of the MAC-ehs SDU are not consecutive:
  - discard the first received reordering SDU and the stored segment of MAC-ehs SDU;
  - if is more than one reordering SDUs in the reordering PDU:
    - deliver all MAC-d or MAC-c PDUs corresponding to all but first and last reordering SDUs in the reordering PDU to demultiplexing entity and store the last reordering SDU of the received reordering PDU.

Reference(s)

TS 25.321 clauses 9.2.2, 11.6.4.5.2 and 11.6.4.6

### 7.1.5a.4.3 Test purpose

1. To confirm that the UE performs MAC-ehs reordering and delivers RLC PDUs in order to RLC.
2. To confirm that the UE performs stall avoidance in case of missing MAC-ehs PDUs based on a) window based stall avoidance and b) timer based stall avoidance.
3. To confirm that the UE correctly discards partial MAC-ehs SDU segments in case of missing MAC-ehs PDUs.

### 7.1.5a.4.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration 1 x Interactive or background / UL: 8 kbps DL: [max bit rate depending on UE category] / UM PS RAB as specified in TS 34.108, clause 6.11.4f.2. The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-ehs receiver window size | 32 |
| MAC-ehs reordering timer T1 | 400 ms |

DL MAC header type is set as MAC-ehs.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Let T be the value of MAC-ehs reordering timer T1 parameter.

Test procedure

In this test procedure each DL RLC PDU consists of one RLC SDU of size 39 octets, special LI and one length indicator indicating the end of the SDU.

a) The SS transmits a MAC-ehs PDU with TSN = 0, SI = 00 and containing a full MAC-ehs SDU carrying RLC PDU with SN = 0

b) The SS checks that the RLC PDU corresponding to DL SN = 0 is looped back

c) The SS transmits a MAC-ehs PDU with TSN = 1, SI = 00 and containing a full MAC-ehs SDU carrying RLC PDU with SN = 1

d) The SS checks that the RLC PDU corresponding to DL SN = 1 is looped back

e) The SS repeats the transmission of the MAC-ehs PDUs in steps a) and c) with identical content except that the RLC PDUs have SN = 2 and 3

f) The SS checks that no data is looped back (the data is discarded in the UE)

g) The SS transmits a MAC-ehs PDU with TSN = 3, SI = 10 and containing a full MAC-ehs SDU carrying RLC PDU with SN = 3 as well as the start segment of a MAC-ehs SDU carrying RLC PDU with SN = 4

h) The SS waits 400 ms and checks that no data is looped back.

i) The SS transmits a MAC-ehs PDU with TSN = 2, SI = 00 and containing a full MAC-ehs SDU carrying an RLC PDU with SN=2

j) The SS checks that the RLC PDUs corresponding to DL SN = 2 and 3 are looped back

k) The SS transmits a MAC-ehs PDU with TSN = 6, SI = 00 and containing a full MAC-ehs SDU carrying an RLC PDU with SN = 5

l) The SS transmits a MAC-ehs PDU with TSN = 7, SI = 00 and containing a full MAC-ehs SDU carrying an RLC PDU with SN = 6

m) The SS transmits a MAC-ehs PDU with TSN = 38, SI = 01 and containing the end segment of a MAC-ehs SDU carrying an RLC PDU with SN=7, as well as a full MAC-ehs SDU carrying an RLC PDU with SN = 8

n) The SS checks that the RLC PDUs corresponding to DL SN = 5 and 6 are looped back but the RLC PDUs corresponding to DL SN = 4, 7 and 8 are not looped back

o) The SS waits 400 ms and checks that the RLC PDU corresponding to DL SN = 8 is looped back after this time, but that the RLC PDUs with SN = 4 and 7 are not looped back

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MAC-ehs PDU with TSN = 0 and SI = 00, containing a full MAC-ehs SDU carrying RLC PDU with SN = 0 | |
| 2 | → | | RLC PDU corresponding to DL SN 0 | |
| 3 | ← | | MAC-ehs PDU with TSN = 1 and SI = 00, containing a full MAC-ehs SDU carrying RLC PDU with SN = 1 | |
| 4 | → | | RLC PDU corresponding to DL SN 1 | |
| 5 | ← | | MAC-ehs PDU with TSN = 0 and SI = 00, containing a full MAC-ehs SDU carrying RLC PDU with SN = 2 | The duplicated data is discarded in the UE |
| 6 | ← | | MAC-ehs PDU with TSN = 1 and SI = 00, containing a full MAC-ehs SDU carrying RLC PDU with SN = 3 | The duplicated data is discarded in the UE |
| 7 | ← | | MAC-ehs PDU with TSN = 3 and SI = 10, containing a full MAC-ehs SDU carrying RLC PDU with SN = 3 and the start segment of a MAC-ehs SDU carrying RLC PDU with SN = 4 | |
| 8 | | | SS waits T ms and checks that no data is looped back | The waiting time may need to be adjusted to assure that T1 has not expired in the UE |
| 9 | ← | | MAC-ehs PDU with TSN = 2 and SI = 00, containing a full MAC-ehs SDU carrying RLC PDU with SN = 2 | |
| 10 | → | | RLC PDUs corresponding to DL SN 2,3 | |
| 11 | ← | | MAC-ehs PDU with TSN = 6 and SI = 00, containing a full MAC-ehs SDU carrying RLC PDU with SN = 5 | |
| 12 | ← | | MAC-ehs PDU with TSN = 7 and SI = 00, containing a full MAC-ehs SDU carrying RLC PDU with SN = 6 | |
| 13 | ← | | MAC-ehs PDU with TSN = 38 and SI = 01, containing the end segment of a MAC-ehs SDU carrying RLC PDU with SN = 7 and a full MAC-ehs SDU carrying RLC PDU with SN = 8 | SS need to transmit this PDU before timer T1 in UE expires (400 ms after reception of MAC-ehs PDU with TSN=6). Note: $T_A$ |
| 14 | → | | RLC PDUs corresponding to DL SN 5,6 | The RLC PDUs corresponding to DL SN = 5,6 are looped back after reception of the MAC-ehs PDU in step 13, i.e. before timer T1 expires. See NOTE 5 |
| 15 | | | SS waits T ms and checks that the RLC PDUs corresponding to DL SN = 4, 7 and 8 are not looped back during this time | |
| 16 | → | | RLC PDU corresponding to DL SN 8 | The RLC PDU corresponding to DL SN = 8 is looped back after expiry of T1.<br>Note: $T_{B.}$<br>See NOTE 6 |

NOTE 1: The RLC SN in step 5,6 is increased since otherwise the data would be discarded by RLC even if the MAC-ehs reordering does not work correctly. SInce the data is discarded the same RLC SN can be reused later in the test sequence.
NOTE 2: Void
NOTE3: In step 13, the timer T1 is restarted in the UE since the PDU with TSN = 38 cannot be delivered to higher layers.
NOTE 4: General timer tolerance as defined by 34.108 sub-clause 4.2.3 applies.
NOTE 5: RLC PDUs with UL SN=4 and 5 is looped back
NOTE 6: RLC PDU with UL SN=6 is looped back

Specific Message Contents

None

#### 7.1.5a.4.5 Test requirements

1. After step 1, the RLC PDU corresponding to DL SN = 0 shall be looped back
2. After step 3, the RLC PDU corresponding to DL SN = 1 shall be looped back
3. After steps 5 and 6, no data shall be looped back
4. After step 7, no data shall be looped back and no RLC status report shall be received
5. After step 9, the RLC PDUs corresponding to DL SN = 2 and 3 shall be looped back
6. After step 13, the RLC PDUs corresponding to DL SN = 5 and 6 shall be looped back
7. In step 16, the RLC PDU corresponding to DL SN = 8 shall be looped back and $T_B - T_A$ shall be equal to T ms

### 7.1.5a.5 MAC-ehs transport block size selection

#### 7.1.5a.5.1 Generic test procedure for the MAC-ehs transport block size selection test cases

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-7 IE "HS-DSCH physical layer category extension". This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is configured.

Definition of test variables:

| | |
|---|---|
| $N_{\underline{codes}}$ | Number of HS-DSCH codes (1..15, maximum number dependent on UE category) |
| $M$ | Type of modulation scheme (QPSK, 16QAM, 64QAM) |
| $k_i$ | TFRI signalled on the HS-SCCH value |
| $K_{0,I}$ | See table 7.1.5a.5.3 |
| $k_t$ | Transport Block Size index $(=k_i + k_{0,I})$, see table 7.1.5a.5.4 |
| $TB_{size}$ | Transport Block size |
| *MAC-ehs_header_size* | MAC-ehs header size for the reference HS-DSCH radio bearer configuration under test. |
| *MAC-d_PDU_size* | MAC-d PDU size for the reference HS-DSCH radio bearer configuration under test. |

**Table 7.1.5a.5.3: Values of $k_{0,i}$ for different numbers of channelization codes and modulation schemes**

| Combination *i* | Modulation scheme | Number of channelization codes | $k_{0,i}$ |
|---|---|---|---|
| 0 | QPSK | 1 | 1 |
| 1 | | 2 | 58 |
| 2 | | 3 | 81 |
| 3 | | 4 | 97 |
| 4 | | 5 | 109 |
| 5 | | 6 | 119 |
| 6 | | 7 | 128 |
| 7 | | 8 | 136 |
| 8 | | 9 | 142 |
| 9 | | 10 | 148 |
| 10 | | 11 | 153 |
| 11 | | 12 | 158 |
| 12 | | 13 | 163 |
| 13 | | 14 | 167 |
| 14 | | 15 | 171 |
| 15 | 16QAM | 1 | 58 |
| 16 | | 2 | 97 |
| 17 | | 3 | 119 |
| 18 | | 4 | 136 |
| 19 | | 5 | 148 |
| 20 | | 6 | 158 |
| 21 | | 7 | 167 |
| 22 | | 8 | 174 |
| 23 | | 9 | 181 |
| 24 | | 10 | 187 |
| 25 | | 11 | 192 |
| 26 | | 12 | 197 |
| 27 | | 13 | 201 |
| 28 | | 14 | 206 |
| 29 | | 15 | 209 |
| 30 | 64QAM | 1 | 81 |
| 31 | | 2 | 119 |
| 32 | | 3 | 142 |
| 33 | | 4 | 158 |
| 34 | | 5 | 171 |
| 35 | | 6 | 181 |
| 36 | | 7 | 190 |
| 37 | | 8 | 197 |
| 38 | | 9 | 204 |
| 39 | | 10 | 209 |
| 40 | | 11 | 215 |
| 41 | | 12 | 220 |
| 42 | | 13 | 224 |
| 43 | | 14 | 228 |
| 44 | | 15 | 233 |

**Table 7.1.5a.5.4: Mapping of HS-DSCH Transport Block Size for FDD to value of index $k_t$ (=$k_i$ + $k_{0,l}$)**

| Index | TB Size | Index | TB Size | Index | TB Size | Index | TB Size |
|---|---|---|---|---|---|---|---|
| 1 | 120 | 86 | 1000 | 171 | 4592 | 256 | 21000 |
| 2 | 128 | 87 | 1016 | 172 | 4672 | 257 | 21384 |
| 3 | 136 | 88 | 1040 | 173 | 4760 | 258 | 21768 |
| 4 | 144 | 89 | 1056 | 174 | 4848 | 259 | 22160 |
| 5 | 152 | 90 | 1072 | 175 | 4936 | 260 | 22560 |
| 6 | 160 | 91 | 1096 | 176 | 5024 | 261 | 22968 |
| 7 | 168 | 92 | 1112 | 177 | 5112 | 262 | 23384 |
| 8 | 176 | 93 | 1136 | 178 | 5208 | 263 | 23808 |
| 9 | 184 | 94 | 1152 | 179 | 5296 | 264 | 24232 |
| 10 | 192 | 95 | 1176 | 180 | 5392 | 265 | 24672 |
| 11 | 200 | 96 | 1200 | 181 | 5488 | 266 | 25120 |
| 12 | 208 | 97 | 1216 | 182 | 5592 | 267 | 25568 |
| 13 | 216 | 98 | 1240 | 183 | 5688 | 268 | 26032 |
| 14 | 224 | 99 | 1264 | 184 | 5792 | 269 | 26504 |
| 15 | 232 | 100 | 1288 | 185 | 5896 | 270 | 26976 |
| 16 | 240 | 101 | 1312 | 186 | 6008 | 271 | 27464 |
| 17 | 248 | 102 | 1336 | 187 | 6112 | 272 | 27960 |
| 18 | 256 | 103 | 1360 | 188 | 6224 | 273 | 28464 |
| 19 | 264 | 104 | 1384 | 189 | 6336 | 274 | 28976 |
| 20 | 272 | 105 | 1408 | 190 | 6448 | 275 | 29504 |
| 21 | 280 | 106 | 1432 | 191 | 6568 | 276 | 30032 |
| 22 | 288 | 107 | 1456 | 192 | 6688 | 277 | 30576 |
| 23 | 296 | 108 | 1488 | 193 | 6808 | 278 | 31128 |
| 24 | 304 | 109 | 1512 | 194 | 6928 | 279 | 31688 |
| 25 | 312 | 110 | 1536 | 195 | 7056 | 280 | 32264 |
| 26 | 320 | 111 | 1568 | 196 | 7184 | 281 | 32848 |
| 27 | 328 | 112 | 1600 | 197 | 7312 | 282 | 33440 |
| 28 | 336 | 113 | 1624 | 198 | 7440 | 283 | 34040 |
| 29 | 344 | 114 | 1656 | 199 | 7576 | 284 | 34656 |
| 30 | 352 | 115 | 1688 | 200 | 7712 | 285 | 35280 |
| 31 | 360 | 116 | 1712 | 201 | 7856 | 286 | 35920 |
| 32 | 368 | 117 | 1744 | 202 | 7992 | 287 | 36568 |
| 33 | 376 | 118 | 1776 | 203 | 8136 | 288 | 37224 |
| 34 | 384 | 119 | 1808 | 204 | 8288 | 289 | 37896 |
| 35 | 392 | 120 | 1840 | 205 | 8440 | 290 | 38576 |
| 36 | 400 | 121 | 1872 | 206 | 8592 | 291 | 39272 |
| 37 | 408 | 122 | 1912 | 207 | 8744 | 292 | 39984 |
| 38 | 416 | 123 | 1944 | 208 | 8904 | 293 | 40704 |
| 39 | 424 | 124 | 1976 | 209 | 9064 | 294 | 41440 |
| 40 | 440 | 125 | 2016 | 210 | 9224 | 295 | 42192 |
| 41 | 448 | 126 | 2048 | 211 | 9392 | | |
| 42 | 456 | 127 | 2088 | 212 | 9560 | | |
| 43 | 464 | 128 | 2128 | 213 | 9736 | | |
| 44 | 472 | 129 | 2168 | 214 | 9912 | | |
| 45 | 480 | 130 | 2200 | 215 | 10088 | | |
| 46 | 488 | 131 | 2240 | 216 | 10272 | | |
| 47 | 496 | 132 | 2288 | 217 | 10456 | | |
| 48 | 504 | 133 | 2328 | 218 | 10648 | | |
| 49 | 512 | 134 | 2368 | 219 | 10840 | | |
| 50 | 528 | 135 | 2408 | 220 | 11032 | | |
| 51 | 536 | 136 | 2456 | 221 | 11232 | | |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 52 | 544 | 137 | 2496 | 222 | 11432 | | |
| 53 | 552 | 138 | 2544 | 223 | 11640 | | |
| 54 | 560 | 139 | 2592 | 224 | 11848 | | |
| 55 | 576 | 140 | 2632 | 225 | 12064 | | |
| 56 | 584 | 141 | 2680 | 226 | 12280 | | |
| 57 | 592 | 142 | 2736 | 227 | 12504 | | |
| 58 | 608 | 143 | 2784 | 228 | 12728 | | |
| 59 | 616 | 144 | 2832 | 229 | 12960 | | |
| 60 | 624 | 145 | 2880 | 230 | 13192 | | |
| 61 | 640 | 146 | 2936 | 231 | 13432 | | |
| 62 | 648 | 147 | 2984 | 232 | 13672 | | |
| 63 | 664 | 148 | 3040 | 233 | 13920 | | |
| 64 | 672 | 149 | 3096 | 234 | 14168 | | |
| 65 | 688 | 150 | 3152 | 235 | 14424 | | |
| 66 | 696 | 151 | 3208 | 236 | 14688 | | |
| 67 | 712 | 152 | 3264 | 237 | 14952 | | |
| 68 | 728 | 153 | 3328 | 238 | 15224 | | |
| 69 | 736 | 154 | 3384 | 239 | 15496 | | |
| 70 | 752 | 155 | 3448 | 240 | 15776 | | |
| 71 | 768 | 156 | 3512 | 241 | 16064 | | |
| 72 | 776 | 157 | 3576 | 242 | 16352 | | |
| 73 | 792 | 158 | 3640 | 243 | 16648 | | |
| 74 | 808 | 159 | 3704 | 244 | 16944 | | |
| 75 | 824 | 160 | 3768 | 245 | 17256 | | |
| 76 | 840 | 161 | 3840 | 246 | 17568 | | |
| 77 | 848 | 162 | 3912 | 247 | 17880 | | |
| 78 | 864 | 163 | 3976 | 248 | 18200 | | |
| 79 | 880 | 164 | 4048 | 249 | 18536 | | |
| 80 | 896 | 165 | 4120 | 250 | 18864 | | |
| 81 | 912 | 166 | 4200 | 251 | 19208 | | |
| 82 | 928 | 167 | 4272 | 252 | 19552 | | |
| 83 | 952 | 168 | 4352 | 253 | 19904 | | |
| 84 | 968 | 169 | 4432 | 254 | 20264 | | |
| 85 | 984 | 170 | 4512 | 255 | 20632 | | |

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off

User Equipment:

UE in idle mode

The following parameters are specific for this test case:

Common for all UE categories:

| Parameter | Value |
|---|---|
| MAC-ehs receiver window size | 16 |
| Number of HARQ processes | 1 |
| Number of reordering queues | 1 |

UE Category 1 to 4:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 128 |
| RLC Receiving window size | 512 |

UE Category 5 and 6:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 256 |
| RLC Receiving window size | 512 |

UE Category 7 and 8:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 1536 |

UE Category 9 and 10:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 2047 |

UE Category 11 and 12:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 128 |
| RLC Receiving window size | 1024 |

UE Category 13:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 2047 |

UE Category 14:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 2047 |

UE Category 15:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 2047 |

UE Category 16:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 2047 |

UE Category 17:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 2047 |

UE Category 18:

| Parameter | Value |
|---|---|
| RLC Transmission window size | 512 |
| RLC Receiving window size | 2047 |

Test procedure

a) The SS establishes the reference radio bearer configuration "Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH" using enhanced Layer 2 configuration with Flexible RLC and MAC-ehs (Alt 3) as specified in TS 34.108, clause 6.10.2.4.5.1. See note 1.

b) The SS closes the test loop using UE test loop mode 1 setting the UL RLC SDU size parameter to 39 octets (312 bits).

c) The SS sets *M*= modulation scheme as specified in the test case.

d) The SS sets $N_{\underline{codes}} = 1$.

e) The SS sets $k_{0,i}$ to the value according to table 7.1.5a.5.3 based on the actual value of *M* and $N_{\underline{codes}}$.

f) The SS sets the test parameter $k_i$ to 0.

g) The SS calculates the index value $k_t$ ($=k_i + k_{0,I}$) and look up the transport block size, $TB_{size}$, for the actual $k_t$ in table 7.1.5a.5.4.

If $TB_{size}$ is bigger than the UE capability for "Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI" then SS continues with step n) else step h). See note 2.

h) The SS calculates the coding rate using $Coding_rate = (TB_{size} + N_{CRC}) / (N_{codes} \cdot N_{phy_bits})$.

If *Coding_rate* falls within any of the ranges defined in table 14.1.3.2.1b then SS continues with step m), else proceed with step i). See note 4.

i) If the transport block size $TB_{size}$ is >500 bit the SS creates 4 DL RLC SDUs of size 8*FLOOR (($TB_{size}$ – 136 bit)/32) (largest possible RLC SDU size considering octet alignment and MAC-ehs and RLC AM headers). If the transport block size $TB_{size}$ is $\leq$ 500 bit the SS creates 1 DL RLC SDUs of size 8*FLOOR(($TB_{size}$ – 40 bit)/8) . See note 3.

j) Void

k) The SS configures the HARQ transmission parameters according to TS 34.108 [9], table 6.1.5.1 based on the actual value of *M*. Then the SS transmits the MAC-ehs PDU.

l) The SS checks that the UE returned RLC SDUs has the same content as the first 312 bits of the test data sent by the SS in downlink for DL RLC SDU size greater than or equal to 312 bits. If the downlink RLC SDU size is less than 312 bits then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink.

m) The SS increments the test parameter $k_i$ by 1. For categories 13 and 15 if *ki* is less than 53; or for categories 14, 17 and 18 if $k_i$ is less than 63; then SS repeats steps g) to m).

n) The SS increments the test parameter $N_{codes}$ *by 1*. If $N_{codes}$ is less or equal to the UE capability for "*Maximum number of HS-DSCH codes received"* then the SS repeats test steps e) to n) else continue with step o). See note 2.

o) The SS opens the UE test loop.

p) The SS release the radio bearer.

q) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test.

NOTE 2: See table 14.1.3.1.1 in section 14.1.3.1 for FDD HS-DSCH physical layer and RLC and MAC-ehs capability parameters and there values for different UE FDD HS-DSCH physical layer categories (UE categories). The capability parameters having impact on the test procedure are: "Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI" *and* "*Maximum number of HS-DSCH codes received"*.

NOTE 3: The test data for DTCHs mapped on HS-DSCH is divided into 4 RLC SDUs to keep the maximum SDU size below or equal to 1500 octets (1500 octets is the limit of QoS parameter "Max SDU size" in SM). To allow for testing of the smallest TB sizes a single RLC PDU is used when the TB size is small to reduce the L2 header overhead.

NOTE 4: See table 14.1.3.2.1b in section 14.1.3.2.1b for those values of coding rate that must be avoided because of turbo coder irregularities.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| 7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| 9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| 12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 13 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is set to 39 octets |
| 14 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15 | SS | | | The SS calculates test data for the first TFRC (TFRI,$N_{codes}$ and *M*). |
| 16 | <-- | | DOWNLINK MAC-hs PDU | Send test data. The MAC-hs PDU contains one or 4 RLC SDUs depending on TB size to be tested |
| 17 | --> | | UPLINK RLC SDUs | The SS checks that the content of the received UL RLC SDUs are correct |
| 18 | SS | | | The SS calculates test data for next TFRC and repeat steps 16 to 18 until all TFRCs have been tested. |
| 19 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 20 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 21 | | | RB RELEASE | RRC |
| 22 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 23 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |
| Note 1: In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message. | | | | |

## 7.1.5a.5.2 MAC-ehs transport block size selection / QPSK and 16QAM

### 7.1.5a.5.2.1 Definition and applicability

All UEs which support FDD, HS-PDSCH and MAC-ehs.

### 7.1.5a.5.2.2 Conformance requirement

For all transmissions of a transport block, the transport block size is derived from the TFRI value as specified below, except only in those cases of retransmissions where the Node-B selects a combination for which no mapping exists between the original transport block size and the selected combination of channelisation Code set and modulation type. In such cases, the transport block size index value signalled to the UE shall be set to 111111, i.e., $k_i$=63.

Let $k_i$ be the TFRI signalled on the HS-SCCH value and let $k_{0,i}$ be the value in table 7.1.5a.5.1 or table 7.1.5a.5.2.2 (as configured by higher layers) corresponding to the modulation and the number of codes signalled on the HS-SCCH. Let $k_t$ be the sum of the two values: $k_t = k_i + k_{0,i}$. The transport block size $L(k_t)$ can be obtained by accessing the position $k_t$ in one of the tables in Annex A (normative) or by using one of the corresponding formulas below (informative).

The use of table 7.1.5a.5.2.2 requires MAC-ehs.

Formula corresponding to table 7.1.5a.5.2.1:

If $k_t < 40$

$$L(k_t) = 125 + 12 \cdot k_t$$

else

$$L(k_t) = \lfloor L_{\min} p^{k_t} \rfloor$$
$$p = 2085/2048$$
$$L_{\min} = 296$$

end

**Table 7.1.5a.5.2.1: Table 0 of values of $k_{0,i}$ for different numbers of channelization codes and modulation schemes (QPSK and 16QAM)**

| Combination *i* | Modulation scheme | Number of channelization codes | $k_{0,i}$ |
|---|---|---|---|
| 0 | QPSK | 1 | 1 |
| 1 | | 2 | 40 |
| 2 | | 3 | 63 |
| 3 | | 4 | 79 |
| 4 | | 5 | 92 |
| 5 | | 6 | 102 |
| 6 | | 7 | 111 |
| 7 | | 8 | 118 |
| 8 | | 9 | 125 |
| 9 | | 10 | 131 |
| 10 | | 11 | 136 |
| 11 | | 12 | 141 |
| 12 | | 13 | 145 |
| 13 | | 14 | 150 |
| 14 | | 15 | 153 |
| 15 | 16QAM | 1 | 40 |
| 16 | | 2 | 79 |
| 17 | | 3 | 102 |
| 18 | | 4 | 118 |
| 19 | | 5 | 131 |
| 20 | | 6 | 141 |
| 21 | | 7 | 150 |
| 22 | | 8 | 157 |
| 23 | | 9 | 164 |
| 24 | | 10 | 169 |
| 25 | | 11 | 175 |
| 26 | | 12 | 180 |
| 27 | | 13 | 184 |
| 28 | | 14 | 188 |
| 29 | | 15 | 192 |

NOTE: Some UE categories are only required to support values of $K_i$ up to the value of 52, as described in [23].

Formula corresponding to table 7.1.5a.5.2.2:

If $k_t < 40$

$$L(k_t) = (14 + k_t) * 8$$

else

$$L(k_t) = \lfloor L_{\min} p^{k_t} \rfloor * 8$$

$$p = \left( \frac{5274}{27} \right)^{\frac{1}{296-1}}$$

$$L_{\min} = 27$$

end

**Table 7.1.5a.5.2.2: Table 1 of values of $k_{0,i}$ for different numbers of channelization codes and modulation schemes (QPSK, 16QAM and 64QAM)**

| Combination *i* | Modulation scheme | Number of channelization codes | $k_{0,i}$ |
|---|---|---|---|
| 0 | QPSK | 1 | 1 |
| 1 | | 2 | 58 |
| 2 | | 3 | 81 |
| 3 | | 4 | 97 |
| 4 | | 5 | 109 |
| 5 | | 6 | 119 |
| 6 | | 7 | 128 |
| 7 | | 8 | 136 |
| 8 | | 9 | 142 |
| 9 | | 10 | 148 |
| 10 | | 11 | 153 |
| 11 | | 12 | 158 |
| 12 | | 13 | 163 |
| 13 | | 14 | 167 |
| 14 | | 15 | 171 |
| 15 | 16QAM | 1 | 58 |
| 16 | | 2 | 97 |
| 17 | | 3 | 119 |
| 18 | | 4 | 136 |
| 19 | | 5 | 148 |
| 20 | | 6 | 158 |
| 21 | | 7 | 167 |
| 22 | | 8 | 174 |
| 23 | | 9 | 181 |
| 24 | | 10 | 187 |
| 25 | | 11 | 192 |
| 26 | | 12 | 197 |
| 27 | | 13 | 201 |
| 28 | | 14 | 206 |
| 29 | | 15 | 209 |
| 30 | 64QAM | 1 | 81 |
| 31 | | 2 | 119 |
| 32 | | 3 | 142 |
| 33 | | 4 | 158 |
| 34 | | 5 | 171 |
| 35 | | 6 | 181 |
| 36 | | 7 | 190 |
| 37 | | 8 | 197 |
| 38 | | 9 | 204 |
| 39 | | 10 | 209 |
| 40 | | 11 | 215 |
| 41 | | 12 | 220 |
| 42 | | 13 | 224 |
| 43 | | 14 | 228 |
| 44 | | 15 | 233 |

NOTE: Some UE categories are only required to support values of $K_i$ up to the value of 52, as described in 3GPP TS 25.306 .

……

The following table provides the mapping between $k_t$ (as per the definition above) and the HS-DSCH Transport Block Size ($L(k_t)$) corresponding to table 7.1.5a.5.2.1:

| Index | TB Size | Index | TB Size | Index | TB Size |
|---|---|---|---|---|---|
| 1 | 137 | 86 | 1380 | 171 | 6324 |
| 2 | 149 | 87 | 1405 | 172 | 6438 |
| 3 | 161 | 88 | 1430 | 173 | 6554 |
| 4 | 173 | 89 | 1456 | 174 | 6673 |
| 5 | 185 | 90 | 1483 | 175 | 6793 |
| 6 | 197 | 91 | 1509 | 176 | 6916 |
| 7 | 209 | 92 | 1537 | 177 | 7041 |
| 8 | 221 | 93 | 1564 | 178 | 7168 |
| 9 | 233 | 94 | 1593 | 179 | 7298 |
| 10 | 245 | 95 | 1621 | 180 | 7430 |
| 11 | 257 | 96 | 1651 | 181 | 7564 |
| 12 | 269 | 97 | 1681 | 182 | 7700 |
| 13 | 281 | 98 | 1711 | 183 | 7840 |
| 14 | 293 | 99 | 1742 | 184 | 7981 |
| 15 | 305 | 100 | 1773 | 185 | 8125 |
| 16 | 317 | 101 | 1805 | 186 | 8272 |
| 17 | 329 | 102 | 1838 | 187 | 8422 |
| 18 | 341 | 103 | 1871 | 188 | 8574 |
| 19 | 353 | 104 | 1905 | 189 | 8729 |
| 20 | 365 | 105 | 1939 | 190 | 8886 |
| 21 | 377 | 106 | 1974 | 191 | 9047 |
| 22 | 389 | 107 | 2010 | 192 | 9210 |
| 23 | 401 | 108 | 2046 | 193 | 9377 |
| 24 | 413 | 109 | 2083 | 194 | 9546 |
| 25 | 425 | 110 | 2121 | 195 | 9719 |
| 26 | 437 | 111 | 2159 | 196 | 9894 |
| 27 | 449 | 112 | 2198 | 197 | 10073 |
| 28 | 461 | 113 | 2238 | 198 | 10255 |
| 29 | 473 | 114 | 2279 | 199 | 10440 |
| 30 | 485 | 115 | 2320 | 200 | 10629 |
| 31 | 497 | 116 | 2362 | 201 | 10821 |
| 32 | 509 | 117 | 2404 | 202 | 11017 |
| 33 | 521 | 118 | 2448 | 203 | 11216 |
| 34 | 533 | 119 | 2492 | 204 | 11418 |
| 35 | 545 | 120 | 2537 | 205 | 11625 |
| 36 | 557 | 121 | 2583 | 206 | 11835 |
| 37 | 569 | 122 | 2630 | 207 | 12048 |
| 38 | 581 | 123 | 2677 | 208 | 12266 |
| 39 | 593 | 124 | 2726 | 209 | 12488 |
| 40 | 605 | 125 | 2775 | 210 | 12713 |
| 41 | 616 | 126 | 2825 | 211 | 12943 |
| 42 | 627 | 127 | 2876 | 212 | 13177 |
| 43 | 639 | 128 | 2928 | 213 | 13415 |
| 44 | 650 | 129 | 2981 | 214 | 13657 |
| 45 | 662 | 130 | 3035 | 215 | 13904 |
| 46 | 674 | 131 | 3090 | 216 | 14155 |
| 47 | 686 | 132 | 3145 | 217 | 14411 |
| 48 | 699 | 133 | 3202 | 218 | 14671 |
| 49 | 711 | 134 | 3260 | 219 | 14936 |
| 50 | 724 | 135 | 3319 | 220 | 15206 |
| 51 | 737 | 136 | 3379 | 221 | 15481 |
| 52 | 751 | 137 | 3440 | 222 | 15761 |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 764 | 138 | 3502 | 223 | 16045 |
| 54 | 778 | 139 | 3565 | 224 | 16335 |
| 55 | 792 | 140 | 3630 | 225 | 16630 |
| 56 | 806 | 141 | 3695 | 226 | 16931 |
| 57 | 821 | 142 | 3762 | 227 | 17237 |
| 58 | 836 | 143 | 3830 | 228 | 17548 |
| 59 | 851 | 144 | 3899 | 229 | 17865 |
| 60 | 866 | 145 | 3970 | 230 | 18188 |
| 61 | 882 | 146 | 4042 | 231 | 18517 |
| 62 | 898 | 147 | 4115 | 232 | 18851 |
| 63 | 914 | 148 | 4189 | 233 | 19192 |
| 64 | 931 | 149 | 4265 | 234 | 19538 |
| 65 | 947 | 150 | 4342 | 235 | 19891 |
| 66 | 964 | 151 | 4420 | 236 | 20251 |
| 67 | 982 | 152 | 4500 | 237 | 20617 |
| 68 | 1000 | 153 | 4581 | 238 | 20989 |
| 69 | 1018 | 154 | 4664 | 239 | 21368 |
| 70 | 1036 | 155 | 4748 | 240 | 21754 |
| 71 | 1055 | 156 | 4834 | 241 | 22147 |
| 72 | 1074 | 157 | 4921 | 242 | 22548 |
| 73 | 1093 | 158 | 5010 | 243 | 22955 |
| 74 | 1113 | 159 | 5101 | 244 | 23370 |
| 75 | 1133 | 160 | 5193 | 245 | 23792 |
| 76 | 1154 | 161 | 5287 | 246 | 24222 |
| 77 | 1175 | 162 | 5382 | 247 | 24659 |
| 78 | 1196 | 163 | 5480 | 248 | 25105 |
| 79 | 1217 | 164 | 5579 | 249 | 25558 |
| 80 | 1239 | 165 | 5680 | 250 | 26020 |
| 81 | 1262 | 166 | 5782 | 251 | 26490 |
| 82 | 1285 | 167 | 5887 | 252 | 26969 |
| 83 | 1308 | 168 | 5993 | 253 | 27456 |
| 84 | 1331 | 169 | 6101 | 254 | 27952 |
| 85 | 1356 | 170 | 6211 | | |

The following table provides the mapping between $k_t$ (as per the definition above) and the HS-DSCH Transport Block Size ($L(k_t)$) corresponding to table in table 7.1.5a.5.2.2:

| Index | TB Size | Index | TB Size | Index | TB Size | Index | TB Size |
|---|---|---|---|---|---|---|---|
| 1 | 120 | 86 | 1000 | 171 | 4592 | 256 | 21000 |
| 2 | 128 | 87 | 1016 | 172 | 4672 | 257 | 21384 |
| 3 | 136 | 88 | 1040 | 173 | 4760 | 258 | 21768 |
| 4 | 144 | 89 | 1056 | 174 | 4848 | 259 | 22160 |
| 5 | 152 | 90 | 1072 | 175 | 4936 | 260 | 22560 |
| 6 | 160 | 91 | 1096 | 176 | 5024 | 261 | 22968 |
| 7 | 168 | 92 | 1112 | 177 | 5112 | 262 | 23384 |
| 8 | 176 | 93 | 1136 | 178 | 5208 | 263 | 23808 |
| 9 | 184 | 94 | 1152 | 179 | 5296 | 264 | 24232 |
| 10 | 192 | 95 | 1176 | 180 | 5392 | 265 | 24672 |
| 11 | 200 | 96 | 1200 | 181 | 5488 | 266 | 25120 |
| 12 | 208 | 97 | 1216 | 182 | 5592 | 267 | 25568 |
| 13 | 216 | 98 | 1240 | 183 | 5688 | 268 | 26032 |
| 14 | 224 | 99 | 1264 | 184 | 5792 | 269 | 26504 |
| 15 | 232 | 100 | 1288 | 185 | 5896 | 270 | 26976 |
| 16 | 240 | 101 | 1312 | 186 | 6008 | 271 | 27464 |
| 17 | 248 | 102 | 1336 | 187 | 6112 | 272 | 27960 |
| 18 | 256 | 103 | 1360 | 188 | 6224 | 273 | 28464 |
| 19 | 264 | 104 | 1384 | 189 | 6336 | 274 | 28976 |
| 20 | 272 | 105 | 1408 | 190 | 6448 | 275 | 29504 |
| 21 | 280 | 106 | 1432 | 191 | 6568 | 276 | 30032 |
| 22 | 288 | 107 | 1456 | 192 | 6688 | 277 | 30576 |
| 23 | 296 | 108 | 1488 | 193 | 6808 | 278 | 31128 |
| 24 | 304 | 109 | 1512 | 194 | 6928 | 279 | 31688 |
| 25 | 312 | 110 | 1536 | 195 | 7056 | 280 | 32264 |
| 26 | 320 | 111 | 1568 | 196 | 7184 | 281 | 32848 |
| 27 | 328 | 112 | 1600 | 197 | 7312 | 282 | 33440 |
| 28 | 336 | 113 | 1624 | 198 | 7440 | 283 | 34040 |
| 29 | 344 | 114 | 1656 | 199 | 7576 | 284 | 34656 |
| 30 | 352 | 115 | 1688 | 200 | 7712 | 285 | 35280 |
| 31 | 360 | 116 | 1712 | 201 | 7856 | 286 | 35920 |
| 32 | 368 | 117 | 1744 | 202 | 7992 | 287 | 36568 |
| 33 | 376 | 118 | 1776 | 203 | 8136 | 288 | 37224 |
| 34 | 384 | 119 | 1808 | 204 | 8288 | 289 | 37896 |
| 35 | 392 | 120 | 1840 | 205 | 8440 | 290 | 38576 |
| 36 | 400 | 121 | 1872 | 206 | 8592 | 291 | 39272 |
| 37 | 408 | 122 | 1912 | 207 | 8744 | 292 | 39984 |
| 38 | 416 | 123 | 1944 | 208 | 8904 | 293 | 40704 |
| 39 | 424 | 124 | 1976 | 209 | 9064 | 294 | 41440 |
| 40 | 440 | 125 | 2016 | 210 | 9224 | 295 | 42192 |
| 41 | 448 | 126 | 2048 | 211 | 9392 | | |
| 42 | 456 | 127 | 2088 | 212 | 9560 | | |
| 43 | 464 | 128 | 2128 | 213 | 9736 | | |
| 44 | 472 | 129 | 2168 | 214 | 9912 | | |
| 45 | 480 | 130 | 2200 | 215 | 10088 | | |
| 46 | 488 | 131 | 2240 | 216 | 10272 | | |
| 47 | 496 | 132 | 2288 | 217 | 10456 | | |
| 48 | 504 | 133 | 2328 | 218 | 10648 | | |
| 49 | 512 | 134 | 2368 | 219 | 10840 | | |
| 50 | 528 | 135 | 2408 | 220 | 11032 | | |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 51 | 536 | 136 | 2456 | 221 | 11232 | | |
| 52 | 544 | 137 | 2496 | 222 | 11432 | | |
| 53 | 552 | 138 | 2544 | 223 | 11640 | | |
| 54 | 560 | 139 | 2592 | 224 | 11848 | | |
| 55 | 576 | 140 | 2632 | 225 | 12064 | | |
| 56 | 584 | 141 | 2680 | 226 | 12280 | | |
| 57 | 592 | 142 | 2736 | 227 | 12504 | | |
| 58 | 608 | 143 | 2784 | 228 | 12728 | | |
| 59 | 616 | 144 | 2832 | 229 | 12960 | | |
| 60 | 624 | 145 | 2880 | 230 | 13192 | | |
| 61 | 640 | 146 | 2936 | 231 | 13432 | | |
| 62 | 648 | 147 | 2984 | 232 | 13672 | | |
| 63 | 664 | 148 | 3040 | 233 | 13920 | | |
| 64 | 672 | 149 | 3096 | 234 | 14168 | | |
| 65 | 688 | 150 | 3152 | 235 | 14424 | | |
| 66 | 696 | 151 | 3208 | 236 | 14688 | | |
| 67 | 712 | 152 | 3264 | 237 | 14952 | | |
| 68 | 728 | 153 | 3328 | 238 | 15224 | | |
| 69 | 736 | 154 | 3384 | 239 | 15496 | | |
| 70 | 752 | 155 | 3448 | 240 | 15776 | | |
| 71 | 768 | 156 | 3512 | 241 | 16064 | | |
| 72 | 776 | 157 | 3576 | 242 | 16352 | | |
| 73 | 792 | 158 | 3640 | 243 | 16648 | | |
| 74 | 808 | 159 | 3704 | 244 | 16944 | | |
| 75 | 824 | 160 | 3768 | 245 | 17256 | | |
| 76 | 840 | 161 | 3840 | 246 | 17568 | | |
| 77 | 848 | 162 | 3912 | 247 | 17880 | | |
| 78 | 864 | 163 | 3976 | 248 | 18200 | | |
| 79 | 880 | 164 | 4048 | 249 | 18536 | | |
| 80 | 896 | 165 | 4120 | 250 | 18864 | | |
| 81 | 912 | 166 | 4200 | 251 | 19208 | | |
| 82 | 928 | 167 | 4272 | 252 | 19552 | | |
| 83 | 952 | 168 | 4352 | 253 | 19904 | | |
| 84 | 968 | 169 | 4432 | 254 | 20264 | | |
| 85 | 984 | 170 | 4512 | 255 | 20632 | | |

Reference(s)

3GPP TS 25.321, 9.2.3.1 and Annex A

#### 7.1.5a.5.2.3 Test purpose

To verify that the UE selects the correct transport block size with MAC-ehs configured based on the TFRI value signalled on the HS-SCCH for the QPSK and 16QAM modulations schemes.

#### 7.1.5a.5.2.4 Method of test

The test procedure in clause 7.1.5a.5.1 is executed twice.

| Execution counter | Downlink Modulation Scheme (M) |
|---|---|
| 1 | QPSK |
| 2 | 16QAM |

#### 7.1.5a.5.2.5 Test requirements

For execution counter 1 and 2; and for each TFRC the UE shall return a UL RLC SDUs with the same content as the first 312 bits of the test data sent by the SS in downlink for DL RLC SDU size greater than or equal to 312 bits. If the

downlink RLC SDU size is less than 312 bits then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink.

### 7.1.5a.5.3 MAC-ehs transport block size selection / 64QAM

#### 7.1.5a.5.3.1 Definition and applicability

All UEs which support FDD, HS-PDSCH, MAC-ehs and 64QAM.

#### 7.1.5a.5.3.2 Conformance requirement

See 7.1.5a.2.2

#### 7.1.5a.5.3.3 Test purpose

To verify that the UE selects the correct transport block size with MAC-ehs configured based on the TFRI value signalled on the HS-SCCH for the 64QAM modulations scheme case.

#### 7.1.5a.5.3.4 Method of test

The test procedure in clause 7.1.5a.5.1 is executed with M=64QAM.

#### 7.1.5a.5.3.5 Test requirements

The UE shall for each TFRC return a UL RLC SDUs with the same content as the first 312 bits of the test data sent by the SS in downlink for DL RLC SDU size greater than or equal to 312 bits. If the downlink RLC SDU size is less than 312 bits then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink .

## 7.1.5a.6 UE Identification on HS-SCCH in CELL_FACH

#### 7.1.5a.6.1 Definition and applicability

All UEs which support FDD and HS-PDSCH in CELL_FACH.

#### 7.1.5a.6.2 Conformance requirement

The variable HS_DSCH_RECEPTION_CELL_FACH_STATE shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_FACH;

1> the variable H_RNTI is set;

1> the variable C_RNTI is set;

1> System Information Block type 5 or System Information Block type 5bis includes IE "HS-DSCH common system information".

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_CELL_FACH_STATE to FALSE;

1> if the UE is in CELL_FACH and variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to FALSE:

2> set the variable HS_DSCH_RECEPTION_GENERAL to FALSE;

2> stop any HS_SCCH reception procedures;

2> stop any HS-DSCH reception procedures;

2> clear the variable H_RNTI and remove any stored H-RNTI;

2> reset the MAC-ehs entity [15];

2> release all HARQ resources;

2> clear any stored IEs "HARQ info";

Whenever the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> use the IE "HS-DSCH common system information" in System Information Block type 5 or System Information Block type 5bis;

1> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving cell applying the scrambling code as received in the IE "DL Scrambling code" as received in IE "HS-DSCH common system information";

1> perform HS-DSCH reception procedures:

2> if the UE has a stored IE "HARQ info":

3> act on subclause 8.6.5.6b for the stored IE "HARQ info".

2> else:

3> act on subclause 8.6.5.20 for the IE "HARQ System info" as received in IE "HS-DSCH common system information".

2> and use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

1> and for BCCH reception perform HS-DSCH reception procedures by listening to the first indexed HS-SCCH code listed in the IE "HS-SCCH channelisation code" with "BCCH specific H-RNTI" as received in IE "HS-DSCH common system information".

Whenever the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to FALSE, the UE shall:

1> if the UE is in CELL_FACH and variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to FALSE:

2> not perform HS_SCCH reception procedures;

2> not perform HS-DSCH reception procedures.

…

When UE does not support HS-DSCH reception or when the IE "HS-DSCH common system information" is not included in System Information Block type 5 or System Information Block type 5bis, the UE shall:

1> set HS_DSCH_RECEPTION_OF_CCCH_ENABLED to FALSE;

1> set the variable HS_DSCH_RECEPTION_GENERAL to FALSE.

When HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> use the IE "HS-DSCH common system information" in System Information Block type 5 or System Information Block type 5bis;

1> configure the HARQ according to IE "HARQ System info" as defined in subclause 8.6.5.20;

1> configure the common MAC-ehs reordering queues according to IE "Common MAC-ehs reordering queues" as defined in subclauses 8.6.5.22; and then

1> receive the CCCH according to IE "CCCH mapping info" as defined in subclause 8.6.5.21;

1> if the UE is RRC Connected mode:

2> select a common H-RNTI as specified in 8.5.38;

2> receive the SRB1 according to IE "SRB1 mapping info" as defined in subclause 8.6.5.19.

1> else:

2> select a common H-RNTI as specified in [4].

1> and start to receive the HS-SCCH(s) with selected H-RNTI according to the IE "HS-SCCH channelisation code" on the selected cell applying the scrambling code as received in the IE "DL Scrambling code";

1> configure the MAC flow for BCCH reception as specified in [15];

1> and start to receive the first indexed HS-SCCH code listed in the IE "HS-SCCH channelisation code" with "BCCH specific H-RNTI" as received in IE "HS-DSCH common system information".

…

When the IE "Common H-RNTI Information" is included in System Information Block type 5 or System Information Block type 5bis and if the UE is in CELL_FACH state, the UE shall select the Common H-RNTI according to the following rules:

1> compile a list of candidate Common H-RNTI IE(s) "Common H-RNTI" in the order of appearance in System Information Block type 5 or System Information Block type 5bis;

1> select a Common H-RNTI from the list of candidate Common H-RNTIs based on U-RNTI as follows:

"Index of selected Common H-RNTI" = U-RNTI mod K,

where K is equal to the number of candidate Common H-RNTIs.

The UE shall set the CFN in relation to the SFN of the current cell according to subclause 8.5.15.

3GPP TS 25.331 clauses 8.5.36, 8.5.37, 8.5.38

### 7.1.5a.6.3 Test purpose

1. To confirm that the UE can receive data on HS-DSCH using common H-RNTI in CELL_FACH state.

### 7.1.5a.6.4 Method of test

#### Initial Condition

System Simulator: 1 cell

UE: CELL_FACH state <FFS> as specified in clause 7.4 of TS 34.108, with common H-RNTI read from SIB5 / SIB5bis.

#### Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH in CELL_FACH

#### Test Procedure

The UE is brought to CELL_FACH state and has a radio bearer established which is mapped to HS-DSCH and RACH. The SS transmits a UE CAPABILITY ENQUIRY message on RB1 over HS-DSCH but with unmatched UE Id in MAC-c header. The UE does not respond to this. SS transmits a UE CAPABILITY ENQUIRY message on RB1 over HS-DSCH with matched UE Id in MAC-c header. After receiving the message, the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH which includes the requested capabilities. The SS transmits a UE CAPABILITY INFORMATION CONFIRM message to the UE to complete the UE capability enquiry procedure.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_FACH state with common H-RNTI read from system information and configured for HS-DSCH reception |
| 2 | ← | | UE CAPABILITY ENQUIRY | SRB is sent on HS-DSCH using UM RLC but sent with unmatched UE ID in MAC-c header. Use default message |
| 3 | | | | SS waits 10 seconds and checks that UE does not respond |
| 4 | ← | | UE CAPABILITY ENQUIRY | SRB is sent on HS-DSCH using UM RLC but sent with matched UE-id in MAC-c header. Use default message |
| 5 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 6 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message |

#### 7.1.5a.6.5 Test requirement

At step 3 the UE shall not respond to the UE CAPABILITY ENQUIRY message sent in step 2.

After step 4, the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH to respond to the downlink UE CAPABILITY ENQUIRY message with correct contents..

## 7.1.5b HS-SCCH Less Operation

### 7.1.5b.1 HARQ procedure for HS-SCCH less operation

#### 7.1.5b.1.1 Definition and applicability

All UEs which support HS-SCCHless HS-DSCH.

#### 7.1.5b.1.2 Conformance requirement

When the HS-SCCH less mode of operation is enabled, the UE shall be able to strore 13 TTIs in a cyclic soft buffer.

For each received MAC-hs PDU provided by the lower layers the UE shall:

- If the associated HS-SCCH corresponds to an HS-SCCH less retransmission as defined in subclause 4.6A.2.1.2 of [16]:
  - if the data in the soft buffer identified by the TTI [5*CFN + subframe number - 6 – PTR]**mod** 13 has not been decoded successfully:
    - combine the received data with the data currently in the soft buffer identified by [5*CFN + subframe number - 6 – PTR]**mod** 13 where PTR is the value of the pointer to the previous transmission as defined in subclause 4.6A.2.1.2.1 of [16].
  - If the data in the soft buffer has been successfully decoded and no error was detected;
    - deliver the decoded MAC-hs PDU to the reordering entity;
    - generate a positive acknowledgement (ACK) of the data corresponding to this TTI.
  - else:

- place the combined data for the HS-SCCH less TTI in the soft buffer identified by [5*CFN + subframe number]**mod** 13, replacing any data previously stored in that buffer.

- generate a negative acknowledgement (NACK) of the data corresponding to this TTI.

- Else if the associated HS-SCCH corresponds to a HS-SCCH type 1 as defined in subclause 4.6 of [16];

  - process the received MAC-hs PDU provided by the lower layers as per subclause 11.6.2.2.

- Else;

  - If the data has been successfully decoded and no error was detected;

    - deliver the decoded MAC-hs PDU to the reordering entity;

    - generate a positive acknowledgement (ACK) of the data corresponding to this TTI.

  - else

  - place the data for the HS-SCCH less TTI in the soft buffer identified by [5*CFN + subframe number]**mod** 13, replacing any data previously stored in that buffer.

Reference(s)

TS 25.321 clauses 11.6.2.7

### 7.1.5b.1.3 Test purpose

To verify that

1. UE is able to operate in HS-SCCH less mode of operation..
2. When multiple transport block sizes are configured, UE is able to decode the Transport block correctly on first Transmission.
3. UE is able to combine data in soft buffer and data received and decode combined data.
4. UE does not transmit NACK for HS-SCCH less mode of operation

### 7.1.5b.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / UM PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH, as specified in TS 34.108, clause 6.11.4i.1 with the logical channel, MAC-hs queue identity set to:

| Logical Channel ID | Mac-hs Queue ID | Comment |
|---|---|---|
| 7 | 0 | RB5 |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| DTX_DRX_STATUS | FALSE |
| HS-SCCH less information | |
| - HS-PDSCH Code Index | 14 |
| - Transport Block Size List | 4 elements |
| - Transport Block Size Index | 20 [365, suficient for one MAC-hs SDU 0f 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | FALSE |
| - Transport Block Size Index | 48 [699, sufficient for 2 MAC-hs SDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | FALSE |
| - Transport Block Size Index | 70[1036, sufficient for 3 MAC-hs SDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | TRUE |
| - Transport Block Size Index | 86 [1380, sufficient for 4 MAC-hs SDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | TRUE |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

### Test procedure

In this test procedure each MAC-hs PDU contains one RLC PDU carrying one SDU of size 39 octets and one length indicator indicating the end of the SDU.

a) The SS transmits a MAC-hs PDU where:

1. The TSN = 0
2. The MAC-hs PDU contains a RLC PDU with SN=0.

Using HS-SCCH less mode of operation.

b) The SS checks that a Positive acknowledgement is received and RLC PDUis loop backed by UE

c) The SS transmits a MAC-hs PDU where:

1. The TSN = 1
2. The MAC-hs PDU contains 2 RLC PDU's with SN=1&2.
3. The physical layer CRC is modified such that the CRC check in the UE will fail

The MAC-hs PDU is transmitted in a CFN, Subframe number such that by [5*CFN + subframe number]**mod** 13 = X, using HS-SCCH less mode of operation.

d) The SS checks that no negative acknowledgement is received and no RLC PDU loop backed by UE

e) The SS re-transmits a MAC-hs PDU with the same content as in step c) but where the CRC is correct, using HS-SCCH Type-2, in next available CFN & subframe satisfying [5*CFN + subframe number - 6 – PTR]**mod** 13=X as in step c.

f) The SS checks that a postivive acknowledgement is received and RLC PDU's for SN 1,2 are loop backed by UE.

g) The SS transmits a MAC-hs PDU where:

1. The TSN = 2
2. The MAC-hs PDU contains 3 RLC PDU's with SN=3,4&5.

3. The physical layer CRC is modified such that the CRC check in the UE will fail

The MAC-hs PDU is transmitted in a CFN, Subframe number such that by [5*CFN + subframe number]**mod** 13 = X, using HS-SCCH less mode of operation.

h) The SS checks that no negative acknowledgement is received and no RLC PDU loop backed by UE

i) The SS re-transmits a MAC-hs PDU with the same content as in step g) again with an incorrect CRC, using HS-SCCH Type-2, in next available CFN & subframe satisfying [5*CFN + subframe number - 6 – PTR]**mod** 13=X as in step g [second transmisson]. Further [5*CFN + subframe number]**mod** 13 = Y.

j) The SS checks that a negative acknowledgement is received and no RLC PDU loop backed by UE.

k) The SS re-transmits a MAC-hs PDU with the same content as in step g) but where the CRC is correct, using HS-SCCH Type-2, in next available CFN & subframe satisfying [5*CFN + subframe number - 6 – PTR]**mod** 13=Y as in step i[final transmission].

l) The SS checks that a postivive acknowledgement is received and RLC PDU's for SN 3,4,5 are loop backed by UE.

m) The SS repeats steps g to l, with TSN=3 and MAC-hs PDU consisting of 4 RLC PDU's with SN=6,7,8&9

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MAC-hs PDU containing one RLC PDU with SN=0 | HS-SCCH Less operation |
| 2 | -> | | MAC-hs ACK | |
| 3 | -> | | RLC Loop Backed PDU with SN=0 | |
| 4 | ← | | MAC-hs PDU containing 2 RLC PDU's with SN=1&2 | Erroneous CRC, [5*CFN + subframe number]**mod** 13 = X |
| 5 | | | | SS checks no MAC-hs negative acknowledgement or loop backed data is received |
| 6 | ← | | MAC-hs PDU containing 2 RLC PDU's with SN=1&2 | First Transmission, Correct CRC, [5*CFN + subframe number - 6 – PTR]**mod** 13=X [second transmisson] |
| 7 | → | | MAC-hs positive acknowledgement | |
| 8 | → | | RLC Loop Backed PDU's with SN=1&2 | |
| 9 | ← | | MAC-hs PDU containing 3 RLC PDU's with SN=3,4&5 | Erroneous CRC, [5*CFN + subframe number]**mod** 13 = X |
| 10 | | | | SS checks no MAC-hs negative acknowledgement or loop backed data is received |
| 11 | ← | | MAC-hs PDU containing 3 RLC PDU's with SN=3,4&5 | Second Transmission, Erroneous CRC, [5*CFN + subframe number - 6 – PTR]**mod** 13=X [second transmisson] Further [5*CFN + subframe number]**mod** 13 = Y |
| 12 | → | | MAC-hs negative acknowledgement | |
| 13 | ← | | MAC-hs PDU containing 3 RLC PDU's with SN=3,4&5 | Third Transmission, Correct CRC, [5*CFN + subframe number - 6 – PTR] **mod** 13 = Y [Final transmisson] |
| 14 | → | | MAC-hs positive acknowledgement | |
| 15 | → | | RLC Loop Backed PDU's with SN=3,4&5 | |
| 16 | ← | | MAC-hs PDU containing 4 RLC PDU's with SN=6,7,8&9 | Erroneous CRC, [5*CFN + subframe number] **mod** 13 = XX |
| 17 | | | | SS checks no MAC-hs negative acknowledgement or loop backed data is received |
| 18 | ← | | MAC-hs PDU containing 4 RLC PDU's with SN=6,7,8&9 | Second Transmission, Erroneous CRC, [5*CFN + subframe number - 6 – PTR]**mod** 13=XX [second transmisson] Further [5*CFN + subframe number]**mod** 13 = YY *Note |
| 19 | → | | MAC-hs negative acknowledgement | |
| 20 | ← | | MAC-hs PDU containing 4 RLC PDU's with SN=6,7,8&9 | Third Transmission, Correct CRC, [5*CFN + subframe number - 6 – PTR]**mod** 13=YY [Final transmisson] *Note |
| 21 | → | | MAC-hs positive acknowledgement | |
| 22 | → | | RLC Loop Backed PDU's with SN=6,7,8&9 | |
| Note: the CRC calculations made in steps 16, 18 &20 [9, 11 & 13] is in such a way that, it will result in CRC error in steps 16 & 18 [9 & 11] and no CRC error in step 20 [13], after combination of new data in step 20 [13] and stored data in UE after step 18[11]. | | | | |

Specific Message Contents

None

7.1.5b.1.5 Test requirements

1. After steps 11 & 18, a MAC-hs negative acknowledgement shall be received.
2. After steps 1, 6, 13 & 20, a MAC-hs Positive acknowledgement shall be received
3. After steps 4, 9 & 16 no MAC-hs NACK shall be received by SS.
4. After step 1, RLC Loop Backed PDU with SN=1 is received.
5. After step 6, RLC Loop Backed PDU's with SN=2 & 3 is received
6. After step 13, RLC Loop Backed PDU's with SN=4, 5 & 6 are received
7. After step 20, RLC Loop Backed PDU's with SN=7, 8, 9 & 10 are received

## 7.1.6 E-DCH MAC-es/e

### 7.1.6.1 MAC-es/e multiplexing

#### 7.1.6.1.1 MAC-es/e multiplexing without RRC restrictions

##### 7.1.6.1.1.1 Definition and applicability

All UEs which support E-DCH.

##### 7.1.6.1.1.2 Conformance requirement

From 25.321 clause 9.1.5:

In the case of E-DCH there are two MAC sublayers, MAC-e and MAC-es. MAC-es sits on top of MAC-e and receives PDUs directly from MAC-d. MAC-es SDUs (i.e. MAC-d PDUs) of the same size, coming from a particular logical channel can be multiplexed together into a single MAC-es payload. To this payload is prepended the MAC-es header (see subclause 9.2.4.1). The number of PDUs, as well as the DDI value identifying the logical channel, the MAC-d flow and the MAC-es SDU size are included as part of the MAC-e header. In case sufficient space is left in the E-DCH transport block or if Scheduling Information needs to be transmitted, an SI will be included at the end of the MAC-e PDU (see subclause 9.2.4.2). Multiple MAC-es PDUs, but only one MAC-e PDU can be transmitted in a TTI.

[…]

From 25.331 clause 8.6.5.18:

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

[…]

Reference(s)

TS 25.321 clause 9.1.5, TS 25.331 clause 8.6.5.18

##### 7.1.6.1.1.3 Test purpose

The purpose of this test case is to verify that the UE multiplexes data from different logical channels in the same TTI when no restriction on the multiplexing is configured by RRC.

7.1.6.1.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4d(FDD) /6.11.5.4.7.7(1.28Mcps TDD) using condition A15(FDD) /A14(1.28Mcps TDD) as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the testcase | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) (FDD) |
| T-WAIT | 200 ms (see 25.331 10.3.6.103)( 1.28Mcps TDD) |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grants for E-DCH to the UE

b) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

c) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

d) The SS waits for an SI to be received that indicates that data is available on both logical channels (can be identified from the content of the SI)

e) The SS issues an absolute grant that allows the UE to send with a high rate (signalling value 10, allowing a rate well above 2 SDUs/TTI)

f) The SS waits until data is received and verifies that data from the two LCHs is received in the same TTI

NOTE: The UE may send an SI after step 1 but this SI would only indicate data on LCH2. This SI will be ignored.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | ← | 1 RLC PDU on LCH 2 | |
| 2 | ← | 1 RLC PDU on LCH 1 | |
| 3 | → | Potential SI indicating data on LCH 2 | This SI is ignored by the SS |
| 4 | → | SI indicating data on LCH 1 and LCH 2 | This can be verified from the indicated fraction of data on LCH1 |
| 5 | ← | Absolute grant allowing UE to transmit on E-DCH | This grant must be sufficiently high to allow a rate corresponding to at least 2 RLC PDUs/TTI, signaling value 10 |
| 6 | → | MAC e/es PDU containing 1 RLC PDU on LCH 1 and one RLC PDU on LCH 2 | |

Specific Message Contents

None

#### 7.1.6.1.1.5 Test requirements

1. After step 2 the SS shall receive an SI indicating that data is available on LCH 1 and LCH 2 but no RLC PDUs shall be received

2. In step 6, the SS shall receive 1 RLC PDU on LCH 1 and one RLC PDU on LCH 2 in the same TTI

### 7.1.6.1.2 MAC-es/e multiplexing with RRC restrictions

#### 7.1.6.1.2.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.1.2.2 Conformance requirement

From 25.321 clause 9.1.5:

In the case of E-DCH there are two MAC sublayers, MAC-e and MAC-es. MAC-es sits on top of MAC-e and receives PDUs directly from MAC-d. MAC-es SDUs (i.e. MAC-d PDUs) of the same size, coming from a particular logical channel can be multiplexed together into a single MAC-es payload. To this payload is prepended the MAC-es header (see subclause 9.2.4.1). The number of PDUs, as well as the DDI value identifying the logical channel, the MAC-d flow and the MAC-es SDU size are included as part of the MAC-e header. In case sufficient space is left in the E-DCH transport block or if Scheduling Information needs to be transmitted, an SI will be included at the end of the MAC-e PDU (see subclause 9.2.4.2). Multiple MAC-es PDUs, but only one MAC-e PDU can be transmitted in a TTI.

[…]

From 25.331 clause 8.6.5.18:

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

[…]

Reference(s)

TS 25.321 clause 9.1.5, TS 25.331 clause 8.6.5.18

#### 7.1.6.1.2.3 Test purpose

The purpose of this test case is to verify that the UE does not multiplex data from different logical channels in the same TTI when the multiplexing has been restricted by RRC.

7.1.6.1.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4d(FDD) /6.11.5.4.7.7(1.28Mcps TDD) using condition A15(FDD) /A14(1.28Mcps TDD) as specified in clause 9.1 of TS 34.108.The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the test case | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) (FDD) |
| T-WAIT | 200 ms (see 25.331 10.3.6.103)( 1.28Mcps TDD) |
| E-DCH MAC-d flow multiplexing list | 00000000 (See 25.331 10.3.5.1b) Note 1 |
| Note 1: This configuration means that no multiplexing is allowed | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grants for E-DCH to the UE

b) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

c) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

d) The SS waits for an SI to be received that indicates that data is available on both logical channels (can be identified from the content of the SI)

e) The SS issues an absolute grant that allows the UE to send with a high rate (signalling value 10, allowing rates well above 2 SDUs/TTI)

f) The SS waits until data is received and verifies that only data from LCH1 is received in the first TTI

g) The SS verifies that data from LCH2 is received (in a separate TTI from the data from LCH1)

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | ← | 1 RLC PDU on LCH 2 | |
| 2 | ← | 1 RLC PDU on LCH 1 | |
| 3 | → | Potential SI indicating data on LCH 2 | This SI is ignored by the SS |
| 4 | → | SI indicating data on LCH 1 and LCH 2 | This can be verified from the indicated fraction of data on LCH1 |
| 5 | ← | Absolute grant allowing UE to transmit on E-DCH | This grant must be sufficiently high to allow a rate corresponding to at least 2 RLC PDUs/TTI, signaling value 10 |
| 6 | → | MAC e/es PDU containing 1 RLC PDU on LCH 1 | |
| 7 | → | MAC e/es PDU containing 1 RLC PDU on LCH 2 | |

Specific Message Contents

None

#### 7.1.6.1.2.5 Test requirements

1. After step 2 the SS shall receive an SI indicating that data is available on LCH 1 and LCH 2 but no RLC PDUs shall be received

2. In step 6, the SS shall receive 1 RLC PDU on LCH 1 but no data from LCH 2

3. In step 7, the SS shall receive 1 RLC PDU on LCH 2 but no data from LCH 1

### 7.1.6.1.3 Correct settings of MAC-es/e header fields

#### 7.1.6.1.3.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.1.3.2 Conformance requirement

Extract from 25.321:

[…]

- Transmission Sequence Number (TSN):
  The TSN field provides the transmission sequence number for the MAC-es PDU. This information is used for reordering purposes to support in-sequence delivery to higher layers. The length of the TSN field is 6 bits.

[…]

- For FDD: Data description indicator (DDI):
  The DDI field identifies the logical channel, MAC-d flow and size of the MAC-d PDUs concatenated into the associated MAC-es PDU. The mapping between the DDI values and the logical channel ID, MAC-d flow and PDU size is provided by higher layers. The length of the DDI field is 6 bits. When, due to the quantization in the transport block sizes that can be supported or triggering of the Scheduling Information, the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 24 bits, the DDI value [111111] shall be appended at the end of the MAC-e header and a Scheduling Information shall be concatenated into this MAC-e PDU, where DDI value [111111] indicates that there is a Scheduling Information concatenated in this MAC-e PDU. Otherwise, if the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 18 bits, a Scheduling Information shall be concatenated into this MAC-e PDU. In any other case it is understood that another MAC-es PDU or Scheduling Information does not fit and it is therefore not necessary to reserve room in the transport block for an additional DDI field.

- For TDD: When, due to the quantization in the transport block sizes that can be supported or triggering of the Scheduling Information (due to timer expiry, see subclauses 11.9.1.4a and 11.9.1.5), the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 29bits, the DDI value [111111] shall be appended at the end of the MAC-e header and a Scheduling Information shall be concatenated into this MAC-e PDU, where DDI value [111111] indicates that there is a Scheduling Information concatenated in this MAC-e PDU. Otherwise, if the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 23 bits, a Scheduling Information shall be concatenated into this MAC-e PDU. In any other case it is understood that another MAC-es PDU or Scheduling Information does not fit and it is therefore not necessary to reserve room in the transport block for an additional DDI field.

- Number of MAC-d PDUs (N):
  The number of consecutive MAC-d PDUs corresponding to the same DDI value. The length of the N field is 6 bits.

Reference(s)

TS 25.321 clauses 9.2.4.1, 9.2.4.2

7.1.6.1.3.3 Test purpose

The purpose of this test case is to verify that the UE sets the MAC-es/e header fields in a correct way.

7.1.6.1.3.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4d(FDD) /6.11.5.4.7.7(1.28Mcps TDD) using condition A15(FDD) /A14(1.28Mcps TDD) as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the testcase | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) (FDD) |
| T-WAIT | 200 ms (see 25.331 10.3.6.103)( 1.28Mcps TDD) |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits 4 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

c) The SS issues an absolute grant that allows the UE to send with a high rate (signalling value 10, allowing rates well above 5 SDUs/TTI)

d) The SS waits until data is received and checks the values of the header parameters

e) The SS removes the scheduling grant for E-DCH for the UE

f) The SS transmits three SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

g) The SS transmits two SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

h) The SS issues an absolute grant that allows the UE to send with a high rate (signalling value 10, allowing rates well above 5 SDUs/TTI)

i) The SS waits until data is received and checks the values of the header parameters

j) The SS transmits two SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

k) The SS waits until data is received and checks the values of the header parameters

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 4 RLC PDUs on LCH 2 | |
| 2 | → | | SI indicating data on LCH 2 | |
| 3 | ← | | Absolute grant allowing UE to transmit on E-DCH | This grant must be sufficiently high to allow a rate corresponding to at least 5 RLC PDUs/TTI, signaling value 10 |
| 4 | → | | 1 MAC-es PDU containing 4 RLC PDUs on LCH 2 | SS checks header fields |
| 5 | ← | | Removal of scheduling grant for UE | |
| 6 | ← | | 3 RLC PDUs on LCH 2 | |
| 7 | ← | | 2 RLC PDUs on LCH 1 | |
| 8 | → | | Potential SI indicating data on LCH 2 | This SI is ignored by the SS |
| 8a | | | SI indicating data on LCH1 and LCH 2 | |
| 9 | ← | | Absolute grant allowing UE to transmit on E-DCH | This grant must be sufficiently high to allow a rate corresponding to at least 5 RLC PDUs/TTI, signaling value 10 |
| 10 | → | | 2 MAC-es PDUs containing 2 RLC PDUs on LCH 1 and 3 RLC PDUs on LCH 2 respectively | SS checks header fields |
| 11 | ← | | 2 RLC PDUs on LCH 2 | |
| 12 | → | | 1 MAC-es PDU containing 2 RLC PDUs on LCH 2 | SS checks header fields |

Specific Message Contents

None

#### 7.1.6.1.3.5 Test requirements

1. After step 4, the SS shall receive 1 MAC-es PDU shall be received where:
   - The TSN is set to 0, DDI is set to 6 and N is set to 4
2. After step 10, the SS shall receive 2 MAC-es PDUs shall be received where:
   - For MAC-es PDU 1: The TSN is set to 0, DDI is set to 5 and N is set to 2
   - For MAC-es PDU 2: The TSN is set to 1, DDI is set to 6 and N is set to 3
3. After step 12, the SS shall receive 1 MAC-es PDU where:
   - The TSN is set to 2, DDI is set to 6 and N is set to 2

## 7.1.6.2 MAC-es/e – Scheduling

### 7.1.6.2.1 Correct settings of MAC-es/e scheduling information

#### 7.1.6.2.1.1 Definition and applicability

All UEs which support E-DCH.

7.1.6.2.1.2 Conformance requirement

Extract From 25.321 clause 9.2.5.3.2:

This information includes the following fields:

The Scheduling Information shall not be transmitted if the Total E-DCH Buffer Status is zero, even if it was triggered by one of the configured triggering mechanisms.

[…]

If data with higher priority than the data already in the transmission buffer arrives, the transmission of a Scheduling Information shall be triggered.

[…]

- Highest priority Logical channel ID (HLID):
  The HLID field identifies unambiguously the highest priority logical channel with available data. If multiple logical channels exist with the highest priority, the one corresponding to the highest buffer occupancy will be reported. The length of the HLID is 4 bits. In case the TEBS is indicating index 0 (0 bits), the HLID shall indicate the value "0000".

- Fields related to amount of available data:

- Total E-DCH Buffer Status (TEBS):
  The TEBS field identifies the total amount of data available across all logical channels for which reporting has been requested by the RRC. The length of this field is 5 bits. The values taken by TEBS are shown in [Ts 25.321] Table 9.2.5.3.2.1.

- Highest priority Logical channel Buffer Status (HLBS):
  The HLBS field indicates the amount of data available from the logical channel identified by HLID, relative to the highest value of the buffer size range reported by TEBS when the reported TEBS index is not 31, and relative to 50000 bits when the reported TEBS index is 31. The length of HLBS is 4 bits. The values taken by HLBS are shown in [TS 25.321] table 9.2.5.3.2.2. In case the TEBS field is indicating index 0 (0 bits), the HLBS field shall indicate index 0.

[…]

Extract From 25.321 clause 9.2.4.2:

- Data description indicator (DDI):
  The DDI field identifies the logical channel, MAC-d flow and size of the MAC-d PDUs concatenated into the associated MAC-es PDU. The mapping between the DDI values and the logical channel ID, MAC-d flow and PDU size is provided by higher layers. The length of the DDI field is 6 bits.

- For FDD: When, due to the quantization in the transport block sizes that can be supported or triggering of the Scheduling Information, the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 24 bits, the DDI value [111111] shall be appended at the end of the MAC-e header and a Scheduling Information shall be concatenated into this MAC-e PDU, where DDI value [111111] indicates that there is a Scheduling Information concatenated in this MAC-e PDU. Otherwise, if the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 18 bits, a Scheduling Information shall be concatenated into this MAC-e PDU. In any other case it is understood that another MAC-es PDU or Scheduling Information does not fit and it is therefore not necessary to reserve room in the transport block for an additional DDI field.

- For TDD: When, due to the quantization in the transport block sizes that can be supported or triggering of the Scheduling Information (due to timer expiry, see subclauses 11.9.1.4a and 11.9.1.5), the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 29bits, the DDI value [111111] shall be appended at the end of the MAC-e header and a Scheduling Information shall be concatenated into this MAC-e PDU, where DDI value [111111] indicates that there is a Scheduling Information concatenated in this MAC-e PDU. Otherwise, if the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 23 bits, a Scheduling Information shall be concatenated into this MAC-e PDU. In any other case it is understood that another MAC-es PDU or Scheduling Information does not fit and it is therefore not necessary to reserve room in the transport block for an additional DDI field.

[…]

Extract From 25.321 clause 9.2.6.3:

This control information is used by UEs to indicate to the Node B the amount of resources they require. Scheduling Information is sent via the E-PUCH in the MAC-e header when the UE is granted resource and by the E-RUCCH when no resource has been granted. Scheduling Information consists of three components as defined in subclause 9.2.6.3.3 -

- Buffer Information: This consists of:
  - Highest priority Logical Channel (HLID)
  - Total E-DCH Buffer Status (TEBS)
  - Highest priority Logical channel Buffer Status (HLBS)

- UE Power Headroom (UPH): The UPH field indicates the ratio of the maximum UE transmission power and the calculated UE transmit power defined as in [18] that would result for $\beta_e$ equal to 0. The length of UPH is 5 bits.

- Serving and Neighbour Cell Pathloss (SNPL): This may be used by the Node-B to assist with its estimation of the degree of intercell interference each UE will generate and hence the absolute grant power value and physical resources to assign . The length of SNPL is 5 bits.

The length of TEBS field is 5 bits, the values taken by TEBS are shown in Table 9.2.5.3.2-1. The length of HLBS is 4 bits, the values taken by HLBS are shown in table 9.2.5.3.2-2.

The Scheduling Information message is represented in figure 9.2.6.3-1.

| SNPL | UPH | TEBS | HLBS | HLID |
|---|---|---|---|---|
| (5 bits) | (5 bits) | (5 bits) | (4 bits) | (4 bits) |

**Figure 9.2.6.3.-1: Scheduling Information format**

If Scheduling Information is sent via the E-RUCCH then the E-RNTI is also sent via the E-RUCCH, as shown by Figure 9.2.6.3-2:

| Scheduling Information (23 bits) | E-RNTI (16 bits) |
|---|---|

**Figure 9.2.6.3-2: Format of information sent on E-RUCCH**

-

[…]

Scheduling information reports will be triggered differently depending on the value of the variable Serving_Grant after the Serving Grant Update function. The triggering of a report shall be indicated to the E-TFC selection function at the first new transmission opportunity (this process may be delayed in case the HARQ processes are occupied with re-transmissions).

Extract From 25.321 clause 11.9.1.5:

[…]

If a UE has no Grant and the TEBS becomes larger than zero, the transmission of Scheduling Information shall be triggered via E-RUCCH.

If the UE has a Grant, the scheduling information needs to be included in the MAC-e PDU according to subclause 9.2.4.2, and it shall be transmitted regardless of TEBS status. Additional timer mechanism is used to avoid long pause duration of scheduling information reporting (period defined by RRC and set the same value as below T_WAIT). When the scheduling information is included in MAC-e PDU and sent, the timer will be reset and restarted immediately; when the timer expires, scheduling information shall be sent in a new MAC-e PDU.

RRC can configure MAC with a delay timer to be used when the UE transits from having a Grant to not having a Grant and the TEBS is still larger than zero. The delay timer T_WAIT shall be started once the Grant expires and shall be stopped and reset when a Grant is received. When T_WAIT expires, the transmission of a Scheduling Information shall be triggered via E-RUCCH (T_WAIT shall be stopped and reset).

Reference(s)

TS 25.321 clause 9.2.5.3.2, 9.2.4.2, 9.2.6.3, 11.8.1.6, 11.9.1.5

7.1.6.2.1.3 Test purpose

The purpose of this test case is to verify that the UE sends the E-DCH scheduling information with correct content and with correct triggers.

7.1.6.2.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4d(FDD) /6.11.5.4.7.7(1.28Mcps TDD) using condition A15(FDD) /A14(1.28Mcps TDD) as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the testcase | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) (FDD) |
| Periodicity for Scheduling Info – grant | 100ms (FDD) |
| T-WAIT | 200 ms (see 25.331 10.3.6.103)( 1.28Mcps TDD) |
| T-RUCCH | 600 ms (see 25.331 10.3.6.103)( 1.28Mcps TDD) |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| E-DCH Transport Block Size Table | 0 |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS waits for at least 1000 ms and verifies that no SI is received

c) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

d) The SS waits until an SI is received at time **T0**

e) The SS waits until the next SI is received at time **T1** and checks the content

f) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1 at time **T2**

g) The SS waits until the next SI is received at time **T3** and checks the content

h) The SS issues an absolute grant that allows the UE to transmit 1 SDUs/TTI (absolute grant signalling value 4)

i) The SS waits until all data has been received

j) The SS removes the scheduling grant for the UE

k) The SS transmits 24 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

l) The SS issues an absolute grant that allows the UE to transmit 1 SDUs/TTI (absolute grant signalling value 4)

m) The SS waits until the next SI is received with payload at time **T4**

n) The SS waits until the next SI is received with payload at time **T5**

o) The SS waits until all data is received

p) Void

q) The SS issues an absolute grant that allows the UE to transmit 5 SDUs/TTI (absolute grant signalling value 8)

r) The SS transmits 5 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

s) The SS waits until the 5 SDUs are received and checks that contain both a regular SI and the special DDI (value = 63) NOTE

NOTE: 5 336 bit PDUs and 18 bit Mac-e/es header require a TB size of 1698 bits. The nearest higher TB size is 1749, which easily holds an SI + the special length indicator.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | After the radio bearer has been established the SS waits 1000 ms. No SI shall be received during this time |
| 2 | ← | | 1 RLC PDUs on LCH 2 | |
| 3 | → | | SI indicating data on LCH 2 | Time **T0** |
| 4 | → | | SI indicating data on LCH 2 | Time **T1** |
| 5 | ← | | 1 RLC PDUs on LCH 1 | Time **T2** |
| 6 | → | | SI indicating data on LCH 1 and LCH 2 | Time **T3.** Presence of data on LCH 1 and LCH 2 can be verified from the indicated fraction of data on LCH1 |
| 7 | ← | | Absolute grant allowing the UE to transmit 1 RLC PDUs per TTI | Signalling value 4 |
| 8 | → | | Data on LCH 1 and LCH 2 | |
| 8a | ← | | Removal of absolute grant | Signalling value 1 |
| 9 | ← | | 24 RLC PDUs on LCH 1 | |
| 9a | ← | | Absolute grant allowing the UE to transmit 1 RLC PDUs per TTI | Signalling value 4 |
| 10 | → | | Data and SI | Time **T4** |
| 11 | → | | Data only | |
| 12 | → | | Data and SI | Time **T5** |
| 13 | → | | Data only | |
| 14 | | SS | | After all data has been received, SS waits 1000ms. No SI shall be received during this time. |
| 15 | ← | | void | |
| 16 | → | | void | |
| 17 | ← | | Absolute grant allowing the UE to transmit 5 RLC PDUs per TTI | Signalling value 8 |
| 18 | ← | | 5 RLC PDUs on LCH 1 | |
| 19 | → | | Data and SI | The received transport block shall in addition to the 5 PDUs contain a regular SI and the special DDI (value = 63).<br>As there is no data left in buffers, TEBS is set as 0, HLID is set as '0000' and HLBS is set as 0. |
| NOTE 1: General timer tolerance as defined by 34.108 sub-clause 4.2.3 applies.<br>NOTE 2: Step 10 and 11 can occur in any order. SS should accept these PDUs in any order and verify the time difference between T5 and T4 as per the test requirement. | | | | |

Specific Message Contents

None

7.1.6.2.1.5 Test requirements

1. In step 1 the SS shall not receive any SI since the UE buffer is empty
2. In step 3 the SS shall receive an SI (content ignored)
3. In step 4 the SS shall receive an SI indicating
   - Total E-DCH Buffer Status (TEBS) Index = 6 ($32 < TEBS \leq 42$).
   - Highest priority Logical channel ID (HLID) = LCH 2.
   - Highest Priority Logical Channel Buffer Status (HLBS) Index = 15 ($82\% < HLBS \leq 100\%$).
4. In step 6 the SS shall receive an SI indicating

- Total E-DCH Buffer Status (TEBS) Index = 9 (73 < TEBS ≤ 97).
- Highest priority Logical channel ID (HLID) = LCH 1.
- Highest Priority Logical Channel Buffer Status (HLBS) Index =11(37 < HLBS ≤ 45).

5. T1-T0 shall equal 500 ms
6. T3-T2 shall be less then 120 ms. Note 1.
7. T5-T4 shall equal 100ms
8. In step 14, the SS shall not receive any SI since the UE buffer is empty.
9. In step 19, the received transport block shall in addition to the payload include a regular SI and the special DDI (value = 63). TEBS, HLID and HLBS shall be set as zero.

NOTE 1. 120ms = 2 TTI(for Data to be transmitted from RLC to MAC) + Maximum UE test loop delay ( 10*TTI according to 34.109=100ms).

#### 7.1.6.2.2 Happy bit setting

##### 7.1.6.2.2.1 Definition and applicability

All UEs which support E-DCH.

##### 7.1.6.2.2.2 Conformance requirement

The happy bit is a single bit field that is passed from MAC to the physical layer for inclusion on the E-DPCCH. This field takes two values, “Not Happy” and “Happy” indicating respectively whether the UE could use more resources or not. The setting of the Happy Bit is defined in subclause [TS 25.321] 11.8.1.5.

[…]

The Happy Bit is included on the E-DPCCH for every E-DCH transmission. E-DCH transmissions shall not be triggered specifically to allow the transmission of the happy bit.

RRC configures MAC with the duration Happy_Bit_Delay_Condition, over which to evaluate the current grant relative to the TEBS after application of the E-TFC selection procedure described in [TS 25.321] subclause 11.8.1.4.

For every E-DCH transmission, the Happy Bit shall be set to "unhappy" if the three following criteria are met:

1) UE is transmitting as much scheduled data as allowed by the current Serving_Grant in E-TFC selection; and
2) UE has enough power available to transmit at higher data rate; and
3) Based on the same power offset as the one selected in E-TFC selection to transmit data in the same TTI as the Happy Bit, TEBS would require more than Happy_Bit_Delay_Condition ms to be transmited with the current Serving_Grant × the ratio of active processes to the total number of processes.

The first criteria is always true for a deactivated process and the ratio of the third criteria is always 1 for 10ms TTI.

Reference(s)

TS 25.321 clause 9.2.5.3.1, 11.8.1.5

##### 7.1.6.2.2.3 Test purpose

The purpose of this test case is to verify that the UE sets the happy bit correctly.

##### 7.1.6.2.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4c using condition A12 as specified in clause 9.1 of TS 34.108.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info | No periodic SI transmission |
| Happy bit delay condition | 20 ms |
| E-DCH MAC-d flow maximum number of retransmissions | 15 |
| HARQ RV Configuration | rv0 |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

### Test procedure

In this test procedure the UE is configured with one logical channel with Id 7 (LCH1).

a) The SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

b) The SS issues an absolute grant corresponding to 2 RLC PDUs of size 41 octets per TTI (signalling value 5)

c) The SS waits until all data is received in uplink and checks the happy bit

d) The SS removes the scheduling grant for the UE

e) The SS transmits 8 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

f) The SS issues an absolute grant corresponding to 2 RLC SDUs of size 40 octets per TTI (signalling value 5)

g) SS waits until data is receive in uplink and checks the happy bit

h) The SS waits until all data is received in uplink

i) The SS is configured to always send a NACK on every HARQ process, when data is received in uplink, and to pass the received data to the higher layers.

j) The SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

k) The SS waits until data is received in uplink. The SS stores the HARQ process ID[x] of the HARQ process used for this transmission and checks the happy bit

l) The SS is reconfigured to normal ACK/NACK operation mode on all HARQ processes, except HARQ process ID[x]

m) The SS transmits 12 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

n) The SS waits for the data to be received in uplink and checks the happy bit every time data is re-transmitted on HARQ process ID[x]

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 2 RLC PDUs on LCH 1 | |
| 2 | ← | | Absolute grant allowing the UE to transmit 2 RLC PDUs per TTI | Signalling value 5 |
| 3 | → | | Data and happy bit | Happy bit should be set to happy |
| 4 | ← | | Removal of absolute grant | Signalling value 1 |
| 5 | ← | | 8 RLC PDUs on LCH 1 | |
| 6 | ← | | Absolute grant allowing the UE to transmit 2 RLC PDUs per TTI | Signalling value 5 |
| 7 | → | | Data and happy bit | Happy bit should be set to unhappy |
| 8 | SS | | | The SS always NACK the received data on all HARQ processes |
| 9 | ← | | 2 RLC PDUs on LCH 1 | |
| 10 | → | | Data and happy bit | Happy bit should be set to happy for the data received by the SS on HARQ process ID[x] |
| 11 | SS | | | The SS is set to normal ACK/NACK operation mode on all HARQ processes, except HARQ process ID[x] |
| 12 | ← | | 12 RLC PDUs on LCH 1 | |
| 13 | → | | Data and happy bit | Happy bit for the retransmissions of the MAC es PDU received on HARQ process ID[x] should change from happy to unhappy, and become happy again when buffered data has been processed by the other HARQ processes. |

Specific Message Contents

None

#### 7.1.6.2.2.5 Test requirements

1. In step 3 the SS shall receive data and the happy bit shall be set to happy in the first TTI containing data
2. In step 7 the SS shall receive data and the happy bit shall be set to unhappy in the first TTI containing data
3. In step 10 the SS shall receive data and the happy bit shall be set to happy in the first TTI containing data
4. In step 13 the SS shall receive data and the happy bit, on the same HARQ process as in step 10, shall change status from happy to unhappy, and later change status from unhappy to happy.

### 7.1.6.2.3 MAC-es/e non-scheduled transmissions

#### 7.1.6.2.3.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.2.3.2 Conformance requirement

Extract From 25.321 clause 11.8.1.4:

[…]

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays. When a 2ms TTI is configured each non-scheduled grant is applicable to the specific set of HARQ processes indicated by RRC. The applicability of scheduled grants can be also restricted to a specific set of HARQ processes when a 2ms TTI is configured. HARQ process restriction and reservation is under the control of the serving cell Node B and indicated to the UE by RRC.

[…]

For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the corresponding non-scheduled grant, if the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the Serving Grant;

[…]

The amount of data from MAC-d flows for which non-scheduled grants were configured shall not exceed the value of the non-scheduled grant;

[…]

Extract From 25.321 clause11.9.1.4:

In TDD, rules for E-TFC selection shall be applied as provided below.

UEs shall apply E-TFC selection when invoked by the HARQ entity (see subclause 11.9.1.1.1).

For each MAC-d flow, RRC configures MAC-e with a HARQ profile and multiplexing list. Additionally, RRC configures MAC with a power offset in case the Scheduling Information needs to be transmitted without any higher-layer data. The HARQ profile includes the power offset and maximum number of HARQ transmissions to use for this MAC-d flow. For 1.28 Mcps TDD, the HARQ profile also includes a retransmission timer attribute.The multiplexing list identifies for each MAC-d flow(s), the other MAC-d flows for which data can be multiplexed in a transmission that uses the power offset included in its HARQ profile.

RRC can control the scheduling of uplink data by giving each logical channel a priority between 1 and 8, where 1 is the highest priority and 8 the lowest. E-TFC selection in the UE shall be done in accordance with the priorities indicated by RRC. Logical channels have absolute priority, i.e. the UE shall maximise the transmission of higher priority data.

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays.

The UE shall determine whether to take scheduled or non-scheduled grants into account in the upcoming transmission. If neither are supposed to be taken into account (i.e. the TTI is not available for non-scheduled transmission and no Grant for scheduled transmission has been received) then no grant shall be assumed to exist. If a grant exists then the transmission format and data allocation shall follow the requirements below.

For each configured MAC-d flow, a given E-TFC can be in any of the following states:

- Supported state;
- Blocked state.

The E-TFC states are derived according to the following:

- If the transmission is a retransmission then only the E-TFC with the same block size as the original transmission may be in the supported state.
- For 1.28Mcps TDD, only E-TFCs from the E-TFCS (the table of TB sizes) which are consistent with the UE's E-DCH capability category shall be considered for the transmission;
- Only E-TFCs from the E-TFCS (the table of TB sizes) which can be supported by (exactly) the number of slots assigned by the grant shall be considered for the transmission;
- Only E-TFCs which result (for the granted timeslot and code physical resources) in a coderate lying between the maximum and minimum (inclusive) allowable coderates set by RRC [7] shall be considered for the transmission {note: the definition of the term “coderate” as used here is the same as that provided by [18]}. This shall be evaluated for both QPSK and 16-QAM modulation;
- $P_{HARQ}$, the HARQ profile power offset is selected (the HARQ profile for the transmission shall be selected among the HARQ profiles of MAC-d flows on which the highest priority logical channels with available data are mapped; Scheduling Information power offset shall be used when Scheduling Information is transmitted without any higher-layer data.)
- Only E-TFCs whose calculated transmission power requirement $P_{E\text{-}PUCH}$ (see [18]) is less than or equal to the available or granted power shall be considered for the transmission (note: this requirement does not apply in the case of a retransmission on non-scheduled resources).

For 3.84Mcps/7.68Mcps TDD, from those E-TFCs in the supported state the UE determines the largest block size that it is permitted to transmit within the given constraints.

For 1.28Mcps TDD, from those E-TFCs in the supported state, UE determines a candidate set with up to 64 E-TFCs, including the largest 63 E-TFCs, in addition to the E-TFC dedicated for SI. If the number of E-TFCs in the supported state is not greater than 63, all the E-TFCs in the supported state shall be included in the candidate set. The E-TFCs in the candidate set shall then be re-indexed in an ascending order and numbered from 0 to (Nmax -1), where Nmax is the number of E-TFC in the candidate set. From the candidate set the UE determines the largest block size that is permitted to transmit within the given constraints.

The UE shall select the modulation type associated with the determined E-TFC (note: if an E-TFC is supported by both QPSK and 16-QAM then 16-QAM modulation shall be used if its power requirement ($P_{E\text{-}PUCH}$) is lower than the power requirement for QPSK, otherwise QPSK modulation shall be used).

Data allocation shall then be performed in accordance with the following:

- For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the corresponding non-scheduled grant. If the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the Serving Grant;
- The data allocation shall maximise the transmission of higher priority data;
- The UE shall select the E-TFC, SF and modulation which minimises the power used (3.84/7.68 Mcps TDD only);
- The UE shall select the E-TFC and modulation which minimises the power used (1.28 Mcps TDD only);

Once an appropriate E-TFC and data allocation are found according to the rules above, the "Multiplexing and TSN Setting" entity shall generate the corresponding MAC-e PDU.

In 1.28Mcps TDD, when Scheduling Information is triggered by timer per subclause 11.9.1.5, the E-TFC selection and data-allocation process shall assume that Scheduling Information has a priority higher than any other logical channel.

The E-TFC selection function shall provide this MAC-e PDU and transmission HARQ profile to the HARQ entity. The selected E-TFC is also provided (Note: for 1.28Mcps TDD, the signalled transport block size index, i.e. E-TFCI, is the index of the selected E-TFC in the candidate set.). The maximum number of HARQ transmissions and the power offset in this profile shall be set respectively to the maximum of both the Max Number of HARQ Transmissions and of the power offset of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission. For 1.28 Mcps TDD, the retransmission timer shall be set to the maximum of the retransmission timer value of the HARQ profiles that are permitted to be multiplexed into the transmission. Each HARQ process which is associated with a buffer holding a MAC-e PDU for potential retransmission shall maintain the HARQ profile and the number of re-transmissions that have occurred. For 1.28 Mcps TDD, the HARQ process shall also maintain the value of RTX_TIMER.

Further information on E-TFC selection is provided in Annex CA.

Reference(s)

TS 25.321 clause 11.8.1.4, 11.9.1.4

#### 7.1.6.2.3.3 Test purpose

To verify that the UE when RRC is configured for non-scheduled transmissions sends data without scheduling grant. To verify that no SI is sent for non-scheduled transmissions.

#### 7.1.6.2.3.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4c(FDD) /6.11.5.4.7.6(1.28Mcps TDD) using condition A12(FDD) /A11(1.28Mcps TDD) as specified in clause 9.1 of TS 34.108. The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for scheduling info | No periodic scheduling info |
| E-TFCI table | Table 0 for 10 ms TTI(FDD) |
| E-TFCI table | 5ms TTI E-DCH Transport Block Size Table 0(1.28Mcps TDD) |

The UE is placed into UE test loop mode 1 with the UL SDU size set to (10*41)-2 octets.

Test procedure

LCH 1 is mapped to MAC-d flow 2 which is configured for non-scheduled transmission allowing one SDU/TTI to be sent.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

c) The SS waits until data is received and checks that only 1 PDU/TTI is transmitted

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 1 RLC PDU on LCH 1 | |
| 2 | → | | MAC-es PDU containing 1 RLC PDU | This step is repeated 10 times until the complete SDU is transmitted |

Specific Message Contents

None

7.1.6.2.3.5 Test requirements

1. After step 1, the SS shall not receive any SI.

2. In step 2, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU in each TTI until the complete SDU has been received.

### 7.1.6.2.4 MAC-es/e correct handling of scheduled transmissions when absolute grant varies

#### 7.1.6.2.4.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.2.4.2 Conformance requirement

Extract from 25.321 clause 9.2.5.2.2:

The absolute grant message is sent on downlink, on the configured E-AGCH, from the serving E-DCH cell and allows the Node B scheduler to directly adjust the granted rate of UEs under its control.

[…]

Absolute Grant Value:
This field indicates the maximum E-DCH traffic to pilot ratio (E-DPDCH/DPCCH) that the UE is allowed to use in the next transmission. The length of the Absolute Grant Value field is 5 bits

[…]

Extract From 25.321 clause 9.2.6.2.1:

The Absolute Grant is sent on downlink on a set of configured E-AGCHs from the serving E-DCH cell and allows the Node B scheduler to directly adjust the granted rate and assigned physical resources for UEs under its control. The physical resource assignment indicates to the UE the maximum amount of uplink resources that it may use for a scheduled transmission.

The E-AGCH is a shared channel that uses an E-RNTI specific CRC in order to address messages to specific UEs (see [19]). For TDD, the RRC shall configure the MAC with a primary E-RNTI only.

A UE is required to monitor a set of E-AGCHs. The RRC signals to the UE details of the set of E-AGCHs that are to be monitored. The UE decodes an Absolute Grant intended for it on the basis of the E-RNTI sent to it by the Node B via the SRNC and by RRC. The following information will be conveyed in an absolute grant message:

- Absolute Grant Value – maximum power granted per resource unit (per slot)
- The physical resources to be used for transmission
  - Channelisation Code
  - Timeslots
  - Resource Duration (optional)

The absolute grant message itself includes multiple fields that are multiplexed together into between 14 and 28 bits for 3.84/7.68 Mcps TDD and between 23 and 26 bits for 1.28 Mcps TDD (depending on the system configuration) inside the MAC-e of the Node B and then submitted to the physical layer for transmission on the E-AGCH. These fields are:

- Absolute Grant Value:
  For TDD, this field indicates the maximum E-DCH traffic to reference power ratio (E-PUCH/$P_{e\text{-}base}$) per TDD resource unit that the UE is allowed to use on the E-DCH resources associated with the Absolute Grant. A TDD resource unit is defined as one sixteenth of the OVSF codespace in one timeslot. The length of the Absolute Grant Value field for TDD is 5 bits.

- Channelisation Code:
  This field describes the code component of the physical resource grant. For 1.28/3.84 Mcps TDD it comprises an enumerated value of length 5 bits indicating which node on the OVSF code tree has been allocated. For 7.68 Mcps TDD it comprises an enumerated value of length 6 bits indicating which node on the OVSF tree has been allocated. The mapping between the allocated OVSF and the enumerated node 0…30 for 1.28/3.84 Mcps and 0…62 for 7.68 Mcps is as given in [19].

- Timeslot Resource Related Information:
  This field describes the timeslot component of the physical resource grant and comprises a bitmap of length $n_{TRRI}$ indicating which of the timeslots configured for E-DCH use by RRC have been allocated with the LSB corresponding to the lowest numbered E-DCH timeslot and the MSB corresponding to the highest numbered timeslot. The length of the TRRI field ($n_{TRRI}$) is 5 bits for 1.28 Mcps TDD and is configurable by RRC on a per-cell basis between 1 and 12 bits for 3.84/7.68 Mcps TDD.

- Resource Duration Indicator:
  Optionally, RRC may configure, on a per-cell basis the presence of a resource duration indicator field on E-AGCH for TDD. If configured as present in a cell, 3 bits are used to indicate the number of TTI's allocated and the spacing between the allocated TTIs via a single grant according to table 9.2.6.2.1-2. If the field is configured as not present on E-AGCH in the cell, a value of 0 is implicitly assumed by the UE corresponding to 1 TTI.

**Table 9.2.6.2.1-2 – Resource Duration Indicator (RDI) interpetation**

| Resource Duration Indicator (3 bits) | TTIs allocated | TTI spacing |
|---|---|---|
| 0 | 1 | 1 |
| 1 | 2 | 1 |
| 2 | 2 | 2 |
| 3 | 2 | 4 |
| 4 | 4 | 1 |
| 5 | 4 | 2 |
| 6 | 4 | 4 |
| 7 | 8 | 1 |

- E-AGCH Cyclic Sequence Number (ECSN):
  The ECSN is a 3-bit field used to assist the UE with outer-loop power control of E-AGCH (cf. HCSN for HS-SCCH).

- E-HICH Indicator(EI) (1.28 Mcps TDD only)
  The E-HICH indicator (EI) consists of 2 bits and is used to indicate which E-HICH will convey the acknowledgement indicator for the scheduled UEs.

- E-UCCH Number Indicator (ENI) (1.28 Mcps TDD only)
  The E-UCCH Number Indicator (ENI) is a 3-bit field used to indicate the detailed number of E-UCCH.

[…]

UEs in CELL_DCH state, configured with an E-DCH transport channel shall maintain a Serving Grant and the list of active HARQ processes based on the absolute and relative grant commands decoded on the configured E-AGCH and E-RGCH(s).

[…]

For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the corresponding non-scheduled grant, if the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the Serving Grant;

Reference(s)

TS 25.321 clauses 9.2.5.2.2, 9.2.6.2.1, 11.8.1.3

7.1.6.2.4.3 Test purpose

To verify that the UE transmits different amount of data when the absolute grant varies.

7.1.6.2.4.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4c(FDD) /6.11.5.4.7.6(1.28Mcps TDD) using condition A12(FDD) /A11(1.28Mcps TDD) as specified in clause 9.1 of TS 34.108. The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for scheduling info | No periodic scheduling info |
| E-TFCI table | Table 0 for 10 ms TTI (FDD) |
| E-TFCI table | 5ms TTI E-DCH Transport Block Size Table 0(1.28Mcps TDD) |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Test procedure

Logical Channel with Id 7 (LCH 1) is mapped to MAC-d flow 2 with priority 1.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits 4 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

c) SS waits until an SI is received

d) The SS issues an absolute grant that allows the UE to transmit 1 SDU/TTI (absolute grant signalling value 4)

e) The SS waits until data is received and checks that only 1 SDU/TTI is transmitted

f) The SS waits until all 4 SDUs have been received

g) The SS removes the scheduling grant for E-DCH for the UE

h) The SS transmits 8 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

i) SS waits until an SI is received

j) The SS issues an absolute grant that allows the UE to transmit 4 SDUs/TTI (absolute grant signalling value 7)

k) The SS waits until data is received and checks that only 4 SDUs/TTI is transmitted

l) The SS waits until all 8 SDUs have been received

m) The SS removes the scheduling grant for E-DCH for the UE

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 4 RLC PDUs on LCH 1 | |
| 1a | → | | SI indicating data on LCH 1 | |
| 2 | ← | | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 3 | → | | MAC es PDU containing 1 RLC PDU, 4 TTIs in a row | |
| 4 | ← | | Removal of absolute grant | Signalling value 1 |
| 5 | ← | | 8 RLC PDUs on LCH 1 | |
| 5a | → | | SI indicating data on LCH 1 | |
| 6 | ← | | Absolute grant allowing the UE to transmit 4 RLC PDUs per TTI | Signalling value 7 |
| 7 | → | | MAC es PDU containing 4 RLC PDUs, 2 TTIs in a row | |
| 8 | ← | | Removal of absolute grant | Signalling value 1 |

Specific Message Contents

None

#### 7.1.6.2.4.5 Test requirements

1. In step 3, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU. This shall happen 4 TTIs in a row.
2. In step 7, the SS shall receive 1 MAC-es PDU containing 4 RLC PDUs. This shall happen 2 TTIs in a row.

### 7.1.6.2.5 MAC-es/e de-activation and re-activation of HARQ processes

#### 7.1.6.2.5.1 Definition and applicability

All UEs which support E-DCH and support 2 ms TTI.

#### 7.1.6.2.5.2 Conformance requirement

The Serving Grant Update procedure shall be applied at every TTI boundary and shall take into account the Absolute Grant message, Serving Relative Grant and non-serving Relative Grants that apply to the TTI.

The UE shall:

1> set reference_ETPR to the E-DPDCH to DPCCH power ratio as defined in subclause 3.1.2;

1> if an Absolute Grant was received for this TTI:

2> if the Identity type is “Primary”, and the Absolute Grant value is set to "INACTIVE":

3> if Absolute Grant Scope indicates "Per HARQ process" and a 2ms TTI is configured:

4> de-activate the process given by the value of CURRENT_HARQ_PROCESS.

3> if Absolute Grant Scope indicates "All HARQ processes" and a secondary E-RNTI was configured by higher layers:

4> activate all HARQ processes;

4> set Serving_Grant = Stored_Secondary_Grant;

4> set Primary_Grant_Available to "False".

3> if Absolute Grant Scope indicates "All HARQ processes", a 2ms TTI is configured and a secondary E-RNTI was not configured by higher layers:

4> deactivate all HARQ processes (if a process was inactive it remains inactive, if a process was active it becomes inactive).

2> else if the Absolute Grant Value is different from "INACTIVE":

3> if the Identity Type is "Secondary":

4> set Stored_Secondary_Grant = Absolute Grant Value.

3> if the Identity Type is "Primary" or Primary_Grant_Available is set to "False":

4> set Serving_Grant = Absolute Grant Value.

4> if the Identity Type is "Primary":

5> set Primary_Grant_Available to "True";

5> if Absolute Grant Scope indicates "Per HARQ process":

6> activate the process given by the value of CURRENT_HARQ_PROCESS.

5> if Absolute Grant Scope indicates "All HARQ processes":

6> activate all HARQ processes;

5> if AG_Timer is not active, it shall be started, otherwise it shall be restarted.

Reference(s)

TS 25.321 clause 11.8.1.3.1

7.1.6.2.5.3 Test purpose

The purpose of this test case is to verify the selective de-activation and re-activation of a HARQ process

7.1.6.2.5.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4c using condition A12 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) |
| E-DCH TTI | 2 ms |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to (10*41)-2 octets.

Test procedure

In this test procedure The UE is configured with one logical channels, with an UL SDU size of 39 octets.

a) SS has not issued any scheduling grant for E-DCH to the UE

b) SS transmits 5 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

c) SS waits until an SI is received.

d) SS issues an absolute grant that allows the UE to send 1 RLC PDU per TTI (signalling value 4)

e) SS starts receiving loop backed RLC PDU's. SS checks all 8 Harq processes are used.

f) SS transmits an absolute grant, with Absolute Grant Value set to "INACTIVE" and Absolute Grant Scope indicating "Per HARQ process" corresponding to HARQ process 0 & 4.

g) SS transmits 5 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

h) SS starts receiving loop backed RLC PDU's. SS checks Harq processes 0 and 4 are not used.

i) SS transmits an absolute grant, with Absolute Grant Value that allows UE to send 1 RLC PDU per TTI (signalling value 4) and Absolute Grant Scope indicating " All HARQ processes ".

j) SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

k) SS starts receiving loop backed RLC PDU's. SS checks all 8 Harq processes are used.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 5 RLC PDUs on LCH 1 | |
| 2 | → | | SI indicating data on LCH 1 | |
| 3 | ← | | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 4 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all 5 RLC SDU's are received |
| 5 | ← | | Absolute grant de-activating HARQ Process 0 | |
| 6 | ← | | Absolute grant de-activating HARQ Process 4 | |
| 7 | ← | | 5 RLC PDUs on LCH 1 | |
| 8 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all 5 RLC SDU's are received. |
| 9 | ← | | Absolute grant activating All HARQ Process 0 | Signalling value 4 |
| 10 | ← | | 5 RLC PDUs on LCH 1 | |
| 11 | → | | MAC es PDU's containing 1 RLC PDU from LCH 1 | This step is repeated until all 5 RLC SDU's are received |

Specific Message Contents

None

7.1.6.2.5.5 Test requirements

1. In step 4 all 8 HARQ processes shall be used to transmit RLC PDU's
2. In step 8 HARQ processes 0 and 4 shall not be used to transmit RLC PDU's

3. In step 11 all 8 HARQ processes shall be used to transmit RLC PDU's

#### 7.1.6.2.6 MAC-es/e correct handling of relative grants

##### 7.1.6.2.6.1 Definition and applicability

All UEs which support E-DCH.

##### 7.1.6.2.6.2 Conformance requirement

The Serving Grant Update procedure shall be applied at every TTI boundary and shall take into account the Absolute Grant message, Serving Relative Grant and non-serving Relative Grants that apply to the TTI.

The UE shall:

1> set reference_ETPR to the E-DPDCH to DPCCH power ratio as defined in subclause 3.1.2;

1> if an Absolute Grant was received for this TTI:

…..

1> else (no Absolute Grant received):

2> if the HARQ process given by the value of CURRENT_HARQ_PROCESS is active; and

2> if Primary_Grant_Available is equal to "True"; and

2> if Serving_Grant <> "Zero_Grant" ; and

2> if AG_Timer has expired; and2> if there was a scheduled transmission (see Note) in the previous TTI of the HARQ process given by the value of CURRENT_HARQ_PROCESS:

3> if the Serving Relative Grant indicates "UP":

4> determine the Serving_Grant in accordance with subclause 9.2.5.2.1.

3> else, if the Serving Relative Grant indicates "DOWN":

4> determine the Serving_Grant in accordance with subclause 9.2.5.2.1.

1> if any Non-Serving Relative Grants indicate "DOWN" for this TTI and Serving_Grant <> "Zero_Grant":

2> Serving_Grant = MIN(Serving_Grant, Serving_Grant determined in accordance with subclause 9.2.5.2.1);

2> Maximum_Serving_Grant = Serving_Grant.

2> if Non_Serving_RG_Timer is not active it shall be started, otherwise it shall be restarted;

1> else if no Non-Serving Relative Grants indicate "DOWN" for this TTI:

2> if Non_Serving_RG_Timer has not expired:

3> Serving_Grant = MIN(Maximum_Serving_Grant, Serving_Grant).NOTE: Scheduling Information sent alone is not considered as a scheduled transmission.

Reference(s)

TS 25.321 clause 11.8.1.3.1

##### 7.1.6.2.6.3 Test purpose

The purpose of this test case is

1. To verify that the UE acts on serving and non-serving relative grants when the UE is using the Primary E-RNTI.

2. To verify that the UE only acts on non-serving relative grants when the UE is using the Secondary E-RNTI

3. To verify that the UE does not use a Serving_Grant value greater than Maximum_Serving_Grant when the Non_Serving_RG_Timer has not expired.

7.1.6.2.6.4Method of test

Initial conditions

System Simulator:

2 cells, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4c using condition A12 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |

Cell 1 is the serving E-DCH cell.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) |
| E-DCH TTI | 10 ms |
| New Secondary E-RNTI | '1010 1111 1010 1111' |
| 3-Index-Step Threshold | 20 |
| 2-Index-Step Threshold | 37 |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to (10*41)-2 octets.

Test procedure

In this test procedure the UE is configured with one logical channel.

0) SS waits for the Measurement report from the UE with event set to “1a” and then adds the Radio link on the second cell by sending an Active Set Update message.

a) SS has not issued any scheduling grant for E-DCH to the UE

b) SS transmits 10 SDU’s of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

c) SS waits until an SI is received.

d) SS issues a primary absolute grant that allows the UE to send 1 RLC PDU per TTI (signalling value 4)

e) SS starts receiving loop backed RLC PDU’s.

f) After receiving data once on all HARQ processes in a HARQ-RTT, SS transmits a relative grant in cell 1(serving cell) as ‘UP’.

g) SS continues receiving loop back PDU’s and checks that UE has started using the serving grant corresponding to more than one RLC PDU’s transmitted per TTI.

h) SS transmits 10 SDU’s of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

i) SS starts receiving loop backed RLC PDU’s.

j) After receiving data once on all HARQ processes in a HARQ-RTT, SS transmits a relative grant in cell 2(non serving) as ‘Down’.

k) SS continues receiving loop back PDU's and checks that the UE has reduced the serving grant corresponding to one RLC PDU transmitted per TTI.

l) SS transmits a primary absolute grant, with Absolute Grant Value set to "INACTIVE" and Absolute Grant Scope indicating "All HARQ process" . The UE starts using the Secondary Grant.

m) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

n) SS waits until an SI is received.

o) SS issues a secondary absolute grant corresponding to 1 RLC PDU of size 41 octets per TTI (signalling value 4)

p) After receiving data once on all HARQ processes in a HARQ-RTT, SS transmits a relative grant in cell 1(serving cell) as 'UP'.

q) SS continues receiving loop back PDU's and checks that the UE has ignored the previous relative grant.

r) SS issues a secondary absolute grant corresponding to 2 RLC PDU's of size 41 octets per TTI (signalling value 5)

s) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

t) SS starts receiving loop backed RLC PDU's. SS checks that the UE is using a serving grant corresponding to 2 RLC PDU's transmitted per TTI.

u) After receiving data once on all HARQ processes in a HARQ-RTT, SS transmits a relative grant in cell 2 (non serving) as 'Down'. (*Note)

v) SS continues receiving loop back PDU's and checks that UE has reduced the serving grant corresponding to 1 RLC PDU's transmitted per TTI.

w) SS issues a secondary absolute grant corresponding to 2 RLC PDU's of size 41 octets per TTI (signalling value 5)

wa) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

wb) SS starts receiving loop backed RLC PDU's. SS checks that the UE is using a serving grant corresponding to 2 RLC PDU's transmitted per TTI.

x) After receiving data once on all HARQ processes in a HARQ-RTT,SS transmits a relative grant in cell 2 (non serving) as 'Down'.

y) In the following TTI, SS transmits a secondary absolute grant that allows the UE to send 2 RLC PDU's of size 41 octets per TTI (signalling value 5).

za) Void

aa) SS continues receiving loop back PDU's and checks that UE has reduced the serving grant corresponding to 1 RLC PDU's transmitted per TTI.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | → | | Measurement Report | See specific message contents for this message |
| 0b | ← | | ACTIVE SET UPDATE | The SS instructs the UE to add cell 2 in the active set |
| 0c | → | | ACTIVE SET UPDATE COMPLETE | |
| 1 | ← | | 10 RLC PDUs on LCH 1 | |
| 2 | → | | SI indicating data on LCH 1 | |
| 3 | ← | | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 4 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated for one HARQ RTT |
| 5 | ← | | Relative Grant in cell 1 with 'UP' | |
| 6 | → | | MAC es PDU containing more than one RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 7 | ← | | 10 RLC PDUs on LCH 1 | |
| 8 | → | | MAC es PDU containing more than one RLC PDU from LCH 1 | This step is repeated for one HARQ RTT |
| 9 | ← | | Relative Grant in cell 2 with 'DOWN' | |
| 10 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 11 | ← | | Primary Absolute grant set to 'INACTIVE' and scope 'All HARQ Processes' | UE serving grant to Stored_Secondary_Grant which is initialised to 'Zero_grant'. |
| 12 | ← | | 10 RLC PDUs on LCH 1 | |
| 13 | → | | SI indicating data on LCH 1 | |
| 14 | ← | | Secondary Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 15 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated for one HARQ RTT |
| 16 | ← | | Relative Grant in cell 1 with 'UP' | |
| 17 | → | | MAC es PDU containing one RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 18 | ← | | Secondary Absolute grant allowing the UE to transmit 2 RLC PDU per TTI | Signalling value 5 |
| 19 | ← | | 10 RLC PDUs on LCH 1 | |
| 20 | → | | MAC es PDU containing 2 RLC PDU from LCH 1 | This step is repeated for one HARQ RTT |
| 21 | ← | | Relative Grant in cell 2 with 'DOWN' | |
| 22 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 23 | ← | | Secondary Absolute grant allowing the UE to transmit 2 RLC PDUs per TTI | Signalling value 5<br>$SG_{LUPR}$ corresponding to 19/15 |
| 23a | ← | | 10 RLC PDUs on LCH 1 | |
| 23b | → | | MAC es PDU containing 2 RLC PDU from LCH 1 | This step is repeated for three HARQ RTT |
| 24 | ← | | Relative Grant in cell 2 with 'DOWN' | $SG_{LUPR}$ corresponding to 17/15 sufficient for 1 RLC PDU per TTI |
| 25 | ← | | 1 TTI after step 24, Absolute grant allowing the UE to transmit 2 RLC PDUs per TTI | Signalling value 5 |
| 26 | ← | | Void | |
| 27 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |

Specific Message Contents

MEASUREMENT REPORT (Step 0a)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 0b)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation time | Not Present |
| Radio link addition information | |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | FDD |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. |
| - DPCH frame offset | Calculated value from Cell synchronisation information |
| - Secondary CPICH info | Not Present |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE |
| - Secondary scrambling code | 1 |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. |
| - Scrambling code change | Not Present |
| - TPC Combination Index | 0 |
| - Close loop timing adjustment mode | Not Present |
| - TFCI Combining Indicator | FALSE |
| - E-HICH Information | |
| - Channelisation code | 4 |
| - Signature sequence | 1 |
| - CHOICE E-RGCH Information | |
| - E-RGCH Information | |
| - Signature Sequence | 0 |
| - RG combination index | 1 |

#### 7.1.6.2.6.5 Test requirements

1. After step 5 UE will start sending 2 RLC PDU's per TTI.
2. After step 9, UE will reduce number of RLC PDU's per TTI to 1.
3. After step 16, UE will not change its rate of RLC PDU's per TTI.
4. After step 21, UE will reduce number of RLC PDU's per TTI to 1.

4a After Step 23,UE will start sending sending 2 RLC PDU's per TTI

4b. After step 24, UE will reduce number of RLC PDU's per TTI to 1

5. After step 25, UE will not change its $SG_{LUPR}$ and hence in step 27 will loop back PDU's at the rate of 1 RLC PDU per TTI.

### 7.1.6.2.7 MAC-es/e correct handling of absolute grants on Primary and Secondary E-RNTI

#### 7.1.6.2.7.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.2.7.2 Conformance requirement

The Serving Grant Update procedure shall be applied at every TTI boundary and shall take into account the Absolute Grant message, Serving Relative Grant and non-serving Relative Grants that apply to the TTI.

The UE shall:

1> set reference_ETPR to the E-DPDCH to DPCCH power ratio as defined in subclause 3.1.2;

1> if an Absolute Grant was received for this TTI:

2> if the Identity type is “Primary”, and the Absolute Grant value is set to "INACTIVE":

3> if Absolute Grant Scope indicates "Per HARQ process" and a 2ms TTI is configured:

4> de-activate the process given by the value of CURRENT_HARQ_PROCESS.

3> if Absolute Grant Scope indicates "All HARQ processes" and a secondary E-RNTI was configured by higher layers:

4> activate all HARQ processes;

4> set Serving_Grant = Stored_Secondary_Grant;

4> set Primary_Grant_Available to "False".

3> if Absolute Grant Scope indicates "All HARQ processes", a 2ms TTI is configured and a secondary E-RNTI was not configured by higher layers:

4> deactivate all HARQ processes (if a process was inactive it remains inactive, if a process was active it becomes inactive).

2> else if the Absolute Grant Value is different from "INACTIVE":

3> if the Identity Type is "Secondary":

4> set Stored_Secondary_Grant = Absolute Grant Value.

3> if the Identity Type is "Primary" or Primary_Grant_Available is set to "False":

4> set Serving_Grant = Absolute Grant Value.

4> if the Identity Type is "Primary":

5> set Primary_Grant_Available to "True";

5> if Absolute Grant Scope indicates "Per HARQ process":

6> activate the process given by the value of CURRENT_HARQ_PROCESS.

5> if Absolute Grant Scope indicates "All HARQ processes":

6> activate all HARQ processes;

5> if AG_Timer is not active, it shall be started, otherwise it shall be restarted.Reference(s)

TS 25.321 clause 11.8.1.3.1

#### 7.1.6.2.7.3 Test purpose

The purpose of this test case is to verify that the UE acting on absolute grants given on the Primary and Secondary E-RNTI and switching between the 2 cases.

#### 7.1.6.2.7.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4c using condition A12 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) |
| New Secondary E-RNTI | '1010 1111 1010 1111' |

The UE is placed into UE test loop mode 1 with the UL SDU size set to (4*41)-2 octets.

### Test procedure

In this test procedure The UE is configured with one logical channel.

a) SS has not issued any scheduling grant for E-DCH to the UE

b) SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

c) SS waits until an SI is received.

d) The SS issues primary absolute grant corresponding to 4 RLC PDUs of size 41 octets per TTI (signalling value 7)

e) SS starts receiving loop backed RLC PDU's.

f) SS transmits primary absolute grant, with Absolute Grant Value set to "INACTIVE" and Absolute Grant Scope indicating "All HARQ process" . UE starts using Secondary Grant.

g) SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

h) SS waits until an SI is received.

i) The SS issues secondary absolute grant corresponding to 1 RLC PDU of size 41 octets per TTI (signalling value 4)

j) SS starts receiving loop backed RLC PDU's.

k) SS issues secondary absolute grant of 'ZERO_GRANT'.

l) SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

m) SS waits until an SI is received.

n) The SS issues primary absolute grant corresponding to 4 RLC PDUs of size 41 octets per TTI (signalling value 7), with Absolute Grant Scope set as "All HARQ processes". UE starts using primary grant.

o) SS starts receiving loop backed RLC PDU's.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 1 RLC PDUs on LCH 1 | |
| 2 | → | | SI indicating data on LCH 1 | |
| 3 | ← | | Primary Absolute grant allowing the UE to transmit 4 RLC PDU per TTI | Signalling value 7 |
| 4 | → | | MAC es PDU containing 4 RLC PDU's from LCH 1 | |
| 5 | ← | | Primary Absolute grant set to 'INACTIVE' and scope 'All HARQ Processes' | UE serving grant to Stored_Secondary_Grant which is initialised to 'Zero_grant'. |
| 6 | ← | | 1 RLC PDUs on LCH 1 | |
| 7 | → | | SI indicating data on LCH 1 | |
| 8 | ← | | Secondary Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 9 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until the whole RLC SDU is transmitted |
| 10 | ← | | Secondary Absolute grant set to 'Zero_Grant' | |
| 11 | ← | | 1 RLC PDUs on LCH 1 | |
| 12 | → | | SI indicating data on LCH 1 | |
| 13 | ← | | Primary Absolute grant allowing the UE to transmit 4 RLC PDU per TTI | Signalling value 7 |
| 14 | → | | MAC es PDU containing 4 RLC PDU's from LCH 1 | |

Specific Message Contents

None

#### 7.1.6.2.7.5 Test requirements

1. In step 4, the SS shall receive 1 MAC-es PDU containing 4 RLC PDU's

1a. In step 7 UE shall transmit SI, as an indication that it has stopped using previous absolute grant.

2. After step 8, UE shall start sending loop backed PDU, with one RLC PDU per TTI.

3. In step 12 UE shall transmit SI.

4. After step 13, UE shall loop back all 4 RLC PDU's in one TTI.

### 7.1.6.2.8 MAC-es/e combined non-scheduled and scheduled transmissions

#### 7.1.6.2.8.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.2.8.2 Conformance requirement

From 25.321 clause 11.8.1.4:

The transmission format and data allocation shall follow the requirements below:

[…]

- For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the corresponding non-scheduled grant, if the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the Serving Grant;

[…]

- The amount of data from MAC-d flows for which non-scheduled grants were configured shall not exceed the value of the non-scheduled grant;

[…]

- When not in a power limited condition the maximum amount of data from MAC-d flows for which no non-scheduled grants were configured shall be quantized to the next smaller supported E-TFC based on the Serving Grant (after adjustment for compressed frames), the power offset from the selected HARQ profile, the non-scheduled grants (if any) and Scheduling Information (if any); In the case a 2ms TTI is configured and the HARQ process is inactive, the UE shall not include any such data in the transmission;

From 25.321 clause 11.9.1.4:

In TDD, rules for E-TFC selection shall be applied as provided below.

UEs shall apply E-TFC selection when invoked by the HARQ entity (see subclause 11.9.1.1.1).

For each MAC-d flow, RRC configures MAC-e with a HARQ profile and multiplexing list. Additionally, RRC configures MAC with a power offset in case the Scheduling Information needs to be transmitted without any higher-layer data. For 1.28 Mcps TDD, RRC also configures MAC with a retransmission timer and the maximum number of HARQ transmissions in case the Scheduling Information needs to be transmitted without any higher-layer data. The HARQ profile includes the power offset and maximum number of HARQ transmissions to use for this MAC-d flow. For 1.28 Mcps TDD, the HARQ profile also includes a retransmission timer attribute.The multiplexing list identifies for each MAC-d flow(s), the other MAC-d flows for which data can be multiplexed in a transmission that uses the power offset included in its HARQ profile.

RRC can control the scheduling of uplink data by giving each logical channel a priority between 1 and 8, where 1 is the highest priority and 8 the lowest. E-TFC selection in the UE shall be done in accordance with the priorities indicated by RRC. Logical channels have absolute priority, i.e. the UE shall maximise the transmission of higher priority data.

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays.

The UE shall determine whether to take scheduled or non-scheduled grants into account in the upcoming transmission. If neither are supposed to be taken into account (i.e. the TTI is not available for non-scheduled transmission and no Grant for scheduled transmission has been received) then no grant shall be assumed to exist. If a grant exists then the transmission format and data allocation shall follow the requirements below.

For each configured MAC-d flow, a given E-TFC can be in any of the following states:

- Supported state;
- Blocked state.

The E-TFC states are derived according to the following:

- If the transmission is a retransmission then only the E-TFC with the same block size as the original transmission may be in the supported state.
- For 1.28Mcps TDD, only E-TFCs from the E-TFCS (the table of TB sizes) which are consistent with the UE's E-DCH capability category shall be considered for the transmission;
- Only E-TFCs from the E-TFCS (the table of TB sizes) which can be supported by (exactly) the number of slots assigned by the grant shall be considered for the transmission;
- Only E-TFCs which result (for the granted timeslot and code physical resources) in a coderate lying between the maximum and minimum (inclusive) allowable coderates set by RRC [7] shall be considered for the transmission {note: the definition of the term “coderate” as used here is the same as that provided by [18]}. This shall be evaluated for both QPSK and 16-QAM modulation;
- $P_{HARQ}$, the HARQ profile power offset is selected (for 3.84/7.68Mcps TDD the HARQ profile for the transmission shall be selected among the HARQ profiles of MAC-d flows on which the highest priority logical channels with available data are mapped, for 1.28Mcps TDD the HARQ power offset shall be set to the maximum of HARQ power offset of all the MAC-d flows mapped to the same type of resource (scheduled or non-scheduled resource); Scheduling Information power offset shall be used when Scheduling Information is transmitted without any higher-layer data.)
- Only E-TFCs whose calculated transmission power requirement $P_{E\text{-}PUCH}$ (see [18]) is less than or equal to both the available and the granted power shall be considered for the transmission (note: this requirement does not

apply in the case of a retransmission on non-scheduled resources). For TDD, the smallest E-TFC is considered always in the supported state. The granted power is defined as the calculated E-PUCH transmission power of [18] with $\beta_e$ = (Absolute Grant Value + $\alpha_e$). The available power is the maximum UE transmission power.

From those E-TFCs in the supported state the UE determines the largest block size that it is permitted to transmit within the given constraints.

The UE shall select the modulation type associated with the determined E-TFC (note: if an E-TFC is supported by both QPSK and 16-QAM then 16-QAM modulation shall be used if its power requirement ($P_{E\text{-}PUCH}$) is lower than the power requirement for QPSK, otherwise QPSK modulation shall be used).

Data allocation shall then be performed in accordance with the following:

- For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the corresponding non-scheduled grant. If the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the Serving Grant;

- The data allocation shall maximise the transmission of higher priority data;

- The UE shall select the E-TFC, SF and modulation which minimises the power used (3.84/7.68 Mcps TDD only);

- The UE shall select the E-TFC and modulation which minimises the power used (1.28 Mcps TDD only);

Once an appropriate E-TFC and data allocation are found according to the rules above, the "Multiplexing and TSN Setting" entity shall generate the corresponding MAC-e PDU.

In 1.28Mcps TDD, when Scheduling Information is triggered by timer per subclause 11.9.1.5, the E-TFC selection and data-allocation process shall assume that Scheduling Information has a priority higher than any other logical channel.

The E-TFC selection function shall provide this MAC-e PDU and transmission HARQ profile to the HARQ entity. For 3.84Mcps TDD and 7.68Mcps TDD the selected E-TFC is also provided (Note: for 1.28Mcps TDD, the signalled transport block size index, i.e. E-TFCI, is the index of the selected E-TFC in the candidate set.). The maximum number of HARQ transmissions and the power offset in this profile shall be set respectively to the maximum of both the Max Number of HARQ Transmissions and of the power offset of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission. For 1.28 Mcps TDD, the maximum number of HARQ transmissions shall be set to the maximum of the Max Number of HARQ Transmissions of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission, the HARQ power offset shall be set to the maximum of HARQ power offset of all the MAC-d flows mapped to the same type of resource (scheduled or non-scheduled resource), and the retransmission timer shall be set to the maximum of the retransmission timer value of the HARQ profiles that are permitted to be multiplexed into the transmission. For 1.28Mcps TDD, when the Scheduling Information needs to be transmitted without any higher-layer data, the specific HARQ profile should be applied. Each HARQ process which is associated with a buffer holding a MAC-e PDU for potential retransmission shall maintain the HARQ profile and the number of re-transmissions that have occurred. For 1.28 Mcps TDD, the HARQ process shall also maintain the value of RTX_TIMER.

Further information on E-TFC selection is provided in Annex CA.

From 25.331 clause 8.6.5.18:

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

[…]

1> for FDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled transmission grant HARQ process allocation" is configured for this MAC-d flow:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission grant HARQ process allocation", with a total contribution from this MAC-d flow not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

3> else:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e PDU transmitted by any HARQ process, with a total contribution from this MAC-d flow not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity").

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDUs for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH (see [15]).

Reference(s)

TS 25.321 clause 11.8.1.4, 11.9.1.4, TS 25.331 clause 8.6.5.18

7.1.6.2.8.3 Test purpose

To verify that the UE is able to handle combined non-scheduled and scheduled transmissions.

7.1.6.2.8.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4d (FDD) /6.11.5.4.7.7(1.28Mcps TDD) using condition A15 (FDD) /A14 (1.28Mcps TDD) as specified in clause 9.1 of TS 34.108. The following parameters are specific for this test case with the logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the test case | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| E-TFCI table | Table 0 for 10 ms TTI (FDD) |
| E-TFCI table | 5ms TTI E-DCH Transport Block Size Table 0(1.28Mcps TDD) |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size for LCH 1 set to (25*41)-2 octets and LCH 2 size set to 39 octets.

Test procedure

The UE is configured with a non-scheduled grant on MAC-d flow 2, and the value of the "Max MAC-e PDU contents size" is 500 bits. The UE is not given any grant to transmit on MAC-d flow 3 (LCH 2).

a) The SS has not issued any grant for E-DCH on MAC-d flow 3 (LCH 2)

b) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH 2

c) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

d) The SS waits until data is received and checks that the first TTI contains only data on LCH 1

e) The SS issues an absolute grant that allows the UE to send with a high rate on LCH 2 (well above 1 SDU/TTI) immediately after the previous step (i.e. not more than one TTI after the first data on LCH 1 has been looped back).

f) The SS receives data from the two logical channels LCH 1 and LCH 2 in one TTI.

g) The SS removes the scheduling grant for E-DCH for the UE

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 1 RLC PDU on LCH 2 | SDU size is 40 bytes |
| 2 | ← | | 1 RLC PDU on LCH 1 | SDU size is 40 bytes |
| 2a | → | | SI indicating data on LCH 2 | Step 2a and 3 can happen in any order |
| 3 | → | | MAC es PDU containing 1 RLC PDU on LCH 1 | |
| 4 | ← | | Absolute grant allowing the UE to transmit with high data rate on LCH 2 | Signalling value 31 |
| 5 | → | | MAC es PDU containing 1 RLC PDU on LCH 1 and 1 RLC PDU on LCH 2 | Before and after this step, SS continues to receive 1 RLC PDU on LCH 1 per TTI, until complete SDU consisting of 25 PDU's is received. |
| 6 | ← | | Removal of absolute grant | Signalling value 1 |

Specific Message Contents

None

7.1.6.2.8.5 Test requirements

1. In step 3, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU on LCH 1.

2. In step 5, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU on LCH 1 and 1 RLC PDU on LCH 2 within the same TTI.

## 7.1.6.2.9 MAC-es/e Correct handling of HARQ profile power offsets

### 7.1.6.2.9.1 Definition and applicability

All UEs which support E-DCH.

### 7.1.6.2.9.2 Conformance requirement

In FDD mode, the rules for E-TFC selection provided below shall apply to UEs in CELL_DCH state with an E-DCH transport channel configured. These UEs shall apply the E-TFC selection procedure when invoked by the HARQ entity (see subclause 11.8.1.1.1). In the case where a 2ms TTI is configured, E-TFC selection shall not be performed for TTIs that overlap with an uplink compressed mode gap. The E-TFC restriction procedure described in [12] shall always be applied before the E-TFC selection process below. Furthermore, for UEs that are also configured with a DCH transport channel on uplink, the TFC selection procedure shall be applied before either of these.

For each MAC-d flow, RRC configures MAC with a HARQ profile and a multiplexing list. Additionally, RRC configures MAC with a power offset for "Control-only" transmissions. This power offset and a maximum number of

HARQ transmissions of 8 will be used to define a HARQ profile for "Control-only" transmissions which will be used, in case the Scheduling Information needs to be transmitted without any higher-layer data. The HARQ profile includes the power offset and maximum number of HARQ transmissions to use for this MAC-d flow. The multiplexing list identifies for each MAC-d flow(s), the other MAC-d flows from which data can be multiplexed in a transmission that uses the power offset included in its HARQ profile.

RRC can control the scheduling of uplink data by giving each logical channel a priority between 1 and 8, where 1 is the highest priority and 8 the lowest. E-TFC selection in the UE shall be done in accordance with the priorities indicated by RRC. Logical channels have absolute priority, i.e. the UE shall maximise the transmission of higher priority data.

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays. When a 2ms TTI is configured each non-scheduled grant is applicable to the specific set of HARQ processes indicated by RRC. The applicability of scheduled grants can be also restricted to a specific set of HARQ processes when a 2ms TTI is configured. HARQ process restriction and reservation is under the control of the serving cell Node B and indicated to the UE by RRC.

For each configured MAC-d flow, a given E-TFC can be in any of the following states:

- Supported state;
- Blocked state.

At each TTI boundary, UEs in CELL_DCH state with an E-DCH transport channel configured shall determine the state of each E-TFC for every MAC-d flow configured based on its required transmit power versus the maximum UE transmit power (see [7] and [12]). If no DCH transport channel is configured or if a DCH transport channel is configured and the selected TFC is "empty" (see [3]), the UE shall consider that E-TFCs included in the minimum set of E-TFCs are always in supported state (see [7]).

At every TTI boundary for which a new transmission is requested by the HARQ entity (see subclause 11.8.1.1.1), the UE shall perform the operations described below. UEs configured both with DCH and E-DCH transport channels shall perform TFC selection before performing E-TFC selection.

The Serving Grant Update function provides the E-TFC selection function with the maximum E-DPDCH to DPCCH power ratio that the UE is allowed to allocate for the upcoming transmission for scheduled data (held in the Serving Grant state variable – see subclause 11.8.1.3).

The HARQ process ID for the upcoming transmission is determined using the following formulae:

- For 2ms TTI: CURRENT_HARQ_PROCESS_ID = [5*CFN + subframe number] **mod** HARQ_RTT
- For 10ms TTI: CURRENT_HARQ_PROCESS_ID = [CFN] **mod** HARQ_RTT

Based on this current HARQ process ID and the RRC configuration, the UE shall determine whether to take the scheduled and non-scheduled grants into account in the upcoming transmission. If they are not supposed to be taken into account, then the corresponding grant shall be assumed to not exist. If the variable Serving_Grant has the value "Zero_Grant" after the Serving Grant Update, then the Serving Grant shall not be taken into account in the upcoming transmission.

When Scheduling Information is triggered per subclause 11.8.1.6, the E-TFC selection and data-allocation process shall assume that a non-scheduled grant is available for its transmission and that Scheduling Information has a priority higher then any other logical channel. Furthermore the HARQ process used for the upcoming transmission shall be assumed to be active and not L3 restricted for the transmission of the Scheduling Information, i.e. transmission of Scheduling Information can take place on this process.

The transmission format and data allocation shall follow the requirements below:

- Only E-TFCs from the configured E-TFCS shall be considered for the transmission;
- For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the corresponding non-scheduled grant, if the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the Serving Grant;
- The power offset for the transmission is the one from the HARQ profile of the MAC-d flow that allows highest-priority data to be transmitted. If more than one MAC-d flow allows data of the same highest priority to be transmitted, it is left to implementation to select which MAC-d flow to prefer);

- In case the variable Serving_Grant has the value "Zero_Grant" after the Serving Grant Update function and there is no data available for MAC-d flows for which non-scheduled grants were configured and the transmission of Scheduling Information has been triggered, the "Control-only" HARQ profile configured by the higher layers shall be used.

- The Nominal Power Offset shall be set to the power offset included in the transmission HARQ profile;

- The data allocation shall maximize the transmission of higher priority data;

- The amount of data from MAC-d flows for which non-scheduled grants were configured shall not exceed the value of the non-scheduled grant;

- If a 10ms TTI is configured and the TTI for the upcoming transmission overlaps with a compressed mode gap, the Serving_Grant provided by the Serving Grant Update function shall be scaled back as follows:

$$SG' = SG * (\frac{N_C}{15})$$

  where SG' represents the modified serving grant considered by the E-TFC selection algorithm and $N_C$ represents the number of non DTX slots in the compressed TTI;

- When not in a power limited condition the maximum amount of data from MAC-d flows for which no non-scheduled grants were configured shall be quantized to the next smaller supported E-TFC based on the Serving Grant (after adjustment for compressed frames), the power offset from the selected HARQ profile, the non-scheduled grants (if any) and Scheduling Information (if any); In the case a 2ms TTI is configured and the HARQ process is inactive, the UE shall not include any such data in the transmission;

- The Scheduling Information is always sent when triggered;

- Only E-TFCs in supported state shall be considered;

- The E-TFC resulting in the smallest amount of padding for the selected MAC-es PDUs and corresponding MAC-e/es headers, shall be selected including the case when the Scheduling Information needs to be transmitted.

Once an appropriate E-TFC and data allocation are found according to the rules above, the "Multiplexing and TSN Setting" entity shall generate the corresponding MAC-e PDU.

The E-TFC selection function shall provide this MAC-e PDU and transmission HARQ profile to the HARQ entity. The maximum number of HARQ transmissions and the power offset in this profile, shall be set respectively to the maximum of the Max Number of HARQ Transmissions of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission and to the Nominal Power Offset. The HARQ entity shall also be informed of whether the transmission includes Scheduling Information and whether this information is sent by itself or with higher-layer data.

Reference(s)

TS 25.321 clause 11.8.1.4

#### 7.1.6.2.9.3 Test purpose

The purpose of this test case is to verify that the UE applies different HARQ profiles from different MAC-d flows to E-DCH transmissions accordingly and in case data from two MAC-d flows is transmitted in the same E-DCH transmission, the UE selects the correct power offset.

#### 7.1.6.2.9.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4d using condition A15 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the testcase | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| E-DCH MAC-d flow multiplexing list for MAC-d flow 2 | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| E-DCH MAC-d flow multiplexing list for MAC-d flow 3 | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| Power offset for MAC-d flow 2 | 3dB (see 25.331 subclause 10.3.5.1b) |
| Power offset for MAC-d flow 3 | 0dB (see 25.331 subclause 10.3.5.1b) |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB 25 and RB17.

### Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) SS has not issued any scheduling grant for E-DCH to the UE.

b) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

c) SS waits until an SI is received.

d) The SS issues primary absolute grant corresponding to 1 RLC PDU of size 41 octets per TTI when the Mac-d flow power offset is 3dB (signalling value 5), with Absolute Grant Scope set as "All HARQ processes".

e) SS starts receiving loop backed RLC PDU’s.

f) The SS issues primary absolute grant corresponding to “ZERO GRANT”, with Absolute Grant Scope set as "All HARQ processes".

g) SS transmits 4 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2.

h) SS waits until an SI is received.

i) The SS issues primary absolute grant corresponding to 2 RLC PDUs of size 41 octets per TTI when the Mac-d flow power offset is 0dB (signalling value 5), with Absolute Grant Scope set as "All HARQ processes".

j) SS starts receiving loop backed RLC PDU’s.

k) The SS issues primary absolute grant corresponding to “ZERO GRANT”, with Absolute Grant Scope set as "All HARQ processes".

l) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2.

m) SS waits until an SI is received.

n) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

o) SS waits until an SI is received.

p) The SS issues primary absolute grant corresponding to 3 RLC PDUs of size 41 octets per TTI when the Mac-d flow power offset is 3dB (signalling value 9), with Absolute Grant Scope set as "All HARQ processes".

q) SS starts receiving loop backed RLC PDU's.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 2 RLC PDUs on LCH 1 | |
| 2 | → | | SI indicating data on LCH 1 | |
| 3 | ← | | Primary Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 5 |
| 4 | → | | MAC es PDU containing 1 RLC SDU from LCH 1 | This step is repeated until all the RLC SDUs are transmitted |
| 5 | ← | | Primary Absolute grant set to 'ZERO GRANT' and scope 'All HARQ Processes' | |
| 6 | ← | | 4 RLC PDUs on LCH 2 | |
| 7 | → | | SI indicating data on LCH 2 | |
| 8 | ← | | Primary Absolute grant allowing the UE to transmit 2 RLC PDU per TTI | Signalling value 5 |
| 9 | → | | MAC es PDU containing 2 RLC SDU from LCH 2 | This step is repeated until all the RLC SDUs are transmitted |
| 10 | ← | | Primary Absolute grant set to 'ZERO GRANT' and scope 'All HARQ Processes' | |
| 11 | ← | | 2 RLC PDUs on LCH 2 | |
| 12 | → | | SI indicating data on LCH 2 | |
| 13 | ← | | 2 RLC PDUs on LCH 1 | |
| 14 | → | | SI indicating data on LCH 1 | |
| 15 | ← | | Primary Absolute grant allowing the UE to transmit 3 RLC PDUs per TTI | Signalling value 9 |
| 16 | → | | MAC es PDU containing 2 RLC PDU's from LCH 1 and MAC es PDU containing 1 RLC PDU from LCH 2 | |
| 17 | → | | MAC es PDU containing 1 RLC PDU from LCH 2 | |

Specific Message Contents

None

#### 7.1.6.2.9.5 Test requirements

1. In step 4, UE shall loop back PDUs for two TTIs, with one RLC PDU per TTI.
2. In step 9, UE shall loop back PDUs for two TTIs, with two RLC PDUs per TTI.
3. In step 16, UE shall loop back PDUs for one TTI, with three RLC PDU per TTI (2 RLC PDU's from LCH1 and 1 RLC PDU from LCH 2).
4. In step 17, UE shall loop back PDU for one TTI, with one RLC PDU per TTI (1 RLC PDU from LCH 2).

### 7.1.6.2.9a MAC-es/e Correct handling of HARQ profile (1.28Mcps TDD)

#### 7.1.6.2.9a.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.2.9a.2 Conformance requirement

In TDD, rules for E-TFC selection shall be applied as provided below.

UEs shall apply E-TFC selection when invoked by the HARQ entity (see subclause 11.9.1.1.1).

For each MAC-d flow, RRC configures MAC-e with a HARQ profile and multiplexing list. Additionally, RRC configures MAC with a power offset in case the Scheduling Information needs to be transmitted without any higher-layer data. For 1.28 Mcps TDD, RRC also configures MAC with a retransmission timer and the maximum number of HARQ transmissions in case the Scheduling Information needs to be transmitted without any higher-layer data. The HARQ profile includes the power offset and maximum number of HARQ transmissions to use for this MAC-d flow.

For 1.28 Mcps TDD, the HARQ profile also includes a retransmission timer attribute.The multiplexing list identifies for each MAC-d flow(s), the other MAC-d flows for which data can be multiplexed in a transmission that uses the power offset included in its HARQ profile.

RRC can control the scheduling of uplink data by giving each logical channel a priority between 1 and 8, where 1 is the highest priority and 8 the lowest. E-TFC selection in the UE shall be done in accordance with the priorities indicated by RRC. Logical channels have absolute priority, i.e. the UE shall maximise the transmission of higher priority data.

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays.

The UE shall determine whether to take scheduled or non-scheduled grants into account in the upcoming transmission. If neither are supposed to be taken into account (i.e. the TTI is not available for non-scheduled transmission and no Grant for scheduled transmission has been received) then no grant shall be assumed to exist. If a grant exists then the transmission format and data allocation shall follow the requirements below.

For each configured MAC-d flow, a given E-TFC can be in any of the following states:

- Supported state;
- Blocked state.

The E-TFC states are derived according to the following:

- If the transmission is a retransmission then only the E-TFC with the same block size as the original transmission may be in the supported state.
- For 1.28Mcps TDD, only E-TFCs from the E-TFCS (the table of TB sizes) which are consistent with the UE's E-DCH capability category shall be considered for the transmission;
- Only E-TFCs from the E-TFCS (the table of TB sizes) which can be supported by (exactly) the number of slots assigned by the grant shall be considered for the transmission;
- Only E-TFCs which result (for the granted timeslot and code physical resources) in a coderate lying between the maximum and minimum (inclusive) allowable coderates set by RRC [7] shall be considered for the transmission {note: the definition of the term “coderate” as used here is the same as that provided by [18]}. This shall be evaluated for both QPSK and 16-QAM modulation;
- $P_{HARQ}$, the HARQ profile power offset is selected (for 3.84/7.68Mcps TDD the HARQ profile for the transmission shall be selected among the HARQ profiles of MAC-d flows on which the highest priority logical channels with available data are mapped, for 1.28Mcps TDD the HARQ power offset shall be set to the maximum of HARQ power offset of all the MAC-d flows mapped to the same type of resource (scheduled or non-scheduled resource); Scheduling Information power offset shall be used when Scheduling Information is transmitted without any higher-layer data.)
- Only E-TFCs whose calculated transmission power requirement $P_{E\text{-}PUCH}$ (see [18]) is less than or equal to both the available and the granted power shall be considered for the transmission (note: this requirement does not apply in the case of a retransmission on non-scheduled resources). For TDD, the smallest E-TFC is considered always in the supported state. The granted power is defined as the calculated E-PUCH transmission power of [18] with $\beta_e$ = (Absolute Grant Value + $\alpha_e$). The available power is the maximum UE transmission power.

From those E-TFCs in the supported state the UE determines the largest block size that it is permitted to transmit within the given constraints.

The UE shall select the modulation type associated with the determined E-TFC (note: if an E-TFC is supported by both QPSK and 16-QAM then 16-QAM modulation shall be used if its power requirement ($P_{E\text{-}PUCH}$) is lower than the power requirement for QPSK, otherwise QPSK modulation shall be used).

Data allocation shall then be performed in accordance with the following:

- For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the corresponding non-scheduled grant. If the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the Serving Grant;
- The data allocation shall maximise the transmission of higher priority data;

- The UE shall select the E-TFC, SF and modulation which minimises the power used (3.84/7.68 Mcps TDD only);

- The UE shall select the E-TFC and modulation which minimises the power used (1.28 Mcps TDD only);

Once an appropriate E-TFC and data allocation are found according to the rules above, the "Multiplexing and TSN Setting" entity shall generate the corresponding MAC-e PDU.

In 1.28Mcps TDD, when Scheduling Information is triggered by timer per subclause 11.9.1.5, the E-TFC selection and data-allocation process shall assume that Scheduling Information has a priority higher than any other logical channel.

The E-TFC selection function shall provide this MAC-e PDU and transmission HARQ profile to the HARQ entity. For 3.84Mcps TDD and 7.68Mcps TDD the selected E-TFC is also provided (Note: for 1.28Mcps TDD, the signalled transport block size index, i.e. E-TFCI, is the index of the selected E-TFC in the candidate set.). The maximum number of HARQ transmissions and the power offset in this profile shall be set respectively to the maximum of both the Max Number of HARQ Transmissions and of the power offset of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission. For 1.28 Mcps TDD, the maximum number of HARQ transmissions shall be set to the maximum of the Max Number of HARQ Transmissions of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission, the HARQ power offset shall be set to the maximum of HARQ power offset of all the MAC-d flows mapped to the same type of resource (scheduled or non-scheduled resource), and the retransmission timer shall be set to the maximum of the retransmission timer value of the HARQ profiles that are permitted to be multiplexed into the transmission. For 1.28Mcps TDD, when the Scheduling Information needs to be transmitted without any higher-layer data, the specific HARQ profile should be applied. Each HARQ process which is associated with a buffer holding a MAC-e PDU for potential retransmission shall maintain the HARQ profile and the number of re-transmissions that have occurred. For 1.28 Mcps TDD, the HARQ process shall also maintain the value of RTX_TIMER.

Further information on E-TFC selection is provided in Annex CA.

Reference(s)

TS 25.321 clause 11.9.1.4

### 7.1.6.2.9a.3 Test purpose

The purpose of this test case is to verify that the UE applies different HARQ profiles from different MAC-d flows to E-DCH transmissions.

### 7.1.6.2.9a.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.5.4.7.7 using condition A14 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the testcase | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| E-DCH MAC-d flow multiplexing list for MAC-d flow 2 | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| E-DCH MAC-d flow multiplexing list for MAC-d flow 3 | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| Power offset for MAC-d flow 2 | 3dB (see 25.331 subclause 10.3.5.1b) |
| Power offset for MAC-d flow 3 | 0dB (see 25.331 subclause 10.3.5.1b) |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB 25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) SS has not issued any scheduling grant for E-DCH to the UE.

b) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

c) SS waits until an SI is received.

d) The SS issues primary absolute grant corresponding to 1 RLC PDU of size 41 octets per TTI.

e) SS starts receiving loop backed RLC PDU's.

f) SS transmits 4 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2.

g) SS waits until an SI is received.

h) The SS issues primary absolute grant corresponding to 2 RLC PDUs of size 41 octets per TTI.

i) SS starts receiving loop backed RLC PDU's.

j) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2.

k) SS waits until an SI is received.

l) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

m) SS waits until an SI is received.

n) The SS issues primary absolute grant corresponding to 3 RLC PDUs of size 41 octets per TTI.

o) SS starts receiving loop backed RLC PDU's.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 2 RLC PDUs on LCH 1 | |
| 2 | → | | SI indicating data on LCH 1 | |
| 3 | ← | | Primary Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | |
| 4 | → | | MAC es PDU containing 1 RLC SDU from LCH 1 | This step is repeated until all the RLC SDUs are transmitted |
| 5 | ← | | 4 RLC PDUs on LCH 2 | |
| 6 | → | | SI indicating data on LCH 2 | |
| 7 | ← | | Primary Absolute grant allowing the UE to transmit 2 RLC PDU per TTI | |
| 8 | → | | MAC es PDU containing 2 RLC SDU from LCH 2 | This step is repeated until all the RLC SDUs are transmitted |
| 9 | ← | | 2 RLC PDUs on LCH 2 | |
| 10 | → | | SI indicating data on LCH 2 | |
| 11 | ← | | 2 RLC PDUs on LCH 1 | |
| 12 | → | | SI indicating data on LCH 1 | |
| 13 | ← | | Primary Absolute grant allowing the UE to transmit 3 RLC PDUs per TTI | |
| 14 | → | | MAC es PDU containing 2 RLC PDU's from LCH 1 and MAC es PDU containing 1 RLC PDU from LCH 2 | |
| 15 | → | | MAC es PDU containing 1 RLC PDU from LCH 2 | |

Specific Message Contents

None

#### 7.1.6.2.9a.5 Test requirements

1. In step 4, UE shall loop back PDUs for two TTIs, with one RLC PDU per TTI.
2. In step 9, UE shall loop back PDUs for two TTIs, with two RLC PDUs per TTI.
3. In step 16, UE shall loop back PDUs for one TTI, with three RLC PDU per TTI (2 RLC PDU's from LCH1 and 1 RLC PDU from LCH 2).
4. In step 17, UE shall loop back PDU for one TTI, with one RLC PDU per TTI (1 RLC PDU from LCH 2).

### 7.1.6.2.10 MAC-es/e Correct handling of minimum set of E-TFCI

#### 7.1.6.2.10.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.2.10.2 Conformance requirement

In FDD mode, the rules for E-TFC selection provided below shall apply to UEs in CELL_DCH state with an E-DCH transport channel configured. These UEs shall apply the E-TFC selection procedure when invoked by the HARQ entity (see subclause 11.8.1.1.1). In the case where a 2ms TTI is configured, E-TFC selection shall not be performed for TTIs that overlap with an uplink compressed mode gap. The E-TFC restriction procedure described in [12] shall always be applied before the E-TFC selection process below. Furthermore, for UEs that are also configured with a DCH transport channel on uplink, the TFC selection procedure shall be applied before either of these.

For each MAC-d flow, RRC configures MAC with a HARQ profile and a multiplexing list. Additionally, RRC configures MAC with a power offset for "Control-only" transmissions. This power offset and a maximum number of HARQ transmissions of 8 will be used to define a HARQ profile for "Control-only" transmissions which will be used, in case the Scheduling Information needs to be transmitted without any higher-layer data. The HARQ profile includes the power offset and maximum number of HARQ transmissions to use for this MAC-d flow. The multiplexing list identifies for each MAC-d flow(s), the other MAC-d flows from which data can be multiplexed in a transmission that uses the power offset included in its HARQ profile.

RRC can control the scheduling of uplink data by giving each logical channel a priority between 1 and 8, where 1 is the highest priority and 8 the lowest. E-TFC selection in the UE shall be done in accordance with the priorities indicated by RRC. Logical channels have absolute priority, i.e. the UE shall maximise the transmission of higher priority data.

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays. When a 2ms TTI is configured each non-scheduled grant is applicable to the specific set of HARQ processes indicated by RRC. The applicability of scheduled grants can be also restricted to a specific set of HARQ processes when a 2ms TTI is configured. HARQ process restriction and reservation is under the control of the serving cell Node B and indicated to the UE by RRC.

For each configured MAC-d flow, a given E-TFC can be in any of the following states:

- Supported state;
- Blocked state.

At each TTI boundary, UEs in CELL_DCH state with an E-DCH transport channel configured shall determine the state of each E-TFC for every MAC-d flow configured based on its required transmit power versus the maximum UE transmit power (see [7] and [12]). If no DCH transport channel is configured or if a DCH transport channel is configured and the selected TFC is "empty" (see [3]), the UE shall consider that E-TFCs included in the minimum set of E-TFCs are always in supported state (see [7]).

At every TTI boundary for which a new transmission is requested by the HARQ entity (see subclause 11.8.1.1.1), the UE shall perform the operations described below. UEs configured both with DCH and E-DCH transport channels shall perform TFC selection before performing E-TFC selection.

The Serving Grant Update function provides the E-TFC selection function with the maximum E-DPDCH to DPCCH power ratio that the UE is allowed to allocate for the upcoming transmission for scheduled data (held in the Serving Grant state variable – see subclause 11.8.1.3).

The HARQ process ID for the upcoming transmission is determined using the following formulae:

- For 2ms TTI: CURRENT_HARQ_PROCESS_ID = [5*CFN + subframe number] **mod** HARQ_RTT
- For 10ms TTI: CURRENT_HARQ_PROCESS_ID = [CFN] **mod** HARQ_RTT

Based on this current HARQ process ID and the RRC configuration, the UE shall determine whether to take the scheduled and non-scheduled grants into account in the upcoming transmission. If they are not supposed to be taken into account, then the corresponding grant shall be assumed to not exist. If the variable Serving_Grant has the value "Zero_Grant" after the Serving Grant Update, then the Serving Grant shall not be taken into account in the upcoming transmission.

When Scheduling Information is triggered per subclause 11.8.1.6, the E-TFC selection and data-allocation process shall assume that a non-scheduled grant is available for its transmission and that Scheduling Information has a priority higher then any other logical channel. Furthermore the HARQ process used for the upcoming transmission shall be assumed to be active and not L3 restricted for the transmission of the Scheduling Information, i.e. transmission of Scheduling Information can take place on this process.

The transmission format and data allocation shall follow the requirements below:

- Only E-TFCs from the configured E-TFCS shall be considered for the transmission;
- For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the corresponding non-scheduled grant, if the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the Serving Grant;
- The power offset for the transmission is the one from the HARQ profile of the MAC-d flow that allows highest-priority data to be transmitted. If more than one MAC-d flow allows data of the same highest priority to be transmitted, it is left to implementation to select which MAC-d flow to prefer);
- In case the variable Serving_Grant has the value "Zero_Grant" after the Serving Grant Update function and there is no data available for MAC-d flows for which non-scheduled grants were configured and the transmission of Scheduling Information has been triggered, the "Control-only" HARQ profile configured by the higher layers shall be used.
- The Nominal Power Offset shall be set to the power offset included in the transmission HARQ profile;

- The data allocation shall maximize the transmission of higher priority data;
- The amount of data from MAC-d flows for which non-scheduled grants were configured shall not exceed the value of the non-scheduled grant;
- If a 10ms TTI is configured and the TTI for the upcoming transmission overlaps with a compressed mode gap, the Serving_Grant provided by the Serving Grant Update function shall be scaled back as follows:

$$SG' = SG * (\frac{N_C}{15})$$

where SG' represents the modified serving grant considered by the E-TFC selection algorithm and $N_C$ represents the number of non DTX slots in the compressed TTI;

- When not in a power limited condition the maximum amount of data from MAC-d flows for which no non-scheduled grants were configured shall be quantized to the next smaller supported E-TFC based on the Serving Grant (after adjustment for compressed frames), the power offset from the selected HARQ profile, the non-scheduled grants (if any) and Scheduling Information (if any); In the case a 2ms TTI is configured and the HARQ process is inactive, the UE shall not include any such data in the transmission;
- The Scheduling Information is always sent when triggered;
- Only E-TFCs in supported state shall be considered;
- The E-TFC resulting in the smallest amount of padding for the selected MAC-es PDUs and corresponding MAC-e/es headers, shall be selected including the case when the Scheduling Information needs to be transmitted.

Once an appropriate E-TFC and data allocation are found according to the rules above, the "Multiplexing and TSN Setting" entity shall generate the corresponding MAC-e PDU.

The E-TFC selection function shall provide this MAC-e PDU and transmission HARQ profile to the HARQ entity. The maximum number of HARQ transmissions and the power offset in this profile, shall be set respectively to the maximum of the Max Number of HARQ Transmissions of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission and to the Nominal Power Offset. The HARQ entity shall also be informed of whether the transmission includes Scheduling Information and whether this information is sent by itself or with higher-layer data.

Reference(s)

TS 25.321 clause 11.8.1.4

#### 7.1.6.2.10.3 Test purpose

The purpose of this test case is to verify that the UE considers the minimum set of E-TFCI as always supported.

#### 7.1.6.2.10.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4c using condition A12 as specified in clause 9.1 of TS 34.108. The following parameters are specific for this test case:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Minimum set of E-TFCI | 31 (see 25.331 subclause 10.3.6.99) |
| Maximum allowed UL TX power | 33dBm |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Test procedure

In this test procedure The UE is configured with one logical channel, with Id 7 (LCH 1).

a) SS has not issued any scheduling grant for E-DCH to the UE.

b) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

c) SS waits until an SI is received.

d) The SS issues primary absolute grant corresponding to 2 RLC PDUs of size 41 octets per TTI (signalling value 5), with Absolute Grant Scope set as "All HARQ process".

e) SS starts receiving loop backed RLC PDU's.

f) The SS issues primary absolute grant corresponding to "ZERO GRANT", with Absolute Grant Scope set as "All HARQ processes".

g) The SS performs a physical channel reconfiguration setting the "Maximum allowed UL TX power" to a small enough value that not even a single PDU is supported due to insufficient available power. Note: Due to the configured "Minimum set of E-TFCI" of 31, the UE should send a single PDU anyway.

h) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

i) SS waits until an SI is received.

j) The SS issues primary absolute grant corresponding to 2 RLC PDUs of size 41 octets per TTI (signalling value 5), with Absolute Grant Scope set as "All HARQ process".

k) SS starts receiving loop backed RLC PDU's.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 2 RLC PDUs on LCH 1 | |
| 2 | → | | SI indicating data on LCH 1 | |
| 3 | ← | | Primary Absolute grant allowing the UE to transmit 2 RLC PDU per TTI | Signalling value 5 |
| 4 | → | | MAC es PDU containing 2 RLC PDU's from LCH 1 | |
| 5 | ← | | Primary Absolute grant set to 'ZERO GRANT' and scope 'All HARQ Processes' | |
| 6 | ← | | SS performs a physical channel reconfiguration | The "Maximum allowed UL TX power" is reduced such that E-TFCI 31 is not supported anymore |
| 7 | ← | | 2 RLC PDUs on LCH 1 | |
| 8 | → | | SI indicating data on LCH 1 | |
| 9 | ← | | Primary Absolute grant allowing the UE to transmit 2 RLC PDU per TTI | Signalling value 5 |
| 10 | → | | MAC es PDU containing 1 RLC PDUs from LCH 1 | This step is repeated until the all RLC SDUs are transmitted |

Specific Message Contents

None

7.1.6.2.10.5 Test requirements

1. In step 4, UE shall start sending loop backed PDU, with two RLC PDUs per TTI.

2. In step 10, UE shall start sending loop backed PDU, with one RLC PDU per TTI.

### 7.1.6.2.10a Smallest E-TFC (1.28Mcps TDD)

#### 7.1.6.2.10a.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.2.10a.2 Conformance requirement

In TDD, rules for E-TFC selection shall be applied as provided below.

UEs shall apply E-TFC selection when invoked by the HARQ entity (see subclause 11.9.1.1.1).

For each MAC-d flow, RRC configures MAC-e with a HARQ profile and multiplexing list. Additionally, RRC configures MAC with a power offset in case the Scheduling Information needs to be transmitted without any higher-layer data. For 1.28 Mcps TDD, RRC also configures MAC with a retransmission timer and the maximum number of HARQ transmissions in case the Scheduling Information needs to be transmitted without any higher-layer data. The HARQ profile includes the power offset and maximum number of HARQ transmissions to use for this MAC-d flow. For 1.28 Mcps TDD, the HARQ profile also includes a retransmission timer attribute.The multiplexing list identifies for each MAC-d flow(s), the other MAC-d flows for which data can be multiplexed in a transmission that uses the power offset included in its HARQ profile.

RRC can control the scheduling of uplink data by giving each logical channel a priority between 1 and 8, where 1 is the highest priority and 8 the lowest. E-TFC selection in the UE shall be done in accordance with the priorities indicated by RRC. Logical channels have absolute priority, i.e. the UE shall maximise the transmission of higher priority data.

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays.

The UE shall determine whether to take scheduled or non-scheduled grants into account in the upcoming transmission. If neither are supposed to be taken into account (i.e. the TTI is not available for non-scheduled transmission and no Grant for scheduled transmission has been received) then no grant shall be assumed to exist. If a grant exists then the transmission format and data allocation shall follow the requirements below.

For each configured MAC-d flow, a given E-TFC can be in any of the following states:

- Supported state;
- Blocked state.

The E-TFC states are derived according to the following:

- If the transmission is a retransmission then only the E-TFC with the same block size as the original transmission may be in the supported state.
- For 1.28Mcps TDD, only E-TFCs from the E-TFCS (the table of TB sizes) which are consistent with the UE's E-DCH capability category shall be considered for the transmission;
- Only E-TFCs from the E-TFCS (the table of TB sizes) which can be supported by (exactly) the number of slots assigned by the grant shall be considered for the transmission;
- Only E-TFCs which result (for the granted timeslot and code physical resources) in a coderate lying between the maximum and minimum (inclusive) allowable coderates set by RRC [7] shall be considered for the transmission {note: the definition of the term “coderate” as used here is the same as that provided by [18]}. This shall be evaluated for both QPSK and 16-QAM modulation;
- $P_{HARQ}$, the HARQ profile power offset is selected (for 3.84/7.68Mcps TDD the HARQ profile for the transmission shall be selected among the HARQ profiles of MAC-d flows on which the highest priority logical channels with available data are mapped, for 1.28Mcps TDD the HARQ power offset shall be set to the maximum of HARQ power offset of all the MAC-d flows mapped to the same type of resource (scheduled or non-scheduled resource); Scheduling Information power offset shall be used when Scheduling Information is transmitted without any higher-layer data.)
- Only E-TFCs whose calculated transmission power requirement $P_{E\text{-}PUCH}$ (see [18]) is less than or equal to both the available and the granted power shall be considered for the transmission (note: this requirement does not

apply in the case of a retransmission on non-scheduled resources). For TDD, the smallest E-TFC is considered always in the supported state. The granted power is defined as the calculated E-PUCH transmission power of [18] with $\beta_e$ = (Absolute Grant Value + $\alpha_e$). The available power is the maximum UE transmission power.

From those E-TFCs in the supported state the UE determines the largest block size that it is permitted to transmit within the given constraints.

The UE shall select the modulation type associated with the determined E-TFC (note: if an E-TFC is supported by both QPSK and 16-QAM then 16-QAM modulation shall be used if its power requirement ($P_{E\text{-}PUCH}$) is lower than the power requirement for QPSK, otherwise QPSK modulation shall be used).

Data allocation shall then be performed in accordance with the following:

- For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the corresponding non-scheduled grant. If the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the Serving Grant;

- The data allocation shall maximise the transmission of higher priority data;

- The UE shall select the E-TFC, SF and modulation which minimises the power used (3.84/7.68 Mcps TDD only);

- The UE shall select the E-TFC and modulation which minimises the power used (1.28 Mcps TDD only);

Once an appropriate E-TFC and data allocation are found according to the rules above, the "Multiplexing and TSN Setting" entity shall generate the corresponding MAC-e PDU.

In 1.28Mcps TDD, when Scheduling Information is triggered by timer per subclause 11.9.1.5, the E-TFC selection and data-allocation process shall assume that Scheduling Information has a priority higher than any other logical channel.

The E-TFC selection function shall provide this MAC-e PDU and transmission HARQ profile to the HARQ entity. For 3.84Mcps TDD and 7.68Mcps TDD the selected E-TFC is also provided (Note: for 1.28Mcps TDD, the signalled transport block size index, i.e. E-TFCI, is the index of the selected E-TFC in the candidate set.). The maximum number of HARQ transmissions and the power offset in this profile shall be set respectively to the maximum of both the Max Number of HARQ Transmissions and of the power offset of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission. For 1.28 Mcps TDD, the maximum number of HARQ transmissions shall be set to the maximum of the Max Number of HARQ Transmissions of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission, the HARQ power offset shall be set to the maximum of HARQ power offset of all the MAC-d flows mapped to the same type of resource (scheduled or non-scheduled resource), and the retransmission timer shall be set to the maximum of the retransmission timer value of the HARQ profiles that are permitted to be multiplexed into the transmission. For 1.28Mcps TDD, when the Scheduling Information needs to be transmitted without any higher-layer data, the specific HARQ profile should be applied. Each HARQ process which is associated with a buffer holding a MAC-e PDU for potential retransmission shall maintain the HARQ profile and the number of re-transmissions that have occurred. For 1.28 Mcps TDD, the HARQ process shall also maintain the value of RTX_TIMER.

Further information on E-TFC selection is provided in Annex CA.

Reference(s)

TS 25.321 clause 11.9.1.4

### 7.1.6.2.10a.3 Test purpose

The purpose of this test case is to verify that the UE considers the smallest E-TFC as always supported.

### 7.1.6.2.10a.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.5.4.7.6 using condition A11 as specified in clause 9.1 of TS 34.108. The following parameters are specific for this test case:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Maximum allowed UL TX power | 33dBm |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Test procedure

In this test procedure The UE is configured with one logical channel, with Id 7 (LCH 1).

a) SS has not issued any scheduling grant for E-DCH to the UE.

b) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

c) SS waits until an SI is received.

d) The SS issues primary absolute grant corresponding to 2 RLC PDUs of size 41 octets per TTI.

e) SS starts receiving loop backed RLC PDU's.

f) The SS performs a physical channel reconfiguration setting the "Maximum allowed UL TX power" to a small enough value that not even a single PDU is supported due to insufficient available power.

g) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

h) SS waits until an SI is received.

i) The SS issues primary absolute grant corresponding to 2 RLC PDUs of size 41 octets per TTI (.

j) SS starts receiving loop backed RLC PDU's.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 2 RLC PDUs on LCH 1 | |
| 2 | → | | SI indicating data on LCH 1 | |
| 3 | ← | | Primary Absolute grant allowing the UE to transmit 2 RLC PDU per TTI | |
| 4 | → | | MAC es PDU containing 2 RLC PDU's from LCH 1 | |
| 5 | ← | | SS performs a physical channel reconfiguration | The "Maximum allowed UL TX power" is reduced such that any E-TFC is not supported anymore |
| 6 | ← | | 2 RLC PDUs on LCH 1 | |
| 7 | → | | SI indicating data on LCH 1 | |
| 8 | ← | | Primary Absolute grant allowing the UE to transmit 2 RLC PDU per TTI | |
| 9 | → | | MAC es PDU containing 1 RLC PDUs from LCH 1 | This step is repeated until the all RLC SDUs are transmitted |

Specific Message Contents

None

### 7.1.6.2.10a.5 Test requirements

1. In step 4, UE shall start sending loop backed PDU, with two RLC PDUs per TTI.

2. In step 9, UE shall start sending loop backed PDU, with one RLC PDU per TTI.

### 7.1.6.2.11 MAC-es/e correct handling of absolute and relative grants in discontinuous downlink reception operation

#### 7.1.6.2.11.1 Definition and applicability

All UEs which support DPCCH Discontinuous Transmission and Discontinuous Downlink Reception operation.

#### 7.1.6.2.11.2 Conformance requirement

From TS 25.321 clause 11.8.1.3.1

The Serving Grant Update procedure shall be applied at every TTI boundary and shall take into account the Absolute Grant message, Serving Relative Grant and non-serving Relative Grants that apply to the TTI.

The UE shall:

1> set reference_ETPR to the E-DPDCH to DPCCH power ratio as defined in subclause 3.1.2;

1> if an Absolute Grant was received for this TTI:

2> if the Identity type is "Primary", and the Absolute Grant value is set to "INACTIVE":

3> if Absolute Grant Scope indicates "Per HARQ process" and a 2ms TTI is configured:

4> de-activate the process given by the value of CURRENT_HARQ_PROCESS.

3> if Absolute Grant Scope indicates "All HARQ processes" and a secondary E-RNTI was configured by higher layers:

4> activate all HARQ processes;

4> set Serving_Grant = Stored_Secondary_Grant;

4> set Primary_Grant_Available to "False".

3> if Absolute Grant Scope indicates "All HARQ processes", a 2ms TTI is configured and a secondary E-RNTI was not configured by higher layers:

4> deactivate all HARQ processes (if a process was inactive it remains inactive, if a process was active it becomes inactive).

2> else if the Absolute Grant Value is different from "INACTIVE":

3> if the Identity Type is "Secondary":

4> set Stored_Secondary_Grant = Absolute Grant Value.

3> if the Identity Type is "Primary" or Primary_Grant_Available is set to "False":

4> set Serving_Grant = Absolute Grant Value.

4> if the Identity Type is "Primary":

5> set Primary_Grant_Available to "True";

5> if Absolute Grant Scope indicates "Per HARQ process":

6> activate the process given by the value of CURRENT_HARQ_PROCESS.

5> if Absolute Grant Scope indicates "All HARQ processes":

6> activate all HARQ processes.

5> if AG_Timer is not active, it shall be started, otherwise it shall be restarted.

1> else (no Absolute Grant received):

2> if the HARQ process given by the value of CURRENT_HARQ_PROCESS is active; and

2> if Primary_Grant_Available is equal to "True"; and

2> if Serving_Grant <> "Zero_Grant" ; and

2> if AG_Timer has expired; and

2> if there was a scheduled transmission (see NOTE) in the previous TTI of the HARQ process given by the value of CURRENT_HARQ_PROCESS:

3> if the Serving Relative Grant indicates "UP":

4> determine the Serving_Grant in accordance with subclause 9.2.5.2.1.

3> else, if the Serving Relative Grant indicates "DOWN":

4> determine the Serving_Grant in accordance with subclause 9.2.5.2.1.

3> else:

4> the Serving_Grant is unchanged (i.e. kept from previous TTI).

1> if any Non-Serving Relative Grants indicate "DOWN" for this TTI and Serving_Grant <> "Zero_Grant":

2> Serving_Grant = MIN(Serving_Grant, Maximum_Serving_Grant, Serving_Grant determined in accordance with subclause 9.2.5.2.1);

2> Maximum_Serving_Grant = Serving_Grant.

2> if Non_Serving_RG_Timer is not active it shall be started, otherwise it shall be restarted;

1> else if no Non-Serving Relative Grants indicate "DOWN" for this TTI:

2> if Non_Serving_RG_Timer has not expired:

3> Serving_Grant = MIN(Maximum_Serving_Grant, Serving_Grant).

1> if Non_Serving_RG_Timer expires:

2> set the Maximum_Serving_Grant to the highest possible value (i.e. index 37 in table 9.2.5.2.1.1 or 9.2.5.2.1.2 as configured by higher layers).

NOTE 1: MIN("Zero_Grant", any numerical value) = "Zero_Grant".

NOTE 2: Scheduling Information sent alone is not considered as a scheduled transmission.

From TS 25.321 clause 11.8.1.8

When the DRX feature is enabled by higher layers, and in addition to the conditions defined in subclause 6C.3 of [5] the downlink monitoring of E-AGCH and E-RGCH sets is required in the following conditions:

- At least one MAC-d flow is configured with a scheduled transmission and TEBS > 0 or;
- a scheduled E-DCH transmission has been performed in any of the *Inactivity Threshold for UE Grant Monitoring* previous TTIs or;
- the start of E-AGCH and E-RGCH commands overlap with an E-HICH corresponding to a scheduled E-DCH transmission.

From TS 25.214 clause 6C.3

When DL_DRX_Active is TRUE (see section 6C), the UE shall continue to receive F-DPCH as described in sub-clause 5.1 and the UE need not receive physical downlink channels other than the F-DPCH except for the following cases:

1. …
2. …

3. …

4. …

5. The UE shall monitor the full E-AGCH transmission from the serving E-DCH cell in the following cases:

   - If UE_DRX_Grant_Monitoring is TRUE and the start of the E-AGCH transmission overlaps with an HS-SCCH reception subframe as defined in the HS-SCCH reception pattern,

   - When conditions defined in subclause 11.8.1.8 of [6] are fulfilled.

6. The UE shall monitor the full E-RGCH transmissions from cells in the serving E-DCH radio link set in the following cases:

   - If UE_DRX_Grant_Monitoring is TRUE and the start of the E-RGCH transmission overlaps with an HS-SCCH reception subframe as defined in the HS-SCCH reception pattern,

   - When conditions defined in subclause 11.8.1.8 of [6] are fulfilled.

7. The UE shall monitor the full E-RGCH(s) from all the other cells in the E-DCH active set, except from the cells in the serving E-DCH radio link set as determined in subclause 11.8.1.8 of [6].

Reference(s)

TS 25.321 clauses 11.8.1.3.1 and 11.8.1.8

TS 25.214 clause 6C.3

#### 7.1.6.2.11.3 Test purpose

The purpose of this test case is to verify that when in discontinuous downlink reception operation, the UE monitors the E-AGCH and E-RGCH at the times specified in the core specifications.

#### 7.1.6.2.11.4 Method of test

Initial conditions

System Simulator:

2 cells, default parameters, Ciphering Off. Cell 1 and cell 2 belong to different RL sets.

User Equipment:

The SS establishes the reference radio bearer configuration Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / UM PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH as specified in TS 34.108, clause 6.11.4i.1. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |

Both cells 1 and 2 are in E-DCH active set. Cell 1 is the serving E-DCH cell. Cell 2 belongs to non serving Radio link set.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) |
| E-DCH TTI | 10 ms |
| Inactivity Threshold for UE Grant Monitoring | 0 |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to (10*41)-2 octets.

Test procedure

In this test procedure the UE is configured with one logical channel.

a) SS has not issued any scheduling grant for E-DCH to the UE, TEBS at the UE is 0 and there is no pending E-HICH corresponding to a previous scheduled E-DCH transmission.

b) SS has waited long enough for both SS and UE to go autonomously into DTX/DRX mode.

c) SS issues a primary absolute grant that allows the UE to send 2 RLC PDU's per TTI (signalling value 5), in a transmission that overlaps with an HS-SCCH reception subframe as defined in the HS-SCCH reception pattern.

d) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

e) SS starts receiving looped back PDU's and checks that UE has started using the serving grant corresponding to 2 RLC PDU's transmitted per TTI.

f) Void.

g) Within 1 HARQ-RTT of the TTI with the last scheduled E-DCH transmission, and in a transmission that overlaps with an HS-SCCH reception subframe as defined in the HS-SCCH reception pattern, SS sends a relative grant in cell 2 (non-serving) as 'Down'. (*Note)

h) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

i) SS starts receiving looped back PDU's and checks that UE has started using the serving grant corresponding to 1 RLC PDU transmitted per TTI, ie that it has acted on the 2 'Down' commands.

j) In a transmission overlapping with the E-HICH for the last transmitted PDU, but not overlapping with an HS-SCCH reception subframe as defined in the HS-SCCH reception pattern , SS issues a issues a primary absolute grant that allows the UE to send 2 RLC PDU's per TTI (signalling value 5).

k) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

l) SS starts receiving looped back PDU's and checks that UE has started using the serving grant corresponding to 2 RLC PDU's transmitted per TTI.

m) Void.

n) In a transmission overlapping with the E-HICH for the last transmitted PDU, but not overlapping with an HS-SCCH reception subframe as defined in the HS-SCCH reception pattern, SS issues a relative grant in cell 2 (non-serving) as 'Down'. (*Note)

o) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

p) SS starts receiving looped back PDU's and checks that UE has started using the serving grant corresponding to 1 RLC PDU transmitted per TTI.

q) SS waits until all data has been received.

r) SS removes the scheduling grant from the UE.

s) SS sends a Physical Channel Reconfiguration Message to the UE to change the value of 'Inactivity Threshold for UE Grant Monitoring' from 0 to 8 subframes.

t) UE sends a Physical Channel Reconfiguration Complete Message.

u) SS issues a primary absolute grant that allows the UE to send 1 RLC PDU per TTI (signalling value 4), in a transmission that overlaps with an HS-SCCH reception subframe as defined in the HS-SCCH reception pattern.

v) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

w) SS starts receiving looped back PDU's and checks that UE has started using the serving grant corresponding to 1 RLC PDU transmitted per TTI.

x) In up to 8 subframes of the TTI with the last scheduled E-DCH transmission, in a transmission that does not overlap with an HS-SCCH reception subframe as defined in the HS-SCCH reception pattern, SS issues a primary absolute grant that allows the UE to send 2 RLC PDU's per TTI (signalling value 5)

y) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

z) SS starts receiving looped back PDU's and checks that UE has started using the serving grant corresponding to 2 RLC PDU's transmitted per TTI.

aa) In up to 8 subframes of the TTI with the last scheduled E-DCH transmission, in a transmission that does not overlap with an HS-SCCH reception subframe as defined in the HS-SCCH reception pattern, SS issues relative grant in cell 2 (non-serving) as 'Down'. (*Note)

ab) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

ac) SS starts receiving looped back PDU's and checks that UE has started using the serving grant corresponding to 1 RLC PDU transmitted per TTI, ie that it has acted on the first primary grant followed by the 2 'Down' commands.

ad) SS waits for at least 8 subframes after the TTI of the last scheduled E-DCH transmission, then removes the scheduling grant from the UE.

ae) SS transmits 10 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

af) SS waits until an SI is received.

ag) SS issues a primary absolute grant that allows the UE to send 2 RLC PDU's per TTI (signalling value 5), in a transmission that does not overlap with an HS-SCCH reception subframe as defined in the HS-SCCH reception pattern.

ah) SS starts receiving looped back PDU's and checks that UE has started using the serving grant corresponding to 2 RLC PDU's transmitted per TTI.

*Note: The absolute grants issued in steps c, j and x with signalling value 5 result in $SG_{LUPR}$ corresponding to 19/15. One transmission of a 'Down' command will result in $SG_{LUPR}$ corresponding to 17/15, which is sufficient for 1 RLC PDU transmission only.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | Absolute grant allowing the UE to transmit 2 RLC PDUs per TTI | Signalling value 5<br>Overlapping with an HS-SCCH reception subframe |
| 2 | ← | | 10 RLC PDUs on LCH 1 | |
| 3 | → | | MAC es PDU containing more than one RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 4 | ← | | Void | |
| 5 | ← | | Within 1 HARQ-RTT of the last scheduled E-DCH transmission in Step 3, Relative Grant in cell 2 with 'DOWN' | Overlapping with an HS-SCCH reception subframe |
| 6 | ← | | 10 RLC PDUs on LCH 1 | |
| 7 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 8 | ← | | Absolute grant allowing the UE to transmit 2 RLC PDUs per TTI | Signalling value 5<br>Overlapping with E-HICH transmission for the last PDU sent in Step 6<br>Not overlapping with an HS-SCCH reception subframe |
| 9 | ← | | 10 RLC PDUs on LCH 1 | |
| 10 | → | | MAC es PDU containing more than one RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 11 | ← | | Void | |
| 12 | ← | | Relative Grant in cell 2 with 'DOWN' | Overlapping with E-HICH transmission for the last PDU sent in Step 10<br>Not overlapping with an HS-SCCH reception subframe |
| 13 | ← | | 10 RLC PDUs on LCH 1 | |
| 14 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 15 | | | Removal of scheduling grant for the UE | |
| 16 | ← | | Physical Channel Reconfiguration | ' Inactivity Threshold for UE Grant Monitoring' set to 8 frames |
| 17 | → | | Physical Channel Reconfiguration Complete | |
| 18 | ← | | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4<br>Overlapping with an HS-SCCH reception subframe |
| 19 | ← | | 10 RLC PDUs on LCH 1 | |
| 20 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 21 | | | In up to 8 subframes of the last scheduled E-DCH transmission in Step 20, absolute grant allowing the UE to transmit 2 RLC PDUs per TTI | Signalling value 5<br>Not overlapping with an HS-SCCH reception subframe |
| 22 | ← | | 10 RLC PDUs on LCH 1 | |
| 23 | → | | MAC es PDU containing more than one RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 24 | | | Void | |
| 25 | | | In up to 8 subframes of the last scheduled E-DCH transmission in Step 23, Relative Grant in cell 2 with 'DOWN' | Not overlapping with an HS-SCCH reception subframe |
| 26 | ← | | 10 RLC PDUs on LCH 1 | |
| 27 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |
| 28 | ← | | At least 8 subframes after the last scheduled E-DCH transmission in Step 27, removal of scheduling grant for the UE | |
| 29 | ← | | 10 RLC PDUs on LCH 1 | |
| 30 | → | | SI indicating data on LCH 1 | |
| 31 | ← | | Absolute grant allowing the UE to transmit 2 RLC PDUs per TTI | Signalling value 5<br>Not overlapping with an HS-SCCH reception subframe |

| | | | |
|---|---|---|---|
| 32 | → | MAC es PDU containing more than one RLC PDU from LCH 1 | This step is repeated until all RLC SDU's are received. |

Specific Message Contents

None

7.1.6.2.11.5 Test requirements

1. After step 2, UE will start sending 2 RLC PDU's per TTI.
2. After step 6, UE will start sending 1 RLC PDU per TTI.
3. After step 9, UE will start sending 2 RLC PDU's per TTI.
4. After step 13, UE will start sending 1 RLC PDU per TTI.
5. After step 19, UE will start sending 1 RLC PDU per TTI.
6. After step 22, UE will start sending 2 RLC PDU's per TTI.
7. After step 26, UE will start sending 1 RLC PDU per TTI.
8. After Step 31, UE will start sending 2 RLC PDU's per TTI.

## 7.1.6.3 MAC-es/e- E-TFC selection

### 7.1.6.3.1 MAC-es/e E-TFC priority

#### 7.1.6.3.1.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.3.1.2 Conformance requirement

Extract from TS 25.321 clause 11.8.1.4

[…]

RRC can control the scheduling of uplink data by giving each logical channel a priority between 1 and 8, where 1 is the highest priority and 8 the lowest. E-TFC selection in the UE shall be done in accordance with the priorities indicated by RRC. Logical channels have absolute priority, i.e. the UE shall maximise the transmission of higher priority data.

[…]

Extract from TS 25.321 clause 11.9.1.4

[…]

RRC can control the scheduling of uplink data by giving each logical channel a priority between 1 and 8, where 1 is the highest priority and 8 the lowest. E-TFC selection in the UE shall be done in accordance with the priorities indicated by RRC. Logical channels have absolute priority, i.e. the UE shall maximise the transmission of higher priority data.

[…]

Reference(s)

TS 25.321 clause 11.8.1.4, 11.9.1.4

#### 7.1.6.3.1.3 Test purpose

To verify that the UE transmits data in order of priority

7.1.6.3.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4d(FDD) /6.11.5.4.7.7(1.28Mcps TDD) using condition A15(FDD) /A14(1.28Mcps TDD) as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| NOTE: The RAB combination also include SRBs on E-DCH on MAC-d flow 1 which are not used in the test case | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) (FDD) |
| T-WAIT | 200 ms (see 25.331 10.3.6.103)( 1.28Mcps TDD) |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to (10*41)-2 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

c) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

d) The SS waits for an SI to be received that indicates that data is available on both logical channels (can be identified from the content of the SI)

e) The SS issues an absolute grant that allows the UE to send 1 RLC PDU per TTI (signalling value 4)

f) The SS verifies that the first TTIs only contains data from LCH1 which have a higher priority

g) The SS verifies that data on LCH2 is only transmitted after all the data on LCH1 has been looped back

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | ← | 1 RLC PDU on LCH 2 | |
| 2 | ← | 1 RLC PDU on LCH 1 | |
| 3 | → | Potential SI indicating data on LCH 2 | This SI is ignored by the SS |
| 4 | → | SI indicating that data is available for LCH 1 and LCH 2 | |
| 5 | ← | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 6 | → | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until the whole RLC SDU is transmitted |
| 7 | → | MAC es PDU containing 1 RLC PDU from LCH 2 | This step is repeated until the whole RLC SDU is transmitted |

Specific Message Contents

None

#### 7.1.6.3.1.5 Test requirements

1. In step 6, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU from LCH 1 in each TTI until the whole RLC SDU has been received.

2. In step 6, the SS verifies that no data is received on LCH 2 until all data on LCH 1 has been received

3. In step 7, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU from LCH 2 in each TTI until the whole RLC SDU has been received

### 7.1.6.3.2 MAC-es/e transport block size selection/ UL QPSK

#### 7.1.6.3.2.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.3.2.2 Conformance requirement

Extract from TS 25.321 clause 9.2.5.4

[…]

RRC can configure the MAC-e to use one of two Transport block size sets for each TTI duration. The normative description of the mapping between the E-TFC index and the corresponding transport block size is provided in Annex B:

- If the UE is configured with E-TFCI table 0 (see 3GPP TS 25.331) and 2ms TTI, it shall use the mapping defined in 3GPP TS 25.321 Annex B.1

- If the UE is configured with E-TFCI table 1 (see 3GPP TS 25.331) and 2ms TTI, it shall use the mapping defined in 3GPP TS 25.321 Annex B.2

- If the UE is configured with E-TFCI table 0 (see 3GPP TS 25.331) and 10ms TTI, it shall use the mapping defined in 3GPP TS 25.321 Annex B.3

- If the UE is configured with E-TFCI table 1 (see 3GPP TS 25.331) and 10ms TTI, it shall use the mapping defined in 3GPP TS 25.321 Annex B.4

[…]

Reference(s)

TS 25.321 clause 9.2.5.4

#### 7.1.6.3.2.3 Test purpose

To verify that the UE transmits all possible transport block sizes within the UE capability.

7.1.6.3.2.4 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-6 IE "E-DCH physical layer category". All UEs supporting E-DCH should signal a category between 1 and 6 for this IE even if the UE physical capability category is above 6.

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

UE in idle mode

The following parameters are specific for this test case:

Common for all UE HS-DSCH categories:

| Parameter | Value |
|---|---|
| MAC-d PDU size | 336 bits |
| MAC-hs receiver window size | 16 |
| Number of HARQ processes | 1 |
| Number of reordering queues | 1 |

Common for all UE E-DCH categories:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) |

Specific depending on E-DCH category:

| Parameter | E-DCH Category | Value |
|---|---|---|
| RLC Transmission window size | 1 to 5 | 512 |
| | 6 | 1536 |
| E-TFCI table | 1 to 6 | See table 7.1.6.3.2.5 |

Specific depending on HS-DSCH category:

| Parameter | HS-DSCH Category | Value |
|---|---|---|
| RLC Receiving window size | 1 to 6 | 512 |
| | 7 and 8 | 1536 |
| | 9 and 10 | 2047 |
| | 11 and 12 | 1024 |

The mapping between the chosen E-TFC index and the corresponding E-DCH transport block size is given in the following tables:

**Table 7.1.6.3.2.1 2ms TTI E-DCH Transport Block Size Table 0**

| TB Index | TB Size (bits) | TB Index | TB Size (bits) | TB Index | TB Size (bits) | TB Index | TB Size (bits) | TB Index | TB Size (bits) |
|---|---|---|---|---|---|---|---|---|---|

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 18 | 30 | 342 | 60 | 1015 | 90 | 3008 | 120 | 8913 |
| 1 | 120 | 31 | 355 | 61 | 1053 | 91 | 3119 | 121 | 9241 |
| 2 | 124 | 32 | 368 | 62 | 1091 | 92 | 3234 | 122 | 9582 |
| 3 | 129 | 33 | 382 | 63 | 1132 | 93 | 3353 | 123 | 9935 |
| 4 | 133 | 34 | 396 | 64 | 1173 | 94 | 3477 | 124 | 10302 |
| 5 | 138 | 35 | 410 | 65 | 1217 | 95 | 3605 | 125 | 10681 |
| 6 | 143 | 36 | 426 | 66 | 1262 | 96 | 3738 | 126 | 11075 |
| 7 | 149 | 37 | 441 | 67 | 1308 | 97 | 3876 | 127 | 11484 |
| 8 | 154 | 38 | 458 | 68 | 1356 | 98 | 4019 | | |
| 9 | 160 | 39 | 474 | 69 | 1406 | 99 | 4167 | | |
| 10 | 166 | 40 | 492 | 70 | 1458 | 100 | 4321 | | |
| 11 | 172 | 41 | 510 | 71 | 1512 | 101 | 4480 | | |
| 12 | 178 | 42 | 529 | 72 | 1568 | 102 | 4645 | | |
| 13 | 185 | 43 | 548 | 73 | 1626 | 103 | 4816 | | |
| 14 | 192 | 44 | 569 | 74 | 1685 | 104 | 4994 | | |
| 15 | 199 | 45 | 590 | 75 | 1748 | 105 | 5178 | | |
| 16 | 206 | 46 | 611 | 76 | 1812 | 106 | 5369 | | |
| 17 | 214 | 47 | 634 | 77 | 1879 | 107 | 5567 | | |
| 18 | 222 | 48 | 657 | 78 | 1948 | 108 | 5772 | | |
| 19 | 230 | 49 | 682 | 79 | 2020 | 109 | 5985 | | |
| 20 | 238 | 50 | 707 | 80 | 2094 | 110 | 6206 | | |
| 21 | 247 | 51 | 733 | 81 | 2172 | 111 | 6435 | | |
| 22 | 256 | 52 | 760 | 82 | 2252 | 112 | 6672 | | |
| 23 | 266 | 53 | 788 | 83 | 2335 | 113 | 6918 | | |
| 24 | 275 | 54 | 817 | 84 | 2421 | 114 | 7173 | | |
| 25 | 286 | 55 | 847 | 85 | 2510 | 115 | 7437 | | |
| 26 | 296 | 56 | 878 | 86 | 2603 | 116 | 7711 | | |
| 27 | 307 | 57 | 911 | 87 | 2699 | 117 | 7996 | | |
| 28 | 318 | 58 | 944 | 88 | 2798 | 118 | 8290 | | |
| 29 | 330 | 59 | 979 | 89 | 2901 | 119 | 8596 | | |

**Table 7.1.6.3.2.2 2ms TTI E-DCH Transport Block Size Table 1**

| TB Index | TB Size (bits) | TB Index | TB Size (bits) | TB Index | TB Size (bits) |
|---|---|---|---|---|---|
| 0 | 18 | 43 | 2724 | 86 | 7252 |
| 1 | 186 | 44 | 2742 | 87 | 7288 |
| 2 | 204 | 45 | 3042 | 88 | 7428 |
| 3 | 354 | 46 | 3060 | 89 | 7464 |
| 4 | 372 | 47 | 3078 | 90 | 7764 |
| 5 | 522 | 48 | 3298 | 91 | 7800 |
| 6 | 540 | 49 | 3316 | 92 | 7908 |
| 7 | 674 | 50 | 3334 | 93 | 7944 |
| 8 | 690 | 51 | 3378 | 94 | 8100 |
| 9 | 708 | 52 | 3396 | 95 | 8136 |
| 10 | 726 | 53 | 3414 | 96 | 8436 |
| 11 | 858 | 54 | 3732 | 97 | 8472 |
| 12 | 876 | 55 | 3750 | 98 | 8564 |
| 13 | 1026 | 56 | 3972 | 99 | 8600 |
| 14 | 1044 | 57 | 3990 | 100 | 8772 |
| 15 | 1062 | 58 | 4068 | 101 | 8808 |
| 16 | 1194 | 59 | 4086 | 102 | 9108 |
| 17 | 1212 | 60 | 4404 | 103 | 9144 |
| 18 | 1330 | 61 | 4422 | 104 | 9220 |

| | | | | | |
|---|---|---|---|---|---|
| 19 | 1348 | 62 | 4628 | 105 | 9256 |
| 20 | 1362 | 63 | 4646 | 106 | 9444 |
| 21 | 1380 | 64 | 4740 | 107 | 9480 |
| 22 | 1398 | 65 | 4758 | 108 | 9780 |
| 23 | 1530 | 66 | 5076 | 109 | 9816 |
| 24 | 1548 | 67 | 5094 | 110 | 9876 |
| 25 | 1698 | 68 | 5284 | 111 | 9912 |
| 26 | 1716 | 69 | 5302 | 112 | 10116 |
| 27 | 1734 | 70 | 5412 | 113 | 10152 |
| 28 | 1866 | 71 | 5430 | 114 | 10452 |
| 29 | 1884 | 72 | 5748 | 115 | 10488 |
| 30 | 1986 | 73 | 5766 | 116 | 10532 |
| 31 | 2004 | 74 | 5940 | 117 | 10568 |
| 32 | 2022 | 75 | 5958 | 118 | 10788 |
| 33 | 2034 | 76 | 6084 | 119 | 10824 |
| 34 | 2052 | 77 | 6102 | 120 | 11124 |
| 35 | 2070 | 78 | 6420 | 121 | 11178 |
| 36 | 2370 | 79 | 6438 | 122 | 11188 |
| 37 | 2388 | 80 | 6596 | 123 | 11242 |
| 38 | 2406 | 81 | 6614 | 124 | 11460 |
| 39 | 2642 | 82 | 6756 | 125 | 11478 |
| 40 | 2660 | 83 | 6774 | | |
| 41 | 2678 | 84 | 7092 | | |
| 42 | 2706 | 85 | 7110 | | |

**Table 7.1.6.3.2.3 10ms TTI E-DCH Transport Block Size Table 0**

| TB Index | TB Size (bits) | TB Index | TB Size (bits) | TB Index | TB Size (bits) | TB Index | TB Size (bits) | TB Index | TB Size (bits) |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 18 | 30 | 389 | 60 | 1316 | 90 | 4452 | 120 | 15051 |
| 1 | 120 | 31 | 405 | 61 | 1371 | 91 | 4636 | 121 | 15675 |
| 2 | 124 | 32 | 422 | 62 | 1428 | 92 | 4828 | 122 | 16325 |
| 3 | 130 | 33 | 440 | 63 | 1487 | 93 | 5029 | 123 | 17001 |
| 4 | 135 | 34 | 458 | 64 | 1549 | 94 | 5237 | 124 | 17706 |
| 5 | 141 | 35 | 477 | 65 | 1613 | 95 | 5454 | 125 | 18440 |
| 6 | 147 | 36 | 497 | 66 | 1680 | 96 | 5680 | 126 | 19204 |
| 7 | 153 | 37 | 517 | 67 | 1749 | 97 | 5915 | 127 | 20000 |
| 8 | 159 | 38 | 539 | 68 | 1822 | 98 | 6161 | | |
| 9 | 166 | 39 | 561 | 69 | 1897 | 99 | 6416 | | |
| 10 | 172 | 40 | 584 | 70 | 1976 | 100 | 6682 | | |
| 11 | 180 | 41 | 608 | 71 | 2058 | 101 | 6959 | | |
| 12 | 187 | 42 | 634 | 72 | 2143 | 102 | 7247 | | |
| 13 | 195 | 43 | 660 | 73 | 2232 | 103 | 7547 | | |
| 14 | 203 | 44 | 687 | 74 | 2325 | 104 | 7860 | | |
| 15 | 211 | 45 | 716 | 75 | 2421 | 105 | 8186 | | |
| 16 | 220 | 46 | 745 | 76 | 2521 | 106 | 8525 | | |
| 17 | 229 | 47 | 776 | 77 | 2626 | 107 | 8878 | | |
| 18 | 239 | 48 | 809 | 78 | 2735 | 108 | 9246 | | |
| 19 | 249 | 49 | 842 | 79 | 2848 | 109 | 9629 | | |
| 20 | 259 | 50 | 877 | 80 | 2966 | 110 | 10028 | | |
| 21 | 270 | 51 | 913 | 81 | 3089 | 111 | 10444 | | |
| 22 | 281 | 52 | 951 | 82 | 3217 | 112 | 10877 | | |
| 23 | 293 | 53 | 991 | 83 | 3350 | 113 | 11328 | | |
| 24 | 305 | 54 | 1032 | 84 | 3489 | 114 | 11797 | | |
| 25 | 317 | 55 | 1074 | 85 | 3634 | 115 | 12286 | | |

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| 26 | 331 | 56 | 1119 | 86 | 3784 | 116 | 12795 | |
| 27 | 344 | 57 | 1165 | 87 | 3941 | 117 | 13325 | |
| 28 | 359 | 58 | 1214 | 88 | 4105 | 118 | 13877 | |
| 29 | 374 | 59 | 1264 | 89 | 4275 | 119 | 14453 | |

**Table 7.1.6.3.2.4 10ms TTI E-DCH Transport Block Size Table 1**

| TB Index | TB Size (bits) | TB Index | TB Size (bits) | TB Index | TB Size (bits) |
|---|---|---|---|---|---|
| 0 | 18 | 41 | 5076 | 82 | 11850 |
| 1 | 186 | 42 | 5094 | 83 | 12132 |
| 2 | 204 | 43 | 5412 | 84 | 12186 |
| 3 | 354 | 44 | 5430 | 85 | 12468 |
| 4 | 372 | 45 | 5748 | 86 | 12522 |
| 5 | 522 | 46 | 5766 | 87 | 12804 |
| 6 | 540 | 47 | 6084 | 88 | 12858 |
| 7 | 690 | 48 | 6102 | 89 | 13140 |
| 8 | 708 | 49 | 6420 | 90 | 13194 |
| 9 | 858 | 50 | 6438 | 91 | 13476 |
| 10 | 876 | 51 | 6756 | 92 | 13530 |
| 11 | 1026 | 52 | 6774 | 93 | 13812 |
| 12 | 1044 | 53 | 7092 | 94 | 13866 |
| 13 | 1194 | 54 | 7110 | 95 | 14148 |
| 14 | 1212 | 55 | 7428 | 96 | 14202 |
| 15 | 1362 | 56 | 7464 | 97 | 14484 |
| 16 | 1380 | 57 | 7764 | 98 | 14556 |
| 17 | 1530 | 58 | 7800 | 99 | 14820 |
| 18 | 1548 | 59 | 8100 | 100 | 14892 |
| 19 | 1698 | 60 | 8136 | 101 | 15156 |
| 20 | 1716 | 61 | 8436 | 102 | 15228 |
| 21 | 1866 | 62 | 8472 | 103 | 15492 |
| 22 | 1884 | 63 | 8772 | 104 | 15564 |
| 23 | 2034 | 64 | 8808 | 105 | 15828 |
| 24 | 2052 | 65 | 9108 | 106 | 15900 |
| 25 | 2370 | 66 | 9144 | 107 | 16164 |
| 26 | 2388 | 67 | 9444 | 108 | 16236 |
| 27 | 2706 | 68 | 9480 | 109 | 16500 |
| 28 | 2724 | 69 | 9780 | 110 | 16572 |
| 29 | 3042 | 70 | 9816 | 111 | 17172 |
| 30 | 3060 | 71 | 10116 | 112 | 17244 |
| 31 | 3378 | 72 | 10152 | 113 | 17844 |
| 32 | 3396 | 73 | 10452 | 114 | 17916 |
| 33 | 3732 | 74 | 10488 | 115 | 18516 |
| 34 | 3750 | 75 | 10788 | 116 | 18606 |
| 35 | 4068 | 76 | 10824 | 117 | 19188 |
| 36 | 4086 | 77 | 11124 | 118 | 19278 |
| 37 | 4404 | 78 | 11178 | 119 | 19860 |
| 38 | 4422 | 79 | 11460 | 120 | 19950 |
| 39 | 4740 | 80 | 11514 | | |
| 40 | 4758 | 81 | 11796 | | |

**Table 7.1.6.3.2.5 Applicable E-TFS indexes for sub-tests 1 to 4 and UE E-DCH categories 1 to 6.**

| | | | Applicable E-TFS indexes | | | | | |
|---|---|---|---|---|---|---|---|---|
| **Sub-test** | **E-DCH TTI** | **E-DCH Transport Block Size Table** | **Category 1** | **Category 2** | **Category 3** | **Category 4** | **Category 5** | **Category 6** |
| 1 | 10ms | 10ms TTI Table 0, Table 7.1.6.3.2.3 | 0..101 | 0..119 | 0..119 | 0..127 | 0..127 | 0..127 |
| 2 | 10ms | 10ms TTI Table 1, Table 7.1.6.3.2.4 | 0..54 | 0..99 | 0..99 | 0..120 | 0..120 | 0..120 |
| 3 | 2ms | 2ms TTI Table 0, Table 7.1.6.3.2.1 | N/A | 0..88 | N/A | 0..108 | N/A | 0..127 |
| 4 | 2ms | 2ms TTI Table 1, Table 7.1.6.3.2.2 | N/A | 0..44 | N/A | 0..73 | N/A | 0..125 |
| NOTE 1: Applicable indexes depends on the UE capability of "Maximum number of bits of an E-DCH transport block transmitted within a 10 ms E-DCH TTI" and "Maximum number of bits of an E-DCH transport block transmitted within a 2 ms E-DCH TTI" as specified in TS 25.306 clause 5.1.<br>NOTE 2: For E-DCH categories beyond 6, E-TFS indices for category 6 are applicable. | | | | | | | | |

Test procedure

a) The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.10.2.4.6.1 using condition A12 as specified in clause 9.1 of TS 34.108.. See note 1.

b) The SS closes the test loop using UE test loop mode 1 and configuring the UL RLC SDU size to be equal to the received DL SDU size (i.e. not setting the UL RLC SDU size parameter).

c) SS sets *E-TFC index* = 0.

d) The SS removes the scheduling grant for E-DCH for the UE.

e) The SS transmits two RLC SDUs of size (*TBS_size* – 18)*160 / 336 – 8 bits, where the value for *TBS_size* is derived from the applicable E-TFS index table as specified in Table 7.1.6.3.2.5 for the sub-test. See note 2.

f) The SS waits for an SI to be received that indicates that the two RLC SDUs are available for transmission (can be identified from the content of the SI)

g) The SS issues an absolute grant that allows the UE to send at maximum bit rate (signalling value 31)

h) The SS waits until data is received and verifies that the looped back SDU has correct content

i) The SS verifies that the received E-TFC has correct size

j) The SS increments the parameter *E-TFC index* by one. If the *E-TFC index* is supported by the UE under test according to Table 7.1.6.3.2.5 then continue with step d else continue with step k.

k) The SS opens the UE test loop.

l) The SS release the radio bearer.

m) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test.

NOTE 2: The test data for transport channels on HS-DSCH and E-DCH is divided into 2 RLC SDUs to keep the SDU size not to exceed 1500 octets (limit of SDU size in SM). Calculation of RLC SDU size:

*RLC SDUs of size = Number of MAC-d PDUs * RLC payload size* / 2 – 8 bits (size of 7 bit length indicator and expansion bit) where the *RLC payload size* is 320 bits and the *Number of MAC-d PDUs* = (*TBS size – MAC-e header size – MAC-es header size*) / *MAD-d PDU size* = (*TBS size* – 18) / 336. This gives that the *RLC SDUs of size* = (TBS size – 18) *160 / 336 – 8 bits.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| 7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| 9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| 12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 13 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1 with no "LB Setup RB IE#k" parameter set (UE shall return an UL RLC SDU with the same size as the received RLC SDU in downlink) |
| 14 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15 | SS | | | The SS creates two RLC SDUs according to the E-TFC under test |
| 16 | ← | | Removal of absolute grant | Signalling value 1 |
| 17 | <-- | | DOWNLINK RLC SDU#1<br>DOWNLINK RLC SDU#2 | Send test data. The MAC-hs PDU contains 4 RLC SDUs |
| 18 | → | | SI indicating 2 RLC SDUs | This can be verified from the indicated Total E-DCH Buffer Status (TEBS) |
| 19 | <-- | | Absolute grant allowing the UE to transmit at maximum bit rate. | Signalling value 31 |
| 20 | --> | | UPLINK RLC SDUs | The SS checks that the content of the received UL RLC SDUs are correct |
| 21 | SS | | | The SS calculates test data for next E-TFC index and repeat steps 16 to 19 until all applicable E-TFC indexes have been tested. |
| 22 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 23 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 24 | | | RB RELEASE | RRC |
| 25 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 26 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |
| Note 1 | In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message. | | | |

#### 7.1.6.3.2.5 Test requirements

1. In step 20, the SS verifies that the received E-TFC has the correct size
2. In step 20, the SS shall receive 2 RLC SDUs with the same content as sent in downlink.

### 7.1.6.3.2a MAC-es/e transport block size selection/UL 16QAM

#### 7.1.6.3.2a.1 Definition and applicability

All UEs which support E-DCH and UL 16QAM.

#### 7.1.6.3.2a.2 Conformance requirement

Extract from TS 25.321 clause 9.2.5.4

[…]

RRC can configure the MAC-e to use one of two Transport block size sets for each TTI duration. The normative description of the mapping between the E-TFC index and the corresponding transport block size is provided in Annex B:

- If the UE is configured with E-TFCI table 0 (see 3GPP TS 25.331) and 2ms TTI, it shall use the mapping defined in 3GPP TS 25.321 Annex B.1
- If the UE is configured with E-TFCI table 1 (see 3GPP TS 25.331) and 2ms TTI, it shall use the mapping defined in 3GPP TS 25.321 Annex B.2
- If the UE is configured with E-TFCI table 2 (see 3GPP TS 25.331) and 2ms TTI, it shall use the mapping defined in 3GPP TS 25.321 Annex B.2a
- If the UE is configured with E-TFCI table 3 (see 3GPP TS 25.331) and 2ms TTI, it shall use the mapping defined in 3GPP TS 25.321 Annex B.2b
- If the UE is configured with E-TFCI table 0 (see 3GPP TS 25.331) and 10ms TTI, it shall use the mapping defined in 3GPP TS 25.321 Annex B.3
- If the UE is configured with E-TFCI table 1 (see 3GPP TS 25.331) and 10ms TTI, it shall use the mapping defined in 3GPP TS 25.321 Annex B.4

[…]

Reference(s)

TS 25.321 clause 9.2.5.4

### 7.1.6.3.2a.3 Test purpose

To verify that the UE transmits all possible transport block sizes within the UE capability.

### 7.1.6.3.2a.4 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-7 IE “E-DCH physical layer category extension”.

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE “HS-DSCH physical layer category” (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

UE in idle mode

The following parameters are specific for this test case:

Common for all UE HS-DSCH categories:

| Parameter | Value |
|---|---|
| MAC-d PDU size | 336 bits |
| MAC-hs receiver window size | 16 |
| Number of HARQ processes | 1 |
| Number of reordering queues | 1 |

Common for all UE E-DCH categories:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms (see 25.331 10.3.6.99) |

Specific depending on E-DCH category:

| Parameter | E-DCH Category | Value |
|---|---|---|
| **RLC Transmission window size** | **7** | **1536** |
| **E-TFCI table** | **7** | **See table 7.1.6.3.2a.3** |

Specific depending on HS-DSCH category:

| Parameter | HS-DSCH Category | Value |
|---|---|---|
| RLC Receiving window size | 1 to 6 | 512 |
| | 7 and 8 | 1536 |
| | 9 and 10 | 2047 |
| | 11 and 12 | 1024 |

The mapping between the chosen E-TFC index and the corresponding E-DCH transport block size is given in the following tables:

**Table 7.1.6.3.2a.1 2ms TTI E-DCH Transport Block Size Table 2**

| E-TFCI | TB Size (bits) | E-TFCI | TB Size (bits) | E-TFCI | TB Size (bits) | E-TFCI | TB Size (bits) | E-TFCI | TB Size (bits) |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 18 | 30 | 402 | 60 | 1405 | 90 | 4913 | 120 | 17173 |
| 1 | 120 | 31 | 419 | 61 | 1465 | 91 | 5122 | 121 | 17904 |
| 2 | 125 | 32 | 437 | 62 | 1528 | 92 | 5341 | 122 | 18667 |
| 3 | 130 | 33 | 455 | 63 | 1593 | 93 | 5568 | 123 | 19462 |
| 4 | 135 | 34 | 475 | 64 | 1661 | 94 | 5805 | 124 | 20291 |
| 5 | 141 | 35 | 495 | 65 | 1731 | 95 | 6053 | 125 | 21155 |
| 6 | 147 | 36 | 516 | 66 | 1805 | 96 | 6310 | 126 | 22056 |
| 7 | 154 | 37 | 538 | 67 | 1882 | 97 | 6579 | 127 | 22995 |
| 8 | 160 | 38 | 561 | 68 | 1962 | 98 | 6859 | | |
| 9 | 167 | 39 | 585 | 69 | 2046 | 99 | 7152 | | |
| 10 | 174 | 40 | 610 | 70 | 2133 | 100 | 7456 | | |
| 11 | 182 | 41 | 636 | 71 | 2224 | 101 | 7774 | | |
| 12 | 189 | 42 | 663 | 72 | 2319 | 102 | 8105 | | |
| 13 | 197 | 43 | 691 | 73 | 2417 | 103 | 8450 | | |
| 14 | 206 | 44 | 721 | 74 | 2520 | 104 | 8810 | | |
| 15 | 215 | 45 | 752 | 75 | 2628 | 105 | 9185 | | |
| 16 | 224 | 46 | 784 | 76 | 2740 | 106 | 9577 | | |
| 17 | 233 | 47 | 817 | 77 | 2856 | 107 | 9985 | | |
| 18 | 243 | 48 | 852 | 78 | 2978 | 108 | 10410 | | |
| 19 | 254 | 49 | 888 | 79 | 3105 | 109 | 10853 | | |
| 20 | 265 | 50 | 926 | 80 | 3237 | 110 | 11316 | | |
| 21 | 276 | 51 | 965 | 81 | 3375 | 111 | 11798 | | |
| 22 | 288 | 52 | 1007 | 82 | 3519 | 112 | 12300 | | |
| 23 | 300 | 53 | 1049 | 83 | 3669 | 113 | 12824 | | |
| 24 | 313 | 54 | 1094 | 84 | 3825 | 114 | 13370 | | |
| 25 | 326 | 55 | 1141 | 85 | 3988 | 115 | 13940 | | |
| 26 | 340 | 56 | 1189 | 86 | 4158 | 116 | 14534 | | |
| 27 | 354 | 57 | 1240 | 87 | 4335 | 117 | 15153 | | |
| 28 | 370 | 58 | 1293 | 88 | 4520 | 118 | 15798 | | |
| 29 | 385 | 59 | 1348 | 89 | 4712 | 119 | 16471 | | |

**Table 7.1.6.3.2a.2 2ms TTI E-DCH Transport Block Size Table 3**

| E-TFCI | TB Size (bits) | E-TFCI | TB Size (bits) | E-TFCI | TB Size (bits) | E-TFCI | TB Size (bits) | E-TFCI | TB Size (bits) |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 18 | 30 | 1902 | 60 | 6614 | 90 | 14184 | 120 | 21966 |
| 1 | 186 | 31 | 1986 | 61 | 6774 | 91 | 14538 | 121 | 22302 |
| 2 | 204 | 32 | 2004 | 62 | 7110 | 92 | 14874 | 122 | 22430 |
| 3 | 354 | 33 | 2034 | 63 | 7270 | 93 | 15210 | 123 | 22638 |
| 4 | 372 | 34 | 2052 | 64 | 7446 | 94 | 15546 | 124 | 22996 |
| 5 | 522 | 35 | 2370 | 65 | 7782 | 95 | 15882 | | |
| 6 | 540 | 36 | 2388 | 66 | 7926 | 96 | 16218 | | |
| 7 | 558 | 37 | 2642 | 67 | 8118 | 97 | 16554 | | |
| 8 | 674 | 38 | 2660 | 68 | 8454 | 98 | 16890 | | |
| 9 | 692 | 39 | 2706 | 69 | 8582 | 99 | 17226 | | |
| 10 | 708 | 40 | 2724 | 70 | 8790 | 100 | 17562 | | |
| 11 | 858 | 41 | 3042 | 71 | 9126 | 101 | 17802 | | |
| 12 | 876 | 42 | 3060 | 72 | 9238 | 102 | 17898 | | |
| 13 | 894 | 43 | 3298 | 73 | 9462 | 103 | 18252 | | |
| 14 | 1026 | 44 | 3316 | 74 | 9798 | 104 | 18476 | | |
| 15 | 1044 | 45 | 3378 | 75 | 9894 | 105 | 18588 | | |
| 16 | 1194 | 46 | 3396 | 76 | 10134 | 106 | 18924 | | |
| 17 | 1212 | 47 | 3750 | 77 | 10470 | 107 | 19132 | | |
| 18 | 1230 | 48 | 3990 | 78 | 10550 | 108 | 19260 | | |
| 19 | 1330 | 49 | 4086 | 79 | 10806 | 109 | 19596 | | |
| 20 | 1348 | 50 | 4422 | 80 | 11160 | 110 | 19788 | | |
| 21 | 1362 | 51 | 4646 | 81 | 11224 | 111 | 19932 | | |
| 22 | 1380 | 52 | 4758 | 82 | 11496 | 112 | 20268 | | |
| 23 | 1530 | 53 | 5094 | 83 | 11880 | 113 | 20444 | | |
| 24 | 1548 | 54 | 5302 | 84 | 12168 | 114 | 20604 | | |
| 25 | 1566 | 55 | 5430 | 85 | 12536 | 115 | 20940 | | |
| 26 | 1698 | 56 | 5766 | 86 | 12840 | 116 | 21100 | | |
| 27 | 1716 | 57 | 5958 | 87 | 13192 | 117 | 21276 | | |
| 28 | 1866 | 58 | 6102 | 88 | 13512 | 118 | 21612 | | |
| 29 | 1884 | 59 | 6438 | 89 | 13848 | 119 | 21774 | | |

**Table 7.1.6.3.2a.3 Applicable E-TFS indexes for sub-tests 1 to 2 and UE E-DCH category 7.**

| | | | Applicable E-TFS indexes |
|---|---|---|---|
| **Sub-test** | **E-DCH TTI** | **E-DCH Transport Block Size Table** | **Category 7** |
| 1 | 2ms | 2ms TTI Table 2, Table 7.1.6.3.2.2a | 0..127 |
| 2 | 2ms | 2ms TTI Table 3, Table 7.1.6.3.2.2b | 0..124 |
| NOTE 1: Applicable indexes depends on “Maximum number of bits of an E-DCH transport block transmitted within a 2 ms E-DCH TTI” as specified in TS 25.306 clause 5.1. | | | |

Test procedure

a) The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.10.2.4.6.1 using condition "Packet to CELL_DCH / E-DCH[UL : 16QAM] / HS-DSCH using three multiplexing options (3/3) and SRBs mapped on DCH/DCH condition A19" as specified in clause 9.1 of TS 34.108.. See note 1.

b) The SS closes the test loop using UE test loop mode 1 and configuring the UL RLC SDU size to be equal to the received DL SDU size (i.e. not setting the UL RLC SDU size parameter).

c) SS sets *E-TFC index* = 0.

d) The SS removes the scheduling grant for E-DCH for the UE.

e) The SS transmits two RLC SDUs of size (*TBS_size* – 18)*160 / 336 – 8 bits, where the value for *TBS_size* is derived from the applicable E-TFS index table as specified in Table 7.1.6.3.2a.3 for the sub-test. See note 2.

f) The SS waits for an SI to be received that indicates that the two RLC SDUs are available for transmission (can be identified from the content of the SI)

g) The SS issues an absolute grant that allows the UE to send at maximum bit rate (signalling value 31)

h) The SS waits until data is received and verifies that the looped back SDU has correct content

i) The SS verifies that the received E-TFC has correct size

j) The SS increments the parameter *E-TFC index* by one. If the *E-TFC index* is supported by the UE under test according to Table 7.1.6.3.2a.3 then continue with step d else continue with step k.

k) The SS opens the UE test loop.

l) The SS release the radio bearer.

m) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test.

NOTE 2: The test data for transport channels on HS-DSCH and E-DCH is divided into 2 RLC SDUs to keep the SDU size not to exceed 1500 octets (limit of SDU size in SM). Calculation of RLC SDU size:

*RLC SDUs of size = Number of MAC-d PDUs * RLC payload size* / 2 – 8 bits (size of 7 bit length indicator and expansion bit) where the *RLC payload size* is 320 bits and the *Number of MAC-d PDUs* = (*TBS size – MAC-e header size – MAC-es header size*) / *MAD-d PDU size* = (*TBS size* – 18) / 336. This gives that the *RLC SDUs of size* = (TBS size – 18) *160 / 336 – 8 bits.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| 7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| 9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| 12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 13 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1 with no "LB Setup RB IE#k" parameter set (UE shall return an UL RLC SDU with the same size as the received RLC SDU in downlink) |
| 14 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15 | SS | | | The SS creates two RLC SDUs according to the E-TFC under test |
| 16 | ← | | Removal of absolute grant | Signalling value 1 |
| 17 | <-- | | DOWNLINK RLC SDU#1<br>DOWNLINK RLC SDU#2 | Send test data. The MAC-hs PDU contains 4 RLC SDUs |
| 18 | → | | SI indicating 2 RLC SDUs | This can be verified from the indicated Total E-DCH Buffer Status (TEBS) |
| 19 | <-- | | Absolute grant allowing the UE to transmit at maximum bit rate. | Signalling value 31 |
| 20 | --> | | UPLINK RLC SDUs | The SS checks that the content of the received UL RLC SDUs are correct |
| 21 | SS | | | The SS calculates test data for next E-TFC index and repeat steps 16 to 19 until all applicable E-TFC indexes have been tested. |
| 22 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 23 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 24 | | | RB RELEASE | RRC |
| 25 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 26 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |
| Note 1 | In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message. | | | |

#### 7.1.6.3.2a.5 Test requirements

1. In step 20, the SS verifies that the received E-TFC has the correct size
2. In step 20, the SS shall receive 2 RLC SDUs with the same content as sent in downlink.

### 7.1.6.3.3 Impact on E-TFCI selection on MAC at UE for UL DRX at Node B/ MAC Inactivity Threshold>1

#### 7.1.6.3.3.1 Definition and applicability

All UEs which support UL DTX (E-DCH start time restriction).

#### 7.1.6.3.3.2 Conformance requirement

In FDD mode, the rules for E-TFC selection provided below shall apply to UEs in CELL_DCH state with an E-DCH transport channel configured. These UEs shall apply the E-TFC selection procedure when invoked by the HARQ entity (see subclause 11.8.1.1.1). In the case where a 2ms TTI is configured, E-TFC selection shall not be performed for TTIs that overlap with an uplink compressed mode gap. The E-TFC restriction procedure described in [12] shall always be applied before the E-TFC selection process below. E-TFCs which (according to calculations in [16]) require channelisation codes which are not allowed by the value given by the Maximum channelisation codes for E-DPDCH or are not supported by the UE capability shall be considered as blocked. Furthermore, for UEs that are also configured with a DCH transport channel on uplink, the TFC selection procedure shall be applied before either of these.

…

In FDD, in case the DTX feature is configured by higher layers and no E-DCH transmission is performed in this TTI:

- if *MAC Inactivity Threshold* > 1 and no E-DCH transmission has been performed for *MAC Inactivity Threshold* - 1 previous TTIs or,
- if *MAC Inactivity Threshold* = 1:
  - E-TFC selection shall only be performed for the TTIs where the following conditions are fulfilled:
    - For 2ms TTI: [5*CFN + subframe number - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0;
    - For 10ms TTI: [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0.

    In 2ms TTI case, if the TTI that fulfilled [5*CFN + subframe number - UE DTX DRX Offset] mod MAC DTX Cycle = 0 overlapped with an uplink compressed mode transmission gap, the E-TFC selection shall be performed for the first TTI not overlapping with an uplink compressed mode transmission gap.

Reference(s)

TS 25.321 clauses 11.8.1.4

#### 7.1.6.3.3.3 Test purpose

The purpose of this test case is to verify that

1. To verify that when no E-DCH transmission has been performed for MAC Inactivity Threshold -1 previous TTI, UE start E-DCH transmission in TTI satisfying [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0.
2. To verify that when E-DCH transmission has been performed within MAC Inactivity Threshold -1 previous TTI, UE start E-DCH transmission immediately[Grant available].

#### 7.1.6.3.3.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / UM PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH as specified in TS 34.108, clause 6.11.4i.1. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |

DL_DRX is not activated and default UL_DTX parameters are applied.

The following UL_DRX parameters are specific for this test case:

| Parameter | Value |
|---|---|
| E-DCH TTI | 10 ms |
| MAC DTX Cycle | 20 |
| MAC Inactivity Threshold | 128 |
| UE DTX DRX Offset | 10 (multiple of 5) |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Test procedure

a) SS waits for 1.5 seconds, so that condition for MAC Inactivity is satisfied.

b) SS transmits 5 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

c) SS waits until an SI is received. SS checks that the CFN in which SI is received satisfies condition [5*CFN - UE DTX DRX Offset] mod MAC DTX Cycle = 0.

d) SS issues an absolute grant that allows the UE to send 1 RLC PDU per TTI (signalling value 4)

e) SS starts receiving loop backed RLC PDU's.

f) SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1Expected sequence

g) SS receves loop backed RLC PDU. SS repeats steps f & g, until CFN in which loop backed PDU is received satisfies condition [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* ≠ 0.

h) SS waits for 1.5 seconds, so that condition for MAC Inactivity is satisfied.

i) SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

j) SS receves loop backed RLC PDU. SS checks that the CFN in which loop backed PDU is received satisfies condition [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0.

k) SS repeats steps h-j, 10 times and always condition [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0 is satisfied.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS Waits for 1.5 seconds so that MAC_Inactivity_Threshold is satisfied |
| 2 | ← | | 5 RLC PDUs on LCH 1 | |
| 3 | → | | SI indicating data on LCH 1 | SS Checks that [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0 is satisfied for transmission of SI |
| 4 | ← | | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 5 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | First Loop Backed PDU. |
| 6 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all remaining 4 RLC SDU's are received on consecutive TTI's |
| 7 | ← | | 1 RLC PDUs on LCH 1 | |
| 8 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | SS Checks that [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* ≠ 0 is satisfied<br>If above equation is not satisfied steps 7 and 8 are repeated. |
| 9 | | | | SS Waits for 1.5 seconds so that MAC_Inactivity_Threshold is satisfied |
| 10 | ← | | 1 RLC PDUs on LCH 1 | |
| 11 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | SS Checks that [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0 is satisfied |
| | | | | Steps 9 to 11 are repeated 10 times |

Specific Message Contents

None

#### 7.1.6.3.3.5 Test requirements

1. In step 3, the CFN of transmitted SI satisfies [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0.
2. In step 8, the CFN of loop backed PDU satisfies [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* ≠ 0
3. In step 11,for all iterations, the CFN of loop backed PDU satisfies [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0

### 7.1.6.3.4 Impact on E-TFCI selection on MAC at UE for UL DRX at Node B/ MAC Inactivity Threshold =1

#### 7.1.6.3.4.1 Definition and applicability

All UEs which support UL DTX (E-DCH start time restriction).

#### 7.1.6.3.4.2 Conformance requirement

In FDD mode, the rules for E-TFC selection provided below shall apply to UEs in CELL_DCH state with an E-DCH transport channel configured. These UEs shall apply the E-TFC selection procedure when invoked by the HARQ entity (see subclause 11.8.1.1.1). In the case where a 2ms TTI is configured, E-TFC selection shall not be performed for TTIs that overlap with an uplink compressed mode gap. The E-TFC restriction procedure described in [12] shall always be applied before the E-TFC selection process below. E-TFCs which (according to calculations in [16]) require channelisation codes which are not allowed by the value given by the Maximum channelisation codes for E-DPDCH or are not supported by the UE capability shall be considered as blocked. Furthermore, for UEs that are also configured with a DCH transport channel on uplink, the TFC selection procedure shall be applied before either of these.

…

In FDD, in case the DTX feature is configured by higher layers and no E-DCH transmission is performed in this TTI:

- if *MAC Inactivity Threshold* > 1 and no E-DCH transmission has been performed for *MAC Inactivity Threshold* - 1 previous TTIs or,
- if *MAC Inactivity Threshold* = 1:
  - E-TFC selection shall only be performed for the TTIs where the following conditions are fulfilled:
    - For 2ms TTI: [5*CFN + subframe number - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0;
    - For 10ms TTI: [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0.

    In 2ms TTI case, if the TTI that fulfilled [5*CFN + subframe number - UE DTX DRX Offset] mod MAC DTX Cycle = 0 overlapped with an uplink compressed mode transmission gap, the E-TFC selection shall be performed for the first TTI not overlapping with an uplink compressed mode transmission gap.

Reference(s)

TS 25.321 clauses 11.8.1.4

### 7.1.6.3.4.3 Test purpose

To verify that UE always start E-DCH transmission in TTI satisfying [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0.

### 7.1.6.3.4.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / UM PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH as specified in TS 34.108, clause 6.11.4i.1. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |

DL_DRX is not activated and default UL_DTX parameters are applied.

The following UL_DRX parameters are specific for this test case:

| Parameter | Value |
|---|---|
| E-DCH TTI | 10 ms |
| MAC DTX Cycle | 20 |
| MAC Inactivity Threshold | 1 |
| UE DTX DRX Offset | 10 (multiple of 5) |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Test procedure

a) SS transmits 5 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1Expected sequence

b) SS waits until an SI is received.

c) SS issues an absolute grant that allows the UE to send 1 RLC PDU per TTI (signalling value 4)

d) SS starts receiving loop backed RLC PDU's. SS checks that the CFN in which first loop backed PDU is received satisfies condition [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0.

e) SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1Expected sequence

f) SS receves loop backed RLC PDU. SS repeats steps f & g, until CFN in which loop backed PDU is received satisfies condition [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0.

g) SS repeats steps f & g, 10 times and always condition [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0 is satisfied.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 5 RLC PDUs on LCH 1 | |
| 2 | → | | SI indicating data on LCH 1 | |
| 3 | ← | | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 4 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | First Loop Backed PDU.<br>SS Checks that [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0 is satisfied |
| 5 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until all remaining 4 RLC SDU's are received in consecutive TTI's |
| 6 | ← | | 1 RLC PDUs on LCH 1 | |
| 7 | → | | MAC es PDU containing 1 RLC PDU from LCH 1 | SS Checks that [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0 is satisfied |
| | | | | Steps 6 & 7 are repeated 10 times |

Specific Message Contents

None

#### 7.1.6.3.4.5 Test requirements

1. In step 4, the CFN of loop backed PDU satisfies [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0.

2. In step 7, for all iterations, the CFN of loop backed PDU satisfies [5*CFN - *UE DTX DRX Offset*] **mod** *MAC DTX Cycle* = 0

### 7.1.6.3.5 MAC-es/e transport block size selection(1.28Mcps TDD)

#### 7.1.6.3.5.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.3.5.2 Conformance requirement

Extract from TS 25.321 clause 9.2.6.4

For 1.28 Mcps TDD, the normative description of the mapping between the TB index and the corresponding transport block size is provided in Annex BC.

[…]

Reference(s)

TS 25.321 clause 9.2.6.4

#### 7.1.6.3.2.3 Test purpose

To verify that the UE transmits all possible transport block sizes within the UE capability.

7.1.6.3.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

UE in idle mode

The following parameters are specific for this test case:

Sub-tests and test points for UE HS-DSCH physical layer category 6. Testing of UE supporting UE HS-DSCH physical layer category 13 to 15 shall be performed in accordance to test parameters, sub-tests and test points for UE HS-DSCH physical layer category 10

Common for all UE HS-DSCH categories:

| Parameter | Value |
|---|---|
| MAC-d PDU size | 336 bits |
| MAC-hs receiver window size | 16 |
| Number of HARQ processes | 1 |
| Number of reordering queues | 1 |

Common for all UE E-DCH categories:

| Parameter | Value |
|---|---|
| T-WAIT | 200 ms (see 25.331 10.3.6.103) |

Specific depending on E-DCH category:

| Parameter | E-DCH Category | Value |
|---|---|---|
| RLC Transmission window size | 1 to 5 | 512 |
| | 6 | 1536 |
| E-TFCI table | 1 to 6 | See table 7.1.6.3.2.5 |

Specific depending on HS-DSCH category:

| Parameter | HS-DSCH Category | Value |
|---|---|---|
| RLC Receiving window size | 1 to 6 | 512 |
| | 7 and 8 | 1536 |
| | 9 and 10 | 2047 |
| | 11 and 12 | 1024 |

The mapping between the chosen E-TFC index and the corresponding E-DCH transport block size is given in the following tables:

**Table 7.1.6.3.5.1 5ms TTI E-DCH Transport Block Size Table 0**

| | Category 1-2 | | | Category 3-6 | | | | |
|---|---|---|---|---|---|---|---|---|
| TB index | 1 Timeslot TBS | 2 Timeslots TBS | 3 Timeslots TBS | 1 Timeslot TBS | 2 Timeslots TBS | 3 Timeslots TBS | 4 Timeslots TBS | 5 Timeslots TBS |
| 0 | 23 | 23 | 23 | 23 | 23 | 23 | 23 | 23 |
| 1 | 116 | 116 | 116 | 116 | 116 | 116 | 116 | 116 |
| 2 | 162 | 162 | 162 | 162 | 162 | 162 | 162 | 162 |
| 3 | 167 | 169 | 170 | 169 | 171 | 172 | 173 | 173 |
| 4 | 173 | 177 | 180 | 177 | 181 | 184 | 186 | 186 |
| 5 | 179 | 186 | 190 | 186 | 192 | 196 | 199 | 199 |
| 6 | 186 | 195 | 200 | 194 | 204 | 209 | 213 | 213 |
| 7 | 192 | 204 | 211 | 204 | 216 | 223 | 229 | 229 |
| 8 | 199 | 214 | 222 | 213 | 229 | 238 | 245 | 245 |
| 9 | 206 | 224 | 235 | 223 | 242 | 254 | 263 | 263 |
| 10 | 213 | 234 | 247 | 234 | 257 | 271 | 282 | 282 |
| 11 | 221 | 246 | 261 | 245 | 272 | 289 | 302 | 302 |
| 12 | 229 | 257 | 275 | 257 | 288 | 309 | 324 | 324 |
| 13 | 237 | 270 | 290 | 269 | 306 | 329 | 347 | 347 |
| 14 | 245 | 282 | 306 | 282 | 324 | 351 | 372 | 372 |
| 15 | 254 | 296 | 323 | 295 | 343 | 375 | 399 | 399 |
| 16 | 263 | 310 | 341 | 309 | 364 | 400 | 427 | 427 |
| 17 | 272 | 325 | 359 | 324 | 385 | 427 | 458 | 458 |
| 18 | 282 | 340 | 379 | 339 | 408 | 455 | 491 | 491 |
| 19 | 292 | 356 | 400 | 355 | 433 | 486 | 526 | 526 |
| 20 | 302 | 373 | 422 | 372 | 459 | 518 | 564 | 564 |
| 21 | 313 | 391 | 445 | 390 | 486 | 553 | 605 | 605 |
| 22 | 324 | 410 | 469 | 408 | 515 | 589 | 648 | 648 |
| 23 | 335 | 429 | 495 | 427 | 546 | 629 | 695 | 695 |
| 24 | 347 | 450 | 522 | 448 | 578 | 671 | 745 | 745 |
| 25 | 359 | 471 | 550 | 469 | 613 | 716 | 799 | 799 |
| 26 | 372 | 493 | 581 | 491 | 649 | 764 | 856 | 856 |
| 27 | 385 | 517 | 612 | 514 | 688 | 815 | 918 | 918 |
| 28 | 399 | 541 | 646 | 539 | 729 | 869 | 983 | 983 |
| 29 | 413 | 567 | 681 | 564 | 773 | 927 | 1054 | 1054 |
| 30 | 428 | 594 | 718 | 591 | 819 | 989 | 1130 | 1130 |
| 31 | 443 | 622 | 758 | 619 | 867 | 1055 | 1211 | 1211 |
| 32 | 458 | 652 | 799 | 648 | 919 | 1125 | 1298 | 1298 |
| 33 | 475 | 683 | 843 | 679 | 974 | 1201 | 1392 | 1392 |
| 34 | 491 | 716 | 889 | 711 | 1032 | 1281 | 1492 | 1492 |
| 35 | 509 | 750 | 937 | 745 | 1094 | 1366 | 1599 | 1599 |
| 36 | 527 | 785 | 989 | 780 | 1159 | 1458 | 1714 | 1714 |
| 37 | 545 | 823 | 1043 | 817 | 1228 | 1555 | 1837 | 1837 |
| 38 | 565 | 862 | 1100 | 856 | 1301 | 1659 | 1969 | 1969 |
| 39 | 585 | 903 | 1160 | 896 | 1379 | 1770 | 2110 | 2110 |
| 40 | 605 | 946 | 1223 | 938 | 1461 | 1888 | 2262 | 2262 |
| 41 | 627 | 991 | 1290 | 983 | 1548 | 2014 | 2425 | 2425 |
| 42 | 649 | 1038 | 1361 | 1029 | 1640 | 2148 | 2599 | 2599 |
| 43 | 672 | 1087 | 1435 | 1078 | 1738 | 2292 | 2786 | 2786 |
| 44 | 696 | 1139 | 1514 | 1129 | 1841 | 2445 | 2986 | 2986 |
| 45 | 720 | 1193 | 1596 | 1183 | 1951 | 2608 | 3200 | 3200 |
| 46 | 746 | 1250 | 1684 | 1239 | 2067 | 2782 | 3430 | 3430 |
| 47 | 772 | 1309 | 1776 | 1297 | 2191 | 2968 | 3677 | 3677 |
| 48 | 799 | 1372 | 1873 | 1359 | 2321 | 3166 | 3941 | 3941 |
| 49 | 827 | 1437 | 1975 | 1423 | 2460 | 3377 | 4224 | 4224 |
| 50 | 857 | 1505 | 2083 | 1491 | 2606 | 3603 | 4528 | 4528 |
| 51 | 887 | 1577 | 2197 | 1561 | 2762 | 3843 | 4853 | 4853 |
| 52 | 918 | 1652 | 2317 | 1635 | 2926 | 4100 | 5202 | 5202 |
| 53 | 951 | 1730 | 2444 | 1712 | 3101 | 4374 | 5576 | 5576 |
| 54 | 984 | 1813 | 2578 | 1794 | 3285 | 4666 | 5976 | 5976 |
| 55 | 1019 | 1899 | 2719 | 1878 | 3481 | 4977 | 6406 | 6406 |
| 56 | 1055 | 1989 | 2867 | 1967 | 3689 | 5310 | 6866 | 6866 |
| 57 | 1092 | 2084 | 3024 | 2060 | 3908 | 5664 | 7359 | 7359 |

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| 58 | 1131 | 2183 | 3189 | 2158 | 4141 | 6042 | 7888 | 7888 |
| 59 | 1171 | 2287 | 3364 | 2260 | 4388 | 6446 | 8455 | 8455 |
| 60 | 1212 | 2395 | 3547 | 2367 | 4650 | 6876 | 9062 | 9062 |
| 61 | 1255 | 2509 | 3741 | 2479 | 4927 | 7335 | 9713 | 9713 |
| 62 | 1300 | 2629 | 3946 | 2597 | 5220 | 7825 | 10411 | 10411 |
| 63 | 1346 | 2754 | 4162 | 2720 | 5532 | 8348 | 11160 | 11160 |

**Table 7.1.6.3.5.2 Applicable E-TFS indexes for sub-tests 1 to 4 and UE E-DCH categories 1 to 6.**

| | | | Applicable E-TFS indexes | | | | | |
|---|---|---|---|---|---|---|---|---|
| **Sub-test** | **E-DCH TTI** | **E-DCH Transport Block Size Table** | **Category 1** | **Category 2** | **Category 3** | **Category 4** | **Category 5** | **Category 6** |
| 1 | 5ms | 5ms TTI Table 0, Table 7.1.6.3.5.1 | 0..101 | 0..119 | 0..119 | 0..127 | 0..127 | 0..127 |
| NOTE 1: Applicable indexes depends on the UE capability of "Maximum number of bits of an E-DCH transport block transmitted within a 5 ms E-DCH TTI" and "Maximum number of bits of an E-DCH transport block transmitted within a 5 ms E-DCH TTI" as specified in TS 25.306 clause 5.1. | | | | | | | | |

Test procedure

a) The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.5.4.7.2 using condition A11 as specified in clause 9.1 of TS 34.108.. See note 1.

b) The SS closes the test loop using UE test loop mode 1 and configuring the UL RLC SDU size to be equal to the received DL SDU size (i.e. not setting the UL RLC SDU size parameter).

c) SS sets *E-TFC index* = 0.

d) The SS removes the scheduling grant for E-DCH for the UE.

e) The SS transmits two RLC SDUs of size (*TBS_size* – 18)*160 / 336 – 8 bits, where the value for *TBS_size* is derived from the applicable E-TFS index table as specified in Table 7.1.6.3.5.2 for the sub-test.

f) The SS waits for an SI to be received that indicates that the two RLC SDUs are available for transmission (can be identified from the content of the SI)

g) The SS issues an absolute grant that allows the UE to send at maximum bit rate

h) The SS waits until data is received and verifies that the looped back SDU has correct content

i) The SS verifies that the received E-TFC has correct size

j) The SS increments the parameter *E-TFC index* by one. If the *E-TFC index* is supported by the UE under test according to Table 7.1.6.3.5.2 then continue with step d else continue with step k.

k) The SS opens the UE test loop.

l) The SS release the radio bearer.

m) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test.

NOTE 2: The test data for transport channels on HS-DSCH and E-DCH is divided into 2 RLC SDUs to keep the SDU size not to exceed 1500 octets (limit of SDU size in SM). Calculation of RLC SDU size:

*RLC SDUs of size = Number of MAC-d PDUs * RLC payload size* / 2 – 8 bits (size of 7 bit length indicator and expansion bit) where the *RLC payload size* is 320 bits and the *Number of MAC-d PDUs* = (*TBS size – MAC-e header size – MAC-es header size*) / *MAD-d PDU size* = (*TBS size* – 18) / 336. This gives that the *RLC SDUs of size* = (TBS size – 18) *160 / 336 – 8 bits.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| 7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| 9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| 12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 13 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1 with no "LB Setup RB IE#k" parameter set (UE shall return an UL RLC SDU with the same size as the received RLC SDU in downlink) |
| 14 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15 | SS | | | The SS creates two RLC SDUs according to the E-TFC under test |
| 16 | ← | | Removal of absolute grant | Signalling value 1 |
| 17 | <-- | | DOWNLINK RLC SDU#1<br>DOWNLINK RLC SDU#2 | Send test data. The MAC-hs PDU contains 4 RLC SDUs |
| 18 | → | | SI indicating 2 RLC SDUs | This can be verified from the indicated Total E-DCH Buffer Status (TEBS) |
| 19 | <-- | | Absolute grant allowing the UE to transmit at maximum bit rate. | |
| 20 | --> | | UPLINK RLC SDUs | The SS checks that the content of the received UL RLC SDUs are correct |
| 21 | SS | | | The SS calculates test data for next E-TFC index and repeat steps 16 to 19 until all applicable E-TFC indexes have been tested. |
| 22 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 23 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 24 | | | RB RELEASE | RRC |
| 25 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 26 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |
| Note 1 | In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message. | | | |

#### 7.1.6.3.2.5 Test requirements

1. In step 20, the SS verifies that the received E-TFC has the correct size
2. In step 20, the SS shall receive 2 RLC SDUs with the same content as sent in downlink.

## 7.1.6.4 MAC-es/e - E-DCH retransmissions

### 7.1.6.4.1 MAC-es/e process handling

#### 7.1.6.4.1.1 Definition and applicability

All UEs which support E-DCH with 2ms TTI. (FDD)/ All UEs which support E-DCH(1.28Mcps TDD).

7.1.6.4.1.2 Conformance requirement

Extract from 25.331:

1> for FDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled transmission grant HARQ process allocation" is configured for this MAC-d flow:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission HARQ process allocation", with a total contribution from this MAC-d flow not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity").

Extract from 25.331:

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> configure the UL E-DPCCH in accordance with the stored IE "E-DPCCH" configuration;

2> configure the MAC with the stored IE "E-DPDCH" configuration and/or the information contained in IE "Scheduled Transmission configuration".

1> for TDD:

2> configure the E-RUCCH with the stored E-RUCCH configuration;

2> configure the MAC with the stored E-PUCH configuration.

Extract from 25.321:

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays. When a 2ms TTI is configured each non-scheduled grant is applicable to the specific set of HARQ processes indicated by RRC. The applicability of scheduled grants can be also restricted to a specific set of HARQ processes when a 2ms TTI is configured. HARQ process restriction and reservation is under the control of the serving cell Node B and indicated to the UE by RRC

Extract From 25.321 clause 11.9.1.4:

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays.

The UE shall determine whether to take scheduled or non-scheduled grants into account in the upcoming transmission. If neither are supposed to be taken into account (i.e. the TTI is not available for non-scheduled transmission and no Grant for scheduled transmission has been received) then no grant shall be assumed to exist. If a grant exists then the transmission format and data allocation shall follow the requirements below.

Reference(s)

TS 25.321 clauses 11.8.1.4, 11.9.1.4,. TS 25.331 clauses 8.6.5.18 and 8.6.6.37

7.1.6.4.1.3 Test purpose

To verify that the UE performs transmissions and retransmissions in the correct MAC-es process.

To verify that the UE uses only the allowed HARQ processes for scheduled and non-scheduled transmissions.

7.1.6.4.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4d(FDD) /6.11.5.4.7.7(1.28Mcps TDD) using condition A15(FDD) /A14(1.28Mcps TDD) as specified in clause 9.1 of TS 34.108. The following parameters are specific for this test case with the logical channel, transport channel and queue identities set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the test case | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| TTI for Radio bearer | 2 ms(FDD) |
| TTI for Radio bearer | 5 ms(1.28Mcps TDD) |
| Periodicity for scheduling info | No periodic scheduling info |
| E-TFCI table | Table 0 for 2 ms TTI |
| E-TFCI table | 5ms TTI E-DCH Transport Block Size Table 0(1.28Mcps TDD) |
| HARQ RV Configuration | rv0 |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Test procedure

In this test procedure the UE is configured with two logical channels, with Id 7 (LCH 1) and 8 (LCH2). LCH 1 is mapped to MAC-d flow 2 and LCH 2 is mapped to MAC-d flow3. The MAC-d flow 2 has been configured with non-scheduled transmissions allowed in HARQ process 1(FDD) / HARQ process 4 (1.28Mcps TDD), with a rate exceeding 1 SDU/TTI and the value of the “Max MAC-e PDU contents size” is 500 bits. MAC-d flow 3 has been configured with a scheduled transmission allowed in HARQ process 2.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

c) The SS waits until data is received and checks that the data is received in HARQ process 1(FDD) / HARQ process 4 (1.28Mcps TDD)

d) The SS sends a HARQ NACK

e) The SS waits until the retransmission is received and checks that the data is received in HARQ process 1(FDD) / HARQ process 4 (1.28Mcps TDD)

f) The SS transmits 8 SDU’s of size 40 bytes (plus 1 byte RLC length indicator) on LCH 2

g) The SS waits until an SI is received.

h) The SS issues primary absolute grant corresponding to 1 RLC PDU of size 41 octets per TTI (signalling value 4), with Absolute Grant Scope set as "All HARQ processes"(FDD)/ The SS issues absolute grant corresponding to 1 RLC PDU of size 41 octets per TTI(1.28Mcps TDD).

i) The SS waits until data is received and checks that the data is received in HARQ process 2

j) The SS transmits 8 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

k) The SS waits until data is received and checks that the data is received in HARQ process 1(FDD) / HARQ process 4 (1.28Mcps TDD)

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 1 RLC PDU on LCH 1 | |
| 2 | → | | MAC-es PDU containing 1 RLC PDU | |
| 3 | ← | | HARQ NACK | |
| 4 | → | | MAC-es PDU containing 1 RLC PDU | |
| 5 | ← | | 8 RLC SDU's on LCH 2 | |
| 6 | → | | SI indicating data on LCH 2 | |
| 7 | ← | | Primary Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 8 | → | | MAC-es PDU containing 1 RLC PDU | PDU shall be received in HARQ process 2. This step is repeated until all 8 RLC SDU's are received on LCH2. |
| 9 | ← | | 8 RLC SDU's on LCH 1 | |
| 10 | → | | MAC-es PDU containing 1 RLC PDU | PDU shall be received in HARQ process 1(FDD) / HARQ process 4 (1.28Mcps TDD). This step is repeated until all 8 RLC SDU's are received on LCH1. |

Specific Message Contents

None

#### 7.1.6.4.1.5 Test requirements

1. In step 2 the SS shall receive a MAC-es PDU in HARQ process 1(FDD) / HARQ process 4 (1.28Mcps TDD)
2. In step 4 the SS shall receive a MAC-es PDU in HARQ process 1(FDD) / HARQ process 4 (1.28Mcps TDD)
3. In step 8 the SS shall receive all MAC-es PDUs in HARQ process 2
4. In step 10 the SS shall receive all MAC-es PDUs in HARQ process 1(FDD) / HARQ process 4 (1.28Mcps TDD)

### 7.1.6.4.2 MAC-es/e maximum number of retransmissions

#### 7.1.6.4.2.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6.4.2.2 Conformance requirement

Extract From 25.321 clause 11.8.1.4:

For each MAC-d flow, RRC configures MAC with a HARQ profile and a multiplexing list. Additionally, RRC configures MAC with a power offset for "Control-only" transmissions. This power offset and a maximum number of HARQ transmissions of 8 will be used to define a HARQ profile for "Control-only" transmissions which will be used, in case the Scheduling Information needs to be transmitted without any higher-layer data. The HARQ profile includes the power offset and maximum number of HARQ transmissions to use for this MAC-d flow. The multiplexing list identifies for each MAC-d flow(s), the other MAC-d flows from which data can be multiplexed in a transmission that uses the power offset included in its HARQ profile.

[..]

The E-TFC selection function shall provide this MAC-e PDU and transmission HARQ profile to the HARQ entity. The maximum number of HARQ transmissions and the power offset in this profile, shall be set respectively to the maximum of the Max Number of HARQ Transmissions of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission and to the Nominal Power Offset. The HARQ entity shall also be informed of whether the transmission includes Scheduling Information and whether this information is sent by itself or with higher-layer data.

Extract From 25.321 clause 11.9.1.4:

[..]

For each MAC-d flow, RRC configures MAC-e with a HARQ profile and multiplexing list. Additionally, RRC configures MAC with a power offset in case the Scheduling Information needs to be transmitted without any higher-layer data. The HARQ profile includes the power offset and maximum number of HARQ transmissions to use for this MAC-d flow. For 1.28 Mcps TDD, the HARQ profile also includes a retransmission timer attribute.The multiplexing list identifies for each MAC-d flow(s), the other MAC-d flows for which data can be multiplexed in a transmission that uses the power offset included in its HARQ profile.

[..]

The E-TFC selection function shall provide this MAC-e PDU and transmission HARQ profile to the HARQ entity. The selected E-TFC is also provided (Note: for 1.28Mcps TDD, the signalled transport block size index, i.e. E-TFCI, is the index of the selected E-TFC in the candidate set.). The maximum number of HARQ transmissions and the power offset in this profile shall be set respectively to the maximum of both the Max Number of HARQ Transmissions and of the power offset of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission. For 1.28 Mcps TDD, the retransmission timer shall be set to the maximum of the retransmission timer value of the HARQ profiles that are permitted to be multiplexed into the transmission. Each HARQ process which is associated with a buffer holding a MAC-e PDU for potential retransmission shall maintain the HARQ profile and the number of re-transmissions that have occurred. For 1.28 Mcps TDD, the HARQ process shall also maintain the value of RTX_TIMER.

Reference(s)

TS 25.321 clause 11.8.1.4, 11.9.1.4

#### 7.1.6.4.2.3 Test purpose

To verify that the UE, when 2 MAC d flows are multiplexed, follows the maximum number of retransmissions according to the HARQ profiles (different values configured for maximum number of retransmissions for each HARQ profile).

#### 7.1.6.4.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4d(FDD) /6.11.5.4.7.7(1.28Mcps TDD) using condition A15(FDD) /A14(1.28Mcps TDD) as specified in clause 9.1 of TS 34.108. The logical channel, transport channel, maximum number of retransmissions and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Max. retransmissions | Comment |
|---|---|---|---|---|
| 7 (LCH1) | 2 | 1 | 2 | RB25 |
| 8 (LCH2) | 3 | 2 | 4 | RB17 |
| NOTE: The RAB combination also includes SRBs on E-DCH which are not used in the testcase | | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for Scheduling Info – no grant | 500 ms(FDD) |
| T-WAIT | 200 ms (see 25.331 10.3.6.103)( 1.28Mcps TDD) |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| HARQ RV Configuration | rv0 |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3. The UE is not given any grant to transmit on E-DCH.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

c) The SS waits for an SI to be received that indicates that data is available

d) The SS issues an absolute grant that allows the UE to send with a rate sufficient to accommodate one RLC PDU per TTI (signalling value 4)

e) For each received transmission, the SS sends a negative HARQ acknowledgement and verifies that exactly 2 retransmissions are made by the UE.

f) The SS sets the absolute grant to zero for the UE(FDD only)

g) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

h) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

i) The SS waits for an SI to be received that indicates that data is available on both LCHs.

j) The SS issues an absolute grant that allows the UE to send with a rate sufficient to accommodate two RLC PDUs per TTI (signalling value 5)

k) For each received transmission, the SS sends a negative HARQ acknowledgement and verifies that exactly 4 retransmissions are made by the UE (maximum from the HARQ profiles for LCH1 and LCH2).

NOTE: The UE may send an SI after step g but this SI would only indicate data on LCH2. This SI will be ignored.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | ← | 1 RLC PDUs on LCH 1 | |
| 2 | → | SI showing that data is available for LCH 1 | |
| 3 | ← | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 4 | → | MAC es PDU containing 1 RLC PDU from LCH 1 | |
| 5 | ← | HARQ NACK | |
| 6 | SS | | SS sends a HARQ NACK for each received retransmission. After the second retransmission the SS waits 1 s to verify that no further retransmissions occur. |
| 7 | ← | Removal of absolute grant | Signalling value 1(FDD only) |
| 8 | ← | 1 RLC PDUs on LCH 2 | |
| 9 | ← | 1 RLC PDUs on LCH 1 | |
| 10 | → | Potential SI indicating data on LCH 2 | This SI is ignored by the SS |
| 11 | → | SI showing that data is available for LCH 1 and LCH 2 | |
| 12 | ← | Absolute grant allowing the UE to transmit 2 RLC PDUs per TTI | Signalling value 5 |
| 13 | → | MAC es PDU containing 1 RLC PDU from LCH 1 and 1 RLC PDU from LCH 2 | |
| 14 | ← | HARQ NACK | |
| 15 | SS | | SS sends a HARQ NACK for each received retransmission. After the fourth retransmission the SS waits 1 s to verify that no further retransmissions occur. |

Specific Message Contents

None

#### 7.1.6.4.2.5 Test requirements

1. In step 6, exactly 2 retransmission shall be performed by the UE.
2. In step 15, exactly 4 retransmissions shall be performed by the UE.

### 7.1.6.4.3 MAC-es/e Correct handling of MAC-es/e reset

#### 7.1.6.4.3.1 Definition and applicability

All UEs which support E-DCH (FDD) / All UEs which support E-DCH(1.28Mcps TDD).

#### 7.1.6.4.3.2 Conformance requirement

For FDD, if a reset of the MAC-es/e entity is requested by upper layers, the UE shall at the activation time indicated by higher layers:

- flush all HARQ processes.
- set CURRENT_TSN to 0 for all the logical channels mapped to E-DCH.

NOTE: In this case, the HARQ entity will not notify the Scheduling Information Reporting function if a flushed MAC-e PDU contained a triggered Scheduling Information (rely on periodic triggering).

For 1.28Mcps TDD, if a reset of MAC-es/e entity is requested by upper layers, the UE shall at the activation time indicated by higher layer:

- flush all HARQ processes;
- set CURRENT_TSN to 0 for all the logical channels mapped to E-DCH;
- stop all active timers (the timers include Retransmission timer, T_SI, T_WAIT, T_RUCCH);
- set CURRENT_RUCCH to 0.

Reference(s)

TS 25.321 clause 11.8.1.7, 11.9.1.6.

#### 7.1.6.4.3.3 Test purpose

The purpose of this test case is to verify that the UE correctly handles a MAC-es/e reset procedure.

#### 7.1.6.4.3.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4c (FDD) /6.11.5.4.7.6 (1.28Mcps TDD) using condition A12 (FDD) / A11 (1.28Mcps TDD) as specified in clause 9.1 of TS 34.108 as specified in clause 9.1 of TS 34.108. The following parameters are specific for this test case:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |

The following parameters are specific for this test case:

| Parameter | Value | |
|---|---|---|
| E-DCH MAC-d flow maximum number of retransmissions | 15 | |
| E-DCH MAC-d flow retransmission timer | >40 | Only for 1.28Mcps TDD |
| HARQ RV Configuration | rv0 | |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Test procedure

In this test procedure The UE is configured with one logical channel, with Id 7 (LCH1).

a) SS has not issued any scheduling grant for E-DCH to the UE.

b) SS transmits 1 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

c) SS waits until an SI is received.

d) The SS issues primary absolute grant corresponding to 1 RLC PDU of size 41 octets per TTI (signalling value 4), with Absolute Grant Scope set as "All HARQ process" (FDD) / The SS issues absolute grant corresponding to 1 RLC PDU of size 41 octets per TTI(1.28Mcps TDD).

e) SS starts receiving loop backed RLC PDU's.

f) The SS sends HARQ ACK.

g) SS transmits 1 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

h) SS starts receiving loop backed RLC PDU's.

i) The SS continuously sends HARQ NACKs. The UE continuously performs retransmissions of the same PDU.

j) The SS waits 40 ms after completing step h), then sends a Radio Bearer Reconfiguration message with the MAC-es/e reset indicator set to true and activation time set to "now".

k) SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

l) SS starts receiving loop backed RLC PDU's.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 1 RLC PDUs on LCH 1 | |
| 2 | → | | SI indicating data on LCH 1 | |
| 3 | ← | | Primary Absolute grant (FDD) / Absolute grant (1.28Mcps TDD) allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 4 | → | | MAC es PDU containing 1 RLC PDU's from LCH 1 | |
| 5 | ← | | SS sends HARQ ACK | |
| 6 | ← | | 1 RLC PDUs on LCH 1 | |
| 7 | → | | MAC es PDU containing 1 RLC PDU's from LCH 1 | |
| 8 | ← | | SS continuously sends HARQ NACKs | UE continuously performs retransmissions of the same PDU |
| 9 | ← | | SS triggers a Radio Bearer Reconfiguration | MAC-es/e reset indicator set to "TRUE" and activation time set to "now" |
| 10 | ← | | 1 RLC PDUs on LCH 1 | |
| 11 | → | | MAC es PDU containing 1 RLC PDUs from LCH 1 | |

Specific Message Contents

None

#### 7.1.6.4.3.5 Test requirements

1. In step 9, UE shall abort transmission of the MAC-e PDU
2. In step 11, UE shall start sending loop backed PDU, with one RLC PDU per TTI.
3. In step 11, The TSN field in the MAC-es PDU shall be set to zero.

## 7.1.6a E-DCH MAC-es/e for 3.84 and 7.68Mcps TDD

### 7.1.6a.1 MAC-es/e multiplexing

#### 7.1.6a.1.1 MAC-es/e multiplexing without RRC restrictions

##### 7.1.6a.1.1.1 Definition and applicability

All UEs which support E-DCH and 3.84Mcps or 7.68Mcps TDD.

##### 7.1.6a.1.1.2 Conformance requirement

From 25.321 clause 9.1.5:

In the case of E-DCH there are two MAC sublayers, MAC-e and MAC-es. MAC-es sits on top of MAC-e and receives PDUs directly from MAC-d. MAC-es SDUs (i.e. MAC-d PDUs) of the same size, coming from a particular logical channel can be multiplexed together into a single MAC-es payload. To this payload is prepended the MAC-es header (see subclause 9.2.4.1). The number of PDUs, as well as the DDI value identifying the logical channel, the MAC-d flow and the MAC-es SDU size are included as part of the MAC-e header. In case sufficient space is left in the E-DCH transport block or if Scheduling Information needs to be transmitted, an SI will be included at the end of the MAC-e PDU (see subclause 9.2.4.2). Multiple MAC-es PDUs, but only one MAC-e PDU can be transmitted in a TTI.

[…]

From 25.331 clause 8.6.5.18:

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

[…]

Reference(s)

TS 25.321 clause 9.1.5, TS 25.331 clause 8.6.5.18

7.1.6a.1.1.3 Test purpose

The purpose of this test case is to verify that the UE multiplexes data from different logical channels in the same TTI when no restriction on the multiplexing is configured by RRC.

7.1.6a.1.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4h using condition A15 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the testcase | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| T-RUCCH | 200ms (see 25.331 10.3.6.103) |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grants for E-DCH to the UE

b) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

c) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

d) The SS waits for an SI to be received that indicates that data is available on both logical channels (can be identified from the content of the SI)

e) The SS issues an absolute grant that allows the UE to send with a high rate (signalling value 10, code resource related value 0 (i.e. SF1) and timeslot resource related information set to indicate all timeslots on which PUCH can be allocated for TDD only; thus allowing a rate well above 2 SDUs/TTI)

f) The SS waits until data is received and verifies that data from the two LCHs is received in the same TTI

NOTE: The UE may send an SI after step 1 but this SI would only indicate data on LCH2. This SI will be ignored.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 1 RLC PDU on LCH 2 | |
| 2 | ← | | 1 RLC PDU on LCH 1 | |
| 3 | → | | Potential SI indicating data on LCH 2 | This SI is ignored by the SS |
| 4 | → | | SI indicating data on LCH 1 and LCH 2 | This can be verified from the indicated fraction of data on LCH1 |
| 5 | ← | | Absolute grant allowing UE to transmit on E-DCH | This grant must be sufficiently high to allow a rate corresponding to at least 2 RLC PDUs/TTI, signaling value 10 |
| 6 | → | | MAC e/es PDU containing 1 RLC PDU on LCH 1 and one RLC PDU on LCH 2 | |

Specific Message Contents

None

#### 7.1.6a.1.1.5 Test requirements

1. After step 2 the SS shall receive an SI indicating that data is available on LCH 1 and LCH 2 but no RLC PDUs shall be received

2. In step 6, the SS shall receive 1 RLC PDU on LCH 1 and one RLC PDU on LCH 2 in the same TTI

### 7.1.6a.1.2 MAC-es/e multiplexing with RRC restrictions

#### 7.1.6a.1.2.1 Definition and applicability

All UEs which support E-DCH and 3.84Mcps or 7.68Mcps TDD.

#### 7.1.6a.1.2.2 Conformance requirement

From 25.321 clause 9.1.5:

In the case of E-DCH there are two MAC sublayers, MAC-e and MAC-es. MAC-es sits on top of MAC-e and receives PDUs directly from MAC-d. MAC-es SDUs (i.e. MAC-d PDUs) of the same size, coming from a particular logical channel can be multiplexed together into a single MAC-es payload. To this payload is prepended the MAC-es header (see subclause 9.2.4.1). The number of PDUs, as well as the DDI value identifying the logical channel, the MAC-d flow and the MAC-es SDU size are included as part of the MAC-e header. In case sufficient space is left in the E-DCH transport block or if Scheduling Information needs to be transmitted, an SI will be included at the end of the MAC-e PDU (see subclause 9.2.4.2). Multiple MAC-es PDUs, but only one MAC-e PDU can be transmitted in a TTI.

[…]

From 25.331 clause 8.6.5.18:

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU’s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

[…]

Reference(s)

TS 25.321 clause 9.1.5, TS 25.331 clause 8.6.5.18

#### 7.1.6a.1.2.3 Test purpose

The purpose of this test case is to verify that the UE does not multiplex data from different logical channels in the same TTI when the multiplexing has been restricted by RRC.

7.1.6a.1.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4d using condition A15 as specified in clause 9.1 of TS 34.108.The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the test case | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| T-RUCCH | 200ms (see 25.331 10.3.6.103) |
| E-DCH MAC-d flow multiplexing list | 00000000 (See 25.331 10.3.5.1b) Note 1 |
| Note 1: This configuration means that no multiplexing is allowed | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grants for E-DCH to the UE

b) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

c) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

d) The SS waits for an SI to be received that indicates that data is available on both logical channels (can be identified from the content of the SI)

e) The SS issues an absolute grant that allows the UE to send with a high rate (signalling value 10, code resource related value 0 (i.e. SF1) and timeslot resource related information set to indicate all timeslots on which PUCH can be allocated; thus allowing a rate well above 2 SDUs/TTI)

f) The SS waits until data is received and verifies that only data from LCH1 is received in the first TTI

g) The SS verifies that data from LCH2 is received (in a separate TTI from the data from LCH1)

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | ← | 1 RLC PDU on LCH 2 | |
| 2 | ← | 1 RLC PDU on LCH 1 | |
| 3 | → | Potential SI indicating data on LCH 2 | This SI is ignored by the SS |
| 4 | → | SI indicating data on LCH 1 and LCH 2 | This can be verified from the indicated fraction of data on LCH1 |
| 5 | ← | Absolute grant allowing UE to transmit on E-DCH | This grant must be sufficiently high to allow a rate corresponding to at least 2 RLC PDUs/TTI, signaling value 10 |
| 6 | → | MAC e/es PDU containing 1 RLC PDU on LCH 1 | |
| 7 | → | MAC e/es PDU containing 1 RLC PDU on LCH 2 | |

Specific Message Contents

None

#### 7.1.6a.1.2.5 Test requirements

1. After step 2 the SS shall receive an SI indicating that data is available on LCH 1 and LCH 2 but no RLC PDUs shall be received

2. In step 6, the SS shall receive 1 RLC PDU on LCH 1 but no data from LCH 2

3. In step 7, the SS shall receive 1 RLC PDU on LCH 2 but no data from LCH 1

### 7.1.6a.1.3 Correct settings of MAC-es/e header fields

#### 7.1.6a.1.3.1 Definition and applicability

All UEs which support E-DCH and 3.84Mcps or 7.68Mcps TDD.

#### 7.1.6a.1.3.2 Conformance requirement

Extract from 25.321:

[…]

- Transmission Sequence Number (TSN):
  The TSN field provides the transmission sequence number for the MAC-es PDU. This information is used for reordering purposes to support in-sequence delivery to higher layers. The length of the TSN field is 6 bits.

[…]

- Data description indicator (DDI):
  The DDI field identifies the logical channel, MAC-d flow and size of the MAC-d PDUs concatenated into the associated MAC-es PDU. The mapping between the DDI values and the logical channel ID, MAC-d flow and PDU size is provided by higher layers. The length of the DDI field is 6 bits.

  - For FDD: When, due to the quantization in the transport block sizes that can be supported or triggering of the Scheduling Information, the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 24 bits, the DDI value [111111] shall be appended at the end of the MAC-e header and a Scheduling Information shall be concatenated into this MAC-e PDU, where DDI value [111111] indicates that there is a Scheduling Information concatenated in this MAC-e PDU. Otherwise, if the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 18 bits, a Scheduling Information shall be concatenated into this MAC-e PDU. In any other case it is understood that another MAC-es PDU or Scheduling Information does not fit and it is therefore not necessary to reserve room in the transport block for an additional DDI field.

  - For TDD: When, due to the quantization in the transport block sizes that can be supported or triggering of the Scheduling Information (due to timer expiry, see subclauses 11.9.1.4a and 11.9.1.5), the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 29bits, the DDI value [111111] shall be appended at the end of the MAC-e header and a Scheduling Information shall be concatenated into this MAC-e PDU, where DDI value [111111] indicates that there is a Scheduling Information concatenated in this MAC-e PDU. Otherwise, if the size of the data plus header is less than or equal to the TB size of the E-TFC selected by the UE minus 23 bits, a Scheduling Information shall be

concatenated into this MAC-e PDU. In any other case it is understood that another MAC-es PDU or Scheduling Information does not fit and it is therefore not necessary to reserve room in the transport block for an additional DDI field.

- Number of MAC-d PDUs (N):
  The number of consecutive MAC-d PDUs corresponding to the same DDI value. The length of the N field is 6 bits.

Reference(s)

TS 25.321 clauses 9.2.4.1, 9.2.4.2

### 7.1.6a.1.3.3 Test purpose

The purpose of this test case is to verify that the UE sets the MAC-es/e header fields in a correct way.

### 7.1.6a.1.3.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4h using condition A15 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the testcase | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| T-RUCCH | 200ms (see 25.331 10.3.6.103) |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits 4 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

c) The SS issues an absolute grant that allows the UE to send with a high rate (signalling value 10, code resource related value 0 (i.e. SF1) and timeslot resource related information set to indicate all timeslots on which PUCH can be allocated, allowing rates well above 5 SDUs/TTI)

d) The SS waits until data is received and checks the values of the header parameters

e) The SS removes the scheduling grant for E-DCH for the UE

f) The SS transmits three SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

g) The SS transmits two SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

h) The SS issues an absolute grant that allows the UE to send with a high rate (signalling value 10, allowing rates well above 5 SDUs/TTI)

i) The SS waits until data is received and checks the values of the header parameters

j) The SS transmits two SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

k) The SS waits until data is received and checks the values of the header parameters

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 4 RLC PDUs on LCH 2 | |
| 2 | → | | SI indicating data on LCH 2 | |
| 3 | ← | | Absolute grant allowing UE to transmit on E-DCH | This grant must be sufficiently high to allow a rate corresponding to at least 5 RLC PDUs/TTI |
| 4 | → | | 1 MAC-es PDU containing 4 RLC PDUs on LCH 2 | SS checks header fields |
| 5 | ← | | Removal of scheduling grant for UE | |
| 6 | ← | | 3 RLC PDUs on LCH 2 | |
| 7 | ← | | 2 RLC PDUs on LCH 1 | |
| 8 | → | | Potential SI indicating data on LCH 2 | This SI is ignored by the SS |
| 8a | | | SI indicating data on LCH1 and LCH 2 | |
| 9 | ← | | Absolute grant allowing UE to transmit on E-DCH | This grant must be sufficiently high to allow a rate corresponding to at least 5 RLC PDUs/TTI, |
| 10 | → | | 2 MAC-es PDUs containing 2 RLC PDUs on LCH 1 and 3 RLC PDUs on LCH 2 respectively | SS checks header fields |
| 11 | ← | | 2 RLC PDUs on LCH 2 | |
| 12 | → | | 1 MAC-es PDU containing 2 RLC PDUs on LCH 2 | SS checks header fields |

Specific Message Contents

None

#### 7.1.6a.1.3.5 Test requirements

1. After step 4, the SS shall receive 1 MAC-es PDU shall be received where:
   - The TSN is set to 0, DDI is set to 6 and N is set to 4
2. After step 10, the SS shall receive 2 MAC-es PDUs shall be received where:
   - For MAC-es PDU 1: The TSN is set to 0, DDI is set to 5 and N is set to 2
   - For MAC-es PDU 2: The TSN is set to 1, DDI is set to 6 and N is set to 3
3. After step 12, the SS shall receive 1 MAC-es PDU where:
   - The TSN is set to 2, DDI is set to 6 and N is set to 2

## 7.1.6a.2 MAC-es/e – Scheduling

### 7.1.6a.2.1 Correct settings of MAC-es/e scheduling information

#### 7.1.6a.2.1.1 Definition and applicability

All UEs which support E-DCH and 3.84Mcps or 7.68Mcps TDD.

7.1.6a.2.1.2 Conformance requirement

This control information is used by UEs to indicate to the Node B the amount of resources they require. Scheduling Information is sent via the E-PUCH in the MAC-e header when the UE is granted resource and by the E-RUCCH when no resource has been granted. Scheduling Information consists of three components as defined in subclause 9.2.6.3.3 -

- Buffer Information: This consists of:
  - Highest priority Logical Channel (HLID)
  - Total E-DCH Buffer Status (TEBS)
  - Highest priority Logical channel Buffer Status (HLBS)

- UE Power Headroom (UPH): The UPH field indicates the ratio of the maximum UE transmission power and the calculated UE transmit power defined as in [18] that would result for $\beta_e$ equal to 0. The length of UPH is 5 bits.

- Serving and Neighbour Cell Pathloss (SNPL): This may be used by the Node-B to assist with its estimation of the degree of intercell interference each UE will generate and hence the absolute grant power value and physical resources to assign . The length of SNPL is 5 bits.

The length of TEBS field is 5 bits, the values taken by TEBS are shown in Table 9.2.5.3.2-1[in TS25.331]. The length of HLBS is 4 bits, the values taken by HLBS are shown in table 9.2.5.3.2-2 [in TS25.331].

[…]

If a UE has no Grant and the TEBS becomes larger than zero, the transmission of Scheduling Information shall be sent via E-RUCCH.

If the UE has a Grant then Scheduling Information may be included in the MAC-e PDU according to subclause 9.2.4.2. If the UE has a Grant and scheduling information delay timer ≥ T-SCHED then the UE shall include Scheduling Information in the next MAC-e PDU sent and the scheduling information delay timer shall be restarted. If the UE does not receive any Grant before the scheduling information delay timer > T-SCHED + T-RUCCH /2 then the UE shall send scheduling information via the E-RUCCH and shall stop and reset the scheduling information delay timer.

Reference(s)

TS 25.321 clause 9.2.6.3, 11.9.1.4a

7.1.6a.2.1.3 Test purpose

The purpose of this test case is to verify that the UE sends the E-DCH scheduling information with correct content and with correct triggers.

7.1.6a.2.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4h using condition A15 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the testcase | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| T-RUCCH | 200 ms (see 25.331 10.3.6.103) Note 1 |
| T-SCHED | 160ms (see 25.331 10.3.6.103) |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 2 |
| E-DCH Transport Block Size Table | 0 |
| Note 1: The persistence value will result in the time between sending scheduling information on the E-RUCCH to obe variable, however only a single ASC is defined and thus the persistence is configured to 1.<br>Note 2: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS waits for at least 1000 ms and verifies that no SI is received

c) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

d) The SS waits until an SI is received at time **T0**

e) The SS waits until the next SI is received at time **T1** and checks the content

f) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1 at time **T2**

g) The SS waits until the next SI is received at time **T3** and checks the content

h) The SS issues an absolute grant that allows the UE to transmit 1 SDUs/TTI

i) The SS waits until all data has been received

j) The SS removes the scheduling grant for the UE

k) The SS transmits 24 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

l) The SS issues an absolute grant that allows the UE to transmit 1 SDUs/TTI

m) The SS waits until the next SI is received with payload at time **T4**

n) The SS waits until the next SI is received with payload at time **T5**

o) The SS waits until all data is received

p) Void

q) The SS issues an absolute grant that allows the UE to transmit 5 SDUs/TTI

r) The SS transmits 5 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

s) The SS waits until the 5 SDUs are received and checks that contain both a regular SI and the special DDI (value = 63) NOTE

NOTE: 5 336 bit PDUs and 18 bit Mac-e/es header require a TB size of 1698 bits. The nearest higher TB size is 1730, which is able to additionally hold an SI + the special DDI.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | After the radio bearer has been established the SS waits 1000 ms. No SI shall be received during this time |
| 2 | ← | | 1 RLC PDUs on LCH 2 | |
| 3 | → | | SI indicating data on LCH 2 | Time **T0** |
| 4 | → | | SI indicating data on LCH 2 | Time **T1** |
| 5 | ← | | 1 RLC PDUs on LCH 1 | Time **T2** |
| 6 | → | | SI indicating data on LCH 1 and LCH 2 | Time **T3.** Presence of data on LCH 1 and LCH 2 can be verified from the indicated fraction of data on LCH1 |
| 7 | ← | | Absolute grant allowing the UE to transmit 1 RLC PDUs per TTI | |
| 8 | → | | Data on LCH 1 and LCH 2 | |
| 8a | ← | | Removal of absolute grant | |
| 9 | ← | | 24 RLC PDUs on LCH 1 | |
| 9a | ← | | Absolute grant allowing the UE to transmit 1 RLC PDUs per TTI | |
| 10 | → | | Data and SI | Time **T4** |
| 11 | → | | Data only | |
| 12 | → | | Data and SI | Time **T5** |
| 13 | → | | Data only | |
| 14 | | SS | | After all data has been received, SS waits 1000ms. No SI shall be received during this time. |
| 15 | ← | | void | |
| 16 | → | | void | |
| 17 | ← | | Absolute grant allowing the UE to transmit 5 RLC PDUs per TTI | |
| 18 | ← | | 5 RLC PDUs on LCH 1 | |
| 19 | → | | Data and SI | The received transport block shall in addition to the 5 PDUs contain a regular SI and the special DDI (value = 63).<br>As there is no data left in buffers, TEBS is set as 0, HLID is set as '0000' and HLBS is set as 0. |
| NOTE 1: General timer tolerance as defined by 34.108 sub-clause 4.2.3 applies.<br>NOTE 2: Step 10 and 11 can occur in any order. SS should accept these PDUs in any order and verify the time difference between T5 and T4 as per the test requirement. | | | | |

Specific Message Contents

None

7.1.6a.2.1.5 Test requirements

1. In step 1 the SS shall not receive any SI since the UE buffer is empty
2. In step 3 the SS shall receive an SI (content ignored)
3. In step 4 the SS shall receive an SI indicating
   - Total E-DCH Buffer Status (TEBS) Index = 6 ($32 < TEBS \leq 42$).
   - Highest priority Logical channel ID (HLID) = LCH 2.
   - Highest Priority Logical Channel Buffer Status (HLBS) Index = 15 ($82\% < HLBS \leq 100\%$).
4. In step 6 the SS shall receive an SI indicating

- Total E-DCH Buffer Status (TEBS) Index = 9 (73 < TEBS ≤ 97).
- Highest priority Logical channel ID (HLID) = LCH 1.
- Highest Priority Logical Channel Buffer Status (HLBS) Index = 12 (45% < HLBS ≤ 55%).

5. T1-T0 shall equal 200 ms
6. T3-T2 shall be less then 120 ms. Note 1.
7. T5-T4 shall equal 160ms
8. In step 14, the SS shall not receive any SI since the UE buffer is empty.
9. In step 19, the received transport block shall in addition to the payload include a regular SI and the special DDI (value = 63). TEBS, HLID and HLBS shall be set as zero.

NOTE 1: 120ms = 2 TTI(for Data to be transmitted from RLC to MAC) + Maximum UE test loop delay ( 10*TTI according to 34.109=100ms).

### 7.1.6a.2.2 Correct settings of MAC-es/e scheduling information when scheduling delay timer expires

#### 7.1.6a.2.2.1 Definition and applicability

All UEs which support E-DCH and 3.84Mcps or 7.68Mcps TDD.

#### 7.1.6a.2.2.2 Conformance requirement

If the UE has a Grant then Scheduling Information may be included in the MAC-e PDU according to subclause 9.2.4.2. If the UE has a Grant and scheduling information delay timer ≥ T-SCHED then the UE shall include Scheduling Information in the next MAC-e PDU sent and the scheduling information delay timer shall be restarted. If the UE does not receive any Grant before the scheduling information delay timer > T-SCHED + T-RUCCH /2 then the UE shall send scheduling information via the E-RUCCH and shall stop and reset the scheduling information delay timer.

Reference(s)

TS 25.321 clause 11.9.1.4a

#### 7.1.6a.2.2.3 Test purpose

The purpose of this test case is to verify that the UE sends the E-DCH scheduling information using the correct trigger when a previous grant has been sent to the UE so the scheduling information delay timer is running but no subsequent grant is sent to the UE.

#### 7.1.6a.2.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4h using condition A15 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the testcase | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| T-RUCCH | 200 ms (see 25.331 10.3.6.103) Note 1 |
| T-SCHED | 160ms (see 25.331 10.3.6.103) |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 2 |
| Note 1: The persistence value will result in the time between sending scheduling information on the E-RUCCH to obe variable, however only a single ASC is defined and thus the persistence is configured to 1.<br>Note 2: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS waits for at least 1000 ms and verifies that no SI is received

c) The SS transmits 10 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

d) The SS waits until an SI is received at T0.

h) The SS issues an absolute grant that allows the UE to transmit 1 SDUs/TTI once every 40ms.

i) The SS continues to send absolute grants while waiting to receive a SI from the UE sent in a MAC-e PDU at time T1.

j) The SS stops issuing absolute grants to the UE.

k) The SS waits for a SI from the UE at T2.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | SS | | | After the radio bearer has been established the SS waits 1000 ms. No SI shall be received during this time |
| 2 | ← | | 10 RLC PDUs on LCH 2 | |
| 3 | → | | SI indicating data on LCH 2 | Time **T0** |
| 4 | ← | | Absolute grant allowing the UE to transmit 1 RLC PDUs per TTI | This grant is made every 40ms until step 6. |
| 5 | → | | Data on LCH 2 (no SI included) | |
| 6 | → | | Data on LCH 2 (with SI included) | Time **T1** |
| 7 | | | SS stops sending absolute grants to the UE | |
| 8 | → | | E-RUCCH which contains SI | Time **T2** |

Specific Message Contents

None

7.1.6a.2.2.5 Test requirements

1. In step 1 the SS shall not receive any SI since the UE buffer is empty

2. In step 3 the SS shall receive an SI (content ignored)

3. T1-T0 shall equal 160 ms

4. T2-T1 shall be less then 260 ms.

### 7.1.6a.2.3 MAC-es/e correct handling of scheduled transmissions

#### 7.1.6a.2.3.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6a.2.3.2 Conformance requirement

Extract from 25.321 clause 9.2.6.2.1:

The Absolute Grant is sent on downlink on a set of configured E-AGCHs from the serving E-DCH cell and allows the Node B scheduler to directly adjust the granted rate and assigned physical resources for UEs under its control. The physical resource assignment indicates to the UE the maximum amount of uplink resources that it may use for a scheduled transmission.

[…]

The absolute grant message itself includes multiple fields that are multiplexed together into between 14 and 28 bits for 3.84/7.68 Mcps TDD and between 23 and 26 bits for 1.28 Mcps TDD (depending on the system configuration) inside the MAC-e of the Node B and then submitted to the physical layer for transmission on the E-AGCH. These fields are:

- Absolute Grant Value:
  For TDD, this field indicates the maximum E-DCH traffic to reference power ratio (E-PUCH/$P_{e\text{-}base}$) per TDD resource unit that the UE is allowed to use on the E-DCH resources associated with the Absolute Grant. A TDD resource unit is defined as one sixteenth of the OVSF codespace in one timeslot. The length of the Absolute Grant Value field for TDD is 5 bits.

- Channelisation Code:
  This field describes the code component of the physical resource grant. For 1.28/3.84 Mcps TDD it comprises an enumerated value of length 5 bits indicating which node on the OVSF code tree has been allocated. For 7.68 Mcps TDD it comprises an enumerated value of length 6 bits indicating which node on the OVSF tree has been allocated. The mapping between the allocated OVSF and the enumerated node 0…30 for 1.28/3.84 Mcps and 0…62 for 7.68 Mcps is as given in [19].

- Timeslot Resource Related Information:
  This field describes the timeslot component of the physical resource grant and comprises a bitmap of length $n_{TRRI}$ indicating which of the timeslots configured for E-DCH use by RRC have been allocated with the LSB corresponding to the lowest numbered E-DCH timeslot and the MSB corresponding to the highest numbered timeslot. The length of the TRRI field ($n_{TRRI}$) is 5 bits for 1.28 Mcps TDD and is configurable by RRC on a per-cell basis between 1 and 12 bits for 3.84/7.68 Mcps TDD.

- Resource Duration Indicator:
  Optionally, RRC may configure, on a per-cell basis the presence of a resource duration indicator field on E-AGCH for TDD. If configured as present in a cell, 3 bits are used to indicate the number of TTI's allocated and the spacing between the allocated TTIs via a single grant according to table 9.2.6.2.1-2. If the field is configured as not present on E-AGCH in the cell, a value of 0 is implicitly assumed by the UE corresponding to 1 TTI.

**Table 9.2.6.2.1-2 – Resource Duration Indicator (RDI) interpetation**

| Resource Duration Indicator (3 bits) | TTIs allocated | TTI spacing |
|---|---|---|
| 0 | 1 | 1 |
| 1 | 2 | 1 |
| 2 | 2 | 2 |
| 3 | 2 | 4 |
| 4 | 4 | 1 |
| 5 | 4 | 2 |
| 6 | 4 | 4 |
| 7 | 8 | 1 |

- E-AGCH Cyclic Sequence Number (ECSN):
  The ECSN is a 3-bit field used to assist the UE with outer-loop power control of E-AGCH (cf. HCSN for HS-SCCH).

- E-HICH Indicator(EI) (1.28 Mcps TDD only)
  The E-HICH indicator (EI) consists of 2 bits and is used to indicate which E-HICH will convey the acknowledgement indicator for the scheduled UEs.

- E-UCCH Number Indicator (ENI) (1.28 Mcps TDD only)
  The E-UCCH Number Indicator (ENI) is a 3-bit field used to indicate the detailed number of E-UCCH.

[…]

The UE determines whether each TTI is available for scheduled or non-scheduled transmissions.

The parameters applicable to a transmission are timeslots, code and maximum power. In the case of non-scheduled transmission, these parameters are set by RRC and retransmissions and/or new transmissions may occur in frames at intervals set by RRC. For scheduled transmission, the parameters are received via the E-AGCH.

Reference(s)

TS 25.321 clauses 9.2.6.2.1., 11.9.1.3

### 7.1.6a.2.3.3 Test purpose

To verify that the UE transmits different amount of data when the absolute grant varies.

### 7.1.6a.2.3.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4f using condition A12 as specified in clause 9.1.2 of TS 34.108. The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for scheduling info | No periodic scheduling info |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

Test procedure

Logical Channel with Id 7 (LCH 1) is mapped to MAC-d flow 2 with priority 1.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits 4 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

c) SS waits until an SI is received

d) The SS issues an absolute grant that allows the UE to transmit 1 SDU/TTI (absolute grant signalling value 10, Timeslot Resource Related Information 0001, channelisation code 1, Resource Duration Indicator 4)

e) The SS waits until data is received and checks that only 1 SDU/TTI is transmitted

f) The SS waits until all 4 SDUs have been received

g) The SS transmits 8 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

h) SS waits until an SI is received

i) The SS issues an absolute grant that allows the UE to transmit 4 SDUs/TTI (absolute grant signalling value 10, Timeslot Resource Related Information 1111, channelisation code 1, Resource Duration Indicator 1)

j) The SS waits until data is received and checks that only 4 SDUs/TTI is transmitted

k) The SS waits until all 8 SDUs have been received

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 4 RLC PDUs on LCH 1 | |
| 1a | → | | SI indicating data on LCH 1 | |
| 2 | ← | | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | |
| 3 | → | | MAC es PDU containing 1 RLC PDU, 4 TTIs in a row | |
| 4 | ← | | 8 RLC PDUs on LCH 1 | |
| 4a | → | | SI indicating data on LCH 1 | |
| 5 | ← | | Absolute grant allowing the UE to transmit 4 RLC PDUs per TTI | |
| 6 | → | | MAC es PDU containing 4 RLC PDUs, 2 TTIs in a row | |

Specific Message Contents

None

#### 7.1.6a.2.3.5 Test requirements

1. In step 3, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU. This shall happen 4 TTIs in a row.
2. In step 6, the SS shall receive 1 MAC-es PDU containing 4 RLC PDUs. This shall happen 2 TTIs in a row.

### 7.1.6a.2.4 MAC-es/e combined non-scheduled and scheduled transmissions

#### 7.1.6a.2.4.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6a.2.4.2 Conformance requirement

From 25.321 clause 11.9.1.4:

The transmission format and data allocation shall follow the requirements below:

[…]

- - RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays;

[…]

- The UE shall determine whether to take scheduled or non-scheduled grants into account in the upcoming transmission. If neither are supposed to be taken into account (i.e. the TTI is not available for non-scheduled transmission and no Grant for scheduled transmission has been received) then no grant shall be assumed to exist. If a grant exists then the transmission format and data allocation shall follow the requirements below;

[…]

- For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the corresponding non-scheduled grant. If the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the Serving Grant;

From 25.331 clause 8.6.5.18:

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e or MAC-i PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

[…]

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e or MAC-i PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (for 3.84 Mcps TDD and 7.68 Mcps TDD, as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity"; for 1.28 Mcps TDD, as determined from the IEs "Activation Time", "Subframe number", "Resource Duration" and "Resource Periodicity", and the calculation of assigned Non-scheduled transmission grant is specified in subclause 8.6.6.16a).

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDUs for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH (see [15]).

Reference(s)

TS 25.321 clause 11.9.1.4 , TS 25.331 clause 8.6.5.18

### 7.1.6a.2.4.3 Test purpose

To verify that the UE is able to handle combined non-scheduled and scheduled transmissions.

### 7.1.6a.2.4.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4h using condition A15 as specified in clause 9.1 of TS 34.108. The following parameters are specific for this test case with the logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the test case | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size for LCH 1 set to (25*41)-2 octets and LCH 2 size set to 39 octets.

Test procedure

The UE is configured with a non-scheduled grant on MAC-d flow 2, and the value of the "Max MAC-e PDU contents size" is 500 bits. The UE is not given any grant to transmit on MAC-d flow 3 (LCH 2).

a) The SS has not issued any grant for E-DCH on MAC-d flow 3 (LCH 2)

b) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH 2

c) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

d) The SS waits until data is received and checks that the first TTI contains only data on LCH 1

e) The SS issues an absolute grant that allows the UE to send with a high rate on LCH 2 (well above 1 SDU/TTI) immediately after the previous step (i.e. not more than one TTI after the first data on LCH 1 has been looped back).

f) The SS receives data from the two logical channels LCH 1 and LCH 2 in one TTI.

g) The SS removes the scheduling grant for E-DCH for the UE

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 1 RLC PDU on LCH 2 | SDU size is 40 bytes |
| 2 | ← | | 1 RLC PDU on LCH 1 | SDU size is 40 bytes |
| 2a | → | | SI indicating data on LCH 2 | Step 2a and 3 can happen in any order |
| 3 | → | | MAC es PDU containing 1 RLC PDU on LCH 1 | |
| 4 | ← | | Absolute grant allowing the UE to transmit with high data rate on LCH 2 | Signalling value 31 |
| 5 | → | | MAC es PDU containing 1 RLC PDU on LCH 1 and 1 RLC PDU on LCH 2 | Before and after this step, SS continues to receive 1 RLC PDU on LCH 1 per TTI, until complete SDU consisting of 25 PDU's is received. |
| 6 | ← | | Removal of absolute grant | Signalling value 1 |

Specific Message Contents

None

7.1.6a.2.4.5 Test requirements

1. In step 3, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU on LCH 1.

2. In step 5, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU on LCH 1 and 1 RLC PDU on LCH 2 within the same TTI.

## 7.1.6a.2.5 MAC-es/e Correct handling of HARQ profile power offsets

### 7.1.6a.2.5.1 Definition and applicability

All UEs which support E-DCH.

### 7.1.6a.2.5.2 Conformance requirement

In TDD, rules for E-TFC selection shall be applied as provided below.

UEs shall apply E-TFC selection when invoked by the HARQ entity (see subclause 11.9.1.1.1).

For each MAC-d flow, RRC configures MAC-e with a HARQ profile and multiplexing list. Additionally, RRC configures MAC with a power offset in case the Scheduling Information needs to be transmitted without any higher-layer data. The HARQ profile includes the power offset and maximum number of HARQ transmissions to use for this MAC-d flow. For 1.28 Mcps TDD, the HARQ profile also includes a retransmission timer attribute.The multiplexing list identifies for each MAC-d flow(s), the other MAC-d flows for which data can be multiplexed in a transmission that uses the power offset included in its HARQ profile.

RRC can control the scheduling of uplink data by giving each logical channel a priority between 1 and 8, where 1 is the highest priority and 8 the lowest. E-TFC selection in the UE shall be done in accordance with the priorities indicated by RRC. Logical channels have absolute priority, i.e. the UE shall maximise the transmission of higher priority data.

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays.

The UE shall determine whether to take scheduled or non-scheduled grants into account in the upcoming transmission. If neither are supposed to be taken into account (i.e. the TTI is not available for non-scheduled transmission and no Grant for scheduled transmission has been received) then no grant shall be assumed to exist. If a grant exists then the transmission format and data allocation shall follow the requirements below.

For each configured MAC-d flow, a given E-TFC can be in any of the following states:

- Supported state;

- Blocked state.

The E-TFC states are derived according to the following:

- If the transmission is a retransmission then only the E-TFC with the same block size as the original transmission may be in the supported state.

- For 1.28Mcps TDD, only E-TFCs from the E-TFCS (the table of TB sizes) which are consistent with the UE's E-DCH capability category shall be considered for the transmission;

- Only E-TFCs from the E-TFCS (the table of TB sizes) which can be supported by (exactly) the number of slots assigned by the grant shall be considered for the transmission;

- Only E-TFCs which result (for the granted timeslot and code physical resources) in a coderate lying between the maximum and minimum (inclusive) allowable coderates set by RRC [7] shall be considered for the transmission {note: the definition of the term “coderate” as used here is the same as that provided by [18]}. This shall be evaluated for both QPSK and 16-QAM modulation;

- $P_{HARQ}$, the HARQ profile power offset is selected (the HARQ profile for the transmission shall be selected among the HARQ profiles of MAC-d flows on which the highest priority logical channels with available data are mapped; Scheduling Information power offset shall be used when Scheduling Information is transmitted without any higher-layer data.)

- Only E-TFCs whose calculated transmission power requirement $P_{E\text{-}PUCH}$ (see [18]) is less than or equal to the available or granted power shall be considered for the transmission (note: this requirement does not apply in the case of a retransmission on non-scheduled resources).

For 3.84Mcps/7.68Mcps TDD, from those E-TFCs in the supported state the UE determines the largest block size that it is permitted to transmit within the given constraints.

For 1.28Mcps TDD, from those E-TFCs in the supported state, UE determines a candidate set with up to 64 E-TFCs, including the largest 63 E-TFCs, in addition to the E-TFC dedicated for SI. If the number of E-TFCs in the supported state is not greater than 63, all the E-TFCs in the supported state shall be included in the candidate set. The E-TFCs in the candidate set shall then be re-indexed in an ascending order and numbered from 0 to (Nmax -1), where Nmax is the number of E-TFC in the candidate set. From the candidate set the UE determines the largest block size that is permitted to transmit within the given constraints.

The UE shall select the modulation type associated with the determined E-TFC (note: if an E-TFC is supported by both QPSK and 16-QAM then 16-QAM modulation shall be used if its power requirement ($P_{E\text{-}PUCH}$) is lower than the power requirement for QPSK, otherwise QPSK modulation shall be used).

Data allocation shall then be performed in accordance with the following:

- For all logical channels, if the logical channel belongs to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the corresponding non-scheduled grant. If the logical channel does not belong to a non-scheduled MAC-d flow, its data shall be considered as available up to the largest block size determined for the Serving Grant;

- The data allocation shall maximise the transmission of higher priority data;

- The UE shall select the E-TFC, SF and modulation which minimises the power used (3.84/7.68 Mcps TDD only);

- The UE shall select the E-TFC and modulation which minimises the power used (1.28 Mcps TDD only);

Once an appropriate E-TFC and data allocation are found according to the rules above, the "Multiplexing and TSN Setting" entity shall generate the corresponding MAC-e PDU.

In 1.28Mcps TDD, when Scheduling Information is triggered by timer per subclause 11.9.1.5, the E-TFC selection and data-allocation process shall assume that Scheduling Information has a priority higher than any other logical channel.

The E-TFC selection function shall provide this MAC-e PDU and transmission HARQ profile to the HARQ entity. The selected E-TFC is also provided (Note: for 1.28Mcps TDD, the signalled transport block size index, i.e. E-TFCI, is the index of the selected E-TFC in the candidate set.). The maximum number of HARQ transmissions and the power offset in this profile shall be set respectively to the maximum of both the Max Number of HARQ Transmissions and of the power offset of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission. For 1.28 Mcps TDD, the retransmission timer shall be set to the maximum of the retransmission timer value of the HARQ profiles that are permitted to be multiplexed into the transmission. Each HARQ process which is associated with a buffer holding a MAC-e PDU for potential retransmission shall maintain the HARQ profile and the number of re-transmissions that have occurred. For 1.28 Mcps TDD, the HARQ process shall also maintain the value of RTX_TIMER.

Reference(s)

TS 25.321 clause 11.9.1.4

### 7.1.6a.2.5.3 Test purpose

The purpose of this test case is to verify that the UE applies different HARQ profiles from different MAC-d flows to E-DCH transmissions accordingly and in case data from two MAC-d flows is transmitted in the same E-DCH transmission, the UE selects the correct power offset.

### 7.1.6a.2.5.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4h using condition A15 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the testcase | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| E-DCH MAC-d flow multiplexing list for MAC-d flow 2 | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| E-DCH MAC-d flow multiplexing list for MAC-d flow 3 | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| E-DCH MAC-d flow power offset for flow 2 | 3dB (see 25.331 subclause 10.3.5.1b) |
| E-DCH MAC-d flow power offset for flow 3 | 0dB (see 25.331 subclause 10.3.5.1b) |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB 25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) SS has not issued any scheduling grant for E-DCH to the UE.

b) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

c) SS waits until an SI is received.

d) The SS issues absolute grant corresponding to 1 RLC PDU of size 41 octets per TTI when the Mac-d flow power offset is 3dB (signalling value 5), with Absolute Grant Scope set as "All HARQ processes".

e) SS starts receiving loop backed RLC PDU’s.

f) The SS stops issueing absolute grants to the UE.

g) SS transmits 4 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2.

h) SS waits until an SI is received.

i) The SS issues primary absolute grant corresponding to 2 RLC PDUs of size 41 octets per TTI when the Mac-d flow power offset is 0dB (signalling value 5), with Absolute Grant Scope set as "All HARQ processes".

j) SS starts receiving loop backed RLC PDU’s.

k) The SS issues primary absolute grant corresponding to “ZERO GRANT”, with Absolute Grant Scope set as "All HARQ processes".

l) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH2.

m) SS waits until an SI is received.

n) SS transmits 2 SDUs of size 40 bytes (plus 1 byte RLC length indicator) on LCH1.

o) SS waits until an SI is received.

p) The SS issues primary absolute grant corresponding to 3 RLC PDUs of size 41 octets per TTI when the Mac-d flow power offset is 3dB (signalling value 9), with Absolute Grant Scope set as "All HARQ processes".

q) SS starts receiving loop backed RLC PDU’s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 2 RLC PDUs on LCH 1 | |
| 2 | → | | SI indicating data on LCH 1 | |
| 3 | ← | | Primary Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 5 |
| 4 | → | | MAC es PDU containing 1 RLC SDU from LCH 1 | This step is repeated until all the RLC SDUs are transmitted |
| 5 | ← | | 4 RLC PDUs on LCH 2 | |
| 6 | → | | SI indicating data on LCH 2 | |
| 7 | ← | | Primary Absolute grant allowing the UE to transmit 2 RLC PDU per TTI | Signalling value 5 |
| 8 | → | | MAC es PDU containing 2 RLC SDU from LCH 2 | This step is repeated until all the RLC SDUs are transmitted |
| 8 | ← | | Primary Absolute grant set to 'ZERO GRANT' and scope 'All HARQ Processes' | |
| 10 | ← | | 2 RLC PDUs on LCH 2 | |
| 11 | → | | SI indicating data on LCH 2 | |
| 12 | ← | | 2 RLC PDUs on LCH 1 | |
| 13 | → | | SI indicating data on LCH 1 | |
| 14 | ← | | Primary Absolute grant allowing the UE to transmit 3 RLC PDUs per TTI | Signalling value 9 |
| 15 | → | | MAC es PDU containing 2 RLC PDU's from LCH 1 and MAC es PDU containing 1 RLC PDU from LCH 2 | |
| 16 | → | | MAC es PDU containing 1 RLC PDU from LCH 2 | |

Specific Message Contents

None

#### 7.1.6a.2.5.5 Test requirements

1. In step 4, UE shall loop back PDUs for two TTIs, with one RLC PDU per TTI.
2. In step 8, UE shall loop back PDUs for two TTIs, with two RLC PDUs per TTI.
3. In step 15, UE shall loop back PDUs for one TTI, with three RLC PDU per TTI (2 RLC PDU's from LCH1 and 1 RLC PDU from LCH 2).
4. In step 16, UE shall loop back PDU for one TTI, with one RLC PDU per TTI (1 RLC PDU from LCH 2).

## 7.1.6a.3 MAC-es/e- E-TFC selection

### 7.1.6a.3.1 MAC-es/e E-TFC priority

#### 7.1.6a.3.1.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6a.3.1.2 Conformance requirement

Extract from TS 25.321 clause 11.9.1.4

[…]

RRC can control the scheduling of uplink data by giving each logical channel a priority between 1 and 8, where 1 is the highest priority and 8 the lowest. E-TFC selection in the UE shall be done in accordance with the priorities indicated by RRC. Logical channels have absolute priority, i.e. the UE shall maximise the transmission of higher priority data.

Reference(s)

TS 25.321 clause 11.9.1.4

7.1.6a.3.1.3 Test purpose

To verify that the UE transmits data in order of priority

7.1.6a.3.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4h using condition A15 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| NOTE: The RAB combination also include SRBs on E-DCH on MAC-d flow 1 which are not used in the test case | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| T-RUCCH | 200ms (see 25.331 10.3.6.103) |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to (10*41)-2 octets for RB25 and RB17.

Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

c) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

d) The SS waits for an SI to be received that indicates that data is available on both logical channels (can be identified from the content of the SI)

e) The SS issues an absolute grant that allows the UE to send 1 RLC PDU per TTI (signalling value 4)

f) The SS verifies that the first TTIs only contains data from LCH1 which have a higher priority

g) The SS verifies that data on LCH2 is only transmitted after all the data on LCH1 has been looped back

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | ← | 1 RLC PDU on LCH 2 | |
| 2 | ← | 1 RLC PDU on LCH 1 | |
| 3 | → | Potential SI indicating data on LCH 2 | This SI is ignored by the SS |
| 4 | → | SI indicating that data is available for LCH 1 and LCH 2 | |
| 5 | ← | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 6 | → | MAC es PDU containing 1 RLC PDU from LCH 1 | This step is repeated until the whole RLC SDU is transmitted |
| 7 | → | MAC es PDU containing 1 RLC PDU from LCH 2 | This step is repeated until the whole RLC SDU is transmitted |

Specific Message Contents

None

#### 7.1.6a.3.1.5 Test requirements

1. In step 6, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU from LCH 1 in each TTI until the whole RLC SDU has been received.

2. In step 6, the SS verifies that no data is received on LCH 2 until all data on LCH 1 has been received

3. In step 7, the SS shall receive 1 MAC-es PDU containing 1 RLC PDU from LCH 2 in each TTI until the whole RLC SDU has been received

### 7.1.6a.3.2 MAC-es/e transport block size selection/ UL QPSK

#### 7.1.6a.3.2.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6a.3.2.2 Conformance requirement

Extract from TS 25.321 clause 9.2.6.4

[…]

For 3.84 Mcps TDD, the normative description of the mapping between the E-TFC index and the corresponding transport block size is provided in Annex BA.

For 7.68 Mcps TDD, the normative description of the mapping between the E-TFC index and the corresponding transport block size is provided in Annex BB.

[…]

For 3.84 Mcps TDD, the mapping of transport block size $L$ to signalled index $k_i$ = {0,1,…127} (see Annex BA.1) is given by the formula:

$$L = \lfloor 60 \times \rho^{k_n + k_i} \rfloor$$

In the above formula $\rho = 128^{\frac{1}{127}}$, $k_i$ is the TBS index (0…127) and $k_n$ is an integer selected based upon the number of timeslots allocated ($n$). Values for $k_n$ are tabulated in Table 9.2.6.4.1.

**Table 9.2.6.4.1: $k_n$ tabulated as a function of the number of timeslots (n)**

| n | $k_n$ |
|---|---|
| 1 | 0 |
| 2 | 18 |
| 3 | 28 |
| 4 | 36 |
| 5 | 42 |
| 6 | 46 |
| 7 | 50 |
| 8 | 54 |
| 9 | 57 |
| 10 | 60 |
| 11 | 62 |
| 12 | 65 |

[…]

For 7.68 Mcps TDD, the mapping of transport block size *L* to signalled index $k_i$ = {0,1,…127} (see Annex BB.1) is given by the formula:

$$L = \lfloor 60 \times \rho^{k_n + k_i} \rfloor$$

In the above formula, $\rho = 256^{\frac{1}{127}}$ $k_i$ is the TBS index (0…127) and $k_n$ is an integer selected based upon the number of timeslots allocated (*n*). Values for $k_n$ are tabulated in Table 9.2.6.4.2.

**Table 9.2.6.4.2: $k_n$ tabulated as a function of the number of timeslots (n)**

| n | $k_n$ |
|---|---|
| 1 | 0 |
| 2 | 15 |
| 3 | 25 |
| 4 | 31 |
| 5 | 36 |
| 6 | 41 |
| 7 | 44 |
| 8 | 47 |
| 9 | 50 |
| 10 | 52 |
| 11 | 54 |
| 12 | 56 |

Reference(s)

TS 25.321 clause 9.2.6.4, 9.2.6.4.1 and 9.2.6.4.2.

7.1.6a.3.2.3 Test purpose

To verify that the UE transmits all possible transport block sizes within the UE capability.

7.1.6a.3.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

UE in idle mode

The following parameters are specific for this test case:

Common for all UE HS-DSCH categories:

| Parameter | Value |
|---|---|
| MAC-d PDU size | 336 bits |
| MAC-hs receiver window size | 16 |
| Number of HARQ processes | 1 |
| Number of reordering queues | 1 |

Common for all UE E-DCH categories:

| Parameter | Value |
|---|---|
| T-RUCCH | 200 ms (see 25.331 10.3.6.103) |

Specific depending on E-DCH category for 3.84Mcps:

| Parameter | E-DCH Category | Value |
|---|---|---|
| RLC Transmission window size | 1 to 4 | 512 |
| | 5 | 1536 |
| E-TFCI table | 1 to 5 | See table 7.1.6a.3.1 |

Specific depending on E-DCH category for 7.68Mcps:

| Parameter | E-DCH Category | Value |
|---|---|---|
| RLC Transmission window size | 1 to 4 | 512 |
| | 5 to 7 | 1536 |
| E-TFCI table | 1 to7 | See table 7.1.6a.3.3 |

Specific depending on HS-DSCH category for 3.84Mcps:

| Parameter | HS-DSCH Category | Value |
|---|---|---|
| RLC Receiving window size | 1 to 6 | 512 |
| | 7 and 8 | 1536 |
| | 9 | 2047 |

Specific depending on HS-DSCH category for 7.68Mcps:

| Parameter | HS-DSCH Category | Value |
|---|---|---|
| RLC Receiving window size | 1 to 6 | 512 |
| | 7 to 10 | 1536 |
| | 11 to 13 | 2047 |

The mapping between the chosen E-TFC index and the corresponding E-DCH transport block size is given in the following table:

**Table 7.1.6a.3.1 10ms TTI E-DCH Transport Block Size Table 0 for 3.84Mcps**

| $N_{slots}$ | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| $K_n$ | 0 | 18 | 28 | 36 | 42 | 46 | 50 | 54 | 57 | 60 | 62 | 65 |
| TBS index | | | | | | | | | | | | |
| 0 | 60 | 119 | 174 | 237 | 298 | 347 | 405 | 472 | 529 | 593 | 641 | 718 |
| 1 | 62 | 123 | 181 | 246 | 310 | 361 | 421 | 490 | 550 | 616 | 665 | 746 |
| 2 | 64 | 128 | 188 | 256 | 322 | 375 | 437 | 509 | 571 | 641 | 691 | 775 |
| 3 | 67 | 133 | 196 | 266 | 334 | 390 | 454 | 529 | 593 | 665 | 718 | 806 |
| 4 | 69 | 139 | 203 | 276 | 347 | 405 | 472 | 550 | 616 | 691 | 746 | 837 |
| 5 | 72 | 144 | 211 | 287 | 361 | 421 | 490 | 571 | 641 | 718 | 775 | 870 |
| 6 | 75 | 150 | 219 | 298 | 375 | 437 | 509 | 593 | 665 | 746 | 806 | 904 |
| 7 | 78 | 155 | 228 | 310 | 390 | 454 | 529 | 616 | 691 | 775 | 837 | 939 |
| 8 | 81 | 162 | 237 | 322 | 405 | 472 | 550 | 641 | 718 | 806 | 870 | 975 |
| 9 | 84 | 168 | 246 | 334 | 421 | 490 | 571 | 665 | 746 | 837 | 904 | 1013 |
| 10 | 87 | 174 | 256 | 347 | 437 | 509 | 593 | 691 | 775 | 870 | 939 | 1053 |
| 11 | 91 | 181 | 266 | 361 | 454 | 529 | 616 | 718 | 806 | 904 | 975 | 1094 |
| 12 | 94 | 188 | 276 | 375 | 472 | 550 | 641 | 746 | 837 | 939 | 1013 | 1136 |
| 13 | 98 | 196 | 287 | 390 | 490 | 571 | 665 | 775 | 870 | 975 | 1053 | 1181 |
| 14 | 102 | 203 | 298 | 405 | 509 | 593 | 691 | 806 | 904 | 1013 | 1094 | 1227 |
| 15 | 106 | 211 | 310 | 421 | 529 | 616 | 718 | 837 | 939 | 1053 | 1136 | 1275 |
| 16 | 110 | 219 | 322 | 437 | 550 | 641 | 746 | 870 | 975 | 1094 | 1181 | 1324 |
| 17 | 114 | 228 | 334 | 454 | 571 | 665 | 775 | 904 | 1013 | 1136 | 1227 | 1376 |
| 18 | 119 | 237 | 347 | 472 | 593 | 691 | 806 | 939 | 1053 | 1181 | 1275 | 1429 |
| 19 | 123 | 246 | 361 | 490 | 616 | 718 | 837 | 975 | 1094 | 1227 | 1324 | 1485 |
| 20 | 128 | 256 | 375 | 509 | 641 | 746 | 870 | 1013 | 1136 | 1275 | 1376 | 1543 |
| 21 | 133 | 266 | 390 | 529 | 665 | 775 | 904 | 1053 | 1181 | 1324 | 1429 | 1603 |
| 22 | 139 | 276 | 405 | 550 | 691 | 806 | 939 | 1094 | 1227 | 1376 | 1485 | 1665 |
| 23 | 144 | 287 | 421 | 571 | 718 | 837 | 975 | 1136 | 1275 | 1429 | 1543 | 1730 |
| 24 | 150 | 298 | 437 | 593 | 746 | 870 | 1013 | 1181 | 1324 | 1485 | 1603 | 1798 |
| 25 | 155 | 310 | 454 | 616 | 775 | 904 | 1053 | 1227 | 1376 | 1543 | 1665 | 1868 |
| 26 | 162 | 322 | 472 | 641 | 806 | 939 | 1094 | 1275 | 1429 | 1603 | 1730 | 1941 |
| 27 | 168 | 334 | 490 | 665 | 837 | 975 | 1136 | 1324 | 1485 | 1665 | 1798 | 2016 |
| 28 | 174 | 347 | 509 | 691 | 870 | 1013 | 1181 | 1376 | 1543 | 1730 | 1868 | 2095 |
| 29 | 181 | 361 | 529 | 718 | 904 | 1053 | 1227 | 1429 | 1603 | 1798 | 1941 | 2176 |
| 30 | 188 | 375 | 550 | 746 | 939 | 1094 | 1275 | 1485 | 1665 | 1868 | 2016 | 2261 |
| 31 | 196 | 390 | 571 | 775 | 975 | 1136 | 1324 | 1543 | 1730 | 1941 | 2095 | 2349 |
| 32 | 203 | 405 | 593 | 806 | 1013 | 1181 | 1376 | 1603 | 1798 | 2016 | 2176 | 2441 |
| 33 | 211 | 421 | 616 | 837 | 1053 | 1227 | 1429 | 1665 | 1868 | 2095 | 2261 | 2536 |
| 34 | 219 | 437 | 641 | 870 | 1094 | 1275 | 1485 | 1730 | 1941 | 2176 | 2349 | 2634 |
| 35 | 228 | 454 | 665 | 904 | 1136 | 1324 | 1543 | 1798 | 2016 | 2261 | 2441 | 2737 |
| 36 | 237 | 472 | 691 | 939 | 1181 | 1376 | 1603 | 1868 | 2095 | 2349 | 2536 | 2844 |
| 37 | 246 | 490 | 718 | 975 | 1227 | 1429 | 1665 | 1941 | 2176 | 2441 | 2634 | 2954 |
| 38 | 256 | 509 | 746 | 1013 | 1275 | 1485 | 1730 | 2016 | 2261 | 2536 | 2737 | 3070 |
| 39 | 266 | 529 | 775 | 1053 | 1324 | 1543 | 1798 | 2095 | 2349 | 2634 | 2844 | 3189 |
| 40 | 276 | 550 | 806 | 1094 | 1376 | 1603 | 1868 | 2176 | 2441 | 2737 | 2954 | 3313 |
| 41 | 287 | 571 | 837 | 1136 | 1429 | 1665 | 1941 | 2261 | 2536 | 2844 | 3070 | 3442 |
| 42 | 298 | 593 | 870 | 1181 | 1485 | 1730 | 2016 | 2349 | 2634 | 2954 | 3189 | 3576 |
| 43 | 310 | 616 | 904 | 1227 | 1543 | 1798 | 2095 | 2441 | 2737 | 3070 | 3313 | 3716 |
| 44 | 322 | 641 | 939 | 1275 | 1603 | 1868 | 2176 | 2536 | 2844 | 3189 | 3442 | 3861 |
| 45 | 334 | 665 | 975 | 1324 | 1665 | 1941 | 2261 | 2634 | 2954 | 3313 | 3576 | 4011 |
| 46 | 347 | 691 | 1013 | 1376 | 1730 | 2016 | 2349 | 2737 | 3070 | 3442 | 3716 | 4167 |
| 47 | 361 | 718 | 1053 | 1429 | 1798 | 2095 | 2441 | 2844 | 3189 | 3576 | 3861 | 4329 |
| 48 | 375 | 746 | 1094 | 1485 | 1868 | 2176 | 2536 | 2954 | 3313 | 3716 | 4011 | 4498 |

| | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 49 | 390 | 775 | 1136 | 1543 | 1941 | 2261 | 2634 | 3070 | 3442 | 3861 | 4167 | 4673 |
| 50 | 405 | 806 | 1181 | 1603 | 2016 | 2349 | 2737 | 3189 | 3576 | 4011 | 4329 | 4855 |
| 51 | 421 | 837 | 1227 | 1665 | 2095 | 2441 | 2844 | 3313 | 3716 | 4167 | 4498 | 5044 |
| 52 | 437 | 870 | 1275 | 1730 | 2176 | 2536 | 2954 | 3442 | 3861 | 4329 | 4673 | 5241 |
| 53 | 454 | 904 | 1324 | 1798 | 2261 | 2634 | 3070 | 3576 | 4011 | 4498 | 4855 | 5445 |
| 54 | 472 | 939 | 1376 | 1868 | 2349 | 2737 | 3189 | 3716 | 4167 | 4673 | 5044 | 5657 |
| 55 | 490 | 975 | 1429 | 1941 | 2441 | 2844 | 3313 | 3861 | 4329 | 4855 | 5241 | 5877 |
| 56 | 509 | 1013 | 1485 | 2016 | 2536 | 2954 | 3442 | 4011 | 4498 | 5044 | 5445 | 6106 |
| 57 | 529 | 1053 | 1543 | 2095 | 2634 | 3070 | 3576 | 4167 | 4673 | 5241 | 5657 | 6344 |
| 58 | 550 | 1094 | 1603 | 2176 | 2737 | 3189 | 3716 | 4329 | 4855 | 5445 | 5877 | 6591 |
| 59 | 571 | 1136 | 1665 | 2261 | 2844 | 3313 | 3861 | 4498 | 5044 | 5657 | 6106 | 6848 |
| 60 | 593 | 1181 | 1730 | 2349 | 2954 | 3442 | 4011 | 4673 | 5241 | 5877 | 6344 | 7115 |
| 61 | 616 | 1227 | 1798 | 2441 | 3070 | 3576 | 4167 | 4855 | 5445 | 6106 | 6591 | 7392 |
| 62 | 641 | 1275 | 1868 | 2536 | 3189 | 3716 | 4329 | 5044 | 5657 | 6344 | 6848 | 7680 |
| 63 | 665 | 1324 | 1941 | 2634 | 3313 | 3861 | 4498 | 5241 | 5877 | 6591 | 7115 | 7979 |
| 64 | 691 | 1376 | 2016 | 2737 | 3442 | 4011 | 4673 | 5445 | 6106 | 6848 | 7392 | 8289 |
| 65 | 718 | 1429 | 2095 | 2844 | 3576 | 4167 | 4855 | 5657 | 6344 | 7115 | 7680 | 8612 |
| 66 | 746 | 1485 | 2176 | 2954 | 3716 | 4329 | 5044 | 5877 | 6591 | 7392 | 7979 | 8948 |
| 67 | 775 | 1543 | 2261 | 3070 | 3861 | 4498 | 5241 | 6106 | 6848 | 7680 | 8289 | 9296 |
| 68 | 806 | 1603 | 2349 | 3189 | 4011 | 4673 | 5445 | 6344 | 7115 | 7979 | 8612 | 9658 |
| 69 | 837 | 1665 | 2441 | 3313 | 4167 | 4855 | 5657 | 6591 | 7392 | 8289 | 8948 | 10034 |
| 70 | 870 | 1730 | 2536 | 3442 | 4329 | 5044 | 5877 | 6848 | 7680 | 8612 | 9296 | 10425 |
| 71 | 904 | 1798 | 2634 | 3576 | 4498 | 5241 | 6106 | 7115 | 7979 | 8948 | 9658 | 10831 |
| 72 | 939 | 1868 | 2737 | 3716 | 4673 | 5445 | 6344 | 7392 | 8289 | 9296 | 10034 | 11253 |
| 73 | 975 | 1941 | 2844 | 3861 | 4855 | 5657 | 6591 | 7680 | 8612 | 9658 | 10425 | 11691 |
| 74 | 1013 | 2016 | 2954 | 4011 | 5044 | 5877 | 6848 | 7979 | 8948 | 10034 | 10831 | 12146 |
| 75 | 1053 | 2095 | 3070 | 4167 | 5241 | 6106 | 7115 | 8289 | 9296 | 10425 | 11253 | 12620 |
| 76 | 1094 | 2176 | 3189 | 4329 | 5445 | 6344 | 7392 | 8612 | 9658 | 10831 | 11691 | 13111 |
| 77 | 1136 | 2261 | 3313 | 4498 | 5657 | 6591 | 7680 | 8948 | 10034 | 11253 | 12146 | 13622 |
| 78 | 1181 | 2349 | 3442 | 4673 | 5877 | 6848 | 7979 | 9296 | 10425 | 11691 | 12620 | 14152 |
| 79 | 1227 | 2441 | 3576 | 4855 | 6106 | 7115 | 8289 | 9658 | 10831 | 12146 | 13111 | 14703 |
| 80 | 1275 | 2536 | 3716 | 5044 | 6344 | 7392 | 8612 | 10034 | 11253 | 12620 | 13622 | 15276 |
| 81 | 1324 | 2634 | 3861 | 5241 | 6591 | 7680 | 8948 | 10425 | 11691 | 13111 | 14152 | 15871 |
| 82 | 1376 | 2737 | 4011 | 5445 | 6848 | 7979 | 9296 | 10831 | 12146 | 13622 | 14703 | 16489 |
| 83 | 1429 | 2844 | 4167 | 5657 | 7115 | 8289 | 9658 | 11253 | 12620 | 14152 | 15276 | 17131 |
| 84 | 1485 | 2954 | 4329 | 5877 | 7392 | 8612 | 10034 | 11691 | 13111 | 14703 | 15871 | 17798 |
| 85 | 1543 | 3070 | 4498 | 6106 | 7680 | 8948 | 10425 | 12146 | 13622 | 15276 | 16489 | 18491 |
| 86 | 1603 | 3189 | 4673 | 6344 | 7979 | 9296 | 10831 | 12620 | 14152 | 15871 | 17131 | 19212 |
| 87 | 1665 | 3313 | 4855 | 6591 | 8289 | 9658 | 11253 | 13111 | 14703 | 16489 | 17798 | 19960 |
| 88 | 1730 | 3442 | 5044 | 6848 | 8612 | 10034 | 11691 | 13622 | 15276 | 17131 | 18491 | 20737 |
| 89 | 1798 | 3576 | 5241 | 7115 | 8948 | 10425 | 12146 | 14152 | 15871 | 17798 | 19212 | 21545 |
| 90 | 1868 | 3716 | 5445 | 7392 | 9296 | 10831 | 12620 | 14703 | 16489 | 18491 | 19960 | 22384 |
| 91 | 1941 | 3861 | 5657 | 7680 | 9658 | 11253 | 13111 | 15276 | 17131 | 19212 | 20737 | 23256 |
| 92 | 2016 | 4011 | 5877 | 7979 | 10034 | 11691 | 13622 | 15871 | 17798 | 19960 | 21545 | 24161 |
| 93 | 2095 | 4167 | 6106 | 8289 | 10425 | 12146 | 14152 | 16489 | 18491 | 20737 | 22384 | 25102 |
| 94 | 2176 | 4329 | 6344 | 8612 | 10831 | 12620 | 14703 | 17131 | 19212 | 21545 | 23256 | 26080 |
| 95 | 2261 | 4498 | 6591 | 8948 | 11253 | 13111 | 15276 | 17798 | 19960 | 22384 | 24161 | 27095 |
| 96 | 2349 | 4673 | 6848 | 9296 | 11691 | 13622 | 15871 | 18491 | 20737 | 23256 | 25102 | 28151 |
| 97 | 2441 | 4855 | 7115 | 9658 | 12146 | 14152 | 16489 | 19212 | 21545 | 24161 | 26080 | 29247 |
| 98 | 2536 | 5044 | 7392 | 10034 | 12620 | 14703 | 17131 | 19960 | 22384 | 25102 | 27095 | 30386 |
| 99 | 2634 | 5241 | 7680 | 10425 | 13111 | 15276 | 17798 | 20737 | 23256 | 26080 | 28151 | 31569 |
| 100 | 2737 | 5445 | 7979 | 10831 | 13622 | 15871 | 18491 | 21545 | 24161 | 27095 | 29247 | 32799 |
| 101 | 2844 | 5657 | 8289 | 11253 | 14152 | 16489 | 19212 | 22384 | 25102 | 28151 | 30386 | 34076 |

| | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 102 | 2954 | 5877 | 8612 | 11691 | 14703 | 17131 | 19960 | 23256 | 26080 | 29247 | 31569 | 35403 |
| 103 | 3070 | 6106 | 8948 | 12146 | 15276 | 17798 | 20737 | 24161 | 27095 | 30386 | 32799 | 36782 |
| 104 | 3189 | 6344 | 9296 | 12620 | 15871 | 18491 | 21545 | 25102 | 28151 | 31569 | 34076 | 38214 |
| 105 | 3313 | 6591 | 9658 | 13111 | 16489 | 19212 | 22384 | 26080 | 29247 | 32799 | 35403 | 39703 |
| 106 | 3442 | 6848 | 10034 | 13622 | 17131 | 19960 | 23256 | 27095 | 30386 | 34076 | 36782 | 41249 |
| 107 | 3576 | 7115 | 10425 | 14152 | 17798 | 20737 | 24161 | 28151 | 31569 | 35403 | 38214 | 42855 |
| 108 | 3716 | 7392 | 10831 | 14703 | 18491 | 21545 | 25102 | 29247 | 32799 | 36782 | 39703 | 44524 |
| 109 | 3861 | 7680 | 11253 | 15276 | 19212 | 22384 | 26080 | 30386 | 34076 | 38214 | 41249 | 46258 |
| 110 | 4011 | 7979 | 11691 | 15871 | 19960 | 23256 | 27095 | 31569 | 35403 | 39703 | 42855 | 48060 |
| 111 | 4167 | 8289 | 12146 | 16489 | 20737 | 24161 | 28151 | 32799 | 36782 | 41249 | 44524 | 49932 |
| 112 | 4329 | 8612 | 12620 | 17131 | 21545 | 25102 | 29247 | 34076 | 38214 | 42855 | 46258 | 51876 |
| 113 | 4498 | 8948 | 13111 | 17798 | 22384 | 26080 | 30386 | 35403 | 39703 | 44524 | 48060 | 53896 |
| 114 | 4673 | 9296 | 13622 | 18491 | 23256 | 27095 | 31569 | 36782 | 41249 | 46258 | 49932 | 55995 |
| 115 | 4855 | 9658 | 14152 | 19212 | 24161 | 28151 | 32799 | 38214 | 42855 | 48060 | 51876 | 58176 |
| 116 | 5044 | 10034 | 14703 | 19960 | 25102 | 29247 | 34076 | 39703 | 44524 | 49932 | 53896 | 60442 |
| 117 | 5241 | 10425 | 15276 | 20737 | 26080 | 30386 | 35403 | 41249 | 46258 | 51876 | 55995 | 62796 |
| 118 | 5445 | 10831 | 15871 | 21545 | 27095 | 31569 | 36782 | 42855 | 48060 | 53896 | 58176 | 65241 |
| 119 | 5657 | 11253 | 16489 | 22384 | 28151 | 32799 | 38214 | 44524 | 49932 | 55995 | 60442 | 67782 |
| 120 | 5877 | 11691 | 17131 | 23256 | 29247 | 34076 | 39703 | 46258 | 51876 | 58176 | 62796 | 70422 |
| 121 | 6106 | 12146 | 17798 | 24161 | 30386 | 35403 | 41249 | 48060 | 53896 | 60442 | 65241 | 73164 |
| 122 | 6344 | 12620 | 18491 | 25102 | 31569 | 36782 | 42855 | 49932 | 55995 | 62796 | 67782 | 76013 |
| 123 | 6591 | 13111 | 19212 | 26080 | 32799 | 38214 | 44524 | 51876 | 58176 | 65241 | 70422 | 78974 |
| 124 | 6848 | 13622 | 19960 | 27095 | 34076 | 39703 | 46258 | 53896 | 60442 | 67782 | 73164 | 82049 |
| 125 | 7115 | 14152 | 20737 | 28151 | 35403 | 41249 | 48060 | 55995 | 62796 | 70422 | 76013 | 85245 |
| 126 | 7392 | 14703 | 21545 | 29247 | 36782 | 42855 | 49932 | 58176 | 65241 | 73164 | 78974 | 88565 |
| 127 | 7680 | 15276 | 22384 | 30386 | 38214 | 44524 | 51876 | 60442 | 67782 | 76013 | 82049 | 92014 |

**Table 7.1.6a.3.2 Applicable E-TFS indexes for sub-tests 1 to 3 and UE E-DCH categories 1 to 5 for 3.84Mcps.**

| | | | Applicable E-TFS indexes | | | | |
|---|---|---|---|---|---|---|---|
| Sub-test | $N_{slots}$ | E-DCH Transport Block Size Table | Category 1 | Category 2 | Category 3 | Category 4 | Category 5 |
| 1 | 12 | Table 7.1.6a.3.1 | 0..74 | 0..92 | 0..103 | 0..113 | 0..127 |
| 2 | 6 | Table 7.1.6a.3.1 | 0..93 | 0..111 | 0.122 | 0..127 | 0..127 |
| 3 | 1 | Table 7.1.6a.3.1 | 0..127 | 0..127 | 0..127 | 0..127 | 0..127 |
| **NOTE 1: Applicable indexes depends on the UE capability of "Maximum number of bits of an E-DCH transport block transmitted within a 10 ms E-DCH TTI" as specified in TS 25.306 clause 5.1.** | | | | | | | |

**Table 7.1.6a.3.3: 10ms TTI E-DCH Transport Block Size Table 0 for 7.68Mcps**

| Nslots | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| kn | 0 | 15 | 25 | 31 | 36 | 41 | 44 | 47 | 50 | 52 | 54 | 56 |
| TBS index | | | | | | | | | | | | |
| 0 | 60 | 115 | 178 | 232 | 288 | 359 | 409 | 467 | 532 | 581 | 634 | 691 |
| 1 | 62 | 120 | 186 | 242 | 301 | 375 | 428 | 487 | 556 | 606 | 662 | 722 |
| 2 | 65 | 126 | 195 | 253 | 315 | 392 | 447 | 509 | 581 | 634 | 691 | 755 |
| 3 | 68 | 131 | 203 | 264 | 329 | 409 | 467 | 532 | 606 | 662 | 722 | 788 |
| 4 | 71 | 137 | 212 | 276 | 344 | 428 | 487 | 556 | 634 | 691 | 755 | 823 |
| 5 | 74 | 143 | 222 | 288 | 359 | 447 | 509 | 581 | 662 | 722 | 788 | 860 |
| 6 | 77 | 150 | 232 | 301 | 375 | 467 | 532 | 606 | 691 | 755 | 823 | 899 |
| 7 | 81 | 156 | 242 | 315 | 392 | 487 | 556 | 634 | 722 | 788 | 860 | 939 |
| 8 | 85 | 163 | 253 | 329 | 409 | 509 | 581 | 662 | 755 | 823 | 899 | 981 |
| 9 | 88 | 171 | 264 | 344 | 428 | 532 | 606 | 691 | 788 | 860 | 939 | 1024 |
| 10 | 92 | 178 | 276 | 359 | 447 | 556 | 634 | 722 | 823 | 899 | 981 | 1070 |
| 11 | 96 | 186 | 288 | 375 | 467 | 581 | 662 | 755 | 860 | 939 | 1024 | 1118 |
| 12 | 101 | 195 | 301 | 392 | 487 | 606 | 691 | 788 | 899 | 981 | 1070 | 1168 |
| 13 | 105 | 203 | 315 | 409 | 509 | 634 | 722 | 823 | 939 | 1024 | 1118 | 1220 |
| 14 | 110 | 212 | 329 | 428 | 532 | 662 | 755 | 860 | 981 | 1070 | 1168 | 1275 |
| 15 | 115 | 222 | 344 | 447 | 556 | 691 | 788 | 899 | 1024 | 1118 | 1220 | 1331 |
| 16 | 120 | 232 | 359 | 467 | 581 | 722 | 823 | 939 | 1070 | 1168 | 1275 | 1391 |
| 17 | 126 | 242 | 375 | 487 | 606 | 755 | 860 | 981 | 1118 | 1220 | 1331 | 1453 |
| 18 | 131 | 253 | 392 | 509 | 634 | 788 | 899 | 1024 | 1168 | 1275 | 1391 | 1518 |
| 19 | 137 | 264 | 409 | 532 | 662 | 823 | 939 | 1070 | 1220 | 1331 | 1453 | 1586 |
| 20 | 143 | 276 | 428 | 556 | 691 | 860 | 981 | 1118 | 1275 | 1391 | 1518 | 1656 |
| 21 | 150 | 288 | 447 | 581 | 722 | 899 | 1024 | 1168 | 1331 | 1453 | 1586 | 1730 |
| 22 | 156 | 301 | 467 | 606 | 755 | 939 | 1070 | 1220 | 1391 | 1518 | 1656 | 1808 |
| 23 | 163 | 315 | 487 | 634 | 788 | 981 | 1118 | 1275 | 1453 | 1586 | 1730 | 1888 |
| 24 | 171 | 329 | 509 | 662 | 823 | 1024 | 1168 | 1331 | 1518 | 1656 | 1808 | 1973 |
| 25 | 178 | 344 | 532 | 691 | 860 | 1070 | 1220 | 1391 | 1586 | 1730 | 1888 | 2061 |
| 26 | 186 | 359 | 556 | 722 | 899 | 1118 | 1275 | 1453 | 1656 | 1808 | 1973 | 2153 |
| 27 | 195 | 375 | 581 | 755 | 939 | 1168 | 1331 | 1518 | 1730 | 1888 | 2061 | 2249 |
| 28 | 203 | 392 | 606 | 788 | 981 | 1220 | 1391 | 1586 | 1808 | 1973 | 2153 | 2349 |
| 29 | 212 | 409 | 634 | 823 | 1024 | 1275 | 1453 | 1656 | 1888 | 2061 | 2249 | 2454 |
| 30 | 222 | 428 | 662 | 860 | 1070 | 1331 | 1518 | 1730 | 1973 | 2153 | 2349 | 2564 |
| 31 | 232 | 447 | 691 | 899 | 1118 | 1391 | 1586 | 1808 | 2061 | 2249 | 2454 | 2678 |

| | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 32 | 242 | 467 | 722 | 939 | 1168 | 1453 | 1656 | 1888 | 2153 | 2349 | 2564 | 2798 |
| 33 | 253 | 487 | 755 | 981 | 1220 | 1518 | 1730 | 1973 | 2249 | 2454 | 2678 | 2922 |
| 34 | 264 | 509 | 788 | 1024 | 1275 | 1586 | 1808 | 2061 | 2349 | 2564 | 2798 | 3053 |
| 35 | 276 | 532 | 823 | 1070 | 1331 | 1656 | 1888 | 2153 | 2454 | 2678 | 2922 | 3189 |
| 36 | 288 | 556 | 860 | 1118 | 1391 | 1730 | 1973 | 2249 | 2564 | 2798 | 3053 | 3331 |
| 37 | 301 | 581 | 899 | 1168 | 1453 | 1808 | 2061 | 2349 | 2678 | 2922 | 3189 | 3480 |
| 38 | 315 | 606 | 939 | 1220 | 1518 | 1888 | 2153 | 2454 | 2798 | 3053 | 3331 | 3636 |
| 39 | 329 | 634 | 981 | 1275 | 1586 | 1973 | 2249 | 2564 | 2922 | 3189 | 3480 | 3798 |
| 40 | 344 | 662 | 1024 | 1331 | 1656 | 2061 | 2349 | 2678 | 3053 | 3331 | 3636 | 3967 |
| 41 | 359 | 691 | 1070 | 1391 | 1730 | 2153 | 2454 | 2798 | 3189 | 3480 | 3798 | 4144 |
| 42 | 375 | 722 | 1118 | 1453 | 1808 | 2249 | 2564 | 2922 | 3331 | 3636 | 3967 | 4329 |
| 43 | 392 | 755 | 1168 | 1518 | 1888 | 2349 | 2678 | 3053 | 3480 | 3798 | 4144 | 4523 |
| 44 | 409 | 788 | 1220 | 1586 | 1973 | 2454 | 2798 | 3189 | 3636 | 3967 | 4329 | 4725 |
| 45 | 428 | 823 | 1275 | 1656 | 2061 | 2564 | 2922 | 3331 | 3798 | 4144 | 4523 | 4935 |
| 46 | 447 | 860 | 1331 | 1730 | 2153 | 2678 | 3053 | 3480 | 3967 | 4329 | 4725 | 5156 |
| 47 | 467 | 899 | 1391 | 1808 | 2249 | 2798 | 3189 | 3636 | 4144 | 4523 | 4935 | 5386 |
| 48 | 487 | 939 | 1453 | 1888 | 2349 | 2922 | 3331 | 3798 | 4329 | 4725 | 5156 | 5626 |
| 49 | 509 | 981 | 1518 | 1973 | 2454 | 3053 | 3480 | 3967 | 4523 | 4935 | 5386 | 5877 |
| 50 | 532 | 1024 | 1586 | 2061 | 2564 | 3189 | 3636 | 4144 | 4725 | 5156 | 5626 | 6140 |
| 51 | 556 | 1070 | 1656 | 2153 | 2678 | 3331 | 3798 | 4329 | 4935 | 5386 | 5877 | 6414 |
| 52 | 581 | 1118 | 1730 | 2249 | 2798 | 3480 | 3967 | 4523 | 5156 | 5626 | 6140 | 6700 |
| 53 | 606 | 1168 | 1808 | 2349 | 2922 | 3636 | 4144 | 4725 | 5386 | 5877 | 6414 | 6999 |
| 54 | 634 | 1220 | 1888 | 2454 | 3053 | 3798 | 4329 | 4935 | 5626 | 6140 | 6700 | 7311 |
| 55 | 662 | 1275 | 1973 | 2564 | 3189 | 3967 | 4523 | 5156 | 5877 | 6414 | 6999 | 7638 |
| 56 | 691 | 1331 | 2061 | 2678 | 3331 | 4144 | 4725 | 5386 | 6140 | 6700 | 7311 | 7979 |
| 57 | 722 | 1391 | 2153 | 2798 | 3480 | 4329 | 4935 | 5626 | 6414 | 6999 | 7638 | 8335 |
| 58 | 755 | 1453 | 2249 | 2922 | 3636 | 4523 | 5156 | 5877 | 6700 | 7311 | 7979 | 8707 |
| 59 | 788 | 1518 | 2349 | 3053 | 3798 | 4725 | 5386 | 6140 | 6999 | 7638 | 8335 | 9095 |
| 60 | 823 | 1586 | 2454 | 3189 | 3967 | 4935 | 5626 | 6414 | 7311 | 7979 | 8707 | 9501 |
| 61 | 860 | 1656 | 2564 | 3331 | 4144 | 5156 | 5877 | 6700 | 7638 | 8335 | 9095 | 9925 |
| 62 | 899 | 1730 | 2678 | 3480 | 4329 | 5386 | 6140 | 6999 | 7979 | 8707 | 9501 | 10368 |
| 63 | 939 | 1808 | 2798 | 3636 | 4523 | 5626 | 6414 | 7311 | 8335 | 9095 | 9925 | 10831 |
| 64 | 981 | 1888 | 2922 | 3798 | 4725 | 5877 | 6700 | 7638 | 8707 | 9501 | 10368 | 11314 |
| 65 | 1024 | 1973 | 3053 | 3967 | 4935 | 6140 | 6999 | 7979 | 9095 | 9925 | 10831 | 11819 |
| 66 | 1070 | 2061 | 3189 | 4144 | 5156 | 6414 | 7311 | 8335 | 9501 | 10368 | 11314 | 12347 |
| 67 | 1118 | 2153 | 3331 | 4329 | 5386 | 6700 | 7638 | 8707 | 9925 | 10831 | 11819 | 12898 |
| 68 | 1168 | 2249 | 3480 | 4523 | 5626 | 6999 | 7979 | 9095 | 10368 | 11314 | 12347 | 13474 |

| | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 69 | 1220 | 2349 | 3636 | 4725 | 5877 | 7311 | 8335 | 9501 | 10831 | 11819 | 12898 | 14075 |
| 70 | 1275 | 2454 | 3798 | 4935 | 6140 | 7638 | 8707 | 9925 | 11314 | 12347 | 13474 | 14703 |
| 71 | 1331 | 2564 | 3967 | 5156 | 6414 | 7979 | 9095 | 10368 | 11819 | 12898 | 14075 | 15360 |
| 72 | 1391 | 2678 | 4144 | 5386 | 6700 | 8335 | 9501 | 10831 | 12347 | 13474 | 14703 | 16045 |
| 73 | 1453 | 2798 | 4329 | 5626 | 6999 | 8707 | 9925 | 11314 | 12898 | 14075 | 15360 | 16761 |
| 74 | 1518 | 2922 | 4523 | 5877 | 7311 | 9095 | 10368 | 11819 | 13474 | 14703 | 16045 | 17509 |
| 75 | 1586 | 3053 | 4725 | 6140 | 7638 | 9501 | 10831 | 12347 | 14075 | 15360 | 16761 | 18291 |
| 76 | 1656 | 3189 | 4935 | 6414 | 7979 | 9925 | 11314 | 12898 | 14703 | 16045 | 17509 | 19107 |
| 77 | 1730 | 3331 | 5156 | 6700 | 8335 | 10368 | 11819 | 13474 | 15360 | 16761 | 18291 | 19960 |
| 78 | 1808 | 3480 | 5386 | 6999 | 8707 | 10831 | 12347 | 14075 | 16045 | 17509 | 19107 | 20851 |
| 79 | 1888 | 3636 | 5626 | 7311 | 9095 | 11314 | 12898 | 14703 | 16761 | 18291 | 19960 | 21781 |
| 80 | 1973 | 3798 | 5877 | 7638 | 9501 | 11819 | 13474 | 15360 | 17509 | 19107 | 20851 | 22753 |
| 81 | 2061 | 3967 | 6140 | 7979 | 9925 | 12347 | 14075 | 16045 | 18291 | 19960 | 21781 | 23769 |
| 82 | 2153 | 4144 | 6414 | 8335 | 10368 | 12898 | 14703 | 16761 | 19107 | 20851 | 22753 | 24830 |
| 83 | 2249 | 4329 | 6700 | 8707 | 10831 | 13474 | 15360 | 17509 | 19960 | 21781 | 23769 | 25938 |
| 84 | 2349 | 4523 | 6999 | 9095 | 11314 | 14075 | 16045 | 18291 | 20851 | 22753 | 24830 | 27095 |
| 85 | 2454 | 4725 | 7311 | 9501 | 11819 | 14703 | 16761 | 19107 | 21781 | 23769 | 25938 | 28305 |
| 86 | 2564 | 4935 | 7638 | 9925 | 12347 | 15360 | 17509 | 19960 | 22753 | 24830 | 27095 | 29568 |
| 87 | 2678 | 5156 | 7979 | 10368 | 12898 | 16045 | 18291 | 20851 | 23769 | 25938 | 28305 | 30888 |
| 88 | 2798 | 5386 | 8335 | 10831 | 13474 | 16761 | 19107 | 21781 | 24830 | 27095 | 29568 | 32266 |
| 89 | 2922 | 5626 | 8707 | 11314 | 14075 | 17509 | 19960 | 22753 | 25938 | 28305 | 30888 | 33706 |
| 90 | 3053 | 5877 | 9095 | 11819 | 14703 | 18291 | 20851 | 23769 | 27095 | 29568 | 32266 | 35211 |
| 91 | 3189 | 6140 | 9501 | 12347 | 15360 | 19107 | 21781 | 24830 | 28305 | 30888 | 33706 | 36782 |
| 92 | 3331 | 6414 | 9925 | 12898 | 16045 | 19960 | 22753 | 25938 | 29568 | 32266 | 35211 | 38424 |
| 93 | 3480 | 6700 | 10368 | 13474 | 16761 | 20851 | 23769 | 27095 | 30888 | 33706 | 36782 | 40139 |
| 94 | 3636 | 6999 | 10831 | 14075 | 17509 | 21781 | 24830 | 28305 | 32266 | 35211 | 38424 | 41930 |
| 95 | 3798 | 7311 | 11314 | 14703 | 18291 | 22753 | 25938 | 29568 | 33706 | 36782 | 40139 | 43801 |
| 96 | 3967 | 7638 | 11819 | 15360 | 19107 | 23769 | 27095 | 30888 | 35211 | 38424 | 41930 | 45756 |
| 97 | 4144 | 7979 | 12347 | 16045 | 19960 | 24830 | 28305 | 32266 | 36782 | 40139 | 43801 | 47798 |
| 98 | 4329 | 8335 | 12898 | 16761 | 20851 | 25938 | 29568 | 33706 | 38424 | 41930 | 45756 | 49932 |
| 99 | 4523 | 8707 | 13474 | 17509 | 21781 | 27095 | 30888 | 35211 | 40139 | 43801 | 47798 | 52160 |
| 100 | 4725 | 9095 | 14075 | 18291 | 22753 | 28305 | 32266 | 36782 | 41930 | 45756 | 49932 | 54488 |
| 101 | 4935 | 9501 | 14703 | 19107 | 23769 | 29568 | 33706 | 38424 | 43801 | 47798 | 52160 | 56920 |
| 102 | 5156 | 9925 | 15360 | 19960 | 24830 | 30888 | 35211 | 40139 | 45756 | 49932 | 54488 | 59460 |
| 103 | 5386 | 10368 | 16045 | 20851 | 25938 | 32266 | 36782 | 41930 | 47798 | 52160 | 56920 | 62114 |
| 104 | 5626 | 10831 | 16761 | 21781 | 27095 | 33706 | 38424 | 43801 | 49932 | 54488 | 59460 | 64886 |
| 105 | 5877 | 11314 | 17509 | 22753 | 28305 | 35211 | 40139 | 45756 | 52160 | 56920 | 62114 | 67782 |

| | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 106 | 6140 | 11819 | 18291 | 23769 | 29568 | 36782 | 41930 | 47798 | 54488 | 59460 | 64886 | 70807 |
| 107 | 6414 | 12347 | 19107 | 24830 | 30888 | 38424 | 43801 | 49932 | 56920 | 62114 | 67782 | 73967 |
| 108 | 6700 | 12898 | 19960 | 25938 | 32266 | 40139 | 45756 | 52160 | 59460 | 64886 | 70807 | 77268 |
| 109 | 6999 | 13474 | 20851 | 27095 | 33706 | 41930 | 47798 | 54488 | 62114 | 67782 | 73967 | 80717 |
| 110 | 7311 | 14075 | 21781 | 28305 | 35211 | 43801 | 49932 | 56920 | 64886 | 70807 | 77268 | 84319 |
| 111 | 7638 | 14703 | 22753 | 29568 | 36782 | 45756 | 52160 | 59460 | 67782 | 73967 | 80717 | 88082 |
| 112 | 7979 | 15360 | 23769 | 30888 | 38424 | 47798 | 54488 | 62114 | 70807 | 77268 | 84319 | 92014 |
| 113 | 8335 | 16045 | 24830 | 32266 | 40139 | 49932 | 56920 | 64886 | 73967 | 80717 | 88082 | 96120 |
| 114 | 8707 | 16761 | 25938 | 33706 | 41930 | 52160 | 59460 | 67782 | 77268 | 84319 | 92014 | 100410 |
| 115 | 9095 | 17509 | 27095 | 35211 | 43801 | 54488 | 62114 | 70807 | 80717 | 88082 | 96120 | 104891 |
| 116 | 9501 | 18291 | 28305 | 36782 | 45756 | 56920 | 64886 | 73967 | 84319 | 92014 | 100410 | 109573 |
| 117 | 9925 | 19107 | 29568 | 38424 | 47798 | 59460 | 67782 | 77268 | 88082 | 96120 | 104891 | 114463 |
| 118 | 10368 | 19960 | 30888 | 40139 | 49932 | 62114 | 70807 | 80717 | 92014 | 100410 | 109573 | 119572 |
| 119 | 10831 | 20851 | 32266 | 41930 | 52160 | 64886 | 73967 | 84319 | 96120 | 104891 | 114463 | 124908 |
| 120 | 11314 | 21781 | 33706 | 43801 | 54488 | 67782 | 77268 | 88082 | 100410 | 109573 | 119572 | 130483 |
| 121 | 11819 | 22753 | 35211 | 45756 | 56920 | 70807 | 80717 | 92014 | 104891 | 114463 | 124908 | 136306 |
| 122 | 12347 | 23769 | 36782 | 47798 | 59460 | 73967 | 84319 | 96120 | 109573 | 119572 | 130483 | 142390 |
| 123 | 12898 | 24830 | 38424 | 49932 | 62114 | 77268 | 88082 | 100410 | 114463 | 124908 | 136306 | 148744 |
| 124 | 13474 | 25938 | 40139 | 52160 | 64886 | 80717 | 92014 | 104891 | 119572 | 130483 | 142390 | 155383 |
| 125 | 14075 | 27095 | 41930 | 54488 | 67782 | 84319 | 96120 | 109573 | 124908 | 136306 | 148744 | 162318 |
| 126 | 14703 | 28305 | 43801 | 56920 | 70807 | 88082 | 100410 | 114463 | 130483 | 142390 | 155383 | 169562 |
| 127 | 15360 | 29568 | 45756 | 59460 | 73967 | 92014 | 104891 | 119572 | 136306 | 148744 | 162318 | 177130 |

**Table 7.1.6a.3.4 Applicable E-TFS indexes for sub-tests 1 to 3 and UE E-DCH categories 1 to 7 for 3.84Mcps.**

| | | | Applicable E-TFS indexes | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| Sub-test | $N_{slots}$ | E-DCH Transport Block Size Table | Category 1 | Category 2 | Category 3 | Category 4 | Category 5 | Category 6 | Category 7 |
| **1** | **12** | **Table 7.1.6a.3.3** | **0..66** | **0..82** | **0..91** | **0..100** | **0..107** | **0..115** | **0..127** |
| **2** | **6** | **Table 7.1.6a.3.3** | **0..81** | **0..97** | **0.106** | **0..115** | **0..127** | **0..127** | **0..127** |
| **3** | **1** | **Table 7.1.6a.3.3** | **0..122** | **0..127** | **0..127** | **0..127** | **0..127** | **0..127** | **0..127** |
| **NOTE 1: Applicable indexes depends on the UE capability of "Maximum number of bits of an E-DCH transport block transmitted within a 10 ms E-DCH TTI" as specified in TS 25.306 clause 5.1.** | | | | | | | | | |

Test procedure

a) The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.10.3.4.7.1 for 3.84Mcps and clause 6.11.6.4.7.1 for 7.68Mcps using condition A12 as specified in clause 9.1 of TS 34.108.. See note 1.

b) The SS closes the test loop using UE test loop mode 1 and configuring the UL RLC SDU size to be equal to the received DL SDU size (i.e. not setting the UL RLC SDU size parameter).

c) SS sets *E-TFC index* = 0.

d) The SS removes the scheduling grant for E-DCH for the UE.

e) The SS transmits two RLC SDUs of size (*TBS_size* – 18)*160 / 336 – 8 bits, where the value for *TBS_size* is derived from the applicable E-TFS index table as specified in Table 7.1.6a.3.2 for 3.84Mcps and in Table 7.1.6a.3.4 for 7.68Mcps for the sub-test. See note 2.

f) The SS waits for an SI to be received that indicates that the two RLC SDUs are available for transmission (can be identified from the content of the SI)

g) The SS issues an absolute grant that allows the UE to which specifies the maximum absolute grant value (signalled value 31) together with a physical resource allocation of the whole code space (signalled value 0) and TS allocation limited to the number of timeslots defined in Table 7.1.6a.3.2 for 3.84Mcps and in Table 7.1.6a.3.4 for 7.68Mcps for the sub-test. The resource duration takes the default value of 1 TTI.

h) The SS waits until data is received and verifies that the looped back SDU has correct content

i) The SS verifies that the received E-TFC has correct size

j) The SS increments the parameter *E-TFC index* by one. If the *E-TFC index* is supported by the UE under test according to Table 7.1.6a.3.2 for 3.84Mcps and Table 7.1.6a.3.4 for 7.68Mcps then continue with step d else continue with step k.

k) The SS opens the UE test loop.

l) The SS release the radio bearer.

m) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test.

NOTE 2: The test data for transport channels on HS-DSCH and E-DCH is divided into 2 RLC SDUs to keep the SDU size not to exceed 1500 octets (limit of SDU size in SM). Calculation of RLC SDU size:

*RLC SDUs of size = Number of MAC-d PDUs * RLC payload size* / 2 – 8 bits (size of 7 bit length indicator and expansion bit) where the *RLC payload size* is 320 bits and the *Number of MAC-d PDUs* = (*TBS size – MAC-e header size – MAC-es header size*) / *MAD-d PDU size* = (*TBS size* – 18) / 336. This gives that the *RLC SDUs of size* = (TBS size – 18) *160 / 336 – 8 bits.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| 7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| 9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| 12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 13 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1 with no "LB Setup RB IE#k" parameter set (UE shall return an UL RLC SDU with the same size as the received RLC SDU in downlink) |
| 14 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15 | SS | | | The SS creates two RLC SDUs according to the E-TFC under test |
| 16 | ← | | Removal of absolute grant | Signalling value 1 |
| 17 | <-- | | DOWNLINK RLC SDU#1<br>DOWNLINK RLC SDU#2 | Send test data. The MAC-hs PDU contains 4 RLC SDUs |
| 18 | → | | SI indicating 2 RLC SDUs | This can be verified from the indicated Total E-DCH Buffer Status (TEBS) |
| 19 | <-- | | Absolute grant allowing the UE to transmit at maximum bit rate. | Signalling value 31 |
| 20 | --> | | UPLINK RLC SDUs | The SS checks that the content of the received UL RLC SDUs are correct |
| 21 | SS | | | The SS calculates test data for next E-TFC index and repeat steps 16 to 19 until all applicable E-TFC indexes have been tested. |
| 22 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 23 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 24 | | | RB RELEASE | RRC |
| 25 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 26 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |
| Note 1 | In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message. | | | |

#### 7.1.6a.3.2.5 Test requirements

1. In step 20, the SS verifies that the received E-TFC has the correct size
2. In step 20, the SS shall receive 2 RLC SDUs with the same content as sent in downlink.

## 7.1.6a.4 MAC-es/e - E-DCH retransmissions

### 7.1.6a.4.1 MAC-es/e process handling

#### 7.1.6a.4.1.1 Definition and applicability

All UEs which support E-DCH.

7.1.6a.4.1.2 Conformance requirement

Extract from 25.331:

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e or MAC-i PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (for 3.84 Mcps TDD and 7.68 Mcps TDD, as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity"; for 1.28 Mcps TDD, as determined from the IEs "Activation Time", "Subframe number", "Resource Duration" and "Resource Periodicity", and the calculation of assigned Non-scheduled transmission grant is specified in subclause 8.6.6.16a).

[…]

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

[…]

1> for TDD:

2> configure the E-RUCCH with the stored E-RUCCH configuration;

2> configure the MAC with the stored E-PUCH configuration.

Extract From 25.321 clause 11.9.1.4:

RRC can allocate non-scheduled transmission grants to individual MAC-d flows in order to reduce the transmission delays.

The UE shall determine whether to take scheduled or non-scheduled grants into account in the upcoming transmission. If neither are supposed to be taken into account (i.e. the TTI is not available for non-scheduled transmission and no Grant for scheduled transmission has been received) then no grant shall be assumed to exist. If a grant exists then the transmission format and data allocation shall follow the requirements below.

Reference(s)

TS 25.321 clauses 11.9.1.4,. TS 25.331 clauses 8.6.5.18 and 8.6.6.37

7.1.6a.4.1.3 Test purpose

To verify that the UE performs transmissions and retransmissions in the correct MAC-es process.

To verify that the UE uses only the allowed HARQ processes for scheduled and non-scheduled transmissions.

7.1.6a.4.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4h using condition A15 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Comment |
|---|---|---|---|
| 7 (LCH1) | 2 | 1 | RB25 |
| 8 (LCH2) | 3 | 2 | RB17 |
| Note: The RAB combination also includes SRBs on E-DCH on MAC-d flow 1 which is not used in the test case | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Periodicity for scheduling info | No periodic scheduling info |
| HARQ RV Configuration | rv0 |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets.

### Test procedure

In this test procedure the UE is configured with two logical channels, with Id 7 (LCH 1) and 8 (LCH2). LCH 1 is mapped to MAC-d flow 2 and LCH 2 is mapped to MAC-d flow3. The MAC-d flow 2 has been configured with non-scheduled transmissions allowed in HARQ process 4, with a rate exceeding 1 SDU/TTI and the value of the "Max MAC-e PDU contents size" is 500 bits. MAC-d flow 3 has been configured with a scheduled transmission allowed in HARQ process 2.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits 1 SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

c) The SS waits until data is received and checks that the data is received in HARQ process 4

d) The SS sends a HARQ NACK

e) The SS waits until the retransmission is received and checks that the data is received in HARQ process 4

f) The SS transmits 8 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH 2

g) The SS waits until an SI is received.

h) The SS issues absolute grant corresponding to 1 RLC PDU of size 41 octets per TTI.

i) The SS waits until data is received and checks that the data is received in HARQ process 2

j) The SS transmits 8 SDU's of size 40 bytes (plus 1 byte RLC length indicator) on LCH 1

k) The SS waits until data is received and checks that the data is received in HARQ process 4

### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | 1 RLC PDU on LCH 1 | |
| 2 | → | | MAC-es PDU containing 1 RLC PDU | |
| 3 | ← | | HARQ NACK | |
| 4 | → | | MAC-es PDU containing 1 RLC PDU | |
| 5 | ← | | 8 RLC SDU's on LCH 2 | |
| 6 | → | | SI indicating data on LCH 2 | |
| 7 | ← | | Primary Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 8 | → | | MAC-es PDU containing 1 RLC PDU | PDU shall be received in HARQ process 2. This step is repeated until all 8 RLC SDU's are received on LCH2. |
| 9 | ← | | 8 RLC SDU's on LCH 1 | |
| 10 | → | | MAC-es PDU containing 1 RLC PDU | PDU shall be received in HARQ process 4. This step is repeated until all 8 RLC SDU's are received on LCH1. |

### Specific Message Contents

None

#### 7.1.6a.4.1.5 Test requirements

1. In step 2 the SS shall receive a MAC-es PDU in HARQ process 4
2. In step 4 the SS shall receive a MAC-es PDU in HARQ process 4
3. In step 8 the SS shall receive all MAC-es PDUs in HARQ process 2
4. In step 10 the SS shall receive all MAC-es PDUs in HARQ process 4

### 7.1.6a.4.2 MAC-es/e maximum number of retransmissions

#### 7.1.6a.4.2.1 Definition and applicability

All UEs which support E-DCH.

#### 7.1.6a.4.2.2 Conformance requirement

Extract From 25.321 clause 11.9.1.4:

[..]

For each MAC-d flow, RRC configures MAC-e with a HARQ profile and multiplexing list. Additionally, RRC configures MAC with a power offset in case the Scheduling Information needs to be transmitted without any higher-layer data. The HARQ profile includes the power offset and maximum number of HARQ transmissions to use for this MAC-d flow. For 1.28 Mcps TDD, the HARQ profile also includes a retransmission timer attribute.The multiplexing list identifies for each MAC-d flow(s), the other MAC-d flows for which data can be multiplexed in a transmission that uses the power offset included in its HARQ profile.

[..]

The E-TFC selection function shall provide this MAC-e PDU and transmission HARQ profile to the HARQ entity. The selected E-TFC is also provided (Note: for 1.28Mcps TDD, the signalled transport block size index, i.e. E-TFCI, is the index of the selected E-TFC in the candidate set.). The maximum number of HARQ transmissions and the power offset in this profile shall be set respectively to the maximum of both the Max Number of HARQ Transmissions and of the power offset of the HARQ profiles from all the MAC-d flows from which data is multiplexed into the transmission. For 1.28 Mcps TDD, the retransmission timer shall be set to the maximum of the retransmission timer value of the HARQ profiles that are permitted to be multiplexed into the transmission. Each HARQ process which is associated with a buffer holding a MAC-e PDU for potential retransmission shall maintain the HARQ profile and the number of re-transmissions that have occurred. For 1.28 Mcps TDD, the HARQ process shall also maintain the value of RTX_TIMER.

Reference(s)

TS 25.321 clause 11.9.1.4

#### 7.1.6a.4.2.3 Test purpose

To verify that the UE, when 2 MAC d flows are multiplexed, follows the maximum number of retransmissions according to the HARQ profiles (different values configured for maximum number of retransmissions for each HARQ profile).

#### 7.1.6a.4.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters, Ciphering Off.

User Equipment:

The SS establishes the reference radio bearer configuration specified in TS 34.108 clause 6.11.4h using condition A15 as specified in clause 9.1 of TS 34.108. The logical channel, transport channel and queue identities are set to:

| Logical Channel ID | MAC-d flow (UL) | Priority | Max. retransmissions | Comment |
|---|---|---|---|---|
| 7 (LCH1) | 2 | 1 | 2 | RB25 |
| 8 (LCH2) | 3 | 2 | 4 | RB17 |
| NOTE: The RAB combination also includes SRBs on E-DCH which are not used in the testcase | | | | |

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| T-RUCCH | 200 ms (see 25.331 10.3.6.103 |
| E-DCH MAC-d flow multiplexing list | 11111111 (See 25.331 10.3.5.1b) Note 1 |
| HARQ RV Configuration | rv0 |
| Note 1: This configuration means that all MAC-d flows can be multiplexed in the same TTI | |

The UE is placed into UE test loop mode 1 with the UL SDU size set to 39 octets for RB25 and RB17.

### Test procedure

The UE is configured with two logical channels, LCH1 (with priority 1) and LCH2 (with priority 2). LCH1 is mapped to MAC-d flow 2 and LCH2 is mapped to MAC-d flow 3. The UE is not given any grant to transmit on E-DCH.

a) The SS has not issued any scheduling grant for E-DCH to the UE

b) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

c) The SS waits for an SI to be received that indicates that data is available

d) The SS issues an absolute grant that allows the UE to send with a rate sufficient to accommodate one RLC PDU per TTI

e) For each received transmission, the SS sends a negative HARQ acknowledgement and verifies that exactly 2 retransmissions are made by the UE.

f) The SS stops issuing absolute grants

g) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH2

h) The SS transmits one SDU of size 40 bytes (plus 1 byte RLC length indicator) on LCH1

i) The SS waits for an SI to be received that indicates that data is available on both LCHs.

j) The SS issues an absolute grant that allows the UE to send with a rate sufficient to accommodate two RLC PDUs per TTI (signalling value 5)

k) For each received transmission, the SS sends a negative HARQ acknowledgement and verifies that exactly 4 retransmissions are made by the UE (maximum from the HARQ profiles for LCH1 and LCH2).

NOTE: The UE may send an SI after step g but this SI would only indicate data on LCH2. This SI will be ignored.

### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | ← | 1 RLC PDUs on LCH 1 | |
| 2 | → | SI showing that data is available for LCH 1 | |
| 3 | ← | Absolute grant allowing the UE to transmit 1 RLC PDU per TTI | Signalling value 4 |
| 4 | → | MAC es PDU containing 1 RLC PDU from LCH 1 | |
| 5 | ← | HARQ NACK | |
| 6 | SS | | SS sends a HARQ NACK for each received retransmission. After the second retransmission the SS waits 1 s to verify that no further retransmissions occur. |
| 7 | ← | 1 RLC PDUs on LCH 2 | |
| 8 | ← | 1 RLC PDUs on LCH 1 | |
| 9 | → | Potential SI indicating data on LCH 2 | This SI is ignored by the SS |
| 10 | → | SI showing that data is available for LCH 1 and LCH 2 | |
| 11 | ← | Absolute grant allowing the UE to transmit 2 RLC PDUs per TTI | Signalling value 5 |
| 12 | → | MAC es PDU containing 1 RLC PDU from LCH 1 and 1 RLC PDU from LCH 2 | |
| 13 | ← | HARQ NACK | |
| 14 | SS | | SS sends a HARQ NACK for each received retransmission. After the fourth retransmission the SS waits 1 s to verify that no further retransmissions occur. |

Specific Message Contents

None

#### 7.1.6a.4.2.5 Test requirements

1. In step 6, exactly 2 retransmissions shall be performed by the UE.
2. In step 15, exactly 4 retransmissions shall be performed by the UE.

# 7.2 RLC testing

## 7.2.0 General

### 7.2.0.1 Radio bearer setup

For radio bearer setup the following settings shall be used in both CS and PS mode:

- Re-establishment Timer: useT314
- MAC logical channel priority: 7
- UL Logical Channel Identity:7
- DL Logical Channel Identity:7

## 7.2.1 Transparent mode

### 7.2.1.1 Segmentation and reassembly

Transparent mode segmentation and reassembly are not tested in this release of the specification.

## 7.2.2 Unacknowledged mode

### 7.2.2.1 General information for UM tests

Two generic Radio Access Bearers are provided for UM tests.

The UM test RAB is set up using the Generic Procedure described in clause 7.1.3 of 3GPP TS 34.108, and with the default RAB replaced as follows:

- For UM 7-bit "Length Indicator" tests: the RB configuration described in 3GPP TS 34.108 clause 6.11.1 is used. For these tests, let UM_7_PayloadSize denote the RAB payload size in octets.
- For UM 15-bit "Length Indicator" tests: the RB configuration described in 3GPP TS 34.108 clause 6.11.2 is used. For these tests, let UM_15_PayloadSize denote the RAB payload size in octets.

The UM test RABs are used in all tests with the following exception:

- Tests that explicitly specify a different Radio Bearer configuration.

All other settings are the same.

The special "Length Indicator" indicating that an SDU begins in the first octet of a PDU, described in clause 9.2.2.8 in 3GPP TS 25.322 is not used in uplink or downlink except when explicitly stated in the corresponding test case.

### 7.2.2.2 Segmentation and reassembly / Selection of 7 or 15 bit "Length Indicators"

#### 7.2.2.2.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. The selection of the size of the "Length Indicator" fields used must follow the specified rules. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2.2.2 Conformance requirement

Except for the predefined values reserved for special purposes and listed in TS 25.322 section 9.2.2.8 the "Length Indicator" shall:

- be set to the number of octets between the end of the RLC header and up to and including the last octet of an RLC SDU segment;
- be included in the PDUs that they refer to.

The size of the Length Indicator may be either 7 bits or 15 bits.

[...]

For UM:

- if the "largest UMD PDU size" is ≤ l25 octets:
  - 7-bit "Length Indicators" shall be used.
- else:
  - 15-bit "Length Indicators" shall be used.

- between modifications of the "largest UMD PDU size", the size of the "Length Indicator" is the same for all UMD PDUs.

Reference(s)

TS 25.322 clauses 9.2.2.8 and 9.2.2.9.

#### 7.2.2.2.3 Test purpose

To test that if the size of the largest PDU is ≤ l25 octets, 7 bit indicators are used, otherwise, 15 bit indicators are used.

#### 7.2.2.2.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 7-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 10 bytes.

Test procedure

a) The SS transmits an RLC SDU of size 10 bytes.

b) The SS checks the "Length Indicator" values and SDU size and contents in the RLC PDU returned on the uplink (assuming a 7-bit "Length Indicator" size). SS shall take into account presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel5 and later UE.

c) The SS releases the RB, and performs the Radio Bearer establishment procedure (clause 7.1.3 of TS 34.108) with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 15-bit "Length Indicator" tests in clause 7.2.2.1.

All other settings the same.

d) The SS transmits an RLC SDU of size 10 bytes.

e) The SS checks the "Length Indicator" values and SDU size and contents in the RLC PDU returned on the uplink (assuming a 15-bit "Length Indicator" size). SS shall take into account presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel5 and later UE.

f) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures for UM 7 bit LIs |
| 2 | ← | | DOWNLINK RLC PDU | 10 byte SDU + padding |
| 3 | → | | UPLINK RLC PDU | 10 byte SDU + padding |
| 4 | ← | | RB RELEASE | |
| 5 | | | RB ESTABLISHMENT | See generic procedures for UM 15 bit LIs (largest UMD PDU size > 125 bytes) |
| 6 | ← | | DOWNLINK RLC PDU | 10 byte SDU + padding |
| 7 | → | | UPLINK RLC PDU | 10 byte SDU + padding |
| 8 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.2.2.5 Test requirements

1. The UE shall send 7 bit "Length Indicators" with values that correctly indicate the end of the SDU received in step 3.

2. The UE shall send 15 bit "Length Indicators" with values that correctly indicate the end of the SDU received in step 7.

## 7.2.2.3 Segmentation and reassembly / 7-bit "Length Indicators" / Padding

### 7.2.2.3.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

### 7.2.2.3.2 Conformance requirement

A "Length Indicator" is used to indicate the last octet of each RLC SDU ending within the PDU.

Except for the predefined values reserved for special purposes and listed in the tables below, the "Length Indicator" shall:

- be set to the number of octets between the end of the RLC header and up to and including the last octet of an RLC SDU segment;
- be included in the PDUs that they refer to.

[...]

For UM and AM RLC:

- if a 7 bit "Length Indicator" is used in a RLC PDU and one or more padding octets are present in the RLC PDU after the end of the last RLC SDU:
  - indicate the presence of padding by including a "Length Indicator" with value "1111111" as the last "Length Indicator" in the PDU.

NOTE: After the "Length Indicator" indicating the presence of padding has been included in the RLC PDU, the length of the padding may be zero.

#### Reference(s)

TS 25.322 clauses 9.2.2.8 and 11.2.2.1.

### 7.2.2.3.3 Test purpose

1. To test that the UE correctly segments a large SDU, includes a "Length Indicator" indicating padding in the RLC PDU carrying the last SDU segment, and adds padding at the end.
2. To test that the UE correctly deals with a 7-bit padding "Length Indicator" when present in a received PDU.

### 7.2.2.3.4 Method of test

#### Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 7-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to UM_7_PayloadSize + 1 bytes.

#### Test procedure

a) The SS transmits an RLC SDU of size UM_7_PayloadSize + 1 bytes. The second of the 2 PDUs sent shall contain a "Length Indicator" indicating the end of the SDU and the "Length Indicator" indicating that padding is present.

b) The SS checks the "Length Indicator" values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 7-bit "Length Indicator" size). SS shall take into account presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel5 and later UE in the first PDU.

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | | ← | DOWNLINK RLC PDU | SDU 1 |
| 3 | | ← | DOWNLINK RLC PDU | SDU 1 & Padding |
| 4 | | → | UPLINK RLC PDU | No LI. See Note 2 |
| 5 | | → | UPLINK RLC PDU | Check LIs and re-assembled SDU |
| 6 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |
| NOTE 2: SS shall take into account presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel5 and later UE. | | | | |

#### 7.2.2.3.5 Test requirements

1. The UE shall return two RLC PDUs. The first RLC PDU shall not include "Length Indicators". except for presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel5 and later UE. The second RLC PDU shall have a "Length Indicator" indicating the PDU contains an SDU boundary after octet 1 of the data field, and the second “Length Indicator” shall indicate that the remainder of the PDU contains padding.

2. The length and data content of the received SDU shall be the same as the transmitted SDU.

### 7.2.2.4 Segmentation and Reassembly / 7-bit "Length Indicators" / LI = 0

#### 7.2.2.4.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. A pre-defined "Length Indicator" value is used to indicate when a SDU ends coincident with the end of the previous PDU. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2.4.2 Conformance requirement

A "Length Indicator" is used to indicate the last octet of each RLC SDU ending within the PDU.

Except for the predefined values reserved for special purposes and listed in TS 25.322 subclause 9.2.2.8, the "Length Indicator" shall:

- be set to the number of octets between the end of the RLC header and up to and including the last octet of an RLC SDU segment;

- be included in the PDUs that they refer to.

[...]

In the case where the end of the last segment of an RLC SDU exactly ends at the end of a PDU and there is no "Length Indicator" that indicates the end of the RLC SDU:

- if 7-bit "Length Indicator" is used:

  - a "Length Indicator" with value "000 0000" shall be placed as the first "Length Indicator" in the following PDU;

[...]

For UM and AM RLC:

- if a 7 bit "Length Indicator" is used in a RLC PDU and one or more padding octets are present in the RLC PDU after the end of the last RLC SDU:

- indicate the presence of padding by including a "Length Indicator" with value "1111111" as the last "Length Indicator" in the PDU.

Reference(s)

TS 25.322 clause 9.2.2.8 and 11.2.2.1.

#### 7.2.2.4.3 Test purpose

1. To test that where a SDU exactly fills a PDU, a "Length Indicator" of all 0's is placed by the transmitter as the first "Length Indicator" in the next PDU.

2. To test that where a SDU exactly fills a PDU, the receiver accepts a "Length Indicator" of all 0's, placed as the first "Length Indicator" in the next PDU.

#### 7.2.2.4.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 7-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into loop-back mode 1 with the UL SDU size set to UM_7_PayloadSize bytes. For a Rel-5 and later UE , the UL SDU size shall be set to (UM_7_PayloadSize -1) bytes.

Test procedure

a) The SS transmits an RLC SDU of size 2 * UM_7_PayloadSize bytes.

b) The SS checks the "Length Indicator" values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 7-bit "Length Indicator" size).

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 4 | ← | | DOWNLINK RLC PDU | LI=0 and padding |
| 5 | → | | UPLINK RLC PDU | No LIs. See Note 2 |
| 6 | → | | UPLINK RLC PDU | Check Lis and re-assembled SDU |
| 7 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |
| NOTE 2: SS shall take into account presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel5 and later UE. | | | | |

#### 7.2.2.4.5 Test requirements

The UE shall return two RLC PDUs. The first RLC PDU shall not include "Length Indicators" except for presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel-5 and later UE.. The second RLC PDU shall have a "Length Indicator" indicating that the SDU exactly filled the previous UMD PDU, and a "Length Indicator" indicating that the remainder of the PDU contains padding.

For Rel99 UE, the length of the received SDU shall be UM_7_PayloadSize bytes, and the data content shall be the same as the first UM_7_PayloadSize bytes of the transmitted SDU.

For Rel-5 and later UEs , the length of the received SDU shall be (UM_7_PayloadSize-1) bytes, and the data content shall be the same as the first (UM_7_PayloadSize-1) bytes of the transmitted SDU.

## 7.2.2.5 Reassembly / 7-bit "Length Indicators" / Invalid LI value

### 7.2.2.5.1 Definition

The RLC segments and concatenates SDUs into UMD PDU according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of an invalid "Length Indicator" value has been specified. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

### 7.2.2.5.2 Conformance requirement

Upon delivery by the lower layer of an UMD PDU that contains a "Length Indicator" value specified to be reserved for UMD PDUs in this version of the protocol, the Receiver shall:

- ignore that UMD PDU.

[...]

Length: 7 bits

| Bit | Description |
|---|---|
| **1111101** | Reserved (PDUs with this coding will be discarded by this version of the protocol). |
| **1111110** | AMD PDU: The rest of the RLC PDU includes a piggybacked STATUS PDU.<br>UMD PDU: Reserved (PDUs with this coding will be discarded by this version of the protocol). |

#### Reference(s)

TS 25.322 clause 9.2.2.8 and 11.2.4.1.

### 7.2.2.5.3 Test purpose

To test that PDUs with invalid "Length indicator" '111 1110' are discarded by the receiving RLC.

### 7.2.2.5.4 Method of test

#### Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 7-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into loop-back mode 1with the UL SDU size set to UM_7_PayloadSize + 1 bytes.

#### Test procedure

a) The SS transmits two RLC SDUs of size UM_7_PayloadSize + 1 bytes. In the third PDU for transmission, the SS sets the value of the second (padding) LI to 1111110.

b) The SS checks the "Length Indicator" sizes and values of any RLC PDUs returned on the uplink, and checks for the presence of any received RLC SDUs. SS shall take into account presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel-5 and later UE in the first PDU

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 & SDU 2 |
| 4 | ← | | DOWNLINK RLC PDU | SDU 2 and invalid LI (=11111110) |
| 5 | → | | UPLINK RLC PDU | SDU 1 |
| 6 | → | | UPLINK RLC PDU | SDU 1: Check Lis and re-assembled SDU |
| 7 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.2.5.5 Test requirements

The UE shall return two RLC PDUs. The first RLC PDU shall not include any "Length Indicators" except for presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel-5 and later UE. The second RLC PDU shall have a "Length Indicator" indicating the end of the SDU, and a padding "Length Indicator".

The length and data content of the received SDU shall be the same as the first transmitted SDU. The second SDU shall not be returned.

### 7.2.2.6 Reassembly / 7-bit "Length Indicators" / LI value > PDU size

#### 7.2.2.6.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of an invalid "Length Indicator" value has been specified. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2.6.2 Conformance requirement

If the "Length Indicator" of an UMD PDU has a value that is larger than the PDU size – RLC header size and is not one of the predefined values listed in the table of TS 25.322 subclause 9.2.2.8, the Receiver shall:

- ignore the UMD PDU.

[...]

Upon delivery of a set of UMD PDUs from the lower layer, the Receiver shall:

- update VR(US) according to each received UMD PDU (see TS 25.322 subclause 9.4);
- if the updating step of VR(US) is not equal to one (i.e. one or more UMD PDUs are missing):
  - discard the SDUs that have segments in the missing UMD PDUs.

Reference(s)

TS 25.322 clauses 11.2.4.2 and 11.2.3.

#### 7.2.2.6.3 Test purpose

To test that PDUs with "Length Indicators" that point beyond the end of the PDU are ignored by the receiving RLC entity.

#### 7.2.2.6.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 7-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into loop-back mode 1 with the UL SDU size set to UM_7_PayloadSize + 1 bytes.

Test procedure

a) The SS transmits three RLC SDUs of size UM 7 PayloadSize + 1 bytes. All the SDUs are concatenated or segmented over successive RLC PDUs. In the third PDU for transmission, the SS sets value of the "Length Indicator" to be UM_7_PayloadSize (decimal).

b) The SS checks the "Length Indicator" values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDUs (assuming a 7-bit "Length Indicator" size). . SS shall take into account presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel-5 and later UE in the first PDU

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | | ← | DOWNLINK RLC PDU | SDU 1 |
| 3 | | ← | DOWNLINK RLC PDU | SDU 1 & SDU 2 |
| 4 | | ← | DOWNLINK RLC PDU | SDU 2 & SDU 3, with bad LI |
| 5 | | ← | DOWNLINK RLC PDU | SDU 3 and padding |
| 6 | | → | UPLINK RLC PDU | SDU 1 |
| 7 | | → | UPLINK RLC PDU | SDU 1 and padding: Check LIs and re-assembled SDU |
| 8 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.2.6.5 Test requirements

The UE shall return two RLC PDUs. The first RLC PDU shall not include "Length Indicators" except for presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel-5 and later UE. The second RLC PDU shall have a LI indicating the end of an SDU and an "Length Indicator" indicating that the remainder of the PDU contains padding.

The length and data content of the received SDU should be the same as the first transmitted SDU. No further SDUs or PDUs should be received.

### 7.2.2.7 Reassembly / 7-bit "Length Indicators" / First data octet LI

#### 7.2.2.7.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length indicators" are added to allow correct reconstruction of SDUs. A special "Length Indicator" is defined to indicate that the start of an SDU is coincident with the start of the PDU. The special "Length Indicator"is needed to avoid discarding of an SDU when the first received PDU has a sequence number different from zero. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2.7.2 Conformance requirement

1. "Length Indicator" = 1111100, UMD PDU: The first data octet in this RLC PDU is the first octet of a RLC SDU.

2. Upon delivery of a set of UMD PDUs from the lower layer, the Receiver shall:

   ...

   - if the special "Length Indicator" "1111 100" or "1111 1111 1111 100" is the first "Length Indicator" of a UMD PDU received on the downlink:

     - consider the first data octet in this UMD PDU as the first octet of an RLC SDU.

Reference(s)

1. TS 25.322 clause 9.2.2.8.

2. TS 25.322 clause 11.2.3.

### 7.2.2.7.3 Test purpose

To test that a UE in unacknowledged mode correctly handles a received RLC PDU with a 7-bit "Length Indicator" having its value equal to the special "Length Indicator" value 1111100 when the sequence number of the first received PDU is different from zero.

### 7.2.2.7.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 7-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 12 bytes.

Test procedure

a) The SS transmits a RLC SDU of size 12 bytes in a PDU which has the 'First Data Octet LI' as the first "Length Indicator" in the PDU.

b) The SS waits until the SDU has been received back from the UE, and then transmits another SDU of 12 bytes in a PDU which has the 'First Data Octet LI' as the first "Length Indicator" in the PDU.

c) The SS waits until this SDU has been received back from the UE.

c) The SS may optionally release the radio bearer.

Note: The SS sends PDUs in downlink starting at sequence number 10.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | | ← | DOWNLINK RLC PDU, SN 10 | SDU 1 with LI = 1111100 |
| 3 | | | … | Wait for loopback |
| 4 | | → | UPLINK RLC PDU | SDU 1. See Note 2 |
| 5 | | ← | DOWNLINK RLC PDU, SN 11 | SDU 2 with LI = 1111100 |
| 6 | | → | UPLINK RLC PDU | SDU 2. See Note 2 |
| 7 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |
| NOTE 2: SS shall take into account presence of Special “Length Indicator” indicating “beginning of an SDU” that will be included by a Rel5 and later UE. | | | | |

#### 7.2.2.7.5 Test requirements

1. The UE shall return two RLC PDUs.
2. The length and data content of each received SDU shall be the same as the transmitted SDU.

### 7.2.2.8 Segmentation and reassembly / 15-bit "Length Indicators" / Padding

#### 7.2.2.8.1 Definition

The RLC segments and concatenates SDUs into UMD PDU according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2.8.2 Conformance requirement

A PDU that has unused space, to be referred to as padding, shall use a "Length Indicator" to indicate that this space is used as padding unless the padding size is one octet for PDUs with 15-bit "Length Indicators". A padding "Length Indicator" must be placed after any "Length Indicators" for a PU.

One "Length Indicator" field shall be included for each end of a SDU that the PDU includes. The "Length Indicator" shall be set equal to the number of octets between the end of the header fields and the end of the segment. If padding is needed, another "Length Indicator" field set to only 1's shall be added unless the padding size is one octet for PDUs with 15-bit "Length Indicators".

Reference(s)

TS 25.322 clauses 9.2.2.8 and 11.2.2.1.

#### 7.2.2.8.3 Test purpose

1. To test that the UE correctly segments a large SDU and padding is added at the end.
2. To test that the UE correctly deals with a 15-bit padding "Length Indicator" when present in a received PDU.

#### 7.2.2.8.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 15-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to UM_15_PayloadSize + 1 bytes.

Test procedure

a) The SS transmits an RLC SDU of size UM_15_PayloadSize + 1 bytes. The second of the 2 PDUs sent shall contain a "Length Indicator" indicating the end of the SDU and the "Length Indicator" indicating that padding is present.

b) The SS checks the "Length Indicator" values in the RLC PDU returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 15-bit "Length Indicator" size).

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 & Padding |
| 4 | → | | UPLINK RLC PDU | No LI |
| 5 | → | | UPLINK RLC PDU | Check LIs and re-assembled SDU |
| 6 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.2.8.5 Test requirements

1. The UE shall return two RLC PDUs. The first shall not include "Length Indicators". The second shall have a "Length Indicator" indicating the PDU contains a SDU boundary after octet 1 of the data field, and the second shall indicate that the remainder of the PDU contains padding.

2. The length and data content of the received SDU shall be the same as the transmitted SDU.

### 7.2.2.9 Segmentation and Reassembly / 15-bit "Length Indicators" / LI = 0

#### 7.2.2.9.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. A pre-defined "Length Indicator" value is used to indicate when an SDUs ends coincident with the end of the previous PU. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2.9.2 Conformance requirement

If the PDU is exactly filled with the last segment of a SDU and there is no room for an "Length Indicator" field, a "Length Indicator" field set to all 0's shall be included as the first "Length Indicator" in the following PDU.

Reference(s)

TS 25.322 clause 11.2.2.1.

#### 7.2.2.9.3 Test purpose

1. To test that where a SDU exactly fills a PDU, a "Length Indicator" of all 0's is placed by the transmitter as the first "Length Indicator" in the next PDU.

2. To test that where an SDU exactly fills a PDU, and an "Length Indicator" of all 0's is the first "Length Indicator" in the next PDU, the receiver correctly reassembles the PDU.

#### 7.2.2.9.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 15-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into loop-back mode 1 with the UL SDU size set to UM_15_PayloadSize bytes.

Test procedure

a) The SS transmits an RLC SDU of size 2 * UM_15_PayloadSize bytes.

b) The SS checks the "Length Indicator" values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 15-bit "Length Indicator" size).

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 4 | ← | | DOWNLINK RLC PDU | LI=0 and padding |
| 5 | → | | UPLINK RLC PDU | No Lis |
| 6 | → | | UPLINK RLC PDU | Check LIs and re-assembled SDU |
| 7 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.2.9.5 Test requirements

The UE shall return two RLC PDUs. The first shall not include "Length Indicators". The second shall have an "Length Indicators"indicating that the SDU exactly filled the previous UMD PDU, and a "Length Indicators" indicating that the remainder of the PDU contains padding.

The length of the received SDU shall be UM_15_PayloadSize bytes, and the data content shall be the same as the first UM_15_PayloadSize bytes of the transmitted SDU.

### 7.2.2.10 Segmentation and reassembly / 15-bit "Length Indicators" / One octet short LI

#### 7.2.2.10.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. A pre-defined "Length Indicator" value is used to indicate when an SDUs ends one octet short of the end of the previous PDU. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2.10.2 Conformance requirement

In the case where the last segment of an RLC SDU is one octet short of exactly filling the last RLC PDU, and 15-bit "Length Indicators" are used, the next "Length Indicator" shall be placed as the first "Length Indicator" in the next PDU and have value "Length Indicator"=111 1111 1111 1011.

In the case where a PDU contains a 15-bit "Length Indicator" indicating that an SDU ends with one octet left in the PDU, the last octet of this PDU shall be ignored and shall not be filled with the first octet of the next SDU data.

Reference(s)

TS 25.322 clause 9.2.2.8.

#### 7.2.2.10.3 Test purpose

1. To test that where the UE transmits an SDU, which is one byte short of filling a PDU, an "Length Indicator" indicating one byte short is placed as the first "Length Indicator" in the next PDU.

2. To test that where the UE correctly handles a received PDU containing an "Length Indicator" indicating that an SDU ended one byte short of the end of the previous PDU.

#### 7.2.2.10.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 15-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to UM_15_PayloadSize - 1bytes.

Test procedure

a) The SS transmits an RLC SDU of size (2 * UM_15_PayloadSize) - 1 bytes.

b) The SS checks the "Length Indicator" sizes and values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 15-bit "Length Indicator" size).

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 4 | ← | | DOWNLINK RLC PDU | LI=111 1111 1111 1011 and padding |
| 5 | → | | UPLINK RLC PDU | No LIs |
| 6 | → | | UPLINK RLC PDU | Check LIs and re-assembled SDU |
| 7 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.2.10.5 Test requirements

1. The UE shall return two RLC PDUs. The first shall have no "Length Indicators". The second shall have 2 "Length Indicators". The first "Length Indicator"shall be a "Length Indicator" indicating that the SDU was one byte short of filling the previous PDU, and the second shall be a "Length Indicator" indicating that the remainder of the PDU contains padding.

2. The length of the received SDU shall be UM_15_PayloadSize - 1bytes, and the data content shall be the same as the first UM_15_PayloadSize - 1 bytes of the transmitted SDU.

### 7.2.2.11 Reassembly / 15-bit "Length Indicators" / Invalid LI value

#### 7.2.2.11.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of an invalid "Length Indicator" value has been specified. Incorrect operation of segmentation, concatenation, or coding of "Length Indicator" will result in failure of the UE to communicate.

#### 7.2.2.11.2 Conformance requirement

Upon delivery by the lower layer of an UMD PDU that contains a "Length Indicator" value specified to be reserved for UMD PDUs in this version of the protocol, the Receiver shall:

- ignore that UMD PDU.;

Length: 15bits

| Bit | Description |
|---|---|
| **111111111111110** | AMD PDU: The rest of the RLC PDU includes a piggybacked STATUS PDU. UMD PDU: Reserved (PDUs with this coding will be discarded by this version of the protocol). |

Reference(s)

TS 25.322 clause 11.2.4.1, 9.2.2.8.

#### 7.2.2.11.3 Test purpose

To test that PDUs with invalid "Length Indicators" are discarded by the receiving RLC.

#### 7.2.2.11.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 15-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into loop-back mode 1 with the UL SDU size set to UM_15_PayloadSize + 1 bytes.

Test procedure

a) The SS transmits two RLC SDUs of size UM_15_PayloadSize + 1 bytes. In the third PDU for transmission, the SS sets the value of the second (padding) LI to 111111111111110.

b) The SS checks the "Length Indicator" sizes and values of any RLC PDUs returned on the uplink, and checks for the presence of any received RLC SDUs.

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | **UE** | **SS** | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | | ← | DOWNLINK RLC PDU | SDU 1 |
| 3 | | ← | DOWNLINK RLC PDU | SDU 1 & SDU 2 |
| 4 | | ← | DOWNLINK RLC PDU | SDU 2 and invalid LI (=111111111111110) |
| 5 | | → | UPLINK RLC PDU | SDU 1 |
| 6 | | → | UPLINK RLC PDU | SDU 1: Check Lis and re-assembled SDU |
| 7 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.2.11.5 Test requirements

The UE shall return two RLC PDUs. The first shall not include any "Length Indicators". The second shall have a "Length Indicator" indicating the end of the SDU, and a padding "Length Indicator".

The length and data content of the received SDU shall be the same as the first transmitted SDU. The second SDU shall not be returned.

### 7.2.2.12 Reassembly / 15-bit "Length Indicators" / LI value > PDU size

#### 7.2.2.12.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of an invalid

"Length Indicator"value has been specified. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2.12.2 Conformance requirement

If the "Length Indicator" of a PDU has a value that is larger than the PDU size – the number of octets containing "Length Indicators"in the PDU – 1 and is not one of the predefined values listed in the table of 3GPP TS 25.322 clause 9.2.2.8, the PDU shall be discarded and treated as a missing PDU.

If a PDU with sequence number < VR(US) is missing then all SDUs that have segments in this PDU shall be discarded.

Reference(s)

TS 25.322 clauses 11.2.4.2 and 11.2.3.

#### 7.2.2.12.3 Test purpose

To test that PDUs with "Length Indicators" that point beyond the end of the PDU are ignored by the receiving RLC entity.

#### 7.2.2.12.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 15-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into loop-back mode 1 with the UL SDU size set to UM_15_PayloadSize + 1bytes.

Test procedure

a) The SS transmits three RLC SDUs of size UM_15_PayloadSize + 1 bytes. All the SDUs are concatenated or segmented over successive RLC PDUs. In the third PDU for transmission, the SS sets value of the "Length Indicator" to be UM_15_PayloadSize + 1 (decimal).

b) The SS checks the "Length Indicator" values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDUs (assuming a 15-bit "Length Indicator" size).

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 & SDU 2 |
| 4 | ← | | DOWNLINK RLC PDU | SDU 2 & SDU 3, with bad LI |
| 5 | ← | | DOWNLINK RLC PDU | SDU 3 and padding |
| 6 | → | | UPLINK RLC PDU | SDU 1 |
| 7 | → | | UPLINK RLC PDU | SDU 1 and padding: Check LIs and re-assembled SDU |
| 8 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.2.12.5 Test requirements

The UE shall return two RLC PDUs. The first shall not include any "Length Indicators". The second shall have a "Length Indicator" indicating the end of an SDU and a "Length Indicator" indicating that the remainder of the PDU contains padding.

The length and data content of the received SDU shall be the same as the first transmitted SDU. No further SDUs or PDUs shall be received.

## 7.2.2.13 Reassembly / 15-bit "Length Indicators" / First data octet LI

### 7.2.2.13.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. A special LI is defined to indicate that the start of on SDU is coincident with the start of the PDU. The special LI is needed to avoid discarding of an SDU when the first received PDU has a sequence number different from zero. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

### 7.2.2.13.2 Conformance requirement

"Length Indicators" = 111111111111100, UMD PDU: The first data octet in this RLC PDU is the first octet of a RLC SDU.

Reference(s)

TS 25.322 clause 9.2.2.8.

### 7.2.2.13.3 Test purpose

To test that a UE in unacknowledged mode correctly handles a received RLC PDU with a 15-bit "Length Indicator" having its value equal to the special LI value 111111111111100 when the sequence number of the first received PDU is different from zero.

### 7.2.2.13.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for UM 15-bit "Length Indicator" tests in clause 7.2.2.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 150 bytes.

Test procedure

a) The SS transmits a RLC SDU of size 150 bytes in a PDU which has the 'First Data Octet LI' as the first "Length Indicator"in the PDU.

b) The SS waits until the SDU has been received back from the UE, and then transmits another SDU of 150 bytes in a PDU which has the 'First Data Octet LI' as the first "Length Indicator"in the PDU.

c) The SS waits until this SDU has been received back from the UE.

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 with LI = 111111111111100 |
| 3 | | | … | Wait for loopback |
| 4 | → | | UPLINK RLC PDU | SDU 1 |
| 5 | ← | | DOWNLINK RLC PDU | SDU 2 with LI = 111111111111100 |
| 6 | → | | UPLINK RLC PDU | SDU 2 |
| 7 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.2.13.5 Test requirements

1. The UE shall return two RLC PDUs.
2. The length and data content of each received SDU shall be the same as the transmitted SDU.

### 7.2.2.14 Flexible handling of RLC PDU sizes for UM RLC in downlink

#### 7.2.2.14.1 Definition

When UM RLC is mapped to MAC-ehs (downlink only) the RLC PDU size can have arbitary size (integer number of octets). The network can choose to segment the SDUs into smaller RLC PDUs or select the RLC PDU size to exactly fit the SDU size.

#### 7.2.2.14.2 Conformance requirement

Unless the "Extension bit" indicates that a UMD PDU contains a complete SDU which is not segmented, concatenated or padded, or the HE field indicates that an AMD PDU contains the last octet of the RLC SDU, a "Length Indicator" is used to indicate the last octet of each RLC SDU ending within the PDU

[…]

The interpretation of this [E bit] bit depends on RLC mode and higher layer configuration:

- In the UMD PDU, the "Extension bit" in the first octet has either the normal E-bit interpretation or the alternative E-bit interpretation depending on higher layer configuration. The "Extension bit" in all the other octects always has the normal E-bit interpretation.
- In the AMD PDU, the "Extension bit" always has the normal E-bit interpretation.

Normal E-bit interpretation:

| Bit | Description |
|---|---|
| **0** | The next field is data, piggybacked STATUS PDU or padding |
| **1** | The next field is Length Indicator and E bit |

Alternative E-bit interpretation:

| Bit | Description |
|---|---|
| **0** | The next field is a complete SDU, which is not segmented, concatenated or padded. |
| **1** | The next field is Length Indicator and E bit |

[…]

If one or more SDUs have been scheduled for transmission according to subclause 11.2.2, the Sender shall:

- inform the lower layer of the number and size of SDUs scheduled for transmission;
- segment, and if possible concatenate the SDUs according to the PDU sizes indicated by the lower layer (see subclause 9.2.2.9);

[…]

- reassemble the received UMD PDUs into RLC SDUs;
- submit the RLC SDUs to upper layers through the UM-SAP.

Reference(s)

TS 25.322 clauses 9.2.2.8, 11.2.2 and 11.2.3.

#### 7.2.2.14.3 Test purpose

1. To test that a large SDU is correctly received for varying RLC PDU sizes up to the maximum RLC PDU size
2. To test that a segmented SDU is reassembled correctly and delivered to higher layers

#### 7.2.2.14.4 Method of test

Initial conditions

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| DL UM RLC LI size | 15 |
| Alternative E-bit interpretation | TRUE |

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Bearer is replaced with the RB according to 34.108 clause 6.11.4j.1..

The radio bearer is placed into UE test loop mode 1 and configured to return UL RLC SDUs of the same size as received in DL.

Test procedure

a) The SS transmits one RLC SDU of size 20 octets. An RLC PDU is created by adding a one octet UMD header (the SDU is not segmented or concatenated). In the RLC PDU the E field is set to “0”.

b) The SS checks the length and content of the received RLC SDUs

c) The SS transmits one RLC SDU of size 80 octets. An RLC PDU is created by adding a one octet UMD header (the SDU is not segmented or concatenated). In the RLC PDU the E field is set to “0”.

d) The SS checks the length and content of the received RLC SDUs

e) The SS transmits one RLC SDU of size 1500 octets. An RLC PDU is created by adding a one octet UMD header (the SDU is not segmented or concatenated). In the RLC PDU the E field is set to “0”.

f) The SS checks the length and content of the received RLC SDUs

g) The SS transmits one RLC SDU of size 240 octets. The SDU is segmented into successive RLC PDUs of size 2-3, 43, 83 and 103 octets including a one octet UMD header and a length indicator in each RLC PDU.

h) The SS checks the length and content of the received RLC SDUs

i) The SS opens the UE test loop and release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures, |
| 2 | | | Close UE test loop | |
| 3 | ← | | DOWNLINK RLC PDU (SDU1) | SN=0, RLC SDU size = 20 Octets |
| 4 | → | | UPLINK RLC PDU (SDU1) | The SS checks length and content of received RLC SDU. |
| 5 | ← | | DOWNLINK RLC PDU (SDU2) | SN=1, RLC SDU size = 80 Octets |
| 6 | → | | UPLINK RLC PDU (SDU2) | The SS checks length and content of received RLC SDU. |
| 7 | ← | | DOWNLINK RLC PDU (SDU3) | SN=2, RLC SDU size = 1500 Octets |
| 8 | → | | UPLINK RLC PDU (SDU3) | The SS checks length and content of received RLC SDU. |
| 9 | ← | | DOWNLINK RLC PDUs (SDU4) | SN= 3,4,5,6, RLC SDU size = 240 Octets. |
| 10 | → | | UPLINK RLC PDU (SDU4) | The SS checks length and content of received RLC SDU. |
| 11 | | | Open UE test loop | |
| 12 | | | RB RELEASE | |
| NOTE 1: The Expected Sequence shown is infomative. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.2.14.5 Test requirements

For each execution of the test procedure:

1. In steps 4, the UE shall return one RLC SDU with the same size and content as the transmitted SDU
2. In steps 6, the UE shall return one RLC SDU with the same size and content as the transmitted SDU
3. In steps 8, the UE shall return one RLC SDU with the same size and content as the transmitted SDU
4. In steps 10, the UE shall return one RLC SDU with the same size and content as the transmitted SDU

### 7.2.2.15 Flexible handling of RLC PDU sizes for UM RLC in uplink

#### 7.2.2.15.1 Definition

When UM RLC is mapped to MAC-i/is (uplink only) the RLC PDU size can have arbitary size (integer number of octets) as long as the size is between the configured minimum and maximum size. For each transmission the RLC entity constructs an RLC PDU with a size that matches the size indicated by the MAC layer.

#### 7.2.2.15.2 Conformance requirement

The transmitting UM RLC entity segments the RLC SDU into UMD PDUs of appropriate size, if the RLC SDU is larger than the length of available space in the UMD PDU. The size of the UMD PDUs after segmentation and/or concatenated shall be larger than or equal to the Minimum UL RLC PDU size and smaller than or equal to the largest UL UMD PDU size. If data to be transmitted is not enough to create a UMD PDU of the minimum size, it is allowed to create a UMD PDU including all data to be transmitted, even if the resulting size is smaller than the Minimum UL RLC PDU size

[..]

- in uplink, if MAC-i/is has been configured:
  - if the UE pre-generates RLC PDUs for transmission in a later TTI:
    - provided that the UE has sufficient amount of data available for transmission, the size of the data field of the RLC PDU shall be chosen so that each RLC PDU to be multiplexed to the MAC-i/is PDU matches the maximum amount of data allowed to be transmitted by the applicable current grant (scheduled or non-scheduled) for the current TTI.

- RLC PDUs may only be pre-generated if the amount of data in outstanding pre-generated RLC PDUs for this logical channel is less than or equal to four times the maximum amount of data allowed to be transmitted by the applicable current grant (scheduled or non-scheduled) for the current TTI.

- if the UE generates RLC PDUs for transmission in the current TTI:

  - the size of the data field of the RLC PDU shall be chosen so that the RLC PDU size matches the data requested for this logical channel by the current E-TFC selection.

[…]

For UM uplink:

- if the "largest UL UMD PDU size" is ≤ 125 octets:

  - 7-bit "Length Indicators" shall be used.

- else:

  - 15-bit "Length Indicators" shall be used.

[…]

If one or more SDUs have been scheduled for transmission according to subclause 11.2.2, the Sender shall:

- inform the lower layer of the number and size of SDUs scheduled for transmission;

- segment, and if possible concatenate the SDUs according to the PDU sizes indicated by the lower layer (see subclause 9.2.2.9);

Reference(s)

TS 25.322 clauses 4.2.1.2.1, 9.2.2.8, 9.2.2.9, 11.2.2 and 11.2.3.

### 7.2.2.15.3 Test purpose

1. To test that SDUs are correctly concatenated/segmented into RLC PDUs not smaller than “Minimum UL PDU size” (unless there is no other data in the buffer) and not larger than “largest UL UMD PDU size”

2. To test that the size of the RLC PDU is adapted to the size of the issued grant

3. To test that the size of the Length Indicator field is correctly selected based on the maximum PDU size

### 7.2.2.15.4 Method of test

Initial conditions

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Minimum UL PDU size | 320 bit |
| Largest UL UMD PDU size | 640 bit |
| Alternative E-bit interpretation | TRUE |

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exceptions that the default Radio Bearer is replaced with the RB according to 34.108 clause 6.10.2.4.6.9 alt 3 (Flexible RLC + MAC-i/is) and that the MAC-d flow#1 of the RB in 34.108 clause 6.10.2.4.6.9 is configured for scheduled transmissions.

The UE is placed into UE test loop mode 1 with the UL SDU size set to 80 octets.

Test procedure

a) The SS has not issued any grant to the UE for E-DCH

b) The SS transmits 4 RLC SDUs of size 80 octets. RLC PDUs are created by adding a one octet UMD header (the SDUs are not segmented or concatenated). In each RLC PDU the E field is set to “0”.

c) The SS waits for an SI

d) The SS issues an absolute grant (absolute grant signalling value FFS), i.e. the allowed RLC PDU size is below the "Minimum UL PDU size".

e) The SS checks the content of the received RLC SDUs and size of the received RLC PDUs;

f) The SS removes the scheduling grant for the UE

g) The SS transmits 4 RLC SDUs of size 80 octets. RLC PDUs are created by adding a one octet UMD header (the SDUs are not segmented or concatenated). In each RLC PDU the E field is set to "0".

h) The SS issues an absolute grant (absolute grant signalling value FFS), i.e. the allowed RLC PDU size is above the "Largest UL UMD PDU size".

i) The SS checks the content of the received RLC SDUs and size of the received RLC PDUs

j) The SS opens the UE test loop and release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures, |
| 2 | | | Close UE test loop | |
| 3 | ← | | DOWNLINK RLC PDUs | SN=0,1,2,3, RLC SDU size = 80 Octets |
| 4 | → | | SI indicating data | |
| 5 | ← | | Absolute grant | Grant value FFS |
| 6 | → | | UPLINK RLC PDUs | The SS checks length and content of received RLC SDUs. |
| 7 | ← | | Absolute grant | Grant value 1, removal of SG |
| 8 | ← | | DOWNLINK RLC PDUs | SN=4,5,6,7, RLC SDU size = 80 Octets |
| 9 | → | | SI indicating data | |
| 10 | ← | | Absolute grant | Grant value FFS |
| 11 | → | | UPLINK RLC PDUs | The SS checks length and content of received RLC SDUs. |
| 12 | | | Open UE test loop | |
| 13 | | | RB RELEASE | |
| NOTE 1: The Expected Sequence shown is infomative. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

### 7.2.2.15.5 Test requirements

For each execution of the test procedure:

1. In step 6, the UE shall return 4 RLC SDUs with the same content as the transmitted SDUs. The RLC PDU size of the first three RLC PDUs shall be equal to "minimum UL PDU size". The size of the LI field in the RLC header shall be 7 bit.

2. In step 11, the UE shall return 4 RLC SDUs with the same content as the transmitted SDUs. The RLC PDU size of the first three RLC PDUs shall be equal to "Largest UL UMD PDU size". The size of the LI field in the RLC header shall be 7 bit.

## 7.2.2a Unacknowledged mode (3.84/7.68 Mcps TDD MBSFN)

### 7.2.2a.1 P-T-M Radio bearer setup

Two generic P-T-M Radio Access Bearers are provided for the MBSFN UM tests.

The UM test RAB is set up using the Generic Procedure described below, and with the default RAB replaced as follows:

- For UM 7-bit "Length Indicator" tests: the RB configuration described in 3GPP TS 34.108 clause 6.11.1c (3.84 Mcps TDD) or 6.11.1d (7.68 Mcps TDD) is used. For these tests, let UM_7_PayloadSize denote the RAB payload size in octets.

- For UM 15-bit "Length Indicator" tests: the RB configuration described in 3GPP TS 34.108 clause 6.11.2a (3.84 Mcps TDD) or 6.11.2b (7.68 Mcps TDD) is used. For these tests, let UM_15_PayloadSize denote the RAB payload size in octets.

These UM test RABs are used in all tests with the following exception:

- Tests that explicitly specify a different Radio Bearer configuration.

All other settings are the same.

The special "Length Indicator" indicating that an SDU begins in the first octet of a PDU, described in clause 9.2.2.8 in 3GPP TS 25.322 is not used except when explicitly stated in the corresponding test case.

#### Initial conditions

System Simulator:

Unicast carrier: 1 cell, Cell 1 with default configuration.

- MBSFN carriers: 1 cell, Cell 31 has default parameters. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.

  The configuration of the S-CCPCH which will carry the MTCH is based upon the default test RAB configuration defined above.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.

- The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected (i.e. it is included in MBMS_ACTIVATED_SERVICES variable) a national service for which there will be a session starting on MBSFN Cell 31 (see TS 34.108 clause 11.2.4).

#### Procedure

a) The UE is camping on Cell 1 and Cell 31. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 (no session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

c) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on Cell 31 MTCH (Transmission identity indicating the MBSFN MBMS activated service).

d) The SS notifies on MCCH about the start of an MBMS session for one modification period. MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C4 (one PTM session starting) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

e) MCCH messages are then transmitted by the SS on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

f) The SS waits for the UE to start reception of the MBMS data on MTCH according to the specified service activation time. The UE closes the test loop. The UE sends CLOSE UE TEST LOOP COMPLETE.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated on Cell 31 for the selected national service on MTCH. |
| 4 | ← | | M | MBMS MCCH Message Configuration C4 | Includes the national service activated at UE in the modified services list for one modification period. |
| 5 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. |
| 6 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE establishes the MTCH according to the activation time and closes the test loop. |

## 7.2.2a.2 Reassembly / 7-bit "Length Indicators" / Invalid LI value (3.84/7.68 Mcps TDD MBSFN)

### 7.2.2a.2.1 Definition

The RLC segments and concatenates SDUs into UMD PDU according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of an invalid "Length Indicator" value has been specified. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

### 7.2.2a.2.2 Conformance requirement

Upon delivery by the lower layer of an UMD PDU that contains a "Length Indicator" value specified to be reserved for UMD PDUs in this version of the protocol, the Receiver shall:

- ignore that UMD PDU.

[...]

Length: 7 bits

| Bit | Description |
|---|---|
| **1111101** | Reserved (PDUs with this coding will be discarded by this version of the protocol). |
| **1111110** | AMD PDU: The rest of the RLC PDU includes a piggybacked STATUS PDU.<br>UMD PDU: Reserved (PDUs with this coding will be discarded by this version of the protocol). |

Reference(s)

TS 25.322 clause 9.2.2.8 and 11.2.4.1.

### 7.2.2a.2.3 Test purpose

To test that PDUs with reserved "Length indicator" values of '111 1110' and '111 1101' are discarded by the receiving RLC.

### 7.2.2a.2.4 Method of test

#### Initial conditions

The generic procedure for P-T-M Radio Bearer setup (clause 7.2.2a.1) is executed with all the parameters as specified in the procedure for the RAB defined for UM 7-bit "Length Indicator" tests.

#### Test procedure

a) The SS transmits two RLC SDUs of size UM_7_PayloadSize + 1 bytes. In the third PDU for transmission, the SS sets the value of the second (padding) LI to 1111110.

b) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is = 1. The SS records the value.

c) The SS transmits two RLC SDUs of size UM_7_PayloadSize + 1 bytes. In the third PDU for transmission, the SS sets the value of the second (padding) LI to 1111101.

d) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is consistent with a number of received RLC SDUs equal to 1.

#### Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | | | | P-T-M RADIO BEARER SETUP | See clause 7.2.2a.1 |
| 2 | ← | | U | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | U | DOWNLINK RLC PDU | SDU 1 & SDU 2 |
| 4 | ← | | U | DOWNLINK RLC PDU | SDU 2 and invalid LI (=11111110) |
| 5 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 6 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. SS records value. |
| 7 | ← | | U | DOWNLINK RLC PDU | SDU 1 |
| 8 | ← | | U | DOWNLINK RLC PDU | SDU 1 & SDU 2 |
| 9 | ← | | U | DOWNLINK RLC PDU | SDU 2 and invalid LI (=11111101) |
| 10 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 11 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. |
| 12 | ← | | U | OPEN UE TEST LOOP | |
| 13 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 14 | ← | | U | DEACTIVATE RB TEST MODE | |
| 15 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

#### Specific Message Contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

None.

### 7.2.2a.2.5 Test requirements

1) At step 6, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

2) At step 11, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

## 7.2.2a.3 Reassembly / 7-bit "Length Indicators" / LI value > PDU size (3.84/7.68 Mcps TDD MBSFN)

### 7.2.2a.3.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of an invalid "Length Indicator" value has been specified. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

### 7.2.2a.3.2 Conformance requirement

If the "Length Indicator" of an UMD PDU has a value that is larger than the PDU size – RLC header size and is not one of the predefined values listed in the table of TS 25.322 subclause 9.2.2.8, the Receiver shall:

- ignore the UMD PDU.

[...]

Upon delivery of a set of UMD PDUs from the lower layer, the Receiver shall:

- update VR(US) according to each received UMD PDU (see TS 25.322 subclause 9.4);
- if the updating step of VR(US) is not equal to one (i.e. one or more UMD PDUs are missing):
  - discard the SDUs that have segments in the missing UMD PDUs.

#### Reference(s)

TS 25.322 clauses 11.2.4.2 and 11.2.3.

### 7.2.2a.3.3 Test purpose

To test that PDUs with "Length Indicators" that point beyond the end of the PDU are ignored by the receiving RLC entity.

### 7.2.2a.3.4 Method of test

#### Initial conditions

The generic procedure for P-T-M Radio Bearer setup (clause 7.2.2a.1) is executed with all the parameters as specified in the procedure for the RAB defined for UM 7-bit "Length Indicator" tests.

#### Test procedure

a) The SS transmits three RLC SDUs of size UM 7 PayloadSize + 1 bytes. All the SDUs are concatenated or segmented over successive RLC PDUs. In the third PDU for transmission, the SS sets value of the "Length Indicator" to be UM_7_PayloadSize (decimal).

b) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 4 RLC SDU COUNTER RESPONSE is = 1. The SS records the value.

c) The SS transmits three RLC SDUs of size UM 7 PayloadSize + 1 bytes. All the SDUs are concatenated or segmented over successive RLC PDUs. In the third PDU for transmission, the SS sets value of the "Length Indicator" to be UM_7_PayloadSize (decimal).

d) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 4 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is consistent with a number of received RLC SDUs equal to 1.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | | | | P-T-M RADIO BEARER SETUP | See clause 7.2.2a.1 |
| 2 | ← | | U | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | U | DOWNLINK RLC PDU | SDU 1 & SDU 2 |
| 4 | ← | | U | DOWNLINK RLC PDU | SDU 2 & SDU 3, with bad LI |
| 5 | | | | DOWNLINK RLC PDU | SDU 3 and padding |
| 6 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 7 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. SS records value. |
| 8 | ← | | U | DOWNLINK RLC PDU | SDU 4 |
| 9 | ← | | U | DOWNLINK RLC PDU | SDU 4 & SDU 5 |
| 10 | ← | | U | DOWNLINK RLC PDU | SDU 5 & SDU 6, with bad LI |
| 11 | | | | DOWNLINK RLC PDU | SDU 6 and padding |
| 12 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 13 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. |
| 14 | ← | | U | OPEN UE TEST LOOP | |
| 15 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 16 | ← | | U | DEACTIVATE RB TEST MODE | |
| 17 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific Message Contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

None.

#### 7.2.2a.3.5 Test requirements

1) At step 7, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

2) At step 13, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

### 7.2.2a.4 Reassembly / 7-bit "Length Indicators" / First data octet LI (3.84/7.68 Mcps TDD MBSFN)

#### 7.2.2a.4.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length indicators" are added to allow correct reconstruction of SDUs. A special "Length Indicator" is defined to indicate that the start of an SDU is coincident with the start of the PDU. The special "Length Indicator"is needed to avoid discarding of an SDU when the first received PDU has a sequence number different from zero. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2a.4.2 Conformance requirement

1. "Length Indicator" = 1111100, UMD PDU: The first data octet in this RLC PDU is the first octet of a RLC SDU.

2. Upon delivery of a set of UMD PDUs from the lower layer, the Receiver shall:

   ...

   - if the special "Length Indicator" "1111 100" or "1111 1111 1111 100" is the first "Length Indicator" of a UMD PDU received on the downlink:

     - consider the first data octet in this UMD PDU as the first octet of an RLC SDU.

Reference(s)

1. TS 25.322 clause 9.2.2.8.
2. TS 25.322 clause 11.2.3.

### 7.2.2a.4.3 Test purpose

To test that a UE in unacknowledged mode correctly handles a received RLC PDU with a 7-bit "Length Indicator" having its value equal to the special "Length Indicator" value 1111100 when the sequence number of the first received PDU is different from zero.

### 7.2.2a.4.4 Method of test

Initial conditions

The generic procedure for P-T-M Radio Bearer setup (clause 7.2.2a.1) is executed with all the parameters as specified in the procedure for the RAB defined for UM 7-bit "Length Indicator" tests.

Test procedure

a) The SS transmits a RLC SDU of size 12 bytes in a PDU which has the 'First Data Octet LI' as the first "Length Indicator" in the PDU.

b) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is = 1. The SS records the value.

c) The SS transmits another SDU of 12 bytes in a PDU which has the 'First Data Octet LI' as the first "Length Indicator" in the PDU.

d) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is consistent with a number of received RLC SDUs equal to 1.

Note: The SS sends PDUs in downlink starting at sequence number 10.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | | | | P-T-M RADIO BEARER SETUP | See clause 7.2.2a.1 |
| 2 | ← | | U | DOWNLINK RLC PDU, SN 10 | SDU 1 with LI = 1111100 |
| 3 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 4 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. SS records value. |
| 5 | ← | | U | DOWNLINK RLC PDU, SN 11 | SDU 2 with LI = 1111100 |
| 6 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 7 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. |
| 8 | ← | | U | OPEN UE TEST LOOP | |
| 9 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 10 | ← | | U | DEACTIVATE RB TEST MODE | |
| 11 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific Message Contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

None.

#### 7.2.2a.4.5 Test requirements

1) At step 4, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

2) At step 7, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

### 7.2.2a.5 Reassembly / 15-bit "Length Indicators" / Invalid LI value (3.84/7.68 Mcps TDD MBSFN)

#### 7.2.2a.5.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of an invalid "Length Indicator" value has been specified. Incorrect operation of segmentation, concatenation, or coding of "Length Indicator" will result in failure of the UE to communicate.

#### 7.2.2a.5.2 Conformance requirement

Upon delivery by the lower layer of an UMD PDU that contains a "Length Indicator" value specified to be reserved for UMD PDUs in this version of the protocol, the Receiver shall:

- ignore that UMD PDU.;

Length: 15bits

| Bit | Description |
|---|---|
| **111111111111110** | AMD PDU: The rest of the RLC PDU includes a piggybacked STATUS PDU. UMD PDU: Reserved (PDUs with this coding will be discarded by this version of the protocol). |

Reference(s)

TS 25.322 clause 11.2.4.1, 9.2.2.8.

#### 7.2.2a.5.3 Test purpose

To test that PDUs with invalid "Length Indicators" are discarded by the receiving RLC.

#### 7.2.2a.5.4 Method of test

Initial conditions

The generic procedure for P-T-M Radio Bearer setup (clause 7.2.2a.1) is executed with all the parameters as specified in the procedure for the RAB defined for UM 15-bit "Length Indicator" tests.

Test procedure

a) The SS transmits two RLC SDUs of size UM_15_PayloadSize + 1 bytes. In the third PDU for transmission, the SS sets the value of the second (padding) LI to 111111111111110.

b) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is = 1. The SS records the value.

c) The SS transmits two RLC SDUs of size UM_15_PayloadSize + 1 bytes. In the third PDU for transmission, the SS sets the value of the second (padding) LI to 111111111111110.

d) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is consistent with a number of received RLC SDUs equal to 1.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | | | | P-T-M RADIO BEARER SETUP | See clause 7.2.2a.1 |
| 2 | ← | | U | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | U | DOWNLINK RLC PDU | SDU 1 & SDU 2 |
| 4 | ← | | U | DOWNLINK RLC PDU | SDU 2 and invalid LI (=111111111111110) |
| 5 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 6 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. SS records value. |
| 7 | ← | | U | DOWNLINK RLC PDU | SDU 1 |
| 8 | ← | | U | DOWNLINK RLC PDU | SDU 1 & SDU 2 |
| 9 | ← | | U | DOWNLINK RLC PDU | SDU 2 and invalid LI (=111111111111110) |
| 10 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 11 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. |
| 12 | ← | | U | OPEN UE TEST LOOP | |
| 13 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 14 | ← | | U | DEACTIVATE RB TEST MODE | |
| 15 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific Message Contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

None.

#### 7.2.2a.5.5 Test requirements

1) At step 6, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

2) At step 11, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

### 7.2.2a.6 Reassembly / 15-bit "Length Indicators" / LI value > PDU size (3.84/7.68 Mcps TDD MBSFN)

#### 7.2.2a.6.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of an invalid "Length Indicator"value has been specified. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2a.6.2 Conformance requirement

If the "Length Indicator" of a PDU has a value that is larger than the PDU size – the number of octets containing "Length Indicators"in the PDU – 1 and is not one of the predefined values listed in the table of 3GPP TS 25.322 clause 9.2.2.8, the PDU shall be discarded and treated as a missing PDU.

If a PDU with sequence number < VR(US) is missing then all SDUs that have segments in this PDU shall be discarded.

Reference(s)

TS 25.322 clauses 11.2.4.2 and 11.2.3.

#### 7.2.2a.6.3 Test purpose

To test that PDUs with "Length Indicators" that point beyond the end of the PDU are ignored by the receiving RLC entity.

#### 7.2.2a.6.4 Method of test

Initial conditions

The generic procedure for P-T-M Radio Bearer setup (clause 7.2.2a.1) is executed with all the parameters as specified in the procedure for the RAB defined for UM 15-bit "Length Indicator" tests.

Test procedure

a) The SS transmits three RLC SDUs of size UM 15 PayloadSize + 1 bytes. All the SDUs are concatenated or segmented over successive RLC PDUs. In the third PDU for transmission, the SS sets value of the "Length Indicator" to be UM_15_PayloadSize (decimal).

b) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is = 1. The SS records the value.

c) The SS transmits three RLC SDUs of size UM 15 PayloadSize + 1 bytes. All the SDUs are concatenated or segmented over successive RLC PDUs. In the third PDU for transmission, the SS sets value of the "Length Indicator" to be UM_15_PayloadSize (decimal).

d) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is consistent with a number of received RLC SDUs equal to 1.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | | | | P-T-M RADIO BEARER SETUP | See clause 7.2.2a.1 |
| 2 | ← | | U | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | U | DOWNLINK RLC PDU | SDU 1 & SDU 2 |
| 4 | ← | | U | DOWNLINK RLC PDU | SDU 2 & SDU 3, with bad LI |
| 5 | | | | DOWNLINK RLC PDU | SDU 3 and padding |
| 6 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 7 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. SS records value. |
| 8 | ← | | U | DOWNLINK RLC PDU | SDU 4 |
| 9 | ← | | U | DOWNLINK RLC PDU | SDU 4 & SDU 5 |
| 10 | ← | | U | DOWNLINK RLC PDU | SDU 5 & SDU 6, with bad LI |
| 11 | | | | DOWNLINK RLC PDU | SDU 6 and padding |
| 12 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 13 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. |
| 14 | ← | | U | OPEN UE TEST LOOP | |
| 15 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 16 | ← | | U | DEACTIVATE RB TEST MODE | |
| 17 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific Message Contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

None.

#### 7.2.2a.6.5 Test requirements

1) At step 7, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

2) At step 13, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

### 7.2.2a.7 Reassembly / 15-bit "Length Indicators" / First data octet LI (3.84/7.68 Mcps TDD MBSFN)

#### 7.2.2a.7.1 Definition

The RLC segments and concatenates SDUs into UMD PDUs according to the PDU size requested by MAC. "Length Indicators" are added to allow correct reconstruction of SDUs. A special LI is defined to indicate that the start of on SDU is coincident with the start of the PDU. The special LI is needed to avoid discarding of an SDU when the first received PDU has a sequence number different from zero. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.2a.7.2 Conformance requirement

"Length Indicators" = 111111111111100, UMD PDU: The first data octet in this RLC PDU is the first octet of a RLC SDU.

Reference(s)

TS 25.322 clause 9.2.2.8.

#### 7.2.2a.7.3 Test purpose

To test that a UE in unacknowledged mode correctly handles a received RLC PDU with a 15-bit "Length Indicator" having its value equal to the special LI value 111111111111100 when the sequence number of the first received PDU is different from zero.

#### 7.2.2a.7.4 Method of test

Initial conditions

The generic procedure for P-T-M Radio Bearer setup (clause 7.2.2a.1) is executed with all the parameters as specified in the procedure for the RAB defined for UM 15-bit "Length Indicator" tests.

Test procedure

a) The SS transmits a RLC SDU of size 150 bytes in a PDU which has the 'First Data Octet LI' as the first "Length Indicator" in the PDU.

b) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is = 1. The SS records the value.

c) The SS transmits another SDU of 150 bytes in a PDU which has the 'First Data Octet LI' as the first "Length Indicator" in the PDU.

d) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is consistent with a number of received RLC SDUs equal to 1.

Note: The SS sends PDUs in downlink starting at sequence number 10.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | | | | P-T-M RADIO BEARER SETUP | See clause 7.2.2a.1 |
| 2 | ← | | U | DOWNLINK RLC PDU, SN 10 | SDU 1 with LI = 111111111111100 |
| 3 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 4 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. SS records value. |
| 5 | ← | | U | DOWNLINK RLC PDU, SN 11 | SDU 2 with LI = 111111111111100 |
| 6 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 7 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to one. |
| 8 | ← | | U | OPEN UE TEST LOOP | |
| 9 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 10 | ← | | U | DEACTIVATE RB TEST MODE | |
| 11 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific Message Contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

None.

#### 7.2.2a.7.5 Test requirements

1) At step 4, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

2) At step 7, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number that corresponds to one received RLC SDU for Cell 31 MTCH.

## 7.2.3 Acknowledged mode

### 7.2.3.1 General information for AM tests

Two generic Radio Access Bearers are provided for AM tests.

The AM test RAB is set up using the Generic Procedure described in clause 7.1.3 of TS 34.108, and with the default RAB replaced as follows:

- For AM 7-bit "Length Indicator" tests: the RB configuration described in 3G TS 34.108 clause 6.11.3 is used. For these tests, let AM_7_PayloadSize denote the RAB payload size in octets.

- For AM 15-bit "Length Indicator" tests: the RB configuration described in 3G TS 34.108 clause 6.11.4 is used. For these tests, let AM_15_PayloadSize denote the RAB payload size in octets.

Unless specified in individual test cases, the default RLC settings are given in table 7.2/1.

**Table 7.2/1: RLC Parameters for AM testing**

| | |
|---|---|
| Uplink RLC | |
| Transmission RLC discard | |
| Max DAT retransmissions | |
| Max_DAT | 4 |
| Transmission window size | 128 |
| Timer_RST | 500 |
| Max_RST | 4 |
| Polling info | |
| Timer_poll_prohibit | disabled |
| Timer_poll | disabled |
| Poll_PU | disabled |
| Poll_SDU | disabled |
| Last transmission PDU poll | TRUE |
| Last retransmission PDU poll | TRUE |
| Poll_Window | disabled |
| Timer_poll_periodic | disabled |
| Downlink RLC | |
| In-sequence delivery | TRUE |
| Receiving window size | 128 |
| Timer_Status_Prohibit | disabled |
| Timer_EPC | disabled |
| Missing PDU Indicator | TRUE |
| Timer_STATUS_periodic | disabled |

The AM test RABs are used in all tests with the following exception:

- Tests that explicitly specify a different Radio Bearer configuration.

All other settings are the same.

### 7.2.3.2 Segmentation and reassembly / Selection of 7 or 15 bit Length Indicators

#### 7.2.3.2.1 Definition

The RLC segments and concatenates SDUs into PDUs according to the PDU size configured by RRC. "Length Indicators" are added to allow correct reconstruction of SDUs. The selection of the size of the "Length Indicator" fields used must follow the specified rules. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.3.2.2 Conformance requirement

Except for the predefined values reserved for special purposes and listed in TS 25.322 section 9.2.2.8 the "Length Indicator" shall:

- be set to the number of octets between the end of the RLC header and up to and including the last octet of an RLC SDU segment;

- be included in the PDUs that they refer to.

[...]

The size of the Length Indicator may be either 7 bits or 15 bits.

[...]

For AM:

- if the "AMD PDU size" is ≤ l26 octets:

  - 7-bit "Length Indicators" shall be used.

- else:

- 15-bit "Length Indicators" shall be used.

- the size of the "Length Indicator" is always the same for all AMD PDUs, for one RLC entity.

Reference(s)

TS 25.322 clauses 9.2.2.8 and 9.2.2.9.

#### 7.2.3.2.3 Test purpose

To test that if the configured AMD PDU size is ≤ l26 octets, 7 bit "Length Indicators" are used in transmitted AMD PDUs, otherwise, 15 bit "Length Indicators" are used.

#### 7.2.3.2.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to 10 bytes.

Test procedure

a) The SS transmits an RLC SDU of size 10 bytes. The PDU carrying this SDU is transmitted with a poll for status.

b) The SS checks the "Length Indicator" values and SDU size and contents inthe RLC PDU returned on the uplink (assuming a 7-bit "Length Indicator" size).

c) The SS releases the RB.

The SS performs the Radio Bearer establishment procedure (clause 7.1.3 of TS 34.108) with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 15-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC<br>Transmission window size | 16 |
| Downlink RLC<br>Receiving window size | 16 |

All other settings are the same.

d) The SS transmits an RLC SDU of size 10 bytes. The PDU carrying this SDU is transmitted with a poll for status.

e) The SS checks the "Length Indicator" values and SDU size and contents in the RLC PDU returned on the uplink (assuming a 15-bit "Length Indicator" size).

f) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures for AM 7 bit LIs |
| 2 | ← | | DOWNLINK RLC PDU | 10 byte SDU + padding + poll |
| 3 | → | | UPLINK RLC PDU | 10 byte SDU + piggy-backed status + poll |
| *3a* | → | | *STATUS PDU* | *If piggy-backed status is not used in 3* |
| 4 | ← | | STATUS PDU | |
| 5 | ← | | RB RELEASE | |
| 6 | | | RB ESTABLISHMENT | See generic procedures for AM 15 bit LIs (AMD PDU size > 126 bytes) |
| 7 | ← | | DOWNLINK RLC PDU | 10 byte SDU + padding + poll |
| 8 | → | | UPLINK RLC PDU | 10 byte SDU + piggy-backed status + poll |
| *8a* | → | | *STATUS PDU* | *If piggy-backed status is not used in 7* |
| 9 | ← | | STATUS PDU | |
| 10 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.2.5 Test requirements

The UE shall send 7 bit "Length Indicators" with values that correctly indicate the end of SDU in step b).

The UE shall send 15 bit "Length Indicators" with values that correctly indicate the end of SDU in step e).

### 7.2.3.3 Segmentation and Reassembly / 7-bit "Length Indicators" / Padding or Piggy-backed Status

#### 7.2.3.3.1 Definition

The RLC segments and concatenates SDUs into AMD PDUs according to the PDU size configured by RRC. "Length Indicators" are added to allow correct reconstruction of SDUs. Incorrect operation of segmentation, concatenation, or coding of length indicators will result in failure of the UE to communicate.

#### 7.2.3.3.2 Conformance requirement

A "Length Indicator" is used to indicate the last octet of each RLC SDU ending within the PDU.

Except for the predefined values reserved for special purposes and listed in the tables below, the "Length Indicator" shall:

- be set to the number of octets between the end of the RLC header and up to and including the last octet of an RLC SDU segment;
- be included in the PDUs that they refer to.

Predefined values of the "Length Indicator" are used to indicate padding. The values that are reserved for special purposes are listed in the tables below depending on the size of the "Length Indicator". Only predefined "Length Indicator" values can refer to the padding space. These values shall only be placed after all other "Length Indicators" for a PDU.

STATUS PDUs can be piggybacked on the AMD PDU by using part or all of the padding space. A predefined "Length Indicator" shall be used to indicate the presence of a piggybacked STATUS PDU. This "Length Indicator" replaces the padding "Length Indicator". The piggybacked STATUS PDU shall be appended immediately following the PDU data. When only part of the padding space is used, the end of the piggybacked STATUS PDU is indicated by one of the SUFI fields NO_MORE or ACK. Thus no additional "Length Indicator" is required to show that there is still padding in the AMD PDU.

[…]

Sender shall:

- when RLC SDUs are received from upper layers:

- segment the RLC SDUs into AMD PDUs where the fixed PDU size is configured by upper layer;
- set a "Length Indicator" field for each SDU that ends in the AMD PDU according to subclause 9.2.2.8;

[…]

The Receiver may:

- if STATUS PDU(s) to be sent fit into padding octets in AMD PDU(s) to be sent:
  - piggyback a STATUS PDU on the AMD PDU to be sent.

Submission of a piggybacked STATUS PDU in an AMD PDU to the lower layer follows the same rules as an ordinary STATUS PDU.

Reference(s)

TS 25.322 clauses 9.2.2.8, 11.3.2 and 11.5.2.1.

#### 7.2.3.3.3 Test purpose

1. To test that a large SDU is correctly segmented and padding added at the end.
2. To test that a large SDU is received correctly, whether or not it has piggy-backed status at the end.

#### 7.2.3.3.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to AM_7_PayloadSize + 1 bytes.

Test procedure

a) The SS transmits an RLC SDU (SDU1) of size AM_7_PayloadSize + 1bytes, and polls the receiver for status.

b) The SS checks the "Length Indicator" values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 7-bit "Length Indicator" size).

c) The SS transmits another RLC SDU (SDU2) of size AM_7_PayloadSize + 1 bytes, and includes piggy-backed status in the second of the 2 PDUs sent. The SS also polls the receiver for status.

d) The SS checks the "Length Indicator" values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 7-bit "Length Indicator" size).

e) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 +poll + Padding |
| 4 | → | | UPLINK RLC PDU | No LI |
| 5 | → | | UPLINK RLC PDU | Poll, Check LIs and re-assembled SDU |
| *5a* | → | | *STATUS PDU* | *If piggy-backed status is not used in 5* |
| 6 | ← | | DOWNLINK RLC PDU | SDU 2 |
| 7 | ← | | DOWNLINK RLC PDU | SDU 2 + poll + piggy-backed status |
| 8 | → | | UPLINK RLC PDU | No LI |
| 9 | → | | UPLINK RLC PDU | Poll, Check LIs and re-assembled SDU |
| *9a* | → | | *STATUS PDU* | *If piggy-backed status is not used in 9* |
| 10 | ← | | STATUS PDU | |
| 11 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.3.5 Test requirements

1. In steps 4 and 5, the UE shall return two RLC PDUs. The first shall have no "Length Indicators". The second shall have a "Length Indicator"indicating the PDU contains an SDU boundary after octet 1 of the data field, and the second shall indicate either that the remainder of the PDU contains padding, or that it contains a piggy-backed status PDU.

2. In steps 8 and 9, the UE shall return two RLC PDUs. The first shall have no "Length Indicators". The second shall have a "Length Indicator"indicating the PDU contains an SDU boundary after octet 1 of the data field, and the second shall indicate either that the remainder of the PDU contains padding, or that it contains a piggy-backed status PDU.

3. The length and data content of all received SDUs shall be the same as the transmitted SDUs.

### 7.2.3.4 Segmentation and Reassembly / 7-bit "Length Indicators" / LI = 0

#### 7.2.3.4.1 Definition

The RLC segments and concatenates SDUs into AMD PDUs according to the PDU size configured by RRC. A pre-defined "Length Indicator" value is used to indicate when an SDUs ends coincident with the end of the previous PDU. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.3.4.2 Conformance requirement

Except for the predefined values reserved for special purposes and listed in TS 25.322 section 9.2.2.8 the "Length Indicator" shall:

- be set to the number of octets between the end of the RLC header and up to and including the last octet of an RLC SDU segment;

- be included in the PDUs that they refer to.

[...]

In the case where the end of the last segment of an RLC SDU exactly ends at the end of a PDU and there is no "Length Indicator" that indicates the end of the RLC SDU:

- if 7-bit "Length Indicator" is used:

  - a "Length Indicator" with value "000 0000" shall be placed as the first "Length Indicator" in the following PDU;

[...]

For UM and AM RLC:

- if a 7 bit "Length Indicator" is used in a RLC PDU and one or more padding octets are present in the RLC PDU after the end of the last RLC SDU:

- indicate the presence of padding by including a "Length Indicator" with value "1111111" as the last "Length Indicator" in the PDU.

[...]

STATUS PDUs can be piggybacked on the AMD PDU by using part or all of the padding space. A predefined "Length Indicator" shall be used to indicate the presence of a piggybacked STATUS PDU. This "Length Indicator" replaces the padding "Length Indicator". The piggybacked STATUS PDU shall be appended immediately following the PDU data. When only part of the padding space is used, the end of the piggybacked STATUS PDU is indicated by one of the SUFI fields NO_MORE or ACK. Thus no additional "Length Indicator" is required to show that there is still padding in the AMD PDU.

Reference(s)

TS 25.322 clause 9.2.2.8 and 11.3.2.1.

#### 7.2.3.4.3 Test purpose

1. To test that where an SDU exactly fills a PDU, an "Length Indicator" of all 0's is placed by the transmitter as the first "Length Indicator"in the next PDU.

2. To test that where an SDU exactly fills a PDU, and an "Length Indicator"of all 0's is the first "Length Indicator"in the next PDU, the receiver correctly reassembles the SDU.

#### 7.2.3.4.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to AM_7_PayloadSize bytes.

Test procedure

a) The SS transmits an RLC SDU of size 2 * AM_7_PayloadSize bytes. The SS polls the receiver for status in the last RLC PDU sent.

b) The SS checks the "Length Indicator" sizes and values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 7-bit "Length Indicator" size).

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 4 | ← | | DOWNLINK RLC PDU | LI=0, poll and padding |
| 5 | → | | UPLINK RLC PDU | No Lis |
| 6 | → | | UPLINK RLC PDU | (Poll) Check Lis and re-assembled SDU |
| *6a* | → | | *STATUS PDU* | *If piggy-backed status is not used in 6* |
| 7 | ← | | STATUS PDU | |
| 8 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.4.5 Test requirements

The UE shall return two RLC PDUs. The first shall not include any "Length Indicators". The second shall have a "Length Indicator" indicating that the SDU exactly filled the previous PDU, and a "Length Indicator" indicating either that the remainder of the PDU contains padding, or that it contains a piggy-backed STATUS PDU.

The length of the received SDU shall be AM_7_PayloadSize bytes, and the data content shall be the same as the first AM_7_PayloadSize bytes of the transmitted SDU.

### 7.2.3.5 Reassembly / 7-bit "Length Indicators" / Reserved LI value

#### 7.2.3.5.1 Definition

The RLC segments and concatenates SDUs into AMD PDUs according to the PDU size configured by RRC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of a reserved "Length Indicator" value is specified in the conformance requirement below. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.3.5.2 Conformance requirement

Upon delivery by the lower layer of an AMD PDU that contains a "Length Indicator" value specified to be reserved for AMD PDUs in this version of the protocol, the Receiver shall:

- ignore that AMD PDU.

[...]

Length: 7 bits

| Bit | Description |
|---|---|
| **1111100** | UMD PDU: The first data octet in this RLC PDU is the first octet of an RLC SDU. AMD PDU: Reserved (PDUs with this coding will be discarded by this version of the protocol). |
| **1111101** | Reserved (PDUs with this coding will be discarded by this version of the protocol). |

Reference(s)

TS 25.322 clause 9.2.2.8 and 11.3.4.6.

#### 7.2.3.5.3 Test purpose

To test that PDUs with reserved "Length Indicators" are discarded by the receiving RLC.

#### 7.2.3.5.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicators" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Downlink RLC<br>Missing PDU Indicator | <br>FALSE |

These settings apply to both the uplink and downlink DTCH.

Test procedure

a) The SS transmits three concatenated RLC SDUs of size AM_7_PayloadSize + 1 bytes. In the second PDU, the SS sets the value of the first "Length Indicator"to correctly indicate the end of SDU1 and adds a second erroneous "Length Indicator"with value 1111100. In the third PDU for transmission, the SS sets the value of the "Length Indicator" to 1111101.

b) The SS waits to receive a status report from the UE.

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU #0 | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU #1 | SDU 1 + SDU 2, good LI, LI = 1111100 |
| 4 | ← | | DOWNLINK RLC PDU #2 | SDU 2 + SDU 3, LI = 1111101 |
| 5 | ← | | DOWNLINK RLC PDU #3 | SDU 3 + poll |
| 6 | → | | STATUS PDU | Nack PDUs 1 and 2 |
| 7 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative.<br>The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity.<br>Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.5.5 Test requirements

1. The UE shall return a STATUS PDU indicating that PDUs with sequence numbers 1 and 2 were not received.

### 7.2.3.6 Reassembly / 7-bit "Length Indicators" / LI value > PDU size

#### 7.2.3.6.1 Definition

The RLC segments and concatenates SDUs into AMD PDUs according to the PDU size configured by RRC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of an invalid "Length Indicator" value where the value is too large is specified in the conformance requirement below. Incorrect operation of segmentation, concatenation, or coding of "Length Indicator" will result in failure of the UE to communicate.

#### 7.2.3.6.2 Conformance requirement

If the "Length Indicator" of an AMD PDU has a value that is larger than the PDU size – RLC header size and is not one of the predefined values listed in the table of subclause 9.2.2.8, the Sender shall:

- ignore that AMD PDU.

Reference(s)

TS 25.322 clause 11.3.4.5.

#### 7.2.3.6.3 Test purpose

To test that PDUs with "Length Indicators" that point beyond the end of the PDU are discarded by the receiving RLC.

#### 7.2.3.6.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Downlink RLC<br>Missing PDU Indicator | <br>FALSE |

These settings apply to both the uplink and downlink DTCH.

Test procedure

a) The SS transmits three RLC SDUs of size AM_7_PayloadSize + 1bytes. All the SDUs are concatenated or segmented over successive RLC PDUs. In the third PDU for transmission, the SS sets value of the "Length Indicator" to be AM_7_PayloadSize (decimal).

b) The SS checks the "Length Indicator" values in the RLC PDUs returned on the uplink, and checks the content of the received STATUS PDU (assuming a 7-bit "Length Indicator" size).

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU #0 | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU #1 | SDU 1 & SDU 2 |
| 4 | ← | | DOWNLINK RLC PDU #2 | SDU 2 & SDU 3, with bad LI |
| 5 | ← | | DOWNLINK RLC PDU #3 | SDU 3, poll and padding |
| 6 | → | | STATUS PDU | Nack PDU #2 |
| 7 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.6.5 Test requirements

The UE shall return a STATUS PDU indicating that the PDU with sequence number 2 was not received.

### 7.2.3.7 Segmentation and Reassembly / 15-bit "Length Indicators" / Padding or Piggy-backed Status

#### 7.2.3.7.1 Definition

The RLC segments and concatenates SDUs into AMD PDUs according to the PDU size configured by RRC. "Length Indicators" are added to allow correct reconstruction of SDUs. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.3.7.2 Conformance requirement

The "Length Indicator" is used to indicate, each time, the end of an SDU occurs in the PU. The "Length Indicator" points out the number of octets between the end of the last "Length Indicator" field and up to and including the octet at the end of an SDU segment

A PDU that has unused space, to be referred to as padding, shall use a "Length Indicator" to indicate that this space is used as padding unless the padding size is one octet for PDUs with 15-bit LIs. A padding "Length Indicator" must be placed after any "Length Indicators" for a PDU.

Upon reception of a SDU, RLC shall segment the SDU to fit into the fixed size of a PDU. The segments are inserted in the data field of a PDU. A "Length Indicator" shall be added to each PDU that includes a border of an SDU, i.e. if a PDU does not contain a "Length Indicator", the SDU continues in the next PDU. The length indicator indicates where the border occurs in the PDU. The data after the indicated border can be either a new SDU, padding or piggybacked information. If padding or piggybacking is added another "Length Indicator" shall be added unless the padding size is one octet for PDUs with 15-bit "Length Indicators", see clauses 9.2.2.8 and 9.2.2.9.

Reference(s)

TS 25.322 clauses 9.2.2.8 and 11.3.2.1.2.

#### 7.2.3.7.3 Test purpose

1. To test that a large SDU is correctly segmented and padding added at the end.
2. To test that a large SDU is received correctly, whether or not it has piggy-backed status at the end.

#### 7.2.3.7.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 15-bit "Length Indicator" tests in clause 7.2.3.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to AM_15_PayloadSize + 1bytes.

Test procedure

a) The SS transmits an RLC SDU (SDU1) of size AM_15_PayloadSize + 1 bytes, and polls the receiver for status.

b) The SS checks the "Length Indicator" values in the RLC PDU returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 15-bit "Length Indicator" size).

c) The SS transmits another RLC SDU (SDU2) of size AM_15_PayloadSize + 1 bytes, and includes piggy-backed status in the second of the 2 PDUs sent. The SS also polls the receiver for status.

d) The SS checks the "Length Indicator" sizes and values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 15-bit "Length Indicator" size).

e) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 +poll + Padding |
| 4 | → | | UPLINK RLC PDU | No LI |
| 5 | → | | UPLINK RLC PDU | Poll, Check LIs and re-assembled SDU |
| *5a* | → | | *STATUS PDU* | *If piggy-backed status is not used in 5* |
| 6 | ← | | DOWNLINK RLC PDU | SDU 2 |
| 7 | ← | | DOWNLINK RLC PDU | SDU 2 + poll + piggy-backed status |
| 8 | → | | UPLINK RLC PDU | No LI |
| 9 | → | | UPLINK RLC PDU | Poll, Check LIs and re-assembled SDU |
| *9a* | → | | *STATUS PDU* | *If piggy-backed status is not used in 9* |
| 10 | ← | | STATUS PDU | |
| 11 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.7.5 Test requirements

1. In steps 4 and 5, the UE shall return two RLC PDUs. The first shall not include any "Length Indicators". The second shall have a "Length Indicator"indicating the PDU contains an SDU boundary after octet 1 of the data field, and the second shall indicate either that the remainder of the PDU contains padding, or that it contains a piggy-backed status PDU.

2. In steps 8 and 9, the UE shall return two RLC PDUs. The first shall not include any "Length Indicators". The second shall have a "Length Indicator"indicating the PDU contains an SDU boundary after octet 1 of the data field, and the second shall indicate either that the remainder of the PDU contains padding, or that it contains a piggy-backed status PDU.

3. The length and data content of all received SDUs shall be the same as the transmitted SDUs.

### 7.2.3.8 Segmentation and Reassembly / 15-bit "Length Indicators" / LI = 0

#### 7.2.3.8.1 Definition

The RLC segments and concatenates SDUs into AMD PDUs according to the PDU size configured by RRC. A pre-defined "Length Indicator" value is used to indicate when an SDUs ends coincident with the end of the previous PU. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.3.8.2 Conformance requirement

If the PDU is exactly filled with the last segment of a SDU and there is no room for a "Length Indicator" field, a "Length Indicator" field set to only 0's shall be included as the first "Length Indicator" in the following PDU.

Reference(s)

TS 25.322 clause 11.3.2.1.

#### 7.2.3.8.3 Test purpose

1. To test that where an SDU exactly fills a PDU, a "Length Indicator" of all 0's is placed by the transmitter as the first "Length Indicator" in the next PDU.

2. To test that where an SDU exactly fills a PDU, and a "Length Indicator" of all 0's is the first "Length Indicator" in the next PDU, the receiver correctly reassembles the SDU.

#### 7.2.3.8.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 15-bit "Length Indicator" tests in clause 7.2.3.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to AM_15_PayloadSize bytes.

Test procedure

a) The SS transmits an RLC SDU of size 2 * AM_15_PayloadSize bytes. The SS polls the receiver for status in the last RLC PDU sent.

b) The SS checks the "Length Indicator" values in the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 15-bit "Length Indicator" size).

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 4 | ← | | DOWNLINK RLC PDU | LI=0, poll and padding |
| 5 | → | | UPLINK RLC PDU | No Lis |
| 6 | → | | UPLINK RLC PDU | (Poll) Check Lis and re-assembled SDU |
| *6a* | → | | *STATUS PDU* | *If piggy-backed status is not used in 6* |
| 7 | ← | | STATUS PDU | |
| 8 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.8.5 Test requirements

The UE shall return two RLC PDUs. The first shall have no "Length Indicators". The second shall have a "Length Indicator" indicating that the SDU exactly filled the previous PDU, and a "Length Indicator" indicating either that the remainder of the PDU contains padding, or that it contains a piggy-backed STATUS PDU.

The length of the received SDU shall be AM_15_PayloadSize bytes, and the data content shall be the same as the first AM_15_PayloadSize bytes of the transmitted SDU.

### 7.2.3.9 Segmentation and reassembly / 15-bit "Length Indicators" / One octet short LI

#### 7.2.3.9.1 Definition

The RLC segments and concatenates SDUs into AMD PDUs according to the PDU size configured by RRC. A pre-defined "Length Indicator" value is used to indicate when an SDUs ends one octet short of the end of the previous PU. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.3.9.2 Conformance requirement

In the case where the last segment of an RLC SDU is one octet short of exactly filling the last RLC PU, and 15-bit "Length Indicators" are used, the next "Length Indicator" shall be placed as the first "Length Indicator" in the next PDU and have value "Length Indicator"=111 1111 1111 1011.

In the case where a PDU contains a 15-bit "Length Indicator" indicating that an SDU ends with one octet left in the PDU, the last octet of this PDU shall be ignored and shall not be filled with the first octet of the next SDU data.

Reference(s)

TS 25.322 clause 9.2.2.8.

#### 7.2.3.9.3 Test purpose

1. To test that where the UE transmits an SDU, which is one byte short of filling a PDU, a "Length Indicator" indicating one byte short is placed as the first "Length Indicator"in the next PDU.

2. To test that where the UE correctly handles a received PDU containing a "Length Indicator" indicating that an SDU ended one byte short of the end of the previous PDU.

#### 7.2.3.9.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 15-bit "Length Indicator" tests in clause 7.2.3.1.

These settings apply to both the uplink and downlink DTCH.

The radio bearer is placed into UE test loop mode 1 with the UL SDU size set to AM_15_PayloadSize – 1bytes.

Test procedure

a) The SS transmits an RLC SDU of size (2 * AM_15_PayloadSize) - 1 bytes. The SS polls the receiver for status in the last RLC PDU sent.

b) The SS checks the "Length Indicator" values of the RLC PDUs returned on the uplink, and checks the length and content of the received RLC SDU (assuming a 15-bit "Length Indicator" size).

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 4 | ← | | DOWNLINK RLC PDU | LI=111 1111 1111 1011, poll and padding |
| 5 | → | | UPLINK RLC PDU | No LIs |
| 6 | → | | UPLINK RLC PDU | (Poll) Check LIs and re-assembled SDU |
| *6a* | → | | *STATUS PDU* | *If piggy-backed status is not used in 6* |
| 7 | ← | | STATUS PDU | |
| 8 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.9.5 Test requirements

1. The UE shall return two RLC PDUs. The first shall have no "Length Indicators". The second shall have 2 "Length Indicators". The first "Length Indicator"shall be an "Length Indicator" indicating that the SDU was one byte short of filling the previous PDU, and the second shall be a "Length Indicator" indicating that the remainder of the PDU contains padding.

2. The length of the received SDU shall be AM_15_PayloadSize - 1 bytes, and the data content shall be the same as the first AM_15_PayloadSize - 1 bytes of the transmitted SDU.

## 7.2.3.10 Reassembly / 15-bit "Length Indicators" / Reserved LI value

### 7.2.3.10.1 Definition

The RLC segments and concatenates SDUs into AMD PDU according to the PDU size configured by RRC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of a reserved LI value has been specified. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

### 7.2.3.10.2 Conformance requirement

Upon reception of an AMD PDU that contains "Length Indicator" value "111111111111100" or "111111111111101": PDUs with this coding will be discarded by this version of the protocol.

Reference(s)

TS 25.322 clause 9.2.2.8.

### 7.2.3.10.3 Test purpose

To test that PDUs with reserved "Length Indicators" are discarded by the receiving RLC.

### 7.2.3.10.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 15-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Downlink RLC<br>Missing PDU Indicator | <br>FALSE |

These settings apply to both the uplink and downlink DTCH.

Test procedure

a) The SS transmits three RLC SDUs of size AM_15_PayloadSize + 1 bytes. In the second PDU, the SS sets the value of the "Length Indicator" to 111111111111100. In the third PDU for transmission, the SS sets the value of the second (padding) "Length Indicator" to 111111111111101.

b) The SS waits to receive a status report from the UE.

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU #0 | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU #1 | SDU 1 + SDU 2, LI = 111111111111100 |
| 4 | ← | | DOWNLINK RLC PDU #2 | SDU 2+ SDU 3, LI = 111111111111101 |
| 5 | ← | | DOWNLINK RLC PDU #3 | SDU 3 + poll |
| 6 | → | | STATUS PDU | Nack PDUs 1 and 2 |
| 7 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative.<br>The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity.<br>Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.10.5 Test requirements

1. The UE shall return a STATUS PDU indicating that PDUs with sequence numbers 1 and 2 were incorrectly received.

2. No uplink SDUs shall be received.

### 7.2.3.11 Reassembly / 15-bit "Length Indicators" / LI value > PDU size

#### 7.2.3.11.1 Definition

The RLC segments and concatenates SDUs into PDUs according to the PDU size configured by RRC. "Length Indicators" are added to allow correct reconstruction of SDUs. The behaviour of the RLC on reception of an invalid LI value has been specified. Incorrect operation of segmentation, concatenation, or coding of "Length Indicators" will result in failure of the UE to communicate.

#### 7.2.3.11.2 Conformance requirement

If the "Length Indicator" of a PDU has a value that is larger than the PDU size – the number of octets containing "Length Indicators" in the PDU – 1 and is not one of the predefined values listed in the table of 3GPP TS 25.322 clause 9.2.2.8, the PDU shall be discarded and treated as a missing PDU.

Reference(s)

TS 25.322 clause 11.3.4.5.

#### 7.2.3.11.3 Test purpose

To test that PDUs with "Length Indicators" that point beyond the end of the PDU are discarded by the receiving RLC.

#### 7.2.3.11.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 15-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Downlink RLC<br>Missing PDU Indicator | FALSE |

These settings apply to both the uplink and downlink DTCH.

Test procedure

a) The SS transmits three RLC SDUs of size AM_15_PayloadSize + 1 bytes. All the SDUs are concatenated or segmented over successive RLC PDUs. In the third PDU for transmission, the SS sets value of the "Length Indicators" to be AM_15_PayloadSize + 1 (decimal).

b) The SS checks the "Length Indicator" values of the RLC PDUs returned on the uplink, and checks the content of the received STATUS PDUs (assuming a 15-bit "Length Indicator" size).

c) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU #0 | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU #1 | SDU 1 & SDU 2 |
| 4 | ← | | DOWNLINK RLC PDU #2 | SDU 2 & SDU 3, with bad LI |
| 5 | ← | | DOWNLINK RLC PDU #4 | SDU 3, poll and padding |
| 6 | → | | STATUS PDU | Nack PDU #2 |
| 7 | | | RB RELEASE | Optional step |

#### 7.2.3.11.5 Test requirements

The UE shall indicate that the PDU with sequence number 2 was not received.

### 7.2.3.12 Correct use of Sequence Numbering

#### 7.2.3.12.1 Definition

Peer RLC entities use sequence numbering to detect missing PDUs, and for flow control purposes. Incorrect operation of sequence numbering will result in failure of the UE to communicate.

#### 7.2.3.12.2 Conformance requirement

This sub-clause describes the state variables used in AM and UM in order to specify the peer-to-peer protocol. All state variables are non-negative integers. UMD and AMD PDUs are numbered by modulo integer sequence numbers (SN) cycling through the field: 0 to $2^{12} – 1$ for AM … . All arithmetic operations contained in the present document on VT(S), VT(A), VT(MS), VR(R), VR(H) and VR(MR) are affected by the AM modulus. … . When performing arithmetic comparisons of state variables or Sequence number values a modulus base shall be used. This modulus base is subtracted (within the appropriate field) from all the values involved and then an absolute comparison is performed. At the Sender, VT(A) … shall be assumed to be the modulus base in AM … . At the Receiver, VR(R) … shall be assumed to be the modulus base in AM … .

The RLC shall maintain the following state variables in the Sender.

a) VT(S) - Send state variable.

   This state variable contains the "Sequence Number" of the next AMD PDU to be transmitted for the first time (i.e. excluding retransmitted PDUs). It shall be updated after the aforementioned AMD PDU is transmitted or after transmission of a MRW SUFI which includes $SN_MRW_{LENGTH}$ >VT(S) (see subclause 11.6). The initial value of this variable is 0.

[...]

If the AMD PDU is transmitted for the first time, the Sender shall:

- set the "Sequence Number" field equal to VT(S);

Reference(s)

TS 25.322, clauses 9.4 and 11.3.2.1.

#### 7.2.3.12.3 Test purpose

1. To verify that the UE transmits the first PDU with the Sequence Number field equal to 0.
2. To verify that the UE increments the Sequence Number field according to the number of PDUs transmitted.
3. To verify that the UE wraps the Sequence Number after transmitting the $2^{12}$-1th PDU.
4. To verify that the UE receiver accepts PDUs with SNs that wrap around every $2^{12}$-1th PDU.

7.2.3.12.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC | |
| Polling info | |
| Poll_PDU | 64 |
| Transmission window size | 128 |
| Downlink RLC | |
| Receiving window size | 128 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to (2 * AM_7_PayloadSize) - 1 bytes.

Test procedure

a) The SS sends 2049 RLC SDUs to the UE, each of (2 * AM_7_PayloadSize) - 1 bytes. The SS polls for status on each 64$^{th}$ RLC PDU and the last PDU transmitted

b) When the SS received an uplink PDU with the P bit set to 1, the SS transmits a STATUS PDU acknowledging all the RLC PDUs received so far.

c) The SS checks the sequence numbers of the RLC PDUs it receives in the uplink

d) The SS checks the content of the SDUs it receives from the UE.

e) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU #1 | |
| 3 | ← | | DOWNLINK RLC PDU #2 | |
| | | | … | Transmission of DOWNLINK PDUs continues |
| 4 | → | | UPLINK RLC PDU#1 | SN should be set to 0 |
| 5 | → | | UPLINK RLC PDU#2 | SN should be set to 1 |
| | ← | | … | Transmission of DOWNLINK PDUs continues to SN = 63 |
| 6 | ← | | DOWNLINK RLC PDU #64 | Poll |
| 7 | → | | UPLINK STATUS PDU | |
| | ← | | … | Transmission of DOWNLINK PDUs continues, polling every 64th PDU, to SN = 4094 |
| 8 | ← | | DOWNLINK RLC PDU #4096 | |
| 9 | ← | | DOWNLINK RLC PDU #4097 | SN=0 |
| 10 | ← | | DOWNLINK RLC PDU #4098 | SN=1, Poll |
| 10a | → | | UPLINK RLC PDUs | UE transmission of UPLINK RLC PDUs continues, polling every 64th PDU, to SN=4094. On poll, SS acknowledge all received PDUs. |
| 10b | | | Void | |
| 10c | → | | UPLINK RLC PDU#4096 | SN = 4095, Poll (cause: Poll_PDU=64) |
| 10d | ← | | STATUS PDU | ACK SN up to 4095 |
| 10e | | | Void | |
| 11 | | | Void | |
| 12 | → | | UPLINK RLC PDU#4097 | SN should be set to 0 |
| 13 | → | | UPLINK RLC PDU#4098 | SN should be set to 1, Poll |
| 14 | ← | | DOWNLINK STATUS PDU | |
| 15 | | | RB RELEASE | Optional step |
| NOTE: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.12.5 Test requirements

1. The first PDU received shall have the SN field set to 0. The second PDU shall have the SN field set to 1, and the 4 097th PDU shall have the SN field set to 0.

2. The size and data content of the received SDUs shall match those of the transmitted SDUs.

### 7.2.3.13 Control of Transmit Window

#### 7.2.3.13.1 Definition

This test is to check that the UE is able to correctly control its RLC transmission window. Correct operation of RLC windowing is critical for acknowledged mode operation.

#### 7.2.3.13.2 Conformance requirement

VT(MS) - Maximum Send state variable.

This state variable contains the "Sequence Number" of the first AMD PDU that can be rejected by the peer Receiver, VT(MS) = VT(A) + VT(WS). This value represents the upper edge of the transmission window. The transmitter shall not transmit AMD PDUs with "Sequence Number" $\geq$ VT(MS) unless VT(S) $\geq$ VT(MS). In that case, the AMD PDU with "Sequence Number" = VT(S) - 1 can also be transmitted. VT(MS) shall be updated when VT(A) or VT(WS) is updated.

The initial value of this variable is Configured_Tx_Window_size.

... The receiver is always allowed to change the Tx window size of the peer entity during a connection, but the minimum and the maximum allowed value is given by RRC configuration. The Rx window of the receiver is not changed.

Reference(s)

TS 25.322, clauses 9.2.2.11.3 and 9.4.

7.2.3.13.3 Test purpose

To verify that the UE does not transmit PDUs with sequence numbers outside of the transmit window, except the PDU with SN=VT(S)-1, even when the transmit window size is changed by the receiver.

7.2.3.13.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| Uplink RLC | First run | Second run |
|---|---|---|
| Transmission window size | 8 | 128 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to AM_7_PayloadSize - 1 bytes.

Related IXIT statement

UE support for either RLC SDU Buffering OR RLC SDU Discard.

Test procedure

Let W be the size of the transmit window.

The length of all transmitted SDUs is set to AM_7_PayloadSize - 1 bytes.

a) The SS transmits W+1 RLC SDUs to the UE.

b) The SS checks the RLC SDUs received on the uplink, but does not reply to poll requests from the UE, or transmit STATUS PDUs for any other reason.

c) After confirming that the UE has stopped transmitting new RLC SDUs for at least (2*W*TTI) ms, the SS transmits a STATUS PDU acknowledging all the RLC PDUs received so far. The SS transmits W+1 additional RLC SDUs to the UE.

d) The SS again checks the RLC SDUs received on the uplink, but does not reply to poll requests from the UE, or transmit further STATUS PDUs for any other reason.

e) After confirming that the UE has again stopped transmitting new RLC SDUs for at least (2*W*TTI) ms, the SS transmits a STATUS PDU acknowledging all the RLC PDUs received so far, and containing a WINDOW command to reduce the UE transmit window size (W) to half its initial size. The SS transmits W/2+1 additional RLC SDUs to the UE (where W is the original window size).

f) The SS checks the RLC SDUs received on the uplink, but does not reply to poll requests from the UE, or transmit STATUS PDUs for any other reason.

g) After confirming that the UE has stopped transmitting new RLC SDUs for at least (2*W*TTI) ms, the SS transmits a STATUS PDU acknowledging all the RLC PDUs received so far. The SS transmits W/2+1 additional RLC SDUs to the UE (where W is the original window size).

h) The SS checks the RLC SDUs received on the uplink.

i) The SS may optionally release the radio bearer.

NOTE: Window arithmetic is carried out modulo 4096.

The test procedure is run with the window transmit window size set to the default (8), and the repeated with the transmit window size set to 128.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 2 |
| 4 | ← | | DOWNLINK RLC PDU | SDU 3 |
| 5 | ← | | DOWNLINK RLC PDU | SDU 4 |
| 6 | ← | | … | SS continues to transmit RLC SDUs |
| 7 | ← | | DOWNLINK RLC PDU | SDU W+1 |
| 8 | → | | UPLINK RLC PDU | SDU 1 |
| 9 | → | | UPLINK RLC PDU | SDU 2 |
| 10 | → | | … | SS continues to receive RLC SDUs |
| 11 | → | | UPLINK RLC PDU | SDU W + poll |
| 12 | | | | No new transmissions from UE |
| 13 | ← | | STATUS PDU | |
| 13a | ← | | DOWNLINK RLC PDUs | SDU W+2 |
| 13b | | | … | SS continues to transmit RLC SDUs |
| 13c | ← | | DOWNLINK RLC PDUs | SDU 2W+2 |
| 14 | → | | UPLINK RLC PDU | SDU W+1 (SDU buffered), or W+2 (SDU W+1 discarded, see note 3) |
| 15 | → | | UPLINK RLC PDU | Next SDU |
| 16 | → | | … | SS continues to receive RLC SDUs |
| 17 | → | | UPLINK RLC PDU | SDU 2W+poll (SDU buffered), or SDU 2W+1+poll (SDU W+1 discarded, see note 3) |
| 18 | | | | No new transmissions from UE |
| 19 | ← | | STATUS PDU | WINDOW = W/2 |
| 19a | ← | | DOWNLINK RLC PDUs | SDU 2W+3 |
| 19b | | | … | SS continues to transmit RLC SDUs |
| 19c | ← | | DOWNLINK RLC PDUs | SDU 2W + W/2 + 3 |
| 20 | → | | UPLINK RLC PDU | SDU 2W+1 (SDU buffered), or 2W+3 (SDU 2W+2 discarded, see note 3) |
| 21 | → | | UPLINK RLC PDU | Next SDU |
| 22 | ← | | … | SS continues to receive RLC SDUs |
| 23 | → | | UPLINK RLC PDU | SDU 2W+W/2+poll (SDU buffered), or SDU 2W+W/2+2+poll (SDU 2W+2 discarded, see note 3) |
| 24 | | | | No new transmissions from UE |
| 25 | ← | | STATUS PDU | |
| 25a | ← | | DOWNLINK RLC PDUs | SDU 2W + W/2 + 4 |
| 25b | | | … | SS continues to transmit RLC SDUs |
| 25c | ← | | DOWNLINK RLC PDUs | SDU 3W + 4 |
| 26 | → | | UPLINK RLC PDU | SDU 2W+W/2+1 (SDU buffered), or 2W+W/2+4 (SDU 2W+W/2+3 discarded, see note 3) |
| 27 | → | | UPLINK RLC PDU | Next SDU |
| 28 | ← | | … | SS continues to receive RLC SDUs |

| | | | |
|---|---|---|---|
| 29 | → | UPLINK RLC PDU | SDU 3W+poll (SDU buffered), or SDU 3W+3+poll (SDU 2W+W/2+3 discarded, see note 3) |
| 30 | | RB RELEASE | Optional step |

NOTE 1: The Expected Sequence shown is infomative.
The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity.
Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes.

NOTE 2: The polls in step 11, 17, 23 and 29 are transmitted as the last PDU in buffer trigger is set to TRUE and the transmitted PDU is the last PDU in the transmitter window, see TS 25.322 clause 9.7.1.

NOTE 3: TS 25.322 does not specify the UE behaviour when transmission buffer is full. Thus, depending on UE implementation, the uplink AM entity may or may not discard AM RLC PDUs received from upper layer (e.g. from UE test loop function) when transmission buffer is full. The SS need to take this into consideration when comparing SS sent SDUs in downlink with the UE returned SDUs in uplink.

#### 7.2.3.13.5 Test requirements

From steps 8 to 11, the SDU contents reassembled from the uplink shall match those of the first W transmitted SDUs.

At step 12 there shall be no further transmission on the uplink DTCH whilst the SS is waiting, except for any repeats of SDUs from 1 to W.

After step 13, the UE shall resume transmission of the next W SDUs. The contents of these SDUs shall match those of SDUs W+1 to 2*W (SDU buffered, see note 3), or W+2 to 2*W+1 (SDU W+1 discarded, see note 3), sent on the downlink.

At step 18 there shall be no further transmission on the uplink DTCH whilst the SS is waiting, except for any repeats of SDUs from W+1 to 2*W or W+2 to 2*W+1.

After step 19, the UE shall resume transmission of the next W/2 SDUs. The contents of these SDUs shall match those of SDUs 2*W+1 to 2*W+W/2 (SDU buffered, see note 3), or 2*W+3 to 2*W+W/2+2 (SDU 2W+2 discarded, see note 3), sent on the downlink.

At step 24 there shall be no further transmission on the uplink DTCH whilst the SS is waiting, except for any repeats of SDUs from 2*W+1 to 2*W+W/2 or 2*W+3 to 2*W+W/2+2.

After step 25, the UE shall resume transmission of the next W/2 SDUs. The contents of these SDUs shall match those of SDUs 2*W+W/2+1 to 3*W (SDU buffered, see note 3), or 2*W+W/2+4 to 3*W+3 (SDU 2W+W/2+3 discarded, see note 3), sent on the downlink.

### 7.2.3.14 Control of Receive Window

#### 7.2.3.14.1 Definition

This test is to check that the UE is able to correctly control its RLC receive window. Correct operation of RLC windowing is critical for acknowledged mode operation.

This test applies to all UE.

#### 7.2.3.14.2 Conformance requirement

Upon reception of an AMD PDU with "Sequence Number" outside the interval VR(R)≤SN<VR(MR), the Receiver shall:

- discard the AMD PDU;
- if the "polling bit" in the discarded AMD PDU is set to "1":
  - initiate the STATUS PDU transfer procedure.

#### Reference(s)

TS 25.322, clause 11.3.4.2.

#### 7.2.3.14.3 Test purpose

To verify that the UE discards PDUs with sequence numbers outside the upper boundary of the receive window.

#### 7.2.3.14.4 Method of test

##### Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | | |
|---|---|---|
| Uplink RLC<br>Transmission window size | First run<br>8 | Second run<br>128 |
| Downlink RLC<br>Missing PDU Indicator<br>Receiving window size | <br>FALSE<br>8 | <br>FALSE<br>128 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to AM_7_PayloadSize - 1 bytes.

##### Test procedure

Let W be the size of the receive window.

The length of all transmitted SDUs is set to AM_7_PayloadSize - 1 bytes.

a) The SS transmits W RLC SDUs to the UE, polling only on the last RLC PDU.

b) The SS checks the RLC SDUs received on the uplink, responding to poll requests with acknowledgements. Then after receiving the STATUS PDU from the UE it transmits a further RLC SDU with the poll bit set. The SS sets the sequence number for the associated RLC PDU above the top of the receive window, for example, 2*W.

c) The SS receives a STATUS PDU from the UE.

d) The SS transmits a further RLC SDU with the sequence number set to the value of the next sequence number within the receive window.

e) The SS checks the RLC SDUs received on the uplink.

f) The SS may optionally release the radio bearer.

This test case is run once for the default receive window size (8) and again with the receive window size set to 128.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1, SN = 0 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 2, SN = 1 |
| 4 | ← | | … | SS continues to transmit RLC SDUs |
| 5 | ← | | DOWNLINK RLC PDU | SDU W + Poll, SN = W-1 |
| 6 | → | | STATUS PDU | |
| 7 | → | | UPLINK RLC PDU | SDU 1 |
| 8 | → | | UPLINK RLC PDU | SDU 2 |
| 9 | | | … | UE continues to transmit RLC SDUs |
| 10 | → | | UPLINK RLC PDU | SDU W, Poll |
| 10a | ← | | STATUS PDU | |
| 11 | ← | | DOWNLINK RLC PDU | SDU W+1, SN = 2W, Poll |
| 11a | → | | STATUS PDU | |
| 12 | ← | | DOWNLINK RLC PDU | SDU W+2, SN = W |
| 13 | → | | UPLINK RLC PDU | SDU W+2 |
| 14 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.14.5 Test requirements

1. The SS shall receive back SDUs 1 to W, and SDU W + 2 only. No other SDUs shall be looped back.
2. The SS shall receive a STATUS PDU in step 11a. SN=2W shall not be indicated as received in the STATUS PDU. Negative acknowledgements shall not be indicated for SN=W to 2W-1 either.

### 7.2.3.15 Polling for status / Last PDU in transmission queue

#### 7.2.3.15.1 Definition

This case tests that the UE will poll for a status request on the last PDU in its transmission queue when that mode is enabled. Incorrect operation of polling will cause degradation of service, or at worst service failure.

#### 7.2.3.15.2 Conformance requirement

Last PDU in buffer.

When an AMD PDU to be transmitted for the first time is submitted to lower layer, the Sender shall:

- if the AMD PDU is the last AMD PDU scheduled for transmission according to subclause 11.3.2 (i.e. no data received from upper layer remains to be segmented into AMD PDUs); or
- if the AMD PDU is the last AMD PDU that is allowed to transmit according to subclause 11.3.2.2:
  - trigger a poll for this AMD PDU

....

- AMD PDUs are only allowed to transmit:
  - if the AMD PDU has a "Sequence Number" < VT(MS); or
  - if the AMD PDU has a "Sequence Number" equal to VT(S)-1; and
  - if the AMD PDU is not restricted to be transmitted by the local suspend function, see 3GPP TS 25.322 subclause 9.7.5.

...

The Sender shall:

- if a poll has been triggered by one or several poll triggers (see 3GPP TS 25.322 subclause 9.7.1):
  - if polling is not prohibited, see subclause 9.5:
    - set the "Polling bit" in the AMD PDU header to "1";
- otherwise:
  - set the "Polling bit" in the AMD PDU header to "0".

Reference

TS 25.322 clause 11.3.2.1.1, 9.7.1 and 11.3.2.

#### 7.2.3.15.3 Test purpose

1. To verify that a poll is performed when only one PDU is available for transmission, and the poll prohibit timer function is not used.
2. To verify that a poll is performed when only one PDU is available for transmission, and the poll prohibit timer function is used, but inactive.

#### 7.2.3.15.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| Uplink RLC | First run | Second run |
|---|---|---|
| Polling info | | |
| Timer_poll_prohibit | disabled | 200 |
| Last transmission PDU poll | TRUE | TRUE |
| Last retransmission PDU poll | FALSE | FALSE |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to (2 * AM_7_PayloadSize) - 1 bytes.

Test procedure

a) The SS transmits an RLC SDU of length (4 * AM_7_PayloadSize) - 1bytes to the UE.

b) The SS checks the uplink RLC PDUs for a poll for status flag.

c) The SS may optionally release the radio bearer.

The test is repeated using the RLC parameters given in the Second run column of the configuration table for the initial conditions.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 4 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 5 | ← | | DOWNLINK RLC PDU | SDU 1 + Poll |
| 6 | → | | STATUS PDU | |
| 7 | → | | UPLINK RLC PDU | SDU 1 |
| 8 | → | | UPLINK RLC PDU | SDU 1 + Poll |
| 9 | ← | | STATUS PDU | |
| 10 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.15.5 Test requirements

The Poll bit shall be set in the AMD PDU header of the PDU returned in step 8. The poll bit shall not be set in the AMD PDU header of other PDUs.

### 7.2.3.16 Polling for status / Last PDU in retransmission queue

#### 7.2.3.16.1 Definition

This case tests that the UE will poll for a status request on the last PDU in its retransmission queue when that mode is enabled. Incorrect operation of polling will cause degradation of service, or at worst service failure.

#### 7.2.3.16.2 Conformance requirement

Last PDU in Retransmission buffer.

When a retransmitted AMD PDU is submitted to lower layer, the Sender shall:

- if the AMD PDU is the last AMD PDU scheduled for retransmission according to subclause 11.3.2; or
- if the AMD PDU is the last of the AMD PDUs scheduled for retransmission that are allowed to transmit according to subclause 11.3.2.2:
  - trigger a poll for this AMD PDU

....

- AMD PDUs are only allowed to transmit:
  - if the AMD PDU has a "Sequence Number" < VT(MS); or
  - if the AMD PDU has a "Sequence Number" equal to VT(S)-1; and
  - if the AMD PDU is not restricted to be transmitted by the local suspend function, see 3GPP TS 25.322 subclause 9.7.5.

...

The Sender shall:

- if a poll has been triggered by one or several poll triggers (see 3GPP TS 25.322 subclause 9.7.1):
  - if polling is not prohibited, see subclause 9.5:
    - set the "Polling bit" in the AMD PDU header to "1";
- otherwise:

- set the "Polling bit" in the AMD PDU header to "0".

Reference

25.322 clause 11.3.2.1.1, 9.7.1 and 11.3.2.

### 7.2.3.16.3 Test purpose

1. To verify that a poll is performed when only one PDU is available for retransmission, and the poll prohibit timer function is not used.

2. To verify that a poll is performed when only one PDU is available for retransmission, and the poll prohibit timer function is used, but inactive.

### 7.2.3.16.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| Uplink RLC | First run | Second run |
|---|---|---|
| Polling info | | |
| Timer_poll_prohibit | disabled | 200 |
| Last transmission PDU poll | FALSE | FALSE |
| Last retransmission PDU poll | TRUE | TRUE |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to (2 * AM_7_PayloadSize) - 1 bytes.

Test procedure

a) The SS transmits an RLC SDU of length (4 * AM_7_PayloadSize) - 1 bytes to the UE.

b) The SS checks the uplink RLC PDUs for a poll for status flag.

c) The SS transmits a STATUS PDU negatively acknowledging the first uplink RLC PDU as missing.

d) The SS waits for the RLC PDU to be retransmitted and then checks the uplink RLC PDU for a poll for status flag.

e) The SS may optionally release the radio bearer.

The test is repeated using the RLC parameters given in the Second run column of the configuration table for the initial conditions.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 4 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 5 | ← | | DOWNLINK RLC PDU | SDU 1 + Poll |
| 6 | → | | STATUS PDU | |
| 7 | → | | UPLINK RLC PDU | SDU 1, SN=0 |
| 8 | → | | UPLINK RLC PDU | SDU 1, SN=1 |
| 9 | ← | | STATUS PDU | NAK: SN=0 |
| 10 | … | | | Wait for retransmission |
| 11 | → | | UPLINK RLC PDU | SDU 1, SN=0 + Poll |
| 12 | ← | | STATUS PDU | |
| 13 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.16.5 Test requirements

The Poll bit shall be set in the AMD PDU header of the PDU returned in step 11. The poll bit shall not be set in the AMD PDU header of other PDUs.

### 7.2.3.17 Polling for status / Poll every Poll_PDU PDUs

#### 7.2.3.17.1 Definition

This case tests that the UE will poll for a status request every Poll_PDU PDUs when that mode is enabled. Incorrect operation of polling will cause degradation of service, or at worst service failure.

#### 7.2.3.17.2 Conformance requirement

VT(PDU).

This state variable is used when the "poll every Poll_PDU PDU" polling trigger is configured. It shall be incremented by 1 for each AMD PDU that is transmitted including both new and retransmitted AMD PDUs. When it becomes equal to the value Poll_PDU, a new poll shall be transmitted and the state variable shall be set to zero.

The initial value of this variable is 0.

Poll_PDU.

This protocol parameter indicates how often the transmitter shall poll the Receiver in the case where "polling every Poll_PDU PDU" is configured by upper layers. It represents the upper limit for the state variable VT(PDU). When VT(PDU) equals the value Poll_PDU a poll shall be transmitted to the peer entity.

Every Poll_PDU PDU.

The Sender triggers the Polling function for every Poll_PDU PDU. Both retransmitted and new AMD PDUs shall be counted.

The Sender shall:

- if a poll has been triggered by one or several poll triggers (see subclause 9.7.1):
  - if polling is not prohibited, see subclause 9.5:
    - set the "Polling bit" in the AMD PDU header to "1";
- otherwise:

- set the "Polling bit" in the AMD PDU header to "0".

Reference

TS 25.322 clauses 9.4, 9.6, 11.3.2.1.1 and 9.7.1.

### 7.2.3.17.3 Test purpose

1. To verify that a poll is performed when VT(PDU) reaches Poll_PDU.
2. To verify VT(PDU) is incremented for both new and retransmitted PDUs.

### 7.2.3.17.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC | |
| Polling info | |
| Poll_PDU | 4 |
| Last transmission PDU poll | FALSE |
| Last retransmission PDU poll | FALSE |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to AM_7_PayloadSize - 1 bytes.

Test procedure

Let the value of Poll_PDU be P:

a) The SS sends 3 * P - 2 RLC SDUs of size AM_7_PayloadSize - 1 bytes to the UE in PDUs with sequence numbers that are contiguous, starting from zero.

b) The SS checks the sequence numbers and polling bits of the RLC PDUs returned on the uplink.

c) The SS sends a STATUS PDU negatively acknowledging two RLC PDUs with a sequence numbers of already received PDUs. The other PDUs are acknowledged as received correctly.

d) The SS checks the sequence numbers and polling bits of the RLC SDUs returned on the uplink.

e) The SS terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | DOWNLINK RLC PDU | SDU 2 |
| 3 | ← | | … | SS continues to transmit RLC SDUs |
| 4 | ← | | DOWNLINK RLC PDU | SDU 3P – 2 |
| 5 | → | | UPLINK RLC PDU | SDU 1, SN=0 |
| 6 | → | | UPLINK RLC PDU | SDU 2, SN=1 |
| 7 | → | | … | SS continues to receive RLC SDUs |
| 8 | → | | UPLINK RLC PDU | SDU P, Poll |
| 9 | ← | | STATUS PDU | NAK SN=0 and SN=1 |
| 10 | → | | UPLINK RLC PDU | SDU 1, SN=0 |
| 11 | → | | UPLINK RLC PDU | SDU 2, SN=1 |
| 12 | → | | UPLINK RLC PDU | SDU P+1 |
| 13 | → | | … | SS continues to receive RLC SDUs |
| 14 | → | | UPLINK RLC PDU | SDU 2P – 2, Poll |
| 15 | → | | … | SS continues to receive RLC SDUs |
| 16 | → | | UPLINK RLC PDU | SDU 3P – 2, Poll |
| 17 | | | RB RELEASE | Optional step |

NOTE 1: The Expected Sequence shown is infomative.
The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity.
Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes.

NOTE 2: Due to retransmissions it is not possible to determine the the exact PDU that a poll is received on. i.e. A poll may be received on a retransmitted PDU or a PDU transmitted for the first time.

#### 7.2.3.17.5 Test requirements

The SS shall receive a poll for status every Poll_PDU RLC PDUs sent on the uplink.

### 7.2.3.18 Polling for status / Poll every Poll_SDU SDUs

#### 7.2.3.18.1 Definition

This case tests that the UE will poll for a status request every Poll_SDU SDUs when that mode is enabled. Incorrect operation of polling will cause degradation of service, or at worst service failure.

#### 7.2.3.18.2 Conformance requirement

VT(SDU).

This state variable is used when the "poll every Poll_SDU SDU" polling trigger is configured. It shall be incremented by 1 for a given SDU when the AMD PDUs carrying the first segment of this SDU is scheduled to be transmitted for the first time. When it becomes equal to the value Poll_SDU a new poll shall be transmitted and the state variable shall be set to zero. The "Polling bit" shall be set to "1" in the first transmission of the AMD PDU that contains the “Length Indicator” indicating the end of the SDU.

The initial value of this variable is 0.

Poll_SDU.

This protocol parameter indicates how often the transmitter shall poll the Receiver in the case where "polling every Poll_SDU SDU" is configured by upper layers. It represents the upper limit for state variable VT(SDU). When VT(SDU) equals the value Poll_SDU a poll shall be transmitted to the peer entity.

Every Poll_SDU SDU.

The Sender triggers the Polling function for every Poll_SDU SDU. The poll shall be triggered for the first transmission of the AMD PDU that contains the “Length Indicator” indicating the end of the SDU.

The Sender shall:

- if a poll has been triggered by one or several poll triggers (see TS 25.322 subclause 9.7.1):
  - if polling is not prohibited, see TS 25.322 subclause 9.5:
    - set the "Polling bit" in the AMD PDU header to "1";
- otherwise:
  - set the "Polling bit" in the AMD PDU header to "0".

Reference

TS 25.322 clauses 9. 4, 9.6, 9.7.1 and 11.3.2.1.1.

### 7.2.3.18.3 Test purpose

1. To verify that a poll is performed when VT(SDU) reaches Poll_ SDU.
2. To verify that the poll is sent in the last PDU of the SDU.

### 7.2.3.18.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC | |
| Polling info | |
| Last transmission PDU poll | FALSE |
| Poll_SDU | 1 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to (2 * AM_7_PayloadSize) - 1 bytes.

Let the value of Poll_SDU be P.

a) The SS sends 2 * P RLC SDUs of size AM_7_PayloadSize - 1 bytes to the UE in PDUs with sequence numbers that are contiguous, starting from zero.

b) The SS checks the sequence numbers and polling bits of the RLC SDUs returned on the uplink.

c) The SS terminates the connection.

The test is repeated with Poll_SDU set to 16.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | DOWNLINK RLC PDU | SDU 2 |
| 3 | ← | | … | SS continues to transmit RLC SDUs |
| 4 | ← | | DOWNLINK RLC PDU | SDU 2P |
| 5 | → | | UPLINK RLC PDU | SDU 1 Expanded to (2 * |
| 6 | → | | UPLINK RLC PDU | AM_7_PayloadSize) - 1 bytes by test function |
| 7 | → | | … | SS continues to receive RLC SDUs |
| 8 | → | | UPLINK RLC PDU | SDU P, Poll |
| 9 | ← | | STATUS PDU | |
| 10 | → | | UPLINK RLC PDU | SDU P+1 Expanded to (2 * |
| 11 | → | | UPLINK RLC PDU | AM_7_PayloadSize) - 1 bytes by test function |
| 12 | → | | … | SS continues to receive RLC SDUs |
| 13 | → | | UPLINK RLC PDU | SDU 2P, Poll |
| 14 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.18.5 Test requirements

The UE shall return uplink PDUs that contain polls for status in sequence numbers 2 * P – 1 and 4 * P – 1. No other PDUs shall poll for status.

### 7.2.3.19 Polling for status / Timer triggered polling (Timer_Poll_Periodic)

#### 7.2.3.19.1 Definition

This case tests that the UE will poll for a status request every Timer_Poll_Periodic ms when that mode is enabled. Incorrect operation of polling will cause degradation of service, or at worst service failure.

#### 7.2.3.19.2 Conformance requirement

This timer shall only be used when "timer based polling" is configured by upper layers. The value of the timer is signalled by upper layers. The timer shall be started when the RLC entity is created. When the timer expires, the RLC entity shall:

- restart the timer;
- if AMD PDUs are available for transmission or retransmission (not yet acknowledged):
  - trigger a poll.

[...]

The Sender shall:

- if a poll has been triggered by one or several poll triggers (see TS 25.322 subclause 9.7.1):
  - if polling is not prohibited, see TS 25.322 subclause 9.5:
    - set the "Polling bit" in the AMD PDU header to "1";
- otherwise:

- set the "Polling bit" in the AMD PDU header to "0".

Reference

TS 25.322 clauses 9.5, 9.7.1 and 11.3.2.1.1.

### 7.2.3.19.3 Test purpose

1. To verify that the UE polls the SS in the next PDU to be transmitted or retransmitted each time the Timer_Poll_Periodic timer expires.

2. To verify that if there is no PDU to be transmitted or retransmitted, the timer is restarted, but no poll is sent.

### 7.2.3.19.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| Uplink RLC | First run | Second run |
|---|---|---|
| Polling info | | |
| Last retransmission PDU poll | FALSE | FALSE |
| Last transmission PDU poll | FALSE | FALSE |
| Timer_poll_periodic | 500 | 2000 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to (AM_7_PayloadSize * ceil(T/(5*TTI))) - 1 bytes.

Test procedure

Let T be the value of Timer_Poll_Periodic:

a) The SS waits for at least 2*T ms before starting any transmissions, and monitors the uplink.

b) The SS sends five RLC SDUs of size floor (AM_7_PayloadSize/5) - 1 bytes to the UE. The SDUs are concatenated five SDUs to one PDU. The UE is expected to loop this data back in five RLC SDUs, segmented into a total of at least ceil(T/TTI) RLC PDUs.

c) The SS checks that at least one RLC PDU is received on the uplink with the P bit set and records the arrival time of the last RLC PDU received with the P bit set ($T_1$) . The SS does not send any STATUS PDUs in response to these poll requests.

d) The SS continues to receive RLC PDUs until all of the data has been received.

e) The SS waits for the UE to retransmit an RLC PDU in order to transmit a poll (this may be the PDU with SN VT(S) - 1, or a PDU that has not been acknowledged). The SS checks that the P bit is set, and records the arrival time ($T_2$).

f) The SS responds with a STATUS PDU acknowledging all received PDUs.

g) The SS waits for 2*T ms to ensure that no further polls are received from the UE.

h) Void

i) The SS may optionally release the radio bearer.

The Test is repeated using the parameters specified for the second run.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1, SDU2, SDU 3, SDU 4, SDU 5, SN=0 |
| 2 | → | | UPLINK RLC PDU | PDU 1, SN=0 |
| 3 | → | | UPLINK RLC PDU | PDU 2, SN=1 |
| 4 | | | | |
| | → | | … | SS continues to receive RLC PDUs |
| 5 | → | | UPLINK RLC PDU | Poll: Note $T_1$ |
| 6 | → | | … | SS continues to receive RLC PDUs |
| 7 | → | | UPLINK RLC PDU | SN = ceil(T/TTI) - 1 |
| 8 | → | | UPLINK RLC PDU | Retransmission of VT(S)-1 or unacknowledged PDU in order to transmit a poll. Poll: Note $T_2$. |
| 9 | ← | | STATUS PDU | Normal |
| | … | | | |
| 10 | | | … | SS monitors uplink for 2*T ms |
| 11 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.19.5 Test requirements

1. No PDUs shall be received from the UE for 2*T ms before step 1.
2. Time $T_2 - T_1$ shall be T.
3. No PDUs shall be received from the UE for 2*T ms after step 9.

### 7.2.3.20 Polling for status / Polling on Poll_Window% of transmission window

#### 7.2.3.20.1 Definition

This case tests that the UE will poll for a status request when it has reached Poll_Window% of the transmission window, when that mode is enabled. Incorrect operation of polling will cause degradation of service, or at worst service failure.

This test applies to all UE.

#### 7.2.3.20.2 Conformance requirement

1. A poll is triggered for each AMD PDU when $J \geq$ Poll_Window, where J is the window transmission percentage defined by

$$J = \frac{(4096+VT(S)+1-VT(A)) \textbf{ mod } 4096}{VT(WS)} * 100 ,$$

   where the constant 4096 is the modulus for AM described in 3GPP TS 25.322 subclause 9.4 and VT(S) is the value of the variable before the AMD PDU is submitted to lower layer.

2. The Polling function is used by the Sender to request the peer RLC entity for a status report. The "Polling bit" in the AMD PDU indicates the poll request. There are several triggers for initiating the Polling function. Which of the triggers shall be used is configured by upper layers for each RLC entity. The following triggers can be configured:

   …….

   6) Window based.

The Sender triggers the Polling function when the condition described in subclause 9.6 d) ("Poll_Window") is fulfilled.

3. The Sender shall:

   - if a poll has been triggered by one or several poll triggers (see subclause 9.7.1):

     - if polling is not prohibited, see subclause 9.5:

       - set the "Polling bit" in the AMD PDU header to "1".

Reference

25.322 clauses 9.6, 9.7.1 and 11.3.2.1.1.

### 7.2.3.20.3 Test purpose

To verify that the UE polls the SS when the window based polling condition J >= Poll_Window is fulfilled.

### 7.2.3.20.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC | |
| Polling info | |
| Last transmission PDU poll | FALSE |
| Poll_Window | 50 |
| Transmission window size | 8 |
| Downlink RLC | |
| Receiving window size | 8 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1with the UL SDU size set to AM_7_PayloadSize - 1 bytes.

Test procedure

Let W be the size of the transmission window.

a) The SS transmits (W/2) + 2 RLC SDUs of size AM_7_PayloadSize - 1 bytes.

b) The SS checks the sequence number of the first three uplink PDUs received with the P bit set.

c) The SS sends another RLC SDU of size AM_7_PayloadSize - 1 bytes.

d) The SS checks the sequence number of the next uplink PDU received with the P bit set.

e) The SS waits until no more new PDUs are received.

f) The SS sends a STATUS PDU acknowledging the received RLC PDUs with SN = 0 through W/2, followed by two further RLC SDUs.

g) The SS checks the sequence number of the next uplink PDU received with the P bit set.

h) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | … | SS continues to transmit RLC SDUs |
| 3 | ← | | DOWNLINK RLC PDU | SDU W/2+2 |
| 4 | → | | UPLINK RLC PDU | SDU 1, SN=0 |
| 5 | → | | UPLINK RLC PDU | SDU 2, SN=1 |
| 6 | → | | … | SS continues to receive RLC PDUs |
| 7 | → | | UPLINK RLC PDU | SN = W/2-1, Poll |
| 7a | → | | UPLINK RLC PDU | SN = W/2, Poll |
| 7b | → | | UPLINK RLC PDU | SN = W/2 +1, Poll |
| 8 | ← | | DOWNLINK RLC PDU | SDU W/2 + 3 |
| 9 | → | | UPLINK RLC PDU | SN = W/2 + 2, Poll |
| 9a | | | | SS waits 10 TTI periodsto ensure no more new PDUs are received |
| 10 | ← | | STATUS PDU | ACK SN 0 to W/2 (UE sets VT(A) to W/2+1) |
| 11 | ← | | DOWNLINK RLC PDU | SDU W/2 + 4 |
| 12 | ← | | DOWNLINK RLC PDU | SDU W/2 + 5 |
| 13 | → | | UPLINK RLC PDU | SN = W/2+3 |
| 14 | → | | UPLINK RLC PDU | SN = W/2+4, Poll |
| 15 | | | RB RELEASE | Optional step |
| NOTE: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.20.5 Test requirements

The SS shall receive RLC PDUs with the P bit set in PDUs with sequence numbers of 3, 4, 5, 6 and 8. No other PDUs shall have their P bits set.

### 7.2.3.21 Polling for status / Operation of Timer_Poll timer / Timer expiry

#### 7.2.3.21.1 Definition

This case tests that the UE will retransmit a poll for status if it does not receive a STATUS PDU within Timer_Poll ms after a poll for status is transmitted. Incorrect operation of polling will cause degradation of service, or possible service failure.

#### 7.2.3.21.2 Conformance requirement

Timer_Poll.

This timer shall only be used when so configured by upper layers. The value of the timer is signalled by upper layers. In the UE this timer shall be started when the successful or unsuccessful transmission of an AMD PDU containing a poll is indicated by lower layer. In UTRAN it should be started when an AMD PDU containing a poll is submitted to lower layer. If x is the value of the state variable VT(S) after the poll was submitted to lower layer, the timer shall be stopped upon receiving:

- positive acknowledgements for all the AMD PDUs with "Sequence Number" up to and including x - 1; or
- a negative acknowledgement for the AMD PDU with "Sequence Number" = x - 1.

If the timer expires and no STATUS PDU fulfilling the criteria above has been received:

- the Receiver shall be polled once more;
- the timer shall be restarted; and
- the new value of VT(S) shall be saved.

If a new poll is sent when the timer is active, the timer shall be restarted at the time specified above, and the value of VT(S) shall be saved.

[...]

The Sender shall:

- if a poll has been triggered by one or several poll triggers (see subclause 9.7.1):
  - if polling is not prohibited, see subclause 9.5:
    - set the "Polling bit" in the AMD PDU header to "1";
- otherwise:
  - set the "Polling bit" in the AMD PDU header to "0".

Reference

TS 25.322 clauses 11.3.2.1.1 and 11.3.4.1.

### 7.2.3.21.3 Test purpose

To verify that if the timer expires and no STATUS PDU containing an acknowledgement or negative acknowledgement of the AMD PDUs up to that which triggered the timer has been received, the receiver is polled once more.

### 7.2.3.21.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| Uplink RLC | First run | Second run |
|---|---|---|
| Transmission window size | 256 | 256 |
| Polling info | | |
| Last transmission PDU poll | FALSE | FALSE |
| Timer_poll | 600 | 1000 |
| Timer_Poll_Periodic | 2000 | 2000 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1with the UL SDU size set to AM_7_PayloadSize - 1 bytes.

Test procedure

Let T be the value of the Timer_Poll_Periodic timer.

a) The SS transmits at least 2 * T / TTI SDUs of size AM_7_PayloadSize - 1 bytes.

b) The SS receives PDUs from the UE, and notes the time on receiving the first PDU with the P bit set, but does not respond. This time will be recorded as $T_1$.

c) The SS continues to receive PDUs from the UE and notes the time on receipt of the next PDU with the P bit set. This time will be recorded as $T_2$.

d) The SS continues to receive PDUs from the UE until all transmitted PDUs have been received. The SS responds to any PDU received with the P bit set by transmitting a STATUS PDU containing an acknowledgement of the AMD PDUs received.

e) The SS acknowledges the last Poll PDU from the UE.

f) The SS may optionally release the radio bearer.

The test case is run once for each set of initial RLC parameters.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | … | SS continues to transmit RLC SDUs |
| 3 | ← | | DOWNLINK RLC PDU | SDU ceil(2T/TTI) |
| 4 | → | | UPLINK RLC PDU | SDU 1 |
| 5 | → | | UPLINK RLC PDU | SDU 2 |
| 6 | → | | … | SS continues to receive RLC PDUs |
| 7 | → | | UPLINK RLC PDU | SN = n , Poll: Note $T_1$ (First PDU with P bit set) |
| 8 | → | | UPLINK RLC PDU | SN = n+1 |
| 9 | → | | … | SS continues to receive RLC PDUs |
| 9a | | SS | | No STATUS PDUs are sent by the SS between steps 7 and 10. |
| 10 | → | | UPLINK RLC PDU | Poll: Note $T_2$ (Next PDU with P bit set) |
| 11 | → | | … | SS continues to receive PDUs, acknowledging with STATUS PDUs when polled until all PDUs have been received and acknowledged |
| 12 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is informative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |
| NOTE 2: The SN value “n” identifies the current RLC sequence number of the first UL PDU with the Poll Bit set. This value is for informative purposes only | | | | |

#### 7.2.3.21.5 Test requirements

For the first run, the measured time $T_2 - T_1$ shall be 600 ms.

For the second run, the measured time $T_2 - T_1$ shall be 1000 ms.

### 7.2.3.22 Polling for status / Operation of Timer_Poll timer / Stopping Timer_Poll timer

#### 7.2.3.22.1 Definition

This case tests that the UE will stop the Timer_Poll timer if it receives a STATUS PDU within Timer_Poll ms after a poll for status is transmitted. Incorrect operation of polling will cause degradation of service, or possible service failure.

#### 7.2.3.22.2 Conformance requirement

Timer_Poll.

This timer shall only be used when so configured by upper layers. The value of the timer is signalled by upper layers. In the UE this timer shall be started when the successful or unsuccessful transmission of an AMD PDU containing a poll is indicated by lower layer. In UTRAN it should be started when an AMD PDU containing a poll is submitted to lower layer. If x is the value of the state variable VT(S) after the poll was submitted to lower layer, the timer shall be stopped upon receiving:

- positive acknowledgements for all the AMD PDUs with "Sequence Number" up to and including x - 1; or
- a negative acknowledgement for the AMD PDU with "Sequence Number" = x - 1.

If the timer expires and no STATUS PDU fulfilling the criteria above has been received:

- the Receiver shall be polled once more;
- the timer shall be restarted; and
- the new value of VT(S) shall be saved.

If a new poll is sent when the timer is active, the timer shall be restarted at the time specified above, and the value of VT(S) shall be saved.

[...]

The Sender shall:

- if a poll has been triggered by one or several poll triggers (see subclause 9.7.1):
  - if polling is not prohibited, see subclause 9.5:
    - set the "Polling bit" in the AMD PDU header to "1";
- otherwise:
  - set the "Polling bit" in the AMD PDU header to "0".

Reference

TS 25.322 clause 9.5.

#### 7.2.3.22.3 Test purpose

To verify that the Timer_Poll timer is stopped when receiving a STATUS PDU that acknowledges all AMD PDUs with SN up to and including VT(S)-1 at the time the poll was transmitted.

#### 7.2.3.22.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| Uplink RLC | First run | Second run |
|---|---|---|
| Tx_Window_Size | 256 | 256 |
| Polling info | | |
| Last transmission PDU poll | FALSE | FALSE |
| Timer_poll | 500 | 1000 |
| Timer_Poll_Periodic | 2000 | 2000 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to AM_7_PayloadSize - 1 bytes.

Test procedure

Let T be the value of the Timer_Poll_Periodic timer.

a) The SS transmits at least 2 * T / TTI SDUs of size AM_7_PayloadSize - 1 bytes.

b) The SS receives PDUs from the UE, and notes the time on receiving the first PDU with the P bit set. This time will be recorded as $T_1$.

c) The SS sends a STATUS PDU acknowledging all the PDUs up to and including the PDU carrying the poll request.

d) The SS continues to receive PDUs from the UE and notes the time on receipt of the next PDU with the P bit set. This time will be recorded as $T_2$.

e) The SS continues to receive PDUs from the UE until all transmitted PDUs have been received. The SS responds to any PDU received with the P bit set by transmitting a STATUS PDU containing an acknowledgement of the AMD PDUs received.

f) The SS acknowledges the last Poll PDU from the UE.

g) The SS may optionally release the radio bearer.

The test case is run once for each set of initial RLC parameters.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | … | SS continues to transmit RLC SDUs |
| 3 | ← | | DOWNLINK RLC PDU | SDU ceil(2T/TTI) |
| 4 | → | | UPLINK RLC PDU | SDU 1 |
| 5 | → | | UPLINK RLC PDU | SDU 2 |
| 6 | → | | … | SS continues to receive RLC PDUs |
| 7 | → | | UPLINK RLC PDU | SN = n , Poll: Note $T_1$ (First PDU with the P bit set). |
| 8 | ← | | STATUS PDU | ACK SN= 0 to SN =n |
| 9 | → | | UPLINK RLC PDU | SN = n +1 |
| 10 | → | | … | SS continues to receive RLC PDUs |
| 11 | → | | UPLINK RLC PDU | Poll: Note $T_2$ (Next PDU with the P bit set) |
| 12 | → | | … | SS continues to receive PDUs, acknowledging with Status PDUs when polled until all PDUs have been received and acknowledged |
| 13 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is informative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |
| NOTE 2: The SN value "n" identifies the current RLC sequence number of the first UL PDU with the Poll Bit set. This value is for informative purposes only | | | | |

#### 7.2.3.22.5 Test requirements

For both execution runs, the measured time $T_2 - T_1$ shall be 2000 ms.

### 7.2.3.23 Polling for status / Operation of Timer_Poll timer / Restart of the Timer_Poll timer

#### 7.2.3.23.1 Definition

This case tests that the UE will restart the Timer_Poll timer if another poll request is transmitted whilst the timer is running. Incorrect operation of polling will cause degradation of service, or possible service failure.

This test applies to all UE.

#### 7.2.3.23.2 Conformance requirement

Timer_Poll.

This timer shall only be used when so configured by upper layers. The value of the timer is signalled by upper layers. In the UE this timer shall be started when the successful or unsuccessful transmission of an AMD PDU containing a poll is indicated by lower layer. In UTRAN it should be started when an AMD PDU containing a

poll is submitted to lower layer. If x is the value of the state variable VT(S) after the poll was submitted to lower layer, the timer shall be stopped upon receiving:

- positive acknowledgements for all the AMD PDUs with "Sequence Number" up to and including x - 1; or
- a negative acknowledgement for the AMD PDU with "Sequence Number" = x - 1.

If the timer expires and no STATUS PDU fulfilling the criteria above has been received:

- the Receiver shall be polled once more;
- the timer shall be restarted; and
- the new value of VT(S) shall be saved.

If a new poll is sent when the timer is active, the timer shall be restarted at the time specified above, and the value of VT(S) shall be saved.

[...]

The Sender shall:

- if a poll has been triggered by one or several poll triggers (see subclause 9.7.1):
  - if polling is not prohibited, see subclause 9.5:
    - set the "Polling bit" in the AMD PDU header to "1";
- otherwise:
  - set the "Polling bit" in the AMD PDU header to "0".

Reference

TS 25.322 clause 9.5.

#### 7.2.3.23.3 Test purpose

To verify that if a new poll is sent when the timer is running it is restarted.

#### 7.2.3.23.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC | |
| Polling info | |
| Last retransmission PDU poll | FALSE |
| Last transmission PDU poll | FALSE |
| Timer_poll | 600 |
| Poll_Window | 60 |
| Poll_PDU | 16 |
| Transmit window size | 32 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to AM_7_PayloadSize - 1 bytes.

Test procedure

Let T be the value of the Timer_Poll timer.

a) The SS starts transmission of ceil(Tx_Window_Size * 60%) numbers of SDUs of size AM_7_PayloadSize - 1bytes.

b) Whilst transmitting, the SS receives PDUs from the UE, until it receives the second PDU with the P bit set. This time is recorded as $T_1$. (Note: poll due to Poll_Window).

c) Void.

d) Void.

e) The SS waits until a PDU is received with the poll bit set and notes the time when it was received. This time is recorded as $T_2$.

f) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | … | SS continues to transmit RLC SDUs |
| 3 | ← | | DOWNLINK RLC PDU | SDU ceil(Tx_Window_Size * 60%) |
| 4 | → | | UPLINK RLC PDU | SDU 1 |
| 5 | → | | UPLINK RLC PDU | SDU 2 |
| 6 | → | | … | SS continues to receive RLC PDUs |
| 7 | → | | UPLINK RLC PDU | SN = poll_PDU - 1, 1st Poll, Timer_Poll started |
| 8 | → | | Void | |
| 9 | | | Void | |
| 10 | → | | UPLINK RLC PDU | SS continues to receive RLC PDUs |
| 11 | → | | UPLINK RLC PDU | SN= ceil(Tx_Window_Size * 60%)-1, 2nd Poll, Timer_Poll restarted. Note T1 |
| 12 | | | Void | |
| 13 | | | Void | |
| 14 | | | Void | |
| 15 | → | | UPLINK RLC PDU | SS waits for reception of PDU with poll bit set, 3rd Poll, Timer_Poll expired. Note $T_2$ |
| 16 | | | RB RELEASE | Optional step |
| NOTE: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.23.5 Test requirements

The measured time $T_2 - T_1$ shall be 600 ms.

### 7.2.3.24 Polling for status / Operation of timer Timer_Poll_Prohibit

#### 7.2.3.24.1 Definition

This case tests that the UE will not send a poll request within Timer_Poll_Prohibit ms of a previous poll request when this mode of operation is enabled. Incorrect operation of polling will cause degradation of service, or possible service failure.

#### 7.2.3.24.2 Conformance requirement

The timers defined in this subclause are normative. The timers shall be considered active from the time they are started until the time they either expire or are stopped.

b) Timer_Poll_Prohibit.

This timer shall only be used when so configured by upper layers. It is used to prohibit transmission of polls within a certain period. The value of the timer is signalled by upper layers.

In the UE this timer shall be started when the successful or unsuccessful transmission of an AMD PDU containing a poll is indicated by lower layer. In UTRAN it should be started when an AMD PDU containing a poll is submitted to lower layer.

From the time a poll is triggered until the timer expires, polling is prohibited. If another poll is triggered while polling is prohibited, its transmission shall be delayed until the timer expires (see subclause 9.7.1). Only one poll shall be transmitted when Timer_Poll_Prohibit expires even if several polls were triggered in the meantime. This timer shall not be affected by the reception of STATUS PDUs.

When Timer_Poll_Prohibit is not configured by upper layers, polling is never prohibited.

The Sender shall:

- if a poll has been triggered by one or several poll triggers (see subclause 9.7.1):
  - if polling is not prohibited, see subclause 9.5:
    - set the "Polling bit" in the AMD PDU header to "1";
- otherwise:
  - set the "Polling bit" in the AMD PDU header to "0".

Reference

TS 25.322 clauses 9.5, 9.7.1 and 11.3.2.1.1.

### 7.2.3.24.3 Test purpose

1. To verify that no poll is transmitted if one or several polls are triggered when the Timer_Poll_Prohibit timer is active and has not expired.
2. To verify that the UE polls only once after Timer_Poll_Prohibit expires even though triggered several times during the prohibit time.

### 7.2.3.24.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC | |
| Polling info | |
| Timer_poll_prohibit | 500 |
| Last transmission PDU poll | FALSE |
| Poll_PDU | 2 |
| Poll_Window | 50 |
| Transmission window size | 32 |
| Downlink RLC | |
| Receiving window size | 128 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to AM_7_PayloadSize - 1 bytes.

Test procedure

Let T be the value of the Timer_Poll_Prohibit timer.

a) The SS starts transmission of at least (2*Poll_PDU) + ceil(T / TTI) SDUs of size AM_7_PayloadSize - 1 bytes.

b) Whilst transmitting, the SS receives PDUs from the UE, and notes the time on receiving the first PDU with the P bit set. This time will be recorded as $T_1$.

c) The SS does not respond to the poll request.

d) The SS continues to receive PDUs from the UE and notes the time on receipt of the next PDU with the P bit set. This time will be recorded as $T_2$.

e) The SS waits for at least Timer_Poll_Prohibit to acknowledge any last Poll PDU from the UE.

f) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | … | SS continues to transmit RLC SDUs |
| 3 | ← | | DOWNLINK RLC PDU | SDU (2*Poll_PDU)+ ceil(T/TTI) |
| 4 | → | | UPLINK RLC PDU | SDU 1 |
| 5 | → | | UPLINK RLC PDU | SDU 2 |
| 6 | → | | … | SS continues to receive RLC PDUs |
| 7 | → | | UPLINK RLC PDU | SN = Poll_PDU - 1, Poll: Note $T_1$ |
| 8 | → | | … | SS continues to receive RLC PDUs |
| 9 | | | Void | |
| 10 | → | | UPLINK RLC PDU | SN = (Transmission Window Size / 2) – 1, No Poll |
| 11 | → | | … | SS continues to receive RLC PDUs |
| 12 | → | | UPLINK RLC PDU | SN = Poll_PDU + ceil(T/TTI) - 1, Poll: Note $T_2$ |
| 12a | → | | … | SS continues to receive RLC PDUs acknowledging with STATUS PDUs when polled until all PDUs have been received and acknowledged |
| 13 | | | RB RELEASE | Optional step |
| NOTE: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.24.5 Test requirements

1. The measured time $T_2 - T_1$ shall be Timer_poll_prohibit ms.

2. After step 12 no further poll shall be received from the UE for the next Timer_poll_prohibit ms.

### 7.2.3.25 Receiver Status Triggers / Detection of missing PDUs

#### 7.2.3.25.1 Definition

This case tests that the UE transmits a status report whenever it detects that a PDU is missing, if this mode of operation is enabled. Incorrect operation of status reporting will cause degradation of service, or possible service failure.

### 7.2.3.25.2 Conformance requirement

Detection of missing PDU(s).

If the Receiver detects one or several missing AMD PDUs it shall trigger the transmission of a status report to the Sender.

#### Reference

TS 25.322 clause 9.7.2.

### 7.2.3.25.3 Test purpose

To verify that a status report is transmitted if there are one or more missing PDUs.

### 7.2.3.25.4 Method of test

#### Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

These settings apply to both the uplink and downlink DTCH.

#### Test procedure

a) The SS transmits 7 SDUs, each of size AM_7_PayloadSize - 1 bytes, in PDUs with consecutive sequence numbers starting from 0, followed by 5 SDUs in PDUs with consecutive sequence numbers starting from 8, followed by an SDU in a PDU with a sequence number of 15.

b) While transmitting, the SS monitors the uplink for STATUS PDUs.

c) The SS may optionally release the radio bearer

#### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SN = 0 |
| 2 | ← | | … | SS continues to transmit RLC SDUs |
| 3 | ← | | DOWNLINK RLC PDU | SN = 6 |
| 4 | ← | | DOWNLINK RLC PDU | SN = 8 |
| 5 | → | | STATUS PDU | SN = 7 missing |
| 6 | ← | | DOWNLINK RLC PDU | |
| 7 | ← | | … | SS continues to transmit RLC SDUs |
| 8 | ← | | DOWNLINK RLC PDU | SN = 12 |
| 9 | ← | | DOWNLINK RLC PDU | SN = 15 |
| 10 | → | | STATUS PDU | SN = 7, 13, 14 missing |
| 11 | | | RB RELEASE | Optional step |
| NOTE: The Expected Sequence shown is infomative.<br>The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity.<br>Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

### 7.2.3.25.5 Test requirements

A STATUS PDU shall be received from the UE after step 4, indicating that the PDU with sequence number 7 was missing.

A STATUS PDU shall be received from the UE after step 9, indicating that the PDUs with sequence numbers 7, 13 and 14 were missing.

## 7.2.3.26 Receiver Status Triggers / Operation of timer Timer_Status_Periodic

### 7.2.3.26.1 Definition

This case tests that the UE transmits a status report every Timer_Status_Periodic ms when this mode of operation is enabled. Incorrect operation of status reporting will cause degradation of service, or possible service failure.

### 7.2.3.26.2 Conformance requirement

This timer shall only be used when timer based status reporting is configured by upper layers.

This timer shall be started when the RLC entity is created. When the timer expires the transmission of a status report shall be triggered and the timer shall be restarted.

#### Reference

TS 25.322 clauses 9.5, 9.7.2 and 11.5.2.

### 7.2.3.26.3 Test purpose

To verify that a status report is transmitted each time the Timer_Status_Periodic timer expires.

### 7.2.3.26.4 Method of test

#### Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Downlink RLC<br>Timer_STATUS_periodic | <br>400 |

These settings apply to both the uplink and downlink DTCH.

#### Test procedure

Let T be the value of the Timer_STATUS_periodic timer.

a) The SS starts transmission of at least ceil(2 * T / TTI) SDUs of size AM_7_PayloadSize - 1 bytes.

b) The SS waits to receive a STATUS PDU and notes the time. This time will be recorded as $T_1$.

c) The SS waits to receive a second STATUS PDU and notes the time. This time will be recorded as $T_2$.

d) The SS waits for at least Timer_Status_Periodic to receive any last STATUS PDU from the UE.

e) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | DOWNLINK RLC PDU | SDU 1 |
| 2 | | ← | … | SS continues to transmit RLC SDUs |
| 3 | | ← | DOWNLINK RLC PDU | SDU m |
| 4 | | → | STATUS PDU | Note $T_1$ |
| 5 | | ← | DOWNLINK RLC PDU | |
| 6 | | ← | … | SS continues to transmit RLC SDUs |
| 7 | | ← | DOWNLINK RLC PDU | SDU m + ceil(T/TTI) |
| 8 | | → | STATUS PDU | Note $T_2$ |
| 9 | | | Void | |
| 10 | | → | STATUS PDU | SS may receive STATUS PDUs |
| 11 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.26.5 Test requirements

The measured time $T_2 - T_1$ shall be 400 ms.

### 7.2.3.27 Receiver Status Triggers / Operation of timer Timer_Status_Prohibit

#### 7.2.3.27.1 Definition

This case tests that the UE does not transmit a status report more often than every Timer_Status_Prohibit ms when this mode of operation is enabled. Incorrect operation of status reporting will cause degradation of service, or possible service failure.

#### 7.2.3.27.2 Conformance requirement

In the UE, this timer shall be started when the successful or unsuccessful transmission of the last STATUS PDU of an acknowledgement status report is indicated by lower layer

[...]

When a status report is triggered the Receiver shall:

- if transmission of status reports is not prohibited by any of the functions "STATUS prohibit" or "EPC mechanism":
  - assemble and transmit the status report to the Sender, as specified in subclauses TS 25.322 11.5.2.2 and 11.5.2.3.
- otherwise (if the status report is prohibited by at least one of the functions "STATUS prohibit" or "EPC mechanism"):

  [...]

  - if ACK, LIST, BITMAP, or RLIST SUFIs are required in the status report:
- delay sending these SUFIs until the prohibit function terminates.

[...]

Upon expiry of the timer Timer_Status_Prohibit [...], the Receiver shall:

- if at least one status report was triggered during the time the transmission of a status reports was prohibited that could not be transmitted due to prohibition; and
- if transmission of a status reports is no longer prohibited by any of the functions "STATUS prohibit" or "EPC mechanism":
  - transmit one status report to the Sender, using the procedure described in subclause TS 25.322 11.5.2.3.

Reference

TS 25.322 clause 9.7.2.

#### 7.2.3.27.3 Test purpose

1. To verify that a status report is not transmitted while the Timer_Status_Prohibit timer is active.
2. To verify that only one status report is sent on the expiry of the Timer_Status_Prohibit timer if several triggers occur while it is active.

#### 7.2.3.27.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Downlink RLC | |
| Timer_Status_Prohibit | 500 |
| Timer_STATUS_periodic | 200 |

These settings apply to both the uplink and downlink DTCH.

Test procedure

Let $T_{pro}$ be the value of the Timer_Status_Prohibit timer, and $T_{per}$ be the value of the Timer_Status_Periodic timer.

a) The SS starts transmission of at least ceil(2 * $T_{pro}$ / TTI) + ceil($T_{per}$/TTI) SDUs of size AM_7_PayloadSize - 1 bytes.

b) Whilst transmitting, the SS monitors the uplink for a STATUS PDU and notes the time. This time will be recorded as $T_1$.

c) The SS sets the P bit in one of the next floor($T_{pro}$/TTI) PDUs transmitted on the downlink.

d) The SS waits to receive a second STATUS PDU and notes the time. This time will be recorded as $T_2$.

e) The SS waits for at least Timer_Status_Prohibit to receive any last STATUS PDU from the UE.

f) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | … | SS continues to transmit RLC SDUs |
| 3 | ← | | DOWNLINK RLC PDU | SDU m |
| 4 | → | | STATUS PDU | Note $T_1$ |
| 5 | ← | | DOWNLINK RLC PDU | Poll |
| 6 | ← | | … | SS continues to transmit RLC PDUs |
| 7 | ← | | DOWNLINK RLC PDU | SDU m + ceil($T_{pro}$ / TTI) |
| 8 | → | | STATUS PDU | Note $T_2$ |
| 9 | | | Void | |
| 10 | → | | STATUS PDU | SS may receive STATUS PDUs |
| 11 | | | RB RELEASE | Optional Step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

### 7.2.3.27.5 Test requirements

1. The measured time $T_2 - T_1$ shall be 500 ms.
2. Only one STATUS PDU shall be received in step 8 after (T1 + Tpro) and before (T1 + 2*Tpro).

## 7.2.3.28 Status reporting / Abnormal conditions / Reception of LIST SUFI with Length set to zero

### 7.2.3.28.1 Definition

Peer RLCs use STATUS PDUs to manage flow control and retransmission. On a STATUS report PDU with an invalid LIST SUFI the RLC must behave as specified. Incorrect behaviour may result in degradation of QoS, or failure of the UE to communicate.

### 7.2.3.28.2 Conformance requirement

The List super-field

The List Super-Field consists of a type identifier field (LIST), a list length field (LENGTH) and a list of LENGTH number of pairs as shown in figure 9.11 below:

| Type = **LIST** |
|---|
| LENGTH |
| $SN_1$ |
| $L_1$ |
| $SN_2$ |
| $L_2$ |
| … |
| $SN_{LENGTH}$ |
| $L_{LENGTH}$ |

**Figure 9.11: The List fields in a STATUS PDU**

LENGTH

Length: 4 bits

The number of ($SN_i$, $L_i$)-pairs in the super-field of type LIST. The value "0000" is invalid and the list is discarded.

Reference

TS 25.322 clause 9.2.2.11.4.

7.2.3.28.3 Test purpose

To verify that if a STATUS PDU is received with a LIST SUFI and the LENGTH field is set to "0000" that the list is discarded.

7.2.3.28.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC | |
| Polling info | |
| Poll_PDU | 4 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to (3 * Poll_PDU * AM_7_PayloadSize) – 1 bytes.

Test procedure

a) The SS sends an SDU of size (AM_7_PayloadSize) – 1.

b) The SS monitors the received (looped back) PDUs for a poll request.

c) The SS responds to the poll request by transmitting a STATUS PDU with a LIST SUFI. The list contains an indication that two PDUs were not received, but has the length field set to "0000".

d) The SS continues to monitor the received PDUs to verify that none are retransmitted.

e) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 (start) |
| 2 | ← | | … | SS continues to transmit RLC PDUs |
| 3 | ← | | DOWNLINK RLC PDU | SDU 1 (end) |
| 4 | → | | UPLINK RLC PDU | SDU 1 (start) |
| 5 | → | | UPLINK RLC PDU | |
| 6 | → | | … | SS continues to receive RLC PDUs |
| 7 | → | | UPLINK RLC PDU | SN = Poll_PDU - 1, Poll |
| 8 | ← | | STATUS PDU | LIST(LENGTH = "0000", SN = 1, SN = 2) |
| 9 | → | | … | SS continues to receive RLC PDUs |
| 10 | → | | UPLINK RLC PDU | Poll |
| 11 | ← | | STATUS PDU | Normal reply |
| 12 | → | | … | SS continues to receive RLC PDUs |
| 13 | → | | UPLINK RLC PDU | SDU 1 (end) |
| 14 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.28.5 Test requirements

No RLC PDUs shall be retransmitted by the UE.

### 7.2.3.29 Timer based discard, with explicit signalling / Expiry of Timer_Discard

#### 7.2.3.29.1 Definition

This case tests that when the transmission of an SDU exceeds a time limit, the SDU is discarded by the sender, and the discard is signalled to the receiver. SDU discard is used to keep network delays within limits, and incorrect operation will effect the quality of service.

#### 7.2.3.29.2 Conformance requirement

If the transmission time exceeds a predefined value for a SDU in acknowledged mode RLC, this SDU is discarded in the transmitter and a Move Receiving Window (MRW) command is sent to the receiver so that AMD PDUs carrying that SDU are discarded in the receiver and the receiver window is updated accordingly.

This procedure is initiated by the sender when the following conditions are fulfilled … Timer based SDU discard with explicit signalling is used, and Timer_Discard expires for an SDU.

This status report is sent even if the 'STATUS prohibit' is used and the timer 'Timer_Status_Prohibit' is active.

The STATUS PDUs have higher priority than data PDUs.

Reference

TS 25.322 clauses 9.7.3.1, 11.3.4.3.1 and 11.6.

#### 7.2.3.29.3 Test purpose

1. To verify that if the transmission time for an SDU exceeds Timer_Discard, the SDU is discarded in the transmitter and the MRW procedure is invoked.

2. ...

7.2.3.29.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC | |
| Transmission RLC discard | |
| Timer based with explicit signalling | |
| Timer_MRW | 500 |
| Timer_Discard | 1000 |
| MAX_MRW | 4 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to AM_7_PayloadSize – 1 bytes.

Test procedure

a) The SS sends at least 2 RLC SDUs of size AM_7_PayloadSize – 1bytes.

b) The SS notes the time that the first RLC PDU is received on the uplink. This time will be recorded as $T_1$.

c) The SS checks the RLC PDUs received on the uplink and responds to all poll requests with a STATUS PDU, negatively acknowledging the RLC PDU with sequence number 0, and positively acknowledging all other RLC PDUs received.

d) The SS monitors received STATUS PDUs for the presence of a MRW SUFI, noting the time it was received. This time will be recorded as $T_2$.

e) The SS responds to the MRW command with a correct MRW_ACK.

f) Void.

g) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | DOWNLINK RLC PDU | SDU 1 |
| 2 | | ← | DOWNLINK RLC PDU | SDU 2 |
| 3 | | → | UPLINK RLC PDU | SDU 1: Note $T_1$ |
| 4 | | → | … | SS continues to receive RLC PDUs |
| 5 | | → | UPLINK RLC PDU | SDU 2 + Poll |
| 6 | | ← | STATUS PDU | NAK SN=0 |
| 7 | | → | … | SS continues to receive RLC PDU with SN=0 + Poll |
| 8 | | ← | … | STATUS PDU, SS continues to NAK PDU with SN=0 |
| 9 | | → | STATUS PDU | MRW Command: Note $T_2$ |
| 10 | | ← | STATUS PDU | MRW_ACK |
| 11 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.29.5 Test requirements

1. The measured time $T_2 - T_1$ shall be 1000 ms.
2. The STATUS PDU received in step 9 shall contain a MRW SUFI indicating that the first three PDUs shall be discarded, and that the data indicated in the fourth PDU by the first LI shall also be discarded.

### 7.2.3.29a Timer based discard, with explicit signalling / Expiry of Timer_Discard when Timer_STATUS_prohibit is active

#### 7.2.3.29a.1 Definition

This case tests that when the transmission of an SDU exceeds a time limit, the SDU is discarded by the sender, and the discard is signalled to the receiver while the Timer_STATUS_Prohibit is active. SDU discard is used to keep network delays within limits, and incorrect operation will effect the quality of service.

This test applies to all UE.

#### 7.2.3.29a.2 Conformance requirement

If the transmission time exceeds a predefined value for a SDU in acknowledged mode RLC, this SDU is discarded in the transmitter and a Move Receiving Window (MRW) command is sent to the receiver so that AMD PDUs carrying that SDU are discarded in the receiver and the receiver window is updated accordingly.

Upon expiry of Timer_Discard the sender shall initiate the SDU discard with explicit signalling procedure.

This status report is sent even if the 'STATUS prohibit' is used and the timer 'Timer_Status_Prohibit' is active.

The STATUS PDUs have higher priority than data PDUs.

Reference

TS 25.322 clauses 9.7.3.1, 11.3.4.3.1 and 11.6.

#### 7.2.3.29a.3 Test purpose

1. …
2. To verify that the MRW procedure status report is sent even if the 'STATUS prohibit' is used and the timer 'Timer_Status_Prohibit' is active.

#### 7.2.3.29a.4 Method of test

TBD

#### 7.2.3.29a.5 Test requirements

TBD

### 7.2.3.30 Timer based discard, with explicit signalling / Obsolete MRW_ACK

#### 7.2.3.30.1 Definition

This case tests the ability of the receiving AM RLC entity to handle obsolete information that can be received during a failure of the SDU discard procedure. SDU discard is used to keep network delays within limits, and incorrect operation will effect the quality of service.

#### 7.2.3.30.2 Conformance requirement

If Timer_MRW expires before the discard procedure is terminated,the MRW SUFI shall be retransmitted, VT(MRW) is incremented by one and Timer_MRW restarted. MRW SUFI shall be exactly the same as previously transmitted even though some new SDUs would have been discarded during the running of the Timer_MRW.

The received MRW_ACK shall be discarded in the following cases.

1. …

2. If the SN_ACK field in the received MRW_ACK < $SN_MRW_{LENGTH}$ in the transmitted MRW SUFI.

3. If the SN_ACK field in the received MRW_ACK is equal to the $SN_MRW_{LENGTH}$ in the transmitted MRW SUFI and the N field in the received MRW_ACK is not equal to the $N_{LENGTH}$ field in the transmitted MRW SUFI

4. If the SN_ACK field in the received MRW_ACK > $SN_MRW_{LENGTH}$ in the transmitted MRW SUFI and the N field in the received MRW_ACK is not equal to zero.

Reference

TS 25.322 clauses 11.6.5 and 11.6.6.3.

#### 7.2.3.30.3 Test purpose

1. To verify that the MRW SUFI is retransmitted if Timer_MRW expires before a valid MRW_ACK is received.

2. To verify that the MRW_ACK is discarded if the SN_ACK field < $SN_MRW_{LENGTH}$.

3. To verify that the MRW_ACK is discarded if the N field is not equal to $N_{LENGTH}$ transmitted in the MRW SUFI.

4. To verify that the MRW_ACK is discarded if the N field is not zero and the SN_ACK field > $SN_MRW_{LENGTH}$ in the transmitted MRW SUFI.

#### 7.2.3.30.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC | |
| Transmission RLC discard | |
| MaxDAT Retransmissions | |
| MaxDAT | 40 |
| Timer_MRW | 500 |
| MAX_MRW | 4 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to AM_7_PayloadSize – 1bytes.

Test procedure

a) The SS sends at least 2 RLC SDUs of size AM_7_PayloadSize – 1bytes.

b) The SS checks the RLC PDUs received on the uplink and responds to all poll requests with a STATUS PDU, negatively acknowledging the RLC PDU with sequence number 0, and positively acknowledging all other RLC PDUs received.

c) The SS monitors received STATUS PDUs for the presence of a MRW SUFI, noting the time it was received. This time will be recorded as $T_1$.

d) The SS responds to the MRW command with an MRW_ACK with the SN_ACK field set to $SN_MRW_{LENGTH}$ − 1.

e) The SS monitors received STATUS PDUs for another MRW SUFI, noting the time it was received. This time will be recorded as $T_2$.

f) The SS responds to the MRW command with an MRW_ACK with the SN_ACK field set to $SN_MRW_{LENGTH}$, and the N field set to ($N_{LENGTH}$ + 1) modulo 4.

g) The SS monitors received STATUS PDUs for another MRW SUFI, noting the time it was received. This time will be recorded as $T_3$.

h) The SS responds to the MRW command with an MRW_ACK with the SN_ACK field set to $SN_MRW_{LENGTH}$ + 1, and the N field set to 1.

i) The SS monitors received STATUS PDUs for another MRW SUFI.

j) The SS responds to the MRW command with a correct MRW_ACK.

k) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | DOWNLINK RLC PDU | SDU 2 |
| 3 | → | | UPLINK RLC PDU | SDU 1 |
| 4 | → | | UPLINK RLC PDU | SDU 2 + Poll |
| 5 | ← | | STATUS PDU | NAK SN=0 |
| 6 | → | | … | SS continues to receive RLC PDU with SN=0 + Poll |
| 7 | ← | | ... | STATUS PDU, SS continues to NAK PDU with SN=0 |
| 8 | → | | STATUS PDU | MRW Command: Note $T_1$ |
| 9 | ← | | STATUS PDU | MRW_ACK, SN_ACK = $SN_MRW_{LENGTH}$ – 1 |
| 10 | → | | STATUS PDU | MRW Command: Note $T_2$ |
| 11 | ← | | STATUS PDU | MRW_ACK, N field = ($N_{LENGTH}$ + 1) modulo 4 |
| 12 | → | | STATUS PDU | MRW Command: Note $T_3$ |
| 13 | ← | | STATUS PDU | MRW_ACK, SN_ACK = $SN_MRW_{LENGTH}$ + 1, N field = 1 |
| 14 | → | | STATUS PDU | MRW Command |
| 15 | ← | | STATUS PDU | MRW_ACK |
| 16 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.30.5 Test requirements

1. The measured time $T_2 - T_1$ shall be 500 ms.
2. The measured time $T_3 - T_2$ shall be 500 ms.
3. The STATUS PDUs received in steps 8, 10, 12 and 14 shall contain an identical MRW SUFI.

### 7.2.3.31 Timer based discard, with explicit signalling / Failure of MRW procedure

#### 7.2.3.31.1 Definition

This case tests that if a failure occurs during the signalling of an SDU discard to the receiver, the retransmission protocol operates correctly. SDU discard is used to keep network delays within limits, and incorrect operation will effect the quality of service.

#### 7.2.3.31.2 Conformance requirement

If VT(MRW) = MaxMRW, the Sender shall:

- terminate the SDU discard with explicit signalling procedure;
- stop the timer Timer_MRW if it was started;
- initiate the RLC RESET procedure (see clause 11.4).

If Timer_MRW expires before the discard procedure is terminated, the Sender shall:

- increment VT(MRW) by one;
- if VT(MRW)<MaxMRW:
  - set the MRW SUFI as previously transmitted (even if additional SDUs were discarded in the mean-time);
  - include the MRW SUFI in a new status report (if other SUFIs are included, their contents shall be updated);
  - transmit the status report by either including it in a STATUS PDU or piggybacked in an AMD PDU;
  - restart Timer_MRW for this discard procedure;
- else (if VT(MRW) = MaxMRW):
  - perform the actions specified in subclause 11.6.4a.

Reference

TS 25.322 clause 11.6.4a, 11.6.5.

### 7.2.3.31.3 Test purpose

1. To verify that when the number of retransmissions of a MRW command reaches MaxMRW, an error indication is passed to RRC and RESET procedure is initiated.

### 7.2.3.31.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC | |
| Transmission RLC discard | |
| Timer based with explicit signalling | |
| Timer_MRW | 500 |
| Timer_Discard | 500 |
| Max_MRW | 4 |
| Polling info | |
| Poll_PDU | 2 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1with the UL SDU size set to (2 * AM_7_PayloadSize) – 1bytes.

Test procedure

a) The SS sends 4 RLC SDUs of size (2 * AM_7_PayloadSize) – 1bytes.

b) The SS checks the RLC PDUs received on the uplink and responds to all poll requests as follows: While the VR(H) is 4 or less, with a STATUS PDU, negatively acknowledging the RLC PDU with sequence number 0, and positively acknowledging all other RLC PDUs received. While the VR(H) is greater than 4, a STATUS PDU negatively acknowledging RLC PDUs with sequence numbers 0 and 4, and positively acknowledging all others.

c) The SS monitors received STATUS PDUs for the presence of an MRW SUFI, noting the time it was received. This time will be recorded as $T_1$.

d) The SS makes no response, but monitors for the next STATUS PDU containing an MRW SUFI, noting the time it was received. This time will be recorded as $T_2$.

e) The SS sends a STATUS PDU with an MRW_ACK indicating the discard of SDU 1 moving VR(R) to 4.

f) The SS monitors for further STATUS PDUs containing an MRW SUFI, or for a RESET PDU. The SS records the number of STATUS PDUs it received with MRW SUFI before it received the RESET PDU.

g) The SS checks any RLC SDUs reassembled from the uplink.

h) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 2 |
| 4 | ← | | … | SS continues to send RLC PDUs |
| 5 | ← | | DOWNLINK RLC PDU | SDU 4 |
| 6 | → | | UPLINK RLC PDU | SDU 1 |
| 7 | → | | … | SS continues to receive RLC PDUs |
| 8 | → | | UPLINK RLC PDU | Poll |
| 9 | ← | | STATUS PDU | NAK SN=0 |
| 10 | → | | … | SS continues to receive RLC PDUs |
| 11 | → | | UPLINK RLC PDU | Poll |
| 12 | ← | | STATUS PDU | NAK SN=0, 4 |
| 13 | → | | … | SS continues to receive RLC PDUs |
| 14 | → | | STATUS PDU | MRW Command: Note $T_1$ |
| 15 | → | | STATUS PDU | MRW Command: Note $T_2$ |
| 16 | ← | | STATUS PDU | MRW_ACK indicating VR(R) = 4 |
| 17 | → | | STATUS PDU | MRW Command, discard SDU 3 |
| 18 | → | | STATUS PDU | MRW Command |
| 19 | → | | STATUS PDU | MRW Command |
| 20 | → | | STATUS PDU | MRW Command |
| 21 | → | | RESET PDU | |
| 22 | ← | | RESET ACK PDU | |
| 23 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.31.5 Test requirements

The measured time $T_2 - T_1$ shall be 500 ms.

After step 17, the SS shall detect 3 repeats of the MRW command sent in step 17 before a RESET PDU is sent.

### 7.2.3.32 SDU discard after MaxDAT-1 number of transmissions

#### 7.2.3.32.1 Definition

This case tests that if a PDU is unsuccessfully transmitted MaxDAT-1 times, the SDU it carries, and therefore all other associated PDUs, are discarded by the transmitter and receiver. This mode of SDU discard is used to minimize data loss, and incorrect operation will effect the quality of service.

#### 7.2.3.32.2 Conformance requirement

1. There shall be one VT(DAT) for each PDU and each shall be incremented every time the corresponding AMD PDU is scheduled to be transmitted. The initial value of this variable is 0.

2. If the number of times an AMD PDU is scheduled for transmission reaches MaxDAT, the Sender shall:

   - discard all SDUs segments of which are contained in the AMD PDU; and

- utilise explicit signalling to inform the Receiver according to clause 11.6.

3. If VT(DAT) = MaxDAT, the Sender shall:

   - if "No_discard after MaxDAT number of transmissions" is configured:

     ….

   - if "SDU discard after MaxDAT number of transmissions" is configured:

     - initiate the "SDU discard with explicit signalling" procedure for the corresponding SDU, see subclause 11.6.

4. Upon initiation of the SDU discard with explicit signalling procedure, the Sender shall:

   …..

   - if "SDU discard after MaxDAT number of transmissions" is configured:

     - discard all SDUs that have segments in AMD PDUs with "Sequence Number" SN inside the interval VT(A) ≤ SN ≤ X, where X is the value of the "Sequence Number" of the AMD PDU with VT(DAT) ≥ MaxDAT.

   - discard all AMD PDUs including segments of the discarded SDUs, unless they also carry a segment of a SDU whose timer has not expired;

   - if more than 15 discarded SDUs are to be informed to the Receiver (see subclause 11.6.2.2):

     ….

   - otherwise (less than or equal to 15 discarded SDUs are to be informed to the Receiver):

     - assemble an MRW SUFI with the discard information of the SDUs.

   - schedule and submit to lower layer a STATUS PDU/piggybacked STATUS PDU containing the MRW SUFI;

   ….

Reference

TS 25.322 clauses 9.4, 9.7.3.3, 11.3.3a and 11.6.

#### 7.2.3.32.3 Test purpose

1. To verify that if VT(DAT) = MaxDAT for any PDU the sender initiates the SDU discard with explicit signalling procedure.

#### 7.2.3.32.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to (2 * AM_7_PayloadSize) – 1 bytes.

Test procedure

a) The SS sends 2 RLC SDUs of size (2 * AM_7_PayloadSize) – 1 bytes.

b) The SS checks the RLC PDUs received on the uplink and responds to all poll requests with a STATUS PDU negatively acknowledging the RLC PDU with sequence number 0, and positively acknowledging all other RLC PDUs received.

c) The SS monitors received STATUS PDUs for the presence of an MRW SUFI.

d) The SS responds with a STATUS PDU containing a valid MRW_ACK SUFI.

e) The SS checks any RLC SDUs reassembled from the uplink.

f) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | DOWNLINK RLC PDU | SDU 1 |
| 2 | | ← | DOWNLINK RLC PDU | SDU 1 |
| 3 | | ← | DOWNLINK RLC PDU | SDU 2 |
| 4 | | ← | DOWNLINK RLC PDU | SDU 2 |
| 5 | | → | UPLINK RLC PDU | SDU 1 |
| 6 | | → | … | SS continues to receive RLC PDUs |
| 7 | | → | UPLINK RLC PDU | SDU 2, Poll |
| 8 | | ← | STATUS PDU | NAK SN=0 |
| 9 | | → | UPLINK RLC PDU | Retransmit SN=0, Poll |
| 10 | | ← | STATUS PDU | NAK SN=0 |
| 11 | | → | UPLINK RLC PDU | Retransmit SN=0, Poll |
| 12 | | ← | STATUS PDU | NAK SN=0 |
| 13 | | | Void | |
| 14 | | | Void | |
| 15 | | → | STATUS PDU | MRW Command |
| 16 | | ← | STATUS PDU | MRW_ACK |
| 17 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.32.5 Test requirements

The uplink RLC PDU with sequence number 0 shall be retransmitted twice, then the SS shall detect a STATUS PDU with an MRW command.

### 7.2.3.33 Operation of the RLC Reset procedure / UE Originated

#### 7.2.3.33.1 Definition

This case tests that when the maximum number of retransmissions is exceeded, the UE initiates and performs the RLC Reset procedure. Incorrect operation of this procedure may cause loss of service.

#### 7.2.3.33.2 Conformance requirement

The Sender shall:

- if one of the following triggers is detected:

1) "No_Discard after MaxDAT number of transmissions" is configured and VT(DAT) equals the value MaxDAT (see TS 25.322 subclause 9.7.3.4);

…

- stop transmitting any AMD PDU or STATUS PDU;
- increment VT(RST) by 1;
- if VT(RST) = MaxRST:
  - the Sender may submit to the lower layer a RESET PDU;

- perform the actions specified in TS 25.322 subclause 11.4.4a.

- else (if VT(RST) < MaxRST):

  - submit a RESET PDU to the lower layer;

  - start the timer Timer_RST.

NOTE: If the TFC selection exchange has been initiated by sending the RLC Entity Info parameter to MAC, the RLC entity may delay the RLC reset procedure until the end of the next TTI.

When a reset procedure has been initiated it can only be ended upon reception of a RESET ACK PDU with the same RSN value as in the corresponding RESET PDU, or upon request of re-establishment or release from upper layer, a reset procedure is not interrupted by the reception of a RESET PDU from the peer entity.

[...]

The Sender shall:

- set the HFNI field to the currently highest used HFN (DL HFN when the RESET PDU is sent by UTRAN or UL HFN when the RESET PDU is sent by the UE);

- set the RSN field to the sequence number of the RESET PDU. The sequence number of the first RESET PDU after the AM entity is established or re-established shall be "0". This sequence number is incremented every time a new RESET PDU is transmitted, but not when a RESET PDU is retransmitted.

[...]

Upon reception of a RESET ACK PDU, the Sender shall:

- if the Sender has already transmitted a RESET PDU which has not been yet acknowledged by a RESET ACK PDU:

  - if the received RSN value is the same as the one in the corresponding RESET PDU:

    - set the HFN value (DL HFN when the RESET ACK PDU is received in UE or UL HFN when the RESET ACK PDU is received in UTRAN) to the HFNI field of the received RESET ACK PDU;

    - reset the state variables described in subclause 9.4 to their initial values;

    - stop all the timers described in subclause 9.5;

    - reset configurable parameters to their configured values;

    - discard all RLC PDUs in the receiving side of the AM RLC entity;

    - discard all RLC SDUs that were transmitted before the reset in the transmitting side of the AM RLC entity;

    - increase with one the UL HFN and DL HFN, and the updated HFN values shall be used for the first transmitted and received AMD PDUs after the reset procedure;

  - otherwise (if the received RSN value is not the same as the one in the corresponding RESET PDU):

    - discard the RESET ACK PDU;

- otherwise (if the Sender has not transmitted a RESET PDU which has not been yet acknowledged by a RESET ACK PDU):

  - discard the RESET ACK PDU.

NOTE: If the TFC selection exchange has been initiated by sending the RLC Entity Info parameter to MAC, the RLC entity may delay the RLC SDUs discard in the transmitting side until the end of the next TTI.

[...]

If Timer_RST expires before the reset procedure is terminated, the Sender shall:

- increment VT(RST) by one;
- if VT(RST)<MaxRST:
  - set the RESET PDU as previously transmitted (even if additional SDUs were discarded in the mean-time);
  - transmit RESET PDU;
  - restart Timer_RST.

Reference

TS 25.322 clause 11.4.2, 11.4.2.1, 11.4.4, 11.4.5.1.

### 7.2.3.33.3 Test purpose

1. To verify that the Reset procedure is initiated when the maximum number of retransmissions has been exceeded (Reset trigger condition 1) in subclause 11.4.2 of 3GPP TS 25.322 (R1999).
2. To verify that the sender resets state variables to their initial value and resets configurable parameters to their configured value.
3. To verify that RSN is updated correctly.
4. To verify operation of Timer_RST.

### 7.2.3.33.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC<br>Transmission RLC discard<br>No discard<br>Max_DAT | <br><br><br>4 |

These settings apply to both the uplink and downlink DTCH.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to (2 * AM_7_PayloadSize) – 1 bytes.

Test procedure

a) The SS sends 2 RLC SDUs of size (2 * AM_7_PayloadSize) – 1 bytes.

b) The SS checks the RLC PDUs received on the uplink and responds to all poll requests with a STATUS PDU negatively acknowledging the RLC PDU with sequence number 0, and positively acknowledging all other RLC PDUs received.

c) The SS notes the time that the RESET PDU is received. This time will be recorded as $T_1$. The SS notes the value of the RSN bit.

d) The SS makes no response, and notes the time that the next RESET PDU is received. This time will be recorded as $T_2$. The SS notes the value of the RSN bit.

e) The SS sends a RESET ACK PDU with the RSN bit set to the same value as received in the RESET PDU received in step d).

f) The SS sends an RLC SDU of size (2 * AM_7_PayloadSize) – 1bytes. The data contents of this RLC SDU shall be different from the contents of the RLC SDUs sent in procedure step a) above.

g) The SS checks the RLC PDUs received on the uplink and responds to all poll requests with a STATUS PDU negatively acknowledging the RLC PDU with sequence number 0, and positively acknowledging all other RLC PDUs received.

h) The SS notes the value of the RSN bit of the RESET PDU received.

i) The SS sends a RESET ACK PDU with the RSN bit set to the value received in the RESET PDU in step c (the incorrect value).

j) The SS waits to receive another RESET PDU and checks the RSN bit.

k) The SS sends a RESET ACK PDU with the correct RSN bit.

l) The SS checks any RLC SDU received on the uplink.

m) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 2 | ← | | DOWNLINK RLC PDU | SDU 1 |
| 3 | ← | | DOWNLINK RLC PDU | SDU 2 |
| 4 | ← | | DOWNLINK RLC PDU | SDU 2 |
| 5 | → | | UPLINK RLC PDU | SDU 1 |
| 6 | → | | … | SS continues to receive RLC PDUs |
| 7 | → | | UPLINK RLC PDU | SDU, Poll<br>The Poll may appear in returned PDU for either SDU 1 or 2 |
| 8 | ← | | STATUS PDU | NAK SN=0 |
| 9 | → | | UPLINK RLC PDU | Retransmit PDU SN=0, Poll |
| 10 | ← | | STATUS PDU | NAK SN=0 |
| 11 | → | | UPLINK RLC PDU | Retransmit PDU SN=0, Poll |
| 12 | ← | | STATUS PDU | NAK SN=0 |
| 13 | | | Void | |
| 14 | | | Void | |
| 15 | → | | RESET PDU | Note $T_1$ |
| 16 | → | | RESET PDU | Note $T_2$, check RSN |
| 17 | ← | | RESET ACK PDU | |
| 18 | ← | | DOWNLINK RLC PDU | SDU 3 |
| 19 | ← | | DOWNLINK RLC PDU | SDU 3 |
| 20 | → | | UPLINK RLC PDU | SDU 3, check PDU has SN=0 |
| 21 | → | | UPLINK RLC PDU | SDU 3, Poll |
| 22 | ← | | STATUS PDU | NAK SN=0 |
| 23 | → | | UPLINK RLC PDU | Retransmit SN=0, Poll |
| 24 | ← | | STATUS PDU | NAK SN=0 |
| 25 | → | | UPLINK RLC PDU | Retransmit SN=0, Poll |
| 26 | ← | | STATUS PDU | NAK SN=0 |
| 27 | | | Void | |
| 28 | | | Void | |
| 29 | → | | RESET PDU | Check RSN |
| 30 | ← | | RESET ACK PDU | RSN = 0 |
| 31 | → | | RESET PDU | Check RSN |
| 32 | ← | | RESET ACK PDU | RSN = 1 |
| 33 | | | RB RELEASE | Optional step |
| NOTE: The Expected Sequence shown is infomative.<br>The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity.<br>Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

7.2.3.33.5 Test requirements

1. The measured time $T_2 - T_1$ shall be 500 ms.

2. In steps 20 to 21 the SS shall receive an RLC SDU with contents that match the third RLC SDU sent to the UE. The first RLC PDU containing that SDU shall have sequence number 0.

3. The RSN bit of the first and second RESET PDUs received shall be set to 0. The RSN bit of the third and fourth RESET PDU shall be set to 1.

## 7.2.3.34 Operation of the RLC Reset procedure / UE Terminated

### 7.2.3.34.1 Definition

This case tests that the UE responds correctly to the RLC Reset procedure initiated by the network. Incorrect operation of this procedure may cause loss of service.

### 7.2.3.34.2 Conformance requirement

Upon reception of a RESET PDU the Receiver shall:

- if the RSN value in the RESET PDU is the same as the RSN value in the last received RESET PDU:
  - either only submit a RESET ACK PDU to the lower layer with the contents set exactly as in the last transmitted RESET ACK PDU (i.e., in this case the RLC entity is not reset); or
  - perform the actions specified below as if the RSN value was different from the RSN value in the last received RESET PDU.
- otherwise, if the RESET PDU is the first RESET PDU received since the entity was (re-)established or the RSN value is different from the RSN value in the last received RESET PDU:
  - submit a RESET ACK PDU to the lower layer with the content set as specified in subclause 11.4.3.1;
  - reset the state variables described in subclause 9.4 except VT(RST) to their initial values;
  - stop all the timers described in subclause 9.5 except Timer_RST;
  - reset configurable parameters to their configured values;
  - discard all RLC PDUs in the receiving side of the AM RLC entity;
  - discard all RLC SDUs that were transmitted before the reset in the transmitting side of the AM RLC entity;
  - set the HFN (DL HFN when the RESET PDU is received in UE or UL HFN when the RESET PDU is received in UTRAN) equal to the HFNI field in the received RESET PDU;
  - increase with one the UL HFN and DL HFN, and the updated HFN values shall be used for the first transmitted and received AMD PDUs after the reset procedure.

NOTE: If the TFC selection exchange has been initiated by sending the RLC Entity Info parameter to MAC, the RLC entity may delay the RLC SDUs discard in the transmitting side of the AM RLC entity until the end of the next TTI.

#### Reference

TS 25.322 clause 11.4.3.

### 7.2.3.34.3 Test purpose

1. To verify that upon reception of a RESET PDU the receiver responds with a RESET ACK PDU.

2. To verify that the receiver resets its state variables to their initial value and resets configurable parameters to their configured value.

#### 7.2.3.34.4 Method of test

Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The following RLC parameter values are used in place of the values in clause 7.2.3.1:

| | |
|---|---|
| Uplink RLC<br>Transmission RLC discard<br>No discard<br>MaxDAT | <br><br><br>4 |

These settings apply to both the uplink and downlink DTCH.

Test procedure

a) The SS sends 2 RLC SDUs of size (2 * AM_7_PayloadSize) – 1 bytes, and polls on the last PDU sent.

b) The SS checks the STATUS PDUs received on the uplink until both SDUs have been acknowledged.

c) The SS transmits a RESET PDU.

d) The SS monitors the uplink for a RESET ACK PDU.

e) The SS sends an RLC SDU of size (2 * AM_7_PayloadSize) – 1 bytes, and polls on the last PDU sent.

f) The SS checks for STATUS PDUs received on the uplink until the SDU has been acknowledged.

g) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | DOWNLINK RLC PDU | SDU 1 |
| 2 | | ← | DOWNLINK RLC PDU | SDU 1 |
| 3 | | ← | DOWNLINK RLC PDU | SDU 2 |
| 4 | | ← | DOWNLINK RLC PDU | SDU 2, poll |
| 5 | | → | STATUS PDU | ACK SN=0, 1, 2 and 3 |
| 6 | | ← | RESET PDU | |
| 7 | | → | RESET ACK PDU | |
| 8 | | ← | DOWNLINK RLC PDU | SDU 3 |
| 9 | | ← | DOWNLINK RLC PDU | SDU 3, poll |
| 10 | | → | STATUS PDU | ACK SN=0 and 1 |
| 11 | | | RB RELEASE | Optional step |
| NOTE: The Expected Sequence shown is infomative.<br>The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity.<br>Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

#### 7.2.3.34.5 Test requirements

1. The SS shall receive a RESET ACK PDU in step 7.

2. The SS shall receive a STATUS PDU in step 10 acknowledging for the third RLC SDU transmitted with PDUs starting at SN=0.

### 7.2.3.35 Reconfiguration of RLC parameters by upper layers

#### 7.2.3.35.1 Definition

This case verifies the UE behaviour after a reconfiguration of RLC parameters on an established RLC AM entity.

#### 7.2.3.35.2 Conformance requirement

Upon reception of the IE "RLC Info", the UE shall:

1> configure the transmitting and receiving RLC entities in the UE for that radio bearer accordingly;

1> if the IE "Polling info" is present in the IE "RLC info":

2> for each present IE in the IE "Polling info":

3> configure RLC to use the corresponding function according to the value of the IE.

2> for each absent IE in the IE "Polling info":

3> configure RLC to not use the corresponding function.

1> if the IE "Polling info" is absent:

2> configure RLC to not use the polling functionality.

1> if the IE "Downlink RLC STATUS info" is present in the IE "RLC info" (this IE is present for AM RLC):

2> for each present IE in the IE "Downlink RLC STATUS info":

3> configure RLC to use the corresponding function according to value of the IE.

a) Timer_Poll.

This timer shall only be used when so configured by upper layers. The value of the timer is signalled by upper layers. In the UE this timer shall be started when the successful or unsuccessful transmission of an AMD PDU containing a poll is indicated by lower layer.

f) Timer_Status_Prohibit.

This timer shall only be used when so configured by upper layers. It is meant to prohibit the Receiver from sending consecutive acknowledgement status reports. A status report is an acknowledgement status report if it contains any of the SUFIs LIST, BITMAP, RLIST or ACK. The value of the timer is signalled by upper layers.

In the UE, this timer shall be started when the successful or unsuccessful transmission of the last STATUS PDU of an acknowledgement status report is indicated by lower layer.

##### Reference

TS 25.331 clause 8.6.4.9, 25.322 clause 9.5.

#### 7.2.3.35.3 Test purpose

To verify that the UE starts to use the new set of RLC parameters when an already established AM RLC radio bearer is reconfigured.

#### 7.2.3.35.4 Method of test

##### Initial conditions

The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Access Bearer is replaced with the RAB defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1.

The Radio Bearer is placed in UE test loop mode 1 with the UL SDU size set to (AM_7_PayloadSize) - 1 bytes.

##### Test procedure

a) After establishing the radio bearer with default settings, SS reconfigures RLC parameters for an AM RLC entity by sending a RADIO BEARER RECONFIGURATION RRC message to the UE.

b) Let $T_{poll}$ be the value of the Timer_Poll_Periodic timer, $T_{pro}$ the value of the Timer_Status_Prohibit timer, and $T_{per}$ the value of the Timer_Status_Periodic timer.

c) The SS transmits at least 2 * $T_{poll}$ / TTI SDUs of size AM_7_PayloadSize - 1 bytes.

d) Whilst transmitting, the SS monitors the uplink for a STATUS PDU and notes the time. This time will be recorded as $T_1$.

e) The SS sets the P bit in one of the next floor($T_{pro}$/TTI) PDUs transmitted on the downlink.

f) The SS waits to receive a second STATUS PDU and notes the time. This time will be recorded as $T_2$.

g) The SS receives PDUs from the UE, and notes the time on receiving the first PDU with the P bit set, but does not respond. This time will be recorded as $T_3$.

h) The SS continues to receive PDUs from the UE and notes the time on receipt of the next PDU with the P bit set. This time will be recorded as $T_4$.

i) The SS may optionally release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | RADIO BEARER RECONFIGURATION | RRC |
| 2 | | → | RADIO BEARER RECONFIGURATION COMPLETE | RRC |
| 3 | | ← | DOWNLINK RLC PDU | SDU 1 |
| 4 | | ← | … | SS continues to transmit RLC SDUs |
| 5 | | ← | DOWNLINK RLC PDU | SDU m |
| 6 | | → | STATUS PDU | Note $T_1$ |
| 7 | | ← | DOWNLINK RLC PDU | Poll |
| 8 | | ← | … | SS continues to transmit RLC PDUs |
| 9 | | ← | DOWNLINK RLC PDU | SDU m + ceil($T_{pro}$ / TTI) |
| 10 | | → | STATUS PDU | Note $T_2$ |
| 11 | | ← | DOWNLINK RLC PDU | SDU ceil($2T_{poll}$/TTI) |
| 12 | | → | UPLINK RLC PDU | SDU 1 |
| 13 | | → | UPLINK RLC PDU | SDU 2 |
| 14 | | → | … | SS continues to receive RLC PDUs |
| 15 | | → | UPLINK RLC PDU | SN = ceil($T_{poll}$/TTI), First Poll: Note $T_3$ |
| 16 | | → | UPLINK RLC PDU | SN = ceil($T_{poll}$/TTI)+1 |
| 17 | | → | … | SS continues to receive RLC PDUs |
| 18 | | → | UPLINK RLC PDU | Second Poll: Note $T_4$ |
| 18a | | ← | STATUS PDU | |
| 18b | | → | … | SS continues to receive PDUs, acknowledging with STATUS PDUs when polled until all PDUs have been received and acknowledged |
| 19 | | | RB RELEASE | Optional step |
| NOTE 1: The Expected Sequence shown is infomative. The UPLINK and DOWNLINK PDU flows may overlap, but are shown separate for clarity. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

Specific message contents

RADIO BEARER RECONFIGURATION (step 1)

The default RADIO BEARER RECONFIGURATION message as defined in TS 34.108 is used, except for the following:

| | |
|---|---|
| RB information to reconfigure list<br>- RB information to reconfigure<br>- RB identity | <br><br>Refererring to the radio bearer defined for AM 7-bit "Length Indicator" tests in clause 7.2.3.1. |
| - Downlink RLC Info | |
| - Timer_Status_Prohibit | 500 |
| - Timer_STATUS_periodic | 200 |
| - Uplink RLC Info | |
| - Polling info | |
| - Last retransmission PDU poll | FALSE |
| - Last transmission PDU poll | FALSE |
| - Timer_poll | 600 |
| - Timer_Poll_Periodic | 1000 |

#### 7.2.3.35.5 Test requirements

The measured time $T_2 - T_1$ shall be 500 ms.

The measured time $T_4 - T_3$ shall be 600 ms.

### 7.2.3.36 Flexible handling of RLC PDU sizes for AM RLC

#### 7.2.3.36.1 Definition

When flexible “RLC PDU size” is configured in downlink, RLC SDUs are segmented if the SDU is larger than the maximum RLC PDU size. Concatenation may be performed up to the maximum RLC PDU size. If flexible RLC PDU size is configured, the downlink AMD PDU size is variable up to the maximum RLC PDU size.

#### 7.2.3.36.2 Conformance requirement

Unless the "Extension bit" indicates that a UMD PDU contains a complete SDU which is not segmented, concatenated or padded, or the HE field indicates that an AMD PDU contains the last octet of the RLC SDU, a "Length Indicator" is used to indicate the last octet of each RLC SDU ending within the PDU

[…]

This two-bit [Header extension type (HE)] field indicates if the next octet is data or a "Length Indicator" and E bit.

| Value | Description |
|---|---|
| **00** | The succeeding octet contains data |
| **01** | The succeeding octet contains a length indicator and E bit |
| **10** | If “Use special value of the HE field” is configured, the succeeding octet contains data and the last octet of the PDU is the last octet of an SDU. Otherwise, this coding is reserved (PDUs with this coding will be discarded by this version of the protocol). |
| **11** | Reserved (PDUs with this coding will be discarded by this version of the protocol). |

[…]

if "flexible RLC PDU size" has been configured (only applicable for UTRAN in downlink):

- segment, and if possible concatenate the RLC SDUs into AMD PDUs with a size not larger than the maximum RLC PDU size.
- set a "Length Indicator" field for each SDU that ends in the AMD PDU according to subclause 9.2.2.8, except for the SDUs where the end of the SDU has been indicated by the HE field according to subclause 9.2.2.7;

[…]

Upon reception of an AMD PDU, the Receiver shall:

[…]

- reassemble the received AMD PDUs into RLC SDUs;
- if "In-Sequence Delivery" is configured:

- deliver the RLC SDUs in-sequence (i.e. in the same order as the RLC SDUs were originally transmitted by the peer entity) to upper layers through the AM-SAP

Reference(s)

TS 25.322 clauses 9.2.2.8, 11.3.2 and 11.3.3.

### 7.2.3.36.3 Test purpose

1. To test that a large SDU is correctly received for varying RLC PDU sizes up to the maximum RLC PDU size
2. To test that a segmented is SDU reassembled correctly and delivered to higher layers

### 7.2.3.36.4 Method of test

Initial conditions

No specific as included in the test procedure (steps a and b) for each test execution

Downlink length indicators of size 15 shall be used

Test procedure

**Table 7.2.3.36.4.1 Max_RLC_PDU_size values for different test executions**

| Test execution | 1 | 2 | 3 |
|---|---|---|---|
| Max_RLC_PDU_size [octets] | 90 | 300 | 1500 |

Let Max_RLC_PDU_size be equal to the value for execution 1 in table 7.2.3.36.4.1.

a) The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Bearer is replaced with the RB according to 34.108 clause 6.10.2.4.5.1 (Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH) configured according to alt3 (Flexible RLC + MAC-ehs) .

b) The radio bearer is placed into UE test loop mode 1 and configured to return UL RLC SDUs of the same size as received in DL.

c) The SS transmits two RLC SDUs of size 40 octets. The SDUs are sent in two separate RLC PDUs. The SS sets the HE field to “10”. No length indicators are used.

d) The SS checks the length and content of the received RLC SDUs

e) The SS transmits two RLC SDUs of size 80 octets. The SDUs are segmented and/or concatenated into successive RLC PDUs where no RLC PDU is larger than Max_RLC_PDU_size. A length indicator is used to indicate the end of each SDU.

f) The SS checks the length and content of the received RLC SDUs

g) The SS transmits two RLC SDUs of size 320 octets. The SDUs are segmented into successive RLC PDUs where no RLC PDU is larger than Max_RLC_PDU_size. In the RLC PDU containing the last data octet of an RLC SDU the SS sets the HE field to “10”.

h) The SS checks the length and content of the received RLC SDUs

i) For test execution 1 skip steps j) and k). See Note 1

j) The SS transmits two RLC SDUs of size 1500 octets. The SDUs are segmented into successive RLC PDUs where no RLC PDU is larger than Max_RLC_PDU_size. In the RLC PDU containing the last data octet of an RLC SDU the SS sets the HE field to "10".

k) The SS checks the length and content of the received RLC SDUs

l) The SS opens the UE test loop and release the radio bearer.

m) Repeat steps a) to k) for the different values of Max_RLC_PDU_size parameter according to table 7.2.3.36.4.1 (test execution 2 and 3).

Note 1 The test steps using RLC SDU size of 1500 octets is skipped for test execution 1 as the maximum number of reordering SDUs per TTI (26) whould otherwise have been exceeded.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures, |
| 2 | | | Close UE test loop | |
| 3 | ← | | DOWNLINK RLC PDUs (SDU1, SDU2) | DL RLC SDU size = 40 Octets<br>The number of RLC PDUs depends on the test run. All PDUs are transmitted in the same TTI. NOTE 2. |
| 4 | → | | UPLINK RLC PDUs (SDU1, SDU2) | The SS checks length and content of received RLC SDUs. The number of received RLC PDUs depends on the test run |
| 5 | ← | | DOWNLINK RLC PDUs (SDU1, SDU2) | DL RLC SDU size = 80 Octets<br>The number of RLC PDUs depends on the test run. All PDUs are transmitted in the same TTI. NOTE 2. |
| 6 | → | | UPLINK RLC PDUs (SDU1, SDU2) | The SS checks length and content of received RLC SDUs. The number of received RLC PDUs depends on the test run |
| 7 | ← | | DOWNLINK RLC PDUs (SDU1, SDU2) | DL RLC SDU size = 320 Octets<br>The number of RLC PDUs depends on the test run. All PDUs are transmitted in the same TTI. NOTE 2. |
| 8 | → | | UPLINK RLC PDUs (SDU1, SDU2) | The SS checks length and content of received RLC SDUs. The number of received RLC PDUs depends on the test run |
| 9 | | | | For test execution 1 skip steps 10 and 11 |
| 10 | ← | | DOWNLINK RLC PDUs (SDU1, SDU2) | DL RLC SDU size = 1500 Octets<br>The number of RLC PDUs depends on the test run. All PDUs are transmitted in the same TTI. NOTE 2. |
| 11 | → | | UPLINK RLC PDUs (SDU1, SDU2) | The SS checks length and content of received RLC SDUs. The number of received RLC PDUs depends on the test run |
| 12 | | | Open UE test loop | |
| 13 | | | RB RELEASE | |
| 14 | | | | Repeat steps 1 to 13 for test execution 2 and 3 |

NOTE 1: The Expected Sequence shown is infomative.
The number of transmitted RLC PDUs in downlink and uplink varies with the test run.
Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes.

NOTE 2: Depending upon the UE category and the number of bits of an HS-DSCH transport block to be transmitted more than one TTI may be required. This will be done respecting table 5.1a of 3GPP TS 25.306. The HS-DSCH TB table size as provided in the bit aligned table of 3GPP TS 25.321 Annex A will be used.

### 7.2.3.36.5 Test requirements

For each execution of the test procedure:

1. In steps 4, the UE shall return two RLC SDUs with the same size and content as the transmitted SDUs

2. In steps 6, the UE shall return two RLC SDUs with the same size and content as the transmitted SDUs
3. In steps 8, the UE shall return two RLC SDUs with the same size and content as the transmitted SDUs
4. For test execution 2 and 3: In steps 11, the UE shall return two RLC SDUs with the same size and content as the transmitted SDUs

## 7.2.3.38 Flexible handling of RLC PDU sizes for AM RLC in uplink

### 7.2.3.38.1 Definition

If flexible RLC PDU size is configured in uplink, RLC SDUs are segmented and/or concatenated to create RLC PDUs larger than or equal to the Minimum UL RLC PDU size and smaller than or equal to the largest UL AMD PDU size. If data to be transmitted is not enough to create an AMD PDU of the minimum size, it is allowed to create an AMD PDU including all data to be transmitted, even if the resulting size is smaller than the Minimum UL RLC PDU size. For each transmission the RLC entity constructs an RLC PDU with a size that matches the size indicated by the MAC layer

### 7.2.3.38.2 Conformance requirement

- in uplink, if MAC-i/is has been configured:
  - if the UE pre-generates RLC PDUs for transmission in a later TTI:
    - provided that the UE has sufficient amount of data available for transmission, the size of the data field of the RLC PDU shall be chosen so that each RLC PDU to be multiplexed to the MAC-i/is PDU matches the maximum amount of data allowed to be transmitted by the applicable current grant (scheduled or non-scheduled) for the current TTI.
    - RLC PDUs may only be pre-generated if the amount of data in outstanding pre-generated RLC PDUs for this logical channel is less than or equal to four times the maximum amount of data allowed to be transmitted by the applicable current grant (scheduled or non-scheduled) for the current TTI.
  - if the UE generates RLC PDUs for transmission in the current TTI:
    - the size of the data field of the RLC PDU shall be chosen so that the RLC PDU size matches the data requested for this logical channel by the current E-TFC selection.

[…]

If flexible RLC PDU size is configured in uplink, RLC SDUs are segmented and/or concatenated to create RLC PDUs larger than or equal to the Minimum UL RLC PDU size and smaller than or equal to the largest UL AMD PDU size. If data to be transmitted is not enough to create an AMD PDU of the minimum size, it is allowed to create an AMD PDU including all data to be transmitted, even if the resulting size is smaller than the Minimum UL RLC PDU size.

#### Reference(s)

TS 25.322 clauses 4.2.1.3.1, 9.2.2.8, 9.2.2.9, 11.3.2 and 11.3.3.

### 7.2.3.38.3 Test purpose

1. To test that SDUs are correctly concatenated/segmented into RLC PDUs not smaller than “Minimum UL PDU size” (unless there is no other data in the buffer) and not larger than “largest UL AMD PDU size”
2. To test that the size of the RLC PDU is adapted to the size of the issued grant

### 7.2.3.38.4 Method of test

#### Initial conditions

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Minimum UL PDU size | 320 bit |
| Largest UL AMD PDU size | 640 bit |

a) The generic procedure for Radio Bearer establishment (clause 7.1.3 of TS 34.108) is executed, with all the parameters as specified in the procedure, with the exception that the default Radio Bearer is replaced with the RB according to 34.108 clause 6.10.2.4.6.1 configured according to Alt 3 (Flexible RLC + MAC-i/is ) with MAC-d flow#1 configured for scheduled transmissions.

b) The radio bearer is placed into UE test loop mode 1 and configured to return UL RLC SDUs of size 80 octets

c) The SS has not issued any grant to the UE for E-DCH

d) The SS transmits 4 RLC SDUs of size 80 octets. RLC PDUs are created by adding an AMD header (the SDUs are not segmented or concatenated). In each RLC PDU the HE field is set to "10".

e) The SS waits for a SI to be received

f) The SS issues an absolute grant that (absolute grant signalling value FFS), i.e. the allowed RLC PDU size is below the "Minimum UL PDU size".

g) The SS checks the content of the received RLC SDUs and size of the received RLC PDUs;

h) The SS removes the scheduling grant for the UE

i) The SS transmits 4 RLC SDUs of size 80 octets. RLC PDUs are created by adding an AMD header (the SDUs are not segmented or concatenated). In each RLC PDU the HE field is set to "10"

j) The SS issues an absolute grant (absolute grant signalling value FFS), i.e. the allowed RLC PDU size is above the "Largest UL AMD PDU size".

k) The SS checks the length and content of the received RLC SDUs

l) The SS opens the UE test loop and release the radio bearer.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | RB ESTABLISHMENT | See generic procedures, |
| 2 | | | Close UE test loop | |
| 3 | ← | | DOWNLINK RLC PDU (SDUs) | SN=0,1,2,3, RLC SDU size = 80 Octets |
| 4 | → | | SI indicating data | |
| 5 | ← | | Absolute grant | Grant value FFS |
| 6 | → | | UPLINK RLC PDU (SDUs) | The SS checks length and content of received RLC SDUs. |
| 7 | ← | | Absolute grant | Grant value 1, removal of SG |
| 8 | ← | | DOWNLINK RLC PDU (SDUs) | SN=4,5,6,7, RLC SDU size = 80 Octets |
| 9 | → | | SI indicating data | |
| 10 | ← | | Absolute grant | Grant value FFS |
| 11 | → | | UPLINK RLC PDU (SDUs) | The SS checks length and content of received RLC SDUs. |
| 12 | | | Open UE test loop | |
| 13 | | | RB RELEASE | |
| NOTE 1: The Expected Sequence shown is infomative. Information such as SDU, PDU or Sequence numbers given in the comments column shall be considered informative only, for test case development purposes. | | | | |

### 7.2.3.38.5 Test requirements

For each execution of the test procedure:

1. In step 6, the UE shall return 4 RLC SDUs with the same content as the transmitted SDUs. The RLC PDU size of the first three RLC PDUs shall be equal to "minimum UL PDU size".

2. In step 11, the UE shall return 4 RLC SDUs with the same content as the transmitted SDUs. The size of the first received RLC PDU shall be equal to “Largest UL AMD PDU size”.

## 7.2.4 MBMS

### 7.2.4.1 Void

### 7.2.4.2 MTCH duplicate avoidance and reordering / MBMS Broadcast Service

#### 7.2.4.2.1 Definition

This test is applicable for Rel-6 UEs supporting MBMS broadcast services.

#### 7.2.4.2.2 Conformance requirement

The receiving UM-RLC entity receives UMD PDUs through the configured logical channels from the lower layer. When duplicate avoidance and reordering is configured there may be one or more than one input from the lower layer. Inputs can be added or removed without changing the buffer contents, state variables or timers within the receiving UM RLC entity. Where duplicate avoidance and reordering is not configured there is only one input from the lower layer and it is not reconfigured.

When configured, duplicate avoidance and reordering is the first receive function that is applied to the input UMD PDU streams in the receiving UM RLC entity. It can only be configured in a UE, it is not used in UTRAN. It completes duplicate detection and re-ordering of the UMD PDUs that are received from the one or more inputs to produce a single ordered sequence of PDUs that is passed to the next in sequence RLC receiver function.

…

The duplicate avoidance and reordering function can be configured for use within a receiving UM RLC entity in the UE. It combines PDU sequences received from several sources and/or repeat transmissions from a single source to form a single ordered PDU sequence that is passed to the header removal and reassembly functions. It completes duplicate detection, discard and re-ordering based on the UM PDU sequence number. Where the UM RLC receives input from several sources, inputs can be added or removed without changing the buffer contents, state variables and timers associated with the duplicate avoidance and reordering function or any subsequent UM RLC function.

The duplicate avoidance and reordering function makes use of the state variable VR(UDR) and a receive window whose span is from VR(UDH) – DAR_Window_Size + 1 to VR(UDH) inclusively. For re-ordering the function uses a buffer for the temporary storage of PDUs.

For each PDU received, the duplicate avoidance and reordering function shall (in the following SN denotes the sequence number of each PDU):

Setting initial values of state variables:

- If the PDU is the first PDU received by the duplicate avoidance and reordering function:
  - VR(UDH) is assigned the value SN;
  - VR(UDR) is assigned the value VR(UDH) – DAR_Window_Size + 1.

Duplicate detection and re-ordering:

- if SN is within the receive window:
  - if SN < VR(UDR) or if a PDU with sequence number SN is already stored in the buffer:
    - the PDU shall be discarded;
  - else:
    - the PDU shall be stored in the buffer.
- if SN is outside of the receive window:
  - the PDU shall be stored in the buffer;

- VR(UDH) shall be assigned the value SN, thereby advancing the receive window;
- for any stored PDUs with sequence numbers < VR(UDH) – DAR_Window_Size + 1, i.e. outside the receive window after its position is updated, remove the PDU from the buffer and deliver them to the higher RLC function to perform the actions specified in subclause 11.2.3;
- if VR(UDR) < VR(UDH) – DAR_Window_Size + 1, i.e. VR(UDR) is outside the updated receive window;
  - VR(UDR) shall be assigned the value VR(UDH) – DAR_Window_Size + 1.

- if PDU with sequence number VR(UDR) is stored in the buffer:
  - for this PDU and any sequence of stored PDUs with consecutive sequence numbers starting at VR(UDR) + 1, remove the PDUs from the buffer and deliver them to the higher RLC function to perform the actions specified in subclause 11.2.3;
  - VR(UDR) shall be assigned the value of x + 1 where x is the sequence number of the highest numbered PDU that was delivered to the higher RLC function.

Timer operation:

- if Timer_DAR is not active when a PDU is stored by the duplicate avoidance and reordering function:
  - Timer_DAR shall be started;
  - VR(UDT) shall be assigned the value of the sequence number of the PDU.
- Timer_DAR shall be stopped:
  - if the PDU with sequence number VR(UDT) is removed from the buffer before Timer_DAR expires.
- if Timer_DAR expires:
  - for all stored PDUs with sequence numbers lower or equal to VR(UDT) and for any sequence of stored PDUs with consecutive sequence numbers starting at VR(UDT) + 1, remove the PDUs from the buffer and deliver them to the higher RLC function to perform the actions specified in subclause 11.2.3;
  - VR(UDR) shall be assigned the value x + 1 where x is the sequence number of the highest numbered PDU that was delivered to the higher RLC function.
- When Timer_DAR is stopped or expires, and there remain PDUs stored by the duplicate avoidance and reordering function:
  - Timer_DAR shall be started;
  - VR(UDT) shall be assigned the sequence number of the highest numbered stored PDU.

Reference

1) 3GPP TS 25.322 clauses 4.2.1.2.2, and 9.7.10

#### 7.2.4.2.3 Test purpose

To verify the MTCH duplicate avoidance and reordering procedure

#### 7.2.4.2.4 Method of test

Initial condition

System Simulator: 1 MBMS Cell

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Timer_DAR | 5120 milliseconds |
| DAR_Window_Size | 16 |

Related ICS/IXIT statements:

MBMS Broadcast service application available on UE yes/no

Test procedure

In this test procedure each SDU of size 322 octets will be formed of 4 RLC PDUs. The first of the 4 PDUs making up one SDU is of size 80 octets + 1 octet LI indicating the start of a PDU (SN= 0, 4, 8..). Every 4$^{th}$ PDU making up one SDU is of size 80 octets + 1 octet LI indicating the end of the SDU (SN=3, 7, 11..). The 2$^{nd}$ and 3$^{rd}$ PDUs are of size 81 octets.

a) SS indicates on MICH and modifies the MCCH to indicate the start of service 1. The UE begins reception of the MBMS service using the 64.8kbps radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.3.5.

b) The radio bearer is placed into UE test loop mode 3.

c) The SS transmits PDUs with RLC sequence number = 3, 3, 2, 2, 1, 1, 0, 0, 19

d) The SS checks that the loopback mode 3 SDU count = 1. (The purpose of SN=19 is in order that the 4 PDUS with sequence numbers < VR(UDH) – DAR_Window_Size + 1, are delivered to higher RLC function, and these 4 PDUs form 1 SDU)

e) The S S transmits PDUs with the RLC sequence number = 19, 18, 17, 16, 15, 14, 13, 12

f) The SS waits 5s for Timer_DAR to expire. PDUs sent in step c are submitted to the higher RLC function. UE sets V(UDR) = 20.

g) The SS checks that the loopback mode 3 SDU count = 3. (2 more SDUs are received, once Timer_DAR expires and the UE empties the DAR buffer)

h) The SS transmits PDUs with the RLC sequence number = 7, 6, 5, 4, 3, 2, 1, 0

i) The SS checks that the loopback mode 3 SDU count = 3. (the data PDUs with SN of 7, 6, 5, 4 in step h is discarded in the UE, because VR(UDR) shall be assigned the value 20. The data PDUs with SN 3, 2, 1, 0 are stored in the buffer because these are inside the new receive window)

j) The SS transmits PDUs with the RLC sequence number = 27, 26, 25, 24, 23, 22, 21, 20, 19, 18, 17, 16, 15, 14, 13, 12

k) The SS checks that the loopback mode 3 SDU count = 8. (Four more complete SDU’s are formed from RLC PDUswith SN of 12, 13, 14, 15 and 16, 17, 18, 19 and 20, 21, 22, 23 and 24, 25, 26, 27. One more complete SDU is formed and delivered from the data stored in step h with the PDUs with SN 0, 1, 2, 3)

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | MBMS MODIFIED SERVICES INFORMATION | MCCH message combination C4 for 1 modification period, then combination C2.<br><br>The SS waits for the UE to establish the the 64.8kbps radio bearer configuration as specified in TS 34.108 clause 6.10.2.4.3.5. |
| 4 | ← | | CLOSE UE TEST LOOP | UE test loop mode 3 setup |
| 5 | → | | CLOSE UE TEST LOOP COMPLETE | |
| 6 | ← | | 9 * RLC PDUs | SN = 3, 3, 2, 2, 1, 1, 0, 0, 19 |
| 7 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 8 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | SDU count = 1. |
| 9 | ← | | 8 * RLC PDUs | SN = 19, 18, 17, 16, 15, 14, 13, 12 |
| 10 | | | | SS waits 5120 ms for Timer_DAR to expire |
| 11 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 12 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | SDU count = 3. |
| 13 | ← | | 8 * RLC PDUs | SN = 7, 6, 5, 4, 3, 2, 1, 0 |
| 14 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 15 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | SDU count = 3. |
| 16 | ← | | 16 * RLC PDUs | SN = 27, 26, 25, 24, 23, 22, 21, 20, 19, 18, 17, 16, 15, 14, 13, 12 |
| 17 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 18 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | SDU count = 8. |
| 19 | ← | | OPEN UE TEST LOOP | |
| 20 | → | | OPEN UE TEST LOOP COMPLETE | |

Specific message contents

None.

#### 7.2.4.2.5 Test requirements

In step d the UE shall report the loopback mode 3 SDU count as 1.

In steps g and i the UE shall report the loopback mode 3 SDU count as 3.

In step k the UE shall report the loopback mode 3 SDU count as 8.

### 7.2.4.2m MTCH duplicate avoidance and reordering / MBMS Multicast Service

#### 7.2.4.2m.1 Definition

This test is applicable for Rel-6 UEs supporting MBMS multicast services.

#### 7.2.4.2m.2 Conformance requirement

Same conformance requirement as in clause 7.2.4.2.2.

Reference

1) 3GPP TS 25.322 clauses 4.2.1.2.2, and 9.7.10

#### 7.2.4.2m.3 Test purpose

Same test purpose as in clause 7.2.4.2.3.

#### 7.2.4.2m.4 Method of test

Initial condition

System Simulator: 1 MBMS Cell

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Same setting of Timer_DAR and DAR_Window_Size as in clause 7.2.4.2.4.

Related ICS/IXIT statements:

MBMS Multicast service application available on UE yes/no

Test procedure

Same test purpose as in clause 7.2.4.2.4.

Expected Sequence

Same expected sequence as in clause 7.2.4.2.4.

Specific message contents

None.

#### 7.2.4.2m.5 Test requirements

Same test requirements as in clause 7.2.4.2.5.

### 7.2.4.3 MCCH Out Of Sequence Delivery handling / MBMS Broadcast Service

#### 7.2.4.3.1 Definition

This test is applicable for Rel-6 UEs supporting MBMS broadcast services.

#### 7.2.4.3.2 Conformance requirement

To enable the recovery of SDUs from UMD PDUs that are received in different transmissions the receiving function shall store PDUs until all SDUs that are associated with the PDU can be reconstructed or until they are discarded in accordance with the procedures described below. SDUs are transferred to the upper layers as soon as all PDUs that contain the segments of the SDU and the "Length Indicator" indicating the end of the SDU have been received.

Upon delivery of a set of UMD PDUs from the lower layer, the Receiver shall for each PDU (in the following SN denotes the sequence number of each PDU):

- If the PDU is the first PDU received (after the receiving entity is established or re-established or after Timer_OSD expires):
  - VR(UOH) shall be assigned the value SN-1.
- if VR(UOH) $\underline{\geq}$ SN > VR(UOH) – OSD_Window_Size then:
  - if a PDU with sequence number SN is already stored:
    - discard the PDU;
  - else:

- store the PDU in sequence number order.

- else:
  - VR(UOH) shall be assigned the value SN, thereby advancing the storage window;
  - store the PDU in sequence number order;
  - remove from storage any PDUs whose sequence numbers, SN, are outside of the storage window VR(UOH) $\geq$ SN > VR(UOH) – OSD_Window_Size;
  - if Timer_OSD is active then Timer_OSD shall be stopped;
  - Timer_OSD shall be started.
- if a PDU with sequence number SN was stored:
  - if the PDU contains one or more complete SDUs and/or if the PDU contains segments of SDUs for which all the remaining segments and length indicators are contained in stored PDUs:
    - re-assemble the SDUs;
    - submit the SDUs to upper layers through the UM-SAP;
    - remove from storage any PDUs which do not contain any segment of a SDU that has not been re-assembled, and do not contain one of the special length indicators "0000 000", "0000 0000 0000 000" or "1111 1111 1111 011" that indicate the end of a SDU that has not been re-assembled.

NOTE 0: If PDUs are removed from storage after SDU recovery then retransmitted PDUs may result in the duplicate transfer of SDUs to the higher layers.

- if Timer_OSD expires:
  - remove from storage all stored PDUs.

NOTE 1: When configured for out of sequence SDU delivery, the transmitter should consider the possibility that a loss of a number of 128 – OSD_Window_Size consecutively numbered PDUs may result in an undetected protocol error in the receiver, if the transmit state variable VT(US), at the end of a time interval equal to the duration of Timer_OSD, is greater than 128 + SN – OSD_Window_Size + 1, where SN is the lowest sequence number of any PDU transmitted or retransmitted within that time interval.

NOTE 2: The transmitter should not concatenate within a single PDU, SDUs or fractions of SDUs that contain MBMS Access Information messages with SDUs or fractions of SDUs that contain other MCCH message types.

NOTE 3: SDUs are contained within consecutively numbered PDUs. To enable SDUs containing MBMS Access Information messages to be transmitted at their designated times, the transmitter may transmit PDUs out of sequence order.

NOTE 4: The transmitter should not transmit within a single PDU, SDUs or fractions of SDUs that contain MBMS Access Information messages with the special length indicator "0000 000","0000 0000 0000 000", and "1111 1111 1111 011".

Reference

1) 3GPP TS 25.322, clause 11.2.3.2

#### 7.2.4.3.3 Test purpose

To verify MCCH Out Of Sequence Delivery handling.

#### 7.2.4.3.4 Method of test

Initial condition

System Simulator: 1 MBMS Cell.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108, with the following exception: MCCH Default2 scheduling as specified in TS 34.108 clause 11.1

The UE has a valid IMSI.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| OSD_Window_Size | 64 (to contain the entire MBMS CONTROL INFORMATION on MCCH) |

Related ICS/IXIT statements:

MBMS Broadcast service application available on UE yes/no

Test procedure

a) The SS commands UE into RB Test Mode.

b) SS indicates on MICH and modifies the MCCH to indicate the start of service 1. In this step the SS shall send MCCH information as follows:

The RLC is configured at the SS as TM mode. This is in order to be able to replace encoded PDUs and header information with an invalid LI .

On the first repetition period for all critical MCCH messages, only the odd numbered RLC PDU SN are transmitted correctly, an invalid LI is inserted into the RLC header of the even numbered PDUs.

On the second repetition period for all critical MCCH messages, only the even numbered RLC PDU SN are transmitted correctly, an invalid LI is inserted into the RLC header of the odd numbered PDUs.

SS waits for the UE to begin reception of the MBMS service using the 64.8kbps radio bearer configuration specified in TS 34.108, clause 6.10.2.4.3.5.

c) The radio bearer is placed into UE test loop mode 3.

d) The SS transmits 10 * RLC SDUs of size 80 octets. (PDU is 80 octets + 1 octet special LI)

e) The SS checks that the loopback mode 3 SDU count is greater than 0.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | MCCH MESSAGES | For all MCCH messages using message combination C4 for 1 modification period: on the first repetition period, only the odd numbered RLC PDU SN are transmitted correctly. On the second repetition period only the even numbered RLC PDU SN are transmitted correctly. Other PDUs have an invalid LI in the RLC header..Those messages requiring specific contents are shown in steps 4-6, other messages have the default contents. |
| 4 | ← | | MBMS MODIFIED SERVICES INFORMATION | SS indicates to the UE to Acquire PTM RB info. |
| 5 | ← | | MBMS COMMON P-T-M RB INFORMATION | Contains configuration for the 64.8kbps radio bearer configuration as specified in TS 34.108 clause 6.10.2.4.3.5. |
| 6 | ← | | MBMS CURRENT CELL P-T-M RB INFORMATION | Indicates the radio bearer configuration to be used for reception of the service.<br><br>The SS waits for the UE to establish the MTCH, according to the activation time. |
| 7 | ← | | MCCH MESSAGES | SS transmits PDUs using message combination C2. For all MCCH messages using message combination C2 for 1 modification period: on the first repetition period, only the odd numbered RLC PDU SN are transmitted correctly. On the second repetition period only the even numbered RLC PDU SN are transmitted correctly. Other PDUs have an invalid LI in the RLC header. After this modification period, the SS stops sending MCCH messages. |
| 8 | ← | | CLOSE UE TEST LOOP | UE test loop mode 3 setup |
| 9 | → | | CLOSE UE TEST LOOP COMPLETE | |
| 10 | ← | | 10 * RLC SDU | SS sends 10*RLC SDUs on MTCH |
| 11 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 12 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | SDU counter response > 0. |
| 13 | ← | | OPEN UE TEST LOOP | |
| 14 | → | | OPEN UE TEST LOOP COMPLETE | |

Specific message contents

Those PDUs indicated to have an invalid LI in the RLC header, shall encode the LI to be invalid according to TS 25.322 clause 11.2.4.2.

#### 7.2.4.3.5 Test requirements

In step e the UE shall report the loopback mode 3 SDU count to be greater than 0.

### 7.2.4.3m MCCH Out Of Sequence Delivery handling / MBMS Multicast Service

#### 7.2.4.3m.1 Definition

This test is applicable for Rel-6 UEs supporting MBMS multicast services.

#### 7.2.4.3m.2 Conformance requirement

Same conformance requirement as in clause 7.2.4.3.2.

Reference

1) 3GPP TS 25.322, clause 11.2.3.2

#### 7.2.4.3m.3 Test purpose

Same test purpose as in clause 7.2.4.3.3.

#### 7.2.4.3m.4 Method of test

Initial condition

System Simulator: 1 MBMS Cell.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108, with the following exception: MCCH Default2 scheduling as specified in TS 34.108 clause 11.1

The UE has a valid IMSI.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Same setting of OSD_Window_Size as in clause 7.2.4.3.4.

Related ICS/IXIT statements:

MBMS Multicast service application available on UE yes/no

Test procedure

Same test procedure as in clause 7.2.4.3.4.

Specific message contents

Same specific message contents in clause 7.2.4.3.4.

#### 7.2.4.3m.5 Test requirements

Same test requirements as in clause 7.2.4.3.5.

### 7.2.4.3s MCCH Out Of Sequence Delivery handling / MBMS Broadcast Service (3.84/7.68 Mcps TDD MBSFN)

#### 7.2.4.3s.1 Definition

This test is applicable for Rel-7 UEs supporting MBMS broadcast services over MBSFN.

#### 7.2.4.3s.2 Conformance requirement

To enable the recovery of SDUs from UMD PDUs that are received in different transmissions the receiving function shall store PDUs until all SDUs that are associated with the PDU can be reconstructed or until they are discarded in accordance with the procedures described below. SDUs are transferred to the upper layers as soon as all PDUs that contain the segments of the SDU and the "Length Indicator" indicating the end of the SDU have been received.

Upon delivery of a set of UMD PDUs from the lower layer, the Receiver shall for each PDU (in the following SN denotes the sequence number of each PDU):

- If the PDU is the first PDU received (after the receiving entity is established or re-established or after Timer_OSD expires):
  - VR(UOH) shall be assigned the value SN-1.
- if VR(UOH) $\underline{\geq}$ SN > VR(UOH) – OSD_Window_Size then:
  - if a PDU with sequence number SN is already stored:

- discard the PDU;

- else:

- store the PDU in sequence number order.

- else:

- VR(UOH) shall be assigned the value SN, thereby advancing the storage window;

- store the PDU in sequence number order;

- remove from storage any PDUs whose sequence numbers, SN, are outside of the storage window VR(UOH) $\geq$ SN > VR(UOH) – OSD_Window_Size;

- if Timer_OSD is active then Timer_OSD shall be stopped;

- Timer_OSD shall be started.

- if a PDU with sequence number SN was stored:

- if the PDU contains one or more complete SDUs and/or if the PDU contains segments of SDUs for which all the remaining segments and length indicators are contained in stored PDUs:

- re-assemble the SDUs;

- submit the SDUs to upper layers through the UM-SAP;

- remove from storage any PDUs which do not contain any segment of a SDU that has not been re-assembled, and do not contain one of the special length indicators "0000 000", "0000 0000 0000 000" or "1111 1111 1111 011" that indicate the end of a SDU that has not been re-assembled.

NOTE 0: If PDUs are removed from storage after SDU recovery then retransmitted PDUs may result in the duplicate transfer of SDUs to the higher layers.

- if Timer_OSD expires:

- remove from storage all stored PDUs.

NOTE 1: When configured for out of sequence SDU delivery, the transmitter should consider the possibility that a loss of a number of 128 – OSD_Window_Size consecutively numbered PDUs may result in an undetected protocol error in the receiver, if the transmit state variable VT(US), at the end of a time interval equal to the duration of Timer_OSD, is greater than 128 + SN – OSD_Window_Size + 1, where SN is the lowest sequence number of any PDU transmitted or retransmitted within that time interval.

NOTE 2: The transmitter should not concatenate within a single PDU, SDUs or fractions of SDUs that contain MBMS Access Information messages with SDUs or fractions of SDUs that contain other MCCH message types.

NOTE 3: SDUs are contained within consecutively numbered PDUs. To enable SDUs containing MBMS Access Information messages to be transmitted at their designated times, the transmitter may transmit PDUs out of sequence order.

NOTE 4: The transmitter should not transmit within a single PDU, SDUs or fractions of SDUs that contain MBMS Access Information messages with the special length indicator "0000 000","0000 0000 0000 000", and "1111 1111 1111 011".

Reference

1) 3GPP TS 25.322, clause 11.2.3.2

### 7.2.4.3s.3 Test purpose

To verify MCCH Out Of Sequence Delivery handling.

7.2.4.3s.4 Method of test

Initial condition

System Simulator:

Unicast carrier: 1 cell, Cell 1 with default configuration.

- MBSFN carriers: 1 cell, Cell 31 has default parameters. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default2 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.

  The configuration of the S-CCPCH which will carry the MTCH is based upon that specified in TS 34.108 clause 6.11.1c (3.84 Mcps TDD) and 6.11.1d (7.68 Mcps TDD) 8kbps RB for MBSFN MTCH.

  The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| OSD_Window_Size | 64 (to contain the entire MBMS CONTROL INFORMATION on MCCH) |

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.
- The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected (i.e. it is included in MBMS_ACTIVATED_SERVICES variable) a national service for which there will be a session starting on MBSFN Cell 31 (see TS 34.108 clause 11.2.4).

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

a) The UE is camping on Cell 1 and Cell 31. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 (no session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

c) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on Cell 31 MTCH (Transmission identity indicating the MBMS activated service).

d) SS indicates on MICH and modifies the MCCH to indicate the start of the national service. In this step the SS shall send MCCH information as follows:

   The RLC is configured at the SS as TM mode. This is in order to be able to replace encoded PDUs and header information with an invalid LI .

   On the first repetition period for all critical MCCH messages, only the odd numbered RLC PDU SN are transmitted correctly, an invalid LI is inserted into the RLC header of the even numbered PDUs.

   On the second repetition period for all critical MCCH messages, only the even numbered RLC PDU SN are transmitted correctly, an invalid LI is inserted into the RLC header of the odd numbered PDUs.

e) SS waits for the UE to begin reception of the MBMS service using the 8kbps radio bearer configuration specified in TS 34.108, clause 6.11.1c (3.84 Mcps TDD) or 6.11.1d (7.68 Mcps TDD). The UE closes the test loop. The UE sends CLOSE UE TEST LOOP COMPLETE.

f) The SS transmits 10 * RLC SDUs of size 40 octets. (PDU is 40 octets + 1 octet special LI)

g) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The SS waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated on Cell 31 for the selected national service on MTCH. |
| 4 | ← | | M | MBMS MCCH Message Configuration C4 | For all MCCH messages using message combination C4 for 1 modification period: on the first repetition period, only the odd numbered RLC PDU SN are transmitted correctly. On the second repetition period only the even numbered RLC PDU SN are transmitted correctly. Other PDUs have an invalid LI in the RLC header.Those messages requiring specific contents are shown in steps 6-8, other messages have the default contents. |
| 5 | ← | | M | MBMS MODIFIED SERVICES INFORMATION | Includes the national service activated at UE in the modified services list for one modification period. SS indicates to the UE to Acquire PTM RB info. |
| 6 | ← | | M | MBMS COMMON P-T-M RB INFORMATION | Contains configuration for the 8kbps radio bearer configuration |
| 7 | ← | | M | MBMS CURRENT CELL P-T-M RB INFORMATION | Indicates the radio bearer configuration to be used for reception of the service. |
| 8 | ← | | M | MBMS MCCH Message Configuration C2 | SS transmits PDUs using message combination C2. For all MCCH messages using message combination C2 for 1 modification period: on the first repetition period, only the odd numbered RLC PDU SN are transmitted correctly. On the second repetition period only the even numbered RLC PDU SN are transmitted correctly. Other PDUs have an invalid LI in the RLC header. After this modification period, the SS stops sending MCCH messages. |
| 9 | ← | | M | MBMS COMMON P-T-M RB INFORMATION | Contains configuration for the 8kbps radio bearer configuration |
| 10 | ← | | M | MBMS CURRENT CELL P-T-M RB INFORMATION | Indicates the radio bearer configuration to be used for reception of the service. |
| 11 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE establishes the MTCH according to the activation time and closes the test loop. |
| 12 | ← | | M | 10 * RLC SDU | SS sends 10*RLC SDUs on MTCH |
| 13 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 14 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 15 | ← | | U | OPEN UE TEST LOOP | |
| 16 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 17 | ← | | U | DEACTIVATE RB TEST MODE | |
| 18 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

Those PDUs indicated to have an invalid LI in the RLC header, shall encode the LI to be invalid according to TS 25.322 clause 11.2.4.2.

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

MBMS COMMON P-T-M RB INFORMATION (Step 6 and Step 9) (3.84 Mcps)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| RB information list | 1 entry in the list | Rel-6 |
| - RB identity | | |
| - MBMS Common RB identity | 14 | |
| - PDCP info | | |
| - Support for lossless SRNS relocation | Not Present | |
| - Max PDCP SN window size | Not Present | |
| - PDCP PDU header | absent | |
| - Header compression information | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RLC info | | |
| - DL UM RLC LI size | 7 | |
| - DL Duplication Avoidance and Reordering info | Not Present | |
| - DL Out of sequence delivery info | Not Present | |
| TrCh information for each TrCh | 1 entry in the list | Rel-6 |
| - Transport channel identity | | |
| - MBMS Common TrCh identity | 1 | |
| - TFS | | |
| - CHOICE *Transport channel type* | Common transport channels | |
| - Dynamic Transport Format Information | | |
| - RLC Size | Reference to clause 6.11.1c | |
| - Number of TBs and TTI List | (This IE is repeated for each TFI) | |
| - Number of Transport blocks | Reference to clause 6.11.1c | |
| - CHOICE *mode* | TDD | |
| - Transmission Time Interval | Not Present | |
| - CHOICE *Logical Channel List* | ALL | |
| - no data | | |
| - Semi-static Transport Format information | | |
| - Transmission time interval | Reference to clause 6.11.1c | |
| - Type of channel coding | Turbo | |
| - Coding Rate | Not Present | |
| - Rate matching attribute | Reference to clause 6.11.1c | |
| - CRC size | Reference to clause 6.11.1c | |
| TrCh information for each CCTrCh | Not Present<br>(Default TFCS applies for each CCTrCh) | Rel-6 |
| PhyCh information | 1 entry in list | Rel-6 |
| - PhyCh identity | | |
| - MBMS Common PhyCh identity | 23 | |
| - Secondary CCPCH info MBMS | | |
| - CHOICE *mode* | 1.28/3.84 Mcps TDD | |
| - Common timeslot info MBMS | | |
| - 2nd interleaving mode | Frame | |
| - TFCI coding | Reference to clause 6.11.1c | |
| - Puncturing limit | Reference to clause 6.11.1c | |
| - Downlink Timeslots and Codes | | |
| - First individual timeslot info | | |
| - Timeslot number | | |
| - CHOICE *TDD option* | 3.84 Mcps | |
| - Timeslot number | 1 | |
| - TFCI existence | TRUE | |
| - Midamble Shift and burst type | | |
| - CHOICE *TDD option* | 3.84 Mcps TDD | |
| - CHOICE Burst Type | MBSFN Burst Type | Rel-7 |
| - no data | | Rel-7 |
| - CHOICE *TDD option* | 3.84Mcps TDD | |
| - no data | | |
| - First timeslot channelisation codes | | |
| - CHOICE *codes representation* | Consecutive codes | |
| - First channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - Last channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - CHOICE *more timeslots* | No more timeslots | |
| - no data | | |
| - Modulation | Reference to clause 6.11.1c | Rel-7 |

MBMS COMMON P-T-M RB INFORMATION (Step 6 and Step 9) (7.68 Mcps)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-7 |
| RB information list | 1 entry in the list | Rel-7 |
| - RB identity | | |
| - MBMS Common RB identity | 14 | |
| - PDCP info | | |
| - Support for lossless SRNS relocation | Not Present | |
| - Max PDCP SN window size | Not Present | |
| - PDCP PDU header | absent | |
| - Header compression information | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RLC info | | |
| - DL UM RLC LI size | 7 | |
| - DL Duplication Avoidance and Reordering info | Not Present | |
| - DL Out of sequence delivery info | Not Present | |
| TrCh information for each TrCh | 1 entry in the list | Rel-7 |
| - Transport channel identity | | |
| - MBMS Common TrCh identity | 1 | |
| - TFS | | |
| - CHOICE *Transport channel type* | Common transport channels | |
| - Dynamic Transport Format Information | | |
| - RLC Size | Reference to clause 6.11.1d | |
| - Number of TBs and TTI List | (This IE is repeated for each TFI) | |
| - Number of Transport blocks | Reference to clause 6.11.1d | |
| - CHOICE *mode* | TDD | |
| - Transmission Time Interval | Not Present | |
| - CHOICE *Logical Channel List* | ALL | |
| - no data | | |
| - Semi-static Transport Format information | | |
| - Transmission time interval | Reference to clause 6.11.1d | |
| - Type of channel coding | Turbo | |
| - Coding Rate | Not Present | |
| - Rate matching attribute | Reference to clause 6.11.1d | |
| - CRC size | Reference to clause 6.11.1d | |
| TrCh information for each CCTrCh | Not Present<br>(Default TFCS applies for each CCTrCh) | Rel-7 |
| PhyCh information | 1 entry in list | Rel-7 |
| - PhyCh identity | | |
| - MBMS Common PhyCh identity | 23 | |
| - Secondary CCPCH info MBMS | | |
| - CHOICE *mode* | 7.68 Mcps TDD | |
| - Common timeslot info MBMS | | |
| - 2nd interleaving mode | Frame | |
| - TFCI coding | Reference to clause 6.11.1d | |
| - Puncturing limit | Reference to clause 6.11.1d | |
| - Downlink Timeslots and Codes VHCR | | |
| - First Individual timeslot info | | |
| - Timeslot number | | |
| - CHOICE *TDD option* | 7.68 Mcps option | |
| Timeslot number | 1 | |
| - TFCI existence | TRUE | |
| - Midamble Shift and burst type | | |
| - CHOICE *TDD option* | 7.68 Mcps TDD | |
| - CHOICE *Burst Type* | MBSFN Burst Type | |
| - no data | Default | |
| - CHOICE *TDD option* | 7.68Mcps TDD | |
| - no data | | |
| - First timeslot channelisation codes VHCR | | |
| - CHOICE *codes representation* | Consecutive codes | |
| - First channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - Last channelisation code | Reference clause 5.5.2 "Downlink physical channels code allocation for signalling" | |
| - CHOICE more timeslots | No more timeslots | |
| - no data | | |
| - Modulation | Reference to clause 6.11.1d | |

MBMS CURRENT CELL P-T-M RB INFORMATION (Step 7 and Step 10)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| S-CCPCH list | Contains 1 S-CCPCH | Rel-6 |
| - S-CCPCH identity | Not Present | |
| - Secondary CCPCH info | 23 | |
| - MBMS Soft Combining Timing Offset | Not Present | |
| - TrCh information common for all TrCh | Not Present (MD) | |
| - TrCH information list | | |
| - TrCh information | 1 | |
| - RB information list | | |
| - RB information | | |
| - RB information | 14 | |
| - MBMS short transmission ID | Reference to the service which is being provided on this RB. | |
| - MBMS logical channel identity | 1 | |
| - L1 combining status | Not Present | |
| - MSCH configuration information | Not Present | |
| S-CCPCH in SIB type 5 | Not Present | Rel-6 |
| MBSFN TDM Info List | Not Present | Rel-7 |

7.2.4.3s.5 Test requirements

1) At step 14, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a count > 0 for Cell 31 MTCH.

# 7.3 PDCP

## 7.3.1 General

### 7.3.1.1 General assumptions

If not otherwise mentioned, the same procedures as used in RRC test specification (TS 34.123-1) or in the Generic procedure (TS 34.108) applies to reach Initial conditions for PDCP testing. In this test description, common test sequences for PDCP (clause 7.3.1.2) are defined and are applied either as preamble or post amble to establish or release a Packet Switched (PS) connection for a test case.

If not explicitly described, the same message contents and settings are applied as described in the RRC test description default settings.

Detailed IP header compression coding mechanism as well as mechanism related error recovery and packet reordering described in IETF RFC 2507 are not verified.

For PDCP testing TCP/IP data type and UDP/IP data type as Non-TCP/IP data types are applied for IP data.

The IP data packet size shall be limited to 1500 bytes as defined in 3GPP TS 23.107, clause 6.5.1and 6.5.2 (range of QoS attributes).

An UE supporting IP Header compression protocol RFC 2507 shall be capable to store a header compression context of at least 512 bytes (Integer).

It shall be possible to reconfigure PDCP settings while UE test loop mode 1. With the applied test method using UE test loop mode 1, the UE as Originator and Receiver of PDCP SDUs (concurrent transmission) is tested.

### 7.3.1.2 Common Test sequences and Default message contents for PDCP

General

The settings and parameter used in the "Common Test sequences for PDCP" are described in the "Default PDCP Message Contents". If not explicitly shown there, the message contents are identical with the default contents for the same message type of layer 3 messages for RRC tests, to establish a packet switched session or connection. The contents of test case specific message parameters are described in the test case (Expected Sequence). If not explicitly shown, default settings and parameter are used as message content for all Common Test sequences.

#### 7.3.1.2.1 Common Test sequences for PDCP

##### 7.3.1.2.1.1 Setup a UE terminated PS session using IP Header compression in AM RLC (using UE Test loop test mode 1)

Initial Conditions

UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108.

Test procedure

After having received the System Information, the SS starts to setup a RRC connection. After connection establishment and Radio Bearer Setup, the UE test loop mode 1 is activated and the UE test loop mode 1 is closed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | SYSTEM INFORMATION | |
| 2 | | ← | PAGING TYPE 1 | CN domain identity: PS domain<br>Paging cause: interactive session |
| 3 | | → | RRC CONNECTION REQUEST | |
| 4 | | ← | RRC CONNECTION SETUP | Connection Setup message PS sessions in AM RLC used in RRC testing matches here |
| 5 | | → | RRC CONNECTION SETUP COMPLETE | |
| 5a | | ← | AUTHENTICATION AND CIPHERING REQUEST | As defined in TS 34.108, clause 7.4.2.6a |
| 5b | | → | AUTHENTICATION AND CIPHERING RESPONSE | As defined in TS 34.108, clause 7.4.2.6a |
| 5c | | ← | SECURITY MODE COMMAND | As defined in TS 34.108, clause 7.4.2.6a |
| 5d | | → | SECURITY MODE COMPLETE | As defined in TS 34.108, clause 7.4.2.6a |
| 6 | | ← | ACTIVATE RB TEST MODE | |
| 7 | | → | ACTIVATE RB TEST MODE COMPLETE | |
| 8 | | ← | RADIO BEARER SETUP | The Radio Bearer configuration is as described in TS 34.108, clause 6.10, Prioritised RAB No. 23: QoS parameter: Traffic Class: Interactive or Background, max. UL:64 kbps max. DL:64 kbps, Residual BER as described in TS 34.108, clause: 6.10. |
| 9 | | → | RADIO BEARER SETUP COMPLETE | |
| 10 | | ← | CLOSE UE TEST LOOP | The SS initiates UE test loop mode 1, indicated by the Parameter: "UE test loop mode" 1 (X1=0 and X2=0)<br>The "DCCH dummy transmission" not used: disabled: (Y1=0) |
| 11 | | → | CLOSE UE TEST LOOP COMPLETE | After having received the test mode acknowledgement, the UE test loop mode 1 is activated. |

Specific message contents

The contents of test case specific message parameters are described in the test case (Expected Sequence). Default contents of messages are described in the clause Default PDCP Message Contents.

##### 7.3.1.2.1.2 Setup a UE terminated PS session using IP Header compression in UM RLC (using UE Test loop test mode 1)

Initial Conditions

UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108.

Test procedure

After having received the System Information, the SS starts to setup a RRC connection. After connection establishment and Radio Bearer Setup, the UE test loop mode 1 is activated and the UE test loop mode 1 is closed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SYSTEM INFORMATION | |
| 2 | ← | | PAGING TYPE 1 | CN domain identity: PS domain<br>Paging cause: interactive session |
| 3 | → | | RRC CONNECTION REQUEST | |
| 4 | ← | | RRC CONNECTION SETUP | Connection Setup message PS sessions in UM RLC used in RRC testing matches here |
| 5 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5a | ← | | AUTHENTICATION AND CIPHERING REQUEST | As defined in TS 34.108, clause 7.4.2.6a |
| 5b | → | | AUTHENTICATION AND CIPHERING RESPONSE | As defined in TS 34.108, clause 7.4.2.6a |
| 5c | ← | | SECURITY MODE COMMAND | As defined in TS 34.108, clause 7.4.2.6a |
| 5d | → | | SECURITY MODE COMPLETE | As defined in TS 34.108, clause 7.4.2.6a |
| 6 | ← | | ACTIVATE RB TEST MODE | |
| 7 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 8 | ← | | RADIO BEARER SETUP | The Radio Bearer configuration is as described in TS 34.108, clause 6.10, Prioritised RAB No. 23: QoS parameter: Traffic Class: Interactive or Background, max. UL:64 kbps max. DL:64 kbps, Residual BER as described in TS 34.108, clause: 6.10. |
| 9 | → | | RADIO BEARER SETUP COMPLETE | |
| 10 | ← | | CLOSE UE TEST LOOP | The SS initiates UE test loop mode 1, indicated by the Parameter: "UE test loop mode"1 (X1=0 and X2=0)<br>The "DCCH dummy transmission" not used: disabled: (Y1=0) |
| 11 | → | | CLOSE UE TEST LOOP COMPLETE | After having received the test mode acknowledgement, the UE test loop mode 1 is activated. |

Specific message contents

The contents of test case specific message parameters are described in the test case (Expected Sequence) Default contents of messages are described in the clause Default PDCP Message Contents.

### 7.3.1.2.1.3 Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1)

Initial Conditions

UE is in connected mode, a UE test loop mode 1 for PDCP is activated, and the UE loop mode 1 is "closed".

Test procedure

The UE opens the UE test loop mode 1, deactivates the test mode and the PS session, releases the Radio Bearer and enters Idle mode.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | OPEN UE TEST LOOP | The SS terminates the UE test loop mode 1, (see described parameter) |
| 2 | → | | OPEN UE TEST LOOP COMPLETE | After having received the test mode acknowledgement, the test loop mode 1 is deactivated. |
| 3 | ← | | DEACTIVATE RB TEST MODE | SS deactivates the RB test mode |
| 4 | → | | DEACTIVATE RB TEST MODE COMPLETE | UE shall confirm the previous message. Afterwards, the UE returns to normal operation |
| 5 | ← | | RRC CONNECTION RELEASE | SS terminates the connection |
| 6 | → | | RRC CONNECTION RELEASE COMPLETE | UE confirms the connection release and returns to Idle mode |

Specific message contents

The contents of test case specific message parameter is described in the test case (Expected Sequence). Default contents of messages are described in the clause Default PDCP Message Contents.

7.3.1.2.1.4 (Activate closed loop mode1 in CELL_DCH and CELL_FACH states

Initial Conditions

UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108.

Test procedure

After having received the System Information, the SS starts to setup a RRC connection. After connection establishment and Radio Bearer Setup, the UE test loop mode 1 is activated and the UE test loop mode 1 is closed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 2a | ← | | RADIO BEARER SETUP | RRC RAB SETUP |
| 2b | → | | RADIO BEARER SETUP COMPLETE | RRC |
| 3 | ← | | CLOSE UE TEST LOOP | The SS initiates UE test loop mode 1, indicated by the Parameter: "UE test loop mode" 1 (X1=0 and X2=0)<br>The "DCCH dummy transmission" not used: disabled: (Y1=0) |
| 4 | → | | CLOSE UE TEST LOOP COMPLETE | After having received the test mode acknowledgement, the UE test loop mode 1 is activated. |

7.3.1.2.1.4.1 Specific message contents

For step 2a, the messages in clause 9 of TS 34.108 are used. To execute the procedure for the CELL_DCH case, use the message titled "Packet to CELL_DCH from CELL_DCH in PS". To execute the procedure for the CELL_FACH case, use the message titled "Packet to CELL_FACH from CELL_FACH in PS".

Specific message contents

The contents of test case specific message parameters are described in the test case (Expected Sequence). Default contents of messages are described in the clause Default PDCP Message Contents.

7.3.1.2.1.5 Setup a UE terminated CS session in UM RLC (using UE Test loop test mode 1)

Initial Conditions

UE is in Idle mode (state 2 or state 7) as specified in clause 7.4 of TS 34.108.

Test procedure

After having received the System Information, the SS starts to setup a RRC connection. After connection establishment and Radio Bearer Setup, the UE test loop mode 1 is activated and the UE test loop mode 1 is closed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | SYSTEM INFORMATION | |
| 2 | | ← | PAGING TYPE 1 | CN domain identity: CS domain<br>Paging cause: Terminating Conversational Call |
| 3 | | → | RRC CONNECTION REQUEST | |
| 4 | | ← | RRC CONNECTION SETUP | Connection Setup message CS sessions in UM RLC used in RRC testing matches here |
| 5 | | → | RRC CONNECTION SETUP COMPLETE | |
| 5a | | ← | AUTHENTICATION AND CIPHERING REQUEST | As defined in TS 34.108, clause 7.4.2.6a |
| 5b | | → | AUTHENTICATION AND CIPHERING RESPONSE | As defined in TS 34.108, clause 7.4.2.6a |
| 5c | | ← | SECURITY MODE COMMAND | As defined in TS 34.108, clause 7.4.2.6a |
| 5d | | → | SECURITY MODE COMPLETE | As defined in TS 34.108, clause 7.4.2.6a |
| 6 | | ← | ACTIVATE RB TEST MODE | |
| 7 | | → | ACTIVATE RB TEST MODE COMPLETE | |
| 8 | | ← | RADIO BEARER SETUP | The Radio Bearer configuration is as described in TS 34.108, clause 6.10.2.2, combination No. 9: Conversational / speech / UL:(12.2, 7.95, 5.9, 4.75) kbps DL: (12.2, 7.95, 5.9, 4.75) kbps / CS RAB on E-DCH and HS-DSCH + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH |
| 9 | | → | RADIO BEARER SETUP COMPLETE | |
| 10 | | ← | CLOSE UE TEST LOOP | The SS initiates UE test loop mode 1, indicated by the Parameter: "UE test loop mode"1 (X1=0 and X2=0)<br>The "DCCH dummy transmission" not used: disabled: (Y1=0) |
| 11 | | → | CLOSE UE TEST LOOP COMPLETE | After having received the test mode acknowledgement, the UE test loop mode 1 is activated. |

Specific message contents

Default contents of messages are described in the clause Default PDCP Message Contents, except for the contents of the RADIO BEARER SETUP which are as described in TS 34.108, clause 9.1.1 with condition A23.

The contents of test case specific message parameters are described in the test case (Expected Sequence).

### 7.3.1.2.2 Default PDCP Message Contents

This clause contains the default values of RRC messages used for PDCP testing, other than those specified in TS 34.108 clauses 6 and 9, and default values of PDCP messages. Unless indicated otherwise in specific test cases, only PDCP related specific message contents are described here which shall be transmitted by the system simulator in RRC messages, and which are required to be received from the UE under test. If not explicitly described, the message contents are identical with the default contents for the same message type of layer 3 messages for RRC tests, to establish a packet switched session or connection.

The necessary L3 messages are listed in alphabetic order, with the exception of the SYSTEM INFORMATION messages, where it is the information elements which are listed in alphabetic order (this is because some information elements occur in several SYSTEM INFORMATION types).

In this clause, decimal values are normally used. However, sometimes a hexadecimal value, indicated by an "H", or a binary value, indicated by a "B" is used.

Default SYSTEM INFORMATION:

NOTE: SYSTEM INFORMATION BLOCK TYPE 1 (except for PLMN type "GSM-MAP"), SYSTEM INFORMATION BLOCK TYPE 8, SYSTEM INFORMATION BLOCK TYPE 9, SYSTEM INFORMATION BLOCK TYPE 10, SYSTEM INFORMATION BLOCK TYPE 14, SYSTEM INFORMATION BLOCK TYPE 15 and INFORMATION BLOCK TYPE 16 messages are not used.

Contents of CONNECTION SETUP message:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement<br>- System specific capability update requirement list | <br>TRUE<br>UE only supports 1 system |

Contents of CONNECTION SETUP COMPLETE message:

| Information Element | Value/remark |
|---|---|
| UE radio access capability<br><br><br>- Conformance test compliance<br>- PDCP Capability<br>- Max PDCP SN<br>- Support of lossless SRNS relocation<br>- Support for RFC2507<br>- Max HC context space<br>- Support for CS Voice over HSPA<br><br>- RLC Capability<br>- Transport channel capability<br>- RF Capability<br>- Physical channel capability<br>- UE multi-mode/multi-RAT capability<br>- Security Capability<br>- LCS Capability<br>- Measurement capability | Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings<br><br><br><br><br><br><br>(TCP_SPACE + NON_TCP_SPACE))<br>Shall be present for Rel-8 and later UEs. May be present for Rel-7 UEs |
| UE system specific capability | Value will be checked. UE must include the classmark information for the supported system |

Contents of RB RECONFIGURATION COMPLETE message:

| Information Element | Value/remark |
|---|---|
| - Downlink counter syncronisation info<br>- RB with PDCP information list<br>- RB with information | Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

Contents of ACTIVATE RB TEST MODE message:

| Information Element | Value/remark |
|---|---|
| Protocol Discriminator<br>Skip indicator<br>Message type | TS 24.007, 11.2.3.1.1<br>TS 24.007, 11.2.3.1.2<br>01000100B |

Contents of ACTIVATE RB TEST MODE COMPLETE message:

| Information Element | Value/remark |
|---|---|
| Protocol Discriminator<br>Skip indicator<br>Message type | TS 24.007, 11.2.3.1.1<br>TS 24.007, 11.2.3.1.2<br>01000101B |

Contents of DEACTIVATE RB TEST MODE message:

| Information Element | Value/remark |
|---|---|
| Protocol Discriminator | TS 24.007, 11.2.3.1.1 |
| Skip indicator | TS 24.007, 11.2.3.1.2 |
| Message type | 01000110B |

Contents of DEACTIVATE RB TEST MODE COMPLETE message:

| Information Element | Value/remark |
|---|---|
| Protocol Discriminator | TS 24.007, 11.2.3.1.1 |
| Skip indicator | TS 24.007, 11.2.3.1.2 |
| Message type | 01000111B |

Contents of CLOSE UE TEST LOOP message:

| Information Element | Value/remark |
|---|---|
| Protocol Discriminator | TS 24.007, 11.2.3.1.1 |
| Skip indicator | TS 24.007, 11.2.3.1.2 |
| Message type | 01000000B |
| UE test loop mode | 000000100B (X2=0 and X1=0 for UE test mode 1, Y1=0 DCCH dummy transmission disabled) |
| UE test loop mode 1 LB setup | |
| - Length of UE loop mode 1 LB setup IE | 4 octets |
| - LB setup list | |
| - LB setup RAB subflow #1 | |
| - Z13…Z0 (Uplink RLC SDU size in bits) | 0…16383 (binary coded, Z13 most significant bit); value as negotiated |

Contents of CLOSE UE TEST LOOP COMPLETE message:

| Information Element | Value/remark |
|---|---|
| Protocol Discriminator | TS 24.007, 11.2.3.1.1 |
| Skip indicator | TS 24.007, 11.2.3.1.2 |
| Message type | 01000001B |

Contents of OPEN UE TEST LOOP message:

| Information Element | Value/remark |
|---|---|
| IE Identifier (only in AM) | 1000xxxx |
| Protocol Discriminator | TS 24.007, 11.2.3.1.1 |
| Skip indicator | TS 24.007, 11.2.3.1.2 |
| Message type | 01000010B |

Contents of OPEN UE TEST LOOP COMPLETE message:

| Information Element | Value/remark |
|---|---|
| Protocol Discriminator | TS 24.007, 11.2.3.1.1 |
| Skip indicator | TS 24.007, 11.2.3.1.2 |
| Message type | 01000011B |

## 7.3.2 IP Header Compression and PID assignment

### 7.3.2.1 UE in RLC AM

#### 7.3.2.1.1 Transmission of uncompressed Header

##### 7.3.2.1.1.1 Definition and applicability

Applicable for all UEs supporting RLC AM and a Radio Bearer as described in the Common Test Sequences. The UE shall be capable to deal with TCP/IP and UDP/IP data packets with uncompressed IP header.

#### 7.3.2.1.1.2 Conformance requirement

1. The Packet Data Convergence Protocol shall perform the following functions:

   - transfer of user data. This function is used for conveyance of data between users of PDCP services.

2. Depending on the configuration by upper layers (i.e. PDCP PDU type to be used and header compressor protocol), the PDCP sublayer shall be able to:

   - identify the correct header compression protocol; and
   - distinguish different types of header compression packets within a header compression protocol.

The mapping of the PID values shall follow the general rules listed below:

   - PID value "0" shall indicate "no compression". PID value "0" shall be used in a PDCP PDU containing in its Data field a PDCP SDU that is unchanged by the Sender and that shall not be decompressed by the Receiver;

Reference(s)

TS 25.323 clause 5.

TS 25.323 clause 5.1.1.

#### 7.3.2.1.1.3 Test purpose

The test case consists of two test procedures:

The first test procedure verifies, that the "PDCP Data" PDU is used for uncompressed IP header packets, if no IP header compression is configured by higher layers. The second test procedure verifies, that the "PDCP No header" PDU is used for uncompressed IP header packets, if no IP header compression is configured by higher layers.

1. To verify, that the UE transmits and receives in acknowledged mode (RLC AM) TCP/IP and UDP/IP data packets without IP header compression as configured by higher layers.
2. To verify, that PID assignment rules are correctly applied, if usage of "PDCP Data" PDU are negotiated, i.e. the UE shall recognize PID value = 0 for a received TCP/IP and UDP/IP data packet and it shall use PID=0 to transmit IP data packets, if no IP header compression is negotiated. If usage of "PDCP No Header" PDU is negotiated, no PID assignment is used for transmitting and receiving TCP/IP and UDP/IP data packets.

#### 7.3.2.1.1.4 Method of test

Initial conditions

UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108.

Test procedure 1: Usage of "PDCP Data" PDU and no IP header compression is configured.

Test procedure 2: No IP header compression is configured.

Related ICS/IXIT Statement(s)

Support of PS – Yes/No

PIXIT: Test_PDCP_TCP/IP_Packet1

PIXIT: Test_PDCP_UDP/IP_Packet1

Proc 1 Test procedure 1: Transmission of uncompressed IP header packets using PDCP Data PDU

a) The SS setups a packet switched session including radio bearer and UE test loop mode 1 in RLC AM using Common test procedures for mobile terminated PS switched sessions. Usage of "PDCP Data" PDU has been configured by higher layers.

b) The SS sends a TCP/IP data packet with uncompressed IP Header.

c) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PDCP PDU type and shall handle the received data packet with the appropriate decoding method. Then it forwards the data to its

Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration using PDCP Data PDU.

d) The SS receives and decodes the TCP/IP data packet. The decoded data packet shall be identical with the data as sent before.

e) Step b) to d) shall be repeated by using a UDP/IP data packet with uncompressed IP Header.

The SS deactivates the UE test loop mode and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in AM RLC (using UE test loop mode 1) | | | | |
| 1 | ← | | PDCP Data | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU).<br><br>The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression)<br>Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |

| Step | Direction UE \| SS | Message | Comments |
|---|---|---|---|
| 2 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 3 | ← | PDCP Data | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU).<br><br>The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described UDP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes with PID value = 0, there was no IP header compression applied for the UDP/IP packet.<br>Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back<br>(RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 4 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received UDP/IP packet<br><br>After reception of this UDP/IP data packet, the SS decodes the received data |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for AM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for AM) which fits to the below described parameters with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- RAB info<br>- RAB identity | <br><br>No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for AM RLC<br><br>Residual BER as described in TS 34.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup<br>- RB identity | <br>20 |
| - PDCP info<br>- Support of lossless SRNS relocation | <br>False<br>(IE "Support of lossless SRNS relocation" only present, if RLC "In-sequence delivery" is TRUE and in AM) |
| - PDCP PDU header | present |
| - RLC info<br>- Downlink RLC mode | <br>(AM RLC) |
| - Uplink RLC mode | (AM RLC) |

Content of PDCP Data PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| PDU type | 000 |
| PID | 00000 (No header compression, PID = 0) |
| Data | PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 3)

| Information Element | Value/remark |
|---|---|
| PDU type | 000 |
| PID | 00000 (No header compression, PID = 0) |
| Data | PDCP test data type #2: UDP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Proc 2: Test procedure 2: Transmission of uncompressed IP header packets using No Header PDU

a) The SS setups a packet switched session including radio bearer and UE test loop mode 1 in RLC AM using Common test procedures for mobile terminated PS switched sessions. Usage of "PDCP No Header" PDU has been configured by higher layers.

b) The SS sends a TCP/IP data packet with uncompressed IP Header.

c) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PDCP PDU type and shall handle the received data packet with the appropriate decoding method. Then it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration using PDCP No Header PDU.

d) The SS receives and decodes the TCP/IP data packet. The decoded data packet shall be identical with the data as sent before.

e) Step b) to d) shall be repeated by using a UDP/IP data packet with uncompressed IP Header.

f) The SS deactivates the UE test loop mode and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in AM RLC (using UE test loop mode 1) | | | | |
| 1 | ← | | PDCP No Header | The SS creates a TCP/IP packet without IP header compression (PDCP No Header PDU).<br><br>The SS sends a PDCP No Header PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>data: below described TCP/IP packet<br><br>After having received the PDCP No Header PDU, the UE decodes the PDU and recognizes, there was no PID applied for the TCP/IP packet. Therefore, no IP header decompression shall be applied for this packet. Then, the data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP No Header | The UE sends a PDCP No Header PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| | | | | The SS creates a UDP/IP packet without IP header compression (PDCP No Header PDU). |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 3 | | ← | PDCP No Header | The SS sends a PDCP No Header PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>data: below described UDP/IP packet<br><br>After having received the PDCP No Header PDU, the UE decodes the PDU and recognizes, there was no PID applied for the UDP/IP packet. Therefore, no IP header decompression shall be applied for this packet. Then, the data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 4 | → | | PDCP No Header | The UE sends a PDCP No Header PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received UDP/IP packet<br><br>After reception of this UDP/IP data packet, the SS decodes the received data |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1). | | | | |

Specific Message Contents

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for AM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for AM) which fits to the below described parameters with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- RAB info<br>- RAB identity | <br><br>No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for AM RLC<br><br>Residual BER as described in TS 34.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps<br>DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup<br>- RB identity | <br>20 |
| - PDCP info<br>- Support of lossless SRNS relocation | <br>False<br>(IE "Support of lossless SRNS relocation" only present, if RLC "In-sequence delivery" is TRUE and in AM) |
| - PDCP PDU header | absent |
| - RLC info<br>- Downlink RLC mode | <br>(AM RLC) |
| - Uplink RLC mode | (AM RLC) |

Content of PDCP No Header PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| Data | PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP No Header PDU (Step 3)

| Information Element | Value/remark |
|---|---|
| Data | PDCP test data type #2: UDP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

### 7.3.2.1.1.5 Test requirements

Test requirements 1 (Proc 1): Transmission of uncompressed IP header packets using PDCP Data PDU

The UE shall return the TCP/IP and UDP/IP data packets as indication, that the previous packets have been received and handled correctly (PDCP Data PDU). This verifies, that the PDCP configuration on UE side works as negotiated by the RRC. An invalid PDU type as well as unconfigured PID values shall not be received by SS.

Test requirements 2 (Proc 1): Transmission of uncompressed IP header packets using PDCP No Header PDU (Proc 2)

The UE shall return the TCP/IP and UDP/IP data packets as indication, that the previous packets have been received and handled correctly (PDCP No Header PDU). This verifies, that the PDCP configuration on UE side works as negotiated by the RRC. An invalid PDU type as well as unconfigured PID values shall not be received by SS.

#### 7.3.2.1.2 Transmission of compressed Header

##### 7.3.2.1.2.1 Definition and applicability

Applicable for all UEs supporting RLC AM and a Radio Bearer as described in the Common Test Sequences.

The UE shall be capable to deal with compressed TCP/IP and UDP/IP data packets and furthermore to establish a PDCP entity which applies IP header compression protocol RFC 2507.

##### 7.3.2.1.2.2 Conformance requirement

1. The Packet Data Convergence Protocol shall perform the following functions:

   - transfer of user data. This function is used for conveyance of data between users of PDCP services.

2. Depending on the configuration by upper layers (i.e. PDCP PDU type to be used and header compressor protocol), the PDCP sublayer shall be able to:

   - identify the correct header compression protocol; and
   - distinguish different types of header compression packets within a header compression protocol.

Reference(s)

TS 25.323 clause 5.

TS 25.323 clause 5.1.1.

##### 7.3.2.1.2.3 Test purpose

1. To verify, that the UE transmits and receives in acknowledged mode (RLC AM) TCP/IP and UDP/IP data packets by using IP header compression protocol as described in RFC2507 as configured by higher layers.
2. To verify, that the PID assignment rules are correctly applied by the UE. The UE as shall use the correct PID value for the applied optimisation method for transmitting and receiving TCP/IP and UDP/IP data packets.

##### 7.3.2.1.2.4 Method of test

Initial conditions

UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Usage of "PDCP Data" PDU and IP header compression is configured.

Related ICS/IXIT Statement(s)

Support of IP header compression protocol RFC 2507 - YES/NO.

Support of PS – Yes/No

PIXIT: Test_PDCP_TCP/IP_Packet1

PIXIT: Test_PDCP_TCP/IP_Packet2

PIXIT: Test_PDCP_UDP/IP_Packet1

PIXIT: Test_PDCP_UDP/IP_Packet2

Test procedure

a) The SS setups a packet switched session including radio bearer and UE test loop mode 1 in RLC AM using Common test procedures for mobile terminated PS switched sessions. Usage of "PDCP Data" PDU has been configured by higher layers.

b) The SS sends a "normal" TCP/IP data packet (no compression packet type), PID=0.

c) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet with the correct decompression protocol. Then, it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

d) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

e) The SS sends a TCP/IP data packet with packet type: Full_Header, PID=1.

NOTE: According to the compression protocol RFC 2507, this is necessary to transmit the created CONTEXT and the assigned CID.

f) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet with the correct decompression protocol. Then, it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

g) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

h) The SS sends a TCP/IP data packet with packet type: Compressed_TCP, PID=2.

i) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet with the correct decompression protocol. Then, it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

j) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

k) Step b) to d) is repeated for a "normal" UDP/IP data packet, PID=0.

l) Step e) to g) is repeated for a UDP/IP data packet with packet type: Full_Header, PID=1.

m) The SS sends a UDP/IP data packet with packet type: Compressed_non_TCP, PID=4.

n) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet with the correct decompression protocol. Then, it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

o) The SS receives and decodes the UDP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

p) The SS deactivates the UE tests loop mode 1 and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in AM RLC (using UE test loop mode 1) | | | | |
| 1 | ← | | PDCP Data | The SS creates a TCP/IP packet without IP header compression.<br><br>The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression)<br>Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 3 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 1 (Full_Header packet type [TCP/IP])<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU, recognizes PID value = 1 applied for this TCP/IP data packet and decompresses it with the appropriate method.<br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |

| Step | Direction | Message | Comments |
|---|---|---|---|
| | UE \| SS | | |
| 4 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 5 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 2 (Compressed_TCP packet type)<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU, recognizes PID value = 2 applied for this TCP/IP data packet and decompress it with the appropriate method. The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 6 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 7 | ← | PDCP Data | The SS creates a UDP/IP packet without compressed IP header compression.<br>The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described UDP/IP packet<br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes with PID value = 0, there was no IP header compression applied for the UDP/IP packet.<br>Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back<br>(RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 8 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (Data PDU with Header)<br>PID value = 0,1 or 4 (depending on which UDP/IP header format is used by the UE)<br>data: previously received UDP/IP packet<br><br>After reception of this UDP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |

| Step | Direction | Message | Comments |
|---|---|---|---|
| | UE \| SS | | |
| 9 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 1 (Full_Header packet type)<br>data: below described UDP/IP packet<br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 1 applied for this UDP/IP data packet and decompress it with the appropriate method.<br><br>The data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back<br>(RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 10 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (Data PDU with Header)<br>PID value = 0,1 or 4 (depending on which UDP/IP header format is used by the UE)<br>data: previously received UDP/IP packet<br><br>After reception of this UDP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 11 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 4 (Compressed _non-TCP packet type)<br>data: below described UDP/IP packet<br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 4 applied for this UDP/IP data packet and decompress it with the appropriate method.<br><br>The data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back<br>(RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 12 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (Data PDU with Header)<br>PID value = 0,1 or 4 (depending on which UDP/IP header format is used by the UE)<br>data: previously received UDP/IP packet<br><br>After reception of this UDP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for AM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for AM) which fit to the here described parameters with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- RAB info<br>- RAB identity | <br><br>No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for AM RLC<br><br>Residual BER as described in TS 34.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps<br>DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup<br>- RB identity | <br>20 |
| - PDCP info<br>- Support of lossless SRNS relocation | <br>False<br>(IE "Support of lossless SRNS relocation" only present, if RLC "In-sequence delivery" is TRUE and in AM) |
| - PDCP PDU header<br>- Header compression information<br>CHOICE *algorithm type*<br>- RFC2507<br>- F_MAX_PERIOD<br>- F_MAX_TIME<br>- MAX_HEADER<br>- TCP_SPACE<br>- NON_TCP_SPACE<br>- EXPECT_REORDERING | present<br>1<br><br><br>256 (Default)<br>5 (Default)<br>168 (Default)<br>15 (Default)<br>15 (Default)<br>reordering not expected (Default) |
| - RLC info<br>- Downlink RLC mode<br>- Uplink RLC mode | <br>(AM RLC)<br>(AM RLC) |

Content of PDCP Data PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 3)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00001 (Full_Header, PID = 1)<br>PDCP test data type #1: TCP/IP data packet with full TCP/IP header with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 5)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00010 (Compressed_TCP, PID = 2)<br>PDCP test data type #1: TCP/IP data packet with a compressed header with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 7)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #2: UDP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 9)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00001 (Full_Header, PID = 1)<br>PDCP test data type #2: UDP/IP data packet with full UDP/IP header with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 11)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00100 (Compressed_non-TCP, PID = 4)<br>PDCP test data type #2: UDP/IP data packet with a compressed header with any data content. The data shall be limited to 1500 bytes. |

#### 7.3.2.1.2.5 Test requirements

The UE shall return the TCP/IP and UDP/IP data packets as indication, that the previous packets have been received and handled with the correct compression protocol. This verifies, that the PDCP configuration on UE side works as negotiated by the RRC. An invalid PDU type as well as unconfigured PID values shall not be received by SS.

## 7.3.2.2 UE in RLC UM

### 7.3.2.2.1 Transmission of uncompressed Header

#### 7.3.2.2.1.1 Definition and applicability

Applicable for all UEs supporting RLC UM and a Radio Bearer as described in the Common Test Sequences.

The UE shall be capable to deal with TCP/IP and UDP/IP data packets with uncompressed IP header.

#### 7.3.2.2.1.2 Conformance requirement

1. The Packet Data Convergence Protocol shall perform the following functions:
   - transfer of user data. This function is used for conveyance of data between users of PDCP services
2. Depending on the configuration by upper layers (i.e. PDCP PDU type to be used and header compressor protocol), the PDCP sublayer shall be able to:
   - identify the correct header compression protocol; and
   - distinguish different types of header compression packets within a header compression protocol.

The mapping of the PID values shall follow the general rules listed below:

- PID value "0" shall indicate "no compression". PID value "0" shall be used in a PDCP PDU containing in its Data field a PDCP SDU that is unchanged by the Sender and that shall not be decompressed by the Receiver;

Reference(s)

TS 25.323 clause 5.

TS 25.323 clause 5.1.1.

#### 7.3.2.2.1.3 Test purpose

The test case consists of two test procedures:

The first test procedure verifies, that the "PDCP Data" PDU is used for uncompressed IP header packets, if no IP header compression is configured by higher layers. The second test procedure verifies, that the "PDCP No header" PDU is used for uncompressed IP header packets, if no IP header compression is configured by higher layers.

1. To verify, that the UE transmits and receives in unacknowledged mode (RLC UM) TCP/IP and UDP/IP data packets without IP header compression as configured by higher layers.
2. To verify, that PID assignment rules are correctly applied, if usage of "PDCP Data" PDU are negotiated, i.e. the UE shall recognize PID value = 0 for a received TCP/IP and UDP/IP data packet and it shall use PID=0 to transmit IP data packets, if no IP header compression is negotiated. If usage of "PDCP No Header" PDU is negotiated, no PID assignment is used for transmitting and receiving TCP/IP and UDP/IP data packets.

#### 7.3.2.2.1.4 Method of test

Initial conditions

UE is in Idle mode.

Test procedure 1: Usage of "PDCP Data" PDU and no IP header compression is configured.

Test procedure 2: no IP header compression is configured.

Related ICS/IXIT Statement(s)

Support of PS – Yes/No

PIXIT: Test_PDCP_TCP/IP_Packet1

PIXIT: Test_PDCP_UDP/IP_Packet1

Proc 1: Test procedure 1: Transmission of uncompressed IP header packets using PDCP Data PDU

a) The SS setups a packet switched session including radio bearer and UE test loop mode 1 in RLC UM using Common test procedures for mobile terminated PS switched sessions. Usage of "PDCP Data" PDU has been configured by higher layers.

b) The SS sends a TCP/IP data packet with uncompressed IP Header.

c) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PDCP PDU type and shall handle the received data packet with the appropriate decoding method. Then it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration using PDCP Data PDU.

d) The SS receives and decodes the TCP/IP data packet. The decoded data packet shall be identical with the data as sent before.

e) Step b) to d) shall be repeated by using a UDP/IP data packet with uncompressed IP Header.

The SS deactivates the UE test loop mode and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in UM RLC (using UE test loop mode 1) | | | | |
| 1 | ← | | PDCP Data | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU).<br><br>The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression)<br>Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| | | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 3 | | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described UDP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes with PID value = 0, there was no IP header compression applied for the UDP/IP packet.<br>Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back<br>(RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 4 | | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>data: previously received UDP/IP packet<br><br>After reception of this UDP/IP data packet, the SS decodes the received data |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | | |

Specific Message Contents

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) which fits to the below described parameters with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- RAB info<br>- RAB identity | <br><br>No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for UM RLC<br><br>Residual BER as described in TS 34.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup<br>- RB identity | <br>21 |
| - PDCP info<br>- PDCP PDU header | <br>present |
| - RLC info<br>- Downlink RLC mode | <br>(UM RLC) |

Content of PDCP Data PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 3)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #2: UDP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Proc 2: Test procedure 2: Transmission of uncompressed IP header packets using No Header PDU

a) The SS setups a packet switched session including radio bearer and UE test loop mode 1 in RLC UM using Common test procedures for mobile terminated PS switched sessions. Usage of "PDCP No Header" PDU has been configured by higher layers.

b) The SS sends a TCP/IP data packet with uncompressed IP Header.

c) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PDCP PDU type and shall handle the received data packet with the appropriate decoding method. Then it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration using PDCP No Header PDU.

d) The SS receives and decodes the TCP/IP data packet. The decoded data packet shall be identical with the data as sent before.

e) Step b) to d) shall be repeated by using a UDP/IP data packet with uncompressed IP Header.

f) The SS deactivates the Loop back test mode and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in UM RLC (using UE test loop mode 1) | | | | |
| | | | | The SS creates a TCP/IP packet without IP header compression (PDCP No Header PDU). |
| 1 | ← | | PDCP No Header | The SS sends a PDCP No Header PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>data: below described TCP/IP packet |
| | | | | After having received the PDCP No Header PDU, the UE decodes the PDU and recognizes, there was no PID applied for the TCP/IP packet. Therefore, no IP header decompression shall be applied for this packet. Then, the data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back (RB LB) entity. |
| | | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP No Header | The UE sends a PDCP No Header PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| | | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| | | | | The SS creates a UDP/IP packet without IP header compression (PDCP No Header PDU). |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 3 | ← | | PDCP No Header | The SS sends a PDCP No Header PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>data: below described UDP/IP packet |
| | | | | After having received the PDCP No Header PDU, the UE decodes the PDU and recognizes, there was no PID applied for the UDP/IP packet. Therefore, no IP header decompression shall be applied for this packet. Then, the data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back (RB LB) entity. |
| | | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 4 | → | | PDCP No Header | The UE sends a PDCP No Header PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>data: previously received UDP/IP packet |
| | | | | After reception of this UDP/IP data packet, the SS decodes the received data |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | | |

Specific Message Contents

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) which fits to the below described parameters with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- RAB info<br>- RAB identity | <br><br>No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for UM RLC<br><br>Residual BER as described in TS 34.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps<br>DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup<br>- RB identity | <br>21 |
| - PDCP info | False |
| - PDCP PDU header | absent |
| - RLC info<br>- Downlink RLC mode | <br>(UM RLC) |
| - Uplink RLC mode | (UM RLC) |

Content of PDCP No Header PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| Data | PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP No Header PDU (Step 3)

| Information Element | Value/remark |
|---|---|
| Data | PDCP test data type #2: UDP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

### 7.3.2.2.1.5 Test requirements

Test requirements 1 (Proc 1): Transmission of uncompressed IP header packets using PDCP Data PDU

The UE shall return the TCP/IP and UDP/IP data packets as indication, that the previous packets have been received and handled correctly (PDCP Data PDU). This verifies, that the PDCP configuration on UE side works as negotiated by the RRC. An invalid PDU type as well as unconfigured PID values shall not be received by SS.

Test requirements 2 (Proc 2): Transmission of uncompressed IP header packets using PDCP No Header PDU

The UE shall return the TCP/IP and UDP/IP data packets as indication, that the previous packets have been received and handled correctly (PDCP No Header PDU). This verifies, that the PDCP configuration on UE side works as negotiated by the RRC. An invalid PDU type as well as unconfigured PID values shall not be received by SS.

#### 7.3.2.2.2 Transmission of compressed Header

##### 7.3.2.2.2.1 Definition and applicability

Applicable for all UEs supporting RLC UM and a Radio Bearer as described in the Common Test Sequences.

The UE shall be capable to deal with compressed TCP/IP and UDP/IP data packets and furthermore to establish a PDCP entity which applies IP header compression protocol RFC 2507.

##### 7.3.2.2.2.2 Conformance requirement

1. The Packet Data Convergence Protocol shall perform the following functions:

   - transfer of user data. This function is used for conveyance of data between users of PDCP services.

2. Depending on the configuration by upper layers (i.e. PDCP PDU type to be used and header compressor protocol), the PDCP sublayer shall be able to:

   - identify the correct header compression protocol; and

   - distinguish different types of header compression packets within a header compression protocol.

Reference(s)

TS 25.323 clause 5.

TS 25.323 clause 5.1.1.

##### 7.3.2.2.2.3 Test purpose

1. To verify, that the UE transmits and receives in unacknowledged mode (RLC UM) TCP/IP and UDP/IP data packets by using IP header compression protocol as described in RFC2507 as configured by higher layers.

2. To verify, that the PID assignment rules are correctly applied by the UE. The UE as shall use the correct PID value for the applied optimisation method for transmitting and receiving TCP/IP and UDP/IP data packets.

##### 7.3.2.2.2.4 Method of test

Initial conditions

UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Usage of "PDCP Data" PDU and no IP header compression is configured.

Related ICS/IXIT Statement(s)

Support of IP header compression protocol RFC 2507 - YES/NO

Support of PS – Yes/No

PIXIT: Test_PDCP_TCP/IP_Packet1

PIXIT: Test_PDCP_TCP/IP_Packet2

PIXIT: Test_PDCP_UDP/IP_Packet1

PIXIT: Test_PDCP_UDP/IP_Packet2

Test procedure

a) The SS setups a packet switched session including radio bearer and UE test loop mode 1 in RLC UM using Common test procedures for mobile terminated PS switched sessions. Usage of "PDCP Data" PDU has been configured by higher layers.

b) The SS sends a "normal" TCP/IP data packet (no compression packet type), PID=0.

c) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet with the correct decompression protocol. Then, it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

d) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

e) The SS sends a TCP/IP data packet with packet type: Full_Header, PID=1.

NOTE: According to the compression protocol RFC 2507, this is necessary to transmit the created CONTEXT and the assigned CID.

f) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet with the correct decompression protocol. Then, it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

g) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

h) The SS sends a TCP/IP data packet with packet type: Compressed_TCP, PID=2.

i) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet with the correct decompression protocol. Then, it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

j) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

k) Step b) to d) is repeated for a "normal" UDP/IP data packet, PID=0.

l) Step e) to g) is repeated for a UDP/IP data packet with packet type: Full_Header, PID=1.

m) The SS sends a UDP/IP data packet with packet type: Compressed_non_TCP, PID=4.

n) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet with the correct decompression protocol. Then, it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

o) The SS receives and decodes the UDP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

p) The SS deactivates the UE test loop test mode and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in UM RLC (using UE test loop mode 1) | | | | |
| | | | | The SS creates a TCP/IP packet without IP header compression. |
| 1 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression)<br>Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 3 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 1 (Full_Header packet type [TCP/IP])<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU, recognizes PID value = 1 applied for this TCP/IP data packet and decompresses it with the appropriate method.<br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 4 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 5 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 2 (Compressed_TCP packet type)<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU, recognizes PID value = 2 applied for this TCP/IP data packet and decompress it with the appropriate method. The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 6 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 7 | ← | | PDCP Data | The SS creates a UDP/IP packet without compressed IP header compression.<br>The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described UDP/IP packet<br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes with PID value = 0, there was no IP header compression applied for the UDP/IP packet.<br>Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back<br>(RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 8 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (Data PDU with Header)<br>PID value = 0,1 or 4 (depending on which UDP/IP header format is used by the UE)<br>data: previously received UDP/IP packet<br><br>After reception of this UDP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 9 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 1 (Full_Header packet type)<br>data: below described UDP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 1 applied for this UDP/IP data packet and decompress it with the appropriate method.<br><br>The data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back<br>(RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 10 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (Data PDU with Header)<br>PID value = 0,1 or 4 (depending on which UDP/IP header format is used by the UE)<br>data: below described UDP/IP packet<br><br>After reception of this UDP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 11 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 4 (Compressed _non-TCP packet type)<br>data: below described UDP/IP packet<br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 1 applied for this UDP/IP data packet and decompress it with the appropriate method.<br><br>The data packet is forwarded via PDCP-SAP to the Radio Bearer Loop Back<br>(RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 12 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (Data PDU with Header)<br>PID value = 0,1 or 4 (depending on which UDP/IP header format is used by the UE)<br>data: previously received UDP/IP packet<br><br>After reception of this UDP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | | |

Specific Message Contents

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) which fit to the here described parameters with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- RAB info<br>- RAB identity | <br><br>No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for UM RLC<br><br>Residual BER as described in TS 34.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps<br>DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup<br>- RB identity | <br>21 |
| - PDCP info | False |
| - PDCP PDU header | present |
| - Header compression information | 1 |
| CHOICE *algorithm type* | |
| - RFC2507 | |
| - F_MAX_PERIOD | 256 (Default) |
| - F_MAX_TIME | 5 (Default) |
| - MAX_HEADER | 168 (Default) |
| - TCP_SPACE | 15 (Default) |
| - NON_TCP_SPACE | 15 (Default) |
| - EXPECT_REORDERING | reordering not expected (Default) |
| - RLC info<br>- Downlink RLC mode | <br>(UM RLC) |
| - Uplink RLC mode | (UM RLC) |

Content of PDCP Data PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| PDU type | 000 |
| PID | 00000 (No header compression, PID = 0) |
| Data | PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 3)

| Information Element | Value/remark |
|---|---|
| PDU type | 000 |
| PID | 00001 (Full_Header, PID = 1) |
| Data | PDCP test data type #1: TCP/IP data packet with full TCP/IP header with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 5)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00010 (Compressed_TCP, PID = 2)<br>PDCP test data type #1: TCP/IP data packet with a compressed header with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 7)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #2: UDP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 9)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00001 (Full_Header, PID = 1)<br>PDCP test data type #2: UDP/IP data packet with full UDP/IP header with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 11)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00100 (Compressed_non-TCP, PID = 4)<br>PDCP test data type #2: UDP/IP data packet with a compressed header with any data content. The data shall be limited to 1500 bytes. |

#### 7.3.2.2.5 Test requirements

The UE shall return the TCP/IP and UDP/IP data packets as indication, that the previous packets have been received and handled with the correct compression method. This verifies, that the PDCP configuration on UE side works as negotiated by the RRC. An invalid PDU type as well as unconfigured PID values shall not be received by SS.

### 7.3.2.2.3 Extension of used compression methods

#### 7.3.2.2.3.1 Definition and applicability

Applicable for all UEs supporting RLC UM and a Radio Bearer as described in the Common Test Sequences.

The UE shall be capable to deal with compressed TCP/IP data packets and furthermore to establish a PDCP entity which applies IP header compression protocol: RFC 2507.

#### 7.3.2.2.3.2 Conformance requirement

1. The Packet Data Convergence Protocol shall perform the following functions:

   - transfer of user data. Transmission of user data means that PDCP receives PDCP SDU from the NAS and forwards it to the RLC layer and vice versa;

2. Depending on the configuration by upper layers (i.e. PDCP PDU type to be used and header compressor protocol), the PDCP sublayer shall be able to:

   - identify the correct header compression protocol; and

- distinguish different types of header compression packets within a header compression protocol.

3. The mapping of the PID values shall follow the general rules listed below:

   - PID values are re-mapped for the PDCP entity after any reconfiguration of the header compression protocols for that entity.

Reference(s)

TS 25.323 clause 5.

TS 25.323 clause 5.1

TS 25.323 clause 5.1.1.

#### 7.3.2.2.3.3 Test purpose

1. To verify, that the UE is able to handle an extended PID value allocation table by header compression protocol IETF RFC 2507 after PDCP reconfiguration as configured by RRC.

#### 7.3.2.2.3.4 Method of test

Initial conditions

UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Usage of "PDCP Data" PDU and no IP header compression is configured.

Related ICS/IXIT Statement(s)

Support of IP header compression protocol RFC 2507 - YES/NO

Support of PS – Yes/No

PIXIT: Test_PDCP_TCP/IP_Packet1

PIXIT: Test_PDCP_TCP/IP_Packet2

Test procedure

a) The SS setups a packet switched session including radio bearer and UE test loop mode 1 in RLC UM using Common test procedures for mobile terminated PS switched sessions (with the UE test loop mode 1). Usage of "PDCP Data PDU" and no optimisation method has been configured by higher layers.

b) The SS sends a TCP/IP data packet (no compression packet type), PID=0.

c) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet correctly. Afterwards it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

d) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

e) The SS reconfigures (using RRC Radio Bearer Reconfiguration message) the PDCP entity by extending the PID value allocation table and therefore the applied optimisation method with the IP header compression protocol RFC 2507. The UE test loop mode 1 in RLC UM is still active.

f) The SS sends a TCP/IP data packet (no compression packet type), PID=0.

g) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet correctly. Afterwards it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

h) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

i) The SS sends a TCP/IP data packet with packet type: Full_Header, PID=1.

j) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet correctly. Afterwards it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

k) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

l) The SS deactivates the UE test loop mode and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in UM RLC (using UE test loop mode 1) | | | | |
| | | | | The SS creates a TCP/IP packet without IP header compression. |
| 1 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression)<br>Therefore, no IP header decompression shall be applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 3 | ← | | RRC RADIO BEARER RECONFIGURATION | SS extends the "PID value allocation table" with IP header compression PID (RFC 2507) in the UE. |
| 4 | → | | RRC RADIO BEARER RECONFIGURATION COMPLETE | UE acknowledges its new settings |
| 5 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (normal packet type [TCP/IP])<br>data: below described TCP/IP packet.<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression)<br>Therefore, no IP header decompression shall be applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |

| Step | Direction UE \| SS | Message | Comments |
|---|---|---|---|
| 6 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 7 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 1 (Full_Header packet type [TCP/IP])<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 1 applied for this TCP/IP data packet and shall decompress it with the appropriate method.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 8 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

RRC RADIO BEARER RECONFIGURATION message

The contents of the RRC RADIO BEARER RECONFIGURATION message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | 1 |
| RB information to reconfigure | |
| - PDCP info | |
| - PDCP PDU header | present |
| - Header compression information | 1 |
| CHOICE *algorithm type* | |
| - RFC2507 | |
| - F_MAX_PERIOD | 256 (Default) |
| - F_MAX_TIME | 5 (Default) |
| - MAX_HEADER | 168 (Default) |
| - TCP_SPACE | 15 (Default) |
| - NON_TCP_SPACE | 15 (Default) |
| - EXPECT_REORDERING | reordering not expected (Default) |

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) which fit to the here described parameters with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- RAB info<br>- RAB identity | <br><br>No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for UM RLC<br><br>Residual BER as described in TS 34.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps<br>DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup<br>- RB identity | <br>21 |
| - PDCP info<br>- PDCP PDU header | <br>present |
| - RLC info<br>- Downlink RLC mode<br>- Uplink RLC mode | <br>(UM RLC)<br>(UM RLC) |

Content of PDCP Data PDU (Step 1 and 5)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP Data PDU (Step 7)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00001 (Full_Header, PID = 1)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

#### 7.3.2.2.3.5 Test requirements

After PDCP reconfiguration, the UE shall return the TCP/IP data packets as indication, that the extension of used optimisation method are applied by UE. This verifies, that the PDCP configuration on UE side works as negotiated by the RRC. An invalid PDU type as well as unconfigured PID values shall not be received by SS.

### 7.3.2.2.4 Compression type used for different entities

#### 7.3.2.2.4.1 Definition and applicability

Applicable only for an UE supporting the establishment of more than one PDCP entity in parallel, i.e. it shall be possible to configure more than one Radio Bearer Loop Back entities (each PDCP entity are assigned via PDCP-SAP to its own Radio Bearer Loop Back entity).

Applicable for all UEs supporting two Radio Bearers in RLC UM and RLC AM as described in this test case, clause 7.3.2.2.4.6 Combined PDCP Acknowledged and Unacknowledged mode configuration.

The UE shall be capable to deal with compressed TCP/IP data packets and furthermore it shall apply IP header compression protocol RFC 2507.

#### 7.3.2.2.4.2 Conformance requirement

1. The Packet Data Convergence Protocol shall perform the following functions:

- transfer of user data. This function is used for conveyance of data between users of PDCP services.

2. Depending on the configuration by upper layers (i.e. PDCP PDU type to be used and header compressor protocol), the PDCP sublayer shall be able to:

   - identify the correct header compression protocol; and

   - distinguish different types of header compression packets within a header compression protocol.

3. The mapping of the PID values shall follow the general rules listed below:

   - PID values shall be mapped to the different packet types independently at each PDCP entity;

Several PDCP entities may be defined for a UE with each using the same or different protocol type. In this version of the specification, only one header compression protocol type, RFC 2507 [6], is supported.

Reference(s)

TS 25.323 clause 5.

TS 25.323 clause 5.1.1.

TS 25.323 clause 4.2.

#### 7.3.2.2.4.3 Test purpose

1. To verify, that a configured IP header compression protocol are applied to compress and decompress TCP/IP data packets by several PDCP entities in parallel, if more than one entities are established, i.e. the UE uses the same PID to transmit two TCP/IP data packets with the same content in parallel using two Radio Bearer configurations.

#### 7.3.2.2.4.4 Method of test

NOTE: For this test case, the SS shall be configured to handle more than one received PDCP messages.

Initial conditions

UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Usage of "PDCP Data" PDU and IP header compression is configured for both PDCP entities.

Related ICS/IXIT Statement(s)

Establishment of more than one PDCP entities - YES/NO.

Support of IP header compression protocol RFC 2507 - YES/NO

Support of UM RB and AM RB

Support of PS – Yes/No

IXIT: Test_PDCP_TCP/IP_Packet1

IXIT: Test_PDCP_TCP/IP_Packet2

Test procedure

a) The SS setups a packet switched session including two radio bearer configurations in parallel in UE test loop mode 1 and in RLC UM and RLC UM using Common test procedures for mobile terminated PS switched sessions. Usage of IP header compression protocol RFC 2507 has been configured by higher layers.

b) The SS sends two successive "normal" TCP/IP data packet, PID=0 via both PDCP configurations to their peer entities.

c) After having received the TCP/IP data packets, the PDCP entities of the UE shall recognize the PID value and shall handle the received data packet independent of the used PID with the correct decompression method. Then they forward the data to their Radio Bearer Loop Back entity. Both received data shall be returned by each Radio Bearer Loop Back entity.

d) The SS receives and decodes TCP/IP data packets according to the inserted PID. The decoded data packets shall be identical with the data as sent before.

e) The SS sends two successive TCP/IP data packets with full header (PID=1) via both PDCP configurations to their peer entities.

f) After having received the TCP/IP data packets, the PDCP entities of the UE shall recognize the PID value and shall handle the received data packets independent of the used PID with the correct decompression method. Then they forward the data to their Radio Bearer Loop Back entity. Both received data shall be returned by each Radio Bearer Loop Back entity.

g) The SS receives and decodes TCP/IP data packets according to the inserted PID. The decoded data packets shall be identical with the data as sent before.

h) The SS deactivates the UE test loop mode and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in UM RLC (using UE test loop mode 1) | | | | |
| 1 | ← | | PDCP Data | The SS sends two successive PDCP Data PDUs using the RLC-UM-Data-Request Primitive via both PDCP entities with the following contents to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet<br><br>After having received both PDCP Data PDUs, the UE decodes each PDU and recognizes PID value = 0 (no IP header compression applied for both TCP/IP data packets).<br><br>Although the same PID is used for both PDUs, the UE shall handle they with the correct method and it forwards both data packets via PDCP-SAPs to their Radio Bearer Loop Back (RB LB) entities.<br><br>The RB LB entities in UE test loop mode 1 return the received data packets and send they back to their PDCP entities. |

| Step | Direction | Message | Comments |
|---|---|---|---|
| | UE \| SS | | |
| 2 | → | PDCP Data | The UE sends back for each PDCP configuration a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>data: previously received TCP/IP packet<br><br>After reception of TCP/IP data packets, the SS applies the appropriate decoding function for both received messages depending on which PID was assigned to the received data |
| 3 | ← | PDCP Data | The SS sends two successive PDCP Data PDUs using the RLC-UM-Data-Request Primitive via both PDCP entities with the following contents to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 1 (Full_Header packet type [TCP/IP])<br>data: below described TCP/IP packet<br><br>After having received both PDCP Data PDUs, the UE decodes each PDU and recognizes PID value = 1 (Full_Header packet type applied for both TCP/IP data packets).<br><br>Although the same PID is used for both PDUs, the UE shall handle they with the correct method and it forwards both data packets via PDCP-SAPs to their Radio Bearer Loop Back (RB LB) entities.<br><br>The RB LB entities in UE test loop mode 1 return the received data packets and send they back to their PDCP entities. |
| 4 | → | PDCP Data | The UE sends back for each PDCP configuration a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>data: previously received TCP/IP packet<br><br>After reception of TCP/IP data packets, the SS applies the appropriate decoding function for both received messages depending on which PID was assigned to the received data |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) which fit to the here described parameters with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | |
| - RAB info | |
| - RAB identity | No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for UM RLC configuration for UM RLC<br><br>Residual BER as described in TS 34.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps<br>DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup | |
| - RB identity | 20 |
| - PDCP info | |
| - PDCP PDU header | present |
| - Header compression information | 1 |
| CHOICE *algorithm type* | |
| - RFC2507 | |
| - F_MAX_PERIOD | 256 (Default) |
| - F_MAX_TIME | 5 (Default) |
| - MAX_HEADER | 168 (Default) |
| - TCP_SPACE | 15 (Default) |
| - NON_TCP_SPACE | 15 (Default) |
| - EXPECT_REORDERING | reordering not expected (Default) |
| - RLC info | |
| - Downlink RLC mode | (AM RLC) |
| - Uplink RLC mode | (AM RLC) |
| - RB information to setup | (NOTE: for RB ID 21, the same RAB configurations are used (No. # 23 as described in TS 34.108) as described for RB ID 20) |
| - RB identity | 21 |
| - PDCP info | |
| - PDCP PDU header | present |
| - Header compression information | 1 |
| CHOICE *algorithm type* | |
| - RFC2507 | |
| - F_MAX_PERIOD | 256 (Default) |
| - F_MAX_TIME | 5 (Default) |
| - MAX_HEADER | 168 (Default) |
| - TCP_SPACE | 15 (Default) |
| - NON_TCP_SPACE | 15 (Default) |
| - EXPECT_REORDERING | reordering not expected (Default) |
| - RLC info | |
| - Downlink RLC mode | (UM RLC) |
| - Uplink RLC mode | (UM RLC) |

Content of both PDCP Data PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of both PDCP Data PDU (Step 3)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00001 (Full_Header, PID = 1)<br>PDCP test data type #1: TCP/IP data packet with full TCP/IP header compression with any data content. The data shall be limited to 1500 bytes. |

#### 7.3.2.2.4.5 Test requirements

The UE shall return both TCP/IP data packets as indication that the previous received data packets associated with the same PID value are handled in parallel with the same decompression protocol. This verifies, that more than one PDCP configuration on UE side using the same compression protocol is able to apply it in parallel. An invalid PDU type as well as unconfigured PID values shall not be received by SS.

#### 7.3.2.2.4.6 Combined PDCP Acknowledged and Unacknowledged mode configuration

This configuration is based on the interactive or background / UL:64 DL 64 kbps / PS RAB. The SRB configurations are UL:3.4 DL:3.4 kbps for DCCH aligned to this combined RABs are described for SRB DL 3.4 kbps in TS 34.108, clause 6.10.2.4.1.2.2 and for SRB DL 3.4 kbps in TS 34.108, clause 6.10.2.4.1.2.1. The TFCS refer to TS34.108, clause 6.10.2.4.1.24.1.1.3 for UL and clause 6.10.2.4.1.25.2.1.3 for DL, the Physical channel parameters refer to TS 34.108, clause 6.10.2.4.1.24.1.2 for UL clause 6.10.2.4.1.25.2.2 and for DL accordingly. The configuration is applied to PDCP test cases using both the acknowledged and unacknowledged mode.

**Table 7.3.2.2.4/1: Uplink Transport channel parameter for combined RABs PS AM_UM**

| Higher layer | RAB/Signalling RB | | RAB #20 | RAB #21 |
|---|---|---|---|---|
| RLC | Logical channel type | | DTCH | DTCH |
| | RLC mode | | AM | UM |
| | Payload sizes, bit | | 316 | 324 |
| | Max data rate, bps | | 63200 | 64800 |
| | TrD PDU header, bit | | 16 | 8 |
| MAC | MAC header, bit | | 4 | |
| | MAC multiplexing | | 2 logical channel multiplexing | |
| Layer 1 | TrCH type | | DCH | |
| | TB sizes, bit | | 336 | |
| | TFS | TF0, bits | 0x336 | |
| | | TF1, bits | 1x336 | |
| | | TF2, bits | 2x336 | |
| | | TF3, bits | 3x336 | |
| | | TF4, bits | 4x336 | |
| | TTI, ms | | 20 | |
| | Coding type | | TC | |
| | CRC, bit | | 16 | |
| | Max number of bits/TTI after channel coding | | 4236 | |
| | Uplink: Max number of bits/radio frame before rate matching | | 2118 | |
| | RM attribute | | 130-170 | |

**Table 7.3.2.2.4/2: Downlink Transport channel parameter for combined RABs PS AM_UM**

| Higher layer | RAB/Signalling RB | | **RAB #20** | **RAB #21** |
|---|---|---|---|---|
| RLC | Logical channel type | | DTCH | DTCH |
| | RLC mode | | AM | UM |
| | Payload sizes, bit | | 316 | 324 |
| | Max data rate, bps | | 63200 | 64800 |
| | TrD PDU header, bit | | 16 | 8 |
| MAC | MAC header, bit | | 4 | |
| | MAC multiplexing | | 2 logical channel multiplexing | |
| Layer 1 | TrCH type | | DCH | |
| | TB sizes, bit | | 336 | |
| | TFS | TF0, bits | 0x336 | |
| | | TF1, bits | 1x336 | |
| | | TF2, bits | 2x336 | |
| | | TF3, bits | 3x336 | |
| | | TF4, bits | 4x336 | |
| | TTI, ms | | 20 | |
| | Coding type | | TC | |
| | CRC, bit | | 16 | |
| | Max number of bits/TTI after channel coding | | 4236 | |
| | RM attribute | | 130-170 | |

### 7.3.2.2.5 Reception of not defined PID values

#### 7.3.2.2.5.1 Definition and applicability

Applicable for all UEs supporting RLC UM and a Radio Bearer as described in the Common Test Sequences.

The UE shall be capable to deal with compressed TCP/IP data packets and furthermore to establish a PDCP entity, which applies PDCP Data PDU if no IP header compression protocol, is negotiated.

The UE shall not forward invalid PDCP PDU data contents to its Radio Bearer.

#### 7.3.2.2.5.2 Conformance requirement

1. Depending on the configuration by upper layers (i.e. PDCP PDU type to be used and header compressor protocol), the PDCP sublayer shall be able to:

   - identify the correct header compression protocol; and

   - distinguish different types of header compression packets within a header compression protocol.

2. If a PDCP entity receives a PDCP PDU with a PID value that is not mapped with a valid packet type (see TS 25.323 subclause 5.1.1), it shall:

   - discard the PDCP PDU.

Reference(s)

TS 25.323 clause 5.1.1.

TS 25.323 clause 9.2.

#### 7.3.2.2.5.3 Test purpose

1. To verify, that a UE considers a received PDCP PDU message with not defined PID value as invalid, i.e. such an invalid PDCP PDU is not forwarded to the Radio Bearer entity on UE side. Therefore the UE using test loop mode 1 does not return such data packet to the SS.

7.3.2.2.5.4 Method of test

Initial conditions

UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Usage of "PDCP Data" PDU and no IP header compression is configured.

Related ICS/IXIT Statement(s)

Support of IP header compression protocol RFC 2507 - YES/NO

Support of PS – Yes/No

IXIT: Test_PDCP_TCP/IP_Packet1

IXIT: Test_PDCP_TCP/IP_Packet2

Test procedure

a) The SS setups a packet switched session including radio bearer and UE test loop mode 1 in RLC UM using Common test procedures for mobile terminated PS switched sessions. Usage of "PDCP Data PDU" and no PDCP IP header compression protocol has been configured by higher layers.

b) The SS sends a "normal" TCP/IP data packet (no compression packet type), PID=0.

c) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet with the correct decoding method. Afterwards it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

d) The SS receives and decodes TCP/IP data packets according to the inserted PID. The decoded data packets shall be identical with the data as sent before.

e) The SS sends a TCP/IP data packet with PID=1. See note 1.

f) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet with the correct decoding method.

g) The SS waits an amount of time to make sure, that no returned data packet was sent by UE.

h) The SS deactivates the UE test loop mode and terminates the connection.

NOTE 1 As no PDCP IP header compression protocol has been configured only PID=0 shall be recognised by the UE and PID=1 shall be considered as invalid PID value by the UE).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in UM RLC (using UE test loop mode 1) | | | | |
| 1 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression)<br>Therefore, no IP header decompression shall be applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 3 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 1 (Full_Header packet type [TCP/IP])<br>data: below described TCP/IP packet.<br><br>After having received the PDCP Data PDU, the UE shall recognize, that a not defined PID value (as configured by higher layers) is inserted in the PDCP PDU.<br><br>The UE shall consider this PDU as invalid, i.e. the data packet is not forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>Therefore this data packet is not returned to the SS. |
| 4 | | | | The SS waits a amount of time to make sure, that the previously sent data packet is not returned to the SS. |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | | |

Specific Message Contents

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in UM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for UM) which fit to the here described parameters with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- RAB info<br>- RAB identity | <br><br>No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for UM RLC<br><br>Residual BER as described in TS 34.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps<br>DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup<br>- RB identity | <br>21 |
| - PDCP info<br>- PDCP PDU header | <br>present |
| - RLC info<br>- Downlink RLC mode | <br>(UM RLC) |
| - Uplink RLC mode | (UM RLC) |

Content of PDCP Data PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes |

Content of PDCP Data PDU (Step 3)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00001 (Invalid PID value, PID = 1)<br>PDCP test data type #1: TCP/IP data packet with full TCP/IP header compression with any data content. The data shall be limited to 1500 bytes. |

### 7.3.2.2.5.5 Test requirements

The UE shall return the received TCP/IP data packet using the PDCP Data PDU with PID = 0.

The UE shall not return the TCP/IP data packet using the PDCP Data PDU with PID = 1.

## 7.3.3 PDCP sequence numbering when lossless SRNS Relocation

### 7.3.3.1 Data transmission if lossless SRNS Relocation is supported

#### 7.3.3.1.1 Definition and applicability

Applicable for all UEs supporting RLC AM, RLC in-sequence delivery, a Radio Bearer as described in the Common Test Sequences and lossless SRNS relocation.

The UE shall be capable to deal with uncompressed TCP/IP data packets and furthermore to establish a PDCP entity which applies PDCP Sequence Numbering

#### 7.3.3.1.2 Conformance requirement

1. PDCP sequence numbering shall be applied when lossless SRNS Relocation is supported. PDCP Sequence Numbers serve to acknowledge previously transmitted PDCP SDUs prior to relocation.

2. In case of a lossless SRNS Relocation procedure:

   - the UTRAN should send to the UE the next expected UL_Receive PDCP SN; and

   - the UE shall send to the UTRAN the next expected DL_Receive PDCP SN.

This information exchange synchronises the Sequence Numbers at the UE and UTRAN PDCP entities.

Reference(s)

TS 25.323 clause 5.4.1.1

TS 25.323 clause 5.4.1.3.

#### 7.3.3.1.3 Test purpose

1. To verify, that a UE supporting lossless SRNS relocation is able to receive and to send IP data packets by using PDCP Sequence Numbering as configured by higher layers.

#### 7.3.3.1.4 Method of test

Initial conditions

SS: 2 cells - Cell A belonging to the valid SRNS (Source SRNS), Cell B belonging to the DRNS (Target SRNS). Both cells are neighbour cells. Cell A has a higher RF power level than Cell B such that an UE shall find Cell A more suitable for service.

UE: It is in Idle mode and has selected cell A with valid SRNS (Source SRNS). Usage of "PDCP Data" PDU, PDCP SeqNum PDU and no IP header compression is configured.

Related ICS/IXIT Statement(s)

Support of lossless SRNS Relocation - YES/NO

Support of PS – Yes/No

IXIT: Test_PDCP_TCP/IP_Packet1

IXIT: Test_PDCP_TCP/IP_Packet2

Test procedure

a) The SS setups a packet switched session including Radio Bearer and UE test loop mode 1 in RLC AM and in-sequence delivery using Common test procedures for mobile terminated PS switched sessions in Cell A. The RLC buffer discharge mode shall be set to "no discard". Usage of "PDCP Data" PDU, support of lossless SRNS relocation and no IP header compression has been configured by higher layers. The PDCP SN window size has been negotiated by RRC.

b) The SS sends a TCP/IP data packet (no compression packet type), PID=0.

c) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet correctly. Afterwards it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

d) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

e) The SS starts to broadcast BCCH messages on the primary CPICH in cell B with a power level higher than in cell A. The UE shall chose cell B to be more suitable for service and hence perform a cell reselection.

f) After completion of cell reselection, the UE transmits a CELL UPDATE message to the SS on the uplink CCCH of cell B with the Cell update cause "Cell Reselection".

g) The SS sends a TCP/IP data packet (no compression packet type), PID=0. The PDCP Data PDU is used during lossless SRNS relocation procedure.

h) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet correctly. Afterwards it forwards the data to its Radio Bearer Loop Back entity. The UE shall increase its internal Sequence Number counter by 1.The received data shall be returned by the UE via its PDCP configuration using PDCP SeqNum PDU.

i) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

j) After having performed SRNS relocation (target RNC allocated with new S-RNTI for the UE), the Target SRNS is the valid SRNS and the SS sends a "CELL UPDATE CONFIRM" message with new RNC_ID to indicate the completion of the cell update.

k) The UE shall confirm the reallocation.

l) The SS sends the next TCP/IP data packet (no compression packet type), PID=0 using the PDCP SeqNum PDU to the UE.

m) After having received the TCP/IP data packet, the UE shall recognize the PID value and shall handle the received data packet correctly. Afterwards it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

n) The SS receives and decodes TCP/IP data packets according to the inserted PID. The decoded data packets shall be identical with the data as sent before.

o) The SS deactivates the UE test loop mode and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in AM RLC (using UE test loop mode 1) in Cell A | | | | |
| 1 | ← | | PDCP Data | The SS creates a TCP/IP packet without IP header compression. The DL_Send PDCP SN is set to "0".<br>The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet<br>Afterwards the SS increments its counter value DL_Send PDCP SN by "1".<br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression)<br>Therefore, no IP header decompression shall be applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 3 | | | | The SS increases the RF power level of cell B and decreases the power level of Cell A such that the UE finds cell B more suitable for service. |
| 4 | | | | The UE cell reselection is performed and Cell B are selected for service. |
| 5 | → | | RRC CELL UPDATE | Then, the UE shall inform the SS about the new cell selection by sending cell update with new parameters (parameter values as used in RRC testing). |

| Step | Direction | Message | Comments |
|---|---|---|---|
| | UE \| SS | | |
| 6 | ← | PDCP Data | The SS sends a PDCP Data PDU with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet<br><br>Afterwards the SS increments its counter value DL_Send PDCP SN by "1".<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 7 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0<br>data: previously received TCP/IP packet<br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 8 | ← | RRC CELL UPDATE CONFIRM | After having performed SRNS relocation, the Target SRNS is the valid SRNS and the SS sends a "CELL UPDATE CONFIRM" message<br>See message content. |
| 9 | → | UTRAN MOBILITY INFORMATION CONFIRM | The UE confirms the newly received information. |
| 10 | ← | PDCP SeqNum | The SS sends the next PDCP SeqNum PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>SeqNum = current PDCP Sequence Number<br>data: below described TCP/IP packet<br>Afterwards the SS increments its counter value DL_Send PDCP SN by "1".<br>After having received the PDCP SeqNum PDU, the UE shall set the received PDCP Sequence Number as its own valid value. It decodes the PDU, recognizes PID value = 0 applied for this TCP/IP data packet and shall decompress it with the appropriate method.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. The SN synchronisation shall be considered as successfully performed after acknowledgement of SeqNum PDU transmission by lower layer in the SS.<br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 11 | → | PDCP SeqNum | The UE sends a PDCP SeqNum PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0<br>SeqNum = current PDCP Sequence Number<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case are identical to those of the Default Message Contents for Signalling in TS 34.108 clause 9.1 (”UM (Transition to CELL_FACH)”) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case are identical to those of the Default Message Contents for Signalling in TS 34.108 clause 9.1 ”AM (Packet to CELL_FACH from CELL_FACH in PS”) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- RAB info<br>- RB information to setup<br>- RB identity<br>- PDCP info<br>- Support of lossless SRNS relocation<br>- Max PDCP SN window size<br>- PDCP PDU header<br>- CHOICE RLC info type<br>- CHOICE Uplink RLC mode<br>- Transmission RLC Discard<br>- CHOICE SDU Discard Mode<br><br>- CHOICE Downlink RLC mode<br>- In-sequence delivery<br><br>Downlink counter synchronisation info<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info | <br><br><br>20<br><br>True<br>65535<br>Present<br>RLC info<br>AM RLC<br><br>No discard<br>Note: Default value as defined in TS 34.108, Clause 9.1<br>AM RLC<br>True<br>Note: Default value as defined in TS 34.108, Clause 9.1<br><br><br><br>20<br>1 (Note: next expected Sequence Number) |

Content of PDCP Data PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP SeqNum PDU (Step 6)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Sequence number<br>Data | 001<br>00000 (No header compression, PID = 0)<br>(16 Bit value) valid Sequence Number of the SS<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

CELL UPDATE CONFIRM (Step 8)

Use the message sub-type in default message content defined in Annex A, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New U-RNTI | New value of U-RNTI different from the previous U-RNTI |
| Receive PDCP sequence number | IE is set to the value to be counted inside SS as next expected reception Sequence Number |

UTRAN MOBILITY INFORMATION CONFIRM (Step 9)

Only the message type is checked.

Content of PDCP Data PDU (Step 10)

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

#### 7.3.3.1.5 Test requirements

After having completed lossless SRNS relocation, the UE shall return the received TCP/IP data packet by using PDCP SeqNum PDUs as indication, that it supports lossless SRNS relocation. This verifies, that Sequence Numbering is used for lossless SRNS relocation. An invalid PDU type as well as unconfigured PID values shall not be received by SS.

### 7.3.3.2 Synchronisation of PDCP sequence numbers

#### 7.3.3.2.1 Definition and applicability

Applicable for all UEs supporting RLC AM, RLC in-sequence delivery, a Radio Bearer as described in the Common Test Sequences.

The UE shall be capable to deal with compressed TCP/IP and UDP/IP data packets and furthermore it shall be capable to use IP Header compression protocol RFC 2507.

#### 7.3.3.2.2 Conformance requirement

The PDCP SeqNum PDU shall be sent by the peer PDCP entities when synchronisation of the PDCP SN is required. (...) Synchronisation of PDCP SN is required after (...) RB reconfiguration.

1. In case of a lossless SRNS Relocation procedure:

   - the UTRAN should send to the UE the next expected UL_Receive PDCP SN; and

   - the UE shall send to the UTRAN the next expected DL_Receive PDCP SN.

This information exchange synchronises the Sequence Numbers at the UE and UTRAN PDCP entities.

2. For radio bearers that are configured to support lossless SRNS Relocation, the PDCP entity shall:

   - if upper layer indicates to a PDCP entity that it should synchronise the PDCP SN following a RLC reset or RB reconfiguration; or

   - if the UE/UTRAN PDCP entity receives an invalid "next expected UL/DL_Receive PDCP SN" from upper layer after Relocation:

     - trigger the PDCP SN synchronisation procedure by submitting one PDCP SeqNum PDU to lower layer;

- consider that the synchronisation procedure is complete on confirmation by lower layer of the successful transmission of the PDCP SeqNum PDU.

Reference(s)

TS 25.323 clause 5.4.1.3

TS 25.323 clause 5.4.1.2

#### 7.3.3.2.3 Test purpose

1. To verify, that the UE supporting lossless SRNS relocation as configured by higher layers is able to handle the "PDCP SeqNum" PDU to synchronize the used PDCP Sequence Number after reconfiguration of the Radio Bearer.

#### 7.3.3.2.4 Method of test

Initial conditions

SS: 2 cells - Cell A belonging to the valid SRNS (Source SRNS), Cell B belonging to the DRNS (Target SRNS). Both cells are neighbour cells. Cell A has a higher RF power level than Cell B such that an UE shall find Cell A more suitable for service.

UE: It is in Idle mode and has selected cell A with valid SRNS (Source SRNS). Usage of "PDCP Data" PDU, "PDCP SeqNum" PDU and no IP header compression is configured.

Related ICS/IXIT Statement(s)

Support of lossless SRNS relocation - YES/NO

Support of RLC in-sequence delivery - YES/NO

Test procedure

a) The SS setups a packet switched session including Radio Bearer and UE test loop mode 1 in RLC AM and in-sequence delivery using Common test procedures for mobile terminated PS switched sessions in Cell A. The RLC buffer discharge mode shall be set to "no discard". Usage of "PDCP Data" PDU and "PDCP SeqNum" PDU, support of lossless SRNS relocation and no IP header compression has been configured by higher layers. The PDCP SN window size has been negotiated by RRC.

b) The SS sends a TCP/IP data packet (no compression packet type), PID=0.

c) After having received the TCP/IP data packet, the PDCP entity of the UE shall recognize the PID value and shall handle the received data packet correctly. Afterwards it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration.

d) The SS receives and decodes the TCP/IP data packet according to the inserted PID. The decoded data packet shall be identical with the data as sent before.

e) The SS reconfigures (using RRC Radio Bearer Reconfiguration message) the PDCP entity by extending the PID value allocation table and therefore the applied optimisation method with the IP header compression protocol RFC 2507. The UE test loop mode 1 in RLC AM is still active.

f) The SS sends the next TCP/IP data packet (no compression packet type), PID=0 using the "PDCP SeqNum" PDU including the current PDCP Sequence Number value to the UE.

g) After having received the TCP/IP data packet, the UE shall recognize the PID value and shall handle the received data packet correctly. Afterwards it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE by using PDCP "SeqNum" PDU including its DL_Receive PDCP SN via its PDCP configuration.

h) The SS receives and decodes TCP/IP data packets according to the inserted PID. The decoded data packets shall be identical with the data as sent before.

i) The SS deactivates the UE test loop mode and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated PS session using IP Header compression in AM RLC (using UE test loop mode 1) in Cell A | | | | |
| 1 | ← | | PDCP Data | The SS creates a TCP/IP packet without IP header compression. The DL_Send PDCP SN is set to "0".<br><br>The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet<br>Afterwards the SS increments its counter value DL_Send PDCP SN by "1".<br><br>After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression)<br>Therefore, no IP header decompression shall be applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0<br>data: previously received TCP/IP packet<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| 3 | ← | | RRC RADIO BEARER RECONFIGURATION | SS extends the "PID value allocation table" with IP header compression PID (RFC 2507) in the UE. |
| 4 | → | | RRC RADIO BEARER RECONFIGURATION COMPLETE | UE acknowledges its new settings |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 5 | ← | | PDCP SeqNum | The SS sends a PDCP SeqNum PDU including its current Sequence Number with the following content to the UE:<br>PDU type = 001 (PDCP SeqNum PDU)<br>PID = 0 (normal packet type [TCP/IP])<br>SeqNum = current PDCP Sequence Number<br>data: below described TCP/IP packet<br>Afterwards the SS increments its counter value DL_Send PDCP SN by "1".<br>After having received the PDCP SeqNum PDU, the UE shall set the received PDCP Sequence Number as its own valid value. It decodes the PDU, recognizes PID value = 0 applied for this TCP/IP data packet and shall decompress it with the appropriate method.<br>The UE shall set the value of DL_Receive PDCP SN to the value as received from SS.<br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. The SN synchronisation shall be considered as successfully performed after acknowledgement of SeqNum PDU transmission by lower layer in the SS.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 6 | → | | PDCP PDU | The UE sends a PDCP PDU with PDCP Header back to the SS. The content is as follows:<br>PDU type = 000 (PDCP Data PDU)<br>PID value = 0 to 3<br>SeqNum: current UE value, (optional parameter, depending on PDU used)<br>data: previously received TCP/IP packet.<br><br>After reception of this TCP/IP data packet, the SS applies the appropriate decoding function depending on the assigned PID. |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | | |

Specific Message Contents

RRC RADIO BEARER RECONFIGURATION message

The contents of the RRC RADIO BEARER RECONFIGURATION message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for AM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list<br>RB information to reconfigure<br>- PDCP info<br>- Max PDCP SN window size<br>- Support of lossless SRNS relocation<br>- PDCP PDU header<br>- Header compression information<br>CHOICE *algorithm type*<br>- RFC2507<br>- F_MAX_PERIOD<br>- F_MAX_TIME<br>- MAX_HEADER<br>- TCP_SPACE<br>- NON_TCP_SPACE<br>- EXPECT_REORDERING | 1<br><br><br>65535<br>TRUE<br>present<br>1<br><br><br><br>256 (Default)<br>5 (Default)<br>168 (Default)<br>15 (Default)<br>15 (Default)<br>reordering not expected (Default) |
| Receive PDCP sequence number | IE is set to the value to be counted inside SS as next expected reception Sequence Number |
| U-RNTI | New value of U-RNTI different from the previous U-RNTI |

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for AM) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message applied in the preamble "Setup a UE terminated PS session using IP Header compression in AM RLC" of this test case is identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (PS connection for AM) which fit to the here described parameters with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Downlink counter syncronisation info | |
| - RB with PDCP information list | |
| - RB identity | 20 |
| - PDCP SN info | 1 (Note: next expected Sequence Number) |
| - RAB information for setup | |
| - RAB info | |
| - RAB identity | No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for AM RLC<br><br>Residual BER as described in TS 24.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps<br>DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup | |
| - RB identity | 20 |
| - PDCP info | |
| - Max PDCP SN window size | 65535 |
| - Support of lossless SRNS relocation | TRUE |
| - PDCP PDU header | present |
| - RLC info | |
| - Downlink RLC mode | (AM RLC) |
| - In-sequence delivery | True |
| - Uplink RLC mode | (AM RLC) |
| - Transmission RLC Discard | No Discard Note: Default value defined in TS 34.108, Annex B |

Content of PDCP Data PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| PDU type | 000 |
| PID | 00000 (No header compression, PID = 0) |
| Data | PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

Content of PDCP SeqNum PDU (Step 5)

| Information Element | Value/remark |
|---|---|
| PDU type | 001 |
| PID | 00000 (No header compression, PID = 0) |
| Sequence number | (16 Bit value) valid Sequence Number of the SS |
| Data | PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

### 7.3.3.2.5 Test requirements

After having received the TCP/IP data packet conveyed with the "PDCP SeqNum" PDU, the UE shall return the TCP/IP data packets as indication, that the UE is able to handle a Sequence Number synchronisation. An invalid PDU type as well as unconfigured PID values shall not be received by SS.

### 7.3.3.3 PDCP Sequence Numbering and Data Forwarding - Reception of reserved PDU type

FFS

### 7.3.3.4 PDCP Sequence Number synchronization – Reception of invalid next expected receive Sequence Number

FFS

### 7.3.3.5 UTRAN MOBILITY INFORMATION: Lossless SRNS relocation in CELL_FACH (without pending of ciphering)

#### 7.3.3.5.1 Definition

#### 7.3.3.5.2 Conformance requirement

To initiate the procedure UTRAN transmits a UTRAN MOBILITY INFORMATION message to the UE on the downlink DCCH using AM or UM RLC. In case of SRNS relocation, the message is sent using UM RLC only.

When the UE receives a UTRAN MOBILITY INFORMATION message, it shall:

1> if the variable PDCP_SN_INFO is non-empty:

2> include the IE "RB with PDCP information list" in the UTRAN MOBILITY INFORMATION CONFIRM message and set it to the value of the variable PDCP_SN_INFO.

1> if the received UTRAN MOBILITY INFORMATION message included the IE "Downlink counter synchronisation info":

2> re-establish RB2;

2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN component of COUNT-C for RB2;

2> calculate the START value according to TS 25.331 subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info" in the UTRAN MOBILITY INFORMATION CONFIRM message.

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC;

1> if the IE "Downlink counter synchronisation info" was included in the received UTRAN MOBILITY INFORMATION message:

2> when RLC has confirmed the successful transmission of the response message:

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of the COUNT-C values of all UM RLC entities to zero;

3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS.

1> if the variable PDCP_SN_INFO is non-empty:

2> when RLC has confirmed the successful transmission of the UTRAN MOBILITY INFORMATION CONFIRM message:

3> for each radio bearer in the variable PDCP_SN_INFO:

4> if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":

5> configure the RLC entity for that radio bearer to "continue".

3> clear the variable PDCP_SN_INFO.

Reference

3GPP TS 25.331 clause 8.3.3

### 7.3.3.5.3 Test purpose

1. To confirm that the UE that support lossless SRNS relocation, sends the correct expected downlink PDCP sequence number to SS after a successful SRNS relocation.
2. To confirm that the UE sends calculated START values for each CN domain to SS after a successful SRNS relocation.
3. In the case that ciphering is applied by the network, to confirm that the UE applies the new ciphering algorithm following a successful SRNS relocation.

### 7.3.3.5.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH _FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

Initial conditions message sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| SS executes procedure Activate closed loop mode 1 in CELL_FACH case as specified in clause 7.3.1.2.1.4 | | | | |

Related ICS/IXIT statements

- Lossless SRNS relocation supported yes/no
- Support of RLC in-sequence delivery Yes/No

Specific Message Contents

If network applies ciphering, the contents of SECURITY MODE COMMAND message in the initial condition set-up are identical to the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA0 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN + 2 |

The contents of RADIO BEARER SETUP message to be transmitted during P14 as specified in TS 34.108 clause 7.4, use the message titled “Packet to CELL_FACH from CELL_FACH in PS” as found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PDCP info | |
| - Support for lossless SRNS relocation | TRUE |
| - Max PDCP SN window size | sn65535 |
| - PDCP PDU header | present |

Test Procedure

The UE is in the CELL_FACH state. If PS RAB has been established in the initial condition, SS initiates UE to enter loopback mode 1 and sends a PDCP PDU on the RAB. If ciphering is supported, a PDCP PDUs has to be decided so that the ciphering activation time is elapsed. SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be send back by the UE and then note the next PDCP SN for the next PDCP PDU. SS then transmits a UTRAN MOBILITY INFORMATION message, which includes a valid IE “New C-RNTI” and “New U-RNTI”, IE “Downlink counter synchronisation info” and IE “Integrity protection mode info”, to the UE on the downlink DCCH using UM RLC. SS verifies that the UE sends UTRAN MOBILITY INFORMATION CONFIRM message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in UTRAN MOBILITY INFORMATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration, and “Receive PDCP sequence number”.

SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM. The UE shall respond to downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS responds with UE CAPABILITY INFORMATION CONFIRM messageSS resumes the transmission of PDCP PDUs and checks that all transmitted PDCP PDUs are sent back by the UE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 1 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 1a | | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 1b | | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 2a | | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 2b | | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 2c | | | | SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be sent back by the UE and then note the next PDCP SN for the next PDCP PDU. |

| | | | |
|---|---|---|---|
| 3 | ← | UTRAN MOBILITY INFORMATION | If IE “Ciphering mode info” is present in the SECURITY MODE COMMAND during initial condition set-up, this message is sent after last ciphering activation time has elapsed and there is no pending ciphering activation time. New U-RNTI identities are assigned to the UE. IE “Downlink counter synchronisation info” includes the next PCDP sequence number that SS is expected to receive from the UE, otherwise only IE “Downlink counter synchronisation info” is included. New integrity protection configuration is applied on DL SRB1. |
| 4 | → | UTRAN MOBILITY INFORMATION CONFIRM | New calculated START value is included, IE “Receive PDCP sequence number” shall be included. New integrity protection configuration is applied on UL SRB2. If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on UL SRB2 with the downlink and uplink values of the HFN component of COUNT-C for SRB2 incremented by one. |
| 5 | ← | UE CAPABILITY ENQUIRY | New integrity protection configuration is applied on DL SRB2. If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on DL SRB2 with the same START value as used in step 4. |
| 6 | → | UE CAPABILITY INFORMATION | SS confirms that new integrity protection configuration is applied on SRB2 by UE. |
| 7 | ← | UE CAPABILITY INFORMATION CONFIRM | |
| 8 | | Void | |
| 9 | | Void | |
| | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 10 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 11 | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |

| | | | |
|---|---|---|---|
| 12 | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 13 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 14 | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 15 | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

UTRAN MOBILITY INFORMATION (Step 3)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to "Not present". If network applies ciphering, this IE present with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA1 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 20 |
| - RLC sequence number | Current RLC SN+2 |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC Identity<br><br>- S-RNTI<br><br>New C-RNTI<br>CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain specific DRX cycle length coefficient<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain specific DRX cycle length coefficient<br>Downlink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info | <br>An arbitrary 12-bits string which is different from original SRNC<br>An arbitrary 20-bits string which is different from original S-RNTI<br>Not Present<br><br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>7<br>CS<br><br>1E 01H<br>7<br><br>This IE is included<br><br>20<br>The next PCDP sequence number that SS is expected to receive from the UE |

UTRAN MOBILITY INFORMATION CONFIRM for PS only UE (Step 4)

The same message sub-type found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink DCCH with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info<br><br>- START list | <br>This IE is checked<br><br>20<br>Check that the PCDP sequence number is the next sequence number that SS would transmit to the UE. (X)<br>Check that this IE is correct value |

Content of PDCP Data PDUs used for entire test case

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

UE CAPABILITY ENQUIRY (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 6)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Step 7)

Use the same message sub-type found in [9] TS 34.108 clause 9.

### 7.3.3.5.5 Test requirement

After step 1, UE shall transmit back all the PDCP PDUs sent by the SS to the UE.

After step 3, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC which includes which includes a calculated new START value according to the formula "$START_X'$ = $MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in UTRAN MOBILITY INFORMATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configurationThis message shall also include IE "Receive PDCP sequence number" for RB#20. .

After step 5, the UE shall respond with a UE CAPABILITY INFORMATION message to SS and apply new ciphering configuration on UL SRB3.

After step 8, the UE shall respond with a IDENTITY RESPONSE message to SS

After step 9, UE shall start transmission on the RAB beginning with the PDCP SN equal to that included in the UTRAN MOBILITY INFORMATION CONFIRM message.

## 7.3.3.6 Cell Update: Lossless SRNS relocation in CELL_FACH (without pending of ciphering)

### 7.3.3.6.1 Definition

### 7.3.3.6.2 Conformance requirement

When the UTRAN receives a CELL UPDATE message, the UTRAN should:

1> in case the procedure was triggered by reception of a CELL UPDATE:

2> if SRNS relocation was performed:

3> transmit a CELL UPDATE CONFIRM message on the downlink DCCH.

2> otherwise:

3> update the START value for each CN domain as maintained in UTRAN (refer to TS 25.331 subclause 8.5.9) with "START" in the IE "START list" for the CN domain as indicated by "CN domain identity" in the IE "START list";

3> if this procedure was triggered while the UE was not in CELL_DCH state, then for each CN domain as indicated by "CN domain identity" in the IE "START list":

4> set the 20 MSB of the MAC-d HFN with the corresponding START value in the IE "START list";

4> set the remaining LSB of the MAC-d HFN to zero.

3> transmit a CELL UPDATE CONFIRM message on the downlink DCCH or optionally on the CCCH but only if ciphering is not required; and

3> optionally include the IE "RLC re-establish indicator (RB5 and upwards)" to request a RLC re-establishment in the UE, in which case the corresponding RLC entities should also be re-established in UTRAN; or

If the UE after the state transition remains in CELL_FACH state; and

- a C-RNTI is stored in the variable C_RNTI;

the UE shall:

1> if the variable PDCP_SN_INFO is non-empty:

2> include the IE "RB with PDCP information list" in any response message transmitted below and set it to the value of the variable PDCP_SN_INFO.

1> if the received CELL UPDATE CONFIRM message included the IE "Downlink counter synchronisation info":

2> re-establish RB2;

2> set the new uplink and downlink HFN component of the COUNT-C of RB2 to MAX(uplink HFN component of the COUNT-C of RB2, downlink HFN component of the COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN component of the COUNT-C for RB2;

2> calculate the START value according to TS 25.331 subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info" in any response message transmitted below.

1> transmit a response message as specified in TS 25.331 subclause 8.3.1.7;

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and

- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition., and the UE shall:

1> if the IE "Downlink counter synchronisation info" was included in the received CELL UPDATE CONFIRM message:

2> when RLC has confirmed the successful transmission of the response message:

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of the COUNT-C values of all UM RLC entities to zero;

3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].

1> if the variable PDCP_SN_INFO non-empty:

2> when RLC has confirmed the successful transmission of the response message:

3> for each radio bearer in the variable PDCP_SN_INFO:

4> if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":

5> configure the RLC entity for that radio bearer to "continue".

3> continue with the remainder of the procedure.

### Reference

3GPP TS 25.331 clause 8.3.1

### 7.3.3.6.3 Test purpose

1. To confirm that the UE executes a cell update procedure after the successful reselection of another UTRA cell.
2. To confirm that the UE that support lossless SRNS relocation, sends the correct expected downlink PDCP sequence number to SS after a successful SRNS relocation.
3. To confirm that the UE sends calculated START values for each CN domain to SS after a successful SRNS relocation.

4. In the case that ciphering is applied by the network, to confirm that the UE applies the new ciphering algorithm following a successful SRNS relocation.

7.3.3.6.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active.

UE: PS-DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

Initial conditions message sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| SS executes procedure Activate closed loop mode 1 inCELL_FACH case as specified in clause 7.3.1.2.1.4 | | | | |

Related ICS/IXIT statements

- Lossless SRNS relocation supported yes/no

- Support of RLC in-sequence delivery Yes/No

Specific Message Content

If network applies ciphering, the contents of SECURITY MODE COMMAND message in the initial condition set-up are identical to the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA1 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN + 2 |

For RADIO BEARER SETUP message to be transmitted during P14 as specified in TS 34.108 clause 7.4, uses the message titled “Packet to CELL_FACH from CELL_FACH in PS” as found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PDCP info | |
| - Support for lossless SRNS relocation | TRUE |
| - Max PDCP SN window size | sn65535 |
| - PDCP PDU header | present |

Test Procedure

Table 7.3.3.6

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Ch. 1 | | Ch. 1 | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |

Table 7.3.3.6 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_FACH state in cell 1. If PS RAB has been established in the initial condition, SS initiates UE to enter loopback mode 1 and sends a PDCP PDU on the RAB. If ciphering is supported, the number of a PDCP PDU has to be decided so that the ciphering activation time is elapsed. SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be send back by the UE and then note the next PDCP SN for the next PDCP PDU. SS configures its downlink transmission power settings according to columns "T1" in table 7.3.3.6. The UE shall find cell 2 to be more suitable for service and hence perform a cell reselection. After the completion of cell reselection, the UE shall transmits a CELL UPDATE message to the SS on the uplink CCCH of cell 2 and set IE "Cell update cause" to "Cell Reselection". SS then transmits a CELL UPDATE CONFIRM message, which includes a valid IE “New C-RNTI” and “New U-RNTI”, IE “Downlink counter synchronisation info” and IE “Integrity protection mode info”, to the UE on the downlink DCCH using UM RLC. SS verifies that the UE sends UTRAN MOBILITY INFORMATION CONFIRM message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in CELL UPDATE CONFIRM message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration, and “Receive PDCP sequence number”.

SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM. The UE shall respond to downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS responds with UE CAPABILITY INFORMATION CONFIRM message. SS resumes the transmission of PDCP PDUs and checks that all transmitted PDCP PDUs are sent back by the UE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 1 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 1a | | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 1b | | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 2a | | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 2b | | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 2c | | | Void | SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be sent back by the UE and then note the next PDCP SN for the next PDCP PDU. After last ciphering activation time has elapsed and there is no pending ciphering activation time, SS applies the downlink transmission power settings, according to the values in columns "T1" of table 7.3.3.6. The UE shall find that the cell 2 is better for service and perform a reselection. SS waits for the maximum duration required for the UE to camp to cell 2. |
| 3 | → | | CELL UPDATE | Value "cell reselection" shall be indicated in IE "Cell update cause" |

| | | | |
|---|---|---|---|
| 4 | ← | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_FACH". New C-RNTI and U-RNTI identities are assigned to the UE. IE “Downlink counter synchronisation info” includes the next PCDP sequence number that SS is expected to receive from the UE, otherwise only IE “Downlink counter synchronisation info” is included. New integrity protection configuration is applied on DL SRB1. LAI and RAI of cell 2 are given to the UE, and are the same as cell 1. |
| 5 | → | UTRAN MOBILITY INFORMATION CONFIRM | New calculated START value is included. IE “Receive PDCP sequence number” shall be included. New integrity protection configuration is applied on UL SRB2. If IE “Ciphering mode info” is present in step 4, new ciphering configuration is applied on UL SRB2 with the downlink and uplink values of the HFN component of COUNT-C for SRB2 is incremented by one. |
| 6 | ← | UE CAPABILITY ENQUIRY | New integrity protection configuration is applied on DL SRB2. If IE “Ciphering mode info” is present in step 4, new ciphering configuration is applied on DL SRB2 with the same value as used in step 5. |
| 7 | → | UE CAPABILITY INFORMATION | SS confirms that new integrity protection configuration is applied on UL SRB2 by UE. |
| 8 | ← | UE CAPABILITY INFORMATION CONFIRM | |
| 9 | | Void | |
| 10 | | Void | |
| | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 11 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 12 | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |

| | | | |
|---|---|---|---|
| 13 | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 14 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 15 | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 16 | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 17 | | | New ciphering configuration is applied on UL and DL RAB using the re-initialised COUNT-C HFN by the start value as stored in step 5. |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

CELL UPDATE (Step 3)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |

CELL UPDATE CONFIRM (Step 4)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to “Not present”. If network applies ciphering, this IE present with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA0 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 20 |
| - RLC sequence number | Current RLC SN+2 |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC Identity<br><br>- S-RNTI<br><br>New C-RNTI<br>CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>Downlink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info | <br>An arbitrary 12-bits string which is different from original SRNC<br>An arbitrary 20-bits string which is different from original S-RNTI<br>Not Present<br><br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H<br><br>This IE is included<br><br>20<br>The next PCDP sequence number that SS is expected to receive from the UE.(X) |

UTRAN MOBILITY INFORMATION CONFIRM (Step 5)

The same message sub-type found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink DCCH with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info<br><br>- START list | <br>This IE is checked<br><br>20<br>Check that the PCDP sequence number is the next sequence number that SS would transmit to the UE<br>Check that this IE is correct value |

Content of PDCP Data PDUs used for entire test case

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

UE CAPABILITY ENQUIRY (Step 6)

Use the same message sub-type found in [9] TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 7)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Step 8)

Use the same message sub-type found in [9] TS 34.108 clause 9.

### 7.3.3.6.5 Test requirement

After step 1, UE shall transmit back all the PDCP PDUs sent by the SS to the UE.

After step 2, UE shall transmit CELL UPDATE message with the value of IE “Cell update cause” set to “cell reselection”.

After step 4, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC which includes which includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using the new FRESH value as included in IE ”Integrity protection initialisation number” in IE ”Integrity protection mode info” in UTRAN MOBILITY INFORMATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration, this message shall also include IE “Receive PDCP sequence number” for RB#20.

After step 6, the UE shall respond with a UE CAPABILITY INFORMATION message to SS.

After step 10, UE shall start transmission on the RAB beginning with the PDCP SN equal to that included in the UTRAN MOBILITY INFORMATION CONFIRM message.

## 7.3.3.7 URA Update: Lossless SRNS relocation in CELL_FACH (without pending of ciphering)

### 7.3.3.7.1 Definition

### 7.3.3.7.2 Conformance requirement

When the UTRAN receives a URA UPDATE message, the UTRAN should:

1> in case the procedure was triggered by reception of a URA UPDATE:

2> if SRNS relocation was performed:

3> transmit a URA UPDATE CONFIRM message on the downlink DCCH.

If the UE after the state transition remains in CELL_FACH state; and

- a C-RNTI is stored in the variable C_RNTI;

the UE shall:

1> if the variable PDCP_SN_INFO is non-empty:

2> include the IE "RB with PDCP information list" in any response message transmitted below and set it to the value of the variable PDCP_SN_INFO.

1> if the received URA UPDATE CONFIRM message included the IE "Downlink counter synchronisation info":

2> re-establish RB2;

2> set the new uplink and downlink HFN component of the COUNT-C of RB2 to MAX(uplink HFN component of the COUNT-C of RB2, downlink HFN component of the COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN component of the COUNT-C for RB2;

2> calculate the START value according to TS 25.331 subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info" in any response message transmitted below.

If the URA UPDATE CONFIRM message:

- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes any one or both of the IEs "New C-RNTI" and "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition., and the UE shall:

1> if the IE "Downlink counter synchronisation info" was included in the received CELL UPDATE CONFIRM or URA UPDATE CONFIRM message:

2> when RLC has confirmed the successful transmission of the response message:

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of the COUNT-C values of all UM RLC entities to zero;

3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS.

1> if the variable PDCP_SN_INFO non-empty:

2> when RLC has confirmed the successful transmission of the response message:

3> for each radio bearer in the variable PDCP_SN_INFO:

4> if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":

5> configure the RLC entity for that radio bearer to "continue".

Reference

3GPP TS 25.331 clause 8.3.1

### 7.3.3.7.3 Test purpose

1. To confirm that the UE executes a URA update procedure after the successful reselection of another UTRA cell.
2. To confirm that the UE that support lossless SRNS relocation, sends the correct expected downlink PDCP sequence number to SS after a successful SRNS relocation.
3. To confirm that the UE sends calculated START values for each CN domain to SS after a successful SRNS relocation.

### 7.3.3.7.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 3 are active.

UE: PS-DCCH _DCH(state 6-7) in cell 1 as specified in clause 7.4 of TS 34.108.

Initial conditions message sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| SS executes procedure Activate closed loop mode 1 in CELL_DCH case-as specified in clause 7.3.1.2.1.44 | | | | |
| 1 | | | SS executes procedure P18 (clause 7.4.2.1.2 of TS 34.108) | |
| 2 | | | | UE enters state URA_PCH |

Related ICS/IXIT statements

- Lossless SRNS relocation supported yes/no

- Support of RLC in-sequence delivery Yes/No

Specific Message Content

If network applies ciphering, the contents of SECURITY MODE COMMAND message in the initial condition set-up are identical to the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA1 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN + 2 |

For RADIO BEARER SETUP message to be transmitted during P14 as specified in TS 34.108 clause 7.4, uses the message titled “Packet to CELL_FACH from CELL_FACH in PS” as found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PDCP info | |
| - Support for lossless SRNS relocation | TRUE |
| - Max PDCP SN window size | sn65535 |
| - PDCP PDU header | present |

Test Procedure

Table 7.3.3.7

| Parameter | Unit | Cell 1 | | Cell 3 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Ch. 1 | | Ch. 1 | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |

Table 7.3.3.7 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the URA_PCH state, camping onto cell 1. If PS RAB has been established in the initial condition, SS initiates UE to enter loopback mode 1 and sends a PDCP PDUs on the RAB. If ciphering is supported, a PDCP PDUs has to be decided so that the ciphering activation time is elapsed. SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be send back by the UE and then note the next PDCP SN for the next PDCP PDU. SS configures its downlink transmission power settings according to columns "T1" in table 7.3.3.7. The UE shall find cell 3 to be more suitable for service and hence perform a cell reselection. After the completion of cell reselection, the UE shall transmits a URA UPDATE message to the SS on the uplink CCCH of cell 3 and set IE "URA update cause" to "change of URA". After the SS receives this message, it transmits a URA UPDATE CONFIRM message, which includes a valid IE “New C-RNTI” and “New U-RNTI”, IE “Downlink counter synchronisation info” and IE “Integrity protection mode info”, to the UE on the downlink DCCH using UM RLC. SS verifies that the UE sends UTRAN MOBILITY INFORMATION CONFIRM message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in CELL UPDATE CONFIRM message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration, and “Receive PDCP sequence number”.

SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM. The UE shall respond to downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS responds with UE CAPABILITY INFORMATION CONFIRM message. SS resumes the transmission of PDCP PDUs and checks that all transmitted PDCP PDUs are sent back by the UE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 1 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 1a | | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 1b | | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 2a | | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 2b | | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 2c | | | Void | SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be sent back by the UE and then note the next PDCP SN for the next PDCP PDU. After last ciphering activation time has elapsed and there is no pending ciphering activation time, SS applies the downlink transmission power settings, according to the values in columns "T1" of table 7.3.3.7. The UE shall find that the cell 2 is better for service and perform a reselection. SS waits for the maximum duration required for the UE to camp to cell 3. |
| 3 | → | | URA UPDATE | Value "change of URA" shall be indicated in IE "URA update cause" |

| | | | |
|---|---|---|---|
| 4 | ← | URA UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_FACH". New C-RNTI and U-RNTI identities are assigned to the UE. IE “Downlink counter synchronisation info” includes the next PCDP sequence number that SS is expected to receive from the UE, otherwise only IE “Downlink counter synchronisation info” is included. New integrity protection configuration is applied on DL SRB1. LAI and RAI of cell 2 are given to the UE, and are the same as cell 1. |
| 5 | → | UTRAN MOBILITY INFORMATION CONFIRM | New calculated START value is included. IE “Receive PDCP sequence number” shall be included. New integrity protection configuration is applied on UL SRB2. |
| 6 | ← | UE CAPABILITY ENQUIRY | New integrity protection configuration is applied on DL SRB2. |
| 7 | → | UE CAPABILITY INFORMATION | SS confirms that new integrity protection configuration is applied on UL SRB2 by UE. |
| 8 | ← | UE CAPABILITY INFORMATION CONFIRM | |
| 9 | | Void | |
| 10 | | Void | |
| | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 11 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 12 | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 13 | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 14 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |

| | | | |
|---|---|---|---|
| 15 | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 16 | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 17 | | Void | |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

URA UPDATE (Step 3)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| URA Update Cause | Check to see if set to “change of URA” |

URA UPDATE CONFIRM (Step 4)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | Not present |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC Identity<br><br>- S-RNTI<br><br>New C-RNTI<br>CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>Downlink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info | <br><br>An arbitrary 12-bits string which is different from original SRNC<br>An arbitrary 20-bits string which is different from original S-RNTI<br>Not Present<br><br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H<br><br>This IE is included<br><br>20<br>The next PCDP sequence number that SS is expected to receive from the UE.(X) |

UTRAN MOBILITY INFORMATION CONFIRM (Step 5)

The same message sub-type found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink DCCH with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info<br><br>- START list | <br>This IE is checked<br><br>20<br>Check that the PCDP sequence number is the next sequence number that SS would transmit to the UE.(X)<br>Check that this IE is correct value |

Content of PDCP Data PDUs used for entire test case

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

UE CAPABILITY ENQUIRY (Step 6)

Use the same message sub-type found in [9] TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 7)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Step 8)

Use the same message sub-type found in [9] TS 34.108 clause 9.

#### 7.3.3.7.5 Test requirement

After step 1, UE shall transmit back all the PDCP PDUs sent by the SS to the UE.

After step 2, UE shall transmit URA UPDATE message with the value of IE “URA update cause” set to “change of URA”.

After step 4, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC which includes which includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using the new FRESH value as included in IE ”Integrity protection initialisation number” in IE ”Integrity protection mode info” in UTRAN MOBILITY INFORMATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. This message shall also include IE “Receive PDCP sequence number” for RB#20.

After step 6, the UE shall respond with a UE CAPABILITY INFORMATION message to SS.

After step 9, the UE shall respond with an IDENTITY RESPONSE message to SS and apply new ciphering configuration on UL SRB3.

After step 10, UE shall start transmission on the RAB beginning with the PDCP SN equal to that included in the UTRAN MOBILITY INFORMATION CONFIRM message.

### 7.3.3.8 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Lossless SRNS relocation) (without pending of ciphering)

#### 7.3.3.8.1 Definition

#### 7.3.3.8.2 Conformance requirement

1> if the reconfiguration procedure is simultaneous with SRNS relocation procedure:

2> if the transmitted message is a RADIO BEARER RECONFIGURATION:

3> include the IE "New U-RNTI".

2> else:

3> include the IE "Downlink counter synchronisation info".

The UE shall:

1> if the received reconfiguration message included the IE "Downlink counter synchronisation info";

2> re-establish RB2;

2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN component of COUNT-C for RB2;

2> calculate the START value according to subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".

1> if the variable PDCP_SN_INFO is not empty:

2> include the IE "RB with PDCP information list" and set it to the value of the variable PDCP_SN_INFO.

1> if the IE "Integrity protection mode info" was present in the received reconfiguration message:

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted response message.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition, and the UE shall:

1> if the IE "Downlink counter synchronisation info" was included in the reconfiguration message;

2> when RLC has confirmed the successful transmission of the response message:

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of COUNT-C values of all UM RLC entities to zero;

3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].

1> if the variable PDCP_SN_INFO is non-empty:

2> when RLC has confirmed the successful transmission of the response message:

3> for each radio bearer in the variable PDCP_SN_INFO:

4> if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":

5> configure the RLC entity for that radio bearer to "continue".

3> perform the actions below.

Reference

3GPP TS 25.331 clause 8.2.2.

#### 7.3.3.8.3 Test purpose

1. To confirm that the UE performs a combined hard handover and SRNS relocation and then transmit a RADIO BEARER SETUP COMPLETE message in the new cell.

2. In the case that ciphering is applied by the network, to confirm that the UE applies the new ciphering algorithm following a successful SRNS relocation.

#### 7.3.3.8.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2

UE: PS-DCCH _DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Initial conditions message sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| SS executes procedure Activate closed loop mode 1 in CELL_DCH case as specified in clause 7.3.1.2.1.4 | | | | |

Related ICS/IXIT statements

- Lossless SRNS relocation supported yes/no

- Support of RLC in-sequence delivery Yes/No

Specific Message Content

If network applies ciphering, the contents of SECURITY MODE COMMAND message in the initial condition set-up are identical to the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA0 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN + 2 |

For RADIO BEARER SETUP message to be transmitted during P13 as specified in TS 34.108 clause 7.4, use the message titled “Packet to CELL_DCH from CELL_DCH in PS” as found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| RAB information for setup | |
| - RAB info | |
| - RAB identity | 0000 0101B |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | UseT315 |
| - RB information to setup | |
| - RB identity | 20 |
| - PDCP info | |
| - Support for lossless SRNS relocation | TRUE |
| - Max PDCP SN window size | sn65535 |
| - PDCP PDU header | present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |

| | |
|---|---|
| - Logical channel identity | 7 |

Test Procedure

**Table 7.3.3.8**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Ch. 1 | | Ch. 1 | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |

Table 7.3.3.8 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_DCH state, camping onto cell 1. If PS RAB has been established in the initial condition, SS initiates UE to enter loopback mode 1 and sends a PDCP PDU on the RAB. If ciphering is supported, the a PDCP PDUs has to be decided so that the ciphering activation time is elapsed. SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be send back by the UE and then note the next PDCP SN for the next PDCP PDU. SS configures its downlink transmission power settings according to columns "T1" in table 7.3.3.8. The SS sends a RADIO BEARER SETUP message on the downlink DCCH using AM RLC requesting the UE to do a handover combined with SRNS relocation. This message includes IE "RRC State Indicator" set to "CELL_DCH", IE “Downlink counter synchronisation info” and IE “Integrity protection mode info”. UE shall reselect to cell 2 and SS verifies that the UE sends RADIO BEARER SETUP COMPLETE message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in RADIO BEARER SETUP message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration, and “Receive PDCP sequence number”.

SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM. The UE shall respond to downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS responds with UE CAPABILITY INFORMATION CONFIRM message. SS resumes the transmission of PDCP PDUs and checks that all transmitted PDCP PDUs are sent back by the UE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 1 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 1a | | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 1b | | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 2a | | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 2b | | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 2c | | | Void | SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be sent back by the UE and then note the next PDCP SN for the next PDCP PDU. SS applies the downlink transmission power settings, according to the values in columns "T1" of table 7.3.3.8. |

| | | | |
|---|---|---|---|
| 3 | ← | RADIO BEARER SETUP | If IE “Ciphering mode info” is present in the SECURITY MODE COMMAND during initial condition set-up, this message is sent after last ciphering activation time has elapsed and there is no pending ciphering activation time. IE “Downlink counter synchronisation info” includes the next PCDP sequence number that SS is expected to receive from the UE, otherwise only IE “Downlink counter synchronisation info” is included. New integrity protection configuration is applied on DL SRB1. LAI and RAI of cell 2 are given to the UE, and are the same as cell 1. |
| 4 | → | RADIO BEARER SETUP COMPLETE | The UE shall transmit this message after it reselects to cell 2. New calculated START value is included. IE “Receive PDCP sequence number” shall be included. New integrity protection configuration is applied on UL SRB2. If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on UL SRB2 with the downlink and uplink values of the HFN component of COUNT-C for SRB2 is incremented by one. |
| 5 | ← | UE CAPABILITY ENQUIRY | New integrity protection configuration is applied on DL SRB2. If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on DL SRB2 with the same value as used in step 4. |
| 6 | → | UE CAPABILITY INFORMATION | SS confirms that new integrity protection configuration is applied on UL SRB2 by UE. |
| 7 | ← | UE CAPABILITY INFORMATION CONFIRM | |
| 8 | | Void | |
| 9 | | Void | |
| | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 10 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |

| | | | |
|---|---|---|---|
| 11 | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 12 | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 13 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 14 | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 15 | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 16 | | | If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on UL and DL RAB using the re-initialised COUNT-C HFN by the start value as stored in step 4. |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

RADIO BEARER SETUP for PS only UE (Step 3)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Packet to CELL_DCH from CELL_DCH in PS”, with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to "Not present". If network applies ciphering, this IE present with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA1 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 20 |
| - RLC sequence number | Current RLC SN+2 |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| RAB information for setup<br>- RAB info<br>- RAB identity<br>- CN domain identity<br>- NAS Synchronization Indicator<br>- Re-establishment timer<br>- RB information to setup<br>- RB identity<br>- PDCP info<br>- Support for lossless SRNS relocation<br>- Max PDCP SN window size<br>- PDCP PDU header<br>- Header compression information<br>- CHOICE RLC info type<br>- CHOICE Uplink RLC mode<br>- Transmission RLC discard<br>- SDU discard mode<br>- MAX_DAT<br>- Transmission window size<br>- Timer_RST<br>- Max_RST<br>- Polling info<br>- Timer_poll_prohibit<br>- Timer_poll<br>- Poll_PDU<br>- Poll_SDU<br>- Last transmission PDU poll<br>- Last retransmission PDU poll | <br><br>0000 1100B<br>PS domain<br>Not Present<br>UseT315<br><br>12<br><br>FALSE<br>Not present<br>Absent<br>Not present<br>RLC info<br>AM RLC<br><br>No discard<br>15<br>128<br>500<br>4<br><br>200<br>200<br>Not Present<br>1<br>TRUE<br>TRUE |

| | |
|---|---|
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 8 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| Downlink counter synchronisation info | |
| - RB with PDCP information list | This IE is included |
| - RB with PDCP information | |
| - RB identity | 20 |
| - PDCP SN info | The next PCDP sequence number that SS is expected to receive from the UE. |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 2 |

RADIO BEARER SETUP for CS only UE (Step 3)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Non speech to CELL_DCH from CELL_DCH in CS”, with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to "Not present". If network applies ciphering, this IE present with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA1 |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256 |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+2 |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| RAB information for setup<br>- RAB info<br>- RAB identity<br>- CN domain identity<br>- NAS Synchronization Indicator<br>- Re-establishment timer<br>- RB information to setup<br>- RB identity<br>- PDCP info<br>- CHOICE RLC info type<br>- CHOICE Uplink RLC mode<br>- Transmission RLC discard<br>- Segmentation indication<br>- CHOICE Downlink RLC mode<br>- Segmentation indication<br>- RB mapping info<br>- Information for each multiplexing option<br>- RLC logical channel mapping indicator<br>- Number of uplink RLC logical channels<br>- Uplink transport channel type<br>- UL Transport channel identity<br>- Logical channel identity<br>- CHOICE RLC size list<br>- MAC logical channel priority<br>- Downlink RLC logical channel info<br>- Number of downlink RLC logical channels<br>- Downlink transport channel type<br>- DL DCH Transport channel identity<br>- DL DSCH Transport channel identity<br>- Logical channel identity | <br><br>0000 1100B<br>CS domain<br>Not Present<br>UseT314<br><br>13<br>Not Present<br>RLC info<br>TM RLC<br>Not Present<br>FALSE<br>TM RLC<br>FALSE<br><br><br>Not Present<br>1<br>DCH<br>1<br>Not Present<br>Configured<br>8<br><br>1<br>DCH<br>6<br>Not Present<br>Not Present |

| | |
|---|---|
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not present |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

RADIO BEARER SETUP COMPLETE for PS only UE (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info<br><br>- RB identity<br>- PDCP SN info<br><br>- START list | <br>This IE is checked.<br><br>12<br>Check that the PCDP sequence number is the next sequence number that SS would transmit to the UE.<br>20<br>Check that the PCDP sequence number is the next sequence number that SS would transmit to the UE.<br>Check that this IE is present. |

RADIO BEARER SETUP COMPLETE for CS only UE (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Not present<br>Check that this IE is present. |

Content of PDCP Data PDUs used for entire test case

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

UE CAPABILITY ENQUIRY (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 6)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Step 7)

Use the same message sub-type found in [9] TS 34.108 clause 9.

### 7.3.3.8.5 Test requirement

After step 1, UE shall transmit back all the PDCP PDUs sent by the SS to the UE.

After step 3, the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the uplink DCCH using AM RLC which includes which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection

initialisation number" in IE "Integrity protection mode info" in RADIO BEARER SETUP message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. This message shall also include IE "Receive PDCP sequence number" for RB#20.

After step 5, the UE shall respond with a UE CAPABILITY INFORMATION message to SS.

After step 9, UE shall start transmission on the RAB beginning with the PDCP SN equal to that included in the RADIO BEARER RECONFIGURATION COMPLETE message.

### 7.3.3.9 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Lossless SRNS relocation) (without pending of ciphering)

#### 7.3.3.9.1 Definition

#### 7.3.3.9.2 Conformance requirement

1> if the reconfiguration procedure is simultaneous with SRNS relocation procedure:

2> if the transmitted message is a RADIO BEARER RECONFIGURATION:

3> include the IE "New U-RNTI".

2> else:

3> include the IE "Downlink counter synchronisation info".

The UE shall:

1> if the received reconfiguration message is a RADIO BEARER RECONFIGURATION and the IE "New U-RNTI" is included:

2> re-establish RB2;

2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN component of COUNT-C for RB2;

2> calculate the START value according to subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".

1> if the variable PDCP_SN_INFO is not empty:

2> include the IE "RB with PDCP information list" and set it to the value of the variable PDCP_SN_INFO.

1> if the IE "Integrity protection mode info" was present in the received reconfiguration message:

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted response message.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition, and the UE shall:

1> if the received reconfiguration message is a RADIO BEARER RECONFIGURATION and the IE "New U-RNTI" is included:

2> when RLC has confirmed the successful transmission of the response message:

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of COUNT-C values of all UM RLC entities to zero;

3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].

1> if the variable PDCP_SN_INFO is non-empty:

2> when RLC has confirmed the successful transmission of the response message:

3> for each radio bearer in the variable PDCP_SN_INFO:

4> if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":

5> configure the RLC entity for that radio bearer to "continue".

3> perform the actions below.

Reference

3GPP TS 25.331 clause 8.2.2.

### 7.3.3.9.3 Test purpose

1. To confirm that the UE performs a combined hard handover and SRNS relocation and then transmit a RADIO BEARER RECONFIGURATION COMPLETE message in the new cell.
2. In the case that ciphering is applied by the network, to confirm that the UE applies the new ciphering algorithm following a successful SRNS relocation.

### 7.3.3.9.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2

UE: PS-DCCH+ DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Initial conditions message sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| SS executes procedure Activate closed loop mode 1 in CELL_DCH case as specified in clause 7.3.1.2.1.4 | | | | |

Related ICS/IXIT statements

- Lossless SRNS relocation supported yes/no

- Support of RLC in-sequence delivery Yes/No

Specific Message Content

If network applies ciphering, the contents of SECURITY MODE COMMAND message in the initial condition set-up are identical to the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA1 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN + 2 |

For RADIO BEARER SETUP message to be transmitted during P13 as specified in TS 34.108 clause 7.4, use the message titled “Packet to CELL_DCH from CELL_DCH in PS” as found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PDCP info | |
| - Support for lossless SRNS relocation | TRUE |
| - Max PDCP SN window size | sn65535 |
| - PDCP PDU header | present |

Test Procedure

**Table 7.3.3.9**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Ch. 1 | | Ch. 1 | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |

Table 7.3.3.9 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_DCH state, camping onto cell 1. If PS RAB has been established in the initial condition, SS initiates UE to enter loopback mode 1. If ciphering is supported a PDCP PDU has to be decided so that the ciphering activation time is elapsed. SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be send back by the UE and then note the next PDCP SN for the next PDCP PDU. SS configures its downlink transmission power settings according to columns "T1" in table 7.3.3.9. The SS sends a RADIO BEARER RECONFIGURATION message on the downlink DCCH using AM RLC requesting the UE to do a handover combined with SRNS relocation. This message includes IE "RRC State Indicator" set to "CELL_DCH", IE “New U-RNTI” and IE “Integrity protection mode info”. UE shall reselect to cell 2 and SS verifies that the UE sends RADIO BEARER RECONFIGURATION COMPLETE message. This message also includes a calculated new START value according to the formula “$START_X'$ = $MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in RADIO BEARER SETUP message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration, and “Receive PDCP sequence number”.

SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM. The UE shall respond to downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS responds with UE CAPABILITY INFORMATION CONFIRM message. SS resumes the transmission of PDCP PDUs and checks that all transmitted PDCP PDUs are sent back by the UE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 1 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 1a | | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 1b | | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 2a | | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 2b | | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 2c | | | Void | SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be sent back by the UE and then note the next PDCP SN for the next PDCP PDU. SS applies the downlink transmission power settings, according to the values in columns "T1" of table 7.3.3.8. |

| | | | |
|---|---|---|---|
| 3 | ← | RADIO BEARER RECONFIGURATION | If IE “Ciphering mode info” is present in the SECURITY MODE COMMAND during initial condition set-up, this message is sent after last ciphering activation time has elapsed and there is no pending ciphering activation time. IE “RB information to reconfigure” includes the next PCDP sequence number that SS is expected to receive from the UE. New integrity protection configuration is applied on DL SRB1. LAI and RAI of cell 2 are given to the UE, and are the same as cell 1. |
| 4 | → | RADIO BEARER RECONFIGURATION COMPLETE | The UE shall transmit this message after it reselects to cell 2. New calculated START value is included. IE “Receive PDCP sequence number” shall be included. New integrity protection configuration is applied on UL SRB2. If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on UL SRB2 with the downlink and uplink values of the HFN component of COUNT-C for SRB2 is incremented by one. |
| 5 | ← | UE CAPABILITY ENQUIRY | New integrity protection configuration is applied on DL SRB2. If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on DL SRB2 with the same value as used in step 4. |
| 6 | → | UE CAPABILITY INFORMATION | SS confirms that new integrity protection configuration is applied on UL SRB2 by UE. |
| 7 | ← | UE CAPABILITY INFORMATION CONFIRM | |
| 8 | | Void | |
| 9 | | Void | |
| | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 10 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 11 | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |

| | | | |
|---|---|---|---|
| 12 | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 13 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 14 | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 15 | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 16 | | | If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on UL and DL RAB using the re-initialised COUNT-C HFN by the start value as stored in step 4. |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

RADIO BEARER RECONFIGURATION for PS only UE (Step 3)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Packet to CELL_DCH from CELL_DCH in PS”, with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to “Not present”. If network applies ciphering, this IE present with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA0 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 20 |
| - RLC sequence number | Current RLC SN+2 |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| RB information to reconfigure list<br>- RB information to reconfigure<br>- RB identity<br>- PDCP info<br>- PDCP SN info<br>- RLC info<br>- CHOICE Uplink RLC mode<br>- Transmission RLC discard<br>- SDU discard mode<br>- MAX_DAT<br>- Transmission window size<br>- Timer_RST<br>- Max_RST<br>- Polling info<br>- Timer_poll_prohibit<br>- Timer_poll<br>- Poll_PDU<br>- Poll_SDU<br>- Last transmission PDU poll<br>- Last retransmission PDU poll<br>- Poll_Window<br>- Timer_poll_periodic<br>- CHOICE Downlink RLC mode<br>- In-sequence delivery<br>- Receiving window size<br>- Downlink RLC status info<br>- Timer_status_prohibit<br>- Timer_EPC | <br>(AM DCCH for RRC)<br>2<br>Not Present<br>Not Present<br><br>AM RLC<br><br>No discard<br>15<br>128<br>400<br>4<br><br>150<br>150<br>Not present<br>1<br>TRUE<br>TRUE<br>99<br>Not Present<br>AM RLC<br>TRUE<br>128<br><br>200<br>Not present |

| | |
|---|---|
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 400 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 400 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 400 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 20 |

| | |
|---|---|
| - PDCP info | |
| - Support for lossless SRNS relocation | TRUE |
| - Max PDCP SN window size | sn65535 |
| - PDCP PDU header | Present |
| - Header compression information | Not present |
| - PDCP SN info | The next PCDP sequence number that SS is expected to receive from the UE |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 400 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 2 |

RADIO BEARER RECONFIGURATION for CS only UE (Step 3)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Speech in CS” or “Non speech in CS”, with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to “Not present”. If network applies ciphering, this IE present with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA1 |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256 |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+2 |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| RB information to reconfigure list<br>- RB information to reconfigure<br>- RB identity<br>- PDCP info<br>- PDCP SN info<br>- RLC info<br>- CHOICE Uplink RLC mode<br>- Transmission RLC discard<br>- SDU discard mode<br>- MAX_DAT<br>- Transmission window size<br>- Timer_RST<br>- Max_RST<br>- Polling info<br>- Timer_poll_prohibit<br>- Timer_poll<br>- Poll_PDU<br>- Poll_SDU<br>- Last transmission PDU poll<br>- Last retransmission PDU poll<br>- Poll_Window<br>- Timer_poll_periodic<br>- CHOICE Downlink RLC mode<br>- In-sequence delivery<br>- Receiving window size<br>- Downlink RLC status info<br>- Timer_status_prohibit<br>- Timer_EPC<br>- Missing PDU indicator<br>- Timer_STATUS_periodic | <br>(AM DCCH for RRC)<br>2<br>Not Present<br>Not Present<br><br>AM RLC<br><br>No discard<br>15<br>128<br>400<br>4<br><br>150<br>150<br>Not present<br>1<br>TRUE<br>TRUE<br>99<br>Not Present<br>AM RLC<br>TRUE<br>128<br><br>200<br>Not present<br>TRUE<br>400 |

| | |
|---|---|
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 400 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 400 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 2 |

RADIO BEARER RECONFIGURATION COMPLETE for PS only UE (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info<br><br>- START list | <br>This IE is checked<br><br>20<br>Check that the PCDP sequence number is the next sequence number that SS would transmit to the UE.<br>Check that this IE is present. |

RADIO BEARER RECONFIGURATION COMPLETE for CS only UE (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Not present<br>Check that this IE is present. |

Content of PDCP Data PDUs used for entire test case

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

UE CAPABILITY ENQUIRY (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 6)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Step 7)

Use the same message sub-type found in [9] TS 34.108 clause 9.

### 7.3.3.9.5 Test requirement

After step 1, UE shall transmit back all the PDCP PDUs sent by the SS to the UE.

After step 3, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC which includes which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in RADIO BEARER RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. This message shall also include IE "Receive PDCP sequence number" for RB#20.

After step 5, the UE shall respond with a UE CAPABILITY INFORMATION message to SS.

After step 9, UE shall start transmission on the RAB beginning with the PDCP SN equal to that included in the RADIO BEARER RECONFIGURATION COMPLETE message.

### 7.3.3.10 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (Lossless SRNS relocation) (without pending of ciphering)

#### 7.3.3.10.1 Definition

#### 7.3.3.10.2 Conformance requirement

1> if the reconfiguration procedure is simultaneous with SRNS relocation procedure:

2> if the transmitted message is a RADIO BEARER RECONFIGURATION:

3> include the IE "New U-RNTI".

2> else:

3> include the IE "Downlink counter synchronisation info".

The UE shall:

1> if the received reconfiguration message included the IE "Downlink counter synchronisation info";

2> re-establish RB2;

2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN component of COUNT-C for RB2;

2> calculate the START value according to subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".

1> if the variable PDCP_SN_INFO is not empty:

2> include the IE "RB with PDCP information list" and set it to the value of the variable PDCP_SN_INFO.

1> if the IE "Integrity protection mode info" was present in the received reconfiguration message:

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted response message.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition, and the UE shall:

1> if the IE "Downlink counter synchronisation info" was included in the reconfiguration message;

2> when RLC has confirmed the successful transmission of the response message:

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of COUNT-C values of all UM RLC entities to zero;

3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].

1> if the variable PDCP_SN_INFO is non-empty:

2> when RLC has confirmed the successful transmission of the response message:

3> for each radio bearer in the variable PDCP_SN_INFO:

4> if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":

5> configure the RLC entity for that radio bearer to "continue".

3> perform the actions below.

Reference

3GPP TS 25.331 clause 8.2.2.

7.3.3.10.3 Test purpose

To confirm that the UE performs a combined hard handover and SRNS relocation and then transmit a RADIO BEARER RELEASE COMPLETE message in the new cell.

7.3.3.10.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2

UE: PS -DCCH _DCH (state 6-7) or PS-DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Initial conditions message sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| SS executes procedure Activate closed loop mode 1 in CELL_DCH or CELL_FACH–as specified in clause 7.3.1.2.1.4 | | | | |
| 1a | | | SS executes procedure P21 (clause 7.4.2.1.2 of TS 34.108) | (PS+PS DCCH+DTCH_DCH) |
| 1b | | | SS executes procedure P23 (clause 7.4.2.1.2 of TS 34.108) | (PS+CS DCCH+DTCH_DCH) |

Note: depending on CN domain(s) supported, either step 1a or step 1b shall be executed in order to reach the final initial condition state for this test case.

Related ICS/IXIT statements

- Lossless SRNS relocation supported yes/no

- Support of RLC in-sequence delivery Yes/No

Specific Message Content

If network applies ciphering, the contents of SECURITY MODE COMMAND message in the initial condition set-up are identical to the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA1 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN + 2 |

For RADIO BEARER SETUP message to be transmitted during P13 as specified in TS 34.108 clause 7.4, use the message titled “Packet to CELL_DCH from CELL_DCH in PS” as found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PDCP info | |
| - Support for lossless SRNS relocation | TRUE |
| - Max PDCP SN window size | sn65535 |
| - PDCP PDU header | present |

Test Procedure

**Table 7.3.3.10**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Ch. 1 | | Ch. 1 | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |

Table 7.3.3.10 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_DCH state, camping onto cell 1. If PS RAB has been established in the initial condition, SS initiates UE to enter loopback mode 1 and sends a PDCP PDUs on the RAB. If ciphering is supported, a PDCP PDU has to be decided so that the ciphering activation time is elapsed. SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be send back by the UE and then note the next PDCP SN for the next PDCP PDU. SS configures its downlink transmission power settings according to columns "T1" in table 7.3.3.10. The SS sends a RADIO BEARER RELEASE message on the downlink DCCH using AM RLC requesting the UE to do a handover combined with SRNS relocation. This message includes IE "RRC State Indicator" set to "CELL_DCH", IE “Downlink counter synchronisation info” and IE “Integrity protection mode info”. UE shall reselect to cell 2 and SS verifies that the UE sends RADIO BEARER RELEASE COMPLETE message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in RADIO BEARER RELEASE message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration, and “Receive PDCP sequence number”.

SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM. The UE shall respond to downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS resumes the transmission of PDCP PDUs and checks that all transmitted PDCP PDUs are sent back by the UE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 1 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 1a | | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 1b | | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 2a | | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 2b | | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 2c | | | Void | SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be sent back by the UE and then note the next PDCP SN for the next PDCP PDU. SS applies the downlink transmission power settings, according to the values in columns "T1" of table 7.3.3.10 |

| | | | |
|---|---|---|---|
| 3 | ← | RADIO BEARER RELEASE | This message is sent after last ciphering activation time has elapsed and there is no pending ciphering activation time. IE "RB information to reconfigure" includes the next PCDP sequence number that SS is expected to receive from the UE. New integrity protection configuration is applied on DL SRB1. LAI and RAI of cell 2 are given to the UE, and are the same as cell 1. |
| 4 | → | RADIO BEARER RELEASE COMPLETE | The UE shall transmit this message after it reselects to cell 2. New calculated START value is included. IE "Receive PDCP sequence number" shall be included. New integrity protection configuration is applied on UL SRB2. |
| 5 | ← | UE CAPABILITY ENQUIRY | New integrity protection configuration is applied on DL SRB2. |
| 6 | → | UE CAPABILITY INFORMATION | SS confirms that new integrity protection configuration is applied on UL SRB2 by UE. |
| 7 | ← | UE CAPABILITY INFORMATION CONFIRM | |
| 8 | | Void | |
| 9 | | Void | |
| | | | The SS creates a TCP/IP packet without IP header compression PDCP Data PDU). |
| 10 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 11 | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 12 | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 13 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |

| | | | |
|---|---|---|---|
| 14 | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 15 | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 16 | | Void | |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

RADIO BEARER RELEASE for PS only UE (Step 3)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | Not present |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| RB information to release<br>- RB identity | <br>18 |
| Downlink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info | <br>This IE is included<br><br>20<br>The next PCDP sequence number that SS is expected to receive from the UE. |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

RADIO BEARER RELEASE for CS only UE (Step 3)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | Not present |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| RB information to release<br>- RB identity | <br>13 |
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not present |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

RADIO BEARER RELEASE COMPLETE for PS only UE (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info<br><br>- START list | <br>This IE is checked<br><br>20<br>Check that the PCDP sequence number is the next sequence number that SS would transmit to the UE.<br>Check that this IE is present. |

RADIO BEARER RELEASE COMPLETE for CS only UE (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Not present<br>Check that this IE is present. |

Content of PDCP Data PDUs used for entire test case

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

UE CAPABILITY ENQUIRY (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 6)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Step 7)

Use the same message sub-type found in [9] TS 34.108 clause 9.

#### 7.3.3.10.5 Test requirement

After step 1, UE shall transmit back all the PDCP PDUs sent by the SS to the UE.

After step 3, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC which includes which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in RADIO BEARER RELEASE message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. This message shall also include IE "Receive PDCP sequence number" for RB#20.

After step 5, the UE shall respond with a UE CAPABILITY INFORMATION message to SS.

After step 9, UE shall start transmission on the RAB beginning with the PDCP SN equal to that included in the RADIO BEARER RELEASE COMPLETE message.

### 7.3.3.11 Transport Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Lossless SRNS relocation) (without pending of ciphering)

#### 7.3.3.11.1 Definition

#### 7.3.3.11.2 Conformance requirement

1> if the reconfiguration procedure is simultaneous with SRNS relocation procedure:

2> if the transmitted message is a RADIO BEARER RECONFIGURATION:

3> include the IE "New U-RNTI".

2> else:

3> include the IE "Downlink counter synchronisation info".

The UE shall:

1> if the received reconfiguration message included the IE "Downlink counter synchronisation info"; or

2> re-establish RB2;

2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN component of COUNT-C for RB2;

2> calculate the START value according to subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".

1> if the variable PDCP_SN_INFO is not empty:

2> include the IE "RB with PDCP information list" and set it to the value of the variable PDCP_SN_INFO.

1> if the IE "Integrity protection mode info" was present in the received reconfiguration message:

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted response message.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition, and the UE shall:

1> if the IE "Downlink counter synchronisation info" was included in the reconfiguration message; or

2> when RLC has confirmed the successful transmission of the response message:

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of COUNT-C values of all UM RLC entities to zero;

3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].

1> if the variable PDCP_SN_INFO is non-empty:

2> when RLC has confirmed the successful transmission of the response message:

3> for each radio bearer in the variable PDCP_SN_INFO:

4> if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":

5> configure the RLC entity for that radio bearer to "continue".

3> perform the actions below.

Reference

3GPP TS 25.331 clause 8.2.2.

### 7.3.3.11.3 Test purpose

To confirm that the UE performs a combined hard handover and SRNS relocation and then transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message in the new cell.

### 7.3.3.11.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2

UE: PS-DCCH _DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Initial conditions message sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| SS executes procedure Activate closed loop mode 1 in CELL_DCH case as specified in clause 7.3.1.2.1.4 | | | | |

Related ICS/IXIT statements

- Lossless SRNS relocation supported yes/no

- Support of RLC in-sequence delivery Yes/No

Specific Message Content

If network applies ciphering, the contents of SECURITY MODE COMMAND message in the initial condition set-up are identical to the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA1 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN + 2 |

For RADIO BEARER SETUP message to be transmitted during P13 as specified in TS 34.108 clause 7.4, use the message titled “Packet to CELL_DCH from CELL_DCH in PS” as found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PDCP info | |
| - Support for lossless SRNS relocation | TRUE |
| - Max PDCP SN window size | sn65535 |
| - PDCP PDU header | present |

Test Procedure

**Table 7.3.3.11**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Ch. 1 | | Ch. 1 | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |

Table 7.3.3.11 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_DCH state, camping onto cell 1. If PS RAB has been established in the initial condition, SS initiates UE to enter loopback mode 1 and sends a PDCP PDU on the RAB. If ciphering is supported, a PDCP PDU has to be decided so that the ciphering activation time is elapsed. SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be send back by the UE and then note the next PDCP SN for the next PDCP PDU. SS configures its downlink transmission power settings according to columns "T1" in table 7.3.3.11. The SS sends a TRANSPORT CHANNEL RECONFIGURATION message requesting the UE to do a handover combined with SRNS relocation. This message includes IE "RRC State Indicator" set to "CELL_DCH", IE “Downlink counter synchronisation info” and IE “Integrity protection mode info”. UE shall reselect to cell 2 and SS verifies that the UE sends TRANSPORT CHANNEL RECONFIGURATION COMPLETE message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in TRANSPORT CHANNEL RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration, and “Receive PDCP sequence number”.

SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM. The UE shall respond to downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS resumes the transmission of PDCP PDUs and checks that all transmitted PDCP PDUs are sent back by the UE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 1 | ← | | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 1a | | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 1b | | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 2a | | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 2b | | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 2c | | | Void | SS shall suspend the sending of PDCP PDUs and wait for the last PDCP PDU to be sent back by the UE and then note the next PDCP SN for the next PDCP PDU. SS applies the downlink transmission power settings, according to the values in columns "T1" of 7.3.3.11. |
| 3 | ← | | TRANSPORT CHANNEL RECONFIGURATION | This message is sent after last ciphering activation time has elapsed and there is no pending ciphering activation time. IE “RB information to reconfigure” includes the next PCDP sequence number that SS is expected to receive from the UE. New integrity protection configuration is applied on DL SRB1. LAI and RAI of cell 2 are given to the UE, and are the same as cell 1. |

| | | | |
|---|---|---|---|
| 4 | → | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | The UE shall transmit this message after it reselects to cell 2. New calculated START value is included. IE "Receive PDCP sequence number" shall be included. New integrity protection configuration is applied on UL SRB2. |
| 5 | ← | UE CAPABILITY ENQUIRY | New integrity protection configuration is applied on DL SRB2. |
| 6 | → | UE CAPABILITY INFORMATION | SS confirms that new integrity protection configuration is applied on UL SRB2 by UE. |
| 7 | ← | UE CAPABILITY INFORMATION CONFIRM | |
| 8 | | Void | |
| 9 | | Void | |
| | | | The SS creates a TCP/IP packet without IP header compression (PDCP Data PDU). |
| 10 | ← | PDCP Data | The SS sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content to the UE:<br>PDU type = 000 (PDCP Data PDU)<br>PID = 0 (uncompressed IP header)<br>data: below described TCP/IP packet |
| 11 | | | After having received the PDCP Data PDU, the UE decodes the PDU and recognizes PID value = 0 (no IP header compression) Therefore, no IP header decompression is applied for this packet.<br><br>The data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity. |
| 12 | | | The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 13 | → | PDCP Data | The UE sends a PDCP Data PDU using the RLC-AM-Data-Request Primitive with the following content back to the SS:<br>data: previously received TCP/IP packet |
| 14 | | | After reception of this TCP/IP data packet, the SS applies the appropriate decoding function for the received data |
| 15 | | | The SS creates a UDP/IP packet without IP header compression (PDCP Data PDU). |
| 16 | | Void | |
| Deactivate a UE terminated PS session using IP Header compression (using UE test loop mode 1) | | | |

Specific Message Contents

TRANSPORT CHANNEL RECONFIGURATION for PS only UE (Step 3)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Packet to CELL_DCH from CELL_DCH in PS”, with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | Not present. |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| Downlink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info | <br>This IE is included.<br><br>20<br>The next PCDP sequence number that SS is expected to receive from the UE. |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

TRANSPORT CHANNEL RECONFIGURATION for CS only UE (Step 3)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Speech in CS” or “Non speech in CS”, with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | Not present. |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not present |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

TRANSPORT CHANNEL RECONFIGURATION COMPLETE for PS only UE (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- RB with PDCP information<br>- RB identity<br>- PDCP SN info<br><br>- START list | <br>This IE is checked<br><br>20<br>Check that the PCDP sequence number is the next sequence number that SS would transmit to the UE.<br>Check that this IE is present. |

TRANSPORT CHANNEL RECONFIGURATION COMPLETE for CS only UE (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Not present<br>Check that this IE is present. |

Content of PDCP Data PDUs used for entire test case

| Information Element | Value/remark |
|---|---|
| PDU type<br>PID<br>Data | 000<br>00000 (No header compression, PID = 0)<br>PDCP test data type #1: TCP/IP data packet without IP header compression with any data content. The data shall be limited to 1500 bytes. |

UE CAPABILITY ENQUIRY (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 6)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Step 7)

Use the same message sub-type found in [9] TS 34.108 clause 9.

#### 7.3.3.11.5 Test requirement

After step 1, UE shall transmit back all the PDCP PDUs sent by the SS to the UE.

After step 3, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC which includes which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in TRANSPORT CHANNEL RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. This message shall also include IE "Receive PDCP sequence number" for RB#20.

After step 5, the UE shall respond with a UE CAPABILITY INFORMATION message to SS.

After step 9, UE shall start transmission on the RAB beginning with the PDCP SN equal to that included in the TRANSPORT CHANNEL RECONFIGURATION COMPLETE message.

## 7.3.4 PDCP configuration testing

### 7.3.4.1 PDCP configuration behaviour while RRC Radio bearer setup procedure

FFS

### 7.3.4.2 PDCP configuration behaviour while RRC Radio bearer release procedure

FFS

### 7.3.4.3 PDCP configuration behaviour while RRC Cell Update procedure

FFS

### 7.3.4.4 PDCP configuration behaviour for an invalid RRC configuration

FFS

## 7.3.5 PDCP RoHC testing

### 7.3.5.1 General

These test cases are only applicable for UEs supporting PDCP Rel-4 RoHC functions (based on IETF RFC 3095) as defined in TS 25.323 Release 4 onwards.

#### 7.3.5.1.1 Preamble for extended RoHC conformance testing

If PDCP RoHC feature is supported, the following message contents are used if different from TS 34.108, clause 9

Contents of CONNECTION SETUP message:

| Information Element | Value/remark |
|---|---|
| Capability update requirement | |
| - UE radio access capability update requirement | TRUE |
| - System specific capability update requirement list | UE only supports 1 system |

Contents of CONNECTION SETUP COMPLETE message:

| Information Element | Value/remark |
|---|---|
| UE radio access capability | Value will be checked. Stated capability must be compatible with 34.123-2 and the user settings |
| - Conformance test compliance | |
| - PDCP Capability | |
| - Max PDCP SN | |
| - Support of lossless SRNS relocation | |
| - Support for RFC3095 | |
| - CID inclusion info | PDCP header |
| - Max_CID | 15 |
| - Profiles | Profile instance (decompressor supported profiles : UDP/RTP/IPv6, UDP/IPv6 or ESP/IPv6 or IPv6) |
| - MRRU | Maximum reconstructed reception unit. Default value is 0 (no segmentation). |
| - Packet _Sizes_Allowed | Packet size as defined in RFC 3095 |
| - Reverse_Decompression_Depth | Determines whether reverse decompression should be used or not and the maximum number of packets that can be reverse decompressed by the decompressor. Default value is 0 (reverse decompression shall not be used). |
| - RLC Capability | |
| - Transport channel capability | |
| - RF Capability | |
| - Physical channel capability | |
| - UE multi-mode/multi-RAT capability | |
| - Security Capability | |
| - LCS Capability | |
| - Measurement capability | |
| UE system specific capability | Value will be check. UE must include the classmark information for the supported system |

### 7.3.5.2 Compression / Decompression of a UDP/RTP/IPv6 header flow

#### 7.3.5.2.1 UDP/RTP/IPv6 Unacknowledged - unidirectional Mode (U-Mode)

FFS

#### 7.3.5.2.2 UDP/RTP/IPv6 Unacknowledged - Normal U-mode Transmission (without ack)

FFS

#### 7.3.5.2.3 UDP/RTP/IPv6 Unacknowledged - Bi-directional Optimistic Mode (O-Mode)

FFS

#### 7.3.5.2.4 UDP/RTP/IPv6 Unacknowledged - Bi-directional Reliable Mode (R-Mode)

FFS

#### 7.3.5.2.5 UDP/RTP/IPv6 Unacknowledged - Transition Mode

FFS

#### 7.3.5.2.6 UDP/RTP/IPv6 Unacknowledged - Flow Parameters

FFS

#### 7.3.5.2.7 UDP/RTP/IPv6 Acknowledged - unidirectional Mode (U-Mode)

FFS

#### 7.3.5.2.8 UDP/RTP/IPv6 Acknowledged - Normal U-mode Transmission (without ack) using the UE as compressor

FFS

#### 7.3.5.2.9 UDP/RTP/IPv6 Acknowledged - Bi-directional Optimistic Mode (O-Mode)

FFS

#### 7.3.5.2.10 UDP/RTP/IPv6 Acknowledged - Bi-directional Reliable Mode (R-Mode)

FFS

#### 7.3.5.2.11 UDP/RTP/IPv6 Acknowledged - Transition Mode

FFS

#### 7.3.5.2.12 UDP/RTP/IPv6 Acknowledged - Flow Parameters

FFS

### 7.3.5.3 ROHC Profile 2,3 and 4. Compression / Decompression of a UDP/IPv6 or ESP/IPv6 or IPv6 header flow

#### 7.3.5.3.1 UDP/IPv6 or ESP/IPv6 or IPv6 Unacknowledged - unidirectional Mode (U-Mode)

FFS

#### 7.3.5.3.2 UDP/IPv6 or ESP/IPv6 or IPv6 Unacknowledged - Normal U-mode Transmission (without ack)

##### 7.3.5.3.2.1 Definition and applicability

Applicable for all UEs supporting PS PDCP ROHC header compression as describe in the RFC 3095. In this test case, compression unit of the UE and decompression unit of the UE is checked. The UE shall support Profile 2 (UDP/IPv6) streams.

##### 7.3.5.3.2.2 Conformance requirement

Reference(s)

TBD, refer to IETF RFC 3095 clause 5.3.

##### 7.3.5.3.2.3 Test purpose

To verify the unidirectional mode in the UE Decompressor unit without using acknowledgements.

##### 7.3.5.3.2.4 Method of test

Initial conditions

Setup a UE terminated PS session using IP Header compression in AM RLC (using UE test loop mode 1) and ROHC negotiation has been established.

Compressor parameters as negotiated for UE and SS compression unit:

Reset: Non

L:3

K_1/n_1: 1

K_2/n_2: 1

Timer1: 256 packets

Timer2: 256 packets

M_1: 4

M_2: 4

Decompressor parameters as negotiated for UE and SS compression unit:

Mode:U

Clock_resolution: TBD

Reverse_decompressor_depth: Non

RoHC parameter negotiation as done in RB setup message:

MAX_CID: 255

LARGE_CIDs: non

Profiles: 0x0001

Feedback_for : 16

MRRU : 0

The UE compressor shall work in unidirectional mode.

Related ICS/IXIT Statement(s)

Support of IP header compression protocol RFC 3095 - YES/NO.

Support of RoHC profile 2 (UDP/IPv6) – YES / NO

Support of PS – Yes/No

px_test_ROHC_IR_Packet1 as descript in IETF 3095

px_test _ROHC_IR_Packet 2 as descript in IETF 3095

px_test _ROHC_IR_Packet3 as descript in IETF 3095

px_test _ROHC_IR-DYN_Packet 4 to 6 as descript in IETF 3095

px_test _ROHC_UOR-2_Packet 7 to 9 as descript in IETF 3095

px_test ROHC error packet as descript in IETF 3095

Test procedure

Note: The unidirectional mode of operation has a transition logic based in 3 principles. These principles gives the upwards and downwards transition operation. The compressor controls this mode of operation and follows these principles to ensure the robustness of the protocol.

For this test case loop back mode 1 funtionality is used in order to loop all received IP data within the UE.

a) The SS compressor unit is triggered to send a IR-DYN packet (px_test_ROHC_IR_DYN_Packet1) as first compressed packet.

b) On UE side, the UE decompressor has to drop the packet and does not initialise the context. This means, it does not forward the IP packet to its upper layer, Therefore no packet is looped back to the SS decompressor. (UE decompressor is in U-mode, No_Context state)

c) The SS compressor unit starts sending IP compressed packets (test_ROHC_IR_Packet1) on initialisation level of compression. This is repeated L times (L = 3), i.e. px_test_ROHC_IR_Packet1 to px_test_ROHC_IR_Packet3 is sent to the UE.

d) After having decompressed the first IR packet, the UE decompressor stores the header as the static part of context and forwards the IP data to its upper layer (UE decompressor switches to Static-Context state, U-Mode). The UE decompressor has to receive these IR compressed packets repeated L times and loops them back to the SS.

e) The SS compressor starts sending IR-DYN compressed IP packets, repeated L (L = 3) times ), i.e. px_test_ROHC_IR-DYN_Packet1 to px_test_ROHC_IR-DYN_Packet3 is sent to the UE.

f) The UE decompressor stores the dynamic part of the header context and starts sending IP decompressed packets to upper layers (no the UE decompressor unit is in Full_Context state, U-Mode). The UE decompressor has to receive these IR-DYN compressed packets repeated L times and loops them back to the SS.

Note: If the UE Compressor sends the CRC in the compressed header packet then the SS Decompressor has to initialise the context.

g) The SS compressor sends an error packet (px_test ROHC error packet) to the UE decompressor unit.

h) The UE decompressor decreases its state from Full-Context to Static-Context (U-Mode).

i) The SS compressor sends UOR-2 packets (px_test _ROHC_UOR-2_packet 7 to 9) L times (L = 3). No UOR-2 packet shall be send to the SS compressor.

Note: The UE decompressor has to drop all the following packets unlees packets received containing 7-8bit CRC which can update the context.

Specific Message Contents for the preamble

RADIO BEARER SETUP message

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- RAB info<br>- RAB identity | <br><br>No. # 23 as described in TS 34.108, Table 6.10.2.1.1 Prioritised RABs.<br>QoS parameter:<br>Traffic Class: Interactive or Background,<br>max. UL: 64 kbps and max. DL: 64 kbps as described in TS 34.108, including described physical channel parameters, configuration for AM RLC<br><br>Residual BER as described in TS 34.108, clause: 6.10<br>Related Signalling RB UL: 3.4 kbps, DL: 3.4 kbps DCCH, No. #2 (as described in TS 34.108) |
| - CN domain identity | PS domain |
| - RB information to setup<br>- RB identity | <br>20 |
| - PDCP info<br>- Support of lossless SRNS relocation | <br>False<br>(IE "Support of lossless SRNS relocation" only present, if RLC "In-sequence delivery" is TRUE and in AM) |
| - PDCP PDU header<br>- Header compression information<br>CHOICE *algorithm type*<br>- RFC3095 | present<br>1<br><br> |
| - CID inclusion info | PDCP header |
| - Max_CID | 255 |
| - Profiles | Profile instance (decompressor supported profiles : 0x0001) |
| - MRRU | Maximum reconstructed reception unit. Default value is 0 (no segmentation). |
| - Packet _Sizes_Allowed | Packet size as defined in RFC 3095 |
| - Reverse_Decompression_Depth | Determines whether reverse decompression should be used or not and the maximum number of packets that can be reverse decompressed by the decompressor. Default value is 0 (reverse decompression shall not be used). |
| - RLC info<br>- Downlink RLC mode<br>- Uplink RLC mode | <br>(AM RLC)<br>(AM RLC) |

7.3.5.3.2.5 Test requirements

1. At step d), the UE has to loop back received IR packets to the SS decompressor in order to verify, that the decompression state was increased from No-Context state to Static-Context state (U-Mode).

2. At step f), the UE has to loop back received IR-DYN packets to the SS decompressor in order to verify, that the decompression state was increased from Static-Context state to Full-Context state(U-Mode).

3. At step i), the UE shall not loop back any received previously received UOR-2 packets to the SS decompressor in order to verify, that the decompression state was decreased from Full-Context state to Static-Context state (U-Mode).

## 7.3.6 PDCP RoHC performance testing

### 7.3.6.1 General

IETF RFC3095 "RObust Header Compression (ROHC)" [40] and RFC 4815: "RObust Header Compression (ROHC): Corrections and Clarifications to RFC 3095" [41] is the IP header compression method specially designed for real time

IP services over wireless links. ROHC is specified as part of the Rel-4 of UTRAN as one of the compression schemes to be provided by the PDCP sublayer in the RNC. If the UE supports IMS, as described in 3GPP 23.228 [42], the UE shall support header compression according to RFC 3095 as defined in 3GPP 25.323 [30].

ROHC performance requirements have been specified in Rel-5 of the 3GPP 25.323 [30]. The ROHC performance requirements and the corresponding test cases in this clause are specified for profile 0x0001 for compression of RTP/UDP/IP headers.

#### 7.3.6.1.1 Generic ROHC performance test procedure

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6a | --> | | SERVICE REQUEST (DCCH) | GMM |
| 6b | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 6c | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| 7 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 8 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 9 | <-- | | RADIO BEARER SETUP (DCCH) | RRC. |
| 10 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 11 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is set to TBD |
| 12 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 13 | <--> | | ROHC performance test execution | Execute the actual ROHC performance test case |
| 14 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 15 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 16 | <-- | | RRC CONNECTION RELEASE | RRC |
| 17 | --> | | RRC CONNECTION RELEASE COMPLETE | RRC |

Note 1 In addition to activate integrity protection Step 6b and Step 6c are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Specific Message Contents

RADIO BEARER SETUP message (Step 9)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS34.108 clause 9 Default Message Contents to setup 6.11.4e Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH, with the following exceptions:

| **Information Element** | **Value/remark** |
|---|---|
| RAB information for setup | |
| - RAB info | |
| - RAB identity | TBD |
| - CN domain identity | PS domain |
| - RB information to setup | |
| - RB identity | TBD |
| - PDCP info | |
| - Support of lossless SRNS relocation | FALSE |
| - Max PDCP SN window size | sn255 |
| - PDCP PDU header | present |
| - Header compression information | present |
| CHOICE *algorithm type* | |
| - RFC3095 | |
| - Profiles | 2 |
| - Profile instance | 1 |
| - Uplink | |
| - Max_CID | 15 |
| - Downlink | |
| - Max_CID | 15 |
| - Reverse_Decompression_Depth | 0 |
| - PDCP ROHC target mode | depends on test case |

## 7.3.6.2 Base test of ROHC RTP O-mode compressor

### 7.3.6.2.1 Definition and applicability

The purpose of the base test is to verify that the compressor implements an active and efficient compression for a regular IP/UDP/RTP packet stream, i.e. that it makes use of the most efficient compressed packet formats provided by ROHC RTP [40] for O-mode.

### 7.3.6.2.2 Conformance requirement

This subclause defines performance test cases for ROHC. The ROHC profile within scope is profile 0x0001 for compression of RTP/UDP/IP headers only. This subclause is not meant to bring incoherent limitations to implementations, and is not meant to create a sub-specification of RFC 3095 [40] either, as a consequence of the requirements on performance that it defines.

…

Compressor implementations are expected to implement robustness algorithms according to the optimistic approach for the U/O-modes of operation. The optimistic approach is the part of the selection of the packet format where a format that contains the necessary information to update a field is used a number N time, starting from the packet for which a new value has to be established in the decompressor context. While N is an implementation parameter, the metrics for each sequence in U/O-mode is expressed in terms of this parameter. Implementation should use the value N as an input parameter for the testing, to adapt to the expected robustness level required for the testing. The value of the parameter N is defined in test case definition separately (informative value is given in Annex B.2.3.). Similarly, R-mode operation requires that an update be conveyed to the decompressor until it gets acknowledged; however for R-mode, relevant test cases provide explicit feedback messages when necessary.

…

The feedback messages used in the test cases, when applicable, are artificially generated and interspersed with the input sequence of uncompressed packets. Feedback messages are generated according to the following format:

```
  0   1   2   3   4   5   6   7
+---+---+---+---+---+---+---+---+
| 1   1   1   1   0 |   Code    |  feedback type octet
+---+---+---+---+---+---+---+---+
|Acktype| Mode  |      SN       |
+---+---+---+---+---+---+---+---+
|              SN               |
+---+---+---+---+---+---+---+---+
| 0   0   0   1 | 0   0   0   1 |
+---+---+---+---+---+---+---+---+
|              CRC              |
+---+---+---+---+---+---+---+---+
```

Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set as defined by the test case
- SN is set as defined by the test case
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

NOTE: If compressor uses CID field in compressed packet, the CID field should be included in the feedback packet and the Code and CID should be set as defined in [40].

…

The purpose of the base test case is to verify that the compressor properly implements compression for a well-behaved IP/UDP/RTP packet flow, i.e. that t it makes use of efficient compressed packet formats available to ROHC RTP [40] when operating in O-mode.

A sequence consisting of 70 packets in total is used where all header fields are set according to the basic test packet structure, as described in subclause A.3, with addition of the following:

1. The RTP Sequence Number is a linearly increasing counter with a packet-to-packet delta of 1, set to 0x0000 for the first packet and thus ending with 0x0045 (69) in the last packet of the sequence
2. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet and thus ending with 0x00002B20 (11040) in the last packet of the sequence.
3. The IP Identification is set to the same value as the RTP Sequence Number; this means that for IPv4 the IP-ID behaviour is not random, thus value(RND)=0 defined in [40] for both IPv4 and IPv6.

Between the 6th and 7th packets (SN=5 and SN=6) of the sequence, a ROHC feedback packet of feedback type 2 is to be given to the ROHC compressor to trigger an immediate transition to O-mode operation. The format of that packet is as follows:

```
  0   1   2   3   4   5   6   7
+---+---+---+---+---+---+---+---+
| 1   1   1   1   0 |   Code    |  feedback type octet
+---+---+---+---+---+---+---+---+
|Acktype| Mode  |      SN       |
+---+---+---+---+---+---+---+---+
|              SN               |
+---+---+---+---+---+---+---+---+
| 0   0   0   1 | 0   0   0   1 |
+---+---+---+---+---+---+---+---+
|              CRC              |
+---+---+---+---+---+---+---+---+
```

Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set to 0x2 (means O-mode)

- SN is set to 0x000

- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

NOTE: If compressor uses CID field in compressed packet, the CID field should be included in the feedback packet and the Code and CID should be set as defined in [40].

Reference(s)

3GPP TS 25.323 clauses A.1, A.1.1, A.2.1.

#### 7.3.6.2.3 Test purpose

To verify that the ROHC compressor successfully transfers to O-mode operation and makes use of efficient compressed packet formats available to ROHC RTP.

#### 7.3.6.2.4 Method of test

Initial conditions

User Equipment:

The UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Execute the generic ROHC performance test procedure for a mobile terminating packet switched session according to clause 7.3.6.1.1.

Profile 0x0001 for compression of RTP/UDP/IP headers only is used

N=4

Related ICS/IXIT Statement(s)

| | |
|---|---|
| Support of PS | Yes/No |
| Support of ROHC | Yes/No |
| UE Supports IPv4 | Yes/No |
| UE Supports IPv6 | Yes/No |

Test procedure

After the session setup the UE ROHC compressor is in the U-mode operation in accordance with RFC3095 and in the IR state. The SS starts to send IP packets to the UE, the test sequence consists of 70 packets. The UE returns the IP packets in ROHC U-mode using the test loop function. Between the 6$^{th}$ and 7$^{th}$ packets (SN=5 and SN=6) of the sequence, a ROHC feedback packet of feedback type 2 is sent to the UE ROHC compressor to trigger an immediate transition to O-mode operation. When all the expected compressed headers have been received by the SS, the SS disconnects the session. The SS calculates the Average Compressed Header Size and checks if it meets the test requirements for the IP version used.

1. The RTP Sequence Number is a linearly increasing counter with a packet-to-packet delta of 1, set to 0x0000 for the first packet and thus ending with 0x0045 (69) in the last packet of the sequence.

2. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet and thus ending with 0x00002B20 (11040) in the last packet of the sequence.

3. The IP Identification is set to the same value as the RTP Sequence Number; this means that for IPv4 the IP-ID behaviour is not random, thus value(RND)=0 defined in RFC3095 for both IPv4 and IPv6.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | | | After the PS session setup the UE is in ROHC U-mode operation and in the IR state. |
| 2 | ← | 70 test packets | The SS starts sending test packets |
| 3 | → | Test packets in U-mode operation. | The UE starts returning test packets in U-mode operation using the test loop function. |
| 4 | ← | ROHC feedback packet of feedback type 2 | Between the 6th and 7th packet (SN=5 and SN=6) of the sequence, a ROHC feedback packet of feedback type 2 is sent to the ROHC compressor to trigger an immediate transition to O-mode operation. |
| 5 | UE | | The UE changes immediately to O-mode operation and continues to send the test packets |
| 6 | → | Test packets in O-mode operation. | |
| 7 | SS | After the SS has received all 70 packets in the test sequence the SS disconnects the PS session. | |


Specific Message Contents

RADIO BEARER SETUP message (during Generic ROHC performance test procedure in clause 7.3.6.1.1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 clause 9 Default Message Contents, with the exceptions defined in clause 7.3.6.1.1 and the following exception:

| **Information Element** | **Value/remark** |
|---|---|
| - PDCP ROHC target mode | O-mode |

ROHC feedback packet of feedback type 2 (Step 3)

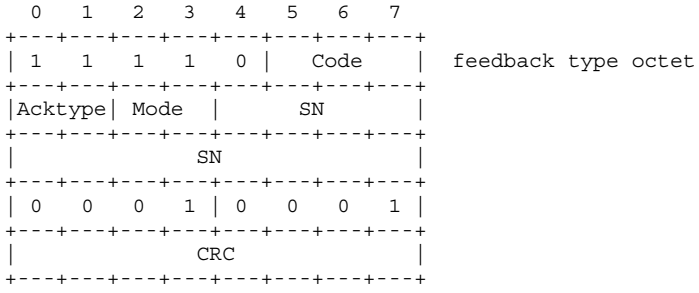


Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set to 0x2 (means O-mode)
- SN is set to 0x000
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

### 7.3.6.2.5 Test requirements

The average compressed header size shall not exceed the limits specified in Table 7.3.6.2.

**Table 7.3.6.2: Test Requirement for ROHC RTP O-mode compressor**

| | Average Compressed Header Size, IPv4 | Average Compressed Header size, IPv6 |
|---|---|---|
| **SN <= N-1** | 44 octets | 68 octets |
| **SN >= N** | 5 octets | 5 octets |

With N value equal to 4 (which is smaller than 8).

The sequence of expected compressed headers can be illustrated as follow (informative):

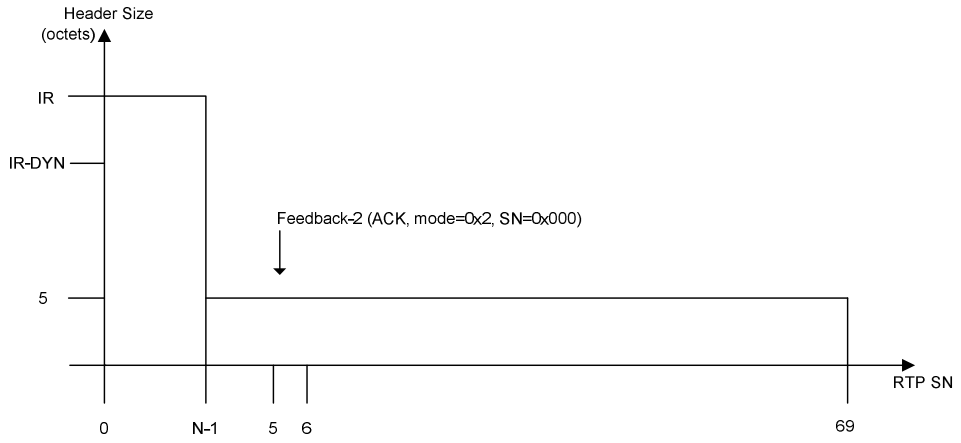



**Figure 7.3.6.2: Expected outcome for ROHC RTP O-mode compressor test**

## 7.3.6.3 Base test of ROHC RTP R-mode compressor

### 7.3.6.3.1 Definition and applicability

The purpose of the base test case is to verify that the compressor properly implements compression for a well-behaved IP/UDP/RTP packet flow, i.e. that it makes use of efficient compressed packet formats available to ROHC RTP [40] when operating in R-mode.

### 7.3.6.3.2 Conformance requirement

This subclause defines performance test cases for ROHC. The ROHC profile within scope is profile 0x0001 for compression of RTP/UDP/IP headers only. This subclause is not meant to bring incoherent limitations to implementations, and is not meant to create a sub-specification of RFC 3095 [40] either, as a consequence of the requirements on performance that it defines.

…

Compressor implementations are expected to implement robustness algorithms according to the optimistic approach for the U/O-modes of operation. The optimistic approach is the part of the selection of the packet format where a format that contains the necessary information to update a field is used a number N time, starting from the packet for which a new value has to be established in the decompressor context. While N is an implementation parameter, the metrics for each sequence in U/O-mode is expressed in terms of this parameter. Implementation should use the value N as an input parameter for the testing, to adapt to the expected robustness level required for the testing. The value of the parameter N is defined in test case definition separately (informative value is given in Annex B.2.3.). Similarly, R-mode operation requires that an update be conveyed to the decompressor until it gets acknowledged; however for R-mode, relevant test cases provide explicit feedback messages when necessary.

…

The feedback messages used in the test cases, when applicable, are artificially generated and interspersed with the input sequence of uncompressed packets. Feedback messages are generated according to the following format:

```
  0   1   2   3   4   5   6   7
+---+---+---+---+---+---+---+---+
| 1   1   1   1   0 |   Code    |  feedback type octet
+---+---+---+---+---+---+---+---+
|Acktype| Mode  |      SN       |
+---+---+---+---+---+---+---+---+
|              SN               |
+---+---+---+---+---+---+---+---+
| 0   0   0   1 | 0   0   0   1 |
+---+---+---+---+---+---+---+---+
|              CRC              |
+---+---+---+---+---+---+---+---+
```

Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set as defined by the test case
- SN is set as defined by the test case
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

NOTE: If compressor uses CID field in compressed packet, the CID field should be included in the feedback packet and the Code and CID should be set as defined in [40].

…

A sequence consisting of 70 packets in total is used where all header fields are set according to the basic test packet structure, as described in subclause A.3, with addition of the following:

1. The RTP Sequence Number is a linearly increasing counter with a packet-to-packet delta of 1, set to 0x0000 for the first packet and thus ending with 0x0045 (69) in the last packet of the sequence.
2. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet and thus ending with 0x00002B20 (11040) in the last packet of the sequence.
3. The IP Identification is set to the same value as the RTP Sequence Number; this means that for IPv4 the IP-ID behaviour is not random, thus value(RND)=0 defined in [40] for both IPv4 and IPv6.

Between the 6th and 7th (SN=5 and SN=6) packet of the sequence, the first ROHC feedback packet of feedback type 2 is to be given to the ROHC compressor to initiate transition to R-mode operation. The format of that packet is as follows:

```
  0   1   2   3   4   5   6   7
+---+---+---+---+---+---+---+---+
| 1   1   1   1   0 |   Code    |  feedback type octet
+---+---+---+---+---+---+---+---+
|Acktype| Mode  |      SN       |
+---+---+---+---+---+---+---+---+
|              SN               |
+---+---+---+---+---+---+---+---+
| 0   0   0   1 | 0   0   0   1 |
+---+---+---+---+---+---+---+---+
|              CRC              |
+---+---+---+---+---+---+---+---+
```

Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set to 0x3 (means R-mode)
- SN is set to 0x000

- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

Reference(s)

3GPP TS 25.323 clauses A1, A.2.2, A.3 and B.2.3.

#### 7.3.6.3.3 Test purpose

To verify that the ROHC compressor successfully transfers to R-mode operation and makes use of efficient compressed packet formats available to ROHC RTP.

#### 7.3.6.3.4 Method of test

Initial conditions

User Equipment:

The UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Execute the generic ROHC performance test procedure for a mobile terminating packet switched session according to clause 7.3.6.1.1.

Profile 0x0001 for compression of RTP/UDP/IP headers only is used

N=4

Related ICS/IXIT Statement(s)

| | |
|---|---|
| Support of PS | Yes/No |
| Support of ROHC | Yes/No |
| UE Supports IPv4 | Yes/No |
| UE Supports IPv6 | Yes/No |

Test procedure

After the session setup the ROHC compressor is in the U-mode operation in accordance with RFC3095 and in the IR state. The SS starts to send IP packets to the UE, the test sequence consists of 70 packets. The UE returns the IP packets in ROHC U-mode using the test loop function. Between the 6$^{th}$ and 7$^{th}$ packets (SN=5 and SN=6) of the sequence, the first ROHC feedback packet of feedback type 2 is sent to the UE ROHC compressor to trigger an immediate transition to R-mode operation. When all the expected compressed headers have been received by the SS, the SS disconnects the session. The SS calculates the Average Compressed Header Size and checks if it meets the test requirements for the IP version used.

1. The RTP Sequence Number is a linearly increasing counter with a packet-to-packet delta of 1, set to 0x0000 for the first packet and thus ending with 0x0045 (69) in the last packet of the sequence.

2. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet and thus ending with 0x00002B20 (11040) in the last packet of the sequence.

3. The IP Identification is set to the same value as the RTP Sequence Number; this means that for IPv4 the IP-ID behaviour is not random, thus value(RND)=0 defined in RFC3095 for both IPv4 and IPv6.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | | | After the PS session setup the UE is in ROHC U-mode operation and in the IR state. |
| 2 | ← | 70 test packets | The SS starts sending test packets |
| 3 | → | Test packets in U-mode operation. | The UE starts returning test packets in U-mode operation using the test loop function. |
| 4 | ← | ROHC feedback packet of feedback type 2 | Between the 6th and 7th (SN=5 and SN=6) packet of the sequence the SS initiates a transition to R-mode operation. |
| 5 | UE | | The UE changes immediately to R-mode operation and continues to send the test packets |
| 6 | → | Test packets in R-mode operation. | The UE returns test packets in R-mode operation using the test loop function. |
| 6a | ← | ROHC feedback packet of feedback type 2 | During the test case the SS generates a feedback message when the ROHC packet type octet of the received compressed header matches any of the values as described in the table 7.3.6.3.1. |
| 7 | SS | After the SS has received all 70 packets in the test sequence the SS disconnects the PS session. | |


Specific Message Contents

RADIO BEARER SETUP message (during Generic ROHC performance test procedure in clause 7.3.6.1.1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 clause 9 Default Message Contents, with the exceptions defined in clause 7.3.6.1.1 and the following exception:

| **Information Element** | **Value/remark** |
|---|---|
| - PDCP ROHC target mode | R-mode |

ROHC feedback packet of feedback type 2 (Step 4 and 6a)

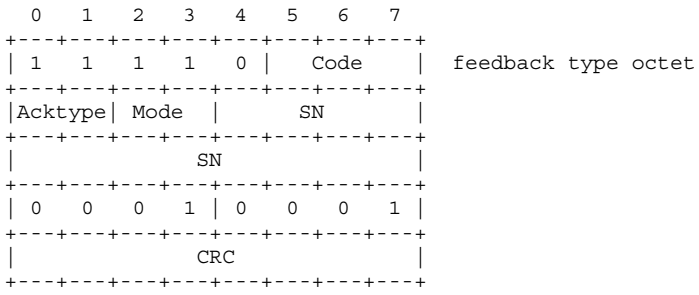


Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set to 0x3 (means R-mode)
- SN is set to 0x000
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

The test equipment waits for a UOR-2, IR-DYN or IR packet from the RoHC compressor with the mode transition parameter set to R. The value of x is the RTP SN of this received packet for which the test equipment generates the second feedback packet of type 2.

The SS shall generate a feedback message when the ROHC packet type octet of the received compressed header matches any of the values as described in the table 7.3.6.3.1. The compressed header type can be identified by inspecting the packet type octet of the compressed header, i.e. the first octet of the ROHC base header.

**Table 7.3.6.3.1: Bitmasks for feedback generation**

| Compressed Header Type (binary mask) | Packet Type | Outcome |
|---|---|---|
| 01xxxxxx | R-0-CRC | Send feedback |
| 110xxxxx | UOR-2* | Send feedback |
| 1111110x | IR | Send feedback |
| 11111000 | IR-DYN | Send feedback |
| Other values | Other packets | No feedback |

where 'x' means 'any value'.

In the feedback message:

- Mode is set to 0x3 (means R-mode)
- SN is set to the RTP SN corresponding to the received compressed header

The SS shall index the input sequence of uncompressed headers using the RTP Sequence Number, and it shall associate the correct RTP SN to each compressed header that it receives back from the compressor. The SS can derive the RTP SN by counting the number of received compressed headers.

NOTE: The purpose of this mechanism is only to provide feedback to the compressor when operating in R-mode; it is not meant to make further verifications of any specific ROHC functionality and applies only to the test cases defined in this annex.

### 7.3.6.3.5 Test requirements

The average compressed header size shall not exceed the limits specified in Table 7.3.6.3.2

**Table 7.3.6.3.2: Test Requirement for ROHC RTP R-mode compressor**

| | Average Compressed Header Size, IPv4 | Average Compressed Header size, IPv6 |
|---|---|---|
| **SN <= N-1** | 44 octets | 68 octets |
| **N <= SN <= 5** | 5 octets | 5 octets |
| **6 <= SN <= x** | 9 octets | 9 octets |
| **SN >= x+1** | 5 octets | 5 octets |

N shall be equal to 4 in the test case.

The sequence of expected compressed headers can be illustrated as follow (informative):

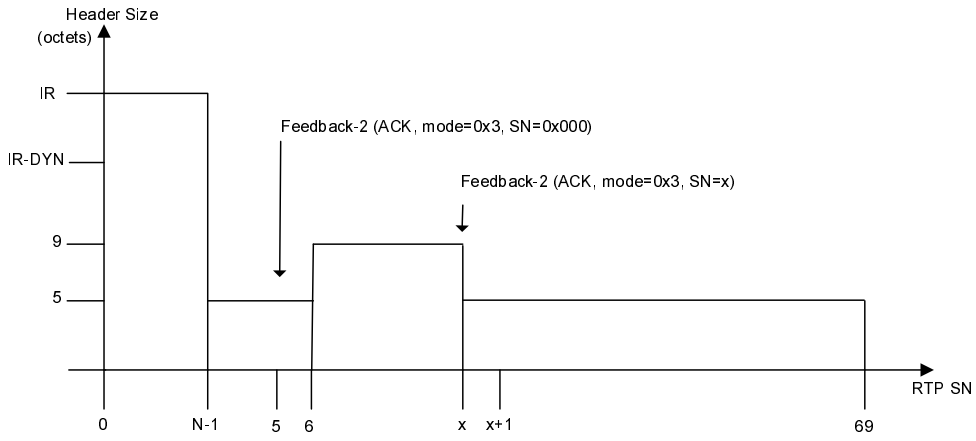



**Figure 7.3.6.3: Expected outcome for ROHC RTP R-mode compressor test**

## 7.3.6.4 Re-establishment of TS function after DTX in O-mode

### 7.3.6.4.1 Definition and applicability

The purpose of the TS re-establishment test case is to verify that the compressor re-establishes the proper TS value after a DTX period, i.e. that it uses efficient header formats available to ROHC RTP [40] when operating in O-mode.

### 7.3.6.4.2 Conformance requirement

The outline of each test case follows the same format with respect to the input sequences and the requirements Test 1a and 1b are base tests using a well-behaving flow of packets as one of the inputs. All subsequent tests are based on test 1a or test 1b, each with specific test events added to the packet flow of the base tests.

…

The test sequence is the same as in subclause A.2.1, with the following exception:

1. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet.
2. For packet with SN= 20, TS is increased to represent a 32 (0.64 seconds) packet skip (32x160) and is thus set to (20+32)x160=8320 (0x00002080). Then TS continues to grow as stated in 1 above.
3. For packet with SN= 30, TS is increased to represent a 128 (2.56 seconds) packet skip (128x160) and is thus set to (30+32+128)x160=30400 (0x000076C0). Then TS continues to grow as stated in 1 above.
4. For packet with SN= 40, TS is increased to represent a 2048 (40.96 seconds) packet skip (2048x160) and is thus set to (40+32+128+2048)x160=359680 (0x00057D00). Then TS continues to grow as stated in 1 above.
5. TS thus ends at 364320 (0x00058F20) in the last packet of the sequence with RTP sequence number 69.

Reference(s)

3GPP TS 25.323 clauses A1.2, A.2.5, A.2.1, A.3, B.2.3.

### 7.3.6.4.3 Test purpose

To verify that the ROHC compressor re-establishes the proper TS value after a DTX period, i.e. that it uses efficient header formats available to ROHC RTP when operating in O-mode.

### 7.3.6.4.4 Method of test

Initial conditions

User Equipment:

The UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Execute the generic ROHC performance test procedure for a mobile terminating packet switched session according to clause 7.3.6.1.1.

Profile 0x0001 for compression of RTP/UDP/IP headers only is used

N=4

Related ICS/IXIT Statement(s)

Support of PS Yes/No

Support of ROHC Yes/No

UE Supports IPv4 Yes/No

UE Supports IPv6 Yes/No

Test procedure

After the session setup the UE ROHC compressor is in the U-mode operation in accordance with RFC3095 and in the IR state. The SS starts to send IP packets to the UE, the test sequence consists of 70 packets. The UE returns the IP packets in ROHC U-mode using the test loop function. Between the 6$^{th}$ and 7$^{th}$ packets (SN=5 and SN=6) of the sequence, a ROHC feedback packet of feedback type 2 is sent to the UE ROHC compressor to trigger an immediate transition to O-mode operation. When all the expected compressed headers have been received by the SS, the SS disconnects the session.

The SS calculates the Average Compressed Header Size and checks if it meets the test requirements as in clause 7.3.6.4.2, for the IP version used with the following exceptions:

1. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet.

2. For packet with SN= 20, TS is increased to represent a 32 (0.64 seconds) packet skip (32x160) and is thus set to (20+32)x160=8320 (0x00002080). Then TS continues to grow as stated in 1 above.

3. For packet with SN= 30, TS is increased to represent a 128 (2.56 seconds) packet skip (128x160) and is thus set to (30+32+128)x160=30400 (0x000076C0). Then TS continues to grow as stated in 1 above.

4. For packet with SN= 40, TS is increased to represent a 2048 (40.96 seconds) packet skip (2048x160) and is thus set to (40+32+128+2048)x160=359680 (0x00057D00). Then TS continues to grow as stated in 1 above.

5. TS thus ends at 364320 (0x00058F20) in the last packet of the sequence with RTP sequence number 69.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | | | After the PS session setup the UE is in ROHC U-mode operation and in the IR state. |
| 2 | ← | 70 test packets | The SS starts sending test packets |
| 3 | → | Test packets in U-mode operation. | The UE starts returning test packets in U-mode operation using the test loop function. |
| 4 | ← | ROHC feedback packet of feedback type 2 | Between the 6th and 7th packet (SN=5 and SN=6) of the sequence, a ROHC feedback packet of feedback type 2 is sent to the ROHC compressor to trigger an immediate transition to O-mode operation. |
| 5 | UE | | The UE changes immediately to O-mode operation and continues to send the test packets |
| 6 | → | Test packets in O-mode operation. | |
| 7 | SS | | For packet with SN= 20, the SS increases TS to represent a 32 packet skip and sets it to (20+32)x160=8320. |
| 8 | SS | | For packet with SN= 30, the SS increases TS to represent a 128 packet skip and sets it to (30+32+128)x160=30400. |
| 9 | SS | | For packet with SN= 40, the SS increases TS to represent a 2048 packet skip and sets it to (40+32+128+2048)x160=359680. |
| 10 | SS | After the SS has received all 70 packets in the test sequence the SS disconnects the PS session. | |


Specific Message Contents

RADIO BEARER SETUP message (during Generic ROHC performance test procedure in clause 7.3.6.1.1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 clause 9 Default Message Contents, with the exceptions defined in clause 7.3.6.1.1 and the following exception:

| **Information Element** | **Value/remark** |
|---|---|
| - PDCP ROHC target mode | O-mode |

ROHC feedback packet of feedback type 2 (Step 3)

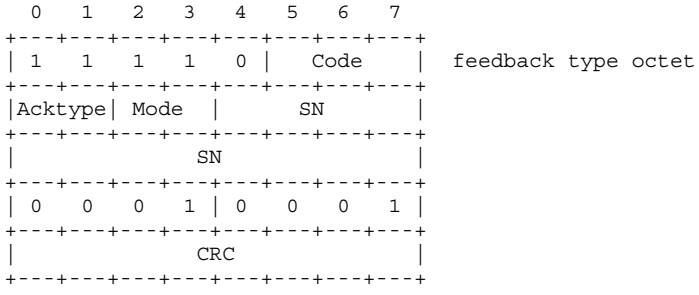


Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set to 0x2 (means O-mode)

- SN is set to 0x000
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

#### 7.3.6.4.5 Test requirements

The average compressed header size shall not exceed the limits specified in Table 7.3.6.4.

**Table 7.3.6.4: Test Requirement for ROHC Test 7.3.6.4**

| | Average Compressed Header Size, IPv4 | Average Compressed Header size, IPv6 |
|---|---|---|
| **SN <= 19** | See Test 1a (Test 7.3.6.2 in TS 34.123-1) | |
| **20 <= SN <= 19 + N**<br>**30 <= SN <= 29 + N** | 10 octets | 10 octets |
| **40 <= SN <= 39 + N** | 10 octets | 10 octets |
| **Other SN values** | 5 octets | 5 octets |

With N value equal to 4.

The sequence of expected compressed headers can be illustrated as follow (informative):

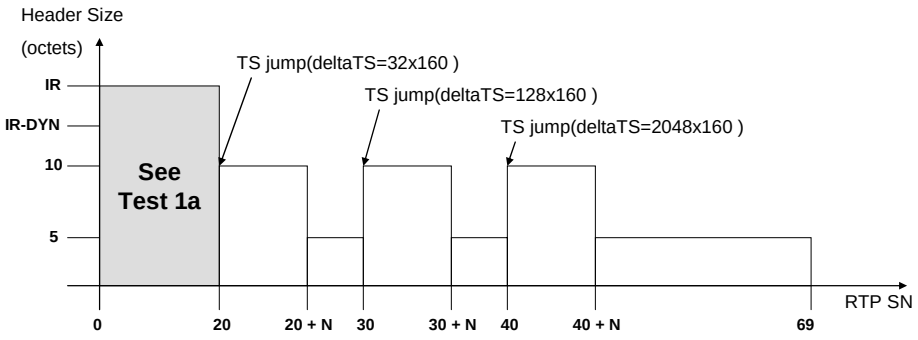



**Figure 7.3.6.4: Expected outcome for ROHC Test 7.3.6.4**

### 7.3.6.5 Re-establishment of TS function after DTX in R-mode

#### 7.3.6.5.1 Definition and applicability

The purpose of the TS (Timestamp) re-establishment test case is to verify that the compressor re-establishes the proper TS value after a DTX period, i.e. that it uses the efficient header formats available to ROHC RTP [40] when operating in R-mode.

#### 7.3.6.5.2 Conformance requirement

This subclause defines performance test cases for ROHC. The ROHC profile within scope is profile 0x0001 for compression of RTP/UDP/IP headers only. This subclause is not meant to bring incoherent limitations to implementations, and is not meant to create a sub-specification of RFC 3095 [40] either, as a consequence of the requirements on performance that it defines.


…

Compressor implementations are expected to implement robustness algorithms according to the optimistic approach for the U/O-modes of operation. The optimistic approach is the part of the selection of the packet format where a format that contains the necessary information to update a field is used a number N time, starting from the packet for which a new value has to be established in the decompressor context. While N is an implementation parameter, the metrics for each sequence in U/O-mode is expressed in terms of this parameter. Implementation should use the value N as an input parameter for the testing, to adapt to the expected robustness level required for the testing. The value of the parameter N is defined in test case definition separately (informative value is given in Annex B.2.3.). Similarly, R-mode operation

requires that an update be conveyed to the decompressor until it gets acknowledged; however for R-mode, relevant test cases provide explicit feedback messages when necessary.

…

The feedback messages used in the test cases, when applicable, are artificially generated and interspersed with the input sequence of uncompressed packets. Feedback messages are generated according to the following format:

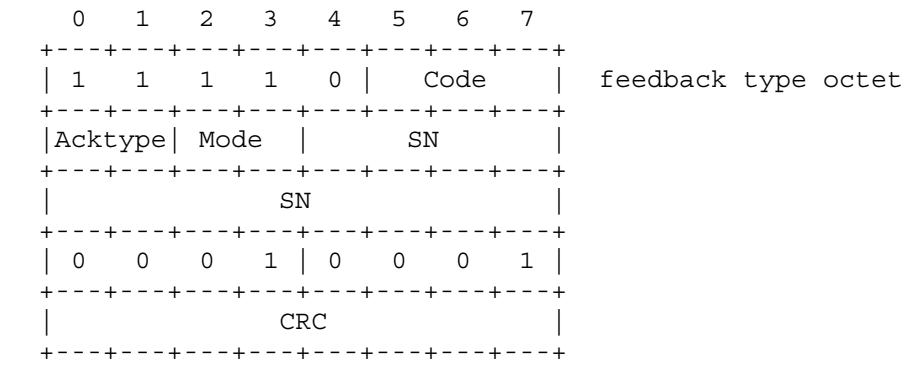


Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set as defined by the test case
- SN is set as defined by the test case
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

NOTE: If compressor uses CID field in compressed packet, the CID field should be included in the feedback packet and the Code and CID should be set as defined in [40].

…

The test sequence is the same as in subclause A.2.2, with the following exception:

1. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet.
2. For packet with SN= 20, TS is increased to represent a 32 (0.64 seconds) packet skip (32x160) and is thus set to (20+32)x160=8320 (0x00002080). Then TS continues to grow as stated in 1 above.
3. For packet with SN= 30, TS is increased to represent a 128 (2.56 seconds) packet skip (128x160) and is thus set to (30+32+128)x160=30400 (0x000076C0). Then TS continues to grow as stated in 1 above.
4. For packet with SN= 40, TS is increased to represent a 2048 (40.96 seconds) packet skip (2048x160) and is thus set to (40+32+128+2048)x160=359680 (0x00057D00). Then TS continues to grow as stated in 1 above.
5. TS thus ends at 393120 (0x0005FFA0) in the last packet of the sequence with RTP sequence number 69.

Reference(s)

3GPP TS 25.323 clauses A.1, A.2.6, A.3 and B.2.3.

#### 7.3.6.5.3 Test purpose

To verify that the compressor re-establishes the proper TS value after a DTX period, i.e. that it uses the efficient header formats available to ROHC RTP when operating in R-mode.

7.3.6.5.4 Method of test

Initial conditions

User Equipment:

The UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Execute the generic ROHC performance test procedure for a mobile terminating packet switched session according to clause 7.3.6.1.1.

Profile 0x0001 for compression of RTP/UDP/IP headers only is used

N=4

Related ICS/IXIT Statement(s)

Support of PS Yes/No

Support of ROHC Yes/No

UE Supports IPv4 Yes/No

UE Supports IPv6 Yes/No

Test procedure

After the session setup the ROHC compressor is in the U-mode operation in accordance with RFC3095 and in the IR state. The SS starts to send IP packets to the UE, the test sequence consists of 70 packets. The UE returns the IP packets in ROHC U-mode using the test loop function. Between the 6$^{th}$ and 7$^{th}$ packets (SN=5 and SN=6) of the sequence, the first ROHC feedback packet of feedback type 2 is sent to the UE ROHC compressor to trigger an immediate transition to R-mode operation. The SS continues to send IP packets to the UE.

For packet with SN= 20, the SS increases TS to represent a 32 (0.64 seconds) packet skip (32x160) and sets it to (20+32)x160=8320 (0x00002080). Then TS continues to grow linearly with a packet-to-packet delta of 160.

For packet with SN= 30, the SS increases TS to represent a 128 (2.56 seconds) packet skip (128x160) and sets it to (30+32+128)x160=30400 (0x000076C0). Then TS continues to grow linearly with a packet-to-packet delta of 160.

For packet with SN= 40, the SS increases TS to represent a 2048 (40.96 seconds) packet skip (2048x160) and sets it to (40+32+128+2048)x160=359680 (0x00057D00). Then TS continues to grow linearly with a packet-to-packet delta of 160.

The test sequence ends with TS at 393120 (0x0005FFA0) in the last packet of the sequence with RTP sequence number 69.

When all the expected compressed headers have been received by the SS, the SS disconnects the session. The SS calculates the Average Compressed Header Size and checks if it meets the test requirements for the IP version used.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | | | After the PS session setup the UE is in ROHC U-mode operation and in the IR state. |
| 2 | ← | Test packets | The SS starts sending test packets. The test sequence consists of 70 packets. |
| 3 | → | Test packets in U-mode operation. | The UE starts returning test packets in U-mode operation using the test loop function. |
| 4 | ← | ROHC feedback packet of feedback type 2 | Between the 6th and 7th (SN=5 and SN=6) packet of the sequence the SS initiates a transition to R-mode operation. |
| 5 | UE | | The UE changes immediately to R-mode operation and continues to send the test packets |
| 6 | → | Test packets in R-mode operation. | The UE returns test packets in R-mode operation using the test loop function. |
| 6a | ← | ROHC feedback packet of feedback type 2 | During the test case the SS generates a feedback message when the ROHC packet type octet of the received compressed header matches any of the values as described in the table 7.3.6.3.1. |
| 7 | SS | | For packet with SN= 20, the SS increases TS to represent a 32 packet skip and sets it to (20+32)x160=8320. |
| 8 | SS | | For packet with SN= 30, the SS increases TS to represent a 128 packet skip and sets it to (30+32+128)x160=30400. |
| 9 | SS | | For packet with SN= 40, the SS increases TS to represent a 2048 packet skip and sets it to (40+32+128+2048)x160=359680. |
| 10 | SS | After the SS has received all 70 packets in the test sequence the SS disconnects the PS session. | |


Specific Message Contents

RADIO BEARER SETUP message (during Generic ROHC performance test procedure in clause 7.3.6.1.1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 clause 9 Default Message Contents, with the exceptions defined in clause 7.3.6.1.1 and the following exception:

| **Information Element** | **Value/remark** |
|---|---|
| - PDCP ROHC target mode | R-mode |

ROHC feedback packet of feedback type 2 (Step 4 and 6a)

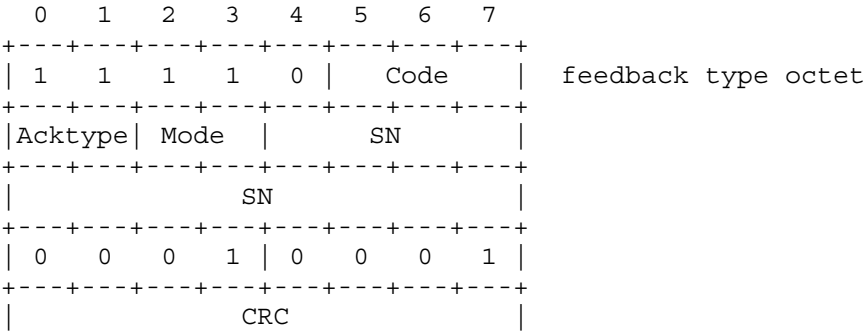

```
+---+---+---+---+---+---+---+---+
```

Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set to 0x3 (means R-mode)
- SN is set to 0x000
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

  The test equipment waits for a UOR-2, IR-DYN or IR packet from the RoHC compressor with the mode transition parameter set to R. The value of x is the RTP SN of this received packet for which the test equipment generates the second feedback packet of type 2.

#### 7.3.6.5.5 Test requirements

The average compressed header size shall not exceed the limits specified in Table 7.3.6.5.1

**Table 7.3.6.5.1: Test Requirement for Re-establishment of TS function after DTX in R-mode**

| | **Average Compressed Header Size, IPv4** | **Average Compressed Header size, IPv6** |
|---|---|---|
| **SN <= 19** | See Test 1b (Test case 7.3.6.3 in TS 34.123-1) | |
| **20 <= SN <= 19 + x**<br>**30 <= SN <= 29 + x** | 10 octets | 10 octets |
| **40 <= SN <= 39 + x** | 10 octets | 10 octets |
| **Other SN values** | 5 octets | 5 octets |

The sequence of expected compressed headers can be illustrated as follow (informative):

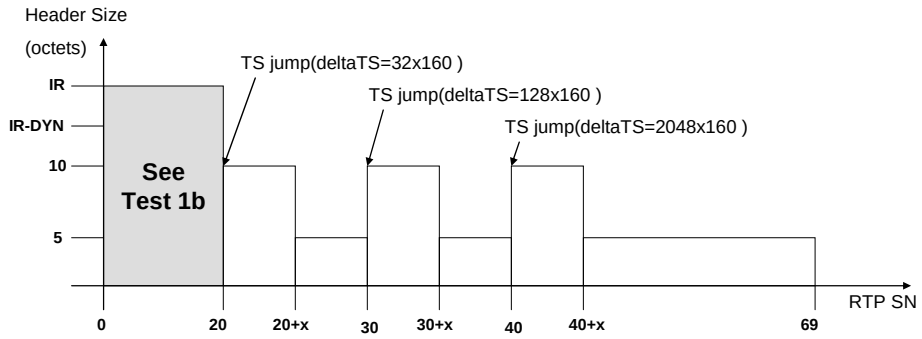



**Figure 7.3.6.5: Expected outcome for Re-establishment of TS function after DTX in R-mode test**

### 7.3.6.6 Compressor response to single lost packets in O-mode

#### 7.3.6.6.1 Definition and applicability

Same as in 34.123-1 clause 7.3.6.2.1.

#### 7.3.6.6.2 Conformance requirement

Same as in 34.123-1 clause 7.3.6.2.2.

#### 7.3.6.6.3 Test purpose

The purpose of this test is to verify that the compressor does not panic just because there is a single missing packet, i.e. the compressed packet size should not increase due to such events.

#### 7.3.6.6.4 Method of test

The method is the same as in 34.123-1 clause 7.3.6.2.4 except that test packets with SN 20, 30 and 40 are removed from the sequence.

#### 7.3.6.6.5 Test requirements

The maximal compressed header overhead shall be the same as in 34.123-1 clause 7.3.6.2.5.

### 7.3.6.7 Compressor response to single lost packets in R-mode

#### 7.3.6.7.1 Definition and applicability

Same as in 34.123-1 clause 7.3.6.3.1.

#### 7.3.6.7.2 Conformance requirement

Same as in 34.123-1 clause 7.3.6.3.2.

#### 7.3.6.7.3 Test purpose

The purpose of this test is to verify that the compressor does not panic just because there is a single missing packet, i.e. the compressed packet size should not increase due to such events

#### 7.3.6.7.4 Method of test

The method is the same as in 34.123-1 clause 7.3.6.3.4 except that test packets with SN 20, 30 and 40 are removed from the sequence.

#### 7.3.6.7.5 Test requirements

The maximal compressed header overhead shall be the same as in 34.123-1 clause 7.3.6.3.5.

### 7.3.6.8 TS function during DTX with varying delta in O-mode

#### 7.3.6.8.1 Definition and applicability

The purpose of this test case is to verify that the compressor properly handles variations in the function between the TS value and the SN during and after a DTX period, during which SID packets are sent periodically, i.e. that it uses efficient header formats available to ROHC RTP [40] when operating in O-mode.

#### 7.3.6.8.2 Conformance requirement

The outline of each test case follows the same format with respect to the input sequences and the requirements Test 1a and 1b are base tests using a well-behaving flow of packets as one of the inputs. All subsequent tests are based on test 1a or test 1b, each with specific test events added to the packet flow of the base tests.

…

The test sequence is the same as in subclause A.2.1, with the following exception:

1. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet.

2. For packets SN = 20, 21 and 22, TS is increased to represent a 7 (0.14 seconds) packet skip (7x160) and is thus set to (20+7)x160=4320 (0x000010E0), (21+7+7)x160=5600(0x000015E0) and (22+7+7+7)x160=6880(0x00001AE0), respectively.

3. For packets SN = 30, 31, 32, 33 and 34, TS is increased to represent a 7 (0.14 seconds) packet skip (7x160) and is thus set to 9280 (0x00002440), 10560 (0x00002940), 11840 (0x00002E40), 13120 (0x00003340) and 14400 (0x00003840) respectively.

4. For packets SN = 40, 41, 42, 43, 44, 45, and 46, TS is increased to represent a 7 (0.14 seconds) packet skip (7x160) and is thus set to 16480 (0x00004060), 17760 (0x00004560), 19040 (0x00004A60), 20320 (0x00004F60), 21600 (0x00005460), 22880 (0x00005960) and 24160 (0x00005E60) respectively.

5. TS thus ends at 27840 (0x00006CC0) in the last packet of the sequence with RTP sequence number 69

Reference(s)

3GPP TS 25.323 clauses A.1.2,A.2.11, A.2.1, A.3, B.2.3.

7.3.6.8.3 Test purpose

To verify that the ROHC compressor properly handles variations in the function between the TS value and the SN during and after a DTX period, during which SID packets are sent periodically, i.e. that it uses efficient header formats available to ROHC RTP when operating in O-mode.

7.3.6.8.4 Method of test

Initial conditions

User Equipment:

The UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Execute the generic ROHC performance test procedure for a mobile terminating packet switched session according to clause 7.3.6.1.1.

Profile 0x0001 for compression of RTP/UDP/IP headers only is used

N=4

Related ICS/IXIT Statement(s)

| | |
|---|---|
| Support of PS | Yes/No |
| Support of ROHC | Yes/No |
| UE Supports IPv4 | Yes/No |
| UE Supports IPv6 | Yes/No |

Test procedure

After the session setup the UE ROHC compressor is in the U-mode operation in accordance with RFC3095 and in the IR state. The SS starts to send IP packets to the UE, the test sequence consists of 70 packets. The UE returns the IP packets in ROHC U-mode using the test loop function. Between the 6$^{th}$ and 7$^{th}$ packets (SN=5 and SN=6) of the sequence, a ROHC feedback packet of feedback type 2 is sent to the UE ROHC compressor to trigger an immediate transition to O-mode operation.

When all the expected compressed headers have been received by the SS, the SS disconnects the session. The SS calculates the Average Compressed Header Size and checks if it meets the test requirements as in clause 7.3.6.4.2, for the IP version used with the following exceptions:

1. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet.
2. For packets SN = 20, 21 and 22, TS is increased to represent a 7 (0.14 seconds) packet skip (7x160) and is thus set to (20+7)x160=4320 (0x000010E0), (21+7+7)x160=5600 (0x000015E0) and (22+7+7+7)x160=6880 (0x00001AE0), respectively.
3. For packets SN = 30, 31, 32, 33 and 34, TS is increased to represent a 7 (0.14 seconds) packet skip (7x160) and is thus set to 9280 (0x00002440), 10560 (0x00002940), 11840 (0x00002E40), 13120 (0x00003340) and 14400 (0x00003840) respectively.
4. For packets SN = 40, 41, 42, 43, 44, 45, and 46, TS is increased to represent a 7 (0.14 seconds) packet skip (7x160) and is thus set to 16480 (0x00004060), 17760 (0x00004560), 19040 (0x00004A60), 20320 (0x00004F60), 21600 (0x00005460), 22880 (0x00005960) and 24160 (0x00005E60) respectively.
5. TS thus ends at 27840 (0x00006CC0) in the last packet of the sequence with RTP sequence number 69.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | | | After the PS session setup the UE is in ROHC U-mode operation and in the IR state. |
| 2 | ← | 70 test packets | The SS starts sending test packets |
| 3 | → | Test packets in U-mode operation. | The UE starts returning test packets in U-mode operation using the test loop function. |
| 4 | ← | ROHC feedback packet of feedback type 2 | Between the 6th and 7th packet (SN=5 and SN=6) of the sequence, a ROHC feedback packet of feedback type 2 is sent to the ROHC compressor to trigger an immediate transition to O-mode operation. |
| 5 | UE | | The UE changes immediately to O-mode operation and continues to send the test packets |
| 6 | → | Test packets in O-mode operation. | |
| 7 | SS | | For packets SN = 20, 21 and 22, the SS increases TS to represent a 7 packet skip and sets TS to (20+7)x160=4320, (21+7+7)x160=5600 and (22+7+7+7)x160=6880 respectively. |
| 8 | SS | | For packets SN = 30, 31, 32, 33 and 34, the SS increases TS to represent a 7 packet skip and sets TS to 9280, 10560, 11840, 13120 and 14400 respectively. |
| 9 | SS | | For packets SN = 40, 41, 42, 43, 44, 45, and 46, the SS increases TS to represent a 7 packet skip and sets TS to 16480, 17760, 19040, 20320, 21600, 22880 and 24160 respectively. |
| 10 | SS | After the SS has received all 70 packets in the test sequence the SS disconnects the PS session. | |


Specific Message Contents

RADIO BEARER SETUP message (during Generic ROHC performance test procedure in clause 7.3.6.1.1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 clause 9 Default Message Contents, with the exceptions defined in clause 7.3.6.1.1 and the following exception:

| **Information Element** | **Value/remark** |
|---|---|
| - PDCP ROHC target mode | O-mode |

ROHC feedback packet of feedback type 2 (Step 3)

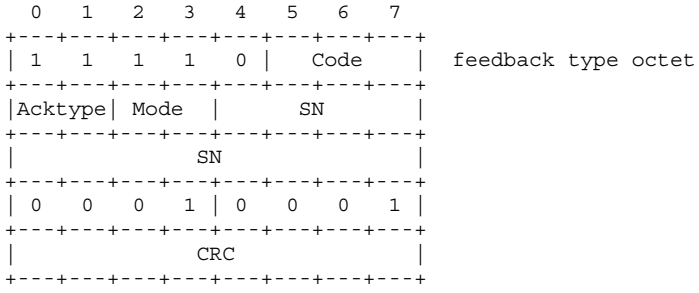


Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set to 0x2 (means O-mode)
- SN is set to 0x000
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

#### 7.3.6.8.5 Test requirements

The average compressed header size shall not exceed the limits specified in Table 7.3.6.8.

**Table 7.3.6.8: Test Requirement for ROHC Test 7.3.6.8**

| | Average Compressed Header Size, IPv4 | Average Compressed Header size, IPv6 |
|---|---|---|
| **SN <= 19** | See Test 1a (Test 7.3.6.2 in TS 34.123-1) | |
| **20 <= SN <= 22 + N**<br>**30 <= SN <= 34 + N**<br>**40 <= SN <= 46 + N** | 15 octets | 15 octets |
| **Other SN values** | 5 octets | 5 octets |

With N value equal to 4.

The sequence of expected compressed headers can be illustrated as follow (informative):

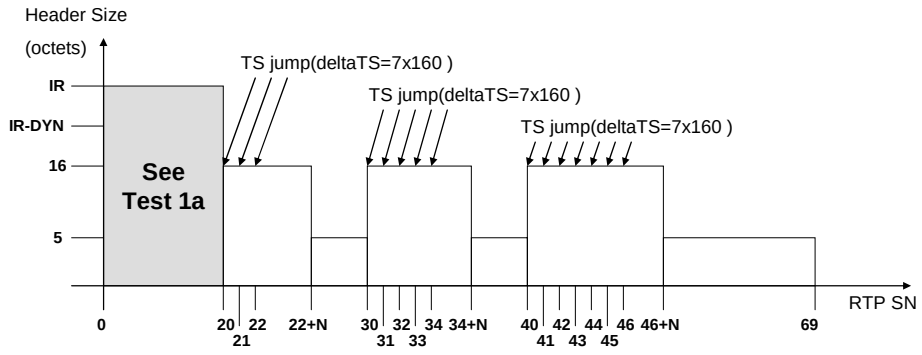



**Figure 7.3.6.8: Expected outcome for ROHC Test 7.3.6.8**

### 7.3.6.9 TS function during DTX with varying delta in R-mode

#### 7.3.6.9.1 Definition and applicability

The purpose of this test case is to verify how efficiently the compressor handles variations in the function between the TS value and the SN during and after a DTX period, during which SID packets are sent periodically, i.e. that it uses the efficient header formats available to ROHC RTP [40] when operating in R-mode.

#### 7.3.6.9.2 Conformance requirement

This subclause defines performance test cases for ROHC. The ROHC profile within scope is profile 0x0001 for compression of RTP/UDP/IP headers only. This subclause is not meant to bring incoherent limitations to implementations, and is not meant to create a sub-specification of RFC 3095 [40] either, as a consequence of the requirements on performance that it defines.


…

Compressor implementations are expected to implement robustness algorithms according to the optimistic approach for the U/O-modes of operation. The optimistic approach is the part of the selection of the packet format where a format that contains the necessary information to update a field is used a number N time, starting from the packet for which a

new value has to be established in the decompressor context. While N is an implementation parameter, the metrics for each sequence in U/O-mode is expressed in terms of this parameter. Implementation should use the value N as an input parameter for the testing, to adapt to the expected robustness level required for the testing. The value of the parameter N is defined in test case definition separately (informative value is given in Annex B.2.3.). Similarly, R-mode operation requires that an update be conveyed to the decompressor until it gets acknowledged; however for R-mode, relevant test cases provide explicit feedback messages when necessary.

…

The feedback messages used in the test cases, when applicable, are artificially generated and interspersed with the input sequence of uncompressed packets. Feedback messages are generated according to the following format:

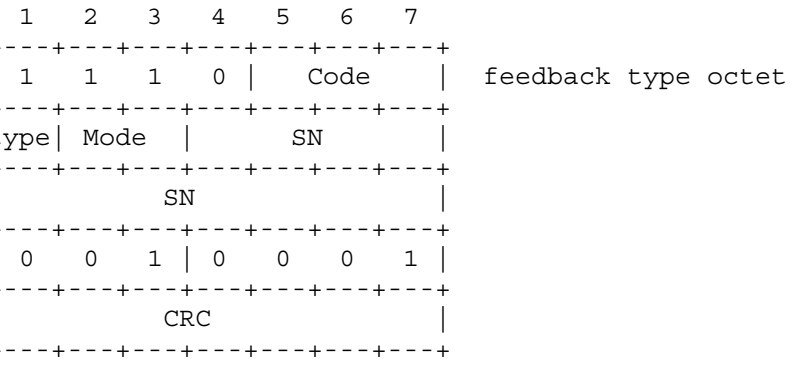


Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set as defined by the test case
- SN is set as defined by the test case
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

NOTE: If compressor uses CID field in compressed packet, the CID field should be included in the feedback packet and the Code and CID should be set as defined in [40].

…

The test sequence is the same as in subclause A.2.2, with the following exception:

1. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet.
2. For packets SN = 20, 21 and 22, TS is increased to represent a 7 (0.14 seconds) packet skip (7x160) and is thus set to (20+7)x160=4320 (0x000010E0), (21+7+7)x160=5600(0x000015E0) and (22+7+7+7)x160=6880(0x00001AE0), respectively.
3. For packets SN = 30, 31, 32, 33 and 34, TS is increased to represent a 7 (0.14 seconds) packet skip (7x160) and is thus set to 9280 (0x00002440), 10560 (0x00002940), 11840 (0x00002E40), 13120 (0x00003340) and 14400 (0x00003840) respectively.
4. For packets SN = 40, 41, 42, 43, 44, 45, and 46, TS is increased to represent a 7 (0.14 seconds) packet skip (7x160) and is thus set to 16480 (0x00004060), 17760 (0x00004560), 19040 (0x00004A60), 20320 (0x00004F60), 21600 (0x00005460), 22880 (0x00005960) and 24160 (0x00005E60) respectively.
5. TS thus ends at 27840 (0x00006CC0) in the last packet of the sequence with RTP sequence number 69.

Reference(s)

3GPP TS 25.323 clauses A.1, A.2.12, A.3 and B.2.3.

#### 7.3.6.9.3 Test purpose

To verify how efficiently the compressor handles variations in the function between the TS value and the SN during and after a DTX period, during which SID packets are sent periodically, i.e. that it uses the efficient header formats available to ROHC RTP when operating in R-mode.

#### 7.3.6.9.4 Method of test

##### Initial conditions

User Equipment:

The UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Execute the generic ROHC performance test procedure for a mobile terminating packet switched session according to clause 7.3.6.1.1.

Profile 0x0001 for compression of RTP/UDP/IP headers only is used

N=4

##### Related ICS/IXIT Statement(s)

Support of PS Yes/No

Support of ROHC Yes/No

UE Supports IPv4 Yes/No

UE Supports IPv6 Yes/No

##### Test procedure

After the session setup the ROHC compressor is in the U-mode operation in accordance with RFC3095 and in the IR state. The SS starts to send IP packets to the UE, the test sequence consists of 70 packets. The UE returns the IP packets in ROHC U-mode using the test loop function. Between the $6^{th}$ and $7^{th}$ packets (SN=5 and SN=6) of the sequence, the first ROHC feedback packet of feedback type 2 is sent to the UE ROHC compressor to trigger an immediate transition to R-mode operation. The SS continues to send IP packets to the UE.

For packets SN = 20, 21 and 22, the SS increases TS to represent a 7 (0.14 seconds) packet skip (7x160) and sets TS to (20+7)x160=4320 (0x000010E0), (21+7+7)x160=5600 (0x000015E0) and (22+7+7+7)x160=6880 (0x00001AE0), respectively.

For packets SN = 30, 31, 32, 33 and 34, the SS increases TS to represent a 7 (0.14 seconds) packet skip (7x160) and sets TS to 9280 (0x00002440), 10560 (0x00002940), 11840 (0x00002E40), 13120 (0x00003340) and 14400 (0x00003840) respectively.

For packets SN = 40, 41, 42, 43, 44, 45, and 46, the SS increases TS to represent a 7 (0.14 seconds) packet skip (7x160) and sets TS to 16480 (0x00004060), 17760 (0x00004560), 19040 (0x00004A60), 20320 (0x00004F60), 21600 (0x00005460), 22880 (0x00005960) and 24160 (0x00005E60) respectively.

The test sequence ends with TS at 27840 (0x00006CC0) in the last packet of the sequence with RTP sequence number 69.

When all the expected compressed headers have been received by the SS, the SS disconnects the session. The SS calculates the Average Compressed Header Size and checks if it meets the test requirements for the IP version used.

##### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |

| | | | |
|---|---|---|---|
| 1 | | | After the PS session setup the UE is in ROHC U-mode operation and in the IR state. |
| 2 | ← | Test packets | The SS starts sending test packets. The test sequence consists of 70 packets. |
| 3 | → | Test packets in U-mode operation. | The UE starts returning test packets in U-mode operation using the test loop function. |
| 4 | ← | ROHC feedback packet of feedback type 2 | Between the 6th and 7th (SN=5 and SN=6) packet of the sequence the SS initiates a transition to R-mode operation. |
| 5 | UE | | The UE changes immediately to R-mode operation and continues to send the test packets |
| 6 | → | Test packets in R-mode operation. | The UE returns test packets in R-mode operation using the test loop function. |
| 6a | ← | ROHC feedback packet of feedback type 2 | During the test case the SS generates a feedback message when the ROHC packet type octet of the received compressed header matches any of the values as described in the table 7.3.6.3.1. |
| 7 | SS | | For packets SN = 20, 21 and 22, the SS increases TS to represent a 7 packet skip and sets TS to (20+7)x160=4320, (21+7+7)x160=5600 and (22+7+7+7)x160=6880 respectively. |
| 8 | SS | | For packets SN = 30, 31, 32, 33 and 34, the SS increases TS to represent a 7 packet skip and sets TS to 9280, 10560, 11840, 13120 and 14400 respectively. |
| 9 | SS | | For packets SN = 40, 41, 42, 43, 44, 45, and 46, the SS increases TS to represent a 7 packet skip and sets TS to 16480, 17760, 19040, 20320, 21600, 22880 and 24160 respectively. |
| 10 | SS | After the SS has received all 70 packets in the test sequence the SS disconnects the PS session. | |

Specific Message Contents

RADIO BEARER SETUP message (during Generic ROHC performance test procedure in clause 7.3.6.1.1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 clause 9 Default Message Contents, with the exceptions defined in clause 7.3.6.1.1 and the following exception:

| **Information Element** | **Value/remark** |
|---|---|
| - PDCP ROHC target mode | R-mode |

ROHC feedback packet of feedback type 2 (Step 4 and 6a)

```
  0   1   2   3   4   5   6   7
+---+---+---+---+---+---+---+---+
| 1   1   1   1   0 |   Code    |  feedback type octet
+---+---+---+---+---+---+---+---+
|Acktype| Mode  |      SN       |
+---+---+---+---+---+---+---+---+
```

```
|                SN                 |
+---+---+---+---+---+---+---+---+---+
| 0   0   0   1 | 0   0   0   1 |
+---+---+---+---+---+---+---+---+---+
|                CRC                |
+---+---+---+---+---+---+---+---+---+
```

Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set to 0x3 (means R-mode)
- SN is set to 0x000
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

  The test equipment waits for a UOR-2, IR-DYN or IR packet from the RoHC compressor with the mode transition parameter set to R. The value of x is the RTP SN of this received packet for which the test equipment generates the second feedback packet of type 2.

#### 7.3.6.9.5 Test requirements

The average compressed header size shall not exceed the limits specified in Table 7.3.6.9.1

**Table 7.3.6.9.1: Test Requirement for TS function during DTX with varying delta in R-mode**

| | Average Compressed Header Size, IPv4 | Average Compressed Header size, IPv6 |
|---|---|---|
| **SN <= 19** | See Test 1b (Test case 7.3.6.3 in TS 34.123-1) | |
| **20 <= SN <= 22 + x<br>30 <= SN <= 34 + x<br>40 <= SN <= 46 + x** | 15 octets | 15 octets |
| **Other SN values** | 5 octets | 5 octets |

The sequence of expected compressed headers can be illustrated as follow (informative):

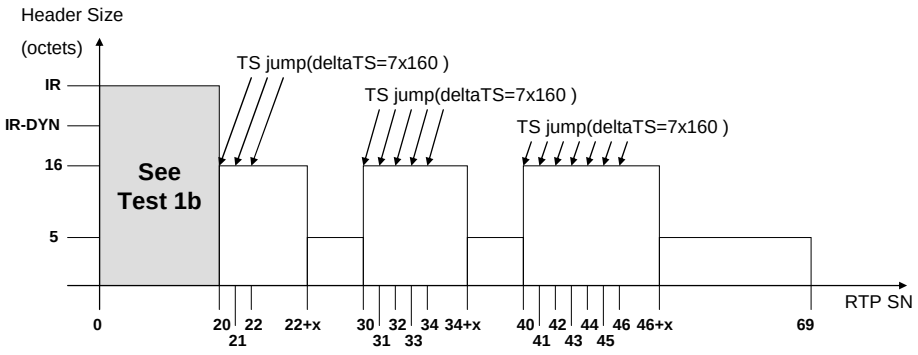



**Figure 7.3.6.9: Expected outcome for TS function during DTX with varying delta in R-mode test**

### 7.3.6.10 SRNS relocation for ROHC RTP O-mode compressor

#### 7.3.6.10.1 Definition and applicability

The purpose of this test case is to verify that the compressor does not interrupt efficient header compression upon reception of the indication about SRNS relocation being performed, i.e. that it makes use of efficient compressed packet formats available to ROHC RTP [40] when operating in O-mode when data transmission is resumed after SRNS relocation.

7.3.6.10.2 Conformance requirement

The header compression context relocation is performed by the decision of upper layers in source RNC based on the UE radio capabilities. The decision is done independently every time the SRNS relocation occurs and is specific for each header compression protocol. It is indicated to UE as a part of the SRNS relocation signalling of the upper layer and the selected relocation method is configured to UE PDCP by the upper layer.

The header compression context relocation shall not be performed if the radio bearer is configured to support the lossless SRNS Relocation.

**In the UE**, upon reception of the indication about SRNS relocation being performed:

- the upper layer configures PDCP (*CPDCP-CONFIG.Req*) to perform either re-initialisation (R) or the context relocation (C) of header compression protocols;
- if the context relocation is to be applied for RFC3095 header compression protocol:
  - if the **compressor** (M-HC) is operating in **R mode**:
    - uplink data may be compressed and transmitted normally.
  - if the **compressor** (M-HC) is operating in **O mode**:
    - compress and transmit uplink data as specified in [8] using the assumption that all ROHC uplink packets transmitted are likely to be lost. When SRNS relocation is completed, M-HC should return to normal operation.

NOTE: When the M-HC is using the assumption that all ROHC uplink packets transmitted are likely to be lost:
- the M-HC can not transit to a higher compression state;
- for W-LSB encoding, the M-HC updates the set of candidate reference values used by the decompressor by adding newly transmitted values but not removing old values.

…

The outline of each test case follows the same format with respect to the input sequences and the requirements Test 1a and 1b are base tests using a well-behaving flow of packets as one of the inputs. All subsequent tests are based on test 1a or test 1b, each with specific test events added to the packet flow of the base tests.

…

The purpose of the base test case is to verify that the compressor properly implements compression for a well-behaved IP/UDP/RTP packet flow, i.e. that t it makes use of efficient compressed packet formats available to ROHC RTP [40] when operating in O-mode.

A sequence consisting of 70 packets in total is used where all header fields are set according to the basic test packet structure, as described in subclause A.3, with addition of the following:

1. The RTP Sequence Number is a linearly increasing counter with a packet-to-packet delta of 1, set to 0x0000 for the first packet and thus ending with 0x0045 (69) in the last packet of the sequence
2. The RTP Time Stamp is a linearly increasing counter with a packet-to-packet delta of 160, set to 0x00000000 for the first packet and thus ending with 0x00002B20 (11040) in the last packet of the sequence.
3. The IP Identification is set to the same value as the RTP Sequence Number; this means that for IPv4 the IP-ID behaviour is not random, thus value(RND)=0 defined in [40] for both IPv4 and IPv6.

Between the 6th and 7th packets (SN=5 and SN=6) of the sequence, a ROHC feedback packet of feedback type 2 is to be given to the ROHC compressor to trigger an immediate transition to O-mode operation. The format of that packet is as follows:

```
  0   1   2   3   4   5   6   7
+---+---+---+---+---+---+---+---+
| 1   1   1   1   0 |   Code    |  feedback type octet
+---+---+---+---+---+---+---+---+
|Acktype| Mode  |      SN       |
+---+---+---+---+---+---+---+---+
|              SN               |
+---+---+---+---+---+---+---+---+
| 0   0   0   1 | 0   0   0   1 |
+---+---+---+---+---+---+---+---+
|              CRC              |
+---+---+---+---+---+---+---+---+
```

Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set to 0x2 (means O-mode)
- SN is set to 0x000
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

NOTE: If compressor uses CID field in compressed packet, the CID field should be included in the feedback packet and the Code and CID should be set as defined in [40].

…

The test sequence is the same as in subclause A.2.1, with the following exceptions:

Packets with SN = 10 to SN = 59 are removed from the sequence.

SRNS relocation occurs between packet with SN = 9 and packet with SN = 60, thus simulating a 1s long SRNS relocation that affects compression of the IP/UDP/RTP packet flow.

NOTE: The operation of the ROHC compressor is not affected by the time interval between packets with SN = 9 and SN = 60 (timer-based compression is not allowed because no appropriate feedback is provided).

Reference(s)

3GPP TS 25.323 clauses 5.4.2, A.1.2, A.2.1, A.2.13.

### 7.3.6.10.3 Test purpose

To verify that the compressor does not interrupt efficient header compression upon reception of the indication about SRNS relocation being performed, i.e. that it makes use of efficient compressed packet formats available to ROHC RTP [40] when operating in O-mode when data transmission is resumed after SRNS relocation.

To verify the ROHC compressor shall normally add information to the compression context as new uplink data are compressed, but not remove any existing information from the compression context upon reception of the indication about SRNS relocation being performed and if the context relocation is to be applied for RFC3095 header compression protocol when operating in O-mode.

To verify that normal operation is applied when SRNS relocation with header compression context relocation is completed.

### 7.3.6.10.4 Method of test

Initial conditions

User Equipment:

The UE is in Idle mode (state 3 or state 7) as specified in clause 7.4 of TS 34.108. Execute the generic ROHC performance test procedure for a mobile terminating packet switched session according to clause 7.3.6.1.1.

Profile 0x0001 for compression of RTP/UDP/IP headers only is used

N=4

Related ICS/IXIT Statement(s)

Support of PS Yes/No

Support of ROHC Yes/No

Support of context relocation Yes/No

UE Supports IPv4 Yes/No

UE Supports IPv6 Yes/No

Test procedure

After the session setup the UE ROHC compressor is in the U-mode operation in accordance with RFC3095 and in the IR state. The SS starts to send IP packets to the UE, the test sequence consists of 70 packets. The UE returns the IP packets in ROHC U-mode using the test loop function. Between the 6$^{th}$ and 7$^{th}$ packets (SN=5 and SN=6) of the sequence, a ROHC feedback packet of feedback type 2 is sent to the UE ROHC compressor to trigger an immediate transition to O-mode operation.

The SS transmits a RADIO BEARER RECONFIGURATION message. Packets with SN = 10 to SN = 59 are removed from the sequence.

The UE performs a combined hard handover and SRNS relocation with header compression context relocation and then transmits a RADIO BEARER RECONFIGURATION COMPLETE message in the new cell. The SS resumes the transmission of IP packets and checks that all transmitted IP Packets are sent back by the UE.

When all the expected compressed headers have been received by the SS, the SS disconnects the session. The SS calculates the Average Compressed Header Size and checks if it meets the test requirements for the IP version used.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | After the PS session setup the UE is in ROHC U-mode operation and in the IR state. |
| 2 | ← | | Test packets | The SS starts sending test packets |
| 3 | → | | Test packets in U-mode operation. | The UE starts returning test packets in U-mode operation using the test loop function. |
| 4 | ← | | ROHC feedback packet of feedback type 2 | Between the 6$^{th}$ and 7$^{th}$ packet (SN=5 and SN=6) of the sequence, a ROHC feedback packet of feedback type 2 is sent to the ROHC compressor to trigger an immediate transition to O-mode operation. |
| 5 | UE | | | The UE changes immediately to O-mode operation and continues to send the test packets |
| 6 | → | | Test packets in O-mode operation. | |
| 7 | ← | | RADIO BEARER RECONFIGURATION | |
| | | | | The SS stop sending test packets |
| 8 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 9 | ← | | Test packets | The SS resumes sending test packets. |
| 10 | → | | Test packets in O-mode operation. | |

| | | | |
|---|---|---|---|
| 11 | SS | After the SS has received all the packets in the test sequence the SS disconnects the PS session. | |


Specific Message Contents

RADIO BEARER SETUP message (during Generic ROHC performance test procedure in clause 7.3.6.1.1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 clause 9 Default Message Contents, with the exceptions defined in clause 7.3.6.1.1 and the following exception:

| **Information Element** | **Value/remark** |
|---|---|
| - PDCP ROHC target mode | O-mode |

ROHC feedback packet of feedback type 2 (Step 4)

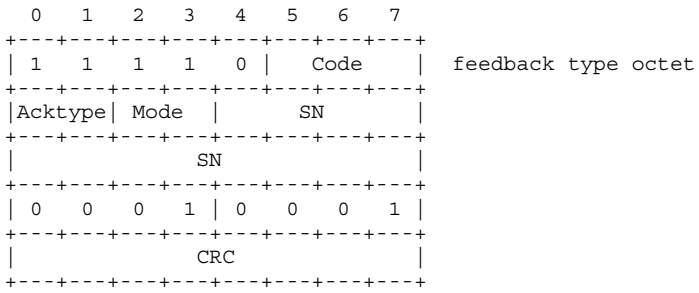


Where:

- Code is set to 0x4 (indicates that feedback data above the type octet is 4 octets)
- Acktype is set to 0x0 (means ACK)
- Mode is set to 0x2 (means O-mode)
- SN is set to 0x000
- CRC is the 8-bit CRC computed over the entire feedback payload including any CID fields but excluding the packet type, the 'Size' field and the 'Code' octet, using the polynomial defined in RFC 3095.

RADIO BEARER RECONFIGURATION (Step 7)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Packet to CELL_DCH from CELL_DCH in PS”, with the following exceptions:

| **Information Element** | **Value/remark** |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | |
| - RB identity | TBD |
| - PDCP info | |
| - Support for lossless SRNS relocation | FALSE |
| - PDCP PDU header | Present |
| - Header compression information | present |
| CHOICE *algorithm type* | |
| - RFC3095 | |
| - RLC info | |
| - CHOICE Uplink RLC mode | UM RLC |
| - CHOICE Downlink RLC mode | UM RLC |
| RB with PDCP context relocation info list | |
| - PDCP context relocation info | |
| - RB identity | TBD |
| - Downlink RFC 3095 context relocation indication | TRUE |
| - Uplink RFC 3095 context relocation indication | TRUE |

#### 7.3.6.10.5 Test requirements

The average compressed header size shall not exceed the limits specified in Table 7.3.6.10.

**Table 7.3.6.10: Test Requirement for SRNS relocation for ROHC RTP O-mode compressor**

| | Average Compressed Header Size, IPv4 | Average Compressed Header size, IPv6 |
|---|---|---|
| **SN <= N-1** | 44 octets | 68 octets |
| **N <= SN <= 9** | 5 octets | 5 octets |
| **60 <= SN <= 59+N** | 8 octets | 8 octets |
| **SN >= 60+N** | 5 octets | 5 octets |

With N value equal to 4.

The sequence of expected compressed headers can be illustrated as follow (informative):

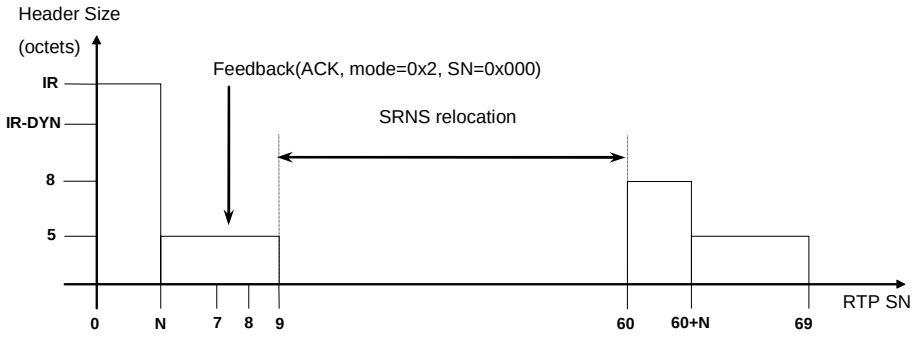



**Figure 7.3.6.10: Expected outcome for SRNS relocation for RTP O-mode compressor test**

## 7.3.7 PDCP AMR Data PDU testing

### 7.3.7.1 PDCP AMR Data PDU testing

#### 7.3.7.1.1 Definition and applicability

Applicable for all UEs supporting CS Voice over HSPA and a Radio Bearer as described in the Common Test Sequences.

The UE shall be capable to deal with AMR data PDU and to correctly set the value of the CS counter.

#### 7.3.7.1.2 Conformance requirement

The Packet Data Convergence Protocol shall perform the following functions:

- header compression and decompression of IP data streams (e.g., TCP/IP and RTP/UDP/IP headers for IPv4 and IPv6) at the transmitting and receiving entity, respectively.
- transfer of user data. This function is used for conveyance of data between users of PDCP services.
- maintenance of PDCP sequence numbers for radio bearers that are configured to support lossless SRNS Relocation or lossless DL RLC PDU size change.
- transfer of CS counter if the radio bearer is configured to convey AMR and AMR WB frames.
- add and remove the padding in PDCP PDU for octet alignment.

PDCP uses the services provided by the Radio Link Control (RLC) sublayer.

(…)

If radio bearer is configured to convey AMR or AMR WB frames for every 20ms, the sender shall :

- if the PDCP SDU length is of 0 bit or no PDCP SDU is received by PDCP entity:
  - discard the PDCP SDU if any and no PDCP PDU is submitted to the lower layer;
- if the PDCP SDU length is of 1 or more bits:
  - include the CS counter in the PDCP AMR Data PDU as specified in subclause 5.6.1.4 of TS 25.323;
  - indicate the PDCP AMR PDU type in the PDU type field;
  - fill the data field of the PDCP AMR PDU type with the PDCP SDU and add padding bits as specified in subclause 8.2.4 of TS 25.323
- increment the CS counter;

When the PDCP entity at the Receiver receives the PDCP PDU from lower layers, it shall:

- if the received PDCP PDU is of type PDCP AMR Data PDU:
  - the PDCP SDU is derived from the data field of the PDCP AMR Data PDU. The receiver determines the bit aligned data content and Frame Type from the PDU Data field length, as possible AMR and AMR WB payload has a unique size when being octet aligned;
- deliver the PDCP SDU and CS counter from the received PDCP header to the upper layer. (…)

In case the radio bearer is configured to convey AMR or AMR WB frames, the CS counter shall be included in the PDCP AMR Data PDU.

The value of the CS counter shall be set to the first to fifth LSBs of the CFN at which the packet has been received from higher layers.

(…)

The PDU type field indicates the PDCP Data PDU type.

| Bit | PDU Type |
|---|---|
| **000** | PDCP Data PDU (Table 7) |
| **001** | PDCP SeqNum PDU (Table 8) |
| **010** | PDCP AMR Data PDU (Table 9) |
| **011-111** | Reserved (PDUs with this encoding are invalid for this version of the protocol) |

(…)

The PDCP AMR Data PDU is used to convey:

- a PDCP SDU containing AMR or AMR WB frame

The format of the PDCP AMR Data PDU is shown in Table 9.

**Table 9: PDCP AMR Data PDU format**

| PDU type | CS counter |
|---|---|
| Data | |

The PDCP PDU is octet aligned but the actual PDCP SDU carrying the AMR or AMR WB frame may not be octet aligned. The AMR classes are always encoded in the order of class A, B and C, where the first bit of data follows immediately after the CS counter field and any padding for octet alignment is inserted at the end of the data field.

(…)

Length: 5 bits

CS counter field value indicates the timing of AMR or AMR WB frame.

Reference(s)

TS 25.323 clauses 5, 5.3, 5.6.1.4, 8.3.1, 8.2.4, 8.3.5

#### 7.3.7.1.3 Test purpose

1. To verify that the UE transmits and receives AMR Data PDU in unacknowledged mode (RLC UM) as configured by higher layers.

2. To verify that the UE includes the CS counter and sets it to the first to fifth LSBs of the CFN at which the packet has been received from higher layers.

#### 7.3.7.1.4 Method of test

Initial conditions

UE is in Idle mode (state 2 or state 7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT Statement(s)

Support of CS Voice over HSPA (Yes/No)

Test procedure

a) The SS setups a circuit switched session including radio bearer and UE test loop mode 1 in RLC UM using Common test procedures for mobile terminated CS switched sessions. Usage of "PDCP AMR Data" PDU has been configured by higher layers.

b) The SS sends an AMR data packet.

c) After having received the AMR data packet, the PDCP entity of the UE shall recognize the PDCP PDU type and shall handle the received AMR data packet with the appropriate decoding method. Then it forwards the data to its Radio Bearer Loop Back entity. The received data shall be returned by the UE via its PDCP configuration using PDCP AMR Data PDU. The CS counter field of the PDCP AMR Data PDU looped back shall be set to the first to fifth LSBs of the CFN at which the packet has been received from higher layers.

d) The SS receives and decodes the data packet. The decoded data packet shall be identical with the data as sent before. The SS verifies that the CS counter is set to the first to fifth LSBs of a CFN value comprised between (current CFN - 4) and (current CFN).

e) Steps b) through d) are repeated 10 times, with 500 ms between the sending of each AMR data packet in the downlink.

f) The SS deactivates the UE test loop mode and terminates the connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| Setup a UE terminated CS session (using UE test loop mode 1) | | | | |
| 1 | ← | | PDCP Data | The SS creates an AMR data packet (PDCP AMR Data PDU).<br><br>The SS sends a PDCP AMR Data PDU using the RLC-UM-Data-Request Primitive with the following content to the UE:<br>PDU type = 010 (PDCP AMR Data PDU)<br>CS counter = first to fifth LSBs of the CFN at which the packet has been received from higher layers<br>data: below described AMR frames<br><br>After having received the PDCP AMR Data PDU, the UE decodes the PDU and recognizes PDU type = 010 (PDCP AMR Data PDU)<br><br>The AMR data packet is forwarded via PDCP-SAP to its Radio Bearer Loop Back (RB LB) entity.<br><br>The RB LB entity in UE test loop mode 1 returns the received data packet and sends it back to its PDCP entity. |
| 2 | → | | PDCP Data | The UE sends a PDCP AMR Data PDU using the RLC-UM-Data-Request Primitive with the following content back to the SS:<br>PDU type = 010 (PDCP AMR Data PDU)<br>CS counter = first to fifth LSBs of the CFN at which the packet has been received from higher layers<br>data: previously received AMR frames<br><br>After reception of this AMR data packet, the SS applies the appropriate decoding function for the received data and verifies that CS counter is set to the first to fifth LSBs of a CFN value comprised between (current CFN - 4) and (current CFN) |
| | | | | Steps 1-2 are repeated 10 times, with 500 ms between the sending of each AMR data packet in the downlink |
| Deactivate a UE terminated CS session (using UE test loop mode 1) | | | | |

Specific Message Contents

RRC CONNECTION SETUP message

The contents of the RRC CONNECTION SETUP message applied in the preamble "Setup a UE terminated CS session in UM RLC" of this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] (CS connection) with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access capability update requirement | <br>TRUE<br>NOTE: Value will be checked. Stated capability must be compatible with 34.123-2 (c.f. PICS/PIXIT statements in GSM) and the user settings |

RADIO BEARER SETUP message

The contents of the RADIO BEARER SETUP message are identical to those applied in the preamble "Setup a UE terminated CS session in UM RLC"

Content of PDCP Data PDU (Step 1)

| Information Element | Value/remark |
|---|---|
| PDU type | 010 |
| CS counter | first to fifth LSBs of the CFN at which the packet has been received from higher layers |
| Data | 244 bits of AMR data + 4 bits of padding |

Content of PDCP Data PDU (Step 2)

| Information Element | Value/remark |
|---|---|
| PDU type | 010 |
| CS counter | first to fifth LSBs of the CFN at which the packet has been received from higher layers |
| Data | Same content as Data from PDCP Data PDU at Step 1 |

#### 7.3.7.1.5 Test requirements

After having received the AMR data packet conveyed with the "PDCP AMR Data" PDU, the UE shall return the data packets as indication that the previous packets have been received and handled correctly (PDCP AMR Data PDU).

The CS counter in the PDCP AMR Data PDUs received from the UE shall be set to the first to fifth LSBs of a CFN value comprised between (current CFN – 4) and (current CFN).

## 7.4 BMC

General

For BMC testing, the UE manufacturers shall define CB data as PIXIT (CB-Data 1 and 2) for different CB message types and for CB Data41 (ANSI-41 data) and it shall describe how the reception is indicated in a clear way on UE side.

Only Cell Broadcast Services (CBS) as distributed BMC service is applied. For a UE supporting BMC, it is assumed, that there is a BMC entity established, if Initial conditions are reached.

If not otherwise mentioned, the same procedures as used in RRC test specification [TS 34.123-1] are applied to reach Initial conditions for BMC testing.

It shall be possible to activate and deactivate a CB message types by using the Message ID of CB data 1, 2 and CB41 data 1 on UE side.

### 7.4.1 BMC RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 7.4.1.1 Transport channel parameters of BMC RAB and SRBs for CCCH, SRB for DCCH, and SRB for BCCH

| Higher layer | RAB/signalling RB | SRB#1 | SRB#2 | SRB#3 | SRB#4 | SRB#5 | SRB#6 | RAB#30 |
|---|---|---|---|---|---|---|---|---|
| | User of Radio Bearer | RRC | RRC | RRC | NAS_DT High prio | NAS_DT Low prio | RRC | - |
| RLC | Logical channel type | CCCH | DCCH | DCCH | DCCH | DCCH | BCCH | CTCH |
| | RLC mode | UM | UM | AM | AM | AM | TM | UM |
| | Payload sizes, bit | 152 | 136 or 120* | 128 | 128 | 128 | 166 | 152 |
| | Max data rate, bps | 45600 | 40800 or 36000 | 38400 | 38400 | 38400 | 49800 | 45600 |

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | AMD/UMD/TrD PDU header, bit | | 8 | 8 | 16 | 16 | 16 | 0 | 8 |
| MAC | MAC header, bit | | 8 | 24 or 40 | 24 | 24 | 24 | 2 | 8 |
| | MAC multiplexing | | 7 logical channel multiplexing | | | | | | |
| Layer 1 | TrCH type | | FACH | | | | | | |
| | TB sizes, bit | | 168 | | | | | | |
| | TFS | TF0, bits | 0x168 | | | | | | |
| | | TF1, bits | 1x168 | | | | | | |
| | | TF2, bits | 2x168 | | | | | | |
| | | TF3, bits | 3x168 | | | | | | |
| | TTI, ms | | 10 | | | | | | |
| | Coding type | | CC 1/2 | | | | | | |
| | CRC, bit | | 16 | | | | | | |
| | Max number of bits/TTI before rate matching | | 1136 | | | | | | |
| | RM attribute | | 200-240 | | | | | | |

* MAC header size and RLC payload size depend on use of U-RNTI or C-RNTI.

#### 7.4.1.2 TFCS

| | |
|---|---|
| TFCS size | 4 |
| TFCS | (BMC RAB and SRBs for CCCH/DCCH/BCCH) = TF0, TF1, TF2, TF3 |

#### 7.4.1.3 Physical channel parameters

| | | |
|---|---|---|
| SCCPCH | DTX position | Flexible |
| | Spreading factor | 64 |
| | Number of TFCI bits/slot | 8 |
| | Number of Pilot bits/slot | 0 |
| | Number of data bits/slot | 72 |
| | Number of data bits/frame | 1080 |

### 7.4.2 General BMC message reception

#### 7.4.2.1 UE in RRC Idle mode

##### 7.4.2.1.1 Definition and applicability

Applicable only for a UE supporting Cell Broadcast Services (CBS) as a type of Broadcast/Multicast Services.

It shall be possible to indicate the reception of certain CBS message contents carried with certain activated CB message types in a clear way on UE side.

##### 7.4.2.1.2 Conformance requirement

A UE supporting Cell Broadcast Services shall be capable to receive BMC messages in the RRC Idle mode.

Reference(s)

TS 25.324 clause 9.1

##### 7.4.2.1.3 Test purpose

To verify, that a BMC configuration for a UE is able to receive activated CBS messages when in RRC Idle mode.

##### 7.4.2.1.4 Method of test

Initial conditions

UE is in RRC Idle mode; BMC entity is established

SS: 1 cell,

NOTE: The CB message ID stored on the SIM shall be known for this test (parameter for CBS PDU's). The CBS data type shall be allocated and activated in the UE.

Related ICS/IXIT Statement(s)

Support of BMC – Yes/No

Support of PS – Yes/No

ICS: CBS message support - YES/No

IXIT: CBS-Data 1: Octetstring of N (where N≥1 and less than 1246)

NOTE: For CB-Data 1 IXIT, the manufacturer shall define CBS data as Octetstring together with the CB message ID used for transmitting this CB data, which is indicated by the UE after reception in a clear way according to the capabilities stored on the SIM. Furthermore, the manufacturer shall describe the indication on UE side (e.g. certain CBS traffic information)

Test procedure

a) The UE in RRC Idle mode is triggered to wait for the next system information. The UE is activated to receive CBS messages,

b) The UE and the SS have configured their RLC, MAC and PHYs layers with all CB related system information, broadcasted by SS

c) The SS sends the CBS message containing an activated CBS message type according to CB-Data 1 to the UE; this shall be repeated for "CPREP" times (indicated by parameter "repetition period")

d) The UE indicates in an unambiguous way, that this message was received, by certain clear indications (e.g. a unique part of the CB data contents)

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | SYSTEM INFORMATION | Transmit this message as described below on the BCCH, in addition to the regular BCCH transmissions (see RRC test description). Included are CB related system information parameter of the CBS:<br>- CTCH ID,<br>- FACH ID and associated format set,<br>- S-CCPCH ID,<br>- BMC Schedule Level 1 information (N,K) |
| 2 | | | | The SS waits for about 10 s to make sure, that the UE is configured to receive CBS data |
| 3 | | ← | BMC CBS Message | Activated CBS message with CB Data 1 message content as described by the manufacturer. This message shall be repeated "CPREP" times, Parameter:<br>- Message_ID,<br>- Serial-No,<br>- Data coding scheme,<br>- CB-Data 1, |
| 4 | | | | After having received the BMC CBS message the UE shall indicate the reception of CB Data 1 in a clear way. |

Specific Message Contents

SYSTEM INFORMATION TYPE 5 AND 6

The contents of SYSTEM INFORMATION TYPE 5 AND 6 Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE mode<br>- CTCH allocation period<br>- CTCH frame offset<br>Secondary CCPCH system<br>- Secondary CCPCH information<br>- TFCS<br>- FACH/PCH information<br>- TFS<br>- CTCH indicator | (see RRC default test settings)<br>N<br>K<br>1<br>(see RRC default test settings)<br>1<br>(see RRC default test settings)<br>TRUE |

BMC CBS Message

| Information Element | Value/remark |
|---|---|
| Message Type | 1 (CBS message) |
| Message ID | Bitstring (16) CB message ID, it shall fit to the stored Message ID in the SIM inserted in the UE (source and type) [see TS 23.041] according to the transmitted CB-Data 1 content. |
| Serial Number<br>- Geographic Scope Indicator (2 bit)<br>- Message Code (10 bit)<br>- Update Number (4 bit) | [see TS 23.041]<br>11 (Normal Cell wide)<br>in accordance with the Message ID<br>for a new message: 0000, incremented by one for each repetition |
| Data Coding Scheme | Bitstring (16) ID of the alphabet/coding and the applied language [see TS 23.041] |
| CB Data | Octetstring, [see IXIT value: CB-Data 1] |

#### 7.4.2.1.5 Test requirements

The UE shall store and decode a received activated CBS message.

### 7.4.2.2 UE in RRC Connected mode, state CELL_PCH

#### 7.4.2.2.1 Definition and applicability

Applicable only for a UE supporting Cell Broadcast Services (CBS) as a type of Broadcast/Multicast Services.

It shall be possible to indicate the reception of certain CBS message contents carried with certain activated CB message types in a clear way on UE side.

#### 7.4.2.2.2 Conformance requirement

A UE supporting Cell Broadcast Service (CBS) shall be capable to receive BMC messages (...) in CELL_PCH RRC-state of Connected mode.

Reference(s)

TS 25.324 clause 9.1

#### 7.4.2.2.3 Test purpose

To verify, that a BMC configuration for a UE is able to receive activated CBS messages when in RRC Connected mode, state CELL_PCH.

7.4.2.2.4 Method of test

Initial conditions

UE is in Connected mode state CELL_PCH; BMC entity is established

SS: 1 cell,

NOTE: The CB message ID stored on the SIM shall be known for this test (parameter for CBS PDU's). The CBS data type shall be allocated and activated in the UE.

Related ICS/IXIT Statement(s)

ICS:

Support of BMC – Yes/No

Support of PS – Yes/No

CBS message support - YES/No

IXIT: CBS-Data 1: Octetstring of N (where N≥1 and less than 1246)

NOTE: For CB-Data 1 IXIT, the manufacturer shall define CBS data as Octetstring together with the CB message ID used for transmitting this CB data, which is indicated by the UE after reception in a clear way according to the capabilities stored on the SIM. Furthermore, the manufacturer shall describe the indication on UE side (e.g. certain CBS traffic information)

Test procedure

a) The UE in RRC CELL_PCH is triggered to wait for the next system information. The UE is activated to receive CBS messages.

b) The UE and the SS have configured their RLC, MAC and PHYs layers with all CB related system information, broadcasted by SS.

c) The SS sends the CBS message containing an activated CBS message type according to CB-Data 1 to the UE; this shall be repeated for "CPREP" times (indicated by parameter "repetition period").

d) The UE indicates in an unambiguous way, that this message was received, by certain clear indications (e.g. a unique part of the CB data contents).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | SYSTEM INFORMATION | Transmit this message as described below on the BCCH, in addition to the regular BCCH transmissions (see RRC test description). Included are CB related system information parameter of the CBS:<br>- CTCH ID,<br>- FACH ID and associated format set,<br>- S-CCPCH ID,<br>- BMC Schedule Level 1 information (N,K) |
| 2 | | | | The SS waits for about 10 s to make sure, that the UE is configured to receive CBS data |
| 3 | | ← | BMC CBS Message | Activated CBS message with CB Data 1 message content as described by the manufacturer. This message shall be repeated "CPREP" times, Parameter:<br>- Message_ID,<br>- Serial-No,<br>- Data coding scheme,<br>- CB-Data 1, |
| 4 | | | | After having received the BMC CBS message the UE shall indicate the reception of CB Data 1 in a clear way. |

Specific Message Contents

SYSTEM INFORMATION TYPE 5 and 6

The contents of SYSTEM INFORMATION TYPE 5 and 6 Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE mode | (see RRC default test settings) |
| - CTCH allocation period | N |
| - CTCH frame offset | K |
| Secondary CCPCH system | 1 |
| - Secondary CCPCH information | (see RRC default test settings) |
| - TFCS | 1 |
| - FACH/PCH information | (see RRC default test settings) |
| - TFS | TRUE |
| - CTCH indicator | (see RRC default test settings) |

BMC CBS Message

| Information Element | Value/remark |
|---|---|
| Message Type | 1 (CBS message) |
| Message ID | Bitstring (16) CB message ID, it shall fit to the stored Message ID in the SIM inserted in the UE (source and type) [see TS 23.041] according to the transmitted CB-Data 1 content. |
| Serial Number | [see TS 23.041] |
| - Geographic Scope Indicator (2 bit) | 11 (Normal Cell wide) |
| - Message Code (10 bit) | in accordance with the Message ID |
| - Update Number (4 bit) | for a new message: 0000, incremented by one for each repetition |
| Data Coding Scheme | Bitstring (16) ID of the alphabet/coding and the applied language [see TS 23.041] |
| CB Data | Octetstring, [see IXIT value: CB-Data 1] |

#### 7.4.2.2.5 Test requirements

The UE shall store and decode a received activated CBS message.

### 7.4.2.3 UE in RRC Connected mode, state URA_PCH

#### 7.4.2.3.1 Definition and applicability

Applicable only for a UE supporting Cell Broadcast Services (CBS) as a type of Broadcast/Multicast Services.

It shall be possible to indicate the reception of certain CBS message contents carried with certain activated CB message types in a clear way on UE side.

#### 7.4.2.3.2 Conformance requirement

A UE supporting Cell Broadcast Service (CBS) shall be capable to receive BMC messages (...) in CELL_PCH and URA_PCH RRC-state of Connected mode.

Reference(s)

TS 25.324 clause 9.1.

#### 7.4.2.3.3 Test purpose

To verify, that a BMC configuration for a UE is able to receive activated CBS messages when in RRC Connected mode, state URA_PCH.

#### 7.4.2.3.4 Method of test

Initial conditions

UE is in Connected mode state URA_PCH; BMC entity is established

SS: 1 cell.

NOTE: The CB message ID stored on the SIM shall be known for this test (parameter for CBS PDU's). The CBS data type shall be allocated and activated in the UE.

Related ICS/IXIT Statement(s)

ICS:

Support of BMC – Yes/No

Support of PS – Yes/No

CBS message support - YES/No.

IXIT: CBS-Data 1: Octetstring of N (where N≥1 and less than 1246).

NOTE: For CB-Data 1 IXIT, the manufacturer shall define CBS data as Octetstring together with the CB message ID used for transmitting this CB data, which is indicated by the UE after reception in a clear way according to the capabilities stored on the SIM. Furthermore, the manufacturer shall describe the indication on UE side (e.g. certain CBS traffic information)

Test procedure

a) The UE in RRC URA_PCH is triggered to wait for the next system information. The UE is activated to receive CBS messages.

b) The UE and the SS have configured their RLC, MAC and PHYs layers with all CB related system information, broadcasted by SS.

c) The SS sends the CBS message containing an activated CBS message type according to CB-Data 1 to the UE, this shall be repeated for "CPREP" times (indicated by parameter "repetition period").

d) The UE indicates in an unambiguous way, that this message was received, by certain clear indications (e.g. a unique part of the CB data contents).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | SYSTEM INFORMATION | Transmit this message as described below on the BCCH, in addition to the regular BCCH transmissions (see RRC test description). Included are CB related system information parameter of the CBS:<br>- CTCH ID,<br>- FACH ID and associated format set,<br>- S-CCPCH ID,<br>- BMC Schedule Level 1 information (N,K) |
| 2 | | | | The SS waits for about 10 s to make sure, that the UE is configured to receive CBS data |
| 3 | | ← | BMC CBS Message | Activated CBS message with CB Data 1 message content as described by the manufacturer. This message shall be repeated "CPREP" times, Parameter:<br>- Message_ID,<br>- Serial-No,<br>- Data coding scheme,<br>- CB-Data 1, |
| 4 | | | | After having received the BMC CBS message the UE shall indicate the reception of CB Data 1 in a clear way. |

Specific Message Contents

SYSTEM INFORMATION TYPE 5 and 6

The contents of SYSTEM INFORMATION TYPE 5 and 6 Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE mode | (see RRC default test settings) |
| - CTCH allocation period | N |
| - CTCH frame offset | K |
| Secondary CCPCH system | 1 |
| - Secondary CCPCH information | (see RRC default test settings) |
| - TFCS | 1 |
| - FACH/PCH information | (see RRC default test settings) |
| - TFS | TRUE |
| - CTCH indicator | (see RRC default test settings) |

BMC CBS Message

| Information Element | Value/remark |
|---|---|
| Message Type | 1 (CBS message) |
| Message ID | Bitstring (16) CB message ID, it shall fit to the stored Message ID in the SIM inserted in the UE (source and type) [see TS 23.041] according to the transmitted CB-Data 1 content. |
| Serial Number<br>- Geographic Scope Indicator (2 bit)<br>- Message Code (10 bit)<br>- Update Number (4 bit) | [see TS 23.041]<br>11 (Normal Cell wide)<br>in accordance with the Message ID<br>for a new message: 0000, incremented by one for each repetition |
| Data Coding Scheme | Bitstring (16) ID of the alphabet/coding and the applied language [see TS 23.041] |
| CB Data | Octetstring, [see IXIT value: CB-Data 1] |

#### 7.4.2.3.5 Test requirements

The UE shall store and decode a received activated CBS message.

### 7.4.2.4 UE in RRC Idle mode (ANSI-41 CB data)

#### 7.4.2.4.1 Definition and applicability

Applicable only for a UE supporting Cell Broadcast Services (CBS) for ANSI-41 CB data as a type of Broadcast/Multicast Services.

It shall be possible to indicate the reception of a certain CBS41 message content carried with certain activated CB41 message types in a clear way on UE side.

#### 7.4.2.4.2 Conformance requirement

A UE supporting Cell Broadcast Services shall be capable to receive BMC messages in RRC Idle mode. (…)BMC messages are identified: (…), CBS41 Message

Reference(s)

TS 25.324 clause 9.1.

#### 7.4.2.4.3 Test purpose

To verify, that a BMC configuration supporting ANSI-41 CB Data is able to receive activated CBS41 messages when in RRC Idle mode.

#### 7.4.2.4.4 Method of test

Initial conditions

UE is in RRC Idle mode; BMC entity is established.

SS: 1 cell,

NOTE: The CB message ID stored on the SIM shall be known for this test (parameter for CBS41 PDU's). The CBS41 data type shall be allocated and activated in the UE.

Related ICS/IXIT Statement(s)

ICS:

Support of BMC – Yes/No

Support of PS – Yes/No

CBS41 message support - YES/No.

IXIT: CB41-Data 1: Octetstring of N (where N≥1 and less than 1246).

NOTE: For CB41-Data 1 IXIT, the manufacturer shall define CBS data as Octetstring together with the CB message ID used for transmitting this CB41 data, which is indicated by the UE after reception in a clear way according to the capabilities stored on the SIM. Furthermore, the manufacturer shall describe the indication on UE side (e.g. certain CBS41 traffic information)

Test procedure

a) The UE in RRC Idle mode is triggered to wait for the next system information. The UE is activated to receive expected CBS41 messages as described by the manufacturer.

b) The UE and the SS have configured their RLC, MAC and PHYs layers with all CB related system information, broadcasted by SS.

c) The SS sends the CBS41 message containing an activated CBS41 message type according to CB41-Data 1 to the UE; this shall be repeated for "CPREP" times (indicated by parameter "repetition period").

d) The UE indicates in an unambiguous way, that this message was received, by certain clear indications (e.g. a unique part of the CB41 data contents).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SYSTEM INFORMATION | Transmit this message as described below on the BCCH, in addition to the regular BCCH transmissions (see RRC test description). Included are CB related system information parameter of the CBS:<br>- CTCH ID,<br>- FACH ID and associated format set,<br>- S-CCPCH ID,<br>- BMC Schedule Level 1 information (N,K)<br>In addition, the MIB and SIB 16 are sent as described below to setup the ANSI-41 parameters |
| 2 | | | | The SS waits for about 10 s to make sure, that the UE is configured to receive CB41 data |
| 3 | ← | | BMC CBS41 Message | Activated CBS message with CB41 Data 1 message content as described by the manufacturer. This message shall be repeated "CPREP" times, Parameter:<br>- Message_type,<br>- Broadcast Address<br>- CB41-Data 1 |
| 4 | | | | After having received the BMC CBS message the UE shall indicate the reception of CB41 Data 1 in a clear way. |

Specific Message Contents

MASTER INFORMATION BLOCK (MIB)

The contents of MASTER INFORMATION BLOCK Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| ANSI-41 Core Network information | Present |

SYSTEM INFORMATION TYPE 5 AND 6

The contents of SYSTEM INFORMATION TYPE 5 AND 6 Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE mode<br>- CTCH allocation period<br>- CTCH frame offset<br>Secondary CCPCH system<br>- Secondary CCPCH information<br>- TFCS<br>- FACH/PCH information<br>- TFS<br>- CTCH indicator | (see RRC default test settings)<br>N<br>K<br>1<br>(see RRC default test settings)<br>1<br>(see RRC default test settings)<br>TRUE<br>(see RRC default test settings) |

SYSTEM INFORMATION TYPE 13

The contents of SYSTEM INFORMATION TYPE 13 Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE CN Type<br>- CN domain specific NAS information<br>- NAS (ANSI-41) system information | ANSI-41<br><br>T.B.D |

BMC CBS41 Message

| Information Element | Value/remark |
|---|---|
| Message Type<br>Broadcast Address<br>CB Data41 | 3 (CBS41 Message)<br>Bitstring (40) Address Information of higher layer<br>Octetstring, [see IXIT value: CB41-Data 1] (ANSI-41) |

#### 7.4.2.4.5 Test requirements

The UE shall store and decode a received activated CBS41 message.

### 7.4.2.5 UE in RRC Connected mode, state CELL_PCH (ANSI-41 CB data)

#### 7.4.2.5.1 Definition and applicability

Applicable only for a UE supporting Cell Broadcast Services (CBS) for ANSI-41 CB data as a type of Broadcast/Multicast Services.

It shall be possible to indicate the reception of certain CBS41 message contents carried with certain activated CB41 message types in a clear way on UE side.

#### 7.4.2.5.2 Conformance requirement

A UE supporting Cell Broadcast Service (CBS) shall be capable to receive BMC messages (...) in CELL_PCH RRC-state of Connected mode. (…)BMC messages are identified: (…), CBS41 Message.

Reference(s)

TS 25.324 clause 9.1.

7.4.2.5.3 Test purpose

To verify, that a BMC configuration supporting ANSI-41 CB Data is able to receive activated CBS41 messages when in RRC Connected mode, state CELL_PCH.

7.4.2.5.4 Method of test

Initial conditions

UE is in Connected mode state CELL_PCH; BMC entity is established.

SS: 1 cell,

NOTE: The CB41 message ID stored on the SIM shall be known for this test (parameter for CBS41 PDU's). The CBS41 data type shall be allocated and activated in the UE.

Related ICS/IXIT Statement(s)

ICS:

Support of BMC – Yes/No

Support of PS – Yes/No

CBS41 message support - YES/No.

IXIT: CBS41-Data 1: Octetstring of N (where N≥1 and less than 1246).

NOTE: For CB41-Data 1 IXIT, the manufacturer shall define CBS data as Octetstring together with the CB message ID used for transmitting this CB41 data, which is indicated by the UE after reception in a clear way according to the capabilities stored on the SIM. Furthermore, the manufacturer shall describe the indication on UE side

Test procedure

a) The UE in RRC CELL_PCH is triggered to wait for the next system information. The UE is activated to receive expected CBS41 messages as described by the manufacturer.

b) The UE and the SS have configured their RLC, MAC and PHYs layers with all CB41 related system information, broadcasted by SS.

c) The SS sends the CBS41 message containing an activated CBS41 message type according to CB41-Data 1 to the UE; this shall be repeated for "CPREP" times (indicated by parameter "repetition period").

d) The UE indicates in an unambiguous way, that this message was received, by certain clear indications (e.g. a unique part of the CB41 data contents).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | SYSTEM INFORMATION | Transmit this message as described below on the BCCH, in addition to the regular BCCH transmissions (see RRC test description). Included are CB related system information parameter of the CBS:<br>- CTCH ID,<br>- FACH ID and associated format set,<br>- S-CCPCH ID,<br>- BMC Schedule Level 1 information (N,K)<br>In addition, the MIB and SIB 13 are sent as described below for setup the ANSI-41 parameters |
| 2 | | | | The SS waits for about 10 s to make sure, that the UE is configured to receive CB41 data |
| 3 | | ← | BMC CBS41 Message | Activated CBS message with CB41 Data 1 message content as described by the manufacturer. This message shall be repeated "CPREP" times, Parameter:<br>- Message_type,<br>- Broadcast Address<br>- CB41-Data 1 |
| 4 | | | | After having received the BMC CBS message the UE shall indicate the reception of CB41 Data 1 in a clear way. |

Specific Message Contents

MASTER INFORMATION BLOCK (MIB)

The contents of MASTER INFORMATION BLOCK Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| ANSI-41 Core Network information | Present |

SYSTEM INFORMATION TYPE 5 and 6

The contents of SYSTEM INFORMATION TYPE 5 and 6 Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE mode | (see RRC default test settings) |
| - CTCH allocation period | N |
| - CTCH frame offset | K |
| Secondary CCPCH system | 1 |
| - Secondary CCPCH information | (see RRC default test settings) |
| - TFCS | 1 |
| - FACH/PCH information | (see RRC default test settings) |
| - TFS | TRUE |
| - CTCH indicator | (see RRC default test settings) |

SYSTEM INFORMATION TYPE 13

The contents of SYSTEM INFORMATION TYPE 13 Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE CN Type<br>- CN domain specific NAS information<br>- NAS (ANSI-41) system information | ANSI-41<br><br>T.B.D |

BMC CBS41 Message

| Information Element | Value/remark |
|---|---|
| Message Type<br>Broadcast Address<br>CB Data41 | 3 (CBS41 Message)<br>Bitstring (40) Address Information of higher layer<br>Octetstring, [see IXIT value: CB41-Data 1] (ANSI-41) |

#### 7.4.2.5.5 Test requirements

The UE shall store and decode a received activated CBS41 message.

### 7.4.2.6 UE in RRC Connected mode, state URA_PCH (ANSI-41 CB data)

#### 7.4.2.6.1 Definition and applicability

Applicable only for a UE supporting Cell Broadcast Services (CBS) for ANSI-41 CB data as a type of Broadcast/Multicast Services.

It shall be possible to indicate the reception of a certain CBS41 message content carried with certain activated CB41 message types in a clear way on UE side.

#### 7.4.2.6.2 Conformance requirement

A UE supporting Cell Broadcast Service (CBS) shall be capable to receive BMC messages (...) in URA_PCH RRC-state of Connected mode. (…)BMC messages are identified: (…), CBS41 Message.

Reference(s)

TS 25.324 clause 9.1.

#### 7.4.2.6.3 Test purpose

To verify, that a BMC configuration supporting ANSI-41 CB Data is able to receive activated CBS41 messages when in RRC Connected mode, state URA_PCH.

#### 7.4.2.3.4 Method of test

Initial conditions

UE is in Connected mode state URA_PCH; BMC entity is established.

SS: 1 cell,

NOTE: The CB41 message ID stored on the SIM shall be known for this test (parameter for CBS41 PDU's). The CBS41 data type shall be allocated and activated in the UE.

Related ICS/IXIT Statement(s)

ICS:

Support of BMC – Yes/No

Support of PS – Yes/No

CBS41 message support - YES/No.

IXIT: CBS41-Data 1: Octetstring of N (where N≥1 and less than 1246).

NOTE: For CB41-Data 1 IXIT, the manufacturer shall define CBS data as Octetstring together with the CB message ID used for transmitting this CB41 data, which is indicated by the UE after reception in a clear way according to the capabilities stored on the SIM. Furthermore, the manufacturer shall describe the indication on UE side (e.g. certain CBS41 traffic information).

Test procedure

a) The UE in RRC URA_PCH is triggered to wait for the next system information. The UE is activated to receive expected CBS41 messages as described by the manufacturer.

b) The UE and the SS have configured their RLC, MAC and PHYs layers with all CB related system information, broadcasted by SS.

c) The SS sends the CBS41 message containing an activated CBS41 message type according to CB41-Data 1 to the UE, this shall be repeated for "CPREP" times (indicated by parameter "repetition period").

d) The UE indicates in an unambiguous way, that this message was received, by certain clear indications (e.g. a unique part of the CB41 data contents).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SYSTEM INFORMATION | Transmit this message as described below on the BCCH, in addition to the regular BCCH transmissions (see RRC test description). Included are CB related system information parameter of the CBS:<br>- CTCH ID,<br>- FACH ID and associated format set,<br>- S-CCPCH ID,<br>- BMC Schedule Level 1 information (N,K)<br>In addition, the MIB and SIB 13 are sent as described below for setup the ANSI-41 parameters |
| 2 | | | | The SS waits for about 10 s to make sure, that the UE is configured to receive CB41 data |
| 3 | ← | | BMC CBS41 Message | Activated CBS message with CB41 Data 1 message content as described by the manufacturer. This message shall be repeated "CPREP" times, Parameter:<br>- Message_type,<br>- Broadcast Address<br>- CB41-Data 1 |
| 4 | | | | After having received the BMC CBS message the UE shall indicate the reception of CB41 Data 1 in a clear way. |

Specific Message Contents

MASTER INFORMATION BLOCK (MIB)

The contents of MASTER INFORMATION BLOCK Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| ANSI-41 Core Network information | Present |

SYSTEM INFORMATION TYPE 5 and 6

The contents of SYSTEM INFORMATION TYPE 5 and 6 Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE mode<br>- CTCH allocation period<br>- CTCH frame offset<br>Secondary CCPCH system<br>- Secondary CCPCH information<br>- TFCS<br>- FACH/PCH information<br>  - TFS<br>  - CTCH indicator | (see RRC default test settings)<br>N<br>K<br>1<br>(see RRC default test settings)<br>1<br>(see RRC default test settings)<br>TRUE<br>(see RRC default test settings) |

SYSTEM INFORMATION TYPE 13

The contents of SYSTEM INFORMATION TYPE 13 Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE CN Type<br>  - CN domain specific NAS information<br>  - NAS (ANSI-41) system information | ANSI-41<br><br>T.B.D |

BMC CBS41 Message

| Information Element | Value/remark |
|---|---|
| Message Type<br>Broadcast Address<br>CB Data41 | 3 (CBS41 Message)<br>Bitstring (40) Address Information of higher layer<br>Octetstring, [see IXIT value: CB41-Data 1] (ANSI-41) |

#### 7.4.2.6.5 Test requirements

The UE shall store and decode a received activated CBS41 message.

## 7.4.3 BMC message reception procedure

### 7.4.3.1 Reception of certain CBS message types

#### 7.4.3.1.1 Definition and applicability

Applicable only for a UE supporting Cell Broadcast Services (CBS) as type of Broadcast/Multicast Services.

It shall be possible to indicate the reception of two different CBS message contents carried with different activated CB message types in a clear way on UE side.

It shall be possible to activate/deactivate the CBS message types used to receive CB Data 1 or 2.

#### 7.4.3.1.2 Conformance requirement

A UE supporting Cell Broadcast Service (CBS) shall be capable to receive BMC messages in RRC Idle mode.

The BMC entity on UE side evaluates received BMC Schedule Messages and takes decisions which BMC messages are received.

If not otherwise requested by upper layers, only those CB messages received in BMC CBS Messages should be delivered to upper layers for which the Serial Number associated with the CB message has changed. This implies that the BMC has to store the last received Serial Number of each CB message activated by upper layers.

Reference(s)

TS 25.324 clause 9.1.

TS 25.324 clause 9.4.

#### 7.4.3.1.3 Test purpose

1. To verify, that a UE supporting CBS ignores a deactivated CBS message type which has been broadcasted by SS.

2. To verify, that a UE only stores Serial Numbers of a newly transmitted CBS messages. This shall be verified by indication of a received CBS message with changed Serial Number as indication for the storage of Serial Numbers.

#### 7.4.3.1.4 Method of test

Initial conditions

UE is in RRC Idle mode.

SS: 1 cell,

NOTE: The CB message ID stored on the SIM shall be known for this test (as parameter for the CBS message PDU). The CBS data type shall be allocated and in the UE. It shall be possible to activate/deactivate such CBS data type.

Related ICS/IXIT Statement(s)

ICS:

Support of BMC – Yes/No

Support of PS – Yes/No

CBS message support - YES/No.

IXIT:

- CBS-Data 1: Octetstring of N (where N≥1 and less than 1246), with used CB message ID for CB-Data 1.

- CBS-Data 2: Octetstring of N (where N≥1 and less than 1246), with used CB message ID for CB-Data 2 (CB message ID for CB-Data 1 shall be different to CB message ID for CB-Data 2).

NOTE: For CBS data IXIT's, the manufacturer shall define CBS data as Octetstring as described in the IXIT, which is indicated by the UE after reception in a clear way according to the capabilities stored on the SIM. The manufacturer shall describe the indication on UE side for both CBS data types (e.g. certain CBS broadcast information shown in the display of the UE).

Test procedure

a) The UE in RRC Idle mode is triggered to wait for the next system information. The UE is activated to receive CBS data 1, CBS data 2) are deactivated.

b) The UE and the SS have configured their RLC, MAC and PHYs layers with all CB related system information, broadcasted by SS.

c) The SS sends the first BMC CBS schedule message to predict the next CBS messages to the UE.

d) The SS sends the CBS message containing CB-Data 1 to the UE, together with the CBS schedule message to predict the next CBS messages (repetition of CB Data 1, and the next CBS schedule message).

e) The UE indicates on an unambiguous way, that this CB-Data 1 has been received by the UE (e.g. a unique part of the CBS data contents shown on the display).

f) The SS sends the repeated CB Data 1, and the next CBS schedule message to predict the next CBS messages to the UE. (CBS schedule message predicts the first repetition of CB Data).

g) The UE indicates on an unambiguous way, that CB-Data 2 has been received by the UE (e.g. a unique part of the CBS data contents shown in the display).

h) The UE deactivates the CB Message type ID used for CB-Data 1.

i) The SS sends the CB Data 2 (as deactivated CB Data type) to the UE.

j) The UE ignores the newly received CB-Data 2, i.e. there is no indication for this CB Data 2 as described in step e).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SYSTEM INFORMATION | Transmit these messages as described below on the BCCH, in addition to the regular BCCH transmissions.<br>Included are all CB related system information parameter of the CBS:<br>- CTCH ID,<br>- FACH ID and associated format set,<br>- S-CCPCH ID,<br>- BMC Schedule Level 1 information (N,K) |
| 2 | | | | The SS waits for about 10 s to make sure, that the UE is configured to receive the CBS Data message |
| 3 | ← | | BMC CBS Schedule | Inband CBS schedule message with BMC schedule information Level 2 (DRX) to predict the next CB data block (CB Data 1 –new-, CBS Schedule message) |
| 4 | ← | | BMC CBS Message | Activated CBS message with certain CB data content (CBS data 1 as described by the manufacturer). This message is sent the first time. Parameter:<br>- Message_ID,<br>- Serial-No,<br>- Data coding scheme,<br>- CB-Data 1 (new) |
| 5 | | | | After having received the BMC CB-Data 1 the UE shall indicate the reception in a clear way. |
| 6 | ← | | BMC CBS Schedule | Inband CBS schedule message with BMC schedule information Level 2 (DRX) to predict the next CB data block (CB Data 1 –rep.1-, CBS Schedule message) |
| 7 | ← | | BMC CBS Message | Activated CBS message with certain CB data content (CBS data 1 as described by the manufacturer). This message is repeated. Parameter:<br>- Message_ID,<br>- Serial-No,<br>- Data coding scheme,<br>- CB-Data 1 (old) |
| 8 | | | | The UE deactivates "CB message type ID" used for CB-Data 1 |
| 9 | ← | | BMC CBS Schedule | Inband CBS schedule message with BMC schedule information Level 2 (DRX) to predict the next CB data block (CB Data 2 –new-). |
| 10 | ← | | BMC CBS Message | Deactivated CBS message with certain CB data content (CBS data 2 as described by the manufacturer). This message is sent the first time. Parameter:<br>- Message_ID,<br>- Serial-No,<br>- Data coding scheme,<br>- CB-Data 2 (new) |
| 11 | | | | After having received the BMC CBS message (CB-Data 2) the UE shall ignore the newly received CBS data 1 message, i.e. there is no indication as described by the manufacturer. |

Specific Message Contents

SYSTEM INFORMATION TYPE 5 and 6

The contents of SYSTEM INFORMATION TYPE 5 and 6 Information Element in this test case are identical to those of the default contents of layer 3 messages for RRC tests [TS 34.123-1] with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE mode<br>- CTCH allocation period<br>- CTCH frame offset<br>Secondary CCPCH system<br>- Secondary CCPCH information<br>- TFCS<br>- FACH/PCH information<br>- TFS<br>- CTCH indicator | (see RRC default test settings)<br>N<br>K<br>1<br>(see RRC default test settings)<br>1<br>(see RRC default test settings)<br>TRUE<br>(see RRC default test settings) |

BMC CBS Message (Step 4 and 7)

| Information Element | Value/remark |
|---|---|
| Message Type | 1 (CBS message) |
| Message ID | Bitstring (16) CB message ID, it shall fit to the stored Message ID in the SIM inserted in the UE (source and type) [see TS 23.041] |
| Serial Number<br>- Geographic Scope Indicator (2 bit)<br>- Message Code (10 bit)<br>- Update Number (4 bit) | [see TS 23.041]<br>11 (Normal Cell wide)<br>according with the Message ID<br>for a new message: 0000, incremented by one for each repetition |
| Data Coding Scheme | Bitstring (16) ID of the alphabet/coding and the applied language [see TS 23.041] |
| CB Data | Octetstring, [see IXIT value: CB-Data 1] |

BMC CBS Message (Step 10)

| Information Element | Value/remark |
|---|---|
| Message Type | 1 (CBS message) |
| Message ID | Bitstring (16) CB message ID, it shall fit to the stored Message ID in the SIM inserted in the UE (source and type) [see TS 23.041] |
| Serial Number<br>- Geographic Scope Indicator (2 bit)<br>- Message Code (10 bit)<br>- Update Number (4 bit) | [see TS 23.041]<br>11 (Normal Cell wide)<br>according with the Message ID<br>for a new message: 0000, incremented by one for each repetition |
| Data Coding Scheme | Bitstring (16) ID of the alphabet/coding and the applied language [see TS 23.041] |
| CB Data | Octetstring, [see IXIT value: CB-Data 2] |

BMC Schedule Message (Step 3, 6 and Step 9)

The parameters for BMC Schedule Message (inband schedule message) in Step 5 are inserted for CB-Data 2 and in Step 8 for CB-Data 1.

| Information Element | Value/remark |
|---|---|
| Message Type | 2 (Schedule message) |
| Offset to begin CTCH BS index | calculated offset value of the BS (Integer: 0...255) as recommended in TR 25.925 |
| Length of CBS Schedule Period | Number of consecutive CTCH BS of the next CBS Schedule Period, (Integer: 1...255) as recommended in TR 25.925 |
| New Message Bitmap | Bitmap (N*8), N = Length of CBS Schedule Period as recommended in TR 25.925 |
| Message Description<br>- Message Description Type | 1 for new message (see TS 25.324, Table 11.9-3)<br>5 for old message (see TS 25.324, Table 11.9-3) |
| - Message ID | CB message ID used for the next CB data |
| - Offset to CTCH (BS index of first transmission) | for Message description type 1 or 5: CB message ID IE included (see TS 23.041) |

#### 7.4.3.1.5 Test requirements

After having received the CB-Data 1 message (step 4), the UE shall store the Serial Number of this message and indicate the reception of the CBS message as described by the manufacturer.

After CB-Data 2 message was newly broadcasted (step 10), the UE shall not indicate the reception for the deactivated CBS message (CB-Data 1).

# 8 Radio Resource Control RRC

## 8.1 RRC Connection Management Procedure

### 8.1.1 Paging

#### 8.1.1.1 Paging for Connection in idle mode

##### 8.1.1.1.1 Definition

##### 8.1.1.1.2 Conformance requirement

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions. For an UE in idle mode, the paging occasions are specified in [25.304] and depend on the IE "CN domain specific DRX cycle length coefficient", as specified in subclause 8.6.3.1a. For a UE in CELL_PCH state or URA_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in idle mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a CN identity:

2> compare the IE "UE identity" with all of its allocated CN UE identities:

2> if one match is found:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "UE identity" and the IE "Paging cause" to the upper layers.

1> otherwise:

2> ignore that paging record.

:

In the UE, the initial direct transfer procedure shall be initiated, when the upper layers request establishment of a signalling connection. This request also includes a request for the transfer of a NAS message.

Upon initiation of the initial direct transfer procedure when the UE is in idle mode, the UE shall:

1> set the variable ESTABLISHMENT_CAUSE to the cause for establishment indicated by upper layers;

1> perform an RRC connection establishment procedure, according to subclause 8.1.3;

1> if the RRC connection establishment procedure was not successful:

2> indicate failure to establish the signalling connection to upper layers and end the procedure.

1> when the RRC connection establishment procedure is completed successfully:

2> continue with the initial direct transfer procedure as below.

Upon initiation of the initial direct transfer procedure when the UE is in CELL_PCH or URA_PCH state, the UE shall:

1> perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";

1> when the cell update procedure completed successfully:

2> continue with the initial direct transfer procedure as below.

The UE shall, in the INITIAL DIRECT TRANSFER message:

1> set the IE "NAS message" as received from upper layers; and

1> set the IE "CN domain identity" as indicated by the upper layers; and

1> set the IE "Intra Domain NAS Node Selector" as follows:

2> derive the IE "Intra Domain NAS Node Selector" from TMSI/PMTSI, IMSI, or IMEI; and

2> provide the coding of the IE "Intra Domain NAS Node Selector" according to the following priorities:

1. derive the routing parameter for IDNNS from TMSI (CS domain) or PTMSI (PS domain) whenever a valid TMSI/PTMSI is available;

2. base the routing parameter for IDNNS on IMSI when no valid TMSI/PTMSI is available;

3. base the routing parameter for IDNNS on IMEI only if no (U)SIM is inserted in the UE.

1> calculate the START according to subclause 8.5.9 for the CN domain as set in the IE "CN Domain Identity"; and

1> include the calculated START value for that CN domain in the IE "START".

In CELL_FACH state, the UE shall:

1> include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System Information Block type 12 (or "System Information Block Type 11" if "System Information Block Type 12" is not being broadcast);

1> include in the IE "Measured results on RACH" all requested reporting quantities for cells for which measurements are reported.

The UE shall:

1> transmit the INITIAL DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB3;

1> when the INITIAL DIRECT TRANSFER message has been submitted to lower layers for transmission:

2> confirm the establishment of a signalling connection to upper layers; and

2> add the signalling connection with the identity indicated by the IE "CN domain identity" in the variable ESTABLISHED_SIGNALLING_CONNECTIONS.

1> when the successful delivery of the INITIAL DIRECT TRANSFER message has been confirmed by RLC:

2> the procedure ends.

#### Reference

3GPP TS 25.331 clause 8.1.2 and 8.1.8, 3GPP TS 25.211 clause 5.3.3.10 (FDD), 3GPP TS25.221 (TDD), 3GPP TS 25.304 clause 8.

#### 8.1.1.1.3 Test purpose

1) For the CS domain

To confirm that the UE establishes an RRC connection after it receives a PAGING TYPE 1 message which includes IE "UE identity"(in IE "Paging Record") set to the IMSI of the UE, and responds with a correct INITIAL DIRECT TRANSFER message.

2) For the PS domain

To confirm that the UE establishes an RRC connection after it receives a PAGING TYPE 1 message which includes IE "UE identity"(in IE "Paging Record") set to the P-TMSI allocated by SS at initial attach and responds with a correct INITIAL DIRECT TRANSFER message.

#### 8.1.1.1.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: MM-IDLE state and Updated update status with no TMSI (if CS supported)

GMM-Registered with a P-TMSI assigned (if PS supported)

the UE shall have an IMSI.

Test Procedure

SS transmits SYSTEM INFORMATION BLOCK TYPE 1 or 13 messages, depending on the CN type supported by the UE. The SS transmits a PAGING TYPE 1 message, which includes an unmatched CN UE identity for the UE in the idle state. The UE shall not change its state. The SS transmits a PAGING TYPE 1 message, which includes a matched CN UE identity for the UE in the idle state. During transmission of PAGING TYPE 1 messages, SS selects the correct paging indicator on the PICH in order to allow the UE to respond to paging. Then the UE transmits an RRC CONNECTION REQUEST to the SS, the SS transmits an RRC CONNECTION SETUP to the UE. When the UE receives this message, the UE establishes an RRC connection and transmits an RRC CONNECTION SETUP COMPLETE message and an INITIAL DIRECT TRANSFER message on the uplink DCCH.

NOTE: For UEs supporting GSM-MAP CN type only, SYSTEM INFORMATION TYPE 1 messages are to be sent by SS in this test case. On the other hand, SS transmits SYSTEM INFORMATION TYPE 13 messages if the UE under test supports only ANSI-41 CN type.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | SYSTEM INFORMATION BLOCK TYPE 13 or SYSTEM INFORMATION BLOCK TYPE 1 | Transmit these messages on the BCCH. See default message contents in TS 34.108. |
| 2 | | ← | PAGING TYPE 1 | The SS transmits the message, which includes an unmatched identity (incorrect IMSI), and the UE does not change its state. |
| 3 | | ← | PAGING TYPE 1 | The SS transmits the message, which includes a matched identity. See default message contents in TS 34.108. |
| 4 | → | | RRC CONNECTION REQUEST | |
| 5 | | ← | RRC CONNECTION SETUP | SS assigns DPCH resources to allow UE to establish an RRC connection. |
| 6 | → | | RRC CONNECTION SETUP COMPLETE | |
| 7 | → | | INITIAL DIRECT TRANSFER | |

Specific Message Contents

SYSTEM INFORMATION BLOCK TYPE 1 (Step 1) – for UEs supporting GSM-MAP core networks

Use the default message type found in TS 34.108, clause 6.1.

SYSTEM INFORMATION TYPE 13 (Step 1) – for UEs supporting ANSI-41 core networks

Use the default message type found in TS 34.108, clause 6.1.

PAGING TYPE 1 (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| CHOICE Used paging identity | CN identity |
| - Paging cause | Terminating Call with one of the supported services |
| - CN domain identity | A Registered Domain (PS Domain or CS Domain) |
| - CHOICE UE Identity | IMSI |
| - IMSI | Set to an arbitrary octet string of length 7 bytes which is different from the IMSI value stored in the TEST USIM card. |
| BCCH modification info | Not Present |

PAGING TYPE 1 (Step 3)

Use the default message type found in TS 34.108, clause 9.1.

Note that Separate message types are defined in TS 34.108 for the cases of TM (Speech in CS) and for TM (Packet in PS).

RRC CONNECTION REQUEST (Step 4)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered P-TMSI if PS supported by UE, otherwise the IMSI stored in the TEST USIM card. |
| Establishment Cause | Check to see if it is set to the same value as "Paging Cause" IE in the PAGING TYPE 1 message transmitted on step 3. |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |

INITIAL DIRECT TRANSFER (Step 7) – for UEs supporting GSM-MAP core networks

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | Not present |
| CN domain identity | CS domain or PS domain (as specified by the SS in the PAGING TYPE 1 message of Step 3) |
| Intra Domain NAS Node Selector | |
| - CHOICE version | R99 |
| -- CHOICE CN type | GSM-MAP |
| --- CHOICE Routing basis | IMSI (response to IMSI paging) in CS domain or Local (P)-TMSI in PS Domain |
| ---- Routing parameter | If the IE "CN domain identity" is equal to "CS domain", bit string (10) consisting of DecimalToBinary [(IMSI div 10) mod 1000]. The first/ leftmost bit of the bit string contains the most significant bit of the result.<br>If the IE "CN domain identity" is equal to "PS domain": The TMSI/ PTMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant. The "Routing parameter" is set to bits b14 through b23 of the TMSI/ PTMSI. The first/ leftmost/ most significant bit of the bit string contains bit b23 of the TMSI/ PTMSI. |
| --- Entered parameter | Not checked |
| NAS message | Not checked |
| START | Not checked |
| Measured results on RACH | Not checked |

INITIAL DIRECT TRANSFER (Step 7) – for UEs supporting ANSI-41 core networks

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | Not present |
| CN domain identity | CS domain or PS domain (as specified by the SS in the PAGING TYPE 1 message of Step 3) |
| Intra Domain NAS Node Selector | |
| - CHOICE version | ANSI-41 : Bitstring(14), all bits set to 0 |
| NAS message | Not checked |
| START | Not checked |
| Measured results on RACH | Not checked |

#### 8.1.1.1.5 Test requirement

After step 2 the UE shall not respond to PAGING TYPE 1 message sent in step 2.

After step 3 the UE shall transmit RRC CONNECTION REQUEST message on the uplink CCCH.

After step 5 the UE shall have an RRC connection based on dedicated physical channel resources and transmit an RRC CONNECTION SETUP COMPLETE message and INITIAL DIRECT TRANSFER message on the uplink DCCH.

### 8.1.1.2 Paging for Connection in connected mode (CELL_PCH)

#### 8.1.1.2.1 Definition

#### 8.1.1.2.2 Conformance requirement

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions. For an UE in idle mode, the paging occasions are specified in [25.304] and depend on the IE "CN domain specific DRX cycle length coefficient", as specified in subclause 8.6.3.1a. For a UE in CELL_PCH state or URA_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below:

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or

- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

Reference

3GPP TS 25.331 clause 8.1.2, 8.3.1.7.

#### 8.1.1.2.3 Test purpose

To confirm that the UE enters the CELL_FACH state after it receives a PAGING TYPE 1 message which indicates that the paging has originated from UTRAN. To verify that the UE performs cell update procedure after entering the CELL_FACH state.

#### 8.1.1.2.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CELL_PCH state (state 6-12) as specified in clause 7.4 of TS 34.108, with a valid U-RNTI already assigned by the SS.

Test Procedure

SS transmits SYSTEM INFORMATION BLOCK TYPE 1 or 13 messages, depending on the CN type supported by the UE. The SS transmits a PAGING TYPE 1 message, which includes an unmatched U-RNTI. The UE does not change its state. Then SS transmits a PAGING TYPE 1 message with a matched identifier but originates from the CN instead of UTRAN. The UE shall not change state after receiving this message. The SS transmits a PAGING TYPE 1 message, which includes a matched U-RNTI. Then the UE enters the CELL_FACH state and performs the cell updating procedure.

NOTE: For UEs supporting GSM-MAP CN type only, SYSTEM INFORMATION TYPE 1 messages are to be sent by SS in this test case. On the other hand, SS transmits SYSTEM INFORMATION TYPE 13 messages if the UE under test supports only ANSI-41 CN type.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SYSTEM INFORMATION BLOCK TYPE 13 or SYSTEM INFORMATION BLOCK TYPE 1 | Transmit these messages on the BCCH, in addition to the normal BCCH transmissions. See specific message contents |
| 2 | ← | | PAGING TYPE 1 | The SS transmits a message including an unmatched identifier. UE shall not respond to the paging. |
| 3 | ← | | PAGING TYPE 1 | The SS transmits a message includes a matched identifier but with the used paging identity being a CN identity, UE shall not respond to the paging. |
| 4 | ← | | PAGING TYPE 1 | The SS transmits the message with used paging identity being a UTRAN identity and including the UE's assigned U-RNTI |
| 5 | → | | CELL UPDATE | The UE enters the CELL_FACH state. UE performs cell updating procedure. The CELL UPDATE message shall contain the value "Cell Update Cause" set to "paging response". |
| 6 | ← | | CELL UPDATE CONFIRM | See message content. |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Contents

PAGING TYPE 1 (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to an arbitrary 16-bit string which is different from the SRNC identity assigned. |
| - S-RNTI | Set to an arbitrary 20-bit string which is different from the S-RNTI assigned. |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

PAGING TYPE 1 (Step 3)

Same as the PAGING TYPE 1 message as in step 3 of clause 8.1.1.1.4.

PAGING TYPE 1 (Step 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to the same SRNC identity as previously assigned. |
| - S-RNTI | Set to the same S-RNTI as previously assigned. |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

SYSTEM INFORMATION BLOCK TYPE 13

Use the same SYSTEM INFORMATION BLOCK TYPE 13 message as specified in clause 8.1.1.1.4.

SYSTEM INFORMATION BLOCK TYPE 1

Use the same SYSTEM INFORMATION BLOCK TYPE 1 message as specified in clause 8.1.1.1.4.

CELL UPDATE CONFIRM (Step 6)

Use the message sub-type in default message content defined in [9] (TS 34.108) Clause 9, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 7)

Only the message type is checked.

#### 8.1.1.2.5 Test requirement

After step 2 the UE shall not respond to the PAGING TYPE 1 message sent in step 2.

After step 3 the UE shall not respond to the PAGING TYPE 1 message sent in step 3.

After step 4 the UE shall enter the CELL FACH state and send a CELL UPDATE message with "Cell Update Cause" IE set to "paging response".

After step 6 the UE shall be in the CELL_FACH state and shall transmit UTRAN MOBILITY INFORMATION CONFIRM message.

### 8.1.1.3 Paging for Connection in connected mode (URA_PCH)

#### 8.1.1.3.1 Definition

#### 8.1.1.3.2 Conformance requirement

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions. For an UE in idle mode, the paging occasions are specified in [25.304] and depend on the IE "CN domain specific DRX cycle length coefficient", as specified in subclause 8.6.3.1a. For a UE in CELL_PCH state or URA_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below:

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

Reference

3GPP TS 25.331 clause 8.1.2, 8.3.1.7.

#### 8.1.1.3.3 Test purpose

To confirm that the UE enters the CELL_FACH state after it receives a PAGING TYPE 1 message in which the IE "Used paging identity" is set to "UTRAN identity", and the UE takes the U-RNTI value assigned to it in the IE "U-RNTI".

#### 8.1.1.3.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: URA_PCH state (state 6-13) as specified in clause 7.4 of TS 34.108, with a valid U-RNTI assigned by the SS.

Test Procedure

The SS transmits a PAGING TYPE 1 message, which includes an unmatched U-RNTI. The UE does not change its current state. The SS transmits a PAGING TYPE 1 message which includes a matched U-RNTI. Then the UE listens to it and enters the CELL_FACH state to transmit a CELL UPDATE message using uplink CCCH in respond to the paging.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE 1 | The SS transmits the message that includes an unmatched identifier, but UE does not change its state. |
| 2 | ← | | PAGING TYPE 1 | The SS transmits the message that includes a matched identifier. |
| 3 | → | | CELL UPDATE | The UE enters the CELL_FACH state. |
| 4 | ← | | CELL UPDATE CONFIRM | See message content. |
| 5 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Contents

PAGING TYPE 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to an unused SRNC identity which is different from the SRNC identity assigned. |
| - S-RNTI | Set to an arbitrary 20-bit string which is different from the S-RNTI assigned. |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

PAGING TYPE 1 (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to the previously assigned SRNC identity |
| - S-RNTI | Set to previously assigned S-RNTI |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE CONFIRM (Step 4)

Use the message sub-type in default message content defined in [9] (TS 34.108) Clause 9, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 5)

Only the message type is checked.

#### 8.1.1.3.5 Test requirement

After step 1 the UE shall not respond to the paging.

After step 2 the UE shall enter the CELL FACH state, and transmit CELL UPDATE message to initiate the cell updating procedure with the paging cause set to "paging response".

After step 4 the UE shall be in the CELL_FACH state and shall transmit UTRAN MOBILITY INFORMATION CONFIRM message.

### 8.1.1.4 Paging for notification of BCCH modification in idle mode

#### 8.1.1.4.1 Definition

#### 8.1.1.4.2 Conformance requirement

A UE in idle mode state shall receive the paging information for all its monitored paging occasions. For an UE in idle mode, the paging occasions are specified in TS 25.304 and depend on the IE "CN domain specific DRX cycle length coefficient".

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

…

If the IE "BCCH modification info" is included, any UE in idle mode state shall perform the actions as specified in TS 25.331 subclause 8.1.1 in addition to any actions caused by the IE "Paging record" occurrences in the message.

The UE shall:

1> compare the value of IE "MIB value tag" in the IE "BCCH modification info" with the value tag stored for the master information block in variable VALUE_TAG.

1> if the value tags differ:

2> read the master information block on BCH;

2> if the value tag of the master information block in the system information is the same as the value in IE "MIB value tag" in "BCCH modification info" but different from the value tag stored in the variable VALUE_TAG:

3> perform actions as specified in TS 25.331 subclause 8.1.1.5.

…

Upon reception of the master information block, the UE shall:

1> compare the value tag in the master information block with the value tag stored for this cell and this PLMN in the variable VALUE_TAG;

1> if the value tags differ:

2> store the value tag into the variable VALUE_TAG for the master information block;

2> read and store scheduling information included in the master information block.

….

For all system information blocks or scheduling blocks that are supported by the UE referenced in the master information block or the scheduling blocks, the UE shall perform the following actions:

1> for all system information blocks with area scope "PLMN" or "Equivalent PLMN" that use value tags:

2> compare the value tag read in scheduling information for that system information block with the value stored within the variable VALUE_TAG for that system information block;

2> if the value tags differ:

3> store the value tag read in scheduling information for that system information block into the variable VALUE_TAG;

3> read and store the IEs of that system information block.

…

Reference

3GPP TS 25.331 clause 8.1.1, 8.1.2.

#### 8.1.1.4.3 Test purpose

To confirm that the UE checks the new value tag of the master information block and reads the updated SYSTEM INFORMATION BLOCK messages after it receives a PAGING TYPE 1 message which includes the IE "BCCH Modification Information".

#### 8.1.1.4.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108 with a CN UE identity, depending on the CN domain(s) supported by the UE.

Test Procedure

The SS transmits a PAGING TYPE 1 message. This message addresses the UE using its (P)TMSI and the "paging cause" IE set to a terminating call type that is supported by the UE. The UE shall respond with RRC CONNECTION REQUEST message. Then SS shall transmit RRC CONNECTION REJECT message to UE.

The SS transmits a PAGING TYPE 1 message on the paging occasions assigned to the UE. The message shall include the IE "BCCH Modification Information" indicating the value tag of the modified master information block. Then it transmits the new master information block followed by the new SYSTEM INFORMATION BLOCK TYPE 5 or SYSTEM INFORMATION BLOCK TYPE 5bis message. In the new SIB TYPE 5 / SIB TYPE 5bis message, the IE "Available Signature" is different when compared to the original SIB TYPE 5 / SIB TYPE 5bis message.

At the paging occasion, SS transmits a new PAGING TYPE 1 message. This message addresses the UE using its (P)TMSI and the "paging cause" IE set to a terminating call type that is supported by the UE. The UE shall respond with RRC CONNECTION REQUEST message. Then SS shall transmit RRC CONNECTION REJECT message to UE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | PAGING TYPE 1 | SS starts to transmit this message on the PCCH at the correct paging occasion. |
| 1a | | → | RRC CONNECTION REQUEST | |
| 1b | | ← | RRC CONNECTION REJECT | |
| 2 | | ← | PAGING TYPE 1 | SS transmits the message including the IE "BCCH Modification Information", with the "Value Tag" changed from the "MIB Value Tag" of the current Master Information Block. |
| 2a | | | Void | |
| 3 | | ← | MASTER INFORMATION BLOCK | SS starts to transmit the MIB with the "MIB Value Tag" IE different from the original setting. |
| | | ← | SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis | At the same time, SS starts to transmit the affected SIB TYPE 5 / SIB TYPE 5bis messages continuously. The IE "Available Signature" is changed from "0000 0000 1111 1111(B)" to "1111 1111 0000 0000(B)" (for FDD) and Available SYNC_UL codes is changed from “11110000(B)” to “00001111(B)”. |
| 3a | | | | SS waits 5s (to ensure that the UE has time to read the new system information) |
| 4 | | ← | PAGING TYPE 1 | SS starts to transmit this message continuously on the PCCH at the correct paging occasion. |
| 5 | | | RRC CONNECTION REQUEST | |
| 6 | | ← | RRC CONNECTION REJECT | |

Specific Message Contents

PAGING TYPE 1 (Step 1 and 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | CN identity |
| - Paging Cause | Terminating Call with one of the supported services |
| - CN Domain Identity | Supported Domain (PS Domain or CS Domain) |
| - CHOICE UE Identity | Local (P)TMSI |
| - Routing parameter | Same as registered TMSI or P-TMSI |
| BCCH modification info | Not Present |

RRC CONNECTION REJECT (Step 1b)

Use the same message type found in [9] TS 34.108 clause 9.

PAGING TYPE 1 (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not Present |
| BCCH modification info | |
| MIB Value Tag | Set to (Current MIB value tag + 1) |
| BCCH Modification time | Not Present |

MASTER INFORMATION BLOCK (Step 3)

| Information Element | Value/remark |
|---|---|
| MIB Value tag | As in PAGING TYPE 1 in step 2 |
| SIB 5 Cell Value tag | Set to (Current SIB5 value tag + 1) |

SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis (Step 3) (FDD)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PRACH system information | |
| - PRACH info | |
| - CHOICE mode | FDD |
| - Available Signature | '1111 1111 0000 0000'B |

SYSTEM INFORMATION BLOCK TYPE 5 (Step 3) (1.28 Mcps TDD)

| | |
|---|---|
| - PRACH system information list | |
| - PRACH system information | |
| - PRACH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - SYNC_UL info | |
| - SYNC_UL codes bitmap | "00001111" |
| - Access Service Class | |
| - ASC Settings | (ASC#0 to ASC #7) |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | "00001111" |

RRC CONNECTION REJECT

Use the same message type found in TS 34.108, clause 9.

#### 8.1.1.4.5 Test requirement

After step 1 the UE shall transmit RRC CONNECTION REQUEST messages in response to the PAGING TYPE 1 messages sent in step 1, using an allowed signature according to original IE "Available signature"(FDD) )/ "Available SYNC_UL codes indices "(1.28 Mcps TDD) in SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis.

After step 4 the UE shall transmit RRC CONNECTION REQUEST messages in response to the PAGING TYPE 1 messages sent in step 4, using an allowed signature according to modified IE "Available signature"(FDD)/ "Available SYNC_UL codes indices "(1.28 Mcps TDD) in SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis.

### 8.1.1.5 Paging for notification of BCCH modification in connected mode (CELL_PCH)

#### 8.1.1.5.1 Definition

#### 8.1.1.5.2 Conformance requirement

A UE in CELL_PCH state shall receive the paging information for all its monitored paging occasions. For a UE in CELL_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in TS 25.331 subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

…

If the IE "BCCH modification info" is included, any UE in CELL_PCH state shall perform the actions as specified in TS 25.331 subclause 8.1.1 in addition to any actions caused by the IE "Paging record" occurrences in the message.

The UE shall:

1> compare the value of IE "MIB value tag" in the IE "BCCH modification info" with the value tag stored for the master information block in variable VALUE_TAG.

1> if the value tags differ:

2> read the master information block on BCH;

2> if the value tag of the master information block in the system information is the same as the value in IE "MIB value tag" in "BCCH modification info" but different from the value tag stored in the variable VALUE_TAG:

3> perform actions as specified in TS 25.331 subclause 8.1.1.5.

…

Upon reception of the master information block, the UE shall:

1> compare the value tag in the master information block with the value tag stored for this cell and this PLMN in the variable VALUE_TAG;

1> if the value tags differ:

2> store the value tag into the variable VALUE_TAG for the master information block;

2> read and store scheduling information included in the master information block.

….

For all system information blocks or scheduling blocks that are supported by the UE referenced in the master information block or the scheduling blocks, the UE shall perform the following actions:

1> for all system information blocks with area scope "PLMN" or "Equivalent PLMN" that use value tags:

2> compare the value tag read in scheduling information for that system information block with the value stored within the variable VALUE_TAG for that system information block;

2> if the value tags differ:

3> store the value tag read in scheduling information for that system information block into the variable VALUE_TAG;

3> read and store the IEs of that system information block.

…

Reference

3GPP TS 25.331 clause 8.1.1, 8.1.2.

#### 8.1.1.5.3 Test purpose

To confirm that the UE, in addition to any actions caused by the IE "Paging record" occurrences in the PAGING TYPE 1 message, checks the new value tag of the master information block, and read the SYSTEM INFORMATION messages after it receives a PAGING TYPE 1 message which includes the IE "BCCH Modification Information".

#### 8.1.1.5.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_PCH state (state 6-12) as specified in clause 7.4 of TS 34.108 with valid a U-RNTI assigned to it.

Test Procedure

The SS transmits a PAGING TYPE 1 message on the paging occasions assigned to the UE. The PAGING TYPE 1 message shall include the IE "BCCH Modification Information" indicating value tag of the modified master information block. Then it transmits the new master information block followed by the new SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis. message. In the new SIB TYPE 5 / SIB TYPE 5bis message, the IE "Available Signature" for FDD, "Available Channelisation codes indices " for TDD 3.84 Mcps and 7.68 Mcps options or "Available SYNC_UL codes indices " for TDD 1.28 Mcps option is different when compared to the original SIB TYPE 5 / SIB TYPE 5bis message. At the paging occasion, SS transmits a new PAGING TYPE 1 message. This message addresses the UE using its U-RNTI. The UE shall respond with a CELL UPDATE message and set IE "cell update cause" to "paging response". The SS shall transmit a CELL UPDATE CONFIRM message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | ← | | PAGING TYPE 1 | SS transmits the paging message which comprises IE "BCCH Modification Information", with the "Value Tag" changed from the "MIB Value Tag" of the current Master Information Block. |
| 2a | | | Void | |
| 3 | ← | | MASTER INFORMATION BLOCK | SS starts to transmit the MIB with the "MIB Value Tag" IE different from the original setting. |
| | ← | | SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis. | For FDD, at the same time, SS starts to transmit the affected SIB TYPE 5/ SIB TYPE 5bis continuously. The value of IE "Available Signature" is changed from "0000 0000 1111 1111(B)" to "1111 1111 0000 0000(B)".<br><br>For TDD 3.84 Mcps and 7.68 Mcps options, at the same time, SS starts to transmit the affected SIB TYPE 6 continuously. The value of IE "Available Channelisation codes indices " is changed according to test purposes.<br><br>For TDD 1.28 Mcps option, at the same time, SS starts to transmit the affected SIB TYPE 6 continuously. The value of IE "Available SYNC_UL codes indices " is changed according to test purposes. |
| 3a | | | | SS waits 5s (to ensure that the UE has time to read the new system information) |
| 4 | ← | | PAGING TYPE 1 | SS transmits this message continuously on the PCCH at the correct paging occasion. |
| 5 | → | | CELL UPDATE | |
| 6 | ← | | CELL UPDATE CONFIRM | See message content. |

Specific Message Contents

PAGING TYPE 1 (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not Present |
| BCCH modification info | |
| - MIB Value Tag | Set to (Current MIB value tag + 1) |
| - BCCH Modification time | Not Present |

MASTER INFORMATION BLOCK (Step 3)

| Information Element | Value/remark |
|---|---|
| MIB Value tag | As in PAGING TYPE 1 in step 2 |
| SIB 5 Cell Value tag | Set to (Current SIB5 value tag + 1) |

SYSTEM INFORMATION BLOCK TYPE 5/ SYSTEM INFORMATION BLOCK TYPE 5bis. (Step 3)(FDD)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PRACH system information<br>- PRACH info<br>- CHOICE mode<br>- Available Signature | <br><br>FDD<br>'1111 1111 0000 0000'B |

SYSTEM INFORMATION BLOCK TYPE 5 (Step 3) (TDD 3.84 Mcps option)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PRACH system information<br>- PRACH info<br>- CHOICE mode<br>- CHOICE *TDD option*<br>- Available Channelisation codes indices | <br><br>TDD<br>3.84 Mcps option<br>To be defined (each bit indicates availability of a channelisation code index) |

SYSTEM INFORMATION BLOCK TYPE 5 (Step 3) (TDD 1.28 Mcps option)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PRACH system information<br>- PRACH info<br>- CHOICE mode<br>- CHOICE *TDD option*<br>- Available SYNC_UL codes indices | <br><br>TDD<br>1.28 Mcps option<br>To be defined (each bit indicates availability of a SYNC_UL code index) |

SYSTEM INFORMATION BLOCK TYPE 5 (Step 3) (TDD 7.68 Mcps option)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PRACH system information<br>- PRACH info<br>- CHOICE mode<br>- CHOICE *TDD option*<br>- Available Channelisation codes indices | <br><br>TDD<br>7.68 Mcps option<br>To be defined (each bit indicates availability of a channelisation code index) |

PAGING TYPE 1 (Step 4)

| Information Element | Value/remark |
|---|---|
| Message Type<br>Paging record list<br>Paging record<br>- CHOICE Used paging identity<br>- U-RNTI<br>- SRNC Identity<br>- S-RNTI<br>- CN originated page to connected mode UE<br>BCCH modification info | <br>Only 1 entry<br><br>UTRAN identity<br>Equal to the U-RNTI assigned earlier.<br><br><br>Not Present<br>Not Present |

CELL UPDATE (Step 5)

Check to see if the same message type found in TS 34.108, clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI<br>- SRNC identity<br>- S-RNTI | Checked to see if it is set to the same values as in step 4 |
| Cell update cause | Paging response |

CELL UPDATE CONFIRM (Step 6)

Use the same message type found in (TS 34.108) Clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

#### 8.1.1.5.5 Test requirement

After step 4 the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "paging response", using an allowed signature according to modified IE "Available signature"(FDD) )/ " Available SYNC_UL codes indices "(1.28 Mcps TDD)/ "Available Channelisation codes indices " (3.84 Mcps and 7.68 Mcps TDD) in SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis.

### 8.1.1.5a Paging on HS-DSCH for notification of BCCH modification in CELL_PCH

#### 8.1.1.5a.1 Definition

#### 8.1.1.5a.2 Conformance requirement

Upon modifications of system information blocks using value tags, UTRAN should notify the new value tag for the master information block in the IE "BCCH modification info", transmitted in the following way:

1> to reach UEs in idle mode, and in CELL_PCH state and URA_PCH state with S-CCPCH assigned, the IE "BCCH modification info" is contained in a PAGING TYPE 1 message transmitted on the PCCH in all paging occasions in the cell;

1> to reach UEs in CELL_PCH state and URA_PCH state with HS-DSCH assigned and no dedicated H-RNTI assigned, the IE "BCCH modification info" is contained in a PAGING TYPE 1 message transmitted on the PCCH in all paging occasions in the cell;

…

Upon reception of a PAGING TYPE 1 message or a SYSTEM INFORMATION CHANGE INDICATION message containing the IE "BCCH modification info" containing the IE "MIB value tag" but not containing the IE "BCCH modification time", the UE shall perform actions as specified in subclause 8.1.1.7.3.

…

The UE shall:

1> compare the value of IE "MIB value tag" in the IE "BCCH modification info" with the value tag stored for the master information block in variable VALUE_TAG.

1> if the value tags differ:

2> read the master information block on BCH;

2> if the value tag of the master information block in the system information is the same as the value in IE "MIB value tag" in "BCCH modification info" but different from the value tag stored in the variable VALUE_TAG:

3> perform actions as specified in subclause 8.1.1.5.

…

A UE in CELL_PCH state shall receive the paging information for all its monitored paging occasions. For a UE in CELL_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in TS 25.331 subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in idle mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a CN identity:

2> compare the IE "UE identity" with all of its allocated CN UE identities:

2> if one match is found:

…

Reference

3GPP TS 25.331 clause 8.1.1.7, 8.1.1.7.1, 8.1.2.3

### 8.1.1.5a.3 Test purpose

To confirm that the UE, in addition to any actions caused by the IE "Paging record" occurrences in PAGING TYPE 1 mapped on HS-DSCH, checks the new value tag of the master information block, and reads the SYSTEM INFORMATION messages mapped on HS-DSCH after it receives a PAGING TYPE 1 message on HSDSCH which includes the IE "BCCH Modification Information".

### 8.1.1.5a.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_PCH state (FFS) with DCCH/DTCH mapped onto HS-DSCH as specified in clause 7.4 of TS 34.108 with valid a U-RNTI but no dedicated H-RNTI assigned to it.

Test Procedure

The SS transmits a PAGING TYPE 1 message with PCCH mapped onto HS-DSCH on the paging occasions assigned to the UE. The PAGING TYPE 1 message shall include the IE "BCCH Modification Information" indicating value tag of the modified master information block. Then it transmits the new master information block followed by the new SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis message mapped on HS-DSCH. In the new SIB TYPE 5 / SIB TYPE 5bis message, the IE "Available Signature" for FDD is different when compared to the original SIB TYPE 5 / SIB TYPE 5bis message. At the paging occasion, SS transmits a new PAGING TYPE 1 message. This message addresses the UE using its U-RNTI. The UE shall respond with a CELL UPDATE message and set IE "cell update cause" to "paging response". The SS shall transmit a CELL UPDATE CONFIRM message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | PAGING TYPE 1 | SS transmits the paging message which comprises IE "BCCH Modification Information" on HS-DSCH, with the "Value Tag" changed from the "MIB Value Tag" of the current Master Information Block. |
| 2 | | ← | MASTER INFORMATION BLOCK | SS starts to transmit the MIB with the "MIB Value Tag" IE different from the original setting. |
| | | ← | SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis. | For FDD, at the same time, SS starts to transmit the affected SIB TYPE 5/ SIB TYPE 5bis continuously. The value of IE "Available Signature" is changed from "0000 0000 1111 1111(B)" to "1111 1111 0000 0000(B)". |
| 3 | | | | SS waits 5s (to ensure that the UE has time to read the new system information) |
| 4 | | ← | PAGING TYPE 1 | SS transmits this message continuously on the PCCH at the correct paging occasion. |
| 5 | | → | CELL UPDATE | |
| 6 | | ← | CELL UPDATE CONFIRM | See message content. |

Specific Message Contents

PAGING TYPE 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not Present |
| BCCH modification info | |
| - MIB Value Tag | Set to (Current MIB value tag + 1) |
| - BCCH Modification time | Not Present |

MASTER INFORMATION BLOCK (Step 2)

| Information Element | Value/remark |
|---|---|
| MIB Value tag | As in PAGING TYPE 1 in step 1 |
| SIB 5 Cell Value tag | Set to (Current SIB5 value tag + 1) |

SYSTEM INFORMATION BLOCK TYPE 5/ SYSTEM INFORMATION BLOCK TYPE 5bis. (Step 3)(FDD)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PRACH system information | |
| - PRACH info | |
| - CHOICE mode | FDD |
| - Available Signature | '1111 1111 0000 0000'B |

PAGING TYPE 1 (Step 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | Equal to the U-RNTI assigned earlier. |
| - SRNC Identity | |
| - S-RNTI | |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Step 5)

Check to see if the same message type found in TS 34.108, clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Checked to see if it is set to the same values as in step 4 |
| - SRNC identity | |
| - S-RNTI | |
| Cell update cause | Paging response |
| HS-DSCH in CELL_FACH | Check to see if set to TRUE |

CELL UPDATE CONFIRM (Step 6)

Use the same message type found in (TS 34.108) Clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

#### 8.1.1.5a.5 Test requirement

After step 5 the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "paging response" and “HS-PDSCH in CELL_FACH” set to TRUE, using an allowed signature according to modified IE "Available signature"(FDD) in SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis

### 8.1.1.6 Paging for notification of BCCH modification in connected mode (URA_PCH)

#### 8.1.1.6.1 Definition

#### 8.1.1.6.2 Conformance requirement

A UE in URA_PCH state shall receive the paging information for all its monitored paging occasions. For a UE in URA_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in TS 25.331 subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

…

If the IE "BCCH modification info" is included, any UE in URA_PCH state shall perform the actions as specified in TS 25.331 subclause 8.1.1 in addition to any actions caused by the IE "Paging record" occurrences in the message as specified above.

The UE shall:

1> compare the value of IE "MIB value tag" in the IE "BCCH modification info" with the value tag stored for the master information block in variable VALUE_TAG.

1> if the value tags differ:

2> read the master information block on BCH;

2> if the value tag of the master information block in the system information is the same as the value in IE "MIB value tag" in "BCCH modification info" but different from the value tag stored in the variable VALUE_TAG:

3> perform actions as specified in subclause 8.1.1.5.

…

Upon reception of the master information block, the UE shall:

1> compare the value tag in the master information block with the value tag stored for this cell and this PLMN in the variable VALUE_TAG;

1> if the value tags differ:

2> store the value tag into the variable VALUE_TAG for the master information block;

2> read and store scheduling information included in the master information block.

….

For all system information blocks or scheduling blocks that are supported by the UE referenced in the master information block or the scheduling blocks, the UE shall perform the following actions:

1> for all system information blocks with area scope "PLMN" or "Equivalent PLMN" that use value tags:

2> compare the value tag read in scheduling information for that system information block with the value stored within the variable VALUE_TAG for that system information block;

2> if the value tags differ:

3> store the value tag read in scheduling information for that system information block into the variable VALUE_TAG;

3> read and store the IEs of that system information block.

…

Reference

3GPP TS 25.331 clause 8.1.1, 8.1.2.

### 8.1.1.6.3 Test purpose

To confirm that the UE checks the included new value tag of the master information block and reads the relevant SYSTEM INFORMATION block(s) after it receives a PAGING TYPE 1 message which includes the IE "BCCH Modification Information".

### 8.1.1.6.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: URA_PCH state (state 6-13) as specified in clause 7.4 of TS 34.108 with a valid U-RNTI assigned.

Test Procedure

The SS transmits a PAGING TYPE 1 message on the paging occasions assigned to the UE. The message shall include the IE "BCCH Modification Information" indicating the value tag of the master information block . Then it transmits the new master information block followed by the new SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis. message. In the new SIB TYPE 5 /SIB TYPE 5bis message, the IE "Available Signature" for FDD, "Available Channelisation codes indices " for TDD 3.84 Mcps and 7.68 Mcps options or "Available SYNC_UL codes indices " for TDD 1.28 Mcps optionis different when compared to the original SIB TYPE 5 /SIB TYPE 5bis message. At the next paging occasion, SS transmits a new PAGING TYPE 1 message. This message addresses the UE using its U-RNTI and the "paging cause" IE set to a terminating call type that is supported by the UE. The UE shall respond with a CELL UPDATE message and set IE "cell update cause" to "paging response". The SS shall transmit a CELL UPDATE CONFIRM message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | ← | | PAGING TYPE 1 | SS transmits the paging message which comprises IE "BCCH Modification Information", with the "Value Tag" changed from the "MIB Value Tag" of the current Master Information Block. |
| 2a | | | Void | |
| 3 | ← | | MASTER INFORMATION BLOCK | SS starts to transmit the MIB with the "MIB Value Tag" IE different from the original setting. |
| | ← | | SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis. | For FDD, at the same time, SS starts to transmit the affected SIB TYPE 5 / SIB TYPE 5bis message continuously. The value of IE "Available Signature" is changed from "0000 0000 1111 1111(B)" to "1111 1111 0000 0000(B)".<br>For TDD 3.84 Mcps and 7.68 Mcps options, at the same time, SS starts to transmit the affected SIB TYPE 6 continuously. The value of IE "Available Channelisation codes indices " is changed according to test purposes.<br><br>For TDD 1.28 Mcps option, at the same time, SS starts to transmit the affected SIB TYPE 6 continuously. The value of IE "Available SYNC_UL codes indices " is changed according to test purposes. |
| 3a | | | | SS waits 5s (to ensure that the UE has time to read the new system information) |
| 4 | ← | | PAGING TYPE 1 | SS transmits this message continuously on the PCCH at the correct occasion. |
| 5 | → | | CELL UPDATE | |
| 6 | ← | | CELL UPDATE CONFIRM | See message content. |

Specific Message Contents

PAGING TYPE 1 (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not Present |
| BCCH modification info | |
| - MIB Value Tag | Set to (Current MIB value tag + 1) |
| - BCCH Modification time | Not Present |

MASTER INFORMATION BLOCK (Step 3)

| Information Element | Value/remark |
|---|---|
| MIB Value tag | As in PAGING TYPE 1 in step 2 |
| SIB 5 Cell Value tag | Set to (Current SIB5 value tag + 1) |

SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis. (Step 3)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PRACH system information | |
| - PRACH info | |
| - CHOICE mode | FDD |
| - Available Signature | '1111 1111 0000 0000'B |

SYSTEM INFORMATION BLOCK TYPE 5 (Step 3) (TDD 3.84 Mcps option)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PRACH system information | |
| - PRACH info | |
| - CHOICE mode | TDD |
| - CHOICE *TDD option* | 3.84 Mcps option |
| - Available Channelisation codes indices | To be defined (each bit indicates availability of a channelisation code index) |

SYSTEM INFORMATION BLOCK TYPE 5 (Step 3) (TDD 1.28 Mcps option)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PRACH system information | |
| - PRACH info | |
| - CHOICE mode | TDD |
| - CHOICE *TDD option* | 1.28 Mcps option |
| - Available SYNC_UL codes indices | To be defined (each bit indicates availability of a SYNC_UL code index) |

SYSTEM INFORMATION BLOCK TYPE 5 (Step 3) (TDD 7.68 Mcps option)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - PRACH system information | |
| - PRACH info | |
| - CHOICE mode | TDD |
| - CHOICE *TDD option* | 7.68 Mcps option |
| - Available Channelisation codes indices | To be defined (each bit indicates availability of a channelisation code index) |

PAGING TYPE 1 (Step 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | Equal to the U-RNTI assigned earlier. |
| - SRNC Identity | |
| - S-RNTI | |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Step 5)

Check to see if the same message type found in TS 34.108, clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Checked to see if it is set to the same values as in step 4 |
| - SRNC identity | |
| - S-RNTI | |
| Cell update cause | Paging response |

CELL UPDATE CONFIRM (Step 6)

Use the same message type found in TS 34.108, clause 9 with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| RRC State indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |

#### 8.1.1.6.5 Test requirement

After step 4, the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "paging response", using an allowed signature according to modified IE "Available signature"(FDD) )/ "Available SYNC_UL codes indices" (1.28 Mcps TDD) / "Available Channelisation codes indices " (3.84 Mcps and 7.68 Mcps TDD) in SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis.

### 8.1.1.6a Paging for notification of synchronised BCCH modification in idle mode using BCCH modification time

#### 8.1.1.6a.1 Definition

#### 8.1.1.6a.2 Conformance requirement

For modification of some system information elements, e.g. reconfiguration of the channels, it is important for the UE to know exactly when a change occurs. In such cases, the UTRAN should notify the SFN when the change will occur as well as the new value tag for the master information block in the IE "BCCH modification info"

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

…

Upon reception of a PAGING TYPE 1 message or a SYSTEM INFORMATION CHANGE INDICATION message containing the IE "BCCH modification info" containing the IE "MIB value tag" and containing the IE "BCCH modification time", the UE shall:

1> perform the actions as specified in TS 25.331 subclause 8.1.1.7.3 at the time, indicated in the IE "BCCH Modification Info".

…

If the IE "BCCH modification info" is included, any UE in idle mode state shall perform the actions as specified in TS 25.331 subclause 8.1.1 in addition to any actions caused by the IE "Paging record" occurrences in the message.

The UE shall:

1> compare the value of IE "MIB value tag" in the IE "BCCH modification info" with the value tag stored for the master information block in variable VALUE_TAG.

1> if the value tags differ:

2> read the master information block on BCH;

2> if the value tag of the master information block in the system information is the same as the value in IE "MIB value tag" in "BCCH modification info" but different from the value tag stored in the variable VALUE_TAG:

3> perform actions as specified in TS 25.331 subclause 8.1.1.5.

…

Upon reception of the master information block, the UE shall:

1> compare the value tag in the master information block with the value tag stored for this cell and this PLMN in the variable VALUE_TAG;

1> if the value tags differ:

2> store the value tag into the variable VALUE_TAG for the master information block;

2> read and store scheduling information included in the master information block.

….

For all system information blocks or scheduling blocks that are supported by the UE referenced in the master information block or the scheduling blocks, the UE shall perform the following actions:

1> for all system information blocks with area scope "PLMN" that use value tags:

2> compare the value tag read in scheduling information for that system information block with the value stored within the variable VALUE_TAG for that system information block;

2> if the value tags differ:

3> store the value tag read in scheduling information for that system information block into the variable VALUE_TAG;

3> read and store the IEs of that system information block.

…

Reference

3GPP TS 25.331 clause 8.1.1, 8.1.2.

### 8.1.1.6a.3 Test purpose

To confirm that the UE checks the new value tag of the master information block and reads the updated SYSTEM INFORMATION BLOCK messages exactly when a change occurs at "BCCH modification time".

### 8.1.1.6a.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108 with a CN UE identity, depending on the CN domain(s) supported by the UE.

Test Procedure

The SS transmits a PAGING TYPE 1 message. This message addresses the UE using its (P)TMSI and the "paging cause" IE set to a terminating call type that is supported by the UE. The UE shall respond with RRC CONNECTION REQUEST message. Then SS shall transmit RRC CONNECTION REJECT message to UE.

The SS transmits a PAGING TYPE 1 message on the paging occasions assigned to the UE. The message shall include the IE "BCCH Modification Information" indicating the value tag of the modified master information block and BCCH Modification time. Then it transmits the new master information block followed by the new SYSTEM INFORMATION BLOCK TYPE 5 or SYSTEM INFORMATION BLOCK TYPE 5bis message.

At the paging occasion, SS transmits a new PAGING TYPE 1 message. This message addresses the UE using its (P)TMSI and the "paging cause" IE set to a terminating call type that is supported by the UE. The UE shall respond with RRC CONNECTION REQUEST message. Then SS shall transmit RRC CONNECTION REJECT message to UE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE 1 | SS starts to transmit this message on the PCCH at the correct paging occasion. |
| 2 | → | | RRC CONNECTION REQUEST | |
| 3 | ← | | RRC CONNECTION REJECT | |
| 4 | ← | | PAGING TYPE 1 | SS transmits the message including the IE "BCCH Modification Information", with the MIB "Value Tag" different from the "MIB Value Tag" of the current Master Information Block and “BCCH Modification time”. |
| 5 | | | | Before “BCCH Modification time” SS changes S-CCPCH configuration from TS34.108 Clause 6.1.0.b Interactive/Background 32 kbps RAB + SRB for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH in One SCCPCH to TS 34.108 Clause 6.1.1 SCCPCH configuration with Stand-alone SRB for PCCH in the first SCCPCH and Interactive/Background 32 kbps PS RAB + SRBs for CCCH/DCCH/BCCH in the second SCCPCH. |
| 6 | | ← | MASTER INFORMATION BLOCK<br><br>SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis | SS starts to transmit the MIB with the "MIB Value Tag" IE different from the original setting before BCCH Modification time.<br><br>At the same time, SS starts to transmit the new SIB TYPE 5 / SIB TYPE 5bis messages continuously. The SIB TYPE 5 / SIB TYPE 5 bis messages are changed from TS34.108 Clause .6.1.0.b to TS34.108 Clause 6.1.1. |
| 7 | ← | | PAGING TYPE 1 | SS starts to transmit this message continuously on the PCCH using the new SCCPCH configuration broadcast in NEW SIB TYPE 5 / SIB TYPE 5 bis before the SFN of BCCH Modification Time -1000. SS checks to see UE transmits no RRC CONNECTION REQUEST before the SFN of BCCH Modification Time |
| 8 | | | | SS waits 500 SFN after SFN of BCCH Modification Time (to ensure that the UE has time to read the new system information) |
| 9 | ← | | PAGING TYPE 1 | SS starts to transmit this message continuously on the PCCH using the new SCCPCH configuration broadcast in NEW SIB TYPE 5 / SIB TYPE 5 bis at the correct paging occasion. |
| 10 | → | | RRC CONNECTION REQUEST | |
| 11 | ← | | RRC CONNECTION REJECT | |

Specific Message Contents

PAGING TYPE 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | CN identity |
| - Paging Cause | Terminating Call with one of the supported services |
| - CN Domain Identity | Supported Domain (PS Domain or CS Domain) |
| - CHOICE UE Identity | Local (P)TMSI |
| - Routing parameter | Same as registered TMSI or P-TMSI |
| BCCH modification info | Not Present |

Use the same SCCPCH in TS 34.108 clause 6.1.0b.

RRC CONNECTION REJECT (Step 3 and 11)

Use the same message type found in [9] TS 34.108 clause 9.

PAGING TYPE 1 (Step 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not Present |
| BCCH modification info | |
| MIB Value Tag | Set to (Current MIB value tag + 1) |
| BCCH Modification time | Set to (Current SFN +4088) MOD4096 |

Use the same SCCPCH configuration in TS 34.108 clause 6.1.0b.

MASTER INFORMATION BLOCK (Step 6)

| Information Element | Value/remark |
|---|---|
| MIB Value tag | As in PAGING TYPE 1 in step 4 |
| SIB 5 Cell Value tag | Set to (Current SIB5 value tag + 1) |

SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis (Step 6) (FDD) (3.84 Mcps TDD) (1.28 Mcps TDD)

Use the same message type found in clause 6.1.1 of TS 34.108

PAGING TYPE 1 (Steps 7 & 9)

Use the same message as defined for Step 1.

Use the same SCCPCH configuration in TS 34.108 clause 6.1.1.

8.1.1.6a.5 Test requirement

After step 1 the UE shall transmit RRC CONNECTION REQUEST messages in response to the PAGING TYPE 1 messages sent in step 1, using an allowed SCCPCH configuration in SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis.

After step 6 UE shall not try to receive MIB whose value tag is same as IE "BCCH modification info" in PAGING TYPE 1 continuously.

After step 7 UE shall not transmit RRC CONNECTION REQUEST messages in in response to the PAGING TYPE 1 messages sent in step 7

After step 9 the UE shall transmit RRC CONNECTION REQUEST messages in response to the PAGING TYPE 1 messages sent in step 9, using an allowed SCCPCH configuration in SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis.

### 8.1.1.7 Paging for Connection in connected mode (CELL_DCH)

#### 8.1.1.7.1 Definition

#### 8.1.1.7.2 Conformance requirement

When the UE receives a PAGING TYPE 2 message, it shall not affect the state of any other ongoing RRC procedures, when not stated otherwise elsewhere.

The UE shall:

1> indicate reception of paging; and

1> forward the IE "Paging cause" and the IE "Paging record type identifier" to upper layers.

…

In the UE, the initial direct transfer procedure shall be initiated, when the upper layers request establishment of a signalling connection. This request also includes a request for the transfer of a NAS message.

….

The UE shall, in the INITIAL DIRECT TRANSFER message:

1> set the IE "NAS message" as received from upper layers; and

1> set the IE "CN domain identity" as indicated by the upper layers; and

1> set the IE "Intra Domain NAS Node Selector" as follows:

2> derive the IE "Intra Domain NAS Node Selector" from TMSI/PMTSI, IMSI, or IMEI; and

2> provide the coding of the IE "Intra Domain NAS Node Selector" according to the following priorities:

1. derive the routing parameter for IDNNS from TMSI (CS domain) or PTMSI (PS domain) whenever a valid TMSI/PTMSI is available;

2. base the routing parameter for IDNNS on IMSI when no valid TMSI/PTMSI is available;

3. base the routing parameter for IDNNS on IMEI only if no (U)SIM is inserted in the UE.

…

The UE shall:

1> transmit the INITIAL DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB3;

1> when the INITIAL DIRECT TRANSFER message has been submitted to lower layers for transmission:

2> confirm the establishment of a signalling connection to upper layers; and

2> add the signalling connection with the identity indicated by the IE "CN domain identity" in the variable ESTABLISHED_SIGNALLING_CONNECTIONS.

1> when the successful delivery of the INITIAL DIRECT TRANSFER message has been confirmed by RLC:

2> the procedure ends.

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, with a mandatory IE having a value, including choice, reserved for future extension (spare) or a value not used in this version of the specification (e.g. a dummy value), the UE shall:

1> if a default value of the IE is defined:

2> treat the rest of the message using the default value of the IE.

1> if no default value of the IE is defined:

2> set the variable PROTOCOL_ERROR_REJECT to TRUE;

2> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Information element value not comprehended";

2> perform procedure specific error handling according to clause 8.

Reference

3GPP TS 25.331 clause 8.1.8.2, 8.1.11.3, 9.4.

### 8.1.1.7.3 Test purpose

To confirm that the UE responds to a PAGING TYPE 2 message which includes the IE "Paging Cause" and the IE "Paging Record Type Identifier".

To confirm that the UE responds with a RRC STATUS message after it has received an invalid PAGING TYPE 2 message.

To Page with the Paging Record Type Identifier set to "IMSI", in order to test the UEs behaviour to this situation which may occur when details of the temporary identity have been lost in the core network.

### 8.1.1.7.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_DCH state (state 6-9 or state 6-10) as specified in clause 7.4 of TS 34.108 after executing a location registration and/or attach procedure. The UE has been registered in both CS and PS domains.

Test Procedure

The SS transmits an invalid PAGING TYPE 2 message. UE shall respond by transmitting a RRC STATUS message on the uplink DCCH using RLC-AM mode. Finally, SS transmits a PAGING TYPE 2 message, which includes a matched Paging Record Type Identifier. In the CS domainthe UE shall respond to this message by the transmission of an INITIAL DIRECT TRANSFER message. In the PS Domain the UE will locally detach and then initiate a GPRS attach procedure (as per clause 4.7.9.1.2 of TS 24.008) also involving the transmission of an INITIAL DIRECT TRANSFER message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | ← | | PAGING TYPE 2 | SS pages UE from a new CN domain, see specific message contents. |
| 3 | → | | RRC STATUS | The UE shall respond by reporting the protocol error to the SS. |
| 4 | ← | | PAGING TYPE 2 | SS pages the UE with a matched identifier and with a valid "paging cause" IE from a new CN Domain. |
| 5 | → | | INITIAL DIRECT TRANSFER | The UE shall respond to the paging message sent in step 4. |

Specific Message Contents

PAGING TYPE 2 (Step 2)

SS sends a message containing a protocol error causing the UE to perform procedure specific error handling.

Use the same message type found in clause 9 of TS 34.108, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Paging Cause | Set to value "Spare" |
| CN Domain Identity | Set to a new CN Domain |
| Paging Record Type Identifier | Set to "IMSI (GSM-MAP)" for UEs supporting GSM-MAP core network type or "IMSI (DS-41)" for UEs supporting ANSI-41 core network type. |

RRC STATUS (Step 3)

Use the same message type found in TS 34.108, clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Identification of received message | |
| - Received message type | PAGING TYPE 2 |
| - RRC transaction identifier | Checked to see if the value is identical to the same IE in the PAGING TYPE 2 message. |
| Protocol error information | |
| - Protocol Error Cause | Information element value not comprehended |

PAGING TYPE 2 (Step 4)

Use the same message type found in TS 34.108, clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Paging cause | Terminating Call supported by the UE in the new domain |
| CN domain identity | New Domain supported by the UE |
| Paging record type identifier | Set to "IMSI (GSM-MAP)" for UEs supporting GSM-MAP core network type or "IMSI (DS-41)" for UEs supporting ANSI-41 core network type. |

INITIAL DIRECT TRANSFER (Step 5) – for UEs supporting GSM-MAP core networks

Check to see if the same message type found in TS 34.108 clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CN domain identity | CS domain or PS domain as specified in the PAGING TYPE 2 message in Step 4. |
| Intra Domain NAS Node Selector | |
| - CHOICE version | R99 |
| -- CHOICE CN type | GSM |
| --- CHOICE Routing basis | local (P)TMSI – if CS Domain<br>IMSI (cause UE initiated event) or IMSI (response to IMSI paging) - if PS Domain |
| ---- Routing parameter | If the IE "CN domain identity" is equal to "CS domain":<br>The TMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant<br>The "Routing parameter" bit string consists of bits b14 through b23 of the TMSI/ PTMSI.<br>The first/ leftmost/ most significant bit of the bit string contains bit b23 of the TMSI/ PTMSI.<br>If the IE "CN domain identity" is equal to "PS domain":<br>The "Routing parameter" bit string consists of DecimalToBinary [(IMSI div 10) mod 1000].<br>The first/ leftmost bit of the bit string contains the most significant bit of the result. |
| --- Entered parameter | Not checked |
| NAS message | Not checked |

INITIAL DIRECT TRANSFER (Step 5) – for UEs supporting ANSI-41 core networks

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| CN domain identity | CS domain or PS domain as specified in the PAGING TYPE 2 message in Step 4. |
| Intra Domain NAS Node Selector | |
| - CHOICE version | ANSI-41 : Bitstring(14), all bits set to 0 |
| NAS message | Not checked |
| START | Not checked |
| Measured results on RACH | Not checked |

#### 8.1.1.7.5 Test requirement

After step 2 the UE shall respond to the paging message by transmitting RRC STATUS on the DCCH, stating the protocol error as " Information element value not comprehended ".

After step 4 the UE shall respond to the paging message by transmitting an INITIAL DIRECT TRANSFER message on the uplink DCCH.

### 8.1.1.8 Paging for Connection in connected mode (CELL_FACH)

#### 8.1.1.8.1 Definition

#### 8.1.1.8.2 Conformance requirement

When the UE receives a PAGING TYPE 2 message, it shall not affect the state of any other ongoing RRC procedures, when not stated otherwise elsewhere.

The UE shall:

1> indicate reception of paging; and

1> forward the IE "Paging cause" and the IE "Paging record type identifier" to upper layers.

…

In the UE, the initial direct transfer procedure shall be initiated, when the upper layers request establishment of a signalling connection. This request also includes a request for the transfer of a NAS message.

The UE shall, in the INITIAL DIRECT TRANSFER message:

…

In CELL_FACH state, the UE shall:

1> include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System Information Block type 12 (or "System Information Block Type 11" if "System Information Block Type 12" is not being broadcast);

1> include in the IE "Measured results on RACH" all requested reporting quantities for cells for which measurements are reported.

The UE shall:

1> transmit the INITIAL DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB3;

1> when the INITIAL DIRECT TRANSFER message has been submitted to lower layers for transmission:

2> confirm the establishment of a signalling connection to upper layers; and

2> add the signalling connection with the identity indicated by the IE "CN domain identity" in the variable ESTABLISHED_SIGNALLING_CONNECTIONS.

1> when the successful delivery of the INITIAL DIRECT TRANSFER message has been confirmed by RLC:

2> the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.8.2, 8.1.11.

### 8.1.1.8.3 Test purpose

To confirm that the UE responds to a PAGING TYPE 2 message, which includes a matching value for IE "Paging Record Type Identifier".

### 8.1.1.8.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_FACH state (state 6-11) as specified in clause 7.4 of TS 34.108. The UE has been registered in both CS and PS domains.

Test Procedure

The SS transmits a PAGING TYPE 2 message. Then the UE shall respond by transmitting an upper layer message to answer this page.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | ← | | PAGING TYPE 2 | The SS transmits the message includes a matched identifier. |
| 3 | → | | INITIAL DIRECT TRANSFER | The UE responds by sending an upper layer message. |

Specific Message Content

PAGING TYPE 2 (Step 2)

Use the same message type found in [9] (TS 34.108) Clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Paging cause | Terminating Call supported by the UE |
| CN domain identity | CS |
| Paging record type identifier | Set to "TMSI (GSM-MAP)/P-TMSI" for UEs supporting GSM-MAP core network type or "TMSI (DS-41)" for UEs supporting ANSI-41 core network type. |

INITIAL DIRECT TRANSFER (Step 3) – for UEs supporting GSM-MAP core networks

Only the message type IE for this message is checked.

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| CN domain identity | CS domain |
| Intra Domain NAS Node Selector | |
| - CHOICE version | R99 |
| -- CHOICE CN type | GSM |
| --- CHOICE Routing basis | Local (P)TMSI |
| ---- Routing parameter | The TMSI/P-TMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant. The "Routing parameter" bit string consists of bits b14 through b23 of the TMSI/ PTMSI. The first/ leftmost/ most significant bit of the bit string contains bit b23 of the TMSI/ PTMSI. |
| --- Entered parameter | Not checked |
| NAS message | Not checked |
| START | Not checked |
| Measured results on RACH | Not checked |

INITIAL DIRECT TRANSFER (Step 3) – for UEs supporting ANSI-41 core networks

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| CN domain identity | CS domain |
| Intra Domain NAS Node Selector | |
| - CHOICE version | ANSI-41 : Bitstring(14), all bits set to 0 |
| NAS message | Not checked |
| START | Not checked |
| Measured results on RACH | Not checked |

#### 8.1.1.8.5 Test requirement

After step 2 the UE shall respond to the PAGING TYPE 2 message by transmitting an INITIAL DIRECT TRANSFER message on the uplink DCCH.

### 8.1.1.9 Paging for Connection in idle mode (multiple paging records)

#### 8.1.1.9.1 Definition

#### 8.1.1.9.2 Conformance requirement

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions. For an UE in idle mode, the paging occasions are specified in [25.304] and depend on the IE "CN domain specific DRX cycle length coefficient", as specified in subclause 8.6.3.1a. For a UE in CELL_PCH state or URA_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in idle mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a CN identity:

2> compare the IE "UE identity" with all of its allocated CN UE identities:

2> if one match is found:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "UE identity" and the IE "Paging cause" to the upper layers.

1> otherwise:

2> ignore that paging record.

:

In the UE, the initial direct transfer procedure shall be initiated, when the upper layers request establishment of a signalling connection. This request also includes a request for the transfer of a NAS message.

Upon initiation of the initial direct transfer procedure when the UE is in idle mode, the UE shall:

1> set the variable ESTABLISHMENT_CAUSE to the cause for establishment indicated by upper layers;

1> perform an RRC connection establishment procedure, according to subclause 8.1.3;

1> if the RRC connection establishment procedure was not successful:

2> indicate failure to establish the signalling connection to upper layers and end the procedure.

1> when the RRC connection establishment procedure is completed successfully:

2> continue with the initial direct transfer procedure as below.

Upon initiation of the initial direct transfer procedure when the UE is in CELL_PCH or URA_PCH state, the UE shall:

1> perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";

1> when the cell update procedure completed successfully:

2> continue with the initial direct transfer procedure as below.

The UE shall, in the INITIAL DIRECT TRANSFER message:

1> set the IE "NAS message" as received from upper layers; and

1> set the IE "CN domain identity" as indicated by the upper layers; and

1> set the IE "Intra Domain NAS Node Selector" as follows:

2> derive the IE "Intra Domain NAS Node Selector" from TMSI/PMTSI, IMSI, or IMEI; and

2> provide the coding of the IE "Intra Domain NAS Node Selector" according to the following priorities:

1. derive the routing parameter for IDNNS from TMSI (CS domain) or PTMSI (PS domain) whenever a valid TMSI/PTMSI is available;

2. base the routing parameter for IDNNS on IMSI when no valid TMSI/PTMSI is available;

3. base the routing parameter for IDNNS on IMEI only if no (U)SIM is inserted in the UE.

1> calculate the START according to subclause 8.5.9 for the CN domain as set in the IE "CN Domain Identity"; and

1> include the calculated START value for that CN domain in the IE "START".

In CELL_FACH state, the UE shall:

1> include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System

Information Block type 12 (or "System Information Block Type 11" if "System Information Block Type 12" is not being broadcast);

1> include in the IE "Measured results on RACH" all requested reporting quantities for cells for which measurements are reported.

The UE shall:

1> transmit the INITIAL DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB3;

1> when the INITIAL DIRECT TRANSFER message has been submitted to lower layers for transmission:

2> confirm the establishment of a signalling connection to upper layers; and

2> add the signalling connection with the identity indicated by the IE "CN domain identity" in the variable ESTABLISHED_SIGNALLING_CONNECTIONS.

1> when the successful delivery of the INITIAL DIRECT TRANSFER message has been confirmed by RLC:

2> the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.2 and 8.1.8, 3GPP TS 25.211 clause 5.3.3.10 (FDD), 3GPP TS25.221 (TDD), 3GPP TS 25.304 clause 8.

### 8.1.1.9.3 Test purpose

1) For the CS domain

To confirm that the UE establishes an RRC connection after it receives a PAGING TYPE 1 message which contains multiple paging records and includes IE "UE identity"(in IE "Paging Record") set to the IMSI of the UE, and responds with a correct INITIAL DIRECT TRANSFER message.

2) For the PS domain

To confirm that the UE establishes an RRC connection after it receives a PAGING TYPE 1 message which contains multiple paging records and includes IE "UE identity"(in IE "Paging Record") set to the P-TMSI allocated by SS at initial attach and responds with a correct INITIAL DIRECT TRANSFER message.

### 8.1.1.9.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: MM-IDLE state and Updated update status with no TMSI (if CS supported)

GMM-Registered with a P-TMSI assigned (if PS supported)

the UE shall have an IMSI.

Test Procedure

SS transmits SYSTEM INFORMATION BLOCK TYPE 1 or 13 messages, depending on the CN type supported by the UE. The SS also transmits SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis messages. The SS transmits a PAGING TYPE 1 message, which includes an unmatched CN UE identity for idle mode, and an unmatched UTRAN UE identity for connected mode. The UE shall not change its state. The SS transmits a PAGING TYPE 1 message, which includes two unmatched identities and a matched CN UE identity for the UE in the idle state. During transmission of PAGING TYPE 1 messages, SS selects the correct paging indicator on the PICH in order to allow the UE to respond to paging. Then the UE transmits an RRC CONNECTION REQUEST to the SS, the SS transmits an RRC CONNECTION SETUP to the UE. When the UE receives this message, the UE establishes an RRC connection and transmits an RRC CONNECTION SETUP COMPLETE message and an INITIAL DIRECT TRANSFER message on the uplink DCCH.

NOTE: For UEs supporting GSM-MAP CN type only, SYSTEM INFORMATION TYPE 1 messages are to be sent by SS in this test case. On the other hand, SS transmits SYSTEM INFORMATION TYPE 13 messages if the UE under test supports only ANSI-41 CN type.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SYSTEM INFORMATION BLOCK TYPE 13 or SYSTEM INFORMATION BLOCK TYPE 1 | See specific message contents. |
| 2 | ← | | SYSTEM INFORMATION BLOCK TYPE 5/SYSTEM INFORMATION BLOCK TYPE 5bis, MASTER INFORMATION BLOCK | See specific message contents. |
| 3 | ← | | PAGING TYPE 1 | The SS transmits the message, which includes only unmatched identities, and the UE does not change its state. |
| 4 | ← | | PAGING TYPE 1 | The SS transmits the message, which includes a matched identity. |
| 5 | → | | RRC CONNECTION REQUEST | |
| 6 | ← | | RRC CONNECTION SETUP | SS assigns DPCH resources to allow UE to establish an RRC connection. |
| 7 | → | | RRC CONNECTION SETUP COMPLETE | |
| 8 | → | | INITIAL DIRECT TRANSFER | |

Specific Message Contents

SYSTEM INFORMATION BLOCK TYPE 1 (Step 1) – for UEs supporting GSM-MAP core networks

Use the default message type found in clause 6.1 of TS 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| CN domain system information | |
| - CN domain identity | PS |
| - CN domain specific DRX cycle length coefficient | 8 |
| - CN domain identity | CS |
| - CN domain specific DRX cycle length coefficient | 6 |

SYSTEM INFORMATION TYPE 13 (Step 1) – for UEs supporting ANSI-41 core networks

Use the default message type found in clause 6.1 of TS 34.108, clause 6.1.

MASTER INFORMATION BLOCK (Step 2)

| Information Element | Value/remark |
|---|---|
| MIB Value tag | Set to (Current MIB value tag + 1) |
| SIB 5/5bis Cell Value tag | Set to (Current SIB5/5bis value tag + 1) |

SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis. (Step 2)

Use the default message type found in clause 6.1 of TS 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| PICH Info | |
| - Number of PI per frame | 36 |

PAGING TYPE 1 (Step 3)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | |
| - Paging record 1 | |
| - CHOICE Used paging identity | CN identity |
| - Paging cause | Terminating Call with one of the supported services |
| - CN domain identity | A Registered Domain (PS Domain or CS Domain) |
| - CHOICE UE Identity | IMSI |
| - IMSI | Set to an arbitrary octet string of length 7 bytes which is different from the IMSI value stored in the TEST USIM card. |
| - Paging record 2 | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to an arbitrary SRNC identity. |
| - S-RNTI | Set to an arbitrary 20-bit string. |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

PAGING TYPE 1 (Step 4)

For services in CS:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | |
| - Paging record 1 | |
| - CHOICE Used paging identity | CN identity |
| - Paging cause | Terminating Call with one of the supported services |
| - CN domain identity | A Registered Domain (PS Domain or CS Domain) |
| - CHOICE UE Identity | IMSI |
| - IMSI | Set to an arbitrary octet string of length 7 bytes which is different from the IMSI value stored in the TEST USIM card. |
| - Paging record 2 | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to an arbitrary SRNC identity. |
| - S-RNTI | Set to an arbitrary 20-bit string. |
| - CN originated page to connected mode UE | Not Present |
| - Paging record 3 | |
| - CHOICE Used paging identity | CN identity |
| - Paging cause | Terminating Call with one of the supported services |
| - CN domain identity | CS domain |
| - CHOICE UE identity | |
| - IMSI (GSM-MAP) | Set to the same octet string as in the IMSI stored in the USIM card |
| BCCH modification info | Not Present |

For packet in PS:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | |
| - Paging record 1 | |
| - CHOICE Used paging identity | CN identity |
| - Paging cause | Terminating Call with one of the supported services |
| - CN domain identity | A Registered Domain (PS Domain or CS Domain) |
| - CHOICE UE Identity | IMSI |
| - IMSI | Set to an arbitrary octet string of length 7 bytes which is different from the IMSI value stored in the TEST USIM card. |
| - Paging record 2 | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to an arbitrary SRNC identity. |
| - S-RNTI | Set to an arbitrary 20-bit string. |
| - CN originated page to connected mode UE | Not Present |
| - Paging record 3 | |
| - CHOICE Used paging identity | CN identity |
| - Paging cause | Terminating Call with one of the supported services |
| - CN domain identity | PS domain |
| - CHOICE UE identity | |
| - P-TMSI | Use P-TMSI allocated by SS at initial attach. |
| BCCH modification info | Not Present |

RRC CONNECTION REQUEST (Step 5)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered P-TMSI if PS supported by UE, otherwise the IMSI stored in the TEST USIM card. |
| Establishment Cause | Check to see if it is set to the same value as "Paging Cause" IE in the PAGING TYPE 1 message transmitted on step 3. |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |

INITIAL DIRECT TRANSFER (Step 8) – for UEs supporting GSM-MAP core networks

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | Not present |
| CN domain identity | CS domain or PS domain (as specified by the SS in the PAGING TYPE 1 message of Step 4) |
| Intra Domain NAS Node Selector | |
| - CHOICE version | R99 |
| -- CHOICE CN type | GSM-MAP |
| --- CHOICE Routing basis | IMSI (response to IMSI paging) in CS domain or Local (P)-TMSI in PS Domain |
| ---- Routing parameter | If the IE "CN domain identity" is equal to "CS domain", bit string (10) consisting of DecimalToBinary [(IMSI div 10) mod 1000]. The first/ leftmost bit of the bit string contains the most significant bit of the result.<br>If the IE "CN domain identity" is equal to "PS domain": The TMSI/ PTMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant. The "Routing parameter" is set to bits b14 through b23 of the TMSI/ PTMSI. The first/ leftmost/ most significant bit of the bit string contains bit b23 of the TMSI/ PTMSI. |
| --- Entered parameter | Not checked |
| NAS message | Not checked |
| START | Not checked |
| Measured results on RACH | Not checked |

INITIAL DIRECT TRANSFER (Step 8) – for UEs supporting ANSI-41 core networks

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | Not present |
| CN domain identity | CS domain or PS domain (as specified by the SS in the PAGING TYPE 1 message of Step 3) |
| Intra Domain NAS Node Selector | |
| - CHOICE version | ANSI-41 : Bitstring(14), all bits set to 0 |
| NAS message | Not checked |
| START | Not checked |
| Measured results on RACH | Not checked |

#### 8.1.1.9.5 Test requirement

After step 3 the UE shall not respond to the PAGING TYPE 1 message sent in step 3.

After step 4 the UE shall transmit an RRC CONNECTION REQUEST message on the uplink CCCH.

After step 6 the UE shall have an RRC connection based on dedicated physical channel resources and transmit an RRC CONNECTION SETUP COMPLETE message and an INITIAL DIRECT TRANSFER message on the uplink DCCH.

### 8.1.1.10 Paging for Connection in connected mode (URA_PCH, multiple paging records)

#### 8.1.1.10.1 Definition

#### 8.1.1.10.2 Conformance requirement

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions. For an UE in idle mode, the paging occasions are specified in [25.304] and depend on the IE "CN domain specific DRX cycle length coefficient", as specified in subclause 8.6.3.1a. For a UE in CELL_PCH state or URA_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

:

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

Reference

3GPP TS 25.331 clause 8.1.2, 8.3.1.7.

### 8.1.1.10.3 Test purpose

To confirm that the UE enters the CELL_FACH state after it receives a PAGING TYPE 1 message in which the IE "Used paging identity" is set to "UTRAN identity", and the UE takes the U-RNTI value assigned to it in the IE "U-RNTI".

### 8.1.1.10.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: URA_PCH state (state 6-13) as specified in clause 7.4 of TS 34.108, with a valid U-RNTI assigned by the SS.

Test Procedure

The SS transmits SYSTEM INFORMATION BLOCK TYPE 6 messages with a modified PCH configuration. The SS then transmits a PAGING TYPE 1 message, which includes a matched IMSI, but the UE does not respond since it is in

connected mode. The SS transmits a PAGING TYPE 1 message, which includes a matched U-RNTI but in a paging occasion not accrding to the DRX cycle of the UE. The UE does not reply. The SS transmits a PAGING TYPE 1 message, which includes a matched U-RNTI in a correct paging occasion. Then the UE listens to it and enters the CELL_FACH state to transmit a CELL UPDATE message using uplink CCCH in respond to the paging. The SS sends the UE back to URA_PCH state using CELL UPDATE CONFIRM and also modifies the UTRAN DRX cycle length for the UE. The SS then transmits a PAGING TYPE 1 message using the new paging occasions. The UE replies to this page.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SYSTEM INFORMATION BLOCK TYPE 6, MASTER INFORMATION BLOCK, SCHEDULING BLOCK 1 | See specific message contents |
| 1a | ← | | PAGING TYPE 1 | SS transmits the message including the IE "BCCH Modification Information", with the "Value Tag" same as that in the MIB. |
| 2 | ← | | PAGING TYPE 1 | The SS transmits the message that includes a matched CN UE identity, but the UE does not respond. |
| 3 | ← | | PAGING TYPE 1 | The SS transmits the message that includes a matched UTRAN UE identity but in a paging occasion not according to the DRX cycle of the UE. |
| 4 | ← | | PAGING TYPE 1 | The SS transmits the message that includes a matched UTRAN UE identity in the correct paging occasion. |
| 5 | → | | CELL UPDATE | The UE enters the CELL_FACH state. |
| 6 | ← | | CELL UPDATE CONFIRM | See message content. |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | After transmitting this message, the UE returns to URA_PCH state and changes its UTRAN DRX cycle. |
| 8 | ← | | PAGING TYPE 1 | The SS transmits the message that includes a matched UTRAN UE identity, using a paging occasion which is included in the new DRX cycle, but not in the old DRX cycle. |
| 9 | → | | CELL UPDATE | The UE enters the CELL_FACH state. |
| 10 | ← | | CELL UPDATE CONFIRM | See message content. |
| 11 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Contents

SYSTEM INFORMATION BLOCK TYPE 6 (Step 1)

Use the default message type found in clause 6.1 of TS 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| - Secondary CCPCH info | |
| - CHOICE mode | FDD |
| - Secondary scrambling code | Not Present |
| - STTD indicator | FALSE |
| - Spreading factor | 64 |
| - Code number | 1 |
| - Pilot symbol existence | FALSE |
| - TFCI existence | TRUE |
| - Fixed or Flexible position | Flexible |
| - Timing offset | 0 |
| - TFCS | (This IE is repeated for TFC number for PCH and FACH.) |
| - CHOICE TFCI signalling | Normal |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS complete reconfiguration information | |
| - CHOICE CTFC Size | 4 bit |
| - CTFC information | 0 |
| - Power offset information | Not Present |
| - CTFC information | 1 |
| - Power offset information | Not Present |
| - CTFC information | 2 |
| - Power offset information | Not Present |
| - CTFC information | 3 |
| - Power offset information | Not Present |
| - CTFC information | 4 |
| - Power offset information | Not Present |
| - CTFC information | 5 |
| - Power offset information | Not Present |
| - CTFC information | 6 |
| - Power offset information | Not Present |
| - CTFC information | 8 |
| - Power offset information | Not Present |
| - FACH/PCH information | |
| - TFS | (PCH) |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC Size | 240 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 0 |
| - Number of Transport blocks | 1 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | ½ |
| - Rate matching attribute | 230 |
| - CRC size | 16 bit |
| - Transport Channel Identity | 12 (for PCH) |
| - CTCH indicator | FALSE |
| - TFS | (FACH) |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC Size | 168 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 0 |
| - Number of Transport blocks | 1 |
| - Number of Transport blocks | 2 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 220 |
| - CRC size | 16 bit |

| Information Element | Value/remark |
|---|---|
| - Transport Channel Identity | 13 (for FACH) |
| - CTCH indicator | FALSE |
| - TFS | (FACH) |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC Size | 360 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 0 |
| - Number of Transport blocks | 1 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Turbo |
| - Rate matching attribute | 130 |
| - CRC size | 16bit |
| - Transport Channel Identity | 14 (for FACH) |
| - CTCH indicator | FALSE |
| PICH Info<br>- CHOICE mode<br>- Channelisation code<br>- Number of PI per frame | <br>FDD<br>2<br>72 |
| - STTD indicator | FALSE |

MASTER INFORMATION BLOCK (Step 1)

| Information Element | Value/remark |
|---|---|
| MIB Value tag | A valid value (as defined in TS 25.331) that is different from the previous MIB. |
| SB 1 Cell Value tag | Set to (Current SB 1 value tag + 1) |

SCHEDULING BLOCK 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| SIB 6 Cell Value tag | Set to (Current SIB 6 value tag + 1) |

PAGING TYPE 1 (STEP 1a)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not Present |
| BCCH modification info | |
| MIB Value Tag | Same value as the MIB value tag in the MIB in step 1 |
| BCCH Modification time | Not Present |

PAGING TYPE 1 (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | |
| - Paging record 1 | |
| - CHOICE Used paging identity | CN identity |
| - Paging cause | Terminating Call with one of the supported services |
| - CN domain identity | A Registered Domain (PS Domain or CS Domain) |
| - CHOICE UE Identity | IMSI |
| - IMSI | Set to the same octet string as in the IMSI stored in the USIM card. |
| - Paging record 2 | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to an unused SRNC identity which is different from the SRNC identity assigned. |
| - S-RNTI | Set to an arbitrary 20-bit string which is different from the S-RNTI assigned. |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

PAGING TYPE 1 (Steps 3, 4 and 8)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | |
| - Paging record 1 | |
| - CHOICE Used paging identity | CN identity |
| - Paging cause | Terminating Call with one of the supported services |
| - CN domain identity | A Registered Domain (PS Domain or CS Domain) |
| - CHOICE UE Identity | IMSI |
| - IMSI | Set to the octet string which is the same as the IMSI value stored in the USIM card. |
| - Paging record 2 | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to an unused SRNC identity which is different from the SRNC identity assigned. |
| - S-RNTI | Set to an arbitrary 20-bit string which is different from the S-RNTI assigned. |
| - CN originated page to connected mode UE | Not Present |
| - Paging record 3 | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to the previously assigned SRNC identity |
| - S-RNTI | Set to previously assigned S-RNTI |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE CONFIRM (Step 6)

Use the message sub-type in default message content defined in [9] (TS 34.108) Clause 9, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |
| RRC State Indicator | URA_PCH |
| UTRAN DRX Cycle length coefficient | 4 |

UTRAN MOBILITY INFORMATION CONFIRM (Step 7)

Only the message type is checked.

CELL UPDATE CONFIRM (Step 10)

Use the message sub-type in default message content defined in [9] (TS 34.108) Clause 9, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

#### 8.1.1.10.5 Test requirement

After steps 2 and 3 the UE shall not respond to the paging.

After steps 4 and 8 the UE shall enter the CELL FACH state, and transmit CELL UPDATE message to initiate the cell updating procedure with the cell update cause set to "paging response".

After steps 6 and 10 the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message.

### 8.1.1.11 Paging for Connection in idle mode (Shared Network Environment)

#### 8.1.1.11.1 Definition

This test is only valid for UEs supporting GSM-MAP CN signalling.

#### 8.1.1.11.2 Conformance requirement

Upon reception of the master information block, the UE shall:

1> if the IE "Multiple PLMN List" is not present in the Master Information Block:

2> consider the IE "PLMN identity" in the Master Information Block as the PLMN identity of the cell.

1> else:

2> consider the PLMN identities in the IE "Multiple PLMN List" as the PLMN identities of the cell;

2> when reading the "Multiple PLMN List", read all the PLMN identities in the list as follows:

3> if the IE "MIB PLMN Identity" is set to TRUE:

4> read the "PLMN identity" IE in the MIB and consider it as a part of the "Multiple PLMN List".

3> if the IE "MIB PLMN Identity" is set to FALSE:

4> not consider the "PLMN identity" IE in the MIB as a part of the "Multiple PLMN List";

4> not consider the IE "PLMN identity" in the MIB as a PLMN identity of the cell;

4> not forward the PLMN in the IE "PLMN identity" of the MIB to upper layers.

3> if the MCC is not present when reading a IE "PLMN identity with Optional MCC" in the IE "Multiple PLMN List":

4> set the MCC of this PLMN identity equal to the MCC of the closest preceding "PLMN identity with Optional MCC" in the "Multiple PLMN List" that includes an MCC;

4> or, if no such "PLMN identity with Optional MCC" exists, the UE shall set the MCC of this PLMN identity to the MCC of the "PLMN identity" IE in the Master Information Block.

…

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions. For an UE in idle mode, the paging occasions are specified in [25.304] and depend on the IE "CN domain specific DRX cycle length coefficient", as specified in subclause 8.6.3.1a. For a UE in CELL_PCH state or URA_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in idle mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a CN identity:

2> compare the IE "UE identity" with all of its allocated CN UE identities:

2> if one match is found:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "UE identity" and the IE "Paging cause" to the upper layers.

1> otherwise:

2> ignore that paging record.

In the UE, the initial direct transfer procedure shall be initiated, when the upper layers request establishment of a signalling connection. This request also includes a request for the transfer of a NAS message.

Upon initiation of the initial direct transfer procedure the UE shall:

1> set the variable ESTABLISHMENT_CAUSE to the cause for establishment indicated by upper layers.

Upon initiation of the initial direct transfer procedure when the UE is in idle mode, the UE shall:

1> perform an RRC connection establishment procedure, according to subclause 8.1.3;

NOTE: If an RRC connection establishment is ongoing, this procedure continues unchanged, i.e. it is not interrupted.

1> if the RRC connection establishment procedure was not successful:

2> if the establishment cause for the failed RRC connection establishment was set to "MBMS reception" and a different cause value is stored in the variable "ESTABLISHMENT_CAUSE":

3> UE-AS (RRC) initiates a new RRC connection establishment procedure, using the establishment cause as contained in the variable ESTABLISHMENT_CAUSE.

2> otherwise:

3> indicate failure to establish the signalling connection to upper layers and end the procedure.

1> when the RRC connection establishment procedure is completed successfully:

2> continue with the initial direct transfer procedure as below.

Upon initiation of the initial direct transfer procedure when the UE is in CELL_PCH or URA_PCH state, the UE shall:

1> perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";

1> when the cell update procedure completed successfully:

2> continue with the initial direct transfer procedure as below.

The UE shall, in the INITIAL DIRECT TRANSFER message:

1> set the IE "NAS message" as received from upper layers; and

1> set the IE "CN domain identity" as indicated by the upper layers; and

1> set the IE "Intra Domain NAS Node Selector" as follows:

2> derive the IE "Intra Domain NAS Node Selector" from TMSI/PMTSI, IMSI, or IMEI; and

2> provide the coding of the IE "Intra Domain NAS Node Selector" according to the following priorities:

1. derive the routing parameter for IDNNS from TMSI (CS domain) or PTMSI (PS domain) whenever a valid TMSI/PTMSI is available;

2. base the routing parameter for IDNNS on IMSI when no valid TMSI/PTMSI is available;

3. base the routing parameter for IDNNS on IMEI only if no (U)SIM is inserted in the UE.

1> if the UE, on the existing RRC connection, has received a dedicated RRC message containing the IE "Primary PLMN Identity in the IE "CN Information Info"

2> set the IE "PLMN identity" in the INITIAL DIRECT TRANSFER message to the latest PLMN information received via dedicated RRC signalling. If NAS has indicated the PLMN towards which a signalling connection is requested, and this PLMN is not in agreement with the latest PLMN information received via dedicated RRC signalling, then the initial direct transfer procedure shall be aborted, and NAS shall be informed.

1> if the UE, on the existing RRC connection, has not received a dedicated RRC message containing the IE "CN Information Info" , and if the IE "Multiple PLMN List" was broadcast in the cell where the current RRC connection was established:

2> set the IE "PLMN identity" in the INITIAL DIRECT TRANSFER message to the PLMN chosen by higher layers [5, 25] amongst the PLMNs in the IE "Multiple PLMN List" broadcast in the cell where the RRC connection was established.

1> if the IE "Activated service list" within variable MBMS_ACTIVATED_SERVICES includes one or more MBMS services with the IE "Service type" set to "Multicast" and;

1> if the IE "CN domain identity" as indicated by the upper layers is set to "CS domain" and;

1> if the variable ESTABLISHED_SIGNALLING_CONNECTIONS does not include the CN domain identity 'PS domain':

2> include the IE "MBMS joined information";

2> include the IE "P-TMSI" within the IE "MBMS joined information" if a valid PTMSI is available.

1> if the variable ESTABLISHMENT_CAUSE_ is initialised:

2> set the IE "Establishment cause" to the value of the variable ESTABLISHMENT_CAUSE;

2> clear the variable ESTABLISHMENT_CAUSE.

1> calculate the START according to subclause 8.5.9 for the CN domain as set in the IE "CN Domain Identity"; and

1> include the calculated START value for that CN domain in the IE "START".

The UE shall:

1> transmit the INITIAL DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB3;

1> when the INITIAL DIRECT TRANSFER message has been submitted to lower layers for transmission:

2> confirm the establishment of a signalling connection to upper layers; and

2> add the signalling connection with the identity indicated by the IE "CN domain identity" in the variable ESTABLISHED_SIGNALLING_CONNECTIONS.

1> when the successful delivery of the INITIAL DIRECT TRANSFER message has been confirmed by RLC:

2> the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.1.5, 8.1.2 and 8.1.8

### 8.1.1.11.3 Test purpose

1) For the CS domain

To confirm that the UE establishes an RRC connection after it receives a PAGING TYPE 1 message which includes IE "UE identity"(in IE "Paging Record") set to the IMSI of the UE, and responds with a correct INITIAL DIRECT TRANSFER message.

2) For the PS domain

To confirm that the UE establishes an RRC connection after it receives a PAGING TYPE 1 message which includes IE "UE identity"(in IE "Paging Record") set to the P-TMSI allocated by SS at initial attach and responds with a correct INITIAL DIRECT TRANSFER message.

For both CS and PS domain, it is verified that the UE is able to read and interpret the Multiple PLMN list broadcasted on the BCCH. It is also verified that the correct information is inserted into the IE "PLMN Identity" in the INITIAL DIRECT TRANSFER message.

#### 8.1.1.11.4 Method of test

##### Initial Condition

System Simulator: 1 cell

UE: MM-IDLE state and Updated update status with no TMSI (if CS supported)

GMM-Registered with a P-TMSI assigned (if PS supported)

the UE shall have an IMSI.

##### Test Procedure

SS transmits BCCH blocks containing SYSTEM INFORMATION (GSM-MAP). The SS transmits a PAGING TYPE 1 message, which includes a matched CN UE identity for the UE in the idle state. During transmission of PAGING TYPE 1 messages, SS selects the correct paging indicator on the PICH in order to allow the UE to respond to paging. Then the UE transmits an RRC CONNECTION REQUEST to the SS, the SS transmits an RRC CONNECTION SETUP to the UE. When the UE receives this message, the UE establishes an RRC connection and transmits an RRC CONNECTION SETUP COMPLETE message and an INITIAL DIRECT TRANSFER message on the uplink DCCH.

##### Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SYSTEM INFORMATION (GSM-MAP) | Transmit these messages on the BCCH according to reference system configuration (34.108 clause 6.1) with modified MIB according to below. |
| 2 | ← | | PAGING TYPE 1 | The SS transmits the message, which includes a matched identity. See default message contents in TS 34.108. |
| 3 | → | | RRC CONNECTION REQUEST | |
| 4 | ← | | RRC CONNECTION SETUP | SS assigns DPCH resources to allow UE to establish an RRC connection. |
| 5 | → | | RRC CONNECTION SETUP COMPLETE | |
| 6 | → | | INITIAL DIRECT TRANSFER | |

##### Specific Message Contents

Use the reference system configuration found in TS 34.108 clause 6.1, with the following modifications:

MASTER INFORMATION BLOCK (Step 1)

| | |
|---|---|
| - MIB value tag | Set to (Current MIB value tag + 1) |
| - Supported PLMN types | |
| - PLMN type | GSM-MAP |
| - PLMN identity | |
| - MCC digit | MCC1 |
| - MNC digit | MNC3 (Any valid MNC not equal to MNC1 or MNC2) |
| - Multiple PLMN List | |
| - MIB PLMN Identity | FALSE |
| - Multiple PLMNs (1) | |
| - MCC | Not Present |
| - MNC | MNC2 (Any valid MNC not equal to MNC0 or MNC1) |
| - Multiple PLMNs (2) | |
| - MCC | Not Present |
| - MNC | MNC1 |

PAGING TYPE 1 (Step 2)

Use the default message type found in TS 34.108, clause 9.1.

Note that Separate message types are defined in TS 34.108 for the cases of TM (Speech in CS) and for TM (Packet in PS).

RRC CONNECTION REQUEST (Step 3)

| **Information Element** | |
|---|---|
| Message Type | |
| Predefined configuration status information | FALSE |
| Initial UE identity | Same as the IMSI stored in the TEST USIM card, or the registered P-TMSI depending upon CN domain concerned. |
| Establishment cause | Check to see if it is set to the same value as "Paging Cause" IE in the PAGING TYPE 1 message transmitted on step 3. |
| Protocol error indicator | FALSE |
| **>**UE Specific Behaviour Information 1 idle | Not present |
| Measured results on RACH | Not checked |
| Access stratum release indicator | Not checked |

RRC CONNECTION SETUP (Step )

Use the default message found in TS 34.108, clause 9.1.1 (transition to Cell_DCH)

RRC CONNECTION SETUP COMPLETE (Step 5)

Use the default message found in TS 34.108, clause 9.1.1

INITIAL DIRECT TRANSFER (Step 6)

| Information Element | |
|---|---|
| Message Type | |
| Integrity check info | Not present |
| PLMN identity | |
| - MCC | MCC1 |
| - MNC | MNC1 |
| CN domain identity | CS domain or PS domain (as specified by the SS in the PAGING TYPE 1 message of Step 3) |
| Intra Domain NAS Node Selector | |
| - CHOICE *version* | R99 |
| - CHOICE *CN type* | GSM-MAP |
| - CHOICE Routing basis | IMSI (response to IMSI paging) in CS domain orLocal (P)-TMSI in PS Domain. |
| - Routing parameter | If the IE "CN domain identity" is equal to "CS domain", bit string (10) consisting of DecimalToBinary [(IMSI div 10) mod 1000]. The first/ leftmost bit of the bit string contains the most significant bit of the result.<br><br>If the IE "CN domain identity" is equal to "PS domain": The TMSI/ PTMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant. The "Routing parameter" is set to bits b14 through b23 of the TMSI/ PTMSI. The first/ leftmost/ most significant bit of the bit string contains bit b23 of the TMSI/ PTMSI. |
| - Extended parameter | Not checked |
| NAS message | Not checked |
| START | Not checked |
| Establishment cause | Not checked |
| Measured results on RACH | Not checked |
| MBMS joined information | Not checked |
| >P-TMSI | Not checked |

#### 8.1.1.11.5 Test requirement

After step 2 the UE shall transmit RRC CONNECTION REQUEST message on the uplink CCCH.

After step 4 the UE shall have an RRC connection based on dedicated physical channel resources and transmit an RRC CONNECTION SETUP COMPLETE message and INITIAL DIRECT TRANSFER message on the uplink DCCH. The INITIAL DIRECT TRANSFER message shall contain PLMN (MCC1, MNC1) in IE "PLMN Identity", and the UE shall remain registered on PLMN(MCC1, MNC1).

### 8.1.1.12 Paging for Connection in connected mode (CELL_PCH) without HS-SCCH

#### 8.1.1.12.1 Definition and applicability

All UEs which support FDD and HS-PDSCH in CELL_PCH and URA_PCH.

#### 8.1.1.12.2 Conformance requirement

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions. For an UE in idle mode, the paging occasions are specified in 3GPP TS 25.304 and depend on the IE "CN domain specific DRX cycle length coefficient", as specified in subclause 8.6.3.1a. For a UE in CELL_PCH state or URA_PCH state, the paging occasions depend also on the IE "UTRAN DRX cycle length coefficient" and the IE "RRC State Indicator", as specified in subclauses 8.6.3.2 and 8.6.3.3 respectively.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below:

…

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN single UE identity and if this U-RNTI is the same as the U-RNTI allocated to the UE stored in the UE variable U_RNTI:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> if the IE "Release indicator" in the IE "RRC connection release information" has the value "Release":

…

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> if the IE "Used paging identity" is a UTRAN group identity and there is a group identity match according to subclause 8.6.3.13:

…

1> otherwise:

2> ignore that paging record.

…

If the CELL UPDATE CONFIRM message:

- does not include the IE "RB information to release list", nor the IE "RB information to reconfigure list", nor the IE "RB information to be affected list"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI"; or
- includes the IE "Downlink counter synchronisation info" and the IE "New U-RNTI":

NOTE: In the case of a cell update procedure during an ongoing reconfiguration procedure moving the UE into CELL_PCH/URA_PCH the CELL UPDATE CONFIRM message should include the IE "New C-RNTI".

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

…

When the IE "HS-DSCH paging system information" is included in System Information Block type 5 or System Information Block type 5bis and the UE is in CELL_PCH or URA_PCH state, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> if variable H_RNTI and variable C_RNTI are set:

…

1> else:

2> if variable H_RNTI or variable C_RNTI are set:

3> clear the variable H_RNTI;

3> clear the variable C_RNTI;

3> clear any stored IE "HARQ Info";

3> reset the MAC-ehs entity [25.321].

2> perform the HS-DSCH reception procedure according to IE "HS-DSCH paging system information" as received in System Information Block type 5 or System Information Block type 5bis, receive the HS-PDSCH applying:

3> a scrambling code as received in the IE "DL Scrambling code";

3> a channelisation code selected according to 8.5.41 of 3GPP TS 25.331 in "Number of PCCH transmissions" consecutive TTIs;

3> the Transport block sizes indexed in the IE "Transport Block Size List" for demultiplexing of upper layer PDUs from transport blocks delivered from the physical layer on HS-DSCH, as described in 3GPP TS 25.214; and

3> configure the physical layer to use a virtual IR buffer size of at least 1608 bits for HS-DSCH transmissions.

Reference

3GPP TS 25.331 clauses 8.1.2, 8.3.1.7, 8.5.40.

8.1.1.12.3 Test purpose

To confirm that the UE enters the CELL_FACH state after it receives an HS-SCCH less PAGING TYPE 1 message on the HS-DSCH which indicates that the paging has originated from UTRAN. To verify that the UE performs cell update procedure after entering the CELL_FACH state.

8.1.1.12.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CELL_PCH state <FFS> as specified in clause 7.4 of TS 34.108, with a valid U-RNTI already assigned and no dedicated H-RNTI assigned by the SS.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH in CELL_PCH and URA_PCH

Test Procedure

The SS transmits SYSTEM INFORMATION BLOCK TYPE 5 including configuration for HS-DSCH reception in CELL_FACH state, and configuration for HS-DSCH reception in CELL_PCH and URA_PCH states.

During transmission of PAGING TYPE 1 messages, SS selects the correct paging indicator on the PICH in order to allow the UE to respond to paging.

The SS transmits an HS-SCCH less PAGING TYPE 1 message with an unmatched U-RNTI on the HS-DSCH. The UE does not change its state. Then the SS transmits an HS-SCCH less PAGING TYPE 1 message with a matched identifier but which originates from the CN instead of UTRAN, on the HS-DSCH. The UE shall not change state after receiving

this message. The SS transmits an HS-SCCH less PAGING TYPE 1 message on the HS-DSCH with a matched U-RNTI. Then the UE enters the CELL_FACH state and performs the cell updating procedure.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SYSTEM INFORMATION BLOCK TYPE 5 | Includes configuration for HS-DSCH reception in CELL_FACH, and configuration for HS-DSCH reception in CELL_PCH and URA_PCH states |
| 2 | ← | | PAGING TYPE 1 | The SS transmits an HS-SCCH less PAGING TYPE 1 message on the HS-DSCH including an unmatched U-RNTI. UE shall not respond to the paging. |
| 3 | ← | | PAGING TYPE 1 | The SS transmits an HS-SCCH less PAGING TYPE 1 message on the HS-DSCH including a matched identifier but with the used paging identity being a CN identity. UE shall not respond to the paging. |
| 4 | ← | | PAGING TYPE 1 | The SS transmits an HS-SCCH less PAGING TYPE 1 message on the HS-DSCH with used paging identity being a UTRAN identity and including the UE's assigned U-RNTI |
| 5 | → | | CELL UPDATE | The UE enters the CELL_FACH state. UE performs cell updating procedure. The CELL UPDATE message shall contain the value "Cell Update Cause" set to "paging response" and “HS-PDSCH in CELL_FACH” set to TRUE |
| 6 | ← | | CELL UPDATE CONFIRM | See message content. |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

SYSTEM INFORMATION TYPE 5

<FFS>

PAGING TYPE 1 (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to an arbitrary 16-bit string which is different from the SRNC identity assigned. |
| - S-RNTI | Set to an arbitrary 20-bit string which is different from the S-RNTI assigned. |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

PAGING TYPE 1 (Step 3)

Same as the PAGING TYPE 1 message as in step 3 of clause 8.1.1.1.4.

PAGING TYPE 1 (Step 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to the same SRNC identity as previously assigned. |
| - S-RNTI | Set to the same S-RNTI as previously assigned. |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Step 5)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | Check to see if set to 'paging response' |
| HS-PDSCH in CELL_FACH | Check to see if set to TRUE |

CELL UPDATE CONFIRM (Step 6)

Use the message sub-type in default message content defined in [9] (TS 34.108) Clause 9, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 7)

Only the message type is checked.

#### 8.1.1.12.5 Test requirement

After step 2 the UE shall not respond to the PAGING TYPE 1 message sent in step 2.

After step 3 the UE shall not respond to the PAGING TYPE 1 message sent in step 3.

After step 4 the UE shall enter the CELL FACH state and send a CELL UPDATE message with "Cell Update Cause" IE set to "paging response" and “HS-PDSCH in CELL_FACH” set to TRUE.

After step 6 the UE shall be in the CELL_FACH state and shall transmit UTRAN MOBILITY INFORMATION CONFIRM message.

## 8.1.2 RRC Connection Establishment

### 8.1.2.1 RRC Connection Establishment in CELL_DCH state: Success

#### 8.1.2.1.1 Definition

#### 8.1.2.1.2 Conformance requirement

The UE shall initiate the procedure when upper layers in the UE requests the establishment of a signalling connection and the UE is in idle mode (no RRC connection exists).

Upon initiation of the procedure, the UE shall:

…

1> set the contents of the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

1> submit the RRC CONNECTION REQUEST message for transmission on the uplink CCCH;

1> set counter V300 to 1; and

1> start timer T300 when the MAC layer indicates success or failure to transmit the message;

1> select a Secondary CCPCH according to TS 25.304;

1> start receiving all FACH transport channels mapped on the selected Secondary CCPCH.

….

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

1> set the IE "Establishment cause" to the value of the variable ESTABLISHMENT_CAUSE;

1> set the IE "Initial UE identity" to the value of the variable INITIAL_UE_IDENTITY;

…

The UE shall not include the IE "UE Specific Behaviour Information 1 idle".

….

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

If the values are different, the UE shall:

1> ignore the rest of the message.

If the values are identical, the UE shall:

1> stop timer T300, and act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following:

2> if the UE, according to TS 25.331 subclause 8.6.3.3, will be in the CELL_FACH state at the conclusion of this procedure:

…

1> if the UE, according to TS 25.331 subclause 8.6.3.3, will be in the CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronization procedure A as specified in TS 25.214;

2> enter UTRA RRC connected mode, in a state according to TS 25.331 subclause 8.6.3.3;

1> submit an RRC CONNECTION SETUP COMPLETE message to the lower layers on the uplink DCCH after successful state transition per TS 25.331 subclause 8.6.3.3, with the contents set as specified below:

2> set the IE "RRC transaction identifier" to:

3> the value of "RRC transaction identifier" in the entry for the RRC CONNECTION SETUP message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry.

…

2> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and then

2> include this in IE "UE radio access capability" and IE "UE radio access capability extension", provided this IE is included in variable UE_CAPABILITY_REQUESTED;

2> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and then

2> include this in IE "UE system specific capability".

When the RRC CONNECTION SETUP COMPLETE message has been submitted to lower layers for transmission the UE shall:

1> consider the procedure to be successful;

And the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.3.2, 8.1.3.3 and 8.1.3.6

#### 8.1.2.1.3 Test purpose

1. To confirm that the UE leaves the Idle Mode and correctly establishes signalling radio bearers on the DCCH.
2. To confirm that the UE indicates the requested UE radio access capabilities and UE system specific capabilities (may be used by UTRAN e.g. to configure inter RAT- measurements).
3. To confirm that the UE does not include the IE "UE Specific Behaviour Information 1 idle" in the RRC CONNECTION REQUEST message.

#### 8.1.2.1.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH by attempting to make an outgoing call. After SS receives this message, it assigns the necessary radio resources and U-RNTI to be used by the UE. SS then transmits an RRC CONNECTION SETUP message containing an IE "Initial UE Identity" that does not match the IE "Initial UE Identity" in the most recent RRC CONNECTION REQUEST message sent by the UE. UE receives the RRC CONNECTION SETUP message before timer T300 expires but discards it due to a IE "Initial UE Identity" mismatch. UE shall wait for timer T300 to time out before re-transmitting a RRC CONNECTION REQUEST message to the SS. SS again assigns the necessary radio resources and U-RNTI. SS then transmits a RRC CONNECTION SETUP message containing an IE "Initial UE Identity" that matches the IE "Initial UE Identity" in the most recent RRC CONNECTION REQUEST sent by the UE. SS then waits for the UE to transmit an RRC CONNECTION SETUP COMPLETE message on the DCCH. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | RRC CONNECTION REQUEST | By outgoing call operation. See specific message contents. |
| 2 | ← | | RRC CONNECTION SETUP | This message is not addressed to the UE. See specific message contents. |
| 3 | → | | RRC CONNECTION REQUEST | UE shall re-transmit the request message again after a time out of T300 from step 1. |
| 3a | | | | SS checks IE "UE Specific Behaviour Information 1 idle" is not included in received RRC CONNECTION REQUEST message. |
| 4 | ← | | RRC CONNECTION SETUP | See specific message contents. |
| 5 | | | | The UE configures the layer 2 and layer 1. |
| 6 | → | | RRC CONNECTION SETUP COMPLETE | See specific message contents. |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

System Information Block type 11 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Intra-frequency reporting quantity for RACH Reporting | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE *mode* | |
| - FDD | |
| - Reporting quantity | CPICH Ec/N0 |
| - Maximum number of reported cells on RACH | current cell |

System Information Block type 11 (TDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Intra-frequency reporting quantity for RACH Reporting | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE *mode* | TDD |
| - Reporting quantity list | |
| - Reporting quantity | P-CCPCH RSCP |
| - Maximum number of reported cells on RACH | current cell |

RRC CONNECTION REQUEST (Step 1) (FDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UE Specific Behaviour Information 1 idle | Check if this IE is absent. |
| Measured results on RACH | Check to see if set in accordance with the IE "Intra-frequency reporting quantity for RACH Reporting" included in SYSTEM INFORMATION BLOCK Type 11 |
| - Measurement result for current cell | |
| - CHOICE mode | |
| - FDD | |
| - CHOICE measurement quantity | |
| - CPICH Ec/N0 | The actual reported value is not checked |

RRC CONNECTION REQUEST (Step 1) (TDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | Check to see if set in accordance with the IE "Intra-frequency reporting quantity for RACH Reporting" included in SYSTEM INFORMATION BLOCK Type 11 |
| - Measurement result for current cell | |
| - CHOICE mode | TDD |
| - CHOICE measurement quantity | |
| - P-CCPCH RSCP | The actual reported value is not checked |

RRC CONNECTION SETUP (Step 2)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Initial UE Identity | Set to unmatched identity (incorrect IMSI) |

RRC CONNECTION SETUP (Step 4)

Use the default message with the same message type and covering the scenario used in this test (Transition to CELL_DCH) specified in clause 9 of TS 34.108.

RRC CONNECTION SETUP COMPLETE (Step 6)

Use the default message with the same message type specified in clause 9 of TS 34.108 with the following exception.

| Information Element | Value/remark |
|---|---|
| UE Radio Access Capability | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |
| UE radio access capability extension | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |
| UE system specific Capability | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |

#### 8.1.2.1.5 Test requirement

After step 2 the UE shall re-transmit the RRC CONNECTION REQUEST message again in order to continue the RRC connection establishment procedure.

After step 3 the SS shall check IE "UE Specific Behaviour Information 1 idle" isn't included in received RRC CONNECTION REQUEST message.

After step 6 the UE shall establish an RRC connection and continue the procedure of the outgoing call on the DCCH.

## 8.1.2.1a RRC Connection Establishment in CELL_DCH state: Success (TDD Only)

### 8.1.2.1a.1 Definition

The features and operation of Multi-frequency and UpPCH shifting have been introduced to core specification (TS25.331 clause 8.6.6.1, 8.6.6.26, and 8.6.6.43) for LCR TDD.

### 8.1.2.1a.2 Conformance requirement

The UE shall initiate the procedure when upper layers in the UE requests the establishment of a signalling connection and the UE is in idle mode (no RRC connection exists).

Upon initiation of the procedure, the UE shall:

…

1> set the contents of the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

1> submit the RRC CONNECTION REQUEST message for transmission on the uplink CCCH;

1> set counter V300 to 1; and

1> start timer T300 when the MAC layer indicates success or failure to transmit the message;

1> select a Secondary CCPCH according to TS 25.304;

1> start receiving all FACH transport channels mapped on the selected Secondary CCPCH.

….

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

1> set the IE "Establishment cause" to the value of the variable ESTABLISHMENT_CAUSE;

1> set the IE "Initial UE identity" to the value of the variable INITIAL_UE_IDENTITY;

…

The UE shall not include the IE "UE Specific Behaviour Information 1 idle".

….

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

If the values are different, the UE shall:

1> ignore the rest of the message.

If the values are identical, the UE shall:

1> stop timer T300, and act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following:

2> if the UE, according to TS 25.331 subclause 8.6.3.3, will be in the CELL_FACH state at the conclusion of this procedure:

…

1> if the UE, according to TS 25.331 subclause 8.6.3.3, will be in the CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronization procedure A as specified in TS 25.214;

2> enter UTRA RRC connected mode, in a state according to TS 25.331 subclause 8.6.3.3;

1> submit an RRC CONNECTION SETUP COMPLETE message to the lower layers on the uplink DCCH after successful state transition per TS 25.331 subclause 8.6.3.3, with the contents set as specified below:

2> set the IE "RRC transaction identifier" to:

3> the value of "RRC transaction identifier" in the entry for the RRC CONNECTION SETUP message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry.

…

2> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and then

2> include this in IE "UE radio access capability" and IE "UE radio access capability extension", provided this IE is included in variable UE_CAPABILITY_REQUESTED;

2> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and then

2> include this in IE "UE system specific capability".

When the RRC CONNECTION SETUP COMPLETE message has been submitted to lower layers for transmission the UE shall:

1> consider the procedure to be successful;

And the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.3.2, 8.1.3.3, 8.1.3.6, 8.6.6.1and 8.6.6.43.

### 8.1.2.1a.3 Test purpose

1. To confirm that the UE leaves the Idle Mode and correctly establishes signalling radio bearers on the DCCH of secondary frequency according to the downlink message sent by the network.
2. To confirm that the UE indicates the requested UE radio access capabilities and UE system specific capabilities (may be used by UTRAN e.g. to configure inter RAT- measurements).
3. To confirm that the UE does not include the IE "UE Specific Behaviour Information 1 idle" in the RRC CONNECTION REQUEST message.

### 8.1.2.1a.4 Method of test

Initial Condition

System Simulator: 1 cell, 3 frequency (one is primary frequency, others are secondary frequency).

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

Power on the UE, UE shall initialize the access procedure after receiving all system messages (CS: Location Update procedure or PS: GPRS ATTACH procedure). UE shall send SYNC UL in the position according to the indication of Uppch in SIB3, SS return corresponding FPACH message after receiving SYNC UL to indicate UE to send physical layer parameters for RACH. Then, SS send CON_SETUP_REJ message after receive CON_SETUP_REQ from UE to notify UE to end this access procedure.

The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH by attempting to make an outgoing call. After SS receives this message, it assigns the necessary radio resources and U-RNTI to be used by the UE. SS then transmits an RRC CONNECTION SETUP message containing an IE "Initial UE Identity" that does not

match the IE "Initial UE Identity" in the most recent RRC CONNECTION REQUEST message sent by the UE. UE receives the RRC CONNECTION SETUP message before timer T300 expires but discards it due to a IE "Initial UE Identity" mismatch. UE shall wait for timer T300 to time out before re-transmitting a RRC CONNECTION REQUEST message to the SS. SS again assigns the necessary radio resources and U-RNTI. SS then transmits a RRC CONNECTION SETUP message containing an IE "Initial UE Identity" that matches the IE "Initial UE Identity" in the most recent RRC CONNECTION REQUEST sent by the UE. SS then waits for the UE to transmit an RRC CONNECTION SETUP COMPLETE message on the DCCH. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | Sync UL code | UE shall send this message according to the indication of mapping-LCR in SIB3, otherwise SS will ignore this message. |
| 2 | ← | | FPACH message | SS indicate UE sent Layer1 messages needed by RACH. |
| 13 | → | | RRC CONNECTION REQUEST | By outgoing call operation. See specific message contents. |
| 24 | ← | | RRC CONNECTION SETUP | This message is not addressed to the UE. See specific message contents. |
| 35 | → | | RRC CONNECTION REQUEST | UE shall re-transmit the request message again after a time out of T300 from step 13. |
| 3a | | | | SS checks IE "UE Specific Behaviour Information 1 idle" is not included in received RRC CONNECTION REQUEST message. |
| 46 | ← | | RRC CONNECTION SETUP | See specific message contents. |
| 57 | | | | The UE configures the layer 2 and layer 1. |
| 68 | → | | RRC CONNECTION SETUP COMPLETE | See specific message contents. |
| 79 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

System Information Block type 11 3 (FDD1.28Mbps TDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| -v4b0NonCriticalExtensions- Intra-frequency reporting quantity for RACH Reporting | |
| -sysInfoType3-v4b0ext - SFN-SFN observed time difference reporting indicator | No report |
| -mapping-LCR - CHOICE *mode* | 22 |
| - FDD | |
| - Reporting quantity | CPICH Ec/N0 |
| - Maximum number of reported cells on RACH | current cell |

System Information Block type 11 (TDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Intra-frequency reporting quantity for RACH Reporting | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE *mode* | TDD |
| - Reporting quantity list | |
| - Reporting quantity | P-CCPCH RSCP |
| - Maximum number of reported cells on RACH | current cell |

RRC CONNECTION REQUEST (Step 1) (FDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UE Specific Behaviour Information 1 idle | Check if this IE is absent. |
| Measured results on RACH | Check to see if set in accordance with the IE "Intra-frequency reporting quantity for RACH Reporting" included in SYSTEM INFORMATION BLOCK Type 11 |
| - Measurement result for current cell | |
| - CHOICE mode | |
| - FDD | |
| - CHOICE measurement quantity | |
| - CPICH Ec/N0 | The actual reported value is not checked |

RRC CONNECTION REQUEST (Step 13) (TDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | Check to see if set in accordance with the IE "Intra-frequency reporting quantity for RACH Reporting" included in SYSTEM INFORMATION BLOCK Type 11 |
| - Measurement result for current cell | |
| - CHOICE mode | TDD |
| - CHOICE measurement quantity | |
| - P-CCPCH RSCP | The actual reported value is not checked |

RRC CONNECTION SETUP (Step 24)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Initial UE Identity | Set to unmatched identity (incorrect IMSI) |
| Uplink DPCH info | |
| -Uplink Timing Advance Control | |
| -Frequency info | |
| -UpPCH position info | 22 |

RRC CONNECTION SETUP (Step 6)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| RRCConnectionSetup-r4-TDD128-add-ext-IEs | |
| frequencyInfo | Secondary frequency |
| Uplink DPCH info | |
| -Uplink Timing Advance Control | |
| -UpPCH position info | 22 |

RRC CONNECTION SETUP (Step 4)

Use the default message with the same message type and covering the scenario used in this test (Transition to CELL_DCH) specified in clause 9 of TS 34.108.

RRC CONNECTION SETUP COMPLETE (Step 68)

Use the default message with the same message type specified in clause 9 of TS 34.108 with the following exception.

| Information Element | Value/remark |
|---|---|
| UE Radio Access Capability | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |
| UE radio access capability extension | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |
| UE system specific Capability | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |

#### 8.1.2.1a.5 Test requirement

After step 2 4 the UE shall re-transmit the RRC CONNECTION REQUEST message again in order to continue the RRC connection establishment procedure.

After step 3 the SS shall check IE "UE Specific Behaviour Information 1 idle" isn't included in received RRC CONNECTION REQUEST message.

After step 6 the UE shall establish an RRC connection and continue the procedure of the outgoing call on the DCCH of secondary frequency.

### 8.1.2.2 RRC Connection Establishment: Success after T300 timeout

#### 8.1.2.2.1 Definition

#### 8.1.2.2.2 Conformance requirement

If the UE has not yet received an RRC CONNECTION SETUP message with the value of the IE "Initial UE identity" equal to the value of the variable INITIAL_UE_IDENTITY; and

if expiry of timer T300 occurs:

the UE shall:

1> check the value of V300; and

2> if V300 is equal to or smaller than N300:

3> set the IEs in the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

3> submit a new RRC CONNECTION REQUEST message to lower layers for transmission on the uplink CCCH;

3> increment counter V300;

3> restart timer T300 when the MAC layer indicates success or failure to transmit the message.

2> if V300 is greater than N300:

…

Reference

3GPP TS 25.331 clause 8.1.3.5.

#### 8.1.2.2.3 Test purpose

To confirm that the UE retries to establish the RRC connection until V300 is greater than N300 after the expiry of timer T300 when the SS transmits no response for an RRC CONNECTION REQUEST message.

8.1.2.2.4 Method of test

Initial Condition

System Simulator: 1 cell. SCCPCH configuration as specified in 6.1.0b of TS 34.108.

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

NOTE: This test requires that N300 is bigger than 0, which is the case (see default contents of SIB 1, specified in TS 34.108). Expiry of timer T300 is verified only for N300 values exceeding 1.

Test Procedure

Before the test starts, SYSTEM INFORMATION BLOCK TYPE 1, SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis. and SYSTEM INFORMATION BLOCK TYPE 7 message are modified and this modification is notified to the UE. An internal counter K in SS is initialized to a value = 0. Following this, the UE shall transmit an RRC CONNECTION REQUEST message to the SS on the uplink CCCH by use of selected PRACH from the available PRACH No.1 and PRACH No.2, after the operator attempts to make an outgoing call. SS ignores this message, increments K every time such a message is received and waits for T300 timer to expire. This cycle is repeated until K reaches N300. When K is equal to N300, the SS transmits an RRC CONNECTION SETUP message containing an IE “RRC state indicator” set to ‘CELL_PCH’ as specified in step 6 to the UE. The UE shall send another RRC CONNECTION REQUEST message on the uplink CCCH. SS replies with a valid RRC CONNECTION SETUP message. The UE shall then acknowledge the establishment of RRC connection by sending the RRC CONNECTION SETUP COMPLETE message on uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE 1 | SS transmits the paging message which comprises IE "BCCH Modification Information", with the "Value Tag" different from the "MIB Value Tag" of the current Master Information Block. See specific message contents. |
| 1a | | | Void | |
| 1b | ← | | MASTER INFORMATION BLOCK<br>SYSTEM INFORMATION BLOCK TYPE 1<br>SYSTEM INFORMATION BLOCK TYPE 5 /<br>SYSTEM INFORMATION BLOCK TYPE 5bis.<br>SYSTEM INFORMATION BLOCK TYPE 7,<br>SCHEDULING BLOCK 1 | SS starts to transmit the MIB with the "MIB Value Tag" IE different from the original setting.<br>At the same time, SS starts to transmit the affected SIB TYPE 1 , SIB TYPE 5 / SIB TYPE 5bis and SIB 7messages. See specific message contents. |
| 1c | | | | SS waits 5s (to ensure that the UE has time to read the new system information) |
| 2 | | | | SS initializes counter K to 0. Operator is asked to make an outgoing call and SS starts to wait for RRC CONNECTION REQUEST on uplink CCCH. |
| 3 | → | | RRC CONNECTION REQUEST | See the clause 9 in TS 34.108 on default message content |
| 4 | | | | SS increments K. |
| 5 | | | | SS checks to see if K is equal to N300. If so, goes to step 6. Else, continues to execute step 3. |
| 6 | ← | | RRC CONNECTION SETUP | IE “RRC state indicator” is set to ‘CELL_PCH’. |
| 7 | → | | RRC CONNECTION REQUEST | See specific message contents. |
| 8 | ← | | RRC CONNECTION SETUP | This is a legal message. See the clause 9 in TS 34.108 on default message content for RRC. |
| 9 | | | | The UE configures the layer 1 and layer 2. |
| 10 | → | | RRC CONNECTION SETUP COMPLETE | See clause 9 in TS 34.108 on default message content |

Specific Message Contents

PAGING TYPE 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not present |
| BCCH modification info | |
| - MIB Value Tag | Set to (Current MIB value tag + 1) |
| - BCCH Modification time | Not Present |

MASTER INFORMATION BLOCK (Step 1b)

| Information Element | Value/remark |
|---|---|
| MIB Value tag | As in PAGING TYPE 1 in step 1 |
| SIB 1 Cell Value tag | Set to (Current SIB1 value tag + 1) |
| SIB 5 Cell Value tag | Set to (Current SIB5 value tag + 1) |
| SB 1 Cell Value tag | Set to (Current SB1 value tag + 1) |

SCHEDULING BLOCK 1(Step 1b)

| Information Element | Value/remark |
|---|---|
| SIB 6 Cell Value tag | Set to (Current SIB 6 value tag + 1) |

SYSTEM INFORMATION TYPE 1 (Step 1b)

Use the default parameter values for the system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - UE Timers and constants in idle mode | |
| -T300 | 2000 milliseconds |
| -N300 | 3 |
| -T312 | 10 seconds |
| - N312 | 1 |

SYSTEM INFORMATION TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis (Step 1b) - (FDD)

Use the default parameter values for the system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - SIB6 indicator | FALSE |
| - PICH Power offset | -5 dB |
| - CHOICE Mode | FDD |
| - AICH Power offset | -5 dB |
| - Primary CCPCH info | Not present |
| - PRACH system information list | |
| - PRACH system information | 2PRACHs |
| - PRACH info (PRACH No.1) | |
| - CHOICE mode | FDD |
| - Available Signature | '0000 0000 1111 1111'B |
| - Available SF | 64 |
| - Preamble scrambling code number | 0 |
| - Puncturing Limit | 1.00 |
| - Available Sub Channel number | '1111 1111 1111'B |
| - Transport Channel Identity | 15 |
| - RACH TFS | |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC size | 168 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 1 |
| - CHOICE Mode | FDD |
| - CHOICE Logical Channel List | Configured |
| - RLC size | 360 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 1 |
| - CHOICE Mode | FDD |
| - CHOICE Logical Channel List | Configured |
| - Semi-static Transport Format information | |
| - Transmission time interval | 20 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 150 |
| - CRC size | 16 |
| - RACH TFCS | |
| - Normal | |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS addition information | |
| - CHOICE CTFC Size | 2 bit |
| - CTFC information | 0 |
| - Power offset information | |
| - CHOICE Gain Factors | Computed Gain Factor |
| - Reference TFC ID | 0 |
| - CHOICE Mode | FDD |
| - Power offset Pp-m | 0dB |
| - CTFC information | 1 |
| - Power offset information | |
| - CHOICE Gain Factors | Signalled Gain Factor |
| - Gain factor ßc | 11 |
| - Gain factor ßd | 15 |
| - Reference TFC ID | 0 |
| - CHOICE Mode | FDD |
| - Power offset Pp-m | 0dB |
| - PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#1) |
| - Available signature End Index | 7 (ASC#1) |
| - Assigned Sub-Channel Number | '1111'B |

| Information Element | Value/remark |
|---|---|
| | The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#3) |
| - Available signature End Index | 7 (ASC#3) |
| - Assigned Sub-Channel Number | '1111'B |
| | The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#5) |
| - Available signature End Index | 7 (ASC#5) |
| - Assigned Sub-Channel Number | '1111'B |
| | The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#7) |
| - Available signature End Index | 7 (ASC#7) |
| - Assigned Sub-Channel Number | '1111'B |
| | The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - Persistence scaling factor | |
| - Persistence scaling factor | 0.9 (for ASC#2) |
| - Persistence scaling factor | 0.9 (for ASC#3) |
| - Persistence scaling factor | 0.9 (for ASC#4) |
| - Persistence scaling factor | 0.9 (for ASC#5) |
| - Persistence scaling factor | 0.9 (for ASC#6) |
| - Persistence scaling factor | 0.9 (for ASC#7) |
| - AC-to-ASC mapping table | |
| - AC-to-ASC mapping | 6 (AC0-9) |
| - AC-to-ASC mapping | 5 (AC10) |
| - AC-to-ASC mapping | 4 (AC11) |
| - AC-to-ASC mapping | 3 (AC12) |
| - AC-to-ASC mapping | 2 (AC13) |
| - AC-to-ASC mapping | 1 (AC14) |
| - AC-to-ASC mapping | 0 (AC15) |
| CHOICE mode | FDD |
| - Primary CPICH DL TX power | 31 |
| - Constant value | –10 |
| - PRACH power offset | |
| - Power Ramp Step | 3dB |
| - Preamble Retrans Max | 4 |
| - RACH transmission parameters | |
| - Mmax | 2 |
| - NB01min | 3 slot |
| - NB01max | 10 slot |
| - AICH info | |
| - Channelisation code | 3 |
| - STTD indicator | FALSE |
| - AICH transmission timing | 0 |
| - PRACH info (PRACH No.2) | |
| - CHOICE mode | FDD |
| - Available Signature | '0000 0000 1111 1111'B |
| - Available SF | 64 |
| - Preamble scrambling code number | 1 |
| - Puncturing Limit | 1.00 |
| - Available Sub Channel number | '1111 1111 1111'B |
| - Transport Channel Identity | 31 |
| - RACH TFS | |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC size | 168 |

| Information Element | Value/remark |
|---|---|
| - Number of TB and TTI List | |
| - Number of Transport blocks | 1 |
| - CHOICE Mode | FDD |
| - CHOICE Logical Channel List | Configured |
| - RLC size | 360 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 1 |
| - CHOICE Mode | FDD |
| - CHOICE Logical Channel List | Configured |
| - Semi-static Transport Format information | |
| - Transmission time interval | 20 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 150 |
| - CRC size | 16 |
| - RACH TFCS | |
| - Normal | |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS addition information | |
| - CHOICE CTFC Size | 2 bit |
| - CTFC information | 0 |
| - Power offset information | |
| - CHOICE Gain Factors | Computed Gain Factor |
| - Reference TFC ID | 0 |
| - CHOICE Mode | FDD |
| - Power offset Pp-m | 0 dB |
| - CTFC information | 1 |
| - Reference TFC ID | 0 |
| - Power offset information | |
| - CHOICE Gain Factors | Signalled Gain Factor |
| - Gain factor ßc | 11 |
| - Gain factor ßd | 15 |
| - Reference TFC ID | 0 |
| - CHOICE Mode | FDD |
| - Power offset Pp-m | 0dB |
| - PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#1) |
| - Available signature End Index | 7 (ASC#1) |
| - Assigned Sub-Channel Number | '1111'B<br>The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#3) |
| - Available signature End Index | 7 (ASC#3) |
| - Assigned Sub-Channel Number | '1111'B<br>The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#5) |
| - Available signature End Index | 7 (ASC#5) |
| - Assigned Sub-Channel Number | '1111'B<br>The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#7) |
| - Available signature End Index | 7 (ASC#7) |

| Information Element | Value/remark |
|---|---|
| - Assigned Sub-Channel Number | '1111'B<br>The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - Persistence scaling factor | |
| - Persistence scaling factor | 0.9 (for ASC#2) |
| - Persistence scaling factor | 0.9 (for ASC#3) |
| - Persistence scaling factor | 0.9 (for ASC#4) |
| - Persistence scaling factor | 0.9 (for ASC#5) |
| - Persistence scaling factor | 0.9 (for ASC#6) |
| - Persistence scaling factor | 0.9 (for ASC#7) |
| - AC-to-ASC mapping table | |
| - AC-to-ASC mapping | 6 (AC0-9) |
| - AC-to-ASC mapping | 5 (AC10) |
| - AC-to-ASC mapping | 4 (AC11) |
| - AC-to-ASC mapping | 3 (AC12) |
| - AC-to-ASC mapping | 2 (AC13) |
| - AC-to-ASC mapping | 1 (AC14) |
| - AC-to-ASC mapping | 0 (AC15) |
| CHOICE mode | FDD |
| - Primary CPICH DL TX power | 31 |
| - Constant value | –10 |
| - PRACH power offset | |
| - Power Ramp Step | 3dB |
| - Preamble Retrans Max | 4 |
| - RACH transmission parameters | |
| - Mmax | 2 |
| - NB01min | 3 slot |
| - NB01max | 10 slot |
| - AICH info | |
| - Channelisation code | 13 |
| - STTD indicator | FALSE |
| - AICH transmission timing | 0 |

SYSTEM INFORMATION TYPE 5 (Step 1b) – 3.84 Mcps TDD

Use the default parameter values for the system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - PRACH system information | 2PRACHs |
| - PRACH info (PRACH No.1) | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Timeslot Number | 14 |
| - PRACH Channelisation Code | |
| - CHOICE SF | 8 |
| - Channelisation Code List | |
| - Channelisation Code | 8/1 |
| - Channelisation Code | 8/2 |
| - Channelisation Code | 8/3 |
| - Channelisation Code | 8/4 |
| - PRACH Midamble | Direct |
| -PNBSCH allocation | Not Present |
| - Transport Channel Identity | 15 |
| - RACH TFS | |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC size | 168 |
| - Number of TB and TTI List | |
| - Transport Time Interval | Not Present |
| - Number of Transport Blocks | 1 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 150 |
| - CRC size | 16 |
| - RACH TFCS | Not Present |
| - PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#0) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#1) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#2) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#3) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#4) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#5) |
| - CHOICE subchannel size | Size1 |

| Information Element | Value/remark |
|---|---|
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#6) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#7) |
| - CHOICE subchannel size | Size1 |
| - Persistence scaling factor | |
| - Persistence scaling factor | 0.9 (for ASC#2) |
| - Persistence scaling factor | 0.9 (for ASC#3) |
| - Persistence scaling factor | 0.9 (for ASC#4) |
| - Persistence scaling factor | 0.9 (for ASC#5) |
| - Persistence scaling factor | 0.9 (for ASC#6) |
| - Persistence scaling factor | 0.9 (for ASC#7) |
| - AC-to-ASC mapping table | |
| - AC-to-ASC mapping | 6 (AC0-9) |
| - AC-to-ASC mapping | 5 (AC10) |
| - AC-to-ASC mapping | 4 (AC11) |
| - AC-to-ASC mapping | 3 (AC12) |
| - AC-to-ASC mapping | 2 (AC13) |
| - AC-to-ASC mapping | 1 (AC14) |
| - AC-to-ASC mapping | 0 (AC15) |
| - CHOICE mode | TDD |
| - PRACH info (PRACH No.2) | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Timeslot Number | 14 |
| - PRACH Channelisation Code | |
| - CHOICE SF | 8 |
| - Channelisation Code List | |
| - Channelisation Code | 8/5 where i denotes an unassigned code |
| - Channelisation Code | 8/6 where i denotes an unassigned code |
| - Channelisation Code | 8/7 where i denotes an unassigned code |
| - Channelisation Code | 8/8 where i denotes an unassigned code |
| - PRACH Midamble | Direct |
| -PNBSCH allocation | Not Present |
| - RACH TFS | |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC size | 168 |
| - Number of TB and TTI List | |
| - Transport Time Interval | Not Present |
| - Number of Transport Blocks | 1 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 150 |
| - CRC size | 16 |
| - RACH TFCS | Not Present |
| - PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#0) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#1) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |

| Information Element | Value/remark |
|---|---|
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#2) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#3) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#4) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#5) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#6) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#7) |
| - CHOICE subchannel size | Size1 |
| - Persistence scaling factor | |
| - Persistence scaling factor | 0.9 (for ASC#2) |
| - Persistence scaling factor | 0.9 (for ASC#3) |
| - Persistence scaling factor | 0.9 (for ASC#4) |
| - Persistence scaling factor | 0.9 (for ASC#5) |
| - Persistence scaling factor | 0.9 (for ASC#6) |
| - Persistence scaling factor | 0.9 (for ASC#7) |
| - AC-to-ASC mapping table | |
| - AC-to-ASC mapping | 6 (AC0-9) |
| - AC-to-ASC mapping | 5 (AC10) |
| - AC-to-ASC mapping | 4 (AC11) |
| - AC-to-ASC mapping | 3 (AC12) |
| - AC-to-ASC mapping | 2 (AC13) |
| - AC-to-ASC mapping | 1 (AC14) |
| - AC-to-ASC mapping | 0 (AC15) |
| - CHOICE mode | TDD |

SYSTEM INFORMATION TYPE 5 (Step 1b) – 1.28 Mcps TDD

Use the default parameter values for the system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - PRACH system information | 2PRACHs |
| - PRACH info (PRACH No.1) | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - SYNC_UL info | |
| - SYNC_UL codes bitmap | '11110000'B |
| - $PRX_{UpPCHdes}$ | 10 |
| - Power Ramping Step | 3 |
| - Max SYNC_UL Transmissions | 8 |
| - Mmax | 32 |
| - PRACH Definition | |
| - Timeslot Number | |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Timeslot number | 1 |
| - PRACH Channelisation Code | |
| - Channelisation Code List | |
| - Channelisation Code | 8/1 |
| - Midamble shift and burst type | |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Midamble Allocation Mode | Default |
| - Midamble Configuration | 8 |
| - Midamble Shift | Not Present |
| - FPACH info | |
| - Timeslot number | 6 |
| - Channelisation code | 16/16 |
| - Midamble Shift and burst type | |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Midamble Allocation Mode | Default |
| - Midamble Configuration | 16 |
| - Midamble Shift | Not Present |
| - WT | 4 |
| - PNBSCH allocation | Not Present |
| - Transport Channel Identity | 15 |
| - RACH TFS | |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC size | 168 |
| - Number of TB and TTI List | |
| - Transport Time Interval | Not Present |
| - Number of Transport Blocks | 1 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | ½ |
| - Rate matching attribute | 150 |
| - CRC size | 16 |
| - RACH TFCS | Not Present |
| - PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#0) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#1) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |

| Information Element | Value/remark |
|---|---|
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#2) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#3) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#4) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#5) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#6) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '11110000'B (ASC#7) |
| - CHOICE subchannel size | Size1 |
| - Persistence scaling factor | |
| - Persistence scaling factor | 0.9 (for ASC#2) |
| - Persistence scaling factor | 0.9 (for ASC#3) |
| - Persistence scaling factor | 0.9 (for ASC#4) |
| - Persistence scaling factor | 0.9 (for ASC#5) |
| - Persistence scaling factor | 0.9 (for ASC#6) |
| - Persistence scaling factor | 0.9 (for ASC#7) |
| - AC-to-ASC mapping table | |
| - AC-to-ASC mapping | 6 (AC0-9) |
| - AC-to-ASC mapping | 5 (AC10) |
| - AC-to-ASC mapping | 4 (AC11) |
| - AC-to-ASC mapping | 3 (AC12) |
| - AC-to-ASC mapping | 2 (AC13) |
| - AC-to-ASC mapping | 1 (AC14) |
| - AC-to-ASC mapping | 0 (AC15) |
| - CHOICE mode | TDD |
| - PRACH info (PRACH No.2) | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - SYNC_UL info | |
| - SYNC_UL codes bitmap | '11110000'B |
| - $PRX_{UpPCHdes}$ | 10 |
| - Power Ramping Step | 1 |
| - Max SYNC_UL Transmissions | 8 |
| - Mmax | 32 |
| - PRACH Definition | |
| - Timeslot Number | |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Timeslot number | 1 |
| - PRACH Channelisation Code | |
| - Channelisation Code List | |
| - Channelisation Code | 8/2 |
| - Midamble shift and burst type | |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Midamble Allocation Mode | Default |
| - Midamble Configuration | 8 |
| - Midamble Shift | Not Present |
| - FPACH info | |
| - Timeslot number | An available down-link timeslot |

| Information Element | Value/remark |
|---|---|
| - Channelisation code | 16/15 |
| - Midamble Shift and burst type | |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Midamble Allocation Mode | Default |
| - Midamble Configuration | 16 |
| - Midamble Shift | Not Present |
| - WT | 4 |
| - PNBSCH allocation | Not Present |
| - RACH TFS | |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC size | 168 |
| - Number of TB and TTI List | |
| - Transport Time Interval | Not Present |
| - Number of Transport Blocks | 1 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | ½ |
| - Rate matching attribute | 150 |
| - CRC size | 16 |
| - RACH TFCS | Not Present |
| - PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#0) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#1) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#2) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#3) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#4) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#5) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#6) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Available SYNC_UL codes indices | '00001111'B (ASC#7) |
| - CHOICE subchannel size | Size1 |
| - Persistence scaling factor | |
| - Persistence scaling factor | 0.9 (for ASC#2) |

| Information Element | Value/remark |
|---|---|
| - Persistence scaling factor | 0.9 (for ASC#3) |
| - Persistence scaling factor | 0.9 (for ASC#4) |
| - Persistence scaling factor | 0.9 (for ASC#5) |
| - Persistence scaling factor | 0.9 (for ASC#6) |
| - Persistence scaling factor | 0.9 (for ASC#7) |
| - AC-to-ASC mapping table | |
| - AC-to-ASC mapping | 6 (AC0-9) |
| - AC-to-ASC mapping | 5 (AC10) |
| - AC-to-ASC mapping | 4 (AC11) |
| - AC-to-ASC mapping | 3 (AC12) |
| - AC-to-ASC mapping | 2 (AC13) |
| - AC-to-ASC mapping | 1 (AC14) |
| - AC-to-ASC mapping | 0 (AC15) |
| - CHOICE mode | TDD |

SYSTEM INFORMATION TYPE 5 (Step 1b) – 3.84 Mcps TDD

Use the default parameter values for the system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - PRACH system information | 2PRACHs |
| - PRACH info (PRACH No.1) | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Timeslot Number | 14 |
| - PRACH Channelisation Code list VHCR | |
| - CHOICE SF | 16 |
| - Channelisation Code List | |
| - Channelisation Code | 16/1 |
| - Channelisation Code | 16/2 |
| - Channelisation Code | 16/3 |
| - Channelisation Code | 16/4 |
| - PRACH Midamble | Direct |
| -PNBSCH allocation | Not Present |
| - Transport Channel Identity | 15 |
| - RACH TFS | |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC size | 168 |
| - Number of TB and TTI List | |
| - Transport Time Interval | Not Present |
| - Number of Transport Blocks | 1 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 150 |
| - CRC size | 16 |
| - RACH TFCS | Not Present |
| - PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '1111000000000000'B (ASC#0) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '1111000000000000'B (ASC#1) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '1111000000000000'B (ASC#2) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '1111000000000000'B (ASC#3) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '1111000000000000'B (ASC#4) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '1111000000000000'B (ASC#5) |
| - CHOICE subchannel size | Size1 |

| Information Element | Value/remark |
|---|---|
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '1111000000000000'B (ASC#6) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '1111000000000000'B (ASC#7) |
| - CHOICE subchannel size | Size1 |
| - Persistence scaling factor | |
| - Persistence scaling factor | 0.9 (for ASC#2) |
| - Persistence scaling factor | 0.9 (for ASC#3) |
| - Persistence scaling factor | 0.9 (for ASC#4) |
| - Persistence scaling factor | 0.9 (for ASC#5) |
| - Persistence scaling factor | 0.9 (for ASC#6) |
| - Persistence scaling factor | 0.9 (for ASC#7) |
| - AC-to-ASC mapping table | |
| - AC-to-ASC mapping | 6 (AC0-9) |
| - AC-to-ASC mapping | 5 (AC10) |
| - AC-to-ASC mapping | 4 (AC11) |
| - AC-to-ASC mapping | 3 (AC12) |
| - AC-to-ASC mapping | 2 (AC13) |
| - AC-to-ASC mapping | 1 (AC14) |
| - AC-to-ASC mapping | 0 (AC15) |
| - CHOICE mode | TDD |
| - PRACH info (PRACH No.2) | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Timeslot Number | 14 |
| - PRACH Channelisation Code list VHCR | |
| - CHOICE SF | 16 |
| - Channelisation Code List | |
| - Channelisation Code | 16/5 where i denotes an unassigned code |
| - Channelisation Code | 16/6 where i denotes an unassigned code |
| - Channelisation Code | 16/7 where i denotes an unassigned code |
| - Channelisation Code | 16/8 where i denotes an unassigned code |
| - PRACH Midamble | Direct |
| -PNBSCH allocation | Not Present |
| - RACH TFS | |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC size | 168 |
| - Number of TB and TTI List | |
| - Transport Time Interval | Not Present |
| - Number of Transport Blocks | 1 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 150 |
| - CRC size | 16 |
| - RACH TFCS | Not Present |
| - PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '0000111100000000'B (ASC#0) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '0000111100000000'B (ASC#1) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |

| Information Element | Value/remark |
|---|---|
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '0000111100000000'B (ASC#2) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '0000111100000000'B (ASC#3) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '0000111100000000'B (ASC#4) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '0000111100000000'B (ASC#5) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '0000111100000000'B (ASC#6) |
| - CHOICE subchannel size | Size1 |
| - ASC Setting | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Available SYNC_UL codes indices | '0000111100000000'B (ASC#7) |
| - CHOICE subchannel size | Size1 |
| - Persistence scaling factor | |
| - Persistence scaling factor | 0.9 (for ASC#2) |
| - Persistence scaling factor | 0.9 (for ASC#3) |
| - Persistence scaling factor | 0.9 (for ASC#4) |
| - Persistence scaling factor | 0.9 (for ASC#5) |
| - Persistence scaling factor | 0.9 (for ASC#6) |
| - Persistence scaling factor | 0.9 (for ASC#7) |
| - AC-to-ASC mapping table | |
| - AC-to-ASC mapping | 6 (AC0-9) |
| - AC-to-ASC mapping | 5 (AC10) |
| - AC-to-ASC mapping | 4 (AC11) |
| - AC-to-ASC mapping | 3 (AC12) |
| - AC-to-ASC mapping | 2 (AC13) |
| - AC-to-ASC mapping | 1 (AC14) |
| - AC-to-ASC mapping | 0 (AC15) |
| - CHOICE mode | TDD |

Contents of System Information Block type 7 (FDD) – (Step 1b)

Use the default parameter values for the system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - PRACHs listed in system information block type5 / system information block type 5bis | |
| - Dynamic persistence level | (2,2) |
| - PRACHs listed in system information block type6 | Not present |

RRC CONNECTION SETUP (Step 6)

SS sends a message containing an invalid rrc State Indicator

| Information Element | Value/remark |
|---|---|
| RRC state indicator | CELL_PCH |

RRC CONNECTION REQUEST (Step 7)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Protocol Error Indicator | Check to see if set to TRUE |

#### 8.1.2.2.5 Test requirement

After step 2 the UE shall select either PRACH No.1 or PRACH No.2 and transmit an RRC CONNECTION REQUEST message.

After step 6 the UE shall re-send another RRC CONNECTION REQUEST message.

After step 9 the UE shall transmit an RRC CONNECTION SETUP COMPLETE message and establish an RRC connection on the DCCH logical channel.

### 8.1.2.3 RRC Connection Establishment: Failure (V300 is greater than N300)

#### 8.1.2.3.1 Definition

#### 8.1.2.3.2 Conformance requirement

The UE shall initiate the procedure when upper layers in the UE requests the establishment of a signalling connection and the UE is in idle mode (no RRC connection exists).

Upon initiation of the procedure, the UE shall:

1> set the IE "Initial UE identity" in the variable INITIAL_UE_IDENTITY according to TS 25.331 subclause 8.5.1;

1> submit the RRC CONNECTION REQUEST message for transmission on the uplink CCCH;

1> set counter V300 to 1; and

1> start timer T300 when the MAC layer indicates success or failure to transmit the message;

1> select a Secondary CCPCH according to TS 25.304;

1> start receiving all FACH transport channels mapped on the selected Secondary CCPCH.

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

1> set the IE "Initial UE identity" to the value of the variable INITIAL_UE_IDENTITY;

…

1> if the UE has not yet received an RRC CONNECTION SETUP message with the value of the IE "Initial UE identity" equal to the value of the variable INITIAL_UE_IDENTITY; and

1> if cell re-selection or expiry of timer T300 occurs:

the UE shall:

1> check the value of V300; and

2> if V300 is equal to or smaller than N300:

…

3> set the IEs in the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

…

3> submit a new RRC CONNECTION REQUEST message to lower layers for transmission on the uplink CCCH;

3> increment counter V300;

3> restart timer T300 when the MAC layer indicates success or failure to transmit the message.

…

2> if V300 is greater than N300:

3> enter idle mode.

3> consider the procedure to be unsuccessful;

3> Other actions the UE shall perform when entering idle mode from connected mode are specified in TS 25.331 subclause 8.5.2;

3> the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.3.

#### 8.1.2.3.3 Test purpose

To confirm that the UE stops retrying to establish the RRC connection if V300 is greater than N300 and goes back to idle mode.

#### 8.1.2.3.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE. A Class A UE in manual mode will execute this test case on the CS domain.

Specific Message Contents

SYSTEM INFORMATION TYPE 1

Use the default parameter values for the system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions.

| | |
|---|---|
| - UE Timers and constants in idle mode | |
| -T300 | 2000 milliseconds |

Test Procedure

Before the test starts, SS initializes an internal counter K to 0. The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH by an outgoing call operation. SS shall not respond to any RRC CONNECTION REQUEST message, instead the counter K is increased by 1 every time such a message is received. To arrive at the verdict, the SS checks that a total of (N300+1) such messages are received. SS calls for generic procedure C.1 to check that UE is in Idle Mode state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS initializes counter K to 0 and then prompts the operator to make an outgoing call. |
| 2 | → | | RRC CONNECTION REQUEST | |
| 3 | | | | SS increments K by 1. |
| 4 | | | | If K is greater than N300, goes to step 5 else proceed to step 2. |
| 5 | | | | SS monitor the uplink CCCH for a time period enough for UE to go back to idle state. SS waits for 5s. |
| 6 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in Idle Mode state, the test passes, otherwise it fails. |

Specific Message Contents

None

#### 8.1.2.3.5 Test requirement

After step 5, counter K shall be equal to (N300+1) and there shall be no uplink transmission in the monitoring period specified in step 5.

### 8.1.2.4 RRC Connection Establishment: Reject ("wait time" is not equal to 0)

#### 8.1.2.4.1 Definition

#### 8.1.2.4.2 Conformance requirement

When the UE receives an RRC CONNECTION REJECT message on the downlink CCCH, it shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION REJECT message with the value of the variable INITIAL_UE_IDENTITY:

If the values are different, the UE shall ignore the rest of the message;

If the values are identical, the UE shall stop timer T300 and:

1> if the IE "wait time" <> '0'; and

1> if the IE "frequency info" is present and:

2> if V300 is equal to or smaller than N300:

3> initiate cell selection on the designated UTRA carrier;

3> after having selected and camped on a cell:

4> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

4> set the contents of the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

4> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

4> transmit an RRC CONNECTION REQUEST message on the uplink CCCH;

4> reset counter V300;

4> start timer T300 when the MAC layer indicates success or failure in transmitting the message;

4> disable cell reselection to original carrier until the time stated in the IE "wait time" has elapsed;

3> if a cell selection on the designated carrier fails:

4> wait for the time stated in the IE "wait time";

4> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

4> set the IEs in the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

4> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

4> then submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH of the original serving cell;

4> increment counter V300;

4> restart timer T300 when the MAC layer indicates success or failure to transmit the message;

2> if V300 is greater than N300:

3> enter idle mode;

3> perform the actions specified in TS 25.331 subclause 8.5.2 when entering idle mode from connected mode;

3> consider the RRC establishment procedure to be unsuccessful;

3> the procedure ends.

…

1> If the IEs "frequency info" not present……:

2> if V300 is equal to or smaller than N300:

3> wait at least the time stated in the IE "wait time";

3> set the IEs in the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.2;

3> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

3> submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;

3> increment counter V300;

3> restart timer T300 when the MAC layer indicates success or failure to transmit the message;

2> if V300 is greater than N300:

3> enter idle mode;

3> perform the actions specified in TS 25.331 subclause 8.5.2 when entering idle mode from connected mode;

3> consider the RRC establishment procedure to be unsuccessful;

3> the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.3.9.

8.1.2.4.3 Test purpose

To confirm that the UE retries to establish the RRC connection after the "wait time" elapses, if the UE receives an RRC CONNECTION REJECT message which includes the IE "wait time" not set to 0.

To confirm that the UE performs a cell reselection when receiving an RRC CONNECTION REJECT message, containing relevant frequency information of the target cell to be re-selected.

8.1.2.4.4 Method of test

Initial Condition

System Simulator: 2 cells – both cell 1 and cell 4 are active and suitable for camping, but cell 1 is transmitted using a larger power. Cell 1 and cell 4 are being transmitted from different 2 UARFCNs. The transmission power of cell 4 is 12 dB smaller than cell 1.

**Table 8.1.2.4**

| Parameter | Unit | Cell 1 | Cell 4 |
|---|---|---|---|
| UTRA RF Channel Number | | Mid Range Test Frequency | High Range Test Frequency |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | -72 |
| P-CCPCH (TDD) | dBm | -60 | -72 |

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH by an outgoing call operation in cell 1. SS rejects the first request by transmitting an RRC CONNECTION REJECT message which indicates a non-zero wait time. In this message, frequency information for cell 4 is available. SS then waits for RRC CONNECTION REQUEST message on the uplink CCCH of cell 4. SS will also monitor the uplink of cell 1 simultaneously to ensure that all transmission activities from cell 1 have ceased. When the UE has successfully camp onto cell 4, it shall send an RRC CONNECTION REQUEST with the same establishment cause as its previous attempt in cell 1. SS responds with an RRC CONNECTION REJECT message, indicating a non-zero "wait time" and omitting the IE "Redirection Info". The UE shall observe the wait time period indicated. After the wait time has elapsed, the UE shall re-transmit RRC CONNECTION REQUEST again. Finally, SS transmits an RRC CONNECTION SETUP message to establish an RRC connection with the UE, and the UE replies with an RRC CONNECTION SETUP COMPLETE message and enters CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | RRC CONNECTION REQUEST | SS prompts the operator to make an outgoing call in cell 1. |
| 2 | ← | | RRC CONNECTION REJECT | This message shall includes the IE "wait time" set to 5 seconds and IE "frequency info" set to the UARFCN of cell 4.<br>Note: this wait time would apply after failure of the inter frequency cell re- selection, which is not verified in this test case |
| 3 | | | | SS waits for a period of time sufficient for UE to reselect to cell 4. At the same time, it monitors the uplink of cell 1 to make sure that all transmissions have ceased. |
| 4 | → | | RRC CONNECTION REQUEST | UE shall attempt to re-start an RRC connection establishment procedure in cell 4. The establishment cause shall remain unchanged. |
| 5 | ← | | RRC CONNECTION REJECT | This message shall include the IE "wait time" set to 5 seconds, but with IE "Redirection Info" absent. |
| 6 | → | | RRC CONNECTION REQUEST | SS waits until the duration specified in IE "wait time" has elapsed and then listens to the uplink CCCH for a second RRC CONNECTION REQUEST message. |
| 7 | ← | | RRC CONNECTION SETUP | SS sends the message to UE to setup an RRC connection with the UE. |
| 8 | | | | The UE shall configure the layer 2 and layer 1 in order to access the uplink and downlink DCCH assigned. |
| 9 | → | | RRC CONNECTION SETUP COMPLETE | |

Specific Message Contents

RRC CONNECTION REQUEST (Step 1, step 4 and step 6)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Initial UE Identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Must be "Originating Call" |

RRC CONNECTION REJECT (Step 2) - FDD

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Wait time | 5 seconds |
| Redirection Info | |
| - Frequency Info | |
| - CHOICE mode | FDD |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | Set to the UARFCN for downlink carrier of cell 4 |

RRC CONNECTION REJECT (Step 2) – TDD

| Information Element | Value/remark |
|---|---|
| Wait time | 5 seconds |
| Redirection Info | |
| Frequency Info | |
| CHOICE Mode | TDD |
| UARFCN (Nt) | Set to a different UARFCN from the carrier of cell 1 |

RRC CONNECTION REJECT (Step 5)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Wait time | 5 seconds |

#### 8.1.2.4.5 Test requirement

After step 3 the UE shall have successfully re-selected to cell 4. UE shall trigger the start of RRC connection establishment by transmitting RRC CONNECTION REQUEST. The establishment cause shall be originating call.

After step 5 the UE shall observe the period specified in IE "wait time" of the RRC CONNECTION REJECT message and not transmit an RRC CONNECTION REQUEST message in this period.

After step 7 the UE shall transmit an RRC CONNECTION SETUP COMPLETE message to SS on uplink DCCH and then establish an RRC connection.

### 8.1.2.5 RRC Connection Establishment: Reject ("wait time" is not equal to 0 and V300 is greater than N300)

#### 8.1.2.5.1 Definition

#### 8.1.2.5.2 Conformance requirement

When the UE receives an RRC CONNECTION REJECT message on the downlink CCCH, it shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION REJECT message with the value of the variable INITIAL_UE_IDENTITY:

If the values are different, the UE shall ignore the rest of the message;

If the values are identical, the UE shall stop timer T300 and:

1> if the IE "wait time" <> '0'; and

1> if the IE "frequency info" is present and:

2> if V300 is equal to or smaller than N300:

3> initiate cell selection on the designated UTRA carrier;

3> after having selected and camped on a cell:

4> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

4> set the contents of the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

4> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

4> transmit an RRC CONNECTION REQUEST message on the uplink CCCH;

4> reset counter V300;

4> start timer T300 when the MAC layer indicates success or failure in transmitting the message;

4> disable cell reselection to original carrier until the time stated in the IE "wait time" has elapsed;

3> if a cell selection on the designated carrier fails:

4> wait for the time stated in the IE "wait time";

4> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

4> set the IEs in the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

4> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

4> then submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH of the original serving cell;

4> increment counter V300;

4> restart timer T300 when the MAC layer indicates success or failure to transmit the message;

2> if V300 is greater than N300:

3> enter idle mode;

3> perform the actions specified in TS 25.331 subclause 8.5.2 when entering idle mode from connected mode;

3> consider the RRC establishment procedure to be unsuccessful;

3> the procedure ends.

…

1> If the IEs "frequency info" not present……:

2> if V300 is equal to or smaller than N300:

3> wait at least the time stated in the IE "wait time";

3> set the IEs in the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.2;

3> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

3> submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;

3> increment counter V300;

3> restart timer T300 when the MAC layer indicates success or failure to transmit the message;

2> if V300 is greater than N300:

3> enter idle mode;

3> perform the actions specified in TS 25.331 subclause 8.5.2 when entering idle mode from connected mode;

3> consider the RRC establishment procedure to be unsuccessful;

3> the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.3.9.

### 8.1.2.5.3 Test purpose

To confirm that the UE retries to establish the RRC connection after the "wait time" elapses if the UE receives an RRC CONNECTION REJECT message which specifies a non-zero IE "wait time".

To confirm that the UE stops retrying to establish the RRC connection if V300 is greater than N300 and goes back to idle mode.

### 8.1.2.5.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE

Test Procedure

Before the test starts, SS initializes an internal counter K to 0. The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH, triggered by an outgoing data call operation. SS rejects all requests by transmitting an RRC CONNECTION REJECT message which indicates a non-zero wait time and the counter K is increased by 1 every time such a message is received. To arrive at the verdict, the SS checks that a total of (N300+1) such messages are received and the UE enters idle state. SS calls for generic procedure C.1 to check that UE is in Idle Mode state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS initializes counter K to 0 and then prompts the operator to make an outgoing data call. |
| 2 | → | | RRC CONNECTION REQUEST | Shall be sent on CCCH and contain the correct establishment cause. |
| 3 | ← | | RRC CONNECTION REJECT | This message includes the IE "wait time" set to 15 seconds. |
| 4 | | | | SS increments K by 1. |
| 5 | | | | If K is greater than N300, goes to step 6. Else SS waits for 15 sec before proceeding to step 2. |
| 6 | | | | SS monitor the uplink CCCH for a time period enough for UE to goes back to idle state. SS waits for 5s. |
| 7 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in Idle Mode state, the test passes, otherwise it fails. |

Specific Message Contents

RRC CONNECTION REQUEST (Step 2)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Initial UE Identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Must be "Originating Call" |

RRC CONNECTION REJECT (Step 3)

Use the same message type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Wait time | 15 seconds |

#### 8.1.2.5.5 Test requirement

After step 6, counter K shall be equals to (N300+1) and there shall be no uplink transmission in the monitoring period specified in step 6.

### 8.1.2.6 RRC Connection Establishment: Reject ("wait time" is set to 0)

#### 8.1.2.6.1 Definition

#### 8.1.2.6.2 Conformance requirement

When the UE receives an RRC CONNECTION REJECT message on the downlink CCCH, it shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION REJECT message with the value of the variable INITIAL_UE_IDENTITY:

If the values are different, the UE shall ignore the rest of the message;

If the UE has not yet received an RRC CONNECTION SETUP message with the value of the IE "Initial UE identity" equal to the value of the variable INITIAL_UE_IDENTITY; and

if expiry of timer T300 occurs:

the UE shall:

1> check the value of V300; and

2> if V300 is equal to or smaller than N300:

3> set the IEs in the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

3> submit a new RRC CONNECTION REQUEST message to lower layers for transmission on the uplink CCCH;

3> increment counter V300;

3> restart timer T300 when the MAC layer indicates success or failure to transmit the message.

2> if V300 is greater than N300:

…

Reference

3GPP TS 25.331 clause 8.1.3.9.

8.1.2.6.3 Test purpose

To confirm that the UE goes back to idle mode, if the SS transmits an RRC CONNECTION REJECT message which includes IE "wait time" set to 0. To confirm that the UE ignores an RRC CONNECT REJECT message not addressed to it. To confirm that the UE is capable of handling an erroneous RRC CONNECTION REJECT message correctly.

8.1.2.6.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH by making an outgoing call. After the SS receives this message, it transmits an RRC CONNECTION REJECT message which is not addressed to the UE. The UE shall disregard this message and proceed to re-transmit RRC CONNECTION REQUEST message upon T300 timer expiry. SS answers the second RRC CONNECTION REQUEST message by transmitting an invalid RRC CONNECTION REJECT message. The UE shall continue to send the third RRC CONNECTION REQUEST message upon expiry of T300 timer. Next, the SS sends a legal RRC CONNECTION REJECT message which includes IE "wait time" which is set to '0'. To confirm that the UE goes back to idle mode immediately after receiving the reject message, SS shall monitor the uplink CCCH for the next 60 seconds and verify that there is no further transmission in the uplink direction.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | RRC CONNECTION REQUEST | Test operator is prompted to make an out-going call, |
| 2 | ← | | RRC CONNECTION REJECT | IE "Initial UE identity" contains an identity different from any of the UE identities available. |
| 3 | → | | RRC CONNECTION REQUEST | UE shall send this message after T300 expires. |
| 4 | ← | | RRC CONNECTION REJECT | |
| 5 | → | | RRC CONNECTION REQUEST | UE shall send this message after T300 expires. |
| 6 | ← | | RRC CONNECTION REJECT | IE "wait time" is set to 0. |
| 7 | | | | The UE goes back to idle mode. |

Specific Message Contents

RRC CONNECTION REQUEST (Step 1, 3 and 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Initial UE Identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Checked to see if set to one of the supported originating call types |
| Protocol Error Indicator | Checked to see if set to "FALSE" |
| Measured Results on RACH | Checked to see if it is absent |

RRC CONNECTION REJECT (Step 2)

Use the same message type found inclause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Initial UE Identity | Set to the same type as in RRC CONNECTION REQUEST message (step 1) but with a different value. |

RRC CONNECTION REJECT (Step 4)

| Information Element | Value/remark |
|---|---|
| All IEs | Not Present |

RRC CONNECTION REJECT (Step 6)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Initial UE Identity | Same as the type and value defined in RRC CONNECTION REQUEST message (step 5) |
| Reject Cause | Congestion |
| Wait time | 0 second |

#### 8.1.2.6.5 Test requirement

After step 2 the UE shall transmit an RRC CONNECTION REQUEST message on uplink CCCH upon expiry of T300 timer.

After step 4 the UE shall re-transmit an RRC CONNECTION REQUEST message on the uplink CCCH upon expiry of T300 timer.

After step 6 the UE shall stop sending an RRC CONNECTION REQUEST message, go back to idle mode immediately and not transmit in the uplink direction again.

### 8.1.2.7 RRC Connection Establishment in CELL_FACH state: Success

#### 8.1.2.7.1 Definition

#### 8.1.2.7.2 Conformance requirement

The UE shall initiate the procedure when upper layers in the UE requests the establishment of a signalling connection and the UE is in idle mode (no RRC connection exists).

Upon initiation of the procedure, the UE shall:

…

1> set the contents of the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

1> submit the RRC CONNECTION REQUEST message for transmission on the uplink CCCH;

1> set counter V300 to 1; and

1> start timer T300 when the MAC layer indicates success or failure to transmit the message;

1> select a Secondary CCPCH according to TS 25.304;

1> start receiving all FACH transport channels mapped on the selected Secondary CCPCH.

….

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

1> set the IE "Establishment cause" to the value of the variable ESTABLISHMENT_CAUSE;

1> set the IE "Initial UE identity" to the value of the variable INITIAL_UE_IDENTITY;

…

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

If the values are different, the UE shall:

1> ignore the rest of the message.

If the values are identical, the UE shall:

1> stop timer T300, and act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following:

2> if the UE, according to TS 25.331 subclause 8.6.3.3, will be in the CELL_FACH state at the conclusion of this procedure:

3> if the IE "Frequency info" is included:

4> select a suitable UTRA cell according to TS 25.304 on that frequency;

3> enter UTRA RRC connected mode;

3> select PRACH according to TS 25.331 subclause 8.5.17;

3> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

3> ignore the IE "UTRAN DRX cycle length coefficient" and stop using DRX.

1> if the UE, according to subclause 8.6.3.3, will be in the CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronization procedure as specified in TS 25.214 (FDD) or TS 25.224 (TDD);

2> enter UTRA RRC connected mode, in a state according to TS 25.331 subclause 8.6.3.3;

1> submit an RRC CONNECTION SETUP COMPLETE message to the lower layers on the uplink DCCH after successful state transition per TS 25.331 subclause 8.6.3.3, with the contents set as specified below:

2> set the IE "RRC transaction identifier" to:

3> the value of "RRC transaction identifier" in the entry for the RRC CONNECTION SETUP message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry.

….

2> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and then

2> include this in IE "UE radio access capability" and IE "UE radio access capability extension", provided this IE is included in variable UE_CAPABILITY_REQUESTED;

2> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and then

2> include this in IE "UE system specific capability".

When the RRC CONNECTION SETUP COMPLETE message has been submitted to lower layers for transmission the UE shall:

1> if the UE has entered CELL_FACH state:

2> start timer T305 using its initial value if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in system information block type 1.

….

1> consider the procedure to be successful;

And the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.3.2, 8.1.3.3 and 8.1.3.6.

### 8.1.2.7.3 Test Purpose

1. To confirm that the UE is able to enter CELL_FACH state and setup signalling radio bearers using common physical channels.
2. To confirm that the UE indicates the requested UE radio access capabilities (used by UTRAN to decide which RAB to establish) and UE system specific capabilities (may be used by UTRAN to configure inter RAT-measurements).

### 8.1.2.7.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH by attempting to make an outgoing call. After the SS receives this message, it assigns the necessary radio resources and U-RNTI to be used by the UE, and then transmits an RRC CONNECTION SETUP message to the UE within timer T300. SS then waits for the UE to transmit an RRC CONNECTION SETUP COMPLETE message on the DCCH. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | RRC CONNECTION REQUEST | Test operator is requested to make an outgoing call. The UE shall transmit this message, indicating the correct establishment cause. See specific message contents. |
| 2 | ← | | RRC CONNECTION SETUP | See specific message contents. |
| 3 | | | | The UE shall configure the layer 2 and layer 1. |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | UE shall send this message on the DCCH, carried by the assigned PRACH resources. See specific message contents. FDD or TDD |
| 5 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Content

RRC CONNECTION REQUEST

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Originating Conversational Call or Originating Interactive Call or Originating Background Call or Originating Streaming Call |

RRC CONNECTION SETUP (FDD)

For this message, the contents of the message to be used are basically identical to the message sub-type entitled "RRC CONNECTION SETUP message (Transition to CELL_FACH)" found in TS 34.108, clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Capability update requirement | |
| UE radio access FDD capability update requirement | TRUE |
| UE radio access TDD capability update requirement | FALSE |
| System specific capability update requirement list | gsm |

RRC CONNECTION SETUP (3.84 Mcps TDD)

For this message, the contents of the message to be used are basically identical to the message sub-type entitled "RRC CONNECTION SETUP message (Transition to CELL_FACH)" found in TS 34.108, clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Capability update requirement | |
| UE radio access FDD capability update requirement | FALSE |
| UE radio access TDD capability update requirement | TRUE |
| System specific capability update requirement list | gsm |

RRC CONNECTION SETUP (1.28 Mcps TDD)

For this message, the contents of the message to be used are basically identical to the message sub-type entitled "RRC CONNECTION SETUP message (Transition to CELL_FACH)" found in TS 34.108, clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Capability update requirement | |
| UE radio access FDD capability update requirement | FALSE |
| UE radio access3.84 Mcps TDD capability update requirement | FALSE |
| UE radio access 1.28 Mcps TDD capability update requirement | TRUE |
| System specific capability update requirement list | gsm |

RRC CONNECTION SETUP (7.68 Mcps TDD)

For this message, the contents of the message to be used are basically identical to the message sub-type entitled "RRC CONNECTION SETUP message (Transition to CELL_FACH)" found in TS 34.108, clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Capability update requirement | |
| UE radio access FDD capability update requirement | FALSE |
| UE radio access 3.84 Mcps TDD capability update requirement | FALSE |
| UE radio access 7.68 Mcps TDD capability update requirement | TRUE |
| UE radio access 1.28 Mcps TDD capability update requirement | FALSE |
| System specific capability update requirement list | gsm |

RRC CONNECTION SETUP COMPLETE

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| UE Radio Access Capability | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |
| UE radio access capability extension | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |
| UE system specific Capability | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |

#### 8.1.2.7.5 Test requirements

After step 3 the UE shall establish the RRC connection, and transmit RRC CONNECTION SETUP COMPLETE message on the DCCH using PRACH physical resource specified in system information block messages.

### 8.1.2.8 Void

### 8.1.2.9 RRC Connection Establishment: Success after Physical channel failure and Failure after Invalid configuration

#### 8.1.2.9.1 Definition

#### 8.1.2.9.2 Conformance requirement

If the UE failed to establish, per TS 25.331 subclause 8.5.4, the physical channel(s) indicated in the RRC CONNECTION SETUP message.

After having received an RRC CONNECTION SETUP message with the value of the IE "Initial UE identity" equal to the value of the variable INITIAL_UE_IDENTITY.

Before the RRC CONNECTION SETUP COMPLETE message is delivered to lower layers for transmission,

the UE shall:

1> clear the entry for the RRC CONNECTION SETUP message in the table "Accepted transactions" in the variable TRANSACTIONS;

1> check the value of V300, and:

2> if V300 is equal to or smaller than N300:

3> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

3> set the IEs in the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

3> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

3> submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;

3> increment counter V300; and

3> restart timer T300 when the MAC layer indicates success or failure in transmitting the message.

2> if V300 is greater than N300:

…

If the UE receives an RRC CONNECTION SETUP message which contains an IE "Initial UE identity" with a value which is identical to the value of the variable INITIAL_UE_IDENTITY; and

the variable INVALID_CONFIGURATION becomes set to TRUE due to the received RRC CONNECTION SETUP message:

the UE shall:

1> clear the entry for the RRC CONNECTION SETUP message in the table "Accepted transactions" in the variable TRANSACTIONS and proceed as below;

1> if V300 is equal to or smaller than N300:

2> set the variable PROTOCOL_ERROR_INDICATOR to TRUE;

2> set the IEs in the RRC CONNECTION REQUEST message according to TS 25.331 subclause 8.1.3.3;

2> perform the mapping of the Access Class to an Access Service Class as specified in TS 25.331 subclause 8.5.13; and

2> apply the given Access Service Class when accessing the RACH;

2> submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;

2> increment counter V300; and

2> restart timer T300 when the MAC layer indicates success or failure in transmitting the message.

1> if V300 is greater than N300:

…

Reference

3GPP TS 25.331 clause 8.1.3.

### 8.1.2.9.3 Test purpose

1. To confirm that the UE retries to establish the RRC connection until V300 is greater than N300 when a physical channel failure occurs because SS does not configure the physical channel that is specified in the transmitted RRC CONNECTION SETUP message.

2. To confirm that the UE retries to establish the RRC connection until V300 is greater than N300 when the transmitted RRC CONNECTION SETUP message causes invalid configuration in the UE.

### 8.1.2.9.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE. A Class A UE in manual mode will execute this test case on the CS domain.

Test Procedure

Before the test starts,SYSTEM INFORMATION BLOCK TYPE 1 is modified and this modification is notified to the UE. An internal counter K in SS is initialised to a value = 0. Following this, the UE shall transmit an RRC CONNECTION REQUEST message to the SS on the uplink CCCH, after the operator attempts to make an outgoing call. SS increments K every time such a message is received. Then, SS shall send a RRC CONNECTION SETUP message that contains an invalid configuration. UE shall then send RRC CONNECTION REQUEST message to SS again. This cycle is repeated until K reaches N300+1. When K is equal to N300+1, the SS again transmits an RRC CONNECTION SETUP message including an invalid configuration. Upon receiving this message the UE shall not send another RRC CONNECTION REQUEST message.

Next the SS re-initialises the internal counter K to value = 0, after which the operator attempts to make another outgoing call. Following this, the UE shall transmit an RRC CONNECTION REQUEST message to the SS on the uplink CCCH. SS increments K every time such a message is received. SS transmits an RRC CONNECTION SETUP message to make the UE configure the physical channel in order to communicate on the DCCH but SS does not configure the physical channel. Then the UE detects the physical channel failure and transmits an RRC CONNECTION REQUEST message. This cycle is repeated until K reaches N300+1. When K is equal to N300+1, the SS transmits the RRC CONNECTION SETUP message and configures the physical channel. The UE shall detect "in-sync" from physical

layer and then acknowledge the establishment of RRC connection by sending the RRC CONNECTION SETUP COMPLETE message on uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | | ← | PAGING TYPE 1 | SS transmits the paging message which comprises IE "BCCH Modification Information", with the "Value Tag" different from the "MIB Value Tag" of the current Master Information Block. See specific message contents. |
| | | | | |
| 0a | | ← | MASTER INFORMATION BLOCK<br>SYSTEM INFORMATION BLOCK TYPE 1 | SS starts to transmit the MIB with the "MIB Value Tag" IE different from the original setting.<br>At the same time, SS starts to transmit the affected SIB TYPE 1 messages. See specific message contents. |
| | | | | SS waits 5s (to ensure that the UE has time to read the new system information) |
| 1 | | | | SS initialises counter K to 0. Operator is asked to make an outgoing call and SS starts to wait for RRC CONNECTION REQUEST on uplink CCCH. |
| 2 | | → | RRC CONNECTION REQUEST | See specific message contents. |
| 2a | | | | SS increments K by 1 for every RRC CONNECTION REQUEST message received in step 2 |
| 2b | | ← | RRC CONNECTION SETUP | See specific message contents. |
| 3 | | | | SS checks to see if K is equal to N300+1. If so, goes to step 3a. Else, continues to execute step 2. |
| 3a | | | | SS waits to verify that the UE does not send any further RRC CONNECTION REQUEST message |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 3b | | | | SS re-initialises counter K to 0. Operator is asked to make another outgoing call and SS starts to wait for RRC CONNECTION REQUEST on uplink CCCH. |
| 3c | → | | RRC CONNECTION REQUEST | See specific message contents. |
| 3d | | | | SS increments K by 1 for every RRC CONNECTION REQUEST message received in step 3c |
| 3e | | | | SS checks to see if K is equal to N300+1. If so, goes to step 6. Else, continues to execute step 4 |
| 4 | ← | | RRC CONNECTION SETUP | Use the default message with the same message sub-type specified in clause 9 in TS 34.108. SS does not configure the physical channel. |
| 5 | | | | The next step is step 3c. |
| 6 | ← | | RRC CONNECTION SETUP | Use the default message with the same message sub-type specified in clause 9 in TS 34.108. SS configures the physical channel. |
| 7 | | | | The UE configures the layer 1 and layer 2. |
| 8 | → | | RRC CONNECTION SETUP COMPLETE | Use the default message with the same message sub-type specified in clause 9 in TS 34.108. |

Specific Message Contents

PAGING TYPE 1 (Step 0)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not Present |
| BCCH modification info | |
| - MIB Value Tag | Set to (Current MIB value tag + 1) |
| - BCCH Modification time | Not Present |

MASTER INFORMATION BLOCK (Step 0a)

| Information Element | Value/remark |
|---|---|
| MIB Value tag | As in PAGING TYPE 1 in step 0 |
| SIB 1 Cell Value tag | Set to (Current SIB1 value tag + 1) |

SYSTEM INFORMATION TYPE 1 (Step 0a)

Use the default parameter values for the system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - UE Timers and constants in idle mode | |
| -T300 | 2000 milliseconds |
| -N300 | 3 |
| -T312 | 10 seconds |
| - N312 | 1 |

RRC CONNECTION REQUEST (Step 2 & step 3c, K=0)

The same message sub-type found in clause 9 of TS 34.108 applies, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Originating Interactive Call or Originating Background Call or Originating Streaming Call or Originating Conversational Call |

RRC CONNECTION REQUEST (Step 2 & step 3c, K>0)

The same message sub-type found in clause 9 of TS 34.108 applies, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Originating Interactive Call or Originating Background Call or Originating Streaming Call or Originating Conversational Call |
| Protocol error indicator | Not Checked |

RRC CONNECTION SETUP (Step 2b)

Use the same message sub-type found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_DCH |
| Uplink DPCH info | Not present |

#### 8.1.2.9.5 Test requirement

After step 3a the UE shall not send any further RRC CONNECTION REQUEST message.

After step 8 the UE shall transmit an RRC CONNECTION SETUP COMPLETE message and establish an RRC connection.

### 8.1.2.10 RRC connection establishment in CELL_DCH on another frequency

#### 8.1.2.10.1 Definition

#### 8.1.2.10.2 Conformance requirement

1. The UE shall, in the transmitted RRC CONNECTION REQUEST message:

   1> set the IE "Establishment cause" to the value of the variable ESTABLISHMENT_CAUSE;

   1> set the IE "Initial UE identity" to the value of the variable INITIAL_UE_IDENTITY;

   1> set the IE "Protocol error indicator" to the value of the variable PROTOCOL_ERROR_INDICATOR;

   1> include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System Information Block type 11; and

   1> include in the IE "Measured results on RACH" all requested reporting quantities for cells for which measurements are reported; and

   1> take care that the maximum allowed message size is not exceeded when forming the IE "Measured results on RACH".

   ….

2. The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

   …

If the values are identical, the UE shall:

   …

   1> if the UE, according to subclause 8.6.3.3, will be in the CELL_DCH state at the conclusion of this procedure:

      2> perform the physical layer synchronisation procedure A as specified in [29] (FDD only).

Reference

3GPP TS 25.331 clauses 8.1.3.3, 8.1.3.6

#### 8.1.2.10.3 Test Purpose

To confirm that the UE manages to establish an RRC CONNECTION on another frequency when so required by SS in the RRC CONNECTION SETUP message.

#### 8.1.2.10.4 Method of test

Initial condition

System simulator: 2 cells – Cell 1 on UARFCN 1 and Cell 4 on UARFCN 4.

UE: "Registered idle mode on CS" (state 2) or "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial state shall be "Registered idle mode on CS/PS" (state 7).

Specific Message Content

For system information block 11 for Cell 1 (gives IE's which are different from defaults given in 34.108 sec 6.1) to be transmitted before idle update preamble.

System Information Block type 11

Use same message sub-clause 6.1 of TS34.108, with following exception:

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| Measurement control system information | |

| | |
|---|---|
| - Intra-frequency measurement system information | |
| - Intra-frequency reporting quantity for RACH reporting | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE mode | FDD |
| - Reporting quantity | CPICH Ec/No |
| - Maximum number of reported cells on RACH | Current Cell |
| - Reporting information for state CELL_DCH | Not present |

System Information Block type 11 (TDD)

Use same message sub-clause 6.1 of TS34.108, with following exception:

| Information Element | Value/remark |
|---|---|
| - SIB12 indicator | FALSE |
| Measurement control system information | |
| - Intra-frequency measurement system information | |
| - Intra-frequency reporting quantity for RACH reporting | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE mode | TDD |
| - Reporting quantity | Primary CCPCH RSCP |
| - Maximum number of reported cells on RACH | Current Cell |
| - Reporting information for state CELL_DCH | Not present |

Test procedure

The UE is initially in idle mode and is camping on cell 1. SIB 11 is broadcast in cell 1.

SS prompts the operator to make an outgoing call of a supported traffic class. The UE shall transmit an RRC CONNECTION REQUEST on the CCCH, and SS replies with the RRC CONNECTION SETUP, in which the IEs are set as described below. The UE shall send the RRC CONNECTION SETUP COMPLETE back to SS in cell 4 on the DPCH described in the RRC CONNECTION SET UP messsage received from the SS. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Note: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | RRC CONNECTION REQUEST | By outgoing call operation |
| 2 | ← | | RRC CONNECTION SETUP | Indicating frequency of cell 4 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 4 for FDD / IE “Cell Parameters ID” set to cell 4 for LCR TDD. |
| 3 | | | | The UE configures the layer 2 and layer 1. |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | This message is sent to SS on the frequency indicated in the RRC CONNECTION SETUP message |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message content

All messages indicated below shall use the same content as found in TS 34.108 clause 6.1 with the following exceptions:

RRC CONNECTION REQUEST (Step 1) (FDD)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | Check that the Ec/No for the cell 1 is reported. |

RRC CONNECTION REQUEST (Step 1) (TDD)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | Check that the P-CCPCH RSCP for the cell 1 is reported. |

RRC CONNECTION SETUP (Step 2) (FDD)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- UARFCN uplink(Nu)<br><br><br><br>- UARFCN downlink(Nd)<br>Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br>Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21]<br>UARFCN downlink of cell 4<br><br><br>Set to same code as used for cell 4 |

RRC CONNECTION SETUP (Step 2) (TDD)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- UARFCN(Nt) | <br>UARFCN of the cell 4 |
| Downlink information for each radio link list<br>- Downlink information for each radio link<br>- Choice mode TDD<br>- Primary CCPCH info<br>- CHOICE mode TDD<br>- Cell parameters ID | <br><br><br><br><br>Cell parameters ID of the cell 4 |

#### 8.1.2.10.5 Test requirement

In step 4, the UE shall send the RRC CONNECTION SETUP COMPLETE message on the frequency indicated in the RRC CONNECTION SETUP message.

### 8.1.2.10a RRC connection establishment in CELL_DCH on another frequency in a different frequency band

#### 8.1.2.10a.1 Definition

This test case is identical to test case 8.1.2.10 except that the target cell is on a different frequency band.

#### 8.1.2.10a.2 Conformance requirement

Same conformance requirement as in clause 8.1.2.10.2.

#### 8.1.2.10a.3 Test Purpose

Same test purpose as in clause 8.1.2.10.3 except that the target cell is on a different frequency band.

#### 8.1.2.10a.4 Method of test

Initial condition

Same initial conditions as in clause 8.1.2.10.4 except that cell 1 and cell 4 use the UARFCNs in two different frequency bands. The frequency bands for cell 1 and cell 4 are selected according to PIXIT parameters.

Related ICS/IXIT statement(s)

- UE supports multiple bands simultaneously yes/no

Specific message content

Same specific message content for system information as in clause 8.1.2.10.4.

Test procedure

Same test procedure as in clause 8.1.2.10.4.

Note: If the UE supports more than 2 frequency bands, the test may be executed for various band combinations.

Specific message content

Same specific message content as in clause 8.1.2.10.4.

#### 8.1.2.10a.5 Test requirement

Same test requirement as in clause 8.1.2.10.5.

### 8.1.2.11 RRC Connection Establishment in FACH state (Frequency modification): Success

#### 8.1.2.11.1 Definition

#### 8.1.2.11.2 Conformance requirement

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the UE storing "Initial UE identity".

If the values are different, the UE shall:

1> ignore the rest of the message.

If the values are identical, the UE shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified otherwise in the following:

2> if the UE, according to subclause 8.6.3.3, will be in the CELL_FACH state at the conclusion of this procedure:

3> if the IE "Frequency info" is included:

4> select a suitable UTRA cell according to TS25.304 on that frequency;

3> enter UTRA RRC connected mode;

3> select PRACH according to TS25.331 subclause 8.5.17;

3> select Secondary CCPCH according to TS5.331 subclause 8.5.19;

3> ignore the IE "UTRAN DRX cycle length coefficient" and stop using DRX.

1> if the UE, according to subclause 8.6.3.3, will be in the CELL_DCH state at the conclusion of this procedure:

….

2> enter UTRA RRC connected mode, in a state according to TS25.331 subclause 8.6.3.3;

1> submit an RRC CONNECTION SETUP COMPLETE message to the lower layers on the uplink DCCH after successful state transition per TS25.331 subclause 8.6.3.3, with the contents set as specified below:

….

And the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.3.6.

### 8.1.2.11.3 Test purpose

To confirm that the UE enters to CELL_FACH state and correctly establishes signalling radio bearers using common physical channels of a cell within the frequency band specified by SS in RRC CONNECTION SETUP message.

### 8.1.2.11.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 is active and cell 6 is inactive.

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Specific Message Content

For system information block 11 for Cell 1 (gives IE's which are different from defaults given in 34.108 sec 6.1) to be transmitted before idle update preamble.

System Information Block type 11

Use same message sub-clause 6.1 of TS34.108, with following exception:

| Information Element | Value/remark |
|---|---|
| - Intra-frequency reporting quantity for RACH Reporting | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE *mode* | |
| - FDD | |
| - Reporting quantity | CPICH Ec/N0 |
| - Maximum number of reported cells on RACH | current cell |

System Information Block type 11 (TDD)

Use same message sub-clause 6.1 of TS34.108, with following exception:

| Information Element | Value/remark |
|---|---|
| - Intra-frequency reporting quantity for RACH Reporting | |
| -SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE mode | TDD |
| - CHOICE measurement quantity | PCCPCH RSCP |
| - Maximum number of reported cells on RACH | current cell |

Test Procedure

**Table 8.1.2.11**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -72 | Off | -72 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -72 | Off | -72 |

Table 8.1.2.11 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in Idle mode of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.1.2.11. The SS switches its downlink transmission power settings to columns "T1" and the UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH by attempting to make an outgoing call. After SS receives this message, it assigns the necessary radio resources and U-RNTI to be used by the UE. The SS then transmits an RRC CONNECTION SETUP message containing an IE "frequency info" IE "Frequency info" set to uplink/downlink UARFCN as used for cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6 for FDD mode, and UARFCN as used for cell 6 and IE "Primary CCPCH RSCP info" set as assigned in cell 6 for TDD mode. The SS monitors all uplink RACH channels of cell 6.The UE transmitting an RRC CONNECTION SETUP COMPLETE message on the DCCH (mapped onto RACH) of cell 6.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in Idle mode of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.1.2.11. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.1.2.11. |
| 3 | → | | RRC CONNECTION REQUEST | Operator makes an outgoing call. The UE shall transmit this message, indicating the proper establishment cause. |
| 4 | ← | | RRC CONNECTION SETUP | Including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6 for FDD mode, and IE "Primary CCPCH RSCP info" set as assigned in cell 6 for TDD mode. |
| 5 | → | | RRC CONNECTION SETUP COMPLETE | UE shall send this message on the DCCH, carried by the assigned PRACH resources in cell 6. |

Specific Message Content

RRC CONNECTION REQUEST (Step 3) (FDD)

Use the same message type found in clause 9 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Originating Interactive Call or Originating Background Call or Originating Streaming Call or Originating Conversational Call |
| Measured results on RACH | Check to see if set in accordance with the IE "Intra-frequency reporting quantity for RACH Reporting" included in SYSTEM INFORMATION BLOCK Type 11 |
| - Measurement result for current cell | |
| - CHOICE mode | |
| - FDD | |
| - CHOICE measurement quantity | |
| - CPICH Ec/N0 | The actual reported value is not checked |

RRC CONNECTION REQUEST (Step 3) (TDD)

Use the same message type found in clause 9 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Originating Interactive Call or Originating Background Call or Originating Streaming Call or Originating Conversational Call |
| Measured results on RACH | Check to see if set in accordance with the IE "Intra-frequency reporting quantity for RACH Reporting" included in SYSTEM INFORMATION BLOCK Type 11 |
| - Measurement result for current cell | |
| - CHOICE mode | TDD |
| - CHOICE measurement quantity | |
| - P-CCPCH RSCP | The actual reported value is not checked |

RRC CONNECTION SETUP (Step 4) (FDD)

For this message, the contents of the message to be used are basically identical to the message sub-type entitled "RRC CONNECTION SETUP message (Transition to CELL_FACH)" found in [9] TS 34.108 clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN uplink(Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |

RRC CONNECTION SETUP (Step 4) (TDD)

For this message, the contents of the message to be used are basically identical to the message sub-type entitled "RRC CONNECTION SETUP message (Transition to CELL_FACH)" found in [9] TS 34.108 clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - Cell parameters ID | As used for cell 6 |

RRC CONNECTION SETUP COMPLETE (Step 5)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| UE Radio Access Capability | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |
| UE radio access capability extension | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |
| UE system specific Capability | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |

#### 8.1.2.11.5 Test requirement

After step 5 the UE shall transmit RRC CONNECTION SETUP COMPLETE message on the uplink DCCH in cell 6.

### 8.1.2.12 RRC Connection Establishment: Reject with interRATInfo is set to GSM

#### 8.1.2.12.1 Definition

#### 8.1.2.12.2 Conformance requirement

When the UE receives an RRC CONNECTION REJECT message on the downlink CCCH, it shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION REJECT message with the value of the variable INITIAL_UE_IDENTITY:

If the values are different, the UE shall ignore the rest of the message;

If the values are identical, the UE shall:

1> stop timer T300; and

1> clear the entry for the RRC CONNECTION REJECT message in the table "Accepted transactions" in the variable TRANSACTIONS;

...

1> if the IE "inter-RAT info" is present and:

2> if V300 is equal to or smaller than N300:

3> select a suitable cell belonging to the selected PLMN or any PLMN indicated to be equivalent to that PLMN in the designated RAT;

3> after having selected and camped on a suitable cell on the designated RAT:

4> disable cell reselection to the original RAT until the time stated in the IE " wait time" has elapsed.

#### 8.1.2.12.3 Test Purpose

To verify that the UE shall select the GSM cell when RRC Connection Reject with Inter-RAT info set to GSM is received in response to RRC connection request.

Reference

3GPP TS 25.331, section 8.1.3.9

#### 8.1.2.12.4 Method of test

Initial condition

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 clause 40 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9. The Inter-RAT Cell Info List of Cell 1 refers to Cell 9. The 3G Neighbour Cell Description List of Cell 9 refers to Cell 1.

UE: Idle state (state 2) as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-850, GSM-PCS.
- PS Supported yes/no
- Support of automatic PS attach procedure at switch on yes/no

Test procedure

The UE transmits an RRC CONNECTION REQUEST message for making an MO call. After the SS receives this message, it transmits an RRC CONNECTION REJECT message with interRATInfo set to "GSM" and wait time set to 10 seconds. UE then selects GSM cell specified in SIB11 and sends a CHANNEL REQUEST for making an MO call. RR connection is successfully established. Thereafter an MO call is established in the GSM cell.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | Prompt the operator to make an outgoing call. |
| 2 | → | | RRC CONNECTION REQUEST | |
| 3 | ← | | RRC CONNECTION REJECT | See specific message contents. |
| 4 | UE | | | UE selects the GSM cell specified in the SIB11. |
| 5 | → | | CHANNEL REQUEST | UE requests for RR connection to establish the MO call. |
| 6 | ← | | IMMEDIATE ASSIGNMENT | RR connection is established. Thereafter UE proceeds with the MO call establishment. SS completes the call establishment procedure. |
| 7 | SS | | | It is verified that the MO call is successfully established by sending a STATUS ENQUIRY message. The UE shall respond with a STATUS message indicating that it is in state U10. |

Specific message contents

RRC CONNECTION REJECT in step 4:

| | |
|---|---|
| Wait time | 10 seconds |
| Redirectioninfo | |
| InterRATInfo | GSM |

8.1.2.12.5 Test requirement

1) At step 5, UE should respond on GSM cell.
2) At step 7, UE should be in CC state U10 in the GSM cell.

## 8.1.2.13 RRC Connection Establishment: Reject with InterRATInfo is set to GSM and selection to the designated system fails

### 8.1.2.13.1 Definition

### 8.1.2.13.2 Conformance requirement

When the UE receives an RRC CONNECTION REJECT message on the downlink CCCH, it shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION REJECT message with the value of the variable INITIAL_UE_IDENTITY:

If the values are different, the UE shall ignore the rest of the message;

If the values are identical, the UE shall:

1> stop timer T300; and

1> clear the entry for the RRC CONNECTION REJECT message in the table "Accepted transactions" in the variable TRANSACTIONS;

...

1> if the IE "inter-RAT info" is present and:

2> if V300 is equal to or smaller than N300:

3> if no suitable cell in the designated RAT is found:

4> wait at least the time stated in the IE "wait time";

4> set CFN in relation to SFN of current cell according to subclause 8.5.15;

4> set the IEs in the RRC CONNECTION REQUEST message according to subclause 8.1.3.2.

4> perform the mapping of the Access Class to an Access Service Class as specified in subclause 8.5.13, and apply the given Access Service Class when accessing the RACH;

4> then submit a new RRC CONNECTION REQUEST message to the lower layers for transmission on the uplink CCCH;

4> increment counter V300;

4> restart timer T300 when the MAC layer indicates success or failure to transmit the message;

....

2> if V300 is greater than N300:

3> enter idle mode;

3> perform the actions specified in subclause 8.5.2 when entering idle mode from connected mode;

3> consider the RRC establishment procedure to be unsuccessful;

3> the procedure ends.

### 8.1.2.13.3 Test Purpose

To verify that the UE upon receiving RRC Connection Reject with Inter-RAT info set to GSM and failing to select the designated GSM system, shall reselect UTRAN cell only after the wait time specified in RRC Connection Reject. The UE shall then continue with the RRC CONNECTION establishment procedure.

Reference

3GPP TS 25.331, section 8.1.3.9

#### 8.1.2.13.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, the value of N300 is set to 1. Cell 9 is GSM. GSM 51.010 clause 40 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9. The Inter-RAT Cell Info List of Cell 1 refers to Cell 9. The 3G Neighbour Cell Description List of Cell 9 refers to Cell 1.

UE: Idle state (state 2) as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-850, GSM-PCS.
- PS Supported yes/no
- Support of automatic PS attach procedure at switch on yes/no

Test procedure

The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH by making an outgoing call. After the SS receives this message, it transmits an RRC CONNECTION REJECT message with interRATInfo set to “GSM” and wait time set to 10 seconds. The GSM cell is switched off, therefore UE fails to select the GSM cell. UE reselects UTRAN cell only after waiting for duration specified in wait time. It then retransmits RRC CONNECTION REQUEST.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | Prompt the operator to make an outgoing call. |
| 2 | → | | RRC CONNECTION REQUEST | Shall be sent on CCCH and contain the correct establishment cause. |
| 3 | ← | | RRC CONNECTION REJECT | See specific message contents. |
| 4 | | | | Cell 9 is switched off |
| 5 | → | | RRC CONNECTION REQUEST | SS verifies that RRC connection is received only after wait time. |
| 6 | ← | | RRC CONNECTION REJECT | SS sends the message to bring the UE to idle mode. |

Specific message contents

RRC CONNECTION REJECT in step 3:

| | |
|---|---|
| Wait time | 10 seconds |
| Redirectioninfo | |
| InterRATInfo | GSM |

#### 8.1.2.13.5 Test requirement

1) At step 5, RRC connection request is received after wait time.

### 8.1.2.14 RRC Connection Establishment using the default configuration for 3.4 kbps signalling bearers

#### 8.1.2.14.1 Definition

#### 8.1.2.14.2 Conformance requirement

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

If the values are different, the UE shall:

1> ignore the rest of the message.

If the values are identical, the UE shall:

---

---

2> if IE "Specification mode" is set to "Preconfiguration" and IE "Preconfiguration mode" is set to "Default configuration":

3> initiate the radio bearer and transport channel configuration in accordance with the default parameters identified by the IE "Default configuration mode" and IE "Default configuration identity";

3> initiate the physical channels in accordance with the received physical channel information elements.

NOTE: IE "Default configuration mode" specifies whether the FDD or TDD version of the default configuration shall be used.

Reference

3GPP TS 25.331 clause 8.1.3.6, clause 13.7

### 8.1.2.14.3 Test purpose

To confirm that the UE establishes the radio bearer and transport channel configuration for 3.4kbps signalling radio bearers in accordance with the stored default parameters as identified by the IE “Default configuration identity” specified in the RRC Connection Setup Message

### 8.1.2.14.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE shall transmit a RRC CONNECTION REQUEST message to the SS on the uplink CCCH, after the operator attempts to make an outgoing call. SS shall send a RRC CONNECTION SETUP message that contains the stored default configuration identity 0 (for 3.4kbps signalling radio bearers). The UE accepts the message, configuring the radio bearer and transport channel configuration in accordance with the stored default parameters and acknowledges the establishment of RRC connection by sending the RRC CONNECTION SETUP COMPLETE message on uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | Operator is asked to make an outgoing call. |
| 2 | → | | RRC CONNECTION REQUEST | |
| 3 | ← | | RRC CONNECTION SETUP | DefaultConfigIdentity used is ‘0’ |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state the test passes, otherwise it fails. |

Specific Message Contents

RRC CONNECTION REQUEST (Step 2)

The same message sub-type found in clause 9 of TS 34.108 applies, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Originating Interactive Call or Originating Background Call or Originating Streaming Call or Originating Conversational Call |

RRC CONNECTION SETUP (Step 3)

Use the same message sub-type found in clause 9 of TS 34.108 (Transition to CELL_DCH), with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Choice Specification Mode | Preconfiguration |
| - Choice Preconfig Mode | Default Config |
| - Default Config Mode | FDD |
| -Default Config Identity | 0 |
| Uplink DPCH info | |
| - Uplink DPCH power control info | |
| - DPCCH power offset | -40 (-80 dB) |
| - PC Preamble | 1 frame |
| - SRB delay | 7 frames |
| - Power Control Algorithm | Algorithm1 |
| - TPC step size | 0 (1 dB) |
| - Scrambling code type | Long |
| - Scrambling code number | 0 (0 to 16777215) |
| - Number of DPDCH | Not Present(1) |
| - Spreading factor | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - TFCI existence | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - Number of FBI bit | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - Puncturing Limit | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indication | Initialize |
| - CFN-targetSFN frame offset | Not Present |
| - CHOICE mode | FDD |
| - Downlink DPCH power control information | |
| - DPC mode | 0 (single) |
| - Power offset P Pilot-DPDCH | 0 |
| - DL rate matching restriction information | Not Present |
| - Spreading factor | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - Fixed or Flexible Position | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - TFCI existence | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - CHOICE SF | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - DPCH compressed mode info | Not Present |
| - TX Diversity mode | None |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| Downlink information for each radio links list | |
| - Downlink information for each radio links | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Reference to clause 6.1 "Default settings (FDD)" |
| - Downlink DPCH info for each RL | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - DPCH frame offset | Set to value: Default DPCH Offset Value mod 38 400 |
| - Secondary CPICH info | Not Present |
| - DL channelisation code | |
| - Secondary scrambling code | 1 |
| - Spreading factor | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - Code number | 0 |
| - Scrambling code change | Not Present |
| - TPC combination index | 0 |
| - Closed loop timing adjustment mode | Not Present |

RRC CONNECTION SETUP COMPLETE (Step 4)

Use the same message sub-type found in clause 9 of TS 34.108.

#### 8.1.2.14.5 Test requirement

In step 4 the UE shall transmit a RRC CONNECTION SETUP COMPLETE message on Radio Bearer Id: 2 and establish a RRC connection.

### 8.1.2.15 RRC Connection Establishment using the default configuration for 13.6 kbps signalling bearers

#### 8.1.2.15.1 Definition

#### 8.1.2.15.2 Conformance requirement

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

If the values are different, the UE shall:

1> ignore the rest of the message.

If the values are identical, the UE shall:

---

---

2> if IE "Specification mode" is set to "Preconfiguration" and IE "Preconfiguration mode" is set to "Default configuration":

3> initiate the radio bearer and transport channel configuration in accordance with the default parameters identified by the IE "Default configuration mode" and IE "Default configuration identity";

3> initiate the physical channels in accordance with the received physical channel information elements.

NOTE: IE "Default configuration mode" specifies whether the FDD or TDD version of the default configuration shall be used.

Reference

3GPP TS 25.331 clause 8.1.3.6, clause 13.7

#### 8.1.2.15.3 Test purpose

To confirm that the UE establishes the radio bearer and transport channel configuration for 13.6kbps signalling radio bearers in accordance with the stored default parameters as identified by the IE “Default configuration identity” specified in the RRC Connection Setup Message

#### 8.1.2.15.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE shall transmit a RRC CONNECTION REQUEST message to the SS on the uplink CCCH, after the operator attempts to make an outgoing call. SS shall send a RRC CONNECTION SETUP message that contains the stored default configuration identity 1 for Rel-5, or 22 for Rel-6 onwards (for 13.6kbps signalling radio bearers). The UE accepts the message, configuring the radio bearer and transport channel configuration in accordance with the stored default parameters and acknowledge the establishment of RRC connection by sending the RRC CONNECTION SETUP COMPLETE message on uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | Operator is asked to make an outgoing call. |
| 2 | → | | RRC CONNECTION REQUEST | |
| 3 | ← | | RRC CONNECTION SETUP | DefaultConfigIdentity used is '1' for Rel-5, or '22' for Rel-6 onwards |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state the test passes, otherwise it fails. |

Specific Message Contents

RRC CONNECTION REQUEST (Step 2)

The same message sub-type found in clause 9 of TS 34.108 applies, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Originating Interactive Call or Originating Background Call or Originating Streaming Call or Originating Conversational Call |

RRC CONNECTION SETUP (Step 3, Rel-5)

Use the same message sub-type found in clause 9 of TS 34.108 (Transition to CELL_DCH), with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Choice Specification Mode | Preconfiguration |
| - Choice Preconfig Mode | Default Config |
| - Default Config Mode | FDD |
| -Default Config Identity | 1 |

RRC CONNECTION SETUP (Step 3, Rel-6 onwards)

Use the same message sub-type found in clause 9 of TS 34.108 (Transition to CELL_DCH), with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Choice Specification Mode | Preconfiguration |
| - Choice Preconfig Mode | Default Config |
| - Default Config Mode | FDD |
| -Default Config Identity | 22 |

RRC CONNECTION SETUP COMPLETE (Step 4)

Use the same message sub-type found in clause 9 of TS 34.108

8.1.2.15.5 Test requirement

In step 4 the UE shall transmit a RRC CONNECTION SETUP COMPLETE message on Radio Bearer Id: 2 and establish an RRC connection.

## 8.1.2.16 RRC Connection Establishment / Domain Specific Access Control: Success

### 8.1.2.16.1 Definition

This test case is applicable for Rel-5 UEs supporting DSAC and Rel-6 or later UEs.

### 8.1.2.16.2 Conformance requirement

Access Class related cell access restrictions shall be checked by the UE before sending an RRC CONNECTION REQUEST message when entering Connected Mode from UTRAN Idle mode.

….

With respect to Domain Specific Access Control, the UE shall:

1> if the IE "Multiple PLMN List" is not included in the Master Information Block:

2> apply the domain specific access restrictions as indicated by the IE "Domain Specific Access Restriction Parameters For PLMN Of MIB".

….

The UE shall apply the following handling with respect to any Access Class Barring information:

1> if in idle mode and any Access Class Barring information is indicated:

2> if no Domain Specific Access Restriction Parameters are included in System Information Block Type 3, the UE shall:

3> act on the IE "Access Class Barred list" when initiating RRC Connection establishment as specified in [4] (TS25.304).

2> if the Domain Specific Access Restriction Parameters to be applied are included in System Information Block Type 3 the UE shall:

3> act on the IE "Domain Specific Access Class Barred List" if indicated in the IE "CS Domain Specific Access Restriction" when initiating RRC Connection establishment to send an INITIAL DIRECT TRANSFER message to the CS domain, as specified in [4] (TS25.304);

3> act on the IE "Domain Specific Access Class Barred List" if indicated in the IE "PS Domain Specific Access Restriction" when initiating RRC Connection establishment to send an INITIAL DIRECT TRANSFER message to the PS domain, as specified in [4] (TS25.304);

3> upon transition to UTRA RRC connected, the UE shall:

4> store that Domain Specific Access Restriction Parameters to the variable "DSAC_PARAM" and maintain the variable until it is cleared, the PLMN chosen by the UE is changed or the RRC connection is released;

4> act on the stored IE "Domain Specific Access Class Barred List" if indicated in the IE "CS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the CS domain, as specified in [4] (TS25.304);

4> act on the stored IE "Domain Specific Access Class Barred List" if indicated in the IE "PS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the PS domain, as specified in [4] (TS25.304);

1> if in connected mode:

2> if no Access Class Barring information is indicated:

3> if the variable "DSAC_PARAM" is set, the UE shall

4> clear the variable "DSAC_PARAM";

4> act as if no Access Class is barred.

2> else if the Domain Specific Access Restriction Parameters to be applied is not included in System Information Block Type 3:

3> if the variable "DSAC_PARAM" is set, the UE shall:

4> clear the variable "DSAC_PARAM";

4> act as if no Access Class is barred.

2> else if the Domain Specific Access Restriction Parameters to be applied are included in the System Information Block Type 3:

3> if the variable "DSAC_PARAM is not set, the UE shall:

4> store that Domain Specific Access Restriction Parameters to the variable "DSAC_PARAM" and maintain the variable until it is cleared, the PLMN chosen by the UE is changed or the RRC connection is released;

4> act on the stored IE "Domain Specific Access Class Barred List" if indicated in the IE "CS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the CS, as specified in [4] (TS25.304);

4> act on the stored IE "Domain Specific Access Class Barred List" if indicated in the IE "PS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the PS domain, as specified in [4] (TS25.304).

3> else (the access class barring information is stored) UE shall:

4> update the variable "DSAC_PARAM" with that Domain Specific Access Restriction Parameters;

4> act on the updated IE "Domain Specific Access Class Barred List" if indicated in the IE "CS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the CS domain, as specified in [4] (TS25.304);

4> act on the updated IE "Domain Specific Access Class Barred List" if indicated in the IE "PS Domain Specific Access Restriction" when initiating an INITIAL DIRECT TRANSFER message to the PS domain, as specified in [4] (TS25.304).

….

Reference

3GPP TS25.304 clause 5.3.1.2, TS 25.331 clause 8.1.1.6.3

### 8.1.2.16.3 Test purpose

To confirm that the UE establishes a RRC Connetion on the non-barred domain under the Domain Specific Access Restriction.

### 8.1.2.16.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: Idle state (state 7) as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statements

The- Support of DSAC Yes/No.

Support of DSAC Yes/No.Test Procedure

The UE is in idle mode. The SS transmits a PAGING TYPE 1 message to inform the UE to change the system information and it needs to read new blocks of SYSTEM INFORMATION, in which the IE “Domain Specific Access Restriction Parameters” to be applied are included in SYSTEM INFORMATION BLOCK TYPE 3. The UE transmits a RRC CONNECTION REQUEST message to the SS on the uplink CCCH by an outgoing call operation on the other

non-barred domain. Then the SS transmits a RRC CONNECTION SETUP message to establish a RRC Connection with the UE and the UE replies to send a RRC CONNECTION SETUP COMPLETE message and an INITIAL DIRECT TRANSFER message.

This test case shall be run twice:

Case1) The system information block type 3 indicates that only the CS domain is barred at step2.

Case2) The system information block type 3 indicates that only the PS domain is barred at step2.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | PAGING TYPE1 | The SS transmits the message including the IE "BCCH Modification Information". |
| 2 | | ← | MASTER INFORMATION BLOCK | The SS starts to transmit the MIB with the "MIB value tag" IE different from the original setting. |
| | | ← | SYSTEM INFORMATION BLOCK TYPE3 | The SS transmits the new SIB3 to indicate that one of the supported domains in the cell is barred. |
| 3 | | | | The SS waits 5 sec (to ensure that the UE has time to read the new system information). |
| 4 | | → | RRC CONNECTION REQUEST | The SS prompts the test operator to make an outgoing call on the other non-barred domain. |
| 5 | | ← | RRC CONNECTION SETUP | |
| 6 | | → | RRC CONNECTION SETUP COMPLETE | |
| 7 | | → | INITIAL DIRECT TRANSFER | |

Specific Message Content

PAGING TYPE 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not Present |
| BCCH modification info | |
| - MIB Value Tag | Set to (Current MIB value tag + 1) |
| - BCCH Modification time | Not Present |

MASTER INFORMATION BLOCK (Step 2)

| Information Element | Value/remark |
|---|---|
| MIB Value tag | As in PAGING TYPE 1 in step 1 |
| SIB 3 Cell Value tag | Set to (Current SIB3 value tag + 1) |

System Information Block type 3 (Step 2)

For Case 1 i.e. when only the CS domain is barred.

Use the same message type found in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Access Class Barred List | |
| - Access Class Barred0 | barred |
| - Access Class Barred1 | barred |
| - Access Class Barred2 | barred |
| - Access Class Barred3 | barred |
| - Access Class Barred4 | barred |
| - Access Class Barred5 | barred |

| | |
|---|---|
| - Access Class Barred6 | barred |
| - Access Class Barred7 | barred |
| - Access Class Barred8 | barred |
| - Access Class Barred9 | barred |
| - Access Class Barred10 | barred |
| - Access Class Barred11 | barred |
| - Access Class Barred12 | barred |
| - Access Class Barred13 | barred |
| - Access Class Barred14 | barred |
| - Access Class Barred15 | barred |
| Domain Specific Access Restriction Parameters For PLMN Of MIB | |
| -CS Domain Specific Access Restriction | restriction |
| -Domain Specific Access Class Barred List | |
| -Access Class Barred List | |
| - Access Class Barred0 | barred |
| - Access Class Barred1 | barred |
| - Access Class Barred2 | barred |
| - Access Class Barred3 | barred |
| - Access Class Barred4 | barred |
| - Access Class Barred5 | barred |
| - Access Class Barred6 | barred |
| - Access Class Barred7 | barred |
| - Access Class Barred8 | barred |
| - Access Class Barred9 | barred |
| - Access Class Barred10 | barred |
| - Access Class Barred11 | barred |
| - Access Class Barred12 | barred |
| - Access Class Barred13 | barred |
| - Access Class Barred14 | barred |
| - Access Class Barred15 | barred |
| -PS Domain Specific Access Restriction | restriction |
| -Domain Specific Access Class Barred List | |
| -Access Class Barred List | |
| - Access Class Barred0 | not barred |
| - Access Class Barred1 | not barred |
| - Access Class Barred2 | not barred |
| - Access Class Barred3 | not barred |
| - Access Class Barred4 | not barred |
| - Access Class Barred5 | not barred |
| - Access Class Barred6 | not barred |
| - Access Class Barred7 | not barred |
| - Access Class Barred8 | not barred |
| - Access Class Barred9 | not barred |
| - Access Class Barred10 | not barred |
| - Access Class Barred11 | not barred |
| - Access Class Barred12 | not barred |
| - Access Class Barred13 | not barred |
| - Access Class Barred14 | not barred |
| - Access Class Barred15 | not barred |

System Information Block type 3 (Step 2)

For Case 2 i.e. when only the PS domain is barred

Use the same message type found in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Access Class Barred List | |
| - Access Class Barred0 | barred |
| - Access Class Barred1 | barred |
| - Access Class Barred2 | barred |
| - Access Class Barred3 | barred |
| - Access Class Barred4 | barred |
| - Access Class Barred5 | barred |

| | |
|---|---|
| - Access Class Barred6 | barred |
| - Access Class Barred7 | barred |
| - Access Class Barred8 | barred |
| - Access Class Barred9 | barred |
| - Access Class Barred10 | barred |
| - Access Class Barred11 | barred |
| - Access Class Barred12 | barred |
| - Access Class Barred13 | barred |
| - Access Class Barred14 | barred |
| - Access Class Barred15 | barred |
| Domain Specific Access Restriction Parameters For PLMN Of MIB | |
| -CS Domain Specific Access Restriction | restriction |
| -Domain Specific Access Class Barred List | |
| -Access Class Barred List | |
| - Access Class Barred0 | not barred |
| - Access Class Barred1 | not barred |
| - Access Class Barred2 | not barred |
| - Access Class Barred3 | not barred |
| - Access Class Barred4 | not barred |
| - Access Class Barred5 | not barred |
| - Access Class Barred6 | not barred |
| - Access Class Barred7 | not barred |
| - Access Class Barred8 | not barred |
| - Access Class Barred9 | not barred |
| - Access Class Barred10 | not barred |
| - Access Class Barred11 | not barred |
| - Access Class Barred12 | not barred |
| - Access Class Barred13 | not barred |
| - Access Class Barred14 | not barred |
| - Access Class Barred15 | not barred |
| -PS Domain Specific Access Restriction | restriction |
| -Domain Specific Access Class Barred List | |
| -Access Class Barred List | |
| - Access Class Barred0 | barred |
| - Access Class Barred1 | barred |
| - Access Class Barred2 | barred |
| - Access Class Barred3 | barred |
| - Access Class Barred4 | barred |
| - Access Class Barred5 | barred |
| - Access Class Barred6 | barred |
| - Access Class Barred7 | barred |
| - Access Class Barred8 | barred |
| - Access Class Barred9 | barred |
| - Access Class Barred10 | barred |
| - Access Class Barred11 | barred |
| - Access Class Barred12 | barred |
| - Access Class Barred13 | barred |
| - Access Class Barred14 | barred |
| - Access Class Barred15 | barred |

INITIAL DIRECT TRANSFER (Step 7)

Use the same message type found in clause 9.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| CN domain identity | Check to see if it is not the barred domain. |

### 8.1.2.16.5 Test requirement

At step4, the UE transmits a RRC CONNECTION REQUEST message to the SS for establishing the non-barred domain service.

At step6, the UE transmits a RRC CONNECTION SETUP COMPLETE message to the SS on uplink DCCH.

## 8.1.2.17 RRC Connection Establishment for transition from Idle Mode to CELL_DCH: Success (start of E-DCH transmission)

### 8.1.2.17.1 Definition and applicability

All UEs which support FDD and HS-PDSCH and E-DCH and fully support F-DPCH or all UEs which support TDD and HS-PDSCH and E-PUCH.

### 8.1.2.17.2 Conformance requirement

In case the procedure was triggered by reception of a RRC CONNECTION SETUP message, the UE shall:

1> transmit a RRC CONNECTION SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable E_DCH_TRANSMISSION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in Idle Mode;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-DPCCH info" and the IE "E-DPDCH info".
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> for non-scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-PUCH info";
- IE "Non-scheduled transmission grant info";

2> for scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH, E-HICH and E-RGCH reception procedures;

1> For FDD:

2> stop any E-RGCH reception procedures.

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures.

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the active set for which an E-HICH configuration has been provided;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info";

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH".

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2> if scheduled transmission is configured, perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, if scheduled transmission is configured, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AICH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH and E-DPDCH transmission procedures.

…

If the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the new value(s) in the variable E_RNTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2>use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

1> for TDD:

2> use the value of New Primary E-RNTI stored in the variable E_RNTI as the UE identity in the E-AGCH reception procedure and the E-RUCCH transmission procedure in the physical layer.

…

If the IE "Added or Reconfigured UL TrCH information" is included then the UE shall:

1> for the transport channel identified by the IE "UL Transport Channel Identity" and IE "Uplink transport channel type":

2> perform the actions for the IE "Transport Format Set" as specified in subclause 8.6.5.1.

NOTE: The UE stores the UL transport channel configuration until it is explicitly deleted by a message containing the IE "Deleted UL TrCH information" or the UE leaves RRC Connected mode.

1> if the choice "UL parameters" is set to 'EDCH':

2> for FDD:

3> apply the values of the IE "E-DCH Transmission Time Interval" and the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for TDD:

3> apply the value of the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.17.

2> if the IE "Added or Reconfigured E-DCH MAC-d Flow" is included:

3> for each MAC-d flow identified by the IE "Mac-d flow identity":

4> perform the actions as specified in subclause 8.6.5.18.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

NOTE: In case of multiple E-DCH MAC-d flows, IE "Added or Reconfigured UL TrCH information" is only included once. If the IE "Added or Reconfigured UL TrCH information" is included more than once with the IE "Uplink transport channel type" set to 'E-DCH', the UE behaviour is unspecified.

…

If the IE "E-DCH Transmission Time Interval" is included, the UE shall:

1> store the received TTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> apply the TTI as signalled in the IE "E-DCH Transmission Time Interval" on the E-DPDCH.

If the received "E-DCH Transmission Time Interval" is 2 ms and the previously stored TTI was 10 ms:

1> not send any data on E-DPDCH in first 8 TTIs after activation time of new TTI.

…

If the IE "HARQ Info for E-DCH" is included, the UE shall:

1> store the received configuration;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use a redundancy version for each HARQ transmission as configured by the IE "HARQ RV Configuration".

…

If the IE "Added or reconfigured E-DCH MAC-d flow" is included, the UE shall:

1> if the IE "E-DCH MAC-d flow power offset" is included:

2> configure the power offset indicated in the IE "E-DCH MAC-d flow power offset" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow maximum number of retransmissions" is included:

2> configure the maximum number of retransmissions indicated in the IE "E-DCH MAC-d flow maximum number of retransmissions" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> for 1.28 Mcps TDD, if the IE "E-DCH MAC-d flow retransmission timer" is included:

2> configure the retransmission timer for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU’s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

1> else:

2> if previously the IE "E-DCH MAC-d flow multiplexing list" was already received for this E-DCH MAC-d flow:

3> continue to only multiplex E-DCH PDU’s from the E-DCH MAC-d flow indicated in the IE “E-DCH MAC-d flow identity” with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed according to the previously received IE “E-DCH MAC-d flow multiplexing list”.

2> else (never received the IE "E-DCH MAC-d flow multiplexing list" for this E-DCH MAC-d flow):

3> allow multiplexing of MAC-d PDU’s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU’s from any other E-DCH MAC-d flow in the same MAC-e PDU.

1> for FDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled transmission grant HARQ process allocation" is configured for this MAC-d flow:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e or MAC-i PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission grant HARQ process allocation", with a total contribution from this MAC-d flow (i.e. including MAC-e/es or MAC-i/is headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

3> else:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e or MAC-i PDU transmitted by any HARQ process, with a total contribution from this MAC-d flow (i.e. including MAC-e/es or MAC-i/is headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDU's for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH/E-RGCH (see [15]).

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e or MAC-i PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (for 3.84 Mcps TDD and 7.68 Mcps TDD, as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity"; for 1.28Mcps TDD, as determined from the IEs "Activation Time", "Subframe number", "Resource Duration" and "Resource Periodicity", and the calculation of assigned Non-scheduled transmission grant is specified in subclause 8.6.6.16a ).

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDUs for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH (see [15]).

1> perform the actions as specified in subclause 8.5.21;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the UE is in TDD mode and shared transport channels are assigned to the UE:

3> start to receive the indicated Secondary CCPCH.

2> if the UE is in TDD mode and no shared transport channels are assigned to the UE:

3> set the variable UNSUPPORTED_CONFIGURATION to TRUE.

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link and no longer consider any other radio link as serving HS-DSCH radio link.

2> For FDD:

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link.

3> if the IE "E-AGCH Info" is included for the serving E-DCH radio link:

4> store the newly received E-AGCH configuration.

NOTE: The UTRAN should always include the IE "E-AGCH info" if the serving E-DCH radio link indicated in the message is another radio link than the serving E-DCH radio link prior to the procedure.

3> if the IE "E-HICH information" is included:

4> store this E-HICH configuration for the concerning radio link.

3> if the IE "E-HICH information" is included or previously stored:

4> store this E-RGCH configuration for the concerning radio link, if included.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for TDD:

3> if the IE "E-AGCH Info" is included:

4> store the newly received E-AGCH configuration.

3> if the IE "E-HICH information" is included:

4> store the E-HICH configuration.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link;

4> if the serving HS-DSCH radio link was another radio link than this radio link prior to reception of the message and the IE "H-RNTI" is not included:

5> clear the variable H_RNTI.

3> if the IE "Serving HS-DSCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving HS-DSCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving HS-DSCH radio link.

3> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link;

4> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:

5> if the IE "New Primary E-RNTI" is not included:

6> clear the Primary E-RNTI stored in the variable E_RNTI.

5> if the IE "New Secondary E-RNTI" is not included:

6> clear the Secondary E-RNTI stored in the variable E_RNTI.

3> if the IE "Serving E-DCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving E-DCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving E-DCH radio link.

3> if the IE "E-HICH release indicator" is present:

4> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.

3> if the IE "E-RGCH release indicator" is present:

4> delete the stored E-RGCH configuration for this RL.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> For TDD:

3> if the IE "H-RNTI" is not included and the primary CCPCH has changed:

4> clear the variable H_RNTI.

3> determine the value for the HS-DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

2> for TDD:

3> if the IE "New Primary E-RNTI" is not included:

4> clear the variable E_RNTI.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:

3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.

NOTE: The Release '99 RADIO BEARER RECONFIGURATION message always includes at least one IE "Downlink information for each radio link" containing the mandatory IEs, even if UTRAN does not require the reconfiguration of any radio link.

1> if the UE would enter either the CELL_FACH, CELL_PCH or URA_PCH state according to subclause 8.6.3.3 applied on the received message:

2> if IEs other than the IE "Primary CPICH info" (for FDD) or the IE "Primary CCPCH info" (for TDD) are included in the IE "Downlink information for each radio link":

3> ignore these IEs.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> for FDD:

2> if the IE "E-DPCCH Info" is included:

3> store the newly received E-DPCCH configuration.

2> if the IE "E-DPDCH Info" is included:

3> store the newly received E-DPDCH configuration.

2> if the IE "UL 16QAM settings" is not included:

3> indicate to lower layers to stop any operation in 16QAM mode.

1> for 3.84/7.68 Mcps TDD:

2> if the IE "E-RUCCH Info" is included:

3> store the newly received E-RUCCH configuration.

2> if the IE "E-PUCH Info" is included:

NOTE 1: The UTRAN should ensure the ordering of the E-TFCI table in strictly increasing order of transmission power prior to quantization, by correct setting of the reference E-TFCI power offsets otherwise the UE behaviour is unspecified.

NOTE 2: If a reference E-TFCI signalled to the UE is outside the UE physical channel capability, the UE behaviour is unspecified.

NOTE 2a: If E-TFCI boost is signalled to the UE and a reference E-TFCI <= E-TFCI Boost is signalled to the UE with a Reference E-TFCI PO of value 30 or 31, the UE behaviour is unspecified.

1> if the IE "MAC-es/e reset indicator" is included:

2> reset the MAC-es/e or MAC-i/is entity [15].

NOTE 3: If the IE "MAC-es/e reset indicator" is not set to TRUE in case the IE "E-DCH Transmission Time Interval" is reconfigured, the UE behaviour is unspecified.

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> configure the UL E-DPCCH in accordance with the stored IE "E-DPCCH" configuration;

2> configure the MAC with the stored IE "E-DPDCH" configuration and/or the information contained in IE "Scheduled Transmission configuration".

1> for TDD:

2> configure the E-RUCCH with the stored E-RUCCH configuration;

2> configure the MAC with the stored E-PUCH configuration.

Reference

3GPP TS 25.331 clauses 8.5.28, 8.6.3.14, 8.6.5.5, 8.6.5.16, 8.6.5.17, 8.6.5.18, 8.6.6.4, 8.6.6.37

### 8.1.2.17.3 Test purpose

To confirm that the UE establishes a signaling radio bearer mapped to HS-DSCH and E-DCH according to the received RRC CONNECTION SETUP message.

### 8.1.2.17.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: Registered Idle Mode on PS(state 3), or CS/PS (state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD) or E-PUCH(TDD)
- UE fully supports F-DPCH (FDD only)

Test Procedure

The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH, after the test operator makes an out-going call. The SS transmits a RRC CONNECTION SETUP message to the UE. This message requests the establishment of a signalling radio bearer with SRB mapping to HS-DSCH and E-DCH. After the UE receives this message, it establishes a signalling radio bearer and maps it to the HS-DSCH and E-DCH. Finally the UE transmits a

RRC CONNECTION SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | RRC CONNECTION REQUEST | The SS prompts the operator makes an out-going call. The UE shall transmit this message, indicating the proper establishment cause. |
| 2 | ← | | RRC CONNECTION SETUP | |
| 3 | → | | RRC CONNECTION SETUP COMPLETE | |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RRC CONNECTION REQUEST (Step 1)

The same message sub-type found in clause 9 of TS 34.108 applies, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Registered TMSI or P-TMSI |
| Establishment Cause | Originating Interactive Call or Originating Background Call or Originating Streaming Call. |

RRC CONNECTION SETUP (Step 2)

Use the same message as specified for "Stand-alone SRBs mapped on E-DCH and HS-DSCH " in 34.108.

RRC CONNECTION SETUP COMPLETE (Step 3)

Use the same message sub-type found in clause 9 of TS 34.108

#### 8.1.2.17.5 Test requirements

After step 2, the UE shall transmit a RRC CONNECTION SETUP COMPLETE message.

### 8.1.2.18 RRC Connection Establishment using the default configuration for HS-DSCH / E-DCH signalling bearers

#### 8.1.2.18.1 Definition

All UEs which support FDD and HS-PDSCH and E-DCH and fully support F-DPCH or all UEs which support TDD and HS-PDSCH and E-PUCH.

#### 8.1.2.18.2 Conformance requirement

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

If the values are different, the UE shall:

1> ignore the rest of the message.

If the values are identical, the UE shall:

---

---

2> if IE "Specification mode" is set to "Preconfiguration" and IE "Preconfiguration mode" is set to "Default configuration":

3> initiate the radio bearer and transport channel configuration in accordance with the default parameters identified by the IE "Default configuration mode" and IE "Default configuration identity";

3> initiate the physical channels in accordance with the received physical channel information elements.

NOTE: IE "Default configuration mode" specifies whether the FDD or TDD version of the default configuration shall be used.

Reference

3GPP TS 25.331 clause 8.1.3.6, clause 13.7

### 8.1.2.18.3 Test purpose

To confirm that the UE establishes the radio bearer and transport channel configuration for HS-DSCH / E-DCH signalling radio bearers in accordance with the stored default parameters as identified by the IE “Default configuration identity” specified in the RRC Connection Setup Message

### 8.1.2.18.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: Idle state (state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD) or E-PUCH(1.28Mcps TDD)
- UE fully supports F-DPCH (FDD only)

Test Procedure

The UE shall transmit a RRC CONNECTION REQUEST message to the SS on the uplink CCCH, after the operator attempts to make an outgoing call. SS shall send a RRC CONNECTION SETUP message that contains the stored default configuration identity 17 (for standalone HS-DSCH / E-DCH signalling radio bearers). The UE accepts the message, configuring the radio bearer and transport channel configuration in accordance with the stored default parameters and acknowledge the establishment of RRC connection by sending the RRC CONNECTION SETUP COMPLETE message on uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | Operator is asked to make an outgoing call. |
| 2 | → | | RRC CONNECTION REQUEST | |
| 3 | ← | | RRC CONNECTION SETUP | DefaultConfigIdentity used is ‘17’ |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state the test passes, otherwise it fails. |

Specific Message Contents

RRC CONNECTION REQUEST (Step 2)

The same message sub-type found in clause 9 of TS 34.108 applies, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Same as the registered TMSI or P-TMSI |
| Establishment Cause | Originating Interactive Call or Originating Background Call or Originating Streaming Call. |

RRC CONNECTION SETUP (Step 3) (FDD)

Use the same message sub-type found in clause 9 of TS 34.108 (Transition to CELL_DCH), for condition "Stand-alone SRBs mapped on E-DCH and HS-DSCH " with the following exceptions:

| **Information Element** | **Value/remark** |
|---|---|
| Choice Specification Mode | Preconfiguration |
| - Choice Preconfig Mode | Default Config |
| - Default Config Mode | FDD |
| -Default Config Identity | 17 |

RRC CONNECTION SETUP (Step 3) (1.28Mcps TDD)

Use the same message sub-type found in clause 9 of TS 34.108 (Transition to CELL_DCH), for condition "Stand-alone SRBs mapped on E-DCH and HS-DSCH " with the following exceptions:

| **Information Element** | **Value/remark** |
|---|---|
| Choice Specification Mode | Preconfiguration |
| - Choice Preconfig Mode | Default Config |
| - Default Config Mode | TDD |
| -Default Config Identity | 17 |

RRC CONNECTION SETUP COMPLETE (Step 4)

Use the same message sub-type found in clause 9 of TS 34.108

#### 8.1.2.18.5 Test requirement

At step 4 the UE shall transmit a RRC CONNECTION SETUP COMPLETE message on Radio Bearer Id: 2 and establish an RRC connection.

### 8.1.2.19 RRC Connection Establishment for transition from Idle Mode to CELL_DCH: Success (start of discontinuous uplink transmission and downlink reception)

#### 8.1.2.19.1 Definition and applicability

All UEs which support FDD and UL DTX.

#### 8.1.2.19.2 Conformance requirement

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

If the values are different, the UE shall:

1> ignore the rest of the message.

If the values are identical, the UE shall:

…

1> submit an RRC CONNECTION SETUP COMPLETE message to the lower layers on the uplink DCCH after successful state transition per subclause 8.6.3.3, with the contents set as specified below:

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> use the newly received DTX-DRX timing configuration.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.1.3.6, 8.5.34, 8.6.6.38, 8.6.6.39

### 8.1.2.19.3 Test purpose

To confirm that the UE establishes a signaling radio bearer mapped to HS-DSCH and E-DCH, with discontinuous transmission and reception according to the received RRC CONNECTION SETUP message.

### 8.1.2.19.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: Registered Idle Mode on PS(state 3), or CS/PS (state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports DPCCH Discontinuous Transmission

Test Procedure

The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH, after the test operator makes an out-going call. The SS transmits a RRC CONNECTION SETUP message to the UE. This message requests the establishment of a signalling radio bearer with SRB mapping to HS-DSCH and E-DCH and provides DTX and DRX parameters. After the UE receives this message, it establishes a signalling radio bearer and maps it to the HS-DSCH (with DRX enabled if supported) and E-DCH (with DTX enabled). Finally the UE transmits a RRC CONNECTION SETUP COMPLETE message using AM RLC. The SS waits to allow sufficient time for DTX cycle 2

to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | RRC CONNECTION REQUEST | The SS prompts the operator makes an out-going call. The UE shall transmit this message, indicating the proper establishment cause. |
| 2 | ← | | RRC CONNECTION SETUP | Requests establishment of SRBs mapped to HS-DSCH/E-DCH with DTX-DRX information, |
| 3 | → | | RRC CONNECTION SETUP COMPLETE | |
| 4 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RRC CONNECTION REQUEST (Step 1)

The same message sub-type found in clause 9 of TS 34.108 applies, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Registered TMSI or P-TMSI |
| Establishment Cause | Originating Interactive Call or Originating Background Call or Originating Streaming Call. |

RRC CONNECTION SETUP (Step 2)

Use the same message as specified for "Stand-alone SRBs mapped on E-DCH and HS-DSCH" in 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| DTX-DRX timing information | |
| CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 16 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE *E-DCH TTI length* | 10ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |

RRC CONNECTION SETUP COMPLETE (Step 3)

Use the same message sub-type found in clause 9 of TS 34.108

#### 8.1.2.19.5 Test requirements

At step 3, the UE shall transmit a RRC CONNECTION SETUP COMPLETE message.

At step 4 the time taken to report 10 consecutive CQI indications shall be 400ms.

### 8.1.2.20 RRC Connection Establishment for transition from Idle Mode to CELL_FACH: Success (Start of HS-DSCH Reception)

#### 8.1.2.20.1 Definition and applicability

All UEs which support FDD and HS-PDSCH in CELL_FACH.

#### 8.1.2.20.2 Conformance requirement

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

…

1> if the UE supports HS-DSCH reception in CELL_FACH state:

2> include the IE "HS-PDSCH in CELL_FACH" and set it to TRUE.

…

The UE shall compare the value of the IE "Initial UE identity" in the received RRC CONNECTION SETUP message with the value of the variable INITIAL_UE_IDENTITY.

If the values are different, the UE shall:

1> ignore the rest of the message.

If the values are identical, the UE shall:

…

2> if IE "Specification mode" is set to "Complete specification":

…

3> if the IE "HS-DSCH common system information" is not included in System Information Block type 5 or System Information Block type 5bis:

4> select Secondary CCPCH according to subclause 8.5.19;

3> else:

4> set variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED to FALSE;

4> if the RBs have the multiplexing option with transport channel type "HS-DSCH" for the DL and transport channel type “RACH” in the UL; and

4> if "new H-RNTI" and "new C-RNTI" are included:

5> store the "new H-RNTI" according to subclause 8.6.3.1b;

5> store the "new C-RNTI" according to subclause 8.6.3.9;

5> and start to receive HS-DSCH according to the procedure in subclause 8.5.36.

4> else:

5> clear variable C_RNTI and delete any stored C-RNTI value;

5> clear variable H_RNTI and delete any stored H-RNTI value;

5> clear any stored IE "HARQ Info";

5> set the variable INVALID_CONFIGURATION to TRUE.

…

1> submit an RRC CONNECTION SETUP COMPLETE message to the lower layers on the uplink DCCH after successful state transition per subclause 8.6.3.3, with the contents set as specified below:

2> set the IE "RRC transaction identifier" to:

3> the value of "RRC transaction identifier" in the entry for the RRC CONNECTION SETUP message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry.

2> if the USIM or SIM is present:

3> set the "START" for each CN domain in the IE "START list" in the RRC CONNECTION SETUP COMPLETE message with the corresponding START value that is stored in the USIM [50] if present, or as stored in the UE if the SIM is present; and then

3> set the START value stored in the USIM [50] if present, and as stored in the UE if the SIM is present for any CN domain to the value "THRESHOLD" of the variable START_THRESHOLD.

…

The variable HS_DSCH_RECEPTION_CELL_FACH_STATE shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_FACH;

1> the variable H_RNTI is set;

1> the variable C_RNTI is set;

1> System Information Block type 5 or System Information Block type 5bis includes IE "HS-DSCH common system information".

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_CELL_FACH_STATE to FALSE;

1> if the UE is in CELL_FACH and variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to FALSE:

2> set the variable HS_DSCH_RECEPTION_GENERAL to FALSE;

2> stop any HS_SCCH reception procedures;

2> stop any HS-DSCH reception procedures;

2> clear the variable H_RNTI and remove any stored H-RNTI;

2> reset the MAC-ehs entity [15];

2> release all HARQ resources;

2> clear any stored IEs "HARQ info";

Whenever the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> use the IE "HS-DSCH common system information" in System Information Block type 5 or System Information Block type 5bis;

1> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving cell applying the scrambling code as received in the IE "DL Scrambling code" as received in IE "HS-DSCH common system information";

1> perform HS-DSCH reception procedures:

2> if the UE has a stored IE "HARQ info":

3> act on subclause 8.6.5.6b for the stored IE "HARQ info".

2> else:

3> act on subclause 8.6.5.20 for the IE "HARQ System info" as received in IE "HS-DSCH common system information".

2> and use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

1> and for BCCH reception perform HS-DSCH reception procedures by listening to the first indexed HS-SCCH code listed in the IE "HS-SCCH channelisation code" with "BCCH specific H-RNTI" as received in IE "HS-DSCH common system information".

Whenever the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to FALSE, the UE shall:

1> if the UE is in CELL_FACH and variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to FALSE:

2> not perform HS_SCCH reception procedures;

2> not perform HS-DSCH reception procedures.

…

When UE does not support HS-DSCH reception or when the IE "HS-DSCH common system information" is not included in System Information Block type 5 or System Information Block type 5bis, the UE shall:

1> set HS_DSCH_RECEPTION_OF_CCCH_ENABLED to FALSE;

1> set the variable HS_DSCH_RECEPTION_GENERAL to FALSE.

When HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> use the IE "HS-DSCH common system information" in System Information Block type 5 or System Information Block type 5bis;

1> configure the HARQ according to IE "HARQ System info" as defined in subclause 8.6.5.20;

1> configure the common MAC-ehs reordering queues according to IE "Common MAC-ehs reordering queues" as defined in subclauses 8.6.5.22; and then

1> receive the CCCH according to IE "CCCH mapping info" as defined in subclause 8.6.5.21;

1> if the UE is RRC Connected mode:

2> select a common H-RNTI as specified in 8.5.38;

2> receive the SRB1 according to IE "SRB1 mapping info" as defined in subclause 8.6.5.19.

1> else:

2> select a common H-RNTI as specified in [4].

1> and start to receive the HS-SCCH(s) with selected H-RNTI according to the IE "HS-SCCH channelisation code" on the selected cell applying the scrambling code as received in the IE "DL Scrambling code";

1> configure the MAC flow for BCCH reception as specified in [15];

1> and start to receive the first indexed HS-SCCH code listed in the IE "HS-SCCH channelisation code" with "BCCH specific H-RNTI" as received in IE "HS-DSCH common system information".

Reference

3GPP TS 25.331 clauses 8.1.3.3, 8.1.3.6, 8.5.36, 8.5.37

### 8.1.2.20.3 Test purpose

To confirm that the UE establishes a signaling radio bearer mapped to HS-DSCH and RACH according to the received RRC CONNECTION SETUP message.

### 8.1.2.20.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: Registered Idle Mode on PS(state 3), or CS/PS (state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH in CELL_FACH

Test Procedure

The SS transmits System Information Type 5 including configuration for HS-DSCH reception in CELL_FACH state.

The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH, after the test operator makes an out-going call.

The SS transmits a RRC CONNECTION SETUP message to the UE on RB0 mapped to HS-DSCH. This message requests the establishment of a signalling radio bearer with SRB mapping to HS-DSCH and RACH. After the UE receives this message, it establishes a signalling radio bearer and maps it to the HS-DSCH and RACH. Finally the UE transmits a RRC CONNECTION SETUP COMPLETE message using AM RLC on the RACH channel.

SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ← | | SYSTEM INFORMATION TYPE 5 | Includes configuration for HS-DSCH reception in CELL_FACH state |
| 1 | → | | RRC CONNECTION REQUEST | The SS prompts the operator makes an out-going call. The UE shall transmit this message, indicating the correct establishment cause and support of HS-PDSCH in CELL_FACH |
| 2 | ← | | RRC CONNECTION SETUP | Transmitted on HS-DSCH, requests establishment of SRBs mapped to HS-DSCH/RACH, |
| 3 | → | | RRC CONNECTION SETUP COMPLETE | |
| 4 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

SYSTEM INFORMATION TYPE 5

<FFS>

RRC CONNECTION REQUEST (Step 1)

Use the same message type found in clause 9 of TS 34.108, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Initial UE identity | Same as the registered TMSI or P-TMSI |
| Establishment Cause | Originating Interactive Call or Originating Background Call or Originating Streaming Call |
| HS-PDSCH in CELL_FACH | Check to see if set toTRUE |

RRC CONNECTION SETUP (Step 2)

<FFS>

RRC CONNECTION SETUP COMPLETE (Step 3)

Use the same message type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| UE Radio Access Capability | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |
| UE radio access capability extension | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |
| UE system specific Capability | Checked to see if compatible with the stated capability in PIXIT/PICS statements. |

#### 8.1.2.20.5 Test requirements

After step 3 the UE shall establish the RRC connection, and transmit RRC CONNECTION SETUP COMPLETE message on the DCCH using PRACH physical resource specified in system information block messages.

## 8.1.3 RRC Connection Release

### 8.1.3.1 RRC Connection Release in CELL_DCH state: Success

#### 8.1.3.1.1 Definition

#### 8.1.3.1.2 Conformance requirement

1. The UE shall receive and act on an RRC CONNECTION RELEASE message in states CELL_DCH and CELL_FACH. Furthermore this procedure can interrupt any ongoing procedures with the UE in the above listed states.

   When the UE receives the first RRC CONNECTION RELEASE message, it shall:

   …

   - in state CELL_DCH:

     - initialise the counter V308 to zero;

     …

     - submit an RRC CONNECTION RELEASE COMPLETE message to the lower layers for transmission using UM RLC on the DCCH to the UTRAN;

       …

- start timer T308 when the RRC CONNECTION RELEASE COMPLETE message is sent on the radio interface.

2. When in state CELL_DCH and the timer T308 expires, the UE shall:

- increment V308 by one;
- if V308 is equal to or smaller than N308:
  - retransmit the RRC CONNECTION RELEASE COMPLETE message, without incrementing "Uplink RRC Message sequence number" for signalling radio bearer RB1 in the variable INTEGRITY_PROTECTION_INFO;
- if V308 is greater than N308:
  - release all its radio resources;

  …

  - enter idle mode;
  - perform the actions specified in TS 25.331 clause 8.5.2 when entering idle mode;
  - and the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.4.3, 8.1.4.6

#### 8.1.3.1.3 Test purpose

To verify:

1. that the UE when receiving an RRC CONNECTION RELEASE message transmits N308+1 RRC CONNECTION RELEASE COMPLETE messages before release of radio resources and entering into idle mode
2. that the time between UE transmissions of the RRC CONNECTION RELEASE COMPLETE message is equal to the value of the T308 timer.

#### 8.1.3.1.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CELL_DCH state (state 6-1 or state 6-3) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE

Test Procedure

The UE is brought to the CELL_DCH state by prompting the operator to initiate an outgoing call. After the DCCH is established, on reception of (CM) service request message from the UE, the SS will Send CM Service Reject message (for state 6-1) or Service Reject message (for state 6-3) to complete the (CM) service Request procedure. After the UE is brought into the stable state, SS transmits an RRC CONNECTION RELEASE message to the UE to disconnect the connection. SS then waits for the UE to transmit an RRC CONNECTION RELEASE COMPLETE message using unacknowledged mode. SS checks to see if UE re-transmit this message at each expiry of T308 timer and if N308+1 RRC CONNECTION RELEASE COMPLETE message have been received. SS calls for generic procedure C.1 to check that UE is in Idle Mode state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_DCH state after a successful RRC connection establishment by virtue of the operator making an outgoing call. |
| 2 | ← | | RRC CONNECTION RELEASE | SS disconnect the connection established. The value in IE "N308" is arbitrarily chosen from 1 to 8. |
| 3 | → | | RRC CONNECTION RELEASE COMPLETE | SS waits for the arrival of N308 + 1 such message with an interarrival time of T308, using unacknowledged mode. |
| 4 | | | | SS verifies that the UE release its L2 signalling radio bearer and dedicated resources and enters idle mode. |
| 5 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in Idle Mode state, the test passes, otherwise it fails. |

Specific Message Content

RRC CONNECTION RELEASE (Step 2)

Use the same message type found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| N308 | Arbitrarily chosen between 1 and 8 |

#### 8.1.3.1.5 Test requirement

After step 2 the UE shall transmit N308 + 1 RRC CONNECTION RELEASE COMPLETE messages. The time between the transmissions shall be equal to the T308 timer value.

After step 3 the UE shall initiate the release of the L2 signalling radio bearer and dedicated resources and enter idle mode.

### 8.1.3.2 RRC Connection Release using on DCCH in CELL_FACH state: Success

#### 8.1.3.2.1 Definition

#### 8.1.3.2.2 Conformance requirement

The UE shall receive and act on an RRC CONNECTION RELEASE message in states CELL_DCH and CELL_FACH. Furthermore this procedure can interrupt any ongoing procedures with the UE in the above listed states.

When the UE receives the first RRC CONNECTION RELEASE message; and

1> if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or

1> if the message is received on DCCH:

the UE shall:

…

1> in state CELL_FACH:

2> if the RRC CONNECTION RELEASE message was received on the DCCH:

3> set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS;

3> submit an RRC CONNECTION RELEASE COMPLETE message to the lower layers for transmission using AM RLC on the DCCH to the UTRAN.

3> when the successful transmission of the RRC CONNECTION RELEASE COMPLETE message has been confirmed by the lower layers:

4> release all its radio resources; and

4> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers; and

4> clear any entry for the RRC CONNECTION RELEASE message in the tables "Accepted transactions" and "Rejected transactions" in the variable TRANSACTIONS;

4> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

4> clear the variable ESTABLISHED_RABS;

4> pass the value of the IE "Release cause" received in the RRC CONNECTION RELEASE message to upper layers;

4> enter idle mode;

4> perform the actions specified in TS 25.331 subclause 8.5.2 when entering idle mode.

3> and the procedure ends.

…

Reference

3GPP TS 25.331 clause 8.1.4.3.

### 8.1.3.2.3 Test purpose

To confirm that the UE releases the L2 signalling radio bearer and resources and goes back to the idle state after it receives an RRC CONNECTION RELEASE message on downlink DCCH from the SS. It shall transmit an RRC CONNECTON RELEASE COMPLETE message using acknowledged mode on uplink DCCH to the SS.

### 8.1.3.2.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_FACH state (state 6-2 or state 6-4) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is brought to an initial state of CELL_FACH. After the successful establishment of the RRC connection, on reception of (CM) service request message from the UE, the SS will send CM Service Reject message (for state 6-2) or Service Reject message (for state 6-4) to complete the (CM) service Request procedure. After the UE is brought into the stable state, the SS transmits an RRC CONNECTION RELEASE message to the UE to disconnect the radio link. When the UE receives this message the UE transmits an RRC CONNECTION RELEASE COMPLETE message using acknowledged mode to the SS. Finally, SS checks that the UE performs proper release of all radio resources and then goes back to idle mode.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_FACH state. |
| 2 | ← | | RRC CONNECTION RELEASE | SS sends this message using unacknowledged mode RLC operations on the uplink DCCH. |
| 3 | → | | RRC CONNECTION RELEASE COMPLETE | The UE transmits this message using acknowledged mode. |
| 4 | | | | The UE releases L2 signalling radio bearer and radio resources. Then the UE goes to idle mode. |

Specific Message Contents

None.

#### 8.1.3.2.5 Test requirement

After step 2 the UE shall transmit an RRC CONNECTION RELEASE COMPLETE message using acknowledged mode then it shall receive a response for this message from the SS-RLC.

After step 3 the UE shall release its L2 signalling radio bearers and radio resources, then it shall go back to idle mode.

### 8.1.3.3 RRC Connection Release using on CCCH in CELL_FACH state: Success

#### 8.1.3.3.1 Definition

#### 8.1.3.3.2 Conformance requirement

The UE shall receive and act on an RRC CONNECTION RELEASE message in states CELL_DCH and CELL_FACH. Furthermore this procedure can interrupt any ongoing procedures with the UE in the above listed states.

When the UE receives the first RRC CONNECTION RELEASE message; and

1> if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or

1> if the message is received on DCCH:

the UE shall:

…

1> in state CELL_FACH:

…

2> if the RRC CONNECTION RELEASE message was received on the CCCH:

3> release all its radio resources;

3> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to the upper layers;

3> clear any entry for the RRC CONNECTION RELEASE message in the tables "Accepted transactions" and "Rejected transactions" in the variable TRANSACTIONS;

3> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

3> clear the variable ESTABLISHED_RABS;

3> pass the value of the IE "Release cause" received in the RRC CONNECTION RELEASE message to upper layers;

3> enter idle mode;

3> perform the actions specified in TS 25.331 subclause 8.5.2 when entering idle mode;

3> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.4.3.

#### 8.1.3.3.3 Test purpose

To confirm that the UE releases all its radio resources upon the reception of a RRC CONNECTION RELEASE message on the downlink CCCH, without transmitting RRC CONNECTION RELEASE COMPLETE message on the uplink.

#### 8.1.3.3.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_FACH state (state 6-2 or state 6-4) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is brought to an initial state of CELL_FACH. After the successful establishment of the RRC connection, on reception of (CM) service request message from the UE, the SS will send CM Service Reject message (for state 6-2) or Service Reject message (for state 6-4) to complete the (CM) service Request procedure. After the UE is brought into the stable state, the SS transmits an RRC CONNECTION RELEASE message on the downlink CCCH. The UE shall terminate the RRC connection and release all radio resources allocated to it. SS monitors the uplink DCCH and CCCH to verify that no transmission is detected. SS calls for generic procedure C.1 to check that UE is in Idle Mode state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_FACH state. |
| 2 | ← | | RRC CONNECTION RELEASE | SS transmits this message with the contents identical to that found in TS 34.108 clause 9 on downlink CCCH. |
| 3 | | | | SS waits for a period equivalent to 60 seconds. The UE shall not send any response message on uplink direction during this period. It shall release the radio resources allocated and return to idle mode. |
| 4 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in Idle Mode state, the test passes, otherwise it fails. |

Specific Message Contents

None.

#### 8.1.3.3.5 Test requirement

After step 2 the UE shall release all its radio resources, return to idle mode, without transmitting RRC CONNECTION RELEASE COMPLETE message on the uplink direction.

### 8.1.3.4 RRC Connection Release in CELL_FACH state: Failure

#### 8.1.3.4.1 Definition

#### 8.1.3.4.2 Conformance requirement

When acknowledged mode was used and RLC does not succeed in transmitting the RRC CONNECTION RELEASE COMPLETE message, the UE shall:

1> release all its radio resources;

1> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;

1> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

1> clear the variable ESTABLISHED_RABS;

1> enter idle mode;

1> perform the actions specified in TS 25.331 subclause 8.5.2 when entering idle mode;

1> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.4.9.

#### 8.1.3.4.3 Test purpose

To confirm that the UE releases all its radio resources and enters idle mode when the UE does not succeed in transmitting the RRC CONNECTION RELEASE COMPLETE message using acknowledged mode to the SS (i.e. the UE-RLC does not receive an acknowledgement for the transmission of the RRC CONNECTION RELEASE COMPLETE message from SS).

#### 8.1.3.4.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CELL_FACH state (state 6-2 or state 6-4) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE

Test Procedure

At the start of the test, the UE is brought to CELL_FACH state. When the RRC connection has been established, on reception of (CM) service request message from the UE, the SS will send CM Service Reject message (for state 6-2) or Service Reject message (for state 6-4) to complete the (CM) service Request procedure. After the UE is brought into the stable state, the SS transmits an RRC CONNECTION RELEASE message to the UE to disconnect the radio link. When the UE receives this message the UE transmits an RRC CONNECTION RELEASE COMPLETE message using acknowledged mode to the SS. The SS ignores the message and does not transmit an RLC STATUS PDU to acknowledge this message. SS checks to see that UE continues to release all its radio resources and then enters idle mode.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought into CELL_FACH state by asking the operator to perform an outgoing call attempt. |
| 2 | ← | | RRC CONNECTION RELEASE | SS ask to disconnect the radio link |
| 3 | → | | RRC CONNECTION RELEASE COMPLETE | The UE transmits this message using acknowledged mode. The SS shall not transmit an RLC STATUS PDU to acknowledge this message. |
| 4 | | | | SS checks to make sure that UE releases all its radio resources and enters idle mode. |
| 5 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in Idle Mode state, the test passes, otherwise it fails. |

Specific Message Contents

None

#### 8.1.3.4.5 Test requirement

After step 3 the UE shall release its L2 signalling radio bearers and radio resources then it shall go to idle mode.

### 8.1.3.5 RRC Connection Release in CELL_FACH state: Invalid message

#### 8.1.3.5.1 Definition

#### 8.1.3.5.2 Conformance requirement

If the RRC CONNECTION RELEASE message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, and if the "protocol error cause" in

PROTOCOL_ERROR_INFORMATION is set to any cause value except "ASN.1 violation or encoding error", the UE shall perform procedure specific error handling as follows:

The UE shall:

1> ignore any IE(s) causing the error but treat the rest of the RRC CONNECTION RELEASE message as normal according to TS 25.331 subclause 8.1.4.3, with an addition of the following actions:

2> if the RRC CONNECTION RELEASE message was received on the DCCH:

3> set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Rejected transactions" in the variable TRANSACTIONS;

3> include the IE "Error indication" in the RRC CONNECTION RELEASE COMPLETE message with:

4> the IE "Failure cause" set to the cause value "Protocol error"; and

4> the IE "Protocol error information" set to the value of the variable PROTOCOL_ERROR_INFORMATION.

…

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, containing an undefined critical message extension, the UE shall:

1> set the variable PROTOCOL_ERROR_REJECT to TRUE;

1> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Message extension not comprehended";

1> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:

2> store the IE "Message type" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and

2> set the IE "RRC transaction identifier" to zero in that table entry.

1> perform procedure specific error handling according to TS 25.331 clause 8.

Reference

3GPP TS 25.331 clause 8.1.4 and 9.3b.

#### 8.1.3.5.3 Test purpose

When the UE receives an invalid RRC CONNECTION RELEASE message on the downlink DCCH, it shall transmit an RRC CONNECTION RELEASE COMPLETE message that includes the appropriate error cause on the uplink DCCH.

8.1.3.5.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CELL_FACH state (state 6-2 or state 6-4)as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is initially in CELL FACH state. on reception of (CM) service request message from the UE, the SS will Send CM Service Reject message (for state 6-2) or Service Reject message (for state 6-4) to complete the (CM) service Request procedure. After the UE is brought into the stable state, the SS transmits an RRC CONNECTION RELEASE message containing an unexpected critical message extension on the DCCH to request the UE to disconnect the RRC connection. The UE shall transmit an RRC CONNECTION RELEASE COMPLETE message on the uplink DCCH, which includes the IE "Error indication". This IE shall contain the "Protocol error information" IE which in turn contains the IE “Protocol error cause” set to "Message extension not comprehended". Upon completion of the procedure, the SS calls for generic procedure C.1 to check that UE is in IDLE state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | | | Void | |
| 6 | | | Void | |
| 7 | | | Void | |
| 8 | ← | | RRC CONNECTION RELEASE | See specific message contents for this message |
| 9 | → | | RRC CONNECTION RELEASE COMPLETE | See specific message contents for this message This message is sent using acknowledged mode. |
| 10 | | | Void | |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in IDLE state, the test passes, otherwise it fails. |

Specific Message Contents

RRC CONNECTION RELEASE (Step 8)

This message must be recognised by the UE as an RRC CONNECTION RELEASE message. However, it shall be constructed (see TS 25.331 clause 10.1.1) such that the UE will detect critical extensions not defined for the protocol release supported by the UE:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects an integer between 0 and 3 |
| Integrity check info | Not present |
| Critical extensions | ’FF’H |

RRC CONNECTION RELEASE COMPLETE (Step 9)

Check to see if the same message type found in clause 9 of TS 34.108 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Error indication<br>- Failure cause<br>- Protocol error information<br>- CHOICE diagnostics type<br>- Protocol error cause | <br>'Protocol error'<br><br>Protocol error cause<br>Check to see if set to 'Message extension not comprehended' |

#### 8.1.3.5.5 Test requirement

After step 8 the UE shall transmit an RRC CONNECTION RELEASE COMPLETE message which includes the appropriate cause values in IE "Protocol error information".

After step 12 the UE shall be in IDLE state.

### 8.1.3.6 RRC Connection Release in CELL_DCH state (Frequency modification): Success

#### 8.1.3.6.1 Definition

#### 8.1.3.6.2 Conformance requirement

If the UE first receives an RRC CONNECTION RELEASE message in CELL_DCH state, it shall:

- initialize the counter V308 to zero;
- submit an RRC CONNECTION RELEASE COMPLETE message to the lower layers for transmission using UM RLC on the DCCH to the UTRAN;
- start timer T308 when the RRC CONNECTION RELEASE COMPLETE message is sent on the radio interface.

If the timer T308 expires, the UE shall:

- increment V308 by one;
- if V308 is equal to or smaller than N308:
  - retransmit the RRC CONNECTION RELEASE COMPLETE message;
- if V308 is greater than N308:
  - release all its radio resources;
  - enter idle mode;
  - perform cell-selection according to TS25.304;
  - procedure end;

Reference

3GPP TS 25.331 clause 8.1.4.

#### 8.1.3.6.3 Test purpose

To confirm that when the UE receives an RRC CONNECTION RELEASE message the UE transmits N308+1 RRC CONNECTION RELEASE COMPLETE messages using UM on DCCH.

To confirm that the UE enters into idle mode with performing cell-selection and selecting new cell configured by SS.

#### 8.1.3.6.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE

Specific Message Content

For system information block 11 for Cell 1 (gives IE's which are different from defaults given in 34.108 sec 6.1) to be transmitted before idle update preamble.

System Information Block type 11

Use same message sub-clause 6.1 of TS 34.108, with following exception:

| Information Element | Value/remark |
|---|---|
| - SIB12 indicator | FALSE |
| - Intra-frequency measurement system information | Not Present |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - New inter-frequency cell id | |
| - Inter frequency cell id | 6 |
| - Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to apply the default duplex distance defined for the operating frequency according to 25.101 |
| - UARFCN downlink(Nd) | Reference to table 6.1.2 of TS34.108 for Cell 6 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.6 (FDD)" in clause 6.1.4 of TS34.108 |
| - Primary CPICH Tx power | Not present |
| - Cell Selection and Re-selection Info | |
| - $Qoffset1_{s,n}$ | 0dB |
| - Qoffset2s,n | Not present |
| - Maximum allowed UL TX power | Reference to table 6.1.1 |
| - HCS neighbouring cell information | Not present |
| - CHOICE mode | FDD |
| - Qqualmin | Reference to table 6.1.1 |
| - Qrxlevmin | Reference to table 6.1.1 |
| - Cells for measurement | Not present |

System Information Block type 11 (TDD)

Use same message sub-clause 6.1 of TS34.108, with following exception:

| Information Element | Value/remark |
|---|---|
| - SIB12 indicator | FALSE |
| - Intra-frequency measurement system information | Not Present |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - New inter-frequency cell id | |
| - Inter frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Reference to TS34.108 for Cell 4 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Reference clause 6.1,TS34.108,Default settings for cell 4 |
| - Cell parameters ID | Reference clause 6.1,TS34.108,Default settings for cell 4 |
| - Primary CPICH TX power | Not present |
| - Timeslot list | Not present |
| - Cell Selection and Re-selection Info | Not present<br>For neigbouring cell, if HCS is not used and all the parameters in cell selection and re-selection info are Default value, this IE is absent. |
| - $Qoffset1_{s,n}$ | 0dB |
| - Maximum allowed UL TX power | Reference to table 6.1.6, TS34.108 |
| - HCS neighbouring cell information | Not present |
| - CHOICE mode | TDD |
| - Qrxlevmin | Reference to table 6.1.6, TS 34.108 |
| - Cells for measurement | Not present |

Test Procedure

**Table 8.1.3.6**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -55 | Off | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -55 | Off | -55 |

Table 8.1.3.6 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.1.3.6. The SS switches its downlink transmission power settings to columns "T1". The SS modify contents of SIB3 in cell 6. The SS transmits an RRC CONNECTION RELEASE message. After the SS transmits an RRC CONNECTION RELEASE message to the UE, the SS waits for the UE to transmit RRC CONNECTION RELEASE COMPLETE messages using UM on DCCH and checks to see if N308+1 such messages has been received. The UE leaves connected mode and enters idle mode in cell 1. The UE shall perform cell reselection and camp on cell 6 after reading the system information. The SS calls for generic procedure C.1 to check that UE is in Idle state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.1.3.6. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.1.3.6. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | ← | | System Information Block type 3 | The SS modifies SIB 3 in cell 1 to indicate that the cell is barred. |
| 6 | | | | The SS waits for 5 s. |
| 7 | ← | | RRC CONNECTION RELEASE | |
| 8 | → | | RRC CONNECTION RELEASE COMPLETE | The SS waits for the arrival of N308+1 such messages send on UM RLC. |
| 9 | | | | The UE releases signalling radio bearer and dedicated resources. Then the UE goes to idle mode in cell 1. |
| 10 | | | | The UE select s cell 6 and camp on it. |
| 11 | | | | The SS waits for 15 s after receiving the last RRC CONNECTION RELEASE COMPLETE message. |
| 12 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in idle mode state, the test passes, otherwise it fails. |

Specific Message Content

System Information Block type 3 (Step 5)

Use the same message type found in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Cell Access Restriction | |
| - Cell barred | Barred |
| - Intra-frequency cell re-selection indicator | Not allowed |
| - Tbarred | 10[s] |
| - Cell Reserved for operator use | Not reserved |
| - Cell Reservation Extension | Not reserved |
| - Access Class Barred List | |
| - Access Class Barred0 | barred |
| - Access Class Barred1 | barred |
| - Access Class Barred2 | barred |
| - Access Class Barred3 | barred |
| - Access Class Barred4 | barred |
| - Access Class Barred5 | barred |
| - Access Class Barred6 | barred |
| - Access Class Barred7 | barred |
| - Access Class Barred10 | barred |
| - Access Class Barred11 | barred |
| - Access Class Barred12 | barred |
| - Access Class Barred13 | barred |
| - Access Class Barred14 | barred |
| - Access Class Barred15 | barred |

RRC CONNECTION RELEASE (Step 6)

Use the same message type found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| N308 | Arbitrarily chosen between 1 and 8 |

#### 8.1.3.6.5 Test requirement

After step 6 the UE shall start to transmit N308 + 1 times RRC CONNECTION RELEASE COMPLETE messages using UM on DCCH.

After step 11 the UE shall be in Idle mode in cell 6.

### 8.1.3.7 RRC Connection Release in CELL_FACH state (Frequency modification): Success

#### 8.1.3.7.1 Definition

#### 8.1.3.7.2 Conformance requirement

When the UE receives the first RRC CONNECTION RELEASE message

the UE shall:

1> in state CELL_FACH:

2> if the RRC CONNECTION RELEASE message was received on the DCCH:

3> when the successful transmission of the RRC CONNECTION RELEASE COMPLETE message has been confirmed by the lower layers:

4> release all its radio resources; and

4> indicate the release of the established signalling connections ; and

4> pass the value of the IE "Release cause" received in the RRC CONNECTION RELEASE message to upper layers;

4> enter idle mode;

4> perform the actions specified in TS25.331 subclause 8.5.2 when entering idle mode.

a) 3> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.4.

### 8.1.3.7.3 Test purpose

To confirm that when the UE receives an RRC CONNECTION RELEASE message, the UE releases signalling radio bearer and its radio resources and goes back to the idle.

To confirm that the UE enters into idle mode withby performing cell-selection and selecting other cell than the UE selecting cell in connected mode.

### 8.1.3.7.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive

UE: "Registered idle mode on CS" (state 2) or "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

**Table 8.1.3.7**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -60 | off | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | off | -60 |

Table 8.1.3.7 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in idle mode of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.1.3.7. SS request operator to make an outgoing call. The SS and UE execute procedure P4 or P6. Next The SS and the UE execute procedure P8 or P10. The SS switches its downlink transmission power settings to columns "T1" and then modifies SIB 3 to indicate that cell 1 is barred. The SS transmits an RRC CONNECTION RELEASE message on DCCH. The UE shall transmit an RRC CONNECTION RELEASE COMPLETE message using AM on DCCH and try to enter idle mode state in cell 1. On selecting cell 1 the UE reads system information block 3 and is aware that cell 1 is barred cell. Hence the UE selects cell 6 and camp on cell 6. Upon completion of the procedure, the SS calls for generic procedure C.1 to check that UE is in idle mode.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.1.3.7. SS requests operator to make an outgoing call. |
| 2 | | | SS executes procedure P4 (clause 7.4.2.1.2) or P6 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | | | SS executes procedure P8 (clause 7.4.2.3.2) or P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.1.3.7. |
| 5 | ← | | System Information Block type 3 | The SS modifies SIB 3 in cell 1 to indicate that the cell is barred. |
| 6 | | | | The SS waits for 5 s |
| 7 | ← | | RRC CONNECTION RELEASE | |
| 8 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 9 | | | | The SS waits for 5s |
| 10 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in idle mode, the test passes, otherwise it fails. |

Specific Message Content

System Information Block type 3 (Step 5)

Use the same message type found in clause 6 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Cell Access Restriction | |
| - Cell barred | Barred |
| - Intra-frequency cell re-selection indicator | Not allowed |
| - Tbarred | 10[s] |
| - Cell Reserved for operator use | Not reserved |
| - Cell Reservation Extension | Not reserved |
| - Access Class Barred List | |
| - Access Class Barred0 | barred |
| - Access Class Barred1 | barred |
| - Access Class Barred2 | barred |
| - Access Class Barred3 | barred |
| - Access Class Barred4 | barred |
| - Access Class Barred5 | barred |
| - Access Class Barred6 | barred |
| - Access Class Barred7 | barred |
| - Access Class Barred10 | barred |
| - Access Class Barred11 | barred |
| - Access Class Barred12 | barred |
| - Access Class Barred13 | barred |
| - Access Class Barred14 | barred |
| - Access Class Barred15 | barred |

### 8.1.3.7.5 Test requirement

After step 3 the UE shall transmit RRC CONNECTION RELEASE COMPLETE messages using AM on DCCH.

After step 9 the UE shall be in idle mode of cell 6.

## 8.1.3.8 Void

## 8.1.3.9 RRC Connection Release in CELL_DCH state (Network Authentication Failure): Success

### 8.1.3.9.1 Definition

### 8.1.3.9.2 Conformance requirement

1. TS 25.331

If the upper layers request the release of the RRC connection, the UE shall:

1> release all its radio resources;

1> enter idle mode;

1> perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;

1> if the UE was in CELL_DCH state prior to entering idle mode:

2> consider all cells that were in the active set prior to entering idle mode to be barred according to [4]; and

2> consider the barred cells as using the value "allowed" in the IE "Intra-frequency cell re-selection indicator", and the maximum value in the IE "$T_{barred}$".

2. TS 24.008

Following a UMTS authentication challenge, the MS may reject the core network, on the grounds of an incorrect AUTN parameter (see 3GPP TS 33.102). This parameter contains two possible causes for authentication failure:

….

SQN failure:

If the MS considers the SQN (supplied by the core network in the AUTN parameter) to be out of range, it shall send a AUTHENTICATION FAILURE message to the network, with the reject cause 'Synch failure' and a re-synchronization token AUTS provided by the SIM (see 3GPP TS 33.102). The MS shall then follow the procedure described in clause 4.3.2.6 (d) of TS 24.008.

….

Authentication failure (reject cause 'synch failure'):

The MS shall send an AUTHENTICATION FAILURE message, with reject cause 'synch failure,' to the network and start the timer T3216.

….

If the timer T3216 expires, then the MS shall behave as described in clause 4.3.2.6.1 of TS 24.008.

Reference

3GPP TS 25.331 clause 8.1.4a.

3GPP TS 24.008 clause 4.3.2.5.1, 4.3.2.6

### 8.1.3.9.3 Test purpose

To confirm that when the upper layers request the release of the RRC connection, the UE releases signalling radio bearer and its radio resources and goes back to idle mode.

To confirm that the UE enters idle mode, bars the cell for a period $T_{barred}$ and hence performs cell-selection to another (non-barred) cell.

8.1.3.9.4 Method of test

Initial Condition

System Simulator: 3 cells – Cell 1,2 and 3 are active.

UE: "CS-DCCH+DTCH_DCH" (state 6-9) or " PS-DCCH+DTCH_DCH " (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

Table 8.1.3.9 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Column marked "T0" denotes the initial conditions, while columns marked "T1" are to be applied subsequently. The exact instants on which these values shall be applied are described in the text in this clause.

**Table 8.1.3.9**

| Parameter | Unit | Cell 1 | | Cell 2 | | Cell 3 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84 MHz | -60 | -60 | -85 | -62 | -85 | -65 |
| PCCPCH RSCP | dBm | -60 | -60 | -85 | -62 | -85 | -65 |

SS switches the downlink transmission power of the 3 cells to the columns "T1" in Table 8.1.3.9. UE transmits a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2 and 3 according to IE "Intra-frequency event identity", which is set to '1a' for FDD mode and `1g` for TDD mode in the SYSTEM INFORMATION BLOCK TYPE 11. For FDD, in steps 2 and 3, after the MEASUREMENT REPORT message is received, the SS configures the new radio link to be added from cell 2 and then the SS transmits to the UE in cell 1 an ACTIVE SET UPDATE message which includes IE "Radio Link Addition Information", indicating the addition of cell 2 into the active set, on DCCH using AM RLC.

When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

The SS transmits a DOWNLINK DIRECT TRANSFER message. This message contains a NAS message (AUTHENTICATION REQUEST for CS domain or AUTHENTICATION AND CIPHERING REQUEST for PS domain) and an invalid SQN. The UE shall transmit an UPLINK DIRECT TRANSFER message using AM on DCCH. After SS acknowledges the UPLINK DIRECT TRANSFER message, SS shall wait for T3216 or T3320 to expire in the UE. The UE shall then deem that the network has failed the authentication check, release the RRC connection, enter idle mode, bar cell 1 and 2 and perform cell re- selection. Then SS wait for 5 s. SS transmits PAGING TYPE 1 message. The UE shall respond with RRC CONNECTION REQUEST message in cell 3. SS then transmit RRC CONNECTION REJECT message back to UE. SS then waits for $T_{barred}$ to expire (22 minutes) before SS execute generic procedure C.1 in cell 1 to check that UE is in idle mode in cell 1.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | MEASUREMENT REPORT | See specific message contents for this message. |
| 2 | ← | | ACTIVE SET UPDATE | The SS transmit this message on downlink DCCH using AM RLC which includes IE "Radio Link Addition Information" for cell 2. This step will be only applicable for FDD. |
| 3 | → | | ACTIVE SET UPDATE COMPLETE | The UE adds the radio link in cell 2. This step will be only applicable for FDD. |
| 4 | ← | | DOWNLINK DIRECT TRANSFER | Depending on supported CN domain, AUTHENTICATION AND CIPHERING REQUEST message (PS domain) or AUTHENTICATION REQUEST (CS domain) message is embedded in DOWNLINK DIRECT TRANSFER message. An invalid SQN is provided in this message. |
| 5 | → | | UPLINK DIRECT TRANSFER | After SS acknowledged this message, SS waits for T3216 or T3320 to expire. |
| 6 | | | | The SS waits for 5s |
| 7 | ← | | PAGING TYPE 1 | |
| 8 | → | | RRC CONNECTION REQUEST | SS checks that the UE sends this message in cell 3 |
| 9 | ← | | RRC CONNECTION REJECT | |
| 10 | | | | SS waits 22 minutes for $T_{barred}$ to expire. |
| 11 | ←→ | | CALL C.1 | SS execute this generic procedure in cell 1. If the test result of C.1 indicates that UE is in idle mode, the test passes, otherwise it fails. |

Specific Message Content

MEASUREMENT REPORT (Step 1) (FDD)

Note1: UE may send the Measured Results for Cell 1, 2 and 3 in any order.

Note2: UE may include the Cell Measurement Event Results for cell 3.

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - SFN-SFN observed time difference | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - SFN-SFN observed time difference | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - SFN-SFN observed time difference | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |

MEASUREMENT REPORT (Step 1) (TDD)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - SFN-SFN observed time difference | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE Mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1 of TS 34.108 |
| - Primary CCPCH RSCP Info | Checked that this IE is absent |
| - PCCPCH RSCP | “Checked to see if set to within an acceptable range" |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - SFN-SFN observed time difference | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - CHOICE Mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1 of TS 34.108 |
| - Primary CCPCH RSCP Info | Checked that this IE is absent |
| - PCCPCH RSCP | “Checked to see if set to within an acceptable range" |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - SFN-SFN observed time difference | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - CHOICE Mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell No.3 (TDD)" in clause 6.1 of TS 34.108 |
| - Primary CCPCH RSCP Info | Checked that this IE is absent |
| - PCCPCH RSCP | “Checked to see if set to within an acceptable range" |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1g |
| - Cell measurement event results | |
| CHOICE Mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 2) (FDD only)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Set to same code as assigned for cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

ACTIVE SET UPDATE COMPLETE (Step 3) (FDD only)

Only the message type of this message is checked.

DOWNLINK DIRECT TRANSFER (Step 4)

Use the same message sub-type as found in TS 34.108 clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| CN domain identity | CS domain or PS domain |
| NAS message | AUTHENTICATION REQUEST (CS domain) or AUTHENTICATION AND CIPHERING REQUEST (PS domain) with an invalid SQN value. |

UPLINK DIRECT TRANSFER (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| CN domain identity | CS domain or PS domain |
| NAS message | AUTHENTICATION FAILURE(CS domain) or AUTHENTICATION AND CIPHERING FAILURE (PS domain) |
| Measured results on RACH | Not checked |

#### 8.1.3.9.5 Test requirement

At step 1 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 2 the UE shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH.

After step 4 the UE shall transmit an UPLINK DIRECT TRANSFER messages using AM on DCCH.

After step 7, the UE shall transmit RRC CONNECTION REQUEST message using TM RLC on CCCH in cell 3.

After step 10 the UE shall be in idle mode in cell 1.

## 8.1.4 Void

## 8.1.5 UE capability

### 8.1.5.1 UE Capability in CELL_DCH state: Success

#### 8.1.5.1.1 Definition

#### 8.1.5.1.2 Conformance requirement

The UE shall initiate the UE capability update procedure in the following situations:

1> the UE receives a UE CAPABILITY ENQUIRY message from the UTRAN;

…

If the UE CAPABILITY INFORMATION message is sent in response to a UE CAPABILITY ENQUIRY message, the UE shall:

1> include the IE "RRC transaction identifier"; and

1> set it to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY ENQUIRY message in the table "Accepted transactions" in the variable TRANSACTIONS;

1> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE radio access capability" and in IE "UE radio access capability extension", provided this IE is included in variable UE_CAPABILITY_REQUESTED;

1> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE system specific capability".

The UE RRC shall submit the UE CAPABILITY INFORMATION message to the lower layers for transmission on the uplink DCCH using AM RLC. When the message has been delivered to lower layers for transmission the UE RRC shall start timer T304 and set counter V304 to 1.

Upon reception of a UE CAPABILITY INFORMATION CONFIRM message, the UE shall:

1> stop timer T304;

…

1> and the procedure ends.

If the UE receives a UE CAPABILITY INFORMATION CONFIRM message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows:

1> stop timer T304;

1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;

1> include the IE "Identification of received message"; and

1> set the IE "Received message type" to UE CAPABILITY INFORMATION CONFIRM; and

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY INFORMATION CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;

1> when the RRC STATUS message has been submitted to lower layers for transmission:

2> restart timer T304 and continue with any ongoing procedures or processes as if the invalid UE CAPABILITY INFORMATION CONFIRM message has not been received.

…

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, containing an undefined critical message extension, the UE shall:

1> set the variable PROTOCOL_ERROR_REJECT to TRUE;

1> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Message extension not comprehended";

1> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:

2> store the IE "Message type" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and

2> set the IE "RRC transaction identifier" to zero in that table entry.

1> perform procedure specific error handling according to TS 25.331 clause 8.

Reference

3GPP TS 25.331 clauses 8.1.6 , 8.1.7 and 9.3b.

#### 8.1.5.1.3 Test purpose

1. To confirm that the UE transmits a UE CAPABILITY INFORMATION message after it receives a UE CAPABILITY ENQUIRY message from the SS.

2. To confirm that the UE indicates an invalid message reception when invalid UE CAPABILITY ENQUIRY and UE CAPABILITY INFORMATION CONFIRM messages are received. The UE shall transmit RRC STATUS message with the correct error cause value to SS.

8.1.5.1.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_DCH state (state 6-9 or state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is brought to the CELL_DCH state after a successful outgoing call attempt. The SS transmits a UE CAPABILITY ENQUIRY message containing an unexpected critical message extension. After receiving such a message, the UE shall report the error using RRC STATUS message with the appropriate error cause specified. Then SS transmits a correct UE CAPABILITY ENQUIRY message, the UE receives this message and transmits a UE CAPABILITY INFORMATION message on the uplink DCCH which includes the requested capabilities. The SS transmits a UE CAPABILITY INFORMATION CONFIRM message to the UE to complete the UE capability enquiry procedure.

Then SS initiates another UE capability enquiry procedure. The UE shall reply with a UE CAPABILITY INFORMATION message on the uplink DCCH. When SS receives this message, it transmits a UE CAPABILITY INFORMATION CONFIRM message containing an unexpected critical message extension. The UE shall detect an error and send an RRC STATUS message to report this event. After submitting this message to lower layers for transmission, the UE shall re-transmit a UE CAPABILITY INFORMATION message on the uplink DCCH after the expiry of restarted T304. SS then trnsmits an error-free UE CAPABILITY INFORMATION CONFIRM message similar to the message sent in step 6.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_DCH state after an outgoing call has been established successfully. |
| 2 | ← | | UE CAPABILITY ENQUIRY | See specific message contents for this message |
| 3 | → | | RRC STATUS | See specific message contents for this message |
| 4 | ← | | UE CAPABILITY ENQUIRY | See specific message contents for this message. |
| 5 | → | | UE CAPABILITY INFORMATION | See specific message contents for this message. |
| 6 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 7 | ← | | UE CAPABILITY ENQUIRY | Same as in step 4. |
| 8 | → | | UE CAPABILITY INFORMATION | Shall be the same message content as in step 5. |
| 9 | ← | | UE CAPABILITY INFORMATION CONFIRM | See specific message contents for this message |
| 10 | → | | RRC STATUS | UE shall detect an error and then transmit this message. |
| 11 | → | | UE CAPABILITY INFORMATION | UE shall re-transmit this message after the restarted T304 expires. |
| 12 | ← | | UE CAPABILITY INFORMATION CONFIRM | SS sends an error-free message to acknowledge the receipt of the uplink message. |

Specific Message Contents

UE CAPABILITY ENQUIRY (Step 2)

SS sends a message containing a critical extension not defined for the protocol release supported by the UE, as indicated in the IE "Access stratum release indicator":

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects an integer between 0 and 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Critical extensions | 'FF'H |

RRC STATUS (Step 3)

Check to see if the same message type found in TS 34.108, clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Identification of received message | |
| - Received message type | UE Capability Enquiry |
| - RRC transaction identifier | 0 |
| Protocol Error Information | Message extension not comprehended |
| - Protocol Error Cause | |

| Information Element | Value/remark |
|---|---|
| Identification of received message | |
| - Received message type | UE Capability Enquiry |
| - RRC transaction identifier | Checked to see if the value is identical to the same IE in the downlink UE CAPABILITY ENQUIRY message. |
| Protocol Error Information | |
| - Protocol Error Cause | Message extension not comprehended |

UE CAPABILITY ENQUIRY (Steps 4) (FDD)

Use the UE CAPABILITY ENQUIRY message as defined in [9] (TS 34.108) Clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement | |
| - UE radio access FDD capability update requirement | TRUE |
| - UE radio access TDD capability update requirement | FALSE |
| - System specific capability update requirement list | Gsm |

UE CAPABILITY ENQUIRY (Steps 4) (3.84 Mcps TDD)

Use the UE CAPABILITY ENQUIRY message as defined in [9] (TS 34.108) Clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement | |
| - UE radio access FDD capability update requirement | FALSE |
| - UE radio access TDD capability update requirement | TRUE |
| - System specific capability update requirement list | Gsm |

UE CAPABILITY ENQUIRY (Steps 4) (1.28 Mcps TDD)

Use the UE CAPABILITY ENQUIRY message as defined in [9] (TS 34.108) Clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access FDD capability update requirement<br>- UE radio access TDD capability update requirement<br>UE radio access 1.28 Mcps TDD capability update requirement | <br>FALSE<br><br>TRUE<br><br>TRUE |
| - System specific capability update requirement list | Gsm |

UE CAPABILITY ENQUIRY (Steps 4) (7.68 Mcps TDD)

Use the UE CAPABILITY ENQUIRY message as defined in [9] (TS 34.108) Clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement<br>- UE radio access FDD capability update requirement<br>- UE radio access 3.84 Mcps TDD capability update requirement<br>- UE radio access 7.68 Mcps TDD capability update requirement | <br>FALSE<br>FALSE<br><br>TRUE |
| - UE radio access 1.28 Mcps TDD capability update requirement | FALSE |
| - System specific capability update requirement list | Gsm |

UE CAPABILITY INFORMATION (Step 5)

Check to see if the same message type found in [9] (TS 34.108) Clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UE system specific capability | Presence and value will be checked. Stated capability must be compatible with 34.123-2 (ICS statements) and the user settings |

UE CAPABILITY INFORMATION CONFIRM (Step 9)

SS sends a message containing a critical extension not defined for the protocol release supported by the UE, as indicated in the IE "Access stratum release indicator". Use the UE CAPABILITY INFORMATION CONFIRM message as defined in [9] (TS 34.108) Clause 9, with the following addition:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

RRC STATUS (Step 10)

Check to see if the same message type found in TS 34.108, clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Identification of received message<br>- Received message type<br>- RRC transaction identifier<br>Protocol Error Information<br>- Protocol Error Cause | <br>UE Capability Information Confirm<br>0<br><br>Message extension not comprehended |

#### 8.1.5.1.5 Test requirement

After step 2, the UE shall transmit a RRC STATUS message on the uplink DCCH, reporting the error with protocol error cause set to "Message extension not comprehended" correct transaction identifier.

After step 4 and 7 the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH to respond to the UE CAPABILITY ENQUIRY message with correct contents.

After step 9, the UE shall transmit a RRC STATUS message on the uplink DCCH. The protocol error cause shall be set to "Message extension not comprehended" and the transaction identifier set to the same value as used in the UE CAPABILITY ENQUIRY message of step 7.

After step 10, the UE shall re-transmit the UE CAPABILITY INFORMATION message with a similar content as in step 8 after the expiry of restarted T304.

### 8.1.5.2 UE Capability in CELL_DCH state: Success after T304 timeout

#### 8.1.5.2.1 Definition

#### 8.1.5.2.2 Conformance requirement

The UE shall initiate the UE capability update procedure in the following situations:

1> the UE receives a UE CAPABILITY ENQUIRY message from the UTRAN on the DCCH using UM or AM RLC;

1> while in connected mode the UE capabilities change compared to those stored in the variable UE_CAPABILITY_TRANSFERRED.

If the UE CAPABILITY INFORMATION message is sent in response to a UE CAPABILITY ENQUIRY message, the UE shall:

1> include the IE "RRC transaction identifier"; and

1> set it to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY ENQUIRY message in the table "Accepted transactions" in the variable TRANSACTIONS;

1> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE radio access capability" and in IE "UE radio access capability extension", provided this IE is included in variable UE_CAPABILITY_REQUESTED;

1> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE system specific capability".

If the UE CAPABILITY INFORMATION message is sent because one or more of the UE capabilities change compared to those stored in the variable UE_CAPABILITY_TRANSFERRED while in connected state, the UE shall include the information elements associated with the capabilities that have changed in the UE CAPABILITY INFORMATION message.

…

The UE RRC shall submit the UE CAPABILITY INFORMATION message to the lower layers for transmission on the uplink DCCH using AM RLC. When the message has been delivered to lower layers for transmission the UE RRC shall start timer T304 and set counter V304 to 1.

Upon expiry of timer T304, the UE shall check the value of V304 and:

1> if V304 is smaller than or equal to N304:

2> prior to retransmitting the UE CAPABILITY INFORMATION message:

3> if the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started":

4> include the same IEs as in the last unsuccessful attempt of this message, except for the IE "Integrity check info", which is modified as follows:

5> increment the "Uplink RRC Message sequence number" for signalling radio bearer RB2 in the variable INTEGRITY_PROTECTION_INFO by one;

5> set the IE "RRC Message sequence number" in the IE "Integrity check info" by the value of the "Uplink RRC Message sequence number" for signalling radio bearer RB2 in the variable INTEGRITY_PROTECTION_INFO in this message;

5> recalculate the IE "Message authentication code" in the IE "Integrity check info" in this message, in accordance with TS 25.331 subclause 8.5.10.3.

3> else:

4> include the same IEs as in the last unsuccessful attempt of this message.

2> send the UE CAPABILITY INFORMATION message on signalling radio bearer RB2;

2> restart timer T304;

2> increment counter V304.

…

Reference

3GPP TS 25.331 clause 8.1.6 and 8.1.7.

#### 8.1.5.2.3 Test purpose

To confirm that the UE re-transmits a UE CAPABILITY INFORMATION message until V304 is greater than N304, after the expiry of timer T304 when the UE cannot receive a UE CAPABILITY INFORMATION CONFIRM message in response to a UE CAPABILITY INFORMATION message.

#### 8.1.5.2.4 Method of test

Initial Conditio,n

System Simulator: 1 cell.

UE: CELL_DCH state (state 6-9 or state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is brought to CELL_DCH state. When the SS transmits a UE CAPABILITY ENQUIRY message which includes the "Capability update requirement" IE, the UE shall reply with a UE CAPABILITY INFORMATION message on the uplink DCCH which includes the "UE radio access capability" IE. The SS does not transmit a UE CAPABILITY INFORMATION CONFIRM message to the UE, resulting in the T304 timer to expire. SS shall observe that the UE attempts to transmit a UE CAPABILITY INFORMATION message again. The UE shall re-transmit N304 times, and SS transmits a UE CAPABILITY INFORMATION CONFIRM message to answer the last request and completes this test procedure.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_DCH state.<br>SS sets internal counter K =0 |
| 2 | ← | | UE CAPABILITY ENQUIRY | Including the IE "Capability update requirement". |
| 3 | → | | UE CAPABILITY INFORMATION | Including the "UE radio access capability". |
| 4 | | | | If K is equal to N304, then proceed to step 6. |
| 5 | | | | The SS does not transmit a response and wait for T304 timer to expire.<br>K=K+1 and goes to step 3. |
| 6 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message contents |

Specific Message Contents

None

#### 8.1.5.2.5 Test requirement

After step 3 the UE shall re-transmits a UE CAPABILITY INFORMATION message on the uplink DCCH, after each expiry of timer T304. The UE CAPABILITY INFORMATION message shall contain IE "UE radio access capability" indicating the settings found in PIC/PIXIT statements. After (N304) re-transmissions, the UE shall receive a UE CAPABILITY INFORMATION CONFIRM message.

### 8.1.5.3 UE Capability in CELL_DCH state: Failure (After N304 re-transmissions)

#### 8.1.5.3.1 Definition

#### 8.1.5.3.2 Conformance requirement

The UE shall initiate the UE capability update procedure in the following situations:

1> the UE receives a UE CAPABILITY ENQUIRY message from the UTRAN on the DCCH using UM or AM RLC;

1> while in connected mode the UE capabilities change compared to those stored in the variable UE_CAPABILITY_TRANSFERRED.

If the UE CAPABILITY INFORMATION message is sent in response to a UE CAPABILITY ENQUIRY message, the UE shall:

1> include the IE "RRC transaction identifier"; and

1> set it to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY ENQUIRY message in the table "Accepted transactions" in the variable TRANSACTIONS;

1> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE radio access capability" and in IE "UE radio access capability extension", provided this IE is included in variable UE_CAPABILITY_REQUESTED;

1> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE system specific capability".

If the UE CAPABILITY INFORMATION message is sent because one or more of the UE capabilities change compared to those stored in the variable UE_CAPABILITY_TRANSFERRED while in connected state, the UE shall include the information elements associated with the capabilities that have changed in the UE CAPABILITY INFORMATION message.

…

The UE RRC shall submit the UE CAPABILITY INFORMATION message to the lower layers for transmission on the uplink DCCH using AM RLC. When the message has been delivered to lower layers for transmission the UE RRC shall start timer T304 and set counter V304 to 1.

Upon expiry of timer T304, the UE shall check the value of V304 and:

1> if V304 is smaller than or equal to N304:

2> prior to retransmitting the UE CAPABILITY INFORMATION message:

3> if the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started":

4> include the same IEs as in the last unsuccessful attempt of this message, except for the IE "Integrity check info", which is modified as follows:

5> increment the "Uplink RRC Message sequence number" for signalling radio bearer RB2 in the variable INTEGRITY_PROTECTION_INFO by one;

5> set the IE "RRC Message sequence number" in the IE "Integrity check info" by the value of the "Uplink RRC Message sequence number" for signalling radio bearer RB2 in the variable INTEGRITY_PROTECTION_INFO in this message;

5> recalculate the IE "Message authentication code" in the IE "Integrity check info" in this message, in accordance with TS 25.331 subclause 8.5.10.3.

3> else:

4> include the same IEs as in the last unsuccessful attempt of this message.

2> send the UE CAPABILITY INFORMATION message on signalling radio bearer RB2;

2> restart timer T304;

2> increment counter V304.

1> if V304 is greater than N304:

2> initiate the Cell update procedure as specified in TS 25.331 subclause 8.3.1, using the cause "Radio link failure".

Reference

3GPP TS 25.331 clauses 8.1.6 and 8.1.7.

#### 8.1.5.3.3 Test purpose

To confirm that the UE stops retrying to transmit a UE CAPABILITY INFORMATION message if V304 is greater than N304. It then initiates cell update procedure.

#### 8.1.5.3.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_DCH state (state 6-9 or state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is brought to CELL_DCH state. When the SS transmits a UE CAPABILITY ENQUIRY message which includes the "Capability update requirement" IE, the UE receives this message and transmits a UE CAPABILITY INFORMATION message on the uplink DCCH which includes the "UE radio access capability" IE. The SS does not

respond with a UE CAPABILITY INFORMATION CONFIRM message but keeps a count on the number of messages received. When the T304 timer expires, the UE shall transmit a UE CAPABILITY INFORMATION message again. After sending (N304+1) messages, the UE shall stop sending UE CAPABILITY INFORMATION messages and initiates the cell update procedure. SS allows UE to return to "connected state" by issuing CELL UPDATE CONFIRM message on the downlink DCCH. Then UE shall reconfigured its physical channel according to the CELL UPDATE CONFIRM message and respond with PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to SS.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE starts from CELL_DCH state.<br>SS sets counter K to 0 |
| 2 | ← | | UE CAPABILITY ENQUIRY | Use default message |
| 3 | → | | UE CAPABILITY INFORMATION | Use default message |
| 4 | | | | The SS does not transmit a response and allows T304 timer to expire.<br>SS increments counter K<br>If K is greater than N304, proceeds to step 5 else returns to 3. |
| 5 | → | | CELL UPDATE | The UE assumes that radio link failure has occurred and transmits this message which includes IE "Cell update cause" set to "radio link failure". |
| 6 | ← | | CELL UPDATE CONFIRM | This message include IE "Physical channel information elements". |
| 7 | | | | The SS configure the dedicated physical channel according to the IE "Physical channel information elements" included in the CELL UPDATE CONFIRM message. |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |

Specific Message Contents

CELL UPDATE CONFIRM (Step 6) - FDD

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark | Vesrion |
|---|---|---|
| U-RNTI | Same as CELL UPDATE message in step 5 | |
| RRC State indicator | CELL_DCH | |
| Frequency info | | |
| - CHOICE mode | FDD | |
| - UARFCN uplink(Nu) | Reference to TS34.108 clause 5.1 Test frequencies | |
| - UARFCN downlink(Nd) | Reference to TS34.108 clause 5.1 Test frequencies | |
| Maximum allowed UL TX power | 33dBm | |
| CHOICE Mode | FDD | |
| Downlink information for each radio links | | |
| - Primary CPICH info | | |
| - Primary scrambling code | 100 | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | 0 chips | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | SF-1(SF is reference to TS34.108 clause 6.10 Parameter Set) | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | -a | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

CELL UPDATE CONFIRM (Step 6) – 3.84 Mcps TDD

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Same as CELL UPDATE message in step 5 |
| RRC State indicator | CELL_DCH |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Reference to TS34.108 clause 5.1 Test frequencies |
| Maximum allowed UL TX power | 30dBm |
| CHOICE Mode | TDD |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | Not Present |
| - Cell Parameters ID | Not Present |
| - Block STTD indicator | FALSE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | TDD |
| - DL CCTrCh List | |
| - TFCS ID | 1 |
| - Time info | |
| - Activation time | Not Present (default) |
| - Duration | Not Present (default) |
| - Common timeslot info | Not Present (default) |
| - Downlink DPCH timeslots and codes | Not Present (default) |
| - UL CCTrCH TPC List | Not Present (default) |

CELL UPDATE CONFIRM (Step 6) – 1.28 Mcps TDD

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Same as CELL UPDATE message in step 5 |
| RRC State indicator | CELL_DCH |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Reference to TS34.108 clause 5.1 Test frequencies |
| Maximum allowed UL TX power | 30dBm |
| CHOICE Mode | TDD |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell Parameters ID | Not Present |
| - Block STTD indicator | FALSE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | TDD |
| - DL CCTrCh List | |
| - TFCS ID | 1 |
| - Time info | |
| - Activation time | Not Present (default) |
| - Duration | Not Present (default) |
| - Common timeslot info | Not Present (default) |
| - Downlink DPCH timeslots and codes | Not Present (default) |
| - UL CCTrCH TPC List | Not Present (default) |

CELL UPDATE CONFIRM (Step 6) – 7.68 Mcps TDD

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Same as CELL UPDATE message in step 5 |
| RRC State indicator | CELL_DCH |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Reference to TS34.108 clause 5.1 Test frequencies |
| Maximum allowed UL TX power | 30dBm |
| CHOICE Mode | TDD |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | Not Present |
| - Cell Parameters ID | Not Present |
| - Block STTD indicator | FALSE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | TDD |
| - DL CCTrCh List | |
| - TFCS ID | 1 |
| - Time info | |
| - Activation time | Not Present (default) |
| - Duration | Not Present (default) |
| - Common timeslot info | Not Present (default) |
| - Downlink DPCH timeslots and codes | Not Present (default) |
| - UL CCTrCH TPC List | Not Present (default) |

#### 8.1.5.3.5 Test requirement

After step 2, the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH. The UE shall re-transmit this message for N304 times.

After step 4, the UE shall initiate the cell update procedure.

After step 6, UE shall respond with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message after it has configured L1 according to the CELL UPDATE CONFIRM message in step 6.

### 8.1.5.4 UE Capability in CELL_FACH state: Success

#### 8.1.5.4.1 Definition

#### 8.1.5.4.2 Conformance requirement

The UE shall initiate the UE capability update procedure in the following situations:

1> the UE receives a UE CAPABILITY ENQUIRY message from the UTRAN;

…

If the UE CAPABILITY INFORMATION message is sent in response to a UE CAPABILITY ENQUIRY message, the UE shall:

1> include the IE "RRC transaction identifier"; and

1> set it to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY ENQUIRY message in the table "Accepted transactions" in the variable TRANSACTIONS;

1> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE radio access capability" and in IE "UE radio access capability extension", provided this IE is included in variable UE_CAPABILITY_REQUESTED;

1> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE system specific capability".

The UE RRC shall submit the UE CAPABILITY INFORMATION message to the lower layers for transmission on the uplink DCCH using AM RLC. When the message has been delivered to lower layers for transmission the UE RRC shall start timer T304 and set counter V304 to 1.

Upon reception of a UE CAPABILITY INFORMATION CONFIRM message, the UE shall:

1> stop timer T304;

…

1> and the procedure ends.

If the UE receives a UE CAPABILITY INFORMATION CONFIRM message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows:

1> stop timer T304;

1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;

1> include the IE "Identification of received message"; and

1> set the IE "Received message type" to UE CAPABILITY INFORMATION CONFIRM; and

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY INFORMATION CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;

1> when the RRC STATUS message has been submitted to lower layers for transmission:

2> restart timer T304 and continue with any ongoing procedures or processes as if the invalid UE CAPABILITY INFORMATION CONFIRM message has not been received.

…

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, containing an undefined critical message extension, the UE shall:

1> set the variable PROTOCOL_ERROR_REJECT to TRUE;

1> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Message extension not comprehended";

1> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:

2> store the IE "Message type" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and

2> set the IE "RRC transaction identifier" to zero in that table entry.

1> perform procedure specific error handling according to TS 25.331 clause 8.

### Reference

3GPP TS 25.331 clauses 8.1.6, 8.1.7 and 9.3b.

8.1.5.4.3 Test purpose

1. To confirm that the UE transmits a UE CAPABILITY INFORMATION message after it receives a UE CAPABILITY ENQUIRY message from the SS.

2. To confirm that the UE indicates an invalid message reception when invalid UE CAPABILITY ENQUIRY and UE CAPABILITY INFORMATION CONFIRM messages are received. The UE shall transmit RRC STATUS message with the correct error cause value to SS.

8.1.5.4.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_FACH state (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is brought to the CELL_FACH state after a successful outgoing call attempt. The SS transmits a UE CAPABILITY ENQUIRY message containing an unexpected critical message extension. After receiving such a message, the UE shall report an error using RRC STATUS message with the appropriate error cause specified. Then SS transmits a UE CAPABILITY ENQUIRY message which includes the IE "Capability update requirement". After UE receives this message, it transmits a UE CAPABILITY INFORMATION message on the uplink DCCH, which includes the requested capabilities. The SS transmits a UE CAPABILITY INFORMATION CONFIRM message to the UE to complete the UE capability enquiry procedure.

Then SS initiates another UE capability enquiry procedure. The UE shall reply with a UE CAPABILITY INFORMATION message on the uplink DCCH. When SS receives this message, it transmits a UE CAPABILITY INFORMATION CONFIRM message containing an unexpected critical message extension. The UE shall detect an error and send an RRC STATUS message to report this event. After submitting this message to lower layers for transmission, the UE shall re-transmit a UE CAPABILITY INFORMATION message on the uplink DCCH upon the expiry of restarted T304. SS completes this test by sending an error-free UE CAPABILITY INFORMATION CONFIRM message similar to the message sent in step 6.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_FACH state after an outgoing call has been established successfully. |
| 2 | ← | | UE CAPABILITY ENQUIRY | See specific message contents for this message |
| 3 | → | | RRC STATUS | See specific message contents for this message. |
| 4 | ← | | UE CAPABILITY ENQUIRY | Use default message. |
| 5 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 6 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 7 | ← | | UE CAPABILITY ENQUIRY | Same as in step 4. |
| 8 | → | | UE CAPABILITY INFORMATION | The message content shall be the same as in step 5. |
| 9 | ← | | UE CAPABILITY INFORMATION CONFIRM | See specific message contents for this message |
| 10 | → | | RRC STATUS | UE shall detect an error and then transmit this message on uplink DCCH. |
| 11 | → | | UE CAPABILITY INFORMATION | UE shall re-transmit this message after the restarted T304 expires. |
| 12 | ← | | UE CAPABILITY INFORMATION CONFIRM | SS sends an error-free message to acknowledge the receipt of the uplink message. |

Specific Message Contents

UE CAPABILITY ENQUIRY (Step 2)

Use the UE CAPABILITY ENQUIRY message as defined in [9] (TS 34.108) Clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects an integer between 0 and 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Critical extensions | 'FF'H |

RRC STATUS (Step 3)

Check to is the same message type found in TS 34.108, clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Identification of received message | |
| - Received message type | UE Capability Enquiry |
| RRC transaction identifier | 0 |
| Protocol Error Information | |
| - Protocol Error Cause | Message extension not comprehended |

UE CAPABILITY INFORMATION CONFIRM (Step 9)

SS sends a message containing a critical extension not defined for the protocol release supported by the UE, as indicated in the IE "Access stratum release indicator". Use the UE CAPABILITY INFORMATION CONFIRM message as defined in [9] (TS 34.108) Clause 9, with the following addition:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

RRC STATUS (Step 10)

Check to see if the same message type found in TS 34.108, clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Identification of received message | |
| - Received message type | UE Capability Information Confirm |
| - RRC transaction identifier | 0 |
| Protocol Error Information | |
| - Protocol Error Cause | Message extension not comprehended |

8.1.5.4.5 Test requirement

After step 2, the UE shall transmit a RRC STATUS message on the uplink DCCH, reporting the error with protocol error cause set to "Message extension not comprehended" correct transaction identifier.

After step 4 and 7 the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH to respond to the downlink UE CAPABILITY ENQUIRY message with correct contents.

After step 9, the UE shall transmit a RRC STATUS message on the uplink DCCH. The protocol error cause shall be set to "Message extension not comprehended" and the transaction identifier set to the same value as used in the UE CAPABILITY ENQUIRY message of step 7.

After step 10, the UE shall re-transmit the UE CAPABILITY INFORMATION message with a similar content as in step 8 upon the expiry of restarted T304.

## 8.1.5.5 UE Capability in CELL_FACH state: Success after T304 timeout

### 8.1.5.5.1 Definition

### 8.1.5.5.2 Conformance requirement

The UE shall initiate the UE capability update procedure in the following situations:

1> the UE receives a UE CAPABILITY ENQUIRY message from the UTRAN on the DCCH using UM or AM RLC;

1> while in connected mode the UE capabilities change compared to those stored in the variable UE_CAPABILITY_TRANSFERRED.

If the UE CAPABILITY INFORMATION message is sent in response to a UE CAPABILITY ENQUIRY message, the UE shall:

1> include the IE "RRC transaction identifier"; and

1> set it to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY ENQUIRY message in the table "Accepted transactions" in the variable TRANSACTIONS;

1> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE radio access capability" and in IE "UE radio access capability extension", provided this IE is included in variable UE_CAPABILITY_REQUESTED;

1> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE system specific capability".

If the UE CAPABILITY INFORMATION message is sent because one or more of the UE capabilities change compared to those stored in the variable UE_CAPABILITY_TRANSFERRED while in connected state, the UE shall include the information elements associated with the capabilities that have changed in the UE CAPABILITY INFORMATION message.

…

The UE RRC shall submit the UE CAPABILITY INFORMATION message to the lower layers for transmission on the uplink DCCH using AM RLC. When the message has been delivered to lower layers for transmission the UE RRC shall start timer T304 and set counter V304 to 1.

Upon expiry of timer T304, the UE shall check the value of V304 and:

1> if V304 is smaller than or equal to N304:

2> prior to retransmitting the UE CAPABILITY INFORMATION message:

3> if the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started":

4> include the same IEs as in the last unsuccessful attempt of this message, except for the IE "Integrity check info", which is modified as follows:

5> increment the "Uplink RRC Message sequence number" for signalling radio bearer RB2 in the variable INTEGRITY_PROTECTION_INFO by one;

5> set the IE "RRC Message sequence number" in the IE "Integrity check info" by the value of the "Uplink RRC Message sequence number" for signalling radio bearer RB2 in the variable INTEGRITY_PROTECTION_INFO in this message;

5> recalculate the IE "Message authentication code" in the IE "Integrity check info" in this message, in accordance with TS 25.331 subclause 8.5.10.3.

3> else:

4> include the same IEs as in the last unsuccessful attempt of this message.

2> send the UE CAPABILITY INFORMATION message on signalling radio bearer RB2;

2> restart timer T304;

2> increment counter V304.

…

Reference

3GPP TS 25.331 clauses 8.1.6 and 8.1.7.

### 8.1.5.5.3 Test purpose

To confirm that the UE re-transmits a UE CAPABILITY INFORMATION message until V304 is greater than N304, after the expiry of timer T304 when it fails to receive a downlink UE CAPABILITY INFORMATION CONFIRM message in response to the uplink UE CAPABILITY INFORMATION message sent.

### 8.1.5.5.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_FACH state (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is brought to CELL_FACH state. When the SS transmits a UE CAPABILITY ENQUIRY message which includes the IE "Capability update requirement", the UE shall reply with a UE CAPABILITY INFORMATION message on the uplink DCCH that contains the IE "UE radio access capability". The SS waits and does not transmit a UE CAPABILITY INFORMATION CONFIRM message to the UE, resulting in the T304 timer to expire. SS shall observe that the UE attempts to transmit a UE CAPABILITY INFORMATION message again. The UE shall re-transmit N304 times, and SS transmits a UE CAPABILITY INFORMATION CONFIRM message to answer the last request and completes this test procedure.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_FACH state.<br>SS sets internal counter K =0 |
| 2 | ← | | UE CAPABILITY ENQUIRY | Including the IE "Capability update requirement". |
| 3 | → | | UE CAPABILITY INFORMATION | Including the IE "UE radio access capability". |
| 4 | | | | If K equals N304, then proceeds to step 6. Else, continue with step 5. |
| 5 | | | | The SS does not transmit a response and wait for T304 timer to expire.<br>K=K+1 and goes to step 3. |
| 6 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message contents |

Specific Message Contents

None

#### 8.1.5.5.5 Test requirement

After step 3 the UE shall re-transmit a UE CAPABILITY INFORMATION message on the uplink DCCH, after each expiry of timer T304. The UE CAPABILITY INFORMATION message shall contain IE "UE radio access capability" with the value matching those stated in the ICS/IXIT statements. After (N304) re-transmissions, the UE shall receive a UE CAPABILITY INFORMATION CONFIRM message.

### 8.1.5.6 UE Capability Information/ Reporting Of InterRAT Specific UE RadioAccessCapability.

#### 8.1.5.6.1 Definition

#### 8.1.5.6.2 Conformance requirement

The UE shall initiate the UE capability update procedure in the following situations:

1> the UE receives a UE CAPABILITY ENQUIRY message from the UTRAN;

…

If the UE CAPABILITY INFORMATION message is sent in response to a UE CAPABILITY ENQUIRY message, the UE shall:

1> include the IE "RRC transaction identifier"; and

1> set it to the value of "RRC transaction identifier" in the entry for the UE CAPABILITY ENQUIRY message in the table "Accepted transactions" in the variable TRANSACTIONS;

1> retrieve its UTRA UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE radio access capability" and in IE "UE radio access capability extension", provided this IE is included in variable UE_CAPABILITY_REQUESTED;

1> retrieve its inter-RAT-specific UE radio access capability information elements from variable UE_CAPABILITY_REQUESTED; and

1> include this in IE "UE system specific capability".

Reference

3GPP TS 25.331 clauses 8.1.6

#### 8.1.5.6.3 Test purpose

To confirm that a multi-RAT UE responds with a UE CAPABILITY INFORMATION message after it receives a UE CAPABILITY ENQUIRY message from the UTRAN and it includes the inter-RAT-specific UE radio access capability information element.

#### 8.1.5.6.4 Method of test

Initial Condition

System Simulator: 1 cell - Cell 1 is UTRAN.

UE: CELL_DCH state (state 6-9) as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,

- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480.

Test Procedure

The SS starts the UTRAN cell .The UE is brought into the CELL_DCH state after a successful outgoing call attempt on the UTRAN cell. The SS transmits a UE CAPABILITY ENQUIRY message with System Specific Cap Update Req set to GSM. The UE shall respond with a UE CAPABILITY INFORMATION message on the uplink DCCH that includes the requested capabilities. The SS transmits a UE CAPABILITY INFORMATION CONFIRM message to the UE to complete the UE capability enquiry procedure.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_DCH 6-9 state after an outgoing call has been established successfully. |
| 2 | ← | | UE CAPABILITY ENQUIRY | See specific message contents |
| 3 | → | | UE CAPABILITY INFORMATION | See specific message contents |
| 4 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |

Specific Message Contents

UE CAPABILITY ENQUIRY (Step 2)

Use the UE CAPABILITY ENQUIRY message as defined in (TS 34.108) Clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Capability update requirement | |
| - UE radio access FDD capability update requirement | TRUE |
| - UE radio access TDD capability update requirement | FALSE |
| - System specific capability update requirement list | GSM |

UE CAPABILITY INFORMATION (Step 3)

Check to see if the same message type found in (TS 34.108) Clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UE_RadioAccessCapability | This IE should reflect the corresponding fdd capability and the IE UE_MultimodeRATCapability should indicate GSM capability according to PICS . |
| InterRAT_UE_RadioAccessCapability | GSM<br>GSM Classmark 2<br>GSM Classmark 3<br>Presence and value will be checked. Stated capability must be compatible with 34.123-3 (ICS statements) and the user settings |

### 8.1.5.6.5 Test requirement

After step 2 the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH to respond to the UE CAPABILITY ENQUIRY message as per the specific message contents.

## 8.1.6 Direct Transfer

### 8.1.6.1 Direct Transfer in CELL DCH state (invalid message reception and no signalling connection exists)

#### 8.1.6.1.1 Definition

#### 8.1.6.1.2 Conformance requirement

If the UE receives a DOWNLINK DIRECT TRANSFER message, and the signalling connection identified with the IE "CN domain identity" does not exist according to the variable ESTABLISHED_SIGNALLING_CONNECTIONS, the UE shall:

1> ignore the content of the DOWNLINK DIRECT TRANSFER message;

1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;

1> include the IE "Identification of received message"; and

1> set the IE "Received message type" to DOWNLINK DIRECT TRANSFER; and

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the DOWNLINK DIRECT TRANSFER message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> include the IE "Protocol error information" with the IE "Protocol error cause" set to "Message not compatible with receiver state".

…

If the UE receives a DOWNLINK DIRECT TRANSFER message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows:

1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;

1> include the IE "Identification of received message"; and

1> set the IE "Received message type" to DOWNLINK DIRECT TRANSFER; and

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the DOWNLINK DIRECT TRANSFER message in the table "Rejected transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.

When the RRC STATUS message has been submitted to lower layers for transmission, the UE shall:

1> continue with any ongoing processes and procedures as if the DOWNLINK DIRECT TRANSFER message has not been received.

…

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, containing an undefined critical message extension, the UE shall:

1> set the variable PROTOCOL_ERROR_REJECT to TRUE;

1> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Message extension not comprehended";

Reference

3GPP TS 25.331 clause 8.1.9.3a, 8.1.9.4, 9.3b.

8.1.6.1.3 Test purpose

To confirm that the UE transmits an RRC STATUS message on the DCCH using AM RLC if it receives a DOWNLINK DIRECT TRANSFER message with a non comprehended critical extension. To confirm that the UE transmits an RRC STATUS message on the DCCH using AM RLC if it receives a DOWNLINK DIRECT TRANSFER message which includes an invalid IE "CN domain identity".

8.1.6.1.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_DCH (state 6-9 or state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in the CELL_DCH state. The SS transmits an invalid DOWNLINK DIRECT TRANSFER message to the UE. The UE shall transmit an RRC STATUS message on the DCCH using AM RLC. The error type "Message extension not comprehended" shall be indicated in IE "Protocol error cause". The SS transmits a DOWNLINK DIRECT TRANSFER message that contains an invalid IE "CN domain identity" to the UE. The UE shall transmit an RRC STATUS message on the DCCH using AM RLC. The error type "Message not compatible with receiver state" shall be indicated in IE "Protocol error cause".

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK DIRECT TRANSFER | See specific message content |
| 2 | → | | RRC STATUS | |
| 3 | ← | | DOWNLINK DIRECT TRANSFER | Sent from a new CN domain. |
| 4 | → | | RRC STATUS | |

Specific Message Contents

DOWNLINK DIRECT TRANSFER (Step 1)

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

RRC STATUS (Step 2)

Message content is the same as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Identification of received messag type<br>- Received message type<br>- RRC transaction identifier<br>Protocol error information<br>– Protocol error cause | <br>DOWNLINK DIRECT TRANSFER<br>0<br><br>Message extension not comprehended |

DOWNLINK DIRECT TRANSFER (Step 3)

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CN domain identity | CS domain or PS domain as unselected domain |
| NAS message | Arbitrary message. |

RRC STATUS (Step 4)

Message content is the same as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Identification of received messag type | |
| - Received message type | DOWNLINK DIRECT TRANSFER |
| - RRC transaction identifier | Same value in the DOWNLINK DIRECT TRANSFER message in step 3. |
| Protocol error information | |
| – Protocol error cause | Message not compatible with receiver state |

#### 8.1.6.1.5 Test requirement

After step 1 the UE shall transmit an RRC STATUS message on the DCCH using AM RLC setting "Message extension not comprehended" in IE "Protocol error cause" and "DOWNLINK DIRECT TRANSFER" in IE "Received message type".

After step 3 the UE shall transmit a n RRC STATUS message on the DCCH using AM RLC setting "Message not compatible with receiver state" in IE "Protocol error cause" and "DOWNLINK DIRECT TRANSFER" in IE "Received message type".

### 8.1.6.2 Direct Transfer in CELL FACH state (invalid message reception and no signalling connection exists)

#### 8.1.6.2.1 Definition

#### 8.1.6.2.2 Conformance requirement

If the UE receives a DOWNLINK DIRECT TRANSFER message, and the signalling connection identified with the IE "CN domain identity" does not exist according to the variable ESTABLISHED_SIGNALLING_CONNECTIONS, the UE shall:

1> ignore the content of the DOWNLINK DIRECT TRANSFER message;

1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;

1> include the IE "Identification of received message"; and

1> set the IE "Received message type" to DOWNLINK DIRECT TRANSFER; and

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the DOWNLINK DIRECT TRANSFER message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> include the IE "Protocol error information" with the IE "Protocol error cause" set to "Message not compatible with receiver state".

…

If the UE receives a DOWNLINK DIRECT TRANSFER message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows:

1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;

1> include the IE "Identification of received message"; and

1> set the IE "Received message type" to DOWNLINK DIRECT TRANSFER; and

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the DOWNLINK DIRECT TRANSFER message in the table "Rejected transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.

When the RRC STATUS message has been submitted to lower layers for transmission, the UE shall:

1> continue with any ongoing processes and procedures as if the DOWNLINK DIRECT TRANSFER message has not been received.

…

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, containing an undefined critical message extension, the UE shall:

1> set the variable PROTOCOL_ERROR_REJECT to TRUE;

1> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Message extension not comprehended";

Reference

3GPP TS 25.331 clause 8.1.9.3a, 8.1.9.4, 9.3b.

### 8.1.6.2.3 Test purpose

To confirm that the UE transmits an RRC STATUS message on the DCCH using AM RLC if it receives a DOWNLINK DIRECT TRANSFER message which does not include any IEs except IE "Message Type". To confirm that the UE transmits an RRC STATUS message on the DCCH using AM RLC if it receives a DOWNLINK DIRECT TRANSFER message which includes an invalid IE "CN domain identity".

### 8.1.6.2.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH_FACH (state 6-6) or PS_DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in the CELL_FACH state. The SS transmits an invalid DOWNLINK DIRECT TRANSFER message to the UE. The UE shall transmit an RRC STATUS message on the DCCH using AM RLC. The error type "Message extension not comprehended" shall be indicated in IE "Protocol error cause". The SS transmits a DOWNLINK DIRECT TRANSFER message that contains an invalid IE "CN domain identity" to the UE. The UE shall transmit an RRC STATUS message on the DCCH using AM RLC. The error type "Message not compatible with receiver state" shall be indicated in IE "Protocol error cause".

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK DIRECT TRANSFER | See specific message content |
| 2 | → | | RRC STATUS | |
| 3 | ← | | DOWNLINK DIRECT TRANSFER | Sent from a new CN domain. |
| 4 | → | | RRC STATUS | |

Specific Message Contents

DOWNLINK DIRECT TRANSFER (Step 1)

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Critical extentions | 'FF'H |

RRC STATUS (Step 2)

Message content is the same as found in Clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Identification of received messag type<br>- Received message type<br>- RRC transaction identifier<br>Protocol error information<br>– Protocol error cause | <br>DOWNLINK DIRECT TRANSFER<br>0<br><br>Message extension not comprehended |

DOWNLINK DIRECT TRANSFER (Step 3)

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CN domain identity<br>NAS message | CS domain or PS domain as unselected domain<br>Arbitrary message. |

RRC STATUS (Step 4)

Message content is the same as found in Clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Identification of received message type<br>- Received message type<br>- RRC transaction identifier<br><br>Protocol error information<br>– Protocol error cause | <br>DOWNLINK DIRECT TRANSFER<br>Same value in the DOWNLINK DIRECT TRANSFER message in step 3.<br><br>Message not compatible with receiver state |

#### 8.1.6.2.5 Test requirement

After step 1 the UE shall transmit an RRC STATUS message on the DCCH using AM RLC setting "Message extension not comprehended" in IE "Protocol error cause" and "DOWNLINK DIRECT TRANSFER" in IE "Received message type".

After step 3 the UE shall transmit a n RRC STATUS message on the DCCH using AM RLC setting "Message not compatible with receiver state" in IE "Protocol error cause" and "DOWNLINK DIRECT TRANSFER" in IE "Received message type".

### 8.1.6.3 Measurement Report on INITIAL DIRECT TRANSFER message and UPLINK DIRECT TRANSFER message

#### 8.1.6.3.1 Definition

#### 8.1.6.3.2 Conformance requirement

In CELL_FACH state, the UE shall:

1> include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System

Information Block type 12 (or "System Information Block Type 11" if "System Information Block Type 12" is not being broadcast);

1> include in the IE "Measured results on RACH" all requested reporting quantities for cells for which measurements are reported.

Reference

3GPP TS 25.331, clause 8.1.8.2, 8.1.10.2

#### 8.1.6.3.3 Test Purpose

To confirm that the UE reports measured results on RACH messages, if it receives IE "Intra-frequency reporting quantity for RACH reporting" and IE "Maximum number of reported cells on RACH" from System Information Block Type 11 or 12 upon a transition from idle mode to CELL_FACH state.

#### 8.1.6.3.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Related ICS/IXIT statement(s)

- Support of automatic PS attach procedure at switch on yes/no

Specific Message Content

For system information block 11 for Cell 1 (gives IE's which are different from defaults given in 34.108 sec 6.1) to be transmitted before idle update preamble.

System Information Block type 11 (Step 1) (FDD)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 5 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 0 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 1 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | Not present |
| - Intra-frequency Measurement quantity | |
| - Filter Coefficient | 0 |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency measurement for RACH reporting | |
| - SFN-SFN observed time difference | No report |
| - Reporting quantity | CPICH RSCP |
| - Maximum number of reported cells on RACH | Current cell |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not present |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1a |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Monitored set cells |
| - Reporting Range Constant | 29 (15 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0.0 |
| - Hysteresis | 2 (1.0 dB) |
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | 0 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 60 ms |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| - Reporting Cell Status | |

| | |
|---|---|
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Inter-frequency measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

System Information Block type 11 (Step 1) (TDD)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 5 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 0 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Set to same as used for cell 1 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | Not present |
| - Intra-frequency Measurement quantity | |
| - Filter Coefficient | 0 |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency measurement for RACH reporting | |
| - SFN-SFN observed time difference | No report |
| - Reporting quantity | PCCPCH RSCP |
| - Maximum number of reported cells on RACH | Current cell |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not present |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1g |
| - Reporting Range Constant | 29 (15 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0 (0.0) |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 60 ms |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| - Reporting Cell Status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Inter-frequency measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

Test Procedure

The UE is initially in idle mode and camps on cell 1. SS prompts the operator to make an outgoing call for one of the traffic classes supported by the UE. SS and UE shall execute out going call procedure. During this procedure UE transmits INITIAL DIRECT TRANSFER and UPLINK DIRECT TRANSFER messages with IE"Measured results on RACH" which is set to measured CPICH RSCP" (for FDD) or "Primary CCPCH info" (for TDD) in the current cell. After that SS releases a RRC connection.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in idle mode and camps onto cell 1. |
| 2 | | | | SS prompts the test operator to make an outgoing call. |
| 3 | → | | RRC CONNECTION REQUEST | |
| 4 | ← | | RRC CONNECTION SETUP | See default message content (Transition to CELL_FACH) |
| 5 | → | | RRC CONNECTION SETUP COMPLETE | See default message content |
| 6 | → | | INITIAL DIRECT TRANSFER ( SERVICE REQUEST ) | See specific message content |
| 7 | ← | | DOWNLINK DIRECT TRANSFER( AUTHENTICATION AND CIPHERING REQUEST ) | |
| 8 | → | | UPLINK DIRECT TRANSFER( AUTHENTICATION AND CIPHERING RESPONSE ) | See specific message content |
| 9 | ← | | SECURITY MODE COMMAND | See default message content |
| 10 | → | | SECURITY MODE COMPLETE | See default message content |
| 11 | → | | UPLINK DIRECT TRANSFER( ACTIVATE PDP CONTEXT REQUEST ) | See specific message content |
| 11a | ← | | DOWNLINK DIRECT TRANSFER (ACTIVATE PDP CONTEXT REJECT) | Cause set to “Activation rejected, unspecified” |
| A11a | → | | UPLINK DIRECT TRANSFER (DETACH REQUEST) | This step is performed only when UE is in manual attach mode: The UE may (optionally) send a Detach Request (only Note 1). |
| A11b | ← | | DOWNLINK DIRECT TRANSFER (DETACH ACCEPT) | This step is performed only when UE is in manual attach mode: SS responds with DETACH ACCEPT message as a Detach Request was transmitted by the UE. |
| 12 | ← | | RRC CONNECTION RELEASE | See default message content |
| 13 | → | | RRC CONNECTION RELEASE COMPLETE | See default message content |
| Note 1: Support of automatic PS attach procedure at switch on – no | | | | |

Specific Message Content

RRC CONNECTION REQUEST (Step 3) (FDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | |
| - Measurement result for current cell | |
| - CHOICE measurement quantity | Check to see if set to 'CPICH RSCP' |
| - CPICH RSCP | Checked to see if set to within an acceptable range. |
| - Measurement results for monitored cells | Checked to see if this IE is absent. |

RRC CONNECTION REQUEST (Step 3) (TDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | |
| - Measurement result for current cell | |
| - CHOICE measurement quantity | Check to see if set to 'PCCPCH RSCP' |
| - PCCPCH RSCP | Checked to see if set to within an acceptable range. |
| - Measurement results for monitored cells | Checked to see if this IE is absent. |

INITIAL DIRECT TRANSFER ( SERVICE REQUEST ) (Step 6) (FDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | |
| - Measurement result for current cell | |
| - CHOICE measurement quantity | Check to see if set to 'CPICH RSCP' |
| - CPICH RSCP | Checked to see if set to within an acceptable range. |
| - Measurement results for monitored cells | Checked to see if this IE is absent. |

INITIAL DIRECT TRANSFER ( SERVICE REQUEST ) (Step 6) (TDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | |
| - Measurement result for current cell | |
| - CHOICE measurement quantity | Check to see if set to 'PCCPCH RSCP' |
| - PCCPCH RSCP | Checked to see if set to within an acceptable range. |
| - Measurement results for monitored cells | Checked to see if this IE is absent. |

UPLINK DIRECT TRANSFER( AUTHENTICATION AND CIPHERING RESPONSE ) (Step 8)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | |
| - Measurement result for current cell | |
| - CHOICE measurement quantity | Check to see if set to 'CPICH RSCP' |
| - CPICH RSCP | Checked to see if set to within an acceptable range. |
| - Measurement results for monitored cells | Checked to see if this IE is absent. |

UPLINK DIRECT TRANSFER( AUTHENTICATION AND CIPHERING RESPONSE ) (Step 8) (TDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | |
| - Measurement result for current cell | |
| - CHOICE measurement quantity | Check to see if set to 'PCCPCH RSCP' |
| - PCCPCH RSCP | Checked to see if set to within an acceptable range. |
| - Measurement results for monitored cells | Checked to see if this IE is absent. |

UPLINK DIRECT TRANSFER( ACTIVATE PDP CONTEXT REQUEST ) (Step 11) (FDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measured results on RACH | |
| - Measurement result for current cell | |
| - CHOICE measurement quantity | Check to see if set to 'CPICH RSCP' |
| - CPICH RSCP | Checked to see if set to within an acceptable range. |
| - Measurement results for monitored cells | Checked to see if this IE is absent. |

UPLINK DIRECT TRANSFER( ACTIVATE PDP CONTEXT REQUEST ) (Step 11) (TDD)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measured results on RACH<br>- Measurement result for current cell<br>- CHOICE measurement quantity<br>- PCCPCH RSCP<br>- Measurement results for monitored cells | <br><br>Check to see if set to 'PCCPCH RSCP'<br>Checked to see if set to within an acceptable range.<br>Checked to see if this IE is absent. |

#### 8.1.6.3.5 Test Requirement

After step 2 the UE shall transmit a RRC CONNECTION REQUEST message which includes IE "measured results on RACH", containing the measurement value for cell 1's CPICH RSCP (FDD mode) or PCCPCH RSCP (TDD mode).

After step 5 the UE shall transmit a INITIAL DIRECT TRANSFER ( SERVICE REQUEST) message which includes IE "measured results on RACH", containing the measurement value for cell 1's CPICH RSCP.

After step 7 the UE shall transmit a UPLINK DIRECT TRANSFER( AUTHENTICATION AND CIPHERING RESPONSE ) message which includes IE "measured results on RACH", containing the measurement value for cell 1's CPICH RSCP (FDD mode) or PCCPCH RSCP (TDD mode).

After step 10 the UE shall transmit a UPLINK DIRECT TRANSFER( ACTIVATE PDP CONTEXT REQUEST ) message which includes IE "measured results on RACH", containing the measurement value for cell 1's CPICH RSCP (FDD mode) or PCCPCH RSCP (TDD mode).

### 8.1.6.4 UPLINK Direct Transfer (RLC re-establishment)

#### 8.1.6.4.1 Definition

#### 8.1.6.4.2 Conformance requirement

If signalling radio bearer RB n (where n equals to 3 or 4) was used when transmitting the UPLINK DIRECT TRANSFER message and a re-establishment of RLC on same signalling radio bearer RB n occurs before the successful delivery of the UPLINK DIRECT TRANSFER message has been confirmed by RLC, the UE shall:

1> retransmit the UPLINK DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB n.

Reference

3GPP TS 25.331 clause 8.1.10.2a.

#### 8.1.6.4.3 Test purpose

To confirm that the UE transmits a second UPLINK DIRECT TRANSFER message after the re-establishment of RLC on RB3 which occurs before the successful delivery of the first UPLINK DIRECT TRANSFER message.

#### 8.1.6.4.4 Method of test

Initial Condition

System Simulator: 1 cell – Cell 1 is active.

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

Specific Message Contents

For RRC CONNECTION SETUP message to be transmitted in the initial setup, use the default message given in TS 34.108 subclause 9 with the following exceptions:.

RRC CONNECTION SETUP

| Information Element | Value/Remarks |
|---|---|
| Signalling RB information to setup | (AM DCCH for NAS_DT High priority) |
| - RB identity | Not Present |
| - CHOICE RLC info type | |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 1 |
| - Polling info | |
| - Timer_poll_prohibit | 1000 |
| - Timer_poll | 1000 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 5 |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to TS34.108 clause 6.10.2.4.1.3 for FDD, 6.10.3.4.1.3 for TDD 3.84 Mcps option or 6.11.5.4.1.3 for TDD 1.28 Mcps option or 6.11.6. 4.1.3 for TDD 7.68 Mcps option (standalone 13.6 kbps signalling radio bearer) |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |

Test Procedure

UE is in CELL_DCH. SS set the RLC entity for SRB3 to stop. SS requests operator to deactivate the established PDP context. Then the UE shall transmit an UPLINK DIRECT TRANSFER message on the uplink DCCH. SS does not acknowledge the AM PDUs carrying UPLINK DIRECT TRANSFER message. The SS then sends a UTRAN MOBILITY INFORMATION message on SRB1 requesting the UE to do a SRNS relocation, 5s after asking the operator to deactivate the established PDP context. The UE shall send a UTRAN MOBILITY INFORMATION CONFIRM message on SRB2. The SS set the RLC entity for SRB3 to continue upon receiving UTRAN MOBILITY INFORMATION CONFIRM message. Then UE shall retransmit an UPLINK DIRECT TRANSFER message on the uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS set the RLC entity for SRB3 to stop. SS requests the operator to initiate a PDP context deactivation. |
| 2 | → | | UPLINK DIRECT TRANSFER | . |
| 3 | ← | | UTRAN MOBILITY INFORMATION | |
| 4 | → | | UTRAN MOBILITY INFORMATION CONFIRM | UE sends this message on uplink DCCH on AM RLC.<br>After the reception, SS configures RB 3 to continue. |
| 5 | → | | UPLINK DIRECT TRANSFER | DEACTIVATE PDP CONTEXT REQUEST message is embedded in UPLINK DIRECT TRANSFER message. |

Specific Message Contents

UTRAN MOBILITY INFORMATION (Step 3)

Use the same message sub-type found in [9] TS 34.108 clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | This presence of this IE is dependent on IXIT statements in TS 34.123-2. If ciphering is indicated to be active, this IE present with the values of the sub IEs as stated below. Else, this IE is omitted. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA0 or UEA1. The indicated algorithm must be one of the algorithms supported by the UE as indicated in the IE "security capability" in the RRC CONNECTION SETUP COMPLETE message. |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256, this IE is set to "Not present" if only PS RABs are established during the initial setup procedure. |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 20, this IE is set to "Not present" if PS RAB is not established during the initial setup procedure. |
| - RLC sequence number | Current RLC SN + 2 |
| Integrity protection mode info | |
| - Integrity protection mode command | Start |
| - Downlink integrity protection activation info | Not Present |
| - Integrity protection algorithm | UIA1 |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bits number for FRESH. The first/ leftmost bit of the bit string contains the most significant bit of the FRESH. |
| New U-RNTI | |
| - SRNC identity | 0000 0000 0010B |
| - S-RNTI | 0000 0000 0000 0000 0001B |

UTRAN MOBILITY INFORMATION CONFIRM (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UPLINK DIRECT TRANSFER (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| CN domain identity | PS domain |
| NAS message | DEACTIVATE PDP CONTEXT REQUEST |
| Measured results on RACH | Not checked |

### 8.1.6.4.5 Test requirement

After step 3, the UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message using uplink DCCH on AM RLC and then retransmit UPLINK DIRECT TRANSFER message on the uplink DCCH.

## 8.1.6.5 Initial Direct Transfer: Inclusion of establishment cause

### 8.1.6.5.1 Definition

### 8.1.6.5.2 Conformance requirement

In the UE, the initial direct transfer procedure shall be initiated, when the upper layers request establishment of a signalling connection. This request also includes a request for the transfer of a NAS message.

Upon initiation of the initial direct transfer procedure the UE shall:

1> set the variable ESTABLISHMENT_CAUSE to the cause for establishment indicated by upper layers.

…

The UE shall, in the INITIAL DIRECT TRANSFER message:

1> set the IE "NAS message" as received from upper layers; and

1> set the IE "CN domain identity" as indicated by the upper layers; and

1> set the IE "Intra Domain NAS Node Selector" as follows:

2> derive the IE "Intra Domain NAS Node Selector" from TMSI/PMTSI, IMSI, or IMEI; and

2> provide the coding of the IE "Intra Domain NAS Node Selector" according to the following priorities:

1. derive the routing parameter for IDNNS from TMSI (CS domain) or PTMSI (PS domain) whenever a valid TMSI/PTMSI is available;
2. base the routing parameter for IDNNS on IMSI when no valid TMSI/PTMSI is available;
3. base the routing parameter for IDNNS on IMEI only if no (U)SIM is inserted in the UE.

1> if the variable ESTABLISHMENT_CAUSE_ is initialised:

2> set the IE "Establishment cause" to the value of the variable ESTABLISHMENT_CAUSE;

2> clear the variable ESTABLISHMENT_CAUSE.

#### Reference

3GPP TS 25.331 clause 8.1.8.2

### 8.1.6.5.3 Test purpose

To confirm that, in the case the UE wants to start a new signalling connection while the UE is already in CELL_DCH state, the UE shall include the IE “Establishment cause” in the Initial Direct Transfer message.

### 8.1.6.5.4 Method of test

#### Initial Condition

System Simulator: 1 cell

UE: PS-DCCH DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

#### Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports PS+CS

#### Test Procedure

The UE has a PS radio bearer set up in CELL_DCH state. Then, the test operator is prompted to make an out-going CS call. The UE shall transmit an Initial Direct Transfer message with the IE “Establishment cause” set to “Originating

conversational call". After reception of CM Service Request message from the UE, the SS will send CM Service Reject to complete the Service Request procedure.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS prompts the test operator to make an outgoing CS call. |
| 2 | → | | INITIAL DIRECT TRANSFER ( CM SERVICE REQUEST ) | The UE sets the IE "Establishment cause" to "Originating conversational call". |
| 3 | ← | | DOWNLINK DIRECT TRANSFER ( CM SERVICE REJECT ) | |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

INITIAL DIRECT TRANSFER (Step 2)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CN Domain Identity | CS domain |
| Establishment cause | Originating conversational call |

#### 8.1.6.5.5 Test requirements

At step 2, the UE shall transmit an Intial Direct Transfer message with the IE "Establishment cause" set to "Originating conversational call".

## 8.1.7 Security mode command

### 8.1.7.1 Security mode command in CELL_DCH state (CS Domain)

#### 8.1.7.1.1 Definition

#### 8.1.7.1.2 Conformance requirement

1. This procedure is used to trigger or start of ciphering or to command the restart of ciphering with the new ciphering configuration for the signalling radio bearers and any radio bearers of a particular CN Domain. It is also used to start integrity protection or modify integrity protection configuration for the signalling radio bearers.

2. When the UE receives a SECURITY MODE COMMAND message from the UTRAN, which indicates a downlink activation time for each effected SRB and RB, and new ciphering mode configuration, the UE shall apply the old ciphering configuration, for a particular SRB or RB, before the stated downlink activation time. It shall start to decipher using the new ciphering configuration at the downlink activation time.

3. After the UE has transmitted a SECURITY MODE COMPLETE message using the new integrity protection configuration which includes uplink activation time, it shall start to cipher transmission in the uplink using the new configuration at the respective uplink activation time for each SRB or RB.

Reference

3GPP TS 25.331 clauses 8.1.12, 8.6.3.4, 8.6.3.5.

#### 8.1.7.1.3 Test purpose

To confirm that the UE activates the new ciphering configurations after the stated activation time. To confirm that after the UE receives a SECURITY MODE COMMAND message, it transmits a SECURITY MODE COMPLETE message to the UTRAN using the old ciphering configuration together with the application of the new integrity protection

configuration. To confirm that UE send SECURITY MODE FAILURE message when SS transmits a SECURITY MODE COMMAND message that causes an invalid configuration. To confirm that the UE sends a SECURITY MODE FAILURE message when the UE receives an invalid SECURITY MODE COMMAND message.

#### 8.1.7.1.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_DCH (state 6-9) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_DCH state. The SS initiates an Authentication procedure, which will result in the generation of a new security keyset (CK/IK). The SS transmits a SECURITY MODE COMMAND message which contains an unexpected critical message extension. The UE shall respond by sending SECURITY MODE FAILURE message on the DCCH. Then SS transmits a SECURITY MODE COMMAND message with IE's "Ciphering mode info" and "Integrity protection mode info both omitted". Again the UE shall not trigger any ciphering algorithm and it shall respond by sending SECURITY MODE FAILURE message on the DCCH. Next, the SS transmits a valid SECURITY MODE COMMAND message which includes the correct downlink activation times and "Integrity check info" IE. Then the UE shall check the integrity check info and shall start to configure ciphering in downlink according to the first valid SECURITY MODE COMMAND message. The UE shall transmit a SECURITY MODE COMPLETE message which contains the correct uplink activation times and also "Integrity check info" IE using the new integrity protection configuration. The SS records the uplink ciphering activation time for RB 2. Next, the SS transmits UE CAPABILITY ENQUIRY message repeatedly on the downlink DCCH using RLC-AM mode. The UE shall respond to each downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS then send UE CAPABILITY INFORMATION CONFIRM message to the UE. This cycle repeats itself until both the uplink and downlink ciphering activation time for RB 2 has elapsed. SS checks all uplink UE CAPABILITY INFORMATION messages are integrity-protected by UIA algorithm, and that the messages contain the correct values for "Integrity check info" IE. This can be verified in the SS through the reception of a correctly ciphered and integrity-protected UE CAPABILITY INFORMATION message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | RRC connected state on DCH_state. |
| 1a | ← | | AUTHENTICATION REQUEST | MM message which will result in the generation of a new security keyset |
| 1b | → | | AUTHENTICATION RESPONSE | MM |
| 2 | ← | | SECURITY MODE COMMAND | See message content. |
| 3 | → | | SECURITY MODE FAILURE | IE "Failure Cause" shall be set to "Protocol Error" and IE "Protocol Error Information" shall be set to "Message extension not comprehended". |
| 4 | ← | | SECURITY MODE COMMAND | See message content. |
| 5 | → | | SECURITY MODE FAILURE | IE "Failure Cause" shall be set to "invalid configuration". |
| 6 | ← | | SECURITY MODE COMMAND | See specific message contents. |
| 7 | | | Void | |
| 8 | | | Void | |
| 9 | → | | SECURITY MODE COMPLETE | SS verifies that this message is sent using the old ciphering configuration. SS records the uplink ciphering activation time for RB 2. |
| 10 | ← | | UE CAPABILITY ENQUIRY | SS repeats step 10, 11 and 12 until its internal uplink and downlink RLC SN have both surpassed the uplink and downlink ciphering activation time specified for RB2. This message is sent on the downlink DCCH using RLC-AM. |
| 11 | → | | UE CAPABILITY INFORMATION | UE shall send this message on the uplink DCCH using RLC-AM. SS verifies that the last UE CAPABILITY INFORMATION message is both integrity-protected and ciphered correctly. |
| 12 | ← | | UE CAPABILITY INFORMATION CONFIRM | |

Specific Message Contents

SECURITY MODE COMMAND (Step 2)

| Information Element | Value/remark |
|---|---|
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| Critical extensions | 'FF'H |

SECURITY MODE FAILURE (Step 3)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink DCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Failure cause | |
| Failure cause | Protocol error |
| Protocol error information | |
| Protocol error cause | Message extension not comprehended |

SECURITY MODE COMMAND (Step 4)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| Security Capability | Same as originally sent by UE (and stored in SS) |
| Ciphering mode info | Not Present |
| - Ciphering mode command | |
| Integrity protection mode info | Not Present |
| CN domain identity | CS Domain |
| UE system specific security capability | Not Present in condition A1 |
| UE system specific security capability | Present In condition A2 |
| - Inter-RAT UE security capability | |
| - CHOICE *system* | GSM |
| - GSM security capability | The indicated algorithms must be the same as the algorithms supported by the UE as indicated in the IE " UE system specific capability " in the RRC CONNECTION SETUP COMPLETE message. |

| Condition | Explanation |
|---|---|
| A1 | UE not supporting GSM |
| A2 | UE supporting GSM |

SECURITY MODE FAILURE (Step 5)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink DCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Failure cause | |
| Failure cause | Invalid configuration |

SECURITY MODE COMMAND (Step 6)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| Security Capability | Same as originally sent by UE (and stored in SS) |
| Ciphering mode info | |
| Ciphering mode command | Start/restart |
| Ciphering algorithm | UEA1 |
| Activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256 |
| Radio bearer downlink ciphering activation time info | |
| RB Identity | 1 |
| RLC sequence number | Current RLC SN |
| RB Identity | 2 |
| RLC sequence number | Current RLC SN + 2 |
| RB Identity | 3 |
| RLC sequence number | Current RLC SN |
| RB Identity | 4 |
| RLC sequence number | Current RLC SN |
| Integrity protection mode info | |
| Integrity protection mode command | Modify |
| Downlink integrity protection activation info | |
| | Current RRC SN for SRB0<br>Current RRC SN for SRB1<br>Current RRC SN for SRB2<br>Current RRC SN for SRB3<br>Current RRC SN for SRB4 |
| Integrity protection algorithm | UIA1 |
| CN domain identity | CS Domain |
| UE system specific security capability | Not Present in condition A1 |
| UE system specific security capability | Present In condition A2 |
| - Inter-RAT UE security capability | |
| - CHOICE *system* | GSM |
| - GSM security capability | The indicated algorithms must be the same as the algorithms supported by the UE as indicated in the IE " UE system specific capability " in the RRC CONNECTION SETUP COMPLETE message. |

| Condition | Explanation |
|---|---|
| A1 | UE not supporting GSM |
| A2 | UE supporting GSM |

SECURITY MODE COMPLETE (Step 9)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Integrity check info | |
| - Message Authentication code | Checked to see if present. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | Checked to see if present |
| Uplink integrity protection activation info | |
| - RRC message sequence number list | Check to see if the RRC SN for RB 0 to RB 4 are present |
| Radio bearer uplink ciphering activation info | |
| - RB Identity other than RB2 | Check to see if the RLC SN for RB1, 3 and 4 are present |
| - RB Identity | 2 |
| - RLC sequence number | SS records this value. See step 10 in 'expected sequence' |

### 8.1.7.1.5 Test requirement

After step 2 the UE shall transmit a SECURITY MODE FAILURE message to report the protocol error detected in the first SECURITY MODE COMMAND message.

After step 4 the UE shall transmit a SECURITY MODE FAILURE message to report on the invalid configuration detected in the second SECURITY MODE COMMAND message.

After step 8 the SS checks that the SECURITY MODE COMPLETE message is received ciphered using the old configuration and that the calculated "integrity check info" IE is correct.

After step 9 SS verifies that all uplink signalling messages on RB2 are integrity protected with UIA1 algorithm.

After uplink ciphering activation time has lapsed, SS verifies that the UE CAPABILITY INFORMATION message received is integrity protected with UIA algorithm and ciphered with the new ciphering configuration and algorithm indicated in the SECURITY MODE COMMAND (Step 6) message.

After downlink ciphering activation time has lapsed, SS shall apply ciphering to all downlink messages using the new configuration. At least one more cycle between step 10 and step 12 shall be repeated correctly after activation time on both directions has lapsed and the messages on both direction shall be ciphered and integrity protected.

## 8.1.7.1b Security mode command in CELL_DCH state (PS Domain)

### 8.1.7.1b.1 Definition

### 8.1.7.1b.2 Conformance requirement

Upon reception of the SECURITY MODE COMMAND message, the UE shall:

1> if neither IE "Ciphering mode info" nor IE "Integrity protection mode info" is included in the SECURITY MODE COMMAND:

2> set the variable INVALID_CONFIGURATION to TRUE.

…

1> prior to sending the SECURITY MODE COMPLETE message:

…

2> if the SECURITY MODE COMMAND message contained the IE "Integrity protection mode info":

3> include and set the IE "Uplink integrity protection activation info" to the value of the variable INTEGRITY_PROTECTION_ACTIVATION_INFO for each signalling radio bearer;

…

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted SECURITY MODE COMPLETE message;

2> transmit the SECURITY MODE COMPLETE message on the uplink DCCH in AM RLC;

…

If the IE "Ciphering mode info" is present and if the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to FALSE, the UE shall:

…

1> apply the new ciphering configuration in the lower layers for all RBs that belong to a CN domain for which the IE "Status" of the variable SECURITY_MODIFICATION is set to "Affected" and all signalling radio bearers:

1> apply the new ciphering configuration as follows:

2> consider an activation time in downlink to be pending:

…

3> for AM-RLC until all AMD PDUs with sequence numbers up to and including activation time –1 have been received;

2> if the IE "Radio bearer downlink ciphering activation time info" is present:

3> apply the following procedure for each radio bearer and signalling radio bearers using RLC-AM or RLC-UM indicated by the IE "RB identity":

…

4> select an "RLC send sequence number" at which (activation) time the new ciphering configuration shall be applied in uplink for that radio bearer according to the following:

…

6> set a suitable value that would ensure a minimised delay in the change to the latest security configuration.

…

5> use the old ciphering configuration for the transmitted and received RLC PDUs with RLC sequence numbers smaller than the corresponding RLC sequence numbers indicated in the IE "Radio bearer uplink ciphering activation time info" sent to UTRAN and in the received IE "Radio bearer downlink ciphering activation time info" received from UTRAN, respectively;

5> use the new ciphering configuration for the transmitted and received RLC PDUs with RLC sequence numbers greater than or equal to the corresponding RLC sequence numbers indicated in the IE "Radio bearer uplink ciphering activation time info" sent to UTRAN and in the received IE "Radio bearer downlink ciphering activation time info" received from UTRAN, respectively;

…

If the IE "Integrity protection mode info" is present and if the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to FALSE, the UE shall:

…

1> if IE "Integrity protection mode command" has the value "modify" and the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and this IE was included in SECURITY MODE COMMAND:

…

2> start applying the new integrity protection configuration in the downlink at the RRC sequence number, for each signalling radio bearer n, indicated by the entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Downlink integrity protection activation info", included in the IE "Integrity protection mode info";

…

4> select a value of the RRC sequence number at which (activation) time the new integrity protection configuration shall be applied in uplink for that signalling radio bearer according to the following:

…

6> set a suitable value that would ensure a minimised delay in the change to the latest integrity protection configuration.

…

2> start applying the new integrity protection configuration in the uplink at the RRC sequence number, for each RBn, except for signalling radio bearer RB2, indicated by the entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Uplink integrity protection activation info", included in the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;

2> start applying the new integrity protection configuration in the uplink at the RRC sequence number for signalling radio bearer RB2, as specified for the procedure initiating the integrity protection reconfiguration;

2> start applying the new integrity protection configuration in the downlink at the RRC sequence number, for each RBn, except for signalling radio bearer RB2, indicated by the entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Downlink integrity protection activation info";

NOTE: For signalling radio bearers that have a pending activation time as set for integrity protection by a previous procedure changing the integrity protection configuration, UTRAN should set this value in IE "Downlink integrity protection activation info".

2> start applying the new integrity protection configuration in the downlink at the RRC sequence number for signalling radio bearer RB2, as specified for the procedure initiating the integrity protection reconfiguration.

Reference

3GPP TS 25.331 clauses 8.1.12.3, 8.6.3.4, 8.6.3.5.

### 8.1.7.1b.3 Test purpose

To confirm that the UE modifies an integrity protection configuration and applies new keys on reception of a correct SECURITY MODE COMMAND message.

To confirm that the UE modifies a ciphering configuration in the uplink and downlink and applies new keys according to transmitted activation times. Also confirms that the UE accepts a new ciphering configuration for a RB when ciphering is started for SRBs.

To confirm that after the UE receives a SECURITY MODE COMMAND message, it transmits a SECURITY MODE COMPLETE message to the UTRAN using the old ciphering configuration and new integrity protection configuration.

To confirm that UE send SECURITY MODE FAILURE message when SS transmits a SECURITY MODE COMMAND message with a non comprehended critical extension.

To confirm that the UE sends a SECURITY MODE FAILURE message when UE receives an invalid SECURITY MODE COMMAND message.

### 8.1.7.1b.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_DCH state with integrity protection and ciphering started for SRBs. The SS initiates an Authentication and Ciphering procedure, which will result in the generation of a new security keyset (CK/IK).

The SS transmits a SECURITY MODE COMMAND message which contains an unexpected critical message extension. The UE shall respond by sending SECURITY MODE FAILURE message on the DCCH.

Then SS transmits a SECURITY MODE COMMAND message with IEs "Ciphering mode info" and "Integrity protection mode info both omitted". Again the UE shall not trigger any ciphering algorithm and it shall respond by sending SECURITY MODE FAILURE message on the DCCH.

Next, the SS transmits a valid SECURITY MODE COMMAND message which includes the correct downlink activation times and "Integrity check info" IE. The UE shall check the integrity check info and shall start to configure ciphering in downlink according to the SECURITY MODE COMMAND message.

Then UE shall transmit a SECURITY MODE COMPLETE message which contains uplink activation times and also the correct "Integrity check info" IE using the new integrity protection configuration. SS records the uplink ciphering activation time for RB 2.

Next, the SS transmits UE CAPABILITY ENQUIRY message repeatedly on the downlink DCCH using RLC-AM mode. The UE shall respond to each downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS shall send UE CAPABILITY INFORMATION CONFIRM messages to the UE for each received UE CAPABILITY INFORMATION message from the UE.

This cycle repeats itself until both the uplink and downlink ciphering activation time for RB 2 has elapsed. SS checks all uplink UE CAPABILITY INFORMATION messages are integrity-protected by UIA algorithm, and that the messages contain the correct values for "Integrity check info" IE. This can be verified in the SS through the reception of a correctly ciphered and integrity-protected UE CAPABILITY INFORMATION message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | RRC connected state on DCH_state. |
| 1a | | ← | AUTHENTICATION AND CIPHERING REQUEST | GMM message which will result in the generation of a new security keyset |
| 1b | | → | AUTHENTICATION AND CIPHERING RESPONSE | GMM |
| 2 | | ← | SECURITY MODE COMMAND | See message content. |
| 3 | | → | SECURITY MODE FAILURE | IE "Failure Cause" shall be set to "Protocol Error" and IE "Protocol Error Information" shall be set to "Message extension not comprehended". |
| 4 | | ← | SECURITY MODE COMMAND | See message content. |
| 5 | | → | SECURITY MODE FAILURE | IE "Failure Cause" shall be set to "invalid configuration". |
| 6 | | ← | SECURITY MODE COMMAND | See specific message contents. |
| 7 | → | | SECURITY MODE COMPLETE | SS verifies that this message is sent using the old ciphering configuration and with the new integrity protection configuration. SS records the uplink ciphering activation time for RB 2. |
| 8 | ← | | UE CAPABILITY ENQUIRY | SS repeats step 8, 9 and 10 until its internal uplink and downlink RLC SN have both surpassed the uplink and downlink ciphering activation time specified for RB2. This message is sent on the downlink DCCH using RLC-AM. |
| 9 | → | | UE CAPABILITY INFORMATION | UE shall send this message on the uplink DCCH using RLC-AM. SS verifies that the last UE CAPABILITY INFORMATION message is both integrity-protected and ciphered correctly. |
| 10 | ← | | UE CAPABILITY INFORMATION CONFIRM | |

Specific Message Contents

SECURITY MODE COMMAND (Step 2)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| Critical extensions | 'FF'H |

SECURITY MODE FAILURE (Step 3)

Message content is the same as found in Clause 9 of TS 34.108, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Failure cause | |
| Failure cause | Protocol error |
| Protocol error information | |
| Protocol error cause | Message extension not comprehended |

SECURITY MODE COMMAND (Step 4)

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| Security Capability | Same as originally sent by UE (and stored in SS) |
| Ciphering mode info | Not Present |
| Integrity protection mode info | Not Present |
| CN domain identity | PS Domain |

SECURITY MODE FAILURE (Step 5)

Message content is the same as found in Clause 9 of TS 34.108, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Failure cause | |
| Failure cause | Invalid configuration |

SECURITY MODE COMMAND (Step 6 )

| Information Element | Condition | Value/remark |
|---|---|---|
| RRC transaction identifier | A1, A2 | 0 |
| Integrity check info | | |
| Message authentication code | | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | | Next RRC SN |
| Security Capability | | Same as originally sent by UE (and stored in SS) |
| Ciphering mode info | | |
| Ciphering mode command | | Start/restart |
| Ciphering algorithm | | UEA1 |
| Activation time for DPCH | | Not Present |
| Radio bearer downlink ciphering activation time info | | |
| RB Identity | | 1 |
| RLC sequence number | | Current RLC SN |
| RB Identity | | 2 |
| RLC sequence number | | Current RLC SN + 2 |
| RB Identity | | 3 |
| RLC sequence number | | Current RLC SN |
| RB Identity | | 4 |
| RLC sequence number | | Current RLC SN |
| RB Identity | | 20 |
| RLC sequence number | | Current RLC SN |
| Integrity protection mode info | | |
| Integrity protection mode command | | Modify |
| Downlink integrity protection activation info | | |
| | | Current RRC SN for SRB0<br>Current RRC SN for SRB1<br>0<br>Current RRC SN for SRB3<br>Current RRC SN for SRB4 |
| Integrity protection algorithm | | UIA1 |
| CN domain identity | | PS Domain |
| UE system specific security capability | A1 | Not Present |
| UE system specific security capability | A2 | |
| - Inter-RAT UE security capability | | |
| - CHOICE *system* | | GSM |
| - GSM security capability | | The indicated algorithms must be the same as the algorithms supported by the UE as indicated in the IE " UE system specific capability " in the RRC CONNECTION SETUP COMPLETE message. |

| Condition | Explanation |
|---|---|
| A1 | UE not supporting GSM |
| A2 | UE supporting GSM |

NOTE: "Current RLC SN" is defined as the value of VT(S) in the SS at the time when the SECURITY MODE COMMAND is submitted to RLC for transmission, that is, the RLC send sequence number of the next transmitted RLC PDU on the particular radio bearer. "Current RRC SN" is defined as the RRC message sequence number of the next transmitted RRC message on the particular radio bearer.

SECURITY MODE COMPLETE (Step 7)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Integrity check info | |
| - Message Authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Uplink integrity protection activation info | |
| - RRC message sequence number list | |
| -RRC message sequence number | Check to see if the RRC SN for RB 0 is present |
| -RRC message sequence number | Check to see if the RRC SN for RB 1 is present |
| -RRC message sequence number | Check to see if the RRC SN for RB 2 is present |
| -RRC message sequence number | Check to see if the RRC SN for RB 3 is present |
| -RRC message sequence number | Check to see if the RRC SN for RB 4 is present |
| Radio bearer uplink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB Identity | 1 |
| - RLC sequence number | Check to see if the RLC SN for RB1is present |
| - RB Identity | 2 |
| - RLC sequence number | SS records this value. See step 8 in 'expected sequence' |
| - RB Identity | 3 |
| - RLC sequence number | Check to see if the RLC SN for RB3 is present |
| - RB Identity | 4 |
| - RLC sequence number | Check to see if the RLC SN for RB4 is present |
| - RB Identity | 20 |
| - RLC sequence number | Check to see if the RLC SN for RB20 is present |

#### 8.1.7.1b.5 Test requirement

After step 2 the UE shall transmit a SECURITY MODE FAILURE message to report the protocol error detected in the first SECURITY MODE COMMAND message.

After step 4 the UE shall transmit a SECURITY MODE FAILURE message to report on the invalid configuration detected in the second SECURITY MODE COMMAND message.

At step 7 SS checks that the SECURITY MODE COMPLETE message is received ciphered using the old configuration and that the calculated "integrity check info" IE is correct according to the new integrity protection configuration (new key and HFN set to zero).

After step 7 SS verifies that all uplink signalling messages on RB2 are integrity protected with the new integrity protection configuration.

After uplink ciphering activation time has elapsed, SS verifies that the UE CAPABILITY INFORMATION message received is ciphered with the new ciphering configuration asindicated in the SECURITY MODE COMMAND (Step 6) message.

After downlink ciphering activation time has elapsed, SS shall apply ciphering to all downlink messages using the new ciphering configuration. At least one more cycle between step 8 and step 10 shall be repeated correctly after activation time on both directions has elapsed and the messages on both direction shall be ciphered and integrity protected.

### 8.1.7.1c Security mode control in CELL_DCH state (CN Domain switch and new keys at RRC message sequence number wrap around)

#### 8.1.7.1c.1 Definition

#### 8.1.7.1c.2 Conformance requirement

Upon reception of the SECURITY MODE COMMAND message, the UE shall:

…

2> set the variable LATEST_CONFIGURED_CN_DOMAIN equal to the IE "CN domain identity";

2> set the IE "Status" in the variable SECURITY_MODIFICATION for the CN domain indicated in the IE "CN domain identity" in the received SECURITY MODE COMMAND to the value "Affected";

…

If a new security key set (new ciphering and integrity protection keys) has been received from the upper layers [40] for the CN domain as indicated in the variable LATEST_CONFIGURED_CN_DOMAIN, the UE shall:

1> set the START value for the CN domain indicated in the variable LATEST_CONFIGURED_CN_DOMAIN to zero;

1> if the SECURITY MODE COMMAND message contained the IE "Integrity protection mode info":

2> for integrity protection in the downlink on each signalling radio bearer except RB2:

3> if IE "Integrity protection mode command" has the value "start":

…

3> else:

4> for the first message for which the RRC sequence number in a received RRC message for this signalling radio bearer is equal to or greater than the activation time as indicated in IE "Downlink integrity protection activation info" as included in the IE "Integrity protection mode info":

5> start using the new integrity key;

5> for this signalling radio bearer:

6> set the IE "Downlink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the downlink COUNT-I to zero.

2> for integrity protection in the uplink on each signalling radio bearer except RB2:

3> for the first message for which the RRC sequence number in a to be transmitted RRC message for this signalling radio bearer is equal to the activation time as indicated in IE "Uplink integrity protection activation info" included in the transmitted SECURITY MODE COMPLETE message:

4> start using the new integrity key;

4> for this signalling radio bearer:

5> set the IE "Uplink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the uplink COUNT-I to zero.

2> for integrity protection in the downlink on signalling radio bearer RB2:

3> at the received SECURITY MODECOMMAND:

4> start using the new integrity key;

4> set the IE "Downlink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the downlink COUNT-I to zero.

2> for integrity protection in the uplink on signalling radio bearer RB2 :

3> at the transmitted SECURITY MODE COMPLETE:

4> start using the new integrity key;

4> set the IE "Uplink RRC HFN" in the variable INTEGRITY_PROTECTION_INFO of the uplink COUNT-I to zero.

1> if the SECURITY MODE COMMAND message contained the IE "Ciphering mode info":

2> for each signalling radio bearer and for each radio bearer for the CN domain indicated in the variable LATEST_CONFIGURED_CN_DOMAIN:

3> if the IE "Status" in the variable CIPHERING_STATUS has the value "Started" for this CN domain, then for ciphering on radio bearers using RLC-TM:

4> at the CFN as indicated in the IE "Ciphering activation time for DPCH" in the IE "Ciphering mode info":

5> start using the new key in uplink and downlink;

5> set the HFN component of the COUNT-C to zero.

3> if the IE "Status" in the variable CIPHERING_STATUS has the value "Started" for this CN domain, then for ciphering on radio bearers and signalling radio bearers using RLC-AM and RLC-UM:

4> in the downlink, at the RLC sequence number indicated in IE "Radio bearer downlink ciphering activation time info" in the IE "Ciphering mode info":

5> start using the new key;

5> set the HFN component of the downlink COUNT-C to zero.

4> in the uplink, at the RLC sequence number indicated in IE "Radio bearer uplink ciphering activation time info":

5> start using the new key;

5> set the HFN component of the uplink COUNT-C to zero.

1> consider the value of the latest transmitted START value to be zero.

…

If the IE "Ciphering mode info" is present and if the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to FALSE, the UE shall:

1> apply the new ciphering configuration in the lower layers for all RBs that belong to a CN domain for which the IE "Status" of the variable SECURITY_MODIFICATION is set to "Affected" and all signalling radio bearers:

2> using the ciphering algorithm (UEA [40]) indicated by the IE "Ciphering algorithm" as part of the new ciphering configuration;

2> for each radio bearer that belongs to a CN domain for which the IE "Status" of the variable SECURITY_MODIFICATION is set to "Affected" and all signalling radio bearers:

3> using the value of the IE "RB identity" in the variable ESTABLISHED_RABS minus one as the value of BEARER [40] in the ciphering algorithm.

…

If the IE "Integrity protection mode info" is present and if the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to FALSE, the UE shall:

1> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to TRUE;

1> if IE "Integrity protection mode command" has the value "modify" and the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and this IE was included in SECURITY MODE COMMAND:

…

2> start applying the new integrity protection configuration in the downlink at the RRC sequence number, for each signalling radio bearer n, indicated by the entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Downlink integrity protection activation info", included in the IE "Integrity protection mode info";

2> set the content of the variable INTEGRITY_PROTECTION_ACTIVATION_INFO according to the following:

…

2> start applying the new integrity protection configuration in the uplink at the RRC sequence number, for each RBn, except for signalling radio bearer RB2, indicated by the entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Uplink integrity protection activation info", included in the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;

2> start applying the new integrity protection configuration in the uplink at the RRC sequence number for signalling radio bearer RB2, as specified for the procedure initiating the integrity protection reconfiguration;

2> start applying the new integrity protection configuration in the downlink at the RRC sequence number, for each RBn, except for signalling radio bearer RB2, indicated by the entry for signalling radio bearer n in the "RRC message sequence number list" in the IE "Downlink integrity protection activation info";

2> start applying the new integrity protection configuration in the downlink at the RRC sequence number for signalling radio bearer RB2, as specified for the procedure initiating the integrity protection reconfiguration.

Reference

3GPP TS 25.331 clauses 8.1.12.3, 8.6.3.4, 8.6.3.5.

### 8.1.7.1c.3 Test purpose

To verify that the UE correctly modifies the integrity protection and ciphering configuration with a newly generated PS domain keyset for when previously using the CS domain keyset.

To verify that the UE can handle change of integrity protection key when the RRC message sequence number wraps around when the SECURITY MODE COMMAND is received.

### 8.1.7.1c.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: has entered PS+CS-DCCH+DTCH_DCH (state 6-14) using procedure P24 as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_DCH state.

The SS transmits UE CAPABILITY ENQUIRY message repeatedly on the downlink DCCH using RLC-UM mode on SRB1. The UE shall respond to each downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS then sends UE CAPABILITY INFORMATION CONFIRM message to the UE using RLC-AM. This procedure is repeated until the RRC message sequence number for SRB 2 in downlink equals 15.

The SS initiates an Authentication procedure, which will result in the generation of a new security keyset (CK/IK). The SS transmits a valid SECURITY MODE COMMAND message which includes the correct downlink activation times and "Integrity check info" IE.

Then the UE shall check the integrity check info and shall start to configure ciphering in downlink according to the first valid SECURITY MODE COMMAND message. The UE shall transmit a SECURITY MODE COMPLETE message which contains the correct uplink activation times and also "Integrity check info" IE using the new integrity protection configuration.

The SS records the uplink ciphering activation time for RB 2.

Next, the SS transmits UE CAPABILITY ENQUIRY message repeatedly on the downlink DCCH using RLC-AM mode. The UE shall respond to each downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS then send UE CAPABILITY INFORMATION CONFIRM message to the UE. This cycle repeats itself until both the uplink and downlink ciphering activation time for RB 2 has elapsed. SS checks all uplink UE CAPABILITY INFORMATION messages are integrity-protected by UIA algorithm, and that the messages

contain the correct values for "Integrity check info" IE. This can be verified in the SS through the reception of a correctly ciphered and integrity-protected UE CAPABILITY INFORMATION message.

The SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-UM mode on SRB1. The UE shall respond to this message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS then send UE CAPABILITY INFORMATION CONFIRM message to the UE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_DCH state. |
| 2 | ← | | UE CAPABILITY ENQUIRY | The SS repeats step 2, 3 and 4 until its internal downlink RRC message sequence number for RB 2 has the value 15. |
| 3 | → | | UE CAPABILITY INFORMATION | The UE shall send this message on the uplink DCCH using RLC-AM. SS verifies that the last UE CAPABILITY INFORMATION message is both integrity-protected and ciphered correctly. |
| 4 | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 5 | ← | | AUTHENTICATION and CIPHERING REQUEST | GMM message which will result in the generation of a new security keyset |
| 6 | → | | AUTHENTICATION AND CIPHERING RESPONSE | GMM |
| 7 | ← | | SECURITY MODE COMMAND | See specific message contents. |
| 8 | → | | SECURITY MODE COMPLETE | The SS verifies that this message is sent using the old ciphering configuration. SS records the uplink ciphering activation time for RB 2. |
| 9 | ← | | UE CAPABILITY ENQUIRY | The SS repeats step 9, 10 and 11 until its internal uplink and downlink RLC SN have both surpassed the uplink and downlink ciphering activation time specified for RB2. This message is sent on the downlink DCCH using RLC-AM. |
| 10 | → | | UE CAPABILITY INFORMATION | The UE shall send this message on the uplink DCCH using RLC-AM. SS verifies that the last UE CAPABILITY INFORMATION message is both integrity-protected and ciphered correctly. |
| 11 | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 12 | ← | | UE CAPABILITY ENQUIRY | The SS sends this message with the downlink RRC message sequence number for SRB 1 with the value 0. |
| 13 | → | | UE CAPABILITY INFORMATION | The UE shall send this message on the uplink DCCH using RLC-AM. SS verifies that the last UE CAPABILITY INFORMATION message is both integrity-protected and ciphered correctly. |
| 14 | ← | | UE CAPABILITY INFORMATION CONFIRM | |

Specific Message Contents

SECURITY MODE COMMAND (Step 7)

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| Security Capability | Same as originally sent by UE (and stored in SS) |
| Ciphering mode info | |
| Ciphering mode command | Start/restart |
| Ciphering algorithm | UEA1 |
| Radio bearer downlink ciphering activation time info | |
| RB Identity | 1 |
| RLC sequence number | Current RLC SN |
| RB Identity | 2 |
| RLC sequence number | Current RLC SN + 2 |
| RB Identity | 3 |
| RLC sequence number | Current RLC SN |
| RB Identity | 4 |
| RLC sequence number | Current RLC SN |
| RB Identity | 20 |
| RLC sequence number | Current RLC SN |
| Integrity protection mode info | |
| Integrity protection mode command | Modify |
| Downlink integrity protection activation info | |
| | Current RRC SN for SRB0 |
| | Current RRC SN for SRB1 |
| | 0 |
| | Current RRC SN for SRB3 |
| | Current RRC SN for SRB4 |
| Integrity protection algorithm | UIA1 |
| CN domain identity | PS Domain |

NOTE: "Current RLC SN" is defined as the value of VT(S) in the SS at the time when the SECURITY MODE COMMAND is submitted to RLC for transmission, that is, the RLC send sequence number of the next transmitted RLC PDU on the particular radio bearer. "Current RRC SN" is defined as the RRC message sequence number of the next transmitted RRC message on the particular radio bearer.

SECURITY MODE COMPLETE (Step 8)

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Integrity check info | |
| - Message Authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. |
| Uplink integrity protection activation info | |
| - RRC message sequence number list | Check to see if the RRC SN for RB 0 to RB 4 are present |
| -RRC message sequence number | Check to see if the RRC SN for RB 0 is present |
| -RRC message sequence number | Check to see if the RRC SN for RB 1 is present |
| -RRC message sequence number | Check to see if the RRC SN for RB 2 is present |
| -RRC message sequence number | Check to see if the RRC SN for RB 3 is present |
| -RRC message sequence number | Check to see if the RRC SN for RB 4 is present |
| Radio bearer uplink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB Identity | 1 |
| - RLC sequence number | Check to see if the RLC SN for RB1 is present |
| - RB Identity | 2 |
| - RLC sequence number | SS records this value. See step 10 in 'expected sequence' |
| - RB Identity | 3 |
| - RLC sequence number | Check to see if the RLC SN for RB3 is present |
| - RB Identity | 4 |
| - RLC sequence number | Check to see if the RLC SN for RB4 is present |
| - RB Identity | 20 |
| - RLC sequence number | Check to see if the RLC SN for RB20 is present |

#### 8.1.7.1c.5 Test requirement

After step 7 the SS checks that the SECURITY MODE COMPLETE message is received ciphered using the old configuration and that the calculated "integrity check info" IE is correct.

After step 8 SS verifies that all uplink signalling messages on RB2 are integrity protected with UIA1 algorithm.

After uplink ciphering activation time has lapsed, SS verifies that the UE CAPABILITY INFORMATION message received is integrity protected with UIA algorithm and ciphered with the new ciphering configuration and algorithm indicated in the SECURITY MODE COMMAND (Step 7) message.

After downlink ciphering activation time has lapsed, SS shall apply ciphering to all downlink messages using the new configuration. At least one more cycle between step 9 and step 11 shall be repeated correctly after activation time on both directions has lapsed and the messages on both direction shall be ciphered and integrity protected..

### 8.1.7.1d Security mode control in CELL_DCH state interrupted by a cell update

#### 8.1.7.1d.1 Definition

#### 8.1.7.1d.2 Conformance requirement

If:

- a cell update procedure according to subclause 8.3.1 is initiated; and
- the received SECURITY MODE COMMAND message causes either,
  - the IE "Reconfiguration" in the variable CIPHERING_STATUS to be set to TRUE; and/or
  - the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to be set to TRUE:

the UE shall:

1> abort the ongoing integrity and/or ciphering reconfiguration;

1> resume data transmission on any suspended radio bearer and signalling radio bearer mapped on RLC-AM or RLC-UM;

1> allow the transmission of RRC messages on all signalling radio bearers with any RRC SN;

1> when the response message has been submitted to lower layers for transmission:

2> if the SECURITY MODE COMMAND message contained the IE "Ciphering mode info":

3> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and

3> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

2> if the SECURITY MODE COMMAND message contained the IE "Integrity protection mode info":

3> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and

3> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.

2> continue with any ongoing processes and procedures as if the invalid SECURITY MODE COMMAND message has not been received; and

2> clear the variable SECURITY_MODIFICATION;

2> the procedure ends.

Reference

3GPP TS 25.331 clause 8.1.12.4b,

### 8.1.7.1d.3 Test purpose

To confirm that the UE aborts the ongoing integrity and ciphering configuration and the security mode control procedure in case it is interrupted by a cell update procedure.

### 8.1.7.1d.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

The RRC CONNECTION SETUP message used in the initial setup should be as shown under Specific Message Contents below.

Test Procedure

The UE is in CELL_DCH state. The SS initiates an Authentication and Ciphering procedure, which will result in the generation of a new security keyset (CK/IK).

The SS transmits a valid SECURITY MODE COMMAND message which includes the correct downlink activation times and "Integrity check info" IE..

Then SS turns off the power in the cell after the UE has received the Security Mode Command , but before the UE could complete this security procedure to change over to the new security configuration. The UE will initiate the cell reselection procedure.

The UE shall then abort the Security procedure and is expected to continue to use the old security configuration..

Then after 6 seconds the power is turned on in the cell again.

The UE sends a CELL UPDATE message which includes the value "Radio link failure" set in IE "Cell update cause". The SS verifies that this message is integrity-protected correctly with the old security configuration. The SS shall transmit a CELL UPDATE CONFIRM message which includes "Physical channel information elements", on downlink DCCH after receiving CELL UPDATE message. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using RLC-AM. SS verifies that this message is both integrity-protected and ciphered correctly with the old security configuration.

Next, the SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM mode. The UE shall respond to with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM using the same old integrity and ciphering configuration as used before the SECURITY MODE COMMAND was received.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_DCH state. |
| 2 | ← | | AUTHENTICATION AND CIPHERING REQUEST | GMM message which will result in the generation of a new security keyset |
| 3 | → | | AUTHENTICATION AND CIPHERING RESPONSE | GMM |
| 4 | ← | | SECURITY MODE COMMAND | See specific message contents. The SS transmits a valid SECURITY MODE COMMAND message which includes the correct downlink activation times and "Integrity check info" IE. |
| 5 | | | | SS turns off power in the cell after the UE has received the Security Mode Command , but before the UE could complete this security procedure to change over to the new security configuration. |
| 6 | | | | The UE starts cell reselection |
| 7 | | | | After waiting for 6 seconds, the SS turns on power in the cell. |
| 8 | → | | CELL UPDATE | This message includes the value "Radio link failure" set in IE "Cell update cause". The SS verifies that message is integrity-protected correctly with the old security configuration |
| 9 | ← | | CELL UPDATE CONFIRM | This message includes "Physical channel information elements". |
| 10 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE shall send this message on the uplink DCCH using RLC-AM. SS verifies that message is both integrity-protected and ciphered correctly with the old security configuration |
| 11 | ← | | UE CAPABILITY ENQUIRY | The SS repeats step 11, 12 and 13 until its internal uplink and downlink RLC SN have both surpassed the uplink and downlink ciphering activation time specified for RB2. This message is sent on the downlink DCCH using RLC-AM. |
| 12 | → | | UE CAPABILITY INFORMATION | The UE shall send this message on the uplink DCCH using RLC-AM. SS verifies that the last UE CAPABILITY INFORMATION message is both integrity-protected and ciphered correctly. |
| 13 | ← | | UE CAPABILITY INFORMATION CONFIRM | |

Specific Message Contents

RRC CONNECTION SETUP (message used in the initial setup)

Use the same message type and contents as found in clause 9 of TS 34.108 with the following exception:

| | |
|---|---|
| Signalling RB information to setup | (AM DCCH for RRC) |
| - RB identity | Not Present |
| - CHOICE RLC info type | |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 32 |
| - Timer_RST | 500 |
| - Max_RST | 1 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | OMIT |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

SECURITY MODE COMMAND (Step 4 )

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| Security Capability | Same as originally sent by UE (and stored in SS) |
| Ciphering mode info | |
| Ciphering mode command | Start/restart |
| Ciphering algorithm | UEA1 |
| Activation time for DPCH | Not Present |
| Radio bearer downlink ciphering activation time info | |
| RB Identity | 1 |
| RLC sequence number | Current RLC SN |
| RB Identity | 2 |
| RLC sequence number | Current RLC SN + 2 |
| RB Identity | 3 |
| RLC sequence number | Current RLC SN |
| RB Identity | 4 |
| RLC sequence number | Current RLC SN |
| RB Identity | 20 |
| RLC sequence number | Current RLC SN |
| Integrity protection mode info | |
| Integrity protection mode command | Modify |
| Downlink integrity protection activation info | |
| | Current RRC SN for SRB0 |
| | Current RRC SN for SRB1 |
| | Current RRC SN for SRB2 |
| | Current RRC SN for SRB3 |
| | Current RRC SN for SRB4 |
| Integrity protection algorithm | UIA1 |
| CN domain identity | PS Domain |

NOTE: "Current RLC SN" is defined as the value of VT(S) in the SS at the time when the SECURITY MODE COMMAND is submitted to RLC for transmission, that is, the RLC send sequence number of the next transmitted RLC PDU on the particular radio bearer. "Current RRC SN" is defined as the RRC message sequence number of the next transmitted RRC message on the particular radio bearer.

CELL UPDATE (Step 8)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in clause 9 of TS 34.108 Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0000 0001' |
| Cell Update Cause | "Radio link failure" |

CELL UPDATE CONFIRM (Step 9) (FDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Same as CELL UPDATE message in step 8 |
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | Uplink DPCH info |
| -UplinkDPCH Info | Same as RADIO BEARER SETUP message used to move to intial condition |
| Downlink information common for all radio links | Same as RADIO BEARER SETUP message used to move to initial condition |
| Downlink information for each radio links | Same as RADIO BEARER SETUP message used to move to intial condition |

CELL UPDATE CONFIRM (Step 9) (TDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in clause 9 of TS 34.108 Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Same as CELL UPDATE message in step 8 |
| RRC State indicator | CELL_DCH |
| UplinkDPCH timeslots and codes | Same as RADIO BEARER SETUP message used to move to intial condition |
| Downlink information for each radio links | Same as RADIO BEARER SETUP message used to move to intial condition |

#### 8.1.7.1d.5 Test requirement

After uplink ciphering activation time has lapsed, SS verifies that the UE CAPABILITY INFORMATION message received at step 12 is integrity protected with UIA algorithm and ciphered with the old ciphering configuration and algorithm and not the one indicated in the SECURITY MODE COMMAND (Step 4) message.

### 8.1.7.2 Security mode command in CELL_FACH state

#### 8.1.7.2.1 Definition

#### 8.1.7.2.2 Conformance requirement

1. This procedure is used to trigger the start of ciphering, or to command the restart of ciphering with the new ciphering configuration for the signalling radio bearers and any radio bearers of a particular CN Domain. It is also used to start integrity protection or modify integrity protection configuration for signalling radio bearers.

2. When the UE receives a SECURITY MODE COMMAND message from the UTRAN, which indicates the downlink activation time for each effected SRB and RB, and new ciphering mode configuration, the UE shall apply the old ciphering configuration, for a particular SRB or RB, before the stated downlink activation time. It shall start to decipher using the new ciphering configuration at the downlink activation time.

3. The UE shall transmit SECURITY MODE COMPLETE message using the new integrity protection configuration stated in the received SECURITY MODE COMMAND message. The SECURITY MODE COMPLETE message shall include the ciphering uplink activation time. The UE shall start to apply the new ciphering configuration on the uplink direction, after the uplink activation time has elapsed respectively for each SRB or RB.

Reference

3GPP TS 25.331 clauses 8.1.12, 8.6.3.4, 8.6.3.5.

#### 8.1.7.2.3 Test purpose

To confirm that after the UE receives a SECURITY MODE COMMAND message, it transmits a SECURITY MODE COMPLETE message to the UTRAN using the old ciphering configuration together with the application of the new integrity protection configuration. To confirm that the UE applies the old ciphering configuration in the downlink prior to the activation time; and uses the new ciphering configuration on and after the activation time. To confirm that the UE starts to cipher its uplink transmissions after the uplink activation time stated in SECURITY MODE COMPLETE message is reached. To confirm that the UE sends a SECURITY MODE FAILURE message when the UE receives an invalid SECURITY MODE COMMAND message.

#### 8.1.7.2.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The SS initiates an Authentication and Ciphering procedure, which will result in the generation of a new security keyset (CK/IK). The SS transmits a SECURITY MODE COMMAND message which contains an unexpected critical message extension. The UE shall respond by sending SECURITY MODE FAILURE message on the DCCH. Next, SS transmits a valid SECURITY MODE COMMAND message which includes the correct downlink activation times and IE "Integrity check info". The UE shall check the integrity check info. It shall start to configure ciphering in downlink and transmit a SECURITY MODE COMPLETE message, which contains the correct uplink activation times using the new integrity protection configuration. This message shall contain the IE "Integrity check info". SS records the uplink ciphering activation time for RB 2. Next, SS transmits UE CAPABILITY ENQUIRY message repeatedly on the downlink DCCH using RLC-AM mode. The UE shall respond to each downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS checks all uplink messages are integrity-protected by UIA1 algorithm, and that the messages contain the correct values for "Integrity check info" IE by sending a UE CAPABILITY INFORMATION CONFIRM. This cycle repeats itself until both the uplink and downlink ciphering activation time for RB 2 have elapsed. After both the uplink and downlink ciphering activation time for RB 2 have passed, the UE shall be able to communicate with the SS using the new ciphering configurations. This can be verified in SS through the reception of a correctly ciphered and integrity-protected UE CAPABILITY INFORMATION message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | UE is initially in CELL_FACH state. |
| 1a | ← | | AUTHENTICATION AND CIPHERING REQUEST | GMM message which will result in the generation of a new security keyset |
| 1b | → | | AUTHENTICATION AND CIPHERING RESPONSE | GMM |
| 2 | ← | | SECURITY MODE COMMAND | See specific message content |
| 3 | → | | SECURITY MODE FAILURE | IE "Failure Cause" shall be set to "Protocol Error" and IE "Protocol Error Information" shall be set to "Message extension not comprehended". |
| 4 | | | Void | |
| 5 | | | Void | |
| 6 | | | Void | |
| 7 | | | Void | |
| 8 | ← | | SECURITY MODE COMMAND | See specific message contents. |
| 9 | → | | SECURITY MODE COMPLETE | SS verifies that this message is sent using the old ciphering configuration. SS records the uplink ciphering activation time for RB 2. |
| 10 | ← | | UE CAPABILITY ENQUIRY | SS repeats step 10,11 and 12 until its internal uplink and downlink RLC SN have both surpassed the uplink and downlink ciphering activation time specified for RB2. This message is sent on the downlink DCCH using RLC-AM. |
| 11 | → | | UE CAPABILITY INFORMATION | UE shall send this message on the uplink DCCH using RLC-AM. SS verifies that the last UE CAPABILITY INFORMATION message is both integrity-protected and ciphered correctly. |
| 12 | ← | | UE CAPABILITY INFORMATION CONFIRM | |

Specific Message Contents

SECURITY MODE COMMAND (Step 2)

| Information Element | Value/remark |
|---|---|
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| Critical extensions | 'FF'H |

SECURITY MODE COMMAND (Step 8)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| Security Capability | Same as originally sent by UE (and stored in SS) |
| Ciphering mode info | |
| Ciphering mode command | Start/restart |
| Ciphering algorithm | UEA1 |
| Activation time for DPCH | Not Present |
| Radio bearer downlink ciphering activation time info | |
| RB Identity | 1 |
| RLC sequence number | Current RLC SN |
| RB Identity | 2 |
| RLC sequence number | Current RLC SN + 2 |
| RB Identity | 3 |
| RLC sequence number | Current RLC SN |
| RB Identity | 4 |
| RLC sequence number | Current RLC SN |
| RB Identity | 20 |
| RLC sequence number | Current RLC SN |
| Integrity protection mode info | |
| Integrity protection mode command | Modify |
| Downlink integrity protection activation info | |
| | Current RRC SN for SRB0<br>Current RRC SN for SRB1<br>Current RRC SN for SRB2<br>Current RRC SN for SRB3<br>Current RRC SN for SRB4 |
| Integrity protection algorithm | UIA1 |
| CN domain identity | PS Domain |
| UE system specific security capability | Not Present in condition A1 |
| UE system specific security capability | Present In condition A2 |
| - Inter-RAT UE security capability | |
| - CHOICE *system* | GSM |
| - GSM security capability | The indicated algorithms must be the same as the algorithms supported by the UE as indicated in the IE " UE system specific capability " in the RRC CONNECTION SETUP COMPLETE message. |

| Condition | Explanation |
|---|---|
| A1 | UE not supporting GSM |
| A2 | UE supporting GSM |

SECURITY MODE COMPLETE (Step 9)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Integrity check info | |
| - Message Authentication code | Checked to see if present. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | Checked to see if present |
| Uplink integrity protection activation info | |
| - RRC message sequence number list | Check to see if it the RRC SN for RB 0 to RB 4 are present |
| Radio bearer uplink ciphering activation info | |
| - RB Identity other than RB2 | Check to see if the RLC SN for RB1, 3 , 4 and 20 are present |
| - RB Identity | 2 |
| - RLC sequence number | SS records this value. See step 10 in 'expected sequence' |

#### 8.1.7.2.5 Test requirement

After step 2 the UE shall transmit a SECURITY MODE FAILURE message to report the protocol error detected in the first SECURITY MODE COMMAND message.

After step 8 the SS checks that the SECURITY MODE COMPLETE message is received ciphered using the old configuration and that the calculated MAC-I values in "integrity check info" IE is correct.

After step 9 SS verifies that all uplink signalling messages on RB2 are integrity protected with UIA1 algorithm.

After uplink ciphering activation time has lapsed, SS verifies that the UE CAPABILITY INFORMATION message received is integrity protected with UIA algorithm and ciphered with the new ciphering configuration and algorithm indicated in the SECURITY MODE COMMAND (Step 8) message.

After downlink ciphering activation time has lapsed, SS shall apply ciphering to all downlink messages using the new configuration. At least one more cycle between step 10 and step 12 shall be repeated correctly after activation time on both directions has lapsed and the messages on both directions shall be ciphered and integrity protected.

### 8.1.7.3 Security mode command in CELL_DCH state (UEA2/UIA2, CS Domain)

#### 8.1.7.3.1 Definition

Applicable to all Rel-7 UEs which support FDD and CS domain services.

#### 8.1.7.3.2 Conformance requirement

Same conformance requirement as clause 8.1.7.1.2.

#### 8.1.7.3.3 Test purpose

Same test purpose as clause 8.1.7.1.3 except that ciphering algorithm used is UEA2 and integrity protection algorithm used is UIA2.

#### 8.1.7.3.4 Method of test

##### Initial Condition

System Simulator: 1 cell.

UE: CELL_DCH (state 6-9) as specified in clause 7.4 of TS 34.108.

##### Test Procedure

Same test procedure as clause 8.1.7.1.4 except that ciphering algorithm used is UEA2 and integrity protection algorithm used is UIA2.

##### Expected sequence

Same expected sequence as clause 8.1.7.1.4

##### Specific Message Contents

Same specific message contents as clause 8.1.7.1.4 except for the following:

SECURITY MODE COMMAND (Step 6)

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | |
| Ciphering algorithm | UEA2 |

#### 8.1.7.3.5 Test requirement

After step 2 the UE shall transmit a SECURITY MODE FAILURE message to report the protocol error detected in the first SECURITY MODE COMMAND message.

After step 4 the UE shall transmit a SECURITY MODE FAILURE message to report on the invalid configuration detected in the second SECURITY MODE COMMAND message.

After step 8 the SS checks that the SECURITY MODE COMPLETE message is received ciphered using the old configuration and that the calculated "integrity check info" IE is correct.

After step 9 SS verifies that all uplink signalling messages on RB2 are integrity protected using UIA2 algorithm.

After uplink ciphering activation time has lapsed, SS verifies that the UE CAPABILITY INFORMATION message received is integrity protected with UIA2 algorithm and ciphered with the new ciphering configuration and algorithm UEA2 indicated in the SECURITY MODE COMMAND (Step 6) message.

After downlink ciphering activation time has lapsed, SS shall apply ciphering to all downlink messages using the new configuration using UEA2. At least one more cycle between step 10 and step 12 shall be repeated correctly after activation time on both directions has lapsed and the messages on both direction shall be ciphered using UEA2 and integrity protected using UIA2.

## 8.1.7.3b Security mode command in CELL_DCH state (UEA2/UIA2, PS Domain)

### 8.1.7.3b.1 Definition

Applicable to all Rel-7 UEs which support FDD and PS domain services.

### 8.1.7.3b.2 Conformance requirement

Same conformance requirement as clause 8.1.7.1b.2.

### 8.1.7.3b.3 Test purpose

Same test purpose as clause 8.1.7.1b.3 except that ciphering algorithm used is UEA2 and integrity protection algorithm used is UIA2.

### 8.1.7.3b.4 Method of test

#### Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

#### Test Procedure

Same test procedure as clause 8.1.7.1b.4 except that ciphering algorithm used is UEA2 and integrity protection algorithm used is UIA2.

#### Expected sequence

Same expected sequence as clause 8.1.7.1b.4

#### Specific Message Contents

Same specific message contents as clause 8.1.7.1b.4 except for the following:

SECURITY MODE COMMAND (Step 6)

| Information Element | Condition | Value/remark |
|---|---|---|
| Ciphering mode info<br>Ciphering algorithm | | <br>UEA2 |

### 8.1.7.3b.5 Test requirement

After step 2 the UE shall transmit a SECURITY MODE FAILURE message to report the protocol error detected in the first SECURITY MODE COMMAND message.

After step 4 the UE shall transmit a SECURITY MODE FAILURE message to report on the invalid configuration detected in the second SECURITY MODE COMMAND message.

At step 7 SS checks that the SECURITY MODE COMPLETE message is received ciphered using the old configuration and that the calculated "integrity check info" IE is correct according to the new integrity protection configuration (new key and HFN set to zero).

After step 7 SS verifies that all uplink signalling messages on RB2 are integrity protected with the new integrity protection configuration using UIA2.

After uplink ciphering activation time has elapsed, SS verifies that the UE CAPABILITY INFORMATION message received is ciphered with the new ciphering configuration using UEA2 as indicated in the SECURITY MODE COMMAND (Step 6) message.

After downlink ciphering activation time has elapsed, SS shall apply ciphering to all downlink messages using the new ciphering configuration using UEA2. At least one more cycle between step 8 and step 10 shall be repeated correctly after activation time on both directions has elapsed and the messages on both directions shall be ciphered using UEA2 and integrity protected using UIA2.

## 8.1.7.3c Security mode control in CELL_DCH state (UEA2/UIA2, CN Domain switch and new keys at RRC message sequence number wrap around)

### 8.1.7.3c.1 Definition

Applicable to all Rel-7 UEs which support FDD and CS domain services and PS domain services.

### 8.1.7.3c.2 Conformance requirement

Same conformance requirement as clause 8.1.7.1c.2.

### 8.1.7.3c.3 Test purpose

Same test purpose as clause 8.1.7.1c.3 except that ciphering algorithm used is UEA2 and integrity protection algorithm used is UIA2.

### 8.1.7.3c.4 Method of test

#### Initial Condition

System Simulator: 1 cell.

UE: has entered PS+CS-DCCH+DTCH_DCH (state 6-14) using procedure P24 as specified in clause 7.4 of TS 34.108, UEA2 and UIA2 are configured.

#### Test Procedure

Same test procedure as clause 8.1.7.1c.4 except that ciphering algorithm used is UEA2 and integrity protection algorithm used is UIA2.

#### Expected sequence

Same expected sequence as clause 8.1.7.1c.4

#### Specific Message Contents

Same specific message contents as clause 8.1.7.1c.4 except for the following:

#### SECURITY MODE COMMAND (Step 7)

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info<br>Ciphering algorithm | <br>UEA2 |

#### 8.1.7.3c.5 Test requirement

After step 7 the SS checks that the SECURITY MODE COMPLETE message is received ciphered using the old configuration and that the calculated "integrity check info" IE is correct.

After step 8 SS verifies that all uplink signalling messages on RB2 are integrity protected with UIA2 algorithm.

After uplink ciphering activation time has lapsed, SS verifies that the UE CAPABILITY INFORMATION message received is integrity protected with UIA2 algorithm and ciphered with the new ciphering configuration and algorithm UEA2 indicated in the SECURITY MODE COMMAND (Step 7) message.

After downlink ciphering activation time has lapsed, SS shall apply ciphering to all downlink messages using the new configuration using UEA2. At least one more cycle between step 9 and step 11 shall be repeated correctly after activation time on both directions has lapsed and the messages in both directions shall be ciphered using UEA2 and integrity protected using UIA2.

### 8.1.7.3d Security mode control in CELL_DCH state interrupted by a cell update (UEA2/UIA2)

#### 8.1.7.3d.1 Definition

Applicable to all Rel-7 UEs which support FDD and PS domain services.

#### 8.1.7.3d.2 Conformance requirement

Same conformance requirement as clause 8.1.7.1d.2.

#### 8.1.7.3d.3 Test purpose

Same test purpose as clause 8.1.7.1d.3 except that ciphering algorithm used is UEA2 and integrity protection algorithm used is UIA2.

#### 8.1.7.3d.4 Method of test

##### Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

The RRC CONNECTION SETUP message used in the initial setup should be as shown under Specific Message Contents in clause 8.1.7.1d.4.

##### Test Procedure

Same test procedure as clause 8.1.7.1d.4 except that ciphering algorithm used is UEA2 and integrity protection algorithm used is UIA2.

##### Expected sequence

Same expected sequence as clause 8.1.7.1d.4

##### Specific Message Contents

Same specific message contents as clause 8.1.7.1d.4 except for the following:

SECURITY MODE COMMAND (Step 4 )

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info<br>Ciphering algorithm | <br>UEA2 |

#### 8.1.7.3d.5 Test requirement

After uplink ciphering activation time has lapsed, SS verifies that the UE CAPABILITY INFORMATION message received at step 12 is integrity protected with UIA1 algorithm and ciphered with the old ciphering configuration and algorithm UEA1 and not the one indicated in the SECURITY MODE COMMAND (Step 4) message.

### 8.1.7.4 Security mode command in CELL_FACH state (UEA2/UIA2)

#### 8.1.7.4.1 Definition

Applicable to all Rel-7 UEs which support FDD and PS domain services.

#### 8.1.7.4.2 Conformance requirement

Same conformance requirement as clause 8.1.7.2.2.

#### 8.1.7.4.3 Test purpose

Same test purpose as clause 8.1.7.2.3.

#### 8.1.7.4.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CELL_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

Same test procedure as clause 8.1.7.2.4 except that ciphering algorithm used is UEA2 and integrity protection algorithm used is UIA2.

Expected sequence

Same expected sequence as clause 8.1.7.2.4

Specific Message Contents

Same specific message contents as clause 8.1.7.2.4 except for the following:

SECURITY MODE COMMAND (Step 8)

| Information Element | Value/remark |
|---|---|
| Ciphering mode info<br>Ciphering algorithm | <br>UEA2 |

#### 8.1.7.4.5 Test requirement

After step 2 the UE shall transmit a SECURITY MODE FAILURE message to report the protocol error detected in the first SECURITY MODE COMMAND message.

After step 8 the SS checks that the SECURITY MODE COMPLETE message is received ciphered using the old configuration and that the calculated MAC-I values in "integrity check info" IE is correct.

After step 9 SS verifies that all uplink signalling messages on RB2 are integrity protected with UIA2 algorithm.

After uplink ciphering activation time has lapsed, SS verifies that the UE CAPABILITY INFORMATION message received is integrity protected with UIA2 algorithm and ciphered with the new ciphering configuration and algorithm using UEA2 indicated in the SECURITY MODE COMMAND (Step 8) message.

After downlink ciphering activation time has lapsed, SS shall apply ciphering using UEA2 to all downlink messages using the new configuration. At least one more cycle between step 10 and step 12 shall be repeated correctly after activation time on both directions has lapsed and the messages on both directions shall be ciphered using UEA2 and integrity protected using UIA2.

## 8.1.8 Counter check

### 8.1.8.1 Counter check in CELL_DCH state, with symmetric RAB

#### 8.1.8.1.1 Definition

#### 8.1.8.1.2 Conformance requirement

When the UE receives a COUNTER CHECK message it shall compare the COUNT-C MSB values received in the IE "RB COUNT-C MSB information" in the COUNTER CHECK message to the COUNT-C MSB values of the corresponding radio bearers.

The UE shall:

1> set the IE "RRC transaction identifier" in the COUNTER CHECK RESPONSE message to the value of "RRC transaction identifier" in the entry for the COUNTER CHECK message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry.

If:

- there is one or more radio bearer(s) using UM or AM RLC mode stored in the variable ESTABLISHED_RABS, which is (are) not included in the IE "RB COUNT-C MSB information"; or

- there is one or more radio bearer(s) included in the IE "RB COUNT-C MSB information", which is (are) not stored in the variable ESTABLISHED_RABS; or

- for any radio bearer (excluding signalling radio bearers) using UM or AM RLC mode stored in the variable ESTABLISHED_RABS and included in the IE "RB COUNT-C MSB information" with COUNT-C MSB values different from the MSB part of the COUNT-C values in the UE:

the UE shall:

1> include these radio bearers in the IE "RB COUNT-C information" in the COUNTER CHECK RESPONSE message. For any RB which is included in the IE "RB COUNT-C MSB information" in the COUNTER CHECK message but not stored in the variable ESTABLISHED_RABS in the UE, the MSB part of COUNT-C values in the COUNTER CHECK RESPONSE message shall be set identical to COUNT-C-MSB values in the COUNTER CHECK message. The LSB part shall be filled with zeroes.

The UE shall:

1> submit a COUNTER CHECK RESPONSE message to lower layers for transmission on the uplink DCCH using AM RLC.

When the COUNTER CHECK RESPONSE message has been submitted to lower layers for transmission the procedure ends.

If the UE receives a COUNTER CHECK message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;

1> include the IE "Identification of received message"; and

1> set the IE "Received message type" to COUNTER CHECK; and

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UE COUNTER CHECK message in the table "Rejected transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;

1> when the RRC STATUS message has been submitted to lower layers for transmission:

2> continue with any ongoing processes and procedures as if the invalid COUNTER CHECK message has not been received.

Reference

3GPP TS 25.331 clause 8.1.15.

#### 8.1.8.1.3 Test purpose

To confirm that the UE transmits a COUNTER CHECK RESPONSE message after it receives a COUNTER CHECK message from the SS. To confirm that the UE responds to the reception of an invalid downlink COUNTER CHECK message by transmitting a RRC STATUS message on the uplink DCCH, stating the correct error cause value in message.

#### 8.1.8.1.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_DCH state (state 6-10) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is brought to the CELL_DCH state after a successful outgoing call attempt. The SS transmits an invalid COUNTER CHECK message. This message contains an unexpected critical message extension. The UE shall detect a protocol error and send RRC STATUS message to report this event. Next, the SS transmits a COUNTER CHECK message that includes the current COUNT-C MSB information in each radio access bearer. The UE shall react by sending a COUNTER CHECK RESPONSE message on the uplink DCCH, which does not include "RB COUNT-C information" IE. The SS transmits a COUNTER CHECK message which includes the current COUNT-C MSB information reversed all the bits in each radio bearer. The UE shall send a COUNTER CHECK RESPONSE message on the uplink DCCH, specifying the current COUNT-C information for each radio access bearer established. The SS transmits a COUNTER CHECK message which includes a different radio bearer. The UE shall send a COUNTER CHECK RESPONSE message on the uplink DCCH, specifying the current COUNT-C information for each radio access bearer established.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_DCH state after an outgoing call has been established successfully. |
| 2 | ← | | COUNTER CHECK | See specific message contents for this message |
| 3 | → | | RRC STATUS | UE shall detect a protocol error and then transmit this message. |
| 4 | ← | | COUNTER CHECK | See specific message content. |
| 5 | → | | COUNTER CHECK RESPONSE | The message shall not include the IE "RB COUNT-C information". |
| 6 | ← | | COUNTER CHECK | See specific message content. |
| 7 | → | | COUNTER CHECK RESPONSE | The message shall include the IE "RB COUNT-C information". |
| 8 | ← | | COUNTER CHECK | See specific message content. |
| 9 | → | | COUNTER CHECK RESPONSE | The message shall include the IE "RB COUNT-C information". |

Specific Message Contents

COUNTER CHECK (Step 2)

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

RRC STATUS (Step 3)

Use the same message type found in Annex A, with the following exception.

| Information Element | Value/remark |
|---|---|
| Protocol Error Information<br>- Protocol Error Cause | <br>Message extension not comprehended |

COUNTER CHECK (Step 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| RB COUNT-C MSB information | |
| - RB identity | 20 |
| - COUNT-C MSB uplink | Current COUNT-C MSB for RB#20 in uplink |
| - COUNT-C MSB downlink | Current COUNT-C MSB for RB#20 in downlink |

COUNTER CHECK RESPONSE (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Not checked |
| RB COUNT-C information | Check to if this IE is absent |

COUNTER CHECK (Step 6)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| RB COUNT-C MSB information | |
| - RB identity | Check to see if set to 20 |
| - COUNT-C MSB uplink | Toggle all bits of the current COUNT-C MSB in uplink for RB#20 |
| - COUNT-C MSB downlink | Toggle all bits of the current COUNT-C MSB in downlink for RB#20 |

COUNTER CHECK RESPONSE (Step 7)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Not checked |
| RB COUNT-C information | |
| - RB identity | Check to see if set to 20 |
| - COUNT-C uplink | Check to see if set to Current COUNT-C for RB#20 in uplink |
| - COUNT-C downlink | Check to see if set to COUNT-C for RB#20 in downlink |

COUNTER CHECK (Step 8)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| RB COUNT-C MSB information | |
| - RB identity | Check to see if set to 25 |
| - COUNT-C MSB uplink | Arbitrary COUNT-C MSB in uplink for RB#25 |
| - COUNT-C MSB downlink | Arbitrary COUNT-C MSB in downlink for RB#25 |

COUNTER CHECK RESPONSE (Step 9)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Not checked |
| RB COUNT-C information | |
| - RB identity | Check to see if set to 20 |
| - COUNT-C uplink | Check to see if set to Current COUNT-C for RB#20 in uplink |
| - COUNT-C downlink | Check to see if set to COUNT-C for RB#20 in downlink |
| - RB identity | Check to see if set to 25 |
| - COUNT-C uplink | Check to see if COUNT-C MSB is set to COUNT-C MSB in uplink for RB#25 in step 8 and LSB is fill with '0' |
| - COUNT-C downlink | Check to see if COUNT-C MSB is set to COUNT-C MSB in downlink for RB#25 in step 8 and LSB is fill with '0' |

#### 8.1.8.1.5 Test requirement

After step 2, the UE shall transmit a RRC STATUS message on the uplink DCCH. The protocol error cause shall be set to "Message extension not comprehended".

After step 4 the UE shall transmit a COUNTER CHECK RESPONSE message which does not includes the IE "RB COUNT-C information" to indicates that a matched comparison result is obtained.

After step 6, the UE shall transmit a COUNTER CHECK RESPONSE message which includes the IE "RB COUNT-C information" to report that a mismatch in COUNT-C value is detected in RB#20.

After step 8, the UE shall transmit a COUNTER CHECK RESPONSE message which includes the IE "RB COUNT-C information" to report that RB#25 is not found in variable ESTABLISHED_RABS and RB#20 is not found in IE "RB COUNT-C MSB information".

### 8.1.8.2 Counter check in CELL_FACH state

#### 8.1.8.2.1 Definition

#### 8.1.8.2.2 Conformance requirement

When the UE receives a COUNTER CHECK message it shall compare the COUNT-C MSB values received in the IE "RB COUNT-C MSB information" in the COUNTER CHECK message to the COUNT-C MSB values of the corresponding radio bearers.

The UE shall:

1> set the IE "RRC transaction identifier" in the COUNTER CHECK RESPONSE message to the value of "RRC transaction identifier" in the entry for the COUNTER CHECK message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry.

If:

- there is one or more radio bearer(s) using UM or AM RLC mode stored in the variable ESTABLISHED_RABS, which is (are) not included in the IE "RB COUNT-C MSB information"; or

- there is one or more radio bearer(s) included in the IE "RB COUNT-C MSB information", which is (are) not stored in the variable ESTABLISHED_RABS; or

- for any radio bearer (excluding signalling radio bearers) using UM or AM RLC mode stored in the variable ESTABLISHED_RABS and included in the IE "RB COUNT-C MSB information" with COUNT-C MSB values different from the MSB part of the COUNT-C values in the UE:

the UE shall:

1> include these radio bearers in the IE "RB COUNT-C information" in the COUNTER CHECK RESPONSE message. For any RB which is included in the IE "RB COUNT-C MSB information" in the COUNTER CHECK message but not stored in the variable ESTABLISHED_RABS in the UE, the MSB part of COUNT-C values in the COUNTER CHECK RESPONSE message shall be set identical to COUNT-C-MSB values in the COUNTER CHECK message. The LSB part shall be filled with zeroes.

The UE shall:

1> submit a COUNTER CHECK RESPONSE message to lower layers for transmission on the uplink DCCH using AM RLC.

When the COUNTER CHECK RESPONSE message has been submitted to lower layers for transmission the procedure ends.

If the UE receives a COUNTER CHECK message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;

1> include the IE "Identification of received message"; and

1> set the IE "Received message type" to COUNTER CHECK; and

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the UE COUNTER CHECK message in the table "Rejected transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;

1> when the RRC STATUS message has been submitted to lower layers for transmission:

2> continue with any ongoing processes and procedures as if the invalid COUNTER CHECK message has not been received.

Reference

3GPP TS 25.331 clause 8.1.15.

#### 8.1.8.2.3 Test purpose

To confirm that the UE transmits a COUNTER CHECK RESPONSE message after it receives a COUNTER CHECK message from the SS. To confirm that the UE responds to the reception of an invalid downlink COUNTER CHECK message by transmitting a RRC STATUS message on the uplink DCCH, stating the correct error cause value in message.

#### 8.1.8.2.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_FACH state (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is brought to the CELL_FACH state after a successful outgoing call attempt. The SS transmits an invalid COUNTER CHECK message. This message contains an unexpected critical message extension. The UE shall detect a protocol error and send RRC STATUS message to report this event. Next, the SS transmits a COUNTER CHECK message that includes the current COUNT-C MSB information in each radio access bearer. The UE shall react by sending a COUNTER CHECK RESPONSE message on the uplink DCCH, which does not include "RB COUNT-C information" IE. The SS transmits a COUNTER CHECK message, which includes the current COUNT-C MSB information for each radio bearer but with all the bits reversed. The UE shall send a COUNTER CHECK RESPONSE message on the uplink DCCH, specifying the current COUNT-C information for each radio access bearer established. The SS transmits a COUNTER CHECK message which includes a different radio bearer. The UE shall send a COUNTER CHECK RESPONSE message on the uplink DCCH, specifying the current COUNT-C information for each radio access bearer established.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_FACH state after an outgoing call has been established successfully. |
| 2 | ← | | COUNTER CHECK | See specific message contents for this message |
| 3 | → | | RRC STATUS | UE shall detect a protocol error and then transmit this message. |
| 4 | ← | | COUNTER CHECK | See specific message content. |
| 5 | → | | COUNTER CHECK RESPONSE | The message shall not include the IE "RB COUNT-C information". |
| 6 | ← | | COUNTER CHECK | See specific message content. |
| 7 | → | | COUNTER CHECK RESPONSE | The message shall include the IE "RB COUNT-C information". |
| 8 | ← | | COUNTER CHECK | See specific message content. |
| 9 | → | | COUNTER CHECK RESPONSE | The message shall include the IE "RB COUNT-C information". |

Specific Message Contents

COUNTER CHECK (Step 2)

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

RRC STATUS (Step 3)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Protocol Error Information | |
| - Protocol Error Cause | Message extension not comprehended |

COUNTER CHECK (Step 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| RB COUNT-C MSB information | |
| - RB identity | 20 |
| - COUNT-C MSB uplink | Current COUNT-C MSB for RB#20 in uplink |
| - COUNT-C MSB downlink | Current COUNT-C MSB for RB#20 in downlink |

COUNTER CHECK RESPONSE (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Not checked |
| RB COUNT-C information | Check to if this IE is absent |

COUNTER CHECK (Step 6)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| RB COUNT-C MSB information | |
| - RB identity | 20 |
| - COUNT-C MSB uplink | Toggle all bits of the current COUNT-C MSB in uplink for RB#20 |
| - COUNT-C MSB downlink | Toggle all bits of the current COUNT-C MSB in downlink for RB#20 |

COUNTER CHECK RESPONSE (Step 7)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Not checked |
| RB COUNT-C information | |
| - RB identity | Check to see if set to 20 |
| - COUNT-C uplink | Check to see if set to Current COUNT-C for RB#20 in uplink |
| - COUNT-C downlink | Check to see if set to COUNT-C for RB#20 in downlink |

COUNTER CHECK (Step 8)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| RB COUNT-C MSB information | |
| - RB identity | Check to see if set to 25 |
| - COUNT-C MSB uplink | Arbitrary COUNT-C MSB in uplink for RB#25 |
| - COUNT-C MSB downlink | Arbitrary COUNT-C MSB in downlink for RB#25 |

COUNTER CHECK RESPONSE (Step 9)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Integrity check info | Not checked |
| RB COUNT-C information | |
| - RB identity | Check to see if set to 20 |
| - COUNT-C uplink | Check to see if set to Current COUNT-C for RB#20 in uplink |
| - COUNT-C downlink | Check to see if set to COUNT-C for RB#20 in downlink |
| - RB identity | Check to see if set to 25 |
| - COUNT-C uplink | Check to see if COUNT-C MSB is set to COUNT-C MSB in uplink for RB#25 in step 8 and LSB is fill with '0' |
| - COUNT-C downlink | Check to see if COUNT-C MSB is set to COUNT-C MSB in downlink for RB#25 in step 8 and LSB is fill with '0' |

#### 8.1.8.2.5 Test requirement

After step 2, the UE shall transmit a RRC STATUS message on the uplink DCCH. The protocol error cause shall be set to "Message extension not comprehended".

After step 4 the UE shall transmit a COUNTER CHECK RESPONSE message which does not includes the IE "RB COUNT-C information" to indicates that a matched comparison result is obtained.

After step 6, the UE shall transmit a COUNTER CHECK RESPONSE message which includes the IE "RB COUNT-C information" to report that a mismatch in COUNT-C value is detected in RB#20.

After step 8, the UE shall transmit a COUNTER CHECK RESPONSE message which includes the IE "RB COUNT-C information" to report that RB#25 is not found in variable ESTABLISHED_RABS and RB#20 is not found in IE "RB COUNT-C MSB information".

### 8.1.8.3 Counter check in CELL_DCH state, with asymmetric RAB

#### 8.1.8.3.1 Definition

#### 8.1.8.3.2 Conformance requirement

When the UE receives a COUNTER CHECK message it shall compare the COUNT-C MSB values received in the IE "RB COUNT-C MSB information" in the COUNTER CHECK message to the COUNT-C MSB values of the corresponding radio bearers.

The UE shall:

1> if no COUNT-C exists for a radio bearer for a given direction (uplink or downlink) because:

2> it is a uni-directional radio bearer configured only for the other direction (downlink or uplink respectively), or

2> it has been configured to RLC-TM mode in one direction (uplink or downlink) and RLC-UM in the other (downlink or uplink respectively),

3> set the COUNT-C in the IE "RB COUNT-C information" in the COUNTER CHECK RESPONSE message, to any value;

1> submit a COUNTER CHECK RESPONSE message to lower layers for transmission on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.1.15.

8.1.8.3.3 Test purpose

To confirm that the UE transmits a COUNTER CHECK RESPONSE message even if COUNT-C does not exist for a radio bearer for a given direction for reasons given in the above section.

8.1.8.3.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CS-DCCH_DCH (state 6-5) or PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the domain supported by the UE.

Test Procedure

The UE is brought to the CELL_DCH state after a successful outgoing call attempt. SS sends a RADIO BEARER SETUP message to set up an asymmetric radio bearer. UE shall configure accordingly and then reply with a RADIO BEARER SETUP COMPLETE message. Then SS transmits a COUNTER CHECK message. The UE shall send a COUNTER CHECK RESPONSE message on the uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_DCH state after an outgoing call has been established successfully. |
| 2 | ← | | RADIO BEARER SETUP | See specific message contents for this message |
| 3 | → | | RADIO BEARER SETUP COMPLETE | |
| 4 | ← | | COUNTER CHECK | See specific message content. |
| 5 | → | | COUNTER CHECK RESPONSE | The message shall include the IE "RB COUNT-C information". |

Specific Message Contents

RADIO BEARER SETUP (Step 2) (FDD)

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type indicated by "Non speech from CELL_DCH to CELL_DCH in CS" or "Speech from CELL_DCH to CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | |
| - RAB info | |
| - RAB identity | 0000 0101B (for PS domain) or 0000 0001B (for CS domain)<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain or CS domain (depending on the domain supported by the UE) |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | UseT315 (for PS domain) or UseT314 (for CS domain) |
| - RB information to setup | |
| - RB identity | 9 |
| - PDCP info | |
| - Support for lossless SRNS relocation | FALSE |
| - Max PDCP SN window size | Not present |
| - PDCP PDU header | Absent |
| - Header compression information | Not present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | TM RLC |
| - Transmission RLC discard | Not Present |
| - Segmentation indication | False |
| - CHOICE Downlink RLC mode | UM RLC |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| Added or Reconfigured TrCH information list | 1 DCH added |
| - Added or Reconfigured UL TrCH information | |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set |

| Information Element | Value/remark |
|---|---|
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE Logical Channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set |
| Added or Reconfigured TrCH information list | 1 DCH |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 9 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |
| - UL TrCH identity | 1 |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |

RADIO BEARER SETUP (Step 2) (3.84 Mcps TDD)

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type indicated by "Non speech from CELL_DCH to CELL_DCH in CS" or "Speech from CELL_DCH to CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | |
| - RAB info | |
| - RAB identity | 0000 0101B (for PS domain) or 0000 0001B (for CS domain)<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain or CS domain (depending on the domain supported by the UE) |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | UseT315 (for PS domain) or UseT314 (for CS domain) |
| - RB information to setup | |
| - RB identity | 9 |
| - PDCP info | |
| - Support for lossless SRNS relocation | FALSE |
| - Max PDCP SN window size | Not present |
| - PDCP PDU header | Absent |
| - Header compression information | Not present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | TM RLC |
| - Transmission RLC discard | Not Present |
| - Segmentation indication | False |
| - CHOICE Downlink RLC mode | UM RLC |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |

| Information Element | Value/remark |
|---|---|
| Added or Reconfigured TrCH information list | 1 DCH added |
| - Added or Reconfigured UL TrCH information | |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE Logical Channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set |
| Added or Reconfigured TrCH information list | 1 DCH |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 9 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |
| - UL TrCH identity | 1 |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |

RADIO BEARER SETUP (Step 2) (1.28 Mcps TDD)

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type indicated by "Non speech from CELL_DCH to CELL_DCH in CS" or "Speech from CELL_DCH to CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | |
| - RAB info | |
| - RAB identity | 0000 0101B (for PS domain) or 0000 0001B (for CS domain)<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain or CS domain (depending on the domain supported by the UE) |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | UseT315 (for PS domain) or UseT314 (for CS domain) |
| - RB information to setup | |
| - RB identity | 9 |
| - PDCP info | |
| - Support for lossless SRNS relocation | FALSE |
| - Max PDCP SN window size | Not present |
| - PDCP PDU header | Absent |
| - Header compression information | Not present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | TM RLC |
| - Transmission RLC discard | Not Present |
| - Segmentation indication | False |
| - CHOICE Downlink RLC mode | UM RLC |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |

| Information Element | Value/remark |
|---|---|
| Added or Reconfigured TrCH information list | 1 DCH added |
| - Added or Reconfigured UL TrCH information | |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.11 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.11 Parameter Set |
| - CHOICE Logical Channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.11 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.11 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.11 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.11 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.11 Parameter Set |
| Added or Reconfigured TrCH information list | 1 DCH |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 9 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |
| - UL TrCH identity | 1 |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |

RADIO BEARER SETUP (Step 2) (7.68 Mcps TDD)

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type indicated by "Non speech from CELL_DCH to CELL_DCH in CS" or "Speech from CELL_DCH to CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | |
| - RAB info | |
| - RAB identity | 0000 0101B (for PS domain) or 0000 0001B (for CS domain)<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain or CS domain (depending on the domain supported by the UE) |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | UseT315 (for PS domain) or UseT314 (for CS domain) |
| - RB information to setup | |
| - RB identity | 9 |
| - PDCP info | |
| - Support for lossless SRNS relocation | FALSE |
| - Max PDCP SN window size | Not present |
| - PDCP PDU header | Absent |
| - Header compression information | Not present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | TM RLC |
| - Transmission RLC discard | Not Present |
| - Segmentation indication | False |
| - CHOICE Downlink RLC mode | UM RLC |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |

| Information Element | Value/remark |
|---|---|
| Added or Reconfigured TrCH information list | 1 DCH added |
| - Added or Reconfigured UL TrCH information | |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.11.6 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.11.6 Parameter Set |
| - CHOICE Logical Channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.11.6 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.11.6 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.11.6 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.11.6 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.11.6 Parameter Set |
| Added or Reconfigured TrCH information list | 1 DCH |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 9 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |
| - UL TrCH identity | 1 |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |

COUNTER CHECK (Step 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Next RRC SN |
| RB COUNT-C MSB information | |
| - RB COUNT-C MSB information | |
| - RB identity | 9 |
| - COUNT-C MSB uplink | Arbitrary |
| - COUNT-C MSB downlink | Set to current COUNT-C for RB#9 in downlink |

COUNTER CHECK RESPONSE (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Not checked |
| RB COUNT-C information | |
| - RB identity | Check to see if set to 9 |
| - COUNT-C uplink | Check to see if it is present |
| - COUNT-C downlink | Check to see if it is present |

#### 8.1.8.3.5 Test requirement

After step 2, the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the uplink DCCH.

After step 4, the UE shall transmit a COUNTER CHECK RESPONSE message.

## 8.1.9 Signalling Connection Release Indication

### 8.1.9.1 Definition

### 8.1.9.2 Conformance requirement

The UE shall, on receiving a request to release (abort) the signalling connection from upper layers for a specific CN domain:

1> if a signalling connection in the variable ESTABLISHED_SIGNALLING_CONNECTIONS for the specific CN domain identified with the IE "CN domain identity" exists:

2> initiate the signalling connection release indication procedure.

1> otherwise:

…

The UE shall:

1> set the IE "CN Domain Identity" to the value indicated by the upper layers. The value of the IE indicates the CN domain whose associated signalling connection the upper layers are indicating to be released;

1> remove the signalling connection with the identity indicated by upper layers from the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

1> transmit a SIGNALLING CONNECTION RELEASE INDICATION message on DCCH using AM RLC.

When the SIGNALLING CONNECTION RELEASE INDICATION message has been submitted to lower layers for transmission the procedure ends.

In order to establish an MM connection, the mobile station proceeds as follows (TS 24 008 clause 4.5.1.1, 4.5.1.2, 4.5.3.1)

If no RR connection exists, the MM sublayer requests the RR sublayer to establish an RR connection and enters MM sublayer state WAIT FOR RR CONNECTION (MM CONNECTION). This request contains an establishment cause and a CM SERVICE REQUEST message. When the establishment of an RR connection is indicated by the RR sublayer, the MM sublayer of the mobile station starts timer T3230, gives an indication to the CM entity that requested the MM connection establishment, and enters MM sublayer state WAIT FOR OUTGOING MM CONNECTION.

If T3230 expires (i.e. no response is given but a RR connection is available) the MM connection establishment is aborted and the requesting CM sublayer is informed. If no other MM connection exists then the mobile station shall proceed as described in clause 4.5.3.1 for release of the RR connection. Otherwise the mobile station shall return to the MM sublayer state where the request of an MM connection was received, i.e. to MM sublayer state MM connection active. Other ongoing MM connections (if any) shall not be affected.

If all MM connections are released by their CM entities, and no RRLP procedure (see 3GPP TS 04.31 [23b]) and no LCS procedure over RRC (see 3GPP TS 25.331 [23c]) is ongoing, the mobile station shall set timer T3240 and enter the state WAIT FOR NETWORK COMMAND, expecting the release of the RR connection.

The UE initiates the Service request procedure by sending a SERVICE REQUEST message. The timer T3317 shall be started after the SERVICE REQUEST message has been sent and the UE enters the GMM-SERVICE-REQUEST-INITIATED is entered. The SERVICE REQUEST message shall contain the valid P-TMSI and the Service type shall indicate either signalling or paging response(TS 24.008 clause 4.7.13.1). The following abnormal cases can be identified(TS 24.008 clause 4.7.13.5).

c) T3317 expired

The UE shall enter GMM-REGISTERED state.

If the UE is in PMM-IDLE state then the procedure shall be aborted and the UE shall initiate a PS signalling connection release.

Reference

3GPP TS 25.331 clause 8.1.14, TS 24.008 clause 4.5.1.1, 4.5.1.2, 4.5.3.1, 4.7.13.1, 4.7.13.5.

### 8.1.9.3 Test purpose

To confirm that the UE transmits a SIGNALLING CONNECTION RELEASE INDICATION message after upper layer requests to release its signalling connection.

### 8.1.9.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE transmits an RRC CONNECTION REQUEST message to the SS on the uplink CCCH by attempting to make an outgoing call. Then the UE shall establish an RRC connection and transmit a SERVICE REQUEST message or a CM SERVICE REQUEST message using the INITIAL DIRECT TRANSFER message depending on supported CN domain. The SS does not respond to this message, and the UE shall send a SIGNALLING CONNECTION RELEASE INDICATION message which includes the CN domain identity with the same value as that in the INITIAL DIRECT TRANSFER message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE initiates an outgoing call. |
| 2 | → | | RRC CONNECTION REQUEST | |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | | | | The UE configures the layer 2 and layer 1. |
| 5 | → | | RRC CONNECTION SETUP COMPLETE | |
| 6 | → | | INITIAL DIRECT TRANSFER | Depending on supported CN domain, includes SERVICE REQUEST message (PS domain) or CM SERVICE REQUEST message (CS domain) is emdedded in INITIAL DIRECT TRANSFER message. |
| 7 | | | | The SS does not respond and waits for T3317 (PS domain) or T3230+T3240 (CS domain). |
| 8 | → | | SIGNALLING CONNECTION RELEASE INDICATION | The timing of this message is not checked. |

Specific Message Content

SIGNALLING CONNECTION RELEASE INDICATION (Step 8)

| Information Element | Value/remark |
|---|---|
| CN domain identity | Check to see if this value is the same as in the uplink INITIAL DIRECT TRANSFER message. |

### 8.1.9.5 Test requirement

After step 7 the UE shall transmit a SIGNALLING CONNECTION RELEASE INDICATION message which includes the same CN domain identity as that found in the INITIAL DIRECT TRANSFER message.

## 8.1.9a Signalling Connection Release Indication (RLC re-establishment): CS signalling connection release

### 8.1.9a.1 Definition

### 8.1.9a.2 Conformance requirement

If a re-establishment of RLC on signalling radio bearer RB2 occurs before the successful delivery of the SIGNALLING CONNECTION RELEASE INDICATION message has been confirmed by RLC, the UE shall:

1> retransmit the SIGNALLING CONNECTION RELEASE INDICATION message on the uplink DCCH using AM RLC on signalling radio bearer RB2.

Reference

3GPP TS 25.331 clause 8.1.14.2a.

### 8.1.9a.3 Test purpose

To confirm that the UE re-transmits a SIGNALLING CONNECTION RELEASE INDICATION message after it re-establishes the RLC entity on signalling radio bearer RB2 if SRNS relocation occurs before the successful delivery of SIGNALLING CONECTION RELEASE INDICATION message.

### 8.1.9a.4 Method of test

Initial Condition

System Simulator: 1 cells – Cell 1.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH mode. The SS transmits a DOWNLINK DIRECT TRANSFER message. This message contains a NAS message (AUTHENTICATION REQUEST for CS domain or AUTHENTICATION AND CIPHERING REQUEST for PS domain). The UE shall transmit an UPLINK DIRECT TRANSFER message (AUTHENTICATION RESPONSE) using AM on DCCH. After SS responses with a DOWNLINK DIRECT TRANSFER message (AUTHENTICATION REJECT), SS shall set the RLC entity for SRB2 to stop and wait for T3240 to expire in the UE. The UE shall send a SIGNALLING CONNECTION RELEASE INDICATION message which includes the CN domain identity with the same value as that in the UPLINK DIRECT TRANSFER message. But SS do not respond with STATUS PDU for the AM DATA PDU with POLL. The SS then sends a UTRAN MOBILITY INFORMATION message on SRB1 requesting the UE to do a SRNS relocation. SS shall set the RLC entity for SRB2 to continue. The UE shall send a UTRAN MOBILITY INFORMATION CONFIRM message. The UE shall re-transmit a SIGNALLING CONNECTION RELEASE INDICATION message on the uplink DCCH using AM RLC.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | DOWNLINK DIRECT TRANSFER (AUTHENTICATION REQUEST) | Depending on supported CN domain, AUTHENTICATION AND CIPHERING REQUEST message (PS domain) or AUTHENTICATION REQUEST (CS domain) message is embedded in DOWNLINK DIRECT TRANSFER message. An invalid SQN is provided in this message. |
| 2 | → | | UPLINK DIRECT TRANSFER (AUTHENTICATION RESPONSE) | |
| 3 | ← | | DOWNLINK DIRECT TRANSFER (AUTHENTICATION REJECT) | After SS transmits this message, SS sets the RLC entity for SRB2 to stop and waits for T3240 to expire. |
| 4 | → | | SIGNALLING CONNECTION RELEASE INDICATION | |
| 5 | ← | | UTRAN MOBILITY INFORMATION | . SS sets RLC for SRB2 to continue. |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | UE sends this message on uplink DCCH on AM. |
| 7 | → | | SIGNALLING CONNECTION RELEASE INDICATION | UE re-transmits this message. |

Specific Message Content

DOWNLINK DIRECT TRANSFER (Step 1)

Use the same message sub-type as found in TS 34.108 clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| CN domain identity | CS domain or PS domain |
| NAS message | AUTHENTICATION REQUEST (CS domain) or AUTHENTICATION AND CIPHERING REQUEST (PS domain) |

UPLINK DIRECT TRANSFER (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| CN domain identity | CS domain or PS domain |
| NAS message | AUTHENTICATION FAILURE(CS domain) or AUTHENTICATION AND CIPHERING FAILURE (PS domain) |
| Measured results on RACH | Not checked |

UTRAN MOBILITY INFORMATION (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | This presence of this IE is dependent on IXIT statements in TS 34.123-2. If ciphering is indicated to be active, this IE present with the values of the sub IEs as stated below. Else, this IE is omitted. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA0 or UEA1. The indicated algorithm must be one of the algorithms supported by the UE as indicated in the IE "security capability" in the RRC CONNECTION SETUP COMPLETE message. |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256, this IE is set to "Not present" if only PS RABs are established during the initial setup procedure. |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 20, this IE is set to "Not present" if PS RAB is not established during the initial setup procedure. |
| - RLC sequence number | Current RLC SN + 2 |
| Integrity protection mode info | |
| - Integrity protection mode command | Start |
| - Downlink integrity protection activation info | Not Present |
| - Integrity protection algorithm | UIA1 |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bits number for FRESH. The first/ leftmost bit of the bit string contains the most significant bit of the FRESH. |
| New U-RNTI | |
| - SRNC identity | 0000 0000 0010B |
| - S-RNTI | 0000 0000 0000 0000 0001B |

UTRAN MOBILITY INFORMATION CONFIRM (Step 6)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

SIGNALLING CONNECTION RELEASE INDICATION (Step 7)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| CN domain identity | Check to see if this value is the same as in the UPLINK DIRECT TRANSFER message. |

#### 8.1.9a.5 Test requirement

After step 1 the UE shall transmit UPLINK DIRECT TRANSFER messages using AM on DCCH.

After step 5, the UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message using uplink DCCH on AM RLC.

After step 6 the UE shall re-transmit a SIGNALLING CONNECTION RELEASE INDICATION message which includes the same CN domain identity as that found in the UPLINK DIRECT TRANSFER message.

## 8.1.9b Signalling Connection Release Indication (RLC re-establishment): PS signalling connection release

#### 8.1.9b.1 Definition

#### 8.1.9b.2 Conformance requirement

If a re-establishment of RLC on signalling radio bearer RB2 occurs before the successful delivery of the SIGNALLING CONNECTION RELEASE INDICATION message has been confirmed by RLC, the UE shall:

1> retransmit the SIGNALLING CONNECTION RELEASE INDICATION message on the uplink DCCH using AM RLC on signalling radio bearer RB2.

Reference

3GPP TS 25.331 clause 8.1.14.2a.

#### 8.1.9b.3 Test purpose

To confirm that the UE re-transmits a SIGNALLING CONNECTION RELEASE INDICATION message after it re-establishes the RLC entity on signalling radio bearer RB2 if SRNS relocation occurs before the successful delivery of SIGNALLING CONECTION RELEASE INDICATION message.

#### 8.1.9b.4 Method of test

Initial Condition

System Simulator: 1 cells – Cell 1 is active.

UE: Registered Idle Mode on PS (state 3) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in idle mode of cell 1. SS requests operator to initial an outgoing PS call. UE shall send RRC CONNECTION REQUEST message on the uplink CCCH. Then the SS shall respond with a RRC CONNECTION SETUP message, which request the UE to enter CELL_DCH state, on a downlink CCCH. The UE shall then send a RRC CONNECTION SETUP COMPLETE message on the uplink DCCH. After this, the UE shall send a INITIAL DIRECT TRANSFER message to SS. This message contains a NAS message (SERVICE REQUEST). After SS has acknowledge the INITIAL DIRECT TRANSFER message, the SS shall set the RLC entity for SRB3 to stop wait for T3317 to expire in the UE. The UE shall send a SIGNALLING CONNECTION RELEASE INDICATION message which includes the CN domain identity with the same value as that in the INITIAL DIRECT TRANSFER message. But SS do not respond with STATUS PDU for the AM DATA PDU with POLL. The SS then sends a UTRAN MOBILITY INFORMATION message requesting the UE to do SRNS relocation. The UE shall send a UTRAN MOBILITY INFORMATION CONFIRMmessage. The UE shall re-transmit a SIGNALLING CONNECTION RELEASE INDICATION message on the uplink DCCH using AM RLC.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | RRC CONNECTION REQUEST | SS request the operator to make an outgoing PS call. |
| 2 | ← | | RRC CONNECTION SETUP | |
| 3 | → | | RRC CONNECTION SETUP COMPLETE | |
| 4 | → | | INITIAL DIRECT TRANSFER (SERVICE REQUEST) | After SS acknowledges this message, SS set the RLC entity for SRB2 to stop and waits for T3317to expire. |
| 5 | → | | SIGNALLING CONNECTION RELEASE INDICATION | SS do not send any RLC response (STATUS PDU). |
| 6 | ← | | UTRAN MOBILITY INFORMATION | SS sets RLC for SRB2 to continue. |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | → | | SIGNALLING CONNECTION RELEASE INDICATION | UE re-transmits this message. |

Specific Message Content

RRC CONNECTION REQUEST (Step 1)

Check that the UE sends the same message sub-type as found in TS 34.108 clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Establishment cause | Originating Interactive Call or Originating Background Call |
| Measured results on RACH | Not checked. |

RRC CONNECTION SETUP (Step 2)

Use the same message sub-type "RRC CONNECTION SETUP message: UM (Transition to CELL_DCH)"as found in TS 34.108 clause 9.

RRC CONNECTION SETUP COMPLETE (Step 3)

Check that the UE sends the same message sub-type as found in TS 34.108 clause 9.

INITIAL DIRECT TRANSFER (Step 4)

Check that the UE sends the same message sub-type as found in TS 34.108 clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| CN domain identity | PS domain |
| NAS message | SERVICE REQUEST |

UTRAN MOBILITY INFORMATION (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | This presence of this IE is dependent on IXIT statements in TS 34.123-2. If ciphering is indicated to be active, this IE present with the values of the sub IEs as stated below. Else, this IE is omitted. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA0 or UEA1. The indicated algorithm must be one of the algorithms supported by the UE as indicated in the IE "security capability" in the RRC CONNECTION SETUP COMPLETE message. |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256, this IE is set to "Not present" if only PS RABs are established during the initial setup procedure. |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN + 2 |
| - RB identity | 20, this IE is set to "Not present" if PS RAB is not established during the initial setup procedure. |
| - RLC sequence number | Current RLC SN + 2 |
| Integrity protection mode info | |
| - Integrity protection mode command | Start |
| - Downlink integrity protection activation info | Not Present |
| - Integrity protection algorithm | UIA1 |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bits number for FRESH. The first/ leftmost bit of the bit string contains the most significant bit of the FRESH. |
| New U-RNTI | |
| - SRNC identity | 0000 0000 0010B |
| - S-RNTI | 0000 0000 0000 0000 0001B |

UTRAN MOBILITY INFORMATION CONFIRM (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

SIGNALLING CONNECTION RELEASE INDICATION (Step 8)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| CN domain identity | Check to see if this value is the same as in the INITIAL DIRECT TRANSFER message. |

#### 8.1.9b.5 Test requirement

In step 1, the UE shall transmit RRC CONNECTION REQUEST message using TM RLC on uplink CCCH.

After step 2, the UE shall transmit RRC CONNECTION SETUP COMPLETE message using AM RLC on uplink DCCH.

After step 3 the UE shall transmit INITIAL DIRECT TRANSFER messages using AM on DCCH.

After step 6, the UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message using uplink DCCH on AM RLC.

After step 7 the UE shall re-transmit a SIGNALLING CONNECTION RELEASE INDICATION message which includes the same CN domain identity as that found in the INITIAL DIRECT TRANSFER message.

## 8.1.10 Broadcast of system information

### 8.1.10.1 Dynamic change of segmentation, concatenation & scheduling and handling of unsupported information blocks

#### 8.1.10.1.1 Definition

#### 8.1.10.1.2 Conformance requirement

1. The RRC layer in the UE shall perform re-assembly of segments. All segments belonging to the same master information block, scheduling block or system information block shall be assembled in ascending order with respect to the segment index. When all segments of the master information block, scheduling block or a system information block have been received, the UE shall perform decoding of the complete master information block, scheduling block or system information block.

2. For all system information blocks or scheduling blocks that are supported by the UE referenced in the master information block or the scheduling blocks, the UE shall perform the following actions:

   ……..

   - read and store the IEs of that system information block;

   NOTE: There are options with and without scheduling blocks.

3. For system information blocks, not supported by the UE…….

   - skip reading this system information block;

   - skip monitoring changes to this system information block.

4. However, to enable future introduction of new system information blocks, the UE shall also be able to receive system information blocks other than the ones indicated within the scheduling information. The UE may ignore contents of such system information block.

Reference

3GPP TS 25.331 clause 8.1.1.1.4, 8.1.1.5 and 8.1.1.6.

#### 8.1.10.1.3 Test Purpose

1. To verify that dynamic change of System Information is identified, new information read and used.

2. To verify that the UE can support all segment types and "all" segment combinations.

3. To verify that the UE can dynamically use different configurations

4. To verify that the UE properly uses combinations of Default and assigned values.

NOTE: There are 4 segment types and 11 different SYSTEM INFORMATION segment combinations to interpret when re-assembling segments. There are many alternative SIB position offsets and repetition rates.

The allowed segment types are:

- First segment
- Subsequent segment
- Last segment
- Complete

The allowed segment combinations are:

1. No segment
2. First segment
3. Subsequent segment
4. Last segment
5. Last segment + First segment
6. Last segment + one or several Complete
7. Last segment + one or several Complete + First segment
8. One or several Complete
9. One or several Complete + First segment
10. One Complete of size 215 to 226 (not fully tested)
11. Last segment of size 215 to 222

NOTE: Segment combinations 10 and 11 are more difficult to test as they require SIBs of a very specific size.

#### 8.1.10.1.4 Method of test

Alternate two sets of System Information and generate a call after one or the other set has been broadcasted.

These two sets of System Information are based on the System Information specified in 34.108, section 6.

A "Minimum" configuration and a "Maximum" configuration of System Information are defined. The "Minimum" configuration does not contain all of the Information Blocks defined for Configuration 1 in section 6 of 34.108. On the other hand the "Maximum" configuration, defined by the scheduling information in Table 2, contains extra optional information blocks to ensure that the SIB configuration is consistent with the defined scheduling The contents of the SIBs remains the same (the contents of SIB11 changes for the "Maximum" configuration) while the contents of the MIB and SB is altered depending on the nature of the test, i.e. the schedule changes between the "Minimum" and "Maximum" configurations.

The four segment types and the eleven segment combinations are tested using the two configurations.

NOTE: The decoding of system information in the UE is only measurable by functional tests. A large number of functions utilize system information. An extensive test of the system information decoding thus creates a large number of functional tests, which is impractical. This test specification uses a "sample test", where only a few functions are invoked.

##### Initial Condition

System Simulator: 2 cells (Cell 1, Cell 2), settings for Cell 1 and Cell 2 according to TS 34.108, clause 6.1.5, table 6.1.2 (Cell 1 configured as the serving cell). The Minimum Configuration System Information is being broadcast in Cell 1. The Maximum Configuration System Information is being broadcast in Cell 2.

UE: Idle state (state 2 or state 3 or state 7) as specified in clause 7.4 of TS 34.108 with a CN UE identity (set to IMSI), depending on the CN domain(s) supported by the UE.

Test procedure

Table 8.1.10.1-1 illustrates the downlink power to be applied for the 2 cells.

**Table 8.1.10.1-1**

| Parameter | Unit | Cell 1 | Cell 2 |
|---|---|---|---|
| UTRA RF Channel Number | | Mid Range Test Frequency | Mid Range Test Frequency |
| CPICH Ec | dBm/3.84 MHz | -60 | -65 |

a) The UE is in C1 in Camped Normally state.

b) UE starts establishing a MO call/session.

c) SS disconnects the call. UE shall enter IDLE state.

d) The SS sets the Cell Barred Indicator in SIB3 to "Barred". The SS notifies the UE of the changed System Information by sending the Paging Type 1 message including the IE BCCH Modification Info indicating that new System Information is available.

e) Based on the updated information in SIB3, the UE performs a cell reselection to Cell 2. The UE reads the System Information in Cell 2, i.e. Maximum Configuration System Information.

f) UE starts establishing a MO call/session.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Mobile originated call/session establishment |
| 2 | SS | | | Disconnection of call |
| 3 | ← | | System Information (Minimum Configuration) | System Information message is sent in Cell 1 with the Cell Barred Indicator in SIB3 set to "Barred". |
| 4 | ← | | Paging Type 1 | This message is to inform the UE in Idle State that System Information has been updated. |
| 5 | UE | | | Mobile originated call /session establishment |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message content for "Minimum" configuration

The Minimum configuration is the same as the Configuration 1 System Information on 34.108, section 6 with some differences:

- Only SIB1, SIB3, SIB5/SIB5bis, SIB7, SIB11 are used, i.e. the Minimum number of SIBs is used.
- No SB is used, all scheduling information is contained in the MIB. The contents of this changed MIB are shown below.
- A different schedule is used. Details below.
- SIB11 lists eight cells (one serving cell and seven neighbouring cells). Only the first two of these are considered relevant.

Other characteristics of the Minimum configuration are:

- An unknown future System Information Block (SIB-F1) is included. SIB-F1 is used to test segment combination 10. However, it should be noted that, based on the scheduling information in the MIB, UEs may decide not to read segment combinations associated with SIBs that they do not support/comprehend. Hence, the use of SIB-F1 does not fully cover the verification of combinations 10. The tests really just verify that UE ignores it. There is no real verification that the UE can support segment combinations 10.

The following tables show (based on SIB_REP and SIB_POS in the MIB and SB) the schedule used for the Minimum configuration.

**Table 1: The schedule in this table incorporates segment combinations 1, 2, 3, 4, 7, 8, 10.**

| **Block Type** | MIB | SIB1 | SIB3 | SIB5/ SIB5bis | SIB7 | SIB11 |
|---|---|---|---|---|---|---|
| **SIB_REP** | 8 | 64 | 64 | 64 | 16 | 64 |
| **SEG_ COUNT** | 1 | 1 | 1 | 3 | 1 | 3 |

| **Frame No / SIB_POS** | 0 | 2 | 4 | 6 | 8 | 10 | 12 | 14 |
|---|---|---|---|---|---|---|---|---|
| **Block Type** | MIB | | SIB7 | | MIB | | | |

| **Frame No / SIB_POS** | 16 | 18 | 20 | 22 | 24 | 26 | 28 | 30 |
|---|---|---|---|---|---|---|---|---|
| **Block Type** | MIB | | SIB7/SIB3 | SIB1 | MIB | | SIB-F1 | SIB5 / SIB5bis |

| **Frame No / SIB_POS** | 32 | 34 | 36 | 38 | 40 | 42 | 44 | 46 |
|---|---|---|---|---|---|---|---|---|
| **Block Type** | MIB | SIB5/SIBbis | SIB5/SIB5bis/SIB7/SIB11 | SIB11 | MIB | SIB11 | | |

| **Frame No / SIB_POS** | 48 | 50 | 52 | 54 | 56 | 58 | 60 | 62 |
|---|---|---|---|---|---|---|---|---|
| **Block Type** | MIB | | SIB7 | | MIB | | | |

Contents of Master Information Block PLMN type is the case of GSM-MAP

| | |
|---|---|
| - MIB value tag | A valid MIB value tag as defined in TS 25.331 |
| - Supported PLMN types | |
| - PLMN type | GSM-MAP |
| - PLMN identity | |
| - MCC digit | Set to the same Mobile Country Codes stored in the test USIM card (TS 34.108 clause 8.3.2.2 EF IMSI(IMSI)). |
| - MNC digit | Set to the same Mobile Network Codesstored in the test USIM card (TS 34.108 clause 8.3.2.2 EF IMSI(IMSI)). |
| - ANSI-41 Core Network information | Not Present |
| - References to other system information blocks and scheduling blocks | |
| - References to other system information blocks | |
| - Scheduling information | |
| - CHOICE Value tag | PLMN Value tag |
| - PLMN Value tag | A valid PLMN value tag as defined in TS 25.331 |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 22 |
| - SIB_POS offset info | Not Present – use default |
| - SIB type | System Information Type 1 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 20 |
| - SIB_POS offset info | Not Present – use default |
| - SIB type | System Information Type 3 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 3 |
| - SIB_REP | 64 |
| - SIB_POS | 30 |
| - SIB_POS offset info | |
| - SIB_OFF | 4 |
| - SIB_OFF | 2 |
| - SIB type | System Information Type 5 / System Information Type 5bis |
| - Scheduling information | |
| - CHOICE Value tag | Not Present |
| - SEG_COUNT | 1 |
| - SIB_REP | 16 |
| - SIB_POS | 4 |
| - SIB_POS offset info | Not Present |
| - SIB and SB type | System Information Type 7 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 3 |
| - SIB_REP | 64 |
| - SIB_POS | 36 |
| - SIB_POS offset info | |
| - SIB_OFF | 2 |
| - SIB_OFF | 4 |
| - SIB and SB type | System Information Type 11 |
| - Scheduling information | |
| - CHOICE Value tag | Not Present |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 28 |
| - SIB_POS offset info | Not Present – use default |
| - SIB and SB type | System Information Type F1 |

Contents of System Information Block type 5 (FDD)

Use the same message type found in clause 6.1 of TS 34.108, with the following exception:

| | | |
|---|---|---|
| - PRACH partitioning | A1, A2, A3 | |
| - Access Service Class | | |
| - ASC Setting | | Not Present |
| - ASC Setting | | |
| - CHOICE mode | | FDD |
| - Available signature Start Index | | 0 (ASC#1) |
| - Available signature End Index | | 7 (ASC#1) |
| - Assigned Sub-Channel Number | | '1111'B<br>The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - ASC Setting | | Not Present |
| - ASC Setting | | Not Present |
| - ASC Setting | | Not Present |
| - ASC Setting | | Not Present |
| - ASC Setting | | Not Present |
| - ASC Setting | | Not Present |

| Condition | Explanation |
|---|---|
| A1 | Band I, Band II, Band III |
| A2 | Band V, Band VI, Band VII |
| A3 | Band VIII & bands beyond Band X |

### Contents of System Information Block type 5bis (FDD)

The message structure of the System information block type 5bis should be the same as System information block type 5 defined above with the following exceptions as given below.

| | | |
|---|---|---|
| - Frequency Band Indicator | A1 | FDD Band under test |
| - Frequency Band Indicator 2 | | Not Present |
| - Frequency Band Indicator | A2 | Extension indicator |
| - Frequency Band Indicator 2 | | FDD Band under test |

| Condition | Explanation |
|---|---|
| A1 | Band IV |
| A2 | Band IX & Band X |

### Contents of System Information Block type 11

Use the same message type found in clause 6.1 of TS 34.108, with the exception of event 1a being disabled.

### Specific message content for "Maximum" configuration

The Maximum configuration is the same as the Configuration 1 System Information on 34.108, section 6 with some differences:

- A different schedule is used. Details below.
- SIB11 lists eight cells (one serving cell and seven neighbouring cells). Only the first two of these are considered relevant. It should also include some of the optional IE's to fit the scheduling information for maximum configuration.
- SIB6 and SIB12 includes some of the optional IEs even if having same values as correspondent IEs in SIB5 and SIB11 respectively (to fascilitate implementation of the test case for the Maximum configuration) to fit the scheduling information for maximum configuration.

Other characteristics of the Maximum configuration are:

- one "unknown future" block (SIB-F2) is included. This SIB is concatenated with another SIB and is used to verify that the UE can receive an Information Block that it does not support and still process the Information Blocks that it does support in the correct way.
- The test of the segment combination 9 is verified if the UE is able to read SIB7 and the first segment of SIB5 in position 4.

- The test of the segment combination 11 is verified if the UE is able to read the last segment of SIB 5 / SIB 5bis. The SS ensures that this last segment shall have the length between 215 and 222 bits. Depending on the length of SIB 5 / SIB 5bis, the combination 11 occurs either in SIB_position 6, or in the most cases in SIB_position 10

The following tables show (based on SIB_REP and SIB_POS in the MIB and SB) the schedule used for the Maximum configuration.

**Table 2: The schedule in this table incorporates segment combinations 1, 2, 3, 5, 6, 8, 9, 11.**

| **Block Type** | MIB | SB1 | SIB1 | SIB2 | SIB3 | SIB4 | SIB5/ SIB5bis | SIB6 | SIB7 | SIB11 | SIB12 | SIB18 |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| **SIB_REP** | 8 | 16 | 64 | 64 | 64 | 64 | 64 | 64 | 32 | 64 | 64 | 64 |
| **SEG_ COUNT** | 1 | 1 | 1 | 1 | 1 | 1 | 3 | 3 | 1 | 4 | 4 | 1 |

| **Frame No / SIB_POS** | 0 | 2 | 4 | 6 | 8 | 10 | 12 | 14 |
|---|---|---|---|---|---|---|---|---|
| **Block Type** | MIB | SB1 | SIB7/ SIB5 | SIB5/SIB 5bis | MIB | SIB5 | SIB3/SIB-F2 | SIB11 |

| **Frame No / SIB_POS** | 16 | 18 | 20 | 22 | 24 | 26 | 28 | 30 |
|---|---|---|---|---|---|---|---|---|
| **Block Type** | MIB | SB1 | SIB11 | SIB11 | MIB | SIB11/SIB12 | SIB12 | SIB12 |

| **Frame No / SIB_POS** | 32 | 34 | 36 | 38 | 40 | 42 | 44 | 46 |
|---|---|---|---|---|---|---|---|---|
| **Block Type** | MIB | SB1 | SIB7/SIB18 | SIB12 | MIB | SIB6 | SIB6 | SIB6/SIB2 |

| **Frame No / SIB_POS** | 48 | 50 | 52 | 54 | 56 | 58 | 60 | 62 |
|---|---|---|---|---|---|---|---|---|
| **Block Type** | MIB | SB1 | SIB4 | | MIB | SIB1 | | |

Contents of Master Information Block PLMN type is the case of GSM-MAP

| Information Element | Value/remark |
|---|---|
| - MIB value tag | A valid MIB value tag as defined in TS 25.331 |
| - Supported PLMN types | |
| - PLMN type | GSM-MAP |
| - PLMN identity | |
| - MCC digit | Set to the same Mobile Country Codes stored in the test USIM card (TS 34.108 clause 8.3.2.2 EF IMSI(IMSI)). |
| - MNC digit | Set to the same Mobile Network Codesstored in the test USIM card (TS 34.108 clause 8.3.2.2 EF IMSI(IMSI)). |
| - ANSI-41 Core Network information | Not Present |
| - References to other system information blocks and scheduling blocks | |
| - References to other system information blocks | |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value Tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - Scheduling | |
| - SEG_COUNT | 1 |
| - SIB_REP | 16 |
| - SIB_POS | 2 |
| - SIB_POS offset info | Not Present – use default |
| - SIB type | Scheduling Block 1 |
| - Scheduling information | |
| - CHOICE Value tag | PLMN Value tag |
| - PLMN Value tag | A valid PLMN value tag as defined in TS 25.331 |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 58 |
| - SIB_POS offset info | Not Present – use default |
| - SIB type | System Information Type 1 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 46 |
| - SIB_POS offset info | Not Present – use default |
| - SIB type | System Information Type 2 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 12 |
| - SIB_POS offset info | Not Present – use default |
| - SIB type | System Information Type 3 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 52 |
| - SIB_POS offset info | Not Present – use default |
| - SIB type | System Information Type 4 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 3 |
| - SIB_REP | 64 |
| - SIB_POS | 4 |
| - SIB_POS offset info | |
| - SIB_OFF | 2 |
| - SIB_OFF | 4 |
| - SIB type | System Information Type 5 / System Information Type 5bis |

Contents of Scheduling Block 1 (FDD and TDD 1.28 Mcps option)

| Information Element | Value/remark |
|---|---|
| - References to other system information blocks | |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 3 |
| - SIB_REP | 64 |
| - SIB_POS | 42 |
| - SIB_POS offset info | |
| - SIB_OFF | 2 |
| - SIB_OFF | 2 |
| - SIB and SB type | System Information Type 6 |
| - Scheduling information | |
| - CHOICE Value tag | Not Present |
| - SEG_COUNT | 1 |
| - SIB_REP | 32 |
| - SIB_POS | 4 |
| - SIB_POS offset info | Not Present |
| - SIB and SB type | System Information Type 7 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 4 |
| - SIB_REP | 64 |
| - SIB_POS | 14 |
| - SIB_POS offset info | |
| - SIB_OFF | 6 |
| - SIB_OFF | 2 |
| - SIB_OFF | 4 |
| - SIB and SB type | System Information Type 11 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 4 |
| - SIB_REP | 64 |
| - SIB_POS | 26 |
| - SIB_POS offset info | |
| - SIB_OFF | 2 |
| - SIB_OFF | 2 |
| - SIB_OFF | 8 |
| - SIB and SB type | System Information Type 12 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 36 |
| - SIB_POS offset info | Not Present |
| - SIB and SB type | System Information Type 18 |
| - Scheduling information | |
| - CHOICE Value tag | Not Present |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 12 |
| - SIB_POS offset info | Not Present |
| - SIB and SB type | System Information Type F2 |

Contents of Scheduling Block 1 (TDD 3.84 Mcps option and TDD 7.68 Mcps option)

| Information Element | Value/remark |
|---|---|
| - References to other system information blocks | |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 4 |
| - SIB_REP | 128 |
| - SIB_POS | 3 |
| - SIB_POS offset info | |
| - SIB_OFF | 2 |
| - SIB_OFF | 2 |
| - SIB and SB type | System Information Type 6 |
| - Scheduling information | |
| - CHOICE Value tag | Not Present |
| - SEG_COUNT | 1 |
| - SIB_REP | 16 |
| - SIB_POS | 2 |
| - SIB_POS offset info | Not Present |
| - SIB type SIBs only | System Information Type 7 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 3 |
| - SIB_REP | 64 |
| - SIB_POS | 29 |
| - SIB_POS offset info | |
| - SIB_OFF | 2 |
| - SIB_OFF | 2 |
| - SIB and SB type | System Information Type 11 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 3 |
| - SIB_REP | 64 |
| - SIB_POS | 13 |
| - SIB_POS offset info | |
| - SIB_OFF | 2 |
| - SIB_OFF | 2 |
| - SIB and SB type | System Information Type 12 |
| - Scheduling information | |
| - CHOICE Value tag | Cell Value tag |
| - Cell Value tag | A valid Cell value tag as defined in TS 25.331 |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 54 |
| - SIB_POS offset info | Not Present |
| - SIB type SB | System Information Type 18 |
| - Scheduling information | |
| - CHOICE Value tag | Not Present |
| - SEG_COUNT | 1 |
| - SIB_REP | 64 |
| - SIB_POS | 6 |
| - SIB_POS offset info | Not Present |
| - SIB and SB type | System Information Type F2 |

Contents of System Information Block type F1

| Information Element | Value/remark |
|---|---|
| Data | Arbitrary data with a size of 226 bits |

Contents of System Information Block type F2

| Information Element | Value/remark |
|---|---|
| Data | Arbitrary data with a size of 50 bits |

NOTE: For these future System Information Block types one of the available spare values for SIB type should be used

Contents of SYSTEM INFORMATION BLOCK TYPE 6 (FDD)

| | |
|---|---|
| - PICH Power offset | -5 dB |
| - CHOICE Mode | FDD |
| - AICH Power offset | -5 dB |
| - Primary CCPCH info | present |
| - PRACH system information list | |
| - PRACH system information | |
| - PRACH info | |
| - CHOICE mode | FDD |
| - Available Signature | '0000 0000 1111 1111'B |
| - Available SF | 64 |
| - Preamble scrambling code number | 0 |
| - Puncturing Limit | 1.00 |
| - Available Sub Channel number | '1111 1111 1111'B |
| - Transport Channel Identity | 15 |
| - RACH TFS | |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC size | 168 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 1 |
| - CHOICE Mode | FDD |
| - CHOICE Logical Channel List | Configured |
| - RLC size | 360 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 1 |
| - CHOICE Mode | FDD |
| - CHOICE Logical Channel List | Configured |
| - Semi-static Transport Format information | |
| - Transmission time interval | 20 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 150 |
| - CRC size | 16 |
| - RACH TFCS | |
| - CHOICE TFCI signalling | Normal |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS complete reconfiguration information | |
| - CHOICE CTFC Size | 2 bit |
| - CTFC information | 0 |
| - Power offset information | |
| - CHOICE Gain Factors | Computed Gain Factor |
| - Reference TFC ID | 0 |
| - CHOICE Mode | FDD |
| - Power offset Pp-m | 0 dB |
| - CTFC information | 1 |
| - Power offset information | |
| - CHOICE Gain Factors | Signalled Gain Factor |
| - CHOICE mode | FDD |
| - Gain factor ßc | 11 |
| - Gain factor ßd | 15 |
| - Reference TFC ID | 0 |
| - CHOICE Mode | FDD |
| - Power offset Pp-m | 0 dB |
| - PRACH partitioning | |
| - Access Service Class | |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#1) |
| - Available signature End Index | 7 (ASC#1) |
| - Assigned Sub-Channel Number | '1111'B<br>The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |

| | |
|---|---|
| - Available signature Start Index | 0 (ASC#3) |
| - Available signature End Index | 7 (ASC#3) |
| - Assigned Sub-Channel Number | '1111'B<br>The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#5) |
| - Available signature End Index | 7 (ASC#5) |
| - Assigned Sub-Channel Number | '1111'B<br>The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - ASC Setting | Not Present |
| - ASC Setting | |
| - CHOICE mode | FDD |
| - Available signature Start Index | 0 (ASC#7) |
| - Available signature End Index | 7 (ASC#7) |
| - Assigned Sub-Channel Number | '1111'B<br>The first/ leftmost bit of the bit string contains the most significant bit of the Assigned Sub-Channel Number. |
| - Persistence scaling factor | |
| - Persistence scaling factor | 0.9 (for ASC#2) |
| - Persistence scaling factor | 0.9 (for ASC#3) |
| - Persistence scaling factor | 0.9 (for ASC#4) |
| - Persistence scaling factor | 0.9 (for ASC#5) |
| - Persistence scaling factor | 0.9 (for ASC#6) |
| - Persistence scaling factor | 0.9 (for ASC#7) |
| - AC-to-ASC mapping table | |
| - AC-to-ASC mapping | 6 (AC0-9) |
| - AC-to-ASC mapping | 5 (AC10) |
| - AC-to-ASC mapping | 4 (AC11) |
| - AC-to-ASC mapping | 3 (AC12) |
| - AC-to-ASC mapping | 2 (AC13) |
| - AC-to-ASC mapping | 1 (AC14) |
| - AC-to-ASC mapping | 0 (AC15) |
| - CHOICE mode | FDD |
| - Primary CPICH TX power | 31 |
| - Constant value | -10 |
| - PRACH power offset | |
| - Power Ramp Step | 3dB |
| - Preamble Retrans Max | 4 |
| - RACH transmission parameters | |
| - Mmax | 2 |
| - NB01min | 3 slot |
| - NB01max | 10 slot |
| - AICH info | |
| - Channelisation code | 3 |
| - STTD indicator | FALSE |
| - AICH transmission timing | 0 |
| - Secondary CCPCH system information | |
| - Secondary CCPCH info | |
| - CHOICE mode | FDD |
| - Secondary scrambling code | Not Present |
| - STTD indicator | FALSE |
| - Spreading factor | 64 |
| - Code number | 1 |
| - Pilot symbol existence | FALSE |
| - TFCI existence | TRUE (default value) |
| - Fixed or Flexible position | Flexible (default value) |
| - Timing offset | 0 |
| - TFCS | (This IE is repeated for TFC number for PCH and FACH.) |
| - CHOICE TFCI signalling | Normal |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS complete reconfiguration information | |
| - CHOICE CTFC Size | 4 bit |
| - CTFC information | 0 |
| - Power offset information | Not Present |

| | |
|---|---|
| - CTFC information | 1 |
| - Power offset information | Not Present |
| - CTFC information | 2 |
| - Power offset information | Not Present |
| - CTFC information | 3 |
| - Power offset information | Not Present |
| - CTFC information | 4 |
| - Power offset information | Not Present |
| - CTFC information | 5 |
| - Power offset information | Not Present |
| - CTFC information | 6 |
| - Power offset information | Not Present |
| - CTFC information | 8 |
| - Power offset information | Not Present |
| - FACH/PCH information | |
| - TFS | (PCH) |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC Size | 240 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 0 |
| - Number of Transport blocks | 1 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 230 |
| - CRC size | 16 bit |
| - Transport Channel Identity | 12 (for PCH) |
| - CTCH indicator | FALSE |
| - TFS | (FACH) |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC Size | 168 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 0 |
| - Number of Transport blocks | 1 |
| - Number of Transport blocks | 2 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 220 |
| - CRC size | 16 bit |
| - Transport Channel Identity | 13 (for FACH) |
| - CTCH indicator | FALSE |
| - TFS | (FACH) |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC Size | 360 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 0 |
| - Number of Transport blocks | 1 |
| - CHOICE Logical Channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Turbo |
| - Rate matching attribute | 130 |
| - CRC size | 16bit |
| - Transport Channel Identity | 14 (for FACH) |
| - CTCH indicator | FALSE |
| - PICH info | |
| - CHOICE mode | FDD |
| - Channelisation code | 2 |
| - Number of PI per frame | 18 |
| - STTD indicator | FALSE |

| | |
|---|---|
| - CBS DRX Level 1 information | Not Present |

System Information Block type 7

Use the same System Information Block Type 7 message as found in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - PRACHs listed in system information block type6<br>- Dynamic persistence level | <br>2 |

Contents of SYSTEM INFORMATION BLOCK TYPE 11 (FDD)

| | |
|---|---|
| - Sib12 Indicator | TRUE |
| - FACH measurement occasion info | Present |
| - Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| **- Intra-frequency measurement system information** | |
| - Intra-frequency measurement identity | Not Present<br>Absence of this IE is equivalent to default value 1 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present<br>(This IE shall be ignored by the UE for SIB11) |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | 31 |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Present |
| - Intra-frequency cell id | 3 |
| - Cell info | Same content as specified for Intra-frequency cell id=1 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Intra-frequency cell id | 7 |
| - Cell info | Same content as specified for Intra-frequency cell id=1 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1.4 |
| - Intra-frequency cell id | 8 |
| - Cell info | Same content as specified for Intra-frequency cell id=1 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.8 (FDD)" in clause 6.1.4 |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | Not present<br>Absence of this IE is equivalent to the default value 0 |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity for RACH Reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |

| | |
|---|---|
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | TRUE |
| - CHOICE mode | FDD |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | TRUE |
| - CHOICE mode | FDD |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Intra-frequency measurement reporting criteria | |
| - Parameters required for each event | 2 kinds |
| - Intra-frequency event identity | 1b |
| - Triggering condition 1 | Active set cells |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | 10 (5 dB) |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | 1 (0.1) |
| - Hysteresis | 0.0 |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 640 |
| - Amount of reporting | Not Present |
| - Reporting interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Intra-frequency event identity | 1c |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | Not Present |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | Not Present |
| - Hysteresis | 0 (0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | 3 |
| - Time to trigger | 640 |
| - Amount of reporting | 4 |
| - Reporting interval | 4000 |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| **- Inter-frequency measurement system information** | |
| - Inter-frequency cell info list | |
| - CHOICE Inter-frequency cell removal | Not present<br>(This IE shall be ignored by the UE for SIB11) |
| - New inter-frequency cells | |
| - Inter frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |

| | |
|---|---|
| - UARFCN downlink(Nd) | Reference to table 6.1.2 for Cell 4 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.4 (FDD)" in clause 6.1.4 |
| - Primary CPICH Tx power | 31 |
| - TX Diversity Indicator | FALSE |
| - Cell Selection and Re-selection Info | present (same values as for serving cell applies) |
| - Inter frequency cell id | 5 |
| - Frequency info | Not Present<br>Absence of this IE is equivalent to value of the previous "frequency info" in the list. |
| - Cell info | Same content as specified for Inter-frequency cell id=4 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.5 (FDD)" in clause 6.1.4 |
| - Inter frequency cell id | 6 |
| - Frequency info | Not Present<br>Absence of this IE is equivalent to value of the previous "frequency info" in the list. |
| - Cell info | Same content as specified for Inter-frequency cell id=4 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.6 (FDD)" in clause 6.1.4 |
| - Cell for measurement | Not present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | |
| - Traffic volume measurement identity | 5 |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | TRUE |
| - Average of RLC Buffer Payload for each RB | FALSE |
| - Variance of RLC Buffer Payload for each RB | FALSE |
| - Measurement validity | Not Present |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Periodical trigger |
| - Report Criteria Sys Inf | |
| - Periodical Reporting Criteria | |
| - Reporting Amount | Infinity |
| - Reporting interval | 8000 |

Contents of SYSTEM INFORMATION BLOCK TYPE 12 (FDD)

| | |
|---|---|
| - FACH measurement occasion info | Present |
| - Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| **- Intra-frequency measurement system information** | |
| - Intra-frequency measurement identity | Not Present<br>Absence of this IE is equivalent to default value 1 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present<br>(This IE shall be ignored by the UE for SIB11) |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | 31 |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Present |
| - Intra-frequency cell id | 3 |
| - Cell info | Same content as specified for Intra-frequency cell id=1 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Intra-frequency cell id | 7 |
| - Cell info | Same content as specified for Intra-frequency cell id=1 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1.4 |
| - Intra-frequency cell id | 8 |
| - Cell info | Same content as specified for Intra-frequency cell id=1 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.8 (FDD)" in clause 6.1.4 |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | Not present<br>Absence of this IE is equivalent to the default value 0 |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity for RACH Reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | |

| | |
|---|---|
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | TRUE |
| - CHOICE mode | FDD |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | TRUE |
| - CHOICE mode | FDD |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Intra-frequency measurement reporting criteria | |
| - Parameters required for each event | 2 kinds |
| - Intra-frequency event identity | 1b |
| - Triggering condition 1 | Active set cells |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | 10 (5 dB) |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | 1 (0.1) |
| - Hysteresis | 0 (0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 640 |
| - Amount of reporting | Not Present |
| - Reporting interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Intra-frequency event identity | 1c |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | Not Present |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | Not Present |
| - Hysteresis | 0 (0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | 3 |
| - Time to trigger | 640 |
| - Amount of reporting | 4 |
| - Reporting interval | 4000 |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| **- Inter-frequency measurement system information** | |
| - Inter-frequency cell info list | |
| - CHOICE Inter-frequency cell removal | Not present<br>(This IE shall be ignored by the UE for SIB11) |
| - New inter-frequency cells | |
| - Inter frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to apply the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Reference to table 6.1.2 for Cell 4 |

| | |
|---|---|
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.4 (FDD)" in clause 6.1.4 |
| - Primary CPICH Tx power | 31 |
| - TX Diversity Indicator | FALSE |
| - Cell Selection and Re-selection Info | present (same values as for serving cell applies) |
| - Inter frequency cell id | 5 |
| - Frequency info | Not Present<br>Absence of this IE is equivalent to value of the previous "frequency info" in the list. |
| - Cell info | Same content as specified for Inter-frequency cell id=4 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.5 (FDD)" in clause 6.1.4 |
| - Inter frequency cell id | 6 |
| - Frequency info | Not Present<br>Absence of this IE is equivalent to value of the previous "frequency info" in the list. |
| - Cell info | Same content as specified for Inter-frequency cell id=4 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.6 (FDD)" in clause 6.1.4 |
| - Cell for measurement | Not present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | |
| - Traffic volume measurement identity | 5 |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | TRUE |
| - Average of RLC Buffer Payload for each RB | FALSE |
| - Variance of RLC Buffer Payload for each RB | FALSE |
| - Measurement validity | Not Present |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Periodical trigger |
| - Report Criteria Sys Inf | |
| - Periodical Reporting Criteria | |
| - Reporting Amount | Infinity |
| - Reporting interval | 8000 |

#### 8.1.10.1.5 Test requirement

After step 1 the UE shall have a call/session established in Cell 1.

After step 5 the UE shall have a call/session established in Cell 2.

## 8.1.11 Signalling Connection Release (Invalid configuration)

#### 8.1.11.1 Definition

-

### 8.1.11.2 Conformance requirement

Upon reception of a SIGNALLING CONNECTION RELEASE message, the UE shall:

1> indicate the release of the signalling connection and pass the value of the IE "CN domain identity" to upper layers;

1> remove the signalling connection with the identity indicated by the IE "CN domain identity" from the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

1> clear the entry for the SIGNALLING CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS;

1> the procedure ends.

If radio access bearers for the CN domain indicated by the IE "CN domain identity" exist in the variable ESTABLISHED_RABS, the UE shall:

1> transmit an RRC STATUS message on the uplink DCCH using AM RLC;

1> include the IE "Identification of received message"; and

1> set the IE "Received message type" to SIGNALLING CONNECTION RELEASE; and

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the SIGNALLING CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS and clear that entry;

1> include the IE "Protocol error information" with contents set to the value "Message not compatible with receiver state";

1> when the RRC STATUS message has been submitted to lower layers for transmission:

2> continue with any ongoing processes and procedures as if the invalid SIGNALLING CONNECTION RELEASE message has not been received.

#### Reference

3GPP TS 25.331 clause 8.1.13.3 and 8.1.13.5.

### 8.1.11.3 Test purpose

To confirm that the UE ignores the SIGNALLING CONNECTION RELEASE REQUEST message which request the UE to release signalling connection of domain that contains established radio access bearers.

To confirm that the UE transmit a RRC STATUS message to SS after detecting an invalid configuration in the received message.

### 8.1.11.4 Method of test

#### Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS_DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

#### Test Procedure

SS transmit MEASUREMENT CONTROL message to UE. In this message, SS requests UE to perform traffic volume measurement. Key measurement parameters are as follows: measurement quantity = "RLC Buffer Payload", report criteria = "periodic reporting criteria", reporting interval = "6 seconds", reporting amount = 'infinity'. UE shall begin traffic volume measurements, and shall send MEASUREMENT REPORT message after completing first measurement. UE shall send second MEASUREMENT REPORT message 6 seconds after first MEASUREMENT REPORT message. Then SS transmit SIGNALLING CONNECTION RELEASE message to UE. UE shall ignore the message and send a RRC STATUS message to SS. Then the UE shall send MEASUREMENT REPORT message to SS within the next 6 seconds.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MEASUREMENT CONTROL | Periodical traffic volume measurement reporting is requested. |
| 2 | → | | MEASUREMENT REPORT | |
| 3 | → | | MEASUREMENT REPORT | Time difference between earlier and this MEASUREMENT REPORT message should be 6 seconds. |
| 4 | ← | | SIGNALLING CONNECTION RELEASE | If the initial condition of the UE is state 6-9, set the IE "CN domain identity" to "CS domain". If the initial condition of the UE is state 6-10, set the IE "CN domain identity" to "PS domain". |
| 5 | → | | RRC STATUS | |
| 6 | → | | MEASUREMENT REPORT | This message should be sent within 6 seconds after the previous message. |

Specific Message Content

MEASUREMENT CONTROL (Step 1)

For MEASUREMENT CONTROL message in step 1, use the message sub-type as found in clause 9 of TS 34.108, with the exception of the following Information Elements:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodic |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | Not Present |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 6 Sec |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 2, 3 and 6)

Check that the message received is the same as the message sub-type found in clause 9 of TS 34.108, with the following exceptions and the order in which the RBs are reported is not checked.

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

SIGNALLING CONNECTION RELEASE (Step 4)

| Information Element | Value/Remarks |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| CN domain identity | If the initial condition of the UE is state 6-9, set to "CS domain". If the initial condition of the UE is state 6-10, set to "PS domain". |

RRC STATUS (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Identification of received message | Not Checked |
| - Received message type | SIGNALLING CONNECTION RELEASE |
| - RRC transaction identifier | 0 |
| Protocol error information | |
| - Protocol error cause | Message not compatible with receiver state |

### 8.1.11.5 Test requirement

After step 1 the UE shall transmit MEASUREMENT REPORT message twice at an interval of 6 seconds.

After step 4 the UE shall transmit a RRC STATUS message with protocol error cause set to "Message not compatible with receiver state".

After step 5 the UE shall transmit a MEASUREMENT REPORT within 6 seconds.

## 8.1.12 Integrity Protection

### 8.1.12.1 Definition

### 8.1.12.2 Conformance requirement

If the UE receives an RRC message on signalling radio bearer with RB identity n, the "Status" in the variable INTEGRITY_ PROTECTION_INFO has the value "Started" and the IE 'Integrity check info' is present the UE shall:

1> check the value of the IE "RRC message sequence number" included in the IE "Integrity check info";

2> if the "Downlink RRC Message sequence number" is not present in the variable INTEGRITY_PROTECTION_INFO:

3> initialise the "Downlink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO with the value of the IE "RRC message sequence number" included in the IE "Integrity check info" of the received message.

2> if the "Downlink RRC Message sequence number" is present in the variable INTEGRITY_PROTECTION_INFO:

3> if the RRC message sequence number is lower than the "Downlink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO:

4> increment "Downlink RRC HFN" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO with one.

3> if the RRC message sequence number is equal to the "Downlink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO:

4> discard the message.

1> calculate an expected message authentication code in accordance with subclause 8.5.10.3 of TS25.331;

1> compare the expected message authentication code with the value of the received IE "message authentication code" contained in the IE "Integrity check info";

2> if the expected message authentication code and the received message authentication code are the same, the integrity check is successful:

3> update the "Downlink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO with the value of the IE "RRC message sequence number" included in the IE "Integrity check info" of the received RRC message.

2> if the calculated expected message authentication code and the received message authentication code differ:

3> if the IE "RRC message sequence number" included in the IE "Integrity check info" is lower than the "Downlink RRC Message sequence number" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO (in this case the "Downlink RRC HFN" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO was incremented by one, as stated above):

4> decrement "Downlink RRC HFN" for signalling radio bearer RBn in the variable INTEGRITY_PROTECTION_INFO by one.

3> discard the message.

If the UE receives an RRC message on signalling radio bearer with identity n, the "Status" in the variable INTEGRITY_ PROTECTION_INFO has the value "Started" and the IE 'Integrity check info' is not present the UE shall:

1> discard the message.

Reference

3GPP TS 25.331 clause 8.5.10.

8.1.12. 3 Test purpose

To confirm that the UE discards any RRC messages that include wrong messaqge authentication code, or RRC message sequence number, or do not include IE"Integrity Check Info" after integrity protection is activated.

8.1.12.4 Method of test

Initial Condition

System Simulator: 1cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS_DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE after integrity protection is activated on all SRBs.

Test Procedure

The UE is in CELL_DCH state, radio access bearer and integrity protection is already activated in generic setup procedure. The SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-UM mode on SRB1. The UE shall respond to with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. The SS then sends UE CAPABILITY INFORMATION CONFIRM message to the UE. This procedure is used to initialise the downlink RRC message sequence number in the UE.

SS transmits RRC CONNECTION RELEASE message which does not include IE"Integrity Check Info" on downlink DCCH. The UE shall discard this message and shall not respond using RRC CONNECTION RELEASE COMPLETE message.

Then SS transmits RRC CONNECTION RELEASE message which includes wrong message authentication code on downlink DCCH. The UE shall discard this message and shall not respond using RRC CONNECTION RELEASE COMPLETE message.

Then SS transmits RRC CONNECTION RELEASE message which includes IE"RRC Message sequence number" as set to the same sequence number as the number in previous received RRC message. The UE shall discard this message and shall not respond using RRC CONNECTION RELEASE COMPLETE message.

Then SS transmits RRC CONNECTION RELEASE message which includes correct RRC Message sequence number and message authentication code. The UE shall transmit RRC CONNECTION RELEASE COMPLETE message on uplink DCCH and enter the idle state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | | | | The UE is in CELL_DCH state. |
| 0a | ← | | UE CAPABILITY ENQUIRY | The SS shall send this message to ensure correct initialisation of RRC message sequence number on downlink DCCH using RLC-UM |
| 0b | → | | UE CAPABILITY INFORMATION | The UE shall send this message on the uplink DCCH using RLC-AM |
| 0c | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 1 | ← | | RRC CONNECTION RELEASE | See specific message content |
| 2 | | | | During 5s after step 1, confirm that UE does not transmit RRC CONNECTION RELEASE COMPLETE message. If RRC CONNECTION RELEASE COMPLETE message is received, the test is ended as fail. |
| 3 | ← | | RRC CONNECTION RELEASE | See specific message content |
| 4 | | | | During 5s after step 3, confirm that UE does not transmit RRC CONNECTION RELEASE COMPLETE message. If RRC CONNECTION RELEASE COMPLETE message is received, the test is end as fail. |
| 5 | | | Void | |
| 6 | | | Void | |
| 7 | | | Void | |
| 8 | ← | | RRC CONNECTION RELEASE | See specific message content |
| 9 | | | | During 5s after step 8, confirm that UE does not transmit RRC CONNECTION RELEASE COMPLETE message. If RRC CONNECTION RELEASE COMPLETE message is received, the test is end as fail. |
| 10 | ← | | RRC CONNECTION RELEASE | Use default message content. |
| 11 | → | | RRC CONNECTION RELEASE COMPLETE | SS waits for the arrival of N308 + 1 such messages using unacknowledged mode. |
| 12 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in Idle state, the test passes, otherwise it fails. |

Specific Message Content

RRC CONNECTION RELEASE (Step 1)

Use the same message type found in clause 9 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| Integrity check info | Not Present |

RRC CONNECTION RELEASE (Step 3)

Use the same message type found in clause 9 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and set different value from the calculated result to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter value. |

RRC CONNECTION RELEASE (Step 8)

Use the same message type found in clause 9 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and set the result to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE equal to the value for the last message accepted by the UE on this radio bearer. |

### 8.1.12.5 Test requirement

After step 1 the UE shall not transmit RRC CONNECTION RELEASE COMPLETE message on the uplink DCCH.

After step 3 the UE shall not transmit RRC CONNECTION RELEASE COMPLETE message on the uplink DCCH.

After step 8 the UE shall not transmit RRC CONNECTION RELEASE COMPLETE message on the uplink DCCH.

After step 10 the UE shall transmit RRC CONNECTION RELEASE COMPLETE message on the uplink DCCH.

# 8.2 Radio Bearer control procedure

## 8.2.1 Radio Bearer Establishment

### 8.2.1.1 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success

#### 8.2.1.1.1 Definition

#### 8.2.1.1.2 Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

- clear that entry;

1bis> in TDD, if the procedure is used to perform a handover to a cell where timing advance is enabled, and the UE can calculate the timing advance value in the new cell (i.e. in a synchronous TDD network):

2> set the IE "Uplink Timing Advance" according to subclause 8.6.6.26.In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

#### 8.2.1.1.3 Test purpose

To confirm that the UE establishes a new radio bearer according to a RADIO BEARER SETUP message.

#### 8.2.1.1.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CS-DCCH_DCH (state 6-5) or PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state, after the test operator is prompted to make an out-going call. Before step 1, only signalling radio bearers have been established. The SS transmits a RADIO BEARER SETUP message to the UE . This message requests the establishment of radio access bearer. After the UE receives this message, it configures them and establishes a radio access bearer. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type indicated by "Non speech from CELL_DCH to CELL_DCH in CS" or "Speech from CELL_DCH to CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" in [9] TS 34.108 clause 9.

#### 8.2.1.1.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

### 8.2.1.1a Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (TDD Only)

#### 8.2.1.1a.1 Definition

The features and operation of Multi-frequency and UpPCH shifting have been introduced to core specification (TS25.331 clause 8.6.6.1, 8.6.6.26, and 8.6.6.43) for LCR TDD.

#### 8.2.1.1a.2 Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

- clear that entry;

1bis> in TDD, if the procedure is used to perform a handover to a cell where timing advance is enabled, and the UE can calculate the timing advance value in the new cell (i.e. in a synchronous TDD network):

2> set the IE "Uplink Timing Advance" according to subclause 8.6.6.26.In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

### Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.6.6.1, 8.6.6.26, and 8.6.6.43.

### 8.2.1.1a.3 Test purpose

To confirm that the UE establishes a new radio bearer according to a RADIO BEARER SETUP message.

### 8.2.1.1a.4 Method of test

### Initial Condition

System Simulator: 1 cell, 3 frequency (one is primary frequency, others are secondary frequency), set UpPCH shifting=22.

UE: CS-DCCH_DCH (state 6-5) or PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

### Test Procedure

The UE is in CELL_DCH state, after the test operator is prompted to make an out-going call. Before step 1, only signalling radio bearers have been established. The SS transmits a RADIO BEARER SETUP message to the UE . This message requests the establishment of radio access bearer. After the UE receives this message, it configures them and establishes a radio access bearer. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

### Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type indicated by "Non speech from CELL_DCH to CELL_DCH in CS" or "Speech from CELL_DCH to CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" in [9] TS 34.108 clause 9.

| Information Element | Value/remark |
|---|---|
| RadioBearerSetup-r4-TDD128-add-ext-IEs | |
| frequencyInfo | Secondary frequency |
| UpPCHpositionInfo | 22 |

#### 8.2.1.1a.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

### 8.2.1.2 Void

### 8.2.1.3 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Failure (Unsupported configuration)

#### 8.2.1.3.1 Definition

#### 8.2.1.3.2 Conformance requirement

If the UTRAN instructs the UE to use a configuration, which it does not support and/or if the received message causes the variable UNSUPPORTED_CONFIGURATION to be set to TRUE, the UE shall:

1> transmit a failure response as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "configuration unsupported".

1> set the variable UNSUPPORTED_CONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The UE shall:

1> in case of reception of a RADIO BEARER SETUP message:

…

2> transmit a RADIO BEARER SETUP FAILURE as response message on the DCCH using AM RLC.

…

The UE should set the variable UNSUPPORTED_CONFIGURATION to TRUE if the received message is not according to the UE capabilities.

Reference

3GPP TS 25.331 clause8.2.2.6, 8.2.2.9, 8.5.20.

8.2.1.3.3 Test purpose

To confirm that the UE keeps its configuration and transmits a RADIO BEARER SETUP FAILURE message in case of receiving a RADIO BEARER SETUP message which includes parameters of its unsupported configuration.

8.2.1.3.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH_DCH (state 6-5) or PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits a RADIO BEARER SETUP message in which the frequency cannot be supported by the UE. After the UE receives this message, it transmits a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC . UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | RADIO BEARER SETUP | Including the unsupported configuration for the UE. |
| 2 | → | | RADIO BEARER SETUP FAILURE | The UE does not change the configuration. |
| 3 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8000 |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 0b and 3)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked.:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER SETUP (Step 1)

The contents of RADIO BEARER SETUP message in this test case is indicated as "Non-speech in CS" or the RADIO BEARER SETUP message as found in clause 9 of TS 34.108 with the following exceptions:

RADIO BEARER SETUP (FDD)

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| CHOICE mode | FDD |
| - UARFCN uplink (Nu) | 0 |
| - UARFCN downlink (Nd) | 950 |

RADIO BEARER SETUP (TDD)

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| CHOICE mode | TDD |
| - UARFCN (Nt) | 0 |

RADIO BEARER SETUP FAILURE (Step 2)

The contents of RADIO BEARER SETUP FAILURE message in this test case is the same as the RADIO BEARER SETUP FAILURE message as found inTS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Failure cause | Not checked |

#### 8.2.1.3.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 1 the UE transmit a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC .

After step 2, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

### 8.2.1.4 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Failure (Physical channel Failure and successful reversion to old configuration)

#### 8.2.1.4.1 Definition

#### 8.2.1.4.2 Conformance requirement

When a physical dedicated channel establishment is initiated by the UE, the UE shall start a timer T312 and wait for layer 1 to indicate N312 "in sync" indications. On receiving N312 "in sync" indications, the physical channel is considered established and the timer T312 is stopped and reset.

If the timer T312 expires before the physical channel is established, the UE shall consider this as a "physical channel establishment failure".

NOTE: The criteria defined in this subclause only apply in case the UE performs synchronisation procedure A (FDD only).

…

If the received message caused the UE to be in CELL_DCH state and the UE according to subclause 8.5.4 failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> revert to the configuration prior to the reception of the message (old configuration);

…

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The UE shall:

1> in case of reception of a RADIO BEARER SETUP message:

…

2> transmit a RADIO BEARER SETUP FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9, 8.5.4.

### 8.2.1.4.3 Test purpose

To confirm that the UE reverts to the old configuration and transmits a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC, if the UE fails to reconfigure the radio bearer according to the RADIO BEARER SETUP message before timer T312 expires.

### 8.2.1.4.4 Method of test

Initial Condition

System Simulator: 2 cells. – Cell 1 is active and cell 2 is inactive.

UE: CS-DCCH_DCH (state 6-5) or PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the domain(s) supported by the UE.

Test Procedure

**Table 8.2.1.4**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -60 | OFF | -75 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | OFF | -75 |

Table 8.2.1.4 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 2.

The UE is in CELL_DCH state in cell 1. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. Then the SS configures its downlink transmission power settings according to column "T1" in table 8.2.1.4. The SS transmits a RADIO BEARER SETUP message to the UE specifying a configuration in cell 2 and SS keeps its old dedicated channel configuration in cell 1. Then after T312 expiry, the UE reverts to the old configuration and transmits a RADIO BEARER SETUP FAILURE message on the DCCH in cell 1 using AM RLC which is set to "physical channel failure" in IE "failure cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | RADIO BEARER SETUP | The SS keeps its old L1 configuration in cell 1 and does not configure a physical channel in cell 2 after transmitting this message. |
| 2 | | | | The UE does not configure the new radio access bearer and reverts to the old configuration. |
| 3 | → | | RADIO BEARER SETUP FAILURE | UE shall transmit this message using the old configuration. |
| 4 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8000 |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 0b and 4)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER SETUP (Step 1) (FDD)

The contents of the RADIO BEARER SETUP message in this test case is indicated as "Non speech to CELL_DCH from CELL_DCH in CS", "Speech to CELL_DCH from CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Downlink information for each radio link list | |
| - Downlink information for each radio links | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary CPICH scrambling code | Ref. to the Default setting for cell 2 in TS34.108 clause 6.1 (FDD) |

RADIO BEARER SETUP (Step 1) (TDD)

The contents of the RADIO BEARER SETUP message in this test case is indicated as "Non speech to CELL_DCH from CELL_DCH in CS", "Speech to CELL_DCH from CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE *channel requirement* | Uplink DPCH info |
| - Uplink DPCH timeslots and code | |
| - First individual timeslot info | |
| - Timeslot number | |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Timeslot number | 0 |
| Downlink information for each radio link list | |
| - Downlink information for each radio links | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Ref. to the Default setting for cell 2 in TS34.108 clause 6.1 (TDD) |

RADIO BEARER SETUP FAILURE (Step 3)

The contents of RADIO BEARER SETUP FAILURE message in this test case is the same as the RADIO BEARER SETUP FAILURE message as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Physical channel failure |

#### 8.2.1.4.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 2 the UE shall transmit a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC which is set to "physical channel failure" in IE "failure cause".

After step 3, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

### 8.2.1.5 Void

### 8.2.1.6 Void

### 8.2.1.7 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Failure (Invalid message reception and Invalid configuration)

#### 8.2.1.7.1 Definition

#### 8.2.1.7.2 Conformance requirement

If the received reconfiguration message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to the cause value "protocol error";

2> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.

….

If the variable INVALID_CONFIGURATION is set to TRUE the UE shall:

1> keep the configuration existing before the reception of the message;

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

3> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry.

2> set the IE "failure cause" to "invalid configuration".

1> set the variable INVALID_CONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

….

If the UE receives an RRC message on the DCCH, or addressed to the UE on the CCCH or on the SHCCH, or sent via a radio access technology other than UTRAN, containing an undefined critical message extension, the UE shall:

1> set the variable PROTOCOL_ERROR_REJECT to TRUE;

1> set the IE "Protocol error cause" in the variable PROTOCOL_ERROR_INFORMATION to "Message extension not comprehended";

1> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:

2> store the IE "Message type" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and

2> set the IE "RRC transaction identifier" to zero in that table entry.

1> perform procedure specific error handling according to TS 25.331 clause 8.

….

If the IE "RAB information for setup" is included, the procedure is used to establish radio bearers belonging to a radio access bearer, and the UE shall:

1> if several IEs "RAB information for setup" are included and the included IEs "CN domain identity" in the IE "RAB info" does not all have the same value:

2> set the variable INVALID_CONFIGURATION to TRUE.

….

The UE shall:

1> in case of reception of a RADIO BEARER SETUP message:

…

2> transmit a RADIO BEARER SETUP FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.13, 8.2.2.11, 8.2.2.9, 8.6.4.2 and 9.3b.

### 8.2.1.7.3 Test purpose

To confirm that the UE transmits a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC if it receives an invalid RADIO BEARER SETUP message which contains an unexpected critical message extension.

To confirm that the UE transmits a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC if it receives a RADIO BEARER SETUP message including an invalid configuration.

### 8.2.1.7.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CS-DCCH_DCH (state 6-5) or PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits an invalid RADIO BEARER SETUP message to the UE which contains an unexpected critical message extension. The UE keeps the old configuration and transmits a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC which is set to "protocol error" in IE "failure cause", and is set to "Message extension not comprehended" in IE "Protocol error cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically. The UE keeps current configuration after SS transmits a RADIO BEARER SETUP message including an invalid configuration. Then UE transmits a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC, setting the value "invalid configuration" to IE "failure cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | RADIO BEARER SETUP | See specific message content. |
| 2 | → | | RADIO BEARER SETUP FAILURE | The UE does not change its configuration. |
| 2a | → | | MEASUREMENT REPORT | |
| 3 | ← | | RADIO BEARER SETUP | This message includes an invalid value. |
| 4 | → | | RADIO BEARER SETUP FAILURE | The UE does not change its configuration. |
| 5 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8000 |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 0b, 2a and 5)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER SETUP (Step 1)

Use the RADIO BEARER SETUP message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

RADIO BEARER SETUP FAILURE (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Failure cause | |
| - Failure cause | Protocol error |
| - Protocol error information | |
| - Protocol error cause | Message extension not comprehended |
| Other information element | Not checked |

RADIO BEARER SETUP (Step 3)

The contents of RADIO BEARER SETUP message in this test case is identical as "Non speech from CELL_DCH to CELL_DCH in CS", Speech to CELL_DCH from CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108 with the following exceptions:

RADIO BEARER SETUP (Step 3)

| Information Element | Value/remark |
|---|---|
| RAB information for setup list | |
| - RAB information for setup | This IE is set as defined in message "RADIO BEARER SETUP message: AM or UM (Speech in CS)" |
| - RAB information for setup | This IE is set as defined in message "RADIO BEARER SETUP message: AM or UM (Packet to CELL_DCH from CELL_DCH in PS)" |

RADIO BEARER SETUP FAILURE (Step 4)

The contents of RADIO BEARER SETUP FAILURE message in this test case is the same as the RADIO BEARER SETUP FAILURE message as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Invalid configuration |

#### 8.2.1.7.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 1 the UE shall keep its old configuration and transmit a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC which is set to "protocol error" in IE "failure cause" and set to "Message extension not comprehended" in IE "Protocol error cause".

After step 2, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 3 the UE shall keep its old configuration and transmit a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC, setting the value "invalid configuration" to IE "failure cause".

After step 4, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

### 8.2.1.8 Radio Bearer Establishment for transition from CELL_DCH to CELL_FACH: Success

#### 8.2.1.8.1 Definition

#### 8.2.1.8.2 Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message; or

it shall:

1> perform the physical layer synchronisation procedure as specified in TS 25.214 (FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304.

1> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

2> initiate a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Uplink data transmission";

4> proceed as below.

1> start timer T305 using its initial value if timer T305 is not running and if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in system information block type 1;

1> select PRACH according to TS 25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> use the transport format set given in system information;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

1> if the contents of the variable C_RNTI is empty:

2> perform a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Uplink data transmission";

4> proceed as below.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.1.8.3 Test purpose

To confirm that the UE establishes a new radio bearer according to a RADIO BEARER SETUP message.

### 8.2.1.8.4 Method of test

Initial Condition

System Simulator: 1 cell.

NOTE: The ‘timer poll’ value in the SS RLC transmit entity should be set to 800 ms.

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_DCH state, after the test operator is asked to initiate a packet-switched data call. The SS transmits a RADIO BEARER SETUP message to the UE. After the UE receives this message, it transits from CELL_DCH to CELL_FACH state. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. Then the UE and the SS enters the communicating state. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | SS requests test operator to make an outgoing packet-switched data call. |
| 2 | → | | RADIO BEARER SETUP COMPLETE | The UE selects PRACH and S-CCPCH indicated in SIB5/SIB5bis or SIB6 after entering CELL FACH state. |
| 3 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

For RADIO BEARER SETUP message in step 1, use the message sub-type indicated as "Packet to CELL_FACH from CELL_DCH in PS" found in [9] TS 34.108 clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |

#### 8.2.1.8.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

### 8.2.1.9 Radio Bearer Establishment for transition from CELL_DCH to CELL_FACH: Success (Cell re-selection)

#### 8.2.1.9.1 Definition

#### 8.2.1.9.2 Conformance requirement

1. If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

   ……

   - if the contents of the variable C_RNTI is empty:
     - perform a cell update procedure according to clause 8.3.1 using the cause "Cell reselection";

2. If the CELL UPDATE CONFIRM message

   - does not include "RB information elements"; and
   - does not include "Transport channel information elements"; and
   - does not include "Physical channel information elements"; and
   - includes "CN information elements"; or
   - includes the IE "Ciphering mode info"; or
   - includes the IE "Integrity protection mode info"; or

- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

- transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

3. In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:
   - transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC;

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.3.1.7, 8.2.2.4.

#### 8.2.1.9.3 Test purpose

1. To verify that the UE when receiving a RADIO BEARER SETUP message not including a value for C-RNTI initiate a cell update procedure and indicating the cause "Cell reselection".
2. To verify that the UE when the CELL UPDATE CONFIRM message does not include "RB information elements", "Transport channel information elements" nor "Physical channel information elements" but include the IE "New C-RNTI" transmit a UTRAN MOBILITY INFORMATION CONFIRM message.
3. To confirm that the UE transmits RADIO BEARER SETUP COMPLETE message after it completes the cell update procedure.

#### 8.2.1.9.4 Method of test

Initial Condition

System Simulator: 1 cell- Cell 1 is active.

NOTE: The 'timer poll' value in the SS RLC transmit entity should be set to 800 ms.

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER SETUP message which includes IE "Primary CPICH info" and no dedicated physical channel information, to request the UE to transit from CELL_DCH to CELL_FACH. Due to absence of the C-RNTI in the RADIO BEARER SETUP message the UE shall initiate the cell update procedure even if the UE selects the same cell as indicated by the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD). The UE transmits a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". The SS shall transmit a CELL UPDATE CONFIRM message on downlink DCCH after receiving CELL UPDATE message. The UE transmits a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC. The UE transmits a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | ← | | RADIO BEARER SETUP | Assigned the transition from CELL_DCH to CELL_FACH |
| 4 | → | | CELL UPDATE | The value "cell reselection" set in IE "Cell update cause". |
| 5 | ← | | CELL UPDATE CONFIRM | C-RNTI included |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 7 | → | | RADIO BEARER SETUP COMPLETE | |
| 8 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 3)

The contents of RADIO BEARER SETUP message in this test case is identical as "Packet to CELL_FACH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | Not present |

CELL UPDATE (Step 4)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 5)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9. with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |

UTRAN MOBILITY INFORMATION CONFIRM (Step 6)

The contents of UTRAN MOBILITY INFORMATION CONFIRM message is identical as "UTRAN MOBILITY INFORMATION CONFIRM message" as found in [9] TS 34.108 clause 9.

RADIO BEARER SETUP COMPLETE (Step 7)

The contents of RADIO BEARER SETUP COMPLETE message is identical as "RADIO BEARER SETUP COMPLETE message" as found in [9] TS 34.108 clause 9.

8.2.1.9.5 Test requirement

1. After step 3 the UE shall transmit a CELL UPDATE message on the CCCH with IE "Cell update cause" set to "cell reselection".

2. After step 5 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC.

3. After step 6 the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC.

### 8.2.1.10 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success

#### 8.2.1.10.1 Definition

#### 8.2.1.10.2 Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_DCH state, the UE shall, after the state transition:

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

#### 8.2.1.10.3 Test purpose

To confirm that the UE establishes a new radio bearer according to a RADIO BEARER SETUP message.

#### 8.2.1.10.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state, after SS prompts the test operator to initiate a packet-switched data call. The SS transmits a RADIO BEARER SETUP message to the UE . After the UE receives this message, it configures them and establishes the required radio bearers. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP

The contents of RADIO BEARER SETUP message in this test case is identical the message sub-type indicated by "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9.

8.2.1.10.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC.

## 8.2.1.10a Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success (TDD Only)

8.2.1.10.1a Definition

The features and operation of Multi-frequency and UpPCH shifting have been introduced to core specification (TS25.331 clause 8.6.6.1, 8.6.6.26, and 8.6.6.43) for LCR TDD.

8.2.1.10.2a Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_DCH state, the UE shall, after the state transition:

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.6.6.1, 8.6.6.26, and 8.6.6.43.

### 8.2.1.10.3a Test purpose

To confirm that the UE establishes a new radio bearer according to a RADIO BEARER SETUP message.

### 8.2.1.10.4a Method of test

Initial Condition

System Simulator: 1 cell. Congfigure 3 carriers,one is primary carrier, the others are secondary carriers.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state, after SS prompts the test operator to initiate a packet-switched data call. The SS transmits a RADIO BEARER SETUP message to the UE . After the UE receives this message, it configures them and establishes the required radio bearers in secondary carriers.. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP

The contents of RADIO BEARER SETUP message in this test case is identical the message sub-type indicated by "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Uplink DPCH info | |
| -Uplink Timing Advance Control | |
| - Frequency info | secondary carriers |
| -UpPCH position info | 0 |

8.2.1.10.5a Test requirement

After step 1 the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC.

## 8.2.1.11 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Failure (Unsupported configuration)

8.2.1.11.1 Definition

8.2.1.11.2 Conformance requirement

If the UTRAN instructs the UE to use a configuration, which it does not support and/or if the received message causes the variable UNSUPPORTED_CONFIGURATION to be set to TRUE, the UE shall:

1> transmit a failure response as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "configuration unsupported".

1> set the variable UNSUPPORTED_CONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The UE shall:

1> in case of reception of a RADIO BEARER SETUP message:

…

2> transmit a RADIO BEARER SETUP FAILURE as response message on the DCCH using AM RLC.

…

The UE should set the variable UNSUPPORTED_CONFIGURATION to TRUE if the received message is not according to the UE capabilities.

Reference

3GPP TS 25.331 clause 8.2.2.6, 8.2.2.9, 8.5.20.

8.2.1.11.3 Test purpose

To confirm that the UE keeps its configuration and transmits a RADIO BEARER SETUP FAILURE message in case of it receiving a RADIO BEARER SETUP message, which includes parameters of an unsupported configuration.

8.2.1.11.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits a RADIO BEARER SETUP message with a stated frequency that cannot be supported by the UE. After the UE receives this message, it shall transmit a RADIO BEARER SETUP FAILURE

message on the DCCH using AM RLC . UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | RADIO BEARER SETUP | This message includes an unsupported configuration for the UE. |
| 2 | → | | RADIO BEARER SETUP FAILURE | The UE shall transmit this message using RLC-AM mode and do not change the current configuration. |
| 3 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark | Version |
|---|---|---|
| Measurement Identity | 1 | |
| Measurement Command | Setup | |
| Measurement reporting mode | | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC | |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting | |
| Additional measurement list | Not Present | |
| CHOICE measurement type | Traffic Volume Measurement | |
| - Traffic volume measurement object list | | |
| - Uplink transport channel type | RACHorCPCH | R99 and Rel-4 only |
| | RACH | Rel-5 |
| - UL Target Transport Channel ID | Not Present | |
| - Traffic volume measurement quantity | | |
| - Measurement quantity | RLC Buffer Payload | |
| - Time Interval to take an average or a variance | Not Present | |
| - Traffic volume reporting quantity | | |
| - RLC Buffer Payload for each RB | True | |
| - Average of RLC Buffer Payload for each RB | False | |
| - Variance of RLC Buffer Payload for each RB | False | |
| - Measurement validity | | |
| - UE state | All states | |
| - CHOICE Reporting criteria | Periodical Reporting Criteria | |
| - Amount of reporting | Infinity | |
| - Reporting interval | 8000 | |
| DPCH compressed mode status | Not Present | |

MEASUREMENT REPORT (Step 0b and 3)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER SETUP (Step 1)

The contents of RADIO BEARER SETUP message in this test case is indicated as "Packet to CELL_DCH from CELL_FACH in PS" as found in [9] TS 34.108 Clause 9 with the following exceptions:

RADIO BEARER SETUP (FDD)

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink (Nu) | 0 |
| - UARFCN downlink (Nd) | 950 |

RADIO BEARER SETUP (TDD)

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | 0 |

RADIO BEARER SETUP FAILURE (Step 2)

The contents of RADIO BEARER SETUP FAILURE message in this test case is the same as the RADIO BEARER SETUP FAILURE message as found in [9] TS 34.108 Clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Failure cause | Not checked |

### 8.2.1.11.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

After step 1 the UE shall transmit a RADIO BEARER SETUP FAILURE message on the DCCH using AM .

After step 2, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

## 8.2.1.12 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Failure (Physical channel Failure and successful reversion to old configuration)

### 8.2.1.12.1 Definition

### 8.2.1.12.2 Conformance requirement

When a physical dedicated channel establishment is initiated by the UE, the UE shall start a timer T312 and wait for layer 1 to indicate N312 "in sync" indications. On receiving N312 "in sync" indications, the physical channel is considered established and the timer T312 is stopped and reset.

If the timer T312 expires before the physical channel is established, the UE shall consider this as a "physical channel establishment failure".

….

If the received message caused the UE to be in CELL_DCH state and the UE failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> revert to the configuration prior to the reception of the message (old configuration);

…

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

….

The UE shall:

1> in case of reception of a RADIO BEARER SETUP message:

…

2> transmit a RADIO BEARER SETUP FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9, 8.5.4.

### 8.2.1.12.3 Test purpose

To confirm that the UE reverts to the old configuration and transmits a RADIO BEARER SETUP FAILURE message when the UE fails to configure the new radio bearer after it detects physical channel failure, followed by the T312 expiry.

### 8.2.1.12.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits a RADIO BEARER SETUP message to the UE and keeps its old physical channel configuration. After T312 expiry, the UE shall perform cell reselection procedure and detect the same serving cell only. Then the UE shall transmit a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC. The content of the message shall indicate "physical channel failure" in IE "failure cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | RADIO BEARER SETUP | The SS keep its old configuration. |
| 2 | → | | RADIO BEARER SETUP FAILURE | The UE does not configure a new radio bearer and reverts to the old configuration. |
| 3 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark | Version |
|---|---|---|
| Measurement Identity | 1 | |
| Measurement Command | Setup | |
| Measurement reporting mode | | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC | |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting | |
| Additional measurement list | Not Present | |
| CHOICE measurement type | Traffic Volume Measurement | |
| - Traffic volume measurement object list | | |
| - Uplink transport channel type | RACHorCPCH | R99 and Rel-4 only |
| | RACH | Rel-5 |
| - UL Target Transport Channel ID | Not Present | |
| - Traffic volume measurement quantity | | |
| - Measurement quantity | RLC Buffer Payload | |
| - Traffic volume reporting quantity | | |
| - RLC Buffer Payload for each RB | True | |
| - Average of RLC Buffer Payload for each RB | False | |
| - Variance of RLC Buffer Payload for each RB | False | |
| - Measurement validity | | |
| - UE state | All states | |
| - CHOICE Reporting criteria | Periodical Reporting Criteria | |
| - Amount of reporting | Infinity | |
| - Reporting interval | 8000 | |
| DPCH compressed mode status | Not Present | |

MEASUREMENT REPORT (Step 0b and 3)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER SETUP (Step 1)

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type indicated by "Packet to CELL_DCH from CELL_FACH in PS" clause 9 of TS 34.108.

RADIO BEARER SETUP FAILURE (Step 2)

The contents of RADIO BEARER SETUP FAILURE message in this test case is the same as the RADIO BEARER SETUP FAILURE message as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Physical channel failure |

### 8.2.1.12.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

After step 1 the UE shall transmit a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC which is set to "physical channel failure" in IE "failure cause".

After step 2, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

## 8.2.1.13 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Failure (Physical channel Failure and cell reselection)

### 8.2.1.13.1 Definition

### 8.2.1.13.2 Conformance requirement

When a physical dedicated channel establishment is initiated by the UE, the UE shall start a timer T312 and wait for layer 1 to indicate N312 "in sync" indications. On receiving N312 "in sync" indications, the physical channel is considered established and the timer T312 is stopped and reset.

If the timer T312 expires before the physical channel is established, the UE shall consider this as a "physical channel failure".

….

If the received message caused the UE to be in CELL_DCH state and the UE according to subclause 8.5.4 failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> If the CM_PATTERN_ACTIVATION_ABORTED flag is not set to TRUE the UE shall:…

1> if the old configuration does not include dedicated physical channels (CELL_FACH state):

2> select a suitable UTRA cell according to TS 25.304;

2> if the UE selects another cell than the cell the UE camped on upon reception of the reconfiguration message:

3> initiate a cell update procedure according to TS 25.331 subclause 8.3.1, using the cause "Cell reselection";

3> after the cell update procedure has completed successfully:

4> proceed as below.

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

….

If the CELL UPDATE CONFIRM message:

- does not include the IE "RB information to release list", nor the IE "RB information to reconfigure list", nor the IE "RB information to be affected list"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or

- includes the IE "New C-RNTI"; or

includes the IE "New U-RNTI":

- includes the IE "Downlink counter synchronisation info" and the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

….

The UE shall:

1> in case of reception of a RADIO BEARER SETUP message:

…

2> transmit a RADIO BEARER SETUP FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9, 8.3.1.7, 8.5.4.

### 8.2.1.13.3 Test purpose

To confirm that the UE transmit a RADIO BEARER SETUP FAILURE message after it completes a cell update for the physical channel failure in the radio bearer establishment procedure.

### 8.2.1.13.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active.

UE: PS-DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108 in cell 1.

Test Procedure

**Table 8.2.1.13**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | -75 | -75 | -60 |
| P-CCPICH RSCP (TDD) | dBm | -60 | -75 | -75 | -60 |

Table 8.2.1.13 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies reverse of the transmission power settings for cell 1 and cell 2.

The UE is in CELL_FACH state in cell 1. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits a RADIO BEARER SETUP message to the UE. After transmitting the RADIO BEARER SETUP message, the SS shall not configure its DL dedicated physical channel in accordance with the setting in the message and release its current configuration. At the same time, the SS configures its downlink transmission power settings according to columns "T1" in table 8.2.1.13. The UE recognize that it cannot synchronize with the SS on the new radio bearer. The UE performs cell re-selection and transmits a CELL UPDATE message on uplink CCCH with IE "Cell update cause" which is set to "cell reselection". The SS shall transmit a CELL UPDATE CONFIRM message on downlink DCCH after receiving a CELL UPDATE message. The UE transmits a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC and subsequently transmits a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC, setting the value "physical channel failure" to IE "failure cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | | | | The SS does not configure the new radio bearer in accordance with the settings in the message and applies the downlink transmission power settings, according to the values in columns "T1" of table 8.2.1.13. |
| 3 | | | Void | |
| 4 | | | | The UE select the cell 2. |
| 5 | → | | CELL UPDATE | The value "cell reselection" shall be set in IE "Cell update cause". |
| 6 | ← | | CELL UPDATE CONFIRM | This message include IE "new U-RNTI" and IE "new C-RNTI". |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | → | | RADIO BEARER SETUP FAILURE | The IE "failure cause" shall be set to "physical channel failure" |
| 9 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark | Version |
|---|---|---|
| Measurement Identity | 1 | |
| Measurement Command | Setup | |
| Measurement reporting mode | | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC | |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting | |
| Additional measurement list | Not Present | |
| CHOICE measurement type | Traffic Volume Measurement | |
| - Traffic volume measurement object list | | |
| - Uplink transport channel type | RACHorCPCH | R99 and Rel-4 only |
| | RACH | Rel-5 |
| - UL Target Transport Channel ID | Not Present | |
| - Traffic volume measurement quantity | | |
| - Measurement quantity | RLC Buffer Payload | |
| - Traffic volume reporting quantity | | |
| - RLC Buffer Payload for each RB | True | |
| - Average of RLC Buffer Payload for each RB | False | |
| - Variance of RLC Buffer Payload for each RB | False | |
| - Measurement validity | | |
| - UE state | All states | |
| - CHOICE Reporting criteria | Periodical Reporting Criteria | |
| - Amount of reporting | Infinity | |
| - Reporting interval | 8000 | |
| DPCH compressed mode status | Not Present | |

MEASUREMENT REPORT (Step 0b and 9)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER SETUP (Step 1)

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type "Packet to CELL_DCH from CELL_FACH in PS" found in clause 9 of TS 34.108.

CELL UPDATE (Step 5)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 6)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM" message as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Same as CELL UPDATE message in step 5 |
| New U-RNTI | |
| - SRNC Identity | '0000 0000 0000 0001' |
| - S-RNTI | Different from previous S-RNTI |
| New C-RNTI | Different from previous C-RNTI |

RADIO BEARER SETUP FAILURE (Step 8)

The contents of RADIO BEARER SETUP FAILURE message in this test case is the same as the RADIO BEARER SETUP FAILURE message as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | "physical channel failure" |

#### 8.2.1.13.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

After step 4 the UE shall transmit a CELL UPDATE message on the CCCH with IE "Cell update cause" set to "cell reselection".

After step 6 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 7 the UE shall transmit a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC, setting the IE "failure cause" to "physical channel failure".

After step 8, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

### 8.2.1.14 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Failure (Incompatible simultaneous reconfiguration)

#### 8.2.1.14.1 Definition

#### 8.2.1.14.2 Conformance requirement

If the received message is any of the messages:

- RADIO BEARER SETUP; or

…

the UE shall:

2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

…

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

…

3> else:

4> reject the transaction; and

4> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:

5> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS.

…

If the table "Rejected transactions" in the variable TRANSACTIONS is set due to the received message and the variable PROTOCOL_ERROR_REJECT is set to FALSE, the UE shall:

1> not apply the configuration contained in the received reconfiguration message;

1> transmit a failure response message as specified in subclause TS 25.331 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "incompatible simultaneous reconfiguration".

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The UE shall:

1> in case of reception of a RADIO BEARER SETUP message:

…

2> transmit a RADIO BEARER SETUP FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.9, 8.2.2.12, clause 8.6.3.11.

### 8.2.1.14.3 Test purpose

To confirm that if the UE receives a RADIO BEARER SETUP message during a reconfiguring procedure due to a radio bearer message other than RADIO BEARER SETUP, it shall keep its configuration as if the RADIO BEARER SETUP message had not been received and complete the reconfiguration procedure according to the previously received message.

### 8.2.1.14.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The SS transmits a RADIO BEARER RECONFIGURATION message to the UE. The SS transmits a RADIO BEARER SETUP message before the "activation time" indicated in the RADIO BEARER RECONFIGURATION message expires. When the UE receives the RADIO BEARER SETUP message, the UE shall keep its current configuration as if it had not received the RADIO BEARER SETUP message and shall transmit a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC with IE "failure cause" set to "incompatible simultaneous reconfiguration". After the SS acknowledges the RADIO BEARER SETUP FAILURE message, the UE reconfigures the new physical channel parameters upon the specified activation time and transmits a RADIO BEARER RECONFIGURATION COMPLETE message on DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | ← | | RADIO BEARER SETUP | |
| 3 | → | | RADIO BEAER SETUP FAILURE | The UE does not change the configuration because of the RADIO BEARER SETUP message, and transmit this message on its uplink DCCH using the same RLC-AM mode radio bearer before step 1. |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | This message is on DCCH using AM RLC. |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER RECONFIGURATION (Step 1) (FDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case are identical as "Packet to CELL_DCH from CELL_FACH in PS" as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation Time | Not present |
| Uplink DPCH Info | |
| - Scrambling code number | 1 |

RADIO BEARER RECONFIGURATION (Step 1) (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case are identical as "Packet to CELL_DCH from CELL_FACH in PS" as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | Not present<br><br>Assigned in step 1 |

RADIO BEARER SETUP (for Step 2) (FDD)

For this message, use the message sub-type entitled "Packet to CELL_DCH from CELL_FACH in PS" in the default message content. Information element(s) to be changed are listed below:

| Information Element | Value/remark |
|---|---|
| Activation Time<br>Uplink DPCH Info<br>- Scrambling code number | Not present<br><br>2 |

RADIO BEARER SETUP (for Step 2) (TDD)

For this message, use the message sub-type entitled "Packet to CELL_DCH from CELL_FACH in PS" in the default message content. Information element(s) to be changed are listed below:

| Information Element | Value/remark |
|---|---|
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | Not Present<br><br>A different code combination than used in step 1. |

RADIO BEARER SETUP FAILURE

The contents of RADIO BEARER SETUP FAILURE message in this test case is the same as the RADIO BEARER SETUP FAILURE message as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Message Type<br>Failure cause | <br>Incompatible simultaneous reconfiguration |

#### 8.2.1.14.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER SETUP FAILURE message on the DCCH using AM RLC with IE "failure cause" set to "Incompatible simultaneous reconfiguration".

After step 3 the UE shall configure the new configuration on the activation time and transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.1.15 Void

### 8.2.1.16 Radio Bearer Establishment for transition from CELL_FACH to CELL_FACH: Success

#### 8.2.1.16.1 Definition

#### 8.2.1.16.2 Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message; or

it shall:

1> perform the physical layer synchronisation procedure as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_FACH state upon reception of the reconfiguration message and remains in CELL_FACH state, the UE shall:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency;

2> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selected another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

### Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.1.16.3 Test purpose

To confirm that the UE establishes a new radio access bearer according to a RADIO BEARER SETUP message.

### 8.2.1.16.4 Method of test

#### Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

#### Test Procedure

The UE is in CELL_FACH state, after the test operator is being prompted to make an outgoing packet-switched call. The SS transmits a RADIO BEARER SETUP message to the UE. After the UE receives this message, it configures them and establishes a new radio access bearer. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | The UE select PRACH and S-CCPCH using SIB5/SIB5bis or SIB6. |
| 3 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

None.

8.2.1.16.5 Test requirement

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

## 8.2.1.17 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: success (Subsequently received)

8.2.1.17.1 Definition

8.2.1.17.2 Conformance requirement

If the IE "RRC transaction identifier" is included in a received message, the UE shall perform the actions below. The UE shall:

If the received message is any of the messages:

- RADIO BEARER SETUP; or

…

the UE shall:

2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

2> if the variable CELL_UPDATE_STARTED is set to TRUE; or

2> if the table "Accepted transactions" in the variable TRANSACTIONS contains an entry with an IE "Message Type" set to ACTIVE SET UPDATE; or

2> if the received message contains a protocol error according to TS 25.331 clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

4> ignore the transaction; and

4> continue with any ongoing processes and procedures as the message was not received;

4> and end the procedure.

3> else:

…

Reference

3GPP TS 25.331 clause 8.6.3.11.

8.2.1.17.3 Test purpose

To confirm that if the UE receives a new RADIO BEARER SETUP message before the UE completes the configuration of the radio bearer according to a previous RADIO BEARER SETUP message, it ignores the new RADIO BEARER SETUP message and configures according to the previous RADIO BEARER SETUP message received.

8.2.1.17.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH_DCH (state 6-5) or PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. SS transmits a RADIO BEARER SETUP message to the UE before the UE completes the configuration of the radio bearer according to the RADIO BEARER SETUP message prior to this new message. The UE ignores the new RADIO BEARER SETUP message and configures according to the former RADIO BEARER SETUP message. On completion of radio bearer configuration, the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | Scrambling code number is set to "1" for FDD mode. |
| 2 | ← | | RADIO BEARER SETUP | SS send this message before the expiry of activation time specified in RADIO BEARER SETUP message of step 1. For FDD the IE "Scrambling code number" is set to "2" and for TDD mode a different code combination to that used in step 11 is used. |
| 3 | → | | RADIO BEARER SETUP COMPLETE | The UE ignores the RADIO BEARER SETUP message in step 2 and completes configuration according to the RADIO BEARER SETUP message in step 1. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1) (FDD)

For RADIO BEARER SETUP in step 1, use the message sub-type indicated as "Non speech to CELL_DCH from CELL_DCH in CS" or "Speech to CELL_DCH from CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108, with the exception of the following Information Elements:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256 |
| - Uplink DPCH Info | |
| - Scrambling code number | 1 |

RADIO BEARER SETUP (Step 1) (TDD)

For RADIO BEARER SETUP in step 1, use the message sub-type indicated as "Non speech in CS" as found in clause 9 of TS 34.108, with the exception of the following Information Elements:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256 |
| - Uplink DPCH timeslots and codes | |
| - First timeslot code list | Assigned in step 1 |

RADIO BEARER SETUP (Step 2) (FDD)

For RADIO BEARER SETUP in step 2, use the message sub-type indicated as "Non speech to CELL_DCH from CELL_DCH in CS" or "Speech to CELL_DCH from CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108, with the exception of the following:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time | Not Present |
| - Uplink DPCH Info | |
| - Scrambling code number | 2 |

RADIO BEARER SETUP (Step 2) (TDD)

For RADIO BEARER SETUP in step 2, use the message sub-type indicated as "Non speech in CS" as found in clause 9 of TS 34.108, with the exception of the following:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time | Not Present |
| - Uplink DPCH timeslots and codes | |
| - First timeslot code list | A different code combination to that used in step 1. |

#### 8.2.1.17.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC.

### 8.2.1.18 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success (Subsequently received)

#### 8.2.1.18.1 Definition

#### 8.2.1.18.2 Conformance requirement

If the IE "RRC transaction identifier" is included in a received message, the UE shall perform the actions below. The UE shall:

If the received message is any of the messages:

- RADIO BEARER SETUP; or

  …

the UE shall:

2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

2> if the variable CELL_UPDATE_STARTED is set to TRUE; or

2> if the table "Accepted transactions" in the variable TRANSACTIONS contains an entry with an IE "Message Type" set to ACTIVE SET UPDATE; or

2> if the received message contains a protocol error according to TS 25.331 clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

4> ignore the transaction; and

4> continue with any ongoing processes and procedures as the message was not received;

4> and end the procedure.

3> else:

Reference

3GPP TS 25.331 clause 8.6.3.11.

8.2.1.18.3 Test purpose

To confirm that if the UE receives a new RADIO BEARER SETUP message before the UE completes the configuration of the radio bearer according to a previous RADIO BEARER SETUP message, it ignores the new RADIO BEARER SETUP message and configures according to the previous RADIO BEARER SETUP message received.

8.2.1.18.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The SS transmits a RADIO BEARER SETUP message, requesting the UE to setup radio bearers using DPCH physical channels. SS transmits another RADIO BEARER SETUP message before the activation time specified in the first message has lapsed. The UE ignores the new RADIO BEARER SETUP message and configures the radio bearers according to the former RADIO BEARER SETUP message. On completion of radio bearer configuration, the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | Scrambling code number is set to "1" for FDD mode. |
| 2 | ← | | RADIO BEARER SETUP | For FDD mode the IE "Scrambling code number" is set to "2" and for TDD mode a different code combination to that used in step 1 1 is used. |
| 3 | → | | RADIO BEARER SETUP COMPLETE | The UE ignores the RADIO BEARER SETUP message in step 2 and confirms configuration according to the RADIO BEARER SETUP message in step 1. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 1) (FDD)

For this message, use the message sub-type entitled "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9.

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time | Not present |
| - Uplink DPCH Info | |
| - Scrambling code number | 1 |

RADIO BEARER SETUP (Step 1) (TDD)

For this message, use the message sub-type indicated as " Packet to CELL_DCH from CELL_FACH in PS " as found in clause 9 of TS 34.108, with the exception of the following Information Elements:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time | Not present |
| - Uplink DPCH timeslots and codes | |
| - First timeslot code list | Assigned in step 1 |

RADIO BEARER SETUP (for Step 2) (FDD)

For this message, use the message sub-type entitled "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time | Not Present |
| - Uplink DPCH Info | |
| - Scrambling code number | 2 |

RADIO BEARER SETUP (Step 2) (TDD)

For this message , use the message sub-type indicated as " Packet to CELL_DCH from CELL_FACH in PS " as found in clause 9 of TS 34.108, with the exception of the following:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time | Not Present |
| - Uplink DPCH timeslots and codes | |
| - First timeslot code list | A different code combination to that used in step 1. |

#### 8.2.1.18.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC specified in step 1.

After step 3 the UE shall communicate with the SS on the radio bearer specified in the RADIO BEARER SETUP message in step 1.

### 8.2.1.19 Void

### 8.2.1.20 Void

### 8.2.1.21 Void

### 8.2.1.22 Radio Bearer Establishment for transition from CELL_DCH to CELL_FACH (Frequency modification): Success

#### 8.2.1.22.1 Definition

-

#### 8.2.1.22.2 Conformance requirement

If the UE receives:

-a RADIO BEARER SETUP message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS5.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS5.304.

1> if the received reconfiguration message included the IE "Primary CPICH info", and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (FDD only):

2> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "Uplink data transmission";

4> proceed as below.

1> select PRACH according to TS25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> use the transport format set given in system information;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

1> if the contents of the variable C_RNTI is empty:

2> perform a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "Uplink data transmission";

4> proceed as below.

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE message on the uplink DCCH using AM RLC, using the new configuration after the state transition.

1> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.1.22.3 Test purpose

1. To confirm that the UE transits from CELL_DCH to CELL_FACH according to the RADIO BEARER SETUP message.
2. To confirm that the UE transmits RADIO BEARER SETUP COMPLETE message on the uplink DCCH using AM RLC on a common physical channel in a different frequency.

### 8.2.1.22.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

**Table 8.2.1.22**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -72 | Off | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -72 | Off | -55 |

Table 8.2.1.22 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in idle mode state of cell 1 and the SS configures its downlink transmission power setting according to columns "T0" in table 8.2.1.22. The SS and UE execute procedure P5. Next The SS and the UE execute procedure P9. The SS switches its downlink transmission power settings to columns "T1"and transmits a RADIO BEARER SETUP message with no IE "Frequency info" to the UE. After the UE receives this message, it transits from CELL_DCH in cell 1 to CELL_FACH state in cell 6, and initiates CELL UPDATE procedure with IE "Cell update cause" set to "cell reselection". Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC in cell 6. The SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1a | ←→ | | SS executes procedure P5 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 1b | ←→ | | SS executes procedure) P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.1.22. |
| 3 | | | Void | |
| 4 | ← | | RADIO BEARER SETUP | Not including frequency information. |
| 5 | → | | CELL UPDATE | The IE "Cell update cause" is set to "cell reselection". |
| 6 | ← | | CELL UPDATE CONFIRM | Including the IE" New C-RNTI" |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | → | | RADIO BEARER SETUP COMPLETE | The UE sends this message on a common physical channel in cell 6. |
| 9 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 4)

Use the message sub-type indicated as "Packet to CELL_FACH from CELL_DCH in PS" found in [9] TS 34.108 clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | Not Present |
| Downlink information for each radio link | Not Present |

CELL UPDATE (Step 5)

The contents of CELL UPDATE message are identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 6)

The contents of CELL UPDATE CONFIRM message are identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |

UTRAN MOBILITY UPDATE CONFIRM (Step 7)

The contents of UTRAN MOBILITY UPDATE CONFIRM message are identical as "UTRAN MOBILITY UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9.

#### 8.2.1.22.5 Test requirement

After step 4 the UE shall transmit a CELL UPDATE message on the CCCH in cell 6.

After step 6 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC in cell 6.

After step 7 the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC in cell 6.

After step 8 the UE shall be in CELL_FACH state of cell 6.

### 8.2.1.23 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH (Frequency modification): Success

#### 8.2.1.23.1 Definition

-

#### 8.2.1.23.2 Conformance requirement

If the UE receives:

-a RADIO BEARER SETUP message;

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214 (for FDD only);

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_DCH state, the UE shall, after the state transition:

1> remove any C-RNTI from MAC;

1> clear the C_RNTI.

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE message on the uplink DCCH using AM RLC, using the new configuration after the state transition.

1> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.1.23.3 Test purpose

1. To confirm that the UE transits from CELL_FACH to CELL_DCH according to the RADIO BEARER SETUP message.

2. To confirm that the UE transmits RADIO BEARER SETUP COMPLETE message on the uplink DCCH using AM RLC on a dedicated physical channel in a different frequency.

### 8.2.1.23.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: CS-DCCH_FACH (state 6-6) or PS_DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.1.23**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -55 | Off | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -55 | Off | -55 |

Table 8.2.1.23 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.1.23. The SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER SETUP message including new frequency information to the UE. After the UE receives this message, it configures them and establishes the required radio access bearers and moves into cell 6. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. The SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.1.23. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.1.23. |
| 3 | ← | | RADIO BEARER SETUP | Including new frequency information. |
| 4 | → | | RADIO BEARER SETUP COMPLETE | The UE sends this message in cell 6. |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 3) (FDD)

The contents of RADIO BEARER SETUP message in this test case is identical the message sub-type indicated by "Packet to CELL_DCH from CELL_FACH in PS" or "Non speech from CELL_FACH to CELL_DCH in CS" or "Speech from CELL_FACH to CELL_DCH in CS" in [9] TS 34.108 clause 9 , with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | 350 |

RADIO BEARER SETUP (Step 3) (TDD)

The contents of RADIO BEARER SETUP message in this test case is identical the message sub-type indicated by "Packet to CELL_DCH from CELL_FACH in PS" or "Non speech from CELL_FACH to CELL_DCH in CS" or "Speech from CELL_FACH to CELL_DCH in CS" in [9] TS 34.108 clause 9 , with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - Cell parameters ID | As used for cell 6 |

#### 8.2.1.23.5 Test requirement

After step 3 the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC in cell 6.

After step 4 the UE shall be in CELL_DCH state of cell 6.

### 8.2.1.24 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH (Frequency modification): Success

#### 8.2.1.24.1 Definition

-

#### 8.2.1.24.2 Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message;

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (for FDD only);

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.1.24.3 Test purpose

1. To confirm that the UE transits from CELL_DCH to CELL_DCH according to the RADIO BEARER SETUP message.
2. To confirm that the UE transmits the RADIO BEARER SETUP COMPLETE message on the uplink DCCH using AM RLC on a dedicated physical channel in a different frequency.

### 8.2.1.24.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

CS-DCCH_DCH (state 6-5) or PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.1.24**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -72 | Off | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -72 | Off | -55 |

Table 8.2.1.24 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.1.24. For FDD, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER SETUP message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code which is assigned to P-CPICH of cell. For TDD, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER SETUP message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CCPCH info" set to cell 6 parameters. The UE selects cell 6 and establish a radio access bearer after receiving this message, and then remains CELL_DCH state. The UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC after completes configuration according to receiving RADIO BEARER SETUP message. Upon completion of the procedure, the SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.1.24. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.1.24. |
| 3 | ← | | RADIO BEARER SETUP | For FDD, including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6.<br>For TDD, including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CCPCH info" set cell 6 parameters. |
| 4 | | | | The UE select cell 6 and establish a radio access bearer. |
| 5 | → | | RADIO BEARER SETUP COMPLETE | The UE sends this message on a dedicated physical channel in cell 6. |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 3) (FDD)

The contents of RADIO BEARER SETUP message in this test case is identical the message sub-type indicated by "Packet to CELL_DCH from CELL_DCH in PS" or "Speech in CS" in TS34.108 clause 9 Default Message Contents, or identical the message sub-type indicated by "Non speech in CS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| - CHOICE mode | FDD |
| Frequency info | |
| - UARFCN uplink(Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |
| - DPCH frame offset | The Value is calculated based on internal SS timing difference |

RADIO BEARER SETUP (Step 3) (TDD)

The contents of RADIO BEARER SETUP message in this test case is identical the message sub-type indicated by "Packet to CELL_DCH from CELL_DCH in PS" or "Speech in CS" in TS34.108 clause 9 Default Message Contents, or identical the message sub-type indicated by "Non speech in CS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | As used for cell 6 |

#### 8.2.1.24.5 Test requirement

After step 4 the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC in cell 6.

After step 5 the UE shall be in CELL_DCH state of cell 6.

### 8.2.1.24a Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH (Inter band handover): Success

#### 8.2.1.24a.1 Definition

This test case is identical to test case 8.2.1.24 except that the cells belong to different frequency bands.

#### 8.2.1.24a.2 Conformance requirement

Same conformance requirement as in clause 8.2.1.24.2

#### 8.2.1.24a.3 Test purpose

1. To confirm that the UE transits from CELL_DCH to CELL_DCH according to the RADIO BEARER SETUP message.
2. To confirm that the UE transmits the RADIO BEARER SETUP COMPLETE message on the uplink DCCH using AM RLC on a dedicated physical channel in a different frequency band cell.

#### 8.2.1.24a.4 Method of test

##### Initial Condition

Same initial conditions as in clause 8.2.1.24.4 except that cell 1 and cell 6 belong to different frequency bands.

##### Related ICS/IXIT statement(s)

- UE supports multiple bands simultaneously yes/no

##### Test Procedure

Same test procedure as in clause 8.2.1.24.4

Note: If the UE supports more than 2 frequency bands, the test may be executed for various band combinations.

##### Expected sequence

Same expected sequence as in clause 8.2.1.24.4

##### Specific Message Contents

Same specific message contents as in clause 8.2.1.24.4

#### 8.2.1.24a.5 Test requirement

Same test requirements as in clause 8.2.1.24.5

## 8.2.1.25 Radio Bearer Establishment for transition from CELL_FACH to CELL_FACH (Frequency modification): Success

### 8.2.1.25.1 Definition

-

### 8.2.1.25.2 Conformance requirement

If the UE receives:

-a RADIO BEARER SETUP message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_FACH state upon reception of the reconfiguration message and remains in CELL_FACH state, the UE shall:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency;

2> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selected another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

3> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "cell reselection";

3> when the cell update procedure completed successfully:

4> proceed as below.

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

#### Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.1.25.3 Test purpose

1. To confirm that the UE transits from CELL_FACH to CELL_FACH according to the RADIO BEARER SETUP message.
2. To confirm that the UE transmits RADIO BEARER SETUP COMPLETE message on the uplink DCCH using AM RLC on a common physical channel in a different frequency.

### 8.2.1.25.4 Method of test

#### Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS".

Test Procedure

**Table 8.2.1.25**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -72 | Off | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -72 | Off | -55 |

Table 8.2.1.25 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.1.25. SS asks operator to make an outgoing call. The SS and UE execute procedure P6. Next The SS and the UE execute procedure P10. The SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER SETUP message including IE "Frequency info" set to frequency information of cell 6 and no IE "Primary CPICH info" for FDD and no IE "Primary CCPCH info" for TDD. The UE selects cell 6 and initiates CELL UPDATE procedure with IE "Cell update cause" set to "cell reselection". The UE remains CELL_FACH state. The UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC after completes configuration according to receiving RADIO BEARER SETUP message. Upon completion of the procedure, the SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.1.25. SS requests operator to make an outgoing call. |
| 2 | ←→ | | SS executes procedure P6 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ←→ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.1.25. |
| 5 | ← | | RADIO BEARER SETUP | Including IE "Frequency info" set to frequency information of cell 6 and no IE "Primary CPICH info" for FDD and no IE "Primary CCPCH info" for TDD. |
| 6 | → | | CELL UPDATE | The IE "Cell update cause" is set to "cell reselection". |
| 7 | ← | | CELL UPDATE CONFIRM | Including the IE" New C-RNTI" |
| 8 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 9 | → | | RADIO BEARER SETUP COMPLETE | The UE sends this message on a common physical channel in cell 6. |
| 10 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

CELL UPDATE (Step 6)

The contents of CELL UPDATE message are identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 7)

The contents of CELL UPDATE CONFIRM message are identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9. with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |

UTRAN MOBILITY UPDATE CONFIRM (Step 8)

The contents of UTRAN MOBILITY UPDATE CONFIRM message are identical as "UTRAN MOBILITY UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9.

#### 8.2.1.25.5 Test requirement

After step 5 the UE shall transmit a CELL UPDATE message on the CCCH in cell 6.

After step 7 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC in cell 6.

After step 8 the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the DCCH using AM RLC in cell 6.

After step 9 the UE shall be in CELL_FACH state in cell 6.

### 8.2.1.26 Void

### 8.2.1.27 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (two radio links, start of HS-DSCH reception)

#### 8.2.1.27.1 Definition and applicability

All UEs which support FDD and HS-PDSCH.

#### 8.2.1.27.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUPmessage, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "New H-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the value in the variable H_RNTI;

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b.

…

If the IE "HS-SCCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

…

If the IE "Measurement Feedback Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1, 8.6.3.1b, 8.6.5.6, 8.6.6.33, 8.6.6.34

8.2.1.27.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to HS-DSCH according to the received RADIO BEARER SETUP message when having two radio links established.

8.2.1.27.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.2.1.27**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | -70 | -60 |

Table 8.2.1.27 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in CELL_DCH state. Only signalling radio bearers have been established in cell 1.

SS configures its downlink transmission power settings according to columns "T1" in table 8.2.1.27. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. The SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC to add cell 2 to the active set. When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

The test operator is prompted to make an out-going call. The SS transmits a RADIO BEARER SETUP message to the UE . This message requests the establishment of radio access bearer mapped to HS-DSCH. After the UE receives this message, it configures them and establishes a radio access bearer and cell 1 shall be assigned as the serving HS-DSCH cell. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.2.1.27. |
| 0b | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 1 | ← | | ACTIVE SET UPDATE | The SS instructs the UE to add cell 2 in the active set. |
| 2 | → | | ACTIVE SET UPDATE COMPLETE | The UE adds the radio link in cell 2. |
| 3 | ← | | RADIO BEARER SETUP | |
| 4 | → | | RADIO BEARER SETUP COMPLETE | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

MEASUREMENT REPORT (Step 0b)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 1)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary scrambling code | Primary scrambling code of Cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH may be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Code number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not present | |
| - TPC combination index | 1 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not present | |
| - TFCI combining indicator | FALSE | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |

RADIO BEARER SETUP (Step 3)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | (for cell 1) | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| - Downlink information for each radio link | (for cell 2) | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) | |
| - Serving HS-DSCH radio link indicator | FALSE | |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 1 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

### 8.2.1.27.5 Test requirements

After step 3, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

## 8.2.1.27a Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (start of HS-DSCH reception)

### 8.2.1.27a.1 Definition and applicability

All UEs which support TDD and HS-PDSCH.

### 8.2.1.27a.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUPmessage, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "New H-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the value in the variable H_RNTI;

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b.

…

If the IE "HS-SCCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".

2> in 1.28 Mcps TDD:

3> use the IE " $PRX_{HS-SICH}$ " and "ACK-NAK power offset" to calculate and set an initial uplink transmission power;

3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control.

…

If the IE "Measurement Feedback Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1, 8.6.3.1b, 8.6.5.6, 8.6.6.33, 8.6.6.34

### 8.2.1.27a.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to HS-DSCH according to the received RADIO BEARER SETUP message.

### 8.2.1.27a.4 Method of test

Initial Condition

System Simulator: 1 cells - Cell 1 is active

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state. Only signalling radio bearers have been established in cell 1.

The test operator is prompted to make an out-going call. The SS transmits a RADIO BEARER SETUP message to the UE . This message requests the establishment of radio access bearer mapped to HS-DSCH. After the UE receives this message, it configures them and establishes a radio access bearer and cell 1 shall be assigned as the serving HS-DSCH cell. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | | | void | |
| 0b | | | void | |
| 1 | | | void | |
| 2 | | | void | |
| 3 | ← | | RADIO BEARER SETUP | |
| 4 | → | | RADIO BEARER SETUP COMPLETE | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 3)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108.

8.2.1.27a.5 Test requirements

After step 3, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

## 8.2.1.27b Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (start of HS-DSCH reception)

8.2.1.27b.1 Definition and applicability

All UEs which support TDD and HS-PDSCH.

8.2.1.27b.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUPmessage, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "New H-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the value in the variable H_RNTI;

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b.

…

If the IE "HS-SCCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".

2> in 1.28 Mcps TDD:

3> use the IE " $PRX_{HS\text{-}SICH}$ " and "ACK-NAK power offset" to calculate and set an initial uplink transmission power;

3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control.

…

If the IE "Measurement Feedback Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1, 8.6.3.1b, 8.6.5.6, 8.6.6.33, 8.6.6.34

8.2.1.27b.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to HS-DSCH according to the received RADIO BEARER SETUP message.The establishment is on the secondary carrier.

To confirm the UE recognizes correctly the position of UpPCH indicated by the network and completes the access procedure according to the configuration sent by the network.

8.2.1.27b.4 Method of test

Initial Condition

System Simulator: 1 cells - Cell 1 is active and configure three carriers,one primary carrier with two secondary carriers.

UE: PS_DCCH_DCH (state 6-7 on the secondary carrier) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state . Only signalling radio bearers have been established in cell 1 on the secondary carrier.

The test operator is prompted to make an out-going call. The SS transmits a RADIO BEARER SETUP message to the UE . This message requests the establishment of radio access bearer mapped to HS-DSCH on the secondary carrier. After the UE receives this message, it configures them and establishes a radio access bearer on the secondary carrier and cell 1 shall be assigned as the serving HS-DSCH cell. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | | | void | |
| 0b | | | void | |
| 1 | | | void | |
| 2 | | | void | |
| 3 | ← | | RADIO BEARER SETUP | |
| 4 | → | | RADIO BEARER SETUP COMPLETE | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 3)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, with the following exceptions

| Information Element | Value/remark |
|---|---|
| RadioBearerSetup-r5-TDD128-add-ext-IEs | |
| frequencyInfo | Secondary carrier frequency |
| UpPCHpositionInfo | 22 |

#### 8.2.1.27b.5 Test requirements

After step 3, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

### 8.2.1.28 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (RB mapping for both DL DCH and HS-DSCH in cell without HS-DSCH support)

#### 8.2.1.28.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.2.1.28.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUPmessage, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "New H-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the IE "Downlink HS-PDSCH Information" is also included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 of TS 25.331 applied on the received message:

2> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b of TS 25.331.

…

If the IE "HS-SCCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".

2> in 1.28 Mcps TDD:

3> use the IE " $PRX_{HS-SICH}$ " and "ACK-NAK power offset" to calculate and set an initial uplink transmission power;

3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control.

…

If the IE "Measurement Feedback Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1, 8.6.3.1b, 8.6.5.6, 8.6.6.33, 8.6.6.34

8.2.1.28.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to DCH and HS-DSCH according to the received RADIO BEARER SETUP message in a cell without HS-DSCH.

8.2.1.28.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state. Only signalling radio bearers have been established.

The test operator is prompted to make an out-going call. The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of radio bearer with RB mapping to DCH and HS-DSCH. After the UE receives this message, it establishes a radio bearer and maps it to the DCH. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | Not present |
| RAB information for setup | |
| - RAB info | (high-speed AM DTCH for PS domain) |
| - RAB identity | 0000 0101B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108 |
| DL Transport channel information common for all transport channel | Same as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 |
| Added or Reconfigured DL TrCH information | Same as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 |
| CHOICE channel requirement | Same as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 |
| Downlink HS-PDSCH Information | Not Present |
| Downlink information common for all radio links | Same as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 |
| Downlink information per radio link list | Same as specified for "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 |

### 8.2.1.28.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

## 8.2.1.29 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, uplink TFCS restriction and start of HS-DSCH reception)

### 8.2.1.29.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

### 8.2.1.29.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUPmessage, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If IE "Timing indication" has the value "initialise", UE shall:

1> execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

…

If the IE "New H-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the value in the variable H_RNTI;

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b.

2> if the value of the IE "MAC-hs reset indicator" is TRUE:

3> reset the MAC-hs entity.

…

If the IE "HS-SCCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".

2> in 3.84 Mcps TDD and 7.68 Mcps TDD:

3> use the parameters specified in the IE "HS-SICH power control info" for open loop power control as defined in subclause 8.5.7.

2> in 1.28 Mcps TDD:

3> use the IE "$PRX_{HS-SICH}$" to calculate and set an initial uplink transmission power;

3> use the IE "TPC step size" upon reception of TPC commands for closed loop power control;

3> use default value of "Uplink synchronisation frequency" and same value of "Uplink synchronisation step size" in "Uplink DPCH info" for HS-SICH upon reception of SS commands for closed loop uplink synchronisation on HS-SICH.

If the IE "Measurement Feedback Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.3.5.1.2, 8.5.25, 8.6.3.1b, 8.6.5.6, 8.6.6.33, 8.6.6.34

### 8.2.1.29.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to HS-DSCH using uplink TFCS restriction according to the received RADIO BEARER SETUP message.

### 8.2.1.29.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.2.1.29**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -55 | OFF | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -55 | OFF | -55 |

Table 8.2.1.29 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execusion. Column marked "T0" denote the initial conditions.

The UE is in CELL_DCH state, after the test operator is prompted to make an out-going call. Before step1, only signalling radio bearers have been established. SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.1.29. Then SS switches its downlink transmission power setting to columns "T1".

The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of radio access bearer mapped to HS-DSCH using a 384 kbps uplink DCH restricted to 64 kbps (FDD) or a 64kbps uplink DCH restricted to 16kbps (1.28Mcps TDD). After the UE receives this message, it configures them and establishes a radio access bearer in cell 6. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | SS receives this message from cell 6. |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 1) (FDD)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" and the radio bearer configuration for “Interactive or background / UL:384 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| Activation time | Now |
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | <br>Set according to the radio bearer configuration for “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| CHOICE channel requirement<br>- Uplink DPCH power control info | Uplink DPCH info<br>Same contents as a RADIO BEARER SETUP message used in "Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" |
| - CHOICE mode<br>- Scrambling code type<br>- Scrambling code number<br>- Number of DPDCH<br>- Spreading factor | FDD<br>Long<br>0 (0 to 16777215)<br>Not Present<br>Set according to the radio bearer configuration for “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| - TFCI existence | Set according to the radio bearer configuration for “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| - Number of FBI bit<br>- Puncturing Limit | Not Present<br>Set according to the radio bearer configuration for “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Frequecny info<br>- UARFCN uplink (Nu)<br><br>- UARFCN downlink (Nd) | <br>This IE should be present, if the default duplex distance defined for the operating frequency band is not used.<br>Same downlink UARFCN as used for cell 6 |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>350 |

RADIO BEARER SETUP (Step 1) (1.28Mcps TDD)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" and the radio bearer configuration for “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| Activation time | Now |
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| UL Transport channel information common for all transport channels<br>- PRACH TFCS<br>- CHOICE mode<br>- Individual UL CCTrCH information<br>- UL TFCS Identity<br>- TFCS ID<br>- Shared Channel Indicator<br>- UL TFCS<br>- CHOICE TFCI signalling<br>- TFCI Field 1 Information<br>- CHOICE TFCS representation<br>- TFCS complete reconfiguration information<br>- CHOICE CTFC Size<br>- CTFC information<br>- CTFC<br>- Power offset information<br>- CTFC information<br>- CTFC<br>- Power offset information<br>- CTFC information<br>- CTFC<br>- Power offset information<br>- CTFC information<br>- CTFC<br>- Power offset information<br>- CTFC information<br>- CTFC<br>- Power offset information<br>- CTFC information<br>- CTFC<br>- Power offset information<br>- TFC subset<br>- CHOICE Subset representation<br>- TFC subset list<br>- Uplink channel requirement<br><br><br><br><br>Added or Reconfigured DL TrCH information | <br><br>Not Present<br>TDD<br><br><br>1<br>FALSE<br><br>Normal<br><br>Complete reconfiguration<br><br>4<br><br>0<br>OMIT<br><br>1<br>OMIT<br><br>2<br>OMIT<br><br>5<br>OMIT<br><br>7<br>OMIT<br><br>Full transport format combination set<br>Not Present<br>Set according to the radio bearer configuration for “Interactive or background / UL:16 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.11 Parameter Set.<br>Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Frequecny info<br>- Choice mode<br>- UARFCN (Nt) | <br>TDD<br>Same UARFCN as used for cell 6 |
| Downlink information per radio link list<br>- Choice mode<br>- Primary CCPCH info<br>- Choice mode<br>- Choice TDD Option<br>- TSTD indicator<br>- Cell parameters ID<br>- SCTD indicator<br>- Downlink DPCH info for each RL | <br>TDD<br><br>TDD<br>1.28 Mcps TDD<br>FALSE<br>Same Cell parameters ID as used for cell 6<br>FALSE<br>Set according to the radio bearer configuration for “Interactive or background / UL:16 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.11 Parameter Set. |

#### 8.2.1.29.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

### 8.2.1.30 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialised hard handover to another frequency, start of HS-DSCH reception)

#### 8.2.1.30.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.2.1.30.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUPmessage, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2>a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If IE "Timing indication" has the value "initialise", UE shall:

1> execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "New H-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the value in the variable H_RNTI;

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b.

2> if the value of the IE "MAC-hs reset indicator" is TRUE:

3> reset the MAC-hs entity.

…

If the IE "HS-SCCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".

2> in 3.84 Mcps TDD and 7.68 Mcps TDD:

3> use the parameters specified in the IE "HS-SICH power control info" for open loop power control as defined in subclause 8.5.7.

2> in 1.28 Mcps TDD:

3> use the IE "$PRX_{HS-SICH}$" to calculate and set an initial uplink transmission power;

3> use the IE "TPC step size" upon reception of TPC commands for closed loop power control;

3> use default value of "Uplink synchronisation frequency" and same value of "Uplink synchronisation step size" in "Uplink DPCH info" for HS-SICH upon reception of SS commands for closed loop uplink synchronisation on HS-SICH.

…

If the IE "Measurement Feedback Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration.

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.3.5.1.2, 8.5.25, 8.6.3.1, 8.6.3.1b, 8.6.5.6, 8.6.6.33, 8.6.6.34

8.2.1.30.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to HS-DSCH and starts HS-DSCH reception in conjunction with a interfrequency hard handover without prior measurement on the target frequency according to the received RADIO BEARER SETUP message.

8.2.1.30.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 and 6 are active.

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state. Only signalling radio bearers have been established in cell 1.

The test operator is prompted to make an out-going call. The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of radio bearer with RB mapping to HS-DSCH as well as a timing re-initialised interfrequency hard handover to cell 6. After the UE receives this message, it establishes the radio bearer and the physical channels in cell 6. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC in cell 6. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1) (FDD)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to the scrambling code for cell 6 | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

RADIO BEARER SETUP (Step 1) (1.28Mcps TDD)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Reference to TS 34.108 clause 6.11 Parameter Set | |
| - Default DPCH Offset Value | 0 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - CHOICE mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Same Cell parameters ID as used for cell 6 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9. | |

RADIO BEARER SETUP (Step 1) (3.84Mcps TDD)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Reference to TS 34.108 clause 6.11 Parameter Set | |
| - Default DPCH Offset Value | 0 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - CHOICE mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 3.84Mcps TDD | |
| - Choice Sync case | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Same Cell parameters ID as used for cell 6 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9. | |

RADIO BEARER SETUP (Step 1) (3.84Mcps TDD)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Reference to TS 34.108 clause 6.11 Parameter Set | |
| - Default DPCH Offset Value | 0 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - CHOICE mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 7.68 Mcps TDD | |
| - Choice Sync case | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Same Cell parameters ID as used for cell 6 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9. | |

#### 8.2.1.30.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message using AM RLC in cell 6.

### 8.2.1.31 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success (start of HS-DSCH reception)

#### 8.2.1.31.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.2.1.31.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration in FDD or 1.28 Mcps TDD caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for an HS-DSCH related reconfiguration in 3.84 Mcps TDD or 7.68 Mcps TDD caused by the received message:

3> start using, at activation time T, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: In FDD an "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "New H-RNTI" is included, the UE shall:

1> if the IE "Downlink HS-PDSCH Information" is also included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 of TS 25.331 applied on the received message:

2> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b of TS 25.331.

2> if the IE “Added or reconfigured MAC-d flow” is included:

3> perform the actions specified in subclause 8.6.5.5a of TS 25.331.

…

If the IE “Downlink information common for all radio links” is included, the UE shall:

1> if the value of the IE “MAC-hs reset indicator” is TRUE:

2> reset the MAC-hs entity.

…

If the IE "Downlink HS-PDSCH Information" is included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 of TS 25.331 applied on the received message, the UE shall:

1> if the IE "New H-RNTI" is included:

2> perform the actions as specified in subclause 8.6.3.1b of TS 25.331.

1> if the IE "HS-SCCH Info" is included:

2> act as specified in subclause 8.6.6.33 of TS 25.331.

1> if the IE "Measurement Feedback Info" is included:

2> act as specified in subclause 8.6.6.34 of TS 25.331.

1> if the IE "HS-DSCH Timeslot Configuration" or "HS-PDSCH Midamble Configuration" is included:

2> store the received configuration;

2> determine the value for the HS_DSCH_RECEPTION variable and take actions as described in subclause 8.5.25.

1> For FDD, if, as a result of the received message, the variable H_RNTI is set and the UE has a stored IE "HS-SCCH Info" and a stored IE "Measurement Feedback Info"; and

1> For FDD, if the UE has received IE "Uplink DPCH Power Control Info" and stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor; and

1> For FDD, if the UE has stored IEs "MAC-hs queue to add or reconfigure list", "MAC-d PDU size Info" and "RB Mapping Info" corresponding to the HS-PDSCH configuration;

2> set the variable HS_DSCH_RECEPTION to TRUE;

2> start HS-DSCH reception procedures according to the stored HS-PDSCH configuration:

3> as stated in subclause 8.6.3.1b of TS 25.331 for the IE "H-RNTI";

3> in subclause 8.6.6.33 of TS 25.331 for the IE "HS-SCCH Info"; and

3> in subclause 8.6.6.34 of TS 25.331 for the IE "Measurement Feedback Info".

…

If the IE "HS-SCCH Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".

2> in 3.84 Mcps TDD and 7.68 Mcps TDD:

3> use the parameters specified in the IE "HS-SICH power control info" for open loop power control as defined in subclause 8.5.7.

2> in 1.28 Mcps TDD:

3> use the IE " $PRX_{HS-SICH}$ " and "ACK-NAK power offset" to calculate and set an initial uplink transmission power;

3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control

…

If the IE "Measurement Feedback Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.6.3.1, 8.6.3.1b, 8.6.5.6, 8.6.6.32, 8.6.6.33, 8.6.6.34

8.2.1.31.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to HS-DSCH according to the received RADIO BEARER SETUP message.

8.2.1.31.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_FACH state. Only signalling radio bearers have been established.

The test operator is prompted to make an out-going call. The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of radio access bearer mapped to HS-DSCH using a 384 kbps uplink DCH restricted to 64 kbps for FDD,3.84 Mcps TDD and 7.68Mcps TDD or using 64 kbps uplink DCH for 1.28Mcps TDD. After the UE receives this message, it configures them and establishes a radio access bearer. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 1) (FDD)

Use the same message as specified for “Packet to CELL_DCH / HS-DSCH from CELL_FACH in PS”, with the following exception:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- PDCP info<br>- Transmission RLC discard<br>- MAX_DAT<br>- Transmission window size<br>- Timer_RST<br>- Max_RST<br>- Timer_poll_prohibit<br>- Timer_poll<br>- Poll_Windows<br>- Receiving window size<br>- Downlink RLC status info<br>- Timer_status_prohibit | <br>Not present<br><br>10<br>256<br>1000<br>12<br>50<br>400<br>80<br>2047<br><br>50 |
| UL Transport channel Information for all transport channels<br>- UL DCH TFCS<br>- CHOICE Gain Factors<br>- Gain factorβc<br>- Gain factorβd | <br>Include only the CTFC’s from the default message that restrict the uplink transmission rate to 64 kbps.<br>Computed Gain Factors (The last TFC is set to Signalled Gain Factors)<br>10 (below 64 kbps)<br>8 (higher than 64 kbps)<br>15<br>(Not Present if the CHOICE Gain Factors is set to Computed Gain Factors) |
| Maximum allowed UL TX power | 24dBm |
| CHOICE channel requirement<br>- $\Delta_{ACK}$<br>- $\Delta_{NACK}$ | <br>6<br>6 |
| Downlink HS-PDSCH Information<br>- Measurement Feedback Info<br>- POhsdsch<br>- CQI Feedback cycle, k<br>- $\Delta_{CQI}$ | <br><br>9dB<br>10ms<br>3 |

RADIO BEARER SETUP (Step 1)(1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH / HS-DSCH from CELL_FACH in PS", with the following exception:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- PDCP info<br>- Transmission RLC discard<br>- MAX_DAT<br>- Transmission window size<br>- Timer_RST<br>- Max_RST<br>- Timer_poll_prohibit<br>- Timer_poll<br>- Poll_Windows<br>- Receiving window size<br>- Downlink RLC status info<br>- Timer_status_prohibit | <br>Not present<br><br>10<br>256<br>1000<br>12<br>50<br>400<br>80<br>2047<br><br>50 |
| UL Transport channel Information common for all transport channels<br>- UL TFCS | <br><br>I Set according to the radio bearer configuration for "Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH" in 34.108 clause 6.11 Parameter Set. |
| Maximum allowed UL TX power | 24dBm |

RADIO BEARER SETUP (Step 1) (3.84 Mcps TDD and 7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH / HS-DSCH from CELL_FACH in PS", with the following exception:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- PDCP info<br>- Transmission RLC discard<br>- MAX_DAT<br>- Transmission window size<br>- Timer_RST<br>- Max_RST<br>- Timer_poll_prohibit<br>- Timer_poll<br>- Poll_Windows<br>- Receiving window size<br>- Downlink RLC status info<br>- Timer_status_prohibit | <br>Not present<br><br>10<br>256<br>1000<br>12<br>50<br>400<br>80<br>2047<br><br>50 |
| UL Transport channel Information for all transport channels<br>- UL TFCS<br><br>Maximum allowed UL TX power | <br><br>Include only the CTFC's from the default message that restrict the uplink transmission rate to 64 kbps.<br>24dBm |

#### 8.2.1.31.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

### 8.2.1.32 Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success (start of HS-DSCH reception with frequency modification)

#### 8.2.1.32.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

8.2.1.32.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUPmessage, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: In FDD an "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "New H-RNTI" is included, the UE shall:

1> if the IE "Downlink HS-PDSCH Information" is also included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b.

2> if the value of the IE "MAC-hs reset indicator" is TRUE:

3> reset the MAC-hs entity.

…

If the IE "Downlink HS-PDSCH Information" is included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message, the UE shall:

1> if the IE "New H-RNTI" is included:

2> perform the actions as specified in subclause 8.6.3.1b.

1> if the IE "HS-SCCH Info" is included:

2> act as specified in subclause 8.6.6.33.

1> if the IE "Measurement Feedback Info" is included:

2> act as specified in subclause 8.6.6.34.

1> if the IE "HS-DSCH Timeslot Configuration" or "HS-PDSCH Midamble Configuration" is included:

2> store the received configuration;

2> determine the value for the HS_DSCH_RECEPTION variable and take actions as described in subclause 8.5.25.

1> For FDD, if, as a result of the received message, the variable H_RNTI is set and the UE has a stored IE "HS-SCCH Info" and a stored IE "Measurement Feedback Info"; and

1> For FDD, if the UE has received IE "Uplink DPCH Power Control Info" and stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor; and

1> For FDD, if the UE has stored IEs "MAC-hs queue to add or reconfigure list", "MAC-d PDU size Info" and "RB Mapping Info" corresponding to the HS-PDSCH configuration;

2> set the variable HS_DSCH_RECEPTION to TRUE;

2> start HS-DSCH reception procedures according to the stored HS-PDSCH configuration:

3> as stated in subclause 8.6.3.1b for the IE "H-RNTI";

3> in subclause 8.6.6.33 for the IE "HS-SCCH Info"; and

3> in subclause 8.6.6.34 for the IE "Measurement Feedback Info".

…

If the IE "HS-SCCH Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".

2> in 3.84 Mcps TDD and 7.68 Mcps TDD:

3> use the parameters specified in the IE "HS-SICH power control info" for open loop power control as defined in subclause 8.5.7.

2> in 1.28 Mcps TDD:

3> use the IE " $PRX_{HS-SICH}$ " and "ACK-NAK power offset" to calculate and set an initial uplink transmission power;

3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control

…

If the IE "Measurement Feedback Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

Reference

3GPP TS 25.331 clauses 8.2.2, 8,6,3,1, 8.6.3.1b, 8.6.5.6, 8.6.6.32, 8.6.6.33, 8.6.6.34

8.2.1.32.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to HS-DSCH according to the received RADIO BEARER SETUP message.

8.2.1.32.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

SYSTEM INFORMATION BLOCK TYPE 3 (see specific message contents)

UE: PS_DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.2.1.32**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -55 | Off | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -55 | Off | -55 |

Table 8.2.1.32 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_FACH state of cell 1 and only signalling radio bearers have been established. SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.1.32. The SS switches its downlink transmission power settings to columns "T1".

The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of radio access bearer mapped to HS-DSCH using a 384 kbps and uplink DCH restricted to 64 kbps for FDD, 3.84 Mcps TDD and 7.68 Mcps TDD or using 64 kbps uplink DCH for 1.28Mcps TDD. After the UE receives this message, it configures them and establishes a radio access bearer in cell 6. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | SS receives this message from Cell 6. |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 1)(FDD)

Use the same message as specified in clause 9 TS 34.108 for “Packet to CELL_DCH / HS-DSCH from CELL_FACH in PS", with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, with the following exceptions; |
| - PDCP info | Not present |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 10 |
| - Transmission window size | 256 |
| - Timer_RST | 1000 |
| - Max_RST | 12 |
| - Timer_poll_prohibit | 50 |
| - Timer_poll | 400 |
| - Poll_Windows | 80 |
| - Receiving window size | 2047 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 50 |
| UL Transport channel information for all transport channels | |
| - CHOICE Gain Factors | Computed Gain Factors (The last TFC is set to Signalled Gain Factors) |
| - Gain factorβc | 10 (below 64 kbps)<br>8 (higher than 64 kbps) |
| - Gain factorβd | 15<br>(Not Present if the CHOICE Gain Factors is set to Computed Gain Factors) |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink(Nu) | This IE should be present, if the default duplex distance defined for the operating frequency band is not used. |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Maximum allowed UL TX power | 24dBm |
| CHOICE channel requirement | |
| - $\Delta_{ACK}$ | 6 |
| - $\Delta_{NACK}$ | 6 |
| Downlink HS-PDSCH Information | |
| - Measurement Feedback Info | |
| - POhsdsch | 9dB |
| - CQI Feedback cycle, k | 10ms |
| - $\Delta_{CQI}$ | 3 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | 350 |

RADIO BEARER SETUP (Step 1)(3.84 Mcps TDD and 7.68 Mcps TDD)

Use the same message as specified in clause 9 TS 34.108 for “Packet to CELL_DCH / HS-DSCH from CELL_FACH in PS", with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup<br>- PDCP info<br>- Transmission RLC discard<br>- CHOICE SDU discard mode<br>- MAX_DAT<br>- Transmission window size<br>- Timer_RST<br>- Max_RST<br>- Timer_poll_prohibit<br>- Timer_poll<br>- Poll_Windows<br>- Receiving window size<br>- Downlink RLC status info<br>- Timer_status_prohibit | <br>Not present<br><br><br>No Discard<br>10<br>256<br>1000<br>12<br>50<br>400<br>80<br>2047<br><br>50 |
| UL Transport channel information for all transport channels<br>- UL TFCS | <br><br>Include only the CTFC’s from the default message that restrict the uplink transmission rate to 64 kbps. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>Same UARFCN as used for cell 6 |

RADIO BEARER SETUP (Step 1) 1.28 Mcps TDD

Use the same message as specified for “Packet to CELL_DCH / HS-DSCH from CELL_FACH in PS”, with the following exception:

| Information Element | Value/remark |
|---|---|
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| Frequency info<br>- Choice mode<br>- UARFCN (Nt)<br>Downlink information per radio link list<br>- Choice mode<br>- Primary CCPCH info<br>- Choice mode<br>- Choice TDD Option<br>- TSTD indicator<br>- Cell parameters ID<br>- SCTD indicator<br>- Downlink DPCH info for each RL | <br>TDD<br>Same UARFCN as used for cell 6<br><br>TDD<br><br>TDD<br>1.28 Mcps TDD<br>FALSE<br>Same Cell parameters ID as used for cell 6<br>FALSE<br>Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 |

#### 8.2.1.32.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

### 8.2.1.33 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Unsynchronised RL Reconfiguration)

#### 8.2.1.33.1 Definition

-

8.2.1.33.2 Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

- clear that entry;

1bis> in TDD, if the procedure is used to perform a handover to a cell where timing advance is enabled, and the UE can calculate the timing advance value in the new cell (i.e. in a synchronous TDD network):

2> set the IE "Uplink Timing Advance" according to subclause 8.6.6.26.In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

(Note: From TS25.433 clause 8.3.5.1)

The Unsynchronised Radio Link Reconfiguration procedure is used to reconfigure Radio Link(s) related to one UE-UTRAN connection within a Node B.

The Unsynchronised Radio Link Reconfiguration procedure is used when there is no need to synchronise the time of the switching from the old to the new configuration in one Node B used for a UE-UTRAN connection with any other Node B also used for the UE–UTRAN connection.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4 and TS25.433 clause 8.3.5.1.

8.2.1.33.3 Test purpose

To confirm that the UE establishes a new radio bearer according to a RADIO BEARER SETUP message.

8.2.1.33.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CS-DCCH_DCH (state 6-5) or PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Specific Message Content

For SIB type 1 message to be transmitted throughout the test, use the message titled "System Information Block type 1 (supported PLMN type is GSM-MAP)" as found in TS 34.108 clause 6, with the following exception.

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

Test Procedure

The UE is in CELL_DCH state, after the test operator is prompted to make an out-going call. Before step 1, only signalling radio bearers have been established.

The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of radio access bearer. After the UE receives this message, it configures them and establishes a radio access bearer. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type indicated by "Non speech from CELL_DCH to CELL_DCH in CS" or "Speech from CELL_DCH to CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" in [9] TS 34.108 clause 9, except for the following;

| Information Element | Value/remark |
|---|---|
| Activation time | Now |

#### 8.2.1.33.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

### 8.2.1.34 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Unsynchronised RL Reconfiguration with frequency modification)

#### 8.2.1.34.1 Definition

#### 8.2.1.34.2 Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

- clear that entry;

1bis> in TDD, if the procedure is used to perform a handover to a cell where timing advance is enabled, and the UE can calculate the timing advance value in the new cell (i.e. in a synchronous TDD network):

2> set the IE "Uplink Timing Advance" according to subclause 8.6.6.26.In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

(Note: From TS25.433 clause 8.3.5.1)

The Unsynchronised Radio Link Reconfiguration procedure is used to reconfigure Radio Link(s) related to one UE-UTRAN connection within a Node B.

The Unsynchronised Radio Link Reconfiguration procedure is used when there is no need to synchronise the time of the switching from the old to the new configuration in one Node B used for a UE-UTRAN connection with any other Node B also used for the UE–UTRAN connection.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4 and TS25.433 clause 8.3.5.1.

### 8.2.1.34.3 Test purpose

To confirm that the UE establishes a new radio bearer according to a RADIO BEARER SETUP message.

### 8.2.1.34.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

UE: CS-DCCH_DCH (state 6-5) or PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Specific Message Content

For SIB type 1 message to be transmitted throughout the test, use the message titled “System Information Block type 1 (supported PLMN type is GSM-MAP)” as found in TS 34.108 clause 6, with the following exception.

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

Test Procedure

**Table 8.2.1.34**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -55 | OFF | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -55 | OFF | -55 |

Table 8.2.1.34 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execusion. Column marked “T0” denote the initial conditions.

The UE is in CELL_DCH state, after the test operator is prompted to make an out-going call. Before step 1, only signalling radio bearers have been established. SS has configured its downlink transmission power setting according to columns “T0” in table 8.2.1.34. Then SS switches its downlink transmission power setting to columns “T1”.

The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of radio access bearer. After the UE receives this message, it configures them and establishes a radio access bearer in cell6. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | SS receives this message from cell 6. |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type indicated by "Non speech from CELL_DCH to CELL_DCH in CS" or "Speech from CELL_DCH to CELL_DCH in CS" or "Packet to CELL_DCH from CELL_DCH in PS" in [9] TS 34.108 clause 9, except for the followings:

| Information Element | Value/remark |
|---|---|
| Activation time | Now |
| Frequency info<br>- UARFCN uplink (Nu)<br><br><br><br>- UARFCN downlink (Nd) | <br>Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21]<br>Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code<br>- DPCH frame offset | <br><br>350<br>The Value is calculated based on internal SS timing difference |

8.2.1.34.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

## 8.2.1.34a Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (Unsynchronised RL Reconfiguration with inter band handover)

### 8.2.1.34a.1 Definition

This test case is identical to test case 8.2.1.34 except that the cells belong to different frequency bands.

### 8.2.1.34a.2 Conformance requirement

Same conformance requirement as in clause 8.2.1.34.2

### 8.2.1.34a.3 Test purpose

To confirm that the UE establishes a new radio bearer according to a RADIO BEARER SETUP message in a different frequency band cell.

### 8.2.1.34a.4 Method of test

Initial Condition

Same initial condition as in clause 8.2.1.34.4 except that cells 1 and 6 belong to different frequency bands.

Related ICS/IXIT statement(s)

- UE supports multiple bands simultaneously yes/no

Specific Message Content

Same specific message contents as in clause 8.2.1.34.4

Test Procedure

Same test procedure as in clause 8.2.1.34.4

Note: If UE supports more than 2 frequency bands, the test may be executed for various band combinations.

Expected sequence

Same expected sequence as in clause 8.2.1.34.4

Specific Message Contents

Same specific message contents as in clause 8.2.1.34.4

### 8.2.1.34a.5 Test requirement

Same test requirements as in clause 8.2.1.34.5

## 8.2.1.35 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (start of E-DCH transmission)

### 8.2.1.35.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH and E-DCH and all UEs which support TDD and HS-PDSCH and E-PUCH.

### 8.2.1.35.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable E_DCH_TRANSMISSION shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH info", including the IE "E-DPCCH info" and the IE "E-DPDCH info".
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH and E-HICH reception procedures;

1> For FDD:

2> stop any E-RGCH reception procedures.

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures.

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> act as if the IE "MAC-es/e reset indicator" was received and set to TRUE;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2>perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AICH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH and E-DPDCH transmission procedures.

…

1> for FDD:

2> if the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value(s) in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

1> for TDD:

2> if the IE "New E-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

If, after the completion of this procedure, the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> clear the variable E-RNTI.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

1> for TDD:

2> use the value of New E-RNTI stored in the variable E_RNTI as the UE identity in the E-AGCH reception procedure and the E-RUCCH transmission procedure in the physical layer.

…

If the IE "Added or Reconfigured UL TrCH information" is included then the UE shall:

1> for the transport channel identified by the IE "UL Transport Channel Identity" and IE "Uplink transport channel type":

2> perform the actions for the IE "Transport Format Set" as specified in subclause 8.6.5.1.

NOTE: The UE stores the UL transport channel configuration until it is explicitly deleted by a message containing the IE "Deleted UL TrCH information" or the UE leaves RRC Connected mode.

1> if the choice "UL parameters" is set to 'E-DCH':

2> for FDD:

3> apply the values of the IE "E-DCH Transmission Time Interval" and the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for TDD:

3> apply the value of the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for the IE "HARQ Info for E-DCH":

3> perform the actions specified in subclause 8.6.5.17.

2> if the IE "Added or Reconfigured E-DCH MAC-d Flow list " is included:

3> for each MAC-d flow identified by the IE "Mac-d flow identity":

4> perform the actions as specified in subclause 8.6.5.18.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "E-DCH Transmission Time Interval" is included, the UE shall:

1> store the received TTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> apply the TTI as signalled in the IE "E-DCH Transmission Time Interval" on the E-DPDCH.

If the received "E-DCH Transmission Time Interval" is 2 ms and the previously stored TTI was 10 ms:

1> not send any data on E-DPDCH in first 8 TTIs after activation time of new TTI.

…

If the IE "HARQ Info for E-DCH" is included, the UE shall:

1> store the received configuration;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use a redundancy version for each HARQ transmission as configured by the IE "HARQ RV Configuration".

…

If the IE "Added or reconfigured E-DCH MAC-d flow" is included, the UE shall:

1> if the IE "E-DCH MAC-d flow power offset" is included:

2> configure the power offset indicated in the IE "E-DCH MAC-d flow power offset" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow maximum number of retransmissions" is included:

2> configure the maximum number of retransmissions indicated in the IE "E-DCH MAC-d flow maximum number of retransmissions" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> for 1.28 Mcps TDD, if the IE "E-DCH MAC-d flow retransmission timer" is included:

2> configure the retransmission timer for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

1> else:

2> if previously the IE "E-DCH MAC-d flow multiplexing list" was already received for this E-DCH MAC-d flow:

3> continue to only multiplex E-DCH PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed according to the previously received IE "E-DCH MAC-d flow multiplexing list".

2> else (never received the IE "E-DCH MAC-d flow multiplexing list" for this E-DCH MAC-d flow):

3> allow multiplexing of MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from any other E-DCH MAC-d flow in the same MAC-e PDU.

1> for FDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled transmission grant HARQ process allocation" is configured for this MAC-d flow:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission grant HARQ process allocation", with a total contribution from this MAC-d flow (i.e. including MAC-e/es headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

3> else:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e PDU transmitted by any HARQ process, with a total contribution from this MAC-d flow (i.e. including MAC-e/es headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDU's for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH/E-RGCH (see [15]).

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity").

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDUs for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH (see [15]).

1> perform the actions as specified in subclause 8.5.21;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the UE is in TDD mode and shared transport channels are assigned to the UE:

3> start to receive the indicated Secondary CCPCH.

2> if the UE is in TDD mode and no shared transport channels are assigned to the UE:

3> set the variable UNSUPPORTED_CONFIGURATION to TRUE.

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link and no longer consider any other radio link as serving HS-DSCH radio link.

2> For FDD:

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link.

3> if the IE "E-AGCH Info" is included for the serving E-DCH radio link:

4> store the newly received E-AGCH configuration.

NOTE: The UTRAN should always include the IE "E-AGCH info" if the serving E-DCH radio link indicated in the message is another radio link than the serving E-DCH radio link prior to the procedure.

3> if the IE "E-HICH information" is included:

4> store this E-HICH configuration for the concerning radio link.

3> if the IE "E-HICH information" is included or previously stored:

4> store this E-RGCH configuration for the concerning radio link, if included.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for TDD:

3> if the IE "E-AGCH Info" is included:

4> store the newly received E-AGCH configuration.

3> if the IE "E-HICH information" is included:

4> store the E-HICH configuration.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link;

4> if the serving HS-DSCH radio link was another radio link than this radio link prior to reception of the message and the IE "H-RNTI" is not included:

5> clear the variable H_RNTI.

3> if the IE "Serving HS-DSCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving HS-DSCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving HS-DSCH radio link.

3> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link;

4> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:

5> if the IE "New Primary E-RNTI" is not included:

6> clear the Primary E-RNTI stored in the variable E_RNTI.

5> if the IE "New Secondary E-RNTI" is not included:

6> clear the Secondary E-RNTI stored in the variable E_RNTI.

3> if the IE "Serving E-DCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving E-DCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving E-DCH radio link.

3> if the IE "E-HICH release indicator" is present:

4> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.

3> if the IE "E-RGCH release indicator" is present:

4> delete the stored E-RGCH configuration for this RL.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> For TDD:

3> if the IE "H-RNTI" is not included and the primary CCPCH has changed:

4> clear the variable H_RNTI.

3> determine the value for the HS-DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

2> for TDD:

3> if the IE "New E-RNTI" is not included:

4> clear the variable E_RNTI.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:

3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> for FDD:

2> if the IE "E-DPCCH Info" is included:

3> store the newly received E-DPCCH configuration.

2> if the IE "E-DPDCH Info" is included:

3> store the newly received E-DPDCH configuration.

2> if the IE "UL 16QAM settings" is not included:

3> indicate to lower layers to stop any operation in 16QAM mode.

1> for 3.84/7.68 Mcps TDD:

2> if the IE "E-RUCCH Info" is included:

3> store the newly received E-RUCCH configuration.

2> if the IE "E-PUCH Info" is included:

NOTE 1: The UTRAN should ensure the ordering of the E-TFCI table in increasing transmission power, by correct setting of the reference E-TFCI power offsets.

NOTE 2: If a reference E-TFCI signalled to the UE is outside the UE physical channel capability, the UE behaviour is unspecified.

NOTE 2a: If E-TFCI boost is signalled to the UE and a reference E-TFCI <= E-TFCI Boost is signalled to the UE with a Reference E-TFCI PO of value 30 or 31, the UE behaviour is unspecified.

1> if the IE "MAC-es/e reset indicator" is included:

2> reset the MAC-es/e entity [15].

NOTE 3: If the IE "MAC-es/e reset indicator" is not set to TRUE in case the IE "E-DCH Transmission Time Interval" is reconfigured, the UE behaviour is unspecified.

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> configure the UL E-DPCCH in accordance with the stored IE "E-DPCCH" configuration;

2> configure the MAC with the stored IE "E-DPDCH" configuration and/or the information contained in IE "Scheduled Transmission configuration".

1> for TDD:

2> configure the E-RUCCH with the stored E-RUCCH configuration;

2> configure the MAC with the stored E-PUCH configuration.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.28, 8.6.3.14, 8.6.5.5, 8.6.5.16, 8.6.5.17, 8.6.5.18, 8.6.6.4, 8.6.6.37

### 8.2.1.35.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to HS-DSCH and E-DCH according to the received RADIO BEARER SETUP message.

### 8.2.1.35.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only)
- UE supports E-PUCH (TDD only)

Test Procedure

The UE is in CELL_DCH state. Only signalling radio bearers have been established.

The test operator is prompted to make an out-going call. The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of a radio bearer with RB mapping to HS-DSCH and E-DCH. After the UE receives this message, it establishes a radio bearer and maps it to the HS-DSCH and E-DCH. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using three multiplexing options (3/3) and SRBs mapped on DCH/DCH" in 34.108.

#### 8.2.1.35.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

### 8.2.1.36 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (hard handover to another frequency, start of E-DCH transmission)

#### 8.2.1.36.1 Definition

All UEs which support FDD and HS-PDSCH and E-DPDCH and all UEs which support TDD and HS-PDSCH and E-PUCH.

#### 8.2.1.36.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable E_DCH_TRANSMISSION shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH info", including the IE "E-DPCCH info" and the IE "E-DPDCH info".
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH and E-HICH reception procedures;

1> For FDD:

2> stop any E-RGCH reception procedures.

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures.

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> act as if the IE "MAC-es/e reset indicator" was received and set to TRUE;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2>perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AICH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH and E-DPDCH transmission procedures.

…

1> for FDD:

2> if the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value(s) in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

1> for TDD:

2> if the IE "New E-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

If, after the completion of this procedure, the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> clear the variable E-RNTI.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

1> for TDD:

2> use the value of New E-RNTI stored in the variable E_RNTI as the UE identity in the E-AGCH reception procedure and the E-RUCCH transmission procedure in the physical layer.

…

If the IE "Added or Reconfigured UL TrCH information" is included then the UE shall:

1> for the transport channel identified by the IE "UL Transport Channel Identity" and IE "Uplink transport channel type":

2> perform the actions for the IE "Transport Format Set" as specified in subclause 8.6.5.1.

NOTE: The UE stores the UL transport channel configuration until it is explicitly deleted by a message containing the IE "Deleted UL TrCH information" or the UE leaves RRC Connected mode.

1> if the choice "UL parameters" is set to 'E-DCH':

2> for FDD:

3> apply the values of the IE "E-DCH Transmission Time Interval" and the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for TDD:

3> apply the value of the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for the IE "HARQ Info for E-DCH":

3> perform the actions specified in subclause 8.6.5.17.

2> if the IE "Added or Reconfigured E-DCH MAC-d Flow list " is included:

3> for each MAC-d flow identified by the IE "Mac-d flow identity":

4> perform the actions as specified in subclause 8.6.5.18.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "E-DCH Transmission Time Interval" is included, the UE shall:

1> store the received TTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> apply the TTI as signalled in the IE "E-DCH Transmission Time Interval" on the E-DPDCH.

If the received "E-DCH Transmission Time Interval" is 2 ms and the previously stored TTI was 10 ms:

1> not send any data on E-DPDCH in first 8 TTIs after activation time of new TTI.

…

If the IE "HARQ Info for E-DCH" is included, the UE shall:

1> store the received configuration;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use a redundancy version for each HARQ transmission as configured by the IE "HARQ RV Configuration".

…

If the IE "Added or reconfigured E-DCH MAC-d flow" is included, the UE shall:

1> if the IE "E-DCH MAC-d flow power offset" is included:

2> configure the power offset indicated in the IE "E-DCH MAC-d flow power offset" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow maximum number of retransmissions" is included:

2> configure the maximum number of retransmissions indicated in the IE "E-DCH MAC-d flow maximum number of retransmissions" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> for 1.28 Mcps TDD, if the IE "E-DCH MAC-d flow retransmission timer" is included:

2> configure the retransmission timer for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

1> else:

2> if previously the IE "E-DCH MAC-d flow multiplexing list" was already received for this E-DCH MAC-d flow:

3> continue to only multiplex E-DCH PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed according to the previously received IE "E-DCH MAC-d flow multiplexing list".

2> else (never received the IE "E-DCH MAC-d flow multiplexing list" for this E-DCH MAC-d flow):

3> allow multiplexing of MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from any other E-DCH MAC-d flow in the same MAC-e PDU.

1> for FDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled transmission grant HARQ process allocation" is configured for this MAC-d flow:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission grant HARQ process allocation", with a total contribution from this MAC-d flow (i.e. including MAC-e/es headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

3> else:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e PDU transmitted by any HARQ process, with a total contribution from this MAC-d flow (i.e. including MAC-e/es headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDU's for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH/E-RGCH (see [15]).

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity").

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDUs for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH (see [15]).

1> perform the actions as specified in subclause 8.5.21;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the UE is in TDD mode and shared transport channels are assigned to the UE:

3> start to receive the indicated Secondary CCPCH.

2> if the UE is in TDD mode and no shared transport channels are assigned to the UE:

3> set the variable UNSUPPORTED_CONFIGURATION to TRUE.

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link and no longer consider any other radio link as serving HS-DSCH radio link.

2> For FDD:

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link.

3> if the IE "E-AGCH Info" is included for the serving E-DCH radio link:

4> store the newly received E-AGCH configuration.

NOTE: The UTRAN should always include the IE "E-AGCH info" if the serving E-DCH radio link indicated in the message is another radio link than the serving E-DCH radio link prior to the procedure.

3> if the IE "E-HICH information" is included:

4> store this E-HICH configuration for the concerning radio link.

3> if the IE "E-HICH information" is included or previously stored:

4> store this E-RGCH configuration for the concerning radio link, if included.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for TDD:

3> if the IE "E-AGCH Info" is included:

4> store the newly received E-AGCH configuration.

3> if the IE "E-HICH information" is included:

4> store the E-HICH configuration.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link;

4> if the serving HS-DSCH radio link was another radio link than this radio link prior to reception of the message and the IE "H-RNTI" is not included:

5> clear the variable H_RNTI.

3> if the IE "Serving HS-DSCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving HS-DSCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving HS-DSCH radio link.

3> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link;

4> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:

5> if the IE "New Primary E-RNTI" is not included:

6> clear the Primary E-RNTI stored in the variable E_RNTI.

5> if the IE "New Secondary E-RNTI" is not included:

6> clear the Secondary E-RNTI stored in the variable E_RNTI.

3> if the IE "Serving E-DCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving E-DCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving E-DCH radio link.

3> if the IE "E-HICH release indicator" is present:

4> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.

3> if the IE "E-RGCH release indicator" is present:

4> delete the stored E-RGCH configuration for this RL.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> For TDD:

3> if the IE "H-RNTI" is not included and the primary CCPCH has changed:

4> clear the variable H_RNTI.

3> determine the value for the HS-DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

2> for TDD:

3> if the IE "New E-RNTI" is not included:

4> clear the variable E_RNTI.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:

3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> for FDD:

2> if the IE "E-DPCCH Info" is included:

3> store the newly received E-DPCCH configuration.

2> if the IE "E-DPDCH Info" is included:

3> store the newly received E-DPDCH configuration.

2> if the IE "UL 16QAM settings" is not included:

3> indicate to lower layers to stop any operation in 16QAM mode.

1> for 3.84/7.68 Mcps TDD:

2> if the IE "E-RUCCH Info" is included:

3> store the newly received E-RUCCH configuration.

2> if the IE "E-PUCH Info" is included:

NOTE 1: The UTRAN should ensure the ordering of the E-TFCI table in increasing transmission power, by correct setting of the reference E-TFCI power offsets.

NOTE 2: If a reference E-TFCI signalled to the UE is outside the UE physical channel capability, the UE behaviour is unspecified.

NOTE 2a: If E-TFCI boost is signalled to the UE and a reference E-TFCI <= E-TFCI Boost is signalled to the UE with a Reference E-TFCI PO of value 30 or 31, the UE behaviour is unspecified.

1> if the IE "MAC-es/e reset indicator" is included:

2> reset the MAC-es/e entity [15].

NOTE 3: If the IE "MAC-es/e reset indicator" is not set to TRUE in case the IE "E-DCH Transmission Time Interval" is reconfigured, the UE behaviour is unspecified.

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> configure the UL E-DPCCH in accordance with the stored IE "E-DPCCH" configuration;

2> configure the MAC with the stored IE "E-DPDCH" configuration and/or the information contained in IE "Scheduled Transmission configuration".

1> for TDD:

2> configure the E-RUCCH with the stored E-RUCCH configuration;

2> configure the MAC with the stored E-PUCH configuration.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.28, 8.6.3.14, 8.6.5.5, 8.6.5.16, 8.6.5.17, 8.6.5.18, 8.6.6.4, 8.6.6.37

### 8.2.1.36.3 Test purpose

To confirm that the UE performs a hard handover to another frequency, establishes a radio bearer mapped on E-DCH and starts E-DCH transmission according to the received a RADIO BEARER SETUP message. Un-sychronised RB Setup is tested here.

8.2.1.36.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statements

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only)
- UE supports E-PUCH (TDD only)

Specific Message Content

For SIB type 1 message to be transmitted throughout the test, use the message titled “System Information Block type 1 (supported PLMN type is GSM-MAP)” as found in TS 34.108 clause 6, with the following exception.

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

Test Procedure

**Table 8.2.1.36**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -70 | -70 | -60 |

Table 8.2.1.36 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_DCH state of cell 1 and only signalling radio bearers have been established. The SS has configured its downlink transmission power setting according to columns “T0” in table 8.2.1.36. Then the SS switches its downlink transmission power setting to columns “T1” and transmits a RADIO BEARER SETUP message including the IE “Frequency info” set to frequency information of cell 6 and IE “Primary CPICH info” set to Primary Scrambling Code which is assigned to P-CPICH of cell. This message requests the establishment of a radio bearer with RB mapping to HS-DSCH and E-DCH. After the UE receives this message, it establishes a radio bearer and maps it to the HS-DSCH and E-DCH. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1) (FDD)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using three multiplexing options (3/3) and SRBs mapped on DCH/DCH" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation time | Not Present |
| Frequency info<br>- UARFCN uplink(Nu)<br><br><br><br>- UARFCN downlink(Nd) | <br>Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21]<br>Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links<br>- CHOICE mode<br>- Primary CPICH info<br>- Primary Scrambling Code | <br>FDD<br><br>Set to same code as used for cell 6 |

RADIO BEARER SETUP (Step 1)( 1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using three multiplexing options (3/3) and SRBs mapped on DCH/DCH" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation time | Not Present |
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>Same UARFCN as used for cell 6 |
| Downlink information for each radio links<br>Downlink information for each radio link<br>- Choice mode<br>- Primary CCPCH info<br>- Cell parameters ID | <br><br><br>TDD<br><br>Set to the same as cell 6 |

RADIO BEARER SETUP (Step 1) (3.84Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using three multiplexing options (3/3) and SRBs mapped on DCH/DCH" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation time | Not Present |
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>Same UARFCN as used for cell 6 |
| Downlink information for each radio link<br>- CHOICE mode<br>- Primary CCPCH info<br>- CHOICE mode | <br>TDD<br><br>TDD |
| - Cell parameters ID | Set to same cell parameters ID as cell 6 |

### 8.2.1.36.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

## 8.2.1.36a Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH using F-DPCH: Success (hard handover to another frequency, start of E-DCH transmission, F-DPCH configured)

### 8.2.1.36a.1 Definition

All UEs which support FDD and HS-PDSCH and E-DPDCH and fully support F-DPCH.

#### 8.2.1.36a.2 Conformance requirement

Same conformance requirement as in clause 8.2.1.36.2

#### 8.2.1.36a.3 Test purpose

Same test purpose as in clause 8.2.1.36.3.

#### 8.2.1.36a.4 Method of test

Initial Condition

Same initial conditions as in clause 8.2.1.36.4

Related ICS/IXIT statements

- UE supports FDD
- UE supports HS-PDSCH
- UE supports E-DPDCH
- UE fully supports F-DPCH

Test Procedure

Same test procedure as in clause 8.2.1.36.4 except that the UE transmits RADIO BEARER SETUP COMPLETE using AM RLC on E-DCH.

Expected sequence

Same expected sequence as in clause 8.2.1.36.4

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using one multiplexing option (1/1) and SRBs mapped on E-DCH/HS-DSCH" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation time | Not Present |
| Frequency info<br>- UARFCN uplink(Nu)<br><br><br><br>- UARFCN downlink(Nd) | <br>Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21]<br>Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links<br>- CHOICE mode<br>- Primary CPICH info<br>- Primary Scrambling Code | <br>FDD<br><br>Set to same code as used for cell 6 |

#### 8.2.1.36a.5 Test requirements

Same test requirements as in clause 8.2.1.36.5

### 8.2.1.37 Void

### 8.2.1.38 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (start of discontinuous uplink transmission)

#### 8.2.1.38.1 Definition and applicability

All UEs which support FDD and UL DTX.

8.2.1.38.2 Conformance requirement

1> if any of the IEs "DTX-DRX timing information" or "DTX-DRX information" are stored in the UE:

2> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> use the newly received DTX-DRX timing configuration.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.2.2.3, 8.5.34, 8.6.6.38, 8.6.6.39

### 8.2.1.38.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to HS-DSCH and E-DCH and enables discontinuous uplink DPCCH transmission according to the received RADIO BEARER SETUP message.

### 8.2.1.38.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports DPCCH Discontinuous Transmission

Test Procedure

The UE is in CELL_DCH state. Only signalling radio bearers have been established, mapped to DPCH.

The test operator is prompted to make an out-going call. The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of a radio bearer with RB mapping to HS-DSCH and E-DCH, with UL DTX configured. After the UE receives this message, it establishes a radio bearer and maps it to the HS-DSCH and E-DCH. The UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 320ms if 2ms TTI is used, or 400ms if 10ms TTI is used. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 320ms if 2ms TTI is used, or 400ms if 10ms TTI is used. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

The contents of RADIO BEARER SETUP message in this test case are identical to the message sub-type indicated by "Packet to CELL_DCH / E-DCH / HS-DSCH with DTX/DRX using one multiplexing option (1/1) and SRBs mapped on E-DCH/HS-DSCH" with the following exceptions:

| | |
|---|---|
| RB information to be reconfigured | |
| - RB identity | 1 (UM DCCH for RRC) |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 1 |
| - RB identity | 2 (AM DCCH for RRC) |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |

| | |
|---|---|
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 2 |
| - RB identity | 3 (AM DCCH for NAS High Priority) |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 3 |
| - RB identity | 4 (AM DCCH for NAS Low Priority) |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 4 |
| Deleted UL TrCH information | |
| - Uplink transport channel type | DCH |
| - UL transport channel identity | 5 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 10 |
| DTX-DRX timing information | |
| - CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 16 |
| - UE DTX DRX Offset | 1 if 2ms TTI selected, otherwise 0 |

### 8.2.1.38.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE.

At step 3 the time taken to report 10 consecutive CQI indications shall be 320ms if 2ms TTI is used, or 400ms if 10ms TTI is used.

## 8.2.1.39 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (start of HS-SCCH less operation)

### 8.2.1.39.1 Definition and applicability

All UEs which support FDD and HS-SCCH less operation.

### 8.2.1.39.2 Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message; or

…

it shall:

…

1> if any of the IEs "DTX-DRX timing information" or "DTX-DRX information" are stored in the UE:

2> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message;

1> the UE shall determine the value for the HS_SCCH_LESS_STATUS variable.

The variable HS_SCCH_LESS_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable HS_DSCH_RECEPTION is set to TRUE;

1> no DCH transport channel is configured;

1> the variable HS_SCCH_LESS_PARAMS is set;

1> the UE has received IE "HS-SCCH less information".

If any of the above conditions is not met and the variable HS_SCCH_LESS_STATUS is set to TRUE and the value of IE "HS-SCCH less information" included in this message is not "Continue HS-SCCH less operation", the UE shall:

1> set the variable HS_SCCH_LESS_STATUS to FALSE;

1> clear the variable HS_SCCH_LESS_PARAMS;

1> stop all HS-SCCH less related activities.

Whenever the variable HS_SCCH_LESS_STATUS is set to TRUE, the UE shall:

1> configure the physical and MAC layers to operate according to the HS_SCCH_LESS_PARAMS.

…

If the IE "HS-SCCH less information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "HS-SCCH less operation" is set to "New HS-SCCH less operation":

2> store the contents of the IE in the variable HS_SCCH_LESS_PARAMS.

1> determine the value for the HS_SCCH_LESS_STATUS variable and take the corresponding actions as described in subclause 8.5.35.

Reference

3GPP TS 25.331 clauses 8.2.2.3, 8.5.34, 8.6.6.40

### 8.2.1.39.3 Test purpose

To confirm that the UE establishes a radio bearer mapped to HS-DSCH and E-DCH and enables HS-SCCH less operation according to the received RADIO BEARER SETUP message.

### 8.2.1.39.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-SCCHless HS-DSCH

Test Procedure

The UE is in CELL_DCH state. Only signalling radio bearers have been established.

The test operator is prompted to make an out-going call. The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of a radio bearer with RB mapping to HS-DSCH and E-DCH and the start of HS-SCCH less operation. After the UE receives this message, it establishes a radio bearer and maps it to the HS-DSCH and E-DCH. The UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. The SS transmits a UE CAPABILITY ENQUIRY message using HS-SCCHless operation. The UE shall respond with a UE CAPABILITY INFORMATION message and finally the SS replies with UE CAPABILITY INFORMATION CONFIRM, send using HS-SCCHless operation. The SS SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | With parameters for HS-SCCH less operation |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ← | | UE CAPABILITY ENQUIRY | The SS transmits this message using HS-SCCHless operation |
| 4 | → | | UE CAPABILITY INFORMATION | |
| 5 | ← | | UE CAPABILITY INFORMATION CONFIRM | The SS transmits this message using HS-SCCHless operation |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

The contents of RADIO BEARER SETUP message in this test case are identical to the message sub-type indicated by "Packet to CELL_DCH / E-DCH / HS-DSCH with DTX/DRX using one multiplexing option (1/1) and SRBs mapped on E-DCH/HS-DSCH" with the following exceptions:

| Information Element | Value/remark |
|---|---|
| DTX-DRX timing information | Not Present |
| DTX-DRX Information | Not Present |
| HS-SCCH less information | |
| CHOICE HS-SCCH less operation | |
| - New HS-SCCH less operation | |
| - HS-PDSCH Code Index | 14 |
| - Transport Block Size List | 4 elements |
| - Transport Block Size Index | 20 [365, sufficient for 1 MAC-d PDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | FALSE |
| - Transport Block Size Index | 48 [699, sufficient for 2 MAC-d PDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | FALSE |
| - Transport Block Size Index | 70[1036, sufficient for 3 MAC-d PDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | FALSE |
| - Transport Block Size Index | 86 [1380, sufficient for 4 MAC-d PDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | FALSE |

#### 8.2.1.39.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE.

After step 3, the UE shall transmit a UE CAPABILITY INFORMATION message.

### 8.2.1.40 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (hard handover to another frequency, start of discontinuous uplink transmission)

#### 8.2.1.40.1 Definition

All UEs which support FDD and UL DTX.

#### 8.2.1.40.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> use the newly received DTX-DRX timing configuration.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.2.2.2, 8.5.34, 8.6.6.38, 8.6.6.39

### 8.2.1.40.3 Test purpose

To confirm that the UE performs a hard handover to another frequency, establishes a radio bearer mapped to HS-DSCH and E-DCH and enables discontinuous uplink DPCCH transmission according to the received RADIO BEARER SETUP message. Un-sychronised RB Setup is tested here.

### 8.2.1.40.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statements

- UE supports FDD
- UE supports DPCCH Discontinuous Transmission

Specific Message Content

For SIB type 1 message to be transmitted throughout the test, use the message titled “System Information Block type 1 (supported PLMN type is GSM-MAP)” as found in TS 34.108 clause 6, with the following exception.

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

Test Procedure

**Table 8.2.1.36**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Table 8.2.1.36 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_DCH state of cell 1 and only signalling radio bearers have been established. The SS has configured its downlink transmission power setting according to columns “T0” in table 8.2.1.36. Then the SS switches its downlink transmission power setting to columns “T1” and transmits a RADIO BEARER SETUP message including the IE “Frequency info” set to frequency information of cell 6 and IE “Primary CPICH info” set to Primary Scrambling Code which is assigned to P-CPICH of cell. This message requests the establishment of a radio bearer with RB mapping to HS-DSCH and E-DCH, with UL DTX configured. After the UE receives this message, it establishes a radio bearer and maps it to the HS-DSCH and E-DCH. Finally the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC.

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

The contents of RADIO BEARER SETUP message in this test case are identical to the message sub-type indicated by "Packet to CELL_DCH / E-DCH / HS-DSCH with DTX/DRX using one multiplexing option (1/1) and SRBs mapped on E-DCH/HS-DSCH"

#### 8.2.1.40.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

At step 3 the time taken to report 10 consecutive CQI indications shall be 400ms.

### 8.2.1.41 Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (UL DPCCH slot format #4)

#### 8.2.1.41.1 Definition and applicability

All UEs which support FDD and Slot Format #4.

#### 8.2.1.41.2 Conformance requirement

If the IE "Uplink DPCH info" is included, the UE shall:

For FDD:

1> release any active uplink physical channels and activate the given physical channels;

1> if the IE "Number of FBI bits" is not included:

2> use 0 FBI bits in the Uplink DPCH.

1> if the IE "Number of TPC bits" is not included:

2> use 2 TPC bits in the Uplink DPCH.

1> else:

2> if F-DPCH is not configured then the UE behaviour is unspecified.

1> use an SF equal to or greater than the minimum SF indicated in the IE "Spreading Factor" during uncompressed frames or compressed frames by HL scheduling;

1> use an SF equal to or greater than the minimum SF divided by 2 during compressed frames by SF reduction.

Reference

3GPP TS 25.331 clauses 8.6.6.6

### 8.2.1.41.3 Test purpose

To confirm that the UE is able to establish a radio bearer mapped on E-DCH/HS-DSCH, with signaling radio bearers mapped on E-DCH/HS-DSCH together with use of F-DPCH and UL DPCCH slot format #4, according to the received RADIO BEARER SETUP message.

### 8.2.1.41.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports Slot Format #4

Test Procedure

The UE is in CELL_DCH state. Only signalling radio bearers have been established.

The test operator is prompted to make an out-going call. The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of a radio bearer mapped on E-DCH/HS-DSCH, with signaling radio bearers mapped on E-DCH/HS-DSCH together with use of F-DPCH and UL DPCCH slot format #4. After the UE receives this message, it establishes a radio bearer and maps it to the E-DCH/HS-DSCH. The UE shall transmit a RADIO BEARER SETUP COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using one multiplexing option (1/1) and SRBs mapped on E-DCH/HS-DSCH" (condition A14) in TS 34.108 clause 9, except for the following:

| Information Element | Value/remark |
|---|---|
| Uplink DPCH info | |
| - Number of TPC bits | 4 |

#### 8.2.1.41.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE.

## 8.2.2 Radio Bearer Reconfiguration

### 8.2.2.1 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success

#### 8.2.2.1.1 Definition

#### 8.2.2.1.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

#### 8.2.2.1.3 Test purpose

To confirm that the UE reconfigures the radio bearers according to a RADIO BEARER RECONFIGURATION message, which indicates a change of UL scrambling code and change of RLC parameters.

#### 8.2.2.1.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RECONFIGURATION message to the UE, which commands a change of UL scrambling code (for FDD) and UL channelization cade (for 1.28 Mcps TDD) and change of RLC parameters to be performed. The UE reconfigures the new parameter and transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

The SS transmits a new RADIO BEARER RECONFIGURATION message to the UE, which commands the UE to reconfigure RLC parameters. The UE reconfigures the new parameters and and transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | ← | | RADIO BEARER RECONFIGURATION | UL scrambling code is modified. RLC configuration is modified. |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 5 | | | Void | |
| 6 | ← | | RADIO BEARER RECONFIGURATION | RLC configuration is modified. |
| 7 | | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 8 | | | Void | |
| 9 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (FDD) (Step 3)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found inclause 9 of TS 34.108, with the following exceptions:

| Information Element | Condition | Value/remark | Version |
|---|---|---|---|
| RB information to reconfigure list | | | |
| - RB information to reconfigure | | (AM DCCH for RRC) | |
| - RB identity | | 2 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 400 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 150 | |
| - Timer_poll | | 150 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | 400 | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | | (AM DCCH for NAS_DT High priority) | |
| - RB identity | | 3 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 400 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 150 | |
| - Timer_poll | | 150 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |

| | | | |
|---|---|---|---|
| - Timer_EPC | | Not present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | 400 | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | | 4 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 400 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 150 | |
| - Timer_poll | | 150 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not Present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | 400 | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | A3 | (AM DTCH) | |
| - RB identity | | 20 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 400 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 150 | |
| - Timer_poll | | 150 | |
| - Poll_PDU | | Not Present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not Present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | 400 | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| UL Transport channel information for all transport | | Not Present | |

| | | | |
|---|---|---|---|
| channels | | | |
| Added or Reconfigured UL TrCH information | | Not Present | |
| CHOICE mode | | Not Present | |
| DL Transport channel information common for all transport channel | | Not Present | |
| Deleted DL TrCH information | | Not Present | |
| Added or Reconfigured DL TrCH information | | Not Present | |
| Frequency info | | Not Present | |
| Maximum allowed UL TX power | | Not Present | |
| CHOICE channel requirement<br>- Scrambling code number | | Uplink DPCH info<br>1 | |
| CHOICE Mode<br>- Downlink PDSCH information | | FDD<br>Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links<br>Downlink information per radio link list<br>-Downlink information for each radio link<br>- Primary CPICH info<br>- Primary scrambling code | | Not presenr<br><br><br><br>Set to same code as used for cell 1 | |

| Condition | Explanation |
|---|---|
| A1 | This IE need for "Non speech in CS" |
| A2 | This IE need for "Speech in CS" |
| A3 | This IE need for "Packet to CELL_DCH from CELL_DCH in PS" |

RADIO BEARER RECONFIGURATION (TDD)(Step 3)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled "Packet to CELL_DCH from CELL_DCH in PS" inclause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE mode | TDD |
| Uplink DPCH timeslots and codes | |
| - First timeslot code list | Assigned by SS |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indicator | Maintain |

RADIO BEARER RECONFIGURATION (1.28 Mcps TDD) (Step 3)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found inclause 9 of TS 34.108, with the following exceptions:

| Information Element | Condition | Value/remark |
|---|---|---|
| RB information to reconfigure list | | |
| - RB information to reconfigure | | (AM DCCH for RRC) |
| - RB identity | | 2 |
| - PDCP info | | Not Present |
| - PDCP SN info | | Not Present |
| - RLC info | | |
| - CHOICE Uplink RLC mode | | AM RLC |
| - Transmission RLC discard | | |
| - SDU discard mode | | No discard |
| - MAX_DAT | | 15 |
| - Transmission window size | | 128 |
| - Timer_RST | | 400 |
| - Max_RST | | 4 |
| - Polling info | | |
| - Timer_poll_prohibit | | 150 |
| - Timer_poll | | 150 |
| - Poll_PDU | | Not present |
| - Poll_SDU | | 1 |
| - Last transmission PDU poll | | TRUE |
| - Last retransmission PDU poll | | TRUE |
| - Poll_Window | | 99 |
| - Timer_poll_periodic | | Not Present |
| - CHOICE Downlink RLC mode | | AM RLC |
| - In-sequence delivery | | TRUE |
| - Receiving window size | | 128 |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | | 200 |
| - Timer_EPC | | Not present |
| - Missing PDU indicator | | TRUE |
| - Timer_STATUS_periodic | | 400 |
| - RB mapping info | | Not Present |
| - RB stop/continue | | Not Present |
| - RB information to reconfigure | | (AM DCCH for NAS_DT High priority) |
| - RB identity | | 3 |
| - PDCP info | | Not Present |
| - PDCP SN info | | Not Present |
| - RLC info | | |
| - CHOICE Uplink RLC mode | | AM RLC |
| - Transmission RLC discard | | |
| - SDU discard mode | | No discard |
| - MAX_DAT | | 15 |
| - Transmission window size | | 128 |
| - Timer_RST | | 400 |
| - Max_RST | | 4 |
| - Polling info | | |
| - Timer_poll_prohibit | | 150 |
| - Timer_poll | | 150 |
| - Poll_PDU | | Not present |
| - Poll_SDU | | 1 |
| - Last transmission PDU poll | | TRUE |
| - Last retransmission PDU poll | | TRUE |
| - Poll_Window | | 99 |
| - Timer_poll_periodic | | Not Present |
| - CHOICE Downlink RLC mode | | AM RLC |
| - In-sequence delivery | | TRUE |
| - Receiving window size | | 128 |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | | 200 |
| - Timer_EPC | | Not present |
| - Missing PDU indicator | | TRUE |
| - Timer_STATUS_periodic | | 400 |

| | | |
|---|---|---|
| - RB mapping info | | Not Present |
| - RB stop/continue | | Not Present |
| - RB information to reconfigure | | (AM DCCH for NAS_DT Low priority) |
| - RB identity | | 4 |
| - PDCP info | | Not Present |
| - PDCP SN info | | Not Present |
| - RLC info | | |
| - CHOICE Uplink RLC mode | | AM RLC |
| - Transmission RLC discard | | |
| - SDU discard mode | | No discard |
| - MAX_DAT | | 15 |
| - Transmission window size | | 128 |
| - Timer_RST | | 400 |
| - Max_RST | | 4 |
| - Polling info | | |
| - Timer_poll_prohibit | | 150 |
| - Timer_poll | | 150 |
| - Poll_PDU | | Not present |
| - Poll_SDU | | 1 |
| - Last transmission PDU poll | | TRUE |
| - Last retransmission PDU poll | | TRUE |
| - Poll_Window | | 99 |
| - Timer_poll_periodic | | Not Present |
| - CHOICE Downlink RLC mode | | AM RLC |
| - In-sequence delivery | | TRUE |
| - Receiving window size | | 128 |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | | 200 |
| - Timer_EPC | | Not Present |
| - Missing PDU indicator | | TRUE |
| - Timer_STATUS_periodic | | 400 |
| - RB mapping info | | Not Present |
| - RB stop/continue | | Not Present |
| - RB information to reconfigure | A3 | (AM DTCH) |
| - RB identity | | 20 |
| - PDCP info | | Not Present |
| - PDCP SN info | | Not Present |
| - RLC info | | |
| - CHOICE Uplink RLC mode | | AM RLC |
| - Transmission RLC discard | | |
| - SDU discard mode | | No discard |
| - MAX_DAT | | 15 |
| - Transmission window size | | 128 |
| - Timer_RST | | 400 |
| - Max_RST | | 4 |
| - Polling info | | |
| - Timer_poll_prohibit | | 150 |
| - Timer_poll | | 150 |
| - Poll_PDU | | Not Present |
| - Poll_SDU | | 1 |
| - Last transmission PDU poll | | TRUE |
| - Last retransmission PDU poll | | TRUE |
| - Poll_Window | | 99 |
| - Timer_poll_periodic | | Not Present |
| - CHOICE Downlink RLC mode | | AM RLC |
| - In-sequence delivery | | TRUE |
| - Receiving window size | | 128 |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | | 200 |
| - Timer_EPC | | Not Present |
| - Missing PDU indicator | | TRUE |
| - Timer_STATUS_periodic | | 400 |
| - RB mapping info | | Not Present |
| - RB stop/continue | | Not Present |
| UL Transport channel information for all transport channels | | Not Present |
| Added or Reconfigured UL TrCH information | | Not Present |
| CHOICE mode | | Not Present |

| | | |
|---|---|---|
| DL Transport channel information common for all transport channel | | Not Present |
| Deleted DL TrCH information | | Not Present |
| Added or Reconfigured DL TrCH information | | Not Present |
| Frequency info | | Not Present |
| Maximum allowed UL TX power | | Not Present |
| UL Channel Requirement<br>- UL TS ChannelisationCodeList | | Uplink DPCH info |
| - UL TS_ChannelisationCode | | cc8_2 |
| Downlink information common for all radio links<br>Downlink information per radio link list | | Not present<br>Not present |

| Condition | Explanation |
|---|---|
| A1 | This IE need for "Non speech in CS" |
| A2 | This IE need for "Speech in CS" |
| A3 | This IE need for "Packet to CELL_DCH from CELL_DCH in PS" |

RADIO BEARER RECONFIGURATION (FDD) (Step 6)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Condition | Value/remark | Version |
|---|---|---|---|
| RB information to reconfigure list | | | |
| - RB information to reconfigure | | (AM DCCH for RRC) | |
| - RB identity | | 2 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 500 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 200 | |
| - Timer_poll | | 200 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | Not Present | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | | (AM DCCH for NAS_DT High priority) | |
| - RB identity | | 3 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |

| Information Element | Condition | Value/remark | Version |
|---|---|---|---|
| - Transmission window size | | 128 | |
| - Timer_RST | | 500 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 200 | |
| - Timer_poll | | 200 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | Not Present | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | | 4 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 500 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 200 | |
| - Timer_poll | | 200 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not Present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | Not Present | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | A3 | (AM DTCH) | |
| - RB identity | | 20 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 500 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 200 | |

| Information Element | Condition | Value/remark | Version |
|---|---|---|---|
| - Timer_poll | | 200 | |
| - Poll_PDU | | Not Present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not Present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | Not Present | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| UL Transport channel information for all transport channels | | Not Present | |
| Added or Reconfigured UL TrCH information | | Not Present | |
| CHOICE mode | | Not Present | |
| DL Transport channel information common for all transport channel | | Not Present | |
| Deleted DL TrCH information | | Not Present | |
| Added or Reconfigured DL TrCH information | | Not Present | |
| Frequency info | | Not Present | |
| Maximum allowed UL TX power | | Not Present | |
| CHOICE channel requirement | | Not Present | |
| CHOICE Mode<br>- Downlink PDSCH information | | FDD<br>Not Present | <br>R99 and Rel-4 only |
| Downlink information common for all radio links<br>Downlink information per radio link list<br>- Doenlink information for each rdio link<br>- Primary CPICH info<br>- Primary scrambling code | | Not Present<br><br><br><br><br>Set to same code as used for cell 1 | |

| Condition | Explanation |
|---|---|
| A1 | This IE need for "Non speech in CS" |
| A2 | This IE need for "Speech in CS" |
| A3 | This IE need for "Packet to CELL_DCH from CELL_DCH in PS" |

RADIO BEARER RECONFIGURATION (TDD) (Step 6)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE mode | TDD |
| Uplink DPCH timeslots and codes | |
| - First timeslot code list | Assigned by SS |
| Downlink information common for all radio links | Not Present |
| Downlink information per radio link list | |
| - Doenlink information for each rdio link | |
| - Primary CCPCH info | Set to same as used for cell 1 |

8.2.2.1.5 Test requirement

After step 3 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the new DPCH after the specified activation time has expired.

After step 6, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

## 8.2.2.1a Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (TDD Only)

### 8.2.2.1a.1 Definition

The features and operation of UpPCH shifting have been introduced to core specification (TS25.331 clause 8.6.6.26) for LCR TDD.

### 8.2.2.1a.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> 1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

When UE is in the stage of RB Reconfiguring, it shall perform RB setup procedure to the neighbour cell and enter CELL_DCH state according to neighbour cell parameters and UpPCH position indicated by the RADIO BEARER RECONFIGURATION message.

### Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.2.1a.3 Test purpose

To confirm that the UE reconfigures the radio bearers according to a RADIO BEARER RECONFIGURATION message, which indicates a change of UL scrambling code and change of RLC parameters.

To verify the UE successfully identify the UpPCH position of neighbour cell in RB RECONFIG message and perform RB reconfigure procedure to the neighbour cell based on the configuration from SS.

8.2.2.1a.4 Method of test

Initial Condition

System Simulator: 1 2 cells. Cell 1 is in the UARFCN 1 and Cell 4 is in the UARFCN 4. UpPCH shifting=22 in the cell 4 of UARFCN 4.

UE: CS-DCCH +DTCH_DCH (state 6-59) or PS-DCCH+DTCH_DCH (state 6-107) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

| Parameter | Unit | Cell 1 | | Cell 4 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| P-CCPCH RSCP(TDD) | dBm | -55 | -72 | Off | -55 |

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RECONFIGURATION message to the UE, which commands a change of UL scrambling code (for FDD) and UL channelization cade (for 1.28 Mcps TDD) and change of RLC parameters to be performed. The UE reconfigures the new parameter and transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

The SS transmits a new RADIO BEARER RECONFIGURATION message to the UE, which commands the UE to reconfigure RLC parameters. The UE reconfigures the new parameters and and transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

UE is in the CELL_DCH state. SS send RADIO BEARER RECONFIGURATION to UE containing the parameters of destination cell and a change of RLC parameter. UE reconfigures the new parameter and transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH of CELL 4 using AM RLC.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | ← | | RADIO BEARER RECONFIGURATION | UL scrambling code is modified. RLC configuration is modified. |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 5 | | | Void | |
| 6 | ← | | RADIO BEARER RECONFIGURATION | RLC configuration is modified. |
| 7 | | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 8 | | | Void | |
| 9 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |
| 10 | ← | | RADIO BEARER RECONFIGURATION | Notify UE setup radio bearer in Cell 4 and indicate frequency of neighbour cell and UpPCH position |
| 11 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 12 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (FDD1.28Mcps TDD) (Step 3)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found inclause 9 of TS 34.108, with the following exceptions:

| Information Element | Condition | Value/remark | Version |
|---|---|---|---|
| RB information to reconfigure list | | | |
| - RB information to reconfigure | | (AM DCCH for RRC) | |
| - RB identity | | 2 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 400 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 150 | |
| - Timer_poll | | 150 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | 400 | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | | (AM DCCH for NAS_DT High priority) | |
| - RB identity | | 3 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 400 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 150 | |
| - Timer_poll | | 150 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |

| | | | |
|---|---|---|---|
| - Timer_EPC | | Not present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | 400 | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | | 4 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 400 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 150 | |
| - Timer_poll | | 150 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not Present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | 400 | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | A3 | (AM DTCH) | |
| - RB identity | | 20 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 400 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 150 | |
| - Timer_poll | | 150 | |
| - Poll_PDU | | Not Present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not Present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | 400 | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| UL Transport channel information for all transport | | Not Present | |

| | | | |
|---|---|---|---|
| channels | | | |
| Added or Reconfigured UL TrCH information | | Not Present | |
| CHOICE mode | | Not Present | |
| DL Transport channel information common for all transport channel | | Not Present | |
| Deleted DL TrCH information | | Not Present | |
| Added or Reconfigured DL TrCH information | | Not Present | |
| Frequency info | | Not Present | |
| Maximum allowed UL TX power | | Not Present | |
| CHOICE UL channel requirement<br>- UL TS_ChannelisationCodeListScrambling code number | | Uplink DPCH info<br>1 | |
| CHOICE Mode | | FDD | |
| - Downlink PDSCH informationUL TS_ChannelisationCode | | Not Presentcc8_2 | R99 and Rel-4 only |
| Downlink information common for all radio links<br>Downlink information per radio link list<br>-Downlink information for each radio link<br>- Primary CPICH info<br>- Primary scrambling code | | Not presentr<br>Not present<br><br><br>Set to same code as used for cell 1 | |

| Condition | Explanation |
|---|---|
| A1 | This IE need for "Non speech in CS" |
| A2 | This IE need for "Speech in CS" |
| A3 | This IE need for "Packet to CELL_DCH from CELL_DCH in PS" |

RADIO BEARER RECONFIGURATION (TDD)(Step 3)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled "Packet to CELL_DCH from CELL_DCH in PS" inclause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE mode | TDD |
| Uplink DPCH timeslots and codes | |
| - First timeslot code list | Assigned by SS |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indicator | Maintain |

RADIO BEARER RECONFIGURATION (1.28 Mcps TDD) (Step 36)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found inclause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 400 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 400 |

| | |
|---|---|
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 400 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 20 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 400 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| UL Transport channel information for all transport channels | Not Present |
| Added or Reconfigured UL TrCH information | Not Present |
| CHOICE mode | Not PresentTDD |

| | |
|---|---|
| Uplink DPCH timeslots and codesDL Transport channel information common for all transport channel | Not Present |
| - First timeslot code listDeleted DL TrCH information | SS allocateNot Present |
| Downlink information common for all radio linksAdded or Reconfigured DL TrCH information | Not presentNot Present |
| Downlink information per radio link listFrequency info | Not Present |
| -Downlink information for each radio linkMaximum allowed UL TX power | Not Present |
| -Primary CCPCH infoUL Channel Requirement | Preious settingUplink DPCH info |
| Uplink DPCH info - UL TS ChannelisationCodeList | |
| -Uplink Timing Advance Control - UL TS_ChannelisationCode | cc8_2 |
| -Frequency infoDownlink information common for all radio links | Not present |
| UpPCH position infoDownlink information per radio link list | 0Not present |

| Condition | Explanation |
|---|---|
| A1 | This IE need for "Non speech in CS" |
| A2 | This IE need for "Speech in CS" |
| A3 | This IE need for "Packet to CELL_DCH from CELL_DCH in PS" |

RADIO BEARER RECONFIGURATION (FDD) (Step 6)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Condition | Value/remark | Version |
|---|---|---|---|
| RB information to reconfigure list | | | |
| - RB information to reconfigure | | (AM DCCH for RRC) | |
| - RB identity | | 2 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 500 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 200 | |
| - Timer_poll | | 200 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | Not Present | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | | (AM DCCH for NAS_DT High priority) | |
| - RB identity | | 3 | |
| - PDCP info | | Not Present | |

| Information Element | Condition | Value/remark | Version |
|---|---|---|---|
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 500 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 200 | |
| - Timer_poll | | 200 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | Not Present | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | | 4 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 500 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 200 | |
| - Timer_poll | | 200 | |
| - Poll_PDU | | Not present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not Present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | Not Present | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| - RB information to reconfigure | A3 | (AM DTCH) | |
| - RB identity | | 20 | |
| - PDCP info | | Not Present | |
| - PDCP SN info | | Not Present | |
| - RLC info | | | |
| - CHOICE Uplink RLC mode | | AM RLC | |
| - Transmission RLC discard | | | |
| - SDU discard mode | | No discard | |

| Information Element | Condition | Value/remark | Version |
|---|---|---|---|
| - MAX_DAT | | 15 | |
| - Transmission window size | | 128 | |
| - Timer_RST | | 500 | |
| - Max_RST | | 4 | |
| - Polling info | | | |
| - Timer_poll_prohibit | | 200 | |
| - Timer_poll | | 200 | |
| - Poll_PDU | | Not Present | |
| - Poll_SDU | | 1 | |
| - Last transmission PDU poll | | TRUE | |
| - Last retransmission PDU poll | | TRUE | |
| - Poll_Window | | 99 | |
| - Timer_poll_periodic | | Not Present | |
| - CHOICE Downlink RLC mode | | AM RLC | |
| - In-sequence delivery | | TRUE | |
| - Receiving window size | | 128 | |
| - Downlink RLC status info | | | |
| - Timer_status_prohibit | | 200 | |
| - Timer_EPC | | Not Present | |
| - Missing PDU indicator | | TRUE | |
| - Timer_STATUS_periodic | | Not Present | |
| - RB mapping info | | Not Present | |
| - RB stop/continue | | Not Present | |
| UL Transport channel information for all transport channels | | Not Present | |
| Added or Reconfigured UL TrCH information | | Not Present | |
| CHOICE mode | | Not Present | |
| DL Transport channel information common for all transport channel | | Not Present | |
| Deleted DL TrCH information | | Not Present | |
| Added or Reconfigured DL TrCH information | | Not Present | |
| Frequency info | | Not Present | |
| Maximum allowed UL TX power | | Not Present | |
| CHOICE channel requirement | | Not Present | |
| CHOICE Mode<br>- Downlink PDSCH information | | FDD<br>Not Present | <br>R99 and Rel-4 only |
| Downlink information common for all radio links<br>Downlink information per radio link list<br>- Doenlink information for each rdio link<br>- Primary CPICH info<br>- Primary scrambling code | | Not Present<br><br><br><br><br>Set to same code as used for cell 1 | |

| Condition | Explanation |
|---|---|
| A1 | This IE need for "Non speech in CS" |
| A2 | This IE need for "Speech in CS" |
| A3 | This IE need for "Packet to CELL_DCH from CELL_DCH in PS" |

RADIO BEARER RECONFIGURATION (TDD) (Step 610)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CHOICE modeRadioBearerSetup-r4-IEs | TDD |
| … | |
| Frequency info | |
| -CHOICE mode | TDD |
| - UARFCN(Nt) | Same UARFCN as used for cell 4 |
| Uplink DPCH timeslots and codes | |
| - First timeslot code list | Assigned by SS |
| Downlink information common for each radio linksall radio links | Not Present |
| - CHOICE modeDownlink information per radio link list | TDD |
| - Primary CCPCH info- Doenlink information for each rdio link | |
| - Cell parameters ID - Primary CCPCH info | Set to same as used for cell 1As used for cell 4 |
| … | |
| RadioBearerSetup-r4-add-ext | |
| radioBearerSetup-r4-TDD128-add-ext | |
| UpPCHpositionInfo | 22 |

8.2.2.1a.5 Test requirement

After step 3 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the new DPCH after the specified activation time has expired.

After step 611, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message and enter the state of CELL_DCH in Cell 4.

## 8.2.2.2 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Failure (Unsupported configuration)

8.2.2.2.1 Definition

8.2.2.2.2 Conformance requirement

If the UTRAN instructs the UE to use a configuration, which it does not support and/or if the received message causes the variable UNSUPPORTED_CONFIGURATION to be set to TRUE, the UE shall:

1> transmit a failure response as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "configuration unsupported".

1> set the variable UNSUPPORTED_CONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

…

The UE shall:

1> in case of reception of a RADIO BEARER RECONFIGURATION message:

…

2> transmit a RADIO BEARER RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

…

The UE should set the variable UNSUPPORTED_CONFIGURATION to TRUE if the received message is not according to the UE capabilities.

Reference

3GPP TS 25.331 clause 8.2.2.6, 8.2.2.9, 8.5.20.

8.2.2.2.3 Test purpose

To confirm that the UE transmits a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC if the received RADIO BEARER RECONFIGURATION message includes unsupported configuration parameters.

8.2.2.2.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits a RADIO BEARER RECONFIGURATION message to the UE, which includes unsupported configuration parameters for the UE. The UE shall transmit a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC. UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Including unsupported configuration by the UE |
| 2 | → | | RADIO BEARER RECONFIGURATION FAILURE | The UE does not change the radio bearer. |
| 3 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8000 |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 0b and 3)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER RECONFIGURATION (FDD) (Step 1)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- CHOICE mode<br>- UARFCN uplink (Nu)<br>- UARFCN downlink (Nd) | <br>FDD<br>0<br>950 |

RADIO BEARER RECONFIGURATION (TDD) (Step 1)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>0 |

RADIO BEARER RECONFIGURATION FAILURE (Step 2)

The contents of RADIO BEARER RECONFIGURATION FAILURE message in this test case is the same as the RADIO BEARER RECONFIGURATION FAILURE message as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Message Type<br>Failure cause | <br>Not checked |

#### 8.2.2.2.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 1 the UE shall transmit a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC .

After step 2, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

### 8.2.2.3 Void

### 8.2.2.4 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Failure (Physical channel failure and cell reselection)

#### 8.2.2.4.1 Definition

#### 8.2.2.4.2 Conformance requirement

If the received message caused the UE to be in CELL_DCH state and the UE failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> revert to the configuration prior to the reception of the message (old configuration);

1> if the old configuration includes dedicated physical channels (CELL_DCH state) and the UE is unable to revert to the old configuration:

2> initiate a cell update procedure according to TS 25.331 subclause 8.3.1, using the cause "radio link failure";

2> after the cell update procedure has completed successfully:

3> proceed as below.

…

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

…

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- includes "Physical channel information elements":

the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

…

The UE shall:

1> in case of reception of a RADIO BEARER RECONFIGURATION message:

…

2> transmit a RADIO BEARER RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9, 8.3.1.7.

#### 8.2.2.4.3 Test purpose

To confirm that the UE transmits a RADIO BEARER RECONFIGURATION FAILURE message after it completes a cell update procedure when the UE cannot reconfigure the new radio bearer and a subsequent failure to revert to the old configuration.

#### 8.2.2.4.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits a RADIO BEARER RECONFIGURATION message, which includes the new radio bearer parameters, to the UE. After the reception of the acknowledgement for the RADIO BEARER RECONFIGURATION message in SS, the SS shall not reconfigure dedicated physical channel in accordance with the settings in the message and release the previous configuration. The UE discovers that it cannot reconfigure the new radio bearer and wants to revert to the old configuration, but the UE cannot revert to the old configuration. The UE transmits a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "radio link failure". The SS shall transmit a CELL UPDATE CONFIRM message on downlink DCCH after receiving a CELL UPDATE message. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC and subsequently transmits a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting the value "physical channel failure" to IE "failure cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | | | | The SS does not reconfigure the dedicated physical channel in accordance with the RADIO BEARER RECONFIGURATION message and shall release the old configuration. |
| 3 | → | | CELL UPDATE | The value "radio link failure" shall be set in IE "Cell update cause". |
| 4 | | | | The SS configures the dedicated physical channel according to the IE "Physical channel information elements" included in the CELL UPDATE CONFIRM message. |
| 5 | ← | | CELL UPDATE CONFIRM | This message include IE "Physical channel information elements". |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 7 | → | | RADIO BEARER RECONFIGURATION FAILURE | The IE "failure cause" shall be set to "physical channel failure" |
| 8 | → | | MEASUREMENT REPORT | |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 7 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8000 |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 0b and 8)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 7 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER RECONFIGURATION message (Step 1) (FDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Clause 9 of TS 34.108 with the following exceptions

| Information Element | Value/remark |
|---|---|
| CHOICE channel requirement | |
| Scrambling code number | Set to different value other then the one specified in Radio Bearer Setup message |
| - Downlink information for each radio links | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary CPICH scrambling code | Ref. to the Default setting for cell 2 in TS34.108 clause 6.1 (FDD) |

RADIO BEARER RECONFIGURATION message (Step 1) (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Clause 9 of TS 34.108 with the following exceptions

| Information Element | Value/remark |
|---|---|
| Downlink information for each radio link list | |
| - Downlink information for each radio links | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Ref. to the Default setting for cell 2 in TS34.108 clause 6.1 (TDD) |

CELL UPDATE (Step 3)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in Clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "radio link failure" |

CELL UPDATE CONFIRM (Step 5) (FDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in Clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | Uplink DPCH info |
| - UplinkDPCH Info | Same as RADIO BEARER SETUP message used to move to initial condition |
| Downlink information common for all radio links | Same as RADIO BEARER SETUP message used to move to initial condition |
| Downlink information for each radio links | Same as RADIO BEARER SETUP message used to move to initial condition |

CELL UPDATE CONFIRM (Step 5) (TDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in Clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_DCH |
| Uplink DPCH timeslots and codes | Same as RADIO BEARER SETUP message used to move to initial condition |
| Downlink information for each radio links | Same as RADIO BEARER SETUP message used to move to initial condition |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 6)

Use the same message found in TS 34.108 clause 9, with the exceptions of the following IEs:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info | This IE is not checked. |

RADIO BEARER RECONFIGURATION FAILURE (Step 7)

The contents of RADIO BEARER RECONFIGURATION FAILURE message in this test case is the same as the RADIO BEARER RECONFIGURATION FAILURE message as found in Clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | "physical channel failure" |

#### 8.2.2.4.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 2 the UE shall transmit a CELL UPDATE message on the CCCH with IE "Cell update cause" set to "radio link failure".

After step 5 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE on the uplink DCCH using AM RLC.

After step 6 the UE shall transmit a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting the IE "failure cause" to "physical channel failure".

After step 7, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

### 8.2.2.5 Void

### 8.2.2.6 Void

### 8.2.2.7 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (Continue and stop)

#### 8.2.2.7.1 Definition

#### 8.2.2.7.2 Conformance requirement

If the IE "RB information to reconfigure" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity". The UE shall:

…

- if the IE "RB stop/continue" is included; and
  - if the "RB identity" has a value greater than 2; and
    - if the value of the IE "RB stop/continue" is "stop":
      - configure the RLC entity for the radio bearer to stop;
      - set the IE "RB started" in the variable ESTABLISHED_RABS to "stopped" for that radio bearer;
    - if the value of the IE "RB stop/continue" is "continue":
      - configure the RLC entity for the radio bearer to continue;
      - set the IE "RB started" in the variable ESTABLISHED_RABS to "started" for that radio bearer;

Reference

3GPP TS 25.331 clause 8.2.2, 8.6.4.5.

8.2.2.7.3 Test purpose

To confirm that the UE reconfigures new radio bearer and stop the transmission and reception of the RLC entity belonging to the RB identity specified in the RADIO BEARER RECONFIGURATION message.

To confirm that the UE reconfigures new radio bearer and restart the transmission and reception of the RLC entity belonging to the RB identity specified in the RADIO BEARER RECONFIGURATION message.

8.2.2.7.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RECONFIGURATION message including IE "RB stop/continue" set to "continue" for radio bearer with RB identity '3'. The UE reconfigures new radio bearer and transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC. Then, the SS transmits an IDENTITY REQUEST message using AM RLC, the UE responds a IDENTITY RESPONSE message. The SS transmits a RADIO BEARER RECONFIGURATION message including IE "RB stop/continue" set to "stop" for radio bearer with RB identity "3". The UE reconfigures new radio bearer and transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC. Then, the SS transmits a IDENTITY REQUEST message using AM RLC, the UE does not acknowledge this message and also does not respond with a IDENTITY RESPONSE message. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | This message include IE "RB stop/continue" set to "continue". |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 3 | ← | | IDENTITY REQUEST | |
| 3a | → | | IDENTITY RESPONSE | |
| 4 | ← | | RADIO BEARER RECONFIGURATION | This message include IE "RB stop/continue" set to "stop". |
| 5 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 6 | ← | | IDENTITY REQUEST | |
| 7 | → | | | The SS shall not receive any data from the UE. |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)(FDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| RB information to reconfigure list<br>RB information to reconfigure<br>-RB identity<br>-RB stop/continue | <br><br>3<br>"continue" | |
| UL Transport channel information for all transport channels | Not Present | |
| Added or Reconfigured UL TrCH information | Not Present | |
| CHOICE mode | Not Present | |
| DL Transport channel information common for all transport channel | Not Present | |
| Deleted DL TrCH information | Not Present | |
| Added or Reconfigured DL TrCH information | Not Present | |
| Frequency info | Not Present | |
| CHOICE channel requirement | Not Present | |
| CHOICE Mode<br>- Downlink PDSCH information | FDD<br>Not Present | <br>R99 and Rel-4 only |
| Downlink information common for all radio links | Not Present | |
| Downlink information per radio link list | | |
| -Downlink information for each radio link<br>- Primary CPICH info<br>- Primary scrambling code | <br><br>Set to same code as used for cell 1 | |

RADIO BEARER RECONFIGURATION (Step 1) (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list<br>RB information to reconfigure<br>-RB identity<br>-RB stop/continue | <br><br>3<br>"continue" |
| UL Transport channel information for all transport channels | Not Present |
| Added or Reconfigured UL TrCH information | Not Present |
| CHOICE mode | Not Present |
| DL Transport channel information common for all transport channel | Not Present |
| Deleted DL TrCH information | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info | Not Present |
| CHOICE channel requirement | Not Present |
| CHOICE Mode<br>- Downlink PDSCH information | TDD<br>Not Present |
| Downlink information common for all radio links | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link<br>- Primary CCPCH info | <br>Set to same code as used for cell 1 |

RADIO BEARER RECONFIGURATION (Step 4)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list<br>RB information to reconfigure<br>-RB identity<br>-RB stop/continue | <br><br>3<br>"stop" |

#### 8.2.2.7.5 Test requirement

After step 3 the UE shall respond with a IDENTITY RESPONSE message.

After step 6 the UE shall not respond with a IDENTITY RESPONSE message on the stopped RB.

### 8.2.2.8 Radio Bearer Reconfiguration from CELL_DCH to CELL_FACH: Success

#### 8.2.2.8.1 Definition

#### 8.2.2.8.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (for FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> select PRACH according to TS 25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> use the transport format set given in system information;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

1> if the contents of the variable C_RNTI is empty:

2> perform a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

8.2.2.8.3 Test purpose

To confirm that the UE establishes the reconfigured radio bearer(s) using common physical channel, after UE receives a RADIO BEARER RECONFIGURATION message.

8.2.2.8.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RECONFIGURATION message, which invoke a transition from CELL_DCH to CELL_FACH. The UE reconfigures the radio bearers and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE selects PRACH and S-CCPCH indicated in SIB5/SIB5bis and SIB6 after entering CELL FACH state. |
| 3 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)(FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in clause 9 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |

| Information Element | Value/remark |
|---|---|
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 20 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Frequency info | Not Present |

| Information Element | Value/remark |
|---|---|
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 1 |

RADIO BEARER RECONFIGURATION (Step 1) (TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in clause 9 of TS 34.108, with the following exception:

| | |
|---|---|
| Frequency info | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CCPCH info | Set to same as used for cell 1 |

#### 8.2.2.8.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

### 8.2.2.9 Radio Bearer Reconfiguration from CELL_DCH to CELL_FACH: Success (Cell re-selection)

#### 8.2.2.9.1 Definition

#### 8.2.2.9.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (for FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to subclause 8.6.3.3.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to [4] on that frequency.

1> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

2> initiate a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

1> select PRACH according to subclause 8.5.17;

1> select Secondary CCPCH according to subclause 8.5.19;

1> use the transport format set given in system information;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

The UE shall transmit a response message as specified in subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

…

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

…

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.3.1.7, 8.2.2.4.

### 8.2.2.9.3 Test purpose

To confirm that the UE transmits RADIO BEARER RECONFIGURATION COMPLETE message after it completes a cell update procedure.

### 8.2.2.9.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

NOTE: The 'timer poll' value in the SS RLC transmit entity should be set to 800 ms.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RECONFIGURATION message, which includes IE "Primary CPICH info" and no dedicated physical channel information to transit from CELL_DCH to CELL_FACH. As the UE selects another cell than the specified cell, the UE shall initiate the cell update procedure. The UE transmits a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". The SS shall transmit a

CELL UPDATE CONFIRM message on downlink DCCH after receiving a CELL UPDATE message. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Assign a transition from CELL_DCH to CELL_FACH. |
| 4 | → | | CELL UPDATE | The value "cell reselection" shall be set in IE "Cell update cause". |
| 5 | ← | | CELL UPDATE CONFIRM | See message content. |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 7 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 8 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 3) (FDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_FACH from CELL_DCH in PS" found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |

| Information Element | Value/remark |
|---|---|
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 20 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |

| Information Element | Value/remark |
|---|---|
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| - Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 2 |

RADIO BEARER RECONFIGURATION (Step 3) (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_FACH from CELL_DCH in PS" found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Downlink information for each radio links<br>- Primary CCPCH info | <br>4 Set to same as used for cell 2 |

CELL UPDATE (Step 4)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "Cell reselection" |

CELL UPDATE CONFIRM (Step 5)

Use the same message type found in clause Annex A, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 6)

Only the message type is checked.

8.2.2.9.5 Test requirement

After step 3, the UE shall transmit CELL UPDATE message on the CCCH with IE "Cell update cause" set to "cell reselection".

After step 5, the UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message and then followed by RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.2.10 Radio Bearer Reconfiguration: from CELL_FACH to CELL_DCH including modification of previously signalled CELL_DCH configuration: Success

#### 8.2.2.10.1 Definition

#### 8.2.2.10.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (for FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

#### 8.2.2.10.3 Test purpose

To confirm that the UE applies a previously signalled configuration for CELL_DCH and in addition modifies the parameters for which reconfiguration is requested in the RADIO BEARER RECONFIGURATION message that is used to initiate transition from CELL_FACH to CELL_DCH.8.2.2.10.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The SS transmits a RADIO BEARER RECONFIGURATION message to the UE. The UE reconfigures the radio bearers and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | This message includes IE "Uplink DPCH Info" |
| 2 | | | | Reconfiguration of radio bearer |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 20 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels | Not Present |
| Added or Reconfigured UL TrCH information | Not Present |
| DL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |

#### 8.2.2.10.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.2.11 Radio Bearer Reconfiguration from CELL_FACH to CELL_DCH: Failure (Unsupported configuration)

#### 8.2.2.11.1 Definition

#### 8.2.2.11.2 Conformance requirement

If the UTRAN instructs the UE to use a configuration, which it does not support and/or if the received message causes the variable UNSUPPORTED_CONFIGURATION to be set to TRUE, the UE shall:

1> transmit a failure response as specified in subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "configuration unsupported".

1> set the variable UNSUPPORTED_CONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

…

The UE should set the variable UNSUPPORTED_CONFIGURATION to TRUE if the received message is not according to the UE capabilities.

Reference

3GPP TS 25.331 subclause 8.2.2.6, 8.5.20.

#### 8.2.2.11.3 Test purpose

To confirm that the UE transmits a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC if the received RADIO BEARER RECONFIGURATION message includes unsupported configuration parameters.

#### 8.2.2.11.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The SS transmits a RADIO BEARER RECONFIGURATION message, which includes unsupported configuration parameters, to the UE. The UE shall transmit a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | The message includes an unsupported configuration for the UE |
| 2 | → | | RADIO BEARER RECONFIGURATION FAILURE | The UE does not change the radio bearer. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (FDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_DCH from CELL_FACH in PS" found in TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink (Nu) | 0 |
| - UARFCN downlink (Nd) | 950 |

RADIO BEARER RECONFIGURATION (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_DCH from CELL_FACH in PS" found in TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | 0 |

RADIO BEARER RECONFIGURATION FAILURE

The contents of RADIO BEARER RECONFIGURATION FAILURE message in this test case is the same as the RADIO BEARER RECONFIGURATION FAILURE message as found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Not checked. |

8.2.2.11.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC.

## 8.2.2.11a Radio Bearer Reconfiguration from CELL_FACH to CELL_DCH: Failure (Unsupported configuration) (1.28 Mcps TDD Only)

### 8.2.2.11a.1 Definition

### 8.2.2.11a.2 Conformance requirement

If the UTRAN instructs the UE to use a configuration, which it does not support and/or if the received message causes the variable UNSUPPORTED_CONFIGURATION to be set to TRUE, the UE shall:

1> transmit a failure response as specified in subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "configuration unsupported".

1> set the variable UNSUPPORTED_CONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

…

The UE should set the variable UNSUPPORTED_CONFIGURATION to TRUE if the received message is not according to the UE capabilities.

Reference

3GPP TS 25.331 subclause 8.2.2.6, 8.5.20.

### 8.2.2.11a.3 Test purpose

To confirm that the UE transmits a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC if the received RADIO BEARER RECONFIGURATION message includes unsupported configuration parameters.

### 8.2.2.11a.4 Method of test

Initial Condition

System Simulator: 1 cell. Configure 3 carriers ，one is the primary carrier，the other two are secondary carriers.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The SS transmits a RADIO BEARER RECONFIGURATION message, which includes unsupported configuration parameters, to the UE. The UE shall transmit a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC. Then，the SS transmits a RADIO BEARER RECONFIGURATION message to order UE to go into CELL_DCH state of secondary carrier. The UE shall transmit a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH and keep in CELL_DCH state.

Expected sequence:

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | The message includes an unsupported configuration for the UE. |
| 2 | → | | RADIO BEARER RECONFIGURATION FAILURE | The UE does not change the radio bearer. |
| 3 | ← | | RADIO BEARER RECONFIGURATION | The message includes information about secondary carrier1 |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE goes into CELL_DCH state of secondary carrier |
| 5 | ← | | RADIO BEARER RECONFIGURATION | The message includes information about secondary carrier2（different from the carrier information in step3） |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE goes into CELL_DCH state ofsecondary carrier2 |
| 7 | ← | | RADIO BEARER RECONFIGURATION | The message includes information aboutprimary carrier |
| 8 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE goes into CELL_DCH state ofprimary carrier. |

Specific Message Contents:

RADIO BEARER RECONFIGURATION (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_DCH from CELL_FACH in PS" found in TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>0 |

RADIO BEARER RECONFIGURATION FAILURE

The contents of RADIO BEARER RECONFIGURATION FAILURE message in this test case is the same as the RADIO BEARER RECONFIGURATION FAILURE message as found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Not checked. |

RADIO BEARER RECONFIGURATION (step 3)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_DCH from CELL_FACH in PS" found in TS 34.108 clause 9 with the following exceptions

| Information Element | Value/remark |
|---|---|
| RadioBearerReconfiguration-r4-TDD128-add-ext-IEs | |
| frequencyInfo | secondary carrier 1frequency |

RADIO BEARER RECONFIGURATION (step 5)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_DCH from CELL_FACH in PS" found in TS 34.108 clause 9 with the following exceptions.

| Information Element | Value/remark |
|---|---|
| RadioBearerSetup-r4-TDD128-add-ext-IEs | |
| frequencyInfo | secondary carrier 2 frequency |

RADIO BEARER RECONFIGURATION (step 7)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_DCH from CELL_FACH in PS" found in TS 34.108 clause 9 with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>primary carrier frequency |

#### 8.2.2.11a.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC.

After step 4 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH ofsecondary carrier1 using AM RLC.

After step 6 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH of secondary carrier 2 using AM RLC

After step 8 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH of primary carrier using AM RLC.

### 8.2.2.12 Void

### 8.2.2.13 Void

### 8.2.2.14 Void

### 8.2.2.15 Void

### 8.2.2.16 Void

### 8.2.2.17 Radio Bearer Reconfiguration from CELL_FACH to CELL_FACH: Success

#### 8.2.2.17.1 Definition

#### 8.2.2.17.2 Conformance requirement

If the UE was in CELL_FACH state upon reception of the reconfiguration message and remains in CELL_FACH state, the UE shall:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency;

2> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selected another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.2.17.3 Test purpose

To confirm that the UE establishes radio bearers according to a RADIO BEARER RECONFIGURATION message.

### 8.2.2.17.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The SS transmits a RADIO BEARER RECONFIGURATION message, to the UE. The UE configures the common physical channel and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | | | Void | |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 4 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with the following exceptions.

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |

| Information Element | Value/remark |
|---|---|
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 20 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Maximum allowed UL TX power | Not Present |

#### 8.2.2.17.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

### 8.2.2.18 Radio Bearer Reconfiguration from CELL_FACH to CELL_FACH: Success (Cell re-selection)

#### 8.2.2.18.1 Definition

#### 8.2.2.18.2 Conformance requirement

If the UE performs cell re-selection during the reconfiguration procedure, the UE shall:

1> initiate a cell update procedure, as specified in subclause 8.3.1;

1> continue with the reconfiguration procedure.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.2.2.8, 8.3.1.7.

#### 8.2.2.18.3 Test purpose

To confirm that the UE transmits RADIO BEARER RECONFIGURATION COMPLETE message in cell 2 when a cell re-selection occurs after receving a RADIO BEARER RECONFIGURATION message.

#### 8.2.2.18.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.2.2.18**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |
| P-CCPCH (TDD) | dBm | -60 | -75 | -75 | -60 |

Table 8.2.2.18 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 2.

The UE is in CELL_FACH state in cell 1. The SS configures RB2 to stop transmission and reception of RLC PDUs. On transmitting a RADIO BEARER RECONFIGURATION message to the UE on RB 1, the SS configures its downlink transmission power settings according to columns "T1" in table 8.2.2.18. The UE shall initiate the cell reselection procedure, which may occur either before or after submitting the RADIO BEARER RECONFIGURATION COMPLETE message for transmission on the DCCH using AM RLC. The UE transmits a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". The SS shall transmit a CELL UPDATE CONFIRM message on downlink DCCH and configure RB2 to continue transmission and reception of RLC PDUs after receiving CELL UPDATE message. Any RADIO BEARER RECONFIGURATION COMPLETE message that was previously submitted for transmission in the UE will now be received by the SS. UE transmit a UTRAN MOBILTY INFORMATION CONFIRM message on the DCCH using AM RLC. If not already done so, the UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE 1: The RADIO BEARER RECONFIGURATION COMPLETE message may be received by the SS either after reception of CELL UPDATE CONFIRM (Option 1) or after transmitting UTRAN MOBILITY INFORMATION CONFIRM (Option 2).

NOTE 2: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | SS | | | The SS configures RB 2 to stop transmission and reception of RLC PDUs. |
| 1 | ← | | RADIO BEARER RECONFIGURATION | The message is transmitted on RB 1. |
| 2 | | | | The SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.2.2.18. |
| 3 | | | Void | |
| | | | | The following messages are transmitted in cell 2. |
| 4 | → | | CELL UPDATE | The value "cell reselection" shall be set in IE "cell update cause". |
| 5 | ← | | CELL UPDATE CONFIRM | See message content. |
| 5a | SS | | | The SS configures RB 2 to continue transmission and reception of RLC PDUs. |
| 5b | → | | RADIO BEARER RECONFIGURATION COMPLETE (Option 1) | |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 7 | → | | RADIO BEARER RECONFIGURATION COMPLETE (Option 2) | |
| 8 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |

| | |
|---|---|
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 20 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Maximum allowed UL TX power | Not Present |

CELL UPDATE (Step 4)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 5)

Use the same message type found in clause 9 of TS 34.108, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 6)

Only the message type is checked.

#### 8.2.2.18.5 Test requirement

After step 2 the UE shall transmit a CELL UPDATE message on the CCCH with IE "cell update cause" set to "cell reselection".

After step 5 UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC.

The UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC. This message may be received by the SS earliest after step 5a and at latest after step 6.

### 8.2.2.19 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (Subsequently received)

#### 8.2.2.19.1 Definition

#### 8.2.2.19.2 Conformance requirement

If the IE "RRC transaction identifier" is included in a received message, the UE shall perform the actions below. The UE shall:

If the received message is any of the messages:

- RADIO BEARER RECONFIGURATION; or

  …

the UE shall:

2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

2> if the variable CELL_UPDATE_STARTED is set to TRUE; or

2> if the table "Accepted transactions" in the variable TRANSACTIONS contains an entry with an IE "Message Type" set to ACTIVE SET UPDATE; or

2> if the received message contains a protocol error according to TS 25.331 clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

4> ignore the transaction; and

4> continue with any ongoing processes and procedures as the message was not received;

4> and end the procedure.

3> else:

…

Reference

3GPP TS 25.331 clause 8.6.3.11.

### 8.2.2.19.3 Test purpose

To confirm that if the UE receives a new RADIO BEARER RECONFIGURATION message before the UE configures the radio bearer according to a previous RADIO BEARER RECONFIGURATION message, it ignores the new RADIO BEARER RECONFIGURATION message and configures the radio bearer according to the previous RADIO BEARER RECONFIGURATION message received.

### 8.2.2.19.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. SS transmits a RADIO BEARER RECONFIGURATION message to the UE before the UE configures the radio bearer according to the RADIO BEARER RECONFIGURATION message prior to this new message. The UE ignores the new RADIO BEARER RECONFIGURATION message and configures according to the former RADIO BEARER RECONFIGURATION message. On completion of radio bearer configuration, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Periodic RLC STATUS PDU transmission is activated. For FDD, the UL scrambling code is set to "1". For TDD, the code combination is assigned by SS. |
| 2 | ← | | RADIO BEARER RECONFIGURATION | Sent before the "activation time" in step 1 has elapsed. Periodic RLC STATUS PDU transmission is not activated.For FDD, the UL scrambling code is set to "2".For TDD the code combination assigned is different to that assigned in step 1. |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE ignores the RADIO BEARER RECONFIGURATION message in step 2 and performs configuration according to the RADIO BEARER RECONFIGURATION message in step 1. |
| 4 | | | Void | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1) (FDD and PS Domain)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_DCH from CELL_DCH in PS" as found in TS 34.108 clause 9.1 with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| RRC transaction identifier | 0 | |
| Activation Time | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256 | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | 400 | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | 400 | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | 400 | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DTCH) | |
| - RB identity | 20 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | 400 | |
| - RB mapping info | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RB stop/continue | Not Present | |
| UL Transport channel information for all transport channels | Not Present | |
| Added or Reconfigured UL TrCH information | Not Present | |
| CHOICE mode | Not Present | |
| DL Transport channel information common for all transport channel | Not Present | |
| Deleted DL TrCH information | Not Present | |
| Added or Reconfigured DL TrCH information | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Uplink DPCH info | |
| - CHOICE mode | FDD | |
| - Scrambling code number | 1 | |
| CHOICE Mode | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | Not Present | |
| Downlink information per radio link list | Not Present | Rel-4 or later |
| Downlink information per radio link list | | R99 |
| -Downlink information for each radio link | | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to same code as used for cell 1 | |

RADIO BEARER RECONFIGURATION (Step 1) (FDD and CS Domain)

The contents of the RADIO BEARER RECONFIGURATION message in this test case are identical to those specified for "Speech in CS" or "Non speech in CS" as found in TS 34.108 clause 9.1 with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| RRC transaction identifier | 0 | |
| Activation Time | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256 | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | 400 | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | 400 | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | 400 | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| UL Transport channel information for all transport channels | Not Present | |
| Added or Reconfigured UL TrCH information | Not Present | |
| CHOICE mode | Not Present | |
| DL Transport channel information common for all transport channel | Not Present | |
| Deleted DL TrCH information | Not Present | |
| Added or Reconfigured DL TrCH information | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Uplink DPCH info | |
| - CHOICE mode | FDD | |
| - Scrambling code number | 1 | |
| CHOICE Mode | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | Not Present | |
| Downlink information per radio link list | Not Present | Rel-4 or later |
| Downlink information per radio link list | | R99 |
| -Downlink information for each radio link | | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to same code as used for cell 1 | |

RADIO BEARER RECONFIGURATION (Step 1) (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in TS 34.108 clause 9.1 with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| RRC transaction identifier | 0 | |
| Activation Time | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256 | |
| CHOICE mode | TDD | |
| - Uplink DPCH timeslots and codes | | |
| - First timeslot code list | Assigned by SS | |
| Downlink information common for all radio links | Not Present | |
| Downlink information per radio link list | Not Present | Rel-4 or later |
| Downlink information per radio link list | | R99 |
| -Downlink information for each radio link | | |
| - Primary CCPCH info | Set to same as used for cell 1 | |

RADIO BEARER RECONFIGURATION (Step 2) (FDD and PS Domain)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_DCH from CELL_DCH in PS" as found in TS 34.108 clause 9.1 with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| RRC transaction identifier | 0 | |
| Activation Time | Not Present | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DTCH) | |
| - RB identity | 20 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| UL Transport channel information for all transport channels | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| Added or Reconfigured UL TrCH information | Not Present | |
| CHOICE mode | Not Present | |
| DL Transport channel information common for all transport channel | Not Present | |
| Deleted DL TrCH information | Not Present | |
| Added or Reconfigured DL TrCH information | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Uplink DPCH infoN | |
| - CHOICE mode | FDD | |
| - Scrambling code number | 2 | |
| CHOICE Mode | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | Not Present | |
| Downlink information per radio link list | Not Present | Rel-4 or later |
| Downlink information per radio link list | | R99 |
| -Downlink information for each radio link | | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to same code as used for cell 1 | |

RADIO BEARER RECONFIGURATION (Step 2) (FDD and CS Domain)

The contents of the RADIO BEARER RECONFIGURATION message in this test case are identical to those specified for "Speech in CS" or "Non speech in CS" as found in TS 34.108 clause 9.1 with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| RRC transaction identifier | 0 | |
| Activation Time | Not Present | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| UL Transport channel information for all transport channels | Not Present | |
| Added or Reconfigured UL TrCH information | Not Present | |
| CHOICE mode | Not Present | |
| DL Transport channel information common for all transport channel | Not Present | |
| Deleted DL TrCH information | Not Present | |
| Added or Reconfigured DL TrCH information | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Uplink DPCH info | |
| - CHOICE mode | FDD | |
| - Scrambling code number | 2 | |
| CHOICE Mode | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | Not Present | |
| Downlink information per radio link list | Not Present | Rel-4 or later |
| Downlink information per radio link list | | R99 |
| -Downlink information for each radio link | | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to same code as used for cell 1 | |

RADIO BEARER RECONFIGURATION (Step 2) (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical as "Packet to CELL_DCH from CELL_DCH in PS" found in TS 34.108 clause 9.1 with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| RRC transaction identifier | 0 | |
| Activation Time | Not Present | |
| CHOICE mode | TDD | |
| - Uplink DPCH timeslots and codes<br>- First timeslot code list | A different code combination to that used in step 1. | |
| Downlink information common for all radio links | Not Present | Rel-4 or later |
| Downlink information per radio link list | Not Present | R99 |
| Downlink information per radio link list | | |
| -Downlink information for each radio link<br>- Primary CCPCH info | Set to same as used for cell 1 | |

#### 8.2.2.19.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.2.20 Void

### 8.2.2.21 Void

### 8.2.2.22 Void

### 8.2.2.23 Radio Bearer Reconfiguration from CELL_FACH to CELL_PCH: Success

#### 8.2.2.23.1 Definition

#### 8.2.2.23.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (for FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS 25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> set the variable INVALID_CONFIGURATION to TRUE.

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.2.23.3 Test purpose

To confirm that the UE transmits RADIO BEARER RECONFIGURATION COMPLETE message and enters CELL_PCH state after it received a RADIO BEARER RECONFIGURATION message, which invoke the UE to transit from CELL_FACH to CELL_PCH.

### 8.2.2.23.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The SS transmits a RADIO BEARER RECONFIGURATION message. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC and enters CELL_PCH state. SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 3 | SS | | | The UE is in CELL_PCH state. |
| 4 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in9 of TS 34.108 with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 500 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |

| Information Element | Value/remark |
|---|---|
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 500 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 500 |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 20 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | 500 |
| - RB mapping info | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB stop/continue | Not Present |
| Maximum allowed UL TX power | Not Present |

8.2.2.23.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on uplink DCCH using AM RLC.

## 8.2.2.24 Void

## 8.2.2.25 Void

## 8.2.2.26 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (Incompatible Simultaneous Reconfiguration)

8.2.2.26.1 Definition

8.2.2.26.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RECONFIGURATION message; or

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

…

If the IE "Ciphering mode info" is present and if the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to TRUE, the UE shall:

1> ignore this second attempt to change the ciphering configuration; and

1> set the variable INCOMPATIBLE_SECURITY_RECONFIGURATION to TRUE.

If the IE "Ciphering mode info" is present and if the IE "Reconfiguration" in the variable CIPHERING_STATUS is set to FALSE, the UE shall:

1> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to TRUE;

…

If the variable INCOMPATIBLE_SECURITY_RECONFIGURATION is set to TRUE due to the received reconfiguration message, the UE shall:

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to the cause value "incompatible simultaneous reconfiguration".

1> set the variable INCOMPATIBLE_SECURITY_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2.12a, clause 8.6.3.4.

### 8.2.2.26.3 Test purpose

1. To confirm that the UE ignores the subsequent security reconfiguration information which is contained in the RADIO BEARER RECONFIGURATION message.
2. To confirm that the UE reconfigures according to the SECURITY MODE COMMAND message.
3. To confirm that the UE transmits RADIO BEARER RECONFIGURATION FAILURE message on the uplink DCCH using AM RLC.
4. To confirm that the UE transmits SECURITY MODE COMPLETE message on the uplink DCCH using AM RLC.

### 8.2.2.26.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a SECURITY MODE COMMAND message. SS then transmits a RADIO BEARER RECONFIGURATION message. The UE ignores the RADIO BEARER RECONFIGURATION message and transmits a RADIO BEARER RECONFIGURATION FAILURE message and configures the radio bearers according to the SECURITY MODE COMMAND message. On completion of ciphering reconfiguration, the UE shall transmit a SECURITY MODE COMPLETE message on the DCCH using AM RLC.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SECURITY MODE COMMAND | This message includes IE "Ciphering mode info". |
| 2 | ← | | RADIO BEARER RECONFIGURATION | SS send this message before the activation time in step 1 expires. This message includes IE "Ciphering mode info". |
| 3 | → | | RADIO BEARER RECONFIGURATION FAILURE | The UE ignores the ciphering mode information in step 2. |
| 4 | → | | SECURITY MODE COMPLETE | |

Specific Message Contents

SECURITY MODE COMMAND (Step 1)

If the initial state of the UE is state 6-9, use the message sub-type in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Use one of the supported ciphering algorithms |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256 |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+X (Note 1) |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+4 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+X (Note 1) |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+X (Note 1) |

If the initial state of the UE is state 6-10, use the message sub-type in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Use one of the supported ciphering algorithms |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256 |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+X (Note 1) |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+4 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+X (Note 1) |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+X (Note 1) |
| - RB identity | 20 |
| - RLC sequence number | Current RLC SN+X (Note 1) |

RADIO BEARER RECONFIGURATION (for Step 2)

If the initial state of the UE is state 6-9, use the message sub-type entitled "Speech in CS" or "Non-speech in CS" in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Use one of the supported ciphering algorithms |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256 |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+X (Note 1) |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+4 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+X (Note 1) |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+X (Note 1) |

If the initial state of the UE is state 6-10, use the message sub-type entitled "Packet to CELL_DCH from CELL_DCH in PS" in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Use one of the supported ciphering algorithms |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256 |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+X (Note 1) |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+4 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+X (Note 1) |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+X (Note 1) |
| - RB identity | 20 |
| - RLC sequence number | Current RLC SN+X (Note 1) |

NOTE 1: X is set to 1.

RADIO BEARER RECONFIGURATION FAILURE (for Step 3)

Check that the message received is the same as the message sub-type found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | incompatible simultaneous reconfiguration |

### 8.2.2.26.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER RECONFIGURATION FAILURE message on the DCCH using AM RLC and set the failure cause to "incompatible simultaneous reconfiguration".

After step 3 the UE shall transmit a SECURITY MODE COMPLETE message on the DCCH using AM RLC specified in step 1.

## 8.2.2.27 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH (Frequency modification): Success

### 8.2.2.27.1 Definition

-

### 8.2.2.27.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RECONFIGURATION message;

it shall:

1> perform the physical layer synchronisation procedure as specified in TS 25.214 for FDD and TS 25.224 for TDD;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the UE receives a RADIO BEARER RECONFIGURATION message including the IE "RB information to reconfigure" that only includes the IE "RB identity", the UE shall:

1> handle the message as if IE "RB information to reconfigure" was absent.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

#### Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.2.27.3 Test purpose

1. To confirm that the UE transits from CELL_DCH to CELL_DCH according to the RADIO BEARER RECONFIGURATION message.
2. To confirm that the UE transmits the RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC on a dedicated physical channel in a different frequency.

### 8.2.2.27.4 Method of test

#### Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

UE: CS-DCCH_DTCH_DCH (state 6-9) or PS_DCCH_DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.2.27**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -72 | Off | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -72 | Off | -55 |

Table 8.2.2.27 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.27. For FDD mode, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code which is assigned to P-CPICH of cell 6. For TDD mode, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CCPCH info" set to cell 6 parameters. The UE shall selects cell 6 and reconfigure its radio access bearer after receiving this message, and then remains in CELL_DCH state. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC after complete configuration according to receiving RADIO BEARER RECONFIGURATION message. Upon completion of the procedure, the SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.27. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.2.27. |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6 for FDD mode or IE "Primary CCPCH info" set to cell 6 parameters. |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE sends this message on a dedicated physical channel in cell 6. |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 3) (FDD)

The contents RADIO BEARER RECONFIGURATION message in this test case is identical the message sub-type indicated by "Packet to in PS" or "Speech in CS" or "Non speech from CELL_DCH to CELL_DCH in CS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |

RADIO BEARER RECONFIGURATION (Step 3) (TDD)

The contents RADIO BEARER RECONFIGURATION message in this test case is identical the message sub-type indicated by "Packet to in PS" or "Speech in CS" or "Non speech from CELL_DCH to CELL_DCH in CS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| CHOICE mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - Cell parameters ID | As used for cell 6 |

#### 8.2.2.27.5 Test requirement

After step 3 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 6.

After step 4 the UE shall be in CELL_DCH state in cell 6.

### 8.2.2.28 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_FACH (Transport channel type switching with frequency modification): Success

#### 8.2.2.28.1 Definition

-

#### 8.2.2.28.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RECONFIGURATION message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the UE receives a RADIO BEARER RECONFIGURATION message including the IE "RB information to reconfigure" that only includes the IE "RB identity", the UE shall:

1> handle the message as if IE "RB information to reconfigure" was absent.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> if the received reconfiguration message included the IE "Primary CPICH info" for FDD or the IE"Primary CCPCH info" for TDD, and the UE selects another cell than indicated by this IE:

2> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "Cell reselection";

1> select PRACH according to TS25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> use the transport format set given in system information;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

1> if the contents of the variable C_RNTI is empty:

2> perform a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE on the uplink DCCH using AM RLC, using the new configuration after the state transition.

1> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2.

### 8.2.2.28.3 Test purpose

1. To confirm that the UE transits from CELL_DCH to CELL_FACH according to the RADIO BEARER RECONFIGURATION message.

2. To confirm that the UE transmits RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC on a common physical channel in a different frequency.

### 8.2.2.28.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 in active and cell 6 is inactive.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

**Table 8.2.2.28**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -72 | Off | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -72 | Off | -55 |

Table 8.2.2.28 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in idle mode of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.28. SS requests operator to make an outgoing call. The SS and UE execute procedure P5. Next The SS and the UE execute procedure P9 and then execute procedure P13. For FDD mode, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6. For TDD mode, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CCPCH info" set to cell 6 parameters. On receiving the RADIO BEARER RECONFIGURATION message, the UE shall select cell 6 and transmit a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC after complete configuration according to the RADIO BEARER RECONFIGURATION message. Upon completion of the procedure, the SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.28. SS requests operator to make an outgoing call. |
| 2 | ←→ | | SS executes procedure P5 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ←→ | | SS executes procedure) P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ←→ | | SS executes procedure P13 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.2.28. |
| 6 | ← | | RADIO BEARER RECONFIGURATION | Including IE "Frequency info" and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6 for FDD mode or IE "Primary CCPCH info" set to cell 6 parameters. |
| 7 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE transmits this message on the common physical channel in cell 6. |
| 8 | ←→ | | CALL C.2 | f the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 5) (FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |

RADIO BEARER RECONFIGURATION (Step 5) (TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| CHOICE mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - Cell parameters ID | As used for cell 6 |

#### 8.2.2.28.5 Test requirement

After step 6 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 7 the UE shall be in CELL_FACH state.

### 8.2.2.29 Void

### 8.2.2.30 Void

### 8.2.2.31 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH (Frequency modification): Success

#### 8.2.2.31.1 Definition

-

#### 8.2.2.31.2 Conformance requirement

If the UE receives:

…

-a RADIO BEARER RECONFIGURATION message; or

…

it shall:

…

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only);

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

…

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the UE receives a RADIO BEARER RECONFIGURATION message including the IE "RB information to reconfigure" that only includes the IE "RB identity", the UE shall:

1> handle the message as if IE "RB information to reconfigure" was absent.

NOTE: The RADIO BEARER RECONFIGURATION message always includes the IE "RB information to reconfigure". UTRAN has to include it even if it does not require the reconfiguration of any RB.

If after state transition the UE enters CELL_DCH state, the UE shall, after the state transition:

1> in FDD; or

1> in TDD when "Primary CCPCH Info" is included indicating a new target cell and "New C-RNTI" is not specified:

2> remove any C-RNTI from MAC;

2> clear the variable C_RNTI.

…

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

…

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.2.31.3 Test purpose

1. To confirm that the UE transits from CELL_FACH to CELL_DCH according to the RADIO BEARER RECONFIGURATION message.
2. To confirm that the UE transmits RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC on a dedicated physical channel in a different frequency.

### 8.2.2.31.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.2.2.31**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -60 | Off | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | Off | -60 |

Table 8.2.2.31 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.31. For FDD mode, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6. For TDD mode, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CCPCH info" set to cell 6 parameters. The UE shall select cell 6 and then enter CELL_DCH state according to receiving RADIO BEARER RECONFIGURATION message. Finally the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. Upon completion of the procedure, the SS calls for generic procedure C.3 to check that UE is in CELL_DCH state in cell 6.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.31. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.2.31. |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6 for FDD mode or IE "Primary CCPCH info" set to cell 6 parameters. |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE sends this message on a dedicated physical channel in cell 6. |
| 5 | ←→ | | Call C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state in cell 6, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER RECONFIGURATION (Step 3 for FDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case are identical the message sub-type indicated by "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |

RADIO BEARER RECONFIGURATION (Step 3 for TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case are identical the message sub-type indicated by "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| CHOICE mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - Cell parameters ID | As used for cell 6 |

#### 8.2.2.31.5 Test requirement

After step 3 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 6.

After step 4 the UE shall be in CELL_DCH state in cell 6.

### 8.2.2.32 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_FACH (Frequency modification): Success

#### 8.2.2.32.1 Definition

-

#### 8.2.2.32.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RECONFIGURATION message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the UE receives a RADIO BEARER RECONFIGURATION message including the IE "RB information to reconfigure" that only includes the IE "RB identity", the UE shall:

1> handle the message as if IE "RB information to reconfigure" was absent.

If the UE was in CELL_FACH state upon reception of the reconfiguration message and remains in CELL_FACH state, the UE shall:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency;

2> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selected another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

3> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "cell reselection";

3> when the cell update procedure completed successfully:

4> proceed as below.

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

8.2.2.32.3 Test purpose

1. To confirm that the UE transits from CELL_FACH to CELL_FACH according to the RADIO BEARER RECONFIGURATION message.
2. To confirm that the UE transmits RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC on a common physical channel in a different frequency.

8.2.2.32.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS".

Test Procedure

**Table 8.2.2.32**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -72 | Off | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -72 | Off | -55 |

Table 8.2.2.32 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.32. SS requests operator to make an outgoing call. The SS and UE execute procedure P6. Next The SS and the UE execute procedure P10 and then execute procedure P14. For FDD mode, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6. For TDD mode, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CCPCH info" set to cell 6 parameters. The UE shall select cell 6 and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC after it completes configuration according to the received RADIO BEARER RECONFIGURATION message. Upon completion of the procedure, the SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.32. SS requests operator to make an outgoing call. |
| 2 | ←→ | | SS executes procedure P6 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ←→ | | SS executes procedure) P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ←→ | | SS executes procedure P14 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.2.32. |
| 6 | ← | | RADIO BEARER RECONFIGURATION | Including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6 for FDD mode or IE "Primary CCPCH info" set to cell 6 parameters. |
| 7 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE sends this message on a common physical channel in cell 6. |
| 8 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 6) (FDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case are identical the message sub-type indicated by "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |

RADIO BEARER RECONFIGURATION (Step 6) (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case are identical the message sub-type indicated by "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| CHOICE mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - Cell parameters ID | As used for cell 6 |

#### 8.2.2.32.5 Test requirement

After step 6 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 6.

After step 7 the UE shall be in CELL_FACH state of cell 6.

### 8.2.2.33 Void

### 8.2.2.34 Radio Bearer Reconfiguration for transition from CELL_FACH to URA_PCH (Frequency modification): Success

#### 8.2.2.34.1 Definition

#### 8.2.2.34.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RECONFIGURATION message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the UE receives a RADIO BEARER RECONFIGURATION message including the IE "RB information to reconfigure" that only includes the IE "RB identity", the UE shall:

1> handle the message as if IE "RB information to reconfigure" was absent.

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE on the uplink DCCH using AM RLC, using the old configuration before the state transition.

If after state transition the UE enters URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> keep the configuration existing before the reception of the message and transmit a failure response message as specified in TS25.331subclause 8.2.2.9

1> if the UE enters URA_PCH state, and after cell selection the criteria for URA update caused by "URA reselection" according to subclause TS25.331 8.3.1 is fulfilled:

2> initiate a URA update procedure according to TS25.331 subclause 8.3.1 using the cause "URA reselection";

2> when the URA update procedure is successfully completed:

3> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.2.34.3 Test purpose

1. To confirm that the UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_FACH to URA_PCH according to the RADIO BEARER RECONFIGURATION message.
3. To confirm that the UE selects a common physical channel in a different frequency.

### 8.2.2.34.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 are active

UE: Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

**Table 8.2.2.34**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -72 | Off | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -72 | Off | -55 |

Table 8.2.2.34 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.34. SS requests operator to make an outgoing call. The SS and UE execute procedure P6. Next The SS and the UE execute procedure P10 and then execute procedure P14. For FDD mode, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6. For TDD mode, the SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CCPCH info" set to cell 6 parameters. The UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC and enter URA_PCH state of cell 6. Upon completion of the procedure, the SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is in idle mode and camped on cell 1. The contents of System Information Block type 11 message are different from the default settings and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.34. SS requests operator to make an outgoing call. |
| 2 | ←→ | | SS executes procedure P6 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ←→ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ←→ | | SS executes procedure P14 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.2.34. |
| 6 | ← | | RADIO BEARER RECONFIGURATION | Including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6 for FDD mode or IE "Primary CCPCH info" set to cell 6 parameters. |
| 7 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE transmit this message on the common physical channel. n cell 1. |
| 8 | | | | The SS waits for 5 s. |
| 9 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 6) (FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info | |
| CHOICE mode | FDD |
| - UARFCN uplink (Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink (Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 6 |

RADIO BEARER RECONFIGURATION (Step 6) (TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info | |
| CHOICE mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - Cell parameters ID | As used for cell 6 |

#### 8.2.2.34.5 Test requirement

After step 6 the UE shall transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 1.

After step 8 the UE shall be in URA_PCH state in cell 6.

### 8.2.2.35 Radio Bearer Reconfiguration from CELL_DCH to CELL_FACH: Successful channel switching with multiple PS RABs established

#### 8.2.2.35.1 Definition

#### 8.2.2.35.2 Conformance requirement

If the IE "RB information to release" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity". The UE shall:

1> if the IE "RB identity" is set to a value less than 4:

2> set the variable INVALID_CONFIGURATION to TRUE.

1> if the IE "RB identity" refers to a signalling radio bearer:

2> release the RLC entity for the signalling radio bearer;

2> delete the information about the signalling radio bearer from the variable ESTABLISHED_RABS.

1> if the IE "RB identity" refers to a radio bearer:

2> release the PDCP and RLC entities for that radio bearer;

2> indicate release of the RAB subflow associated with the radio bearer to upper layers;

2> delete the information about the radio bearer from the variable ESTABLISHED_RABS;

2> when all radio bearers belonging to the same radio access bearer have been released:

3> indicate release of the radio access bearer to upper layers providing the "CN domain identity" together with the "RAB identity" stored in the variable ESTABLISHED_RABS;

3> delete all information about the radio access bearer from the variable ESTABLISHED_RABS.

…

If the IE "RB mapping info" is included, the UE shall:

1> for each multiplexing option of the RB:

2> if a transport channel that would not exist as a result of the message (i.e. removed in the same message in IE "Deleted DL TrCH information" and IE "Deleted UL TrCH information") is referred to:

3> set the variable INVALID_CONFIGURATION to TRUE.

2> if a multiplexing option that maps a logical channel corresponding to a TM-RLC entity onto RACH, FACH or DSCH is included:

3> set the variable INVALID_CONFIGURATION to TRUE.

2> if the multiplexing option realises the radio bearer on the uplink (resp. on the downlink) using two logical channels with different values of the IE "Uplink transport channel type" (resp. of the IE "Downlink transport channel type"):

3> set the variable INVALID_CONFIGURATION to TRUE.

2> if that RB is using TM and the IE "Segmentation indication" is set to TRUE and, based on the multiplexing configuration resulting from this message, the logical channel corresponding to it is mapped onto the same transport channel as another logical channel:

3> set the variable INVALID_CONFIGURATION to TRUE.

2> if the transport channel considered in that multiplexing option is different from RACH and if that RB is using AM and the set of RLC sizes applicable to the logical channel transferring data PDUs has more than one element:

3> set the variable INVALID_CONFIGURATION to TRUE.

2> if that RB is using UM or TM and the multiplexing option realises it using two logical channels:

3> set the variable INVALID_CONFIGURATION to TRUE.

2> for each logical channel in that multiplexing option:

3> if the value of the IE "RLC size list" is set to "Explicit list":

4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is included in the same message, and the value (index) of any IE "RLC size index" in the IE "Explicit list" does not correspond to an "RLC size" in the IE transport format set of that transport channel given in the message; or

4> if the transport channel this logical channel is mapped on in this multiplexing option is different from RACH, and if a "Transport format set" for that transport channel is not included in the same message, and the value (index) of any IE "RLC size index" in the IE "Explicit list" does not correspond to an "RLC size" in the stored transport format set of that transport channel; or

4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is included in the same message, and the value of any IE "Logical channel list" in the transport format set is not set to "Configured"; or

4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is not included in the same message, and the value of any IE "Logical channel list" in the stored transport format set of that transport channel is not set to "Configured":

5> set the variable INVALID_CONFIGURATION to TRUE.

3> if the value of the IE "RLC size list" is set to "All":

4> if the transport channel this logical channel is mapped on is RACH; or

4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is included in the same message, and the value of any IE "Logical channel list" in the transport format set is not set to "Configured"; or

4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is not included in the same message, and the value of any IE "Logical channel list" in the stored transport format set of that transport channel is not set to "Configured":

5> set the variable INVALID_CONFIGURATION to TRUE.

3> if the value of the IE "RLC size list" is set to "Configured":

4> if the transport channel this logical channel is mapped on is RACH; or

4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is included in the same message, and for none of the RLC sizes defined for that transport channel in the "Transport format set", the "Logical Channel List" is set to "All" or given as an "Explicit List" which contains this logical channel; or

4> if a "Transport format set" for the transport channel this logical channel is mapped on in this multiplexing option is not included in the same message, and for none of the RLC sizes defined in the transport format set stored for that transport channel, the "Logical Channel List" is set to "All" or given as an "Explicit List" which contains this logical channel:

5> set the variable INVALID_CONFIGURATION to TRUE.

1> if, as a result of the message this IE is included in, several radio bearers can be mapped onto the same transport channel, and the IE "Logical Channel Identity" was not included in the RB mapping info of any of those radio bearers for a multiplexing option on that transport channel or the same "Logical Channel Identity" was used more than once in the RB mapping info of those radio bearers for the multiplexing options on that transport channel:

2> set the variable INVALID_CONFIGURATION to TRUE.

1> delete all previously stored multiplexing options for that radio bearer;

1> store each new multiplexing option for that radio bearer;

1> if the IE "Uplink transport channel type" is set to the value "RACH":

2> refer the IE "RLC size index" to the RACH Transport Format Set of the first PRACH received in the IE "PRACH system information list" received in System Information Block type 5 or System Information Block type 6.

1> determine the sets of RLC sizes that apply to the logical channels used by that RB, based on the IEs "RLC size list" and/or the IEs "Logical Channel List" included in the applicable "Transport format set" (either the ones received in the same message or the ones stored if none were received); and

1> in case the selected multiplexing option is a multiplexing option on RACH:

2> ignore the RLC size indexes that do not correspond to any RLC size within the Transport Format Set stored for RACH.

1> if RACH is the transport channel to be used on the uplink, if that RB has a multiplexing option on RACH and if it is using AM:

2> apply the largest size amongst the ones derived according to the previous bullet for the RLC size (or RLC sizes in case the RB is realised using two logical channels) for the corresponding RLC entity.

NOTE: The IE "RB mapping info" is only included in IE "Predefined RB configurations" in system information when used for Inter-RAT handover to UTRAN and there is no AM RLC size change involved in this case.

1> if that RB is using AM and the RLC size applicable to the logical channel transporting data PDUs is different from the one derived from the previously stored configuration:

2> re-establish the corresponding RLC entity;

2> configure the corresponding RLC entity with the new RLC size;

2> for each AM RLC radio bearer in the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" in the variable ESTABLISHED_RABS whose RLC size is changed; and

2> for each AM RLC signalling radio bearer in the CN domain as indicated in the IE "CN domain identity" in the variable LATEST_CONFIGURED_CN_DOMAIN whose RLC size is changed:

3> if the IE "Status" in the variable CIPHERING_STATUS of this CN domain is set to "Started":

4> if this IE was included in CELL UPDATE CONFIRM:

5> set the HFN values for the corresponding RLC entity equal to the value of the IE "START" included in the latest transmitted CELL UPDATE message for this CN domain.

4> if this IE was included in a reconfiguration message:

5> set the HFN values for the corresponding RLC entity equal to the value of the IE "START" that will be included in the reconfiguration complete message for this CN domain.

1> if that RB is using UM:

2> indicate the largest applicable RLC size to the corresponding RLC entity.

1> configure MAC multiplexing according to the selected multiplexing option (MAC multiplexing shall only be configured for a logical channel if the transport channel it is mapped on according to the selected multiplexing option is the same as the transport channel another logical channel is mapped on according to the multiplexing option selected for it);

1> configure the MAC with the logical channel priorities according to selected multiplexing option;

1> configure the MAC with the set of applicable RLC Sizes for each of the logical channels used for that RB;

1> if there is no multiplexing option applicable for the transport channels to be used in the RRC state indicated in the IE "RRC State Indicator" included in the received message:

2> set the variable INVALID_CONFIGURATION to TRUE.

1> if there is more than one multiplexing option applicable for the transport channels to be used in the RRC state indicated in the IE "RRC State Indicator" included in the received message:

2> set the variable INVALID_CONFIGURATION to TRUE.

In case IE "RLC info" includes IE "Downlink RLC mode " ("DL RLC logical channel info" is mandatory present) but IE "Number of downlink RLC logical channels" is absent in the corresponding IE "RB mapping info", the parameter values are exactly the same as for the corresponding UL logical channels. In case two multiplexing options are specified for the UL, the first options shall be used as default for the DL. As regards the IE "Channel type", the following rule should be applied to derive the DL channel type from the UL channel included in the IE:

| Channel used in UL | DL channel type implied by "same as" |
|---|---|
| DCH | DCH |
| RACH | FACH |
| USCH | DSCH |

If ciphering is applied, UTRAN should not map Transparent Mode RBs of different CN domains on the same transport channel. In such case the UE behaviour is not specified.

Reference

3GPP TS 25.331 clause 8.6.4.6, 8.6.4.8.

### 8.2.2.35.3 Test purpose

To confirm that the UE transit from CELL_DCH to CELL_FACH state according to a RADIO BEARER RECONFIGURATION message when having two radio access bearers established.

To confirm that the UE transit from CELL_FACH to CELL_DCH state according to a RADIO BEARER RECONFIGURATION message when having two radio access bearers established.

To confirm that the UE release two radio access bearers included in a single RADIO BEARER RELEASE message.

### 8.2.2.35.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH + DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

### Related ICS/IXIT statements

| | |
|---|---|
| Support of PS service | Yes/No |
| Secondary PDP context activation procedure | Yes/No |

### Test Procedure

The UE is in CELL_DCH state of cell 1. The UE initiates the activation of a second PDP context, upon which the SS establishes a PS domain RAB and confirms the PDP context activation. The Radio Bearer Configuration will be based on the reference configuration in 34.108 section 6.10.2.4.1.57.( Interactive or background / UL:64 DL:64 kbps / PS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH).

Next, the SS transmits a RADIO BEARER RECONFIGURATION message to move the UE to CELL_FACH state. The UE shall apply the new configuration and return the RADIO BEARER RECONFIGURATION COMPLETE message.

The SS will then transmit a RADIO BEARER RECONFIGURATION message to move the UE to CELL_DCH state. The UE shall apply the new configuration and return the RADIO BEARER RECONFIGURATION COMPLETE message.

A DEACTIVATE PDP CONTEXT REQUEST message is then sent by the SS to request the UE to deactivate both PDP contexts. The UE shall reply with a DEACTIVATE PDP CONTEXT ACCEPT message. After this procedure, the SS transmits a RADIO BEARER RELEASE. The UE shall release both radio bearers and transmit a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_DCH state of cell 1. |
| 2 | → | | UPLINK DIRECT TRANSFER (ACTIVATE SECONDARY PDP CONTEXT REQUEST) | SM |
| 3 | ← | | RADIO BEARER SETUP | Establishment of second PS domain RAB |
| 4 | → | | RADIO BEARER SETUP COMPLETE | |
| 5 | ← | | DOWNLINK DIRECT TRANSFER (ACTIVATE SECONDARY PDP CONTEXT ACCEPT) | SM |
| 6 | ← | | RADIO BEARER RECONFIGURATION | To move the UE to CELL_FACH. RB reconfiguration procedure is used to:<br>▪ Modify RLC timer values<br>The message includes a C-RNTI and the Primary Scrambling code of cell 1. |
| 7 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 8 | ← | | RADIO BEARER RECONFIGURATION | To move the UE to CELL_DCH. RB reconfiguration procedure is used to:<br>▪ Re- specify the DCH configuration (don't re- use stored multiplexing option)<br>▪ Modify RLC timer values |
| 9 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 10 | ← | | DEACTIVATE PDP CONTEXT REQUEST | Request a deactivation both PDP contexts |
| 11 | → | | DEACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context deactivation |
| 12 | ← | | RADIO BEARER RELEASE | Release of two PS domain RABs |
| 13 | → | | RADIO BEARER RELEASE COMPLETE | |

For Steps 2, 3, 4, 5 see also Test Case 12.9.13 "Service Request / RAB re-establishment / UE initiated / multiple PDP contexts" for additional details.

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 3)

The contents of RADIO BEARER SETUP message in this test case are identical the message sub-type indicated by "Packet to CELL_DCH from CELL_DCH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | |
| - RAB identity | 0000 0110B or a value that is different from the one used for setting up the primary PDP Context. The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| RB information to setup | |
| - RB identity | 22 |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 8 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| RB information to be affected | |
| - RB identity | 20 |
| - RB mapping info | |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | Not Present |
| - Logical channel identity | 7 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |

| | |
|---|---|
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |

RADIO BEARER RECONFIGURATION (Step 6) (FDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case are identical the message sub-type indicated by "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |
| RB information to reconfigure list | |
| - RB information to reconfigure | |
| - RB identity | 20 |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 700 |
| - Max_RST | 6 |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | Not Present |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | FALSE |
| - Timer_STATUS_periodic | Not Present |
| - RB information to reconfigure | |
| - RB identity | 22 |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 700 |
| - Max_RST | 6 |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | Not Present |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | FALSE |
| - Timer_STATUS_periodic | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 1 |

RADIO BEARER RECONFIGURATION (Step 6) (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case are identical the message sub-type indicated by "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |
| RB information to reconfigure list | |
| - RB information to reconfigure | |
| - RB identity | 20 |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 700 |
| - Max_RST | 6 |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | Not Present |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | FALSE |
| - Timer_STATUS_periodic | Not Present |
| - RB information to reconfigure | |
| - RB identity | 22 |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 700 |
| - Max_RST | 6 |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | Not Present |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | FALSE |
| - Timer_STATUS_periodic | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CCPCH info | Set to same as used for cell 1 |

RADIO BEARER RECONFIGURATION (Step 8) (FDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case are identical the message sub-type indicated by "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | |
| - RB identity | 20 |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 6 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB information to reconfigure | |
| - RB identity | 22 |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |

| Information Element | Value/remark |
|---|---|
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 8 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 6 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 1 |

RADIO BEARER RECONFIGURATION (Step 8) (TDD)

The contents of RADIO BEARER RECONFIGURATION message in this test case are identical the message sub-type indicated by "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | |
| - RB identity | 20 |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 6 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB information to reconfigure | |
| - RB identity | 22 |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |

| Information Element | Value/remark |
|---|---|
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 8 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 6 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CCPCH info | Set to same as used for cell 1 |

RADIO BEARER RELEASE (Step 12)

The contents of RADIO BEARER RELEASE message in this test case are identical the message sub-type indicated by "Packet to CELL_DCH from CELL_DCH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RB information to release | |
| - RB identity | 20 |
| RB information to release | |
| - RB identity | 22 |

#### 8.2.2.35.5 Test requirement

After step 3 the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

After step 6 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 7 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 12 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.2.36 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of HS-DSCH reception)

#### 8.2.2.36.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

8.2.2.36.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";

- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration in FDD or 1.28 Mcps TDD caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for an HS-DSCH related reconfiguration in 3.84 Mcps TDD or 7.68 Mcps TDD caused by the received message:

3> start using, at activation time T, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1

### 8.2.2.36.3 Test purpose

To confirm that the UE starts and stops receiving the HS-DSCH according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.36.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established. The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to stop the reception of HS-DSCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to start the reception of HS-DSCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Stop of HS-DSCH reception |
| 2 | | | | At the activation time, SS stops HS-DSCH transmission to the UE. |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 4 | ← | | RADIO BEARER RECONFIGURATION | Start of HS-DSCH reception |
| 5 | | | | At the activation time, SS resumes HS-DSCH transmission to the UE. |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (step 1)(FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | Not Present |
| - MAC-hs queue to delete list | |
| - MAC-hs queue Id | 0 |
| - DCH quality target | Not Present |
| - Downlink transport channel type | |
| - DL Transport channel identity | 6 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |

| Information Element | Value/remark |
|---|---|
| - CRC size | Reference to clause 6.10 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |

RADIO BEARER RECONFIGURATION (step 1) ( 1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | Not Present |
| - MAC-hs queue to delete list | |
| - MAC-hs queue Id | 0 |
| - DCH quality target | Not Present |
| - Downlink transport channel type | |
| - DL Transport channel identity | 6 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to clause 6.11 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.11 Parameter Set |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.11 Parameter Set |
| - Type of channel coding | Reference to clause 6.11 Parameter Set |
| - Coding Rate | Reference to clause 6.11 Parameter Set |
| - Rate matching attribute | Reference to clause 6.11 Parameter Set |
| - CRC size | Reference to clause 6.11 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -2.0 |

RADIO BEARER RECONFIGURATION (step 1) ( 3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | Not Present |
| - MAC-hs queue to delete list | |
| - MAC-hs queue Id | 0 |
| - DCH quality target | Not Present |
| - Downlink transport channel type | |
| - DL Transport channel identity | 6 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -2.0 |

RADIO BEARER RECONFIGURATION (step 1) ( 7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | Not Present |
| - MAC-hs queue to delete list | |
| - MAC-hs queue Id | 0 |
| - DCH quality target | Not Present |
| - Downlink transport channel type | |
| - DL Transport channel identity | 6 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to clause 6.11.6 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.11.6 Parameter Set |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.11.6 Parameter Set |
| - Type of channel coding | Reference to clause 6.11.6 Parameter Set |
| - Coding Rate | Reference to clause 6.11.6 Parameter Set |
| - Rate matching attribute | Reference to clause 6.11.6 Parameter Set |
| - CRC size | Reference to clause 6.11.6 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -2.0 |

RADIO BEARER RECONFIGURATION (step 4)(FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 6 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |
| Downlink information for each radio link | |
| - Serving HS-DSCH radio link indicator | TRUE |

RADIO BEARER RECONFIGURATION (step 4) ( 1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 6 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |

RADIO BEARER RECONFIGURATION (step 4) (3.84 Mcps TDD and 7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 6 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |
| Downlink information for each radio link | |
| - Serving HS-DSCH radio link indicator | TRUE |

### 8.2.2.36.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 5, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

## 8.2.2.36a Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of HS-DSCH reception)

### 8.2.2.36a.1 Definition and applicability

All UEs which support TDD and HS-PDSCH.

### 8.2.2.36a.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration in FDD or 1.28 Mcps TDD caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for an HS-DSCH related reconfiguration in 3.84 Mcps TDD or 7.68 Mcps TDD caused by the received message:

3> start using, at activation time T, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1

### 8.2.2.36a.3 Test purpose

To confirm that the UE starts and stops receiving the HS-DSCH on the secondary carrier according to the received RADIO BEARER RECONFIGURATION message.

To confirm the UE recognizes correctly the position of UpPCH indicated by the network and completes the access procedure according to the configuration sent by the network.

### 8.2.2.36a.4 Method of test

Initial Condition

System Simulator: 1 cell configures three carriers, one primary carrier with two secondary carriers.

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17 on the secondary carrier) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state on the secondary carrier and has a radio bearer mapped on HS-DSCH established. The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to stop the reception of HS-DSCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to start the reception of HS-DSCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Stop of HS-DSCH reception |
| 2 | | | | At the activation time, SS stops HS-DSCH transmission to the UE. |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 4 | ← | | RADIO BEARER RECONFIGURATION | Start of HS-DSCH reception |
| 5 | | | | At the activation time, SS resumes HS-DSCH transmission to the UE. |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (step 1) ( 1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | Not Present |
| - MAC-hs queue to delete list | |
| - MAC-hs queue Id | 0 |
| - DCH quality target | Not Present |
| - Downlink transport channel type | |
| - DL Transport channel identity | 6 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to clause 6.11 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.11 Parameter Set |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.11 Parameter Set |
| - Type of channel coding | Reference to clause 6.11 Parameter Set |
| - Coding Rate | Reference to clause 6.11 Parameter Set |
| - Rate matching attribute | Reference to clause 6.11 Parameter Set |
| - CRC size | Reference to clause 6.11 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -2.0 |

RADIO BEARER RECONFIGURATION (step 4) ( 1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 6 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |

8.2.2.36a.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 5, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

## 8.2.2.37 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_FACH and from CELL_FACH to CELL_DCH: Success (start and stop of HS-DSCH reception)

### 8.2.2.37.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

### 8.2.2.37.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If after state transition the UE leaves CELL_DCH state, the UE shall, after the state transition:

1> clear any stored IE “Downlink HS-PDSCH information”;

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25

### 8.2.2.37.3 Test purpose

To confirm that the UE transits to CELL_FACH state from CELL_DCH state and stops receiving the HS-DSCH according to the received RADIO BEARER RECONFIGURATION message.

To confirm that the UE transits to CELL_DCH state from CELL_FACH state and starts receiving the HS-DSCH according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.37.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH_FACH (state 6-8) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_FACH state and SS establishes a radio bearer mapped on HS-DSCH by transmitting a RADIO BEARER SETUP message. The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established. The SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it stops HS-DSCH reception, moves to CELL_FACH state and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

Then, SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it moves to CELL_DCH state, resumes HS-DSCH reception and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | |
| 4 | ← | | RADIO BEARER RECONFIGURATION | Stop of HS-DSCH reception and transit to CELL_FACH state, |
| 5 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 6 | ← | | RADIO BEARER RECONFIGURATION | Start of HS-DSCH reception and transit to CELL_DCH state |
| 7 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 1)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_FACH in PS" in 34.108.

RADIO BEARER RECONFIGURATION (Step 4)(FDD)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |

| Information Element | Value/remark |
|---|---|
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |

| Information Element | Value/remark |
|---|---|
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |

| Information Element | Value/remark |
|---|---|
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 1 |

RADIO BEARER RECONFIGURATION (Step 4) ( 1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |

| Information Element | Value/remark |
|---|---|
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |

| Information Element | Value/remark |
|---|---|
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Cell parameters ID | Set to the Cell parameters ID for cell 6 |

RADIO BEARER RECONFIGURATION (Step 4) ( 3.84 Mcps TDD and 7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |

| Information Element | Value/remark |
|---|---|
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |

| Information Element | Value/remark |
|---|---|
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 1 |

RADIO BEARER RECONFIGURATION (Step 6)(FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| - RB stop/continue | Not Present |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Downlink HS-PDSCH Information | |
| - HS-SCCH Info | |
| - CHOICE mode | FDD |
| - DL Scrambling Code | Not Present |
| - HS-SCCH Channelisation Code Information | |
| - HS-SCCH Channelisation Code | 7 |

| Information Element | Value/remark |
|---|---|
| - Measurement Feedback Info | |
| - CHOICE mode | FDD |
| - POhsdsch | 6 dB |
| - CQI Feedback cycle, k | 4 ms |
| - CQI repetition factor | 1 |
| - $\Delta_{CQI}$ | -3 dB |
| - CHOICE mode | FDD (no data) |
| Downlink information for each radio link | |
| - Serving HS-DSCH radio link indicator | TRUE |

RADIO BEARER RECONFIGURATION (Step 6) ( 1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| - RB stop/continue | Not Present |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

RADIO BEARER RECONFIGURATION (Step 6) (3.84 Mcps TDD and 7.68 Mcps)

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |

| Information Element | Value/remark |
|---|---|
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| - RB stop/continue | Not Present |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Downlink information for each radio link | |
| - Serving HS-DSCH radio link indicator | TRUE |

#### 8.2.2.37.5 Test requirements

After step 4, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 6, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

### 8.2.2.38 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (with active HS-DSCH reception)

#### 8.2.2.38.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.2.2.38.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.6.3.1, 8.2.2.3, 8.5.25

### 8.2.2.38.3 Test purpose

To confirm that the UE reconfigures the radio bearer while being mapped to HS-DSCH according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.38.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established. The SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it reconfigures the radio bearer and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)(FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| UL Transport channel information for all transport channels | Not present |
| Added or Reconfigured UL TrCH information | Not present |
| DL Transport channel information common for all transport channel | Not present |
| Added or Reconfigured DL TrCH information | Not present |
| CHOICE channel requirement | Not present |
| Downlink information common for all radio links | Not present |
| Downlink information for each radio link | |
| - Serving HS-DSCH radio link indicator | TRUE |

RADIO BEARER RECONFIGURATION (Step 1) ( 1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| UL Transport channel information for all transport channels | Not present |
| Added or Reconfigured UL TrCH information | Not present |
| DL Transport channel information common for all transport channel | Not present |
| Added or Reconfigured DL TrCH information | Not present |
| CHOICE channel requirement | Not present |
| Downlink information common for all radio links | Not present |

#### 8.2.2.38.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

### 8.2.2.39 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialised hard handover to another frequency, start and stop of HS-DSCH reception)

#### 8.2.2.39.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.2.2.39.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If IE "Timing indication" has the value "initialise", UE shall:

1> execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.3.5.1.2, 8.5.25, 8.6.3.1

### 8.2.2.39.3 Test purpose

To confirm that the UE starts and stops receiving the HS-DSCH in conjunction with a interfrequency hard handover without prior measurement on the target frequency according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.39.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 and 6 are active.

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.2.2.39**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency ($f_1$) | | High Range Test Frequency ($f_2$) | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -70 | -70 | -60 |

Table 8.2.2.39 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The SS has configured its downlink transmission power settings according to columns "T0" in table 8.2.2.39. SS initiates P25 to make the UE move to state 6-17 as specified in TS34.108 clause7.4. The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established in cell 1. The SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message instructing the UE to perform a timing re-initialised interfrequency hard handover to cell 6 and stop the reception of HS-DSCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC in cell 6.

The SS switches its downlink transmission power settings to columns "T0" and transmits a RADIO BEARER RECONFIGURATION message instructing the UE to perform an interfrequency hard handover to cell 1 and start the reception of HS-DSCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC in cell 1.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step 0) |
| 0a | SS | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.2.39. |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Hard handover, stop of HS-DSCH reception |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE sends this message on a dedicated physical channel in cell 6. |
| 2a | SS | | | The SS switches its downlink transmission power settings to columns "T0" in table 8.2.2.39. |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Hard handover, start of HS-DSCH reception |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE sends this message on a dedicated physical channel in cell 1. |
| | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

RADIO BEARER RECONFIGURATION (step 1) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark | Version |
|---|---|---|
| RB information to reconfigure list | | |
| - RB information to reconfigure | (high-speed AM DTCH) | |
| - RB identity | 25 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - CHOICE SDU discard mode | No Discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 500 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 200 | |
| - Timer_poll | 200 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Windows | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | | |
| - Information for each multiplexing option | 1 RBMuxOption | |
| - RLC logical channel mapping indicator | Not Present | |
| - Number of uplink RLC logical channels | 1 | |
| - Uplink transport channel type | DCH | |
| - UL Transport channel identity | 1 | |
| - Logical channel identity | Not Present | |
| - CHOICE RLC size list | Configured | |
| - MAC logical channel priority | 8 | |
| - Downlink RLC logical channel info | | |
| - Number of downlink RLC logical channels | 1 | |
| - Downlink transport channel type | DCH | |
| - DL DCH Transport channel identity | 6 | |
| - Logical channel identity | Not Present | |
| - RB stop/continue | Not Present | |
| Deleted DL TrCH information | | |
| - Downlink transport channel type | HS-DSCH | |
| - DL HS-DSCH MAC-d flow identity | 0 | |
| Frequency info | | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the | |

| Information Element | Value/remark | Version |
|---|---|---|
| | operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to the scrambling code for cell 6 | |
| - Cell ID | Not present | |
| - Serving HS-DSCH radio link indicator | FALSE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

RADIO BEARER RECONFIGURATION (step 1) (1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark | Version |
|---|---|---|
| RB information to reconfigure list | | |
| - RB information to reconfigure | (high-speed AM DTCH) | |
| - RB identity | 25 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - CHOICE SDU discard mode | No Discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Timer_RST | 500 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 200 | |
| - Timer_poll | 200 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Windows | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | | |
| - Information for each multiplexing option | 1 RBMuxOption | |
| - RLC logical channel mapping indicator | Not Present | |
| - Number of uplink RLC logical channels | 1 | |
| - Uplink transport channel type | DCH | |
| - UL Transport channel identity | 1 | |
| - Logical channel identity | Not Present | |
| - CHOICE RLC size list | Configured | |
| - MAC logical channel priority | 8 | |
| - Downlink RLC logical channel info | | |
| - Number of downlink RLC logical channels | 1 | |
| - Downlink transport channel type | DCH | |
| - DL DCH Transport channel identity | 6 | |
| - Logical channel identity | Not Present | |
| - RB stop/continue | Not Present | |
| Deleted DL TrCH information | | |
| - Downlink transport channel type | HS-DSCH | |
| - DL HS-DSCH MAC-d flow identity | 0 | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - CHOICE mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Set to Cell parameters ID for cell 6 | |
| - SCTD indicator | FALSE | |

RADIO BEARER RECONFIGURATION (step 3) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (high-speed AM DTCH) | |
| - RB identity | 25 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - CHOICE SDU discard mode | No Discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 500 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 100 | |
| - Timer_poll | 100 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Windows | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 768 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 100 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| - RB stop/continue | Not Present | |
| Deleted DL TrCH information | | |
| - Downlink transport channel type | DCH | |
| - Transport channel identity | 6 | |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Frequency info | | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 1 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |

| Information Element | Value/remark | Version |
|---|---|---|
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to the scrambling code for cell 1 | |
| - Cell ID | Not present | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

RADIO BEARER RECONFIGURATION (step 3) (1.28Mcp TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (high-speed AM DTCH) | |
| - RB identity | 25 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - CHOICE SDU discard mode | No Discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 500 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 100 | |
| - Timer_poll | 100 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Windows | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter | |

| Information Element | Value/remark | Version |
|---|---|---|
| | Set | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 768 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 100 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| - RB stop/continue | Not Present | |
| Deleted DL TrCH information | | |
| - Downlink transport channel type | DCH | |
| - Transport channel identity | 6 | |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 1 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | R99 and Rel-4 only |
| - Default DPCH Offset Value | 0 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - CHOICE mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Reference clause 6.1.4 Default settings for cell 1 | |
| - SCTD indicator | FALSE | |

#### 8.2.2.39.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message in cell 6.

After step 3, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message in cell 1.

### 8.2.2.40 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_FACH and from CELL_FACH to CELL_DCH: Success (frequency modification, start and stop of HS-DSCH reception)

#### 8.2.2.40.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

8.2.2.40.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if "DPCH frame offset" is included for one or more RLs in the active set:

2> use its value to determine the beginning of the DPCH frame in accordance with the following:

3> if the received IE "DPCH frame offset" is across the value range border compared to the DPCH frame offset currently used by the UE:

4> consider it to be a request to adjust the timing with 256 chips across the frame border (e.g. if the UE receives value 0 while the value currently used is 38144 consider this as a request to adjust the timing with +256 chips).

3> if after taking into account value range borders, the received IE "DPCH frame offset" corresponds to a request to adjust the timing with a step exceeding 256 chips:

4> set the variable INVALID_CONFIGURATION to TRUE.

3> and the procedure ends.

2> adjust the radio link timing accordingly.

…

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1

8.2.2.40.3 Test purpose

To confirm that the UE transits to CELL_FACH state from CELL_DCH state in another cell and frequency and stops receiving the HS-DSCH according to the received RADIO BEARER RECONFIGURATION message.

To confirm that the UE transits to CELL_DCH state from CELL_FACH state in another cell and frequency and starts receiving the HS-DSCH according to the received RADIO BEARER RECONFIGURATION message.

8.2.2.40.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 and 6 are active.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.2.2.40**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency ($f_1$) | | High Range Test Frequency ($f_2$) | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -65 | Off | -60 |
| PCCPCH (1.28Mcps TDD) | dBM | -60 | -65 | Off | -60 |

Table 8.2.2.40 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

SS initiates P25 to make the UE move to state 6-17 as specified in TS34.108 clause7.4. The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established in cell 1. The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.2.40.

The SS then applies the power levels according to “T1” in table 8.2.2.40 and transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it stops HS-DSCH reception, moves to CELL_FACH state in cell 6 and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

Then, SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it moves to CELL_DCH state in cell 1, resumes HS-DSCH reception and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step 0) |
| 1 | SS | | | The SS applies the power settings according to “T1” in table 8.2.2.40. |
| 2 | ← | | RADIO BEARER RECONFIGURATION | Stop of HS-DSCH reception and transit to CELL_FACH state in cell 6, |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 4 | ← | | RADIO BEARER RECONFIGURATION | Start of HS-DSCH reception and transit to CELL_DCH state in cell 1 |
| 5 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

RADIO BEARER RECONFIGURATION (Step 2) (FDD)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |

| Information Element | Value/remark |
|---|---|
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |

| Information Element | Value/remark |
|---|---|
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | Set to the frequency of cell 6 |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 6 |

RADIO BEARER RECONFIGURATION (Step 2) (1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |

| Information Element | Value/remark |
|---|---|
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |

| Information Element | Value/remark |
|---|---|
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | |
| - Choice mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Choice mode | TDD |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - Choice TDD Option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Same Cell parameters ID as used for cell 6 |

| Information Element | Value/remark |
|---|---|
| - SCTD indicator | FALSE |

RADIO BEARER RECONFIGURATION (Step 4) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Vesrion |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |

| Information Element | Value/remark | Vesrion |
|---|---|---|
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 400 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 150 | |
| - Timer_poll | 150 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (high-speed AM DTCH) | |
| - RB identity | 25 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - CHOICE SDU discard mode | No Discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 500 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 100 | |
| - Timer_poll | 100 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Windows | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |
| - In-sequence delivery | TRUE | |

| Information Element | Value/remark | Vesrion |
|---|---|---|
| - Receiving window size | 768 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 100 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| - RB stop/continue | Not Present | |
| UL Transport channel information for all transport channels | Not Present | |
| Added or Reconfigured UL TrCH information | Not Present | |
| DL Transport channel information common for all transport channel | Not Present | |
| Added or Reconfigured DL TrCH information | | |
| - Downlink transport channel type | HS-DSCH | |
| - DL Transport channel identity | Not Present | |
| - CHOICE DL parameters | HS-DSCH | |
| - HARQ Info | | |
| - Number of Processes | 6 | |
| - CHOICE *Memory Partitioning* | Implicit | |
| - Added or reconfigured MAC-d flow | | |
| - MAC-hs queue to add or reconfigure list | (one queue) | |
| - MAC-hs queue Id | 0 | |
| - MAC-d Flow Identity | 0 | |
| - T1 | 50 | |
| - MAC-hs window size | 16 | |
| - MAC-d PDU size Info | | |
| - MAC-d PDU size | 336 | |
| - MAC-d PDU size index | 0 | |
| - MAC-hs queue to delete list | Not present | |
| - DCH quality target | Not present | |
| Frequency info | Set to the frequency of cell 1 | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | FDD | |
| - DL Scrambling Code | Not Present | |
| - HS-SCCH Channelisation Code Information | | |
| - HS-SCCH Channelisation Code | 7 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | FDD | |
| - POhsdsch | 6 dB | |
| - CQI Feedback cycle, k | 4 ms | |
| - CQI repetition factor | 1 | |
| - $\Delta_{CQI}$ | 0 dB | |
| - CHOICE mode | FDD (no data) | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - DPCCH power offset | -40 (-80 dB) | |
| - PC Preamble | 1 frame | |
| - SRB delay | 7 frames | |
| - Power Control Algorithm | Algorithm1 | |
| - TPC step size | 0 (1 dB) | |
| - $\Delta_{ACK}$ | 3 | |
| - $\Delta_{NACK}$ | 3 | |
| - Ack-Nack repetition factor | 1 | |
| - Scrambling code type | Long | |
| - Scrambling code number | 0 (0 to 16777215) | |
| - Number of DPDCH | Not Present(1) | |
| - spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |

| Information Element | Value/remark | Vesrion |
|---|---|---|
| - Number of FBI bit | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset PPilot-DPDCH | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE mode | FDD | |
| - DPCH compressed mode info | Not Present | |
| - TX Diversity mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 4) (1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |

| Information Element | Value/remark |
|---|---|
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |

| Information Element | Value/remark |
|---|---|
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 400 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 150 |
| - Timer_poll | 150 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| - RB stop/continue | Not Present |
| UL Transport channel information for all transport channels | Not Present |
| Added or Reconfigured UL TrCH information | Not Present |

| Information Element | Value/remark |
|---|---|
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | |
| - Number of Processes | 6 |
| - CHOICE *Memory Partitioning* | Implicit |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | (one queue) |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not present |
| - DCH quality target | Not present |
| Frequency info | |
| - Choice mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 1 |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | Not Present |
| - Downlink DPCH power control information | Reference to TS34.108 clause 6.11 Parameter Set |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| - Choice mode | TDD |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - Choice TDD Option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Same Cell parameters ID as used for cell 1 |
| - SCTD indicator | FALSE |

#### 8.2.2.40.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC on the uplink DCCH in cell 6.

After step 4, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC on the uplink DCCH in cell 1.

### 8.2.2.41 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of HS-DSCH reception, during an active CS bearer)

#### 8.2.2.41.1 Definition and applicability

All UEs which support FDD or TDD, HS-PDSCH and simultaneous CS domain speech or transparent CS data services and PS services.

#### 8.2.2.41.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1

### 8.2.2.41.3 Test purpose

To confirm that the UE starts and stops receiving the HS-DSCH according to the received RADIO BEARER RECONFIGURATION message when a circuit-switched radio bearer is established and mapped to DCH.

### 8.2.2.41.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports CS domain speech or transparent CS data services and PS services

Test Procedure

The UE has only signalling radio bearers established. A PS radio bearer is established mapped to HS-DSCH with HS-DSCH reception activated. Then, a CS radio bearer is established.

The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to stop the reception of HS-DSCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to start the reception of HS-DSCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ←→ | | P25 | SS establishes a PS RAB mapped to HS-DSCH. See below for the specific message content used in the RADIO BEARER SETUP message. |
| 2 | ←→ | | | SS establishes a CS RAB. |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Stop of HS-DSCH reception |
| 4 | | | | At the activation time, SS stops HS-DSCH transmission to the UE. |
| 5 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 6 | ← | | RADIO BEARER RECONFIGURATION | Start of HS-DSCH reception |
| 7 | | | | At the activation time, SS resumes HS-DSCH transmission to the UE. |
| 8 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

RADIO BEARER RECONFIGURATION (step 3)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |
| - Logical channel identity | Not Present |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |

RADIO BEARER RECONFIGURATION (step 6) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined in RADIO BEARER SETUP message in Step 1. |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 9 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |
| Downlink information for each radio link | |
| - Serving HS-DSCH radio link indicator | TRUE |

RADIO BEARER RECONFIGURATION (step 6) ( 1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined in RADIO BEARER SETUP message in Step 1. |
| - RB stop/continue | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 9 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |

### 8.2.2.41.5 Test requirements

After step 4, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 7, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

## 8.2.2.42 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialised hard handover to another frequency, start and stop of HS-DSCH reception, during an active CS bearer)

### 8.2.2.42.1 Definition and applicability

All UEs which support FDD or TDD, HS-PDSCH and simultaneous CS domain speech or transparent CS data services and PS services.

### 8.2.2.42.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If IE "Timing indication" has the value "initialise", UE shall:

1> execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.3.5.1.2, 8.5.25, 8.6.3.1

### 8.2.2.42.3 Test purpose

To confirm that the UE starts and stops receiving the HS-DSCH in conjunction with a interfrequency hard handover without prior measurement on the target frequency according to the received RADIO BEARER RECONFIGURATION message when a circuit-switched radio bearer is established and mapped to DCH.

8.2.2.42.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports CS domain speech or transparent CS data services and PS services

Test Procedure

**Table 8.2.2.42**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -55 | OFF | -55 |
| P-CCPCH RSCP (TDD) | dBm | -55 | -55 | OFF | -55 |

Table 8.2.2.42 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execusion.

SS has configured its downlink transmission power setting according to columns “T0” in table 8.2.2.42. The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established. Then, a CS radio bearer is established.

SS switches its downlink transmission power setting to columns “T1” in table 8.2.2.42.

The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to perform a timing re-initialised interfrequency hard handover to cell 6 and stop the reception of HS-DSCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC in cell 6.

The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to perform an interfrequency hard handover to cell 1 and start the reception of HS-DSCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC in cell 1.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ←→ | | | SS establishes a CS RAB. |
| 2 | SS | | | SS switches its downlink transmission power setting to columns “T1” in table 8.2.2.42. |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Hard handover, stop of HS-DSCH reception |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | This message is received in cell 6. |
| 5 | ← | | RADIO BEARER RECONFIGURATION | Hard handover, start of HS-DSCH reception |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE | This message is received in cell 1. |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (step 3) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark | Version |
|---|---|---|
| Activation time | Now | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (high-speed AM DTCH) | |
| - RB identity | 25 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - CHOICE SDU discard mode | No Discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 500 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 200 | |
| - Timer_poll | 200 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Windows | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| Deleted DL TrCH information | | |
| - Downlink transport channel type | HS-DSCH | |
| - DL HS-DSCH MAC-d flow identity | 0 | |
| Frequency info | | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 | |

| Information Element | Value/remark | Version |
|---|---|---|
| | Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to the scrambling code for cell 6 | |
| - Cell ID | Not present | |
| - Serving HS-DSCH radio link indicator | FALSE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

RADIO BEARER RECONFIGURATION (step 3) (1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark | Version |
|---|---|---|
| Activation time | Now | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (high-speed AM DTCH) | |
| - RB identity | 25 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - CHOICE SDU discard mode | No Discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 500 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 200 | |
| - Timer_poll | 200 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Windows | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| Deleted DL TrCH information | | |
| - Downlink transport channel type | HS-DSCH | |
| - DL HS-DSCH MAC-d flow identity | 0 | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - CHOICE mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Same Cell parameters ID as used for cell 6 | |
| - SCTD indicator | FALSE | |

RADIO BEARER RECONFIGURATION COMPLETE (steps 4 and 6) (FDD)

Use the same message as specified in 34.108, except for the following.

| Information Element | Value/remark | Version |
|---|---|---|
| Uplink counter synchronization info | This IE is checked to see if it is present in the case ciphering is activated | |

RADIO BEARER RECONFIGURATION (step 5) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (high-speed AM DTCH) | |
| - RB identity | 25 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - CHOICE SDU discard mode | No Discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 500 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 100 | |
| - Timer_poll | 100 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Windows | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 768 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 100 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| Added or Reconfigured DL TrCH information | | |
| - Downlink transport channel type | HS-DSCH | |
| - DL Transport channel identity | Not Present | |
| - CHOICE DL parameters | HS-DSCH | |
| - HARQ Info | Not Present | |
| - Added or reconfigured MAC-d flow | | |
| - MAC-hs queue to add or reconfigure list | | |
| - MAC-hs queue Id | 0 | |
| - MAC-d Flow Identity | 0 | |
| - T1 | 50 | |
| - MAC-hs window size | 16 | |
| - MAC-d PDU size Info | | |
| - MAC-d PDU size | 336 | |
| - MAC-d PDU size index | 0 | |
| - MAC-hs queue to delete list | Not Present | |
| - DCH quality target | Not Present | |
| Frequency info | | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 1 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |

| Information Element | Value/remark | Version |
|---|---|---|
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to the scrambling code for cell 1 | |
| - Cell ID | Not present | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

RADIO BEARER RECONFIGURATION (step 5) ( 1.28Mcps TDD )

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (high-speed AM DTCH) | |
| - RB identity | 25 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - CHOICE SDU discard mode | No Discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 500 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 100 | |
| - Timer_poll | 100 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Windows | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 768 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 100 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - One sided RLC re-establishment | FALSE | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| Added or Reconfigured DL TrCH information | | |
| - Downlink transport channel type | HS-DSCH | |
| - DL Transport channel identity | Not Present | |
| - CHOICE DL parameters | HS-DSCH | |
| - HARQ Info | Not Present | |
| - Added or reconfigured MAC-d flow | | |
| - MAC-hs queue to add or reconfigure list | | |
| - MAC-hs queue Id | 0 | |
| - MAC-d Flow Identity | 0 | |
| - T1 | 50 | |
| - MAC-hs window size | 16 | |
| - MAC-d PDU size Info | | |
| - MAC-d PDU size | 336 | |
| - MAC-d PDU size index | 0 | |
| - MAC-hs queue to delete list | Not Present | |
| - DCH quality target | Not Present | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 1 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |

| Information Element | Value/remark | Version |
|---|---|---|
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Same Cell parameters ID as used for cell 1 | |
| - SCTD indicator | FALSE | |

#### 8.2.2.42.5 Test requirements

After step 3, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message in cell 6.

After step 5, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message in cell 1.

### 8.2.2.43 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Seamless SRNS relocation, without pending of ciphering, frequency modification)

#### 8.2.2.43.1 Definition

#### 8.2.2.43.2 Conformance requirement

1> if the reconfiguration procedure is simultaneous with SRNS relocation procedure:

2> if the transmitted message is a RADIO BEARER RECONFIGURATION:

3> include the IE "New U-RNTI".

The UE shall:

1> if the received reconfiguration message is a RADIO BEARER RECONFIGURATION and the IE "New U-RNTI" is included:

2> re-establish the RLC entity for RB2;

2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN component of COUNT-C for RB2;

2> calculate the START value according to subclause 8.5.9 in TS 25.331;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".

1> if the IE "Integrity protection mode info" was present in the received reconfiguration message:

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted response message.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition, and the UE shall:

1> if the received reconfiguration message is a RADIO BEARER RECONFIGURATION and the IE "New U-RNTI" is included:

2> when RLC has confirmed the successful transmission of the response message:

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of COUNT-C values of all UM RLC entities to zero;

3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in TS 25.323.

…

The UE shall:

1> if IE "Integrity protection mode command" has the value "start" and the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and this IE was not included SECURITY MODE COMMAND:

NOTE: This case is used in SRNS relocation and in handover from GERAN *Iu mode*.

2> perform integrity protection on the received message, applying the new integrity protection configuration, as described in subclause 8.5.10.1 in TS 25.331 by:

3> using the algorithm (UIA [TS 33.102]) indicated by the IE "Integrity protection algorithm" contained in the IE "Integrity protection mode info";

3> using the IE "Integrity protection initialisation number", contained in the IE "Integrity protection mode info" as the value of FRESH [TS 33.102].

2> let RBm be the signalling radio bearer where the reconfiguration message was received and let RBn be the signalling radio bearer where the response message is transmitted;

2> for the downlink, for each signalling radio bearer, if for the signalling radio bearer, a security configuration triggered by a previous SECURITY MODE COMMAND has not yet been applied, due to the activation time for the signalling radio bearer not having been reached:

3> set "Down link RRC Message sequence number" for this signalling radio bearer in the variable INTEGRITY_PROTECTION_INFO to (activation time -1), where the activation time is the corresponding activation time for this signalling radio bearer;

3> if the previous SECURITY MODE COMMAND was received due to new keys being received:

4> consider the new integrity protection configuration to include the received new keys.

3> else if the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:

4> consider the new Integrity Protection configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN associated with the previously received SECURITY MODE COMMAND.

2> start applying the new integrity protection configuration in the downlink for each signalling radio bearer in the IE "ESTABLISHED_RABS" except RBm at the next received RRC message for the corresponding signalling radio bearer;

2> start applying the new integrity protection configuration in the downlink for signalling radio bearer RBm from and including the received configuration message;

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RBn from and including the transmitted response message;

2> start applying the new integrity protection configuration in the uplink for signalling radio bearers other than RBn from the first message onwards.

Reference

3GPP TS 25.331 clause 8.2.2, .8.6.3.5.2.

8.2.2.43.3 Test purpose

1. To confirm that the UE performs a combined inter-frequency hard handover and SRNS relocation and then transmit a RADIO BEARER RECONFIGURATION COMPLETE message in the new cell.

2. To confirm that the UE correctly applies integrity protection after the SRNS relocation.

3. To confirm that the UE accepts a gap in the downlink RRC message sequence numbering for integrity protection on signalling radio bearer 3 after SRNS relocation.

4. In the case that ciphering is applied by the network, to confirm that the UE restarts ciphering following a successful SRNS relocation.

8.2.2.43.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 6

UE: PS-DCCH+DTCH_DCH (state 6-10) or CS-DCCH+DTCH_DCH (state 6-9) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.2.43**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |
| P-CCPCH (TDD) | dBm | -60 | -75 | -75 | -60 |

Table 8.2.2.43 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_DCH state, camping onto cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.2.2.43. The SS sends a RADIO BEARER RECONFIGURATION message requesting the UE to do a timing re-initialised inter-frequency hard handover combined with SRNS relocation. This message includes the IE "RRC State Indicator" set to "CELL_DCH", IE “New U-RNTI”, the IE “Integrity protection mode info” and the IE “Timing Indication” set to “initialise”.

UE shall reselect to cell 6 and SS verifies that the UE sends RADIO BEARER RECONFIGURATION COMPLETE message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, a calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in the IE “Integrity protection mode info” in the RADIO BEARER RECONFIGURATION message and a COUNT-I that includes subsequent HFN as used in the old integrity protection configuration.

SS then send IDENTITY REQUEST message on the DCCH using RLC-AM (SRB3) in order to confirm that the UE can communicate on SRB3 by using new integrity protection configuration, including using a gap in the downlink RRC message sequence number. The UE shall respond with an IDENTITY RESPONSE message on the uplink DCCH using RLC-AM (SRB3).

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | SS | | | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.2.2.43. |
| 2 | ← | | RADIO BEARER RECONFIGURATION | If IE “Ciphering mode info” is present in the SECURITY MODE COMMAND during initial condition set-up, this message is sent after last ciphering activation time has elapsed and there is no pending ciphering activation time. New integrity protection configuration is applied on DL SRB2. LAI and RAI of cell 6 are given to the UE, and are the same as cell 1. |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE shall transmit this message after it reselects to cell 6. New calculated START value is included. New integrity protection configuration is applied on UL SRB2. |
| 4 | ← | | DOWNLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY REQUEST. New integrity protection configuration is applied on DL SRB3. |
| 5 | → | | UPLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY RESPONSE. SS confirms that new integrity protection configuration is applied on UL SRB3 by UE. SS uses a gap in the downlink RRC message sequence numbering. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 2) – for PS domain testing only (FDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA1 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DTCH) | |
| - RB identity | 20 | |
| - PDCP info | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Packet to CELL_DCH from CELL_DCH in PS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - MAC-d HFN initial value | Not present | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot-DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not Present | |
| - TX Diversity mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Frequency info | | |
| CHOICE mode | FDD | |
| - UARFCN uplink (Nu) | Not Present | |
| | Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink (Nd) | Same downlink UARFCN as used for cell 6 | |
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to same code as used for cell 6 | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 2) – for PS domain testing only (3.84 Mcps TDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA1 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DTCH) | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RB identity | 20 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Packet to CELL_DCH from CELL_DCH in PS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - MAC-d HFN initial value | Not present | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | TDD | |
| - CHOICE *TDD option* | 3.84 Mcps TDD (No Data) | REL-4 |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Downlink counter synchronisation info | | |
| - RB with PDCP information list | Not Present. | |
| Frequency info | | |
| CHOICE mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - CHOICE *mode* | TDD | |
| - CHOICE *TDD option* | 3.84 Mcps TDD | REL-4 |
| - CHOICE *SyncCase* | Sync Case 1 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Set to same code as used for cell 6 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE *mode* | TDD | |
| - DL CCTrCh List | Set to agree with Cell 6 if different than Cell 1 | |
| - DL CCTrCH List to Remove | Set to agree with Cell 1 if different than Cell 6 | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 2) – for PS domain testing only (1.28 Mcps TDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA1 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DTCH) | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RB identity<br>- PDCP info<br>- PDCP SN info<br>- RLC info<br>- RB mapping info<br><br><br><br>- RB stop/continue | 20<br>Not Present<br>Not Present<br>Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Packet to CELL_DCH from CELL_DCH in PS" in the default RADIO BEARER SETUP message in TS 34.108.<br>Not Present | |
| Downlink information common for all radio links<br>- Downlink DPCH info common for all RL<br>- Timing indicator<br>- MAC-d HFN initial value<br>- CFN-targetSFN frame offset<br>- Downlink DPCH power control information<br>- DPC mode<br>- CHOICE mode<br>- CHOICE *TDD option*<br>- TSTD indicator<br>- Default DPCH Offset Value | <br><br>Initialise<br>Not present<br>Not Present<br><br>0 (single)<br>TDD<br>1.28 Mcps TDD<br>FALSE<br>Arbitrary set to value 0..306688 by step of 512 | <br><br><br><br><br><br><br><br>REL-4 |
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not Present. | |
| Frequency info<br>CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>Same UARFCN as used for cell 6 | |
| Downlink information per radio link list<br>-Downlink information for each radio link<br>- Choice mode<br>- Primary CCPCH info<br>- CHOICE *mode*<br>- CHOICE *TDD option*<br>- TSTD indicator<br>- Cell parameters ID<br>- SCTD indicator<br>- Downlink DPCH info for each RL<br>- CHOICE *mode*<br>- DL CCTrCh List<br>- DL CCTrCH List to Remove<br>- SCCPCH information for FACH | <br><br>TDD<br><br>TDD<br>1.28 Mcps TDD<br>FALSE<br>Set to same code as used for cell 6<br>FALSE<br><br>TDD<br>Set to agree with Cell 6 if different than Cell 1<br>Set to agree with Cell 1 if different than Cell 6<br>Not Present | <br><br><br><br><br>REL-4<br><br><br><br><br><br><br><br>R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 2) – for PS domain testing only (7.68 Mcps TDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA1 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DTCH) | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RB identity | 20 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Packet to CELL_DCH from CELL_DCH in PS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| Downlink information common for all radio links | | |
| - CHOICE DPCH info | Downlink DPCH info common for all RL | |
| - Timing indicator | Initialise | |
| - MAC-d HFN initial value | Not present | |
| - Downlink DPCH power control information | | |
| - CHOICE mode | TDD | |
| - TPC step size | 1 | |
| - CHOICE mode | TDD | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps TDD | Rel-7 |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | Not Present | Rel-5 |
| - Post-verification period | Not Present | Rel-6 |
| Downlink counter synchronisation info | | |
| - RB with PDCP information list | Not Present. | |
| Frequency info | | |
| - CHOICE mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - CHOICE *mode* | TDD | |
| - CHOICE *TDD option* | 7.68 Mcps TDD | REL-7 |
| - CHOICE *SyncCase* | Sync Case 1 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Set to same code as used for cell 6 | |
| - SCTD indicator | FALSE | |
| - CHOICE DPCH info | Downlink DPCH info for each RL | Rel-6 |
| - CHOICE *mode* | 7.68 Mcps TDD | |
| - DL CCTrCh List | Set to agree with Cell 6 if different than Cell 1 | |
| - DL CCTrCH List to Remove | Set to agree with Cell 1 if different than Cell 6 | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 2) – for CS domain testing only (FDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Non speech in CS” or “Speech in CS”, with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA1 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RB identity | 10 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB information to reconfigure | | |
| - RB identity | 11 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB information to reconfigure | | |
| - RB identity | 12 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| UL Transport channel information for all transport channels | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured UL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| DL Transport channel information common for all transport channel | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured DL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Frequency info | | |
| CHOICE mode | FDD | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink (Nd) | Same downlink UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - MAC-d HFN initial value | Not present | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot-DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |

| Information Element | Value/remark | Version |
|---|---|---|
| - DPCH compressed mode info | Not Present | |
| - TX Diversity mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to same code as used for cell 6 | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 2) – for CS domain testing only (3.84 Mcps TDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Non speech in CS” or “Speech in CS”, with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA1 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio | |

| | | |
|---|---|---|
| | bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | | |
| - RB identity | 10 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB information to reconfigure | | |
| - RB identity | 11 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB information to reconfigure | | |
| - RB identity | 12 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| UL Transport channel information for all transport channels | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured UL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| DL Transport channel information common for all transport channel | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured DL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Frequency info | | |
| CHOICE mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - MAC-d HFN initial value | Not present | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | TDD | |
| - CHOICE *TDD option* | 3.84 Mcps TDD (No Data) | REL-4 |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Downlink counter synchronisation info | | |
| - RB with PDCP information list | Not Present. | |

| | | |
|---|---|---|
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - CHOICE *mode* | TDD | |
| - CHOICE *TDD option* | 3.84 Mcps TDD | REL-4 |
| - CHOICE *SyncCase* | Sync Case 1 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Set to same code as used for cell 6 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE *mode* | TDD | |
| - DL CCTrCh List | Set to agree with Cell 6 if different than Cell 1 | |
| - DL CCTrCH List to Remove | Set to agree with Cell 1 if different than Cell 6 | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 2) – for CS domain testing only (1.28 Mcps TDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Non speech in CS” or “Speech in CS”, with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA1 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB | |
| - RB mapping info | information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB | |
| - RB mapping info | information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB | |
| - RB mapping info | information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB | |
| - RB mapping info | information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | | |
| - RB identity | 10 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RLC info<br>- RB mapping info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB information to reconfigure<br>- RB identity<br>- PDCP info<br>- PDCP SN info<br>- RLC info<br>- RB mapping info | <br>11<br>Not Present<br>Not Present<br>Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB information to reconfigure<br>- RB identity<br>- PDCP info<br>- PDCP SN info<br>- RLC info<br>- RB mapping info | <br>12<br>Not Present<br>Not Present<br>Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| UL Transport channel information for all transport channels | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured UL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| DL Transport channel information common for all transport channel | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured DL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Frequency info<br>CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>Same UARFCN as used for cell 6 | |
| Downlink information common for all radio links<br>- Downlink DPCH info common for all RL<br>- Timing indicator<br>- MAC-d HFN initial value<br>- CFN-targetSFN frame offset<br>- Downlink DPCH power control information<br>- DPC mode<br>- CHOICE mode<br>- CHOICE *TDD option*<br>- TSTD indicator<br>- Default DPCH Offset Value | <br><br>Initialise<br>Not present<br>Not Present<br><br>0 (single)<br>TDD<br>1.28 Mcps TDD<br>FALSE<br>Arbitrary set to value 0..306688 by step of 512 | <br><br><br><br><br><br><br><br>REL-4<br><br> |
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not Present. | |
| Downlink information per radio link list<br>-Downlink information for each radio link<br>- Choice mode<br>- Primary CCPCH info<br>- CHOICE *mode*<br>- CHOICE *TDD option*<br>- TSTD indicator<br>- Cell parameters ID<br>- SCTD indicator<br>- Downlink DPCH info for each RL<br>- CHOICE *mode*<br>- DL CCTrCh List | <br><br>TDD<br><br>TDD<br>1.28 Mcps TDD<br>FALSE<br>Set to same code as used for cell 6<br>FALSE<br><br>TDD<br>Set to agree with Cell 6 if different than Cell 1 | <br><br><br><br><br>REL-4<br><br><br><br><br><br> |

| Information Element | Value/remark | Version |
|---|---|---|
| - DL CCTrCH List to Remove<br>- SCCPCH information for FACH | Set to agree with Cell 1 if different than Cell 6<br>Not Present | <br>R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 2) – for CS domain testing only (7.68 Mcps TDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Non speech in CS" or "Speech in CS", with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA1 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB information to setup" for the corresponding radio | |

| | | |
|---|---|---|
| | bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | | |
| - RB identity | 10 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB information to reconfigure | | |
| - RB identity | 11 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB information to reconfigure | | |
| - RB identity | 12 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| UL Transport channel information for all transport channels | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured UL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| DL Transport channel information common for all transport channel | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured DL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Frequency info | | |
| - CHOICE mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - CHOICE DPCH info | Downlink DPCH info common for all RL | |
| - Timing indicator | Initialise | |
| - MAC-d HFN initial value | Not present | |
| - Downlink DPCH power control information | | |
| - CHOICE mode | TDD | |
| - TPC step size | 1 | |
| - CHOICE mode | TDD | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps TDD | Rel-7 |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | Not Present | Rel-5 |
| - Post-verification period | Not Present | Rel-6 |
| Downlink counter synchronisation info | | |
| - RB with PDCP information list | Not Present. | |

| | | |
|---|---|---|
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - CHOICE *mode* | TDD | |
| - CHOICE *TDD option* | 7.68 Mcps TDD | REL-4 |
| - CHOICE *SyncCase* | Sync Case 1 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Set to same code as used for cell 6 | |
| - SCTD indicator | FALSE | |
| - CHOICE DPCH info | Downlink DPCH info for each RL | Rel-6 |
| - CHOICE *mode* | TDD | |
| - DL CCTrCh List | Set to agree with Cell 6 if different than Cell 1 | |
| - DL CCTrCH List to Remove | Set to agree with Cell 1 if different than Cell 6 | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION COMPLETE (Step 3) – for PS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info | |
| - RB with PDCP information list | Not present |
| - START list | Check that this IE is present. |

RADIO BEARER RECONFIGURATION COMPLETE (Step 3) – for CS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| COUNT-C activation time | Check that this IE is present. |
| Uplink counter synchronisation info | |
| - RB with PDCP information list | Not present |
| - START list | Check that this IE is present. |

DOWNLINK DIRECT TRANSFER (Step 4)

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Current RRC SN + 3 |
| CN domain identity | CS domain or PS domain (whichever applicable) |
| NAS message | IDENTITY REQUEST |

NOTE: "Current RRC SN" is defined as the RRC message sequence number of the next transmitted RRC message on the particular radio bearer.

### 8.2.2.43.5 Test requirement

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in RADIO BEARER RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. The UE, further more, shall apply the new ingerity protection configuration for the first received/sent RRC message on SRB0, SRB3, and SRB4 after receiving the RADIO BEARER RECONFIGURATION message (i.e. immediately). For SRB2 the new integrity protection configuration shall be applied from and including the received RADIO BEARER

RECONFIGURATION message (DL) and the sent RADIO BEARER RECONFIGURATION COMPLETE message (UL).

After step 3, the UE shall respond with an IDENTITY RESPONSE message to SS and apply the new integrity protection configuration on this message.

## 8.2.2.43a Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Seamless SRNS relocation, UEA2/UIA2, without pending of ciphering, frequency modification)

### 8.2.2.43a.1 Definition

Applicable to all Rel-7 UEs which support FDD.

### 8.2.2.43a.2 Conformance requirement

Same conformance requirement as clause 8.2.2.43.2.

### 8.2.2.43a.3 Test purpose

1. To confirm that the UE performs a combined inter-frequency hard handover and SRNS relocation and then transmit a RADIO BEARER RECONFIGURATION COMPLETE message in the new cell.
2. To confirm that the UE correctly applies integrity protection using UIA2 after the SRNS relocation.
3. To confirm that the UE accepts a gap in the downlink RRC message sequence numbering for integrity protection using UIA2 on signalling radio bearer 3 after SRNS relocation.
4. To confirm that the UE restarts ciphering using UEA2 following a successful SRNS relocation.

### 8.2.2.43a.4 Method of test

#### Initial Condition

System Simulator: 2 cells – Cell 1 and 6

UE: PS-DCCH+DTCH_DCH (state 6-10) or CS-DCCH+DTCH_DCH (state 6-9) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE, UEA2 and UIA2 are configured.

#### Test Procedure

Same test procedure as clause 8.2.2.43.4 except that ciphering algorithm used is UEA2 and integrity protection algorithm used is UIA2.

#### Expected sequence

Same expected sequence as clause 8.2.2.43.4

#### Specific Message Contents

Same specific message contents as clause 8.2.2.43.4 except for the following:

#### RADIO BEARER RECONFIGURATION (Step 2) – for PS domain testing only (FDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Packet to CELL_DCH from CELL_DCH in PS”, with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info<br>- Integrity protection algorithm | UIA2 | |

RADIO BEARER RECONFIGURATION (Step 2) – for CS domain testing only (FDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Non speech in CS” or “Speech in CS”, with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info<br>- Integrity protection algorithm | UIA2 | |

#### 8.2.2.43a.5 Test requirement

Same test requirement as clause 8.2.2.43.5.

### 8.2.2.43b Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Seamless SRNS relocation, change of ciphering and integrity protection algorithms, frequency modification)

#### 8.2.2.43b.1 Definition

Applicable to all Rel-7 UEs which support FDD.

#### 8.2.2.43b.2 Conformance requirement

1> if the reconfiguration procedure is simultaneous with SRNS relocation procedure:

2> if the transmitted message is a RADIO BEARER RECONFIGURATION:

3> include the IE "New U-RNTI".

The UE shall:

1> if the received reconfiguration message is a RADIO BEARER RECONFIGURATION and the IE "New U-RNTI" is included:

2> if the variable PDCP_SN_INFO is empty:

3> configure the corresponding RLC entity for all AM and UM radio bearers and AM and UM signalling radio bearers except RB2 to "stop".

2> else:

3> configure the RLC entity for signalling radio bearers RB1, RB3 and RB4 to "stop";

3> configure the RLC entity for UM and AM radio bearers for which the IE "PDCP SN Info" is not included to "stop".

2> re-establish the RLC entity for RB2;

2> for the downlink and the uplink, apply the ciphering configuration as follows:

3> if the received re-configuation message included the IE "Ciphering Mode Info":

4> use the ciphering configuration in the received message when transmitting the response message.

3> if the ciphering configuration for RB2 from a previously received SECURITY MODE COMMAND has not yet been applied because the activation times not having been reached:

4> if the previous SECURITY MODE COMMAND was received due to new keys being received:

5> consider the new ciphering configuration to include the received new keys;

5> initialise the HFN component of the uplink COUNT-C and downlink COUNT-C of SRB2 as indicated in subclause 8.1.12.3.1.

4> else if the ciphering configuration for RB2 from a previously received SECURITY MODE COMMAND has not yet been applied because of the corresponding activation times not having been

reached and the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:

5> consider the new ciphering configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN;

5> initialise the HFN component of the uplink COUNT-C and downlink COUNT-C of SRB2 to the most recently transmitted IE "START list" or IE "START" for the LATEST_CONFIGURED_CN_DOMAIN at the reception of the previous SECURITY MODE COMMAND.

4> apply the new ciphering configuration immediately following RLC re-establishment.

3> else:

4> continue using the current ciphering configuration.

2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN of COUNT-C for RB2;

2> calculate the START value according to subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".

…

1> if the received reconfiguration message contained the IE "Ciphering mode info" or contained the IE "Integrity protection mode info":

2> set the IE "Status" in the variable SECURITY_MODIFICATION for all the CN domains in the variable SECURITY_MODIFICATION to "Affected".

1> if the received reconfiguration message contained the IE "Ciphering mode info":

2> if the reconfiguration message is not used to perform SRNS relocation or a handover from GERAN *Iu mode* with change of ciphering algorithm:

3> the UE behaviour is not specified.

2> if the message is used to perform a timing re-initialised hard handover:

3> if IE "Ciphering activation time for DPCH" is included:

4> the UE behaviour is not specified.

2> else:

3> if the reconfiguration message is used to setup radio bearer(s) using RLC-TM; or

3> if radio bearer(s) using RLC-TM already exist:

4> if IE "Ciphering activation time for DPCH" is not included:

5> the UE behaviour is not specified.

1> if the received reconfiguration message contained the IE "Integrity Protection mode info":

2> if the reconfiguration message is not used to perform SRNS relocation or a handover from GERAN *Iu mode*:

3> the UE behaviour is not specified.

1> if the received reconfiguration message did not contain the IE "Ciphering activation time for DPCH" in IE "Ciphering mode info":

2> if prior to this procedure there exist no transparent mode RLC radio bearers:

3> if, at the conclusion of this procedure, the UE will be in CELL_DCH state; and

3> if, at the conclusion of this procedure, at least one transparent mode RLC radio bearer exists:

4> include the IE "COUNT-C activation time" and specify a CFN value for this IE that is a multiple of 8 frames (CFN mod 8 = 0) and lies at least 200 frames ahead of the CFN in which the response message is first transmitted.

NOTE: UTRAN should not include the IE "Ciphering mode info" in any reconfiguration message unless it is also used to perform an SRNS relocation with change of ciphering algorithm.

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> if the variable PDCP_SN_INFO is not empty:

2> include the IE "RB with PDCP information list" and set it to the value of the variable PDCP_SN_INFO.

1> in TDD, if the procedure is used to perform a handover to a cell where timing advance is enabled, and the UE can calculate the timing advance value in the new cell (i.e. in a synchronous TDD network):

2> set the IE "Uplink Timing Advance" according or the IE "Extended UL Timing Advance" to subclause 8.6.6.26.

1> if the IE "Integrity protection mode info" was present in the received reconfiguration message:

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted response message.

…

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition, and the UE shall:

1> if the IE "Downlink counter synchronisation info" was included in the reconfiguration message; or

1> if the received reconfiguration message is a RADIO BEARER RECONFIGURATION and the IE "New U-RNTI" is included:

2> when RLC has confirmed the successful transmission of the response message:

3> if the variable PDCP_SN_INFO is empty:

4> configure the RLC entity for all AM and UM radio bearers and AM and UM signalling radio bearers except RB2 to "continue".

3> else:

4> configure the RLC entity for signalling radio bearers RB1, RB3 and RB4 to "continue";

4> configure the RLC entity for UM and AM radio bearers for which the IE "PDCP SN Info" is not included to "continue".

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of COUNT-C values of all UM RLC entities to zero;

3> if the IE "PDCP context relocation info" is not present:

4> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].

3> if the IE "PDCP context relocation info" is present:

4> perform the actions as specified in subclause 8.6.4.13.

…

1> set the IE "Status" in the variable CIPHERING_STATUS of the CN domains for which the IE "Status" of the variable SECURITY_MODIFICATION is set to "Affected" to "Started";

1> apply the new ciphering configuration in the lower layers for all RBs that belong to a CN domain for which the IE "Status" of the variable SECURITY_MODIFICATION is set to "Affected" and all signalling radio bearers:

2> using the ciphering algorithm (UEA [40]) indicated by the IE "Ciphering algorithm" as part of the new ciphering configuration;

2> for each radio bearer that belongs to a CN domain for which the IE "Status" of the variable SECURITY_MODIFICATION is set to "Affected" and all signalling radio bearers:

3> using the value of the IE "RB identity" in the variable ESTABLISHED_RABS minus one as the value of BEARER [40] in the ciphering algorithm.

1> for the downlink and the uplink, apply the new ciphering configuration as follows:

2> if the ciphering configuration for a AM or UM radio bearer or signalling radio bearer from a previously received SECURITY MODE COMMAND has not yet been applied because of the corresponding activation times not having been reached and the current received message includes the IE "DL Counter Synch Info" or the current received message is a RADIO BEARER RECONFIGURATION message and includes the IE "New U-RNTI":

3> if the previous SECURITY MODE COMMAND was received due to new keys being received:

4> consider the new ciphering configuration to include the received new keys.

3> else if the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:

4> consider the new ciphering configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN.

3> apply the new ciphering configuration in uplink and downlink immediately following RLC re-establishment.

2> if the IE "Ciphering activation time for DPCH" is present in the IE "Ciphering mode info" and the UE was in CELL_DCH state prior to this procedure:

3> for radio bearers using RLC-TM:

4> apply the old ciphering configuration for CFN less than the number indicated in the IE "Ciphering activation time for DPCH";

4> apply the new ciphering configuration for CFN greater than or equal to the number indicated in IE "Ciphering activation time for DPCH".

2> if the IE "Radio bearer downlink ciphering activation time info" is present:

3> apply the following procedure for each radio bearer and signalling radio bearers using RLC-AM or RLC-UM indicated by the IE "RB identity":

4> suspend uplink transmission on the radio bearer or the signalling radio bearer (except for the SRB where the response message is transmitted) according to the following:

5> do not transmit RLC PDUs with sequence number greater than or equal to the uplink activation time, where the uplink activation time is selected according to the rules below.

4> select an "RLC sequence number" at which (activation) time the new ciphering configuration shall be applied in uplink for that radio bearer according to the following:

5> consider a ciphering activation time in uplink to be pending until the RLC sequence number of the next RLC PDU to be transmitted for the first time is equal to or larger than the selected activation time;

5> for each radio bearer and signalling radio bearer that has no pending ciphering activation time in uplink as set by a previous procedure changing the security configuration:

6> set a suitable value that would ensure a minimised delay in the change to the latest ciphering configuration.

5> for each radio bearer and signalling radio bearer that has a pending ciphering activation time in uplink as set by a previous procedure changing the security configuration:

6> for radio bearers and signalling radio bearers except SRB2:

7> set the same value as the pending ciphering activation time.

6> for signalling radio bearer SRB2:

7> set a suitable value that would ensure a minimised delay in the change to the latest ciphering configuration.

4> store the selected "RLC sequence number" for that radio bearer in the entry for the radio bearer in the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

4> switch to the new ciphering configuration according to the following:

5> use the old ciphering configuration for the transmitted and received RLC PDUs with RLC sequence numbers smaller than the corresponding RLC sequence numbers indicated in the IE "Radio bearer uplink ciphering activation time info" sent to UTRAN and in the received IE "Radio bearer downlink ciphering activation time info" received from UTRAN, respectively;

5> use the new ciphering configuration for the transmitted and received RLC PDUs with RLC sequence numbers greater than or equal to the corresponding RLC sequence numbers indicated in the IE "Radio bearer uplink ciphering activation time info" sent to UTRAN and in the received IE "Radio bearer downlink ciphering activation time info" received from UTRAN, respectively;

5> for a radio bearer using RLC-AM, when the RLC sequence number indicated in the IE "Radio bearer downlink ciphering activation time info" falls below the RLC receiving window and the RLC sequence number indicated in the IE "Radio bearer uplink ciphering activation time info" falls below the RLC transmission window, the UE may release the old ciphering configuration for that radio bearer;

5> if an RLC reset or re-establishment of the transmitting side of an RLC entity occurs before the activation time for the new ciphering configuration has been reached in uplink, ignore the activation time and apply the new ciphering configuration in uplink immediately after the RLC reset or RLC re-establishment;

5> if an RLC reset or re-establishment of the receiving side of an RLC entity occurs before the activation time for the new ciphering configuration has been reached in downlink, ignore the activation time and apply the new ciphering configuration in downlink immediately after the RLC reset or RLC re-establishment.

2> if the current received message includes the IE "Downlink counter synchronisation info" or the current received message is a RADIO BEARER RECONFIGURATION message and includes the IE "New U-RNTI":

3> apply the new ciphering configuration in uplink and downlink immediately following RLC re-establishment.

…

The UE shall:

1> if IE "Integrity protection mode command" has the value "start" and the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and this IE was not included SECURITY MODE COMMAND:

NOTE: This case is used in SRNS relocation and in handover from GERAN *Iu mode*.

2> perform integrity protection on the received message, applying the new integrity protection configuration, as described in subclause 8.5.10.1 in TS 25.331 by:

3> using the algorithm (UIA [TS 33.102]) indicated by the IE "Integrity protection algorithm" contained in the IE "Integrity protection mode info";

3> using the IE "Integrity protection initialisation number", contained in the IE "Integrity protection mode info" as the value of FRESH [TS 33.102].

2> let RBm be the signalling radio bearer where the reconfiguration message was received and let RBn be the signalling radio bearer where the response message is transmitted;

2> for the downlink, for each signalling radio bearer, if for the signalling radio bearer, a security configuration triggered by a previous SECURITY MODE COMMAND has not yet been applied, due to the activation time for the signalling radio bearer not having been reached:

3> set "Down link RRC Message sequence number" for this signalling radio bearer in the variable INTEGRITY_PROTECTION_INFO to (activation time -1), where the activation time is the corresponding activation time for this signalling radio bearer;

3> if the previous SECURITY MODE COMMAND was received due to new keys being received:

4> consider the new integrity protection configuration to include the received new keys.

3> else if the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:

4> consider the new Integrity Protection configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN associated with the previously received SECURITY MODE COMMAND.

2> start applying the new integrity protection configuration in the downlink for each signalling radio bearer in the IE "ESTABLISHED_RABS" except RBm at the next received RRC message for the corresponding signalling radio bearer;

2> start applying the new integrity protection configuration in the downlink for signalling radio bearer RBm from and including the received configuration message;

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RBn from and including the transmitted response message;

2> start applying the new integrity protection configuration in the uplink for signalling radio bearers other than RBn from the first message onwards.

### Reference

3GPP TS 25.331 clause 8.2.2, 8.6.3.4, 8.6.3.5.2.

### 8.2.2.43b.3 Test purpose

1. To confirm that the UE performs a combined inter-frequency hard handover and SRNS relocation and then transmit a RADIO BEARER RECONFIGURATION COMPLETE message in the new cell.

2. To confirm that the UE correctly applies new ciphering and integrity protection algorithms after the SRNS relocation from UEA1/UIA1 to UEA2/UIA2

3. To confirm that the UE correctly applies new ciphering and integrity protection algorithms after the SRNS relocation from UEA2/UIA2 to UEA1/UIA1

8.2.2.43b.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 6

UE: PS-DCCH+DTCH_DCH (state 6-10) or CS-DCCH+DTCH_DCH (state 6-9) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE. UEA1 and UIA1 are configured.

Test Procedure

**Table 8.2.2.43b**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |

Table 8.2.2.43b illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_DCH state, camping onto cell 1 with UEA1 and UIA1 configured. SS configures its downlink transmission power settings according to columns "T1" in table 8.2.2.43b. The SS sends a RADIO BEARER RECONFIGURATION message requesting the UE to do a timing re-initialised inter-frequency hard handover combined with SRNS relocation, with change of ciphering and integrity algorithms. This message includes the IE "RRC State Indicator" set to "CELL_DCH", IE “New U-RNTI”, the IE “Integrity protection mode info” with UIA2, the UE “Ciphering Mode Info” with UEA2, and the IE “Timing Indication” set to “initialise”.

UE shall reselect to cell 6 and SS verifies that the UE sends RADIO BEARER RECONFIGURATION COMPLETE message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, a calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in the IE “Integrity protection mode info” in the RADIO BEARER RECONFIGURATION message and a COUNT-I that includes subsequent HFN as used in the old integrity protection configuration.

SS then send IDENTITY REQUEST message on the DCCH using RLC-AM (SRB3) in order to confirm that the UE can communicate on SRB3 by using new integrity protection configuration, including using a gap in the downlink RRC message sequence number. The UE shall respond with an IDENTITY RESPONSE message on the uplink DCCH using RLC-AM (SRB3).

SS configures its downlink transmission power settings according to columns "T0" in table 8.2.2.43b. The SS sends a RADIO BEARER RECONFIGURATION message requesting the UE to do a timing re-initialised inter-frequency hard handover to Cell 1 combined with SRNS relocation, with change of ciphering and integrity algorithms. This message includes the IE "RRC State Indicator" set to "CELL_DCH", IE “New U-RNTI”, the IE “Integrity protection mode info” with UIA1, the UE “Ciphering Mode Info” with UEA1, and the IE “Timing Indication” set to “initialise”.

UE shall reselect to cell 1 and SS verifies that the UE sends RADIO BEARER RECONFIGURATION COMPLETE message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, a calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in the IE “Integrity protection mode info” in the RADIO BEARER RECONFIGURATION message and a COUNT-I that includes subsequent HFN as used in the old integrity protection configuration.

SS then send IDENTITY REQUEST message on the DCCH using RLC-AM (SRB3) in order to confirm that the UE can communicate on SRB3 by using new integrity protection configuration, including using a gap in the downlink RRC message sequence number. The UE shall respond with an IDENTITY RESPONSE message on the uplink DCCH using RLC-AM (SRB3).

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | SS | | | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.2.2.43. |
| 2 | ← | | RADIO BEARER RECONFIGURATION | This message is sent after last ciphering activation time has elapsed and there is no pending ciphering activation time, to configure UEA2 and UIA2. LAI and RAI of cell 6 are given to the UE, and are the same as cell 1. |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE shall transmit this message after it reselects to cell 6. New calculated START value is included. New integrity protection configuration using UIA2 is applied on UL SRB2. |
| 4 | ← | | DOWNLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY REQUEST. New integrity protection configuration is applied on DL SRB3. |
| 5 | → | | UPLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY RESPONSE. SS confirms that new integrity protection configuration UIA2 and ciphering algorithm UEA2 is applied on UL SRB3 by UE. |
| 6 | SS | | | SS applies the downlink transmission power settings, according to the values in columns "T0" of table 8.2.2.43. |
| 7 | ← | | RADIO BEARER RECONFIGURATION | To configure UEA1 and UIA1. LAI and RAI of cell 1 are given to the UE, and are the same as cell 6. |
| 8 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE shall transmit this message after it reselects to cell 1. New calculated START value is included. New integrity protection configuration using UIA1 is applied on UL SRB2. |
| 9 | ← | | DOWNLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY REQUEST. New integrity protection configuration is applied on DL SRB3. |
| 10 | → | | UPLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY RESPONSE. SS confirms that new integrity protection configuration UIA1 and ciphering algorithm UEA1 is applied on UL SRB3 by UE. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 2) – for PS domain testing only (FDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA2 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Ciphering mode info | | |
| Ciphering mode command | Start/restart | |
| Ciphering algorithm | UEA2 | |
| Radio bearer downlink ciphering activation time info | Not present | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DTCH) | |
| - RB identity | 20 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "RB information to setup" for the corresponding radio bearer for the case "Packet to CELL_DCH from CELL_DCH in PS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - MAC-d HFN initial value | Not present | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot-DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not Present | |
| - TX Diversity mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Frequency info | | |
| CHOICE mode | FDD | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink (Nd) | Same downlink UARFCN as used for cell 6 | |
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to same code as used for cell 6 | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 2) – for CS domain testing only (FDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Non speech in CS” or “Speech in CS”, with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA2 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Ciphering mode info | | |
| Ciphering mode command | Start/restart | |
| Ciphering algorithm | UEA2 | |
| Radio bearer downlink ciphering activation time info | Not present | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB | |
| - RB mapping info | information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB | |
| - RB mapping info | information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB | |
| - RB mapping info | information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | | |
| - RB identity | 10 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "RB information to setup" for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB information to reconfigure | | |
| - RB identity | 11 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "RB information to setup" for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB information to reconfigure | | |
| - RB identity | 12 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "RB information to setup" for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| UL Transport channel information for all transport channels | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured UL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| DL Transport channel information common for all transport channel | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured DL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Frequency info | | |
| CHOICE mode | FDD | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink (Nd) | Same downlink UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - MAC-d HFN initial value | Not present | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot-DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not Present | |
| - TX Diversity mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to same code as used for cell 6 | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 2) – for PS domain testing only (FDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA1 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Ciphering mode info | | |
| Ciphering mode command | Start/restart | |
| Ciphering algorithm | UEA1 | |
| Radio bearer downlink ciphering activation time info | Not present | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "Signalling RB | |
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RB information to reconfigure | (AM DTCH) | |
| - RB identity | 20 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “RB information to setup” for the corresponding radio bearer for the case "Packet to CELL_DCH from CELL_DCH in PS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - MAC-d HFN initial value | Not present | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot-DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not Present | |
| - TX Diversity mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Frequency info | | |
| CHOICE mode | FDD | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink (Nd) | Same downlink UARFCN as used for cell 1 | |
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to same code as used for cell 1 | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION (Step 7) – for CS domain testing only (FDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Non speech in CS” or “Speech in CS”, with the following exception:

| Information Element | Value/remark | Version |
|---|---|---|
| Integrity protection mode info | | |
| - Integrity protection mode command | Start | |
| - Downlink integrity protection activation info | Not Present | |
| - Integrity protection algorithm | UIA1 | |
| - Integrity protection initialisation number | SS selects an arbitrary 32 bit number for FRESH | |
| Ciphering mode info | | |
| Ciphering mode command | Start/restart | |
| Ciphering algorithm | UEA1 | |
| Radio bearer downlink ciphering activation time info | Not present | |
| Activation time | Not present | |
| New U-RNTI | | |
| - SRNC identity | 0000 0000 0010B | |
| - S-RNTI | 0000 0000 0000 0000 0001B | |
| CN Information info | | |
| - PLMN identity | Not present | |
| - CN common GSM-MAP NAS system information | | |
| - GSM-MAP NAS system information | 00 01H | |
| - CN domain related information | | |
| - CN domain identity | PS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 05 00H | |
| - CN domain identity | CS | |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | 1E 01H | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (UM DCCH for RRC) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB information to setup” for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB mapping info | | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE “Signalling RB | |

| Information Element | Value/remark | Version |
|---|---|---|
| - RB mapping info | information to setup" for the corresponding radio bearer in the default RRC CONNECTION SETUP message (Transition to CELL_DCH ) in TS 34.108. | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | | |
| - RB identity | 10 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "RB information to setup" for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB information to reconfigure | | |
| - RB identity | 11 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "RB information to setup" for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| - RB information to reconfigure | | |
| - RB identity | 12 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Values as specified for the IE "RB information to setup" for the corresponding radio bearer for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| - RB mapping info | | |
| UL Transport channel information for all transport channels | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured UL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| DL Transport channel information common for all transport channel | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Added or Reconfigured DL TrCH information | Values as specified for the corresponding IE for the case "Speech to CELL_DCH from CELL_DCH in CS" in the default RADIO BEARER SETUP message in TS 34.108. | |
| Frequency info | | |
| CHOICE mode | FDD | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink (Nd) | Same downlink UARFCN as used for cell 1 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - MAC-d HFN initial value | Not present | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot-DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not Present | |
| - TX Diversity mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to same code as used for cell 1 | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

RADIO BEARER RECONFIGURATION COMPLETE (Steps 3 and 8) – for PS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info | |
| - RB with PDCP information list | Not present |
| - START list | Check that this IE is present. |

RADIO BEARER RECONFIGURATION COMPLETE (Steps 3 and 8) – for CS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| COUNT-C activation time | Check that this IE is present. |
| Uplink counter synchronisation info | |
| - RB with PDCP information list | Not present |
| - START list | Check that this IE is present. |

DOWNLINK DIRECT TRANSFER (Steps 4 and 9)

Use the same message content as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Integrity check info | |
| Message authentication code | Calculated result in SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| RRC Message sequence number | Current RRC SN + 3 |
| CN domain identity | CS domain or PS domain (whichever applicable) |
| NAS message | IDENTITY REQUEST |

NOTE: "Current RRC SN" is defined as the RRC message sequence number of the next transmitted RRC message on the particular radio bearer.

#### 8.2.2.43.5 Test requirement

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in RADIO BEARER RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. The UE, further more, shall apply the new ingerity protection configuration for the first received/sent RRC message on SRB0, SRB3, and SRB4 after receiving the RADIO BEARER RECONFIGURATION message (i.e. immediately). For SRB2 the new integrity protection configuration shall be applied from and including the received RADIO BEARER RECONFIGURATION message (DL) and the sent RADIO BEARER RECONFIGURATION COMPLETE message (UL).

After step 4, the UE shall respond with an IDENTITY RESPONSE message to SS and apply the new integrity protection algorithm UIA2 and ciphering algorithm UEA1 on this message.

After step 7, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in RADIO BEARER RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. The UE, further more, shall apply the new ingerity protection configuration for the first received/sent RRC message on SRB0, SRB3, and SRB4 after receiving the RADIO BEARER RECONFIGURATION message (i.e. immediately). For SRB2 the new integrity protection configuration shall be applied from and including the received RADIO BEARER RECONFIGURATION message (DL) and the sent RADIO BEARER RECONFIGURATION COMPLETE message (UL).

After step 9, the UE shall respond with an IDENTITY RESPONSE message to SS and apply the new integrity protection algorithm UIA1 and ciphering algorithm UEA1 on this message.

### 8.2.2.44 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (With active E-DCH transmission)

#### 8.2.2.44.1 Definition and applicability

All UEs which support FDD and HS-PDSCH and E-DPDCH and all UEs which support TDD and HS-PDSCH and E-PUCH..

#### 8.2.2.44.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable E_DCH_TRANSMISSION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH info", including the IE "E-DPCCH info" and the IE "E-DPDCH info";
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> for non-scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-PUCH info";
- IE "Non-scheduled transmission grant info".

2> for scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH and E-HICH reception procedures;

1> For FDD:

2> stop any E-RGCH reception procedures.

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures.

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> act as if the IE "MAC-es/e reset indicator" was received and set to TRUE;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2> if scheduled transmission is configured, perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, if scheduled transmission is configured, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AICH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH, E-DPDCH, E-RUCCH and/or E-PUCH transmission procedures.

Reference

3GPP TS 25.331 clauses 8.2.2.4, 8.5.28

### 8.2.2.44.3 Test purpose

To confirm that the UE reconfigures radio bearer parameters during active E-DCH transmission according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.44.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A12, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only)
- UE supports E-PUCH (TDD only)

Test Procedure

The UE is in CELL_DCH state and has a user radio bearer mapped on E-DCH/HS-DSCH established in cell 1.

The SS transmits a RADIO BEARER RECONFIGURATION message to the UE, to reconfigure Timer_poll_prohibit_, Timer_poll & Timer_status_prohibit to 200ms. After the UE receives this message, it reconfigures the radio bearer and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| UL Transport channel information for all transport channels | Not present |
| Added or Reconfigured UL TrCH information | Not present |
| DL Transport channel information common for all transport channel | Not present |
| Added or Reconfigured DL TrCH information | Not present |
| Uplink channel requirement | Not present |
| Downlink information common for all radio links | Not present |
| Downlink information for each radio link | Not present |

#### 8.2.2.44.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

### 8.2.2.44a Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (With active E-DCH transmission, F-DPCH configured)

#### 8.2.2.44a.1 Definition and applicability

All UEs which support FDD and HS-PDSCH and E-DPDCH and fully support F-DPCH.

#### 8.2.2.44a.2 Conformance requirement

Same conformance requirement as in clause 8.2.2.44.2

8.2.2.44a.3 Test purpose

Same test purpose as in clause 8.2.2.44.3

8.2.2.44a.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A14, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH
- UE supports E-DPDCH
- UE fully supports F-DPCH

Test Procedure

Same test procedure as in clause 8.2.2.44.4 except that the UE transmits RADIO BEARER RECONFIGURATION COMPLETE using AM RLC on E-DCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

Same specific message content as in clause 8.2.2.44.4

8.2.2.44a.5 Test requirements

Same test requirements as in clause 8.2.2.44.5.

## 8.2.2.45 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (start and stop of E-DCH transmission)

8.2.2.45.1 Definition and applicability

All UEs which support FDD and HS-PDSCH and E-DPDCH or all UEs which support TDD and HS-PDSCH and E-PUCH.

8.2.2.45.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable E_DCH_TRANSMISSION shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH info", including the IE "E-DPCCH info" and the IE "E-DPDCH info".
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH and E-HICH reception procedures;

1> For FDD:

2> stop any E-RGCH reception procedures.

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures.

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> act as if the IE "MAC-es/e reset indicator" was received and set to TRUE;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2>perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AGCH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH and E-DPDCH transmission procedures.

…

1> for FDD:

2> if the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value(s) in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

1> for TDD:

2> if the IE "New E-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

If, after the completion of this procedure, the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> clear the variable E-RNTI.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

1> for TDD:

2> use the value of New E-RNTI stored in the variable E_RNTI as the UE identity in the E-AGCH reception procedure and the E-RUCCH transmission procedure in the physical layer.

…

If the IE "Added or Reconfigured UL TrCH information" is included then the UE shall:

1> for the transport channel identified by the IE "UL Transport Channel Identity" and IE "Uplink transport channel type":

2> perform the actions for the IE "Transport Format Set" as specified in subclause 8.6.5.1.

NOTE: The UE stores the UL transport channel configuration until it is explicitly deleted by a message containing the IE "Deleted UL TrCH information" or the UE leaves RRC Connected mode.

1> if the choice "UL parameters" is set to 'E-DCH':

2> for FDD:

3> apply the values of the IE "E-DCH Transmission Time Interval" and the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for TDD:

3> apply the value of the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for the IE "HARQ Info for E-DCH":

3> perform the actions specified in subclause 8.6.5.17.

2> if the IE "Added or Reconfigured E-DCH MAC-d Flow list " is included:

3> for each MAC-d flow identified by the IE "Mac-d flow identity":

4> perform the actions as specified in subclause 8.6.5.18.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "E-DCH Transmission Time Interval" is included, the UE shall:

1> store the received TTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> apply the TTI as signalled in the IE "E-DCH Transmission Time Interval" on the E-DPDCH.

…

If the IE "HARQ Info for E-DCH" is included, the UE shall:

1> store the received configuration;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use a redundancy version for each HARQ transmission as configured by the IE "HARQ RV Configuration".

…

If the IE "Added or reconfigured E-DCH MAC-d flow" is included, the UE shall:

1> if the IE "E-DCH MAC-d flow power offset" is included:

2> configure the power offset indicated in the IE "E-DCH MAC-d flow power offset" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow maximum number of retransmissions" is included:

2> configure the maximum number of retransmissions indicated in the IE "E-DCH MAC-d flow maximum number of retransmissions" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> for 1.28 Mcps TDD, if the IE "E-DCH MAC-d flow retransmission timer" is included:

2> configure the retransmission timer for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

1> else:

2> if previously the IE "E-DCH MAC-d flow multiplexing list" was already received for this E-DCH MAC-d flow:

3> continue to only multiplex E-DCH PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed according to the previously received IE "E-DCH MAC-d flow multiplexing list".

2> else (never received the IE "E-DCH MAC-d flow multiplexing list" for this E-DCH MAC-d flow):

3> allow multiplexing of MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from any other E-DCH MAC-d flow in the same MAC-e PDU.

1> for FDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled transmission grant HARQ process allocation" is configured for this MAC-d flow:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission grant HARQ process allocation", with a total contribution from this MAC-d flow (i.e. including MAC-e/es headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

3> else:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e PDU transmitted by any HARQ process, with a total contribution from this MAC-d flow (i.e. including MAC-e/es headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDU's for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH/E-RGCH (see [15]).

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity").

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDUs for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH (see [15]).

1> perform the actions as specified in subclause 8.5.21;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the UE is in TDD mode and shared transport channels are assigned to the UE:

3> start to receive the indicated Secondary CCPCH.

2> if the UE is in TDD mode and no shared transport channels are assigned to the UE:

3> set the variable UNSUPPORTED_CONFIGURATION to TRUE.

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link and no longer consider any other radio link as serving HS-DSCH radio link.

2> For FDD:

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link.

3> if the IE "E-AGCH Info" is included for the serving E-DCH radio link:

4> store the newly received E-AGCH configuration.

NOTE: The UTRAN should always include the IE "E-AGCH info" if the serving E-DCH radio link indicated in the message is another radio link than the serving E-DCH radio link prior to the procedure.

3> if the IE "E-HICH information" is included:

4> store this E-HICH configuration for the concerning radio link.

3> if the IE "E-HICH information" is included or previously stored:

4> store this E-RGCH configuration for the concerning radio link, if included.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for TDD:

3> if the IE "E-AGCH Info" is included:

4> store the newly received E-AGCH configuration.

3> if the IE "E-HICH information" is included:

4> store the E-HICH configuration.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link;

4> if the serving HS-DSCH radio link was another radio link than this radio link prior to reception of the message and the IE "H-RNTI" is not included:

5> clear the variable H_RNTI.

3> if the IE "Serving HS-DSCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving HS-DSCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving HS-DSCH radio link.

3> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link;

4> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:

5> if the IE "New Primary E-RNTI" is not included:

6> clear the Primary E-RNTI stored in the variable E_RNTI.

5> if the IE "New Secondary E-RNTI" is not included:

6> clear the Secondary E-RNTI stored in the variable E_RNTI.

3> if the IE "Serving E-DCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving E-DCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving E-DCH radio link.

3> if the IE "E-HICH release indicator" is present:

4> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.

3> if the IE "E-RGCH release indicator" is present:

4> delete the stored E-RGCH configuration for this RL.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> For TDD:

3> if the IE "H-RNTI" is not included and the primary CCPCH has changed:

4> clear the variable H_RNTI.

3> determine the value for the HS-DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

2> for TDD:

3> if the IE "New E-RNTI" is not included:

4> clear the variable E_RNTI.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:

3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> for FDD:

2> if the IE "E-DPCCH Info" is included:

3> store the newly received E-DPCCH configuration.

2> if the IE "E-DPDCH Info" is included:

3> store the newly received E-DPDCH configuration.

2> if the IE "UL 16QAM settings" is not included:

3> indicate to lower layers to stop any operation in 16QAM mode.

1> for 3.84/7.68 Mcps TDD:

2> if the IE "E-RUCCH Info" is included:

3> store the newly received E-RUCCH configuration.

2> if the IE "E-PUCH Info" is included:

NOTE 1: The UTRAN should ensure the ordering of the E-TFCI table in increasing transmission power, by correct setting of the reference E-TFCI power offsets.

NOTE 2: If a reference E-TFCI signalled to the UE is outside the UE physical channel capability, the UE behaviour is unspecified.

NOTE 2a: If E-TFCI boost is signalled to the UE and a reference E-TFCI <= E-TFCI Boost is signalled to the UE with a Reference E-TFCI PO of value 30 or 31, the UE behaviour is unspecified.

1> if the IE "MAC-es/e reset indicator" is included:

2> reset the MAC-es/e entity [15].

NOTE 3: If the IE "MAC-es/e reset indicator" is not set to TRUE in case the IE "E-DCH Transmission Time Interval" is reconfigured, the UE behaviour is unspecified.

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> configure the UL E-DPCCH in accordance with the stored IE "E-DPCCH" configuration;

2> configure the MAC with the stored IE "E-DPDCH" configuration and/or the information contained in IE "Scheduled Transmission configuration".

1> for TDD:

2> configure the E-RUCCH with the stored E-RUCCH configuration;

2> configure the MAC with the stored E-PUCH configuration.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.28, 8.6.3.14, 8.6.5.5, 8.6.5.16, 8.6.5.17, 8.6.5.18, 8.6.6.4, 8.6.6.37

### 8.2.2.45.3 Test purpose

1 To confirm that the UE reconfigures radio bearer parameters, transits from CELL_FACH to CELL_DCH state, and starts E-DCH transmission according to the received RADIO BEARER RECONFIGURATION message.

2 To confirm that the UE reconfigures radio bearer parameters, transits from CELL_DCH to CELL_FACH state, and stops E-DCH transmission according to the received RADIO BEARER RECONFIGURATION message.

8.2.2.45.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A13 (FDD or 3.84Mcps TDD or 7.68Mcps TDD )/A11(1.28Mcps TDD) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only)
- UE supports E-PUCH (TDD only)

Test Procedure

The UE has a radio bearer mapped to the E-DCH/HS-DSCH and the signalling radio bearers mapped on E-DCH/DCH.

The SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it stops E-DCH transmission and HS-DSCH reception, moves to CELL_FACH state and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

Then, SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it moves to CELL_DCH state, resumes E-DCH transmission and HS-DSCH reception and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Stop of E-DCH transmission and HS-DSCH reception and transit to CELL_FACH state, |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Start of E-DCH transmission and HS-DSCH reception and transit to CELL_DCH state |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |

| Information Element | Value/remark |
|---|---|
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |

| Information Element | Value/remark |
|---|---|
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |

| Information Element | Value/remark |
|---|---|
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |

RADIO BEARER RECONFIGURATION (Step 3) (FDD or 3.84Mcps TDD or 7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | Not present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |

| Information Element | Value/remark |
|---|---|
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |

| Information Element | Value/remark |
|---|---|
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |

| Information Element | Value/remark |
|---|---|
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB stop/continue | Not Present |
| Added or Reconfigured UL TrCH information<br>Added or Reconfigured DL TrCH information<br>Uplink DPCH info<br>E-DCH info<br>Downlink HS-PDSCH Information<br>Downlink information for each radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |

RADIO BEARER RECONFIGURATION (Step 3)(1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | Not present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |

| Information Element | Value/remark |
|---|---|
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |

| Information Element | Value/remark |
|---|---|
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |

| Information Element | Value/remark |
|---|---|
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |
| - RB stop/continue | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP |
| Added or Reconfigured DL TrCH information | message found in TS 34.108 clause 9 under condition |
| Uplink DPCH info | A12. |
| E-DCH info | |
| Downlink HS-PDSCH Information | |
| Downlink information for each radio link list | |

### 8.2.2.45.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 3, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

## 8.2.2.46 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (hard handover to another frequency, start and stop of E-DCH transmission)

### 8.2.2.46.1 Definition and applicability

All UEs which support FDD and HS-PDSCH and E-DPDCH or all UEs which support TDD and HS-PDSCH and E-PUCH.

### 8.2.2.46.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable E_DCH_TRANSMISSION shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH info", including the IE "E-DPCCH info" and the IE "E-DPDCH info".
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH and E-HICH reception procedures;

1> For FDD:

2> stop any E-RGCH reception procedures.

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures.

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> act as if the IE "MAC-es/e reset indicator" was received and set to TRUE;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2>perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AGCH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH and E-DPDCH transmission procedures.

…

1> for FDD:

2> if the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value(s) in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

1> for TDD:

2> if the IE "New E-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

If, after the completion of this procedure, the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> clear the variable E-RNTI.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

1> for TDD:

2> use the value of New E-RNTI stored in the variable E_RNTI as the UE identity in the E-AGCH reception procedure and the E-RUCCH transmission procedure in the physical layer.

…

If the IE "Added or Reconfigured UL TrCH information" is included then the UE shall:

1> for the transport channel identified by the IE "UL Transport Channel Identity" and IE "Uplink transport channel type":

2> perform the actions for the IE "Transport Format Set" as specified in subclause 8.6.5.1.

NOTE: The UE stores the UL transport channel configuration until it is explicitly deleted by a message containing the IE "Deleted UL TrCH information" or the UE leaves RRC Connected mode.

1> if the choice "UL parameters" is set to 'E-DCH':

2> for FDD:

3> apply the values of the IE "E-DCH Transmission Time Interval" and the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for TDD:

3> apply the value of the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for the IE "HARQ Info for E-DCH":

3> perform the actions specified in subclause 8.6.5.17.

2> if the IE "Added or Reconfigured E-DCH MAC-d Flow list " is included:

3> for each MAC-d flow identified by the IE "Mac-d flow identity":

4> perform the actions as specified in subclause 8.6.5.18.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "E-DCH Transmission Time Interval" is included, the UE shall:

1> store the received TTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> apply the TTI as signalled in the IE "E-DCH Transmission Time Interval" on the E-DPDCH.

…

If the IE "HARQ Info for E-DCH" is included, the UE shall:

1> store the received configuration;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use a redundancy version for each HARQ transmission as configured by the IE "HARQ RV Configuration".

…

If the IE "Added or reconfigured E-DCH MAC-d flow" is included, the UE shall:

1> if the IE "E-DCH MAC-d flow power offset" is included:

2> configure the power offset indicated in the IE "E-DCH MAC-d flow power offset" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow maximum number of retransmissions" is included:

2> configure the maximum number of retransmissions indicated in the IE "E-DCH MAC-d flow maximum number of retransmissions" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> for 1.28 Mcps TDD, if the IE "E-DCH MAC-d flow retransmission timer" is included:

2> configure the retransmission timer for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU’s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

1> else:

2> if previously the IE "E-DCH MAC-d flow multiplexing list" was already received for this E-DCH MAC-d flow:

3> continue to only multiplex E-DCH PDU’s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed according to the previously received IE "E-DCH MAC-d flow multiplexing list".

2> else (never received the IE "E-DCH MAC-d flow multiplexing list" for this E-DCH MAC-d flow):

3> allow multiplexing of MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from any other E-DCH MAC-d flow in the same MAC-e PDU.

1> for FDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled transmission grant HARQ process allocation" is configured for this MAC-d flow:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission grant HARQ process allocation", with a total contribution from this MAC-d flow (i.e. including MAC-e/es headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

3> else:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e PDU transmitted by any HARQ process, with a total contribution from this MAC-d flow (i.e. including MAC-e/es headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDU's for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH/E-RGCH (see [15]).

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity").

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDUs for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH (see [15]).

1> perform the actions as specified in subclause 8.5.21;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the UE is in TDD mode and shared transport channels are assigned to the UE:

3> start to receive the indicated Secondary CCPCH.

2> if the UE is in TDD mode and no shared transport channels are assigned to the UE:

3> set the variable UNSUPPORTED_CONFIGURATION to TRUE.

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link and no longer consider any other radio link as serving HS-DSCH radio link.

2> For FDD:

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link.

3> if the IE "E-AGCH Info" is included for the serving E-DCH radio link:

4> store the newly received E-AGCH configuration.

NOTE: The UTRAN should always include the IE "E-AGCH info" if the serving E-DCH radio link indicated in the message is another radio link than the serving E-DCH radio link prior to the procedure.

3> if the IE "E-HICH information" is included:

4> store this E-HICH configuration for the concerning radio link.

3> if the IE "E-HICH information" is included or previously stored:

4> store this E-RGCH configuration for the concerning radio link, if included.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for TDD:

3> if the IE "E-AGCH Info" is included:

4> store the newly received E-AGCH configuration.

3> if the IE "E-HICH information" is included:

4> store the E-HICH configuration.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link;

4> if the serving HS-DSCH radio link was another radio link than this radio link prior to reception of the message and the IE "H-RNTI" is not included:

5> clear the variable H_RNTI.

3> if the IE "Serving HS-DSCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving HS-DSCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving HS-DSCH radio link.

3> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link;

4> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:

5> if the IE "New Primary E-RNTI" is not included:

6> clear the Primary E-RNTI stored in the variable E_RNTI.

5> if the IE "New Secondary E-RNTI" is not included:

6> clear the Secondary E-RNTI stored in the variable E_RNTI.

3> if the IE "Serving E-DCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving E-DCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving E-DCH radio link.

3> if the IE "E-HICH release indicator" is present:

4> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.

3> if the IE "E-RGCH release indicator" is present:

4> delete the stored E-RGCH configuration for this RL.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> For TDD:

3> if the IE "H-RNTI" is not included and the primary CCPCH has changed:

4> clear the variable H_RNTI.

3> determine the value for the HS-DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

2> for TDD:

3> if the IE "New E-RNTI" is not included:

4> clear the variable E_RNTI.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:

3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> for FDD:

2> if the IE "E-DPCCH Info" is included:

3> store the newly received E-DPCCH configuration.

2> if the IE "E-DPDCH Info" is included:

3> store the newly received E-DPDCH configuration.

2> if the IE "UL 16QAM settings" is not included:

3> indicate to lower layers to stop any operation in 16QAM mode.

1> for 3.84/7.68 Mcps TDD:

2> if the IE "E-RUCCH Info" is included:

3> store the newly received E-RUCCH configuration.

2> if the IE "E-PUCH Info" is included:

NOTE 1: The UTRAN should ensure the ordering of the E-TFCI table in increasing transmission power, by correct setting of the reference E-TFCI power offsets.

NOTE 2: If a reference E-TFCI signalled to the UE is outside the UE physical channel capability, the UE behaviour is unspecified.

NOTE 2a: If E-TFCI boost is signalled to the UE and a reference E-TFCI <= E-TFCI Boost is signalled to the UE with a Reference E-TFCI PO of value 30 or 31, the UE behaviour is unspecified.

1> if the IE "MAC-es/e reset indicator" is included:

2> reset the MAC-es/e entity [15].

NOTE 3: If the IE "MAC-es/e reset indicator" is not set to TRUE in case the IE "E-DCH Transmission Time Interval" is reconfigured, the UE behaviour is unspecified.

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> configure the UL E-DPCCH in accordance with the stored IE "E-DPCCH" configuration;

2> configure the MAC with the stored IE "E-DPDCH" configuration and/or the information contained in IE "Scheduled Transmission configuration".

1> for TDD:

2> configure the E-RUCCH with the stored E-RUCCH configuration;

2> configure the MAC with the stored E-PUCH configuration.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.28, 8.6.3.14, 8.6.5.5, 8.6.5.16, 8.6.5.17, 8.6.5.18, 8.6.6.4, 8.6.6.37

### 8.2.2.46.3 Test purpose

To confirm that the UE starts and stops transmitting the E-DCH, while maintaining HS-DSCH reception, in conjunction with a interfrequency hard handover without prior measurement on the target frequency according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.46.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 and 6 are active.

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A12 (FDD or 3.84Mcps TDD or 7.68Mcps TDD )/A11(1.28Mcps TDD) in cell 1 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only)
- UE supports E-PUCH (TDD only)

Test Procedure

**Table 8.2.2.46**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency ($f_1$) | | High Range Test Frequency ($f_2$) | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -70 | -70 | -60 |

Table 8.2.2.46 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The SS has configured its downlink transmission power settings according to columns "T0" in table 8.2.2.46.

The UE is in cell 1 and has a radio bearer mapped to the E-DCH/HS-DSCH and the signalling radio bearers mapped on DCH/DCH.

The SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message instructing the UE to perform a timing re-initialised interfrequency hard handover to cell 6 and stop E-DCH transmission but keep HS-DSCH reception. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC in cell 6.

The SS switches its downlink transmission power settings to columns "T0" and transmits a RADIO BEARER RECONFIGURATION message instructing the UE to perform an interfrequency hard handover to cell 1 and resume E-DCH transmission. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC in cell 1.

SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.2.46. |
| 2 | ← | | RADIO BEARER RECONFIGURATION | Hard handover to another frequency and stop of E-DCH transmission, |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE transmits this message in cell 6. |
| 4 | | SS | | The SS switches its downlink transmission power settings to columns "T0" in table 8.2.2.46. |
| 5 | ← | | RADIO BEARER RECONFIGURATION | Hard handover to another frequency and start of E-DCH transmission. |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE transmits this message in cell 1. |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 2) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |

| Information Element | Value/remark |
|---|---|
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | 0 |
| - Downlink DPCH power control information | Not Present |
| - Downlink rate matching restriction information | Not Present |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set |
| - DPCH compressed mode info | Not present |
| - TX Diversity mode | Not Present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | FDD |
| - Primary CPICH info | Set to the scrambling code for cell 6 |
| - Cell ID | Not present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | FALSE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | FDD |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 |
| - Secondary CPICH info | Not present |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set |
| - Secondary scrambling code | 2 |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Code number | Any value between 0 and Spreading factor-1 |
| - Scrambling code change | Not Present |
| - TPC combination index | 0 |
| - Closed loop timing adjustment mode | Not present |

RADIO BEARER RECONFIGURATION (Step 2) (3.84Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |

| Information Element | Value/remark |
|---|---|
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN downlink(Nt) | Same downlink UARFCN as used for cell 6 |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | 0 |
| - Downlink DPCH power control information | Not Present |
| - CHOICE mode | TDD |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84Mcps |
| - Default DPCH Offset Value | Arbitrary set to value 0..7 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Set to the same as cell 6 |

RADIO BEARER RECONFIGURATION (Step 2) (7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |

| Information Element | Value/remark |
|---|---|
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN downlink(Nt) | Same downlink UARFCN as used for cell 6 |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | 0 |
| - Downlink DPCH power control information | Not Present |
| - CHOICE mode | TDD |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68Mcps |
| - Default DPCH Offset Value | Arbitrary set to value 0..7 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Set to the same as cell 6 |

RADIO BEARER RECONFIGURATION (Step 2) (1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |

| Information Element | Value/remark |
|---|---|
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN downlink(Nt) | Same downlink UARFCN as used for cell 6 |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | 0 |
| - Downlink DPCH power control information | Not Present |
| - CHOICE mode | TDD |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Default DPCH Offset Value | Arbitrary set to value 0..7 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Set to the same as cell 6 |

RADIO BEARER RECONFIGURATION (Step 5)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |

| Information Element | Value/remark |
|---|---|
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| UL Transport channel information common for all transport channels | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Added or Reconfigured UL TrCH information | To achieve the same set as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12:<br>1 E-DCH added, 1 DCH reconfigured. |
| - Uplink transport channel type | E-DCH |
| - CHOICE UL parameters | E-DCH |
| - E-DCH Transmission Time Interval | 10 ms |
| - HARQ info for E-DCH | |
| - HARQ RV Configuration | rvtable |
| - Added or reconfigured E-DCH MAC-d flow | |
| - E-DCH MAC-d flow identity | 2 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 1 |
| Uplink DPCH info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 but without HARQ information which is already stored in the UE |
| - Uplink DPCH power control info | |
| - DPCCH power offset | -40 (-80dB) |
| - PC Preamble | 1 frame |
| - SRB delay | 7 frames |
| - Power Control Algorithm | Algorithm1 |
| - TPC step size | 0 (1dB) |
| - $\Delta_{ACK}$ | Not Present |
| - $\Delta_{NACK}$ | Not Present |
| - Ack-Nack repetition factor | Not Present |
| - HARQ_preamble_mode | 0 |
| - Scrambling code type | Long |
| - Scrambling code number | 0 (0 to 16777215) |
| - Number of DPDCH | Not Present(1) |
| - spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of FBI bit | Reference to TS34.108 clause 6.10 Parameter Set |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | 0 |

| Information Element | Value/remark |
|---|---|
| - Downlink DPCH power control information | Not Present |
| - Downlink rate matching restriction information | Not Present |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set |
| - DPCH compressed mode info | Not present |
| - TX Diversity mode | Not Present |
| - SSDT information | Not Present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | FDD |
| - Primary CPICH info | Set to the scrambling code for cell 1 |
| - Cell ID | Not present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | FDD |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 |
| - Secondary CPICH info | Not present |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set |
| - Secondary scrambling code | 2 |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Code number | Any value between 0 and Spreading factor-1 |
| - Scrambling code change | Not Present |
| - TPC combination index | 0 |
| - SSDT cell identity | Not present |
| - Closed loop timing adjustment mode | Not present |
| - E-AGCH Info | |
| - E-AGCH Channelisation Code | 10 |
| - CHOICE E-HICH Information | |
| - E-HICH Information | |
| - Channelisation code | 4 |
| - Signature sequence | 1 |
| - CHOICE E-RGCH Information | |
| - E-RGCH Information | |
| - Signature Sequence | 0 |
| - RG combination index | 0 |

RADIO BEARER RECONFIGURATION (Step 5) (1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |

| Information Element | Value/remark |
|---|---|
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| - RB stop/continue | Not Present |
| UL Transport channel information common for all transport channels | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Added or Reconfigured UL TrCH information | To achieve the same set as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11:<br>1 E-DCH added, 1 DCH reconfigured. |
| - Uplink transport channel type | E-DCH |
| - CHOICE UL parameters | E-DCH |
| - CHOICE | TDD |
| - HARQ info for E-DCH | |
| - HARQ RV Configuration | rvtable |
| - Added or reconfigured E-DCH MAC-d flow | |
| - E-DCH MAC-d flow identity | 2 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.11 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.11 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.11 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.11 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.11 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.11 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.11 Parameter Set |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 1 |
| Uplink DPCH info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11 but without HARQ information which is already stored in the UE |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |

| Information Element | Value/remark |
|---|---|
| - CFN-targetSFN frame offset | 0 |
| - Downlink DPCH power control information | |
| - CHOICE mode | TDD |
| - TPC Step Size | 1 |
| - MAC-d HFN initial value | Not Present |
| - CHOICE mode | TDD |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Default DPCH Offset Value | Not Present |
| - MAC-hs reset indicator | TRUE |
| - MAC-hs reset indicator | 1 |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - Choice mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Set to the same as cell 1 |

RADIO BEARER RECONFIGURATION (Step 5) (3.84Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| UL Transport channel information common for all transport channels | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Added or Reconfigured UL TrCH information | To achieve the same set as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12:<br>1 E-DCH added, 1 DCH reconfigured. |
| - Uplink transport channel type | E-DCH |
| - CHOICE UL parameters | E-DCH |
| - CHOICE | TDD |
| - HARQ info for E-DCH | |
| - HARQ RV Configuration | rvtable |
| - Added or reconfigured E-DCH MAC-d flow | |
| - E-DCH MAC-d flow identity | 2 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 1 |
| Uplink DPCH info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 but without HARQ information which is already stored in the UE |
| - Uplink DPCH power control info | |
| - CHOICE mode | -40 (-80dB) |
| - UL target SIR | 1 frame |
| - CHOICE UL OL PC info | 7 frames |
| - CHOICE mode | Algorithm1 |
| - Uplink Timing Advance Control | 0 (1dB) |
| - CHOICE Timing Advance | Not Present |
| - CHOICE TDD option | Not Present |
| - UL Timing Advance | Not Present |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | 0 |
| - Downlink DPCH power control information | Not Present |
| - Downlink rate matching restriction information | Not Present |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set |
| - DPCH compressed mode info | Not present |
| - TX Diversity mode | Not Present |
| - SSDT information | Not Present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | TRUE |

| Information Element | Value/remark |
|---|---|
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CPICH info | Set to the scrambling code for cell 1 |
| - Cell ID | Not present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | TDD |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 |
| - Secondary CPICH info | Not present |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set 2 |
| - Secondary scrambling code | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Code number | Any value between 0 and Spreading factor-1 |
| - Scrambling code change | Not Present |
| - TPC combination index | 0 |
| - SSDT cell identity | Not present |
| - Closed loop timing adjustment mode | Not present |
| - E-AGCH Info | |
| - E-AGCH Channelisation Code | 10 |
| - CHOICE E-HICH Information | |
| - E-HICH Information | |
| - Channelisation code | 4 |
| - Signature sequence | 1 |
| - CHOICE E-RGCH Information | |
| - E-RGCH Information | |
| - Signature Sequence | 0 |
| - RG combination index | 0 |

#### 8.2.2.46.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message in cell 6.

After step 5, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message in cell 1.

### 8.2.2.47 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (frequency modification, start and stop of E-DCH transmission)

#### 8.2.2.47.1 Definition

All UEs which support FDD and HS-PDSCH and E-DPDCH and all UEs which support TDD and HS-PDSCH and E-PUCH.

#### 8.2.2.47.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable E_DCH_TRANSMISSION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH info", including the IE "E-DPCCH info" and the IE "E-DPDCH info";
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> for non-scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-PUCH info";
- IE "Non-scheduled transmission grant info".

2> for scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH and E-HICH reception procedures;

1> For FDD:

2> stop any E-RGCH reception procedures.

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures.

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2> if scheduled transmission is configured, perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, if scheduled transmission is configured, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AICH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH, E-DPDCH, E-RUCCH and/or E-PUCH transmission procedures.

…

If the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" (FDD only) are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the new value(s) in the variable E_RNTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

If, after the completion of this procedure, the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> clear the variable E-RNTI.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

1> for TDD:

2> use the value of New Primary E-RNTI stored in the variable E_RNTI as the UE identity in the E-AGCH reception procedure and the E-RUCCH transmission procedure in the physical layer.

…

If the IE "Added or Reconfigured UL TrCH information" is included then the UE shall:

1> for the transport channel identified by the IE "UL Transport Channel Identity" and IE "Uplink transport channel type":

2> perform the actions for the IE "Transport Format Set" as specified in subclause 8.6.5.1.

NOTE: The UE stores the UL transport channel configuration until it is explicitly deleted by a message containing the IE "Deleted UL TrCH information" or the UE leaves RRC Connected mode.

1> if the choice "UL parameters" is set to 'E-DCH':

2> for FDD:

3> apply the values of the IE "E-DCH Transmission Time Interval" and the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for TDD:

3> apply the value of the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for the IE "HARQ Info for E-DCH":

3> perform the actions specified in subclause 8.6.5.17.

2> if the IE "Added or Reconfigured E-DCH MAC-d Flow list " is included:

3> for each MAC-d flow identified by the IE "Mac-d flow identity":

4> perform the actions as specified in subclause 8.6.5.18.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

NOTE: In case of multiple E-DCH MAC-d flows, IE "Added or Reconfigured UL TrCH information" is only included once. If the IE "Added or Reconfigured UL TrCH information" is included more than once with the IE "Uplink transport channel type" set to 'E-DCH', the UE behaviour is unspecified.

…

If the IE "Deleted UL TrCH information" is included the UE shall:

1> if an E-DCH MAC-d flow is requested to be deleted:

2> delete any information about the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity";

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "E-DCH Transmission Time Interval" is included, the UE shall:

1> store the received TTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> apply the TTI as signalled in the IE "E-DCH Transmission Time Interval" on the E-DPDCH.

If the received "E-DCH Transmission Time Interval" is 2 ms and the previously stored TTI was 10 ms:

1> not send any data on E-DPDCH in first 8 TTIs after activation time of new TTI.

…

If the IE "HARQ Info for E-DCH" is included, the UE shall:

1> store the received configuration;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use a redundancy version for each HARQ transmission as configured by the IE "HARQ RV Configuration".

…

If the IE "Added or reconfigured E-DCH MAC-d flow" is included, the UE shall:

1> if the IE "E-DCH MAC-d flow power offset" is included:

2> configure the power offset indicated in the IE "E-DCH MAC-d flow power offset" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow maximum number of retransmissions" is included:

2> configure the maximum number of retransmissions indicated in the IE "E-DCH MAC-d flow maximum number of retransmissions" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> for 1.28 Mcps TDD, if the IE "E-DCH MAC-d flow retransmission timer" is included:

2> configure the retransmission timer for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

1> else:

2> if previously the IE "E-DCH MAC-d flow multiplexing list" was already received for this E-DCH MAC-d flow:

3> continue to only multiplex E-DCH PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed according to the previously received IE "E-DCH MAC-d flow multiplexing list".

2> else (never received the IE "E-DCH MAC-d flow multiplexing list" for this E-DCH MAC-d flow):

3> allow multiplexing of MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from any other E-DCH MAC-d flow in the same MAC-e PDU.

1> for FDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled transmission grant HARQ process allocation" is configured for this MAC-d flow:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e or MAC-i PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission grant HARQ process allocation", with a total contribution from this MAC-d flow (i.e. including MAC-e/es or MAC-i/is headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

3> else:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e or MAC-i PDU transmitted by any HARQ process, with a total contribution from this MAC-d flow (i.e. including MAC-e/es or MAC-i/is headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDU's for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH/E-RGCH (see [15]).

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e or MAC-i PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (for 3.84 Mcps TDD and 7.68 Mcps TDD, as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity"; for 1.28 Mcps TDD, as determined from the IEs "Activation Time", "Subframe number", "Resource Duration" and "Resource Periodicity", and the calculation of assigned Non-scheduled transmission grant is specified in subclause 8.6.6.16a).

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDUs for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH (see [15]).

1> perform the actions as specified in subclause 8.5.21;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the UE is in TDD mode and shared transport channels are assigned to the UE:

3> start to receive the indicated Secondary CCPCH.

2> if the UE is in TDD mode and no shared transport channels are assigned to the UE:

3> set the variable UNSUPPORTED_CONFIGURATION to TRUE.

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link and no longer consider any other radio link as serving HS-DSCH radio link.

2> For FDD:

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link.

3> if the IE "E-AGCH Info" is included for the serving E-DCH radio link:

4> store the newly received E-AGCH configuration.

NOTE: The UTRAN should always include the IE "E-AGCH info" if the serving E-DCH radio link indicated in the message is another radio link than the serving E-DCH radio link prior to the procedure.

3> if the IE "E-HICH information" is included:

4> store this E-HICH configuration for the concerning radio link.

3> if the IE "E-HICH information" is included or previously stored:

4> store this E-RGCH configuration for the concerning radio link, if included.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for TDD:

3> if the IE "E-AGCH Info" is included:

4> store the newly received E-AGCH configuration.

3> if the IE "E-HICH information" is included:

4> store the E-HICH configuration.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link;

4> if the serving HS-DSCH radio link was another radio link than this radio link prior to reception of the message and the IE "H-RNTI" is not included:

5> clear the variable H_RNTI.

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'FALSE' and this radio link was considered the serving HS-DSCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving HS-DSCH radio link.

3> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link;

4> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:

5> if the IE "New Primary E-RNTI" is not included:

6> clear the Primary E-RNTI stored in the variable E_RNTI.

5> if the IE "New Secondary E-RNTI" is not included:

6> clear the Secondary E-RNTI stored in the variable E_RNTI.

3> if the IE "Serving E-DCH radio link indicator" is set to 'FALSE' and this radio link was considered the serving E-DCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving E-DCH radio link.

3> if the IE "E-HICH release indicator" is present:

4> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.

3> if the IE "E-RGCH release indicator" is present:

4> delete the stored E-RGCH configuration for this RL.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> For TDD:

3> if the IE "H-RNTI" is not included and the primary CCPCH has changed:

4> clear the variable H_RNTI.

3> determine the value for the HS-DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

2> for TDD:

3> if the IE "New Primary E-RNTI" is not included:

4> clear the variable E_RNTI.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:

3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> for FDD:

2> if the IE "E-DPCCH Info" is included:

3> store the newly received E-DPCCH configuration.

2> if the IE "E-DPDCH Info" is included:

3> store the newly received E-DPDCH configuration.

2> if the IE "UL 16QAM settings" is not included:

3> indicate to lower layers to stop any operation in 16QAM mode.

1> for 3.84/7.68 Mcps TDD:

2> if the IE "E-RUCCH Info" is included:

3> store the newly received E-RUCCH configuration.

2> if the IE "E-PUCH Info" is included:

NOTE 1: The UTRAN should ensure the ordering of the E-TFCI table in strictly increasing order of transmission power prior to quantization, by correct setting of the reference E-TFCI power offsets otherwise the UE behaviour is unspecified.

NOTE 2: If a reference E-TFCI signalled to the UE is outside the UE physical channel capability, the UE behaviour is unspecified.

NOTE 2a: If E-TFCI boost is signalled to the UE and a reference E-TFCI <= E-TFCI Boost is signalled to the UE with a Reference E-TFCI PO of value 30 or 31, the UE behaviour is unspecified.

1> if the IE "MAC-es/e reset indicator" is included:

2> reset the MAC-es/e or MAC-i/is entity [15].

NOTE 3: If the IE "MAC-es/e reset indicator" is not set to TRUE in case the IE "E-DCH Transmission Time Interval" is reconfigured, the UE behaviour is unspecified.

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> configure the UL E-DPCCH in accordance with the stored IE "E-DPCCH" configuration;

2> configure the MAC with the stored IE "E-DPDCH" configuration and/or the information contained in IE "Scheduled Transmission configuration".

1> for TDD:

2> configure the E-RUCCH with the stored E-RUCCH configuration;

2> configure the MAC with the stored E-PUCH configuration.

Reference

3GPP TS 25.331 clauses 8.2.2.4, 8.5.28, 8.6.3.14, 8.6.5.5, 8.6.5.7, 8.6.5.16 (FDD only), 8.6.5.17, 8.6.5.18, 8.6.6.4, 8.6.6.37

### 8.2.2.47.3 Test purpose

1) To confirm that the UE reconfigures radio bearer parameters, transits from CELL_DCH to CELL_FACH state with frequency modification and stops E-DCH transmission according to the received a RADIO BEARER RECONFIGURATION message.

2) To confirm that the UE reconfigures radio bearer parameters, transits from CELL_FACH to CELL_DCH state with frequency modification and starts E-DCH transmission according to the received a RADIO BEARER RECONFIGURATION message.

### 8.2.2.47.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

UE: PS_DCCH_DTCH_E-DCH/HS-DSCH (state 6-18) under condition A13, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statements

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only)
- UE supports E-PUCH (TDD only)

Test Procedure

**Table 8.2.2.47**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency ($f_1$) | | High Range Test Frequency ($f_2$) | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -70 | -60 | -70 |

Table 8.2.2.47 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH and E-DCH in cell 1.The SS has configured its downlink transmission power setting according to columns “T0” in table 8.2.2.47.

The SS then applies the power level according to “T1” in table 8.2.2.47 and transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it stops HS-DSCH reception and E-DCH transmission, moves to CELL_FACH state in cell 6 and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

Then, the SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it moves to CELL_DCH state in cell 1, resumes the HS-DSCH reception and E-DCH transmission and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. The SS calls for generic procedure C.3 to check the UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Stop of HS-DSCH reception and E-DCH transmission |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Start of HS-DSCH reception and E-DCH transmission |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1) (FDD)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RB MuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RB MuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |

| Information Element | Value/remark |
|---|---|
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |

| Information Element | Value/remark |
|---|---|
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH for PS domain) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | |

| Information Element | Value/remark |
|---|---|
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS25.101 [11] |
| - UARFCN downlink (Nd) | Set to the frequency of cell 6 |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as used for cell 6 |

RADIO BEARER RECONFIGURATION (Step 1)( 1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RB MuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |

| Information Element | Value/remark |
|---|---|
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RB MuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |

| Information Element | Value/remark |
|---|---|
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH for PS domain) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |

| Information Element | Value/remark |
|---|---|
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN downlink(Nt) | Same downlink UARFCN as used for cell 6 |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Set to the same as cell 6 |

RADIO BEARER RECONFIGURATION (Step 1) (3.84Mcps TDD and 7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RB MuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |

| Information Element | Value/remark |
|---|---|
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.3.4.5.1 (3.84Mcps TDD), 6.11.6.4.5.1 (7.68Mcps TDD) |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RB MuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.3.4.5.1 (3.84Mcps TDD), 6.11.6.4.5.1 (7.68Mcps TDD) |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |

| Information Element | Value/remark |
|---|---|
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.3.4.5.1 (3.84Mcps TDD), 6.11.6.4.5.1 (7.68Mcps TDD) |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |

| Information Element | Value/remark |
|---|---|
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.3.4.5.1 (3.84Mcps TDD), 6.11.6.4.5.1 (7.68Mcps TDD) |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH for PS domain) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |

| Information Element | Value/remark |
|---|---|
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | |
| - Choice Mode | TDD |
| - UARFCN (Nt) | Set to the frequency of cell 6 |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Choice Mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Set to the same as used for cell 6 |

RADIO BEARER RECONFIGURATION (Step 3) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |

| Information Element | Value/remark |
|---|---|
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |

| Information Element | Value/remark |
|---|---|
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH for PS domain) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Trasnport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| UL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| DL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS25.101 [11] |
| - UARFCN downlink (Nd) | Set to the frequency of cell 1 |
| Maximum allowed UL TX power | Not Present |
| Uplink DPCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| E-DCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13 with the following exception: |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as used for cell 1 |

RADIO BEARER RECONFIGURATION (Step 3)( 1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |

| Information Element | Value/remark |
|---|---|
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |

| Information Element | Value/remark |
|---|---|
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH for PS domain) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Trasnport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| UL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| DL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN downlink (Nd) | Set to the frequency of cell 1 |
| Maximum allowed UL TX power | Not Present |
| Uplink DPCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| E-DCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 with the following exception: |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Set to the same as cell 1 |

RADIO BEARER RECONFIGURATION (Step 3) (3.84Mcps TDD and 7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |

| Information Element | Value/remark |
|---|---|
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |

| Information Element | Value/remark |
|---|---|
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Trasnport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH for PS domain) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Trasnport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| UL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| DL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Frequency info | |
| - Choice Mode | TDD |
| - UARFCN (Nt) | Set to the frequency of cell 1 |
| Maximum allowed UL TX power | Not Present |
| Uplink DPCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| E-DCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13 with the following exception: |
| -Downlink information for each radio link | |
| - Choice Mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Set to the same as used for cell 1 |

#### 8.2.2.47.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 3, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

### 8.2.2.47a Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (frequency modification, start and stop of E-DCH transmission, F-DPCH Configured)

#### 8.2.2.47a.1 Definition

All UEs which support FDD and HS-PDSCH and E-DPDCH.

#### 8.2.2.47a.2 Conformance requirement

Same conformance requirement as in clause 8.2.2.47.2

#### 8.2.2.47a.3 Test purpose

Same test purpose as in clause 8.2.2.47.3

#### 8.2.2.47a.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

UE: PS_DCCH_DTCH_E-DCH/HS-DSCH (state 6-18) under condition A14, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statements

- UE supports FDD
- UE supports HS-PDSCH

- UE supports E-DPDCH
- UE fully supports F-DPCH

Test Procedure

Same test procedure as in clause 8.2.2.47.4

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RB MuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |

| Information Element | Value/remark |
|---|---|
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RB MuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH for PS domain) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |

| Information Element | Value/remark |
|---|---|
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 1 |
| Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS25.101 [11] |
| - UARFCN downlink (Nd) | Set to the frequency of cell 6 |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as used for cell 6 |

RADIO BEARER RECONFIGURATION (Step 3)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |

| Information Element | Value/remark |
|---|---|
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Trasnport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Trasnport channel identity | Not Present |

| Information Element | Value/remark |
|---|---|
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Trasnport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |

| Information Element | Value/remark |
|---|---|
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Trasnport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH for PS domain) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |

| Information Element | Value/remark |
|---|---|
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Trasnport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |
| - RB stop/continue | Not Present |
| UL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| DL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS25.101 [11] |
| - UARFCN downlink (Nd) | Set to the frequency of cell 1 |
| Maximum allowed UL TX power | Not Present |
| Uplink DPCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| E-DCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14 with the following exception; |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as used for cell 1 |

#### 8.2.2.47a.5 Test requirements

Same test requirement as in clause 8.2.2.47.5

### 8.2.2.48 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of E-DCH transmission)

#### 8.2.2.48.1 Definition and applicability

All UEs which support FDD and HS-PDSCH and E-DPDCH and all UEs which support TDD and HS-PDSCH and E-PUCH.

8.2.2.48.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…….

The variable E_DCH_TRANSMISSION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH info", including the IE "E-DPCCH info" and the IE "E-DPDCH info";
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> for non-scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-PUCH info";
- IE "Non-scheduled transmission grant info".

2> for scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH and E-HICH reception procedures;

1> For FDD:

2> stop any E-RGCH reception procedures.

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures.

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2> if scheduled transmission is configured, perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, if scheduled transmission is configured, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AICH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH, E-DPDCH, E-RUCCH and/or E-PUCH transmission procedures.

…….

If the IE "Added or reconfigured E-DCH MAC-d flow" is included, the UE shall:

1> if the IE "E-DCH MAC-d flow power offset" is included:

2> configure the power offset indicated in the IE "E-DCH MAC-d flow power offset" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow maximum number of retransmissions" is included:

2> configure the maximum number of retransmissions indicated in the IE "E-DCH MAC-d flow maximum number of retransmissions" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> for 1.28 Mcps TDD, if the IE "E-DCH MAC-d flow retransmission timer" is included:

2> configure the retransmission timer for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU’s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

1> else:

2> if previously the IE "E-DCH MAC-d flow multiplexing list" was already received for this E-DCH MAC-d flow:

3> continue to only multiplex E-DCH PDU’s from the E-DCH MAC-d flow indicated in the IE “E-DCH MAC-d flow identity” with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed according to the previously received IE “E-DCH MAC-d flow multiplexing list”.

2> else (never received the IE "E-DCH MAC-d flow multiplexing list" for this E-DCH MAC-d flow):

3> allow multiplexing of MAC-d PDU's from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU's from any other E-DCH MAC-d flow in the same MAC-e PDU.

1> for FDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled transmission grant HARQ process allocation" is configured for this MAC-d flow:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e or MAC-i PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission grant HARQ process allocation", with a total contribution from this MAC-d flow (i.e. including MAC-e/es or MAC-i/is headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

3> else:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e or MAC-i PDU transmitted by any HARQ process, with a total contribution from this MAC-d flow (i.e. including MAC-e/es or MAC-i/is headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDU's for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH/E-RGCH (see [15]).

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e or MAC-i PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (for 3.84 Mcps TDD and 7.68 Mcps TDD, as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity"; for 1.28 Mcps TDD, as determined from the IEs "Activation Time", "Subframe number", "Resource Duration" and "Resource Periodicity", and the calculation of assigned Non-scheduled transmission grant is specified in subclause 8.6.6.16a).

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDUs for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH (see [15]).

1> perform the actions as specified in subclause 8.5.21;

……..

If the IE "Deleted UL TrCH information" is included the UE shall:

1> if an Uplink transport channel is requested to be deleted:

2> delete any information about the transport channel identified by the IE "UL TrCH identity" and the IE "Uplink transport channel type".

1> if an E-DCH MAC-d flow is requested to be deleted:

2> delete any information about the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity";

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

Reference

3GPP TS 25.331 clauses 8.2.2.4, 8.5.28, 8.6.5.18 , 8.6.5.7

8.2.2.48.3 Test purpose

1. To confirm that the UE reconfigures the radio bearer parameters and stops E-DCH transmission according to the received RADIO BEARER RECONFIGURATION message.

2. To confirm that the UE reconfigures the radio bearer parameters and starts E-DCH transmission according to the received RADIO BEARER RECONFIGURATION message.

8.2.2.48.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A12 (FDD) /A11(1.28Mcps TDD), as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only)
- UE supports E-PUCH (TDD only)

Test Procedure

The UE is in CELL_DCH state and has a user radio bearer mapped on E-DCH/HS-DSCH established in cell 1.

The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to stop the transmission on E-DCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to start the transmission on E-DCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Stop of E-DCH transmission |
| 2 | | | | At the activation time, SS stops E-DCH reception from the UE. |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 4 | ← | | RADIO BEARER RECONFIGURATION | Start of E-DCH transmission |
| 5 | | | | At the activation time, SS resumes E-DCH reception from the UE. |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - CHOICE UL TrCH identity | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | Not Present |
| - MAC-hs queue to delete list | |
| - MAC-hs queue Id | 0 |
| - DCH quality target | Not present |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 6 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |

| | |
|---|---|
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |

RADIO BEARER RECONFIGURATION (Step 1)( 1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - CHOICE UL TrCH identity | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | Not Present |
| - MAC-hs queue to delete list | |
| - MAC-hs queue Id | 0 |
| - DCH quality target | Not present |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 6 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to clause 6.11 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.11 Parameter Set |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.11 Parameter Set |
| - Type of channel coding | Reference to clause 6.11 Parameter Set |
| - Coding Rate | Reference to clause 6.11 Parameter Set |

| | |
|---|---|
| - Rate matching attribute | Reference to clause 6.11 Parameter Set |
| - CRC size | Reference to clause 6.11 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |

RADIO BEARER RECONFIGURATION (Step 1) (3.84Mcps TDD and 7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - CHOICE UL TrCH identity | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | Not Present |
| - MAC-hs queue to delete list | |
| - MAC-hs queue Id | 0 |
| - DCH quality target | Not present |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 6 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set for 3.84Mcps TDD. Reference to clause 6.11 Parameter Set for 7.68Mcps TDD. |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set for 3.84Mcps TDD. Reference to clause 6.11 Parameter Set for 7.68Mcps TDD. |

| | |
|---|---|
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set for 3.84Mcps TDD. Reference to clause 6.11 Parameter Set for 7.68Mcps TDD. |
| - Type of channel coding | Reference to clause 6.10 Parameter Set for 3.84Mcps TDD. Reference to clause 6.11 Parameter Set for 7.68Mcps TDD. |
| - Coding Rate | Reference to clause 6.10 Parameter Set for 3.84Mcps TDD. Reference to clause 6.11 Parameter Set for 7.68Mcps TDD. |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set for 3.84Mcps TDD. Reference to clause 6.11 Parameter Set for 7.68Mcps TDD. |
| - CRC size | Reference to clause 6.10 Parameter Set for 3.84Mcps TDD. Reference to clause 6.11 Parameter Set for 7.68Mcps TDD. |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |

RADIO BEARER RECONFIGURATION (Step 4) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H –RNTI | '1010 1010 1010 1010' |
| New Primary E –RNTI | '1010 1010 1010 1010' |
| New Secondary E-RNTI | Not Present |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| UL Transport channel information common for all transport channels | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 |
| Deleted UL TrCH information | |
| - CHOICE UL TrCH identity | DCH-USCH |
| - UL TrCH type | DCH |
| - UL TrCH identity | 1 |
| Added or Reconfigured UL TrCH information | 1 E-DCH added |
| - Uplink transport channel type | E-DCH |
| - CHOICE UL parameters | E-DCH |
| - E-DCH Transmission Time Interval | 10 ms |
| - HARQ info for E-DCH | |
| - HARQ RV Configuration | rvtable |
| - Added or reconfigured E-DCH MAC-d flow | |
| - E-DCH MAC-d flow identity | 2 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| DL Transport channel information common for all transport channel | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 |
| Deleted DL TrCH information | |
| - CHOICE DL TrCH type | DCH |
| - DL Transport channel identity | 6 |

| | |
|---|---|
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |
| Uplink DPCH info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 but without HARQ information which is already stored in the UE |
| - Uplink DPCH power control info | |
| - DPCCH power offset | -40 (-80dB) |
| - PC Preamble | 1 frame |
| - SRB delay | 7 frames |
| - Power Control Algorithm | Algorithm1 |
| - TPC step size | 0 (1dB) |
| - $\Delta_{ACK}$ | Not Present |
| - $\Delta_{NACK}$ | Not Present |
| - Ack-Nack repetition factor | Not Present |
| - HARQ_preamble_mode | 0 |
| - Scrambling code type | Long |
| - Scrambling code number | 0 (0 to 16777215) |
| - Number of DPDCH | Not Present(1) |
| - spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of FBI bit | Reference to TS34.108 clause 6.10 Parameter Set |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set |
| Downlink information common for all radio links | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 |
| Downlink information for each radio link | |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - E-AGCH Info | |
| - E-AGCH Channelisation Code | 10 |
| - CHOICE E-HICH Information | |
| - E-HICH Information | |
| - Channelisation code | 4 |
| - Signature sequence | 1 |
| - CHOICE E-RGCH Information | |
| - E-RGCH Information | |
| - Signature Sequence | 0 |
| - RG combination index | 0 |

RADIO BEARER RECONFIGURATION (Step 4)( 1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H –RNTI | '1010 1010 1010 1010' |
| New Primary E –RNTI | '1010 1010 1010 1010' |
| New Secondary E-RNTI | Not Present |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| UL Transport channel information common for all transport channels | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 |
| Deleted UL TrCH information | |
| - UL TrCH type | DCH |
| - UL TrCH identity | 1 |
| Added or Reconfigured UL TrCH information | 1 E-DCH added |
| - Uplink transport channel type | E-DCH |
| - CHOICE UL parameters | E-DCH |
| - HARQ info for E-DCH | |
| - HARQ RV Configuration | rvtable |
| - Added or reconfigured E-DCH MAC-d flow | |
| - E-DCH MAC-d flow identity | 2 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| DL Transport channel information common for all transport channel | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11 |
| Deleted DL TrCH information | |
| - CHOICE DL TrCH type | DCH |
| - DL Transport channel identity | 6 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |

| | |
|---|---|
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |
| Uplink DPCH info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11 but without HARQ information which is already stored in the UE |
| Downlink information common for all radio links | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11 |
| Downlink information for each radio link | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11 |

RADIO BEARER RECONFIGURATION (Step 4) (3.84Mcps TDD and 7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H –RNTI | '1010 1010 1010 1010' |
| New Primary E –RNTI | '1010 1010 1010 1010' |
| New Secondary E-RNTI | Not Present |
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| UL Transport channel information common for all transport channels | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 |
| Deleted UL TrCH information | |
| - CHOICE UL TrCH identity | DCH-USCH |
| - UL TrCH type | DCH |
| - UL TrCH identity | 1 |
| Added or Reconfigured UL TrCH information | 1 E-DCH added |
| - Uplink transport channel type | E-DCH |
| - CHOICE UL parameters | E-DCH |
| - CHOICE mode | TDD |
| - HARQ info for E-DCH | |
| - HARQ RV Configuration | rvtable |
| - Added or reconfigured E-DCH MAC-d flow | |
| - E-DCH MAC-d flow identity | 2 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| DL Transport channel information common for all transport channel | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 |
| Deleted DL TrCH information | |
| - CHOICE DL TrCH type | DCH |
| - DL Transport channel identity | 6 |

| | |
|---|---|
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | Not Present |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |
| Uplink DPCH info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 but without HARQ information which is already stored in the UE |
| - Uplink DPCH power control info | |
| - CHOICE mode | TDD |
| - UL target SIR | Not Present |
| - CHOICE UL OL PC info | Broadcast UL OL PC info |
| - CHOICE mode | TDD |
| - Uplink Timing Advance Control | |
| - CHOICE Timing Advance | Enabled |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - UL Timing Advance | Determined by observed timing deviation of the RACH at the node B |
| - UL CCTrCH List | 1 CCTrCh |
| - TFCS Id | 1 |
| - UL target SIR | +20dB |
| - Activation time | Not present |
| - Duration | Not present |
| - Common timeslot info | |
| - 2nd interleaving mode | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - TFCI coding | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Puncturing Limit | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Repetition Period | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Repetition Length | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Uplink DPCH timeslots and codes | |
| - Dynamic SF usage | TRUE |
| - Timeslot number | The number of an uplink timeslot that has unassigned codes. |
| - TFCI existence | TRUE |
| - Midamble shift and burst type | |
| - CHOICE TDD option | 3.84 Mcps |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Midamble Allocation Mode | Default |
| - Midamble configuration | Choose lowest possible Kcell value given burst type |
| - CHOICE TDD option | 3.84 Mcps TDD or 7.68 Mcps TDD |
| - First timeslot Code List | Repeated (1,2) for each channelisation code assigned in the slot to meet the needs of clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD). |
| - Channelisation code | (i/SF) where i denotes an unassigned code matching the SF specified in clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD). |
| - CHOICE more timeslots | The presence of this IE depends upon the number of resources specified in clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) and the number of slots in which they are being assigned. |

| | |
|---|---|
| - UL CCTrCH List to Remove | Not present |
| - Uplink DPCH power control info | |
| - CHOICE mode | TDD |
| - UL target SIR | Not Present |
| - CHOICE UL OL PC info | Broadcast UL OL PC info |
| - CHOICE mode | TDD |
| - Uplink Timing Advance Control | |
| - CHOICE Timing Advance | Enabled |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - UL Timing Advance | Determined by observed timing deviation of the RACH at the node B |
| - UL CCTrCH List | 1 CCTrCh |
| - TFCS Id | 1 |
| - UL target SIR | +20dB |
| - Activation time | Not present |
| - Duration | Not present |
| - Common timeslot info | |
| - 2nd interleaving mode | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - TFCI coding | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Puncturing Limit | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Repetition Period | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Repetition Length | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Uplink DPCH timeslots and codes | |
| - Dynamic SF usage | TRUE |
| - Timeslot number | The number of an uplink timeslot that has unassigned codes. |
| - TFCI existence | TRUE |
| - Midamble shift and burst type | |
| - CHOICE TDD option | 3.84 Mcps |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set |
| - Midamble Allocation Mode | Default |
| - Midamble configuration | Choose lowest possible Kcell value given burst type |
| - CHOICE TDD option | 3.84 Mcps TDD or 7.68Mcps |
| - First timeslot Code List | Repeated (1,2) for each channelisation code assigned in the slot to meet the needs of clause 6.10 Parameter Set. (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Channelisation code | (i/SF) where i denotes an unassigned code matching the SF specified in clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD). |
| - CHOICE more timeslots | The presence of this IE depends upon the number of resources specified in clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) and the number of slots in which they are being assigned. |
| - UL CCTrCH List to Remove | Not present |
| Downlink information common for all radio links | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 |
| Downlink information for each radio link | |
| - Choice mode | TDD |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD or 7.68 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | 10 |
| - SCTD indicator | FALSE |
| - CHOICE DPCH info | Not present |
| - E-AGCH Info | Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84Mcps |
| - Long Term Grant Indicator | FALSE |
| - Length of TTRI field | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - E-AGCH set configuration | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), |

| | |
|---|---|
| | 6.11 Parameter Set (7.68Mcps TDD) |
| - TS number | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Channelisation code | Reference to clause 6.10 Parameter Set |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Midamble allocation | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - E-AGCH BLER Target | -2 |
| - CHOICE mode | TDD |
| - E-HICH info | Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84Mcps or 7.68Mcps |
| - $N_{E-HICH}$ | 4 |
| - TS Number | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Channelisation code | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Burst Type | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |
| - Midamble allocation mode | Reference to clause 6.10 Parameter Set (3.84Mcps TDD), 6.11 Parameter Set (7.68Mcps TDD) |

#### 8.2.2.48.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 5, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

### 8.2.2.49 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_PCH: Success (stop of E-DCH transmission)

#### 8.2.2.49.1 Definition and applicability

All UEs which support FDD, HS-PDSCH and E-DPDCH and all UEs which support TDD and HS-PDSCH and E-PUCH.

#### 8.2.2.49.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable E_DCH_TRANSMISSION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH info", including the IE "E-DPCCH info" and the IE "E-DPDCH info";
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> for non-scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-PUCH info";
- IE "Non-scheduled transmission grant info".

2> for scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH and E-HICH reception procedures;

1> For FDD:

2> stop any E-RGCH reception procedures.

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures.

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> act as if the IE "MAC-es/e reset indicator" was received and set to TRUE;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2> if scheduled transmission is configured, perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, if scheduled transmission is configured, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AGCH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH, E-DPDCH, E-RUCCH and/or E-PUCH transmission procedures.

…

If the IE "RB information to reconfigure" is included, the UE shall apply the following actions on the radio bearer identified with the value of the IE "RB identity". The UE shall:

1> perform the actions for the IE "RB mapping info", according to subclause 8.6.4.8, applied for the radio bearer;

…

If the IE "Deleted UL TrCH information" is included the UE shall:

1> if an Uplink transport channel is requested to be deleted:

2> delete any information about the transport channel identified by the IE "UL TrCH identity" and the IE"Uplink transport channel type".

1> if an E-DCH MAC-d flow is requested to be deleted:

2> delete any information about the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity";

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "Deleted DL TrCH information" is included the UE shall:

1> if a Downlink transport channel is requested to be deleted:

2> delete any information about the transport channel identified by the IE "DL TrCH identity".

1> if a DL MAC-d flow is requested to be deleted:

2> delete any information about the DL HS-DSCH MAC-d flow identified by the IE "MAC-d Flow Identity", i.e. delete any information about MAC-hs queue(s) mapped onto this MAC-d flow.

2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

If after state transition the UE leaves CELL_DCH state, the UE shall, after the state transition:

1> clear any stored IE "Downlink HS-PDSCH information";

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;

1> clear any stored IE "E-DCH information";

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

Reference

3GPP TS 25.331 clauses 8.2.2.3, 8.5.28, 8.6.4.5, 8.6.5.7, 8.6.5.8,.

### 8.2.2.49.3 Test purpose

To confirm that the UE reconfigures radio bearer parameters, transits from CELL_DCH to CELL_PCH state, and stops E-DCH transmission and HS-DSCH reception according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.49.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A13 (FDD) /A12 (1.28Mcps TDD) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only)
- UE supports E-PUCH (TDD only)

Test Procedure

The UE has a radio bearer mapped to the E-DCH/HS-DSCH and the signalling radio bearers mapped on E-DCH/DCH.

The SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it stops E-DCH transmission and HS-DSCH reception, transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC and moves to CELL_PCH state.

SS calls for generic procedure C.4 to check that the UE is in CELL_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | RADIO BEARER RECONFIGURATION | |
| 2 | | → | RADIO BEARER RECONFIGURATION COMPLETE | Stop of E-DCH transmission and HS-DSCH reception and transit to CELL_PCH state. |
| 3 | | ←→ | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER RECONFIGURATION (Step 1) (FDD)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |

| Information Element | Value/remark |
|---|---|
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |

| Information Element | Value/remark |
|---|---|
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |

| Information Element | Value/remark |
|---|---|
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |

| Information Element | Value/remark |
|---|---|
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |

RADIO BEARER RECONFIGURATION (Step 1) (3.84Mcps TDD and 7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |

| Information Element | Value/remark |
|---|---|
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.3.4.5.1 for 3.84Mcps TDD or clause 6.11.6.4.5.1 for 7.68Mcps TDD |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |

| Information Element | Value/remark |
|---|---|
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.3.4.5.1 for 3.84Mcps TDD or clause 6.11.6.4.5.1 for 7.68Mcps TDD |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.3.4.5.1 for 3.84Mcps TDD or clause 6.11.6.4.5.1 for 7.68Mcps TDD |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |

| Information Element | Value/remark |
|---|---|
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |

#### 8.2.2.49.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

### 8.2.2.50 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (from speech to speech plus PS data with modification of downlink spreading factor)

#### 8.2.2.50.1 Definition

-

#### 8.2.2.50.2 Conformance requirement

If the UE receives:

- a RADIO BEARER SETUP message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only);

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

- clear that entry;

1bis> in TDD, if the procedure is used to perform a handover to a cell where timing advance is enabled, and the UE can calculate the timing advance value in the new cell (i.e. in a synchronous TDD network):

2> set the IE "Uplink Timing Advance" according to subclause 8.6.6.26.In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

##### Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

#### 8.2.2.50.3 Test purpose

To confirm that the UE reconfigures the radio bearers according to a RADIO BEARER RECONFIGURATION message, which indicates a change of radio bearer configuration from a single radio bearer (speech) to a multi radio bearer configuration (speech + PS data) including reconfiguration of downlink spreading factor.

#### 8.2.2.50.4 Method of test

##### Initial Condition

System Simulator: 1 cell.

UE: Idle state (State 7) as specified in clause 7.4 of TS 34.108.

##### Test Procedure

The UE is brought to the CELL_DCH state after a successful incoming call attempt. The SS follows the procedure in TS 34.108 clause 7.1.3 (Mobile Terminated), to set up a user radio bearer, but with the default radio bearer replaced by the one specified in TS 34.108, clause 6.10.2.4.1.9: Conversational / speech / UL:5.9 DL:5.9 kbps / CS RAB + UL:3.4

DL:3.4 kbps SRBs for DCCH (the speech RB uses DL SF=256). The radio bearer is placed into UE test loop mode 1 as described in 34.109 clause 5.3. The SS sends RLC SDUs on the speech radio bearer in downlink and verifies that the UE returns RLC SDUs with the same content in uplink. The SS opens the UE test loop.

A PS service request is triggered by a PAGING TYPE 2 message from the SS causing a SERVICE REQUEST to be sent from the UE to the SS. The SS transmits a RADIO BEARER SETUP message, which commands the UE to reconfigure its user RB from the speech radio bearer to the combined speech and PS radio bearer as specified in TS 34.108, clause 6.10.2.4.1.40: Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH. This reconfiguration involves reconfiguration of the downlink spreading factor from 256 to 128. The radio bearers are placed into UE test loop mode 1 as described in 34.109 clause 5.3. The SS sends RLC SDUs on the speech and PS radio bearers in downlink and verifies that the UE returns RLC SDUs with the same content in uplink on both the speech and PS radio bearers. The SS opens the UE test loop.

SS calls for the generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE 1 (PCCH) | RRC |
| 2 | → | | RRC CONNECTION REQUEST | RRC |
| 3 | ← | | RRC CONNECTION SETUP | RRC |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | RRC |
| 5 | → | | PAGING RESPONSE | RRC |
| 6 | ← | | AUTHENTICATION AND CIPHERING REQUEST | RRC |
| 7 | → | | AUTHENTICATION AND CIPHERING RESPONSE | RRC |
| 8 | ← | | SECURITY MODE COMMAND | RRC |
| 9 | → | | SECURITY MODE COMPLETE | RRC |
| 10 | ← | | ACTIVATE RB TEST MODE | TC |
| 11 | → | | ACTIVATE RB TEST MODE COMPLETE | TC |
| 12 | ← | | RADIO BEARER SETUP | RRC<br>The 5.9 kbps speech RB (DL SF=256) is configured. |
| 13 | → | | RADIO BEARER SETUP COMPLETE | RRC |
| 14 | ← | | CLOSE UE TEST LOOP | TC<br>UE Test Loop Mode1 |
| 15 | → | | CLOSE UE TEST LOOP COMPLETE | TC |
| 16 | → ← | | Data | The SS sends data on the speech RB in downlink and verifies that the UE returned data in uplink has the same content as sent in downlink. |
| 17 | ← | | OPEN UE TEST LOOP | TC |
| 18 | → | | OPEN UE TEST LOOP COMPLETE | TC |
| 19 | ← | | PAGING TYPE 2 (DCCH) | TMSI (GSM-MAP)/ P-TMSI |
| 20 | → | | SERVICE REQUEST | GMM |
| 21 | ← | | SECURITY MODE COMMAND | RRC see note 1 |
| 22 | → | | SECURITY MODE COMPLETE | RRC see note 1 |
| 23 | ← | | RADIO BEARER SETUP | RRC<br>The 12.2 kbps speech (DL SF=128) + 64 kbps PS RB is configured.<br>See specific message contents for this message |
| 24 | → | | RADIO BEARER SETUP COMPLETE | |
| 25 | ← | | CLOSE UE TEST LOOP | TC<br>UE Test Loop Mode1 |
| 26 | → | | CLOSE UE TEST LOOP COMPLETE | TC |
| 27 | → ← | | Data | The SS sends data on the speech RB and the PS RB and verifies that the UE returned data in uplink for the speech RB and the PS RB has the same content as sent in downlink. |
| 28 | ← | | OPEN UE TEST LOOP | TC |
| 29 | → | | OPEN UE TEST LOOP COMPLETE | TC |
| 30 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Note 1. The SECURITY MODE COMMAND procedure in steps 20 and 21 is performed in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Specific Message Contents

RADIO BEARER SETUP (Step 12)

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type titled as "Speech in CS" as found in clause 9 of TS 34.108 using the speech RB as specified in TS 34.108, clause 6.10.2.4.1.9: Conversational / speech / UL:5.9 DL:5.9 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs.

RADIO BEARER SETUP (Step 23)

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type titled as "Packet RAB Setup after Speech RAB Setup in CELL_DCH" (condition A11) as found in clause 9 of TS 34.108 using the speech RB + PS RB as specified in TS 34.108, clause 6.10.2.4.1.40: Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH, except for the following:

| Information Element | Value/remark |
|---|---|
| Added or Reconfigured UL TrCH information | 1 DCH added, 3 DCHs reconfigured (all for DTCH) |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 2 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 3 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |

| | |
|---|---|
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| Added or Reconfigured DL TrCH information | 1 DCH added, 3 DCHs reconfigured (all for DTCH) |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 6 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | Not Present |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 7 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |
| - UL TrCH identity | 2 |

| | |
|---|---|
| - DCH quality target | |
| - BLER Quality value | Not Present |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 8 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |
| - UL TrCH identity | 3 |
| - BLER Quality value | Not Present |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 9 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |

#### 8.2.2.50.5 Test requirement

At step 16 the UE shall return data on the speech RB in uplink with the same content as sent by the SS in downlink.

At step 26 the UE shall return data on the speech RB and the PS RB in uplink with the same content as sent by the SS in downlink.

### 8.2.2.51 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (With active discontinuous uplink transmission)

#### 8.2.2.51.1 Definition and applicability

All UEs which support FDD and UL DTX.

#### 8.2.2.51.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> use the newly received DTX-DRX timing configuration.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.2.2.4, 8.5.34, 8.6.6.38, 8.6.6.39

### 8.2.2.51.3 Test purpose

To confirm that the UE reconfigures radio bearer parameters during active DPCCH discontinuous transmission according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.51.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A20, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports DPCCH Discontinuous Transmission

Test Procedure

The UE is in CELL_DCH state and has a user radio bearer mapped on E-DCH/HS-DSCH established in cell 1, DTX and, if supported, DRX are active.

The SS transmits a RADIO BEARER RECONFIGURATION message to the UE, to reconfigure Timer_poll_prohibit_, Timer_poll & Timer_status_prohibit to 200ms. After the UE receives this message, it reconfigures the radio bearer and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 320ms if 2ms TTI is used, or 400ms if 10ms TTI is used.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 3 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and then verifies that the time taken to report 10 consecutive CQI indications is 320ms if 2ms TTI is used, or 400ms if 10ms TTI is used. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - CHOICE RLC info type | RLC info |

| | |
|---|---|
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| UL Transport channel information for all transport channels | Not present |
| Added or Reconfigured UL TrCH information | Not present |
| DL Transport channel information common for all transport channel | Not present |
| Added or Reconfigured DL TrCH information | Not present |
| DTX-DRX timing information | |
| - CHOICE Timing | Continue |
| Uplink channel requirement | Not present |
| Downlink information common for all radio links | Not present |
| Downlink information for each radio link | Not present |

#### 8.2.2.51.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

At step 3 the time taken to report 10 consecutive CQI indications shall be 320ms if 2ms TTI is used, or 400ms if 10ms TTI is used.

### 8.2.2.52 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (start and stop of discontinuous uplink transmission)

#### 8.2.2.52.1 Definition and applicability

All UEs which support FDD and UL DTX.

#### 8.2.2.52.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> use the newly received DTX-DRX timing configuration.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.2.2.4, 8.5.34, 8.6.6.38, 8.6.6.39

### 8.2.2.52.3 Test purpose

1 To confirm that the UE reconfigures radio bearer parameters, transits from CELL_FACH to CELL_DCH state, and starts E-DCH / DPCCH discontinuous transmission according to the received RADIO BEARER RECONFIGURATION message.

2 To confirm that the UE reconfigures radio bearer parameters, transits from CELL_DCH to CELL_FACH state, and stops E-DCH / DPCCH discontinuous transmission according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.52.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A20 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports DPCCH Discontinuous Transmission

Test Procedure

The UE has a radio bearer mapped to the E-DCH/HS-DSCH and the signalling radio bearers mapped on E-DCH/HS-DSCH, DTX and, if supported, DRX are active.

The SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it stops E-DCH / DPCCH discontinuous transmission and HS-DSCH reception, moves to CELL_FACH state and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

Then, SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it moves to CELL_DCH state, resumes E-DCH transmission with DTX and HS-DSCH reception (with DRX if supported) and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Stop of E-DCH transmission with DTX and HS-DSCH reception and transit to CELL_FACH state, |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Start of E-DCH transmission with DTX and HS-DSCH reception (with DRX if supported) and transit to CELL_DCH state |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 5 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |

| Information Element | Value/remark |
|---|---|
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |

| Information Element | Value/remark |
|---|---|
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |

| Information Element | Value/remark |
|---|---|
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |

| Information Element | Value/remark |
|---|---|
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 1 |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |

RADIO BEARER RECONFIGURATION (Step 3)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |

| Information Element | Value/remark |
|---|---|
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |

| Information Element | Value/remark |
|---|---|
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |

| Information Element | Value/remark |
|---|---|
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |
| - RB stop/continue | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP |
| Added or Reconfigured DL TrCH information | message found in TS 34.108 clause 9 under condition A20. |
| DTX-DRX timing information | |
| CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 16 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE *E-DCH TTI length* | 10ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |

| Information Element | Value/remark |
|---|---|
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| HS-SCCH less information | Not Present |
| Uplink DPCH info | Not Present |
| E-DCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Downlink HS-PDSCH Information | |
| Downlink information common for all radio links | |
| - Downlink F-DPCH info common for all RL | |
| - Timing Indication | Maintain |
| - Timing maintained Synchronization indicator | FALSE |
| - Downlink F-DPCH power control information | |
| - DPC mode | 0 (single) |
| - TPC command error rate target | 0.04 |
| - CHOICE mode | FDD |
| - DPCH compressed mode info | Not Present |
| - TX Diversity mode | None |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | Not Present |
| Downlink information for each radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |

#### 8.2.2.52.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 3, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

At step 5 the time taken to report 10 consecutive CQI indications shall be 400ms.

### 8.2.2.53 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (hard handover to another frequency, start and stop of discontinuous uplink transmission)

#### 8.2.2.53.1 Definition and applicability

All UEs which support FDD and UL DTX.

#### 8.2.2.53.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> use the newly received DTX-DRX timing configuration.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.2.2.4, 8.5.34, 8.6.6.38, 8.6.6.39

### 8.2.2.53.3 Test purpose

To confirm that the UE starts and stops transmitting the E-DCH (with DTX), while maintaining HS-DSCH reception, in conjunction with a interfrequency hard handover without prior measurement on the target frequency according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.53.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 and 6 are active.

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A20 in cell 1 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports DPCCH Discontinuous Transmission

Test Procedure

**Table 8.2.2.53**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency ($f_1$) | | High Range Test Frequency ($f_2$) | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Table 8.2.2.53 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The SS has configured its downlink transmission power settings according to columns "T0" in table 8.2.2.53.

The UE is in cell 1 and has a radio bearer mapped to the E-DCH/HS-DSCH and the signalling radio bearers mapped on E-DCH/ HS-DSCH, DTX and, if supported, DRX are active. .

The SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RECONFIGURATION message instructing the UE to perform a timing re-initialised interfrequency hard handover to cell 6 and stop E-DCH / DPCCH discontinuous transmission but keep HS-DSCH reception (DRX will be deactivated if

enabled by the UE). The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC in cell 6.

The SS switches its downlink transmission power settings to columns "T0" and transmits a RADIO BEARER RECONFIGURATION message instructing the UE to perform an interfrequency hard handover to cell 1 and resume E-DCH transmission with DTX. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC in cell 1.

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.

SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.2.53. |
| 2 | ← | | RADIO BEARER RECONFIGURATION | Hard handover to another frequency and stop of E-DCH transmission with DTX, |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE transmits this message in cell 6. |
| 4 | | SS | | The SS switches its downlink transmission power settings to columns "T0" in table 8.2.2.53. |
| 5 | ← | | RADIO BEARER RECONFIGURATION | Hard handover to another frequency and start of E-DCH transmission with DTX (and DRX if supported). |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE transmits this message in cell 1. |
| 7 | | SS | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 2)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | Same as the set defined for SRB1 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |

| Information Element | Value/remark |
|---|---|
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for SRB2 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for SRB3 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for SRB4 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER |

| Information Element | Value/remark |
|---|---|
| | SETUP message found in TS 34.108 clause 9 under condition A9. |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Added or Reconfigured UL TrCH information | 2 DCHs added |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 5 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| DL Transport channel information common for all transport channel | Same as the set defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 1 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 10 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |
| - UL TrCH Identity | 5 |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |
| Frequency info | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Uplink DPCH info | Same as the set defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| Downlink information common for all radio links | Same as the set defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |

| Information Element | Value/remark |
|---|---|
| Downlink information per radio link list | Same as the set defined for in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |

RADIO BEARER RECONFIGURATION (Step 5)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |

| Information Element | Value/remark |
|---|---|
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |

| Information Element | Value/remark |
|---|---|
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |

| Information Element | Value/remark |
|---|---|
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |

| Information Element | Value/remark |
|---|---|
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - CHOICE UL TrCH identity | |
| - UL TrCH type | DCH |
| - UL TrCH identity | 1 |
| - UL TrCH type | DCH |
| - UL TrCH identity | 5 |
| UL Transport channel information common for all transport channels | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Added or Reconfigured UL TrCH information | Same set as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| Deleted DL TrCH information | |
| - CHOICE DL TrCH type | DCH |
| - DL Transport channel identity | 10 |
| DL Transport channel information common for all transport channels | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Added or Reconfigured DL TrCH information | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Frequency info | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 1 |
| DTX-DRX timing information | |
| CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 32 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE *E-DCH TTI length* | 10ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| HS-SCCH less information | Not Present |
| Uplink DPCH info | Not Present |
| E-DCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| Downlink HS-PDSCH Information | |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| Downlink information for each radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |

#### 8.2.2.53.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message in cell 6.

After step 5, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message in cell 1.

At step 7 the time taken to report 10 consecutive CQI indications shall be 400ms.

### 8.2.2.54 Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (frequency modification, start and stop of discontinuous uplink transmission)

#### 8.2.2.54.1 Definition

All UEs which support FDD and UL DTX.

#### 8.2.2.54.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> use the newly received DTX-DRX timing configuration.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.2.2.4, 8.5.34, 8.6.6.38, 8.6.6.39

### 8.2.2.54.3 Test purpose

1) To confirm that the UE reconfigures radio bearer parameters, transits from CELL_DCH to CELL_FACH state with frequency modification and stops E-DCH / DPCCH discontinuous transmission according to the received a RADIO BEARER RECONFIGURATION message.

2) To confirm that the UE reconfigures radio bearer parameters, transits from CELL_FACH to CELL_DCH state with frequency modification and starts E-DCH / DPCCH discontinuous transmission according to the received a RADIO BEARER RECONFIGURATION message.

8.2.2.54.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

UE: PS_DCCH_DTCH_E-DCH/HS-DSCH (state 6-18) under condition A20, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statements

- UE supports FDD
- UE supports DPCCH Discontinuous Transmission

Test Procedure

**Table 8.2.2.54**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency ($f_1$) | | High Range Test Frequency ($f_2$) | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Table 8.2.2.54 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH and E-DCH in cell 1, DTX and, if supported, DRX are active. .The SS has configured its downlink transmission power setting according to columns “T0” in table 8.2.2.54.

The SS then applies the power level according to “T1” in table 8.2.2.54 and transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it stops HS-DSCH reception and E-DCH / DPCCH discontinuous transmission, moves to CELL_FACH state in cell 6 and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

Then, the SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it moves to CELL_DCH state in cell 1, resumes the HS-DSCH reception and E-DCH transmission, with DTX (and DRX if supported) and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. The SS calls for generic procedure C.3 to check the UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Stop of HS-DSCH reception (with DRX if supported) and E-DCH transmission with DTX |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Start of HS-DSCH reception and E-DCH transmission with DTX/DRX |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 5 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RB MuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RB MuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |

| Information Element | Value/remark |
|---|---|
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |

| Information Element | Value/remark |
|---|---|
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH for PS domain) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Downlink transport channel type | HS-DSCH |

| Information Element | Value/remark |
|---|---|
| - DL HS-DSCH MAC-d flow identity | 1 |
| Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS25.101 [11] |
| - UARFCN downlink (Nd) | Set to the frequency of cell 6 |
| Maximum allowed UL TX power | Not Present |
| Downlink information per radio link list | |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as used for cell 6 |

RADIO BEARER RECONFIGURATION (Step 3)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in TS34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |

| Information Element | Value/remark |
|---|---|
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |

| Information Element | Value/remark |
|---|---|
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH for PS domain) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Trasnport channel identity | Not Present |

| Information Element | Value/remark |
|---|---|
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 5 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| UL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Deleted DL TrCH information | |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 10 |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 6 |
| DL Transport channel information common for all transport channels | Not Present |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS25.101 [11] |
| - UARFCN downlink (Nd) | Set to the frequency of cell 1 |
| DTX-DRX timing information | |
| CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 32 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE *E-DCH TTI length* | 10ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| HS-SCCH less information | Not Present |
| Maximum allowed UL TX power | Not Present |
| Uplink DPCH info | Not Present |
| E-DCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 with the following exception: |
| -Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as used for cell 1 |

#### 8.2.2.54.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 3, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

At step 5 the time taken to report 10 consecutive CQI indications shall be 400ms.

### 8.2.2.55 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of discontinuous uplink transmission)

#### 8.2.2.55.1 Definition and applicability

All UEs which support FDD and UL DTX.

#### 8.2.2.55.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> use the newly received DTX-DRX timing configuration.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.2.2.4, 8.5.34, 8.6.6.38, 8.6.6.39

### 8.2.2.55.3 Test purpose

1. To confirm that the UE reconfigures the radio bearer parameters and stops E-DCH / DPCCH discontinuous transmission according to the received RADIO BEARER RECONFIGURATION message.

2. To confirm that the UE reconfigures the radio bearer parameters and starts E-DCH / DPCCH discontinuous transmission according to the received RADIO BEARER RECONFIGURATION message.

8.2.2.55.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A20, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports DPCCH Discontinuous Transmission

Test Procedure

The UE is in CELL_DCH state and has a user radio bearer mapped on E-DCH/HS-DSCH established in cell 1, DTX and, if supported, DRX are active. .

The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to stop the discontinuous transmission on E-DCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

The SS transmits a RADIO BEARER RECONFIGURATION message instructing the UE to start the discontinuous transmission on E-DCH. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | Stop of E-DCH transmission and HS-DSCH reception. |
| 2 | | | | At the activation time, SS stops E-DCH reception with DTX from the UE. |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 4 | ← | | RADIO BEARER RECONFIGURATION | Start of E-DCH transmission with DTX and HS-DSCH reception (with DRX if supported) |
| 5 | | | | At the activation time, SS resumes E-DCH reception with DTX from the UE. |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 7 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A3. |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A3. |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |

| | |
|---|---|
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A3. |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A3. |
| - RB stop/continue | Not Present |

| | |
|---|---|
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as the set defined for RB25 in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A3. |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - CHOICE UL TrCH identity | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - CHOICE UL TrCH identity | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 1 |
| Maximum allowed UL TX power | Not Present |
| Uplink DPCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A3. |
| E-DCH info | Not Present |
| Downlink HS-PDSCH information | Not Present |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A3. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A3 with the following exception: |

RADIO BEARER RECONFIGURATION (Step 4)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H –RNTI | '1010 1010 1010 1010' |
| New Primary E –RNTI | '1010 1010 1010 1010' |
| New Secondary E-RNTI | Not Present |
| RB information to reconfigure list | |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |

| | |
|---|---|
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |

| | |
|---|---|
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |

| | |
|---|---|
| - CHOICE UL TrCH identity | |
| - UL TrCH type | DCH |
| - UL TrCH identity | 1 |
| - UL TrCH type | DCH |
| - UL TrCH identity | 5 |
| UL Transport channel information common for all transport channels | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| Added or Reconfigured UL TrCH information | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| DL Transport channel information common for all transport channel | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| Deleted DL TrCH information | |
| - CHOICE DL TrCH type | DCH |
| - DL Transport channel identity | 6 |
| - CHOICE DL TrCH type | DCH |
| - DL Transport channel identity | 10 |
| Added or Reconfigured DL TrCH information | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| DTX-DRX timing information | |
| CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 16 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE *E-DCH TTI length* | 10ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| HS-SCCH less information | Not Present |
| Uplink DPCH info | Not Present |
| Downlink information common for all radio links | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| Downlink information for each radio link | Same as defined in the RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |

### 8.2.2.55.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 5, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

At step 7 the time taken to report 10 consecutive CQI indications shall be 400ms.

## 8.2.2.56 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_PCH: Success (stop of discontinuous uplink transmission)

### 8.2.2.56.1 Definition and applicability

All UEs which support FDD and UL DTX.

### 8.2.2.56.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER SETUP message, the UE shall:

1> transmit a RADIO BEARER SETUP COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE

DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> use the newly received DTX-DRX timing configuration.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.2.2.4, 8.5.34, 8.6.6.38, 8.6.6.39

### 8.2.2.56.3 Test purpose

To confirm that the UE reconfigures radio bearer parameters, transits from CELL_DCH to CELL_PCH state, and stops E-DCH / DPCCH discontinuous transmission and HS-DSCH reception according to the received RADIO BEARER RECONFIGURATION message.

### 8.2.2.56.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A20 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports DPCCH Discontinuous Transmission

Test Procedure

The UE has a radio bearer mapped to the E-DCH/HS-DSCH and the signalling radio bearers mapped on E-DCH/HS-DSCH, DTX and, if supported, DRX are active. .

The SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it stops E-DCH / DPCCH discontinuous transmission and HS-DSCH reception, transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC and moves to CELL_PCH state.

SS calls for generic procedure C.4 to check that the UE is in CELL_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | → | | RADIO BEARER RECONFIGURATION COMPLETE | Stop of E-DCH transmission and HS-DSCH reception with DTX (and DRX if supported) and transit to CELL_PCH state. |
| 3 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |

| Information Element | Value/remark |
|---|---|
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |

| Information Element | Value/remark |
|---|---|
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |

| Information Element | Value/remark |
|---|---|
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |

| Information Element | Value/remark |
|---|---|
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 1 |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |

#### 8.2.2.56.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

### 8.2.2.57 Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (Reconfiguration between fixed and flexible AM RLC, Serving HS-DSCH cell change between MAC-hs and MAC-ehs)

#### 8.2.2.57.1 Definition and applicability

All UEs which support FDD and MAC-ehs.

#### 8.2.2.57.2 Conformance requirement

Upon reception of the IE "RLC Info", the UE shall:

[…]

1> if the IE "Downlink RLC mode" is present and is set to "AM RLC":

2> if IE "DL RLC PDU size" is not present:

3> determining the downlink RLC PDU size will be handled at RLC level as described in [16], without any configuration from RRC.

NOTE: The case where this mandatory IE is not present is meant to handle the interaction with a network using an earlier release of the specification.

2> else, if the IE "DL RLC PDU size" is present, the DL RLC PDU size is set to "fixed size" and no downlink RLC PDU size is currently set in the RLC entity:

3> configure the corresponding RLC entity with the downlink RLC PDU size.

2> else, if the DL RLC PDU size is set to "flexible size" and no downlink RLC PDU size is currently set in the RLC entity:

3> configure the corresponding RLC entity with the RLC length indicator size indicated in the IE "Length indicator size".

2> else, if the DL RLC PDU size is changed to "flexible size" from "fixed size" and the the indicated RLC length indicator size is 7 bits:

3> configure the corresponding RLC entity with flexible RLC PDU size and the RLC length indicator size indicated in the IE "Length indicator size".

2> else, if the IE "DL RLC PDU size" is present, the DL RLC PDU size is set to "fixed size" and DL RLC PDU size value is different from the one currently set in the RLC entity; or

2> the DL RLC PDU size is set to "flexible size" and the indicated RLC length indicator size is different from the one currently set in the RLC entity; or

2> the DL RLC PDU size is changed from"fixed size" to "flexible size"; or

2> the DL RLC PDU size is changed to "flexible size" from "fixed size" and the indicated RLC length indicator size is 15 bits:

NOTE: The downlink RLC PDU size set in the RLC entity can either be explicitly configured or, in case no explicit configuration is provided, derived by the first received RLC PDU [16].

3> if the IE "one sided RLC re-establishment" is set to TRUE:

4> re-establish the receiving side of the corresponding RLC entity.

3> else:

4> re-establish the corresponding RLC entity.

3> if the DL RLC PDU size is set to "fixed size":

4> configure the corresponding RLC entity with the new downlink RLC PDU size.

3> if the DL RLC PDU size is set to "flexible size":

4> configure the corresponding RLC entity with the RLC length indicator size indicated in the IE "Length indicator size".

3> if the UE supports the lossless DL RLC PDU size change and PDCP was configured for that radio bearer with the IE "Support for lossless SRNS relocation or for lossless DL RLC PDU size change" set to TRUE:

4> include the current DL PDCP receive sequence number and the radio bearer identity for that radio bearer in the variable PDCP_SN_INFO.

3> if the IE "Status" in the variable CIPHERING_STATUS of the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" for this radio bearer is set to "Started":

4> if the RLC re-establishment is caused by a CELL UPDATE CONFIRM:

5> if only the receiving side of the RLC entity was re-established:

6> set the HFN values for the corresponding RLC entity in downlink equal to the value of the IE "START" included in the latest transmitted CELL UPDATE message for this CN domain.

5> if the whole RLC entity was re-established:

6> set the HFN values for the corresponding RLC entity in uplink and downlink equal to the value of the IE "START" included in the latest transmitted CELL UPDATE message for this CN domain.

4> if the RLC re-establishment is caused by a reconfiguration message:

5> if only the receiving side of the RLC entity was re-established:

6> set the HFN values for the corresponding RLC entity in downlink equal to the value of the IE "START" that will be included in the reconfiguration complete message for this CN domain.

5> if the whole RLC entity was re-established:

6> set the HFN values for the corresponding RLC entity in uplink and downlink equal to the value of the IE "START" that will be included in the reconfiguration complete message for this CN domain.

…

1> if the received reconfiguration message did not include the IE "Downlink counter synchronisation info":

2> if the variable START_VALUE_TO_TRANSMIT is set:

3> include and set the IE "START" to the value of that variable.

2> if the variable START_VALUE_TO_TRANSMIT is not set and the IE "New U-RNTI" is included:

3> calculate the START value according to subclause 8.5.9;

3> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".

2> if the received reconfiguration message caused a change in the RLC PDU size, a change from flexible to fixed DL RLC PDU size or a change of the RLC LI size for any RB using RLC-AM:

3> calculate the START value according to subclause 8.5.9;

3> include the calculated START values for the CN domain associated with the corresponding RB identity in the IE "START list" in the IE "Uplink counter synchronisation info".

…

The variable HS_DSCH_RECEPTION shall be set to TRUE only when all the following conditions are met:

1> for FDD and 1.28 Mcps TDD:

2> the UE is in CELL_DCH state.

1> for 3.84 Mcps TDD or 7.68 Mcps TDD:

2> a dedicated physical channel is allocated to the UE in the uplink.

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";

- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor.

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the IE "HS-PDSCH Midamble Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored "PLCCH Info".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RBs mapped to HS-DSCH, there is either:

2> at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow; or

2> at least one MAC-ehs reordering queue configured for the associated logical channel.

NOTE 1: For TDD and for FDD in CELL_DCH, to enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the concerning MAC-ehs reordering queue, add/remove the serving HS-DSCH radio link or, for TDD add/remove H-RNTI upon hard handover.

NOTE 2: For TDD and for FDD in CELL_DCH, if HS_DSCH_RECEPTION is set to TRUE and a reconfiguration, an inter-RAT handover from UTRAN, or a cell change order procedure is initiated, the UE checks the conditions only when the reconfiguration, inter-RAT handover from UTRAN, or cell change order procedure is successfully completed. Doing so ensures that, in case of failure in the reconfiguration, inter-RAT handover from UTRAN, or cell change order procedure, the UE can return to the old configuration as if the message was not received, e.g. without performing a MAC-HS reset.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> for TDD and for FDD in CELL_DCH:

2> set the variable HS_DSCH_RECEPTION_GENERAL to FALSE;

2> stop any HS_SCCH reception procedures;

2> stop any HS-DSCH reception procedures;

2> clear the variable H_RNTI and remove any stored H-RNTI;

2> reset the MAC-hs/ehs entity [15];

2> release all HARQ resources;

2> no long consider any radio link to be the HS-DSCH serving radio link.

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, if no downlink DPCH is assigned the UE shall clear the uplink DPCH configuration and initiate the Cell Update procedure according to subclause 8.3.1, cause "radio link failure".

NOTE 3: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "Added or Reconfigured MAC-ehs reordering queue", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

2> for 1.28 Mcps TDD, when performing reception on signalling radio bearer before RAB has been established, the UE shall use the lowest HSDPA capability category, as specified in [35], to read the DL control information on HS-SCCH.

NOTE 4: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest HSDPA capability category, as specified in [35], when performing scheduling and signalling the control information on HS-SCCH, as it is not possible for Node B to be aware of the UE's HSDPA capability category during this period.

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

1> use the relevant CQI reporting table as stated in subclause 8.5.44.

For TDD and for FDD in CELL_DCH, whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

[…]

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link and no longer consider any other radio link as serving HS-DSCH radio link.

[…]

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link;

4> if the serving HS-DSCH radio link was another radio link than this radio link prior to reception of the message and the IE "H-RNTI" is not included:

5> clear the variable H_RNTI.

3> if the IE "Serving HS-DSCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving HS-DSCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving HS-DSCH radio link.

3> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;

[…]

2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:

3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.

NOTE: The Release '99 RADIO BEARER RECONFIGURATION message always includes at least one IE "Downlink information for each radio link" containing the mandatory IEs, even if UTRAN does not require the reconfiguration of any radio link.

…

If the IE "Downlink information common for all radio links " is included the UE shall:

1> if the IE "Downlink DPCH info common for all RL" is included:

2> perform actions as specified in subclause 8.6.6.28.

1> if the IE "Downlink F-DPCH info common for all RL" is included:

2> perform actions as specified in subclause 8.6.6.28a.

1> if the IE choice "mode" is set to 'FDD':

2> perform actions for the IE "DPCH compressed mode info" as specified in subclause 8.6.6.15;

2> perform actions for the IE "Tx Diversity mode" as specified in subclause 8.6.6.24.

1> if the IE "MAC-hs reset indicator" is included:

2> if the serving HS-DSCH radio link is the same radio link as prior to the reception of the message; and

2> if, as a result of the reconfiguration message where this IE is received, the MAC header type (i.e., either MAC-hs or MAC-ehs) is unchanged:

3> the UE behaviour is unspecified.

2> reset the MAC-hs/ehs entity [15].

NOTE: If the MAC header type is changed, either from MAC-hs to MAC-ehs or from MAC-ehs to MAC-hs, UTRAN should include the IE "MAC-hs reset indicator" in order to ensure a reset of the MAC-hs/ehs entity in the UE prior to MAC-hs/ehs reconfiguration, otherwise the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.6.4.9, 8.2.2.3, 8.5.25, 8.6.6.4, 8.6.6.27.

### 8.2.2.57.3 Test purpose

1. To verify that the UE is able to successfully perform an RLC AM reconfiguration from fixed RLC to flexible RLC, and that:
   a. When the RLC Length Indicator size is unchanged, the RLC AM entity is not re-established.
   b. When the RLC Length Indicator size is changed, the RLC AM entity is re-established.

2. To verify that the UE is able to successfully perform an RLC AM reconfiguration from flexible RLC to fixed RLC and that the RLC AM entity is re-established.

3. To verify that the UE is able to successfully perform a serving HS-DSCH cell change:
   a. With reconfiguration from using a MAC-hs entity to using a MAC-ehs entity.
   b. With reconfiguration from using a MAC-ehs entity to using a MAC-hs entity.

### 8.2.2.57.4 Method of test

Initial Condition

System Simulator: 2 cells − Cell 1 is active and Cell 2 is inactive.

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A14, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports MAC-ehs

Test Procedure

**Table 8.2.2.57**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Table 8.2.2.57 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for Cell 1 and Cell 2.

The UE is initially in CELL_DCH state with the SRBs and a PS RAB mapped on E-DCH/HS-DSCH (MAC-hs).

The SS configures its downlink transmission power settings according to columns "T1" in table 8.2.2.57 and transmits a RADIO BEARER RECONFIGURATION message to the UE to request the UE to perform a timing re-initialized hard handover with serving HS-DSCH cell change to Cell 2 with the SRBs and the PS RAB mapped on E-DCH/HS-DSCH (MAC-ehs), and with reconfiguration of the AM RBs from fixed to flexible with no change of LI size. The UE shall move to Cell 2 at the Activation Time signalled in the RADIO BEARER RECONFIGURATION message and transmit a RADIO BEARER RECONFIGURATION COMPLETE message on Cell 2. The SS shall not re-establish its configured DL AM RLC entities. The SS transmits a UE CAPABILITY ENQUIRY message on DL SRB2. The UE shall respond with a UE CAPABILITY INFORMATION message. The SS completes the procedure by transmitting a UE CAPABILITY INFORMATION CONFIRM message to the UE.

The SS configures its downlink transmission power settings according to columns "T0" in table 8.2.2.57 and transmits a RADIO BEARER RECONFIGURATION message to the UE to request the UE to perform a timing re-initialized hard handover with serving HS-DSCH cell change to Cell 1 with the SRBs and the PS RAB mapped on E-DCH/HS-DSCH (MAC-hs), and with reconfiguration of the AM RBs from flexible to fixed with no change of LI size. The UE shall move to Cell 1 at the Activation Time signalled in the RADIO BEARER RECONFIGURATION message and transmit a RADIO BEARER RECONFIGURATION COMPLETE message on Cell 1. The SS shall re-establish its configured AM RLC entities. The SS transmits a UE CAPABILITY ENQUIRY message on DL SRB2. The UE shall respond with a UE CAPABILITY INFORMATION message. The SS completes the procedure by transmitting a UE CAPABILITY INFORMATION CONFIRM message to the UE.

The SS configures its downlink transmission power settings according to columns "T1" in table 8.2.2.57 and transmits a RADIO BEARER RECONFIGURATION message to the UE to request the UE to perform a timing re-initialized hard handover with serving HS-DSCH cell change to Cell 2 with the SRBs and the PS RAB mapped on E-DCH/HS-DSCH (MAC-ehs), and with reconfiguration of the AM RBs from fixed to flexible with change of LI size (from 7 bits LI to 15 bits LI). The UE shall move to Cell 2 at the Activation Time signalled in the RADIO BEARER RECONFIGURATION message and transmit a RADIO BEARER RECONFIGURATION COMPLETE message on Cell 2. The SS shall re-establish its configured AM RLC entities. The SS transmits a UE CAPABILITY ENQUIRY message on DL SRB2. The UE shall respond with a UE CAPABILITY INFORMATION message. The SS completes the procedure by transmitting a UE CAPABILITY INFORMATION CONFIRM message to the UE.

The SS calls generic procedure C.3 to check that the UE is in CELL_DCH state on Cell 2.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | SS | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.2.2.57 |
| 2 | ← | | RADIO BEARER RECONFIGURATION | |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE transmits this message in Cell 2. |
| 4 | ← | | UE CAPABILITY ENQUIRY | |
| 5 | → | | UE CAPABILITY INFORMATION | |
| 6 | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 7 | SS | | | SS configures its downlink transmission power settings according to columns "T0" in table 8.2.2.57. |
| 8 | ← | | RADIO BEARER RECONFIGURATION | |
| 9 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE transmits this message in Cell 1. |
| 10 | ← | | UE CAPABILITY ENQUIRY | |
| 11 | → | | UE CAPABILITY INFORMATION | |
| 12 | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 13 | SS | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.2.2.57. |
| 14 | ← | | RADIO BEARER RECONFIGURATION | |
| 15 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE transmits this message in Cell 2. |
| 16 | ← | | UE CAPABILITY ENQUIRY | |
| 17 | → | | UE CAPABILITY INFORMATION | |
| 18 | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 19 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 2)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE DL MAC header type | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 1 |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 32 |
| - Timer_RST | 500 |
| - Max_RST | 1 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Flexible size |
| - Length indicator size | 7-bit |
| - In-sequence delivery | TRUE |
| - Receiving window size | 32 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |

| Information Element | Value/remark |
|---|---|
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE DL MAC header type | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 1 |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 32 |
| - Timer_RST | 500 |
| - Max_RST | 1 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Flexible size |
| - Length indicator size | 7-bit |
| - In-sequence delivery | TRUE |
| - Receiving window size | 32 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE DL MAC header type | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 1 |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |

| Information Element | Value/remark |
|---|---|
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 32 |
| - Timer_RST | 500 |
| - Max_RST | 1 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Flexible size |
| - Length indicator size | 7-bit |
| - In-sequence delivery | TRUE |
| - Receiving window size | 32 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE DL MAC header type | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 1 |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |

| Information Element | Value/remark |
|---|---|
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Flexible size |
| - Length indicator size | 7-bit |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not present |
| - CHOICE DL MAC header type | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 0 |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| UL Transport channel information common for all transport channels | Not Present |
| Deleted UL TrCH information | Not Present |
| Added or Reconfigured UL TrCH information | Not Present |
| DL Transport channel information common for all transport channel | Not Present |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - CHOICE DL MAC header type | MAC-hs |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | |
| - Number of Processes | Reference to clause 6.10.2.4.5 Parameter Set |
| - CHOICE *Memory Partitioning* | Implicit |
| - CHOICE DL MAC header type | MAC-ehs |
| - Added or reconfigured MAC-ehs reordering queue | |
| - MAC-ehs queue to add or reconfigure list | |
| - MAC-ehs queue id | 0 |
| - T1 | 50 |
| - Treset | 2 |
| - MAC-ehs window size | 16 |
| - MAC-ehs queue id | 1 |
| - T1 | 50 |
| - Treset | 2 |
| - MAC-ehs window size | 16 |
| - MAC-ehs queue to delete list | Not Present |
| Frequency info | |
| - UARFCN uplink(Nu) | Not present |

| Information Element | Value/remark |
|---|---|
| | Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for Cell 2 |
| CHOICE channel requirement | Not Present |
| E-DCH Info | Not Present |
| CHOICE Mode | FDD |
| - Downlink PDSCH information | Not Present |
| Downlink HS-PDSCH Information | |
| - HS-SCCH Info | |
| - CHOICE mode | FDD |
| - DL Scrambling Code | Not present |
| - HS-SCCH Channelisation Code Information | |
| - HS-SCCH Channelisation Code | 7 |
| - Measurement Feedback Info | |
| - CHOICE mode | FDD |
| - POhsdsch | 6 dB |
| - CQI Feedback cycle, k | 4 ms |
| - CQI repetition factor | 1 |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) |
| - CHOICE mode | FDD (no data) |
| - Downlink 64QAM configured | Not present |
| Downlink information common for all radio links | |
| - CHOICE DPCH info | Downlink F-DPCH info common for all RL |
| - Timing Indication | Initialise |
| - Timing maintained Synchronization indicator | Not Present |
| - Downlink F-DPCH power control information | |
| - CHOICE mode | FDD |
| - DPC Mode | Single TPC |
| - CHOICE mode | FDD |
| - DPCH compressed mode info | Not Present |
| - TX Diversity Mode | Not Present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| - Downlink information for each radio link | |
| - CHOICE mode | FDD |
| - Primary CPICH info | Set to the scrambling code for Cell 2 |
| - Cell ID | Not present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | FDD |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - DPCH frame offset | Set to value of Default DPCH Offset Value modulo 38400 |
| - Secondary CPICH info | Not present |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set |
| - Secondary scrambling code | 2 |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Code number | Any value between 0 and Spreading factor-1 |
| - Scrambling code change | Not Present |
| - TPC combination index | 0 |
| - Closed loop timing adjustment mode | Not present |

RADIO BEARER RECONFIGURATION COMPLETE (Step 3)

Use the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY ENQUIRY (Steps 4, 10, 16)

Use the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Steps 5, 11, 17)

Use the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Steps 6, 12, 18)

Use the same message sub-type found in TS 34.108 clause 9.

RADIO BEARER RECONFIGURATION (Step 8)

Use the same message as specified in step 2, except for the following.

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB mapping info | |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - CHOICE DL MAC header type | MAC-hs |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RLC info | |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Fixed size |
| - DL RLC PDU size | 144 bits |
| - RB mapping info | |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - CHOICE DL MAC header type | MAC-hs |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RLC info | |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Fixed size |
| - DL RLC PDU size | 144 bits |
| - RB mapping info | |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - CHOICE DL MAC header type | MAC-hs |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RLC info | |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Fixed size |
| - DL RLC PDU size | 144 bits |
| - RB mapping info | |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - CHOICE DL MAC header type | MAC-hs |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RLC info | |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Fixed size |
| - DL RLC PDU size | 336 bits |
| - RB mapping info | |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - CHOICE DL MAC header type | MAC-hs |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - CHOICE DL MAC header type | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 0 |
| - Downlink transport channel type | HS-DSCH |
| - CHOICE DL MAC header type | MAC-ehs |

| Information Element | Value/remark |
|---|---|
| - DL HS-DSCH MAC-ehs Queue Id | 1 |
| Added or Reconfigured DL TrCH information | |
| - CHOICE DL MAC header type | MAC-hs |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | (two queues) |
| - MAC-hs queue Id | 0 (for DTCH) |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue Id | 1 (for DCCH) |
| - MAC-d Flow Identity | 1 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 148 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not present |
| Downlink information per radio link list | 1 radio link |
| - Downlink information for each radio link | |
| - CHOICE mode | FDD |
| - Primary CPICH info | Set to the scrambling code for Cell 1 |

RADIO BEARER RECONFIGURATION COMPLETE (Steps 9, 15)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info | |
| - RB with PDCP information list | Not present |
| - START list | Check that this IE is present. |

RADIO BEARER RECONFIGURATION (Step 14)

Use the same message as specified in step 2, except for the following.

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RLC info | |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Flexible size |
| - Length indicator size | 15-bit |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RLC info | |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Flexible size |
| - Length indicator size | 15-bit |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RLC info | |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Flexible size |
| - Length indicator size | 15-bit |
| - RB information to reconfigure | (high-speed AM DTCH) |
| - RLC info | |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE DL RLC PDU size | Flexible size |
| - Length indicator size | 15-bit |

#### 8.2.2.57.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC (verifies test purpose 3a).

After step 4, the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH using AM RLC (verifies test purpose 1a).

After step 8, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC (verifies test purpose 3b).

After step 10, the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH using AM RLC (verifies test purpose 2).

After step 14, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC (verifies test purpose 3a).

After step 16, the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH using AM RLC (verifies test purpose 1b).

### 8.2.2.58 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Reconfigurations between CS voice over DCH and CS voice over HSPA)

#### 8.2.2.58.1 Definition and applicability

All UEs which support FDD and CS voice over HSPA.

#### 8.2.2.58.2 Conformance requirement

If the IE "RAB information for setup" is included, the procedure is used to establish or establish/release (only if CS domain RAB mapping is reconfigured between DCH and EDCH/HSPA) radio bearers belonging to a radio access bearer, and the UE shall:

1> if the radio access bearer identified with the IE "RAB info" does not exist in the variable ESTABLISHED_RABS:

2> create a new entry for the radio access bearer in the variable ESTABLISHED_RABS;

2> store the content of the IE "RAB info" in the entry for the radio access bearer in the variable ESTABLISHED_RABS;

2> indicate the establishment of each radio access bearer to the upper layer entity using the IE "CN domain identity", forwarding the content of the IE "RAB identity" and the IEs NAS Synchronization Indicator as well as the following IEs if included in the IE "RAB info": "MBMS Session identity" and/ or "MBMS Service Identity";

2> if prior to this procedure there exists no transparent mode radio bearer for the CN domain included in the IE "CN domain identity" and at least one transparent mode radio bearer is included in the IE "RB information to setup"; or

2> if at least one RLC-AM or RLC-UM radio bearer is included in the IE "RB information to setup":

3> calculate the START value only once during this procedure (the same START value shall be used on all new radio bearers created for this radio access bearer) according to subclause 8.5.9 for the CN domain as indicated in the IE "CN domain identity" in the IE "RAB info" part of the IE "RAB information to setup";

3> store the calculated START value in the variable START_VALUE_TO_TRANSMIT.

1> if the radio access bearer identified with the IE "RAB identity" in the IE "RAB info" already exists in the variable ESTABLISHED_RABS:

2> for each radio bearer in the variable ESTABLISHED_RABS for that radio access bearer:

3> release the PDCP and RLC entities for that radio bearer;

3> release the RAB subflow associated with the radio bearer;

3> delete the information about the radio bearer from the variable ESTABLISHED_RABS.

1> for each radio bearer in the IE "RB information to setup":

2> if the radio bearer identified with the IE "RB identity" does not exist in the variable ESTABLISHED_RABS:

3> perform the actions specified in subclause 8.6.4.3;

3> store information about the new radio bearer in the entry for the radio access bearer identified by "RAB info" in the variable ESTABLISHED_RABS;

3> create a new RAB subflow for the radio access bearer;

3> number the RAB subflow in ascending order, assigning the smallest number to the RAB subflow corresponding to the first radio bearer in the list;

3> if the IE "CN domain identity" in the IE "RAB info" is set to "PS domain" and the number of RAB subflows for the radio access bearer is greater than 1:

4> set the variable INVALID_CONFIGURATION to TRUE.

2> if the radio bearer identified with the IE "RB identity" already exists in the variable ESTABLISHED_RABS:

3> set the variable INVALID_CONFIGURATION to TRUE.

1> If CS voice service is configured over HSDPA and EDCH:

2> if the IE "UL AMR rate" is included in the IE "RAB information for setup", UE shall forward the content to upper layers;

2> if the IE "Max CS delay" is included in the IE "RAB information for setup", UE shall use the information in the IE "Max CS delay" to determine the maximum buffering of the voice frames (see [36]).

Reference

3GPP TS 25.331 clause 8.6.4.2

### 8.2.2.58.3 Test purpose

1 To confirm that the UE reconfigures CS domain RAB mapping from DCH to EDCH/HSPA according to the received RADIO BEARER SETUP message.

2 To confirm that the UE reconfigures CS domain RAB mapping from EDCH/HSPA to DCH according to the received RADIO BEARER SETUP message.

### 8.2.2.58.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CS-DCCH+DTCH_DCH (state 6-9) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports CS voice over HSPA

Test Procedure

The UE is in CELL_DCH state.

The SS transmits a RADIO BEARER SETUP message including the RAB Information for setup IE to reconfigure CS domain RAB mapping from DCH to EDCH/HSPA. The UE reconfigures the new bearers and transmits a RADIO BEARER SETUP COMPLETE on the DCCH.

Then, SS transmits a RADIO BEARER SETUP message including the RAB Information for setup IE to reconfigure CS domain RAB mapping from EDCH/HSPA to DCH. The UE reconfigures the new bearers and transmits a RADIO BEARER SETUP COMPLETE on the DCCH.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | Reconfiguration of CS RAB mapping from DCH to EDCH/HSPA |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ← | | RADIO BEARER SETUP | Reconfiguration of CS RAB mapping from EDCH/HSPA to DCH |
| 4 | → | | RADIO BEARER SETUP COMPLETE | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for "Speech to CELL_DCH / E-DCH / HS-DSCH CS RAB with DTX/DRX and enhanced data rate using one multiplexing option (1/1) and SRBs mapped on E-DCH/HSDSCH" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| - RAB information for setup | |
| - RAB info | (high-speed UM DTCH for CS domain) |
| - RAB identity | 0000 0001B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |

RADIO BEARER SETUP (Step 3)

Use the same message as specified for "Speech to CELL_DCH from CELL_DCH in CS" in 34.108.

8.2.2.58.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

After step 3, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

## 8.2.2.59 Radio Bearer Reconfiguration from Cell FACH ( Cell supporting HS-DSCH in Cell FACH) to CELL_FACH( Cell not supporting HS-DSCH in Cell FACH): Success (Cell re-selection)

8.2.2.59.1 Definition

All UEs which support FDD and HS-PDSCH in CELL_FACH.

8.2.2.59.2 Conformance requirement

If the UE performs cell re-selection during the reconfiguration procedure, the UE shall:

1> initiate a cell update procedure, as specified in subclause 8.3.1;

1> continue with the reconfiguration procedure.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION_CELL_FACH_STATE shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_FACH;

1> the variable H_RNTI is set;

1> the variable C_RNTI is set;

1> System Information Block type 5 or System Information Block type 5bis includes IE "HS-DSCH common system information".

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_CELL_FACH_STATE to FALSE;

1> if the UE is in CELL_FACH and variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to FALSE:

2> set the variable HS_DSCH_RECEPTION_GENERAL to FALSE;

2> stop any HS_SCCH reception procedures;

2> stop any HS-DSCH reception procedures;

2> clear the variable H_RNTI and remove any stored H-RNTI;

2> reset the MAC-ehs entity [15];

2> release all HARQ resources;

2> clear any stored IEs "HARQ info";

Whenever the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> use the IE "HS-DSCH common system information" in System Information Block type 5 or System Information Block type 5bis;

1> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving cell applying the scrambling code as received in the IE "DL Scrambling code" as received in IE "HS-DSCH common system information";

1> perform HS-DSCH reception procedures:

2> if the UE has a stored IE "HARQ info":

3> act on subclause 8.6.5.6b for the stored IE "HARQ info".

2> else:

3> act on subclause 8.6.5.20 for the IE "HARQ System info" as received in IE "HS-DSCH common system information".

2> and use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

1> and for BCCH reception perform HS-DSCH reception procedures by listening to the first indexed HS-SCCH code listed in the IE "HS-SCCH channelisation code" with "BCCH specific H-RNTI" as received in IE "HS-DSCH common system information".

Whenever the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to FALSE, the UE shall:

1> if the UE is in CELL_FACH and variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to FALSE:

2> not perform HS_SCCH reception procedures;

2> not perform HS-DSCH reception procedures.

3GPP TS 25.331 clauses 8.2.2.3, 8.2.2.4 ,8.2.2.8,8.3.1.7,8.5.36, 8.5.37

#### 8.2.2.59.3 Test purpose

1. To confirm that the UE stops HS-DSCH reception, starts FACH reception on S-CCPCH, and transmits RADIO BEARER RECONFIGURATION COMPLETE message in cell 2 when a cell re-selection occurs after receiving a RADIO BEARER RECONFIGURATION message via HS-DSCH in CELL_FACH.

#### 8.2.2.59.4 Method of test

##### Initial Condition

System Simulator: 2 cells: Cell 1 configures HS-DSCH for CELL_FACH in System Information Type 5/5bis, Cell 2 sends the default system information (HS-DSCH for CELL_FACH not configured)

UE: <FFS>

##### Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH in CELL_FACH

SYSTEM INFORMATION BLOCK TYPE 5/5bis (see specific message contents).

Test Procedure

**Table 8.2.2.59**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -69 | -69 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -69 | -69 | -60 |

Table 8.2.2.59 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked "T0" denote the initial conditions.

The UE is in CELL_FACH state in Cell 1 and has a radio bearer established that is mapped to HS-DSCH and RACH. The SS configures RB2 to stop transmission and reception of RLC PDUs. On transmitting a RADIO BEARER RECONFIGURATION message to the UE on RB 1 with radio bearers mapped to RACH and SCCPCH, the SS configures its downlink transmission power settings according to columns "T1" in table 8.2.2.59. The UE shall initiate the cell reselection procedure, which may occur either before or after submitting the RADIO BEARER RECONFIGURATION COMPLETE message for transmission on the DCCH using AM RLC. The UE transmits a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". The SS shall transmit a CELL UPDATE CONFIRM message on downlink DCCH and configure RB2 to continue transmission and reception of RLC PDUs after receiving CELL UPDATE message. Any RADIO BEARER RECONFIGURATION COMPLETE message that was previously submitted for transmission in the UE will now be received by the SS. UE transmit a UTRAN MOBILTY INFORMATION CONFIRM message on the DCCH using AM RLC. If not already done so, the UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE 1: The RADIO BEARER RECONFIGURATION COMPLETE message may be received by the SS either after transmission of CELL UPDATE CONFIRM (Option 1) or after reception UTRAN MOBILITY INFORMATION CONFIRM (Option 2).

NOTE 2: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | SS | | | The SS configures RB 2 to stop transmission and reception of RLC PDUs. |
| 1 | ← | | RADIO BEARER RECONFIGURATION | The message is transmitted on RB 1. Transmitted by the SS on HS-DSCH. IE "RRC State Indicator" is set to "CELL_FACH" and radio bearer mapped to RACH/SCCPCH |
| 2 | | | | The SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.2.2.59. |
| | | | | The following messages are transmitted in cell 2. |
| 3 | → | | CELL UPDATE | Value "cell reselection" shall be indicated in IE "Cell update cause" and “HS-PDSCH in CELL_FACH” is set to TRUE. |
| 4 | ← | | CELL UPDATE CONFIRM | See message content. |
| 5 | SS | | | The SS configures RB 2 to continue transmission and reception of RLC PDUs. |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE (Option 1) | Transmitted by the UE on RACH |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | Transmitted by the UE on RACH. |
| 8 | → | | RADIO BEARER RECONFIGURATION COMPLETE (Option 2) | Transmitted by the UE on RACH. |
| 9 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

SYSTEM INFORMATION TYPE 5/5bis

<FFS>

RADIO BEARER RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |

| | |
|---|---|
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Maximum allowed UL TX power | Not Present |

CELL UPDATE (Step 3)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |
| HS-PDSCH in CELL_FACH | Check to see if set to TRUE |

CELL UPDATE CONFIRM (Step 4)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 7)

Only the message type is checked.

#### 8.2.2.59.5 Test requirement

After step 2 the UE shall transmit a CELL UPDATE message on the CCCH with IE "cell update cause" set to "cell reselection" and and “HS-PDSCH in CELL_FACH” set to TRUE.

After step 5 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC.

The UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the DCCH using AM RLC. This message may be received by the SS earliest after step 5 and at latest after step 7.

### 8.2.2.60 Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_FACH and CELL_FACH to CELL_DCH: Success (with ongoing HS-DSCH reception)

#### 8.2.2.60.1 Definition and applicability

All UEs which support FDD and HS-PDSCH in CELL_FACH.

#### 8.2.2.60.2 Conformance requirement

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to [4] on that frequency;

2> if the UE finds a suitable UTRA cell on that frequency:

3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

4> when the cell update procedure completed successfully:

5> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.

1> 2> else, if the UE can not find a suitable UTRA cell on that frequency but it finds a suitable UTRA cell on another frequency:

3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

3> when the cell update procedure completed successfully:

4> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> 2> select a suitable UTRA cell according to [4];

3> 2> if the UE finds a suitable UTRA cell on the current frequency:

3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

4> when the cell update procedure completed successfully:

5> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.

2> else, if the UE can not find a suitable UTRA cell on the current frequency but it finds a suitable UTRA cell on another frequency:

3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

3> when the cell update procedure completed successfully:

4> if the UE is in CELL_PCH or URA_PCH state, initiate a cell update procedure according to subclause 8.3.1 using the cause "Uplink data transmission" and proceed as below.

1> start timer T305 using its initial value if timer T305 is not running and if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in the variable TIMERS_AND_CONSTANTS;

1> select PRACH according to subclause 8.5.17;

1> for TDD; or

1> for FDD, if the UE does not support HS-DSCH reception; or

1> if the IE "HS-DSCH common system information" is not included in System Information Block type 5 or System Information Block type 5bis:

2> select Secondary CCPCH according to subclause 8.5.19;

2> use the transport format set given in system information;

2> take the actions related to the HS_DSCH_RECEPTION_GENERAL variable as described in subclause 8.5.37a.

1> else:

2> if the RBs have the multiplexing option with transport channel type "HS-DSCH" for the DL and transport channel type "RACH" in the UL; and

2> if variable H_RNTI and variable C_RNTI are set:

3> start to receive HS-DSCH according to the procedure in subclause 8.5.36.

2> else:

3> clear variable C_RNTI and delete any stored C-RNTI value;

3> clear variable H_RNTI and delete any stored H-RNTI value;

3> clear any stored IE "HARQ Info".

…

If after state transition the UE enters CELL_DCH state, the UE shall, after the state transition:

1> in FDD; or

1> in TDD when "Primary CCPCH Info" is included indicating a new target cell and "New C-RNTI" is not specified:

2> remove any C-RNTI from MAC;

2> clear the variable C_RNTI.

If after state transition the UE leaves CELL_DCH state, the UE shall, after the state transition:

1> if any IEs related to HS-DSCH are stored in the UE:

2> clear any stored IE "Downlink HS-PDSCH information";

2> for 1.28Mcps TDD, clear the IE "HS-PDSCH Midamble Configuration" and the IE "HS-SCCH Set Configuration" in the IE "DL Multi Carrier Information";

2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

1> if any IEs related to E-DCH are stored in the UE:

2> clear any stored IE "E-DCH info";

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

The variable HS_DSCH_RECEPTION shall be set to TRUE only when all the following conditions are met:

1> for FDD and 1.28 Mcps TDD:

4> 2> the UE is in CELL_DCH state.

1> for 3.84 Mcps TDD or 7.68 Mcps TDD:

5> 2> a dedicated physical channel is allocated to the UE in the uplink.

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

6> 2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

7> 2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor.

…

The variable HS_DSCH_RECEPTION_CELL_FACH_STATE shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_FACH;

1> the variable H_RNTI is set;

1> the variable C_RNTI is set;

1> System Information Block type 5 or System Information Block type 5bis includes IE "HS-DSCH common system information".

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_CELL_FACH_STATE to FALSE;

1> if the UE is in CELL_FACH and variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to FALSE:

2> set the variable HS_DSCH_RECEPTION_GENERAL to FALSE;

2> stop any HS_SCCH reception procedures;

2> stop any HS-DSCH reception procedures;

2> clear the variable H_RNTI and remove any stored H-RNTI;

2> reset the MAC-ehs entity [15];

2> release all HARQ resources;

2> clear any stored IEs "HARQ info";

Whenever the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> use the IE "HS-DSCH common system information" in System Information Block type 5 or System Information Block type 5bis;

1> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving cell applying the scrambling code as received in the IE "DL Scrambling code" as received in IE "HS-DSCH common system information";

1> perform HS-DSCH reception procedures:

2> if the UE has a stored IE "HARQ info":

3> act on subclause 8.6.5.6b for the stored IE "HARQ info".

2> else:

3> act on subclause 8.6.5.20 for the IE "HARQ System info" as received in IE "HS-DSCH common system information".

2> and use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

1> and for BCCH reception perform HS-DSCH reception procedures by listening to the first indexed HS-SCCH code listed in the IE "HS-SCCH channelisation code" with "BCCH specific H-RNTI" as received in IE "HS-DSCH common system information".

Whenever the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to FALSE, the UE shall:

1> if the UE is in CELL_FACH and variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to FALSE:

2> not perform HS_SCCH reception procedures;

2> not perform HS-DSCH reception procedures.

Reference

3GPP TS 25.331 clauses 8.2.2.3, 8.5.25, 8.5.36

### 8.2.2.60.3 Test purpose

1 To confirm that the UE reconfigures radio bearer parameters, transits from CELL_DCH to CELL_FACH state and back again, with ongoing HS-DSCH reception, according to the received RADIO BEARER RECONFIGURATION message.

2 To confirm that the UE reconfigures radio bearer parameters and transits from CELL_FACH to CELL_DCH state, with ongoing HS-DSCH reception, and starts E-DCH transmission according to the received RADIO BEARER RECONFIGURATION message.

8.2.2.60.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH in CELL_FACH
- UE supports E-DPDCH (FDD only)

Test Procedure

The UE is in CELL_DCH state. Only signalling radio bearers have been established.

The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of a radio bearer mapped on E-DCH/HS-DSCH, with signalling radio bearers mapped on E-DCH/HS-DSCH. After the UE receives this message, it establishes a radio bearer and maps it to the E-DCH/HS-DSCH. The UE shall transmit a RADIO BEARER SETUP COMPLETE message using AM RLC.

The SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it moves to CELL_FACH state, with continuous HS-DSCH reception and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC.

Then, SS transmits a RADIO BEARER RECONFIGURATION message to the UE. After the UE receives this message, it moves to CELL_DCH state, starts E-DCH transmission whilst maintaining HS-DSCH reception and transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | Radio bearer mapping onto E-DCH/HS-DSCH with SRB mapped onto E-DCH/HS-DSCH |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | ← | | RADIO BEARER RECONFIGURATION | Stop of E-DCH transmission, ongoing HS-DSCH transmission and transit to CELL_FACH state, |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 5 | ← | | RADIO BEARER RECONFIGURATION | Start of E-DCH transmission, ongoing HS-DSCH transmission and transit to CELL_DCH state |
| 6 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 1)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH (1/1) and SRBs mapped on E-DCH/HS-DSCH" (condition A14) in TS 34.108 clause 9, except for the following:

| Information Element | Value/remark |
|---|---|
| **RAB information for setup** | |
| - RAB identity | (high-speed AM DTCH for PS domain)<br>0000 0101B |
| - CN domain identity | PS domain |
| - NAS Synchronisation | Not Present |
| - Re-establishment timer | Use T315 |
| - RB information to setup | |
| - RB identity | 25 |
| - PDCP Info | Not Present |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - Length Indicator size | 7 |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - Alternative E-bit interpretation | |
| - Use special value of HE field | TRUE |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - UL Transport channel identity | Not Present |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE *DL MAC header type* | MAC-ehs |

| Information Element | Value/remark |
|---|---|
| - DL HS-DSCH MAC-ehs Queue Id | 1 |
| - Logical channel identity | 7 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE *DL MAC header type* | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 1 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | Not Present |
| **RB information to be affected** | |
| - RB identity | 1 (UM DCCH for RRC) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH Mac-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE *DL MAC header type* | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 0 |
| - Logical channel identity | 1 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE *DL MAC header type* | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 0 |
| - RB identity | 2 (AM DCCH for RRC) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identit | 2 |
| - E-DCH Mac-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |

| Information Element | Value/remark |
|---|---|
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE *DL MAC header type* | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 0 |
| - Logical channel identity | 2 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE *DL MAC header type* | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 0 |
| - Logical channel identity | 2 |
| - RB identity | 3 (AM DCCH for NAS High Priority) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH Mac-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE *DL MAC header type* | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 0 |
| - Logical channel identity | 3 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE *DL MAC header type* | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 0 |
| - Logical channel identity | 3 |
| - RB identity | 4 (AM DCCH for NAS Low Priority) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |

| Information Element | Value/remark |
|---|---|
| - Logical channel identity | 4 |
| - E-DCH Mac-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DSCH Transport channel identity | Not Present |
| - CHOICE *DL MAC header type* | MAC-ehs |
| - DL HS-DSCH MAC-ehs Queue Id | 0 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| Added or Reconfigured UL TrCH information | 1 E-DCH added with one DCCH Mac-d flow and one DTCH Mac-d flow. Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Added or Reconfigured DL TrCH information | 1 TrCH (HS-DSCH for DCCH and DTCH). |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | |
| - Number of Processes | Reference to clause 6.10.2.4.5 Parameter Set |
| - CHOICE *Memory Partitioning* | Implicit |
| - CHOICE *DL MAC header type* | MAC-ehs |
| - Added or reconfigured MAC-ehs reordering queue | |
| - MAC-ehs queue to add or reconfigure list | (two queues) |
| - MAC-ehs queue Id | 0 (for DCCH) |
| - T1 | 50 |
| - MAC-ehs window size | 16 |
| - MAC-ehs queue Id | 1 (for DTCH) |
| - T1 | 50 |
| - MAC-ehs window size | 16 |
| - MAC-ehs queue to delete list | Not Present |
| - DCH quality target | Not Present |

RADIO BEARER RECONFIGURATION (Step 3)

Use the same message as specified for "Packet to CELL_FACH from CELL_DCH in PS" in 34.108 (condition A5) in TS 34.108 clause 9, except for the following, except for the following:

| Information Element | Value/remark |
|---|---|
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |

RADIO BEARER RECONFIGURATION (Step 5)

Use the same message as specified for "Packet to CELL_DCH from CELL_FACH in PS" in 34.108 (condition A4) in TS 34.108 clause 9, except for the following:

| Information Element | Value/remark |
|---|---|
| Added or Reconfigured UL TrCH information | 1 E-DCH added with one DCCH Mac-d flow and one DTCH Mac-d flow. Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Uplink DPCH info<br>E-DCH info<br>Downlink HS-PDSCH Information<br>Downlink information for each radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |

#### 8.2.2.60.5 Test requirements

After step 3, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

After step 5, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

## 8.2.3 Radio Bearer Release

### 8.2.3.1 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success

#### 8.2.3.1.1 Definition

-

#### 8.2.3.1.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RELEASE message; or

it shall:

1> perform the physical layer synchronisation procedure as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

#### 8.2.3.1.3 Test purpose

To confirm that the UE releases the existing radio bearer according to a RADIO BEARER RELEASE message.

#### 8.2.3.1.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RELEASE message to the UE. The UE releases the radio access bearer and transmits a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RELEASE | |
| 2 | → | | RADIO BEARER RELEASE COMPLETE | Release the radio bearer. |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE

None.

#### 8.2.3.1.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.3.1a Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (TDD Only)

#### 8.2.3.1a.1 Definition

The features and operation of UpPCH shifting have been introduced to core specification (TS25.331 clause 8.6.6.26) for LCR TDD.

#### 8.2.3.1a.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RELEASE message; or

it shall:

1> perform the physical layer synchronisation procedure as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.3.1a.3 Test purpose

To confirm that the UE releases the existing radio bearer according to a RADIO BEARER RELEASE message.

### 8.2.3.1a.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RELEASE message to the UE. The UE releases the radio access bearer and transmits a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RELEASE | |
| 2 | → | | RADIO BEARER RELEASE COMPLETE | Release the radio bearer. |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 3 (TDD)

| Information Element | Value/remark | Version |
|---|---|---|
| - SIB4 Indicator | TRUE | |
| - Cell identity | 0000 0000 0000 0000 0000 0000 0100B | |
| - Cell selection and re-selection info | | |
| - Mapping info | Not present | |
| - Cell selection and reselection quality measure | (no data) | |
| - CHOICE mode | TDD | |
| - Sintrasearch | 10 dB | |
| - Sintersearch | 10 dB | |
| - SsearchHCS | Not present | |
| - RAT List | Not present | |
| - Qrxlevmin | -103 dBm | |
| - $Qhyst1_S$ | 0 dB | |
| - Treselections | 0 seconds | |
| - HCS Serving cell information | Not present | |
| - Maximum allowed UL TX power | 30dBm | |
| - Cell Access Restriction | | |
| - Cell barred | Not barred | |
| - Intra-frequency cell re-selection indicator | Not present | |
| - $T_{barred}$ | Not present | |
| - Cell Reserved for operator use | Not reserved | |
| - Cell Reservation Extension | Not reserved | |
| - Access Class Barred List | | |
| - Access Class Barred0 | Not barred | |
| - Access Class Barred1 | Not barred | |
| - Access Class Barred2 | Not barred | |
| - Access Class Barred3 | Not barred | |
| - Access Class Barred4 | Not barred | |
| - Access Class Barred5 | Not barred | |
| - Access Class Barred6 | Not barred | |
| - Access Class Barred7 | Not barred | |
| - Access Class Barred8 | Not barred | |
| - Access Class Barred9 | Not barred | |
| - Access Class Barred10 | Not barred | |
| - Access Class Barred11 | Not barred | |
| - Access Class Barred12 | Not barred | |
| - Access Class Barred13 | Not barred | |
| - Access Class Barred14 | Not barred | |
| - Access Class Barred15 | Not barred | |
| - Domain Specific Access Restriction Parameters For PLMN Of MIB | Not present | REL-6 |
| - Domain Specific Access Restriction For Shared Network | Not present | REL-6 |
| -v4b0NonCriticalExtensions | | |
| -sysInfoType3-v4b0ext | | |
| - mapping-LCR | 22 | |

RADIO BEARER RELEASE(Setp 1)

Use the same message sub-type titled in [9] TS 34.108 clause 9 with the following exception:

| Information Element | Value/Remarks |
|---|---|
| Deleted TrCH information list | A1,A2, A3,A4, A5, A6,A7, A8 |
| radioBearerSetup-r4-add-ext | |
| radioBearerSetup-r4-TDD128-add-ext | |
| UpPCHpositionInfo | 22 |

8.2.3.1a.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.3.2 Void

### 8.2.3.3 Void

### 8.2.3.4 Void

### 8.2.3.5 Void

### 8.2.3.6 Void

### 8.2.3.7 Radio Bearer Release for transition from CELL_DCH to CELL_FACH: Success

#### 8.2.3.7.1 Definition

#### 8.2.3.7.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RELEASE message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304.

1> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

2> initiate a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Uplink data transmission";

4> proceed as below.

1> select PRACH according to TS 25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> if the contents of the variable C_RNTI is empty:

2> perform a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Uplink data transmission";

4> proceed as below.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

8.2.3.7.3 Test purpose

To confirm that the UE release the existing the radio bearer according to a RADIO BEARER RELEASE message.

8.2.3.7.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DTCH+DCCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RELEASE message to the UE. The UE releases the radio access bearer and transmits a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RELEASE | SS releases the radio bearer in the fashion specified in the message and allocate common channel resources to carry the remaining radio bearers. |
| 2 | | | | The UE selects PRACH and S-CCPCH indicated in SIB5/SIB5bis and SIB6 after entering CELL FACH state.<br>The UE shall release dedicated channels, and reconfigure the remaining radio bearers using the common channel. |
| 3 | → | | RADIO BEARER RELEASE COMPLETE | |
| 4 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |

#### 8.2.3.7.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.3.8 Radio Bearer Release for transition from CELL_DCH to CELL_FACH: Success (Cell re-selection)

#### 8.2.3.8.1 Definition

#### 8.2.3.8.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RELEASE message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304

1> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

2> initiate a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

1> select PRACH according to TS 25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> if the contents of the variable C_RNTI is empty:

2> perform a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Uplink data transmission";

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

#### Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.3.1.7.

### 8.2.3.8.3 Test purpose

To confirm that the UE transmits a RADIO BEARER RELEASE COMPLETE message after the UE completes a cell update procedure.

### 8.2.3.8.4 Method of test

#### Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

NOTE: The 'timer poll' value in the SS RLC transmit entity should be set to 800 ms.

#### Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RELEASE message to request the UE to transit from CELL_DCH to CELL_FACH. The UE initiates the cell update procedure because the UE cannot detect the specified cell in this message. The UE transmits a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". The SS shall transmit a CELL UPDATE CONFIRM message on downlink DCCH after receiving CELL UPDATE message. The UE then transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC. The UE transmits a RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | ← | | RADIO BEARER RELEASE | Assigned the transition from CELL_DCH to CELL_FACH |
| 4 | → | | CELL UPDATE | The value "cell reselection" shall be set in IE "cell update cause". |
| 5 | ← | | CELL UPDATE CONFIRM | See message content. |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 7 | → | | RADIO BEARER RELEASE COMPLETE | |
| 8 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 3) (FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary scrambling code | <br><br>150 |

RADIO BEARER RELEASE (Step 3) (TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Downlink information for each radio links<br>- Primary CCPCH info<br>- Cell parameters ID | <br><br>4 |

CELL UPDATE (Step 4)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 5)

Use the same message type found in clause [9] TS 34.108 clause 9, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 6)

Only the message type is checked.

#### 8.2.3.8.5 Test requirement

After step 3 the UE shall transmit a CELL UPDATE message on the CCCH with IE "Cell update cause" set to "cell reselection".

After step 5 UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC.

After step 6 UE shall transmit a RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC.

### 8.2.3.9 Radio Bearer Release for transition from CELL_FACH to CELL_DCH: Success

#### 8.2.3.9.1 Definition

#### 8.2.3.9.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RELEASE message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_DCH state, the UE shall, after the state transition:

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

#### 8.2.3.9.3 Test purpose

To confirm that an UE, in state CELL_FACH, releases the radio access bearers using common physical channel. After the release, it shall access the affected radio bearers on the DPCH.

#### 8.2.3.9.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The SS transmits a RADIO BEARER RELEASE message to the UE. In this message, SS commands the UE to release radio access bearers on common physical channel. At the same time, SS allocates DPCH to support the affected radio bearers. The UE shall release the indicated radio access bearers and transmit a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RELEASE | |
| 2 | | | | UE shall release the radio access bearers carried by common physical channel. |
| 3 | → | | RADIO BEARER RELEASE COMPLETE | |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER RELEASE (Step 1)

Use the same message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9.

#### 8.2.3.9.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message using the dedicated physical channel allocated.

### 8.2.3.10 Void

### 8.2.3.11 Radio Bearer Release for transition from CELL_FACH to CELL_DCH: Failure (Physical channel failure and successful reversion to old configuration)

#### 8.2.3.11.1 Definition

#### 8.2.3.11.2 Conformance requirement

When a physical dedicated channel establishment is initiated by the UE, the UE shall start a timer T312 and wait for layer 1 to indicate N312 "in sync" indications. On receiving N312 "in sync" indications, the physical channel is considered established and the timer T312 is stopped and reset.

If the timer T312 expires before the physical channel is established, the UE shall consider this as a "physical channel establishment failure".

…

If the received message caused the UE to be in CELL_DCH state and the UE failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> revert to the configuration prior to the reception of the message (old configuration);

1> if the old configuration does not include dedicated physical channels (CELL_FACH state):

2> select a suitable UTRA cell according to TS 25.304;

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

…

The UE shall:

1> in case of reception of a RADIO BEARER RELEASE message:

…

2> transmit a RADIO BEARER RELEASE FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9, 8.5.4.

### 8.2.3.11.3 Test purpose

To confirm that the UE reverts to the old configuration and transmits a RADIO BEARER RELEASE FAILURE message on the DCCH using AM RLC if the UE fails to release the radio bearers in accordance with the specified settings in RADIO BEARER RELEASE message before T312 timer expires.

### 8.2.3.11.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits a RADIO BEARER RELEASE message and keeps its current physical channel configuration. The UE is expected to encounter a failure while releasing the radio bearer. After T312 timer expires, the UE shall revert to the old radio bearer configuration, so the UE transmits a RADIO BEARER RELEASE FAILURE message on the DCCH using AM RLC which is set to "physical channel failure" in IE "failure cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | RADIO BEARER RELEASE | |
| 2 | | | | The SS does not configure the specified L1. |
| 3 | → | | RADIO BEARER RELEASE FAILURE | After T312 expiry the UE fails to release a radio bearer and reverts to the old configuration. |
| 4 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark | Version |
|---|---|---|
| Measurement Identity | 1 | |
| Measurement Command | Setup | |
| Measurement reporting mode | | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC | |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting | |
| Additional measurement list | Not Present | |
| CHOICE measurement type | Traffic Volume Measurement | |
| - Traffic volume measurement object list | | |
| - Uplink transport channel type | RACHorCPCH | R99 and Rel-4 |
| | RACH | Rel-5 |
| - UL Target Transport Channel ID | Not Present | |
| - Traffic volume measurement quantity | | |
| - Measurement quantity | RLC Buffer Payload | |
| - Traffic volume reporting quantity | | |
| - RLC Buffer Payload for each RB | True | |
| - Average of RLC Buffer Payload for each RB | False | |
| - Variance of RLC Buffer Payload for each RB | False | |
| - Measurement validity | | |
| - UE state | All states | |
| - CHOICE Reporting criteria | Periodical Reporting Criteria | |
| - Amount of reporting | Infinity | |
| - Reporting interval | 8000 | |
| DPCH compressed mode status | Not Present | |

MEASUREMENT REPORT (Step 0b and 4)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 20 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER RELEASE (Step 1)

Use the message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in Clause 9 of TS 34.108.

RADIO BEARER RELEASE FAILURE (Step 2)

The contents of RADIO BEARER RELEASE FAILURE message in this test case is the same as the RADIO BEARER RELEASE FAILURE message as found in Clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Physical channel failure |

### 8.2.3.11.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

After step 2 the UE shall transmit a RADIO BEARER RELEASE FAILURE message on the DCCH using AM RLC, setting the value "physical channel failure" in IE "failure cause".

After step 3, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

### 8.2.3.12 Void

### 8.2.3.13 Void

### 8.2.3.14 Void

### 8.2.3.15 Radio Bearer Release for transition from CELL_FACH to CELL_FACH: Success

#### 8.2.3.15.1 Definition

#### 8.2.3.15.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RELEASE message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_FACH state upon reception of the reconfiguration message and remains in CELL_FACH state, the UE shall:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency;

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

If the IE "RAB information to reconfigure" is included then the UE shall:

1> if the entry for the radio access bearer identified by the IE "CN domain identity" together with the IE "RAB Identity" in the variable ESTABLISHED_RABS already exists:

…

1> else:

2> set the variable INVALID_CONFIGURATION to TRUE.

If the variable INVALID_CONFIGURATION is set to TRUE the UE shall:

1> keep the configuration existing before the reception of the message;

1> transmit a failure response message, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

3> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry.

2> set the IE "failure cause" to "invalid configuration".

1> set the variable INVALID_CONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

…

1> in case of reception of a RADIO BEARER RECONFIGURATION message:

2> if the radio bearer reconfiguration procedure affects several radio bearers:

3> (may) include the identities of the radio bearers for which the procedure would have been successful into the RADIO BEARER RECONFIGURATION FAILURE message.

2> transmit a RADIO BEARER RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.6.4.2a, 8.2.2.11, 8.2.2.9.

### 8.2.3.15.3 Test purpose

To confirm that the UE releases the existing the radio bearer(s) according to the RADIO BEARER RELEASE message.

### 8.2.3.15.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The SS transmits a RADIO BEARER RELEASE message to the UE. The UE releases the radio access bearer and transmits a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RELEASE | |
| 2 | | | Void | |
| 3 | → | | RADIO BEARER RELEASE COMPLETE | |
| 4 | ← | | RADIO BEARER RECONFIGURATION | The IE "RAB information to reconfigure" is included with the same RAB identity as was released with the RADIO BEARER RELEASE message. |
| 5 | → | | RADIO BEARER RECONFIGURATION FAILURE | The UE responds with failure, in case the RB is properly removed |
| 6 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9.

RADIO BEARER RECONFIGURATION (Step 4)

The contents of RADIO BEARER RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_FACH from CELL_FACH in PS" as found in clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Message Type | | |
| RRC transaction identifier | Arbitrarily selects an integer between 0 and 3 | |
| Integrity check info | | |
| - message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. | |
| - RRC message sequence number | SS provides the value of this IE, from its internal counter. | |
| Integrity protection mode info | Not Present | |
| Ciphering mode info | Not Present | |
| Activation time | Now | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| RRC State indicator | CELL_FACH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| RAB information to reconfigure list | | |
| - RAB information to reconfigure | (AM DTCH for PS domain) | |
| - RAB identity | 0000 0101B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. | |
| - CN domain identity | PS domain | |
| - NAS Synchronization Indicator | 0101B<br>The first/ leftmost bit of the bit string contains the most significant bit of the NAS Synchronisation Indicator. | |
| RB information to reconfigure list | TS25.331 specifies that "Although this IE is not always required, need is MP to align with ASN.1". | |
| - RB information to reconfigure | (Dummy) | |
| - RB identity | 1 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| RB information to be affected list | Not Present | |
| UL Transport channel information for all transport channels | Not Present | |
| Deleted TrCH information list | Not Present | |
| Added or Reconfigured TrCH information list | Not Present | |
| CHOICE mode | Not Present | |
| Deleted DL TrCH information list | Not Present | |
| Added or Reconfigured DL TrCH information list | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Not Present | |
| CHOICE Mode | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | Not Present | |

RADIO BEARER RECONFIGURATION FAILURE (step 5)

The contents of RADIO BEARER RECONFIGURATION FAILURE message in this test case is the same as the RADIO BEARER RECONFIGURATION FAILURE message as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Invalid configuration |

#### 8.2.3.15.5 Test requirement

After step 1 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message using AM RLC on the common physical channel.

After step 4, UE shall transmit a RADIO BEARER RECONFIGURATION FAILURE message to verify that the RAB is properly removed.

### 8.2.3.16 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (Subsequently received)

#### 8.2.3.16.1 Definition

#### 8.2.3.16.2 Conformance requirement

If the IE "RRC transaction identifier" is included in a received message, the UE shall perform the actions below. The UE shall:

If the received message is any of the messages:

- RADIO BEARER RELEASE; or

…

the UE shall:

2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

2> if the variable CELL_UPDATE_STARTED is set to TRUE; or

2> if the table "Accepted transactions" in the variable TRANSACTIONS contains an entry with an IE "Message Type" set to ACTIVE SET UPDATE; or

2> if the received message contains a protocol error according to TS 25.331 clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

4> ignore the transaction; and

4> continue with any ongoing processes and procedures as the message was not received;

4> and end the procedure.

3> else:

…

Reference

3GPP TS 25.331 clause 8.6.3.11.

#### 8.2.3.16.3 Test purpose

To confirm that if the UE receives a new RADIO BEARER RELEASE message before the UE releases the radio bearer according to a previous RADIO BEARER RELEASE message it ignore the new RADIO BEARER RELEASE message and configures according to the previous RADIO BEARER RELEASE message received.

8.2.3.16.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. When the SS transmits a RADIO BEARER RELEASE message to the UE before the UE releases the radio access bearer, the UE ignores the second RADIO BEARER RELEASE message and releases the radio bearer according to the previous RADIO BEARER RELEASE message received. Finally, the UE shall transmit RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | RADIO BEARER RELEASE | For FDD, the SS sets its UL scrambling code number to "1". |
| 2 | | ← | RADIO BEARER RELEASE | Message sent before the expiry of "activation time" specified in message in step 1. For FDD, the IE "Scrambling code number" is set to "2". For TDD the code combination assigned is different from that assigned in stage 1. |
| 3 | | → | RADIO BEARER RELEASE COMPLETE | The UE ignores the RADIO BEARER RELEASE message in step 2 and release radio bearer according to the RADIO BEARER RELEASE message in step 1. |
| 4 | | ←→ | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 1) (FDD)

The contents of RADIO BEARER RELEASE message in this test case is identical to the message sub-type title "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256 |
| - Uplink DPCH Info<br>- Scrambling code number | <br>1 |

RADIO BEARER RELEASE (Step 1) (TDD)

The contents of RADIO BEARER RELEASE message in this test case is identical to the message sub-type title "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256 |
| Uplink DPCH timeslots and codes<br>- First timeslot code list | <br>Assigned by SS |

RADIO BEARER RELEASE (Step 2) (FDD)

The contents of RADIO BEARER RELEASE message in this test case is identical to the message sub-type title "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH Info<br>- Scrambling code number | Not Present<br><br>2 |

RADIO BEARER RELEASE (Step 2) (TDD)

The contents of RADIO BEARER RELEASE message in this test case is identical to the message sub-type title "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | Not Present<br><br>A different code combination to that used in step 1. |

#### 8.2.3.16.5 Test requirement

After step 2 the UE shall transmit an RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC.

### 8.2.3.17 Radio Bearer Release for transition from CELL_FACH to CELL_DCH: Success (Subsequently received)

#### 8.2.3.17.1 Definition

#### 8.2.3.17.2 Conformance requirement

If the IE "RRC transaction identifier" is included in a received message, the UE shall perform the actions below. The UE shall:

If the received message is any of the messages:

- RADIO BEARER RELEASE; or

  …

the UE shall:

2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

2> if the variable CELL_UPDATE_STARTED is set to TRUE; or

2> if the table "Accepted transactions" in the variable TRANSACTIONS contains an entry with an IE "Message Type" set to ACTIVE SET UPDATE; or

2> if the received message contains a protocol error according to TS 25.331 clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

4> ignore the transaction; and

4> continue with any ongoing processes and procedures as the message was not received;

4> and end the procedure.

3> else:

Reference

3GPP TS 25.331 clause 8.6.3.11.

### 8.2.3.17.3 Test purpose

To confirm that if the UE receives a new RADIO BEARER RELEASE message before the UE releases the radio bearer according to a previous RADIO BEARER RELEASE message, it ignores the new RADIO BEARER RELEASE message and configures according to the previous RADIO BEARER RELEASE message received.

### 8.2.3.17.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. When the SS transmits a RADIO BEARER RELEASE message to the UE before the UE releases the radio access bearer, the UE ignores the second RADIO BEARER RELEASE message and releases the radio bearers according to the previous RADIO BEARER RELEASE message received. Finally, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 2 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RELEASE | For FDD, the SS sets its UL scrambling code to "1". |
| 2 | ← | | RADIO BEARER RELEASE | For TDD the IE "Secondary scrambling code" is set to "2". For TDD, the code combination assigned is different from that assigned in stage 1. |
| 3 | → | | RADIO BEARER RELEASE COMPLETE | The UE ignores the RADIO BEARER RELEASE message in step 2 and release radio bearers according to the RADIO BEARER RELEASE message in step 1. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER RELEASE (Step 1) (FDD)

The contents of RADIO BEARER RELEASE message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time Info<br>- Uplink DPCH Info<br>- Scrambling code number | Not present<br><br>1 |

RADIO BEARER RELEASE (Step 1) (TDD)

The contents of RADIO BEARER RELEASE message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time Info<br>Uplink DPCH timeslots and codes<br>- First timeslot code list | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256<br><br>Assigned by SS |

RADIO BEARER RELEASE (Step 2) (FDD)

The contents of RADIO BEARER RELEASE message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH Info<br>- Scrambling code number | Not Present<br><br>2 |

RADIO BEARER RELEASE (Step 2) (TDD)

The contents of RADIO BEARER RELEASE message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | Not Present<br><br>A different code combination to that used in step 1. |

#### 8.2.3.17.5 Test requirement

After step 2 the UE shall transmit an RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC.

### 8.2.3.18 Radio Bearer Release from CELL_DCH to CELL_PCH: Success

#### 8.2.3.18.1 Definition

#### 8.2.3.18.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RELEASE message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_PCH or URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304.

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> set the variable INVALID_CONFIGURATION to TRUE.

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

If the new state is CELL_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (CELL_PCH);

…

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.3.18.3 Test purpose

To confirm that the UE transmits a RADIO BEARER RELEASE COMPLETE before entering CELL_PCH state after it received a RADIO BEARER RELEASE message and released its radio access bearers.

8.2.3.18.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RELEASE message. The UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC and enters into CELL_PCH state. SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RELEASE | |
| 2 | → | | RADIO BEARER RELEASE COMPLETE | The UE sends this message before it completes state transition. |
| 2a | | | Void | SS sends the L2 ack on the RADIO BEARER RELEASE COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step. Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 3 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 1) (FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Downlink information for each radio link | |
| - Primary CPICH info | |
| - Primary scrambling code | 100 |

RADIO BEARER RELEASE (Step 1) (TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| -Cell parameters ID | 4 |

#### 8.2.3.18.5 Test requirement

After step 1 the UE transmits a RADIO BEARER RELEASE COMPLETE message on uplink DCCH using AM RLC.

### 8.2.3.19 Radio Bearer Release from CELL_DCH to URA_PCH: Success

#### 8.2.3.19.1 Definition

#### 8.2.3.19.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RELEASE message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_PCH or URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304.

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS 25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> set the variable INVALID_CONFIGURATION to TRUE.

…

1> if the UE enters URA_PCH state, and after cell selection the criteria for URA update caused by "URA reselection" according to TS 25.331 subclause 8.3.1 is fulfilled:

2> initiate a URA update procedure according to TS 25.331 subclause 8.3.1 using the cause "URA reselection";

2> when the URA update procedure is successfully completed:

3> the procedure ends.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

If the new state is URA_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (URA_PCH);

…

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.3.19.3 Test purpose

To confirm that the UE transmits a RADIO BEARER RELEASE COMPLETE before entering URA_PCH state after it received a RADIO BEARER RELEASE message and released its radio bearers.

### 8.2.3.19.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RELEASE message. The UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC and enters into URA_PCH state. SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RELEASE | |
| 2 | → | | RADIO BEARER RELEASE COMPLETE | The UE sends this message before it completes state transition. |
| 2a | | | Void | SS sends the L2 ack on the RADIO BEARER RELEASE COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step. Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 3 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 1) (FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator<br>UTRAN DRX cycle length coefficient | URA_PCH<br>3 |
| Downlink information for each radio link<br>- Primary CPICH info<br>- Primary scrambling code | <br><br>100 |

RADIO BEARER RELEASE (Step 1) (TDD)

| Information Element | Value/remark |
|---|---|
| RRC State Indicator<br>UTRAN DRX cycle length coefficient<br>Downlink information for each radio links<br>- Primary CCPCH info<br>-Cell parameters ID | CELL_PCH<br>3<br><br><br>4 |

#### 8.2.3.19.5 Test requirement

After step 1 the UE transmits a RADIO BEARER RELEASE COMPLETE message to the UE on uplink DCCH using AM RLC.

### 8.2.3.20 Radio Bearer Release for transition from CELL_DCH to CELL_FACH (Frequency modification): Success

#### 8.2.3.20.1 Definition

#### 8.2.3.20.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RELEASE message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS5.304.

1> if the received reconfiguration message included the IE "Primary CPICH info"), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" :

2> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "Uplink data transmission";

4> proceed as below.

1> select PRACH according to TS25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> use the transport format set given in system information;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

1> if the contents of the variable C_RNTI is empty:

2> perform a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "Uplink data transmission";

4> proceed as below.

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC, using the new configuration after the state transition.

1> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.3.20.3 Test purpose

1. To confirm that the UE transits from CELL_DCH to CELL_FACH according to the RADIO BEARER RELEASE message.
2. To confirm that the UE transmits RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC on a common physical channel in a different frequency.

### 8.2.3.20.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

UE: Registered idle mode on CS" (state 2) or "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

**Table 8.2.3.20**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -85 | Off | -55 |

Table 8.2.3.20 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.3.20. The SS and UE execute procedure P3 or P5. Next The SS and the UE execute procedure P7 or P9 and then execute procedure P11 or P13. The SS switches its downlink transmission power settings to columns "T1" transmits a RADIO BEARER RELEASE message with no IE "Frequency info" to the UE. The UE releases the radio access bearer and moves into cell 6. The UE transmits CELL UPDATE message with IE "Cell update cause" set to "cell reselection". SS then transmit CELL UDPATE CONFIRM with IE "New C_RNTI". The UE shall respond with an UTRAN MOBILITY INFORMATION CONFIRM message, and then transmits a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC. The SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1a | ←→ | | SS executes procedure P3 (clause 7.4.2.1.2) or P5 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 1b | ←→ | | SS executes procedure P7 (clause 7.4.2.3.2) or P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 1c | ←→ | | SS executes procedure P11 (clause 7.4.2.5.2) or P13 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.3.20. |
| 3 | | | Void | |
| 4 | ← | | RADIO BEARER RELEASE | Not including frequency information. |
| 5 | → | | CELL UPDATE | The IE "Cell update cause" is set to "cell reselection". |
| 6 | ← | | CELL UPDATE CONFIRM | Including the IE" New C-RNTI" |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | → | | RADIO BEARER RELEASE COMPLETE | |
| 9 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 4)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" or "Non speech to CELL_FACH from CELL_DCH in CS" or "Speech to CELL_FACH from CELL_DCH in CS" in [9] TS 34.108 clause 9 with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info<br>Downlink information for each radio link | Not present |

CELL UPDATE (Step 5)

The contents of CELL UPDATE message are identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 6)

The contents of CELL UPDATE CONFIRM message are identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |

UTRAN MOBILITY UPDATE CONFIRM (Step 7)

The contents of UTRAN MOBILITY UPDATE CONFIRM message are identical as "UTRAN MOBILITY UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9.

#### 8.2.3.20.5 Test requirement

After step 4 the UE shall transmit a CELL UPDATE message on the CCCH in cell 6.

After step 6 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC in cell 6.

After step 7 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC in cell 6.

After step 8 the UE shall be in CELL_FACH state of cell 6.

### 8.2.3.21 Radio Bearer Release from CELL_DCH to CELL_PCH (Frequency modification): Success

#### 8.2.3.21.1 Definition

#### 8.2.3.21.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RELEASE message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

…

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE on the uplink DCCH using AM RLC.

If after state transition the UE enters CELL_PCH state from CELL_DCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

2> if the UE finds a suitable UTRA cell on that frequency:

3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received

reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

4> proceed as below.

2> else, if the UE can not find a suitable UTRA cell on that frequency but it finds a suitable UTRA cell on another frequency:

3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

3> proceed as below.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

2> if the UE finds a suitable UTRA cell on the current frequency:

3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

4> proceed as below.

2> else, if the UE can not find a suitable UTRA cell on the current frequency but it finds a suitable UTRA cell on another frequency:

3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

3> proceed as below.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> start timer T305 using its initial value if timer T305 is not running and if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in the variable TIMERS_AND_CONSTANTS;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS25.331 subclause 8.6.3.2.

…

If the new state is CELL_PCH or URA_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (CELL_PCH or URA_PCH, respectively);

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

8.2.3.21.3 Test purpose

1. To confirm that the UE transmits RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_DCH to CELL_PCH according to the RADIO BEARER RELEASE message.
3. To confirm that the UE releases the radio access bearer and selects a common physical channel in a different frequency indicated by SS.

8.2.3.21.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 is active and cell 6 is inactive.

UE: "Registered idle mode on CS" (state 2) or "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

**Table 8.2.3.21**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -85 | Off | -55 |

Table 8.2.3.21 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in idle mode in cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.3.21. The SS and UE execute procedure P3 or P5. Next The SS and the UE execute procedure P7 or P9 and then execute procedure P11 or P13. The SS switches its downlink transmission power settings to columns "T1" and then transmits a RADIO BEARER RELEASE message with no IE "Frequency info". The UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC and enters CELL_PCH state of cell 6, then the UE shall transmit CELL UPDATE procedure with IE "Cell update cause" set to "cell reselection", to complete the procedure. The SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1a | ←→ | | SS executes procedure P3 (clause 7.4.2.1.2) or P5 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 1b | ←→ | | SS executes procedure P7 (clause 7.4.2.3.2) or P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 1c | ←→ | | SS executes procedure P11 (clause 7.4.2.5.2) or P13 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.3.21. |
| 3 | ← | | Void | |
| 4 | ← | | RADIO BEARER RELEASE | Not including new frequency information. |
| 5 | → | | RADIO BEARER RELEASE COMPLETE | The UE sends this message before it completes state transition. UE sends this message in cell 1. |
| 5a | | | Void | SS sends the L2 ack on the RADIO BEARER RELEASE COMPLETE message. Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 6 | → | | CELL UPDATE | The IE "Cell update cause" is set to "cell reselection". |
| 7 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_PCH". |
| 8 | | | | The SS waits for 5 s. |
| 9 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 4)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" or "Non speech to CELL_FACH from CELL_DCH in CS" or "Speech to CELL_FACH from CELL_DCH in CS" in [9] TS 34.108 clause 9, with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info | Not Present |
| Downlink information for each radio link | Not Present |

CELL UPDATE (Step 6)

The contents of CELL UPDATE message are identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 7)

The contents of CELL UPDATE CONFIRM message are identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

#### 8.2.3.21.5 Test requirement

After step 4 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message on uplink DCCH using AM RLC in cell 1.

After step 5 the UE shall transmit a CELL UPDATE message on the CCCH with IE "Cell update cause" set to "cell reselection" in cell 6.

After step 8 the UE shall be in CELL_PCH state in cell 6.

### 8.2.3.22 Radio Bearer Release for transition from CELL_FACH to CELL_PCH: Success

#### 8.2.3.22.1 Definition

#### 8.2.3.22.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RELEASE message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE on the uplink DCCH using AM RLC, using the old configuration before the state transition.

If after state transition the UE enters CELL_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> keep the configuration existing before the reception of the message and transmit a failure response message as specified in TS25.331subclause 8.2.2.9

1> if the UE enters CELL_PCH state from CELL_FACH state, and the received reconfiguration message included the IE "Primary CPICH info", and the UE selected another cell than indicated by this IE:

2> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "cell reselection";

2> when the cell update procedure is successfully completed:

3> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.3, 8.5 and 8.6.

### 8.2.3.22.3 Test purpose

1. To confirm that the UE transmits RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_FACH to CELL_PCH according to the RADIO BEARER RELEASE message.
3. To confirm that the UE releases the radio access bearer and selects a common physical channel.

### 8.2.3.22.4 Method of test

Initial Condition

System Simulator: 1 cell– Cell 1 is active.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state of cell 1. The SS transmits a RADIO BEARER RELEASE message. The UE shall release all radio access bearer and enter CELL_PCH state after it transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC. Upon completion of the procedure, the SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_FACH state of cell 1. |
| 2 | ← | | RADIO BEARER RELEASE | |
| 3 | → | | RADIO BEARER RELEASE COMPLETE | The UE transmits this message on uplink DCCH using AM RLC. |
| 4 | | | | The SS waits for 5 s. |
| 5 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 2)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

#### 8.2.3.22.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message on uplink DCCH using AM RLC.

After step 4 the UE shall be in CELL_PCH state in cell 1.

### 8.2.3.23 Radio Bearer Release for transition from CELL_FACH to URA_PCH: Success

#### 8.2.3.23.1 Definition

#### 8.2.3.23.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RELEASE message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE on the uplink DCCH using AM RLC, using the old configuration before the state transition.

If after state transition the UE enters URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS5.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> keep the configuration existing before the reception of the message and transmit a failure response message as specified in TS25.331subclause 8.2.2.9

1> if the UE enters URA_PCH state, and after cell selection the criteria for URA update caused by "URA reselection" according to TS5.331 subclause 8.3.1 is fulfilled:

2> initiate a URA update procedure according to TS25.331 subclause 8.3.1 using the cause "URA reselection";

2> when the URA update procedure is successfully completed:

3> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.3, 8.5 and 8.6.

### 8.2.3.23.3 Test purpose

1. To confirm that the UE transmits RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_FACH to URA_PCH according to the RADIO BEARER RELEASE message.
3. To confirm that the UE releases the radio access bearer and selects a common physical channel.

### 8.2.3.23.4 Method of test

Initial Condition

System Simulator: 1 cell– Cell 1 is active.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state of cell 1. The SS transmits a RADIO BEARER RELEASE message. The UE shall release all radio access bearers and enter URA_PCH state after it transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC. Upon completion of the procedure, the SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_FACH state of cell 1. |
| 2 | ← | | RADIO BEARER RELEASE | |
| 3 | → | | RADIO BEARER RELEASE COMPLETE | The UE transmits this message on uplink DCCH using AM RLC. |
| 4 | | | | The SS waits for 5 s. |
| 5 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 2)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |

NOTE: It is to be noted that IE “URA identity” is not included in this message, for the purpose of wider test coverage. The scenario in which IE “URA identity” is included, is tested in other test cases.

#### 8.2.2.23.5 Test requirement

After step 2 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message on uplink DCCH using AM RLC.

After step 4 the UE shall be in URA_PCH state.

### 8.2.3.24 Radio Bearer Release for transition from CELL_DCH to CELL_DCH (Frequency modification): Success

#### 8.2.3.24.1 Definition

#### 8.2.3.24.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RELEASE message;

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

#### 8.2.3.24.3 Test purpose

1. To confirm that the UE transits from CELL_DCH to CELL_DCH according to the RADIO BEARER RELEASE message.
2. To confirm that the UE transmits RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC on a dedicated physical channel in a different frequency.

#### 8.2.3.24.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

CS-DCCH_DTCH_DCH (state 6-9) or PS_DCCH_DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.3.24**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -72 | Off | -72 |

Table 8.2.3.24 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.3.24. The SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RELEASE message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code which is assigned to P-CPICH of cell 6. The UE shall select cell 6 and release the radio access bearer after receiving this message, and then remain in CELL_DCH state. The UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC after it completes reconfiguration according to received RADIO BEARER RELEASE message. Upon completion of the procedure, the SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.3.24. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.3.24. |
| 3 | ← | | RADIO BEARER RELEASE | Including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6. |
| 4 | | | | The UE select cell 6. |
| 5 | → | | RADIO BEARER RELEASE COMPLETE | The UE sends this message on a dedicated physical channel in cell 6. |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 3)

The contents RADIO BEARER RELEASE message in this test case is identical the message sub-type indicated by "Packet to CELL_DCH from CELL_DCH in PS" or "Speech in CS" or "Non speech in CS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |

#### 8.2.3.24.5 Test requirement

After step 4 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC in cell 6.

After step 5 the UE shall be in CELL_DCH state in cell 6.

### 8.2.3.25 Radio Bearer Release for transition from CELL_DCH to URA_PCH (Frequency modification): Success

#### 8.2.3.25.1 Definition

#### 8.2.3.25.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RELEASE message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE on the uplink DCCH using AM RLC, using the old configuration before the state transition.

If after state transition the UE enters URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> keep the configuration existing before the reception of the message and transmit a failure response message as specified in TS25.331subclause 8.2.2.9

1> if the UE enters URA_PCH state, and after cell selection the criteria for URA update caused by "URA reselection" according to TS25.331 subclause 8.3.1 is fulfilled:

2> initiate a URA update procedure according to TS25.331 subclause 8.3.1 using the cause "URA reselection";

2> when the URA update procedure is successfully completed:

3> the procedure ends.

…

If the new state is URA_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (URA_PCH);

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.3.25.3 Test purpose

1. To confirm that the UE transmits a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_DCH to URA_PCH according to the RADIO BEARER RELEASE message.
3. To confirm that the UE releases radio access bearer, dedicated physical channel and selects a common physical channel in a different frequency.

### 8.2.3.25.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive

UE: "Registered idle mode on CS" (state 2) or "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

**Table 8.2.3.25**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -85 | Off | -55 |

Table 8.2.3.25 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in idle mode of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.3.25. SS requests operator to make an outgoing call. The SS and UE execute procedure P3 or P5. Next The SS and the UE execute procedure P7 or P9 and then execute procedure P11 or P13. The SS switches its

downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RELEASE message including no IE "Frequency info".The UE shall transmit a RADIO BEARER RELEASE COMPLETE message using AM RLC and enter URA_PCH state of cell 6. Upon completion of the procedure, the SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.3.25. SS requests operator to make an outgoing call. |
| 2 | | | SS executes procedure P3 (clause 7.4.2.1.2) or P5 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | | | SS executes procedure P7 (clause 7.4.2.3.2) or P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | | | SS executes procedure P11 (clause 7.4.2.5.2) or P13 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.3.25. |
| 6 | ← | | RADIO BEARER RELEASE | Not including IE "Frequency info" and IE "Primary CPICH info" |
| 7 | → | | RADIO BEARER RELEASE COMPLETE | UE transmit this message on the dedicated physical channel in cell 1 |
| 8 | | | Void | SS sends the L2 ack on the RADIO BEARER RELEASE COMPLETE message and then waits for 5 s to allow the UE to read system information before the next step.<br>Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 9 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 6)

Use the same message sub-type titled "Speech to CELL_FACH from CELL_DCH in CS" or "Non speech to CELL_FACH from CELL_DCH in CS" or "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info | Not present |
| Downlink information for each radio link | Not present |

#### 8.2.3.25.5 Test requirement

After step 6 the UE shall transmits a RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC in cell 1.

After step 8 the UE shall be in URA_PCH state in cell 6.

### 8.2.3.26 Radio Bearer Release for transition from CELL_FACH to CELL_PCH (Frequency modification): Success

#### 8.2.3.26.1 Definition

#### 8.2.3.26.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RELEASE message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE on the uplink DCCH using AM RLC, using the old configuration before the state transition.

If after state transition the UE enters CELL_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> keep the configuration existing before the reception of the message and transmit a failure response message as specified in TS25.331subclause 8.2.2.9

1> if the UE enters CELL_PCH state from CELL_FACH state, and the received reconfiguration message included the IE "Primary CPICH info" , and the UE selected another cell than indicated by this IE:

2> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "cell reselection";

2> when the cell update procedure is successfully completed:

3> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.3.26.3 Test purpose

1. To confirm that the UE transmits a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_FACH to CELL_PCH according to the RADIO BEARER RELEASE message.
3. To confirm that the UE releases radio access bearer and selects a common physical channel in a different frequency.

### 8.2.3.26.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.2.3.26**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -72 | Off | -55 |

Table 8.2.3.26 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in cell 1. The SS shall transmit a RADIO BEARER RELEASE message on downlink DCCH using UM RLC, . The UE shall transmit a RADIO BEARER RELEASE COMPLETE message using AM RLC. The SS shall acknowledge the RADIO BEARER RELEASE COMPLETE message and then switches its downlink transmission power settings to columns “T1”. . Upon completion of the procedure, the SS waits for 5 seconds and calls for generic procedure C.4 in cell 6 to check that UE is in CELL_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | | | Void | |
| 6 | ← | | RADIO BEARER RELEASE | This message is sent on RB 1. IE "Frequency info" and IE "Primary CPICH info" set to that of cell 6. |
| 7 | → | | RADIO BEARER RELEASE COMPLETE | After SS acknowledges this message, SS switches its downlink transmission power settings to columns "T1" in table 8.2.3.26. |
| 8 | | | | The SS waits for 5 s. |
| 9 | ←→ | | CALL C.4 | (In cell 6) If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 6)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink (Nu) | Not present |
| - UARFCN downlink (Nd) | Set to the frequency of cell 6 |
| Downlink information for each radio link | |
| - Primary CPICH Info | |
| - Primary scrambling code | Set to same code as used for cell 6 |

#### 8.2.3.26.5 Test requirement

After step 6 the UE shall transmits a RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC in cell 1.

After step 8 the UE shall be in CELL_PCH state in cell 6.

### 8.2.3.27 Radio Bearer Release for transition from CELL_FACH to URA_PCH (Frequency modification): Success

#### 8.2.3.27.1 Definition

#### 8.2.3.27.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RELEASE message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE on the uplink DCCH using AM RLC, using the old configuration before the state transition.

If after state transition the UE enters URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> keep the configuration existing before the reception of the message and transmit a failure response message as specified in TS25.331subclause 8.2.2.9.

1> if the UE enters URA_PCH state, and after cell selection the criteria for URA update caused by "URA reselection" according to TS25.331 subclause 8.3.1 is fulfilled:

2> initiate a URA update procedure according to TS25.331 subclause 8.3.1 using the cause "URA reselection";

2> when the URA update procedure is successfully completed:

3> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.3.27.3 Test purpose

1. To confirm that the UE transmits a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_FACH to URA_PCH according to the RADIO BEARER RELEASE message.
3. To confirm that the UE releases radio access bearer and selects a common physical channel in a different frequency.

### 8.2.3.27.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactiveUE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.2.3.27**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -72 | Off | -55 |

Table 8.2.3.27 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is on cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.3.27. The SS transmits a RADIO BEARER RELEASE including IE "Frequency info" and not including IE "Primary CPICH info". The UE shall transmit a RADIO BEARER RELEASE COMPLETE message using AM RLC and the SS shall switch its downlink power settings to columns “T1”. The UE enters URA_PCH state of cell 6. Upon completion of the procedure, the SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | | | Void | |
| 6 | ← | | RADIO BEARER RELEASE | Including IE "Frequency info" and not including IE "Primary CPICH info" |
| 7 | → | | RADIO BEARER RELEASE COMPLETE | UE transmit this message on the common physical channel in cell 1. The SS switches its downlink transmission power settings to columns "T1" in table 8.2.3.27. |
| 8 | | | | The SS waits for 5 s. |
| 9 | ←→ | | CALL C.5 | If the test result of C. 5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 6)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator<br>UTRAN DRX cycle length coefficient | URA_PCH<br>3 |
| URA identity | URA-ID 1 |
| Frequency info | |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |

8.2.3.27.5 Test requirement

After step 6 the UE shall transmits a RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC in cell 1.

After step 7 the UE shall be in URA_PCH state in cell 6.

## 8.2.3.28 Radio Bearer Release for transition from CELL_FACH to CELL_FACH (Frequency modification): Success

### 8.2.3.28.1 Definition

### 8.2.3.28.2 Conformance requirement

If the UE receives:

-a RADIO BEARER RELEASE message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_FACH state upon reception of the reconfiguration message and remains in CELL_FACH state, the UE shall:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency;

2> if the received reconfiguration message included the IE "Primary CPICH info", and the UE selected another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info":

3> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "cell reselection";

3> when the cell update procedure completed successfully:

4> proceed as below.

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.3.28.3 Test purpose

1. To confirm that the UE transits from CELL_FACH to CELL_FACH according to the RADIO BEARER RELEASE message.

2. To confirm that the UE transmits RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC on a common physical channel in a different frequency.

### 8.2.3.28.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS".

Test Procedure

**Table 8.2.3.28**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -72 | Off | -55 |

Table 8.2.3.28 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.3.28. SS requests operator to make an outgoing call. The SS and UE execute procedure P6. Next The SS and the UE execute procedure P10 and then execute procedure P14. The SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RELEASE message including IE "Frequency info" set to frequency information of cell 6 and no IE "Primary CPICH info". The UE shall select cell 6 and initiates CELL UPDATE procedure with IE "Cell update cause" set to "cell reselection" . The UE shall transmit a RADIO BEARER RELEASE COMPLETE message using AM RLC after it completes reconfiguration according to the received RADIO BEARER RELEASE message. Upon completion of the procedure, the SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.3.28. SS requests operator to make an outgoing call. |
| 2 | ←→ | | SS executes procedure P6 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ←→ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ←→ | | SS executes procedure P14 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.3.28. |
| 6 | ← | | RADIO BEARER RELEASE | Including IE "Frequency info" set to frequency information of cell 6 and no IE "Primary CPICH info" set to Primary Scrambling Code |
| 7 | → | | CELL UPDATE | The IE "Cell update cause" is set to "cell reselection". |
| 8 | ← | | CELL UPDATE CONFIRM | Including the IE" New C-RNTI" |
| 9 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 10 | → | | RADIO BEARER RELEASE COMPLETE | The UE sends this message on a common physical channel in cell 6. |
| 11 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (Step 6)

The contents of RADIO BEARER RELEASE message in this test case are identical the message sub-type indicated by "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- UARFCN uplink(Nu)<br>- UARFCN downlink(Nd) | <br>Same uplink UARFCN as used for cell 6<br>Same downlink UARFCN as used for cell 6 |

CELL UPDATE (Step 7)

The contents of CELL UPDATE message are identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 8)

The contents of CELL UPDATE CONFIRM message are identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9. with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |

UTRAN MOBILITY UPDATE CONFIRM (Step 9)

The contents of UTRAN MOBILITY UPDATE CONFIRM message is identical as "UTRAN MOBILITY UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9.

#### 8.2.3.28.5 Test requirement

After step 6 the UE shall transmit a CELL UPDATE message on the CCCH in cell 6.

After step 8 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC in cell 6.

After step 9 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message on the DCCH using AM RLC in cell 6.

After step 10 the UE shall be in CELL_FACH state in cell 6.

### 8.2.3.29 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Associated with signalling connection release during simultaneous PS and CS call

#### 8.2.3.29.1 Definition

#### 8.2.3.29.2 Conformance requirement

If the UE receives:

- a RADIO BEARER RELEASE message:

it shall:

1> set the variable ORDERED_RECONFIGURATION to TRUE;

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE may first release the physical channel configuration used at reception of the reconfiguration message. The UE shall then:

…

1> enter a state according to TS25.331 subclause 8.6.3.3.

…

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent:

2> not change its current UL Physical channel configuration.1> in TDD:

2> if "Primary CCPCH Info" is included indicating a new target cell and "New C-RNTI" is not specified:

3> remove any C-RNTI from MAC;

3> clear the variable C_RNTI.

…

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE message as response message on the uplink DCCH using AM RLC.

….

If the IE "Signalling Connection release indication" is present in a message, the UE shall:

1> if all radio access bearers for the CN domain identified with the value of the IE "Signalling Connection release indication" would have been released in the variable ESTABLISHED_RABS after processing of the received message:

2> indicate release of the signalling connection identified with the value of the IE "Signalling Connection release indication" to the upper layers;

2> remove the signalling connection identified with the value of the IE "Signalling Connection release indication" from the variable ESTABLISHED_SIGNALLING_CONNECTIONS.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.6.1.3.

### 8.2.3.29.3 Test purpose

To confirm that the UE releases the existing radio access bearer and signalling connection according to a RADIO BEARER RELEASE message.

### 8.2.3.29.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) as specified in clause 7.4 of TS 34.108

Test Procedure

The UE is in CELL_DCH state of cell 1. The UE initiates a session setup to establish a PS signalling connection. Then UE and SS establish a PS session while the CS call is still active. The SS transmits a DISCONNECT message to release a CS domain signalling connection. After the CC procedure, SS transmit a RADIO BEARER RELEASE message which includes IE "Signalling Connection release indication" set to "CS domain" and new configuration for remained service to the UE. The UE shall configure the specified channel and transmit a RADIO BEARER RELEASE COMPLETE message on the uplink DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_DCH state of cell 1. |
| 2 | → | | INITIAL DIRECT TRANSFER (SERVICE REQUEST) | GMM (PS Session setup is initiated from the UE side.) |
| 3 | ← | | DOWNLINK DIRECT TRANSFER (AUTHENTICATION AND CIPHERING REQUEST) | GMM |
| 4 | → | | UPLINK DIRECT TRANSFER (AUTHENTICATION AND CIPHERING RESPONSE) | GMM |
| 5 | ← | | SECURITY MODE COMMAND | |
| 6 | → | | SECURITY MODE COMPLETE | |
| 7 | → | | UPLINK DIRECT TRANSFER (ACTIVATE PDP CONTEXT REQUEST) | SM |
| 8 | ← | | RADIO BEARER SETUP | |
| 9 | → | | RADIO BEARER SETUP COMPLETE | |
| 10 | ← | | DOWNLINK DIRECT TRANSFER (ACTIVATE PDP CONTEXT ACCEPT) | SM |
| 11 | ← | | DOWNLINK DIRECT TRANSFER (DISCONNECT) | CC |
| 12 | → | | UPLINK DIRECT TRANSFER (RELEASE) | CC |
| 13 | ← | | DOWNLINK DIRECT TRANSFER (RELEASE COMPLETE) | CC |
| 14 | ← | | RADIO BEARER RELEASE | Including IE "signalling connection release indication" set to "CS domain" |
| 15 | → | | RADIO BEARER RELEASE COMPLETE | |
| 16 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE (STEP 14)

The contents of RADIO BEARER RELEASE message in this test case is identical to the message sub-type titled as "Non speech in CS" or "Speech in CS" as found in Clause 9 of TS 34.108, with the following exceptions

| Information Element | Value/remark |
|---|---|
| Signalling Connection release indication<br>- CN domain identity | <br>CS domain |

8.2.3.29.5 Test requirement

After step 14 the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

## 8.2.3.30 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (stop of HS-DSCH reception)

### 8.2.3.30.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

### 8.2.3.30.2 Conformance requirement

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for an HS-DSCH related reconfiguration in 3.84 Mcps TDD or 7.68 Mcps TDD caused by the received message:

3> start using, at activation time T, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: In FDD an "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

Reference

3GPP TS 25.331 clause8.5.25, 8.6.3.1

### 8.2.3.30.3 Test purpose

To confirm that the UE releases a radio bearer mapped to HS-DSCH according to the received RADIO BEARER RELEASE message.

### 8.2.3.30.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state with a radio bearer mapped on HS-DSCH established. The SS transmits a RADIO BEARER RELEASE message to the UE . This message requests the release of the radio access bearer mapped to HS-DSCH. After the UE receives this message, it releases the radio access bearer. Finally the UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RELEASE | |
| 2 | → | | RADIO BEARER RELEASE COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RELEASE

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH / HS-DSCH in PS" in 34.108.

#### 8.2.3.30.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.3.31 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (With active HS-DSCH reception)

#### 8.2.3.31.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH and simultaneous CS domain speech or transparent CS data services and PS services.

#### 8.2.3.31.2 Conformance requirement

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if "DPCH frame offset" is included for one or more RLs in the active set:

2> use its value to determine the beginning of the DPCH frame in accordance with the following:

3> if the received IE "DPCH frame offset" is across the value range border compared to the DPCH frame offset currently used by the UE:

4> consider it to be a request to adjust the timing with 256 chips across the frame border (e.g. if the UE receives value 0 while the value currently used is 38144 consider this as a request to adjust the timing with +256 chips).

3> if after taking into account value range borders, the received IE "DPCH frame offset" corresponds to a request to adjust the timing with a step exceeding 256 chips:

4> set the variable INVALID_CONFIGURATION to TRUE.

3> and the procedure ends.

2> adjust the radio link timing accordingly.

…

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

…

If IE "Timing indication" has the value "initialise", UE shall:

1> execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clause 8.2.2, 8.3.5.1.2, 8.6.3.1

### 8.2.3.31.3 Test purpose

To confirm that the UE releases a radio bearer according to the received RADIO BEARER RELEASE message while keeping HS-DSCH reception active for a second radio bearer mapped to HS-DSCH.

### 8.2.3.31.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports CS domain speech or transparent CS data services and PS services.

Test Procedure

The UE is in cell 1 with only signalling radio bearers established. A PS radio bearer is established mapped to HS-DSCH with HS-DSCH reception activated. Then, a CS radio bearer is established.

The SS transmits a RADIO BEARER RELEASE message to the UE. This message requests the release of the radio bearer mapped to DCH. After the UE receives this message, it releases this radio bearer but keeps the radio bearer mapped to HS-DSCH and continues HS-DSCH reception. Finally the UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ←→ | | | SS establishes a PS RAB mapped to HS-DSCH. See below for contents of the RADIO BEARER SETUP message. |
| 2 | ←→ | | | SS establishes a CS RAB. |
| 3 | ← | | RADIO BEARER RELEASE | |
| 4 | → | | RADIO BEARER RELEASE COMPLETE | The UE releases the CS radio bearer mapped to DCH but keeps the PS radio bearer mapped to HS-DSCH and continues HS-DSCH reception |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

RADIO BEARER RELEASE (Step 3)(FDD)

Use the same message as specified for “Speech in CS” or "Non speech in CS" in 34.108 except for the following.

| Information Element | Value/remark | Version |
|---|---|---|
| Added or Reconfigured UL TrCH information | Not Present | |
| Added or Reconfigured DL TrCH information | Not Present | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) | |
| - Cell ID | Not Present | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 3 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |

RADIO BEARER RELEASE (Step 3) ( 1.28 Mcps TDD)

Use the same message as specified for “Speech in CS” or "Non speech in CS" in 34.108 except for the following.

| Information Element | Value/remark | Version |
|---|---|---|
| Added or Reconfigured UL TrCH information | Not Present | |
| Added or Reconfigured DL TrCH information | Not Present | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |

#### 8.2.3.31.5 Test requirements

After step 3, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.3.31a Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (With active HS-DSCH reception)

#### 8.2.3.31a.1 Definition and applicability

All UEs which support TDD and HS-PDSCH and simultaneous CS domain speech or transparent CS data services and PS services.

#### 8.2.3.31a.2 Conformance requirement

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if "DPCH frame offset" is included for one or more RLs in the active set:

2> use its value to determine the beginning of the DPCH frame in accordance with the following:

3> if the received IE "DPCH frame offset" is across the value range border compared to the DPCH frame offset currently used by the UE:

4> consider it to be a request to adjust the timing with 256 chips across the frame border (e.g. if the UE receives value 0 while the value currently used is 38144 consider this as a request to adjust the timing with +256 chips).

3> if after taking into account value range borders, the received IE "DPCH frame offset" corresponds to a request to adjust the timing with a step exceeding 256 chips:

4> set the variable INVALID_CONFIGURATION to TRUE.

3> and the procedure ends.

2> adjust the radio link timing accordingly.

…

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

…

If IE "Timing indication" has the value "initialise", UE shall:

1> execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clause 8.2.2, 8.3.5.1.2, 8.6.3.1

### 8.2.3.31a.3 Test purpose

To confirm that the UE releases a radio bearer according to the received RADIO BEARER RELEASE message while keeping HS-DSCH reception active for a second radio bearer mapped to HS-DSCH.

### 8.2.3.31a.4 Method of test

Initial Condition

System Simulator: 1 cell configures three carriers, one primary carrier with two secondary carriers.

UE: PS-DCCH DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports TDD
- UE supports HS-PDSCH
- UE supports CS domain speech or transparent CS data services and PS services.

Test Procedure

The UE is in cell 1 with only signalling radio bearers established. A PS radio bearer is established mapped to HS-DSCH with HS-DSCH reception activated. Then, a CS radio bearer is established.

The SS transmits a RADIO BEARER RELEASE message to the UE. This message requests the release of the radio bearer mapped to DCH. After the UE receives this message, it releases this radio bearer but keeps the radio bearer mapped to HS-DSCH and continues HS-DSCH reception. Finally the UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ←→ | | | SS establishes a PS RAB mapped to HS-DSCH. See below for contents of the RADIO BEARER SETUP message. |
| 2 | ←→ | | | SS establishes a CS RAB. |
| 3 | ← | | RADIO BEARER RELEASE | |
| 4 | → | | RADIO BEARER RELEASE COMPLETE | The UE releases the CS radio bearer mapped to DCH but keeps the PS radio bearer mapped to HS-DSCH and continues HS-DSCH reception |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| RadioBearerSetup-r5-TDD128-add-ext-IEs | |
| - frequencyInfo | Secondary carrier frequency |
| - UpPCHpositionInfo | 22 |

RADIO BEARER RELEASE (Step 3) ( 1.28 Mcps TDD)

Use the same message as specified for “Speech in CS” or "Non speech in CS" in 34.108 except for the following.

| Information Element | Value/remark | Version |
|---|---|---|
| Added or Reconfigured UL TrCH information | Not Present | |
| Added or Reconfigured DL TrCH information | Not Present | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| RadioBearerRelease-r5-TDD128-add-ext-IEs | | |
| - frequencyInfo | Secondary carrier frequency | |
| - UpPCHpositionInfo | 22 | |

#### 8.2.3.31a.5 Test requirements

After step 3, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.3.32 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialised hard handover to another frequency, with active HS-DSCH reception)

#### 8.2.3.32.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH and simultaneous CS domain speech or transparent CS data services and PS services.

#### 8.2.3.32.2 Conformance requirement

In case the procedure was triggered by reception of a RADIO BEARER RELEASE message, the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clause 8.2.2, 8.6.3.1

### 8.2.3.32.3 Test purpose

To confirm that the UE releases a radio bearer according to the received RADIO BEARER RELEASE message while keeping HS-DSCH reception active for a second radio bearer mapped to HS-DSCH.

### 8.2.3.32.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 and 6 are active.

UE: PS-DCCH DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports CS domain speech or transparent CS data services and PS services

Test Procedure

The UE is in cell 1 with only signalling radio bearers established. A PS radio bearer is established mapped to HS-DSCH with HS-DSCH reception activated. Then, a CS radio bearer is established.

The SS transmits a RADIO BEARER RELEASE message to the UE. This message requests the release of the CS radio bearer mapped to DCH as well as a timing re-initialised interfrequency hard handover to cell 6. After the UE receives this message, it releases this radio bearer but keeps the radio bearer mapped to HS-DSCH and continues HS-DSCH reception. Finally the UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC in cell 6.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ←→ | | | SS establishes a PS RAB mapped to HS-DSCH. See below for contents of the RADIO BEARER SETUP message. |
| 2 | ←→ | | | SS establishes a CS RAB. |
| 3 | ← | | RADIO BEARER RELEASE | |
| 4 | → | | RADIO BEARER RELEASE COMPLETE | The UE releases the CS radio bearer mapped to DCH but keeps the PS radio bearer mapped to HS-DSCH and continues HS-DSCH reception |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| **Information Element** | **Value/remark** |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, except for the following |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |

RADIO BEARER RELEASE (Step 3) (FDD)

Use the same message as specified for “Speech in CS” or "Non speech in CS" in 34.108 except for the following.

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Added or Reconfigured UL TrCH information | Not Present | |
| Added or Reconfigured DL TrCH information | Not Present | |
| Frequency info | | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 | |
| Maximum allowed UL TX power | Not present | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - DPCCH power offset | -40 (-80 dB) | |
| - PC Preamble | 1 frame | |
| - SRB delay | 7 frames | |
| - Power Control Algorithm | Algorithm1 | |
| - TPC step size | 0 (1 dB) | |
| - $\Delta_{ACK}$ | 6 | |
| - $\Delta_{NACK}$ | 6 | |
| - Ack-Nack repetition factor | 2 | |
| - Scrambling code type | Long | |
| - Scrambling code number | 0 (0 to 16777215) | |
| - Number of DPDCH | Not Present(1) | |
| - spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Number of FBI bit | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | FDD | |
| - DL Scrambling Code | | |
| - HS-SCCH Channelisation Code Information | | |
| - HS-SCCH Channelisation Code | 7 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | FDD | |
| - Measurement Power Offset | 12 (6 dB) | |
| - CQI Feedback cycle, k | 4 ms | |
| - CQI repetition factor | 1 | |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) | |
| - CHOICE mode | FDD (no data) | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to the scrambling code for cell 6 | |
| - Cell ID | Not Present | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 3 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |

RADIO BEARER RELEASE (Step 3) (1.28Mcps TDD)

Use the same message as specified for “Speech in CS” or "Non speech in CS" in 34.108 except for the following.

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Added or Reconfigured UL TrCH information | Not Present | |
| Added or Reconfigured DL TrCH information | Not Present | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Maximum allowed UL TX power | Not present | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 1.28 Mcps TDD | |
| - $PRX_{PDPCHdes}$ | -80dB | |
| - CHOICE UL OL PC info | Individually Signalled | |
| - CHOICE TDD option | 1.28 Mcps TDD | |
| - TPC step size | 1dB | |
| - Primary CCPCH Tx Power | 20 | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | TDD (no data) | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 1.28 Mcps TDD | |
| - HS-PDSCH Midamble Configuration | | |
| - Midamble Allocation Mode | Default midamble | |
| - Midamble Configuration | 8 | |
| - Midamble Shift | Not present | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Ref. to the Default setting for cell 6 in TS34.108 clause 6.1 (TDD) | |
| - SCTD indicator | FALSE | |

#### 8.2.3.32.5 Test requirements

After step 3, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message using AM RLC in cell 6.

### 8.2.3.33 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (stop of HS-DSCH reception with frequency modification)

#### 8.2.3.33.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH and simultaneous CS domain speech or transparent CS data services and PS services.

8.2.3.33.2 Conformance requirement

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

…

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

Reference

3GPP TS 25.331 clauses 8.5.25.

### 8.2.3.33.3 Test purpose

To confirm that the UE stops HS-DSCH reception when UE releases PS RAB according to the received RADIO BEARER RELEASE message.

### 8.2.3.33.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports CS domain speech or transparent CS data services and PS service

Test Procedure

The UE is in CELL_DCH state and only signalling radio bearers have been established. SS initiates P25 to make the UE to move to state 6-17 as specified in TS 34.108 clause 7.4. The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established. The SS initiates P24 to set up CS RAB.
Then SS transmits a RADIO BEARER RELEASE message to the UE. The UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message. (Step 0) |
| 1 | ←→ | | P24 | SS establishes CS RAB. |
| 2 | ← | | RADIO BEARER RELEASE | SS releases PS RAB. |
| 3 | → | | RADIO BEARER RELEASE COMPLETE | |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, except for the following |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |

RADIO BEARER RELEASE (Step 2) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH / HS-DSCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| Deleted UL TrCH Information | |
| - Uplink transport channel type | DCH |
| - Transport channel identity | 4 |
| Added or Reconfigured UL TrCH information | Not Present |
| Deleted DL TrCH Information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 9 |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info<br>- UARFCN uplink (Nu)<br><br><br><br>- UARFCN downlink (Nd) | <br>Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21]<br>Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code<br>- DPCH frame offset | <br><br>350<br>The Value is calculated based on internal SS timing difference |

RADIO BEARER RELEASE (Step 2) (1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH / HS-DSCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| Deleted UL TrCH Information | |
| - Uplink transport channel type | DCH |
| - Transport channel identity | 4 |
| Added or Reconfigured UL TrCH information | Not Present |
| Deleted DL TrCH Information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 9 |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info | |
| - Choice mode | TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Downlink information for each radio link | |
| - Choice mode | TDD |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - Choice TDD Option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Same Cell parameters ID as used for cell 6 |
| - SCTD indicator | FALSE |

#### 8.2.3.33.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.3.34 Radio Bearer Release for transition from CELL_DCH to CELL_FACH: Success (stop of HS-DSCH reception with frequency modification)

#### 8.2.3.34.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH and simultaneous CS domain speech or transparent CS data services and PS services.

#### 8.2.3.34.2 Conformance requirement

If after state transition the UE leaves CELL_DCH state, the UE shall, after the state transition:

1> stop any HS-DSCH reception procedures according to the stored HS-PDSCH configuration;

1> clear any stored HS-PDSCH configuration;

1> remove any H-RNTI stored;

1> clear the variable H_RNTI;

1> set the variable HS_DSCH_RECEPTION to FALSE.

Reference

3GPP TS 25.331 clauses 8.2.2.3.

#### 8.2.3.34.3 Test purpose

To confirm that the UE stops HS-DSCH reception when UE releases CS RAB according to the received RADIO BEARER RELEASE message.

#### 8.2.3.34.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports CS domain speech or transparent CS data services and PS services

Test Procedure

**Table 8.2.3.34**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency ($f_1$) | | High Range Test Frequency ($f_2$) | |
| CPICH Ec(FDD) | dBm/3.84MHz | -60 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -70 | -70 | -60 |

Table 8.2.3.34 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The SS has configured its downlink transmission power settings according to columns "T0" in table 8.2.3.34. The UE is in CELL_DCH state and only signalling radio bearers have been established. SS initiates P25 to make the UE to move to state 6-17 as specified in TS 34.108 clause 7.4. The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established. The SS initiates P24 to set up CS RAB.

Then SS switches its downlink transmission power settings to columns "T1" and transmits a RADIO BEARER RELEASE message to the UE. The UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step0). |
| 1 | ←→ | | P24 | SS establishes CS RAB |
| 1a | SS | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.3.34. |
| 2 | ← | | RADIO BEARER RELEASE | SS releases CS RAB. |
| 3 | → | | RADIO BEARER RELEASE COMPLETE | |
| 4 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108.Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, except for the following |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, except for the following |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |

RADIO BEARER RELEASE (Step 2) (FDD)

Use the same message as specified for "Speech to CELL_FACH from CELL_DCH in CS" or "Non speech to CELL_FACH from CELL_DCH in CS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- UARFCN uplink (Nu)<br><br>- UARFCN downlink (Nd) | <br>This IE should be present, if the default duplex distance defined for the operating frequency band is not used<br>Same downlink UARFCN as used for cell 6 |

RADIO BEARER RELEASE (Step 2) (1.28 Mcps TDD)

Use the same message as specified for "Speech to CELL_FACH from CELL_DCH in CS" or "Non speech to CELL_FACH from CELL_DCH in CS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- Choice mode | <br>TDD |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |

#### 8.2.3.34.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.3.35 Radio Bearer Release for transition from CELL_DCH to CELL_PCH: Success (stop of HS-DSCH reception)

#### 8.2.3.35.1 Definition and applicability

All UEs which support FDD or TDD, HS-PDSCH and simultaneous CS domain speech or transparent CS data services and PS services.

#### 8.2.3.35.2 Conformance requirement

If the new state is CELL_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (CELL_PCH);

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";

- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

…

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Reference

3GPP TS 25.331 clauses 8.2.2.4, 8.6.3.1,8.5.25

8.2.3.35.3 Test purpose

To confirm that the UE releases CS bearer and stops receiving the HS-DSCH reception according to the received RADIO BEARER RELEASE message.

8.2.3.35.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports both CS domain speech or transparent CS data services and PS services

Test Procedure

The UE is in CELL_DCH state and only signalling radio bearers have been established. SS initiates P25 to make the UE to move to state 6-17 as specified in TS34.108 clause 7.4. The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established. The SS initiates P24 to set up CS RAB.

Then SS transmits a RADIO BEARER RELEASE message to the UE. This message requests to release CS bearer and CS Signalling Connection, stop receving the HS-DSCH reception and move to CELL_PCH state. After the UE receives this message, it configures them. Finally the UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC. SS calls for generic procdure C.4 to check that UE is in CELL_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step 1) |
| 2 | ←→ | | P24 | SS establishes CS RAB. |
| 3 | ← | | RADIO BEARER RELEASE | SS releases CS RAB and CS Signalling Connection |
| 4 | → | | RADIO BEARER RELEASE COMPLETE | |
| 5 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for “Packet to CELL_DCH /HS-DSCH from CELL_DCH in PS ” in TS34.108, except for the followings;

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

RADIO BEARER RELEASE (Step 3)(FDD)

Use the same message as specified for “Speech to CELL_FACH from CELL_DCH in CS” or "Non Speech to CELL_FACH from CELL_DCH in CS" in TS34.108, except for the followings;

| Information Element | Value/remark |
|---|---|
| Activation time | Not present |
| RRC state indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Signalling Connection release indication | CS domain |
| Frequency info | Not present |
| Downlink information for each radio link list<br>- Primary CPICH info<br>- Primary scrambling code | <br><br>100 |

RADIO BEARER RELEASE (Step 3) ( 1.28 Mcps TDD)

Use the same message as specified for “Speech to CELL_FACH from CELL_DCH in CS” or "Non Speech to CELL_FACH from CELL_DCH in CS" in TS34.108, except for the followings;

| Information Element | Value/remark |
|---|---|
| Activation time | Not present |
| RRC state indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Signalling Connection release indication | CS domain |
| Frequency info | Not present |
| Downlink information for each radio link list<br>- Downlink information for each radio link<br>- CHOICE mode<br>- Cell parameters ID | <br><br>TDD<br>Set to the Cell parameters ID for cell 1 |

#### 8.2.3.35.5 Test requirements

After step 3, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.3.36 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (frequency modification, stop of E-DCH transmission)

#### 8.2.3.36.1 Definition and applicability

All UEs which support FDD and speech and HS-PDSCH and E-DCH or all UEs which support TDD and HS-PDSCH and E-PUCH.

#### 8.2.3.36.2 Conformance requirement

The variable E_DCH_TRANSMISSION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-DPCCH info" and the IE "E-DPDCH info".
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> for non-scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-PUCH info";
- IE "Non-scheduled transmission grant info";

2> for scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH, E-HICH and E-RGCH reception procedures;

1> For FDD:

2> stop any E-RGCH reception procedures.

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures.

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2> if scheduled transmission is configured, perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, if scheduled transmission is configured, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e or MAC-i PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AICH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH and E-DPDCH transmission procedures.

Reference

3GPP TS 25.331 clause 8.5.28

### 8.2.3.36.3 Test purpose

To confirm that the UE releases a radio bearer mapped on E-DCH / HS-DSCH and stops E-DCH transmission / HS-DSCH reception according to the received RADIO BEARER RELEASE message with frequency modification.

### 8.2.3.36.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 and 6 are active.

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports CS speech
- UE supports HS-PDSCH
- UE supports E-DPDCH(FDD) or E-PUCH (1.28Mcps TDD)

Test Procedure

The UE is in CELL_DCH state and only signalling radio bearers have been established. SS initiates P26 to make the UE to move to state 6-18 as specified in TS 34.108 clause 7.4. The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH and E-DCH established. The SS initiates P24 to set up CS speech RAB.

Then SS transmits a RADIO BEARER RELEASE message to the UE. The UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P26 | See below for the specific message content used in RADIO BEARER SETUP message. (Step 0) |
| 1 | ←→ | | P24 | SS establishes CS speech RAB. |
| 2 | ← | | RADIO BEARER RELEASE | SS releases PS RAB. |
| 3 | → | | RADIO BEARER RELEASE COMPLETE | |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0) (FDD)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using three multiplexing options (3/3) and SRBs mapped on DCH/DCH" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| - RAB information for setup | |
| - RB mapping info | |
| - Information for each multiplexing option | 3 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | Not Present |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 10 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 10 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 10 |
| Added or Reconfigured UL TrCH information | 1 E-DCH added, 1 DCH added, 1 DCH reconfigured |
| - Uplink transport channel type | E-DCH |
| - CHOICE UL parameters | E-DCH |
| - E-DCH Transmission Time Interval | 10 ms |
| - HARQ info for E-DCH | |
| - HARQ RV Configuration | rvtable |
| - Added or reconfigured E-DCH MAC-d flow | |
| - E-DCH MAC-d flow identity | 2 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |

| | |
|---|---|
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 5 |
| - TFS | |
| - CHOICE Transport channel type | |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| Added or Reconfigured DL TrCH information | 3 TrCHs (DCH for DCCH and DCH plus HS-DSCH for DTCH) |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 10 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |
| - UL TrCH identity | 5 |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 9 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.10 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.10 Parameter Set |
| - Type of channel coding | Reference to clause 6.10 Parameter Set |
| - Coding Rate | Reference to clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to clause 6.10 Parameter Set |
| - CRC size | Reference to clause 6.10 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | |
| - Number of Processes | Reference to clause 6.10.2.4.5 Parameter Set |
| - CHOICE Memory Partitioning | Implicit |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | (one queue) |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |

| | |
|---|---|
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |

RADIO BEARER SETUP (Step 0)( 1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using three multiplexing options (3/3) and SRBs mapped on DCH/DCH" in 34.108, except for the following.

| Information Element | Value/remark |
|---|---|
| - RAB information for setup | |
| - RB mapping info | |
| - Information for each multiplexing option | 3 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 9 |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | Not Present |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 10 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 10 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 10 |
| Added or Reconfigured UL TrCH information | 1 E-DCH added, 1 DCH added, 1 DCH reconfigured |
| - Uplink transport channel type | E-DCH |
| - CHOICE UL parameters | E-DCH |
| - E-DCH Transmission Time Interval | 5 ms |
| - HARQ info for E-DCH | |
| - HARQ RV Configuration | rvtable |
| - Added or reconfigured E-DCH MAC-d flow | |
| - E-DCH MAC-d flow identity | 2 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 4 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.11 Parameter Set |

| | |
|---|---|
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.11 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.11 Parameter Set |
| - Type of channel coding | Reference to clause 6.11 Parameter Set |
| - Coding Rate | Reference to clause 6.11 Parameter Set |
| - Rate matching attribute | Reference to clause 6.11 Parameter Set |
| - CRC size | Reference to clause 6.11 Parameter Set |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 5 |
| - TFS | |
| - CHOICE Transport channel type | |
| - Dynamic Transport format information | |
| - RLC Size | Reference to clause 6.11 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.11 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.11 Parameter Set |
| - Type of channel coding | Reference to clause 6.11 Parameter Set |
| - Coding Rate | Reference to clause 6.11 Parameter Set |
| - Rate matching attribute | Reference to clause 6.11 Parameter Set |
| - CRC size | Reference to clause 6.11 Parameter Set |
| Added or Reconfigured DL TrCH information | 3 TrCHs (DCH for DCCH and DCH plus HS-DSCH for DTCH) |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 10 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |
| - UL TrCH identity | 5 |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 9 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to clause 6.11 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Dynamic transport format information | |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to clause 6.11 Parameter Set |
| - CHOICE Logical channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to clause 6.11 Parameter Set |
| - Type of channel coding | Reference to clause 6.11 Parameter Set |
| - Coding Rate | Reference to clause 6.11 Parameter Set |
| - Rate matching attribute | Reference to clause 6.11 Parameter Set |
| - CRC size | Reference to clause 6.11 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -20 (-2.0) |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | |
| - Number of Processes | Reference to clause 6.11.2.4.5 Parameter Set |
| - CHOICE Memory Partitioning | Implicit |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | (one queue) |
| - MAC-hs queue Id | 0 |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |

| | |
|---|---|
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not Present |
| - DCH quality target | Not Present |

RADIO BEARER RELEASE (Step 2) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH / HS-DSCH in PS" in 34.108, except for the following:

| **Information Element** | **Value/remark** |
|---|---|
| Deleted UL TrCH Information<br>- Uplink transport channel type<br>- Transport channel identity | <br>DCH<br>4 |
| Added or Reconfigured UL TrCH information | Not Present |
| Deleted DL TrCH Information<br>- Downlink transport channel type<br>- Transport channel identity | <br>DCH<br>9 |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info<br>- UARFCN uplink (Nu)<br><br><br><br>- UARFCN downlink (Nd) | <br>Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21]<br>Same downlink UARFCN as used for cell 6 |
| - CHOICE channel requirement<br>- Scrambling code number | Uplink DPCH info<br>Set to the same code number as used for cell 6 |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to the same code as used for cell 6 |

RADIO BEARER RELEASE (Step 2)( 1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH / HS-DSCH in PS" in 34.108, except for the following:

| **Information Element** | **Value/remark** |
|---|---|
| Deleted UL TrCH Information<br>- Uplink transport channel type<br>- Transport channel identity | <br>DCH<br>4 |
| Added or Reconfigured UL TrCH information | Not Present |
| Deleted DL TrCH Information<br>- Downlink transport channel type<br>- Transport channel identity | <br>DCH<br>9 |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>Same UARFCN as used for cell 6 |
| Downlink information per radio link list<br>Downlink information for each radio link | 1 radio link |
| - Choice mode<br>- Primary CCPCH info<br>- Cell parameters ID | TDD<br><br>Set to the same as cell 6 |

#### 8.2.3.36.5 Test requirements

After step 2, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

### 8.2.3.37 Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (frequency modification, stop of discontinuous uplink transmission)

#### 8.2.3.37.1 Definition

All UEs, which support FDD, UL DTX.

8.2.3.37.2 Conformance requirement

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> store the contents of the IE in the variable DTX_DRX_PARAMS.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clause 8.5.34, 8.6.6.38, 8.6.6.39

### 8.2.3.37.3 Test purpose

To confirm that the UE releases a radio bearer mapped on E-DCH / HS-DSCH and stops discontinuous uplink transmission according to the received RADIO BEARER RELEASE message with frequency modification.

### 8.2.3.37.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 and 6 are active.

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission.

Test Procedure

The UE is in CELL_DCH state and only signaling radio bearers have been established. SS initiates P26 and transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of multiple radio bearers with RB mapping to HS-DSCH and E-DCH, with UL DTX configured. After the UE receives this message, it establishes multiple radio bearers and maps them to the HS-DSCH and E-DCH. The UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. The UE is in CELL_DCH state and has 2 radio bearers mapped on HS-DSCH and E-DCH with DTX and, if supported, DRX active.

Then SS transmits a RADIO BEARER RELEASE message to the UE. The UE transmits a RADIO BEARER RELEASE COMPLETE message using AM RLC.

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P26 | See below for the specific message content used in RADIO BEARER SETUP message. (Step 0) |
| 1 | ← | | RADIO BEARER RELEASE | SS releases PS RAB. |
| 2 | → | | RADIO BEARER RELEASE COMPLETE | |
| 3 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0)

The contents of RADIO BEARER SETUP message in this test case are identical to the message sub-type indicated by "Packet to CELL_DCH / E-DCH / HS-DSCH with DTX/DRX and multiple RABs (one conversational and one streaming/interactive/background) using one multiplexing option (1/1) and SRBs mapped on E-DCH/HS-DSCH" using 10ms TTI.

RADIO BEARER RELEASE (Step 2)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH / HS-DSCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| Deleted UL TrCH Information<br>- Uplink transport channel type<br>- E-DCH MAC-d flow identity | <br>E-DCH<br>2 |
| Added or Reconfigured UL TrCH information | Not Present |
| Deleted DL TrCH Information<br>- Downlink transport channel type<br>- DL HS-DSCH MAC-d flow identity | <br>HS-DSCH<br>0 |
| Added or Reconfigured DL TrCH information | Not Present |
| Frequency info<br>- UARFCN uplink (Nu)<br><br><br><br>- UARFCN downlink (Nd) | <br>Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21]<br>Same downlink UARFCN as used for cell 6 |
| - CHOICE channel requirement<br>- Scrambling code number | Uplink DPCH info<br>Set to the same code number as used for cell 6 |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to the same code as used for cell 6 |

8.2.3.37.5 Test requirements

At step 2, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message.

At step 3 the time taken to report 10 consecutive CQI indications shall be 400ms.

## 8.2.4 Transport channel reconfiguration

### 8.2.4.1 Transport channel reconfiguration (Timing re-initialised hard handover with transmission rate modification) from CELL_DCH to CELL_DCH: Success

#### 8.2.4.1.1 Definition

#### 8.2.4.1.2 Conformance requirement

If the UE receives:

- a TRANSPORT CHANNEL RECONFIGURATIONmessage; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

#### 8.2.4.1.3 Test purpose

To confirm that the UE reconfigures the channel configuration according to a TRANSPORT CHANNEL RECONFIGURATION message, which is used to change the TFCS and the TFS while replacing the RL(s) in the active set with a set of RL(s) disjunct with the previous active set.

#### 8.2.4.1.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and cell 2 are active

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE. Either a streaming CS domain RAB (state 6-9) or an interactive/ background PS domain RAB (state 6-10) has been established. UE connected to cell 1.

### Test Procedure

The UE is in CELL_DCH state, connected to cell 1. The SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE, which includes new configuration parameters. The message is used to replace the RL(s) in the active set with a set of RL(s) disjunct with the previous active set In this case, the connection to cell 1 is discontinued while a new connection to cell 2 is established at the same time. The TRANSPORT CHANNEL RECONFIGURATION message is used to also change the TFCS and TFS e.g. because the currently used rate is not available on cell 2. The TFCS and TFS change from a value corresponding with one reference configuration in 34.108 (an interactive PS domain RAB from UL:64 DL:64 or a streaming CS RAB from UL:57.6 DL:57.6) to another reference configuration (interactive PS domain RAB from UL:32 DL:32 or a streaming CS RAB from UL:28.8 DL:28.8). The UE shall apply the new configuration and then transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

### Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | ← | | TRANSPORT CHANNEL RECONFIGURATION | The TFCS and the TFS are changed while replacing the RL(s) in the active set with a set of RL(s) disjunct with the previous active set |
| 4 | | | Void | |
| 5 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

### Specific Message Contents

#### TRANSPORT CHANNEL RECONFIGURATION (FDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Annex A, with the following exceptions.

For non-speech in CS:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels | Set to the same values as for " Non speech to CELL_DCH from CELL_DCH in CS " in radio bearer setup message. |
| Added or Reconfigured UL TrCH information | Set to the same values as for " Non speech to CELL_DCH from CELL_DCH in CS " in radio bearer setup message. |
| DL Transport channel information common for all transport channel | Set to the same values as for " Non speech to CELL_DCH from CELL_DCH in CS " in radio bearer setup message. |
| Added or Reconfigured DL TrCH information | Set to the same values as for " Non speech to CELL_DCH from CELL_DCH in CS " in radio bearer setup message. |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |
| CHOICE channel requirement | Set to the same values as for " Non speech in CS " unless explicitly indicated otherwise in the following |
| -Uplink DPCH power control info | Not present |
| Downlink information common for all radio links | Set to the same values as for "Non speech in CS" unless explicitly indicated otherwise in the following |
| - Downlink DPCH info common for all RL | |
| - Timing indicator | Initialise |
| - Downlink DPCH power control information | Not present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| Downlink information for each radio link list | Set to the same values as for "Non speech in CS" unless explicitly indicated otherwise in the following |
| - Downlink information for each radio links | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) for cell 2: 150 |
| - Downlink DPCH info for each RL | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value mod 38400 |
| - DL channelisation code | |
| - Scrambling code change | Not present |

For packet in PS:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" |
| Added or Reconfigured UL TrCH information | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" |
| DL Transport channel information common for all transport channel | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" |
| Added or Reconfigured DL TrCH information | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |
| CHOICE channel requirement | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" unless explicitly indicated otherwise in the following |
| -Uplink DPCH power control info | Not present |
| Downlink information common for all radio links | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" unless explicitly indicated otherwise in the following |
| - Downlink DPCH info common for all RL | |
| - Timing indicator | Initialise |
| - Downlink DPCH power control information | Not present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| Downlink information for each radio link list | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" unless explicitly indicated otherwise in the following |
| - Downlink information for each radio links | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) for cell 2: 150 |
| - Downlink DPCH info for each RL | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value mod 38400 |
| - DL channelisation code | |
| - Scrambling code change | Not Present |

TRANSPORT CHANNEL RECONFIGURATION (TDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" |
| Added or Reconfigured UL TrCH information | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" |
| DL Transport channel information common for all transport channel | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" |
| Added or Reconfigured DL TrCH information | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |
| CHOICE channel requirement | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS" unless explicitly indicated otherwise in the following |
| -Uplink DPCH power control info | Not present |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indicator | Initialise |
| - Downlink DPCH power control information | Not present |
| Downlink information for each radio link list | |
| - Downlink information for each radio links | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Ref. to the Default setting in TS34.108 clause 6.1 (TDD) for cell 2 |

8.2.4.1.5 Test requirement

After step 3 the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC on a dedicated physical channel using another radio link.

## 8.2.4.1a Transport channel reconfiguration (Transmission Rate Modification) from CELL_DCH to CELL_DCH of the same cell: Success

8.2.4.1a.1 Definition

8.2.4.1a.2 Conformance requirement

1. If the UE receives:

- a TRANSPORT CHANNEL RECONFIGURATIONmessage; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

…

2. If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent:

2> not change its current UL Physical channel configuration.

…

3. The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

…

4. In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

5. If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:

3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.6.6.4.

### 8.2.4.1a.3 Test purpose

To confirm that the UE reconfigures the transport channel configuration according to a TRANSPORT CHANNEL RECONFIGURATION message, which specifies a reconfiguration by changing the TFCS.

To confirm that the UE receives the RLC SDU and sends it according to the new UL TFCS.

### 8.2.4.1a.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_DCH_TEST_LOOP (state 6-10a) as specified in clause 7.4 of TS 34.108. The UL RLC_SDU size for the loopback scheme is set to the size correspondent to the maximum uplink TFS as indicated in RADIO BEARER SETUP message during radio bearer establishment procedure. The Contents of the Radio Bearer Setup message is specified in specific message contents.

NOTE: Transmission rate shall be set to the maximum rate for the UE during the radio bearer establishment procedure.

Test Procedure

The UE is in CELL_DCH state.

The SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE to modify the UL transmission rate which includes information about uplink TFCS to restrict the use of the highest rate TFCIs.

The UE shall reconfigure the new configuration and then transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

UL MAC restriction is imposed on the SS so that SS can restrict the use of highest rate TFCI in the uplink

Then the SS transmits a RLC_SDU whose size is the same as the UL RLC_SDU size for the loopback scheme. The UE receives this RLC_SDU and decode it according to the new TFCS.

The RLC_SDU is then looped backed to the SS. The SS should receive the expected data as a RLC_SDU exactly as the one transmitted to the UE.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | TRANSPORT CHANNEL RECONFIGURATION | |
| 2 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 2a | ← | | DOWNLINK RLC SDU | |
| 2b | → | | UPLINK RLC SDU | RLC SDU sent back shall be the same as the one sent from the SS. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

TRANSPORT CHANNEL RECONFIGURATION (Step 1)(FDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels | Not Present |
| - PRACH TFCS | Not Present |
| - CHOICE mode | FDD |
| - TFC subset | |
| - UL DCH TFCS | |
| - CHOICE TFCI signalling | Normal |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS complete reconfigure information | |
| - CHOICE CTFC Size | Number of bits used must be enough to cover all combinations of CTFC from TS34.108 clause 6.10.2.4 Parameter Set. |
| - CTFC information | This IE is repeated for TFC numbers and reference to TS34.108 clause 6.10.2.4 Parameter Set |
| - CTFC | Reference to TS34.108 clause 6.10.2.4 Parameter Set as defined in the RADIO BEARER SETUP message with highest rate TF of RAB removed. |
| - Power offset information | |
| - CHOICE Gain Factors | Computed Gain Factors(The last TFC is set to Signalled Gain Factors) |
| - Gain factor βc | 11 (below 64 kbps)<br>9 (higher than 64 kbps) (Not Present if the CHOICE Gain Factors is set to Computed Gain Factors) |
| - Gain factor βd | 15<br>(Not Present if the CHOICE Gain Factors is set to Computed Gain Factors) |
| - Reference TFC ID | 0 |
| - CHOICE mode | FDD |
| - Power offset $P_{p\text{-}m}$ | Not Present |
| Added or Reconfigured UL TrCH information | Not Present |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |

TRANSPORT CHANNEL RECONFIGURATION (Step 1)(TDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels | Not Present |
| - PRACH TFCS | Not Present |
| - CHOICE mode | TDD |
| - UL TFCS Identity | |
| - UL TFCS | |
| - CHOICE TFCI signalling | Normal |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS complete reconfigure information | |
| - CHOICE CTFC Size | Number of bits used must be enough to cover all combinations of CTFC from TS34.108 clause 6.10.2.4 Parameter Set. |
| - CTFC information | This IE is repeated for TFC numbers and reference to TS34.108 clause 6.10.2.4 Parameter Set |
| - CTFC | Reference to TS34.108 clause 6.10.2.4 Parameter Set as defined in the RADIO BEARER SETUP message with highest rate TF of RAB removed. |
| - Power offset information | |
| - CHOICE Gain Factors | Computed Gain Factors(The last TFC is set to Signalled Gain Factors) |
| - Gain factor βd | 15<br>(Not Present if the CHOICE Gain Factors is set to Computed Gain Factors) |
| - Reference TFC ID | 0 |
| - CHOICE mode | TDD |
| - TFC subset | |
| Added or Reconfigured UL TrCH information | Not Present |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |

RADIO BEARER SETUP

The contents of RADIO BEARER SETUP message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | |
| - RB information to setup | |
| - PDCP info | OMIT |

#### 8.2.4.1a.5 Test requirement

After step 1 the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

After step 2a the UE shall transmit a RLC_SDU that is same as the transmitted data from SS in step 2a on the radio access bearer.

### 8.2.4.2 Void

### 8.2.4.3 Transport channel reconfiguration from CELL_DCH to CELL_DCH: Failure (Physical channel failure and reversion to old configuration)

#### 8.2.4.3.1 Definition

#### 8.2.4.3.2 Conformance requirement

When a physical dedicated channel establishment is initiated by the UE, the UE shall start a timer T312 and wait for layer 1 to indicate N312 "in sync" indications. On receiving N312 "in sync" indications, the physical channel is considered established and the timer T312 is stopped and reset.

If the timer T312 expires before the physical channel is established, the UE shall consider this as a "physical channel establishment failure".

If the received message caused the UE to be in CELL_DCH state and the UE failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> revert to the configuration prior to the reception of the message (old configuration);

…

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The UE shall:

1> in case of reception of a TRANSPORT CHANNEL RECONFIGURATION message:

…

2> transmit a TRANSPORT CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9, 8.5.4.

### 8.2.4.3.3 Test purpose

To confirm that the UE reverts to the old configuration and transmits a TRANSPORT CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, if the UE fails to reconfigure the new configuration according to a TRANSPORT CHANNEL RECONFIGURATION message.

### 8.2.4.3.4 Method of test

Initial Condition

System Simulator: 2 cells. – Cell 1 is active and cell 2 is inactive.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.4.3**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -60 | OFF | -75 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | OFF | -75 |

Table 8.2.4.3 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 2.

The UE is in CELL_DCH state in cell 1. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. Then the SS configures its downlink transmission power settings according to column "T1" in table 8.2.4.3. The SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE to restrict transmission on the uplink DCH used by the signalling radio bearer RB2. The message specifies a new configuration in cell 2 but the SS does not configure the new physical channel in cell 2 specified in this message and keep its old configuration in cell 1. Therefore, the UE cannot synchronise with the SS on the new physical channel in cell 2 and shall revert to the old configuration in cell 1 after T312 expires. Then the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting "physical channel failure" in IE "failure cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | TRANSPORT CHANNEL RECONFIGURATION | |
| 2 | | | | The SS does not reconfigure the new configuration in cell 2. |
| 3 | → | | TRANSPORT CHANNEL RECONFIGURATION FAILURE | The UE reverts to the old configuration and transmits this message. |
| 4 | → | | MEASUREMENT REPORT | |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8000 |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 0b and 4)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

TRANSPORT CHANNEL RECONFIGURATION (Step 1) (FDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Non speech in CS", "Speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- TFC subset<br>- Restricted TrCH information<br>- Uplink transport channel type<br>- Restricted UL TrCh identity<br>- Allowed TFIs<br>- Allowed TFI | <br><br><br>DCH<br>5 <UL DCH for SRB 2><br><br>0 |
| Downlink information common for all radio links | Set to the same values as for "Packet to CELL_DCH from CELL_DCH in PS" |
| Downlink information for each radio link list | Set to the same values as for "Packet to CELL_DCH from CELL_DCH in PS" unless explicitly indicated otherwise in the following |
| - Downlink information for each radio links<br>- CHOICE mode<br>- Primary CPICH info<br>- Primary CPICH scrambling code | <br>FDD<br><br>Ref. to the Default setting for cell 2 in TS34.108 clause 6.1 (FDD) |

TRANSPORT CHANNEL RECONFIGURATION (Step 1) (TDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Non speech in CS", "Speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- TFC subset<br>- Restricted TrCH information<br>- Uplink transport channel type<br>- Restricted UL TrCh identity<br>- Allowed TFIs<br>- Allowed TFI | <br><br><br>DCH<br>5 <UL DCH for SRB 2><br><br>0 |
| Downlink information common for all radio links | Set to the same values as for "Packet to CELL_DCH from CELL_DCH in PS" |
| Downlink information for each radio link list | Set to the same values as for "Packet to CELL_DCH from CELL_DCH in PS" unless explicitly indicated otherwise in the following |
| - Downlink information for each radio links<br>- CHOICE mode<br>- Primary CCPCH info | <br>TDD<br>Ref. to the Default setting in TS34.108 clause 6.1 (TDD) for cell 2 |

TRANSPORT CHANNEL RECONFIGURATION FAILURE (Step 2)

The contents of TRANSPORT CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the TRANSPORT CHANNEL RECONFIGURATION FAILURE message as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Physical channel failure |

### 8.2.4.3.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 2 the UE shall revert to the old configuration in cell 1 and transmit a TRANPORT CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, and it shall set the value "physical channel failure" in IE "failure cause".

After step 3, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

### 8.2.4.4 Transport channel reconfiguration from CELL_DCH to CELL_DCH: Failure (Physical channel failure and cell reselection)

#### 8.2.4.4.1 Definition

#### 8.2.4.4.2 Conformance requirement

If the received message caused the UE to be in CELL_DCH state and the UE failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> revert to the configuration prior to the reception of the message (old configuration);

1> if the old configuration includes dedicated physical channels (CELL_DCH state) and the UE is unable to revert to the old configuration:

2> initiate a cell update procedure according to TS 25.331 subclause 8.3.1, using the cause "radio link failure";

2> after the cell update procedure has completed successfully:

3> proceed as below.

…

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- includes "Physical channel information elements":

the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

The UE shall:

1> in case of reception of a TRANSPORT CHANNEL RECONFIGURATION message:

…

2> transmit a TRANSPORT CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9, 8.3.1.7.

8.2.4.4.3 Test purpose

To confirm that the UE transmits a TRANSPORT CHANNEL RECONFIGURATION FAILURE message after it completes a cell update procedure when the UE cannot synchronise with the SS on the new channel before T312 expires and fails to revert to the old configuration.

8.2.4.4.4 Method of test

Initial Condition

System Simulator: 2 cells. – Cell 1 is active and cell 2 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.4.4**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -60 | OFF | -75 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | OFF | -75 |

Table 8.2.4.4 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 2.

The UE is in CELL_DCH state in cell 1. Then the SS configures its downlink transmission power settings according to columns "T1" in table 8.2.4.4. The SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE. The message specifies a new configuration in cell 2 but the SS does not reconfigure the new channel in cell 2 specified in this message and release the old configuration in cell 1. The UE cannot synchronise with SS before T312 expires and shall attempt to revert to the old configuration in cell 1. The UE cannot revert to the old configuration and then transmit a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "radio link failure" in cell 1. The SS shall transmit a CELL UPDATE CONFIRM message on downlink DCCH after receiving CELL UPDATE message. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC and subsequently transmits a TRANSPORT CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting IE "failure cause" to "physical channel failure".

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | TRANSPORT CHANNEL RECONFIGURATION | |
| 2 | | | | The SS does not reconfigure L1 in accordance with TRANSPORT CHANNEL RECONFIGURTION message and release the old configuration. |
| 3 | → | | CELL UPDATE | This message includes the value "radio link failure" set in IE "Cell update cause". |
| 4 | ← | | CELL UPDATE CONFIRM | This message includes IE "Physical channel information elements". |
| 5 | | | | The SS changes physical channel configuration according to the IE "Physical channel information elements" included in the CELL UPDATE CONFIRM message. |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 7 | → | | TRANSPORT CHANNEL RECONFIGURATION FAILURE | The IE "failure cause" shall be set to "physical channel failure" |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

TRANSPORT CHANNEL RECONFIGURATION (Step 1) (FDD)

Use the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Downlink information common for all radio links | Set to the same values as for "Packet to CELL_DCH from CELL_DCH in PS" |
| Downlink information for each radio link list | Set to the same values as for "Packet to CELL_DCH from CELL_DCH in PS" unless explicitly indicated otherwise in the following |
| - Downlink information for each radio links | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary CPICH scrambling code | Ref. to the Default setting for cell 2 in TS34.108 clause 6.1 (FDD) |

TRANSPORT CHANNEL RECONFIGURATION (Step 1) (TDD)

Use the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Downlink information common for all radio links | Set to the same values as for "Packet to CELL_DCH from CELL_DCH in PS" |
| Downlink information for each radio link list | Set to the same values as for "Packet to CELL_DCH from CELL_DCH in PS" unless explicitly indicated otherwise in the following |
| - Downlink information for each radio links | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Ref. to the Default setting in TS34.108 clause 6.1 (TDD) for cell 2 |

CELL UPDATE (Step 3)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0000 0001' |
| Cell Update Cause | "radio link failure" |

CELL UPDATE CONFIRM (Step 4) (FDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| UplinkDPCH Info | Set to the same values as RADIO BEARER SETUP message for "Packet to CELL_DCH from CELL_FACH in PS" or "Non speech to CELL_DCH from CELL_FACH in CS" or "Speech to CELL_DCH from CELL_FACH in CS" |
| Downlink information common for all radio links | Set to the same values as RADIO BEARER SETUP message for "Packet to CELL_DCH from CELL_FACH in PS" or "Non speech to CELL_DCH from CELL_FACH in CS" or "Speech to CELL_DCH from CELL_FACH in CS" |
| Downlink information for each radio link list | Set to the same values as RADIO BEARER SETUP message for "Packet to CELL_DCH from CELL_FACH in PS" or "Non speech to CELL_DCH from CELL_FACH in CS" or "Speech to CELL_DCH from CELL_FACH in CS" |

CELL UPDATE CONFIRM (Step 4) (TDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_DCH |
| Uplink DPCH timeslots and codes | Same as RADIO BEARER SETUP message used to move to initial condition |
| Downlink information common for all radio links | Same as RADIO BEARER SETUP message used to move to intial condition |
| Downlink information for each radio link list | Same as RADIO BEARER SETUP message used to move to initial condition |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 6)

Use the same message found in TS 34.108 clause 9, with the exceptions of the following IEs:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info | This IE is not checked. |

TRANSPORT CHANNEL RECONGURATION FAILURE (Step 7)

The contents of TRANSPORT CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the TRANSPORT CHANNEL RECONFIGURATION FAILURE message as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | "physical channel failure" |

#### 8.2.4.4.5 Test requirement

After step 2 the UE shall transmit a CELL UPDATE message on the uplink CCCH with IE "Cell update cause" set to "radio link failure" in cell 1.

After step 5 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 6 the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting the IE "failure cause" to "physical channel failure".

### 8.2.4.4a Transport channel reconfiguration from CELL_DCH to CELL_DCH: Failure (Physical channel failure and cell reselection) (1.28 Mcps TDD Only)

#### 8.2.4.4a.1 Definition

#### 8.2.4.4a.2 Conformance requirement

If the received message caused the UE to be in CELL_DCH state and the UE failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> revert to the configuration prior to the reception of the message (old configuration);

1> if the old configuration includes dedicated physical channels (CELL_DCH state) and the UE is unable to revert to the old configuration:

2> initiate a cell update procedure according to TS 25.331 subclause 8.3.1, using the cause "radio link failure";

2> after the cell update procedure has completed successfully:

3> proceed as below.

…

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and

- includes "Physical channel information elements":

the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

The UE shall:

1> in case of reception of a TRANSPORT CHANNEL RECONFIGURATION message:

…

2> transmit a TRANSPORT CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9, 8.3.1.7.

### 8.2.4.4a.3 Test purpose

1. To confirm that the UE transmits a TRANSPORT CHANNEL RECONFIGURATION FAILURE message after it completes a cell update procedure when the UE cannot synchronise with the SS on the new channel before T312 expires and fails to revert to the old configuration.

2. To confirm that the UE reconfigures the transport channel in secondary carrier.

### 8.2.4.4a.4 Method of test

Initial Condition

System Simulator: 2 cells. – Cell 1 is active and cell 2 is inactive. In each cell□configure 3 carriers□one is the primary carrier□the other two aresecondary carriers□

Detail in the table as follows:

| Parameter | Cell 1 | Cell 2 |
|---|---|---|
| UTRA RF Channel Number1 | Ch.1 | Ch. 1 |
| UTRA RF Channel Number1 | Ch. 2 | Ch. 2 |
| UTRA RF Channel Number1 | Ch. 3 | Ch. 3 |

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.4.4a**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | OFF | -75 |

Table 8.2.4.4a illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 2.

The UE is in CELL_DCH state in cell 1. Then the SS configures its downlink transmission power settings according to columns "T1" in table 8.2.4.4a. The SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE. The message specifies a new configuration in cell 2 but the SS does not reconfigure the new channel in cell 2 specified in this message and release the old configuration in cell 1. The UE cannot synchronise with SS before T312 expires and shall attempt to revert to the old configuration in cell 1. The UE cannot revert to the old configuration and then transmit a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "radio link failure" in cell 1. The SS shall transmit a CELL UPDATE CONFIRM message on downlink DCCH after receiving CELL UPDATE message. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC and subsequently transmits a TRANSPORT CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting IE "failure cause" to "physical channel failure".

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence:

| □□ | □□ | | □□ | □□ |
|---|---|---|---|---|
| | **UE** | **SS** | | |
| 1 | ← | | TRANSPORT CHANNEL RECONFIGURATION | |
| 2 | | | | The SS does not reconfigure L1 in accordance with TRANSPORT CHANNEL RECONFIGURTION message and release the old configuration. |
| 3 | → | | CELL UPDATE | This message includes the value "radio link failure" set in IE "Cell update cause". |
| 4 | ← | | CELL UPDATE CONFIRM | This message includes IE "Physical channel information elements". |
| 5 | | | | The SS changes physical channel configuration according to the IE "Physical channel information elements" included in the CELL UPDATE CONFIRM message. |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 7 | → | | TRANSPORT CHANNEL RECONFIGURATION FAILURE | The IE "failure cause" shall be set to "physical channel failure" |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |
| 8 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Info UE go into CELL_DCH state of secondary carrier1 |
| 9 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | UE response the message on DCH ofsecondary carrier1 |
| 10 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Info UE go into CELL_DCH state of secondary carrier2 |
| 11 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | UE response the message on DCH of secondary carrier.2 |
| 12 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Info UE go into CELL_DCH state of primary carrier |
| 13 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | UE response the message on DCH of primary carrier. |
| 14 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state of primary carrier, the test passes, otherwise it fails. |

Specific Message Contents

TRANSPORT CHANNEL RECONFIGURATION (Step 1) (TDD)

Use the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exception.

| | |
|---|---|
| Downlink information common for all radio links | Set to the same values as for "Packet to CELL_DCH from CELL_DCH in PS" unless explicitly indicated otherwise in the following |
| Downlink information for each radio link list | Set to the same values as for "Packet to CELL_DCH from CELL_DCH in PS" unless explicitly indicated otherwise in the following |
| - Downlink information for each radio links | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Ref. to the Default setting in TS34.108 clause 6.1 (TDD) for cell 2 |
| Uplink DPCH info | |
| -Uplink Timing Advance Control | |
| - Frequency info | |
| -UpPCH position info | 0 |

CELL UPDATE (Step 3)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0000 0001' |
| Cell Update Cause | "radio link failure" |

CELL UPDATE CONFIRM (Step 4) (TDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_DCH |
| Uplink DPCH timeslots and codes | Same as RADIO BEARER SETUP message used to move to initial condition |
| Downlink information common for all radio links | Same as RADIO BEARER SETUP message used to move to intial condition |
| Downlink information for each radio link list | Same as RADIO BEARER SETUP message used to move to initial condition |
| Uplink DPCH info | |
| -Uplink Timing Advance Control | |
| - Frequency info | |
| -UpPCH position info | 0 |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 6)

Use the same message found in TS 34.108 clause 9, with the exceptions of the following IEs:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info | This IE is not checked. |

TRANSPORT CHANNEL RECONGURATION FAILURE (Step 7)

The contents of TRANSPORT CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the TRANSPORT CHANNEL RECONFIGURATION FAILURE message as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | "physical channel failure" |

TRANSPORT CHANNEL RECONFIGURATION (Step 8 □10 ) (TDD)

Use the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| TransportChannelReconfiguration-r4-TDD128-add-ext-IEs | |
| frequencyInfo | secondary carrier 2 frequency□step 8□□secondary carrier1frequency□step 10□ |
| Uplink DPCH info | |
| -Uplink Timing Advance Control | |
| -UpPCH position info | 0 |

TRANSPORT CHANNEL RECONFIGURATION (Step 12 ) (TDD)

Use the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt)<br>Uplink DPCH info<br>-Uplink Timing Advance Control<br>-UpPCH position info | <br>TDD<br>primary carrier frequency<br><br><br>0 |

Contents of System Information Block type 3

Use the same message found in TS 34.108 , with the exceptions of the following IEs:

| Information Element | Value/remark |
|---|---|
| Qrxlevmin | -81dBm |
| Sintrasearch | 21db |
| Sintersearch | 21db |
| -v4b0NonCriticalExtensions | |
| -sysInfoType3-v4b0ext | |
| - mapping-LCR | 0 |

### 8.2.4.4a.5 Test requirement

After step 2 the UE shall transmit a CELL UPDATE message on the uplink CCCH with IE "Cell update cause" set to "radio link failure" in cell 1.

After step 5 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 6 the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting the IE "failure cause" to "physical channel failure".

After step 8 , the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 10 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH of another secondary carrier using AM RLC.

### 8.2.4.5 Void

### 8.2.4.6 Void

### 8.2.4.7 Void

### 8.2.4.8 Void

### 8.2.4.9 Void

### 8.2.4.10 Transport channel reconfiguration from CELL_FACH to CELL_DCH: Success

#### 8.2.4.10.1 Definition

#### 8.2.4.10.2 Conformance requirement

If the UE receives:

- a TRANSPORT CHANNEL RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

#### 8.2.4.10.3 Test purpose

To confirm that the UE reconfigures a new channel using dedicated physical channel according to a TRANSPORT CHANNEL RECONFIGURATION message.

8.2.4.10.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The UE has previously stored radio bearer and transport channel parameters for use in CELL_DCH. The SS transmits a TRANSPORT CHANNEL RECONFIGURATION message, which modifies the rate as compared to the stored configuration to the UE. The message also includes the physical layer parameters e.g. IE "Uplink DPCH info" and IE "Downlink DPCH info" leading to a state transition from CELL_FACH to CELL_DCH in the same cell, to the UE. The UE shall reconfigure the new channel according to this message. Finally, the UE transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Includes both IE "Uplink DPCH Info" and IE "Downlink DPCH Info" in the message. |
| 2 | | | | Reconfiguration of transport channel |
| 3 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

TRANSPORT CHANNEL RECONFIGURATION (FDD)

Use the message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Added or Reconfigured UL TrCH information | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS".<br>Only the DCH for DTCH is included and the rate for this DCH should be different compared to the stored CELL_DCH configuration. |
| Added or Reconfigured DL TrCH information | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS".<br>Only the DCH for DTCH is included and the rate for this DCH should be different compared to the stored CELL_DCH configuration. |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |
| Downlink information for each radio link list | |
| - Downlink information for each radio links | |
| - CHOICE mode | FDD |
| - Downlink DPCH info for each RL | |
| - DL channelisation code | |
| - Scrambling code change | Not Present |

TRANSPORT CHANNEL RECONFIGURATION (TDD)

Use the message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Added or Reconfigured UL TrCH information | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS".<br>Only the DCH for DTCH is included and the rate for this DCH should be different compared to the stored CELL_DCH configuration. |
| Added or Reconfigured DL TrCH information | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS".<br>Only the DCH for DTCH is included and the rate for this DCH should be different compared to the stored CELL_DCH configuration. |
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |

TRANSPORT CHANNEL RECONFIGURATION COMPLETE

Use the message with the same message type specified in Annex A.

#### 8.2.4.10.5 Test requirement

After step 2 the UE shall transmit a TRANSPORT RECONFIGURATION COMPLETE message on the newly configured DPCH.

### 8.2.4.10a Transport channel reconfiguration from CELL_FACH to CELL_DCH: Success(1.28 Mcps TDD Only)

#### 8.2.4.10a.1 Definition

#### 8.2.4.10a.2 Conformance requirement

If the UE receives:

- a TRANSPORT CHANNEL RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.4.10a.3 Test purpose

1.To confirm that the UE reconfigures a new channel using dedicated physical channel according to a TRANSPORT CHANNEL RECONFIGURATION message.

2. To confirm that the UE reconfigures the transport channel in secondary carrier.

3. To confirm that the UE can indicate the UpPCH shifting position according to a TRANSPORT CHANNEL RECONFIGURATION message received from the SS and complete the process.

### 8.2.4.10a.4 Method of test

Initial Condition

System Simulator: 1 cell. Congfigure 3 carriers,one is primary carrier, the others are secondary carriers. SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. The UE has previously stored radio bearer and transport channel parameters for use in CELL_DCH. The SS transmits a TRANSPORT CHANNEL RECONFIGURATION message, which modifies the rate as compared to the stored configuration to the UE. The message also includes the physical layer parameters e.g. IE "Uplink DPCH info" and IE "Downlink DPCH info" leading to a state transition from CELL_FACH to CELL_DCH in the same cell but in the secondary carrier, to the UE. The UE shall reconfigure the new channel according to this message. Finally, the UE transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Includes both IE "Uplink DPCH Info" and IE "Downlink DPCH Info" in the message in secondary carrier,. |
| 2 | | | | Reconfiguration of transport channel in secondary carrier, |
| 3 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state in secondary carrier,, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 3 (TDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| -v4b0NonCriticalExtensions | |
| -sysInfoType3-v4b0ext | |
| - mapping-LCR | 22 |

TRANSPORT CHANNEL RECONFIGURATION (TDD)

Use the message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Added or Reconfigured UL TrCH information | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS". Only the DCH for DTCH is included and the rate for this DCH should be different compared to the stored CELL_DCH configuration. |
| Added or Reconfigured DL TrCH information | Set to the same values as for "Packet to CELL_DCH from CELL_FACH in PS". Only the DCH for DTCH is included and the rate for this DCH should be different compared to the stored CELL_DCH configuration. |
| Maximum allowed UL TX power | Not Present |
| TransportChannelReconfiguration-r4-TDD128-add-ext-IEs | |
| frequencyInfo | secondary carrier |
| TransportChannelReconfiguration-r4-TDD128-add-ext-IEs | |
| UpPCHpositionInfo | 22 |

TRANSPORT CHANNEL RECONFIGURATION COMPLETE

Use the message with the same message type specified in Annex A.

8.2.4.10a.5 Test requirement

After step 2 the UE shall transmit a TRANSPORT RECONFIGURATION COMPLETE message on the newly configured DPCH in secondary carrier.

8.2.4.11 Void

8.2.4.12 Void

8.2.4.13 Void

8.2.4.14 Void

8.2.4.15 Void

8.2.4.16 Void

8.2.4.17 Void

### 8.2.4.18 Transport Channel Reconfiguration from CELL_DCH to CELL_DCH: Success (Subsequently received)

#### 8.2.4.18.1 Definition

#### 8.2.4.18.2 Conformance requirement

If the IE "RRC transaction identifier" is included in a received message, the UE shall perform the actions below. The UE shall:

If the received message is any of the messages:

- TRANSPORT CHANNEL RECONFIGURATION; or

  …

the UE shall:

2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

2> if the variable CELL_UPDATE_STARTED is set to TRUE; or

2> if the table "Accepted transactions" in the variable TRANSACTIONS contains an entry with an IE "Message Type" set to ACTIVE SET UPDATE; or

2> if the received message contains a protocol error according to TS 25.331 clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

4> ignore the transaction; and

4> continue with any ongoing processes and procedures as the message was not received;

4> and end the procedure.

3> else:

…

Reference

3GPP TS 25.331 clause 8.6.3.11.

#### 8.2.4.18.3 Test purpose

To confirm that if the UE receives a TRANSPORT CHANNEL RECONFIGURATION message before the UE configures the radio bearer according to the previous TRANSPORT CHANNEL RECONFIGURATION message it

ignores the second TRANSPORT CHANNEL RECONFIGURATION message and configures according to the previous TRANSPORT CHANNEL RECONFIGURATION message.

8.2.4.18.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. When the SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE before the activation time specified in the previous TRANSPORT CHANNEL RECONFIGURATION message elapses, the UE ignores the new TRANSPORT CHANNEL RECONFIGURATION message and configures according to the previous TRANSPORT CHANNEL RECONFIGURATION message. Finally, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | TRANSPORT CHANNEL RECONFIGURATION | For FDD, Scrambling code number is set to "1" and for TDD , the code combination is assigned by SS. |
| 2 | ← | | TRANSPORT CHANNEL RECONFIGURATION | SS send this message before the expiry of "activation time" specified in TRANSPORT CHANNEL SETUP message of step 1. For FDD the IE "Scrambling code number" is set to "2". For TDD the code combination assigned is different from that assigned in stage 1. |
| 3 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | The UE ignores the TRANSPORT CHANNEL RECONFIGURATION message in step 2 and configures according to the TRANSPORT CHANNEL RECONFIGURATION message in step 1. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

TRANSPORT CHANNEL RECONFIGURATION (Step 1) (FDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION messages in this test case is identical to the message sub-type title as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH Info<br>- Scrambling code number | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256<br><br>1 |

TRANSPORT CHANNEL RECONFIGURATION (Step 1) (TDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION messages in this test case is identical to the message sub-type title as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256<br><br>Assigned in step 1 |

TRANSPORT CHANNEL RECONFIGURATION (Step 2)

The contents of TRANSPORT CHANNEL RECONFIGURATION messages in this test case is identical to the message sub-type title as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH Info<br>- Scrambling code number | Not Present<br><br>2 |

TRANSPORT CHANNEL RECONFIGURATION (Step 2) (TDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION messages in this test case is identical to the message sub-type title as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | Not Present<br><br>A different code combination to that used in step 1. |

#### 8.2.4.18.5 Test requirement

After step 2 the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.4.19 Transport Channel Reconfiguration from CELL_FACH to CELL_DCH: Success (Subsequently received)

#### 8.2.4.19.1 Definition

#### 8.2.4.19.2 Conformance requirement

If the IE "RRC transaction identifier" is included in a received message, the UE shall perform the actions below. The UE shall:

If the received message is any of the messages:

- TRANSPORT CHANNEL RECONFIGURATION; or

  …

the UE shall:

  2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

  2> if the variable CELL_UPDATE_STARTED is set to TRUE; or

2> if the table "Accepted transactions" in the variable TRANSACTIONS contains an entry with an IE "Message Type" set to ACTIVE SET UPDATE; or

2> if the received message contains a protocol error according to TS 25.331 clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

4> ignore the transaction; and

4> continue with any ongoing processes and procedures as the message was not received;

4> and end the procedure.

3> else:

Reference

3GPP TS 25.331 clause 8.6.3.11.

### 8.2.4.19.3 Test purpose

To confirm that if the UE receives a TRANSPORT CHANNEL RECONFIGURATION message before the UE configures the radio bearer according to the previous TRANSPORT CHANNEL RECONFIGURATION message it ignores the second TRANSPORT CHANNEL RECONFIGURATION message and configures according to the previous TRANSPORT CHANNEL RECONFIGURATION message.

### 8.2.4.19.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state. When the SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE before the activation time specified in the previous TRANSPORT CHANNEL RECONFIGURATION message elapses, the UE ignores the new TRANSPORT CHANNEL RECONFIGURATION message and configures according to the previous TRANSPORT CHANNEL RECONFIGURATION message. Finally, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | TRANSPORT CHANNEL RECONFIGURATION | For FDD, Scrambling code number is set to "1" and for TDD, the code combination is assigned by SS. |
| 2 | ← | | TRANSPORT CHANNEL RECONFIGURATION | For FDD the IE "Scrambling code number" is set to "2". For TDD the code combination assigned is different that assigned in stage 1. |
| 3 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | The UE ignores the TRANSPORT CHANNEL RECONFIGURATION message in step 2 and configures according to the TRANSPORT CHANNEL RECONFIGURATION message in step 1. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

TRANSPORT CHANNEL RECONFIGURATION (Step 1) (FDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time Info<br>- Uplink DPCH Info<br>- Scrambling code number | Not present<br><br>1 |

TRANSPORT CHANNEL RECONFIGURATION (Step 1) (TDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256<br><br>Assigned in step 1 |

TRANSPORT CHANNEL RECONFIGURATION (Step 2) (FDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH Info<br>- Scrambling code number | Not Present<br><br>2 |

TRANSPORT CHANNEL RECONFIGURATION (Step 2) (TDD)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | Not Present<br><br>A different code combination to that used in step 1. |

#### 8.2.4.19.5 Test requirement

After step 2 the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.4.20 Void

### 8.2.4.21 Void

### 8.2.4.22 Void

### 8.2.4.23 Void

### 8.2.4.24 Transport channel reconfiguration from CELL_DCH to CELL_DCH: Success with uplink transmission rate modification

#### 8.2.4.24.1 Definition

#### 8.2.4.24.2 Conformance requirement

If the UE receives:

- a TRANSPORT CHANNEL RECONFIGURATION message:

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

8.2.4.24.3 Test purpose

To confirm that the UE transmits TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC after reconfigure its available uplink TFC according to a TRANSPORT CHANNEL RECONFIGURATION message.

8.2.4.24.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_DCH state of cell 1. The SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE to modify the transmission rate. This message includes a new uplink transport channel information in order to restricts available uplink TFC within assigned uplink TFCS. The UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC after reconfiguring its transport channel parameters. Next the SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE which includes a new uplink transport channel information in order to reconfigure uplink TFCS. The UE transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC after reconfiguring its transport channel parameters according to the TRANSPORT CHANNEL RECONFIGURATION message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_DCH state of cell 1. |
| 2 | ← | | TRANSPORT CHANNEL RECONFIGURATION | This message includes the IE"TFC subset" and don't include UL/DL physical channel information. |
| 3 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | TRANSPORT CHANNEL RECONFIGURATION | |
| 5 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |

Specific Message Contents

TRANSPORT CHANNEL RECONFIGURATION (Step 2)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels | |
| - CHOICE mode | FDD |
| - TFC subset | |
| - CHOICE Subset representation | Allowed transport format combination list |
| - Allowed transport format combination | Indicate TFCs which are a part of the TFCS defined in this message to restrict uplink allowed TFC subset. |
| - UL DCH TFCS | Same contents as a RADIO BEARER SETUP message used in initial procedure. |
| CHOICE channel requirement | Not present |
| Downlink information per radio link list | Not present |

TRANSPORT CHANNEL RECONFIGURATION (Step 4)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels | |
| - CHOICE mode | FDD |
| - TFC subset | |
| - UL DCH TFCS | |
| - CHOICE TFCI signalling | Normal |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS complete reconfiguration | |
| - CHOICE CTFC Size | Number of bits used must be enough to cover all combinations of CTFC from TS34.108 clause 6.10.2.4 Parameter Set. |
| - CTFC information | This IE is repeated for TFC numbers and reference to TS34.108 clause 6.10.2.4 Parameter Set |
| - CTFC | Reference to TS34.108 clause 6.10.2.4 Parameter Set as defined in the RADIO BEARER SETUP message with highest rate CTFC removed. |
| - Power offset information | |
| - CHOICE Gain Factors | Computed Gain Factors except for the TFC for 64 kbps and the last TFC which are set to Signalled Gain Factors |
| - Gain factor βc | 11 ( TFC for 64 kbps)<br>9 (last TFC, i.e. highest rate)<br>(Not Present if the CHOICE Gain Factors is set to Computed Gain Factors) |
| - Gain factor βd | 15<br>(Not Present if the CHOICE Gain Factors is set to Computed Gain Factors) |
| - Reference TFC ID | 0 (64 kbps and below)<br>1 (higher than 64 kbps) |
| - CHOICE mode | FDD |
| - Power offset $P_{p-m}$ | Not Present |
| Added or Reconfigured UL TrCH information | Not Present |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| CHOICE channel requirement | Uplink DPCH info |
| - Uplink DPCH power control info | Same contents as a RADIO BEARER SETUP message used in initial procedure |
| - CHOICE mode | FDD |
| - Scrambling code type | Long |
| - Scrambling code number | 0 (0 to 16777215) |
| - Number of DPDCH | Not Present |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set<br>Set different parameter which is included in a RADIO BEARER SETUP message used in initial procedure. |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set<br>Set different parameter which is included in a RADIO BEARER SETUP message used in initial procedure. |
| - Number of FBI bit | Not Present |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set<br>Set different parameter which is included in a RADIO BEARER SETUP message used in initial procedure. |
| Downlink information per radio link list | Not present |

#### 8.2.4.24.5 Test requirement

After step 2 the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

After step 4 the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.4.25 Transport channel reconfiguration from CELL_FACH to CELL_DCH (Frequency modification): Success

#### 8.2.4.25.1 Definition

#### 8.2.4.25.2 Conformance requirement

If the UE receives:

-a TRANSPORT CHANNEL RECONFIGURATION message;

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_DCH state, the UE shall, after the state transition:

1> remove any C-RNTI from MAC;

1> clear the C_RNTI.

In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC, using the new configuration after the state transition.

1> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

#### 8.2.4.25.3 Test purpose

1. To confirm that the UE transits from CELL_FACH to CELL_DCH according to TRANSPORT CHANNEL RECONFIGURATION message.

2. To confirm that the UE transmits TRANSPORT CHANNEL RECONFIGURATION message on the uplink DCCH using AM RLC on dedicated physical channel in a different frequency.

#### 8.2.4.25.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.2.4.25**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -55 | Off | -55 |

Table 8.2.4.25 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_FACH state of ce11 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.4.25. The SS switches its downlink transmission power settings to columns "T1" and transmits a TRANSPORT CHANNEL RECONFIGURATION message, which includes new frequency information leading to a state transition from CELL_FACH to CELL_DCH in cell 6. The UE shall reconfigure transport channel parameter and frequency band according to this message. Finally, the UE transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC in cell 6. The SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.4.25. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.4.25. |
| 3 | ← | | TRANSPORT CHANNEL RECONFIGURATION | |
| 4 | | | | Reconfiguration of transport channel. |
| 5 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | The UE sends this message in cell 6. |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

TRANSPORT CHANNEL RECONFIGURATION (Step 3)

Use the message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | 350 |

#### 8.2.4.25.5 Test requirement

After step 4 the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 6.

After step 5 the UE shall be in CELL_DCH state of cell 6.

### 8.2.4.26 Void

### 8.2.4.27 Void

### 8.2.4.28 Void

### 8.2.4.29 Transport Channel Reconfiguration for transition from CELL_DCH to CELL_DCH (Frequency modification): Success

#### 8.2.4.29.1 Definition

#### 8.2.4.29.2 Conformance requirement

If the UE receives:

-a TRANSPORT CHANNEL RECONFIGURATION message;

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

#### Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

8.2.4.29.3 Test purpose

1. To confirm that the UE transits from CELL_DCH to CELL_DCH according to the TRANSPORT CHANNEL RECONFIGURATION message.

2. To confirm that the UE transmits the TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC on a dedicated physical channel in a different frequency.

8.2.4.29.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

UE: CS-DCCH_DTCH_DCH (state 6-9) or PS_DCCH_DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.4.29**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -55 | -72 | Off | -55 |
| PCCPCH RSCP (TDD) | dBm | -55 | -72 | off | -55 |

Table 8.2.4.29 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.4.29. The SS switches its downlink transmission power settings to columns "T1" and transmits a TRANSPORT CHANNEL RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 , and for FDD IE "Primary CPICH info" set to Primary Scrambling Code which is assigned to P-CPICH of cell 6, for TDD IE “Primary CCPCH info” set to cell parameter ID which is assigned to P-CCPCH of cell 6. The UE shall select cell 6 and reconfigure its transport channel parameters after receiving this message, and then remain in CELL_DCH state. The UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC after completes configuration according to receiving TRANSPORT CHANNEL RECONFIGURATION message. Upon completion of the procedure, the SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.4.29. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.4.29. |
| 3 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Including IE "Frequency info" set to frequency information of cell 6 and for FDD IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6. For 1.28 Mcps TDD, IE "Primary CCPCH info" set to cell parameter ID which is assigned to P-CCPCH of cell 6 |
| 4 | | | | The UE select cell 6. |
| 5 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | The UE sends this message on a dedicated physical channel in cell 6. |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

TRANSPORT CHANNEL RECONFIGURATION (Step 3) (FDD)

The contents TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical the message sub-type indicated by "Packet to CELL_DCH from CELL_DCH in PS" or "Speech in CS" or "Non speech from in CS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |

TRANSPORT CHANNEL RECONFIGURATION (Step 3) (1.28 Mcps TDD)

The contents TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical the message sub-type indicated by "Packet to CELL_DCH from CELL_DCH in PS" or "Speech in CS" or "Non speech from in CS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - Cell parameters ID | Same as cell 6 |

8.2.4.29.5 Test requirement

After step 4 the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 6.

After step 5 the UE shall be in CELL_DCH state in cell 6.

8.2.4.30 Void

8.2.4.31 Void

8.2.4.32 Void

8.2.4.33 Void

8.2.4.34 Void

8.2.4.35 Void

### 8.2.4.36 Transport Channel Reconfiguration from CELL_DCH to CELL_DCH: Success (with active HS-DSCH reception, not changing the value of TTI during UL rate modification)

#### 8.2.4.36.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.2.4.36.2 Conformance requirement

In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

…

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

…

Reference

3GPP TS 25.331 clauses 8.2.2, 8.6.3.1, 8.2.2.3, 8.5.25

### 8.2.4.36.3 Test purpose

To confirm that the UE reconfigures the transport and physical channel while being mapped to HS-DSCH according to the received TRANSPORT CHANNEL RECONFIGURATION message.

To confirm that the UE keeps the same value of TTI (transmission time interval) during the procedure.

### 8.2.4.36.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state and only signalling radio bearers have been established. SS initiates P25 to make the UE move to state 6-17 as specified in TS 34.108 clause 7.4. The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established using a 384 kbps (FDD, 3.84Mcps TDD and 7.68 Mcps TDD) or 64 kbps (1.28Mcps TDD) uplink DCH.

The SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE to limit the uplink transmission rate. This message includes a new UL DCH TFCS for uplink 64kbps (FDD, 3.84Mcps TDD and 7.68 Mcps) or 32 kbps (1.28Mcps TDD) transmission rate, but the TTI remains unchanged. After the UE receives this

message, it reconfigures the transport and physical channel and transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC. Upon successfully received the complete message from the UE, SS transmits another TRANSPORT CHANNEL RECONFIGURATION message to limit the uplink transmission rate to 32kbps (FDD, 3.84Mcps TDD and 7.68 Mcps TDD) or 16 kbps (1.28Mcps TDD). After the UE receives this message, it reconfigures the transport and physical channel and transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

Next the SS transmits a new TRANSPORT CHANNEL RECONFIGURATION message to the UE which includes an old UL DCH TFCS for uplink 64kbps (FDD, 3.84Mcps TDD and 7.68 Mcps TDD) or 32 kbps (1.28Mcps TDD) transmission rate in order to remove the limitation for uplink 32kbps (FDD, 3.84Mcps TDD and 7.68 Mcps TDD) or 16 kbps (1.28Mcps TDD) transmission rate and keeps the transmission time interval. Upon received this message, the UE reconfigures the transport and physical channel and transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC. The SS then transmits one more TRANSPORT CHANNEL RECONFIGURATION message to remove the limitation for uplink 64kbps (FDD, 3.84Mcps TDD and 7.68 Mcps TDD) or 32 kbps (1.28Mcps TDD) transmission rate and assign a new uplink 384kbps (FDD, 3.84Mcps TDD and 7.68 Mcps) or 64 kbps (1.28Mcps TDD) transmission rate. After the UE receives this message, it reconfigures the transport and physical channel and transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message. (Step 0) |
| 1 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Limit the uplink transmission rate to 64 kbps (FDD, 3.84Mcps TDD and 7.68 Mcps) or 32 kbps (1.28Mcps TDD) |
| 2 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 3 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Limit the uplink transmission rate to 32 kbps (FDD, 3.84Mcps TDD and 7.68 Mcps) or 16 kbps (1.28Mcps TDD) |
| 4 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 5 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Remove the limitation on the uplink rate and move to 64kbps (FDD, 3.84Mcps TDD and 7.68 Mcps) or 32 kbps (1.28Mcps TDD) |
| 6 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 7 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Remove the limitation on the uplink rate and move to 384kbps (FDD, 3.84Mcps TDD and 7.68 Mcps) or 64 kbps (1.28Mcps TDD) |
| 8 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 9 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0) (FDD)

Use the same message as specified for "Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, with the following exceptions; |
| - PDCP info | Not present |
| - Transmission RLC discard | |
| - MAX_DAT | 10 |
| - Transmission window size | 256 |
| - Timer_RST | 1000 |
| - Max_RST | 12 |
| - Timer_poll_prohibit | 50 |
| - Timer_poll | 400 |
| - Poll_Windows | 80 |
| - Receiving window size | 2047 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 50 |
| UL Transport channel Information for all transport channels | |
| - CHOICE Gain Factors | Computed Gain Factors (The last TFC is set to Signalled Gain Factors) |
| - Gain factorβc | 10 (below 64 kbps)<br>8 (higher than 64 kbps) |
| - Gain factorβd | 15<br>(Not Present if the CHOICE Gain Factors is set to Computed Gain Factors) |
| Added or Reconfigured UL TrCH information | |
| - Transmission Time Interval | 10ms (for DCH 1) |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Maximum allowed UL TX power | 24dBm |
| CHOICE channel requirement | |
| - $\Delta_{ACK}$ | 6 |
| - $\Delta_{NACK}$ | 6 |
| Downlink HS-PDSCH Information | |
| - Measurement Feedback Info | |
| - POhsdsch | 9dB |
| - CQI Feedback cycle, k | 10ms |
| - $\Delta_{CQI}$ | 3 |

RADIO BEARER SETUP (Step 0) (1.28McpsTDD, 3.84Mcps TDD and 7.68 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108.

TRANSPORT CHANNEL RECONFIGURATION (Steps 1 and 5) (FDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | <br>Include only the CTFC’s defined in the RADIO BEARER SETUP message used in the initial procedure that restrict the uplink transmission rate to 64 kbps. |
| Added or Reconfigured UL TrCH information<br>DL Transport channel information common for all transport channel<br>Added or Reconfigured DL TrCH information | Not Present<br>Not Present<br><br>Not Present |
| CHOICE channel requirement<br>- Uplink DPCH power control info<br><br>- CHOICE mode<br>- Scrambling code type<br>- Scrambling code number<br>- Number of DPDCH<br>- Spreading factor<br><br><br><br><br>- TFCI existence<br><br><br><br><br>- Number of FBI bit<br>- Puncturing Limit | Uplink DPCH info<br>Same contents as a RADIO BEARER SETUP message used in the initial procedure<br>FDD<br>Long<br>1<br>Not Present<br>Set according to the radio bearer configuration for “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set.<br>Set according to the radio bearer configuration for “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set.<br>Not Present<br>Set according to the radio bearer configuration for “Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| Downlink information for each radio link list | Not present |

TRANSPORT CHANNEL RECONFIGURATION (Steps 1 and 5) (1.28Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | <br>Include only the CTFC’s defined in the RADIO BEARER SETUP message used in the initial procedure that restrict the uplink transmission rate to 32 kbps. |
| Added or Reconfigured UL TrCH information<br>DL Transport channel information common for all transport channel<br>Added or Reconfigured DL TrCH information | Not Present<br>Not Present<br><br>Not Present |

TRANSPORT CHANNEL RECONFIGURATION (Steps 1 and 5) (3.84Mcps TDD and 7.68 Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | <br>Include only the CTFC’s defined in the RADIO BEARER SETUP message used in the initial procedure that restrict the uplink transmission rate to 64 kbps. |
| Added or Reconfigured UL TrCH information<br>DL Transport channel information common for all transport channel<br>Added or Reconfigured DL TrCH information | Not Present<br>Not Present<br>Not Present |

TRANSPORT CHANNEL RECONFIGURATION (Step 3) (FDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | <br>Set according to the radio bearer configuration for “Interactive or background / UL:32 DL: 8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| Added or Reconfigured UL TrCH information<br>DL Transport channel information common for all transport channel<br>Added or Reconfigured DL TrCH information | Not Present<br>Not Present<br>Not Present |
| CHOICE channel requirement<br>- Uplink DPCH power control info<br><br>- CHOICE mode<br>- Scrambling code type<br>- Scrambling code number<br>- Number of DPDCH<br>- Spreading factor<br><br><br><br>- TFCI existence<br><br><br><br>- Number of FBI bit<br>- Puncturing Limit | Uplink DPCH info<br>Same contents as a RADIO BEARER SETUP message used in the initial procedure<br>FDD<br>Long<br>1<br>Not Present<br>Set according to the radio bearer configuration for “Interactive or background / UL:32 DL: 8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set.<br>Set according to the radio bearer configuration for “Interactive or background / UL:32 DL: 8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set.<br>Not Present<br>Set according to the radio bearer configuration for “Interactive or background / UL:32 DL: 8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| Downlink information for each radio link list | Not present |

TRANSPORT CHANNEL RECONFIGURATION (Step 3) (1.28Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | <br>Set according to the radio bearer configuration for “Interactive or background / UL:16 DL: 8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| Added or Reconfigured UL TrCH information<br>DL Transport channel information common for all transport channel<br>Added or Reconfigured DL TrCH information | Not Present<br>Not Present<br><br>Not Present |

TRANSPORT CHANNEL RECONFIGURATION (Step 3) (3.84Mcps TDD and 7.68 Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | <br>“Interactive or background / UL:32 DL: 8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| Added or Reconfigured UL TrCH information<br>DL Transport channel information common for all transport channel<br>Added or Reconfigured DL TrCH information | Not Present<br>Not Present<br><br>Not Present |

TRANSPORT CHANNEL RECONFIGURATION (Step 7) (FDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | <br>Same contents as the RADIO BEARER SETUP message used in the initial procedure. |
| Added or Reconfigured UL TrCH information<br>DL Transport channel information common for all transport channel | Not Present<br>Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| CHOICE channel requirement<br>- Uplink DPCH power control info<br><br>- CHOICE mode<br>- Scrambling code type<br>- Scrambling code number<br>- Number of DPDCH<br>- Spreading factor<br><br>- TFCI existence<br><br>- Number of FBI bit<br>- Puncturing Limit | Uplink DPCH info<br>Same contents as a RADIO BEARER SETUP message used in initial procedure<br>FDD<br>Long<br>1<br>Not Present<br>Same contents as the RADIO BEARER SETUP message used in the initial procedure.<br>Same contents as the RADIO BEARER SETUP message used in the initial procedure.<br>Not Present<br>Same contents as the RADIO BEARER SETUP message used in the initial procedure. |
| Downlink information for each radio link list | Not present |

TRANSPORT CHANNEL RECONFIGURATION (Step 7) (1.28Mcps TDD, 3.84Mcps and 7.68Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | Same contents as the RADIO BEARER SETUP message used in the initial procedure. |
| Added or Reconfigured UL TrCH information | Not Present |
| DL Transport channel information common for all transport channel | Not Present |

#### 8.2.4.36.5 Test requirements

After step 1, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

After step 3, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

After step 5, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

After step 7, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.4.36a Transport Channel Reconfiguration from CELL_DCH to CELL_DCH: Success (with active HS-DSCH reception, not changing the value of TTI during UL rate modification) (TDD)

#### 8.2.4.36a.1 Definition and applicability

All UEs which support TDD and HS-PDSCH.

#### 8.2.4.36a.2 Conformance requirement

In case the procedure was triggered by reception of a TRANSPORT CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

…

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

…

Reference

3GPP TS 25.331 clauses 8.2.2, 8.6.3.1, 8.2.2.3, 8.5.25

### 8.2.4.36a.3 Test purpose

To confirm that the UE reconfigures the transport and physical channel while being mapped to HS-DSCH according to the received TRANSPORT CHANNEL RECONFIGURATION message.

To confirm that the UE keeps the same value of TTI (transmission time interval) during the procedure.

### 8.2.4.36a.4 Method of test

Initial Condition

System Simulator: 1 cell is active, the cell configure 3 carriers， one is the primary carrier， the other two are secondary carrier.

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports TDD

- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state and only signalling radio bearers have been established. SS initiates P25 to make the UE move to state 6-17 as specified in TS 34.108 clause 7.4. The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established using a 384 kbps (3.84Mcps TDD and 7.68 Mcps TDD) or 64 kbps (1.28Mcps TDD) uplink DCH.

The SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to the UE to limit the uplink transmission rate. This message includes a new UL DCH TFCS for uplink 64kbps (3.84Mcps TDD and 7.68 Mcps) or 32 kbps (1.28Mcps TDD) transmission rate, but the TTI remains unchanged. After the UE receives this message, it reconfigures the transport and physical channel and transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC. Upon successfully received the complete message from the UE, SS transmits another TRANSPORT CHANNEL RECONFIGURATION message to limit the uplink transmission rate to 32kbps (3.84Mcps TDD and 7.68 Mcps TDD) or 16 kbps (1.28Mcps TDD). After the UE receives this message, it reconfigures the transport and physical channel and transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

Next the SS transmits a new TRANSPORT CHANNEL RECONFIGURATION message to the UE which includes an old UL DCH TFCS for uplink 64kbps (3.84Mcps TDD and 7.68 Mcps TDD) or 32 kbps (1.28Mcps TDD) transmission rate in order to remove the limitation for uplink 32kbps (3.84Mcps TDD and 7.68 Mcps TDD) or 16 kbps (1.28Mcps TDD) transmission rate and keeps the transmission time interval. Upon received this message, the UE reconfigures the transport and physical channel and transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC. The SS then transmits one more TRANSPORT CHANNEL RECONFIGURATION message to remove the limitation for uplink 64kbps (3.84Mcps TDD and 7.68 Mcps TDD) or 32 kbps (1.28Mcps TDD) transmission rate and assign a new uplink 384kbps (3.84Mcps TDD and 7.68 Mcps) or 64 kbps (1.28Mcps TDD) transmission rate. After the UE receives this message, it reconfigures the transport and physical channel and transmits a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message. (Step 0) |
| 1 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Limit the uplink transmission rate to 64 kbps (3.84Mcps TDD and 7.68 Mcps) or 32 kbps (1.28Mcps TDD) |
| 2 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 3 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Limit the uplink transmission rate to 32 kbps (3.84Mcps TDD and 7.68 Mcps) or 16 kbps (1.28Mcps TDD) |
| 4 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 5 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Remove the limitation on the uplink rate and move to 64kbps (3.84Mcps TDD and 7.68 Mcps) or 32 kbps (1.28Mcps TDD) |
| 6 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 7 | ← | | TRANSPORT CHANNEL RECONFIGURATION | Remove the limitation on the uplink rate and move to 384kbps (3.84Mcps TDD and 7.68 Mcps) or 64 kbps (1.28Mcps TDD) |
| 8 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 9 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0) (1.28McpsTDD, 3.84Mcps TDD and 7.68 Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS” in 34.108.

| Information Element | Value/remark |
|---|---|
| RadioBearerSetup-r5-TDD128-add-ext-IEs | |
| -frequencyInfo | secondary carrier frequency |
| -UpPCHpositionInfo | 22 |

TRANSPORT CHANNEL RECONFIGURATION (Steps 1 and 5) (1.28Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | Include only the CTFC’s defined in the RADIO BEARER SETUP message used in the initial procedure that restrict the uplink transmission rate to 32 kbps. |
| Added or Reconfigured UL TrCH information | Not Present |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |
| TransportChannelReconfiguration -r5-TDD128-add-ext-IEs<br>-frequencyInfo | secondary carrier frequency |

TRANSPORT CHANNEL RECONFIGURATION (Steps 1 and 5) (3.84Mcps TDD and 7.68 Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | Include only the CTFC’s defined in the RADIO BEARER SETUP message used in the initial procedure that restrict the uplink transmission rate to 64 kbps. |
| Added or Reconfigured UL TrCH information | Not Present |
| DL Transport channel information common for all transport channel | Not Present |
| Added or Reconfigured DL TrCH information | Not Present |

TRANSPORT CHANNEL RECONFIGURATION (Step 3) (1.28Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | Set according to the radio bearer configuration for “Interactive or background / UL:16 DL: 8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| Added or Reconfigured UL TrCH information<br>DL Transport channel information common for all transport channel<br>Uplink DPCH info | Not Present<br>Not Present |
| -Uplink Timing Advance Control | |
| - Frequency info | secondary carrier frequency |
| -UpPCH position info | 22 |

TRANSPORT CHANNEL RECONFIGURATION (Step 3) (3.84Mcps TDD and 7.68 Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | “Interactive or background / UL:32 DL: 8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH” in 34.108 clause 6.10 Parameter Set. |
| Added or Reconfigured UL TrCH information<br>DL Transport channel information common for all transport channel<br>Added or Reconfigured DL TrCH information | Not Present<br>Not Present<br>Not Present |

TRANSPORT CHANNEL RECONFIGURATION (Step 7) (1.28Mcps TDD, 3.84Mcps and 7.68Mcps TDD)

Use the same message as specified for “Packet to CELL_DCH from CELL_DCH in PS” in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| UL Transport channel information for all transport channels<br>- UL DCH TFCS | Same contents as the RADIO BEARER SETUP message used in the initial procedure. |
| Added or Reconfigured UL TrCH information<br>Uplink DPCH info | Not Present |
| -Uplink Timing Advance Control | |
| - Frequency info | secondary carrier frequency |
| -UpPCH position info | 22 |

### 8.2.4.36a.5 Test requirements

After step 1, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

After step 3, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

After step 5, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

After step 7, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

## 8.2.5 Transport format combination control

### 8.2.5.1 Void

NOTE Test case “Transport format combination control in CELL_DCH: restriction” have been removed as being implicitely tested by radio bearer test cases in clause 14.

### 8.2.5.2 Void

NOTE Test case “Transport format combination control in CELL_DCH: release a restriction” have been removed as being implicitely tested by radio bearer test cases in clause 14.

### 8.2.5.3 Void

### 8.2.5.4 Transport format combination control in CELL_DCH: Failure (Invalid configuration)

#### 8.2.5.4.1 Definition

#### 8.2.5.4.2 Conformance requirement

If the variable INVALID_CONFIGURATION is set to TRUE due to the received TRANSPORT FORMAT COMBINATION CONTROL message the UE shall:

1> if the TRANSPORT FORMAT COMBINATION CONTROL message was received on AM RLC:

2> keep the TFC subset existing before the TRANSPORT FORMAT COMBINATION CONTROL message was received;

2> transmit a TRANSPORT FORMAT COMBINATION CONTROL FAILURE message on the DCCH using AM RLC;

2> set the IE "RRC transaction identifier" in the TRANSPORT FORMAT COMBINATION CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the TRANSPORT FORMAT COMBINATION CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "invalid configuration";

2> when the TRANSPORT FORMAT COMBINATION CONTROL FAILURE message has been submitted to lower layers for transmission the procedure ends.

1> if the TRANSPORT FORMAT COMBINATION CONTROL message was received on UM RLC:

2> ignore the TRANSPORT FORMAT COMBINATION CONTROL message.

Reference

3GPP TS 25.331 clause 8.2.5.4, 8.2.5.5

#### 8.2.5.4.3 Test purpose

To confirm that the UE transmits a TRANSPORT FORMAT COMBINATION CONTROL FAILURE message on the DCCH using AM RLC if it receives a TRANSPORT FORMAT COMBINATION CONTROL message including an invalid configuration.

#### 8.2.5.4.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: DCCH+DTCH_DCH (state 6-9 or state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. SS transmits a TRANSPORT FORMAT COMBINATION CONTROL message including some IEs set to get an invalid configuration. The UE keeps its current configuration and transmits a TRANSPORT FORMAT COMBINATION CONTROL FAILURE message on the DCCH using AM RLC, setting the value "invalid configuration" to IE "failure cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | | | | UE is in CELL_DCH state with a DCH for a signalling radio bearer and a DCH for a radio access bearer. |
| 2 | | | Void | |
| 3 | | | Void | |
| 3a | | | Void | |
| 4 | ← | | TRANSPORT FORMAT COMBINATION CONTROL | This message includes an invalid configuration. |
| 5 | → | | TRANSPORT FORMAT COMBINATION CONTROL FAILURE | The UE shall not change its configuration |
| 6 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8000 |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 0band 6)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions:

The order in which the RBs are reported is not checked.

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

TRANSPORT FORMAT COMBINATION CONTROL (Step 4)

Use the same message sub-type titled "TRANSPORT FORMAT COMBINATION CONTROL" in [9] TS 34.108 clause 9, with following exceptions:

| Information Element | Value/remark |
|---|---|
| TrCH information elements<br>-DPCH/PUSCH TFCS uplink in uplink<br>- Restricted TrCH information<br>- Uplink transport channel type<br>- Restricted UL TrCH identity<br>- Allowed TFI | <br><br><br>DCH<br>15 ( for RACH transport channel identity)<br>0 |

TRANSPORT FORMAT COMBINATION CONTROL FAILURE (Step 5)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Invalid configuration |

#### 8.2.5.4.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 4 the UE shall transmit a TRANSPORT FORMAT COMBINATION CONTROL FAILURE message on the DCCH using AM RLC, setting IE "failure cause" to "invalid configuration".

After step 5, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

## 8.2.6 Physical channel reconfiguration

### 8.2.6.1 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Success

#### 8.2.6.1.1 Definition

#### 8.2.6.1.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATIONmessage; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.6.1.3 Test purpose

To confirm that the UE reconfigures the physical channel parameters according to a PHYSICAL CHANNEL RECONFIGURATION message received from the SS. After the reconfiguration, the UE shall be able to communicate with the SS on the new physical channel.

### 8.2.6.1.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending to the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE, which includes a new several physical layer parameters. The UE shall reconfigure the physical channel at the activation time specified in this message and transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH AM RLC after its transition. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | See message contents |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (FDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Maximum allowed UL Tx power | 31dBm |
| Uplink DPCH info | |
| - Scrambling code number | 1 |
| Downlink information common for all radio links | |
| Downlink information for each radio link | |
| - Code number | 1 |

PHYSICAL CHANNEL RECONFIGURATION (3.84 Mcps TDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Uplink DPCH timeslots and codes | |
| - First timeslot code list | Assigned by SS |
| Downlink information common for all radio links | Absent |

PHYSICAL CHANNEL RECONFIGURATION (1.28 Mcps TDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Physical Channel Reconfiguration r4 | |
| - UL Channel Requirement | |
| - Uplink DPCH info | |
| - CHOICE mode | TDD |
| - Uplink DPCH timeslots and codes | |
| - First timeslot Code List | |
| - Channelisation Code | cc8_2 |
| -DL InformationPerRL List | |
| - DL DPCH InfoPerRL | |
| - DL TS ChannelisationCodesShort | '0011000000000000'B |

PHYSICAL CHANNEL RECONFIGURATION (7.68 Mcps TDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Uplink DPCH timeslots and codes VHCR<br>- First timeslot code list<br>- Channelisation code | <br><br>(16/1) |
| Downlink information per radio link list<br>- Downlink information for each radio link<br>- Downlink DPCH info for each RL<br>- Downlink DPCH timeslots and codes VHCR<br>- First timeslot channelisation codes channelisation codes VHCR | |
| - First Channelisation code | (32/1) |
| - Last Channelisation code | (32/2) |

8.2.6.1.5 Test requirement

After step 1 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

## 8.2.6.1a Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Success (1.28 Mcps TDD Only)

8.2.6.1a.1 Definition

8.2.6.1a.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATIONmessage; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.6.1a.3 Test purpose

1.To confirm that the UE reconfigures the physical channel parameters according to a PHYSICAL CHANNEL RECONFIGURATION message received from the SS. After the reconfiguration, the UE shall be able to communicate with the SS on the new physical channel.

2. To confirm that the UE can indicate the UpPCH shifting position according to a PHYSICAL CHANNEL RECONFIGURATION message received from the SS and complete the process.

### 8.2.6.1a.4 Method of test

Initial Condition

System Simulator: 2 cells. Cell 1at UARFCN 1 and Cell4 at UARFCN 4.

UpPCH shifting position is 22 at Cell4.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending to the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.6.1a**

| Parameter | Unit | Cell 1 | | Cell4 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| P-CCPCH RSCP (TDD) | dBm | -55 | -72 | Off | -55 |

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE, which includes a new several physical layer parameters. The UE shall reconfigure the physical channel at the activation time specified in this message and transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH AM RLC after its transition. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE, which includes a new several physical layer parameters. The UE shall reconfigure the physical channel and transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH AM RLC.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | See message contents |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The message indicate that UE is in CELL_DCH state at cell 4 and specify the carrier and UpPCH shifting position. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 3(TDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| -v4b0NonCriticalExtensions | | |
| -sysInfoType3-v4b0ext | | |
| - mapping-LCR | 22 | |

PHYSICAL CHANNEL RECONFIGURATION (1.28 Mcps TDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Physical Channel Reconfiguration r4 | |
| - UL Channel Requirement | |
| - Uplink DPCH info | |
| - CHOICE mode | TDD |
| - Uplink DPCH timeslots and codes | |
| - First timeslot Code List | |
| - Channelisation Code | cc8_2 |
| -DL InformationPerRL List | |
| - DL DPCH InfoPerRL | |
| - DL TS ChannelisationCodesShort | '0011000000000000'B |
| Uplink DPCH info | |
| -Uplink Timing Advance Control | |
| - Frequency info | Secondary carrier |
| -UpPCH position info | 22 |

8.2.6.1a.5 Test requirement

After step 1 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 3 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and t UE is in CELL_DCH state.

## 8.2.6.2 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Failure (Unsupported configuration)

### 8.2.6.2.1 Definition

### 8.2.6.2.2 Conformance requirement

If the UTRAN instructs the UE to use a configuration, which it does not support and/or if the received message causes the variable UNSUPPORTED_CONFIGURATION to be set to TRUE, the UE shall:

1> transmit a failure response as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "configuration unsupported".

1> set the variable UNSUPPORTED_CONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The UE shall:

1> in case of reception of a PHYSICAL CHANNEL RECONFIGURATION message:

…

2> transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

…

The UE should set the variable UNSUPPORTED_CONFIGURATION to TRUE if the received message is not according to the UE capabilities.

Reference

3GPP TS 25.331 clause 8.2.2.6, 8.2.2.9, 8.5.20.

### 8.2.6.2.3 Test purpose

To confirm that the UE keeps its configuration and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC if the received PHYSICAL CHANNEL RECONFIGURATION message includes unsupported configuration parameters for the UE.

### 8.2.6.2.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS.The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE which includes configuration parameters unsupported by the UE. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC . UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Includes configuration unsupported by the UE |
| 2 | → | | PHYISICAL CHANNEL RECONFIGURATION FAILURE | The UE shall not reconfigure and continue to communicate using the old configuration. |
| 3 | → | | MEASUREMENT REPORT | |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8000 |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 0b and 3)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

PHYSICAL CHANNEL RECONFIGURATION (FDD) (Step 1)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 Clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN uplink (Nu) | 0 |
| - UARFCN downlink (Nd) | 950 |

PHYSICAL CHANNEL RECONFIGURATION (TDD) (Step 1)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_DCH in PS" found in [9] TS 34.108 Clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN (Nt) | 0 |

PHYSICAL CHANNEL RECONFIGURATION FAILURE (Step 2)

The contents of PHYSICAL CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the PHYSICAL CHANNEL RECONFIGURATION FAILURE message as found in [9] TS 34.108 Clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Not checked |

#### 8.2.6.2.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 1 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC .

After step 2, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

### 8.2.6.3 Void

### 8.2.6.4 Void

### 8.2.6.5 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Failure (Incompatible simultaneous reconfiguration)

#### 8.2.6.5.1 Definition

#### 8.2.6.5.2 Conformance requirement

If the received message is any of the messages:

- PHYSICAL CHANNEL RECONFIGURATION; or

…

the UE shall:

2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

…

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

…

3> else:

4> reject the transaction; and

4> if the IE "Message Type" of the received message is not present in the table "Rejected transactions" in the variable TRANSACTIONS:

5> store the IE "Message type" and the IE "RRC transaction identifier" of the received message in the table "Rejected transactions" in the variable TRANSACTIONS.

…

If the table "Rejected transactions" in the variable TRANSACTIONS is set due to the received message and the variable PROTOCOL_ERROR_REJECT is set to FALSE, the UE shall:

1> not apply the configuration contained in the received reconfiguration message;

1> transmit a failure response message as specified in subclause TS 25.331 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "incompatible simultaneous reconfiguration".

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The UE shall:

1> in case of reception of a PHYSICAL CHANNEL RECONFIGURATION message:

…

2> transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.9, 8.2.2.12, clause 8.6.3.11.

### 8.2.6.5.3 Test purpose

To confirm that if the UE receives a PHYSICAL CHANNEL RECONFIGURATION message during a reconfiguring procedure due to a radio bearer message other than PHYSICAL CHANNEL RECONFIGURATION, it shall keep its configuration as if the PHYSICAL CHANNEL RECONFIGURATION message had not been received and complete the reconfiguration procedure according to the previously received message.

### 8.2.6.5.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. The SS transmits a RADIO BEARER RECONFIGURATION message to the UE. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message before the "activation time" indicated in the RADIO BEARER RECONFIGURATION message expires. When the UE receives the PHYSICAL CHANNEL RECONFIGURATION message, the UE shall keep the configuration as if it had not received the PHYSICAL CHANNEL RECONFIGURATION message and shall transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC with IE "failure cause" set to "incompatible simultaneous reconfiguration". After the SS acknowledges the PHYSICAL CHANNEL RECONFIGURATION FAILURE message, the UE reconfigures the new physical channel parameters upon the activation time and transmits a RADIO BEARER RECONFIGURATION COMPLETE message on DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER RECONFIGURATION | |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Sent before the "activation time" specified in the message in step 1 has elapsed. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION FAILURE | The UE does not change the configuration due to the reception of a PHYSICAL CHANNEL RECONFIGURATION message. |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | This message is on DCCH using AM RLC. |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 1) (FDD)

For RADIO BEARER RECONFIGURATION in step 1, use the message sub-type indicated as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation Time Info | Current CFN-[current CFN mod 8 + 8 ] |
| Uplink DPCH info | |
| - Scrambling code number | 1 |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indicator | Maintain |

RADIO BEARER RECONFIGURATION (Step 1) (TDD)

| Information Element | Value/remark |
|---|---|
| Activation Time | Current CFN-[current CFN mod 8 + 8 ] |
| - Uplink DPCH timeslots and codes | |
| - First timeslot code list | Assigned by SS |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indicator | Maintain |

PHYSICAL CHANNEL RECONFIGURATION (Step 2) (FDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation Time | Not Present |
| Uplink DPCH info | |
| - Scrambling code number | 2 |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indicator | Maintain |

PHYSICAL CHANNEL RECONFIGURATION (Step 2) (TDD)

| Information Element | Value/remark |
|---|---|
| Activation Time | Current CFN-[current CFN mod 8 + 8 ] |
| - Uplink DPCH timeslots and codes | |
| - First timeslot code list | Different as assigned in Step 1 |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indicator | Maintain |

PHYSICAL CHANNEL RECONFIGURATION FAILURE (step 3)

The contents of PHYSICAL CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the PHYSICAL CHANNEL RECONFIGURATION FAILURE message as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Incompatible simultaneous reconfiguration |

### 8.2.6.5.5 Test requirement

After step 2 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC with IE "failure cause" set to "Incompatible simultaneous reconfiguration".

After step 3 the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC on the DCCH.

## 8.2.6.6 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Failure (Invalid message reception and Invalid configuration)

### 8.2.6.6.1 Definition

### 8.2.6.6.2 Conformance requirement

If the received reconfiguration message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to the cause value "protocol error";

2> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.

If the variable INVALID_CONFIGURATION is set to TRUE the UE shall:

1> keep the configuration existing before the reception of the message;

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

3> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry.

2> set the IE "failure cause" to "invalid configuration".

1> set the variable INVALID_CONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The UE shall:

1> in case of reception of a PHYSICAL CHANNEL RECONFIGURATION message:

…

2> transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.13, 8.2.2.11, 8.2.2.9.

#### 8.2.6.6.3 Test purpose

To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC if it receives an invalid PHYSICAL CHANNEL RECONFIGURATION message which does not include any IEs except IE "Message Type".

To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC if it receives a PHYSICAL CHANNEL RECONFIGURATION message including some IEs set to give an invalid configuration.

#### 8.2.6.6.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits an invalid PHYSICAL CHANNEL RECONFIGURATION message to the UE, which contains an unexpected critical message extension. The UE keeps the old configuration and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, with a value "protocol error" in IE "failure cause" and also a value "Message extension not comprehended" in IE "Protocol error cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically. SS transmits a PHYSICAL CHANNEL RECONFIGURATION message including some IEs which are set to give an invalid configuration. The UE keeps its initial configuration and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting the value "invalid configuration" to IE "failure cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | See specific message content. |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION FAILURE | The UE does not change its configuration. |
| 2a | → | | MEASUREMENT REPORT | |
| 3 | ← | | PHYSICAL CHANNEL RECONFIGURATION | This message includes IEs which is set to give an invalid configuration |
| 4 | | | | The UE does not change its configuration |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION FAILURE | The IE "failure cause" shall be set to "invalid configuration |
| 6 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8000 |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 0b, 2a and 6)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the PHYSICAL CHANNEL RECONFIGURATION message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

PHYSICAL CHANNEL RECONFIGURATION FAILURE (Step 2)

The contents of PHYSICAL CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the PHYSICAL CHANNEL RECONFIGURATION FAILURE message as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause<br>- Failure cause<br>- Protocol error information<br>- Protocol error cause | <br>Protocol error<br><br>Message extension not comprehended |

PHYSICAL CHANNEL RECONFIGURATION (Step 3) (FDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Downlink information common for all radio links<br>- Downlink DPCH info common for all RL<br>- Timing Indicator<br>- Default DPCH Offset Value<br>Downlink information for each radio links<br>- DPCH frame offset | <br><br>Initialise<br>1 (512)<br><br>4 (1024) |

PHYSICAL CHANNEL RECONFIGURATION (Step 3) (TDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title as "Speech in CS" or "Non speech in CS" or "Packet to CELL_FACH from CELL_DCH in PS" as found in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Downlink information common for all radio links<br>- Downlink DPCH info common for all RL<br>- Timing Indicator<br>- Default DPCH Offset Value<br>- CHOICE mode<br>- Default DPCH Offset Value (DOFF) | <br><br>Initialise<br><br>TDD<br>Not Present |

PHYSICAL CHANNEL RECONFIGURATION FAILURE (Step 5)

The contents of PHYSICAL CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the PHYSICAL CHANNEL RECONFIGURATION FAILURE message as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Invalid configuration |

### 8.2.6.6.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 1 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting value "protocol error" in IE "failure cause" and also setting value "Message extension not comprehended" in IE "Protocol error cause".

After step 2, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 4 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting IE "failure cause" to "invalid configuration".

After step 5, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

## 8.2.6.7 Physical channel reconfiguration for transition from CELL_DCH to CELL_FACH: Success

### 8.2.6.7.1 Definition

### 8.2.6.7.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> select PRACH according to TS 25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> use the transport format set given in system information;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

1> if the contents of the variable C_RNTI is empty:

2> perform a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

#### 8.2.6.7.3 Test purpose

To confirm that the UE reconfigures a common physical channel according to the PHYSICAL CHANNEL RECONFIGURATION message, which invoke the UE to transit from CELL_DCH to CELL_FACH.

#### 8.2.6.7.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

Test Procedure

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. The UE shall then reconfigure the specified common physical channel according to this message and the system information messages. Following this, it shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC on the DCCH. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "Uplink DPCH Info" and IE "Downlink DPCH Info" are not specified. |
| 2 | | | | UE shall perform the reconfiguration. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION

Use the message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Annex A with the following exception:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |

#### 8.2.6.7.5 Test requirement

After step 2 the UE shall transit from CELL_DCH to CELL_FACH and transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE messageon the common physical channel.

### 8.2.6.8 Physical channel reconfiguration for transition from CELL_DCH to CELL_FACH: Success (Cell re-selection)

#### 8.2.6.8.1 Definition

#### 8.2.6.8.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

2> initiate a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

1> select PRACH according to TS 25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> use the transport format set given in system information;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

1> if the contents of the variable C_RNTI is empty:

2> perform a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.3.1.7.

### 8.2.6.8.3 Test purpose

To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message after the UE completes a cell update procedure.

### 8.2.6.8.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

Test Procedure

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which includes IE "Primary CPICH info"" (for FDD) or "Primary CCPCH info" (for TDD) and no dedicated physical channel information to invoke the UE to transit from CELL_DCH to CELL_FACH. As the UE cannot detect the specified cell, the UE shall initiate the cell update procedure. The UE transmits a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". The SS shall transmit a CELL UPDATE CONFIRM message on downlink DCCH after receiving a CELL UPDATE message. The UE then transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | This message include IE "Primary CPICH info" for FDD and Primary CCPCH info for TDD. |
| 3 | | | Void | |
| 4 | → | | CELL UPDATE | The value "cell reselection" shall be set in IE "Cell update cause". |
| 5 | ← | | CELL UPDATE CONFIRM | See message content. |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 7 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 8 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 3) (FDD)

Use the message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary scrambling code | <br><br>150 |

PHYSICAL CHANNEL RECONFIGURATION (Step 3) (TDD)

Use the message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Downlink information for each radio links<br>- Primary CCPCH info<br>- Cell parameters ID | <br><br>4 |

CELL UPDATE (Step 4)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in Annex A for FDD and Annex A for TDD with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 5)

Use the same message type found in clause Annex A, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 6)

Only the message type is checked.

#### 8.2.6.8.5 Test requirement

After step 3 the UE shall transmit a CELL UPDATE message on the CCCH with IE "Cell update cause" set to "cell reselection".

After step 5 UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC.

After step 6 UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.6.9 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Success

#### 8.2.6.9.1 Definition

#### 8.2.6.9.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.6.9.3 Test purpose

To confirm that the UE reconfigures a new physical channel according to a PHYSICAL CHANNEL RECONFIGURATION message, which invoke UE to transit from CELL_FACH to CELL_DCH.

### 8.2.6.9.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

Test Procedure

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to transit from CELL_DCH to CELL_FACH. The UE shall reconfigure the common physical channel correctly according to this message. To complete this procedure, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to invoke the UE to transit from CELL_FACH to CELL_DCH. The UE shall reconfigure the new dedicated physical channel correctly according to this message. To complete this procedure, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "Uplink DPCH Info" and IE "Downlink DPCH Info" are not specified. |
| 2 | | | | UE shall perform the reconfiguration. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 5 | | | | The UE shall configure the allocated dedicated physical channels. |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Annex A for FDD and Annex A for TDD.

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in Annex A.

8.2.6.9.5 Test requirement

After step 2 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION message on the common physical channel.

After step 5 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION message on the new dedicated physical channel.

## 8.2.6.9a Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Success(1.28 Mcps TDD Only)

### 8.2.6.9a.1 Definition

### 8.2.6.9a.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.6.9a.3 Test purpose

1. To confirm that the UE reconfigures a new physical channel according to a PHYSICAL CHANNEL RECONFIGURATION message, which invoke UE to transit from CELL_FACH to CELL_DCH.

2. To confirm that the UE reconfigures the physical channel in secondary carrier.

### 8.2.6.9a.4 Method of test

Initial Condition

System Simulator: 1 cell, Configure 3 carriers □one is theprimary carrier□the other two are secondary carriers.

Detail in the table as follows:

| Parameter | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|
| UTRA RF Channel Number1 | Ch. 1 | Ch. 1 | Ch.2 |
| UTRA RF Channel Number2 | Ch. 2 | Ch. 2 | Ch. 1 |
| UTRA RF Channel Number3 | Ch.3 | Ch.3 | Ch.3 |

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

Test Procedure

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to transit from CELL_DCH to CELL_FACH. The UE shall reconfigure the common physical channel correctly according to this message. To complete this procedure, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to invoke the UE to transit from CELL_FACH to CELL_DCH. The UE shall reconfigure the new dedicated physical channel correctly according to this message. To complete this procedure, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "Uplink DPCH Info" and IE "Downlink DPCH Info" are not specified. |
| 2 | | | | UE shall perform the reconfiguration. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 5 | | | | The UE shall configure the allocated dedicated physical channels on the secondary carrier. |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state of the secondary carrier □, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Annex A for TDD.

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in Annex A.

with the following exceptions:

| Information Element | Value/remark |
|---|---|
| PhysicalChannelReconfiguration-r4-TDD128-add-ext-IEs | |

| | |
|---|---|
| frequencyInfo | secondary carrier frequency |

#### 8.2.6.9a.5 Test requirement

After step 2 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the common physical channel.

After step 5 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the new dedicated physical channel.

### 8.2.6.10 Void

### 8.2.6.11 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Failure (Physical channel failure and successful reversion to old configuration)

#### 8.2.6.11.1 Definition

#### 8.2.6.11.2 Conformance requirement

When a physical dedicated channel establishment is initiated by the UE, the UE shall start a timer T312 and wait for layer 1 to indicate N312 "in sync" indications. On receiving N312 "in sync" indications, the physical channel is considered established and the timer T312 is stopped and reset.

If the timer T312 expires before the physical channel is established, the UE shall consider this as a "physical channel establishment failure".

…

If the received message caused the UE to be in CELL_DCH state and the UE failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> revert to the configuration prior to the reception of the message (old configuration);

…

1> if the old configuration does not include dedicated physical channels (CELL_FACH state):

2> select a suitable UTRA cell according to TS 25.304;

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

…

The UE shall:

1> in case of reception of a PHYSICAL CHANNEL RECONFIGURATION message:

…

2> transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9, 8.5.4.

### 8.2.6.11.3 Test purpose

To confirm that the UE reverts to the old configuration and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC if the UE fails to reconfigure the new physical channel according to a PHYSICAL CHANNEL RECONFIGURATION message before the T312 expiry.

### 8.2.6.11.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

Test Procedure

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to invoke the UE to transit from CELL_DCH to CELL_FACH. The UE shall reconfigure the common physical channel correctly according to this message. To complete this procedure, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to invoke the UE to transit from CELL_FACH to CELL_DCH. However, the SS keeps its current physical channel configuration and then the UE cannot synchronise with the SS. After T312 expires, the UE attempt to revert to the old configuration. Then the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC which is set "physical channel failure" in IE "failure cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "Uplink DPCH Info" and IE "Downlink DPCH Info" are not specified. |
| 2 | | | | UE shall perform the reconfiguration |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 3a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 3b | → | | MEASUREMENT REPORT | |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 5 | | | | The SS does not reconfigure the physical channel, hence the UE shall detect a failure to reconfigure to the new physical channel. |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION FAILURE | After T312 expires the UE reverts to the old configuration and transmits this message. |
| 7 | → | | MEASUREMENT REPORT | |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in clause 9 of TS 34.108 for FDD or for TDD.

MEASUREMENT CONTROL (Step 3a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark | Version |
|---|---|---|
| Measurement Identity | 1 | |
| Measurement Command | Setup | |
| Measurement reporting mode | | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC | |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting | |
| Additional measurement list | Not Present | |
| CHOICE measurement type | Traffic Volume Measurement | |
| - Traffic volume measurement object list | | |
| - Uplink transport channel type | RACHorCPCH | R99 and Rel-4 only |
| | RACH | Rel-5 |
| - UL Target Transport Channel ID | Not Present | |
| - Traffic volume measurement quantity | | |
| - Measurement quantity | RLC Buffer Payload | |
| - Time Interval to take an average or a variance | Not Present | |
| - Traffic volume reporting quantity | | |
| - RLC Buffer Payload for each RB | True | |
| - Average of RLC Buffer Payload for each RB | False | |
| - Variance of RLC Buffer Payload for each RB | False | |
| - Measurement validity | | |
| - UE state | All states except CELL_DCH | |
| - CHOICE Reporting criteria | Periodical Reporting Criteria | |
| - Amount of reporting | Infinity | |
| - Reporting interval | 8000 | |
| DPCH compressed mode status | Not Present | |

MEASUREMENT REPORT (Step 3b and 7)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 20 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in clause 9 of TS 34.108 for FDD or for TDD.

PHYSICAL CHANNEL RECONFIGURATION FAILURE (Step 6)

The contents of PHYSICAL CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the PHYSICAL CHANNEL RECONFIGURATION FAILURE message as found in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Physical channel failure |

### 8.2.6.11.5 Test requirement

After step 2 the UE shall transit from CELL_DCH to CELL_FACH and transmit a PHYSICAL CHANNEL RECONFIGURATION message on the common physical channel.

After step 3a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

After step 5 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, specifying "physical channel failure" in IE "failure cause".

After step 6, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

## 8.2.6.12 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Failure (Physical channel failure and cell update )

### 8.2.6.12.1 Definition

### 8.2.6.12.2 Conformance requirement

When a physical dedicated channel establishment is initiated by the UE, the UE shall start a timer T312 and wait for layer 1 to indicate N312 "in sync" indications. On receiving N312 "in sync" indications, the physical channel is considered established and the timer T312 is stopped and reset.

If the timer T312 expires before the physical channel is established, the UE shall consider this as a "physical channel establishment failure".

…

If the received message caused the UE to be in CELL_DCH state and the UE failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> revert to the configuration prior to the reception of the message (old configuration);

…

1> if the old configuration does not include dedicated physical channels (CELL_FACH state):

2> select a suitable UTRA cell according to TS 25.304;

2> if the UE selects another cell than the cell the UE camped on upon reception of the reconfiguration message:

3> initiate a cell update procedure according to TS 25.331 subclause 8.3.1, using the cause "Cell reselection";

3> after the cell update procedure has completed successfully:

4> proceed as below.

1> transmit a failure response message as specified in TS 25.304 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

…

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- does not include "CN information elements"; and
- does not include the IE "Ciphering mode info"; and

- does not include the IE "Integrity protection mode info"; and
- does not include the IE "New C-RNTI"; and
- does not include the IE "New U-RNTI":

the UE shall:

1> transmit no response message.

…

The UE shall:

1> in case of reception of a PHYSICAL CHANNEL RECONFIGURATION message:

…

2> transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9,8.3.1.7, 8.5.4

### 8.2.6.12.3 Test purpose

To confirm that the UE initiates a cell update procedure after it fails to reconfigure the new physical channel and selects another cell.

To confirm that UE transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message after UE completes cell update procedure.

### 8.2.6.12.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active.

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108 in cell 1

NOTE: The 'timer poll' value in the SS RLC transmit entity should be set to 800 ms.

Test Procedure

**Table 8.2.6.12**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -75 | -75 | -60 |

Table 8.2.6.12 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 2.

The UE is in CELL_DCH state in cell 1. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to invoke the UE to transit from CELL_DCH to CELL_FACH. The UE shall reconfigure the common physical channel correctly according to this message. To complete this procedure, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. Then SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE, but the SS does not reconfigure L1 accordingly. The SS configures its downlink transmission power settings according to columns "T1"in table 8.2.6.12. As a result, the UE fails to synchronise on the new physical channel before timer T312 expires. UE may send a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting IE "failure cause" to "physical

channel failure" to cell 1. UE reselects to cell 2 and then the UE shall transmit a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "Cell reselection". The SS shall transmit a CELL UPDATE CONFIRM message on downlink DCCH after receiving a CELL UPDATE message. If not already done so, the UE may transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting IE "failure cause" to "physical channel failure" in cell 2. UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC in cell 2 to acknowledge the reception of new C-RNTI value. If not already done so, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting IE "failure cause" to "physical channel failure".

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "Uplink DPCH Info" and IE "Downlink DPCH Info" are not specified. |
| 2 | | | | UE shall perform the reconfiguration |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS does not configure the new dedicated physical channel in accordance with the settings in the message and applies the downlink transmission power settings, according to the values in columns "T1" of table 8.2.6.12. |
| 5 | → | | PHYSICAL CHANNEL RECONGURATION FAILURE (option 1) | UE shall transmit this message in the cell 1. |
| 6 | | | Void | |
| 7 | → | | CELL UPDATE | This message includes the value "cell reselection" set in IE "Cell update cause". |
| 8 | ← | | CELL UPDATE CONFIRM | |
| 8a | → | | PHYSICAL CHANNEL RECONGURATION FAILURE (option 2) | UE shall transmit this message in the cell 2. |
| 9 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 10 | → | | PHYSICAL CHANNEL RECONGURATION FAILURE (option 3) | UE shall transmit this message in the cell 2. |
| 11 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

RRC CONNECTION SETUP (message used in the initial setup)

Use the same message type found in clause 9 of TS 34.108 with the following exception:

| | |
|---|---|
| Signalling RB information to setup | (AM DCCH for RRC) |
| - RB identity | Not Present |
| - CHOICE RLC info type | |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 32 |
| - Timer_RST | 500 |
| - Max_RST | 1 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 800 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Clause 9 of TS 34.108 for FDD or for TDD.

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in Clause 9 of TS 34.108 for FDD or for TDD.

CELL UPDATE (Step 7)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in Clause 9 of TS 34.108 for FDD or for TDD with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Assigned previously in cell 1 |
| - S-RNTI | Assigned previously in cell 1 |
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 8)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in Clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 9)

The contents of UTRAN MOBILITY INFORMATION CONFIRM message is identical as "Contents of UTRAN MOBILITY INFORMATION CONFIRM message" as found in Clause 9 of TS 34.108 for FDD or for TDD.

PHYSICAL CHANNEL RECONGURATION FAILURE (Steps 5, 8a and 10)

The contents of PHYSICAL CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the PHYSICAL CHANNEL RECONFIGURATION FAILURE message as found in Clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | "physical channel failure" |

#### 8.2.6.12.5 Test requirement

After step 2 the UE shall transit from CELL_DCH to CELL_FACH and transmit a PHYSICAL CHANNEL RECONFIGURATION message on the common physical channel.

After step 6 the UE shall transmit a CELL UPDATE message using RLC-TM mode on the uplink CCCH with IE "Cell update cause" set to "cell reselection" in cell 2.

After step 8, UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message.

The UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting the IE "failure cause" to "physical channel failure" after step 4, 8 or 9.

### 8.2.6.13 Void

### 8.2.6.14 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Failure (Invalid message reception and Invalid configuration)

#### 8.2.6.14.1 Definition

#### 8.2.6.14.2 Conformance requirement

If the received reconfiguration message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Rejected transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to the cause value "protocol error";

2> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION.

If the variable INVALID_CONFIGURATION is set to TRUE the UE shall:

1> keep the configuration existing before the reception of the message;

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

3> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry.

2> set the IE "failure cause" to "invalid configuration".

1> set the variable INVALID_CONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The UE shall:

1> in case of reception of a PHYSICAL CHANNEL RECONFIGURATION message:

…

2> transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.13, 8.2.2.11, 8.2.2.9

### 8.2.6.14.3 Test purpose

To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC if the received message does not include any IEs except IE "Message Type".

To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC if it receives a PHYSICAL CHANNEL RECONFIGURATION message including some IEs which are set to give an invalid configuration.

### 8.2.6.14.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

Test Procedure

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to invoke the UE to transit from CELL_DCH to CELL_FACH. The UE shall reconfigure the common physical channel correctly according to this message. To complete this procedure, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits an invalid PHYSICAL CHANNEL RECONFIGURATION message to the UE which contains an unexpected critical message extension. The UE keeps the old configuration and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting "protocol error" in IE "failure cause" and also setting "Message extension not comprehended" in IE "Protocol error cause". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically. SS transmits PHYSICAL CHANNEL RECONFIGURATION message including some IEs which are set to give an invalid configuration. The UE keeps current configuration and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting IE "failure cause" to "invalid configuration". UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "Uplink DPCH Info" and IE "Downlink DPCH Info" are not specified. |
| 2 | | | | UE shall perform the reconfiguration |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE enters CELL_FACH state. |
| 3a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 3b | → | | MEASUREMENT REPORT | |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | See specific message content. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION FAILURE | The UE does not change the configuration. |
| 5a | → | | MEASUREMENT REPORT | |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | This message includes IEs which are set to give an invalid configuration. |
| 7 | | | | The UE does not change the configuration |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION FAILURE | The IE "failure cause" shall be set to "invalid configuration |
| 9 | → | | MEASUREMENT REPORT | |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Annex A for FDD and Annex A for TDD.

MEASUREMENT CONTROL (Step 3a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark | Version |
|---|---|---|
| Measurement Identity | 1 | |
| Measurement Command | Setup | |
| Measurement reporting mode | | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC | |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting | |
| Additional measurement list | Not Present | |
| CHOICE measurement type | Traffic Volume Measurement | |
| - Traffic volume measurement object list | | |
| - Uplink transport channel type | RACHorCPCH | R99 and Rel-4 only |
| | RACH | Rel-5 |
| - UL Target Transport Channel ID | Not Present | |
| - Traffic volume measurement quantity | | |
| - Measurement quantity | RLC Buffer Payload | |
| - Time Interval to take an average or a variance | Not Present | |
| - Traffic volume reporting quantity | | |
| - RLC Buffer Payload for each RB | True | |
| - Average of RLC Buffer Payload for each RB | False | |
| - Variance of RLC Buffer Payload for each RB | False | |
| - Measurement validity | | |
| - UE state | All states | |
| - CHOICE Reporting criteria | Periodical Reporting Criteria | |
| - Amount of reporting | Infinity | |
| - Reporting interval | 8000 | |
| DPCH compressed mode status | Not Present | |

MEASUREMENT REPORT (Step 3b, 5a and 9)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 20 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the PHYSICAL CHANNEL RECONFIGURATION message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

PHYSICAL CHANNEL RECONFIGURATION FAILURE (Step 5)

The contents of PHYSICAL CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the PHYSICAL CHANNEL RECONFIGURATION FAILURE message as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause<br>- Failure cause<br>- Protocol error information<br>- Protocol error cause | <br>Protocol error<br><br>Message extension not comprehended |

PHYSICAL CHANNEL RECONFIGURATION (Step 6) (FDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" as found in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Default DPCH Offset Value<br>- DPCH frame offset | 1 (512)<br>4 (1024) |

PHYSICAL CHANNEL RECONFIGURATION (Step 6) (TDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" as found in Annex A with the following exceptions:

| Information Element | Value/remark |
|---|---|
| -PRACH TFCS | Present |

PHYSICAL CHANNEL RECONFIGURATION FAILURE (Step 7)

The contents of PHYSICAL CHANNEL RECONFIGURATION FAILURE message in this test case is the same as the PHYSICAL CHANNEL RECONFIGURATION FAILURE message as found in Annex A, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure cause | Invalid configuration |

### 8.2.6.14.5 Test requirement

After step 2 the UE shall transit from CELL_DCH to CELL_FACH and transmit a PHYSICAL CHANNEL RECONFIGURATION message on the common physical channel.

After step 3a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

After step 4 the UE shall keep its old configuration, transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC with "protocol error" in IE "failure cause" and also "Message extension not comprehended" in IE "Protocol error cause".

After step 5, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

After step 7 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC, setting IE "failure cause" to "invalid configuration".

After step 8, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

### 8.2.6.15 Void

### 8.2.6.16 Void

### 8.2.6.17 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (code modification): Success (Subsequently received)

#### 8.2.6.17.1 Definition

#### 8.2.6.17.2 Conformance requirement

If the IE "RRC transaction identifier" is included in a received message, the UE shall perform the actions below. The UE shall:

If the received message is any of the messages:

- PHYSICAL CHANNEL RECONFIGURATION; or

  …

the UE shall:

2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

2> if the variable CELL_UPDATE_STARTED is set to TRUE; or

2> if the table "Accepted transactions" in the variable TRANSACTIONS contains an entry with an IE "Message Type" set to ACTIVE SET UPDATE; or

2> if the received message contains a protocol error according to TS 25.331 clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

4> ignore the transaction; and

4> continue with any ongoing processes and procedures as the message was not received;

4> and end the procedure.

3> else:

…

Reference

3GPP TS 25.331 clause 8.6.3.11.

#### 8.2.6.17.3 Test purpose

To confirm that if the UE receives a PHYSICAL CHANNEL RECONFIGURATION message before the UE reconfigures the radio bearer according to the previous PHYSICAL CHANNEL RECONFIGURATION message it ignores the new PHYSICAL CHANNEL RECONFIGURATION message and reconfigures according to the previous PHYSICAL CHANNEL RECONFIGURATION message.

#### 8.2.6.17.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in the CELL_DCH state. When the SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE before the activation time specified in the previous PHYSICAL CHANNEL RECONFIGURATION message elapses, the UE ignores the new PHYSICAL CHANNEL RECONFIGURATION message and reconfigures according to the previous PHYSICAL CHANNEL RECONFIGURATION message received. Finally, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | For FDD mode Scrambling code number is set to "1". For TDD mode a code combination is assigned by SS. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS send this message before the expiry of "activation time" specified in PHYSICAL CHANNEL RECONFIGURATION message of step 1. For FDD, the IE "Scrambling code number" is set to "2". For TDD, the code combination assigned is different to that assigned in stage 1. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE ignores the PHYSICAL CHANNEL RECONFIGURATION message in step 2 and confirms configuration according to the PHYSICAL CHANNEL RECONFIGURATION message in step 1. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (FDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time Info<br>- Uplink DPCH info<br>- Scrambling code number | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256<br><br>1 |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (TDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256<br><br>Assigned in step 1 |

PHYSICAL CHANNEL RECONFIGURATION (Step 2) (FDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH info<br>- Scrambling code number | Not Present<br><br>2 |

PHYSICAL CHANNEL RECONFIGURATION (Step2) (TDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_DCH in PS" found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | Not Present<br><br>A different code combination to that used in step 1. |

#### 8.2.6.17.5 Test requirement

After step 2 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.6.18 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH: Success (Subsequently received)

#### 8.2.6.18.1 Definition

#### 8.2.6.18.2 Conformance requirement

If the IE "RRC transaction identifier" is included in a received message, the UE shall perform the actions below. The UE shall:

If the received message is any of the messages:

- PHYSICAL CHANNEL RECONFIGURATION; or

  …

the UE shall:

2> if the variable ORDERED_RECONFIGURATION is set to TRUE; or

2> if the variable CELL_UPDATE_STARTED is set to TRUE; or

2> if the table "Accepted transactions" in the variable TRANSACTIONS contains an entry with an IE "Message Type" set to ACTIVE SET UPDATE; or

2> if the received message contains a protocol error according to TS 25.331 clause 9 causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE:

3> if the IE "RRC transaction identifier" of the received message is identical to the "RRC transaction identifier" stored for the same "Message Type" as the received message in the table "Accepted transactions" in the variable TRANSACTIONS:

4> ignore the transaction; and

4> continue with any ongoing processes and procedures as the message was not received;

4> and end the procedure.

3> else:

Reference

3GPP TS 25.331 clause 8.6.3.11.

### 8.2.6.18.3 Test purpose

To confirm that if the UE receives a PHYSICAL CHANNEL RECONFIGURATION message before the UE reconfigures the radio bearer according to the previous PHYSICAL CHANNEL RECONFIGURATION message it ignores the new PHYSICAL CHANNEL RECONFIGURATION message and reconfigures according to the previous PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.18.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

Test Procedure

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to invoke the UE to transit from CELL_DCH to CELL_FACH. The UE shall reconfigure the common physical channel correctly according to this message. To complete this procedure, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. When the SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE before the activation time specified in the previous PHYSICAL CHANNEL RECONFIGURATION message, the UE ignores the new PHYSICAL CHANNEL RECONFIGURATION message and reconfigures according to the previous PHYSICAL CHANNEL RECONFIGURATION message received. Finally, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "Uplink DPCH Info" and IE "Downlink DPCH Info" are not specified. |
| 2 | | | | UE shall perform the reconfiguration |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE enters CELL_FACH state. |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Scrambling code number is set to "1" for FDD mode and A code combination is assigned by SS for TDD |
| 5 | ← | | PHYSICAL CHANNEL RECONFIGURATION | For FDD the IE "Scrambling code number" is set to "2". For TDD, the code combination assigned is different from that assigned in stage 4. |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE ignores the PHYSICAL CHANNEL RECONFIGURATION message in step 5 and confirms configuration according to the PHYSICAL CHANNEL RECONFIGURATION message in step 4. |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9.

PHYSICAL CHANNEL RECONFIGURATION (Step 4) (FDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time Info<br>- Uplink DPCH info<br>- Scrambling code number | Not present<br><br>1 |

PHYSICAL CHANNEL RECONFIGURATION (Step 4) (TDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256<br><br>Assigned in step 1 |

PHYSICAL CHANNEL RECONFIGURATION (Step 5) (FDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH info<br>- Scrambling code number | Not Present<br><br>2 |

PHYSICAL CHANNEL RECONFIGURATION (Step 5) (TDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type title "Packet to CELL_DCH from CELL_FACH in PS" found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Activation Time<br>- Uplink DPCH timeslots and codes<br>- First timeslot code list | Not Present<br><br>A different code combination to that used in step 1. |

#### 8.2.6.18.5 Test requirement

After step 2 the UE shall transit from CELL_DCH to CELL_FACH and transmit a PHYSICAL CHANNEL RECONFIGURATION message on the common physical channel.

After step 5 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.6.19 Physical Channel Reconfiguration from CELL_DCH to CELL_PCH: Success

#### 8.2.6.19.1 Definition

#### 8.2.6.19.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS 25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> set the variable INVALID_CONFIGURATION to TRUE.

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the new state is CELL_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (CELL_PCH);

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.6.19.3 Test purpose

To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and enter CELL_PCH state after it received a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to CELL_PCH.

### 8.2.6.19.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

Test Procedure

The UE is in CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to CELL_PCH. The UE transmits a PHYSICAL CHANNEL

RECONFIGURATION COMPLETE message using AM RLC and enters CELL_PCH state. SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE sends this message before it completes state transition. |
| 3 | | | Void | SS sends the L2 ack on the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step. Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 4 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Annex A with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Downlink information for each radio link<br>- Primary CPICH info<br>- Primary scrambling code | <br><br>100 |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Annex A with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Downlink information for each radio links<br>- Primary CCPCH info<br>-Cell parameters ID | <br><br>4 |

8.2.6.19.5 Test requirement

After step 1 the UE shall transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

## 8.2.6.20 Physical Channel Reconfiguration from CELL_DCH to URA_PCH: Success

### 8.2.6.20.1 Definition

### 8.2.6.20.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS 25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> set the variable INVALID_CONFIGURATION to TRUE.

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the new state is URA_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (URA_PCH);

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

8.2.6.20.3 Test purpose

To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and enter URA_PCH state after it received a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to URA_PCH.

8.2.6.20.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

Test Procedure

The UE is in the CELL_DCH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invoke the UE to transit from CELL_DCH to URA_PCH. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enters URA_PCH state. SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE sends this message before it completes state transition. |
| 3 | | | Void | SS sends the L2 ack on the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step. Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 4 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Annex A with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| URA Identity | 0000 0000 0000 0001B |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (TDD)

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator<br>UTRAN DRX cycle length coefficient<br>URA Identity | URA_PCH<br>3<br>0000 0000 0000 0001B |

#### 8.2.6.20.5 Test requirement

After step 1 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

### 8.2.6.21 Physical Channel Reconfiguration from CELL_FACH to URA_PCH: Success

#### 8.2.6.21.1 Definition

#### 8.2.6.21.2 Conformance requirement

1. In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

   - transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC;

2. If the new state is CELL_PCH or URA_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

   - when RLC has confirmed the successful transmission of the response message:

     - for each radio bearer in the variable PDCP_SN_INFO:

       - if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":

         - configure the RLC entity for that radio bearer to "continue";

     - enter the new state (CELL_PCH or URA_PCH, respectively);

Reference

3GPP TS 25.331 clause 8.2.2.4

#### 8.2.6.21.3 Test purpose

1. To verify that the UE, when receiving a PHYSICAL CHANNEL RECONFIGURATION message, responds by transmitting a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

2. To verify that the response message is transmitted using the old configuration before the state transition, and that the UE enters the URA_PCH state.

#### 8.2.6.21.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in the CELL_FACH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message. The UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS using AM RLC and enters into URA_PCH state. SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE sends this message before start state transition. |
| 3 | | | | Reconfiguration of Physical Channel after state transition. |
| 4 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in Annex A with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI<br>RRC State Indicator<br>UTRAN DRX cycle length coefficient | Not Present<br>URA_PCH<br>3 |
| URA identity | URA-ID 1 |

### 8.2.6.21.5 Test requirement

1. After step 1 the UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the UE on uplink DCCH using AM RLC.

## 8.2.6.22 Physical Channel Reconfiguration from CELL_FACH to CELL_PCH: Success

### 8.2.6.22.1 Definition

### 8.2.6.22.2 Conformance requirement

1. In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

   - transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC;

2. If the new state is CELL_PCH or URA_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

   - when RLC has confirmed the successful transmission of the response message:

     - for each radio bearer in the variable PDCP_SN_INFO:

       - if the IE "RB started" in the variable ESTABLISHED_RABS is set to "started":

         - configure the RLC entity for that radio bearer to "continue";

     - enter the new state (CELL_PCH or URA_PCH, respectively);

Reference

3GPP TS 25.331 clause 8.2.2.4

#### 8.2.6.22.3 Test purpose

1. To verify that the UE, when receiving a PHYSICAL CHANNEL RECONFIGURATION message, responds by transmitting a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

2. To verify that the response message is transmitted using the old configuration before the state transition, and that the UE enters the CELL_PCH state.

#### 8.2.6.22.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_FACH(state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in the CELL_FACH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message. The UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS using AM RLC and enters into CELL_PCH state. SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE sends this message before start state transition. |
| 3 | | | | Reconfiguration of Physical Channel after state transition. |
| 4 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in Annex A with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

#### 8.2.6.22.5 Test requirement

1. After step 1 the UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the UE on uplink DCCH using AM RLC.

### 8.2.6.23 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing maintain): Success

#### 8.2.6.23.1 Definition

#### 8.2.6.23.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message:

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

1> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.6.23.3 Test purpose

To confirm that the UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC, on a dedicated physical channel in a different frequency band.

### 8.2.6.23.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 is active and cell 6 is inactive.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending to the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.6.23**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -55 | Off | -55 |

Table 8.2.6.23 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.23. The SS switches its downlink transmission power settings to columns "T1" and

transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE, which includes new frequency information and IE "Timing indicator" set to maintain. The UE shall reconfigure the physical channel parameters according to PHYSICAL CHANNEL RECONFIGURATION message and establish a radio link with the SS using a dedicated physical channel in cell 6. The UE then transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message in cell 6 on the uplink DCCH AM RLC after its transition. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.23. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.23. |
| 3 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Including new frequency information. IE "Timing indicator" is set to maintain. |
| 4 | | | | The UE remains in CELL_DCH state after connecting to the SS on a dedicated physical channel in cell 6. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE transmits this message in cell 6. |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 3)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation Time | Current CFN-[current CFN mod 8 + 8 ] |
| Uplink DPCH info | |
| - Scrambling code number | 1 |
| Frequency info | |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indicator | Maintain |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | 350 |

### 8.2.6.23.5 Test requirement

After step 4 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC in cell 6.

## 8.2.6.24 Void

## 8.2.6.25 Physical channel reconfiguration for transition from CELL_DCH to CELL_FACH (Frequency modification): Success

### 8.2.6.25.1 Definition

### 8.2.6.25.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_FACH state, the UE shall, after the state transition:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> if the received reconfiguration message included the IE "Primary CPICH info" (, and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info":

2> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "Uplink data transmission";

4> proceed as below.

1> select PRACH according to TS25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> use the transport format set given in system information;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

1> if the contents of the variable C_RNTI is empty:

2> perform a cell update procedure according to TS 25.331 subclause 8.3.1 using the cause "Cell reselection";

2> when the cell update procedure completed successfully:

3> if the UE is in CELL_PCH or URA_PCH state:

4> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "Uplink data transmission";

4> proceed as below.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC, using the new configuration after the state transition.

1> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

8.2.6.25.3 Test purpose

1. To confirm that the UE transits from CELL_DCH to CELL_FACH according to the PHYSICAL CHANNEL RECONFIGURATION message.

2. To confirm that the UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC on a common physical channel in a different frequency..

8.2.6.25.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

**Table 8.2.6.25**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -85 | Off | -55 |

Table 8.2.6.25 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in idle mode of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.25. The SS and UE execute procedure P5. Next The SS and the UE execute procedure P9 and then execute procedure P13.The SS switches its downlink transmission power settings to columns "T1" and transmits a PHYSICAL CHANNEL RECONFIGURATION message with no IE "Frequency info" and IE "Primary CPICH info". The UE selects cell 6 and and initiates CELL UPDATE procedure with IE "Cell update cause" set to "cell reselection". Upon completion of the cell update procedure, UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC on the DCCH in cell 6. The SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1a | ←→ | | SS executes procedure P5 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 1b | ←→ | | SS executes procedure) P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 1c | ←→ | | SS executes procedure P13 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.25. |
| 3 | ← | | Void | |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | No including IE "Frequency info" and IE "Primary CPICH info" |
| 5 | → | | CELL UPDATE | The IE "Cell update cause" is set to "cell reselection". |
| 6 | ← | | CELL UPDATE CONFIRM | Including the IE" New C-RNTI" |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE sends this message on a common physical channel in cell 6. |
| 9 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | Not Present |
| Downlink information for each radio link | Not Present |

CELL UPDATE (Step 5)

The contents of CELL UPDATE message are identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 6)

The contents of CELL UPDATE CONFIRM message are identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9. with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |

UTRAN MOBILITY UPDATE CONFIRM (Step 7)

The contents of UTRAN MOBILITY UPDATE CONFIRM message are identical as "UTRAN MOBILITY UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9.

### 8.2.6.25.5 Test requirement

After step 4 the UE shall transmit a CELL UPDATE message on the CCCH in cell 6.

After step 6 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC in cell 6.

After step 7 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 6.

After step 8 the UE shall be in CELL_FACH state of cell 6.

## 8.2.6.26 Physical Channel Reconfiguration from CELL_DCH to CELL_PCH (Frequency modification): Success

### 8.2.6.26.1 Definition

### 8.2.6.26.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

…

The UE shall then:

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE on the uplink DCCH using AM RLC.

If after state transition the UE enters CELL_PCH state from CELL_DCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

2> if the UE finds a suitable UTRA cell on that frequency:

3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

4> proceed as below.

2> else, if the UE can not find a suitable UTRA cell on that frequency but it finds a suitable UTRA cell on another frequency:

3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

3> proceed as below.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS5.304.

2> if the UE finds a suitable UTRA cell on the current frequency:

3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

4> proceed as below.

2> else, if the UE can not find a suitable UTRA cell on the current frequency but it finds a suitable UTRA cell on another frequency:

3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

3> proceed as below.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> start timer T305 using its initial value if timer T305 is not running and if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in the variable TIMERS_AND_CONSTANTS;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS25.331 subclause 8.6.3.2.

…

If the new state is CELL_PCH or URA_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (CELL_PCH or URA_PCH, respectively);

### Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.6.26.3 Test purpose

1. To confirm that the UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_DCH to CELL_PCH according to the PHYSICAL CHANNEL RECONFIGURATION message.
3. To confirm that the UE releases a dedicated physical channel and selects a common physical channel in a different frequency.

8.2.6.26.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

**Table 8.2.6.26**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -72 | Off | -55 |

Table 8.2.6.26 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in idle mode of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.26. The SS and UE execute procedure P5. Next The SS and the UE execute procedure P9 and then execute procedure P13. The SS switches its downlink transmission power settings to columns "T1" and transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to CELL_PCH. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enters CELL_PCH state. The UE selects cell 6 and initiates CELL UPDATE procedure with IE "Cell update cause" set to "cell reselection". Upon completion of the procedure, the SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1a | ←→ | | SS executes procedure P5 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 1b | ←→ | | SS executes procedure) P9 (clause 7.4.2.4.2) specified in TS 34.108.. | |
| 1c | ←→ | | SS executes procedure P13 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.26. |
| 3 | | | Void | |
| 4 | ← | | PHYSICAL CHANNELRECONFIGURATION | Not including IE" frequency info " and IE "Primary CPICH info" |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE transmit this message in cell 1. |
| 5a | | | Void | SS sends the L2 ack on the PHYSICAL CHANNEL RECONFIGURATION COMPLETE.<br>Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 6 | → | | CELL UPDATE | The IE "Cell update cause" is set to "cell reselection". |
| 7 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_PCH". |

| | | | |
|---|---|---|---|
| 8 | | | The SS waits for 5 s. |
| 9 | ←→ | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info | |
| - UARFCN uplink (Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink (Nd) | Same downlink UARFCN as used for cell 6 |

CELL UPDATE (Step 6)

The contents of CELL UPDATE message are identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 7)

The contents of CELL UPDATE CONFIRM message are identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9. with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indic | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

#### 8.2.6.26.5 Test requirement

After step 4 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 1.

After step 5 the UE shall transmit a CELL UPDATE message on the CCCH with IE "Cell update cause" set to "cell reselection" in cell 6.

After step 8 the UE shall be in CELL_PCH state in cell 6.

### 8.2.6.27 Physical channel reconfiguration from CELL_FACH to CELL_PCH: Success

#### 8.2.6.27.1 Definition

#### 8.2.6.27.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE on the uplink DCCH using AM RLC, using the old configuration before the state transition.

If after state transition the UE enters CELL_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS5.331 subclause 8.6.3.2.

1> if the UE enters CELL_PCH state from CELL_FACH state, and the received reconfiguration message included the IE "Primary CPICH info", and the UE selected another cell than indicated by this IE:

2> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "cell reselection";

2> when the cell update procedure is successfully completed:

3> the procedure ends.

3GPP TS 25.331 clause 8.2.2,8.3, 8.5 and 8.6.

### 8.2.6.27.3 Test purpose

1. To confirm that the UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_FACH to CELL_PCH according to the PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.27.4 Method of test

#### Initial Condition

System Simulator: 1 cell– Cell 1 is active.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state of cell 1. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enters CELL_PCH state. The SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_FACH state of cell 1. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | | | | The SS waits for 5 s. |
| 5 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

8.2.6.27.5 Test requirement

After step 2 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on uplink DCCH using AM RLC.

After step 4 the UE shall be in CELL_PCH state in cell 6.

## 8.2.6.28 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Downlink channelisation code modification): Success

8.2.6.28.1 Definition

8.2.6.28.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6..

### 8.2.6.28.3 Test purpose

1. To confirm that the UE change assigned downlink channelisation code by SS according to a PHYSICAL CHANNEL RECONFIGURATION message.

2. To confirm that the UE response PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC

### 8.2.6.28.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending to the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state of cell 1. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE, which includes IE " DL channelisation code " set to New DL channelisation code. The UE shall change its downlink channelisation code for a dedicated physical channel, and then transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH AM RLC. The SS transmits UE CAPABILITY ENQUIRY message to confirm whether the UE correctly reconfigure the DL DPCH The UE shall respond with UE CAPABILITY INFORMATION message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_DCH state of cell 1. . |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Including IE " DL channelisation code " set to New DL channelisation code |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | UE CAPABILITY ENQUIRY | The SS transmits this message to confirm whether the UE can correctly reconfigure the DL DPCH. |
| 5 | → | | UE CAPABILITY INFORMATION | |
| 6 | ← | | UE CAPABILITY INFORMATION CONFIRM | |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Downlink information for each radio link list<br>- Downlink information for each radio link<br>- Downlink DPCH info for each RL<br>- DL channelisation code<br>- Spreading factor | Same value as a RADIO BEARER SETUP message used in initial procedure. |
| - Code number | Different value as a RADIO BEARER SETUP message used in initial procedure |

### 8.2.6.28.5 Test requirement

After step 2 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 4 the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH using AM RLC.

## 8.2.6.29 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Compressed mode initiation): Success

### 8.2.6.29.1 Definition

### 8.2.6.29.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> set the variable ORDERED_RECONFIGURATION to TRUE;

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

…

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4.

### 8.2.6.29.3 Test purpose

1. To confirm that the UE activates compressed mode according to a PHYSICAL CHANNEL RECONFIGURATION message.
2. To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.
3. To confirm that the UE deactivates compressed mode according to a PHYSICAL CHANNEL RECONFIGURATION message.
4. To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

### 8.2.6.29.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending to the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.6.29**

| Parameter | Unit | Cell 1 | | | | Cell 6 | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | High Range Test Frequency | | | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | -60 | -60 | Off | -60 | -90 | -60 |

Table 8.2.6.29 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1"or "T1" to "T2" or "T2" to "T3", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.29. The SS transmits MEASUREMENT CONTROL message in order for the UE to perform Inter-frequency measurements and report event 2c. The SS switches its downlink transmission power setting according to columns "T1" in table 8.2.6.29, but the UE shall not transmit any MEASUREMENT REPORT messages. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which includes IE "DPCH compressed mode info" with "TGPS Status Flag" set to "Activate". The UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC. The UE shall transmit MEASUREMENT REPORT message to report event 2c with the measured CPICH RSCP value for cell 6 to the SS. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which includes IE"DPCH compressed mode info" with "TGPS Status Flag" set to "deactivate". The UE shall respond with the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC. After the SS switches its downlink transmission power settings to columns "T2" in table 8.2.6.29 and 10s is passed, the SS switches its downlink transmission power settings to columns "T3" in table 8.2.6.29. The UE shall not send any MEASUREMENT REPORT messages on the uplink DCCH because the UE cannot measure the CPICH RSCP on non used frequency as the compressed mode operation has been deactivated.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.29. |
| 2 | ← | | MEASUREMENT CONTROL | SS commands the UE to perform Inter-frequency measurements and to report event 2c. |
| 3 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.29. |
| 4 | | | | The SS checks that no MEASUREMENT REPORT messages receives for 10 s. |
| 5 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Including IE"DPCH compressed mode info", which include parameter "TGPS Status Flag" set to activate. |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 7 | → | | MEASUREMENT REPORT | The UE shall report event 2c with the measured CPICH RSCP value for cell 6. |
| 8 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Including IE"DPCH compressed mode info", which include parameter "TGPS Status Flag" set to deactivate. |
| 9 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 10 | | | | The SS switches its downlink transmission power settings to columns "T2" in table 8.2.6.29. |
| 11 | | | | After 10 s is passed ,the SS switches its downlink transmission power settings to columns "T3" in table 8.2.6.29. |
| 12 | | | | The SS checks that no MEASUREMENT REPORT messages receives for 10 s.. |

Specific Message Contents

MEASUREMENT CONTROL (Step 2)

Use the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions in the IE(s) concerned:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement object list | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 6 |
| - Frequency info | |
| - UARFCN uplink (Nu) | UARFCN of the uplink frequency for cell 6 |
| - UARFCN downlink (Nd) | UARFCN of the downlink frequency for cell 6 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | 0 chips |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |
| - Primary CPICH TX power | Not Present |
| - Primary CPICH TX power | |
| - TX Diversity Indicator | Not Present |
| - Cell for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - CHOICE Mode | FDD |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - COICE Mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | Not present |
| - Measurement validity | |
| - UE state | CELL_DCH |
| - Inter-frequency set update | On with no reporting |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2c |
| - Threshold used frequency | Not present |
| - W used frequency | Not present |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 10 [ms] |
| - Reporting cell status | |
| - CHOICH reported cell | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 1 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -68dbm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | Not present |

PHYSICAL CHANNEL RECONFIGURATION (Step 5)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing Indication | Maintain | |
| - CFN-target SFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - CHOICE Mode | FDD | |
| -DPC Mode | 0 (Single) | |
| - CHOICE Mode | FDD | |
| - Power offset Pilot-DPDCH | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Fixed or flexible position | Flexible | |
| - TFCI existence | FALSE | |
| - Number of bits for Pilot bits (SF=128, 256) | Not Present | |
| - CHOICE mode | FDD | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | activate | |
| - TGCFN | (Current CFN+(256 – TTI/10msec)) mod256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | Undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | mode 0 | |
| - ITP | mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only, or DL only, depending on UE capability | |
| - Downlink compressed mode method | SF/2 or Not present depending on UE capability | |
| - Uplink compressed mode method | SF/2 or Not present depending on UE capability | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity Mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |

MEASUREMENT REPORT (Step 7)

The contents of MEASUREMENT REPORT message is the same as them found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE Measurement | |
| - Inter frequency measured results list | Check to see if set to "Inter-frequency measured results list" |
| - Inter frequency measurement results | |
| - Frequency info | |
| - CHOICE | FDD |
| - UARFCN uplink (Nu) | Check to see if set to the UARFCN of the uplink frequency for cell 6 |
| - UARFCN downlink (Nd) | Check to see if set to the UARFCN of the downlink frequency for cell 6 |
| - UTRA carrier RSSI | Not checked |
| - Inter frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Not checked |
| - Cell synchronisation information | Not checked |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | Not checked |
| - CPICH Ec/No | Not checked |
| - CPICH RSCP | Check to see if it is present |
| - Pathloss | Not checked |
| Measured Results on RACH | Not checked |
| Additional Measured results | Not checked |
| - Measured Result | |
| Event results | Not checked |

PHYSICAL CHANNEL RECONFIGURATION (Step 8)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | Not present |
| - DPCH compressed mode info | |
| - TGPSI | 1 |
| - TGPS Status Flag | deactivate |
| - TGCFN | Not present |
| - Transmission gap pattern sequence configuration parameters | Not present |

8.2.6.29.5 Test requirement

After step 3 the UE shall not send any MEASUREMENT REPORT messages on the uplink DCCH.

After step 5 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 6 the UE shall transmit a MEASUREMENT REPORT message containing the IE "measured results" reporting cell 6's CPICH RSCP value, also report the triggering of event '2c' included in IE "Event results".

After step 8 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After 11 the UE shall not transmit any MEASUREMENT REPORT messages on the uplink DCCH.

## 8.2.6.30 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Modify active set cell): Success

### 8.2.6.30.1 Definition

### 8.2.6.30.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message:

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

1> if the IE "Downlink information for each radio link" is absent, not change its current DL Physical channel configuration.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

1> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.6.30.3 Test purpose

To confirm that the UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC on a dedicated physical channel of same frequency in another cell.

### 8.2.6.30.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 is active and cell 6 is inactive.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending to the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.6.30**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | Off | -60 |

Table 8.2.6.30 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 2.

The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.30. The SS switches its downlink transmission power settings to columns "T1" and transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE, which includes IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 2 and IE "Timing indicator" set to "initialise".. The UE shall reconfigure the physical channel parameters according to PHYSICAL CHANNEL RECONFIGURATION message and initiate to synchronise with new dedicated physical channel in cell 2. The UE shall then transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message in cell 2 on the uplink DCCH AM RLC after synchronization.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.30. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.30. |
| 3 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Including IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 2 and IE "Timing indicator" which is set to 'initialise'. |
| 4 | | | | The UE remains in CELL_DCH state after connecting to the SS on a dedicated physical channel in cell 2. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE transmits this message in cell 2. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 3)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Speech in CS" or "Non speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Activation Time | Current CFN-[current CFN mod 8 + 8 ] |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indicator | initialise |
| - Default DPCH Offset Value | 0 (0) |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 2 |

#### 8.2.6.30.5 Test requirement

After step 4 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC in cell 2.

### 8.2.6.31 Physical channel reconfiguration transition from CELL_FACH to URA_PCH: Success

#### 8.2.6.31.1 Definition

#### 8.2.6.31.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE on the uplink DCCH using AM RLC, using the old configuration before the state transition.

If after state transition the UE enters URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS5.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> keep the configuration existing before the reception of the message and transmit a failure response message as specified in TS25.331subclause 8.2.2.9

1> if the UE enters URA_PCH state, and after cell selection the criteria for URA update caused by "URA reselection" according to TS25.331 subclause 8.3.1 is fulfilled:

2> initiate a URA update procedure according to TS25.331 subclause 8.3.1 using the cause "URA reselection";

2> when the URA update procedure is successfully completed:

3> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.3, 8.5 and 8.6.

### 8.2.6.31.3 Test purpose

1. To confirm that the UE transmits the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_FACH to URA_PCH according to the PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.31.4 Method of test

Initial Condition

System Simulator: 1 cell– Cell 1 is active.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in CELL_FACH state of cell 1. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message. The UE shall enter URA_PCH state according to this message after it transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. Upon completion of the procedure, the SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_FACH state of cell 1. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE transmits this message on uplink DCCH using AM RLC. |
| 4 | | | | The SS waits for 5 s. |
| 5 | | | | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |

NOTE: It is to be noted that IE "URA identity" is not included in this message, for the purpose of wider test coverage. The scenario in which IE "URA identity" is included, is tested in other test cases.

#### 8.2.6.31.5 Test requirement

After step 2 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on uplink DCCH using AM RLC.

After step 4 the UE shall be in URA PCH state.

### 8.2.6.32 Physical channel reconfiguration for transition from CELL_DCH to URA_PCH (Frequency band modification): Success

#### 8.2.6.32.1 Definition

#### 8.2.6.32.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

…

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE on the uplink DCCH using AM RLC.

If after state transition the UE enters URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> start timer T305 using its initial value if timer T305 is not running and if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in the variable TIMERS_AND_CONSTANTS;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS25.331 subclause 8.6.3.2.

1> if the criteria for URA update caused by "URA reselection" according to subclause 8.3.1 is fulfilled after cell selection:

2> initiate a URA update procedure according to TS25.331 subclause 8.3.1 using the cause "URA reselection";

2> when the URA update procedure is successfully completed:

3> the procedure ends.

…

If the new state is is CELL_PCH or URA_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (CELL_PCH or URA_PCH, respectively);

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.6.32.3 Test purpose

1. To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_DCH to URA_PCH according to the PHYSICAL CHANNEL RECONFIGURATION message.
3. To confirm that the UE releases the dedicated physical channel and selects a common physical channel in a different frequency.

### 8.2.6.32.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

**Table 8.2.6.32**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -72 | Off | -55 |

Table 8.2.6.32 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in idle mode of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.32. SS requests operator to make an outgoing call. The SS and UE execute procedure P5. Next The SS and the UE execute procedure P9 and then execute procedure P13. The SS switches its downlink

transmission power settings to columns "T1" and transmits a PHYSICAL CHANNEL RECONFIGURATION message with IE "Frequency info" omitted. The UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enter URA_PCH state of cell 6. Upon completion of the procedure, the SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.32. SS requests operator to make an outgoing call. |
| 2 | ←→ | | SS executes procedure P5 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ←→ | | SS executes procedure) P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ←→ | | SS executes procedure P13 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.32. |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Not including IE "Frequency info" |
| 7 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE transmit this message on the dedicated physical channel in cell 1 |
| 8 | | | Void | SS sends the L2 ack on the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and then waits for 5 s to allow the UE to read system information before the next step.<br>Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 9 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 6)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info | Not present |

### 8.2.6.32.5 Test requirement

After step 3 the UE shall transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 1.

After step 8 the UE shall be in URA_PCH state in cell 6.

## 8.2.6.33 Physical channel reconfiguration for transition from CELL_FACH to CELL_DCH (Frequency band modification): Success

### 8.2.6.33.1 Definition

### 8.2.6.33.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> perform the physical layer synchronisation procedure as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS25.331 subclause 8.6.3.3.

If after state transition the UE enters CELL_DCH state, the UE shall, after the state transition:

1> remove any C-RNTI from MAC;

1> clear the C_RNTI.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC, using the new configuration after the state transition.

1> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.6.33.3 Test purpose

1. To confirm that the UE transits from CELL_FACH to CELL_DCH according to the PHYSICAL CHANNEL RECONFIGURATION message.
2. To confirm that the UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC on a dedicated physical channel in a different frequency.

### 8.2.6.33.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.2.6.33**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -72 | Off | -55 |

Table 8.2.6.33 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings from columns "T0" to "T1", whenever the description in multi-cell condition specifies the transmission power settings for cell 1 and cell 6.

The UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.33. The SS switches its downlink transmission power settings to columns "T1" and transmits a PHYSICAL CHANNEL RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6. The UE shall select cell 6 and change its physical channel configuration after receiving this message and then enter CELL_DCH state. Finally the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. Upon completion of the procedure, the SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.33. |
| 2 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.33. |
| 3 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Including IE "Frequency info" set to frequency information of cell 6 and IE "Primary CPICH info" set to Primary Scrambling Code assigned to P-CPICH of cell 6 |
| 4 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE sends this message on a dedicated physical channel in cell 6. |
| 5 | ←→ | | | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

PHYSICAL CHANNEL RECONFIGURATION (Step 3)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical the message sub-type indicated by "Packet to CELL_DCH from CELL_FACH in PS" in [9] TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |

#### 8.2.6.33.5 Test requirement

After step 3 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 6.

After step 4 the UE shall be in CELL_DCH state in cell 6.

### 8.2.6.34 Physical channel reconfiguration from CELL_FACH to CELL_PCH (Frequency band modification): Success

#### 8.2.6.34.1 Definition

#### 8.2.6.34.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE on the uplink DCCH using AM RLC, using the old configuration before the state transition.

If after state transition the UE enters CELL_PCH state from CELL_FACH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to [4] on that frequency.

2> if the UE finds a suitable UTRA cell on that frequency:

3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selected another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD):

4> initiate a cell update procedure according to subclause 8.3.1 using the cause "cell reselection";

4> proceed as below.

2> else, if the UE can not find a suitable UTRA cell on that frequency but it finds a suitable UTRA cell on another frequency:

3> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

3> proceed as below.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> if the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD) is included the UE shall either:

3> ignore the content of the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD) and proceed as below;

2> or:

3> if the received reconfiguration message included the IE "Primary CPICH info" (for FDD) or "Primary CPCH info" (for TDD), and it is different from the current cell:

4> initiate a cell update procedure according to subclause 8.3.1 using the cause "Cell reselection";

4> proceed as below.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> start timer T305 using its initial value if timer T305 is not running and if periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity" in the variable TIMERS_AND_CONSTANTS;

1> select Secondary CCPCH according to subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in subclause 8.6.3.2.

1> the procedure ends.

If after state transition the UE enters CELL_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> keep the configuration existing before the reception of the message and transmit a failure response message as specified in TS25.331subclause 8.2.2.9

1> if the UE enters CELL_PCH state from CELL_FACH state, and the received reconfiguration message included the IE "Primary CPICH info", and the UE selected another cell than indicated by this IE:

2> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "cell reselection";

2> when the cell update procedure is successfully completed:

3> the procedure ends.

Reference

3GPP TS 25.331 clause 8.2.2.

### 8.2.6.34.3 Test purpose

1. To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_FACH to CELL_PCH according to the PHYSICAL CHANNEL RECONFIGURATION message.
3. To confirm that the UE selects a common physical channel in a different frequency.

### 8.2.6.34.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS".

Test Procedure

**Table 8.2.6.34**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -72 | Off | -55 |

Table 8.2.6.34 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is idle mode of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.34. SS requests operator to make an outgoing call. The SS and UE execute procedure P6. Next The SS and the UE execute procedure P10 and then execute procedure P14. The SS switches its downlink transmission power settings to columns "T1" and. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message including IE "Frequency info" and IE "Primary CPICH info" of cell 6. The UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enter CELL_PCH state in cell 6. Upon completion of the procedure, the SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.34. SS requests operator to make an outgoing call. |
| 2 | ←→ | | SS executes procedure P6 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ←→ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ←→ | | SS executes procedure P14 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.34. |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Including IE "Frequency info" and IE "Primary CPICH info" of Cell 6 |
| 7 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE transmit this message on the common physical channel in cell 1. |
| 8 | | | | The SS waits for 5 s. |
| 9 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 6)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info | |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Downlink information for each radio links | |
| - Primary CPICH info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |

### 8.2.6.34.5 Test requirement

After step 6 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on uplink DCCH using AM RLC in cell 1.

After step 8 the UE shall be in CELL_PCH state in cell 6.

## 8.2.6.35 Physical channel reconfiguration for transition from CELL_FACH to URA_PCH (Frequency band modification): Success

### 8.2.6.35.1 Definition

### 8.2.6.35.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE on the uplink DCCH using AM RLC, using the old configuration before the state transition.

If after state transition the UE enters URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency.

1> if the IE "Frequency info" is not included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304.

1> prohibit periodical status transmission in RLC;

1> remove any C-RNTI from MAC;

1> clear the variable C_RNTI;

1> select Secondary CCPCH according to TS25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> keep the configuration existing before the reception of the message and transmit a failure response message as specified in TS25.331subclause 8.2.2.9

1> if the UE enters URA_PCH state, and after cell selection the criteria for URA update caused by "URA reselection" according to TS25.331 subclause 8.3.1 is fulfilled:

2> initiate a URA update procedure according to TS5.331 subclause 8.3.1 using the cause "URA reselection";

2> when the URA update procedure is successfully completed:

3> the procedure ends.

### Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

### 8.2.6.35.3 Test purpose

1. To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.
2. To confirm that the UE transits from CELL_FACH to URA_PCH according to the PHYSICAL CHANNEL RECONFIGURATION message.
3. To confirm that the UE selects a common physical channel in a different frequency.

8.2.6.35.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 in active and cell 6 is inactive

UE: Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS".

Test Procedure

**Table 8.2.6.35**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -72 | Off | -55 |

Table 8.2.6.35 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in idle mode of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.35. SS requests operator to make an outgoing call. The SS switches its downlink transmission power settings to columns "T1" and transmits a PHYSICAL CHANNEL RECONFIGURATION message not including IE "Frequency info" and IE "Primary CPICH info". The UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enter URA_PCH state of cell 6. Upon completion of the procedure, the SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.35. SS requests operator to make an outgoing call. |
| 2 | ←→ | | SS executes procedure P6 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ←→ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ←→ | | SS executes procedure P14 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.35. |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Not including IE "Frequency info" and IE "Primary CPICH info" |
| 7 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE transmit this message on the common physical channel in cell 1. |
| 8 | | | | The SS waits for 5 s. |
| 9 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 3)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in [9] TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator<br>UTRAN DRX cycle length coefficient | URA_PCH<br>3 |
| URA identity | URA-ID 1 |

#### 8.2.6.35.5 Test requirement

After step 3 the UE shall transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 1.

After step 8 the UE shall be in URA_PCH state in cell 6.

### 8.2.6.36 Physical channel reconfiguration for transition from CELL_FACH to CELL_FACH (Frequency band modification): Success

#### 8.2.6.36.1 Definition

#### 8.2.6.36.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_FACH state upon reception of the reconfiguration message and remains in CELL_FACH state, the UE shall:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS25.304 on that frequency;

2> if the received reconfiguration message included the IE "Primary CPICH info", and the UE selected another cell than indicated by this IE or the received reconfiguration message did not include the IE "Primary CPICH info":

3> initiate a cell update procedure according to TS25.331 subclause 8.3.1 using the cause "cell reselection";

3> when the cell update procedure completed successfully:

4> proceed as below.

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2, 8.5 and 8.6.

8.2.6.36.3 Test purpose

1. To confirm that the UE transits from CELL_FACH to CELL_FACH according to the PHYSICAL CHANNEL RECONFIGURATION message.

2. To confirm that the UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC on a common physical channel in a different frequency.

8.2.6.36.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS".

Test Procedure

**Table 8.2.6.36**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -55 | -72 | Off | -55 |

Table 8.2.6.36 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 6.

The UE is in CELL_FACH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.36. The SS modifies the contents of System formation block 11 in cell 1, so that include IE "Inter frequency measurement system information" about cell 6. The SS and UE execute procedure P6. Next The SS and the UE execute procedure P10 and then execute procedure P14. The SS switches its downlink transmission power settings to columns "T1" and transmits a PHYSICAL CHANNEL RECONFIGURATION message including IE "Frequency info" set to frequency information of cell 6 and no IE "Primary CPICH info". The UE selects cell 6 and initiates CELL UPDATE procedure with IE "Cell update cause" set to "cell reselection". The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC after complete configuration according to receiving PHYSICAL CHANNEL RECONFIGURATION message. Upon completion of the procedure, the SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is in idle mode and camped onto cell 1. The System Information Block type 11 messages to be transmitted are different from the default settings and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.36. |
| 2 | ←→ | | SS executes procedure P6 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ←→ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ←→ | | SS executes procedure P14 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.36. |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Including IE "Frequency info" set to frequency information of cell 6 and no IE "Primary CPICH info" set to Primary Scrambling Code |
| 7 | → | | CELL UPDATE | The IE "Cell update cause" is set to "cell reselection". |
| 8 | ← | | CELL UPDATE CONFIRM | Including the IE" New C-RNTI" |
| 9 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 10 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE sends this message on a common physical channel in cell 6. |
| 11 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 6)

The contents PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical the message sub-type indicated by "Packet to CELL_FACH from CELL_FACH in PS" in Annex A, with the following exception:

| Information Element | Value/remark |
|---|---|
| Frequency info<br>- UARFCN uplink(Nu)<br>- UARFCN downlink(Nd) | <br>Same uplink UARFCN as used for cell 6<br>Same downlink UARFCN as used for cell 6 |

CELL UPDATE (Step 7)

The contents of CELL UPDATE message are identical as "Contents of CELL UPDATE message" as found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 8)

The contents of CELL UPDATE CONFIRM message are identical as "CELL UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9. with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | 0000 0000 0000 0001B |

UTRAN MOBILITY UPDATE CONFIRM (Step 9)

The contents of UTRAN MOBILITY UPDATE CONFIRM message is identical as "UTRAN MOBILITY UPDATE CONFIRM message" as found in [9] TS 34.108 clause 9.

#### 8.2.6.36.5 Test requirement

After step 6 the UE shall transmit a CELL UPDATE message on the CCCH in cell 6.

After step 8 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the DCCH using AM RLC in cell 6.

After step 9 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 6.

After step 10 the UE shall be in CELL_FACH state in cell 6.

### 8.2.6.37 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing re-initialised)

#### 8.2.6.37.1 Definition

#### 8.2.6.37.2 Conformance requirement

The UE shall:

1> be able to receive any of the following messages:

…

2> PHYSICAL CHANNEL RECONFIGURATION message;

1> perform a hard handover and apply physical layer synchronisation procedure A as specified in [29], even if no prior UE measurements have been performed on the target cell and/or frequency.

…

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

When performing hard handover with change of frequency, the UE shall:

1> stop all intra-frequency and inter-frequency measurement reporting on the cells listed in the variable CELL_INFO_LIST. Each stopped measurement is restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

…

When the UE is in CELL_DCH state and receives any of the messages causing the UE to perform a hard handover, the UE shall check the IE "Timing indication" in that message and:

1> if IE "Timing indication" has the value "initialise" (i.e. timing re-initialised hard handover):

2> read SFN on target cell identified by the first radio link listed in the IE "Downlink information per radio link list" included in that message;

2> set the CFN according to the following formula:

3> for FDD:

CFN = (SFN - (DOFF div 38400)) mod 256

where the formula gives the CFN of the downlink DPCH frame which starts at the same time as or which starts during the PCCPCH frame with the given SFN.

…

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" is not included, the UE shall:

1> if pattern sequence corresponding to IE "TGPSI" is already active (according to "Current TGPS Status Flag" in the variable TGPS_IDENTITY):

2> if the "TGPS Status Flag" in this message is set to "deactivate" for the corresponding pattern sequence:

3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time" (see subclause 8.6.3.1 in TS 25.331) received in this message, when the new configuration received in this message is taken into use;

…

If the IE "Downlink DPCH info common for all RL" is included in a message used to perform a Timing re-initialised hard handover or the IE "Downlink DPCH info common for all RL" is included in a message other than RB SETUP used to transfer the UE from a state different from Cell_DCH to Cell_DCH, and ciphering is active for any radio bearer using RLC-TM, the UE shall, after having activated the dedicated physical channels indicated by that IE:

1> if any ciphering configuration for a radio bearer using RLC-TM has not been applied, due to that the activation time from a previous procedure has not elapsed:

2> apply the ciphering configuration immediately and consider the activation time from the previous procedure to be elapsed.

1> if the IE "MAC-d HFN initial value" is included in the IE "Downlink DPCH info common for all RL":

…

1> else:

2> set the 20 MSB of the HFN component of COUNT-C for TM-RLC to the value of the latest transmitted IE "START" or "START List" for this CN domain, while not incrementing the value of the HFN component of COUNT-C at each CFN cycle; and

1> set the remaining LSBs of the HFN component of COUNT-C to zero;

1> start to perform ciphering on the radio bearer in lower layers while not incrementing the HFN;

1> include the IE "COUNT-C activation time" in the response message and specify a CFN value other than the default, "Now", that is a multiple of 8 frames (CFN mod 8 =0) and lies at least 200 frames ahead of the CFN in which the response message is first transmitted;

1> calculate the START value according to subclause 8.5.9 in TS 25.331;

1> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info" in the response message;

1> at the CFN value as indicated in the response message in the IE "COUNT-C activation time":

2> set the 20 MSB of the HFN component of the COUNT-C variable common for all transparent mode radio bearers of this CN domain to the START value as indicated in the IE "START list" of the response message for the relevant CN domain; and

2> set the remaining LSBs of the HFN component of COUNT-C to zero;

2> increment the HFN component of the COUNT-C variable by one even if the "COUNT-C activation time" is equal to zero;

2> set the CFN component of the COUNT-C to the value of the IE "COUNT-C activation time" of the response message. The HFN component and the CFN component completely initialise the COUNT-C variable;

2> step the COUNT-C variable, as normal, at each CFN value, i.e. the HFN component is no longer fixed in value but incremented at each CFN cycle.

Reference

3GPP TS 25.331 clauses 8.2.2.3, 8.2.2.4, 8.3.5, 8.5.15.2, 8.6.6.15, 8.6.6.28

### 8.2.6.37.3 Test Purpose

To confirm that the UE is able to perform a hard-handover with change of frequency, with and without prior measurements on the target frequency.

To confirm that the UE answers with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message when the procedure has been initiated with the PHYSICAL CHANNEL RECONFIGURATION message.

To confirm that the UE stops intra-frequency measurements after the inter-frequency handover has been performed, until a MEASUREMENT CONTROL message is received from the SS.

To confirm that the UE computes as it shall the CFN to be used after the handover.

To confirm that the UE deactivates compressed mode (if required) when it has been ordered to do so in the PHYSICAL CHANNEL RECONFIGURATION message.

To confirm that the UE includes the IE "COUNT-C activation time" and the IE "START list" (in the IE "Uplink counter synchronisation info") in the response message if ciphering is active for any radio bearer using RLC-TM.

### 8.2.6.37.4 Method of test

Initial Condition

System Simulator: 4 cells – Cell 1 and cell 2 on frequency $f_1$, cell 4 and cell 5 on frequency $f_2$. Cells 2 and 5 shall have the same primary scrambling code.

UE: "CS-DCCH+DTCH_DCH" (state 6-9) or "PS-DCCH+DTCH_DCH" (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the test case shall be run twice, once starting from state 6-9, once starting from state 6-10. Ciphering shall be activated.

Related ICS/IXIT statements

- Compressed mode required yes/no

Test Procedure

Table 8.2.6.37-1 illustrates the downlink power to be applied for the 4 cells, as well as the frequency and scrambling code for each cell.

**Table 8.2.6.37-1**

| Parameter | Unit | Cell 1 | | | | Cell 2 | | | | Cell 4 | | | | Cell 5 | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Frequency | | $f_1$ | | | | $f_1$ | | | | $f_2$ | | | | $f_2$ | | | |
| Scrambling code | | Scrambling code 1 | | | | Scrambling code 2 | | | | Scrambling code 3 | | | | Scrambling code 2 | | | |
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| CPICH Ec | dBm/3.84 MHz | -60 | -60 | -75 | -75 | OFF | -60 | -75 | -50 | -60 | -60 | -60 | -60 | -60 | -60 | -60 | -70 |

The UE is initially in CELL_DCH, and has only cell 1 in its active set.

At instant T1, the downlink power is changed according to what is shown in table 8.2.6.37 -1. Cell 2 should then trigger event 1a as has been configured through the default System Information Block Type 11. The UE shall thus send a MEASUREMENT REPORT to the SS, triggered by cell 2.

The SS adds then cell 2 to the active set of the Ue, by sending an ACTIVE SET UPDATE message to the UE. The UE shall answer with an ACTIVE SET UPDATE COMPLETE message.

The SS configures then compressed mode (if required), to prepare the UE for inter-frequency measurements, by sending a PHYSICAL CHANNEL RECONFIGURATION message on DCCH using AM-RLC. The UE shall answer with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

The SS then sets up inter-frequency measurements (event 2b), by sending a MEASUREMENT CONTROL message to the UE. Compressed mode is started at the same time in that message (if required).

At instant T2, the downlink power is changed according to what is shown in table 8.2.6.37-1. Frequency $f_2$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

SS then transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE on DCCH using AM-RLC, to order it to perform timing reinitialised inter-frequency handover to cell 4 on frequency $f_2$. The UE is also ordered to stop compressed mode (if required) after the handover.

The UE shall then transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS when the inter-frequency handover has succeeded. In case the initial condition was CS-DCCH+DTCH_DCH, that message shall contain the IEs "COUNT-C activation time" and the IE "START list" (in the IE "Uplink counter synchronisation info"), indicating to the SS when and from which value to start incrementing the HFN part of the COUNT-C variable used for ciphering. The SS shall restart incrementing the HFN part of the COUNT-C variable from the value specified in the IE START from the CFN indicated in the IE COUNT-C activation time.

The SS then waits for 20 seconds, and checks that no intra-frequency MEASUREMENT REPORT is received from the UE.

The SS sends then a MEASUREMENT CONTROL message to the UE, to modify the intra-frequency cell info list of the UE. About 640 ms after, a MEASUREMENT REPORT message shall be received from the UE, triggered by cell 5. Subsequent MEASUREMENT REPORT messages shall be received at 4 seconds interval.

Only if the UE requires compressed mode for performing interfrequency measurements, the SS sends a MEASUREMENT CONTROL message to the UE that sets up inter-frequency measurements, but does not activate compressed mode in that message.

At instant T3, the downlink power is changed according to what is shown in table 8.2.6.37-1 so as to trigger Event 2b for frequency f1. SS waits then for 20 seconds, and checks that no MEASUREMENT REPORT message triggered by cell 2 is received during this time.

Independent of the UE requiring compressed mode, the SS then continues by sending a PHYSICAL CHANNEL RECONFIGURATION message to the UE on DCCH using AM-RLC, to order it to perform timing reinitialised inter-frequency handover to cell 2 on frequency $f_1$.

The UE shall then transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS when the inter-frequency handover has succeeded. In case the initial condition was CS-DCCH+DTCH_DCH, that message shall contain the IEs "COUNT-C activation time" and the IE "START list" (in the IE "Uplink counter synchronisation info"), indicating to the SS when and from which value to start incrementing the HFN part of the COUNT-C variable used for ciphering.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS changes the power of the cells according to column T1 in table 8.2.6.37-1 |
| 2 | → | | MEASUREMENT REPORT | Event 1a is triggered by cell 2 in the UE, which sends a MEASUREMENT REPORT message to the SS |
| 3 | ← | | ACTIVE SET UPDATE | The SS adds cell 2 to the active set of the UE. |
| 4 | → | | ACTIVE SET UPDATE COMPLETE | The UE answers with an ACTIVE SET UPDATE COMPLETE message to the SS |
| 5 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS downloads the compressed mode parameters in the UE (if required). |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE acknowleges the downloading of the compressed mode parameters (only if compressed mode was configured). |
| 7 | ← | | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE, and activates compressed mode (if required). |
| 8 | | | | The SS changes the power of the cells according to column T2 in table 8.2.6.37-1. |
| 9 | → | | MEASUREMENT REPORT | Frequency $f_2$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 10 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS orders the UE to perform timing re-initialised inter-frequency handover to cell 4 on frequency $f_2$. |
| 11 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | After the UE has succeeded in performing the inter-frequency handover, it shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS using the new configuration. |
| 12 | | | | The SS waits for 20 seconds and monitors that no intra-frequency MEASUREMENT REPORT message is received from the UE. |
| 13 | ← | | MEASUREMENT CONTROL | The SS updates the list of intra-frequency cells in the UE. |
| 14 | → | | MEASUREMENT REPORT | Cell 5 triggers event 1a in the UE, which sends a MEASUREMENT REPORT message to the SS. Subsequent MEASUREMENT REPORT messages shall be received from the UE at 4 seconds interval. |
| 15 | ← | | MEASUREMENT CONTROL | The SS sets up an inter-frequency measurement in the UE (if compressed mode is required), but does not activate compressed mode. |
| 16 | | | | The SS changes the power of the cells according to column T3 in table 8.2.6.37-1. |
| 16a | | | | The SS waits for 20 seconds and monitors that no inter-frequency MEASUREMENT REPORT message is received from the UE. |
| 17 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS orders the UE to perform timing re-initialised inter-frequency handover to cell 2 on frequency $f_1$. |
| 18 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | After the UE has succeeded in performing the inter-frequency handover, it shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS using the new configuration. |
| 19 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

MEASUREMENT REPORT (Step 2)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Scrambling code 1 (or scrambling code 2) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is present and includes IE COUNT-C-SFN frame difference (This IE is related to scrambling code 2) |
| - Primary CPICH info | |
| - Primary scrambling code | Scrambling code 2 (or scrambling code 1 if the previous scrambling code included by the UE was scrambling code 2) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Scrambling code 2 |

ACTIVE SET UPDATE (Step 3)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/Remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Scrambling code 2 | |
| - Downlink DPCH info for each RL | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | Any value between 0 and Spreading factor-1 (use different values for each DPCH in case several DPCHs are allocated to the UE). | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

PHYSICAL CHANNEL RECONFIGURATION (Step 5 for the CS case)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | Not Present | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Not Present | |
| CHOICE mode | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | SF/2 (or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | SF/2 (or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information per radio link list | 2 radio links | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Scrambling code 1 | |
| - Cell ID | Not present | |
| - PDSCH with SHO DCH info | Not present | R99 and Rel-4 only |
| - PDSCH code mapping | Not present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value | |

| | | |
|---|---|---|
| | (as currently stored in SS) modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Same as the code currently allocated to the UE in cell 1 | |
| - Scrambling code change | Code change | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Scrambling code 2 | |
| - Cell ID | Not present | |
| - PDSCH with SHO DCH info | Not present | R99 and Rel-4 only |
| - PDSCH code mapping | Not present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to the same value as in step 3 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Same as the code currently allocated to the UE in cell 2 | |
| - Scrambling code change | No code change | |
| - TPC combination index | 0 | |

PHYSICAL CHANNEL RECONFIGURATION MESSAGE (Step 5 for the PS case)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | Not Present | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Not Present | |
| CHOICE *mode* | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information for each radio link | Not Present | |

MEASUREMENT CONTROL (Step 7)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | 2 inter-frequency cells |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_2$ |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code 3 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Inter-frequency cell id | 5 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_2$ |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code 2 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | Not present |
| - Measurement validity | |

| Information Element | Value/Remark |
|---|---|
| - UE State | CELL_DCH |
| - Inter-frequency set update | |
| - UE autonomous update | On with no reporting |
| - Non autonomous update mode | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -70 dBm |
| - W used frequency | 0 (0.0) |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 1280 ms |
| - Reporting cell status | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -68 dBm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Status Flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

MEASUREMENT REPORT (Step 9)

Note 1: UE may include either Cell Measurement Events for one of the cells or both of the Cells 4 and 5.

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 2 cells reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 (or scrambling code 2) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 2 (or scrambling code 3 if the previous scrambling code included by the UE was scrambling code 2) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 2 |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 |

PHYSICAL CHANNEL RECONFIGURATION (Step 10)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | Not Present | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | | |
| - CHOICE mode | FDD | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_2$ | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Not Present | |
| CHOICE *mode* | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary value between 0..306688 by step of 512 | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Scrambling code 3 | |
| - Cell ID | Not present | |
| - PDSCH with SHO DCH info | Not present | R99 and Rel-4 only |
| - PDSCH code mapping | Not present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of Default DPCH Offset Value modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter | |

| | | |
|---|---|---|
| | Set | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | If compressed mode required and CS call: No code change<br>Otherwise: Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Steps 11 and 18 for the CS case)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it is set to identical value of the same IE in the downlink PHYSICAL CHANNEL RECONFIGURATION message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Uplink integrity protection activation info | Check that not present |
| CHOICE mode | FDD |
| COUNT-C activation time | Check that this IE is present and that the CFN value is a multiple of 8 frames (CFN mod 8 =0) and lies at least 200 frames ahead of the CFN in which the response message is first transmitted. |
| Radio bearer uplink ciphering activation time info | Check that not present |
| Uplink counter synchronisation info | Check that present |
| >RB with PDCP information list | Check that absent |
| >START list | Check that this IE is present. |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Steps 11 and 18 for the PS case)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it is set to identical value of the same IE in the downlink PHYSICAL CHANNEL RECONFIGURATION message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Uplink integrity protection activation info | Check that not present |
| CHOICE mode | FDD |
| COUNT-C activation time | Check that not present |
| Radio bearer uplink ciphering activation time info | Check that not present |
| Uplink counter synchronisation info | Check that not present |

MEASUREMENT CONTROL (Step 13)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Modify |
| Measurement Reporting Mode | Not present |
| Additional measurements list | Not present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove all intra-frequency cells |
| - New intra-frequency info list | 2 new intra-frequency cells |
| - Intra-frequency cell id | 4 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code 3 (for cell 4) |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 5 |
| - Cell info | |
| - Cell individual offset | 20 (10 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code 2 (for cell 5) |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells selection and Re-selection info | Not Present |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity | Not Present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not Present |
| - CHOICE report criteria | Not Present |

MEASUREMENT REPORT (Step 14)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that this IE is set to Scrambling code 2 (or scrambling code 3) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is present and includes IE COUNT-C-SFN frame difference (This IE is related to scrambling code 2) |
| - Primary CPICH info | |
| - Primary scrambling code | Check that this IE is set to Scrambling code 3 (or scrambling code 2 if scrambling code 3 was indicated first) |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that this IE is set to Scrambling code 2 |

MEASUREMENT CONTROL (Step 15)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | 2 inter-frequency cells |
| - Inter-frequency cell id | 1 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_1$ |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code 1 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Inter-frequency cell id | 2 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_1$ |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | TRUE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code 2 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | Not present |
| - Measurement validity | |

| Information Element | Value/Remark |
|---|---|
| - UE State | CELL_DCH |
| - Inter-frequency set update | |
| - UE autonomous update | On with no reporting |
| - Non autonomous update mode | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2c |
| - Threshold used frequency | Not present |
| - W used frequency | Not present |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within virtual active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Parameters required for each non-used frequency | 1 frequency |
| - Threshold non used frequency | -90 dBm |
| - W non-used frequency | 0 (0.0) |
| DPCH compressed mode status info | Not present |

PHYSICAL CHANNEL RECONFIGURATION (Step 17)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | Not Present | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | | |
| - CHOICE mode | FDD | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding tof1 | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Not Present | |
| CHOICE *mode* | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Scrambling code 2 | |
| - Cell ID | Not present | |
| - PDSCH with SHO DCH info | Not present | R99 and Rel-4 only |
| - PDSCH code mapping | Not present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of Default DPCH Offset Value modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | Not Present | |

| | | |
|---|---|---|
| - TPC combination index<br>- SSDT cell identity<br><br>- Closed loop timing adjustment mode | 0<br>Not present<br><br>Not present | <br>R99 and Rel-4 only<br> |

#### 8.2.6.37.5 Test Requirement

After step 1, the UE shall send a MEASUREMENT REPORT message triggered by event 1a for cell 2.

After step 3, the UE shall send an ACTIVE SET UPDATE COMPLETE message to acknowledge that it has added cell 2 to its active set.

After step 5, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS to acknowledge the downloading of the compressed mode parameters (only if compressed mode is required), that were sent in the PHYSICAL CHANNEL RECONFIGURATION message of step 4.

After step 8, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_2$. In that message, cell 4 or cell 5 shall be the only cell included in the IE event results.

After step 10, the UE shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS in cell 4 to acknowledge the successful timing re-initialised inter-frequency handover, and in case the UE was in state 6-9 as defined in clause 7.4 of 34.108 as initial condition to the test, the IEs "COUNT-C activation time" and "START list" (in the IE "Uplink counter synchronisation info") shall be included in that message. The UE shall also start incrementing the HFN part of the COUNT-C variable from the value specified in the IE START from the CFN indicated in the IE COUNT-C activation time.

After step 11, the UE shall not send any intra-frequency MEASUREMENT REPORT message triggered by event 1a for cell 5.

After step 13, the UE sends periodic intra-frequency MEASUREMENT REPORT message triggered by event 1a for cell 5.

For UE's that require compressed mode for performing interfrequency measurements, after step 15 the UE shall not send any inter-frequency MEASUREMENT REPORT message triggered by event 2c for frequency 1.

After step 17, the UE shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS in cell 2 to acknowledge the successful timing re-initialised inter-frequency handover, and in case the UE was in state 6-9 as defined in clause 7.4 of 34.108 as initial condition to the test, the IEs "COUNT-C activation time" and "START list" (in the IE "Uplink counter synchronisation info") shall be included in that message.

### 8.2.6.37a Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing re-initialised) (1.28 Mcps TDD)

#### 8.2.6.37a.1 Definition

#### 8.2.6.37a.2 Conformance requirement

In case the reconfiguration procedure is used to remove all existing RL(s) in the active set while new RL(s) are established the UE shall:

1> perform the physical layer synchronisation procedure A as specified in TS 25.214

1> apply the hard handover procedure as specified (below);

1> be able to perform this procedure even if no prior UE measurements have been performed on the target cell and/or frequency.

…

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

When performing hard handover with change of frequency, the UE shall:

1> stop all intra-frequency and inter-frequency measurements on the cells listed in the variable CELL_INFO_LIST. Each stopped measurement is restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

…

When the UE is in CELL_DCH state and receives any of the messages causing the UE to perform a hard handover, the UE shall check the IE "Timing indication" in that message and:

1> if IE "Timing indication" has the value "initialise" (i.e. timing re-initialised hard handover):

2> read SFN on target cell identified by the first radio link listed in the IE "Downlink information per radio link list" included in that message;

2> set the CFN according to the following formula:

3> for TDD:

$$CFN = (SFN - DOFF) \bmod 256$$

where the formula gives the CFN of the downlink DPCH frame which starts at the same time as or which starts during the PCCPCH frame with the given SFN.

…

If the IE "Downlink DPCH info common for all RL" is included in a message used to perform a Timing re-initialised hard handover or the IE "Downlink DPCH info common for all RL" is included in a message other than RB SETUP used to transfer the UE from a state different from Cell_DCH to Cell_DCH, and ciphering is active for any radio bearer using RLC-TM, the UE shall, after having activated the dedicated physical channels indicated by that IE:

1> set the 20 MSB of the HFN component of COUNT-C for TM-RLC to the value of the latest transmitted IE "START" or "START List" for this CN domain, while not incrementing the value of the HFN component of COUNT-C at each CFN cycle; and

1> set the remaining LSBs of the HFN component of COUNT-C to zero;

1> start to perform ciphering on the radio bearer in lower layers while not incrementing the HFN;

1> include the IE "COUNT-C activation time" in the response message and specify a CFN value other than the default, "Now" for this IE;

1> calculate the START value according to subclause 8.5.9;

1> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info" in the response message;

1> at the CFN value as indicated in the response message in the IE "COUNT-C activation time":

2> set the 20 MSB of the HFN component of the COUNT-C variable to the START value as indicated in the IE "START list" of the response message for the relevant CN domain; and

2> set the remaining LSBs of the HFN component of COUNT-C to zero;

2> increment the HFN component of the COUNT-C variable by one;

2> set the CFN component of the COUNT-C to the value of the IE "COUNT-C activation time" of the response message. The HFN component and the CFN component completely initialise the COUNT-C variable;

2> step the COUNT-C variable, as normal, at each CFN value, i.e. the HFN component is no longer fixed in value but incremented at each CFN cycle.

Reference

3GPP TS 25.331 clauses 8.2.2.3, 8.2.2.4, 8.3.5, 8.5.15.2, 8.6.6.15, 8.6.6.28

### 8.2.6.37a.3 Test Purpose

To confirm that the UE is able to perform a hard-handover with change of frequency, with and without prior measurements on the target frequency.

To confirm that the UE answers with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message when the procedure has been initiated with the PHYSICAL CHANNEL RECONFIGURATION message.

To confirm that the UE stops intra-frequency measurements after the inter-frequency handover has been performed, until a MEASUREMENT CONTROL message is received from the SS.

To confirm that the UE computes as it shall the CFN to be used after the handover.

To confirm that the UE includes the IE "COUNT-C activation time" and the IE "START list" (in the IE "Uplink counter synchronisation info") in the response message if ciphering is active for any radio bearer using RLC-TM.

### 8.2.6.37a.4 Method of test

Initial Condition

System Simulator: 4 cells – Cell 1 and cell 2 on frequency $f_1$, cell 4 and cell 5 on frequency $f_2$. Cells 2 and 5 shall have the same cell parameters id. Only cell 1 is activated.

UE: "CS-DCCH+DTCH_DCH" (state 6-9) or "PS-DCCH+DTCH_DCH" (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the test case shall be run twice, once starting from state 6-9, once starting from state 6-10. Ciphering shall be activated.

Test Procedure

Table 8.2.6.37a-1 illustrates the downlink power to be applied for the 4 cells, as well as the frequency and cell parameters id for each cell.

**Table 8.2.6.37a-1**

| Parameter | Unit | Cell 1 | | | Cell 2 | | | Cell 4 | | | Cell 5 | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Frequency | | $f_1$ | | | $f_1$ | | | $f_2$ | | | $f_2$ | | |
| Cell parameters id | | Cell parameters id 1 | | | Cell parameters id 2 | | | Cell parameters id 3 | | | Cell parameters id 2 | | |
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | -75 | -95 | -55 | -75 | -60 | -60 | -60 | -60 | -60 | -70 |

The UE is initially in CELL_DCH in cell 1.

At instant T1, the downlink power is changed according to what is shown in table 8.2.6.37a -1. Cell 2 should then trigger event 1g as has been configured through the default System Information Block Type 11. The UE shall thus send a MEASUREMENT REPORT to the SS, triggered by cell 2.

The SS then sets up inter-frequency measurements (event 2b), by sending a MEASUREMENT CONTROL message to the UE.

At instant T2, the downlink power is changed according to what is shown in table 8.2.6.37a-1. Frequency $f_2$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

SS then transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE on DCCH using AM-RLC, to order it to perform timing reinitialised inter-frequency handover to cell 4 on frequency $f_2$.

The UE shall then transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS when the inter-frequency handover has succeeded. In case the initial condition was CS-DCCH+DTCH_DCH, that message shall contain the IEs "COUNT-C activation time" and the IE "START list" (in the IE "Uplink counter synchronisation

info"), indicating to the SS when and from which value to start incrementing the HFN part of the COUNT-C variable used for ciphering. The SS shall restart incrementing the HFN part of the COUNT-C variable from the value specified in the IE START from the CFN indicated in the IE COUNT-C activation time.

The SS then waits for 20 seconds, and checks that no MEASUREMENT REPORT is received from the UE.

The SS sends then a MEASUREMENT CONTROL message to the UE, to modify the intra-frequency cell info list of the UE. About 640 ms after, a MEASUREMENT REPORT message shall be received from the UE, triggered by cell 5. Subsequent MEASUREMENT REPORT messages shall be received at 4 seconds interval.

In case the initial condition was CS-DCCH+DTCH_DCH, that message shall contain the IEs "COUNT-C activation time" and the IE "START list" (in the IE "Uplink counter synchronisation info"), indicating to the SS when and from which value to start incrementing the HFN part of the COUNT-C variable used for ciphering.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS changes the power of the cells according to column T1 in table 8.2.6.37a-1 |
| 2 | → | | MEASUREMENT REPORT | Event 1g is triggered by cell 2 in the UE, which sends a MEASUREMENT REPORT message to the SS |
| 3 | ← | | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE. |
| 4 | | | | The SS changes the power of the cells according to column T2 in table 8.2.6.37a-1. |
| 5 | → | | MEASUREMENT REPORT | Frequency $f_2$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS orders the UE to perform timing re-initialised inter-frequency handover to cell 4 on frequency $f_2$. |
| 7 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | After the UE has succeeded in performing the inter-frequency handover, it shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS using the new configuration. |
| 8 | | | | The SS waits for 20 seconds and monitors that no MEASUREMENT REPORT message is received from the UE. |
| 9 | ← | | MEASUREMENT CONTROL | The SS updates the list of intra-frequency cells in the UE. |
| 10 | → | | MEASUREMENT REPORT | Cell 5 triggers event 1g in the UE, which sends a MEASUREMENT REPORT message to the SS. Subsequent MEASUREMENT REPORT messages shall be received from the UE at 4 seconds interval. |

Specific Message Content

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

MEASUREMENT REPORT (Step 2)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Check that this IE is present |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CCPCH info | |
| - Cell parameters ID | cell parameters ID 2 |
| - Timeslot ISCP | Check that this IE is absent |
| - P-CCPCH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check that this IE is present |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CCPCH info | |
| - Cell parameters ID | Cell parameters ID 1 |
| - Timeslot ISCP | Check that this IE is absent |
| - P-CCPCH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1g |
| - Cell measurement event results | |
| - Primary CCPCH info | |
| - Cell parameters ID | Cell parameters ID 2 |

MEASUREMENT CONTROL (Step 3)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | 2 inter-frequency cells |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN (Nt) | UARFCN corresponding to $f_2$ |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Cell parameters ID 3 |
| - Inter-frequency cell id | 5 |
| - Frequency info | |
| - UARFCN (Nt) | UARFCN corresponding to $f_2$ |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Cell parameters ID 2 |
| - Cells for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | P-CCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - Timeslot ISCP reporting indicator | FALSE |
| - P-CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | Not present |
| - Measurement validity | |
| - UE State | CELL_DCH |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -70 dBm |
| - W used frequency | 0 (0.0) |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |
| - Parameters required for each non-used frequency | |

| Information Element | Value/Remark |
|---|---|
| - Threshold non used frequency | -65 dBm |
| - W non-used frequency | 0 |

MEASUREMENT REPORT (Step 5)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| -CHOICE mode | TDD |
| - UARFCN(Nt) | Check that the value of this IE is set to UARFCN corresponding to $f_2$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 2 cells reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is present |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CCPCH info | |
| - Cell parameters ID | Check that the value of this IE is set to Cell parameters ID 3 (or Cell parameters ID 2) |
| - Timeslot ISCP | Check that this IE is absent |
| - P-CCPCH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check that this IE is present |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CCPCH info | |
| - Cell parameters ID | Check that the value of this IE is set to Cell parameters ID 2 (or Cell parameters ID 3 if the previous Cell parameters ID included by the UE was Cell parameters ID 2) |
| - Timeslot ISCP | Check that this IE is absent |
| - P-CCPCH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| -CHOICE mode | TDD |
| - UARFCN(Nt) | Check that the value of this IE is set to UARFCN corresponding to $f_2$ |
| - Non freq related measurement event results | |
| - Primary CCPCH info | |
| - Cell parameters ID | Check that the value of this IE is set to Cell parameters ID 3 |

PHYSICAL CHANNEL RECONFIGURATION (Step 6)

| Information Element | Value/Remark |
|---|---|
| Activation time | Not Present |
| New U-RNTI | Not Present |
| New C-RNTI | Not Present |
| New DSCH-RNTI | Not Present |
| RRC State indicator | CELL_DCH |
| UTRAN DRX cycle length coefficient | Not Present |
| CN information info | Not Present |
| URA identity | Not Present |
| Downlink counter synchronisation info | Not Present |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | UARFCN corresponding to $f_2$ |
| Maximum allowed UL TX power | Not Present |
| CHOICE channel requirement | Not Present |
| CHOICE *mode* | TDD |
| - Downlink HS-PDSCH Information | Not Present |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | 0 |
| - Downlink DPCH power control information | Not Present |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Cell parameters ID 3 |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | TDD |
| - TFCS ID | Reference to TS34.108 clause 6.11 Parameter Set |
| - Time info | Reference to TS34.108 clause 6.11 Parameter Set |
| - Common timeslot info | Reference to TS34.108 clause 6.11 Parameter Set |
| - Downlink DPCH timeslots and codes | as used for cell 4 |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Steps 7 for the CS case)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it is set to identical value of the same IE in the downlink PHYSICAL CHANNEL RECONFIGURATION message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Uplink integrity protection activation info | Check that not present |
| CHOICE mode | TDD |
| COUNT-C activation time | Check that this IE shall be present |
| Radio bearer uplink ciphering activation time info | Check that not present |
| Uplink counter synchronisation info | Check that present |
| >RB with PDCP information list | Check that absent |
| >START list | Check that this IE is set to 1 |
| >>CN Domain identity | Check that this IE is set to CS Domain |
| >>START | Not checked |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Steps 7 for the PS case)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it is set to identical value of the same IE in the downlink PHYSICAL CHANNEL RECONFIGURATION message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Uplink integrity protection activation info | Check that not present |
| CHOICE mode | TDD |
| COUNT-C activation time | Check that not present |
| Radio bearer uplink ciphering activation time info | Check that not present |
| Uplink counter synchronisation info | Check that not present |

MEASUREMENT CONTROL (Step 9)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Modify |
| Measurement Reporting Mode | Not present |
| Additional measurements list | Not present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove all intra-frequency cells |
| - New intra-frequency info list | 2 new intra-frequency cells |
| - Intra-frequency cell id | 4 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - Cell parameters ID | Cell parameters ID 3 (for cell 4) |
| - Primary CCPCH TX power | Not Present |
| - Cells selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 5 |
| - Cell info | |
| - Cell individual offset | 20 (10 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - Cell parameters ID | Cell parameters ID 2 (for cell 5) |
| - Primary CCPCH TX power | Not Present |
| - Cells selection and Re-selection info | Not Present |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity | Not Present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not Present |
| - CHOICE report criteria | Not Present |

MEASUREMENT REPORT (Step 10)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CCPCH info | |
| - Cell parameters ID | Check that this IE is set to Cell parameters ID 2 (or Cell parameters ID 3) |
| - Timeslot ISCP | Check that this IE is absent |
| - P-CCPCH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CCPCH info | |
| - Cell parameters ID | Check that this IE is set to Cell parameters ID 3 (or Cell parameters ID 2 if Cell parameters ID 3 was indicated first) |
| - Timeslot ISCP | Checked that this IE is absent |
| - P-CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1g |
| - Cell measurement event results | |
| - Primary CCPCH info | |
| - Cell parameters ID | Check that this IE is set to Cell parameters ID 2 |

### 8.2.6.37a.5 Test Requirement

After step 2, the UE shall send a MEASUREMENT REPORT message triggered by event 1g for cell 2.

After step 4, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_2$. In that message, cell 4 shall be the only cell included in the IE event results.

After step 6, the UE shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS in cell 4 to acknowledge the successful timing re-initialised inter-frequency handover, and in case the UE was in state 6-9 as defined in clause 7.4 of 34.108 as initial condition to the test, the IEs "COUNT-C activation time" and "START list" (in the IE "Uplink counter synchronisation info") shall be included in that message. The UE shall also start incrementing the HFN part of the COUNT-C variable from the value specified in the IE START from the CFN indicated in the IE COUNT-C activation time.

After step 8, the UE shall not send any MEASUREMENT REPORT message.

After step 9, the UE send a MEASUREMENT REPORT message triggered by event 1g for cell 5.

## 8.2.6.37b Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency band cell with timing re-initialised)

### 8.2.6.37b.1 Definition

This test case is identical to test case 8.2.6.37 except that the cells belong to different frequency bands.

### 8.2.6.37b.2 Conformance requirement

Same conformance requirement as in clause 8.2.6.37.2.

### 8.2.6.37b.3 Test purpose

Same test purpose as described in clause 8.2.6.37.3 except that the target frequency is in a different frequency band.

### 8.2.6.37b.4 Method of test

#### Initial Condition

Same initial conditions as in clause 8.2.6.37.4 except that frequencies $f_1$ and $f_2$ are selected from different frequency bands.

#### Related ICS/IXIT statement(s)

- Compressed mode required yes/no
- UE supports multiple bands simultaneously yes/no

#### Test Procedure

Same test procedure as in clause 8.2.6.37.4.

Note: If the UE supports more than 2 frequency bands, the test may be executed for various band combinations.

#### Expected sequence

Same expected sequence as in clause 8.2.6.37.4.

#### Specific Message Contents

Same specific message contents as in clause 8.2.6.37.4.

### 8.2.6.37b.5 Test requirement

Same test requirements as in clause 8.2.6.37.5.

## 8.2.6.38 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing re-initialised): Failure (Physical channel failure and reversion to old channel)

### 8.2.6.38.1 Definition

### 8.2.6.38.2 Conformance requirement

When a physical dedicated channel establishment is initiated by the UE, the UE shall start a timer T312 and wait for layer 1 to indicate N312 "in sync" indications. On receiving N312 "in sync" indications, the physical channel is considered established and the timer T312 is stopped and reset.

If the timer T312 expires before the physical channel is established, the UE shall consider this as a "physical channel establishment failure".

…

If the received message caused the UE to be in CELL_DCH state and the UE failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> revert to the configuration prior to the reception of the message (old configuration);

…

1> transmit a failure response message as specified in TS 25.331 subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

…

The UE shall:

1> in case of reception of a PHYSICAL CHANNEL RECONFIGURATION message:

…

2> transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE as response message on the DCCH using AM RLC.

Reference

3GPP TS 25.331 clause 8.2.2.7, 8.2.2.9, 8.5.4.

### 8.2.6.38.3 Test purpose

To confirm that the UE reverts to the old configuration (including measurement configurations, ciphering procedures and compressed mode configurations if required) and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC if the UE fails to reconfigure the new physical channel according to the received PHYSICAL CHANNEL RECONFIGURATION message before timer T312 expiry.

### 8.2.6.38.4 Method of test

Initial Condition

System Simulator: 4 cells – Cell 1 and cell 2 on frequency $f_1$, cell 4 on frequency $f_2$and cell 5 on frequency $f_3$.

UE: "CS-DCCH+DTCH_DCH" (state 6-9) or "PS-DCCH+DTCH_DCH" (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the test case shall be run twice, once starting from state 6-9, once starting from state 6-10. Ciphering shall be activated.

Related ICS/IXIT statements

- Compressed mode required yes/no

Test Procedure

Table 8.2.6.38-1 illustrates the downlink power to be applied for the 4 cells, as well as the frequency and scrambling code for each cell.

**Table 8.2.6.38-1a**

| Parameter | Unit | Cell 1 | | | | | Cell 2 | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| Frequency | | $f_1$ | | | | | $f_1$ | | | | |
| Scrambling code | | Scrambling code 1 | | | | | Scrambling code 2 | | | | |
| | | T0 | T1 | T2 | T3 | T4 | T0 | T1 | T2 | T3 | T4 |
| CPICH Ec | dBm/3.84 MHz | -60 | -60 | -75 | -60 | -75 | -95 | -60 | -75 | -60 | -75 |

**Table 8.2.6.38-1b**

| Parameter | Unit | Cell 4 | | | | | Cell 5 | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| Frequency | | $f_2$ | | | | | $f_3$ | | | | |
| Scrambling code | | Scrambling code 3 | | | | | Scrambling code 4 | | | | |
| | | T0 | T1 | T2 | T3 | T4 | T0 | T1 | T2 | T3 | T4 |
| CPICH Ec | dBm/3.84 MHz | -60 | -60 | -60 | OFF | -73 | -60 | -60 | -73 | OFF | -60 |

The UE is initially in CELL_DCH, and has only cell 1 in its active set.

At instant T1, the downlink power is changed according to what is shown in table 8.2.6.38 -1. Cell 2 should then trigger event 1a as has been configured through the default System Information Block Type 11. The UE shall thus send a MEASUREMENT REPORT to the SS, triggered by cell 2.

The SS adds then cell 2 to the active set of the UE, by sending an ACTIVE SET UPDATE message to the UE. The UE shall answer with an ACTIVE SET UPDATE COMPLETE message.

The SS then configures compressed mode, (if required by the UE) to prepare the UE for inter-frequency measurements, by sending a PHYSICAL CHANNEL RECONFIGURATION message on DCCH using AM-RLC. The UE shall answer with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

The SS then sets up inter-frequency measurements (event 2b), by sending a MEASUREMENT CONTROL message to the UE. Compressed mode is started at the same time in that message, (if required).

At instant T2, the downlink power is changed according to what is shown in table 8.2.6.38-1. Frequency $f_2$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

At instance T3, the downlink power is changed according to what is shown in table 8.2.6.38-1.

SS then transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE on DCCH using AM-RLC, to order it to perform timing reinitialised inter-frequency handover to cell 4 on frequency $f_2$.

The UE shall revert to the old configuration and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message to the SS on the DCCH using AM RLC, with the value "physical channel failure" in the IE "failure cause".

At instant T4, the downlink power is changed according to what is shown in table 8.2.6.38-1. Frequency $f_3$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS changes the power of the cells according to column T1 in table 8.2.6.38-1. |
| 2 | → | | MEASUREMENT REPORT | Event 1a is triggered by cell 2 in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 3 | ← | | ACTIVE SET UPDATE | The SS adds cell 2 to the active set of the UE. |

| | | | |
|---|---|---|---|
| 4 | → | ACTIVE SET UPDATE COMPLETE | The UE answers with an ACTIVE SET UPDATE COMPLETE message to the SS. |
| 5 | ← | PHYSICAL CHANNEL RECONFIGURATION | The SS downloads the compressed mode parameters in the UE, (if required). |
| 6 | → | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE acknowledges the downloading of the compressed mode parameters (only if compressed mode was configured). |
| 7 | ← | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE, and activates compressed mode (if required). |
| 8 | | | The SS changes the power of the cells according to column T2 in table 8.2.6.38-1. |
| 9 | → | MEASUREMENT REPORT | Frequency $f_2$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| | | | The SS changes the power of the cells according to column T3 in table 8.2.6. 38-1. |
| 10 | ← | PHYSICAL CHANNEL RECONFIGURATION | The SS orders the UE to perform timing re-initialised inter-frequency handover to cell 4 on frequency $f_2$. |
| 11 | → | PHYSICAL CHANNEL RECONFIGURATION FAILURE | After T312 expires, the UE shall revert to the old channel and transmits this message. |
| 12 | | | The SS changes the power of the cells according to column T4 in table 8.2.6.38-1. |
| 13 | → | MEASUREMENT REPORT | Frequency $f_3$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |

Specific Message Content

All messages indicated below shall use the same content as described in default message content, with the following exceptions.

MEASUREMENT REPORT (Step 2)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Scrambling code 1 (or scrambling code 2) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Scrambling code 2 (or scrambling code 1 if the previous scrambling code included by the UE was scrambling code 2) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Scrambling code 2 |

ACTIVE SET UPDATE (Step 3)

| Information Element | Value/Remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Scrambling code 2 | |
| - Downlink DPCH info for each RL | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | Any value between 0 and Spreading factor-1 (use different values for each DPCH in case several DPCHs are allocated to the UE). | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

PHYSICAL CHANNEL RECONFIGURATION (Step 5 for the CS case)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | Not Present | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Not Present | |
| CHOICE mode | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | SF/2 (or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | SF/2 (or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information per radio link list | 2 radio links | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Scrambling code 1 | |
| - Cell ID | Not present | |
| - PDSCH with SHO DCH info | Not present | R99 and Rel-4 only |
| - PDSCH code mapping | Not present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value | |

| | | |
|---|---|---|
| | (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Same as the code currently allocated to the UE in cell 1 | |
| - Scrambling code change | Code change | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Scrambling code 2 | |
| - Cell ID | Not present | |
| - PDSCH with SHO DCH info | Not present | R99 and Rel-4 only |
| - PDSCH code mapping | Not present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to the same value as in step 3 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Same as the code currently allocated to the UE in cell 2 | |
| - Scrambling code change | No code change | |
| - TPC combination index | 0 | |

PHYSICAL CHANNEL RECONFIGURATION MESSAGE (Step 5 for the PS case)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | Not Present | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Not Present | |
| CHOICE *mode* | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not Present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information for each radio link | Not Present | |

MEASUREMENT CONTROL (Step 7)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | 2 inter-frequency cells |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_2$ |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code 3 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Inter-frequency cell id | 5 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_3$ |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | Not present |
| - Primary Scrambling Code | Scrambling code 4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | Not present |
| - Measurement validity | |

| Information Element | Value/Remark |
|---|---|
| - UE State | CELL_DCH |
| - Inter-frequency set update | |
| - UE autonomous update | On with no reporting |
| - Non autonomous update mode | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -70 dBm |
| - W used frequency | 0 (0.0) |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -68 dBm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Status Flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

MEASUREMENT REPORT (Step 9)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 |

PHYSICAL CHANNEL RECONFIGURATION (Step 10)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | Not Present | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | | |
| - CHOICE mode | FDD | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_2$ | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE channel requirement | Not Present | |
| CHOICE *mode* | FDD | |
| - Downlink PDSCH information | Not Present | R99 and Rel-4 only |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary value between 0..306688 by step of 512 | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Scrambling code 3 | |
| - Cell ID | Not present | |
| - PDSCH with SHO DCH info | Not present | R99 and Rel-4 only |
| - PDSCH code mapping | Not present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of Default DPCH Offset Value modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter | |

| | | |
|---|---|---|
| | Set | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | If compressed mode required and CS call: No code change<br>Otherwise: Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

MEASUREMENT REPORT (Step 13)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_3$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 4 |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_3$ |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 4 |

### 8.2.6.38.5 Test Requirement

After step 1, the UE shall send a MEASUREMENT REPORT message triggered by event 1a for cell 2.

After step 3, the UE shall send an ACTIVE SET UPDATE COMPLETE message to acknowledge that it has added cell 2 to its active set.

After step 5, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS to acknowledge the downloading of the compressed mode parameters that were sent in the PHYSICAL CHANNEL RECONFIGURATION message of step 4 (only if compressed mode was required).

After step 8, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_2$. In that message, cell 4 shall be the only cell included in the IE event results.

After step 10, the UE shall revert to the old configuration and transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message.

After step 12, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_3$. In that message, cell 5 shall be the only cell included in the IE event results.

## 8.2.6.39 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Seamless SRNS relocation) (without pending of ciphering)

### 8.2.6.39.1 Definition

### 8.2.6.39.2 Conformance requirement

1> if the reconfiguration procedure is simultaneous with SRNS relocation procedure:

2> if the transmitted message is a RADIO BEARER RECONFIGURATION:

3> include the IE "New U-RNTI".

2> else:

3> include the IE "Downlink counter synchronisation info".

The UE shall:

1> if the received reconfiguration message included the IE "Downlink counter synchronisation info"; or

2> re-establish RB2;

2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN component of COUNT-C for RB2;

2> calculate the START value according to subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".

1> if the IE "Integrity protection mode info" was present in the received reconfiguration message:

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted response message.

If the new state is CELL_DCH or CELL_FACH, the response message shall be transmitted using the new configuration after the state transition, and the UE shall:

1> if the IE "Downlink counter synchronisation info" was included in the reconfiguration message; or

2> when RLC has confirmed the successful transmission of the response message:

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of COUNT-C values of all UM RLC entities to zero;

3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS as specified in [36].

Reference

3GPP TS 25.331 clause 8.2.2.

### 8.2.6.39.3 Test purpose

1. To confirm that the UE performs a combined hard handover and SRNS relocation and then transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message in the new cell.

2. In the case that ciphering is applied by the network, to confirm that the UE applies the new ciphering algorithm following a successful SRNS relocation.

### 8.2.6.39.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2

UE: PS-DCCH+DTCH_DCH (state 6-10) or CS-DCCH+DTCH_DCH (state 6-9) or PS+CS-DCCH+DTCH_DCH (state 6-14) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) and services supported by the UE. If UE supports PS+CS but only supports streaming service in CS domain then state 6-9, 6-10 are applied.

Specific Message Contents:

System Information Block type 1 (Cell 1)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

System Information Block type 11 (Cell 1)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| - CHOICE report criteria | |
| - Intra-frequency measurement reporting criteria | |
| - Parameters required for each event | 2 kinds |
| - Intra-frequency event identity | 1b |
| - Triggering condition 1 | Active set cells |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | 10(5dB) |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | 1(1.0) |
| - Hysteresis | 0(0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 640 |
| - Amount of reporting | Not Present |
| - Reporting interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Intra-frequency event identity | 1c |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | Not Present |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | Not Present |
| - Hysteresis | 0(0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | 3 |
| - Time to trigger | 640 |
| - Amount of reporting | 4 |
| - Reporting interval | 4 000 |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |

Test Procedure

**Table 8.2.6.39**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -66 | -66 | -60 |

Table 8.2.6.39 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_DCH state, camping onto cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.39. The SS sends a PHYSICAL CHANNEL RECONFIGURATION message requesting the UE to do a timing re-initialised hard handover combined with SRNS relocation. This message includes IE "RRC State Indicator" set to "CELL_DCH", IE “Downlink counter synchronisation info” and IE “Integrity protection mode info”. UE shall reselect to cell 2 and SS verifies that the UE sends PHYSICAL CHANNEL RECONFIGURATION COMPLETE message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in PHYSICAL CHANNEL RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration.

SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM. The UE shall respond to downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS responds with UE CAPABILITY INFORMATION CONFIRM message. SS then send IDENTITY REQUEST message on the DCCH using RLC-AM (SRB3) in order to confirm that the UE can communicate on SRB3 by using new integrity configuration. The UE shall respond IDENTITY RESPONSE message on the uplink DCCH using RLC-AM (SRB3).

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.2.6.39. |
| 3 | ← | | PHYSICAL CHANNEL RECONFIGURATION | If IE “Ciphering mode info” is present in the SECURITY MODE COMMAND during initial condition set-up, this message is sent after last ciphering activation time has elapsed and there is no pending ciphering activation time. New integrity protection configuration is applied on DL SRB2. LAI and RAI of cell 2 are given to the UE, and are the same as cell 1. |
| 4 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE shall transmit this message after it reselects to cell 2. New calculated START value is included. New integrity protection configuration is applied on UL SRB2. If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on UL SRB2 with the downlink and uplink values of the HFN component of COUNT-C for SRB2 incremented by one. |
| 5 | ← | | UE CAPABILITY ENQUIRY | If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on DL SRB2 with the same value as used in step 4. |
| 6 | → | | UE CAPABILITY INFORMATION | |
| 7 | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 8 | ← | | DOWNLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY REQUEST. New integrity protection configuration is applied on DL SRB3. If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on DL SRB3 using the re-initialised COUNT-C HFN by the start value as stored in step 4. |
| 9 | → | | UPLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY RESPONSE. SS confirms that new integrity protection configuration is applied on UL SRB3 by UE. If IE “Ciphering mode info” is present in step 3, new ciphering configuration is applied on UL SRB3 using the re-initialised COUNT-C HFN by the start value as stored in step 4. |
| 10 | ←→ | | Void | |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 3) – for PS domain testing only

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception.

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to "Not present". If network applies ciphering, this IE present with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Set to another algorithm than the one indicated in the SECURITY MODE COMMAND during the initial condition set-up. |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | Not Present |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| Activation Time | Not Present |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not Present. |
| Downlink information common for all radio links<br>- Downlink DPCH info common for all RL<br>- Timing Indication<br>- MAC-d HFN initial value<br>- Default DPCH Offset Value | <br><br>Initialise<br>Not present<br>Arbitrary set to value 0..306688 by step of 512 |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

PHYSICAL CHANNEL RECONFIGURATION (Step 3) – for CS domain testing only

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Non speech in CS" or "Speech in CS", with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to "Not present". If network applies ciphering, this IE present with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Set to another algorithm than the one indicated in the SECURITY MODE COMMAND during the initial condition set-up |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | Not Present |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| Activation Time | Not Present |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not Present. |
| Downlink information common for all radio links<br>- Downlink DPCH info common for all RL<br>- Timing Indication<br>- MAC-d HFN initial value<br>- Default DPCH Offset Value | <br><br>Initialise<br>Not present<br>Arbitrary set to value 0..306688 by step of 512 |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 4) – for PS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Not present<br>Check that this IE is present. |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 4) – for CS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| COUNT-C activation time | In case ciphering is applied by the network, check that this IE is present. |
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Not present<br>Check that this IE is present. |

UE CAPABILITY ENQUIRY (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 6)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Step 7)

Use the same message sub-type found in [9] TS 34.108 clause 9.

#### 8.2.6.39.5 Test requirement

After step 3, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in PHYSICAL CHANNEL RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. The UE, further more, shall apply the new integrity protection configuration for the first received/sent RRC message on SRB0, SRB3, and SRB4 after receiving the PHYSICAL CHANNEL RECONFIGURATION message (i.e. immediately). For SRB2 the new integrity protection configuration shall be applied from and including the received PHYSICAL CHANNEL RECONFIGURATION message (DL) and the sent PHYSICAL CHANNEL RECONFIGURATION COMPLETE message (UL).

After step 5, the UE shall respond with a UE CAPABILITY INFORMATION message to SS.

After step 8, the UE shall respond with an IDENTITY RESPONSE message to SS and apply new ciphering configuration on UL SRB3.

(In the case where ciphering is supported)After step 9, UE shall start new ciphering configuration on the RAB.

### 8.2.6.39a Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving HS-DSCH cell change without MAC-hs reset)

#### 8.2.6.39a.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.2.6.39a.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";

- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

2> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving HS-DSCH radio link;

Reference

3GPP TS 25.331 clause 8.2.2, 8.5.25, 8.6.3.1, 8.6.6.4

### 8.2.6.39a.3 Test purpose

To confirm that the UE changes the serving HS-DSCH cell according to the received PHYSICAL CHANNEL RECONFIGURATION message in case of no MAC-hs reset.

### 8.2.6.39a.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.2.6.39a**

| Parameter | Unit | Cell 1 | | | | Cell 2 | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | Mid Range Test Frequency | | | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -60 | -60 | -70 | -75 | -60 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | – | – | -70 | -70 | – | – | -60 |

NOTE: For TDD, T1 and T2 are not used.

Table 8.2.6.39a illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

SS initiates P25 to make the UE move to state 6-17 as specified in TS34.108 clause7.4. The UE is in CELL_DCH state with the downlink transmission power settings according to values in column “T0” in table 8.2.6.39a and has a radio bearer mapped on HS-DSCH established in cell 1.

For FDD:

SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.39a. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2.

After the MEASUREMENT REPORT message is received, the SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC to add cell 2 to the active set. When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links and cell 1 shall be kept as the serving HS-DSCH cell. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS configures its downlink transmission power settings according to columns "T2" in table 8.2.6.39a. The SS sends a MEASUREMENT CONTROL message to the UE configuring event 1D “Change of best cell”, and the UE shall send an initial MEASUREMENT REPORT which includes the primary scrambling code of cell 1 according to IE "Intra-frequency event identity" set to 1d.

SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.39a. UE shall transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity" set to 1d.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE . At the activation time the UE changes the serving HS-DSCH radio link to cell 2. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

For TDD:

The SS sends a MEASUREMENT CONTROL message to the UE configuring event 1g “Change of best cell”, and the UE shall send an initial MEASUREMENT REPORT which includes Cell parameters Id of cell 1 according to IE "Intra-frequency event identity" set to 1g.

SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.39a. UE shall transmit a MEASUREMENT REPORT message which includes Cell parameters Id of cell 2 ccording to IE "Intra-frequency event identity" set to 1g.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. SS sets up a Radio Link in Cell 2. At the activation time the UE changes the serving HS-DSCH radio link to cell 2. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. Then the SS deletes the Radio Link in Cell 1.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step 0) |
| 0a | SS | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.39a (FDD only). |
| 0b | → | | MEASUREMENT REPORT | See specific message contents for this message (FDD only). |
| 1 | ← | | ACTIVE SET UPDATE | The SS instructs the UE to add cell 2 in the active set (FDD only). |
| 2 | → | | ACTIVE SET UPDATE COMPLETE | The UE adds the radio link in cell 2 (FDD only). |
| 2a | SS | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.2.6.39a (FDD only). |
| 3 | ← | | MEASUREMENT CONTROL | Configure event 1D (FDD) or 1g (TDD) “Change of best cell” |
| 3a | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 4 | SS | | | SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.39a |
| 5 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 7 | SS | | | SS sets up a Radio Link in Cell 2(TDD only). At the activation time, the SS changes the serving HS-DSCH radio link to cell 2. |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE changes the serving HS-DSCH radio link to cell 2 |
| 9 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

MEASUREMENT REPORT (Step 0b) (FDD)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 1) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary scrambling code | Primary scrambling code of Cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH may be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Code number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not present | |
| - TFCI combining indicator | FALSE | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 3) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| - CHOICE measurement type | Intra-frequency measurement |
| - Intra frequency cell info list | Not present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 3 |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/N0 reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1D |
| - Triggering condition 2 | Active set cells |
| - Hysteresis | 8 (4 dB) |
| - Time to trigger | 20 mSec |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active set |
| - Maximum number of reported cells | 3 |
| - Use CIO | FALSE |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 3) (1.28 Mcps TDD, 3.84Mcps TDD and 7.68 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 3 |
| - CHOICE mode | TDD |
| - Measurement quantity | Primary CCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1g |
| - Hysteresis | 4dB (IE value = 8) |
| - Time to trigger | 20 mSec |
| - Reporting cell status | Report cells within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Use CIO | FALSE |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 3a) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1D" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to "Primary scrambling code of Cell 1" |

MEASUREMENT REPORT (Step 3a) (1.28 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 1(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 3a) (3.84 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 1(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 3a) (7.68 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 1(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 5) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1D" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to "Primary scrambling code of Cell 2" |

MEASUREMENT REPORT (Step 5) (1.28 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |

| | |
|---|---|
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 2(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 5) (3.84 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 2(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 5) (7.68 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 2(TDD)" |
| - SCTD indicator | FALSE |

PHYSICAL CHANNEL RECONFIGURATION (Step 6) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - DPCCH power offset | -40 (-80 dB) | |
| - PC Preamble | 1 frame | |
| - SRB delay | 7 frames | |
| - Power Control Algorithm | Algorithm1 | |
| - TPC step size | 0 (1 dB) | |
| - $\Delta_{ACK}$ | 6 | |
| - $\Delta_{NACK}$ | 6 | |
| - Ack-Nack repetition factor | 2 | |
| - Scrambling code type | Long | |
| - Scrambling code number | 0 (0 to 16777215) | |
| - Number of DPDCH | Not Present(1) | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Number of FBI bit | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | FDD | |
| - DL Scrambling Code | Not present | |
| - HS-SCCH Channelisation Code Information | | |
| - HS-SCCH Channelisation Code | 7 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | FDD | |
| - Measurement Power Offset | 12 (6 dB) | |
| - CQI Feedback cycle, k | 4 ms | |
| - CQI repetition factor | 1 | |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) | |
| - CHOICE mode | FDD (no data) | |
| Downlink information common for all radio links | | |
| - MAC-hs reset indicator | Not Present | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | (for cell 1) | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) | |
| - Cell ID | Not Present | |
| - Serving HS-DSCH radio link indicator | FALSE | |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |
| - Downlink information for each radio link | (for cell 2) | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 1 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

PHYSICAL CHANNEL RECONFIGURATION (Step 6) (1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | TDD (no data) | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 1.28 Mcps TDD | |
| - HS-PDSCH Midamble Configuration | | |
| - Midamble Allocation Mode | Default midamble | |
| - Midamble Configuration | 8 | |
| - Midamble Shift | Not present | |
| Downlink information common for all radio links | | |
| - MAC-hs reset indicator | Not Present | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Ref. To the Default setting for cell 1 in TS34.108 clause 6.1 (TDD) | |
| - SCTD indicator | FALSE | |

PHYSICAL CHANNEL RECONFIGURATION (Step 6) (3.84 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9 | |
| Downlink information common for all radio links | | |
| - MAC-hs reset indicator | Not Present | |
| Downlink information per radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 3.84 Mcps TDD | |
| - CHOICE SyncCase | SyncCase 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Ref. To the Default setting for cell 1 in TS34.108 clause 6.1 (TDD) | |
| - SCTD indicator | FALSE | |

PHYSICAL CHANNEL RECONFIGURATION (Step 6) (7.68 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9 | |
| Downlink information common for all radio links | | |
| - MAC-hs reset indicator | Not Present | |
| Downlink information per radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 7.68 Mcps TDD | |
| - CHOICE SyncCase | SyncCase 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Ref. To the Default setting for cell 1 in TS34.108 clause 6.1 (TDD) | |
| - SCTD indicator | FALSE | |

#### 8.2.6.39a.5 Test requirements

After step 0a, the UE shall transmit a MEASUREMENT REPORT message (FDD only).

After step 4, the UE shall transmit a MEASUREMENT REPORT message.

After step 7, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

### 8.2.6.39b Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving HS-DSCH cell change with MAC-hs reset)

#### 8.2.6.39b.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

8.2.6.39b.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";

- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

2> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving HS-DSCH radio link;

…

If the IE "Downlink information common for all radio links " is included the UE shall:

1> if the IE "MAC-hs reset indicator" is included:

2> reset the MAC-hs entity [TS 25.321].

### Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1, 8.6.6.4, 8.6.6.27

8.2.6.39b.3 Test purpose

To confirm that the UE changes the serving HS-DSCH cell according to the received PHYSICAL CHANNEL RECONFIGURATION message, in case of MAC-hs reset.

8.2.6.39b.4 Method of test

Initial Condition

System Simulator:2 cells - Cell 1 and 2 are active

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.2.6.39b**

| Parameter | Unit | Cell 1 | | | | Cell 2 | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | Mid Range Test Frequency | | | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -60 | -60 | -70 | -75 | -60 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | – | – | -70 | -70 | – | – | -60 |

NOTE: For TDD, T1 and T2 are not used.

Table 8.2.6.39b illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is initially in CELL_DCH state with the downlink transmission power settings according to values in column “T0” in table 8.2.6.39b, and has a radio bearer mapped on HS-DSCH established in cell 1.

For FDD

SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.39b. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2.

After the MEASUREMENT REPORT message is received, the SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC to add cell 2 to the active set. When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links and cell 1 shall be kept as the serving HS-DSCH cell. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS configures its downlink transmission power settings according to columns "T2" in table 8.2.6.39b. The SS configures reporting of event 1d “change of best cell” by transmitting a MEASUREMENT CONTROL message to the UE, and the UE shall send an initial MEASUREMENT REPORT which includes the primary scrambling code of cell 1 according to IE "Intra-frequency event identity" set to 1d.

The SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.39b. The UE transmits a MEASUREMENT REPORT message, which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity" set to 1d.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. At the activation time the UE changes the HS-PDSCH configuration. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

For TDD

The SS configures reporting of event 1g "change of best cell" by transmitting a MEASUREMENT CONTROL message to the UE, and the UE shall send an initial MEASUREMENT REPORT which includes the Cell parameters Id of cell 1 according to IE "Intra-frequency event identity" set to 1g.

The SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.39b. The UE transmits a MEASUREMENT REPORT message, which includes the Cell parameters Id of cell 2 according to IE "Intra-frequency event identity" set to 1g.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. SS sets up a Radio Link in Cell 2 At the activation time the UE changes the HS-PDSCH configuration. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. SS deletes the Radio Link in Cell 1

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 2a | | SS | | SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.39b (FDD only). |
| 2b | → | | MEASUREMENT REPORT | See specific message contents for this message (FDD only) |
| 3 | ← | | ACTIVE SET UPDATE | The SS instructs the UE to add cell 2 in the active set (FDD only). |
| 4 | → | | ACTIVE SET UPDATE COMPLETE | The UE adds the radio link in cell 2 (FDD only). |
| 4a | | SS | | SS configures its downlink transmission power settings according to columns "T2" in table 8.2.6.39b (FDD only). |
| 5 | ← | | MEASUREMENT CONTROL | Configure event 1D (FDD) or 1g (TDD) "Change of best cell" |
| 5a | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 6 | | SS | | SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.39b |
| 7 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 8 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 9 | | SS | | SS sets up a Radio Link in Cell 2(TDD only). At the activation time, the SS changes the serving HS-DSCH radio link to cell 2 and performs a MAC-hs reset. |
| 10 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 11 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

MEASUREMENT REPORT (Step 2b) (FDD)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 3) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark | Revision |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary scrambling code | Primary scrambling code of Cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH may be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Code number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not present | |
| - TPC combination index | 1 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not present | |
| - TFCI combining indicator | FALSE | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 5) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| - CHOICE measurement type | Intra-frequency measurement |
| - Intra frequency cell info list | Not present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 3 |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/N0 reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1D |
| - Triggering condition 2 | Active set cells |
| - Hysteresis | 8 (4 dB) |
| - Time to trigger | 20 mSec |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active set |
| - Maximum number of reported cells | 3 |
| - Use CIO | FALSE |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 5) (1.28 Mcps TDD, 3.84Mcps TDD and 7.68 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 3 |
| - CHOICE mode | TDD |
| - Measurement quantity | Primary CCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1G |
| - Hysteresis | 4dB (IE value = 8) |
| - Time to trigger | 20 mSec |
| - Reporting cell status | Report cells within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Use CIO | FALSE |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 5a) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1D" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to "Primary scrambling code of Cell 1" |

MEASUREMENT REPORT (Step 5a) (1.28 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |

| | |
|---|---|
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1G" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 1(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 5a) (3.84 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 1(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 5a) (3.84 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 1(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 7) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1D" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to "Primary scrambling code of Cell 2" |

MEASUREMENT REPORT (Step 7) (1.28 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |

| | |
|---|---|
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1G" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 2(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 7) (3.84 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 2(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 7) (7.68 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 2(TDD)" |
| - SCTD indicator | FALSE |

PHYSICAL CHANNEL RECONFIGURATION (Step 8) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Revision |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - DPCCH power offset | -40 (-80 dB) | |
| - PC Preamble | 1 frame | |
| - SRB delay | 7 frames | |
| - Power Control Algorithm | Algorithm1 | |
| - TPC step size | 0 (1 dB) | |
| - $\Delta_{ACK}$ | 6 | |
| - $\Delta_{NACK}$ | 6 | |
| - Ack-Nack repetition factor | 2 | |
| - Scrambling code type | Long | |
| - Scrambling code number | 0 (0 to 16777215) | |
| - Number of DPDCH | Not Present(1) | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Number of FBI bit | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | FDD | |
| - DL Scrambling Code | Not present | |
| - HS-SCCH Channelisation Code Information | | |
| - HS-SCCH Channelisation Code | 7 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | FDD | |
| - Measurement Power Offset | 12 (6 dB) | |
| - CQI Feedback cycle, k | 4 ms | |
| - CQI repetition factor | 1 | |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) | |
| - CHOICE mode | FDD (no data) | |
| Downlink information common for all radio links | | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | (for cell 1) | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) | |
| - Cell ID | Not Present | |
| - Serving HS-DSCH radio link indicator | FALSE | |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |
| - Downlink information for each radio link | (for cell 2) | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) | |
| - Cell ID | Not Present | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |

| | | |
|---|---|---|
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 1 | |
| - Scrambling code change | No change | |
| - TPC combination index | 1 | |
| - SSDT Cell Identity | Not Present | |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

PHYSICAL CHANNEL RECONFIGURATION (Step 8) (1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | TDD (no data) | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 1.28 Mcps TDD | |
| - HS-PDSCH Midamble Configuration | | |
| - Midamble Allocation Mode | Default midamble | |
| - Midamble Configuration | 8 | |
| - Midamble Shift | Not present | |
| Downlink information common for all radio links | | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Ref. to the Default setting for cell 2 in TS34.108 clause 6.1 (TDD) | |
| - SCTD indicator | FALSE | |

PHYSICAL CHANNEL RECONFIGURATION (Step 6) (3.84 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9 | |
| Downlink information common for all radio links | | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 3.84 Mcps TDD | |
| - CHOICE SyncCase | SyncCase 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Ref. To the Default setting for cell 1 in TS34.108 clause 6.1 (TDD) | |
| - SCTD indicator | FALSE | |

PHYSICAL CHANNEL RECONFIGURATION (Step 6) (7.68 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9 | |
| Downlink information common for all radio links | | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 7.68 Mcps TDD | |
| - CHOICE SyncCase | SyncCase 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Ref. To the Default setting for cell 1 in TS34.108 clause 6.1 (TDD) | |
| - SCTD indicator | FALSE | |

#### 8.2.6.39b.5 Test requirements

After step 2a, the UE shall transmit a MEASUREMENT REPORT message (FDD only).

After step 5, the UE shall transmit a MEASUREMENT REPORT message.

After step 6, the UE shall transmit a MEASUREMENT REPORT message.

After step 9, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

### 8.2.6.39c Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving HS-DSCH cell change without MAC-hs reset) (TDD)

#### 8.2.6.39c.1 Definition and applicability

All UEs which support TDD and HS-PDSCH.

8.2.6.39c.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

2> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving HS-DSCH radio link;

Reference

3GPP TS 25.331 clause 8.2.2, 8.5.25, 8.6.3.1, 8.6.6.4

### 8.2.6.39c.3 Test purpose

To confirm that the UE changes the serving HS-DSCH cell according to the received PHYSICAL CHANNEL RECONFIGURATION message in case of no MAC-hs reset.

### 8.2.6.39c.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active . Each cell configure 3 carriers □one is the primary carrier□the other two are secondary carrier.

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports TDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.2.6.39c**

| Parameter | Unit | Cell 1 | | | | Cell 2 | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | Mid Range Test Frequency | | | |
| P-CCPCH RSCP (TDD) | dBm | -60 | – | – | -70 | -70 | – | – | -60 |

NOTE: For TDD, T1 and T2 are not used.

Table 8.2.6.39c illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

SS initiates P25 to make the UE move to state 6-17 as specified in TS34.108 clause7.4. The UE is in CELL_DCH state with the downlink transmission power settings according to values in column “T0” in table 8.2.6.39c and has a radio bearer mapped on HS-DSCH established in cell 1.

For TDD:

The SS sends a MEASUREMENT CONTROL message to the UE configuring event 1g “Change of best cell”, and the UE shall send an initial MEASUREMENT REPORT which includes Cell parameters Id of cell 1 according to IE "Intra-frequency event identity" set to 1g.

SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.39c. UE shall transmit a MEASUREMENT REPORT message which includes Cell parameters Id of cell 2 ccording to IE "Intra-frequency event identity" set to 1g.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. SS sets up a Radio Link in Cell 2. At the activation time the UE changes the serving HS-DSCH radio link to cell 2. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. Then the SS deletes the Radio Link in Cell 1.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step 0) |
| 0a | SS | | | |
| 0b | → | | MEASUREMENT REPORT | |
| 1 | ← | | ACTIVE SET UPDATE | |
| 2 | → | | ACTIVE SET UPDATE COMPLETE | |
| 2a | SS | | | |
| 3 | ← | | MEASUREMENT CONTROL | Configure event 1g (TDD) “Change of best cell” |
| 3a | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 4 | SS | | | SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.39c |
| 5 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 7 | SS | | | SS sets up a Radio Link in Cell 2(TDD only). At the activation time, the SS changes the serving HS-DSCH radio link to cell 2. |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE changes the serving HS-DSCH radio link to cell 2 |
| 9 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

MEASUREMENT CONTROL (Step 3)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 3 |
| - CHOICE mode | TDD |
| - Measurement quantity | Primary CCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1g |
| - Hysteresis | 4dB (IE value = 8) |
| - Time to trigger | 20 mSec |
| - Reporting cell status | Report cells within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Use CIO | FALSE |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 3a)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 1(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 5)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |

| | |
|---|---|
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1g" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 2(TDD)" |
| - SCTD indicator | FALSE |

PHYSICAL CHANNEL RECONFIGURATION (Step 6)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | TDD (no data) | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 1.28 Mcps TDD | |
| - HS-PDSCH Midamble Configuration | | |
| - Midamble Allocation Mode | Default midamble | |
| - Midamble Configuration | 8 | |
| - Midamble Shift | Not present | |
| Downlink information common for all radio links | | |
| - MAC-hs reset indicator | Not Present | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Ref. To the Default setting for cell 1 in TS34.108 clause 6.1 (TDD) | |
| PhysicalChannelReconfiguration -r5-TDD128-add-ext-IEs | | |
| frequencyInfo | secondary carrier frequency | |
| UpPCHpositionInfo | 22 | |

8.2.6.39c.5 Test requirements

After step 4, the UE shall transmit a MEASUREMENT REPORT message.

After step 7, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

## 8.2.6.40 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Two radio links, change of HS-PDSCH configuration)

### 8.2.6.40.1 Definition and applicability

All UEs which support FDD and HS-PDSCH.

### 8.2.6.40.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1, 8.6.6.4, 8.6.6.27

### 8.2.6.40.3 Test purpose

To confirm that, when two radio links are used, the UE changes HS-DSCH specific uplink DPCH power control and measurement feedback configuration according to the received PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.40.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.2.6.40**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | -70 | -60 |

Table 8.2.6.40 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established in cell 1.

SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.40. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11.The SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC to add cell 2 to the active set. When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links and cell 1 shall be kept as the serving HS-DSCH cell. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. At the activation time the UE changes the HS-PDSCH configuration. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.40. |
| 2 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 3 | ← | | ACTIVE SET UPDATE | The SS instructs the UE to add cell 2 in the active set. |
| 4 | → | | ACTIVE SET UPDATE COMPLETE | The UE adds the radio link in cell 2. |
| 5 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

MEASUREMENT REPORT (Step 2)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 3)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary scrambling code | Primary scrambling code of Cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH may be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Code number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not present | |
| - TPC combination index | 1 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not present | |
| - TFCI combining indicator | FALSE | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |

PHYSICAL CHANNEL RECONFIGURATION (Step 5)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |
| CHOICE channel requirement | Uplink DPCH info |
| - Uplink DPCH power control info | |
| - DPCCH power offset | -40 (-80 dB) |
| - PC Preamble | 1 frame |
| - SRB delay | 7 frames |
| - Power Control Algorithm | Algorithm1 |
| - TPC step size | 0 (1 dB) |
| - $\Delta_{ACK}$ | 6 |
| - $\Delta_{NACK}$ | 6 |
| - Ack-Nack repetition factor | 2 |
| - Scrambling code type | Long |
| - Scrambling code number | 0 (0 to 16777215) |
| - Number of DPDCH | Not Present(1) |
| - spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of FBI bit | Reference to TS34.108 clause 6.10 Parameter Set |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set |
| Downlink HS-PDSCH Information | |
| - HS-SCCH Info | Not present |
| - Measurement Feedback Info | |
| - CHOICE mode | FDD |
| - Measurement Power offset | 12 (6 dB) |
| - CQI Feedback cycle, k | 8 ms |
| - CQI repetition factor | 2 |
| - $\Delta_{CQI}$ | 4 |
| - CHOICE mode | FDD (no data) |
| Downlink information common for all radio links | Not present |
| Downlink information for each radio link list | Not present |

#### 8.2.6.40.5 Test requirements

After step 1, the UE shall transmit a MEASUREMENT REPORT message.

After step 5, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

### 8.2.6.40a Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (change of HS-PDSCH configuration)

#### 8.2.6.40a.1 Definition and applicability

All UEs which support TDD and HS-PDSCH.

#### 8.2.6.40a.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover..

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.25, 8.6.3.1, 8.6.6.4, 8.6.6.27

### 8.2.6.40a.3 Test purpose

To confirm that, the UE changes HS-DSCH specific HS-SCCH configuration according to the received PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.40a.4 Method of test

Initial Condition

System Simulator:1 cells - Cell 1

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established in cell 1.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. At the activation time the UE changes the HS-PDSCH configuration. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| **0** | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step 0) |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION<br><br>COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| **Information Element** | **Value/remark** |
|---|---|
| Downlink HS-PDSCH Information | |
| - HS-SCCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps |
| - HS-SCCH Set Configuration | |
| - Timeslot number | 0 |
| - First Channelisation code | (16/5) |
| - Second Channelisation code | (16/6) |
| - Midamble Allocation mode | Default midamble |
| - Midamble configuration | 8 |
| - BLER target | -20 |
| - HS-SICH configuration | |
| - Timeslot number | 1 |
| - Channelisation code | (16/11) |
| - Midamble Allocation mode | Default midamble |
| - Midamble configuration | 8 |
| - Ack-Nack Power Offset | 0 |
| - PRXHS-SICH | |
| - TPC step size | 1dB |
| - Timeslot number | 0 |
| - First Channelisation code | (16/7) |
| - Second Channelisation code | (16/8) |
| - Midamble Allocation mode | Default midamble |
| - Midamble configuration | 8 |
| - BLER target | -20 |
| - HS-SICH configuration | |
| - Timeslot number | 1 |

| | |
|---|---|
| - Channelisation code | (16/12) |
| - Midamble Allocation mode | Default midamble |
| - Midamble configuration | 8 |
| - Ack-Nack Power Offset | 0 |
| - $PRX_{HS-SICH}$ | |
| - TPC step size | 1dB |

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| **Information Element** | **Value/remark** |
|---|---|
| Frequency info | Not Present |
| Maximum allowed UL TX power | Not Present |
| Downlink HS-PDSCH Information | |
| - HS-SCCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps |
| - HS-SCCH Set Configuration | |
| - Timeslot number | 0 |
| - First Channelisation code | (16/9) |
| - Second Channelisation code | (16/10) |
| - Midamble Allocation mode | Default midamble |
| - Midamble configuration | 8 |
| - BLER target | -20 |
| - HS-SICH configuration | |
| - Timeslot number | 1 |
| - Channelisation code | (16/13) |
| - Midamble Allocation mode | Default midamble |
| - Midamble configuration | 8 |
| - Ack-Nack Power Offset | 0 |
| - PRXHS-SICH | |
| - TPC step size | 1dB |
| - Timeslot number | 0 |
| - First Channelisation code | (16/11) |
| - Second Channelisation code | (16/12) |
| - Midamble Allocation mode | Default midamble |
| - Midamble configuration | 8 |
| - BLER target | -20 |
| - HS-SICH configuration | |
| - Timeslot number | 1 |
| - Channelisation code | (16/14) |
| - Midamble Allocation mode | Default midamble |
| - Midamble configuration | 8 |
| - Ack-Nack Power Offset | 0 |
| - $PRX_{HS-SICH}$ | |

| | |
|---|---|
| - TPC step size | 1dB |
| Downlink information common for all radio links | Not present |
| Downlink information for each radio link list | Not present |

#### 8.2.6.40a.5 Test requirements

After step 1, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

### 8.2.6.41 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialised hard handover to another frequency, signalling only)

#### 8.2.6.41.1 Definition and applicability

#### 8.2.6.41.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

1> the procedure ends.

…

If IE "Timing indication" has the value "initialise", UE shall:

1> execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

Reference

3GPP TS 25.331 clause 8.2.2, 8.3.5.1.2.

#### 8.2.6.41.3 Test purpose

To confirm that the UE makes a timing re-initialised interfrequency hard handover on a signalling only configuration without prior measurement on the target frequency according to the received PHYSICAL CHANNEL RECONFIGURATION message.

#### 8.2.6.41.4 Method of test

Initial Condition

System Simulator: 2 cells–Cells 1 and 6 are active.

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Test Procedure

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE, which includes new frequency information and IE "Timing indicator" set to initialise. The UE shall reconfigure the physical channel parameters according to PHYSICAL CHANNEL RECONFIGURATION message and establish a radio link with the SS using a dedicated physical channel in cell 6. The UE then transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message in cell 6 on the uplink DCCH AM RLC after its transition. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | Not Present | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to the scrambling code for cell 6 | |
| - Cell ID | Not present | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

### 8.2.6.41.5 Test requirements

After step 1, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC in cell 6.

## 8.2.6.42 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, Serving HS-DSCH cell change)

### 8.2.6.42.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

### 8.2.6.42.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

1> the procedure ends.

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> the UE has a stored IE "HARQ info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> for 3.84 Mcps TDD or 7.68 Mcps TDD, the UE has stored the IE "HS-PDSCH Timeslot Configuration" and either of the following conditions are met:

2> a dedicated physical channel is allocated to the UE in the downlink;

2> the UE has stored $D_{hs\text{-}sync}$.

1> for 1.28 Mcps TDD, the UE has stored the following IE:

- IE "HS-PDSCH Midamble Configuration".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link, for TDD add/remove H-RNTI upon hard handover.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

…

If IE "Timing indication" has the value "initialise", UE shall:

1> execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration in FDD or 1.28 Mcps TDD caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for an HS-DSCH related reconfiguration in 3.84 Mcps TDD or 7.68 Mcps TDD caused by the received message:

3> start using, at activation time T, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: In FDD an "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "New H-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the value in the variable H_RNTI;

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.3.5.1.2, 8.5.25, 8.6.3.1, 8.6.3.1b, 8.6.6.4, 8.6.6.27

### 8.2.6.42.3 Test purpose

To confirm that the UE is able to perform a timing re-initialised hard handover to another frequency without prior measurement on the target frequency in conjunction with a serving HS-DSCH cell change according to the received PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.42.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 on frequency $f_1$, and cell2 on frequency $f_2$. Cells 1 and 2 have different primary scrambling codes (FDD only),

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established in cell 1.

SS initiates P25 to make the UE move to state 6-17 as specified in TS34.108 clause7.4. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE ordering the UE to change to Cell 2 on frequency $f_2$. At the activation time the UE changes to Cell 2 keeping the HS-PDSCH configuration. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step 0) |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS instructs the UE to change to Cell 2. |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 2 | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - DPCCH power offset | -40 (-80 dB) | |
| - PC Preamble | 1 frame | |
| - SRB delay | 7 frames | |
| - Power Control Algorithm | Algorithm1 | |
| - TPC step size | 0 (1 dB) | |
| - $\Delta_{ACK}$ | 6 | |
| - $\Delta_{NACK}$ | 6 | |
| - Ack-Nack repetition factor | 2 | |
| - Scrambling code type | Long | |
| - Scrambling code number | 0 (0 to 16777215) | |
| - Number of DPDCH | Not Present(1) | |
| - spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Number of FBI bit | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | FDD | |
| - DL Scrambling Code | | |
| - HS-SCCH Channelisation Code Information | | |
| - HS-SCCH Channelisation Code | 7 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | FDD | |
| - Measurement Power Offset | 12 (6 dB) | |
| - CQI Feedback cycle, k | 4 ms | |
| - CQI repetition factor | 1 | |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) | |
| - CHOICE mode | FDD (no data) | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |

| Information Element | Value/remark | Version |
|---|---|---|
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to the scrambling code for cell 2 | |
| - Cell ID | Not present | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Secondary scrambling code | Not present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (3.84 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same downlink UARFCN as used for cell 2 | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - CHOICE mode | TDD | |
| - UL target SIR | 6 | |
| - CHOICE *UL OL PC info* | Individually Signalled | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - Individual timeslot interference info | Reference to TS34.108 clause 6.10.3 Parameter Set | |
| - Individual timeslot interference | | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - Timeslot number | As required by, Reference to TS34.108 clause 6.10.3 Parameter Set | |
| - TDD UL interference | As required by, Reference to TS34.108 clause 6.10.3 Parameter Set (if not specified -60 dBm) | |
| - Primary CCPCH Tx Power | 18 Integer(6..43) (-70 dBm Received if pathloss not specified) | |
| - CHOICE mode | TDD | |
| - Uplink Timing Advance Control | | |
| - CHOICE Timing Advance | Enabled | |
| - CHOICE TDD option | 3.84 Mcps TDD (Default) | |
| - UL CCTrCH List | | |
| - TFCS ID | 1 | |
| - UL Target SIR | Real (-11 .. 20 by step of 0.5dB) Reference to TS34.108 Parameter set. | |
| - Time info | | |
| - Activation time | (256+CFN-(CFN MOD 8 + 8))MOD 256 | |
| - Duration | Infinite | |
| - Common timeslot info | | |
| - 2nd interleaving mode | Default value is "Frame" | |
| - TFCI coding | Reference to TS34.108 clause 6 Parameter set | |
| - Puncturing limit | Reference to TS34.108 clause 6 Parameter set | |
| - Repetition period | 1 | |
| - Repetition length | Null | |
| - Uplink DPCH timeslots and code | | |
| - Dynamic SF usage | FALSE | |
| - First individual timeslot info | | |
| - Timeslot number | | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - Timeslot number | 1 OR 2 OR 3 | |
| - TFCI existence | TRUE | |
| - Midamble shift and burst type | | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - Midamble allocation mode | Default midamble | |
| - Midamble configuration | 16 | |
| - Midamble Shift | Not Present | |
| - CHOICE TDD option | 3.84 Mcps TDD (No Data) | |
| - First timeslot Code List | Repeated (1,2) for each channelisation code assigned in the slot to meet the needs of TS34.108 clause 6 Parameter Set. | |
| - channelisation codes | (SF/ i) where i denotes an unassigned code matching the SF specified in TS34.108 clause 6 Parameter Set. | |
| - CHOICE more timeslots | No more timeslots (No Data) | |
| - UL CCTrCH List to Remove | Not present | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Ack-Nack Power Offset | 0dB | |
| - HS-SICH Power Control Info | | |
| - UL SIR target | 0dB | |
| - HS-SICH Constant Value | -10dB | |
| - $D_{hs\text{-}sync}$ | Not present | |
| - HS-SCCH Set Configuration | 4 | |
| - Timeslot number | The timeslot in which HS-SCCH is to be configured | |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS | |
| - Midamble Allocation mode | Default | |
| - Midamble configuration | 8 | |
| - BLER target | -2.4 (note that this equates to a BLER target of 0.4%, log10(0.004) = -2.4) | |
| - HS-SICH configuration | | |
| - Timeslot number | The timeslot in which HS-SICH is to be configured | |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS | |
| - Midamble Allocation mode | Default | |
| - Midamble configuration | 8 | |
| - Measurement Feedback Info | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - HS-PDSCH Timeslot Configuration | | |
| - HS-PDSCH Timeslot Configuration List | Reference to clause 6.10 Parameter Set | |
| - Timeslot Number | The timeslot(s) in which HS-HS-DSCH is to be configured | |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set | |
| - Midamble Allocation Mode | Default | |
| - Midamble configuration burst type 1 and 3 | 8 | |
| Downlink information common for all radio links | | |
| - CHOICE DPCH info | Downlink DPCH info common for all RL | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - CHOICE mode | TDD | |
| - TPC Step Size | 1 | |
| - MAC-d HFN initial value | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - Default DPCH Offset Value | Not Present | |
| - Mac-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - CHOICE SyncCase | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Set to cell parameter ID of cell2 | |
| - SCTD indicator | FALSE | |
| - CHOICE DPCH info | Downlink DPCH info for each RL | Rel-6 |
| - CHOICE mode | TDD | |
| - DL CCTrCH List | 1 CCTrCh | |
| - TFCS ID | 1 | |
| - Activation time | Not Present | |
| - Duration | Not Present | |
| - Common timeslot info | | |
| - 2nd interleaving mode | Reference to clause 6.10 Parameter Set | |
| - TFCI coding | Reference to clause 6.10 Parameter Set | |
| - Puncturing Limit | Reference to clause 6.10 Parameter Set | |
| - Repetition Period | Reference to clause 6.10 Parameter Set | |
| - Repetition Length | Reference to clause 6.10 Parameter Set | |
| - Downlink DPCH timeslots and codes | | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Individual timeslot info | | |
| - Timeslot number | The number of a downlink timeslot that has unassigned codes. | |
| - TFCI existence | TRUE | |
| - Midamble shift and burst type | | |
| - CHOICE TDD option | 3.84 Mcps | |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set | |
| - Midamble Allocation Mode | Default | |
| - Midamble configuration | Set Kcell to lowest possible value given the number of codes defined in clause 6.10 Parameter Set | |
| - CHOICE TDD option | 3.84 Mcps | |
| - First timeslot channelisation codes | | |
| - CHOICE codes representation | Consecutive codes | |
| - First channelisation code | (i/SF) where i is the lowest numbered code that is being assigned and SF is specified in clause 6.10 Parameter Set. | |
| - Last channelisation code | (j/SF) where j is the highest numbered code that is being assigned in the slot as specified in clause 6.10 Parameter Set. | |
| - CHOICE more timeslots | The presence of this IE depends upon whether the requirements of clause 6.10 Parameter Set t could be met by the codes that have been assigned in the first timeslot. | |
| - UL CCTrCH TPC List | 1 | |
| - UL TPC TFCS Identity | | |
| - TFCS ID | 1 | |
| - Shared channel indicator | False | |
| - DL CCTrCH List to Remove | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| - E-AGCH Info | Not Present | Rel-6 |
| - CHOICE E-HICH Information | Not Present | Rel-6 |
| - CHOICE E-RGCH Information | Not Present | Rel-6 |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - UARFCN (Nt) | Same UARFCN as used for cell 2 | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 1.28 Mcps | |
| - HS-SCCH Set Configuration | | |
| - Timeslot number | 0 | |
| - First Channelisation code | (16/15) | |
| - Second Channelisation code | (16/16) | |
| - Midamble Allocation mode | Default midamble | |
| - Midamble configuration | 8 | |
| - BLER target | -20 | |
| - HS-SICH configuration | | |
| - Timeslot number | 1 | |
| - Channelisation code | (16/7) | |
| - Midamble Allocation mode | Default midamble | |
| - Midamble configuration | 8 | |
| - Ack-Nack Power Offset | 0 | |
| - $PRX_{HS-SICH}$ | | |
| - TPC step size | 1dB | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Downlink DPCH power control information | Not Present | |
| - MAC-d HFN initial value | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Default DPCH Offset Value | Not Present | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | | |
| Downlink information for each radio link | | |
| - CHOICE mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Cell parameters ID | Set to the Cell parameters ID for cell 2 | |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (3.84 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same downlink UARFCN as used for cell 2 | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - CHOICE mode | TDD | |
| - UL target SIR | 6 | |
| - CHOICE *UL OL PC info* | Individually Signalled | |
| - CHOICE TDD option | 7.68 Mcps TDD | |
| - Individual timeslot interference info | Reference to TS34.108 clause 6.11.6 Parameter Set | |
| - Individual timeslot interference | | |
| - CHOICE TDD option | 7.68 Mcps TDD | |
| - Timeslot number | As required by, Reference to TS34.108 clause 6.11.6 Parameter Set | |
| - TDD UL interference | As required by, Reference to TS34.108 clause 6.11.6 Parameter Set (if not specified -60 dBm) | |
| - Primary CCPCH Tx Power | 18 Integer(6..43) (-70 dBm Received if pathloss not specified) | |
| - CHOICE mode | TDD | |
| - Uplink Timing Advance Control | | |
| - CHOICE Timing Advance | Enabled | |
| - CHOICE TDD option | 7.68 Mcps TDD (Default) | Rel-7 |
| - UL CCTrCH List | | |
| - TFCS ID | 1 | |
| - UL Target SIR | Real (-11 .. 20 by step of 0.5dB) Reference to TS34.108 Parameter set. | |
| - Time info | | |
| - Activation time | (256+CFN-(CFN MOD 8 + 8))MOD 256 | |
| - Duration | Infinite | |
| - Common timeslot info | | |
| - 2nd interleaving mode | Default value is "Frame" | |
| - TFCI coding | Reference to TS34.108 clause 6 Parameter set | |
| - Puncturing limit | Reference to TS34.108 clause 6 Parameter set | |
| - Repetition period | 1 | |
| - Repetition length | Null | |
| - Uplink DPCH timeslots and codes VHCR | | Rel-7 |
| - Dynamic SF usage | FALSE | |
| - First individual timeslot info | | |
| - Timeslot number | | |
| - CHOICE TDD option | 7.68 Mcps TDD | Rel-7 |
| - Timeslot number | 1 OR 2 OR 3 | |
| - TFCI existence | TRUE | |
| - Midamble shift and burst type | | |
| - CHOICE TDD option | 7.68 Mcps TDD | Rel-7 |
| - Midamble allocation mode | Default midamble | |
| - Midamble configuration | 8 | |
| - Midamble Shift | Not Present | |
| - CHOICE TDD option | 7.68 Mcps TDD (No Data) | Rel-7 |
| - First timeslot Code List | Repeated (1,2) for each channelisation code assigned in the slot to meet the needs of TS34.108 clause 6 Parameter Set. | |
| - channelisation codes | (SF/ i) where i denotes an unassigned code matching the SF specified in TS34.108 clause 6 Parameter Set. | |
| - CHOICE more timeslots | No more timeslots (No Data) | |
| - UL CCTrCH List to Remove | Not present | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Ack-Nack Power Offset | 0dB | |
| - HS-SICH Power Control Info | | |
| - UL SIR target | 0dB | |
| - HS-SICH Constant Value | -10dB | |
| - $D_{hs\text{-}sync}$ | Not present | |
| - HS-SCCH Set Configuration | 4 | |
| - Timeslot number | The timeslot in which HS-SCCH is to be configured | |
| - Channelisation code | CC32/x where x is a previously unassigned channelisation code in this TS | |
| - Midamble Allocation mode | Default | |
| - Midamble configuration | 8 | |
| - BLER target | -2.4 (note that this equates to a BLER target of 0.4%, log10(0.004) = -2.4) | |
| - HS-SICH configuration | | |
| - Timeslot number | The timeslot in which HS-SICH is to be configured | |
| - Channelisation code | CC32/x where x is a previously unassigned channelisation code in this TS | |
| - Midamble Allocation mode | Default | |
| - Midamble configuration | 8 | |
| - Measurement Feedback Info | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps TDD | Rel-7 |
| - HS-PDSCH Timeslot Configuration VHCR | | Rel-7 |
| - HS-PDSCH Timeslot Configuration List | Reference to clause 6.11.6 Parameter Set | |
| - Timeslot Number | The timeslot(s) in which HS-HS-DSCH is to be configured | |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set | |
| - Midamble Allocation Mode | Default | |
| - Midamble configuration burst type 1 and 3 | 8 | |
| Downlink information common for all radio links | | |
| - CHOICE DPCH info | Downlink DPCH info common for all RL | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - CHOICE mode | TDD | |
| - TPC Step Size | 1 | |
| - MAC-d HFN initial value | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps TDD | Rel-7 |
| - Default DPCH Offset Value | Not Present | |
| - Mac-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps TDD | Rel-7 |
| - CHOICE SyncCase | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Set to cell parameter ID of cell2 | |
| - SCTD indicator | FALSE | |
| - CHOICE DPCH info | Downlink DPCH info for each RL | Rel-6 |
| - CHOICE mode | TDD | |
| - DL CCTrCH List | 1 CCTrCh | |
| - TFCS ID | 1 | |
| - Activation time | Not Present | |
| - Duration | Not Present | |
| - Common timeslot info | | |
| - 2nd interleaving mode | Reference to clause 6.11.6 Parameter Set | |
| - TFCI coding | Reference to clause 6.11.6 Parameter Set | |
| - Puncturing Limit | Reference to clause 6.11.6 Parameter Set | |
| - Repetition Period | Reference to clause 6.11.6 Parameter Set | |
| - Repetition Length | Reference to clause 6.11.6 Parameter Set | |
| - Downlink DPCH timeslots and codes VHCR | | Rel-7 |

| Information Element | Value/remark | Version |
|---|---|---|
| - First Individual timeslot info | | |
| - Timeslot number | The number of a downlink timeslot that has unassigned codes. | |
| - TFCI existence | TRUE | |
| - Midamble shift and burst type | | |
| - CHOICE TDD option | 7.68 Mcps | Rel-7 |
| - CHOICE Burst Type | Reference to clause 6.11.6 Parameter Set | |
| - Midamble Allocation Mode | Default | |
| - Midamble configuration | Set Kcell to lowest possible value given the number of codes defined in clause 6.11.6 Parameter Set | |
| - CHOICE TDD option | 7.68 Mcps | |
| - First timeslot channelisation codes VHCR | | Rel-7 |
| - CHOICE codes representation | Consecutive codes | |
| - First channelisation code | (i/SF) where i is the lowest numbered code that is being assigned and SF is specified in clause 6.11.6 Parameter Set. | |
| - Last channelisation code | (j/SF) where j is the highest numbered code that is being assigned in the slot as specified in clause 6.11.6 Parameter Set. | |
| - CHOICE more timeslots | The presence of this IE depends upon whether the requirements of clause 6.11.6 Parameter Set t could be met by the codes that have been assigned in the first timeslot. | |
| - UL CCTrCH TPC List | 1 | |
| - UL TPC TFCS Identity | | |
| - TFCS ID | 1 | |
| - Shared channel indicator | False | |
| - DL CCTrCH List to Remove | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| - E-AGCH Info | Not Present | Rel-6 |
| - CHOICE E-HICH Information | Not Present | Rel-6 |
| - CHOICE E-RGCH Information | Not Present | Rel-6 |

#### 8.2.6.42.5 Test requirements

After step 1, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

### 8.2.6.43 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Seamless SRNS relocation with pending of ciphering)

#### 8.2.6.43.1 Definition

#### 8.2.6.43.2 Conformance requirement

<from sub-clause 8.2.2. 3>

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message:

it shall:

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> if the received reconfiguration message included the IE "Downlink counter synchronisation info"; or

…

2> if the variable PDCP_SN_INFO is empty:

3> configure the corresponding RLC entity for all AM and UM radio bearers and AM and UM signalling radio bearers except RB2 to "stop".

2> else:

…

2> re-establish the RLC entity for RB2;

2> for the downlink and the uplink, apply the ciphering configuration as follows:

3> if the received re-configuation message included the IE "Ciphering Mode Info":

4> use the ciphering configuration in the received message when transmitting the response message.

3> if the ciphering configuration for RB2 from a previously received SECURITY MODE COMMAND has not yet been applied because the activation times not having been reached:

4> if the previous SECURITY MODE COMMAND was received due to new keys being received:

5> consider the new ciphering configuration to include the received new keys;

5> initialise the HFN component of the uplink COUNT-C and downlink COUNT-C of SRB2 as indicated in TS 25.331 subclause 8.1.12.3.1.

4> if the ciphering configuration for RB2 from a previously received SECURITY MODE COMMAND has not yet been applied because of the corresponding activation times not having been reached and the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:

5> consider the new ciphering configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN;

5> initialise the HFN component of the uplink COUNT-C and downlink COUNT-C of SRB2 to the most recently transmitted IE "START list" or IE "START" for the LATEST_CONFIGURED_CN_DOMAIN at the reception of the previous SECURITY MODE COMMAND.

4> apply the new ciphering configuration immediately following RLC re-establishment.

3> else:

4> continue using the current ciphering configuration.

2> set the new uplink and downlink HFN of RB2 to MAX(uplink HFN of RB2, downlink HFN of RB2);

2> increment by one the downlink and uplink HFN values for RB2;

2> calculate the START value according to TS 25.331 subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info".

<from sub-clause 8.6.3.4>

1> for the downlink and the uplink, apply the new ciphering configuration as follows:

2> if the ciphering configuration for a AM or UM radio bearer or signalling radio bearer from a previously received SECURITY MODE COMMAND has not yet been applied because of the corresponding activation times not having been reached and the current received message includes the IE "DL Counter Synch Info" or the current received message is a RADIO BEARER RECONFIGURATION message and includes the IE "New U-RNTI":

3> if the previous SECURITY MODE COMMAND was received due to new keys being received:

4> consider the new ciphering configuration to include the received new keys.

3> else if the previous SECURITY MODE COMMAND caused a change in LATEST_CONFIGURED_CN_DOMAIN:

4> consider the new ciphering configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN.

2> apply the new ciphering configuration in uplink and downlink immediately following RLC re-establishment.

2> if the IE "Ciphering activation time for DPCH" is present in the IE "Ciphering mode info" and the UE was in CELL_DCH state prior to this procedure:

3> for radio bearers using RLC-TM:

4> apply the old ciphering configuration for CFN less than the number indicated in the IE "Ciphering activation time for DPCH";

…

2> if the IE "Radio bearer downlink ciphering activation time info" is present:

3> apply the following procedure for each radio bearer and signalling radio bearers using RLC-AM or RLC-UM indicated by the IE "RB identity":

4> suspend uplink transmission on the radio bearer or the signalling radio bearer (except for the SRB where the response message is transmitted) according to the following:

5> do not transmit RLC PDUs with sequence number greater than or equal to the uplink activation time, where the uplink activation time is selected according to the rules below.

4> select an "RLC sequence number" at which (activation) time the new ciphering configuration shall be applied in uplink for that radio bearer according to the following:

5> consider a ciphering activation time in uplink to be pending until the RLC sequence number of the next RLC PDU to be transmitted for the first time is equal to or larger than the selected activation time;

5> for each radio bearer and signalling radio bearer that has no pending ciphering activation time in uplink as set by a previous procedure changing the security configuration:

...

5> for each radio bearer and signalling radio bearer that has a pending ciphering activation time in uplink as set by a previous procedure changing the security configuration:

6> for radio bearers and signalling radio bearers except SRB2:

7> set the same value as the pending ciphering activation time.

6> for signalling radio bearer SRB2:

7> set a suitable value that would ensure a minimised delay in the change to the latest ciphering configuration.

4> store the selected "RLC sequence number" for that radio bearer in the entry for the radio bearer in the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

4> switch to the new ciphering configuration according to the following:

5> use the old ciphering configuration for the transmitted and received RLC PDUs with RLC sequence numbers smaller than the corresponding RLC sequence numbers indicated in the IE "Radio bearer uplink ciphering activation time info" sent to UTRAN and in the received IE "Radio bearer downlink ciphering activation time info" received from UTRAN, respectively;

5> use the new ciphering configuration for the transmitted and received RLC PDUs with RLC sequence numbers greater than or equal to the corresponding RLC sequence numbers indicated in the IE "Radio bearer uplink ciphering activation time info" sent to UTRAN and in the received IE "Radio bearer downlink ciphering activation time info" received from UTRAN, respectively;

5> for a radio bearer using RLC-AM, when the RLC sequence number indicated in the IE "Radio bearer downlink ciphering activation time info" falls below the RLC receiving window and the RLC sequence number indicated in the IE "Radio bearer uplink ciphering activation time info" falls below the RLC transmission window, the UE may release the old ciphering configuration for that radio bearer;

5> if an RLC reset or re-establishment occurs before the activation time for the new ciphering configuration has been reached, ignore the activation time and apply the new ciphering configuration both in uplink and downlink immediately after the RLC reset or RLC re-establishment.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.6.3.4.

### 8.2.6.43.3 Test purpose

To confirm that the UE includes the previously received new keys from the last SECURITY MODE COMMAND in the new ciphering configuration in the case the ciphering configuration for RB2 from the last received SECURITY MODE COMMAND has not yet been applied because the activation times not having been reached .

### 8.2.6.43.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2

UE: PS-DCCH+DTCH_DCH (state 6-10) or CS-DCCH+DTCH_DCH (state 6-9) or PS+CS-DCCH+DTCH_DCH (state 6-14) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

**Table 8.2.6.43**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -75 | -75 | -60 |

Table 8.2.6.43 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_DCH state, camping onto cell 1. SS sends a new ciphering key followed by a SECURITY MODE COMMAND message (step 1) to UE. The UE shall respond with a SECURITY MODE COMPLETE message. SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.43. The SS sends a PHYSICAL CHANNEL RECONFIGURATION message requesting the UE to do a handover combined with SRNS relocation, before the activation time indicated in step 1 lapsed. This message includes IE "RRC State Indicator" set to "CELL_DCH", IE “Downlink counter synchronisation info”, IE “Ciphering mode info”, the IE “Integrity protection mode info” and the IE “Timing Indication” set to “initialise”.

UE shall reselect to cell 2 and SS verifies that the UE sends PHYSICAL CHANNEL RECONFIGURATION COMPLETE message. This message also includes a calculated new START value according to the formula “$START_X'$ = $MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the neww $CK_X$ and $IK_X$ from step 1}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in PHYSICAL CHANNEL RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration.

SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM. The UE shall respond to downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS responds with UE CAPABILITY INFORMATION CONFIRM message. SS then send IDENTITY REQUEST message on the DCCH using RLC-AM (SRB3) in order to confirm that the UE can communicate on SRB3 by using new integrity configuration and ciphering configuration. The UE shall respond with an IDENTITY RESPONSE message on the uplink DCCH using RLC-AM (SRB3).

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | SECURITY MODE COMMAND | |
| 2 | → | | SECURITY MODE COMPLETE | |
| 3 | | | Void | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.2.6.43. |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | This message is sent before last ciphering activation time has elapsed and hence there is a pending ciphering activation time. New integrity protection configuration is applied on DL SRB2. LAI and RAI of cell 2 are given to the UE, and are the same as cell 1. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE shall transmit this message after it reselects to cell 2. New calculated START value is included. New integrity protection configuration is applied on UL SRB2. New ciphering configuration is applied on UL SRB2 with the downlink and uplink values of the HFN component of COUNT-C for SRB2 is incremented by one. |
| 6 | ← | | UE CAPABILITY ENQUIRY | New ciphering configuration is applied on DL SRB2 with the same value as used in step 5. |
| 7 | → | | UE CAPABILITY INFORMATION | |
| 8 | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 9 | ← | | DOWNLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY REQUEST. New integrity protection configuration is applied on DL SRB3. New ciphering configuration is applied on DL SRB3 using the re-initialised COUNT-C HFN by the start value as stored in step 5. |
| 10 | → | | UPLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY RESPONSE. SS confirms that new integrity protection configuration is applied on UL SRB3 by UE. New ciphering configuration is applied on UL SRB3 using the re-initialised COUNT-C HFN by the start value as stored in step 5. |

Specific Message Contents

SECURITY MODE COMMAND (Step 1) – for PS domain testing only

The contents of SECURITY MODE COMMAND message are identical to the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA0 or UEA1 |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+50 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+50 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+50 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+50 |
| - RB identity | 20 |
| - RLC sequence number | Current RLC SN+50 |

SECURITY MODE COMMAND (Step 1) – for CS domain testing only

The contents of SECURITY MODE COMMAND message are identical to the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | UEA0 or UEA1 |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256 |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN+50 |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+50 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN+50 |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN+50 |

PHYSICAL CHANNEL RECONFIGURATION (Step 4) – for PS domain testing only

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | This IE is present with the values of the sub IEs as stated below only if the ciphering algorithm is changed. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | This IE is present with the values of the sub IEs as stated below only if the ciphering algorithm is changed. |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | Not present |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| Activation time | Not present |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not Present. |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indication | Initialise |
| - MAC-d HFN initial value | Not present |
| - Default DPCH Offset Value | Present |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

PHYSICAL CHANNEL RECONFIGURATION (Step 4) – for CS domain testing only

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Non speech in CS” or “Speech in CS”, with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | This IE is present with the values of the sub IEs as stated below only if the ciphering algorithm is changed. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Set to another algorithm than the one indicated in the SECURITY MODE COMMAND during the initial condition set-up. |
| - Ciphering activation time for DPCH | Not present |
| - Radio bearer downlink ciphering activation time info | Not present |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| Activation time | Not present |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not Present. |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing Indication | Initialise |
| - MAC-d HFN initial value | Not present |
| - Default DPCH Offset Value | Present |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 5) – for PS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Not present<br>Check that this IE is present. |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 5) – for CS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| COUNT-C activation time | Check that this IE is present. |
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Not present<br>Check that this IE is present. |

UE CAPABILITY ENQUIRY (Step 6)

Use the same message sub-type found in [9] TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 7)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Step 8)

Use the same message sub-type found in [9] TS 34.108 clause 9.

#### 8.2.6.43.5 Test requirement

After step 1, UE shall transmit a SECURITY MODE COMPLETE message on the uplink DCCH using AM RLC.

After step 4, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the new $CK_X$ and $IK_X$ from step 1}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in PHYSICAL CHANNEL RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. The UE, further more, shall apply the new ingerity protection configuration for the first received/sent RRC message on SRB0, SRB3, and SRB4 after receiving the PHYSICAL CHANNEL RECONFIGURATION message (i.e. immediately). For SRB2 the new integrity protection configuration shall be applied from and including the received PHYSICAL CHANNEL RECONFIGURATION message (DL) and the sent PHYSICAL CHANNEL RECONFIGURATION COMPLETE message (UL).

After step 6, the UE shall respond with a UE CAPABILITY INFORMATION message to SS.

After step 9, the UE shall respond with an UPLINK DIRECT TRANSFER message to SS and apply new ciphering configuration on UL SRB3.

### 8.2.6.44 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Failure (Radio link failure in new configuration)

#### 8.2.6.44.1 Definition

#### 8.2.6.44.2 Conformance requirement

<from sub-clause 8.2.2.14>

If the criteria for radio link failure is met in the new configuration during the reconfiguration procedure (i.e. while UE is waiting for RLC acknowledgement for a response message.) as specified in subclause 8.5.6, the UE shall:

1> if the received reconfiguration causes either:

- the IE "Reconfiguration" in the variable CIPHERING_STATUS to be set to TRUE; and/or
- the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to be set to TRUE:

2> perform the actions specified in subclause 8.2.2.12b.

<from sub-clause 8.2.2.12b>

If:

- a cell update procedure according to subclause 8.3.1 is initiated; and
- the received reconfiguration message causes either:
  - the IE "Reconfiguration" in the variable CIPHERING_STATUS to be set to TRUE; and/or
  - the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to be set to TRUE:

the UE shall:

1> release all radio resources;

1> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers; and

1> clear any entry for the RRC CONNECTION RELEASE message in the tables "Accepted transactions" and "Rejected transactions" in the variable TRANSACTIONS;

1> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

1> clear the variable ESTABLISHED_RABS;

1> if the received reconfiguration message contained the IE "Ciphering mode info":

2> set the IE "Reconfiguration" in the variable CIPHERING_STATUS to FALSE; and

2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

2> clear the variable SECURITY_MODIFICATION.

1> if the received reconfiguration message contained the IE "Integrity protection mode info":

2> set the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO to FALSE; and

2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO.

1> enter idle mode;

1> perform the actions specified in subclause 8.5.2 when entering idle mode;

1> and the procedure ends.

NOTE: UTRAN should use RB Control messages to perform an SRNS relocation only in case of state transitions from CELL_DCH to CELL_DCH.

Reference

3GPP TS 25.331 clause 8.2.2, 8.6.3.4.

### 8.2.6.44.3 Test purpose

To confirm that the UE enters idle mode state when UE detects radio link failure after UE started using the new configuration but before receiving the RLC acknowledgement of the reconfiguration complete message.

### 8.2.6.44.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2

UE: PS-DCCH+DTCH_DCH (state 6-10) or CS-DCCH+DTCH_DCH (state 6-9) or PS+CS-DCCH+DTCH_DCH (state 6-14) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) and services supported by the UE. If UE supports PS+CS but only supports streaming service in CS domain then state 6-9, 6-10 are applied.

Specific Message Contents

System Information Block type 1 of Cell 2 to be transmitted before idle update preamble

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T313 | 0 |
| - N313 | 1 |

System Information Block type 1 (Cell 1)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |
| - T313 | 0 |
| - N313 | 1 |

System Information Block type 11 (Cell 1)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| - CHOICE report criteria | |
| - Intra-frequency measurement reporting criteria | |
| - Parameters required for each event | 2 kinds |
| - Intra-frequency event identity | 1b |
| - Triggering condition 1 | Active set cells |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | 10(5dB) |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | 1(1.0) |
| - Hysteresis | 0(0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 640 |
| - Amount of reporting | Not Present |
| - Reporting interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Intra-frequency event identity | 1c |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | Not Present |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | Not Present |
| - Hysteresis | 0(0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | 3 |
| - Time to trigger | 640 |
| - Amount of reporting | 4 |
| - Reporting interval | 4 000 |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |

Test Procedure

**Table 8.2.6.44**

| Parameter | Unit | Cell 1 | | | Cell 2 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | Mid Range Test Frequency | | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -66 | -60 | -66 | -60 | OFF |

Table 8.2.6.44 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_DCH state, camping onto cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.44. The SS sends a PHYSICAL CHANNEL RECONFIGURATION message requesting the UE to do a timing re-initialised hard handover combined with SRNS relocation. This message includes IE "RRC State Indicator" set to "CELL_DCH", IE “Downlink counter synchronisation info”, IE “Ciphering mode info” and IE “Integrity protection mode info”. UE shall reselect to cell 2 and SS verifies that the UE sends PHYSICAL CHANNEL RECONFIGURATION COMPLETE message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the new $CK_X$ and $IK_X$ from step 1}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in PHYSICAL CHANNEL RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. On receiving PHYSICAL CHANNEL RECONFIGURATION COMPLETE message, SS shall not send RLC acknowledgement to UE and the SS shall configure its downlink transmission power settings according to columns "T2" in table 8.2.6.44.

UE shall detect a radio link failure in cell 2 and enters idle mode in cell 1. SS then call for procedure C.1 to verify that UE is in idle mode in cell 1.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.2.6.44. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | If IE “Ciphering mode info” is present in the SECURITY MODE COMMAND during initial condition set-up, this message is sent after last ciphering activation time has elapsed and there is no pending ciphering activation time. New integrity protection configuration is applied on DL SRB2. LAI and RAI of cell 2 are given to the UE, and are the same as cell 1. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE shall transmit this message after it reselects to cell 2. New calculated START value is included. New integrity protection configuration is applied on UL SRB2. If IE “Ciphering mode info” is present in step 2, new ciphering configuration is applied on UL SRB2 with the downlink and uplink values of the HFN component of COUNT-C for SRB2 is incremented by one. Upon receiving this message, the SS shall not send RLC acknowledgement for this message and apply the downlink transmission power settings, according to the values in columns “T2” of table 8.2.6.44 |
| 4 | ←→ | | Call C.1. | C.1 is performed in cell 1. If the test result of C.1 indicates that UE is in idle mode state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 2) – for PS domain testing only

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to "Not present". If network applies ciphering, this IE shall be included with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Set to another algorithm than the one indicated in the SECURITY MODE COMMAND during the initial condition set-up |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | Not Present |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| Activation Time | Not Present |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not Present. |
| Downlink information common for all radio links<br>- Downlink DPCH info common for all RL<br>- Timing Indication<br>- MAC-d HFN initial value<br>- Default DPCH Offset Value | <br><br>Initialise<br>Not present<br>Arbitrary set to value 0..306688 by step of 512 |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

PHYSICAL CHANNEL RECONFIGURATION (Step 2) – for CS domain testing only

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Non speech in CS" or "Speech in CS", with the following exception:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to "Not present". If network applies ciphering, this IE shall be included with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Set to another algorithm than the one indicated in the SECURITY MODE COMMAND during the initial condition set-up |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | Not Present |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| Activation Time | Not Present |
| New U-RNTI<br>- SRNC identity<br>- S-RNTI | <br>0000 0000 0010B<br>0000 0000 0000 0000 0001B |
| CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information | <br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>CS<br><br>1E 01H |
| Downlink counter synchronisation info<br>- RB with PDCP information list | <br>Not Present. |
| Downlink information common for all radio links<br>- Downlink DPCH info common for all RL<br>- Timing Indication<br>- MAC-d HFN initial value<br>- Default DPCH Offset Value | <br><br>Initialise<br>Not present<br>Arbitrary set to value 0..306688 by step of 512 |
| Downlink information for each radio links<br>- Primary CPICH info<br>- Primary Scrambling Code | <br><br>Set to same code as used for cell 2 |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 3) – for PS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Not present<br>Check that this IE is present. |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 4) – for CS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Information Element | Value/remark |
| COUNT-C activation time | In case ciphering is applied by the network, check that this IE is present. |
| Uplink counter synchronisation info | |
| - RB with PDCP information list | Not present |
| - START list | Check that this IE is present. |

#### 8.2.6.44.5 Test requirement

After step 2, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC which includes which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the new $CK_X$ and $IK_X$ from step 1}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in PHYSICAL CHANNEL RECONFIGURATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration.

After step 3, UE shall enter idle mode in cell 1.

### 8.2.6.45 Physical Channel Reconfiguration for transition from CELL_DCH to URA_PCH: Failure (Radio link failure in old configuration)

#### 8.2.6.45.1 Definition

#### 8.2.6.45.2 Conformance requirement

If the criteria for radio link failure are met in the old configuration during the reconfiguration procedure as specified in TS 25.331 subclause 8.5.6, the UE should:

1> if the UE would have entered CELL_PCH or URA_PCH as a result of this reconfiguration procedure and the UE has already submitted a response message to lower layers:

2> act as if the reconfiguration message was not received;

2> initiate a cell update procedure according to TS 25.331 subclause 8.3.1, using the cause "radio link failure"; and

2> the procedure ends.

NOTE: UTRAN should consider the reconfiguration procedure as unsuccessful in this case even if a response message had been received.

Reference

3GPP TS 25.331 clause 8.2.2.14.

#### 8.2.6.45.3 Test purpose

To confirm that the UE aborts reconfiguration to URA_PCH and performs cell update when UE detects radio link failure before receiving the RLC acknowledgement of the reconfiguration complete message in the old configuration.

#### 8.2.6.45.4 Method of test

Initial Condition

System Simulator: 1 cell – Cell 1

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

Specific Message Contents

System Information Block type 1 of Cell 1 to be transmitted before idle update preamble

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode<br>- T313<br>- N313 | <br>0<br>1 |
| - T315 | 30 |

Test Procedure

**Table 8.2.6.45**

| Parameter | Unit | Cell 1 | |
|---|---|---|---|
| | | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF |

Table 8.2.6.45 illustrates the downlink power to be applied at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_DCH state, camping onto cell 1. The SS sends a PHYSICAL CHANNEL RECONFIGURATION message requesting the UE to transit to CELL_PCH. UE shall send PHYSICAL CHANNEL RECONFIGURATION COMPLETE message. On receiving PHYSICAL CHANNEL RECONFIGURATION COMPLETE message, SS shall not send RLC acknowledgement to UE and the SS shall configure its downlink transmission power settings according to column "T1" in table 8.2.6.45. Within 26.32s (Note 1) from the instant SS configures its downlink transmission power settings according to column “T1”, SS reconfigures it power setting according to column “T0”. UE shall send CELL UPDATE message, with the cell update cause set to “radio link failure”. SS sends CELL UPDATE CONFIRM message. UE shall response with PHYSICAL CHANNEL COMPLETE message.

NOTE 1: Considering the timer tolerance of the UE, T315 may expire between 30s±0.75s, therefore the SS must configure it downlink transmission power before 29.25s after it configures to “T1”. Since SS has a timer tolerance of 10% or 2*TTI+55ms (consider the greater value of the two), the test case shall set the SS to reconfigure the power level no later thatn 26.32s after the SS configures the power settings according to column ‘T1’ in table 8.2.6.45.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.2.6.45. SS shall not acknowledge this message. |
| 3 | | | | Within 26.32s from step 2, SS applies the downlink transmission power settings, according to the values in columns "T0" of table 8.2.6.45. |
| 4 | → | | CELL UPDATE | |
| 5 | ← | | CELL UPDATE CONFIRM | |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled “Packet to URA_PCH from CELL_DCH in PS”.

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 2 and 6)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

CELL UPDATE (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Cell update cause | Radio link failure |

CELL UPDATE CONFIRM (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |

#### 8.2.6.45.5 Test requirement

After step 1, UE shall send PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to SS.

After step 3, UE shall send CELL UPDATE message to SS, with cell update cause set to “radio link failure”.

After step 5, UE shall send PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to SS.

### 8.2.6.46 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing re-initialised. Serving HS-DSCH cell change): Failure (Physical channel failure and reversion to old channel)

#### 8.2.6.46.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.2.6.46.2 Conformance requirement

If the received message caused the UE to be in CELL_DCH state and the UE according to subclause 8.5.4 failed to establish the dedicated physical channel(s) indicated in the received message the UE shall:

1> if the CM_PATTERN_ACTIVATION_ABORTED flag is not set to TRUE:

2> revert to the configuration prior to the reception of the message (old configuration); including any HS-DSCH configuration if existing;

2> if the UE was in Cell DCH state prior to the reconfiguration:

3> perform the physical layer synchronisation procedure A as specified in [29] (FDD only);

3> after the establishment of the uplink physical channel, send DPCCH and no DPDCH according to [26] during the number of frames indicated in the IE "PC preamble" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE; and

3> then not send any data on signalling radio bearers RB0 to RB4 during the number of frames indicated in the IE "SRB delay" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE.

1> if the CM_PATTERN_ACTIVATION_ABORTED flag is set to TRUE or if the old configuration includes dedicated physical channels (CELL_DCH state) and the UE is unable to revert to the old configuration:

2> initiate a cell update procedure according to subclause 8.3.1, using the cause "radio link failure";

2> after the cell update procedure has completed successfully:

3> proceed as below.

1> if the old configuration does not include dedicated physical channels (CELL_FACH state):

2> select a suitable UTRA cell according to [4];

2> if the UE selects another cell than the cell the UE camped on upon reception of the reconfiguration message:

3> initiate a cell update procedure according to subclause 8.3.1, using the cause "Cell reselection";

3> after the cell update procedure has completed successfully:

4> proceed as below.

1> transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

Reference(s)

TS 25.331 clause 8.2.2.7

### 8.2.6.46.3 Test purpose

To confirm that the UE reverts to the old configuration (including measurement configurations, ciphering procedures and compressed mode configurations if required), and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC if the UE fails to reconfigure the new physical channel according to the received PHYSICAL CHANNEL RECONFIGURATION message before timer T312 expiry.

### 8.2.6.46.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 on frequency $f_1$, and cell2 on frequency $f_2$. Cells 1 and 2 have different primary scrambling codes.

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established in cell 1.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE ordering the UE to change to Cell 2 on frequency $f_2$ but SS does not configure the channels in cell 2. At the activation time the UE changes to Cell 2 keeping the HS-PDSCH configuration. The UE shall revert to the old configuration and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message to the SS on the DCCH using AM RLC, with the value "physical channel failure" in the IE "failure cause".

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS instructs the UE to change to Cell 2. SS does not configure the channels in cell 2. |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION FAILURE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 2 | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | FDD | |
| - DL Scrambling Code | | |
| - HS-SCCH Channelisation Code Information | | |
| - HS-SCCH Channelisation Code | 7 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | FDD | |
| - POhsdsch | 6 dB | |
| - CQI Feedback cycle, k | 4 ms | |
| - CQI repetition factor | 1 | |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) | |
| - CHOICE mode | FDD (no data) | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to the scrambling code for cell 2 | |
| - Cell ID | Not present | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value of DPCH Frame Offset modulo 38400 | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |

| | | |
|---|---|---|
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - UARFCN downlink(Nt) | Same downlink UARFCN as used for cell 2 | |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Reference to TS34.108 clause 6.11 Parameter Set | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Same Cell parameters ID as used for cell 2 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 | |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (3.84 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same downlink UARFCN as used for cell 2 | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps | |
| - Ack-Nack Power Offset | 0dB | |
| - HS-SICH Power Control Info | | |
| - UL SIR target | 0dB | |
| - HS-SICH Constant Value | -10dB | |
| - $D_{hs\text{-}sync}$ | Not present | |
| - HS-SCCH Set Configuration | 4 | |
| - Timeslot number | The timeslot in which HS-SCCH is to be configured | |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS | |
| - Midamble Allocation mode | Default | |
| - Midamble configuration | 8 | |
| - BLER target | -2.4 (note that this equates to a BLER target of 0.4%, log10(0.004) = -2.4) | |
| - HS-SICH configuration | | |
| - Timeslot number | The timeslot in which HS-SICH is to be configured | |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS | |
| - Midamble Allocation mode | Default | |
| - Midamble configuration | 8 | |
| - Measurement Feedback Info | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - HS-PDSCH Timeslot Configuration | | |
| - HS-PDSCH Timeslot Configuration List | Reference to clause 6.10 Parameter Set | |
| - Timeslot Number | The timeslot(s) in which HS-HS-DSCH is to be configured | |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set | |
| - Midamble Allocation Mode | Default | |
| - Midamble configuration burst type 1 and 3 | 8 | |
| Downlink information common for all radio links | | |
| - CHOICE DPCH info | Downlink DPCH info common for all RL | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - CHOICE mode | TDD | |
| - TPC Step Size | 1 | |
| - MAC-d HFN initial value | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - Default DPCH Offset Value | Not Present | |
| - Mac-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - CHOICE SyncCase | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Set to cell parameter ID of cell 2 | |
| - SCTD indicator | FALSE | |

| Information Element | Value/remark | Version |
|---|---|---|
| - CHOICE DPCH info | Downlink DPCH info for each RL | Rel-6 |
| - CHOICE mode | TDD | |
| - DL CCTrCH List | 1 CCTrCh | |
| - TFCS ID | 1 | |
| - Activation time | Not Present | |
| - Duration | Not Present | |
| - Common timeslot info | | |
| - 2nd interleaving mode | Reference to clause 6.10 Parameter Set | |
| - TFCI coding | Reference to clause 6.10 Parameter Set | |
| - Puncturing Limit | Reference to clause 6.10 Parameter Set | |
| - Repetition Period | Reference to clause 6.10 Parameter Set | |
| - Repetition Length | Reference to clause 6.10 Parameter Set | |
| - Downlink DPCH timeslots and codes | | |
| - Individual timeslot info | | |
| - Timeslot number | The number of a downlink timeslot that has unassigned codes. | |
| - TFCI existence | TRUE | |
| - Midamble shift and burst type | | |
| - CHOICE TDD option | 3.84 Mcps | |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set | |
| - Midamble Allocation Mode | Default | |
| - Midamble configuration | Set Kcell to lowest possible value given the number of codes defined in clause 6.10 Parameter Set | |
| - CHOICE TDD option | 3.84 Mcps | |
| - First timeslot channelisation codes | | |
| - CHOICE codes representation | Consecutive codes | |
| - First channelisation code | (i/SF) where i is the lowest numbered code that is being assigned and SF is specified in clause 6.10 Parameter Set. | |
| - Last channelisation code | (j/SF) where j is the highest numbered code that is being assigned in the slot as specified in clause 6.10 Parameter Set. | |
| - CHOICE more timeslots | The presence of this IE depends upon whether the requirements of clause 6.10 Parameter Set t could be met by the codes that have been assigned in the first timeslot. | |
| - UL CCTrCH TPC List | 1 | |
| - UL TPC TFCS Identity | | |
| - TFCS ID | 1 | |
| - Shared channel indicator | False | |
| - DL CCTrCH List to Remove | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| - E-AGCH Info | Not Present | Rel-6 |
| - CHOICE E-HICH Information | Not Present | Rel-6 |
| - CHOICE E-RGCH Information | Not Present | Rel-6 |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same downlink UARFCN as used for cell 2 | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps | Rel-7 |
| - Ack-Nack Power Offset | 0dB | |
| - HS-SICH Power Control Info | | |
| - UL SIR target | 0dB | |
| - HS-SICH Constant Value | -10dB | |
| - $D_{hs\text{-}sync}$ | Not present | |
| - HS-SCCH Set Configuration | 4 | |
| - Timeslot number | The timeslot in which HS-SCCH is to be configured | |
| - Channelisation code | CC32/x where x is a previously unassigned channelisation code in this TS | |
| - Midamble Allocation mode | Default | |
| - Midamble configuration | 8 | |
| - BLER target | -2.4 (note that this equates to a BLER target of 0.4%, log10(0.004) = -2.4) | |
| - HS-SICH configuration | | |
| - Timeslot number | The timeslot in which HS-SICH is to be configured | |
| - Channelisation code | CC32/x where x is a previously unassigned channelisation code in this TS | |
| - Midamble Allocation mode | Default | |
| - Midamble configuration | 8 | |
| - Measurement Feedback Info | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps TDD | Rel-7 |
| - HS-PDSCH Timeslot Configuration VHCR | | |
| - HS-PDSCH Timeslot Configuration List | Reference to clause 6.11.6 Parameter Set | |
| - Timeslot Number | The timeslot(s) in which HS-HS-DSCH is to be configured | |
| - CHOICE Burst Type | Reference to clause 6.11.6 Parameter Set | |
| - Midamble Allocation Mode | Default | |
| - Midamble configuration burst type 1 and 3 | 8 | |
| Downlink information common for all radio links | | |
| - CHOICE DPCH info | Downlink DPCH info common for all RL | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - CHOICE mode | TDD | |
| - TPC Step Size | 1 | |
| - MAC-d HFN initial value | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps TDD | Rel-7 |
| - Default DPCH Offset Value | Not Present | |
| - Mac-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps TDD | Rel-7 |
| - CHOICE SyncCase | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Set to cell parameter ID of cell 2 | |
| - SCTD indicator | FALSE | |

| Information Element | Value/remark | Version |
|---|---|---|
| - CHOICE DPCH info | Downlink DPCH info for each RL | Rel-6 |
| - CHOICE mode | TDD | |
| - DL CCTrCH List | 1 CCTrCh | |
| - TFCS ID | 1 | |
| - Activation time | Not Present | |
| - Duration | Not Present | |
| - Common timeslot info | | |
| - 2nd interleaving mode | Reference to clause 6.11.6 Parameter Set | |
| - TFCI coding | Reference to clause 6.11.6 Parameter Set | |
| - Puncturing Limit | Reference to clause 6.11.6 Parameter Set | |
| - Repetition Period | Reference to clause 6.11.6 Parameter Set | |
| - Repetition Length | Reference to clause 6.11.6 Parameter Set | |
| - Downlink DPCH timeslots and codes VHCR | | Rel-7 |
| - Individual timeslot info | | |
| - Timeslot number | The number of a downlink timeslot that has unassigned codes. | |
| - TFCI existence | TRUE | |
| - Midamble shift and burst type | | |
| - CHOICE TDD option | 7.68 Mcps | Rel-7 |
| - CHOICE Burst Type | Reference to clause 6.11.6 Parameter Set | |
| - Midamble Allocation Mode | Default | |
| - Midamble configuration | Set Kcell to lowest possible value given the number of codes defined in clause 6.11.6 Parameter Set | |
| - CHOICE TDD option | 7.68 Mcps | Rel-7 |
| - First timeslot channelisation codes VHCR | | Rel-7 |
| - CHOICE codes representation | Consecutive codes | |
| - First channelisation code | (i/SF) where i is the lowest numbered code that is being assigned and SF is specified in clause 6.11.6 Parameter Set. | |
| - Last channelisation code | (j/SF) where j is the highest numbered code that is being assigned in the slot as specified in clause 6.11.6 Parameter Set. | |
| - CHOICE more timeslots | The presence of this IE depends upon whether the requirements of clause 6.11.6 Parameter Set t could be met by the codes that have been assigned in the first timeslot. | |
| - UL CCTrCH TPC List | 1 | |
| - UL TPC TFCS Identity | | |
| - TFCS ID | 1 | |
| - Shared channel indicator | False | |
| - DL CCTrCH List to Remove | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| - E-AGCH Info | Not Present | Rel-6 |
| - CHOICE E-HICH Information | Not Present | Rel-6 |
| - CHOICE E-RGCH Information | Not Present | Rel-6 |

#### 8.2.6.46.5 Test requirements

After step 1, the UE shall revert to the old configuration and transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message.

### 8.2.6.47 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Compressed mode initiation, with active HS-DSCH reception): Success

#### 8.2.6.47.1 Definition

All UEs which support FDD, HS-PDSCH and compressed mode.

#### 8.2.6.47.2 Conformance requirement

If the UE receives:

-a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> set the variable ORDERED_RECONFIGURATION to TRUE;

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS25.214;

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

…

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" is included, the UE shall:

2> at the time indicated by IE "TGCFN":

3> activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate"; and

3> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "active".

### Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.6.6.15.

### 8.2.6.47.3 Test purpose

1. To confirm that the UE configures compressed mode according to a PHYSICAL CHANNEL RECONFIGURATION message during active HS-DSCH reception.
2. To confirm that the UE activates compressed mode according to the previously stored configuration when receiving a MEASUREMENT CONTROL message during active HS-DSCH reception.

### 8.2.6.47.4 Method of test

#### Initial Condition

System Simulator: 2 cells–Cell 1 is active and cell 6 is inactive

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

#### Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH

- Compressed mode required yes/no

Test Procedure

**Table 8.2.6.47**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Table 8.2.6.47 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

SS initiates P25 to make the UE move to state 6-17 as specified in TS34.108 clause7.4. The UE is in CELL_DCH state in cell 1 with active HS-DSCH reception and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.47. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which includes the IE "DPCH compressed mode info" with the IE "TGPS Status Flag" set to "Deactivate". The UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

The SS switches its downlink transmission power setting according to columns "T1" in table 8.2.6.47, but the UE shall not transmit any MEASUREMENT REPORT messages.

The SS then sets up inter-frequency measurements (event 2b) and activates compressed mode, by sending a MEASUREMENT CONTROL message to the UE. The SS waits for 1s for the UE to activate compressed mode. The UE shall transmit MEASUREMENT REPORT message to report event 2b with the measured CPICH RSCP and Ec/No values for cell 6 to the SS.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step 0) |
| 1 | | | | The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.47. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS downloads compressed mode parameters without activating compressed mode. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.47. |
| 5 | ← | | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE and activates compressed mode. |
| 6 | → | | MEASUREMENT REPORT | The UE shall report event 2b with the measured CPICH RSCP and Ec/No values for cell 6. |

Specific Message Contents

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | Not present | |
| - Measurement Feedback Info | Not present | |
| - CHOICE mode | FDD (no data) | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing Indication | Maintain | |
| - CFN-target SFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - CHOICE Mode | FDD | |
| -DPC Mode | 0 (Single) | |
| - CHOICE Mode | FDD | |
| - Power offset Pilot-DPDCH | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | FALSE | |
| - Number of bits for Pilot bits (SF=128, 256) | Not Present | |
| - CHOICE mode | FDD | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | (Current CFN+(256 – TTI/10msec)) mod256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | Undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | mode 0 | |
| - ITP | mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only, or DL only, depending on UE capability | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | HLS | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity Mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| - MAC-hs reset indicator | Not Present | |

MEASUREMENT CONTROL (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions in the IE(s) concerned:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement object list | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | Remove all inter-frequency cells |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 6 |
| - Frequency info | Set to the frequency of cell 6 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | 0 chips |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |
| - Primary CPICH TX power | Not Present |
| - Primary CPICH TX power | |
| - TX Diversity Indicator | Not Present |
| - Cell for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - CHOICE Mode | FDD |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - COICE Mode | FDD |
| - CPICH Ec/No reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | |
| - UE state | CELL_DCH |
| - Inter-frequency set update | On with no reporting |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -65 dBm |
| - W used frequency | Not present |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | |
| - CHOICH reported cell | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -68 dBm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN + (100 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Status Flag | Activate |

| Information Element | Value/remark |
|---|---|
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

MEASUREMENT REPORT (Step 6)

The contents of MEASUREMENT REPORT message is the same as them found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE Measurement | |
| - Inter frequency measured results list | Check to see if set to "Inter-frequency measured results list" |
| - Inter frequency measurement results | |
| - Frequency info | Set to the frequency of cell 6 |
| - UTRA carrier RSSI | Not checked |
| - Inter frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Not checked |
| - Cell synchronisation information | Not checked |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | Not checked |
| - CPICH Ec/No | Check to see if it is present |
| - CPICH RSCP | Check to see if it is present |
| - Pathloss | Not checked |
| Measured Results on RACH | Not checked |
| Additional Measured results | Not checked |
| - Measured Result | |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | Check that the value of this IE is set to the frequency of cell 6 |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code of cell 6 |

#### 8.2.6.47.5 Test requirement

After step 2 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 5 the UE shall transmit a MEASUREMENT REPORT message containing the IE "measured results" reporting cell 6's CPICH RSCP and Ec/No values, also report the triggering of event '2b' included in IE "Event results".

### 8.2.6.48 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, serving HS-DSCH cell change, compressed mode)

#### 8.2.6.48.1 Definition and applicability

All UEs which support FDD, HS-PDSCH and compressed mode.

#### 8.2.6.48.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

1> the procedure ends.

…

If IE "Timing indication" has the value "initialise", UE shall:

1> execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration caused by the received message:

3> select the HS-SCCH subframe boundary immediately before the first HS-SCCH subframe, which entirely falls within the 10 ms frame following T;

3> start using, at that HS-SCCH subframe boundary, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

NOTE: An "HS-DSCH related reconfiguration" includes, in particular, reconfigurations that need to be time-aligned with the 2ms subframe of the HS-SCCH, HS-PDSCH and/or HS-DPCCH. For example, start and stop of HS-SCCH reception and serving HS-DSCH cell change.

…

If the IE "New H-RNTI" is included, the UE shall:

1> if the IE "Downlink HS-PDSCH Information" is also included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Downlink HS-PDSCH Information" is included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message, the UE shall:

1> if the IE "New H-RNTI" is included:

2> perform the actions as specified in subclause 8.6.3.1b of TS 25.331.

1> if the IE "HS-SCCH Info" is included:

2> act as specified in subclause 8.6.6.33 of TS 25.331

1> if the IE "Measurement Feedback Info" is included:

2> act as specified in subclause 8.6.6.34 of TS 25.331

1> For FDD, if, as a result of the received message, the variable H_RNTI is set and the UE has a stored IE "HS-SCCH Info" and a stored IE "Measurement Feedback Info"; and

1> For FDD, if the UE has received IE "Uplink DPCH Power Control Info" and stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor; and

1> For FDD, if the UE has stored IEs "MAC-hs queue to add or reconfigure list", "MAC-d PDU size Info" and "RB Mapping Info" corresponding to the HS-PDSCH configuration;

2> set the variable HS_DSCH_RECEPTION to TRUE;

2> start HS-DSCH reception procedures according to the stored HS-PDSCH configuration:

3> as stated in subclause 8.6.3.1b of TS 25.331 for the IE "H-RNTI";

3> in subclause 8.6.6.33 of TS 25.331 for the IE "HS-SCCH Info"; and

3> in subclause 8.6.6.34 of TS 25.331for the IE "Measurement Feedback Info".

…

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" is included, the UE shall:

2> at the time indicated by IE "TGCFN":

3> activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate"; and

3> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "active".

Reference

3GPP TS 25.331 clauses 8.2.2, 8.3.5.1.2, 8.6.3.1, 8.6.3.1b, 8.6.6.4, 8.6.6.27, 8.6.6.32, 8.6.6.15

### 8.2.6.48.3 Test purpose

To confirm that the UE is able to perform a timing re-initialised hard handover to another frequency after compressed mode measurement on the target frequency in conjunction with a serving HS-DSCH cell change according to the received PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.48.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 on frequency $f_1$, and cell 6 on frequency $f_2$. Cells 1 and 6 have different primary scrambling codes.

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH
- Compressed mode required yes/no

Test Procedure

**Table 8.2.6.48**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency ($f_1$) | | High Range Test Frequency ($f_2$) | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Table 8.2.6.48 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established in cell 1. The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.48.

The SS configures then compressed mode (if required), to prepare the UE for inter-frequency measurements, by sending a PHYSICAL CHANNEL RECONFIGURATION message on DCCH using AM-RLC. The UE shall answer with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

The SS then sets up inter-frequency measurements (event 2b), by sending a MEASUREMENT CONTROL message to the UE. Compressed mode is started at the same time in that message (if required).

The SS then applies the power settings according to column "T1" in table 8.2.6.48. The UE transmits a MEASUREMENT REPORT message to the SS.

The SS then transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE ordering the UE to change to Cell 6 on frequency $f_2$. At the activation time the UE changes to Cell 6 keeping the HS-PDSCH configuration. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS downloads the compressed mode parameters in the UE. |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE acknowledges the downloading of the compressed mode parameters. |
| 3 | ← | | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE, and activates compressed mode. |
| 4 | | | | The SS changes the power of the cells according to column T1 in table 8.2.6.48. |
| 5 | → | | MEASUREMENT REPORT | Frequency $f_2$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS instructs the UE to change to Cell 6. |
| 7 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark | Version |
|---|---|---|
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | Not present | |
| - Measurement Feedback Info | Not present | |
| - CHOICE mode | FDD (no data) | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | HLS | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information for each radio link | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. | |

MEASUREMENT CONTROL (Step 3)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | 1 inter-frequency cell |
| - Inter-frequency cell id | 6 |
| - Frequency info | Set to the frequency of cell 6 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code of cell 6 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | |
| - UE State | CELL_DCH |
| - Inter-frequency set update | |
| - UE autonomous update | On with no reporting |
| - Non autonomous update mode | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -65 dBm |
| - W used frequency | 0 (0.0) |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -68 dBm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | ( (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |

| Information Element | Value/Remark |
|---|---|
| - TGPS Status Flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

MEASUREMENT REPORT (Step 5)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | Check that the value of this IE is set to the frequency of cell 6 |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code of cell 6 |
| - CPICH Ec/N0 | Check that this IE is present |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | Check that the value of this IE is set to the frequency of cell 6 |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code of cell 6 |

PHYSICAL CHANNEL RECONFIGURATION (Step 6)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Set to the frequency of cell 6 | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | FDD | |
| - DL Scrambling Code | | |
| - HS-SCCH Channelisation Code Information | | |
| - HS-SCCH Channelisation Code | 7 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | FDD | |
| - POhsdsch | 6 dB | |
| - CQI Feedback cycle, k | 4 ms | |
| - CQI repetition factor | 1 | |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) | |
| - CHOICE mode | FDD (no data) | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | 0 | |
| - Downlink DPCH power control information | Not Present | |
| - Downlink rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to the scrambling code for cell 6 | |
| - Cell ID | Not present | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Any value between 0 and Spreading factor-1 | |
| - Scrambling code change | NoCodeChange | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

#### 8.2.6.48.5 Test requirements

After step 1, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

After step 4, the UE shall transmit a MEASUREMENT REPORT message with cell 6 as the reported cell.

After step 6, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message in cell 6.

### 8.2.6.48a Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, serving HS-DSCH cell change, with measurement report) for 3.84 Mcps TDD

#### 8.2.6.48a.1 Definition and applicability

All UEs which support TDD and HS-PDSCH.

#### 8.2.6.48a.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If IE "Timing indication" has the value "initialise", UE shall:

1> execute the Timing Re-initialised hard handover procedure by following the procedure indicated in the subclause relevant to the procedure chosen by the UTRAN.

…

If the UE receives a message in which presence is needed for the IE "Activation time", and the value is other than the default value "Now", the UE shall:

1> at the activation time T:

2> for an HS-DSCH related reconfiguration in 3.84 Mcps TDD caused by the received message:

3> start using, at activation time T, the new HS-DSCH configuration in the received message, replacing any old HS-DSCH configuration.

2> for actions, other than a physical channel reconfiguration, caused by the received message:

3> perform the actions for the information elements in the received message as specified elsewhere.

…

If the IE "New H-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the value in the variable H_RNTI;

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

#### Reference

3GPP TS 25.331 clauses 8.2.2, 8.3.5.1.2, 8.6.3.1, 8.6.3.1b, 8.6.6.4, 8.6.6.27.

8.2.6.48a.3 Test purpose

To confirm that the UE is able to perform a timing re-initialised hard handover to another frequency after measurement on the target frequency according to the received PHYSICAL CHANNEL RECONFIGURATION message.

8.2.6.48a.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 on frequency $f_1$, and cell 6 on frequency $f_2$. Cells 1 and 6 have different primary scrambling codes.

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports TDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.2.6.48a**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency ($f_1$) | | High Range Test Frequency ($f_2$) | |
| PCCPCH RSCP | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Table 8.2.6.48a illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established in cell 1. The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.48a.

The SS then sets up inter-frequency measurements (event 2b), by sending a MEASUREMENT CONTROL message to the UE.

The SS then applies the power settings according to column “T1” in table 8.2.6.48a. The UE transmits a MEASUREMENT REPORT message to the SS.

The SS then transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE ordering the UE to change to Cell 6 on frequency $f_2$. At the activation time the UE changes to Cell 6 keeping the HS-PDSCH configuration. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE, and activates compressed mode. |
| 2 | | | | The SS changes the power of the cells according to column T1 in table 8.2.6.48a. |
| 3 | → | | MEASUREMENT REPORT | Frequency $f_2$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS instructs the UE to change to Cell 6. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

MEASUREMENT CONTROL (Step 1)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | 1 inter-frequency cell |
| - Inter-frequency cell id | 6 |
| - Frequency info | Set to the frequency of cell 6 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Cell parameter ID of cell 6. |
| - SCTD indicator | FALSE |
| - Primary CCPCH TX power | Not present |
| - Timeslot list | Not present |
| - Cells for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - CHOICE mode | TDD |
| - Measurement quantity for frequency quality estimate | Primary CCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOCE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | |
| - UE State | CELL_DCH |
| - Inter-frequency set update | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -65 dBm |
| - $Delta_{Threshold\ used\ frequency}$ | Not Present |
| - W used frequency | 0.0 |
| - Hysteresis | 1.0 dB |
| - Time to trigger | 100 ms |
| - Reporting cell status | Report cells within monitored set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |

| Information Element | Value/Remark |
|---|---|
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -65 dBm |
| - $Delta_{Threshold\ non\ used\ frequency}$ | Not Present |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 3)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | Check that the value of this IE is set to the frequency of cell 6 |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check that the value of this IE is set to cell parameter ID of cell 6 |
| - Proposed TGSN | Check that this IE is absent |
| - Primary CCPCH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| - Timeslot list | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | Check that the value of this IE is set to the frequency of cell 6 |
| - Non freq related measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - SyncCase | Not Present |
| - Cell Parameter ID | Check that the value of this IE is set to cell parameter ID of cell 6 |
| - SCTD indicator | FALSE |

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | | |
| - Choice mode | TDD | |
| - UARFCN (Nt) | Same downlink UARFCN as used for cell 2 | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps | |
| - Ack-Nack Power Offset | 0dB | |
| - HS-SICH Power Control Info | | |
| - UL SIR target | 0dB | |
| - HS-SICH Constant Value | -10dB | |
| - $D_{hs\text{-}sync}$ | Not present | |
| - HS-SCCH Set Configuration | 4 | |
| - Timeslot number | The timeslot in which HS-SCCH is to be configured | |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS | |
| - Midamble Allocation mode | Default | |
| - Midamble configuration | 8 | |
| - BLER target | -2.4 (note that this equates to a BLER target of 0.4%, log10(0.004) = -2.4) | |
| - HS-SICH configuration | | |
| - Timeslot number | The timeslot in which HS-SICH is to be configured | |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS | |
| - Midamble Allocation mode | Default | |
| - Midamble configuration | 8 | |
| - Measurement Feedback Info | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - HS-PDSCH Timeslot Configuration | | |
| - HS-PDSCH Timeslot Configuration List | Reference to clause 6.10 Parameter Set | |
| - Timeslot Number | The timeslot(s) in which HS-HS-DSCH is to be configured | |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set | |
| - Midamble Allocation Mode | Default | |
| - Midamble configuration burst type 1 and 3 | 8 | |
| Downlink information common for all radio links | | |
| - CHOICE DPCH info | Downlink DPCH info common for all RL | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - CHOICE mode | TDD | |
| - TPC Step Size | 1 | |
| - MAC-d HFN initial value | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - Default DPCH Offset Value | Not Present | |
| - Mac-hs reset indicator | TRUE | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps TDD | |
| - CHOICE SyncCase | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Set to cell parameter ID of cell2 | |
| - SCTD indicator | FALSE | |

| Information Element | Value/remark | Version |
|---|---|---|
| - CHOICE DPCH info | Downlink DPCH info for each RL | Rel-6 |
| - CHOICE mode | TDD | |
| - DL CCTrCH List | 1 CCTrCh | |
| - TFCS ID | 1 | |
| - Activation time | Not Present | |
| - Duration | Not Present | |
| - Common timeslot info | | |
| - 2nd interleaving mode | Reference to clause 6.10 Parameter Set | |
| - TFCI coding | Reference to clause 6.10 Parameter Set | |
| - Puncturing Limit | Reference to clause 6.10 Parameter Set | |
| - Repetition Period | Reference to clause 6.10 Parameter Set | |
| - Repetition Length | Reference to clause 6.10 Parameter Set | |
| - Downlink DPCH timeslots and codes | | |
| - Individual timeslot info | | |
| - Timeslot number | The number of a downlink timeslot that has unassigned codes. | |
| - TFCI existence | TRUE | |
| - Midamble shift and burst type | | |
| - CHOICE TDD option | 3.84 Mcps | |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set | |
| - Midamble Allocation Mode | Default | |
| - Midamble configuration | Set Kcell to lowest possible value given the number of codes defined in clause 6.10 Parameter Set | |
| - CHOICE TDD option | 3.84 Mcps | |
| - First timeslot channelisation codes | | |
| - CHOICE codes representation | Consecutive codes | |
| - First channelisation code | (i/SF) where i is the lowest numbered code that is being assigned and SF is specified in clause 6.10 Parameter Set. | |
| - Last channelisation code | (j/SF) where j is the highest numbered code that is being assigned in the slot as specified in clause 6.10 Parameter Set. | |
| - CHOICE more timeslots | The presence of this IE depends upon whether the requirements of clause 6.10 Parameter Set t could be met by the codes that have been assigned in the first timeslot. | |
| - UL CCTrCH TPC List | 1 | |
| - UL TPC TFCS Identity | | |
| - TFCS ID | 1 | |
| - Shared channel indicator | False | |
| - DL CCTrCH List to Remove | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| - E-AGCH Info | Not Present | Rel-6 |
| - CHOICE E-HICH Information | Not Present | Rel-6 |
| - CHOICE E-RGCH Information | Not Present | Rel-6 |

#### 8.2.6.48a.5 Test requirements

After step 2, the UE shall transmit a MEASUREMENT REPORT message with cell 6 as the reported cell.

After step 4, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message in cell 6.

### 8.2.6.49 Physical Channel Reconfiguration from CELL_DCH to URA_PCH: Success (stop of HS-DSCH reception)

#### 8.2.6.49.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.2.6.49.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message; or

it shall:

1> if the UE will enter the CELL_DCH state from any state other than CELL_DCH state at the conclusion of this procedure:

2> perform the physical layer synchronisation procedure A as specified in TS 25.214;

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified in the following and perform the actions below.

The UE shall then:

1> enter a state according to TS 25.331 subclause 8.6.3.3.

If after state transition the UE enters URA_PCH state, the UE shall, after the state transition and transmission of the response message:

1> if the IE "Frequency info" is included in the received reconfiguration message:

2> select a suitable UTRA cell according to TS 25.304 on that frequency.

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging occasion and PICH Monitoring Occasion as specified in TS 25.331 subclause 8.6.3.2.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> set the variable INVALID_CONFIGURATION to TRUE.

…

The UE shall transmit a response message as specified in TS 25.331 subclause 8.2.2.4, setting the information elements as specified below. The UE shall:

1> set the IE "RRC transaction identifier" to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the new state is URA_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (URA_PCH);

…

The variable HS_DSCH_RECEPTION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable H_RNTI is set;

1> the UE has a stored IE "HS-SCCH info";

1> for FDD:

2> one of the radio links in the active set is configured as the serving HS-DSCH radio link;

2> the UE has stored the following IEs:

- IE "Measurement Feedback Info";
- IE "Uplink DPCH Power Control Info" including stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor;
- IE "HARQ info".

1> there is at least one RB mapped to HS-DSCH;

1> at least for one of the RB's mapped to HS-DSCH, there is at least one MAC-hs queue (including the IE "MAC-d PDU size Info") configured for the concerning MAC-d flow;

NOTE: To enable or disable HS-DSCH reception, the UTRAN has the possibility to add/remove the concerning HS-DSCH related RB mapping options, add/remove the concerning MAC-d flows or, for FDD, add/remove the serving HS-DSCH radio link.

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION to FALSE;

1> stop any HS_SCCH reception procedures;

1> stop any HS-DSCH reception procedures;

1> clear the variable H_RNTI and remove any stored H-RNTI;

1> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

1> release all HARQ resources;

1> no long consider any radio link to be the HS-DSCH serving radio link.

NOTE: If configured for HS-DSCH and not explicitly indicated as being cleared, the UE will have still stored the IEs "HARQ info", "Added or Reconfigured MAC-d flow", "RB mapping Info" and "Downlink HS-PDSCH information".

Whenever the variable HS_DSCH_RECEPTION is set to FALSE, the UE shall:

1> not perform HS_SCCH reception procedures;

1> not perform HS-DSCH reception procedures.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.2.5.25.

### 8.2.6.49.3 Test purpose

To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and enter URA_PCH state after it received a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH with active HS-DSCH reception to URA_PCH.

### 8.2.6.49.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

The UE is in the CELL_DCH state and has a radio bearer mapped on HS-DSCH established with active HS-DSCH reception. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invoke the UE to transit from CELL_DCH to URA_PCH. The UE stops HS-DSCH reception, transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enters URA_PCH state. SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE sends this message before it completes state transition. |
| 3 | | | | SS sends the L2 ack on the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step. Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 4 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |

### 8.2.6.49.5 Test requirement

After step 1 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC.

## 8.2.6.50 Physical Channel Reconfiguration for transition from CELL_DCH to URA_PCH: Success (frequency modification, stop of E-DCH transmission)

### 8.2.6.50.1 Definition

All UEs which support FDD or TDD, HS-PDSCH and E-DPDCH or E-PUCH.

8.2.6.50.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable E_DCH_TRANSMISSION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes the Primary E-RNTI or the Secondary E-RNTI or both the the Primary E-RNTI and the Secondary E-RNTI is set;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-DPCCH info" and the IE "E-DPDCH info".
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> for non-scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-PUCH info";
- IE "Non-scheduled transmission grant info".

2> for scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> For FDD:

2> stop any E-RGCH reception procedures;

1> For FDD

2> stop any E-DPCCH and E-DPDCH transmission procedures;

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AICH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH, E-DPDCH, E-RUCCH and/or E-PUCH transmission procedures.

…

If after state transition the UE leaves CELL_DCH state, the UE shall, after the state transition:

1> clear any stored IE "Downlink HS-PDSCH information";

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25;

1> clear any stored IE "E-DCH information";

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.5.28.

### 8.2.6.50.3 Test purpose

To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC;

To confirm that the UE transits from CELL_DCH with active E-DCH transmission and HS-HSCH reception to URA_PCH state on a different frequency after it received a PHYSICAL CHANNEL RECONFIGURATION message;

To confirm that the UE releases the dedicated physical channel and select a common physical channel on a different frequency.

### 8.2.6.50.4 Method of test

Initial Condition

System Simulator: 2 cells– Cell 1 and cell 6 are active.

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A12 in cell 1 as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH(FDD only) or E-PUCH (TDD only)

Test Procedure

**Table 8.2.6.50**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -70 | -70 | -60 |

Table 8.2.6.50 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

SS has configured its downlink transmission power setting according to columns “T0” in table 8.2.6.50. The UE is in state 6-18 under condition A12 as specified in TS34.108 clause 7.4 in cell 1 and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception.

The SS switches its downlink transmission power settings to columns "T1" and transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to URA_PCH. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enters URA_PCH state, selects cell 6. Upon completion of the procedure, the SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

NOTE: If the UE fails the test because of a failure to select to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| **1** | | | | The UE is in CELL_DCH state in cell 1 and the SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.50 |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE transmit this message in cell 1. |
| 4 | | | | SS sends the L2 ack on the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step.<br><br>Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 5 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 2) (FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info<br>- CHOICE mode<br>- UARFCN uplink (Nu)<br><br><br><br>- UARFCN downlink (Nd) | <br>FDD<br>Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [11]<br>Set to the frequency of cell 6 |
| Downlink information for each radio link<br>- Primary CPICH Info<br>- Primary scrambling code | <br><br>Set to same code as used for cell 6 |

PHYSICAL CHANNEL RECONFIGURATION (Step 2)(1.28Mcps TDD )

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>Same UARFCN as used for cell 6 |
| Downlink information for each radio link<br>- Choice mode<br>- Primary CCPCH info<br>- Choice mode<br>- Choice TDD Option<br>- TSTD indicator<br>- Cell parameters ID<br>- SCTD indicator | <br>TDD<br><br>TDD<br>1.28Mcps TDD<br>FALSE<br>Reference TS34.108 clause 6.1 for CELL 6 (TDD)<br>FALSE |

PHYSICAL CHANNEL RECONFIGURATION (Step 2) (3.84Mcps TDD and 7.68Mcps TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>Set to the frequency of cell 6 |
| Downlink information for each radio link<br>- Choice Mode<br>- Primary CCPCH info<br>- Cell parameters ID | <br>TDD<br><br>Set to the same as used for cell 6 |

#### 8.2.6.50.5 Test requirement

After step 2 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 1.

After step 3 the UE shall be in URA_PCH state in cell 6.

### 8.2.6.51 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving E-DCH cell change)

#### 8.2.6.51.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH and E-DPDCH or E-PUCH.

8.2.6.51.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable E_DCH_TRANSMISSION shall be set to "TRUE" only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable E_RNTI includes either the Primary E-RNTI or the Secondary E-RNTI or both the Primary and the Secondary E-RNTI;

1> For FDD:

2> the UE has stored the following IEs:

- IE "E-DCH Transmission Time Interval";
- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-DPCCH info" and the IE "E-DPDCH info".
- one of the radio links in the active set is configured as the serving E-DCH radio link, and for this radio link the UTRAN has configured the IE "E-HICH configuration" and the IE "E-AGCH info".

1> For TDD:

2> for non-scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-PUCH info";
- IE "Non-scheduled transmission grant info".

2> for scheduled transmission, the UE has stored the following IEs:

- IE "HARQ info for E-DCH";
- IE "E-DCH information", including the IE "E-RUCCH info" and the IE "E-PUCH info";
- IE "E-HICH info";
- IE "E-AGCH info".

1> there is at least one logical channel mapped to E-DCH for which:

2> the corresponding E-DCH MAC-d flow is configured, i.e. the IEs "E-DCH MAC-d flow power offset" and "E-DCH MAC-d flow maximum number of retransmissions", and the transmission grant type are configured.

If any of the above conditions is not met and the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> set the variable E_DCH_TRANSMISSION to FALSE;

1> stop any E-AGCH and E-HICH reception procedures;

For FDD:

2> stop any E-RGCH reception procedures;

1> For FDD:

2> stop any E-DPCCH and E-DPDCH transmission procedures;

1> For TDD:

2> stop any E-RUCCH and E-PUCH transmission procedures.

1> clear the variable E_RNTI;

1> act as if the IE "MAC-es/e reset indicator" was received and set to TRUE;

1> release all E-DCH HARQ resources;

1> no longer consider any radio link to be the serving E-DCH radio link.

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

3> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info";

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH".

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2> if scheduled transmission is configured, perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, if scheduled transmission is configured, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Whenever the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> not perform E-AGCH, E-HICH and E-RGCH reception procedures;

1> not perform E-DPCCH and E-DPDCH transmission procedures.

…

If the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the new value(s) in the variable E_RNTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

If, after the completion of this procedure, the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> clear the variable E-RNTI.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

1> for TDD:

2> use the value of New Primary E-RNTI stored in the variable E_RNTI as the UE identity in the E-AGCH reception procedure and the E-RUCCH transmission procedure in the physical layer.

…

If the IE "Added or Reconfigured UL TrCH information" is included and E-DCH is included and there is more than one MAC-d flow carried on E-DCH then the UE shall:

1> if any occurrence of the IE E-DCH Transmission Time Interval and, if present, the field HARQ info for E-DCH (IE HARQ RV Configuration):

2> for FDD:

3> apply the values of any occurrence for IE E-DCH Transmission Time Interval and, if present, the field HARQ info to all E-DCH MAC-d flows.

2> for TDD:

3> apply the value of the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

NOTE: The IE "Added or Reconfigured DL TrCH information" is iterated for each added or reconfigured MAC-d flow carried on E-DCH.

1> if the choice "UL parameters" is set to 'E-DCH':

2> for FDD:

3> apply the values of the IE "E-DCH Transmission Time Interval" and the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for TDD:

3> apply the value of the IE "HARQ info for E-DCH" to all E-DCH MAC-d flows.

2> for the IE "HARQ Info for E-DCH":

3> perform the actions specified in subclause 8.6.5.17.

2> if the IE "Added or Reconfigured E-DCH MAC-d Flow list " is included:

3> for each MAC-d flow identified by the IE "Mac-d flow identity":

4> perform the actions as specified in subclause 8.6.5.18.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

NOTE: In case of multiple E-DCH MAC-d flows, IE "Added or Reconfigured UL TrCH information" is only included once. If the IE "Added or Reconfigured UL TrCH information" is included more than once with the IE "Uplink transport channel type" set to 'E-DCH', the UE behaviour is unspecified.

…

If the IE "E-DCH Transmission Time Interval" is included, the UE shall:

1> store the received TTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> apply the TTI as signalled in the IE "E-DCH Transmission Time Interval" on the E-DPDCH.

…

If the IE "HARQ Info for E-DCH" is included, the UE shall:

1> store the received configuration;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use a redundancy version for each HARQ transmission as configured by the IE "HARQ RV Configuration".

…

If the IE "Added or reconfigured E-DCH MAC-d flow" is included, the UE shall:

1> if the IE "E-DCH MAC-d flow power offset" is included:

2> configure the power offset indicated in the IE "E-DCH MAC-d flow power offset" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow maximum number of retransmissions" is included:

2> configure the maximum number of retransmissions indicated in the IE "E-DCH MAC-d flow maximum number of retransmissions" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> for 1.28 Mcps TDD, if the IE "E-DCH MAC-d flow retransmission timer" is included:

2> configure the retransmission timer for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU’s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

1> else:

2> if previously the IE "E-DCH MAC-d flow multiplexing list" was already received for this E-DCH MAC-d flow:

3> continue to only multiplex E-DCH PDU’s from the E-DCH MAC-d flow indicated in the IE “E-DCH MAC-d flow identity” with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed according to the previously received IE “E-DCH MAC-d flow multiplexing list”.

2> else (never received the IE "E-DCH MAC-d flow multiplexing list" for this E-DCH MAC-d flow):

3> allow multiplexing of MAC-d PDU’s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU’s from any other E-DCH MAC-d flow in the same MAC-e PDU.

1> for FDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled grant HARQ process allocation" is configured for this MAC-d flow:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e or MAC-i PDU transmitted by HARQ processes allowed by the IE "2ms non-scheduled transmission grant HARQ process allocation", with a total contribution from this MAC-d flow (i.e. including MAC-e/es or MAC-i/is headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

3> else:

4> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e or MAC-i PDU transmitted by any HARQ process, with a total contribution from this MAC-d flow (i.e. including MAC-e/es or MAC-i/is headers) not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDU's for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH/E-RGCH (see [15]).

1> for TDD:

2> if the IE "Non-scheduled transmission grant info" is included:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes designated as non scheduled (Ids 4 – 7) in the TTIs indicated (for 3.84 Mcps TDD and 7.68 Mcps TDD, as determined from the IEs "Activation Time", "Resource Duration" and "Resource Periodicity"; for 1.28 Mcps TDD, as determined from the IEs "Activation Time", "Subframe number", "Resource Duration" and "Resource Periodicity", and the calculation of assigned non-scheduled transmission grant is specified in subclause 8.6.6.16a).

2> if the IE "Scheduled transmission grant info" is included:

3> transmission of MAC-d PDUs for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH (see [15]).

1> perform the actions as specified in subclause 8.5.21;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the UE is in TDD mode and shared transport channels are assigned to the UE:

3> start to receive the indicated Secondary CCPCH.

2> if the UE is in TDD mode and no shared transport channels are assigned to the UE:

3> set the variable UNSUPPORTED_CONFIGURATION to TRUE.

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link and no longer consider any other radio link as serving HS-DSCH radio link.

2> For FDD:

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link.

3> if the IE "E-AGCH Info" is included for the serving E-DCH radio link:

4> store the newly received E-AGCH configuration.

NOTE: The UTRAN should always include the IE "E-AGCH info" if the serving E-DCH radio link indicated in the message is another radio link than the serving E-DCH radio link prior to the procedure.

3> if the IE "E-HICH information" is included:

4> store this E-HICH configuration for the concerning radio link.

3> if the IE "E-RGCH information" is included:

4> store this E-RGCH configuration for the concerning radio link.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for TDD:

3> if the IE "E-AGCH Info" is included:

4> store the newly received E-AGCH configuration.

3> if the IE "E-HICH information" is included:

4> store the E-HICH configuration.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> For FDD:

3> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving HS-DSCH radio link;

4> if the serving HS-DSCH radio link was another radio link than this radio link prior to reception of the message and the IE "H-RNTI" is not included:

5> clear the variable H_RNTI.

3> if the IE "Serving HS-DSCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving HS-DSCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving HS-DSCH radio link.

3> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

3> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

4> consider this radio link as the serving E-DCH radio link;

4> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:

5> if the IE "New Primary E-RNTI" is not included:

6> clear the Primary E-RNTI stored in the variable E_RNTI.

5> if the IE "New Secondary E-RNTI" is not included:

6> clear the Secondary E-RNTI stored in the variable E_RNTI.

3> if the IE "Serving E-DCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving E-DCH radio link prior to reception of this message:

4> no longer consider this radio link as the serving E-DCH radio link.

3> if the IE "E-HICH release indicator" is present:

4> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.

3> if the IE "E-RGCH release indicator" is present:

4> delete the stored E-RGCH configuration for this RL.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28;

2> For TDD:

3> if the IE "H-RNTI" is not included and the primary CCPCH has changed:

4> clear the variable H_RNTI.

3> determine the value for the HS-DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

2> for TDD:

3> if the IE "New Primary E-RNTI" is not included:

4> clear the variable E_RNTI.

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:

3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> for FDD:

2> if the IE "E-DPCCH Info" is included:

3> store the newly received E-DPCCH configuration.

2> if the IE "E-DPDCH Info" is included:

3> store the newly received E-DPDCH configuration.

2> if the IE "UL 16QAM settings" is not included:

3> indicate to lower layers to stop any operation in 16QAM mode.

1> for 3.84/7.68 Mcps TDD:

2> if the IE "E-RUCCH Info" is included:

3> store the newly received E-RUCCH configuration.

2> if the IE "E-PUCH Info" is included:

NOTE 1: The UTRAN should ensure the ordering of the E-TFCI table in strictly increasing order of transmission power prior to quantization, by correct setting of the reference E-TFCI power offsets otherwise the UE behaviour is unspecified.

NOTE 2: If a reference E-TFCI signalled to the UE is outside the UE physical channel capability, the UE behaviour is unspecified.

NOTE 2a: If E-TFCI boost is signalled to the UE and a reference E-TFCI <= E-TFCI Boost is signalled to the UE with a Reference E-TFCI PO of value 30 or 31, the UE behaviour is unspecified.

1> if the IE "MAC-es/e reset indicator" is included:

2> reset the MAC-es/e or MAC-i/is entity [15].

NOTE 3: If the IE "MAC-es/e reset indicator" is not set to TRUE in case the IE "E-DCH Transmission Time Interval" is reconfigured, the UE behaviour is unspecified.

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> configure the UL E-DPCCH in accordance with the stored IE "E-DPCCH" configuration;

2> configure the MAC with the stored IE "E-DPDCH" configuration and/or the information contained in IE "Scheduled Transmission configuration".

1> for TDD:

2> configure the E-RUCCH with the stored E-RUCCH configuration;

2> configure the MAC with the stored E-PUCH configuration.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.28, 8.6.3.14, 8.6.5.5, 8.6.5.16, 8.6.5.17, 8.6.5.18, 8.6.6.4, 8.6.6.37

### 8.2.6.51.3 Test purpose

To confirm that the UE changes the serving E-DCH cell according to the received PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.51.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A13, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only) or E-PUCH (TDD only)

Test Procedure

**Table 8.2.6.51**

| Parameter | Unit | Cell 1 | | | | Cell 2 | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | Mid Range Test Frequency | | | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | -60 | -70 | -75 | -60 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | -60 | -70 | -75 | -60 | -70 | -60 |

Table 8.2.6.51 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The downlink transmission power is set according to values in column “T0” in table 8.2.6.51. The UE has a radio bearer mapped to the E-DCH/HS-DSCH and the signalling radio bearers mapped on E-DCH/DCH in cell 1.

For FDD

SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.51. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2.

After the MEASUREMENT REPORT message is received, the SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC to add cell 2 to the active set. When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links and cell 1 shall be kept as the serving E-DCH and HS-DSCH cell. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS configures its downlink transmission power settings according to columns "T2" in table 8.2.6.51. The SS configures reporting of event 1d “change of best cell” by transmitting a MEASUREMENT CONTROL message to the UE, and the UE shall send an initial MEASUREMENT REPORT which includes the primary scrambling code of cell 1 according to IE "Intra-frequency event identity" set to 1d.

The SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.51. The UE transmits a MEASUREMENT REPORT message, which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity" set to 1d..

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. At the activation time the UE and SS change the E-DCH and HS-DSCH serving cell to cell 2 and perform MAC-hs reset. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

For TDD

The SS configures reporting of event 1g “change of best cell” by transmitting a MEASUREMENT CONTROL message to the UE, and the UE shall send an initial MEASUREMENT REPORT which includes the Cell parameters Id of cell 1 according to IE "Intra-frequency event identity" set to 1g.

The SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.51. The UE transmits a MEASUREMENT REPORT message, which includes the Cell parameters Id of cell 2 according to IE "Intra-frequency event identity" set to 1g.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. SS sets up a Radio Link in Cell 2 At the activation time the UE changes the HS-PDSCH configuration. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. SS deletes the Radio Link in Cell 1

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | SS | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.51. (FDD only) |
| 0b | → | | MEASUREMENT REPORT | See specific message contents for this message (FDD only) |
| 1 | ← | | ACTIVE SET UPDATE | The SS instructs the UE to add cell 2 in the active set. (FDD only) |
| 2 | → | | ACTIVE SET UPDATE COMPLETE | The UE adds the radio link in cell 2. (FDD only) |
| 2a | SS | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.2.6.51. (FDD only) |
| 3 | ← | | MEASUREMENT CONTROL | Configure event 1D “Change of best cell” (FDD only) or 1g (TDD) |
| 4 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 5 | SS | | | SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.51 |
| 6 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 7 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Serving E-DCH and HS-DSCH cell change |
| 8 | SS | | | At the activation time, the SS changes the serving E-DCH and HS-DSCH radio link to cell 2 and performs MAC-hs reset. SS sets up a Radio Link in Cell 2(TDD only). |
| 9 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 10 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

MEASUREMENT REPORT (Step 0b) (FDD)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 1) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Radio link addition information | |
| - Primary CPICH Info | |
| - Primary scrambling code | Primary scrambling code of Cell 2 |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | FDD |
| - Primary CPICH usage for channel estimation | P-CPICH may be used. |
| - DPCH frame offset | Calculated value from Cell synchronisation information |
| - Secondary CPICH info | Not present |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE |
| - Secondary scrambling code | 1 |
| - Spreading factor | Refer to the parameter set in TS 34.108 |
| - Code number | 0 |
| - Scrambling code change | Not present |
| - TPC combination index | 1 |
| - Close loop timing adjustment mode | Not present |
| - TFCI combining indicator | FALSE |

MEASUREMENT CONTROL (Step 3) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| - CHOICE measurement type | Intra-frequency measurement |
| - Intra frequency cell info list | Not present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 3 |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/N0 reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1D |
| - Triggering condition 2 | Active set cells |
| - Hysteresis | 8 (4 dB) |
| - Time to trigger | 20 mSec |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active set |
| - Maximum number of reported cells | 3 |
| - Use CIO | FALSE |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 3) (1.28 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 3 |
| - CHOICE mode | TDD |
| - Measurement quantity | Primary CCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1G |
| - Hysteresis | 4dB (IE value = 8) |
| - Time to trigger | 20 mSec |
| - Reporting cell status | Report cells within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Use CIO | FALSE |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 4) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1D" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to "Primary scrambling code of Cell 1" |

MEASUREMENT REPORT (Step 4) (1.28 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |

| | |
|---|---|
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1G" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 1(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 4) (3.84 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1G" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 1(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 4) (7.68 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |

| | |
|---|---|
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1G" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 1(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 6) (FDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1D" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to "Primary scrambling code of Cell 2" |

MEASUREMENT REPORT (Step 6) (1.28 Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |

| | |
|---|---|
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Refer to clause titled "Default settings for cell 2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Timeslot list | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | |
| - CHOICE event result | Check to see if set to "Intra-frequency event results" |
| - Intra-frequency event identity | Check to see if set to "1G" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Check to see if set to "Cell parameters ID of Cell 2(TDD)" |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 6) (3.84Mcps TDD and 7.68Mcps TDD)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell Parameters ID | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is absent |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | TDD |
| - Cell Parameters ID | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1 of TS 34.108 |
| - Proposed TGSN | Checked that this IE is absent |
| - Primary CCPCH RSCP | Checked that this IE is absent |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1G" |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell Parameter ID | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1 of TS 34.108 |

PHYSICAL CHANNEL RECONFIGURATION (Step 7) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| Frequency info | Not present |
| Maximum allowed UL TX power | Not present |
| Uplink DPCH info | Not present |
| Downlink HS-PDSCH Information | |
| - HS-SCCH Info | |
| - CHOICE mode | FDD |
| - DL Scrambling Code | Not present |
| - HS-SCCH Channelisation Code Information | |
| - HS-SCCH Channelisation Code | 7 |
| - Measurement Feedback Info | |
| - CHOICE mode | FDD |
| - Measurement Power Offset | 12 (6 dB) |
| - CQI Feedback cycle, k | 4 ms |
| - CQI repetition factor | 1 |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) |
| - CHOICE mode | FDD (no data) |
| Downlink information common for all radio links | |
| - MAC-hs reset indicator | TRUE |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | (for cell 1) |
| - Choice mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) |
| - Cell ID | Not Present |
| - Serving HS-DSCH radio link indicator | FALSE |
| - Serving E-DCH radio link indicator | FALSE |
| - Downlink DPCH info for each RL | Not present |
| - SCCPCH information for FACH | Not present |
| - Downlink information for each radio link | (for cell 2) |
| - Choice mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Ref. to the Default setting in TS34.108 clause 6.1 (FDD) |
| - Cell ID | Not Present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - Downlink DPCH info for each RL | Not present |
| - CHOICE mode | FDD |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - DPCH frame offset | Calculated value from Cell synchronisation information |
| - Secondary CPICH info | Not Present |
| - DL channelisation code | |
| - Secondary scrambling code | 1 |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Code number | 0 |
| - Scrambling code change | Not present |
| - TPC combination index | 1 |
| - Closed loop timing adjustment mode | Not Present |
| - E-AGCH Info | |
| - E-AGCH Channelisation Code | 10 |
| - CHOICE E-HICH Information | |
| - E-HICH Information | |
| - Channelisation code | 4 |
| - Signature sequence | 1 |
| - CHOICE E-RGCH Information | |
| - E-RGCH Information | |
| - Signature Sequence | 0 |
| - RG combination index | 0 |

PHYSICAL CHANNEL RECONFIGURATION (Step 7) (1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| Frequency info | Not present | |
| Maximum allowed UL TX power | Not present | |
| Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | TDD (no data) | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 1.28 Mcps TDD | |
| - HS-PDSCH Midamble Configuration | | |
| - Midamble Allocation Mode | Default midamble | |
| - Midamble Configuration | 8 | |
| - Midamble Shift | Not present | |
| Downlink information common for all radio links | | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Ref. to the Default setting for cell 2 in TS34.108 clause 6.1 (TDD) | |
| - SCTD indicator | FALSE | |

PHYSICAL CHANNEL RECONFIGURATION (Step 7) (3.84Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| Frequency info | Not present |
| Maximum allowed UL TX power | Not present |
| Uplink DPCH info | Not present |
| Downlink HS-PDSCH Information | |
| - HS-SCCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84Mcps |
| - Ack-Nack Power Offset | 0dB |
| - HS-SICH Power Control Info | |
| - UL SIR target | 0dB |
| - HS-SICH Constant Value | -10dB |
| - $D_{hs-sync}$ | Not present |
| - HS-SCCH Set Configuration | 4 |
| - Timeslot number | The timeslot in which HS-SCCH is to be configured |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS |
| - Midamble Allocation mode | Default |
| - Midamble configuration | 8 |
| - BLER target | -2.4 (note that this equates to a BLER target of 0.4%, log10(0.004) = -2.4) |
| - HS-SICH configuration | |
| - Timeslot number | The timeslot in which HS-SICH is to be configured |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS |
| - Midamble Allocation mode | Default |
| - Midamble configuration | 8 |
| - Measurement Feedback Info | Not Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - HS-PDSCH Timeslot Configuration | |
| - HS-PDSCH Timeslot Configuration List | Reference to clause 6.10 Parameter Set |
| - Timeslot Number | The timeslot(s) in which HS-HS-DSCH is to be configured |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set |
| - Midamble Allocation Mode | Default |
| - Midamble configuration burst type 1 and 3 | 8 |
| Downlink information common for all radio links | |
| - MAC-hs reset indicator | TRUE |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | |
| - Choice mode | TDD |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1 of TS 34.108 |
| - Timeslot | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1 of TS 34.108 |
| - Cell parameters ID | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1 of TS 34.108 |
| - SCTD indicator | FALSE |
| - CHOICE DPCH info | Not present |
| - E-AGCH Info | Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84Mcps |
| - Long Term Grant Indicator | FALSE |
| - Length of TTRI field | Reference to clause 6.10 Parameter Set |
| - E-AGCH set configuration | Reference to clause 6.10 Parameter Set |
| - TS number | Reference to clause 6.10 Parameter Set |
| - Channelisation code | Reference to clause 6.10 Parameter Set |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set |

| | |
|---|---|
| - Midamble allocation | Reference to clause 6.10 Parameter Set |
| - E-AGCH BLER Target | -2 |
| - CHOICE mode | TDD |
| - E-HICH info | Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84Mcps |
| - $N_{E-HICH}$ | 4 |
| - TS Number | Reference to clause 6.10 Parameter Set |
| - Channelisation code | Reference to clause 6.10 Parameter Set |
| - Burst Type | Reference to clause 6.10 Parameter Set |
| - Midamble allocation mode | Reference to clause 6.10 Parameter Set |

PHYSICAL CHANNEL RECONFIGURATION (Step 7) (7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| Frequency info | Not present |
| Maximum allowed UL TX power | Not present |
| Uplink DPCH info | Not present |
| Downlink HS-PDSCH Information | |
| - HS-SCCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84Mcps |
| - Ack-Nack Power Offset | 0dB |
| - HS-SICH Power Control Info | |
| - UL SIR target | 0dB |
| - HS-SICH Constant Value | -10dB |
| - $D_{hs-sync}$ | Not present |
| - HS-SCCH Set Configuration | 4 |
| - Timeslot number | The timeslot in which HS-SCCH is to be configured |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS |
| - Midamble Allocation mode | Default |
| - Midamble configuration | 8 |
| - BLER target | -2.4 (note that this equates to a BLER target of 0.4%, log10(0.004) = -2.4) |
| - HS-SICH configuration | |
| - Timeslot number | The timeslot in which HS-SICH is to be configured |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS |
| - Midamble Allocation mode | Default |
| - Midamble configuration | 8 |
| - Measurement Feedback Info | Not Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - HS-PDSCH Timeslot Configuration | |
| - HS-PDSCH Timeslot Configuration List | Reference to clause 6.11 Parameter Set |
| - Timeslot Number | The timeslot(s) in which HS-HS-DSCH is to be configured |
| - CHOICE Burst Type | Reference to clause 6.11 Parameter Set |
| - Midamble Allocation Mode | Default |
| - Midamble configuration burst type 1 and 3 | 8 |
| Downlink information common for all radio links | |
| - MAC-hs reset indicator | TRUE |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | |
| - Choice mode | TDD |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1 of TS 34.108 |
| - Timeslot | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1 of TS 34.108 |

| | |
|---|---|
| - Cell parameters ID | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1 of TS 34.108 |
| - SCTD indicator | FALSE |
| - CHOICE DPCH info | Not present |
| - E-AGCH Info | Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps |
| - Long Term Grant Indicator | FALSE |
| - Length of TTRI field | Reference to clause 6.11 Parameter Set |
| - E-AGCH set configuration | Reference to clause 6.11 Parameter Set |
| - TS number | Reference to clause 6.11 Parameter Set |
| - Channelisation code | Reference to clause 6.11 Parameter Set |
| - CHOICE Burst Type | Reference to clause 6.11 Parameter Set |
| - Midamble allocation | Reference to clause 6.11 Parameter Set |
| - E-AGCH BLER Target | -2 |
| - CHOICE mode | TDD |
| - E-HICH info | Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68Mcps |
| - $N_{E-HICH}$ | 4 |
| - TS Number | Reference to clause 6.11 Parameter Set |
| - Channelisation code | Reference to clause 6.11 Parameter Set |
| - Burst Type | Reference to clause 6.11 Parameter Set |
| - Midamble allocation mode | Reference to clause 6.11 Parameter Set |

#### 8.2.6.51.5 Test requirements

After step 0a, the UE shall transmit a MEASUREMENT REPORT message (FDD only).

After step 3, the UE shall transmit a MEASUREMENT REPORT message.

After step 5, the UE shall transmit a MEASUREMENT REPORT message.

After step 8, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

### 8.2.6.52 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, Serving E-DCH cell change, compressed mode)

#### 8.2.6.52.1 Definition

All UEs which support FDD, HS-PDSCH, E-DPDCH and fully support F-DPCH and all UEs which support TDD and HS-PDSCH and E-PUCH.

#### 8.2.6.52.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> set the variable ORDERED_RECONFIGURATION to TRUE;

…

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

…

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" is included, the UE shall:

2> at the time indicated by IE "TGCFN":

3> activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate"; and

3> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "active".

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.6.6.15 (FDD only).

### 8.2.6.52.3 Test purpose

To confirm that the UE is able to perform a timing re-initialised hard handover to another frequency after compressed mode measurement on the target frequency in conjunction with a serving E-DCH cell change according to the received PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.52.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 and cell 6 are active

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A14 in cell 1 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only)
- UE fully supports F-DPCH (FDD only)
- UE supports E-PUCH (TDD only)Test Procedure

**Table 8.2.6.52**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |
| PCCPCH RSCP | dBm | -60 | -70 | -70 | -60 |

Table 8.2.6.52 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in state 6-18 under condition A14 as specified in TS34.108 clause 7.4 in cell 1 and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception. The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.52.

The SS configures compressed mode (if required) by sending a PHYSICAL CHANNEL RECONFIGURATION message, which includes the IE "DPCH compressed mode info" with the IE "TGPS Status Flag" set to "Deactivate" (FDD only). The UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC (FDD only).

The SS switches its downlink transmission power setting according to columns "T1" in table 8.2.6.52, but the UE shall not transmit any MEASUREMENT REPORT messages.

The SS then sets up inter-frequency measurements (event 2b) and activates compressed mode (if required), by sending a MEASUREMENT CONTROL message to the UE. The SS waits for 1s for the UE to activate compressed mode. The UE shall transmit MEASUREMENT REPORT message to report event 2b with the measured CPICH RSCP and Ec/No values for cell 6 to the SS.

The SS then transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE ordering the UE to change to Cell 6. At the activation time the UE changes to Cell 6 keeping the E-DCH configuration. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

The SS calls for the generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.52. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS downloads compressed mode parameters without activating compressed mode (if required) (FDD only). |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE acknowleges the downloading of the compressed mode parameters (only if compressed mode was configured) (FDD only). |
| 4 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.52. |
| 5 | ← | | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE and activates compressed mode (if required). |
| 6 | → | | MEASUREMENT REPORT | The UE shall report event 2b with the measured CPICH RSCP and Ec/No values for cell 6 for FDD. The UE shall report event 2b with the measured PCCPCH RSCP for cell 6 for TDD. |
| 7 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS instructs the UE to change to Cell 6. |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE sends this message in cell 6. |
| 9 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Uplink DPCH info | |
| - Uplink DPCH power control info | |
| - DPCCH power offset | -40 (-80dB) |
| - PC Preamble | 1 frame |
| - SRB delay | 7 frames |
| - Power Control Algorithm | Algorithm1 |
| - TPC step size | 0 (1dB) |
| - $\Delta_{ACK}$ | 3 |
| - $\Delta_{NACK}$ | 3 |
| - Ack-Nack repetition factor | 1 |
| - HARQ_preamble_mode | 0 |
| - Scrambling code type | Long |
| - Scrambling code number | 0 (0 to 16777215) |
| - Number of DPDCH | 0 |
| - spreading factor | Not Present |
| - TFCI existence | FALSE |
| - Number of FBI bit | Not Present |
| - Puncturing Limit | Not Present |
| E-DCH Info | Not present |
| Downlink HS-PDSCH Information | Not present |
| Downlink information common for all radio links | |
| - Downlink F-DPCH info common for all RL | |
| - Timing Indication | Maintain |
| - Timing maintained Synchronization indicator | FALSE |
| - Downlink DPCH power control information | |
| - CHOICE Mode | FDD |
| -DPC Mode | 0 (Single) |
| - TPC command error rate target | 0.04 |
| - CHOICE mode | FDD |
| - DPCH compressed mode info | |
| - TGPSI | 1 |
| - TGPS Status Flag | Deactivate |
| - TGCFN | Not Present |
| - Transmission gap pattern sequence configuration parameters | |
| - TGMP | FDD Measurement |
| - TGPRC | Infinity |
| - TGSN | 4 |
| - TGL1 | 7 |
| - TGL2 | Not Present |
| - TGD | Undefined |
| - TGPL1 | 3 |
| - RPP | mode 0 |
| - ITP | mode 0 |
| - CHOICE UL/DL Mode | UL and DL, UL only, or DL only, depending on UE capability |
| - Downlink compressed mode method | SF/2 (Comment: If F-DPCH is configured this IE shall not be used by the UE.) |
| - Uplink compressed mode method | SF/2 |
| - Downlink frame type | B |
| - DeltaSIR1 | 20 (2.0) |
| - DeltaSIRAfter1 | 10 (1.0) |
| - DeltaSIR2 | Not Present |
| - DeltaSIRAfter2 | Not Present |
| - N identify abort | Not Present |
| - T Reconfirm abort | Not Present |
| - TX Diversity Mode | Not Present |
| - Default DPCH Offset Value | Not Present |
| - MAC-hs reset indicator | Not Present |

| Information Element | Value/remark |
|---|---|
| - Downlink information for each radio link list | OMIT |

MEASUREMENT CONTROL (Step 5) (FDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions in the IE(s) concerned:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement object list | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | Remove all inter-frequency cells |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 6 |
| - Frequency info | Set to the frequency of cell 6 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | OMIT |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |
| - Primary CPICH TX power | Not Present |
| - Primary CPICH TX power | |
| - TX Diversity Indicator | Not Present |
| - Cell for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - CHOICE Mode | FDD |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - COICE Mode | FDD |
| - CPICH Ec/No reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | |
| - UE state | CELL_DCH |
| - Inter-frequency set update | On with no reporting |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -65 dBm |
| - W used frequency | Not present |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | |
| - CHOICH reported cell | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -68 dBm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN + (100 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Status Flag | Activate |

| Information Element | Value/remark |
|---|---|
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

MEASUREMENT CONTROL (Step 5) (3.84Mcps TDD and 7.68Mcps TDD)

Use the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions in the IE(s) concerned:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement object list | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | Remove all inter-frequency cells |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 6 |
| - Frequency info | Set to the frequency of cell 6 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | OMIT |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | TDD |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD or 7.68Mcps |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Set to cell parameter ID of cell6 |
| - SCTD indicator | FALSE |
| - Cell for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - CHOICE Mode | TDD |
| - Measurement quantity for frequency quality estimate | Primary CCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - COICE Mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | |
| - UE state | CELL_DCH |
| - Inter-frequency set update | On with no reporting |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -65 dBm |
| - W used frequency | Not present |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | |
| - CHOICH reported cell | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -68 dBm |
| - W non-used frequency | 0 |

MEASUREMENT REPORT (Step 6)

The contents of MEASUREMENT REPORT message is the same as them found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE Measurement | |
| - Inter frequency measured results list | Check to see if set to "Inter-frequency measured results list" |
| - Inter frequency measurement results | |
| - Frequency info | Set to the frequency of cell 6 |
| - UTRA carrier RSSI | Check to see if absent |
| - Inter frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | Check that the value of this IE is set to Scrambling code of cell 6 |
| - CPICH Ec/No | Check to see if it is present |
| - CPICH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Additional Measured results | Check to see if it is absent |
| - Measured Result | |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | Check that the value of this IE is set to the frequency of cell 6 |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code of cell 6 |

MEASUREMENT REPORT (Step 6) (3.84Mcps TDD and 7.68Mcps TDD)

The contents of MEASUREMENT REPORT message is the same as them found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE Measurement | |
| - Inter frequency measured results list | Check to see if set to "Inter-frequency measured results list" |
| - Inter frequency measurement results | |
| - Frequency info | Set to the frequency of cell 6 |
| - UTRA carrier RSSI | Check to see if absent |
| - Inter frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - CHOICE Mode | TDD |
| - Cell Parameters ID | Check that the value of this IE is set to cell parameters ID cell 6 |
| - Proposed TGSN | Check to see if it is absent |
| - Primary CCPCH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| - Timeslot list | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Additional Measured results | Check to see if it is absent |
| - Measured Result | |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | Check that the value of this IE is set to the frequency of cell 6 |
| - Non freq related measurement event results | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell Parameters ID | Check that the value of this IE is set to the cell parameters ID of cell 6 |

PHYSICAL CHANNEL RECONFIGURATION (Step 7)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| Frequency info | |
| - UARFCN uplink(Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Uplink DPCH info | Not Present |
| E-DCH Info | |
| - MAC-es/e reset indicator | TRUE |
| - E-DPCCH info | Not Present |
| - E-DPDCH info | Not Present |
| - Scheduled Transmission configuration | Not Present |
| Downlink HS-PDSCH Information | Not Present |
| - HS-SCCH Info | |
| - CHOICE mode | FDD |
| - DL Scrambling Code | |
| - HS-SCCH Channelisation Code Information | |
| - HS-SCCH Channelisation Code | 7 |
| - Measurement Feedback Info | |
| - CHOICE mode | FDD |
| - POhsdsch | 12 (6 dB) |
| - CQI Feedback cycle, k | 4 ms |
| - CQI repetition factor | 1 |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) |
| - CHOICE mode | FDD (no data) |
| Downlink information common for all radio links | |
| - Downlink F-DPCH info common for all RL | |
| - Timing indication | Initialise |
| - Downlink F-DPCH power control information | Not Present |
| - TPC command error rate target | 0.04 |
| - DPCH compressed mode info | Not present |
| - TX Diversity mode | Not Present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | FDD |
| - Primary CPICH info | Set to the scrambling code of cell 6 |
| - Cell ID | Not present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - Downlink DPCH info for each RL | Not present |
| - Downlink F-DPCH info for each RL | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - F-DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 |
| - Secondary CPICH info | Not present |
| - Secondary scrambling code | Not present |
| - Code number | 12 |
| - TPC combination index | 0 |
| - E-AGCH information | |
| - E-AGCH channelisation code | 10 |
| - CHOICE E-HICH information | E-HICH information |
| - Channelisation code | 4 |
| - Signature sequence | 2 |
| - CHOICE E-RGCH Information | Not present |

PHYSICAL CHANNEL RECONFIGURATION (Step 7) (3.84Mcps)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Set to UARFCN as used for cell 6 |
| Uplink DPCH info | Not Present |
| E-DCH Info | |
| - MAC-es/e reset indicator | TRUE |
| - CHOICE mode | TDD |
| - E-RUCCH info | Not Present |
| - E-PUCH info | Not Present |
| - Non-Scheduled Transmission configuration | Not Present |
| Downlink HS-PDSCH Information | Not Present |
| - HS-SCCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps |
| - Ack-Nack Power Offset | 0dB |
| - HS-SICH Power Control Info | |
| - UL SIR target | 0dB |
| - HS-SICH Constant Value | -10dB |
| - $D_{hs\text{-}sync}$ | Not present |
| - HS-SCCH Set Configuration | 4 |
| - Timeslot number | The timeslot in which HS-SCCH is to be configured |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS (3.84Mcps). |
| - Midamble Allocation mode | Default |
| - Midamble configuration | 8 |
| - BLER target | -2.4 (note that this equates to a BLER target of 0.4%, log10(0.004) = -2.4) |
| - HS-SICH configuration | |
| - Timeslot number | The timeslot in which HS-SICH is to be configured |
| - Channelisation code | CC16/x where x is a previously unassigned channelisation code in this TS |
| - Midamble Allocation mode | Default |
| - Midamble configuration | 8 |
| - Measurement Feedback Info | Not Present |
| Downlink information common for all radio links | |
| - CHOICE DPCH info | Downlink DPCH info common for all RL |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | Not Present |
| - Downlink DPCH power control information | |
| - CHOICE mode | TDD |
| - TPC Step Size | 1 |
| - MAC-d HFN initial value | Not Present |
| - CHOICE mode | TDD |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps |
| - Default DPCH Offset Value | Not Present |
| - Mac-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Set to cell parameter ID of cell6 |

| Information Element | Value/remark |
|---|---|
| - SCTD indicator | FALSE |
| - CHOICE DPCH info | Downlink DPCH info for each RL |
| - CHOICE mode | TDD |
| - DL CCTrCH List | 1 CCTrCh |
| - TFCS ID | 1 |
| - Activation time | Not Present |
| - Duration | Not Present |
| - Common timeslot info | |
| - 2nd interleaving mode | Reference to clause 6.10 Parameter Set |
| - TFCI coding | Reference to clause 6.10 Parameter Set |
| - Puncturing Limit | Reference to clause 6.10 Parameter Set |
| - Repetition Period | Reference to clause 6.10 Parameter Set |
| - Repetition Length | Reference to clause 6.10 Parameter Set |
| - Downlink DPCH timeslots and codes | |
| - Individual timeslot info | |
| - Timeslot number | The number of a downlink timeslot that has unassigned codes. |
| - TFCI existence | TRUE |
| - Midamble shift and burst type | |
| - CHOICE TDD option | 3.84 Mcps |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set |
| - Midamble Allocation Mode | Default |
| - Midamble configuration | Set Kcell to lowest possible value given the number of codes defined in clause 6.10 Parameter Set |
| - CHOICE TDD option | 3.84 Mcps |
| - First timeslot channelisation codes | |
| - CHOICE codes representation | Consecutive codes |
| - First channelisation code | (i/SF) where i is the lowest numbered code that is being assigned and SF is specified in clause 6.10 Parameter Set. |
| - Last channelisation code | (j/SF) where j is the highest numbered code that is being assigned in the slot as specified in clause 6.10 Parameter Set. |
| - CHOICE more timeslots | The presence of this IE depends upon whether the requirements of clause 6.10 Parameter Set could be met by the codes that have been assigned in the first timeslot. |
| - UL CCTrCH TPC List | 1 |
| - UL TPC TFCS Identity | |
| - TFCS ID | 1 |
| - Shared channel indicator | False |
| - DL CCTrCH List to Remove | Not Present |
| - SCCPCH information for FACH | Not Present |
| - E-AGCH Info | Not Present |
| - CHOICE E-HICH Information | Not Present |
| - CHOICE E-RGCH Information | Not Present |

PHYSICAL CHANNEL RECONFIGURATION (Step 7) (7.68Mcps)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Set to UARFCN as used for cell 6 |
| Uplink DPCH info | Not Present |
| E-DCH Info | |
| - MAC-es/e reset indicator | TRUE |
| - CHOICE mode | TDD |
| - E-RUCCH info | Not Present |
| - E-PUCH info | Not Present |
| - Non-Scheduled Transmission configuration | Not Present |
| Downlink HS-PDSCH Information | Not Present |
| - HS-SCCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps |
| - Ack-Nack Power Offset | 0dB |
| - HS-SICH Power Control Info | |
| - UL SIR target | 0dB |
| - HS-SICH Constant Value | -10dB |
| - $D_{hs\text{-}sync}$ | Not present |
| - HS-SCCH Set Configuration | 4 |
| - Timeslot number | The timeslot in which HS-SCCH is to be configured |
| - Channelisation code | CC32/x where x is a previously unassigned channelisation code in this TS (7.68Mcps). |
| - Midamble Allocation mode | Default |
| - Midamble configuration | 8 |
| - BLER target | -2.4 (note that this equates to a BLER target of 0.4%, log10(0.004) = -2.4) |
| - HS-SICH configuration | |
| - Timeslot number | The timeslot in which HS-SICH is to be configured |
| - Channelisation code | CC32/x where x is a previously unassigned channelisation code in this TS |
| - Midamble Allocation mode | Default |
| - Midamble configuration | 8 |
| - Measurement Feedback Info | Not Present |
| Downlink information common for all radio links | |
| - CHOICE DPCH info | Downlink DPCH info common for all RL |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | Not Present |
| - Downlink DPCH power control information | |
| - CHOICE mode | TDD |
| - TPC Step Size | 1 |
| - MAC-d HFN initial value | Not Present |
| - CHOICE mode | TDD |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps |
| - Default DPCH Offset Value | Not Present |
| - Mac-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Set to cell parameter ID of cell6 |

| Information Element | Value/remark |
|---|---|
| - SCTD indicator | FALSE |
| - CHOICE DPCH info | Downlink DPCH info for each RL |
| - CHOICE mode | TDD |
| - DL CCTrCH List | 1 CCTrCh |
| - TFCS ID | 1 |
| - Activation time | Not Present |
| - Duration | Not Present |
| - Common timeslot info | |
| - 2nd interleaving mode | Reference to clause 6.11 Parameter Set |
| - TFCI coding | Reference to clause 6.11 Parameter Set |
| - Puncturing Limit | Reference to clause 6.11 Parameter Set |
| - Repetition Period | Reference to clause 6.11 Parameter Set |
| - Repetition Length | Reference to clause 6.11 Parameter Set |
| - Downlink DPCH timeslots and codes | |
| - Individual timeslot info | |
| - Timeslot number | The number of a downlink timeslot that has unassigned codes. |
| - TFCI existence | TRUE |
| - Midamble shift and burst type | |
| - CHOICE TDD option | 7.68 Mcps |
| - CHOICE Burst Type | Reference to clause 6.11 Parameter Set |
| - Midamble Allocation Mode | Default |
| - Midamble configuration | Set Kcell to lowest possible value given the number of codes defined in clause 6.11 Parameter Set |
| - CHOICE TDD option | 7.68 Mcps |
| - First timeslot channelisation codes | |
| - CHOICE codes representation | Consecutive codes |
| - First channelisation code | (i/SF) where i is the lowest numbered code that is being assigned and SF is specified in clause 6.10 Parameter Set. |
| - Last channelisation code | (j/SF) where j is the highest numbered code that is being assigned in the slot as specified in clause 6.10 Parameter Set. |
| - CHOICE more timeslots | The presence of this IE depends upon whether the requirements of clause 6.11 Parameter Set could be met by the codes that have been assigned in the first timeslot. |
| - UL CCTrCH TPC List | 1 |
| - UL TPC TFCS Identity | |
| - TFCS ID | 1 |
| - Shared channel indicator | False |
| - DL CCTrCH List to Remove | Not Present |
| - SCCPCH information for FACH | Not Present |
| - E-AGCH Info | Not Present |
| - CHOICE E-HICH Information | Not Present |
| - CHOICE E-RGCH Information | Not Present |

### 8.2.6.52.5 Test requirement

After step 2 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC (FDD only).

After step 5 the UE shall transmit a MEASUREMENT REPORT message containing the IE "measured results" reporting cell 6's CPICH RSCP and Ec/No values, also report the triggering of event '2b' included in IE "Event results".

After step 7, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message in cell 6.

## 8.2.6.53 Void

## 8.2.6.54 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Failure (Timing re-initialized hard handover, Serving E-DCH cell change, physical channel failure and reversion to old channel)

### 8.2.6.54.1 Definition and applicability

All UEs which support FDD or TDD and HS-PDSCH and E-DPDCH or E-PUCH.

### 8.2.6.54.2 Conformance requirement

If the received message caused the UE to be in CELL_DCH state and the UE according to subclause 8.5.4 failed to establish the dedicated physical channel(s) indicated in the received message or for 3.84 Mcps TDD and 7.68 Mcps TDD failed to establish the physical channel(s) indicated in the received message to which DCCH(s) are mapped the UE shall:

1> For TDD or For FDD if the CM_PATTERN_ACTIVATION_ABORTED flag is not set to TRUE:

2> revert to the configuration prior to the reception of the message (old configuration), including any HS-DSCH and E-DCH configuration if existing;

2> For FDD: if the UE was in Cell DCH state prior to the reconfiguration:

3> perform the physical layer synchronisation procedure A as specified in [29];

3> apply power control preamble according to [26] during the number of frames indicated in the IE "PC preamble" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE; and

3> then not send any data on signalling radio bearers RB0 to RB4 during the number of frames indicated in the IE "SRB delay" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE or while the physical channel is not considered established;.

1> if the old configuration includes dedicated physical channels (CELL_DCH state) and the UE is unable to revert to the old configuration or for FDD if the CM_PATTERN_ACTIVATION_ABORTED flag is set to TRUE:

2> initiate a cell update procedure according to subclause 8.3.1, using the cause "radio link failure";

2> after the cell update procedure has completed successfully:

3> proceed as below.

1> if the old configuration does not include dedicated physical channels (CELL_FACH state):

2> select a suitable UTRA cell according to [4];

2> if the UE selects another cell than the cell the UE camped on upon reception of the reconfiguration message:

3> initiate a cell update procedure according to subclause 8.3.1, using the cause "Cell reselection";

3> after the cell update procedure has completed successfully:

4> proceed as below.

1> transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

Reference(s)

TS 25.331 clause 8.2.2.7

### 8.2.6.54.3 Test purpose

To confirm that the UE reverts to the old E-DCH / HS-DSCH configuration and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message if the UE fails to reconfigure the new physical channel according to the received PHYSICAL CHANNEL RECONFIGURATION message before the expiry of timer T312.

### 8.2.6.54.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 & Cell 6.

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A13, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH (FDD only) or E-PUCH (TDD only)

Test Procedure

The UE is in the CELL_DCH state and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE ordering the UE to perform a timing re-initialized hard handover to Cell 6, but the SS does not configure the dedicated physical channels in Cell 6. At the activation time the UE attempts to establish dedicated physical channels on Cell 6, but fails to do so.
The UE shall then revert to the old E-DCH / HS-DSCH configuration on Cell 1 and transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message to the SS on the DCCH using AM RLC, with the value "physical channel failure" in the IE "failure cause".

The SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS instructs the UE to perform a timing re-initialized hard handover to Cell 6. The SS does not configure the physical channels in Cell 6. |
| 2 | | | | The UE attempts to establish dedicated physical channels on Cell 6, but fails to do so. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION FAILURE | The UE sends this message on Cell 1. The IE “failure cause” is set to “physical channel failure”. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 Clause 9, except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| Frequency info | |
| - UARFCN uplink(Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for Cell 6 |
| Uplink DPCH info | Not Present |
| E-DCH Info | Not Present |
| Downlink HS-PDSCH Information | Not Present |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - Downlink DPCH power control information | Not Present |
| - Downlink rate matching restriction information | Not Present |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set |
| - DPCH compressed mode info | Not present |
| - TX Diversity mode | Not Present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | FDD |
| - Primary CPICH info | Set to the scrambling code of Cell 6 |
| - Cell ID | Not present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | FDD |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - DPCH frame offset | Set to value of Default DPCH Offset Value modulo 38400 |
| - Secondary CPICH info | Not present |
| - DL channelisation code | |
| - Secondary scrambling code | 5 |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Code number | Any value between 0 and Spreading factor-1 |
| - Scrambling code change | Not Present |
| - TPC combination index | 0 |
| - Closed loop timing adjustment mode | Not present |
| - E-AGCH information | |
| - E-AGCH channelisation code | 10 |
| - CHOICE E-HICH information | E-HICH information |
| - Channelisation code | 4 |
| - Signature sequence | 2 |
| - CHOICE E-RGCH Information | E-RGCH information |
| - Signature sequence | 3 |
| - RG combination index | 1 |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (1.28 Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 Clause 9, except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| New Primary E-RNTI | '0101 0101 0101 0101' | |
| New Secondary E-RNTI | Not Present | |
| Frequency info | | |
| - UARFCN uplink(Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for Cell 6 | |
| Uplink DPCH info | Not Present | |
| E-DCH Info | Not Present | |
| Downlink HS-PDSCH Information | Not Present | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - Downlink DPCH power control information | Not Present | |
| - MAC-d HFN initial value | Not Present | |
| - CHOICE mode | TDD | |
| - CHOICE mode | TDD | |
| - CHOICE TDD option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Default DPCH Offset Value | Not Present | |
| - MAC-hs reset indicator | TRUE | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Ref. To the Default setting for cell 1 in TS34.108 clause 6.1 (TDD) | |
| - SCTD indicator | FALSE | |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (3.84Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 Clause 9, except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Set to the frequency of cell 6 |
| Uplink DPCH info | Not Present |
| E-DCH Info | Not Present |
| Downlink HS-PDSCH Information | Not Present |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - Downlink DPCH power control information | Not Present |
| - CHOICE mode | TDD |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CPICH info | Set to the scrambling code of Cell 6 |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Set to the cell parameter ID of Cell 6 |
| - SCTD indicator | FALSE |
| - CHOICE DPCH info | Not present |
| - E-AGCH Info | Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84Mcps |
| - Long Term Grant Indicator | FALSE |
| - Length of TTRI field | Reference to clause 6.10 Parameter Set |
| - E-AGCH set configuration | Reference to clause 6.10 Parameter Set |
| - TS number | Reference to clause 6.10 Parameter Set |
| - Channelisation code | Reference to clause 6.10 Parameter Set |
| - CHOICE Burst Type | Reference to clause 6.10 Parameter Set |
| - Midamble allocation | Reference to clause 6.10 Parameter Set |
| - E-AGCH BLER Target | -2 |
| - CHOICE mode | TDD |
| - E-HICH info | Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84Mcps |
| - $N_{E\text{-}HICH}$ | 4 |
| - TS Number | Reference to clause 6.10 Parameter Set |
| - Channelisation code | Reference to clause 6.10 Parameter Set |
| - Burst Type | Reference to clause 6.10 Parameter Set |
| - Midamble allocation mode | Reference to clause 6.10 Parameter Set |

PHYSICAL CHANNEL RECONFIGURATION (Step 1) (7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 Clause 9, except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Set to the frequency of cell 6 |
| Uplink DPCH info | Not Present |
| E-DCH Info | Not Present |
| Downlink HS-PDSCH Information | Not Present |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - Downlink DPCH power control information | Not Present |
| - CHOICE mode | TDD |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CPICH info | Set to the scrambling code of Cell 6 |
| - Primary CCPCH info | |
| - Choice mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Set to the cell parameter ID of Cell 6 |
| - SCTD indicator | FALSE |
| - CHOICE DPCH info | Not present |
| - E-AGCH Info | Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps |
| - Long Term Grant Indicator | FALSE |
| - Length of TTRI field | Reference to clause 6.11 Parameter Set |
| - E-AGCH set configuration | Reference to clause 6.11 Parameter Set |
| - TS number | Reference to clause 6.11 Parameter Set |
| - Channelisation code | Reference to clause 6.11 Parameter Set |
| - CHOICE Burst Type | Reference to clause 6.11 Parameter Set |
| - Midamble allocation | Reference to clause 6.11 Parameter Set |
| - E-AGCH BLER Target | -2 |
| - CHOICE mode | TDD |
| - E-HICH info | Present |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps |
| - $N_{E-HICH}$ | 4 |
| - TS Number | Reference to clause 6.11 Parameter Set |
| - Channelisation code | Reference to clause 6.11 Parameter Set |
| - Burst Type | Reference to clause 6.11 Parameter Set |
| - Midamble allocation mode | Reference to clause 6.11 Parameter Set |

PHYSICAL CHANNEL RECONFIGURATION FAILURE (Step 3)

Use the same message as specified in 34.108 Clause 9, except for the following:

| Information Element | Value/remark |
|---|---|
| Failure cause | Physical channel failure |

### 8.2.6.54.5 Test requirements

After step 2, the UE shall revert to the old E-DCH / HS-DSCH configuration on Cell 1 and transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message.

## 8.2.6.55 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start of discontinuous uplink transmission and downlink reception)

### 8.2.6.55.1 Definition and applicability

All UEs which support FDD and UL DTX.

### 8.2.6.55.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

….

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> store the contents of the IE in the variable DTX_DRX_PARAMS.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clause 8.5.34, 8.6.6.38, 8.6.6.39

### 8.2.6.55.3 Test purpose

To confirm that the UE reconfigures the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the IE DTX_DRX_Information received in PHYSICAL CHANNEL RECONFIGURATION message from the SS.

### 8.2.6.55.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A14 in cell 1 as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission

Test Procedure

The UE is in state 6-18 under condition A14 as specified in TS 34.108 clause 7.4 in cell 1 and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. UE re-configures the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration. The UE then transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 320ms if 2ms TTI is used, or 400ms if 10ms TTI is used.

SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | Physical Channel reconfiguration | |
| 2 | → | | Physical Channel reconfiguration complete | |
| 3 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 320ms if 2ms TTI is used, or 400ms if 10ms TTI is used. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (FDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in TS34.108, with the following exceptions:

For UE category supporting 2ms TTI:

| Information Element | Value/remark |
|---|---|
| DTX-DRX timing information | |
| CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 0 |
| - UE DTX DRX Offset | 1 |
| DTX-DRX Information | |
| - CHOICE E-DCH TTI length | 2ms |
| - UE DTX cycle 1 | 8 |
| - UE DTX cycle 2 | 16 |
| - MAC DTX cycle | 8 |
| - Inactivity Threshold for UE DTX cycle 2 | 32 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 1 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 8 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 32 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| Uplink DPCH info | OMIT |
| Downlink information common for all radio links | OMIT |
| Downlink information for each radio links | OMIT |

For UE category not supporting 2ms TTI (use 10ms TTI):

| Information Element | Value/remark |
|---|---|
| DTX-DRX timing information | |
| CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 16 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE E-DCH TTI length | 10ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| Uplink DPCH info | OMIT |
| Downlink information common for all radio links | OMIT |
| Downlink information for each radio links | OMIT |

#### 8.2.6.55.5 Test requirements

After step 1, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

At step 3 the time taken to report 10 consecutive CQI indications shall be 320ms if 2ms TTI is used, or 400ms if 10ms TTI is used.

After step 3, the UE shall be in Cell_DCH state

### 8.2.6.56 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start of HS-SCCH less operation)

#### 8.2.6.56.1 Definition and applicability

All UEs, which support FDD and HS-SCCH less.

#### 8.2.6.56.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

….

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message;

1> the UE shall determine the value for the HS_SCCH_LESS_STATUS variable.

The variable HS_SCCH_LESS_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> the variable HS_DSCH_RECEPTION is set to TRUE;

1> no DCH transport channel is configured;

1> the UE is not configured in MIMO mode;

1> the variable HS_SCCH_LESS_PARAMS is set;

1> the UE has received IE "HS-SCCH less information".

If any of the above conditions is not met and the variable HS_SCCH_LESS_STATUS is set to TRUE and the value of IE "HS-SCCH less information" included in this message is not "Continue HS-SCCH less operation", the UE shall:

1> set the variable HS_SCCH_LESS_STATUS to FALSE;

1> clear the variable HS_SCCH_LESS_PARAMS;

1> stop all HS-SCCH less related activities.

Whenever the variable HS_SCCH_LESS_STATUS is set to TRUE, the UE shall:

1> configure the physical and MAC layers to operate according to the HS_SCCH_LESS_PARAMS;

1> configure the physical layer to use a virtual IR buffer size of at least 4536 bits for HS-SCCH less HS-DSCH transmissions.

#### Reference

3GPP TS 25.331 clause 8.2.2.4, 8.5.34, 8.6.6.40

8.2.6.56.3 Test purpose

To confirm that the UE reconfigures the physical layer to perform HS-SCCH less operation according to the IE HS-SCCH less information received in PHYSICAL CHANNEL RECONFIGURATION message from the SS.

8.2.6.56.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A14 in cell 1 as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statements

- UE supports FDD
- UE supports HS-SCCHless HS-DSCH

Test Procedure

The UE is in state 6-18 under condition A14 as specified in TS34.108 clause 7.4 in cell 1 and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. UE re-configures the physical layer to perform HS-SCCH less operation according to the variable HS_SCCH_LESS_PARAMS. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | See message contents |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 3 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (FDD)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in TS34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| HS-SCCH less information | |
| CHOICE HS-SCCH less operation | |
| - New HS-SCCH less operation | |
| - HS-PDSCH Code Index | 14 |
| - Transport Block Size List | 4 elements |
| - Transport Block Size Index | 20 [365, sufficient for 1 MAC-d PDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | FALSE |
| - Transport Block Size Index | 48 [699, sufficient for 2 MAC-d PDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | FALSE |
| - Transport Block Size Index | 70[1036, sufficient for 3 MAC-d PDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | FALSE |
| - Transport Block Size Index | 86 [1380, sufficient for 4 MAC-d PDU of 336 + MAC-hs header of 21] |
| - HS-PDSCH Second Code Support | FALSE |
| Uplink DPCH info | OMIT |
| Downlink information common for all radio links | OMIT |
| Downlink information for each radio links | OMIT |

#### 8.2.6.56.5 Test requirements

After step 1, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 2, the UE shall be in Cell_DCH state

### 8.2.6.57 Physical Channel Reconfiguration for transition from CELL_DCH to URA_PCH: Success (frequency modification, stop of discontinuous uplink transmission)

#### 8.2.6.57.1 Definition

All UEs, which support FDD and UL DTX.

#### 8.2.6.57.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

2> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> store the contents of the IE in the variable DTX_DRX_PARAMS.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

…

If after state transition the UE leaves CELL_DCH state, the UE shall, after the state transition:

1> if any IEs related to HS-DSCH are stored in the UE:

2> clear any stored IE "Downlink HS-PDSCH information";

2> for 1.28Mcps TDD, clear the IE "HS-PDSCH Midamble Configuration" and the IE " HS-SCCH Set Configuration" in the IE "DL-MultiCarrier-Information";

2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

1> if any IEs related to E-DCH are stored in the UE:

2> clear any stored IE "E-DCH info";

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

1> if any of the IEs "DTX-DRX timing information" or "DTX-DRX information" are stored in the UE:

2> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

1> if the IE "HS-SCCH less information" is stored in the UE:

2> determine the value for the HS_SCCH_LESS_STATUS variable and take the corresponding actions as described in subclause 8.5.35.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.5.34, 8.6.6.38, 8.6.6.39.

### 8.2.6.57.3 Test purpose

To confirm that the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC;

To confirm that the UE transits from CELL_DCH with UL DTX and DL DRX configured to URA_PCH state on a different frequency after it received a PHYSICAL CHANNEL RECONFIGURATION message;

To confirm that the UE releases the HS channels and selects a common physical channel on a different frequency.

### 8.2.6.57.4 Method of test

Initial Condition

System Simulator: 2 cells– Cell 1 and cell 6 are active.

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A20 in cell 1 as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission.

Test Procedure

**Table 8.2.6.57**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Table 8.2.6.57 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

SS has configured its downlink transmission power setting according to columns “T0” in table 8.2.6.57. The UE is in state 6-18 under condition A20 as specified in TS34.108 clause 7.4 in cell 1. The SS switches its downlink transmission power settings to columns "T1" and transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to URA_PCH. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enters URA_PCH state, selects cell 6. Upon completion of the procedure, the SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

NOTE: If the UE fails the test because of a failure to select to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| **1** | | | | The UE is in CELL_DCH state with UL DTX and DL DRX configured in cell 1 and the SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.57 |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE transmit this message in cell 1. |
| 4 | | | | SS sends the L2 ack on the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step.<br><br>Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 5 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| Frequency info<br>- CHOICE mode<br>- UARFCN uplink (Nu)<br><br><br><br>- UARFCN downlink (Nd) | <br>FDD<br>Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [11]<br>Set to the frequency of cell 6 |
| Downlink information for each radio link<br>- Primary CPICH Info<br>- Primary scrambling code | <br><br>Set to same code as used for cell 6 |

#### 8.2.6.57.5 Test requirement

At step 3 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the DCCH using AM RLC in cell 1.

At step 4 the UE shall be in URA_PCH state in cell 6.

### 8.2.6.58 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving E-DCH cell change with discontinuous uplink transmission)

#### 8.2.6.58.1 Definition and applicability

All UEs which support FDD and UL DTX.

#### 8.2.6.58.2 Conformance requirement

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

3> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> store the contents of the IE in the variable DTX_DRX_PARAMS.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

…

If the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the new value(s) in the variable E_RNTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

If, after the completion of this procedure, the variable E_DCH_TRANSMISSION is set to FALSE, the UE shall:

1> clear the variable E-RNTI.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured UL TrCH information" is included and E-DCH is included and there is more than one MAC-d flow carried on E-DCH then the UE shall:

1> if any occurrence of the IE E-DCH Transmission Time Interval and, if present, the field HARQ info for E-DCH (IE HARQ RV Configuration):

2> apply the values of any occurrence for IE E-DCH Transmission Time Interval and, if present, the field HARQ info to all E-DCH MAC-d flows.

NOTE: The IE "Added or Reconfigured DL TrCH information" is iterated for each added or reconfigured MAC-d flow carried on E-DCH.

1> if the choice "UL parameters" is set to 'EDCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.17.

2> if the IE "Added or Reconfigured E-DCH MAC-d Flow" is included:

3> perform the actions as specified in subclause 8.6.5.18.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "E-DCH Transmission Time Interval" is included, the UE shall:

1> store the received TTI;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> apply the TTI as signalled in the IE "E-DCH Transmission Time Interval" on the E-DPDCH.

…

If the IE "HARQ Info for E-DCH" is included, the UE shall:

1> store the received configuration;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use a redundancy version for each HARQ transmission as configured by the IE "HARQ RV Configuration".

…

If the IE "Added or reconfigured E-DCH MAC-d flow" is included, the UE shall:

1> if the IE "E-DCH MAC-d flow power offset" is included:

2> configure the power offset indicated in the IE "E-DCH MAC-d flow power offset" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow maximum number of retransmissions" is included:

2> configure the maximum number of retransmissions indicated in the IE "E-DCH MAC-d flow maximum number of retransmissions" for the E-DCH MAC-d flow identified by the IE "E-DCH MAC-d flow identity".

1> if the IE "E-DCH MAC-d flow multiplexing list" is included:

2> only multiplex MAC-d PDU’s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed in accordance to the IE "E-DCH MAC-d flow multiplexing list".

1> else:

2> if previously the IE "E-DCH MAC-d flow multiplexing list" was already received for this E-DCH MAC-d flow:

3> continue to only multiplex E-DCH PDU’s from the E-DCH MAC-d flow indicated in the IE “E-DCH MAC-d flow identity” with MAC-d PDU’s from E-DCH MAC-d flows with which multiplexing in the same MAC-e PDU is allowed according to the previously received IE “E-DCH MAC-d flow multiplexing list”.

2> else (never received the IE "E-DCH MAC-d flow multiplexing list" for this E-DCH MAC-d flow):

3> allow multiplexing of MAC-d PDU’s from the E-DCH MAC-d flow indicated in the IE "E-DCH MAC-d flow identity" with MAC-d PDU’s from any other E-DCH MAC-d flow in the same MAC-e PDU.

1> if the IE "Non-scheduled transmission grant info" is included:

2> if the TTI configured on the E-DCH equals 2ms, and the IE "2ms non-scheduled grant HARQ process allocation" is configured for this MAC-d flow:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall only be included in a MAC-e PDU transmitted by HARQ processes allowed by the IE "2ms HARQ process allocation", with a total size not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

2> else:

3> MAC-d PDU's for logical channels belonging to this MAC-d flow shall be included in a MAC-e PDU transmitted by any HARQ process, with a total size not exceeding the size as signalled by the IE "Max MAC-e PDU contents size".

1> if the IE "Scheduled transmission grant info" is included:

2> transmission of MAC-d PDU's for logical channels belonging to this MAC-d flow shall be in accordance with the received scheduled grant on E-AGCH/E-RGCH (see [15]).

1> perform the actions as specified in subclause 8.5.21;

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the UE is in TDD mode and shared transport channels are assigned to the UE:

3> start to receive the indicated Secondary CCPCH.

2> if the UE is in TDD mode and no shared transport channels are assigned to the UE:

3> set the variable UNSUPPORTED_CONFIGURATION to TRUE.

2> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving HS-DSCH radio link and no longer consider any other radio link as serving HS-DSCH radio link.

2> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link.

2> if the IE "E-AGCH Info" is included:

3> store the newly received E-AGCH configuration.

2> if the IE "E-HICH information" is included:

3> store this E-HICH configuration for the concerning radio link.

2> if the IE "E-RGCH information" is included:

3> store this E-RGCH configuration for the concerning radio link.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

1> in addition, if the message was received in CELL_DCH state and the UE remains in CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving HS-DSCH radio link;

3> if the serving HS-DSCH radio link was another radio link than this radio link prior to reception of the message and the IE "H-RNTI" is not included:

4> clear the variable H_RNTI.

2> if the IE "Serving HS-DSCH radio link indicator" is set to ‘FALSE’ and this radio link was considered the serving HS-DSCH radio link prior to reception of this message:

3> no longer consider this radio link as the serving HS-DSCH radio link.

2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

2> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving E-DCH radio link;

3> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:

4> if the IE "New Primary E-RNTI" is not included:

5> clear the Primary E-RNTI stored in the variable E_RNTI.

4> if the IE "New Secondary E-RNTI" is not included:

5> clear the Secondary E-RNTI stored in the variable E_RNTI.

2> if the IE "Serving E-DCH radio link indicator" is set to 'FALSE' and this radio link was considered the serving E-DCH radio link prior to reception of this message:

3> no longer consider this radio link as the serving E-DCH radio link.

2> if the IE "E-HICH release indicator" is present:

3> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.

2> if the IE "E-RGCH release indicator" is present:

3> delete the stored E-RGCH configuration for this RL.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28;

2> for each optional IE part of the IE "Downlink information for each radio link" that is not present:

3> do not change its current downlink physical channel configuration corresponding to the IE, which is absent, if not stated otherwise elsewhere.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the IE "E-DPCCH Info" is included:

2> store the newly received E-DPCCH configuration.

1> if the IE "E-DPDCH Info" is included:

2> store the newly received E-DPDCH configuration.

NOTE: The UTRAN should ensure the ordering of the E-TFCI table in increasing transmission power, by correct setting of the reference E-TFCI power offsets.

1> if the IE "MAC-es/e reset indicator" is included:

2> reset the MAC-es/e entity [15].

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> configure the UL E-DPCCH in accordance with the stored IE "E-DPCCH" configuration;

1> configure the MAC with the stored IE "E-DPDCH" configuration.

Reference

3GPP TS 25.331 clauses 8.2.2, 8.5.28, 8.6.3.14, 8.6.5.5, 8.6.5.16, 8.6.5.17, 8.6.5.18, 8.6.6.4, 8.6.6.37, 8.6.6.38, 8.6.6.39.

### 8.2.6.58.3 Test purpose

To confirm that the UE changes the serving E-DCH cell with discontinuous uplink transmission according to the received PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.58.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A20, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission.

Test Procedure

**Table 8.2.6.58**

| Parameter | Unit | Cell 1 | | | | Cell 2 | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | Mid Range Test Frequency | | | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | -60 | -70 | -75 | -60 | -70 | -60 |

Table 8.2.6.58 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The downlink transmission power is set according to values in column “T0” in table 8.2.6.58. The UE has a radio bearer mapped to the E-DCH/HS-DSCH and the signalling radio bearers mapped on E-DCH/ HS-DCH in cell 1 and UL DTX is active.

SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.58. UE shall be triggered to transmit a MEASUREMENT REPORT message, which includes the primary scrambling code for cell 2.

After the MEASUREMENT REPORT message is received, the SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC to add cell 2 to the active set. When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links and cell 1 shall be kept as the serving E-DCH and HS-DSCH cell. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS configures its downlink transmission power settings according to columns "T2" in table 8.2.6.58. The SS configures reporting of event 1d “change of best cell” by transmitting a MEASUREMENT CONTROL message to the UE, and the UE shall send an initial MEASUREMENT REPORT which includes the primary scrambling code of cell 1 according to IE "Intra-frequency event identity" set to 1d.

The SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.58. The UE transmits a MEASUREMENT REPORT message, which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity" set to 1d.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. This message requests the change of serving E-DCH cell with UL DTX Configured. At the activation time the UE and SS change the E-DCH and HS-DSCH serving cell to cell 2 and perform MAC-hs reset. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. The SS checks that the UE does not transmit on UL DPCCH during DTX

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.

SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | SS | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.2.6.58. |
| 1 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 2 | ← | | ACTIVE SET UPDATE | The SS instructs the UE to add cell 2 in the active set. |
| 3 | → | | ACTIVE SET UPDATE COMPLETE | The UE adds the radio link in cell 2. |
| 4 | SS | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.2.6.58. |
| 5 | ← | | MEASUREMENT CONTROL | Configure event 1D “Change of best cell” |
| 6 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 7 | SS | | | SS configures its downlink transmission power settings according to columns "T3" in table 8.2.6.58 |
| 8 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 9 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Serving E-DCH and HS-DSCH cell change with UL DTX Configured |
| 10 | SS | | | At the activation time, the SS changes the serving E-DCH and HS-DSCH radio link to cell 2 and performs MAC-hs reset. |
| 11 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 12 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 13 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

MEASUREMENT REPORT (Step 1)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 2)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| DTX-DRX timing information | |
| CHOICE *timing* | Continue |
| DTX-DRX Information | Not Present |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| Radio link addition information | |
| - Primary CPICH Info | |
| - Primary scrambling code | Primary scrambling code of Cell 2 |
| - Downlink F-DPCH info for each RL | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - F-DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38 400 |
| - F-DPCH slot format | 3 if UE supports enhanced F-DPCH, otherwise Not Present |
| - Secondary CPICH info | Not Present |
| - Secondary scrambling code | Not Present |
| - Code number | 12 |
| - TPC combination index | 0 |
| - CHOICE E-HICH Information | |
| - E-HICH Information | |
| - Channelisation code | 4 |
| - Signature sequence | 2 |
| - CHOICE E-RGCH Information | |
| - E-RGCH Information | |
| - Signature Sequence | 3 |
| - RG combination index | 1 |
| Serving HS-DSCH cell information | |
| $\Delta_{ACK}$ | OMIT |
| $\Delta_{NACK}$ | OMIT |
| HARQ_preamble_mode | 0 |
| Primary CPICH info | OMIT |
| Downlink HS-PDSCH Information | Same as radio bearer setup message. |
| HARQ Info | OMIT |
| MAC-hs reset indicator | OMIT |

MEASUREMENT CONTROL (Step 5)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| - CHOICE measurement type | Intra-frequency measurement |
| - Intra frequency cell info list | Not present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 3 |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/N0 reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1D |
| - Triggering condition 2 | Active set cells |
| - Hysteresis | 8 (4 dB) |
| - Time to trigger | 20 mSec |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active set |
| - Maximum number of reported cells | 3 |
| - Use CIO | FALSE |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 6)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1D" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to "Primary scrambling code of Cell 1" |

MEASUREMENT REPORT (Step 8)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is present |
| - CPICH RSCP | Checked that this IE is present |
| - DeltaRSCP | Not checked |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1D" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to "Primary scrambling code of Cell 2" |

PHYSICAL CHANNEL RECONFIGURATION (Step 9)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| Frequency info | Not present |
| DTX-DRX timing information | |
| CHOICE timing | Continue |
| DTX-DRX Information | |
| - CHOICE E-DCH TTI length | 10ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| Uplink DPCH info | OMIT |
| Downlink information common for all radio links | |
| - Downlink F-DPCH info common for all RL | |
| - Timing Indication | Maintain |
| - Timing maintained Synchronization indicator | FALSE |
| - Downlink F-DPCH power control information | |
| - DPC mode | 0 (single) |
| - TPC command error rate target | 0.04 |
| - CHOICE mode | FDD |
| - DPCH compressed mode info | Not Present |
| - TX Diversity mode | None |
| - Default DPCH Offset Value | Not Present |
| - MAC-hs reset indicator | TRUE |
| - Downlink information for each radio link | (for cell 1) |
| - Choice mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) |
| - Serving HS-DSCH radio link indicator | FALSE |
| - Serving E-DCH radio link indicator | FALSE |
| - Downlink DPCH info for each RL | Not Present |
| - E-AGCH Info | OMIT |
| - E-HICH Information | OMIT |
| - E-RGCH Information | OMIT |
| - Downlink information for each radio link | (for cell 2) |
| - Choice mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - Downlink DPCH info for each RL | Not Present |
| - Downlink F-DPCH info for each RL | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - F-DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38 400 |
| - F-DPCH slot format | 3 if UE supports enhanced F-DPCH, otherwise Not Present |
| - Secondary CPICH info | Not Present |
| - Secondary scrambling code | Not Present |
| - Code number | 12 |
| - TPC combination index | 0 |
| - E-AGCH Info | |

| | |
|---|---|
| - E-AGCH Channelisation Code | 10 |
| - CHOICE E-HICH Information | |
| - E-HICH Information | |
| - Channelisation code | 4 |
| - Signature sequence | 2 |
| - CHOICE E-RGCH Information | |
| - E-RGCH Information | |
| - Signature Sequence | 3 |
| - RG combination index | 1 |

#### 8.2.6.58.5 Test requirements

At step 1, the UE shall transmit a MEASUREMENT REPORT message.

At step 6, the UE shall transmit a MEASUREMENT REPORT message.

At step 8, the UE shall transmit a MEASUREMENT REPORT message.

At step 11, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

At step 12 the time taken to report 10 consecutive CQI indications shall be 400ms.

### 8.2.6.59 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, Serving E-DCH cell change with discontinuous uplink transmission)

#### 8.2.6.59.1 Definition

All UEs, which support FDD and UL DTX.

#### 8.2.6.59.2 Conformance requirement

If the UE receives:

- a PHYSICAL CHANNEL RECONFIGURATION message;

it shall:

1> set the variable ORDERED_RECONFIGURATION to TRUE;

…

1> act upon all received information elements as specified in TS25.331 subclause 8.6, unless specified in the following and perform the actions below.

…

1> enter a state according to TS25.331 subclause 8.6.3.3.

If the UE was in CELL_DCH state upon reception of the reconfiguration message and remains in CELL_DCH state, the UE shall:

1> if the IE "Uplink DPCH Info" is absent, not change its current UL Physical channel configuration;

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" is included, the UE shall:

2> at the time indicated by IE "TGCFN":

3> activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate"; and

3> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "active".

…

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

4> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> store the contents of the IE in the variable DTX_DRX_PARAMS.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.2.2.4, 8.6.6.15, 8.5.34, 8.6.6.38, 8.6.6.39.

### 8.2.6.59.3 Test purpose

To confirm that the UE is able to perform a timing re-initialized hard handover to another frequency after compressed mode measurement on the target frequency in conjunction with a serving E-DCH cell change and UL DTX configured according to the received PHYSICAL CHANNEL RECONFIGURATION message.

### 8.2.6.59.4 Method of test

Initial Condition

System Simulator: 2 cells–Cell 1 and cell 6 are active

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A20 in cell 1 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission

Test Procedure

**Table 8.2.6.59**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Table 8.2.6.59 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in state 6-18 under condition A20 as specified in TS34.108 clause 7.4 in cell 1 and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception. The SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.59.

The SS configures compressed mode (if required) by sending a PHYSICAL CHANNEL RECONFIGURATION message, which includes the IE "DPCH compressed mode info" with the IE "TGPS Status Flag" set to "Deactivate". The UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

The SS switches its downlink transmission power setting according to columns "T1" in table 8.2.6.59, but the UE shall not transmit any MEASUREMENT REPORT messages.

The SS then sets up inter-frequency measurements (event 2b) and activates compressed mode (if required), by sending a MEASUREMENT CONTROL message to the UE. The SS waits for 1s for the UE to activate compressed mode. The UE shall transmit MEASUREMENT REPORT message to report event 2b with the measured CPICH RSCP and Ec/No values for cell 6 to the SS.

The SS then transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE ordering the UE to change to Cell 6 and configure UL DTX. At the activation time the UE changes to Cell 6 keeping the E-DCH configuration with UL DTX configured. Finally the UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. SS verifies that UE does not transmit on UL DPCCH during DTX .The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.

The SS calls for the generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_DCH state of cell 1 and the SS has configured its downlink transmission power setting according to columns "T0" in table 8.2.6.59. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS downloads compressed mode parameters without activating compressed mode (if required). |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE acknowledges the downloading of the compressed mode parameters (only if compressed mode was configured). |
| 4 | | | | The SS switches its downlink transmission power settings to columns "T1" in table 8.2.6.59. |
| 5 | ← | | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE and activates compressed mode (if required). |
| 6 | → | | MEASUREMENT REPORT | The UE shall report event 2b with the measured CPICH RSCP and Ec/No values for cell 6. |
| 7 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS instructs the UE to change to Cell 6 and configure UL DTX. |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE sends this message in cell 6. |
| 9 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 10 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Uplink DPCH info | |
| - Uplink DPCH power control info | |
| - DPCCH power offset | -40 (-80dB) |
| - PC Preamble | 1 frame |
| - SRB delay | 7 frames |
| - Power Control Algorithm | Algorithm1 |
| - TPC step size | 0 (1dB) |
| - $\Delta_{ACK}$ | 3 |
| - $\Delta_{NACK}$ | 3 |
| - Ack-Nack repetition factor | 1 |
| - HARQ_preamble_mode | 0 |
| - Scrambling code type | Long |
| - Scrambling code number | 0 (0 to 16777215) |
| - Number of DPDCH | 0 |
| - spreading factor | Not Present |
| - TFCI existence | FALSE |
| - Number of FBI bit | Not Present |
| - Puncturing Limit | Not Present |
| E-DCH Info | Not present |
| Downlink HS-PDSCH Information | Not present |
| Downlink information common for all radio links | |
| - Downlink F-DPCH info common for all RL | |
| - Timing Indication | Maintain |
| - Timing maintained Synchronization indicator | FALSE |
| - Downlink DPCH power control information | |
| - CHOICE Mode | FDD |
| -DPC Mode | 0 (Single) |
| - TPC command error rate target | 0.04 |
| - CHOICE mode | FDD |
| - DPCH compressed mode info | |
| - TGPSI | 1 |
| - TGPS Status Flag | Deactivate |
| - TGCFN | Not Present |
| - Transmission gap pattern sequence configuration parameters | |
| - TGMP | FDD Measurement |
| - TGPRC | Infinity |
| - TGSN | 4 |
| - TGL1 | 7 |
| - TGL2 | Not Present |
| - TGD | Undefined |
| - TGPL1 | 3 |
| - RPP | mode 0 |
| - ITP | mode 0 |
| - CHOICE UL/DL Mode | UL and DL, UL only, or DL only, depending on UE capability |
| - Downlink compressed mode method | SF/2 (Comment: If F-DPCH is configured this IE shall not be used by the UE.) |
| - Uplink compressed mode method | SF/2 |
| - Downlink frame type | B |
| - DeltaSIR1 | 20 (2.0) |
| - DeltaSIRAfter1 | 10 (1.0) |
| - DeltaSIR2 | Not Present |
| - DeltaSIRAfter2 | Not Present |
| - N identify abort | Not Present |
| - T Reconfirm abort | Not Present |
| - TX Diversity Mode | Not Present |
| - Default DPCH Offset Value | Not Present |
| - MAC-hs reset indicator | Not Present |

| Information Element | Value/remark |
|---|---|
| - Downlink information for each radio link list | OMIT |

MEASUREMENT CONTROL (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9, with the following exceptions in the IE(s) concerned:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement object list | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | Remove all inter-frequency cells |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 6 |
| - Frequency info | Set to the frequency of cell 6 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | OMIT |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 6 |
| - Primary CPICH TX power | Not Present |
| - Primary CPICH TX power | |
| - TX Diversity Indicator | Not Present |
| - Cell for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - CHOICE Mode | FDD |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - COICE Mode | FDD |
| - CPICH Ec/No reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | |
| - UE state | CELL_DCH |
| - Inter-frequency set update | On with no reporting |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -65 dBm |
| - W used frequency | Not present |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | |
| - CHOICH reported cell | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -68 dBm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN + (100 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Status Flag | Activate |

| Information Element | Value/remark |
|---|---|
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

MEASUREMENT REPORT (Step 6)

The contents of MEASUREMENT REPORT message is the same as them found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE Measurement | |
| - Inter frequency measured results list | Check to see if set to "Inter-frequency measured results list" |
| - Inter frequency measurement results | |
| - Frequency info | Set to the frequency of cell 6 |
| - UTRA carrier RSSI | Check to see if absent |
| - Inter frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is present |
| - Cell synchronisation information | Check to see if it is absent |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | Check that the value of this IE is set to Scrambling code of cell 6 |
| - CPICH Ec/No | Check to see if it is present |
| - CPICH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Additional Measured results | Check to see if it is absent |
| - Measured Result | |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | Check that the value of this IE is set to the frequency of cell 6 |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code of cell 6 |

PHYSICAL CHANNEL RECONFIGURATION (Step 7)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| Frequency info | |
| - UARFCN uplink(Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| DTX-DRX timing information | |
| CHOICE timing | |
| - New timing | |
| - Enabling Delay | 32 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE E-DCH TTI length | 10ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| - Downlink F-DPCH power control information | Not Present |
| - TPC command error rate target | 0.04 |
| - DPCH compressed mode info | Not present |
| - TX Diversity mode | Not Present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | FDD |
| - Primary CPICH info | Set to the scrambling code of cell 6 |
| - Cell ID | Not present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - Downlink DPCH info for each RL | Not present |
| - Downlink F-DPCH info for each RL | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - F-DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 |
| - F-DPCH slot format | 3 if UE supports enhanced F-DPCH, otherwise Not Present |
| - Secondary CPICH info | Not present |
| - Secondary scrambling code | Not present |
| - Code number | 12 |
| - TPC combination index | 0 |
| - E-AGCH information | |
| - E-AGCH channelisation code | 10 |
| - CHOICE E-HICH information | E-HICH information |
| - Channelisation code | 4 |
| - Signature sequence | 2 |
| - CHOICE E-RGCH Information | E-RGCH information |

| Information Element | Value/remark |
|---|---|
| - Signature sequence | 3 |
| - RG combination index | 1 |

## 8.2.6.60 Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Failure (Timing re-initialised hard handover, Serving E-DCH cell change with discontinuous uplink transmission, physical channel failure and reversion to old channel)

### 8.2.6.60.1 Definition

All UEs which support FDD and UL DTX.

### 8.2.6.60.2 Conformance requirement

If the received message caused the UE to be in CELL_DCH state and the UE according to subclause 8.5.4 failed to establish the dedicated physical channel(s) indicated in the received message or for 3.84 Mcps TDD and 7.68 Mcps TDD failed to establish the physical channel(s) indicated in the received message to which DCCH(s) are mapped the UE shall:

1> if the CM_PATTERN_ACTIVATION_ABORTED flag is not set to TRUE:

2> revert to the configuration prior to the reception of the message (old configuration), including any HS-DSCH and E-DCH configuration if existing;

2> if the UE was in Cell DCH state prior to the reconfiguration:

3> perform the physical layer synchronisation procedure A as specified in [29] (FDD only);

3> apply power control preamble according to [26] during the number of frames indicated in the IE "PC preamble" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE; and

3> then not send any data on signalling radio bearers RB0 to RB4 during the number of frames indicated in the IE "SRB delay" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE or while the physical channel is not considered established;.

1> if the CM_PATTERN_ACTIVATION_ABORTED flag is set to TRUE or if the old configuration includes dedicated physical channels (CELL_DCH state) and the UE is unable to revert to the old configuration:

2> initiate a cell update procedure according to subclause 8.3.1, using the cause "radio link failure";

2> after the cell update procedure has completed successfully:

3> proceed as below.

1> if the old configuration does not include dedicated physical channels (CELL_FACH state):

2> select a suitable UTRA cell according to [4];

2> if the UE selects another cell than the cell the UE camped on upon reception of the reconfiguration message:

3> initiate a cell update procedure according to subclause 8.3.1, using the cause "Cell reselection";

3> after the cell update procedure has completed successfully:

4> proceed as below.

1> transmit a failure response message as specified in subclause 8.2.2.9, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "failure cause" to "physical channel failure".

1> set the variable ORDERED_RECONFIGURATION to FALSE;

1> continue with any ongoing processes and procedures as if the reconfiguration message was not received.

The procedure ends.

Reference(s)

TS 25.331 clause 8.2.2.7

### 8.2.6.60.3 Test purpose

To confirm that the UE reverts to the old E-DCH / HS-DSCH configuration with UL DTX and transmits a PHYSICAL CHANNEL RECONFIGURATION FAILURE message if the UE fails to reconfigure the new physical channel according to the received PHYSICAL CHANNEL RECONFIGURATION message before the expiry of timer T312.

### 8.2.6.60.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 & Cell 6.

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A20, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission.

Test Procedure

The UE is in the CELL_DCH state and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE ordering the UE to perform a timing re-initialized hard handover to Cell 6 and UL DTX configured, but the SS does not configure the dedicated physical channels in Cell 6. At the activation time the UE attempts to establish dedicated physical channels on Cell 6, but fails to do so.
The UE shall then revert to the old E-DCH / HS-DSCH configuration on Cell 1 and transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message to the SS on the DCCH using AM RLC, with the value "physical channel failure" in the IE "failure cause".

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.

The SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS instructs the UE to perform a timing re-initialized hard handover to Cell 6. The SS does not configure the physical channels in Cell 6. |
| 2 | | | | The UE attempts to establish dedicated physical channels on Cell 6, but fails to do so. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION FAILURE | The UE sends this message on Cell 1. The IE "failure cause" is set to "physical channel failure". |
| 4 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 Clause 9, except for the following:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| Frequency info | |
| - UARFCN uplink(Nu) | Not Present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for Cell 6 |
| DTX-DRX timing information | |
| CHOICE timing | |
| - New timing | |
| - Enabling Delay | 32 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE E-DCH TTI length | 10ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |

| Information Element | Value/remark |
|---|---|
| Uplink DPCCH slot format information | 1 |
| Uplink DPCH info | Not Present |
| E-DCH Info | Not Present |
| Downlink HS-PDSCH Information | Not Present |
| Downlink information common for all radio links | |
| - CHOICE *DPCH info* | F-DPCH |
| - Downlink F-DPCH info for all RL | |
| - Timing Indication | Initialize |
| - Timing maintained Synchronization indicator | FALSE |
| - Downlink F-DPCH power control information | |
| - DPC mode | 0 (single) |
| - TPC command error rate target | 0.04 |
| - CHOICE mode | FDD |
| - DPCH compressed mode info | Not Present |
| - TX Diversity mode | None |
| - Default DPCH Offset Value | Not Present |
| - MAC-hs reset indicator | Not Present |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - TX Diversity mode | Not Present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | FDD |
| - Primary CPICH info | Set to the scrambling code of Cell 6 |
| - Cell ID | Not present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - Downlink DPCH info for each RL | Not present |
| - Downlink F-DPCH info for each RL | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - F-DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 |
| - F-DPCH slot format | 3 if UE supports enhanced F-DPCH, otherwise Not Present |
| - Secondary CPICH info | Not present |
| - Secondary scrambling code | Not present |
| - Code number | 12 |
| - TPC combination index | 0 |
| - E-AGCH information | |
| - E-AGCH channelisation code | 10 |
| - CHOICE E-HICH information | E-HICH information |
| - Channelisation code | 4 |
| - Signature sequence | 2 |
| - CHOICE E-RGCH Information | E-RGCH information |
| - Signature sequence | 3 |
| - RG combination index | 1 |

PHYSICAL CHANNEL RECONFIGURATION FAILURE (Step 3)

Use the same message as specified in 34.108 Clause 9, except for the following:

| Information Element | Value/remark |
|---|---|
| Failure cause | Physical channel failure |

### 8.2.6.60.5 Test requirements

At step 3, the UE shall revert to the old E-DCH / HS-DSCH configuration on Cell 1 and transmit a PHYSICAL CHANNEL RECONFIGURATION FAILURE message.

At step 4 the time taken to report 10 consecutive CQI indications shall be 400ms.

## 8.2.6.61 Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (CQI reporting reduction)

### 8.2.6.61.1 Definition and applicability

All UEs, which support FDD and UL DTX.

### 8.2.6.61.2 Conformance requirement

If the IE "Measurement Feedback Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the received configuration;

1> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

…

When UL_DTX_Active is FALSE (see section 6C), the UE shall always transmit the Channel-Quality Indication (CQI) in the CQI transmission pattern defined in 6A.1.2.

When UL_DTX_Active is TRUE (see section 6C), the UE shall perform the following procedures:

The UE shall set the initial value of the variable CQI_DTX_Priority to 1.

Afterwards the UE sets the CQI_DTX_Priority based on the status of a "CQI nominal reporting timer" which is counting down to zero in subframes from the value CQI_DTX_TIMER which is configured by higher layers.

The setting of CQI_DTX_Priority to 1 is described in subclause 6A.1.1.

Upon the expiration of the CQI nominal reporting timer, the UE shall set CQI_DTX_Priority to 0.

CQI_DTX_Priority=0 indicates that CQI reports have lower priority than the Uplink DPCCH burst pattern. If CQI_DTX_Priority is set to 0, the UE shall transmit the Channel-Quality Indication (CQI) only if the start of the CQI field in the CQI transmission pattern as defined in 6A.1.2 overlaps with a DPCCH transmission burst of the Uplink DPCCH burst pattern as indicated in 6C.2.1.

CQI_DTX_Priority=1 indicates that CQI reports have higher priority than the Uplink DPCCH burst pattern. If CQI_DTX_Priority is set to 1, the UE shall always transmit the Channel-Quality Indication (CQI) in the CQI transmission pattern defined in 6A.1.2.

Reference

3GPP TS 25.331 clause 8.6.6.34, 8.6.6.39,

3GPP TS 25.214 clause 6C.1

### 8.2.6.61.3 Test purposes

1. To confirm that the UE correctly performs the HS-DPCCH CQI reporting procedure using some of the extended values for the IE CQI feedback cycle, according to the received RADIO BEARER SETUP message.

2. To confirm that the UE correctly performs the CQI reporting reduction procedure according to the received PHYSICAL CHANNEL RECONFIGURATION message:
   a. When the CQI nominal reporting timer is running the CQI reporting is higher priority than the UL DTX.
   b. When the CQI nominal reporting timer is expired the CQI reporting is lower priority than the UL DTX.

### 8.2.6.61.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH (state 6-7) with SRBs mapped to E-DCH/HS-DSCH as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission

Test Procedure

The UE is in CELL_DCH state. Only signalling radio bearers have been established.

The test operator is prompted to make an outgoing call. The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of a radio bearer with RB mapping to E-DCH/HS-DSCH with use of F-DPCH, and requests to use one (64ms) of the new CQI feedback values. The UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. The SS checks that the UE transmits CQI information according to the CQI feedback cycle of 64ms, by measuring the delay between 10 consecutive CQI reports (the first CQI report to be taken into account must be taken after the reception of the RADIO BEARER SETUP COMPLETE message).

The SS then transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE. This message requests activation of UL DTX in the UE and changes the CQI feedback cycle according to the values in the table below.

| Parameter | Value |
|---|---|
| UE DTX Cycle 1 | 20 ms |
| UE DTX Cycle 2 | 320 ms |
| Inactivity Threshold for UE DTX Cycle 2 | 320 ms (10ms E-DCH TTI) |
| CQI DTX Timer | 512 ms |
| CQI feedback cycle | 32 ms |

The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC. The SS checks that the UE transmits CQI information according to the CQI feedback cycle of 32ms regardless of the active UL DTX, by measuring the delay between 10 consecutive CQI reports (the first CQI report being taken into account must

be taken after the reception of the PHYSICAL CHANNEL RECONFIGURATION message). Thereafter the SS waits for 1s and then checks that the UE transmits CQI information according to the UL DTX timing (i.e. only every 320 ms), measuring the delay between 10 consecutive CQI reports.

SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RADIO BEARER SETUP | CQI feedback cycle = 64 ms. |
| 2 | → | | RADIO BEARER SETUP COMPLETE | |
| 3 | SS | | | The SS verifies that the delay between 10 consecutive CQI reports is 640 ms. |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | UL DTX is activated,<br>CQI feedback cycle = 32 ms. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 6 | SS | | | The SS verifies that the delay between 10consecutive CQI reports is 320 ms. |
| 7 | SS | | | The SS waits for 1s. |
| 8 | SS | | | The SS verifies that the delay between 10 consecutive CQI reports is 3200 ms. |
| 9 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 1)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using one multiplexing option (1/1) and SRBs mapped on E-DCH/HS-DSCH" (condition A14) in TS 34.108 clause 9, except for the following:

| Information Element | Value/remark |
|---|---|
| - CQI Feedback cycle, k | 64 ms |

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the same message as the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| DTX-DRX timing information | |
| - CHOICE timing | New timing |
| - Enabling Delay | 16 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE E-DCH TTI length | 10 ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 160 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 32 |
| - Default SG in DTX Cycle 2 | Not Present |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 256 |
| - UE DPCCH burst_1 | 5 |
| - UE DPCCH burst_2 | 5 |
| DRX Information | |
| - UE DRX cycle | 8 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 32 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| Downlink HS-PDSCH Information | |
| - HS-SCCH Info | Not Present |
| - Measurement Feedback Info | |
| - CHOICE mode | FDD |
| - Measurement Power Offset | 6 dB |
| - CQI Feedback cycle, k | 32 ms |
| - CQI repetition factor | 1 |
| - $\Delta_{CQI}$ | 5 |
| - CHOICE mode | FDD (no data) |

#### 8.2.6.61.5 Test requirements

After step 1, the UE shall transmit a RADIO BEARER SETUP COMPLETE message on the uplink DCCH using AM RLC.

After step 2, the UE shall transmit CQI reports every 64 ms. The time to receive a set of 10 consecutive CQI reports shall be 640 ms (verifies test purpose 1).

After step 4, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 5, the UE shall transmit CQI reports every 32 ms. The time to receive a set of 10consecutive CQI reports shall be 320 ms (verifies test purpose 2a).

After step 7, the UE shall transmit CQI reports every 160ms. The time to receive a set of 10 consecutive CQI reports shall be 3200 ms (verifies test purpose 2b).

## 8.2.7 Physical Shared Channel Allocation [TDD only]

[Editor's note: This message is not included in Release99 so this is FFS.]

## 8.2.8 PUSCH capacity request [TDD only]

[Editor's note: This message is not included in Release99 so this is FFS.]

## 8.2.9 Void

# 8.3 RRC connection mobility procedure

## 8.3.1 Cell Update

### 8.3.1.1 Cell Update: cell reselection in CELL_FACH

#### 8.3.1.1.1 Definition

-

#### 8.3.1.1.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

…

1> Re-entering service area:

…

1> RLC unrecoverable error:

…

1> Cell reselection:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:

3> if the UE is in CELL_FACH or CELL_PCH state and the UE performs cell re-selection; or

3> if the UE is in CELL_FACH state and the variable C_RNTI is empty:

4> perform cell update using the cause "cell reselection".

…

When initiating cell update procedure, the UE shall:

1> stop timer T305;

1> if the UE is in CELL_DCH state:

…

…

1> move to CELL_FACH state, if not already in that state;

1> if the UE performs cell re-selection:

2> clear the variable C_RNTI; and

2> stop using that C_RNTI just cleared from the variable C_RNTI in MAC.

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> in case of a cell update procedure:

2> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the CELL UPDATE message for transmission on the uplink CCCH.

…

1> set counter V302 to 1;

1> start timer T302 when the MAC layer indicates success or failure in transmitting the message.

…

In case of cell update procedure the UE shall transmit a CELL UPDATE message.

The UE shall set the IEs in the CELL UPDATE message as follows:

1> set the IE "Cell update cause" corresponding to the cause specified in TS 25.331 subclause 8.3.1.2 that is valid when the CELL UPDATE message is submitted to lower layers for transmission;

NOTE: During the time period starting from when a cell update procedure is initiated by the UE until when the procedure ends, additional CELL UPDATE messages may be transmitted by the UE with different causes.

1> set the IE "U-RNTI" to the value of the variable U_RNTI;

1> if the value of the variable PROTOCOL_ERROR_INDICATOR is TRUE:

…

1> if the value of the variable FAILURE_INDICATOR is TRUE:

…

…

When the UE receives a CELL UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE shall:

1> stop timer T302;

1> in case of a cell update procedure and the CELL UPDATE CONFIRM message:

2> includes "RB information elements"; and/or

2> includes "Transport channel information elements"; and/or

2> includes "Physical channel information elements"; and

2> if the variable ORDERED_RECONFIGURATION is set to FALSE:

3> set the variable ORDERED_RECONFIGURATION to TRUE.

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following:

…

…

1> enter a state according to subclause 8.6.3.3 applied on the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message.

…

If the UE after state transition remains in CELL_FACH state, it shall

1> start the timer T305 using its initial value if timer T305 is not running and periodical cell update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity";

1> select PRACH according to TS 25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> not prohibit periodical status transmission in RLC;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

If the UE after the state transition remains in CELL_FACH state; and

- a C-RNTI is stored in the variable C_RNTI;

…

the UE shall:

…

1> in case of a cell update procedure:

2> set the IE "RRC transaction identifier" in any response message transmitted below to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry.

…

1> transmit a response message as specified in TS 25.331 subclause 8.3.1.7;

…

If the CELL UPDATE CONFIRM message:

- includes the IE "RB information to release list":

the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include the IE "RB information to release list"; and

- includes the IE "RB information to reconfigure list"; or

- includes the IE "RB information to be affected list":

the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and

- includes "Transport channel information elements":

the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- includes "Physical channel information elements":

the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- does not include "CN information elements"; and
- does not include the IE "Ciphering mode info"; and
- does not include the IE "Integrity protection mode info"; and
- does not include the IE "New C-RNTI"; and
- does not include the IE "New U-RNTI":

the UE shall:

1> transmit no response message.

If the new state is CELL_FACH, the response message shall be transmitted using the new configuration after the state transition., and the UE shall:

…

1> if the variable PDCP_SN_INFO is empty:

…

2> if the CELL UPDATE CONFIRM or URA UPDATE CONFIRM message did not contain the IE "Ciphering mode info":

3> when RLC has been requested to transmit the response message,

4> continue with the remainder of the procedure.

…

If any or several of the following conditions are true:

…;

- reselection to another UTRA cell (including the previously serving cell) before completion of the cell update or URA update procedure;

the UE shall:

1> stop T302 if it is running;

…

1> check whether it is still in "in service area";

…

1> in case of a cell update procedure:

2> clear any entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS.

If the UE detects "in service area" if it has not entered idle mode, and:

1> if V302 is equal to or smaller than N302, the UE shall:

2> if the UE performed cell re-selection:

3> delete its C-RNTI.

2> in case of a cell update procedure:

3> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

3> submit the CELL UPDATE message for transmission on the uplink CCCH.

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302, the UE shall:

…

Reference

3GPP TS 25.331 clause 8.3.1

#### 8.3.1.1.3 Test purpose

1. To confirm that the UE executes a cell update procedure after the successful reselection of another UTRA cell.

2. To confirm that the UE sends the correct uplink response message when executing cell update procedure due to cell reselection.

8.3.1.1.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.1**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -69 | -69 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -69 | -69 | -60 |

Table 8.3.1.1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions. SS switches the power settings repeatedly between columns "T1" and "T0", whenever the description below specifies that the transmission power settings for cell 1 and cell 2 be reversed.

The UE is in the CELL_FACH state, camping onto cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.1. The UE shall find cell 2 to be more suitable for service and hence perform a cell reselection. After the completion of cell reselection, the UE shall transmits a CELL UPDATE message to the SS on the uplink CCCH of cell 2 and set IE "Cell update cause" to "Cell Reselection". After the SS receives this message, it transmits a CELL UPDATE CONFIRM message, which includes the IE "RRC State Indicator" set to "CELL_FACH", to the UE on the downlink DCCH. UE shall verify that IE "New C-RNTI" is not included in the downlink message and shall send a CELL UPDATE message to SS again. SS shall then send a CELL UPDATE CONFIRM message which includes a valid IE "New C-RNTI". SS verifies that the UE send UTRAN MOBILITY INFORMATION CONFIRM message.. UE shall stay in CELL_FACH state. SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.1. The UE shall send a CELL UPDATE message on the uplink CCCH of cell 1. SS replies with CELL UPDATE CONFIRM message and allocates new C-RNTI and U-RNTI identities to the UE. The IE "RRC State Indicator" is set to "CELL_FACH" in this message. The UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message. Following this, SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.1. The UE shall initiate a cell update procedure by transmitting a CELL UPDATE message and stating the cause as 'cell re-selection'. SS replies with a CELL UPDATE CONFIRM message which contains IE "Physical channel information elements" and IE "RRC State Indicator" is set to "CELL_DCH". The UE shall move to CELL_DCH state and send PHSICAL CHANNEL RECONFIGURATION COMPLETE message. The SS shall transmit PHYSICAL CHANNEL RECONFIGURATION message, asking the UE to move to CELL_FACH state. The UE shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message after transiting to CELL_FACH state. Then, SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.1. The UE shall send a CELL UPDATE message on the uplink CCCH of cell 1. SS replies with a CELL UPDATE CONFIRM message which contains IE "Transport channel information elements" and IE "RRC State Indicator" is set to "CELL_DCH". The UE shall move to CELL_DCH state and send TRANSPORT CHANNEL RECONFIGURATION COMPLETE message. The SS shall transmit PHYSICAL CHANNEL RECONFIGURATION message, asking the UE to move to CELL_FACH state. The UE shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message after transiting to CELL_FACH state. Following this, SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.1. The UE shall send a CELL UPDATE message on the uplink CCCH of cell 2. SS replies with a CELL UPDATE CONFIRM message which contains IE "RB information to be affected list". The UE shall send RADIO BEARER RECONFIGURATION COMPLETE message. Then, SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.1. The UE shall send a CELL UPDATE message on the uplink CCCH of cell 1. SS replies with a CELL UPDATE CONFIRM message which contains IE "RB information to release list". The UE shall send RADIO BEARER RELEASE COMPLETE message. Finally, SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.1. The UE shall send a CELL UPDATE message on the uplink CCCH of cell 2. SS shall not respond to this message but SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.1. UE shall send a CELL UPDATE message on the uplink CCCH of cell 1. SS shall then send CELL UPDATE CONFIRM message to UE. UE shall reply with UTRAN MOBILITY INFORMATION CONFIRM message. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_FACH state in cell 1 |
| 2 | | | Void | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.3.1.1. The UE shall find that the cell 2 is better for service and perform a reselection. SS waits for the maximum duration required for the UE to camp to cell 2. |
| 3 | → | | CELL UPDATE | Value "cell reselection" shall be indicated in IE "Cell update cause" |
| 4 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_FACH". |
| 4a | → | | CELL UPDATE | Value "cell reselection" shall be indicated in IE "Cell update cause" |
| 4b | ← | | CELL UPDATE CONFIRM | See message content. |
| 5 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 6 | | | | SS reverses the transmission power level of cell 1 and cell 2. |
| 7 | → | | CELL UPDATE | |
| 8 | ← | | CELL UPDATE CONFIRM | New C-RNTI and U-RNTI identities are assigned to the UE. IE "RRC State Indicator" is set to "CELL_FACH". |
| 9 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 10 | | | | SS reverses the transmission power level of cell 1 and cell 2. |
| 11 | → | | CELL UPDATE | |
| 12 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_DCH".<br>IE "Physical channel information elements" is included in this message |
| 12a | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 13 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The UE is in CELL_DCH now. The SS shall send PHYSICAL CHANNEL RECONFIGURATION message to the UE asking the UE to transit to CELL_FACH state. |
| 14 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 15 | | | | The SS reverses the transmission power level of cell 1 and cell 2. |
| 16 | → | | CELL UPDATE | |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 17 | ← | | CELL UPDATE CONFIRM | IE "Physical channel information elements" is included in this message, and IE "RRC State Indicator" is set to "CELL_DCH". IE "Transport channel information elements" is included in this message |
| 18 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 19 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The UE is in CELL_DCH now. The SS shall send PHYSICAL CHANNEL RECONFIGURATION message to the UE asking the UE to transit to CELL_FACH state. |
| 20 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 21 | | | | The SS reverses the transmission power level of cell 1 and cell 2. |
| 22 | → | | CELL UPDATE | |
| 23 | ← | | CELL UPDATE CONFIRM | New C-RNTI identity is assigned to the UE.<br>IE "RRC State Indicator" is set to "CELL_FACH".<br>IE "RB information to reconfigure list" and IE "RB information to be affected list" is included in this message. |
| 24 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 25 | | | | The SS reverses the transmission power level of cell 1 and cell 2. |
| 26 | → | | CELL UPDATE | |
| 27 | ← | | CELL UPDATE CONFIRM | New C-RNTI identity is assigned to the UE.<br>IE "RRC State Indicator" is set to "CELL_FACH".<br>IE "RB information to release list" is included in this message |
| 28 | → | | RADIO BEARER RELEASE COMPLETE | |
| 29 | | | | SS reverses the transmission power level of cell 1 and cell 2. |
| 30 | → | | CELL UPDATE | |
| 31 | | | | SS reverses the transmission power level of cell 1 and cell 2. |
| 32 | → | | CELL UPDATE | |
| 33 | ← | | CELL UPDATE CONFIRM | New C-RNTI identity is assigned to the UE. |
| 34 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 35 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

CELL UPDATE (Step 3, 4a, 7,, 11, 16, 22, 30 and 32)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | In step 3, 4a and 7 check to see if set to '0000 0000 0000 0000 0001'.<br><br>In step 11, 16, 22, 26, 30 and 32, check to see if set to same string in IE "S-RNTI" in IE "New U-RNTI" of CELL UPDATE CONFIRM message in previous assignment |
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |

CELL UPDATE CONFIRM (Step 4)

Use the same message sub-type found in TS 34.108, clause 9.

CELL UPDATE CONFIRM (Step 4b)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |
| RRC transaction identifie | Selects an arbitrary integer between 0 to 3, but is different from that used in step 4. |

CELL UPDATE CONFIRM (Step 8)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | |
| - SRNC Identity | '0000 0000 0001' |
| - S-RNTI | An arbitrary 20-bits string which is different from original S-RNTI |
| New C-RNTI | '0000 0000 0000 1111' |

CELL UPDATE CONFIRM (Step 12 )

Use the same message sub-type found in step 8 and k=0, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement<br>Uplink DPCH info<br><br>Downlink information common for all radio links<br><br>Downlink information per radio link list | <br>Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS)<br>Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS)<br>Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 12a)

Use the same message sub-type found in [9] TS 34.108 clause 9.

PHYSICAL CHANNEL RECONFIGURATION (Step 13)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_FACH from CELL_DCH in PS":

CELL UPDATE CONFIRM (Step 17)

Use the same message sub-type found in TS 34.108, clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| UL Transport channel information for all transport channels | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| Added or Reconfigured uplink TrCH information | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| DL Transport channel information for all transport channels | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| Added or Reconfigured downlink TrCH information | Same as RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| CHOICE channel requirement | |
| Uplink DPCH info | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| Downlink information common for all radio links | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| Downlink information per radio link list | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 14)

Use the same message sub-type found in [9] TS 34.108 clause 9.

PHYSICAL CHANNEL RECONFIGURATION (Step 19)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_FACH from CELL_DCH in PS", with following exception.

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '0000 0000 0000 1111' |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 20)

Use the same message sub-type found in [9] TS 34.108 clause 9.

CELL UPDATE CONFIRM (Step 23)

Use the same message sub-type found in TS 34.108, clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to be reconfigure | |
| New C-RNTI<br>- RB identity<br>- PDCP info<br>- PDCP SN info<br>- RLC info<br>- RB Information Release List<br>- RB Information Reconfiguration List | '1010 1010 1010 1010'<br>20<br>Not Present<br>Not Present<br>Not Present<br>Not Present<br>Present |
| - RB Information Affected List | Present |

CELL UPDATE CONFIRM (Step 27)

Use the same message sub-type found in TS 34.108, clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '0000 0000 0000 1111' |
| RB information to release<br>-RB identity | <br>4 |

CELL UPDATE CONFIRM (Step 33)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

#### 8.3.1.1.5 Test requirement

At step 3 the UE shall reselect to cell 2 and then it shall transmit a CELL UPDATE message which, sets the value "cell reselection" in IE "Cell update cause".

At step 4a the UE shall transmit CELL UPDATE message which sets the value "cell reselection" in IE "Cell update cause".

At step 4b, the SS shall send a CELL UPDATE CONFIRM.

At step 5, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message.

At step 7 the UE shall sent a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 9, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message.

At step 11 the UE shall sent a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 12, the SS shall send a CELL UPDATE CONFIRM taking the UE into CELL_DCH state. In addition, it also specifies the IE “Physical Channel Information elements”.

At step 12a, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the new physical channel assigned.

At step 13 and 14, the SS uses PHYSICAL CHANNEL RECONFIGURATION to take the UE into CELL_FACH state.

At step 15, the SS reverses the transmission power level of cell 1 and 2 causing the UE to reselect to a different cell.

At step 16 the UE shall sent a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 17, the SS shall send a CELL UPDATE CONFIRM and take the UE into CELL_DCH state. In addition, it also specifies the IE “Physical Channel Information elements” and “Transport Channel Information elements”.

At step 18, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE.

At step 19 and 20, the SS uses PHYSICAL CHANNEL RECONFIGURATION to take the UE into CELL_FACH state.

At step 21, the SS reverses the transmission power level of cell 1 and 2 causing the UE to reselect to a different cell.

At step 22, the UE shall send a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 23, the SS shall send a CELL UPDATE CONFIRM taking the UE into CELL_FACH state. In addition, it also specifies “RB Information Reconfigure List and RB Information Affected List Information”.

At step 24, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE.

At step 25, the SS reverses the transmission power level of cell 1 and 2 causing the UE to reselect to a different cell.

At step 26, the UE shall send a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 27, the SS shall send a CELL UPDATE CONFIRM taking the UE into CELL_FACH state. In addition, it also specifies the IE “RB Information to release list”.

At step 28, the UE shall transmit a RADIO BEARER RELEASE COMPLETE.

At step 29, the SS reverses the transmission power level of cell 1 and 2 causing the UE to reselect to a different cell.

At step 30, the UE shall send a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 31, the SS reverses the transmission power level of cell 1 and 2 causing the UE to reselect to a different cell.

At step 32, the UE shall send a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 33, the SS shall send a CELL UPDATE CONFIRM

At step 34, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message

## 8.3.1.1a Cell Update: cell reselection in CELL_FACH (Cells belong to different frequency bands)

### 8.3.1.1a.1 Definition

This test case is identical to test case 8.3.1.1 except that the cells belong to different frequency bands.

Note: The test case 8.3.1.1 is an intra frequency test.

### 8.3.1.1a.2 Conformance requirement

Same conformance requirement as clause 8.3.1.1.2

### 8.3.1.1a.3 Test purpose

1. To confirm that the UE executes a cell update procedure after the successful reselection of another UTRA cell in different frequency band.

2. To confirm that the UE sends the correct uplink response message when executing cell update procedure due to cell reselection

### 8.3.1.1a.4 Method of test

Initial Condition

Same initial conditions as clause 8.3.1.1.4 except,

Cell 2 is mapped to cell 4 (inter frequency) of 34.108 clause 6.1 and both cells belong to different frequency bands.

Following updated System information is transmitted in both cells after UE is brought to initial state of PS-DCCH+DTCH_FACH (state 6-11) in cell 1.

MASTER INFORMATION BLOCK

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| MIB Value Tag | Set to (Current MIB value tag + 1) |
| SIB 4 Cell Value tag | Set to (Current SIB4 value tag + 1) |
| SB 1 Cell Value tag | Set to (Current SIB4 value tag + 1) |

SCHEDULING BLOCK 1

| Information Element | Value/remark |
|---|---|
| SIB 11 Cell Value Tag | Set to (Current SIB 11 value tag + 1) |

System Information Block type 4

Use the same message type found in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| -Qualmin | -16dB |

System Information Block type 11

Use the same message type found in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | TRUE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |

SYSTEM INFORMATION CHANGE INDICATION

| Information Element | Value/remark |
|---|---|
| Message Type | |
| BCCH modification info | |
| MIB Value tag | Set equal to Value tag sent in modified MIB |

Related ICS/IXIT statement(s)

- UE supports multiple bands simultaneously yes/no

Test Procedure

Same test procedure as clause 8.3.1.1.4 with the following exception

After step 30, SS shall send CELL UPDATE CONFIRM message to the UE. UE shall reply with UTRAN MOBILITY INFORMATION CONFIRM message.

Note: If the UE supports more than 2 frequency bands, the test may be executed for various band combinations.

Expected sequence

Same expected sequence as clause 8.3.1.1.4 with the following additional test steps:

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 30a | ← | | CELL UPDATE CONFIRM | New C-RNTI identity is assigned to the UE. |
| 30b | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Contents

Same specific message contents as clause 8.3.1.1.4. The message content for the additional test steps are given below.

CELL UPDATE CONFIRM (Step 30a)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '0000000000000001' |

#### 8.3.1.1a.5 Test requirement

Same test requirements as clause 8.3.1.1.5 with the following additional test requirements:

At step 30a, the SS shall send a CELL UPDATE CONFIRM

At step 30b, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message

### 8.3.1.1b Cell Update: cell reselection in CELL_FACH(TDD)

#### 8.3.1.1b.1 Definition

All UEs which support TDD

#### 8.3.1.1b.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

…

1> Re-entering service area:

…

1> RLC unrecoverable error:

…

1> Cell reselection:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:

3> if the UE is in CELL_FACH or CELL_PCH state and the UE performs cell re-selection; or

3> if the UE is in CELL_FACH state and the variable C_RNTI is empty:

4> perform cell update using the cause "cell reselection".

…

When initiating cell update procedure, the UE shall:

1> stop timer T305;

1> if the UE is in CELL_DCH state:

…

…

1> move to CELL_FACH state, if not already in that state;

1> if the UE performs cell re-selection:

2> clear the variable C_RNTI; and

2> stop using that C_RNTI just cleared from the variable C_RNTI in MAC.

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> in case of a cell update procedure:

2> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the CELL UPDATE message for transmission on the uplink CCCH.

…

1> set counter V302 to 1;

1> start timer T302 when the MAC layer indicates success or failure in transmitting the message.

…

In case of cell update procedure the UE shall transmit a CELL UPDATE message.

The UE shall set the IEs in the CELL UPDATE message as follows:

1> set the IE "Cell update cause" corresponding to the cause specified in TS 25.331 subclause 8.3.1.2 that is valid when the CELL UPDATE message is submitted to lower layers for transmission;

NOTE: During the time period starting from when a cell update procedure is initiated by the UE until when the procedure ends, additional CELL UPDATE messages may be transmitted by the UE with different causes.

1> set the IE "U-RNTI" to the value of the variable U_RNTI;

1> if the value of the variable PROTOCOL_ERROR_INDICATOR is TRUE:

…

1> if the value of the variable FAILURE_INDICATOR is TRUE:

…

…

When the UE receives a CELL UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE shall:

1> stop timer T302;

1> in case of a cell update procedure and the CELL UPDATE CONFIRM message:

2> includes "RB information elements"; and/or

2> includes "Transport channel information elements"; and/or

2> includes "Physical channel information elements"; and

2> if the variable ORDERED_RECONFIGURATION is set to FALSE:

3> set the variable ORDERED_RECONFIGURATION to TRUE.

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following:

…

…

1> enter a state according to subclause 8.6.3.3 applied on the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message.

…

If the UE after state transition remains in CELL_FACH state, it shall

1> start the timer T305 using its initial value if timer T305 is not running and periodical cell update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity";

1> select PRACH according to TS 25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> not prohibit periodical status transmission in RLC;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

If the UE after the state transition remains in CELL_FACH state; and

- a C-RNTI is stored in the variable C_RNTI;

…

the UE shall:

…

1> in case of a cell update procedure:

2> set the IE "RRC transaction identifier" in any response message transmitted below to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry.

…

1> transmit a response message as specified in TS 25.331 subclause 8.3.1.7;

…

If the CELL UPDATE CONFIRM message:

- includes the IE "RB information to release list":

the UE shall:

1> transmit a RADIO BEARER RELEASE COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include the IE "RB information to release list"; and
- includes the IE "RB information to reconfigure list"; or
- includes the IE "RB information to be affected list":

the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- includes "Transport channel information elements":

the UE shall:

1> transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- includes "Physical channel information elements":

the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and

- does not include "CN information elements"; and
- does not include the IE "Ciphering mode info"; and
- does not include the IE "Integrity protection mode info"; and
- does not include the IE "New C-RNTI"; and
- does not include the IE "New U-RNTI":

the UE shall:

1> transmit no response message.

If the new state is CELL_FACH, the response message shall be transmitted using the new configuration after the state transition., and the UE shall:

…

1> if the variable PDCP_SN_INFO is empty:

…

2> if the CELL UPDATE CONFIRM or URA UPDATE CONFIRM message did not contain the IE "Ciphering mode info":

3> when RLC has been requested to transmit the response message,

4> continue with the remainder of the procedure.

…

If any or several of the following conditions are true:

…;

- reselection to another UTRA cell (including the previously serving cell) before completion of the cell update or URA update procedure;

the UE shall:

1> stop T302 if it is running;

…

1> check whether it is still in "in service area";

…

1> in case of a cell update procedure:

2> clear any entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS.

If the UE detects "in service area" if it has not entered idle mode, and:

1> if V302 is equal to or smaller than N302, the UE shall:

2> if the UE performed cell re-selection:

3> delete its C-RNTI.

2> in case of a cell update procedure:

3> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

3> submit the CELL UPDATE message for transmission on the uplink CCCH.

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302, the UE shall:

…

Reference

3GPP TS 25.331 clause 8.3.1

8.3.1.1b.3 Test purpose

1. To confirm that the UE executes a cell update procedure after the successful reselection of another UTRA cell.
2. To confirm that the UE sends the correct uplink response message when executing cell update procedure due to cell reselection.

8.3.1.1b.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active. Each cell configure 3 carriers， one is the primary carrier，the other two are secondary carrier.

Detail in the table follows:

| Parameter | Cell 1 | Cell 2 |
|---|---|---|
| UTRA RF Channel Number1 | Ch. 1 | Ch. 2 |
| UTRA RF Channel Number1 | Ch. 2 | Ch.3 |
| UTRA RF Channel Number1 | Ch.3 | Ch.1 |

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.1b**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Ch. 1 | | Ch. 1 | |
| P-CCPCH RSCP (TDD) | dBm | -60 | -69 | -69 | -60 |

Table 8.3.1.1b illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions. SS switches the power settings repeatedly between columns "T1" and "T0", whenever the description below specifies that the transmission power settings for cell 1 and cell 2 be reversed.

The UE is in the CELL_FACH state, camping onto cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.1b. The UE shall find cell 2 to be more suitable for service and hence perform a cell reselection. After the completion of cell reselection, the UE shall transmits a CELL UPDATE message to the SS on the uplink CCCH of cell 2 and set IE "Cell update cause" to "Cell Reselection". After the SS receives this message, it transmits a CELL UPDATE CONFIRM message, which includes the IE "RRC State Indicator" set to "CELL_FACH", to the UE on the downlink DCCH. UE shall verify that IE "New C-RNTI" is not included in the downlink message and shall send a CELL UPDATE message to SS again. SS shall then send a CELL UPDATE CONFIRM message which includes a valid IE "New C-RNTI". SS verifies that the UE send UTRAN MOBILITY INFORMATION CONFIRM message.. UE shall stay in CELL_FACH state. SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.1b. The UE shall send a CELL UPDATE message on the uplink CCCH of cell 1. SS replies with CELL UPDATE CONFIRM message and allocates new C-RNTI and U-RNTI identities to the UE. The IE "RRC State Indicator" is set to "CELL_FACH" in this message. The UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message. Following this, SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.1b. The UE shall initiate a cell update procedure by transmitting a CELL UPDATE message and stating the cause as 'cell re-selection'. SS replies with a CELL UPDATE CONFIRM message which contains IE "Physical channel information elements" and IE "RRC State Indicator" is set to "CELL_DCH". The UE shall move to CELL_DCH state and send PHSICAL CHANNEL RECONFIGURATION COMPLETE message. The SS shall transmit PHYSICAL CHANNEL RECONFIGURATION message, asking the UE to move to CELL_FACH state. The UE shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message after transiting to CELL_FACH state. Then, SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.1b. The UE shall send a CELL UPDATE message on the uplink CCCH of cell 1. SS replies with a CELL UPDATE CONFIRM message which contains IE "Transport channel information elements" and IE "RRC State Indicator" is set to "CELL_DCH". The UE shall move to CELL_DCH state and send TRANSPORT CHANNEL RECONFIGURATION COMPLETE message. The SS shall transmit PHYSICAL CHANNEL RECONFIGURATION message, asking the UE to move to CELL_FACH state. The UE shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message after transiting to CELL_FACH state. Following this, SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.1b. The UE shall send a CELL UPDATE message on the uplink CCCH of cell 2. SS replies with a CELL UPDATE CONFIRM message which contains IE "RB information to be affected list". The UE shall send RADIO BEARER RECONFIGURATION COMPLETE message. Then, SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.1b. The UE shall send a CELL UPDATE message on the uplink CCCH of cell 1. SS replies with a CELL UPDATE CONFIRM message which contains IE "RB information to release list". The UE shall send RADIO BEARER RELEASE COMPLETE message. Finally, SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.1b. The UE shall send a CELL UPDATE message on the uplink CCCH of cell 2. SS shall not respond to this message but SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.1b. UE shall send a CELL UPDATE message on the uplink CCCH of cell 1. SS shall then send CELL UPDATE CONFIRM message to UE. UE shall reply with UTRAN MOBILITY INFORMATION CONFIRM message. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_FACH state in cell 1 |
| 2 | | | Void | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.3.1.1b. The UE shall find that the cell 2 is better for service and perform a reselection. SS waits for the maximum duration required for the UE to camp to cell 2. |
| 3 | → | | CELL UPDATE | Value "cell reselection" shall be indicated in IE "Cell update cause" |
| 4 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_FACH". |
| 4a | → | | CELL UPDATE | Value "cell reselection" shall be indicated in IE "Cell update cause" |
| 4b | ← | | CELL UPDATE CONFIRM | See message content. |
| 5 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 6 | | | | SS reverses the transmission power level of cell 1 and cell 2. |
| 7 | → | | CELL UPDATE | |
| 8 | ← | | CELL UPDATE CONFIRM | New C-RNTI and U-RNTI identities are assigned to the UE. IE "RRC State Indicator" is set to "CELL_FACH". |
| 9 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 10 | | | | SS reverses the transmission power level of cell 1 and cell 2. |
| 11 | → | | CELL UPDATE | |
| 12 | → | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_DCH".<br>IE "Physical channel information elements" is included in this message |
| 12a | ← | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 13 | → | | PHYSICAL CHANNEL RECONFIGURATION | The UE is in CELL_DCH now. The SS shall send PHYSICAL CHANNEL RECONFIGURATION message to the UE asking the UE to transit to CELL_FACH state. |
| 14 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 15 | | | | The SS reverses the transmission power level of cell 1 and cell 2. |
| 16 | → | | CELL UPDATE | |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 17 | ← | | CELL UPDATE CONFIRM | IE "Physical channel information elements" is included in this message, and IE "RRC State Indicator" is set to "CELL_DCH". IE "Transport channel information elements" is included in this message |
| 18 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 19 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The UE is in CELL_DCH now. The SS shall send PHYSICAL CHANNEL RECONFIGURATION message to the UE asking the UE to transit to CELL_FACH state. |
| 20 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 21 | | | | The SS reverses the transmission power level of cell 1 and cell 2. |
| 22 | → | | CELL UPDATE | |
| 23 | ← | | CELL UPDATE CONFIRM | New C-RNTI identity is assigned to the UE.<br>IE "RRC State Indicator" is set to "CELL_FACH".<br>IE "RB information to reconfigure list" and IE "RB information to be affected list" is included in this message. |
| 24 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |
| 25 | | | | The SS reverses the transmission power level of cell 1 and cell 2. |
| 26 | → | | CELL UPDATE | |
| 27 | ← | | CELL UPDATE CONFIRM | New C-RNTI identity is assigned to the UE.<br>IE "RRC State Indicator" is set to "CELL_FACH".<br>IE "RB information to release list" is included in this message |
| 28 | → | | RADIO BEARER RELEASE COMPLETE | |
| 29 | | | | SS reverses the transmission power level of cell 1 and cell 2. |
| 30 | → | | CELL UPDATE | |
| 31 | | | | SS reverses the transmission power level of cell 1 and cell 2. |
| 32 | → | | CELL UPDATE | |
| 33 | ← | | CELL UPDATE CONFIRM | New C-RNTI identity is assigned to the UE. |
| 34 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 35 | | | | SS reverses the transmission power level of cell 1 and cell 2 |
| 36 | → | | CELL UPDATE | |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 37 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_DCH".<br>IE " Physical channel information elements" and "Freq Info" is included in this message and is indicated on the secondary carrier. |
| 38 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE response the message on the DPCH of the secondary carrier. |
| 39 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1

Use the same message found in TS 34.108 , with the exceptions of the following IEs：

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

CELL UPDATE (Step 3, 4a, 7, 11, 16, 22, 30 and 32)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | In step 3, 4a and 7 check to see if set to '0000 0000 0000 0000 0001'.<br><br>In step 11, 16, 22, 26, 30 and 32, check to see if set to same string in IE "S-RNTI" in IE "New U-RNTI" of CELL UPDATE CONFIRM message in previous assignment |
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |

CELL UPDATE CONFIRM (Step 4)

Use the same message sub-type found in TS 34.108, clause 9.

CELL UPDATE CONFIRM (Step 4b)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |
| RRC transaction identifie | Selects an arbitrary integer between 0 to 3, but is different from that used in step 4. |

CELL UPDATE CONFIRM (Step 8)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | |
| - SRNC Identity | '0000 0000 0001' |
| - S-RNTI | An arbitrary 20-bits string which is different from original S-RNTI |
| New C-RNTI | '0000 0000 0000 1111' |

CELL UPDATE CONFIRM (Step 12 )

Use the same message sub-type found in step 8 and k=0, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | |
| Uplink DPCH info | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| Downlink information common for all radio links | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| Downlink information per radio link list | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 12a)

Use the same message sub-type found in [9] TS 34.108 clause 9.

PHYSICAL CHANNEL RECONFIGURATION (Step 13)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_FACH from CELL_DCH in PS":

CELL UPDATE CONFIRM (Step 17)

Use the same message sub-type found in TS 34.108, clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| UL Transport channel information for all transport channels | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| Added or Reconfigured uplink TrCH information | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| DL Transport channel information for all transport channels | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| Added or Reconfigured downlink TrCH information | Same as RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| CHOICE channel requirement | |
| Uplink DPCH info | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| Downlink information common for all radio links | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |
| Downlink information per radio link list | Same as the IE in RADIO BEARER SETUP (Packet to CELL_DCH from CELL_FACH in PS) |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 14)

Use the same message sub-type found in [9] TS 34.108 clause 9.

PHYSICAL CHANNEL RECONFIGURATION (Step 19)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_FACH from CELL_DCH in PS", with following exception.

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '0000 0000 0000 1111' |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 20)

Use the same message sub-type found in [9] TS 34.108 clause 9.

CELL UPDATE CONFIRM (Step 23)

Use the same message sub-type found in TS 34.108, clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RB information to be reconfigure | |
| New C-RNTI<br>- RB identity<br>- PDCP info<br>- PDCP SN info<br>- RLC info<br>- RB Information Release List<br>- RB Information Reconfiguration List | '1010 1010 1010 1010'<br>20<br>Not Present<br>Not Present<br>Not Present<br>Not Present<br>Present |
| - RB Information Affected List | Present |

CELL UPDATE CONFIRM (Step 27)

Use the same message sub-type found in TS 34.108, clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '0000 0000 0000 1111' |
| RB information to release<br>-RB identity | <br>4 |

CELL UPDATE CONFIRM (Step 33)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

CELL UPDATE CONFIRM (Step 36)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions：

| Information Element | Value/remark |
|---|---|
| CellUpdateConfirm-CCCH-r4-TDD128-add-ext-IEs | |
| frequencyInfo | The secondary carrier frequency of cell 2 |

Contents of System Information Block type 3

Use the same message found in TS 34.108, with the following exceptions，

| Information Element | Value/remark |
|---|---|
| Qrxlevmin | －81dBm |
| Sintrasearch | 21db |
| Sintersearch | 21db |
| -v4b0NonCriticalExtensions | |
| -sysInfoType3-v4b0ext | |
| - mapping-LCR | 0 |

### 8.3.1.1b.5 Test requirement

At step 3 the UE shall reselect to cell 2 and then it shall transmit a CELL UPDATE message which, sets the value "cell reselection" in IE "Cell update cause".

At step 4a the UE shall transmit CELL UPDATE message which sets the value "cell reselection" in IE "Cell update cause".

At step 4b, the SS shall send a CELL UPDATE CONFIRM.

At step 5, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message.

At step 7 the UE shall sent a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 9, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message.

At step 11 the UE shall sent a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 12, the SS shall send a CELL UPDATE CONFIRM taking the UE into CELL_DCH state. In addition, it also specifies the IE “Physical Channel Information elements”.

At step 12a, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the new physical channel assigned.

At step 13 and 14, the SS uses PHYSICAL CHANNEL RECONFIGURATION to take the UE into CELL_FACH state.

At step 15, the SS reverses the transmission power level of cell 1 and 2 causing the UE to reselect to a different cell.

At step 16 the UE shall sent a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 17, the SS shall send a CELL UPDATE CONFIRM and take the UE into CELL_DCH state. In addition, it also specifies the IE “Physical Channel Information elements” and “Transport Channel Information elements”.

At step 18, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE.

At step 19 and 20, the SS uses PHYSICAL CHANNEL RECONFIGURATION to take the UE into CELL_FACH state.

At step 21, the SS reverses the transmission power level of cell 1 and 2 causing the UE to reselect to a different cell.

At step 22, the UE shall send a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 23, the SS shall send a CELL UPDATE CONFIRM taking the UE into CELL_FACH state. In addition, it also specifies “RB Information Reconfigure List and RB Information Affected List Information”.

At step 24, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE.

At step 25, the SS reverses the transmission power level of cell 1 and 2 causing the UE to reselect to a different cell.

At step 26, the UE shall send a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 27, the SS shall send a CELL UPDATE CONFIRM taking the UE into CELL_FACH state. In addition, it also specifies the IE “RB Information to release list”.

At step 28, the UE shall transmit a RADIO BEARER RELEASE COMPLETE.

At step 29, the SS reverses the transmission power level of cell 1 and 2 causing the UE to reselect to a different cell.

At step 30, the UE shall send a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 31, the SS reverses the transmission power level of cell 1 and 2 causing the UE to reselect to a different cell.

At step 32, the UE shall send a CELL UPDATE message to the cell with stronger transmitting power, in order to indicate that a cell reselection has taken place.

At step 33, the SS shall send a CELL UPDATE CONFIRM.

At step 34, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message.

At step 38, the UE shall transmit a “PHYSICAL CHANNEL RECONFIGURATION COMPLETE” on the secondary carrier.

### 8.3.1.2 Cell Update: cell reselection in CELL_PCH

#### 8.3.1.2.1 Definition

#### 8.3.1.2.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

…

1> Re-entering service area:

…

1> RLC unrecoverable error:

…

1> Cell reselection:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:

3> if the UE is in CELL_FACH or CELL_PCH state and the UE performs cell re-selection; or

3> if the UE is in CELL_FACH state and the variable C_RNTI is empty:

4> perform cell update using the cause "cell reselection".

When initiating cell update procedure, the UE shall:

1> stop timer T305;

1> if the UE is in CELL_DCH state:

…

…

1> move to CELL_FACH state, if not already in that state;

1> if the UE performs cell re-selection:

2> clear the variable C_RNTI; and

2> stop using that C_RNTI just cleared from the variable C_RNTI in MAC.

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> in case of a cell update procedure:

2> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the CELL UPDATE message for transmission on the uplink CCCH.

…

1> set counter V302 to 1;

1> start timer T302 when the MAC layer indicates success or failure in transmitting the message.

…

In case of cell update procedure the UE shall transmit a CELL UPDATE message.

The UE shall set the IEs in the CELL UPDATE message as follows:

1> set the IE "Cell update cause" corresponding to the cause specified in TS 25.331 subclause 8.3.1.2 that is valid when the CELL UPDATE message is submitted to lower layers for transmission;

NOTE: During the time period starting from when a cell update procedure is initiated by the UE until when the procedure ends, additional CELL UPDATE messages may be transmitted by the UE with different causes.

1> set the IE "U-RNTI" to the value of the variable U_RNTI;

1> if the value of the variable PROTOCOL_ERROR_INDICATOR is TRUE:

…

1> if the value of the variable FAILURE_INDICATOR is TRUE:

…

…

When the UE receives a CELL UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE shall:

1> stop timer T302;

1> in case of a cell update procedure and the CELL UPDATE CONFIRM message:

…

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following:

…

…

1> enter a state according to subclause 8.6.3.3 applied on the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message.

…

If the UE after state transition enters CELL_PCH state, it shall:

…

1> start the timer T305 using its initial value if timer T305 is not running and periodical update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity";

1> select Secondary CCPCH according to subclause 8.5.19;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> use the value in the IE "UTRAN DRX Cycle length coefficient" for calculating Paging Occasion and PICH Monitoring Occasion as specified in TS 25.331 subclause 8.6.3.2 in CELL_PCH state.

1> if the IE "UTRAN DRX cycle length coefficient" is not included in the same message:

2> set the variable INVALID_CONFIGURATION to TRUE.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- does not include "CN information elements"; and
- does not include the IE "Ciphering mode info"; and
- does not include the IE "Integrity protection mode info"; and
- does not include the IE "New C-RNTI"; and
- does not include the IE "New U-RNTI":

the UE shall:

1> transmit no response message.

Reference

3GPP TS 25.331 clause 8.3.1.

#### 8.3.1.2.3 Test purpose

1. To confirm that the UE, in CELL_PCH state, executes a cell update procedure after the successful reselection of another UTRA cell.

#### 8.3.1.2.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2 are active.

UE: CELL_PCH (state 6-12) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is brought to CELL_PCH state and is camped onto cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.1. When the UE detects the presence of cell 2, it moves to CELL_FACH state and transmits a CELL UPDATE message on the uplink CCCH. The value "cell reselection" shall be set in IE "Cell update cause" in CELL UPDATE message. Upon reception of CELL_UPDATE message, SS replies with a CELL UPDATE CONFIRM message with the IE "RRC State Indicator" set to "CELL_PCH". After receiving this message, the UE returns to CELL_PCH state without transmitting any uplink message. SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_PCH state in cell 1 |
| 2 | | | | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.3.1.1. The UE shall find that the cell 2 is better and attempt to perform a cell reselection. |
| 3 | → | | CELL UPDATE | The UE moves to CELL_FACH state and transmits this message with the IE "Cell update cause" set to "cell reselection" |
| 4 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_PCH". |
| 5 | | | | The UE is in CELL_PCH state. |
| 6 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

CELL UPDATE (Steps 3)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |

CELL UPDATE CONFIRM (Step 4)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

#### 8.3.1.2.5 Test requirement

After step 2 the UE shall reselect to cell 2 and transmit a CELL UPDATE message, containing the IE "Cell update cause" set to "cell reselection".

After step 4, the UE shall enter CELL_PCH state.

### 8.3.1.3 Cell Update: periodical cell update in CELL_FACH

#### 8.3.1.3.1 Definition

#### 8.3.1.3.2 Conformance requirement

UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

…

1> Re-entering service area:

…

1> RLC unrecoverable error:

…

1> Cell reselection:

…

1> Periodical cell update:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in CELL_FACH or CELL_PCH state; and

2> if the timer T305 expires; and

2> if the criteria for "in service area" as specified in TS 25.331 subclause 8.5.5.2 is fulfilled; and

2> if periodic updating has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity":

3> perform cell update using the cause "periodical cell update".

When initiating the cell update procedure, the UE shall:

1> stop timer T305;

…

1> move to CELL_FACH state, if not already in that state;

…

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> in case of a cell update procedure:

2> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the CELL UPDATE message for transmission on the uplink CCCH.

1> set counter V302 to 1;

1> start timer T302 when the MAC layer indicates success or failure in transmitting the message.

…

In case of cell update procedure the UE shall transmit a CELL UPDATE message.

The UE shall set the IEs in the CELL UPDATE message as follows:

1> set the IE "Cell update cause" corresponding to the cause specified in TS 25.331 subclause 8.3.1.2 that is valid when the CELL UPDATE message is submitted to lower layers for transmission;

NOTE: During the time period starting from when a cell update procedure is initiated by the UE until when the procedure ends, additional CELL UPDATE messages may be transmitted by the UE with different causes.

1> set the IE "U-RNTI" to the value of the variable U_RNTI;

…

When the UE receives a CELL UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE shall:

1> stop timer T302;

…

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following:

1> enter a state according to TS 25.331 subclause 8.6.3.3 applied on the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message.

If the UE after state transition remains in CELL_FACH state, it shall

1> start the timer T305 using its initial value if timer T305 is not running and periodical cell update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity";

1> select PRACH according to TS 25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> not prohibit periodical status transmission in RLC;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

If the UE after the state transition remains in CELL_FACH state; and

- a C-RNTI is stored in the variable C_RNTI;

or

- the UE after the state transition moves to another state than the CELL_FACH state:

the UE shall:

1> in case of a cell update procedure:

2> set the IE "RRC transaction identifier" in any response message transmitted below to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry.

1> transmit a response message as specified in TS 25.331 subclause 8.3.1.7;

1> in case of a cell update procedure:

2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.

1> set the variable CELL_UPDATE_STARTED to FALSE;

1> clear the variable SECURITY_MODIFICATION.

…

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- does not include "CN information elements"; and
- does not include the IE "Ciphering mode info"; and
- does not include the IE "Integrity protection mode info"; and
- does not include the IE "New C-RNTI"; and
- does not include the IE "New U-RNTI":

the UE shall:

1> transmit no response message.

…

When the UE receives a UTRAN MOBILITY INFORMATION message, it shall:

1> act on received information elements as specified in TS 25.331 subclause 8.6;

1> if the IE "UE Timers and constants in connected mode" is present:

2> store the values of the IE "UE Timers and constants in connected mode" in the variable TIMERS_AND_CONSTANTS, replacing any previously stored value for each timer and constant; and

2> for each updated timer value:

3> start using the new value next time the timer is started;

2> for each updated constant value:

3> start using the new value directly;

1> set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION CONFIRM message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC;

…

Reference

3GPP TS 25.331 clause 8.3.1, 8.3.3.3.

### 8.3.1.3.3 Test purpose

1. To confirm that the UE executes a periodical cell update procedure following the expiry of timer T305.

### 8.3.1.3.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2 are active.

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.3**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -69 | -69 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -69 | -69 | -60 |

Table 8.3.1.3 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in CELL_FACH state. When the UE detects the expiry of timer T305 according to the settings in system information, the UE transmits a CELL UPDATE message to the SS on the uplink CCCH with a cause indicating periodical cell updating. SS replies with a CELL UPDATE CONFIRM message, and IE "RRC State Indicator" is set to "CELL_FACH". SS verifies that the UE does not transmit any uplink message. SS then waits for T305 to expire again. The UE shall send another CELL UPDATE message to report periodic cell updating. After the SS receives this message, it transmits a CELL UPDATE CONFIRM message which includes the IEs "new C-RNTI", "new U-RNTI" to the UE on the downlink DCCH. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. Next, SS transmits UTRAN MOBILITY INFORMATION message, which includes IE "T305" set to "infinity", to UE. UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.3, causing the UE to enter CELL_FACH state in cell 2 and transmit a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". Then SS shall transmit CELL UPDATE CONFIRM. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. SS then monitors the uplink CCCH for a period of 60 minutes (ideally the SS should monitor this up to the maximum possible value for timer T305 (720 minutes), but for practical reasons 60 minutes (twice default timer of 30 minutes) is regarded as being sufficient) and verifies that no CELL_UPDATE message is received. After this, the SS transmits UTRAN MOBILITY INFORMATION message, which includes IE "T305" set to '5', to UE. UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message. SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.3, causing the UE to enter CELL_FACH state in cell 1 and transmit a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". Then SS shall transmit CELL UPDATE CONFIRM. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. UE shall resume periodic cell updating procedure and transmit CELL_UPDATE message after T305 (5 minutes) expires.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_FACH state. SS waits until T305 has expired. |
| 2 | → | | CELL UPDATE | IE "Cell update cause" shall be set to "periodical cell updating" |
| 3 | ← | | CELL UPDATE CONFIRM | No RNTI identities are given. No information on PRACH and S-CCPCH are provided. |
| 4 | | | | SS verifies that no uplink message is received from UE. SS waits for another period to allow T305 to expire. |
| 5 | → | | CELL UPDATE | Set to "periodical cell update" in IE "Cell update cause" upon the expiry of timer T305. |
| 6 | ← | | CELL UPDATE CONFIRM | Including IEs "new C-RNTI", "new U-RNTI" and IE "RRC State Indicator" is set to "CELL_FACH" |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | ← | | UTRAN MOBILITY INFORMATION | IE "T305" is set to Infinity. |
| 9 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 10 | | | | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.3.1.3 |
| 11 | → | | CELL UPDATE | IE "Cell update cause" shall be set to "cell reselection". |
| 12 | ← | | CELL UPDATE CONFIRM | |
| 12a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 13 | | | | SS waits for 60 minutes and checks that no CELL UPDATE message is transmitted on uplink PRACH channel. |
| 14 | ← | | UTRAN MOBILITY INFORMATION | IE "T305" is set to '5. |
| 15 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 16 | | | | SS applies the downlink transmission power settings, according to the values in columns "T0" of table 8.3.1.3 |
| 17 | → | | CELL UPDATE | IE "Cell update cause" shall be set to "cell reselection". |
| 18 | ← | | CELL UPDATE CONFIRM | |
| 18a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 19 | → | | CELL UPDATE | UE shall transmit this message with "cell update cause" set to "periodical cell updating" after T305 expires. |
| 20 | ← | | CELL UPDATE CONFIRM | |
| 21 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

CELL UPDATE (Step 2 and 5)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'periodical cell updating' |

CELL UPDATE (Step 11 and 17)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to same bit string as in IE "S-RNTI" in IE "U-RNTI" of the CELL UPDATE CONFIRM message sent in step 6. |
| Cell Update Cause | Check to see if set to "cell reselection" |

CELL UPDATE CONFIRM (Step 3 and 20)

Use the same message sub-type found in TS 34.108, clause 9.

CELL UPDATE CONFIRM (Step 6, 12 and 18)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | |
| - SRNC Identity | Set to '0000 0000 0001' |
| - S-RNTI | Set to an arbitrary string different from '0000 0000 0000 0000 0001' |
| New C-RNTI | '1010 1010 1010 1010' |

CELL UPDATE (Step 19)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to same bit string as in IE "S-RNTI" in IE "U-RNTI" of the CELL UPDATE CONFIRM message sent in step 6. |
| Cell Update Cause | Check to see if set to 'periodical cell updating' |

UTRAN MOBILITY INFORMATION (Step 8)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | Not Present |
| New C-RNTI | Not Present |
| UE Timers and constants in connected mode | |
| - T305 | infinity |

UTRAN MOBILITY INFORMATION (Step 14)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | Not Present |
| New C-RNTI | Not Present |
| UE Timers and constants in connected mode<br>- T305 | <br>5 |

#### 8.3.1.3.5 Test requirement

After step 1 the UE shall detect the expiry of timer T305 and then transmits a CELL UPDATE message setting value "periodical cell update" into IE "Cell update cause".

After step 3 the UE shall not send any uplink message as a response to CELL UPDATE CONFIRM message sent in step 3.

After step 4 the UE shall send a CELL UPDATE message, specifying the cell updating cause to be "periodical cell update".

After step 6 the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH.

After step 8, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 10, the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "cell reselection" on the uplink CCCH.

After step 12, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

Between step 12a and 14, the UE shall not transmit any CELL UPDATE message.

After step 14, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 16, the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "cell reselection" on the uplink CCCH.

After step 18, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 18a, the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "periodical cell update" on the uplink CCCH.

### 8.3.1.3a Cell Update: periodical cell update in CELL_FACH (1.28 Mcps TDD Only)

#### 8.3.1.3a.1 Definition

#### 8.3.1.3a.2 Conformance requirement

UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

…

1> Re-entering service area:

…

1> RLC unrecoverable error:

…

1> Cell reselection:

…

1> Periodical cell update:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in CELL_FACH or CELL_PCH state; and

2> if the timer T305 expires; and

2> if the criteria for "in service area" as specified in TS 25.331 subclause 8.5.5.2 is fulfilled; and

2> if periodic updating has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity":

3> perform cell update using the cause "periodical cell update".

When initiating the cell update procedure, the UE shall:

1> stop timer T305;

…

1> move to CELL_FACH state, if not already in that state;

…

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> in case of a cell update procedure:

2> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3a;

2> submit the CELL UPDATE message for transmission on the uplink CCCH.

1> set counter V302 to 1;

1> start timer T302 when the MAC layer indicates success or failure in transmitting the message.

…

In case of cell update procedure the UE shall transmit a CELL UPDATE message.

The UE shall set the IEs in the CELL UPDATE message as follows:

1> set the IE "Cell update cause" corresponding to the cause specified in TS 25.331 subclause 8.3.1.2 that is valid when the CELL UPDATE message is submitted to lower layers for transmission;

NOTE: During the time period starting from when a cell update procedure is initiated by the UE until when the procedure ends, additional CELL UPDATE messages may be transmitted by the UE with different causes.

1> set the IE "U-RNTI" to the value of the variable U_RNTI;

…

When the UE receives a CELL UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE shall:

1> stop timer T302;

…

1> act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following:

1> enter a state according to TS 25.331 subclause 8.6.3.3 applied on the CELL UPDATE CONFIRM / URA UPDATE CONFIRM message.

If the UE after state transition remains in CELL_FACH state, it shall

1> start the timer T305 using its initial value if timer T305 is not running and periodical cell update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity";

1> select PRACH according to TS 25.331 subclause 8.5.17;

1> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

1> not prohibit periodical status transmission in RLC;

1> if the IE "UTRAN DRX cycle length coefficient" is included in the same message:

2> ignore that IE and stop using DRX.

If the UE after the state transition remains in CELL_FACH state; and

- a C-RNTI is stored in the variable C_RNTI;

or

- the UE after the state transition moves to another state than the CELL_FACH state:

the UE shall:

1> in case of a cell update procedure:

2> set the IE "RRC transaction identifier" in any response message transmitted below to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry.

1> transmit a response message as specified in TS 25.331 subclause 8.3.1.7;

1> in case of a cell update procedure:

2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.

1> set the variable CELL_UPDATE_STARTED to FALSE;

1> clear the variable SECURITY_MODIFICATION.

…

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and

- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- includes "CN information elements"; or
- includes the IE "Ciphering mode info"; or
- includes the IE "Integrity protection mode info"; or
- includes the IE "New C-RNTI"; or
- includes the IE "New U-RNTI":

the UE shall:

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM as response message using AM RLC.

If the CELL UPDATE CONFIRM message:

- does not include "RB information elements"; and
- does not include "Transport channel information elements"; and
- does not include "Physical channel information elements"; and
- does not include "CN information elements"; and
- does not include the IE "Ciphering mode info"; and
- does not include the IE "Integrity protection mode info"; and
- does not include the IE "New C-RNTI"; and
- does not include the IE "New U-RNTI":

the UE shall:

1> transmit no response message.

…

When the UE receives a UTRAN MOBILITY INFORMATION message, it shall:

1> act on received information elements as specified in TS 25.331 subclause 8.6;

1> if the IE "UE Timers and constants in connected mode" is present:

2> store the values of the IE "UE Timers and constants in connected mode" in the variable TIMERS_AND_CONSTANTS, replacing any previously stored value for each timer and constant; and

2> for each updated timer value:

3> start using the new value next time the timer is started;

2> for each updated constant value:

3> start using the new value directly;

1> set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION CONFIRM message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC;

…

Reference

3GPP TS 25.331 clause 8.3.1, 8.3.3.3.

### 8.3.1.3a.3 Test purpose

1. To confirm that the UE executes a periodical cell update procedure following the expiry of timer T305.

2. To confirm that the UE can indicate the UpPCH shifting position according to a CELL UPDATE CONFIRM message received from the SS and complete the process.

### 8.3.1.3a.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2 are active.

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.3a**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -69 | -69 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -69 | -69 | -60 |

Table 8.3.1.3a illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in CELL_FACH state. When the UE detects the expiry of timer T305 according to the settings in system information, the UE transmits a CELL UPDATE message to the SS on the uplink CCCH with a cause indicating periodical cell updating. SS replies with a CELL UPDATE CONFIRM message, and IE "RRC State Indicator" is set to "CELL_FACH". SS verifies that the UE does not transmit any uplink message. SS then waits for T305 to expire again. The UE shall send another CELL UPDATE message to report periodic cell updating. After the SS receives this message, it transmits a CELL UPDATE CONFIRM message which includes the IEs "new C-RNTI", "new U-RNTI" to the UE on the downlink DCCH. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. Next, SS transmits UTRAN MOBILITY INFORMATION message, which includes IE "T305" set to "infinity", to UE. UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.3a, causing the UE to enter CELL_FACH state in cell 2 and transmit a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". Then SS shall transmit CELL UPDATE CONFIRM. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. SS then monitors the uplink CCCH for a period of 60 minutes (ideally the SS should monitor this up to the maximum possible value for timer T305 (720 minutes), but for practical reasons 60 minutes (twice default timer of 30 minutes) is regarded as being sufficient) and verifies that no CELL_UPDATE message is received. After this, the SS transmits UTRAN MOBILITY INFORMATION message, which includes IE "T305" set to '5', to UE. UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message. SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.3a, causing the UE to enter CELL_FACH state in cell 1 and transmit a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". Then SS shall transmit CELL UPDATE CONFIRM. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. UE shall resume periodic cell updating procedure and transmit CELL_UPDATE message after T305 (5 minutes) expires. SS should transmit CELL UPDATE CONFIRM. If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. After T305 (5 minutes) expires, UE transmit CELL UPDATE at CELL1.SS indicate that UE is in CELL_DCH state and change the carrier and UpPCH shiting position. UE transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_FACH state. SS waits until T305 has expired. |
| 2 | → | | CELL UPDATE | IE "Cell update cause" shall be set to "periodical cell updating" |
| 3 | ← | | CELL UPDATE CONFIRM | No RNTI identities are given. No information on PRACH and S-CCPCH are provided. |
| 4 | | | | SS verifies that no uplink message is received from UE. SS waits for another period to allow T305 to expire. |
| 5 | → | | CELL UPDATE | Set to "periodical cell update" in IE "Cell update cause" upon the expiry of timer T305. |
| 6 | ← | | CELL UPDATE CONFIRM | Including IEs "new C-RNTI", "new U-RNTI" and IE "RRC State Indicator" is set to "CELL_FACH" |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | ← | | UTRAN MOBILITY INFORMATION | IE "T305" is set to Infinity. |
| 9 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 10 | | | | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.3.1.3a |
| 11 | → | | CELL UPDATE | IE "Cell update cause" shall be set to "cell reselection". |
| 12 | ← | | CELL UPDATE CONFIRM | |
| 12a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 13 | | | | SS waits for 60 minutes and checks that no CELL UPDATE message is transmitted on uplink PRACH channel. |
| 14 | ← | | UTRAN MOBILITY INFORMATION | IE "T305" is set to '5. |
| 15 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 16 | | | | SS applies the downlink transmission power settings, according to the values in columns "T0" of table 8.3.1.3a |
| 17 | → | | CELL UPDATE | IE "Cell update cause" shall be set to "cell reselection". |
| 18 | ← | | CELL UPDATE CONFIRM | |
| 18a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 19 | → | | CELL UPDATE | UE shall transmit this message with "cell update cause" set to "periodical cell updating" after T305 expires. |
| 20 | ← | | CELL UPDATE CONFIRM | |
| 21 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |
| 22 | ← | | CELL UPDATE | IE "Cell update cause" shall be set to "periodical cell updating" |

| | | | |
|---|---|---|---|
| 23 | → | CELL UPDATE CONFIRM | UE is in CELL_DCCH state at cell2 and specify the frequency info and UpPCH shifting position. |
| 24 | ← | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE transmit the message on DPCH channel . |
| 25 | ←→ | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 3(TDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Qrxlevmin | - 81dBm |
| Sintrasearch | 21db |
| Sintersearch | 21db |
| -v4b0NonCriticalExtensions | |
| -sysInfoType3-v4b0ext | |
| - mapping-LCR | 22 |

CELL UPDATE (Step 2 and 5)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI<br>- SRNC Identity<br>- S-RNTI<br>Cell Update Cause | <br>Check to see if set to '0000 0000 0001'<br>Check to see if set to '0000 0000 0000 0000 0001'<br>Check to see if set to 'periodical cell updating' |

CELL UPDATE (Step 11 and 17)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI<br>- SRNC Identity<br>- S-RNTI<br><br><br>Cell Update Cause | <br>Check to see if set to '0000 0000 0001'<br>Check to see if set to same bit string as in IE "S-RNTI" in IE "U-RNTI" of the CELL UPDATE CONFIRM message sent in step 6.<br>Check to see if set to "cell reselection" |

CELL UPDATE CONFIRM (Step 3 and 20)

Use the same message sub-type found in TS 34.108, clause 9.

CELL UPDATE CONFIRM (Step 6, 12 and 18)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | |
| - SRNC Identity | Set to '0000 0000 0001' |
| - S-RNTI | Set to an arbitrary string different from '0000 0000 0000 0000 0001' |
| New C-RNTI | '1010 1010 1010 1010' |

CELL UPDATE (Step 19)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to same bit string as in IE "S-RNTI" in IE "U-RNTI" of the CELL UPDATE CONFIRM message sent in step 6. |
| Cell Update Cause | Check to see if set to 'periodical cell updating' |

UTRAN MOBILITY INFORMATION (Step 8)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | Not Present |
| New C-RNTI | Not Present |
| UE Timers and constants in connected mode | |
| - T305 | infinity |

UTRAN MOBILITY INFORMATION (Step 14)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | Not Present |
| New C-RNTI | Not Present |
| UE Timers and constants in connected mode | |
| - T305 | 5 |

CELL UPDATE CONFIRM (Step23)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| PhysicalChannelReconfigurationn-r4-TDD128-add-ext-IEs | |
| PhysicalChannelReconfiguration -r4-TDD128-add-ext | |
| UpPCHpositionInfo | 22 |

### 8.3.1.3a.5 Test requirement

After step 1 the UE shall detect the expiry of timer T305 and then transmits a CELL UPDATE message setting value "periodical cell update" into IE "Cell update cause".

After step 3 the UE shall not send any uplink message as a response to CELL UPDATE CONFIRM message sent in step 3.

After step 4 the UE shall send a CELL UPDATE message, specifying the cell updating cause to be "periodical cell update".

After step 6 the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH.

After step 8, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 10, the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "cell reselection" on the uplink CCCH.

After step 12, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

Between step 12a and 14, the UE shall not transmit any CELL UPDATE message.

After step 14, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 16, the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "cell reselection" on the uplink CCCH.

After step 18, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 18a, the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "periodical cell update" on the uplink CCCH.

### 8.3.1.4 Cell Update: periodical cell update in CELL_PCH

#### 8.3.1.4.1 Definition

#### 8.3.1.4.2 Conformance requirement

UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

…

1> Re-entering service area:

…

1> RLC unrecoverable error:

…

1> Cell reselection:

…

1> Periodical cell update:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in CELL_FACH or CELL_PCH state; and

2> if the timer T305 expires; and

2> if the criteria for "in service area" as specified in TS 25.331 subclause 8.5.5.2 is fulfilled; and

2> if periodic updating has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity":

3> perform cell update using the cause "periodical cell update".

When the UE receives a UTRAN MOBILITY INFORMATION message, it shall:

1> act on received information elements as specified in TS 25.331 subclause 8.6;

1> if the IE "UE Timers and constants in connected mode" is present:

2> store the values of the IE "UE Timers and constants in connected mode" in the variable TIMERS_AND_CONSTANTS, replacing any previously stored value for each timer and constant; and

2> for each updated timer value:

3> start using the new value next time the timer is started;

2> for each updated constant value:

3> start using the new value directly;

1> set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION CONFIRM message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC;

…

Reference

3GPP TS 25.331 clause 8.3.1, 8.3.3.3.

### 8.3.1.4.3 Test purpose

1. To confirm that the UE, in CELL_PCH state, executes a cell update procedure after the expiry of timer T305.

### 8.3.1.4.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2 are active.

UE: CELL_PCH (state 6-12) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.4**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -69 | -69 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -69 | -69 | -60 |

Table 8.3.1.4 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE starts from CELL_PCH state. When the UE detects the expiry of periodic cell updating timer T305 according to the system information, the UE moves to CELL_FACH state. It shall transmit a CELL UPDATE message on the uplink CCCH and set the value "periodical cell update" into IE "Cell update cause". SS answers with a CELL UPDATE CONFIRM message on the downlink DCCH. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. SS transmits UTRAN MOBILITY INFORMATION message, which includes IE "T305" set to "infinity", to UE. UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.4, causing the UE to enter CELL_FACH state in cell 2 and transmit a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". Then SS shall transmit CELL UPDATE CONFIRM with IE "RRC state indicator" set to "CELL_PCH" on the downlink CCCH. Then UE shall enter CELL_PCH state. SS then monitors the uplink CCCH for a period of 60 minutes (ideally the SS should monitor this up to the maximum possible value for timer T305 (720 minutes), but for practical reasons 60 minutes (twice default timer of 30 minutes) is regarded as being sufficient) and verifies that no CELL_UPDATE message is received. SS then configures its downlink transmission power settings according to columns "T0" in table 8.3.1.4, causing the UE to enter CELL_FACH state in cell 1 and transmit a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". Then SS shall transmit CELL UPDATE CONFIRM on the downlink DCCH. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. Next, SS transmits UTRAN MOBILITY INFORMATION message, which includes IE "T305" set to "5", to UE. UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.4, causing the UE to enter CELL_FACH state in cell 2 and transmit a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". Then SS shall transmit CELL UPDATE CONFIRM with IE "RRC state indicator" set to "CELL_PCH" on the downlink CCCH. Then UE shall enter CELL_PCH state. After T305 expires, UE shall transmit CELL UPDATE message with IE "cell update cause" set to "periodical cell update". SS shall transmit CELL UPDATE CONFIRM message on the downlink CCCH to end the procedure.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_PCH state. SS waits until T305 has expired. Wait for CELL UPDATE message and then verify that the time of arrival of this message is in the range of T305 value +/- 10 % after it entered CELL_PCH state |
| 2 | → | | CELL UPDATE | The UE shall move to CELL_FACH state and transmits this message with the IE "Cell update cause" set to "periodical cell update". |
| 3 | ← | | CELL UPDATE CONFIRM | |
| 3a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 4 | ← | | UTRAN MOBILITY INFORMATION | IE "T305" is set to 'infinity'. |
| 5 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 6 | | | | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.3.1.4. |
| 7 | → | | CELL UPDATE | The UE shall move to CELL_FACH state and transmits this message with the IE "Cell update cause" set to "cell reselection". |
| 8 | ← | | CELL UPDATE CONFIRM | UE enters CELL_PCH state after receiving this message. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 9 | | | | SS waits for 60 minutes and checks that no CELL UPDATE message is transmitted on uplink PRACH channel. |
| 10 | | | | SS applies the downlink transmission power settings, according to the values in columns "T0" of table 8.3.1.4. |
| 11 | → | | CELL UPDATE | The UE shall move to CELL_FACH state and transmits this message with the IE "Cell update cause" set to "cell reselection". |
| 12 | ← | | CELL UPDATE CONFIRM | |
| 12a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 13 | ← | | UTRAN MOBILITY INFORMATION | IE "T305" is set to '5'. |
| 14 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 15 | | | | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.3.1.4. |
| 16 | → | | CELL UPDATE | The UE shall move to CELL_FACH state and transmits this message with the IE "Cell update cause" set to "cell reselection". |
| 17 | ← | | CELL UPDATE CONFIRM | UE enters CELL_PCH state after receiving this message. |
| 18 | | | | SS wait for T305 timer to expire |
| 19 | → | | CELL UPDATE | IE "Cell update cause" shall be set to "periodical cell update". |
| 20 | ← | | CELL UPDATE CONFIRM | |
| 21 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

CELL UPDATE (Step 2 and 19)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'periodical cell update' |

CELL UPDATE (Step 7, 11 and 16)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to "cell reselection" |

CELL UPDATE CONFIRM (Step 3 and 12)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

CELL UPDATE CONFIRM (Step 8, 17 and 20)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC state indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

UTRAN MOBILITY INFORMATION (Step 4 and 13)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | Not Present |
| New C-RNTI | Not Present |
| UE Timers and constants in connected mode | |
| - T305 | Set to 'infinity' in step 4 and '5' in step 13 |

#### 8.3.1.4.5 Test requirement

After step 1 the UE shall detect the expiry of timer T305, it shall then move to CELL_FACH state and transmits a CELL UPDATE message with the IE "Cell update cause" set to "periodical cell update".

After step 3, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 4, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 6, the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "cell reselection" on the uplink CCCH.

After step 8 and before step 10, the UE shall not transmit any CELL UPDATE messages.

After step 10, the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "cell reselection" on the uplink CCCH.

After step 12, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 13, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 15, the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "cell reselection" on the uplink CCCH.

After step 18 the UE shall transmit a CELL UPDATE message stating the cell update cause to be periodic updating.

## 8.3.1.5 Cell Update: UL data transmission in URA_PCH

### 8.3.1.5.1 Definition

### 8.3.1.5.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

2> if the UE is in URA_PCH or CELL_PCH state; and

2> if the UE has uplink RLC data PDU or uplink RLC control PDU on RB1 or upwards to transmit:

3> perform cell update using the cause "uplink data transmission".

…

Reference

3GPP TS 25.331 clause 8.3.1 and 8.1.2

### 8.3.1.5.3 Test purpose

1. To confirm that the UE executes a cell update procedure when the UE transmits uplink data if the UE is in URA_PCH state.

### 8.3.1.5.4 Method of test

Initial Condition

System Simulator: 1cell

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

The UE has been registered in both CS and PS domains.

Test Procedure

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message with IE "RRC State Indicator" set to "URA_PCH". The UE shall reply with PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and move to URA_PCH state. The SS transmits a PAGING TYPE 1 message which includes a matched U-RNTI and the optional IE "CN originated page to connected mode UE". The UE then moves to CELL_FACH state and transmits a CELL UPDATE message to the SS on the uplink CCCH, with the IE "Cell update cause" set to value "uplink data transmission". After receiving such a message, SS transmits CELL UPDATE CONFIRM message on downlink DCCH. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. The UE shall stay in CELL_FACH state and transmit an INITIAL DIRECT TRANSFER message using AM RLC on DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_FACH state. |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "RRC State Indicator" set to "URA_PCH" |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE moves to URA_PCH state. |
| 5a | ← | | PAGING TYPE 1 | Includes Matched identifier and optional IE “CN originated page to connected mode UE" |
| 6 | → | | CELL UPDATE | The UE shall move to CELL FACH state with the message set to "uplink data transmission" in IE "Cell update cause". |
| 7 | ← | | CELL UPDATE CONFIRM | See message content. |
| 7a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | → | | INITIAL DIRECT TRANSFER | Response to the paging message sent in step 5a |
| 9 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the same message sub-type found in TS 34.108 clause 9, which is entitled "Packet to CELL_FACH from CELL_FACH in PS", with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator<br>URA identity<br>UTRAN DRX cycle length coefficient | URA_PCH<br>0000 0000 0000 0001B<br>3 |

PAGING TYPE 1 (Step 5a)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to the previously assigned SRNC identity |
| - S-RNTI | Set to previously assigned S-RNTI |
| - CN originated page to connected mode UE | |
| -Paging cause | Terminating Call supported by the UE in the CS domain |
| -CN domain identity | CS Domain |
| -Paging record type identifier | Set to "IMSI (GSM-MAP)" for UEs supporting GSM-MAP core network type or "IMSI (DS-41)" for UEs supporting ANSI-41 core network type. |
| BCCH modification info | Not Present |

CELL UPDATE (Step 6)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'uplink data transmission' |

CELL UPDATE CONFIRM (Step 7)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Set to an arbitrary string different from '1010 1010 1010 1010' |

INITIAL DIRECT TRANSFER (Step 8) – for UEs supporting GSM-MAP core networks

Check to see if the same message type found in TS 34.108 clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CN domain identity | CS domain |
| Intra Domain NAS Node Selector | |
| - CHOICE version | R99 |
| -- CHOICE CN type | GSM |
| --- CHOICE Routing basis | Local(P)TMSI |
| ---- Routing parameter | This bit string is set to bits b14 through b23 of the TMSI. The TMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant<br>The "Routing parameter" bit string consists of bits b14 through b23 of the TMSI.<br>The first/ leftmost/ most significant bit of the bit string contains bit b23 of the TMSI |
| --- Entered parameter | Not checked |
| NAS message | Not checked |

INITIAL DIRECT TRANSFER (Step 8) – for UEs supporting ANSI-41 core networks

| Information Element | Value/remark |
|---|---|
| CN domain identity | CS Domain |
| Intra Domain NAS Node Selector | |
| - CHOICE version | ANSI-41 : Bitstring(14), all bits set to 0 |
| NAS message | Not checked |
| START | Not checked |
| Measured results on RACH | Not checked |

### 8.3.1.5.5 Test requirement

After step 4, UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and move to URA_PCH state.

After step 5a, the UE shall move to CELL_FACH state to initiate a cell update procedure and transmits a CELL UPDATE message which is set to "uplink data transmission" in IE "Cell update cause".

After step 7, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 7a, UE shall transmit INITIAL DIRECT TRANSFER message to SS using AM RLC on DCCH.

## 8.3.1.6 Cell Update: UL data transmission in CELL_PCH

### 8.3.1.6.1 Definition

### 8.3.1.6.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

2> if the UE is in URA_PCH or CELL_PCH state; and

2> if the UE has uplink RLC data PDU or uplink RLC control PDU on RB1 or upwards to transmit:

3> perform cell update using the cause "uplink data transmission".

…

Reference

3GPP TS 25.331 clause 8.3.1 and 8.1.2

### 8.3.1.6.3 Test purpose

1. To confirm that the UE executes a cell update procedure when the UE transmits uplink data if the UE is in CELL_PCH state.

### 8.3.1.6.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

The UE is registered in both CS and PS domains.

Test Procedure

The UE is in the CELL_FACH state. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message with IE "RRC State Indicator" set to "CELL_PCH". The UE shall reply with PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and move to CELL_PCH state. The SS transmits a PAGING TYPE 1 message which includes a matched U-RNTI and the optional IE "CN originated page to connected mode UE". The UE then moves to CELL_FACH state and transmits a CELL UPDATE message to the SS on the uplink CCCH, with the IE "Cell update cause" set to value "uplink data transmission". After receiving such a message, SS transmits a CELL UPDATE CONFIRM message on downlink DCCH. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. The UE shall stay in CELL_FACH state and transmit an INITIAL DIRECT TRANSFER message using AM RLC on DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_FACH state. |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "RRC State Indicator" set to "CELL_PCH" |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE moves to CELL_PCH state. |
| 5a | ← | | PAGING TYPE 1 | Includes Matched identifier and optional IE “CN originated page to connected mode UE" |
| 6 | → | | CELL UPDATE | The UE moves to CELL FACH state and transmit this message which is set to "uplink data transmission" in IE "Cell update cause". |
| 7 | ← | | CELL UPDATE CONFIRM | See message content . |
| 7a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | → | | INITIAL DIRECT TRANSFER | Response to the paging message sent in step 5a |
| 9 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the same message sub-type found in TS 34.108 clause 9, which is entitled "Packet to CELL_FACH from CELL_FACH in PS", with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator<br>UTRAN DRX cycle length coefficient | CELL_PCH<br>3 |

PAGING TYPE 1 (Step 5a)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to the previously assigned SRNC identity |
| - S-RNTI | Set to previously assigned S-RNTI |
| - CN originated page to connected mode UE | |
| -Paging cause | Terminating Call supported by the UE in the CS domain |
| -CN domain identity | CS Domain |
| -Paging record type identifier | Set to "IMSI (GSM-MAP)" for UEs supporting GSM-MAP core network type or "IMSI (DS-41)" for UEs supporting ANSI-41 core network type. |
| BCCH modification info | Not Present |

CELL UPDATE (Step 6)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'uplink data transmission' |

CELL UPDATE CONFIRM (Step 7)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Set to an arbitrary string different from '1010 1010 1010 1010' |

INITIAL DIRECT TRANSFER (Step 8) – for UEs supporting GSM-MAP core networks

Check to see if the same message type found in TS 34.108 clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CN domain identity | CS domain |
| Intra Domain NAS Node Selector | |
| - CHOICE version | R99 |
| -- CHOICE CN type | GSM |
| --- CHOICE Routing basis | Local(P)TMSI |
| ---- Routing parameter | This bit string is set to bits b14 through b23 of the TMSI. The TMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant<br>The "Routing parameter" bit string consists of bits b14 through b23 of the TMSI.<br>The first/ leftmost/ most significant bit of the bit string contains bit b23 of the TMSI |
| --- Entered parameter | Not checked |
| NAS message | Not checked |

INITIAL DIRECT TRANSFER (Step 8) – for UEs supporting ANSI-41 core networks

| Information Element | Value/remark |
|---|---|
| CN domain identity | CS Domain |
| Intra Domain NAS Node Selector | |
| - CHOICE version | ANSI-41 : Bitstring(14), all bits set to 0 |
| NAS message | Not checked |
| START | Not checked |
| Measured results on RACH | Not checked |

8.3.1.6.5 Test requirement

After step 4, UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and move to CELL_PCH state.

After step 5, the UE shall move to CELL_FACH state to initiate a cell update procedure and transmits a CELL UPDATE message which is set to "uplink data transmission" in IE "Cell update cause".

After step 7, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 7a, UE shall transmit a INITIAL DIRECT TRANSFER message to SS using AM RLC on DCCH.

### 8.3.1.7 Void

### 8.3.1.8 Void

### 8.3.1.9 Cell Update: re-entering of service area after T305 expiry and being out of service area

#### 8.3.1.9.1 Definition

#### 8.3.1.9.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

…

1> Re-entering service area:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in CELL_FACH or CELL_PCH state; and

2> if the UE has been out of service area and re-enters service area before T307 or T317 expires:

3> perform cell update using the cause "re-entering service area".

…

When the T305 expires and the UE detects that it is "out of service area" as specified in TS 25.331 subclause 8.5.5.1, the UE shall

1> start timer T307;

…

If the UE detects "in service area" according to TS 25.331 subclause 8.5.5.2 and timer T307 or T317 is running, the UE shall:

1> check the value of V302; and

1> if V302 is equal to or smaller than N302:

2> in case of a cell update procedure:

3> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

3> submit the CELL UPDATE message for transmission on the uplink CCCH.

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302:

…

Reference

3GPP TS 25.331 clause 8.3.1

8.3.1.9.3 Test purpose

1. To confirm that the UE performs a cell search after experiencing an "out of service area" condition.
2. To confirm that the UE initiates cell updating procedure if it manages to re-enter the service area.

8.3.1.9.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108, using the specific message contents as specified below.

Specific Message Contents

SYSTEM INFORMATION BLOCK TYPE 1

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| T305 | 5 minutes |
| T307 | 50 seconds |
| T317 | 600 seconds |

Specific timer tolerances

Use the same timer tolerances found in subclause 4.2.3 of TS 34.108, with the following exceptions.

T305: +/- 10 s

T307: +/- 2 s

Test Procedure

**Table 8.3.1.9**

| Parameter | Unit | Cell 1 | |
|---|---|---|---|
| | | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -80 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -80 |

Table 8.3.1.9 illustrates the downlink power to be applied at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in the CELL_FACH state. The content of the SYSTEM INFORMATION BLOCK TYPE 3 and 4 is modified. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.9 so that S<0. The UE shall detect that it is out of service area. Following the expiry of periodic cell updating timer T305 according to the system information, and within the time interval equivalent to T307 timer value, SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.9 so that S>0. The UE shall find that it is back in service area, and transmit a CELL UPDATE message to the SS on the uplink CCCH. In this message, the IE "Cell update cause" shall be set to "re-entered service area". After the SS receives this message, it transmits a CELL UPDATE CONFIRM message with the IE "RRC State Indicator" set "CELL_PCH" on the downlink DCCH. The UE shall enter CELL_PCH state. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.9 so that S<0. Following the expiry of periodic cell updating timer T305 according to the system information, the UE shall detect that it is out of service area. Within the time interval equivalent to T307 timer value, SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.9 so that S>0. The UE shall find that it is back in service area, move to CELL_FACH and transmits a CELL UPDATE message to the SS on the uplink CCCH. In this message, the IE "Cell update cause" shall be set to "re-entered service area". After the SS receives this message, it transmits a CELL UPDATE CONFIRM message on the downlink DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_FACH state of cell 1. |
| 1a | ← | | MASTER INFORMATION BLOCK<br>SYSTEM INFORMATION BLOCK TYPE 3 and 4 | SS changes the contents of MASTER INFORMATION BLOCK and SYSTEM INFORMATION BLOCK (see specific message contents). |
| 1b | ← | | SYSTEM INFORMATION CHANGE INDICATION | |
| 2 | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.9 so that its S value falls below 0. |
| 3 | | | | The UE shall detect an "out of service" condition and it shall search for other cells to camp on. Upon expiry of timer T305, UE starts T307 timer.. |
| 4 | | | | SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.9. |
| 5 | → | | CELL UPDATE | The value "re-entered service area" shall be found in IE "Cell update cause" in this message |
| 6 | ← | | CELL UPDATE CONFIRM | "RRC State Indicator" is set to "CELL_PCH" |
| 7 | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.9 so that its S value falls below 0 and waits 5 minutes and 20 seconds until T305 has expired. |
| 8 | | | | SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.9. |
| 9 | → | | CELL UPDATE | UE shall move to CELL_FACH. It shall transmit this message with cell update cause set to "re-entered service area" |
| 10 | ← | | CELL UPDATE CONFIRM | |

| | | | |
|---|---|---|---|
| 11 | ←→ | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

MASTER INFORMATION BLOCK (Step 1a)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value. |
| SIB 3 Cell Value tag | Set to (Current SIB3 value tag + 1) |
| SIB 4 Cell Value tag | Set to (Current SIB4 value tag + 1) |

SYSTEM INFORMATION BLOCK TYPE 3 and 4 (Step 1a)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Qrxlevmin | -35 (-69 dBm) |

SYSTEM INFORMATION CHANGE INDICATION (Step 1b)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| BCCH modification info | |
| MIB Value tag | Set equal to Value tag sent in modified MIB in step 1a. |

CELL UPDATE (Step 5 and 9)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 're-entered service area' |

CELL UPDATE CONFIRM (Step 6 and 10)

Use the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

### 8.3.1.9.5 Test requirement

After step 4 the UE shall transmit a CELL UPDATE message in which the IE "Cell update cause" is set to the value "re-entered service area".

After step 8 the UE shall move to CELL_FACH and then transmit a CELL UPDATE message, with the IE "Cell Update Cause" set to "re-entered service area".

## 8.3.1.10 Cell Update: expiry of T307 after T305 expiry and being out of service area

### 8.3.1.10.1 Definition

### 8.3.1.10.2 Conformance requirement

When the T307 expires, the UE shall:

1> move to idle mode;

1> release all dedicated resources;

1> perform other actions when entering idle mode from connected mode as specified in TS 25.331 subclause 8.5.2;

1> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.1

### 8.3.1.10.3 Test purpose

1 To confirm that the UE moves to idle mode after the expiry of T307, indicating that it is out of service area when attempting to perform a periodic cell updating procedure.

### 8.3.1.10.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Timer T305 is set to 5min.

Test Procedure

**Table 8.3.1.10**

| Parameter | Unit | Cell 1 | |
|---|---|---|---|
| | | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -80 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -80 |

Table 8.3.1.10 illustrates the downlink power to be applied at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in CELL_FACH state at the start of the test. Before the expiry of periodic cell updating timer T305, the content of the SYSTEM INFORMATION BLOCK TYPE 3 and 4 is modified. After T305 expires, UE shall transmit CELL UPDATE message with IE "cell update cause" set to "periodical cell update". SS shall transmit CELL UPDATE CONFIRM message. Now the UE and SS are synchronized. Immediately after the cell update procedure is finalized, the SS starts a delay timer $T_{delay}$ (see below for limits on the timer value). When $T_{delay}$ expires the SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.10 so that S<0 and this results in a "out of service area" condition. The SS continues to listen to the uplink channel to detect possible attempts to perform a cell updating procedure. The UE shall not send any CELL UPDATE message on the uplink CCCH, instead it triggers timer T307 after expiry of T305. After the expiry of timer T305+T307+10% margin since completion of the cell update procedure, SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.10 so that S>0, the UE shall enter idle state. SS waits for 60s and then calls for generic procedure C.1 to check that UE is in idle mode state.

NOTE 1: The value chosen for Tdelay should be midway between the following logical minimum and maximum values:

Minimum > T305 + T307 – T317

Maximum < T305

NOTE 2: TS 25.331 (from June 2003) specifies that the UE should treat any value of T317 received from UTRAN as though it is equal to infinity. Nevertheless, the value of T317 used in Note 1 should be the value broadcast in SIB1 by the SS (or the implied default value if none is broadcast).

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_FACH state. |
| 1a | ← | | MASTER INFORMATION BLOCK<br>SYSTEM INFORMATION BLOCK TYPE 3 and 4 | SS changes the contents of MASTER INFORMATION BLOCK and SYSTEM INFORMATION BLOCK (see specific message contents). |
| 1b | ← | | SYSTEM INFORMATION CHANGE INDICATION | |
| 1c | → | | CELL UPDATE | IE "Cell update cause" shall be set to "periodical cell update". |
| 1d | ← | | CELL UPDATE CONFIRM | |
| 1e | | | | SS waits $T_{delay}$ (see above) |
| 2a | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.10 so that the cell is no longer suitable for camping. The UE shall detect that it is out of service area and refrains from transmitting CELL UPDATE message due to periodic cell updating. |
| 2b | | | | SS waits a further (T305+T307- $T_{delay}$) +10% for UE to enter idle mode. |
| 3 | | | | The UE detects the expiry of timer T305 and it searches for other cells to camp on. After the expiry of timer T307, the UE shall enter idle mode. SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.10 so that the cell is suitable for camping. SS waits for 60s. |
| 4 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in idle mode state, the test passes, otherwise it fails. |

Specific Message Contents

MASTER INFORMATION BLOCK (Step 1a)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value. |
| SIB 3 Cell Value tag | Set to (Current SIB3 value tag + 1) |
| SIB 4 Cell Value tag | Set to (Current SIB4 value tag + 1) |

SYSTEM INFORMATION BLOCK TYPE 3 and 4 (Step 1a)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Qrxlevmin | -35 (-69 dBm) |

SYSTEM INFORMATION CHANGE INDICATION (Step 1b)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| BCCH modification info | |
| MIB Value tag | Set equal to Value tag sent in modified MIB in step 1a. |

CELL UPDATE (Step 1c)

The same message found in Annex A shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'periodical cell updating' |

#### 8.3.1.10.5 Test requirement

After step 3 the UE shall move to idle mode.

### 8.3.1.11 Cell Update: Success after T302 time-out

#### 8.3.1.11.1 Definition

#### 8.3.1.11.2 Conformance requirement

If any or several of the following conditions are true:

- expiry of timer T302;

…

the UE shall:

1> check whether it is still in "in service area";

1> in case of a cell update procedure:

2> clear any entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS.

If the UE detects "in service area" if it has not entered idle mode, and:

1> if V302 is equal to or smaller than N302, the UE shall:

2> in case of a cell update procedure:

3> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

3> submit the CELL UPDATE message for transmission on the uplink CCCH.

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302, the UE shall:

…

Reference

3GPP TS 25.331 clause 8.3.1

#### 8.3.1.11.3 Test purpose

1. To confirm that the UE repeats the transmission of CELL UPDATE message after failing to receive any response from the SS before T302 timer expires.

#### 8.3.1.11.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Test Procedure

At the start of the test, the UE is brought to CELL_FACH state. When the UE detects the expiry of periodic cell updating timer T305 according to the system information, the UE transmits a CELL UPDATE message to the SS on the uplink CCCH. The IE "Cell update cause" in this message shall be set to "periodical cell update". SS ignores this message, and the UE shall then re-transmit a CELL UPDATE message after the expiry of timer T302. When the SS has received (N302+1) such messages, it transmits a CELL UPDATE CONFIRM message with new values for "C-RNTI" to the UE. Finally, the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE starts from CELL_FACH state. SS initializes its internal counter K to 0 and waits until the expiry of T305 timer. |
| 2 | → | | CELL UPDATE | The value "periodical cell update" shall be set in IE "Cell update cause". |
| 3 | | | | If K is equal to N302 then proceeds to step 5. |
| 4 | | | | SS increments counter K, transmits no response to the UE and waits for an additional period equal to the value of timer T302. The next step is step 2. |
| 5 | ← | | CELL UPDATE CONFIRM | The message includes IEs "new C-RNTI". The IE "RRC State Indicator" is set to "CELL_FACH". |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 7 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

CELL UPDATE (Step 2)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Periodic cell updating' |

CELL UPDATE CONFIRM (Step 5)

Use the same message sub-type found in TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Set to an arbitrary string different from '1010 1010 1010 1010' |

#### 8.3.1.11.5 Test requirement

After step 1 the UE shall detect the expiry of timer T305 then transmit a CELL UPDATE message on the uplink CCCH, setting "periodical cell update" into IE "Cell update cause".

After step 2 the UE shall re-transmits a CELL UPDATE message after the expiry of timer T302. A total of (N302+1) transmissions of CELL UPDATE message shall be detected in SS.

After step 5 the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH and stay at CELL_FACH state.

### 8.3.1.12 Cell Update: Failure (After Maximum Re-transmissions)

#### 8.3.1.12.1 Definition

#### 8.3.1.12.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

…

1> Periodical cell update:

…

2> if the UE is in CELL_FACH or CELL_PCH state; and

2> if the timer T305 expires; and

2> if the criteria for "in service area" as specified in subclause 8.5.5.2 in TS 25.331 is fulfilled; and

2> if periodic updating has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity":

3> perform cell update using the cause "periodical cell update".

…

In case of cell update procedure the UE shall transmit a CELL UPDATE message.

…

The UE shall set the IEs in the CELL UPDATE message as follows:

1> set the IE "Cell update cause" corresponding to the cause specified in subclause 8.3.1.2 in TS 25.331 that is valid when the CELL UPDATE message is submitted to lower layers for transmission;

…

If any or several of the following conditions are true:

- expiry of timer T302;

…

the UE shall:

1> stop T302 if it is running;

…

1> check whether it is still in "in service area" (see subclause 8.5.5.2) in TS 25.331;

…

1> in case of a cell update procedure:

2> clear any entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS.

…

If the UE detects "in service area" if it has not entered idle mode, and:

1> if V302 is equal to or smaller than N302, the UE shall:

…

1> if V302 is greater than N302, the UE shall:

…

2> in case of a cell update procedure:

3> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS.

…

2> release all its radio resources;

2> enter idle mode;

2> other actions the UE shall perform when entering idle mode from connected mode are specified in TS 25.331subclause 8.5.2;

2> and the procedure ends.

### Reference

3GPP TS 25.331 clause 8.3.1.2, 8.3.1.3, 8.3.1.1.2.

### 8.3.1.12.3 Test purpose

1. To confirm that the UE repeats the cell update procedure upon the expiry of timer T302 and moves to idle state when its internal counter V302 is greater than N302.

### 8.3.1.12.4 Method of test

#### Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_FACH (state 6-11)as specified in clause 7.4 of TS 34.108.

#### Test Procedure

The UE is initially in CELL_FACH state. When the UE detects the expiry of periodic cell updating timer T305, the UE transmits a CELL UPDATE message to the SS on the uplink CCCH to perform a periodic cell updating procedure. The

SS ignores this message, and the UE shall attempt to re-transmit a CELL UPDATE message up to a maximum of (N302) times after the expiry of timer T302. After (N302) attempts of retransmission, the UE shall return to idle state. SS waits for 5s and then calls for generic procedure C.1 to check that UE is in idle mode state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_FACH state. SS sets its internal counter K=0 and waits for a period equals to timer value T305. |
| 2 | → | | CELL UPDATE | The value "periodical cell update" shall be set in IE "Cell update cause". |
| 3 | | | | SS transmits no response to the UE and increments counter K with 1. |
| 4 | | | | SS waits for an additional period equal to T302 timer and if K is not greater than N302, then next step is step 2. Else the next step is step 5. |
| 5 | | | | The UE shall enter idle mode state. |
| 6 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in idle mode state, the test passes, otherwise it fails. |

Specific Message Contents

CELL UPDATE (Step 2)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Periodical cell update' |

#### 8.3.1.12.5 Test requirement

After step 1 the UE shall transmit a CELL UPDATE message on the uplink CCCH and set value "periodical cell update" into IE "Cell update cause".

After step 3 and if K is not greater than N302, the UE shall retry to transmit a CELL UPDATE message.

After step 3 and if K is greater than N302, the UE shall stop transmitting CELL UPDATE message and then enters idle state.

### 8.3.1.13 Cell Update: Reception of Invalid CELL UPDATE CONFIRM Message

#### 8.3.1.13.1 Definition

#### 8.3.1.13.2 Conformance Requirement

If the UE receives an CELL UPDATE CONFIRM message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows:

1> If V302 is equal to or smaller than N302, the UE shall:

2> set the variable PROTOCOL_ERROR_INDICATOR to TRUE;

2> in case of a cell update procedure:

3> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

3> submit the CELL UPDATE message for transmission on the uplink CCCH.

…

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302, the UE shall:

…

2> release all its radio resources;

2> enter idle mode;

2> Other actions the UE shall perform when entering idle mode from connected mode are specified in TS 25.331 subclause 8.5.2;

2> the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.1.11.

### 8.3.1.13.3 Test Purpose

1. To confirm that the UE retransmits a CELL UPDATE message when it receives an invalid CELL UPDATE CONFIRM message, before the number of retransmissions has reached the maximum allowed value.

### 8.3.1.13.4 Method of Test

Initial Condition

System Simulator: 1 cell

UE: CELL_PCH (state 6-12) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is brought to CELL_PCH state at the beginning of the test. SS pages the UE by sending a PAGING TYPE 1 message using the U-RNTI identity assigned during RRC connection establishment procedure. The UE shall transmit a CELL UPDATE message on the uplink CCCH. Upon receiving such a message, the SS replies with an invalid CELL UPDATE CONFIRM messageon downlink DCCH using UM RLC. The UE shall detect the protocol error and re-transmit a CELL UPDATE message up to a maximum of N302 times. SS then transmit a valid CELL UPDATE CONFIRM message. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE 1 | The UE is in the CELL_PCH state. SS pages for the UE using the allocated connected mode identity (U-RNTI). |
| 2 | → | | CELL UPDATE | Check that the value "paging response" is set in IE "Cell update cause". |
| 3 | ← | | CELL UPDATE CONFIRM | See specific message content. |
| 4 | → | | CELL UPDATE | Check that the value "paging response" is set in IE "Cell update cause", the value "protocol error" is set in IE "failure cause" and the value "Message extension not comprehended" is set in IE "Protocol error information". |
| 5 | ← | | CELL UPDATE CONFIRM | See message content. |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Content

CELL UPDATE (Step 2)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Paging Response' |

CELL UPDATE CONFIRM (Step 3)

Use the CELL UPDATE CONFIRM message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

CELL UPDATE (Step 4)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Paging Response' |
| Failure cause | Check to see if it is set to 'protocol error' |
| -Protocol error information | Check to see if it is set to "Message extension not comprehended" |

PAGING TYPE 1 (Step 1)

Use the same message sub-type titled "TM (Packet in PS)" in default message content of TS 34.108 with following exceptions:

| Information Element | Value/remark |
|---|---|
| Page record list<br>- Paging record<br>- CHOICE Used paging identity<br>- U-RNTI<br>- SRNC Identity<br>- S-RNTI | <br><br>UTRAN identity<br><br>'0000 0000 0001'<br>'0000 0000 0000 0000 0001' |

CELL UPDATE CONFIRM (Step 5)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

#### 8.3.1.13.5 Test Requirement

After step 1 the UE shall transmit a CELL UPDATE message on the uplink CCCH, setting "paging response" into IE "Cell update cause".

After step 3 the UE shall transmit a CELL UPDATE message on the uplink CCCH, setting "paging response" into IE "Cell update cause", "protocol error" into IE "failure cause" and "Message extension not comprehended" into IE "Protocol error information".

After step 5, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

### 8.3.1.14 Cell Update: Incompatible simultaneous reconfiguration

#### 8.3.1.14.1 Definition

#### 8.3.1.14.2 Conformance Requirement

In case of a cell update procedure and if the received CELL UPDATE CONFIRM message

- includes "RB information elements"; and/or
- includes "Transport channel information elements"; and/or
- includes "Physical channel information elements"; and
- the variable ORDERED_RECONFIGURATION is set to TRUE because of an ongoing Reconfiguration procedure; and/or
- if the variable INCOMPATIBLE_SECURITY_RECONFIGURATION becomes set to TRUE of the received CELL UPDATE CONFIRM message:

the UE shall:

1> if V302 is equal to or smaller than N302:

2> if, caused by the received CELL UPDATE CONFIRM message

…

3> if the variable ORDERED_RECONFIGURATION is set to TRUE caused by the received CELL UPDATE CONFIRM message in case of a cell update procedure:

4> set the variable ORDERED_RECONFIGURATION to FALSE.

2> set the variable FAILURE_INDICATOR to TRUE;

2> set the variable FAILURE_CAUSE to "Incompatible simultaneous reconfiguration";

2> set the content of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the CELL UPDATE message for transmission on the uplink CCCH;

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302:

…

Reference

3GPP TS 25.331 clause 8.3.1.9a

### 8.3.1.14.3 Test Purpose

1. To confirm that the UE retransmits a CELL UPDATE message when it receives a CELL UPDATE CONFIRM message that includes "Physical channel information elements" and UE's variable ORDERED_RECONFIGURATION is set to TRUE because of an ongoing Reconfiguration procedure, before the number of retransmissions has reached the maximum allowed value.

### 8.3.1.14.4 Method of Test

Initial Condition

System Simulator: 1 cell

UE: CELL_PCH (state 6-12) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is brought to CELL_PCH state at the beginning of the test. SS pages the UE by sending a PAGING TYPE 1 message using the U-RNTI identity assigned during RRC connection establishment procedure. The UE shall transmit a CELL UPDATE message on the uplink CCCH. Upon receiving such a message, the SS replies with a CELL UPDATE CONFIRM message contains IE "Physical channel information elements". Following that, SS immediately transmits another CELL UPDATE CONFIRM message contains IE "Physical channel information elements" before the "activation time" indicated in the previous CELL UPDATE CONFIRM message expires. The UE shall re-transmit a CELL UPDATE message with the same cause as the previous CELL UPDATE message and failure cause as "Incompatible simultaneous reconfiguration". SS then transmits a CELL UPDATE CONFIRM message to end the procedure.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE 1 | |
| 2 | → | | CELL UPDATE | |
| 3 | ← | | CELL UPDATE CONFIRM | SS transmits this message including IE "Physical channel information elements". |
| 4 | ← | | CELL UPDATE CONFIRM | Sent before the activation time specified in the message in step 3 has elapsed. |
| 5 | → | | CELL UPDATE | |
| 6 | ← | | CELL UPDATE CONFIRM | |

Specific Message Content

CELL UPDATE (Step 2)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Paging Response' |

CELL UPDATE (Step 5)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Paging Response' |
| Failure cause | Check to see if set to 'Incompatible simultaneous reconfiguration' |

CELL UPDATE CONFIRM (Step 3)

Use the same message sub-type found in TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Activation Time Info | Current CFN-[current CFN mod 8 + 8 ] |
| Maximum allowed UL TX power | 30 dBm |

CELL UPDATE CONFIRM (Step 4)

Use the same message sub-type found in TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| Activation Time Info | Current CFN-[current CFN mod 8 + 8 ] |
| Maximum allowed UL TX power | 25 dBm |

PAGING TYPE 1 (Step 1)

Use the same message sub-type titled "TM (Packet in PS)" in default message content of TS 34.108 with following exceptions:

| Information Element | Value/remark |
|---|---|
| Page record list | |
| - Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | '0000 0000 0001' |
| - S-RNTI | '0000 0000 0000 0000 0001' |

#### 8.3.1.14.5 Test Requirement

After step 1, UE shall transmit a CELL UPDATE message.

After step 4 the UE shall re-transmit a CELL UPDATE message with failure cause set to "Incompatible simultaneous reconfiguration".

### 8.3.1.15 Cell Update: Unrecoverable error in Acknowledged Mode RLC SRB

#### 8.3.1.15.1 Definition

#### 8.3.1.15.2 Conformance Requirement

A UE shall initiate the cell update procedure in the following cases:

…

1> RLC unrecoverable error:

…

2> if the UE detects RLC unrecoverable error in an AM RLC entity:

3> perform cell update using the cause "RLC unrecoverable error".

…

In case of cell update procedure the UE shall transmit a CELL UPDATE message.

…

The UE shall set the IEs in the CELL UPDATE message as follows:

…

1> if an unrecoverable error in any of the AM RLC entities for the signalling radio bearers RB2, RB3 or RB4 is detected:

2> set the IE "AM_RLC error indication (RB2, RB3 or RB4)" to TRUE.

1> otherwise:

2> set the IE "AM_RLC error indication (RB2, RB3 or RB4)" to FALSE.

…

When the UTRAN receives a CELL UPDATE/URA UPDATE message, the UTRAN should:

…

1> initiate an RRC connection release procedure (see subclause 8.1.4 in TS 25.331) by transmitting an RRC CONNECTION RELEASE message on the downlink CCCH. In particular UTRAN should:

2> if the CELL UPDATE message was sent because of an unrecoverable error in RB2, RB3 or RB4:

3> initiate an RRC connection release procedure by transmitting an RRC CONNECTION RELEASE message on the downlink CCCH.

### Reference

3GPP TS 25.331 clause 8.3.1.2, 8.3.1.3, 8.3.1.5

### 8.3.1.15.3 Test Purpose

- To confirm that the UE reports the occurrence of an unrecoverable error in a C-plane AM RLC entity by initiating cell update procedure.
- To confirm that UE enters idle mode state after receiving RRC CONNECTION RELEASE message on the downlink CCCH.

### 8.3.1.15.4 Method of Test

#### Initial Condition

System Simulator: 1 cell

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE

The RRC CONNECTION SETUP message used in the initial setup should be as shown under Specific Message Contents below.

Test Procedure

The UE is initially in CELL_DCH state. SS sends a UE CAPABILITY ENQUIRY message on the DCCH using AM mode. The UE shall reply with a UE CAPABILITY INFORMATION message, sent using AM RLC on the DCCH.

SS does not acknowledge the AM PDUs carrying this message. The UE shall continue to re-transmit the AM PDU carrying UE CAPABILITY INFORMATION message until the maximum re-transmission count is reached.

Thereafter, the UE shall start sending RESET PDUs to request that the AM RLC entity for RRC signalling be re-initialized. SS ignores all RESET PDUs from the UE.

At this point, the UE shall initiate a cell update procedure by transmitting a CELL UPDATE message on the uplink CCCH. The CELL UPDATE message shall specify the value "TRUE" in IE "AM_RLC error indicator (RB2, RB3 or RB4)" and "RLC unrecoverable error" as the cell update cause.

SS sends RRC CONNECTION RELEASE message on the downlink CCCH to UE. SS waits for 5 s and then calls for generic procedure C.1 to check that UE is in idle mode state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is initially in CELL_DCH state. |
| 2 | ← | | UE CAPABILITY ENQUIRY | |
| 3 | → | | UE CAPABILITY INFORMATION | SS does not acknowledge any of the AM PDUs carrying the UE CAPABILITY INFORMATION message. The UE shall re-transmit these AM PDUs until the maximum number has been reached. |
| 4 | | | | UE shall start to transmit a RESET PDU. SS does not respond to any RESET PDU frames originated from the UE. |
| 5 | → | | CELL UPDATE | IE "AM_RLC Error Indication (RB2, RB3 or RB4)" shall be set to 'TRUE' |
| 6 | ← | | RRC CONNECTION RELEASE | Sends this message on the downlink CCCH and includes UE's UTRAN identity. After SS sent this message, SS waits for 5s. |
| 7 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in idle mode state, the test passes, otherwise it fails. |

Specific Message Contents

RRC CONNECTION SETUP (message used in the initial setup)

Use the same message type found in clause 9 of TS 34.108 with the following exception:

| Information Element | Value/remark |
|---|---|
| Signalling RB information to setup | (UM DCCH for RRC) |
| - RB identity | Not Present |
| - CHOICE RLC info type | |
| - RLC info | |
| - CHOICE Uplink RLC mode | UM RLC |
| - Transmission RLC discard | Not Present |
| - CHOICE Downlink RLC mode | UM RLC |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 5 |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to TS34.108 clause 6.10.2.4.1.3 (standalone 13.6 kbps signalling radio bearer) |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| Signalling RB information to setup | (AM DCCH for RRC) |
| - RB identity | Not Present |
| - CHOICE RLC info type | |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 4 |
| - Transmission window size | 32 |
| - Timer_RST | 500 |
| - Max_RST | 1 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 32 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |

| Information Element | Value/remark |
|---|---|
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 5 |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Configure |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to TS34.108 clause 6.10.2.4.1.3 (standalone 13.6 kbps signalling radio bearer) |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| Signalling RB information to setup | (AM DCCH for NAS_DT High priority) |
| - RB identity | Not Present |
| - CHOICE RLC info type | |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 4 |
| - Transmission window size | 32 |
| - Timer_RST | 500 |
| - Max_RST | 1 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 32 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 5 |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |

| Information Element | Value/remark |
|---|---|
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to TS34.108 clause 6.10.2.4.1.3 (standalone 13.6 kbps signalling radio bearer) |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| Signalling RB information to setup | (AM DCCH for NAS_DT Low priority) |
| - RB identity | Not Present |
| - CHOICE RLC info type | |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 4 |
| - Transmission window size | 32 |
| - Timer_RST | 500 |
| - Max_RST | 1 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 32 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 5 |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |

| Information Element | Value/remark |
|---|---|
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to TS34.108 clause 6.10.2.4.1.3 (standalone 13.6 kbps signalling radio bearer) |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |

UE CAPABILITY ENQUIRY (Step 2)

Use the same message found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 3)

Only the message type IE is checked for this message.

CELL UPDATE (Step 5)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| AM_RLC error indicator (RB2, RB3 or RB4) | Check to see if set to 'TRUE' |
| Cell update cause | Check to see if set to 'RLC unrecoverable error' |

RRC CONNECTION RELEASE (Step 6)

Use the same message found in TS 34.108 clause 9.

#### 8.3.1.15.5 Test Requirement

After step 4 the UE shall transmit a CELL UPDATE message on the uplink CCCH to report the occurrence of an unrecoverable error in AM RLC entity for RB2, RB3 or RB4 data as well as cell update cause set to "RLC unrecoverable error".

### 8.3.1.16 Void

### 8.3.1.17 Cell Update: Failure (UTRAN initiate an RRC connection release procedure on CCCH)

#### 8.3.1.17.1 Definition

#### 8.3.1.17.2 Conformance requirement

When the UTRAN receives a CELL UPDATE/URA UPDATE message, the UTRAN should:

1> … or

1> initiate an RRC connection release procedure (see subclause 8.1.4 in TS 25.331) by transmitting an RRC CONNECTION RELEASE message on the downlink CCCH.

…

The UE shall receive and act on an RRC CONNECTION RELEASE message in states CELL_DCH and CELL_FACH. Furthermore this procedure can interrupt any ongoing procedures with the UE in the above listed states.

When the UE receives the first RRC CONNECTION RELEASE message; and

1> if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or

1> if the message is received on DCCH:

the UE shall:

…

1> in state CELL_FACH:

…

2> if the RRC CONNECTION RELEASE message was received on the CCCH:

3> …

3> enter idle mode;

Reference

3GPP TS 25.331 clause 8.3.1.5, 8.1.4.3

### 8.3.1.17.3 Test purpose

To confirm that the UE moves to idle state upon the reception of a RRC CONNECTION RELEASE message on CCCH.

### 8.3.1.17.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_FACH (state 6-11)

Test Procedure

The UE is initially in CELL_FACH state. When the UE detects the expiry of periodic cell updating timer T305, the UE transmits a CELL UPDATE message to the SS on the uplink CCCH to perform a periodical cell updating procedure. The SS transmits a RRC CONNECTION RELEASE message on downlink CCCH. The UE shall return to idle mode after release of all current signalling flows and radio access bearers. SS calls for generic procedure C.1 to check that UE is in Idle Mode state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | CELL UPDATE | The value "periodical cell update" shall be set in IE "Cell update cause" and this message shall be sent upon expiry of timer T305. |
| 2 | ← | | RRC CONNECTION RELEASE | SS transmits a RRC CONNECTION RELEASE message to the UE. After SS sent this message SS waits for 5 seconds. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | | | | The UE shall enter idle mode state. |
| 6 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in idle mode state, the test passes, otherwise it fails. |

Specific Message Contents

CELL UPDATE (Step 1)

The same message found in Clause 9 of TS 34.108 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Periodical cell update' |

RRC CONNECTION RELEASE (Step 2)

Use the same message sub-type found in Clause 9 of TS 34.108.

#### 8.3.1.17.5 Test requirement

In step 1 the UE shall transmit a CELL UPDATE message on the uplink CCCH and set value "periodical cell update" into IE "Cell update cause".

After step 4 the UE shall enter idle mode.

### 8.3.1.18 Cell Update: Radio Link Failure (T314>0, T315=0), CS RAB established

#### 8.3.1.18.1 Definition

#### 8.3.1.18.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:

2> if the UE is in CELL_DCH state and the criteria for radio link failure is met as specified in TS 25.331 subclause 8.5.6:

3> perform cell update using the cause "radio link failure".

…

When initiating the cell update procedure, the UE shall:

1> stop timer T305;

1> if the UE is in CELL_DCH state:

2> in the variable RB_TIMER_INDICATOR, set the IE "T314 expired" and the IE "T315 expired" to FALSE;

2> if the stored values of the timer T314 and timer T315 are both equal to zero; or

2> if the stored value of the timer T314 is equal to zero and there are no radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315":

…

2> if the stored value of the timer T314 is equal to zero:

…

2> if the stored value of the timer T315 is equal to zero:

3> release all radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315";

3> in the variable RB_TIMER_INDICATOR set the IE "T315 expired" to TRUE.

2> if the stored value of the timer T314 is greater than zero:

3> if there are radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314":

4> start timer T314.

3> if there are no radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314" or "useT315":

4> start timer T314.

2> if the stored value of the timer T315 is greater than zero:

…

2> for the released radio bearer(s):

3> delete the information about the radio bearer from the variable ESTABLISHED_RABS;

3> when all radio bearers belonging to the same radio access bearer have been released:

4> indicate local end release of the radio access bearer to upper layers using the CN domain identity together with the RAB identity stored in the variable ESTABLISHED_RABS;

4> delete all information about the radio access bearer from the variable ESTABLISHED_RABS.

2> select a suitable UTRA cell according to TS 25.304;

2> set the variable ORDERED_RECONFIGURATION to FALSE.

1> set the variables PROTOCOL_ERROR_INDICATOR, FAILURE_INDICATOR, UNSUPPORTED_CONFIGURATION and INVALID_CONFIGURATION to FALSE;

1> set the variable CELL_UPDATE_STARTED to TRUE;

1> if the UE is not already in CELL_FACH state:

2> move to CELL_FACH state;

2> select PRACH according to TS 25.331 subclause 8.5.17;

2> select Secondary CCPCH according to TS 25.331 subclause 8.5.19;

2> use the transport format set given in system information as specified in TS 25.331 subclause 8.6.5.1.

1> if the UE performs cell re-selection:

2> clear the variable C_RNTI; and

2> stop using that C_RNTI just cleared from the variable C_RNTI in MAC.

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> in case of a cell update procedure:

2> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the CELL UPDATE message for transmission on the uplink CCCH.

1> set counter V302 to 1;

1> start timer T302 when the MAC layer indicates success or failure in transmitting the message.

…

If the received CELL UPDATE CONFIRM message would cause the UE to transit to CELL_DCH state:

1> if the UE failed to establish the physical channel(s) indicated in the received CELL UPDATE CONFIRM message according to the criteria defined in subclause 8.5.4 in TS 25.331are not fulfilled; or

…

the UE shall:

…

1> if the variable ORDERED_RECONFIGURATION is set to TRUE caused by the received CELL UPDATE CONFIRM message in case of a cell update procedure:

2> set the variable ORDERED_RECONFIGURATION to FALSE.

1> if V302 is equal to or smaller than N302:

2> select a suitable UTRA cell according to TS 25.304;

2> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3, except for the IE "Cell update cause" which shall be set to "Radio link failure";

2> submit the CELL UPDATE message for transmission on the uplink CCCH;

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302:

…

If the IE "Downlink DPCH info common for all RL" is included in a message used to perform a Timing re-initialised hard handover or the IE "Downlink DPCH info common for all RL" is included in a message other than RB SETUP used to transfer the UE from a state different from Cell_DCH to Cell_DCH, and ciphering is active for any radio bearer using RLC-TM, the UE shall, after having activated the dedicated physical channels indicated by that IE:

…

1> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info" in the response message;”

…

Reference

3GPP TS 25.331 clauses 8.3.1.2, 8.3.1.7a, 8.6.6.28.

### 8.3.1.18.3 Test purpose

1. To confirm that the UE shall try to find a new cell after detecting that a radio link failure has occurred.
2. To confirm that the UE performs a cell selection procedure when it fails to configure the physical channel(s) indicated in the CELL UPDATE CONFIRM message.

8.3.1.18.4 Method of test

Initial Condition

System Simulator: 2 cells (Cell 1 and cell 2 are active).

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: CS_DCCH+DTCH_DCH (state 6-9).

Test Procedure

**Table 8.3.1.18**

| Parameter | Unit | Cell 1 | | | Cell 2 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | Mid Range Test Frequency | | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -60 | -75 | -60 | -85 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -60 | -75 | -60 | -85 |

Table 8.3.1.18 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked "T0" denote the initial conditions.

The UE is brought to CELL_DCH state in a cell 1 after making a successful outgoing call attempt. After the call has been established, SS configures its downlink transmission power settings according to column "T1" in table 8.3.1.18. The UE shall detect a radio link failure in cell 1.

Then it shall attempt to re-select to cell 2. After that, it shall transmit CELL UPDATE on the uplink CCCH to SS. The SS transmits CELL UPDATE CONFIRM message which includes dedicated transport and physical channel parameters on downlink DCCH. SS shall not configure according to this message. Instead, SS configures its downlink transmission power settings according to column "T2" in table 8.3.1.18. UE shall fail to establish the dedicated channel in cell 2.

UE shall re-select to cell 1 and transmit a CELL UPDATE message with IE "Cell update cause" set to "Radio link failure". Then SS responds with a CELL UPDATE CONFIRM message on downlink DCCH. Then the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | | | Void | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | | SS configures cell 1 and 2 according to column "T1" in table 8.3.1.18. SS starts to listen to the uplink CCCH of cell 2. |
| 5 | | | Void | |
| 6 | | | | The UE detects the radio link failure. |
| 7 | → | | CELL UPDATE | The UE shall find a new cell 2 and the value "radio link failure" shall be set in IE "Cell update cause". |
| 8 | ← | | CELL UPDATE CONFIRM | Including dedicated physical channel parameters. |
| 9 | | | | SS does not configure according to the message in step 8. SS configures cell 1 and 2 according to column "T2" in table 8.3.1.18. |
| 10 | → | | CELL UPDATE | UE shall select cell 1 and transmit this message |
| 11 | ← | | CELL UPDATE CONFIRM | See message content. |
| 12 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108 titled "System Information Block type 1 (supported PLMN type is GSM-MAP)", with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |
| - T313 | 2 |
| - T315 | 0 |

CELL UPDATE (Step 7)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI<br>-SRNC Identity<br>- S-RNTI | <br>Check to see if set to value assigned in cell 1.<br>Check to see if set to value assigned in cell 1. |
| AM_RLC error indication (RB2, RB3 or RB4) | Not checked |
| Cell Update Cause | Check to see if set to 'radio link failure' |
| RB timer indicator<br>- T314 expired<br>- T315 expired | <br>FALSE<br>TRUE |

CELL UPDATE CONFIRM (Step 8 and 11)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| RRC transaction identifier | Selects an arbitrary integer between 0 to 3, but different values should be used for step 8 and 11. |
| UL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A1, A2, A7 or A8. |
| Added or Reconfigured TrCH information list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A1, A2, A7 or A8. |
| DL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A1, A2, A7 or A8. |
| Added or Reconfigured TrCH information list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A1, A2, A7 or A8. |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A1, A2, A7 or A8. |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A1, A2, A7 or A8. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A1, A2, A7 or A8. |

CELL UPDATE (Step 10)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| -SRNC Identity | Check to see if set to value assigned in cell 1. |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to 'radio link failure' |
| Failure cause | This IE is not Checked. |
| RB timer indicator | |
| - T314 expired | FALSE |
| - T315 expired | TRUE |

TRANSPORT CHANNEL RECONFIGURATION COMPLETE (Step 12)

Use the same message found in TS 34.108 clause 9, with the exceptions of the following IEs:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info | This IE is checked to see if it is present in the case ciphering is activated. |

### 8.3.1.18.5 Test requirement

After step 6, the UE shall detect the presence of cell 2, perform cell re-selection and transmit a CELL UPDATE message.

After step 9, the UE shall transmit a CELL UPDATE message with IE "Cell update cause" set to "Radio link failure".

After step 11, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC with IE “Uplink counter synchronisation info” as present in case ciphering is activated.

## 8.3.1.19 Void

## 8.3.1.20 Cell Update: Reception of CELL UPDATE CONFIRM Message that causes invalid configuration

### 8.3.1.20.1 Definition

### 8.3.1.20.2 Conformance Requirement

If the variable INVALID_CONFIGURATION is set to TRUE, the UE shall:

1> if V302 is equal to or smaller than N302:

2> if, caused by the received CELL UPDATE CONFIRM message

3> if the variable ORDERED_RECONFIGURATION is set to TRUE caused by the received CELL UPDATE CONFIRM message in case of a cell update procedure:

4> set the variable ORDERED_RECONFIGURATION to FALSE.

2> in case of a cell update procedure:

3> set the variable FAILURE_INDICATOR to TRUE;

3> set the variable FAILURE_CAUSE to "Invalid configuration";

3> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

3> submit the CELL UPDATE message for transmission on the uplink CCCH.

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302:

…

Reference

3GPP TS 25.331 clause 8.3.1

### 8.3.1.20.3 Test Purpose

1. To confirm that the UE retransmits a CELL UPDATE message when it receives a CELL UPDATE CONFIRM message that will trigger an invalid configuration in the UE, if the number of retransmissions has not reached the maximum allowed value.

### 8.3.1.20.4 Method of Test

Initial Condition

System Simulator: 1 cell

UE: CELL_PCH (state 6-12) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is brought to CELL_PCH state at the beginning of the test. SS pages the UE by sending a PAGING TYPE 1 message using the U-RNTI identity assigned during RRC connection establishment procedure. The UE shall transmit a CELL UPDATE message on the uplink CCCH. Upon receiving such a message, the SS replies with a CELL UPDATE CONFIRM message which is set to give an invalid configuration. The UE shall re-transmit CELL UPDATE message. SS responds with a valid CELL UPDATE CONFIRM message to end the procedure. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE 1 | The UE is in the CELL_PCH state. SS pages for the UE using the allocated connected mode identity (U-RNTI). |
| 2 | → | | CELL UPDATE | If CELL UPDATE message is received, check that the value "paging response" is set in IE "Cell update cause". |
| 3 | ← | | CELL UPDATE CONFIRM | SS transmits an invalid message. |
| 4 | → | | CELL UPDATE | IE "failure cause" is set to "invalid configuration" |
| 5 | ← | | CELL UPDATE CONFIRM | |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Content

CELL UPDATE (Step 2)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Paging Response' |

CELL UPDATE CONFIRM (Step 3)

Use the same message sub-type found in TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_DCH |
| Uplink DPCH info | Not Present |

CELL UPDATE (Step 4)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Paging Response' |
| Failure cause | Check to see if it is set to 'invalid configuration' |

PAGING TYPE 1 (Step 1)

Use the same message sub-type titled "TM (Packet in PS)" in default message content of TS 34.108 with following exceptions:

| Information Element | Value/remark |
|---|---|
| Page record list<br>- Paging record<br>- CHOICE Used paging identity<br>- U-RNTI<br>- SRNC Identity<br>- S-RNTI | <br><br>UTRAN identity<br><br>'0000 0000 0001'<br>'0000 0000 0000 0000 0001' |

CELL UPDATE CONFIRM (Step 5)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

#### 8.3.1.20.5 Test Requirement

After step 1 the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "paging response".

After step 3 the UE shall transmit a CELL UPDATE message with IE "cell update cause" set to "paging response" and IE "failure cause" set to "invalid configuration".

After step 5, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

### 8.3.1.21 Cell Update: Cell reselection to cell of another PLMN belonging to the equivalent PLMN list

#### 8.3.1.21.1 Definition

#### 8.3.1.21.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1.- Cell reselection:

- if none of the criteria for performing cell update with the causes specified above in the current clause is met; and
- if the UE is in CELL_FACH or CELL_PCH state; and
- if the UE performs cell re-selection or the variable C_RNTI is empty:
  - perform cell update using the cause "cell reselection".

2. A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

   - The cell is part of the selected PLMN or, of a PLMN considered as equivalent by the UE according to the information provided by the NAS.
   - The cell is not barred.
   - The cell is not part of the list of "forbidden LAs for roaming"
   - The cell selection criteria are fulfilled.

3. The Mobile Equipment shall store a list of "equivalent PLMNs". This list is replaced or deleted at the end of each location update procedure, routing area update procedure and GPRS attach procedure. The stored list

consists of a list of equivalent PLMNs as downloaded by the network plus the PLMN code of the network that downloaded the list. The stored list shall not be deleted when the MS is switched off. The stored list shall be deleted if the SIM is removed. The maximum number of possible entries in the stored list is six.

Reference

3GPP TS 25.331 clause 8.3.1.2.

3GPP TS 25.304 clause 4.3.

3GPP TS 24.008 clause 4.4.1.

### 8.3.1.21.3 Test purpose

1. To confirm that the UE executes a cell update procedure after a successful reselection to another UTRA cell with a PLMN identity different from the original cell but with a PLMN identity that is part of the equivalent PLMN list in the UE.

2. To confirm that the UE sends the correct uplink response message when executing cell update procedure due to cell reselection.

NOTE: Verifies conformance requirement 1, 2 and 3.

3. To confirm that the UE refrains from executing a cell update procedure to a better UTRA cell with another PLMN identity when that PLMN identity is not part of the equivalent PLMN list in the UE.

NOTE: Verifies conformance requirement 1, 2 and 3.

NOTE: Test case in 8.3.1.1 is a test where the UE reselects to a cell with the same PLMN identity as the registered PLMN.

### 8.3.1.21.4 Method of test

Initial Condition

System Simulator: 3 cells - Cell 1 is active, with the downlink transmission power shown in column marked "T0" in table 8.3.1.21, while cell 4 and cell 7 is inactive.

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108.

UE: Shall have stored equivalent PLMN list containing PLMN-1 and PLMN-2. The equivalent PLMN list stored in the UE shall not contain PLMN-3.

Test Procedure

The SS activates Cell 1, 4 & 7 according table 8.3.1.21.

**Table 8.3.1.21**

| Parameter | Unit | Cell 1 | | | Cell 4 | | | Cell 7 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | High Range Test Frequency | | | Low Range Test Frequency | | |
| PLMN identity | | PLMN-1 | | | PLMN-2 | | | PLMN-3 | | |
| CPICH Ec (FDD) | dBm | -60 | -72 | -72 | OFF | -60 | -66 | OFF | OFF | -60 |
| P-CCPCH RSCP (TDD) | dBm | -62 | -74 | -74 | OFF | -62 | -68 | OFF | OFF | -62 |

Table 8.3.1.21-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1" and "T2" are to be applied subsequently.

a) At T1, the SS activates Cell 4, and monitors Cell 4 for received messages from UE.

b) UE re-selects to Cell 4, and sends a CELL UPDATE. The SS shall reply with CELL UPDATE CONFIRM message on downlink DCCH.

c) At T2, the SS activates Cell 7, and monitors Cell 7 for received messages from UE.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | UE is camped on Cell 1 and registered to PLMN1 |
| 1a | ← | | MASTER INFORMATION BLOCK<br>SCHEDULING BLOCK 1<br>SYSTEM INFORMATION BLOCK TYPE 4<br>SYSTEM INFORMATION BLOCK TYPE 11 | SS transmits MIB and SB1 with a new value Tag. Simultaneously SS transmits modified SIB 4 and 11, with contents given in specific message contents |
| 1b | ← | | SYSTEM INFORMATION CHANGE INDICATION | Including 'MIB Value TAG' set to the value currently being transmitted |
| 1c | | | | Wait 5 seconds to allow UE to read new system information |
| 1d | | | | SS shall activate Cell 4. The UE shall not re-select Cell 4 until Cell 1 power level is set according to T1. |
| 2 | → | | CELL UPDATE | At T1: Sent in Cell 4<br>The value "cell reselection" set in IE "Cell update cause". |
| 3 | ← | | CELL UPDATE CONFIRM | |
| 4 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 4a | | | | SS shall activate Cell 7 and set power level according to T2. |
| 5 | | | | At T2: No message sent by UE |

Specific Message Contents

MASTER INFORMATION BLOCK (Step 1a)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| MIB Value Tag | Set to (Current MIB value tag + 1) |
| SIB 4 Cell Value tag | Set to (Current SIB4 value tag + 1) |
| SB 1 Cell Value tag | Set to (Current SB 1 value tag + 1) |

SCHEDULING BLOCK 1 (Step 1a)

| Information Element | Value/remark |
|---|---|
| SIB 11 Cell Value tag | Set to (Current SIB 11 value tag + 1) |

System Information Block type 4 (Step 1a)

Use the same message type found in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - Qqualmin | -16 |

System Information Block type 11 (Step 1a)

Use the same message type found in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | TRUE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |

SYSTEM INFORMATION CHANGE INDICATION (Step 1b)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| BCCH modification info | |
| MIB Value tag | Set equal to Value tag sent in modified MIB in step 1a |

CELL UPDATE CONFIRM (Step 4)

Use the same message sub-type titled "CELL UPDATE CONFIRM message" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| - New C-RNTI | '1010 1010 1010 1010' |

#### 8.3.1.21.5 Test requirement

After step 1c, the UE shall send a CELL UPDATE at T1.

After step 4, the UE shall refrain from sending a cell update (or any other message) after T2.

### 8.3.1.22 Cell update: Restricted cell reselection to a cell belonging to forbidden LA list (Cell_FACH)

#### 8.3.1.22.1 Definition

#### 8.3.1.22.2 Conformance requirement

1. -Cell reselection:

   - if none of the criteria for performing cell update with the causes specified above in the current clause is met; and

   - if the UE is in CELL_FACH or CELL_PCH state; and

   - if the UE performs cell re-selection or the variable C_RNTI is empty:

     - perform cell update using the cause "cell reselection".

2. A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

   - The cell is part of the selected PLMN or, of a PLMN considered as equivalent by the UE according to the information provided by the NAS.

   - The cell is not barred.

   - The cell is not part of the list of "forbidden LAs for roaming"

   - The cell selection criteria are fulfilled.

3. The Mobile Equipment shall contain a list of "forbidden location areas for roaming", as well as a list of "forbidden location areas for regional provision of service". These lists shall be erased when the MS is switched off or when the SIM is removed, and periodically (with period in the range 12 to 24 hours). The location area

identification received on the BCCH that triggered the location updating request shall be added to the suitable list whenever a location update reject message is received with the cause "Roaming not allowed in this location area" or with the cause "Location Area not allowed". The lists shall accommodate each 10 or more location area identifications. When the list is full and a new entry has to be inserted, the oldest entry shall be deleted.

Reference

3GPP TS 25.331 clause 8.3.1.2.

3GPP TS 25.304 clause 4.3.

3GPP TS 24.008 clause 4.4.1.

### 8.3.1.22.3 Test purpose

1. To confirm that the UE executes a cell update procedure after a successful reselection of another UTRA cell with a LA identity that is not part of the list of LAs stored in the UE as "forbidden location areas for roaming".

2. To confirm that if the UE get a release message and is moved to idle mode, performs a registration update where the LA list is updated and the UE again enters connected mode, that the UE refrains from selecting that same UTRA cell if that is part of the forbidden LA list.

NOTE: Test case in 8.3.1.1 is a test where the UE reselects to a cell with the same LA identity as the LA identity in the original cell.

NOTE: Test case in 8.1.3.2 is a test where normal RRC connection release on DCCH in CELL_FACH state is tested.

NOTE: Test case in 8.1.9 is a test where normal RRC connection request and location registration is tested.

### 8.3.1.22.4 Method of test

Initial Condition

System Simulator:

- 2 cells - Cell 1 is active, with the downlink transmission power shown in column marked "T0" in table 8.3.1.22, while cell 4 is inactive.

- Qqualmin value for Cell 1 and Cell 4 is set to -16 dB in SIB4 (FDD only) (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108.

UE: Shall have an empty list of LAs stored that are "forbidden location areas for roaming".

Related ICS/IXIT statements

Support of PS service Yes/No

Test Procedure

**Table 8.3.1.22**

| Parameter | Unit | Cell 1 | | Cell 4 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| LA identity | | LA-ID 1 | | LA-ID 2 | |
| CPICH Ec (FDD) | dBm | -60 | -66 | Cell 4 is switched off | -60 |
| P-CCPCH RSCP (TDD) | dBm | -62 | -68 | Cell 4 is switched off | -62 |

Table 8.3.1.22-1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1"is to be applied subsequently.

a) At T1, verify that the UE reselects to cell 4 and sends a cell update.

b) SS sends a RRC connection release message to the UE from cell 4 on CCCH.

c) The UE performs a routing area update to cell 4 (RRC Connection request, setup, initial direct transfer, DL direct transfer (with LA forbidden for roaming), RRC connection release.)

d) The UE reselects cell 1 again although this is not the best cell.

e) The UE performs a routing area update to cell 1 (RRC Connection request, setup, initial direct transfer, DL direct transfer (without LA forbidden for roaming)).

f) Keep the UE in RRC Connected mode in CELL_FACH state.

g) Make sure the UE refrains from reselecting cell 4 and does not send a cell update (or any other message) in cell 4.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | CELL UPDATE | At T1: Sent in Cell 4<br>The value "cell reselection" set in IE "Cell update cause". |
| 2 | ← | | RRC CONNECTION RELEASE | This message is sent on CCCH.<br>The value "Normal event" is set in IE "Release cause" |
| 3 | | | Void | |
| 4 | → | | RRC CONNECTION REQUEST | The value "Registration" is set in IE "Establishment cause" |
| 5 | ← | | RRC CONNECTION SETUP | Transits the UE to CELL_FACH state. |
| 6 | → | | RRC CONNECTION SETUP COMPLETE | |
| 7 | → | | INITIAL DIRECT TRANSFER | Includes GMM message ROUTING AREA UPDATE REQUEST. |
| 8 | ← | | DOWNLINK DIRECT TRANSFER | Includes GMM message ROUTING AREA UPDATE REJECT with reject cause “No Suitable Cells In Location Area” |
| 9 | ← | | RRC CONNECTION RELEASE | This message is sent on DCCH.<br>The value "Normal event" is set in IE "Release cause" |
| 10 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 11 | → | | RRC CONNECTION REQUEST | Sent in Cell 1.<br>The value "Registration" is set in IE "Establishment cause" |
| 12 | ← | | RRC CONNECTION SETUP | Transits the UE to CELL_FACH state. |
| 13 | → | | RRC CONNECTION SETUP COMPLETE | |
| 14 | → | | INITIAL DIRECT TRANSFER | Includes GMM message ROUTING AREA UPDATE REQUEST. |
| 14a | ← | | SECURITY MODE COMMAND | |
| 14b | → | | SECURITY MODE COMPLETE | |
| 15 | ← | | DOWNLINK DIRECT TRANSFER | Includes GMM message ROUTING AREA UPDATE ACCEPT. |

Specific Message Contents

System Information Block type 4

Use the same message type found in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - Qqualmin | -16 |

System Information Block type 11 (FDD)

Use the same message type found in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | TRUE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |

CELL UPDATE (Step 1)

The same message found in TS34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'cell reselection' |

RRC CONNECTION RELEASE (Step 2, 9)

Use the same message sub-type found in TS34.108 clause 9.

RRC CONNECTION RELEASE COMPLETE (Step 10)

Use the same message sub-type found in TS34.108 clause 9. Only the message type IE in this message will be checked.

RRC CONNECTION REQUEST (Step 4, 11)

Use the same message sub-type found in TS34.108 clause 9.

RRC CONNECTION SETUP (Step 5, 12)

Use the same message sub-type found in TS34.108 clause 9.

RRC CONNECTION SETUP COMPLETE (Step 6, 13)

Use the same message sub-type found in TS34.108 clause 9.

INITIAL DIRECT TRANSFER (Step 7, 14)

Use the same message sub-type found in TS34.108 clause 9.

DOWNLINK DIRECT TRANSFER (Step 8, 15)

Use the same message sub-type found in TS34.108 clause 9.

8.3.1.22.5 Test requirement

In step 1, the UE shall send a CELL UPDATE in Cell 4 at T1 and attempt registration update in Cell 4.

After step 2, the UE shall transmit RRC CONNECTION REQUEST message.

After step 5, the UE shall transmit RRC CONNECTION SETUP COMPLETE message, followed by an INITIAL DIRECT TRANSFER message

Since the registration update is rejected in Cell 4, UE shall transmit RRC CONNECTION RELEASE COMPLETE message after receiving RRC CONNECTION RELEASE message from SS. UE shall not send any more messages in Cell 4.

After step 9, the UE shall transmit RRC CONNECTION REQUEST message in cell 1.

After step 12, the UE shall transmit RRC CONNECTION SETUP COMPLETE message followed by INITIAL DIRECT TRANSFER message.

## 8.3.1.23 Cell Update: HCS cell reselection in CELL_FACH

### 8.3.1.23.1 Definition

### 8.3.1.23.2 Conformance requirement

1. The quality level threshold criterion H for hierarchical cell structures is used to determine whether prioritised ranking according to hierarchical cell re-selection rules shall apply, and is defined by:

$$H_s = Q_{meas,s} - Qhcs_s$$

$$H_n = Q_{meas,n} - Qhcs_n - TO_n * L_n$$

…

2. The cell-ranking criterion R is defined by:

$$R_s = Q_{meas,s} + Qhyst_s$$

$$R_n = Q_{meas,n} - Qoffset_{s,n} - TO_n * (1 - L_n)$$

where:

$$TO_n = TEMP_OFFSET_n * W(PENALTY_TIME_n - T_n)$$

$L_n = 0$ if $HCS_PRIO_n = HCS_PRIO_s$
$L_n = 1$ if $HCS_PRIO_n <> HCS_PRIO_s$

$W(x) = 0$ for $x < 0$
$W(x) = 1$ for $x >= 0$

$TEMP_OFFSET_n$ applies an offset to the H and R criteria for the duration of $PENALTY_TIME_n$ after a timer $T_n$ has started for that neighbouring cell.

The timer $T_n$ is implemented for each neighbouring cell. $T_n$ shall be started from zero when one of the following conditions becomes true:

- if $HCS_PRIO_n <> HCS_PRIO_s$ and

$$Q_{meas,n} > Qhcs_n$$

Or

- if $HCS_PRIO_n = HCS_PRIO_s$ and

  - for serving FDD and neighbour FDD cells if the quality measure for cell selection and reselection is set to CPICH RSCP in the serving cell, and:

$$Q_{meas,n} > Q_{meas,s} + Qoffset1_{s,n}$$

  - for serving FDD and neighbour FDD cells if the quality measure for cell selection and reselection is set to CPICH Ec/No in the serving cell, and:

$$Q_{meas,n} > Q_{meas,s} + Qoffset2_{s,n}$$

  - for all other serving and neighbour cells:

$$Q_{meas,n} > Q_{meas,s} + Qoffset1_{s,n}$$

$T_n$ for the associated neighbour cell shall be stopped as soon as any of the above conditions are no longer fulfilled. Any value calculated for $TO_n$ is valid only if the associated timer $T_n$ is still running else $TO_n$ shall be set to zero.

At cell-reselection, a timer $T_n$ is stopped only if the corresponding cell is not a neighbour cell of the new serving cell, or if the criteria given above for starting timer $T_n$ for the corresponding cell is no longer fulfilled with the parameters of the new serving cell. On cell re-selection, timer $T_n$ shall be continued to be run for the corresponding cells but the criteria given above shall be evaluated with parameters broadcast in the new serving cell if the corresponding cells are neighbours of the new serving cell.

…

**3. The cell selection criterion S used for cell reselection is fulfilled when:**

| | |
|---|---|
| for FDD cells: | Srxlev > 0 AND Squal > 0 |
| for TDD cells: | Srxlev > 0 |
| for GSM cells: | Srxlev > 0 |

Where :

$$Squal = Q_{qualmeas} - Qqualmin$$

$$Srxlev = Q_{rxlevmeas} - Qrxlevmin - Pcompensation$$

…

4. The UE shall perform ranking of all cells that fulfil the S criterion among

   - all cells that have the highest HCS_PRIO among those cells that fulfil the criterion H >= 0**.** Note that this rule is not valid when UE high-mobility is detected.

   - all cells, not considering HCS priority levels, if no cell fulfil the criterion H >= 0. This case is also valid when it is indicated in system information that HCS is not used, that is when serving cell does not belong to a hierarchical cell structure.

The cells shall be ranked according to the R criteria.

The best ranked cell is the cell with the highest R value.

5. If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell.

In all cases, the UE shall reselect the new cell, only if the following conditions are met:

- the new cell is better ranked than the serving cell during a time interval Treselection.
- more than 1 second has elapsed since the UE camped on the current serving cell.

…

6. The *cell reselection* process in Connected Mode is the same as *cell reselection evaluation process* used for idle mode, described in subclause 5.2.6 of 25.304.

7. A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

…

1> Re-entering service area:

…

1> RLC unrecoverable error:

…

1> Cell reselection:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:

3> if the UE is in CELL_FACH or CELL_PCH state and the UE performs cell re-selection; or

3> if the UE is in CELL_FACH state and the variable C_RNTI is empty:

4> perform cell update using the cause "cell reselection".

### Reference

3GPP TS 25.304 clause 5.2.6.1.4

3GPP TS 25.304 clause 5.4.3

3GPP TS 25.331 clause 8.3.1

### 8.3.1.23.3 Test purpose

1. To confirm that the UE can read HCS related SIB information and act upon all HCS parameters in CELL_FACH state.
2. To confirm that the UE executes a cell update procedure after the successful reselection of another UTRA cell in CELL_FACH state.
3. To confirm that the UE sends the correct uplink response message when executing cell update procedure due to cell reselection.

8.3.1.23.4 Method of test

Initial Condition

System Simulator: 3 cells – Cell 1 is active with downlink transmission power shown in Column To in Table 8.3.1.23-1. Cell 2 and 3 are switched off.

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108.

Specific Message Content

For system information blocks 4 and 11 for Cell 1 (gives IE's which are different from defaults given in 34.108 sec 6.1) to be transmitted before idle update preamble.

Contents of System Information Block type 4 (FDD)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | FDD |
| - Sintersearch | 0 (0 dB) |
| - SsearchHCS | 17 (35 dB) |
| - RAT List | This parameter is configurable |
| - $S_{limit,SearchRAT}$ | 0 |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - $Qhyst1_S$ | 5 (gives actual value of 10 dB) |
| - $Qhyst2_S$ | Not Present |
| - HCS Serving cell information | |
| -HCS Priority | 6 |
| - Q HCS | 40 (results in actual value of –75) |
| - TcrMax | Not Present |

Contents of System Information Block type 4 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | TDD |
| - SsearchHCS | 23 (47 dB) |
| - RAT List | This parameter is configurable |
| - Qrxlevmin | -52 (-103 dBm) |
| - $Qhyst1_S$ | 5 (gives actual value of 10 dB) |
| - HCS Serving cell information | |
| -HCS Priority | 6 |
| - Q HCS | 40 (results in actual value of –75) |
| - TcrMax | Not Present |

Contents of System Information Block type 11 (FDD) (Cell 1)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency measurement system information | |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |

Contents of System Information Block type 11 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 1)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS34.108: Default settings for cell No.1 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS34.108: Default settings for cell No.2 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS34.108: Default settings for cell No.3 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |

Test Procedure

**Table 8.3.1.23-1**

| Parameter | Unit | Cell 1 | | | Cell 2 | | | Cell 3 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| Cell id in system information | | 1 | | | 2 | | | 3 | | |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | Mid Range Test Frequency | | | Mid Range Test Frequency | | |
| HCS Priority | | 6 | | | 7 | | | 7 | | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | -60 | -60 | -82 | -82 | -68 | -82 | -68 | -68 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | -60 | -80 | -80 | -70 | -80 | -70 | -70 |
| H* (During penalty time) | | 15 | 15 | -inf | -inf | -inf | 7 | -inf | -inf | 7 |
| H* (After PenaltyTime) | | 15 | 15 | 15 | -7 | -7 | 7 | -7 | 7 | 7 |
| R* (During PenaltyTime) | | n.a. | n.a. | n.a. | n.a. | n.a. | -inf | n.a. | n.a. | -58 |
| R* (After PenaltyTime) | | n.a. | n.a. | n.a. | n.a. | n.a. | -48 | n.a. | n.a. | -58 |

(*) NOTE: this parameter is calculated internally in the UE and is only shown for clarification of the test procedure.

The UE is in the CELL_FACH state, camping onto cell 1. SS configures Cell 2 and 3 with power levels given in column "TO" and starts to broadcast BCCH on the primary CCPCH in cell 2 & 3. UE shall remain camped on the Cell 1 even after expiry of penalty time i.e. 40 seconds. SS sets downlink transmission power settings according to columns "T1" in table 8.3.1.23-1. The UE shall find cell 3 to be more suitable for service and hence perform a cell reselection to cell 3 after at-least 40 Seconds (Penalty Time) after the power levels have been changed. After the completion of cell reselection, the UE shall transmit a CELL UPDATE message to the SS on the uplink CCCH of cell 3 and set IE "Cell update cause" to "Cell Reselection". After the SS receives this message, it transmits a CELL UPDATE CONFIRM message, which includes the IE "RRC State Indicator" set to "CELL_FACH", to the UE on the downlink DCCH. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. UE shall stay in CELL_FACH state. SS then sets downlink transmission power settings according to columns "T2" in table 8.3.1.23-1. The UE shall find cell 2 to be more suitable for service after the expiry of the penalty time and hence perform a cell reselection to cell 2 after the power levels have been changed. After the completion of cell reselection, the UE shall transmit a CELL UPDATE message to the SS on the uplink CCCH of cell 2 and set IE "Cell update cause" to "Cell Reselection". After the SS receives this message, it transmits a CELL UPDATE CONFIRM message, which includes the IE "RRC State Indicator" set to "CELL_FACH", to the UE on the downlink DCCH. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. UE shall stay in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_FACH state in cell 1 |
| 2 | ← | | BCCH | SS applies the downlink transmission power settings, according to the values in columns "T0" of table 8.3.1.23-1. The SS starts to broadcast BCCH on the primary CCPCH in cell 2 and Cell 3. The UE shall still find Cell 1 best for service even after penalty time of 40 seconds, and shall remain in Cell 1 in CELL_FACH State |
| 3 | | | | SS changes the power levels as per column 'T1' in the table 8.3.1.23-1. For the time equal to Penalty time 40 Seconds, after the change in power levels, the UE shall still find Cell 1 as best for service and remain in cell 1. After Penalty time of 40 Seconds, UE shall find Cell 3 better for service and perform a reselection. SS waits for the maximum duration required for the UE to camp to cell 3. |
| 4 | → | | CELL UPDATE | Value "cell reselection" shall be indicated in IE "Cell update cause" Received in Cell 3 |
| 5 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_FACH". |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 7 | | | | SS changes the power levels as per column 'T2' in the table 8.3.1.23-1. For the time equal to penalty time of 40 seconds, after the change in power levels, the UE shall still find cell 3 as best for service and remain in Cell 3. After penalty time of 40 seconds, UE shall find Cell 2 better for service and perform a reselection. SS waits for the maximum duration required for the UE to camp to cell 2. |
| 8 | → | | CELL UPDATE | Received in Cell 2 |
| 9 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_FACH". |
| 10 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Contents

The contents of system information block 4 and 11 messages are identical as system information block 4 and 11 messages as found in 34.108 clause 6.1 with the following exceptions:

Contents of System Information Block type 4 (FDD) (Cell 2 and 3)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | FDD |
| - Sintersearch | 0 dB |
| - SsearchHCS | 17 (35 dB) |
| - RAT List | This parameter is configurable |
| - $S_{limit,SearchRAT}$ | 0 |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - $Qhyst1_S$ | 5 (gives actual value of 10 dB) |
| - $Qhyst2_S$ | Not Present |
| - HCS Serving cell information | |
| -HCS Priority | 7 |
| - Q HCS | 40 (results in actual value of –75) |
| - TcrMax | Not Present |

Contents of System Information Block type 4 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 2 and 3)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | TDD |
| - Sintersearch | 0 dB |
| - SsearchHCS | 23 (47 dB) |
| - RAT List | This parameter is configurable |
| - Qrxlevmin | -52 (-103 dBm) |
| - $Qhyst1_S$ | 5 (gives actual value of 10 dB) |
| - HCS Serving cell information | |
| -HCS Priority | 7 |
| - Q HCS | 40 (results in actual value of –75) |
| - TcrMax | Not Present |

Contents of System Information Block type 11 (FDD) (Cell 2)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency measurement system information | |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |

Contents of System Information Block type 11 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 2)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS34.108: Default settings for cell No.2 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS 34.108: Default settings for cell No.1 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 39 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS 34.108: Default settings for cell No.3 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |

Contents of System Information Block type 11 (FDD) (Cell 3)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency measurement system information | |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |

Contents of System Information Block type 11 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 3)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS34.108: Default settings for cell No.3 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS 34.108: Default settings for cell No.1 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS 34.108: Default settings for cell No.2 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |

CELL UPDATE

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |

CELL UPDATE CONFIRM (Step 5 and 9)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

#### 8.3.1.23.5 Test requirement

After step 3 the UE shall reselect to cell 3 and then it shall transmit a CELL UPDATE message which, sets the value "cell reselection" in IE "Cell update cause".

After step 5 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 7 the UE shall reselect to cell 2 and then it shall transmit a CELL UPDATE message which, sets the value "cell reselection" in IE "Cell update cause".

After step 9 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

### 8.3.1.24 Cell Update: HCS cell reselection in CELL_PCH

#### 8.3.1.24.1 Definition

#### 8.3.1.24.2 Conformance requirement

1. The quality level threshold criterion H for hierarchical cell structures is used to determine whether prioritised ranking according to hierarchical cell re-selection rules shall apply, and is defined by:

$$H_s = Q_{meas,s} - Qhcs_s$$

$$H_n = Q_{meas,n} - Qhcs_n - TO_n * L_n$$

…

2. The cell-ranking criterion R is defined by:

$$R_s = Q_{meas,s} + Qhyst_s$$

$$R_n = Q_{meas,n} - Qoffset_{s,n} - TO_n * (1 - L_n)$$

where:

$TO_n = TEMP_OFFSET_n * W(PENALTY_TIME_n - T_n)$

$L_n = 0$ if $HCS_PRIO_n = HCS_PRIO_s$
$L_n = 1$ if $HCS_PRIO_n <> HCS_PRIO_s$

$W(x) = 0$ for $x < 0$
$W(x) = 1$ for $x >= 0$

$TEMP_OFFSET_n$ applies an offset to the H and R criteria for the duration of $PENALTY_TIME_n$ after a timer $T_n$ has started for that neighbouring cell.

The timer $T_n$ is implemented for each neighbouring cell. $T_n$ shall be started from zero when one of the following conditions becomes true:

- if $HCS_PRIO_n <> HCS_PRIO_s$ and

$$Q_{meas,n} > Qhcs_n$$

Or

- if $HCS_PRIO_n = HCS_PRIO_s$ and
  - for serving FDD and neighbour FDD cells if the quality measure for cell selection and reselection is set to CPICH RSCP in the serving cell, and:

$$Q_{meas,n} > Q_{meas,s} + Qoffset1_{s,n}$$

  - for serving FDD and neighbour FDD cells if the quality measure for cell selection and reselection is set to CPICH Ec/No in the serving cell, and:

$$Q_{meas,n} > Q_{meas,s} + Qoffset2_{s,n}$$

  - for all other serving and neighbour cells:

$$Q_{meas,n} > Q_{meas,s} + Qoffset1_{s,n}$$

$T_n$ for the associated neighbour cell shall be stopped as soon as any of the above conditions are no longer fulfilled. Any value calculated for $TO_n$ is valid only if the associated timer $T_n$ is still running else $TO_n$ shall be set to zero.

At cell-reselection, a timer $T_n$ is stopped only if the corresponding cell is not a neighbour cell of the new serving cell, or if the criteria given above for starting timer $T_n$ for the corresponding cell is no longer fulfilled with the parameters of the new serving cell. On cell re-selection, timer $T_n$ shall be continued to be run for the corresponding cells but the criteria given above shall be evaluated with parameters broadcast in the new serving cell if the corresponding cells are neighbours of the new serving cell.

…

**3. The cell selection criterion S used for cell reselection is fulfilled when:**

| | |
|---|---|
| for FDD cells: | Srxlev > 0 AND Squal > 0 |
| for TDD cells: | Srxlev > 0 |
| for GSM cells: | Srxlev > 0 |

Where :

$Squal = Q_{qualmeas} - Qqualmin$

$Srxlev = Q_{rxlevmeas} - Qrxlevmin - Pcompensation$

…

4. The UE shall perform ranking of all cells that fulfil the S criterion among

- all cells that have the highest HCS_PRIO among those cells that fulfil the criterion H >= 0**.** Note that this rule is not valid when UE high-mobility is detected.
- all cells, not considering HCS priority levels, if no cell fulfil the criterion H >= 0. This case is also valid when it is indicated in system information that HCS is not used, that is when serving cell does not belong to a hierarchical cell structure.

The cells shall be ranked according to the R criteria.

The best ranked cell is the cell with the highest R value.

5. If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell.

In all cases, the UE shall reselect the new cell, only if the following conditions are met:

- the new cell is better ranked than the serving cell during a time interval Treselection.
- more than 1 second has elapsed since the UE camped on the current serving cell.

…

6. The *cell reselection* process in Connected Mode is the same as *cell reselection evaluation process* used for idle mode, described in subclause 5.2.6 of 25.304.

7. A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

…

1> Re-entering service area:

…

1> RLC unrecoverable error:

…

1> Cell reselection:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:

3> if the UE is in CELL_FACH or CELL_PCH state and the UE performs cell re-selection; or

3> if the UE is in CELL_FACH state and the variable C_RNTI is empty:

4> perform cell update using the cause "cell reselection".

Reference

3GPP TS 25.304 clause 5.2.6.1.4

3GPP TS 25.304 clause 5.4.3

3GPP TS 25.331 clause 8.3.1

### 8.3.1.24.3 Test purpose

1. To confirm that the UE can read HCS related SIB information and act upon all HCS parameters in CELL_PCH state.
2. To confirm that the UE executes a cell update procedure after the successful reselection of another UTRA cell in CELL_PCH state.
3. To confirm that the UE sends the correct uplink response message when executing cell update procedure due to cell reselection.

### 8.3.1.24.4 Method of test

Initial Condition

System Simulator: 3 cells – Cell 1 is active with downlink transmission power shown in Column To in table 8.3.1.24-1. Cell 2 and 3 are switched off.

UE: CELL_PCH (state 6-12) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Specific Message Content

For system information blocks 4 and 11 for Cell 1 (gives IE's which are different from defaults given in 34.108 sec 6.1) to be transmitted before idle update preamble.

Contents of System Information Block type 4 (FDD)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | FDD |
| - Sintersearch | 0 dB |
| - SsearchHCS | 17 (35 dB) |
| - RAT List | This parameter is configurable |
| - $S_{limit,SearchRAT}$ | 0 |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - $Qhyst1_S$ | 5 (gives actual value of 10 dB) |
| - $Qhyst2_S$ | Not Present |
| - HCS Serving cell information | |
| -HCS Priority | 6 |
| - Q HCS | 40 (results in actual value of –75) |
| - TcrMax | Not Present |

Contents of System Information Block type 4 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | TDD |
| - SsearchHCS | 23 (47 dB) |
| - RAT List | This parameter is configurable |
| - Qrxlevmin | -52 (-103 dBm) |
| - $Qhyst1_S$ | 5 (gives actual value of 1 dB) |
| - HCS Serving cell information | |
| -HCS Priority | 6 |
| - Q HCS | 40 (results in actual value of –75) |
| - TcrMax | Not Present |

Contents of System Information Block type 11 (FDD) (Cell 1)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |

| Information Element | Value/remark |
|---|---|
| - Qrxlevmin | -58 (-115 dBm) |

Contents of System Information Block type 11 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 1)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS34.108: Default settings for cell No.1 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS 34.108: Default settings for cell No.2 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - Qoffset$1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS 34.108: Default settings for cell No.3 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - Qoffset$1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |

Test Procedure

**Table 8.3.1.24-1**

| Parameter | Unit | Cell 1 | | | Cell 2 | | | Cell 3 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| Cell id in system information | | 1 | | | 2 | | | 3 | | |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | Mid Range Test Frequency | | | Mid Range Test Frequency | | |
| HCS Priority | | 6 | | | 7 | | | 7 | | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | -60 | -60 | -82 | -82 | -68 | -82 | -68 | -68 |
| P-CCPCH RSCP (TDD) | dBm | -61 | -61 | -61 | -80 | -80 | -67 | -80 | -73 | -73 |
| H* (During penalty time) | | 15 | 15 | -inf | -inf | -inf | 7 | -inf | -inf | 7 |
| H* (After PenaltyTime) | | 15 | 15 | 15 | -7 | -7 | 7 | -7 | 7 | 7 |
| R* (During PenaltyTime) | | n.a. | n.a. | n.a. | n.a. | n.a. | -inf | n.a. | n.a. | -58 |
| R* (After PenaltyTime) | | n.a. | n.a. | n.a. | n.a. | n.a. | -48 | n.a. | n.a. | -58 |

(*) Note: this parameter is calculated internally in the UE and is only shown for clarification of the test procedure.

The UE is in the CELL_PCH state, camping onto cell 1. SS configures Cell 2 and 3 with power levels given in column "TO" and starts to broadcast BCCH on the primary CCPCH in cell 2 & 3. UE shall remain camped on the Cell 1 even after expiry of penalty time i.e. 40 seconds. SS sets downlink transmission power settings according to columns "T1" in table 8.3.1.24-1. The UE shall find cell 3 to be more suitable for service and hence perform a cell reselection to cell 3 after at-least 40 Seconds (Penalty Time) after the power levels have been changed. After the completion of cell reselection, the UE shall move to CELL_FACH state and transmit a CELL UPDATE message to the SS on the uplink CCCH of cell 3 and set IE "Cell update cause" to "Cell Reselection". After SS receives this message, it transmits a CELL UPDATE CONFIRM message, which includes the IE "RRC State Indicator" set to "CELL_PCH", to the UE on the downlink CCCH. UE shall return to CELL_PCH state in Cell 3 and will not transmit anything on PRACH. SS then sets downlink transmission power settings according to columns "T2" in table 8.3.1.24-1. The UE shall find cell 2 to be more suitable for service after the expiry of penalty time and hence perform a cell reselection to cell 2 after the power levels have been changed. After the completion of cell reselection, the UE shall move to CELL_FACH state and transmit a CELL UPDATE message to the SS on the uplink CCCH of cell 2 and set IE "Cell update cause" to "Cell Reselection". After the SS receives this message, it transmits a CELL UPDATE CONFIRM message, which includes the IE "RRC State Indicator" set to "CELL_PCH", to the UE on the downlink DCCH. UE shall return to CELL_PCH state in Cell 2 and will not transmit anything on PRACH.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_PCH state in cell 1 |
| 2 | ← | | BCCH | SS applies the downlink transmission power settings, according to the values in columns "T0" of table 8.3.1.24-1. The SS starts to broadcast BCCH on the primary CCPCH in cell 2 and Cell 3. The UE shall still find Cell 1 best for service even after penalty time of 40 seconds, and shall remain in Cell 1 in CELL_PCH State |
| 3 | | | | SS changes the power levels as per column 'T1' in the table 8.3.1.24-1. For the time equal to Penalty time 40 Seconds, after the change in power levels, the UE shall still find Cell 1 as best for service and remain in cell 1. After Penalty time of 40 Seconds, UE shall find Cell 3 better for service and perform a reselection. SS waits for the maximum duration required for the UE to camp to cell 3. |
| 4 | → | | CELL UPDATE | The UE moves to CELL_FACH state and transmits this message with the IE "Cell update cause" set to "cell reselection". Received in Cell 3 |
| 5 | ← | | CELL UPDATE CONFIRM | Message sent on CCCH with IE "RRC State Indicator" is set to "CELL_PCH". |
| 7 | | | | SS changes the power levels as per column 'T2' in the table 8.3.1.24-1. SS Checks that no cell update message is received during penalty time as the UE shall find Cell 2 better for service and perform a reselection after the expiry of penalty time. SS waits for the maximum duration required for the UE to camp to cell 2. |
| 8 | → | | CELL UPDATE | The UE moves to CELL_FACH state and transmits this message with the IE "Cell update cause" set to "cell reselection". Received in Cell 2 |
| 9 | ← | | CELL UPDATE CONFIRM | Message sent on DCCH with IE "RRC State Indicator" is set to "CELL_PCH". |

Specific Message Contents

The contents of system information block 4 and 11 messages are identical as system information block 4 and 11 messages as found in 34.108 clause 6.1 with the following exceptions:

Contents of System Information Block type 4 (FDD) (Cell 2 and 3)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | FDD |
| - Sintersearch | 0 dB |
| - SsearchHCS | 17 (35 dB) |
| - RAT List | This parameter is configurable |
| - $S_{limit,SearchRAT}$ | 0 |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - $Qhyst1_S$ | 5 (gives actual value of 10 dB) |
| - $Qhyst2_S$ | Not Present |
| - HCS Serving cell information | |
| -HCS Priority | 7 |
| - Q HCS | 40 (results in actual value of –75) |
| - TcrMax | Not Present |

Contents of System Information Block type 4 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 2 and 3)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | TDD |
| - Sintersearch | 0 dB |
| - SsearchHCS | 23 (47 dB) |
| - RAT List | This parameter is configurable |
| - Qrxlevmin | -52 (-103 dBm) |
| - $Qhyst1_S$ | 5 (gives actual value of 10 dB) |
| - HCS Serving cell information | |
| -HCS Priority | 7 |
| - Q HCS | 40 (results in actual value of –75) |
| - TcrMax | Not Present |

Contents of System Information Block type 11 (FDD) (Cell 2)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |

| Information Element | Value/remark |
|---|---|
| - Qrxlevmin | -58 (-115 dBm) |

Contents of System Information Block type 11 (3.84 Mcps TDD, 1.28 Mcps TDD 7.68 Mcps TDD) (Cell 2)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS34.108: Default settings for cell No.2 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS 34.108: Default settings for cell No.1 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS 34.108: Default settings for cell No.3 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |

| Information Element | Value/remark |
|---|---|
| - Qrxlevmin | -52 (-103 dBm) |

Contents of System Information Block type 11 (FDD) (Cell 3)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |

| Information Element | Value/remark |
|---|---|
| - Qrxlevmin | -58 (-115 dBm) |

Contents of System Information Block type 11 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 3)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS34.108: Default settings for cell No.3 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS 34.108: Default settings for cell No.1 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1.4 in TS 34.108: Default settings for cell No.2 (TDD) |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 30 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 40 (results in actual value of –75) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | inf |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |

CELL UPDATE

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |

CELL UPDATE CONFIRM (Step 5 and 8)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

#### 8.3.1.24.5 Test requirement

After step 3 the UE shall reselect to cell 3 and then it shall transmit a CELL UPDATE message which, sets the value "cell reselection" in IE "Cell update cause".

After step 6 the UE shall reselect to cell 2 and then it shall transmit a CELL UPDATE message which, sets the value "cell reselection" in IE "Cell update cause".

### 8.3.1.25 CELL UPDATE: Radio Link Failure (T314=0, T315=0)

#### 8.3.1.25.1 Definition

#### 8.3.1.25.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:

3> if the UE is in CELL_DCH state and the criteria for radio link failure is met as specified in TS 25.331 subclause 8.5.6; or

…

4> perform cell update using the cause "radio link failure".

When initiating cell update procedure, the UE shall:

…

1> if the UE is in CELL_DCH state:

…

2> if the stored values of the timer T314 and timer T315 are both equal to zero; or

…

3> release all its radio resources;

3> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;

3> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

3> clear the variable ESTABLISHED_RABS;

3> enter idle mode;

3> perform other actions when entering idle mode from connected mode as specified in TS 25.331 subclause 8.5.2;

3> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.1.2

### 8.3.1.25.3 Test purpose

1. To confirm that the UE releases all resources and enters idle mode when there is a radio link failure.

### 8.3.1.25.4 Method of test

Initial Condition

System Simulator: 2 cells (Cell 1 and Cell 2 are active).

UE: PS-DCCH+DTCH_DCH (state 6-10) or CS-DCCH+DTCH_DCH (state 6-9) or PS+CS-DCCH+DTCH_DCH (state 6-14) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) and services supported by the UE. If UE supports PS+CS but only supports streaming service in CS domain then state 6-9, 6-10 are applied.

Specific Message Content

For SIB type 1 message to be transmitted throughout the test, use the message titled “System Information Block type 1 (supported PLMN type is GSM-MAP)” as found in TS 34.108 clause 6, with the following exception.

| Information Element | Value/remark |
|---|---|
| - T314 | 0 |
| - T315 | 0 |

Test Procedure

**Table 8.3.1.25**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -75 | -60 |

Table 8.3.1.25 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked ‘T0’ denote the initial conditions.

The UE is brought to CELL_DCH state in a cell 1 after making a successful outgoing call attempt. After the call has been established, SS configures its downlink transmission power settings according to column ‘T1’ in table 8.3.1.25. The UE shall detect a radio link failure in cell 1 and indicate to the non-access stratum the release of all the radio bearers. Then it shall attempt to re-select to cell 2. After that, it shall then enter idle mode state. SS calls for generic procedure C.1 to check that UE is in Idle Mode state in cell 2.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | In the initial set up procedure, the SS shall request UE to set timer T314 and T315 to 0. |
| 2 | | | | SS configures cell 1 and 2 according to column 'T1' in table 8.3.1.25. |
| 3 | | | | SS waits for 5 seconds. |
| 4 | ←→ | | CALL C.1 | SS execute this procedure in cell 2. If the test result of C.1 indicates that UE is in Idle Mode state, the test passes, otherwise it fails. |

Specific Message Contents

None.

8.3.1.25.5 Test requirement

After step 2, the UE shall release all its radio bearers.

After step 3, the UE shall be in idle mode state in cell 2.

## 8.3.1.26 Cell Update: Radio Link Failure (T314>0, T315=0), PS RAB established

8.3.1.26.1 Definition

8.3.1.26.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in CELL_DCH state; and

2> if the criteria for radio link failure is met as specified in TS 25.331 subclause 8.5.6:

3> perform cell update using the cause "radio link failure".

…

When initiating the cell update procedure, the UE shall:

1> stop timer T305;

1> if the UE is in CELL_DCH state:

2> in the variable RB_TIMER_INDICATOR, set the IE "T314 expired" and the IE "T315 expired" to FALSE;

2> if the stored values of the timer T314 and timer T315 are both equal to zero; or

2> if the stored value of the timer T314 is equal to zero and there are no radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315":

…

2> if the stored value of the timer T314 is equal to zero:

…

2> if the stored value of the timer T315 is equal to zero:

3> release all radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315";

3> in the variable RB_TIMER_INDICATOR set the IE "T315 expired" to TRUE.

2> if the stored value of the timer T314 is greater than zero:

3> if there are radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314":

4> start timer T314.

3> if there are no radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314" or "useT315":

4> start timer T314.

2> if the stored value of the timer T315 is greater than zero:

…

2> for the released radio bearer(s):

3> delete the information about the radio bearer from the variable ESTABLISHED_RABS;

3> when all radio bearers belonging to the same radio access bearer have been released:

4> indicate local end release of the radio access bearer to upper layers using the CN domain identity together with the RAB identity stored in the variable ESTABLISHED_RABS;

4> delete all information about the radio access bearer from the variable ESTABLISHED_RABS.

2> select a suitable UTRA cell according to TS 25.304;

2> set the variable ORDERED_RECONFIGURATION to FALSE.

1> set the variables PROTOCOL_ERROR_INDICATOR, FAILURE_INDICATOR, UNSUPPORTED_CONFIGURATION and INVALID_CONFIGURATION to FALSE;

1> set the variable CELL_UPDATE_STARTED to TRUE;

1> if the UE is not already in CELL_FACH state:

2> move to CELL_FACH state;

2> select PRACH according to s TS 25.331 ubclause 8.5.17;

2> select Secondary CCPCH according to s TS 25.331 ubclause 8.5.19;

2> use the transport format set given in system information as specified in TS 25.331 subclause 8.6.5.1.

1> if the UE performs cell re-selection:

2> clear the variable C_RNTI; and

2> stop using that C_RNTI just cleared from the variable C_RNTI in MAC.

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> in case of a cell update procedure:

2> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the CELL UPDATE message for transmission on the uplink CCCH.

1> set counter V302 to 1;

1> start timer T302 when the MAC layer indicates success or failure in transmitting the message.

…

If the received CELL UPDATE CONFIRM message would cause the UE to transit to CELL_DCH state; and

1> in case of a received CELL UPDATE CONFIRM message:

2> if the UE failed to establish the physical channel(s) indicated in the received CELL UPDATE CONFIRM message

…

the UE shall:

1> if the variable ORDERED_RECONFIGURATION is set to TRUE caused by the received CELL UPDATE CONFIRM message in case of a cell update procedure:

2> set the variable ORDERED_RECONFIGURATION to FALSE.

1> if V302 is equal to or smaller than N302:

2> select a suitable UTRA cell according to TS 25.304;

2> set the contents of the CELL UPDATE message according to TS 25.331 subclause 8.3.1.3, except for the IE "Cell update cause" which shall be set to "Radio link failure";

2> submit the CELL UPDATE message for transmission on the uplink CCCH;

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302:

…

Reference

3GPP TS 25.331 clause 8.3.1

### 8.3.1.26.3 Test purpose

1. To confirm that the UE shall indicate to the non-access stratum the release of radio access bearer which is associated with T315 and try to find a new cell after detecting that a radio link failure has occurred.

### 8.3.1.26.4 Method of test

Initial Condition

System Simulator: 2 cells (Cell 1 and cell 2 are active).

UE: PS_DCCH+DTCH_DCH (state 6-10) in cell 1 or PS+CS-DCCH+DTCH_DCH (state 6-14) in cell 1, if UE supports both CS and PS domains.

Specific Message Content

For SIB type 1 message to be transmitted throughout the test, use the message titled “System Information Block type 1 (supported PLMN type is GSM-MAP)” as found in TS 34.108 clause 6, with the following exception.

| Information Element | Value/remark |
|---|---|
| - T315 | 0 |

Test Procedure

**Table 8.3.1.26**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -75 | -60 |

Table 8.3.1.26 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked "T0" denote the initial conditions.

The UE is brought to CELL_DCH state in a cell 1 after making a successful outgoing call attempt. After the call has been established, SS configures its downlink transmission power settings according to column "T1" in table 8.3.1.26. The UE shall detect a radio link failure in cell 1.

UE shall release of the radio bearer which is associated with T315, if the latter has been set up in the initial condition.

Then it shall attempt to re-select to cell 2. After that, it shall then enter CELL_FACH state and transmit CELL UPDATE on the uplink CCCH to SS. The SS transmits CELL UPDATE CONFIRM message which includes dedicated physical channel parameters on downlink DCCH. Then the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH.

SS transmits COUNTER CHECK message to UE. UE shall transmit a COUNTER CHECK RESPONSE message back to SS.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures cell 1 and 2 according to column "T1" in table 8.3.1.26. SS starts to listen to the uplink CCCH of cell 2. |
| 2 | | | | The UE detects the radio link failure. |
| 3 | → | | CELL UPDATE | The UE shall find a new cell 2 and the value "radio link failure" shall be set in IE "Cell update cause". |
| 4 | ← | | CELL UPDATE CONFIRM | Including dedicated physical channel parameters. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 6 | ← | | COUNTER CHECK | SS sent the COUNT-C info for the RBs that were established in the initial condition. |
| 7 | → | | COUNTER CHECK RESPONSE | |

Specific Message Contents

CELL UPDATE (Step 3)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| -SRNC Identity | Check to see if set to value assigned in cell 1. |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to 'radio link failure' |
| RB timer indicator | |
| - T314 expired | FALSE |
| - T315 expired | TRUE |

CELL UPDATE CONFIRM (Step 4)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

If the initial condition of the UE is in state 6-10, then

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | Same as the set defined in RRC CONNECTION SETUP message: UM (Transition to CELL_DCH) found in TS 34.108 clause 9. |
| Downlink information common for all radio links | Same as the set defined in RRC CONNECTION SETUP message: UM (Transition to CELL_DCH) found in TS 34.108 clause 9. |
| Downlink information per radio link list | Same as the set defined in RRC CONNECTION SETUP message: UM (Transition to CELL_DCH) found in TS 34.108 clause 9. |

If the initial condition of the UE is in state 6-14, then

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A1, A2, A7 or A8. |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A1, A2, A7 or A8. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A1, A2, A7 or A8. |

COUNTER CHECK (Step 6)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Calculated value |
| RB COUNT-C MSB information | |
| - RB identity | Set to the RB identity that was release by the UE upon radio link failure |
| - COUNT-C MSB uplink | Arbitrary COUNT-C MSB |
| - COUNT-C MSB downlink | Arbitrary COUNT-C MSB |

COUNTER CHECK RESPONSE (Step 7)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Not checked |
| RB COUNT-C information | |
| - RB identity | Check to see if set to the RB identity that was release by the UE upon radio link failure |
| - COUNT-C uplink | Check to see if COUNT-C MSB is set to arbitrary value given in step 13 and LSB is fill with '0' |
| - COUNT-C downlink | Check to see if COUNT-C MSB is set to arbitrary value given in step 13 and LSB is fill with '0' |

#### 8.3.1.26.5 Test requirement

After step 2, the UE shall detect the presence of cell 2, perform cell re-selection and transmit a CELL UPDATE message.

After step 4, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 6, the UE shall transmit a COUNTER CHECK RESPONSE message with the MSB part of the COUNT-C values set identical to COUNT-C MSB values in the COUNTER CHECK message in step 6.

### 8.3.1.27 Cell Update: Radio Link Failure (T314=0, T315>0), CS RAB

#### 8.3.1.27.1 Definition

#### 8.3.1.27.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in CELL_DCH state; and

2> if the criteria for radio link failure is met as specified in TS 25.331 subclause 8.5.6:

3> perform cell update using the cause "radio link failure".

…

When initiating the cell update procedure, the UE shall:

1> stop timer T305;

1> if the UE is in CELL_DCH state:

2> in the variable RB_TIMER_INDICATOR, set the IE "T314 expired" and the IE "T315 expired" to FALSE;

…

2> if the stored values of the timer T314 and timer T315 are both equal to zero; or

2> if the stored value of the timer T314 is equal to zero and there are no radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315":

3> release all its radio resources;

3> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;

3> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

3> clear the variable ESTABLISHED_RABS;

3> enter idle mode;

3> perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;

3> and the procedure ends.

2> for the released radio bearer(s):

3> delete the information about the radio bearer from the variable ESTABLISHED_RABS;

3> when all radio bearers belonging to the same radio access bearer have been released:

4> indicate local end release of the radio access bearer to upper layers using the CN domain identity together with the RAB identity stored in the variable ESTABLISHED_RABS;

4> delete all information about the radio access bearer from the variable ESTABLISHED_RABS.

2> select a suitable UTRA cell according to TS 25.304;

2> set the variable ORDERED_RECONFIGURATION to FALSE.

…

Reference

3GPP TS 25.331 clause 8.3.1

### 8.3.1.27.3 Test purpose

1. To confirm that the UE release radio access bearer which is associated with T314 and try to find a new cell after detecting that a radio link failure has occurred.

### 8.3.1.27.4 Method of test

Initial Condition

System Simulator: 2 cells (Cell 1 and Cell 2 are active).

UE: CS_DCCH+DTCH_DCH (state 6-9).

Specific Message Content

For SIB type 1 message to be transmitted throughout the test, use the message titled “System Information Block type 1 (supported PLMN type is GSM-MAP)” as found in TS 34.108 clause 6, with the following exception.

| Information Element | Value/remark |
|---|---|
| - T314 | 0 |

Test Procedure

**Table 8.3.1.27**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -75 | -60 |

Table 8.3.1.27 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked 'T0' denote the initial conditions.

The UE is brought to CELL_DCH state in a cell 1 after making a successful outgoing call attempt. After the call has been established, SS configures its downlink transmission power settings according to column 'T1' in table 8.3.1.27. The UE shall detect a radio link failure in cell 1.

The UE shall release radio bearer associated with T314 and enter idle mode state. SS calls for generic procedure C.1 to check that UE is in Idle Mode state in cell 2.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures cell 1 and 2 according to column 'T1' in table 8.3.1.27. SS starts to listen to the uplink CCCH of cell 2. |
| 2 | | | | The UE detects the radio link failure. |
| 3 | ←→ | | CALL C.1 | SS execute this procedure in cell 2. If the test result of C.1 indicates that UE is in Idle Mode state, the test passes. Otherwise it fails. |

Specific Message Contents

None.

8.3.1.27.5 Test requirement

After step 2, the UE shall detect the presence of cell 2 and enter idle mode state in cell 2.

## 8.3.1.28 Cell Update: Radio Link Failure (T314=0, T315>0), PS RAB

8.3.1.28.1 Definition

8.3.1.28.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in CELL_DCH state; and

2> if the criteria for radio link failure is met as specified in TS 25.331 subclause 8.5.6:

3> perform cell update using the cause "radio link failure".

…

When initiating the cell update procedure, the UE shall:

1> stop timer T305;

1> if the UE is in CELL_DCH state:

2> in the variable RB_TIMER_INDICATOR, set the IE "T314 expired" and the IE "T315 expired" to FALSE;

2> if the stored values of the timer T314 and timer T315 are both equal to zero; or

2> if the stored value of the timer T314 is equal to zero and there are no radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315":

…

2> if the stored value of the timer T314 is equal to zero:

3> release all radio bearers, associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314";

3> in the variable RB_TIMER_INDICATOR set the IE "T314 expired" to TRUE.

…

2> if the stored value of the timer T315 is greater than zero:

3> if there are radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315":

4> start timer T315.

2> for the released radio bearer(s):

3> delete the information about the radio bearer from the variable ESTABLISHED_RABS;

3> when all radio bearers belonging to the same radio access bearer have been released:

4> indicate local end release of the radio access bearer to upper layers using the CN domain identity together with the RAB identity stored in the variable ESTABLISHED_RABS;

4> delete all information about the radio access bearer from the variable ESTABLISHED_RABS.

2> select a suitable UTRA cell according to TS 25.304;

2> set the variable ORDERED_RECONFIGURATION to FALSE.

…

Reference

3GPP TS 25.331 clause 8.3.1

### 8.3.1.28.3 Test purpose

1. To confirm that the UE release radio access bearer which is associated with T314 and try to find a new cell after detecting that a radio link failure has occurred.

8.3.1.28.4 Method of test

Initial Condition

System Simulator: 2 cells (Cell 1 and Cell 2 are active).

UE: PS_DCCH+DTCH_DCH (state 6-10) in cell 1 or PS+CS-DCCH+DTCH_DCH (state 6-14) in cell 1, if UE supports both CS and PS domains.

Specific Message Content

For SIB type 1 message to be transmitted throughout the test, use the message titled "System Information Block type 1 (supported PLMN type is GSM-MAP)" as found in TS 34.108 clause 6, with the following exception.

| Information Element | Value/remark |
|---|---|
| - T314 | 0 |

Test Procedure

**Table 8.3.1.28**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -75 | -60 |

Table 8.3.1.28 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked 'T0' denote the initial conditions.

The UE is brought to CELL_DCH state in a cell 1 after making a successful outgoing call attempt. After the call has been established, SS configures its downlink transmission power settings according to column 'T1' in table 8.3.1.28. The UE shall detect a radio link failure in cell 1.

The UE shall attempt to re-select to cell 2. After that, it shall then enter CELL_FACH state and transmit CELL UPDATE on the uplink CCCH to SS. The SS transmits CELL UPDATE CONFIRM message which includes dedicated physical channel parameters on downlink DCCH. Then the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH. SS transmits COUNTER CHECK message to UE. UE shall transmit a COUNTER CHECK RESPONSE message back to SS.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures cell 1 and 2 according to column 'T1' in table 8.3.1.28. SS starts to listen to the uplink CCCH of cell 2. |
| 2 | | | | The UE detects the radio link failure. |
| 3 | → | | CELL UPDATE | The UE shall find a new cell 2 and the value "radio link failure" shall be set in IE "Cell update cause". |
| 4 | ← | | CELL UPDATE CONFIRM | See message content. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 6 | ← | | COUNTER CHECK | SS sent the COUNT-C info for the RBs that were established in the initial condition. |
| 7 | → | | COUNTER CHECK RESPONSE | |

Specific Message Contents

CELL UPDATE (Step 3)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to 'radio link failure' |
| RB timer indicator | |
| - T314 expired | TRUE |
| - T315 expired | FALSE |

CELL UPDATE CONFIRM (Step 4)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4, with the following exception: A non-zero value in the range of 0-16777216 used for cell 2. |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |

COUNTER CHECK (Step 6)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Calculated value |
| RB COUNT-C MSB information | |
| - RB identity | Set to the RB identity that was set up in the initial condition |
| - COUNT-C MSB uplink | Set to the value stored in the SS |
| - COUNT-C MSB downlink | Set to the value stored in the SS |

COUNTER CHECK RESPONSE (Step 7)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Not checked |
| RB COUNT-C information | Not present |

#### 8.3.1.28.5 Test requirement

After step 2, the UE shall detect the presence of cell 2, perform cell re-selection and transmit a CELL UPDATE message.

At step 5, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

At step 7, the UE shall transmit a COUNTER CHECK RESPONSE message without including IE “RB COUNT-C information”.

### 8.3.1.29 Cell Update: Radio Link Failure (T314>0, T315>0), CS RAB

#### 8.3.1.29.1 Definition

#### 8.3.1.29.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in CELL_DCH state; and

2> if the criteria for radio link failure is met as specified in TS 25.331 subclause 8.5.6:

3> perform cell update using the cause "radio link failure".

…

When initiating the cell update procedure, the UE shall:

…

1> if the UE is in CELL_DCH state:

2> in the variable RB_TIMER_INDICATOR, set the IE "T314 expired" and the IE "T315 expired" to FALSE;

…

2> if the stored value of the timer T314 is greater than zero:

3> if there are radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314":

4> start timer T314.

3> if there are no radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314" or "useT315":

4> start timer T314.

2> if the stored value of the timer T315 is greater than zero:

3> if there are radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315":

4> start timer T315.

…

Upon expiry of timer T314 the UE shall:

1> if timer T302 is running:

…

1> if timer T302 is not running and timer T315 is running:

2> set IE "T314 expired" in variable RB_TIMER_INDICATOR to TRUE;

2> release locally all radio bearers which are associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314";

2> indicate release of those radio access bearers to upper layers;

2> delete all information about those radio access bearers from the variable ESTABLISHED_RABS.

1> if timers T302 and T315 are not running:

2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;

2> clear the variable PDCP_SN_INFO;

2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;

2> release all its radio resources;

2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;

2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

2> clear the variable ESTABLISHED_RABS;

2> set the variable CELL_UPDATE_STARTED to FALSE;

2> enter idle mode;

2> other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;

2> and the procedure ends.

Upon expiry of timer T315 the UE shall:

1> if timer T302 is running:

…

1> if timer T302 is not running and timer T314 is running:

2> set IE "T315 expired" in variable RB_TIMER_INDICATOR to TRUE;

2> release locally all radio bearers which are associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "use T315";

2> indicate release of those radio access bearers to upper layers;

2> delete all information about those radio access bearers from the variable ESTABLISHED_RABS.

1> if timers T302 and T314 are not running:

2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;

2> clear the variable PDCP_SN_INFO;

2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;

2> release all its radio resources;

2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;

2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

2> clear the variable ESTABLISHED_RABS;

2> set the variable CELL_UPDATE_STARTED to FALSE;

2> enter idle mode;

2> other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;

2> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.1

### 8.3.1.29.3 Test purpose

1. To confirm that the UE shall indicate to the non-access stratum the release of radio access bearer which is associated with T314 and try to find a new cell after detecting that a radio link failure has occurred.

2. To confirm that the UE enters idle mode after T314 expires and T302 and T315 are not running.

### 8.3.1.29.4 Method of test

Initial Condition

System Simulator: 1 cell (Cell 1 is active).

UE: CS_DCCH+DTCH_DCH (state 6-9).

Specific Message Content

For SIB type 1 message to be transmitted throughout the test, use the message titled "System Information Block type 1 (supported PLMN type is GSM-MAP)" as found in TS 34.108 clause 6, with the following exception.

| Information Element | Value/remark |
|---|---|
| - T314 | 12 |
| - T315 | 30 |

Test Procedure

**Table 8.3.1.29**

| Parameter | Unit | Cell 1 | |
|---|---|---|---|
| | | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF |

The UE is brought to CELL_DCH state after making a successful outgoing call attempt. After the call has been established, SS configures its downlink transmission power settings according to column 'T1' in table 8.3.1.29. The UE shall detect a radio link failure in cell 1.

The SS shall wait for 12s (see Note 1) and then configure its downlink transmission power settings according to column 'T0' in table 8.3.1.29. The UE shall release radio bearer associated with T314 and enter idle mode state. SS calls for generic procedure C.1 to check that UE is in Idle Mode state in cell 1.

NOTE 1: Considering the timer tolerance of the UE, T314 may expire between 12s±0.3s, therefore the SS must wait for at least 12.3s before it reconfigures it downlink transmission power. Since SS has a timer tolerance of 10% or 2*TTI+55ms (consider the greater value of the two), the test case shall set the SS to reconfigure the power level 13.67s after the SS configures the power settings according to column 'T1' in table 8.3.1.29.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures cell 1 according to column 'T1' in table 8.3.1.29. |
| 2 | | | | SS waits for 12s after the completion of step 1 and then configures cell 1 according to column 'T0' in table 8.3.1.29. |
| 3 | ←→ | | CALL C.1 | SS execute this procedure in cell 1. If the test result of C.1 indicates that UE is in Idle Mode state, the test passes. Otherwise it fails. |

Specific Message Contents

None.

8.3.1.29.5 Test requirement

After step 2, the UE shall detect the presence of cell 1 and enter idle mode state in cell 1.

## 8.3.1.30 Cell Update: Radio Link Failure (T314>0, T315>0), PS RAB

### 8.3.1.30.1 Definition

### 8.3.1.30.2 Conformance requirement

A UE shall initiate the cell update procedure in the following cases:

1> Uplink data transmission:

…

1> Paging response:

…

1> Radio link failure:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in CELL_DCH state; and

2> if the criteria for radio link failure is met as specified in TS 25.331 subclause 8.5.6:

3> perform cell update using the cause "radio link failure".

…

When initiating the cell update procedure, the UE shall:

…

1> if the UE is in CELL_DCH state:

2> in the variable RB_TIMER_INDICATOR, set the IE "T314 expired" and the IE "T315 expired" to FALSE;

…

2> if the stored value of the timer T314 is greater than zero:

3> if there are radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314":

4> start timer T314.

3> if there are no radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314" or "useT315":

4> start timer T314.

2> if the stored value of the timer T315 is greater than zero:

3> if there are radio bearers associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT315":

4> start timer T315.

…

Upon expiry of timer T314 the UE shall:

1> if timer T302 is running:

…

1> if timer T302 is not running and timer T315 is running:

2> set IE "T314 expired" in variable RB_TIMER_INDICATOR to TRUE;

2> release locally all radio bearers which are associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "useT314";

2> indicate release of those radio access bearers to upper layers;

2> delete all information about those radio access bearers from the variable ESTABLISHED_RABS.

1> if timers T302 and T315 are not running:

2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;

2> clear the variable PDCP_SN_INFO;

2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;

2> release all its radio resources;

2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;

2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

2> clear the variable ESTABLISHED_RABS;

2> set the variable CELL_UPDATE_STARTED to FALSE;

2> enter idle mode;

2> other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;

2> and the procedure ends.

Upon expiry of timer T315 the UE shall:

1> if timer T302 is running:

…

1> if timer T302 is not running and timer T314 is running:

2> set IE "T315 expired" in variable RB_TIMER_INDICATOR to TRUE;

2> release locally all radio bearers which are associated with any radio access bearers for which in the variable ESTABLISHED_RABS the value of the IE "Re-establishment timer" is set to "use T315";

2> indicate release of those radio access bearers to upper layers;

2> delete all information about those radio access bearers from the variable ESTABLISHED_RABS.

1> if timers T302 and T314 are not running:

2> clear the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO;

2> clear the variable INTEGRITY_PROTECTION_ACTIVATION_INFO;

2> clear the variable PDCP_SN_INFO;

2> clear the entry for the CELL UPDATE CONFIRM message in the table "Rejected transactions" in the variable TRANSACTIONS;

2> release all its radio resources;

2> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;

2> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

2> clear the variable ESTABLISHED_RABS;

2> set the variable CELL_UPDATE_STARTED to FALSE;

2> enter idle mode;

2> other actions the UE shall perform when entering idle mode from connected mode are specified in subclause 8.5.2;

2> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.1

### 8.3.1.30.3 Test purpose

1. To confirm that the UE shall indicate to the non-access stratum the release of radio access bearer which is associated with T315 and try to find a new cell after detecting that a radio link failure has occurred.
2. To confirm that the UE shall indicate to the non-access stratum the release of radio access bearer which is associated with T314 and try to find a new cell after detecting that a radio link failure has occurred. (This test purpose is only applicable when CS RAB is set up in the initial condition.)
3. To confirm that the UE enters idle mode after T315 expires and T302 and T314 are not running.

### 8.3.1.30.4 Method of test

Initial Condition

System Simulator: 1 cell (Cell 1 is active).

UE: PS_DCCH+DTCH_DCH (state 6-10 or PS+CS-DCCH+DTCH_DCH (state 6-14), as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) and services supported by the UE. If UE supports PS+CS but only supports streaming service in CS domain then state 6-10 is applied.

Specific Message Content

For SIB type 1 message to be transmitted throughout the test, use the message titled “System Information Block type 1 (supported PLMN type is GSM-MAP)” as found in TS 34.108 clause 6, with the following exception.

| Information Element | Value/remark |
|---|---|
| - T314 | 12 |
| - T315 | 60 |
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

Test Procedure

**Table 8.3.1.30**

| Parameter | Unit | Cell 1 | |
|---|---|---|---|
| | | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF |

The UE is brought to CELL_DCH state after making a successful outgoing call attempt. After the call has been established, SS configures its downlink transmission power settings according to column 'T1' in table 8.3.1.30. The UE shall detect a radio link failure in cell 1.

Case A (the initial condition of the UE is in state 6-10):

The SS shall wait for 69.3s (see Note 2) and then configure its downlink transmission power settings according to column 'T0' in table 8.3.1.30. The UE shall release radio bearer associated with T315 and enter idle mode state. SS calls for generic procedure C.1 to check that UE is in Idle Mode state in cell 1.

Case B (the initial condition of the UE is in state 6-14):

The SS shall wait for 16.5s (see Note 1) and then configure its downlink transmission power settings according to column 'T0' in table 8.3.1.30. The UE shall release radio bearer associated with T314 and attempt to re-select to cell 1. After that, it shall then enter CELL_FACH state and transmit CELL UPDATE on the uplink CCCH to SS. The SS transmits CELL UPDATE CONFIRM message which includes dedicated physical channel and transport channel parameters on downlink DCCH. Then the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH. The UE may also optionally send "Signalling Connection Release Indicator for CS domain, which can occur before or after TRANSPORT CHANNEL RECONFIGURATION COMPLETE message. SS transmits COUNTER CHECK message to UE. UE shall transmit a COUNTER CHECK RESPONSE message back to SS. Then SS configures its downlink transmission power settings according to column 'T1' in table 8.3.1.30. The UE shall detect a radio link failure in cell 1. The SS shall wait for 69.3s (see Note 2) and then configure its downlink transmission power settings according to column 'T0' in table 8.3.1.30. The UE shall release radio bearer associated with T315 and enter idle mode state. SS calls for generic procedure C.1 to check that UE is in Idle Mode state in cell 1.

NOTE 1: Considering the timer tolerance of the UE, T314 may expire in 12s, therefore the SS must wait for at least 12.0s plus T313 (3.0s) for UE to detect Radio Link Failure before it reconfigures downlink transmission power. Since SS has a timer tolerance of 10% or 2*TTI+55ms (consider the greater value of the two), the test case shall set the SS to reconfigure the power level 16.5s after the SS configures the power settings according to column 'T1' in table 8.3.1.30.

NOTE 2: Considering the timer tolerance of the UE, T315 may expire in 60s, therefore the SS must wait for at least 60.0s plus T313 (3.0s) for UE to detect Radio Link Failure before it reconfigures it downlink transmission power. Since SS has a timer tolerance of 10% or 2*TTI+55ms (consider the greater value of the two), the test case shall set the SS to reconfigure the power level 69.3s after the SS configures the power settings according to column 'T1' in table 8.3.1.30.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures cell 1 according to column 'T1' in table 8.3.1.30. |
| 2 | | | | For Case A, go to step 9. SS waits for 16.5s after the completion of step 1 (for Case B) and then configures cell 1 according to column 'T0' in table 8.3.1.30. |
| 3 | → | | CELL UPDATE | UE shall select cell 1 and enter CELL_FACH state to transmit this message |
| 4 | ← | | CELL UPDATE CONFIRM | See message content. |
| 4a | → | | SIGNALLING CONNECTION RELEASE INDICATION | UE can optionally send this PDU. Steps 4a and 5 can occur in any order. |
| 5 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |
| 6 | ← | | COUNTER CHECK | SS sent the COUNT-C info for the RBs that were established in the initial condition. |
| 7 | → | | COUNTER CHECK RESPONSE | |
| 8 | | | | SS configures cell 1 according to column 'T1' in table 8.3.1.30. |
| 9 | | | | SS waits for 69.3s after the completion of step 1 (for Case A) or step 8 (for Case B) and then configures cell 1 according to column 'T0' in table 8.3.1.30. |
| 10 | ←→ | | CALL C.1 | SS execute this procedure in cell 1. If the test result of C.1 indicates that UE is in Idle Mode state, the test passes. Otherwise it fails. |

Specific Message Contents

CELL UPDATE (Step 3)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to 'radio link failure' |
| RB timer indicator | |
| - T314 expired | TRUE |
| - T315 expired | FALSE |

SIGNALLING CONNECTION RELEASE INDICATION (Step 4a)

| Information Element | Value/remark |
|---|---|
| CN domain identity | CS domain |

CELL UPDATE CONFIRM (Step 4) if CS service to be tested for RRC test cases is Speech

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| UL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Deleted UL TrCH Information | |
| - Uplink transport channel type | DCH |
| - Transport channel identity | 1 |
| Deleted UL TrCH Information | |
| - Uplink transport channel type | DCH |
| - Transport channel identity | 2 |
| Deleted UL TrCH Information | |
| - Uplink transport channel type | DCH |
| - Transport channel identity | 3 |
| DL Transport channel information common for all transport channel | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Deleted DL TrCH information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 6 |
| Deleted DL TrCH Information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 7 |
| Deleted DL TrCH Information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 8 |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |

CELL UPDATE CONFIRM (Step 4) , if CS service to be tested for RRC test cases is non-speech

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| UL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Deleted UL TrCH Information | |
| - Uplink transport channel type | DCH |
| - Transport channel identity | 1 |
| DL Transport channel information common for all transport channel | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Deleted DL TrCH information | |
| - Downlink transport channel type | DCH |
| - Transport channel identity | 6 |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |

COUNTER CHECK (Step 6)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Calculated value |
| RB COUNT-C MSB information | |
| - RB identity | Set to the RB identity that was set up in the initial condition and support PS service. |
| - COUNT-C MSB uplink | Set to the value stored in the SS |
| - COUNT-C MSB downlink | Set to the value stored in the SS |

COUNTER CHECK RESPONSE (Step 7)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | 0 |
| Integrity check info | Not checked |
| RB COUNT-C information | Not present |

#### 8.3.1.30.5 Test requirement

Case A:

After step 2, the UE shall detect the presence of cell 1 and enter idle mode state in cell 1.

Case B:

After step 2, the UE shall detect the presence of cell 1, perform cell re-selection and transmit a CELL UPDATE message.

After step 4, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 6, the UE shall transmit a COUNTER CHECK RESPONSE message without including IE “RB COUNT-C information”.

After step 9, the UE shall detect the presence of cell 1 and enter idle mode state in cell 1.

### 8.3.1.31 Cell Update: re-entering of service area from URA_PCH after T316 expiry but before T317 expiry

#### 8.3.1.31.1 Definition

#### 8.3.1.31.2 Conformance requirement

If the UE detects the "out of service area" and the UE is in URA_PCH or CELL_PCH state it shall perform the following actions:

1> start timer T316;

1> perform processes described in subclause 7.2.2.

….

In the URA_PCH or CELL_PCH state the UE shall perform the following actions:

NOTE: Neither DCCH nor DTCH are available in these states.

1> if the UE is "in service area":

….

1> if the UE is "out of service area":

2> perform cell selection process as specified in [4];

2> run timer T316;

2> run timer T305.

….

On T316 expiry the UE shall perform the following actions. The UE shall:

1> if "out of service area" is detected:

2> start timer T317;

2> move to CELL_FACH state;

2> perform processes described in subclause 7.2.2.

1> if "in service area" is detected:

….

If the UE detects "in service area" before T317 expiry the UE shall perform the following actions. If no cell update procedure or URA update procedure is ongoing, the UE shall:

1> stop T317;

1> if T307 is active:

2> stop T307.

1> initiate the cell update procedure using as cause "Re-entering service area" as specified in subclause 8.3.1;

1> perform processes described in subclause 7.2.2.

If a cell update procedure or URA update procedure is ongoing, the UE shall:

1> stop T317;

1> perform the actions as specified in 8.3.1.

Reference

3GPP TS 25.331 clause 8.3.1, 8.5.5.1.1, 8.5.5.2.2, 8.5.5.3, 7.2.2.1, and 7.2.2.2.

### 8.3.1.31.3 Test purpose

To confirm that the UE executes a cell update procedure when the UE re-enters the service area before the expiry of timer T317, after expiry of T316.

### 8.3.1.31.4 Method of test

Initial Condition

System Simulator: 1 cell with URA-ID 1 and the downlink transmission power shown in column marked "T0" in table 8.3.1.31.

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108, with URA-ID 1 in the list of URA-ID.

Test Procedure

**Table 8.3.1.31**

| Parameter | Unit | Cell 1 | |
|---|---|---|---|
| | | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -80 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -80 |

Table 8.3.1.31 illustrates the downlink power to be applied at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is initially in URA_PCH state. The content of the SYSTEM INFORMATION BLOCK TYPE 3 and 4 is modified. The SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.31 so that S<0. When the UE detects that it is out of service area, it will start T316 and search for a cell to camp. SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.31 within a time equivalent to T316+T317 but larger than T316, so that S>0. The UE shall detect that it returns back in service area before T317 expires. Since the UE has moved to CELL_FACH state on expiry of T316, it shall now transmit a CELL UPDATE message which contains the value "re-entering service area" in IE "Cell update cause" to the SS on the uplink CCCH. After the SS receives this message, it transmits a CELL UPDATE CONFIRM message which includes the IE "new C-RNTI", and "new U-RNTI" to the UE on the downlink DCCH. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE starts operating from URA_PCH state. |
| 1a | ← | | MASTER INFORMATION BLOCK<br>SYSTEM INFORMATION BLOCK TYPE 3 and 4 | SS changes the contents of MASTER INFORMATION BLOCK and SYSTEM INFORMATION BLOCK (see specific message contents). |
| 1b | ← | | PAGING TYPE 1 | Include IE "BCCH modification info" |

| | | | |
|---|---|---|---|
| | | void | |
| | | void | |
| 2 | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.31 such that the cell 1 is no longer suitable for camping i.e. S<0. |
| 3 | | | The UE shall detect a "out of service area" condition, start T316. The UE shall start T317 on expiry of T316) |
| 4 | | | 60 seconds after step 2 (see note 1), the SS configures its downlink transmission power settings according to columns "T0" in table 8.3.1.31 before T317 expires. |
| 5 | → | CELL UPDATE | Value "re-entering service area" shall be set in IE "Cell update cause" |
| 6 | ← | CELL UPDATE CONFIRM | |
| 7 | → | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | ←→ | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

NOTE: The 60 seconds in step 4 should be large enough for any UE to have detected the out of service area condition (Nserv consecutive DRX cycles + 12s) and have started T317 after T316 expiry (default=30s), but well before T317 expiry.

Specific Message Contents

MASTER INFORMATION BLOCK (Step 1a)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value. |
| Scheduling information | Scheduling info for System Information Type 3 |
| - Cell Value tag | A value that is different from the previous Cell value tag |
| Scheduling information | Scheduling info for System Information Type 4 |
| - Cell Value tag | A value that is different from the previous Cell value tag |

SYSTEM INFORMATION BLOCK TYPE 3 and 4 (Step 1a)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Qrxlevmin | -70 |

PAGING TYPE 1 (Step 1b)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Paging record list | Not Present |
| BCCH modification info | |
| MIB Value tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value. |
| BCCH modification time | Not present |

CELL UPDATE (Step 5)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 're-entering service area' |

CELL UPDATE CONFIRM (Step 6)

Use the same message sub-type found in TS 34.108 clause 9, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | |
| - SRNC Identity | '0000 0000 0001' |
| - S-RNTI | '0000 0000 0000 0101 0101' |
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 7)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE.

#### 8.3.1.31.5 Test requirement

After step 2 the UE shall detect that it is out of service area and shall not send a URA UPDATE on the uplink CCCH channel.

After step 4 the UE shall transmit a CELL UPDATE message which sets value "re-entering service area" into IE "Cell update cause".

After step 6 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message.

### 8.3.1.32 Cell Update: Transition from URA_PCH to CELL_DCH, start of HS-DSCH reception

#### 8.3.1.32.1 Definition

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.3.1.32.2 Conformance requirement

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

…

A UE shall initiate the cell update procedure in the following cases:

1> Paging response:

…

…

If the IE "New H-RNTI" is included, the UE shall:

1> if the IE "Downlink HS-PDSCH Information" is also included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 of TS 25.331 applied on the received message:

2> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b of TS 25.331.

…

If the IE "Downlink HS-PDSCH Information" is included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message, the UE shall:

1> if the IE "New H-RNTI" is included:

2> perform the actions as specified in subclause 8.6.3.1b of TS 25.331.

1> if the IE "HS-SCCH Info" is included:

2> act as specified in subclause 8.6.6.33 of TS 25.331.

1> if the IE "Measurement Feedback Info" is included:

2> act as specified in subclause 8.6.6.34 of TS 25.331.

1> For FDD, if, as a result of the received message, the variable H_RNTI is set and the UE has a stored IE "HS-SCCH Info" and a stored IE "Measurement Feedback Info"; and

1> For FDD, if the UE has received IE "Uplink DPCH Power Control Info" and stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor; and

1> For FDD, if the UE has stored IEs "MAC-hs queue to add or reconfigure list", "MAC-d PDU size Info" and "RB Mapping Info" corresponding to the HS-PDSCH configuration;

2> set the variable HS_DSCH_RECEPTION to TRUE;

2> start HS-DSCH reception procedures according to the stored HS-PDSCH configuration:

3> as stated in subclause 8.6.3.1b of TS 25.331 for the IE "H-RNTI";

3> in subclause 8.6.6.33 of TS 25.331 for the IE "HS-SCCH Info"; and

3> in subclause 8.6.6.34 of TS 25.331 for the IE "Measurement Feedback Info".

…

If the IE "HS-SCCH Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".

2> in 3.84 Mcps TDD and 7.68 Mcps TDD:

3> use the parameters specified in the IE "HS-SICH power control info" for open loop power control as defined in subclause 8.5.7.

2> in 1.28 Mcps TDD:

3> use the IE " $PRX_{HS-SICH}$ " and "ACK-NAK power offset" to calculate and set an initial uplink transmission power;

3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control.

…

If the IE "Measurement Feedback Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

Reference

3GPP TS 25.331 clauses 8.1.2, 8.3.1, 8,6,3,1, 8.6.3.1b, 8.6.5.6, 8.6.6.32, 8.6.6.33, 8.6.6.34

### 8.3.1.32.3 Test purpose

To confirm that the UE enters the CELL_DCH state after it receives a CELL UPDATE CONFIRM message with a physical channel configuration causing it to start HS-DSCH reception.

8.3.1.32.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH_DTCH_HS_DSCH (state 6-17) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in the CELL_DCH state and has a radio bearer established that is mapped to HS-DSCH. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invoke the UE to transit from CELL_DCH to URA_PCH. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enters URA_PCH state.

The SS transmits a PAGING TYPE 1 message. The UE enters the CELL_FACH state to transmit a CELL UPDATE message using uplink CCCH in respond to the paging.

The SS transmits CELL UPDATE CONFIRM message which includes DPCH and HS-PDSCH physical channel parameters on the downlink DCCH. Then the UE resumes HS-DSCH reception and transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE enters the URA_PCH state |
| 2a | SS | | | SS sends the L2 ack on the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step. Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 3 | ← | | PAGING TYPE 1 | |
| 4 | → | | CELL UPDATE | The UE enters the CELL_FACH state. |
| 5 | ← | | CELL UPDATE CONFIRM | |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE enters the CELL_DCH state and starts HS-DSCH reception. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in Annex A with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| URA Identity | 0000 0000 0000 0001B |

Paging Type 1 (Step 3)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | Equal to the U-RNTI assigned earlier. |
| - SRNC Identity | |
| - S-RNTI | |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Step 4)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Paging response” |

CELL UPDATE CONFIRM (Step 5)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

### 8.3.1.32.5 Test requirement

After step 1, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 3, the UE shall transmit a CELL UPDATE message.

After step 5, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

### 8.3.1.33 Cell Update: Transition from CELL_PCH to CELL_DCH, start of HS-DSCH reception, frequency modification

#### 8.3.1.33.1 Definition

All UEs which support FDD or TDD and HS-PDSCH.

#### 8.3.1.33.2 Conformance requirement

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

…

A UE shall initiate the cell update procedure in the following cases:

1> Paging response:

…

…

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the new state is CELL_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (CELL_PCH);

…

When the UE receives a CELL UPDATE CONFIRM/URA UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

2> if the IE "Frequency info" is included in the message:

3> if the IE "RRC State Indicator" is set to the value "CELL_DCH":

4> act on the IE "Frequency info" as specified in subclause 8.6.6.1 in TS 25.331.

…

If the IE "New H-RNTI" is included, the UE shall:

1> if the IE "Downlink HS-PDSCH Information" is also included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 of TS 25.331 applied on the received message:

2> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b of TS 25.331.

…

If, after completion of the procedure, the UE will be in CELL_DCH state, the UE shall:

1> if the IE "Frequency info" is included:

2> if the frequency is different from the currently used frequency:

3> store and use the frequency indicated by the IE "Frequency Info"; and

3> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only) or TS 25.224 (TDD only).

…

If the IE "Downlink HS-PDSCH Information" is included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message, the UE shall:

1> if the IE "New H-RNTI" is included:

2> perform the actions as specified in subclause 8.6.3.1b of TS 25.331.

1> if the IE "HS-SCCH Info" is included:

2> act as specified in subclause 8.6.6.33 of TS 25.331.

1> if the IE "Measurement Feedback Info" is included:

2> act as specified in subclause 8.6.6.34 of TS 25.331.

1> For FDD, if, as a result of the received message, the variable H_RNTI is set and the UE has a stored IE "HS-SCCH Info" and a stored IE "Measurement Feedback Info"; and

1> For FDD, if the UE has received IE "Uplink DPCH Power Control Info" and stored $\Delta_{ACK,}$ $\Delta_{NACK}$ and Ack-NACK Repetition factor; and

1> For FDD, if the UE has stored IEs "MAC-hs queue to add or reconfigure list", "MAC-d PDU size Info" and "RB Mapping Info" corresponding to the HS-PDSCH configuration;

2> set the variable HS_DSCH_RECEPTION to TRUE;

2> start HS-DSCH reception procedures according to the stored HS-PDSCH configuration:

3> as stated in subclause 8.6.3.1b of TS 25.331 for the IE "H-RNTI";

3> in subclause 8.6.6.33 of TS 25.331 for the IE "HS-SCCH Info"; and

3> in subclause 8.6.6.34 of TS 25.331 for the IE "Measurement Feedback Info".

…

If the IE "HS-SCCH Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".

2> in 3.84 Mcps TDD and 7.68 Mcps TDD:

3> use the parameters specified in the IE "HS-SICH power control info" for open loop power control as defined in subclause 8.5.7.

2> in 1.28 Mcps TDD:

3> use the IE " $PRX_{HS-SICH}$ " and "ACK-NAK power offset" to calculate and set an initial uplink transmission power;

3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control.

…

If the IE "Measurement Feedback Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

### Reference

3GPP TS 25.331 clauses 8.1.2, 8.2.2.3, 8.2.2.4, 8.3.1, 8,6,3,1, 8.6.3.1b, 8.6.5.6, 8.6.6.1, 8.6.6.32, 8.6.6.33, 8.6.6.34

8.3.1.33.3 Test purpose

To confirm that the UE enters the CELL_DCH state after it receives a CELL UPDATE CONFIRM message with a physical channel configuration causing it to start HS-DSCH reception on a different cell and frequency. To confirm that the UE enters CELL_PCH state on another frequency and stops HS-DSCH reception when it receives a PHYSICAL CHANNEL RECONFIGURATION message.

8.3.1.33.4 Method of test

Initial Condition

System Simulator: 2 cells - cell 1 is active and cell 6 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.3.1.33**

| Parameter | Unit | Cell 1 | | | Cell 6 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Frequency ($f_1$) | | | High Range Frequency ($f_2$) | | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -72 | -60 | Off | -55 | -72 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -72 | -60 | Off | -55 | -72 |

Table 8.3.1.33 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

SS initiates P25 to make the UE move to state 6-17 as specified in TS34.108 clause7.4. The UE is in the CELL_DCH state in cell 1 and has a radio bearer established that is mapped to HS-DSCH. The SS has configured its downlink transmission power setting according to columns "T0" in table 8.3.1.33.

The SS switches its downlink transmission power settings to columns "T1". The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to CELL_PCH in cell 6. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC, selects cell 6 and enters CELL_PCH state.

The SS transmits a PAGING TYPE 1 message. The UE enters the CELL_FACH state to transmit a CELL UPDATE message using uplink CCCH in cell 6 in response to the paging.

The SS switches its downlink transmission power settings to columns "T2". The SS transmits CELL UPDATE CONFIRM message, which includes DPCH and HS-PDSCH physical channel parameters for cell 1 on the downlink DCCH. Then the UE establishes the DPCH and HS-PDSCH in cell 1 and resumes HS-DSCH reception and transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH in cell 1.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step 0) |
| 1 | | | | The UE is in CELL_DCH state in cell 1 and the SS configures its downlink transmission power setting according to columns "T1" in table 8.3.1.33. |
| 2 | | | PHYSICAL CHANNEL RECONFIGURATION | |
| 3 | | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | After transmitting this message, the UE enters the CELL_PCH state in cell 6 |
| 4 | SS | | | SS sends the L2 ack on the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step.<br>Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 5 | ← | | PAGING TYPE 1 | |
| 6 | → | | CELL UPDATE | The UE enters the CELL_FACH state. |
| 7 | SS | | | The SS switches its downlink transmission power settings to columns "T2" in table 8.3.1.33. |
| 8 | ← | | CELL UPDATE CONFIRM | |
| 9 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE changes to cell 1, enters the CELL_DCH state and starts HS-DSCH reception. |
| 10 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

PHYSICAL CHANNEL RECONFIGURATION (Step 2) (FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| New C-RNTI<br>RRC State Indicator<br>UTRAN DRX cycle length coefficient<br>Frequency info<br>- CHOICE mode | Not Present<br>CELL_PCH<br>3<br><br>FDD | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] | |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 | |
| Downlink information for each radio link list<br>- Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to the Primary scrambling code used for cell6 | |
| - Serving HS-DSCH radio link indicator | FALSE | |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

PHYSICAL CHANNEL RECONFIGURATION (Step 2) (1.28Mcps TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| New C-RNTI<br>RRC State Indicator<br>UTRAN DRX cycle length coefficient<br>Frequency info<br>- CHOICE mode | Not Present<br>CELL_PCH<br>3<br><br>TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information for each radio link list<br>- Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Reference clause 6.1.4 Default settings for cell 6 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

PHYSICAL CHANNEL RECONFIGURATION (Step 2) (3.84Mcps TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| New C-RNTI<br>RRC State Indicator<br>UTRAN DRX cycle length coefficient<br>Frequency info<br>- CHOICE mode | Not Present<br>CELL_PCH<br>3<br><br>TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information for each radio link list<br>- Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 3.84Mcps TDD | |
| - Choice SyncCase | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Reference clause 6.1.4 Default settings for cell 6 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

PHYSICAL CHANNEL RECONFIGURATION (Step 2) (3.84Mcps TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| New C-RNTI<br>RRC State Indicator<br>UTRAN DRX cycle length coefficient<br>Frequency info<br>- CHOICE mode | Not Present<br>CELL_PCH<br>3<br><br>TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information for each radio link list<br>- Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 7.68 Mcps TDD | |
| - Choice SyncCase | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Reference clause 6.1.4 Default settings for cell 6 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

Paging Type 1 (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type<br>Paging record list<br>Paging record<br>- CHOICE Used paging identity<br>- U-RNTI<br>- SRNC Identity<br>- S-RNTI<br>- CN originated page to connected mode UE<br>BCCH modification info | <br>Only 1 entry<br><br>UTRAN identity<br>Equal to the U-RNTI assigned earlier.<br><br><br>Not Present<br>Not Present |

CELL UPDATE (Step 6)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Paging response” |

CELL UPDATE CONFIRM (Step 8) (FDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| RRC State indicator | CELL_DCH | |
| Frequency info | Set to the frequency of cell 1 | |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to the primary scrambling code of cell 1 | |
| - Serving HS-DSCH radio link indicator | TRUE | |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set 1 | |
| - Code number | | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - Power offset $P_{TPC-DPDCH}$ | Not Present | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | | R99 and Rel-4 only |

CELL UPDATE CONFIRM (Step 8) (1.28Mcps TDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| RRC State indicator | CELL_DCH | |
| Frequency info | Set to the frequency of cell 1 | |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Reference clause 6.1.4 Default settings for cell 1 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |

CELL UPDATE CONFIRM (Step 8) (3.84Mcps TDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| RRC State indicator | CELL_DCH | |
| Frequency info | Set to the frequency of cell 1 | |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 3.84Mcps TDD | |
| - Choice SyncCase | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Reference clause 6.1.4 Default settings for cell 1 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |

CELL UPDATE CONFIRM (Step 8) (7.68 Mcps TDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| RRC State indicator | CELL_DCH | |
| Frequency info | Set to the frequency of cell 1 | |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink information for each radio link list<br>- Downlink information for each radio link<br>- Choice mode | <br><br>TDD | |
| - Primary CCPCH info<br>- Choice mode | <br>TDD | |
| - Choice TDD Option | 7.68 Mcps TDD | |
| - Choice SyncCase | Sync Case 2 | |
| - Timeslot | 0 | |
| - Cell parameters ID | Reference clause 6.1.4 Default settings for cell 1 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |

#### 8.3.1.33.5 Test requirement

After step 2, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 5, the UE shall transmit a CELL UPDATE message.

After step 8, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC in cell 1.

### 8.3.1.33a Cell Update: Transition from CELL_PCH to CELL_DCH, start of HS-DSCH reception, frequency modification(TDD)

#### 8.3.1.33a.1 Definition

All UEs which support TDD and HS-PDSCH.

#### 8.3.1.33a.2 Conformance requirement

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

…

A UE shall initiate the cell update procedure in the following cases:

1> Paging response:

…

…

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

If the new state is CELL_PCH, the response message shall be transmitted using the old configuration before the state transition, but the new C-RNTI shall be used if the IE "New C-RNTI" was included in the received reconfiguration message, and the UE shall:

1> when RLC has confirmed the successful transmission of the response message:

…

2> enter the new state (CELL_PCH);

…

When the UE receives a CELL UPDATE CONFIRM/URA UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or

- if the message is received on DCCH:

2> if the IE "Frequency info" is included in the message:

3> if the IE "RRC State Indicator" is set to the value "CELL_DCH":

4> act on the IE "Frequency info" as specified in subclause 8.6.6.1 in TS 25.331.

…

If the IE "New H-RNTI" is included, the UE shall:

1> if the IE "Downlink HS-PDSCH Information" is also included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 of TS 25.331 applied on the received message:

2> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "Added or Reconfigured DL TrCH information" is included then for the transport channel identified by the IE "DL Transport Channel Identity" the UE shall:

1> if the choice "DL parameters" is set to 'HSDSCH':

2> if the IE "HARQ Info" is included:

3> perform the actions specified in subclause 8.6.5.6b of TS 25.331.

…

If, after completion of the procedure, the UE will be in CELL_DCH state, the UE shall:

1> if the IE "Frequency info" is included:

2> if the frequency is different from the currently used frequency:

3> store and use the frequency indicated by the IE "Frequency Info"; and

3> perform the physical layer synchronisation procedure A as specified in TS 25.224 (TDD only).

…

If the IE "Downlink HS-PDSCH Information" is included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message, the UE shall:

1> if the IE "New H-RNTI" is included:

2> perform the actions as specified in subclause 8.6.3.1b of TS 25.331.

1> if the IE "HS-SCCH Info" is included:

2> act as specified in subclause 8.6.6.33 of TS 25.331.

1> if the IE "Measurement Feedback Info" is included:

2> act as specified in subclause 8.6.6.34 of TS 25.331.

2> set the variable HS_DSCH_RECEPTION to TRUE;

2> start HS-DSCH reception procedures according to the stored HS-PDSCH configuration:

3> as stated in subclause 8.6.3.1b of TS 25.331 for the IE "H-RNTI";

3> in subclause 8.6.6.33 of TS 25.331 for the IE "HS-SCCH Info"; and

3> in subclause 8.6.6.34 of TS 25.331 for the IE "Measurement Feedback Info".

…

If the IE "HS-SCCH Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration".

2> in 3.84 Mcps TDD and 7.68 Mcps TDD:

3> use the parameters specified in the IE "HS-SICH power control info" for open loop power control as defined in subclause 8.5.7.

2> in 1.28 Mcps TDD:

3> use the IE " $PRX_{HS-SICH}$ " and "ACK-NAK power offset" to calculate and set an initial uplink transmission power;

3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control.

…

If the IE "Measurement Feedback Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

Reference

3GPP TS 25.331 clauses 8.1.2, 8.2.2.3, 8.2.2.4, 8.3.1, 8,6,3,1, 8.6.3.1b, 8.6.5.6, 8.6.6.1, 8.6.6.32, 8.6.6.33, 8.6.6.34

### 8.3.1.33a.3 Test purpose

To confirm that the UE enters the CELL_DCH state after it receives a CELL UPDATE CONFIRM message with a physical channel configuration causing it to start HS-DSCH reception on a different cell and frequency. To confirm that the UE enters CELL_PCH state on another frequency and stops HS-DSCH reception when it receives a PHYSICAL CHANNEL RECONFIGURATION message.

### 8.3.1.33a.4 Method of test

Initial Condition

System Simulator: 2 cells - cell 1 is active and cell 6 is inactive. Each cell configure 3 carriers， one is the primary carrier，the other two are secondary carrier.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS_DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports TDD
- UE supports HS-PDSCH

Test Procedure

**Table 8.3.1.33a**

| Parameter | Unit | Cell 1 | | | Cell 6 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Frequency ($f_1$) | | | High Range Frequency ($f_2$) | | |
| P-CCPCH RSCP (TDD) | dBm | -60 | -72 | -60 | Off | -55 | -72 |

Table 8.3.1.33 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

SS initiates P25 to make the UE move to state 6-17 as specified in TS34.108 clause7.4. The UE is in the CELL_DCH state in cell 1 and has a radio bearer established that is mapped to HS-DSCH. The SS has configured its downlink transmission power setting according to columns "T0" in table 8.3.1.33a.

The SS switches its downlink transmission power settings to columns "T1". The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to CELL_PCH in cell 6. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC, selects cell 6 and enters CELL_PCH state.

The SS transmits a PAGING TYPE 1 message. The UE enters the CELL_FACH state to transmit a CELL UPDATE message using uplink CCCH in cell 6 in response to the paging.

The SS switches its downlink transmission power settings to columns "T2". The SS transmits CELL UPDATE CONFIRM message, which includes DPCH and HS-PDSCH physical channel parameters for cell 1 on the downlink DCCH. Then the UE establishes the DPCH and HS-PDSCH in cell 1 and resumes HS-DSCH reception and transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH in cell 1.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message (Step 0) |
| 1 | | | | The UE is in CELL_DCH state in cell 1 and the SS configures its downlink transmission power setting according to columns "T1" in table 8.3.1.33a. |
| 2 | | | PHYSICAL CHANNEL RECONFIGURATION | |
| 3 | | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | After transmitting this message, the UE enters the CELL_PCH state in cell 6 |
| 4 | SS | | | SS sends the L2 ack on the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step.<br>Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 5 | ← | | PAGING TYPE 1 | |
| 6 | → | | CELL UPDATE | The UE enters the CELL_FACH state. |
| 7 | SS | | | The SS switches its downlink transmission power settings to columns "T2" in table 8.3.1.33a. |
| 8 | ← | | CELL UPDATE CONFIRM | |
| 9 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE changes to cell 1, enters the CELL_DCH state and starts HS-DSCH reception. |
| 10 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| New C-RNTI<br>RRC State Indicator<br>UTRAN DRX cycle length coefficient<br>Frequency info<br>- CHOICE mode | Not Present<br>CELL_PCH<br>3<br><br>TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| Downlink information for each radio link list<br>- Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Reference clause 6.1.4 Default settings for cell 6 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

Paging Type 1 (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type<br>Paging record list<br>Paging record<br>- CHOICE Used paging identity<br>- U-RNTI<br>- SRNC Identity<br>- S-RNTI<br>- CN originated page to connected mode UE<br>BCCH modification info | <br>Only 1 entry<br><br>UTRAN identity<br>Equal to the U-RNTI assigned earlier.<br><br><br>Not Present<br>Not Present |

CELL UPDATE (Step 6)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Paging response” |

CELL UPDATE CONFIRM (Step 8)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| New H-RNTI | '0101 0101 0101 0101' | |
| RRC State indicator | CELL_DCH | |
| Frequency info | Set to the frequency of cell 1 | |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Reference clause 6.1.4 Default settings for cell 1 | |
| - SCTD indicator | FALSE | |
| CellUpdateConfirm-CCCH-r5-TDD128-add-ext-IEs | | |
| frequencyInfo | secondary carrier frequency in cell 6 | |

8.3.1.33a.5 Test requirement

After step 2, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 5, the UE shall transmit a CELL UPDATE message.

After step 8, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC in cell 1.

## 8.3.1.34 Cell Update: Transition from CELL_DCH to CELL_FACH, stop of HS-DSCH reception

8.3.1.34.1 Definition

8.3.1.34.2 Conformance requirement

1> Radio link failure:

…

3> if the UE is in CELL_DCH state and the criteria for radio link failure are met as specified in subclause 8.5.6 of TS 25.331; or

…

4> perform cell update using the cause "radio link failure".

When initiating the URA update or cell update procedure, the UE shall:

…

1> if HS-DSCH is configured:

2> stop any HS-DSCH reception procedures;

2> clear any stored HS-PDSCH configuration;

2> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

2> release all HARQ resources;

2> remove any H-RNTI stored;

2> clear the variable H_RNTI;

2> set the variable HS_DSCH_RECEPTION to FALSE.

1> if the UE is not already in CELL_FACH state:

2> move to CELL_FACH state;

2> select PRACH according to subclause 8.5.17 of TS 25.331;

2> select Secondary CCPCH according to subclause 8.5.19 of TS 25.331;

2> use the transport format set given in system information as specified in subclause 8.6.5.1 of TS 25.331.

Reference

3GPP TS 25.331 clauses 8.3.1.2

8.3.1.34 .3 Test purpose

To confirm that the UE stops HS-DSCH reception after a radio link failure in CELL_DCH during HS-DSCH reception.

8.3.1.34 .4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 2 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.34**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -75 | -60 |

Table 8.3.1.34 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked "T0" denote the initial conditions.

The UE is in CELL_DCH state and only signalling radio bearers have been established. SS initiates P25 to make the UE to move to state 6-17 as specified in TS 34.108 clause 7.4. The UE is in the CELL_DCH state and has a radio bearer

established that is mapped to HS-DSCH. SS configures its downlink transmission power settings according to column "T1" in table 8.3.1.34. The UE shall detect a radio link failure in cell 1.

Then it shall attempt to re-select to cell 2. After that, it shall then enter CELL_FACH state and transmit a CELL UPDATE message on the uplink CCCH to SS.

The SS transmits a CELL UPDATE CONFIRM message which request the UE to transit to CELL_FACH state. The UE responds with a RADIO BEARER RECONFIGURATION COMPLETE message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message. (Step 0) |
| 1 | | | | SS configures cell 1 and 2 according to column "T1" in table 8.3.1.34. SS starts to listen to the uplink CCCH of cell 2. |
| 2 | | | | The UE detects the radio link failure and stops reception of HS-DSCH. |
| 3 | → | | CELL UPDATE | The UE shall find a new cell 2 and the value "radio link failure" shall be set in IE "Cell update cause". |
| 4 | ← | | CELL UPDATE CONFIRM | |
| 5 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |

Specific Message Contents

System Information Block type 1

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |
| - T313 | 2 |

RADIO BEARER SETUP (Step 0) (FDD)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, with the following exception; |
| - MAC-d PDU size | 656 |

RADIO BEARER SETUP (Step 0) (TDD)

Use the same message as specified for "Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108.

CELL UPDATE (Step 3)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Radio link failure” |

CELL UPDATE CONFIRM (Step 4) (FDD)

Use the same message sub-type found in TS 34.108 clause 9 with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '0101 0101 0101 0101' |
| RLC re-establish indicator (RB2, RB3 and RB4) | TRUE |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |

| Information Element | Value/remark |
|---|---|
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Deleted DL TrCH Information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Added or Reconfigured DL TrCH information | |
| - MAC-d PDU size | 336 |

CELL UPDATE CONFIRM (Step 4) (1.28Mcps TDD)

Use the same message sub-type found in TS 34.108 clause 9 with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '0101 0101 0101 0101' |
| RLC re-establish indicator (RB2, RB3 and RB4) | TRUE |
| RB information to reconfigure list | |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) |
| - RB identity | 4 |

| Information Element | Value/remark |
|---|---|
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DTCH) |
| - RB identity | 20 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | Not Present |
| - RB stop/continue | Not Present |
| Deleted DL TrCH Information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |

8.3.1.34 .5 Test requirement

After step 2, the UE shall transmit a CELL UPDATE message and stop HS-DSCH reception.

## 8.3.1.35 Cell Update: Transition from CELL_DCH to CELL_DCH, with active HS-DSCH reception

8.3.1.35 .1 Definition

8.3.1.35 .2 Conformance requirement

1> Radio link failure:

…

3> if the UE is in CELL_DCH state and the criteria for radio link failure are met as specified in subclause 8.5.6 of TS 25.331; or

…

4> perform cell update using the cause "radio link failure".

When initiating the URA update or cell update procedure, the UE shall:

…

1> if HS-DSCH is configured:

2> stop any HS-DSCH reception procedures;

2> clear any stored HS-PDSCH configuration;

2> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

2> release all HARQ resources;

2> remove any H-RNTI stored;

2> clear the variable H_RNTI;

2> set the variable HS_DSCH_RECEPTION to FALSE.

Reference

3GPP TS 25.331 clauses 8.3.1.2

8.3.1.35 .3 Test purpose

To confirm that the UE keeps the RB mapping option for HS-DSCH reception after a radio link failure in CELL_DCH during HS-DSCH reception.

8.3.1.35.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 2 is inactive.

Specific Message Contents

System Information Block type 11

Use the default system information block with the same type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Intra-frequency measurement reporting criteria | |
| - Parameters required for each event | 3 kinds |
| - Intra-frequency event identity | 1a |
| - Time to trigger | 5000 |

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents)

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.35**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -75 | -60 |

Table 8.3.1.35 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked "T0" denote the initial conditions.

The UE is in CELL_DCH state and only signalling radio bearers have been established. SS initiates P25 to make the UE to move to state 6-17 as specified in TS 34.108 clause 7.4. The UE is in the CELL_DCH state and has a radio bearer established that is mapped to HS-DSCH. SS configures its downlink transmission power settings according to column "T1" in table 8.3.1.35. The UE shall detect a radio link failure in cell 1.

Then it shall attempt to re-select to cell 2. After that, it shall then enter CELL_FACH state and transmit a CELL UPDATE message on the uplink CCCH to SS.

The SS transmits a CELL UPDATE CONFIRM message which request the UE to transit to CELL_DCH state and start reception of HS-DSCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message. (Step 0) |
| 1 | | | | SS configures cell 1 and 2 according to column "T1" in table 8.3.1.35. SS starts to listen to the uplink CCCH of cell 2. |
| 2 | | | | The UE detects the radio link failure and stops reception of HS-DSCH. |
| 3 | → | | CELL UPDATE | The UE shall find a new cell 2 and the value "radio link failure" shall be set in IE "Cell update cause". |
| 4 | ← | | CELL UPDATE CONFIRM | |
| 5 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |
| - T313 | 2 |

RADIO BEARER SETUP (Step 0)

Use the same message as specified for “Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108.

CELL UPDATE (Step 3)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Radio link failure” |

CELL UPDATE CONFIRM (Step 4)(FDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RRC State indicator | CELL_DCH |
| | |
| UL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10 |
| DL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| CHOICE channel requirement<br><br>- Scrambling Code Number | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10,with the following exception<br>A non-zero value in the range of 0-16777215 used for cell 2 |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10 |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10 |
| Downlink information per radio link list<br><br>- Primary CPICH info<br>- Primary scrambling code | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, with the following exception;<br><br>150 |

CELL UPDATE CONFIRM (Step 4)(1.28Mcps TDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RRC State indicator | CELL_DCH |
| UL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10 |
| DL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| Added or Reconfigured DL TrCH information list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10 |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10 |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10 |
| Downlink information per radio link list<br><br>- Primary CCPCH info<br>- Cell parameters ID | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, with the following exception;<br><br>Set to the Cell parameters ID for cell 2 |

#### 8.3.1.35 .5 Test requirement

After step 2, the UE shall transmit a CELL UPDATE message.

After step 4, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message and start reception of HS-DSCH.

### 8.3.1.36 Cell Update: Transition from CELL_DCH to CELL_FACH (stop of HS-DSCH reception with frequency modification)

#### 8.3.1.36 .1 Definition

(All UEs which support FDD or TDD and HS-PDSCH.)

#### 8.3.1.36 .2 Conformance requirement

1> Radio link failure:

…

3> if the UE is in CELL_DCH state and the criteria for radio link failure are met as specified in subclause 8.5.6; or

…

4> perform cell update using the cause "radio link failure".

When initiating the URA update or cell update procedure, the UE shall:

…

1> if HS-DSCH is configured:

2> stop any HS-DSCH reception procedures;

2> clear any stored HS-PDSCH configuration;

2> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

2> release all HARQ resources;

2> remove any H-RNTI stored;

2> clear the variable H_RNTI;

2> set the variable HS_DSCH_RECEPTION to FALSE.

1> if the UE is not already in CELL_FACH state:

2> move to CELL_FACH state;

2> select PRACH according to subclause 8.5.17;

2> select Secondary CCPCH according to subclause 8.5.19;

2> use the transport format set given in system information as specified in subclause 8.6.5.1.

Reference

3GPP TS 25.331 clauses 8.3.1.2

#### 8.3.1.36 .3 Test purpose

To confirm that the UE stops HS-DSCH reception after a radio link failure in CELL_DCH during HS-DSCH reception.

8.3.1.36.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.36**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -75 | -60 |

Table 8.3.1.36 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked "T0" denote the initial conditions.

The UE is in CELL_DCH state and only signalling radio bearers have been established. SS initiates P25 to make the UE to move to state 6-17 as specified in TS 34.108 clause 7.4. The UE is in the CELL_DCH state and has a radio bearer established that is mapped to HS-DSCH. SS configures its downlink transmission power settings according to column "T1" in table 8.3.1.36. The UE shall detect a radio link failure in cell 1.

Then it shall attempt to re-select to cell 6. After that, it shall then enter CELL_FACH state and transmit a CELL UPDATE message on the uplink CCCH to SS.

The SS transmits a CELL UPDATE CONFIRM message which requests the UE to transit to CELL_FACH state. The UE responds with a RADIO BEARER RECONFIGURATION COMPLETE message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message. (Step 0) |
| 1 | | | | SS configures cell 1 and 6 according to column "T1" in table 8.3.1.36. SS starts to listen to the uplink CCCH of cell 6. |
| 2 | | | | The UE detects the radio link failure and stops reception of HS-DSCH. |
| 3 | → | | CELL UPDATE | The UE shall find a new cell 6 and the value "radio link failure" shall be set in IE "Cell update cause". |
| 4 | ← | | CELL UPDATE CONFIRM | |
| 5 | → | | RADIO BEARER RECONFIGURATION COMPLETE | |

Specific Message Contents

System Information Block type 1

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |
| - T313 | 2 |

RADIO BEARER SETUP (Step 0)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108.

CELL UPDATE (Step 3)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Radio link failure” |

CELL UPDATE CONFIRM (Step 4) (FDD)

Use the same message sub-type found in TS 34.108 clause 9 with the exception of the following IEs:

| Information Element | Value/remark | Version |
|---|---|---|
| New C-RNTI | '0101 0101 0101 0101' | |
| RLC re-establish indicator (RB2, RB3 and RB4) | TRUE | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 600 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 250 | |
| - Timer_poll | 250 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 600 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 250 | |
| - Timer_poll | 250 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |

| | | |
|---|---|---|
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 600 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 250 | |
| - Timer_poll | 250 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DTCH) | |
| - RB identity | 25 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 600 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 250 | |
| - Timer_poll | 250 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| Deleted DL TrCH Information<br><br><br>- Downlink information for each radio link | Same as the set defined in RADIO BEARER RELEASE message found in TS 34.108 clause 9 under condition A9. | |

| | | |
|---|---|---|
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Set to the Primary scrambling code used for cell6 | |
| - Serving HS-DSCH radio link indicator | FALSE | |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

CELL UPDATE CONFIRM (Step 4) (1.28Mcps TDD)

Use the same message sub-type found in TS 34.108 clause 9 with the exception of the following IEs:

| Information Element | Value/remark | Version |
|---|---|---|
| New C-RNTI | '0101 0101 0101 0101' | |
| RLC re-establish indicator (RB2, RB3 and RB4) | TRUE | |
| RB information to reconfigure list | | |
| - RB information to reconfigure | (AM DCCH for RRC) | |
| - RB identity | 2 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 600 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 250 | |
| - Timer_poll | 250 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT High priority) | |
| - RB identity | 3 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 600 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 250 | |
| - Timer_poll | 250 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |

| | | |
|---|---|---|
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DCCH for NAS_DT Low priority) | |
| - RB identity | 4 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 600 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 250 | |
| - Timer_poll | 250 | |
| - Poll_PDU | Not present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| - RB information to reconfigure | (AM DTCH) | |
| - RB identity | 20 | |
| - PDCP info | Not Present | |
| - PDCP SN info | Not Present | |
| - RLC info | | |
| - CHOICE Uplink RLC mode | AM RLC | |
| - Transmission RLC discard | | |
| - SDU discard mode | No discard | |
| - MAX_DAT | 15 | |
| - Transmission window size | 128 | |
| - Timer_RST | 600 | |
| - Max_RST | 4 | |
| - Polling info | | |
| - Timer_poll_prohibit | 250 | |
| - Timer_poll | 250 | |
| - Poll_PDU | Not Present | |
| - Poll_SDU | 1 | |
| - Last transmission PDU poll | TRUE | |
| - Last retransmission PDU poll | TRUE | |
| - Poll_Window | 99 | |
| - Timer_poll_periodic | Not Present | |
| - CHOICE Downlink RLC mode | AM RLC | |
| - In-sequence delivery | TRUE | |
| - Receiving window size | 128 | |
| - Downlink RLC status info | | |
| - Timer_status_prohibit | 200 | |
| - Timer_EPC | Not Present | |
| - Missing PDU indicator | TRUE | |
| - Timer_STATUS_periodic | Not Present | |
| - RB mapping info | Not Present | |
| - RB stop/continue | Not Present | |
| Deleted DL TrCH Information | Same as the set defined in RADIO BEARER RELEASE message found in TS 34.108 clause 9 under condition A9. | |
| Frequency info | | |

| | | |
|---|---|---|
| - CHOICE mode | TDD | |
| - UARFCN (Nt) | Same UARFCN as used for cell 6 | |
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | | |
| - Choice mode | TDD | |
| - Choice TDD Option | 1.28Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Cell parameters ID | Same Cell parameters ID as used for cell 6 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

#### 8.3.1.36 .5 Test requirement

After step 2, the UE shall transmit a CELL UPDATE message and stop HS-DSCH reception.

### 8.3.1.37 Cell Update: Transition from CELL_DCH to CELL_DCH (with active HS-DSCH reception and frequency modification)

#### 8.3.1.37 .1 Definition

(All UEs which support FDD or TDD and HS-PDSCH.)

#### 8.3.1.37 .2 Conformance requirement

1> Radio link failure:

…

3> if the UE is in CELL_DCH state and the criteria for radio link failure are met as specified in subclause 8.5.6; or

…

4> perform cell update using the cause "radio link failure".

When initiating the URA update or cell update procedure, the UE shall:

…

1> if HS-DSCH is configured:

2> stop any HS-DSCH reception procedures;

2> clear any stored HS-PDSCH configuration;

2> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

2> release all HARQ resources;

2> remove any H-RNTI stored;

2> clear the variable H_RNTI;

2> set the variable HS_DSCH_RECEPTION to FALSE.

#### Reference

3GPP TS 25.331 clauses 8.3.1.2

#### 8.3.1.37 .3 Test purpose

To confirm that the UE keeps the RB mapping option for HS-DSCH reception after a radio link failure in CELL_DCH during HS-DSCH reception.

8.3.1.37.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 is active and cell 6 is inactive.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.37**

| Parameter | Unit | Cell 1 | | Cell 6 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -75 | -60 |

Table 8.3.1.37 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked "T0" denote the initial conditions.

The UE is in CELL_DCH state and only signalling radio bearers have been established. SS initiates P25 to make the UE to move to state 6-17 as specified in TS 34.108 clause 7.4. The UE is in the CELL_DCH state and has a radio bearer established that is mapped to HS-DSCH. SS configures its downlink transmission power settings according to column "T1" in table 8.3.1.37. The UE shall detect a radio link failure in cell 1.

Then it shall attempt to re-select to cell 6. After that, it shall then enter CELL_FACH state and transmit a CELL UPDATE message on the uplink CCCH to SS.

The SS transmits a CELL UPDATE CONFIRM message which requests the UE to transit to CELL_DCH state and start reception of HS-DSCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P25 | See below for the specific message content used in RADIO BEARER SETUP message. (Step 0) |
| 1 | | | | SS configures cell 1 and 6 according to column "T1" in table 8.3.1.37. SS starts to listen to the uplink CCCH of cell 6. |
| 2 | | | | The UE detects the radio link failure and stops reception of HS-DSCH. |
| 3 | → | | CELL UPDATE | The UE shall find a new cell 6 and the value "radio link failure" shall be set in IE "Cell update cause". |
| 4 | ← | | CELL UPDATE CONFIRM | |
| 5 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | |

Specific Message Contents

System Information Block type 1

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |
| - T313 | 2 |

RADIO BEARER SETUP (Step 0) (FDD)

Use the same message as specified for " Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| RAB information for setup | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, with the following excptions |
| - PDCP info | Not present |
| - Transmission RLC discard | |
| - MAX_DAT | 10 |
| - Transmission window size | 256 |
| - Timer_RST | 1000 |
| - Max_RST | 12 |
| - Timer_poll_prohibit | 50 |
| - Timer_poll | 400 |
| - Poll_Windows | 80 |
| - Receiving window size | 2047 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 50 |
| UL Transport channel Information for all transport channels | |
| - CHOICE Gain Factors | Computed Gain Factors (The last TFC is set to Signalled Gain Factors) |
| - Gain factorβc | 9 (equal or higher than 64 kbps and below 384 kbps)<br>6 (equal or higher than 384 kbps) |
| - Gain factorβd | 15<br>(Not Present if the CHOICE Gain Factors is set to Computed Gain Factors) |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10, with the following exception; |
| - MAC-d PDU size | 656 |
| Maximum allowed UL TX power | 24dBm |
| CHOICE channel requirement | |
| - $\Delta_{ACK}$ | 6 |
| - $\Delta_{NACK}$ | 6 |
| Downlink HS-PDSCH Information | |
| - Measurement Feedback Info | |
| - POhsdsch | 9dB |
| - CQI Feedback cycle, k | 10ms |
| - $\Delta_{CQI}$ | 3 |

RADIO BEARER SETUP (Step 0) (1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH / HS-DSCH from CELL_DCH in PS" in 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| Maximum allowed UL TX power | 24dBm |

CELL UPDATE (Step 3)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Radio link failure” |

CELL UPDATE CONFIRM (Step 4) (FDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| | |
| RRC State indicator | CELL_DCH |
| RLC re-establish indicator (RB2, RB3 and RB4) | TRUE |
| UL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, with the following exceptions; |
| - CHOICE Gain Factors | Computed Gain Factors (The last TFC is set to Signalled Gain Factors) |
| - Gainfactorβc | 9 (equal or higher than 64 kbps and below 384 kbps)<br>6 (equal or higher than 384 kbps) |
| - Gain factorβd | 15<br>(Not Present if the CHOICE Gain Factors is set to Computed Gain Factors) |
| DL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| Added or Reconfigured DL TrCH information list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10. |
| - MAC-d PDU size | 656 |
| Frequency info<br>- UARFCN uplink (Nu) | This IE should be present, if the default duplex distance defined for the operating frequency band is not used. |
| - UARFCN downlink (Nd) | Same downlink UARFCN as used for cell 6 |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, with the following exceptions; |
| - $\Delta_{ACK}$ | 6 |
| - $\Delta_{NACK}$ | 6 |
| - Scrambling Code Number | A non-zero value in the range of 0-16777215 used for cell 6 |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, with the following exceptions; |
| - Measurement Feedback Info | |
| - POhsdsch | 9dB |
| - CQI Feedback cycle, k | 10ms |
| - $\Delta_{CQI}$ | 3 |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10; |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, with the following exception; |
| - Primary CPICH info | |
| - Primary scrambling code | 350 |

CELL UPDATE CONFIRM (Step 4) ( 1.28Mcps TDD )

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| RRC State indicator | CELL_DCH |
| RLC re-establish indicator (RB2, RB3 and RB4) | TRUE |
| UL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| DL Transport channel information common for all transport channels | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| Added or Reconfigured DL TrCH information list<br><br><br>- MAC-d PDU size | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A10.<br>656 |
| Frequency info<br>- CHOICE mode<br>- UARFCN (Nt) | <br>TDD<br>Same UARFCN as used for cell 6 |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9. |
| Downlink information common for all radio links<br><br><br>- Timing indicator | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, with the following exception;<br>Initialise |
| Downlink information per radio link list<br><br><br>- Primary CCPCH info<br>- Choice mode<br>- Choice TDD Option<br>- TSTD indicator<br>- Cell parameters ID<br><br>- SCTD indicator | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A9, with the following exception;<br><br>TDD<br>1.28 Mcps TDD<br>FALSE<br>Ref. to the Default setting in TS34.108 clause 6.1 for CELL 6 (TDD)<br>FALSE |

8.3.1.37 .5 Test requirement

After step 2, the UE shall transmit a CELL UPDATE message.

After step 4, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message and start reception of HS-DSCH.

## 8.3.1.38 Cell Update: state specific handling of $T_{reselection}$ and $Q_{hyst}$ for cell reselection in CELL_FACH

### 8.3.1.38.1 Conformance requirement

2. The cell-ranking criterion R is defined by:

$$R_s = Q_{meas,s} + Qhyst_s$$

$$R_n = Q_{meas,n} - Qoffset_{s,n} - TO_n * (1 - L_n)$$

The cells shall be ranked according to the R criteria specified above, deriving $Q_{meas,n}$ and $Q_{meas,s}$ and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in [10] and [11] for FDD, TDD and GSM cells, respectively.

The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$. For UE in RRC connected mode states CELL_PCH or URA_PCH the hysteresis $Qhyst_s$ takes the value $Qhyst1_{s,PCH}$ to calculate $R_s$, if provided in SIB4 [see 4]. For UE in RRC connected mode state CELL_FACH the hysteresis $Qhyst_s$ takes the value $Qhyst1_{s,FACH}$ to calculate $R_s$, if provided in SIB4 [see 4].

If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH Ec/No, the UE shall perform a second ranking of the FDD cells according to the R criteria specified above, but using the measurement quantity CPICH Ec/No for deriving the $Q_{meas,n}$ and $Q_{meas,s}$ and calculating the R values of the FDD cells. The offset $Qoffset2_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst2_s$ is used for $Qhyst_s$ to calculate $R_s$. For UE in RRC connected mode states CELL_PCH or URA_PCH the hysteresis $Qhyst_s$ takes the value $Qhyst2_{s,PCH}$ to calculate $R_s$, if provided in SIB4 [see 4]. For UE in RRC connected mode state CELL_FACH the hysteresis $Qhyst_s$ takes the value $Qhyst2_{s,FACH}$ to calculate $R_s$, if provided in SIB4 [see 4]. If the usage of HCS is indicated in system information, $TEMP_OFFSET2_n$ is used to calculate $TO_n$. If it is indicated in system information that HCS is not used, $TEMP_OFFSET_n$ is not applied when calculating $R_n$. Following this second ranking, the UE shall perform cell re-selection to the best ranked FDD cell.

In all cases, the UE shall reselect the new cell, only if the following conditions are met:

- the new cell is better ranked than the serving cell during a time interval Treselection. For UE in RRC connected mode states CELL_PCH or URA_PCH the interval $Treselection_{s,PCH}$ applies, if provided in SIB4 [see 4], while for UE in RRC connected mode state CELL_FACH the interval $Treselection_{s,FACH}$ applies, if provided in SIB4 [see 4]. For hierarchical cell structures when high mobility state has not been detected, if according to the HCS rules the serving cell is not ranked then all the ranked cells are considered to be better ranked than the serving cell.

**$Qhyst1_{s,FACH}$**

This specifies the hysteresis value (Qhyst) to be used in RRC connected mode state CELL_FACH. It is used for TDD and GSM cells and for FDD cells in case the quality measure for cell selection and re-selection is set to CPICH RSCP. If this parameter is not provided in SIB4, $Qhyst1_s$ shall be used.

**$Qhyst2_{s,FACH}$**

This specifies the hysteresis value (Qhyst) to be used in RRC connected mode state CELL_FACH. It is used for FDD cells if the quality measure for cell selection and re-selection is set to CPICH Ec/No. If this parameter is not provided in SIB4, $Qhyst2_s$ shall be used.

**$Treselection_{s,FACH}$**

This specifies the cell reselection timer value the UE shall use in RRC connected mode state CELL_FACH if provided in SIB4, otherwise $Treselection_s$ shall be used.

A UE shall initiate the cell update procedure in the following cases:

…

1> Cell reselection:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:

3> if the UE is in CELL_FACH or CELL_PCH state and the UE performs cell re-selection; or

3> if the UE is in CELL_FACH state and the variable C_RNTI is empty:

4> perform cell update using the cause "cell reselection".

the UE shall:

…

1> in case of a cell update procedure:

2> set the IE "RRC transaction identifier" in any response message transmitted below to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry.

…

1> transmit a response message as specified in TS 25.331 subclause 8.3.1.7;

…

Reference

3GPP TS 25.304 clause 5.2.6.1.4.

3GPP TS 25.304 clause 5.4.3.

3GPP TS 25.331 clause 8.3.1.

### 8.3.1.38.2 Test purpose

1. To confirm that the UE uses the correct SIB 4 IEs to perform cell reselection calculation in CELL_FACH.

### 8.3.1.38.3 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 4 are active.

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.38**

| Parameter | Unit | Cell 1 | | | Cell 4 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | High Range Test Frequency | | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | -67 | -82 | OFF | -60 | -60 |

Table 8.3.1.38 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions. SS switches the power settings to columns "T1" and “T2”, when the description below specifies.

The UE is in the CELL_FACH state, camping onto cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.38. The UE shall remain on cell 1 even after expiry of Treselecion. SS configures its downlink transmission power settings according to columns "T2" in table 8.3.1.38. The UE shall find cell 4 to be more suitable for service after expiry of Treselection, and shall transmit a CELL UPDATE message to the SS on the uplink CCCH of cell 4 and set IE "Cell update cause" to "Cell Reselection". SS checks this is received after expiry of Treselection. After the SS receives this message, it transmits a CELL UPDATE CONFIRM message, which includes the IE "RRC State Indicator" set to "CELL_FACH", and a valid IE "New C-RNTI", to the UE on the downlink DCCH. UE responds with UTRAN MOBILITY INFORMATION CONFIRM message.. UE shall stay in CELL_FACH state. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_FACH state in cell 1 |
| 2 | | | | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.3.1.38. SS checks that no message is received even after expiry of Treselection. |
| 3 | | | | SS applies the downlink transmission power settings, according to the values in columns "T2" of table 8.3.1.38. The UE shall find that the cell 4 is better for service and perform a reselection. SS checks that no message is received until Treselection expires. |
| 4 | → | | CELL UPDATE | Value "cell reselection" shall be indicated in IE "Cell update cause" |
| 5 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_FACH". |
| 6 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 7 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 4 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | FDD |
| - s-Intersearch | Not Present |
| - Qqualmin | -24 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - $Qhyst1_{s}$ | 0 (0 dB) |
| - $Qhyst1_{s,FACH}$ | 7 (14 dB) |
| - $Treselection_{s,FACH}$ | 6 seconds |

System Information Block type 11 (FDD)

Use the same message type found in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info<br>- FACH Measurement occasion cycle length coefficient | <br>3 |
| - Inter-frequency FDD measurement indicator | TRUE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |

CELL UPDATE (Step 4)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |

CELL UPDATE CONFIRM (Step 5)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

#### 8.3.1.38.4 Test requirement

At step 2 no cell update is received, even after expiry of Treselelection

At step 3 no cell update is received until after Treselection has expired.

At step 4 the UE shall reselect to cell 4 and then it shall transmit a CELL UPDATE message which sets the value "cell reselection" in IE "Cell update cause".

### 8.3.1.39 Cell Update: state specific handling of $T_{reselection}$ and $Q_{hyst}$ for cell reselection in CELL_PCH

#### 8.3.1.39.1 Conformance requirement

2. The cell-ranking criterion R is defined by:

$$R_s = Q_{meas,s} + Qhyst_s$$

$$R_n = Q_{meas,n} - Qoffset_{s,n} - TO_n * (1 - L_n)$$

The cells shall be ranked according to the R criteria specified above, deriving $Q_{meas,n}$ and $Q_{meas,s}$ and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in [10] and [11] for FDD, TDD and GSM cells, respectively.

The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$. For UE in RRC connected mode states CELL_PCH or URA_PCH the hysteresis $Qhyst_s$ takes the value $Qhyst1_{s,PCH}$ to calculate $R_s$, if provided in SIB4 [see 4]. For UE in RRC connected mode state CELL_FACH the hysteresis $Qhyst_s$ takes the value $Qhyst1_{s,FACH}$ to calculate $R_s$, if provided in SIB4 [see 4].

If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH Ec/No, the UE shall perform a second ranking of the FDD cells according to the R criteria specified above, but using the measurement quantity CPICH Ec/No for deriving the $Q_{meas,n}$ and $Q_{meas,s}$ and calculating the R values of the FDD cells. The offset $Qoffset2_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst2_s$ is used for $Qhyst_s$ to calculate

$R_s$. For UE in RRC connected mode states CELL_PCH or URA_PCH the hysteresis $Qhyst_s$ takes the value $Qhyst2_{s,PCH}$ to calculate $R_s$, if provided in SIB4 [see 4]. For UE in RRC connected mode state CELL_FACH the hysteresis $Qhyst_s$ takes the value $Qhyst2_{s,FACH}$ to calculate $R_s$, if provided in SIB4 [see 4]. If the usage of HCS is indicated in system information, $TEMP_OFFSET2_n$ is used to calculate $TO_n$. If it is indicated in system information that HCS is not used, $TEMP_OFFSET_n$ is not applied when calculating $R_n$. Following this second ranking, the UE shall perform cell re-selection to the best ranked FDD cell.

In all cases, the UE shall reselect the new cell, only if the following conditions are met:

- the new cell is better ranked than the serving cell during a time interval Treselection. For UE in RRC connected mode states CELL_PCH or URA_PCH the interval $Treselection_{s,PCH}$ applies, if provided in SIB4 [see 4], while for UE in RRC connected mode state CELL_FACH the interval $Treselection_{s,FACH}$ applies, if provided in SIB4 [see 4]. For hierarchical cell structures when high mobility state has not been detected, if according to the HCS rules the serving cell is not ranked then all the ranked cells are considered to be better ranked than the serving cell.

**$Qhyst1_{s,PCH}$**

This specifies the hysteresis value (Qhyst) to be used in RRC connected mode states CELL_PCH and URA_PCH. It is used for TDD and GSM cells and for FDD cells in case the quality measure for cell selection and re-selection is set to CPICH RSCP. If this parameter is not provided in SIB4, $Qhyst1_s$ shall be used.

**$Qhyst2_{s,PCH}$**

This specifies the hysteresis value (Qhyst) to be used in RRC connected mode states CELL_PCH and URA_PCH. It is used for FDD cells if the quality measure for cell selection and re-selection is set to CPICH Ec/No. If this parameter is not provided in SIB4, $Qhyst2_s$ shall be used.

**$Treselection_{s,PCH}$**

This specifies the cell reselection timer value the UE shall use in RRC connected mode states CELL_PCH and URA_PCH if provided in SIB4, otherwise $Treselection_s$ shall be used.

A UE shall initiate the cell update procedure in the following cases:

…

1> Cell reselection:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met:

3> if the UE is in CELL_FACH or CELL_PCH state and the UE performs cell re-selection; or

3> if the UE is in CELL_FACH state and the variable C_RNTI is empty:

4> perform cell update using the cause "cell reselection".

the UE shall:

…

1> in case of a cell update procedure:

2> set the IE "RRC transaction identifier" in any response message transmitted below to the value of "RRC transaction identifier" in the entry for the CELL UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry.

…

1> transmit a response message as specified in TS 25.331 subclause 8.3.1.7;

…

Reference

3GPP TS 25.304 clause 5.2.6.1.4.

3GPP TS 25.304 clause 5.4.3.

3GPP TS 25.331 clause 8.3.1.

### 8.3.1.39.2 Test purpose

1. To confirm that the UE uses the correct SIB 4 IEs to perform cell reselection calculation in CELL_PCH.

### 8.3.1.39.3 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 4 are active.

UE: CELL_PCH (state 6-12) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.1.39**

| Parameter | Unit | Cell 1 | | | Cell 4 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | High Range Test Frequency | | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | -67 | -82 | OFF | -60 | -60 |

Table 8.3.1.39 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions. SS switches the power settings to columns "T1" and “T2”, when the description below specifies.

The UE is brought to CELL_PCH state and is camped onto cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.1.39. The UE shall remain on cell 1 even after expiry of Treselecion. SS configures its downlink transmission power settings according to columns "T2" in table 8.3.1.39. The UE shall find cell 4 to be more suitable for service after expiry of Treselection, and shall transmit a CELL UPDATE message to the SS on the uplink CCCH of cell 4 and set IE "Cell update cause" to "Cell Reselection". SS checks this is received after expiry of Treselection. Upon reception of CELL_UPDATE message, SS replies with a CELL UPDATE CONFIRM message with the IE "RRC State Indicator" set to "CELL_PCH". After receiving this message, the UE returns to CELL_PCH state without transmitting any uplink message. SS calls for generic procedure C.4 to check that UE is in CELL_PCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_PCH state in cell 1 |
| 2 | | | | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.3.1.39. SS checks that no message is received even after expiry of Treselection. |
| 3 | | | | SS applies the downlink transmission power settings, according to the values in columns "T2" of table 8.3.1.39. The UE shall find that the cell 4 is better for service and perform a reselection. SS checks that no message is received until Treselection expires. |
| 4 | → | | CELL UPDATE | The UE moves to CELL_FACH state and transmits this message with the IE "Cell update cause" set to "cell reselection" |
| 5 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_PCH". |
| 6 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 4 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | FDD |
| - s-Intersearch | Not Present |
| - Qqualmin | -24 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - $Qhyst1_{s}$ | 0 (0 dB) |
| - $Qhyst1_{s,PCH}$ | 7 (14 dB) |
| - $Treselection_{s,PCH}$ | 15 seconds |

CELL UPDATE (Steps 4)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |

CELL UPDATE CONFIRM (Step 5)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator<br>UTRAN DRX cycle length coefficient | CELL_PCH<br>3 |

#### 8.3.1.39.4 Test requirement

At step 2 no cell update is received, even after expiry of Treselelection

At step 3 no cell update is received until after Treselection has expired.

At step 4 the UE shall reselect to cell 4 and then it shall transmit a CELL UPDATE message which sets the value "cell reselection" in IE "Cell update cause".

### 8.3.1.40 Cell update: Transition from CELL_PCH to CELL_DCH, inclusion of establishment cause

#### 8.3.1.40.1 Definition

#### 8.3.1.40.2 Conformance requirement

Upon initiation of the initial direct transfer procedure when the UE is in CELL_PCH or URA_PCH state, the UE shall:

1> perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";

1> when the cell update procedure completed successfully:

2> continue with the initial direct transfer procedure as below.

……

The UE shall set the IEs in the CELL UPDATE message as follows:

…

1> if the variable ESTABLISHMENT_CAUSE is initialised:

2> include the IE "Establishment cause" and set it to the value of the variable ESTABLISHMENT_CAUSE.

……..

When the UE receives a CELL UPDATE CONFIRM/URA UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE may:

1> maintain a list of the set of cells to which the UE has Radio Links if the IE "Cell ID" is present.

the UE shall:

…

1> if the variable ESTABLISHMENT_CAUSE is set:

2> clear the variable ESTABLISHMENT_CAUSE.

#### Reference

3GPP TS 25.331 clause 8.1.8.2, 8.3.1.3, 8.3.1.6

8.3.1.40.3 Test purpose

1. To confirm that, in the case the Cell Update procedure is initiated by a UE in CELL_PCH state in order to transmit the Initial Direct Transfer message, the UE shall include the IE “Establishment cause” in the Cell Update message.

2. To confirm that the IE “Establishment Cause” is not included in the following Initial Direct Transfer message.

8.3.1.40.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: CELL_PCH (state 6-12) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports PS+CS

Test Procedure

The test operator is prompted to make an out-going CS call. The UE shall transmit a CELL UPDATE message to the SS on the uplink CCCH, with the IE "Cell update cause" set to value "uplink data transmission" and IE “Establishment cause” set to “Originating conversational call”. After receiving such a message, SS transmits a CELL UPDATE CONFIRM message on downlink DCCH to send the UE to CELL_DCH state. The UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC and subsequently transmits an INITIAL DIRECT TRANSFER message using AM RLC on DCCH with the IE “Establishment cause” set to “Not Present”. After reception of the CM Service Request message from the UE, the SS will send a CM Service Reject to complete the Service Request procedure.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS prompts the test operator to make an outgoing CS call. |
| 2 | → | | CELL UPDATE | The UE sets "Cell update cause" IE as "uplink data transmission" and “Establishment cause” IE as “Originating Conversational Call “. |
| 3 | ← | | CELL UPDATE CONFIRM | See message content. UE moves to CELL_DCH state |
| 3a | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | → | | INITIAL DIRECT TRANSFER ( CM SERVICE REQUEST ) | The IE “Establishment cause” is not present. |
| 5 | ← | | DOWNLINK DIRECT TRANSFER ( CM SERVICE REJECT ) | |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

CELL UPDATE (Step 2)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause<br>Establishment cause | uplink data transmission<br>originating Conversational Call |

CELL UPDATE CONFIRM (Step 3)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A4. |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 3a)

Use the default message with the same message type specified in clause 9 of TS 34.108.

INITIAL DIRECT TRANSFER (Step 4)

Use the default message with the same message type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CN Domain Identity<br>Establishment cause | CS domain<br>Not Present |

### 8.3.1.40.5 Test requirement

After step 1, the UE shall transmit a CELL UPDATE message where the IE "Cell update cause" is set to "uplink data transmission" and the IE “Establishment cause” is set to “Originating conversation call”.

After step 3 the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 3a, the UE shall transmit an INITIAL DIRECT TRANSFER message to SS using AM RLC on DCCH in CELL_DCH state with no Establishment cause IE.

## 8.3.1.41 Cell Update: Transition from URA_PCH to CELL_DCH: Success (start of E-DCH transmission)

### 8.3.1.41.1 Definition

All UEs which support FDD and HS-PDSCH and E-DPDCH and all UEs which support TDD and HS-PDSCH and E-PUCH.

### 8.3.1.41.2 Conformance requirement

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

…

A UE shall initiate the cell update procedure in the following cases:

1> Paging response:

…

1> Uplink data transmission:

2> if the UE is in URA_PCH or CELL_PCH state; and

2> if the UE has uplink RLC data PDU or uplink RLC control PDU on RB1 or upwards to transmit:

3> perform cell update using the cause "uplink data transmission".

…

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

When the UE receives a CELL UPDATE CONFIRM/URA UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE shall:

1>act upon all received information elements as specified in subclause 8.6, unless soecified otherwise in the following:

2> if the IE "Frequency info" is included in the message:

3> if the IE "RRC State Indicator" is set to the value "CELL_DCH":

4> act on the IE "Frequency info" as specified in subclause 8.6.6.1 in TS 25.331.

…

If, after completion of the procedure, the UE will be in CELL_DCH state, the UE shall:

1> for FDD, 3.84 Mcps TDD and 7.68 Mcps TDD, if the IE "Frequency info" is included; or

1> for 1.28 Mcps TDD, if the IE "Frequency info" is included and the "Second Frequency info" is not included:

2> if the frequency is different from the currently used frequency:

3> store and use the frequency indicated by the IE "Frequency Info";

3> if the received message is used to perform a Timing-maintained hard handover (see subclause 8.3.5.2), and IE "Timing maintained Synchronization indicator" is included:

4> not perform any physical layer synchronisation procedure (FDD only);

3> else:

4> perform the physical layer synchronisation procedure A as specified in [29] (FDD only).

…

If the IE "New H-RNTI" is included, the UE shall:

1> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

1> for FDD:

2> if the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value(s) in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

1> for TDD:

2> if the IE "New E-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

1> for TDD:

2> use the value of New E-RNTI stored in the variable E_RNTI as the UE identity in the E-AGCH reception procedure and the E-RUCCH transmission procedure in the physical layer.

…

If the IE "Downlink HS-PDSCH Information" is included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message, the UE shall:

1> if the IE "HS-SCCH Info" is included:

2> act as specified in subclause 8.6.6.33 of TS 25.331.

1> if the IE "Measurement Feedback Info" is included:

2> act as specified in subclause 8.6.6.34 of TS 25.331.

1> if the IE "HS-DSCH Timeslot Configuration" or "HS-PDSCH Midamble Configuration" is included:

2> store the received configuration;

2> determine the value for the HS_DSCH_RECEPTION variable and take actions as described in subclause 8.5.25.

If the IE "HS-SCCH Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration", and the UE shall also use the IE "Power Control GAP" for 1.28 Mcps TDD.

2> in 3.84 Mcps TDD and 7.68 Mcps TDD:

3> use the parameters specified in the IE "HS-SICH power control info" for open loop power control as defined in subclause 8.5.7.

2> in 1.28 Mcps TDD:

3> use the IE " $PRX_{HS-SICH}$ " to calculate and set an initial uplink transmission power;

3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control;

3> perform closed loop power control on HS-SICH within the interval indicated in the IE "Power Control GAP";

3> use the IE "Pathloss compensation switch" to determine if the pathloss compensation from the beacon channel estimation should be taken into account for closed loop power control on HS-SICH;

3> use default value of "Uplink synchronisation frequency" and same value of "Uplink synchronisation step size" in "Uplink DPCH info" for HS-SICH upon reception of SS commands for closed loop uplink synchronisation on HS-SICH.

If the IE "Measurement Feedback Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving HS-DSCH radio link.

2> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving E-DCH radio link.

2> if the IE "E-AGCH Info" is included:

3> store the newly received E-AGCH configuration.

2> if the IE "E-HICH information" is included:

3> store this E-HICH configuration for the concerning radio link.

2> if the IE "E-RGCH information" is included:

3> store this E-RGCH configuration for the concerning radio link.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> for FDD:

2> if the IE "E-DPCCH Info" is included:

3> store the newly received E-DPCCH configuration.

2> if the IE "E-DPDCH Info" is included:

3> store the newly received E-DPDCH configuration.

…

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2>perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Reference

3GPP TS 25.331 clauses 8.2.2.3, 8.2.2.4, 8.3.1, 8.5.28, 8.6.3.14, 8.6.5.16, 8.6.5.17, 8.6.5.18, 8.6.6.37.

### 8.3.1.41.3 Test purpose

To confirm that the UE enters the CELL_DCH state after it receives a CELL UPDATE CONFIRM message with a physical channel configuration causing it to start E-DCH transmission and HS_DSCH reception.

To confirm that the UE executes a cell update procedure when the UE transmits uplink data if the UE is in CELL_PCH state.

### 8.3.1.41.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents)

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A12 for FDD or A11 for 1.28 Mcps TDD as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH for FDD or E-PUCH for TDD

Test Procedure

The UE is in the CELL_DCH state and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to URA_PCH. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enters URA_PCH state.

The SS transmits a PAGING TYPE 1 message. The UE then enters the CELL_FACH state to transmit a CELL UPDATE message to the SS on the uplink CCCH with the IE “Cell update cause”set to value “Paging response” in response to the paging.

The SS transmits CELL UPDATE CONFIRM message which includes HS-PDSCH and E-DPDCH for FDD or E-PUCH for 1.28 Mcps TDD physical channel parameters on the downlink DCCH. Then the UE resumes E-DCH transmission and HS-DSCH reception, and transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE enters the URA_PCH state |
| 3 | ← | | PAGING TYPE 1 | |
| 4 | → | | CELL UPDATE | The UE enters the CELL_FACH state. |
| 5 | ← | | CELL UPDATE CONFIRM | |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE enters the CELL_DCH state and starts E-DCH transmission and HS-DSCH reception. |

Specific Message Contents

SYSTEM INFORMATION BLOCK TYPE 1

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| -UE Timers and constants in connected mode<br>- T312 | <br>2 |

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| URA Identity | 0000 0000 0000 0001B |

Paging Type 1 (Step 3)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | Equal to the U-RNTI assigned earlier. |
| - SRNC Identity | |
| - S-RNTI | |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Step 4)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI<br>- S-RNTI<br>- SRNC Identity<br>Cell Update Cause | <br>Check to see if set to value assigned in cell 1.<br>Check to see if set to value assigned in cell 1.<br>Check to see if set to “Paging response” |

CELL UPDATE CONFIRM (Step 5) (FDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| New Secondary E-RNTI | Not Present |
| RRC State indicator | CELL_DCH |
| Uplink DPCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 . |
| Downlink information common for all radio links<br><br><br>- Timing indicator<br>- Default DPCH Offset Value | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12 except for the following IEs.<br>Initialize<br>Arbitrary set to value 0..306688 by step of 512 |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |

CELL UPDATE CONFIRM (Step 5) (TDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New E-RNTI | '1010 1010 1010 1010' |
| RRC State indicator | CELL_DCH |
| Uplink DPCH info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11 . |
| Downlink information common for all radio links<br><br><br>- Timing indicator<br>- Default DPCH Offset Value | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11 except for the following IEs.<br>Initialize<br>Arbitrary set to value 0..7 |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A11. |

#### 8.3.1.41.5 Test requirement

After step 1, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 3, the UE shall transmit a CELL UPDATE message on uplink CCCH.

After step 5, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

### 8.3.1.42 Cell Update: Transition from CELL_PCH to CELL_DCH: Success (frequency modification, start of E-DCH transmission)

#### 8.3.1.42.1 Definition

All UEs which support FDD and HS-PDSCH and E-DPDCH and all UEs which support TDD and HS-PDSCH and E-PUCH..

#### 8.3.1.42.2 Conformance requirement

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

…

A UE shall initiate the cell update procedure in the following cases:

1> Paging response:

…

1> Uplink data transmission:

2> if the UE is in URA_PCH or CELL_PCH state; and

2> if the UE has uplink RLC data PDU or uplink RLC control PDU on RB1 or upwards to transmit:

3> perform cell update using the cause "uplink data transmission".

…

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

When the UE receives a CELL UPDATE CONFIRM/URA UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE shall:

1>act upon all received information elements as specified in subclause 8.6, unless soecified otherwise in the following:

2> if the IE "Frequency info" is included in the message:

3> if the IE "RRC State Indicator" is set to the value "CELL_DCH":

4> act on the IE "Frequency info" as specified in subclause 8.6.6.1 in TS 25.331.

…

If the IE "New H-RNTI" is included, the UE shall:

1> if the IE "Downlink HS-PDSCH Information" is also included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 of TS 25.331 applied on the received message:

2> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

1> for FDD:

2> if the IE "New Primary E-RNTI" and/or the IE "New Secondary E-RNTI" are/is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value(s) in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

1> for TDD:

2> if the IE "New E-RNTI" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

3> store the new value in the variable E_RNTI;

3> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> for FDD:

2> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as UE identities in the E-AGCH reception procedure in the physical layer.

1> for TDD:

2> use the value of New E-RNTI stored in the variable E_RNTI as the UE identity in the E-AGCH reception procedure and the E-RUCCH transmission procedure in the physical layer.

…

If, after completion of the procedure, the UE will be in CELL_DCH state, the UE shall:

1> for FDD, 3.84 Mcps TDD and 7.68 Mcps TDD, if the IE "Frequency info" is included; or

1> for 1.28 Mcps TDD, if the IE "Frequency info" is included and the "Second Frequency info" is not included:

2> if the frequency is different from the currently used frequency:

3> store and use the frequency indicated by the IE "Frequency Info";

3> if the received message is used to perform a Timing-maintained hard handover (see subclause 8.3.5.2), and IE "Timing maintained Synchronization indicator" is included:

4> not perform any physical layer synchronisation procedure (FDD only);

3> else:

4> perform the physical layer synchronisation procedure A as specified in [29] (FDD only).

…

If the IE "Downlink HS-PDSCH Information" is included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message, the UE shall:

1> if the IE "HS-SCCH Info" is included:

2> act as specified in subclause 8.6.6.33 of TS 25.331.

1> if the IE "Measurement Feedback Info" is included:

2> act as specified in subclause 8.6.6.34 of TS 25.331.

1> if the IE "HS-DSCH Timeslot Configuration" or "HS-PDSCH Midamble Configuration" is included:

2> store the received configuration;

2> determine the value for the HS_DSCH_RECEPTION variable and take actions as described in subclause 8.5.25.

If the IE "HS-SCCH Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

1> in the case of TDD:

2> receive the HS-SCCH(s) according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> transmit the HS-SICH according to the IEs "Timeslot Number", "Channelisation Code" and Midamble configuration IEs.

2> for HS-SCCH power control the UE shall use the "BLER target" signalled in the first occurrence of the "HS-SCCH Set Configuration", and the UE shall also use the IE "Power Control GAP" for 1.28 Mcps TDD.

2> in 3.84 Mcps TDD and 7.68 Mcps TDD:

3> use the parameters specified in the IE "HS-SICH power control info" for open loop power control as defined in subclause 8.5.7.

2> in 1.28 Mcps TDD:

3> use the IE " $PRX_{HS-SICH}$ " to calculate and set an initial uplink transmission power;

3> use the IE " TPC step size" upon reception of TPC commands for closed loop power control;

3> perform closed loop power control on HS-SICH within the interval indicated in the IE "Power Control GAP";

3> use the IE "Pathloss compensation switch" to determine if the pathloss compensation from the beacon channel estimation should be taken into account for closed loop power control on HS-SICH;

2> use default value of "Uplink synchronisation frequency" and same value of "Uplink synchronisation step size" in "Uplink DPCH info" for HS-SICH upon reception of SS commands for closed loop uplink synchronisation on HS-SICH.

If the IE "Measurement Feedback Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> for FDD:

2> if the IE "E-DPCCH Info" is included:

3> store the newly received E-DPCCH configuration.

2> if the IE "E-DPDCH Info" is included:

3> store the newly received E-DPDCH configuration.

…

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1>For FDD:

2> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

3> subclause 8.6.3.14 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

2> perform E-HICH reception procedures for all radio links in the E-DCH active set;

2> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

2> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-DPCCH Info".

2> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

3> subclause 8.6.5.16 for the IE "E-DCH Transmission Time Interval";

3> subclause 8.6.5.17 for the IE "HARQ info for E-DCH";

3> subclause 8.6.6.37 for the IE "E-DPDCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

1>For TDD:

2>perform E-AGCH reception procedures according to the stored E_AGCH configureation as stated in:

3> subclause 8.6.3.14 for the IE "New E-RNTI".

2> Perform E-HICH reception;

2> for 3.84/7.68 Mcps TDD, perform E-RUCCH transmission procedures according to the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

2> for 1.28 Mcps TDD, perform E-RUCCH transmission procedure according to the stored PRACH configuration (see [60]) and the stored E-RUCCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-RUCCH Info".

NOTE 1: The PRACH configuration is signalled directly to the UE in "E-RUCCH Info" IE in case of E-DCH serving cell change.

2> Perform E-PUCH transmission procedures according to the stored E-PUCH configuration as stated in:

3> subclause 8.6.6.37 for the IE "E-PUCH Info".

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

3> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18).

2> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

3> be performed in accordance with the received scheduling grant on E-AGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37).

2> obtain and format the appropriate information on E-UCCH (see [15]). For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, the UE shall use the lowest E-DCH capability category, as specified in [35], to signal the UL control information on E-UCCH.

NOTE 2: For 1.28 Mcps TDD, when performing transmission on signalling radio bearer before RAB has been established, UTRAN should use the lowest E-DCH capability category when performing configuration, scheduling and reading the control information on E-UCCH, as it is not possible for Node B to be aware of the UE's E-DCH capability category during this period.

Reference

3GPP TS 25.331 clauses 8.2.2.3, 8.2.2.4, 8.3.1, 8.6.3.1,8.6.3.1b,8.6.3.14, 8.6.5.6,8.6.5.16, 8.6.5.17, 8.6.6.1, 8.6.6.32, 8.6.6.33, 8.6.6.34, 8.6.6.37.

### 8.3.1.42.3 Test purpose

To confirm that the UE enters the CELL_DCH state after it receives a CELL UPDATE CONFIRM message with a physical channel configuration causing it to start E-DCH transmission and HS-DSCH reception on a different cell and frequency.

To confirm that the UE enters CELL_PCH state on another frequency and stops E-DCH transmission and HS-DSCH reception when it receives a RADIO BEARER RECONFIGURATION message.

### 8.3.1.42.4 Method of test

Initial Condition

System Simulator: 2 cells - cell 1 is active and cell 6 is inactive.

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A13 for FDD or A12 for 1.28 Mcps TDD as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH for FDD or E-PUCH for TDD

Test Procedure

**Table 8.3.1.42**

| Parameter | Unit | Cell 1 | | | Cell 6 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Frequency (f1) | | | High Range Frequency (f2) | | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -72 | -60 | Off | -55 | -72 |
| P-CCPCH RSCP (1.28 Mcps TDD) | dBm | -60 | -72 | -60 | Off | -55 | -72 |

Table 8.3.1.42 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The SS has configured its downlink transmission power setting according to columns "T0" in table 8.3.1.42. UE is in state 6-18 as specified in TS34.108 clause 7.4 in cell 1and has a radio bearer established mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception.

The SS switches its downlink transmission power settings to columns "T1". The SS transmits a RADIO BEARER RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to CELL_PCH in cell 6. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC, selects cell 6 and enters CELL_PCH state.

The SS transmits a PAGING TYPE 1 message. The UE then enters the CELL_FACH state to transmit a CELL UPDATE message to the SS on the uplink CCCH with the IE “Cell update cause”set to value “Paging response” in response to the paging.

The SS switches its downlink transmission power settings to columns "T2". The SS transmits CELL UPDATE CONFIRM message, which invokes UE to re-map the SRB's & the PS RAB on E-DCH/HS-DSCH for cell 1. Then the UE establishes HS-DSCH and E-DCH in cell 1, and resumes E-DCH transmission and transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH in cell 1.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_DCH state in cell 1 and the SS configures its downlink transmission power setting according to columns "T1" in table 8.3.1.42. |
| 2 | ← | | RADIO BEARER RECONFIGURATION | |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | After transmitting this message, the UE enters the CELL_PCH state in cell 6 |
| 4 | SS | | | SS sends the L2 ack on the RADIO BEARER RECONFIGURATION COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step.<br>Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 5 | ← | | PAGING TYPE 1 | |
| 6 | → | | CELL UPDATE | The UE enters the CELL_FACH state. |
| 7 | SS | | | The SS switches its downlink transmission power settings to columns "T2" in table 8.3.1.42. |
| 8 | ← | | CELL UPDATE CONFIRM | |
| 9 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE changes to cell 1, enters the CELL_DCH state and starts E-DCH transmission and HS-DSCH reception. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 2) (FDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |

| Information Element | Value/remark |
|---|---|
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |

| Information Element | Value/remark |
|---|---|
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |

| Information Element | Value/remark |
|---|---|
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Maximum allowed UL TX power | Not Present |

RADIO BEARER RECONFIGURATION (Step 2) (1.28 Mcps TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |

| Information Element | Value/remark |
|---|---|
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |

| Information Element | Value/remark |
|---|---|
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |

| Information Element | Value/remark |
|---|---|
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN(Nt) | Same UARFCN as used for cell 6 |
| Maximum allowed UL TX power | Not Present |

RADIO BEARER RECONFIGURATION (Step 2) (3.84 Mcps TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.3.4.5.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.3.4.5.1 |
| - MAC logical channel priority | 2 |

| Information Element | Value/remark |
|---|---|
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.3.4.5.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |

| Information Element | Value/remark |
|---|---|
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.3.4.5.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |

| Information Element | Value/remark |
|---|---|
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6.10 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN(Nt) | Same UARFCN as used for cell 6 |
| Maximum allowed UL TX power | Not Present |

RADIO BEARER RECONFIGURATION (Step 2) (7.68 Mcps TDD)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.11.6.4.5.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6.11 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.11.6.4.5.1 |
| - MAC logical channel priority | 2 |

| Information Element | Value/remark |
|---|---|
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6.11 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.11.6.4.5.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |

| Information Element | Value/remark |
|---|---|
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6.11 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.11.6.4.5.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6.11 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |

| Information Element | Value/remark |
|---|---|
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6.11 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN(Nt) | Same UARFCN as used for cell 6 |
| Maximum allowed UL TX power | Not Present |

Paging Type 1 (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | Equal to the U-RNTI assigned earlier. |
| - SRNC Identity | |
| - S-RNTI | |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Step 6)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Paging response” |

CELL UPDATE CONFIRM (Step 8) (FDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| RRC State indicator | CELL_DCH |
| RB information to reconfigure list | |
| - RB RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |

| | |
|---|---|
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |

| | |
|---|---|
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |

| | |
|---|---|
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Frequency info | Set to the frequency of cell 1 |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Downlink information common for all radio links | |
| - Downlink information for all radio link | |
| - CHOICE *DPCH info* | |
| - Downlink DPCH info for all RL | |
| - Timing Indication | Initialize |
| - Downlink DPCH power control information | |
| - DPC mode | 0 (Single) |
| - CHOICE mode | FDD |
| - Power offset PPilot-DPDCH | 0 |
| - DL rate matching restriction information | Not Present |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set |

| | |
|---|---|
| - CHOICE mode | FDD |
| - DPCH compressed mode info | Not Present |
| - TX Diversity mode | None |
| - SSDT information | Not present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | Not Present |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | |
| - Choice mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the primary scrambling code of cell 1 |
| - PDSCH with SHO DCH info | Not Present |
| - PDSCH code mapping | Not Present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - CHOICE DPCH info | |
| - Downlink DPCH info for each RL | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 |
| - Secondary CPICH info | Not Present |
| - DL channelisation code | |
| - Secondary scrambling code | 1 |
| - Spreading factor | Reference to clause 6.10 Parameter Set |
| - Code number | 0 |
| - Scrambling code change | OMIT |
| - TPC combination index | 0 |
| - Closed loop timing adjustment mode | Not Present |
| - E-AGCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| - E-HICH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| - E-RGCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |

CELL UPDATE CONFIRM (Step 8) (1.28 Mcps TDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New E-RNTI | '0101 0101 0101 0101' |
| RRC State indicator | CELL_DCH |
| RB information to reconfigure list | |
| - RB_RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |

| | |
|---|---|
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |

| | |
|---|---|
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |

| | |
|---|---|
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Frequency info | Set to the frequency of cell 1 |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Downlink information common for all radio links | |
| - Downlink information for all radio link | |
| - CHOICE *DPCH info* | |
| - Downlink DPCH info for all RL | |
| - Timing Indication | Initialize |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | |
| - Choice mode | TDD |
| - Primary CCPCH info | |
| - CHOICE *TDD option* | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Set to Cell parameters ID of cell 1 |
| - SCTD indicator | FALSE |
| - Downlink DPCH info for each RL | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition |

| | |
|---|---|
| | A12. |
| - E-AGCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| - E-HICH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| - E-RGCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |

CELL UPDATE CONFIRM (Step 8) (3.84 Mcps TDD and 7.68Mcps TDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New E-RNTI | '0101 0101 0101 0101' |
| RRC State indicator | CELL_DCH |
| RB information to reconfigure list | |
| - RB_RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |

| | |
|---|---|
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |

| | |
|---|---|
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 10 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |

| | |
|---|---|
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Frequency info | Set to the frequency of cell 1 |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| Downlink information common for all radio links | |
| - Downlink information for all radio link | |
| - CHOICE *DPCH info* | |
| - Downlink DPCH info for all RL | |
| - Timing Indication | Initialize |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | |
| - Choice mode | TDD |
| - Primary CCPCH info | |
| - CHOICE *TDD option* | 3.84 and 7.68 Mcps TDD |
| - CHOICE sync case | Sync Case 2 |
| - Timeslot | 0 |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Set to Cell parameters ID of cell 1 |
| - SCTD indicator | FALSE |

| | |
|---|---|
| - Downlink DPCH info for each RL | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| - E-AGCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| - E-HICH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |
| - E-RGCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A12. |

#### 8.3.1.42.5 Test requirement

After step 2, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 5, the UE shall transmit a CELL UPDATE message on the uplink CCCH.

After step 8, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC in cell 1.

### 8.3.1.42a Cell Update: Transition from CELL_PCH to CELL_DCH: Success (frequency modification, start of E-DCH transmission, F-DPCH Configured)

#### 8.3.1.42a.1 Definition

All UEs which support FDD, HS-PDSCH, E-DPDCH and fully support F-DPCH.

#### 8.3.1.42a.2 Conformance requirement

same conformance requirement as in clause 8.3.1.42.2

#### 8.3.1.42a.3 Test purpose

same test purpose as in clause 8.3.1.42.3

#### 8.3.1.42a.4 Method of test

Initial Condition

System Simulator: 2 cells - cell 1 is active and cell 6 is inactive.

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A14 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH
- UE supports E-DPDCH
- UE fully supports F-DPCH

Test Procedure

Same test procedure as in clause 8.3.1.42.4

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 2)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 2 |

| Information Element | Value/remark |
|---|---|
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |

| Information Element | Value/remark |
|---|---|
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |

| Information Element | Value/remark |
|---|---|
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 1 |
| Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Maximum allowed UL TX power | Not Present |

Paging Type 1 (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | Equal to the U-RNTI assigned earlier. |
| - SRNC Identity | |
| - S-RNTI | |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Step 6)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Paging response” |

CELL UPDATE CONFIRM (Step 8)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| RRC State indicator | CELL_DCH |
| RB information to reconfigure list | |
| - RB RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |

| | |
|---|---|
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |

| | |
|---|---|
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |

| | |
|---|---|
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| Frequency info | Set to the frequency of cell 1 |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| Downlink information common for all radio links | |
| - Downlink information for all radio link | |
| - CHOICE *DPCH info* | F-DPCH |
| - Downlink F-DPCH info for all RL | |
| - Timing Indication | Initialize |
| - Downlink F-DPCH power control information | |
| - DPC mode | 0 (single) |
| - TPC command error rate target | 0.04 |
| - CHOICE mode | FDD |
| - DPCH compressed mode info | Not Present |

| | |
|---|---|
| - TX Diversity mode | None |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | Not Present |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | |
| - Choice mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the primary scrambling code of cell 1 |
| - PDSCH with SHO DCH info | Not Present |
| - PDSCH code mapping | Not Present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - CHOICE DPCH info | F-DPCH |
| - Downlink F-DPCH info for each RL | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - F-DPCH frame offset | Set to value Default F-DPCH Offset Value (as currently stored in SS) mod 38400 |
| - Secondary CPICH info | Not Present |
| - Secondary scrambling code | Not Present |
| - Code number | 12 |
| - TPC combination index | 0 |
| - Closed loop timing adjustment mode | Not Present |
| - E-AGCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| - E-HICH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| - E-RGCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |

#### 8.3.1.42a.5 Test requirement

same test requirement as in clause 8.3.1.42.5

### 8.3.1.43 Cell Update: Radio Link Failure, with active E-DCH transmission

#### 8.3.1.43.1 Definition

All UEs which support FDD or TDD and HS-PDSCH and E-DPDCH for FDD or E-PUCH for TDD,and fully support F-DPCH (FDD only).

#### 8.3.1.43.2 Conformance requirement

1> Radio link failure:

…

3> if the UE is in CELL_DCH state and the criteria for radio link failure are met as specified in subclause 8.5.6 of TS 25.331; or

…

4> perform cell update using the cause "radio link failure".

When initiating the URA update or cell update procedure, the UE shall:

…

1> if any IEs releated to HS-DSCHare stored in the UE:

2> clear any stored IE "Downlink HS-PDSCH information";

2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

1> if any IEs related to E-DCHare stored in the UE:

2> clear any stored IE "E-DCH info";

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

In CELL_DCH State, after receiving N313 consecutive "out of sync" indications from layer 1 for the established DPCCH or F-DPCH physical channel in FDD, and the physical channels associated with mapped DCCHs in TDD, the UE shall:

1> start timer T313;

1> upon receiving N315 successive "in sync" indications from layer 1 and upon change of UE state:

2> stop and reset timer T313.

1> if T313 expires:

2> consider it as a "Radio link failure".

Periods in time where neither "in sync" nor "out of sync" is reported by layer 1 do not affect the evaluation of the number of consecutive (resp. successive) "in sync" or "out of sync" indications.

When a radio link failure occurs, the UE shall:

1> clear the dedicated physical channel configuration;

1> perform actions as specified for the ongoing procedure;

1> if no procedure is ongoing or no actions are specified for the ongoing procedure:

2> perform a cell update procedure according to subclause 8.3.1 using the cause "radio link failure".

Reference

3GPP TS 25.331 clauses 8.3.1.2, 8.5.6.

### 8.3.1.43.3 Test purpose

1. To confirm that the UE detects the radio link failure condition when the F-DPCH physical channel is established (FDD only).
2. To confirm that the UE stops the E-DCH transmission and performs a Cell Update procedure after radio link failure.
3. To confirm that the UE keeps the radio bearer mapping option and transport channel configuration for E-DCH after the radio link failure. To confirm that the UE resumes the E-DCH transmission after the Cell Update procedure.

### 8.3.1.43.4 Method of test

Initial Condition

System Simulator: 1 cell – Cell 1

UE: PS-DCCH_DCH (state 6-7) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or 1.28 Mcps TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH for FDD or E-PUCH for 1.28 Mcps TDD
- UE fully supports F-DPCH (FDD only)

Test Procedure

**Table 8.3.1.43**

| Parameter | Unit | Cell 1 | |
|---|---|---|---|
| | | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF |

Table 8.3.1.43 illustrates the downlink power to be applied to Cell 1 at various time instants of the test execution. Column marked "T0" denote the initial conditions.

The UE is in CELL_DCH state and only signalling radio bearers have been established. The SS initiates P26 to make the UE move to state 6-18 as specified in TS 34.108 clause 7.4. The UE is now in the CELL_DCH state and has radio bearers mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception.
The SS configures its downlink transmission power settings according to column “T1” in table 8.3.1.43. After expiry of timer T313, the UE shall detect a radio link failure in Cell 1.

The SS waits for 10s (see Note 1) and then configures its downlink transmission power settings according to column “T0” in table 8.3.1.43. The UE shall then enter CELL_FACH state and transmit a CELL UPDATE message on the uplink CCCH in Cell 1.
The SS transmits a CELL UPDATE CONFIRM message, which requests the UE to transit to CELL_DCH state and provides the physical channel configuration to resume the interrupted radio bearer mapped on E-DCH / HS-DSCH.
The UE sets up the physical channels associated to E-DCH / HS-DSCH, enters CELL_DCH state and sends a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

The SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

NOTE 1: The 10s delay guarantees the expiry of timer T313 (default value = 3s) and the non-expiry of timer T315 (default value = 180s).

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P26 | See below for the specific message content used in RADIO BEARER SETUP message. |
| 1 | | | | The SS configures Cell 1 according to the “T1" power settings in table 8.3.1.43.<br>The SS starts to listen to the uplink CCCH of Cell 1. |
| 2 | | | | The UE detects the radio link failure and stops transmission of E-DCH. |
| 3 | → | | CELL UPDATE | 10s after step 1, the SS configures Cell 1 according to the “T0” power settings in table 8.3.1.43.<br>The UE shall camp on Cell 1 and transmit a Cell Update message with the IE "Cell update cause" set to "radio link failure". |
| 4 | ← | | CELL UPDATE CONFIRM | The SS orders the UE to re-establish the E-DCH / HS-DSCH configuration. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0) (FDD and 1.28Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using one multiplexing option (1/1) and SRBs mapped on E-DCH/HS-DSCH" in 34.108, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| RB information to be affected | |
| - RB identity | 1 (UM DCCH for RRC) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 1 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB identity | 2 (AM DCCH for RRC) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 2 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |

| | |
|---|---|
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB identity | 3 (AM DCCH for NAS High Priority) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 3 |
| - Uplink transport channel type | RACH |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB identity | 4 (AM DCCH for NAS Low Priority) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 4 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 4 |

| | |
|---|---|
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |

RADIO BEARER SETUP (Step 0) (3.84Mcps TDD and 7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using one multiplexing option (1/1) and SRBs mapped on E-DCH/HS-DSCH" in 34.108, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| RB information to be affected | |
| - RB identity | 1 (UM DCCH for RRC) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 1 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.3.4.1.2 for 3.84Mcps and 6.11.6.4.1.2 and 7.68Mcps (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB identity | 2 (AM DCCH for RRC) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 2 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.3.4.1.2 for 3.84Mcps and 6.11.6.4.1.2 and 7.68Mcps (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 2 |

| | |
|---|---|
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB identity | 3 (AM DCCH for NAS High Priority) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 3 |
| - Uplink transport channel type | RACH |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.3.4.1.2 for 3.84Mcps and 6.11.6.4.1.2 and 7.68Mcps (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB identity | 4 (AM DCCH for NAS Low Priority) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 4 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit List |

| | |
|---|---|
| - RLC size index | According to clause 6.10.3.4.1.2 for 3.84Mcps and 6.11.6.4.1.2 and 7.68Mcps (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |

CELL UPDATE (Step 3)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in Cell 1. |
| - SRNC Identity | Check to see if set to value assigned in Cell 1. |
| Cell Update Cause | Check to see if set to “Radio link failure” |

CELL UPDATE CONFIRM (Step 4) (FDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| New Secondary E-RNTI | Not Present |
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14 . |
| Downlink information common for all radio links | |
| - Downlink F-DPCH info common for all RL | |
| - Timing Indication | Initialise |
| - Downlink F-DPCH power control information | |
| - DPC mode | 0 (single) |
| - TPC command error rate target | 0.04 |
| - CHOICE mode | FDD |
| - DPCH compressed mode info | Not Present |
| - TX Diversity mode | None |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A14. |

CELL UPDATE CONFIRM (Step 4) (1.28 Mcps TDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New E-RNTI | '1010 1010 1010 1010' |
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13 . |
| Downlink information common for all radio links | |
| - Downling DPCH info common for all RL | |
| - Timing indicator | Initialize |
| - CFN-targetSFN frame offset | Not Present |
| - Downlink DPCH power control information | |
| - CHOICE mode | TDD |
| - TPC Step Size | 1 |
| - MAC-d HFN initial value | Not Present |
| - CHOICE mode | TDD |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Default DPCH Offset Value | Arbitrary set to value 0..7 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |

CELL UPDATE CONFIRM (Step 4) (3.84Mcps TDD and 7.68Mcps TDD)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New E-RNTI | '1010 1010 1010 1010' |
| RRC State indicator | CELL_DCH |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13 . |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indicator | Initialize |
| - CFN-targetSFN frame offset | Not Present |
| - Downlink DPCH power control information | |
| - CHOICE mode | TDD |
| - TPC Step Size | 1 |
| - MAC-d HFN initial value | Not Present |
| - CHOICE mode | TDD |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps or 7.68Mcps TDD |
| - CHOICE sync case | Sync case 2 |
| - Timeslot | 0 |

| Information Element | Value/remark |
|---|---|
| - Default DPCH Offset Value | Arbitrary set to value 0..7 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A13. |

#### 8.3.1.43.5 Test requirement

After step 2, the UE shall transmit a CELL UPDATE message.

After step 4, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and start transmission on E-DCH.

### 8.3.1.44 Cell Update: Transition from CELL_PCH to CELL_DCH: Success (frequency modification, start of discontinuous uplink transmission)

#### 8.3.1.44.1 Definition

All UEs which support FDD and UL DTX.

#### 8.3.1.44.2 Conformance requirement

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

…

A UE shall initiate the cell update procedure in the following cases:

1> Paging response:

…

1> Uplink data transmission:

2> if the UE is in URA_PCH or CELL_PCH state; and

2> if the UE has uplink RLC data PDU or uplink RLC control PDU on RB1 or upwards to transmit:

3> perform cell update using the cause "uplink data transmission".

…

In case the procedure was triggered by reception of a RADIO BEARER RECONFIGURATION message, the UE shall:

1> transmit a RADIO BEARER RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

When the UE receives a CELL UPDATE CONFIRM/URA UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE shall:

1>act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following:

2> if the IE "Frequency info" is included in the message:

3> if the IE "RRC State Indicator" is set to the value "CELL_DCH":

4> act on the IE "Frequency info" as specified in subclause 8.6.6.1 in TS 25.331.

…

If the IE "New H-RNTI" is included, the UE shall:

1> if the IE "Downlink HS-PDSCH Information" is also included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 of TS 25.331 applied on the received message:

2> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "New Primary E-RNTI" and/or the IE “New Secondary E-RNTI” is included, the UE shall:

1> store the new value(s) in the variable E_RNTI;

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as identities in the E-AGCH reception procedure in the physical layer.

…

If, after completion of the procedure, the UE will be in CELL_DCH state, the UE shall:

1> if the IE "Frequency info" is included:

2> if the frequency is different from the currently used frequency:

3> store and use the frequency indicated by the IE "Frequency Info"; and

3> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only).

…

If the IE "Downlink HS-PDSCH Information" is included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message, the UE shall:

1> if the IE "HS-SCCH Info" is included:

2> act as specified in subclause 8.6.6.33 of TS 25.331.

1> if the IE "Measurement Feedback Info" is included:

2> act as specified in subclause 8.6.6.34 of TS 25.331.

1> if the IE "HS-DSCH Timeslot Configuration" or "HS-PDSCH Midamble Configuration" is included:

2> store the received configuration;

2> determine the value for the HS_DSCH_RECEPTION variable and take actions as described in subclause 8.5.25.

If the IE "HS-SCCH Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

If the IE "Measurement Feedback Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the IE "E-DPCCH Info" is included:

2> store the newly received E-DPCCH configuration.

1> if the IE "E-DPDCH Info" is included:

2> store the newly received E-DPDCH configuration.

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

2> subclause 8.6.3.14 of TS 25.331 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

1> perform E-HICH reception procedures for all radio links in the active set for which an E-HICH configuration has been provided;

1> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

1> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

2> subclause 8.6.6.37 of TS 25.331 for the IE "E-DPCCH Info";

1> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

2> subclause 8.6.5.16 of TS 25.331 for the IE "E-DCH Transmission Time Interval";

2> subclause 8.6.5.17 of TS 25.331 for the IE "HARQ info for E-DCH";

2> subclause 8.6.6.37 of TS 25.331 for the IE “DPDCH Info”.

1> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

2> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18 of TS 25.331).

1> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

2> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

2> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37 of TS 25.331).

…

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> store the contents of the IE in the variable DTX_DRX_PARAMS.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.2.2.3, 8.2.2.4, 8.3.1, 8.6.3.1,8.6.3.1b,8.6.3.14, 8.6.5.6,8.6.5.16, 8.6.5.17, 8.6.6.1, 8.6.6.32, 8.6.6.33, 8.6.6.34, 8.6.6.37, 8.6.6.38, 8.6.6.39.

### 8.3.1.44.3 Test purpose

To confirm that the UE enters the CELL_DCH state after it receives a CELL UPDATE CONFIRM message with a physical channel configuration causing it to start E-DCH transmission, HS-DSCH reception and configure UL DTX on a different cell and frequency.

To confirm that the UE enters CELL_PCH state on another frequency and stops E-DCH transmission and HS-DSCH reception when it receives a RADIO BEARER RECONFIGURATION message.

### 8.3.1.44.4 Method of test

Initial Condition

System Simulator: 2 cells - cell 1 is active and cell 6 is inactive.

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18), with UL DTX configured, under condition A20 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission.

Test Procedure

**Table 8.3.1.44**

| Parameter | Unit | Cell 1 | | | Cell 6 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Frequency (f1) | | | High Range Frequency (f2) | | |
| CPICH Ec | dBm/3.84MHz | -60 | -72 | -60 | Off | -55 | -72 |

Table 8.3.1.44 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The SS has configured its downlink transmission power setting according to columns "T0" in table 8.3.1.44. UE is in state 6-18 under condition A20 as specified in TS34.108 clause 7.4 in cell 1and has a radio bearer established mapped on E-DCH and HS-DSCH established with active E-DCH (DTX) transmission and HS-DSCH reception.

The SS switches its downlink transmission power settings to columns "T1". The SS transmits a RADIO BEARER RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to CELL_PCH in cell 6. The UE transmits a RADIO BEARER RECONFIGURATION COMPLETE message using AM RLC, selects cell 6 and enters CELL_PCH state.

The SS transmits a PAGING TYPE 1 message. The UE then enters the CELL_FACH state to transmit a CELL UPDATE message to the SS on the uplink CCCH with the IE “Cell update cause”set to value “Paging response” in response to the paging.

The SS switches its downlink transmission power settings to columns "T2". The SS transmits CELL UPDATE CONFIRM message, which invokes UE to re-map the SRB's and the PS RAB on E-DCH/HS-DSCH for cell 1. Then the UE establishes HS-DSCH and E-DCH and configures UL DTX in cell 1, and resumes E-DCH transmission and transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH in cell 1.

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in CELL_DCH state in cell 1, with UL DTX configured, and the SS changes its downlink transmission power setting according to columns “T1” in table 8.3.1.44. |
| 2 | ← | | RADIO BEARER RECONFIGURATION | |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | After transmitting this message, the UE enters the CELL_PCH state in cell 6 |
| 4 | SS | | | SS sends the L2 ack on the RADIO BEARER RECONFIGURATION COMPLETE message and then waits 5 seconds to allow the UE to read system information before the next step.<br>Note: The SS should continue to keep the dedicated channel configuration during the time when the L2 ack is sent to the UE. |
| 5 | → | | PAGING TYPE 1 | |
| 6 | → | | CELL UPDATE | The UE enters the CELL_FACH state. |
| 7 | SS | | | The SS switches its downlink transmission power settings to columns “T2” in table 8.3.1.44. |
| 8 | ← | | CELL UPDATE CONFIRM | |
| 9 | → | | RADIO BEARER RECONFIGURATION COMPLETE | The UE changes to cell 1, enters the CELL_DCH state and starts E-DCH transmission, with UL DTX, and HS-DSCH reception. |
| 10 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |

Specific Message Contents

RADIO BEARER RECONFIGURATION (Step 2)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| RB information to reconfigure list | |
| - RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |

| Information Element | Value/remark |
|---|---|
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |

| Information Element | Value/remark |
|---|---|
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | According to clause 6.10.2.4.4.1 |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 600 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 250 |
| - Timer_poll | 250 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |

| Information Element | Value/remark |
|---|---|
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Deleted UL TrCH information | |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 1 |
| - Uplink transport channel type | E-DCH |
| - E-DCH MAC-d flow identity | 2 |
| Deleted DL TrCH information | |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 1 |
| Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Same uplink UARFCN as used for cell 6 |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for cell 6 |
| Maximum allowed UL TX power | Not Present |

Paging Type 1 (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | Equal to the U-RNTI assigned earlier. |
| - SRNC Identity | |
| - S-RNTI | |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Step 6)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Paging response” |

CELL UPDATE CONFIRM (Step 8)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '0101 0101 0101 0101' |
| New Primary E-RNTI | '0101 0101 0101 0101' |
| New Secondary E-RNTI | Not Present |
| RRC State indicator | CELL_DCH |
| RB information to reconfigure list | |
| - RB RB information to reconfigure | (UM DCCH for RRC) |
| - RB identity | 1 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | 1 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for RRC) |
| - RB identity | 2 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |

| | |
|---|---|
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | 2 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT High priority) |
| - RB identity | 3 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | 3 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (AM DCCH for NAS DT Low priority) |
| - RB identity | 4 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |

| | |
|---|---|
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | 4 |
| - RB stop/continue | Not Present |
| - RB information to reconfigure | (High-speed AM DTCH) |
| - RB identity | 25 |
| - PDCP info | Not Present |
| - PDCP SN info | Not Present |
| - RLC info | |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - SDU discard mode | No discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Window | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to TS34.108 clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |

| | |
|---|---|
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 7 |
| - E-DCH MAC-d flow identity | 2 |
| - DDI | 5 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 0 |
| - Logical channel identity | 7 |
| - RB stop/continue | Not Present |
| Added or Reconfigured UL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Added or Reconfigured DL TrCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Frequency info | Set to the frequency of cell 1 |
| DTX-DRX timing information | |
| CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 16 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE E-DCH TTI length | |
| - 10 ms | |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Downlink HS-PDSCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Downlink information common for all radio links | |
| - Downlink information for all radio link | |
| - CHOICE *DPCH info* | F-DPCH |
| - Downlink F-DPCH info for all RL | |
| - Timing Indication | Initialize |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | |
| - Choice mode | FDD |
| - Primary CPICH info | |

| | |
|---|---|
| - Primary scrambling code | Set to the primary scrambling code of cell 1 |
| - PDSCH with SHO DCH info | Not Present |
| - PDSCH code mapping | Not Present |
| - Serving HS-DSCH radio link indicator | TRUE |
| - Serving E-DCH radio link indicator | TRUE |
| - CHOICE DPCH info | F-DPCH |
| - Downlink F-DPCH info for each RL | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - F-DPCH frame offset | Set to value Default F-DPCH Offset Value (as currently stored in SS) mod 38400 |
| - F-DPCH slot format | 3 if UE supports enhanced F-DPCH, otherwise Not Present |
| - Secondary CPICH info | Not Present |
| - Secondary scrambling code | Not Present |
| - Code number | 12 |
| - TPC combination index | 0 |
| - Closed loop timing adjustment mode | Not Present |
| - E-AGCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| - E-HICH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| - E-RGCH Information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |

#### 8.3.1.44.5 Test requirement

At step 3, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

At step 6, the UE shall transmit a CELL UPDATE message on the uplink CCCH.

At step 9, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC in cell 1.

At step 10 the time taken to report 10 consecutive CQI indications shall be 400ms.

### 8.3.1.45 Cell Update: Radio Link Failure, with active discontinuous uplink transmission

#### 8.3.1.45.1 Definition

All UEs which support FDD and UL DTX.

#### 8.3.1.45.2 Conformance requirement

1> Radio link failure:

…

3> if the UE is in CELL_DCH state and the criteria for radio link failure are met as specified in subclause 8.5.6 of TS 25.331; or

…

4> perform cell update using the cause "radio link failure".

When initiating the URA update or cell update procedure, the UE shall:

…

1> if any IEs releated to HS-DSCH are stored in the UE:

2> clear any stored IE "Downlink HS-PDSCH information";

2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

1> if any IEs related to E-DCH are stored in the UE:

2> clear any stored IE "E-DCH info";

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

1> if any of the IEs "DTX-DRX timing information" or "DTX-DRX information" are stored in the UE:

2> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

1> if the IE "HS-SCCH less information" is stored in the UE:

2> determine the value for the HS_SCCH_LESS_STATUS variable and take the corresponding actions as described in subclause 8.5.35.

…

In CELL_DCH State, after receiving N313 consecutive "out of sync" indications from layer 1 for the established DPCCH or F-DPCH physical channel in FDD, and the physical channels associated with mapped DCCHs in TDD, the UE shall:

1> start timer T313;

1> upon receiving N315 successive "in sync" indications from layer 1 and upon change of UE state:

2> stop and reset timer T313.

1> if T313 expires:

2> consider it as a "Radio link failure".

Periods in time where neither "in sync" nor "out of sync" is reported by layer 1 do not affect the evaluation of the number of consecutive (resp. successive) "in sync" or "out of sync" indications.

When a radio link failure occurs, the UE shall:

1> clear the dedicated physical channel configuration;

1> perform actions as specified for the ongoing procedure;

1> if no procedure is ongoing or no actions are specified for the ongoing procedure:

2> perform a cell update procedure according to subclause 8.3.1 using the cause "radio link failure".

Reference

3GPP TS 25.331 clauses 8.3.1.2, 8.5.6.

### 8.3.1.45.3 Test purpose

1. To confirm that the UE stops the E-DCH transmission with DTX and performs a Cell Update procedure after radio link failure.
2. To confirm that the UE keeps the radio bearer mapping option and transport channel configuration for E-DCH after the radio link failure. To confirm that the UE resumes the E-DCH transmission and configures UL DTX after the Cell Update procedure.

### 8.3.1.45.4 Method of test

Initial Condition

System Simulator: 1 cell – Cell 1

UE: PS-DCCH_DCH (state 6-7) with SRBs mapped to E-DCH/HS-DSCH as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission.

Test Procedure

**Table 8.3.1.45**

| Parameter | Unit | Cell 1 | |
|---|---|---|---|
| | | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF |

Table 8.3.1.45 illustrates the downlink power to be applied to Cell 1 at various time instants of the test execution. Column marked "T0" denote the initial conditions.

The UE is in CELL_DCH state and only signalling radio bearers have been established. The SS initiates P26 to make the UE move to state 6-18 as specified in TS 34.108 clause 7.4. The UE is now in the CELL_DCH state and has radio bearers mapped on E-DCH and HS-DSCH established with active E-DCH (DTX) transmission and HS-DSCH reception.

The SS configures its downlink transmission power settings according to column “T1” in table 8.3.1.45. After expiry of timer T313, the UE shall detect a radio link failure in Cell 1.

The SS waits for 10s (see Note 1) and then configures its downlink transmission power settings according to column “T0” in table 8.3.1.45. The UE shall then enter CELL_FACH state and transmit a CELL UPDATE message on the uplink CCCH in Cell 1.

The SS transmits a CELL UPDATE CONFIRM message, which requests the UE to transit to CELL_DCH state and provides the physical channel configuration to resume the interrupted radio bearer mapped on E-DCH / HS-DSCH and configures UL DTX.

The UE sets up the physical channels associated to E-DCH / HS-DSCH, enters CELL_DCH state and sends a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.

The SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

NOTE 1: The 10s delay guarantees the expiry of timer T313 (default value = 3s) and the non-expiry of timer T315 (default value = 180s).

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ←→ | | P26 | See below for the specific message content used in RADIO BEARER SETUP message. |
| 1 | | | | The SS configures Cell 1 according to the “T1" power settings in table 8.3.1.45.<br>The SS starts to listen to the uplink CCCH of Cell 1. |
| 2 | | | | The UE detects the radio link failure and stops transmission of E-DCH. |
| 3 | → | | CELL UPDATE | 10s after step 1, the SS configures Cell 1 according to the “T0” power settings in table 8.3.1.45.<br>The UE shall camp on Cell 1 and transmit a Cell Update message with the IE "Cell update cause" set to "radio link failure". |
| 4 | ← | | CELL UPDATE CONFIRM | The SS orders the UE to re-establish the E-DCH / HS-DSCH configuration with DTX. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 6 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

RADIO BEARER SETUP (Step 0)

Use the same message as specified for "Packet to CELL_DCH / E-DCH / HS-DSCH using one multiplexing option (1/1) and SRBs mapped on E-DCH/HS-DSCH" in 34.108, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| RB information to be affected | |
| - RB identity | 1 (UM DCCH for RRC) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 1 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 1 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 1 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 1 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 1 |
| - RB identity | 2 (AM DCCH for RRC) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 2 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 2 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 2 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 2 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |

| | |
|---|---|
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 2 |
| - RB identity | 3 (AM DCCH for NAS High Priority) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 3 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 3 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 3 |
| - Uplink transport channel type | RACH |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 3 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 3 |
| - RB identity | 4 (AM DCCH for NAS Low Priority) |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 4 |
| - E-DCH MAC-d flow identity | 1 |
| - DDI | 4 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 144 bits |
| - Include in scheduling info | FALSE |
| - MAC logical channel priority | 4 |
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - DL HS-DSCH MAC-d flow identity | 1 |
| - Logical channel identity | 4 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| - CHOICE RLC size list | Explicit List |
| - RLC size index | According to clause 6.10.2.4.1.2 (standalone 3.4 kbps signalling radio bearer) |
| - MAC logical channel priority | 4 |

| | |
|---|---|
| - Downlink RLC logical channel info | |
| - Number of RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 4 |
| DTX-DRX timing information | |
| CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 16 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE E-DCH TTI length | 10 ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |

CELL UPDATE (Step 3)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in Cell 1. |
| - SRNC Identity | Check to see if set to value assigned in Cell 1. |
| Cell Update Cause | Check to see if set to “Radio link failure” |

CELL UPDATE CONFIRM (Step 4)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| New Secondary E-RNTI | Not Present |
| RRC State indicator | CELL_DCH |
| DTX-DRX timing information | |
| CHOICE timing | |
| - New timing | |
| - Enabling Delay | 16 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE E-DCH TTI length | |
| - 10 ms | |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |
| Uplink DPCCH slot format information | 1 |
| CHOICE channel requirement | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Downlink information common for all radio links | |
| - Downlink F-DPCH info common for all RL | |
| - Timing Indication | Initialise |
| - Downlink F-DPCH power control information | |
| - DPC mode | 0 (single) |
| - TPC command error rate target | 0.04 |
| - CHOICE mode | FDD |
| - DPCH compressed mode info | Not Present |
| - TX Diversity mode | None |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | TRUE |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |

### 8.3.1.45.5 Test requirement

At step 3, the UE shall transmit a CELL UPDATE message.

At step 5, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and start transmission on E-DCH.At step 6 the time taken to report 10 consecutive CQI indications shall be 400ms.

## 8.3.1.46 Cell Update: Transition from URA_PCH to CELL_DCH: Success (start of discontinuous uplink transmission)

### 8.3.1.46.1 Definition

All UEs which support FDD and UL DTX.

### 8.3.1.46.2 Conformance requirement

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response" as specified in subclause 8.3.1.2.

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

…

A UE shall initiate the cell update procedure in the following cases:

1> Paging response:

…

1> Uplink data transmission:

2> if the UE is in URA_PCH or CELL_PCH state; and

2> if the UE has uplink RLC data PDU or uplink RLC control PDU on RB1 or upwards to transmit:

3> perform cell update using the cause "uplink data transmission".

…

In case the procedure was triggered by reception of a PHYSICAL CHANNEL RECONFIGURATION message, the UE shall:

1> transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE as response message on the uplink DCCH using AM RLC.

…

When the UE receives a CELL UPDATE CONFIRM/URA UPDATE CONFIRM message; and

- if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or
- if the message is received on DCCH:

the UE shall:

1>act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following:

2> if the IE "Frequency info" is included in the message:

3> if the IE "RRC State Indicator" is set to the value "CELL_DCH":

4> act on the IE "Frequency info" as specified in subclause 8.6.6.1 in TS 25.331.

…

If, after completion of the procedure, the UE will be in CELL_DCH state, the UE shall:

1> if the IE "Frequency info" is included:

2> if the frequency is different from the currently used frequency:

3> store and use the frequency indicated by the IE "Frequency Info"; and

3> perform the physical layer synchronisation procedure A as specified in TS 25.214 (FDD only).

…

If the IE "New H-RNTI" is included, the UE shall:

2> store the value in the variable H_RNTI.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

…

If the IE "New Primary E-RNTI" and/or the IE “New Secondary E-RNTI” is included, the UE shall:

1> store the new value(s) in the variable E_RNTI;

When the variable E_DCH_TRANSMISSION is set to TRUE the UE shall:

1> use the value of the Primary E-RNTI and/or Secondary E-RNTI stored in the variable E_RNTI as identities in the E-AGCH reception procedure in the physical layer.

…

If the IE "Downlink HS-PDSCH Information" is included and the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message, the UE shall:

1> if the IE "HS-SCCH Info" is included:

2> act as specified in subclause 8.6.6.33 of TS 25.331.

1> if the IE "Measurement Feedback Info" is included:

2> act as specified in subclause 8.6.6.34 of TS 25.331.

1> if the IE "HS-DSCH Timeslot Configuration" or "HS-PDSCH Midamble Configuration" is included:

2> store the received configuration;

2> determine the value for the HS_DSCH_RECEPTION variable and take actions as described in subclause 8.5.25.

If the IE "HS-SCCH Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> in the case of FDD:

2> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving HS-DSCH radio link applying the scrambling code as received in the IE "DL Scrambling code".

If the IE "Measurement Feedback Info" is included, the UE shall:

1> store the received configuration.

When the variable HS_DSCH_RECEPTION is set to TRUE the UE shall:

1> use the information for the channel quality indication (CQI) procedure in the physical layer on the serving HS-DSCH radio link.

…

If the IE "Downlink information for each radio link" is included in a received message, the UE shall:

1> if the UE would enter CELL_DCH state according to subclause 8.6.3.3 applied on the received message:

2> if the IE "Serving HS-DSCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving HS-DSCH radio link.

2> if the IE "Serving E-DCH radio link indicator" is set to 'TRUE':

3> consider this radio link as the serving E-DCH radio link.

2> if the IE "E-AGCH Info" is included:

3> store the newly received E-AGCH configuration.

2> if the IE "E-HICH information" is included:

3> store this E-HICH configuration for the concerning radio link.

2> if the IE "E-RGCH information" is included:

3> store this E-RGCH configuration for the concerning radio link.

2> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

2> act on the other IEs contained in the IE "Downlink information for each radio link" as specified in subclause 8.6 applied on this radio link.

…

If the IE "E-DCH Info" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the IE "E-DPCCH Info" is included:

2> store the newly received E-DPCCH configuration.

1> if the IE "E-DPDCH Info" is included:

2> store the newly received E-DPDCH configuration.

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28.

…

Whenever the variable HS_DSCH_RECEPTION is set to TRUE, the UE shall:

1> perform HS_SCCH reception procedures according to the stored HS-SCCH configuration as stated in:

2> subclause 8.6.6.33 for the IE "HS-SCCH Info".

1> perform HS-DSCH reception procedures according to the stored HS-PDSCH configuration as stated in:

2> subclause 8.6.3.1b for the IE "H-RNTI";

2> subclause 8.6.5.6b for the IE "HARQ info";

2> subclause 8.6.6.34 for the IE "Measurement Feedback Info".

Whenever the variable E_DCH_TRANSMISSION is set to TRUE, the UE shall:

1> perform E_AGCH reception procedures according to the stored E_AGCH configuration as stated in:

2> subclause 8.6.3.14 of TS 25.331 for the IE "New Primary E-RNTI" and the IE "New Secondary E-RNTI".

1> perform E-HICH reception procedures for all radio links in the active set for which an E-HICH configuration has been provided;

1> perform E-RGCH reception procedures for all radio links in the active set for which an E-RGCH configuration has been provided;

1> perform E-DPCCH transmission procedures according to the stored E-DPCCH configuration as stated in:

2> subclause 8.6.6.37 of TS 25.331 for the IE "E-DPCCH Info";

1> perform E-DPDCH transmission procedures according to the stored E-DPDCH configuration as stated in:

2> subclause 8.6.5.16 of TS 25.331 for the IE "E-DCH Transmission Time Interval";

2> subclause 8.6.5.17 of TS 25.331 for the IE "HARQ info for E-DCH";

2> subclause 8.6.6.37 of TS 25.331 for the IE “DPDCH Info”.

1> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Non-scheduled transmission grant info" is configured shall:

2> obey the scheduling and size restrictions as specified for that MAC-d flow (see subclause 8.6.5.18 of TS 25.331).

1> inclusion of MAC-d PDU's in a MAC-e PDU for logical channels belonging to a MAC-d flow for which the IE "Scheduled transmission grant info" is configured shall:

2> be performed in accordance with the received scheduling grant on E-AGCH/E-RGCH (see [15]); and

3> obey the scheduling restrictions as specified for scheduled transmissions (see subclause 8.6.6.37 of TS 25.331).

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> store the contents of the IE in the variable DTX_DRX_PARAMS.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clauses 8.2.2.3, 8.2.2.4, 8.3.1, 8.5.28, 8.6.3.14, 8.6.5.16, 8.6.5.17, 8.6.5.18, 8.6.6.37, 8.6.6.38, 8.6.6.39

### 8.3.1.46.3 Test purpose

To confirm that the UE enters the CELL_DCH state after it receives a CELL UPDATE CONFIRM message with a physical channel configuration causing it to start E-DCH transmission, HS_DSCH reception and configures UL DTX.

To confirm that the UE executes a cell update procedure when the UE transmits uplink data if the UE is in URA_PCH state.

### 8.3.1.46.4 Method of test

Initial Condition

System Simulator: 1 cell.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents)

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A20 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission.

Test Procedure

The UE is in the CELL_DCH state and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message, which invokes the UE to transit from CELL_DCH to URA_PCH. The UE transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC and enters URA_PCH state.

The SS transmits a PAGING TYPE 1 message. The UE then enters the CELL_FACH state to transmit a CELL UPDATE message to the SS on the uplink CCCH with the IE “Cell update cause” set to value “Paging response” in response to the paging.

The SS transmits CELL UPDATE CONFIRM message, which includes HS-PDSCH and E-DPDCH physical channel parameters on the downlink DCCH with UL DTX. Then the UE resumes E-DCH transmission and HS-DSCH reception, and transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH.

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.
Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE enters the URA_PCH state |
| 3 | ← | | PAGING TYPE 1 | |
| 4 | → | | CELL UPDATE | The UE enters the CELL_FACH state. |
| 5 | ← | | CELL UPDATE CONFIRM | |
| 6 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE enters the CELL_DCH state and starts E-DCH transmission with UL DTX and HS-DSCH reception. |
| 7 | SS | | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |

Specific Message Contents

SYSTEM INFORMATION BLOCK TYPE 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| -UE Timers and constants in connected mode<br>- T312 | <br>2 |

PHYSICAL CHANNEL RECONFIGURATION (Step 1)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_DCH in PS" in TS 34.108 with following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | Not Present |
| RRC State Indicator | URA_PCH |
| UTRAN DRX cycle length coefficient | 3 |
| URA Identity | 0000 0000 0000 0001B |

Paging Type 1 (Step 3)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | Equal to the U-RNTI assigned earlier. |
| - SRNC Identity | |
| - S-RNTI | |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Step 4)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - S-RNTI | Check to see if set to value assigned in cell 1. |
| - SRNC Identity | Check to see if set to value assigned in cell 1. |
| Cell Update Cause | Check to see if set to “Paging response” |

CELL UPDATE CONFIRM (Step 5)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | '1010 1010 1010 1010' |
| New Primary E-RNTI | '1010 1010 1010 1010' |
| New Secondary E-RNTI | Not Present |
| RRC State indicator | CELL_DCH |
| DTX-DRX timing information | |
| CHOICE *timing* | |
| - New timing | |
| - Enabling Delay | 16 |
| - UE DTX DRX Offset | 0 |
| DTX-DRX Information | |
| - CHOICE E-DCH TTI length | 10ms |
| - UE DTX cycle 1 | 10 |
| - UE DTX cycle 2 | 20 |
| - MAC DTX cycle | 10 |
| - Inactivity Threshold for UE DTX cycle 2 | 8 |
| - UE DTX long preamble length | 4 |
| - MAC Inactivity Threshold | 8 |
| - CQI DTX Timer | 32 |
| - UE DPCCH burst_1 | 1 |
| - UE DPCCH burst_2 | 1 |
| DRX Information | |
| - UE DRX cycle | 10 |
| - Inactivity Threshold for UE DRX cycle | 32 |
| - Inactivity Threshold for UE Grant Monitoring | 8 |
| - UE DRX Grant Monitoring | TRUE |

| | |
|---|---|
| Uplink DPCCH slot format information | 1 |
| Uplink DPCH info | Not Present |
| E-DCH Info | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Downlink HS-PDSCH information | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |
| Downlink information common for all radio links | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20 except for the following IEs. |
| - Timing indicator | Initialize |
| - Default DPCH Offset Value | Not Present |
| Downlink information per radio link list | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A20. |

#### 8.3.1.46.5 Test requirement

At step 2, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

At step 4, the UE shall transmit a CELL UPDATE message on uplink CCCH.

At step 6, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

At step 7 the time taken to report 10 consecutive CQI indications shall be 400ms.

### 8.3.1.47 Cell Update: cell reselection in CELL_FACH (Reselection between cell not supporting HS-PDSCH in CELL_FACH and cell supporting HS-PDSCH is CELL_FACH)

#### 8.3.1.47.1 Definition and applicability

All UEs which support FDD and HS-PDSCH in CELL_FACH.

#### 8.3.1.47.2 Conformance requirement

In the CELL_FACH state the UE shall perform the following actions:

1) NOTE: DCCH and, if configured, DTCH are available in this state.

1> if the UE is "in service area":

2> maintain up-to-date system information as broadcast by the serving cell as specified in subclause 8.1.1;

2> perform cell reselection process as specified in [4];

…

The UE shall set the IEs in the CELL UPDATE message as follows:

..

1> if the UE supports HS-DSCH reception in CELL_FACH state:

5> 2> include the IE "HS-PDSCH in CELL_FACH" and set it to TRUE.

…

When the UE receives a CELL UPDATE CONFIRM/URA UPDATE CONFIRM message; and

..

If the UE after state transition remains in CELL_FACH state, it shall

1> start the timer T305 using its initial value if timer T305 is not running and periodical cell update has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity";

1> select PRACH according to subclause 8.5.17;

1> for TDD; or

1> for FDD, if the UE does not support HS-DSCH reception; or

1> if the IE "HS-DSCH common system information" is not included in System Information Block type 5 or System Information Block type 5bis:

2> select Secondary CCPCH according to subclause 8.5.19;

2> take the actions related to the HS_DSCH_RECEPTION_GENERAL variable as described in subclause 8.5.37a.

1> else:

2> if the RBs have the multiplexing option with transport channel type "HS-DSCH" for the DL and transport channel type "RACH" in the UL; and

2> if variable H_RNTI and variable C_RNTI are set:

3> start to receive HS-DSCH according to the procedure in subclause 8.5.36.

2> else:

3> clear variable C_RNTI and delete any stored C-RNTI value;

3> clear variable H_RNTI and delete any stored H-RNTI value;

3> clear any stored IEs "HARQ info";

3> set the variable INVALID_CONFIGURATION to TRUE.

…

The variable HS_DSCH_RECEPTION_CELL_FACH_STATE shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_FACH;

1> the variable H_RNTI is set;

1> the variable C_RNTI is set;

1> System Information Block type 5 or System Information Block type 5bis includes IE "HS-DSCH common system information".

If any of the above conditions is not met and the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_CELL_FACH_STATE to FALSE;

1> if the UE is in CELL_FACH and variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to FALSE:

2> set the variable HS_DSCH_RECEPTION_GENERAL to FALSE;

2> stop any HS_SCCH reception procedures;

2> stop any HS-DSCH reception procedures;

2> clear the variable H_RNTI and remove any stored H-RNTI;

2> reset the MAC-ehs entity [15];

2> release all HARQ resources;

2> clear any stored IEs "HARQ info";

Whenever the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> use the IE "HS-DSCH common system information" in System Information Block type 5 or System Information Block type 5bis;

1> receive the HS-SCCH(s) according to the IE "HS-SCCH channelisation code" on the serving cell applying the scrambling code as received in the IE "DL Scrambling code" as received in IE "HS-DSCH common system information";

1> perform HS-DSCH reception procedures:

2> if the UE has a stored IE "HARQ info":

3> act on subclause 8.6.5.6b for the stored IE "HARQ info".

2> else:

3> act on subclause 8.6.5.20 for the IE "HARQ System info" as received in IE "HS-DSCH common system information".

2> and use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer.

1> and for BCCH reception perform HS-DSCH reception procedures by listening to the first indexed HS-SCCH code listed in the IE "HS-SCCH channelisation code" with "BCCH specific H-RNTI" as received in IE "HS-DSCH common system information".

Whenever the variable HS_DSCH_RECEPTION_CELL_FACH_STATE is set to FALSE, the UE shall:

1> if the UE is in CELL_FACH and variable HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to FALSE:

2> not perform HS_SCCH reception procedures;

2> not perform HS-DSCH reception procedures.

…

When UE does not support HS-DSCH reception or when the IE "HS-DSCH common system information" is not included in System Information Block type 5 or System Information Block type 5bis, the UE shall:

1> set HS_DSCH_RECEPTION_OF_CCCH_ENABLED to FALSE;

1> set the variable HS_DSCH_RECEPTION_GENERAL to FALSE.

When HS_DSCH_RECEPTION_OF_CCCH_ENABLED is set to TRUE, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> use the IE "HS-DSCH common system information" in System Information Block type 5 or System Information Block type 5bis;

1> configure the HARQ according to IE "HARQ System info" as defined in subclause 8.6.5.20;

1> configure the common MAC-ehs reordering queues according to IE "Common MAC-ehs reordering queues" as defined in subclauses 8.6.5.22; and then

1> receive the CCCH according to IE "CCCH mapping info" as defined in subclause 8.6.5.21;

1> if the UE is RRC Connected mode:

2> select a common H-RNTI as specified in 8.5.38;

2> receive the SRB1 according to IE "SRB1 mapping info" as defined in subclause 8.6.5.19.

1> else:

2> select a common H-RNTI as specified in [4].

1> and start to receive the HS-SCCH(s) with selected H-RNTI according to the IE "HS-SCCH channelisation code" on the selected cell applying the scrambling code as received in the IE "DL Scrambling code";

1> configure the MAC flow for BCCH reception as specified in [15];

1> and start to receive the first indexed HS-SCCH code listed in the IE "HS-SCCH channelisation code" with "BCCH specific H-RNTI" as received in IE "HS-DSCH common system information".

Reference

3GPP TS 25.331 clauses 7.2.2.2, 8.3.1.3 8.3.1.6, 8.5.36, 8.5.37

### 8.3.1.47.3 Test purpose

To confirm that the UE starts reception of HS-PDSCH in CELL_FACH state, after reselecting to a cell supporting HS-PDSCH in CELL_FACH.

To confirm that the UE performs the cell reselection procedure while receiving HS-PDSCH in CELL_FACH state.

### 8.3.1.47.4 Method of test

Initial Condition

System Simulator: 2 cells: Cell 1 sends the default system information (HS-DSCH for CELL_FACH not configured), Cell 2 configures HS-DSCH for CELL_FACH in System Information Type 5.

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH in CELL_FACH

Test Procedure

**Table 8.3.1.47**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | | | | The UE is in CELL_FACH state in cell 1 |
| 1 | | | | SS applies the downlink transmission power settings, according to the values in columns "T1" of table 8.3.1.47. The UE shall find that the cell 2 is better for service and perform reselection. SS waits for the maximum duration required for the UE to camp to cell 2. |
| 2 | → | | SYSTEM INFORMATION TYPE 5 | Transmitted on cell 2. Includes configuration for HS-DSCH reception in CELL_FACH state |
| 3 | → | | CELL UPDATE | Value "cell reselection" shall be indicated in IE "Cell update cause" and “HS-PDSCH in CELL_FACH” is set to TRUE. |
| 4 | ← | | CELL UPDATE CONFIRM | Transmitted by the SS on HS-DSCH. IE "RRC State Indicator" is set to "CELL_FACH". |
| 5 | → | | UTRAN MOBILITY INFORMATION CONFIRM | Transmitted by the UE on RACH. |
| 6 | | | | SS applies the downlink transmission power settings, according to the values in columns "T0" of table 8.3.1.47. The UE shall find that the cell 1 is better for service and perform reselection. SS waits for the maximum duration required for the UE to camp to cell 1. |
| 7 | → | | CELL UPDATE | Value "cell reselection" shall be indicated in IE "Cell update cause" and “HS-PDSCH in CELL_FACH” is set to TRUE. |
| 8 | ← | | CELL UPDATE CONFIRM | Transmitted by the SS on FACH / S-CCPCH. IE "RRC State Indicator" is set to "CELL_FACH". |
| 9 | → | | UTRAN MOBILITY INFORMATION CONFIRM | Transmitted by the UE on RACH. |
| 10 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

SYSTEM INFORMATION TYPE 5(Step 2)

CELL UPDATE (Steps 3 and 7)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |
| HS-PDSCH in CELL_FACH | Check to see if set to TRUE |

CELL UPDATE CONFIRM (Step 4)

<FFS>

CELL UPDATE CONFIRM (Step 8)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

#### 8.3.1.47.5 Test requirements

At step 3 the UE shall reselect to cell 2 and then it shall transmit a CELL UPDATE message which sets the value "cell reselection" in IE "Cell update cause" and “HS-PDSCH in CELL_FACH” set to TRUE.

At step 5 the UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM on UL using the PRACH physical resource.

At step 7 the UE shall reselect to cell 1 and then it shall transmit a CELL UPDATE message which sets the value "cell reselection" in IE "Cell update cause" and “HS-PDSCH in CELL_FACH” set to TRUE.

## 8.3.2 URA Update

### 8.3.2.1 URA Update: Change of URA

#### 8.3.2.1.1 Definition

-

#### 8.3.2.1.2 Conformance requirement

A UE in URA_PCH state shall initiate the URA update procedure in the following cases:

1> URA reselection:

2> if the UE detects that the current URA assigned to the UE, stored in the variable URA_IDENTITY, is not present in the list of URA identities in system information block type 2; or

2> if the list of URA identities in system information block type 2 is empty; or

2> if the system information block type 2 can not be found:

…

3> perform URA update using the cause "change of URA".

When initiating the URA update procedure, the UE shall:

1> stop timer T305;

1> set the variables PROTOCOL_ERROR_INDICATOR, FAILURE_INDICATOR, UNSUPPORTED_CONFIGURATION and INVALID_CONFIGURATION to FALSE;

1> move to CELL_FACH state, if not already in that state;

1> set CFN in relation to SFN of current cell according to TS 25.331 subclause 8.5.15;

1> in case of a URA update procedure:

2> set the contents of the URA UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the URA UPDATE message for transmission on the uplink CCCH.

1> set counter V302 to 1;

1> start timer T302 when the MAC layer indicates success or failure in transmitting the message.

In case of URA update procedure the UE shall transmit a URA UPDATE message.

The UE shall set the IEs in the URA UPDATE message as follows:

1> set the IE "U-RNTI" to the value of the variable U_RNTI;

1> set the IE "URA update cause" corresponding to which cause as specified in TS 25.331 subclause 8.3.1.2 that is valid when the URA UPDATE message is submitted to lower layers for transmission;

2> if the value of the variable PROTOCOL_ERROR_INDICATOR is TRUE:

…

2> if the value of the variable PROTOCOL_ERROR_INDICATOR is FALSE:

3> if the value of the variable INVALID_CONFIGURATION is TRUE:

…

3> if the value of the variable INVALID_CONFIGURATION is FALSE:

4> set the IE "Protocol error indicator" to FALSE.

If the URA UPDATE CONFIRM message:

- does not include "CN information elements"; and
- does not include the IE "Ciphering mode info"; and
- does not include the IE "Integrity protection mode info"; and
- does not include the IE "New U-RNTI"; and
- does not include the IE "New C-RNTI":

the UE shall:

1> transmit no response message.

…

If any or several of the following conditions are true:

…

- reselection to another UTRA cell (including the previously serving cell) before completion of the cell update or URA update procedure;

the UE shall:

…

1> check whether it is still in "in service area" (see TS 25.331 subclause 8.5.5.2);

…

1> in case of a URA update procedure:

2> clear any entry for the URA UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS.

If the UE detects "in service area" if it has not entered idle mode, and:

1> if V302 is equal to or smaller than N302, the UE shall:

2> if the UE performed cell re-selection:

3> delete its C-RNTI.

…

2> in case of a URA update procedure:

3> set the contents of the URA UPDATE message according to TS 25.331 subclauses 8.3.1.3 and 8.5.10;

3> if a URA UPDATE CONFIRM message was received and caused the IE "Reconfiguration" in the variable CIPHERING_STATUS to be set to TRUE and/or the IE "Reconfiguration" in the variable INTEGRITY_PROTECTION_INFO is set to TRUE:

…

3> submit the URA UPDATE message for transmission on the uplink CCCH.

…

The UE shall:

1> if the IE "URA identity" is included in a received message:

2> if the IE "RRC State Indicator" is included and set to "URA_PCH":

3> store this URA identity in the variable URA_IDENTITY;

3> after sending a possible message to UTRAN and entering URA_PCH state as specified elsewhere, read system information block type 2 in the selected cell;

3> if the stored URA identity in the variable URA_IDENTITY is not included in the list of URA identities in System Information Block type 2 in the selected cell, the list of URA identities in system information block type 2 is empty or if the system information block type 2 can not be found, a confirmation error of URA identity list has occurred:

4> if no URA update procedure is ongoing:

…

4> if a URA update procedure is ongoing:

5> take actions as specified in TS 25.331 subclause 8.3.1.10.

If the URA UPDATE CONFIRM message causes a confirmation error of URA identity list as specified in TS 25.331 subclause 8.6.2.1 the UE shall:

1> check the value of V302; and

1> if V302 is smaller or equal than N302:

…

2> set the IEs in the URA UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the URA UPDATE message for transmission on the uplink CCCH;

…

Reference

3GPP TS 25.331 clause 8.3.1.2, 8.3.1.12, 8.6.2.1

#### 8.3.2.1.3 Test purpose

1. To confirm that the UE executes an URA update procedure after the successful change of URA.
2. To confirm that the UE performs an URA update procedure after it detects that SIB 2 is not broadcasted.
3. To confirm that the UE performs an URA update procedure after it detects a confirmation error of URA identity list.

8.3.2.1.4 Method of test

Initial Condition

System Simulator: 2 cells: The URA-ID and transmission power for each cell is shown in Table 8.3.2.1, where the initial condition is shown in column "T0".

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108, with URA-ID 1 from the list of URA-ID in cell 1.

Test Procedure

| Parameter | Unit | Cell 1 | | | | | | | | Cell 2 | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T4 | T5 | T6 | T7 | T0 | T1 | T2 | T3 | T4 | T5 | T6 | T7 |
| UTRA RF Channel Number | | Ch. 1 | | | | | | | | Ch. 1 | | | | | | | |
| CPICH Ec | dBm/3.84MHz | -60 | -69 | | -60 | -69 | -60 | | -69 | -69 | -60 | | -69 | -60 | -69 | | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -69 | | -60 | -69 | -60 | | -69 | -69 | -60 | | -69 | -60 | -69 | | -60 |
| URA ID | | URA-ID 1 | URA-ID 2 | | | | | | | URA-ID 1,3 and 4 | | | | | | no SIB2 | |

The test begins with the downlink power transmission of both cells set according to 'T0' column in table 8.3.2.1. The UE is in the URA_PCH state and assigned with only 1 URA identity in cell 1: URA-ID 1. The SS then adjusts the transmission power again according to the 'T1' column. This is expected to cause the UE to perform a cell reselection to cell 2. Since URA-ID 1 is also broadcasted in cell 2, the UE shall not perform any URA update procedure due to the change of URA. Starting from time 'T2', SS modifies the system information in cell 1, so that URA-ID 2 is the only URA identity in that cell. Next SS adjusts the transmission power according to 'T3' column. UE shall perform a cell reselection to cell 1 and when the UE finds that its current URA-ID 1 is not in the new broadcasted list of URA-IDs, it moves to CELL_FACH state and transmits a URA UPDATE message on the uplink CCCH. After the SS receives this message, it transmits a URA UPDATE CONFIRM message, which includes the IEs "RRC State Indicator" and IE "URA-ID" to the UE on the downlink CCCH. The IE "RRC State Indicator" is set to "URA_PCH". UE returns to URA_PCH state in cell 1 without sending any uplink response message. Next SS adjusts the transmission power according to 'T4' column. UE shall re-select to cell 2 and transmit a URA UPDATE message to SS. However, SS do not acknowledge but adjusts the transmission power according to 'T5' column. UE shall perform cell re-selection to cell 1 and then send a URA UPDATE message to SS. SS shall transmit URA UPDATE CONFIRM message to UE on the downlink CCCH. Starting from time 'T6', SS modifies the system information in cell 2, so that no SIB 2 is sent in that cell. Next the SS adjusts the transmission power according to the 'T7' column. The UE shall re-select to cell 2 and send a URA UPDATE message since no SIB2 is broadcasted in this cell. When the UE receives a URA UPDATE CONFIRM message including a URA identity, the UE will again send a URA UPDATE message. When receiving this last message, the SS shall transmit RRC Connection Release message on downlink CCCH to release the RRC connection.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is updated with only 1 URA identity carried currently by cell 1. The starting state of the UE is URA_PCH |
| 2 | | | | SS set the power transmission and system information of all cells according to column 'T1' of table 8.3.2.1. |
| 3 | | | | UE shall perform a cell reselection but shall not transmit URA UPDATE message with the update cause of "change of URA". |
| 3a | | | | Starting from time 'T2', SS modifies the system information in cell 1, so that URA-ID 2 is the only URA identity in that cell |
| 4 | | | | SS set the power transmission and system information of all cells according to column 'T3' of table 8.3.2.1. |
| 5 | → | | URA UPDATE | The UE shall perform a cell reselection first and when it finds that its current URA-ID 1 is not in the newly broadcasted list of URA-IDs, it shall then transmit this message and set value "change of URA" into IE "URA update cause". |
| 6 | ← | | URA UPDATE CONFIRM | Message comprises IE "RRC State Indicator" set to "URA_PCH", and also IE "URA Identity" equal to "URA-ID 2". |
| 7 | | | | SS set the power transmission and system information of all cells according to column 'T4' of table 8.3.2.1. |
| 8 | → | | URA UPDATE | |
| 9 | | | | SS do not respond to the URA UPDATE message from UE and set the power transmission and system information of all cells according to column 'T5' of table 8.3.2.1. |
| 10 | → | | URA UPDATE | |
| 11 | ← | | URA UPDATE CONFIRM | |
| 11a | | | | Starting from time 'T6', SS modifies the system information in cell 2, so that no SIB 2 is sent in that cell. |
| 12 | | | | SS set the power transmission and system informatio of all cells according to column 'T7' of table 8.3.2.1. |
| 13 | → | | URA UPDATE | The UE shall perform a cell reselection first and when it finds that no URA-ID is broadcasted in this cell, it shall then transmit this message and set value "change of URA" into IE "URA update cause". |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 14 | ← | | URA UPDATE CONFIRM | Message comprises IE "RRC State Indicator" set to "URA_PCH", and also IE "URA Identity" equals to "URA-ID 2". |
| 15 | → | | URA UPDATE | |
| 16 | ← | | RRC CONNECTION RELEASE | This message is sent on CCCH. |
| 17 | → | | Void | |
| 18 | | | | UE enters idle mode |

Specific Message Contents

SYSTEM INFORMATION BLOCK TYPE 2

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exceptios.

Cell 1, time T0-T1:

| Information Element | Value/remark |
|---|---|
| - URA identity list<br>- URA identity | <br>0000 0000 0000 0001B |

Cell 2, time T0-T5:

| Information Element | Value/remark |
|---|---|
| - URA identity list<br>- URA identity<br>- URA identity<br>- URA identity | <br>0000 0000 0000 0011B<br>0000 0000 0000 0001B<br>0000 0000 0000 0100B |

Cell 1, time T2-T7 (step 3a):

| Information Element | Value/remark |
|---|---|
| - URA identity list<br>- URA identity | <br>0000 0000 0000 0010B |

Cell 2, time T6-T7 (step 11a):

No SYSTEM INFORMATION BLOCK TYPE 2 is broadcasted in cell 2 during this time period.

URA UPDATE (Step 5, 8, 10, 13, and 15)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI<br>- SRNC Identity<br>- S-RNTI<br>URA Update Cause | <br>Check to see if set to '0000 0000 0001'<br>Check to see if set to '0000 0000 0000 0000 0001'<br>Check to see if set to 'change of URA' |

URA UPDATE CONFIRM (Step 6, 11 and 14)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| URA identity | URA-ID 2 |

#### 8.3.2.1.5 Test requirement

After step 2 the UE shall not transmit a URA UPDATE message with update cause "change of URA".

After step 4 the UE shall find that URA-ID 2 is not in its maintained list of URA-IDs. After cell reselection, the UE shall move to CELL_FACH state and transmit a URA UPDATE message setting value "change of URA" into IE "URA update cause".

After step 7 the UE shall find that URA-ID 1 is not in its maintained list of URA-IDs. After cell reselection, the UE shall move to CELL_FACH state and a transmit URA UPDATE message setting value "change of URA" into IE "URA update cause".

After step 9 the UE shall find the new cell and transmit a URA UPDATE message setting value "change of URA" into IE "URA update cause".

After step 12 the UE shall find that no URA-ID is broadcasted in the cell, move to CELL_FACH state and transmit a URA UPDATE message setting the update cause to "change of URA".

After step 14 the UE shall find that no URA-ID is broadcasted in the cell and transmit a URA UPDATE message setting the update cause to "change of URA".

### 8.3.2.1a URA Update: Change of URA (Cells belong to different frequency bands)

#### 8.3.2.1a.1 Definition

This test case is identical to test case 8.3.2.1 except that the cells belong to different frequency bands.

Note: The test case 8.3.2.1 is an intra frequency test.

#### 8.3.2.1a.2 Conformance requirement

Same conformance requirement as in clause 8.3.2.1.2

#### 8.3.2.1a.3 Test purpose

Same test purpose as in clause 8.3.2.1.3 except that the cells belong to different frequency bands

#### 8.3.2.1a.4 Method of test

##### Initial Condition

Same initial conditions as in clause 8.3.2.1.4 except, Cell 2 is mapped to cell 4 (inter frequency) of 34.108 clause 6.1 and both cells belong to different frequency bands.

##### System Information Block type 3

Use the same message type found in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| -Qualmin | -16dB |

##### Related ICS/IXIT statement(s)

- UE supports multiple bands simultaneously yes/no

##### Test Procedure

Same test procedure as in clause 8.3.2.1.4 with the following exception

After step 8, SS shall send URA UPDATE CONFIRM message to the UE.

Note: If the UE supports more than 2 frequency bands, the test may be executed for various band combinations.

Expected sequence

Same expected sequence as in clause 8.3.2.1.4 with the following additional / modified test steps

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 8a | ← | | URA UPDATE CONFIRM | |
| 9 | | | | SS sets the power transmission and system information of all cells according to column 'T5' of table 8.3.2.1. |

Specific Message Contents

Same specific message contents as in clause 8.3.2.1.4

8.3.2.1a.5 Test requirement

Same specific message contents as in clause 8.3.2.1.4. The message content for the additional test steps are given below.

URA UPDATE CONFIRM (Step 8a)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| URA identity | URA-ID 1 |

## 8.3.2.2 URA Update: Periodical URA update and Reception of Invalid message

### 8.3.2.2.1 Definition

### 8.3.2.2.2 Conformance requirement

A UE in URA_PCH state shall initiate the URA update procedure in the following cases:

1> URA reselection:

…

1> Periodic URA update:

2> if the criteria for performing URA update with the causes as specified above in the current subclause are not met; and

2> if the timer T305 expires while the UE is in the service area; and

2> if periodic updating has been configured by T305 in the IE "UE Timers and constants in connected mode" set to any other value than "infinity":

3> perform URA update using the cause "periodic URA update".

…

If the UE receives an URA UPDATE CONFIRM message, which contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows:

1> If V302 is equal to or smaller than N302, the UE shall:

2> set the variable PROTOCOL_ERROR_INDICATOR to TRUE;

…

2> in case of a URA update procedure:

3> set the contents of the URA UPDATE message according to TS 25.331 subclause 8.3.1.3;

3> submit the URA UPDATE message for transmission on the uplink CCCH.

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302, the UE shall:

…

2> release all its radio resources;

2> enter idle mode;

2> Other actions the UE shall perform when entering idle mode from connected mode are specified in TS 25.331 subclause 8.5.2;

2> the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.1.2, 8.3.1.7, 8.3.1.11

#### 8.3.2.2.3 Test purpose

1. To confirm that the UE executes a URA update procedure after the expiry of timer T305.
2. To verify that the UE handles an invalid URA UPDATE CONFIRM message correctly when executing the URA update procedure.

#### 8.3.2.2.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in URA_PCH state. When the UE detects the expiry of timer T305, set according to the value specified in system information, the UE moves to CELL_FACH state and transmits a URA UPDATE message to the SS on the uplink CCCH. The message shall indicate the cause to be "periodic URA update" in IE "URA update cause". SS replies with an invalid URA UPDATE CONFIRM message sent on downlink DCCH, and check to see if the UE handles this event properly. The UE shall attempt to retransmit the identical URA UPDATE message. After the SS receives the second URA UPDATE message, it transmits a correct URA UPDATE CONFIRM message to the UE on the downlink CCCH. The UE then returns to URA_PCH state. SS calls for generic procedure C.5 to check that UE is in URA_PCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in URA_PCH state. SS wait until T305 timer has expired. |
| 2 | → | | URA UPDATE | UE shall transmit this message and set value "periodic URA update" into IE "URA update cause". |
| 3 | ← | | URA UPDATE CONFIRM | See specific message content. |
| 4 | → | | URA UPDATE | UE shall not return to idle mode immediately, but attempts to re-transmit this message. |
| 5 | ← | | URA UPDATE CONFIRM | |
| 6 | | | Void | |
| 7 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

URA UPDATE (Step 2)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| URA Update Cause | Check to see if set to 'Periodic URA update' |

URA UPDATE CONFIRM (Step 3)

Use the URA UPDATE CONFIRM message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

URA UPDATE (Step 4)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| RRC Transaction identifier | Check to see if set to the value given in URA UPDATE CONFIRM message in step 3. |
| URA Update Cause | Check to see if set to 'Periodic URA update' |
| Protocol error indicator | TRUE |
| Protocol error information | |
| - Protocol error cause | Message extension not comprehended |

URA UPDATE CONFIRM (Step 5)

Use the URA UPDATE CONFIRM message as defined in [9] TS 34.108 clause 9.

#### 8.3.2.2.5 Test requirement

After step 1 the UE shall detect the expiry of timer T305, move to CELL_FACH state, and transmit a URA UPDATE message which sets the value "periodical cell update" into IE "URA update cause".

After step 3 the UE shall re-transmit URA UPDATE message with IE "Protocol error indicator" set to 'TRUE' and IE "Protocol error information" set to "Message extension not comprehended".

After step 5 the UE shall return to the URA_PCH state.

### 8.3.2.3 Void

### 8.3.2.4 URA Update: loss of service after expiry of timers T307 and T305

#### 8.3.2.4.1 Definition

#### 8.3.2.4.2 Conformance requirement

When the T305 expires and the UE detects that it is "out of service area" as specified in TS 25.331 subclause 8.5.5.1, the UE shall

1> start timer T307;

…

When the T307 expires, the UE shall:

1> move to idle mode;

1> release all dedicated resources;

1> indicate release (abort) of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers;

1> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

1> clear the variable ESTABLISHED_RABS;

1> perform other actions when entering idle mode from connected mode as specified in TS 25.331 subclause 8.5.2;

1> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.1.4.

#### 8.3.2.4.3 Test purpose

1. To confirm that the UE moves to idle mode after the expiry of timer T307, following an expiry of timer T305 when it discovers that it is out of service area.

#### 8.3.2.4.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.2.4**

| Parameter | Unit | Cell 1 | |
|---|---|---|---|
| | | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -80 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -80 |

Table 8.3.2.4 illustrates the downlink power to be applied at various time instants of the test execution. Columns marked "T0" denote the initial conditions.

The UE is in CELL_DCH state. The SS transmits UTRAN MOBILITY INFORMATION message to the UE to change the value of T305. The UE shall respond with UTRAN MOBILITY INFORMATION CONFIRM message. The UE transits to URA_PCH state using the generic procedure P18 in TS 34.108 clause 7.4. The content of the SYSTEM INFORMATION BLOCK TYPE 3 and 4 is modified. The SS waits for reception of a periodical URA update in order to know the timing of the T305 in the UE. The SS replies to the received URA UPDATE message with an URA UPDATE CONFIRM message on the downlink CCCH. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.2.4 so that S<0. When the UE detects the expiry of periodic URA updating timer T305 according to the system information, the UE detects that it is out of service area. After the expiry of timer T307, the UE moves to the idle state. SS configures its downlink transmission power settings according to columns "T0" in table 8.3.2.4 so that S>0. SS waits for 60s and then calls for generic procedure C.1 to check that UE is in idle mode state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | | | | Initially, the UE is in CELL_DCH state. |
| 0a | ← | | UTRAN MOBILITY INFORMATION | Include new timers value (see specific message contents). |
| 0b | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 0c | ←→ | | SS executes procedure P18 (clause 7.4.2.7.2) specified in TS 34.108. | Transit the UE to URA_PCH state. URA-ID 1 shall be in the list of URA-ID. |
| 1 | | | Void | |
| 1a | ← | | MASTER INFORMATION BLOCK SYSTEM INFORMATION BLOCK TYPE 3 and 4 | SS changes the contents of MASTER INFORMATION BLOCK and SYSTEM INFORMATION BLOCK (see specific message contents). |
| 1b | ← | | PAGING TYPE 1 | Include IE "BCCH modification info" |
| 1c | → | | URA UPDATE | IE "URA update cause" shall be set to "periodical URA update". |
| 1d | ← | | URA UPDATE CONFIRM | |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 2a | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.2.4 so that the UE detects that it is out of service area. |
| 2b | | | | SS waits (T305+T307) +10% for UE to enter idle mode. |
| 3 | | | | Upon the expiry of timer T305, the UE shall search for cell to camp and triggers T307 timer. SS listens to the uplink CCCH to verify that URA UPDATE message is not transmitted. |
| 4 | | | | After the expiry of timer T307, the UE enters idle state. SS configures its downlink transmission power settings according to columns "T0" in table 8.3.2.4 so that the cell is suitable for camping. SS waits for 60s. |
| 5 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in idle mode state, the test passes, otherwise it fails. |

Specific Message Contents

MASTER INFORMATION BLOCK (Step 1a)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value. |
| Scheduling information<br>- PLMN Value tag | - Scheduling info for System Information Type 1<br>A valid PLMN value tag as defined in TS 25.331 that is different from the previous value. |
| Scheduling information<br>- Cell Value tag | - Scheduling info for System Information Type 3<br>A valid Cell value tag as defined in TS 25.331 that is different from the previous value. |
| Scheduling information<br>- Cell Value tag | - Scheduling info for System Information Type 4<br>A valid Cell value tag as defined in TS 25.331 that is different from the previous value. |

SYSTEM INFORMATION BLOCK TYPE 3 and 4 (Step 1a)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| Qrxlevmin | -70 |

PAGING TYPE 1 (Step 1b)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Paging record list | Not Present |
| BCCH modification info<br>MIB Value tag | A valid Cell value tag as defined in TS 25.331 that is different from the previous value. |
| BCCH modification time | Not present |

UTRAN MOBILITY INFORMATION (Step 0a)

Use the same message sub-type found in clause 9 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| - T305 | 5 minutes |

UTRAN MOBILITY INFORMATION CONFIRM (Step 0b)

Use the same message sub-type found in clause 9 of TS 34.108.

URA UPDATE (Step 1c)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| URA Update Cause | Check to see if set to "periodical URA update" |

#### 8.3.2.4.5 Test requirement

After step 0a the UE shall respond with UTRAN MOBILITY INFORMATION CONFIRM message.

After step 2 the UE shall not transmit any URA UPDATE message on the uplink CCCH.

### 8.3.2.5 URA Update: Success after Confirmation error of URA-ID list

#### 8.3.2.5.1 Definition

#### 8.3.2.5.2 Conformance requirement

The UE shall:

1> if the IE "URA identity" is included in a received message:

2> if the IE "RRC State Indicator" is included and set to "URA_PCH":

3> store this URA identity in the variable URA_IDENTITY;

3> after sending a possible message to UTRAN and entering URA_PCH state as specified elsewhere, read system information block type 2 in the selected cell;

3> if the stored URA identity in the variable URA_IDENTITY is not included in the list of URA identities in System Information Block type 2 in the selected cell, the list of URA identities in system information block type 2 is empty or if the system information block type 2 can not be found, a confirmation error of URA identity list has occurred:

4> if no URA update procedure is ongoing:

…

4> if a URA update procedure is ongoing:

5> take actions as specified in TS 25.331 subclause 8.3.1.10.

If the URA UPDATE CONFIRM message causes a confirmation error of URA identity list as specified in TS 25.331 subclause 8.6.2.1 the UE shall:

1> check the value of V302; and

1> if V302 is smaller or equal than N302:

2> set the IEs in the URA UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the URA UPDATE message for transmission on the uplink CCCH;

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302:

…

Reference

3GPP TS 25.331 clause 8.3.1.10, 8.6.2.1.

### 8.3.2.5.3 Test purpose

1. To confirm that the UE retries to perform the URA update procedure following a confirmation error of URA-ID list.

### 8.3.2.5.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108.

Test Procedure

At the start of this test, the UE is brought to URA_PCH state and assigned a URA with URA-ID 1. When the UE detects the expiry of timer T305 according to the system information, the UE moves to CELL_FACH state and transmits a URA UPDATE message to the SS on the uplink CCCH. The reason for performing URA updating shall be set to "periodic URA update" in IE "URA update cause". After the SS receives this message, it transmits a URA UPDATE CONFIRM message which includes the IE "RRC state indicator" set to "URA_PCH" and IE "URA identity" set to "URA-ID 2" to the UE on the downlink DCCH. The UE finds that the indicated URA-ID is not included in the list of URA-IDs broadcasted in system information block type 2, and then the UE shall retry to transmit a URA UPDATE message, with "change of URA" set in IE "URA update cause", for a confirmation error of URA-ID list. SS continue to send the same URA UPDATE CONFIRM message on the downlink DCCH until N302+1 URA UPDATE messages have been received. Then SS transmits a URA UPDATE CONFIRM message to the UE which includes IE "URA Identity" set to "URA-ID 1" and IE "new U-RNTI" on the downlink DCCH. The UE shall find this URA-ID in its URA-ID list and transmits an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is URA_PCH state. SS initializes counter K to 0 |
| 2 | → | | URA UPDATE | This message shall contain value "periodic URA update" set in IE "URA update cause" after expiry of timer T305. |
| 3 | | | Void | |
| 4 | ← | | URA UPDATE CONFIRM | SS transmits this message, setting the value "URA-ID 2" to IE "URA Identity", and including “New U_RNTI”. |
| 4a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 5 | → | | URA UPDATE | This message shall contain value "change of URA" set in IE "URA update cause" |
| 6 | | | | SS increments K by 1. If K is not greater than N302, proceed to step 7. If K is greater than N302, SS proceeds to step 8. |
| 7 | ← | | URA UPDATE CONFIRM | SS transmits this message, setting the value "URA-ID 2" to IE "URA Identity"", and including “New U_RNTI”.. And then returns to step 4a. |
| 8 | ← | | URA UPDATE CONFIRM | SS transmits this message, setting IE "URA Identity" to "URA-ID 1". This message also comprises IE "New U-RNTI". |
| 9 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Contents

URA UPDATE (Step 2)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| URA Update Cause | Check to see if set to 'Periodic URA update' |

URA UPDATE CONFIRM (Step 4 &7)

Use the same message sub-type as specified in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | |
| -SRNC Identity | '0000 0000 0001' |
| -S-RNTI | '0000 0000 0000 0000 0101' |
| New C-RNTI | ‘1010 1010 1010 1010’ B |
| URA Identity | 2 |

URA UPDATE (Step 5)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0101' |
| URA Update Cause | Check to see if set to 'URA update cause' |

URA UPDATE CONFIRM (Step 8)

Use the same message sub-type as specified in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | |
| -SRNC Identity | '0000 0000 0001' |
| -S-RNTI | '0000 0000 0000 0101 0101' |
| New C-RNTI | '1010 1010 1010 0000' B |
| URA Identity | 1 |

UTRAN MOBILITY INFORMATION CONFIRM (Step 4a & 9)

Only the message type IE in this message is checked.

#### 8.3.2.5.5 Test requirement

After step 1 the UE shall detect the expiry of timer T305, move to CELL_FACH state, transmit a URA UPDATE message on the uplink CCCH and set value "periodic URA update" into IE "URA update cause".

After step 4 the UE shall re-transmit a URA UPDATE message with IE "URA update cause" set to "change of URA" after it detects a confirmation error of URA-ID list for the URA-ID indicated in the URA UPDATE CONFIRM message. A total of (N302+1) URA UPDATE messages shall be received by the SS.

After step 8 the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH.

### 8.3.2.6 URA Update: Failure (V302 is greater than N302: Confirmation error of URA-ID list)

#### 8.3.2.6.1 Definition

#### 8.3.2.6.2 Conformance requirement

The UE shall:

1> if the IE "URA identity" is included in a received message:

2> if the IE "RRC State Indicator" is included and set to "URA_PCH":

3> store this URA identity in the variable URA_IDENTITY;

3> after sending a possible message to UTRAN and entering URA_PCH state as specified elsewhere, read system information block type 2 in the selected cell;

3> if the stored URA identity in the variable URA_IDENTITY is not included in the list of URA identities in System Information Block type 2 in the selected cell, the list of URA identities in system information block type 2 is empty or if the system information block type 2 can not be found, a confirmation error of URA identity list has occurred:

4> if no URA update procedure is ongoing:

…

4> if a URA update procedure is ongoing:

5> take actions as specified in TS 25.331 subclause 8.3.1.10.

If the URA UPDATE CONFIRM message causes a confirmation error of URA identity list as specified in TS 25.331 subclause 8.6.2.1 the UE shall:

1> check the value of V302; and

1> if V302 is smaller or equal than N302:

2> set the IEs in the URA UPDATE message according to TS 25.331 subclause 8.3.1.3;

2> submit the URA UPDATE message for transmission on the uplink CCCH;

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302:

2> release all its radio resources;

2> enter idle mode;

2> perform the actions specified in TS 25.331 subclause 8.5.2 when entering idle mode from connected mode;

2> the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.1.10, 8.6.2.1

### 8.3.2.6.3 Test purpose

1. To confirm that the UE make repeated attempts to perform the URA update procedure following a detection of a confirmation error of URA-ID list. It then moves to idle state when internal counter V302 is greater than N302.

### 8.3.2.6.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is originally in URA_PCH state updated with URA-ID 1. When the UE detects the expiry of timer T305 according to the system information, the UE shall move to CELL_FACH state and transmit a URA UPDATE message to the SS on the uplink CCCH. In this message, the value "periodic URA update" shall be set in IE "URA update cause". After the SS receives this message, it transmits a URA UPDATE CONFIRM message which includes the IE "RRC state indicator" set to "URA_PCH" and indicating the IE "URA Identity" to be "URA-ID 2" to the UE on the downlink CCCH. The UE finds that the indicated URA-ID is not included in the list of URA-IDs broadcasted. Then the UE shall retry to transmit a URA UPDATE message, with "change of URA" set in IE "URA update cause", for N302 times and each time the SS responds with the URA UPDATE CONFIRM message similar to the previous one on the downlink CCCH. After that, the UE shall enter idle state. SS waits for 5s and then calls for generic procedure C.1 to check that UE is in idle mode state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in URA_PCH state at the start of the test. SS sets internal counter K to 0. |
| 2 | → | | URA UPDATE | The message shall indicate "periodic URA update" in IE "URA update cause". This message is sent following the expiry of timer T305. SS increments counter K by 1. |
| 3 | | | | SS increments K by 1. |
| 4 | ← | | URA UPDATE CONFIRM | The SS transmit this message and set IE "URA Identity" to "URA-ID 2". |
| 5 | → | | URA UPDATE | The message shall indicate "change of URA" in IE "URA update cause". This message is sent following the expiry of timer T305. SS increments counter K by 1. |
| 6 | ← | | URA UPDATE CONFIRM | The SS transmit this message and set IE "URA Identity" to "URA-ID 2". When K is greater than N302 proceeds to step 7, else executes step 5. |
| 7 | | | Void | The UE shall enter idle state. SS waits for 5s. |
| 8 | | | Void | |
| 9 | | | Void | |
| 10 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in idle mode state, the test passes, otherwise it fails. |

Specific Message Contents

URA UPDATE CONFIRM (Step 3)

Use the same message sub-type defined in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| URA Identity | 2 |

### 8.3.2.6.5 Test requirement

After step 1 the UE shall detect the expiry of timer T305, then it shall move to CELL_FACH state and transmit a URA UPDATE message on the uplink CCCH, setting value "periodic URA update" in IE "URA update cause".

After step 6 and if K is not greater than N302, the UE shall retry to transmit a URA UPDATE message, setting value "periodic URA update" in IE "URA update cause" after it detects the confirmation error of URA-ID list for the URA-ID included in the URA UPDATE CONFIRM message.

After step 6 and if K is greater than N302, the UE shall stop transmitting URA UPDATE message and then enters idle state.

## 8.3.2.7 URA Update: Success after T302 timeout

### 8.3.2.7.1 Definition

### 8.3.2.7.2 Conformance requirement

If any or several of the following conditions are true:

- expiry of timer T302;

…

the UE shall:

1> stop T302 if it is running;

1> check whether it is still in "in service area";

1> in case of a URA update procedure:

2> clear any entry for the URA UPDATE CONFIRM message in the table "Accepted transactions" in the variable TRANSACTIONS.

If the UE detects "in service area" if it has not entered idle mode, and:

1> if V302 is equal to or smaller than N302, the UE shall:

2> in case of a URA update procedure:

3> set the contents of the URA UPDATE message according to TS 25.331 subclause 8.3.1.3;

3> submit the URA UPDATE message for transmission on the uplink CCCH.

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302, the UE shall:

…

Reference

3GPP TS 25.331 clause 8.3.1.12.

### 8.3.2.7.3 Test purpose

1. To confirm that the UE attempts to repeat the URA update procedure upon the expiry of timer T302.

### 8.3.2.7.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in URA_PCH. When the UE detects the expiry of timer T305 according to the system information, the UE moves to CELL_FACH state and transmits a URA UPDATE message to the SS on the uplink CCCH, setting value "periodic URA update" into IE "URA update cause". The SS ignores this message. The UE shall then retry to transmit a URA UPDATE message after the expiry of timer T302, until a total of N302+1 URA UPDATE messages have been received by the SS. SS transmits a URA UPDATE CONFIRM message to the UE on the downlink CCCH to end the procedure.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in URA_PCH state at the beginning of test. SS initializes counter K to 0 SS waits for T305 to expire. |
| 2 | → | | URA UPDATE | This message shall contain value "periodic URA update" in IE "URA update cause" sent upon the expiry of timer T305. |
| 3 | | | | SS shall not reply. Increment K by 1. |
| 4 | → | | URA UPDATE | This message shall contain value "periodic URA update" in IE "URA update cause" sent upon the expiry of timer T302. |
| 5 | | | | SS shall not reply. SS increments K by 1. If K is not greater than N302, proceed to step 4. If K is greater than N302, SS proceeds to step 6. |
| 6 | ← | | URA UPDATE CONFIRM | |
| 7 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

URA UPDATE CONFIRM (Step 6)

Use the same message sub-type as in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | |
| SRNC identity | 0000 0000 0001 B |
| S-RNTI | 0000 0000 0000 1111 1111 B |
| New C-RNTI | '1010 1010 1010 1010' B |

8.3.2.7.5 Test requirement

After step 1 the UE shall detect the expiry of timer T305, then it shall move to CELL_FACH state and transmit a URA UPDATE message on the uplink CCCH. The updating cause shall be set to "periodic URA update" in IE "URA update cause".

After step 3 the UE shall retry to transmit a URA UPDATE message at the expiry of timer T302, until a total of N302+1 URA UPDATE messages have been received by the SS.

After step 6, the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH.

## 8.3.2.8 Void

## 8.3.2.9 URA Update: Failure (UTRAN initiate an RRC connection release procedure on CCCH)

### 8.3.2.9.1 Definition

### 8.3.2.9.2 Conformance requirement

When the UTRAN receives a CELL UPDATE/URA UPDATE message, the UTRAN should:

1> … or

1> initiate an RRC connection release procedure (see subclause 8.1.4 in TS 25.331) by transmitting an RRC CONNECTION RELEASE message on the downlink CCCH.

…

The UE shall receive and act on an RRC CONNECTION RELEASE message in states CELL_DCH and CELL_FACH. Furthermore this procedure can interrupt any ongoing procedures with the UE in the above listed states.

When the UE receives the first RRC CONNECTION RELEASE message; and

1> if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or

1> if the message is received on DCCH:

the UE shall:

…

1> in state CELL_FACH:

2> if the RRC CONNECTION RELEASE message was received on the CCCH:

3> …

3> enter idle mode;

Reference

3GPP TS 25.331 clause 8.3.1.5, 8.1.4.3

### 8.3.2.9.3 Test purpose

To confirm that the UE moves to idle state upon the reception of RRC CONNECTION RELEASE message on downlink CCCH during a URA update procedure.

### 8.3.2.9.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in URA_PCH state. When the UE detects the expiry of periodic URA updating timer T305, the UE moves to CELL_FACH state and transmits a URA UPDATE message to the SS on the uplink CCCH. The message shall indicate the cause to be "periodic URA update" in IE "URA update cause". The SS transmits RRC CONNECTION RELEASE message on downlink CCCH. The UE shall return to idle mode after release of all current signalling flows and radio access bearers. SS calls for generic procedure C.1 to check that UE is in Idle Mode state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the URA_PCH state. SS wait until T305 timer has expired. |
| 2 | → | | URA UPDATE | UE shall transmit this message and set value "periodic URA update" into IE "URA update cause". |
| 3 | ← | | RRC CONNECTION RELEASE | SS transmits RRC CONNECTION RELEASE message to the UE on the downlink CCCH. |
| 4 | | | | The UE releases L2 signalling radio bearer and radio resources then the UE goes to idle mode. |
| 5 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in Idle Mode state, the test passes, otherwise it fails. |

Specific Message Contents

URA UPDATE (Step 2)

The same message found in Clause 9 of TS 34.108 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| URA Update Cause | Check to see if set to 'Periodic URA update' |

RRC CONNECTION RELEASE (Step 3)

Use the same message sub-type found in Clause 9 of TS 34.108.

8.3.2.9.5 Test requirement

After step 1 the UE shall transmit a URA UPDATE message on the uplink CCCH and set value "periodic URA update" into IE "Cell update cause".

After step 3 the UE shall enter idle state.

## 8.3.2.10 URA Update: Reception of URA UPDATE CONFIRM message that causes invalid configuration

### 8.3.2.10.1 Definition

### 8.3.2.10.2 Conformance Requirement

If the variable INVALID_CONFIGURATION is set to TRUE, the UE shall:

1> if V302 is equal to or smaller than N302:

2> in case of a URA update procedure:

3> set the contents of the URA UPDATE message according to TS 25.331 subclause 8.3.1.3;

3> submit the URA UPDATE message for transmission on the uplink CCCH.

2> increment counter V302;

2> restart timer T302 when the MAC layer indicates success or failure to transmit the message.

1> if V302 is greater than N302:

…

Reference

3GPP TS 25.331 clause 8.3.1.9

### 8.3.2.10.3 Test Purpose

1. To confirm that the UE retransmits a URA UPDATE message when it receives a URA UPDATE CONFIRM message that will trigger an invalid configuration in the UE, if the number of retransmissions has not reached the maximum allowed value.

### 8.3.2.10.4 Method of Test

Initial Condition

System Simulator: 1 cell

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108.

Test Procedure

The UE is in URA_PCH state. When the UE detects the expiry of timer T305 according to the system information, the UE moves to CELL_FACH state and transmits a URA UPDATE message to the SS on the uplink CCCH. This message shall contain value "periodical URA update" in IE "URA update cause". Upon receiving such a message, the SS replies with a URA UPDATE CONFIRM message with IE "RRC State Indicator" set to "CELL_DCH" on the downlink CCCH. The UE shall detect its variable "invalid configuration" is set and re-transmit URA UPDATE message. SS then transmit a valid URA UPDATE CONFIRM UPDATE message on the downlink CCCH to end the procedure.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the URA_PCH state. SS wait until T305 timer has expired. |
| 2 | → | | URA UPDATE | UE shall transmit this message and set value "periodic URA update" into IE "URA update cause". |
| 3 | ← | | URA UPDATE CONFIRM | |
| 4 | → | | URA UPDATE | IE "Protocol error indicator" is set to TRUE and IE "Protocol error information" is set to "Information element value not comprehended". |
| 5 | | | Void | |
| 6 | | | Void | |
| 7 | ← | | URA UPDATE CONFIRM | |

URA UPDATE (Step 2)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| URA Update Cause | Check to see if set to 'Periodic URA update' |

URA UPDATE (Step 4)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| URA Update Cause | Check to see if set to 'Periodic URA update' |
| Protocol error indicator | TRUE |
| Protocol error information | |
| - Protocol error cause | Information element value not comprehended |

URA UPDATE CONFIRM (Step 3)

Use the same message sub-type found in TS 34.108 clause 9, with the following exception:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_DCH |

8.3.2.10.5 Test Requirement

After step 1 the UE shall detect the expiry of timer T305, then it shall move to CELL_FACH state and transmit a URA UPDATE message on the uplink CCCH, setting value "periodic URA update" into IE "URA update cause".

After step 3 the UE shall transmit a URA UPDATE message on the uplink CCCH, setting value 'TRUE" in IE "URA update cause" and value "Information element value not comprehended" in "Protocol error cause".

## 8.3.2.11 URA Update: Cell reselection to cell of another PLMN belonging to the equivalent PLMN list

### 8.3.2.11.1 Definition

### 8.3.2.11.2 Conformance requirement

1. A UE in URA_PCH state shall initiate the URA update procedure in the following cases:

   - URA reselection:

     - if the UE detects that the current URA assigned to the UE, stored in the variable URA_IDENTITY, is not present in the list of URA identities in system information block type 2; or

     - if the list of URA identities in system information block type 2 is empty; or

     - if the system information block type 2 can not be found:

       - perform URA update using the cause "change of URA".

2. A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.

   - The cell is part of the selected PLMN or, of a PLMN considered as equivalent by the UE according to the information provided by the NAS.

   - The cell is not barred, see clause 5.3.1.1 in TS 25.304.

   - The cell is not part of the list of "forbidden LAs for roaming" TS 22.011

   - The cell selection criteria are fulfilled, see clause 5.2.3.1.2 in TS 25.304.

3. The Mobile Equipment shall store a list of "equivalent PLMNs". This list is replaced or deleted at the end of each location update procedure, routing area update procedure and GPRS attach procedure. The stored list consists of a list of equivalent PLMNs as downloaded by the network plus the PLMN code of the network that downloaded the list. The stored list shall not be deleted when the MS is switched off. The stored list shall be deleted if the SIM is removed. The maximum number of possible entries in the stored list is six.

Reference

3GPP TS 25.331 clause 8.3.1.2.

3GPP TS 25.304 clause 4.3.

3GPP TS 24.008 clause 4.4.1.

### 8.3.2.11.3 Test purpose

1. To confirm that the UE executes a URA update procedure after a successful reselection of another UTRA cell with a URA identity that is not the URA of the UE and with a PLMN identity different from the original cell but with a PLMN that is part of the equivalent PLMN list in the UE.

NOTE: Verifies conformance requirements 1, 2 and 3.

2. To confirm that the UE refrains from executing a URA update procedure to a better UTRA cell with another PLMN identity when that PLMN identity is not part of the equivalent PLMN list in the UE.

NOTE: Test case in 8.3.2.1 is a test where the UE reselects to a cell with the same PLMN identity as the registered PLMN.

8.3.2.11.4 Method of test

Initial Condition

System Simulator: 3 cells - Cell 1 is active, with the downlink transmission power shown in column marked "T0" in table 8.3.2.1-1, while cell 4 and cell 7 is inactive.

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

UE: Shall have stored equivalent PLMN list containing PLMN-1 and PLMN-2. The equivalent PLMN list stored in the UE shall not contain PLMN-3. The UE shall also have stored the URA identity URA-ID 1 from the list of URA-IDs in cell 1.

Test Procedure

**Table 8.3.2.11-1**

| Parameter | Unit | Cell 1 | | | Cell 4 | | | Cell 7 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | High Range Test Frequency | | | Low Range Test Frequency | | |
| PLMN identity | | PLMN-1 | | | PLMN-2 | | | PLMN-3 | | |
| URA identity | | URA-ID 1 | | | URA-ID 2 | | | URA-ID 3 | | |
| CPICH Ec (FDD) | dBm/3.84MHz | -73 | -79 | -79 | Cell 2 is switched off | -73 | -73 | Cell 3 is switched off | Cell 3 is switched off | -66 |
| P-CCPCH RSCP (TDD) | dBm | -62 | -68 | -68 | Cell 2 is switched off | -62 | -68 | Cell 3 is switched off | Cell 3 is switched off | -62 |

Table 8.3.2.11-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1" and "T2" are to be applied subsequently.

a) At T0, the SS activates Cell 1.

b) At T1, the SS activates Cell 4, and monitors Cell 4 for received messages from UE.

c) UE re-selects to Cell 4, and sends a URA UPDATE message. The SS replies with an URA UPDATE CONFIRM message on the downlink CCCH.

d) At T2, the SS activates Cell 7, and monitors Cell 7 for received messages from UE.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | UE is in URA_PCH state, camped on Cell 1 and registered to PLMN1. SS applies downlink transmission power settings according to values in column "T0" of table 8.3.2.11-1. |
| 1a | | ← | MASTER INFORMATION BLOCK<br>SYSTEM INFORMATION BLOCK TYPE 3 | Modified SIB 3 and MIB |
| 1b | ← | | PAGING TYPE 1 | Include IE "BCCH modification info" |
| 1c | | | | Wait 5 seconds to allow UE to read new system information |
| 1d | | | | SS applies downlink transmission power settings according to values in column "T1" of table 8.3.2.11-1. |
| 2 | | → | URA UPDATE | The UE moves to CELL_FACH state and transmits this message in Cell 4.<br>The value "change of URA" shall be set in IE "URA update cause". |
| 3 | | ← | URA UPDATE CONFIRM | The value "URA_PCH" set in IE "RRC State Indicator". |
| 4 | | | | SS applies downlink transmission power settings according to values in column "T2" of table 8.3.2.11-1. |
| 5 | | | | SS monitors that the UE does not send a URA UPDATE message or any other message. |
| 6 | | ←→ | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails. |

Specific Message Contents

MASTER INFORMATION BLOCK (Step 1a)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| MIB Value Tag | Set to (Current MIB value tag + 1) |
| SIB 3 Cell Value tag | Set to (Current SIB3 value tag + 1) |

System Information Block type 3 (Step 1a)

Use the same message type found in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - Qqualmin | -16 |

PAGING TYPE 1 (Step 1b)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Paging record list | Not Present |
| BCCH modification info | |
| MIB Value tag | Set to latest value transmitted in MIB |
| BCCH modification time | Not present |

URA UPDATE (Step 2)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:.

| Information Element | Value/remark |
|---|---|
| URA Update Cause | Check to see if set to 'change of URA' |

URA UPDATE CONFIRM (Step 3)

Use the same message sub-type found in TS 34.108 clause 9.

#### 8.3.2.11.5 Test requirement

After Step 1d the UE shall send a URA UPATE message.

After Step 4 the UE shall refrain from sending a URA update (or any other message).

### 8.3.2.12 Restricted cell reselection to a cell belonging to forbidden LA list (URA_PCH)

#### 8.3.2.12.1 Definition

#### 8.3.2.12.2 Conformance requirement

1. A UE in URA_PCH state shall initiate the URA update procedure in the following cases:
   - URA reselection:
     - if the UE detects that the current URA assigned to the UE, stored in the variable URA_IDENTITY, is not present in the list of URA identities in system information block type 2; or
     - if the list of URA identities in system information block type 2 is empty; or
     - if the system information block type 2 can not be found:
       - perform URA update using the cause "change of URA".
2. A "suitable cell" is a cell on which the UE may camp on to obtain normal service. Such a cell shall fulfil all the following requirements.
   - The cell is part of the selected PLMN or, of a PLMN considered as equivalent by the UE according to the information provided by the NAS.
   - The cell is not barred, see clause 5.3.1 in TS 25.304.
   - The cell is not part of the list of "forbidden LAs for roaming" in TS 22.011.
   - The cell selection criteria are fulfilled, see clause 5.2.3.1.2 in TS 25.304.
3. The Mobile Equipment shall contain a list of "forbidden location areas for roaming", as well as a list of "forbidden location areas for regional provision of service". These lists shall be erased when the MS is switched off or when the SIM is removed, and periodically (with period in the range 12 to 24 hours). The location area identification received on the BCCH that triggered the location updating request shall be added to the suitable list whenever a location update reject message is received with the cause "Roaming not allowed in this location area" or with the cause "Location Area not allowed". The lists shall accommodate each 10 or more location area identifications. When the list is full and a new entry has to be inserted, the oldest entry shall be deleted.

Reference

3GPP TS 25.331 clause 8.3.1.2.

3GPP TS 25.304 clause 4.3.

3GPP TS 24.008 clause 4.4.1.

8.3.2.12.3 Test purpose

1. To confirm that the UE refrains from selecting a UTRA cell and performing a URA update if that cell has a LA identity that is part of the list of LAs stored in the UE as "forbidden location areas for roaming".

NOTE: Test case in 8.3.2.1 is a test where the UE reselects to a cell with the same LA identity as the LA identity in the original cell.

8.3.2.12.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 is active, with the downlink transmission power shown in column marked "T0" in table 8.3.2.12-1, while cell 4 is inactive.

Qqualmin value for Cell 1 is set to -16 dB in SIB3 and SIB4 (FDD only) (see specific message contents).

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

UE: Shall have stored LA-ID 2 into the list of "forbidden location areas for roaming". The UE shall also have stored the URA identity URA-ID 1 from the list of URA-IDs in cell 1.

Test Procedure

**Table 8.3.2.12-1**

| Parameter | Unit | Cell 1 | | Cell 4 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| URA identity | | URA-ID 1 | | URA-ID 2 | |
| LA identity | | LA-ID 1 | | LA-ID 2 | |
| CPICH Ec (FDD) | dBm/3.84MHz | -73 | -73 | Cell 4 is switched off | -67 |
| P-CCPCH RSCP (TDD) | dBm | -62 | -68 | Cell 4 is switched off | -62 |

Table 8.3.2.12-1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while column marked "T1" are to be applied subsequently.

a) At T1, verify that the UE does not reselect to cell 4 and not send a URA update in cell 4, although cell 4 is the best cell.

b) SS calls for generic procedure C.5 to check that UE is in URA_PCH state in cell 1.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | UE is in URA_PCH state, camped on Cell 1 and registered to PLMN1. SS applies downlink transmission power settings according to values in column "T0" of table 8.3.2.12-1. |
| 2 | | | | SS applies downlink transmission power settings according to values in column "T1" of table 8.3.2.12-1. |
| 3 | | | | SS monitors that the UE does not send a URA UPDATE message or any other message. |
| 4 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state in cell 1, the test passes, otherwise it fails. |

Specific Message Contents

MASTER INFORMATION BLOCK

Use the same message sub-type found in clause 6.1.0a.3 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| MIB Value Tag | Set to (Current MIB value tag + 1) |
| SIB 3 Cell Value tag | Set to (Current SIB3 value tag + 1) |
| SIB 4 Cell Value tag | Set to (Current SIB4 value tag + 1) |

System Information Block type 3

Use the same message type found in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - Qqualmin | -16 |

System Information Block type 4

Use the same message type found in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - Qqualmin | -16 |

#### 8.3.2.12.5 Test requirement

After Step 2 the UE shall refrain from sending a URA UPDATE (or any other message).

### 8.3.2.13 URA Update: Change of URA due to HCS Cell Reselection

#### 8.3.2.13.1 Definition

#### 8.3.2.13.2 Conformance requirement

1. The quality level threshold criterion H for hierarchical cell structures is used to determine whether prioritised ranking according to hierarchical cell re-selection rules shall apply, and is defined by:

$$H_s = Q_{meas,s} - Qhcs_s$$

$$H_n = Q_{meas,n} - Qhcs_n - TO_n * L_n$$

…

2. The cell-ranking criterion R is defined by:

$$R_s = Q_{meas,s} + Qhyst_s$$

$$R_n = Q_{meas,n} - Qoffset_{s,n} - TO_n * (1 - L_n)$$

where:

$$TO_n = TEMP_OFFSET_n * W(PENALTY_TIME_n - T_n)$$

$L_n = 0$ if $HCS_PRIO_n = HCS_PRIO_s$
$L_n = 1$ if $HCS_PRIO_n <> HCS_PRIO_s$

$W(x) = 0$ for $x < 0$
$W(x) = 1$ for $x >= 0$

$TEMP_OFFSET_n$ applies an offset to the H and R criteria for the duration of $PENALTY_TIME_n$ after a timer $T_n$ has started for that neighbouring cell.

The timer $T_n$ is implemented for each neighbouring cell. $T_n$ shall be started from zero when one of the following conditions becomes true:

- if $HCS_PRIO_n <> HCS_PRIO_s$ and

$$Q_{meas,n} > Qhcs_n$$

Or

- if $HCS_PRIO_n = HCS_PRIO_s$ and
  - for serving FDD and neighbour FDD cells if the quality measure for cell selection and reselection is set to CPICH RSCP in the serving cell, and:

$$Q_{meas,n} > Q_{meas,s} + Qoffset1_{s,n}$$

  - for serving FDD and neighbour FDD cells if the quality measure for cell selection and reselection is set to CPICH Ec/No in the serving cell, and:

$$Q_{meas,n} > Q_{meas,s} + Qoffset2_{s,n}$$

  - for all other serving and neighbour cells:

$$Q_{meas,n} > Q_{meas,s} + Qoffset1_{s,n}$$

$T_n$ for the associated neighbour cell shall be stopped as soon as any of the above conditions are no longer fulfilled. Any value calculated for $TO_n$ is valid only if the associated timer $T_n$ is still running else $TO_n$ shall be set to zero.

At cell-reselection, a timer $T_n$ is stopped only if the corresponding cell is not a neighbour cell of the new serving cell, or if the criteria given above for starting timer $T_n$ for the corresponding cell is no longer fulfilled with the parameters of the new serving cell. On cell re-selection, timer $T_n$ shall be continued to be run for the corresponding cells but the

criteria given above shall be evaluated with parameters broadcast in the new serving cell if the corresponding cells are neighbours of the new serving cell.

…

**3. The cell selection criterion S used for cell reselection is fulfilled when:**

| | |
|---|---|
| for FDD cells: | Srxlev > 0 AND Squal > 0 |
| for TDD cells: | Srxlev > 0 |
| for GSM cells: | Srxlev > 0 |

Where :

$Squal = Q_{qualmeas} - Qqualmin$

$Srxlev = Q_{rxlevmeas} - Qrxlevmin - Pcompensation$

…

4. The UE shall perform ranking of all cells that fulfil the S criterion among

- all cells that have the highest HCS_PRIO among those cells that fulfil the criterion H >= 0**.** Note that this rule is not valid when UE high-mobility is detected.
- all cells, not considering HCS priority levels, if no cell fulfil the criterion H >= 0. This case is also valid when it is indicated in system information that HCS is not used, that is when serving cell does not belong to a hierarchical cell structure.

The cells shall be ranked according to the R criteria.

The best ranked cell is the cell with the highest R value.

5. If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell.

In all cases, the UE shall reselect the new cell, only if the following conditions are met:

- the new cell is better ranked than the serving cell during a time interval Treselection.
- more than 1 second has elapsed since the UE camped on the current serving cell.

…

6. The *cell reselection* process in Connected Mode is the same as *cell reselection evaluation process* used for idle mode, described in subclause 5.2.6 of 25.304.

7. A UE in URA_PCH state shall initiate the URA update procedure in the following cases:

1> URA reselection:

2> if the UE detects that the current URA assigned to the UE, stored in the variable URA_IDENTITY, is not present in the list of URA identities in system information block type 2; or

…

3> perform URA update using the cause "change of URA".

Reference

3GPP TS 25.304 clause 5.2.6.1.4

3GPP TS 25.304 clause 5.4.3

3GPP TS 25.331 clause 8.3.1

### 8.3.2.13.3 Test purpose

1. To confirm that the UE can read HCS related SIB information and act upon all HCS parameters in URA_PCH state.

2. To confirm that the UE executes an URA update procedure after the successful change of URA due to HCS Cell Reselection in URA_PCH state.

3. To confirm UE responds correctly when it re-selects to a new cell while waiting from URA UPDATE CONFIRM message from SS.

### 8.3.2.13.4 Method of test

Initial Condition

System Simulator: 3 cells - Cell 1 is active with URA-ID 1 and downlink transmission power shown in column marked "T0" in table 8.3.2.13-1. Cell2 with URA-ID 1 andCell 3 with URA-ID 2 are switched off

UE: URA_PCH (state 6-13) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE, with URA-ID 1 from the list of URA-ID in cell 1

Specific Message Content

For system information blocks 4 and 11 for Cell 1 (gives IE's which are different from defaults given in 34.108 sec 6.1) to be transmitted before idle update preamble.

Contents of System Information Block type 4 (FDD)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | FDD |
| - Sintersearch | 0 dB |
| - SsearchHCS | 17 (35 dB) |
| - RAT List | This parameter is configurable |
| - $S_{limit,SearchRAT}$ | 0 |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - $Qhyst1_S$ | 7 (gives actual value of 14 dB) |
| - $Qhyst2_S$ | Not Present |
| - HCS Serving cell information | |
| -HCS Priority | 6 |
| - Q HCS | 39 (results in actual value of –76) |
| - TcrMax | Not Present |

Contents of System Information Block type 4 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | TDD |
| - SsearchHCS | 23 (47 dB) |
| - $Qhyst1_S$ | 10 (gives actual value of 20 dB) |
| - HCS Serving cell information | |
| -HCS Priority | 6 |
| - Q HCS | 39 (results in actual value of –76) |
| - TcrMax | Not Present |

Contents of System Information Block type 11 (FDD) (Cell 1)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - Cell Selection and Re-selection info | Not Present |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |

Contents of System Information Block type 11 (3.84 Mcps TDD 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 1)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1 Default settings for cell |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1 Default settings for cell |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |

Test Procedure

**Table 8.3.2.13-1**

| Parameter | Unit | Cell 1 | | | Cell 2 | | | Cell 3 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| Cell id in system information | | 1 | | | 2 | | | 3 | | |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | Mid Range Test Frequency | | | Mid Range Test Frequency | | |
| HCS Priority | | 6 | | | 7 | | | 7 | | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | -60 | -60 | -83 | -83 | -69 | -83 | -69 | -69 |
| H* (During penalty time) | | 16 | 16 | 4 | -19 | -19 | 7 | -19 | -5 | 7 |
| H* (After PenaltyTime) | | 16 | 16 | 16 | -7 | -7 | 7 | -7 | 7 | 7 |
| P-CCPCH RSCP (TDD) | dBm | -61 | -61 | -61 | -80 | -80 | -67 | -80 | -73 | -73 |
| H* (After PenaltyTime) | | 15 | 15 | 15 | -4 | -4 | 9 | -4 | 3 | 3 |
| R* (During PenaltyTime) | | -46 | -46 | -40 | -63 | -63 | -61 | -63 | -49 | -55 |
| R* (After PenaltyTime) | | -46 | -46 | -40 | -63 | -63 | -49 | -63 | -49 | -55 |

(*) Note: this parameter is calculated internally in the UE and is only shown for clarification of the test procedure.

The UE is in the URA_PCH state and assigned with only 1 URA identity in cell 1: URA-ID 1. SS configures Cell 2 and 3 with power level given in column "T0", and URA-Id 1 and 2 respectively and starts broadcast of BCCH on the primary CCPCH in cells 2 and 3. UE shall remain camped on the Cell 1 even after expiry of penalty time i.e. 40 seconds. SS sets downlink transmission power settings according to columns "T1" in table 8.3.2.13-1. SS then adjusts the transmission power again according to 'T1' column. This is expected to cause the UE to perform a cell reselection to cell 3 after at-least 40 Seconds (Penalty Time) after the power levels have been changed. UE on performing cell reselection to cell 3 finds that its current URA-ID 1 is not in the new broadcasted list of URA-IDs, it moves to CELL_FACH state and transmits a URA UPDATE message on the uplink CCCH. After the SS receives this message, it transmits URA UPDATE CONFIRM message to the UE on the downlink CCCH. The "RRC State Indicator" is set to "URA_PCH". UE returns to URA_PCH state in cell 3 without sending a uplink response message. Next SS adjusts the transmission power according to 'T2' column. After the expiry of penalty time the UE shall re-select to cell 2, and transmit URA UPDATE message to SS. However, SS do not acknowledge but adjusts the transmission power according to 'T0' column. UE shall perform cell re-selection to cell 1 and then sent URA UPDATE message to SS. Finally SS shall transmit URA UPDATE CONFIRM message to UE on the downlink CCCH. UE shall return to URA_PCH state in Cell 1 and will not transmit anything on PRACH.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is updated with only 1 URA identity carried currently by cell 1. The starting state of the UE is URA_PCH |
| 2 | ← | | BCCH | SS configures cell 2 (with URA-ID 1) and Cell 3 (with URA-ID 2) and power levels as given in column T0 of table 8.3.2.13-1 and starts transmission of BCCH. |
| 3 | | | | UE shall Remain camped on Cell 1 and in URA_PCH state even after expiry of Penalty time. |
| 4 | | | | SS set the power transmission of all cells according to column 'T1' of table 8.3.2.13-1. |
| 5 | → | | URA UPDATE | The UE shall perform a cell reselection first after the penalty time to cell 3 and when it finds that its current URA-ID 1 is not in the new broadcasted list of URA-IDs, it shall then transmit this message and set value "change of URA" into IE "URA update cause". |
| 6 | ← | | URA UPDATE CONFIRM | Message sent on CCCH. |
| 7 | | | | SS set the power transmission of all cells according to column 'T2' of table 8.3.2.13-1. SS makes sure that the UE does not send an URA Update message during penalty time |
| 8 | → | | URA UPDATE | In Cell 2 |
| 9 | | | | SS do not respond to the URA UPDATE message from UE and set the power transmission of all cells according to column 'T0' of table 8.3.2.13-1. |
| 10 | → | | URA UPDATE | In Cell 1 |
| 11 | ← | | URA UPDATE CONFIRM | Message sent on CCCH. |

Specific Message Contents

The contents of system information block 4 and 11 messages are identical as system information block 4 and 11 messages as found in 34.108 clause 6.1 with the following exceptions:

Contents of System Information Block type 4 (FDD) (Cell 2 and 3)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | FDD |
| - Sintersearch | 0 dB |
| - SsearchHCS | 17 (35 dB) |
| - RAT List | This parameter is configurable |
| - $S_{limit,SearchRAT}$ | 0 |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -115 dBm |
| - $Qhyst1_S$ | 7 (gives actual value of 14 dB) |
| - $Qhyst2_S$ | Not Present |
| - HCS Serving cell information | |
| -HCS Priority | 7 |
| - Q HCS | 39 (results in actual value of –76) |
| - TcrMax | Not Present |

Contents of System Information Block type 4 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 2 and 3)

| Information Element | Value/remark |
|---|---|
| - Cell selection and re-selection info | |
| - CHOICE mode | TDD |
| - SsearchHCS | 23 (47 dB) |
| - $Qhyst1_S$ | 10 (gives actual value of 20 dB) |
| - HCS Serving cell information | |
| -HCS Priority | 7 |
| - Q HCS | 39 (results in actual value of –76) |
| - TcrMax | Not Present |

Contents of System Information Block type 11 (FDD) (Cell 2)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - Cell Selection and Re-selection info | NOT PRESENT |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |

Contents of System Information Block type 11 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 2)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1 Default settings for cell |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1 Default settings for cell |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |

Contents of System Information Block type 11 (FDD) (Cell 3)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Cell Selection and Re-selection info | NOT PRESENT |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - Maximum allowed UL TX power | 33 dBm |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | FDD |
| - Qqualmin | -20 dB |
| - Qrxlevmin | -58 (-115 dBm) |

Contents of System Information Block type 11 (3.84 Mcps TDD, 1.28 Mcps TDD and 7.68 Mcps TDD) (Cell 3)

| Information Element | Value/remark |
|---|---|
| - SIB 12 indicator | FALSE |
| - Measurement control system information | |
| - Use of HCS | used |
| - Intra-frequency cell info list | |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1 Default settings for cell |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20 dB |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 6 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not Present |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - Cell parameters ID | Reference clause 6.1 Default settings for cell |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Burst type | Not Present |
| - Cell Selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | -20dB |
| - HCS neighbouring cell information | Present |
| - HCS_Priority | 7 |
| -Q_HCS | 39 (results in actual value of –76) |
| -HCS Cell Reselection Information | |
| - Penalty Time | 40 |
| -Temporary Offset | 12 |
| - CHOICE mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |

URA UPDATE (Step 5, 8 and 10)

| Information Element | Value/remark |
|---|---|
| URA Update Cause | Check to see if set to 'change of URA' |

URA UPDATE CONFIRM (Steps 6 and 11)

Use the same message sub-type found in TS 34.108 clause 9.

### 8.3.2.13.5 Test requirement

After step 4 the UE shall find that URA-ID 2 is not in its maintained list of URA-IDs. After cell reselection, the UE shall move to CELL_FACH state and transmit URA UPDATE message setting value "change of URA" into IE "URA update cause".

After step 7 the UE shall find that URA-ID 1 is not in its maintained list of URA-IDs. After cell reselection, the UE shall move to CELL_FACH state and transmit URA UPDATE message setting value "change of URA" into IE "URA update cause".

## 8.3.3 UTRAN Mobility Information

### 8.3.3.1 UTRAN Mobility Information: Success

#### 8.3.3.1.1 Definition

#### 8.3.3.1.2 Conformance requirement

When the UE receives a UTRAN MOBILITY INFORMATION message, it shall:

1> act on received information elements as specified in TS 25.331 subclause 8.6;

1> if the IE "UE Timers and constants in connected mode" is present:

2> store the values of the IE "UE Timers and constants in connected mode" in the variable TIMERS_AND_CONSTANTS, replacing any previously stored value for each timer and constant; and

2> for each updated timer value:

3> start using the new value next time the timer is started;

NOTE: If a new value of timer T305 is included in the IE "UE Timers and constants in connected mode", and the old value of timer T305 is "infinity", the UE will not use the new value of the timer T305 until the next cell reselection.

2> for each updated constant value:

3> start using the new value directly;

…

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC;

….

If the IE "New U-RNTI" is included in a received message, the UE shall:

1> store the value in the variable U_RNTI, replacing any old stored value.

…

If the IE "New C-RNTI" is included, the UE shall:

1> store the value in the variable C_RNTI, replacing any old stored value;

1> use that C-RNTI when using common transport channels of type RACH, and FACH in the current cell.

…

In case of cell update procedure the UE shall transmit a CELL UPDATE message.

The UE shall set the IEs in the CELL UPDATE message as follows:

…

1> set the IE "U-RNTI" to the value of the variable U_RNTI;

…

Reference

3GPP TS 25.331 clauses 8.3.3, 8.6.3.9, 8.6.3.10, 8.3.1.3.

#### 8.3.3.1.3 Test purpose

1. To confirm that the UE starts to use the new identities after it receives a UTRAN MOBILITY INFORMATION message from the SS.

#### 8.3.3.1.4 Method of test

##### Initial Condition

System Simulator: 1 cell

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

##### Specific Message Contents

For system information block 1 of Cell 1 (gives IE's which are different from defaults given in 34.108 subclause 6.1) to be transmitted before idle update preamble.

##### System Information Block type 1

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| -T305 | 10 |

##### Test Procedure

Initially, the UE is in CELL_FACH state and it has been assigned a C-RNTI and U-RNTI. SS waits for T305 to expire. The UE shall transmit a CELL UPDATE message. SS sends CELL UPDATE CONFIRM message to the UE on the downlink CCCH. Then SS transmits an UTRAN MOBILITY INFORMATION message which includes new C-RNTI and U-RNTI to the UE. Then the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message using the assigned new C-RNTI in MAC header as confirmation. SS waits for UE to perform periodic cell updating. When SS received a CELL UPDATE message, SS checks that UE uses the new U-RNTI in the CELL UPDATE message. Then SS sends CELL UPDATE CONFIRM on the downlink CCCH. SS waits for UE to perform periodic cell updating. When SS received a CELL UPDATE message, SS sends CELL UPDATE CONFIRM on the downlink CCCH to end the test procedure.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of the UE is CELL_FACH state. UE has been allocated both C-RNTI and U-RNTI during RRC connection establishment phase. |
| 1a | | | | SS waits for a period up to timer T305 to allow the UE to start performing a cell updating procedure. |
| 1b | → | | CELL UPDATE | |
| 1c | ← | | CELL UPDATE CONFIRM | |
| 2 | ← | | UTRAN MOBILITY INFORMATION | Contains new C-RNTI and U-RNTI identities and a value for T305 that is different from the value defined in the system information. |
| 3 | → | | UTRAN MOBILITY INFORMATION CONFIRM | The assigned new C-RNTI shall be included in MAC header. |
| 4 | | | | SS wait for T305 (same as the value defined in system information) to expire. |
| 5 | → | | CELL UPDATE | UE shall trigger cell updating. The message shall indicate the same U-RNTI assigned in the UTRAN MOBILITY INFORMATION message in step 2. |
| 6 | ← | | CELL UPDATE CONFIRM | |
| 7 | | | | SS wait for T305 (the new value as specified in step 2) to expire. |
| 8 | → | | CELL UPDATE | UE shall trigger cell updating. The message shall indicate the same U-RNTI assigned in the UTRAN MOBILITY INFORMATION message in step 2. |
| 9 | ← | | CELL UPDATE CONFIRM | |
| 10 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Content

UTRAN MOBILITY INFORMATION (Step 2)

Use the same message sub-type as in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New U-RNTI | |
| - SRNC Identity | '0000 0000 0001' |
| - S-RNTI | '0101 0101 0101 0101 0101' |
| New C-RNTI | '0000 0000 0000 1111' |
| UE Timers and constants in connected mode | |
| - T305 | 5 minutes |

UTRAN MOBILITY INFORMATION CONFIRM (Step 3)

Only the message type IE is checked in this message.

CELL UPDATE (Step 1b)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH.

CELL UPDATE (Step 5 and 8)

The same message found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0101 0101 0101 0101 0101' |
| Cell Update Cause | Check to see if set to 'periodical cell updating' |

CELL UPDATE CONFIRM (Step 1c)

Use the same message sub-type as in TS 34.108, clause 9.

CELL UPDATE CONFIRM (Step 6 and 9)

Use the same message sub-type as in TS 34.108, clause 9 on the downlink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0101 0101 0101 0101 0101' |

#### 8.3.3.1.5 Test requirement

After step 2 the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH that using the assigned new C-RNTI in MAC header.

After step 4 and 7 the UE shall transmit a CELL UPDATE message on the uplink CCCH with IE "Cell update cause" set to "periodical cell updating". The IE "U-RNTI" shall be identical to the IE "New RNTI" found in UTRAN MOBILITY INFORMATION message sent by the SS in step 2.

### 8.3.3.2 UTRAN Mobility Information: Failure (Invalid message reception)

#### 8.3.3.2.1 Definition

#### 8.3.3.2.2 Conformance Requirements

If the UTRAN MOBILITY INFORMATION message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> transmit a UTRAN MOBILITY INFORMATION FAILURE message on the uplink DCCH using AM RLC;

1> set the IE "RRC transaction identifier" in the UTRAN MOBILITY INFORMATION FAILURE message to the value of "RRC transaction identifier" in the entry for the UTRAN MOBILITY INFORMATION message in the table "Rejected transactions" in the variable TRANSACTIONS, and;

1> set the IE "failure cause" to the cause value "protocol error";

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;

1> when the UTRAN MOBILITY INFORMATION FAILURE message has been submitted to lower layers for transmission:

2> continue with any ongoing processes and procedures as if the invalid UTRAN MOBILITY INFORMATION message has not been received;

2> and the procedure ends.

References

3GPP TS 25.331 clauses 8.3.3.6

8.3.3.2.3 Test Purpose

1. To confirm that the UE ignore the erroneous UTRAN MOBILITY INFORMATION message and report this event to the UTRAN by sending UTRAN MOBILITY INFORMATION FAILURE message, stating the appropriate failure cause and information.

8.3.3.2.4 Method of test

Initial Conditions

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108.

Specific Message Contents

For system information block 1 (given IEs which are different from defaults given in TS34.108 clause 6.1) to be transmitted before idle update preamble.

System Information Block type 1

| Information Element | Value/remark |
|---|---|
| T305 | 5 minutes |

Test Procedure

The UE is brought to CELL_FACH state. SS waits for T305 to expire. The UE shall transmit a CELL UPDATE message. SS sends CELL UPDATE CONFIRM message to the UE on the downlink DCCH. Then SS transmits a UTRAN MOBILITY INFORMATION message, which contains an unexpected critical message extension, to the UE on the DCCH using AM-RLC mode. The UE shall respond by transmitting the UTRAN MOBILITY INFORMATION FAILURE message, indicating "protocol error" in IE "failure cause" and also "Message extension not comprehended " in IE "Protocol error information". After receiving the UTRAN MOBILITY INFORMATION FAILURE message, SS waits for T305 to expire. The UE shall transmit a CELL UPDATE message with the original U-RNTI identity assigned. SS sends CELL UPDATE CONFIRM message to the UE on the downlink DCCH.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of the UE is CELL_FACH state. |
| 1a | | | | SS waits for a period up to timer T305 to allow the UE to start performing a cell updating procedure. |
| 1b | → | | CELL UPDATE | |
| 1c | ← | | CELL UPDATE CONFIRM | |
| 2 | ← | | UTRAN MOBILITY INFORMATION | See specific message content. |
| 3 | → | | UTRAN MOBILITY INFORMATION FAILURE | UE shall transmit this message to report the error in UTRAN MOBILITY INFORMATION message. It shall include the appropriate cause in the message. |
| 4 | | | | SS waits for a period up to timer T305 to allow the UE to start performing a cell updating procedure. |
| 5 | → | | CELL UPDATE | |
| 6 | ← | | CELL UPDATE CONFIRM | |

Specific Message Content

UTRAN MOBILITY INFORMATION (Step 2)

Use the UTRAN MOBILITY INFORMATION message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

UTRAN MOBILITY INFORMATION FAILURE (Step 3)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Failure Cause<br>- Failure Cause<br>- Protocol Error Information | <br>Check to see if set to 'Protocol error'<br>Check to see if set to Message extension not comprehended |

CELL UPDATE (Step 1b and 5)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001'B |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001'B |
| Cell update cause | Check to see if set to 'periodical cell updating' |

CELL UPDATE CONFIRM (Step 1c and 6)

Use the same message sub-type as in TS 34.108 clause 9.

#### 8.3.3.2.5 Test Requirement

After step 1a the UE shall initiate a periodic cell updating procedure by transmitting CELL UPDATE message on the CCCH. In this message, the U-RNTI identity shall be set to the same value as assigned during the RRC connection establishment procedure.

After step 2 the UE shall transmit UTRAN MOBILITY INFORMATION FAILURE message, indicating the value "protocol error" in IE "failure cause" and also "Message extension not comprehended" in IE "protocol error information".

After step 4 the UE shall initiate a periodic cell updating procedure by transmitting CELL UPDATE message on the CCCH. In this message, the U-RNTI identity shall be set to the same value as assigned during the RRC connection establishment procedure.

### 8.3.3.3 UTRAN MOBILITY INFORMATION: Seamless SRNS relocation in CELL_DCH (without pending of ciphering)

#### 8.3.3.3.1 Definition

#### 8.3.3.3.2 Conformance requirement

To initiate the procedure UTRAN transmits a UTRAN MOBILITY INFORMATION message to the UE on the downlink DCCH using AM or UM RLC. In case of SRNS relocation, the message is sent using UM RLC only.

When the UE receives a UTRAN MOBILITY INFORMATION message, it shall:

1> if the UTRAN MOBILITY INFORMATION message contained the IE "Ciphering mode info" or contained the IE "Integrity protection mode info":

2> set the IE "Status" in the variable SECURITY_MODIFICATION for all the CN domains in the variable SECURITY_MODIFICATION to "Affected";

1> if the UTRAN MOBILITY INFORMATION message contained the IE "Ciphering mode info":

2> include and set the IE "Radio bearer uplink ciphering activation time info" to the value of the variable RB_UPLINK_CIPHERING_ACTIVATION_TIME_INFO.

1> if the received UTRAN MOBILITY INFORMATION message included the IE " Downlink counter synchronisation info ":

2> re-establish the RLC entity for RB2;

2> set the new uplink and downlink HFN component of COUNT-C of RB2 to MAX(uplink HFN component of COUNT-C of RB2, downlink HFN component of COUNT-C of RB2);

2> increment by one the downlink and uplink values of the HFN component of COUNT-C for RB2;

2> calculate the START value according to TS 25.331 subclause 8.5.9;

2> include the calculated START values for each CN domain in the IE "START list" in the IE "Uplink counter synchronisation info" in the UTRAN MOBILITY INFORMATION CONFIRM message.

1> transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC;

1> if the IE "Integrity protection mode info" was present in the UTRAN MOBILITY INFORMATION message:

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RB2 from and including the transmitted UTRAN MOBILITY INFORMATION CONFIRM message.

1> if the IE "Downlink counter synchronisation info" was included in the received UTRAN MOBILITY INFORMATION message:

2> when RLC has confirmed the successful transmission of the response message:

3> re-establish all AM and UM RLC entities with RB identities larger than 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the corresponding CN domain;

3> re-establish the RLC entities with RB identities 1, 3 and 4 and set the first 20 bits of all the HFN component of the respective COUNT-C values to the START value included in the response message for the CN domain stored in the variable LATEST_CONFIGURED_CN_DOMAIN;

3> set the remaining bits of the HFN component of the COUNT-C values of all UM RLC entities to zero;

3> re-initialise the PDCP header compression entities of each radio bearer in the variable ESTABLISHED_RABS.

1> apply the new ciphering configuration as follows:

2> if the IE "Radio bearer downlink ciphering activation time info" is present:

3> apply the following procedure for each radio bearer and signalling radio bearers using RLC-AM or RLC-UM indicated by the IE "RB identity":

….

4> switch to the new ciphering configuration according to the following:

…

5> if an RLC reset or re-establishment occurs before the activation time for the new ciphering configuration has been reached, ignore the activation time and apply the new ciphering configuration immediately after the RLC reset or RLC re-establishment.

1> if IE "Integrity protection mode command" has the value "start" and the IE "Status" in the variable INTEGRITY_PROTECTION_INFO has the value "Started" and this IE was not included SECURITY MODE COMMAND:

NOTE: This case is used in SRNS relocation

2> perform integrity protection on the received message, applying the new integrity protection configuration, as described in subclause 8.5.10.1 of TS25.331 by:

3> using the algorithm (UIA defined in TS33.102) indicated by the IE "Integrity protection algorithm" contained in the IE "Integrity protection mode info";

3> using the IE "Integrity protection initialisation number", contained in the IE "Integrity protection mode info" as the value of FRESH defined in TS33.102.

2> let RBm be the signalling radio bearer where the reconfiguration message was received and let RBn be the signalling radio bearer where the response message is transmitted;

2> prohibit transmission of RRC messages on all signalling radio bearers in the IE "ESTABLISHED_RABS" except on RB0 and the radio bearer where the response message is transmitted;

2> if for a signalling radio bearer, a security configuration triggered by a previous SECURITY MODE COMMAND is pending, due to the activation time for the signalling radio bearer not having elapsed:

3> if the previous SECURITY MODE COMMAND was received due to new keys being received:

4> consider the new integrity protection configuration to include the received new keys; and

4> initialise the HFN of the COUNT-I values of the corresponding signalling radio bearers according to subclause 8.1.12.

3> else:

4> consider the new Integrity Protection configuration to include the keys associated with the LATEST_CONFIGURED_CN_DOMAIN associated with the previously received SECURITY MODE COMMAND; and

4> initialise the HFN of the COUNT-I values of the corresponding signalling radio bearers according to subclause 8.1.12 using the START value associated with the LATEST_CONFIGURED_CN_DOMAIN to be transmitted in the response to the current message.

2> start applying the new integrity protection configuration in the downlink for each signalling radio bearer in the IE "ESTABLISHED_RABS" except RBm at the next received RRC message disregarding any pending activation times for the corresponding signalling radio bearer;

2> start applying the new integrity protection configuration in the downlink for signalling radio bearer RBm from and including the received configuration message;

2> start applying the new integrity protection configuration in the uplink for signalling radio bearer RBn from and including the transmitted response message;

2> start applying the new integrity protection configuration in the uplink for signalling radio bearers other than RBn from the first message onwards.

NOTE: The UTRAN should ignore the information included in the IE "Uplink integrity protection info".

Reference

3GPP TS 25.331 clause 8.3.3 , 8.6.3.4 and 8.6.3.5

8.3.3.3.3 Test purpose

1. To confirm that the UE sends calculated START values for each CN domain to SS after a successful SRNS relocation.

2. In the case that ciphering is applied by the network, to confirm that the UE restarts ciphering following a successful SRNS relocation.

3. To confirm that the UE correctly applies integrity protection after the SRNS relocation.

8.3.3.3.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: PS-DCCH+DTCH_DCH (state 6-10) or CS-DCCH+DTCH_DCH (state 6-9) or PS+CS-DCCH+DTCH_DCH (state 6-14) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in the CELL_DCH state. SS then transmits a UTRAN MOBILITY INFORMATION message, which includes a valid “New U-RNTI”, IE “Downlink counter synchronisation info” and IE “Integrity protection mode info”, to the UE on the downlink DCCH using UM RLC. SS verifies that the UE sends UTRAN MOBILITY INFORMATION CONFIRM message. This message also includes a calculated new START value according to the formula “$START_X' = MSB_{20}$ (MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2”, calculated IE ”Integrity Check Info” using a new FRESH value as included in IE “Integrity protection initialisation number” in IE “Integrity protection mode info” in UTRAN MOBILITY INFORMATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration.

SS transmits UE CAPABILITY ENQUIRY message on the downlink DCCH using RLC-AM. The UE shall respond to downlink message with a UE CAPABILITY INFORMATION message on the uplink DCCH using RLC-AM. SS responds with UE CAPABILITY INFORMATION CONFIRM message. SS then send IDENTITY REQUEST message

on the DCCH using RLC-AM (SRB3) in order to confirm that the UE can communicate on SRB3 by using new integrity configuration. The UE shall respond IDENTITY RESPONSE message on the uplink DCCH using RLC-AM (SRB3).

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | UTRAN MOBILITY INFORMATION | If IE “Ciphering mode info” is present in the SECURITY MODE COMMAND during initial condition set-up, this message is sent after last ciphering activation time has elapsed and there is no pending ciphering activation time. New U-RNTI identities are assigned to the UE. IE “Downlink counter synchronisation info” is included. New integrity protection configuration is applied on DL SRB1. |
| 2 | → | | UTRAN MOBILITY INFORMATION CONFIRM | New calculated START value is included. New integrity protection configuration is applied on UL SRB2. If IE “Ciphering mode info” is present in step 1, new ciphering configuration is applied on UL SRB2 with the downlink and uplink values of the HFN component of COUNT-C for SRB2 incremented by one. |
| 3 | ← | | UE CAPABILITY ENQUIRY | New integrity protection configuration is applied on DL SRB2. If IE “Ciphering mode info” is present in step 1, new ciphering configuration is applied on DL SRB2 with the same START value as used in step 2. |
| 4 | → | | UE CAPABILITY INFORMATION | |
| 5 | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 6 | ← | | DOWNLINK DIRECT TRANSFER | NAS message embedded in this this is IDENTITY REQUEST. New integrity protection configuration is applied on DL SRB3. If IE “Ciphering mode info” is present in step 1, new ciphering configuration is applied on DL SRB3 using the re-initialised COUNT-C HFN by the start value as stored in step 2. |
| 7 | → | | UPLINK DIRECT TRANSFER | NAS message embedded in this is IDENTITY RESPONSE. SS confirms that new integrity protection configuration is applied on UL SRB3 by UE. If IE “Ciphering mode info” is present in step 1, new ciphering configuration is applied on UL SRB3 using the re-initialised COUNT-C HFN by the start value as stored in step 2. |

Specific Message Contents

UTRAN MOBILITY INFORMATION (Step 1) – for PS domain testing only

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to "Not present". If network applies ciphering, this IE present with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Set to an algorithm that is different from the one indicated in the SECURITY MODE COMMAND during the initial condition set-up. |
| - Ciphering activation time for DPCH | Not Present |
| - Radio bearer downlink ciphering activation time info | Not present |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC Identity<br><br>- S-RNTI<br><br>New C-RNTI<br>CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain specific DRX cycle length coefficient<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain specific DRX cycle length coefficient<br>Downlink counter synchronisation info<br>- RB with PDCP information list | <br>An arbitrary 12-bits string which is different from original SRNC<br>An arbitrary 20-bits string which is different from original S-RNTI<br>Not Present<br><br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>7<br>CS<br><br>1E 01H<br>7<br><br>Not Present |

UTRAN MOBILITY INFORMATION (Step 1) – for CS domain testing only

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|

| | |
|---|---|
| Ciphering mode info | If network does not apply ciphering, set this IE to "Not present". If network applies ciphering, this IE present with the values of the sub IEs as stated below. |
| - Ciphering mode command | Start/restart |
| - Ciphering algorithm | Set to an algorithm that is different from the one indicated in the SECURITY MODE COMMAND during the initial condition set-up. |
| - Ciphering activation time for DPCH | (256+CFN-(CFN MOD 8 + 8))MOD 256 |
| - Radio bearer downlink ciphering activation time info | |
| - Radio bearer activation time | |
| - RB identity | 1 |
| - RLC sequence number | Current RLC SN |
| - RB identity | 2 |
| - RLC sequence number | Current RLC SN+2 |
| - RB identity | 3 |
| - RLC sequence number | Current RLC SN |
| - RB identity | 4 |
| - RLC sequence number | Current RLC SN |
| Integrity protection mode info<br>- Integrity protection mode command<br>- Downlink integrity protection activation info<br>- Integrity protection algorithm<br>- Integrity protection initialisation number | <br>Start<br>Not Present<br>UIA1<br>SS selects an arbitrary 32 bits number for FRESH |
| New U-RNTI<br>- SRNC Identity<br><br>- S-RNTI<br><br>New C-RNTI<br>CN Information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain specific DRX cycle length coefficient<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain specific DRX cycle length coefficient<br>Downlink counter synchronisation info<br>- RB with PDCP information list | <br>An arbitrary 12-bits string which is different from original SRNC<br>An arbitrary 20-bits string which is different from original S-RNTI<br>Not Present<br><br>Not present<br><br>00 01H<br><br>PS<br><br>05 00H<br>7<br>CS<br><br>1E 01H<br>7<br><br>Not Present |

UTRAN MOBILITY INFORMATION CONFIRM (Step 2) – for PS domain testing only

The same message sub-type found in TS 34.108, clause 9 shall be transmitted by the UE on the uplink DCCH with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Check that this IE is not present.<br>Check that this IE is correct value. |

UTRAN MOBILITY INFORMATION CONFIRM (Step 2) – for CS domain testing only

Check that the UE uses the same message sub-type found in TS 34.108 clause 9, with the following exception.

| Information Element | Value/remark |
|---|---|
| COUNT-C activation time | Check that this IE is present. |
| Uplink counter synchronisation info<br>- RB with PDCP information list<br>- START list | <br>Not present<br>Check that this IE has the correct value. |

UE CAPABILITY ENQUIRY (Step 3)

Use the same message sub-type found in [9] TS 34.108 clause 9.

UE CAPABILITY INFORMATION (Step 4)

Check that the UE uses the same message sub-type found in TS 34.108 clause 9.

UE CAPABILITY INFORMATION CONFIRM (Step 5)

Use the same message sub-type found in [9] TS 34.108 clause 9.

#### 8.3.3.3.5 Test requirement

After step 1, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC which includes a calculated new START value according to the formula "$START_X' = MSB_{20}$ ( MAX {COUNT-C, COUNT-I | radio bearers and signalling radio bearers using the most recently configured $CK_X$ and $IK_X$}) + 2", calculated IE "Integrity Check Info" using the new FRESH value as included in IE "Integrity protection initialisation number" in IE "Integrity protection mode info" in UTRAN MOBILITY INFORMATION message and COUNT-I that includes subsequent HFN as used in the old integrity protection configuration. The UE, further more, shall apply the new ingerity protection configuration for the first received/sent RRC message on SRB0, SRB3, and SRB4 after receiving the UTRAN MOBILITY INFORMATION message (i.e. immediately). For SRB2 the new integrity protection configuration shall be applied from and including the received UTRAN MOBILITY INFORMATION message (DL) and the sent UTRAN MOBILITY INFORMATION CONFIRM message (UL).

After step 3, the UE shall respond with a UE CAPABILITY INFORMATION message to SS.

After step 6, the UE shall respond with an IDENTITY RESPONSE message to SS and apply new ciphering configuration on UL SRB3.

### 8.3.3.4 UTRAN Mobility Information: Shared Network

#### 8.3.3.4.1 Definition

#### 8.3.3.4.2 Conformance requirement

1. If the IE "CN information info" is present in a message, the UE shall:

   1> if the IE "Primary PLMN Identity" is present:

      2> forward the content of the IE "Primary PLMN identity" to upper layers.

   1> else:

      2> if the IE "PLMN Identity" is present:

         3> forward the content of the IE "PLMN identity" to upper layers.

2. The UE shall, in the INITIAL DIRECT TRANSFER message:

   1> set the IE "NAS message" as received from upper layers; and

   1> set the IE "CN domain identity" as indicated by the upper layers; and

   1> set the IE "Intra Domain NAS Node Selector" as follows:

2> derive the IE "Intra Domain NAS Node Selector" from TMSI/PMTSI, IMSI, or IMEI; and

2> provide the coding of the IE "Intra Domain NAS Node Selector" according to the following priorities:

1. derive the routing parameter for IDNNS from TMSI (CS domain) or PTMSI (PS domain) whenever a valid TMSI/PTMSI is available;

2. base the routing parameter for IDNNS on IMSI when no valid TMSI/PTMSI is available;

3. base the routing parameter for IDNNS on IMEI only if no (U)SIM is inserted in the UE.

1> if the UE, on the existing RRC connection, has received a dedicated RRC message containing the IE "Primary PLMN Identity" in the IE "CN Information Info":

2> set the IE "PLMN identity" in the INITIAL DIRECT TRANSFER message to the latest PLMN information received via dedicated RRC signalling. If NAS has indicated the PLMN towards which a signalling connection is requested, and this PLMN is not in agreement with the latest PLMN information received via dedicated RRC signalling, then the initial direct transfer procedure shall be aborted, and NAS shall be informed.

References

1. 3GPP TS 25.331 clause 8.6.1.2

2. 3GPP TS 25.331 clause 8.1.8.2

#### 8.3.3.4.3 Test purpose

- To verify that the UE reacts on the IE “Primary PLMN identity” in message UTRAN MOBILITY INFORMATION, and forwards this IE to NAS.

- To verify that the UE sets the IE “PLMN Identity” in the INITIAL DIRECT TRANSFER message to the correct PLMN information received in UTRAN MOBILITY INFORMATION message.

#### 8.3.3.4.4 Method of test

Initial condition

System Simulator:

- Cell 1 broadcasting PLMN1 on BCCH.

- For MASTER INFORMATION BLOCK see specific message content

User Equipment:

The UE is equipped with a USIM containing default values. The HPLMN (MCC+MNC) of the IMSI for the USIM is set to PLMN1.

The UE is registered in CS and PS domains on PLMN1 (MM Idle, SM Inactive, GMM Idle) and is in state CS-DCCH_DCH (state 6-5) as specified in clause 7.4 of TS 34.108.

Test procedure

The UE is registered in CS and PS domains in RRC state Cell_DCH. The SS transmits message UTRAN MOBILITY INFORMATION containing Rel-6 IE “Primary PLMN info”. The PLMN code is different from the RPLMN, which triggers LA/RA update. The UE responds with an INTIAL DIRECT TRANSFER message containing IE “PLMN Identity” with the same value as previously received in message UTRAN MOBILITY INFORMATION.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of the UE is CELL_DCH state. |
| 2 | ← | | UTRAN MOBILITY INFORMATION | Primary PLMN identity = PLMN2. LA/RA update is initiated by UE NAS. |
| 3 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 4 | → | | INITIAL DIRECT TRANSFER | PLMN identity = PLMN2 |

Specific message contents

MASTER INFORMATION BLOCK

Use the same message sub-type found in clause 6.1.0a.3 of TS 34.108, with the following exception.

| | |
|---|---|
| - MIB value tag | Set to (Current MIB value tag + 1) |
| - Multiple PLMN List<br>- MIB PLMN Identity<br>- Multiple PLMNs (1)<br>- MNC | <br>TRUE<br><br>11 |

UTRAN MOBILITY INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| CN information info<br>- PLMN identity<br>- CN common GSM-MAP NAS system information<br>- GSM-MAP NAS system information<br>- CN domain related information<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain specific DRX cycle length coefficient<br>- CN domain identity<br>- CN domain specific NAS system information<br>- GSM-MAP NAS system information<br>- CN domain specific DRX cycle length coefficient<br>- Primary PLMN identity | <br>Not Present<br><br>00 01H<br><br>PS<br><br>05 00H<br>7<br>CS<br><br>1E 01H<br>7<br>PLMN-2 |

INITIAL DIRECT TRANSFER (Step 3)

| Information Element | Value/remark |
|---|---|
| PLMN identity | PLMN-2 |

8.3.3.4.5 Test requirements

In step 4, the UE shall respond with an INITIAL DIRECT TRANSFER message. The IE “PLMN identity” shall be set to PLMN2.

## 8.3.4 Active set update in soft handover (FDD)

### 8.3.4.1 Active set update in soft handover: Radio Link addition

#### 8.3.4.1.1 Definition

#### 8.3.4.1.2 Conformance requirement

Upon reception of an ACTIVE SET UPDATE message the UE shall act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following. The UE shall:

1> first add the RLs indicated in the IE "Radio Link Addition Information";

1> perform the physical layer synchronisation procedure B as specified in TS 25.214;

1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE COMPLETE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC without waiting for the completion of the Physical Layer synchronization B, specified in TS 25.214;

…

Reference

3GPP TS 25.331 clause 8.3.4

#### 8.3.4.1.3 Test purpose

1. To confirm that the UE continues to communicate with the SS on both the additional radio link and an already existing radio link after the radio link addition.

#### 8.3.4.1.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

**Table 8.3.4.1**

| Parameter | Unit | Cell 1 | | | | Cell 2 | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | Mid Range Test Frequency | | | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | OFF | -60 | -75 | -60 | -60 | OFF |

Table 8.3.4.1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

Initially, the UE goes to connected mode and establishes a radio access bearer in CELL_DCH state in cell 1.

SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.1. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. After the MEASUREMENT REPORT message is received, the SS configures the new radio link to be added from cell 2 and then the SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC

which includes the IE "Radio Link Addition Information" (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio links with Primary CPICH info used for the reference ID).

When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC without waiting for the physical channel synchronisation B.

SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.1. UE shall not detect the DPCH from cell 1 but continue to communicate through the another DPCH from cell 2. The UE shall transmit a MEASUREMENT REPORT message which indicates the event '1b' for cell 1.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 2. The UE shall transmit a UE CAPABILITY ENQUIRY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

The SS configures its downlink transmission power settings according to columns "T3" in table 8.3.4.1. UE shall detect DPCH from cell 1, but not detect the DPCH from cell 2, but continue to communicate through DPCH from cell 1. The UE shall transmit a MEASUREMENT REPORT message which indicates the event '1b' for cell 2.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 1. The UE shall transmit a UE CAPABILITY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.1. |
| 2 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 3 | ← | | ACTIVE SET UPDATE | SS transmits this message in cell 1 on downlink DCCH using AM RLC. The message includes IE "Radio Link Addition Information". (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio links with Primary CPICH info used for the reference ID in cell 2) |
| 4 | → | | ACTIVE SET UPDATE COMPLETE | The UE shall configure a new radio link to cell 2, without interfering with existing connections on the radio link in cell 1. |
| 5 | | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.1 |
| 5a | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 6 | ← | | UE CAPABILITY ENQUIRY | Use default message. |
| 7 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 8 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 9 | | | Void | |
| 9a | | | Void | |
| 10 | | | | SS configures its downlink transmission power settings according to columns "T3" in table 8.3.4.1 |

| | | | |
|---|---|---|---|
| 10a | → | MEASUREMENT REPORT | See specific message contents for this message |
| 11 | ← | UE CAPABILITY ENQUIRY | Use default message. |
| 12 | → | UE CAPABILITY INFORMATION | Use default message. |
| 13 | ← | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 14 | ←→ | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

The contents of SIB11 broadcasted in cell 1 shall be in accordance with the default SIB11 as specified in section 6.1 of TS 34.108.

The contents of SIB12 in cell 1, and SIB11 and SIB12 in cell 2 shall be in accordance with the detault SIBs as specified in TS 34.108.

MEASUREMENT REPORT (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 3)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT REPORT (Step 5a)

NOTE 1: UE may optionally include Cell measured results IE for Cell 1

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | UE may optionally include report for Cell 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1b |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |

MEASUREMENT REPORT (Step 10a)

NOTE 1: UE may optionally include Cell measured results IE for Cell 2

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | UE may optionally include report for Cell 2 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1b |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

#### 8.3.4.1.5 Test requirement

After step 1 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 3 the UE shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC to acknowledge the completion of the active set additional procedure.

After step 5 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 6 the UE shall transmit a UE CAPABILITY INFORMATION message.

After step 10 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 11 the UE shall transmit a UE CAPABILITY INFORMATION message.

## 8.3.4.2 Active set update in soft handover: Radio Link removal

### 8.3.4.2.1 Definition

### 8.3.4.2.2 Conformance requirement

Upon reception of an ACTIVE SET UPDATE message the UE shall act upon all received information elements as specified in 8.6, unless specified otherwise in the following.

The UE may:

1> maintain a list of the set of cells to which the UE has Radio Links if the IE "Cell ID" is present.

The UE shall:

1> first add the RLs indicated in the IE "Radio Link Addition Information";

1> remove the RLs indicated in the IE "Radio Link Removal Information". If the UE active set is full or becomes full, an RL, which is included in the IE "Radio Link Removal Information" for removal, shall be removed before adding RL, which is included in the IE "Radio Link Addition Information" for addition;

1> perform the physical layer synchronisation procedure B as specified in TS 25.214;

1> if the radio link currently considered to be the serving HS-DSCH radio link is indicated in the IE "Radio Link Removal Information":

2> no longer consider any radio link as the serving HS-DSCH radio link;

2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25.

1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE COMPLETE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC without waiting for the completion of the Physical Layer synchronisation B, as specified in TS 25.214;

1> the procedure ends on the UE side.

…

Reference

3GPP TS 25.331 clause 8.3.4

### 8.3.4.2.3 Test purpose

1. To confirm that the UE continues to communicate with the SS on the remaining radio link after radio link removal on the active set.

2. To confirm that the UE is not using the removed radio link to communicate with the SS.

### 8.3.4.2.4 Method of test

Initial Condition

System Simulator: 2 cells - both Cell 1 and Cell 2 are active

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

System Information Block type 11

Use the default system information block with the same type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Intra-frequency measurement reporting criteria | |
| - Parameters required for each event | 3 kinds |
| - Intra-frequency event identity | 1a |
| - Time to trigger | 5000 |

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

**Table 8.3.4.2**

| Parameter | Unit | Cell 1 | | | | Cell 2 | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | Mid Range Test Frequency | | | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | -75 | -60 | -75 | -60 | -60 | OFF |

Table 8.3.4.2 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

At the start of the test, the UE goes to connected mode and establishes a radio access bearer service in the CELL_DCH state in cell 1.

SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.2. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. After the MEASUREMENT REPORT message is received, the SS configures the new radio link to be added from cell 2 and then the SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC which includes the IE "Radio Link Addition Information" (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio links with Primary CPICH info used for the reference ID).

When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.2. UE shall transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 1 according to IE "Intra-frequency event identity", which is set to '1b' in the SYSTEM INFORMATION BLOCK TYPE 11. After the MEASUREMENT REPORT message is received, the SS remove the radio link from cell 1 and then SS transmits an ACTIVE SET UPDATE message, which includes IE "Radio Link Removal Information" and specifying the P-CPICH information of the cell to be removed.

When the UE receives this message, the UE RRC entity shall request UE L1 entity to terminate transmission and reception of the radio link from cell 1. Then the UE transmits an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 2. The UE shall transmit a UE CAPABILITY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

SS configures its downlink transmission power settings according to columns "T3" in table 8.3.4.2 so as to generate a radio link failure condition. The UE shall detect the radio link failure UE shall re-select to cell 1 and transmit a CELL UPDATE message. SS transmits a CELL UPDATE CONFIRM message after it receive CELL UPDATE message from UE. Then the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.2 |
| 2 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 3 | ← | | ACTIVE SET UPDATE | SS transmits this message in cell 1 on downlink DCCH using AM RLC. The message includes IE "Radio Link Addition Information". (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio links with Primary CPICH info used for the reference ID in cell 2) |
| 4 | → | | ACTIVE SET UPDATE COMPLETE | The UE shall configure a new radio link to cell 2, without interfering with existing connections on the radio link in cell 1. |
| 5 | | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.2 |
| 6 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 7 | ← | | ACTIVE SET UPDATE | The SS transmits this message on downlink DCCH using AM RLC which includes IE "Radio Link Removal Information". |
| 8 | → | | ACTIVE SET UPDATE COMPLETE | The UE shall remove the radio link associated with cell 1. |
| 9 | ← | | UE CAPABILITY ENQUIRY | Use default message. |

| | | | |
|---|---|---|---|
| 10 | → | UE CAPABILITY INFORMATION | Use default message. |
| 11 | ← | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 12 | | | SS configures its downlink transmission power settings according to columns "T3" in table 8.3.4.2 |
| 13 | → | CELL UPDATE | UE sends this message in cell 1. |
| 14 | ← | CELL UPDATE CONFIRM | See message content. |
| 15 | → | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 16 | ←→ | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

The contents of SIB11 broadcasted in cell 1 shall be in accordance with the default SIB11 as specified in section 6.1 of TS 34.108:

The contents of SIB12 in cell 1, and SIB11 and SIB12 in cell 2 shall be in accordance with the detault SIBs as specified in TS 34.108.

MEASUREMENT REPORT (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 3)

The message to be used in this test is defined in Annex.A, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT REPORT (Step 6)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results list | |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - CHOICE event result | Intra-frequency measurement event results |
| - Intra-frequency event identity | 1b |
| - Cell measurement event results | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 7)

The message to be used in this test is the same as the message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Radio link removal information | 1 radio link to be removed |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same P-CPICH scrambling code assigned for cell 1 |

CELL UPDATE (Step 13)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in TS 34.108, clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| AM_RLC error indication (RB2, RB3 or RB4) | Not checked |
| Cell Update Cause | "radio link failure" |

CELL UPDATE CONFIRM (Step 14)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State indicator<br>UplinkDPCH Info | CELL_DCH<br>Set to the same values as RADIO BEARER SETUP message for "Packet to CELL_DCH from CELL_FACH in PS" or "Non speech to CELL_DCH from CELL_FACH in CS" or "Speech to CELL_DCH from CELL_FACH in CS" |
| Downlink information common for all radio links | Set to the same values as RADIO BEARER SETUP message for "Packet to CELL_DCH from CELL_FACH in PS" or "Non speech to CELL_DCH from CELL_FACH in CS" or "Speech to CELL_DCH from CELL_FACH in CS" |
| Downlink information for each radio link list | Set to the same values as RADIO BEARER SETUP message for "Packet to CELL_DCH from CELL_FACH in PS" or "Non speech to CELL_DCH from CELL_FACH in CS" or "Speech to CELL_DCH from CELL_FACH in CS" |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 15)

Use the same message found in TS 34.108 clause 9, with the exceptions of the following IEs:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info | This IE is not checked. |

#### 8.3.4.2.5 Test requirement

After step 1 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 3 the UE shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC to acknowledge the completion of the active set additional procedure.

After step 5 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 7 the UE shall remove the radio link from cell 1 and it shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC.

After step 10 the UE shall transmit a UE CAPABILITY INFORMATION message.

After step 12 the UE shall transmit a CELL UPDATE message on the CCCH with IE "Cell update cause" set to "radio link failure".

After step 14, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

### 8.3.4.3 Active set update in soft handover: Combined radio link addition and removal

#### 8.3.4.3.1 Definition

#### 8.3.4.3.2 Conformance requirement

Upon reception of an ACTIVE SET UPDATE message the UE shall act upon all received information elements as specified in 8.6, unless specified otherwise in the following. The UE shall:

1> first add the RLs indicated in the IE "Radio Link Addition Information";

1> remove the RLs indicated in the IE "Radio Link Removal Information". If the UE active set is full or becomes full, an RL, which is included in the IE "Radio Link Removal Information" for removal, shall be removed before adding RL, which is included in the IE "Radio Link Addition Information" for addition;

1> perform the physical layer synchronisation procedure B as specified in TS 25.214;

1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE COMPLETE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC without waiting for the completion of the Physical Layer synchronization B, specified in TS 25.214;

…

Reference

3GPP TS 25.331 clause 8.3.4

### 8.3.4.3.3 Test purpose

1. To confirm that the UE continues to communicate with the SS on the added radio link and removes radio link which exists prior to the execution of active set update procedure.

### 8.3.4.3.4 Method of test

Initial Condition

System Simulator: 3 cells- Cell 1, Cell 2 and Cell 3 are active, with downlink transmission power settings according to columns "T0" in table 8.3.4.3.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE [Active set is not full.]

Specific Message Content

For system information block 11 (gives IE's which are different from defaults given in 34.108 sec 6.1) to be transmitted before idle update preamble.

System Information Block type 11

Use same message sub-clause 6.1 of TS34.108, with following exception:

| Information Element | Value/remark |
|---|---|
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Intra-frequency measurement reporting criteria | |
| - Parameters required for each event | 3 kinds |
| - Intra-frequency event identity | 1a |
| - Time to trigger | 5000 |

Test Procedure

**Table 8.3.4.3**

| Parameter | Unit | Cell 1 | | | | | Cell 2 | | | | | Cell 3 | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T4 | T0 | T1 | T2 | T3 | T4 | T0 | T1 | T2 | T3 | T4 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | | Mid Range Test Frequency | | | | | Mid Range Test Frequency | | | | |
| CPICH Ec | dBm/ 3.84 MHz | -60 | -60 | -60 | OFF | -60 | -80 | -60 | -60 | OFF | -70 | -80 | -80 | -60 | -60 | OFF |

Table 8.3.4.3 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution.

The UE goes to connected mode and establishes a radio access bearer in the CELL_DCH state in cell 1.

SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.3. UE transmits a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. After the MEASUREMENT REPORT message is received, the SS configures the new radio link to be added from cell 2 and then the SS transmits to the UE in cell 1 an ACTIVE SET UPDATE message which includes IE "Radio Link Addition Information", indicating the addition of cell 2 into the active set, on DCCH using AM RLC.

When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.3. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 3 according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. After the MEASUREMENT REPORT message is received, the SS configures the new radio link to be added from cell 3 and then the SS transmits to the UE an ACTIVE SET UPDATE message which includes IE "Radio Link Addition Information" and IE "Radio Link Removal Information", indicating the removal of cell 2 and addition of cell 3 into the active set, on DCCH using AM RLC.

When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links and then the UE removes the radio link specified in an ACTIVE SET UPDATE message. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS configures its downlink transmission power settings according to columns "T3" in table 8.3.4.3. The UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 1 according to IE “Intra-frequency event identity” which is set to ‘1b’ in the SYSTEM INFORMATION BLOCK TYPE 11.

After the MEASUREMENT REPORT message is received, the SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond to this message through the DPCH in cell 3. The UE shall transmit a UE CAPABILITY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

SS configures its downlink transmission power settings according to columns "T4" in table 8.3.4.3. The UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 3 according to IE “Intra-frequency event identity” which is set to ‘1b’ in the SYSTEM INFORMATION BLOCK TYPE 11.

After the MEASUREMENT REPORT is received, the SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond to this message through the DPCH in cell 1. The UE shall transmit a UE CAPABILITY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | | | | SS configures the initial active set with only cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.3 |
| 0b | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 0c | ← | | ACTIVE SET UPDATE | The SS transmit this message on downlink DCCH using AM RLC which includes IE "Radio Link Addition Information" for cell 2. |
| 0d | → | | ACTIVE SET UPDATE COMPLETE | The UE adds the radio link in cell 2. |
| 1 | | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.3 |
| 2 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 3 | ← | | ACTIVE SET UPDATE | The SS transmit this message on downlink DCCH using AM RLC which includes IE "Radio Link Addition Information" for cell 3 and IE "Radio Link Removal Information" for cell 2. |
| 4 | → | | ACTIVE SET UPDATE COMPLETE | The UE shall configure a new radio link in cell 3 and removes the old radio link in cell 2. |
| 4a | | | | SS configures its downlink transmission power settings according to columns "T3" in table 8.3.4.3 |
| 4b | → | | MEASUREMENT REPORT | See specific message contents for this message. |
| 5 | ← | | UE CAPABILITY ENQUIRY | Use default message. |
| 6 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 7 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 8 | | | | SS configures its downlink transmission power settings according to columns "T4" in table 8.3.4.3 |
| 8a | → | | MEASUREMENT REPORT | See specific message contents for this message. |
| 9 | ← | | UE CAPABILITY ENQUIRY | Use default message. |
| 10 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 11 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |

Specific Message Content

MEASUREMENT REPORT (Step 0b)

NOTE 1: Cell measured results for cells 1 and 2 may appear in either order (i.e. cell 1 then cell 2 or cell 2 then cell 1)

NOTE 2: Cell measured results for cell 3 may or may not be present (depends upon the capability of the UE and test uncertainties in power level)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | See Note 2 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | Checked that this IE is absent |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 0c)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Set to same code as assigned for cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | No code change | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT REPORT (Step 2)

NOTE 1: Cell measured results for cells 1, 2 and 3 may appear in any order.

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | Checked that this IE is absent |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 3)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Set to same code as assigned for cell 3 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | No code change | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| Radio link removal information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Set to same code as assigned for cell 2 | |

MEASUREMENT REPORT (Step 4b)

NOTE 1: UE may optionally include Cell measured results IE for Cell 1 and 2.

NOTE 2: Cell measured results for cells 1and 2 may appear in any order.

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | UE may optionally include report for Cell 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | UE may optionally include report for Cell 2 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | Checked that this IE is absent |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1b |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |

MEASUREMENT REPORT (Step 8a)

NOTE: UE may optionally include Cell measured results IE for Cell 3.

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | UE may optionally include report for Cell 3 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | Checked that this IE is absent |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1b |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |

#### 8.3.4.3.5 Test requirement

At step 0a the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 0c the UE shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH.

After step 1 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 3 the UE shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH.

After step 4a the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 5 the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH in cell 3.

After step 8 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 9 the UE shall transmit a UE CAPABILITY INFORMATION message on the uplink DCCH in cell 1.

### 8.3.4.4 Active set update in soft handover: Invalid Configuration

#### 8.3.4.4.1 Definition

#### 8.3.4.4.2 Conformance requirement

If any of the following conditions are valid:

…

- a radio link in the IE "Radio link addition information" is also present in the IE "Radio Link Removal Information"; and/or

…

- the variable INVALID_CONFIGURATION is set to TRUE:

the UE shall:

1> keep the active set as it was before the ACTIVE SET UPDATE message was received;

1> transmit an ACTIVE SET UPDATE FAILURE message on the DCCH using AM RLC;

1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> set the IE "failure cause" to "Invalid configuration";

1> When the ACTIVE SET UPDATE FAILURE message has been submitted to lower layers for transmission:

2> the procedure ends on the UE side.

Reference

3GPP TS 25.331 clause 8.3.4.5

#### 8.3.4.4.3 Test purpose

1. To confirm that the UE transmits an ACTIVE SET UPDATE FAILURE message on the DCCH using AM RLC, if the received ACTIVE SET UPDATE message includes a radio link which is specified in both IE "Radio Link Addition Information" and IE "Radio Link Removal Information".

#### 8.3.4.4.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

**Table 8.3.4.4**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | -75 | -60 |

Table 8.3.4.4 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE establishes a radio access bearer in the CELL_DCH state in cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.4. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. SS then transmits an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC which includes the same primary scrambling code in IE "Primary CPICH Info" of both IE"Radio Link Addition Information" and IE "Radio Link Removal Information". When the UE receives this message, it transmits an ACTIVE SET UPDATE FAILURE message which is set to "Invalid configuration" in IE "failure cause" on the uplink DCCH using AM RLC to the SS. UE then send another MEASUREMENT REPORT to SS 4s after step 2. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.4 |
| 2 | → | | MEASUREMENT REPORT | |
| 3 | ← | | ACTIVE SET UPDATE | The SS transmits this message on downlink DCCH using AM RLC which includes the same primary scrambling code in IE"Primary CPICH Info" of both IE"Radio Link Addition Information" and IE "Radio Link Removal Information". |
| 4 | → | | ACTIVE SET UPDATE FAILURE | The message shall state "Invalid configuration" in IE "failure cause". |
| 5 | → | | MEASUREMENT REPORT | |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

ACTIVE SET UPDATE (Step 3)

The message to be used in this test is defined in the default message content clause, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Set to same code as assigned for cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference TS 34.108 clause 6.10 Parameter set | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| Radio link removal information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Set to same code as assigned for cell 2 | |

ACTIVE SET UPDATE FAILURE (Step 4)

| Information Element | Value/remark |
|---|---|
| Integrity check info | Not Checked |
| Failure cause | Check to see if it's set to 'Invalid configuration' |

### 8.3.4.4.5 Test requirement

After step 1 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 3 the UE shall transmit an ACTIVE SET UPDATE FAILURE message, setting "Invalid configuration" in IE "failure cause" and sent on the uplink DCCH using AM RLC.

After step 4 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC, 4s after step 2.

## 8.3.4.5 Active set update in soft handover: Reception of an ACTIVE SET UPDATE message in wrong state

### 8.3.4.5.1 Definition

### 8.3.4.5.2 Conformance requirement

If the UE is in another state than CELL_DCH state upon reception of the ACTIVE SET UPDATE message, the UE shall perform procedure specific error handling as follows. The UE shall:

1> transmit a ACTIVE SET UPDATE FAILURE message on the uplink DCCH using AM RLC;

1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> set the IE "failure cause" to the cause value "protocol error";

1> include the IE "Protocol error information" with the IE "Protocol error cause" set to "Message not compatible with receiver state";

1> when the ACTIVE SET UPDATE FAILURE message has been delivered to lower layers for transmission:

2> continue with any ongoing processes and procedures as if the ACTIVE SET UPDATE message has not been received;

2> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.4.0

### 8.3.4.5.3 Test purpose

1. To confirm that the UE transmit an ACTIVE SET UPDATE FAILURE message when it receives an ACTIVE SET UPDATE message in any state other then CELL_DCH.

### 8.3.4.5.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and 2 are active.

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.4.5**

| Parameter | Unit | Cell 1 | Cell 2 |
|---|---|---|---|
| UTRA RF Channel Number | | Mid Range Test Frequency | Mid Range Test Frequency |
| CPICH Ec | dBm/3.84MHz | -60 | -70 |

Table 8.3.4.5 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

At the start of the test, the UE establishes a radio access bearer service in the CELL_FACH state in cell 1. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS. The SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC which includes the IE "Radio Link Addition Information" indicating the addition of cell 2 into the active set. When the UE receives this message, UE shall transmit ACTIVE SET UPDATE FAILURE message, with the IE "failure cause" set to the cause value "protocol error" and includes the IE "Protocol error information" with the IE "Protocol error cause" set to "Message not compatible with receiver state", on the uplink DCCH using AM RLC. UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 0b | → | | MEASUREMENT REPORT | |
| 2 | | | Void | |
| 3 | ← | | ACTIVE SET UPDATE | The SS transmit this message on downlink DCCH using AM RLC which includes IE "Radio Link Addition Information". |
| 4 | → | | ACTIVE SET UPDATE FAILURE | IE "failure cause" set to the cause value "protocol error" and includes the IE "Protocol error information" with the IE "Protocol error cause" set to "Message not compatible with receiver state". |
| 5 | → | | MEASUREMENT REPORT | |
| 6 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Content

MEASUREMENT CONTROL (Step 0a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark | Version |
|---|---|---|
| Measurement Identity | 1 | |
| Measurement Command | Setup | |
| Measurement reporting mode | | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC | |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting | |
| Additional measurement list | Not Present | |
| CHOICE measurement type | Traffic Volume Measurement | |
| - Traffic volume measurement object list | | |
| - Uplink transport channel type | RACHorCPCH | R99 and Rel-4 only |
| | RACH | Rel-5 |
| - UL Target Transport Channel ID | Not Present | |
| - Traffic volume measurement quantity | | |
| - Measurement quantity | RLC Buffer Payload | |
| - Time Interval to take an average or a variance | Not Present | |
| - Traffic volume reporting quantity | | |
| - RLC Buffer Payload for each RB | True | |
| - Average of RLC Buffer Payload for each RB | False | |
| - Variance of RLC Buffer Payload for each RB | False | |
| - Measurement validity | | |
| - UE state | All states | |
| - CHOICE Reporting criteria | Periodical Reporting Criteria | |
| - Amount of reporting | Infinity | |
| - Reporting interval | 8000 | |
| DPCH compressed mode status | Not Present | |

MEASUREMENT REPORT (Step 0b and 5)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions and the order in which the RBs are reported is not checked:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 20 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

ACTIVE SET UPDATE (Step 3)

The message to be used in this test is defined in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Set to same code as assigned for cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | 0 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference TS 34.108 clause 6.10 Parameter set | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

#### 8.3.4.5.5 Test requirement

After step 0a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

After step 3 the UE shall transmit an ACTIVE SET UPDATE FAILURE message on the DCCH. In this message, the value "Message not compatible with receiver state" shall be set in IE "Protocol Error Information".

After step 4, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on RACH at every 8s interval.

### 8.3.4.6 Void

### 8.3.4.7 Active set update in soft handover: Invalid Message Reception

#### 8.3.4.7.1 Definition

#### 8.3.4.7.2 Conformance Requirement

If the ACTIVE SET UPDATE message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> transmit a ACTIVE SET UPDATE FAILURE message on the uplink DCCH using AM RLC;

1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE FAILURE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Rejected transactions" in the variable TRANSACTIONS; and

1> set the IE "failure cause" to the cause value "protocol error";

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;

1> when the ACTIVE SET UPDATE FAILURE message has been delivered to lower layers for transmission:

2> continue with any ongoing processes and procedures as if the invalid ACTIVE SET UPDATE message has not been received;

2> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.4

8.3.4.7.3 Test Purpose

1. To confirm that the UE retains its active set list and transmits an ACTIVE SET UPDATE FAILURE message when it receives an invalid ACTIVE SET UPDATE message.

8.3.4.7.4 Method of test

Initial Condition

System Simulator: 2 cells – both cell 1 and cell 2 are active.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE (Integrity protection algorithm is not applied at the start of test)

Test Procedure

**Table 8.3.4.7**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | -75 | -60 |

Table 8.3.4.7 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE establishes a radio access bearer in CELL_DCH in cell 1. SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.7. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. SS transmits an ACTIVE SET UPDATE message which contains an unexpected critical message extension. The UE shall transmit an ACTIVE SET UPDATE FAILURE message, stating the reason " Message extension not comprehended " in the IE "Protocol error information". UE then send another MEASUREMENT REPORT to SS 4s after step 2. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.7 |
| 2 | → | | MEASUREMENT REPORT | See specific Message contents |
| 3 | ← | | ACTIVE SET UPDATE | The SS transmits this message on downlink DCCH using AM RLC which does not include any IEs except IE "Message Type" |
| 4 | → | | ACTIVE SET UPDATE FAILURE | The message shall state "Message extension not comprehended " in IE "protocol error information". |
| 5 | → | | MEASUREMENT REPORT | See specific Message contents |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

MEASUREMENT REPORT (Step 2 &5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 3)

Use the ACTIVE SET UPDATE message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

ACTIVE SET UPDATE FAILURE (Step 4)

| Information Element | Value/remark |
|---|---|
| Protocol Error Information | |
| - Protocol Error Cause | Message extension not comprehended |

#### 8.3.4.7.5 Test Requirement

After step 1 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 3 the UE shall transmit an ACTIVE SET UPDATE FAILURE message on the DCCH. In this message, the value "Message extension not comprehended" shall be set in IE "Protocol Error Information".

After step 4 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC, 4s after step 2.

### 8.3.4.8 Active set update in soft handover: Radio Link addition in multiple radio link environment

#### 8.3.4.8.1 Definition

#### 8.3.4.8.2 Conformance requirement

Upon reception of an ACTIVE SET UPDATE message the UE shall act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following. The UE shall:

1> first add the RLs indicated in the IE "Radio Link Addition Information";

1> perform the physical layer synchronisation procedure B as specified in TS 25.214;

1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE COMPLETE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC without waiting for the completion of the Physical Layer synchronization B, specified in TS 25.214;

…

Reference

3GPP TS 25.331 clause 8.3.4

#### 8.3.4.8.3 Test purpose

To confirm that the UE communicates with the SS on all radio link in the active set and keeps the connection when some of the radio links are faded out.

#### 8.3.4.8.4 Method of test

Initial Condition

System Simulator: 4 cells - Cell 1, 2, 3 and 7 are active. The chip-timing between the cells shall always be within ±148 chip.

UE: CS-DCCH+DTCH_DCH (state 6-9) or PS-DCCH+DTCH_DCH (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

**Table 8.3.4.8-1**

| Cell | UTRA RF Channel Number |
|---|---|
| Cell 1 | Mid Range Test Frequency |
| Cell 2 | Mid Range Test Frequency |
| Cell 3 | Mid Range Test Frequency |
| Cell 7 | Mid Range Test Frequency |

**Table 8.3.4.8-2**

| | | Time | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| Parameter | Unit | T0 | T1 | T2 | T3 | T4 | T5 | T6 | T7 |
| Cell 1 CPICH Ec | dBm/3.84MHz | -60 | -60 | -60 | -60 | -70 | -70 | -70 | -60 |
| Cell 2 CPICH Ec | dBm/3.84MHz | -70 | -60 | -60 | -60 | -60 | -70 | -70 | -70 |
| Cell 3 CPICH Ec | dBm/3.84MHz | -70 | -70 | -60 | -60 | -60 | -60 | -70 | -70 |
| Cell 7 CPICH Ec | dBm/3.84MHz | -70 | -70 | -70 | -60 | -60 | -60 | -60 | -70 |

Table 8.3.4.8-1 defines the UTRA RF Channel Number for the different cells. Table 8.3.4.8-2 illustrates the downlink power to be applied for the 4 cells at various time instants of the test execution.

Initially, the UE goes to connected mode and establishes a radio access bearer in CELL_DCH state in cell 1.

SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.8-2. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2, according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. After the MEASUREMENT REPORT message is received, the SS configures the new radio link to be added from cell 2 and then the SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC which includes the IE "Radio Link Addition Information" (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio links with Primary CPICH info used for the reference ID).

When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC without waiting for the physical channel synchronisation B.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 1 and cell 2. The UE shall transmit a UE CAPABILITY ENQUIRY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.8-2. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 3, according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. After the MEASUREMENT REPORT message is received, the SS configures the new radio link to be added from cell 3 and then the SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 and cell 2 on DCCH using AM RLC which includes the IE "Radio Link Addition Information" (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio links with Primary CPICH info used for the reference ID).

When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC without waiting for the physical channel synchronisation B.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 1, cell 2 and cell 3. The UE shall transmit a UE CAPABILITY ENQUIRY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

SS configures its downlink transmission power settings according to columns "T3" in table 8.3.4.8-2. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 7, according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. After the MEASUREMENT REPORT message is received, the SS configures the new radio link to be added from cell 7 and then the SS transmits to the UE an ACTIVE SET UPDATE message in cell 1, cell 2 and cell 3 on DCCH using AM RLC which includes the IE "Radio Link Addition Information" (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio links with Primary CPICH info used for the reference ID).

When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC without waiting for the physical channel synchronisation B.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 1, cell 2, cell 3 and cell 7. The UE shall transmit a UE CAPABILITY ENQUIRY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

SS configures its downlink transmission power settings according to columns "T4" in table 8.3.4.8-2. The UE shall continue to communicate through at least cell 2, cell 3 and cell 7. The UE shall transmit a MEASUREMENT REPORT message which indicates the event '1b' for cell 1.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 2, cell 3 and cell 7. The UE shall transmit a UE CAPABILITY ENQUIRY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

SS configures its downlink transmission power settings according to columns "T5" in table 8.3.4.8-2. The UE shall continue to communicate through at least cell 3 and cell 7. The UE shall transmit a MEASUREMENT REPORT message which indicates the event '1b' for cell 2.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 3 and cell 7. The UE shall transmit a UE CAPABILITY ENQUIRY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

SS configures its downlink transmission power settings according to columns "T6" in table 8.3.4.8-2. The UE shall continue to communicate through at least cell 7. The UE shall transmit a MEASUREMENT REPORT message which indicates the event '1b' for cell 3.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 7. The UE shall transmit a UE CAPABILITY ENQUIRY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM.

SS configures its downlink transmission power settings according to columns "T7" in table 8.3.4.8-2. The UE shall continue to communicate through at least cell 1. The UE shall transmit a MEASUREMENT REPORT message which indicates the event '1b' for cell 7.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 1. The UE shall transmit a UE CAPABILITY ENQUIRY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.8-2. |
| 2 | → | | MEASUREMENT REPORT | See specific message contents for this message (event ‘1a’ for cell 2) |
| 3 | ← | | ACTIVE SET UPDATE | SS transmits this message in cell 1 on downlink DCCH using AM RLC. The message includes IE "Radio Link Addition Information". (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio link with Primary CPICH info used for the reference ID in cell 2) |
| 4 | → | | ACTIVE SET UPDATE COMPLETE | The UE shall configure new radio link to cell 2 without interfering with existing connections on the radio link in cell 1. |
| 5 | ← | | UE CAPABILITY ENQUIRY | Use default message. Sent on cell 1 and cell 2. |
| 6 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 7 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 8 | | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.8-2. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 9 | → | | MEASUREMENT REPORT | See specific message contents for this message (event '1a' for cell 3) |
| 10 | ← | | ACTIVE SET UPDATE | SS transmits this message in cell 1 and cell 2 on downlink DCCH using AM RLC. The message includes IE "Radio Link Addition Information". (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio link with Primary CPICH info used for the reference ID in cell 3) |
| 11 | → | | ACTIVE SET UPDATE COMPLETE | The UE shall configure new radio link to cell 3 without interfering with existing connections on the radio links in cell 1 and cell 2. |
| 12 | ← | | UE CAPABILITY ENQUIRY | Use default message. Sent on cell 1, cell 2 and cell 3. |
| 13 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 14 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 15 | | | | SS configures its downlink transmission power settings according to columns "T3" in table 8.3.4.8-2. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 16 | → | | MEASUREMENT REPORT | See specific message contents for this message (event '1a' for cell 7) |
| 17 | ← | | ACTIVE SET UPDATE | SS transmits this message in cell 1, cell 2 and cell 3 on downlink DCCH using AM RLC. The message includes IE "Radio Link Addition Information". (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio link with Primary CPICH info used for the reference ID in cell 7) |
| 18 | → | | ACTIVE SET UPDATE COMPLETE | The UE shall configure new radio link to cell 7 without interfering with existing connections on the radio links in cell 1, cell 2 and cell 3. |
| 19 | ← | | UE CAPABILITY ENQUIRY | Use default message. Sent on cell 1, cell 2, cell 3 and cell 7. |
| 20 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 21 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 22 | | | | SS configures its downlink transmission power settings according to columns "T4" in table 8.3.4.8-2. |
| 23 | → | | MEASUREMENT REPORT | See specific message contents for this message (event '1b' for Cell 1) |
| 24 | ← | | UE CAPABILITY ENQUIRY | Use default message. Sent on cell 2, cell 3 and cell 7. |
| 25 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 26 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 27 | | | | SS configures its downlink transmission power settings according to columns "T5" in table 8.3.4.8-2. |
| 28 | → | | MEASUREMENT REPORT | See specific message contents for this message (event '1b' for Cell 2) |
| 29 | ← | | UE CAPABILITY ENQUIRY | Use default message. Sent on cell 3 and cell 7. |
| 30 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 31 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 32 | | | | SS configures its downlink transmission power settings according to columns "T6" in table 8.3.4.8-2. |
| 33 | → | | MEASUREMENT REPORT | See specific message contents for this message (event '1b' for Cell 3) |
| 34 | ← | | UE CAPABILITY ENQUIRY | Use default message. Sent on cell 7. |
| 35 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 36 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 37 | | | | SS configures its downlink transmission power settings according to columns "T7" in table 8.3.4.8-2. |
| 38 | → | | MEASUREMENT REPORT | See specific message contents for this message (event '1b' for cell 7) |
| 39 | ← | | UE CAPABILITY ENQUIRY | Use default message. Sent on cell 1. |
| 40 | → | | UE CAPABILITY INFORMATION | Use default message. |
| 41 | ← | | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 42 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

The contents of SIB11 broadcasted in cell 1 shall be in accordance with the default SIB11 as specified in section 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Intra-frequency measurement reporting criteria | |
| - Parameters required for each event | 3 kinds |
| - Intra-frequency event identity | 1a |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Monitored set cells |
| - Reporting Range Constant | 10 (5 dB) |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | 0 (0.0) |
| - Hysteresis | 0 (0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | 4 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 640 |
| - Amount of reporting | 4 |
| - Reporting interval | 4000 |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 4 |
| - Intra-frequency event identity | 1b |
| - Triggering condition 1 | Active set cells |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | 10 (5 dB) |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | 0 (0.0) |
| - Hysteresis | 0 (0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 640 |
| - Amount of reporting | Not Present |
| - Reporting interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 4 |

The contents of SIB12 in cell 1, and SIB11 and SIB12 in cell 2, cell 3, and cell 7 shall be in accordance with the default SIBs as specified in TS 34.108.

MEASUREMENT REPORT (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | Cell 1. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 2. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 3. See Note 2 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 7. See Note 2 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | Cell 2. |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

NOTE 1: Cell measured results for cells 1 and 2 may appear in any order.

NOTE 2: Cell measured results for cells 3 and 7 may or may not be present (depends upon the capability of the UE and test uncertainties in power level). If present they may appear in any order.

ACTIVE SET UPDATE (Step 3)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | Cell 2 | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT REPORT (Step 9)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | Cell 1. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 2. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 3. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 7. See Note 2 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | Cell 3. |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |

NOTE 1: Cell measured results for cells 1, 2 and 3 may appear in any order.

NOTE 2: Cell measured results for cell 7 may or may not be present (depends upon the capability of the UE and test uncertainties in power level).

ACTIVE SET UPDATE (Step 10)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | Cell 3 | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT REPORT (Step 16)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | Cell 1. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 2. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 3. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 7. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | Cell 7. |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1 of TS 34.108 |

NOTE 1: Cell measured results for cells 1, 2, 3 and 7 may appear in any order.

ACTIVE SET UPDATE (Step 17)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | Cell 7 | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1 of TS 34.108 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT REPORT (Step 23)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | Cell 2. See Note 1. |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 3. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 7. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 1. See Note 2 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1b |
| - Cell measurement event results | |
| - Primary CPICH info | Cell 1. |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |

NOTE 1: Cell measured results for cells 2, 3 and 7 may appear in any order.

NOTE 2: Cell measured results for cell 1 may or may not be present (depends upon the capability of the UE and test uncertainties in power level).

MEASUREMENT REPORT (Step 28)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | Cell 3. See Note 1. |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 7. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 1. See Note 2 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 2. See Note 2 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1b |
| - Cell measurement event results | |
| - Primary CPICH info | Cell 2. |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

NOTE 1: Cell measured results for cells 3 and 7 may appear in any order.

NOTE 2: Cell measured results for cell 1 and cell 2 may or may not be present (depends upon the capability of the UE and test uncertainties in power level). If present they may appear in any order.

MEASUREMENT REPORT (Step 33)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | Cell 7. |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 1. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 2. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 3. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1b |
| - Cell measurement event results | |
| - Primary CPICH info | Cell 3. |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |

NOTE 1: Cell measured results for cells 1. 2 and 3 may or may not be present (depends upon the capability of the UE and test uncertainties in power level). If present they may appear in any order.

MEASUREMENT REPORT (Step 38)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | |
| - Cell measured results | Cell 1. |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 2. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 3. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 7. See Note 1 |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1b |
| - Cell measurement event results | |
| - Primary CPICH info | Cell 7. |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.7 (FDD)" in clause 6.1 of TS 34.108 |

NOTE 1: Cell measured results for cells 2, 3 and 7 may or may not be present (depends upon the capability of the UE and test uncertainties in power level). If present they may appear in any order.

### 8.3.4.8.5 Test requirement

After step 1 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 3 the UE shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC to acknowledge the completion of the active set additional procedure.

After step 5 the UE shall transmit a UE CAPABILITY INFORMATION message.

After step 8 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 10 the UE shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC to acknowledge the completion of the active set additional procedure.

After step 12 the UE shall transmit a UE CAPABILITY INFORMATION message.

After step 15 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 17 the UE shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC to acknowledge the completion of the active set additional procedure.

After step 19 the UE shall transmit a UE CAPABILITY INFORMATION message.

After step 22 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 24 the UE shall transmit a UE CAPABILITY INFORMATION message.

After step 27 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 29 the UE shall transmit a UE CAPABILITY INFORMATION message.

After step 32 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 34 the UE shall transmit a UE CAPABILITY INFORMATION message.

After step 37 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 39 the UE shall transmit a UE CAPABILITY INFORMATION message.

### 8.3.4.9 Active set update in soft handover: Radio Link removal (stop of HS-PDSCH reception)

#### 8.3.4.9.1 Definition and applicability

All UEs which support FDD and HS-PDSCH.

#### 8.3.4.9.2 Conformance requirement

Upon reception of an ACTIVE SET UPDATE message the UE shall act upon all received information elements as specified in 8.6, unless specified otherwise in the following. The UE shall:

1> first add the RLs indicated in the IE "Radio Link Addition Information";

1> remove the RLs indicated in the IE "Radio Link Removal Information". If the UE active set is full or becomes full, an RL, which is included in the IE "Radio Link Removal Information" for removal, shall be removed before adding RL, which is included in the IE "Radio Link Addition Information" for addition;

1> perform the physical layer synchronisation procedure B as specified in TS 25.214;

1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE COMPLETE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC without waiting for the completion of the Physical Layer synchronization B, specified in TS 25.214;

…

Reference

3GPP TS 25.331 clause 8.3.4

8.3.4.9.3 Test purpose

1. To confirm that the UE continues to communicate with the SS on the remaining radio link after radio link removal on the active set.
2. To confirm that UE removes the HS-PDSCH configuration when the serving HS-DSCH radio link is removed.
3. To confirm that the UE is not using the removed radio link to communicate with the SS.

8.3.4.9.4 Method of test

Initial Condition

System Simulator: 2 cells - both Cell 1 and Cell 2 are active

Specific Message Contents

System Information Block type 11

Use the default system information block with the same type specified in clause 9 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Intra-frequency measurement reporting criteria | |
| - Parameters required for each event | 3 kinds |
| - Intra-frequency event identity | 1a |
| - Time to trigger | 5000 |

UE: PS-DCCH+DTCH_DCH_HSDSCH (state 6-17) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

**Table 8.3.4.9**

| Parameter | Unit | Cell 1 | | | | Cell 2 | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | Mid Range Test Frequency | | | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | -75 | -60 | -75 | -60 | -60 | OFF |

Table 8.3.4.9 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

At the start of the test, the UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established in cell 1.

SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.9. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity", which is set to '1a' in the SYSTEM INFORMATION BLOCK TYPE 11. After the MEASUREMENT REPORT message is received, the SS configures the new radio link to be added from cell 2 and then the SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC which includes the IE "Radio Link Addition Information" (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio links with Primary CPICH info used for the reference ID).

When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.9. UE shall transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 1 according to IE "Intra-frequency event identity", which is set to '1b' in the SYSTEM INFORMATION BLOCK TYPE 11. After the MEASUREMENT REPORT message is received, the SS remove the radio link from cell 1 and then SS transmits an

ACTIVE SET UPDATE message, which includes IE "Radio Link Removal Information" and specifying the P-CPICH information of the cell to be removed.

When the UE receives this message, the UE RRC entity shall request UE L1 entity to terminate transmission and reception of the radio link from cell 1. Then the UE transmits an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the DPCH in cell 2. The UE shall transmit a UE CAPABILITY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

SS configures its downlink transmission power settings according to columns "T3" in table 8.3.4.9 so as to generate a radio link failure condition. The UE shall detect the radio link failure UE shall re-select to cell 1 and transmit a CELL UPDATE message. SS transmits a CELL UPDATE CONFIRM message after it receive CELL UPDATE message from UE. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities..

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.9 |
| 2 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 3 | ← | | ACTIVE SET UPDATE | SS transmits this message in cell 1 on downlink DCCH using AM RLC. The message includes IE "Radio Link Addition Information". (e.g. Downlink DPCH information and other optional parameters relevant for the additional radio links with Primary CPICH info used for the reference ID in cell 2) |
| 4 | → | | ACTIVE SET UPDATE COMPLETE | The UE shall configure a new radio link to cell 2, without interfering with existing connections on the radio link in cell 1. |
| 5 | | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.9 |
| 6 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 7 | ← | | ACTIVE SET UPDATE | The SS transmits this message on downlink DCCH using AM RLC which includes IE "Radio Link Removal Information". |
| 8 | → | | ACTIVE SET UPDATE COMPLETE | The UE shall remove the radio link associated with cell 1 and stop HS-PDSCH reception. |
| 9 | ← | | UE CAPABILITY ENQUIRY | Use default message. |

| | | | |
|---|---|---|---|
| 10 | → | UE CAPABILITY INFORMATION | Use default message. |
| 11 | ← | UE CAPABILITY INFORMATION CONFIRM | Use default message. |
| 12 | | | SS configures its downlink transmission power settings according to columns "T3" in table 8.3.4.9 |
| 13 | → | CELL UPDATE | UE sends this message in cell 1. |
| 14 | ← | CELL UPDATE CONFIRM | See message content. |
| 15 | → | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Contents

MEASUREMENT REPORT (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 3)

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary scrambling code | Primary scrambling code of Cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH may be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Code number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not present | |
| - TFCI combining indicator | FALSE | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |

MEASUREMENT REPORT (Step 6)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results list | |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - CHOICE event result | Intra-frequency measurement event results |
| - Intra-frequency event identity | 1b |
| - Cell measurement event results | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 7)

The message to be used in this test is the same as the message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Radio link removal information | 1 radio link to be removed |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same P-CPICH scrambling code assigned for cell 1 |

CELL UPDATE (Step 13)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in TS 34.108, clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "radio link failure" |

CELL UPDATE CONFIRM (Step 14)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

#### 8.3.4.9.5 Test requirement

After step 1 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 3 the UE shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC to acknowledge the completion of the active set additional procedure.

After step 5 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH using AM RLC.

After step 7 the UE shall remove the radio link from cell 1 and it shall transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC. UE shall stop HS-DSCH reception.

After step 10 the UE shall transmit a UE CAPABILITY INFORMATION message.

After step 12 the UE shall transmit a CELL UPDATE message on the CCCH with IE "Cell update cause" set to "radio link failure".

After step 14, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

### 8.3.4.10 Active set update in soft handover: Radio Link addition and serving HS-DSCH / E-DCH cell change

#### 8.3.4.10.1 Definition and applicability

All UEs which support FDD and HS-PDSCH and E-DPDCH.

#### 8.3.4.10.2 Conformance requirement

Upon reception of an ACTIVE SET UPDATE message the UE shall act upon all received information elements as specified in TS 25.331 subclause 8.6, unless specified otherwise in the following. The UE shall:

1> first add the RLs indicated in the IE "Radio Link Addition Information";

1> perform the physical layer synchronisation procedure B as specified in TS 25.214;

…

1> if the IE "E-HICH information" is included:

2> store this E-HICH configuration for the concerning radio link.

1> if the IE "E-HICH information" is included:

2> store this E-RGCH configuration for the concerning radio link, if included.

1> determine the value for the E_DCH_TRANSMISSION variable and take the corresponding actions as described in subclause 8.5.28 in TS 25.331;

1> if the radio link currently considered to be the serving HS-DSCH radio link is indicated in the IE "Radio Link Removal Information":

2> no longer consider any radio link as the serving HS-DSCH radio link;

2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25 in TS 25.331.

1> if "Serving HS-DSCH cell information" IE is present, act on received information elements as specified in subclause 8.6 in TS 25.331:

2> if the IEs "$\Delta_{ACK}$", "$\Delta_{NACK}$", and "HARQ_preamble_mode" are present, act on the received information elements;

2> if the new H-RNTI and "Primary CPICH info" are included:

3> consider the cell indicated in Primary CPICH as serving HS-DSCH cell and no longer consider any other radio link as serving HS-DSCH cell.

2> if the IE "MAC-hs reset indicator" is included:

3> reset the MAC-hs entity.

2> determine the value for the HS_DSCH_RECEPTION variable and take the corresponding actions as described in subclause 8.5.25 in TS 25.331.

1> if the IE "E-DCH reconfiguration information" is included:

2> if the IE "E-DCH RL Info other cells" is present:

3> if the IE "E-HICH Information" is present:

4> store the E-HICH and E-RGCH information (if present), contained therein, for the indicated radio link.

3> if the IE "E-HICH release indicator" is present:

4> delete the stored E-HICH, E-AGCH and E-RGCH (if any) configurations.

3> if the IE "E-RGCH release indicator" is set present:

4> delete the stored E-RGCH configuration for this RL.

2> if the IE "E-DCH RL Info new serving cell" is present:

3> consider the cell indicated in "Primary CPICH info" as serving E-DCH radio link and no longer consider any other radio link as serving E-DCH radio link;

3> store the E-HICH and E-RGCH information (if present), contained therein, for the new serving E-DCH radio link;

3> if the IE "E-RGCH release indicator" is present:

4> delete the stored E-RGCH configuration for this RL.

3> store the newly received E-AGCH configuration.

2> if the IEs "E-DPCCH/DPCCH power offset" and/or "Reference E-TFCI PO" and/or "Power offset for scheduling info" are present, act on the received information elements.

2> if the serving E-DCH radio link was another radio link than this radio link prior to reception of the message:

3> if the IE "New Primary E-RNTI" is not included:

4> clear the Primary E-RNTI stored in the variable E_RNTI.

3> if the IE "New Secondary E-RNTI" is not included:

4> clear the Secondary E-RNTI stored in the variable E_RNTI.

1> if the radio link currently considered to be the serving E-DCH radio link is indicated in the IE "Radio Link Removal Information":

2> no longer consider any radio link as the serving E-DCH radio link.

…

1> set the IE "RRC transaction identifier" in the ACTIVE SET UPDATE COMPLETE message to the value of "RRC transaction identifier" in the entry for the ACTIVE SET UPDATE message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC without waiting for the completion of the Physical Layer synchronization B, specified in TS 25.214;

Reference

3GPP TS 25.331 clause 8.3.4

8.3.4.10.3 Test purpose

To confirm that the UE performs a radio link addition with serving HS-DSCH / E-DCH serving cell change according to the received ACTIVE SET UPDATE message.

8.3.4.10.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A13, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH
- UE supports E-DPDCH

Test Procedure

**Table 8.3.4.10**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -60 |

Table 8.3.4.10 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The downlink transmission power is set according to values in column “T0” in table 8.3.4.10. The UE has a radio bearer mapped to the E-DCH/HS-DSCH and the signalling radio bearers mapped on E-DCH/DCH in cell 1.

The SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.10. The UE transmits a MEASUREMENT REPORT message, which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity" set to 1a.

The SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC which adds a second radio link in cell 2 and also changes the E-DCH and HS-DSCH serving cell to cell 2. When the UE receives this message, the UE shall configure layer 1 to begin reception on DPCH as well as E-DCH transmission and HS-DSCH reception using the new radio link in cell 2. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

To check that the UE is sending to both cells of the active set, the SS triggers the UE to send a UE CAPABILITY INFORMATION which it receives from the other cells than it has received the ACTIVE SET UPDATE COMPLETE.

SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | SS | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.10 |
| 4 | → | | MEASUREMENT REPORT | See specific message contents for this message |
| 5 | ← | | ACTIVE SET UPDATE | The SS instructs the UE to add cell 2 in the active set and perform a serving E-DCH and HS-DSCH cell change to cell 2 |
| 6 | SS | | | At the activation time, the SS changes the serving E-DCH and HS-DSCH radio link to cell 2 and performs MAC-hs reset. |
| 7 | → | | ACTIVE SET UPDATE COMPLETE | The UE adds the radio link in cell 2 and performs a serving E-DCH and HS-DSCH cell change to cell 2. SS receives this message from cell 2. |
| 7a | | | | SS is reconfigured to listen on cell 1 |
| 7b | ← | | UE CAPABILITY ENQUIRY | |
| 7c | → | | UE CAPABILITY INFORMATION | SS receives this message from cell 1 |
| 7d | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

MEASUREMENT REPORT (Step 4)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 2 cells are included |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 5)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Activation time | (256+CFN-(CFN MOD 8 + 8))MOD 256 | |
| New H-RNTI | '0101 0101 0101 0101' | |
| New Primary E-RNTI | '0101 0101 0101 0101' | |
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink | |

| | | |
|---|---|---|
| | DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - E-HICH Information | | |
| - Channelisation code | 4 | |
| - Signature sequence | 1 | |
| - CHOICE E-RGCH Information | | |
| - E-RGCH Information | | |
| - Signature Sequence | 0 | |
| - RG combination index | 0 | |
| Serving HS-DSCH cell information | | |
| - $\Delta_{ACK}$ | Not Present | |
| - $\Delta_{NACK}$ | Not Present | |
| - HARQ_preamble_mode | 0 | |
| - Primary CPICH info | | |
| - Primary Scrambling Code | Set to the primary scrambling code of cell 2 | |
| - Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | FDD | |
| - DL Scrambling Code | Not Present | |
| - HS-SCCH Channelisation Code Information | | |
| - HS-SCCH Channelisation Code | 7 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | FDD | |
| - Measurement Power Offset | 6 dB | |
| - CQI Feedback cycle, k | 4 ms | |
| - CQI repetition factor | 1 | |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) | |
| - CHOICE mode | FDD (no data) | |
| - HARQ Info | Not Present | |
| - MAC-hs reset indicator | TRUE | |
| E-DCH reconfiguration information | | |
| - E-DCH RL Info new serving cell | | |
| - Primary CPICH info | | |
| - Primary Scrambling Code | Set to the primary scrambling code of cell 2 | |
| - E-AGCH Info | | |
| - E-AGCH Channelisation Code | 10 | |
| - Serving Grant | Not Present | |
| - E-DPCCH/DPCCH power offset | Not Present | |
| - Reference E-TFCIs | Not present | |
| - Power Offset for Scheduling Info | Not Present | |
| - 3-Index-Step Threshold | Not Present | |
| - 2-Index-Step Threshold | Not Present | |
| - E-HICH Information | Not Present | |
| - CHOICE E-RGCH Information | Not Present | |
| - E-DCH RL Info other cells | Not Present | |

#### 8.3.4.10.5 Test requirement

After step 3 the UE shall transmit a MEASUREMENT REPORT message.

After step 6 the UE shall transmit an ACTIVE SET UPDATE COMPLETE message.

### 8.3.4.11 Active set update in soft handover: Radio Link addition and serving HS-DSCH / E-DCH cell change, with discontinuous uplink transmission

#### 8.3.4.11.1 Definition and applicability

All UEs which support FDD and UL DTX

#### 8.3.4.11.2 Conformance requirement

Upon reception of an ACTIVE SET UPDATE message the UE shall act upon all received information elements as specified in 8.6, unless specified otherwise in the following.

The UE may:

1> maintain a list of the set of cells to which the UE has Radio Links if the IE "Cell ID" is present.

The UE shall:

1> first add the RLs indicated in the IE "Radio Link Addition Information";

…

1> transmit an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH using AM RLC without waiting for the completion of the Physical Layer synchronisation B, as specified in TS 25.214;

1> the procedure ends on the UE side.

…

1> if any of the IEs "DTX-DRX timing information" or "DTX-DRX information" are stored in the UE:

2> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the UE receives RRC CONNECTION SETUP, ACTIVE SET UPDATE, CELL UPDATE CONFIRM, or any reconfiguration message:

1> the UE shall determine the value for the DTX_DRX_STATUS variable.

The variable DTX_DRX_STATUS shall be set to TRUE only when all the following conditions are met:

1> the UE is in CELL_DCH state;

1> both variables HS_DSCH RECEPTION and E_DCH_TRANSMISSION are set to TRUE;

1> no DCH transport channel is configured;

1> the variable DTX_DRX_PARAMS is set;

1> the UE has received the IE "DTX-DRX timing information".

If any of the above conditions is not met and the variable DTX_DRX_STATUS is set to TRUE, the UE shall:

1> set the variable DTX_DRX_STATUS to FALSE;

1> clear the variable DTX_DRX_PARAMS;

1> stop DTX-DRX mode related activities.

If variable DTX_DRX_STATUS is set to true and the serving HS-DSCH cell was changed as a result of the received message the UE shall instruct the physical layer to consider HS-SCCH orders were never received.

Whenever the variable DTX_DRX_STATUS is set to TRUE after receiving this message and the value of IE "DTX-DRX timing information" included in this message is not "Continue", the UE shall:

1> if the variable DTX_DRX_STATUS was set to TRUE before receiving this message:

2> re-configure the physical layer to perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration;

2> let the MAC layer continue with the current restriction on E-DCH transmission and monitoring of absolute and relative grant channels from the frame boundary where the uplink transmission starts with the new configuration and for the duration of the IE "Enabling Delay".

1> else:

2> perform discontinuous uplink DPCCH transmission and enable discontinuous downlink reception operations by configuring the physical layer according to the variable DTX_DRX_PARAMS at the CFN corresponding to the frame boundary that is offset by the value of the IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration.

1> configure the MAC layer to start restricting E-DCH transmissions and monitor absolute and relative grant channels at the CFN corresponding to the frame boundary that is offset by the value of IE "Enabling Delay" from the frame boundary where uplink transmission starts with new configuration taking into account the IEs "UE DTX DRX Offset", "MAC DTX Cycle", "MAC Inactivity Threshold" and "Inactivity Threshold for UE Grant Monitoring".

…

If the IE "DTX-DRX timing information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> if the CHOICE "timing" is set to "New timing":

2> use the newly received DTX-DRX timing configuration.

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34.

…

If the IE "DTX–DRX information" is included and the UE will be in CELL_DCH state after completion of this procedure, the UE shall:

1> store the contents of the IE in the variable DTX_DRX_PARAMS;

1> determine the value for the DTX_DRX_STATUS variable and take the corresponding actions as described in subclause 8.5.34;

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple of the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DTX cycle 2" is not an integer multiple or a divisor of the value of the IE "CQI Feedback cycle, k"; or

1> if the value of the IE "UE DPCCH burst 1" is greater than the value of the IE "UE DTX cycle 1"; or

1> if the value of the IE "UE DPCCH burst 2" is greater than the value of the IE "UE DTX cycle 2"; or

1> if the IE "UE DTX long preamble length" is set to 4 or 15 slots and the value of the IE "Inactivity Threshold for UE DTX cycle 2" is less than 4 TTIs (for 10ms E-DCH TTI) or 8 TTIs (for 2ms E-DCH TTI); or

1> if the IE "UE DRX cycle" is not an integer multiple or a divisor of the value of the IE "UE DTX cycle 1"; or

1> if the IE "DRX Information" is included in this message while the IE "DTX information" is not included in this message; or

1> if the value of the IE "UE DTX cycle 1" is not an integer multiple or a divisor of the value of the IE "MAC DTX cycle":

2> the UE behaviour is unspecified.

Reference

3GPP TS 25.331 clause 8.2.2.3, 8.3.4, 8.5.34, 8.6.6.38, 8.6.6.39

8.3.4.11.3 Test purpose

To confirm that the UE performs a radio link addition involving a HS-DSCH / E-DCH serving cell change, with discontinuous transmissions according to the received ACTIVE SET UPDATE message. To confirm that the the UE performs a further radio link addition in the absence of discontinuous transmission according to the received ACTIVE SET UPDATE message.

8.3.4.11.4 Method of test

Initial Condition

System Simulator: 3 cells - Cell 1, 2 and cell 3 are active

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A20, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports DPCCH Discontinuous Transmission

Test Procedure

**Table 8.3.4.11**

| Parameter | Unit | Cell 1 | | | Cell 2 | | | Cell 3 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | Mid Range Test Frequency | | | Mid Range Test Frequency | | |
| CPICH Ec | dBm/3.84MHz | -60 | -70 | -70 | -70 | -60 | -60 | -70 | -70 | -60 |

Table 8.3.4.11 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution.

The downlink transmission power is set according to values in column “T0” in table 8.3.4.11. The UE has a radio bearer mapped to the E-DCH/HS-DSCH with UL DTX configured and the signalling radio bearers mapped on E-DCH/DCH in cell 1.

The SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.11. The UE transmits a MEASUREMENT REPORT message, which includes the primary scrambling code for cell 2 according to IE "Intra-frequency event identity" set to 1a.

The SS transmits to the UE an ACTIVE SET UPDATE message in cell 1 on DCCH using AM RLC which adds a second radio link in cell 2 and also changes the E-DCH and HS-DSCH serving cell to cell 2. When the UE receives this message, the UE shall configure layer 1 to begin E-DCH transmission and HS-DSCH reception, with UL DPCCH discontinuous transmission, using the new radio link in cell 2. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms.

The SS shall transmit a UE CAPABILITY ENQUIRY message to confirm that the UE can respond this message through the E-DCH in cell 1 and cell 2. The UE shall transmit a UE CAPABILITY ENQUIRY INFORMATION message. Then SS transmits a UE CAPABILITY INFORMATION CONFIRM message.

The SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.11. UE shall be triggered to transmit a MEASUREMENT REPORT message which includes the primary scrambling code for cell 3. After the MEASUREMENT REPORT message is received, the SS configures the new radio link to be added for non CPC cell 3 and then the SS transmits to the UE an ACTIVE SET UPDATE message on DCCH using AM RLC which includes the IE "Radio Link Addition Information" (e.g. Downlink F-DPCH information and other optional parameters relevant for the additional radio links with Primary CPICH info used for the reference ID). As discontinuous transmission is not configured by ACTIVE SET UPDATE, the UE sets up continuous transmission on all cells.

To check that the UE is sending to all cells of the active set, the SS triggers the UE to send a UE CAPABILITY INFORMATION which it receives from the cells which received the ACTIVE SET UPDATE COMPLETE.

SS calls for generic procedure C.3 to check that the UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS configures its downlink transmission power settings according to columns "T1" in table 8.3.4.10 |
| 2 | → | | MEASUREMENT REPORT | See specific message contents for this message (event '1a' for cell 2) |
| 3 | ← | | ACTIVE SET UPDATE | The SS instructs the UE to add cell 2, with CPC enabled, in the active set, and perform a serving E-DCH and HS-DSCH cell change to cell 2 |
| 4 | | SS | | At the activation time, the SS changes the serving E-DCH and HS-DSCH radio link to cell 2 and performs MAC-hs reset. |
| 5 | → | | ACTIVE SET UPDATE COMPLETE | The UE adds the radio link in cell 2 and performs a serving E-DCH and HS-DSCH cell change to cell 2 with discontinuous transmission activated. SS receives this message from cell 2. |
| 6 | | SS | | The SS waits to allow sufficient time for DTX cycle 2 to be active, and CQI DTX Timer to expire, and then verifies that the time taken to report 10 consecutive CQI indications is 400ms. |
| 7 | | | | SS is reconfigured to listen on cell 1 |
| 8 | ← | | UE CAPABILITY ENQUIRY | |
| 9 | → | | UE CAPABILITY INFORMATION | SS receives this message from cell 1 |
| 10 | ← | | UE CAPABILITY INFORMATION CONFIRM | |
| 11 | | SS | | SS configures its downlink transmission power settings according to columns "T2" in table 8.3.4.11 |
| 12 | → | | MEASUREMENT REPORT | See specific message contents for this message (event '1a' for cell 3 |
| 13 | ← | | ACTIVE SET UPDATE | SS transmits this message on downlink DCCH using AM RLC. The message includes IE "Radio Link Addition Information". (e.g. Downlink F-DPCH information and other optional parameters relevant for the additional radio link with Primary CPICH info used for the reference ID in cell 3). Note that discontinuous transmission is not configured for this cell and subsequently all cells in the active set |
| 14 | → | | ACTIVE SET UPDATE COMPLETE | The UE shall add new radio link to cell 3 without interfering with existing connections on the radio links in cell 1 and cell 2. CPC should be deactivated |
| 15 | | | | SS is reconfigured to listen on cell 3 |
| 16 | ← | | UE CAPABILITY ENQUIRY | Use default message sent on cell 1, cell 2 and cell 3 |
| 17 | → | | UE CAPABILITY INFORMATION | SS receives this message from cell 3 |

| | | | |
|---|---|---|---|
| 18 | ← | UE CAPABILITY INFORMATION CONFIRM | Use default message |
| 19 | ←→ | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

The contents of SIB11 broadcasted in cell 1 shall be in accordance with the default SIB11 as specified in section 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - Intra-frequency measurement reporting criteria<br>- Reporting deactivation threshold | 3 |

MEASUREMENT REPORT (Step 2)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | Cell 1. See Note 1 |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 2. See Note 1 |
| - Cell Identity | Checked that this IE is present |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 3. See Note 1 |
| - Cell Identity | Checked that this IE is present |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | Cell 2 |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

NOTE 1: Cell measured results for cells 1, 2, 3 may appear in any order.

ACTIVE SET UPDATE (Step 3)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Activation time | (256+CFN-(CFN MOD 8 + 8))MOD 256 | |
| New H-RNTI | '0101 0101 0101 0101' | |
| DTX-DRX timing information | | |
| CHOICE *timing* | Continue | |
| DTX-DRX Information | Not Present | |
| DRX Information | | |
| - UE DRX cycle | 10 | |
| - Inactivity Threshold for UE DRX cycle | 10 | |
| - Inactivity Threshold for UE Grant Monitoring | 8 | |
| - UE DRX Grant Monitoring | TRUE | |
| Uplink DPCCH slot format information | 1 | |
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 | |
| - Downlink F-DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - F-DPCH frame offset | Calculated value from Cell synchronisation information | |
| - F-DPCH slot format | 3 if UE supports enhanced F-DPCH, otherwise Not Present | |
| - Secondary CPICH info | Not Present | |
| - Secondary scrambling code | 1 | |
| - Code number | | |
| - TPC Combination Index | 0 | |
| - TFCI Combining Indicator | FALSE | |
| - E-HICH Information | | |
| - Channelisation code | 4 | |
| - Signature sequence | 1 | |
| - CHOICE E-RGCH Information | | |
| - E-RGCH Information | | |
| - Signature Sequence | 0 | |
| - RG combination index | 0 | |
| Serving HS-DSCH cell information | | |
| - $\Delta_{ACK}$ | Not Present | |
| - $\Delta_{NACK}$ | Not Present | |
| - HARQ_preamble_mode | 0 | |
| - Primary CPICH info | | |
| - Primary Scrambling Code | Set to the primary scrambling code of cell 2 | |
| - Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | FDD | |
| - DL Scrambling Code | Not Present | |
| - HS-SCCH Channelisation Code Information | | |
| - HS-SCCH Channelisation Code | 7 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | FDD | |
| - Measurement Power Offset | 6 dB | |
| - CQI Feedback cycle, k | 4 ms | |
| - CQI repetition factor | 1 | |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) | |
| - CHOICE mode | FDD (no data) | |
| - HARQ Info | Not Present | |
| - MAC-hs reset indicator | TRUE | |
| E-DCH reconfiguration information | | |
| - E-DCH RL Info new serving cell | | |
| - Primary CPICH info | | |
| - Primary Scrambling Code | Set to the primary scrambling code of cell 2 | |
| - E-AGCH Info | | |

| | | |
|---|---|---|
| - E-AGCH Channelisation Code | 10 | |
| - Serving Grant | Not Present | |
| - E-DPCCH/DPCCH power offset | Not Present | |
| - Reference E-TFCIs | Not present | |
| - Power Offset for Scheduling Info | Not Present | |
| - 3-Index-Step Threshold | Not Present | |
| - 2-Index-Step Threshold | Not Present | |
| - E-HICH Information | Not Present | |
| - CHOICE E-RGCH Information | Not Present | |
| - E-DCH RL Info other cells | Not Present | |

ACTIVE SET UPDATE (Step 13)

The message to be used in this test is defined in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Activation time | (256+CFN-(CFN MOD 8 + 8))MOD 256 | |
| New H-RNTI | '0101 0101 0101 0101' | |
| New Primary E-RNTI | '0101 0101 0101 0101' | |
| DTX-DRX timing information | Not Present | |
| DTX-DRX Information | Not Present | |
| DRX Information | Not Present | |
| HS-SCCH less information | Not Present | |
| Radio link addition information | Cell 3 | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 | |
| - Downlink F-DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - F-DPCH frame offset | Calculated value from Cell synchronisation information | |
| - F-DPCH slot format | 3 if UE supports enhanced F-DPCH, otherwise Not Present | |
| - Secondary CPICH info | Not Present | |
| - Secondary scrambling code | 1 | |
| - Code number | | |
| - TPC Combination Index | 0 | |
| - TFCI Combining Indicator | FALSE | |
| - E-HICH Information | | |
| - Channelisation code | 4 | |
| - Signature sequence | 1 | |
| - CHOICE E-RGCH Information | | |
| - E-RGCH Information | | |
| - Signature Sequence | 0 | |
| - RG combination index | 0 | |
| Serving HS-DSCH cell information | | |
| - $\Delta_{ACK}$ | Not Present | |
| - $\Delta_{NACK}$ | Not Present | |
| - HARQ_preamble_mode | 0 | |
| - Primary CPICH info | | |
| - Primary Scrambling Code | Set to the primary scrambling code of cell 3 | |
| - Downlink HS-PDSCH Information | | |
| - HS-SCCH Info | | |
| - CHOICE mode | FDD | |
| - DL Scrambling Code | Not Present | |
| - HS-SCCH Channelisation Code Information | | |
| - HS-SCCH Channelisation Code | 7 | |
| - Measurement Feedback Info | | |
| - CHOICE mode | FDD | |
| - Measurement Power Offset | 6 dB | |
| - CQI Feedback cycle, k | 4 ms | |
| - CQI repetition factor | 1 | |
| - $\Delta_{CQI}$ | 5 (corresponds to 0dB in relative power offset) | |
| - CHOICE mode | FDD (no data) | |
| - HARQ Info | Not Present | |
| - MAC-hs reset indicator | TRUE | |
| E-DCH reconfiguration information | | |
| - E-DCH RL Info new serving cell | | |
| - Primary CPICH info | | |
| - Primary Scrambling Code | Set to the primary scrambling code of cell 3 | |
| - E-AGCH Info | | |
| - E-AGCH Channelisation Code | 10 | |
| - Serving Grant | Not Present | |
| - E-DPCCH/DPCCH power offset | Not Present | |
| - Reference E-TFCIs | Not present | |

| | | |
|---|---|---|
| - Power Offset for Scheduling Info | Not Present | |
| - 3-Index-Step Threshold | Not Present | |
| - 2-Index-Step Threshold | Not Present | |
| - E-HICH Information | Not Present | |
| - CHOICE E-RGCH Information | Not Present | |
| - E-DCH RL Info other cells | Not Present | |

MEASUREMENT REPORT (Step 12)

Use the same message as specified in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | Cell 1. See Note 1 |
| - Intra-frequency measured results | |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 2. See Note 1 |
| - Cell Identity | Checked that this IE is present |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | Cell 3. See Note 1 |
| - Cell Identity | Checked that this IE is present |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | Cell 3 |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

NOTE 1: Cell measured results for cells 1, 2, 3 may appear in any order.

### 8.3.4.11.5 Test requirement

After step 1 the UE shall transmit a MEASUREMENT REPORT message.

At step 6 the time taken to report 10 consecutive CQI indications shall be 400ms.

After step 13 the UE shall transmit an ACTIVE SET UPDATE COMPLETE message.

## 8.3.5 Hard Handover

[Editor's note: This test is included in the "Physical channel reconfiguration", "Radio bearer establishment", "Radio bearer reconfiguration", "Radio bearer release" and "Transport channel reconfiguration".]

## 8.3.6 Inter-system hard handover from GSM to UTRAN

The content of this clause has been moved to 3GPP TS 51.010-1, clause 60.

## 8.3.7 Inter-system hard handover from UTRAN to GSM

Clauses 8.3.7 contains test procedures to be used for executing Inter-system Handover from UTRAN to GSM tests. Table 8.3.7-1 contains a summary of the different combinations of parameters being tested, together with a reference to the appropriate generic test procedure. If a test uses a parameter which the UE under test does not support, the test shall be skipped. Test cases in this clause are applicable only to the UE supporting both UTRAN and GSM. The test TEST USIM shall support service 27 to carry out these test cases.

**Table 8.3.7-1**

| From | To | State of call | Ref. clause | Exec counter | Remark |
|---|---|---|---|---|---|
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM AMR | U10 | 8.3.7.1 | 1 | call active state |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM EFR | U10 | 8.3.7.1 | 2 | call active state |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.1 | 3 | call active state |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM HR | U10 | 8.3.7.1 | 4 | call active state |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM AMR | U10 | 8.3.7.1a | 1 | call active state; A5/3 applied in GSM |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM EFR | U10 | 8.3.7.1a | 2 | call active state; A5/3 applied in GSM |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.1a | 3 | call active state; A5/3 applied in GSM |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM HR | U10 | 8.3.7.1a | 4 | call active state; A5/3 applied in GSM |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM AMR | U10 | 8.3.7.1b | 1 | call active state; UEA2/UIA2 applied in UTRAN, A5/3 in GSM |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM EFR | U10 | 8.3.7.1b | 2 | call active state; UEA2/UIA2 applied in UTRAN, A5/3 in GSM |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.1b | 3 | call active state; UEA2/UIA2 applied in UTRAN, A5/3 in GSM |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM HR | U10 | 8.3.7.1b | 4 | call active state; UEA2/UIA2 applied in UTRAN, A5/3 in GSM |

| From | To | State of call | Ref. clause | Exec counter | Remark |
|---|---|---|---|---|---|
| UTRAN (Streaming/unknown/ uplink:14.4 DL:14.4 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBS) | GSM 14.4 kbps CS data | U10 | 8.3.7.2 | 1 | Same data rate |
| UTRAN (Streaming/unknown/ uplink:14.4 DL:14.4 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBS) | GSM 14.4 kbps HSCSD | U10 | 8.3.7.2a | 1 | Same data rate |
| UTRAN (Streaming/unknown/ uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBS) | GSM 28.8 kbps CS data | U10 | 8.3.7.2a | 2 | Same data rate |
| UTRAN (Streaming/unknown/ uplink:57.6 DL:57.6 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBS) | GSM 57.6 kbps CS data | U10 | 8.3.7.2a | 3 | Same data rate |
| UTRAN (Streaming/unknown/ uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBS) | GSM 14.4 kbps CS data | U10 | 8.3.7.3 | 1 | Data rate down grading |
| UTRAN (Streaming/unknown/ uplink:57.6 DL:57.6 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBS) | GSM 14.4 kbps CS data | U10 | 8.3.7.3 | 2 | Data rate down grading |
| UTRAN (Streaming/unknown/ uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBS) | GSM 14.4 kbps HSCSD | U10 | 8.3.7.3a | 1 | Data rate down grading |
| UTRAN (Streaming/unknown/ uplink:57.6 DL:57.6 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBS) | GSM 14.4 kbps HSCSD | U10 | 8.3.7.3a | 2 | Data rate down grading |
| UTRAN (Streaming/unknown/ uplink:57.6 DL:57.6 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBS) | GSM 28.8 kbps HSCSD or E-TCH/F28.8 | U10 | 8.3.7.3a | 3 | Data rate down grading |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U1 | 8.3.7.4 | 1 | During call establishment |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.5 | 1 | failure case |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.6 | 1 | failure case |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.7 | 1 | failure case |

| From | To | State of call | Ref. clause | Exec counter | Remark |
|---|---|---|---|---|---|
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.8 | 1 | failure case |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.9 | 1 | failure case |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.10 | 1 | failure case |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.11 | 1 | failure case |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U10 | 8.3.7.12 | 1 | failure case |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + uplink:3.4 DL3.4 kbps SRBS) | GSM FR | U1 | 8.3.7.13 | 1 | call under establishment |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + interactive/ background UL: 32kbps, DL :( max bit rate depending on UE category) PS RAB + uplink:3.4 DL3.4 kbps SRBs) | GSM AMR | U10 | 8.3.7.14 | 1 | Call active state |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + interactive/ background UL: 32kbps, DL :( max bit rate depending on UE category) PS RAB + uplink:3.4 DL3.4 kbps SRBs) | GSM AMR | U10 | 8.3.7.15 | 1 | Failure case |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + interactive/ background UL: 64kbps, DL :64kbps PS RAB + uplink:3.4 DL3.4 kbps SRBs) | GSM FR | U10 | 8.3.7.16 | 1 | Call active state |
| UTRAN AMR (conversational/speech/ uplink:12.2 DL:12.2 kbps/CS RAB + interactive/ background UL: 64kbps, DL :64kbps PS RAB + uplink:3.4 DL3.4 kbps SRBs) | DTM | U10 | 8.3.7.17 | 1 | Call active state |

## 8.3.7.1 Inter system handover from UTRAN/To GSM/Speech/Success

### 8.3.7.1.1 Definition

### 8.3.7.1.2 Conformance requirement

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

The UE shall:

1> establish the connection to the target radio access technology, by using the contents of the IE "Inter-RAT message". This IE contains a message specified in another standard, as indicated by the IE "System type", and carries information about the candidate/ target cell identifier(s) and radio parameters relevant for the target radio access technology. The correspondence between the value of the IE "System type", the standard to apply and the message contained within IE "Inter RAT message" is shown in the following:

| Value of the IE "System type" | Standard to apply | Inter RAT Message |
|---|---|---|
| GSM | GSM TS 04.18, version 8.5.0 or later | HANDOVER COMMAND |
| cdma2000 | TIA/EIA/IS-2000 or later, TIA/EIA/IS-833 or later, TIA/EIQ/IS-834 or later | |

1> if the IE "System type" has the value "GSM":

2> if the IE "Frequency band" has the value "GSM /DCS 1800 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1800 band".

2> if the IE "Frequency band" has the value " GSM /PCS 1900 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1900 band".

1> apply the "Inter RAT Message" according to the "standard to apply" in the table above.

1> if the IE "RAB information List" is included in the HANDOVER FROM UTRAN COMMAND message:

2> if the IE "RAB information List" includes one IE "RAB Info" with the IE "CN domain Identity" set to "CS domain":

3> connect upper layer entities corresponding to the indicated CS domain RAB to the radio resources indicated in the inter-RAT message.

NOTE: In this version of the specification the maximum number of CS domain RABs which may be included in the IE "RAB information List" is limited to 1.

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.

Upon successfully completing the handover, the UE shall:

1> if there are any NAS messages with the IE "CN domain identity" set to "CS domain" for which the successful delivery of the INITIAL DIRECT TRANSFER message or UPLINK DIRECT TRANSFER message on signalling radio bearer RB3 or signalling radio bearer RB4 that have not yet been confirmed by RLC:

2> retransmit those NAS messages to the network on the newly established radio connection to the target radio access technology.

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

NOTE: The release of the UMTS radio resources is initiated from the target RAT.

### Reference(s)

TS 25.331 clause 8.3.7.3, 8.3.7.4.

#### 8.3.7.1.3 Test purpose

To test that the UE supporting both GSM and UTRAN hands over from a UTRAN serving cell to the indicated channel of GSM target cell when the UE is in the speech call active state and receives an HANDOVER FROM UTRAN COMMAND.

#### 8.3.7.1.4 Method of test

##### Initial conditions

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 clause 40 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

##### Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports GSM AMR,
- UE supports GSM EFR,
- UE supports GSM FR,
- UE supports GSM HR,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810.

##### Foreseen final state of the UE

The UE is in CC state U10 on cell 9.

##### Test Procedure

The SS brings the UE into call active state (CC state U10) with AMR. The SS configures the appropriate traffic channel on the GSM cell, then sends HANDOVER FROM UTRAN COMMAND indicating the traffic channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel on the target GSM cell. The SS checks whether the handover is performed by checking that the UE transmits the HANDOVER COMPLETE message to the SS through GSM cell.

Depending on the PIXIT parameters the above procedure is executed maximum four times, each time with a different target channel in the GSM cell.

For UEs where the PIXIT indicates support for the GSM/ DCS 1800 and/ or GSM/ PCS 1900 band, the whole test should be repeated to cover these frequencies in order to verify the correct handling of the IE "Frequency band".

Inter RAT handover is normally preceded by the configuration and activation of compressed mode (depending on UE capabilities/ PIXIT) and the configuration of inter- RAT measurements. The inter RAT handover is normally initiated by the SS upon receiving an event triggered measurement report. The verification of this functionality is covered by other subclauses.

##### Expected sequence

This sequence is performed for a maximum execution counter M = 1, 2, 3, 4, depending on the PIXIT parameters.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into UTRAN U10 state in cell 1 |
| 2 | SS | | | The SS configures a traffic channel on cell 9 (GSM cell):<br>for GSM AMR (M = 1); or<br>for GSM EFR (M = 2); or<br>for GSM FR (M = 3); or<br>for GSM HR (M = 4). |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND-GSM | Send on cell 1 (UTRAN cell) and the message indicates:<br>the target channel for GSM AMR (M = 1); or<br>the target channel for GSM EFR (M = 2); or<br>the target channel for GSM FR (M = 3); or<br>the target channel for GSM HR (M = 4). |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 5 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 6 | → | | HANDOVER ACCESS | |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | ← | | PHYSICAL INFORMATION | |
| 10 | → | | SABM | |
| 11 | ← | | UA | |
| 12 | → | | HANDOVER COMPLETE | The SS receives the message on the traffic channel of GSM cell. |
| | | | | The SS performs a 'postamble' and restores both UE and SS to their initial state so that the test can be repeated from step 1 for executions 2,3 and 4 (if required). |

Specific message contents

HANDOVER FROM UTRAN COMMAND-GSM

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | now |
| RAB Info | |
| - RAB identity | 0000 0001B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | CS domain |
| - NAS Synchronization Indicator | Not present |
| - Re-establishment timer | Use T314 |
| Inter-system message | |
| - CHOICE System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | Single GSM message |
| - Message | GSM HANDOVER COMMAND formatted and coded according to GSM specifications as Variable Length BIT STRING without Length Indicator. The first/ l*eftmost/ most significant* bit of the bit string contains bit 8 of the first octet of the GSM message. The contents of the HANDOVER COMMAND see next table. |

For execution 1:

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = speech full rate or half rate version 3 |

For execution 2:

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = speech full rate or half rate version 2 |

For execution 3:

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = speech full rate or half rate version 1 |

For execution 4:

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 4 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = speech full rate or half rate version 1 |

#### 8.3.7.1.5 Test requirement

At step 5 the SS receives a handover access burst on the traffic channel of the GSM cell indicating that the UE has switched to the GSM cell.

At step 12 the SS receives a HANDOVER COMPLETE message indicating a successful handover to the GSM cell.

### 8.3.7.1a Inter system handover from UTRAN/To GSM/Speech/Success with A5/3 ciphering

#### 8.3.7.1a.1 Definition

This test case is specified for the UE in the interRAT speech handover from UTRAN to GERAN. The A5/3 ciphering algorithm is applied in the GERAN cell. UIA1/UEA1 are applied in the UTRAN cell.

Note: The support of A5/3 is mandatory for the UE in Rel-6 or later, and is optional for the UE in earlier Releases.

#### 8.3.7.1a.2 Conformance requirement

Identical to 8.3.7.1.2

#### 8.3.7.1a.3 Test purpose

Identical to 8.3.7.1.3 but in GSM cell A5/3 is applied

#### 8.3.7.1a.4 Method of test

Identical to 8.3.7.1.4 with exception of:

Related ICS/IXIT statement(s)

- UE supports A5/3,

Specific message contents

Similar to the specific message contents in 8.3.7.1.4 and the UE capability to support A5/3 is checked additionally.

The HANDOVER FROM UTRAN COMMAND indicates in the Cipher Mode Setting information element that A5/3 ciphering algorithm is applied in the GSM cell.

## 8.3.7.1b Inter system handover from UTRAN/To GSM/Speech/Success with UEA2/UIA2 and A5/3 ciphering

### 8.3.7.1b.1 Definition

This test case is specified for the Rel-7 (or later) UE in the interRAT speech handover from UTRAN to GERAN. UIA2/UEA2 are applied in the UTRAN cell. The A5/3 ciphering algorithm is applied in the GERAN cell.

### 8.3.7.1b.2 Conformance requirement

Identical to 8.3.7.1.2

### 8.3.7.1b.3 Test purpose

Identical to 8.3.7.1.3 but in UTRAN cell UIA2/UEA2 are applied and in GSM cell A5/3 is applied

### 8.3.7.1b.4 Method of test

Identical to 8.3.7.1.4

#### Specific message contents

Similar to the specific message contents in 8.3.7.1.4 but instead, the Rel-7 IEs are used, also the UE capability to support UEA2/UIA2 and A5/3 is checked.

The HANDOVER FROM UTRAN COMMAND indicates in the Cipher Mode Setting information element that A5/3 ciphering algorithm is applied in the GSM cell.

## 8.3.7.2 Inter system handover from UTRAN/To GSM/Data/Same data rate/Success

### 8.3.7.2.1 Definition

### 8.3.7.2.2 Conformance requirement

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

The UE shall:

1> establish the connection to the target radio access technology, by using the contents of the IE "Inter-RAT message". This IE contains a message specified in another standard, as indicated by the IE "System type", and carries information about the candidate/ target cell identifier(s) and radio parameters relevant for the target radio access technology. The correspondence between the value of the IE "System type", the standard to apply and the message contained within IE "Inter RAT message" is shown in the following:

| Value of the IE "System type" | Standard to apply | Inter RAT Message |
|---|---|---|
| GSM | GSM TS 04.18, version 8.5.0 or later | HANDOVER COMMAND |
| cdma2000 | TIA/EIA/IS-2000 or later, TIA/EIA/IS-833 or later, TIA/EIQ/IS-834 or later | |

1> if the IE "System type" has the value "GSM":

2> if the IE "Frequency band" has the value "GSM /DCS 1800 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1800 band".

2> if the IE "Frequency band" has the value " GSM /PCS 1900 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1900 band".

1> apply the "Inter RAT Message" according to the "standard to apply" in the table above.

1> if the IE "RAB information List" is included in the HANDOVER FROM UTRAN COMMAND message:

2> if the IE "RAB information List" includes one IE "RAB Info" with the IE "CN domain Identity" set to "CS domain":

3> connect upper layer entities corresponding to the indicated CS domain RAB to the radio resources indicated in the inter-RAT message.

NOTE: In this version of the specification the maximum number of CS domain RABs which may be included in the IE "RAB information List" is limited to 1.

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.

Upon successfully completing the handover, the UE shall:

1> if there are any NAS messages with the IE "CN domain identity" set to "CS domain" for which the successful delivery of the INITIAL DIRECT TRANSFER message or UPLINK DIRECT TRANSFER message on signalling radio bearer RB3 or signalling radio bearer RB4 that have not yet been confirmed by RLC:

2> retransmit those NAS messages to the network on the newly established radio connection to the target radio access technology.

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

NOTE: The release of the UMTS radio resources is initiated from the target RAT.

Reference(s)

TS 25.331 Clause 8.3.7.3, 8.3.7.4.

#### 8.3.7.2.3 Test purpose

To test that the UE hands over to the indicated channel of same data rate in the GSM target cell when it is in the data call active state in the UTRAN serving cell and receives an HANDOVER FROM UTRAN COMMAND.

#### 8.3.7.2.4 Method of test

Initial conditions

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 clause 40 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports UTRAN Streaming/unknown/uplink:14.4 DL:14.4 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM 14.4 kbps data ( full rate traffic channel for 14.4 kbit/s user data (TCH/F14.4)),
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810.

Foreseen final state of the UE

The UE is in CC state U10 on cell 9.

Test Procedure

The SS brings the UE into data call active state (CC state U10) with Streaming/unknown/uplink:14.4 DL:14.4 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs . The SS configures a 14.4 kbps data channel on the GSM cell, then sends a HANDOVER FROM UTRAN COMMAND indicating the traffic channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel of the GSM cell. The SS checks whether the handover is performed by checking that the UE transmits the HANDOVER COMPLETE message to the SS in GSM cell.

UEs for which the PIXIT indicates support for the GSM/ DCS 1800 and/ or GSM/ PCS 1900 band, the test should cover these frequencies in order to verify the correct handling of the IE "Frequency band".

Inter RAT handover is normally preceded by the configuration and activation of compressed mode (depending on UE capabilities/ PIXIT) and the configuration of inter- RAT measurements. The inter RAT handover is normally initiated by the SS upon receiving an event triggered measurement report. The verification of this functionality is covered by other subclauses.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into UTRAN U10 state in cell 1, the configuration is: Streaming/unknown/uplink:14.4 DL:14.4 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs ; |
| 2 | SS | | | The SS configures a traffic channel on cell 9 (GSM cell): for GSM 14.4 kbps data . |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND GSM | Send on cell 1 (UTRAN cell) and the message indicates: the target channel for GSM 14.4 kbps data |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 5 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 6 | → | | HANDOVER ACCESS | |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | ← | | PHYSICAL INFORMATION | |
| 10 | → | | SABM | |
| 11 | ← | | UA | |
| 12 | → | | HANDOVER COMPLETE | The SS receives the message on the traffic channel of GSM cell. |
| | | | | |

Specific message contents

HANDOVER FROM UTRAN COMMAND-GSM

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | now |
| RAB Info | |
| - RAB identity | 0000 0001B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | CS domain |
| - NAS Synchronization Indicator | Not present |
| - Re-establishment timer | Use T314 |
| Inter-system message | |
| - CHOICE System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | GSM message List |
| - Message | GSM HANDOVER COMMAND formatted and coded according to GSM specifications as BIT STRING(1..512). The first/ l*eftmost/ most significant* bit of the bit string contains bit 8 of the first octet of the GSM message. The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = data, 14.5 kbit/s radio interface rate (14.4 kbit/s user data (TCH/F14.4)) |

NOTE: This test case requires that the size of the HANDOVER COMMAND does not exceed 64 octets. Whenever the contents for the 04.18 HANDOVER COMMAND is changed, a check is needed to verify that size constraint is still met.

### 8.3.7.2.5 Test requirements

At step 5 the SS receives a handover access burst on the traffic channel of the GSM cell indicating that the UE has switched to the GSM cell.

At step 12 the SS receives a HANDOVER COMPLETE message indicating a successful handover to the GSM cell.

## 8.3.7.2a Inter system handover from UTRAN/To GSM/Data/Same data rate/Extended Rates/Success

### 8.3.7.2a.1 Definition

### 8.3.7.2a.2 Conformance requirement

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

The UE shall:

1> establish the connection to the target radio access technology, by using the contents of the IE "Inter-RAT message". This IE contains a message specified in another standard, as indicated by the IE "System type", and carries information about the candidate/ target cell identifier(s) and radio parameters relevant for the target radio access technology. The correspondence between the value of the IE "System type", the standard to apply and the message contained within IE "Inter RAT message" is shown in the following:

| Value of the IE "System type" | Standard to apply | Inter RAT Message |
|---|---|---|
| GSM | GSM TS 04.18, version 8.5.0 or later | HANDOVER COMMAND |
| cdma2000 | TIA/EIA/IS-2000 or later, TIA/EIA/IS-833 or later, TIA/EIQ/IS-834 or later | |

1> if the IE "System type" has the value "GSM":

2> if the IE "Frequency band" has the value "GSM /DCS 1800 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1800 band".

2> if the IE "Frequency band" has the value " GSM /PCS 1900 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1900 band".

1> apply the "Inter RAT Message" according to the "standard to apply" in the table above.

1> if the IE "RAB information List" is included in the HANDOVER FROM UTRAN COMMAND message:

2> if the IE "RAB information List" includes one IE "RAB Info" with the IE "CN domain Identity" set to "CS domain":

3> connect upper layer entities corresponding to the indicated CS domain RAB to the radio resources indicated in the inter-RAT message.

NOTE: In this version of the specification the maximum number of CS domain RABs which may be included in the IE "RAB information List" is limited to 1.

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.

Upon successfully completing the handover, the UE shall:

1> if there are any NAS messages with the IE "CN domain identity" set to "CS domain" for which the successful delivery of the INITIAL DIRECT TRANSFER message or UPLINK DIRECT TRANSFER message on signalling radio bearer RB3 or signalling radio bearer RB4 that have not yet been confirmed by RLC:

2> retransmit those NAS messages to the network on the newly established radio connection to the target radio access technology.

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

NOTE: The release of the UMTS radio resources is initiated from the target RAT.

Reference(s)

TS 25.331 Clause 8.3.7.3, 8.3.7.4.

#### 8.3.7.2a.3 Test purpose

To test that the UE hands over to the indicated channel of same data rate in the GSM target cell when it is in the data call active state in the UTRAN serving cell and receives an HANDOVER FROM UTRAN COMMAND.

#### 8.3.7.2a.4 Method of test

Initial conditions

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 clause 26.6.5.1 or clause 26.13.1.3 (for HSCSD) shall be referenced for the default parameters of cell 9.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports UTRAN Streaming/unknown/uplink:14.4 DL:14.4 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports UTRAN Streaming/unknown/uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports UTRAN Streaming/unknown/uplink:57.6 DL:57.6 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM 14.4 kbps data (HSCSD),
- UE supports GSM 28.8 kbps data (HSCSD or enhanced circuit switched full rate traffic channel for 28.8 kbit/s user date (E-TCH/F28.8)),
- UE supports GSM 57.6 kbps data,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS.

Foreseen final state of the UE

The UE is in CC state U10 on cell 9.

Test Procedure

The SS brings the UE into data call active state (CC state U10) with a suitable configuration (e.g. Streaming/unknown/uplink:14.4 DL:14.4 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs for M = 1). The SS configures an appropriate traffic channel (e.g. 14.4 kbps HSCSD data channel for M = 1)on the GSM cell, then sends a HANDOVER FROM UTRAN COMMAND indicating the traffic channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel of the GSM cell. The SS checks whether the handover is performed by checking that the UE transmits the HANDOVER COMPLETE message to the SS in GSM cell.

Depending on the PIXIT parameters the above procedure is executed maximum three times, each time with a different target channel in the GSM cell.

UEs for which the PIXIT indicates support for the GSM/ DCS 1800 and/ or GSM/ PCS 1900 band, the test should cover these frequencies in order to verify the correct handling of the IE "Frequency band".

Inter RAT handover is normally preceded by the configuration and activation of compressed mode (depending on UE capabilities/ PIXIT) and the configuration of inter- RAT measurements. The inter RAT handover is normally initiated by the SS upon receiving an event triggered measurement report. The verification of this functionality is covered by other subclauses.

Expected sequence

This sequence is performed for a maximum execution counter M = 1, 2, 3, depending on the PIXIT parameters.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into UTRAN U10 state in cell 1, the configuration is:<br>Streaming/unknown/uplink:14.4 DL:14.4 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs (for M = 1);<br>Streaming/unknown/uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs (for M = 2);<br>Streaming/unknown/uplink:57.6 DL:57.6 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs (for M = 3). |
| 2 | SS | | | The SS configures a traffic channel on cell 9 (GSM cell):<br>for GSM HSCSD 14.4 kbps data (M = 1); or<br>for GSM 28.8 kbps data (M = 2); or<br>for GSM 57.6 kbps data (M = 3). |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND GSM | Send on cell 1 (UTRAN cell) and the message indicates:<br>the target channel<br>for GSM HSCSD 14.4 kbps data (M = 1); or<br>for GSM 28.8 kbps data (M = 2); or<br>for GSM 57.6 kbps data (M = 3). |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 5 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 6 | → | | HANDOVER ACCESS | |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | ← | | PHYSICAL INFORMATION | |
| 10 | → | | SABM | |
| 11 | ← | | UA | |
| 12 | → | | HANDOVER COMPLETE | The SS receives the message on the traffic channel of GSM cell. |
| | | | | The SS performs a ‘postamble’ and restores both UE and SS to their initial state so that the test can be repeated from step 1 for executions 2 and 3 (if required). |

Specific message contents

HANDOVER FROM UTRAN COMMAND-GSM

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | now |
| RAB Info | |
| - RAB identity | 0000 0001B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | CS domain |
| - NAS Synchronization Indicator | Not present |
| - Re-establishment timer | Use T314 |
| Inter-system message | |
| - CHOICE System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | GSM message List |
| - Message | GSM HANDOVER COMMAND formatted and coded according to GSM specifications as BIT STRING(1..512). The first/ l*eftmost/ most significant* bit of the bit string contains bit 8 of the first octet of the GSM message. The contents of the HANDOVER COMMAND see next table. |

For execution 1:

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND in clause 26.13.1.3 of GSM 51.010, except that the Description of a multi-slot configuration supporting 14.4 kbps user data. |

NOTE: This test case requires that the size of the HANDOVER COMMAND does not exceed 64 octets. Whenever the contents for the 04.18 HANDOVER COMMAND is changed, a check is needed to verify that size constraint is still met.

For execution 2:

If the UE supports enhanced circuit switched full rate traffic channel for 28.8 kbps user data:

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = data, 29.0 kbit/s radio interface rate (28.8 kbit/s user data (E-TCH/F28.8)) |

NOTE: This test case requires that the size of the HANDOVER COMMAND does not exceed 64 octets. Whenever the contents for the 04.18 HANDOVER COMMAND is changed, a check is needed to verify that size constraint is still met.

If the UE supports HSCSD:

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND in clause 26.13.1.3 of GSM 51.010, except that the Description of a multi-slot configuration supporting 28.8 kbps user data. |

NOTE: This test case requires that the size of the HANDOVER COMMAND does not exceed 64 octets. Whenever the contents for the 04.18 HANDOVER COMMAND is changed, a check is needed to verify that size constraint is still met.

For execution 3:

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND in clause 26.13.1.3 of GSM 51.010, except that the Description of a multi-slot configuration supporting 57.6 kbps user data. |

NOTE: This test case requires that the size of the HANDOVER COMMAND does not exceed 64 octets. Whenever the contents for the 04.18 HANDOVER COMMAND is changed, a check is needed to verify that size constraint is still met.

#### 8.3.7.2a.5 Test requirements

At step 5 the SS receives a handover access burst on the traffic channel of the GSM cell indicating that the UE has switched to the GSM cell.

At step 12 the SS receives a HANDOVER COMPLETE message indicating a successful handover to the GSM cell.

### 8.3.7.3 Inter system handover from UTRAN/To GSM/Data/Data rate down grading/Success

#### 8.3.7.3.1 Definition

#### 8.3.7.3.2 Conformance requirement

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

The UE shall:

1> establish the connection to the target radio access technology, by using the contents of the IE "Inter-RAT message". This IE contains a message specified in another standard, as indicated by the IE "System type", and carries information about the candidate/ target cell identifier(s) and radio parameters relevant for the target radio access technology. The correspondence between the value of the IE "System type", the standard to apply and the message contained within IE "Inter RAT message" is shown in the following:

| Value of the IE "System type" | Standard to apply | Inter RAT Message |
|---|---|---|
| GSM | GSM TS 04.18, version 8.5.0 or later | HANDOVER COMMAND |
| cdma2000 | TIA/EIA/IS-2000 or later, TIA/EIA/IS-833 or later, TIA/EIQ/IS-834 or later | |

1> if the IE "System type" has the value "GSM":

2> if the IE "Frequency band" has the value "GSM /DCS 1800 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1800 band".

2> if the IE "Frequency band" has the value " GSM /PCS 1900 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1900 band".

1> apply the "Inter RAT Message" according to the "standard to apply" in the table above.

1> if the IE "RAB information List" is included in the HANDOVER FROM UTRAN COMMAND message:

2> if the IE "RAB information List" includes one IE "RAB Info" with the IE "CN domain Identity" set to "CS domain":

3> connect upper layer entities corresponding to the indicated CS domain RAB to the radio resources indicated in the inter-RAT message.

NOTE: In this version of the specification the maximum number of CS domain RABs which may be included in the IE "RAB information List" is limited to 1.

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.

Upon successfully completing the handover, the UE shall:

1> if there are any NAS messages with the IE "CN domain identity" set to "CS domain" for which the successful delivery of the INITIAL DIRECT TRANSFER message or UPLINK DIRECT TRANSFER message on signalling radio bearer RB3 or signalling radio bearer RB4 that have not yet been confirmed by RLC:

2> retransmit those NAS messages to the network on the newly established radio connection to the target radio access technology.

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

NOTE: The release of the UMTS radio resources is initiated from the target RAT.

Reference(s)

TS 25.331 Clause 8.3.7.3, 8.3.7.4.

#### 8.3.7.3.3 Test purpose

To test that the UE hands over to the indicated channel of lower data rate in the GSM target cell when it is in the data call active state in the UTRAN serving cell and receives an HANDOVER FROM UTRAN COMMAND.

#### 8.3.7.3.4 Method of test

Initial conditions

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 clause 40 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports UTRAN Streaming/unknown/uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports UTRAN Streaming/unknown/uplink:57.6 DL:57.6 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM 14.4 kbps data ( full rate traffic channel for 14.4 kbit/s user data (TCH/F14.4)),
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810.
- UE support CS and PS service.

Foreseen final state of the UE

The UE is in CC state U10 on cell 9.

Test Procedure

The SS brings the UE into data call active state (CC state U10) with a suitable configuration (e.g. Streaming/unknown/uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs for M = 1). The SS configures a 14.4 kbps data channel on the GSM cell, then sends a HANDOVER FROM UTRAN COMMAND indicating the traffic channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel of the GSM cell. The SS checks whether the handover is performed by checking that the UE transmits the HANDOVER COMPLETE message to the SS in GSM cell.

Upon completion of the handover, depending on UE capabilities, the UE performs routing area update and (re-) establishes the connection towards the PS domain.

Depending on the PIXIT parameters the above procedure is executed maximum two times, each time with different target channel in the GSM cell.

Expected sequence

This sequence is performed for a maximum execution counter M = 1, 2 depending on the PIXIT parameters.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into UTRAN U10 state in cell 1, the configuration is:<br>Streaming/unknown/uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs (for M = 1);<br>Streaming/unknown/uplink:57.6 DL:57.6 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs (for M = 2). |
| 2 | SS | | | The SS configures a traffic channel on cell 9 (GSM cell): for GSM 14.4 kbps data (M = 1 and 2). |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND-GSM | Send on cell 1 (UTRAN cell) and the message indicates: the target channel<br>for GSM 14.4 kbps data (M = 1 and 2). |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 5 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 6 | → | | HANDOVER ACCESS | |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | ← | | PHYSICAL INFORMATION | |
| 10 | → | | SABM | |
| 11 | ← | | UA | |
| 12 | → | | HANDOVER COMPLETE | The SS receives the message on the traffic channel of GSM cell. |
| 13 | → | | ROUTING AREA UPDATE | Conditional on Class A UE. |
| | | | | The SS performs a 'postamble' and restores both UE and SS to their initial state so that the test can be repeated from step 1 for execution 2 (if required). |

Specific message contents

For execution 1:

Same as the message contents of clause 8.3.7.2 Procedure 1 for M = 1.

For execution 2:

Same as the message contents of clause 8.3.7.2 Procedure 1 for M = 1.

### 8.3.7.3.5 Test requirement

At step 5 the SS receives a handover access burst on the traffic channel of the GSM cell indicating that the UE has switched to the GSM cell.

At step 12 the SS receives a HANDOVER COMPLETE message indicating a successful handover to the GSM cell.

## 8.3.7.3a Inter system handover from UTRAN/To GSM/Data/Data rate down grading/Extended Rates/Success

### 8.3.7.3a.1 Definition

### 8.3.7.3a.2 Conformance requirement

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

The UE shall:

1> establish the connection to the target radio access technology, by using the contents of the IE "Inter-RAT message". This IE contains a message specified in another standard, as indicated by the IE "System type", and carries information about the candidate/ target cell identifier(s) and radio parameters relevant for the target radio access technology. The correspondence between the value of the IE "System type", the standard to apply and the message contained within IE "Inter RAT message" is shown in the following:

| Value of the IE "System type" | Standard to apply | Inter RAT Message |
|---|---|---|
| GSM | GSM TS 04.18, version 8.5.0 or later | HANDOVER COMMAND |
| cdma2000 | TIA/EIA/IS-2000 or later, TIA/EIA/IS-833 or later, TIA/EIQ/IS-834 or later | |

1> if the IE "System type" has the value "GSM":

2> if the IE "Frequency band" has the value "GSM /DCS 1800 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1800 band".

2> if the IE "Frequency band" has the value " GSM /PCS 1900 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1900 band".

1> apply the "Inter RAT Message" according to the "standard to apply" in the table above.

1> if the IE "RAB information List" is included in the HANDOVER FROM UTRAN COMMAND message:

2> if the IE "RAB information List" includes one IE "RAB Info" with the IE "CN domain Identity" set to "CS domain":

3> connect upper layer entities corresponding to the indicated CS domain RAB to the radio resources indicated in the inter-RAT message.

NOTE: In this version of the specification the maximum number of CS domain RABs which may be included in the IE "RAB information List" is limited to 1.

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.

Upon successfully completing the handover, the UE shall:

1> if there are any NAS messages with the IE "CN domain identity" set to "CS domain" for which the successful delivery of the INITIAL DIRECT TRANSFER message or UPLINK DIRECT TRANSFER message on signalling radio bearer RB3 or signalling radio bearer RB4 that have not yet been confirmed by RLC:

2> retransmit those NAS messages to the network on the newly established radio connection to the target radio access technology.

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

NOTE: The release of the UMTS radio resources is initiated from the target RAT.

Reference(s)

TS 25.331 Clause 8.3.7.3, 8.3.7.4.

#### 8.3.7.3a.3 Test purpose

To test that the UE hands over to the indicated channel of lower data rate in the GSM target cell when it is in the data call active state in the UTRAN serving cell and receives an HANDOVER FROM UTRAN COMMAND.

#### 8.3.7.3a.4 Method of test

Initial conditions

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 clause 26.6.5.1 or clause 26.13.1.3 (for HSCSD) shall be referenced for the default parameters of cell 9.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports UTRAN Streaming/unknown/uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports UTRAN Streaming/unknown/uplink:57.6 DL:57.6 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM 14.4 kbps data (HSCSD),
- UE supports GSM 28.8 kbps data (HSCSD or enhanced circuit switched full rate traffic channel for 28.8 kbit/s user date (E-TCH/F28.8)),
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480 GSM-PCS.
- UE support CS and PS service.

Foreseen final state of the UE

The UE is in CC state U10 on cell 9.

Test Procedure

The SS brings the UE into data call active state (CC state U10) with a suitable configuration (e.g. Streaming/unknown/uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs for M = 1). The SS configures a traffic channel (e.g. 14.4 kbps HSCSD data channel for M = 1)on the GSM cell, then sends a HANDOVER FROM UTRAN COMMAND indicating the traffic channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel of the GSM cell. The SS checks whether the handover is performed by checking that the UE transmits the HANDOVER COMPLETE message to the SS in GSM cell.

Upon completion of the handover, depending on UE capabilities, the UE performs routing area update and (re-) establishes the connection towards the PS domain.

Depending on the PIXIT parameters the above procedure is executed maximum three times, each time with different target channel in the GSM cell.

Expected sequence

This sequence is performed for a maximum execution counter M = 1, 2, 3, depending on the PIXIT parameters.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into UTRAN U10 state in cell 1, the configuration is:<br>Streaming/unknown/uplink:28.8 DL:28.8 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs (for M = 1);<br>Streaming/unknown/uplink:57.6 DL:57.6 kbps/CS RAB + uplink:3.4 DL:3.4 kbps SRBs (for M = 2 and 3). |
| 2 | SS | | | The SS configures a traffic channel on cell 9 (GSM cell):<br>for GSM 14.4 kbps HSCSD data (M = 1 and 2); or<br>for GSM 28.8 kbps data (M = 3). |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND-GSM | Send on cell 1 (UTRAN cell) and the message indicates:<br>the target channel<br>for GSM HSCSD 14.4 kbps data (M = 1 and 2); or<br>for GSM 28.8 kbps data (M = 3). |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 5 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 6 | → | | HANDOVER ACCESS | |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | ← | | PHYSICAL INFORMATION | |
| 10 | → | | SABM | |
| 11 | ← | | UA | |
| 12 | → | | HANDOVER COMPLETE | The SS receives the message on the traffic channel of GSM cell. |
| 13 | → | | ROUTING AREA UPDATE | Conditional on Class A UE. |
| | | | | The SS performs a 'postamble' and restores both UE and SS to their initial state so that the test can be repeated from step 1 for executions 2 and 3 (if required). |

Specific message contents

For execution 1:

Same as the message contents of clause 8.3.7.2.2 Procedure 2 for M = 1.

For execution 2:

Same as the message contents of clause 8.3.7.2.2 Procedure 2 for M = 1.

For execution 3:

Same as the message contents of clause 8.3.7.2.2 Procedure 2 for M = 2.

### 8.3.7.3a.5 Test requirement

At step 5 the SS receives a handover access burst on the traffic channel of the GSM cell indicating that the UE has switched to the GSM cell.

At step 12 the SS receives a HANDOVER COMPLETE message indicating a successful handover to the GSM cell.

## 8.3.7.4 Inter system handover from UTRAN/To GSM/Speech/Establishment/Success

### 8.3.7.4.1 Definition

### 8.3.7.4.2 Conformance requirement

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

The UE shall:

1> establish the connection to the target radio access technology, by using the contents of the IE "Inter-RAT message". This IE contains a message specified in another standard, as indicated by the IE "System type", and carries information about the candidate/ target cell identifier(s) and radio parameters relevant for the target radio access technology. The correspondence between the value of the IE "System type", the standard to apply and the message contained within IE "Inter RAT message" is shown in the following:

| Value of the IE "System type" | Standard to apply | Inter RAT Message |
|---|---|---|
| GSM | GSM TS 04.18, version 8.5.0 or later | HANDOVER COMMAND |
| cdma2000 | TIA/EIA/IS-2000 or later, TIA/EIA/IS-833 or later, TIA/EIQ/IS-834 or later | |

1> if the IE "System type" has the value "GSM":

2> if the IE "Frequency band" has the value "GSM /DCS 1800 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1800 band".

2> if the IE "Frequency band" has the value " GSM /PCS 1900 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1900 band".

1> apply the "Inter RAT Message" according to the "standard to apply" in the table above.

1> if the IE "RAB information List" is included in the HANDOVER FROM UTRAN COMMAND message:

2> if the IE "RAB information List" includes one IE "RAB Info" with the IE "CN domain Identity" set to "CS domain":

3> connect upper layer entities corresponding to the indicated CS domain RAB to the radio resources indicated in the inter-RAT message.

NOTE: In this version of the specification the maximum number of CS domain RABs which may be included in the IE "RAB information List" is limited to 1.

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.

Upon successfully completing the handover, the UE shall:

1> if there are any NAS messages with the IE "CN domain identity" set to "CS domain" for which the successful delivery of the INITIAL DIRECT TRANSFER message or UPLINK DIRECT TRANSFER message on signalling radio bearer RB3 or signalling radio bearer RB4 that have not yet been confirmed by RLC:

2> retransmit those NAS messages to the network on the newly established radio connection to the target radio access technology.

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

NOTE: The release of the UMTS radio resources is initiated from the target RAT.

Reference(s)

TS 25.331 Clause 8.3.7.3, 8.3.7.4.

#### 8.3.7.4.3 Test purpose

To test that the UE hands over to the indicated channel in the GSM target cell when it is in the call establishment phase in the UTRAN serving cell and receives an HANDOVER FROM UTRAN COMMAND.

#### 8.3.7.4.4 Method of test

##### Initial conditions

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 clause 40 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9 except the BCCH ARFCN for GSM 900 should be 18 and for GSM 1900 should be 646.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports UTRAN AMR,
- UE supports GSM FR,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810.

##### Foreseen final state of the UE

The UE is in CC state U1 on cell 9.

##### Test Procedure

The UE is triggered to initialise an MO speech call. During the call establishment phase, after the SS receives SETUP message the SS configures a dedicated channel on the GSM cell, then sends the UE an HANDOVER FROM UTRAN COMMAND indicating the dedicated channel in the target GSM cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel of the GSM cell. The SS checks whether the handover is performed by checking that the UE transmits the HANDOVER COMPLETE message to the SS in GSM cell.

##### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | To trigger the UE to initialise an MO call |
| 2 | → | | SETUP | U1 |
| 3 | SS | | | The SS configures a dedicated channel SDCCH on the GSM cell. |
| 4 | ← | | HANDOVER FROM UTRAN COMMAND-GSM | Send on cell 1 (UTRAN cell) and the message indicates: the dedicated channel SDCCH. |
| 5 | UE | | | The UE accepts the handover command and switches to the GSM dedicated channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 6 | → | | HANDOVER ACCESS | The SS receives this burst on the dedicated channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | → | | HANDOVER ACCESS | |
| 10 | ← | | PHYSICAL INFORMATION | |
| 11 | → | | SABM | |
| 12 | ← | | UA | |
| 13 | → | | HANDOVER COMPLETE | The SS receives the message on the dedicated channel of GSM cell. |

Specific message contents

HANDOVER FROM UTRAN COMMAND-GSM

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | now |
| RAB Info | Not present |
| Inter-system message | |
| - CHOICE System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | Single GSM message |
| - Message | GSM HANDOVER COMMAND formatted and coded according to GSM specifications as Variable Length BIT STRING without Length Indicator. The first/ l*eftmost/ most significant* bit of the bit string contains bit 8 of the first octet of the GSM message. The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 4 in clause 26.6.5.2 of GSM 51.010 except that ‘Mode of first channel’ IE should be set to ‘signalling only’ and the BCCH ARFCN for GSM 900 should be 18 and for GSM 1900 should be 646 |

#### 8.3.7.4.5 Test requirement

At step 13 the SS shall receive HANDOVER COMPLETE message on the dedicated channel of the GSM cell.

### 8.3.7.5 Inter system handover from UTRAN/To GSM/Speech/Failure

#### 8.3.7.5.1 Definition

#### 8.3.7.5.2 Conformance requirement

If the UE does not succeed in establishing the connection to the other target radio access technology, it shall

1> revert back to the UTRA configuration;

1> establish the UTRA physical channel(s) used at the time for reception of HANDOVER FROM UTRAN COMMAND;

…

transmit the HANDOVER FROM UTRAN FAILURE message setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "Inter-RAT handover failure" to "physical channel failure".

1> When the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layer for transmission:

2> the procedure ends.

Reference(s)

TS 25.331 Clause 8.3.7.5.

#### 8.3.7.5.3 Test purpose

To test that the UE reactivates the old configuration and uses this to transmit a HANDOVER FROM UTRAN FAILURE message to the network including IE "Inter-RAT Handover failure cause" which is set to "physical channel failure", when it receives an HANDOVER FROM UTRAN COMMAND and the connection to GSM for handover can not be established.

To verify that after the handover failure the UE resumes previously configured compressed mode patterns and measurements.

#### 8.3.7.5.4 Method of test

Initial conditions

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 clause 40 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports GSM FR,
- UE supports UTRAN AMR,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810
- UE supports compressed mode (FDD only).

Foreseen final state of the UE

The UE is in CC state U10 on cell 1.

Test Procedure

The SS brings the UE into call active state (CC state U10) with AMR. If the UE requires compressed mode (refer ICS/IXIT), the SS sends a PHYSICAL CHANNEL RECONFIGURATION message to the UE to configure the compressed mode pattern sequence parameters. When the PHYSICAL CHANNEL RECONFIGURATION COMPLETE is received from the UE, the SS sends a MEASUREMENT CONTROL message indicating two GSM cells of which only one is actually configured. This message is used to provide measurement control parameters (GSM RSSI) to the UE and to start compressed mode for the measurement if required according to the UE capabilities. The UE replies according to request by sending RRC: MEASUREMENT REPORT messages periodically to SS (reporting period is 4000 ms).

The SS sends a HANDOVER FROM UTRAN COMMAND indicating a dedicated channel (not configured) of the target GSM cell to the UE through DCCH of the serving UTRAN cell. The UE receives the command and configures itself accordingly but can not complete the handover. The SS checks that the handover is failed by checking that the UE transmits the HANDOVER FROM UTRAN FAILURE message to the SS using the old UTRAN configuration.

After the handover failure, the UE re-activates compressed mode (if configured) and resumes periodic measurement reporting including sending MEASUREMENT REPORT messages periodically to SS.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into U10 state in UTRAN cell 1. If the UE does not require compressed mode (refer ICS/IXIT), then goto step 1c. |
| 1a | ← | | PHYSICAL CHANNEL RECONFIGURATION | Compressed mode pattern sequence parameters are loaded to UE. |
| 1b | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 1c | ← | | MEASUREMENT CONTROL | SS provides GSM RSSI measurement control parameters to UE. Compressed mode for GSM RSSI measurement is started if required as per UE capabilities. |
| 1d | → | | MEASUREMENT REPORT | UE reports measurement results of GSM RSSI measurement to SS. |
| | | | | |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND-GSM | Send on cell 1 (UTRAN cell) and the message indicates: the target channel for GSM FR which does not exist in the GSM cell. |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 5 | → | | HANDOVER FROM UTRAN FAILURE | The SS receives the message via the old UTRAN configuration. |
| 5a | → | | MEASUREMENT REPORT | The SS shall verify that the UE resumes periodic measurement reporting for GSM RSSI measurements |

Specific message contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1a)

Use the same message sub-type as in TS 34.108 titled "Speech in CS", with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM Carrier RSSI Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | Undefined | |
| - TGPL1 | 12 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 2 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM Initial BSIC identification | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 8 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | 128 | |
| - T Reconfirm abort | Not Present | |

MEASUREMENT CONTROL (Step 1c)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| - New inter-RAT cells | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 (0 dB) |
| - Cell selection and re-selection info | Not present |
| - BSIC | Value set to correspond with HANDOVER COMMAND IEs seen in TS 51.010 clause 26.6.5.1 M=2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value the same as HANDOVER COMMAND in TS 51.010 clause 26.6.5.1 M=2 (dependant on band used) |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 (0 dB) |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not present |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | not required |
| - inter-RAT reporting quantity | |
| UTRAN estimated quality | FALSE |
| CHOICE system | GSM |
| - Observed time difference to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| - Reporting cell status | |
| CHOICE reported cell | |
| - Reported cells within active set or within virtual active set or of the other RAT | |
| - Maximum number of reported cells | 6 |
| CHOICE report criteria | |
| - Periodical reporting criteria | |
| - Amount of reporting | infinity |
| - Reporting interval | 4000 |
| Physical channel information elements | |
| - DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |
| - TGPS reconfiguration CFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - TGPSI | 2 |
| - TGPS status flag | Deactivate |

| Information Element | Value/remark |
|---|---|
| - TGCFN | Not present |

MEASUREMENT REPORT, if the UE requires compressed mode (refer ICS/IXIT) (Step 1d and step 5a)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" |
| - Inter-RAT measured result list | |
| - CHOICE system | GSM |
| - Measured GSM cells | |
| - GSM carrier RSSI | Check to see if present |
| CHOICE BSIC | Check to see if present |
| - Observed time difference to GSM cell | Check that not present |
| - GSM carrier RSSI | Check to see if present |
| CHOICE BSIC | Non verified BSIC |
| - BCCH ARFCN | Check that is set to the correct value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Observed time difference to GSM cell | Check that not present |
| Measured results on RACH | Check that not present |
| Additional Measured results | Check that not present |
| Event results | Check that not present |

MEASUREMENT REPORT, if the UE doesn't requires compressed mode (refer ICS/IXIT) (Step 1d and step 5a)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" |
| - Inter-RAT measured result list | |
| - CHOICE system | GSM |
| - Measured GSM cells | |
| - GSM carrier RSSI | Check to see if present |
| CHOICE BSIC | verified BSIC |
| - Inter-RAT cell id | Check that is set to 0 |
| - Observed time difference to GSM cell | Check that not present |
| - GSM carrier RSSI | Check to see if present |
| CHOICE BSIC | Non verified BSIC |
| - BCCH ARFCN | Check that is set to the correct value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Observed time difference to GSM cell | Check that not present |
| Measured results on RACH | Check that not present |
| Additional Measured results | Check that not present |
| Event results | Check that not present |

HANDOVER FROM UTRAN COMMAND-GSM

The contents of this message is identical to the HANDOVER FROM UTRAN COMMAND-GSM message specified in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Inter-system message | |
| - System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | Single GSM message |
| - Message | GSM HANDOVER COMMAND formatted as BIT STRING (1..512). The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = speech full rate or half rate version 1 and that the indicated target channel for GSM FR does not exist in the GSM cell |

HANDOVER FROM UTRAN FAILURE

The contents of this message is identical to the HANDOVER FROM UTRAN FAILURE message specified in [9] TS 34.108 clause 9.

#### 8.3.7.5.5 Test requirement

After step 4 the SS shall receive HANDOVER FROM UTRAN FAILURE message using the old UTRA configuration.

After step 5 the UE shall correctly report the GSM RSSI value.

### 8.3.7.6 Inter system handover from UTRAN/To GSM/Speech/Failure (L2 Establishment)

#### 8.3.7.6.1 Definition

#### 8.3.7.6.2 Conformance requirement

If the UE does not succeed to establish the connection to the other radio access technology , as is unable to obtain L2 establishment it shall

- resume the connection to UTRAN using the resources used before receiving the HANDOVER FROM UTRAN COMMAND message; and
- transmit the HANDOVER FROM UTRAN FAILURE message on uplink DCCH using AM RLC.

Reference(s)

3GPP TS 25.331 clause 8.3.7

TS 04.06 Clause 5.4.1.3

TS 04.08 Clause 3.1.5

#### 8.3.7.6.3 Test purpose

To Test that the UE shall keep its old configuration and transmit a HANDOVER FROM UTRAN FAILURE message, which is set to "physical channel failure" in IE "Inter_RAT HO failure cause", when it receives a HANDOVER FROM UTRAN COMMAND and the connection to GSM for handover cannot be established due to failure in L2 establishment.

#### 8.3.7.6.4 Method of test

Initial conditions

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51010-1 section 26.6.5.1 shall be referenced for the default parameters of cell 9.

UE: CC State U10 in cell 1

Related ICS/IXIT statement(s)

UE supports both GSM and UTRAN Radio Access Technologies,

UE supports GSM FR,

UE supports UTRAN AMR,

UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480.

Foreseen final state of the UE

The UE is in CC state U10 on cell 1.

Test Procedure

The SS starts the UTRAN cell and brings the UE into call active state (CC state U10) with AMR. SS activates a dedicated GSM traffic channel then sends HANDOVER FROM UTRAN COMMAND indicating a dedicated channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. When the UE does not succeed in establishing the connection to the target radio access technology it shall revert back to UTRA configuration establish the UTRA physical channel(s) used at the time for reception of HANDOVER FROM UTRAN COMMAND transmit the HANDOVER FROM UTRAN FAILURE.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into UTRAN U10 state in cell 1 |
| 2 | SS | | | The SS configures cell 9 as a GSM cell with traffic channel. |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND-GSM | Send on cell 1 (UTRAN cell) and the message indicates: The target channel. |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 5 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 6 | → | | HANDOVER ACCESS | |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | ← | | PHYSICAL INFORMATION | Allows a proper transmission by the MS.<br>Sent in unacknowledged mode as soon as the SS has detected a HANDOVER ACCESS.<br>As soon as MS detects it then it stops T3124.<br>On SS side T3105 could be started N times at the maximum as long as the step 8 is not performed |
| 10 | → | | SABM | To establish L2 connection |
| 11 | SS | | | SS does not sent UA frame |
| 12 | UE | | | On T200 expiration, SS sends N200 times the SABM frame (steps 10)<br>Then MS deactivates new channels and reactivates old UTRA resources it had before receiving the handover command |
| 13 | → | | HANDOVER FROM UTRAN FAILURE | The SS receives the message on the old channel of UTRAN cell. Sent in acknowledge mode<br>The cause in the IE "inter-RAT change failure" is set to "physical channel failure" |

Specific message contents

Same as the message contents of clause 8.3.7.1 for M = 3.

HANDOVER FROM UTRAN FAILURE

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it matches the same value used in the corresponding downlink HANDOVER FROM UTRAN COMMAND –GSM message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Inter-RAT handover failure | |
| -Inter-RAT handover failure cause | physical channel failure |
| Inter-system message | Not Checked |

#### 8.3.7.6.5 Test requirement

The SS shall receive HANDOVER FROM UTRAN FAILURE message on the old channel of the UTRAN cell.

### 8.3.7.7 Inter system handover from UTRAN/To GSM/Speech/Failure (L1 Synchronization)

#### 8.3.7.7.1 Definition

#### 8.3.7.7.2 Conformance requirement

If the UE does not succeed in establishing the connection to the target radio access technology, it shall:

1> revert back to the UTRA configuration;

1> establish the UTRA physical channel(s) used at the time for reception of HANDOVER FROM UTRAN COMMAND;

…

1> transmit the HANDOVER FROM UTRAN FAILURE message setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "Inter-RAT handover failure" to "physical channel failure".

1> When the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layer for transmission:

2> the procedure ends.

Reference(s)

TS 25.331 Clause 8.3.7.5

#### 8.3.7.7.3 Test purpose

To test that the UE reactivates its old configuration and transmit a HANDOVER FROM UTRAN FAILURE message, which is set to "physical channel failure" in IE "Inter-RAT Handover failure cause", when it receives a HANDOVER FROM UTRAN COMMAND and the connection to GSM for handover cannot be established due to failure in L1 Synchronization.

8.3.7.7.4 Method of test

Initial conditions

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 section 40 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports GSM FR,
- UE supports UTRAN AMR,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810.

Foreseen final state of the UE

The UE is in CC state U10 on cell 1.

Test Procedure

The SS brings the UE into call active state (CC state U10). The SS activates a dedicated channel in the GSM cell, then sends HANDOVER FROM UTRAN COMMAND indicating a dedicated channel of the target GSM cell to the UE through DCCH using the UTRAN configuration. The UE receives the command, configures itself accordingly and sends the HANDOVER ACCESS burst. Upon receiving this burst, the SS turns off the dedicated channel indicated to the UE, so the UE cannot complete the handover. The SS checks that the UE reverts to the old UTRA configuration by checking that the UE transmits the HANDOVER FROM UTRAN FAILURE message to the SS via the old UTRAN configuration.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into UTRAN U10 state in cell 1. |
| 2 | SS | | | The SS configures a traffic channel on cell 9 (GSM cell). |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND-GSM | Send on cell 1 (UTRAN cell) and the message indicates: The target channel for GSM FR in GSM Cell. |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 5 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 6 | → | | HANDOVER ACCESS | |
| 7 | SS | | | The target GSM Traffic Channel is Switched off |
| 8 | → | | HANDOVER FROM UTRAN FAILURE | The SS receives the message via the old UTRAN configuration.<br>The cause in the IE "inter-RAT change failure" is set to "physical channel failure" |

Specific message contents

HANDOVER FROM UTRAN COMMAND-GSM

The contents of this message is identical to the HANDOVER FROM UTRAN COMMAND-GSM message specified in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Inter-system message | |
| - System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | Single GSM message |
| - Message | GSM HANDOVER COMMAND formatted as BIT STRING (1..512). The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = speech full rate or half rate version 1 |

HANDOVER FROM UTRAN FAILURE

The contents of this message is identical to the HANDOVER FROM UTRAN FAILURE message specified in [9] TS 34.108 clause 9.

#### 8.3.7.7.5 Test requirement

After step 7 the SS shall receive HANDOVER FROM UTRAN FAILURE message via the old UTRA configuration.

### 8.3.7.8 Inter system handover from UTRAN/To GSM/Speech/Failure (Invalid Inter-RAT message)

#### 8.3.7.8.1 Definition

#### 8.3.7.8.2 Conformance requirement

If the IE "Inter-RAT message" received within the HANDOVER FROM UTRAN COMMAND message does not include a valid inter RAT handover message in accordance with the protocol specifications for the target RAT, the UE shall perform procedure specific error handling as follows. The UE shall:

1> set the IE "failure cause" to the cause value "Inter-RAT protocol error";

1> include the IE "Inter-RAT message" in accordance with the specifications applicable to the other RAT;

1> transmit a HANDOVER FROM UTRAN FAILURE message on the uplink DCCH using AM RLC;

1> when the transmission of the HANDOVER FROM UTRAN FAILURE message has been confirmed by RLC:

2> continue with any ongoing processes and procedures as if the invalid HANDOVER FROM UTRAN COMMAND message has not been received;

2> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.7.6

#### 8.3.7.8.3 Test purpose

To Test that the UE shall keep its old configuration and transmit a HANDOVER FROM UTRAN FAILURE message, which is set to "Inter-RAT protocol error" in IE "Inter_RAT HO failure cause", when it receives a Handover From UTRAN message, with the IE "Inter-RAT message" received within the HANDOVER FROM UTRAN COMMAND message not including a valid inter RAT handover message in accordance with the protocol specifications for the target RAT.

#### 8.3.7.8.4 Method of test

Initial conditions

System Simulator : 1 UTRAN cell.

UE : CC State U10 in cell 1

Related ICS/IXIT statement(s)

UE supports both GSM and UTRAN Radio Access Technologies,

UE supports GSM FR,

UE supports UTRAN AMR,

UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480.

Foreseen final state of the UE

The UE is in CC state U10 on cell 1.

Test Procedure

The SS starts the UTRAN cell and brings the UE into call active state (CC state U10) with AMR. The SS then sends an HANDOVER FROM UTRAN COMMAND message not including a valid inter RAT handover message in accordance with the protocol specifications for the target RAT, to the UE through DCCH of the serving UTRAN cell. The UE receives the command and finds that the Inter Rat message is Invalid. The SS checks that the handover is failed by checking that the UE transmits the HANDOVER FROM UTRAN FAILURE message to the SS in UTRAN cell.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into UTRAN U10 state in cell 1 |
| 2 | ← | | HandoverFromUTRAN Command-GSM | Send on cell 1 (UTRAN cell) and the message carries an Invalid HANDOVER FROM UTRAN COMMAND -GSM |
| 3 | → | | HANDOVER FROM UTRAN FAILURE | The SS receives the message on the old channel of UTRAN cell. |

Specific message contents

HANDOVER FROM UTRAN COMMAND-GSM

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| RAB Info | Not present |
| Inter-system message | |
| - CHOICE System type | GSM |
| - Frequency Band | GSM/DCS 1800 Band |
| - CHOICE GSM message | Single GSM message |
| - Message | GSM HANDOVER COMMAND formatted and coded according to GSM specifications as Variable Length BIT STRING without Length Indicator. The first/ l*eftmost/ most significant* bit of the bit string contains bit 8 of the first octet of the GSM message. The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Contains an Invalid Handover Command. |

HANDOVER FROM UTRAN FAILURE

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it matches the same value used in the corresponding downlink HANDOVER FROM UTRAN COMMAND –GSM message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Inter-RAT handover failure | |
| -Inter-RAT handover failure cause | Inter-RAT protocol error |
| Inter-system message | Not checked |

#### 8.3.7.8.5 Test requirement

In step 3 the SS shall receive HANDOVER FROM UTRAN FAILURE message on the old channel of the UTRAN cell.

### 8.3.7.9 Inter system handover from UTRAN/To GSM/Speech/Failure (Unsupported configuration)

#### 8.3.7.9.1 Definition

#### 8.3.7.9.2 Conformance requirement:

If:

…

- the UTRAN instructs the UE to use a non-supported configuration; or

…

the UE shall:

1> transmit a HANDOVER FROM UTRAN FAILURE message, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "Inter-RAT handover failure" to "configuration unacceptable";

2> when the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:

3> resume normal operation as if the invalid HANDOVER FROM UTRAN COMMAND message has not been received;

3> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.7.8

#### 8.3.7.9.3 Test purpose

To test that the UE shall keep its old configuration and transmit a HANDOVER FROM UTRAN FAILURE message, which is set to "configuration unacceptable" in IE "Inter-RAT Handover failure cause", when it receives a

HANDOVER FROM UTRAN COMMAND message, with the IE "GSM message" containing a HANDOVER COMMAND message including a configuration not supported by the UE.

8.3.7.9.4 Method of test

Initial conditions

System Simulator: 1 UTRAN cell.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.Related

ICS/IXIT statement(s)

UE supports both GSM and UTRAN Radio Access Technologies,

UE supports GSM FR,

UE supports UTRAN AMR,

UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810.

Foreseen final state of the UE

The UE is in CC state U10 on cell 1.

Test Procedure

The SS brings the UE into call active state (CC state U10) with AMR on the UTRAN cell. The SS then sends an HANDOVER FROM UTRAN COMMAND message including a configuration not supported by the UE in the HANDOVER COMMAND that is contained in the IE "GSM message", to the UE through DCCH using the UTRAN configuration. The UE receives the command and finds that the configuration given in Inter Rat message is not supported. The SS checks that the UE reverts to the old UTRA configuration by checking that the UE transmits the HANDOVER FROM UTRAN FAILURE message to the SS using the old UTRA configuration.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into UTRAN U10 state in cell 1 |
| 2 | ← | | HANDOVER FROM UTRAN COMMAND -GSM | Send using the UTRAN configuration and the message carries an unsupported configuration. |
| 3 | → | | HANDOVER FROM UTRAN FAILURE | The SS receives the message via the old UTRAN configuration. |

Specific message contents

HANDOVER FROM UTRAN COMMAND-GSM

The contents of this message is identical to the HANDOVER FROM UTRAN COMMAND-GSM message specified in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB_Info | Not present |
| Inter-system message | |
| - System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | Single GSM message |
| - Message | GSM HANDOVER COMMAND formatted as Variable Length BIT STRING without Length Indicator. The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the frequency band is set to a value not supported by the UE. |

HANDOVER FROM UTRAN FAILURE

The contents of this message is identical to the HANDOVER FROM UTRAN FAILURE message specified in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Inter-RAT handover failure<br>-Inter-RAT handover failure cause | <br>configuration unacceptable |

#### 8.3.7.9.5 Test requirement

After step 2 the SS shall receive a HANDOVER FROM UTRAN FAILURE message via the old UTRA configuration.

### 8.3.7.10 Inter system handover from UTRAN/To GSM/Speech/Failure (Reception by UE in CELL_FACH)

#### 8.3.7.10.1 Definition

#### 8.3.7.10.2 Conformance requirement

If the UE receives HANDOVER FROM UTRAN COMMAND while in CELL_FACH, the UE shall:

1> transmit a HANDOVER FROM UTRAN FAILURE message, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "Inter-RAT handover failure" to "protocol error", include IE "Protocol error information"; and

2> set the value of IE "Protocol error cause" to "Message not compatible with receiver state";

2> when the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:

3> resume normal operation as if the invalid HANDOVER FROM UTRAN COMMAND message has not been received;

3> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.7.8a

#### 8.3.7.10.3 Test purpose

The UE shall keep its old configuration when the UE receives a HANDOVER FROM UTRAN COMMAND message when in CELL_FACH state and then transmit a HANDOVER FROM UTRAN FAILURE message on the DCCH using AM RLC, which sets value "protocol error" in IE "Inter_RAT HO failure cause" and is set to "Message not compatible with receiver state" in IE "Protocol error cause".

8.3.7.10.4 Method of test

Initial conditions

System Simulator : 1 UTRAN Cell

UE : RRC State CS-DCCH_FACH (state 6-6) as specified in clause 7.4 of TS 34.108, on Cell 1

Related ICS/IXIT statement(s)

UE supports both GSM and UTRAN Radio Access Technologies,

UE supports GSM FR,

UE supports UTRAN AMR,

UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480.

Foreseen final state of the UE

The UE is in RRC is in State CS-DCCH_FACH (state 6-6) as specified in clause 7.4 of TS 34.108, on cell 1.

Test Procedure

The SS starts GSM cell without activating any dedicated channel in the cell, then sends HANDOVER FROM UTRAN COMMAND indicating a dedicated channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. The UE receives the command and configures itself accordingly but cannot complete the handover. The SS checks that the handover is failed by checking that the UE transmits the HANDOVER FROM UTRAN FAILURE message to the SS in UTRAN cell.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into CS-DCCH_FACH (state 6-6) _FACH state in cell 1 |
| 2 | ← | | HANDOVER FROM UTRAN COMMAND | Send on cell 1 (UTRAN cell) and the message indicates: The target channel for GSM |
| 3 | → | | HANDOVER FROM UTRAN FAILURE | The SS receives the message on the old channel of UTRAN cell. |

Specific message contents

Same as the message contents of clause 8.3.7.1 for M = 3.

HANDOVER FROM UTRAN FAILURE

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it matches the same value used in the corresponding downlink HANDOVER FROM UTRAN COMMAND –GSM message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Inter-RAT handover failure | |
| -Inter-RAT handover failure cause | Protocol Error |
| -Diagnostics Type | Type1 |
| -Protocol Error Cause | Message Not Compatible With Receiver State |
| Inter-system message | Not Checked |

8.3.7.10.5 Test requirement

After step 2 the SS shall receive HANDOVER FROM UTRAN FAILURE message on the old channel of the UTRAN cell.

## 8.3.7.11 Inter system handover from UTRAN/To GSM/Speech/Failure (Invalid message reception)

8.3.7.11.1 Definition

8.3.7.11.2 Conformance requirement:

If the HANDOVER FROM UTRAN COMMAND message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> set the IE "RRC transaction identifier" in the HANDOVER FROM UTRAN FAILURE message to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Rejected transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> set the IE "failure cause" to the cause value "protocol error";

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;

1> transmit a HANDOVER FROM UTRAN FAILURE message on the uplink DCCH using AM RLC;

1> when the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:

2> continue with any ongoing processes and procedures as if the invalid HANDOVER FROM UTRAN COMMAND message has not been received;

2> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.3.7.6

8.3.7.11.3 Test purpose

The UE shall keep its old configuration when the UE receives a Handover From UTRAN message, that cause the variable PROTOCOL_ERROR_REJECT to be set to TRUE. It shall then transmit a HANDOVER FROM UTRAN FAILURE message on the uplink DCCH. The IE "Protocol error information" shall contain an IE "Protocol error cause" set to " Message extension not comprehended ".

8.3.7.11.4 Method of test

Initial conditions

System Simulator : 1 UTRAN cell.

UE : CC State U10 in cell 1

Related ICS/IXIT statement(s)

UE supports both GSM and UTRAN Radio Access Technologies,

UE supports GSM FR,

UE supports UTRAN AMR,

UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480.

Foreseen final state of the UE

The UE is in CC state U10 on cell 1.

Test Procedure

The SS starts the UTRAN cell and brings the UE into call active state (CC state U10) with AMR. The SS then sends an HANDOVER FROM UTRAN COMMAND message, which contains an unexpected critical message extension, to the UE through DCCH of the serving UTRAN cell. The SS checks that the handover is failed by checking that the UE transmits a HANDOVER FROM UTRAN FAILURE message on the uplink DCCH. The IE "Protocol error information" shall contain an IE "Protocol error cause" set to " Message extension not comprehended ".

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into UTRAN U10 state in cell 1 |
| 2 | ← | | Handover From UTRAN Command | Send on cell 1 (UTRAN cell) and the message is short in length to be decoded into a valid Handover From UTRAN command |
| 3 | → | | HANDOVER FROM UTRAN FAILURE | The SS receives the message on the old channel of UTRAN cell. |

Specific message contents

HANDOVER FROM UTRAN COMMAND

Use the HANDOVER FROM UTRAN COMMAND message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Critical extensions | 'FF'H |

HANDOVER FROM UTRAN FAILURE (Step 3)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it matches the same value used in the corresponding downlink HANDOVER FROM UTRAN COMMAND message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Inter-RAT handover failure | |
| -Inter-RAT handover failure cause | Protocol Error |
| -Diagnostics Type | Type1 |
| -Protocol Error Cause | Message extension not comprehended |
| Inter-system message | Not Checked |

8.3.7.11.5 Test requirement

In step 3 the SS shall receive HANDOVER FROM UTRAN FAILURE message in the UTRAN cell.

## 8.3.7.12 Inter system handover from UTRAN/To GSM/Speech/Failure (Physical channel Failure and Reversion Failure)

### 8.3.7.12.1 Definition

### 8.3.7.12.2 Conformance requirement

1. This section applies to R99 & Rel-4 releases:

If the UE does not succeed in establishing the connection to the target radio access technology, it shall:

1> revert back to the UTRA configuration;

1> establish the UTRA physical channel(s) used at the time for reception of HANDOVER FROM UTRAN COMMAND;

1> if the UE does not succeed to establish the UTRA physical channel(s):

2> perform a cell update procedure according to subclause 8.3.1 in TS 25.331with cause "Radio link failure";

2> when the cell update procedure has completed successfully:

3> proceed as below.

1> transmit the HANDOVER FROM UTRAN FAILURE message setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "Inter-RAT handover failure" to "physical channel failure".

1> When the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layer for transmission:

2> the procedure ends.

2. This section applies from Rel-5 releases onwards:

If the UE does not succeed in establishing the connection to the target radio access technology, it shall:

1> revert back to the UTRA configuration;

1> if the CM_PATTERN_ACTIVATION_ABORTED flag is not set to TRUE:

2> establish the UTRA physical channel(s) (including HS-DSCH related channels) used at the time for reception of HANDOVER FROM UTRAN COMMAND;

2> perform the physical layer synchronisation procedure A as specified in [29] (FDD only);

2> after the establishment of the uplink physical channel, send DPCCH and no DPDCH according to [26] during the number of frames indicated in the IE "PC preamble" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE; and

2> then not send any data on signalling radio bearers RB0 to RB4 during the number of frames indicated in the IE "SRB delay" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE.

Reference

3GPP TS 25.331 clause 8.3.7.5

### 8.3.7.12.3 Test purpose

The UE shall perform a cell update when the UE fails to revert to the old configuration after the detection of physical channel failure in the target RAT cell as given in the HANDOVER FROM UTRAN COMMAND message. After the

UE completes the cell update procedure, the UE shall transmit a HANDOVER FROM UTRAN FAILURE message on the DCCH using AM RLC, including IE "failure cause" set to "physical channel failure".

#### 8.3.7.12.4 Method of test

##### Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 section 40 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

The 'timer poll' value in the SS RLC transmit entity should be set to 800 ms.

##### Related ICS/IXIT statement(s)

UE supports both GSM and UTRAN Radio Access Technologies,

UE supports GSM FR,

UE supports UTRAN AMR,

UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810.

##### Foreseen final state of the UE

The UE is in CC state U10 on cell 1.

##### Test Procedure

The SS and brings the UE into call active state (CC state U10) with AMR on the UTRAN cell. The SS configures a target dedicated channel on the GSM cell. The SS sends a HANDOVER FROM UTRAN COMMAND indicating a dedicated channel of the target GSM cell to the UE through DCCH using the UTRAN configuration. The UE receives the command and configures itself accordingly but cannot complete the handover and wants to revert to the old configuration, but the UE cannot revert to the old configuration because the SS released the old configuration. The UE transmits a CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "radio link failure". The SS shall transmit CELL UPDATE CONFIRM message on downlink DCCH after receiving CELL UPDATE message. The UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC and subsequently transmits the HANDOVER FROM UTRAN FAILURE message to the SS using the new UTRA configuration, on the DCCH using AM RLC, setting the value of IE "failure cause" to " physical channel failure". In case of R99 or Rel-4, UE may transmit HANDOVER FROM UTRAN FAILURE message using uplink AM RLC and subsequently PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into UTRAN U10 state in cell 1 |
| 2 | SS | | | The SS configures a dedicated GSM FR channel on the GSM cell. |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND-GSM | Send using the UTRA configuration and the message indicates:<br>the target channel for GSM FR. |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER COMMAND message that is contained within the HANDOVER FROM UTRAN COMMAND -GSM message |
| 4a | SS | | | SS removes the UTRAN physical channel (DPCH) allocated to the mobile to ensure UE will not be able to revert back to the old UTRAN configuration when handover failed |
| 5 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. Upon receiving this burst, SS removes the target GSM Traffic Channel. As a result not only the handover will fail, but also the reversion to the old UTRA configuration. |
| 6 | → | | CELL UPDATE | The value "radio link failure" shall be set in IE "Cell update cause". |
| 7 | ← | | CELL UPDATE CONFIRM | This message include IE "Physical channel information elements". |
| 8 | | | | The SS configures the dedicated physical channel according to the IE "Physical channel information elements" included in the CELL UPDATE CONFIRM message. |
| 9 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 10 | → | | HANDOVER FROM UTRAN FAILURE | The IE "failure cause" shall be set to "physical channel failure" |
| | | | | Note: For R99 and Rel-4 UEs the messages in Steps 9 and 10 may be received in either order. |

Specific message contents

Same as the message contents of clause 8.3.7.1 for Execution 3.

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode<br>- T312 | <br>2 |

CELL UPDATE (Step 6)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in TS 34.108, clause 9,with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI<br>- SRNC Identity<br>- S-RNTI<br>Cell Update Cause | <br>Check to see if set to '0000 0000 0001'<br>Check to see if set to '0000 0000 0000 0000 0001'<br>"radio link failure" |

CELL UPDATE CONFIRM (Step 7) (FDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in TS 34.108, clause 9,with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| U-RNTI | Same as CELL UPDATE message in step 3 | |
| RRC State indicator | CELL_DCH | |
| CHOICE channel requirement | Uplink DPCH info | |
| -UplinkDPCH Info | Same as specified in “Contents of RADIO BEARER SETUP message: AM or UM” for condition A2 (Speech CS) in TS 34.108 clause 9.1 | |
| - DPCCH power offset | -40 (-80 dB) | |
| - PC Preamble | 1 frame | |
| - SRB delay | 7 frames | |
| - Power Control Algorithm | Algorithm1 | |
| - TPC step size | 0 (1 dB) | |
| - Scrambling code type | Long | |
| - Scrambling code number | 0 (0 to 16777215) | |
| - Number of DPDCH | Not Present(1) | |
| - spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Number of FBI bit | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set | |
| Downlink information common for all radio links | Same as specified in “Contents of RADIO BEARER SETUP message: AM or UM” for condition A2 (Speech CS) in TS 34.108 clause 9.1 | |
| CHOICE Mode | FDD | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset PPilot-DPDCH | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not Present | |
| - TX Diversity mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 | |
| Downlink information for each radio links | | |
| - Primary CPICH info | | |
| - Primary scrambling code | 100 | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value: Default DPCH Offset value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | SF-1(SF is reference to TS34.108 clause 6.10 Parameter Set) | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |

| | | |
|---|---|---|
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

CELL UPDATE CONFIRM (Step 7) (3.84 Mcps TDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in TS34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Same as CELL UPDATE message in step 3 |
| RRC State indicator | CELL_DCH |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Reference to TS34.108 clause 5.1 Test frequencies |
| Maximum allowed UL TX power | 30dBm |
| CHOICE Mode | TDD |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | Not Present |
| - Cell Parameters ID | Not Present |
| - Block STTD indicator | FALSE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | TDD |
| - DL CCTrCh List | |
| - TFCS ID | 1 |
| - Time info | |
| - Activation time | Not Present (default) |
| - Duration | Not Present (default) |
| - Common timeslot info | Not Present (default) |
| - Downlink DPCH timeslots and codes | Not Present (default) |
| - UL CCTrCH TPC List | Not Present (default) |

CELL UPDATE CONFIRM (Step 7) (1.28 Mcps TDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in TS34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Same as CELL UPDATE message in step 3 |
| RRC State indicator | CELL_DCH |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Reference to TS34.108 clause 5.1 Test frequencies |
| Maximum allowed UL TX power | 30dBm |
| CHOICE Mode | TDD |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell Parameters ID | Not Present |
| - Block STTD indicator | FALSE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | TDD |
| - DL CCTrCh List | |
| - TFCS ID | 1 |
| - Time info | |
| - Activation time | Not Present (default) |
| - Duration | Not Present (default) |
| - Common timeslot info | Not Present (default) |
| - Downlink DPCH timeslots and codes | Not Present (default) |
| - UL CCTrCH TPC List | Not Present (default) |

CELL UPDATE CONFIRM (Step 7) (3.84 Mcps TDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in TS34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | Same as CELL UPDATE message in step 3 |
| RRC State indicator | CELL_DCH |
| Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Reference to TS34.108 clause 5.1 Test frequencies |
| Maximum allowed UL TX power | 30dBm |
| CHOICE Mode | TDD |
| Downlink information for each radio links | |
| - Primary CCPCH info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | Not Present |
| - Cell Parameters ID | Not Present |
| - Block STTD indicator | FALSE |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | TDD |
| - DL CCTrCh List | |
| - TFCS ID | 1 |
| - Time info | |
| - Activation time | Not Present (default) |
| - Duration | Not Present (default) |
| - Common timeslot info | Not Present (default) |
| - Downlink DPCH timeslots and codes | Not Present (default) |
| - UL CCTrCH TPC List | Not Present (default) |

HANDOVER FROM UTRAN COMMAND

The contents of this message is identical to the HANDOVER FROM UTRAN COMMAND-GSM message specified in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Inter-system message | |
| - System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | Single GSM message |
| - Message | GSM HANDOVER COMMAND formatted as BIT STRING (1..512). The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = speech full rate or half rate version 1 |

PHYSICAL CHANNEL RECONFIGURATION COMPLETE (Step 9)

Use the same message found in TS 34.108 clause 9, with the exceptions of the following IEs:

| Information Element | Value/remark |
|---|---|
| Uplink counter synchronisation info | Not Checked |

HANDOVER FROM UTRAN FAILURE (Step 10)

The contents of this message are identical to the HANDOVER FROM UTRAN FAILURE message specified in [9] TS 34.108 clause 9.

8.3.7.12.5 Test requirement

After step 5 the SS shall receive a CELL UPDATE message.

At step 9 the SS shall receive a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

At step 10 the SS shall receive a HANDOVER FROM UTRAN FAILURE message via the new UTRA configuration.

Note: For R99 and Rel-4 UEs the messages in Steps 9 and 10 may be received in either order.

## 8.3.7.13 Inter system handover from UTRAN/To GSM/ success / call under establishment

8.3.7.13.1 Definition

8.3.7.13.2 Conformance requirement

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

The UE shall:

1> establish the connection to the target radio access technology, by using the contents of the IE "Inter-RAT message". This IE contains a message specified in another standard, as indicated by the IE "System type", and carries information about the candidate/ target cell identifier(s) and radio parameters relevant for the target radio access technology. The correspondence between the value of the IE "System type", the standard to apply and the message contained within IE "Inter RAT message" is shown in the following:

| Value of the IE "System type" | Standard to apply | Inter RAT Message |
|---|---|---|
| GSM | GSM TS 04.18, version 8.5.0 or later | HANDOVER COMMAND |
| cdma2000 | TIA/EIA/IS-2000 or later, TIA/EIA/IS-833 or later, TIA/EIQ/IS-834 or later | |

1> if the IE "System type" has the value "GSM":

2> if the IE "Frequency band" has the value "GSM /DCS 1800 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1800 band".

2> if the IE "Frequency band" has the value " GSM /PCS 1900 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1900 band".

1> apply the "Inter RAT Message" according to the "standard to apply" in the table above.

1> if the IE "RAB information List" is included in the HANDOVER FROM UTRAN COMMAND message:

2> if the IE "RAB information List" includes one IE "RAB Info" with the IE "CN domain Identity" set to "CS domain":

3> connect upper layer entities corresponding to the indicated CS domain RAB to the radio resources indicated in the inter-RAT message.

NOTE: In this version of the specification the maximum number of CS domain RABs which may be included in the IE "RAB information List" is limited to 1.

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.

….

Upon successfully completing the handover, UTRAN should:

1> release the radio connection; and

1> remove all context information for the concerned UE.

Upon successfully completing the handover, the UE shall:

1> if the USIM is present:

2> store the current START value for every CN domain in the USIM [50];

2> if the "START" stored in the USIM [50] for a CN domain is greater than or equal to the value "THRESHOLD" of the variable START_THRESHOLD:

3> delete the ciphering and integrity keys that are stored in the USIM for that CN domain;

3> inform the deletion of these keys to upper layers.

1> if the SIM is present:

2> store the current START value for every CN domain in the UE;

2> if the "START" stored in the UE for a CN domain is greater than or equal to the value "THRESHOLD" of the variable START_THRESHOLD:

3> delete the ciphering and integrity keys that are stored in the SIM for that CN domain;

3> inform the deletion of these keys to upper layers.

1> if there are any NAS messages with the IE "CN domain identity" set to "CS domain" for which the successful delivery of the INITIAL DIRECT TRANSFER message or UPLINK DIRECT TRANSFER message on signalling radio bearer RB3 or signalling radio bearer RB4 that have not yet been confirmed by RLC:

2> retransmit those NAS messages to the network on the newly established radio connection to the target radio access technology.

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

NOTE: The release of the UMTS radio resources is initiated from the target RAT.

Reference

3GPP TS 25.331 clause 8.3.7.3, 8.3.7.4

### 8.3.7.13.3 Test purpose

To test that the UE supporting both GSM and UTRAN performs handover from UTRAN to the indicated channel of GSM target cell when the UE receives a HANDOVER FROM UTRAN COMMAND in call establishment phase.

To test that the UE continues the call in the GSM cell, after succesful completion of the Handover.

### 8.3.7.13.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010-1 26.6.5.1 section 40 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9 except the BCCH ARFCN for GSM 900 should be 18 and for GSM 1900 should be 646.

UE: CC State U0 (NULL state) in cell 1.

Related ICS/IXIT statement(s)

UE supports both GSM and UTRAN Radio Access Technologies,

UE supports GSM FR,

UE supports UTRAN AMR,

UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-850, GSM-PCS, GSM-710, GSM 750, T_GSM-810.

Foreseen final state of the UE

The UE is in CC state U0 (NULL) on cell 1.

Test Procedure

The SS activates the UTRAN cell and GSM Cell. The UE is triggered to initialise an MO speech call. During the call establishment phase, the SS is configured to not transmit the RLC Acknowledgment for SETUP message. SS configures a dedicated channel in GSM Cell, then sends the UE an HANDOVER FROM UTRAN COMMAND indicating the dedicated channel in the target GSM cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel of the GSM cell. The SS checks whether the handover is performed by checking that the UE transmits the HANDOVER COMPLETE message to the SS in GSM cell. The SS checks MS correctly retransmits CC SETUP message, that was not acknowledged by UTRAN RLC Layer before the Handover, following completion of the handover to GSM cell.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | To trigger the UE to initialise an MO call |
| 2 | → | | SETUP | SS does not Acknowledge it |
| 3 | SS | | | The SS starts the GSM cell and configure a dedicated channel SDCCH. |
| 4 | ← | | HANDOVER FROM UTRAN COMMANDGSM | Send via the UTRA configuration and the message indicates:<br>the dedicated channel SDCCH. |
| 5 | UE | | | The UE accepts the handover command and switches to the GSM dedicated channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 6 | → | | HANDOVER ACCESS | The SS receives this burst on the dedicated channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | → | | HANDOVER ACCESS | |
| 10 | ← | | PHYSICAL INFORMATION | |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | → | | HANDOVER COMPLETE | The SS receives the message on the dedicated channel of GSM cell. |
| 14 | -> | | SETUP | The SS receives the message on the dedicated channel of GSM cell. |
| 15 | <- | | CHANNEL RELEASE | |

Specific message contents

HANDOVER FROM UTRAN COMMAND-GSM

The contents of this message is identical to the HANDOVER FROM UTRAN COMMAND-GSM message specified in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RAB_info | Not present |
| Inter-system message | |
| - System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | Single GSM message |
| - Message | GSM HANDOVER COMMAND formatted as Variable Length BIT STRING without Length Indicator. The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 4 in clause 26.6.5.2 of GSM 51.010, except that the CHANNEL MODE IE is included with value = signalling only and the BCCH ARFCN for GSM 900 should be 18 and for GSM 1900 should be 646 |

#### 8.3.7.13.5 Test requirement

At step 14 the SS shall receive SETUP message on the dedicated channel of the GSM cell.

### 8.3.7.14 Inter system handover from UTRAN/To GSM/Speech/Success (stop of HS-DSCH reception)

#### 8.3.7.14.1 Definition and applicability

All UEs which support FDD or TDD, HS-PDSCH and GSM.

#### 8.3.7.14.2 Conformance requirement

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

The UE shall:

1> if HS-DSCH is configured for UTRA:

2> stop any HS-DSCH reception procedures;

2> clear any stored HS-PDSCH configuration;

2> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

2> release all HARQ resources;

2> remove any H-RNTI stored;

2> clear the variable H_RNTI;

2> set the variable HS_DSCH_RECEPTION to FALSE.

1> establish the connection to the target radio access technology, by using the contents of the IE "Inter-RAT message". This IE contains a message specified in another standard, as indicated by the IE "System type", and carries information about the candidate/ target cell identifier(s) and radio parameters relevant for the target radio access technology. The correspondence between the value of the IE "System type", the standard to apply and the message contained within IE "Inter RAT message" is shown in the following:

| Value of the IE "System type" | Standard to apply | Inter RAT Message |
|---|---|---|
| GSM | GSM TS 04.18, version 8.5.0 or later, or 3GPP TS 44.018 | HANDOVER COMMAND |
| GERAN Iu | 3GPP TS 44.118 | RADIO BEARER RECONFIGURATION |
| cdma2000 | TIA/EIA/IS-2000 or later, TIA/EIA/IS-833 or later, TIA/EIQ/IS-834 or later | |

1> if the IE "System type" has the value "GSM" or "GERAN Iu":

2> if the IE "Frequency band" has the value "GSM /DCS 1800 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1800 band".

2> if the IE "Frequency band" has the value " GSM /PCS 1900 band used":

3> set the BAND_INDICATOR [45] to "ARFCN indicates 1900 band".

1> apply the "Inter RAT Message" according to the "standard to apply" in the table above.

1> if the IE "RAB information List" is included in the HANDOVER FROM UTRAN COMMAND message:

2> if the IE "RAB information List" includes one IE "RAB Info" with the IE "CN domain Identity" set to "CS domain":

3> connect upper layer entities corresponding to the indicated CS domain RAB to the radio resources indicated in the inter-RAT message.

NOTE1: In this version of the specification the maximum number of CS domain RABs which may be included in the IE "RAB information List" is limited to 1.

NOTE2: In handover to GERAN *Iu mode*, the RAB information is included in the RADIO BEARER RECONFIGURATION message specified in [53].

NOTE3: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification.

NOTE4: The UE may ignore the IE "NAS synchronisation indicator" if included in the HANDOVER FROM UTRAN COMMAND message;

NOTE5: The UE behaviour is undefined if the IE "Re-establishment timer" in the IE "RAB info" indicates a timer different from the timer currently configured for this RAB.

During compressed mode on the associated DPCH or F-DPCH, the following applies for the UE for transmission of HS-DPCCH and reception of HS-SCCH and HS-PDSCH:

- The UE shall neglect a HS-SCCH or HS-PDSCH transmission, if a part of the HS-SCCH or a part of the corresponding HS-PDSCH overlaps with a downlink transmission gap on the associated DPCH or F-DPCH. In this case, neither ACK, nor NACK shall be transmitted by the UE to respond to the corresponding downlink transmission.

- If a part of a HS-DPCCH slot allocated to HARQ-ACK overlaps with an uplink transmission gap on the associated DPCH, the UE shall use DTX on the HS-DPCCH in that HS-DPCCH slot.

- If in a HS-DPCCH sub-frame a part of the slots allocated for CQI information overlaps with an uplink transmission gap on the associated DPCH, the UE shall not transmit CQI information in that sub-frame.

- If a CQI report is scheduled in the current CQI field according to subclause 6A.1.2 paragraph (2), and the corresponding 3-slot reference period (as defined in subclause 6A.2) wholly or partly overlaps a downlink transmission gap, then the UE shall use DTX in the current CQI field and in the CQI fields in the next (*N_cqi_transmit*–1) subframes.

Reference(s)

TS 25.331 Clause 8.3.7.5.

TS 25.214 Clause 6A.3.

### 8.3.7.14.3 Test purpose

1. To test that the UE supporting both GSM and UTRAN hands over from a UTRAN serving cell to the indicated channel of GSM target cell when the UE is in the speech call active state, active PS RAB with HS-DSCH reception and receives an HANDOVER FROM UTRAN COMMAND.2. To verify that UE stops HS-DSCH reception after receiving the HANDOVER FROM UTRAN COMMAND.

3. For the UEs supporting compressed mode, to verify that the HS-DSCH reception has no impact on the GSM cells measurement when GSM compressed mode is activated.

### 8.3.7.14.4 Method of test

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 clause 26.6.5.1 shall be referenced for the default parameters of cell 9.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports PS+CS
- UE supports GSM AMR
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810
- UE supports compressed mode (FDD only).

Foreseen final state of the UE

The UE is in CC state U10 on cell 9.

Test Procedure

The SS brings the UE into call active state (CC state U10) with AMR with configuration (conversational/speech/uplink: 12.2 DL: 12.2 kbps/CS RAB + interactive/ background UL: 384kbps, DL: (max bit rate depending on UE category) PS RAB + uplink:3.4 DL3.4 kbps SRBs). In case UE does not support data rate of 384kbps in UL, then 64kbps should be used in UL for the PS RAB. PS RAB is configured with HS-DSCH.
The SS sends a PHYSICAL CHANNEL RECONFIGURATION message to the UE to configure the compressed mode pattern sequence parameters. When the PHYSICAL CHANNEL RECONFIGURATION COMPLETE is received from the UE, the SS sends a MEASUREMENT CONTROL message indicating two GSM cells of which only one is actually configured. This message is used to provide measurement control parameters (GSM RSSI) to the UE and to start compressed mode for the measurement if required according to the UE capabilities. The UE replies according to request by sending MEASUREMENT REPORT messages periodically to SS (reporting period is 4000 ms).

The SS configures the appropriate traffic channel on the GSM cell, then sends HANDOVER FROM UTRAN COMMAND indicating the traffic channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel on the target GSM cell. The SS checks whether the handover is performed by checking that the UE transmits the HANDOVER COMPLETE message to the SS through GSM cell. SS receives GPRS SUSPENSION REQUEST from the UE.

SS disconnects the CS call and releases the RR connection.

Once RR connection is released, an RAU procedure is performed. To check that PDP context is active, SS sends MODIFY PDP CONTEXT REQUEST and assigns new QoS in GPRS cell. The UE may or may not accept the new QoS and replies to the SS accordingly.

For UEs where the PIXIT indicates support for the GSM/ DCS 1800 and/ or GSM/ PCS 1900 band, the whole test should be repeated to cover these frequencies in order to verify the correct handling of the IE "Frequency band".

Inter RAT handover is normally preceded by the configuration and activation of compressed mode (depending on UE capabilities/ PIXIT) and the configuration of inter- RAT measurements. The inter RAT handover is normally initiated by the SS upon receiving an event triggered measurement report. The verification of this functionality is covered by other subclauses.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into UTRAN U10 state and PS RAB with HS-DSCH active in cell 1. If the UE does not require compressed mode (refer ICS/IXIT), then go to step 1c. |
| 1a | ← | | PHYSICAL CHANNEL RECONFIGURATION | Compressed mode pattern sequence parameters are loaded to UE. |
| 1b | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 1c | ← | | MEASUREMENT CONTROL | SS provides GSM RSSI measurement control parameters to UE. Compressed mode for GSM RSSI measurement is started if required as per UE capabilities. |
| 1d | → | | MEASUREMENT REPORT | UE reports measurement results of GSM RSSI measurement to SS. |
| 2 | SS | | | The SS configures a traffic channel on cell 9 (GSM cell): for GSM AMR (M = 1); or |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND-GSM | Send on cell 1 (UTRAN cell) and the message indicates: |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 5 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 6 | → | | HANDOVER ACCESS | |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | ← | | PHYSICAL INFORMATION | |
| 10 | → | | SABM | |
| 11 | ← | | UA | |
| 12 | → | | HANDOVER COMPLETE | The SS receives the message on the traffic channel of GSM cell. |
| 13 | → | | GPRS SUSPENSION REQUEST | UE sends GPRS SUSPENSION REQUEST on FACCH.Suspension cause value is not checked |
| 14 | ← | | CHANNEL RELEASE | SS disconnects the CS call and releases the RR connection. The GPRS Resumption IE is included and is set to “resumption of GPRS services successfully acknowledged.” |
| 15 | → | | ROUTING AREA UPDATE REQUEST | GMM “update type” = ‘combined RA/LA updating’ |
| 16 | ← | | ROUTING AREA UPDATE ACCEPT | GMM. P-TMSI is included |
| 17 | → | | ROUTING AREA UPDATE COMPLETE | |
| 18 | ← | | MODIFY PDP CONTEXT REQUEST | SS requests the modification of a PDP context, with a new QoS (peak throughput is changed to ‘0011’) |
| A19 | → | | MODIFY PDP CONTEXT ACCEPT | UE behaviour type A: Accept the PDP context modification |
| B19 | → | | DEACTIVATE PDP CONTEXT REQUEST | UE behaviour type B: Initiate the PDP context deactivation. Cause set to 'QoS not accepted' |
| B19a | ← | | DEACTIVATE PDP CONTEXT ACCEPT | UE behaviour type B: Accept the PDP context deactivation. |
| B19b | → | | DETACH REQUEST | UE behaviour type B: A non-auto attach UE may (optionally) send a Detach Request. The SS shall wait up to 'T3390' seconds for the Detach Request. |
| B19c | ← | | DETACH ACCEPT | If the UE transmitted a Detach Request message in step B20b then the SS responds with a Detach Accept message. |

Specific message contents

PHYSICAL CHANNEL RECONFIGURATION (Step 1a)

Use the same message sub-type as in TS 34.108 titled "Speech in CS", with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Downlink information common for all radio links | |
| - DPCH compressed mode info | |
| - TGPSI | 1 |
| - TGPS Status Flag | Deactivate |
| - TGCFN | Not present |
| - Transmission gap pattern sequence configuration parameters | |
| - TGMP | GSM Carrier RSSI Measurement |
| - TGPRC | Infinity |
| - TGSN | 4 |
| - TGL1 | 7 |
| - TGL2 | Not present |
| - TGD | Undefined |
| - TGPL1 | 12 |
| - RPP | Mode 0 |
| - ITP | Mode 0 |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) |
| - Downlink compressed mode method | SF/2 |
| - Uplink compressed mode method | HLS |
| - Downlink frame type | A |
| - DeltaSIR1 | 20 (2.0) |
| - DeltaSIRAfter1 | 10 (1.0) |
| - DeltaSIR2 | Not Present |
| - DeltaSIR2After2 | Not Present |
| - N identify abort | Not Present |
| - T Reconfirm abort | Not Present |
| - TGPSI | 2 |
| - TGPS Status Flag | Deactivate |
| - TGCFN | Not present |
| - Transmission gap pattern sequence configuration parameters | |
| - TGMP | GSM Initial BSIC identification |
| - TGPRC | Infinity |
| - TGSN | 4 |
| - TGL1 | 7 |
| - TGL2 | Not present |
| - TGD | Undefined |
| - TGPL1 | 8 |
| - RPP | Mode 0 |
| - ITP | Mode 0 |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) |
| - Downlink compressed mode method | SF/2 |
| - Uplink compressed mode method | HLS |
| - Downlink frame type | A |
| - DeltaSIR1 | 20 (2.0) |
| - DeltaSIRAfter1 | 10 (1.0) |
| - DeltaSIR2 | Not Present |
| - DeltaSIR2After2 | Not Present |
| - N identify abort | 128 |
| - T Reconfirm abort | Not Present |

MEASUREMENT CONTROL (Step 1c)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| - New inter-RAT cells | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 (0 dB) |
| - Cell selection and re-selection info | Not present |
| - BSIC | Value set to correspond with HANDOVER COMMAND IEs seen in TS 51.010 clause 26.6.5.1 M=2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value the same as HANDOVER COMMAND in TS 51.010 clause 26.6.5.1 M=2 (dependant on band used) |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 (0 dB) |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not present |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | not required |
| - inter-RAT reporting quantity | |
| UTRAN estimated quality | FALSE |
| CHOICE system | GSM |
| - Observed time difference to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| - Reporting cell status | |
| CHOICE reported cell | |
| - Reported cells within active set or within virtual active set or of the other RAT | |
| - Maximum number of reported cells | 6 |
| CHOICE report criteria | |
| - Periodical reporting criteria | |
| - Amount of reporting | Infinity |
| - Reporting interval | 4000 |
| Physical channel information elements | |
| - DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |
| - TGPS reconfiguration CFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - TGPSI | 2 |
| - TGPS status flag | Deactivate |

| Information Element | Value/remark |
|---|---|
| - TGCFN | Not present |

MEASUREMENT REPORT, if the UE requires compressed mode (refer ICS/IXIT) (Step 1d)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" |
| - Inter-RAT measured result list | |
| - CHOICE system | GSM |
| - Measured GSM cells | |
| - GSM carrier RSSI | Check to see if present |
| CHOICE BSIC | Check to see if present |
| - Observed time difference to GSM cell | Check that not present |
| - GSM carrier RSSI | Check to see if present |
| CHOICE BSIC | Non verified BSIC |
| - BCCH ARFCN | Check that is set to the correct value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Observed time difference to GSM cell | Check that not present |
| Measured results on RACH | Check that not present |
| Additional Measured results | Check that not present |
| Event results | Check that not present |

MEASUREMENT REPORT, if the UE doesn't requires compressed mode (refer ICS/IXIT) (Step 1d)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" |
| - Inter-RAT measured result list | |
| - CHOICE system | GSM |
| - Measured GSM cells | |
| - GSM carrier RSSI | Check to see if present |
| CHOICE BSIC | verified BSIC |
| - Inter-RAT cell id | Check that is set to 0 |
| - Observed time difference to GSM cell | Check that not present |
| - GSM carrier RSSI | Check to see if present |
| CHOICE BSIC | Non verified BSIC |
| - BCCH ARFCN | Check that is set to the correct value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Observed time difference to GSM cell | Check that not present |
| Measured results on RACH | Check that not present |
| Additional Measured results | Check that not present |
| Event results | Check that not present |

HANDOVER FROM UTRAN COMMAND-GSM

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | now |
| RAB Info | |
| - RAB identity | 0000 0001B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | CS domain |
| - NAS Synchronization Indicator | Not present |
| - Re-establishment timer | Use T314 |
| Inter-system message | |
| - CHOICE System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | Single GSM message |
| - Message | GSM HANDOVER COMMAND formatted and coded according to GSM specifications as Variable Length BIT STRING without Length Indicator. The first/ l*eftmost/ most significant* bit of the bit string contains bit 8 of the first octet of the GSM message. The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = speech full rate or half rate version 3 |

#### 8.3.7.14.5 Test requirement

At step 1b the SS receives a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message indicating the successful download of the compressed mode parameters.

At step 1d the SS receives a MEASUREMENT REPORT message containing the measured results of the GSM cell.

At step 5 the SS receives a handover access burst on the traffic channel of the GSM cell indicating that the UE has switched to the GSM cell.

At step 12 the SS receives a HANDOVER COMPLETE message indicating a successful handover to the GSM cell.

At step 15 SS receives ROUTING AREA UPDATE REQUEST message.

After step 18, SS should either receive DEACTIVATE PDP CONTEXT REQUEST message with cause as “Qos not accepted” or receive a MODIFY PDP CONTEXT ACCEPT message from UE.

### 8.3.7.15 Inter system handover from UTRAN/To GSM/Speech/Failure(stop of HS-DSCH reception)

#### 8.3.7.15.1 Definition

#### 8.3.7.15.2 Conformance requirement

If the UE does not succeed in establishing the connection to the target radio access technology, it shall:

1> revert back to the UTRA configuration;

NOTE: If configured for HS-DSCH while in UTRA, the UE will have still stored the IEs "Added or Reconfigured MAC-d flow" and "RB mapping Info".

…

1> transmit the HANDOVER FROM UTRAN FAILURE message setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the HANDOVER FROM UTRAN COMMAND message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "Inter-RAT handover failure" to "physical channel failure".

1> When the HANDOVER FROM UTRAN FAILURE message has been submitted to lower layer for transmission:

2> the procedure ends.

Reference(s)

TS 25.331 Clause 8.3.7.5.

8.3.7.15.3 Test purpose

To test that the UE reactivates the old configuration and uses this to transmit a HANDOVER FROM UTRAN FAILURE message to the network including IE "Inter-RAT Handover failure cause" which is set to "physical channel failure", when it receives an HANDOVER FROM UTRAN COMMAND and the connection to GSM for handover can not be established.

To verify that UE stops using the HS-PDSCH configuration after receiving the HANDOVER FROM UTRAN COMMAND.

8.3.7.15.4 Method of test

Initial conditions

System Simulator : 2 cells - Cell 1 is UTRAN, Cell 9 is GSM. GSM 51.010 clause 26.6.5.1 shall be referenced for the default parameters of cell 9.

UE: Idle state (state 2 or state 7) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Related ICS/IXIT statement(s)

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports both CS and PS

Foreseen final state of the UE

The UE is in CC state U10 on cell 1.

Test Procedure

The SS starts the UTRAN cell and brings the UE into call active state (CC state U10) with AMR with configuration [conversational/speech/uplink:12.2 DL:12.2 kbps/CS RAB + interactive/ background UL: 32kbps, DL :( max bit rate depending on UE category) PS RAB + uplink:3.4 DL3.4 kbps SRBs]. PS RAB is configured with HS-DSCH. SS activates a dedicated GSM traffic channel then sends HANDOVER FROM UTRAN COMMAND indicating a dedicated channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. When the UE does not succeed in establishing the connection to the target radio access technology it shall revert back to UTRA configuration establish the UTRA physical channel(s) used at the time for reception of HANDOVER FROM UTRAN COMMAND transmit the HANDOVER FROM UTRAN FAILURE.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into UTRAN U10 state and PS RAB with HS-DSCH active in cell 1. |
| 2 | SS | | | The SS configures a traffic channel on cell 9 (GSM cell). |
| 3 | ← | | HANDOVER FROM UTRAN COMMAND-GSM | Send on cell 1 (UTRAN cell) and the message indicates: The target channel for GSM FR in GSM Cell. |
| 4 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 5 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 6 | → | | HANDOVER ACCESS | |
| 7 | SS | | | The target GSM Traffic Channel is Switched off |
| 8 | → | | HANDOVER FROM UTRAN FAILURE | The SS receives the message via the old UTRAN configuration.<br>The cause in the IE "inter-RAT change failure" is set to "physical channel failure" |

Specific message contents

HANDOVER FROM UTRAN COMMAND-GSM

The contents of this message is identical to the HANDOVER FROM UTRAN COMMAND-GSM message specified in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Inter-system message | |
| - System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | Single GSM message |
| - Message | GSM HANDOVER COMMAND formatted as BIT STRING (1..512). The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = speech full rate or half rate version 1 |

HANDOVER FROM UTRAN FAILURE

The contents of this message is identical to the HANDOVER FROM UTRAN FAILURE message specified in [9] TS 34.108 clause 9.

### 8.3.7.15.5 Test requirement

After step 4 the SS shall receive HANDOVER FROM UTRAN FAILURE message using the old UTRA configuration. UE shall not resume HS-DSCH reception

## 8.3.7.16 Inter system handover from UTRAN/To GSM/Simultaneous CS and PS domain services/Success/TBF Establishment Success

### 8.3.7.16.1 Definition

### 8.3.7.16.2 Conformance requirement

The purpose of the inter-RAT handover procedure is to, under the control of the network, transfer a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH state. This procedure may be used when no RABs are established or when the established RABs are only in the CS domain or when the established RABs are in both CS and PS domains

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

…

For a UE in CELL_DCH state using both CS and PS Domain services the Inter-RAT handover procedure is based on measurement reports from the UE but initiated from UTRAN.

The UE performs the Inter-RAT handover from UTRA RRC Connected Mode to GSM Connected Mode first. When the UE has sent handover complete message to GSM / BSS the UE initiates a temporary block flow towards GPRS and sends a RA update request.

If the Inter-RAT handover from UTRA RRC Connected Mode to GSM Connected Mode was successful the handover is considered as successful regardless if the UE was able to establish a temporary block flow or not towards GPRS.

In case of Inter-RAT handover failure the UE has the possibility to go back to UTRA RRC Connected Mode and re-establish the connection in the state it originated from

Reference(s)

TS 25.331 Clause 8.3.7, B.6.1

### 8.3.7.16.3 Test purpose

To test that in UTRAN cell when UE is in speech call active state and PS data call is established, UE performs handover to GSM RAT(cell not supporting DTM) after receiving HANDOVER FROM UTRAN COMMAND.

### 8.3.7.16.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 9 is GPRS with BCCH. 51.010 clause 40.1.1 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9

UE: Registered Idle Mode on CS/PS (state 7) as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statements

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports UTRAN Conversational /Speech UL: 12.2kbps DL: 12.2 kbps /CS RAB+ Interactive or Background UL: 64kbps DL: 64kbps /PS RAB + uplink: 3.4 DL: 3.4 kbps SRBs
- UE supports UE operation mode A: PS and CS simultaneously
- UE supports GPRS operation mode class B
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810

Foreseen final state of the UE

UE is in packet Idle mode on cell 9

Test Procedure

The SS brings the UE into call active state (CC state U10) with conversational/speech /uplink: 12.2 DL: 12.2 kbps/CS RAB + UL: 3.4 DL: 3.4 kbps SRBs. During call active state, SS configures PS RAB with Interactive or Background/UL: 64 kbps DL: 64 kbps configuration. The SS configures an appropriate traffic channel on the GSM cell. SS sends a HANDOVER FROM UTRAN COMMAND indicating the traffic channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel of the GSM cell. The SS checks whether the handover is performed by checking that the UE transmits the HANDOVER COMPLETE message to the SS in GSM cell. SS receives GPRS SUSPENSION REQUEST from the UE.

SS disconnects the CS call and releases the RR connection.

Once RR connection is released, an RAU procedure is performed. To check that PDP context is active, SS sends MODIFY PDP CONTEXT REQUEST and assigns new QoS in GPRS cell. The UE may or may not accept the new QoS and replies to the SS accordingly.

**Expected sequence**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ↔ | | | The SS brings the UE into UTRAN U10 state in cell 1 with configuration: Conversational/Speech/uplink: 12.2 DL: 12.2 kbps/CS RAB + uplink: 3.4 DL: 3.4 kbps SRBs |
| 2 | ↔ | | SS executes Procedure P19 (clause 7.4.2.8.1.2) specified in TS 34.108 | Session Setup is initiated from UE side. PS RAB configuration is Interactive/Background UL: 64 kbps DL: 64 kbps/PS RAB + UL: 3.4kbps DL: 3.4kbps SRBs |
| 3 | | | SS | The SS configures a traffic channel on cell 9 for GSM FR |
| 4 | ← | | HANDOVER FROM UTRAN COMMAND | Send on cell 1 (UTRAN cell) and the message indicates: the target channel for GSM |
| 5 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 6 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | → | | HANDOVER ACCESS | |
| 10 | ← | | PHYSICAL INFORMATION | |
| 11 | → | | SABM | |
| 12 | ← | | UA | |
| 13 | → | | HANDOVER COMPLETE | The SS receives the message on the traffic channel of GSM cell. |
| 14 | → | | GPRS SUSPENSION REQUEST | UE sends GPRS SUSPENSION REQUEST on FACCH.Suspension cause value is not checked |
| 15 | ← | | CHANNEL RELEASE | SS disconnects the CS call and releases the RR connection. The GPRS Resumption IE is included and is set to “resumption of GPRS services successfully acknowledged.” |
| 16 | → | | ROUTING AREA UPDATE REQUEST | GMM “update type” = ‘combined RA/LA updating’ |
| 17 | ← | | ROUTING AREA UPDATE ACCEPT | GMM. P-TMSI is included |
| 18 | → | | ROUTING AREA UPDATE COMPLETE | |
| 19 | ← | | MODIFY PDP CONTEXT REQUEST | SS requests the modification of a PDP context, with a new QoS ( peak throughput is changed to ‘0011’) |
| A20 | → | | MODIFY PDP CONTEXT ACCEPT | UE behaviour type A: Accept the PDP context modification |
| B20 | → | | DEACTIVATE PDP CONTEXT REQUEST | UE behaviour type B: Initiate the PDP context deactivation. Cause set to 'QoS not accepted' |
| B20a | ← | | DEACTIVATE PDP CONTEXT ACCEPT | UE behaviour type B: Accept the PDP context deactivation. |
| B20b | → | | DETACH REQUEST | UE behaviour type B: A non-auto attach UE may (optionally) send a Detach Request. The SS shall wait up to 'T3390' seconds for the Detach Request. |
| B20c | ← | | DETACH ACCEPT | If the UE transmitted a Detach Request message in step B20b then the SS responds with a Detach Accept message. |

Specific message contents

HANDOVER FROM UTRAN COMMAND (step 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| RAB Info | |
| - RAB identity | 0000 0001B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | CS domain |
| - NAS Synchronization Indicator | Not present |
| - Re-establishment timer | Use T314 |
| Inter-system message | |
| - CHOICE System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | GSM message List |
| - Message | GSM HANDOVER COMMAND formatted and coded according to GSM specifications as BIT STRING (1..512). The first/ l*eftmost/ most significant* bit of the bit string contains bit 8 of the first octet of the GSM message. The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND for M = 2 in clause 26.6.5.1 of GSM 51.010, except that the CHANNEL MODE IE is included with value = speech full rate |

### 8.3.7.16.5 Test requirements

At step 6 the SS receives a handover access burst on the traffic channel of the GSM cell indicating that the UE has switched to the GSM cell.

At step 13 the SS receives a HANDOVER COMPLETE message indicating a successful handover to the GSM cell.

At step 16 SS receives ROUTING AREA UPDATE REQUEST message.

After step 19, SS should either receive DEACTIVATE PDP CONTEXT REQUEST message with cause as “Qos not accepted” or receive a MODIFY PDP CONTEXT ACCEPT message from UE.

### 8.3.7.17 Inter system handover from UTRAN/To GSM/DTM Support/Simultaneous CS and PS domain services/Success

#### 8.3.7.17.1 Definition

#### 8.3.7.17.2 Conformance requirement

The purpose of the inter-RAT handover procedure is to, under the control of the network, transfer a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH state. This procedure may be used when no RABs are established or when the established RABs are only in the CS domain or when the established RABs are in both CS and PS domains

The UE shall be able to receive a HANDOVER FROM UTRAN COMMAND message and perform an inter-RAT handover, even if no prior UE measurements have been performed on the target cell.

…

For a UE in CELL_DCH state using both CS and PS Domain services the Inter-RAT handover procedure is based on measurement reports from the UE but initiated from UTRAN.

The UE performs the Inter-RAT handover from UTRA RRC Connected Mode to GSM Connected Mode first. When the UE has sent handover complete message to GSM / BSS the UE initiates a temporary block flow towards GPRS and sends a RA update request.

If the Inter-RAT handover from UTRA RRC Connected Mode to GSM Connected Mode was successful the handover is considered as successful regardless if the UE was able to establish a temporary block flow or not towards GPRS.

In case of Inter-RAT handover failure the UE has the possibility to go back to UTRA RRC Connected Mode and re-establish the connection in the state it originated from

…

The establishment of a packet resource is supported by procedures on the main DCCH when the mobile station is in dedicated mode. The procedures are only applicable to a mobile station supporting DTM with GPRS or EGPRS. The procedures are optional for the network.

These procedures constitute a complement to the corresponding procedures for temporary block flow establishment using CCCH or PCCCH while in idle mode defined in 3GPP TS 04.18 and 3GPP TS 04.60, respectively

…

While in dedicated mode, upper layers in the mobile station or in the network may request the transport of GPRS information transparently over the radio interface. This procedure is only applicable when:

- the information from upper layers is signalling information; and
- the GTTP length of the message is below the maximum indicated by the network.

In any other case, the RR procedures related to packet resource establishment while in dedicated mode apply.

The information from upper layers shall be carried inside the GTTP Information message. The GTTP Information message contains:

- the TLLI of the MS; and
- the LLC PDU.

The GTTP messages are sent using "normal" priority at the data link layer.Reference(s)

TS 25.331 Clause 8.3.7, B.6.1, TS 04.18 Clause 3.4.26

#### 8.3.7.17.3 Test purpose

To verify that in UTRAN cell when UE (supporting DTM) is in speech call active state and PS data call is established, UE performs handover to GSM RAT after receiving HANDOVER FROM UTRAN COMMAND.

8.3.7.17.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 9 is GPRS with BCCH. 51.010 clause 40.1.1 shall be referenced for the default parameters, and clause 26.6.5.1 shall be referenced for cell allocation of cell 9

DTM support is indicated in SI6 for cell 9. MAX_LAPDm is set to 111.

UE: Registered Idle Mode on CS/PS (state 7) as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statements

- UE supports both GSM and UTRAN Radio Access Technologies,
- UE supports UTRAN Conversational /Speech UL: 12.2kbps DL: 12.2 kbps /CS RAB+ Interactive or Background UL: 64kbps DL: 64kbps /PS RAB + uplink: 3.4 DL: 3.4 kbps SRBs
- UE supports UE operation mode A: PS and CS simultaneously
- UE supports DTM
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810

Foreseen final state of the UE

UE is in CC state U10 and packet Idle mode on cell 9

Test Procedure

The SS brings the UE into call active state (CC state U10) with conversational/speech /uplink: 12.2 DL: 12.2 kbps/CS RAB + UL: 3.4 DL: 3.4 kbps SRBs. During call active state, SS configures PS RAB with Interactive or Background/UL: 64 kbps DL: 64 kbps configuration. The SS configures an appropriate traffic channel on the GSM cell. SS sends a HANDOVER FROM UTRAN COMMAND indicating the traffic channel of the target GSM cell to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel of the GSM cell. The SS checks whether the handover is performed by checking that the UE transmits the HANDOVER COMPLETE message to the SS in GSM cell. The RAU procedure is perfomed.

To check that PDP context is active, SS sends MODIFY PDP CONTEXT REQUEST and assigns new QoS in GPRS cell. The UE may or may not accept the new QoS and replies to the SS accordingly.

**Expected sequence**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ↔ | | | The SS brings the UE into UTRAN U10 state in cell 1 with configuration: Conversational/Speech/uplink: 12.2 DL: 12.2 kbps/CS RAB + uplink: 3.4 DL: 3.4 kbps SRBs |
| 2 | ↔ | | SS executes Procedure P19 (clause 7.4.2.8.1.2) specified in TS 34.108 | Session Setup is initiated from UE side. PS RAB configuration is Interactive/Background UL: 64 kbps DL: 64 kbps/PS RAB + UL: 3.4kbps DL: 3.4kbps SRBs |
| 3 | ↔ | | SS | The SS configures a traffic channel on cell 9 for GSM FR |
| 4 | ← | | HANDOVER FROM UTRAN COMMAND | Send on cell 1 (UTRAN cell) and the message indicates: the target channel for GSM |
| 5 | UE | | | The UE accepts the handover command and switches to the GSM traffic channel specified in the HANDOVER FROM UTRAN COMMAND-GSM |
| 6 | → | | HANDOVER ACCESS | The SS receives this burst on the traffic channel of cell 9 (GSM cell) It implies that the UE has switched to GSM cell. |
| 7 | → | | HANDOVER ACCESS | |
| 8 | → | | HANDOVER ACCESS | |
| 9 | → | | HANDOVER ACCESS | |
| 10 | ← | | PHYSICAL INFORMATION | |
| 11 | → | | SABM | |
| 12 | ← | | UA | |
| 13 | → | | HANDOVER COMPLETE | The SS receives the message on the traffic channel of GSM cell. |
| 14 | ← | | DTM INFORMATION | MAX_LAPDm set to 111. |
| 15 | → | | GPRS INFORMATION | Contains the ROUTING AREA UPDATE REQUEST message. |
| 16 | ← | | GPRS INFORMATION | Contains the ROUTING AREA UPDATE ACCEPT message, reallocating the UEs P-TMSI to C2345678Hex. |
| 17 | → | | GPRS INFORMATION | Contains the ROUTING AREA UPDATE COMPLETE message. |
| 18 | ← | | GPRS INFORMATION | Contains the MODIFY PDP CONTEXT REQUEST to request the modification of a PDP context, with a new QoS ( peak throughput is changed to '0011') |
| A19 | → | | GPRS INFORMATION | Contains the MODIFY PDP CONTEXT ACCEPT to accept the PDP Context modification. |
| B19 | → | | GPRS INFORMATION | Contains the DEACTIVATE PDP CONTEXT REQUEST. Cause set to 'QoS not accepted' |
| B20 | ← | | GPRS INFORMATION | Contains the DEACTIVATE PDP CONTEXT ACCEPT to accept the PDP context deactivation. |
| | | | | Steps B21-B22 are optional |
| B21 (Optional) | → | | GPRS INFORMATION | Contains the DETACH REQUEST. This is sent optionally by a non-auto attach UE. behaviour type B: The SS shall wait up to 'T3390' seconds for the DETACH REQUEST. |
| B22 (Optional) | ← | | GPRS INFORMATION | Contains the DETACH ACCEPT. |

NOTE: The UE follows either branch A or B after step 18

Specific message contents

HANDOVER FROM UTRAN COMMAND (step 4)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| RAB Info | |
| - RAB identity | 0000 0001B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | CS domain |
| - NAS Synchronization Indicator | Not present |
| - Re-establishment timer | Use T314 |
| Inter-system message | |
| - CHOICE System type | GSM |
| - Frequency Band | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - CHOICE GSM message | GSM message List |
| - Message | GSM HANDOVER COMMAND formatted and coded according to GSM specifications as BIT STRING (1..512). The first/ l*eftmost/ most significant* bit of the bit string contains bit 8 of the first octet of the GSM message. The contents of the HANDOVER COMMAND see next table. |

HANDOVER COMMAND

| |
|---|
| Same as the HANDOVER COMMAND in clause 26.6.5.1 of TS 3GPP 51.010-1. |

#### 8.3.7.17.5 Test requirements

At step 6 the SS receives a handover access burst on the traffic channel of the GSM cell indicating that the UE has switched to the GSM cell.

At step 13 the SS receives a HANDOVER COMPLETE message indicating a successful handover to the GSM cell.

At step 15 SS receives ROUTING AREA UPDATE REQUEST message.

After step 18, SS should either receive DEACTIVATE PDP CONTEXT REQUEST message with cause as “Qos not accepted” or receive a MODIFY PDP CONTEXT ACCEPT message from UE

## 8.3.8 Inter system cell reselection to UTRAN

[Editor's note: This test is FFS until R2000 core specification will be defined.]

## 8.3.9 Inter system cell reselection from UTRAN

If not specified differently in the individual tests of this group, the Contents of System Information Block type 12 (FDD) shall be as specified in the following table:

| | |
|---|---|
| - FACH measurement occasion info | Not Present |
| - Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present<br>Absence of this IE is equivalent to default value 1 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal removeNoIntraFreqCells: | NULL |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0dB |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 of 3GPP TS 34.108. |
| - Primary CPICH TX power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not present<br>For neigbouring cell, if HCS is not used and all the parameters in cell selection and re-selection info are Default value, this IE is absent. |
| - Intra-frequency cell id | 3 |
| - Cell info | Same content as specified for Intra-frequency cell id=2 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 of 3GPP TS 34.108. |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | Not present<br>Absence of this IE is equivalent to the default value 0 |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity for RACH Reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronization information reporting indicator | FALSE |
| - Cell identity reporting indicator | TRUE |
| - CHOICE mode | FDD |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronization information reporting indicator | TRUE |
| - Cell identity reporting indicator | TRUE |
| - CHOICE mode | FDD |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |

| | |
|---|---|
| - Reporting quantities for detected set cells | Not Present |
| - Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Intra-frequency measurement reporting criteria | |
| - Parameters required for each event | 3 kinds |
| - Intra-frequency event identity | 1a |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Monitored set cells |
| - Reporting Range Constant | 10 (5 dB) |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | 10 (1.0) |
| - Hysteresis | 0 (0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | 2 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 640 |
| - Amount of reporting | 4 |
| - Reporting interval | 4 000 |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Intra-frequency event identity | 1b |
| - Triggering condition 1 | Active set cells |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | 10 (5 dB) |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | 10 (1.0) |
| - Hysteresis | 0 (0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 640 |
| - Amount of reporting | Not Present |
| - Reporting interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Intra-frequency event identity | 1c |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | Not Present |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | Not Present |
| - Hysteresis | 0 (0.0) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | 3 |
| - Time to trigger | 640 |
| - Amount of reporting | 4 |
| - Reporting interval | 4 000 |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - CHOICE Inter-frequency cell removal | Not present<br>(This IE shall be ignored by the UE for SIB11) |
| - New inter-frequency cells | |
| - Inter frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | FDD |

| | |
|---|---|
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to apply the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [11] |
| - UARFCN downlink(Nd) | Reference to table 6.1.2 of 3GPP TS 34.108 for Cell 4 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.4 (FDD)" in clause 6.1.4 of 3GPP TS 34.108. |
| - Primary CPICH Tx power | Not present |
| - TX Diversity Indicator | FALSE |
| - Cell Selection and Re-selection Info | Not present (same values as for serving cell applies) |
| - Inter frequency cell id | 5 |
| - Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Not present.<br>Absence of this IE is equivalent to apply the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [11] |
| - UARFCN downlink(Nd) | Reference to table 6.1.2 of 3GPP TS 34.108 for Cell 5 |
| - Cell info | Same content as specified for Inter-frequency cell id=4 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.5 (FDD)" in clause 6.1.4 of 3GPP TS 34.108. |
| - Inter frequency cell id | 6 |
| - Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to apply the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [11] |
| - UARFCN downlink(Nd) | Reference to table 6.1.2 of 3GPP TS 34.108 for Cell 6 |
| - Cell info | Same content as specified for Inter-frequency cell id=4 with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.6 (FDD)" in clause 6.1.4 |
| - Cell for measurement | Not present |
| - Inter-RAT measurement system information | Not Present |
| - Inter-RAT measurement system information | |
| - Inter-RAT cell info list | |
| - CHOICE Inter-RAT cell removal | Not Present<br>(This IE shall be ignored by the UE for SIB11) |
| - New inter-RAT cells | |
| - Inter-RAT cell id | 9 |
| - CHOICE Radio Access Technology | GSM |
| - GSM | |
| - Cell individual offset | 0 (0 dB) |
| - Cell selection and re-selection info | Not Present |
| - BSIC | |
| - Base transceiver Station Identity Code (BSIC) | Reference to table 6.1.10 of 3GPP TS 34.108. for Cell 9 |
| - Band indicator | According to PICS/PIXIT |
| - BCCH ARFCN | Reference to table 6.1.10 of 3GPP TS 34.108. for Cell 9 |
| - Inter-RAT cell id | 10 |
| - CHOICE Radio Access Technology | GSM |
| - GSM | |
| - Cell individual offset | 0 (0 dB) |
| - Cell selection and re-selection info | Not Present |

| | |
|---|---|
| - BSIC<br>- Base transceiver Station Identity Code (BSIC) | Reference to table 6.1.10 for Cell 10 |
| - Band indicator | According to PICS/PIXITs |
| - BCCH ARFCN | Reference to table 6.1.10 of 3GPP TS 34.108. for Cell 10 |
| - Cell for measurement | Not present |

## 8.3.9.1 Cell reselection if cell becomes barred or S<0; UTRAN to GPRS (CELL_FACH)

### 8.3.9.1.1 Definition

Test to verify that if both a GSM/GPRS and UTRAN network is available, the UE performs cell reselection from UTRAN to GSM/GPRS if the UTRAN cell becomes barred or S falls below zero.

### 8.3.9.1.2 Conformance requirement

1. The purpose of the inter-RAT cell reselection procedure from UTRAN is to transfer, under the control of the UE and to some extent the UTRAN, a connection between the UE and UTRAN to another radio access technology (e.g. GSM/GPRS).

2. This procedure is applicable in states CELL_FACH, CELL_PCH or URA_PCH. When the UE based on received system information makes a cell reselection to a radio access technology other than UTRAN, e.g. GSM/GPRS, according to the criteria specified in [4], the UE shall:

1> If the NAS procedures associated with inter-system change specified in [5] require the establishment of a connection:

2> initiate the establishment of a connection to the target radio access technology according to its specifications.

3. When the UE has succeeded in reselecting a cell in the target radio access technology, the UE shall:

1> release all UTRAN specific resources.

#### References

TS 25.331, clause 8.3.9

### 8.3.9.1.3 Test purpose

1. To verify that the UE performs reselection from UTRAN to GPRS in the state CELL_FACH on the following occasions:

   - Serving cell becomes barred.

   - S<0 for serving cell.

2. To verify when the UE has succeeded in reselecting a cell in the target radio access technology and has initiated the establishment of a connection, it shall release all UTRAN specific resources.

### 8.3.9.1.4 Method of test

#### Initial conditions

System Simulator: 3 cells – Cell 1 is UTRAN FDD, Cell 2 is GPRS and Cell 3 is GSM. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 2. 51.010 clause 26.6.5.1 shall be referenced for the default parameters of cell 3. When executing the test in FDD band II or FDD band VIII cell 1 shall use the low range UARFCN, defined in TS 34.108 clause 5.1.1. This is to avoid the FDD band overlapping with the GSM band under test.

All cells belong to the same PLMN . UTRAN and GPRS cells belong to different location area.

The Inter-RAT Cell Info List of Cell 1 (UTRAN) refers to Cell 2 (GPRS) and Cell 3 (GSM).

The 3G Neighbour Cell Description of Cell 2 (GPRS) and Cell 3 (GSM) refers to Cell 1 (UTRAN).

UE: Power-Off (State 1) as specified in clause 7.4 of TS 34.108.

In SIB3 and SIB4 the IE "$S_{searchRAT}$", is set to value "20dB" in Cell 1 (UTRAN).

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-850, GSM-PCS, GSM-710, GSM 750, T_GSM-810

Step a-c:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Test Channel | | 1 |
| CPICH Ec (FDD) | dBm / 3.84 MHz | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 |
| Srxlev* | dB | 19 |
| CellBarred | | Not barred |

| Parameter | Unit | Cell 2 (GPRS) |
|---|---|---|
| Test Channel | | 1 |
| RF Signal Level | dBm | -75 |
| RXLEV_ACCESS_MIN | dBm | -100 |
| C1* | dBm | 25 |
| FDD_Qmin | dB | -20 |
| FDD_Qoffset | dBm | 0 |

| Parameter | Unit | Cell 3 (GSM) |
|---|---|---|
| Test Channel | | 2 |
| RF Signal Level | dBm | -85 |
| RXLEV_ACCESS_MIN | dBm | -100 |
| C1* | dBm | 15 |
| FDD_Qmin | dB | -20 |
| FDD_Qoffset | dBm | 0 |

Step d-f:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| CellBarred | | Not barred -> Barred |
| Tbarred | S | 80 |

Step i:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| **CPICH Ec (FDD)** | **dBm / 3.84 MHz** | **-60 -> -90** |
| P-CCPCH RSCP (TDD) | dBm | -60 -> -90 |
| Srxlev* | dB | 19 -> -11 |

Test procedure

a) The SS activates cells 1, 2, and 3. The SS monitors cells 1, 2 and 3 for random access requests from the UE.

b) The UE is switched on.

c) The SS brings the UE to PS-DCCH+DTCH_FACH (State 6-11). SS then sends SystemInformation Type 11 and 12 with FACH Measurement Occasions.

d) The SS sets Cell 1 to be barred.

e) The SS sends SYSTEM INFORMATION CHANGE INDICATION message to UE to inform UE of the modification in the system information.

f) The SS waits for channel request from the UE SS sends an IMMEDIATE ASSIGNMENT REJECT to bring the UE to idle mode..

g) The SS pages the UE with PAGING TYPE 2 in Cell 1 (UTRAN), if UE does not respond by transmitting an upper layer message to answer this page, it means UE has released the UTRAN resources.

h) The UE is switched off.

i) Step a-h) is repeated with the same initial conditions except that in step d) and e), the signal level is reduced, so S will become negative instead of being barred.

Specific Message Contents

RADIO BEARER SETUP (Step c)

Use the same message as specified for PS-DCCH+DTCH_FACH (state 6-11) in clause 7.4 of TS 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '0000 0000 0000 0001' |

System Information Block type 11 (Step c)

Use the message type reference found in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | FALSE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | GSM |

System Information Block type 12 (Step c)

Use the message type reference found in clause 8.3.9 of TS 34.123-1, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | FALSE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | GSM |

### 8.3.9.1.5 Test Requirements

In step f), the UE shall respond on Cell 2

In step g), the UE shall not respond in UTRAN cell.

In step i), the UE shall respond on Cell 2 after the signal level is reduced.

## 8.3.9.2 Cell reselection if cell becomes barred or S<0; UTRAN to GPRS (URA_PCH)

### 8.3.9.2.1 Definition

Test to verify that if both a GSM/GPRS and UTRAN network is available, the UE performs cell reselection from UTRAN to GSM/GPRS if the UTRAN cell becomes barred or S falls below zero.

### 8.3.9.2.2 Conformance requirement

1. The purpose of the inter-RAT cell reselection procedure from UTRAN is to transfer, under the control of the UE and to some extent the UTRAN, a connection between the UE and UTRAN to another radio access technology (e.g. GSM/GPRS).

2. This procedure is applicable in states CELL_FACH, CELL_PCH or URA_PCH.

   When the UE based on received system information makes a cell reselection to a radio access technology other than UTRAN, e.g. GSM/GPRS, according to the criteria specified in [4], the UE shall.

1> If the NAS procedures associated with inter-system change specified in [5] require the establishment of a connection:

   2> initiate the establishment of a connection to the target radio access technology according to its specifications.

3. When the UE has succeeded in reselecting a cell in the target radio access technology, the UE shall:

   1> release all UTRAN specific resources.

#### References

TS 25.331, clause 8.3.9

### 8.3.9.2.3 Test purpose

To verify that the UE performs reselection from UTRAN to GPRS in the state URA_PCH on the following occasions:

- Serving cell becomes barred.
- S<0 for serving cell.

### 8.3.9.2.4 Method of test

#### Initial conditions

System Simulator: 2 cells – Cell 1 is UTRAN FDD, Cell 9 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 9.

All cells belong to the same PLMN . UTRAN and GPRS cells belong to different location area.

The Inter-RAT Cell Info List of Cell 1 (UTRAN) refers to Cell 9 (GPRS).

The 3G Neighbour Cell Description of Cell 9 (GPRS) refers to Cell 1 (UTRAN)

UE: Power-Off (State 1) as specified in clause 7.4 of TS 34.108.

#### Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH,

Step a-c:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Test Channel | | 1 |
| CPICH Ec (FDD) | dBm | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 |
| Qrxlevmin | dBm | -101 |
| Srxlev* | dBm | 41 |
| CellBarred | | Not barred |

| Parameter | Unit | Cell 9 (GPRS) |
|---|---|---|
| Test Channel | | 1 |
| RF Signal Level | dBm | -80 |
| RXLEV_ACCESS_MIN | dBm | -100 |
| C1* | dBm | 20 |
| FDD_Qmin | dB | -20 |
| FDD_Qoffset | dBm | 0 |

Step d-f:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| CellBarred | | Not barred -> Barred |
| Tbarred | s | 80 |

Step i:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Qrxlevmin | dB | -101 -> -41 |
| Srxlev* | dB | 40 -> -20 |

Test procedure

a) The SS activates cells 1 and 9. The SS monitors cells 1 and 9 for random access requests from the UE.

b) The UE is switched on.

c) The SS brings the UE to URA_PCH (State 6-13).

d) The SS sets Cell 1 to be barred.

e) The SS sends Paging Type1 message to UE to inform UE of the modification in the system information.f) The SS waits for channel request from the UE to establish Temporary Block flow

g) The SS pages the UE with PAGING TYPE 1 in cell 1 (UTRAN), if UE does not respond withCell Update with cause ‘Paging Response’, it means UE has released the UTRAN resources.

h) The UE is switched off.

i) Step a-e) is repeated with the same initial conditions except that in step d), Qrxlevmin is increased, so S will become negative instead of being barred.

#### 8.3.9.2.5 Test Requirements

In step f), the UE shall respond on Cell 9.

In step g), the UE shall not respond in UTRAN cell.

In step i), the UE shall respond on Cell 9 after Qrxlevmin is increased.

## 8.3.9.3 Cell reselection if cell rank changes; UTRAN to GPRS (UE in CELL_FACH fails to complete an inter-RAT cell reselection)

### 8.3.9.3.1 Definition

### 8.3.9.3.2 Conformance requirement

If the inter-RAT cell reselection fails, the UE shall:

1> resume the connection to UTRAN using the resources used before initiating the inter-RAT cell reselection procedure.

References

TS 25.331, clause 8.3.9.4

### 8.3.9.3.3 Test purpose

To verify if the inter-RAT cell reselection fails before the UE in CELL_FACH succeeds in initiating the establishment of a connection to the GPRS cell, the UE shall:

- resume the connection to UTRAN using the resources used before initiating the inter-RAT cell reselection procedure.

### 8.3.9.3.4 Method of test

Initial conditions

System Simulator: 2 cells – Cell 1 is UTRAN FDD, Cell 9 is GPRS with PBCCH. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 9.

All cells belong to the same PLMN.

The Inter-RAT Cell Info List of Cell 1 (UTRAN) refers to Cell 9 (GPRS).

The 3G Neighbour Cell Description of Cell 9 (GPRS) refers to Cell 1 (UTRAN)

UE: Power-Off (State 1) (UTRAN) as specified in clause 7.4 of TS 34.108.

In SIB3 and SIB4 the IE "$S_{searchRAT}$", is set to value "20dB" in Cell 1 (UTRAN).

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-850, GSM-PCS, GSM-710, GSM 750, T_GSM-810.

Step a-c:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Test Channel | | 1 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 |
| $Treselection_s$ | s | 5 |
| R* | dB | -58 |
| CellBarred | | Not barred |

| Parameter | Unit | Cell 9 (GPRS) |
|---|---|---|
| Test Channel | | 1 |
| RF Signal Level | dBm | -80 |
| R* | dB | -80 |
| CellBarred | | barred |

Step d:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| CPICH Ec (FDD) | dBm/3.84MHz | -60 -> -70 |
| P-CCPCH RSCP (TDD) | dBm | -60 -> -70 |
| R* | dB | -58 -> -68 |

| Parameter | Unit | Cell 9 (GPRS) |
|---|---|---|
| RF Signal Level | dBm | -80 -> -50 |
| C1* | dBm | 20 -> 50 |
| C32* | dB | 20 -> 50 |
| R* | dB | -80 -> -50 |
| CellBarred | | barred |

Test procedure

a) The SS activates cells 1 and 9. The SS monitors cells 1and 9 for random access requests from the UE.

b) The UE is switched on.

c) The SS brings the UE to PS-DCCH+DTCH_FACH (State 6-11). SS then sends SystemInformation Type 11 and 12 with FACH Measurement Occasions.

d) The SS increases RF Signal Level of the GPRS Cell to -50 dBm and decreases the CPICH of the UMTS cell to -70 dBm so that the ranking of the UMTS cell goes lower than the GPRS cell.

e) After the expiry of the timer Treselection, SS waits for 5 seconds to allow UE to read the system information for a GPRS cell and finds that the cell is barred. SS then sends SystemInformation Type 11 and 12 without FACH Measurement Occasions. Later SS calls for generic procedure C.2 in cell 1 (UTRAN) to check that UE is in CELL_FACH state. The UE resumes the connection to UTRAN using the resources used before initiating the inter-RAT cell reselection procedure.

f) The UE is switched off.

Specific Message Contents

RADIO BEARER SETUP (Step c)

Use the same message as specified for PS-DCCH+DTCH_FACH (state 6-11) in clause 7.4 of TS 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '0000 0000 0000 0001' |

Contents of System Information Block type 11 (FDD, Step c)

Use the same message type found in clause 6.1.0b of TS 34.108, with the following exceptions:

| | | |
|---|---|---|
| - FACH measurement occasion info | | |
| - FACH Measurement occasion cycle length coefficient | | 3 |
| - Inter-frequency FDD measurement indicator | | FALSE |
| - Inter-frequency TDD measurement indicator | | FALSE |
| - Inter-RAT measurement indicators | | |
| - RAT-Type | | GSM |

Contents of System Information Block type 12 (FDD,Step c)

Use the message type reference found in clause 8.3.9 of TS 34.123-1, with the following exceptions:

| | |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | FALSE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | |
| - **RAT-Type** | GSM |

#### 8.3.9.3.5 Test Requirements

After step e, the UE remains in CELL_FACH in cell 1.

### 8.3.9.4 Cell reselection if S<0; UTRAN to GPRS (UE in CELL_PCH fails to complete an inter-RAT cell reselection)

#### 8.3.9.4.1 Definition

#### 8.3.9.4.2 Conformance requirement

If the inter-RAT cell reselection fails, the UE shall:

1> resume the connection to UTRAN using the resources used before initiating the inter-RAT cell reselection procedure.

References

TS 25.331, clause 8.3.9.4

#### 8.3.9.4.3 Test purpose

To verify if the inter-RAT cell reselection fails before the UE in CELL_PCH succeeds in initiating the establishment of a connection to the GPRS cell, the UE shall:

- resume the connection to UTRAN using the resources used before initiating the inter-RAT cell reselection procedure.

#### 8.3.9.4.4 Method of test

Initial conditions

System Simulator: 2 cells – Cell 1 is UTRAN FDD, Cell 9 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 9.

All cells belong to the same PLMN.

The Inter-RAT Cell Info List of Cell 1 (UTRAN) refers to Cell 9 (GPRS).

The 3G Neighbour Cell Description of Cell 9 (GPRS) refers to Cell 1 (UTRAN).

UE: Power-Off (State 1) (UTRAN) as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480,

Step a-c:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Test Channel | | 1 |
| CPICH Ec (FDD) | dBm | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 |
| Qrxlevmin | dBm | -101 |
| $Treselection_s$ | s | 5 |
| Srxlev* | dBm | 41 |
| CellBarred | | Not barred |

| Parameter | Unit | Cell 9 (GPRS) |
|---|---|---|
| Test Channel | | 1 |
| RF Signal Level | dBm | -80 |
| RXLEV_ACCESS_MIN | dBm | -100 |
| C1* | dBm | 20 |
| FDD_Qmin | dB | -20 |
| FDD_Qoffset | dBm | 0 |
| CellBarred | | barred |

Step d:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Qrxlevmin | dB | -101 -> -41 |
| Srxlev* | dB | 41 -> -19 |

Step f:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Qrxlevmin | dB | -41 -> -101 |
| Srxlev* | dB | -19-> 41 |

Test procedure

a) The SS activates cells 1 and 9. The SS monitors cells 1and 9 for random access requests from the UE.

b) The UE is switched on.

c) The SS brings the UE to CELL_PCH (State 6-12).

d) The SS increases Qrxlevmin, so S will become negative.

e) The SS sends Paging Type 1 message to UE to inform UE of the modification in the system information.

f) The SS decreases Qrxlevmin, so S will become positive (After the expiry of the timer Treselection)

g) SS calls for generic procedure C.4 in cell 1 (UTRAN) to check that UE is in CELL_PCH state. The UE resumes the connection to UTRAN using the resources used before initiating the inter-RAT cell reselection procedure

#### 8.3.9.4.5 Test Requirements

In step f, the UE remains in CELL_PCH in cell 1.

### 8.3.9.5 Successful Cell Reselection with RAU – $Q_{offset}$ value modification; UTRAN to GPRS (CELL_FACH)

#### 8.3.9.5.1 Definition

#### 8.3.9.5.2 Conformance requirement

1. The purpose of the inter-RAT cell reselection procedure from UTRAN is to transfer, under the control of the UE and to some extent the UTRAN, a connection between the UE and UTRAN to another radio access technology (e.g. GSM/GPRS).

2. This procedure is applicable in states CELL_FACH, CELL_PCH or URA_PCH.

   When the UE based on received system information makes a cell reselection to a radio access technology other than UTRAN, e.g. GSM/GPRS, according to the criteria specified in [4], the UE shall.

   1> If the NAS procedures associated with inter-system change specified in [5] require the establishment of a connection:

      2> initiate the establishment of a connection to the target radio access technology according to its specifications.

3. When the UE has succeeded in reselecting a cell in the target radio access technology, the UE shall:

   1> release all UTRAN specific resources.

References

TS 25.331, clause 8.3.9

#### 8.3.9.5.3 Test purpose

To verify that the UE performs reselection correctly considering the $Q_{offset}$ value broadcast in SIB 11.

#### 8.3.9.5.4 Method of test

Initial conditions

System Simulator: 2 cells – Cell 1 is UTRAN FDD, Cell 2 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 2.

All cells belong to the same PLMN . UTRAN and GPRS cells belong to different location area.

The Inter-RAT Cell Info List of Cell 1 (UTRAN) refers to Cell 2 (GPRS).

The 3G Neighbour Cell Description of Cell 2 (GPRS) refers to Cell 1 (UTRAN).

UE: Power-Off (State 1) as specified in clause 7.4 of TS 34.108.

In SIB3 and SIB4 the IE "$S_{searchRAT}$", is set to value "20dB" in Cell 1 (UTRAN).

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-850, GSM-PCS, GSM-710, GSM 750, T_GSM-810

Step a-c:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| Test Channel | | 1 |
| CPICH Ec (FDD) | dBm | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 |
| Qrxlevmin | dBm | -101 |
| Srxlev* | dB | 41 |
| CellBarred | | Not barred |

| Parameter | Unit | Cell 2 (GPRS) |
|---|---|---|
| Test Channel | | 1 |
| RF Signal Level | dBm | -70 |
| RXLEV_ACCESS_MIN | dBm | -100 |
| C1* | dBm | 30 |
| FDD_Qmin | dB | -20 |
| FDD_Qoffset | dBm | 0 |

Step d:

| Parameter | Unit | Cell 1 (UTRAN) |
|---|---|---|
| $Qoffset1_{s,n}$ | dBm | -25 |

Test procedure

a) The SS activates cells 1 and 2. The SS monitors cells 1and 2 for random access requests from the UE.

b) The UE is switched on.

c) The SS brings the UE to PS-DCCH+DTCH_FACH (State 6-11). SS then sends SystemInformation Type 11 and 12 with FACH Measurement Occasions.d) $Q_{offset}$ value is modified at UTRAN such that it makes the GSM cell look the best.

e) The SS sends SYSTEM INFORMATION CHANGE INDICATION message to UE to inform UE of the modification in the system information.

f) Void.

g) The SS monitors for random access requests from the UE.

h) The SS pages the UE with PAGING TYPE 2 and PAGING TYPE 1 messages in Cell 1 (UTRAN), if UE does not respond by transmitting an upper layer message to answer this page, it means UE has released the UTRAN resources.

Specific Message Contents

RADIO BEARER SETUP (Step c)

Use the same message as specified for PS-DCCH+DTCH_FACH (state 6-11) in clause 7.4 of TS 34.108, except for the following:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '0000 0000 0000 0001' |

System Information Block type 11 (Step c)

Use the message type reference found in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | FALSE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | GSM |

System Information Block type 12 (Step c)

Use the message type reference found in clause 8.3.9 of TS 34.123-1, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | FALSE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | GSM |

#### 8.3.9.5.5 Test Requirements

In step g), the UE shall respond on Cell 2 and enter PACKET TRANSFER mode after performing the routing area update procedure.

In step h), the UE shall not respond in UTRAN cell.

## 8.3.11 Inter-RAT cell change order from UTRAN

### 8.3.11.1 Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Success

#### 8.3.11.1.1 Definition

#### 8.3.11.1.2 Conformance requirement

The purpose of the inter-RAT cell change order procedure is to transfer, under the control of the network, a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH and CELL_FACH state. This procedure may be used when no RABs are established or when the established RABs are only from PS domain. This procedure may not be used when there is no PS signalling connection.

The procedure is initiated when UTRAN orders a UE in CELL_DCH or CELL_FACH state, to make a cell change to a radio access technology other than UTRAN, e.g. GSM.

To initiate the procedure, UTRAN sends a CELL CHANGE ORDER FROM UTRAN message.

The UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message and perform a cell change order to another RAT, even if no prior UE measurements have been performed on the target cell.

If the variable ESTABLISHED_SIGNALLING_CONNECTIONS does not include the CN domain identity "PS domain", or if the variable ESTABLISHED_SIGNALLING_CONNECTIONS includes the CN domain identity "CS domain":

1> the UE behaviour is not specified.

The UE shall:

1> start timer T309; and

1> establish the connection to the other radio access technology, as specified within IE "Target cell description". This IE specifies the target cell identity, in accordance with the specifications for that other RAT. In case the target cell is a GSM/ GPRS cell, IE "Target cell description" may also include IE "NC mode", which specifies the cell selection mode to be applied in the target cell; and

1> if IE "NC mode" is not included in the CELL CHANGE ORDER FROM UTRAN:

2> retrieve it from the target cell as specified in [43];

2> act upon IE "NC mode" as specified in [43].

1> if the IE "RAB Information List" is included in the CELL CHANGE ORDER FROM UTRAN message:

2> ignore the contents of the IE "RAB Information List".

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification. In case of GSM/GPRS proceed according to the procedure Network control cell reselection procedure as specified in [44].

The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

Upon successful completion of the cell change order, the UE shall:

1> stop timer T309;

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

Upon indication of the UE having successfully completed the cell change order, UTRAN should:

1> release the radio connection; and

1> remove all context information for the concerned UE.

NOTE: The release of the UMTS radio resources is initiated from another RAT.

Reference(s)

TS 25.331 clause 8.3.11, B.6

#### 8.3.11.1.3 Test purpose

To test that the UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message in CELL_DCH state and perform a cell change to another RAT, even if no prior UE measurements have been performed on the target cell. The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

#### 8.3.11.1.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 2 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 2.

All cells belong to the same PLMN . UTRAN and GPRS cells belong to different location area.

Cell 1- SIB 1 T309 set to 8 seconds (see specific message contents)

UE: PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-850, GSM-PCS, GSM-710, GSM 750, T_GSM-810

Test Procedure

The SS starts the UTRAN cell and brings the UE into PS-DCCH+DTCH_DCH (State 6-10). The SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description, GPRS cell, to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel on the target GPRS cell. The SS checks whether the cell change is performed by checking that the UE receives a successful response to the CHANNEL REQUEST message from the SS through GPRS cell. The UE sends a RA UPDATE REQUEST message to indicate that the UTRAN UE context needs to be transferred to GPRS.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into PS-DCCH+DTCH_DCH (State 6-10) in cell 1 |
| 2 | SS | | | The SS configures cell 2 as a GSM cell with GPRS enabled |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message indicates: the target cell description for GPRS. |
| 4 | UE | | | The UE accepts the cell change command and switches to the GPRS cell specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on the RACH of cell 2 to establish temporary block flow (GPRS cell). It implies that the UE has switched to GPRS cell. |
| 6 | ← | | IMMEDIATE ASSIGNMENT | Uplink dynamic allocation. Sent on AGCH. |
| 7 | → | | ROUTING AREA UPDATE REQUEST | |

Specific message contents

SYSTEM INFORMATION BLOCK TYPE 1

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| T309 | 8 Sec |

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell 2 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 |
| - NC mode | NOT PRESENT |

#### 8.3.11.1.5 Test requirement

After step 3 the UE shall transmit a CHANNEL REQUEST message on RACH.

### 8.3.11.1a Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Success with UEA2/UIA2, GEA2 ciphering

#### 8.3.11.1a.1 Definition

This test case is specified for the Rel-7 (or later) UE in the interRAT cell change order from UTRAN to GERAN. UIA2/UEA2 are applied in the UTRAN cell and GEA2 is applied in the GERAN cell.

#### 8.3.11.1a.2 Conformance requirement

Identical to 8.3.11.1.2

#### 8.3.11.1a.3 Test purpose

Identical to 8.3.11.1.3 but in the UTRAN cell UIA2/UEA2 are applied, and in the GERAN cell GEA2 is applied

#### 8.3.11.1a.4 Method of test

Identical to 8.3.11.1.4.

Specific message contents

Similar to the specific message contents in 8.3.11.1.4 but instead, the Rel-7 IEs are used, also the UE capability to support UEA2/UIA2 and GEA2 are checked.

#### 8.3.11.1a.5 Test requirement

Identical to 8.3.11.1.5

### 8.3.11.1b Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Success with UEA2/UIA2 and GEA3 ciphering

#### 8.3.11.1b.1 Definition

This test case is specified for the Rel-7 (or later) UE in the interRAT cell change order from UTRAN to GERAN. UIA2/UEA2 are applied in the UTRAN cell and GEA3 is applied in the GERAN cell.

#### 8.3.11.1b.2 Conformance requirement

Identical to 8.3.11.1.2

#### 8.3.11.1b.3 Test purpose

Identical to 8.3.11.1.3 but in the UTRAN cell UIA2/UEA2 are applied, and in the GERAN cell GEA3 is applied.

#### 8.3.11.1b.4 Method of test

Identical to 8.3.11.1.4,.

Specific message contents

Similar to the specific message contents in 8.3.11.1.4 but instead, the Rel-7 IEs are used, also the UE capability to support UEA2/UIA2 and GEA3 are checked.

#### 8.3.11.1b.5 Test requirement

Identical to 8.3.11.1.5

### 8.3.11.2 Inter-RAT cell change order from UTRAN/To GPRS/CELL_FACH/Success

#### 8.3.11.2.1 Definition

#### 8.3.11.2.2 Conformance requirement

The purpose of the inter-RAT cell change order procedure is to transfer, under the control of the network, a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH and CELL_FACH state. This procedure may be used when no RABs are established or when the established RABs are only from PS domain. This procedure may not be used when there is no PS signalling connection.

The procedure is initiated when UTRAN orders a UE in CELL_DCH or CELL_FACH state, to make a cell change to a radio access technology other than UTRAN, e.g. GSM.

To initiate the procedure, UTRAN sends a CELL CHANGE ORDER FROM UTRAN message.

The UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message and perform a cell change order to another RAT, even if no prior UE measurements have been performed on the target cell.

If the variable ESTABLISHED_SIGNALLING_CONNECTIONS does not include the CN domain identity "PS domain", or if the variable ESTABLISHED_SIGNALLING_CONNECTIONS includes the CN domain identity "CS domain":

1> the UE behaviour is not specified.

The UE shall:

1> start timer T309; and

1> establish the connection to the other radio access technology, as specified within IE "Target cell description". This IE specifies the target cell identity, in accordance with the specifications for that other RAT. In case the target cell is a GSM/ GPRS cell, IE "Target cell description" may also include IE "NC mode", which specifies the cell selection mode to be applied in the target cell; and

1> if IE "NC mode" is not included in the CELL CHANGE ORDER FROM UTRAN:

2> retrieve it from the target cell as specified in [43];

2> act upon IE "NC mode" as specified in [43].

1> if the IE "RAB Information List" is included in the CELL CHANGE ORDER FROM UTRAN message:

2> ignore the contents of the IE "RAB Information List".

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification. In case of GSM/GPRS proceed according to the procedure Network control cell reselection procedure as specified in [44].

The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

Upon successful completion of the cell change order, the UE shall:

1> stop timer T309;

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

Upon indication of the UE having successfully completed the cell change order, UTRAN should:

1> release the radio connection; and

1> remove all context information for the concerned UE.

NOTE: The release of the UMTS radio resources is initiated from another RAT.

Reference(s)

TS 25.331 clause 8.3.11, B.6

#### 8.3.11.2.3 Test purpose

To test that the UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message in CELL_FACH state and perform a cell change to another RAT, even if no prior UE measurements have been performed on the target cell. The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a CHANNEL REQUEST in the new cell.

#### 8.3.11.2.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 2 is GPRS with PBCCH. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 2.

All cells belong to the same PLMN . UTRAN and GPRS cells belong to different location area.

UE: PS-DCCH+DTCH_FACH (state 6-11) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480.

Test Procedure

The SS starts the UTRAN cell and brings the UE into PS-DCCH+DTCH_FACH (state 6-11). The SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description, GPRS cell, to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel on the target GPRS cell. The SS checks whether the cell change is performed by checking that the UE receives a successful response to the CHANNEL REQUEST message from the SS through GPRS cell. The UE sends a RA UPDATE REQUEST message to indicate that the UTRAN UE context needs to be transferred to GPRS.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into PS-DCCH_DTCH_FACH (State 6-11) in cell 1 |
| 2 | SS | | | The SS configures cell 2 as a GSM cell with GPRS enabled |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message indicates: the target cell description for GPRS. |
| 4 | UE | | | The UE accepts the cell change command and switches to the GPRS specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | PACKET CHANNEL REQUEST | The SS receives this burst on PRACH of cell 2 (GPRS cell) to establish temporary block flow. It implies that the UE has switched to GPRS cell. |
| 6 | ← | | PACKET UPLINK ASSIGNMENT | Uplink dynamic allocation<br>Sent on PAGCH. |
| 7 | → | | ROUTING AREA UPDATE REQUEST | |

Specific message contents

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell 2 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 |
| - NC mode | NOT PRESENT |

8.3.11.2.5 Test requirement

After step 3 the UE shall transmit a CHANNEL REQUEST message on RACH.

### 8.3.11.3 Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Failure (T309 expiry)

#### 8.3.11.3.1 Definition

#### 8.3.11.3.2 Conformance requirement

If:

- timer T309 expires prior to the successful establishment of a connection to the target RAT; or
- if the establishment of the connection to the other RAT failed due to other reasons e.g. (random) access failure, rejection due to lack of resources:

the UE shall:

1> if it received the CELL CHANGE ORDER FROM UTRAN message in state CELL_DCH:

2> revert back to the UTRA configuration;

2> establish the UTRA physical channel(s) used at the time for reception of CELL CHANGE ORDER FROM UTRAN;

2> if the UE does not succeed in establishing the UTRA physical channel(s):

3> perform a cell update procedure according to subclause 8.3.1 with cause "Radio link failure";

3> when the cell update procedure has completed successfully:

4> proceed as below.

2> transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message setting the information elements as specified below:

3> include the IE "RRC transaction identifier"; and

3> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry;

3> set the IE "Inter-RAT change failure" to "physical channel failure".

2> When the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layer for transmission, the procedure ends.

Reference(s)

TS 25.331 clause 8.3.11

#### 8.3.11.3.3 Test purpose

To verify that when UE received CELL CHANGE ORDER FROM UTRAN message in CELL_DCH state and if the establishment of the connection to the other RAT failed due to expiry of timer T309 prior to the successful establishment of a connection to the target RAT:

a. revert back to the UTRA configuration;

b. establish the UTRA physical channel(s) used at the time for reception of CELL CHANGE ORDER FROM UTRAN;

c. transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message and set the IE "Inter-RAT change failure" to "physical channel failure".

8.3.11.3.4 Method of test

Initial conditions

System Simulator: 3 cells - Cells 1 and 3 are UTRAN, Cell 2 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 2.

All cells belong to the same PLMN . UTRAN and GPRS cells belong to different location area.

UE: PS-DCCH_DCH (State 6-7) in cell 1 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480,

Test Procedure

The SS starts the UTRAN cell and brings the UE into state PS-DCCH_DCH (State 6-7). The SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description, GPRS cell, to the UE through DCCH of the serving UTRAN cell. The UE starts the timer T309. After the UE receives the command it shall configure itself accordingly but cannot complete the cell change, as SS does not respond to the CHANNEL REQUEST message transmitted by UE till the expiry of T309 timer. The SS checks that the cell change has failed by checking that the UE transmits the CELL CHANGE ORDER FROM UTRAN FAILURE message to the SS in UTRAN cell.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into PS-DCCH _DCH (State 6-7) in cell 1 |
| 2 | SS | | | The SS configures cell 2 as a GSM cell with GPRS enabled |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message indicates: the target cell description for GSM/GPRS. |
| 4 | UE | | | UE starts the timer T309. The UE accepts the cell change command and switches to the GPRS specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on RACH of cell 2 (GPRS cell) to establish temporary block flow |
| 6 | → | | | SS does not respond to the channel request.<br>UE sends M + 1 CHANNEL REQUEST messages |
| | | | | The SS does not transmit a response and wait for T309 timer to expire. Upon expiry of T309 the UE shall start timer T3311 and shall perform ROUTING AREA UPDATE. The UE shall perform ROUTING AREA UPDATE also when a new cell 3 is entered. |
| 7 | → | | CELL CHANGE ORDER FROM UTRAN FAILURE | The SS receives the message on the old channel of UTRAN cell 1. |

Specific message contents

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell 2 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 |
| - NC mode | Not present |

CELL CHANGE ORDER FROM UTRAN FAILURE

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it matches the same value used in the corresponding downlink CELL CHANGE ORDER FROM UTRAN message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Inter-RAT change failure | |
| -Inter-RAT change failure cause | physical channel failure |

#### 8.3.11.3.5 Test requirement

In step 5 the UE shall transmit a CHANNEL REQUEST message on RACH.

In step 7 the SS shall receive CELL CHANGE ORDER FROM UTRAN FAILURE message on the old channel of the UTRAN cell.

### 8.3.11.4 Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Failure (Physical channel Failure and Reversion Failure)

#### 8.3.11.4.1 Definition

#### 8.3.11.4.2 Conformance requirement

If:

- timer T309 expires prior to the successful establishment of a connection to the target RAT; or
- if the establishment of the connection to the other RAT failed due to other reasons e.g. (random) access failure, rejection due to lack of resources:

the UE shall:

1> if it received the CELL CHANGE ORDER FROM UTRAN message in state CELL_DCH:

2> revert back to the UTRA configuration;

2> establish the UTRA physical channel(s) used at the time for reception of CELL CHANGE ORDER FROM UTRAN;

2> if the UE does not succeed in establishing the UTRA physical channel(s):

3> perform a cell update procedure according to subclause 8.3.1 with cause "Radio link failure";

3> when the cell update procedure has completed successfully:

4> proceed as below.

2> transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message setting the information elements as specified below:

3> include the IE "RRC transaction identifier"; and

3> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry;

3> set the IE "Inter-RAT change failure" to "physical channel failure".

2> When the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layer for transmission, the procedure ends.

Reference(s)

TS 25.331 clause 8.3.11

8.3.11.4.3 Test purpose

To verify that when UE received CELL CHANGE ORDER FROM UTRAN message in CELL_DCH state and if the establishment of the connection to the other RAT failed due to other reasons e.g. (random) access failure, rejection due to lack of resources:

a. revert back to the UTRA configuration;

b. if the UE does not succeed in establishing the UTRA physical channel(s):

- perform a cell update procedure with cause "Radio link failure";

c. when the cell update procedure is completed successfully, it transmits the CELL CHANGE ORDER FROM UTRAN FAILURE message and set the IE "Inter-RAT change failure" to "physical channel failure".

8.3.11.4.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 2 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 2.

All cells belong to the same PLMN. UTRAN and GPRS cells belong to different location area.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

NOTE: The 'timer poll' value in the SS RLC transmit entity should be set to 800 ms.

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,

- UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink:3.4 DL:3.4 kbps SRBs,

- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-850, GSM-PCS, GSM-710, GSM 750, T_GSM-810

Test Procedure

The SS starts the UTRAN cell and brings the UE into PS-DCCH+DTCH_DCH (state 6-10). The SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description, GPRS cell, to the UE through DCCH of the serving UTRAN cell. The UE receives the command and configures itself accordingly but cannot complete the cell change and wants to revert to the old configuration, but the UE cannot revert to the old configuration because the SS shall not use the old configuration. The UE transmit CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "radio link failure". The SS shall transmit CELL UPDATE CONFIRM message on downlink CCCH after receiving CELL UPDATE message. The UE transmits PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC and subsequently transmits the CELL CHANGE ORDER FAILURE message to the SS in UTRAN cell, on the DCCH using AM RLC, setting the value of IE " Inter-RAT change failure " to " physical channel failure".

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into PS-DCCH+DTCH_DCH (State 6-10) in cell 1 |
| 2 | SS | | | The SS configures cell 2 as a GSM cell with GPRS enabled |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message indicates: the target cell description for GSM/GPRS. |
| 3a | SS | | | SS removes the physical channel (DPCH), which was allocated to the mobile before Cell Change Order From UTRAN transmission |
| 4 | UE | | | The UE accepts the cell change command and switches to the GSM/GPRS specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on RACH of cell 2 (GPRS cell) to establish temporary block flow. It implies that the UE has switched to GPRS cell. |
| 6 | ← | | IMMEDIATE ASSIGNMENT REJECT | SS rejects the channel request |
| 7 | | | VOID | |
| 8 | → | | CELL UPDATE | The value "radio link failure" shall be set in IE "Cell update cause". |
| 9 | ← | | CELL UPDATE CONFIRM | This message include IE "Physical channel information elements". |
| 10 | | | | The SS configure the dedicated physical channel according to the IE "Physical channel information elements" included in the CELL UPDATE CONFIRM message. |
| 11 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 12 | → | | CELL CHANGE ORDER FROM UTRAN FAILURE | The IE "Inter-RAT failure cause" shall be set to "physical channel failure" |
| 13 | | | | Note: The UE may send a ROUTING AREA UPDATE REQUEST to complete the RA Update procedure initiated at step 5. |

Specific message contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell 2 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 |
| - NC mode | Not present |

CELL UPDATE (Step 8)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in TS 34.108, clause 9,with the following exceptions:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | "radio link failure" |

CELL UPDATE CONFIRM (Step 9) (FDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in TS 34.108, clause 9,with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| U-RNTI | Same as CELL UPDATE message in step 3 | |
| RRC State indicator | CELL_DCH | |
| Frequency info | | |
| - UARFCN uplink (Nu) | Reference to TS34.108 clause 5.1 Test frequencies | |
| - UARFCN downlink (Nd) | Reference to TS34.108 clause 5.1 Test frequencies | |
| Maximum allowed UL TX power | 33dBm | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - DPCCH power offset | -40 (-80 dB) | |
| - PC Preamble | 1 frame | |
| - SRB delay | 7 frames | |
| - Power Control Algorithm | Algorithm1 | |
| - TPC step size | 0 (1 dB) | |
| - Scrambling code type | Long | |
| - Scrambling code number | 0 | |
| - Number of DPDCH | Not Present | |
| - spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | TRUE | |
| - Number of FBI bit | Not present | |
| - Puncturing Limit | pl0-96 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot-DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or Flexible Position | flexible | |
| - TFCI existence | TRUE | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not Present | |
| - TX Diversity mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512. | |
| Downlink information for each radio links | | |
| CHOICE Mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | 100 | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as set above) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | SF-1 (SF is reference to TS34.108 clause 6.10 Parameter Set) | |

| | | |
|---|---|---|
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

CELL UPDATE CONFIRM (Step 9) (3.84 Mcps TDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in TS 34.108, clause 9,with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| U-RNTI | Same as CELL UPDATE message in step 3 | |
| RRC State indicator | CELL_DCH | |
| Frequency info | | |
| - UARFCN (Nt) | Reference to TS34.108 clause 5.1 Test frequencies | |
| Maximum allowed UL TX power | 33dBm | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - CHOICE *mode* | TDD | |
| - UL target SIR | 12 (6 dB) | |
| - CHOICE *UL OL PC info* | Broadcast UL OL PC info | |
| - CHOICE *mode* | TDD | |
| - UL CCTrCH List | 1 | |
| - UL target SIR | 12 (6 dB) | |
| - Time info | | |
| - Activation time | Now | |
| - Duration | Infinite | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - CHOICE mode | TDD (No Data) | |
| - CHOICE mode | TDD (No Data) | |
| - CHOICE *mode* | TDD | |
| - CHOICE *TDD option* | 3.84 Mcps TDD (No Data) | |
| - Default DPCH Offset Value | Set to value: Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| Downlink information for each radio links | | |
| - CHOICE Mode | TDD | |
| - Primary CCPCH info | | |
| - CHOICE Mode | TDD | |
| - CHOICE *TDD option* | 3.84 Mcps TDD | |
| - CHOICE *SyncCase* | Sync Case 1 | |
| - Timeslot | 0 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE *mode* | TDD | |
| - DL CCTrCh List | | |
| - TFCS ID | 1 | |
| - Time info | | |
| - Activation time | Now | |
| - Duration | Infinite | |
| - Common timeslot info | Default | |
| - Downlink DPCH timeslots and codes | Default | |
| - UL CCTrCH TPC List | Default | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

CELL UPDATE CONFIRM (Step 9) (1.28 Mcps TDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in TS 34.108, clause 9,with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| U-RNTI | Same as CELL UPDATE message in step 3 | |
| RRC State indicator | CELL_DCH | |
| Frequency info | | |
| - UARFCN uplink (Nu) | Reference to TS34.108 clause 5.1 Test frequencies | |
| - UARFCN downlink (Nd) | Reference to TS34.108 clause 5.1 Test frequencies | |
| Maximum allowed UL TX power | 33dBm | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - CHOICE *mode* | TDD | |
| - UL target SIR | 12 (6 dB) | |
| - CHOICE *UL OL PC info* | Individually Signalled | |
| - CHOICE *TDD option* | 1.28 Mcps TDD | |
| - TPC step size | 0 (1 dB) | |
| - UL CCTrCH List | 1 | |
| - UL target SIR | 12 (6 dB) | |
| - Time info | | |
| - Activation time | Now | |
| - Duration | Infinite | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - CHOICE mode | TDD (NoData) | |
| - CHOICE mode | TDD (NoData) | |
| - CHOICE *mode* | TDD | |
| - CHOICE *TDD option* | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - Default DPCH Offset Value | Set to value: Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| Downlink information for each radio links | | |
| - CHOICE Mode | TDD | |
| - Primary CCPCH info | | |
| - CHOICE Mode | TDD | |
| - CHOICE *TDD option* | 1.28 Mcps TDD | |
| - TSTD indicator | FALSE | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE *mode* | TDD | |
| - DL CCTrCh List | | |
| - TFCS ID | 1 | |
| - Time info | | |
| - Activation time | Now | |
| - Duration | Infinite | |
| - Common timeslot info | Default | |
| - Downlink DPCH timeslots and codes | Default | |
| - UL CCTrCH TPC List | Default | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

CELL UPDATE CONFIRM (Step 9) (3.84 Mcps TDD)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in TS 34.108, clause 9,with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| U-RNTI | Same as CELL UPDATE message in step 3 | |
| RRC State indicator | CELL_DCH | |
| Frequency info | | |
| - UARFCN (Nt) | Reference to TS34.108 clause 5.1 Test frequencies | |
| Maximum allowed UL TX power | 33dBm | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - CHOICE *mode* | TDD | |
| - UL target SIR | 12 (6 dB) | |
| - CHOICE *UL OL PC info* | Broadcast UL OL PC info | |
| - CHOICE *mode* | TDD | |
| - UL CCTrCH List | 1 | |
| - UL target SIR | 12 (6 dB) | |
| - Time info | | |
| - Activation time | Now | |
| - Duration | Infinite | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indication | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - CHOICE mode | TDD (No Data) | |
| - CHOICE mode | TDD (No Data) | |
| - CHOICE *mode* | TDD | |
| - CHOICE *TDD option* | 7.68 Mcps TDD (No Data) | |
| - Default DPCH Offset Value | Not Present | |
| Downlink information for each radio links | | |
| - CHOICE Mode | TDD | |
| - Primary CCPCH info | | |
| - CHOICE Mode | TDD | |
| - CHOICE *TDD option* | 7.68 Mcps TDD | |
| - CHOICE *SyncCase* | Sync Case 1 | |
| - Timeslot | 0 | |
| - SCTD indicator | FALSE | |
| - Downlink DPCH info for each RL | | |
| - CHOICE *mode* | TDD | |
| - DL CCTrCh List | | |
| - TFCS ID | 1 | |
| - Time info | | |
| - Activation time | Now | |
| - Duration | Infinite | |
| - Common timeslot info | Default | |
| - Downlink DPCH timeslots and codes VHCR | Default | |
| - UL CCTrCH TPC List | Default | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

CELL CHANGE ORDER FROM UTRAN FAILURE

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it matches the same value used in the corresponding downlink CELL CHANGE ORDER FROM UTRAN message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Inter-RAT change failure | |
| -Inter-RAT change failure cause | physical channel failure |

#### 8.3.11.4.5 Test requirement

In step 5 the UE shall transmit a CHANNEL REQUEST message on RACH.

In step 8 the SS shall receive CELL UPDATE message on the old channel of the UTRAN cell with the IE “Cell update cause” set to cause “ radio link failure “.

In step 11 the SS shall receive PHYSICAL CHANNEL COMPLETE message.

In step 12 the SS shall receive CELL CHANGE ORDER FROM UTRAN FAILURE message with the IE “ Inter-RAT change failure cause” set to “physical channel failure”.

### 8.3.11.5 Inter-RAT cell change order from UTRAN/To GPRS/CELL_FACH/Failure (T309 expiry)

#### 8.3.11.5.1 Definition

#### 8.3.11.5.2 Conformance requirement

If:

- timer T309 expires prior to the successful establishment of a connection to the target RAT; or
- if the establishment of the connection to the other RAT failed due to other reasons e.g. (random) access failure, rejection due to lack of resources:

the UE shall:

1> if the UE receives the CELL CHANGE ORDER FROM UTRAN message in CELL_FACH state:

2> revert to the cell it was camped on at the reception of the CELL CHANGE ORDER FROM UTRAN message;

2> if the UE is unable to return to this cell:

3> select a suitable UTRA cell according to [4];

3> initiate the cell update procedure according to subclause 8.3.1 using the cause "cell re-selection";

3> when the cell update procedure completed successfully:

4> proceed as below.

2> transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message setting the information elements as specified below:

3> include the IE "RRC transaction identifier"; and

3> set it to the value of "RRC transaction identifier" in the entry for the CELL CHANGE ORDER FROM UTRAN message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry;

3> set the IE "Inter-RAT change failure" to "physical channel failure".

2> When the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layer for transmission:

3> the procedure ends.

#### Reference(s)

TS 25.331 clause 8.3.11

#### 8.3.11.5.3 Test purpose

To verify that when UE received CELL CHANGE ORDER FROM UTRAN message in CELL_FACH state and if the establishment of the connection to the other RAT failed due to expiry of timer T309 prior to the successful establishment of a connection to the target RAT:

a. revert to the cell it was camped on at the reception of the CELL CHANGE ORDER FROM UTRAN message;

b. transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message and set the IE "Inter-RAT change failure" to "physical channel failure".

#### 8.3.11.5.4 Method of test

##### Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 2 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 2.

All cells belong to the same PLMN . UTRAN and GPRS cells belong to different location area.

UE: PS-DCCH+DTCH_FACH (State 6-11) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

##### Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480,

##### Test Procedure

The SS starts the UTRAN cell and brings the UE into PS_DCCH+DTCH_FACH (state 6-11). The SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description, GPRS cell, to the UE through DCCH of the serving UTRAN cell. The UE starts the timer T309. After the UE receives the command it shall configure itself accordingly but cannot complete the cell change, as SS does not respond to the Channel Request message transmitted by UE till the timer T309 expires. The SS checks that the cell change has failed by checking that the UE transmits the CELL CHANGE ORDER FROM UTRAN FAILURE message to the SS in UTRAN cell.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into PS-DCCH+DTCH_FACH (State 6-11) in cell 1 |
| 2 | SS | | | The SS configures cell 2 as a GSM cell with GPRS enabled |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message indicates: the target cell description for GSM/GPRS. |
| 4 | UE | | | The UE accepts the cell change command and switches to the GSM/GPRS specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on RACH of cell 2 (GPRS cell) to establish temporary block flow |
| 6 | → | | | SS does not respond to the channel request.<br>UE transmits CHANNEL REQUEST message M+1 times. |
| | | | | The SS does not transmit a response and wait for T309 timer to expire. |
| 7 | → | | CELL CHANGE ORDER FROM UTRAN FAILURE | The SS receives the message on the old channel of UTRAN cell. |

Specific message contents

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell 2 BSIC of Cell 3 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 Allocated BCCH ARFCN of Cell 3 |
| - NC mode | Not present |

CELL CHANGE ORDER FROM UTRAN FAILURE

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it matches the same value used in the corresponding downlink CELL CHANGE ORDER FROM UTRAN message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Inter-RAT change failure | |
| -Inter-RAT change failure cause | physical channel failure |

#### 8.3.11.5.5 Test requirement

In step 5 the UE shall transmit a CHANNEL REQUEST message on RACH.

In step 7 the SS shall receive CELL CHANGE ORDER FROM UTRAN FAILURE message on the old channel of the UTRAN cell.

### 8.3.11.6 Inter-RAT cell change order from UTRAN/To GPRS/CELL_FACH/Failure (Physical channel Failure and Reversion Failure)

#### 8.3.11.6.1 Definition

#### 8.3.11.6.2 Conformance requirement

If:

- timer T309 expires prior to the successful establishment of a connection to the target RAT; or
- if the establishment of the connection to the other RAT failed due to other reasons e.g. (random) access failure, rejection due to lack of resources:

the UE shall:

1> if the UE receives the CELL CHANGE ORDER FROM UTRAN message in CELL_FACH state:

2> revert to the cell it was camped on at the reception of the CELL CHANGE ORDER FROM UTRAN message;

2> if the UE is unable to return to this cell:

3> select a suitable UTRA cell according to [4];

3> initiate the cell update procedure according to subclause 8.3.1 using the cause "cell re-selection";

3> when the cell update procedure completed successfully:

4> proceed as below.

2> transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message setting the information elements as specified below:

3> include the IE "RRC transaction identifier"; and

3> set it to the value of "RRC transaction identifier" in the entry for the CELL CHANGE ORDER FROM UTRAN message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry;

3> set the IE "Inter-RAT change failure" to "physical channel failure".

2> When the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layer for transmission:

3> the procedure ends.

Reference(s)

TS 25.331 clause 8.3.11

#### 8.3.11.6.3 Test purpose

To verify that when UE received CELL CHANGE ORDER FROM UTRAN message in CELL_FACH state and if the establishment of the connection to the other RAT failed due to other reasons e.g. (random) access failure, rejection due to lack of resources:

a. revert to the cell it was camped on at the reception of the CELL CHANGE ORDER FROM UTRAN message;

b. if the UE is unable to return to this cell:

- select a suitable UTRA cell;

c. initiate the cell update procedure using the cause "cell re-selection";

d. when the cell update procedure is completed successfully, it transmits the CELL CHANGE ORDER FROM UTRAN FAILURE message and set the IE "Inter-RAT change failure" to "physical channel failure".

#### 8.3.11.6.4 Method of test

Initial conditions

System Simulator: 3 cells - Cell 1, Cell 2 are UTRAN, Cell 3 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 3.

All cells belong to the same PLMN . UTRAN and GPRS cells belong to different location area.

UE: PS-DCCH+DTCH_FACH (State 6-11) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,

- UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink:3.4 DL:3.4 kbps SRBs,

- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480,

Test Procedure

**Table 8.3.11.6**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | Off | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | Off | -75 | -60 |

Table 8.3.11.6 illustrates the downlink power to be applied for the 2 UTRAN cells at various time instants of the test execution. SS switches the power settings between columns "T0" and "T1", whenever the description in multi-cell condition specifies a reverse in the transmission power settings for cell 1 and cell 2.

The SS starts the UTRAN cell and brings the UE into PS-DCCH+DTCH_FACH (state 6-11). The SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description, GPRS cell, to the UE through DCCH of the serving UTRAN cell. The UE receives the command and configures itself accordingly but cannot complete the cell change and wants to revert to the old configuration, but the UE cannot revert to the old configuration because the SS shall not use the old configuration. The SS configures its downlink transmission power settings according to columns "T1" in table 8.3.11.6. The UE transmits CELL UPDATE message on uplink CCCH with IE "Cell update cause" set to "cell reselection". The SS shall transmit CELL UPDATE CONFIRM message on downlink CCCH after receiving CELL UPDATE message. The UE transmits the CELL CHANGE ORDER FAILURE message to the SS in UTRAN cell, on the DCCH using AM RLC, setting the value of IE " Inter-RAT change failure " to " physical channel failure".

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into PS-DCCH+DTCH_FACH (State 6-11) in cell 1 |
| 2 | SS | | | The SS configures cell 3 as a GSM cell with GPRS enabled |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message indicates: The target cell description for GSM/GPRS. |
| 3a | SS | | | The SS applies the downlink transmission power settings, the values in columns "T1" of table 8.3.11.6. |
| 4 | UE | | | The UE accepts the cell change command and switches to the GSM/GPRS specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on the traffic channel of cell 2 (GPRS cell) to establish temporary block flow It implies that the UE has switched to GPRS cell. |
| 6 | ← | | IMMEDIATE ASSIGNMENT REJECT | SS rejects the channel request |
| 7 | | | VOID | |
| 8 | | | VOID | |
| 9 | → | | CELL UPDATE | The value "cell reselection" shall be set in IE "Cell update cause". |
| 10 | ← | | CELL UPDATE CONFIRM | See message content. |
| 11 | → | | CELL CHANGE ORDER FROM UTRAN FAILURE | The IE "Inter-RAT failure cause" shall be set to "physical channel failure" |

Specific message contents

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC1 |
| - Band Indicator | DCS 1800 band used |
| - BCCH ARFCN | 1 |
| - NC mode | Not present |

CELL UPDATE (Step 8)

The contents of CELL UPDATE message is identical as "Contents of CELL UPDATE message" as found in TS 34.108, clause 9,with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | "cell reselection" |

CELL UPDATE CONFIRM (Step 9)

The contents of CELL UPDATE CONFIRM message is identical as "CELL UPDATE CONFIRM message" as found in TS 34.108, clause 9

CELL CHANGE ORDER FROM UTRAN FAILURE

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it matches the same value used in the corresponding downlink CELL CHANGE ORDER FROM UTRAN message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Inter-RAT change failure | |
| -Inter-RAT change failure cause | physical channel failure |

### 8.3.11.6.5 Test requirement

In step 5 the UE shall transmit a CHANNEL REQUEST message on RACH.

In step 9 the SS shall receive CELL UPDATE message on the old channel of the UTRAN cell with the IE “Cell update cause” set to cause “ cell reselection “.

In step 11 the SS shall receive CELL CHANGE ORDER FROM UTRAN FAILURE message with the IE “ Inter-RAT change failure cause” set to “physical channel failure”.

## 8.3.11.7 Inter-RAT cell change order from UTRAN/To GPRS/ Failure (Unsupported configuration)

### 8.3.11.7.1 Definition

### 8.3.11.7.2 Conformance requirement

If the UTRAN instructs the UE to perform a non-supported cell change order scenario or to use a non-supported configuration, the UE shall:

1> transmit a CELL CHANGE ORDER FROM UTRAN FAILURE message, setting the information elements as specified below:

2> include the IE "RRC transaction identifier"; and

2> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

2> clear that entry;

2> set the IE "Inter-RAT change failure" to "configuration unacceptable";

2> when the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:

3> resume normal operation as if the CELL CHANGE ORDER FROM UTRAN message has not been received;

3> and the procedure ends.

Reference(s)

TS 25.331 clause 8.3.11

### 8.3.11.7.3 Test purpose

To verify if the UTRAN instructs the UE to perform a non-supported cell change order or to use a non-supported configuration, the UE shall:

a. Transmit a CELL CHANGE ORDER FROM UTRAN FAILURE message, setting the IE "Inter-RAT change failure" to "configuration unacceptable";

b. Resume normal operation

### 8.3.11.7.4 Method of test

Initial conditions

System Simulator : 1 UTRAN cell

UE : PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480,

Test Procedure

The SS starts the UTRAN cell and brings the UE into PS-DCCH+DTCH_DCH (state 6-10). The SS then sends a CELL CHANGE ORDER FROM UTRAN message including a Configuration not Supported by the UE, to the UE through DCCH of the serving UTRAN cell. The UE receives the command and finds that the configuration given in cell change

message is not supported. The SS checks that the cell change is failed by checking that the UE transmits the CELL CHANGE ORDER FROM UTRAN FAILURE message to the SS in UTRAN cell with the IE “Inter-RAT change failure” set to “configuration unsupported”.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into PS-DCCH+DTCH_DCH (State 6-10) in cell 1 |
| 2 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message carries an unsupported configuration. Cell change order to a Band not supported by the UE |
| 3 | → | | CELL CHANGE ORDER FROM UTRAN FAILURE | The SS receives the message on the old channel of UTRAN cell. |

Specific message contents

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | Contains a Configuration not supported By the UE (Cell change order to a Band not supported by the UE) |

CELL CHANGE ORDER FROM UTRAN FAILURE

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it matches the same value used in the corresponding downlink CELL CHANGE ORDER FROM UTRAN message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Inter-RAT change failure | |
| -Inter-RAT change failure cause | configuration unsupported |

#### 8.3.11.7.5 Test requirement

In step 3 the SS shall receive CELL CHANGE ORDER FROM UTRAN FAILURE message on the old channel of the UTRAN cell.

### 8.3.11.8 Inter-RAT cell change order from UTRAN/To GPRS/ Failure (Invalid Inter-RAT message)

#### 8.3.11.8.1 Definition

#### 8.3.11.8.2 Conformance requirement

If the CELL CHANGE ORDER FROM UTRAN message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> set the IE "RRC transaction identifier" in the CELL CHANGE ORDER FROM UTRAN FAILURE message to the value of "RRC transaction identifier" in the entry for the CELL CHANGE ORDER FROM UTRAN message in the table "Rejected transactions" in the variable TRANSACTIONS; and

1> clear that entry;

1> set the IE "Inter-RAT change failure" to the cause value "protocol error";

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;

1> transmit a CELL CHANGE ORDER FROM UTRAN FAILURE message on the uplink DCCH using AM RLC;

1> when the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layers for transmission:

2> resume normal operation as if the invalid CELL CHANGE ORDER FROM UTRAN message has not been received;

2> and the procedure ends.

Reference(s)

TS 25.331 clause 8.3.11

8.3.11.8.3 Test purpose

To verify that the UE shall keep its old configuration and transmit a CELL CHANGE ORDER FROM UTRAN FAILURE message, with the "Inter-RAT change failure" set to "protocol error", when it receives a CELL CHANGE ORDER FROM UTRAN message, not including a valid message in accordance with the protocol specifications for the target RAT.

8.3.11.8.4 Method of test

Initial conditions

System Simulator: 1 UTRAN cell

UE: PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480,

Test Procedure

The SS starts the UTRAN cell and brings the UE into PS-DCCH+DTCH_DCH (state 6-10). The SS then sends a CELL CHANGE ORDER FROM UTRAN message not including a valid cell change order from UTRAN message in accordance with the protocol specifications for the target RAT, to the UE through DCCH of the serving UTRAN cell. The UE receives the command and finds that the cell change order message is Invalid. The SS checks that the cell change is failed by checking that the UE transmits the CELL CHANGE ORDER FROM UTRAN FAILURE message to the SS in UTRAN cell with the IE “Inter-RAT change failure cause” set to “protocol error”.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into PS-DCCH+DTCH_DCH (State 6-10) in cell 1 |
| 2 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message carries an invalid CELL CHANGE ORDER FROM UTRAN. |
| 3 | → | | CELL CHANGE ORDER FROM UTRAN FAILURE | The SS receives the message on the old channel of UTRAN cell |

Specific message contents

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | Spare2 |

CELL CHANGE ORDER FROM UTRAN FAILURE

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Checked to see if it matches the same value used in the corresponding downlink CELL CHANGE ORDER FROM UTRAN message |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Inter-RAT change failure | |
| -Inter-RAT change failure cause | protocol error |

#### 8.3.11.8.5 Test requirement

In step 3 the SS shall receive CELL CHANGE ORDER FROM UTRAN FAILURE message on the old channel of the UTRAN cell.

### 8.3.11.9 Inter-RAT Cell Change Order from UTRAN to GPRS/CELL_DCH/Success (stop of HS-DSCH reception)

#### 8.3.11.9.1 Definition and applicability

All UEs which support FDD or TDD, HS-PDSCH and GSM.

#### 8.3.11.9.2 Conformance requirement

The purpose of the inter-RAT cell change order procedure is to transfer, under the control of the network, a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH and CELL_FACH state. This procedure may be used when no RABs are established or when the established RABs are only from PS domain. This procedure may not be used when there is no PS signalling connection.

The procedure is initiated when UTRAN orders a UE in CELL_DCH or CELL_FACH state, to make a cell change to a radio access technology other than UTRAN, e.g. GSM.

To initiate the procedure, UTRAN sends a CELL CHANGE ORDER FROM UTRAN message.

The UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message and perform a cell change order to another RAT, even if no prior UE measurements have been performed on the target cell.

If the variable ESTABLISHED_SIGNALLING_CONNECTIONS does not include the CN domain identity "PS domain", or if the variable ESTABLISHED_SIGNALLING_CONNECTIONS includes the CN domain identity "CS domain":

1> the UE shall act as if the message was never received.

The UE shall:

1> if HS-DSCH is configured for UTRA:

2> stop any HS-DSCH reception procedures;

2> clear any stored HS-PDSCH configuration;

2> act as if the IE "MAC-hs reset indicator" is received and set to TRUE;

2> release all HARQ resources;

2> remove any H-RNTI stored;

2> clear the variable H_RNTI;

2> set the variable HS_DSCH_RECEPTION to FALSE.

1> start timer T309; and

1> establish the connection to the other radio access technology, as specified within IE "Target cell description". This IE specifies the target cell identity, in accordance with the specifications for that other RAT. In case the target cell is a GSM/ GPRS cell, IE "Target cell description" may also include IE "NC mode", which specifies the cell selection mode to be applied in the target cell; and

1> if IE "NC mode" is not included in the CELL CHANGE ORDER FROM UTRAN:

2> retrieve it from the target cell as specified in [43];

2> act upon IE "NC mode" as specified in [43].

1> if the IE "RAB Information List" is included in the CELL CHANGE ORDER FROM UTRAN message:

2> ignore the contents of the IE "RAB Information List".

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification. In case of GSM/GPRS proceed according to the procedure Network control cell reselection procedure as specified in [44].

1> if the UE supports UTRAN to GERAN Network Assisted Cell Change, the IE "Geran-System Information" is present and the UE is in CELL_DCH state:

2> if according to [44] the IE "GERAN System Information" includes a correct and consistent set of SI or PSI messages:

3> use this information as the system information to begin access on the target GERAN cell.

2> otherwise:

3> ignore the IE "GERAN System Information" and continue the Cell Change Order procedure.

The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

Upon successful completion of the cell change order, the UE shall:

1> stop timer T309;

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

Upon indication of the UE having successfully completed the cell change order, UTRAN should:

1> release the radio connection; and

1> remove all context information for the concerned UE.

NOTE: The release of the UMTS radio resources is initiated from another RAT.

Reference(s)

TS 25.331 clause 8.3.11, B.6.

8.3.11.9.3 Test purpose

To test that the UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message in CELL_DCH state when Radio bearers are mapped to HSDSCH channels and perform a cell change to another RAT, even if no prior UE measurements have been performed on the target cell and HS-PDSCH channels are active. The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

8.3.11.9.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 2 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 2.

All cells belong to the same PLMN. UTRAN and GPRS cells belong to different location area.

Cell 1- SIB 1 T309 set to 8 seconds (see specific message contents)

UE: PS-DCCH+DTCH_DCH_HSDCH (State 6-17) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports GSM/GPRS
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810

Test Procedure

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established. The SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description, GPRS cell, to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel on the target GPRS cell. The SS checks whether the cell change is performed by checking that the UE receives a successful response to the CHANNEL REQUEST message from the SS through GPRS cell. The UE sends a RA UPDATE REQUEST message to indicate that the UTRAN UE context needs to be transferred to GPRS.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into PS-DCCH+DTCH_DCH_HSDSCH in cell 1 |
| 2 | SS | | | The SS configures cell 2 as a GSM cell with GPRS enabled |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message indicates: the target cell description for GPRS. |
| 4 | UE | | | The UE accepts the cell change command and switches to the GPRS cell specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on the RACH of cell 2 to establish temporary block flow (GPRS cell). It implies that the UE has switched to GPRS cell. |
| 6 | ← | | IMMEDIATE ASSIGNMENT | Uplink dynamic allocation. Sent on AGCH. |
| 7 | → | | ROUTING AREA UPDATE REQUEST | |

Specific message contents

SYSTEM INFORMATION BLOCK TYPE 1

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| T309 | 8 Sec |

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell2 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 |
| - NC mode | NOT PRESENT |

#### 8.3.11.9.5 Test requirements

After step 3 the UE shall transmit a CHANNEL REQUEST message on RACH.

### 8.3.11.10 Inter-RAT Cell Change Order from UTRAN to GPRS/CELL_DCH/Failure (Physical channel Failure)

#### 8.3.11.10.1 Definition and applicability

All UEs which support FDD or TDD, HS-PDSCH and GSM.

#### 8.3.11.10.2 Conformance requirement

If:

- timer T309 expires prior to the successful establishment of a connection to the target RAT; or
- if the establishment of the connection to the other RAT failed due to other reasons e.g. (random) access failure, rejection due to lack of resources:

the UE shall:

1> if it received the CELL CHANGE ORDER FROM UTRAN message in state CELL_DCH:

2> if the CM_PATTERN_ACTIVATION_ABORTED flag is not set to TRUE:

3> revert back to the UTRA configuration;

3> establish the UTRA physical channel(s) (including HS-DSCH related channels) used at the time for reception of CELL CHANGE ORDER FROM UTRAN.

2> perform the physical layer synchronisation procedure A as specified in [29] (FDD only);

2> after the establishment of the uplink physical channel, send DPCCH and no DPDCH according to [26] during the number of frames indicated in the IE "PC preamble" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE; and

2> then not send any data on signalling radio bearers RB0 to RB4 during the number of frames indicated in the IE "SRB delay" in the variable LATEST_CONFIGURED_SRB_DELAY_AND_PC_PREAMBLE;

2> if the CM_PATTERN_ACTIVATION_ABORTED flag is set to TRUE or if the UE does not succeed in establishing the UTRA physical channel(s):

3> perform a cell update procedure according to subclause 8.3.1 with cause "Radio link failure";

3> when the cell update procedure has completed successfully:

4> proceed as below.

2> transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message setting the information elements as specified below:

3> include the IE "RRC transaction identifier"; and

3> set it to the value of "RRC transaction identifier" in the entry for the received message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry;

3> set the IE "Inter-RAT change failure" to "physical channel failure".

2> When the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layer for transmission, the procedure ends.

1> if the UE receives the CELL CHANGE ORDER FROM UTRAN message in CELL_FACH state:

2> revert to the cell it was camped on at the reception of the CELL CHANGE ORDER FROM UTRAN message;

2> if the UE is unable to return to this cell:

3> select a suitable UTRA cell according to [4];

3> initiate the cell update procedure according to subclause 8.3.1 using the cause "cell re-selection";

3> when the cell update procedure completed successfully:

4> proceed as below.

2> transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message setting the information elements as specified below:

3> include the IE "RRC transaction identifier"; and

3> set it to the value of "RRC transaction identifier" in the entry for the CELL CHANGE ORDER FROM UTRAN message in the table "Accepted transactions" in the variable TRANSACTIONS; and

3> clear that entry;

3> set the IE "Inter-RAT change failure" to "physical channel failure".

2> When the CELL CHANGE ORDER FROM UTRAN FAILURE message has been submitted to lower layer for transmission:

3> the procedure ends.

Reference(s)

TS 25.331 clause 8.3.11

#### 8.3.11.10.3 Test purpose

To verify that when UE received CELL CHANGE ORDER FROM UTRAN message in CELL_DCH state and if the establishment of the connection to the other RAT failed due to expiry of timer T309 prior to the successful establishment of a connection to the target RAT:

a. revert back to the UTRA configuration

b. establish the UTRA physical channel(s) used at the time for reception of CELL CHANGE ORDER FROM UTRAN;

c. transmit the CELL CHANGE ORDER FROM UTRAN FAILURE message and set the IE "Inter-RAT change failure" to "physical channel failure".

### 8.3.11.10.4 Method of test

#### Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 2 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 2.

All cells belong to the same PLMN. UTRAN and GPRS cells belong to different location area.

UE: PS-DCCH+DTCH_DCH_HSDSCH (State 6-17) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

NOTE: The 'timer poll' value in the SS RLC transmit entity should be set to 800 ms.

#### Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports GSM/GPRS
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850, GSM-710, GSM 750, T_GSM-810

#### Test Procedure

The UE is in CELL_DCH state and has a radio bearer mapped on HS-DSCH established. The SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description, GPRS cell, to the UE through DCCH of the serving UTRAN cell. The UE starts the timer T309. After the UE receives the command it shall configure itself accordingly but cannot complete the cell change, as SS does not respond to the CHANNEL REQUEST message transmitted by UE till the expiry of T309 timer. The SS checks that the cell change has failed by checking that the UE transmits the CELL CHANGE ORDER FROM UTRAN FAILURE message to the SS in UTRAN cell.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS bring the UE into PS-DCCH _DCH_HSDSCH (State 6-17) in cell 1 |
| 2 | SS | | | The SS configures cell 2 as a GSM cell with GPRS enabled |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message indicates: the target cell description for GSM/GPRS. |
| 4 | UE | | | UE starts the timer T309. The UE accepts the cell change command and switches to the GPRS specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on RACH of cell 2 (GPRS cell) to establish temporary block flow |
| 6 | → | | | SS does not respond to the channel request.<br>UE sends M + 1 CHANNEL REQUEST messages |
| | | | | The SS does not transmit a response and wait for T309 timer to expire. |
| 7 | → | | CELL CHANGE ORDER FROM UTRAN FAILURE | The SS receives the message on the old channel of UTRAN cell. |
| | | | | Note<br>The UE may send a ROUTING AREA UPDATE REQUEST to complete the RA Update procedure initiated at step 5. |

Specific message contents

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell 2 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 |
| - NC mode | Not present |

#### 8.3.11.10.5 Test requirements

In step 5 the UE shall transmit a CHANNEL REQUEST message on RACH.

In step 7 the SS shall receive CELL CHANGE ORDER FROM UTRAN FAILURE message on the old channel of the UTRAN cell.

### 8.3.11.11 Inter-RAT cell change order from UTRAN/To GPRS/CELL_FACH/No RAB established/Success

#### 8.3.11.11.1 Definition

#### 8.3.11.11.2 Conformance requirement

The purpose of the inter-RAT cell change order procedure is to transfer, under the control of the network, a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH and CELL_FACH state. This procedure may be used when no RABs are established or when the established RABs are only from PS domain. This procedure may not be used when there is no PS signalling connection.

The procedure is initiated when UTRAN orders a UE in CELL_DCH or CELL_FACH state, to make a cell change to a radio access technology other than UTRAN, e.g. GSM.

To initiate the procedure, UTRAN sends a CELL CHANGE ORDER FROM UTRAN message.

The UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message and perform a cell change order to another RAT, even if no prior UE measurements have been performed on the target cell.

If the variable ESTABLISHED_SIGNALLING_CONNECTIONS does not include the CN domain identity "PS domain", or if the variable ESTABLISHED_SIGNALLING_CONNECTIONS includes the CN domain identity "CS domain":

1> the UE shall act as if the message was never received.

The UE shall:

1> start timer T309; and

1> establish the connection to the other radio access technology, as specified within IE "Target cell description". This IE specifies the target cell identity, in accordance with the specifications for that other RAT. In case the target cell is a GSM/ GPRS cell, IE "Target cell description" may also include IE "NC mode", which specifies the cell selection mode to be applied in the target cell; and

1> if IE "NC mode" is not included in the CELL CHANGE ORDER FROM UTRAN:

2> retrieve it from the target cell as specified in [43];

2> act upon IE "NC mode" as specified in [43].

1> if the IE "RAB Information List" is included in the CELL CHANGE ORDER FROM UTRAN message:

2> ignore the contents of the IE "RAB Information List".

NOTE: Requirements concerning the establishment of the radio connection towards the other radio access technology and the signalling procedure are outside the scope of this specification. In case of GSM/GPRS proceed according to the procedure Network control cell reselection procedure as specified in [44].

The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

Upon successful completion of the cell change order, the UE shall:

1> stop timer T309;

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

Upon indication of the UE having successfully completed the cell change order, UTRAN should:

1> release the radio connection; and

1> remove all context information for the concerned UE.

NOTE: The release of the UMTS radio resources is initiated from another RAT.

Reference(s)

TS 25.331 clause 8.3.11

### 8.3.11.11.3 Test purpose

To test that the UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message in CELL_FACH state and perform a cell change to another RAT, when no RABs are established.

### 8.3.11.11.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 2 is GPRS with PBCCH. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of cell 2.

All cells belong to the same PLMN and different location area, routing area.

UE: Registered Idle mode on PS in cell 1

Related ICS/IXIT statement

- UE supports both GSM/GPRS and UTRAN Radio Access Technologies
- UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink: 3.4 DL: 3.4 kbps SRBs
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480.

Test Procedure

The SS starts the UTRAN cell and the UE is triggered to make an MO PS call. After the SS receives SERVICE REQUEST message, the SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description. After the UE receives the command it shall configure itself accordingly and switch to the new channel on the target GPRS cell. The SS checks whether the cell change is performed by checking that the UE sends a PACKET CHANNEL REQUEST through GPRS cell. The UE sends an RA UPDATE REQUEST message to indicate that the UTRAN UE context needs to be transferred to GPRS.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Trigger the UE to initiate an MO PS call |
| 2 | → | | SERVICE REQUEST | |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Sent on cell 1 (UTRAN cell) and the message indicates: the target cell description for GPRS. |
| 4 | UE | | | The UE accepts the cell change command and switches to the GPRS cell specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | PACKET CHANNEL REQUEST | The SS receives this burst on PRACH of cell 2 (GPRS cell) to establish temporary block flow. It implies that the UE has switched to GPRS cell. |
| 6 | ← | | PACKET UPLINK ASSIGNMENT | Uplink dynamic allocation<br>Sent on PAGCH. |
| 7 | → | | ROUTING AREA UPDATE REQUEST | |

Specific message contents

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC1BSIC of Cell 2 |
| - Band Indicator | DCS 1800 band used Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | 1Allocated BCCH ARFCN of Cell 2 |
| - NC mode | NOT PRESENT |

#### 8.3.11.11.5 Test requirement

After step 4, the UE shall transmit a PACKET CHANNEL REQUEST message on PRACH.

### 8.3.11.12 Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Network Assisted Cell Change/Success

#### 8.3.11.12.1 Definition

#### 8.3.11.12.2 Conformance requirement

1> if the UE supports UTRAN to GERAN Network Assisted Cell Change, the IE "Geran-System Information" is present and the UE is in CELL_DCH state:

2> if according to [44] the IE "GERAN System Information" includes a correct and consistent set of SI or PSI messages:

3> use this information as the system information to begin access on the target GERAN cell.

2> otherwise:

3> ignore the IE "GERAN System Information" and continue the Cell Change Order procedure.

NOTE: The IE "GERAN System Information" is constructed in the same way as in 2G to 2G NACC, i.e. the PSI messages are encoded as such, whereas the SI messages exclude 2 octets of headers, see [44].

Reference(s)

TS 25.331 clause 8.3.11.3.

### 8.3.11.12.3 Test purpose

To test that the UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message which includes a correct and consistent set of SI or PSI messages in the IE "GERAN System Information" in CELL_DCH state and perform a cell change to another RAT using this as the system information to begin access on the target GERAN cell, even if no prior UE measurements have been performed on the target cell. The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

### 8.3.11.12.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN. Cell 2 is GPRS, no System Information is broadcast on the BCCH. 51.010 clauses 20.22 and 40.1.1 Cell A parameters shall be referenced for the default parameters of cell 2.

All cells belong to the same PLMN. UTRAN and GPRS cells belong to different location area.

Cell 1- SIB 1 T309 set to 8 seconds (see specific message contents).

UE: PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

Related ICS/IXIT statement

- UE supports UTRAN to GERAN NACC,
- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-850, GSM-PCS, GSM-710, GSM 750, T_GSM-810

Test Procedure

The SS starts the UTRAN cell and brings the UE into PS-DCCH+DTCH_DCH (State 6-10). The SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description, GPRS cell, including GERAN system information, to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel on the target GPRS cell. The SS checks whether the cell change is performed by checking that the UE receives a successful response to the CHANNEL REQUEST message from the SS through GPRS cell. The UE sends a RA UPDATE REQUEST message to indicate that the UTRAN UE context needs to be transferred to GPRS.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into PS-DCCH+DTCH_DCH (State 6-10) in cell 1 |
| 2 | SS | | | The SS configures cell 2 as a GSM cell with GPRS enabled. No system information is broadcast on the BCCH |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message indicates: the target cell description for GPRS and includes system information for cell 2. |
| 4 | UE | | | The UE accepts the cell change command and switches to the GPRS cell specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on the RACH of cell 2 to establish temporary block flow (GPRS cell). It implies that the UE has switched to GPRS cell. |
| 6 | ← | | IMMEDIATE ASSIGNMENT | Uplink dynamic allocation. Sent on AGCH. |
| 7 | → | | ROUTING AREA UPDATE REQUEST | |

Specific message contents

SYSTEM INFORMATION BLOCK TYPE 1

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| T309 | 8 Sec |

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell 2 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 |
| - NC mode | NOT PRESENT |
| - CHOICE geran-SystemInfoType | |
| - sI | Encoded to contain default GPRS Cell A system information with the exception the SI_STATUS_IND bit in System Information Type 13 set to “1”. |

### 8.3.11.12.5 Test requirement

After step 3 the UE shall transmit a CHANNEL REQUEST message on RACH.

## 8.3.11.13 Inter-RAT cell change order from UTRAN/To GPRS/CELL_DCH/Network Assisted Cell Change with Invalid SI/Success

### 8.3.11.13.1 Definition

### 8.3.11.13.2 Conformance requirement

1> if the UE supports UTRAN to GERAN Network Assisted Cell Change, the IE "Geran-System Information" is present and the UE is in CELL_DCH state:

2> if according to [44] the IE "GERAN System Information" includes a correct and consistent set of SI or PSI messages:

3> use this information as the system information to begin access on the target GERAN cell.

2> otherwise:

3> ignore the IE "GERAN System Information" and continue the Cell Change Order procedure.

NOTE: The IE "GERAN System Information" is constructed in the same way as in 2G to 2G NACC, i.e. the PSI messages are encoded as such, whereas the SI messages exclude 2 octets of headers, see [44].

Reference(s)

TS 25.331 clause 8.3.11.3.

### 8.3.11.13.3 Test purpose

To test that the UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message which includes an incorrect set of SI or PSI messages in the IE "GERAN System Information" in CELL_DCH state and perform a cell change to another RAT, ignoring the IE "GERAN System Information", even if no prior UE measurements have been performed on the target cell. The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

### 8.3.11.13.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 2 is GPRS. 51.010 clauses 20.22 and 40.1.1 Cell A parameters shall be referenced for the default parameters of cell 2 with the exception the SI_STATUS_IND bit in System Information Type 13 set to “1”.

All cells belong to the same PLMN. UTRAN and GPRS cells belong to different location area.

Cell 1- SIB 1 T309 set to 8 seconds (see specific message contents)

UE: PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, one PS domain RAB is established.

Related ICS/IXIT statement

- UE supports UTRAN to GERAN NACC,
- UE supports both GSM/GPRS and UTRAN Radio Access Technologies,
- UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink:3.4 DL:3.4 kbps SRBs,
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-850, GSM-PCS, GSM-710, GSM 750, T_GSM-810.

Test Procedure

The SS starts the UTRAN cell and brings the UE into PS-DCCH+DTCH_DCH (State 6-10). The SS starts GPRS cell, then sends CELL CHANGE ORDER FROM UTRAN indicating the target cell description, GPRS cell, and including a set of GERAN system information which describes a GPRS cell different to the target cell, and replaced SI 3 with all

'1's, to the UE through DCCH of the serving UTRAN cell. This is to test that if any of the SI signalled is not correct, all of the IE is ignored. After the UE receives the command it shall configure itself accordingly and switch to the new channel on the target GPRS cell, ignoring the IE "GERAN System Information" and reading this instead from cell 2. The SS checks whether the cell change is performed by checking that the UE receives a successful response to the CHANNEL REQUEST message from the SS through GPRS cell. The UE sends a RA UPDATE REQUEST message to indicate that the UTRAN UE context needs to be transferred to GPRS.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into PS-DCCH+DTCH_DCH (State 6-10) in cell 1 |
| 2 | SS | | | The SS configures cell 2 as a GSM cell with GPRS enabled |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Send on cell 1 (UTRAN cell) and the message indicates: the target cell description for GPRS, including invalid GERAN system information. |
| 4 | UE | | | The UE accepts the cell change command and switches to the GPRS cell specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on the RACH of cell 2 to establish temporary block flow (GPRS cell). It implies that the UE has switched to GPRS cell. |
| 6 | ← | | IMMEDIATE ASSIGNMENT | Uplink dynamic allocation. Sent on AGCH. |
| 7 | → | | ROUTING AREA UPDATE REQUEST | |

Specific message contents

SYSTEM INFORMATION BLOCK TYPE 1

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| T309 | 8 Sec |

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell 2 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 |
| - NC mode | NOT PRESENT |
| - CHOICE geran-SystemInfoType | |
| - sI | Encoded to contain default GPRS Cell B system information with the exception the SI_STATUS_IND bit in System Information Type 13 set to "1". SI 3 encoded PDU is replaced with all '1' bits to test that all of the IE is ignored if any part is incorrect. |

8.3.11.13.5 Test requirement

After step 3 the UE shall transmit a CHANNEL REQUEST message on RACH.

## 8.3.11.14 Inter-RAT Cell Change Order from UTRAN to GPRS/CELL_DCH/Success (stop of E-DCH transmission)

### 8.3.11.14.1 Definition and applicability

All UEs which support FDD and HS-PDSCH and E-DPDCH and GSM.

### 8.3.11.14.2 Conformance requirement

The purpose of the inter-RAT cell change order procedure is to transfer, under the control of the network, a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in CELL_DCH and CELL_FACH state. This procedure may be used when no RABs are established or when the established RABs are only from PS domain. This procedure may not be used when there is no PS signalling connection.

The procedure is initiated when UTRAN orders a UE in CELL_DCH or CELL_FACH state, to make a cell change to a radio access technology other than UTRAN, e.g. GSM.

To initiate the procedure, UTRAN sends a CELL CHANGE ORDER FROM UTRAN message.

…

The UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message and perform a cell change order to another RAT, even if no prior UE measurements have been performed on the target cell.

If the variable ESTABLISHED_SIGNALLING_CONNECTIONS does not include the CN domain identity "PS domain", or if the variable ESTABLISHED_SIGNALLING_CONNECTIONS includes the CN domain identity "CS domain":

1> the UE shall act as if the message was never received.

The UE shall:

1>For FDD:

2> if the UE has a pending "TGPS reconfiguration CFN" at the activation time received in the CELL CHANGE ORDER FROM UTRAN message the UE may:

3> abort the pending CM activation;

3> set the CM_PATTERN_ACTIVATION_ABORTED to TRUE.

2> otherwise:

3> set the CM_PATTERN_ACTIVATION_ABORTED to FALSE.

1> start timer T309; and

1> establish the connection to the other radio access technology, as specified within IE "Target cell description". This IE specifies the target cell identity, in accordance with the specifications for that other RAT. In case the target cell is a GSM/ GPRS cell, IE "Target cell description" may also include IE "NC mode", which specifies the cell selection mode to be applied in the target cell; and

1> if IE "NC mode" is not included in the CELL CHANGE ORDER FROM UTRAN:

2> retrieve it from the target cell as specified in [43];

2> act upon IE "NC mode" as specified in [43].

1> if the IE "RAB Information List" is included in the CELL CHANGE ORDER FROM UTRAN message:

2> ignore the contents of the IE "RAB Information List".

…

The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

Upon successful completion of the cell change order, the UE shall:

1> stop timer T309;

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

Upon indication of the UE having successfully completed the cell change order, UTRAN should:

1> release the radio connection; and

1> remove all context information for the concerned UE.

NOTE: The release of the UMTS radio resources is initiated from another RAT.

Reference(s)

TS 25.331 clause 8.3.11

### 8.3.11.14.3 Test purpose

To test that the UE is able to receive a CELL CHANGE ORDER FROM UTRAN message in CELL_DCH state when Radio bearers are mapped to the E-DCH channel and perform a cell change to another RAT, even if no prior UE measurements have been performed on the target cell and E-DPDCH or E-PUCH channels are active.

### 8.3.11.14.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 2 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of Cell 2.

All cells belong to the same PLMN. UTRAN and GPRS cells belong to different location area.

Cell 1- SIB 1 T309 set to 8 seconds (see specific message contents)

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18) under condition A12, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD or TDD
- UE supports HS-PDSCH
- UE supports E-DPDCH
- UE supports GSM/GPRS or E-PUCH

Test Procedure

The UE is in the CELL_DCH state and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception. The SS configures the GPRS cell, then sends a CELL CHANGE ORDER FROM UTRAN message indicating the target cell description, GPRS cell, to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel on the target GPRS cell. The SS checks whether the cell change is performed by checking that the UE receives a successful response to the CHANNEL REQUEST message from the SS through GPRS cell. The UE sends a ROUTING AREA UPDATE REQUEST message to indicate that the UTRAN UE context needs to be transferred to GPRS.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into PS_DCCH+DTCH E_DCH/HS_DSCH in Cell 1 |
| 2 | SS | | | The SS configures Cell 2 as a GSM cell with GPRS enabled |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Sent on Cell 1 (UTRAN cell) and the message indicates: the target cell description for GPRS. |
| 4 | UE | | | The UE accepts the cell change command and switches to the GPRS cell specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on the RACH of Cell 2 to establish temporary block flow (GPRS cell). It implies that the UE has switched to GPRS cell. |
| 6 | ← | | IMMEDIATE ASSIGNMENT | Uplink dynamic allocation. Sent on AGCH. |
| 7 | → | | ROUTING AREA UPDATE REQUEST | |

Specific message contents

SYSTEM INFORMATION BLOCK TYPE 1

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| T309 | 8 Sec |

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell2 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 |
| - NC mode | NOT PRESENT |

#### 8.3.11.14.5 Test requirements

After step 3 the UE shall transmit a CHANNEL REQUEST message on RACH.

### 8.3.11.15 Inter-RAT Cell Change Order from UTRAN to GPRS/CELL_DCH/Success (stop of discontinuous uplink transmission)

#### 8.3.11.15.1 Definition

All UEs, which support FDD and UL DTX.

#### 8.3.11.15.2 Conformance requirement

The purpose of the inter-RAT cell change order procedure is to transfer, under the control of the network, a connection between the UE and UTRAN to another radio access technology (e.g. GSM). This procedure may be used in

CELL_DCH and CELL_FACH state. This procedure may be used when no RABs are established or when the established RABs are only from PS domain. This procedure may not be used when there is no PS signalling connection.

The procedure is initiated when UTRAN orders a UE in CELL_DCH or CELL_FACH state, to make a cell change to a radio access technology other than UTRAN, e.g. GSM.

To initiate the procedure, UTRAN sends a CELL CHANGE ORDER FROM UTRAN message.

…

The UE shall be able to receive a CELL CHANGE ORDER FROM UTRAN message and perform a cell change order to another RAT, even if no prior UE measurements have been performed on the target cell.

If the variable ESTABLISHED_SIGNALLING_CONNECTIONS does not include the CN domain identity "PS domain", or if the variable ESTABLISHED_SIGNALLING_CONNECTIONS includes the CN domain identity "CS domain":

1> the UE shall act as if the message was never received.

The UE shall:

1> if the UE has a pending "TGPS reconfiguration CFN" at the activation time received in the CELL CHANGE ORDER FROM UTRAN message the UE may:

2> abort the pending CM activation;

2> set the CM_PATTERN_ACTIVATION_ABORTED to TRUE.

1> otherwise:

2> set the CM_PATTERN_ACTIVATION_ABORTED to FALSE.

1> start timer T309; and

1> establish the connection to the other radio access technology, as specified within IE "Target cell description". This IE specifies the target cell identity, in accordance with the specifications for that other RAT. In case the target cell is a GSM/ GPRS cell, IE "Target cell description" may also include IE "NC mode", which specifies the cell selection mode to be applied in the target cell; and

1> if IE "NC mode" is not included in the CELL CHANGE ORDER FROM UTRAN:

2> retrieve it from the target cell as specified in [43];

2> act upon IE "NC mode" as specified in [43].

1> if the IE "RAB Information List" is included in the CELL CHANGE ORDER FROM UTRAN message:

2> ignore the contents of the IE "RAB Information List".

…

The UE regards the procedure as completed when it has received a successful response from the target RAT, e.g. in case of GSM when it received the response to a (PACKET) CHANNEL REQUEST in the new cell.

Upon successful completion of the cell change order, the UE shall:

1> stop timer T309;

1> clear or set variables upon leaving UTRA RRC connected mode as specified in subclause 13.4.

Upon indication of the UE having successfully completed the cell change order, UTRAN should:

1> release the radio connection; and

1> remove all context information for the concerned UE.

NOTE: The release of the UMTS radio resources is initiated from another RAT.

Reference(s)

TS 25.331 clause 8.3.11

8.3.11.15.3 Test purpose

To test that the UE is able to receive a CELL CHANGE ORDER FROM UTRAN message in CELL_DCH state when Radio bearers are mapped to the E-DCH channel with UL DTX and DL DRX (if supported) configured and perform a cell change to another RAT, even if no prior UE measurements have been performed on the target cell and E-DPDCH channels are active.

8.3.11.15.4 Method of test

Initial conditions

System Simulator: 2 cells - Cell 1 is UTRAN, Cell 2 is GPRS. 51.010 clauses 20.22 and 40.1.1 shall be referenced for the default parameters of Cell 2.

All cells belong to the same PLMN. UTRAN and GPRS cells belong to different location area.

Cell 1- SIB 1 T309 set to 8 seconds (see specific message contents)

UE: PS_DCCH+DTCH E_DCH/HS_DSCH (state 6-18), with UL DTX configured, under condition A20, as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports discontinuous uplink transmission.
- UE supports GSM/GPRS

Test Procedure

The UE is in the CELL_DCH state and has a radio bearer mapped on E-DCH, HS-DSCH established (with DRX enabled if supported) and UL DTX configured with active E-DCH transmission and HS-DSCH reception. The SS configures the GPRS cell, and then sends a CELL CHANGE ORDER FROM UTRAN message indicating the target cell description, GPRS cell, to the UE through DCCH of the serving UTRAN cell. After the UE receives the command it shall configure itself accordingly and switch to the new channel on the target GPRS cell. The SS checks whether the cell change is performed by checking that the UE receives a successful response to the CHANNEL REQUEST message from the SS through GPRS cell. The UE sends a ROUTING AREA UPDATE REQUEST message to indicate that the UTRAN UE context needs to be transferred to GPRS.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The SS brings the UE into PS_DCCH+DTCH E_DCH/HS_DSCH (with DRX enabled if supported) with UL DTX configured in Cell 1 |
| 3 | ← | | CELL CHANGE ORDER FROM UTRAN | Sent on Cell 1 (UTRAN cell) and the message indicates: the target cell description for GPRS. |
| 4 | UE | | | The UE accepts the cell change command and switches to the GPRS cell specified in the CELL CHANGE ORDER FROM UTRAN |
| 5 | → | | CHANNEL REQUEST | The SS receives this burst on the RACH of Cell 2 to establish temporary block flow (GPRS cell). It implies that the UE has switched to GPRS cell. |
| 6 | ← | | IMMEDIATE ASSIGNMENT | Uplink dynamic allocation. Sent on AGCH. |
| 7 | → | | ROUTING AREA UPDATE REQUEST | |

Specific message contents

SYSTEM INFORMATION BLOCK TYPE 1

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception.

| Information Element | Value/remark |
|---|---|
| T309 | 8 Sec |

CELL CHANGE ORDER FROM UTRAN

| Information Element | Value/remark |
|---|---|
| Message Type | |
| RRC transaction identifier | Arbitrarily selects one integer between 0 to 3 |
| Integrity check info | |
| - Message authentication code | SS calculates the value of MAC-I for this message and writes to this IE. |
| - RRC Message sequence number | SS provides the value of this IE, from its internal counter. |
| Activation time | Now |
| Target cell description | |
| - CHOICE Radio Access Technology | |
| - GSM | |
| - BSIC | BSIC of Cell2 |
| - Band Indicator | Set to "GSM/ PCS 1900" if GSM/ PCS 1900 is used in this test. Otherwise set to "GSM/DCS 1800 Band" |
| - BCCH ARFCN | Allocated BCCH ARFCN of Cell 2 |
| - NC mode | NOT PRESENT |

### 8.3.11.15.5 Test requirements

At step 4 the UE shall transmit a CHANNEL REQUEST message on RACH.

# 8.4 Measurement procedure

## 8.4.1 Measurement Control and Report

### 8.4.1.1 Measurement Control and Report: Intra-frequency measurement for transition from idle mode to CELL_DCH state (FDD)

#### 8.4.1.1.1 Definition

#### 8.4.1.1.2 Conformance requirement

Upon transition from idle mode to CELL_DCH state:

1> if intra-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:

2> if the cell in which the UE transited from idle mode is included in the active set for the CELL_DCH state, the UE shall:

3> begin measurement reporting.

2> otherwise:

3> the UE should not begin the measurement reporting. If the UE does not begin the measurement reporting, the measurement shall be restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

In CELL_DCH state, the UE shall:

1> transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are met for any ongoing measurements that are being performed in the UE.

…

The reporting criteria are fulfilled if either:

- a periodic MEASUREMENT REPORT message shall be sent according to the IE "Periodical Reporting Criteria"; or

- an event in stored IE "Measurement reporting criteria" was triggered. Events and triggering of reports for different measurement types are described in detail in clause 14.

For the measurement, which triggered the MEASUREMENT REPORT message, the UE shall:

1> set the IE "measurement identity" to the measurement identity, which is associated with that measurement in variable MEASUREMENT_IDENTITY;

1> set the IE "measured results" to include measurements according to the IE "reporting quantity" of that measurement stored in variable MEASUREMENT_IDENTITY; and

2> if all the reporting quantities are set to "false":

3> not set the IE "measured results".

1> set the IE "Measured results" in the IE "Additional measured results" according to the IE "reporting quantity" for all measurements associated with the measurement identities included in the "Additional measurements list" stored in variable MEASUREMENT_IDENTITY of the measurement that triggered the measurement report; and

2> if one or more additional measured results are to be included:

3> include only the available additional measured results, and sort them in ascending order according to their IE "measurement identity" in the MEASUREMENT REPORT message.

1> if the MEASUREMENT REPORT message was triggered by an event (i.e. not a periodical report):

…

The UE shall:

1> transmit the MEASUREMENT REPORT message on the uplink DCCH using either AM or UM RLC according to the stored IE "measurement reporting mode" associated with the measurement identity that triggered the report.

When the MEASUREMENT REPORT message has been submitted to lower layers for transmission:

1> the procedure ends.

…

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in TS 25.331 subclause 8.6 unless otherwise specified below.

The UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

….

2> for measurement types "inter-RAT measurement" or "inter-frequency measurement":

…

2> for measurement type "UE positioning measurement":

…

2> for any other measurement type:

3> if the measurement is valid in the current RRC state of the UE:

4> begin measurements according to the stored control information for this measurement identity.

1> if the IE "Measurement command" has the value "modify":

2> for all IEs present in the MEASUREMENT CONTROL message:

3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":

4> if the measurement type is quality, UE internal, intra-frequency, inter-frequency or inter-RAT:

5> if the UE is in CELL_FACH state:

6> the UE behaviour is not specified.

4> if measurement type is set to "intra-frequency measurement", for any of the optional IEs "Intra-frequency measurement objects list", "Intra-frequency measurement quantity", "Intra-frequency reporting quantity", "Measurement Validity", "report criteria" and "parameters required for each event" (given "report criteria" is set to "intra-frequency measurement reporting criteria") that are present in the MEASUREMENT CONTROL message:

2> for any other measurement type:

3> resume the measurements according to the new stored measurement control information.

1> if the IE "measurement command" has the value "release":

2> terminate the measurement associated with the identity given in the IE "measurement identity";

2> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY.

If the IE "Reporting Cell Status" is not received for intra-frequency, inter-frequency measurement, or inter-RAT measurement, the UE shall:

1> for intra-frequency measurement, inter-frequency measurement and inter-RAT measurement:

2> exclude the IE "Measured Results" in MEASUREMENT REPORT.

NOTE: The IE "Reporting Cell Status" within "Event Criteria List" defines whether "Cell Measured Results" is present for event-based reporting.

The IE "Reporting Cell Status" is not included in System Information Block 11/12 for periodic intra-frequency measurements. In this case the UE shall assume the default values "Report cells within active set and/or monitored set on used frequency " and "6".Reference

3GPP TS 25.331 clause 8.4.1.8.1, 8.4.1.3, 8.4.2.2, 8.6.7.9.

#### 8.4.1.1.3 Test Purpose

1. To confirm that the UE continues to monitor intra-frequency measurement quantity of the cells listed in System Information Block type 11 or 12 messages, after it has entered CELL_DCH state from idle mode. When the intra-frequency measurement reporting criteria specified in System Information Block type 11 or 12 messages have been met, it shall report the measurements using MEASUREMENT REPORT message(s).

2. To confirm that the UE terminates monitoring and reporting activities for the cells listed in "intra-frequency cell info list" IE in System Information Block type 11 or 12 messages, after it has received a MEASUREMENT CONTROL message that specifies the measurement type to be "intra-frequency measurement" with the same measurement identity as in System Information Block Type 11 or 12 messages. To confirm that the UE reconfigures the monitoring and reporting activities based on the last MEASUREMENT CONTROL message received.

#### 8.4.1.1.4 Method of test

##### Initial Condition

System Simulator: 3 cells – Cell 1, Cell 2 and Cell 3 are active.

UE: "Registered idle mode on CS" (state 2) or "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

##### Test Procedure

Table 8.4.1.1-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Column marked "T0" denotes the initial conditions, while columns marked "T1" and "T2" are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.4.1.1-1**

| Parameter | Unit | Cell 1 | | | Cell 2 | | | Cell 3 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | Mid Range Test Frequency | | | Mid Range Test Frequency | | |
| CPICH Ec | dBm/3.84 MHz | -60 | -60 | -60 | -70 | -60 | -80 | -80 | -60 | -60 |

The UE is initially in idle mode and has selected cell 1 for camping. The System Information Block type 11 messages are modified with respect to the default settings. The key measurement parameters in the modified System Information Block message are as follow: report criteria = "periodic reporting criteria", reporting interval = "64 seconds".

SS prompts the operator to make an outgoing call of a supported traffic class. SS and UE shall execute procedure P3 (for CS service) or P5 (for PS service). Next SS and UE shall execute procedure P7 (for CS service) or P9 (for PS service). Then SS and UE shall execute procedure P11 (for CS service) or P13 (for PS service). The UE shall send a MEASUREMENT REPORT message after reaching CELL_DCH state, reporting cell 2's CPICH RSCP value. After 64 seconds has passed since SS receives the first MEASUREMENT REPORT message, the UE shall transmit a second MEASUREMENT REPORT message.

NOTE: In P11 or P13 in step 4, in RADIO BEARER SETUP message, IE "Default DPCH Offset Value" and IE "DPCH frame offset" are set to "0".

SS sends a MEASUREMENT CONTROL message on the downlink DCCH. In this message, SS configures an intra-frequency measurement based on the measurement quantity CPICH RSCP. Parameters used in this message are: measurement identity = "1", report criteria = "event-trigger", event identity = "1e", reporting threshold = "-70 dBm". SS checks to see that no MEASUREMENT REPORT messages are sent within the next 64 seconds (which is due to periodic reporting). SS reconfigures the downlink transmission power settings according to values in column "T1" in table 8.4.1.1-1. The UE shall transmit a MEASUREMENT REPORT message when it detects that the CPICH RSCP of cell 3 has risen above the threshold value specified in the previous MEASUREMENT CONTROL message.

SS sends then a new MEASUREMENT CONTROL message to add cell 2 to the list of the cells the UE shall measure. Since the RSCP for cell 2 is above the threshold for event 1e to be triggered, a MEASUREMENT REPORT triggered by cell 2 shall be sent by the UE.

SS reconfigures the downlink transmission power settings according to values in column "T2" in table 8.4.1.1-1. SS sends a new MEASUREMENT CONTROL message on the downlink DCCH. In this message, SS configures an intra-frequency measurement based on the measurement quantity CPICH RSCP. Parameters used in this message are: measurement identity = "1", report criteria = "event-trigger", event identity = "1a", Reporting range 8db. SS reconfigures the downlink transmission power settings according to values in column "T1" in table 8.4.1.1-1. The UE shall transmit a MEASUREMENT REPORT message when it detects that the condition for event 1a is fulfilled. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is in idle mode and camped onto cell 1. The System Information Block type 11 messages to be transmitted are different from the default settings (see specific message contents) |
| 2 | ↔ | | SS executes procedure P3 (clause 7.4.2.1.2) or P5 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ↔ | | SS executes procedure P7 (clause 7.4.2.3.2) or P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ↔ | | SS executes procedure P11 (clause 7.4.2.5.2) or P13 (clause 7.4.2.6.2) specified in TS 34.108. | IE "Default DPCH Offset Value" and IE "DPCH frame offset " in RADIO BEARER SETUP message is set to "0". |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 5 | SS | | | SS shall wait for a MEASUREMENT REPORT message. This MEASUREMENT REPORT shall be received on or before 64 Seconds. |
| 6 | → | | MEASUREMENT REPORT | After receiving this message, SS shall expect to receive the next MEASUREMENT REPORT message after 64 seconds. |
| 6a | → | | MEASUREMENT REPORT | |
| 7 | ← | | MEASUREMENT CONTROL | A measurement with "measurement identity" IE set to "1" is assigned, with the IE "CHOICE reporting criteria" set to "intra-frequency measurement reporting criteria". See specific message content for the rest of the message. |
| 8 | | | | SS waits for 64 seconds and verifies that no further MEASUREMENT REPORT messages are detected on the uplink DCCH. |
| 9 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in table 8.4.1.1-1. |
| 10 | → | | MEASUREMENT REPORT | SS verifies that UE transmits a MEASUREMENT REPORT message triggered by cell 3 and containing report the measured CPICH RSCP value of cell 3. |
| 10a | ← | | MEASUREMENT CONTROL | A MEASUREMENT CONTROL is sent to the UE to modify the list of the cells the UE shall monitor. |
| 10b | → | | MEASUREMENT REPORT | SS verifies that UE transmits a MEASUREMENT REPORT message triggered by cell 2. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 11 | | | | SS re-adjusts the downlink transmission power settings according to columns "T2" in table 8.4.1.1-2. |
| 12 | ← | | MEASUREMENT CONTROL | A measurement with "measurement identity" IE set to "1" is assigned, with the IE "CHOICE reporting criteria" set to "intra-frequency measurement reporting criteria". See specific message content for the rest of the message. |
| 13 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in table 8.4.1.1-3 and waits 5 seconds. |
| 14 | → | | MEASUREMENT REPORT | SS verifies that UE transmits a MEASUREMENT REPORT message to report occurrence of event 1a. |
| 15 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

System Information Block type 11 (Step 1)

Use the same System Information Block Type 11 message as found in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement control system information | |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present<br>Absence of this IE is equivalent to default value 1 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present<br>(This IE shall be ignored by the UE for SIB11) |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | TRUE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection | Not Present (The IE shall be absent as this is the serving cell) |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0dB |
| - Reference time difference to cell | 1024 |
| - Read SFN Indicator | TRUE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | Not present<br>For neigbouring cell, if HCS is not used and all the parameters in cell selection and re-selection info are Default value, this IE is absent. |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement Reporting Mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |

| Information Element | Value/remark |
|---|---|
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical reporting |
| - CHOICE report criteria | Periodic reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 64 seconds |

MEASUREMENT REPORT (Step 6 and 6a)

NOTE 1: The Cell measured results for Cell 1 may or may not be present.

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | See Note 1 |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 (if present) |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is absent |
| - Pathloss | Check to see if this IE is absent |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | "Checked to see if set to within an acceptable range" |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event Results | Check to see if this IE is absent |

MEASUREMENT CONTROL (Step 7)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra Frequencey Cell Info List | |
| - CHOICE intra-frequency cell removal | Remove all intra-frequency cells |
| - New intra-frequency cells | 2 new intra-frequency cells |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 1 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | 256 chips |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 3 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present (Default is 0) |
| - CHOICE Mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1e |
| - Triggering condition 1 | Not present |
| - Triggering condition 2 | Monitored set cells |
| - Hysteresis | 2 (1 dB) |
| - Threshold used frequency | -70 dBm |
| - Time to trigger | 0 ms |
| - Reporting cell status | |

| Information Element | Value/remark |
|---|---|
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 3 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 10)

NOTE 1: Cell measured results for cells 1 and 3 may appear in either order (i.e. cell 1 then cell 3 or cell 3 then cell 1).

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | See Note 1 |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent. |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is present |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | See Note 1 |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is present and that the COUNT-C-SFN frame difference is included in it. |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Intra-frequency measurement event results" |
| - Intra-frequency event identity | Check to see if this IE is set to "1e" |
| - Cell measured event results | |
| - CHOICE mode | Check to see if this IE is set to "FDD" |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |

MEASUREMENT CONTROL (Step 10a)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Modify |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | 1 new intra-frequency cell |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | 0 |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 2 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity | Not Present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not Present |
| - CHOICE report criteria | Not Present |

MEASUREMENT REPORT (Step 10b)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | Check to see if measurement results for 3 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | (for cell 1) |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent. |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is present |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | (for cell 2) |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is present and that the COUNT-C-SFN frame difference may or may not be included in it. |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | (for cell 3) |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is present and that the COUNT-C-SFN frame difference is included in it. |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Intra-frequency measurement event results" |
| - Intra-frequency event identity | Check to see if this IE is set to "1e" |
| - Cell measured event results | |
| - CHOICE mode | Check to see if this IE is set to "FDD" |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |

MEASUREMENT CONTROL (Step 12)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove all intra-frequency cells |
| - New intra-frequency cells | 2 new intra-frequency cells |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 1 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | 0 chips |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 2 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present (Default is 0) |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1a |
| - Triggering condition 1 | Not present |
| - Triggering condition 2 | Monitored set cells |
| - Reporting range constant | 16 (8 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0 |
| - Hysteresis | 0 (0 dB) |
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | 1 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 5000 msec |

| Information Element | Value/remark |
|---|---|
| - Amount of reporting | Infinity |
| - Reporting interval | 16 s |
| - Reporting cell status | Not Present |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 14)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | |
| - Intra-frequency event identity | Check to see if this IE is set to "1a" |
| - Cell measured event results | |
| - CHOICE mode | Check to see if this IE is set to "FDD" |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |

#### 8.4.1.1.5 Test Requirement

After step 5 the UE shall start to transmit 2 MEASUREMENT REPORT messages at 64 seconds interval. The measurement quantity "CPICH RSCP" of cell 2 shall be reported in these messages.

After step 7 the UE shall not transmit any MEASUREMENT REPORT messages within 64 seconds after SS has transmitted the MEASUREMENT CONTROL message in step 7.

After step 9 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, to report that the CPICH RSCP value for cell 3 has risen above the threshold stated in the MEASUREMENT CONTROL message transmitted by the SS in step 7. This MEASUREMENT REPORT message shall also contain IE "Event results", indicating the triggering of event '1e' by cell 3. It shall also contain the measured CPICH RSCP value and cell synchronisation information for cell 3, and the measured CPICH Ec/No and RSCP values for cell 1.

After step 10a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH to report that the CPICH RSCP value for cell 2 has risen above the threshold stated in the MEASUREMENT CONTROL message transmitted by the SS in step 10a. The MEASUREMENT REPORT message shall contain the measured CPICH RSCP value and cell synchronisation information for cell 2 and cell 3, as well as the measured CPICH Ec/No and RSCP for cell 1. The IE "Event results" in this message shall indicate that cell 2 has triggered the event.

After step 13, the UE shall transmit a MEASUREMENT REPORT message containing IE "Event results", indicating the triggering of event '1a' by cell 2. The MEASUREMENT REPORT message shall not contain any measured results.

### 8.4.1.1A Measurement Control and Report: Intra-frequency measurement for transition from idle mode to CELL_DCH state (TDD)

#### 8.4.1.1A.1 Definition

#### 8.4.1.1A.2 Conformance requirement

The UE shall obey the following rules for different measurement types after transiting from idle mode to CELL_DCH state:

Upon transition from idle mode to CELL_DCH state, the UE shall:

1> if intra-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:

2> begin measurement reporting.

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in subclause 8.6 in TS 25.331 unless otherwise specified below.

The UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> if the measurement type is quality, UE internal, intra-frequency, inter-frequency or inter-RAT:

3> if, according to its measurement capabilities, the UE does not require compressed mode to perform the measurements:

4> if the measurement is valid in the current RRC state of the UE:

5> begin measurements according to the stored control information for this measurement identity.

2> for any other measurement type:

3> if the measurement is valid in the current RRC state of the UE:

4> begin measurements according to the stored control information for this measurement identity.

1> if the IE "measurement command" has the value "release":

2> terminate the measurement associated with the identity given in the IE "measurement identity";

2> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY.

1> clear the entry for the MEASUREMENT CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS;

1> if the UE "Additional Measurement List" is present:

2> if the received measurement configuration in this MEASUREMENT CONTROL message, or any measurement identities in the "Additional Measurement List" do not all have the same validity:

3> set the variable CONFIGURATION_INCOMPLETE to TRUE.

1> and the procedure ends.

The purpose of the measurement reporting procedure is to transfer measurement results from the UE to UTRAN.

In CELL_DCH state, the UE shall:

1> transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are met for any ongoing measurements that are being performed in the UE.

The reporting criteria are fulfilled if either:

- the first measurement has been completed according to the requirements set in [19] or [20] for a newly initiated measurement with periodic reporting; or

- the time period indicated in the stored IE "Periodical reporting criteria" has elapsed since the last measurement report was submitted to lower layers for a given measurement; or

- an event in stored IE "Measurement reporting criteria" was triggered. Events and triggering of reports for different measurement types are described in detail in clause 14.

For the measurement, which triggered the MEASUREMENT REPORT message, the UE shall:

1> set the IE "measurement identity" to the measurement identity, which is associated with that measurement in variable MEASUREMENT_IDENTITY;

1> set the IE "measured results" to include measurements according to the IE "reporting quantity" of that measurement stored in variable MEASUREMENT_IDENTITY; and

2> if all the reporting quantities are set to "false":

3> not set the IE "measured results".

1> set the IE "Measured results" in the IE "Additional measured results" according to the IE "reporting quantity" for all measurements associated with the measurement identities included in the "Additional measurements list" stored in variable MEASUREMENT_IDENTITY of the measurement that triggered the measurement report; and

2> if more than one additional measured results are to be included:

3> include only the available additional measured results, and sort them in ascending order according to their IE "measurement identity" in the MEASUREMENT REPORT message.

1> if the MEASUREMENT REPORT message was triggered by an event (i.e. not a periodical report):

2> set the IE "Event results" according to the event that triggered the report.

The UE shall:

1> transmit the MEASUREMENT REPORT message on the uplink DCCH using either AM or UM RLC according to the stored IE "measurement reporting mode" associated with the measurement identity that triggered the report.

When the MEASUREMENT REPORT message has been submitted to lower layers for transmission:

1> the procedure ends.

### Reference

TS 25.331, clauses 8.4.1.8.1, 8.4.2, 8.4.1.3.

### 8.4.1.1A.3 Test Purpose

1. To confirm that the UE continues to monitor intra-frequency measurement quantity of the cells listed in System Information Block type 11 or 12 messages, after it has entered CELL_DCH state from idle mode. When the intra-frequency measurement reporting criteria specified in System Information Block type 11 or 12 messages have been met, it shall report the measurements using MEASUREMENT REPORT message(s).

2. To confirm that the UE terminates monitoring and reporting activities for the cells listed in "intra-frequency cell info list" IE in System Information Block type 11 or 12 messages, after it has received a MEASUREMENT CONTROL message that specifies the measurement type to be "intra-frequency measurement" with the same measurement identity as in System Information Block Type 11 or 12 messages.

3. To confirm that the UE reconfigures the monitoring and reporting activities based on the last MEASUREMENT CONTROL message received.

### 8.4.1.1A.4 Method of test

#### Initial Condition

System Simulator: 3 cells - Cell 1, Cell 2 and Cell 3 are active. Each cell configures 3 carrier frequency,one is primary frequency,other are secondary frequencies. Their frequency relation show as below:

| Parameter | Cell 1 | Cell 2 | Cell 3 |
|---|---|---|---|
| UTRA RF Channel Number1 | Ch. 2 | Ch. 1 | Ch.1 |
| UTRA RF Channel Number1 | Ch. 1 | CH2, | Ch.3 |
| UTRA RF Channel Number1 | Ch.3 | Ch.3 | Ch.2 |

UE: "Registered idle mode on CS" (state 2) or "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

Table 8.4.1.1A-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution.

Column marked "T0" denotes the initial conditions, while column marked as "T1" will be applied during the test.

**Table 8.4.1.1A-1**

| Parameter | Unit | Cell 1 | | Cell 2 | | Cell 3 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| PCCPCH_RSCP | dBm | -69 | -69 | -74 | -64 | -79 | -67 |

The UE is initially in idle mode and has selected cell 1 for camping. The System Information Block type 11 messages are modified with respect to the default settings to prevent reporting of "Cell synchronisation information" and also to include cell 2 into the monitored neighbour cell list. The key measurement parameters in the modified System Information Block message are as follow: measurement type = "intra-frequency measurement", measurement quantity = "PCCPCH RSCP", report criteria = "periodic reporting criteria", reporting interval = "64 seconds".

SS prompts the operator to make an outgoing call of a supported traffic class. SS and UE shall execute procedure P3 (for CS service) or P5 (for PS service). Next SS and UE shall execute procedure P7 (for CS service) or P9 (for PS service). Then SS and UE shall execute procedure P11 (for CS service) or P13 (for PS service).

The UE shall send a MEASUREMENT REPORT message after reaching CELL_DCH state, reporting cell 2's PCCPCH RSCP value. After 64 seconds has passed since SS receives the first MEASUREMENT REPORT message, the UE shall transmit a second MEASUREMENT REPORT message.

SS sends a MEASUREMENT CONTROL message on the downlink DCCH. In this message, SS configures an intra-frequency measurement based on the measurement quantity PCCPCH RSCP. Parameters used in this message are: measurement identity = "1", report criteria = "event-trigger", event identity = "1g". All intra-frequency cells are removed. Cell 3 is included as new intra-frequency cell. SS checks to see that no MEASUREMENT REPORT messages are sent within the next 64 seconds (which is due to periodic reporting). SS reconfigures the downlink transmission power settings according to values in column "T1" in table 8.4.1.1A-1. The UE shall transmit a MEASUREMENT REPORT message when it detects that the PCCPCH RSCP of cell 3 is present. SS sends another MEASUREMENT CONTROL message on the downlink DCCH to include cell 2 in the monitored cells. SS configures an intra-frequency measurement based on the measurement quantity PCCPCH RSCP. Parameters used in this message are: measurement identity = "1", report criteria = "event-trigger", event identity = "1g". The UE shall transmit a MEASUREMENT REPORT message when it detects that the PCCPCH RSCP of cell 2 and indicating cell 2 as a best cell. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is in idle mode and camped onto cell 1. The System Information Block type 11 messages to be transmitted are different from the default settings (see specific message contents). Cell 2 is included in CELL_INFO LIST. |
| 2 | ↔ | | SS executes procedure P3 (clause 7.4.2.1.2) or P5 (clause 7.4.2.2.2) specified in TS 34.108. | UE reaches PS-CELL_DCH or CS-CELL_DCH |
| 3 | ↔ | | SS executes procedure P7 (clause 7.4.2.3.2) or P9 (clause 7.4.2.4.2) specified in TS 34.108. | UE reaches PS-DCCH_DCH or CS-DCCH_DCH |
| 4 | ↔ | | SS executes procedure P11 (clause 7.4.2.5.2) or P13 (clause 7.4.2.6.2) specified in TS 34.108. | UE reaches PS-DCCH+DTCH_DCH or CS-DCCH+DTCH_DCH |
| 5 | | SS | | SS shall wait for a MEASUREMENT REPORT message. This MEASUREMENT REPORT shall be received on or before 64 Seconds. |
| 6 | → | | MEASUREMENT REPORT | After receiving this message, SS shall expect to receive the next MEASUREMENT REPORT message after 64 seconds |
| 7 | → | | MEASUREMENT REPORT | |
| 7a | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS prompts UE reaches into CELL_DCH state of secondary frequency |
| 7b | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE reaches into secondary frequency ,and transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 8 | ← | | MEASUREMENT CONTROL | A measurement with "measurement identity" IE set to "1" is assigned, with the IE "CHOICE reporting criteria" set to "intra-frequency measurement reporting criteria". See specific message content for the rest of the message. |
| 9 | | | | SS waits for 64 seconds and verifies that no further MEASUREMENT REPORT messages are detected on the uplink DCCH. |
| 10 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in table 8.4.1.1A-1. |
| 11 | → | | MEASUREMENT REPORT | SS verifies that UE transmits a MEASUREMENT REPORT message triggered by cell 3 containing report the measured PCCPCH RSCP value of cell 3. |
| 12 | ← | | MEASUREMENT CONTROL | A MEASUREMENT CONTROL is sent to the UE to modify the list of the cells the UE shall monitor. |
| 13 | → | | MEASUREMENT REPORT | SS verifies that UE transmits a MEASUREMENT REPORT message triggered by cell 2, containing report the measured PCCPCH RSCP value of cell 2. The UE shall report event 1G for change to best cell, cell2. |
| 14 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

System Information Block type 11 (Step 1)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present<br>Absence of this IE is equivalent to default value 1 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present<br>(This IE shall be ignored by the UE for SIB11) |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | TRUE |
| - CHOICE Mode | TDD |
| - Primary CCPCH Info | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Cell selection and Re-selection | Not Present (The IE shall be absent as this is the serving cell) |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0dB |
| - Reference time difference to cell | 1024 |
| - Read SFN Indicator | TRUE |
| - CHOICE Mode | TDD |
| - Primary CCPCH Info | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Cell selection and Re-selection info | Not present<br>For neigbouring cell, if HCS is not used and all the parameters in cell selection and re-selection info are Default value, this IE is absent. |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present (Default is 0) |
| - CHOICE Mode | TDD |
| - Measurement quantity list | |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency measurement for RACH reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Measurement Reporting Mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |

| Information Element | Value/remark |
|---|---|
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical reporting |
| - CHOICE report criteria | Periodic reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 64 seconds |
| - Inter-frequency measurement system information | Not present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

MEASUREMENT REPORT (Step 6 and 7)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 2 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 1 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event Results | Check to see if this IE is absent |

MEASUREMENT CONTROL (Step 8)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove all intra-frequency cells |
| - New intra-frequency cells | 2 new intra-frequency cells |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | 0 chips |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Set to same as used for cell 3 |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Set to same code as for cell 1 |
| - Cell for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present (Default is 0) |
| - CHOICE Mode | TDD |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1g |
| - Triggering condition 1 | Not present |
| - Triggering condition 2 | Not present |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 0 ms |
| - Reporting cell status | Present |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 3 |

MEASUREMENT REPORT (Step 11)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | (for cell 1) |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 1 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| - Cell measured results | (for cell 3) |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is present and that the COUNT-C-SFN frame difference is included in it. |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 3 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Intra-frequency measurement event results" |
| - Intra-frequency event identity | Check to see if this IE is set to "1g" |
| - Cell measured event results | |
| - CHOICE mode | Check to see if this IE is set to "TDD" |
| - Cell parameters Id | Check to see if it's the same for cell 3 |

MEASUREMENT CONTROL (Step 12)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Modify |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | 1 new intra-frequency cells |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Set to same as used for cell 2 |
| - Cell for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity | Not Present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not Present |
| - CHOICE report criteria | Not Present |

MEASUREMENT REPORT (Step 13)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | Check to see if measurement results for 3 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | (for cell2) |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 2 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| - Cell measured results | (for cell1) |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 1 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| - Cell measured results | (for cell 3) |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is present and that the COUNT-C-SFN frame difference is included in it. |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 3 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Intra-frequency measurement event results" |
| - Intra-frequency event identity | Check to see if this IE is set to "1g" |
| - Cell measured event results | |
| - CHOICE mode | Check to see if this IE is set to "TDD" |
| - Primary CCPCH Info | Check to see if it's the same code for cell 2 |

### 8.4.1.1A.5 Test Requirement

After step 5 the UE shall start to transmit 2 MEASUREMENT REPORT messages at 64 seconds interval. The measurement quantity "PCCPCH RSCP" of cell 2 shall be reported in these messages.

After step 8 the UE shall not transmit any MEASUREMENT REPORT messages within 64 seconds after SS has transmitted the MEASUREMENT CONTROL message in step 8.

After step 10 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, to report the PCCPCH RSCP value for cell 3. This MEASUREMENT REPORT message shall also contain IE "Event results", indicating the triggering of event '1g' by cell 3. It shall also contain the measured PCCPCH RSCP value and cell synchronisation information for cell 3, and the measured PCCPCH RSCP values for cell 1.

After step 12 the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, to report the PCCPCH RSCP value for cell 2. This MEASUREMENT REPORT message shall also contain IE "Event results", indicating the triggering of event '1g' by cell 2.

## 8.4.1.2 Measurement Control and Report: Inter-frequency measurement for transition from idle mode to CELL_DCH state (FDD)

### 8.4.1.2.1 Definition

### 8.4.1.2.2 Conformance requirement

Upon transition from idle mode to CELL_DCH state, the UE shall:

1> stop monitoring the list of cells assigned in the IE "inter-frequency cell info list" in System Information Block type 12 (or System Information Block type 11).

Upon reception of a MEASUREMENT CONTROL message the UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> for measurement types "inter-RAT measurement" or "inter-frequency measurement" that require measurements on a frequency other than the actually used frequency:

3> if, according to its measurement capabilities, the UE requires compressed mode to perform that measurement type and after reception of this message a compressed mode pattern sequence with an appropriate measurement purpose is active according to the IE "Current TGPS Status Flag" in UE variable TGPS_IDENTITY; or

3> if, according to its measurement capabilities, the UE does not require compressed mode to perform the measurements on at least one supported band of that measurement type:

4> if the measurement is valid in the current RRC state of the UE:

5> begin measurements according to the stored control information for this measurement identity.

If the IE "Reporting Cell Status" is not received for intra-frequency, inter-frequency measurement, or inter-RAT measurement, the UE shall:

1> for intra-frequency measurement, inter-frequency measurement and inter-RAT measurement:

2> exclude the IE "Measured Results" in MEASUREMENT REPORT.

Reference

3GPP TS 25.331 clauses 8.4.1.3, 8.4.1.8.2, 8.6.6.15 and 8.6.7.9

### 8.4.1.2.3 Test Purpose

1. To confirm that the UE stops monitoring the list of cells assigned in the IE "inter-frequency cell info" in System Information Block type 11 messages, after it enters CELL_DCH state from idle mode.

2. To confirm that the UE, which requires compressed mode, starts to perform inter-frequency measurement and related reporting activities, when it receives a MEASUREMENT CONTROL message with the "DPCH compressed mode status info" IE indicating that a stored compressed mode pattern sequence be simultaneously activated.

3. To confirm that the UE, which does not require compressed mode, starts to perform inter-frequency measurement and related reporting activities when it receives a MEASUREMENT CONTROL message without IE "DPCH compressed mode status info".

4. To confirm that the UE excludes the IE "Measured Results" for any cells in the MEASUREMENT REPORT messages, after it receives a MEASUREMENT CONTROL message with "Reporting cell status" IE omitted.

8.4.1.2.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and cell 4 are active.

UE: "Registered idle mode on CS" (state 2) or "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Related ICS/IXIT statements

- Compressed mode required yes/no

Test Procedure

Table 8.4.1.2-1 illustrates the downlink power to be applied for the 2 cells.

**Table 8.4.1.2-1**

| Parameter | Unit | Cell 1 | Cell 4 |
|---|---|---|---|
| UTRA RF Channel Number | | Mid Range Test Frequency | High Range Test Frequency |
| CPICH Ec | dBm/3.84 MHz | -60 | -75 |

The UE is initially in idle mode and has selected cell 1 for camping.

SS prompts the operator to make an outgoing call for one of the traffic classes supported by the UE. SS and UE shall execute procedure P3 (for CS service) or P5 (for PS service). The RRC CONNECTION SETUP message used in procedure P3 or P5 should contain IE "DPCH compressed mode info", setting the "TGPS status flag" to "Deactivate" and configuring transmission pattern gap sequence with TGPSI=1 only if UE requires compressed mode. Next SS and UE shall execute procedure P7 (for CS service) or P9 (for PS service). Then SS and UE shall execute procedure P11 (for CS service) or P13 (for PS service). An optional PHYSICAL CHANNEL RECONFIGURATION message is transmitted by SS to activate the transmission pattern gap sequence with TGPSI=1, if the UE requires compressed mode to perform inter-frequency measurement. Correspondingly, the UE shall start the compressed mode operations at designated time and respond with PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the UL DCCH. The UE shall not transmit any MEASUREMENT REPORT messages, which pertain to measurement readings for cells listed in the IE "inter-frequency cell info list" in System Information Block Type 11.

If UE requires compressed mode, SS sends PHYSICAL CHANNEL RECONFIGURATION message on the downlink DCCH, specifying that compressed mode sequence pattern with TGPSI=1 be deactivated. The UE shall reply with PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH if UE configures according to the PHYSICAL CHANNEL RECONFIGURATION message.

SS sends MEASUREMENT CONTROL message on the downlink DCCH. In this message, SS requests UE to perform inter-frequency measurement with periodic reporting of CPICH RSCP values for cell 4. If UE requires compressed mode, IE "DPCH compressed status info" IE to activate the transmission gap pattern sequence with TGPSI = 1 is included in this message.

The UE shall start inter-frequency measurement and reporting for cell 4's CPICH RSCP values. It shall report this measurement result by transmitting MEASUREMENT REPORT messages on uplink DCCH periodically at 16 seconds interval.

SS sends MEASUREMENT CONTROL message on the downlink DCCH omitting the IE "Reporting cell status". The UE shall send MEASUREMENT REPORT messages on the uplink DCCH, with the IE "Cell measured results" excluded in these messages. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is idle mode and camped onto cell 1.System Information Block Type 11 to be transmitted is different from the default settings (see specific message contents) |
| 2 | ↔ | | SS executes procedure P3 (clause 7.4.2.1.2) or P5 (clause 7.4.2.2.2) specified in TS 34.108. | SS prompts the operator to make an outgoing call. |
| 3 | ↔ | | SS executes procedure P7 (clause 7.4.2.3.2) or P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ↔ | | SS executes procedure P11 (clause 7.4.2.5.2) or P13 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | ← | | Void (if compressed mode is not required by the UE), or PHYSICAL CHANNEL RECONFIGURATION (if compressed mode is required by the UE) | If compressed mode is not required (refer ICS/IXIT), then goto step 6. Else, activate the compressed mode operation. |
| 5a | → | | Void (if compressed mode is not required by the UE), or PHYSICAL CHANNEL RECONFIGURATION COMPLETE (if compressed mode is required by the UE) | UE shall remain in CELL_DCH state. |
| 6 | | | | SS checks to see that no MEASUREMENT REPORT messages are received for 10 s.<br>If compressed mode is not required (refer ICS/IXIT), then goto step 9. |
| 7 | ← | | Void (if compressed mode is not required by the UE), or PHYSICAL CHANNEL RECONFIGURATION (if compressed mode is required by the UE) | Existing compressed mode sequence pattern is de-activated in this message. |
| 8 | → | | Void (if compressed mode is not required by the UE), or PHYSICAL CHANNEL RECONFIGURATION COMPLETE (if compressed mode is required by the UE) | UE shall remain in CELL_DCH state. |
| 9 | ← | | MEASUREMENT CONTROL | SS requests UE to start inter-frequency measurement for cell 4, and performing periodic reporting for cell 4's CPICH RSCP. See specific message content below. |
| 10 | → | | MEASUREMENT REPORT | UE shall report cell 4's CPICH RSCP reading periodically. |
| 11 | ← | | MEASUREMENT CONTROL | SS changes the reporting criteria of cell 4 to 'event 2c'. "Reporting cell status" IE in this message is omitted. |
| 12 | → | | MEASUREMENT REPORT | SS monitors the uplink DCCH to make sure that only 1 such message is received almost immediately after step 11. This message shall not contain IE "Inter-frequency cell measured results" |
| 13 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

System Information Block type 11 (Step 1)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| -Use of HCS | Not used |
| -Cell selection and reselection quality measure | CPICH Ec/No |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not Present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH Tx power | Not present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not present |
| - Cells for measurement | Not present |
| - Intra-frequency measurement quantity | Not present |
| - Intra-frequency reporting quantity for RACH reporting | Not present |
| - Maximum number of reported cells on RACH | Not present |
| - Reporting information for state CELL_DCH | Not present |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | Not present |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | Reference to table 6.1.2 of TS34.108 for Cell 4 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.4 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and re-selection info | Not present<br>For neigbouring cell, if HCS is not used and all the parameters in cell selection and re-selection info are Default value, this IE is absent. |
| -Cells for measurement | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

RRC CONNECTION SETUP (Step 2)

If UE do not require compressed mode, use the message found in TS 34.108 clause 9.

If UE requires compressed mode, use the message found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing Indication | Initialise | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | Single TPC | |
| - CHOICE Mode | FDD | |
| - Power offset $P_{Pilot-DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Fixed or flexible position | Fixed | |
| - TFCI existence | FALSE | |
| - Number of bits for Pilot bits (SF=128, 256) | Refer to the parameter set in TS 34.108 | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not Present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | Undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only depending the on UE capability | |
| - Downlink compressed mode method | SF/2 (or Not present depending on the UE capability) | |
| - Uplink compressed mode method | SF/2 or Not present depending on the UE capability | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity Mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | 0 | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Reference to 34.108 | |
| - PDSCH with SHO DCH info | Not Present | |
| - PDSCH code mapping | Not Present | |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH can be used | |
| - DPCH frame offset | Set to value: Default DPCH Offset value mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL Channelisation code | | |
| - Secondary scrambling code | 1 | |

| | | |
|---|---|---|
| - Spreading factor | Reference to 34.108 | |
| - Code number | 0 | |
| - Scrambling code change | No code change | |
| - TPC combination index | 0 | |
| - SSDT Cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |
| SCCPCH information for FACH | Not present | R99 and Rel-4 only |

PHYSICAL CHANNEL RECONFIGURATION (Step 5)

Use the same message sub-type in clause 9 of TS 34.108 titled "Non speech in CS" or "Speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS", with Scrambling code change set to Default1 and with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing Indication | Maintain | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot-DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Activate | |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 | |
| - Transmission gap pattern sequence configuration parameters | Not Present | |
| Downlink information per radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| -PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

PHYSICAL CHANNEL RECONFIGURATION (Step 7)

Use the same message sub-type in clause 9 of TS 34.108 titled "Non speech in CS" or "Speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS", with Scrambling code change set to Default1 and with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing Indication | Maintain | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot-DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Number of bits for Pilot bits (SF=128,256) | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | | |
| - Transmission gap pattern sequence | | |
| - TGPSI | 1 | |
| - TPGS status Flag | Deactivate | |
| - TGCFN | Not Present | |
| - Transmission gap pattern sequence configuration parameters | Not Present | |
| - TX Diversity mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information per radio link list | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Serving E-DCH radio link indicator | FALSE | Rel-6 |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - E-AGCH Info | Not Present | Rel-6 |
| - E-HICH Information | Not Present | Rel-6 |
| - E-RGCH Information | Not Present | Rel-6 |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 |

| | | |
|---|---|---|
| | | only |

MEASUREMENT CONTROL (Step 9)

If UE requires compressed mode.

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN of the downlink frequency for cell 4 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | Not Present |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Measurement validity | Not present |
| - Inter-frequency set update | Not present |
| - CHOICE report criteria | Periodic reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Status Flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

If UE do not require compressed mode.

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN of the downlink frequency for cell 4 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | |
| - Inter-frequency cell id | 4 |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | Not Present |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Measurement validity | Not present |
| - Inter-frequency set update | Not present |
| - CHOICE report criteria | Periodic reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 10)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-frequency measured results list" |
| - Inter-frequency measurement results | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_4$ |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if set to the same code for cell 4 |
| - CPICH Ec/No | Check to see if it is absent |
| - CPICH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Additional Measured results | Check to see if it is absent |
| Event Results | Check to see if it is absent |

MEASUREMENT CONTROL (Step 11)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Set up |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN uplink (Nu) | UARFCN of the uplink frequency for cell 4 |
| - UARFCN downlink (Nd) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | Not Present |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | Not Present |
| - Measurement validity | Not present |
| - Inter-frequency set update | |
| -UE Autonomous update mode | On with no reporting |
| -Non autonomous update mode | Not Present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2c |
| - Threshold used frequency | Not Present |
| - W used frequency | Not Present |
| - Hysteresis | 1 (0.5 dB) |
| - Time to trigger | 0 milliseconds |
| - Reporting cell status | Not Present |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -85 dBm |
| - W non used frequency | 0 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 12)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Additional Measured Results | Check to see if it is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Inter-frequency measurement event results" |
| - Inter-frequency event identity | Check to see if this IE is set to "2c" |
| - Inter-frequency cells | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_4$ |
| - Non frequency related measurement event results | |
| - CHOICE Mode | Check to see if set to "FDD" |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if set to the same code as cell 4 |

#### 8.4.1.2.5 Test Requirement

After step 5 the UE shall not transmit any MEASUREMENT REPORT messages pertaining to the measurement of CPICH RSCP of cell 4.

If UE requires compressed mode operation, after step 5, UE shall activate compressed mode operations at the time indicated by IE "TGCFN" and then transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on uplink DCCH using AM RLC.

If UE requires compressed mode, after step 7, UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on uplink DCCH using AM RLC.

After step 9 the UE shall transmit MEASUREMENT REPORT messages on uplink DCCH, reporting cell 4's CPICH RSCP value at periodic time interval of 16 seconds in "inter-frequency cell measurement results" IE.

After step 11 the UE shall transmit only 1 MEASUREMENT REPORT message on the uplink DCCH. In this message, IE "Measured Results" shall be absent.

### 8.4.1.2A Measurement Control and Report: Inter-frequency measurement for transition from idle mode to CELL_DCH state (TDD)

#### 8.4.1.2A.1 Definition

#### 8.4.1.2A.2 Conformance requirement

Upon transition from idle mode to CELL_DCH state, the UE shall:

1> stop monitoring the list of cells assigned in the IE "inter-frequency cell info list" in System Information Block type 12 (or System Information Block type 11).

Upon reception of a MEASUREMENT CONTROL message the UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> for measurement types "inter-frequency measurement":

3> if the IE "Inter-frequency cell info list" for that measurement identity is empty; or

3> if, according to its measurement capabilities, the UE does not require compressed mode to perform the measurements:

4> if the measurement is valid in the current RRC state of the UE:

5> begin measurements according to the stored control information for this measurement identity.

If the IE "Reporting Cell Status" is not received for inter-frequency measurement, the UE shall:

1> exclude the IE "Cell Measured Results" for any cell in MEASUREMENT REPORT.

Reference

3GPP TS 25.331 clauses 8.4.1.3, 8.4.1.8.2 and 8.6.7.9

### 8.4.1.2A.3 Test Purpose

1. To confirm that the UE stops monitoring the list of cells assigned in the IE "inter-frequency cell info" in System Information Block type 11 messages, after it enters CELL_DCH state from idle mode.
2. To confirm that the UE excludes the IE "cell measured results" for any cells in the MEASUREMENT REPORT messages, after it receives a MEASUREMENT CONTROL message with "Reporting cell status" IE omitted.

### 8.4.1.2A.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and cell 4 are active.

Two Cells configured 3 carriers,specified the frequencies as followed table :

| Parameters | Cell 1 | Cell 4 |
|---|---|---|
| UTRA RF Channel Number1 | Ch. 1 | Ch. 3 |
| UTRA RF Channel Number1 | Ch. 2 | Ch.1 |
| UTRA RF Channel Number1 | Ch.3 | Ch.2 |

UE: "Registered idle mode on CS" (state 2) or "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

Table 8.4.1.2A-1 illustrates the downlink power to be applied for the 2 cells.

**Table 8.4.1.2A-1**

| Parameter | Unit | Cell 1 | Cell 4 |
|---|---|---|---|
| UTRA RF Channel Number | | Mid Range Test Frequency | High Range Test Frequency |
| PCCPCH RSCP | dBm | -60 | -75 |

The UE is initially in idle mode and has selected cell 1 for camping.

SS prompts the operator to make an outgoing call for one of the traffic classes supported by the UE. SS and UE shall execute procedure P3 (for CS service) or P5 (for PS service). Next SS and UE shall execute procedure P7 (for CS service) or P9 (for PS service). Then SS and UE shall execute procedure P11 (for CS service) or P13 (for PS

service).The UE shall not transmit any MEASUREMENT REPORT messages, which pertain to measurement readings for cells listed in the IE "inter-frequency cell info list" in System Information Block Type 11.

SS sends MEASUREMENT CONTROL message on the downlink DCCH. In this message, SS requests UE to perform inter-frequency measurement with periodic reporting of PCCPCH RSCP values for cell 4.

The UE shall start inter-frequency measurement and reporting for cell 4's PCCPCH RSCP values. It shall report this measurement result by transmitting MEASUREMENT REPORT messages on uplink DCCH periodically at 16 seconds interval.

SS sends MEASUREMENT CONTROL message on the downlink DCCH omitting the IE "Reporting cell status". The UE shall send MEASUREMENT REPORT messages on the uplink DCCH, with the IE "Cell measured results" excluded in these messages. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is idle mode and camped onto cell 1.System Information Block Type 11 to be transmitted is different from the default settings (see specific message contents) |
| 2 | ↔ | | SS executes procedure P3 (clause 7.4.2.1.2) or P5 (clause 7.4.2.2.2) specified in TS 34.108. | SS prompts the operator to make an outgoing call. |
| 3 | ↔ | | SS executes procedure P7 (clause 7.4.2.3.2) or P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ↔ | | SS executes procedure P11 (clause 7.4.2.5.2) or P13 (clause 7.4.2.6.2) specified in TS 34.108. UE keeps the connection on the secondary carrier of Cell 2. | |
| 5 | | | Void | |
| 6 | | | | SS checks to see that no MEASUREMENT REPORT messages are received. |
| 7 | ← | | MEASUREMENT CONTROL | SS requests UE to start inter-frequency measurement for cell 4, and performing periodic reporting for cell 4's PCCPCH RSCP. See specific message content below. |
| 8 | → | | MEASUREMENT REPORT | UE shall report cell 4's PCCPCH RSCP reading periodically. |
| 9 | ← | | MEASUREMENT CONTROL | SS changes the reporting criteria of cell 4 to 'event 2c'. "Reporting cell status" IE in this message is omitted. |
| 10 | → | | MEASUREMENT REPORT | SS monitors the uplink DCCH to make sure that only 1 such message is received almost immediately after step 9. This message shall not contain IE "Inter-frequency cell measured results" |
| 11 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

System Information Block type 11 (Step 1)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| -Use of HCS | Not used |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not Present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Cell Selection and Re-selection info | Not present |
| - Intra-frequency measurement quantity | Not present |
| - Intra-frequency reporting quantity for RACH reporting | Not present |
| - Maximum number of reported cells on RACH | Not present |
| - Reporting information for state CELL_DCH | Not present |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | Not present |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Reference to table 6.1.4 of TS34.108 for Cell 4 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Refer to clause titled "Default settings for cell No.4 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Cell selection and re-selection info | Not present<br>For neigbouring cell, if HCS is not used and all the parameters in cell selection and re-selection info are Default value, this IE is absent. |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

RRC CONNECTION SETUP (Step 2)

UE will use the message found in TS 34.108 clause 9.

MEASUREMENT CONTROL (Step 7)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | UARFCN of the frequency for cell 4 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Set to same as used for cell 4 |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Cells for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - CHOICE mode | TDD |
| - Measurement quantity for frequency quality estimate | PCCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active and/or monitored set on used frequency or within virtual active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Measurement validity | Not present |
| - Inter-frequency set update | Not present |
| - CHOICE report criteria | Periodic reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 8)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-frequency measured results list" |
| - Inter-frequency measurement results | |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Check to see if set to the UARFCN of the frequency for cell 4 |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if set to the same for cell 4 |
| - proposed TGSN | Check to see if it is absent |
| - PCCPCH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| - timeslot list | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Additional Measured results | Check to see if it is absent |
| Event Results | Check to see if it is absent |

MEASUREMENT CONTROL (Step 9)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Set up |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN uplink (Nt) | UARFCN of the frequency for cell 4 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Set to same as used for cell 4 |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Cells for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - CHOICE mode | TDD |
| - Measurement quantity for frequency quality estimate | PCCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | Not present |
| - Inter-frequency set update | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2c |
| - Threshold used frequency | Not Present |
| - W used frequency | Not Present |
| - Hysteresis | 1 (0.5 dB) |
| - Time to trigger | 0 milliseconds |
| - Reporting cell status | Not Present |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -85 dBm |
| - W non used frequency | 0 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 10) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Additional Measured Results | Check to see if it is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Inter-frequency measurement event results" |
| - Inter-frequency event identity | Check to see if this IE is set to "2c" |
| - Inter-frequency cells | |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN(Nt) | Check to see if set to the UARFCN of the frequency for cell 4 |
| - Non frequency related measurement event results | |
| - CHOICE Mode | Check to see if set to "TDD" |
| - Primary CCPCH info | |
| - CHOICE Mode | Check to see if set to "TDD" |
| - CHOICE *TDD option* | Check to see if set to "3.84 Mcps TDD" |
| - CHOICE *Sync Case* | Check to see if set to " Sync Case 1" |
| - Timeslot | Check to see if it's the same for cell 4 (S/B 0) |
| - Cell parameters Id | Check to see if it's the same for cell 4 |
| - SCTD indicator | Check to see if set to "FALSE" |

MEASUREMENT REPORT (Step 10) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Additional Measured Results | Check to see if it is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Inter-frequency measurement event results" |
| - Inter-frequency event identity | Check to see if this IE is set to "2c" |
| - Inter-frequency cells | |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN(Nt) | Check to see if set to the UARFCN of the frequency for cell 4 |
| - Non frequency related measurement event results | |
| - CHOICE Mode | Check to see if set to "TDD" |
| - Primary CCPCH info | |
| - CHOICE Mode | Check to see if set to "TDD" |
| - CHOICE *TDD option* | Check to see if set to "1.28 Mcps TDD" |
| - TSTD indicator | Check to see if set to "FALSE" |
| - Cell parameters Id | Check to see if it's the same for cell 4 |
| - SCTD indicator | Check to see if set to "FALSE" |
| - Primary CCPCH info | Check to see if set to the same as cell 4 |

MEASUREMENT REPORT (Step 10) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Additional Measured Results | Check to see if it is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Inter-frequency measurement event results" |
| - Inter-frequency event identity | Check to see if this IE is set to "2c" |
| - Inter-frequency cells | |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN(Nt) | Check to see if set to the UARFCN of the frequency for cell 4 |
| - Non frequency related measurement event results | |
| - CHOICE Mode | Check to see if set to "TDD" |
| - Primary CCPCH info | |
| - CHOICE Mode | Check to see if set to "TDD" |
| - CHOICE *TDD option* | Check to see if set to "7.68 Mcps TDD" |
| - CHOICE *Sync Case* | Check to see if set to " Sync Case 1" |
| - Timeslot | Check to see if it's the same for cell 4 (S/B 0) |
| - Cell parameters Id | Check to see if it's the same for cell 4 |
| - SCTD indicator | Check to see if set to "FALSE" |

#### 8.4.1.2A.5 Test Requirement

After step 5 the UE shall not transmit any MEASUREMENT REPORT messages pertaining to the measurement of PCCPCH RSCP of cell 4.

After step 7 the UE shall transmit MEASUREMENT REPORT messages on uplink DCCH, reporting cell 4's PCCPCH RSCP value at periodic time interval of 16 seconds in "inter-frequency cell measurement results" IE.

After step 9 the UE shall transmit only 1 MEASUREMENT REPORT message on the uplink DCCH. In this message, IE "inter-frequency cell measured results" shall be absent.

### 8.4.1.2B Measurement Control and Report: Inter-band measurement for transition from idle mode to CELL_DCH state (FDD)

#### 8.4.1.2B.1 Definition

This test case is identical to test case 8.4.1.2 except that the cells belong to different frequency bands.

#### 8.4.1.2B.2 Conformance requirement

Same conformance requirement as in clause 8.4.1.2.2.

#### 8.4.1.2B.3 Test Purpose

Same test purpose as in clause 8.4.1.2.3 except that the cells belong to different frequency bands.

#### 8.4.1.2B.4 Method of test

Initial Condition

Same initial conditions as in clause 8.4.1.2.4 except that cell 1 and cell 4 use UARFCNs selected from different frequency bands.

Related ICS/IXIT statements

- Compressed mode required yes/no- UE supports multiple bands simultaneously yes/no

Test Procedure

Same test procedure as in clause 8.4.1.2.4.

Note: If the UE supports more than 2 frequency bands, the test may be executed for various band combinations.

Expected Sequence

Same expected sequence as in clause 8.4.1.2.4.

Specific Message Content

Same as Specific Message Content in clause 8.4.1.2.4.

8.4.1.2B.5 Test Requirement

Same test requirement as in clause 8.4.1.2.5.

## 8.4.1.3 Measurement Control and Report: Intra-frequency measurement for transition from idle mode to CELL_FACH state (FDD)

8.4.1.3.1 Definition

8.4.1.3.2 Conformance requirement

Upon transition from idle mode to CELL_FACH state, the UE shall:

1> begin or continue monitoring cells listed in the IE "intra-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11).

In CELL_FACH state, the UE shall:

1> include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System Information Block type 12 (or "System Information Block Type 11" if "System Information Block Type 12" is not being broadcast);

1> include in the IE "Measured results on RACH" all requested reporting quantities for cells for which measurements are reported.

Upon transition from CELL_FACH to CELL_DCH state, the UE shall:

1> retrieve each set of measurement control information of measurement type "intra-frequency" stored in the variable MEASUREMENT_IDENTITY;

1> if the IE "measurement validity" for a measurement has been assigned the value "CELL_DCH:

2> resume the measurement reporting.

1> if no intra-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:

2> continue monitoring the list of neighbouring cells assigned in the IE "intra-frequency cell info list" in System Information Block type 12 (or System Information Block type 11);

2> if the IE "intra-frequency measurement reporting criteria" was included in System Information Block type 12 (or System Information Block type 11):

3> send the MEASUREMENT REPORT message when reporting criteria in IE "Reporting information for state CELL_DCH" are fulfilled.

Reference

3GPP TS 25.331, clause 8.4.1.9.1, 8.4.1.7.1, 8.4.2.2.

8.4.1.3.3 Test Purpose

1. To confirm that the UE begins or continues to monitor cells listed in IE "intra-frequency cell info list" of System Information Block type 11 or 12 messages after it has entered CELL_FACH state from idle mode.

2. To confirm that the UE applies the reporting criteria stated in "intra-frequency measurement reporting criteria" IE in System Information Block Type 11 or 12 in a subsequent transition to CELL_DCH state.

3. To confirm that the UE reports measured results on RACH messages, if it receives IE "Intra-frequency reporting quantity for RACH reporting" and IE "Maximum number of reported cells on RACH" from System Information Block Type 11 or 12 upon a transition from idle mode to CELL_FACH state.

#### 8.4.1.3.4 Method of test

Initial Condition

System Simulator: 2 cells. Cell 1 and cell 2 are active.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

Table 8.4.1.3-1 illustrates the downlink power to be applied for the 2 cells in this test case.

**Table 8.4.1.3-1**

| Parameter | Unit | Cell 1 | Cell 2 |
|---|---|---|---|
| UTRA RF Channel Number | | Mid Range Test Frequency | Mid Range Test Frequency |
| CPICH Ec | dBm/3.84 MHz | -60 | -67 |

The UE is initially in idle mode and camps on cell 1. The System Information Block type 11 are modified compared to the default settings. In the System Information Block type 11 messages, reporting of CPICH RSCP is also required for intra-frequency reporting when transmitting RACH messages on cell 1.

SS prompts the operator to make an outgoing call for one of the traffic classes supported by the UE. SS and UE shall execute procedure P6. Next SS and UE shall execute procedure P10. Then SS and UE shall execute procedure P14. SS starts timer T305 and waits until timer T305 expires, the UE shall send a CELL UPDATE message on the CCCH which includes the measured value of cell 1's CPICH RSCP in IE "Measured results on RACH". SS then replies with CELL UPDATE CONFIRM message on the downlink DCCH, without changing the physical channel resources.

SS transmits PHYSICAL CHANNEL RECONFIGURATION message, and allocates dedicated physical channels to the UE. The UE shall transit to CELL_DCH state and then send a MEASUREMENT REPORT message, correctly stating the measurement identity. The measurement identity indicated shall match the value that was previously broadcast on System Information Block type 11 messages when the UE was still in idle mode. The IE "Measured results" in the MEASUREMENT REPORT messages shall contain measured values of cell 2's CPICH RSCP.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 1,<br>System Information Block type 11 | The UE is in idle mode and camps onto cell 1. System Information Block type 1 and 11 to be transmitted are different from the default settings (see specific message contents) |
| 2 | ↔ | | SS executes procedure P6 (clause 7.4.2.2.2) specified in TS 34.108. | SS prompts the test operator to make an outgoing call. |
| 3 | ↔ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ↔ | | SS executes procedure P14 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | | | Void | |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 6 | | | | SS monitors the uplink DCCH to confirm that no MEASUREMENT REPORT messages are detected. SS waits for 5 minutes (for the expiry of T305 timer). |
| 7 | → | | CELL UPDATE | This message shall contain IE "Measured results on RACH" reporting the measured CPICH RSCP for cell 1. |
| 8 | ← | | CELL UPDATE CONFIRM | SS does not change the physical channel configurations. |
| 9 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS assigns dedicated physical resources. |
| 10 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall transit to CELL_DCH state. |
| 11 | → | | MEASUREMENT REPORT | UE shall begin to report cell 2's CPICH RSCP value periodically at 16 seconds interval. The measurement identity shall match the one that is broadcast for use in CELL_DCH in SIB11 in step 1. |

Specific Message Content

System Information Block type 1 (Step 1)

Use the same System Information Block Type 1 message as found in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| UE Timers and constants in connected mode<br>- T305 | 5 minutes. |
| - T312 | 2 |

System Information Block type 11 (Step 1)

Use the same System Information Block Type 11 message as found in clause 6.1.0b of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| SIB12 Indicator | FALSE |
| Measurement control system information | |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 5 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not Present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | Not present |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | Not Present (Default is 0 dB) |
| - $Qoffset2_{s,n}$ | Not Present |
| - Maximum allowed UL TX power | 0 dBm |
| - HCS neighbouring cell information | Not Present |
| - CHOICE Mode | FDD |
| - Qqualmin | -20dB |
| - Qrxlevmin | -58 (-115dBm) |
| - Cells for measurement | Not Present |
| - Intra-frequency reporting quantity for RACH reporting | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Maximum number of reported cells on RACH | Current cell |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |

| Information Element | Value/remark |
|---|---|
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1a |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Monitored set cells |
| - Reporting Range Constant | 28 (14 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0.0 |
| - Hysteresis | 2 (1.0 dB) |
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | 0 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 60 ms |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| - Reporting Cell Status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |

CELL UPDATE (Step 7)

| Information Element | Value/remark |
|---|---|
| U-RNTI | Check to see if set to same U-RNTI value assigned in the execution of procedure P6. |
| START list | Checked to see if this IE is present |
| AM_RLC error indication(RB2, RB3 or RB4) | FALSE |
| AM_RLC error indication(RB>4) | FALSE |
| Cell update cause | Check to see if set to 'Periodical cell update' |
| Failure cause | Check to see if this IE is absent |
| RB timer indicator | |
| - T314 expired | Checked to see if it is set to 'FALSE' |
| - T315 expired | Checked to see if it is set to 'FALSE' |
| Measured results on RACH | |
| - Measurement result for current cell | |
| - CHOICE measurement quantity | Check to see if set to 'CPICH RSCP' |
| - CPICH RSCP | Checked to see if set to within an acceptable range. |
| - Measurement results for monitored cells | Checked to see if this IE is absent. |

PHYSICAL CHANNEL RECONFIGURATION (Step 9) with the following exception:

| Information Element | Value/remark |
|---|---|
| Downlink information for each radio links | |
| - Choice mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Ref. to the Default settings in clause 6.1 (FDD) |
| - PDSCH with SHO DCH info | Not Present |
| - PDSCH code mapping | Not Present |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | FDD |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used |
| - DPCH frame offset | Set to value : Default DPCH Offset Value mod 38 400 |
| - Secondary CPICH info | Not Present |
| - DL channelisation code | |
| - Secondary scrambling code | Same value as used for Cell 1 |
| - Spreading factor | Reference to clause 6.10 Parameter Set |
| - Code number | 0 |
| - Scrambling code change | Not present |

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_FACH".

MEASUREMENT REPORT (Step 11)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is present |
| - CPICH RSCP | Check to see if this IE is absent |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH Info | Check to see if it's the same code for cell 2 |
| - Primary Scrambling Code | Check to see if this IE is absent |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if set to "Intra-frequency measurement event results" |
| - Intra-frequency event identity | Check to see if set to "1a" |
| - Cell measurement event results | |
| - CHOICE Mode | Check to see if set to "FDD" |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if set to the scrambling code of cell 2 |

#### 8.4.1.3.5 Test Requirement

After step 5 the UE shall not transmit any MEASUREMENT REPORT messages on the uplink DCCH.

After step 6 the UE shall initiate cell update procedure by transmitting CELL UPDATE message on CCCH. In this message, IE "cell update cause" shall be set to "periodic cell update". It shall include IE "measured results on RACH", containing the measurement value for cell 1's CPICH RSCP.

After step 10 the UE shall transmit MEASUREMENT REPORT messages at 16 seconds interval. In these messages, cell 2's CPICH RSCP value shall be reported in IE "Measured results". The IE "measurement identity" in this message shall match the IE "Intra-frequency measurement identity" found in System Information Block type 11 messages transmitted in step 1. The MEASUREMENT REPORT messsages shall also contain IE "Event results", indicating that intra-frequency event "1a" has triggered in the UE.

## 8.4.1.3A Measurement Control and Report: Intra-frequency measurement for transition from idle mode to CELL_FACH state (TDD)

### 8.4.1.3A.1 Definition

### 8.4.1.3A.2 Conformance requirement

The UE shall obey the follow rules for different measurement types after transiting from idle mode to CELL_FACH state:

Upon transition from idle mode to CELL_FACH state, the UE shall:

1> begin or continue monitoring cells listed in the IE "intra-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11, TS 25.331).

The purpose of the measurement reporting procedure is to transfer measurement results from the UE to UTRAN.

In CELL_FACH state, the UE shall:

1> transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are met for any ongoing traffic volume measurement or UE positioning measurement that is being performed in the UE;

1> include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System Information Block type 12 (or "System Information Block Type 11" if "System Information Block Type 12" is not being broadcast);

1> include in the IE "Measured results on RACH" all requested reporting quantities for cells for which measurements are reported.

In TDD, if the Radio Bearer associated with the MEASUREMENT_IDENTITY fulfilling the reporting criteria for an ongoing traffic volume measurement is mapped on transport channel of type USCH, the UE shall:

1> initiate the "PUSCH CAPACITY REQUEST" procedure instead of transmitting a MEASUREMENT REPORT (TDD Only).

For the measurement, which triggered the MEASUREMENT REPORT message, the UE shall:

1> set the IE "measurement identity" to the measurement identity, which is associated with that measurement in variable MEASUREMENT_IDENTITY;

1> set the IE "measured results" to include measurements according to the IE "reporting quantity" of that measurement stored in variable MEASUREMENT_IDENTITY; and

2> if all the reporting quantities are set to "false":

3> not set the IE "measured results".

1> set the IE "Measured results" in the IE "Additional measured results" according to the IE "reporting quantity" for all measurements associated with the measurement identities included in the "Additional measurements list" stored in variable MEASUREMENT_IDENTITY of the measurement that triggered the measurement report; and

2> if more than one additional measured results are to be included:

3> include only the available additional measured results, and sort them in ascending order according to their IE "measurement identity" in the MEASUREMENT REPORT message.

1> if the MEASUREMENT REPORT message was triggered by an event (i.e. not a periodical report):

2> set the IE "Event results" according to the event that triggered the report.

The UE shall:

1> transmit the MEASUREMENT REPORT message on the uplink DCCH using either AM or UM RLC according to the stored IE "measurement reporting mode" associated with the measurement identity that triggered the report.

When the MEASUREMENT REPORT message has been submitted to lower layers for transmission:

1> the procedure ends.

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in subclause 8.6 in TS 25.331 unless otherwise specified below.

The UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> if the measurement type is quality, UE internal, intra-frequency, inter-frequency or inter-RAT:

3> if, according to its measurement capabilities, the UE does not require compressed mode to perform the measurements:

4> if the measurement is valid in the current RRC state of the UE:

5> begin measurements according to the stored control information for this measurement identity.

2> for any other measurement type:

3> if the measurement is valid in the current RRC state of the UE:

4> begin measurements according to the stored control information for this measurement identity.

1> if the IE "measurement command" has the value "release":

2> terminate the measurement associated with the identity given in the IE "measurement identity";

2> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY.

1> clear the entry for the MEASUREMENT CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS;

1> if the UE "Additional Measurement List" is present:

2> if the received measurement configuration in this MEASUREMENT CONTROL message, or any measurement identities in the "Additional Measurement List" do not all have the same validity:

3> set the variable CONFIGURATION_INCOMPLETE to TRUE.

1> and the procedure ends.

Reference

TS 25.331, clauses 8.4.1.9.1, 8.4.2, 8.4.1.3

### 8.4.1.3A.3 Test Purpose

1. To confirm that the UE begins or continues to monitor cells listed in IE "intra-frequency cell info list" of System Information Block type 11 or 12 messages after it has entered CELL_FACH state from idle mode.

2. To confirm that the UE applies the reporting criteria stated in "intra-frequency measurement reporting criteria" IE in System Information Block Type 11 or 12 in a subsequent transition to CELL_DCH state.

3. To confirm that the UE reports measured results on RACH messages, if it receives IE "Intra-frequency reporting quantity for RACH reporting" and IE "Maximum number of reported cells on RACH" from System Information Block Type 11 or 12 upon a transition from idle mode to CELL_FACH state.

### 8.4.1.3A.4 Method of test

#### Initial Condition

System Simulator: 2 cells. Cell 1 and cell 2 are active.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

#### Test Procedure

Table 8.4.1.3A-1 illustrates the downlink power to be applied for the 2 cells in this test case.

**Table 8.4.1.3A-1**

| Parameter | Unit | Cell 1 | Cell 2 |
|---|---|---|---|
| UTRA RF Channel Number | | Mid Range Test Frequency | Mid Range Test Frequency |
| PCCPCH RSCP | dBm | -64 | -74 |

The UE is initially in idle mode and camps on cell 1. The System Information Block type 11 are modified compared to the default settings to prevent reporting of "Cell synchronisation information" and also to include cell 2 into the IE "intra-frequency cell info list".

SS prompts the operator to make an outgoing call for one of the traffic classes supported by the UE. SS and UE shall execute procedure P6. Next SS and UE shall execute procedure P10. Then SS and UE shall execute procedure P14. SS starts timer T305 and waits until timer T305 expires, the UE shall send a CELL UPDATE message on the CCCH which includes the measured value of cell 1's PCCPCH RSCP in IE "Measured results on RACH". SS then replies with CELL UPDATE CONFIRM message on the downlink DCCH, without changing the physical channel resources.

SS transmits PHYSICAL CHANNEL RECONFIGURATION message, and allocates dedicated physical channels to the UE. The UE shall transit to CELL_DCH state and then send a MEASUREMENT REPORT message, correctly stating the measurement identity. The measurement identity indicated shall match the value that was previously broadcast on System Information Block type 11 messages when the UE was still in idle mode. The IE "Measured results" in the MEASUREMENT REPORT messages shall contain measured values of cell 1, 2's PCCPCH RSCP.

NOTE: The Radio Bearer associated with the MEASUREMENT_IDENTITY fulfilling the reporting criteria for an ongoing traffic volume measurement must not be mapped on transport channel of type USCH

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 1, System Information Block type 11 | The UE is in idle mode and camps onto cell 1. System Information Block type 1 and 11 to be transmitted are different from the default settings (see specific message contents) |
| 2 | ↔ | | SS executes procedure P6 (clause 7.4.2.2.2) specified in TS 34.108. | SS prompts the test operator to make an outgoing call. |
| 3 | ↔ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | UE reaches PS-DCCH FACH |
| 4 | ↔ | | SS executes procedure P14 (clause 7.4.2.6.2) specified in TS 34.108. | UE reaches PS-DCCH+DTCH FACH |
| 5 | | | | SS monitors the uplink DCCH to confirm that no MEASUREMENT REPORT messages are detected. SS waits for 5 minutes (for the expiry of T305 timer). |
| 6 | → | | CELL UPDATE | This message shall contain IE "Measured results on RACH" reporting the measured PCCPCH RSCP for cell 1. |
| 7 | ← | | CELL UPDATE CONFIRM | SS does not change the physical channel configurations. |
| 8 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS assigns dedicated physical resources. |
| 9 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall transit to CELL_DCH state. |
| 10 | → | | MEASUREMENT REPORT | UE shall begin to report cell 1,2's PCCPCH RSCP value.The measurement identity shall match the one that is broadcast for use in CELL_DCH in SIB11 in step 1. |

Specific Message Content

System Information Block type 1 (Step 1)

| Information Element | Value/Remarks |
|---|---|
| UE Timers and constants in connected mode | |
| - T305 | 5 minutes. |

System Information Block type 11 (Step 1)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 5 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not Present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Cell selection and Re-selection info | Not present |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Cell selection and Re-selection info | |
| - $Qoffset1_{s,n}$ | Not Present (Default is 0 dB) |
| - Maximum allowed UL TX power | 0 dBm |
| - HCS neighbouring cell information | Not Present |
| - CHOICE Mode | TDD |
| - Qrxlevmin | -52 (-103dBm) |
| - Cells for measurement | Not Present |
| - Intra-frequency Measurement quantity | |
| - Filter Coefficient | Not Present |
| - CHOICE Mode | TDD |
| - Measurement quantity list | |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity for RACH reporting | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE mode | TDD |
| - Reporting quantity | PCCPCH RSCP |
| - Maximum number of reported cells on RACH | Current cell |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not present |
| - Measurement Reporting Mode | |

| Information Element | Value/remark |
|---|---|
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Periodical reporting |
| - CHOICE report criteria | Periodic reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 64 seconds |
| - Inter-frequency measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

CELL UPDATE (Step 6)

| Information Element | Value/remark |
|---|---|
| U-RNTI | Check to see if set to same U-RNTI value assigned in the execution of procedure P6. |
| START list | Checked to see if this IE is present |
| AM_RLC error indication(RB2, RB3 or RB4) | FALSE |
| AM_RLC error indication(RB>4) | FALSE |
| Cell update cause | Check to see if set to 'Periodical cell update' |
| Failure cause | Check to see if this IE is absent |
| Measured results on RACH | |
| - Measurement result for current cell | |
| - CHOICE mode | TDD |
| - Primary CCPCH RSCP | Checked to see if set to within an acceptable range. |
| - Measurement results for monitored cells | Checked to see if this IE is absent. |

PHYSICAL CHANNEL RECONFIGURATION (Step 8)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_FACH".

MEASUREMENT REPORT (Steps 10)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 1 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 2 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | Check to see if this IE is absent |

### 8.4.1.3A.5 Test Requirement

After step 5 the UE shall not transmit any MEASUREMENT REPORT messages on the uplink DCCH.

After step 6 the UE shall initiate cell update procedure by transmitting CELL UPDATE message on CCCH. In this message, IE "cell update cause" shall be set to "periodic cell update". It shall include IE "measured results on RACH", containing the measurement value for cell 1's PCCPCH RSCP.

After step 9 the UE shall transmit MEASUREMENT REPORT messages. In these messages, cell 1,2's PCCPCH RSCP value shall be reported in IE "Measured results". The IE "measurement identity" in this message shall match the IE "Intra-frequency measurement identity" found in System Information Block type 11 messages transmitted in step 1. The MEASUREMENT REPORT messsages shall not contain IE "Event results".

### 8.4.1.4 Measurement Control and Report: Inter-frequency measurement for transition from idle mode to CELL_FACH state (FDD)

#### 8.4.1.4.1 Definition

#### 8.4.1.4.2 Conformance requirement

Upon transition from idle mode to CELL_FACH state, the UE shall:

1> begin or continue monitoring cells listed in the IE "inter-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11);

Reference

3GPP TS 25.331, clause 8.4.1.9.2

#### 8.4.1.4.3 Test Purpose

1. To confirm that the UE begins to monitor the list of cells assigned in the IE "inter-frequency cell info list" in System Information Block type 11 or 12 messages, after it enters CELL_FACH state from idle mode. However, it shall not transmit any MEASUREMENT REPORT messages to report measured results for inter-frequency cells.

#### 8.4.1.4.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and cell 4 are active.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

Table 8.4.1.4-1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1 are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.4.1.4-1**

| Parameter | Unit | Cell 1 | | Cell 4 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84 MHz | -60 | -75 | -75 | -60 |

The UE is initially at idle mode and has selected cell 1 for camping. The System Information Block type 11 messages are modified with respect to the default settings to prevent reporting of "Cell synchronisation information" and also to include cell 4 into the "inter-frequency cell list" IE.

SS prompts the operator to make an outgoing call of a supported traffic class. SS and UE shall execute procedure P6. Next SS and UE shall execute procedure P10. Then SS and UE shall execute procedure P14. The UE shall not transmit any MEASUREMENT REPORT messages, which pertain to measurement readings for inter-frequency cells belonging

to the monitored set. SS re-adjusts its downlink power settings according to columns marked "T1" in table 8.4.1.4-1. This is expected to trigger a cell reselection in the UE. The UE shall send CELL UPDATE message to cell 4 in order to report this event. Upon receiving this message, SS replies with the CELL UPDATE CONFIRM message, which includes IE "New C-RNTI", on the downlink DCCH. UE shall then reply with a UTRAN MOBILITY INFORMATION CONFIRM message.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is in idle mode in cell 1. System Information Block type 11 to be transmitted is different from the default settings (see specific message contents) |
| 2 | ↔ | | SS executes procedure P6 (clause 7.4.4.4.2) specified in TS 34.108. | |
| 3 | ↔ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ↔ | | SS executes procedure P6 (clause 7.4.4.4.2) specified in TS 34.108. | |
| 5 | → | | Void | |
| 6 | | | | SS checks to see that no MEASUREMENT REPORT messages are received. |
| 7 | | | | SS reconfigures the downlink transmission power, according to columns "T1" of table 8.4.1.4-1. |
| 8 | → | | CELL UPDATE | UE shall detect that cell 4 has become stronger than cell 1. It sends this message after re-selecting to cell 4 |
| 9 | ← | | CELL UPDATE CONFIRM | Use message content. |
| 10 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Content

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

System Information Block type 11 (Step 1)

| Information Element | Value/remark |
|---|---|
| SIB12 Indicator | FALSE |
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 2 |
| - Inter-frequency FDD measurement indicator | TRUE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |
| Measurement control system information | |
| - Intra-frequency measurement system information | Not Present |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to apply the default duplex distance defined for the operating frequency according to 25.101 |
| - UARFCN downlink (Nd) | Reference to table 6.1.2 of TS 34.108 for Cell 4 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.4 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and re-selection info | |
| - $Qoffset_{s,n}$ | 0 dB |
| - Maximum allowed UL TX power | 0 dBm |
| - HCS neighbouring cell information | Not Present |
| - CHOICE Mode | FDD |
| - Qqualmin | -20dB |
| - Qrxlevmin | -58 (-115dBm) |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

CELL UPDATE (Step 8)

| Information Element | Value/remark |
|---|---|
| U-RNTI | Check to see if set to same U-RNTI assigned during the execution of procedure P6. |
| Cell update cause | Check to see if it is set to "Cell Reselection" |
| Protocol error info | Check to see if it is absent or set to FALSE |
| Measured results on RACH | Check to see if it is absent |
| Protocol error information | Check to see if it is absent |

CELL UPDATE CONFIRM (Step 9)

Use the message sub-type in default message content defined in Annex A, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 10)

Only the message type is checked.

#### 8.4.1.4.5 Test Requirement

After step 5 the UE shall not transmit any MEASUREMENT REPORT messages pertaining to any measurement quantities for cell 4.

After step 7 the UE shall reselect to cell 4 and transmit a CELL UPDATE message on the uplink CCCH of cell 4.

After step 9, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on uplink DCCH AM RLC.

### 8.4.1.4A Measurement Control and Report: Inter-frequency measurement for transition from idle mode to CELL_FACH state (TDD)

#### 8.4.1.4A.1 Definition

#### 8.4.1.4A.2 Conformance requirement

Upon transition from idle mode to CELL_FACH state, the UE shall:

1> begin or continue monitoring cells listed in the IE "inter-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11);

Reference

3GPP TS 25.331, clause 8.4.1.9.2

#### 8.4.1.4A.3 Test Purpose

1. To confirm that the UE begins to monitor the list of cells assigned in the IE "inter-frequency cell info list" in System Information Block type 11 or 12 messages, after it enters CELL_FACH state from idle mode. However, it shall not transmit any MEASUREMENT REPORT messages to report measured results for inter-frequency cells.

#### 8.4.1.4A.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and cell 4 are active.

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

Table 8.4.1.4A-1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1 are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.4.1.4A-1**

| Parameter | Unit | Cell 1 | | Cell 4 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| PCCPCH RSCP | dBm | -60 | -75 | -75 | -60 |

The UE is initially at idle mode and has selected cell 1 for camping. The System Information Block type 11 messages are modified with respect to the default settings to prevent reporting of "Cell synchronisation information" and also to include cell 4 into the "inter-frequency cell list" IE.

SS prompts the operator to make an outgoing call of a supported traffic class. SS and UE shall execute procedure P6. Next SS and UE shall execute procedure P10. Then SS and UE shall execute procedure P14. The UE shall not transmit any MEASUREMENT REPORT messages, which pertain to measurement readings for inter-frequency cells belonging

to the monitored set. SS re-adjusts its downlink power settings according to columns marked "T1" in table 8.4.1.4A-1. This is expected to trigger a cell reselection in the UE. The UE shall send CELL UPDATE message to cell 4 in order to report this event. Upon receiving this message, SS replies with the CELL UPDATE CONFIRM message, which includes IE "New C-RNTI", on the downlink DCCH. UE shall then reply with a UTRAN MOBILITY INFORMATION CONFIRM message.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is in idle mode in cell 1. System Information Block type 11 to be transmitted is different from the default settings (see specific message contents) |
| 2 | ↔ | | SS executes procedure P6 (clause 7.4.4.4.2) specified in TS 34.108. | |
| 3 | ↔ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ↔ | | SS executes procedure P6 (clause 7.4.4.4.2) specified in TS 34.108. | |
| 5 | → | | Void | |
| 6 | | | | SS checks to see that no MEASUREMENT REPORT messages are received. |
| 7 | | | | SS reconfigures the downlink transmission power, according to columns "T1" of table 8.4.1.4A-1. |
| 8 | → | | CELL UPDATE | UE shall detect that cell 4 has become stronger than cell 1. It sends this message after re-selecting to cell 4 |
| 9 | ← | | CELL UPDATE CONFIRM | Use message content. |
| 10 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Content

All messages indicated below shall use the same content as described in TS 34.108 clause 9, with the following exceptions:

System Information Block type 11 (Step 1)

| Information Element | Value/remark |
|---|---|
| SIB12 Indicator | FALSE |
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 2 |
| - Inter-frequency FDD measurement indicator | FALSE |
| - Inter-frequency TDD measurement indicator | TRUE |
| - Inter-RAT measurement indicators | Not Present |
| Measurement control system information | |
| - Intra-frequency measurement system information | Not Present |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Reference to table 6.1.4 of TS 34.108 for Cell 4 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Refer to clause titled "Default settings for cell No.4 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Cell selection and re-selection info | |
| - $Qoffset_{s,n}$ | 0 dB |
| - Maximum allowed UL TX power | 0 dBm |
| - HCS neighbouring cell information | Not Present |
| - CHOICE Mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

CELL UPDATE (Step 8)

| Information Element | Value/remark |
|---|---|
| U-RNTI | Check to see if set to same U-RNTI assigned during the execution of procedure P6. |
| Cell update cause | Check to see if it is set to "Cell Reselection" |
| Measured results on RACH | Check to see if it is absent |

CELL UPDATE CONFIRM (Step 9)

Use the message sub-type in default message content defined in Annex A, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 10)

Only the message type is checked.

8.4.1.4A.5 Test Requirement

After step 5 the UE shall not transmit any MEASUREMENT REPORT messages pertaining to any measurement quantities for cell 4.

After step 7 the UE shall reselect to cell 4 and transmit a CELL UPDATE message on the uplink CCCH of cell 4.

After step 9, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on uplink DCCH AM RLC.

### 8.4.1.5 Measurement Control and Report: Intra-frequency measurement for transition from CELL_DCH to CELL_FACH state (FDD)

#### 8.4.1.5.1 Definition

#### 8.4.1.5.2 Conformance requirement

Upon transition from CELL_DCH to CELL_FACH/CELL_PCH/URA_PCH state, the UE shall:

1> stop intra-frequency type measurement reporting;

1> if the transition is due to a reconfiguration message which included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects a cell other than that indicated by this IE; or

1> if the transition is due to a reconfiguration message which does not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD); or

1> if the transition is not due to a reconfiguration message:

2> delete the measurements of type intra-frequency associated with the variable MEASUREMENT_IDENTITY.

1> begin monitoring cells listed in the IE "intra-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11 in [8] TS 25.331).

Upon transition from CELL_FACH to CELL_DCH state, the UE shall:

1> retrieve each set of measurement control information of measurement type "intra-frequency" stored in the variable MEASUREMENT_IDENTITY;

1> if the IE "measurement validity" for a measurement has been assigned the value "CELL_DCH:

2> resume the measurement reporting.

1> if no intra-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:

2> continue monitoring the list of neighbouring cells assigned in the IE "intra-frequency cell info list" in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11 in [8] TS 25.331);

2> if the IE "intra-frequency measurement reporting criteria" was included in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11 in [8] TS 25.331):

3> send the MEASUREMENT REPORT message when reporting criteria in IE "Reporting information for state CELL_DCH" are fulfilled.

Reference

3GPP TS 25.331, clause 8.4.1.6.1, 8.4.1.7.1

#### 8.4.1.5.3 Test Purpose

1. To confirm that the UE stops performing intra-frequency measurement reporting specified in a MEASUREMENT CONTROL message, when it moves from CELL_DCH state to CELL_FACH state.

2. To confirm that the UE reads the System Information Block type 11 or 12 messages when it enters CELL_FACH state from CELL_DCH state, and starts to monitor the cells listed in the IE "intra-frequency cell info list".

3 To confirm that the UE performs measurements on uplink RACH transmissions and appends the measured results in RACH messages, when it receives IE "intra-frequency reporting quantity for RACH reporting" and IE "Maximum number of reported cells on RACH" in the System Information Block type 11 or 12 messages.

4. To confirm that the UE applies the reporting criteria in IE "intra-frequency reporting criteria" in System Information Block Type 11 or 12 messages following a state transition from CELL_FACH to CELL_DCH, if no intra-frequency measurements applicable to CELL_DCH are stored.

#### 8.4.1.5.4 Method of test

##### Initial Condition

System Simulator: 3 cells – Cell 1 and cell 2 are active, while cell 3 is switched off..

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_DCH (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108.

##### Specific Message Contents

For system information block 11 of Cell 1 (gives IE's which are different from defaults given in 34.108 subclause 6.1) to be transmitted before idle update preamble.

##### System Information Block type 11

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | Not present |
| - Cells for measurement | Not Present |
| -Intra-frequency measurement quantity | Not Present |
| -Intra-frequency reporting quantity for RACH reporting | Not Present |
| -Maximum number of reported cells on RACH | Not Present |
| -Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

##### Test Procedure

Table 8.4.1.5-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1 are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.4.1.5-1**

| Parameter | Unit | Cell 1 | | Cell 2 | | Cell 3 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84 MHz | -60 | -60 | -70 | -85 | OFF | -70 |

The UE is initially in CELL_DCH state. The System Information Block type 11 message is modified compared to the default message contents, in order to prevent the reporting of "Cell synchronisation information". No measurement to be applied by the UE in CELL_DCH state is specified in any of the System Information Block type 11 or 12 messages.

SS sends a MEASUREMENT CONTROL message to UE. In this message, the SS requests the establishment of an intra-frequency measurement for the measurement of cell 2's CPICH RSCP. At the same time, reporting of CPICH RSCP values of active set cells and monitored set cells are requested with the reporting criteria set to "periodic reporting" and "reporting interval" set to 16 seconds. The UE shall start transmitting MEASUREMENT REPORT messages at 16 seconds interval corresponding to the requested reporting event.
SS transmits PHYSICAL CHANNEL RECONFIGURATION message to move the UE to CELL_FACH. After receiving this message, the UE shall reconfigure itself and reply with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on RACH. SS starts T305 timer and SS monitors the uplink channels to verify that no MEASUREMENT REPORT messages are received.

SS reconfigures itself according to the settings in columns marked "T1" in table 8.4.1.5-1. SS transmits System Information Block type 12 messages in cell 1, which include cell 3 into the IE "intra-frequency cell info list" and modifies SIB11 to indicate that SIB12 is now being broadcast. IEs "Intra-frequency reporting quantity for RACH Reporting" and IE "Maximum number of Reported cells on RACH" are also specified in the System Information Type 12 messages. Event type 1a reporting criterion is specified for intra-frequency measurements. SS transmit SYSTEM INFORMATION CHANGE INDICATION message to UE. SS waits until T305 has expired. The UE shall respond with a CELL UPDATE message, which comprises IE "Measured results on RACH" to report the readings of CPICH RSCP for cell 1 and cell 3. SS replies with CELL UPDATE CONFIRM message on the downlink DCCH. This message does not change the physical resources nor allocate any new RNTI identities. SS transmits PHYSICAL CHANNEL RECONFIGURATION message again, and configures dedicated physical channel for both uplink and downlink directions. The UE shall send PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and return to CELL_DCH state. SS listens to the uplink DCCH for MEASUREMENT REPORT messages.

SS shall receive the MEASUREMENT REPORT messages at 500 milliseconds interval.

SS verifies that it includes CPICH RSCP values of the cells 1and 3 in IE "Cell measured results" and the triggering of event '1a' on cell 3 in IE "Event results".

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | UE is in PS-DCCH+DTCH_DCH (state 6-10) in cell 1. |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | ← | | MEASUREMENT CONTROL | SS requests for measurement of cell 2´s CPICH RSCP value and reporting of CPICH RSCP values of active cells and monitored set cells. |
| 6 | → | | MEASUREMENT REPORT | UE shall send periodic report at 16 seconds interval. |
| 7 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS moves the UE to CELL_FACH state. |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall move to CELL_FACH state. SS starts T305 timer. |
| 9 | ← | | Master Information Block, Scheduling Block 1,<br>System Information Block type 11, 12 | SS reconfigures itself according to the settings stated in column "T1" of table 8.4.1.5-1. SIB 11 is modified to indicate that SIB12 is now broadcast and to add cell 2 as a neighbour cell. SIB 12 indicates that cell 3 is included in the IE "intra-frequency cell info list". SS waits for 1 minute and verifies that no MEASUREMENT REPORT messages are detected on the uplink. |
| 10 | ← | | SYSTEM INFORMATION CHANGE INDICATION | SS waits until T305 has expired. |
| 11 | → | | CELL UPDATE | UE shall transmit this message with measured results on RACH channels for cell 1 and cell 3 present in this message. |
| 12 | ← | | CELL UPDATE CONFIRM | No changes in physical resource allocation and RNTI identities. |
| 13 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS configures dedicated physical channels. |
| 14 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall transit to CELL_DCH state. |
| 15 | → | | MEASUREMENT REPORT | Repeated at 500 milliseconds interval |

Specific Message Content

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

MEASUREMENT CONTROL (Step 5)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 5 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 2 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present (Default is 0) |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Measurement validity | Not present |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 6)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measured results list | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | This object may be absent in the first instance of the MEASUREMENT REPORT, but must be present in subsequent instances. If present the associated IEs should be checked as indicated. |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured result list | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

PHYSICAL CHANNEL RECONFIGURATION (Step 7)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "(Packet to CELL_FACH from CELL_DCH in PS)"

MASTER INFORMATION BLOCK (Step 9)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/Remarks |
|---|---|
| MIB Value Tag | A value that is different from the previous MIB value tag |
| SB 1 Cell Value tag | Set to (Current SB1 value tag + 1) |

SCHEDULING BLOCK 1 (Step 9)

| Information Element | Value/remark |
|---|---|
| SIB 11 Cell Value tag | Set to (Current SIB 11 value tag + 1) |
| SIB 12 Cell Value tag | Set to (Current SIB 12 value tag + 1) |

System Information Block type 11 (Step 9)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | TRUE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not Present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | Not present |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | |
| - $Qoffset_{s,n}$ | 0 dB |
| - Maximum allowed UL TX power | 0 dBm |
| - HCS neighbouring cell information | Not Present |
| - CHOICE Mode | FDD |
| - Qqualmin | -20dB |
| - Qrxlevmin | -58 (-115dBm) |
| - Cells for measurement | Not Present |
| -Intra-frequency measurement quantity | Not Present |
| -Intra-frequency reporting quantity for RACH reporting | Not Present |
| -Maximum number of reported cells on RACH | Not Present |
| -Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

System Information Block type 12 (Step 9)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 6 |
| - Intra-frequency cell cells | |
| - CHOICE intra-frequency cell removal | Not Present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | |
| - $Qoffset_{s,n}$ | 0dB |
| - Maximum allowed UL TX power | 0dBm |
| - HCS neighbouring cell information | Not Present |
| - CHOICE Mode | FDD |
| - Qqualmin | -20dB |
| - Qrxlevmin | -58 (-115dBm) |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present (Default is 0) |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity for RACH reporting | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE mode | FDD |
| - Reporting quantity | CPICH RSCP |
| - Maximum number of reported cells on RACH | Current cell + best neighbour |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Measurement Reporting Mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameter required for each event | |
| - Intra-frequency event identity | 1a |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Monitored set cells |
| - Reporting range constant | 29 (14.5dB) |

| Information Element | Value/remark |
|---|---|
| - Cells forbidden to affect reporting | Not present |
| - W | 0.0 |
| - Hysteresis | 2 (1.0 dB) |
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | 7 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 60 ms |
| - Amount of reporting | Infinity |
| - Reporting Interval | 500 milliseconds |
| - Reporting cell status | |
| - CHOICE *reported cell* | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Inter-frequency measurement system information | Not present |
| - Inter-RAT measurement system information | Not present |
| - Traffic volume measurement system information | Not present |

SYSTEM INFORMATION CHANGE INDICATION (Step 10)

| Information Element | Value/Remarks |
|---|---|
| BCCH modification info<br>- MIB Value tag | A value that is different from the previous MIB value tag |

CELL UPDATE (Step 11)

| Information Element | Value/remark |
|---|---|
| U-RNTI | Check to see if set to the same value assigned during the execution of procedure P3 or P5. |
| START list | Checked to see if this IE is present |
| AM_RLC error indication(RB2, RB3 or RB4) | FALSE |
| AM_RLC error indication(RB>4) | FALSE |
| Cell update cause | Check to see if it is set to "Periodical cell update" |
| Failure case | Check to see if it is absent |
| Measured results on RACH | |
| - Measurement result for current cell | |
| - CHOICE measurement quantity | Check to see if set to "CPICH RSCP" |
| - CPICH RSCP | Check to see if it is present |
| - Measurement results for monitored cells | |
| - SFN-SFN observed time difference | Check to see if it is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check to see if the same as cell 3's code. |
| - CHOICE measurement quantity | Check to see if set to "CPICH RSCP" |
| - CPICH RSCP | Check to see if it is present |

PHYSICAL CHANNEL RECONFIGURATION (Step 13)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "(Packet to CELL_DCH from CELL_FACH in PS)".

MEASUREMENT REPORT (Step 15)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results list | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | Check to see if this set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if set to '1a' |
| - Cell measurement event results | |
| - CHOICE Mode | Check to see if set to 'FDD' |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if set to the same code for cell 3 |

### 8.4.1.5.5 Test Requirement

After step 5, the UE shall start to transmit MEASUREMENT REPORT messages at 16 seconds interval. The first message may contain the IE "Cell measured results" to report cell 2's CPICH RSCP value, subsequent messages shall contain this IE.

After step 8, the UE shall not send any MEASUREMENT REPORT messages containing reporting quantities requested in MEASUREMENT CONTROL messages in step 5.

After step 10, the UE shall perform a cell update procedure and transmit a CELL UPDATE message. In this message, measured values CPICH RSCP for cell 1 and cell 3 shall be included in the IE "measured results on RACH".

After step 14, the UE shall apply the intra-frequency measurement reporting criteria" received in System Information Block type 12 messages of step 9. It shall send MEASUREMENT REPORT messages at 500 milliseconds interval. In these messages, triggering of event '1a' shall be reported in IE "Event results" with IE "Primary CPICH info" containing the primary scrambling code for cell 3.

The message shall contain IE "measured result" to report CPICH RSCP values of cell 1and 3.

## 8.4.1.5A Measurement Control and Report: Intra-frequency measurement for transition from CELL_DCH to CELL_FACH state (TDD)

### 8.4.1.5A.1 Definition

### 8.4.1.5A.2 Conformance requirement

Upon transition from CELL_DCH to CELL_FACH/CELL_PCH/URA_PCH state, the UE shall:

1> stop intra-frequency type measurement reporting;

1> if the transition is due to a reconfiguration message which included the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD), and the UE selects a cell other than that indicated by this IE; or

1> if the transition is due to a reconfiguration message which does not include the IE "Primary CPICH info" (for FDD) or "Primary CCPCH info" (for TDD); or

1> if the transition is not due to a reconfiguration message:

2> delete the measurements of type intra-frequency associated with the variable MEASUREMENT_IDENTITY.

1> begin monitoring cells listed in the IE "intra-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11 in [8] TS 25.331).

Reference

3GPP TS 25.331, clause 8.4.1.6.1, 8.4.1.7.1

### 8.4.1.5A.3 Test Purpose

1. To confirm that the UE stops performing intra-frequency measurement reporting specified in a MEASUREMENT CONTROL message, when it moves from CELL_DCH state to CELL_FACH state.

2. To confirm that the UE reads the System Information Block type 11 or 12 messages when it enters CELL_FACH state from CELL_DCH state, and starts to monitor the cells listed in the IE "intra-frequency cell info list".

3 To confirm that the UE performs measurements on uplink RACH transmissions and appends the measured results in RACH messages, when it receives IE "intra-frequency reporting quantity for RACH reporting" and IE "Maximum number of reported cells on RACH" in the System Information Block type 11 or 12 messages.

4. To confirm that the UE applies the reporting criteria in IE "intra-frequency reporting criteria" in System Information Block Type 11 or 12 messages following a state transition from CELL_FACH to CELL_DCH, if no intra-frequency measurements applicable to CELL_DCH are stored.

### 8.4.1.5A.4 Method of test

Initial Condition

System Simulator: 3 cells – Cell 1 and cell 2 are active, while cell 3 is switched off.

UE: PS-DCCH+DTCH_DCH (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108.

Specific Message Contents

For MASTER IFORMATION BLOCK and system information block 11 of Cell 1 (gives IE's which are different from defaults given in 34.108 subclause 6.1) to be transmitted before idle update preamble.

MASTER INFORMATION BLOCK

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/Remarks |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 |

System Information Block type 11

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary PCCPCH Info | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Cell selection and Re-selection info | Not present |
| - Cells for measurement | Not Present |
| -Intra-frequency measurement quantity | Not Present |
| -Intra-frequency reporting quantity for RACH reporting | Not Present |
| -Maximum number of reported cells on RACH | Not Present |
| -Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

Test Procedure

Table 8.4.1.5A-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while column marked as "T1" will be applied during the test.

**Table 8.4.1.5A-1**

| Parameter | Unit | Cell 1 | | | Cell 2 | | | Cell 3 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | Mid Range Test Frequency | | | Mid Range Test Frequency | | |
| PCCPCH RSCP | dBm | -60 | -60 | -70 | -75 | -85 | -85 | OFF | -70 | -60 |

The UE is initially in CELL_DCH state. The System Information Block type 11 message is modified compared to the default message contents, in order to prevent the reporting of "Cell synchronisation information". No measurement to be applied by the UE in CELL_DCH state is specified in any of the System Information Block type 11 or 12 messages.

SS sends a MEASUREMENT CONTROL message to UE. In this message, the SS requests the establishment of an intra-frequency measurement for the measurement of cell 2's PCCPCH RSCP. At the same time, reporting of PCCPCH RSCP values of active set cells and monitored set cells are requested with the reporting criteria set to "periodic reporting" and "reporting interval" set to 16 seconds. The UE shall start transmitting MEASUREMENT REPORT messages at 16 seconds interval corresponding to the requested reporting event.

SS transmits PHYSICAL CHANNEL RECONFIGURATION message to move the UE to CELL_FACH. After receiving this message, the UE shall reconfigure itself and reply with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on RACH. SS monitors the uplink channels to verify that no MEASUREMENT REPORT messages are received.

SS reconfigures itself according to the settings in columns marked "T1" in table 8.4.1.5A-1. SS transmits System Information Block type 12 messages in cell 1, which include cell 3 into the IE "intra-frequency cell info list" and modifies SIB11 to indicate that SIB12 is now being broadcast. IEs "Intra-frequency reporting quantity for RACH

Reporting" and IE "Maximum number of Reported cells on RACH" are also specified in the System Information Type 12 messages. Event type 1g reporting criterion is specified for intra-frequency measurements. SS transmit SYSTEM INFORMATION CHANGE INDICATION message to UE. SS waits until T305 has expired. The UE shall respond with a CELL UPDATE message, which comprises IE "Measured results on RACH" to report the readings of PCCPCH RSCP for cell 1 and cell 3. SS replies with CELL UPDATE CONFIRM message on the downlink DCCH. This message does not change the physical resources nor allocate any new RNTI identities. SS transmits PHYSICAL CHANNEL RECONFIGURATION message again, and configures dedicated physical channel for both uplink and downlink directions. The UE shall send PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and return to CELL_DCH state. SS listens to the uplink DCCH for MEASUREMENT REPORT messages.

SS reconfigures itself according to the settings in columns marked "T2" in table 8.4.1.5A-1. Event 1g is triggered since the best cell is changed to cell 3 from cell 1.

SS shall receive the MEASUREMENT REPORT messages.

SS verifies that it includes PCCPCH RSCP values of the cells 1, 2 and 3 in IE "Cell measured results" and the triggering of event '1g' on cell 3 in IE "Event results".

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | UE is in PS-DCCH+DTCH_DCH (state 6-10) in cell 1. |
| 2 | ← | | MEASUREMENT CONTROL | SS requests for measurement of cell 2´s PCCPCH RSCP value and reporting of PCCPCH RSCP values of active cell and monitored set cell. |
| 3 | → | | MEASUREMENT REPORT | UE shall send periodic report at 16 seconds interval. |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS moves the UE to CELL_FACH state. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE reaches CELL_FACH state. |
| 6 | ← | | Master Information Block<br>System Information Block type 11, 12 | SS reconfigures itself according to the settings stated in column "T1" of table 8.4.1.5A-1. SIB 11 is modified to indicate that SIB12 is now broadcast and includes cell 2 as a neighbour cell. SIB 12 indicates that cell 3 is included in the IE "intra-frequency cell info list". Event 1g is also configured for cell 3. SS waits for 1 minute and verifies that no MEASUREMENT REPORT messages are detected on the uplink. |
| 7 | ← | | SYSTEM INFORMATION CHANGE INDICATION | SS waits until T305 has expired. |
| 8 | → | | CELL UPDATE | UE shall transmit this message with measured results on RACH channels for cell 1 and cell 3 present in this message. |
| 9 | ← | | CELL UPDATE CONFIRM | No changes in physical resource allocation and RNTI identities. |
| 10 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS configures dedicated physical channels. |
| 11 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall transit to CELL_DCH state. |
| 11a | | | | SS reconfigures itself according to the settings stated in column “T2” of table 8.4.1.5A-1. |
| 12 | → | | MEASUREMENT REPORT | The UE shall report event 1G for change to best cell, cell3. |

Specific Message Content

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 5 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Set to same as used for cell 2 |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present (Default is 0) |
| - CHOICE mode | TDD |
| - Measurement quantity list | |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| CHOICE MODE | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| CHOICE MODE | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Measurement validity | Not present |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |

MEASUREMENT REPORT (Step 3)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measured results list | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 1 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 2 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured result list | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "(Packet to CELL_FACH from CELL_DCH in PS)"

MASTER INFORMATION BLOCK (Step 6)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/Remarks |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |

System Information Block type 11 (Step 6)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | TRUE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not Present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary PCCPCH Info | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Cell selection and Re-selection info | Not present |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary PCCPCH Info | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Cell selection and Re-selection info | |
| - $Qoffset_{s,n}$ | 0 dB |
| - Maximum allowed UL TX power | 0 dBm |
| - HCS neighbouring cell information | Not Present |
| - CHOICE Mode | TDD |
| - Qrxlevmin | -52 (-103 dBm) |
| - Cells for measurement | Not Present |
| -Intra-frequency measurement quantity | Not Present |
| -Intra-frequency reporting quantity for RACH reporting | Not Present |
| -Maximum number of reported cells on RACH | Not Present |
| -Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

System Information Block type 12 (Step 6)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 6 |
| - Intra-frequency cell cells | |
| - CHOICE intra-frequency cell removal | Not Present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Refer to clause titled "Default settings for cell No.3 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Cell selection and Re-selection info | |
| - $Qoffset_{s,n}$ | 0dB |
| - Maximum allowed UL TX power | 30dBm |
| - HCS neighbouring cell information | Not Present |
| - CHOICE Mode | TDD |
| - Qrxlevmin | -52 (-103dBm) |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present (Default is 0) |
| - CHOICE mode | TDD |
| - Measurement list | |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity for RACH reporting | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - CHOICE mode | TDD |
| - Reporting quantity | PCCPCH RSCP |
| - Maximum number of reported cells on RACH | Current cell + best neighbour |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameter required for each event | |
| - Intra-frequency event identity | 1g |
| - Reporting range constant | 20.0 dB |
| - W | 0.0 |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 60 ms |
| - Amount of reporting | absent |
| - Reporting Interval | absent |
| - Reporting cell status | |

| Information Element | Value/remark |
|---|---|
| - CHOICE *reported cell* | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 3 |
| - Inter-frequency measurement system information | Not present |
| - Inter-RAT measurement system information | Not present |
| - Traffic volume measurement system information | Not present |

SYSTEM INFORMATION CHANGE INDICATION (Step 7)

| Information Element | Value/Remarks |
|---|---|
| BCCH modification info | |
| - MIB Value tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |

CELL UPDATE (Step 8)

| Information Element | Value/remark |
|---|---|
| U-RNTI | Check to see if set to the same value assigned during the execution of procedure P3 or P5. |
| START list | Checked to see if this IE is present |
| AM_RLC error indication(RB2, RB3 or RB4) | FALSE |
| AM_RLC error indication(RB>4) | FALSE |
| Cell update cause | Check to see if it is set to "Periodical cell update" |
| Failure case | Check to see if it is absent |
| Measured results on RACH | |
| - Measurement result for current cell | |
| - SFN-SFN observed time difference | Not Checked |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if the same as cell 1. |
| - PCCPCH RSCP | Check to see if it is present |
| - Measurement results for monitored cells | |
| - SFN-SFN observed time difference | Not Checked |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if the same as cell 3. |
| - PCCPCH RSCP | Check to see if it is present |

PHYSICAL CHANNEL RECONFIGURATION (Step 10)

Use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "(Packet to CELL_DCH from CELL_FACH in PS)".

MEASUREMENT REPORT (Step 12)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results list | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 3 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if it is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 1 |
| - Proposed TGSN Reporting required | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if it is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Cell parameters Id | Check to see if it's the same for cell 2 |
| - Proposed TGSN Reporting required | Check to see if this IE is absent |
| - PCCPCH RSCP reporting indicator | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | Check to see if this set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if set to '1g' |
| - Cell measurement event results | |
| - CHOICE Mode | Check to see if set to 'TDD' |
| - Cell parameters id | Check to see if it's the same for cell 3 |

### 8.4.1.5A.5 Test Requirement

After step 2, the UE shall start to transmit MEASUREMENT REPORT messages at 16 seconds interval. The message shall contain IE "measured result" to report cell 2's PCCPCH RSCP value.

After step 5, the UE shall not send any MEASUREMENT REPORT messages containing reporting quantities requested in MEASUREMENT CONTROL messages in step 2.

After step 7, the UE shall perform a cell update procedure and transmit a CELL UPDATE message. In this message, measured values PCCPCH RSCP for cell 1 and cell 3 shall be included in the IE "measured results on RACH".

After step 12, the UE shall apply the intra-frequency measurement reporting criteria" received in System Information Block type 12 messages of step 6. It shall send MEASUREMENT REPORT messages. In these messages, triggering of event '1g' shall be reported in IE "Event results" with IE " Cell parameters Id " containing the same for cell 3.

The message shall contain IE "measured result" to report PCCPCH RSCP values of cell 1, 2 and 3.

## 8.4.1.6 Measurement Control and Report: Inter-frequency measurement for transition from CELL_DCH to CELL_FACH state (FDD)

### 8.4.1.6.1 Definition

### 8.4.1.6.2 Conformance requirement

Upon transition from CELL_DCH to CELL_FACH/ CELL_PCH/URA_PCH state, the UE shall:

1> stop the inter-frequency type measurement reporting assigned in a MEASUREMENT CONTROL message;

1> begin monitoring cells listed in the IE "inter-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11);

1> in CELL_FACH state:

2> perform measurements on other frequencies according to the IE "FACH measurement occasion info".

#### Reference

3GPP TS 25.331, clause 8.4.1.6.2

### 8.4.1.6.3 Test Purpose

1. To confirm that UE ceases inter-frequency type measurement reporting assigned in MEASUREMENT CONTROL message when moving from CELL_DCH state to CELL_FACH.
2. To confirm that the UE begins to monitor the cells listed in "inter-frequency cell info" received in System Information Block type 11 or 12 messages, following a state transition from CELL_DCH state to CELL_FACH state.

### 8.4.1.6.4 Method of test

#### Initial Condition

System Simulator: 2 cells – Cell 1 and cell 2 are active.

UE: PS-DCCH+DTCH_DCH (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108.

#### Related ICS/IXIT statements

- Compressed mode required yes/no

#### Specific Message contents

#### System Information Block type 4

Use the same message type found in clause 6.1.0b of TS 34.108, with the following exceptions for Cell 1:

| | |
|---|---|
| - Qqualmin | -16 |

For system information block 12 for Cell1 (gives IEs which are different from defaults given in 34.108 sec 6.1) to be transmitted before idle update preamble

System Information Block Type 12

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | FALSE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |
| Measurement control system information | |
| - Intra-frequency measurement system information | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

Test Procedure

Table 8.4.1.6-1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1 are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.4.1.6-1**

| Parameter | Unit | Cell 1 | | Cell 4 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec | dBm/3.84 MHz | -60 | -75 | -75 | -60 |

The UE is initially in CELL_DCH state. The System Information Block type 12 message is modified with respect to the default settings, so that no measurement tasks are required of the UE. If UE requires compressed mode, SS transmits PHYSICAL CHANNEL RECONFIGURATION message. In this message, IE "DPCH compressed mode info" is present, which indicates that the UE shall apply the given parameters for compressed mode operations. The UE shall return a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to acknowledge that compressed mode mechanism can be exercised.

SS sends a MEASUREMENT CONTROL message to the UE, including cell 4 into the IE "inter-frequency cell info". The IE "CHOICE reporting criteria" in this message is set to "periodic reporting criteria". SS waits for 8 seconds to allow the periodic timer to expire. The UE shall send a MEASUREMENT REPORT message containing IE "inter-frequency cell measurement results" to report cell 4's CPICH RSCP value. SS transmits PHYSICAL CHANNEL RECONFIGURATION message and reconfigures common physical channels. The UE shall move to CELL_FACH state and then return a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to SS.

SS modifies the contents of Master Information Block (MIB) and System Information Block (SIB) type 12. In SIB 12, cell 4 is added to the cells listed in the "inter-frequency cell info" IE. SS transmit SYSTEM INFORMATION CHANGE INDICATIONmessage to UE. SS waits for 8 seconds to detect any uplink MEASUREMENT REPORT messages. SS verifies that no MEASUREMENT REPORT message(s) are received as a result of inter-frequency measurements. SS then reconfigures the downlink transmission power settings of cell 1 and cell 4 according to the values stated in columns "T1" of table 8.4.1.6-1. SS waits for the UE to perform cell re-selection. The UE shall transmit a CELL UPDATE message on the uplink CCCH of cell 4, specifying the "cell update cause" IE as "cell re-selection". SS replies with CELL UPDATE CONFIRM message, which includes IE "New C-RNTI", on the downlink DCCH to complete the cell update procedure. The UE shall reply with a UTRAN MOBILITY INFORMATION CONFIRM message.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | | If compresed mode is not required (refer ICS/IXIT), goto step 8. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | | | Void | |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS instructs UE to begin compressed mode operation. |
| 7 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall remain in CELL_DCH state. |
| 8 | ← | | MEASUREMENT CONTROL | SS indicates that the CPICH RSCP of cell 4 shall be monitored and reported. SS waits for 8 seconds for the reception of MEASUREMENT REPORT message. |
| 9 | → | | MEASUREMENT REPORT | UE shall transmit this message to report cell 4's CPICH RSCP value. |
| 10 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS configures common physical channels. |
| 11 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall moves to CELL_FACH state. |
| 12 | ← | | Master Information Block,<br>Scheduling Block 1,<br>System Information Block type 12 | SS modifies MIB and SIB 12. Cell 4 is included in the IE "inter-frequency cell info" |
| 13 | ← | | SYSTEM INFORMATION CHANGE INDICATION | SS waits for 8 seconds to verify that no MEASUREMENT REPORT messages are detected on the uplink DCCH. |
| 14 | | | | SS changes the power settings for cell 1 and cell 4 according to columns marked "T1" of table 8.4.1.6-1, and then waits for the UE to re-select to a new cell. |
| 15 | → | | CELL UPDATE | UE shall perform cell re-selection and transmit this message on the new cell. |
| 16 | ← | | CELL UPDATE CONFIRM | See message content. |
| 17 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Content

PHYSICAL CHANNEL RECONFIGURATION (Step 6)

Use the same message sub-type found in Annex A, which is entitled "(Packet to CELL_DCH from CELL_DCH in PS)", with the following exceptions in the IE(s) concerned:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - CHOICE Mode | FDD | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Activate | |
| - TGCFN | (Current CFN+(256 – TTI/10msec)) mod 256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL or DL only depending on UE capability | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 or Not present depending on UE capability | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity Mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information per radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| -PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No code change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |

MEASUREMENT CONTROL (Step 8)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN of the downlink frequency for cell 4 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | |
| - Inter-frequency cell id | 4 |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Measurement validity | |
| - UE state | CELL_DCH |
| - Inter-frequency set update | Not Present |
| - CHOICE report criteria | Periodic reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8 seconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 9)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-frequency measured results list" |
| - Inter-frequency measurement results | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_4$ |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if set to the same code for cell 4 |
| - CPICH Ec/No | Check to see if it is absent |
| - CPICH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Event Results | Check to see if it is absent |

PHYSICAL CHANNEL RECONFIGURATION (Step 10)

If UE do not require compressed mode, use the same message sub-type found in TS 34.108 clause 9, which is entitled "(Packet to CELL_FACH from CELL_DCH in PS)".

If UE requires compressed mode, use the same message sub-type found in TS34.108 clause 9, which is entitled "(Packet to CELL_FACH from CELL_DCH in PS)", with the following exceptions in the IE(s) concerned:

| Information Element | Value/Remarks | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - CHOICE mode | FDD | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not Present | |
| - Transmission gap pattern sequence configuration parameters | Not Present | |
| - TX Diversity Mode | None | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |

Master Information Block (Step 12)

| Information Element | Value/Remarks |
|---|---|
| MIB value tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |
| SB 1 Cell Value tag | Set to (Current SB1 value tag + 1) |

Scheduling Block 1 (Step 12)

| Information Element | Value/remark |
|---|---|
| SIB 12 Cell Value tag | Set to (Current SIB 12 value tag + 1) |

System Information Block type 12 (Step 12)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | TRUE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | Not Present |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - CHOICE Inter-frequency cell removal | Not Present |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | FDD |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | Reference to table 6.1.2 of TS 34.108 for Cell 4 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.4 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH Tx power | Not Present |
| - TX diversity indicator | FALSE |
| - Cell selection and re-selection info | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

SYSTEM INFORMATION CHANGE INDICATION (Step 13)

| Information Element | Value/Remarks |
|---|---|
| BCCH modification info | |
| - MIB Value tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |

CELL UPDATE (Step 15)

| Information Element | Value/remark |
|---|---|
| U-RNTI | Check to see if same to value assigned in P3 or P5 as described in TS34.108 clause 7.4.2 |
| Cell update cause | Check to see if it is set to "Cell Reselection" |
| Protocol error info | Check to see if it is absent or set to FALSE |
| Measured results on RACH | Check to see if it is absent |
| Protocol error information | Check to see if it is absent |

CELL UPDATE CONFIRM (Step 16)

Use the same message sub-type found in Annex A, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 17)

Only the message type is checked.

#### 8.4.1.6.5 Test Requirement

If UE requires compressed mode, after step 6, the UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 8 the UE shall transmit MEASUREMENT REPORT message to report cell 4's RSCP value in the IE "inter-frequency cell measured results".

After step 10, the UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 11 the UE shall stop sending MEASUREMENT REPORT messages, which contain inter-frequency measured results for cell 4's CPICH RSCP value.

After step 14 the UE shall transmit CELL UPDATE message on the uplink CCCH of cell 4, and the "cell update cause" IE shall be set to "cell reselection".

After step 16, the UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH AM RLC.

### 8.4.1.6A Measurement Control and Report: Inter-frequency measurement for transition from CELL_DCH to CELL_FACH state (TDD)

#### 8.4.1.6A.1 Definition

#### 8.4.1.6A.2 Conformance requirement

Upon transition from CELL_DCH to CELL_FACH/ CELL_PCH/URA_PCH state, the UE shall:

1> stop the inter-frequency type measurement reporting assigned in a MEASUREMENT CONTROL message;

1> begin monitoring cells listed in the IE "inter-frequency cell info list" received in System Information Block type 12 (or System Information Block type 11);

1> in CELL_FACH state:

2> perform measurements on other frequencies according to the IE "FACH measurement occasion info".

Reference

3GPP TS 25.331, clause 8.4.1.6.2

#### 8.4.1.6A.3 Test Purpose

1. To confirm that UE ceases inter-frequency type measurement reporting assigned in MEASUREMENT CONTROL message when moving from CELL_DCH state to CELL_FACH.

2. To confirm that the UE begins to monitor the cells listed in "inter-frequency cell info" received in System Information Block type 11 or 12 messages, following a state transition from CELL_DCH state to CELL_FACH state.

#### 8.4.1.6A.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1 and cell 2 are active.

UE: PS-DCCH+DTCH_DCH (state 6-10) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

Table 8.4.1.6A-1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1 are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.4.1.6A-1**

| Parameter | Unit | Cell 1 | | Cell 4 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| PCCPCH RSCP | dBm | -60 | -75 | -75 | -60 |

The UE is initially in CELL_DCH state. The System Information Block type 12 message is modified with respect to the default settings, so that no measurement tasks are required of the UE.

SS sends a MEASUREMENT CONTROL message to the UE, including cell 4 into the IE "inter-frequency cell info". The IE "CHOICE reporting criteria" in this message is set to "periodic reporting criteria". SS waits for 8 seconds to allow the periodic timer to expire. The UE shall send a MEASUREMENT REPORT message containing IE "inter-frequency cell measurement results" to report cell 4's PCCPCH RSCP value. SS transmits PHYSICAL CHANNEL RECONFIGURATION message and reconfigures common physical channels. The UE shall move to CELL_FACH state and then return a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to SS.

SS modifies the contents of Master Information Block (MIB) and System Information Block (SIB) type 12. In SIB 12, cell 4 is added to the cells listed in the "inter-frequency cell info" IE. SS transmit SYSTEM INFORMATION CHANGE INDICATIONmessage to UE. SS waits for 8 seconds to detect any uplink MEASUREMENT REPORT messages. SS verifies that no MEASUREMENT REPORT message(s) are received as a result of inter-frequency measurements. SS then reconfigures the downlink transmission power settings of cell 1 and cell 4 according to the values stated in columns "T1" of table 8.4.1.6A-1. SS waits for the UE to perform cell re-selection. The UE shall transmit a CELL UPDATE message on the uplink CCCH of cell 4, specifying the "cell update cause" IE as "cell re-selection". SS replies with CELL UPDATE CONFIRM message, which includes IE "New C-RNTI", on the downlink DCCH to complete the cell update procedure. The UE shall reply with a UTRAN MOBILITY INFORMATION CONFIRM message.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 12 | PS-DCCH+DTCH_DCH (state 6-10) in cell 1. System Information Block type 12 is modified with respect to the default settings. All measurement and reporting activities are disabled in this message. |
| 2 | ← | | MEASUREMENT CONTROL | SS indicates that the PCCPCH RSCP of cell 4 shall be monitored and reported. SS waits for 8 seconds for the reception of MEASUREMENT REPORT message. |
| 3 | → | | MEASUREMENT REPORT | UE shall transmit this message to report cell 4's PCCPCH RSCP value. |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS configures common physical channels. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall moves to CELL_FACH state. |
| 6 | ← | | Master Information Block, System Information Block type 12 | SS modifies MIB and SIB 12. Cell 4 is included in the IE "inter-frequency cell info" |
| 7 | ← | | SYSTEM INFORMATION CHANGE INDICATION | SS waits for 8 seconds to verify that no MEASUREMENT REPORT messages are detected on the uplink DCCH. |
| 8 | | | | SS changes the power settings for cell 1 and cell 4 according to columns marked "T1" of table 8.4.1.6A-1, and then waits for the UE to re-select to a new cell. |
| 9 | → | | CELL UPDATE | UE shall perform cell re-selection and transmit this message on the new cell. |
| 10 | ← | | CELL UPDATE CONFIRM | See message content. |
| 11 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

Specific Message Content

System Information Block Type 12 (Step 1)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 2 |
| - Inter-frequency FDD measurement indicator | FALSE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |
| Measurement control system information | |
| - Intra-frequency measurement system information | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN (Nt) | UARFCN of the frequency for cell 4 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | TDD |
| - Primary CCPCH Info | Set to same as used for cell 4 |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Cells for measurement | |
| - Inter-frequency cell id | 4 |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | PCCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Measurement validity | |
| - UE state | CELL_DCH |
| - Inter-frequency set update | Not Present |
| - CHOICE report criteria | Periodic reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8 seconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 3)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-frequency measured results list" |
| - Inter-frequency measurement results | |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN(Nt) | Check to see if set to the UARFCN of the frequency for cell 4 |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if set to the same for cell 4 |
| - proposed TGSN | Check to see if it is absent |
| - PCCPCH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| - timeslot list | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Event Results | Check to see if it is absent |

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

If UE do not require compressed mode, use the same message sub-type found in TS 34.108 clause 9, which is entitled "(Packet to CELL_FACH from CELL_DCH in PS)".

Master Information Block (Step 12)

| Information Element | Value/Remarks |
|---|---|
| MIB value tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |

System Information Block type 12 (Step 6)

| Information Element | Value/remark |
|---|---|
| Measurement control system information | |
| - Use of HCS | Not used |
| - Intra-frequency measurement system information | Not Present |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - CHOICE Inter-frequency cell removal | Not Present |
| - New inter-frequency cells | |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | Reference to table 6.1.4 of TS 34.108 for Cell 4 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | FALSE |
| - CHOICE Mode | TDD |
| - Primary CCPCH info | Refer to clause titled "Default settings for cell No.4 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Cell selection and re-selection info | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

SYSTEM INFORMATION CHANGE INDICATION (Step 7)

| Information Element | Value/Remarks |
|---|---|
| BCCH modification info | |
| - MIB Value tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |

CELL UPDATE (Step 9)

| Information Element | Value/remark |
|---|---|
| U-RNTI | Check to see if same to value assigned in P3 or P5 |
| Cell update cause | Check to see if it is set to "Cell Reselection" |
| Measured results on RACH | Check to see if it is absent |

CELL UPDATE CONFIRM (Step 10)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 11)

Only the message type is checked.

#### 8.4.1.6A.5 Test Requirement

After step 2 the UE shall transmit MEASUREMENT REPORT message to report cell 4's RSCP value in the IE "inter-frequency cell measured results".

After step 4, the UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 5 the UE shall stop sending MEASUREMENT REPORT messages, which contain inter-frequency measured results for cell 4's PCCPCH RSCP value.

After step 8 the UE shall transmit CELL UPDATE message on the uplink CCCH of cell 4, and the "cell update cause" IE shall be set to "cell reselection".

After step 10, the UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH AM RLC.

### 8.4.1.7 Measurement Control and Report: Intra-frequency measurement for transition from CELL_FACH to CELL_DCH state (FDD)

#### 8.4.1.7.1 Definition

#### 8.4.1.7.2 Conformance requirement

Upon transition from CELL_FACH to CELL_DCH state:

1> if intra-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:

2> if the cell in which the UE transited from CELL_FACH state is included in the active set for the CELL_DCH state, the UE shall:

3> resume the measurement reporting.

2> otherwise:

3> the UE should not resume the measurement reporting. If the UE does not resume the measurement reporting, the measurement shall be restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

…

Upon cell reselection while in CELL_FACH/CELL_PCH/URA_PCH state and the cell reselection has occurred after the measurement control information was stored, the UE shall:

1> delete all measurements of type intra-frequency, inter-frequency, and inter-RAT associated with the variable MEASUREMENT_IDENTITY;

…

1> delete the traffic volume measurements that have not been set up or modified through a MEASUREMENT CONTROL message.

…

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in subclause 8.6 unless otherwise specified below.

The UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> if the measurement type is quality, UE internal, intra-frequency, inter-frequency or inter-RAT:

3> if the UE is in CELL_FACH state:

4> the UE behaviour is not specified.

2> for measurement types "inter-RAT measurement" or "inter-frequency measurement" that require measurements on a frequency other than the actually used frequency:

…

2> for measurement type "inter-frequency measurement" that requires measurements only on the same frequency as the actually used frequency:

…

2> for measurement type "UE positioning measurement":

…

2> for any other measurement type:

3> if the measurement is valid in the current RRC state of the UE:

4> begin measurements according to the stored control information for this measurement identity.

1> if the IE "Measurement command" has the value "modify":

2> for all IEs present in the MEASUREMENT CONTROL message:

3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":

4> if the measurement type is quality, UE internal, intra-frequency, inter-frequency or inter-RAT:

5> if the UE is in CELL_FACH state:

6> the UE behaviour is not specified.

4> if measurement type is set to "intra-frequency measurement", for any of the optional IEs "Intra-frequency measurement objects list", "Intra-frequency measurement quantity", "Intra-frequency reporting quantity", "Measurement Validity", "report criteria" and "parameters required for each event" (given "report criteria" is set to "intra-frequency measurement reporting criteria") that are present in the MEASUREMENT CONTROL message:

…

5> replace the corresponding information (the IEs listed above and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the one received in the MEASUREMENT CONTROL message;

5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

1> if the IE "measurement command" has the value "release":

2> terminate the measurement associated with the identity given in the IE "measurement identity";

2> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY.

"If the IE "Reporting Cell Status" is received, the UE shall set the IE "Measured Results" in MEASUREMENT REPORT as follows. The UE shall:

1> for intra-frequency measurement and inter-frequency measurement:
2> include the IE "Cell Measured Results" for cells (excluding cells of another RAT) that satisfy the condition (such as "Report cells within active set") specified in the IE "Reporting Cell Status", in descending order by the measurement quantity"

If the IE "Cells for measurement" has been included in a MEASUREMENT CONTROL message, only monitored set cells explicitly indicated for a given intra-frequency (resp. inter-frequency, interRAT) measurement by the IE "Cells for measurement" shall be considered for measurement. If the IE "Cells for measurement" has not been included in a MEASUREMENT CONTROL message, all of the intra-frequency (resp. inter-frequency, inter RAT) cells stored in the variable CELL_INFO_LIST shall be considered for measurement. The IE "Cells for measurement" is not applicable to active set cells or virtual active set cells e.g. when the triggering condition refers to active set cells, the UE shall consider all active set cells in the CELL_INFO_LIST for measurement irrespective if these cells are explicitly indicated by the IE "Cells for measurement".

Reference

3GPP TS 25.331, clause 8.4.1.3, 8.4.1.6a, 8.4.1.7.1, 8.4.0 and 8.6.7.9

### 8.4.1.7.3 Test Purpose

- To confirm that UE retrieves stored measurement control information for intra-frequency measurement type with "measurement validity" assigned to "CELL_DCH", after it enters CELL_DCH state from CELL_FACH state.
- To confirm that the UE continues to monitor the neighbouring cells listed "intra-frequency cell info" IE in the System Information Block type 11 or 12 messages, if no intra-frequency measurements applicable to CELL_DCH are stored.
- To confirm that the UE transmits MEASUREMENT REPORT messages if reporting criteria stated in IE "intra-frequency measurement reporting criteria" in System Information Block type 11 or 12 messages are fulfilled.
- To confirm that a MEASUREMENT CONTROL message received in CELL_DCH state overrides the measurement and associated reporting contexts maintained in the UE by virtue of System Information Block type 11 or 12.
- To confirm that the UE delete all measurements of type intra-frequency upon cell reselection while in CELL_FACH.

8.4.1.7.4 Method of test

Initial Condition

System Simulator: 3 cells – Cell 1, cell 2 and cell 3 are active.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11).

Test Procedure

Table 8.4.1.7-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Column marked "T0" denotes the initial conditions, while columns marked "T1" are to be applied subsequently. The exact instants on which these values shall be applied are described in the text in this clause.

**Table 8.4.1.7-1**

| Para-meter | Unit | Cell 1 | | | Cell 2 | | | Cell 3 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | Mid Range Test Frequency | | | Mid Range Test Frequency | | |
| CPICH Ec | dBm/3.84 MHz | -60 | -70 | -70 | -65 | -60 | -60 | -70 | -70 | -60 |

The UE is brought to CELL_FACH state in cell 1. (step 1) SS sends SYSTEM INFORMATION CHANGE INDICATION message to UE to inform UE of the modification in the system information.

SS sends a RADIO BEARER RECONFIGURATION message to UE (step2), and configures dedicated physical channels on both uplink and downlink directions. The UE shall move to CELL_DCH state and then return RADIO BEARER RECONFIGURATION COMPLETE message (step3). The UE shall send a MEASUREMENT REPORT message containing IE "Measured results" to report cell 2's CPICH RSCP value and IE "event results" to report triggering of event type "1e" (step 4). After receiving the MEASUREMENT REPORT message, SS transmits a MEASUREMENT CONTROL message with only cell 3 included in the IE "intra-frequency cell info" (step 5). After receiving such a message, the UE shall transmit another set of MEASUREMENT REPORT message for measurement identity = 11. SS verifies that measurement readings for cell 3 's CPICH RSCP are reported in IE "cell measured results" in this message (step 6). Cell 3 shall also trigger event 1e for the measurement that the UE had stored from system information, so a MEASUREMENT REPORT message shall be received for measurement identity = 10 (step 6a) as well. The order of steps 6 and 6a is not important and could be reversed.

Next, SS sends a PHYSICAL CHANNEL RECONFIGURATION message (step 7). SS configures common physical channels for both the uplink and the downlink directions. The UE shall transit to CELL_FACH state and then reply with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message (step 8). SS waits and checks the uplink RACH to confirm that no MEASUREMENT REPORT messages are received (step 9).

SS transmits then a RADIO BEARER RECONFIGURATION message to the UE, to move it to CELL_DCH state (step 9a). The UE shall move to that state, and transmit a RADIO BEARER RECONFIGURATION COMPLETE message to SS (step 9b). Shortly after, a MEASUREMENT REPORT message shall be received that has been triggered by cell 2, i.e. the UE shall have deleted the measurement configured through the MEASUREMENT CONTROL message of step 5, and instead apply the measurement configured in SIB12: a MEASUREMENT REPORT message with measurement identity 10 shall be received while no such message with measurement identity 11 shall be sent by the UE (step 9c).

SS transmits MEASUREMENT CONTROL message on the downlink DCCH, to configure intra-frequency measurements with validity CELL_DCH (step 10). The UE shall send a MEASUREMENT REPORT message (with IE “Measurement identity” = 12) to the SS triggered by cell 2 (step 14).

SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to move it to CELL_FACH state (step 14a). The UE shall move to that state and transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to SS (step 14b). SS shall wait and check that no MEASUREMENT REPORT messages are detected on the uplink DCCH (step 14c).

SS transmits a RADIO BEARER RECONFIGURATION message to the UE, to move it to CELL_DCH state (step 14d). The UE shall move to that state, and transmit a RADIO BEARER RECONFIGURATION COMPLETE message to SS (step 14e). Shortly after, a MEASUREMENT REPORT message shall be received that has been triggered by

cell 2, i.e the UE shall have retrieved the measurement configured through the MEASUREMENT CONTROL message of step 10 (step 14f)..

Following the reception of the MEASUREMENT REPORT messages, SS commands the UE using MEASUREMENT CONTROL message to release measurement control information stored in "measurement identity" = 12 (step 16). Thereafter, SS verifies that no MEASUREMENT REPORT messages are detected on the uplink DCCH with "measurement identity" = 12 (step 16a). After this requirement is satisfied, SS sends MEASUREMENT CONTROL on the downlink DCCH once more (step 17). This message is identical to the one sent in step 10 (see specific message content). A MEASUREMENT REPORT message shall be received from the UE triggered by cell 2 (step 17a).

SS transmits a PHYSICAL CHANNEL RECONFIGURATION message on the downlink DCCH and configures common physical channel (step 18). The UE shall transit to CELL_FACH state and then respond with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message (step 19). SS monitors the uplink DCCH once more to verify that no MEASUREMENT REPORT messages are detected (step 20). SS modifies the downlink transmission power of the respect cells according to the settings in columns "T1" in table 8.4.1.7-1. System information block type 11 and System Information Block type 12 for cell 2 shall be different from the default settings according to what is defined in the specific message content part of this section (step 21). The UE shall initiate a cell re-selection procedure. This is verified in the SS when a CELL UPDATE message is received on the uplink CCCH with the "cell update cause" IE set to "cell reselection" (step 22). SS transmits a CELL UPDATE CONFIRM message, which includes "New C-RNTI", on the DCCH (step 23). Then the UE shall reply with UTRAN MOBILITY INFORMATION CONFIRM message (step 23a). Next, SS sends a RADIO BEARER RECONFIGURATION message on the downlink DCCH, assigning dedicated physical channels in both uplink and downlink directions (step 24). The UE shall respond with a RADIO BEARER RECONFIGURATION COMPLETE message and then return to CELL_DCH state (step 25). SS modifies the downlink transmission power of all cells according to the settings in columns "T2" in table 8.4.1.7-1. UE shall then send MEASUREMENT REPORT messages reporting cell 3's CPICH RSCP according to the content in System Information Block type 12 messages broadcasted in cell 2 (step 21).SS transmits a MEASUREMENT CONTROL message (step 27) whereby the measurement identity is set to the same value as that in the SIB type 12 messages (step 21). UE shall send MEASUREMENT REPORT message (step 28) reporting cell 3's CPICH RSCP according to the MEASUREMENT CONTROL message (step 27).

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 and 12, Master Information Block, Scheduling Block 1 | UE is initially in PS-DCCH+DTCH_FACH (state 6-11) in cell 1. System Information Block type 11 and 12 messages are changed with respect to the default contents according to the descriptions in "Specific Message Contents" clause. |
| 1a | ← | | SYSTEM INFORMATION CHANGE INDICATION | |
| 2 | ← | | RADIO BEARER RECONFIGURATION | SS configures dedicated physical channels. |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE shall move to CELL_DCH state. |
| 4 | → | | MEASUREMENT REPORT | Reports cell 2's CPICH RSCP measurement value, with “measurement identity” IE set to “10”. |
| 5 | ← | | MEASUREMENT CONTROL | Cell 3 is added to the list of monitored set of the UE. |
| 6 | → | | MEASUREMENT REPORT | Cell 3 shall trigger the event 1e configured in the measurement identity 11.<br>NOTE: due to ambiguity in 25.331 – two interpretations can be given. These are shown in the specific message contents below. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 6a | → | | MEASUREMENT REPORT | Cell 3 shall also trigger the event 1e configured in the measurement identity 10. The order of steps 6 and 6a could be reversed. |
| 7 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS configures PRACH and S-CCPCH physical channels. |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall move to CELL_FACH state. |
| 9 | | | | SS waits and checks that no MEASUREMENT REPORT messages are sent by UE. |
| 9a | ← | | RADIO BEARER RECONFIGURATION | SS configures dedicated physical channels. |
| 9b | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE shall move to CELL_DCH state. |
| 9c | → | | MEASUREMENT REPORT | UE shall report cell 2's CPICH RSCP measurement value, with “measurement identity” IE set to “10”. |
| 9d | ← | | Void | |
| 9e | → | | Void | |
| 10 | ← | | MEASUREMENT CONTROL | SS instructs the UE to setup intra-frequency measurement and reporting for cell 2 (already available as neighbouring cell in UE). Measurement validity" IE is set to CELL_DCH state. |
| 11 | | | | |
| 12 | ← | | Void | |
| 13 | → | | Void | |
| 13a | → | | Void | |
| 14 | → | | MEASUREMENT REPORT | UE reports cell 2's measured results for CPICH RSCP, with “measurement identity” IE set to “12”. |
| 14a | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS configures PRACH and S-CCPCH physical channels. |
| 14b | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall move to CELL_FACH state. |
| 14c | | | | SS waits and check that no MEASUREMENT REPORT messages are sent by the UE. |
| 14d | ← | | RADIO BEARER RECONFIGURATION | SS configures dedicated physical channels. |
| 14e | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE shall move to CELL_DCH state. |
| 14f | → | | MEASUREMENT REPORT | UE shall have retrieved and resumed the measurement set up through the MEASUREMENT CONTROL of step 10.The “measurement identity” IE shall be set to “12”. |
| 15 | → | | Void | |
| 16 | ← | | MEASUREMENT CONTROL | Terminate all the intra-frequency measurement and reporting activities related to "measurement identity" = 12. |
| 16a | | | | SS waits and verifies that UE stops transmitting MEASUREMENT REPORT messages with “measurement identity” = 12. |
| 17 | ← | | MEASUREMENT CONTROL | This message is the same as in step 10. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 17a | → | | MEASUREMENT REPORT | UE shall transmit a MEASUREMENT REPORT message triggered by cell 2, with “measurement identity” IE set to “12”. |
| 17b | → | | Void | |
| 18 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Allocates common physical channels. |
| 19 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall move to CELL_FACH state. |
| 20 | | | | SS checks that no MEASUREMENT REPORT messages are received. |
| 21 | ← | | System Information Block type 11<br>System Information Block type 12 | SS sends SIB11 and SIB12 with specific values to Cell2.<br>SS reconfigures the downlink transmission power settings for cells 1 to 3 according to column "T1" in table 8.4.1.7. |
| 22 | → | | CELL UPDATE | UE shall re-selects to cell 2 and then perform a cell update procedure. |
| 23 | ← | | CELL UPDATE CONFIRM | UE shall stay in CELL_FACH state. |
| 23a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 24 | ← | | RADIO BEARER RECONFIGURATION | Dedicated physical channels are assigned to the UE in this message. |
| 25 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE shall return to CELL_DCH state.UE shall not send Measurement Report message with “measurement identity” = ‘12’. |
| 25a | | | | SS reconfigures the downlink transmission power settings of all cells according to column “T2” in table 8.4.1.7-1. |
| 26 | → | | MEASUREMENT REPORT | UE begins to report cell 3's measured results for CPICH RSCP, with “measurement identity” IE set to “1”. |
| 27 | ← | | MEASUREMENT CONTROL | |
| 28 | → | | MEASUREMENT REPORT | UE shall transmit a MEASUREMENT REPORT message triggered by cell 3, with “measurement identity” IE set to “1”. |

Specific Message Content

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

Master Information Block (Step 1)

| Information Element | Value/Remarks |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |
| SB 1 Cell Value tag | Set to (Current SB 1 value tag + 1) |

Scheduling Block 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| SIB 11 Cell Value tag | Set to (Current SIB 11 value tag + 1) |
| SIB 12 Cell Value tag | Set to (Current SIB 12 value tag + 1) |

System Information Block type 11 for cell 1 (Step 1)

All messages content below shall use the same content as described in default message content specified in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | TRUE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 of TS34.108 |
| - Primary CPICH Tx power | Not present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not present |
| - Cells for measurement | Not present |
| - Intra-frequency measurement quantity | Not present |
| - Intra-frequency reporting quantity for RACH reporting | Not present |
| - Maximum number of reported cells on RACH | Not present |
| - Reporting information for state CELL_DCH | Not present |
| - Inter-frequency measurement system information | As per 34.108 clause 6.1.0b - Contents of System Information Block type 11 (FDD) |
| - Inter-RAT measurement system information | Not present |
| - Traffic volume measurement system information | Not Present |

System Information Block type 12 for cell 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 10 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | Not Present |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not present |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity for RACH reporting | Not present |
| - Maximum number of reported cells on RACH | No report |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | TRUE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameter required for each event | |
| - Intra-frequency event identity | 1e |
| - Triggering condition 1 | Not present |
| - Triggering condition 2 | Monitored set cells |
| - Reporting range constant | Not present |
| - Cells forbidden to affect reporting range | Not present |
| - W | Not present |
| - Hysteresis | 0 (0 dB) |
| - Threshold used frequency | -80 dBm |
| - Reporting deactivation threshold | Not present |
| - Replacement activation threshold | Not present |
| - Time to trigger | 0 |
| - Amount of reporting | Not Present |

| Information Element | Value/remark |
|---|---|
| - Reporting Interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cells | Report cells within monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

SYSTEM INFORMATION CHANGE INDICATION (Step 1a)

| Information Element | Value/Remarks |
|---|---|
| BCCH modification info | |
| - MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |
| - BCCH modification time | Not Present |

RADIO BEARER RECONFIGURATION (Step 2, Step 9a, Step 14d and Step 24)

Use the same message type found in Annex A, with condition set to A4.

MEASUREMENT REPORT (Steps 4 and 9c)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 10 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if this IE is set to '1e' |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check to see if it's the same code for cell 2 |

MEASUREMENT CONTROL (Step 5)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 11 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |

| Information Element | Value/remark |
|---|---|
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 3 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells selection and Re-selection info | Not Present |
| - Cells for measurement | |
| - Intra-frequency cell id | 3 |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | TRUE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1e |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Monitored set cells |
| - Hysteresis | 0 (0 dB) |
| - Threshold used frequency | -90 dBm |
| - Time to Trigger | 0 |
| - Amount of reporting | Not Present |
| - Reporting interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cells | Report cells within monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 6)

NOTE: Due to ambiguity in 25.331 – two interpretations can be given for MEASUREMENT REPORT

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 11 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if this IE is set to '1e' |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check to see if it's the same code for cell 3 |

MEASUREMENT REPORT (Step 6)

NOTE: Due to ambiguity in 25.331 – two interpretations can be given for MEASUREMENT REPORT

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 11 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if this IE is set to '1e' |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check to see if it's the same code for cell 3 |

MEASUREMENT REPORT (Step 6a)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 10 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results |
| - Intra-frequency event identity | Check to see if this IE is set to '1e' |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check to see if it's the same code for cell 3 |

PHYSICAL CHANNEL RECONFIGURATION (Steps 7, 14a and 18)

Use the same message sub-type found in clause 9 of TS 34.108, which is entitled "Packet to CELL_FACH from CELL_DCH in PS".

MEASUREMENT CONTROL (Steps 10 and 17)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 12 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | TRUE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not present |
| - Measurement validity | |
| - UE state | CELL_DCH |
| - CHOICE report criteria | Intra-frequency measurement criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1e |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Monitored set cells |
| - Hysteresis | 0 (0 dB) |
| - Threshold Used Frequency | -80 dBm |
| - Time to Trigger | 0 |
| - Amount of reporting | Not Present |
| - Reporting interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within monitored set cells on used frequency |
| - Maximum number of reported cells | 1 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Steps 14, 14f and 17a)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 12 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results |
| - Intra-frequency event identity | Check to see if this IE is set to '1e' |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check to see if it's the same code for cell 2 |

MEASUREMENT CONTROL (Step 16)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 12 |
| Measurement Command | Release |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| CHOICE Measurement type | Not Present |
| DPCH compressed mode status info | Not Present |

System Information Block type 11 for cell 2 (Step 21)

All messages content below shall use the same content as described in default message content specified in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/Remark |
|---|---|
| SIB12 indicator | TRUE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not Present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1.4 |
| - Primary CPICH Tx power | Not present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1.4 |
| - Primary CPICH Tx power | Not present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not present |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1.4 |
| - Primary CPICH Tx power | Not present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection info | Not present |
| - Cells for measurement | Not present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | Not Present |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity for RACH reporting | Not present |
| - Maximum number of reported cells on RACH | Not present |
| - Reporting information for state CELL_DCH | Not present |

System Information Block type 12 for cell 2 (Step 21)

| Information Element | Value/Remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | Not Present |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity for RACH reporting | Not present |
| - Maximum number of reported cells on RACH | Not present |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | TRUE |
| - CHOICE mode | FDD |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | TRUE |
| - CHOICE mode | FDD |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Intra-frequency measurement reporting criteria | |
| - Intra-frequency event identity | 1a |
| - Triggering condition 2 | Monitored set cells |
| - Reporting Range Constant | 10 (5dB) |
| - Cells forbidden to affect Reporting range | Not Present |
| - W | 0 |
| - Hysteresis | 0 (0 dB) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | 2 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 640 |
| - Amount of reporting | 4 |
| - Reporting interval | 4000 |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Inter-frequency measurement system information | Not present |
| - Inter-RAT measurement system information | Not present |
| - Traffic volume measurement system information | Not Present |
| - UE internal measurement system information | Not Present |

CELL UPDATE (Step 22)

| Information Element | Value/remark |
|---|---|
| U-RNTI | Check to see if set to the previous assigned U-RNTI value |
| START List | Check to see if it is present |
| AM_RLC error indication(RB2, RB3 or RB4) | Checked to see if it is set to FALSE |
| AM_RLC error indication(RB>4) | Checked to see if it is set to FALSE |
| Cell Update Cause | Check to see if set to "Cell Reselection" |
| RB timer indicator | |
| - T314 expired | Checked to see if it is set to 'FALSE' |
| - T315 expired | Checked to see if it is set to 'FALSE' |
| Measured results on RACH | Check to see if it is absent |

CELL UPDATE CONFIRM (Step 23)

Use the default message content of the same message type in Annex A, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 23a)

Only the message type is checked.

MEASUREMENT REPORT (Step 26)

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is present |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is present |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if this IE is set to '1a' |
| - Cell measurement event results | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Check to see if it's the same code for cell 3 |

NOTE: Cells 2 and 3 can be received in any order

MEASUREMENT CONTROL (Step 27)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | Not present |
| - Cells for measurement | |
| - Intra-frequency cell id | 3 |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | TRUE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1e |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Monitored set cells |
| - Hysteresis | 0 (0 dB) |
| - Threshold used frequency | -90 dBm |
| - Time to Trigger | 0 |
| - Amount of reporting | Not Present |
| - Reporting interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cells | Report cells within monitored set cells on used frequency |
| - Maximum number of reported cells | 1 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 28)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if this IE is set to '1e' |
| - Cell measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check to see if it's the same code for cell 3 |

### 8.4.1.7.5 Test Requirement

After step 3 the UE shall report cell 2's CPICH RSCP value by transmitting MEASUREMENT REPORT messages.

After step 5 the UE shall transmit two MEASUREMENT REPORT messages which contain measured results of cell 3's CPICH RSCP value only, one for measurement identity 10 and one for measurement identity 11.

After step 9 and step 11 the UE shall not transmit MEASUREMENT REPORT messages, which pertain to intra-frequency type measurement reporting.

After step 9b, the UE shall transmit a MEASUREMENT REPORT according to what is broadcast in SIB 11 and 12 of cell 1, and MEASUREMENT REPORT message pertaining to the MEASUREMENT CONTROL message that it had received in step 5.

After steps 13 and 14e, the UE shall resume the measurement and reporting activities as specified in MEASUREMENT CONTROL message received in step 10. The UE shall transmit MEASUREMENT REPORT messages, containing measured results of cell 2's CPICH RSCP value.

After step 16 the UE shall stop measurement activities pertaining to event triggered reporting of cell 2's CPICH RSCP, no MEASUREMENT REPORT messages shall be detectable by the SS on the uplink DCCH with “measurement identity” = 12.

After step 17, the UE shall transmit a MEASUREMENT REPORT message to the SS as specified in the MEASUREMENT CONTROL message received in step 17.

After step 21 the UE shall re-select to cell 2 and initiate a cell update procedure. SS shall receive a CELL UPDATE message on the uplink CCCH of cell 2, with the "cell update cause" IE stated as "cell re-selection".

After step 23, the UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH AM RLC.

After step 25, UE shall not send MEASUREMENT REPORT message with “measurement identity” = ‘12’.

After step 25a the UE shall report cell 3's CPICH RSCP value by transmitting MEASUREMENT REPORT messages.

After step 27, UE shall send MEASUREMENT REPORT message with “measurement identity” = ‘1’.

## 8.4.1.7A Measurement Control and Report: Intra-frequency measurement for transition from CELL_FACH to CELL_DCH state (TDD)

### 8.4.1.7A.1 Definition

### 8.4.1.7A.2 Conformance requirement

Upon transition from CELL_FACH to CELL_DCH state:

1> if intra-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:

2> if the cell in which the UE transited from CELL_FACH state is included in the active set for the CELL_DCH state, the UE shall:

3> resume the measurement reporting.

2> otherwise:

3> the UE should not resume the measurement reporting. If the UE does not resume the measurement reporting, the measurement shall be restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

…

Upon cell reselection while in CELL_FACH/CELL_PCH/URA_PCH state and the cell reselection has occurred after the measurement control information was stored, the UE shall:

1> delete all measurements of type intra-frequency, inter-frequency, and inter-RAT associated with the variable MEASUREMENT_IDENTITY;

…

1> delete the traffic volume measurements that have not been set up or modified through a MEASUREMENT CONTROL message.

…

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in subclause 8.6 unless otherwise specified below.

The UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> if the measurement type is quality, UE internal, intra-frequency, inter-frequency or inter-RAT:

3> if the UE is in CELL_FACH state:

4> the UE behaviour is not specified.

2> for measurement types "inter-RAT measurement" or "inter-frequency measurement" that require measurements on a frequency other than the actually used frequency:

…

2> for measurement type "inter-frequency measurement" that requires measurements only on the same frequency as the actually used frequency:

…

2> for measurement type "UE positioning measurement":

…

2> for any other measurement type:

3> if the measurement is valid in the current RRC state of the UE:

4> begin measurements according to the stored control information for this measurement identity.

1> if the IE "Measurement command" has the value "modify":

2> for all IEs present in the MEASUREMENT CONTROL message:

3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":

4> if the measurement type is quality, UE internal, intra-frequency, inter-frequency or inter-RAT:

5> if the UE is in CELL_FACH state:

6> the UE behaviour is not specified.

4> if measurement type is set to "intra-frequency measurement", for any of the optional IEs "Intra-frequency measurement objects list", "Intra-frequency measurement quantity", "Intra-frequency reporting quantity", "Measurement Validity", "report criteria" and "parameters required for each event" (given "report criteria" is set to "intra-frequency measurement reporting criteria") that are present in the MEASUREMENT CONTROL message:

…

5> replace the corresponding information (the IEs listed above and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the one received in the MEASUREMENT CONTROL message;

5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

1> if the IE "measurement command" has the value "release":

2> terminate the measurement associated with the identity given in the IE "measurement identity";

2> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY.

If the IE "Reporting Cell Status" is received, the UE shall set the IE "Measured Results" in MEASUREMENT REPORT as follows. The UE shall:

1> for intra-frequency measurement and inter-frequency measurement:

2> include the IE "Cell Measured Results" for cells (excluding cells of another RAT) that satisfy the condition (such as "Report cells within active set") specified in the IE "Reporting Cell Status", in descending order by the measurement quantity"

If the IE "Cells for measurement" has been included in a MEASUREMENT CONTROL message, only monitored set cells explicitly indicated for a given intra-frequency (resp. inter-frequency, interRAT) measurement by the IE "Cells for measurement" shall be considered for measurement. If the IE "Cells for measurement" has not been included in a MEASUREMENT CONTROL message, all of the intra-frequency (resp. inter-frequency, inter RAT) cells stored in the variable CELL_INFO_LIST shall be considered for measurement. The IE "Cells for measurement" is not applicable to active set cells or virtual active set cells e.g. when the triggering condition refers to active set cells, the UE shall consider all active set cells in the CELL_INFO_LIST for measurement irrespective if these cells are explicitly indicated by the IE "Cells for measurement".

### Reference

3GPP TS 25.331, clause 8.4.1.3, 8.4.1.6a, 8.4.1.7.1, 8.4.0 and 8.6.7.9

8.4.1.7A.3 Test Purpose

- To confirm that UE retrieves stored measurement control information for intra-frequency measurement type with "measurement validity" assigned to "CELL_DCH", after it enters CELL_DCH state from CELL_FACH state.
- To confirm that the UE continues to monitor the neighbouring cells listed "intra-frequency cell info" IE in the System Information Block type 11 or 12 messages, if no intra-frequency measurements applicable to CELL_DCH are stored.
- To confirm that the UE transmits MEASUREMENT REPORT messages if reporting criteria stated in IE "intra-frequency measurement reporting criteria" in System Information Block type 11 or 12 messages are fulfilled.
- To confirm that a MEASUREMENT CONTROL message received in CELL_DCH state overrides the measurement and associated reporting contexts maintained in the UE by virtue of System Information Block type 11 or 12 messages only if the measurement identities defined within the MEASUREMENT CONTROL message and System Information Block type 11 or 12 are identical.
- To confirm that the UE delete all measurements of type intra-frequency upon cell reselection while in CELL_FACH.

8.4.1.7A.4 Method of test

Initial Condition

System Simulator: 3 cells – Cell 1, cell 2 and cell 3 are active.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11).

Test Procedure

Table 8.4.1.7A-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Column marked "T0" denotes the initial conditions, while columns marked "T1" are to be applied subsequently. The exact instants on which these values shall be applied are described in the text in this clause.

**Table 8.4.1.7A-1**

| Para-meter | Unit | Cell 1 | | | | | | | Cell 2 | | | | | | | Cell 3 | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T4 | T5 | T6 | T0 | T1 | T2 | T3 | T4 | T5 | T6 | T0 | T1 | T2 | T3 | T4 | T5 | T6 |
| UTRA RF Channel Number | | | | | | | | | Mid Range Test Frequency | | | | | | | Mid Range Test Frequency | | | | | | |
| PCCPCH Ec | dBm/ 1.28 MHz | -60 | -70 | -60 | -70 | -60 | -70 | -75 | -70 | -60 | -70 | -60 | -70 | -60 | -70 | -75 | -75 | -75 | -75 | -75 | -75 | -60 |

The UE is brought to CELL_FACH state in cell 1. (step 1) SS sends SYSTEM INFORMATION CHANGE INDICATION message to UE to inform UE of the modification in the system information.

SS sends a RADIO BEARER RECONFIGURATION message to UE (step2), and configures dedicated physical channels on both uplink and downlink directions. The UE shall move to CELL_DCH state and then return RADIO BEARER RECONFIGURATION COMPLETE message (step3). SS reconfigures the downlink transmission power settings for cells 1 to 3 according to column "T1" in table 8.4.1.7A .The UE shall send a MEASUREMENT REPORT message containing IE “Measured results” to report cell 2’s PCCPCH RSCP value and IE “event results” to report triggering of event type “1g” (step 4). After receiving the MEASUREMENT REPORT message, SS transmits a MEASUREMENT CONTROL message with cell 3 included in the IE “new intra-frequency cell info” (step 5). After receiving such a message, the UE shall transmit another set of MEASUREMENT REPORT message for measurement identity = 11. SS verifies that measurement readings for cell 1,2,3 ‘s PCCPCHCH RSCP are reported in IE “cell measured results” in this message (step 6). SS modifies the downlink transmission power of the respect cells according to the settings in columns “T2” in table 8.4.1.7A-1. The UE shall send a MEASUREMENT REPORT message containing IE “Measured results” to report cell 1’s PCCPCH RSCP value and IE “event results” to report triggering of event type “1g” (step 6b).Next, SS sends a PHYSICAL CHANNEL RECONFIGURATION message (step 7). SS configures common physical channels for both the uplink and the downlink directions. The UE shall transit to CELL_FACH state and then reply with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message (step 8). SS waits and checks the uplink RACH to confirm that no MEASUREMENT REPORT messages are received (step 9).

SS transmits then a RADIO BEARER RECONFIGURATION message to the UE, to move it to CELL_DCH state (step 9a). The UE shall move to that state, and transmit a RADIO BEARER RECONFIGURATION COMPLETE message to SS (step 9b). SS modifies the downlink transmission power of the respect cells according to the settings in columns “T3” in table 8.4.1.7A-1.Shortly after, a MEASUREMENT REPORT message shall be received which has been triggered by cell 2, i.e. the UE shall have deleted the measurement configured through the MEASUREMENT CONTROL message of step 5, and instead apply the measurement configured in SIB12: a MEASUREMENT REPORT message with measurement identity 10 shall be received while no such message with measurement identity 11 shall be sent by the UE (step 9c). SS modifies the downlink transmission power of the respect cells according to the settings in columns “T4” in table 8.4.1.7A-1. The UE shall send a MEASUREMENT REPORT message containing IE “Measured results” to report cell 1’s PCCPCH RSCP value and IE “event results” to report triggering of event type “1g”.

SS transmits MEASUREMENT CONTROL message on the downlink DCCH, to configure periodic intra-frequency measurements with validity CELL_DCH (step 10). The UE shall send a MEASUREMENT REPORT message (with IE “Measurement identity” = 12) to the SS (step 14).

SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to move it to CELL_FACH state (step 14a). The UE shall move to that state and transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to SS (step 14b). SS shall wait and check that no MEASUREMENT REPORT messages are detected on the uplink DCCH (step 14c).

SS transmits a RADIO BEARER RECONFIGURATION message to the UE, to move it to CELL_DCH state (step 14d). The UE shall move to that state, and transmit a RADIO BEARER RECONFIGURATION COMPLETE message to SS (step 14e). Shortly after, a MEASUREMENT REPORT message shall be received, i.e the UE shall have retrieved the measurement configured through the MEASUREMENT CONTROL message of step 10, instead of the ones that are broadcast in SIB12 (step 14f).

Following the reception of the MEASUREMENT REPORT message, SS commands the UE using MEASUREMENT CONTROL message to release measurement control information stored in “measurement identity” = 12 (step 15). Thereafter, SS verifies that no MEASUREMENT REPORT messages are detected on the uplink DCCH (step 16). After this requirement is satisfied, SS sends MEASUREMENT CONTROL on the downlink DCCH once more (step 17). This message is identical to the one sent in step 10 (see specific message content). A periodical MEASUREMENT REPORT message shall be received from the UE (step 17a).

SS transmits a PHYSICAL CHANNEL RECONFIGURATION message on the downlink DCCH and configures common physical channel (step 18). The UE shall transit to CELL_FACH state and then respond with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message (step 19). SS monitors the uplink DCCH once more to verify that no MEASUREMENT REPORT messages are detected (step 20). System information block type 11 and System Information Block type 12 for cell 2 shall be different from the default settings according to what is defined in the specific message content part of this section (step 21). SS modifies the downlink transmission power of the respect cells according to the settings in columns “T5” in table 8.4.1.7A-1. The UE shall initiate a cell re-selection procedure. This is verified in the SS when a CELL UPDATE message is received on the uplink CCCH with the “cell update cause” IE set to “cell reselection” (step 22). SS transmits a CELL UPDATE CONFIRM message, which includes “New C-RNTI”, on the DCCH (step 23). Then the UE shall reply with UTRAN MOBILITY INFORMATION CONFIRM message (step 23a). Next, SS sends a RADIO BEARER RECONFIGURATION message on the downlink DCCH, assigning dedicated physical channels in both uplink and downlink directions (step 24). The UE shall respond with a RADIO BEARER RECONFIGURATION COMPLETE message and then return to CELL_DCH state (step 25). SS modifies the downlink transmission power of all cells according to the settings in columns “T6” in table 8.4.1.7A-1. UE shall then send MEASUREMENT REPORT messages reporting cell 3’s PCCPCH RSCP according to the content in System Information Block type 12 messages broadcasted in cell 2 (step 21).SS transmits a MEASUREMENT CONTROL message (step 27) whereby the measurement identity is set to the same value as that in the SIB type 12 messages (step 21). UE shall send MEASUREMENT REPORT message (step 28) reporting cell 1,2,3’s PCCPCH RSCP according to the MEASUREMENT CONTROL message (step 27).

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 and 12 | UE is initially in PS-DCCH+DTCH_FACH (state 6-11) in cell 1. System Information Block type 11 and 12 messages are changed with respect to the default contents according to the descriptions in “Specific Message Contents” clause. |
| 1a | ← | | SYSTEM INFORMATION CHANGE INDICATION | |
| 2 | ← | | RADIO BEARER RECONFIGURATION | SS configures dedicated physical channels. |
| 3 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE shall move to CELL_DCH state. |
| 3a | | | | SS reconfigures the downlink transmission power settings for cells 1 to 3 according to column "T1" in table 8.4.1.7A |
| 4 | → | | MEASUREMENT REPORT | Reports cell 2's PCCPCH RSCP measurement value, with “measurement identity” IE set to “10”. |
| 5 | ← | | MEASUREMENT CONTROL | A periodic measurement is setup with measurement identity of 11. Cell 3 is added to the list of monitored set of the UE. |
| 6 | → | | MEASUREMENT REPORT | SS shall receive a MEASUREMENT REPORT message after the period set in step 5 in which the report for cell 1,cell 2 and cell 3 are included. |
| 6a | | | | SS reconfigures the downlink transmission power settings for cells 1 to 3 according to column "T2" in table 8.4.1.7A |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 6b | → | | MEASUREMENT REPORT | Cell 1 shall trigger the event 1g and a MEASUREMENT REPORT message shall be sent to SS with the measurement identity 10. |
| 7 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS configures PRACH and S-CCPCH physical channels. |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall move to CELL_FACH state. |
| 9 | | | | SS waits and checks that no MEASUREMENT REPORT messages are sent by UE. |
| 9a | ← | | RADIO BEARER RECONFIGURATION | SS configures dedicated physical channels. |
| 9b | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE shall move to CELL_DCH state. |
| 9b1 | | | | SS reconfigures the downlink transmission power settings for cells 1 to 3 according to column "T3" in table 8.4.1.7A |
| 9c | → | | MEASUREMENT REPORT | Cell 2 shall trigger the event 1g and a MEASUREMENT REPORT message shall be sent to SS with the measurement identity 10. |
| 9d | | | | SS reconfigures the downlink transmission power settings for cells 1 to 3 according to column "T4" in table 8.4.1.7A |
| 9e | → | | MEASUREMENT REPORT | Cell 1 shall trigger the event 1g and a MEASUREMENT REPORT message shall be sent to SS with the measurement identity 10. |
| 10 | ← | | MEASUREMENT CONTROL | SS instructs the UE to setup intra-frequency measurement with measurement identity of 12. Measurement validity" IE is set to CELL_DCH state. |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | | | Void | |
| 14 | → | | MEASUREMENT REPORT | UE reports cell 1 and cell 2's measured results for PCCPCH RSCP, with “measurement identity” IE set to “12”. |
| 14a | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS configures PRACH and S-CCPCH physical channels. |
| 14b | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall move to CELL_FACH state. |
| 14c | | | | SS waits and check that no MEASUREMENT REPORT messages are sent by the UE. |
| 14d | ← | | RADIO BEARER RECONFIGURATION | SS configures dedicated physical channels. |
| 14e | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE shall move to CELL_DCH state. |
| 14f | → | | MEASUREMENT REPORT | UE shall have retrieved and resumed the measurement set up through the MEASUREMENT CONTROL of step 10.The “measurement identity” IE shall be set to “12”. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 15 | ← | | MEASUREMENT CONTROL | Terminate all the intra-frequency measurement and reporting activities related to "measurement identity" = 12. |
| 16 | | | | SS waits and verifies that UE stop transmitting MEASUREMENT REPORT messages. |
| 17 | ← | | MEASUREMENT CONTROL | This message is the same as in step 10. |
| 17a | → | | MEASUREMENT REPORT | UE shall transmit a MEASUREMENT REPORT message with “measurement identity” IE set to “12”. |
| 18 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Allocates common physical channels. |
| 19 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall move to CELL_FACH state. |
| 20 | | | | SS checks that no MEASUREMENT REPORT messages are received. |
| 21 | ← | | System Information Block type 11<br>System Information Block type 12 | SS sends SIB11 and SIB12 with specific values to Cell2.<br>SS reconfigures the downlink transmission power settings for cells 1 to 3 according to column "T5" in table 8.4.1.7A. |
| 22 | → | | CELL UPDATE | UE shall re-selects to cell 2 and then perform a cell update procedure. |
| 23 | ← | | CELL UPDATE CONFIRM | UE shall stay in CELL_FACH state. |
| 23a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 24 | ← | | RADIO BEARER RECONFIGURATION | Dedicated physical channels are assigned to the UE in this message. |
| 25 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE shall return to CELL_DCH state.UE shall not send Measurement Report message with “measurement identity” = ‘12’. |
| 25a | | | | SS reconfigures the downlink transmission power settings of all cells according to column “T6” in table 8.4.1.7A-1. |
| 26 | → | | MEASUREMENT REPORT | UE begins to report cell 3's measured results for PCCPCH RSCP, with “measurement identity” IE set to “1”,event is 1g. |
| 27 | ← | | MEASUREMENT CONTROL | SS instructs the UE to setup period intra-frequency measurement. “measurement identity” IE set to “1” |
| 28 | → | | MEASUREMENT REPORT | UE shall transmit a period MEASUREMENT REPORT message, with “measurement identity” IE set to “1”. |

Specific Message Content

System Information Block type 1 (TDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

Master Information Block (Step 1)

| Information Element | Value/Remarks |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |

System Information Block type 11 for cell 1 (Step 1)

All messages content below shall use the same content as described in default message content specified in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | TRUE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | PCCPCH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - TSTD indicator | FALSE |
| - Cell parameters Id | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1.4 of TS34.108 |
| - SCTD indicator | FALSE |
| - Primary CCPCH Tx power | Not present |
| - timeslot info list | Not present |
| - Cell Selection and Re-selection info | Not present |
| - Cells for measurement | Not present |
| - Intra-frequency measurement quantity | Not present |
| - Intra-frequency reporting quantity for RACH reporting | Not present |
| - Maximum number of reported cells on RACH | Not present |
| - Reporting information for state CELL_DCH | Not present |

System Information Block type 12 for cell 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | PCCPCH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 10 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - TSTD indicator | FALSE |
| - Cell parameters Id | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1.4 of TS34.108 |
| - SCTD indicator | FALSE |
| - Primary CCPCH Tx power | Not present |
| - timeslot info list | Not present |
| - Cell selection and Re-selection info | Not Present |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not present |
| - CHOICE mode | TDD |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity for RACH reporting | Not present |
| - Maximum number of reported cells on RACH | No report |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameter required for each event | |
| - Intra-frequency event identity | 1g |
| - Reporting range constant | Not present |
| - W | Not present |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 0 |
| - Amount of reporting | Not Present |
| - Reporting Interval | Not Present |
| - Reporting cell status | |

| Information Element | Value/remark |
|---|---|
| - CHOICE reported cells | Report cells within actived and monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

SYSTEM INFORMATION CHANGE INDICATION (Step 1a)

| Information Element | Value/Remarks |
|---|---|
| BCCH modification info | |
| - MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |
| - BCCH modification time | Not Present |

RADIO BEARER RECONFIGURATION (Step 2, Step 9a, Step 14d and Step 24)

Use the same message type found in Annex A, with condition set to A4.

MEASUREMENT REPORT (Steps 4 and 9c)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 10 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 1 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 2 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if this IE is set to '1g' |
| - Cell measurement event results | |
| - Cell parameters Id | Check to see if it's the same code for cell 2 |

MEASUREMENT CONTROL (Step 5).

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 11 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - TSTD indicator | FALSE |
| - Cell parameters Id | Refer to clause titled "Default settings for cell No.2 (TDD)" in clause 6.1.4 of TS34.108 |
| - SCTD indicator | FALSE |
| - Primary CCPCH Tx power | Not present |
| - timeslot info list | Not present |
| - Cells selection and Re-selection info | Not Present |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Periodical reporting criteria |
| - reporting amount | infinity |
| - reportingInterval | 64s |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Steps 6)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 11 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 2 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 1 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 3 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | Check to see if this IE is absent |

MEASUREMENT REPORT (Steps 6b)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 10 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 1 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 2 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 3 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if this IE is set to '1g' |
| - Cell measurement event results | |
| - Cell parameters Id | Check to see if it's the same code for cell 1 |

PHYSICAL CHANNEL RECONFIGURATION (Steps 7, 14a and 18)

Use the same message sub-type found in clause 9 of TS 34.108, which is entitled "Packet to CELL_FACH from CELL_DCH in PS".

MEASUREMENT REPORT (Steps 9e)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 10 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 1 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 2 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if this IE is set to '1g' |
| - Cell measurement event results | |
| - Cell parameters Id | Check to see if it's the same code for cell 1 |

MEASUREMENT CONTROL (Step 10 and 17).

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 12 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | Not Present |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not present |
| - Measurement validity | CELL DCH |
| - CHOICE report criteria | Periodical reporting criteria |
| - reporting amount | infinity |
| - reportingInterval | 64s |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Steps 14, 14f and 17a)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 12 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 1 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 2 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | Check to see if this IE is absent |

MEASUREMENT CONTROL (Step 15)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 12 |
| Measurement Command | Release |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| CHOICE Measurement type | Not Present |
| DPCH compressed mode status info | Not Present |

System Information Block type 11 for cell 2 (Step 21)

All messages content below shall use the same content as described in default message content specified in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/Remark |
|---|---|
| SIB12 indicator | TRUE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | PCCPCH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not Present |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - TSTD indicator | FALSE |
| - Cell parameters Id | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1.4 of TS34.108 |
| - SCTD indicator | FALSE |
| - Primary CCPCH Tx power | Not present |
| - timeslot info list | Not present |
| - Cell Selection and Re-selection info | Not present |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - TSTD indicator | FALSE |
| - Cell parameters Id | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1.4 of TS34.108 |
| - SCTD indicator | FALSE |
| - Primary CCPCH Tx power | Not present |
| - timeslot info list | Not present |
| - Cell Selection and Re-selection info | Not present |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | |
| - TSTD indicator | FALSE |
| - Cell parameters Id | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1.4 of TS34.108 |
| - SCTD indicator | FALSE |
| - Primary CCPCH Tx power | Not present |
| - timeslot info list | Not present |
| - Cell Selection and Re-selection info | Not present |
| - Cells for measurement | Not present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | Not Present |
| - CHOICE mode | TDD |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity for RACH reporting | Not present |
| - Maximum number of reported cells on RACH | Not present |
| - Reporting information for state CELL_DCH | Not present |

System Information Block type 12 for cell 2 (Step 21)

| Information Element | Value/Remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | PCCPCH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not present |
| - Intra-frequency cell info list | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | Not Present |
| - CHOICE mode | TDD |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity for RACH reporting | Not present |
| - Maximum number of reported cells on RACH | Not present |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Intra-frequency measurement reporting criteria | |
| - Intra-frequency event identity | 1g |
| - W | 0 |
| - Hysteresis | 2 (1dB) |
| - Threshold Used Frequency | Not Present |
| - Reporting deactivation threshold | 2 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 0 |
| - Amount of reporting | Not Present |
| - Reporting interval | Not Present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cell within active set and/or monitored set cells on used frequency |
| - Maximum number of reported cells | 3 |
| - Inter-frequency measurement system information | Not present |
| - Inter-RAT measurement system information | Not present |
| - Traffic volume measurement system information | Not Present |
| - UE internal measurement system information | Not Present |

CELL UPDATE (Step 22)

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| START List | Check to see if it is present |
| AM_RLC error indication(RB2, RB3 or RB4) | Checked to see if it is set to FALSE |
| AM_RLC error indication(RB>4) | Checked to see if it is set to FALSE |
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |
| RB timer indicator | |
| - T314 expired | Checked to see if it is set to 'FALSE' |
| - T315 expired | Checked to see if it is set to 'FALSE' |
| Measured results on RACH | Check to see if it is absent |

CELL UPDATE CONFIRM (Step 23)

Use the default message content of the same message type in Annex A, with the following exceptions.

| Information Element | Value/Remarks |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UTRAN MOBILITY INFORMATION CONFIRM (Step 23a)

Only the message type is checked.

MEASUREMENT REPORT (Step 26)

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 3 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is present |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 2 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is present |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 1 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if it's set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if this IE is set to '1g' |
| - Cell measurement event results | |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same code for cell 3 |

NOTE: Cells 2 and 3 can be received in any order

MEASUREMENT CONTROL (Step 27)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Period |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | Not Present |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | period measurement criteria |
| - reporting amount | infinity |
| - reportingInterval | 64s |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 28)

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 3 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | Check to see if this IE is absent |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is present |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 2 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is present |
| - CHOICE mode | TDD |
| - cell parameters identity | Check to see if it's the same code for cell 1 |
| - proposed TGSN | Check to see if this IE is absent |
| - PCCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - timeslotISCP_List | |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event Results | Check to see if this IE is absent |

### 8.4.1.7A.5 Test Requirement

After step 3 the UE shall report cell 2's PCCPCH RSCP value by transmitting MEASUREMENT REPORT messages.

After step 9 and step 11 the UE shall not transmit MEASUREMENT REPORT messages, which pertain to intra-frequency type measurement reporting.

After step 9b, the UE shall transmit a MEASUREMENT REPORT according to what is broadcast in SIB 11 and 12 of cell 1, and MEASUREMENT REPORT message pertaining to the MEASUREMENT CONTROL message that it had received in step 5.

After steps 13 and 14e, the UE shall resume the measurement and reporting activities as specified in MEASUREMENT CONTROL message received in step 10. The UE shall transmit MEASUREMENT REPORT messages, containing measured results of cell 2's PCCPCH RSCP value.

After step 15 the UE shall stop measurement activities pertaining to periodic reporting of cell 2's PCCPCH RSCP, no MEASUREMENT REPORT messages shall be detectable by the SS on the uplink DCCH.

After step 17, the UE shall transmit a MEASUREMENT REPORT message to the SS as specified in the MEASUREMENT CONTROL message received in step 17.

After step 21 the UE shall re-select to cell 2 and initiate a cell update procedure. SS shall receive a CELL UPDATE message on the uplink CCCH of cell 2, with the "cell update cause" IE stated as "cell re-selection".

After step 23, the UE shall transmit UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH AM RLC.

After step 25, UE shall not send MEASUREMENT REPORT message with “measurement identity” = ‘12’.

After step 25a the UE shall report cell 3's PCCPCH RSCP value by transmitting MEASUREMENT REPORT messages.

After step 27, UE shall send MEASUREMENT REPORT message with “measurement identity” = ‘1’.

### 8.4.1.8 Measurement Control and Report: Inter-frequency measurement for transition from CELL_FACH to CELL_DCH state (FDD)

#### 8.4.1.8.1 Definition

#### 8.4.1.8.2 Conformance requirement

Upon transition from CELL_FACH to CELL_DCH state, the UE shall:

1> if inter-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:

2> if the cell in which the UE transited from CELL_FACH state is included in the active set for the CELL_DCH state, the UE shall:

3> resume the measurement reporting.

2> otherwise, the UE shall:

3> not resume the measurement reporting. The measurement shall be restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

…

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" is included, the UE shall for each transmission gap pattern sequence perform the following consistency checks:

1> if UE, according to its measurement capabilities, and for the measurement purpose indicated by IE "TGMP", requires UL compressed mode for measurements on any of the cells to be measured according to UE variable CELL_INFO_LIST, and CHOICE 'UL/DL mode' indicates 'DL only':

2> set the variable INVALID_CONFIGURATION to TRUE.

1> if UE, according to its measurement capabilities, and for the measurement purpose indicated by IE "TGMP", requires DL compressed mode for measurements on any of the cells to be measured according to UE variable CELL_INFO_LIST, and CHOICE 'UL/DL mode' indicates 'UL only':

2> set the variable INVALID_CONFIGURATION to TRUE.

1> if UE already has an active transmission gap pattern sequence that, according to IE "TGMP", has the same measurement purpose, and both patterns will be active after the new configuration has been taken into use:

2> set the variable INVALID_CONFIGURATION to TRUE.

If variable INVALID_CONFIGURATION has value FALSE after UE has performed the checks above, the UE shall:

1> if pattern sequence corresponding to IE "TGPSI" is already active (according to "TGPS Status Flag"):

2> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time" received in this message, when the new configuration received in this message is taken into use.

1> update each pattern sequence to the variable TGPS_IDENTITY according to the IE "TGPSI";

1> update into the variable TGPS_IDENTITY the configuration information defined by IE group" transmission gap pattern sequence configuration parameters ";

1> after the new configuration has been taken into use:

2> activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate" at the time indicated by IE "TGCFN"; and

2> begin the inter-frequency corresponding to the pattern sequence measurement purpose of each activated pattern sequence;

2> if the new configuration is taken into use at the same CFN as indicated by IE "TGCFN":

3> start the concerned pattern sequence immediately at that CFN.

1> monitor if the parallel transmission gap pattern sequences create an illegal overlap, and in case of overlap, take actions as specified in TS 25.331 subclause 8.2.11.2.

Reference

3GPP TS 25.331 clause 8.4.1.7.2, 8.6.6.15

### 8.4.1.8.3 Test Purpose

1. To confirm that the UE resumes inter-frequency measurements and reporting stored for which the measurement control information has IE "measurement validity" assigned to the value "CELL_DCH", after it re-enters CELL_DCH state from CELL_FACH state.

2. To confirm that the UE resumes inter-frequency measurement and reporting activities after it has received a MEASUREMENT CONTROL message specifying that a stored compressed mode pattern sequence be re-activated.

### 8.4.1.8.4 Method of test

Initial Condition

System Simulator: 2 cells – Cell 1, cell 5 are active.

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108.

Related ICS/IXIT statements

- Compressed mode required yes/no

Table 8.4.1.8-1 illustrates the downlink power to be applied for the 2 cells in this test.

**Table 8.4.1.8-1**

| Para-meter | Unit | Cell 1 | Cell 5 |
|---|---|---|---|
| UTRA RF Channel Number | | Mid Range Test Frequency | High Range Test Frequency |
| CPICH Ec | dBm/3.84 MHz | -60 | -75 |

The UE is in CELL_DCH state in cell 1 (step 1). SS transmits MEASUREMENT CONTROL message to add cell 5 into the IE "inter-frequency cell info" (step 2). If UE requires compressed mode, SS checks that no MEASUREMENT REPORT messages are detected on the uplink DCCH after it has transmitted the MEASUREMENT CONTROL message. (step 3). SS checks that the UE sends a MEASUREMENT REPORT message on the uplink DCCH only if UE does not require compressed mode.

SS sends a PHYSICAL CHANNEL RECONFIGURATION message on the downlink DCCH to move the UE to CELL_FACH state (step 4). The UE shall reconfigure itself to receive and transmit using the common physical channels assigned, and send PHYSICAL CHANNEL RECONFIGURATION COMPLETE on the uplink DCCH (step 5). SS modifies the content of Master Information Block and System Information Block type 12 messages, including cell 5 in the IE "inter-frequency cell info" (step 6) and providing FACH Measurement Occasion Info. SS transmits SYSTEM INFORMATION CHANGE INDICATION message to UE. Once again, SS verifies that the UE does not transmit MEASUREMENT REPORT messages in the uplink direction (step 7).

SS sends PHYSICAL CHANNEL RECONFIGURATION message, and configures dedicated physical. If UE requires compressed mode, in this message, SS commands the UE to start applying compressed mode mechanism for DPCH. The UE shall move to CELL_DCH state and then reply with PHYSICAL CHANNEL RECONFIGURATION COMPLETE message (step 9). The UE shall transmit 1 MEASUREMENT REPORT message, containing the selected frequency quality estimate (in this case CPICH RSCP) of cell 5. The UE shall also report the triggering of event '2c' in the IE "Event results" of MEASUREMENT REPORT message (step 10).

SS transmits a MEASUREMENT CONTROL message on the downlink DCCH using AM-RLC (step 11). The UE shall transmit MEASUREMENT REPORT messages at 2 seconds interval (step 12).

If UE requires compressed mode, SS transmits a PHYSICAL CHANNEL RECONFIGURATION message and deactivates the compressed mode pattern sequence with "TGPSI" IE set to 1 (step 13). The UE shall respond by sending PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and also either stop the periodic reporting activities or continue the periodic measurement reporting without any measured results (step 14).

Following this if UE requires compressed mode, SS sends a MEASUREMENT CONTROL message and re-activates the compressed mode pattern sequence by using the "DPCH compressed mode status info" IE (step 15). SS confirms that the UE has reconfigured itself to start measurement reporting with measured results included again. The SS shall receive MEASUREMENT REPORT messages continuously at 2 seconds interval (step 16). The SS then sends a MEASUREMENT CONTROL ordering the UE to release the measurement corresponding to identity 14, and to stop compressed mode (step 17). At reception of that message, the UE shall stop compressed mode and delete the measurement corresponding to that identity (step 18). The SS then transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE to order the UE to start compressed mode once again (step 19). The UE answers with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message, and starts compressed mode (step 20). SS checks then that it does not receive any MEASUREMENT REPORT message from the UE after that point (step 21).

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_DCH state of cell 1. |
| 2 | ← | | MEASUREMENT CONTROL | SS specifies inter-frequency measurement and reporting parameters for cell 5, with "measurement validity" IE present and "UE state" set to "CELL_DCH". |
| 3 | → | | MEASUREMENT REPORT | If compressed mode is not required (refer ICS/IXIT), SS checks that UE transmit this message, or else SS checks that no MEASUREMENT REPORT messages are detected on the uplink DCCH. |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS moves the UE to CELL_FACH state. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall move to CELL_FACH state. |
| 6 | ← | | Master Information Block, Scheduling Block 1 System Information Block type 12 | SS modifies MIB and SIB 12 including cell 5 in "inter-frequency cell info", and providing FACH Measurement occasion info. |
| 7 | ← | | SYSTEM INFORMATION CHANGE INDICATION | After SS transmits this message, SS confirms that there are no transmissions of MEASUREMENT REPORT message in the uplink direction. |
| 8 | ← | | PHYSICAL CHANNEL RECONFIGURATION | See specific message content below. |
| 9 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 10 | → | | MEASUREMENT REPORT | UE shall resume inter-frequency measurement task for cell 5 and report the measured CPICH RSCP value for cell 5. (See Specific Message Contents) |
| 11 | ← | | MEASUREMENT CONTROL | SS changes the reporting criteria for cell 5 to 'periodic reporting' |
| 12 | → | | MEASUREMENT REPORT | UE shall begin to transmit this message at 2 seconds interval. If compresed mode is not required (refer ICS/IXIT), the test ends here. |
| 13 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS deactivates the currently used pattern sequence for compressed mode operation. |
| 14 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE stays in CELL_DCH state. SS verifies that either no MEASUREMENT REPORT messages are received, or MEASUREMENT REPORTS are received every 2s with IE “Measured results” not included. |
| 15 | ← | | MEASUREMENT CONTROL | SS activates the pattern sequence stored by the UE. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 16 | → | | MEASUREMENT REPORT | SS checks that MEASURE-MENT REPORT messages with IE “Measured results” included are received at 2 seconds interval. |
| 17 | ← | | MEASUREMENT CONTROL | SS orders the UE to release the measurement with identity 14, and to stop compressed mode. |
| 18 | | | | SS waits for 5s to check that UE does not send MEASUREMENT REPORT. This verifies that the UE has stopped compressed mode. |
| 19 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS orders the UE to start compressed mode again. |
| 20 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE transmits the response message and starts compressed mode |
| 21 | | | | SS wait for 5s to check that the UE does not send any MEASUREMENT REPORT. |

Specific Message Content

Unless explicitly stated, the messages below shall be used.

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 14 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 5 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN of the downlink frequency for cell 5 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 5 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | Not present |
| - Measurement validity | |
| - UE State | CELL_DCH |
| - Inter-frequency set update | |
| -UE autonomous update | On with no reporting |
| - Non autonomous update mode | Not Present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2c |
| - Threshold used frequency | Not Present |
| - W used frequency | Not Present |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 10 ms |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -85 dBm |
| - W non-used frequency | 0.0 |
| DPCH compressed mode status info | Not Present |

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the same message sub-type found in [9] TS 34.108 clause 9 titled "(Packet to CELL_FACH from CELL_DCH in PS)".

| Information Element | Value/Remark | Version |
|---|---|---|
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Scrambling code for cell 1. Ref. to the Default setting in TS34.108 clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | |
| - PDSCH code mapping | Not Present | |
| - Downlink DPCH info for each RL | Not Present | |
| - SCCPCH Information for FACH | Not Present | R99 and Rel-4 only |

Master Information Block (Step 6)

| Information Element | Value/Remark |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |
| SB 1 Cell Value tag | Set to (Current SB1 value tag + 1) |

Scheduling Block 1 (Step 6)

| Information Element | Value/remark |
|---|---|
| SIB 12 Cell Value tag | Set to (Current SIB 12 value tag + 1) |

System Information Block type 12 (Step 6)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | TRUE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |
| Measurement control system information | |
| -Use of HCS | Not used |
| -Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | Not Present |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cells removal | Not Present |
| - New inter-frequency info list | |
| - Inter-frequency cell id | Set to id of cell 5 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Refer to clause titled "Default settings for cell No.5 (FDD)" in clause 6.1.4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection info | Not Present – use default values |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

PHYSICAL CHANNEL RECONFIGURATION (Step 8)

Use the same message sub-type found in [9] TS 34.108 clause 9 titled ("Packet to CELL_DCH from CELL_FACH in PS")

| Information Element | Value/Remark | Version |
|---|---|---|
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE *mode* | FDD | |
| - Downlink PDSCH information | Not Present | |
| Downlink information common for all radio links | | |
| - CHOICE mode | FDD | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Activate | |
| - TGCFN | (Current CFN+(256 – TTI/10msec)) mod 256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | SF/2 (or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | SF/2 (or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |

MEASUREMENT REPORT (Step 3)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 14 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-frequency measured results list" |
| - Inter-frequency measurement results | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_5$ |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if set to the same code for cell 5 |
| - CPICH Ec/No | Check to see if it is absent |
| - CPICH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Event Results | |
| - CHOICE event result | Inter-frequency event results |
| - Inter-frequency event identity | Check to see if it's set to '2c' |
| - Inter-frequency cells | |
| - Frequency Info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_5$ |
| - Non frequency related measurement event results | |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if set to the same code for cell 5 |

MEASUREMENT CONTROL (Step 11)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 14 |
| Measurement Command | Set up |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 5 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN of the downlink frequency for cell 5 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 5 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | |
| - Inter-frequency cell id | 5 |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Measurement validity | Not Present |
| - Inter-frequency set update | Not Present |
| - CHOICE report criteria | Periodic reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 2000 milliseconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 12, 16)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 14 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-frequency measured results list" |
| - Inter-frequency measurement results | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_5$ |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if set to the same code for cell 5 |
| - CPICH Ec/No | Check to see if it is absent |
| - CPICH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| - CFN-SFN observed time difference | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Event Results | Check to see if it is absent |

PHYSICAL CHANNEL RECONFIGURATION (Step 13)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | (256+CFN-(CFN MOD 8 + 8))MOD 256 | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE *channel requirement* | Not Present | |
| CHOICE *mode* | FDD | |
| >Downlink PDSCH information | Not Present | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - CHOICE mode | FDD | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not Present | |
| - Transmission gap pattern sequence configuration parameters | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information for each radio link | Not Present | |

MEASUREMENT CONTROL (Step 15)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 14 |
| Measurement Command | Modify |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| CHOICE measurement type | Not Present |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN+(256 – TTI/10msec)) mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Status Flag | Activate |
| - TGCFN | (Current CFN+(256 – TTI/10msec)) mod 256 |

MEASUREMENT CONTROL (Step 17)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 14 |
| Measurement Command | Release |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| CHOICE measurement type | Not Present |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN+(256 – TTI/10msec)) mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Flag | Deactivate |
| - TGCFN | Not present |

PHYSICAL CHANNEL RECONFIGURATION (Step 19)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time<br>New U-RNTI | Not Present<br>Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient<br>CN information info<br>URA identity<br>Downlink counter synchronisation info<br>Frequency info<br>Maximum allowed UL TX power | Not Present<br>Not Present<br>Not Present<br>Not Present<br>Not Present<br>Not Present | |
| CHOICE *channel requirement* | Not Present | |
| CHOICE *mode* | FDD | |
| - Downlink PDSCH information | Not Present | |
| Downlink information common for all radio links<br>- Downlink DPCH info common for all RL<br>- CHOICE mode<br>- DPCH compressed mode info<br>- TGPSI<br>- TGPS Status Flag<br>- TGCFN<br>- Transmission gap pattern sequence configuration parameters<br>- TGMP<br>- TGPRC<br>- TGSN<br>- TGL1<br>- TGL2<br>- TGD<br>- TGPL1<br>- TGPL2<br>- RPP<br>- ITP<br>- CHOICE UL/DL Mode<br>- Downlink compressed mode method<br>- Uplink compressed mode method<br>- Downlink frame type<br>- DeltaSIR1<br>- DeltaSIRAfter1<br>- DeltaSIR2<br>- DeltaSIRAfter2<br>- N identify abort<br>- T Reconfirm abort<br>- TX Diversity mode<br>- SSDT information<br>- Default DPCH Offset Value | <br>Not Present<br>FDD<br><br>1<br>Activate<br>(Current CFN+(256 – TTI/10msec)) mod 256<br><br><br>FDD Measurement<br>Infinity<br>4<br>7<br>Not Present<br>undefined<br>3<br>Not Present<br><br>Mode 0<br>Mode 0<br>UL and DL, UL only or DL only (depending on the UE capability)<br>SF/2 (or not sent, depending on the UE capability)<br>SF/2 (or not sent, depending on the UE capability)<br>B<br>20 (2.0)<br>10 (1.0)<br>Not Present<br>Not Present<br>Not Present<br>Not Present<br>Not Present<br>Not Present<br><br>Not Present | <br><br><br><br><br><br><br><br><br><br><br><br><br><br><br><br>R99 and REL-4 only<br><br><br><br><br><br><br><br><br><br><br><br><br><br><br><br><br>R99 and Rel-4 only |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to scrambling code of cell 1 | |
| - Cell ID | Not present | |
| - PDSCH with SHO DCH info | Not present | |
| - PDSCH code mapping | Not present | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |

| Information Element | Value/Remark | Version |
|---|---|---|
| - Secondary CPICH info | Not present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Same as the code currently allocated to the UE | |
| - Scrambling code change | Code change | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not present | |

#### 8.4.1.8.5 Test Requirement

After step 2, if UE requires compressed mode the UE shall not send any MEASUREMENT REPORT messages on the uplink DCCH of cell 1. If UE do not require compressed mode, the UE shall send a MEASUREMENT REPORT message on the uplink DCCH of cell 1.

After step 4 and 8, UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 8, the UE shall start compressed mode using the method specified in the PHYSICAL CHANNEL RECONFIGURATION message sent in step 8.

After step 9 the UE shall transmit a MEASUREMENT REPORT message, containing the IE "measured results" reporting cell 5's CPICH RSCP. The UE shall also report the triggering of event '2c' by including IE "Event results" in the MEASUREMENT REPORT message.

After step 11 the UE shall send MEASUREMENT REPORT messages, containing cell 5's CPICH RSCP measured value in IE "Measured results" at 2 seconds interval. The "Event results" IE shall be omitted in these messages.

If UE requires compressed mode, after step 14, the UE shall either not transmit any MEASUREMENT REPORT messages at all, or continue to transmit MEASUREMENT REPORT messages every 2s, but without including IE “Measured results”.

If UE requires compressed mode, after step 15, the UE shall start compressed mode and resume the transmission of MEASUREMENT REPORT messages with identical contents as in those received after step 11.

After step 17, the UE shall deactivate compressed mode.

After step 20, the UE shall not transmit any MEASUREMENT REPORT message to SS.

### 8.4.1.8A Measurement Control and Report: Inter-frequency measurement for transition from CELL_FACH to CELL_DCH state (TDD)

#### 8.4.1.8A.1 Definition

#### 8.4.1.8A.2 Conformance requirement

Upon transition from CELL_FACH to CELL_DCH state, the UE shall:

if inter-frequency measurements applicable to CELL_DCH state are stored in the variable MEASUREMENT_IDENTITY:

2> if the cell in which the UE transited from CELL_FACH state is included in the active set for the CELL_DCH state, the UE shall:

3> resume the measurement reporting.

2> otherwise, the UE shall:

3> not resume the measurement reporting. The measurement shall be restarted when a MEASUREMENT CONTROL message is received with the corresponding measurement identity.

Reference

3GPP TS 25.331 clause 8.4.1.7.2

### 8.4.1.8A.3 Test Purpose

1. To confirm that the UE resumes inter-frequency measurements and reporting stored for which the measurement control information has IE "measurement validity" assigned to the value "CELL_DCH", after it re-enters CELL_DCH state from CELL_FACH state.

### 8.4.1.8A.4 Method of test

Initial Condition

System Simulator: 2 cells – Cells 1 and cell 5 are active.

UE: PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108.

Test Procedure

Table 8.4.1.8A-1 illustrates the downlink power to be applied for the 2 cells in this test.

**Table 8.4.1.8A-1**

| Para-meter | Unit | Cell 1 | Cell 5 |
|---|---|---|---|
| UTRA RF Channel Number | | Mid Range Test Frequency | High Range Test Frequency |
| PCCPCH RSCP | dBm | -60 | -75 |

Test procedure when the initial condition is that the UE is connected to the PS domain:

The UE is in CELL_DCH state in cell 1 (step 1). SS transmits MEASUREMENT CONTROL message to add cell 5 into the IE "inter-frequency cell info" (step 2). SS checks that UE transmit this message, or else SS checks that the UE sends a MEASUREMENT REPORT messages on the uplink DCCH (step 3).

SS sends a PHYSICAL CHANNEL RECONFIGURATION message on the downlink DCCH to move the UE to CELL_FACH state (step 4). The UE shall reconfigure itself to receive and transmit using the common physical channels assigned, and send PHYSICAL CHANNEL RECONFIGURATION COMPLETE on the uplink DCCH (step 5). SS modifies the content of Master Information Block and System Information Block type 12 messages, including cell 5 in the IE "inter-frequency cell info" (step 6) and providing FACH Measurement Occasion Info. SS transmits SYSTEM INFORMATION CHANGE INDICATION message to UE. Once again, SS verifies that the UE does not transmit MEASUREMENT REPORT messages in the uplink direction (step 7).

SS sends PHYSICAL CHANNEL RECONFIGURATION message, and configures dedicated physical (step 8). The UE shall move to CELL_DCH state and then reply with PHYSICAL CHANNEL RECONFIGURATION COMPLETE message (step 9). The UE shall transmit 1 MEASUREMENT REPORT message, containing the selected frequency quality estimate (in this case PCCPCH RSCP) of cell 5. The UE shall also report the triggering of event '2c' in the IE "Event results" of MEASUREMENT REPORT message (step 10).

SS transmits a MEASUREMENT CONTROL message on the downlink DCCH using AM-RLC (step 10). The UE shall transmit MEASUREMENT REPORT messages at 2 seconds interval (step 12).

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The initial state of UE is in CELL_DCH state of cell 1. |
| 2 | ← | | MEASUREMENT CONTROL | SS specifies inter-frequency measurement and reporting parameters for cell 5, with "measurement validity" IE present and "UE state" set to "CELL_DCH". |
| 3 | → | | MEASUREMENT REPORT | SS checks that UE transmit this message. |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS moves the UE to CELL_FACH state. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall move to CELL_FACH state. |
| 6 | ← | | Master Information Block<br>System Information Block type 12 | SS modifies MIB and SIB 12 including cell 5 in the list of cells in IE "inter-frequency cell info", and providing FACH Measurement occasion info. |
| 7 | ← | | SYSTEM INFORMATION CHANGE INDICATION | After SS transmits this message, SS confirms that there are no transmissions of MEASUREMENT REPORT message in the uplink direction. |
| 8 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS moves the UE to CELL_DCH state. |
| 9 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE shall move to CELL_DCH state. |
| 10 | → | | MEASUREMENT REPORT | UE shall resume inter-frequency measurement task for cell 5 and report the measured PCCPCH RSCP value for cell 5. |
| 11 | ← | | MEASUREMENT CONTROL | SS changes the reporting criteria for cell 5 to 'periodic reporting' |
| 12 | → | | MEASUREMENT REPORT | UE shall begin to transmit this message at 2 seconds interval. |

Specific Message Content

Unless explicitely stated, the messages below shall be used for both the CS case and the PS case.

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 14 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 5 |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN (Nt) | UARFCN of the frequency for cell 5 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | TDD |
| - Primary CCPCH Info | Set to same code as used for cell 5 |
| - Cells for measurement | Not Present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | PCCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | |
| - UE State | CELL_DCH |
| - Inter-frequency set update | |
| -UE autonomous update | On with no reporting |
| - Non autonomous update mode | Not Present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2c |
| - Threshold used frequency | Not Present |
| - W used frequency | Not Present |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 10 seconds |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -85 dBm |
| - W non-used frequency | 0.0 |
| DPCH compressed mode status info | Not Present |

PHYSICAL CHANNEL RECONFIGURATION (Step 4)

Use the same message sub-type found in TS 34.108 clause 9 titled "(Packet to CELL_FACH from CELL_DCH in PS)".

| Information Element | Value/Remark | Version |
|---|---|---|
| - Downlink information for each radio link | | |
| - Choice mode | TDD | |
| - Primary CCPCH info | For cell 1. Ref. to the Default setting in TS34.108 clause 6.1 (TDD) | |
| - PDSCH with SHO DCH info | Not Present | |
| - PDSCH code mapping | Not Present | |
| - Downlink DPCH info for each RL | Not Present | |
| - SCCPCH Information for FACH | Not Present | R99 and Rel-4 only |

Master Information Block (Step 6)

| Information Element | Value/Remark |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |

System Information Block type 12 (Step 6)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | FALSE |
| - Inter-frequency TDD measurement indicator | TRUE |
| - Inter-RAT measurement indicators | Not Present |
| Measurement control system information | |
| -Use of HCS | Not used |
| - Intra-frequency measurement system information | Not Present |
| - Inter-frequency measurement system information | |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cells removal | Not Present |
| - New inter-frequency info list | |
| - Inter-frequency cell id | Set to id of cell 5 |
| - Cell info | |
| - Cell individual offset | Not Present |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | TDD |
| - Primary CCPCH Info | Refer to clause titled "Default settings for cell No.5 (TDD)" in clause 6.1.4 |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Cell selection and Re-selection info | Not Present – use default values |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

PHYSICAL CHANNEL RECONFIGURATION (Step 8 only for the PS case)

UE will use the same message sub-type found in [9] TS 34.108 clause 9, which is entitled "(Packet to CELL_DCH from CELL_FACH in PS)".

MEASUREMENT REPORT (Step 3, 10)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 14 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-frequency measured results list" |
| - Inter-frequency measurement results | |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN | Check to see if set to the UARFCN of the frequency for cell 5 |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - SFN-SFN observed time difference | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 5 |
| - Timeslot ISCP | Check to see if it is absent |
| - Proposed TGSN | Check to see if it is absent |
| - Primary CCPCH Info | Check to see if set to the same code for cell 5 |
| - PCCPCH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Event Results | |
| - CHOICE event result | Inter-frequency event results |
| - Inter-frequency event identity | Check to see if it's set to '2c' |
| - Inter-frequency cells | |
| - Frequency Info | |
| - CHOICE mode | TDD |
| - UARFCN | Check to see if set to the UARFCN of the frequency for cell 5 |
| - Non frequency related measurement event results | |
| - Primary CCPCH Info | Check to see if set to the same for cell 5 |

MEASUREMENT CONTROL (Step 11)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 14 |
| Measurement Command | Set up |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | |
| - Inter-frequency cell id | 5 |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN uplink (Nt) | UARFCN of the frequency for cell 5 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | TDD |
| - Primary CCPCH Info | Set to same as used for cell 5 |
| - Cells for measurement | |
| - Inter-frequency cell id | 5 |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | PCCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Measurement validity | Not Present |
| - Inter-frequency set update | Not Present |
| - CHOICE report criteria | Periodic reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 2000 milliseconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 12)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 14 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Inter-frequency measured results list" |
| - Inter-frequency measurement results | |
| - Frequency info | |
| - UARFCN | Check to see if set to the UARFCN of the frequency for cell 5 |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 5 |
| - Timeslot ISCP | Check to see if it is absent |
| - Proposed TGSN | Check to see if it is absent |
| - Primary CCPCH Info | Check to see if set to the same for cell 5 |
| - PCCPCH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| - CFN-SFN observed time difference | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Event Results | Check to see if it is absent |

#### 8.4.1.8A.5 Test Requirement

After step 2,. UE shall send a MEASUREMENT REPORT message on the uplink DCCH of cell 1.

After step 4 and 8, UE shall transmit PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC.

After step 9 the UE shall transmit a MEASUREMENT REPORT message, containing the IE "measured results" reporting cell 5's PCCPCH RSCP. The UE shall also report the triggering of event '2c' by including IE "Event results" in the MEASUREMENT REPORT message.

After step 11 the UE shall send MEASUREMENT REPORT messages, containing cell 5's PCCPCH RSCP measured value in IE "Measured results" at 2 seconds interval. The "Event results" IE shall be omitted in these messages.

### 8.4.1.9 Measurement Control and Report: Unsupported measurement in the UE

#### 8.4.1.9.1 Definition

#### 8.4.1.9.2 Conformance requirement

If UTRAN instructs the UE to perform a measurement that is not supported by the UE, the UE shall:

1> retain the measurement configuration that was valid before the MEASUREMENT CONTROL message was received;

1> set the IE "RRC transaction identifier" in the MEASUREMENT CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the MEASUREMENT CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS; and

1> clear that entry.

1> set the cause value in IE "failure cause" to "unsupported measurement";

1> submit the MEASUREMENT CONTROL FAILURE message to lower layers for transmission on the DCCH using AM RLC;

1> continue with any ongoing processes and procedures as if the invalid MEASUREMENT CONTROL message has not been received;

1> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.4.1.4

### 8.4.1.9.3 Test purpose

1. To confirm that the UE transmits a MEASUREMENT CONTROL FAILURE message, with the value "unsupported measurement" in IE "failure cause" when the SS instructs the UE to perform an unsupported measurement by sending a MEASUREMENT CONTROL message. To confirm that the UE retains its existing valid measurement configuration, after receiving a MEASUREMENT CONTROL message containing an unsupported measurement.

### 8.4.1.9.4 Method of test

Initial Condition

System Simulator: 1cell
UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

[Editor's note: It is assumed in this test that the UE under test does not possess any inter-RAT measurement capability. The mandatory type(s) of measurement capability that shall be implemented by the UE is to be discussed]

Test Procedure

The UE is in the CELL_DCH state. SS sends MEASUREMENT CONTROL message to command the UE to perform internal measurement and reporting for UE transmitted power. The UE shall transmit MEASUREMENT REPORT messages on DCCH at 1 second interval. The SS transmits a MEASUREMENT CONTROL message to configure inter-RAT measurements. The UE hall transmit a MEASUREMENT CONTROL FAILURE message on the uplink DCCH using AM RLC. SS verifies that the UE continues to transmit MEASURMENT REPORT messages on uplink DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in the CELL_DCH state. |
| 2 | ← | | MEASUREMENT CONTROL | UE internal measurement and reporting is requested. |
| 3 | → | | MEASUREMENT REPORT | Contains estimated reading for UE transmitted power. |
| 4 | ← | | MEASUREMENT CONTROL | Inter-RAT measurements are requested in this message |
| 5 | → | | MEASUREMENT CONTROL FAILURE | The value "unsupported measurement" is set in IE "failure cause". |
| 6 | → | | MEASUREMENT REPORT | SS verifies that UE continue to send this message on uplink DCCH. |

Specific Message Content

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| - CHOICE mode | FDD |
| - Measurement quantity | UE Transmitted Power |
| - Filter Coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | TRUE |
| - CHOICE mode | FDD |
| - UE Rx-Tx time difference | FALSE |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 1000 msec |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 3 and Step 6)

| Information Element | Value/remark |
|---|---|
| Measurement Identity number | Check to see if it's set to '1' |
| Measured Results | |
| - CHOICE measurement | Check to see if it's set to "UE internal measured results" |
| - CHOICE mode | Check to see if it's set to "FDD" |
| - UE Transmitted Power | Check to see if the reported power is compatible with RF class |
| - UE Rx-Tx report entries | Check to see if it is absent |
| Measured Results on RACH | Check to see if it is absent |
| Additional Measured results | Check to see if it is absent |
| Event results | Check to see if it is absent |

MEASUREMENT CONTROL (Step 4)

| Information Element | Value/remark | Version |
|---|---|---|
| RRC transaction identifier | Select an arbitrary an integer between 0 and 3 | |
| Measurement Identity | 2 | |
| Measurement Command | Setup | |
| Measurement Reporting Mode | | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC | |
| Additional measurements list | Not Present | |
| CHOICE measurement type | Inter-RAT measurement | |
| - Inter-RAT cell info list | | |
| - CHOICE inter-RAT cell removal | Remove no inter-RAT cells | |
| - New inter-RAT cells | | |
| - Inter-RAT cell id | 1 | |
| - CHOICE *Radio Access Technology* | GSM | |
| - Cell individual offset | 0 | |
| - Cell selection and re-selection info | Not Present | |
| - BSIC | Set to the BSIC code of cell 2 | |
| - BSIC ARFCN | Set to the ARFCN assigned to cell 2 | |
| - Output power | Not Present | |
| - Cells for measurement | | |
| - Inter-RAT cell id | 2 | |
| - Inter-RAT measurement quantity | | |
| - CHOICE system | GSM | |
| - Measurement quantity | GSM Carrier RSSI | |
| - Filter Coefficient | 0 | |
| - BSIC verification required | Not required | |
| - Inter-RAT reporting quantity | | |
| - UTRAN estimate quantity | FALSE | |
| - CHOICE system | GSM | |
| - Pathloss | FALSE | |
| - Observed time difference to GSM cell | FALSE | R99 and Rel-4 only |
| Reporting indicator | | |
| - GSM Carrier RSSI | TRUE | |
| - Reporting cell status | Not Present | |
| - CHOICE report criteria | No reporting | |
| DPCH compressed mode status info | Not Present | |

MEASUREMENT CONTROL FAILURE (Step 5)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check if it is set to the same value of the same IE in the MEASUREMENT CONTROL message sent in Step 4. |
| Failure cause | Check if it is set to "Unsupported measurement" |

### 8.4.1.9.5 Test requirement

After step 2 the UE shall transmit a MEASUREMENT REPORT messages at 1 second interval. In these messages, the IE "CHOICE measurement" shall be set to "UE internal measured results", and it shall contain the measured UL transmitted power reading in IE "UE Transmitted Power".

After step 4 the UE shall transmit a MEASUREMENT CONTROL FAILURE message. In this message, the value "unsupported measurement" shall be specified in IE "failure cause".

After step 5 the UE shall continue to transmit MEASUREMENT REPORT messages on the uplink DCCH, with the contents of the messages identical to that received by SS after step 2.

## 8.4.1.10 Measurement Control and Report: Failure (Invalid Message Reception)

### 8.4.1.10.1 Definition

### 8.4.1.10.2 Conformance requirement

If the MEASUREMENT CONTROL message contains a protocol error causing the variable PROTOCOL_ERROR_REJECT to be set to TRUE according to TS 25.331 clause 9, the UE shall perform procedure specific error handling as follows. The UE shall:

1> set the IE "RRC transaction identifier" in the MEASUREMENT CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the MEASUREMENT CONTROL message in the table "Rejected transactions" in the variable TRANSACTIONS; and

1> clear that entry.

1> set the IE "failure cause" to the cause value "protocol error";

1> include the IE "Protocol error information" with contents set to the value of the variable PROTOCOL_ERROR_INFORMATION;

1> submit the MEASUREMENT CONTROL FAILURE message to lower layers for transmission on the DCCH using AM RLC;

1> continue with any ongoing processes and procedures as if the invalid MEASUREMENT CONTROL message has not been received;

1> and the procedure ends.

#### Reference

3GPP TS 25.331 clauses 8.4.1.5 and 9.2

### 8.4.1.10.3 Test Purpose

1. To confirm that the UE continues its ongoing processes and procedures after it has received an invalid MEASUREMENT CONTROL message.

2. To confirm that the UE transmits MEASUREMENT CONTROL FAILURE message, after it has received an invalid MEASUREMENT CONTROL message.

### 8.4.1.10.4 Method of test

#### Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

#### Test Procedure

The UE is initially brought to CELL_DCH. SS transmits a MEASUREMENT CONTROL message to the UE, commanding it to start transmitting report messages for the reporting quantity "UE Transmitted Power". SS waits for the UE to transmit MEASUREMENT RERORT message on the uplink DCCH. After the MEASUREMENT REPORT message is received, SS transmits an invalid MEASUREMENT CONTROL message again. The UE shall reply with MEASURMENT CONTROL FAILURE message as it has detected a protocol error. It shall continue to report its UL transmission power level using MEASUREMENT REPORT messages.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is CELL_DCH state in cell 1. |
| 2 | ← | | MEASUREMENT CONTROL | SS transmits this message on downlink DCCH to instruct UE to start reporting the quantity "UE transmitted power". |
| 3 | → | | MEASUREMENT REPORT | UE shall send this message periodically at 32 seconds interval |
| 4 | ← | | MEASURMENT CONTROL | See message content. |
| 5 | → | | MEASUREMENT CONTROL FAILURE | UE shall continue its current measurement and reporting processes and procedures after sending this message. |
| 6 | → | | MEASUREMENT REPORT | UE shall continue to transmit this message to the SS at 32 seconds interval. |

Specific Message Content

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| - Measurement quantity | UE Transmitted Power |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | TRUE |
| - UE Rx-Tx time difference | FALSE |
| CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 32 seconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 3 and Step 6)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 3 |
| Measured Results | |
| CHOICE measurement | Check to see if set to "UE internal measurement results" |
| - CHOICE mode | Check to see if it's set to "FDD" |
| - UE Transmitted Power | Check to see if the reported power is compatible with RF class |
| - UE Rx-Tx report entries | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event Results | Check to see if this IE is absent |

MEASUREMENT CONTROL (Step 4)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Critical extensions | 'FF'H |

MEASUREMENT CONTROL FAILURE (Step 5)

| Information Element | Value/remark |
|---|---|
| Failure cause<br>Protocol error information | Check to see if set to "protocol error"<br>Check to see if set to " Message extension not comprehended " |

#### 8.4.1.10.5 Test Requirement

After step 4 the UE shall transmit MEASUREMENT CONTROL FAILURE message, stating the IE "failure cause" as "protocol error" and IE "protocol error information" as "Message extension not comprehended".

After step 5 the UE shall continue to send MEASUREMENT REPORT, with the measurement identity number set to 3 and "measured results" IE containing measured readings of UE Tx power, at 32 seconds interval.

### 8.4.1.11 Void

### 8.4.1.12 Void

### 8.4.1.13 Void

### 8.4.1.14 Measurement Control and Report: Cell forbidden to affect reporting range (FDD)

#### 8.4.1.14.1 Definition

#### 8.4.1.14.2 Conformance requirement

The reporting range affects the reporting events 1A and 1B. The reporting range is defined as a function of all the Primary CPICHs in the active set. If the parameter W is set to 0, the reporting range is defined relative to the best Primary CPICH. However, there could be cases where it is good to forbid a specific Primary CPICH to affect the reporting range. This mechanism could be effective if the operator knows by experience that the quality of a Primary CPICH is very unstable in a specific area and therefore should not affect the reporting of the other Primary CPICHs.

The UE shall ignore that a Primary CPICH is forbidden to affect the reporting range if all of the following conditions are fulfilled:

- the Primary CPICH is included in active set; and
- all cells in active set are defined as Primary CPICHs forbidden to affect the reporting range.

Reference

3GPP TS 25.331 clause 14.1.2.1, 14.1.2.2, clause 14.1.5.4

#### 8.4.1.14.3 Test Purpose

1. To confirm that the UE reports the triggering of event 1A to the SS, if a primary CPICH currently measured by the UE enters the reporting range.
2. To confirm that the UE reports the triggering of event 1B to the SS, if a primary CPICH currently measured by the UE leaves the reporting range.
3. To confirm that the UE use the forbidden cell indicated in the MEASUREMENT CONTROL message to affect the reporting range.
4. To confirm that the UE ignores that a primary CPICH is forbidden to affect the reporting range when (a) the primary CPICH concerned is included in active set and (b) all cells in the active set are defined as primary CPICHs forbidden to affect the reporting range.

8.4.1.14.4 Method of test

Initial Condition

System Simulator: 3 cells – Cell 1, cell 2 and cell 3 are active. SCH_Ec is set to 0 dB relative to CPICH_Ec.

UE: CS-DCCH+DTCH _DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

Table 8.4.1.14-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Column marked "T0" denotes the initial conditions. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.4.1.14-1**

| Parameter | Unit | Cell1 | | | | Cell2 | | | | Cell3 | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| UTRA RF Channel | | Mid Range Test Frequency | | | | Mid Range Test Frequency | | | | Mid Range Test Frequency | | | |
| CPICH Ec | dBm/3.84 MHz | -55 | -55 | -60 | -60 | -60 | -63 | -67 | -67 | -68 | -66 | -66 | -74 |

The UE is initially in CELL_DCH state of cell 1.

SS sends a MEASUREMENT CONTROL message with cell 1, cell 2 and cell 3 listed in IE "intra-frequency cell info list". In this message the IE "CHOICE reporting criteria" is set to "intra-frequency measurement report criteria", with the IE "intra-frequency event identity" set to "1A". The IE "reporting range" is set to 9 dB in the MEASUREMENT CONTROL message. The UE shall send a MEASUREMENT REPORT on the uplink DCCH, which contains the IE "Event results" to report that intra-frequency event 1A is triggered by cell 2.

SS executes the active set update procedure, requesting that cell 2 be added to the active set. The UE shall respond with ACTIVE SET UPDATE COMPLETE message on the uplink DCCH and then include cell 2 into its current active set. SS sends a MEASUREMENT CONTROL message to command that cell 1 in the active set is forbidden to affect the reporting range for event 1A. SS reconfigures the downlink transmission power settings according to values in column "T1" in table 8.4.1.14-1. The UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH to report the triggering of intra-frequency event 1A. In this message, the IE "Events results" shall indicate that intra-frequency event 1A is triggered by cell 3. SS executes the active set update procedure, requesting that cell 3 be added to the active set. The UE shall respond with ACTIVE SET UPDATE COMPLETE message on the uplink DCCH and then include cell 3 into its current active set. SS sends a MEASUREMENT CONTROL message to command that cell 1 in the active set is forbidden to affect the reporting range for event 1B. The IE "reporting range" is set to 7 dB in the MEASUREMENT CONTROL message. SS checks that no measurement report is sent by the UE. SS reconfigures the downlink transmission power settings according to values in column "T2" in table 8.4.1.14-1. SS sends a MEASUREMENT CONTROL message to command that cell 1 in the active set to be removed from the "forbidden to affect the reporting range for event 1B" cell list. SS reconfigures the downlink transmission power settings according to values in column "T3" in table 8.4.1.14-1. The UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH to report the triggering of intra-frequency event 1B. In this message, the IE "Events results" shall indicate that intra-frequency event 1B is triggered by cell 3. SS reconfigures the downlink transmission power settings according to values in column "T2" in table 8.4.1.14-1. SS sends a MEASUREMENT CONTROL message to command that all cells in the active set are forbidden to update the reporting range for event 1B. SS reconfigures the downlink transmission power settings according to values in column "T3" in table 8.4.1.14-1. The UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH to report the triggering of intra-frequency event 1B. In these messages, the IE "Events results" shall indicate that intra-frequency event 1B is triggered by cell 3.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MEASUREMENT CONTROL | UE is initially in CELL_DCH state in cell 1. Cell 1, cell 2 and cell 3 are listed in IE "Intra-frequency cell info list". The IE "CHOICE reporting criteria" is set to "Intra-frequency measurement reporting criteria" and IE "Intra-frequency event identity" is set to "1A", with IE "reporting range" set to 9 dB. |
| 2 | → | | MEASUREMENT REPORT | Measurement made on cell 2 shall trigger event 1A |
| 3 | ← | | ACTIVE SET UPDATE | SS requests UE to add cell 2 into active set. |
| 4 | → | | ACTIVE SET UPDATE COMPLETE | |
| 5 | ← | | MEASUREMENT CONTROL | SS request UE to monitor cell 3 for event '1A'. SS set cell 1 to be forbidden to affect reporting range. IE “Reporting Range” set to 7 dB. |
| 5a | | | | SS configures the downlink power according to column 'T1' of table 8.4.1.14-1. |
| 6 | → | | MEASUREMENT REPORT | Measurement made on cell 3 shall trigger event 1A |
| 6a | ← | | ACTIVE SET UPDATE | SS requests UE to add cell 3 into active set. |
| 6b | → | | ACTIVE SET UPDATE COMPLETE | |
| 7 | ← | | MEASUREMENT CONTROL | SS set cell 1 to be forbidden to affect reporting range for event '1B'. |
| 7a | | | | SS checks that no measurement report is sent by the UE for 20 seconds. |
| 7b | | | | SS configures the downlink power according to column 'T2' of table 8.4.1.14-1. |
| 7c | ← | | MEASUREMENT CONTROL | Cell 1 shall not be forbidden to affect event '1B'. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 7d | | | | SS configures the downlink power according to column 'T3' of table 8.4.1.14-1. |
| 8 | → | | MEASUREMENT REPORT | Measurement made on cell 3 shall trigger event 1B. |
| 8a | | | | SS configures the downlink power according to column 'T2' of table 8.4.1.14-1. |
| 9 | | | Void | |
| 9a | | | Void | |
| 10 | → | | Void | |
| 11 | ← | | MEASUREMENT CONTROL | SS request UE to monitor cell 3 for event '1B'. SS forbids all cells in active list to affect the reporting range. The SS requests UE to report the CPICH RSCP value of the active set cells. |
| 11a | | | | SS configures the downlink power according to column 'T3' of table 8.4.1.14-1. |
| 12 | → | | MEASUREMENT REPORT | |

Specific Message Contents

MEASUREMENT CONTROL (Step 1)

The contents of MEASUREMENT CONTROL message for this test step is identical to the same message found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 1 |
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency |
| - New intra-frequency info list | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 1 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | TRUE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 2 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | TRUE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 3 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell for measurement | |
| - Intra-frequency cell id | 1, 2 and 3 |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | 0 |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |

| Information Element | Value/remark |
|---|---|
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1a |
| - Triggering conditions 1 | Not Present |
| - Triggering conditions 2 | monitored set cells |
| - Reporting range | 18 (9.0 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0 |
| - Hysteresis | 0 (0 dB) |
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | 3 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 0 msec |
| - Amount of reporting | Infinity |
| - Reporting interval | 4000 |
| - Reporting cell status | |
| - CHOICE reported cells | Report cells within monitored set on used frequency |
| - Maximum number of reported cells | 3 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 2)

NOTE 1: Cell measured results for cell 3 may or may not be present (depends upon the capability of the UE and test uncertainties in power level)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | Check to see if set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if set to '1a' |
| - Cell measurement event results | |
| - CHOICE Mode | Check to see if set to 'FDD' |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if set to the same code for cell 2 |

ACTIVE SET UPDATE (Step 3)

The contents of ACTIVE SET UPDATE message for this test step is identical to the same message found in Clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| RRC transaction identifier | 0 | |
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Set to same code as assigned for cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| Radio link removal information | Not Present | |

ACTIVE SET UPDATE COMPLETE (Step 4 and 6b)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check to see if it is set to 0 |

MEASUREMENT CONTROL (Step 5)

The contents of MEASUREMENT CONTROL message for this test step is identical to the same message found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 1 |
| Measurement Identity | 1 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity | Not Present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1a |
| - Triggering conditions 1 | Not Present |
| - Triggering conditions 2 | monitored set cells |
| - Reporting range | 14 (7.0 dB) |
| - Cells forbidden to affect reporting range | |
| - CHOICE Mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as in cell 1 |
| - W | 0 |
| - Hysteresis | 0 (0 dB) |
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | 3 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 0 msec |
| - Amount of reporting | Infinity |
| - Reporting interval | 4000 |
| - Reporting cell status | |
| - CHOICE reported cells | Report cells within monitored set on used frequency |
| - Maximum number of reported cells | 3 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 6)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | Check to see if set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if set to '1a' |
| - Cell measurement event results | |
| - CHOICE Mode | Check to see if set to 'FDD' |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if set to the same code for cell 3 |

ACTIVE SET UPDATE (Step 6a)

The contents of ACTIVE SET UPDATE message for this test step is identical to the same message found in Clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| RRC transaction identifier | 0 | |
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Set to same code as assigned for cell 3 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 2 | |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| Radio link removal information | Not Present | |

MEASUREMENT CONTROL (Step 7)

The contents of MEASUREMENT CONTROL message for this test step is identical to the same message found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 1 |
| Measurement Identity | 1 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity | Not Present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1b |
| - Triggering conditions 1 | Active set cells |
| - Triggering conditions 2 | Not Present |
| - Reporting range | 14 (7.0 dB) |
| - Cells forbidden to affect reporting range | |
| - CHOICE Mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as in cell 1 |
| - W | 0 |
| - Hysteresis | 0 (0 dB) |
| - Time to trigger | 0 msec |
| - Reporting cell status | |
| - CHOICE reported cells | Report cells within monitored set on used frequency |
| - Maximum number of reported cells | 3 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT CONTROL (Step 7c)

The contents of MEASUREMENT CONTROL message for this test step is identical to the same message found in [9] TS 34.108 clause 9 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 1 |
| Measurement Identity | 1 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity | Not Present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1b |
| - Triggering conditions 1 | Active set cells |
| - Triggering conditions 2 | Not Present |
| - Reporting range | 21 (10.5 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0 |
| - Hysteresis | 0 (0 dB) |
| - Time to trigger | 0 msec |
| - Reporting cell status | |
| - CHOICE reported cells | Report cells within monitored set on used frequency |
| - Maximum number of reported cells | 3 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 8)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | Not Present |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | Check to see if set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if set to '1b' |
| - Cell measurement event results | |
| - CHOICE Mode | Check to see if set to 'FDD' |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if set to the same code for cell 3 |

MEASUREMENT CONTROL (Step 11)

The contents of MEASUREMENT CONTROL message for this test step is identical to the same message found in Clause 9 of TS 34.108 with the following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 1 |
| Measurement Identity | 1 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1b |
| - Triggering conditions 1 | Active set cells |
| - Triggering conditions 2 | Not Present |
| - Reporting range | 21 (10.5 dB) |
| - Cells forbidden to affect reporting range | |
| - CHOICE Mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as in cell 1 |
| - CHOICE Mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as in cell 2 |
| - CHOICE Mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the same code as in cell 3 |
| - W | 0 |
| - Hysteresis | 0 (0 dB) |
| - Time to trigger | 0 msec |
| - Reporting cell status | |
| - CHOICE reported cells | Report cells within active set |
| - Maximum number of reported cells | 3 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 12)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if it is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | Check to see if set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if set to '1b' |
| - Cell measurement event results | |
| - CHOICE Mode | Check to see if set to 'FDD' |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if set to the same code for cell 3 |

### 8.4.1.14.5 Test requirement

After step 1, the UE shall send a MEASUREMENT REPORT message on the uplink DCCH. The message shall contain the IE "Event results" to report that cell 2 has triggered intra-frequency event 1A.

After step 3, the UE shall send a ACTIVE SET UPDATE COMPLETE message on the uplink DCCH.

After step 5a, the UE shall transmit MEASUREMENT REPORT message on the uplink DCCH. The message shall contain IE "Event results" to report that cell 3 has triggered intra-frequency event 1A.

After step 6a, the UE shall send a ACTIVE SET UPDATE COMPLETE message on the uplink DCCH.

After step 7d, the UE shall transmit MEASUREMENT REPORT message on the uplink DCCH. The message shall contain IE "Event results" to report that cell 3 has triggered intra-frequency event 1B.

After step 11a, the UE shall send a MEASUREMENT REPORT message on the uplink DCCH. The message shall contain IE "Event results" to report that cell 3 has triggered intra-frequency event 1B.

### 8.4.1.15 Measurement Control and Report: Configuration Incomplete

#### 8.4.1.15.1 Definition

#### 8.4.1.15.2 Conformance requirement

If IE "Traffic volume measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "Traffic volume measurement quantity" or IE "Traffic volume reporting quantity" is not received, the UE shall:

1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;

1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

…

If IE "Measurement Reporting Mode" is not received by the UE in MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", the UE shall:

1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;

1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

…

If IE "Inter-frequency measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "Inter-frequency measurement quantity", IE "Inter-frequency reporting quantity" or "CHOICE Report criteria" is not received, the UE shall:

1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;

1> set the variable CONFIGURATION_INCOMPLETE to TRUE;

…

If IE "Intra-frequency measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "Intra-frequency measurement quantity", IE "Intra-frequency reporting quantity" or "CHOICE Report criteria" is not received, the UE shall:

1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;

1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

…

If IE "Quality measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "Quality reporting quantity" is not received, the UE shall:

1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;

1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

…

If IE "UE internal measurement" is received by the UE in a MEASUREMENT CONTROL message, where IE "measurement command" has the value "setup", but IE "UE internal measurement quantity" or IE "UE internal reporting quantity" is not received, the UE shall:

1> clear all stored measurement control information related associated to this measurement identity in variable MEASUREMENT_IDENTITY;

1> set the variable CONFIGURATION_INCOMPLETE to TRUE.

…

If the variable CONFIGURATION_INCOMPLETE is set to TRUE, the UE shall:

1> retain the measurement configuration that was valid before the MEASUREMENT CONTROL message was received;

1> set the IE "RRC transaction identifier" in the MEASUREMENT CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the MEASUREMENT CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS and clear that entry;

1> clear the variable CONFIGURATION_INCOMPLETE;

1> set the cause value in IE "failure cause" to "Configuration incomplete";

1> submit the MEASUREMENT CONTROL FAILURE message to lower layers for transmission on the DCCH using AM RLC;

1> continue with any ongoing processes and procedures as if the invalid MEASUREMENT CONTROL message has not been received;

1> and the procedure ends.

Reference

3GPP TS 25.331 clause 8.4.1.4a, 8.6.7.10, 8.6.7.13, 8.6.7.14, 8.6.7.16, 8.6.7.17, 8.6.7.18

### 8.4.1.15.3 Test Purpose

1. To confirm that the UE sends a MEASUREMENT CONTROL FAILURE message, after receiving a MEASUREMENT CONTROL message with IE "Measurement command" set to "Setup" and the following contents:

   - "CHOICE measurement type" IE is set to "Intra-frequency measurement" and "Intra-frequency measurement quantity" is omitted; or

   - "CHOICE measurement type" IE is set to "Inter-frequency measurement" and "Inter-frequency reporting quantity" is omitted; or

   - "Reporting mode" IE is omitted. or

   - "CHOICE measurement type" IE is set to "Quality measurement" and IE "Quality reporting quantity" is omitted or

   - "CHOICE measurement type" IE is set to "UE internal measurement" and IE "UE internal measurement quantity" is omitted or

   - "CHOICE measurement type" IE is set to "UE internal measurement" and IE "UE internal reporting quantity" is omitted or

   - "CHOICE measurement type" IE is set to "Traffic volume measurement" and IE "Traffic volume measurement quantity" is omitted or

   - "CHOICE measurement type" IE is set to "Traffic volume measurement" and IE "Traffic volume reporting quantity" is omitted

2. To confirm that the UE set the "failure cause" IE to value "incomplete configuration" in the uplink MEASUREMENT CONTROL FAILURE message.

### 8.4.1.15.4 Method of test

Initial Condition

System Simulator: 1 cell.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

The UE is initially brought to CELL_DCH. SS then send a MEASUREMENT CONTROL message to UE. The UE shall perform periodical traffic volume measurement according to this message and then transmit MEASUREMENT REPORT message back to SS.

SS transmits a MEASUREMENT CONTROL message to the UE, commanding it to start an intra-frequency measurement and reporting task. However, IE "Intra-frequency measurement quantity" is absent in the message. The UE shall not establish the intra-frequency measurement. It shall send a MEASUREMENT CONTROL FAILURE message to report that a "configuration incomplete" error has been detected.

Next, SS sends the MEASUREMENT CONTROL message once more. In this message, SS commands the establishment of an inter-frequency measurement and reporting task, but IE "Inter-frequency reporting quantity" is omitted in this message. The UE shall not establish the intra-frequency measurement. It shall send a MEASUREMENT CONTROL FAILURE message to report that a "configuration incomplete" error has been detected.

Next, SS sends a third MEASUREMENT CONTROL message. In this message, SS commands the establishment of an intra-frequency measurement and reporting task, but IE "Measurement reporting mode" is omitted in this message. The UE shall not establish the intra-frequency measurement. It shall send a MEASUREMENT CONTROL FAILURE message to report that a "configuration incomplete" error has been detected.

Next, SS sends a fourth MEASUREMENT CONTROL message. In this message, SS commands the establishment of a quality measurement and reporting task, but IE "Quality reporting quantity" is omitted in this message. The UE shall not establish the quality measurement. It shall send a MEASUREMENT CONTROL FAILURE message to report that a "configuration incomplete" error has been detected.

Next, SS sends a fifth MEASUREMENT CONTROL message. In this message, SS commands the establishment of UE internal measurement and reporting task, but IE "UE internal measurement quantity" is omitted in this message. The UE shall not establish the UE internal measurement. It shall send a MEASUREMENT CONTROL FAILURE message to report that a "configuration incomplete" error has been detected.

Next, SS sends a sixth MEASUREMENT CONTROL message. In this message, SS commands the establishment of UE internal measurement and reporting task, but IE "UE internal reporting quantity" is omitted in this message. The UE shall not establish the UE internal measurement. It shall send a MEASUREMENT CONTROL FAILURE message to report that a "configuration incomplete" error has been detected.

Next, SS sends a seventh MEASUREMENT CONTROL message. In this message, SS commands the establishment of a traffic volume measurement and reporting task, but IE "Traffic volume measurement quantity" is omitted in this message. The UE shall not establish the traffic volume measurement. It shall send a MEASUREMENT CONTROL FAILURE message to report that a "configuration incomplete" error has been detected.

In the final sequence, SS sends an eight MEASUREMENT CONTROL message. In this message, SS commands the establishment of a traffic volume measurement and reporting task, but IE "Traffic volume reporting quantity" is omitted in this message. The UE shall not establish the traffic volume measurement. It shall send a MEASUREMENT CONTROL FAILURE message to report that a "configuration incomplete" error has been detected. UE shall continue its traffic volume measurement and send MEASUREMENT REPORT messages back to SS periodically. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is CELL_DCH state in cell 1. |
| 1a | ← | | MEASUREMENT CONTROL | SS requests UE to perform periodical traffic volume measurement. |
| 1b | → | | MEASUREMENT REPORT | |
| 2 | ← | | MEASUREMENT CONTROL | SS commands the start of an intra-frequency measurement and reporting task. IE "Intra-frequency measurement quantity" is absent. |
| 3 | → | | MEASUREMENT CONTROL FAILURE | UE reports the occurrence of "incomplete configuration" |
| 4 | ← | | MEASUREMENT CONTROL | SS commands the start of an inter-frequency measurement and reporting task. IE "Inter-frequency reporting quantity" is absent. |
| 5 | → | | MEASUREMENT CONTROL FAILURE | UE reports the occurrence of "incomplete configuration" |
| 6 | ← | | MEASUREMENT CONTROL | SS commands the start of an inter-frequency measurement and reporting task. IE "Measurement reporting mode" is absent. |
| 7 | → | | MEASUREMENT CONTROL FAILURE | UE reports the occurrence of "incomplete configuration" |
| 8 | ← | | MEASUREMENT CONTROL | SS commands the start of a Quality measurement and reporting task. IE "Quality reporting quantity" is absent. |
| 9 | → | | MEASUREMENT CONTROL FAILURE | UE reports the occurrence of "incomplete configuration" |
| 10 | ← | | MEASUREMENT CONTROL | SS commands the start of an UE internal measurement and reporting task. IE "UE internal measurement quantity" is absent. |
| 11 | → | | MEASUREMENT CONTROL FAILURE | UE reports the occurrence of "incomplete configuration" |
| 12 | ← | | MEASUREMENT CONTROL | SS commands the start of an UE internal measurement and reporting task. IE "UE internal reporting quantity" is absent. |
| 13 | → | | MEASUREMENT CONTROL FAILURE | UE reports the occurrence of "incomplete configuration" |
| 14 | ← | | MEASUREMENT CONTROL | SS commands the start of a Traffic volume measurement and reporting task. IE "Traffic volume measurement quantity" is absent. |
| 15 | → | | MEASUREMENT CONTROL FAILURE | UE reports the occurrence of "incomplete configuration" |
| 16 | ← | | MEASUREMENT CONTROL | SS commands the start of a Traffic volume measurement and reporting task. IE "Traffic volume reporting quantity" is absent. |
| 17 | → | | MEASUREMENT CONTROL FAILURE | UE reports the occurrence of "incomplete configuration" |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 18 | → | | MEASUREMENT REPORT | |
| 19 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

MEASUREMENT CONTROL (Step 1a)

Use the MEASUREMENT CONTROL message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RB | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 8000 |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 1b and 18)

Check to see if the same message type found in [9] TS 34.108 Clause 9 is received, with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| RRC transaction Identifier | Arbitrarily selected between 0 and 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting/Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cell | Not Present |
| - Cell for measurement | |
| - Intra-frequency cell id | Set to id of cell 1 |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - SFN-SFN onserved time difference reporting indicator | No report |
| - Cell synchronization information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - SFN-SFN onserved time difference reporting indicator | No report |
| - Cell synchronization information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active set |
| - Maximum number of reported cells | 1 |
| - Measurement validity | CELL_DCH |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 32 seconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT CONTROL FAILURE (Step 3)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check if it is set to the same value of the same IE in the MEASUREMENT CONTROL message sent in Step 2 |
| Failure cause | Check to see if set to "incomplete configuration" |

MEASUREMENT CONTROL (Step 4) (Note 1)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 2 |
| RRC transaction Identifier | Arbitrarily selected between 0 and 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting/Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency cell | |
| - Inter-frequency cell id | Set to id of cell 4 |
| - Frequency info | |
| - CHOICE Mode | FDD |
| - UARFCN uplink (Nu) | Set to the same UARFCN as cell 4 in clause 6.1 of TS 34.108 |
| - UARFCN downlink (Nu) | Set to the same UARFCN as cell 4 in clause 6.1 of TS 34.108 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | 0 chips |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 4 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and re-selection info | Not Present |
| - Cell for measurement | |
| - Inter-frequency cell id | Set to id of cell 4 |
| - Inter-frequency measurement quantity | |
| - CHOICE rerporting criteria | Inter-frequency reporting criteria |
| - Filter coefficients | 0 |
| - CHOICE mode | FDD |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | Not Present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within monitored set on non-used frequency |
| - Maximum number of reported cells | 1 |
| - Measurement validity | CELL_DCH |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 32 seconds |
| - Inter-frequency set update | Not Present |
| DPCH compressed mode status info | Not Present |

MEASUREMENT CONTROL FAILURE (Step 5)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check if it is set to the same value of the same IE in the MEASUREMENT CONTROL message sent in Step 4 |
| Failure cause | Check to see if set to "incomplete configuration" |

MEASUREMENT CONTROL (Step 6)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| RRC transaction Identifier | Arbitrarily selected between 0 and 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cell | Not Present |
| - Cell for measurement | |
| - Intra-frequency cell id | Set to id of cell 1 |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 0 |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - SFN-SFN onserved time difference reporting indicator | No report |
| - Cell synchronization information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - SFN-SFN onserved time difference reporting indicator | No report |
| - Cell synchronization information reporting indicator | No report |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | FDD |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active set |
| - Maximum number of reported cells | 1 |
| - Measurement validity | CELL_DCH |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 32 seconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT CONTROL FAILURE (Step 7)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check if it is set to the same value of the same IE in the MEASUREMENT CONTROL message sent in Step 6 |
| Failure cause | Check to see if set to "incomplete configuration" |

MEASUREMENT CONTROL (Step 8)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 16 |
| Measurement command | Setup |
| - CHOICE measurement type | Quality measurement |
| - Quality reporting quantity | Not present |
| - Reporting criteria | Periodical reporting criteria |
| - Reporting amount | Infinity |
| - Reporting interval | 64 sec |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodic |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT CONTROL FAILURE (Step 9)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check if it is set to the same value of the same IE in the MEASUREMENT CONTROL message sent in Step 8 |
| Failure cause | Check to see if set to "incomplete configuration" |

MEASUREMENT CONTROL (Step 10)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | Not present |
| - UE internal reporting quantity | |
| - UE Transmitted Power | TRUE |
| - CHOICE mode | FDD |
| - UE Rx-Tx time difference | FALSE |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 1000 msec |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT CONTROL FAILURE (Step 11)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check if it is set to the same value of the same IE in the MEASUREMENT CONTROL message sent in Step 10 |
| Failure cause | Check to see if set to "incomplete configuration" |

MEASUREMENT CONTROL (Step 12)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| - CHOICE mode | FDD |
| - Measurement quantity | UE Transmitted Power |
| - Filter Coefficient | 0 |
| - UE internal reporting quantity | Not present |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 1000 msec |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT CONTROL FAILURE (Step 13)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check if it is set to the same value of the same IE in the MEASUREMENT CONTROL message sent in Step 12 |
| Failure cause | Check to see if set to "incomplete configuration" |

MEASUREMENT CONTROL (Step 14)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | Not present |
| - Traffic volume reporting quantity | |
| - RB buffer payload | True |
| - RB buffer payload average | TRUE |
| - RB buffer payload variance | False |
| - Measurement validity | Not Present |
| - Report criteria | Periodical Reporting Criteria |
| - Reporting amount | 8 |
| - Reporting interval | 8 Sec |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodic |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT CONTROL FAILURE (Step 15)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check if it is set to the same value of the same IE in the MEASUREMENT CONTROL message sent in Step 14 |
| Failure cause | Check to see if set to "incomplete configuration" |

MEASUREMENT CONTROL (Step 16)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | Not present |
| - Measurement validity | Not Present |
| - Report criteria | Periodical Reporting Criteria |
| - Reporting amount | 8 |
| - Reporting interval | 8 Sec |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodic |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT CONTROL FAILURE (Step 17)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check if it is set to the same value of the same IE in the MEASUREMENT CONTROL message sent in Step 16 |
| Failure cause | Check to see if set to "incomplete configuration" |

NOTE: For the MEASUREMENT CONTROL message in step 4, cell 4 is signalled to be added as a new cell into the UE's inter-frequency cell list. However, SS does not need to transmit cell 4 in the downlink, as the UE is not expected to perform measurement and reporting for this cell.

#### 8.4.1.15.5 Test Requirement

After step 1a, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

After step 2, 4, 6, 8, 10, 12, 14 and step 16, the UE shall transmit MEASUREMENT CONTROL FAILURE message, stating the IE "failure cause" as "incomplete configuration". The UE shall not transmit any MEASUREMENT REPORT messages during the execution of this test case.

After step 17, the UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH, reporting the RLC buffer payload of each RBs mapped on DCH at every 8s interval.

### 8.4.1.16 Measurement Control and Report: Traffic volume measurement for transition from idle mode to CELL_FACH state

#### 8.4.1.16.1 Definition

#### 8.4.1.16.2 Conformance requirement

Upon transition from idle mode to CELL_FACH state, the UE shall:

1> store the measurement control information from the IE "Traffic volume measurement system information" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11) in the variable MEASUREMENT_IDENTITY;

1> begin traffic volume measurement reporting according to the assigned information.

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in TS 25.331 subclause 8.6 unless otherwise specified below.

The UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> for measurement types "inter-RAT measurement" or "inter-frequency measurement":

…

2> for measurement type "UE positioning measurement":

…

2> for any other measurement type:

3> if the measurement is valid in the current RRC state of the UE:

4> begin measurements according to the stored control information for this measurement identity.

Reference

3GPP TS 25.331 clause 8.4.1.9.4, 3GPP TS 25.331 clause 8.4.1.3.

### 8.4.1.16.3 Test Purpose

1. To confirm that after a state transition from idle mode to CELL_FACH state, the UE shall begin a traffic volume type measurement, as specified in System Information Block type 11 or 12 messages on BCCH.
2. To confirm that in CELL_FACH state, the UE shall send a MEASUREMENT REPORT message when reporting criteria is satisfied. During CELL_FACH state, if the UE receives a MEASUREMENT CONTROL message, it shall perform the measurement and reporting tasks based on the MEASUREMENT CONTROL message received.

### 8.4.1.16.4 Method of test

Initial Condition

System Simulator: 1cell

UE: "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

Test Procedure

The UE is initially in idle mode. The System Information Block type 11 message is modified with respect to the default settings to request UE to perform traffic volume measurements. Key measurement parameters are as follows: measurement quantity = "RLC Buffer Payload", report criteria = "periodic reporting criteria", reporting interval = "6 seconds", reporting amount = 'infinity'. The System Information type 12 message is not broadcasted.

SS prompts the operator to make an outgoing call for one of the traffic classes supported by the UE. SS and UE shall execute procedure P6. Then the UE shall begin traffic volume measurements, and shall send MEASUREMENT REPORT message after completing first measurement. Next SS and UE shall execute procedure P10. Then SS and UE shall execute procedure P14.

UE shall continue to send MEASUREMENT REPORT messages at 6 seconds interval.

SS sends MEASUREMENT CONTROL message to the UE. This message overwrites measurement information saved from System information type 11. Key measurement parameters are as follow: measurement type = "traffic volume measurement", measurement quantity = "RLC Buffer Payload", report criteria = "Event triggered, event 4B: Transport Channel Traffic Volume becomes smaller than an absolute threshold ", Time to trigger = "5 seconds", pending time after trigger = "16 seconds", "reporting threshold = '4K'. Since there is no uplink traffic, UE shall send MEASUREMENT REPORT message after 5 seconds (time to trigger interval). SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is idle mode and camped onto cell 1. System Information Block type 11 to be transmitted is different from the default settings (see specific message contents) |
| 2 | ↔ | | SS executes procedure P6 (clause 7.4.2.2.2) specified in TS 34.108. | SS prompts the test operator to make an outgoing call. |
| 2a | → | | MEASUREMENT REPORT | The UE shall send the first MEASUREMENT REPORT message, as specified in SIB11. |
| 3 | ↔ | | SS executes procedure P10 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ↔ | | SS executes procedure P14 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | → | | Void | |
| 6 | → | | MEASUREMENT REPORT | The report is received within 6 seconds (reporting interval) |
| 7 | → | | MEASUREMENT REPORT | Time difference between any two consecutive MEASUREMENT REPORT messages should be 6 Seconds. |
| 8 | ← | | MEASUREMENT CONTROL | Traffic volume measurement reporting is requested if measurement is below threshold. |
| 9 | | | | SS monitors the uplink DCCH to confirm that no MEASUREMENT REPORT messages are received in 5 seconds. |
| 10 | → | | MEASUREMENT REPORT | Measurement report because event 4b is triggered |
| 11 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Content

System Information Block type 11 (Step 1) (FDD)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 1 |
| - Primary CPICH Tx power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity for RACH reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | |
| - Traffic volume measurement ID | 4 |
| - Traffic volume measurement object list | Rach |
| - Traffic volume measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RB buffer payload | True |
| - RB buffer payload average | False |
| - RB buffer payload variance | False |
| - Traffic volume measurement reporting criteria | Not Present |
| - Measurement validity | All States except CELL_DCH |
| - Measurement reporting mode | |
| - Measurement report transfer mode | Acknowledged Mode |
| - Periodical or event trigger | Periodical |
| - Report criteria system Information | Periodical reporting criteria |
| - Reporting amount | Infinity |
| - Reporting interval | 6 seconds |

System Information Block type 11 (Step 1) (TDD)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Set to same as used for cell 1 |
| - TX Diversity indicator | FALSE |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity for RACH reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | |
| - Traffic volume measurement ID | 4 |
| - Traffic volume measurement object list | RACH |
| - Traffic volume measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RB buffer payload | TRUE |
| - RB buffer payload average | False |
| - RB buffer payload variance | False |
| - Traffic volume measurement reporting criteria | Not Present |
| - Measurement validity | All States except CELL_DCH |
| - Measurement reporting mode | |
| - Measurement report transfer mode | Acknowledged Mode |
| - Periodical or event trigger | Periodical |
| - Report criteria system Information | Periodical reporting criteria |
| - Reporting amount | Infinity |
| - Reporting interval | 6 seconds |

MEASUREMENT REPORT (Step 2a)

The order in which the RBs are reported is not checked.

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 4 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "traffic volume measured results list" |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

MEASUREMENT REPORT (Step 6 and 7)

The order in which the RBs are reported is not checked.

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 4 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "traffic volume measured results list" |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 20 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

MEASUREMENT CONTROL (Step 8)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 4 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RB buffer payload | True |
| - RB buffer payload average | False |
| - RB buffer payload variance | False |
| - Measurement validity | Not Present |
| - CHOICE reporting criteria | Traffic Volume Measurement Reporting Criteria |
| - Parameters sent for each transport channel | |
| - Uplink transport channel type | Rach |
| - UL Transport Channel ID | Not Present |
| - Parameters required for each Event | |
| - Traffic volume event identity | 4B |
| - Reporting threshold | 4K |
| - Time to trigger | 5000 ms |
| - Pending time after trigger | 16000 ms |
| - Tx interruption after trigger | Not Present |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Event trigger |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 10)

The order in which the RBs are reported is not checked.

| Information Element | Value/remark |
|---|---|
| Measurement identity | 4 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 20 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Traffic Volume Measurement Event Results |
| - Uplink transport channel type causing the event | Rach |
| - UL Transport Channel identity | Not Present |
| - Traffic volume event identity | 4B |

#### 8.4.1.16.5 Test Requirement

After step 5 the UE shall send MEASUREMENT REPORT messages on the uplink DCCH containg RLC buffer payload information for all SRBs. After 6 seconds UE shall send second MEASUREMENT REPORT messages containg RLC buffer payload information for all SRBs and RAB.

After step 8 the UE shall overwrite measurement information received from system information type 11 with measurement information in MEASUREMENT CONTROL message. The UE shall not send MEASUREMENT REPORT message within time to trigger interval. After step 9 the UE shall transmit MEASUREMENT REPORT messages with event identity 4B.

### 8.4.1.17 Measurement Control and Report: Traffic volume measurement for transition from idle mode to CELL_DCH state

#### 8.4.1.17.1 Definition

#### 8.4.1.17.2 Conformance requirement

Upon transition from idle mode to CELL_DCH state, the UE shall:

1> begin a traffic volume type measurement, assigned in System Information Block type 11 (or System Information Block type 12.

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in TS 25.331 subclause 8.6 unless otherwise specified below.

The UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> for measurement types "inter-RAT measurement" or "inter-frequency measurement":

…

2> for measurement type "UE positioning measurement":

…

2> for any other measurement type:

3> if the measurement is valid in the current RRC state of the UE:

4> begin measurements according to the stored control information for this measurement identity.

Reference

3GPP TS 25.331 clause 8.4.1.8.4, 3GPP TS 25.331 clause 8.4.1.3.

#### 8.4.1.17.3 Test Purpose

1. To confirm that after a state transition from idle mode to CELL_DCH state, the UE begin a traffic volume type measurement, as specified in System Information Block type 11 or 12 messages on BCCH. When entering CELL_DCH state, the UE shall send a MEASUREMENT REPORT message when reporting criteria is satisfied.

2. During CELL_DCH state, if the UE receives a MEASUREMENT CONTROL message, it shall perform the measurement and reporting tasks based on the MEASUREMENT CONTROL message received.

#### 8.4.1.17.4 Method of test

Initial Condition

System Simulator: 1cell

UE: "Registered idle mode on CS" (state 2) or "Registered idle mode on PS" (state 3) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE. If the UE supports both CS and PS domains, the initial UE state shall be "Registered idle mode on CS/PS" (state 7).

### Test Procedure

The UE is initially in idle mode. The System Information Block type 11 message is modified with respect to the default settings to request UE to perform traffic volume measurements. Key measurement parameters are as follows: measurement quantity = "Average RLC Buffer Payload", report criteria = "Event triggered, event 4B", reporting threshold = "8K", report transfer mode = "Unacknowledged mode". The System Information type 12 message is not broadcasted.

SS prompts the operator to make an outgoing call of a supported traffic class. SS and UE shall execute procedure P3 (for CS service) or P5 (for PS service). Next SS and UE shall execute procedure P7 (for CS service) or P9 (for PS service). Then SS and UE shall execute procedure P11 (for CS service) or P13 (for PS service).

UE shall begin traffic volume measurements after entering in CELL_DCH state. The UE shall send MEASUREMENT REPORT message because uplink traffic is below threshold.

SS sends MEASUREMENT CONTROL message to the UE. This message reconfigures measurement information saved from System information type 11. Key measurement parameters are as follow: measurement type = "traffic volume measurement", measurement quantity = "RLC Buffer Payload", report criteria = "Periodic reporting criteria", reporting interval = "8 seconds", reporting amount = "8". The UE shall periodically send MEASUREMENT REPORT message to report RLC Buffer Payload for each RB.

SS sends MEASUREMENT CONTROL message to release traffic volume measurement. UE shall not send measurement report after receiving this message. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

### Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is idle mode and camped onto cell 1. System Information Block type 11 to be transmitted is different from the default settings (see specific message contents) |
| 2 | ↔ | | SS executes procedure P3 (clause 7.4.2.1.2) or P5 (clause 7.4.2.2.2) specified in TS 34.108. | |
| 3 | ↔ | | SS executes procedure P7 (clause 7.4.2.3.2) or P9 (clause 7.4.2.4.2) specified in TS 34.108. | |
| 4 | ↔ | | SS executes procedure P11 (clause 7.4.2.5.2) or P13 (clause 7.4.2.6.2) specified in TS 34.108. | |
| 5 | → | | Void | |
| 6 | → | | MEASUREMENT REPORT | Event 4B is triggered on DCH 5. This message should come on RB1. |
| 6a | → | | MEASUREMENT REPORT | Event 4B is triggered on DCH 1. This message should come on RB1 (only for PS) |
| 7 | ← | | MEASUREMENT CONTROL | Periodic Traffic volume measurement reporting is requested. |
| 8 | → | | MEASUREMENT REPORT | This message should come on RB2.This MEASUREMENT REPORT shall be received on or before 8 Seconds. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 9 | → | | MEASUREMENT REPORT | Time difference between earlier and this MEASUREMENT REPORT message should be 8 Seconds. |
| 10 | ← | | MEASUREMENT CONTROL | Release traffic volume measurement. |
| 11 | | | | Wait for 8 Seconds to confirm that UE does not send measurement report message. |
| 12 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

System Information Block type 11 (Step 1) (FDD)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 1 |
| - Primary CPICH Tx power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity for RACH reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | |
| - Traffic volume measurement ID | 2 |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | Average RLC Buffer Payload |
| - Time Interval to take an average | 200 msec |
| - Traffic volume reporting quantity | |
| - RB buffer payload | False |
| - RB buffer payload average | True |
| - RB buffer payload variance | False |
| - Traffic volume measurement reporting criteria | Not Present |
| - Measurement validity | CELL_DCH |
| - Measurement reporting mode | |
| - Measurement report transfer mode | Unacknowledged Mode |
| - Periodical or event trigger | Event Trigger |
| - CHOICE reporting criteria | Traffic volume measurement reporting criteria |
| - Parameters sent for each transport channel | |
| - Uplink transport channel type | Not Present |
| - UL transport channel id | Not Present |
| - Parameters required for each Event | |
| - Traffic volume event identity | 4B |
| - Reporting threshold | 8K |
| - Time to trigger | 5000 ms |
| - Pending time after trigger | 16000 ms |
| - Tx interruption after trigger | Not Present |

System Information Block type 11 (Step 1) (TDD)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Set to same as used for cell 1 |
| - TX Diversity indicator | FALSE |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity for RACH reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | |
| - Traffic volume measurement ID | 2 |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | Average RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - Time Interval to take an average | 200 msec |
| - RB buffer payload | FALSE |
| - RB buffer payload average | TRUE |
| - RB buffer payload variance | FALSE |
| - Traffic volume measurement reporting criteria | Not Present |
| - Measurement validity | CELL_DCH |
| - Measurement reporting mode | |
| - Measurement report transfer mode | Unacknowledged Mode |
| - Periodical or event trigger | Event Trigger |
| - Report criteria system Information | Traffic volume reporting criteria |
| - Event specific parameters | |
| - Event id | 4B |
| - Reporting threshold | 8K |
| - Time to trigger | Not Present |
| - Pending time after trigger | Not Present |
| - Tx interruption after trigger | Not Present |

MEASUREMENT REPORT (Step 6/6a)

The order in which the RBs are reported is not checked.

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 2 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "traffic volume measured results list" |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is absent |
| - RLC buffer payload average | Check to see if this IE is present |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is absent |
| - RLC buffer payload average | Check to see if this IE is present |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is absent |
| - RLC buffer payload average | Check to see if this IE is present |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is absent |
| - RLC buffer payload average | Check to see if this IE is present |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 20 (for the PS case only) |
| - RLC buffer payload | Check to see if this IE is absent |
| - RLC buffer payload average | Check to see if this IE is present |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | |
| - UL transport channel type causing the event | DCH |
| - UL Transport Channel identity | 5 (step 6), 1(step 6a) |
| - Traffic volume event identity | 4B |

MEASUREMENT CONTROL (Step 7)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Set up |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodic |
| Additional measurement list | Not Present |
| CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - Uplink transport channel type | DCH |
| - UL Target Transport Channel ID | 5 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC Buffer Payload |
| - Time Interval to take an average or a variance | Not Present |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | True |
| - Average of RLC Buffer Payload for each RBe | False |
| - Variance of RLC Buffer Payload for each RB | False |
| - Measurement validity | Not Present |
| - CHOICE Reporting criteria | Periodical Reporting Criteria |
| - Amount of reporting | 8 |
| - Reporting interval | 8 Sec |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 8,9)

The order in which the RBs are reported is not checked.

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

MEASUREMENT CONTROL (Step 10)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Release |
| Measurement reporting mode | Not Present |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

#### 8.4.1.17.5 Test Requirement

After step 5, due to triggering of event 4B, the UE shall send MEASUREMENT REPORT message using unacknowledged mode of RLC. After step 7, UE shall send MEASUREMENT REPORT message using Acknowledged mode of RLC. After 8 seconds UE shall send second MEASUREMENT REPORT message. After step 10, the UE shall not send MEASUREMENT REPORT message.

### 8.4.1.18 Measurement Control and Report: Traffic volume measurement for transition from CELL_FACH state to CELL_DCH state

#### 8.4.1.18.1 Definition

#### 8.4.1.18.2 Conformance requirement

Upon transition from CELL_FACH to CELL_DCH state, the UE shall:

- retrieve each set of measurement control information of measurement type "traffic volume" stored;
  - if the optional IE "measurement validity" for this measurement has not been included:
    - delete the measurement;
  - if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states except CELL_DCH":
    - stop measurement reporting; and
    - save the measurement to be used after the next transition to CELL_FACH state;
  - if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states":

- continue measurement reporting;

- if the IE "measurement validity" has been included and the IE "UE state" has been assigned to value "CELL_DCH":

  - resume this measurement and associated reporting;

- if no traffic volume type measurement has been assigned to the UE with a MEASUREMENT CONTROL message when transiting to CELL_DCH state:

  - continue an ongoing traffic volume type measurement, assigned in System Information Block type 11 or System Information Block type 12.

Reference

3GPP TS 25.331 clause 8.4.1.7.4

### 8.4.1.18.3 Test Purpose

1. To confirm that the UE performs traffic volume measurements and the associated reporting when it enters CELL_DCH state from CELL_FACH state, and that such measurement contexts (and optionally, the reporting context) valid for CELL_DCH state have been previously stored.

2. To confirm that the UE shall continue to perform traffic volume measurement listed in the System Information Block type 11 or 12 messages, if no previously assigned measurements are present. The UE shall transmit MEASUREMENT REPORT messages if reporting conditions stated in System Information Block type 11 or 12 messages have been satisfied.

### 8.4.1.18.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_FACH (state 6-11) as specified in clause 7.4 of TS 34.108

Test Procedure

Initially the UE is in CELL_FACH state. MEASUREMENT CONTROL message is sent to the UE to establish traffic volume measurement context with optional IE "measurement validity" is not present. The UE shall perform measurement and reporting as assigned in MEASUREMENT CONTROL message. RADIO BEARER RECONFIGURATION procedure is used to take the UE from CELL_FACH state to CELL_DCH state. While entering CELL_DCH state from CELL_FACH state, the UE shall delete traffic volume measurement contexts if optional IE "measurement validity" is not present. So, in CELL_DCH state UE shall not perform traffic volume measurement and reporting. UE is taken to the CELL_FACH state from CELL_DCH state using RADIO BEARER RECONFIGURATION procedure. The UE shall not send MEASUREMENT REPORT message as measurement context is already deleted.

The behavior of the UE when moved from CELL_FACH state to CELL_DCH state and assigned traffic volume measurement context is present with IE "measurement validity" is set to "All But CELL_DCH state" or "CELL_DCH state" or "All states" is tested in a similar way.

When the UE is in CELL_FACH state, System Information is modified to assign traffic volume measurement and reporting to the UE. No previously assigned traffic volume measurement contexts are present in the UE. A SYSTEM INFORMATION CHANGE INDICATION is sent on FACH to inform the UE about the change. The UE is taken to CELL_DCH state from CELL_FACH state using RADIO BEARER RECONFIGURATION procedure. In CELL_DCH state the UE shall continue traffic volume measurement and reporting as assigned in System Information. Traffic volume measurement and reporting is released by sending MEASUREMENT CONTROL message.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MEASUREMENT CONTROL | Optional IE "measurement validity" is not included. |
| 2 | → | | MEASUREMENT REPORT | |
| 3 | ← | | RADIO BEARER RECONFIGURATION | |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | While entering in CELL_DCH state from CELL_FACH state UE shall delete measurement context setup by MEASUREMENT CONTROL message (Step 1). |
| 5 | | | | SS waits for 8 seconds to confirm that there is no MEASUREMENT REPORT message from UE. |
| 6 | ← | | RADIO BEARER RECONFIGURATION | |
| 7 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE is in CELL_FACH state. |
| 8 | | | | SS waits for 8 seconds to confirm that there is no MEASUREMENT REPORT message from UE. |
| 9 | ← | | MEASUREMENT CONTROL | IE "measurement validity" is set to "All But CELL_DCH". |
| 10 | → | | MEASUREMENT REPORT | . |
| 11 | ← | | RADIO BEARER RECONFIGURATION | |
| 12 | → | | RADIO BEARER RECONFIGURATION COMPLETE | While entering in CELL_DCH state from CELL_FACH state UE shall stop traffic volume measurement setup by MEASUREMENT CONTROL message (Step 9). |
| 13 | | | | SS waits for 8 seconds to confirm that there is no MEASUREMENT REPORT message from UE. |
| 14 | ← | | MEASUREMENT CONTROL | UE shall release measurement context setup by MEASUREMENT CONTROL message (Step 9). |
| 15 | ← | | RADIO BEARER RECONFIGURATION | |
| 16 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE is in CELL_FACH state. |
| 17 | ← | | MEASUREMENT CONTROL | IE "measurement validity" is set to "CELL_DCH". |
| 18 | | | | SS waits for 8 seconds to confirm that there is no MEASUREMENT REPORT message from UE. |
| 19 | ← | | RADIO BEARER RECONFIGURATION | |
| 20 | → | | RADIO BEARER RECONFIGURATION COMPLETE | While entering in CELL_DCH state from CELL_FACH state UE shall start traffic volume measurement setup by MEASUREMENT CONTROL message (Step 17). |
| 21 | → | | MEASUREMENT REPORT | |
| 22 | ← | | MEASUREMENT CONTROL | UE shall release measurement context setup by MEASUREMENT CONTROL message (Step 17) |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 23 | ← | | RADIO BEARER RECONFIGURATION | |
| 24 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE is in CELL_FACH state. |
| 25 | ← | | MEASUREMENT CONTROL | IE "measurement validity" is set to "All states". |
| 26 | → | | MEASUREMENT REPORT | |
| 27 | ← | | RADIO BEARER RECONFIGURATION | |
| 28 | → | | RADIO BEARER RECONFIGURATION COMPLETE | While entering in CELL_DCH state from CELL_FACH state UE shall continue traffic volume measurement setup by MEASUREMENT CONTROL message (Step 25). |
| 29 | → | | MEASUREMENT REPORT | |
| 30 | ← | | MEASUREMENT CONTROL | UE shall release measurement context setup by MEASUREMENT CONTROL message (Step 25) |
| 31 | ← | | RADIO BEARER RECONFIGURATION | |
| 32 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE is in CELL_FACH state. |
| 33 | ← | | MIB, Scheduling Block 1, and SIB12 modified | Traffic volume measurements and reporting is assigned to Ues |
| 33a | ← | | SYSTEM INFORMATION CHANGE INDICATION | |
| 34 | → | | MEASUREMENT REPORT | |
| 35 | ← | | RADIO BEARER RECONFIGURATION | |
| 36 | → | | RADIO BEARER RECONFIGURATION COMPLETE | While entering in CELL_DCH state from CELL_FACH state UE shall continue traffic volume measurement assigned in System Information (Step 33). |
| 37 | → | | MEASUREMENT REPORT | |
| 38 | ← | | MEASUREMENT CONTROL | UE shall release measurement context assigned in System Information (Step 33). |

Specific Message Content

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

MEASUREMENT CONTROL (Step 1)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RB buffer payload | True |
| - RB buffer payload average | False |
| - RB buffer payload variance | False |
| - Measurement validity | Not Present |
| - Report criteria | Periodical Reporting Criteria |
| - Reporting amount | 8 |
| - Reporting interval | 8 Sec |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodic |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 2)

The order in which the RBs are reported is not checked.

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 20 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER RECONFIGURATION (Step 3, 11, 19, 27, and 35)

Use the same message type found in TS 34.108 clause 9 with condition set to A4.

RADIO BEARER RECONFIGURATION (Step 6, 15, 23, and 31)

Use the same message type found in TS 34.108 clause 9 with condition set to A5.

MEASUREMENT CONTROL (Step 9)

The contents of this message are identical to MEASUREMENT CONTROL (Step 1) message with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Measurement validity | All But CELL_DCH |

MEASUREMENT REPORT (Step 10)

The contents of this message are identical to MEASUREMENT REPORT (Step 2) message with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 2 |

MEASUREMENT CONTROL (Step 14)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Release |
| Measurement reporting mode | Not Present |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT CONTROL (Step 17)

The contents of this message are identical to MEASUREMENT CONTROL (Step 1) message with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Measurement validity | CELL_DCH |

MEASUREMENT REPORT (Step 21)

The contents of this message are identical to MEASUREMENT REPORT (Step 2) message with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 3 |

MEASUREMENT CONTROL (Step 22)

The contents of this message are identical to MEASUREMENT CONTROL (Step 14) message with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 3 |

MEASUREMENT CONTROL (Step 25)

The contents of this message are identical to MEASUREMENT CONTROL (Step 1) message with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 4 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - UL transport channel identity | RACH |
| - UL transport channel identity | DCH :1 |
| - UL transport channel identity | DCH : 5 |
| - Measurement validity | All States |

MEASUREMENT REPORT (Step 26, and 29)

The contents of this message are identical to MEASUREMENT REPORT (Step 2) message with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 4 |

MEASUREMENT CONTROL (Step 30)

The contents of this message are identical to MEASUREMENT CONTROL (Step 14) message with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 4 |

Master Information Block (Step 33)

| Information Element | Value/Remarks |
|---|---|
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |
| SB 1 Cell Value tag | Set to (Current SB 1 value tag + 1) |

Scheduling Block 1 (Step 33)

| Information Element | Value/remark |
|---|---|
| SIB 12 Cell Value tag | Set to (Current SIB 12 value tag + 1) |

System Information Block type 12 (Step 33) (FDD)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 1 |
| - Primary CPICH Tx power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity for RACH reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | |
| - Traffic volume measurement ID | 5 |
| - Traffic volume measurement object list | |
| - UL transport channel identity | RACH |
| - UL transport channel identity | DCH :1 |
| - UL transport channel identity | DCH : 5 |
| - Traffic volume measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RB buffer payload | True |
| - RB buffer payload average | False |
| - RB buffer payload variance | False |
| - Traffic volume measurement reporting criteria | Not Present |
| - Measurement validity | All states |
| - Measurement reporting mode | |
| - Measurement report transfer mode | Acknowledged Mode |
| - Periodical or event trigger | Periodical |
| - Report criteria system Information | Periodical reporting criteria |
| - Reporting amount | Infinity |
| - Reporting interval | 8 seconds |

System Information Block type 12 (Step 1) (TDD)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Set to same as used for cell 1 |
| - TX Diversity indicator | FALSE |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity for RACH reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | |
| - Traffic volume measurement ID | 5 |
| - Traffic volume measurement object list | |
| - UL transport channel identity | RACH |
| - UL transport channel identity | DCH :1 |
| - UL transport channel identity | DCH : 5 |
| - Traffic volume measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RB buffer payload | TRUE |
| - RB buffer payload average | FALSE |
| - RB buffer payload variance | FALSE |
| - Traffic volume measurement reporting criteria | Not Present |
| - Measurement validity | All states |
| - Measurement reporting mode | |
| - Measurement report transfer mode | Acknowledged Mode |
| - Periodical or event trigger | Periodocal |
| - Report criteria system Information | Periodical reporting criteria |
| - Reporting amount | Infinity |
| - Reporting interval | 8 seconds |

SYSTEM INFORMATION CHANGE INDICATION (Step 33a)

| Information Element | Value/Remarks |
|---|---|
| Paging record list | Not Present |
| BCCH modification info | |
| - MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |
| - BCCH modification time | Not Present |

MEASUREMENT REPORT (Step 34, and 37)

The contents of this message are identical to MEASUREMENT REPORT (Step 2) message with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 5 |

MEASUREMENT CONTROL (Step 38)

The contents of this message are identical to MEASUREMENT CONTROL (Step 14) message with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 5 |

#### 8.4.1.18.5 Test Requirement

The UE shall send MEASUREMENT REPORT message in steps 21, 29 and 37. The UE shall not send MEASUREMENT REPORT message in steps 5, 8, and 13.

### 8.4.1.19 Measurement Control and Report: Traffic volume measurement for transition from CELL_DCH to CELL_FACH state

#### 8.4.1.19.1 Definition

#### 8.4.1.19.2 Conformance requirement

Upon transition from CELL_DCH to CELL_FACH or CELL_PCH or URA_PCH state, the UE shall:

1> retrieve each set of measurement control information of measurement type "traffic volume" stored in the variable MEASUREMENT_IDENTITY; and

2> if the optional IE "measurement validity" for this measurement has not been included:

3> delete the measurement associated with the variable MEASUREMENT_IDENTITY.

2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "CELL_DCH":

3> stop measurement reporting;

3> store the measurement associated with the variable MEASUREMENT_IDENTITY to be used after the next transition to CELL_DCH state.

2> if the IE "measurement validity" for the measurement has been included, and the IE "UE state" has been assigned to value "all states":

3> continue measurement reporting.

2> if the IE "measurement validity" has been included and the IE "UE state" has been assigned to value "all states except CELL_DCH":

3> resume this measurement and associated reporting.

1> if no traffic volume type measurement has been assigned to the UE with a MEASUREMENT CONTROL message that is valid in CELL_FACH or CELL_PCH or URA_PCH states (stored in the variable MEASUREMENT_IDENTITY), which has the same identity as the one indicated in the IE "Traffic volume measurement system information":

2> store the measurement control information from the IE "Traffic volume measurement system information" received in System Information Block type 12 (or System Information Block type 11, according to subclause 8.1.1.6.11) in the variable MEASUREMENT_IDENTITY;

2> begin traffic volume measurement reporting according to the assigned information.

Reference

3GPP TS 25.331 clauses 8.4.1.6.6.

8.4.1.19.3 Test Purpose

1. The UE shall performs traffic volume measurements and the associated reporting when it enters CELL_FACH state from CELL_DCH state, and that such measurement contexts (and optionally, the reporting context) valid for CELL_FACH state have been previously stored.

2. The UE shall perform traffic volume measurement listed in the System Information Block type 11 or 12 messages, if no previously assigned measurements are present. The UE shall transmit MEASUREMENT REPORT messages if reporting conditions has been satisfied.

Reference

3GPP TS 25.331 clause 8.4.1.6.6

8.4.1.19.4 Method of test

Initial Condition

System Simulator: 1 cell

SYSTEM INFORMATION BLOCK TYPE 1 (see specific message contents).

UE: PS-DCCH+DTCH_DCH (state 6-10) as specified in clause 7.4 of TS 34.108

Test Procedure

Initially the UE is in CELL_DCH state. MEASUREMENT CONTROL message is sent to the UE to establish traffic volume measurement context with optional IE "measurement validity" is not present. The UE shall perform measurement and reporting as assigned in MEASUREMENT CONTROL message. RADIO BEARER RECONFIGURATION procedure is used to take the UE from CELL_DCH state to CELL_FACH state. While entering CELL_FACH state from CELL_DCH state, the UE shall delete traffic volume measurement contexts if optional IE "measurement validity" is not present. So, in CELL_FACH state UE shall not perform traffic volume measurement and reporting. UE is taken to the CELL_DCH state from CELL_FACH state using RADIO BEARER RECONFIGURATION procedure. The UE shall not send MEASUREMENT REPORT message as measurement context is already deleted.

The behavior of the UE when moved from CELL_DCH state to CELL_FACH state and assigned traffic volume measurement context is present with IE "measurement validity" is set to "All But CELL_DCH state" or "CELL_DCH state" or "All states" is tested in a similar way.

When the UE is in CELL_DCH state, System Information is modified to assign traffic volume measurement and reporting to the UE. No previously assigned traffic volume measurement contexts are present in the UE. The UE is taken to CELL_FACH state from CELL_DCH state using RADIO BEARER RECONFIGURATION procedure. In CELL_FACH state the UE shall perform traffic volume measurement and reporting as assigned in System Information. Traffic volume measurement and reporting is released by sending MEASUREMENT CONTROL message.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MEASUREMENT CONTROL | Optional IE "measurement validity" is not included. |
| 2 | → | | MEASUREMENT REPORT | |
| 3 | ← | | RADIO BEARER RECONFIGURATION | |
| 4 | → | | RADIO BEARER RECONFIGURATION COMPLETE | While entering in CELL_FACH state from CELL_DCH state UE shall delete measurement context setup by MEASUREMENT CONTROL message (Step 1). |
| 5 | | | | SS waits for 8 seconds to confirm that there is no MEASUREMENT REPORT message from UE. |
| 6 | ← | | RADIO BEARER RECONFIGURATION | |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 7 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE is in CELL_DCH state. |
| 8 | | | | SS waits for 8 seconds to confirm that there is no MEASUREMENT REPORT message from UE. |
| 9 | ← | | MEASUREMENT CONTROL | IE "measurement validity" is set to "All But CELL_DCH". |
| 10 | | | | SS waits for 8 seconds to confirm that there is no MEASUREMENT REPORT message from UE. |
| 11 | ← | | RADIO BEARER RECONFIGURATION | |
| 12 | → | | RADIO BEARER RECONFIGURATION COMPLETE | While entering in CELL_FACH state from CELL_DCH state UE shall start traffic volume measurement setup by MEASUREMENT CONTROL message (Step 9). |
| 13 | → | | MEASUREMENT REPORT | |
| 14 | ← | | MEASUREMENT CONTROL | UE shall release measurement context setup by MEASUREMENT CONTROL message (Step 9). |
| 15 | ← | | RADIO BEARER RECONFIGURATION | |
| 16 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE is in CELL_DCH state. |
| 17 | ← | | MEASUREMENT CONTROL | IE "measurement validity" is set to "CELL_DCH". |
| 18 | → | | MEASUREMENT REPORT | |
| 19 | ← | | RADIO BEARER RECONFIGURATION | |
| 20 | → | | RADIO BEARER RECONFIGURATION COMPLETE | While entering in CELL_FACH state from CELL_DCH state UE shall stop traffic volume measurement setup by MEASUREMENT CONTROL message (Step 17). |
| 21 | | | | SS waits for 8 seconds to confirm that there is no MEASUREMENT REPORT message from UE. |
| 22 | ← | | MEASUREMENT CONTROL | UE shall release measurement context setup by MEASUREMENT CONTROL message (Step 17) |
| 23 | ← | | RADIO BEARER RECONFIGURATION | |
| 24 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE is in CELL_DCH state. |
| 25 | ← | | MEASUREMENT CONTROL | IE "measurement validity" is set to "All states". |
| 26 | → | | MEASUREMENT REPORT | |
| 27 | ← | | RADIO BEARER RECONFIGURATION | |
| 28 | → | | RADIO BEARER RECONFIGURATION COMPLETE | While entering in CELL_FACH state from CELL_DCH state UE shall continue traffic volume measurement setup by MEASUREMENT CONTROL message (Step 25). |
| 29 | → | | MEASUREMENT REPORT | |
| 30 | ← | | MEASUREMENT CONTROL | UE shall release measurement context setup by MEASUREMENT CONTROL message (Step 25) |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 31 | ← | | RADIO BEARER RECONFIGURATION | |
| 32 | → | | RADIO BEARER RECONFIGURATION COMPLETE | UE is in CELL_DCH state. |
| 33 | ← | | SIB12 modified | Traffic volume measurements and reporting is assigned to UEs |
| 34 | ← | | RADIO BEARER RECONFIGURATION | |
| 35 | → | | RADIO BEARER RECONFIGURATION COMPLETE | While entering in CELL_FACH state from CELL_DCH state UE shall start traffic volume measurement as assigned in System Information (Step 33). |
| 36 | → | | MEASUREMENT REPORT | |
| 37 | ← | | MEASUREMENT CONTROL | UE shall release measurement context assigned in System Information (Step 33). |

Specific Message Content

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in connected mode | |
| - T312 | 2 |

MEASUREMENT CONTROL (Step 1)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RB buffer payload | True |
| - RB buffer payload average | False |
| - RB buffer payload variance | False |
| - Measurement validity | Not Present |
| - Report criteria | Periodical Reporting Criteria |
| - Reporting amount | 8 |
| - Reporting interval | 8 Sec |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodic |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 2)

The order in which the RBs are reported is not checked.

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Traffic volume measured results list |
| - Traffic volume measurement results | |
| - RB identity | 1 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 2 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 3 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 4 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| - RB identity | 20 |
| - RLC buffer payload | Check to see if this IE is present |
| - RLC buffer payload average | Check to see if this IE is absent |
| - RLC buffer payload variance | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

RADIO BEARER RECONFIGURATION (Step 3, 11, 19, 27, and 34)

Use the same message type found in TS 34.108 clause 9 with condition set to A5.

RADIO BEARER RECONFIGURATION (Step 6, 15, 23, and 31)

Use the same message type found in TS 34.108 clause 9 with condition set to A4.

MEASUREMENT CONTROL (Step 9)

The contents of this message are identical to MEASUREMENT CONTROL (Step 1) message with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Measurement validity | All But CELL_DCH |

MEASUREMENT REPORT (Step 13)

The contents of this message are identical to MEASUREMENT REPORT (Step 2) message with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 2 |

MEASUREMENT CONTROL (Step 14)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Release |
| Measurement reporting mode | Not Present |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT CONTROL (Step 17)

The contents of this message are identical to MEASUREMENT CONTROL (Step 1) message with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Measurement validity | CELL_DCH |

MEASUREMENT REPORT (Step 18)

The contents of this message are identical to MEASUREMENT REPORT (Step 2) message with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 3 |

MEASUREMENT CONTROL (Step 22)

The contents of this message are identical to MEASUREMENT CONTROL (Step 14) message with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 3 |

MEASUREMENT CONTROL (Step 25)

The contents of this message are identical to MEASUREMENT CONTROL (Step 1) message with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 4 |
| Measurement Command | Setup |
| - CHOICE measurement type | Traffic Volume Measurement |
| - Traffic volume measurement object list | |
| - UL transport channel identity | RACH |
| - UL transport channel identity | DCH :1 |
| - UL transport channel identity | DCH : 5 |
| - Measurement validity | All States |

MEASUREMENT REPORT (Step 26, and 29)

The contents of this message are identical to MEASUREMENT REPORT (Step 2) message with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 4 |

MEASUREMENT CONTROL (Step 30)

The contents of this message are identical to MEASUREMENT CONTROL (Step 14) message with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 4 |

System Information Block type 12 (Step 33) (FDD)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell_selection_and_reselection_quality | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 1 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to same code as used for cell 1 |
| - Primary CPICH Tx power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell selection and re-selection info for SIB11/12 | |
| - $Qoffset1_{s,n}$ | 0dB |
| - $Qoffset1_{s,n}$ | Not present |
| - Maximum allowed UL Tx Power | Reference to table 6.1.1 |
| - HCS neighbouring cell information | Not Present |
| - CHOICE mode | FDD |
| - Qqualmin | Reference to table 6.1.1 |
| - Qrxlevmin | Reference to table 6.1.1 |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity for RACH reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | |
| - Traffic volume measurement ID | 5 |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RB buffer payload | True |
| - RB buffer payload average | False |
| - RB buffer payload variance | False |
| - Traffic volume measurement reporting criteria | Not Present |
| - Measurement validity | Not Present |
| - Measurement reporting mode | |
| - Measurement report transfer mode | Acknowledged Mode |
| - Periodical or event trigger | Periodical |
| - Report criteria system Information | Periodical reporting criteria |
| - Reporting amount | Infinity |
| - Reporting interval | 8 seconds |

System Information Block type 12 (Step 33) (TDD)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN indicator | TRUE |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Set to same as used for cell 1 |
| - TX Diversity indicator | FALSE |
| - Cell selection and re-selection info for SIB11/12 | |
| - $Qoffset1_{s,n}$ | 0dB |
| - $Qoffset1_{s,n}$ | Not present |
| - Maximum allowed UL Tx Power | Reference to table 6.1.1 |
| - HCS neighbouring cell information | Not Present |
| - CHOICE mode | TDD |
| - Qrxlevmin | Reference to table 6.1.1 |
| - Cells for measurement | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity for RACH reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not Present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | |
| - Traffic volume measurement ID | 5 |
| - Traffic volume measurement object list | Not Present |
| - Traffic volume measurement quantity | RLC Buffer Payload |
| - Traffic volume reporting quantity | |
| - RB buffer payload | TRUE |
| - RB buffer payload average | FALSE |
| - RB buffer payload variance | FALSE |
| - Traffic volume measurement reporting criteria | Not Present |
| - Measurement validity | Not Present |
| - Measurement reporting mode | |
| - Measurement report transfer mode | Acknowledged Mode |
| - Periodical or event trigger | Periodical |
| - Report criteria system Information | Periodical reporting criteria |
| - Reporting amount | Infinity |
| - Reporting interval | 8 seconds |

MEASUREMENT REPORT (Step 36)

The contents of this message are identical to MEASUREMENT REPORT (Step 2) message with the following exceptions:

| Information Element | Value/Remarks |
|---|---|
| Measurement identity | 5 |

MEASUREMENT CONTROL (Step 37)

The contents of this message are identical to MEASUREMENT CONTROL (Step 14) message with the following exceptions:

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 5 |

#### 8.4.1.19.5 Test Requirement

The UE shall send MEASUREMENT REPORT message in steps 13, 29 and 36. The UE shall not send MEASUREMENT REPORT message in steps 5, 8, and 21.

### 8.4.1.20 Void

### 8.4.1.21 Void

### 8.4.1.22 Measurement Control and Report: Quality measurements

#### 8.4.1.22.1 Definition

#### 8.4.1.22.2 Conformance requirement

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in TS 25.331 subclause 8.6 unless otherwise specified below.

The UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> for measurement types "inter-RAT measurement" or "inter-frequency measurement":

…

2> for measurement type "UE positioning measurement":

…

2> for any other measurement type:

3> if the measurement is valid in the current RRC state of the UE:

4> begin measurements according to the stored control information for this measurement identity.

Reference

3GPP TS 25.331 clause 8.4.1.3

#### 8.4.1.22.3 Test Purpose

1. To confirm that the UE performs quality measurement as specified in MEASUREMENT CONTROL message received. In CELL_DCH state, the UE shall send MEASUREMENT REPORT message when the reporting criteria is fulfilled for any ongoing quality measurement.

#### 8.4.1.22.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) as specified in clause 7.4 of TS 34.108, depending on the CN domain(s) supported by the UE.

Test Procedure

The UE is in CELL_DCH state. MEASUREMENT CONTROL message is sent to UE to assign quality measurement and reporting. As assigned in MEASUREMENT CONTROL message, the UE shall periodically send MEASUREMENT REPORT message reporting BLER of downlink transport channel(s). SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MEASUREMENT CONTROL | The UE is requested to perform "Quality measurements" |
| 2 | → | | MEASUREMENT REPORT | |
| 3 | → | | MEASUREMENT REPORT | UE shall send second MEASUREMENT REPORT message after 64 seconds. |
| 4 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

MEASUREMENT CONTROL (Step 1) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 16 |
| Measurement command | Setup |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurement list | Not Present |
| - CHOICE measurement type | Quality measurement |
| - Quality reporting quantity | |
| - DL transport channel BLER | True |
| - Transport channels for BLER reporting | Not present |
| - CHOICE mode | FDD |
| - CHOICE report criteria | Periodical reporting criteria |
| - Reporting amount | Infinity |
| - Reporting interval | 64 sec |
| DPCH compressed mode status | Not Present |

MEASUREMENT CONTROL (Step 1) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 16 |
| Measurement command | Setup |
| - CHOICE measurement type | Quality measurement |
| - Quality reporting quantity | |
| - DL transport channel BLER | True |
| - Transport channels for BLER reporting | Not present |
| - CHOICE mode | TDD |
| - SIR measurement list | |
| - TFCS ID | Not present |
| - CHOICE Reporting criteria | Periodical reporting criteria |
| - Reporting amount | Infinity |
| - Reporting interval | 64 sec |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodic |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 2,3) (FDD)

In case of CS speech call,

| Information Element | Value/remark |
|---|---|
| Measurement identity | 16 |
| Measured Results | |
| - CHOICE measurement | Quality measurement |
| - BLER measurement results list | |
| - Transport channel identity | 6 |
| - DL transport channel BLER | Check to see if this IE is present |
| - Transport channel identity | 7 |
| - DL transport channel BLER | Check to see if this IE is present |
| - Transport channel identity | 8 |
| - DL transport channel BLER | Check to see if this IE is present |
| - Transport channel identity | 10 |
| - DL transport channel BLER | Check to see if this IE is present |
| - CHOICE mode | FDD |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

MEASUREMENT REPORT (Step 2,3) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 16 |
| Measured Results | |
| - CHOICE measurement | Quality measurement |
| - BLER measurement results list | |
| - DL Transport channel identity | 10 |
| - DL transport channel BLER | Check to see if this IE is present |
| - CHOICE Mode | TDD |
| - SIR measurement results | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

In any cases except CS speech call:

| Information Element | Value/remark |
|---|---|
| Measurement identity | 16 |
| Measured Results | |
| - CHOICE measurement | Quality measurement |
| - BLER measurement results list | |
| - Transport channel identity | 6 |
| - DL transport channel BLER | Check to see if this IE is present |
| - Transport channel identity | 10 |
| - DL transport channel BLER | Check to see if this IE is present |
| - CHOICE *mode* | FDD |
| Measured results on RACH | Check to see if this IE is absent |
| Additional measured results | Check to see if this IE is absent |
| Event results | Check to see if this IE is absent |

#### 8.4.1.22.5 Test Requirement

In step 2 and 3, the UE shall send MEASUREMENT REPORT message to report BLER for downlink DCH transport channel.

### 8.4.1.23 Measurement Control and Report: Intra-frequency measurement for events 1C and 1D

#### 8.4.1.23.1 Definition

#### 8.4.1.23.2 Conformance requirement

1. When event 1C is configured in the UE, the UE shall:

   1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for one or more primary CPICHs, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for one or more primary CPICHs, for each of these primary CPICHs:

      2> if all required reporting quantities are available for that cell; and

      2> if the equations have been fulfilled for a time period indicated by "Time to trigger", and if the primary CPICH that is better is not included in the active set but the other primary CPICH is any of the primary CPICHs included in the active set, and if that first primary CPICH is not included in the "cells triggered" in the variable TRIGGERED_1C_EVENT:

         3> include that primary CPICH in the "cells recently triggered" in the variable TRIGGERED_1C_EVENT.

   1> if the value of "Replacement activation threshold" for this event is less than or equal to the current number of cells in the active set or equal to 0 and if any primary CPICHs are stored in the "cells recently triggered" in the variable TRIGGERED_1C_EVENT:

      2> if "Reporting interval" for this event is not equal to 0:

         3> if the IE "Periodical reporting running" in the variable TRIGGERED_1C_EVENT is set to FALSE:

            4> start a timer for with the value of "Reporting interval" for this event and set the IE "Periodical reporting running" in the variable TRIGGERED_1C_EVENT to TRUE.

         3> set "sent reports" for that primary CPICH in the variable TRIGGERED_1C_EVENT to 1.

      2> send a measurement report with IEs set as below:

         3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1c"; and

3> include in "cell measurement event results" all entries of the "cells recently triggered" in the variable TRIGGERED_1C_EVENT not in the active set as well as the "primary CPICH info" of all the primary CPICHs in the active set for which the measured value is worse (i.e. greater for pathloss and less for the other measurement quantities) than the one of the entry in "cell recently triggered" that has the best measured value. The "primary CPICH info" for those cells shall be ordered according to their measured value taking into account their cell individual offset, beginning with the best cell to the worst one;

3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.

2> ….

2. This section applies to R99 & Rel-4 releases:

When an intra-frequency measurement configuring event 1d is set up, the UE shall:

1> create a variable TRIGGERED_1D_EVENT related to that measurement, which shall initially contain the best cell in the active set when the measurement is initiated;

1> delete this variable when the measurement is released.

When event 1D is configured in the UE, the UE shall:

1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for a primary CPICH that is not stored in "Best cell" in variable BEST_CELL_1D_EVENT, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for a primary CPICH that is not stored in "Best cell" in variable BEST_CELL_1D_EVENT:

NOTE: If the equations are simultaneously fulfilled for more than one primary CPICH, the UE should report only one event 1D, triggered by the best primary CPICH.

2> if all required reporting quantities are available for that cell, and if the equations have been fulfilled for a time period indicated by "Time to trigger":

3> set "best cell" in the variable BEST_CELL_1D_EVENT to that primary CPICH that triggered the event;

3> send a measurement report with IEs set as below:

4> set in "intra-frequency measurement event results"; "Intrafrequency event identity" to "1d" and "cell measurement event results" to the CPICH info of the primary CPICH that triggered the report, not taking into account the cell individual offset for each cell.

4> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.

NOTE: Event 1D can be triggered by an active or by a non-active CPICH.

3. This section applies from Rel-5 releases onwards:

When an intra-frequency measurement configuring event 1d is set up, the UE shall:

1> create a variable TRIGGERED_1D_EVENT related to that measurement, which shall initially contain the best cell in the active set when the measurement is initiated;

1> delete this variable when the measurement is released.

1> As soon as the best cell in the active set has been evaluated by the UE (and stored in the TRIGGERED_1D_EVENT variable) and provided that there is more than one cell in the active set, trigger an immediate measurement report with IEs set as below:

2> set in "intra-frequency measurement event results"; "Intrafrequency event identity" to "1d" and "cell measurement event results" to the CPICH info of the primary CPICH stored in the TRIGGERED_1D_EVENT variable;

2> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2

When event 1D is configured in the UE, the UE shall:

1> if IE "useCIO" is present and its value is TRUE, take into account the Cell Individual Offset for evaluation of the Equation 1 and 2, otherwise do not take it into account.

1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for a primary CPICH that is not stored in "Best cell" in variable BEST_CELL_1D_EVENT, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for a primary CPICH that is not stored in "Best cell" in variable BEST_CELL_1D_EVENT:

NOTE: If the equations are simultaneously fulfilled for more than one primary CPICH, the UE should report only one event 1D, triggered by the best primary CPICH.

2> if all required reporting quantities are available for that cell, and if the equations have been fulfilled for a time period indicated by "Time to trigger" and if IE "Triggering condition 2" is absent or if it is present and that primary CPICH is part of cells allowed to trigger the event according to "Triggering condition 2":

3> set "best cell" in the variable BEST_CELL_1D_EVENT to that primary CPICH that triggered the event;

3> send a measurement report with IEs set as below:

4> set in "intra-frequency measurement event results"; "Intrafrequency event identity" to "1d" and "cell measurement event results" to the CPICH info of the primary CPICH that triggered the report.

4> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2.

Reference

3GPP TS 25.331 clause 14.1.2.3, 14.1.2.4.

### 8.4.1.23.3 Test Purpose

1.A To confirm that the UE sends MEASUREMENT REPORT message if event 1C is configured, and number of cells in active set is greater than or equal to 'Replacement activation threshold' parameter, and if monitored or detected primary CPICH on same frequency becomes better than a primary CPICH in active set.

1.B To confirm that the UE does not send MEASUREMENT REPORT message indicating event 1C if number of cells in active set is less than 'Replacement activation threshold' parameter, and if monitored or detected primary CPICH on same frequency becomes better than a primary CPICH in active set.

1.C To confirm that the UE stops periodic reporting of event 1C if the cell that triggered event 1C is added into active set.

2.A To confirm that from Rel-5 onwards the UE sends a MEASUREMENT REPORT message as soon as event 1D is configured, when there is more than one cell in the active set.

2.B To confirm that the UE sends MEASUREMENT REPORT message if event 1D is configured and intra-frequency measurement indicates change in best cell.

### 8.4.1.23.4 Method of test

Initial Condition

System Simulator: 3 cells – The initial configurations of the 3 cells in the SS shall follow the values indicated in the column marked "T0" in table 8.4.1.23-1. The table is found in "Test Procedure" clause.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

Table 8.4.1.23-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Column marked "T0" denotes the initial conditions, while columns marked "T1", "T2", “T3” and “T4” are to be applied subsequently. The exact instants on which these values shall be applied are described in the text in this clause.

**Table 8.4.1.23-1**

| Parameter | Unit | Cell 1 | | | | | Cell 2 | | | | | Cell 3 | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T4 | T0 | T1 | T2 | T3 | T4 | T0 | T1 | T2 | T3 | T4 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | | Mid Range Test Frequency | | | | | Mid Range Test Frequency | | | | |
| CPICH Ec | dBm | -60 | -60 | -60 | -60 | -66 | -80 | -60 | -70 | -70 | OFF | -80 | -60 | OFF | -70 | -60 |

The UE is initially in CELL_DCH state of cell 1 and has received the default broadcast information from SIB11/12 in Cell 1.

SS configures its downlink transmission power settings according to columns "T1" in table 8.4.1.**23**-1. UE shall be triggered to transmit a MEASUREMENT REPORT message, which includes the primary scrambling code for cell 2.

SS then performs a soft handover procedure by sending ACTIVE SET UPDATE message on the downlink DCCH. The UE shall reply with an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH, and include cell 2 to the active set when the activation time specified has elapsed.

SS configures its downlink transmission power settings according to columns "T2" in table 8.4.1.23-1

SS then ask the UE to perform Intra-frequency measurement and report event 1C and event 1D. In MEASUREMENT CONTROL message, IE 'Replacement activation threshold' is set to 3 and IE 'Cell individual offset' is set to +6 dBm for Cell 3. From Rel-5 onwards the UE will send an initial measurement report containing the best cell due to event 1D configuration (R99 & Rel-4 UE releases shall not send a MESUREMENT REPORT). SS configures itself according to the values in columns "T3" shown above. Cell 3 becomes better than Cell 2 that is in active set of the UE, due to parameter 'Cell Individual offset' for Cell 3. However the UE shall not send MEASUREMENT REPORT message indicating event 1C because number of cells in active set is less than parameter 'Replacement Activation Threshold'.

SS then sends MEASUREMENT CONTROL message to the UE to modify earlier configured intra-frequency measurement. Now, IE 'Replacement activation threshold' is set to 1. MEASUREMENT CONTROL message contains only those IEs that are modified and the UE shall continue to use current values of parameters that are not modified. The UE sends MEASUREMENT REPORT message reporting event 1C, monitored Cell 3 is better than Cell 2 that is in active set. The UE sends second MEASUREMENT REPORT message reporting event 1C after 4 seconds, equals to parameter 'Reporting interval'.

SS then performs soft handover procedure by sending ACTIVE SET UPDATE message on the downlink DCCH. In this message SS commands UE to add Cell 3 and remove Cell 2 from active set. The UE shall reply with an ACTIVE SET UPDATE COMPLETE message. The UE shall also stop periodic reporting of event 1C because the Cell that triggered it is added into active set. SS then configures itself according to the values in columns "T4" shown above. This triggers event 1D and the UE sends MEASUREMENT REPORT message indicating Cell 3 as a best cell. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | | | | UE is initially in CELL_DCH state in cell 1. |
| 0a | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.4.1.23-1 |
| 0b | → | | MEASUREMENT REPORT | See specific message contents for this message. |
| 0c | | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.4.1.23-1 |
| 1 | ← | | ACTIVE SET UPDATE | SS command the UE to add Cell 2 in active set. |
| 2 | → | | ACTIVE SET UPDATE COMPLETE | |
| 3 | ← | | MEASUREMENT CONTROL | Event 1C and 1D are configured. IE "Replacement activation threshold" is set to 3. R99 & Rel-4 UE's will go directly to step 4 |
| 3a | → | | MEASUREMENT REPORT (Rel-5 onwards) | Event 1D is triggered. The UE shall report that Cell 1 is the best cell. |
| 4 | | | | SS re-adjusts the downlink transmission power settings according to columns "T3" in table 8.4.1.23-1. |
| 5 | | | | Check for 10 seconds, the UE shall not send MEASUREMENT REPORT message. |
| 6 | ← | | MEASUREMENT CONTROL | Measurement configured in step 3 is modified to set parameter 'replacement activation threshold' to 1. |
| 7 | → | | MEASUREMENT REPORT | Event 1C is triggered. The UE shall report that Cell 3 is better than Cell 2. The report is received within 4 seconds (reporting interval) |
| 8 | → | | MEASUREMENT REPORT | The UE shall send second report after 4 seconds (Reporting interval) |
| 9 | ← | | ACTIVE SET UPDATE | SS command the UE to replace Cell 2 in active set by Cell 3. |
| 10 | → | | ACTIVE SET UPDATE COMPLETE | |
| 11 | | | | Check for 10 seconds, the UE shall not send MEASUREMENT REPORT message. |
| 12 | | | | SS re-adjusts the downlink transmission power settings according to columns "T4" in table 8.4.1.23-1. |
| 13 | → | | MEASUREMENT REPORT | The UE shall report event 1D change of best cell |
| 14 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

MEASUREMENT REPORT (Step 0b)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 3 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | The UE may include either or both of the following cells.(the order in which the different cells are reported is not important) |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 1)

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary scrambling code | Primary scrambling code of Cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH may be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation infomation | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Code number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not present | |
| - TFCI combining indicator | TRUE | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 3)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measurement command | Setup |
| - CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - Intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | |
| - Intra-frequency cell id | Id of Cell 3 |
| - Cell info | |
| - Cell individual offset | 6 dBm |
| - Reference time difference to cell | Not present |
| - Read SFN indicator | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary scrambling code | Primary scrambling code of Cell 3 |
| - Primary CPICH TX power | Not present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and Re-selection Info | Not Present |
| - Cell for measurement | |
| - Intra-frequency cell id list | Set to id of cell 1, 2 and 3. |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | 0 |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1C |
| - Replacement activation threshold | 3 |
| - Reporting amount | 16 |
| - Reporting interval | 4 seconds |
| - Hysteresis | 4 (2dB) |
| - Time to trigger | 10 mSec |
| - Reporting cell status | Not present |
| - Intra-frequency event identity | 1D |
| - Hysteresis | 4(2dB) |
| - Time to trigger | 10 mSec |
| - Reporting cell status | Not present |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 3a)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measured results | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1D" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to "Primary scrambling code of Cell 1" |

MEASUREMENT CONTROL (Step 6)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measurement command | Modify |
| - CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not present |
| - Intra-frequency measurement quantity | Not present |
| - Intra-frequency reporting quantity | Not present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1C |
| - Replacement activation threshold | 1 |
| - Reporting amount | 16 |
| - Reporting interval | 4 seconds |
| - Hysteresis | 4 (2dB) |
| - Time to trigger | 10 mSec |
| - Reporting cell status | Not present |
| - Intra-frequency event identity | 1D |
| - Hysteresis | 4(2dB) |
| - Time to trigger | 10 mSec |
| - Reporting cell status | Not present |
| Measurement reporting mode | Not present |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 7 and 8)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measured results | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Checked to see if set to "Intra Frequency Event results" |
| - Event ID | Check to see if set to "1C" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to Primary scrambling code of Cell 3 |
| - Primary scrambling code | Check to see if set to Primary scrambling code of Cell 2 |

ACTIVE SET UPDATE (Step 9)

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary scrambling code | Primary scrambling code of Cell 3 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH may be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | No code change | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not present | R99 and Rel-4 only |
| Radio link removal information | | |
| - Primary CPICH Info | | |
| - Primary scrambling code | Primary scrambling code of Cell 2 | |

MEASUREMENT REPORT (Step 13)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measured results | Check to see if this IE is absent |
| Measured results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to "Intra-frequency event results" |
| - Event ID | Check to see if set to "1D" |
| - Cell measurement event results | |
| - Primary scrambling code | Check to see if set to "Primary scrambling code of Cell 3" |

8.4.1.23.5 Test Requirement

2.A In step 3a a R99 or Rel-4 UE shall not send MEASUREMENT REPORT message, but a Rel-5 and onwards UE shall send a MEASUREMENT REPORT message indicating event 1D.

1.A In steps 7 and 8 the UE shall send MEASUREMENT REPORT message indicating event 1C. IE 'Cell measurement event results' in MEASUREMENT REPORT message shall contain primary scrambling code of Cell 3 and Cell 2 in that order.

1.B In step 5 the UE shall not send MEASUREMENT REPORT message.

1.C In step 11 the UE shall not send MEASUREMENT REPORT message.

2.B In step 13 the UE shall send MEASUREMENT REPORT message indicating event 1D. IE 'Cell measurement event results' in MEASUREMENT REPORT message shall contain primary scrambling code of Cell 3.

## 8.4.1.24 Measurement Control and Report: Inter-frequency measurement for event 2A

### 8.4.1.24.1 Definition

### 8.4.1.24.2 Conformance requirement

When event 2a is configured in the UE within a measurement, the UE shall:

1> when the measurement is initiated or resumed:

2> store the used frequency in the variable BEST_FREQUENCY_2A_EVENT.

1> if equation 1 below has been fulfilled for a time period indicated by "Time to trigger" for a frequency included for that event and which is not stored in the variable BEST_FREQUENCY_2A_EVENT:

2> send a measurement report with IEs set as below:

3> set in "inter-frequency measurement event results":

4> "inter-frequency event identity" to "2a"; and

4> "Frequency info" to the frequency that triggered the event; and

4> "Non frequency related measurement event results" to the "Primary CPICH info" of the best primary CPICH for FDD cells or "Primary CCPCH info" to the "Cells parameters ID" of the best primary CCPCH for TDD cells on that frequency, not taking into account the cell individual offset;

3> if a non-used frequency triggered the measurement report:

4> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2, not taking into account the cell individual offset;

3> if the used frequency triggered the measurement report:

4> do not include the IE "Inter-frequency measured results list" in the measurement report;

2> update the variable BEST_FREQUENCY_2A_EVENT with that frequency.

Equation 1:

$$Q_{NotBest} \geq Q_{Best} + H_{2a} / 2$$

The variables in the formula are defined as follows:

$Q_{Not\ Best}$ is the quality estimate of a frequency not stored the "best frequency" in the variable BEST_FREQUENCY_2A_EVENT.

$Q_{Best}$ is the quality estimate of the frequency stored in "best frequency" in the variable BEST_FREQUENCY_2A_EVENT.

$H_{2a}$ is the hysteresis parameter for the event 2a in that measurement.

#### Reference

3GPP TS 25.331 clause 14.2.1.1

### 8.4.1.24.3 Test Purpose

1.A To confirm that the UE sends MEASUREMENT REPORT message if event 2A is configured, and if any of the non- used frequencies quality estimate becomes better than the currently used frequency quality estimate.

1.B To confirm that the UE does not send MEASUREMENT REPORT message indicating event 2A if hysteresis condition is not fulfilled.

1.C To confirm that the UE does not send MEASUREMENT REPORT message indicating event 2A if time to trigger condition is not fulfilled.

8.4.1.24.4 Method of test

Initial Condition

System Simulator: 2 cells – The initial configurations of the 2 cells in the SS shall follow the values indicated in the column marked "T0" in table 8.4.1.24-1. The table is found in "Test Procedure" clause.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Related ICS/IXIT statements

- Compressed mode required yes/no

Test Procedure

Table 8.4.1.24-1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked "T0" denotes the initial conditions, while columns marked "T1", "T2", "T3", "T4" and "T5" are to be applied subsequently. The exact instants on which these values shall be applied are described in the text in this clause.

**Table 8.4.1.24-1**

| Parameter | Unit | Cell 1 | | | | | | Cell 4 | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T4 | T5 | T0 | T1 | T2 | T3 | T4 | T5 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | | | High Range Test Frequency | | | | | |
| CPICH Ec (FDD) | dBm/ 3.84 Mhz | -65 | -63 | -65 | -70 | -65 | -70 | -75 | -60 | -75 | -55 | -75 | -55 |
| P-CCPCH RSCP (TDD) | dBm | -65 | -63 | -65 | -70 | -65 | -70 | -75 | -60 | -75 | -55 | -75 | -55 |
| P-CCPCH TS (3.84Mcps TDD and 7.68Mcps TDD) | | TS 0 | | | | | | TS 4 | | | | | |

The UE is initially in CELL_DCH state of cell 1. SS commands the UE to perform measurements of transmitted power using MEASUREMENT CONTROL message. This measurement is setup to confirm that while sending MEASUREMENT REPORT message, the UE sets IE "Additional measured results" correctly. If UE requires compressed mode (for FDD only), SS performs PHYSICAL CHANNEL RECONFIGURATION procedure to activate compressed mode. SS then commands the UE to perform Inter-frequency measurements and report event 2A by sending MEASUREMENT CONTROL message. In MEASUREMENT CONTROL message, IE "Hysteresis" is set to 14.5 dB and IE "Additional measurement list" is set to id of "UE Internal measurements" configured earlier. SS then configures itself according to the values in columns "T1" shown above. Even though quality estimate for Cell 4 has become better than that of Cell 1, event 2A will not be triggered since hysteresis condition is not fulfilled. SS then configures itself according to the values in columns "T2" shown above.

SS sends MEASUREMENT CONTROL message to modify parameter "Hysteresis" of Inter-frequency measurements to 1 dB. SS then configures Cell 1 and Cell 4 according to columns "T3" for short duration (less than 5 seconds), and then configures itself according to columns "T4" shown above. The UE will not send MEASUREMENT REPORT message because time to trigger condition is not fulfilled. SS then configures itself according to the values in columns "T5" shown above. The UE sends MEASUREMENT REPORT message reporting even 2A as well as measurement of transmitted power.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Important Note: Duration between time instant "T3" and "T4" (between steps 9 and 10 of expected sequence) must be less than 5 seconds.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MEASUREMENT CONTROL | To setup UE Internal measurement. If Compressed Mode not required (refer ICS/IXIT) go to step 4 |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS instructs UE to begin compressed mode operation. (for FDD only) |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | (for FDD only) |
| 4 | ← | | MEASUREMENT CONTROL | SS commands the UE to perform Inter-frequency measurements and to report event 2A. |
| 5 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in table 8.4.1.24-1. |
| 6 | | | | Check for 10 seconds, the UE shall not send MEASUREMENT REPORT message, as hysteresis condition is not fulfilled. |
| 7 | | | | SS re-adjusts the downlink transmission power settings according to columns "T2" in table 8.4.1.24-1. |
| 8 | ← | | MEASUREMENT CONTROL | Modify hysteresis parameter for event 2A. |
| 9 | | | | SS re-adjusts the downlink transmission power settings according to columns "T3" in table 8.4.1.24-1. |
| 10 | | | | SS re-adjusts the downlink transmission power settings according to columns "T4" in table 8.4.1.24-1. This step should be completed within 5 seconds after completing step 9. |
| 11 | | | | Check for 10 seconds, the UE shall not send MEASUREMENT REPORT message, as time to trigger condition is not fulfilled. |
| 12 | | | | SS re-adjusts the downlink transmission power settings according to columns "T5" in table 8.4.1.24-1. |
| 13 | → | | MEASUREMENT REPORT | This message should come at least 5 seconds later after changing power setting of Cell 4. |
| 14 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

MEASUREMENT CONTROL (Step 1) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measurement command | Setup |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| - Measurement quantity | UE transmitted power |
| - Filter Coefficient | 4 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | TRUE |
| - CHOICE mode | FDD |
| - UE Rx-Tx time difference | FALSE |
| - CHOICE report criteria | No reporting |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger Reporting Mode |
| Additional measurements list | Not present |
| DPCH compressed mode status | Not present |

MEASUREMENT CONTROL (Step 1) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measurement command | Setup |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| - Measurement quantity | UE transmitted power |
| - Filter Coefficient | 4 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | TRUE |
| - CHOICE mode | TDD |
| -CHOICE TDD option | 1.28 Mcps TDD |
| - $T_{ADV}$ info | FALSE |
| - CHOICE report criteria | No reporting |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger Reporting Mode |
| Additional measurements list | Not present |
| DPCH compressed mode status | Not present |

MEASUREMENT CONTROL (Step 1) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measurement command | Setup |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| - Measurement quantity | UE transmitted power |
| - Filter Coefficient | 4 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | TRUE |
| - CHOICE mode | TDD |
| -CHOICE TDD option | 3.84 Mcps TDD |
| - Applied TA | FALSE |
| - CHOICE report criteria | No reporting |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger Reporting Mode |
| Additional measurements list | Not present |
| DPCH compressed mode status | Not present |

MEASUREMENT CONTROL (Step 1) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measurement command | Setup |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| - Measurement quantity | UE transmitted power |
| - Filter Coefficient | 4 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | TRUE |
| - CHOICE mode | TDD |
| -CHOICE TDD option | 7.68 Mcps TDD |
| - Applied TA | FALSE |
| - CHOICE report criteria | No reporting |
| Measurement reporting mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger Reporting Mode |
| Additional measurements list | Not present |
| DPCH compressed mode status | Not present |

PHYSICAL CHANNEL RECONFIGURATION (Step 2) (FDD)

Use the same message sub-type found in clause 9 of TS 34.108, which is entitled "(Packet to CELL_DCH from CELL_DCH in PS)FDD", with the following exceptions in the IE(s) concerned:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing Indication | Maintain | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (Single) | |
| - CHOICE Mode | FDD | |
| - Power offset PPilot-DPDCH | 0 | |
| - DL rate matching restriction information | Not present | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Fixed or flexible position | Flexible | |
| - TFCI existence | TRUE | |
| - Number of bits for Pilot bits (SF=128, 256) | Not present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS status flag | Activate | |
| - TGCFN | (Current CFN+(256 – TTI/10msec)) mod 256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | Undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL mode | UL and DL or DL only or UL only depending on UE capability | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 or Not present depending on UE capability | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not present | |
| - DeltaSIRAfter2 | Not present | |
| - N identify abort | Not present | |
| - T Reconfirm abort | Not present | |
| - TX diversity mode | None | |
| - SSDT information | Not present | R99 and Rel-4 only |
| - Default DPCH offset value | Not present | |

MEASUREMENT CONTROL (Step 4) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency info list | |
| - Inter-frequency cell id | Id of Cell 4 |
| - Frequency Information | Frequency of Cell 4 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - CHOICE mode | FDD |
| - Read SFN Indicator | FALSE |
| - Primary CPICH Info | |
| - Primary scrambling code | Primary scrambling code of Cell 4 |
| - Primary CPICH TX power | Not present |
| - TX Diversity Indicator | FALSE |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - Filter Coefficient | 0 |
| - Frequency quality estimate quantity | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | CELL_DCH state |
| - Inter-frequency SET UPDATE | |
| - UE autonomous update mode | On with no reporting |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2A |
| - Used frequency threshold | Not present |
| - Used frequency W | 0 |
| - Hysteresis | 29 (14.5 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| - Non-used frequency parameter list | |
| - Non-used frequency threshold | -72 dBm |
| - Non-used frequency W | 0 |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | |
| - Measurement identity | 1 |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 4) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement objects list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency cells | |
| - Inter-frequency cell id | Id of Cell 4 |
| - Frequency Info | Frequency of Cell 4 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| -CHOICE TDD option | 1.28 Mcps TDD |
| - Cell parameters ID | Cell parameters ID of Cell 4 |
| - Primary CCPCH TX power | Not present |
| - Timeslot list | Not present |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | P-CCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | CELL_DCH state |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2A |
| - Threshold used frequency | Not present |
| - W used frequency | 0 |
| - Hysteresis | 29 (14.5 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| - Parameters required for each non-used frequency | |
| - Threshold non-used frequency | -72 dBm |
| - W non-used frequency | 0 |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | |
| - Measurement identity | 1 |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 4) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement objects list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency cells | |
| - Inter-frequency cell id | Id of Cell 4 |
| - Frequency Info | Frequency of Cell 4 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | SyncCase 1 |
| - Timeslot | 4 |
| - Cell parameters ID | Cell parameters ID of Cell 4 |
| - SCTD indicator | FALSE |
| - Primary CCPCH TX power | Not present |
| - Timeslot list | Not present |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - CHOICE mode | TDD |
| - Measurement quantity for frequency quality estimate | P-CCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | CELL_DCH state |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2A |
| - Threshold used frequency | Not present |
| - W used frequency | 0 |
| - Hysteresis | 29 (14.5 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| - Parameters required for each non-used frequency | |
| - Threshold non-used frequency | -72 dBm |
| - W non-used frequency | 0 |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | |
| - Measurement identity | 1 |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 4) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement objects list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency cells | |
| - Inter-frequency cell id | Id of Cell 4 |
| - Frequency Info | Frequency of Cell 4 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | SyncCase 1 |
| - Timeslot | 4 |
| - Cell parameters ID | Cell parameters ID of Cell 4 |
| - SCTD indicator | FALSE |
| - Primary CCPCH TX power | Not present |
| - Timeslot list | Not present |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - CHOICE mode | TDD |
| - Measurement quantity for frequency quality estimate | P-CCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | CELL_DCH state |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2A |
| - Threshold used frequency | Not present |
| - W used frequency | 0 |
| - Hysteresis | 29 (14.5 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| - Parameters required for each non-used frequency | |
| - Threshold non-used frequency | -72 dBm |
| - W non-used frequency | 0 |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | |
| - Measurement identity | 1 |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 8)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Modify |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency info list | Not present |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | Not present |
| - Inter-frequency reporting quantity | Not present |
| - Measurement validity | Not present |
| - UE autonomous update mode | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2A |
| - Threshold used frequency | Not present |
| - W used frequency | 0 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| - Parameters required for each non-used frequency | |
| - Threshold non-used frequency | -72 dBm |
| - W non-used frequency | 0 |
| Measurement reporting mode | Not present |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 13) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 2 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | |
| - Measured results | UE internal measured results |
| - UE transmitted power | Check to see if it is present |
| - UE RX TX report entry list | Check to see if it is absent |
| Event results | Inter-frequency measurement event results, |
| - Inter-frequency event identity | 2A |
| - Cell measurement event results | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_4$ |
| - Primary CPICH info | |
| - Primary scrambling code | Primary scrambling code of Cell 4 |

MEASUREMENT REPORT (Step 13) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 2 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | |
| - Measured results | UE internal measured results |
| - UE transmitted power | Check to see if it is present |
| - $T_{ADV}$ | Check to see if it is absent |
| Event results | Check to see if set to "Inter-frequency measurement event results" |
| - Inter-frequency event identity | Check to see if set to "2A" |
| - Inter-frequency Cells | |
| - Frequency info | Check to see if set to Frequency of Cell 4 |
| - Non frequency related measurement event results | |
| - CHOICE mode | Check to see if set to "TDD" |
| - Primary CCPCH info | |
| - Cell parameters ID | Check to see if set to Cell parameter ID of Cell 4 |

MEASUREMENT REPORT (Step 13) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 2 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | |
| - Measured results | UE internal measured results |
| CHOICE mode | Check to see if set to "TDD" |
| - UE transmitted power | Check to see if it is present |
| CHOICE TDD option | Check to see if set to "3.84 Mcps TDD" |
| - Applied TA | Check to see if it is absent |
| Event results | Check to see if set to "Inter-frequency measurement event results" |
| - Inter-frequency event identity | Check to see if set to "2A" |
| - Inter-frequency Cells | |
| - Frequency info | Check to see if set to Frequency of Cell 4 |
| - Non frequency related measurement event results | |
| CHOICE mode | Check to see if set to "TDD" |
| - Primary CCPCH info | |
| CHOICE mode | Check to see if set to "TDD" |
| CHOICE TDD option | Check to see if set to "3.48 Mcps TDD" |
| CHOISE SyncCase | Check to see if set to "Sync Case 1" |
| - Timeslot | Check to see if set to "4" |
| - Cell parameters ID | Check to see if set to Cell parameter ID of Cell 4 |
| - SCTD indicator | Check to see if set to "FALSE" |

MEASUREMENT REPORT (Step 13) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 2 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | |
| - Measured results | UE internal measured results |
| CHOICE mode | Check to see if set to "TDD" |
| - UE transmitted power | Check to see if it is present |
| CHOICE TDD option | Check to see if set to "7.68 Mcps TDD" |
| - Applied TA | Check to see if it is absent |
| Event results | Check to see if set to "Inter-frequency measurement event results" |
| - Inter-frequency event identity | Check to see if set to "2A" |
| - Inter-frequency Cells | |
| - Frequency info | Check to see if set to Frequency of Cell 4 |
| - Non frequency related measurement event results | |
| CHOICE mode | Check to see if set to "TDD" |
| - Primary CCPCH info | |
| CHOICE mode | Check to see if set to "TDD" |
| CHOICE TDD option | Check to see if set to "7.68 Mcps TDD" |
| CHOISE SyncCase | Check to see if set to "Sync Case 1" |
| - Timeslot | Check to see if set to "4" |
| - Cell parameters ID | Check to see if set to Cell parameter ID of Cell 4 |
| - SCTD indicator | Check to see if set to "FALSE" |

#### 8.4.1.24.5 Test Requirement

1.A In step 13 the UE shall send MEASUREMENT REPORT message indicating event 2A. IE ' Inter-frequency Cells ' in MEASUREMENT REPORT message shall contain frequency information and primary scrambling code (for FDD) or Cell parameters ID (forTDD) of Cell 4.

1.B In step 6, the UE shall not send MEASUREMENT REPORT message.

1.C In step 11, the UE shall not send MEASUREMENT REPORT message.

### 8.4.1.24A Measurement Control and Report: Inter-band measurement for event 2A

#### 8.4.1.24A.1 Definition

This test case is identical to test case 8.4.1.24 except that the cells belong to different frequency bands.

#### 8.4.1.24A.2 Conformance requirement

Same conformance requirement as in clause 8.4.1.24.2.

#### 8.4.1.24A.3 Test Purpose

Same test purpose as in clause 8.4.1.24.3 except that the cells belong to different frequency bands.

#### 8.4.1.24A.4 Method of test

##### Initial Condition

Same initial conditions as in clause 8.4.1.24.4 except that cell1 and cell4 use URAFCNs selected from different frequency band.

##### Related ICS/IXIT statements

- Compressed mode required yes/no
- UE supports multiple bands simultaneously yes/no

##### Test Procedure

Same test procedure as in clause 8.4.1.24.4.

Note: If the UE supports more than 2 frequency bands, the test may be executed for various band combinations.

Expected Sequence

Same expected sequence as in clause 8.4.1.24.4.

Specific Message Content

Same specific message content as in clause 8.4.1.24.4.

#### 8.4.1.24A.5 Test Requirement

Same test requirement as in clause 8.4.1.24.5.

### 8.4.1.25 Measurement Control and Report: Inter-frequency measurement for events 2B and 2E

#### 8.4.1.25.1 Definition

#### 8.4.1.25.2 Conformance requirement

When event 2b is configured in the UE within a measurement, the UE shall:

1> if equations 1 and 2 below have been fulfilled for a time period indicated by "Time to Trigger" from the same instant, respectively for one or several non-used frequencies included for that event and for the used frequency:

2> if any of those non-used frequency is not stored in the variable TRIGGERED_2B_EVENT:

3> store the non-used frequencies that triggered the event and that were not previously stored in the variable TRIGGERED_2B_EVENT into that variable;

3> send a measurement report with IEs set as below:

4> set in "inter-frequency measurement event results":

5> "inter-frequency event identity" to "2b"; and

5> for each non-used frequency that triggered the event, beginning with the best frequency:

6> "Frequency info" to that non-used frequency; and

6> "Non frequency related measurement event results" to the "Primary CPICH info" of the best primary CPICH for FDD cells or "Primary CCPCH info" to the "Cell parameters ID" of the best primary CCPCH for TDD cells on that non-used frequency, not taking into account the cell individual offset;

4> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2, not taking into account the cell individual offset;

1> if equation 3 below is fulfilled for a non-used frequency stored in the variable TRIGGERED_2B_EVENT:

2> remove that non-used frequency from the variable TRIGGERED_2B_EVENT.

1> if equation 4 below is fulfilled for the used frequency:

2> clear the variable TRIGGERED_2B_EVENT.

Triggering conditions:

Equation 1:

$$Q_{Non\ used} \geq T_{Non\ used\ 2b} + H_{2b} / 2$$

The variables in the formula are defined as follows:

$Q_{Non\ used}$ is the quality estimate of a non-used frequency that becomes better than an absolute threshold.

$T_{Non\ used\ 2b}$ is the absolute threshold that applies for this non-used frequency in that measurement.

$H_{2b}$ is the hysteresis parameter for the event 2b.

Equation 2:

$$Q_{Used} \leq T_{Used\ 2b} - H_{2b} / 2$$

The variables in the formula are defined as follows:

$Q_{Used}$ is the quality estimate of the used frequency.

$T_{Used\ 2b}$ is the absolute threshold that applies for the used frequency in that measurement.

$H_{2b}$ is the hysteresis parameter for the event 2b.

Leaving triggered state condition:

Equation 3:

$$Q_{Non\ used} < T_{Non\ used\ 2b} - H_{2b} / 2$$

The variables in the formula are defined as follows:

$Q_{Non\ used}$ is the quality estimate of a non-used frequency that is stored in the variable TRIGGERED_2B_EVENT.

$T_{Non\ used\ 2b}$ is the absolute threshold that applies for this non-used frequency in that measurement.

$H_{2b}$ is the hysteresis parameter for the event 2b.

Equation 4:

$$Q_{Used} > T_{Used\ 2b} + H_{2b} / 2$$

The variables in the formula are defined as follows:

$Q_{Used}$ is the quality estimate of the used frequency.

$T_{Used\ 2b}$ is the absolute threshold that applies for the used frequency in that measurement.

$H_{2b}$ is the hysteresis parameter for the event 2b.

…

When event 2e is configured in the UE within a measurement, the UE shall:

1> if equation 1 below has been fulfilled for one or several non-used frequencies included for that event during the time "Time to trigger":

2> if any of those non-used frequencies is not stored in the variable TRIGGERED_2E_EVENT:

3> store the non-used frequencies that triggered the event and that were not previously stored in the variable TRIGGERED_2E_EVENT into that variable;

3> send a measurement report with IEs set as below:

4> set in "inter-frequency measurement event results":

5> "inter-frequency event identity" to "2e"; and

5> for each non-used frequency that triggered the event, beginning with the best frequency:

6> "Frequency info" to that non-used frequency; and

6> "Non frequency related measurement event results" to the "Primary CPICH info" of the best primary CPICH for FDD cells or "Primary CCPCH info" to the "Cell parameters ID" of the

best primary CCPCH for TDD cells on that non-used frequency, not taking into account the cell individual offset;

4> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2, not taking into account the cell individual offset;

1> if equation 2 below is fulfilled for a non-used frequency stored in the variable TRIGGERED_2E_EVENT:

2> remove that non-used frequency from the variable TRIGGERED_2E_EVENT.

Triggering condition:

Equation 1:

$$Q_{Non\ used} \leq T_{Non\ used\ 2e} - H_{2e} / 2$$

The variables in the formula are defined as follows:

$Q_{Non\ used}$ is the quality estimate of a non-used frequency that becomes worse than an absolute threshold.

$T_{Non\ used\ 2e}$ is the absolute threshold that applies for that non-used frequency for that event.

$H_{2e}$ is the hysteresis parameter for the event 2e.

Leaving triggered state condition:

Equation 2:

$$Q_{Non\ used} > T_{Non\ used\ 2e} + H_{2e} / 2$$

The variables in the formula are defined as follows:

$Q_{Non\ used}$ is the quality estimate of a non-used frequency stored in the variable TRIGGERED_2E_EVENT.

$T_{Non\ used\ 2e}$ is the absolute threshold that applies for that non-used frequency for that event.

$H_{2e}$ is the hysteresis parameter for the event 2e.

### Reference

3GPP TS 25.331 clause 14.2.1.2, 14.2.1.5.

### 8.4.1.25.3 Test Purpose

1. To confirm that the UE sends MEASUREMENT REPORT message when event 2E is configured and the estimated quality of a non-used frequency is below the value of the IE "Threshold non-used frequency". This MEASUREMENT REPORT message shall contain at least the best primary CPICH info (for FDD) or primary CCPCH info (for TDD) on the non-used frequency that triggered the event.

2. To confirm that the UE sends MEASUREMENT REPORT message when event 2B is configured and estimated quality of the currently used frequency is below the value of the IE "Threshold used frequency" and the estimated quality of a non-used frequency is above the value of the IE "Threshold non-used frequency". This MEASUREMENT REPORT message shall contain at least the best primary CPICH info (for FDD) or primary CCPCH info (for TDD)on the non-used frequency that triggered the event.

### 8.4.1.25.4 Method of test

#### Initial Condition

System Simulator: 2 cells – The initial configurations of the 2 cells in the SS shall follow the values indicated in the column marked "T0" in table 8.4.1.25-1. The table is found in "Test Procedure" clause.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Related ICS/IXIT statements

- Compressed mode required yes/no

Test Procedure

Table 8.4.1.25-1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked "T0" denotes the initial conditions, while columns marked "T1" and "T2" are to be applied subsequently. The exact instants on which these values shall be applied are described in the text in this clause.

**Table 8.4.1.25-1**

| Parameter | Unit | Cell 1 | | | Cell 4 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | High Range Test Frequency | | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -55 | -55 | -85 | -85 | -55 | -55 |
| P-CCPCH RSCP(TDD) | dBm | -60 | -60 | -80 | -80 | -60 | -60 |
| P-CCPCH TS (3.84 Mcps TDD) and 7.68 Mcps TDD | | TS 0 | | | TS 4 | | |

The UE is initially in CELL_DCH state of cell 1. SS commands the UE to perform Inter-frequency measurements and report event 2B and event 2E by sending MEASUREMENT CONTROL message. Note that the Filter Coefficient IE has a value of 4 so Layer 3 Filtering applies in this case.

If UE requires compressed mode, SS performs PHYSICAL CHANNEL RECONFIGURATION procedure to activate compressed mode (for FDD only).

Since quality estimate of non-used frequency is below threshold, the UE sends MEASUREMENT REPORT message indicating event 2E.

SS then configures itself according to the values in columns "T1" shown above. Now quality estimate of used and non-used frequency is above threshold and hence neither event 2B nor event 2E will be triggered. SS then configures itself according to the values in columns "T2" shown above. Quality estimate for used frequency is now below threshold, while that of non-used frequency is above threshold, the UE sends MEASUREMENT REPORT message to report event 2B.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MEASUREMENT CONTROL | SS commands the UE to perform Inter-frequency measurements and to report event 2B and 2E. If Compressed Mode not required (refer ICS/IXIT) go to step 4 |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS instructs UE to begin compressed mode operation. (for FDD only) |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | (for FDD only) |
| 4 | → | | MEASUREMENT REPORT | The UE shall report event 2E. Time duration between activation of compressed mode and reception of this message should be at least 5 seconds. Layer 3 Filtering causes an additional delay. |
| 5 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in table 8.4.1.25-1. |
| 6 | | | | Check for 10 seconds the UE shall not send measurement report message. |
| 7 | | | | SS re-adjusts the downlink transmission power settings according to columns "T2" in table 8.4.1.25-1. |
| 8 | → | | MEASUREMENT REPORT | The UE shall report event 2B. Time duration between changing power levels according to columns "T2" and reception of this message should be at least 5 seconds. Layer 3 Filtering causes an additional delay. For Cell 1 the CPICH Ec value of -80 dBm(for FDD)or the P-CCPCH RSCP value of -75 dBm (for TDD) would have to be reported at least three times from the Physical Layer to cause the Cell 1 frequency threshold to be reached. Depending on tolerance values this number will be greater (CPICH Ec (for FDD) or P-CCPCH RSCP(for TDD) is +/- 3 dBm, SS set Hysteresis value is +/- 2dB) |
| 9 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

MEASUREMENT CONTROL (Step 1)(FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 4 |
| Measurement command | Setup |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency info list | |
| - Inter-frequency cell id | Id of Cell 4 |
| - Frequency Information | Frequency of Cell 4 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - CHOICE mode | FDD |
| - Read SFN Indicator | FALSE |
| - Primary CPICH Info | |
| - Primary scrambling code | Primary scrambling code of Cell 4 |
| - Primary CPICH TX power | Not present |
| - TX Diversity Indicator | FALSE |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - Filter Coefficient | 4 |
| - Frequency quality estimate quantity | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | Not present |
| - Inter-frequency SET UPDATE | |
| - UE autonomous update mode | On with no reporting |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2E |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| - Non used frequency parameter list | |
| - Non used frequency threshold | -70 dBm |
| - Non used frequency W | 0 |
| - Inter-frequency event identity | 2B |
| - Used frequency threshold | -70 dBm |
| - Used frequency W | 0.4 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Within active set or within virtual active set or of the other RAT |
| - Maximum number of reporting cells | 1 |
| - Non used frequency parameter list | |
| - Non used frequency threshold | -70 dBm |
| - Non used frequency W | 0 |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Unacknowledged Mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 1)( 1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 4 |
| Measurement command | Setup |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement objects list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency cells | |
| - Inter-frequency cell id | Id of Cell 4 |
| - Frequency Information | Frequency of Cell 4 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD Indicator | FALSE |
| - Cell parameters ID | Cell parameters ID of Cell 4 |
| - Primary CCPCH TX power | Not present |
| - Timeslot list | Not present |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 4 |
| - CHOICE mode | TDD |
| - Measurement quantity for frequency quality estimate | P-CCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2E |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -70dBm |
| - W non-used frequency | 0 |
| - Inter-frequency event identity | 2B |
| - Threshold used frequency | -70 dBm |
| - W used frequency | 0.4 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Within active set or within virtual active set or of the other RAT |
| - Maximum number of reporting cells | 1 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -70 dBm |
| - W non-used frequency | 0 |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Unacknowledged Mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |

| Information Element | Value/remark |
|---|---|
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 1)( 3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 4 |
| Measurement command | Setup |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement objects list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency cells | |
| - Inter-frequency cell id | Id of Cell 4 |
| - Frequency Information | Frequency of Cell 4 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE SyncCase | SyncCase 1 |
| - Timeslot | 4 |
| - Cell parameters ID | Cell parameters ID of Cell 4 |
| - SCTD indicator | FALSE |
| - Primary CCPCH TX power | Not present |
| - Timeslot list | Not present |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 4 |
| - CHOICE mode | TDD |
| - Measurement quantity for frequency quality estimate | P-CCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2E |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Within active set or within virtual active set or of the other RAT |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -70dBm |
| - W non-used frequency | 0 |
| - Inter-frequency event identity | 2B |
| - Threshold used frequency | -70 dBm |
| - W used frequency | 0.4 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| - Maximum number of reporting cells | 1 |

| Information Element | Value/remark |
|---|---|
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -70 dBm |
| - W non-used frequency | 0 |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Unacknowledged Mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 1)( 3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 4 |
| Measurement command | Setup |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement objects list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency cells | |
| - Inter-frequency cell id | Id of Cell 4 |
| - Frequency Information | Frequency of Cell 4 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | SyncCase 1 |
| - Timeslot | 4 |
| - Cell parameters ID | Cell parameters ID of Cell 4 |
| - SCTD indicator | FALSE |
| - Primary CCPCH TX power | Not present |
| - Timeslot list | Not present |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 4 |
| - CHOICE mode | TDD |
| - Measurement quantity for frequency quality estimate | P-CCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2E |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Within active set or within virtual active set or of the other RAT |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -70dBm |
| - W non-used frequency | 0 |
| - Inter-frequency event identity | 2B |
| - Threshold used frequency | -70 dBm |
| - W used frequency | 0.4 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| - Maximum number of reporting cells | 1 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -70 dBm |
| - W non-used frequency | 0 |
| Measurement reporting mode | |

| Information Element | Value/remark |
|---|---|
| - Measurement reporting transfer mode | Unacknowledged Mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type found in Annex A, which is entitled "(Packet to CELL_DCH from CELL_DCH in PS)", with the following exceptions in the IE(s) concerned:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing Indication | Maintain | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (Single) | |
| - CHOICE Mode | FDD | |
| - Power offset PPilot-DPDCH | 0 | |
| - DL rate matching restriction information | Not present | |
| - Spreading factor | Refer to the parameter set in TS 34.108 | |
| - Fixed or flexible position | Flexible | |
| - TFCI existence | TRUE | |
| - Number of bits for Pilot bits (SF=128, 256) | Not present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS status flag | Activate | |
| - TGCFN | (Current CFN+(256 – TTI/10msec)) mod 256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | Undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL mode | UL and DL or DL only or UL only depending on UE capability | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 or Not present depending on UE capability | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not present | |
| - DeltaSIRAfter2 | Not present | |
| - N identify abort | Not present | |
| - T Reconfirm abort | Not present | |
| - TX diversity mode | None | |
| - SSDT information | Not present | R99 and Rel-4 only |
| - Default DPCH offset value | Not present | |

MEASUREMENT REPORT (Step 4) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 4 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | Inter-frequency measurement event results, |
| - Inter-frequency event identity | 2E |
| - Cell measurement event results | |
| - Frequency info | |
| - UARFCN uplink (Nu) | The presence of this IE is not checked |
| - UARFCN downlink (Nd) | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_4$ |
| - Primary CPICH info | |
| - Primary scrambling code | Primary scrambling code of Cell 4 |

MEASUREMENT REPORT (Step 4) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 4 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | |
| - CHOICE event results | Check to see if set to “Inter-frequency measurement event results” |
| - Inter-frequency event identity | Check to see if set to “2E” |
| - Inter-frequency cells | |
| - Frequency info | Check to see if set to Frequency of Cell 4 |
| - Non-frequency related measurement event results | |
| - CHOICE mode | Check to see if set to “TDD” |
| - Primary CCPCH info | |
| - CHOICE mode | Check to see if set to “TDD” |
| - CHOICE mode option | Check to see if set to “1.28 Mcps TDD” |
| - TSTD Indicator | Check to see if set to “FALSE” |
| - Cell parameters ID | Check to see if set to Cell parameters ID of Cell 4 |
| - SCTD Indicator | Check to see if set to “FALSE” |

MEASUREMENT REPORT (Step 4) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 4 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | |
| - CHOICE event results | Check to see if set to “Inter-frequency measurement event results” |
| - Inter-frequency event identity | Check to see if set to “2E” |
| - Inter-frequency cells | |
| - Frequency info | Check to see if set to Frequency of Cell 4 |
| - Non-frequency related measurement event results | |
| - CHOICE mode | Check to see if set to “TDD” |
| - Primary CCPCH info | |
| CHOICE mode | Check to see if set to “TDD” |
| - CHOICE mode option | Check to see if set to “3.48 Mcps TDD” |
| CHOISE SyncCase | Check to see if set to “Sync Case 1” |
| - Timeslot | Check to see if set to “4” |
| - Cell parameters ID | Check to see if set to Cell parameters ID of Cell 4 |
| - SCTD indicator | Check to see if set to “FALSE” |

MEASUREMENT REPORT (Step 4) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 4 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | |
| - CHOICE event results | Check to see if set to “Inter-frequency measurement event results” |
| - Inter-frequency event identity | Check to see if set to “2E” |
| - Inter-frequency cells | |
| - Frequency info | Check to see if set to Frequency of Cell 4 |
| - Non-frequency related measurement event results | |
| - CHOICE mode | Check to see if set to “TDD” |
| - Primary CCPCH info | |
| CHOICE mode | Check to see if set to “TDD” |
| - CHOICE mode option | Check to see if set to “7.68 Mcps TDD” |
| CHOISE SyncCase | Check to see if set to “Sync Case 1” |
| - Timeslot | Check to see if set to “4” |
| - Cell parameters ID | Check to see if set to Cell parameters ID of Cell 4 |
| - SCTD indicator | Check to see if set to “FALSE” |

MEASUREMENT REPORT (Step 8) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 4 |
| Measured results | Inter-frequency measured results |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_4$ |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Mode Specific Info | FDD |
| - Primary CPICH Info | |
| - Primary scrambling code | Primary scrambling code for cell 4 |
| - CPICH Ec/No | Check to see if it is absent |
| - CPICH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | Inter-frequency measurement event results, |
| - Inter-frequency event identity | 2B |
| - Cell measurement event results | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_4$ |
| - Primary CPICH info | |
| - Primary scrambling code | Primary scrambling code of Cell 4 |

MEASUREMENT REPORT (Step 8) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 4 |
| Measured results | Check to see if it set to “Inter-frequency measured results list” |
| - Frequency information | Check to see if set to Frequency of Cell 4 |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measured results | |
| - Cell measurement results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | Check to see if set to “TDD” |
| - Cell parameters ID | Check to see if set to Cell parameters ID for cell 4 |
| - Proposed TGSN | Check to see if it is absent |
| - Primary CCPCH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| - Timeslot List/ISCP | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | |
| - CHOICE event results | Check to see if set to “Inter-frequency measurement event results” |
| - Inter-frequency event identity | Check to see if set to “2B” |
| - Inter-frequency cells | |
| - Frequency info | Check to see if set to Frequency of Cell 4 |
| - Non-frequency related measurement event results | |
| - CHOICE mode | Check to see if set to “TDD” |
| - Primary CCPCH info | |
| - CHOICE mode | Check to see if set to “TDD” |
| - CHOICE mode option | Check to see if set to “1.28 Mcps TDD” |
| - TSTD Indicator | Check to see if set to “FALSE” |
| - Cell parameters ID | Check to see if set to Cell parameters ID of Cell 4 |
| - SCTD Indicator | Check to see if set to “FALSE” |

MEASUREMENT REPORT (Step 8) (3.84Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 4 |
| Measured results | Check to see if it set to “Inter-frequency measured results list” |
| - Frequency information | Check to see if set to Frequency of Cell 4 |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measured results | |
| - Cell measurement results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | Check to see if set to “TDD” |
| - Cell parameters ID | Check to see if set to Cell parameters ID for cell 4 |
| - Proposed TGSN | Check to see if it is absent |
| - Primary CCPCH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| - Timeslot list/ISCP | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | |
| - CHOICE event results | Check to see if set to “Inter-frequency measurement event results” |
| - Inter-frequency event identity | Check to see if set to “2B” |
| - Inter-frequency cells | |
| - Frequency info | Check to see if set to Frequency of Cell 4 |
| - Non-frequency related measurement event results | |
| - CHOICE mode | Check to see if set to “TDD” |
| - Primary CCPCH info | |
| CHOICE mode | Check to see if set to “TDD” |
| - CHOICE mode option | Check to see if set to “3.84 Mcps TDD” |
| CHOISE SyncCase | Check to see if set to “Sync Case 1” |
| - Timeslot | Check to see if set to “4” |
| - Cell parameters ID | Check to see if set to Cell parameters ID of Cell 4 |
| - SCTD indicator | Check to see if set to “FALSE” |

MEASUREMENT REPORT (Step 8) (7.68Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 4 |
| Measured results | Check to see if it set to “Inter-frequency measured results list” |
| - Frequency information | Check to see if set to Frequency of Cell 4 |
| - UTRA carrier RSSI | Check to see if it is absent |
| - Inter-frequency cell measured results | |
| - Cell measurement results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | Check to see if set to “TDD” |
| - Cell parameters ID | Check to see if set to Cell parameters ID for cell 4 |
| - Proposed TGSN | Check to see if it is absent |
| - Primary CCPCH RSCP | Check to see if it is present |
| - Pathloss | Check to see if it is absent |
| - Timeslot list/ISCP | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | |
| - CHOICE event results | Check to see if set to “Inter-frequency measurement event results” |
| - Inter-frequency event identity | Check to see if set to “2B” |
| - Inter-frequency cells | |
| - Frequency info | Check to see if set to Frequency of Cell 4 |
| - Non-frequency related measurement event results | |
| - CHOICE mode | Check to see if set to “TDD” |
| - Primary CCPCH info | |
| CHOICE mode | Check to see if set to “TDD” |
| - CHOICE mode option | Check to see if set to “7.68 Mcps TDD” |
| CHOISE SyncCase | Check to see if set to “Sync Case 1” |
| - Timeslot | Check to see if set to “4” |
| - Cell parameters ID | Check to see if set to Cell parameters ID of Cell 4 |
| - SCTD indicator | Check to see if set to “FALSE” |

#### 8.4.1.25.5 Test Requirement

1. In step 4 the UE shall send MEASUREMENT REPORT message indicating event 2E. IE "Cell measurement event results" in this message shall contain frequency information and primary scrambling code(for FDD) or Cell parameters ID (TDD) of Cell 4.

2. In step 8 the UE shall send MEASUREMENT REPORT message indicating event 2B. IE "Cell measurement event results" in this message shall contain frequency information and primary scrambling code (for FDD) or Cell parameters ID (TDD) of Cell 4.

### 8.4.1.25A Measurement Control and Report: Inter-band measurement for events 2B and 2E

#### 8.4.1.25A.1 Definition

This test case is identical to test case 8.4.1.25 except that the cells belong to different frequency bands.

#### 8.4.1.25A.2 Conformance requirement

Same conformance requirement as in clause 8.4.1.25.2.

#### 8.4.1.25A.3 Test Purpose

Same test purpose as in clause 8.4.1.25.3 except that the cells belong to different frequency bands.

#### 8.4.1.25A.4 Method of test

Initial Condition

Same initial conditions as in clause 8.4.1.25.4 except that cell1 and cell4 use URAFCNs selected from different frequency bands.

Related ICS/IXIT statements

- Compressed mode required yes/no
- UE supports multiple bands simultaneously yes/no

Test Procedure

Same test procedure as in clause 8.4.1.25.4.

Note: If the UE supports more than 2 frequency bands, the test may be executed for various band combinations.

Expected Sequence

Same expected sequence as in clause 8.4.1.25.4.

Specific Message Content

Same specific message content as in clause 8.4.1.25.4.

#### 8.4.1.25A.5 Test Requirement

Same test requirement as in clause 8.4.1.25.5.

### 8.4.1.26 Measurement Control and Report: Measurement for events 2D and 2F

#### 8.4.1.26.1 Definition

#### 8.4.1.26.2 Conformance requirement

When event 2d is configured in the UE within a measurement, the UE shall:

1> if equation 1 below has been fulfilled for the used frequency during the time "Time to trigger":

2> if the variable TRIGGERED_2D_EVENT is set to FALSE:

3> set the variable TRIGGERED_2D_EVENT to TRUE;

3> send a measurement report with IEs set as below:

4> set in "inter-frequency event results": "inter-frequency event identity" to "2d" and no IE "Inter-frequency cells";

4> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2.

1> if the variable TRIGGERED_2D_EVENT is set to TRUE and if equation 2 is fulfilled for the used frequency:

2> set the variable TRIGGERED_2D_EVENT to FALSE.

Triggering condition:

Equation 1:

$$Q_{Used} \leq T_{Used\ 2d} - H_{2d} / 2$$

The variables in the formula are defined as follows:

$Q_{Used}$ is the quality estimate of the used frequency.

$T_{Used\ 2d}$ is the absolute threshold that applies for the used frequency and event 2d.

$H_{2d}$ is the hysteresis parameter for the event 2d.

Leaving triggered state condition:

Equation 2:

$$Q_{Used} > T_{Used\ 2d} + H_{2d} / 2$$

The variables in the formula are defined as follows:

$Q_{Used}$ is the quality estimate of the used frequency.

$T_{Used\ 2d}$ is the absolute threshold that applies for the used frequency and event 2d.

$H_{2d}$ is the hysteresis parameter for the event 2d.

…

When event 2f is configured in the UE within a measurement, the UE shall:

1> if equation 1 below has been fulfilled for the used frequency during the time "Time to trigger":

2> if the variable TRIGGERED_2F_EVENT is set to FALSE:

3> set the variable TRIGGERED_2F_EVENT to TRUE;

3> send a measurement report with IEs set as below:

4> set in "inter-frequency event results": "inter-frequency event identity" to "2f", and no IE "Inter-frequency cells";

4> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2.

1> if the variable TRIGGERED_2F_EVENT is set to TRUE and if equation 2 is fulfilled for the used frequency:

2> set the variable TRIGGERED_2F_EVENT to FALSE.

Triggering condition:

Equation 1:

$$Q_{Used} \geq T_{Used\ 2f} + H_{2f} / 2$$

The variables in the formula are defined as follows:

$Q_{Used}$ is the quality estimate of the used frequency.

$T_{Used\ 2f}$ is the absolute threshold that applies for the used frequency and event 2f.

$H_{2f}$ is the hysteresis parameter for the event 2f.

Leaving triggered state condition:

Equation 2:

$$Q_{Used} < T_{Used\ 2f} - H_{2f} / 2$$

The variables in the formula are defined as follows:

$Q_{Used}$ is the quality estimate of the used frequency.

$T_{Used\ 2f}$ is the absolute threshold that applies for the used frequency and event 2f.

$H_{2f}$ is the hysteresis parameter for the event 2f.

Reference

3GPP TS 25.331 clause 14.2.1.4, 14.2.1.6

### 8.4.1.26.3 Test Purpose

1. To confirm that the UE sends MEASUREMENT REPORT message when event 2F is configured and estimated quality of the currently used frequency is above the value of the IE "Threshold used frequency".

2. To confirm that the UE sends MEASUREMENT REPORT message when event 2D is configured and estimated quality of the currently used frequency is below the value of the IE "Threshold used frequency".

### 8.4.1.26.4 Method of test

Initial Condition

System Simulator: 1 cells – The initial configurations of the cell in the SS shall follow the values indicated in the column marked "T0" in table 8.4.1.26-1. The table is found in "Test Procedure" clause.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

Table 8.4.1.26-1 illustrates the downlink power to be applied for the cell at various time instants of the test execution. Column marked "T0" denotes the initial conditions, while columns marked "T1" is to be applied subsequently. The exact instant on which these values shall be applied is described in the text in this clause.

**Table 8.4.1.26-1**

| Parameter | Unit | Cell 1 | |
|---|---|---|---|
| | | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -55 | -75 |
| P-CCPCH RSCP(TDD) | dBm | -60 | -75 |

The UE is initially in CELL_DCH state of cell 1. SS commands the UE to perform Inter-frequency measurements and report event 2D and/or event 2F by sending MEASUREMENT CONTROL message. Since quality estimate of used frequency is above threshold, the UE sends MEASUREMENT REPORT message indicating event 2F. SS then configures itself according to the values in columns "T1" shown above. Quality estimate for used frequency is now below threshold, the UE sends MEASUREMENT REPORT message to report it. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | ← | | MEASUREMENT CONTROL | SS commands the UE to perform Inter-frequency measurements and to report event 2D and 2F. |
| 5 | → | | MEASUREMENT REPORT | The UE shall report event 2F |
| 6 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in table 8.4.1.26-1. |
| 7 | → | | MEASUREMENT REPORT | The UE shall report event 2D. |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

All messages indicated below shall use the same content as described in default message content, with the following exceptions.

MEASUREMENT CONTROL (Step 4) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 10 |
| Measurement command | Setup |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency info list | |
| - Inter-frequency cell id | Any valid identity other than that of Cell 1 |
| - Frequency Information | Any valid frequency other than that of Cell 1 |
| - Cell info | |
| - Cell individual offset | Not present |
| - Reference time difference to cell | Not present |
| - CHOICE mode | FDD |
| - Read SFN Indicator | FALSE |
| - Primary CPICH Info | |
| - Primary scrambling code | Any value of Primary scrambling code |
| - Primary CPICH TX power | Not present |
| - TX Diversity Indicator | FALSE |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - Filter Coefficient | 4 |
| - Frequency quality estimate quantity | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | CELL_DCH state |
| - UE autonomous update mode | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2D |
| - Used frequency threshold | -70 dBm |
| - Used frequency W | 0 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| - Inter-frequency event identity | 2F |
| - Used frequency threshold | -70 dBm |
| - Used frequency W | 0 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Unacknowledged Mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 4) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 10 |
| Measurement command | Setup |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Unacknowledged Mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| - CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency measurement objects list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency info list | |
| - Inter-frequency cell id | Any valid identity other than that of Cell 1 |
| - Frequency Information | Any valid frequency other than that of Cell 1 |
| - Cell info | |
| - Cell individual offset | 0 |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE Mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Any value of Cell parameters ID |
| - SCTD indicator | FALSE |
| - Primary CCPCH TX power | Not present |
| - Timeslot list | Not present |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 4 |
| - CHOICE mode | TDD |
| - Measurement quantity for frequency quality estimate | P-CCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | CELL_DCH state |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2D |
| - Threshold used frequency | -70 dBm |
| - W used frequency | 0 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Report cells within active set |
| - Maximum number of reported cells | 2 |
| - Inter-frequency event identity | 2F |
| - Threshold used frequency | -70 dBm |
| - W used frequency | 0 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 5000 mSec |
| - Reporting cell status | Not present |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 4) (3.84 Mcps TDD)

| Information Element | Value/remark | Release |
|---|---|---|
| Measurement identity | 10 | |
| Measurement command | Setup | |
| Measurement reporting mode | | |
| - Measurement reporting transfer mode | Unacknowledged Mode RLC | |
| - Periodic reporting / Event trigger reporting mode | Event trigger | |
| Additional measurement list | Not present | |
| - CHOICE measurement type | Inter-frequency measurement | |
| - Inter-frequency measurement objects list | | |
| - Inter-frequency cell removal | Not present | |
| - New inter-frequency info list | | |
| - Inter-frequency cell id | Any valid identity other than that of Cell 1 | |
| - Frequency Information | Any valid frequency other than that of Cell 1 | |
| - Cell info | | |
| - Cell individual offset | 0 | |
| - Reference time difference to cell | Not present | |
| - Read SFN Indicator | FALSE | |
| - CHOICE mode | TDD | |
| - Primary CCPCH Info | | |
| - CHOICE Mode | TDD | |
| - CHOICE TDD option | 3.84 Mcps TDD | REL-4 |
| - Cell parameters ID | Any value of Cell parameters ID | |
| - SCTD indicator | FALSE | |
| - Primary CCPCH TX power | Not present | |
| - Timeslot list | Not present | |
| - Cell for measurement | Not present | |
| - Inter-frequency measurement quantity | | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria | |
| - Filter Coefficient | 4 | |
| - CHOICE mode | TDD | |
| - Measurement quantity for frequency quality estimate | P-CCPCH RSCP | |
| - Inter-frequency reporting quantity | | |
| - UTRAN Carrier RSSI | FALSE | |
| - Frequency quality estimate | FALSE | |
| - Non frequency related quantities | | |
| - Cell synchronisation information reporting indicator | FALSE | |
| - Cell identity reporting indicator | FALSE | |
| - CHOICE mode | TDD | |
| - Timeslot ISCP reporting indicator | FALSE | |
| - Proposed TGSN reporting indicator | FALSE | |
| - Primary CCPCH RSCP reporting indicator | FALSE | |
| - Pathloss reporting indicator | FALSE | |
| - Measurement validity | CELL_DCH state | |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria | |
| - Parameters required for each events | | |
| - Inter-frequency event identity | 2D | |
| - Threshold used frequency | -70 dBm | |
| - W used frequency | 0 | |
| - Hysteresis | 2 (1 dB) | |
| - Time to trigger | 5000 mSec | |
| - Reporting cell status | Not present | |
| - Inter-frequency event identity | 2F | |
| - Threshold used frequency | -70 dBm | |
| - W used frequency | 0 | |
| - Hysteresis | 2 (1 dB) | |
| - Time to trigger | 5000 mSec | |
| - Reporting cell status | Not present | |
| DPCH compressed mode status info | Not present | |

MEASUREMENT CONTROL (Step 4) (7.68 Mcps TDD)

| Information Element | Value/remark | Release |
|---|---|---|
| Measurement identity | 10 | |
| Measurement command | Setup | |
| Measurement reporting mode | | |
| - Measurement reporting transfer mode | Unacknowledged Mode RLC | |
| - Periodic reporting / Event trigger reporting mode | Event trigger | |
| Additional measurement list | Not present | |
| - CHOICE measurement type | Inter-frequency measurement | |
| - Inter-frequency measurement objects list | | |
| - Inter-frequency cell removal | Not present | |
| - New inter-frequency info list | | |
| - Inter-frequency cell id | Any valid identity other than that of Cell 1 | |
| - Frequency Information | Any valid frequency other than that of Cell 1 | |
| - Cell info | | |
| - Cell individual offset | 0 | |
| - Reference time difference to cell | Not present | |
| - Read SFN Indicator | FALSE | |
| - CHOICE mode | TDD | |
| - Primary CCPCH Info | | |
| - CHOICE Mode | TDD | |
| - CHOICE TDD option | 7.68 Mcps TDD | REL-7 |
| - Cell parameters ID | Any value of Cell parameters ID | |
| - SCTD indicator | FALSE | |
| - Primary CCPCH TX power | Not present | |
| - Timeslot list | Not present | |
| - Cell for measurement | Not present | |
| - Inter-frequency measurement quantity | | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria | |
| - Filter Coefficient | 4 | |
| - CHOICE mode | TDD | |
| - Measurement quantity for frequency quality estimate | P-CCPCH RSCP | |
| - Inter-frequency reporting quantity | | |
| - UTRAN Carrier RSSI | FALSE | |
| - Frequency quality estimate | FALSE | |
| - Non frequency related quantities | | |
| - Cell synchronisation information reporting indicator | FALSE | |
| - Cell identity reporting indicator | FALSE | |
| - CHOICE mode | TDD | |
| - Timeslot ISCP reporting indicator | FALSE | |
| - Proposed TGSN reporting indicator | FALSE | |
| - Primary CCPCH RSCP reporting indicator | FALSE | |
| - Pathloss reporting indicator | FALSE | |
| - Measurement validity | CELL_DCH state | |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria | |
| - Parameters required for each events | | |
| - Inter-frequency event identity | 2D | |
| - Threshold used frequency | -70 dBm | |
| - W used frequency | 0 | |
| - Hysteresis | 2 (1 dB) | |
| - Time to trigger | 5000 mSec | |
| - Reporting cell status | Not present | |
| - Inter-frequency event identity | 2F | |
| - Threshold used frequency | -70 dBm | |
| - W used frequency | 0 | |
| - Hysteresis | 2 (1 dB) | |
| - Time to trigger | 5000 mSec | |
| - Reporting cell status | Not present | |
| DPCH compressed mode status info | Not present | |

MEASUREMENT REPORT (Step 5) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 10 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | Inter-frequency measurement event results, |
| - Inter-frequency event identity | 2F |

MEASUREMENT REPORT (Step 5)( TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 10 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | |
| - CHOICE event results | Check to see if set to Inter-frequency measurement event results, |
| - Inter-frequency event identity | Check to see if set to 2F |

MEASUREMENT REPORT (Step 7) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 10 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | Inter-frequency measurement event results, |
| - Inter-frequency event identity | 2D |

MEASUREMENT REPORT (Step 7)( TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 10 |
| Measured results | Check to see if it is absent |
| Measured results on RACH | Check to see if it is absent |
| Additional measured results | Check to see if it is absent |
| Event results | |
| - CHOICE event results | Check to see if set to Inter-frequency measurement event results, |
| - Inter-frequency event identity | Check to see if set to 2D |

#### 8.4.1.26.5 Test Requirement

1. In step 5 the UE shall send MEASUREMENT REPORT message indicating event 2F.
2. In step 7 the UE shall send MEASUREMENT REPORT message indicating event 2D.

### 8.4.1.27 Measurement Control and Report: UE internal measurement for events 6A and 6B

#### 8.4.1.27.1 Definition

#### 8.4.1.27.2 Conformance requirement

When event 6A is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE transmission power (for TDD within a single TS) becomes larger than a predefined threshold. The corresponding report identifies the threshold that was exceeded.

When event 6B is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE transmission power (for TDD within a single TS) becomes less than a predefined threshold. The corresponding report identifies the threshold that the UE Tx power went below.

Reference

3GPP TS 25.331, clauses 14.6.2.1 and 14.6.2.2.

### 8.4.1.27.3 Test Purpose

1. To confirm that the UE performs UE internal measurements and reporting for events 6A and 6B, when requested by the UTRAN to do so in the MEASUREMENT CONTROL message.

### 8.4.1.27.4 Method of test

Initial Condition

System Simulator: 1 cell, cell 1.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

The UE is in CELL_DCH state in cell 1, after successfully executing procedures P11 or P13 as specified in clause 7.4 of TS 34.108. Next, SS transmits MEASUREMENT CONTROL message to request the UE to perform UE internal measurements and reporting for events 6A and 6B.

SS increases the UE Tx power above the threshold set to event 6A. After 'time to trigger' UE sends MEASUREMENT REPORT, triggered by event 6A, to SS.

SS decreases the UE Tx power below the threshold set to event 6B. After 'time to trigger' UE sends MEASUREMENT REPORT, triggered by event 6B, to SS. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | UE is initially in CELL_DCH state in cell 1. |
| 2 | ← | | MEASUREMENT CONTROL | SS requests for measurement and reporting of events 6A and 6B. |
| 3 | | | | SS sets the UE transmission power above 18 dBm. |
| 4 | → | | MEASUREMENT REPORT | UE shall send 6A event measurement report. |
| 5 | | | | SS sets the UE transmission power below 15 dBm. |
| 6 | → | | MEASUREMENT REPORT | UE shall send 6B event measurement report. |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

MEASUREMENT CONTROL (Step 2) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 5 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement | |
| - UE internal measurement quantity | Present |
| -CHOICE *mode* | FDD |
| -UE internal measurement quantity | UE Transmitted Power |
| -Filter coefficient | 0 |
| - UE internal reporting quantity | Present |
| - UE Transmitted Power | TRUE |
| - CHOICE *mode* | FDD |
| - UE Rx-Tx time difference | FALSE |
| - CHOICE *report criteria* | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| -UE internal event identity | 6A |
| -Time-to-trigger | 100 milliseconds |
| -UE Transmitted Power Tx power threshold | 18 dBm |
| -UE internal event identity | 6B |
| -Time-to-trigger | 100 milliseconds |
| -UE Transmitted Power Tx power threshold | 15 dBm |
| DPCH compressed mode status info | Not Present |

MEASUREMENT CONTROL (Step 2)( 1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 5 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| -CHOICE *mode* | TDD |
| - measurement quantity | UE Transmitted Power |
| -Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | TRUE |
| - CHOICE *mode* | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - $T_{ADV}$ info | FALSE |
| - CHOICE *report criteria* | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| -UE internal event identity | 6A |
| -Time-to-trigger | 100 milliseconds |
| -UE Transmitted Power Tx power threshold | 18 dBm |
| -UE internal event identity | 6B |
| -Time-to-trigger | 100 milliseconds |
| -UE Transmitted Power Tx power threshold | 15 dBm |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 4) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| - UE internal measured results | |
| -CHOICE *mode* | Check to see if set to "FDD" |
| UE Transmitted Power | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6A" |
| -CHOICE *mode* | Check to see if set to "FDD" |
| -Primary CPICH info | Check to see if this IE is absent |

MEASUREMENT REPORT (Step 4)(1.28Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| -CHOICE *mode* | Check to see if set to "TDD" |
| UE Transmitted Power | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6A" |

MEASUREMENT REPORT (Step 6) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| - UE internal measured results | |
| -CHOICE *mode* | Check to see if set to "FDD" |
| UE Transmitted Power | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6B" |
| -CHOICE *mode* | Check to see if set to "FDD" |
| -Primary CPICH info | Check to see if this IE is absent |

MEASUREMENT REPORT (Step 6)(1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| -CHOICE *mode* | Check to see if set to "TDD" |
| - UE Transmitted Power | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6B" |

#### 8.4.1.27.5 Test Requirement

After step 3, the UE shall transmit MEASUREMENT REPORT message, containing measured results for UE transmitted power. The 'Event results' IE contains event identity 6A.

After step 5, the UE shall transmit MEASUREMENT REPORT message, containing measured results for UE transmitted power. The 'Event results' IE contains event identity 6B.

### 8.4.1.28 Measurement Control and Report: UE internal measurement for events 6F (FDD) and 6G

#### 8.4.1.28.1 Definition

#### 8.4.1.28.2 Conformance requirement

When event 6F is ordered by UTRAN in a MEASUREMENT CONTROL message, the UE shall send a MEASUREMENT REPORT message when the UE Rx-Tx time difference becomes larger than the threshold defined by the IE "UE Rx-Tx time difference threshold".

When event 6G is ordered by UTRAN in a MEASUREMENT CONTROL message, the UE shall send a MEASUREMENT REPORT when the UE Rx-Tx time difference becomes less than the threshold defined by the IE "UE Rx-Tx time difference threshold".

Reference

3GPP TS 25.331, clauses 14.6.2.6 and 14.6.2.7.

#### 8.4.1.28.3 Test Purpose

1. To confirm that the UE performs UE internal measurements and reporting for events 6F and 6G, when requested by the UTRAN to do so in the MEASUREMENT CONTROL message.

#### 8.4.1.28.4 Method of test

Initial Condition

System Simulator: 2 cells – The initial configuration of the cells in the SS shall follow the values indicated in table 6.1.2 of TS 34.108.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

Table 8.4.1.28 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1" and "T2" are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.4.1.28**

| Parameter | Unit | Cell 1 | | | Cell 2 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | Mid Range Test Frequency | | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -60 | -60 | -75 | -60 | -70 |

The UE is in CELL_DCH state in cell 1, after successfully executing procedures P11 or P13 as specified in clause 7.4 of TS 34.108.

SS configures its downlink transmission power settings according to columns "T1" in table 8.4.128. UE shall be triggered to transmit a MEASUREMENT REPORT message, which includes the primary scrambling code for cell 2.

After the MEASUREMENT REPORT message is received, SS then performs an active set update procedure by sending ACTIVE SET UPDATE REQUEST message on the downlink DCCH. Cell 2 is to be added to the active set, according to the content of this downlink message. The UE shall reply with an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH, and include cell 2 to the active set when the activation time specified has elapsed. SS then configures its downlink transmission power settings according to columns "T2" in table 8.4.1.28.. SS sets the initial timing of cell 2 to be the timing of cell 1 - 5 chips.

Next, SS transmits MEASUREMENT CONTROL message to request the UE to perform UE internal measurements and reporting for events 6F and 6G.

SS adjusts the Tx timing of cell 2 above the threshold set to event 6F. After 'time to trigger' UE sends MEASUREMENT REPORT, triggered by event 6F, to SS.

SS adjusts the Tx timing of cell 2 below the threshold set to event 6G. After 'time to trigger' UE sends MEASUREMENT REPORT, triggered by event 6G, to SS. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | UE is initially in CELL_DCH state in cell 1. |
| 1a | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.4.1.28. |
| 1b | → | | MEASUREMENT REPORT | See specific message contents for this message. |
| 2 | ← | | ACTIVE SET UPDATE | SS asks UE to add cell 2 into the active set. |
| 3 | → | | ACTIVE SET UPDATE COMPLETE | |
| 3a | | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.4.1.28 |
| 4 | ← | | MEASUREMENT CONTROL | SS requests for measurement and reporting of events 6F and 6G. |
| 5 | | | | SS switches the Tx timing of Cell 2, with respect to Cell 1 to a delay of – 19 chips. |
| 6 | → | | MEASUREMENT REPORT | UE shall send 6F event measurement report. |
| 7 | | | | SS switches the Tx timing of Cell 2 with respect to Cell 1 to a delay of 19 chips. |
| 8 | → | | MEASUREMENT REPORT | UE shall send 6G event measurement report. |
| 9 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

MEASUREMENT REPORT (Step 1b)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info<br>- Message authentication code<br><br><br><br>- RRC Message sequence number | <br>This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I.<br>This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results<br>- Intra-frequency measured results<br><br><br>- Cell measured results<br>- Cell Identity<br>- Cell synchronisation information<br>- Primary CPICH info<br>- Primary scrambling code<br><br>- CPICH Ec/N0<br>- CPICH RSCP<br>- Pathloss<br>- Cell measured results<br>- Cell Identity<br>- Cell synchronisation information<br><br>- Primary CPICH info<br>- Primary scrambling code<br><br>- CPICH Ec/N0<br>- CPICH RSCP<br>- Pathloss | <br>Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important)<br><br>Checked that this IE is absent<br>Checked that this IE is absent<br><br>Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108<br>Checked that this IE is absent<br>Checked that this IE is present<br>Checked that this IE is absent<br><br>Checked that this IE is absent<br>Checked that this IE is present and includes IE COUNT-C-SFN frame difference<br><br>Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108<br>Checked that this IE is absent<br>Checked that this IE is present<br>Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results<br>- Intra-frequency measurement event results<br>- Intra-frequency event identity<br>- Cell measurement event results<br>- Primary CPICH info<br>- Primary scrambling code | <br><br>1a<br><br><br>Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 2)

The contents of ACTIVE SET UPDATE message for this test step is identical to the same message found in Annex A with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| RRC transaction identifier | 0 | |
| Activation Time | [256+Current CFN-[current CFN mod 8 + 8 ]]MOD 256 | |
| Radio link addition information | | |
| - Primary CPICH Info | | |
| - Primary Scrambling Code | Set to same code as assigned for cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | P-CPICH can be used. | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code Number | For each DPCH, assign the same code number in the current code given in cell 1. | |
| - Scrambling code change | Not Present | |
| - TPC Combination Index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Close loop timing adjustment mode | Not Present | |
| - TFCI Combining Indicator | FALSE | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| Radio link removal information | Not Present | |

ACTIVE SET UPDATE COMPLETE (Step 3)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check to see if it is set to 0 |

MEASUREMENT CONTROL (Step 4)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 5 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement | |
| -UE Internal measurement quantity | Present |
| - CHOICE *mode* | FDD |
| - Measurement quantity | UE Rx-Tx time difference |
| - Flter coefficient | 0 |
| - UE internal reporting quantity | Present |
| - UE Transmitted Power | FALSE |
| - CHOICE *mode* | FDD |
| - UE Rx-Tx time difference | TRUE |
| - CHOICE *report criteria* | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| -UE internal event identity | 6F |
| -Time-to-trigger | 0 milliseconds |
| -UE Rx-Tx time difference threshold | 1037 |
| -UE internal event identity | 6G |
| -Time-to-trigger | 0 milliseconds |
| -UE Rx-Tx time difference threshold | 1011 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 6)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| - UE internal measured results | |
| -CHOICE *mode* | Check to see if set to "FDD" |
| UE Rx-Tx report entries | |
| - Primary CPICH info | |
| -Primary scrambling code | Check to see if set to codes assigned for cell 1 & cell 2. UE may report the measured results for the cells in any order. |
| -UE Rx-Tx time difference type 1 | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6F" |
| -CHOICE *mode* | Check to see if set to "FDD" |
| -Primary CPICH info | |
| -Primary scrambling code | Check to see if set to code assigned for cell 2. |

MEASUREMENT REPORT (Step 8)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| - UE internal measured results | |
| -CHOICE *mode* | Check to see if set to "FDD" |
| UE Rx-Tx report entries | |
| - Primary CPICH info | |
| -Primary scrambling code | Check to see if set to codes assigned for cell 1 & cell 2. UE may report the measured results for the cells in any order. |
| -UE Rx-Tx time difference type 1 | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6G" |
| -CHOICE *mode* | Check to see if set to "FDD" |
| -Primary CPICH info | |
| -Primary scrambling code | Check to see if set to code assigned for cell 2 |

#### 8.4.1.28.5 Test Requirement

After step 5, the UE shall transmit MEASUREMENT REPORT message, containing measured results for UE Rx-Tx time difference. The 'Event results' IE contains event identity 6F.

After step 7, the UE shall transmit MEASUREMENT REPORT message, containing measured results for UE Rx-Tx time difference. The 'Event results' IE contains event identity 6G.

### 8.4.1.28A Measurement Control and Report: UE internal measurement for event 6F (1.28 Mcps TDD)

#### 8.4.1.28A.1 Definition

#### 8.4.1.28A.2 Conformance requirement

When event 6F is ordered by UTRAN in a MEASUREMENT CONTROL message, the UE shall send a MEASUREMENT REPORT message when the absolute value of the difference between the measured $T_{ADV}$ and the

$T_{ADV}$ stored in the variable TRIGGERED_6F_EVENT becomes larger than the threshold defined by the IE " $T_{ADV}$ Threshold ".

Reference

3GPP TS 25.331, clauses 14.6.2.6a

### 8.4.1.28A.3 Test Purpose

1. To confirm that the UE performs UE internal measurements and reporting for event 6F, when requested by the UTRAN to do so in the MEASUREMENT CONTROL message.

### 8.4.1.28A.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

The UE is in CELL_DCH state.

SS transmits MEASUREMENT CONTROL message to request the UE to perform UE internal measurements and reporting for event 6F.

SS adjusts the Tx timing of cell 1 until the time difference indicated by $T_{ADV}$ becomes above the threshold set to event 6F. After 'time to trigger' UE sends MEASUREMENT REPORT, triggered by event 6F, to SS.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | UE is initially in CELL_DCH state in cell 1. |
| 2 | ← | | MEASUREMENT CONTROL | SS requests for measurement and reporting of event 6F. |
| 3 | | | | SS adjusts the Tx timing of cell 1 until the time difference indicated by $T_{ADV}$ becomes above a certain threshold. |
| 4 | → | | MEASUREMENT REPORT | UE shall send 6F event measurement report. |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 5 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| -UE Internal measurement quantity | |
| - CHOICE *mode* | TDD |
| - Measurement quantity | $T_{ADV}$ |
| - Flter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | FALSE |
| - CHOICE *mode* | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - $T_{ADV}$ info | TRUE |
| - CHOICE *report criteria* | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| -UE internal event identity | 6F |
| -Time-to-trigger | 0 |
| - $T_{ADV}$ threshold | 60 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 4)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| -CHOICE *mode* | Check to see if set to "TDD" |
| - CHOICE TDD option | Check to see if set to “1.28 Mcps TDD” |
| - $T_{ADV}$ | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6F" |

### 8.4.1.28A.5 Test Requirement

After step 3, the UE shall transmit MEASUREMENT REPORT message, containing measured results for $T_{ADV}$. The 'Event results' IE contains event identity 6F.

## 8.4.1.29 Measurement Control and Report: Event based Traffic Volume measurement in CELL_FACH state.

### 8.4.1.29.1 Definition

### 8.4.1.29.2 Conformance requirement

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in TS 25.331 subclause 8.6 unless otherwise specified below.

The UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> for measurement types "inter-RAT measurement" or "inter-frequency measurement":

…

2> for measurement type "UE positioning measurement":

…

2> for any other measurement type:

3> if the measurement is valid in the current RRC state of the UE:

4> begin measurements according to the stored control information for this measurement identity.

…

For traffic volume measurements in the UE only one quantity is compared with the thresholds. This quantity is Transport Channel Traffic Volume (which equals the sum of Buffer Occupancies of RBs multiplexed onto a transport channel) in number of bytes. Every TTI, UE measures the Transport Channel Traffic Volume for each transport channel and compares it with the configured thresholds. If the monitored Transport Channel Traffic Volume exceeds an absolute threshold, i.e. if TCTV>Reporting threshold, this is an event (event 4a) that could trigger a report. The corresponding report specifies at least which measurement ID the event that triggered the report belongs to.

In CELL_FACH state, the UE shall:

1> transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are met for any ongoing traffic volume measurement or UE positioning measurement that is being performed in the UE;

1> include a measurement report in the IE "Measured results on RACH", as specified in the IE "Intra-frequency reporting quantity for RACH reporting" and the IE "Maximum number of reported cells on RACH" in System Information Block type 12 (or "System Information Block Type 11" if "System Information Block Type 12" is not being broadcast);

1> include in the IE "Measured results on RACH" all requested reporting quantities for cells for which measurements are reported.

Reference

3GPP TS 25.331, clause 14.4.2.1, 3GPP TS 25.331, clause 8.4.1.3, 8.4.2.2.

### 8.4.1.29.3 Test Purpose

1. To verify that in CELL_FACH state when event 4a triggered at TVM set up UE sends Measurement Report with correct measurement identity and indication of UL transport channel type, radio bearer identities and corresponding RLC buffer payloads in number of bytes.

2 To verify that in CELL_FACH state when event 4a triggerreds after TVM set up UE sends Measurement Report with correct measurement identity and indication of UL transport channel type, radio bearer identities and corresponding RLC buffer payloads in number of bytes.

3. To confirm that the UE sends MEASUREMENT REPORT message, with measurement report in IE "Measurement results on RACH" as specified in System Information Block type 12.

### 8.4.1.29.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: Idle state (State 3 or State 7) as specified in clause 7.4 of TS 34.108.

System Information Block type 11 or 12 does not include Traffic Volume measurement system information.

Test Procedure

The UE is brought to the CELL_FACH state after a successful incoming call attempt. The SS follows the procedure in TS 34.108 clause 7.1.3 (Mobile Terminated), to set up a user RAB, but with the default RAB replaced by the one described in 34.108, clause 6.10.2.4.3.2(for FDD) , clause 6.10.3.4.4.2(for 3.84 Mcps TDD), clause 6.11.5.4.4.2(for 1.28 Mcps TDD) or clause 6.11.6.4.4.2(for 7.68 Mcps TDD): Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH for DL and 6.10.2.4.4.1: Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH (for FDD), 6.10.2.4.4.1: Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH (for 3.84 Mcps TDD), clause 6.11.5.4.5.2 Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRBs for DCCH for UL(for 1.28Mcps TDD) or 6.11.6.4.4.1: Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH (for 7.68 Mcps TDD) for DL. The radio bearer is placed into UE test loop mode 1 described in 34.109 clause 5.3. The System Information Block type 12 is modified compared to the default settings so that CPICH RSCP (for FDD) or P-CCPCH RSCP (for TDD) is reported for intra-frequency reporting when transmitting RACH messages. After this modification, SS configures transport channel traffic volume so as to exceed threshold and then sends to UE MEASUREMENT CONTROL message, which includes traffic volume measurement control parameters e.g. uplink transport channel type and reporting threshold. Transport channel traffic volume exceeds threshold and after 'time to trigger' UE sends MEASUREMENT REPORT to SS. SS does not respond and after 'pending time after trigger' UE sends the same MEASUREMENT REPORT again. SS configures UE's transport channel load decreases to zero and UE sends no MEASUREMENT REPORT message. SS configures transport channel traffic volume so as to exceed threshold again and after 'time to trigger' UE sends MEASUREMENT REPORT message to SS. After 'pending time after trigger' UE sends again same MEASUREMENT REPORT message. SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE1 | The SS transmits the message, which includes a allocated identity (P-TMSI). |
| 1a | → | | RRC CONNECTION REQUEST | |
| 1b | ← | | RRC CONNECTION SETUP | |
| 1c | → | | RRC CONNECTION SETUP COMPLETE | |
| 1d | → | | SERVICE REQUEST | |
| 1e | ← | | AUTHENTICATION AND CIPHERING REQUEST | |
| 1f | → | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 1g | ← | | SECURITY MODE COMMAND | |
| 1h | → | | SECURITY MODE COMPLETE | |
| 1i | ← | | ACTIVATE RB TEST MODE | TC |
| 1j | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 1k | ← | | RADIO BEARER SETUP | RRC RAB SETUP<br>See specific message contents for this message |
| 1l | → | | RADIO BEARER SETUP COMPLETE | |
| 1m | ← | | CLOSED UE TEST LOOP | TC<br>UE Test Loop Mode1 |
| 1n | → | | CLOSED UE TEST LOOP COMPLETE | TC |
| 1o | ← | | MASTER INFORMATION BLOCK,<br>SCHEDULING BLOCK 1,<br>SYSTEM INFORMATION BLOCK TYPE 12 | System Information Block type 12 is different from the default settings (see specific message contents) |
| 1p | ← | | SYSTEM INFORMATION CHANGE INDICATION | To notify the modification of SYSTEM INFORMATION BLOCK TYPE 12, this message Is transmitted. |
| 1q | | | | SS configures transport channel traffic volume so as to exceed threshold. |
| 1q | | | | SS configures transport channel traffic volume so as to exceed threshold. |
| 2 | ← | | MEASUREMENT CONTROL | SS provides Traffic Volume measurement criterias to UE. |
| 3 | → | | MEASUREMENT REPORT | UE reports that Traffic Volume measurement event 4A is triggered. |
| 4 | → | | MEASUREMENT REPORT | UE repeats message after 1000 ms. |
| 4a | | | | SS configures UE's transport channel load decreases to zero |
| 4b | | | | SS receive no MEASUREMENT REPORT message. |
| 4c | | | | SS configures transport channel traffic volume so as to exceed threshold |
| 4d | → | | MEASUREMENT REPORT | UE reports that Traffic Volume measurement event 4A is triggered. |
| 4e | → | | MEASUREMENT REPORT | UE repeats message after 1000 ms. |
| 5 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Content

PAGING TYPE 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| CHOICE Used paging identity | CN identity |
| - Paging cause | Terminating Call with one of the supported services |
| - CN domain identity | PS Domain |
| - CHOICE UE Identity | P-TMSI |
| - p-TMSI | Allocated identity during the attach procedure. |
| BCCH modification info | Not Present |

RRC CONNECTION REQUEST (Step 1a)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Check to see if it is set to the same value as "Paging Cause" IE in the PAGING TYPE 1 message transmitted on step 1 |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |

System Information Block type 12 (Step 1o) (FDD)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 5 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 2 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and re-selection info for SIB12 | |
| - $Qoffset1_{s,n}$ | 0dB |
| - $Qoffset2_{s,n}$ | Not present |
| - Maximum allowed UL Tx Power | Reference to table 6.1.1 |
| - HCS neighbouring cell information | Not Present |
| - CHOICE mode | FDD |
| - Qqualmin | Reference to table 6.1.1 |
| - Qrxlevmin | Reference to table 6.1.1 |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 3 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and re-selection info for SIB12 | |
| - $Qoffset1_{s,n}$ | 0dB |
| - $Qoffset2_{s,n}$ | Not present |
| - Maximum allowed UL Tx Power | Reference to table 6.1.1 |
| - HCS neighbouring cell information | Not Present |
| - CHOICE mode | FDD |
| - Qqualmin | Reference to table 6.1.1 |
| - Qrxlevmin | Reference to table 6.1.1 |
| - Intra-frequency cell id | 3 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 4 |
| - Primary CPICH TX power | Not present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and re-selection info for SIB12 | |
| - $Qoffset1_{s,n}$ | 0dB |
| - $Qoffset2_{s,n}$ | Not present |
| - Maximum allowed UL Tx Power | Reference to table 6.1.1 |
| - HCS neighbouring cell information | Not Present |
| - CHOICE mode | FDD |
| - Qqualmin | Reference to table 6.1.1 |
| - Qrxlevmin | Reference to table 6.1.1 |

| Information Element | Value/remark |
|---|---|
| - Intra-frequency cell id | 4 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | TRUE |
| - CHOICE mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 5 |
| - Primary CPICH TX power | Not present |
| - TX Diversity Indicator | FALSE |
| - Cell selection and re-selection info for SIB12 | |
| - $Qoffset1_{s,n}$ | 0dB |
| - $Qoffset2_{s,n}$ | Not present |
| - Maximum allowed UL Tx Power | Reference to table 6.1.1 |
| - HCS neighbouring cell information | Not Present |
| - CHOICE mode | FDD |
| - Qqualmin | Reference to table 6.1.1 |
| - Qrxlevmin | Reference to table 6.1.1 |
| - Intra-frequency Measurement quantity | |
| - Filter Coefficient | Not Present |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency measurement for RACH reporting | |
| - SFN-SFN observed time difference | No report |
| - Reporting quantity | CPICH RSCP |
| - Maximum number of reported cells on RACH | Current cell |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not present |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1a |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Monitored set cells |
| - Reporting Range Constant | 29 (14.5 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0.0 |
| - Hysteresis | 2 (1 dB) |
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | 0 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 60 ms |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| - Reporting Cell Status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Inter-frequency measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

System Information Block type 12 (Step 1o) (1.28 Mcps TDD)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 5 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Cell parameters ID | Set to same Cell parameters ID as used for cell 1 |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Cell selection and Re-selection info | Not present |
| - Intra-frequency Measurement quantity | |
| - Filter Coefficient | Not Present |
| - CHOICE mode | TDD |
| - Measurement quantity | P-CCPCH RSCP |
| - Intra-frequency measurement for RACH reporting | |
| - SFN-SFN observed time difference | No report |
| - CHOICE mode | TDD |
| - Reporting quantity | P-CCPCH RSCP |
| - Maximum number of reported cells on RACH | Current cell |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not present |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1g |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | Not Present |
| - Cells forbidden to affect reporting range | Not Present |
| - W | Not Present |
| - Hysteresis | 2 (1.0 dB) |

| Information Element | Value/remark |
|---|---|
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 60 ms |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| - Reporting Cell Status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within virtual active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Inter-frequency measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

System Information Block type 12 (Step 1o) (3.84 Mcps TDD)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 5 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Cell parameters ID | Set to same Cell parameters ID as used for cell 1 |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Cell selection and Re-selection info | Not present |
| - Intra-frequency Measurement quantity | |
| - Filter Coefficient | Not Present |
| - CHOICE mode | TDD |
| - Measurement quantity | P-CCPCH RSCP |
| - Intra-frequency measurement for RACH reporting | |
| - SFN-SFN observed time difference | No report |
| - CHOICE mode | TDD |
| - Reporting quantity | P-CCPCH RSCP |
| - Maximum number of reported cells on RACH | Current cell |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not present |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1g |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | Not Present |
| - Cells forbidden to affect reporting range | Not Present |
| - W | Not Present |
| - Hysteresis | 2 (1.0 dB) |

| Information Element | Value/remark |
|---|---|
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 60 ms |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| - Reporting Cell Status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within virtual active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Inter-frequency measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

System Information Block type 12 (Step 1o) (7.68 Mcps TDD)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | 5 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Cell parameters ID | Set to same Cell parameters ID as used for cell 1 |
| - Primary CCPCH TX power | Not Present |
| - Timeslot list | Not Present |
| - Cell selection and Re-selection info | Not present |
| - Intra-frequency Measurement quantity | |
| - Filter Coefficient | Not Present |
| - CHOICE mode | TDD |
| - Measurement quantity | P-CCPCH RSCP |
| - Intra-frequency measurement for RACH reporting | |
| - SFN-SFN observed time difference | No report |
| - CHOICE mode | TDD |
| - Reporting quantity | P-CCPCH RSCP |
| - Maximum number of reported cells on RACH | Current cell |
| - Reporting information for state CELL_DCH | |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not present |
| - Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged mode RLC |
| - Periodic Reporting/Event Trigger Reporting Mode | Event trigger |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1g |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Not Present |
| - Reporting Range Constant | Not Present |
| - Cells forbidden to affect reporting range | Not Present |
| - W | Not Present |
| - Hysteresis | 2 (1.0 dB) |

| Information Element | Value/remark |
|---|---|
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 60 ms |
| - Amount of reporting | Infinity |
| - Reporting interval | 16 seconds |
| - Reporting Cell Status | |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within virtual active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| - Inter-frequency measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

MASTER INFORMATION BLOCK (Step 1o)

Use the same message sub-type found in clause 6.1 of TS 34.108, with the following exception:

| Information Element | Value/remark |
|---|---|
| MIB Value tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |
| SB 1 Cell Value tag | Set to (Current SB 1 value tag + 1) |

SCHEDULING BLOCK 1 (Step 1o)

| Information Element | Value/remark |
|---|---|
| SIB 12 Cell Value tag | Set to (Current SIB 12 value tag + 1) |

SYSTEM INFORMATION CHANGE INDICATION (Step 1p)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| BCCH modification info | |
| MIB Value Tag | A valid MIB value tag as defined in TS 25.331 that is different from the previous value |
| BCCH Modification time | Not Present |

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Traffic volume measurement |
| - Traffic volume measurement object | |
| - Uplink transport channel type | RACH |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC buffer payload |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | TRUE |
| - Average of RLC Buffer Payload for each RB | FALSE |
| - Variance of RLC Buffer Payload for each RB | FALSE |
| - Measurement validity | |
| - UE state | All states except CELL_DCH |
| CHOICE report criteria | Traffic volume measurement reporting criteria |
| - Parameters sent for each transport channel | |
| - Parameters required for each event | |
| - Traffic volume event identity | 4a |
| - Reporting threshold | 8 |
| - Time to trigger | 100 |
| - Pending time after trigger | 1000 |
| - Tx interruption after trigger | 250 |

MEASUREMENT REPORT (Step 3, step 4, step 4d and step 4e) (FDD)

The order in which the RBs are reported is not checked.

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Traffic volume measured results list" |
| - Traffic volume measurement results | |
| - RB Identity | 1 |
| - RLC Buffers Payload | Check to see if this IE is present |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| - RB Identity | 2 |
| - RLC Buffers Payload | Check to see if this IE is present |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| - RB Identity | 3 |
| - RLC Buffers Payload | Check to see if this IE is present |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| - RB Identity | 4 |
| - RLC Buffers Payload | Check to see if this IE is present |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| - RB Identity | 20 |
| - RLC Buffers Payload | Check to see if the value is above the threshold |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| Measured Results on RACH | |
| - Measurement result for current cell | Check to see if set to 'CPICH RSCP' |
| - CHOICE measurement quantity | |
| - CPICH RSCP | Checked to see if this IE is present and within the acceptable range |
| Additional Measured results | Not checked |
| Event Results | |
| - Uplink transport channel type causing the event | Check to see if set to "RACH" |
| - UL transport channel identity | Check that this IE is absent |
| - Traffic volume event identity | Check to see if set to "4a" |

MEASUREMENT REPORT (Step 3, step 4, step 4d and step 4e) (TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Traffic volume measured results list" |
| - Traffic volume measurement results | |
| - RB Identity | 1 |
| - RLC Buffers Payload | Check to see if this IE is present |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| - RB Identity | 2 |
| - RLC Buffers Payload | Check to see if this IE is present |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| - RB Identity | 3 |
| - RLC Buffers Payload | Check to see if this IE is present |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| - RB Identity | 4 |
| - RLC Buffers Payload | Check to see if this IE is present |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| - RB Identity | 20 |
| - RLC Buffers Payload | Check to see if the value is above the threshold |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| Measured Results on RACH | |
| - Measurement result for current cell | |
| - CHOICE mode | Check to see if set to'TDD' |
| - Primary CCPCH RSCP | Checked to see if this IE is present and the value is within an acceptable range |
| - Measurement results for monitored cells | |
| - CHOICE mode | Check to see if set to'TDD' |
| - Primary CCPCH RSCP | Checked to see if this IE is absent |
| Additional Measured results | Not checked |
| Event Results | |
| CHOICE event result | Check to see if set to'Traffic volume measurement event results' |
| - Uplink transport channel type causing the event | Check to see if set to "RACH" |
| - UL transport channel identity | Check to see that is not set |
| - Traffic volume event identity | Check to see if set to "4a" |

#### 8.4.1.29.5 Test Requirement

In step 3 UE sends MEASUREMENT REPORT with correct measurement identity indication. RB identity and RLC buffers payload has reasonable values. The IE "measured results on RACH", containing the measurement value for cell 1's CPICH RSCP (for FDD) or P-CCPCH RSCP (for TDD) shall be included in this message.

In step 4, 4d and 4e UE repeats message sent in step 3.

After step 3 UE is not allowed to send user data during the 'Tx interruption after trigger' timer is running.

### 8.4.1.30 Measurement Control and Report: Event based Traffic Volume measurement in CELL_DCH state.

#### 8.4.1.30.1 Definition

#### 8.4.1.30.2 Conformance requirement

Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in TS 25.331 subclause 8.6 unless otherwise specified below.

The UE shall:

1> read the IE "Measurement command";

1> if the IE "Measurement command" has the value "setup":

2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

2> for measurement types "inter-RAT measurement" or "inter-frequency measurement":

…

2> for measurement type "UE positioning measurement":

…

2> for any other measurement type:

3> if the measurement is valid in the current RRC state of the UE:

4> begin measurements according to the stored control information for this measurement identity.

…

For traffic volume measurements in the UE only one quantity is compared with the thresholds. This quantity is Transport Channel Traffic Volume (which equals the sum of Buffer Occupancies of RBs multiplexed onto a transport channel) in number of bytes. Every TTI, UE measures the Transport Channel Traffic Volume for each transport channel and compares it with the configured thresholds.

If the monitored Transport Channel Traffic Volume exceeds an absolute threshold, i.e. if TCTF>Reporting threshold, this is an event (event 4a) that could trigger a report. The corresponding report specifies at least which measurement ID the event that triggered the report belongs to.

If the monitored Transport Channel Traffic Volume becomes smaller than an absolute threshold, i.e. if TCTF<Reporting threshold, this is an event (4b) that could trigger a report. The corresponding report specifies at least which measurement ID the event that triggered the report belongs to.

Reference

3GPP TS 25.331, clause 14.4.2.2, 3GPP TS 25.331, clause 8.4.1.3.

### 8.4.1.30.3 Test Purpose

1. To verify that in CELL_DCH state when event 4a or 4b triggered at setup TVM UE sends RRC: Measurement Report with correct measurement identity and indication of uplink transport channel type and identity, radio bearer identities and corresponding RLC buffer payloads in number of bytes.

2. To verify that in CELL_DCH state when event 4a or 4b triggereds after setup TVM UE sends RRC: Measurement Report with correct measurement identity and indication of uplink transport channel type and identity, radio bearer identities and corresponding RLC buffer payloads in number of bytes.

### 8.4.1.30.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: Idle state (State 3 or State 7) as specified in clause 7.4 of TS 34.108.

System Information Block type 11 nor 12 does not include Traffic Volume measurement system information.

Test Procedure

The UE is brought to the CELL_DCH state after a successful incoming call attempt. The SS follows the procedure in TS 34.108 clause 7.1.3 (Mobile Terminated), to set up a user RAB, but with the default RAB replaced by the one described in 34.108, clause 6.10.2.4.1.26: Interactive or background / UL: 64 DL: 64 kbps / PS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH. The SS limits the UE allowed Uplink transport format combinations according to the ‘Restricted UL TFCIs’, using the RRC Transport Format Combination control procedure. The radio bearer is placed into UE test

loop mode 1 described in TS 34.109 clause 5.3. SS configures UE's transport channel traffic volume to exceeds threshold. SS sends to UE RRC: MEASUREMENT CONTROL messages, which includes in addition to measurement identity traffic volume measurement control parameters eg. uplink transport channel type and identity and reporting threshold for events 4a, and after 'time to trigger' UE sends RRC: MEASUREMENT REPORT message to SS. SS does not respond and after 'pending time after trigger' UE sends again same RRC: MEASUREMENT REPORT message. SS configures UE's transport channel load decreases to zero and sends UE RRC: MEASUREMENT CONTROL messages, which includes in addition to measurement identity traffic volume measurement control parameters eg. uplink transport channel type and identity and reporting threshold for event 4b. Event 4b triggers and after 'time to trigger' UE sends RRC: MEASUREMENT REPORT message to SS. SS does not respond and after 'pending time after trigger' UE sends again same RRC: MEASUREMENT REPORT message. SS increses transport channel traffic volume to exceeds threshold. Event 4a is triggered and after 'time to trigger' UE sends RRC: MEASUREMENT REPORT message to SS. SS decreases transport channel traffic volume to zero. Event 4b is triggered and after 'time to trigger' UE sends RRC: MEASUREMENT REPORT message to SS. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE1 | The SS transmits the message, which includes a allocatd identity (P-TMSI). |
| 1a | → | | RRC CONNECTION REQUEST | |
| 1b | ← | | RRC CONNECTION SETUP | |
| 1c | → | | RRC CONNECTION SETUP COMPLETE | |
| 1d | → | | SERVICE REQUEST | |
| 1e | ← | | AUTHENTICATION AND CIPHERING REQUEST | |
| 1f | → | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 1g | ← | | SECURITY MODE COMMAND | |
| 1h | → | | SECURITY MODE COMPLETE | |
| 1i | ← | | ACTIVATE RB TEST MODE | TC |
| 1j | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 1k | ← | | RADIO BEARER SETUP | RRC RAB SETUP<br>See specific message contents for this message |
| 1l | → | | RADIO BEARER SETUP COMPLETE | |
| 1la | ← | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | The SS transmits the message, to setup the needed traffic for the test purpose. |
| 1m | ← | | CLOSED UE TEST LOOP | TC<br>UE Test Loop Mode1 |
| 1n | → | | CLOSED UE TEST LOOP COMPLETE | TC |
| 1o | | | | SS configures transport channel traffic volume so as to exceed threshold |
| 2 | ← | | MEASUREMENT CONTROL | SS provides Traffic Volume measurement criterias (event 4a) to UE. |
| 3 | | | Void | |
| 4 | → | | MEASUREMENT REPORT | UE's transport channel is loaded. UE reports that Traffic Volume measurement event 4A is triggered. |
| 5 | → | | MEASUREMENT REPORT | UE repeats message after 2100 ms. |
| 5a | | | | UE's transport channel traffic volume decreases to zero. |
| 5b | ← | | MEASUREMENT CONTROL | SS provides Traffic Volume measurement criterias (event 4b) to UE. |
| 6 | → | | MEASUREMENT REPORT | UE reports that Traffic Volume measurement event 4B is triggered. |
| 7 | → | | MEASUREMENT REPORT | UE repeats message after 2100 ms. |
| 7a | | | | SS increses transport channel traffic volume so as to exceed threshold |
| 7b | → | | MEASUREMENT REPORT | IE "Measurement Identity" is set to "15". |
| 7c | | | | UE's transport channel traffic volume decreases to zero. |
| 7d | → | | MEASUREMENT REPORT | IE "Measurement Identity" is set to "14". |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

PAGING TYPE 1 (Step 1)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| CHOICE Used paging identity | CN identity |
| - Paging cause | Terminating Call with one of the supported services |
| - CN domain identity | PS Domain |
| - CHOICE UE Identity | p-TMSI |
| - p-TMSI | Allocated identity during the attach procedure |
| BCCH modification info | Not Present |

RRC CONNECTION REQUEST (Step 1a)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the IMSI stored in the TEST USIM card, or the registered TMSI or P-TMSI |
| Establishment Cause | Check to see if it is set to the same value as "Paging Cause" IE in the PAGING TYPE 1 message transmitted on step 1 |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |

TRANSPORT FORMAT COMBINATION CONTROL (Step 1 la )

| Information Element | Value/remark |
|---|---|
| TrCH information elements | |
| -DPCH/PUSCH TFCS uplink in uplink | |
| - Allowed TFI | 0,1,5,6 |

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - Traffic volume measurement objects | |
| - Uplink transport channel type | DCH |
| - UL target transport channel ID | 1 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC buffer payload |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | TRUE |
| - Average of RLC Buffer Payload for each RB | FALSE |
| - Variance of RLC Buffer Payload for each RB | FALSE |
| - Measurement validity | |
| - UE state | CELL_DCH |
| - Traffic volume measurement reporting criteria | |
| - Uplink transport channel type | Not present |
| - UL Transport Channel ID | Not present |
| - Traffic volume event identity | 4a |
| - Reporting threshold | 256 |
| - Time to trigger | 100 |
| - Pending time after trigger | 2000 |
| - Tx interruption after trigger | Not present |

MEASUREMENT CONTROL (Step 5b)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 14 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - Traffic volume measurement objects | |
| - Uplink transport channel type | DCH |
| - UL target transport channel ID | 1 |
| - Traffic volume measurement quantity | |
| - Measurement quantity | RLC buffer payload |
| - Traffic volume reporting quantity | |
| - RLC Buffer Payload for each RB | TRUE |
| - Average of RLC Buffer Payload for each RB | FALSE |
| - Variance of RLC Buffer Payload for each RB | FALSE |
| - Measurement validity | |
| - UE state | CELL_DCH |
| - Traffic volume measurement reporting criteria | |
| - Uplink transport channel type | Not present |
| - UL Transport Channel ID | Not present |
| - Traffic volume event identity | 4b |
| - Reporting threshold | 32 |
| - Time to trigger | 100 |
| - Pending time after trigger | 2000 |
| - Tx interruption after trigger | Not present |

MEASUREMENT REPORT (Step 4, step 5 and step 7b)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 15 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Traffic volume measured results list" |
| - Traffic volume measurement results | |
| - RB Identity | 20 |
| - RLC Buffers Payload | Check to see if the value is above the threshold |
| - Average of RLC Buffer Payload | Check to see if this IE is absent |
| - Variance of RLC Buffer Payload | Check to see if this IE is absent |
| Measured Results on RACH | Not checked |
| Additional Measured results | Not checked |
| Event Results | |
| - Uplink transport channel type causing the event | Check to see if set to "DCH" |
| - UL transport channel identity | Check to see if set to "1" |
| - Traffic volume event identity | Check to see if set to "4a" |

MEASUREMENT REPORT (Step 6, step 7 and 7d)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 14 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Traffic volume measured results list" |
| - Traffic volume measurement results | |
| - RB identity | Check that value is 20 |
| - RLC buffers payload | Check that value is below the threshold |
| Measured Results on RACH | Not checked |
| Additional Measured results | Not checked |
| Event Results | |
| - Uplink transport channel type causing the event | Check to see if set to "DCH" |
| - UL transport channel identity | Check to see if set to "1" |
| - Traffic volume event identity | Check to see if set to "4b" |

#### 8.4.1.30.5 Test Requirement

In steps 4, 5, 6, 7, 7b and 7d UE sends RRC: MEASUREMENT REPORT with correct measurement identity indication. RB identity and RLC buffers payload has correct values. Measurement identity, transport channel type, transport channel identity and event identity has to match with set values.

### 8.4.1.31 Measurement Control and Report: Inter-RAT measurement in CELL_DCH state.

#### 8.4.1.31.1 Definition

#### 8.4.1.31.2 Conformance requirement

A UE supporting both FDD (or TDD) and GSM shall be able to perform the GSM RSSI measurement and the GSM Initial BSIC identification measurement.

If, according to its capabilities, the UE requires compressed mode to perform GSM RSSI measurements, the UE shall perform GSM RSSI measurements in the gaps of a compressed mode pattern sequence specified for GSM RSSI measurement purpose.

If, according to its capabilities, the UE requires compressed mode to perform GSM Initial BSIC identification measurements, the UE shall perform GSM Initial BSIC identification in a compressed mode pattern sequence specified for Initial BSIC identification measurement purpose.

Reference

3GPP TS 25.133, clause 8.1.2.5; 3GPP TS 25.331, clauses 8.6.7.6, 14.3.2.

#### 8.4.1.31.3 Test Purpose

Purpose of this test is to verify that UE is capable to perform GSM RSSI and GSM Initial BSIC identification measurements.

#### 8.4.1.31.4 Method of test

Initial Condition

System Simulator: 1 UTRAN FDD cell (or TDD cell) and 2 GSM cells.

| Parameter | Unit | Cell 1 (GSM) | Cell 2 (GSM) |
|---|---|---|---|
| Test Channel | # | 1 | 2 |
| RF Signal Level | dBm | -70 | -85 |
| BCCH ARFCN | # | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| CELL identity | # | 0 | 1 |
| BSIC | # | BSIC1 | BSIC2 |

UE: CELL_DCH state, state 6-9 as specified in clause 7.4 of TS 34.108.

System Information Block type 11 nor 12 does not include Inter-RAT measurement system information.

### Related ICS/IXIT statements

- Compressed mode required yes/no
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850.

### Test Procedure

The UE is brought to the CELL_DCH state after a successful outgoing call attempt. If the UE requires compressed mode (refer ICS/IXIT), the SS sends a PHYSICAL CHANNEL RECONFIGURATION message to the UE to configure the compressed mode pattern sequence parameters. Two compressed mode patterns are configured, according to the message specified below. When the PHYSICAL CHANNEL RECONFIGURATION COMPLETE is received from the UE, the SS sends a MEASUREMENT CONTROL message.

The first RRC: MEASUREMENT CONTROL message is used to provide measurement control parameters (GSM RSSI) to the UE and to start compressed mode for the measurement if required according to the UE capabilities. The UE replies according to request by sending RRC: MEASUREMENT REPORT messages periodically to SS. Reporting period is 4000 ms.

After two RRC: MEASUREMENT REPORT messages, the SS sends a second RRC: MEASUREMENT CONTROL message to start GSM Initial BSIC identification measurement. The UE replies similarly as in GSM RSSI measurement case but now with a period of 12000ms.

The SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_DCH state in the cell 1. If the UE does not require compressed mode (refer ICS/IXIT), then goto step 4. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Compressed mode pattern sequence parameters are loaded to UE. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | MEASUREMENT CONTROL | SS provides GSM RSSI measurement control parameters to UE. If the UE requires compressed mode (refer ICS/IXIT), compressed mode for GSM RSSI measurement is started. |
| 5 | → | | MEASUREMENT REPORT | UE reports measurement results of GSM RSSI measurement to SS. |
| 6 | → | | MEASUREMENT REPORT | Next periodical measurement report. |
| 7 | ← | | MEASUREMENT CONTROL | SS provides GSM Initial BSIC identification measurement control parameters to UE. If the UE requires compressed mode (refer ICS/IXIT),compressed mode for GSM Initial BSIC identification measurement is started. |
| 8 | → | | MEASUREMENT REPORT | UE reports measurement results of GSM Initial BSIC identification measurement to SS. |
| 9 | → | | MEASUREMENT REPORT | Next periodical measurement report. |
| 10 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type as in TS 34.108 titled "Speech in CS", with Scrambling code change set to Default1 and with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM Carrier RSSI Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 12 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 2 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM Initial BSIC identification | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 8 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | 128 | |
| - T Reconfirm abort | Not Present | |
| Downlink information per radio link list | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |

| | | |
|---|---|---|
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Serving E-DCH radio link indicator | FALSE | Rel-6 |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - E-AGCH Info | Not Present | Rel-6 |
| - E-HICH Information | Not Present | Rel-6 |
| - E-RGCH Information | Not Present | Rel-6 |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 4)(FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove no inter-RAT cells |
| - New inter-RAT cells | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not present |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | not required |
| - inter-RAT reporting quantity | |
| UTRAN estimated quality | FALSE |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| - Reporting cell status | |
| CHOICE reported cell | |
| - Reported cells within active set or within virtual active set or of the other RAT | |
| - Maximum number of reported cells | 6 |
| CHOICE report criteria | |
| - Periodical reporting criteria | |
| - Amount of reporting | infinity |
| - Reporting interval | 4000 |
| Physical channel information elements | |
| - DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |
| - TGPS reconfiguration CFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

MEASUREMENT CONTROL (Step 4)(TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove no inter-RAT cells |
| - New inter-RAT cells | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not present |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | not required |
| - inter-RAT reporting quantity | |
| UTRAN estimated quality | FALSE |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| - Reporting cell status | |
| CHOICE reported cell | |
| - Reported cells within active set or within virtual active set or of the other RAT | |
| - Maximum number of reported cells | 6 |
| CHOICE report criteria | |
| - Periodical reporting criteria | |
| - Amount of reporting | infinity |
| - Reporting interval | 4000 |

MEASUREMENT REPORT, if the UE requires compressed mode (refer ICS/IXIT) (Step 5 and step 6)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 15 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | | |
| - GSM carrier RSSI | Check to see if present | |
| CHOICE BSIC | Check to see if present | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| - GSM carrier RSSI | Check to see if present | |
| CHOICE BSIC | Check to see if present | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that not present | |

MEASUREMENT REPORT, if the UE doesn't requires compressed mode (refer ICS/IXIT) (Step 5 and step 6)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 15 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | | |
| - GSM carrier RSSI | Check to see if present | |
| CHOICE BSIC | verified BSIC | |
| - Inter-RAT cell id | Check that is set to "0" | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| - GSM carrier RSSI | Check to see if present | |
| CHOICE BSIC | verified BSIC | |
| - Inter-RAT cell id | Check that is set to "1" | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that not present | |

MEASUREMENT CONTROL (Step 7)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 15 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not present |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | required |
| - inter-RAT reporting quantity | |
| UTRAN estimated quality | FALSE |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| - Reporting cell status | |
| CHOICE reported cell | |
| - Reported cells within active set or within virtual active set or of the other RAT | |
| - Maximum number of reported cells | 6 |
| CHOICE report criteria | |
| - Periodical reporting criteria | |
| - Amount of reporting | infinity |
| - Reporting interval | 12000 |
| Physical channel information elements | |
| - DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |
| - TGPS reconfiguration CFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS status flag | Deactivate |
| - TGCFN | Not present |
| - TGPSI | 2 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

MEASUREMENT REPORT, if the UE requires compressed mode (refer ICS/IXIT) (Step 8)

EITHER

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 15 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | | |
| - GSM carrier RSSI | Not checked | |
| CHOICE BSIC | Verified BSIC | |
| - Inter-RAT cell id | Check that is set to "0" | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that not present | |

OR

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 15 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | | |
| - GSM carrier RSSI | Not checked | |
| CHOICE BSIC | Verified BSIC | |
| - Inter-RAT cell id | Check that is set to "0" or “1” | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| - GSM carrier RSSI | Not checked | |
| CHOICE BSIC | Verified BSIC | |
| - Inter-RAT cell id | Check that is set to "1" or “0” (the cell id shall be different from the first reported cell id) | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that not present | |

MEASUREMENT REPORT, if the UE does not require compressed mode (refer ICS/IXIT) (Step 8)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 15 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | | |
| - GSM carrier RSSI | Check to see if present | |
| CHOICE BSIC | Verified BSIC | |
| - Inter-RAT cell id | Check that is set to "0" | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| - GSM carrier RSSI | Check to see if present | |
| CHOICE BSIC | Verified BSIC | |
| - Inter-RAT cell id | Check that is set to "1" | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that not present | |

MEASUREMENT REPORT (Step 9)

Either:

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 15 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | | |
| - GSM carrier RSSI | Not checked | |
| CHOICE BSIC | Verified BSIC | |
| - Inter-RAT cell id | Check that is set to "0" or “1” | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| - GSM carrier RSSI | Not checked | |
| CHOICE BSIC | Verified BSIC | |
| - Inter-RAT cell id | Check that is set to "1" or “0” (the cell id shall be different from the first reported cell id) | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that not present | |

Or:

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 15 | |
| Measured Results | Check that not present | |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that not present | |

### 8.4.1.31.5 Test Requirement

In step 5 and step 6 UE reports correctly GSM RSSI values.

In step 8 UE reports correctly BSIC values.

In step 9 UE sends the next periodical report.

Reporting period is the requested one.

### 8.4.1.32 Void

### 8.4.1.33 Measurement Control and Report: Inter-RAT measurement, event 3a

#### 8.4.1.33.1 Definition

#### 8.4.1.33.2 Conformance requirement

1. When this event is ordered by UTRAN in a MEASUREMENT CONTROL message the UE shall send a report when the estimated quality of the currently used frequency is below the value of the IE "Threshold own system" and the hysteresis and time to trigger conditions are fulfilled and the estimated quality of the other system is above the value of the IE "Threshold other system" and the hysteresis and time to trigger conditions are fulfilled.

2. If the IE "DPCH Compressed Mode Status Info" is present, [in the MEASUREMENT CONTROL message]:

   - after the time indicated by IE "TGPS reconfiguration CFN" has elapsed:

     - activate the pattern sequence stored in the variable TGPS_IDENTITY corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate" at the time indicated by IE "TGCFN"; and

     - begin the inter-frequency and/or inter-RAT measurements corresponding to the pattern sequence measurement purpose of each activated pattern sequence;

     - if the values of IE "TGPS reconfiguration CFN" and IE "TGCFN" are equal:

       - start the concerned pattern sequence immediately at that CFN;

   - not alter pattern sequences stored in variable TGPS_IDENTITY, but not identitifed in IE "TGPSI"

Alternative 3 for R99 and Rel-4 only:

3. The UE shall perform GSM RSSI measurements in the gaps of compressed mode pattern sequence specified for GSM RSSI measurement purpose. The UE shall perform Initial BSIC identification in compressed mode pattern sequence specified for Initial BSIC identification measurement purpose. The UE shall be able to measure the "Observed time difference to GSM cell" during a compressed mode pattern sequence configured for this purpose. The UE shall perform BSIC re-confirmation in compressed mode pattern sequence specified for BSIC re-confirmation measurement purpose.

Alternative 3a for Rel-5 onwards:

3a. The UE shall perform GSM RSSI measurements in the gaps of compressed mode pattern sequence specified for GSM RSSI measurement purpose. The UE shall perform Initial BSIC identification in compressed mode pattern sequence specified for Initial BSIC identification measurement purpose. The UE shall perform BSIC re-confirmation in compressed mode pattern sequence specified for BSIC re-confirmation measurement purpose.

4. If the IE "Inter-RAT measurement quantity" is received in a MEASUREMENT CONTROL message and CHOICE system is GSM, the UE shall:

   - if IE "BSIC verification required" is set to "required", for cells that match any of the BCCH ARFCN and BSIC combinations in the list of inter-RAT cells that the UE has received in IE "Inter-RAT cell info list", and that has a "verified" BSIC:

     - report measurement quantities according to IE "inter-RAT reporting quantity" taking into account the restrictions defined in TS 25.331 clause 8.6.7.6;

     - trigger inter-RAT events according to IE "inter-RAT measurement reporting criteria"; and

   - perform event evaluation for event-triggered reporting after BSIC has been verified for a GSM cell

   - indicate non-verified BSIC for a GSM cell in the "Inter-RAT measured results list" IE

5. The UE shall include measured results in MEASUREMENT REPORT as specified in the IE "Inter-RAT reporting quantity".

Alternative 6 for R99 and Rel-4 only:

6. If IE "Observed time difference to GSM cell Reporting indicator " is set to "TRUE" [, the UE shall]:

   include optional IE "Observed time difference to GSM cell" with the value set to the time difference to that GSM cell for the GSM cells that have a BSIC that is "verified", and that match any of the BCCH ARFCN and BSIC combinations in the list of inter-RAT cells that the UE has received in IE "Inter-RAT cell info list".

   - if IE "GSM Carrier RSSI" is set to "TRUE"[, the UE shall]:
     - include optional IE "GSM Carrier RSSI" with a value set to the measured RXLEV to that GSM cell in IE "Inter-RAT measured results list".
   - if the BSIC of reported GSM cell is "verified"[, the UE shall]:
     - set the CHOICE BSIC to "Verified BSIC" and IE "inter-RAT cell id" to the value that GSM cell had in the IE "Inter-RAT cell info list";

Alternative 6a for Rel-5 onwards:

6a. If

- IE "GSM Carrier RSSI" is set to "TRUE"[, the UE shall]:
  - include optional IE "GSM Carrier RSSI" with a value set to the measured RXLEV to that GSM cell in IE "Inter-RAT measured results list".
- if the BSIC of reported GSM cell is "verified"[, the UE shall]:
  - set the CHOICE BSIC to "Verified BSIC" and IE "inter-RAT cell id" to the value that GSM cell had in the IE "Inter-RAT cell info list";

7. If the IE "Reporting Cell Status" is received, the UE shall set the IE "Measured Results" in MEASUREMENT REPORT as follows.

   - the maximum number of the IE "Cell Measured Results" to be included in the IE "Measured Results" is the number specified in "Reporting Cell Status".

### Reference

3GPP TS 25.331 clauses 8.4.1.3, 8.6.7.5, 8.6.7.6, 8.6.7.9, 14.3.1.1, 14.3.2.1, 14.3.2.2, 14.3.2.3.

### 8.4.1.33.3 Test Purpose

1. To confirm that the UE starts compressed mode and inter-RAT measurements when so required by the network in a MEASUREMENT CONTROL message.

2. To confirm that the UE sends MEASUREMENT REPORT message if event 3a is configured, if the quality of the currently used UTRAN frequency is below a given threshold and the estimated quality of the other system is above a certain threshold.

3. To confirm that the hysteresis and time to trigger behaviours for event 3a are correctly implemented.

4. To confirm that the UE verifies the BSIC of the cell triggering the event if so required by UTRAN and if the proper compressed mode patterns have been configured in the UE by UTRAN.

5. To confirm that the content of the MEASUREMENT REPORT sent by the UE is according to what was required by UTRAN.

NOTE: Test purpose 1 verifies conformance requirement 1 and 2.

NOTE: Test purpose 2 and 3 verifies conformance requirement 1.

NOTE: Test purpose 4 verifies conformance requirement 2, 3 and 4.

NOTE: Test purpose 5 verifies conformance requirement 4, 5, 6 and 7.

8.4.1.33.4 Method of test

Initial Condition

System simulator: 1 UTRAN FDD cell (or TDD cell) and 3 GSM cells. The initial configurations of the 3 cells in the SS shall follow the values indicated in the column marked T0. The table is found in "Test procedure".

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 (UTRA) as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Related ICS/IXIT statements

- Compressed mode required yes/no
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850.

Test procedure

**Table 8.4.1.33.4-1**

| Parameter | Unit | Cell 1 (GSM) | | | | | Cell 2 (GSM) | | | | | Cell 3 (GSM) | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T4 | T0 | T1 | T2 | T3 | T4 | T0 | T1 | T2 | T3 | T4 |
| Test Channel | # | GSM Ch.1 | | | | | GSM Ch.2 | | | | | GSM Ch.3 | | | | |
| BCCH ARFCN | # | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | | | | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | | | | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | | | |
| CELL identity | # | 0 | | | | | 1 | | | | | 2 | | | | |
| BSIC | # | BSIC 1 | | | | | BSIC 2 | | | | | BSIC 3 | | | | |
| RF Signal Level | dBm | -85 | -85 | -70 | -76 | -70 | -85 | -85 | -85 | -84 | -84 | -90 | -90 | -90 | -90 | -90 |

**Table 8.4.1.33.4-2**

| Parameter | Unit | Cell 1 (UTRA) | | | | |
|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T4 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | | |
| CPICH Ec (FDD) | dBm/3.84Mhz | -60 | -80 | -80 | -80 | -60 |
| P-CCPCH (TDD) | dBm | -60 | -80 | -80 | -80 | -60 |

The two tables above illustrate the downlink power to be applied for the two cells at various instants of the test execution. Column marked "T0" denotes the initial conditions, while columns marked "T1", "T2", "T3" and "T4" indicate the values to be applied subsequently.

The UE is initially in CELL_DCH state as specified in clause 7.4 of TS 34.108. UTRA cell 1 is the only cell in the active set of the UE. If the UE requires compressed mode (refer ICS/IXIT), the SS sends a PHYSICAL CHANNEL RECONFIGURATION message to the UE to configure the compressed mode pattern sequence parameters to the UE. Three compressed mode patterns are configured, according to the message specified below. When the PHYSICAL CHANNEL RECONFIGURATION COMPLETE is received from the UE, the SS sends a MEASUREMENT CONTROL message to the UE, to set up inter-RAT measurements. Event 3a is set up in this message, and if the UE requires compressed mode (refer ICS/IXIT), compressed mode is activated.

At instant T1, the CPICH Ec drops as described in table 8.4.1.33.4-2.

At instant T2, the RF signal for GSM cell 1 increases, and crosses the threshold for the other system defined for event 3a.

After reception of the MEASUREMENT REPORT message, at instant T3, the RF signal strength for GSM cell 2 increases but remains below the threshold for the other system for event 3a. During that time, the RF signal strength for GSM cell 1 decreases, but remains above the releasing condition for event 3a.

At instant T4, the RF signal strength for GSM cell 1 increases above the threshold for the other system for event 3a+hysteresis. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_DCH state in the cell 1. If the UE does not require compressed mode (refer ICS/IXIT), then goto step 4. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Compressed mode pattern sequence parameters are loaded to UE. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | MEASUREMENT CONTROL | SS configures event 3a in the UE. If the UE requires compressed mode (refer ICS/IXIT), compressed mode is started. |
| 5 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in tables 8.4.1.33.4-1 and 8.4.1.33.4-2. |
| 6 | | | | SS waits for approximately 10 seconds and verifies that no MEASUREMENT REPORT messages are detected on uplink DCCH. |
| 7 | | | | SS re-adjusts the downlink transmission power settings according to columns "T2" in tables 8.4.1.33.4-1 and 8.4.1.33.4-2. |
| 8 | → | | MEASUREMENT REPORT | After about 2s, the UE sends a MEASUREMENT REPORT to SS triggered by event 3a. |
| 9 | | | | SS re-adjusts the downlink transmission power settings according to columns "T3" in tables 8.4.1.33.4-1 and 8.4.1.33.4-2. |
| 10 | | | | SS waits for approximately 10 seconds and verifies that no MEASUREMENT REPORT messages are detected on uplink DCCH. |
| 11 | | | | SS re-adjusts the downlink transmission power settings according to columns "T4" in tables 8.4.1.33.4-1 and 8.4.1.33.4-2. |
| 12 | | | | SS waits for approximately 10 seconds and verifies that no MEASUREMENT REPORT messages are detected on uplink DCCH. |
| 13 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type in clause 9 of TS 34.108 titled "Non speech in CS" or "Speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS, with Scrambling code change set to Default1 and with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM Carrier RSSI Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 12 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 1 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 2 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC identification | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 8 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 1 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | 66 | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 3 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |

| | | |
|---|---|---|
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC re-confirmation | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 8 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 1 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | 10 (5 s) | |
| Downlink information per radio link list | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Serving E-DCH radio link indicator | FALSE | Rel-6 |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - E-AGCH Info | Not Present | Rel-6 |
| - E-HICH Information | Not Present | Rel-6 |
| - E-RGCH Information | Not Present | Rel-6 |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 4) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| -Remove all inter-RAT cells | (No Data) |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 2 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC3 |
| - Band indicator | DCS 1800 band used |
| - BCCH ARFCN | 39 |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 0 |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | required |
| - inter-RAT reporting quantity | |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | |
| - Inter-RAT event identity | 3a |
| - Threshold own system | -66 |
| - W | 0 |
| - Threshold other system | -80 |
| - Hysteresis | 5 (2.5 dB) |
| - Time to Trigger | 640 ms |

| Information Element | Value/remark |
|---|---|
| - Reporting cell status | Report cells within active set or within virtual active set or of the other RAT |
| - Maximum number of reported cells | 2 cells |
| Physical channel information elements | |
| - DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |
| - TGPS reconfiguration CFN | (Current CFN + (250 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence (1 to <MaxTGPS>) | |
| - TGPSI | 1 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (252 – TTI/10msec))mod 256 |
| - TGPSI | 2 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (254 – TTI/10msec))mod 256 |
| - TGPSI | 3 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (250 – TTI/10msec))mod 256 |

MEASUREMENT CONTROL (Step 4) (TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| -Remove all inter-RAT cells | (No Data) |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | DCS 1800 band used |
| - BCCH ARFCN | 1 |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | DCS 1800 band used |
| - BCCH ARFCN | 7 |
| - inter-RAT cell id | 2 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC3 |
| - Band indicator | DCS 1800 band used |
| - BCCH ARFCN | 39 |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 0 |
| - CHOICE mode | TDD |
| - Measurement quantity | CCPCH RSCP |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | required |
| - inter-RAT reporting quantity | |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | |
| - Inter-RAT event identity | 3a |
| - Threshold own system | -66 |
| - W | 0 |
| - Threshold other system | -80 |
| - Hysteresis | 5 (2.5 dB) |
| - Time to Trigger | 640 ms |
| - Reporting cell status | Report cells within active set or within virtual active set or of the other RAT |
| - Maximum number of reported cells | 2 cells |
| Physical channel information elements | |

MEASUREMENT REPORT (Step 8)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 3 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | Check that measurement results for two GSM cells are included | |
| - GSM carrier RSSI | Check that measurement result is reasonable. RXLEV is mapped to a value between 0 and 63. The RSSI bits are numbered b0 to b5, where b0 is the least significant bit. When mapping the RXLEV value to the RSSI bit string, the first/ leftmost bit of the bit string contains the most significant bit. | |
| CHOICE BSIC | Check it is set to verified BSIC | |
| - inter-RAT cell id | Check that it is set to 0. | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| - GSM carrier RSSI | Check that measurement result is reasonable | |
| CHOICE BSIC | Verified BSIC | |
| - inter-RAT cell id | Check that is set to 1 | |
| - Observed time difference to GSM cell | Check that not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that the IE is included | |
| - CHOICE event result | Check that this is set to inter-RAT measurement event results | |
| - Inter-RAT event identity | Check that this is set to 3a | |
| - Cells to report (1 to <maxCellMeas>) | Check that <maxCellMeas> is set to 1 | |
| - CHOICE BSIC | Check that this is set to verified BSIC | |
| - Inter-RAT cell id | Check that this is set to 0. | |

#### 8.4.1.33.5 Test requirement

The UE shall not send any measurement report between instants T1 and T2.

Event 3a shall be triggered in the UE (i.e.the transmission of the MEASUREMENT REPORT) after instant T2.

Between instants T2 and T3, no MEASUREMENT REPORT message shall be received from the UE (since the hysteresis condition for triggering event 3a is not fulfilled).

No MEASUREMENT REPORT message shall be received from the UE after instant T4 (since the signal strength for cell 1 has not dropped under Threshold for event 3a-hysteresis).

### 8.4.1.34 Measurement Control and Report: Inter-RAT measurement, event 3b

#### 8.4.1.34.1 Definition

#### 8.4.1.34.2 Conformance requirement

If the IE "Inter-RAT cell info list" is received in a MEASUREMENT CONTROL message, the UE shall update the variable CELL_INFO_LIST accordingly and in the following order. The UE shall:

- if the IE "Removed Inter-RAT cells" is received, at the position indicated by the IE "Inter-RAT cell id":
  - clear the cell information stored in the variable CELL_INFO_LIST; and
  - mark the position "vacant";

- if the IE "New Inter-RAT cells" is received, for each cell, and in the same order as the cells appear in the IE:
  - update the variable CELL_INFO_LIST as follows:
    - if the IE "Inter-RAT cell id" is received:
      - store received cell information at this position in the Inter-RAT cell info list in the variable CELL_INFO_LIST, possibly overwriting any existing information in this position; and
      - mark the position "occupied";
    - if the IE "Inter-RAT cell id" is not received:
      - store the received cell information at the first vacant position in ascending order in the Inter-RAT cell info list in the variable CELL_INFO_LIST; and
- mark the position as "occupied";

When event 3b is configured in the UE within a measurement, the UE shall:

1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "required":

2> if equation 1 below has been fulfilled for a time period indicated by "time to trigger" for one or several GSM cells that match any of the BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement:

3> if the inter-RAT cell id of any of those GSM cell is not stored in the variable TRIGGERED_3B_EVENT:

4> store the inter-RAT cell ids of the GSM cells that triggered the event and that were not previously stored in the variable TRIGGERED_3B_EVENT into that variable;

4> send a measurement report with IEs set as below:

5> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3b", "CHOICE BSIC" to "verified BSIC" and "Inter-RAT cell id" to the GSM cells that triggered the event (worst one first);

5> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2 , not taking into account the cell individual offset;

2> if equation 2 below is fulfilled for a GSM cell whose inter-RAT cell id is stored in the variable TRIGGERED_3B_EVENT:

3> remove the inter-RAT cell id of that GSM cell from the variable TRIGGERED_3B_EVENT.

1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "not required":

2> if equation 1 below has been fulfilled for a time period indicated by "time to trigger" for one or several of the BCCH ARFCNs considered in that inter-RAT measurement:

3> if any of those BCCH ARFCN is not stored into the variable TRIGGERED_3B_EVENT:

4> store the BCCH ARFCNs that triggered the event and that were not previously stored in the variable TRIGGERED_3B_EVENT into that variable;

4> send a measurement report with IEs set as below:

5> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3b", "CHOICE BSIC" to "non verified BSIC" and "BCCH ARFCN" to BCCH ARFCNs that triggered the event (worst one first);

5> set the IE "measured results" and the IE "additional measured results" according to 8.4.2, not taking into account the cell individual offset;

2> if equation 2 below is fulfilled for a BCCH ARFCN that is stored in the variable TRIGGERED_3B_EVENT:

3> remove that BCCH ARFCN from the variable TRIGGERED_3B_EVENT.

Triggering condition:

Equation 1:

$$M_{Other\ \ RAT} + CIO_{Other\ \ RAT} \leq T_{Other\ \ RAT} - H_{3b} / 2$$

The variables in the formula are defined as follows:

$\boldsymbol{M_{Other\ RAT}}$ is the measurement quantity for the cell of the other system.

$\boldsymbol{CIO_{Other\ RAT}}$ is the cell individual offset for the cell of the other system.

$\boldsymbol{T_{Other\ RAT}}$ is the absolute threshold that applies for the other system in that measurement.

$\boldsymbol{H_{3b}}$ is the hysteresis parameter for event 3b.

Leaving triggered state condition:

Equation 2:

$$M_{Other\ \ RAT} + CIO_{Other\ \ RAT} > T_{Other\ \ RAT} + H_{3b} / 2$$

The variables in the formula are defined as follows:

$\boldsymbol{M_{Other\ RAT}}$ is the measurement quantity for the cell of the other system. $\boldsymbol{M_{Other\ RAT}}$ is expressed in dBm.

$\boldsymbol{CIO_{Other\ RAT}}$ is the cell individual offset for the cell of the other system.

$\boldsymbol{T_{Other\ RAT}}$ is the absolute threshold that applies for the other system in that measurement.

$\boldsymbol{H_{3b}}$ is the hysteresis parameter for event 3b.

### Reference

3GPP TS 25.331 clause 8.6.7.3, 14.3.1.2

### 8.4.1.34.3 Test Purpose

1 To confirm that the UE sends MEASUREMENT REPORT message if event 3b is configured, if the estimated quality of the other system is below a given threshold.

2 To confirm that the hysteresis and time to trigger behaviours for event 3b are correctly implemented. To confirm that the UE updates the list of inter-RAT cells it stores according to what is ordered in the MEASUREMENT CONTROL messages received from UTRAN.

### 8.4.1.34.4 Method of test

### Initial Condition

System simulator: 1 UTRAN FDD cell (or TDD cell) and 3 GSM cells. The initial configurations of the 3 GSM cells in the SS shall follow the values indicated in the column marked T0. The table is found in "Test procedure".

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 (UTRA) as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

### Related ICS/IXIT statements

- Compressed mode required yes/no
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850.

Test procedure

**Table 8.4.1.34.4-1**

| Parameter | Unit | Cell 1 (GSM) | | Cell 2 (GSM) | | Cell 3 (GSM) | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| Test Channel | # | GSM Ch.1 | | GSM Ch.2 | | GSM Ch.3 | |
| BCCH ARFCN | # | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | |
| CELL identity | # | 0 | | 1 | | 2 | |
| BSIC | # | BSIC 1 | | BSIC 2 | | BSIC 3 | |
| RF Signal Level | dBm | -70 | -90 | -70 | -70 | -90 | -90 |

The table above illustrate the downlink power to be applied for the cells at various instants of the test execution. Column marked "T0" denotes the initial conditions, while column marked "T1" indicates the values to be applied subsequently.

The UE is initially in CELL_DCH state as specified in clause 7.4 of TS 34.108. UTRA cell 1 is the only cell in the active set of the UE. If the UE requires compressed mode (refer ICS/IXIT), the SS sends a PHYSICAL CHANNEL RECONFIGURATION message to the UE to configure the compressed mode pattern sequence parameters to the UE. Three compressed mode patterns are configured, according to the message specified below. When the PHYSICAL CHANNEL RECONFIGURATION COMPLETE is received from the UE, the SS sends a MEASUREMENT CONTROL message to the UE, to set up inter-RAT measurements. Event 3b is set up in this message, and if the UE requires compressed mode (refer ICS/IXIT), compressed mode is activated. The monitored GSM cells at measurement establishment are GSM cells 1 and 2.

At instant T1, the RF signal strength for GSM cell 1 drops as described in table 8.4.1.34.4-1.

When the MEASUREMENT REPORT has been received by the SS, a MEASUREMENT CONTROL message is sent to the UE, to add GSM cell 3 to the monitored GSM cells.

A second MEASUREMENT REPORT triggered by event 3b shall be received shortly after by the SS. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_DCH state in the cell 1. If the UE does not require compressed mode (refer ICS/IXIT), then goto step 4. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Compressed mode pattern sequence parameters are loaded to UE. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | MEASUREMENT CONTROL | SS configures event 3b in the UE. If the UE requires compressed mode (refer ICS/IXIT), compressed mode is started. |
| 5 | | | | SS waits for approximately 10 seconds and verifies that no MEASUREMENT REPORT messages are detected on uplink DCCH. |
| 6 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in tables 8.4.1.34.4-1. |
| 7 | → | | MEASUREMENT REPORT | After about 1020m s, the UE sends a MEASUREMENT REPORT to SS triggered by event 3b. |
| 8 | ← | | MEASUREMENT CONTROL | SS adds GSM cell 3 to the list of the monitored GSM cells. |
| 9 | → | | MEASUREMENT REPORT | After about 5.8 s, the UE sends a MEASUREMENT REPORT to SS triggered by event 3b. |
| 10 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type in clause 9 of TS 34.108 titled "Non speech in CS" or "Speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS, with Scrambling code change set to Default1 and with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM Carrier RSSI Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 12 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 2 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC identification | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 8 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | 66 | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 3 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC re-confirmation | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 8 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | 10 (5 s) | |
| Downlink information per radio link list | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Serving E-DCH radio link indicator | FALSE | Rel-6 |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - E-AGCH Info | Not Present | Rel-6 |
| - E-HICH Information | Not Present | Rel-6 |
| - E-RGCH Information | Not Present | Rel-6 |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 4)(FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |

| Information Element | Value/remark |
|---|---|
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| -Remove all inter-RAT cells | (No Data) |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not included |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | required |
| - inter-RAT reporting quantity | |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | |
| - Inter-RAT event identity | 3b |
| - Threshold own system | Not included |
| - W | Not included |
| - Threshold other system | -80 |
| - Hysteresis | 2 (1 dB) |
| - Time to Trigger | 60 ms |
| - Reporting cell status | Report cells within active set or within virtual active set or of the other RAT |
| - Maximum number of reported cells | 3 |
| Physical channel information elements | |
| - DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |
| - TGPS reconfiguration CFN | (Current CFN + (250 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence (1 to <MaxTGPS>) | |
| - TGPSI | 1 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (252 – TTI/10msec))mod 256 |
| - TGPSI | 2 |
| - TGPS status flag | Activate |

| Information Element | Value/remark |
|---|---|
| - TGCFN | (Current CFN + (254 – TTI/10msec))mod 256 |
| - TGPSI | 3 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (250 – TTI/10msec))mod 256 |

MEASUREMENT CONTROL (Step 4)(TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| -Remove all inter-RAT cells | (No Data) |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not included |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | required |
| - inter-RAT reporting quantity | |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | |
| - Inter-RAT event identity | 3b |
| - Threshold own system | Not included |
| - W | Not included |
| - Threshold other system | -80 |
| - Hysteresis | 2 (1 dB) |
| - Time to Trigger | 60 ms |
| - Reporting cell status | Report cells within active set or within virtual active set or of the other RAT |
| - Maximum number of reported cells | 3 |

MEASUREMENT REPORT (Step 7)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 3 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | Check that measurement results for two GSM cells are included | |
| - GSM carrier RSSI | Check that measurement result is reasonable. RXLEV is mapped to a value between 0 and 63. The RSSI bits are numbered b0 to b5, where b0 is the least significant bit. When mapping the RXLEV value to the RSSI bit string, the first/ leftmost bit of the bit string contains the most significant bit. | |
| CHOICE BSIC | Check it is set to verified BSIC | |
| - inter-RAT cell id | Check that it is set to 1 | |
| - Observed time difference to GSM cell | Check that the IE is not included | R99 and Rel-4 only |
| - GSM carrier RSSI | Check that measurement result is reasonable | |
| CHOICE BSIC | Verified BSIC | |
| - inter-RAT cell id | Check that it is set to 0. | |
| - Observed time difference to GSM cell | Check that the IE is not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that the IE is included | |
| - CHOICE event result | Check that this is set to inter-RAT measurement event results | |
| - Inter-RAT event identity | Check that this is set to 3b | |
| - Cells to report (1 to <maxCellMeas>) | Check that <maxCellMeas> is set to 1 | |
| - CHOICE BSIC | Check that this is set to verified BSIC | |
| - Inter-RAT cell id | Check that this is set to 0. | |

MEASUREMENT CONTROL (Step 8)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Not present |
| - Periodic Reporting / Event Trigger Reporting Mode | Not present |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove no inter-RAT cells |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | Not present |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC3 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | Not present |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | Not Present |
| Physical channel information elements | Not present |

MEASUREMENT REPORT (Step 9)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 3 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | Check that measurement results for three GSM cells are included | |
| - GSM carrier RSSI | Check that measurement result is reasonable. RXLEV is mapped to a value between 0 and 63. The RSSI bits are numbered b0 to b5, where b0 is the least significant bit. When mapping the RXLEV value to the RSSI bit string, the first/ leftmost bit of the bit string contains the most significant bit. | |
| CHOICE BSIC | Check it is set to verified BSIC | |
| - inter-RAT cell id | Check that it is set to 1 | |
| - Observed time difference to GSM cell | Check that the IE is not included | R99 and Rel-4 only |
| - GSM carrier RSSI | Check that measurement result is reasonable | |
| CHOICE BSIC | Verified BSIC | |
| - inter-RAT cell id | Check that is set to 0 or 2. | |
| - Observed time difference to GSM cell | Check that the IE is not present | R99 and Rel-4 only |
| - GSM carrier RSSI | Check that measurement result is reasonable | |
| CHOICE BSIC | Verified BSIC | |
| - inter-RAT cell id | Check that is set to 0 or 2 and that this inter-RAT cell id is different from the two previous inter-RAT cell id. | |
| - Observed time difference to GSM cell | Check that the IE is not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that the IE is included | |
| - CHOICE event result | Check that this is set to inter-RAT measurement event results | |
| - Inter-RAT event identity | Check that this is set to 3b | |
| - Cells to report (1 to <maxCellMeas>) | Check that <maxCellMeas> is set to 1 | |
| - CHOICE BSIC | Check that this is set to verified BSIC | |
| - Inter-RAT cell id | Check that this is set to 2. | |

### 8.4.1.34.5 Test requirement

Between instants T0 and T1, the UE shall not send any MEASUREMENT REPORT message to the SS.

Event 3b shall be triggered in the UE (i.e. the transmission of the first MEASUREMENT REPORT message shall begin) after instant T1.

After the reception by the UE of the second MEASUREMENT CONTROL message, the UE shall begin to transmit the second MEASUREMENT REPORT message (since the signal strength for GSM cell 3 is below the threshold for triggering event 3b).

## 8.4.1.35 Measurement Control and Report: Inter-RAT measurement, event 3c

### 8.4.1.35.1 Definition

### 8.4.1.35.2 Conformance requirement

When event 3c is configured in the UE within a measurement, the UE shall:

1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "required":

2> if equation 1 below has been fulfilled for a time period indicated by "time to trigger" for one or several GSM cells that match any of the BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement:

3> if the inter-RAT cell id of any of those GSM cell is not stored in the variable TRIGGERED_3C_EVENT:

4> store the Inter-RAT cell ids of the GSM cells that triggered the event and that were not previously stored in the variable TRIGGERED_3C_EVENT into that variable;

4> send a measurement report with IEs set as below:

5> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3c", "CHOICE BSIC" to "verified BSIC" and "Inter-RAT cell id" to the GSM cells that triggered the event (best one first);

5> set the IE "measured results" and the IE "additional measured results" according to 8.4.2, not taking into account the cell individual offset;

2> if equation 2 below is fulfilled for a GSM cell whose inter-RAT cell id is stored in the variable TRIGGERED_3C_EVENT:

3> remove the inter-RAT cell id of that GSM cell from the variable TRIGGERED_3C_EVENT.

1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "not required":

2> if equation 1 below has been fulfilled for a time period indicated by "time to trigger" for one or several of the BCCH ARFCNs considered in that inter-RAT measurement:

3> if any of those BCCH ARFCN is not stored into the variable TRIGGERED_3C_EVENT:

4> store the BCCH ARFCNs that triggered the event and that were not previously stored in the variable TRIGGERED_3C_EVENT into that variable;

4> send a measurement report with IEs set as below:

5> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3c", "CHOICE BSIC" to "non verified BSIC" and "BCCH ARFCN" to BCCH ARFCNs that triggered the event (best one first);

5> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2, not taking into account the cell individual offset;

2> if equation 2 is fulfilled for a BCCH ARFCN that is stored in the variable TRIGGERED_3C_EVENT:

3> remove that BCCH ARFCN from the variable TRIGGERED_3C_EVENT.

Triggering condition:

Equation 1:

$$M_{Other\ \ RAT} + CIO_{Other\ \ RAT} \geq T_{Other\ \ RAT} + H_{3c} / 2$$

The variables in the formula are defined as follows:

$M_{Other\ RAT}$ is the measurement quantity for the cell of the other system. $M_{Other\ RAT}$ is expressed in dBm.

$CIO_{Other\ RAT}$ is the cell individual offset for the cell of the other system.

$T_{Other\ RAT}$ is the absolute threshold that applies for the other system in that measurement.

$H_{3c}$ is the hysteresis parameter for event 3c.

Leaving triggered state condition:

Equation 2:

$$M_{Other\ \ RAT} + CIO_{Other\ \ RAT} < T_{Other\ \ RAT} - H_{3c} / 2$$

The variables in the formula are defined as follows:

$M_{Other\ RAT}$ is the measurement quantity for the cell of the other system. $M_{Other\ RAT}$ is expressed in dBm.

$CIO_{Other\ RAT}$ is the cell individual offset for the cell of the other system.

$T_{Other\ RAT}$ is the absolute threshold that applies for the other system in that measurement.

$H_{3c}$ is the hysteresis parameter for event 3c.

Reference

3GPP TS 25.331 clauses 14.3.1.3, 8.4.2.2.

### 8.4.1.35.3 Test Purpose

1 To confirm that the UE sends MEASUREMENT REPORT message if event 3c is configured, and if the quality of the other system becomes better than the given threshold for event 3c.

2 To confirm that no other UE MEASUREMENT REPORT message is sent by the UE for a cell that has already triggered event 3c as long as the hysteresis condition for triggering once again event 3c has not been fulfilled.

### 8.4.1.35.4 Method of test

Initial Condition

System simulator: 1 UTRAN FDD cell (or TDD cell) and 2 GSM cells. The initial configurations of the 2 GSM cells in the SS shall follow the values indicated in the column marked T0. The table is found in "Test procedure".

UE: CELL CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 (UTRA) as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Related ICS/IXIT statements

- Compressed mode required yes/no
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850.

Test procedure

**Table 8.4.1.35.4-1**

| Parameter | Unit | Cell 1 (GSM) | | | | Cell 2 (GSM) | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| Test Channel | # | GSM Ch.1 | | | | GSM Ch.2 | | | |
| BCCH ARFCN | # | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | | | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | | |
| CELL identity | # | 0 | | | | 1 | | | |
| BSIC | # | BSIC 1 | | | | BSIC 2 | | | |
| RF Signal Level | dBm | -90 | -75 | -80 | -75 | -75 | -75 | -75 | -75 |

The table above illustrate the downlink power to be applied for the two cells at various instants of the test execution. Column marked "T0" denotes the initial conditions, while column marked "T1", "T2" and "T3" indicate the values to be applied subsequently.

The UE is initially in CELL_DCH state as specified in clause 7.4 of TS 34.108. UTRA cell 1 is the only cell in the active set of the UE. If the UE requires compressed mode (refer ICS/IXIT), the SS sends a PHYSICAL CHANNEL RECONFIGURATION message to the UE to configure the compressed mode pattern sequence parameters to the UE. Three compressed mode patterns are configured, according to the message specified below. When the PHYSICAL CHANNEL RECONFIGURATION COMPLETE is received from the UE, the SS sends a MEASUREMENT CONTROL message to the UE, to set up inter-RAT measurements. Event 3c is set up in this message, and if the UE requires compressed mode (refer ICS/IXIT), compressed mode is activated.

At instant T1, the RF signal strength for GSM cell 1 increases as described in table 8.4.1.35.4-1.

At instant T2, the RF signal strength for GSM cell 1 drops as described in table 8.4.1.35.4-1, and at instant T3, it increases again to its previous level. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_DCH state in the cell 1. If the UE does not require compressed mode (refer ICS/IXIT), then goto step 4. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Compressed mode pattern sequence parameters are loaded to UE. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | MEASUREMENT CONTROL | SS configures event 3c in the UE. If the UE requires compressed mode (refer ICS/IXIT), compressed mode is started. |
| 5 | | | | SS waits for approximately 10 seconds and verifies that no MEASUREMENT REPORT messages are detected on uplink DCCH. |
| 6 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in table 8.4.1.35.4-1. |
| 7 | → | | MEASUREMENT REPORT | After about 0.9 s, the UE sends a MEASUREMENT REPORT to SS triggered by event 3c. |
| 8 | | | | SS re-adjusts the downlink transmission power settings according to columns "T2" in table 8.4.1.35.4-1. |
| 9 | | | | SS re-adjusts the downlink transmission power settings according to columns "T3" in table 8.4.1.35.4-1. |
| 10 | | | | SS waits for approximately 10 seconds and verifies that no MEASUREMENT REPORT messages are detected on uplink DCCH. |
| 11 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type in clause 9 of TS 34.108 titled "Non speech in CS" or "Speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS, with Scrambling code change set to Default1 and with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM Carrier RSSI Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 12 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 2 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC identification | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 8 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | 66 | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 3 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC re-confirmation | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 8 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | 10 (5 s) | |
| Downlink information per radio link list | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Serving E-DCH radio link indicator | FALSE | Rel-6 |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - E-AGCH Info | Not Present | Rel-6 |
| - E-HICH Information | Not Present | Rel-6 |
| - E-RGCH Information | Not Present | Rel-6 |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 4)(FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |

| Information Element | Value/remark |
|---|---|
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| -Remove all inter-RAT cells | (No Data) |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 10 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | -3 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not included |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | required |
| - inter-RAT reporting quantity | |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | |
| - Inter-RAT event identity | 3c |
| - Threshold own system | Not included |
| - W | Not included |
| - Threshold other system | -74 |
| - Hysteresis | 5 (2.5 dB) |
| - Time to Trigger | 100 ms |
| - Reporting cell status | Report cells within active set or within virtual active set or of the other RAT |
| - Maximum number of reported cells | 2 |
| Physical channel information elements | |
| - DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |
| - TGPS reconfiguration CFN | (Current CFN + (250 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence (1 to <MaxTGPS>) | |
| - TGPSI | 1 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (252 – TTI/10msec))mod 256 |
| - TGPSI | 2 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (254 – TTI/10msec))mod 256 |

| Information Element | Value/remark |
|---|---|
| - TGPSI | 3 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (250 – TTI/10msec))mod 256 |

MEASUREMENT CONTROL (Step 4)(TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| -Remove all inter-RAT cells | (No Data) |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 10 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | -3 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not included |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | required |
| - inter-RAT reporting quantity | |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | |
| - Inter-RAT event identity | 3c |
| - Threshold own system | Not included |
| - W | Not included |
| - Threshold other system | -74 |
| - Hysteresis | 5 (2.5 dB) |
| - Time to Trigger | 100 ms |
| - Reporting cell status | Report cells within active set or within virtual active set or of the other RAT |
| - Maximum number of reported cells | 2 |

MEASUREMENT REPORT (Step 7)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 3 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | Check that measurement results for two GSM cells are included | |
| - GSM carrier RSSI | Check that measurement result is reasonable. RXLEV is mapped to a value between 0 and 63. The RSSI bits are numbered b0 to b5, where b0 is the least significant bit. When mapping the RXLEV value to the RSSI bit string, the first/ leftmost bit of the bit string contains the most significant bit. | |
| CHOICE BSIC | Check it is set to verified BSIC | |
| - inter-RAT cell id | Check that it is set to either 0 or 1 | |
| - Observed time difference to GSM cell | Check that the IE is not included | R99 and Rel-4 only |
| - GSM carrier RSSI | Check that measurement result is reasonable | |
| CHOICE BSIC | Verified BSIC | |
| - inter-RAT cell id | Check that is set to 1 if the previous inter-RAT cell id was set to 0 or to 0 if the previous cell if was set to 1. | |
| - Observed time difference to GSM cell | Check that the IE is not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that the IE is included | |
| - CHOICE event result | Check that this is set to inter-RAT measurement event results | |
| - Inter-RAT event identity | Check that this is set to 3c | |
| - Cells to report (1 to <maxCellMeas>) | Check that <maxCellMeas> is set to 1 | |
| - CHOICE BSIC | Check that this is set to verified BSIC | |
| - Inter-RAT cell id | Check that this is set to 0. | |

#### 8.4.1.35.5 Test requirement

After instant T1, since the cell individual offset for GSM cell 1 is +10 dB, event 3c shall be triggered in the UE, i.e the UE shall begin to transmit a MEASUREMENT REPORT to the SS. Note that GSM cell 2 has not triggered event 3c even though the RF signal strength for GSM cell 2 is the same as for cell 1, because the cell individual offset for GSM cell 2 is -3 dB.

After instant T2, no MEASUREMENT REPORT shall be received from the UE, since GSM cell 1 has already triggered event 3c, and since the RF signal strength has not dropped enough for the leaving condition to be met.

### 8.4.1.36 Measurement Control and Report: Inter-RAT measurement, event 3d

#### 8.4.1.36.1 Definition

-

#### 8.4.1.36.2 Conformance requirement

When event 3d is configured in the UE within a measurement, the UE shall:

1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "required":

2> when the measurement is initiated or resumed:

3> store in the variable BEST_CELL_3D_EVENT the Inter-RAT cell id of the GSM cell that has the best measured quantity among the GSM cells that match any of the BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement

3> send a measurement report with IE set as below:

4> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3d", "CHOICE BSIC" to "verified BSIC" and "Inter-RAT cell id" to the GSM cell that is stored in the variable BEST_CELL_3D_EVENT;

4> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2, not taking into account the cell individual offset;

2> if equation 1 has been fulfilled for a time period indicated by "time to trigger" for a GSM cell that is different from the one stored in BEST_CELL_3D_EVENT and that matches any of the BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement:

3> store the Inter-RAT cell id of that GSM cell in the variable BEST_CELL_3D_EVENT;

3> send a measurement report with IEs set as below:

4> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3d", "CHOICE BSIC" to "verified BSIC" and "Inter-RAT cell id" to the GSM cell is now stored in BEST_CELL_3D_EVENT;

4> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2, not taking into account the cell individual offset;

1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "not required":

2> when the measurement is initiated or resumed:

3> store in the variable BEST_CELL_3D_EVENT the BCCH ARFCN of the GSM cell that has the best measured quantity among the BCCH ARFCNs considered in that inter-RAT measurement;

3> send a measurement report with IE set as below:

4> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3d", "CHOICE BSIC" to "non verified BSIC" and "BCCH ARFCN" to the BCH ARFCN that is stored in the variable BEST_CELL_3D_EVENT;

4> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2, not taking into account the cell individual offset;

2> if equation 1 below has been fulfilled for a time period indicated by "time to trigger" for one of the BCCH ARFCNs considered in that inter-RAT measurement and different from the one stored in BEST_CELL_3D_EVENT:

3> store the BCCH ARFCN of that GSM cell in the variable BEST_CELL_3D_EVENT;

3> send a measurement report with IEs set as below:

4> set in "inter-RAT measurement event result": "inter-RAT event identity" to "3d", "CHOICE BSIC" to "non verified BSIC" and "BCCH ARFCN" to the BCCH ARFCN that is now stored in the variable BEST_CELL_3D_EVENT;

4> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2, not taking into account the cell individual offset;

Equation 1:

$$M_{New} \geq M_{Best} + H_{3d} / 2$$

The variables in the formula are defined as follows:

$M_{New}$ is the measurement quantity for a GSM cell that is not stored in the variable BEST_CELL_3D.

$M_{Best}$ is the measurement quantity for a GSM cell that is stored in the variable BEST_CELL_3D.

$H_{3d}$ is the hysteresis parameter for event 3d.

Reference

3GPP TS 25.331 clause 14.3.1.4.

### 8.4.1.36.3 Test Purpose

1. To confirm that the UE sends MEASUREMENT REPORT message if event 3d is configured, and if the best cell changes in the other system. To confirm that no other UE MEASUREMENT REPORT message is sent by the UE for a cell that has already triggered event 3d as long as the hysteresis condition for triggering once again event 3d has not been fulfilled.

### 8.4.1.36.4 Method of test

Initial Condition

System simulator: 1 UTRAN FDD cell (or TDD cell) and 2 GSM cells. The initial configurations of the 2 GSM cells in the SS shall follow the values indicated in the column marked T0. The table is found in "Test procedure".

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 (UTRA) as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Related ICS/IXIT statements

- Compressed mode required yes/no
- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850.

Test procedure

**Table 8.4.1.36.4-1**

| Parameter | Unit | Cell 1 (GSM) | | Cell 2 (GSM) | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| Test Channel | # | GSM Ch.1 | | GSM Ch.2 | |
| BCCH ARFCN | # | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | |
| CELL identity | # | 0 | | 1 | |
| BSIC | # | BSIC 1 | | BSIC 2 | |
| RF Signal Level | dBm | -70 | -90 | -90 | -70 |

The table above illustrate the downlink power to be applied for the two cells at various instants of the test execution. Column marked "T0" denotes the initial conditions, while column marked "T1"indicates the values to be applied subsequently.

The UE is initially in CELL_DCH state as specified in clause 7.4 of TS 34.108. UTRA cell 1 is the only cell in the active set of the UE. If the UE requires compressed mode (refer ICS/IXIT), the SS sends a PHYSICAL CHANNEL RECONFIGURATION message to the UE to configure the compressed mode pattern sequence parameters to the UE. Three compressed mode patterns are configured, according to the message specified below. When the PHYSICAL CHANNEL RECONFIGURATION COMPLETE is received from the UE, the SS sends a MEASUREMENT CONTROL message to the UE, to set up inter-RAT measurements. Event 3d is set up in this message, and if the UE requires compressed mode (refer ICS/IXIT), compressed mode is activated.

At instant T1, the RF signal strength for GSM cell 1 increases while the RF signal strength for GSM cell 2 decreases as described in table 8.4.1.36.4-1.

A MEASUREMENT CONTROL is then sent to the UE that releases the inter-RAT measurement, and deactivates compressed mode. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_DCH state in the cell 1. If the UE does not require compressed mode (refer ICS/IXIT), then goto step 4. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Compressed mode pattern sequence parameters are loaded to UE. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | MEASUREMENT CONTROL | SS configures event 3d in the UE. If the UE requires compressed mode (refer ICS/IXIT), compressed mode is started. |
| 5 | → | | MEASUREMENT REPORT | The UE sends a MEASUREMENT REPORT to UTRAN indicating which is/are the best GSM cell/Cells just after the initiation of the measurement<br>SS should wait long enough for the reception of this message as UE that needs compressed mode takes time to activate compressed mode patterns as well as complete BSIC verification before sending the report |
| 6 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in tables 8.4.1.36.4-1. |
| 7 | → | | MEASUREMENT REPORT | The UE sends a MEASUREMENT REPORT to SS triggered by event 3d. SS should wait long enough for the reception of this message as UE that needs compressed mode takes time to complete BSIC verification before sending the report |
| 8 | ← | | MEASUREMENT CONTROL | SS releases the inter-RAT measurements, and, if the UE requires compressed mode (refer ICS/IXIT), deactivates compressed mode. |
| 9 | | | | If the UE requires compressed mode (refer ICS/IXIT), SS checks that the UE has deactivated compressed mode. |
| 10 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type in clause 9 of TS 34.108 titled "Non speech in CS" or "Speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS, with Scrambling code change set to Default1 and with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM Carrier RSSI Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 12 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 2 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC identification | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 8 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | 66 | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 3 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC re-confirmation | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 8 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | 10 (5 s) | |
| Downlink information per radio link list | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Serving E-DCH radio link indicator | FALSE | Rel-6 |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - E-AGCH Info | Not Present | Rel-6 |
| - E-HICH Information | Not Present | Rel-6 |
| - E-RGCH Information | Not Present | Rel-6 |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 4)(FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| -Remove all inter-RAT cells | (No Data) |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | Not present |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | Not present |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not included |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | required |
| - inter-RAT reporting quantity | |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | |
| - Inter-RAT event identity | 3d |
| - Threshold own system | Not present |
| - W | Not present |
| - Threshold other system | Not present |
| - Hysteresis | 5 (2.5 dB) |
| - Time to Trigger | 200 ms |
| - Reporting cell status | Report cells within active set or within virtual active set or of the other RAT |
| - Maximum number of reported cells | 2 |
| Physical channel information elements | |
| - DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |
| - TGPS reconfiguration CFN | (Current CFN + (250 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence (1 to <MaxTGPS>) | |
| - TGPSI | 1 |

| Information Element | Value/remark |
|---|---|
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (252 – TTI/10msec))mod 256 |
| - TGPSI | 2 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (254 – TTI/10msec))mod 256 |
| - TGPSI | 3 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (250 – TTI/10msec))mod 256 |

MEASUREMENT CONTROL (Step 4)(TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| -Remove all inter-RAT cells | (No Data) |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | Not present |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | Not present |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not included |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | required |
| - inter-RAT reporting quantity | |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | |
| - Inter-RAT event identity | 3d |
| - Threshold own system | Not present |
| - W | Not present |
| - Threshold other system | Not present |
| - Hysteresis | 5 (2.5 dB) |
| - Time to Trigger | 200 ms |
| - Reporting cell status | Report cells within active set or within virtual active set or of the other RAT |
| - Maximum number of reported cells | 2 |

MEASUREMENT REPORT (Step 5)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 3 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | Optional to have both Cells since a UE requiring compressed mode for inter-RAT measurements may take longer time for BSIC verification and hence need not include both the Cells | |
| - GSM carrier RSSI | Check that measurement result is reasonable. RXLEV is mapped to a value between 0 and 63. The RSSI bits are numbered b0 to b5, where b0 is the least significant bit. When mapping the RXLEV value to the RSSI bit string, the first/ leftmost bit of the bit string contains the most significant bit. | |
| CHOICE BSIC | Check it is set to verified BSIC | |
| - inter-RAT cell id | Check that it is set to 0 | |
| - Observed time difference to GSM cell | Check that the IE is not included | R99 and Rel-4 only |
| - GSM carrier RSSI | Check that measurement result is reasonable (Optional as this can be included only if BSIC verification is completed) | |
| CHOICE BSIC | Verified BSIC (Optional as this can be included only if BSIC verification is completed) | |
| - inter-RAT cell id | Check that it is set to 1(Optional) | |
| - Observed time difference to GSM cell | Check that the IE is not present (Optional) | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that the IE is included | |
| - CHOICE event result | Check that this is set to inter-RAT measurement event results | |
| - Inter-RAT event identity | Check that this is set to 3d | |
| - Cells to report (1 to <maxCellMeas>) | Check that <maxCellMeas> is set to 1 | |
| - CHOICE BSIC | Check that this is set to verified BSIC | |
| - Inter-RAT cell id | Check that this is set to 0. | |

MEASUREMENT REPORT (Step 7)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 3 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | Check that measurement results for two GSM cells are included | |
| - GSM carrier RSSI | Check that measurement result is reasonable. RXLEV is mapped to a value between 0 and 63. The RSSI bits are numbered b0 to b5, where b0 is the least significant bit. When mapping the RXLEV value to the RSSI bit string, the first/ leftmost bit of the bit string contains the most significant bit. | |
| CHOICE BSIC | Check it is set to verified BSIC | |
| - inter-RAT cell id | Check that it is set to 1 | |
| - Observed time difference to GSM cell | Check that the IE is not included | R99 and Rel-4 only |
| - GSM carrier RSSI | Check that measurement result is reasonable | |
| CHOICE BSIC | Verified BSIC | |
| - inter-RAT cell id | Check that it is set to 0. | |
| - Observed time difference to GSM cell | Check that the IE is not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that the IE is included | |
| - CHOICE event result | Check that this is set to inter-RAT measurement event results | |
| - Inter-RAT event identity | Check that this is set to 3d | |
| - Cells to report (1 to <maxCellMeas>) | Check that <maxCellMeas> is set to 1 | |
| - CHOICE BSIC | Check that this is set to verified BSIC | |
| - Inter-RAT cell id | Check that this is set to 1. | |

MEASUREMENT CONTROL (Step 8)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Release |
| Physical channel information elements | |
| - DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |
| - TGPS reconfiguration CFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence (1 to <MaxTGPS>) | |
| - TGPSI | 1 |
| - TGPS status flag | Deactivate |
| - TGCFN | Not present |
| - TGPSI | 2 |
| - TGPS status flag | Deactivate |
| - TGCFN | Not present |
| - TGPSI | 3 |
| - TGPS status flag | Deactivate |
| - TGCFN | Not present |

### 8.4.1.36.5 Test requirement

Shortly after the UE has received the first MEASUREMENT CONTROL message it shall transmit a MEASUREMENT REPORT to the SS.

After instant T1, the UE shall begin to transmit a MEASUREMENT REPORT triggered by event 3d to the SS.

After receiving the second MEASUREMENT CONTROL message, the UE shall then stop running compressed mode.

## 8.4.1.37 Measurement Control and Report: UE internal measurement, event 6c

### 8.4.1.37.1 Definition

### 8.4.1.37.2 Conformance requirement

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE Tx power reaches its minimum value.

Reference

3GPP TS 25.331 clause 14.6.2.3.

### 8.4.1.37.3 Test Purpose

1. To confirm that the UE sends a measurement report for event 6c when the UE Tx power reaches its minimum value when event 6c has been configured in the UE through a MEASUREMENT CONTROL message.

### 8.4.1.37.4 Method of test

Initial Condition

System simulator: 1 UTRAN cell.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test procedure

The UE is initially in CELL_DCH state as specified in clause 7.4 of TS 34.108.

The SS sends a MEASUREMENT CONTROL message to the UE that configures event 6c.

For FDD and 1.28 Mcps TDD: The SS sends TPC_cmd equal to -1 until the transmitter power of the UE reaches its minimum value.

For 3.84 Mcps TDD and 7.68 Mcps TDD: The SS sets the ISCP reported for the timeslot containing the uplink DPCH to the minimum reportable value (< -120)

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_DCH state in the cell 1. |
| 2 | ← | | MEASUREMENT CONTROL | SS configures event 6c in the UE. |
| 3 | ← | | | For FDD and 1.28 Mcps TDD: The SS sends TPC_cmd equal to -1 until the transmitter power of the UE reaches its minimum value, which shall be below –50 dBm. |
| 3a | ← | | | For 3.84 Mcps TDD and 7.68 Mcps: The SS sets the ISCP reported for the timeslot containing the uplink DPCH to the minimum reportable value (< -120) |
| 4 | → | | MEASUREMENT REPORT | After about 10 ms, the UE sends a MEASUREMENT REPORT to SS triggered by event 6c. |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message content

MEASUREMENT CONTROL (Step 2) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - UE internal measurement | |
| - UE internal measurement quantity | UE Transmitter Power |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted power | TRUE |
| CHOICE mode | |
| - UE Rx-Tx time difference | FALSE |
| CHOICE report criteria | |
| - UE internal measurement reporting criteria | |
| - Parameters sent for each UE internal measurement event | 1 event |
| - UE internal event identity | event 6c |
| - Time to trigger | 10 |

MEASUREMENT CONTROL (Step 2)( 1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - CHOICE *mode* | TDD |
| - measurement quantity | UE Transmitter Power |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted power | TRUE |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - $T_{ADV}$ info | FALSE |
| - CHOICE report criteria | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| - UE internal event identity | 6c |
| - Time to trigger | 0 |

MEASUREMENT CONTROL (Step 2) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - CHOICE *mode* | TDD |
| - measurement quantity | UE Transmitter Power |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted power | TRUE |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Applied TA | FALSE |
| - CHOICE report criteria | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| - UE internal event identity | 6c |
| - Time to trigger | 0 |

MEASUREMENT CONTROL (Step 2) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - CHOICE *mode* | TDD |
| - measurement quantity | UE Transmitter Power |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted power | TRUE |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Applied TA | FALSE |
| - CHOICE report criteria | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| - UE internal event identity | 6c |
| - Time to trigger | 0 |

MEASUREMENT REPORT (Step 4) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE internal measurement" |
| - UE internal measured results | |
| - UE Transmitted Power | Check that this IE is set a value that is equal to –50 dBm. |
| - UE Rx-Tx report entities | Check that this IE is not included |
| Measured results on RACH | Check that this IE is not included |
| Additional measured results | Check that this IE is not included |
| Event Results | |
| CHOICE *event result* | Check that this IE is set to UE internal measurement event results |
| UE internal measurement results | |
| UE internal event identity | Check that this IE is set to 6c |
| CHOICE *mode* | |
| Primary CPICH info | This IE should not be included |

MEASUREMENT REPORT (Step 4) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE internal measured results " |
| -CHOICE *mode* | Check to see if set to TDD |
| - UE Transmitted Power | Check that this IE is set a value that is below –49 dBm. |
| - CHOICE TDD option | Check to see if set to"1.28 Mcps TDD" |
| - $T_{ADV}$ | Check that this IE is not included |
| Measured results on RACH | Check that this IE is not included |
| Additional measured results | Check that this IE is not included |
| Event Results | |
| CHOICE *event result* | Check that this IE is set to UE internal measurement event results |
| UE internal measurement results | |
| UE internal event identity | Check that this IE is set to 6c |

MEASUREMENT REPORT (Step 4) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE internal measured results " |
| -CHOICE *mode* | Check to see if set to TDD |
| - UE Transmitted Power | Check that this IE is set a value that is below –45 dBm. |
| - CHOICE TDD option | Check to see if set to"3.84 Mcps TDD" |
| - Applied TA | Check that this IE is not included |
| Measured results on RACH | Check that this IE is not included |
| Additional measured results | Check that this IE is not included |
| Event Results | |
| CHOICE *event result* | Check that this IE is set to UE internal measurement event results |
| UE internal measurement results | |
| UE internal event identity | Check that this IE is set to 6c |

MEASUREMENT REPORT (Step 4) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE internal measured results " |
| -CHOICE *mode* | Check to see if set to TDD |
| - UE Transmitted Power | Check that this IE is set a value that is below –45 dBm. |
| - CHOICE TDD option | Check to see if set to"7.68 Mcps TDD" |
| - Applied TA | Check that this IE is not included |
| Measured results on RACH | Check that this IE is not included |
| Additional measured results | Check that this IE is not included |
| Event Results | |
| CHOICE *event result* | Check that this IE is set to UE internal measurement event results |
| UE internal measurement results | |
| UE internal event identity | Check that this IE is set to 6c |

#### 8.4.1.37.5 Test requirement

The UE shall then begin transmitting a MEASUREMENT REPORT message to SS triggered by event 6c when its transmit power has reached its minimum output power. The minimum transmitted power of the UE shall be less than –50dBm.(for FDD), -49dBm (for 1.28 Mcps TDD), and -45dBm (for 3.84 Mcps TDD and 7.68 Mcps TDD)

### 8.4.1.38 Measurement Control and Report: UE internal measurement, event 6d

#### 8.4.1.38.1 Definition

#### 8.4.1.38.2 Conformance requirement

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE Tx power reaches its maximum value.

Reference

3GPP TS 25.331 clause 14.6.2.4

#### 8.4.1.38.3 Test Purpose

1. To confirm that the UE sends a measurement report for event 6d when the UE Tx power reaches its maximum value when event 6d has been configured in the UE through a MEASUREMENT CONTROL message.

#### 8.4.1.38.4 Method of test

Initial Condition

System simulator: 1 UTRAN cell.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test procedure

The UE is initially in CELL_DCH state as specified in clause 7.4 of TS 34.108.

For FDD and 1.28 Mcps TDD: The SS sends TPC_cmd equal to +1 until the transmitter power of the UE reaches its maximum value.

For 3.84 Mcps TDD and 7.68 Mcps TDD: The SS sets the ISCP reported for the timeslot containing the uplink DPCH to the maximum reportable.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_DCH state in the cell 1. |
| 2 | ← | | MEASUREMENT CONTROL | SS configures event 6d in the UE. |
| 3 | ← | | | For FDD and 1.28 Mcps TDD: The SS sends TPC_cmd equal to +1 until the transmitter power of the UE reaches its maximum value. |
| 3a | ← | | | For 3.84 Mcps TDD and 7.68 Mcps TDD: The SS sets the ISCP reported for the timeslot containing the uplink DPCH to the maximum reportable. |
| 4 | → | | MEASUREMENT REPORT | After about 200 ms, the UE sends a MEASUREMENT REPORT to SS triggered by event 6d. |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

MEASUREMENT CONTROL (Step 2) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - UE internal measurement | |
| - UE internal measurement quantity | UE Transmitter Power |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted power | TRUE |
| - CHOICE mode | |
| - UE Rx-Tx time difference | FALSE |
| CHOICE report criteria | |
| - UE internal measurement reporting criteria | |
| - Parameters sent for each UE internal measurement event | 1 event |
| - UE internal event identity | event 6d |
| - Time to trigger | 200 |

MEASUREMENT CONTROL (Step 2)( 1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggere |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - CHOICE mode | TDD |
| - measurement quantity | UE Transmitter Power |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted power | TRUE |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - $T_{ADV}$ info | FALSE |
| - CHOICE report criteria | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| - UE internal event identity | 6d |
| - Time to trigger | 200 |

MEASUREMENT CONTROL (Step 2) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggere |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - CHOICE mode | TDD |
| - measurement quantity | UE Transmitter Power |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted power | TRUE |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Applied TA | FALSE |
| - CHOICE report criteria | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| - UE internal event identity | 6d |
| - Time to trigger | 200 |

MEASUREMENT CONTROL (Step 2) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggere |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - CHOICE mode | TDD |
| - measurement quantity | UE Transmitter Power |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted power | TRUE |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Applied TA | FALSE |
| - CHOICE report criteria | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| - UE internal event identity | 6d |
| - Time to trigger | 200 |

MEASUREMENT REPORT (Step 4) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE internal measurement" |
| - UE internal measured results | |
| - UE Transmitted Power | Check that this IE is set to the maximum outpower of the UE. |
| - UE Rx-Tx report entities | Check that this IE is not included |
| Measured results on RACH | Check that this IE is not included |
| Additional measured results | Check that this IE is not included |
| Event Results | |
| CHOICE *event result* | Check that this IE is set to UE internal measurement event results |
| UE internal measurement results | |
| UE internal event identity | Check that this IE is set to 6d |
| CHOICE *mode* | |
| Primary CPICH info | This IE should not be included |

MEASUREMENT REPORT (Step 4)(1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE internal measured results " |
| - CHOICE mode | Check to see if set to TDD |
| - UE Transmitted Power | Check that this IE is set to the maximum outpower of the UE. |
| - CHOICE TDD option | Check to see if set to “1.28 Mcps TDD” |
| - $T_{ADV}$ | Check that this IE is not included |
| Measured results on RACH | Check that this IE is not included |
| Additional measured results | Check that this IE is not included |
| Event Results | |
| CHOICE *event result* | Check that this IE is set to UE internal measurement event results |
| UE internal event identity | Check that this IE is set to 6d |

MEASUREMENT REPORT (Step 4) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE internal measured results " |
| - CHOICE mode | Check to see if set to TDD |
| - UE Transmitted Power | Check that this IE is set to the maximum outpower of the UE. |
| - CHOICE TDD option | Check to see if set to “3.84 Mcps TDD” |
| - Applied TA | Check that this IE is not included |
| Measured results on RACH | Check that this IE is not included |
| Additional measured results | Check that this IE is not included |
| Event Results | |
| CHOICE *event result* | Check that this IE is set to UE internal measurement event results |
| UE internal event identity | Check that this IE is set to 6d |

MEASUREMENT REPORT (Step 4) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE internal measured results " |
| - CHOICE mode | Check to see if set to TDD |
| - UE Transmitted Power | Check that this IE is set to the maximum outpower of the UE. |
| - CHOICE TDD option | Check to see if set to “7.68 Mcps TDD” |
| - Applied TA | Check that this IE is not included |
| Measured results on RACH | Check that this IE is not included |
| Additional measured results | Check that this IE is not included |
| Event Results | |
| CHOICE *event result* | Check that this IE is set to UE internal measurement event results |
| UE internal event identity | Check that this IE is set to 6d |

#### 8.4.1.38.5 Test requirement

The UE shall then begin transmitting a MEASUREMENT REPORT message to SS triggered by event 6d when its transmit power has reached its maximum. The maximum transmitted power of the UE shall be according to the class of the UE.

### 8.4.1.39 Measurement Control and Report: UE internal measurement, event 6e

#### 8.4.1.39.1 Definition

#### 8.4.1.39.2 Conformance requirement

When this event is ordered by UTRAN in a measurement control message, the UE shall send a measurement report when the UE RSSI reaches the UE's dynamic receiver range.

Reference

3GPP TS 25.331 clause 14.6.2.5

#### 8.4.1.39.3 Test Purpose

1. To confirm that the UE sends a measurement report for event 6e when the UE RSSI reaches the UE's dynamic receiver range when event 6e has been configured in the UE through a MEASUREMENT CONTROL message.

8.4.1.39.4 Method of test

Initial Condition

System simulator: 1 UTRAN cell.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test procedure

The UE is initially in CELL_DCH state as specified in clause 7.4 of TS 34.108.

The SS increases its output power by 1dB step until the UE RSSI reaches the UE's receiver dynamic range. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_DCH state in the cell 1. |
| 2 | ← | | MEASUREMENT CONTROL | SS configures event 6e in the UE. |
| 3 | ← | | | The SS increases its output power by 1 dB steps until the UE RSSI reaches the UE's receiver dynamic range. |
| 4 | → | | MEASUREMENT REPORT | The UE sends a MEASUREMENT REPORT to SS triggered by event 6e. |
| 5 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

MEASUREMENT CONTROL (Step 2) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - UE internal measurement | |
| - UE internal measurement quantity | UTRA Carrier RSSI |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | TRUE |
| - CHOICE mode | FDD |
| - UE Rx-Tx time difference | FALSE |
| CHOICE report criteria | |
| - UE internal measurement reporting criteria | |
| - Parameters sent for each UE internal measurement event | 1 event |
| - UE internal event identity | event 6e |
| - Time to trigger | 0 |

MEASUREMENT CONTROL (Step 2) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggere |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| - CHOICE mode | TDD |
| - measurement quantity | UTRA Carrier RSSI |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | False |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - $T_{ADV}$ info | False |
| CHOICE report criteria | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| - UE internal event identity | 6e |
| - Time to trigger | 0 |

MEASUREMENT CONTROL (Step 2) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggere |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| - CHOICE mode | TDD |
| - measurement quantity | UTRA Carrier RSSI |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | False |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Tadvance | False |
| CHOICE report criteria | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| - UE internal event identity | 6e |
| - Time to trigger | 0 |

MEASUREMENT CONTROL (Step 2) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 6 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggere |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement quantity | |
| - CHOICE mode | TDD |
| - measurement quantity | UTRA Carrier RSSI |
| - Filter coefficient | 0 |
| - UE internal reporting quantity | |
| - UE Transmitted Power | False |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Tadvance | False |
| CHOICE report criteria | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| - UE internal event identity | 6e |
| - Time to trigger | 0 |

MEASUREMENT REPORT (Step 4) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | |
| - CHOICE measurement | UE internal measured results |
| - CHOICE mode | FDD |
| - UE transmitted power | Check that this value is within reasonable range of value. |
| - UE Rx-TX report entries | Check that this IE is not included |
| Measured results on RACH | Check that this IE is not included |
| Additional measured results | Check that this IE is not included |
| Event Results | |
| CHOICE *event result* | Check that this IE is set to UE internal measurement event results |
| UE internal measurement results | |
| UE internal event identity | Check that this IE is set to 6e |
| CHOICE *mode* | |
| Primary CPICH info | This IE should not be included |

MEASUREMENT REPORT (Step 4) (TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 6 |
| Measured Results | Check that this IE is not included |
| Measured results on RACH | Check that this IE is not included |
| Additional measured results | Check that this IE is not included |
| Event Results | |
| CHOICE *event result* | Check that this IE is set to UE internal measurement event results |
| UE internal event identity | Check that this IE is set to 6e |

8.4.1.39.5 Test requirement

The UE shall then begin transmitting a MEASUREMENT REPORT message to SS triggered by event 6e when the UE RSSI reaches the UE's receiver dynamic range.

## 8.4.1.40 Measurement Control and Report: Inter-RAT measurement, event 3C, in CELL_DCH state using sparse compressed mode pattern

### 8.4.1.40.1 Definition

### 8.4.1.40.2 Conformance requirement

1. Upon reception of a MEASUREMENT CONTROL message the UE shall perform actions specified in 3GPP TS 25.331 clause 8.6 unless otherwise specified below.

   The UE shall:

   - read the IE "Measurement command";
   - if the IE "measurement command" has the value "setup":
     - store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", possibly overwriting the measurement previously stored with that identity;
     - for measurement types "inter-RAT measurement" or "inter-frequency measurement":
       - if, according to its measurement capabilities, the UE requires compressed mode to perform the measurements and a compressed mode pattern sequence with an appropriate measurement purpose is simultaneously activated by the IE "DPCH compressed mode status info"; or
       - if, according to its measurement capabilities, the UE does not require compressed mode to perform the measurements:
         - begin measurements according to the stored control information for this measurement identity;

2. Event 3c: The estimated quality of other system is above a certain threshold. When this event is ordered by UTRAN in a measurement control message the UE shall send a report when the estimated quality of the other system is above the value of the IE "Threshold other system" and the hysteresis and time to trigger conditions are fulfilled. The corresponding report contains information specific for the other system.

Reference

3GPP TS 25.331 clause 8.4.1.3, 14.3.1.3.

### 8.4.1.40.3 Test Purpose

This test case is only applicable to UEs supporting both FDD and GSM, and which require compressed mode to perform the GSM related measurements.

1. To verify that the UE performs Inter-RAT measurement using a sparse compressed mode pattern as specified in the MEASUREMENT CONTROL message.
2. To verify that the UE send MEASUREMENT REPORT message when event 3C is triggered, and if the quality of the other system becomes better than the given threshold for event 3c.
3. To confirm that no other UE MEASUREMENT REPORT message is sent by the UE for a cell that has already triggered event 3c as long as the hysteresis condition for triggering once again event 3c has not been fulfilled.

8.4.1.40.4 Method of test

**Table 8.4.1.40.4-1 Sparse compressed mode pattern for Inter RAT measurement**

| TGMP | TGCFN | TGSN | TGL1 | TGD | TGPL1 | TGPRC | TGPL2 | Comment |
|---|---|---|---|---|---|---|---|---|
| GSM carrier RSSI measurement | Note 1 | Inf. | 4 | 7 | Not sent | undefined | 16 | See note 2 | Set-up to monitor 12 GSM neighbours every second measurement period, i.e. every second 480ms period. |
| GSM Initial BSIC identification | Note 1 | Inf. | 8 | 14 | Not sent | undefined | 24 | See note 2 | Equal to Pattern 6 in TS 25.133 table 8.7. |
| GSM BSIC re-confirmation | Note 1 | Inf. | 8 | 14 | Not sent | undefined | 24 | See note 2 | Equal to Pattern 12 in TS 25.133 table 8.8. |

NOTE 1: TGCFN can be found in the MEASUREMENT CONTROL message.

NOTE 2: For R99 and Rel-4: TGPL2 is not sent. For Rel-5 and later releases: Not applicable.

Initial Condition

System simulator: 1 UTRAN FDD cell and 2 GSM cells. The initial configurations of the cells in the SS shall follow the values indicated in the column marked T0 in table 8.4.1.40-2. The UTRAN FDD cell shall use UARFCN according to the band under test except in the case of where FDD band VIII is tested and GSM900 is used for the Inter-RAT cells, then “High Range” test frequency for Band VIII is used instead, to avoid the test channels overlapping.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 (UTRA) as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Related ICS/IXIT statements

- UE supports GSM-P, GSM-E, GSM-DCS, GSM-450, GSM-480, GSM-PCS, GSM-850.

Test procedure

**Table 8.4.1.40.4-2 Inter-RAT cell specific data**

| Parameter | Unit | Cell 1 (GSM) | | | | Cell 2 (GSM) | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T0 | T1 | T2 | T3 |
| Test Channel | # | GSM Ch.1 | | | | GSM Ch.2 | | | |
| BCCH ARFCN | # | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | | | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | | |
| CELL identity | # | 0 | | | | 1 | | | |
| BSIC | # | BSIC 1 | | | | BSIC 2 | | | |
| RF Signal Level | dBm | -90 | -75 | -80 | -75 | -75 | -75 | -75 | -75 |

GSM cell 3 to 12 as indicated in the a MEASUREMENT CONTROL message shall not be active in the test, i.e. no BCCH carrier shall be transmitted for GSM cell 3 to 12 in this test.

The table above illustrate the downlink power to be applied for the two cells at various instants of the test execution. Column marked "T0" denotes the initial conditions, while column marked "T1", "T2" and "T3" indicate the values to be applied subsequently.

The UE is initially in CELL_DCH state as specified in clause 7.4 of TS 34.108. UTRA cell 1 is the only cell in the active set of the UE. The SS sends a PHYSICAL CHANNEL RECONFIGURATION message to the UE to configure the compressed mode pattern sequence parameters to the UE. Three compressed mode patterns are configured, according to the message specified below. When the PHYSICAL CHANNEL RECONFIGURATION COMPLETE is received from the UE, the SS sends a MEASUREMENT CONTROL message to the UE, to set up inter-RAT measurements on 12 GSM cells. Event 3c is set up in this message, and compressed mode is activated.

At instant T1, the RF signal strength for GSM cell 1 increases as described in table 8.4.1.40.4-2, since the cell individual offset for GSM cell 1 is 10 dB, event 3c shall be triggered in the UE. A MEASUREMENT REPORT shall be sent to the SS. Note that GSM cell 2 has not triggered event 3c even though the RF signal strength for GSM cell 2 is the same as for cell 1, because the cell individual offset for GSM cell 2 is -3 dB.

At instant T2, the RF signal strength for GSM cell 1 drops as described in table 8.4.1.40.4-2, and at instant T3, it increases again to its previous level. No MEASUREMENT REPORT shall be received from the UE, since GSM cell 1 has already triggered event 3c, and since the RF signal strength has not dropped enough for the leaving condition to be met. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to the CELL_DCH state in the cell 1. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | Compressed mode pattern sequence parameters are loaded to UE. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | MEASUREMENT CONTROL | SS configures event 3c in the UE, compressed mode is started. |
| 5 | | | | SS waits for approximately 10 seconds and verifies that no MEASUREMENT REPORT messages are detected on uplink DCCH. |
| 6 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in table 8.4.1.40.4-2. |
| 7 | → | | MEASUREMENT REPORT | After about 1.6 s, the UE sends a MEASUREMENT REPORT to SS triggered by event 3c. |
| 8 | | | | SS re-adjusts the downlink transmission power settings according to columns "T2" in table 8.4.1.40.4-2. |
| 9 | | | | SS re-adjusts the downlink transmission power settings according to columns "T3" in table 8.4.1.40.4-2. |
| 10 | | | | SS waits for approximately 10 seconds and verifies that no MEASUREMENT REPORT messages are detected on uplink DCCH. |
| 11 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type in clause 9 of TS 34.108 titled "Non speech in CS" or "Speech in CS" or "Packet to CELL_DCH from CELL_DCH in PS, with Scrambling code change set to Default1 and with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM Carrier RSSI Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 16 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 2 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC identification | |
| - TGPRC | Infinity | |
| - TGSN | 8 | |
| - TGL1 | 14 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 24 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | 66 | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 3 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |

| | | |
|---|---|---|
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC re-confirmation | |
| - TGPRC | Infinity | |
| - TGSN | 8 | |
| - TGL1 | 14 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 24 | |
| - TGPL2 | Not present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | 10 (5 s) | |
| Downlink information per radio link list | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Serving E-DCH radio link indicator | FALSE | Rel-6 |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - E-AGCH Info | Not Present | Rel-6 |
| - E-HICH Information | Not Present | Rel-6 |
| - E-RGCH Information | Not Present | Rel-6 |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 4)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| -Remove all inter-RAT cells | (No Data) |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | 0 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 10 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 1 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | -3 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC2 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 2 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC3 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 3 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC4 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 4 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC5 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 5 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC6 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |

| Information Element | Value/remark |
|---|---|
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 6 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC7 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 7 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC8 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 8 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC9 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 9 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC10 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 10 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC11 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - inter-RAT cell id | 11 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC12 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | Not included |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | required |
| - inter-RAT reporting quantity | |
| CHOICE system | GSM |
| - Observed time difference to to GSM | FALSE |

| Information Element | Value/remark |
|---|---|
| cell reporting indicator | |
| - GSM carrier RSSI reporting indicator | TRUE |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | |
| - Inter-RAT event identity | 3c |
| - Threshold own system | Not included |
| - W | Not included |
| - Threshold other system | -74 |
| - Hysteresis | 5 (2.5 dB) |
| - Time to Trigger | 100 ms |
| - Reporting cell status | Report cells within active set or within virtual active set or of the other RAT |
| - Maximum number of reported cells | 2 |
| Physical channel information elements | |
| - DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN + (256 - 11 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence (1 to <MaxTGPS>) | |
| - TGPSI | 1 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (256 – 11 – TTI/10msec)) mod 256 |
| - TGPSI | 2 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (256 – 7 – TTI/10msec)) mod 256 |
| - TGPSI | 3 |
| - TGPS status flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec)) mod 256 |

MEASUREMENT REPORT (Step 7)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 3 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | Check that measurement results for two GSM cells are included | |
| - GSM carrier RSSI | Check that measurement result is reasonable. RXLEV is mapped to a value between 0 and 63. The RSSI bits are numbered b0 to b5, where b0 is the least significant bit. When mapping the RXLEV value to the RSSI bit string, the first/ leftmost bit of the bit string contains the most significant bit. | |
| CHOICE BSIC | Check it is set to verified BSIC | |
| - inter-RAT cell id | Check that it is set to either 0 or 1 | |
| - Observed time difference to GSM cell | Check that the IE is not included | R99 and Rel-4 only |
| - GSM carrier RSSI | Check that measurement result is reasonable | |
| CHOICE BSIC | Verified BSIC | |
| - inter-RAT cell id | Check that is set to 1 if the previous inter-RAT cell id was set to 0 or to 0 if the previous cell if was set to 1. | |
| - Observed time difference to GSM cell | Check that the IE is not present | R99 and Rel-4 only |
| Measured results on RACH | Check that not present | |
| Additional Measured results | Check that not present | |
| Event results | Check that the IE is included | |
| - CHOICE event result | Check that this is set to inter-RAT measurement event results | |
| - Inter-RAT event identity | Check that this is set to 3c | |
| - Cells to report (1 to <maxCellMeas>) | Check that <maxCellMeas> is set to 1 | |
| - CHOICE BSIC | Check that this is set to verified BSIC | |
| - Inter-RAT cell id | Check that this is set to 0. | |

#### 8.4.1.40.5 Test Requirement

After instant T1, since the cell individual offset for GSM cell 1 is +10 dB, event 3c shall be triggered in the UE, i.e the UE shall begin to transmit a MEASUREMENT REPORT to the SS. Note that GSM cell 2 has not triggered event 3c even though the RF signal strength for GSM cell 2 is the same as for cell 1, because the cell individual offset for GSM cell 2 is -3 dB.

After instant T2, no MEASUREMENT REPORT shall be received from the UE, since GSM cell 1 has already triggered event 3c, and since the RF signal strength has not dropped enough for the leaving condition to be met.

### 8.4.1.41 Measurement Control and Report: Additional Measurements list

#### 8.4.1.41.1 Definition

#### 8.4.1.41.2 Conformance requirement

For the measurement, which triggered the MEASUREMENT REPORT message, the UE shall:

…..

1> set the IE "Measured results" in the IE "Additional measured results" according to the IE "reporting quantity" for all measurements associated with the measurement identities included in the "Additional measurements list" stored in variable MEASUREMENT_IDENTITY of the measurement that triggered the measurement report; and

2> if more than one additional measured results are to be included:

3> include only the available additional measured results, and sort them in ascending order according to their IE "measurement identity" in the MEASUREMENT REPORT message.

……

If the IE "Additional Measurement List" is received in a MEASUREMENT CONTROL message, the UE shall:

1> if the received measurement configuration in this MEASUREMENT CONTROL message, or any measurement referenced in the "Additional Measurement List" do not all have the same validity (for this consistency check the UE should assume "CELL_DCH" as the measurement validity for measurements of type "inter-RAT", "UE internal", and "quality"):

2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

1> if any of the measurements referenced in the "Additional Measurement List" is an intra-frequency, inter-frequence or inter-RAT measurement, and this measurement is configured with event based reporting:

2> the UE behaviour is not specified.

1> if the result of this MEASUREMENT CONTROL message is such that more than one additional measurement of the same type will be referenced in the IE "Additional Measurement List" in the MEASUREMENT_IDENTITY variable:

2> the UE behaviour is not specified.

…

If the measurement configured with the MEASUREMENT CONTROL message triggers a measurement report, the UE shall also include the reporting quantities for the measurements referenced by the additional measurement identities. The contents of the IE "Additional Measured results" is completely determined by the measurement configuration of the referenced additional measurement.

…..

Reference

3GPP TS 25.331, clause 8.4.2.2, 8.6.7.22

### 8.4.1.41.3 Test Purpose

1. To confirm that the UE reports measured results for a referenced additional measurement.
2. To confirm that the UE transmits MEASUREMENT REPORT messages for a measurement, also if this measurement is referenced as an additional measurement by another measurement.

### 8.4.1.41.4 Method of test

Initial Condition

System Simulator: 1 cell, cell 1.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

The UE is in CELL_DCH state in cell 1, after successfully executing procedures P11 or P13 as specified in clause 7.4 of TS 34.108. Next, SS transmits MEASUREMENT CONTROL message to request the UE to perform UE internal measurements and reporting for events 6A and 6B, followed by a MEASUREMENT CONTROL message to request the UE to perform a periodic intra-frequency measurement. The intra-frequency measurement configuration references as an additional measurement the measurement defined by the first MEASUREMENT CONTROL message.

The UE will start to periodically send MEASUREMENT REPORT messages for the intra-frequency measurement. The reports shall include the UE Tx power as an additional measurement result.

After two MEASUREMENT REPORT messages, the SS increases the UE Tx power above the threshold set to event 6A. After 'time to trigger' the UE sends MEASUREMENT REPORT, triggered by event 6A, to the SS.

Next the SS decreases the UE Tx power below the threshold set for event 6B. After 'time to trigger' UE sends MEASUREMENT REPORT, triggered by event 6B, to the SS.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | void | |
| 2 | ← | | MEASUREMENT CONTROL | SS requests for measurement and reporting for events 6A and 6B. |
| 3 | ← | | MEASUREMENT CONTROL | SS requests a periodic intra-frequency measurement. |
| 3a | → | | MEASUREMENT REPORT | UE shall send a periodical measurement report. Check the current transmission power of UE from the IE transmitted power FDD or TDD of measurement report. |
| 3b | | | | SS sets the UE transmission power between 6dbm and 18 dBm. |
| 4 | → | | MEASUREMENT REPORT | |
| 5 | → | | MEASUREMENT REPORT | Time difference between earlier and this MEASUREMENT REPORT message should be 32 seconds. |
| 6 | | | | SS sets the UE transmission power above 18 dBm. |
| 7 | → | | MEASUREMENT REPORT | UE shall send 6A event measurement report. |
| 8 | | | | SS sets the UE transmission power below 6 dBm. |
| 9 | → | | MEASUREMENT REPORT | UE shall send 6B event measurement report. |

Specific Message Content

MEASUREMENT CONTROL (Step 2)(FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 5 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement | |
| - UE internal measurement quantity | Present |
| -CHOICE *mode* | FDD |
| -UE internal measurement quantity | UE Transmitted Power |
| -Filter coefficient | 0 |
| - UE internal reporting quantity | Present |
| - UE Transmitted Power | TRUE |
| - CHOICE *mode* | FDD |
| - UE Rx-Tx time difference | FALSE |
| - CHOICE *report criteria* | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| -UE internal event identity | 6A |
| -Time-to-trigger | 100 milliseconds |
| -UE Transmitted Power Tx power threshold | 18 dBm |
| -UE internal event identity | 6B |
| -Time-to-trigger | 100 milliseconds |
| -UE Transmitted Power Tx power threshold | 6 dBm |
| DPCH compressed mode status info | Not Present |

MEASUREMENT CONTROL (Step 2)(1.28Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 5 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger Reporting |
| Additional measurements list | Not Present |
| CHOICE measurement type | UE internal measurement |
| - UE internal measurement | |
| - UE internal measurement quantity | Present |
| -CHOICE *mode* | TDD |
| -UE internal measurement quantity | UE Transmitted Power |
| -Filter coefficient | 0 |
| - UE internal reporting quantity | Present |
| - UE Transmitted Power | TRUE |
| - CHOICE *mode* | TDD |
| - CHOICE *TDD option* | 1.28 Mcps TDD |
| - $T_{ADV}$ info | FALSE |
| - CHOICE *report criteria* | UE internal measurement reporting criteria |
| - Parameters sent for each UE internal measurement event | |
| -UE internal event identity | 6A |
| -Time-to-trigger | 100 milliseconds |
| -UE Transmitted Power Tx power threshold | 18 dBm |
| -UE internal event identity | 6B |
| -Time-to-trigger | 100 milliseconds |
| -UE Transmitted Power Tx power threshold | 6 dBm |
| DPCH compressed mode status info | Not Present |

MEASUREMENT CONTROL (Step 3) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurements list | |
| - Additional measurement identity | 5 |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present (Default is 0) |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active set |
| - Maximum number of reported cells | 2 |
| - Measurement validity | CELL_DCH |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 32 seconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT CONTROL (Step 3)( 1.28Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Periodical Reporting |
| Additional measurements list | |
| - Additional measurement identity | 5 |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | Not Present (Default is 0) |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | |
| - CHOICE reported cell | Report cells within active set |
| - Maximum number of reported cells | 1 |
| - Measurement validity | CELL_DCH |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 32 seconds |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 3a) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - SFN-SFN observed time difference | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | |
| - Measured results | UE internal measured results |
| - UE transmitted power | Check to see if it is present |
| - UE RX TX report entry list | Check to see if it is absent |
| Event Results | Check to see if this IE is absent |

MEASUREMENT REPORT (Step 3a) (1.28Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | |
| - Cell parameters Id | Check to see if it's the same code for cell 1 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | |
| - Measured results | UE internal measured results |
| - UE transmitted power | Check to see if it is present |
| - UE RX TX report entry list | Check to see if it is absent |
| Event Results | Check to see if this IE is absent |

MEASUREMENT REPORT (Step 4 and step 5) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - SFN-SFN observed time difference | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | |
| - Measured results | UE internal measured results |
| - UE transmitted power | Check to see if it is present and value is reasonable |
| - UE RX TX report entry list | Check to see if it is absent |
| Event Results | Check to see if this IE is absent |

MEASUREMENT REPORT (Step 4 and step 5) (1.28Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if this IE is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - CHOICE mode | |
| - Cell parameters Id | Check to see if it's the same code for cell 1 |
| - Proposed TGSN | Check to see if this IE is absent |
| - Primary CCPCH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot list | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | |
| - Measured results | UE internal measured results |
| - UE transmitted power | Check to see if it is present and value is reasonable |
| - UE RX TX report entry list | Check to see if it is absent |
| Event Results | Check to see if this IE is absent |

MEASUREMENT REPORT (Step 7) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| - UE internal measured results | |
| -CHOICE *mode* | Check to see if set to "FDD" |
| UE Transmitted Power | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6A" |
| -CHOICE *mode* | Check to see if set to "FDD" |
| -Primary CPICH info | Check to see if this IE is absent |

MEASUREMENT REPORT (Step 7) (1.28Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| - UE internal measured results | |
| -CHOICE *mode* | Check to see if set to "TDD" |
| -UE Transmitted Power list | |
| UE Transmitted Power | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6A" |
| -CHOICE *mode* | Check to see if set to "TDD" |

MEASUREMENT REPORT (Step 9) (FDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| - UE internal measured results | |
| -CHOICE *mode* | Check to see if set to "FDD" |
| UE Transmitted Power | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6B" |
| -CHOICE *mode* | Check to see if set to "FDD" |
| -Primary CPICH info | Check to see if this IE is absent |

MEASUREMENT REPORT (Step 9) (1.28Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 5 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "UE Internal measured results" |
| - UE internal measured results | |
| -CHOICE *mode* | Check to see if set to "TDD" |
| -UE Transmitted Power list | |
| UE Transmitted Power | Check to see if present and value is reasonable |
| Measured Results on RACH | Check to see if this IE is absent |
| Event results | |
| -CHOICE *event result* | Check to see if set to "UE internal measurement event results" |
| -UE internal event identity | Check to see if set to "6B" |
| -CHOICE *mode* | Check to see if set to "TDD" |

### 8.4.1.41.5 Test Requirement

After step 3, the UE shall periodically transmit a MEASUREMENT REPORT message for measurement identity 5. In addition to the CPICH RSCP, these reports shall also include the UL Tx power with a reasonable value.

After step 6, the UE shall transmit a MEASUREMENT REPORT message, containing measured results for UE transmitted power. The 'Event results' IE contains event identity 6A.

After step 8, the UE shall transmit a MEASUREMENT REPORT message, containing measured results for UE transmitted power. The 'Event results' IE contains event identity 6B.

## 8.4.1.42 Measurement Control and Report: Change of Compressed Mode Method

### 8.4.1.42.1 Definition

### 8.4.1.42.2 Conformance requirement

If variable INVALID_CONFIGURATION has value FALSE after UE has performed the checks above, the UE shall:

1> if pattern sequence corresponding to IE "TGPSI" is already active (according to "Current TGPS Status Flag") in the variable TGPS_IDENTITY):

2> if the "TGPS Status Flag" in this message is set to "deactivate" for the corresponding pattern sequence:

3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time"(see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.

3> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "inactive" at the frame, indicated by IE "Activation time" (see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.

2> if the "TGPS Status Flag" in this message is set to "activate" for the corresponding pattern sequence:

3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time"(see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.

NOTE1: The temporary deactivation of pattern sequences for which the status flag is set to "activate" can be used by the network to align the timing of already active patterns with newly activated patterns.

NOTE2: The deactivation of pattern sequences only occurs as a result of RRC messages received by the UE, i.e. the UE does not set the "Current TGPS Status Flag" to "inactive" after the final gap of a finite length pattern sequence.

1> update each pattern sequence to the variable TGPS_IDENTITY according to the IE "TGPSI";

1> update into the variable TGPS_IDENTITY the configuration information defined by IE group" transmission gap pattern sequence configuration parameters ";

1> after the instant in which the message is to be executed, as specified in subclause 8.6.3.1:

2> activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" in the variable TGPS_IDENTITY is set to "activate" at the time indicated by IE "TGCFN"; and

2> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "active".

NOTE1: If the pattern is activated with a message that includes the IE "Activation time", and if the CFN value indicated by the IE "Activation Time" and the CFN value indicated by the TGCFN are included in the same TTI (but not at the TTI boundary) common to all the transport channels that are multiplexed onto the reference CCTrCh (as defined in subclause 8.6.3.1), and if the CFN value indicated by the TGCFN is equal or higher than the CFN value indicated by the IE "Activation Time" (as defined in subclause 8.6.3.1) value, the UE behaviour is not specified.

NOTE2: If the pattern is activated with a message used to perform timing re-initialised hard handover, the UE can start evaluating the activation of the pattern (i.e. compare the value of the CFN in the new configuration with the value of the TGCFN) at any time between the message activation time and the completion of the synchronisation procedure A.

2> if the IE "DPCH compressed mode info" is included in a message used to perform a Hard Handover with change of frequency (see subclause 8.3.5); or

2> if the IE "DPCH compressed mode info" is included in a message used to transfer the UE from Cell_FACH to Cell_DCH, and the cell in which the UE transited from CELL_FACH state is not included in the active set for the CELL_DCH state (see subclause 8.4.1.7.2):

3> not begin the inter-frequency measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence.

2> else:

3> begin the inter-frequency measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence.

2> begin the inter-RAT measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence;

2> if the new configuration is taken into use at the same CFN as indicated by IE "TGCFN":

3> start the concerned pattern sequence immediately at that CFN.

1> monitor if the parallel transmission gap pattern sequences create an illegal overlap, and in case of overlap, take actions as specified in subclause 8.2.11.2.

….

Uplink and downlink compressed mode methods are described in TS 25.212. For UL "higher layer scheduling" compressed mode method and transport format combination selection, see TS 25.321.

Reference

3GPP TS 25.331 clause 8.6.6.15.

### 8.4.1.42.3 Test purpose

To confirm that the UE supports change of compressed mode method included in a RADIO BEARER SETUP message.

To confirm that the UE supports change of compressed mode method included in a RADIO BEARER RELEASE message.

### 8.4.1.42.4 Method of test

Initial Condition

System Simulator: 3 cells – Cell 1 on frequency $f_1$, cell 4 on frequency $f_2$ and cell 5 on frequency $f_3$.

UE: "PS-DCCH_DCH" (state 6-7) as specified in clause 7.4 of TS 34.108.

This test case applies only for UEs requiring compressed mode to perform inter- frequency measurements and supporting both PS and CS domains.

Test Procedure

Table 8.4.1.42-1 illustrates the downlink power to be applied for the 3 cells, as well as the frequency and scrambling code for each cell.

**Table 8.4.1.42-1a**

| Parameter | Unit | Cell 1 | | | | | |
|---|---|---|---|---|---|---|---|
| Frequency | | $f_1$ | | | | | |
| Scrambling code | | Scrambling code 1 | | | | | |
| | | T0 | T1 | T2 | T3 | T4 | T5 |
| CPICH Ec | dBm/3.84 MHz | -60 | -70 | -70 | -60 | -70 | -70 |

**Table 8.4.1.42-1b**

| Parameter | Unit | Cell 4 | | | | | | Cell 5 | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Frequency | | $f_2$ | | | | | | $f_3$ | | | | | |
| Scrambling code | | Scrambling code 3 | | | | | | Scrambling code 2 | | | | | |
| | | T0 | T1 | T2 | T3 | T4 | T5 | T0 | T1 | T2 | T3 | T4 | T5 |
| CPICH Ec | dBm/3.84 MHz | -95 | -60 | -60 | -95 | -60 | -60 | -95 | -95 | -60 | -95 | -95 | -60 |

The UE is initially in CELL_DCH, and has only cell 1 in its active set.

The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to download compressed mode parameters in the UE but without activating compressed mode. The UE shall answer with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

The SS then sets up inter-frequency measurements (event 2b), by sending a MEASUREMENT CONTROL message to the UE.

The SS waits for 2560 ms for the UE to activate compressed mode.

At instant T1, the downlink power is changed according to what is shown in table 8.4.1.42-1. Frequency $f_2$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

The SS establishes PS domain RAB and changes compressed mode method (from SF/2 to HLS) by sending a RADIO BEARER SETUP message on DCCH using AM-RLC. The UE shall answer with a RADIO BEARER SETUP COMPLETE message.

At instant T2, the downlink power is changed according to what is shown in table 8.4.1.42-1. Frequency $f_3$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

At instant T3, the downlink power is changed according to what is shown in table 8.4.1.42-1.The increased quality of the used frequency should result in clearing of the concerning TRIGGERED_2B_EVENT.

The SS initiates an MT CS call, establishes a CS domain RAB and changes the compressed mode method to (from HLS to SF/2), by sending a RADIO BEARER SETUP message on DCCH using AM-RLC. The UE shall answer with a RADIO BEARER SETUP COMPLETE message.

At instant T4, the downlink power is changed according to what is shown in table 8.4.1.42-1. Frequency $f_2$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

Next, the SS releases the CS domain RAB and changes compressed mode method (from SF/2 to HLS) by sending a RADIO BEARER RELEASE message on DCCH using AM-RLC. The UE shall answer with a RADIO BEARER RELEASE COMPLETE message.

At instant T5, the downlink power is changed according to what is shown in table 8.4.1.42-1. Frequency $f_3$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS downloads compressed mode parameters (using SF/2 method) without activating compressed mode |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE acknowledges the downloading of compressed mode parameters |
| 3 | ← | | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE and activates compressed mode |
| 4 | | | | The SS changes the power of the cells according to column T1 in table 8.4.1.42-1. |
| 5 | → | | MEASUREMENT REPORT | Frequency $f_2$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 5a | ← | | RADIO BEARER SETUP | SS establishes PS domain RAB and changes compressed mode method to HLS. |
| 5b | → | | RADIO BEARER SETUP COMPLETE | The UE acknowledges the establishment of the RAB and the compressed mode method change. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 5c | | | | The SS changes the power of the cells according to column T2 in table 8.4.1.42-1. |
| 5d | → | | MEASUREMENT REPORT | Frequency $f_3$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 5e | | | | The SS changes the power of the cells according to T3 in table 8.4.1.42-1 (so the UE can trigger event 2b again for both frequencies if suitable conditions arise) |
| 5f | ← | | PAGING TYPE 2 | Initiates MT CS call |
| 5g | → | | INITIAL DIRECT TRANSFER (PAGING RESPONSE) | RR |
| 5h | ← | | DOWNLINK DIRECT TRANSFER (AUTHENTICATION REQUEST) | MM |
| 5i | → | | UPLINK DIRECT TRANSFER (AUTHENTICATION RESPONSE) | MM |
| 5j | ← | | SECURITY MODE COMMAND | |
| 5k | → | | SECURITY MODE COMPLETE | |
| 5l | ← | | DOWNLINK DIRECT TRANSFER (SET UP) | CC |
| 5m | → | | UPLINK DIRECT TRANSFER (CALL CONFIRMED) | CC |
| 6 | ← | | RADIO BEARER SETUP | SS establishes CS domain RAB and changes to SF/2 compressed mode method |
| 7 | → | | RADIO BEARER SETUP COMPLETE | The UE acknowledges the establishment of the RAB and the compressed mode method change. |
| 7a | → | | UPLINK DIRECT TRANSFER (ALERTING) | CC (This message is optional) |
| 7b | → | | UPLINK DIRECT TRANSFER (CONNECT) | CC |
| 7c | ← | | DOWNLINK DIRECT TRANSFER (CONNECT ACKNOWLEDGE) | CC |
| 8 | | | | The SS changes the power of the cells according to column T4 in table 8.4.1.42-1. |
| 9 | → | | MEASUREMENT REPORT | Frequency $f_2$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 10 | | | Void | |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | | | Void | |
| 14 | | | Void | |
| 15 | ← | | RADIO BEARER RELEASE | SS releases the CS domain RAB and changes compressed mode method toHLS. |
| 16 | → | | RADIO BEARER RELEASE COMPLETE | The UE acknowledges the release of the RAB and the compressed mode method change. |
| 17 | | | | The SS changes the power of the cells according to column T5 in table 8.4.1.42-1. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 18 | → | | MEASUREMENT REPORT | Frequency $f_3$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |

Specific Message Content

All messages shall use the same content as defined in [9] TS 34.108 clause 9, with the following exceptions:

PHYSICAL CHANNEL RECONFIGURATION MESSAGE (Step 1)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | Not Present | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE *channel requirement* | Not Present | |
| CHOICE *mode* | FDD | |
| - Downlink PDSCH information | Not Present | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | SF/2 (or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | SF/2 (or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information for each radio link | Same as the set defined in RADIO BEARER SETUP message found in TS 34.108 clause 9 under condition A3. | |

MEASUREMENT CONTROL (Step 3)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | 2 inter-frequency cells |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_2$ |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code 3 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Inter-frequency cell id | 5 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_3$ |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | Not present |
| - Primary Scrambling Code | Scrambling code 2 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | Not present |
| - Measurement validity | |

| | |
|---|---|
| - UE State | CELL_DCH |
| - Inter-frequency set update | |
| - UE autonomous update | On with no reporting |
| - Non autonomous update mode | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -65 dBm |
| - W used frequency | 0.0 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -68 dBm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Status Flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

MEASUREMENT REPORT (Step 5,9)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 |

RADIO BEARER SETUP (Step 5a)

Use the same message sub-type found in TS 34.108 clause 9, which is entitled "Packet to CELL_DCH from CELL_DCH in PS", with Scrambling code change set to Default1 and with the following modifications:

| Information Element | Value/Remark | Version |
|---|---|---|
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Activate | |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

| | | |
|---|---|---|
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

PAGING TYPE 2 (Step 5f)

Use the same message type found in TS 34.108 clause 9.

RADIO BEARER SETUP (Step 6)

Use the same message sub-type found in TS 34.108 clause 9, which is entitled "Non speech to CELL_DCH from CELL_DCH in CS" or "Speech to CELL_DCH from CELL_DCH in CS", with Scrambling code change set to Default1 and with the following modifications:

| Information Element | Value/Remark | Version |
|---|---|---|
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Activate | |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | SF/2(or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | SF/2(or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Downlink DPCH info for each RL | | |

| | | |
|---|---|---|
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Downlink DPCH info for each RL | Not present | |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT REPORT (Step 5d,18)

NOTE: Due to ambiguity in 25.331 clause 14.2.1.2 – two interpretations can be given for MEASUREMENT REPORT

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_3$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 2 (on $f_3$) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_3$ |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 2 (on $f_3$) |

OR:

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | Check to see if measurement results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | Check that the value of this IE is set to UARFCN for the uplink corresponding to $f_2$ (Could be absent in case the duplex distance is the default duplex distance) |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 2 cells reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 (on $f_2$) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | Check that the value of this IE is set to UARFCN for the uplink corresponding to $f_3$(Could be absent in case the duplex distance is the default duplex distance) |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_3$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code Scrambling code 2 (on $f_3$) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | Check to see if event results for 2 cells are included (the order in which the different cells are reported is not important) |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | Check that the value of this IE is set to UARFCN for the uplink corresponding to $f_2$ (Could be absent in case the duplex distance is the default duplex distance) |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the |

| Information Element | Value/Remark |
|---|---|
| | downlink corresponding to $f_2$ |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 (on $f_2$) |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | Check that the value of this IE is set to UARFCN for the uplink corresponding to $f_3$(Could be absent in case the duplex distance is the default duplex distance) |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_3$ |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 2 (on $f_3$) |

RADIO BEARER RELEASE (Step 15)

Use the same message sub-type found in TS 34.108 clause 9, which is entitled “Non speech in CS” or "Speech in CS", with Scrambling code change set to Default1 and with the following modifications

| Information Element | Value/Remark | Version |
|---|---|---|
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Activate | |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| Downlink information for each radio link list | | |
| -Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Serving E-DCH radio link indicator | FALSE | Rel-6 |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |

| | | |
|---|---|---|
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - Secondary scrambling code | | |
| - channelisation code | | |
| - DL channelisation code | | |
| - Secondary scrambling code | 3 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |
| | Set to value: OMIT (otherwise) | Default2 |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - E-AGCH Info | Not present | Rel-6 |
| - E-HICH Information | Not present | Rel-6 |
| - E-RGCH Information | Not present | Rel-6 |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

#### 8.4.1.42.5 Test Requirement

After step 1, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS to acknowledge the downloading of compressed mode parameters that were included in the PHYSICAL CHANNEL RECONFIGURATION message of step 1.

After step 4, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_2$. That message shall only include cell 4 within the IE event results.

After step 5a, the UE shall send a RADIO BEARER SETUP COMPLETE message to the SS to acknowledge the establishment of the RAB and the change of compressed mode method that were included in the RADIO BEARER SETUP message of step 5a.

After step 5c, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_3$.

After step 6, the UE shall send a RADIO BEARER SETUP COMPLETE message to acknowledge the establishment of the RAB and the compressed mode method change that were included in the RADIO BEARER SETUP message of step 6.

After step 8, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_2$. That message shall only include cell 4 within the IE event results.

After step 15, the UE shall send a RADIO BEARER RELEASE COMPLETE message to acknowledge the release of the RAB and the compressed mode method change that were included in the RADIO BEARER RELEASE message of step 15.

After step 17, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_3$.

### 8.4.1.43 Measurement Control and Report: Compressed Mode Reconfiguration

#### 8.4.1.43.1 Definition

#### 8.4.1.43.2 Conformance requirement

If variable INVALID_CONFIGURATION has value FALSE after UE has performed the checks above, the UE shall:

1> if pattern sequence corresponding to IE "TGPSI" is already active (according to "Current TGPS Status Flag") in the variable TGPS_IDENTITY):

2> if the "TGPS Status Flag" in this message is set to "deactivate" for the corresponding pattern sequence:

3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time"(see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.

3> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "inactive" at the frame, indicated by IE "Activation time" (see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.

2> if the "TGPS Status Flag" in this message is set to "activate" for the corresponding pattern sequence:

3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time"(see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.

NOTE 1: The temporary deactivation of pattern sequences for which the status flag is set to "activate" can be used by the network to align the timing of already active patterns with newly activated patterns.

NOTE 2: The deactivation of pattern sequences only occurs as a result of RRC messages received by the UE, i.e. the UE does not set the "Current TGPS Status Flag" to "inactive" after the final gap of a finite length pattern sequence.

1> update each pattern sequence to the variable TGPS_IDENTITY according to the IE "TGPSI";

1> update into the variable TGPS_IDENTITY the configuration information defined by IE group" transmission gap pattern sequence configuration parameters ";

1> after the instant in which the message is to be executed, as specified in subclause 8.6.3.1:

2> activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" in the variable TGPS_IDENTITY is set to "activate" at the time indicated by IE "TGCFN"; and

2> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "active".

NOTE 1: If the pattern is activated with a message that includes the IE "Activation time", and if the CFN value indicated by the IE "Activation Time" and the CFN value indicated by the TGCFN are included in the same TTI (but not at the TTI boundary) common to all the transport channels that are multiplexed onto the reference CCTrCh (as defined in subclause 8.6.3.1), and if the CFN value indicated by the TGCFN is equal or higher than the CFN value indicated by the IE "Activation Time" (as defined in subclause 8.6.3.1) value, the UE behaviour is not specified.

NOTE 2: If the pattern is activated with a message used to perform timing re-initialised hard handover, the UE can start evaluating the activation of the pattern (i.e. compare the value of the CFN in the new configuration with the value of the TGCFN) at any time between the message activation time and the completion of the synchronisation procedure A.

2> if the IE "DPCH compressed mode info" is included in a message used to perform a Hard Handover with change of frequency (see subclause 8.3.5); or

2> if the IE "DPCH compressed mode info" is included in a message used to transfer the UE from Cell_FACH to Cell_DCH, and the cell in which the UE transited from CELL_FACH state is not included in the active set for the CELL_DCH state (see subclause 8.4.1.7.2):

3> not begin the inter-frequency measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence.

2> else:

3> begin the inter-frequency measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence.

2> begin the inter-RAT measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence;

2> if the new configuration is taken into use at the same CFN as indicated by IE "TGCFN":

3> start the concerned pattern sequence immediately at that CFN.

1> monitor if the parallel transmission gap pattern sequences create an illegal overlap, and in case of overlap, take actions as specified in subclause 8.2.11.2.

If the IE "DPCH compressed mode info" is included, and if the IE group "transmission gap pattern sequence configuration parameters" is not included, the UE shall:

1> if, as the result of this message, UE will have more than one transmission gap pattern sequence with the same measurement purpose active (according to IEs "TGMP" and "Current TGPS Status Flag" in variable TGPS_IDENTITY):

2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

1> if there is any pending "TGPS reconfiguration CFN" or any pending "TGCFN":

2> the UE behaviour is unspecified.

1> if pattern sequence corresponding to IE "TGPSI" is already active (according to "Current TGPS Status Flag" in the variable TGPS_IDENTITY):

2> if the "TGPS Status Flag" in this message is set to "deactivate" for the corresponding pattern sequence:

3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time"(see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use;

3> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "inactive" at the frame, indicated by IE "Activation time"(see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.

2> if the "TGPS Status Flag" in this message is set to "activate" for the corresponding pattern sequence:

3> deactivate this pattern sequence at the beginning of the frame, indicated by IE "Activation time"(see subclause 8.6.3.1) received in this message, when the new configuration received in this message is taken into use.

NOTE 1: The temporary deactivation of pattern sequences for which the status flag is set to "activate" can be used by the network to align the timing of already active patterns with newly activated patterns.

NOTE 2: The deactivation of pattern sequences only occurs as a result of RRC messages received by the UE, i.e. the UE does not set the "Current TGPS Status Flag" to "inactive" after the final gap of a finite length pattern sequence.

1> after the instant in which the message is to be executed, as specified in subclause 8.6.3.1:

2> activate the stored pattern sequence corresponding to each IE "TGPSI" for which the "TGPS status flag" is set to "activate" at the time indicated by IE "TGCFN"; and

NOTE 1: If the pattern is activated with a message that includes the IE "Activation time", and if the CFN value indicated by the IE "Activation Time" and the CFN value indicated by the TGCFN are included in the same TTI (but not at the TTI boundary) common to all the transport channels that are multiplexed onto the reference CCTrCh (as defined in subclause 8.6.3.1), and if the CFN value indicated by the TGCFN is equal or higher than the CFN value indicated by the IE "Activation Time" (as defined in subclause 8.6.3.1) value, the UE behaviour is not specified.

NOTE 2: If the pattern is activated with a message used to perform timing re-initialised hard handover, the UE can start evaluating the activation of the pattern (i.e. compare the value of the CFN in the new configuration with the value of the TGCFN) at any time between the message activation time and the completion of the synchronisation procedure A.

2> set the "Current TGPS Status Flag" for this pattern sequence in the variable TGPS_IDENTITY to "active".

2> if the IE "DPCH compressed mode info" is included in a message used to perform a Hard Handover with change of frequency (see subclause 8.3.5); or

2> if the IE "DPCH compressed mode info" is included in a message used to transfer the UE from Cell_FACH to Cell_DCH, and the cell in which the UE transited from CELL_FACH state is not included in the active set for the CELL_DCH state (see subclause 8.4.1.7.2):

3> not begin the inter-frequency measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence.

2> else:

3> begin the inter-frequency measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence.

2> begin the inter-RAT measurement reporting corresponding to the pattern sequence measurement purpose of each activated pattern sequence;

2> if the new configuration is taken into use at the same CFN as indicated by IE "TGCFN":

3> start the concerned pattern sequence immediately at that CFN.

For transmission gap pattern sequences stored in variable TGPS_IDENTITY, but not identified in IE "TGPSI" (either due to the absence of the IE "DPCH compressed mode info" in the received message or due to not receiving the corresponding TGPSI value in the IE "DPCH compressed mode info"), the UE shall:

1> if the received message implies a timing re-initialised hard handover (see subclause 8.3.5.1):

2> deactivate such transmission gap pattern sequences at the beginning of the frame, indicated by IE "Activation time" (see subclause 8.6.3.1) received in this message; and

2> set IE "Current TGPS Status Flag" in corresponding UE variable TGPS_IDENTITY to 'inactive'.

1> if the received message not implies a timing re-initialised hard handover (see subclause 8.3.5.1):

2> continue such transmission gap pattern sequence according to IE "Current TGPS Status Flag" in the corresponding UE variable TGPS_IDENTITY.

Uplink and downlink compressed mode methods are described in [27]. For UL "higher layer scheduling" compressed mode method and transport format combination selection, see [15].

Reference

3GPP TS 25.331 clause 8.6.6.15.

#### 8.4.1.43.3 Test purpose

To confirm that the UE supports de- activation of compressed mode included in a RADIO BEARER SETUP message.

To confirm that the UE supports reconfiguration of transport channel parameters (rate reduction PS RAB) and change of compressed mode method included in a TRANSPORT CHANNEL RECONFIGURATION message.

To confirm that the UE supports change of compressed mode included in a RADIO BEARER RELEASE message.

To confirm that the UE supports reconfiguration of transport channel parameters (rate increase PS RAB) without performing hard handover included in a TRANSPORT CHANNEL RECONFIGURATION message.

#### 8.4.1.43.4 Method of test

Initial Condition

System Simulator: 3 cells – Cell 1 on frequency $f_1$, cell 4 on frequency $f_2$ and cell 5 on frequency $f_3$.

UE: "CS-DCCH + DTCH_DCH" (state 6-9) as specified in clause 7.4 of TS 34.108.

This test case applies only for UEs requiring compressed mode to perform inter- frequency measurements and supporting both PS and CS domains.

Test Procedure

Table 8.4.1.43-1 illustrates the downlink power to be applied for the 3 cells, as well as the frequency and scrambling code for each cell.

**Table 8.4.1.43-1a**

| Parameter | Unit | Cell 1 | | | | | |
|---|---|---|---|---|---|---|---|
| Frequency | | $f_1$ | | | | | |
| Scrambling code | | Scrambling code 1 | | | | | |
| | | T0 | T1 | T2 | T3 | T4 | T5 |
| CPICH Ec | dBm/3.84 MHz | -60 | -70 | -70 | -60 | -70 | -70 |

**Table 8.4.1.43-1b**

| Parameter | Unit | Cell 4 | | | | | | Cell 5 | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Frequency | | $f_2$ | | | | | | $f_3$ | | | | | |
| Scrambling code | | Scrambling code 3 | | | | | | Scrambling code 2 | | | | | |
| | | T0 | T1 | T2 | T3 | T4 | T5 | T0 | T1 | T2 | T3 | T4 | T5 |
| CPICH Ec | dBm/3.84 MHz | -95 | -60 | -60 | -95 | -60 | -60 | -95 | -95 | -60 | -95 | -95 | -60 |

The UE is initially in CELL_DCH, and has only cell 1 in its active set.

Next, SS transmits a PHYSICAL CHANNEL RECONFIGURATION message to download compressed mode parameters in the UE without activating compressed mode. The UE shall answer with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

The SS then sets up inter-frequency measurements (event 2b) and activates compressed mode, by sending a MEASUREMENT CONTROL message to the UE.

The SS waits for 2560 ms for the UE to activate compressed mode.

The test operator is prompted to setup a PS call. The SS establishes a PS domain RAB and de-activates compressed mode, by sending a RADIO BEARER SETUP message on DCCH using AM-RLC. The UE shall answer with a RADIO BEARER SETUP COMPLETE message.

At instant T1, the downlink power is changed according to what is shown in table 8.4.1.43-1. The SS shall then verify that the UE does not transmit a MEASUREMENT REPORT message.

Next the SS downloads compressed mode parameters and activates compressed mode (using HLS method) by sending a PHYSICAL CHANNEL RECONFIGURATION message on DCCH using AM-RLC. The UE shall answer with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

Frequency $f_2$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

Next, SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to reconfigure transport channel parameters (rate reduction PS RAB) and to change compressed mode method (to SF/2). The UE shall answer with a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message.

At instant T2, the downlink power is changed according to what is shown in table 8.4.1.43-1. Frequency $f_3$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

At instant T3, the downlink power is changed according to what is shown in table 8.4.1.43-1.The increased quality of the used frequency should result in clearing of the concerning TRIGGERED_2B_EVENT.

Next, SS transmits a RADIO BEARER RELEASE message to release the CS domain RAB and change compressed mode method (from SF/2 to HLS). The UE shall answer with a RADIO BEARER RELEASE COMPLETE message.

At instant T4, the downlink power is changed according to what is shown in table 8.4.1.43-1. Frequency $f_2$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

Next, SS transmits a TRANSPORT CHANNEL RECONFIGURATION message to reconfigure transport channel parameters (rate increase PS RAB) – without performing hard handover. The UE shall answer with a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message.

At instant T5, the downlink power is changed according to what is shown in table 8.4.1.43-1. Frequency $f_3$ shall then trigger event 2b, and the UE shall transmit a MEASUREMENT REPORT message to the SS.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS downloads compressed mode parameters (using SF/2 method) without activating compressed mode. |
| 2 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE acknowledges the downloading of compressed mode parameters. |
| 3 | ← | | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE and activates compressed mode. |
| 3a | | | | SS waits for 2560 ms. |
| 3b | → | | INITIAL DIRECT TRANSFER (SERVICE REQUEST) | GMM ( PS session setup is initiated from the UE side). |
| 3c | ← | | DOWNLINK DIRECT TRANSFER (AUTHENTICATION AND CIPHERING REQUEST) | GMM |
| 3d | → | | UPLINK DIRECT TRANSFER (AUTHENTICATION AND CIPHERING RESPONSE) | GMM |
| 3e | ← | | SECURITY MODE COMMAND | |
| 3f | → | | SECURITY MODE COMPLETE | |
| 3g | → | | UPLINK DIRECT TRANSFER (ACTIVATE PDP CONTEXT REQUEST) | SM |
| 4 | ← | | RADIO BEARER SETUP | SS establishes PS domain RAB and de- activates compressed mode. |
| 5 | → | | RADIO BEARER SETUP COMPLETE | The UE acknowledges the establishment of the RAB and the de- activation of compressed mode |
| 5a | ← | | DOWNLINK DIRECT TRANSFER (ACTIVATE PDP CONTEXT ACCEPT) | SM |
| 6 | | | | The SS changes the power of the cells according to column T1 in table 8.4.1.43-1. |
| 7 | | | | SS verifies that the UE does not transmit a MEASUREMENT REPORT message to the SS. |
| 8 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS downloads compressed mode parameters (using HLS method) and activates compressed mode. |
| 9 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE acknowledges the downloading of compressed mode parameters and the activation of compressed mode. |
| 10 | → | | MEASUREMENT REPORT | Frequency f2 triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 11 | ← | | TRANSPORT CHANNEL RECONFIGURATION | SS reconfigures transport channel parameters (rate reduction PS RAB) and changes compressed mode method to SF/2. Rate should be reduced to 0 kbps – no PS RAB room left to use for gap. |
| 12 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | The UE acknowledges the transport channel reconfiguration and the change of compressed mode method |
| 13 | | | | The SS changes the power of the cells according to column T2 in table 8.4.1.43-1. |
| 14 | → | | MEASUREMENT REPORT | Frequency $f_3$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 15 | | | | The SS changes the power of the cells according to T3 in table 8.4.1.43-1 (so the UE can trigger event 2b again for both frequencies). |
| 16 | ← | | RADIO BEARER RELEASE | SS releases the CS domain RAB and changes compressed mode method to HLS. |
| 17 | → | | RADIO BEARER RELEASE COMPLETE | The UE acknowledges the release of the RAB and the compressed mode method change. |
| 18 | | | | The SS changes the power of the cells according to column T4 in table 8.4.1.43-1. |
| 19 | → | | MEASUREMENT REPORT | Frequency $f_2$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 20 | ← | | TRANSPORT CHANNEL RECONFIGURATION | SS reconfigures transport channel parameters (rate increase PS RAB) – without performing hard handover. |
| 21 | → | | TRANSPORT CHANNEL RECONFIGURATION COMPLETE | The UE acknowledges the transport channel parameters change. |
| 22 | | | | The SS changes the power of the cells according to column T5 in table 8.4.1.43-1. |
| 23 | → | | MEASUREMENT REPORT | Frequency $f_3$ triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |

Specific Message Content

All messages shall use the same content as defined in [9] TS 34.108 clause 9, with the following exceptions:

PHYSICAL CHANNEL RECONFIGURATION MESSAGE (Step 1)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | Not Present | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE *channel requirement* | Not Present | |
| CHOICE *mode* | FDD | |
| - Downlink PDSCH information | Not Present | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | SF/2(or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | SF/2(or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information for each radio link | Not Present | |

MEASUREMENT CONTROL (Step 3)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | 2 inter-frequency cells |
| - Inter-frequency cell id | 4 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_2$ |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code 3 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Inter-frequency cell id | 5 |
| - Frequency info | |
| - UARFCN uplink (Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink (Nd) | UARFCN for the downlink corresponding to $f_3$ |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | Not present |
| - Primary Scrambling Code | Scrambling code 2 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | TRUE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting cell status | Not present |
| - Measurement validity | |

| Information Element | Value/Remark |
|---|---|
| - UE State | CELL_DCH |
| - Inter-frequency set update | |
| - UE autonomous update | On with no reporting |
| - Non autonomous update mode | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -70 dBm |
| - W used frequency | 0.0 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 2 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -65 dBm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | |
| - TGPS reconfiguration CFN | (Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Status Flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

RADIO BEARER SETUP (Step 4)

Use the same message sub-type found in TS 34.108 clause 9, which is entitled " Packet RAB Setup after Speech RAB Setup in CELL_DCH ", with the following modifications:

| Information Element | Value/Remark |
|---|---|
| - DPCH compressed mode info | |
| - TGPSI | 1 |
| - TGPS Status Flag | De-activate |
| - TGCFN | Not present |

PHYSICAL CHANNEL RECONFIGURATION MESSAGE (Step 8)

| Information Element | Value/Remark | Version |
|---|---|---|
| Activation time | Not Present | |
| New U-RNTI | Not Present | |
| New C-RNTI | Not Present | |
| New DSCH-RNTI | Not Present | |
| RRC State indicator | CELL_DCH | |
| UTRAN DRX cycle length coefficient | Not Present | |
| CN information info | Not Present | |
| URA identity | Not Present | |
| Downlink counter synchronisation info | Not Present | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| CHOICE *channel requirement* | Not Present | |
| CHOICE *mode* | FDD | |
| - Downlink PDSCH information | Not Present | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Activate | |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information for each radio link | Not Present | |

MEASUREMENT REPORT (Step 10,19)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 |

TRANSPORT CHANNEL RECONFIGURATION (Step 11)

The contents of TRANSPORT CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 [9], with the following exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| UL Transport channel information for all transport channels | Do not include TFCs with TF's other than TF0 for PS RAB | |
| Added or Reconfigured UL TrCH information | Reconfigure PS RAB TFS, only include TF0 and UL Transport channel identity as 4 | |
| DL Transport channel information common for all transport channel | Do not include TFCs with TF's other than TF0 for PS RAB | |
| Added or Reconfigured DL TrCH information | Reconfigure PS RAB TFS, only include TF0 and DL Transport channel identity as 9 | |
| Frequency info | Not Present | |
| Maximum allowed UL TX power | Not Present | |
| Downlink information common for all radio links | | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Activate | |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | SF/2(or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | SF/2(or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |

MEASUREMENT REPORT (Step 14,23)

NOTE: Due to ambiguity in 25.331 clause 14.2.1.2 – two interpretations can be given for MEASUREMENT REPORT

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | Check that the value of this IE is set to UARFCN for the uplink corresponding to $f_3$ (Could be absent in case the duplex distance is the default duplex distance) |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_3$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 2 (on $f_3$) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | Check that the value of this IE is set to UARFCN for the uplink corresponding to $f_3$ (Could be absent in case the duplex distance is the default duplex distance) |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_3$ |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set Scrambling code 2 (on $f_3$) |

OR:

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ or $f_3$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 (on $f_2$) or Scrambling code 2 (on $f_3$) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ or $f_3$ |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 (on $f_2$) or Scrambling code 2 (on $f_3$) |
| - CPICH Ec/N0 | Check that this IE is absent |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ or $f_3$ |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 (on $f_2$) or Scrambling code 2 (on $f_3$) |
| - Frequency info | |
| -CHOICE mode | FDD |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_2$ or $f_3$ |

| Information Element | Value/Remark |
|---|---|
| - Non freq related measurement event results<br>- Primary CPICH info<br>- Primary scrambling code | Check that the value of this IE is set to Scrambling code 3 (on $f_2$) or Scrambling code 2 (on $f_3$) |

RADIO BEARER RELEASE (Step 16)

Use the same message sub-type found in TS 34.108 clause 9, which is entitled "Non speech in CS" or "Speech in CS", with the following modifications:

| Information Element | Value/Remark | Version |
|---|---|---|
| Added or Reconfigured UL TrCH information | | |
| - Uplink transport channel type | DCH | |
| - UL Transport channel identity | 4 | |
| - TFS | | |
| - CHOICE Transport channel type | Dedicated transport channels | |
| - Dynamic Transport format information | | |
| - RLC Size | Reference to 6.11.4b in TS34.108 | |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) | |
| - Transmission Time Interval | Not Present | |
| - Number of Transport blocks | Reference to 6.11.4b in TS34.108 | |
| - CHOICE Logical channel list | All | |
| - Semi-static Transport Format information | | |
| - Transmission time interval | Reference to 6.11.4b in TS34.108 | |
| - Type of channel coding | Reference to 6.11.4b in TS34.108 | |
| - Coding Rate | Reference to 6.11.4b in TS34.108 | |
| - Rate matching attribute | Reference to 6.11.4b in TS34.108 | |
| - CRC size | Reference to 6.11.4b in TS34.108 | |
| Added or Reconfigured DL TrCH information | | |
| - Downlink transport channel type | DCH | |
| - DL Transport channel identity | 9 | |
| - CHOICE DL parameters | Same as UL | |
| - Uplink transport channel type | DCH | |
| - UL TrCH identity | 4 | |
| - DCH quality target | | |
| - BLER Quality value | Not Present | |
| CHOICE channel requirement | | |
| - Uplink DPCH power control info | Uplink DPCH info | |
| - DPCCH power offset | -40 (-80dB) | |
| - PC Preamble | 1 frame | |
| - SRB delay | 7 frames | |
| - Power Control Algorithm | Algorithm1 | |
| - $\Delta_{ACK}$ | Not Present | |
| - $\Delta_{NACK}$ | Not Present | |
| - Ack-Nack repetition factor | Not Present | |
| - TPC step size | 0 (1dB) | |
| - Scrambling code type | Long | |
| - Scrambling code number | 0 (0 to 16777215) | |
| - Number of DPDCH | Not Present(1) | |
| - spreading factor | Reference to 6.11.4b in TS34.108 | |
| - TFCI existence | Reference to 6.11.4b in TS34.108 | |
| - Number of FBI bit | Reference to 6.11.4b in TS34.108 | |
| - Puncturing Limit | Reference to 6.11.4b in TS34.108 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Maintain | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot\text{-}DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to 6.11.4b in TS34.108 | |
| - Fixed or Flexible Position | Reference to 6.11.4b in TS34.108 | |
| - TFCI existence | Reference to 6.11.4b in TS34.108 | |
| - CHOICE SF | Reference to 6.11.4b in TS34.108 | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Activate | |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 4 | |
| - TGL1 | 7 | |
| - TGL2 | Not Present | |

| Information Element | Value/Remark | Version |
|---|---|---|
| - TGD | undefined | |
| - TGPL1 | 3 | |
| - TGPL2 | Not Present | R99 and REL-4 only |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Uplink compressed mode method | HLS(or not sent, depending on the UE capability) | |
| - Downlink frame type | B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |

TRANSPORT CHANNEL RECONFIGURATION (Step 20)

The content of the TRANSPORT CHANNEL RECONFIGURATION message at this step is identical to the message sub-type titled "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 [9].

#### 8.4.1.43.5 Test Requirement

After step 1, the UE shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS to acknowledge the downloading of the compressed mode parameters without activating compressed mode that were included in the PHYSICAL CHANNEL RECONFIGURATION message of step 1.

After step 4, the UE shall send a RADIO BEARER SETUP COMPLETE message to acknowledge the establishment of the PS domain RAB and the de- activation of compressed mode that were included in the RADIO BEARER SETUP message of step 4.

After step 6, the UE shall not transmit a MEASUREMENT REPORT message.

After step 8, the UE shall send a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message to the SS to acknowledge the downloading of the compressed mode parameters and the activation of compressed mode that were included in the PHYSICAL CHANNEL RECONFIGURATION message of step 8.

After step 9, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_2$. That message shall only include cell 4 within the IE event results.

After step 11, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message to the SS to acknowledge the change of transport channel parameters and the change of compressed mode method that were included in the TRANSPORT CHANNEL RECONFIGURATION message of step 11.

After step 13, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_3$.

After step 17, the UE shall transmit a RADIO BEARER RELEASE COMPLETE message to the SS to acknowledge the release of the RAB and the change of compressed mode method that were included in the RADIO BEARER RELEASE message of step 17.

After step 18, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_2$. That message shall only include cell 4 within the IE event results.

After step 20, the UE shall transmit a TRANSPORT CHANNEL RECONFIGURATION COMPLETE message to the SS to acknowledge the change of transport channel parameters that were included in the TRANSPORT CHANNEL RECONFIGURATION message of step 20.

After step 22, the UE shall transmit a MEASUREMENT REPORT message triggered by frequency $f_3$.

## 8.4.1.44 Measurement Control and Report: Intra-frequency measurement for events 1H and 1I (TDD)

### 8.4.1.44.1 Definition

### 8.4.1.44.2 Conformance requirement

When event 1h is configured in the UE, the UE shall:

1> if equation 1 is fulfilled for a time period indicated by "Time to trigger" and if that P-CCPCH is not included in the IE "cells triggered" in the variable TRIGGERED_1H_EVENT:

2> include that P-CCPCH in the IE "cells triggered" in the variable TRIGGERED_1H_EVENT;

2> send a measurement report with the IEs set as below:

3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1h" and in "cell measurement event results" the "Cell parameters ID" of the P-CCPCH that triggered the report;

3> include in "Cell measured results" the "Timeslot ISCP" of those cells that are included in the variable TRIGGERED_1H_EVENT.

1> if a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1H_EVENT:

2> send a measurement report with IEs set as below:

3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1h" and "cell measurement event results" to the "Cell parameters ID" of the P-CCPCH that triggered the report;

3> set in "measured results " the "Timeslot ISCP" of those cells that are included in the variable TRIGGERED_1H_EVENT and "additional measured results" according to subclause 8.4.2 in TS 25.331, not taking into account the cell individual offset for each cell.

1> if Equation 2 below is fulfilled for a primary CCPCH:

2> if a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1H_EVENT:

3> remove the entry of that primary CCPCH from "cells triggered" in the variable TRIGGERED_1H_EVENT.

The UE shall use the equations below for evaluation of reporting event 1h:

Equation 1

$$10 \cdot LogM_i + H_{1h} + O_i < T_{1h},$$

Equation 2

$$10 \cdot LogM_i - H_{1h} + O_i > T_{1h},$$

The variables in the formula are defined as follows:

$\boldsymbol{M_i}$ is the Timeslot ISCP of the currently evaluated cell $\boldsymbol{i}$ expressed in mW

$\boldsymbol{O_i}$ is the cell individual offset of the currently evaluated cell $\boldsymbol{i}$

$\boldsymbol{T_{1h}}$ is the Threshold for event 1h

$\boldsymbol{H_{1h}}$ is the hysteresis parameter for the event 1h.

Before any evaluation is done, the Timeslot ISCP expressed in mW is filtered according to subclause 8.6.7.2. in TS 25.331

When event 1i is configured in the UE, the UE shall:

1> if equation 1 is fulfilled for a time period indicated by "Time to trigger" and if that P-CCPCH is not included in the IE "cells triggered" in the variable TRIGGERED_1I_EVENT:

2> include that P-CCPCH in the IE "cells triggered" in the variable TRIGGERED_1I_EVENT;

2> send a measurement report with the IEs set as below:

3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1i" and in "cell measurement event results" to the "Cell parameters ID" of the P-CCPCH that triggered the report;

3> include in "measured results" the "Timeslot ISCP" of those cells that are included in the variable TRIGGERED_1I_EVENT and "additional measured results" according to 8.4.2 in TS 25.331, not taking into account the cell individual offset for each cell.

1> if a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1I_EVENT:

2> if Equation 2 below is fulfilled for a primary CCPCH:

3> if a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1I_EVENT:

4> remove the entry of that primary CCPCH from "cells triggered" in the variable TRIGGERED_1I_EVENT.

The UE shall use the equation below for evaluation of reporting event 1i:

Equation 1

$$10 \cdot LogM_i - H_{1i} + O_i > T_{1h},$$

Equation 2

$$10 \cdot LogM_i + H_{1i} + O_i < T_{1h},$$

The variables in the formula are defined as follows:

$\boldsymbol{M_i}$ is the Timeslot ISCP of the currently evaluated cell $\boldsymbol{i}$ expressed in mW

$\boldsymbol{O_i}$ is the cell individual offset of the currently evaluated cell $\boldsymbol{i}$

$\boldsymbol{T_{1i}}$ is the Threshold for event 1i

$\boldsymbol{H_{1i}}$ is the hysteresis parameter for the event 1i.

Before any evaluation is done, the Timeslot ISCP expressed in mW is filtered according to subclause 8.6.7.2. in TS 25.331

Reference

3GPP TS 25.331 clause 14.1.3.2, 14.1.3.3.

### 8.4.1.44.3 Test Purpose

1. To confirm that the UE sends MEASUREMENT REPORT message if event 1I is configured and intra-frequency measurement indicates that Timeslot ISCP is above a certain threshold

2. To confirm that the UE sends MEASUREMENT REPORT message if event 1H is configured, and intra-frequency measurement indicates that Timeslot ISCP is below a certain threshold

### 8.4.1.44.4 Method of test

#### 8.4.1.44.4.1 3.84 Mcps option

<FFS>

8.4.1.44.4.2 1.28 Mcps option

Initial Condition

System Simulator: 1 cell – The initial configurations of the cell in the SS shall follow the values indicated in the column marked "T1" in table 8.4.1.44.4.2-1. Threshold for events 1H and 1I are specified in table 8.4.1.44.4.2-2

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

The test consists of four successive time periods, with a time duration of T1, T2, T3 and T4 respectively. Two cells shall be present in the test, being cell 1 the current serving cell. Timeslot ISCP values are specified for the cell, to check against a certain threshold.

Test Procedure

Table 8.4.1.44.4.2-1 illustrates the Cell 1 specific test parameters for correct event 1H and 1I reporting in AWGN propagation condition. The other RF values needed for the test are referred to section 8 in TS 34.122

Column marked "T1" denotes the initial conditions, while columns marked "T2", "T3" and "T4" are to be applied subsequently. The exact instants on which these values shall be applied are described in the text below.

**Table 8.4.1.44.4.2-1**

| Parameter | Unit | Cell 1 | | | |
|---|---|---|---|---|---|
| | | T1 | T2 | T3 | T4 |
| UTRA RF Channel Number | | Channel 1 | | | |
| DL timeslot number | | 6 | | | |
| PCCPCH RSCP | dBm | n.a. | | | |
| TS ISCP, Note 1 | | -74 | -64 | -74 | -64 |
| $I_{oc}$ | dBm / 1.28 MHz | -70 | | | |
| NOTE 1: The TS ISCP level is a calculated value. | | | | | |

**Table 8.4.1.44.4.2-2**

| Parameter | Unit | Value | Comment |
|---|---|---|---|
| Threshold used frequency | dBm | -69 | Applicable for event 1H, cell 1 timeslot 6 |
| Threshold used frequency | dBm | -69 | Applicable for event 1I, cell 1 timeslot 6 |

The UE is initially in CELL_DCH state of cell 1. System Information Block type 11 is configured according to allow measurement for intrafrequency, 1 Cell is defined and Timeslot 6 is defined for measurements. SS then sends MEASUREMENT CONTROL message to the UE to modify earlier configured intra-frequency measurement and a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1I_EVENT and TRIGGERED_1H_EVENT.

UE shall report TRIGGERED_1H_EVENT or TRIGGERED_1I_EVENT in the different time periods during the test. SS re-adjusts the downlink transmission power settings according to columns "T2", "T3" and "T4" successively in table 8.4.1.44.4.2-1

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | System Information Block type 11 | The UE is in CELL_DCH and camped onto cell 1. The System Information Block type 11 messages to be transmitted are different from the default settings |
| 2 | ← | | MEASUREMENT CONTROL | Event 1I and 1H are configured. IEs and threshold values are included |
| 3 | → | | MEASUREMENT REPORT | Event 1H is triggered. The UE shall report that for cell 1 timeslot 6, ISCP is below than threshold |
| 4 | | | | SS re-adjusts the downlink transmission power settings according to columns "T2" in table 8.4.1.44.4.2-1. |
| 5 | → | | MEASUREMENT REPORT | Event 1I is triggered. The UE shall report that for cell 1 timeslot 6 ISCP is above threshold |
| 6 | | | | SS re-adjusts the downlink transmission power settings according to columns "T3" in table 8.4.1.44.4.2-1. |
| 7 | → | | MEASUREMENT REPORT | Event 1H is triggered. The UE shall report that for cell 1 timeslot 6, ISCP is below than threshold |
| 8 | | | | SS re-adjusts the downlink transmission power settings according to columns "T4" in table 8.4.1.44.4.2-1. |
| 9 | → | | MEASUREMENT REPORT | Event 1I is triggered. The UE shall report that for cell 1 timeslot 6 ISCP is above threshold |
| 10 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails |

Specific Message Contents

All messages indicated below shall use the same content as described in default message content, with the following exceptions.

System Information Block type 11 (Step 1)

| Information Element | Value/remark |
|---|---|
| SIB12 indicator | FALSE |
| FACH measurement occasion info | Not Present |
| Measurement control system information | |
| - Use of HCS | Not used |
| - Cell selection and reselection quality measure | CPICH RSCP |
| - Intra-frequency measurement system information | |
| - Intra-frequency measurement identity | Not Present<br>Absence of this IE is equivalent to default value 1 |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Not present<br>(This IE shall be ignored by the UE for SIB11) |
| - New intra-frequency cells | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | TDD |
| - Primary CCPCH Info | Refer to clause titled "Default settings for cell No.1 (TDD)" in clause 6.1.4 of TS 34.108 |
| - Primary CCPCH TX Power | Not present |
| - Timeslot List | |
| - Timeslot Number | 6 |
| - Burst Type | Type 1 |
| - Cell selection and Re-selection | Not Present (The IE shall be absent as this is the serving cell) |
| - Intra-frequency measurement quantity | Not present |
| - Intra-frequency measurement for RACH reporting | Not Present |
| - Maximum number of reported cells on RACH | Not Present |
| - Reporting information for state CELL_DCH | Not Present |
| - Inter-frequency measurement system information | Not present |
| - Inter-RAT measurement system information | Not Present |
| - Traffic volume measurement system information | Not Present |

MEASUREMENT CONTROL (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not present |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | 0 |
| - CHOICE Mode | TDD |
| - Measurement quantity | PCCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - Timeslot ISCP reporting indicator | TRUE |
| - Proposed TGSN reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1h |
| - Threshold used frequency | -69 dB |
| - Hysteresis | 0 (0 dB) |
| - Time to Trigger | 0 |
| - Intra-frequency event identity | 1i |
| - Threshold used frequency | -69 dB |
| - Hysteresis | 0 (0 dB) |
| - Time to Trigger | 0 |

MEASUREMENT REPORT (Step 3)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Cell parameters ID | Check to see if it's the same for cell 1 |
| - PCCPCH RSCP | Check to see if this IE is absent |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot ISCP | Check to see if this IE is present |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Intra-frequency measurement event results" |
| - Intra-frequency event identity | Check to see if this IE is set to "1H" |

MEASUREMENT REPORT (Step 5)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Cell parameters ID | Check to see if it's the same for cell 1 |
| - PCCPCH RSCP | Check to see if this IE is absent |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot ISCP | Check to see if this IE is present |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Intra-frequency measurement event results" |
| - Intra-frequency event identity | Check to see if this IE is set to "1I" |

MEASUREMENT REPORT (Step 7)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Cell parameters ID | Check to see if it's the same for cell 1 |
| - PCCPCH RSCP | Check to see if this IE is absent |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot ISCP | Check to see if this IE is present |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Intra-frequency measurement event results" |
| - Intra-frequency event identity | Check to see if this IE is set to "1H" |

MEASUREMENT REPORT (Step 9)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Cell parameters ID | Check to see if it's the same for cell 1 |
| - PCCPCH RSCP | Check to see if this IE is absent |
| - Pathloss | Check to see if this IE is absent |
| - Timeslot ISCP | Check to see if this IE is present |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | |
| - CHOICE event result | Check to see if this IE is set to "Intra-frequency measurement event results" |
| - Intra-frequency event identity | Check to see if this IE is set to "1I" |

#### 8.4.1.44.5 Test Requirement

The UE shall send one event 1H triggered measurement report, with a measurement reporting delay less than 400 ms from the beginning of time period T2.

The UE shall send one event 1I triggered measurement report, with a measurement reporting delay less than 400 ms from the beginning of time period T3.

The UE shall send one event 1H triggered measurement report, with a measurement reporting delay less than 400 ms from the beginning of time period T4.

The UE shall not send event 1H or 1I triggered measurement reports, as long as the reporting criteria are not fulfilled.

### 8.4.1.45 Measurement Control and Report: Intra-frequency measurement for event 1G (TDD)

#### 8.4.1.45.1 Definition

#### 8.4.1.45.2 Conformance requirement

When event 1G is configured in the UE, the UE shall:

1> if the equation 1 is fulfilled for a P-CCPCHs during the time "Time to trigger" and if that P-CCPCH is not included in the "primary CCPCH info" in the variable TRIGGERED_1G_EVENT:

2> include that P-CCPCH in "cells triggered" in the variable TRIGGERED_1G_EVENT;

2> send a measurement report with IEs set as below:

3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1g";

3> set the first entry in "cell measurement event results" to the "Cell parameters ID" of the P-CCPCH which was stored in the variable TRIGGERED_1G_EVENT;

3> include all entries in "cells triggered" in variable TRIGGERED_1G_EVENT in "cell measurement event results" in the measurement report in descending order according to:

$$10 \cdot LogM + O$$

where ***M*** is the P-CCPCH RSCP and ***O*** the individual offset of a cell;

3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.

1> if Equation 2 below is fulfilled for a primary CCPCH:

2> if a primary CCPCH is included in the "cells triggered" in the variable TRIGGERED_1G_EVENT:

3> remove the entry of that primary CCPCH from "cells triggered" in the variable TRIGGERED_1G_EVENT;

The UE shall use the equations below for evaluation of reporting event 1g:

Equation 1

$$10 \cdot LogM_i + O_i - H_{1g} > 10 \cdot LogM_{previous_best} + O_{previous_best}$$

The variables in the formula are defined as follows:

$M_{previous_best}$ is the current P-CCPCH RSCP of the previous best cell expressed in mW

$O_{previous_best}$ is the cell individual offset of the previous best cell

$M_i$ is the current P-CCPCH RSCP of the currently evaluated cell ***i*** expressed in mW

$O_i$ is the cell individual offset of the currently evaluated cell ***i***

$H_{1g}$ is the hysteresis parameter for the event 1g.

Equation 2

$$10 \cdot LogM_i + O_i + H_{1g} < 10 \cdot LogM_{previous_best} + O_{previous_best}$$

The variables in the formula are defined as follows:

$M_{previous_best}$ is the current P-CCPCH RSCP of the previous best cell expressed in mW

$O_{previous_best}$ is the cell individual offset of the previous best cell

$M_i$ is the current P-CCPCH RSCP of the currently evaluated cell ***i*** expressed in mW

$O_i$ is the cell individual offset of the currently evaluated cell ***i***

$H_{1g}$ is the hysteresis parameter for the event 1g.

Reference

3GPP TS 25.331, clauses 14.1.3.1

### 8.4.1.45.3 Test Purpose

1. To confirm that the UE sends MEASUREMENT REPORT message if event 1G is configured and intra-frequency measurement indicates change of best cell.

### 8.4.1.45.4 Method of test

Initial Condition

System Simulator: 2 cell(cell 1 and cell 2 are active).The initial configurations of the 2 cells in the SS shall follow the values indicated in the column marked "T0" in table 8.4.1.45-1. The table is found in "Test Procedure" clause.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

Table 8.4.1.45-1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution. Column marked "T0" denotes the initial conditions, while column marked "T1" is to be applied subsequently. The exact instants on which these values shall be applied are described in the text in this clause.

**Table 8.4.1.45-1**

| Parameter | Unit | Cell 1 | | Cell 2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RFChannel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| P-CCPCH RSCP | dBm | -65 | -65 | -70 | -60 |
| P-CCPCH TS (3.84 Mcps TDD and 7.68 Mcps TDD) | | TS 0 | | TS 0 | |

The UE is initially in CELL_DCH state of cell 1.

SS transmits MEASUREMENT CONTROL message to request the UE to perform intra-frequency measurement. The key measurement parameters are as follow: measurement type = "intra-frequency measurement", measurement quantity = "PCCPCH RSCP", report criteria = "periodic reporting criteria", reporting interval = "64 seconds".UE shall transmit a MEASUREMENT REPORT message and another after 64 seconds.

SS transmits a new MEASUREMENT CONTROL message to request UE to perform intra-frequency measurement and report Event 1G. All intra-frequency cells are removed, and Cell 2 is included as new intra-frequency cell. SS checks to see that no MEASUREMENT REPORT messages are sent within the next 64 seconds (which is due to periodic reporting).

SS reconfigures the downlink transmission power settings according to values in column "T1" in table 8.4.1.45-1. The UE shall transmit a MEASUREMENT REPORT message when it detects that the PCCPCH RSCP of cell 2 and indicating Cell 2 as a best cell. SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | | | | The UE is in CELL_DCH of cell 1. |
| 1 | ← | | MEASUREMENT CONTROL | Intra-frequency measurement is configured. |
| 2 | → | | MEASUREMENT REPORT | The message should be repeated after 64 seconds |
| 3 | → | | MEASUREMENT REPORT | |
| 4 | ← | | MEASUREMENT CONTROL | Event 1G is configured |
| 5 | | | | SS wait for 64seconds to verify that no MEASUREMENT REPORTmessage is received |
| 6 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in table 8.4.1.45-1. |
| 7 | → | | MEASUREMENT REPORT | UE report that Event 1G is triggered and cell 2 is the best cell |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Content

MEASUREMENT CONTROL (Step 1) (1.28 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 16 |
| Measurement command | Setup |
| - CHOICE measurement type | Intra-frequency measurement |
| - Intra Frequencey Cell Info List | |
| - CHOICE Intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - Cell parameters ID | Set to same cell parameters ID as used for cell 1 |
| - Cell for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 0 |
| - Measurement quantity | P-CCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not Present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not Present |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 64 sec |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodical reporting |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT CONTROL (Step 1) (3.84 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 16 |
| Measurement command | Setup |
| - CHOICE measurement type | Intra-frequency measurement |
| - Intra Frequencey Cell Info List | |
| - CHOICE Intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - CHOICE *SyncCase* | Sync Case 1 |
| - Timeslot | 0 |
| - Cell parameters ID | Set to same cell parameters ID as used for cell 1 |
| - Cell for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 0 |
| - Measurement quantity | P-CCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not Present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not Present |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 64 sec |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodical reporting |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT CONTROL (Step 1) (7.68 Mcps TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 16 |
| Measurement command | Setup |
| - CHOICE measurement type | Intra-frequency measurement |
| - Intra Frequencey Cell Info List | |
| - CHOICE Intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency info list | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE *SyncCase* | Sync Case 1 |
| - Timeslot | 0 |
| - Cell parameters ID | Set to same cell parameters ID as used for cell 1 |
| - Cell for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 0 |
| - Measurement quantity | P-CCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not Present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not Present |
| - CHOICE report criteria | Periodical reporting criteria |
| - Amount of reporting | Infinity |
| - Reporting interval | 64 sec |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Periodical reporting |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 2 and 3) (TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 16 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to “Intra-frequency measured results list” |
| - Cell measured results | |
| - Cell Identity | Check to see if is absent |
| - Cell synchronisation information | Check to see if is absent |
| - cell parameters ID | Check to see if it is the same for cell 1 |
| - PCCPCH RSCP | Check to see if is present and value is reasonable |
| - Pathloss | Check to see if is absent |
| Measured results on RACH | Check to see if is absent |
| Additional measured results | Check to see if is absent |
| Event results | Check to see if is absent |

MEASUREMENT CONTROL (Step 4) (TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 16 |
| Measurement command | Setup |
| - CHOICE measurement type | Intra-frequency measurement |
| - Intra Frequencey Cell Info List | |
| - CHOICE Intra-frequency cell removal | Remove all intra-frequency cells |
| - New intra-frequency info list | |
| - Intra-frequency cell id | 1 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Set to same cell parameters ID as used for cell 1 |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | 0 dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | FALSE |
| - CHOICE mode | TDD |
| - Primary CCPCH Info | Set to same cell parameters ID as used for cell 2 |
| - Cell for measurement | Not Present |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 0 |
| - Measurement quantity | P-CCPCH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - PCCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not Present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not Present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1g |
| - Triggering condition 1 | Not Present |
| - Triggering condition 2 | Not Present |
| - Reporting range Constant | Not Present |
| - Cells forbidden to affect reporting range | Not Present |
| - W | Not Present |
| - Hysteresis | 2 (1 dB) |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 0 ms |
| - Amount of reporting | Infinity |
| - Reporting interval | Not Present |
| - Reporting cell status | Not Present |
| - CHOICE reported cell | Report cells within active and/or monitored set on used frequency or within active and/or monitored set on non-used frequency |
| - Maximum number of reported cells | 2 |
| Measurement reporting mode | |
| - Transfer Mode | Acknowledged mode |
| - Periodical or event trigger | Event trigger |
| Additional measurement list | Not Present |
| DPCH compressed mode status | Not Present |

MEASUREMENT REPORT (Step 7) (TDD)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 16 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to “Intra-frequency measured results list” |
| - Cell measured results | |
| - Cell Identity | Check to see if is absent |
| - Cell synchronisation information | Check to see if is absent |
| - cell parameters ID | Check to see if it is the same for cell 1 |
| - PCCPCH RSCP | Check to see if is present and value is reasonable |
| - Pathloss | Check to see if is absent |
| - Cell Identity | Check to see if is absent |
| - Cell synchronisation information | Check to see if is absent |
| - cell parameters ID | Check to see if it is the same for cell 2 |
| - PCCPCH RSCP | Check to see if is present and value is reasonable |
| - Pathloss | Check to see if is absent |
| Measured results on RACH | Check to see if is absent |
| Additional measured results | Check to see if is absent |
| Event results | Check to see if is absent |
| - CHOICE event result | Check to see if set to “Intra-frequency measurement event results” |
| - Intra-frequency event identity | Check to see if set to “1g” |
| - Cell measurement event results | |
| - CHOICE mode | Check to see if set to “TDD” |
| - Cell parameters Id | Check to see if it is the same for cell 2 |

#### 8.4.1.45.5 Test Requirement

After step 1, the UE shall transmit MEASUREMENT REPORT message periodically with the interval of 64 seconds.

After step 4, the UE shall not transmit any MEASUREMENT REPORT message.

After step 6, the UE shall transmit MEASUREMENT REPORT message, containing measured results for P-CCPCH RSCP. The 'Event results' IE contains event identity 1G.

### 8.4.1.46 Void

### 8.4.1.47 Measurement Control and Report: Event triggered periodic measurement for event 1B (FDD)

#### 8.4.1.47.1 Definition

#### 8.4.1.47.2 Conformance requirement

When an intra-frequency measurement configuring event 1b is set up, the UE shall:

1> create a variable TRIGGERED_1B_EVENT related to that measurement, which shall initially be empty;

1> delete this variable when the measurement is released.

When event 1B is configures in the UE, the UE shall:

1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for one or more primary CPICHs, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for one or more primary CPICHs, for each of these primary CPICHs:

2> if all required reporting quantities are available for that cell, and if the equations have been fulfilled for a time period indicated by "Time to trigger", and if that primary CPICH is part of cells allowed to trigger the event according to "Triggering condition 1", and if that primary CPICH is not included in the "cells triggered" in the variable TRIGGERED_1B_EVENT:

3> include that primary CPICH in the "cells recently triggered" in the variable TRIGGERED_1B_EVENT.

1> if any primary CPICHs are stored in the "cells recently triggered" in the variable TRIGGERED_1B_EVENT:

2> if "Periodic reporting info-1b" is present, and "Reporting interval" for this event is not equal to 0:

3> if the IE "Periodical reporting running" in the variable TRIGGERED_1B_EVENT is set to FALSE:

4> start a timer with the value of "Reporting interval" for this event and set the IE "Periodical reporting running" in the variable TRIGGERED_1B_EVENT to TRUE;

3> set "sent reports" for the primary CPICHs in "cells recently triggered" in the variable TRIGGERED_1B_EVENT to 1.

2> send a measurement report with IEs set as below:

3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1b"; and

3> include in "cell measurement event results" all entries of "cells recently triggered" in the variable TRIGGERED_1B_EVENT in ascending order according to the configured measurement quantity taking into account the cell individual offset for each of those cells;

3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.

2> move all entries from IE "cells recently triggered" to "cells triggered" in the variable TRIGGERED_1B_EVENT.

1> if the timer for the periodical reporting has expired:

2> if any primary CPICH is included in the "cells triggered" in the variable TRIGGERED_1B_EVENT:

3> if "Periodic reporting info-1b" is present:

4> if "Reporting interval" is not equal to 0, and if "Amount of reporting" is greater than "sent reports" stored for any of these primary CPICHs, in "cells triggered" in the variable TRIGGERED_1B_EVENT:

5> increment the stored counter "sent reports" for all CPICHs in "cell triggered" in variable TRIGGERED_1B_EVENT;

5> start a timer with the value of "Reporting interval-1b" for this event;

5> send a measurement report with IEs set as below:

6> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1b"; and

6> include in "cell measurement event results" all entries of the variable TRIGGERED_1B_EVENT with value of IE "sent reports" smaller than value of "Amount of reporting" in ascending order according to the configured measurement quantity taking into account the cell individual offset for each of those cells;

6> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.

5> if "sent reports" in variable TRIGGERED_1B_EVENT is greater than "Amount of reporting" for all entries:

6> set the IE "Periodical Reporting running" in the variable TRIGGERED_1B_EVENT to FALSE and disable the timer for the periodical reporting.

1> if "Measurement quantity" is "pathloss" and Equation 3 below is fulfilled for a primary CPICH, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 4 below is fulfilled for a primary CPICH; or

1> if a primary CPICH is no longer part of the cells allowed to trigger the event according to the "Triggering condition 1":

2> if that primary CPICH is included in the "cells triggered" in the variable TRIGGERED_1B_EVENT:

3> remove the entry of that primary CPICH from "cells triggered" in the variable TRIGGERED_1B_EVENT.

---

When a cell enters the removal range and triggers event 1B, the UE shall transmit a MEASUREMENT REPORT to the UTRAN and typically this may result in the removal of the weakest active cell. If the UTRAN is unable to receive MEASUREMENT REPORT after the maximum retransmission, it is beneficial to receive continuous reports in this case as well.

The UE shall revert to periodical measurement reporting if the UTRAN does not update the active set after the transmission of the measurement report. This is illustrated in Figure 14.1.4.1a. During periodic reporting the UE shall transmit MEASUREMENT REPORT messages to the UTRAN at predefined intervals.

Event-triggered periodic measurement reporting shall be terminated if:

1> there are no longer any monitored cell(s) within the removal range; or

1> the UTRAN has removed cells from the active set so that there are no longer the minimum amount of active cells for event 1B to be triggered; or

1> the UE has sent the maximum number of MEASUREMENT REPORT messages (defined by the "amount of reporting" parameter).

The reporting period is assigned by the UTRAN (with the "Reporting interval" parameter). If the reporting interval is set to zero, event-triggered periodic measurement reporting shall not be applied.

Reference

3GPP TS 25.331 clause 14.1.2.2, clause 14.1.4.1a

### 8.4.1.47.3 Test Purpose

1. To confirm that the UE reverts to periodical measurement reporting of event 1B, after event 1B has been initially triggered, when primary CPICH currently measured by the UE leaves the reporting range.

2. To confirm that the event triggered periodic measurement reporting is terminated after UE no longer finds any monitored cell within the removal range.

3. To confirm that the event triggered periodic measurement reporting is terminated after UTRAN has removed cells from the active set so that there is no longer the minimum amount of active cells for event 1B to be triggered.

4. To confirm that the event triggered periodic measurement is no longer triggered if the reporting interval is set to zero.

5. To confirm that the event-triggered periodic measurement reporting is terminated after UE has sent the maximum number of MEASUREMENT REPORT messages (defined by the "amount of reporting" parameter).

### 8.4.1.47.4 Method of test

Initial Condition

System Simulator: 2 Cells – Cell 1, Cell 2 are active.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

Test Procedure

**Table 8.4.1.47-1**

| Parameter | Unit | Cell1 | | Cell2 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec | dBm/3.84MHz | -60 | -60 | -66 | -75 |

Table 8.4.1.47-1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is initially in CELL_DCH state in Cell 1 with the downlink transmission power settings according to values in column “T0” in table 8.4.1.47-1.
SS sends a MEASUREMENT CONTROL message to set up events 1A & 1B. In this message the IE “periodicReportingInfo-1b” is included with “reportingInterval” set to a non-zero value. The IE "reporting range" is set to 9dB. The UE shall send a MEASUREMENT REPORT on the uplink DCCH, which contains the IE "Event results" to report that event 1A has been triggered by Cell 2.
SS executes the ACTIVE SET UPDATE procedure, requesting Cell 2 to be added to the active set. When the UE receives this message, it shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

SS reconfigures the downlink transmission power settings according to values in column “T1” in table 8.4.1.47-1. The UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH to report the triggering of event 1B. In this message, the IE "Events results" shall indicate that event 1B has been triggered by Cell 2. SS does not respond to the first report and waits for a few more reports, say half the number of the value as defined by the IE "amount of reporting" in the MEASUREMENT CONTROL message.

SS now reconfigures the downlink transmission power settings according to values in column “T0” in table 8.4.1.47-1 so as to get the power levels of Cell 2 go above event 1B reporting range threshold. UE now stops triggering any more event 1B measurement reports.

SS reconfigures the downlink transmission power settings according to values in column “T1” in table 8.4.1.47-1. UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH to report the triggering of event 1B. In this message, the IE "Events results" shall indicate that event 1B has been triggered by Cell 2. SS waits for a few reports, say half the number of the value as defined by the IE "amount of reporting" in the MEASUREMENT CONTROL message.

SS executes the ACTIVE SET UPDATE procedure, requesting Cell 2 to be removed from the active set. The UE shall respond with ACTIVE SET UPDATE COMPLETE message on the uplink DCCH indicating the successful removal of Cell 2 from the current active set. . The UE should however stop transmitting Measurement Reports for event 1B for Cell 2, as Cell 1 is now the only active cell. SS waits for 10s to make sure that no further measurement reports for event 1B are triggered.

SS sends a MEASUREMENT CONTROL message to modify the configuration of event 1B. The IE “reporting interval” is now set to zero.

SS executes the ACTIVE SET UPDATE procedure, requesting Cell 2 to be added to the active set. When the UE receives this message, the UE shall configure layer 1 to begin reception without affecting the current uplink and downlink activities of existing radio links. The UE shall transmit an ACTIVE SET UPDATE COMPLETE message to the SS on the uplink DCCH using AM RLC.

The UE shall send a MEASUREMENT REPORT on the uplink DCCH, which contains the IE "Event results" to report that intra-frequency event 1B is triggered by Cell 2. SS waits for 10s to make sure that no further Measurement Reports are triggered for event 1B.

SS reconfigures the downlink transmission power settings according to values in column “T0” in table 8.4.1.47-1 and sends a MEASUREMENT CONTROL message to modify the configuration of event 1B. The IE “reportingInterval” is set back to a non-zero value.

SS reconfigures the downlink transmission power settings according to values in column “T1” in table 8.4.1.47-1.
The UE shall transmit a MEASUREMENT REPORT message on the uplink DCCH to report the triggering of event 1B. In this message, the IE "Events results" shall indicate that event 1B is triggered by Cell 2. SS waits to receive the full number of reports as defined by the IE "amount of reporting" in the last received MEASUREMENT CONTROL message. SS waits for 10s to make sure that no further measurement reports are triggered.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MEASUREMENT CONTROL | UE is initially in CELL_DCH state in Cell 1.<br>SS set up events 1A & 1B in the UE. The IE "PeriodicReportingInfo-1b" is present with "reportingInterval" set to a non zero value. |
| 2 | → | | MEASUREMENT REPORT | Measurement made on Cell 2 shall trigger event 1A. |
| 3 | ← | | ACTIVE SET UPDATE | SS requests UE to add Cell 2 into the active set. |
| 4 | → | | ACTIVE SET UPDATE COMPLETE | |
| 5 | | | | SS configures the downlink power according to column "T1" of table 8.4.1.47-1. |
| 6 | → | | MEASUREMENT REPORT | Measurement made on Cell 2 shall trigger event 1B and should be repeated every 8s. |
| 7 | | | | SS waits for half the number of event 1B reports, i.e half to that mentioned in the IE "amount of reporting". |
| 8 | | | | SS configures the downlink power according to column "T0" of table 8.4.1.47-1. |
| 9 | | | | SS waits for 10s to verify that no MEASUREMENT REPORT for Event 1B message is received. |
| 10 | | | | SS configures the downlink power according to column "T1" of table 8.4.1.47-1. |
| 11 | → | | MEASUREMENT REPORT | Measurement made on Cell 2 shall trigger event 1B & should be repeated every 8s. SS waits for half the number of reports, i.e half to that mentioned in the IE "amount of reporting". |
| 12 | ← | | ACTIVE SET UPDATE | SS requests UE to remove Cell 2 from the active set. |
| 13 | → | | ACTIVE SET UPDATE COMPLETE | Only Cell 1 is in the active set now. |
| 14 | | | Void | |
| 15 | | | | .<br>SS checks that no measurement report for Event 1B is sent by the UE for 10s. |
| 16 | ← | | MEASUREMENT CONTROL | Event 1B configuration is modified, "reporting Interval" is now set to 'no periodical reporting'. |
| 17 | ← | | ACTIVE SET UPDATE | SS requests UE to add Cell 2 to the active set. |
| 18 | → | | ACTIVE SET UPDATE COMPLETE | Cell 1 & Cell 2 are in the active set now. |
| 19 | → | | MEASUREMENT REPORT | Triggers just one measurement report indicating event 1B (periodic event triggered measurements terminated) |
| 20 | | | | SS checks that no measurement report is sent by the UE for 10s. |
| 21 | | | | SS configures the downlink power according to column "T0" of table 8.4.1.47-1. |

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 22 | ← | | MEASUREMENT CONTROL | Event 1B configuration is modified, “reporting Interval” is now set back to a non-zero value. |
| 23 | | | | SS configures the downlink power according to column “T1” of table 8.4.1.47-1. |
| 24 | → | | MEASUREMENT REPORT | Measurement made on cell 2 shall trigger event 1B |
| 25 | | | | SS waits to receive the full number of reports as defined in the IE "amount of reporting" in Measurement Control |
| 26 | | | | SS checks that no measurement report is sent by the UE for 10s. |
| 27 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

All messages indicated below shall use the same content as described in default message content found in [9] TS 34.108 clause 9, with the following exceptions:

MEASUREMENT CONTROL (Step 1)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 1 |
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency |
| - New intra-frequency info list | |
| - Intra-frequency cell id | 2 |
| - Cell info | |
| - Cell individual offset | Not present<br>Absence of this IE is equivalent to default value 0dB |
| - Reference time difference to cell | Not Present |
| - Read SFN Indicator | TRUE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as used for cell 2 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cell for measurement | |
| - Intra-frequency cell id | 1, 2 |
| - Intra-frequency measurement quantity | |
| - Filter Coefficient | 0 |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | FALSE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronisation information reporting indicator | TRUE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected cells | Not present |
| - Reporting cell status | Not present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1a |
| - Triggering conditions 1 | Not Present |
| - Triggering conditions 2 | Monitored set cells |
| - Reporting range | 18 (9.0 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0 |
| - Hysteresis | 0 (0 dB) |
| - Threshold used frequency | Not Present |
| - Reporting deactivation threshold | 3 |
| - Replacement activation threshold | Not Present |
| - Time to trigger | 0 msec |
| - Amount of reporting | 1 |
| - Reporting interval | No periodical reporting |
| - Reporting cell status | |
| - CHOICE reported cells | Report cells within monitored set on used frequency |
| - Maximum number of reported cells | 2 |
| - Intra-frequency event identity | 1b |
| - Triggering conditions 1 | ActiveSetCellsOnly |

| Information Element | Value/remark |
|---|---|
| - Triggering conditions 2 | Not Present |
| - Reporting range | 18 (9.0 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0 |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Hysteresis | 0 (0 dB) |
| - Threshold used frequency | Not Present |
| - Time to trigger | 0 msec |
| - Reporting cell status | Not Present |
| - PeriodicReportingInfo-1b | |
| - Amount of reporting | 16 |
| - Reporting interval | 8000 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 2)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for Cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | Check to see if set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if set to '1a' |
| - Cell measurement event results | |
| - CHOICE Mode | Check to see if set to 'FDD' |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if set to the same code for Cell 2 |

ACTIVE SET UPDATE (Step 3 & 17)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Radio link addition information | |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as assigned for Cell 2 |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | FDD |
| - Primary CPICH usage for channel estimation | P-CPICH can be used |
| - DPCH frame offset | Calculated value from Cell synchronisation information |
| - Secondary CPICH info | Not Present |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE |
| - Secondary scrambling code | 1 |
| - Spreading factor | Refer to TS 34.108 clause 6.10.2.4 "Typical radio parameter sets" |
| - Code Number | For each DPCH, assign the same code number in the current code given in Cell 1. |
| - Scrambling code change | Not Present |
| - TPC Combination Index | 0 |
| - SSDT Cell Identity | Not Present |
| - Close loop timing adjustment mode | Not Present |
| - TFCI Combining Indicator | FALSE |
| - SCCPCH information for FACH | Not Present |
| Radio link removal information | Not Present |

ACTIVE SET UPDATE COMPLETE (Steps 4, 13 & 18)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Check to see if it is set to 0 |

MEASUREMENT REPORT (Steps 6, 7, 11, 19, 24 & 25)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 1 |
| Measured Results | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured Results | Check to see if this IE is absent |
| Event Results | Check to see if set to 'Intra-frequency measurement event results' |
| - Intra-frequency event identity | Check to see if set to '1b' |
| - Cell measurement event results | |
| - CHOICE Mode | Check to see if set to 'FDD' |
| - Primary CPICH info | |
| - Primary Scrambling Code | Check to see if set to the same code for Cell 2 |

ACTIVE SET UPDATE (Step 12)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 0 |
| Radio link removal information | |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Set to same code as assigned for Cell 2 |

MEASUREMENT CONTROL (Step 16)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 1 |
| Measurement Identity | 1 |
| Measurement Command | Modify |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency cell info list | Not Present |
| - Intra-frequency measurement quantity | Not Present |
| - Intra-frequency reporting quantity | Not Present |
| - Measurement validity | Not present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Intra-frequency event identity | 1b |
| - Triggering conditions 1 | ActiveSetCellsOnly |
| - Triggering conditions 2 | Not Present |
| - Reporting range | 18 (9.0 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0 |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Hysteresis | 0 (0 dB) |
| - Threshold used frequency | Not Present |
| - Time to trigger | 100 msec |
| - Reporting cell status | Not present |
| - PeriodicReportingInfo-1b | |
| - Amount of reporting | 16 |
| - Reporting interval | No periodical reporting |
| DPCH compressed mode status info | Not Present |

MEASUREMENT CONTROL (Step 22)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | 1 |
| Measurement Identity | 1 |
| Measurement Command | Modify |
| Measurement Reporting Mode | Not Present |
| Additional measurements list | Not Present |
| CHOICE measurement type | Intra-frequency measurement |
| - Intra-frequency event identity | 1b |
| - Triggering conditions 1 | ActiveSetCellsOnly |
| - Triggering conditions 2 | Not Present |
| - Reporting range | 18 (9.0 dB) |
| - Cells forbidden to affect reporting range | Not Present |
| - W | 0 |
| - Reporting deactivation threshold | Not Present |
| - Replacement activation threshold | Not Present |
| - Hysteresis | (0 dB) |
| - Threshold used frequency | Not Present |
| - Time to trigger | 0 msec |
| - Reporting cell status | Not present |
| - PeriodicReportingInfo-1b | |
| - Amount of reporting | 16 |
| - Reporting interval | 8000 |
| DPCH compressed mode status info | Not Present |

### 8.4.1.47.5 Test requirement

After step 1, the UE shall send a MEASUREMENT REPORT message on the uplink DCCH. The message shall contain the IE "Event results" to report that Cell 2 has triggered intra-frequency event 1A.

After step 3, the UE shall send an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH indicating the successful addition of Cell 2 to the active set.

After step 5, the UE shall transmit a number of MEASUREMENT REPORTS on the uplink DCCH. The message shall contain IE "Event results" to report that Cell 2 has triggered intra-frequency event 1B.

After step 10, the UE shall start to transmit a number of MEASUREMENT REPORTS on the uplink DCCH. The message shall contain IE "Event results" to report that Cell 2 has triggered intra-frequency event 1B.

After step 12, the UE shall send an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH indicating the successful removal of Cell 2 from the active set.

After step 17, UE shall send an ACTIVE SET UPDATE COMPLETE message on the uplink DCCH indicating the successful addition of Cell 2 to the active set.

After step 18, the UE shall transmit just one MEASUREMENT REPORT message on the uplink DCCH indicating that the periodic event-triggered reporting is now terminated for event 1B. The message shall contain IE "Event results" to report that Cell 2 has triggered intra-frequency event 1B.

After step 23, the UE shall start to transmit a series of MEASUREMENT REPORTs equal to the number as mentioned in the IE ‘ amount of reports’, on the uplink DCCH with the IE "Event results” indicating that Cell 2 has triggered intra-frequency event 1B.

SS waits to see that no further Measurement reports are received in addition to what is mentioned in the IE ’amount of reporting’.

## 8.4.1.48 Measurement Control and Report: Combined Inter-frequency measurement for event 2b and Inter-RAT measurement, event 3a (FDD)

### 8.4.1.48.1 Definition

-

### 8.4.1.48.2 Conformance requirement

When event 2b is configured in the UE within a measurement, the UE shall:

1> if equations 1 and 2 below have been fulfilled for a time period indicated by "Time to Trigger" from the same instant, respectively for one or several non-used frequencies included for that event and for the used frequency:

2> if any of those non-used frequency is not stored in the variable TRIGGERED_2B_EVENT:

3> store the non-used frequencies that triggered the event and that were not previously stored in the variable TRIGGERED_2B_EVENT into that variable;

3> send a measurement report with IEs set as below:

4> set in "inter-frequency measurement event results":

5> "inter-frequency event identity" to "2b"; and

5> for each non-used frequency that triggered the event, beginning with the best frequency:

6> "Frequency info" to that non-used frequency; and

6> "Non frequency related measurement event results" to the "Primary CPICH info" of the best primary CPICH for FDD cells or "Primary CCPCH info" to the "Cell parameters ID" of the best primary CCPCH for TDD cells on that non-used frequency, not taking into account the cell individual offset;

4> set the IE "measured results" and the IE "additional measured results" according to TS 25.331 subclause 8.4.2, not taking into account the cell individual offset;

1> if equation 3 below is fulfilled for a non-used frequency stored in the variable TRIGGERED_2B_EVENT:

2> remove that non-used frequency from the variable TRIGGERED_2B_EVENT.

1> if equation 4 below is fulfilled for the used frequency:

2> clear the variable TRIGGERED_2B_EVENT.

Triggering conditions:

Equation 1:

$$Q_{Non\ used} \geq T_{Non\ used\ 2b} + H_{2b} / 2$$

The variables in the formula are defined as follows:

$\boldsymbol{Q_{Non\ used}}$ is the quality estimate of a non-used frequency that becomes better than an absolute threshold.

$\boldsymbol{T_{Non\ used\ 2b}}$ is the absolute threshold that applies for this non-used frequency in that measurement.

$\boldsymbol{H_{2b}}$ is the hysteresis parameter for the event 2b.

Equation 2:

$$Q_{Used} \leq T_{Used\ 2b} - H_{2b} / 2$$

The variables in the formula are defined as follows:

$\boldsymbol{Q_{Used}}$ is the quality estimate of the used frequency.

$\boldsymbol{T_{Used\ 2b}}$ is the absolute threshold that applies for the used frequency in that measurement.

$\boldsymbol{H_{2b}}$ is the hysteresis parameter for the event 2b.

Leaving triggered state condition:

Equation 3:

$$Q_{Non\ used} < T_{Non\ used\ 2b} - H_{2b} / 2$$

The variables in the formula are defined as follows:

$\boldsymbol{Q_{Non\ used}}$ is the quality estimate of a non-used frequency that is stored in the variable TRIGGERED_2B_EVENT.

$\boldsymbol{T_{Non\ used\ 2b}}$ is the absolute threshold that applies for this non-used frequency in that measurement.

$\boldsymbol{H_{2b}}$ is the hysteresis parameter for the event 2b.

Equation 4:

$$Q_{Used} > T_{Used\ 2b} + H_{2b} / 2$$

The variables in the formula are defined as follows:

$\boldsymbol{Q_{Used}}$ is the quality estimate of the used frequency.

$\boldsymbol{T_{Used\ 2b}}$ is the absolute threshold that applies for the used frequency in that measurement.

$\boldsymbol{H_{2b}}$ is the hysteresis parameter for the event 2b.

…..

When an inter-RAT measurement configuring event 3a is set up, the UE shall:

1> create a variable TRIGGERED_3A_EVENT related to that measurement, which shall initially be empty;

1> delete this variable when the measurement is released.

When event 3a is configured in the UE within a measurement, the UE shall:

1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "required":

2> if equations 1 and 2 below have both been fulfilled for a time period indicated by "Time to trigger" from the same instant, respectively for the used UTRAN frequency and for one or several GSM cells that match any of the BCCH ARFCN and BSIC combinations considered in that inter-RAT measurement:

3> if the Inter-RAT cell id of any of those GSM cells is not stored in the variable TRIGGERED_3A_EVENT:

4> store the Inter-RAT cell ids of the GSM cells that triggered the event and that were not previously stored in the variable TRIGGERED_3A_EVENT into that variable.

4> send a measurement report with IEs set as below:

5> in "inter-RAT measurement event result": "inter-RAT event identity" to "3a", "CHOICE BSIC" to "verified BSIC" and "Inter-RAT cell id" to the GSM cells that triggered the event (best one first), taking into account the cell individual offset of the GSM cells;

5> "measured results" and possible "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.

2> if equation 4 is fulfilled for a GSM cell whose inter-RAT cell id is stored in the variable TRIGGERED_3A_EVENT:

3> remove the inter-RAT cell id of that GSM cell from the variable TRIGGERED_3A_EVENT.

2> if equation 3 is fulfilled for the used frequency in UTRAN:

3> clear the variable TRIGGERED_3A_EVENT.

1> if the other RAT is GSM, and if IE "BSIC verification required" is set to "not required":

2> if equations 1 and 2 below have been fulfilled for a time period indicated by "Time to trigger" from the same instant, respectively for the used UTRAN frequency and for one or several BCCH ARFCNs considered in that inter-RAT measurement:

3> if any of those BCCH ARFCNs is not stored into the variable TRIGGERED_3A_EVENT:

4> store the BCCH ARFCNs that triggered the event and that were not previously stored in the variable TRIGGERED_3A_EVENT into that variable;

4> send a measurement report with IEs set as below:

5> in "inter-RAT measurement event result": "inter-RAT event identity" to "3a", "CHOICE BSIC" to "non verified BSIC" and "BCCH ARFCN" to BCCH ARFCNs that triggered the event (best one first), taking into account the cell individual offset of the GSM cells;

5> "measured results" and possible "additional measured results" according to subclause 8.6.7.5 and 8.4.2, respectively, not taking into account the cell individual offset.

2> if equation 4 is fulfilled for a BCCH ARFCN that is stored in the variable TRIGGERED_3A_EVENT:

3> remove that BCCH ARFCN from the variable TRIGGERED_3A_EVENT.

2> if equation 3 is fulfilled for the used frequency in UTRAN:

3> clear the variable TRIGGERED_3A_EVENT.

Triggering conditions:

Equation 1:

$$Q_{Used} \leq T_{Used} - H_{3a}/2$$

The variables in the formula are defined as follows:

$Q_{Used}$ is the quality estimate of the used UTRAN frequency.

$T_{Used}$ is the absolute threshold that applies for the used frequency in that measurement.

$H_{3a}$ is the hysteresis parameter for event 3a.

Equation 2:

$$M_{Other\ RAT}+CIO_{OtherRAT} \geq T_{Other\ RAT}+H_{3a}/2$$

The variables in the formula are defined as follows:

$M_{Other\ RAT}$ is the measurement quantity for the cell of the other system.

$CIO_{Other\ RAT}$ is the cell individual offset for the cell of the other system.

$T_{Other\ RAT}$ is the absolute threshold that applies for the other system in that measurement.

$H_{3a}$ is the hysteresis parameter for event 3a.

Leaving triggered state conditions:

Equation 3:

$$Q_{Used} > T_{Used}+H_{3a}/2$$

The variables in the formula are defined as follows:

$Q_{Used}$ is the quality estimate of the used UTRAN frequency.

$T_{Used}$ is the absolute threshold that applies for the used frequency in that measurement.

$H_{3a}$ is the hysteresis parameter for event 3a.

Equation 4:

$$M_{Other\ RAT}+CIO_{OtherRAT} < T_{Other\ RAT}-H_{3a}/2$$

The variables in the formula are defined as follows:

$M_{Other\ RAT}$ is the measurement quantity for the cell of the other system. $M_{Other\ RAT}$ is expressed in dBm.

$CIO_{Other\ RAT}$ is the cell individual offset for the cell of the other system.

$T_{Other\ RAT}$ is the absolute threshold that applies for the other system in that measurement.

$H_{3a}$ is the hysteresis parameter for event 3a.

$H_{3c}$ is the hysteresis parameter for event 3c.

Reference

3GPP TS 25.331 clauses 14.2.1.2, 14.3.1.1.

### 8.4.1.48.3 Test Purpose

1. To confirm that the UE sends MEASUREMENT REPORT message when event 2b and 3a are configured and estimated quality of the currently used frequency is below the value of the IE "Threshold used frequency" and the estimated quality of a non-used frequency is above the value of the IE "Threshold non-used frequency". This MEASUREMENT REPORT message shall contain at least the best primary CPICH info of the non-used frequency that triggered the event.
2. To confirm that the UE sends MEASUREMENT REPORT message when event 2b and 3a are configured and estimated quality of the currently used UTRAN frequency is below the value of the IE "Treshold own system" and the estimated quality of the other system is above the value of the IE "Treshold other system". This

MEASUREMENT REPORT message shall contain the inter-RAT cell id of the GSM cell that triggered the event.

### 8.4.1.48.4 Method of test

#### Initial Condition

System Simulator: 2 UTRAN FDD cells and 1 GSM cell. The initial configurations of the 3 cells in the SS shall follow the values indicated in the column marked "T0" in table 8.4.1.48-1. The table is found in "Test Procedure" clause.

UE: CS-DCCH+DTCH_DCH (State 6-9) or PS-DCCH+DTCH_DCH (State 6-10) in cell 1 as specified in clause 7.4 of TS 34.108, depending on the CN domain supported by the UE.

#### Related ICS/IXIT statements

- Compressed mode required yes/no

#### Test Procedure

Table 8.4.1.48-1 and 8.4.1.48-2 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Column marked "T0" denotes the initial conditions, while columns marked "T1" and "T2" are to be applied subsequently. The exact instants on which these values shall be applied are described in the text in this clause.

**Table 8.4.1.48-1**

| Parameter | Unit | Cell 1 | | | Cell 4 | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | High Range Test Frequency | | |
| CPICH Ec (FDD) | dBm/3.84 Mhz | -60 | -80 | -80 | -80 | -60 | -80 |
| Qrxlevmin | dBm | -115 (Note) | | | | | |
| Note Qrxlevmin is set to minimum value (-115) to avoid that cell trigger “out of service” condition. | | | | | | | |

**Table 8.4.1.48-2**

| Parameter | Unit | Cell 9 (GSM) | | |
|---|---|---|---|---|
| | | T0 | T1 | T2 |
| Test Channel | - | GSM Ch.1 | | |
| BCCH ARFCN | - | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) | | |
| CELL identity | - | 0 | | |
| BSIC | - | BSIC 1 | | |
| RF Signal Level | DBm | -90 | -90 | -70 |

The UE is initially in CELL_DCH on Cell1. UTRA cell 1 is the only cell in the active set of the UE. If the UE requires compressed mode (refer ICS/IXIT), the SS sends a PHYSICAL CHANNEL RECONFIGURATION message to the UE to configure the compressed mode pattern sequence parameters to the UE. Four compressed mode patterns: one for inter-frequency handover and three for inter-RAT handover (RSSI, BSIC decoding and BSIC reconfirmation) are configured, according to the message specified below. When the PHYSICAL CHANNEL RECONFIGURATION COMPLETE is received from the UE, the SS sends two MEASUREMENT CONTROL messages to the UE, to set up inter-frequency and inter-RAT measurements respectively. Event 2b and 3a is set up in these message, and if the UE requires compressed mode (refer ICS/IXIT), compressed mode is activated.

The SS then configures the UTRA cells Cell1 and Cell4 and the GSM cell Cell9 according to the values in columns "T1" in table 8.4.1.48-1 and table 8.4.1.48-2. As the estimate for the used frequency is below the threshold configured by the IE " Threshold used frequency " (-70dBm) and the estimate for the non-used frequency is above the threshold configured by the IE "Threshold non-used frequency" (-70dBm) then event 2b is triggered by the UE. The SS waits for the MEASUREMENT REPORT message from the UE reporting event 2b.

The SS then configures the UTRA cells Cell1 and Cell4 and the GSM cell Cell9 according to the values in columns "T2" in table 8.4.1.48-1 and table 8.4.1.48-2. As the estimated quality of the currently used UTRAN frequency is below the value of the IE "Treshold own system" (-70dBm) and the estimated quality of the other system is above the value of the IE "Treshold other system" (-80 dBm) then event 3a is triggered by the UE. The SS waits for a MEASUREMENT REPORT message from the UE reporting event 3a.

The SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | | The UE is brought to the CELL_DCH state in cell 1.<br>If Compressed Mode not required (refer ICS/IXIT) go to step 4 |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | SS instructs UE to configure compressed mode patterns for inter-frequency and inter-RAT. |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 4 | ← | | MEASUREMENT CONTROL | SS sets measurement parameters for event 2b . |
| 5 | ← | | MEASUREMENT CONTROL | If UE require compressed mode (refer ICS/IXIT) then SS activates compressed mode operation for Inter-RAT and Inter-frequency.<br>SS commands the UE to perform Inter-RAT measurements and Inter-frequency to report event 3a and event 2b. |
| 6 | | | | SS re-adjusts the downlink transmission power settings according to columns "T1" in table 8.4.1.48-1 and table 8.4.1.48-2. |
| 7 | → | | MEASUREMENT REPORT | Measurement report indicating event 2b. This message should come at least 640 ms later after changing power setting of Cell 4. Layer 3 Filtering causes an additional delay. |
| 8 | | | | SS re-adjusts the downlink transmission power settings according to columns "T2" in table 8.4.1.48-1 and table 8.4.1.48-2. |
| 9 | → | | MEASUREMENT REPORT | Measurement report indicating event 3a. This message should come at least 640 ms later after changing power setting of Cell 9. |
| 10 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

All messages indicated below shall use the same content as described in default message content, with the following exceptions:

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type found in clause 9 of TS 34.108, which is entitled "(Packet to CELL_DCH from CELL_DCH in PS)", with Scrambling code change set to Default1 and with the following exceptions in the IE(s) concerned:

Four compressed mode patterns: one for inter-frequency handover and three for inter-RAT handover (RSSI, BSIC decoding and BSIC reconfirmation) are configured, based on the compressed mode pattern in clause 6.8.2.2 of 34.108

| Information Element | Value/remark | Version |
|---|---|---|
| Downlink information common for all radio links<br>- DPCH compressed mode info | | |
| - TGPSI<br>- TGPS status flag<br>- TGCFN<br>- Transmission gap pattern sequence configuration parameters<br>- TGMP<br>- TGPRC<br>- TGSN<br>- TGL1<br>- TGL2<br>- TGD<br>- TGPL1<br>- TGPL2<br><br>- RPP<br>- ITP<br>- CHOICE UL/DL mode<br><br>- Downlink compressed mode method<br>- Uplink compressed mode method<br>- Downlink frame type<br>- DeltaSIR1<br>- DeltaSIRAfter1<br>- DeltaSIR2<br>- DeltaSIRAfter2<br>- N identify abort<br>- T Reconfirm abort | 1<br>Deactivate<br>Not Present<br><br><br>FDD Measurement<br>Infinity<br>8<br>14<br>Not Present<br>undefined<br>12<br>Not Present<br><br>Mode 0<br>Mode 0<br>UL and DL or DL only or UL only depending on UE capability<br>SF/2<br>SF/2 or Not present depending on UE capability<br>A<br>20 (2.0)<br>10 (1.0)<br>Not present<br>Not present<br>Not present<br>Not present | R99 and Rel-4 only |
| - TGPSI<br>- TGPS Status Flag<br>- TGCFN<br>- Transmission gap pattern sequence configuration parameters<br>- TGMP<br>- TGPRC<br>- TGSN<br>- TGL1<br>- TGL2<br>- TGD<br>- TGPL1<br>- TGPL2<br><br>- RPP<br>- ITP<br>CHOICE UL/DL Mode<br><br>- Downlink compressed mode method<br>- Uplink compressed mode method<br>- Downlink frame type<br>- DeltaSIR1<br>- DeltaSIRAfter1<br>- DeltaSIR2<br>- DeltaSIR2After2<br>- N identify abort<br>- T Reconfirm abort | 2<br>Deactivate<br>Not present<br><br><br>GSM Carrier RSSI Measurement<br>Infinity<br>8<br>14<br>Not present<br>60<br>24<br>Not present<br><br>Mode 0<br>Mode 0<br>UL&DL or UL-only or DL-only (depends on UE's Measurement capability)<br>SF/2<br>SF/2 or Not present depending on UE capability<br>A<br>10 (1.0)<br>5 (0.5)<br>Not Present<br>Not Present<br>Not Present<br>Not Present | R99 and Rel-4 |
| - TGPSI<br>- TGPS Status Flag<br>- TGCFN<br>- Transmission gap pattern sequence configuration parameters<br>- TGMP<br>- TGPRC<br>- TGSN<br>- TGL1<br>- TGL2<br>- TGD | 3<br>Deactivate<br>Not present<br><br><br>GSM BSIC identification<br>Infinity<br>8<br>14<br>Not present<br>45 | |

| | | |
|---|---|---|
| - TGPL1 | 24 | |
| - TGPL2 | Not present | R99 and Rel-4 |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 or Not present depending on UE capability | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | 66 | |
| - T Reconfirm abort | Not Present | |
| - TGPSI | 4 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | GSM BSIC re-confirmation | |
| - TGPRC | Infinity | |
| - TGSN | 8 | |
| - TGL1 | 14 | |
| - TGL2 | Not present | |
| - TGD | undefined | |
| - TGPL1 | 24 | |
| - TGPL2 | Not present | R99 and Rel-4 |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| CHOICE UL/DL Mode | UL&DL or UL-only or DL-only (depends on UE's Measurement capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 or Not present depending on UE capability | |
| - Downlink frame type | A | |
| - DeltaSIR1 | 10 (1.0) | |
| - DeltaSIRAfter1 | 5 (0.5) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIR2After2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | 10 (5 s) | |
| Downlink information per radio link list | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Serving E-DCH radio link indicator | FALSE | Rel-6 |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | Set to value Default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |

| | | |
|---|---|---|
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - E-AGCH Info | Not Present | Rel-6 |
| - E-HICH Information | Not Present | Rel-6 |
| - E-RGCH Information | Not Present | Rel-6 |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 4)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 2 |
| Measurement command | Setup |
| Measurement reporting mode | |
| - Measurement reporting transfer mode | Acknowledged mode RLC |
| - Periodic reporting / Event trigger reporting mode | Event trigger |
| Additional measurement list | Not present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - Inter-frequency cell removal | Not present |
| - New inter-frequency info list | |
| - Inter-frequency cell id | Id of Cell 4 |
| - Frequency Information | Frequency of Cell 4 |
| - Cell info | |
| - Cell individual offset | Default value |
| - Reference time difference to cell | Not present |
| - CHOICE mode | FDD |
| - Read SFN Indicator | FALSE |
| - Primary CPICH Info | |
| - Primary scrambling code | Primary scrambling code of Cell 4 |
| - Primary CPICH TX power | Not present |
| - TX Diversity Indicator | FALSE |
| - Cell for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - Filter Coefficient | 4 |
| - Frequency quality estimate quantity | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRAN carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related quantities | |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | CELL_DCH state |
| - Inter-frequency SET UPDATE | |
| - UE autonomous update mode | On with no reporting |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each events | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -70 dBm |
| - W used frequency | 0 |
| - Hysteresis | 2 (1 dB) |
| - Time to trigger | 640 ms |
| - Reporting cell status | Within active set or within virtual active set or of the other RAT |
| - Maximum number of reporting cells | 1 |
| - Non used frequency parameter list | |
| - Threshold non used frequency | -70 dBm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT CONTROL (Step 5)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 3 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodic Reporting / Event Trigger Reporting Mode | Event triggered |
| Additional measurements list | Not Present |
| CHOICE measurement type | |
| - inter-RAT measurement | |
| - inter-RAT measurement object list | |
| CHOICE Inter-RAT Cell Removal | Remove all inter-RAT cells |
| -Remove all inter-RAT cells | (No Data) |
| New inter-RAT cells (1 to <MaxCellMeas>) | |
| - inter-RAT cell id | Id of Cell9 |
| CHOICE Radio Access Technology | GSM |
| - Cell individual offset | 0 |
| - Cell selection and re-selection info | Not present |
| - BSIC | BSIC1 |
| - Band indicator | GSM/DCS-1800 or GSM/PCS-1900 (dependent on band used) |
| - BCCH ARFCN | Value according to the GSM band under test (see 3GPP 34.123-1 table 6.5 for details on the ARFCN) |
| - Cell for measurement | Not present |
| - inter-RAT measurement quantity | |
| - Measurement quantity for UTRAN quality estimate | |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 0 |
| - CHOICE mode | FDD |
| - Measurement quantity | CPICH RSCP |
| CHOICE system | GSM |
| - Measurement quantity | GSM carrier RSSI |
| - Filter coefficient | 0 |
| - BSIC verification required | Required |
| - inter-RAT reporting quantity | |
| CHOICE system | GSM |
| - Observed time difference to to GSM cell reporting indicator | FALSE |
| - GSM carrier RSSI reporting indicator | TRUE |
| CHOICE report criteria | |
| - Inter-RAT measurements reporting criteria | |
| - Parameters required for each event (1 to<maxMeasEvent>) | |
| - Inter-RAT event identity | 3a |
| - Threshold own system | -70 dBm |
| - W | 0 |
| - Threshold other system | -80 dBm |
| - Hysteresis | 2 (1 dB) |
| - Time to Trigger | 640 ms |
| - Reporting cell status | Report cells within active set or within virtual active set or of the other RAT |
| - Maximum number of reported cells | 1 |
| Physical channel information elements | |
| - DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |
| - TGPS reconfiguration CFN | (Current CFN+(232-TTI/10msec))mod256 |
| - Transmission gap pattern sequence (1 to <MaxTGPS>) | |
| - TGPSI | 1 |
| - TGPS status flag | Activate |
| - TGCFN | (TGPS reconfiguration CFN +6)mod 256 |
| - TGPSI | 2 |
| - TGPS status flag | Activate |
| - TGCFN | (TGPS reconfiguration CFN +10)mod 256 |

| | |
|---|---|
| - TGPSI | 3 |
| - TGPS status flag | Activate |
| - TGCFN | (TGPS reconfiguration CFN +24)mod 256 |
| - TGPSI | 4 |
| - TGPS status flag | Activate |
| - TGCFN | (TGPS reconfiguration CFN +21)mod 256 |

MEASUREMENT REPORT (Step 7)

| Information Element | Value/remark |
|---|---|
| Measurement identity | Check to see if set to 2 |
| Measured results | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_4$ |
| - UTRA carrier RSSI | Check to see if it is not present |
| - Inter-frequency cell measured results | |
| - Cell Identity | Check to see if it is not present |
| - Cell synchronisation information | Check to see if it is not present |
| - Mode Specific Info | FDD |
| - Primary CPICH Info | |
| - Primary scrambling code | Primary scrambling code for cell 4 |
| - CPICH Ec/No | Check to see if it is not present |
| - CPICH RSCP | Check that measurement result is present |
| - Pathloss | Check to see if it is not present |
| Measured results on RACH | Check to see if it is not present |
| Additional measured results | Check to see if it is not present |
| Event results | Inter-frequency measurement event results, |
| - Inter-frequency event identity | 2b |
| - Cell measurement event results | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to UARFCN for the downlink corresponding to $f_4$ |
| - Primary CPICH info | |
| - Primary scrambling code | Primary scrambling code of Cell 4 |

MEASUREMENT REPORT (Step 9)

| Information Element | Value/remark | Version |
|---|---|---|
| Measurement identity | Check to see if set to 3 | |
| Measured Results | | |
| - CHOICE measurement | Check to see if set to "Inter-RAT measured results list" | |
| - Inter-RAT measured result list | | |
| - CHOICE system | GSM | |
| - Measured GSM cells | Check that measurement results for one GSM cells is included | |
| - GSM carrier RSSI | Check that measurement result is present | |
| CHOICE BSIC | Check it is set to verified BSIC | |
| - inter-RAT cell id | Check that it is set to Cell id for Cell9 | |
| - Observed time difference to GSM cell | Check to see if it is not present | R99 and Rel-4 only |
| Measured results on RACH | Check to see if it is not present | |
| Additional Measured results | Check to see if it is not present | |
| Event results | Check that the IE is present | |
| - CHOICE event result | Check that this is set to inter-RAT measurement event results | |
| - Inter-RAT event identity | Check that this is set to 3a | |
| - Cells to report (1 to <maxCellMeas>) | Check that <maxCellMeas> is set to 1 | |
| - CHOICE BSIC | Check that this is set to verified BSIC | |
| - Inter-RAT cell id | Check that this is set to Cell id of Cell 9. | |

#### 8.4.1.48.5 Test Requirement

1. In step 7 the UE shall send a MEASUREMENT REPORT message indicating event 2b. IE 'Inter-frequency Cells' in MEASUREMENT REPORT message shall contain frequency information and primary scrambling code of Cell 4.

2 In step 9 the UE shall send a MEASUREMENT REPORT message indicating event 3a with IE “Inter-RAT cell id” indicating Cell 9.

### 8.4.1.49 Measurement Control and Report: Intra-frequency measurement for event 1J

#### 8.4.1.49.1 Definition

#### 8.4.1.49.2 Conformance requirement

When an intra-frequency measurement configuring event 1j is set up, the UE shall:

1> create a variable TRIGGERED_1J_EVENT related to that measurement, which shall initially be empty;

1> delete this variable when the measurement is released.

When event 1J is configured in the UE, the UE shall:

1> if "Measurement quantity" is "pathloss" and Equation 1 below is fulfilled for one or more primary CPICHs, or if "Measurement quantity" is "CPICH Ec/N0" or "CPICH RSCP", and Equation 2 below is fulfilled for one or more primary CPICHs, for each of these primary CPICHs:

2> if all required reporting quantities are available for that cell; and

2> if the equations have been fulfilled for a time period indicated by "Time to trigger", and if the primary CPICH that is better is not included in the E-DCH active set but included in DCH active set and the other primary CPICH is any of the primary CPICHs included in the E-DCH active set, and if that first primary CPICH is not included in the "cells triggered" in the variable TRIGGERED_1J_EVENT:

3> include that primary CPICH in the "cells recently triggered" in the variable TRIGGERED_1J_EVENT.

1> if the value of "Replacement activation threshold" for this event is less than or equal to the current number of cells in the E-DCH active set or equal to 0 and if any primary CPICHs are stored in the "cells recently triggered" in the variable TRIGGERED_1J_EVENT:

2> if "Reporting interval" for this event is not equal to 0:

3> if the IE "Periodical reporting running" in the variable TRIGGERED_1J_EVENT is set to FALSE:

4> start a timer for with the value of "Reporting interval" for this event and set the IE "Periodical reporting running" in the variable TRIGGERED_1J_EVENT to TRUE.

3> set "sent reports" for that primary CPICH in the variable TRIGGERED_1J_EVENT to 1.

2> send a measurement report with IEs set as below:

3> set in "intra-frequency measurement event results": "Intrafrequency event identity" to "1J"; and

3> include in "cell measurement event results" all entries of the "cells recently triggered" in the variable TRIGGERED_1J_EVENT not in the E-DCH active set but included in DCH active set as well as the "primary CPICH info" of all the primary CPICHs in the E-DCH active set for which the measured value is worse (i.e. greater for pathloss and less for the other measurement quantities) than the one of the entry in "cell recently triggered" that has the best measured value taking into account their cell individual offset. The "primary CPICH info" for those cells shall be ordered according to their measured value taking into account their cell individual offset, beginning with the best cell to the worst one;

3> set the IE "measured results" and the IE "additional measured results" according to subclause 8.4.2, not taking into account the cell individual offset for each cell.

2> …

Reference

3GPP TS 25.331 clause 14.1.2.7

### 8.4.1.49.3 Test Purpose

1. To confirm that the UE sends MEASUREMENT REPORT message if event 1J is configured, and the number of cells in the E-DCH active set is greater than or equal to 'Replacement activation threshold' parameter, and if the the primary CPICH that is not included in the E-DCH active set but included in the DCH active set becomes better than any of the primary CPICHs included in the E-DCH active set.

2. To confirm that the UE does not send MEASUREMENT REPORT message indicating event 1J if the number of cells in the active E-DCH set is less than 'Replacement activation threshold' parameter, even if the primary CPICH that is not included in the E-DCH active set but included in the DCH active set becomes better than any of the primary CPICHs included in the E-DCH active set.

3. To confirm that the UE does not send MEASUREMENT REPORT message indicating event 1J, even if the cell that is not in the DCH active set becomes better than any of the primary CPICHs included in the E-DCH active set.

4. To confirm that the UE stops periodic reporting of event 1J when the "sent reports" in variable TRIGGERED_1J_EVENT is greater than "Amount of reporting".

### 8.4.1.49.4 Method of Test

Initial Condition

System Simulator: 3 cells – The initial configuration of the 3 cells in the SS shall follow the values indicated in the column marked "T0" in table 8.4.1.49-1. The table is found in "Test Procedure" clause

UE: PS-DCCH +DTCH_HS-DSCH +DTCH_E-DCH (state 6-18) under condition A12 in Cell 1 as specified in clause 7.4 of TS 34.108

Related ICS/IXIT statement(s)

- UE supports FDD
- UE supports HS-PDSCH
- UE supports E-DPDCH

Test Procedure

Table 8.4.1.49-1 illustrates the downlink power to be applied for the 3 cells at various instants of the test execution. Columns marked "T0" denotes the initial conditions, while "T1", "T2", "T3", "T4", and "T5" are to be applied subsequently. The exact instants on which these values shall be applied are described in the text in this clause.

**Table 8.4.1.49-1**

| Parameter | Unit | Cell 1 | | | | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T4 | T5 |
| UTRA RF Channel Number | | Ch.1 | | | | | |
| CPICH Ec (FDD) | dBm/3.84Mhz | -60 | -60 | -60 | -60 | -66 | -66 |

| Parameter | Unit | Cell 2 | | | | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T4 | T5 |
| UTRA RF Channel Number | | Ch.1 | | | | | |
| CPICH Ec (FDD) | dBm/3.84Mhz | -80 | -60 | -72 | -72 | -78 | -60 |

| Parameter | Unit | Cell 3 | | | | | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T3 | T4 | T5 |
| UTRA RF Channel Number | | Ch.1 | | | | | |
| CPICH Ec (FDD) | dBm/3.84Mhz | -80 | -60 | -78 | -66 | -60 | -60 |

The UE is in the CELL_DCH state and has a radio bearer mapped on E-DCH and HS-DSCH established with active E-DCH transmission and HS-DSCH reception.

SS configures its downlink transmission power settings according to columns "T1" in table 8.4.1.49-1. UE shall be triggered to transmit a MEASUREMENT REPORT message, which includes the primary scrambling code for cell 2.

SS performs a soft handover by sending ACTIVE SET UPDATE on the DL DCCH. The UE shall respond with ACTIVE SET UPDATE COMPLETE on the uplink DCCH and include Cell 2 and Cell 3 in the DCH active set.

SS configures its downlink transmission power settings according to columns "T2" in table 8.4.1.49-1.Setup event 1J by MEASUREMENT CONTROL with IE. 'Replacement activation threshold' set to 1.

SS configures itself according to the values in columns "T3" by increasing the power of Cell 3 (but not above Cell 1 and outside the reporting range for Cell 1). There shall be no measurement reports generated for this condition.

SS configures itself according to the values in columns "T4" to trigger event 1J and waits for 10 seconds. There shall be 2 measurement reports reporting event 1J. The "cell measurement event" of the measurement report contains the information of primary CPICH for Cell 3 and Cell 1.

SS removes Cell 2 from the DCH active set by sending ACTIVE SET UPDATE on the DL DCCH. The UE shall respond with ACTIVE SET UPDATE COMPLETE on the uplink DCCH

SS configures itself according to the values in the columns "T5". Cell 2 is better than Cell 1, however the UE shall not send a MEASUREMENT REPORT message indicating event 1J as the event is only triggered for cells in the DCH active set.

The SS then sends MEASUREMENT CONTROL message to the UE to modify the earlier configured 1J measurement. Now IE 'Replacement activation threshold' is set to 2. MEASUREMENT CONTROL messages contain only those IEs that are modified and the UE shall continue to use current values of parameters that are not modified. Add Cell 2 to the DCH active set by sending ACTIVE SET UPDATE on the DL DCCH. The UE shall respond with ACTIVE SET UPDATE COMPLETE. Now Cell 2 is better than Cell 1 and is in the DCH active set. However the UE shall not send MEASUREMENT REPORT message indicating 1J because the number of cells in the E-DCH active set is less than parameter "Replacement Activation Threshold". The SS then sends MEASUREMENT CONTROL message to set the IE ‘Replacement activation threshold’ back to 1 and wait 10 seconds. There shall be 2 measurement reports reporting event 1J. The “cell measurement event” of the measurement report contains the information of primary CPICH for Cell 2,3 and 1.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | | | | UE is initially in CELL_DCH state in cell 1. |
| 0a | | | | SS configures its downlink transmission power settings according to columns "T1" in table 8.4.1.49-1 |
| 0b | → | | MEASUREMENT REPORT | See specific message contents for this message. |
| 0c | | | | SS configures its downlink transmission power settings according to columns "T2" in table 8.4.1.49-1 |
| 1 | ← | | ACTIVE SET UPDATE | SS command the UE to add Cell 2 and Cell 3 in the DCH active set. |
| 2 | → | | ACTIVE SET UPDATE COMPLETE | |
| 3 | ← | | MEASUREMENT CONTROL | Event 1J is setup. IE "Replacement activation threshold" is set to 1. |
| 4 | | | | SS re-adjusts the downlink transmission power settings according to columns "T3" in table 8.4.1.49-1. |
| 5 | | | | Check for 10 seconds, the UE shall not send MEASUREMENT REPORT message. |
| 6 | | | | SS re-adjusts the downlink transmission power settings according to columns "T4" in table 8.4.1.49-1. |
| 7 | → | | MEASUREMENT REPORT | Event 1J is triggered. The UE report contains the information of primary CPICH for Cell 3 and Cell 1. |
| 8 | → | | MEASUREMENT REPORT | The UE shall send a second report. Check for 10 seconds, the UE shall send no further measurement reports |
| 9 | ← | | ACTIVE SET UPDATE | SS command the UE to remove Cell 2 from the DCH active set |
| 10 | → | | ACTIVE SET UPDATE COMPLETE | |
| 11 | | | | SS re-adjusts the downlink transmission power settings according to columns "T5" in table 8.4.1.49-1. |
| 12 | | | | Check for 10 seconds, the UE shall not send MEASUREMENT REPORT MESSAGE (Cell 2 is not in the active DCH set) |
| 13 | ← | | MEASUREMENT CONTROL | Event 1J is setup to set IE "Replacement activation threshold" is set to 2. |
| 14 | ← | | ACTIVE SET UPDATE | SS commands the UE to add Cell 2 back to the DCH active set |
| 15 | → | | ACTIVE SET UPDATE COMPLETE | |
| 16 | | | | Check for 10 seconds, the UE shall not send MEASUREMENT REPORT MESSAGE (number of cells in the E-DCH active set is less than threshold) |
| 17 | ← | | MEASUREMENT CONTROL | Event 1J is setup to set IE "Replacement activation threshold" back to 1. |
| 18 | → | | MEASUREMENT REPORT | Event 1J is triggered. The UE report contains the information of primary CPICH for cell3, Cell 2 and Cell 1. |

| | | | |
|---|---|---|---|
| 19 | → | MEASUREMENT REPORT | The UE shall send second report. Check for 10 seconds, the UE shall send no further measurement reports |
| 20 | ←→ | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

All messages indicated below shall use the same content as described in TS 34.108 clause 9, with the following exceptions:

MEASUREMENT REPORT (Step 0b)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 1 |
| Measured Results | |
| - Intra-frequency measured results | Check to see if measurement results for 3 cells are included (the order in which the different cells are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.1 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| - Cell measured results | |
| - Cell Identity | Checked that this IE is absent |
| - Cell synchronisation information | Checked that this IE is present and includes IE COUNT-C-SFN frame difference |
| - Primary CPICH info | |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |
| - CPICH Ec/N0 | Checked that this IE is absent |
| - CPICH RSCP | Checked that this IE is present |
| - Pathloss | Checked that this IE is absent |
| Measured results on RACH | Checked that this IE is absent |
| Additional measured results | Checked that this IE is absent |
| Event results | |
| - Intra-frequency measurement event results | |
| - Intra-frequency event identity | 1a |
| - Cell measurement event results | |
| - Primary CPICH info | The UE may include either or both of the following cells.(the order in which the different cells are reported is not important) |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.2 (FDD)" in clause 6.1 of TS 34.108 |
| - Primary scrambling code | Refer to clause titled "Default settings for cell No.3 (FDD)" in clause 6.1 of TS 34.108 |

ACTIVE SET UPDATE (Step 1)

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH info | | |
| - Primary scrambling code | Primary scrambling code of Cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE MODE | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE on Cell 2 | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6 Parameter Set | |
| - Code number | For each DPCH, assign the same code number in the current code given in cell 1 | |
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - Closed loop timing adjustment mode | Not Present | |
| - Primary CPICH info | | |
| - Primary scrambling code | Primary scrambling code of Cell 3 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE MODE | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE on Cell 3 | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6 Parameter Set | |
| - Code number | For each DPCH, assign the same code number in the current code given in cell 1 | |
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not Present | |
| - Closed loop timing adjustment mode | Not Present | |

MEASUREMENT CONTROL (Steps 3 and 17)

| Information Element | Value/remark |
|---|---|
| Measurement Identity | 1 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Report Transfer Mode | Acknowledged mode RLC |
| - Periodical Reporting/Event Trigger Reporting Mode | Periodical reporting |
| CHOICE Measurement type | Intra-frequency measurement |
| - Intra-frequency measurement | |
| - Intra-frequency cell info list | |
| - CHOICE intra-frequency cell removal | Remove no intra-frequency cells |
| - New intra-frequency cells | |
| - Intra-frequency cell-id | Id of Cell 2 |
| - Cell info | |
| - Cell individual offset | 0 (0dB) |
| - Reference time difference to cell | Not Present |
| - Read SFN number | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Primary scrambling code of Cell 2 |
| - Primary CPICH Tx power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection Info | Not Present |
| - Intra-frequency cell-id | Id of Cell 3 |
| - Cell info | |
| - Cell individual offset | 0 (0dB) |
| - Reference time difference to cell | Not Present |
| - Read SFN number | FALSE |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Primary scrambling code of Cell 3 |
| - Primary CPICH Tx power | Not Present |
| - TX Diversity indicator | FALSE |
| - Cell Selection and Re-selection Info | Not Present |
| - Cells for measurement | |
| - Intra-frequency cell id list | Set to id of cell 1, 2 and 3 |
| - Intra-frequency measurement quantity | |
| - Filter coefficient | 0 |
| - Measurement quantity | CPICH RSCP |
| - Intra-frequency reporting quantity | |
| - Reporting quantities for active set cells | |
| - Cell synchronization information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for monitored set cells | |
| - Cell synchronization information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/N0 reporting indicator | FALSE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Reporting quantities for detected set cells | Not Present |
| - Reporting cell status | Not Present |
| - Measurement validity | Not Present |
| - CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1J |
| - Hysteresis | 0 |
| - Replacement activation threshold | 1 |
| - Time to trigger | 200 ms |
| - Amount of reporting | 2 |
| - Reporting interval | 500 ms |
| - Reporting cell status | |
| - Report cells within active set and/or monitored set cells on used frequency | |

| | |
|---|---|
| - Maximum number of reported cells | 3 |
| DPCH Compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 7 and 8)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measured Results | |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | Check to see if measurement results for 3 cells are included |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to “Intra-frequency measurement event results“ |
| - Intra-frequency event identity | Check to see if set to “1J” |
| - Cell measurement event results | |
| - Primary CPICH info | Check to see if set to “Primary scrambling code of Cell 3 |
| - Primary CPICH info | Check to see if set to “Primary scrambling code of Cell 1 |

ACTIVE SET UPDATE (Step 9)

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link removal information | | |
| - Primary CPICH info | | |
| - Primary scrambling code | Primary scrambling code of Cell 2 | |

MEASUREMENT CONTROL (step 13)

Use the same message as defined for steps 3 and 17 with the exception of the following IE

| Information Element | Value/remark |
|---|---|
| CHOICE report criteria | Intra-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Intra-frequency event identity | 1J |
| - Hysteresis | 0 |
| - Replacement activation threshold | 2 |
| - Time to trigger | 200 ms |
| - Amount of reporting | 2 |
| - Reporting interval | 500 ms |
| - Reporting cell status | |
| - Report cells within active set and/or monitored set cells on used frequency | |
| - Maximum number of reported cells | 3 |

ACTIVE SET UPDATE (Step 14)

| Information Element | Value/remark | Version |
|---|---|---|
| Radio link addition information | | |
| - Primary CPICH info | | |
| - Primary scrambling code | Primary scrambling code of Cell 2 | |
| - Downlink DPCH info for each RL | | |
| - CHOICE MODE | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Calculated value from Cell synchronisation information | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | This IE is repeated for all existing downlink DPCHs allocated to the UE on Cell 2 | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6 Parameter Set | |
| - Code number | For each DPCH, assign the same code number in the current code given in cell 1 | |
| - Scrambling code change | Not Present | |
| - TPC combination index | 0 | |
| - Closed loop timing adjustment mode | Not Present | |
| - TPC combination index | 0 | |
| - SSDT cell identity | Not Present | |
| - Closed loop timing adjustment mode | Not Present | |

MEASUREMENT REPORT (Step 18 and 19)

| Information Element | Value/remark |
|---|---|
| Measurement identity | 1 |
| Measured Results | Check to see if this IE is present |
| - CHOICE measurement | Check to see if set to "Intra-frequency measured results list" |
| - Intra-frequency measurement results | Check to see if measurement results for 3 cells are included (the order in which cells 2 and 3 are reported is not important) |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this IE is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 2 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 3 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| - Cell measured results | |
| - Cell Identity | Check to see if it is absent |
| - Cell synchronisation information | Check to see if this is absent |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Check to see if it's the same code for cell 1 |
| - CPICH Ec/No | Check to see if this IE is absent |
| - CPICH RSCP | Check to see if this IE is present |
| - Pathloss | Check to see if this IE is absent |
| Measured Results on RACH | Check to see if this IE is absent |
| Additional Measured results | Check to see if this IE is absent |
| Event results | Check to see if set to “Intra-frequency measurement event results“ |
| - Intra-frequency event identity | Check to see if set to “1J” |
| - Cell measurement event results | Check to see if measurement results for 3 cells are included (the order in which cells 2 and 3 are reported is not important) |
| - Primary CPICH info | Check to see if set to “Primary scrambling code of Cell 3” |
| - Primary CPICH info | Check to see if set to “Primary scrambling code of Cell 2 |
| - Primary CPICH info | Check to see if set to “Primary scrambling code of Cell 1 |

#### 8.4.1.49.5 Test Requirement

In steps 7, 8, 18 and 19 the UE shall send a MEASUREMENT REPORT indicating event 1J. For steps 7 and 8 the IE ‘Cell measurement event results’ in the MEASUREMENT REPORT message should contain primary scrambling codes of Cell 3 and Cell 1. For steps 18 and 19 the IE ‘Cell measurement event results’ in the MEASUREMENT REPORT message should contain primary scrambling codes of Cell 2 and Cell 1.

In step 16 the UE shall not send a MEASUREMENT REPORT message.

In step 12 the UE shall not send a MEASUREMENT REPORT message.

In steps 7 and 8 the UE shall send 2 measurement reports only.

### 8.4.1.50 Measurement reporting when moving from CELL_PCH to CELL_FACH

#### 8.4.1.50.1 Definition

All UEs which support FDD and HS-PDSCH in CELL_PCH and URA_PCH.

#### 8.4.1.50.2 Conformance requirement

In CELL_PCH or URA_PCH state, the UE shall:

1> if the measurement reporting is not initiated according to subclause 8.5.40:

2> first perform the cell update procedure according to subclause 8.3.1, using the cause "uplink data transmission", in order to transit to CELL_FACH state; and then

2> transmit a MEASUREMENT REPORT message on the uplink DCCH when the reporting criteria stored in variable MEASUREMENT_IDENTITY are fulfilled for any ongoing UE positioning measurement which is being performed in the UE.

For FDD, the UE in CELL_PCH state shall:

1> if variable H_RNTI is set:

2> if the measurement reporting is initiated according to subclause 8.5.40:

3> set the IE "measurement identity" to "16";

3> not set the IE "measured results";

3> include the IE "measured results on RACH";

3> if an event triggered traffic volume measurement has been configured:

4> if the TCTV is larger than the threshold in the IE "Reporting threshold" for a traffic volume measurement stored in the MEASUREMENT_IDENTITY variable and that traffic volume measurement has "measurement identity" equal to 4, "Traffic volume event identity" equal to "4a", "Measurement validity" equal to "all states" or "all states except CELL_DCH":

5> set the IE "Traffic volume event identity" to "4a";

3> and then transmit the MEASUREMENT REPORT message on the uplink DCCH using AM RLC; when the MEASUREMENT REPORT message has been submitted to lower layers for transmission the procedure ends.

…

When the IE "HS-DSCH paging system information" is included in System Information Block type 5 or System Information Block type 5bis and the UE is in CELL_PCH or URA_PCH state, the UE shall:

1> set the variable HS_DSCH_RECEPTION_GENERAL to TRUE;

1> if variable H_RNTI and variable C_RNTI are set:

2> if the UE is in CELL_PCH state:

3> use the value of the variable H_RNTI as UE identity in the HS-SCCH reception procedure in the physical layer for DCCH or DTCH reception; and

3> for BCCH reception perform HS-DSCH reception procedures by listening to the first indexed HS-SCCH code listed in the IE "HS-SCCH channelisation code" with "BCCH specific H-RNTI" as received in IE "HS-DSCH common system information" from System Information Block type 5 or System Information Block type 5bis.

3> if the UE detects the value of the variable H_RNTI in the HS-SCCH reception procedure:

4> initiate the measurement report procedure as specified in subclause 8.4.2:

5> if the UE has an uplink RLC PDU on RB1 or upwards to transmit:

6> move to CELL_FACH;

6> stop timer T319 if it is running.

3> if the UE has uplink RLC data PDU or uplink RLC control PDU on RB1 or upwards to transmit:

4> initiate the measurement report procedure as specified in subclause 8.4.2:

4> move to CELL_FACH state;

4> stop timer T319 if it is running.

Reference

3GPP TS 25.331 clause 8.5.40 and 8.4.2

### 8.4.1.50.3 Test purpose

1. To confirm that the UE performs measurements reporting on SRB2 when moving from Cell PCH state to Cell FACH state when HS-DSCH is configured with dedicated H-RNTI

2. To confirm that the UE performs measurements reporting with a cell update procedure when moving from Cell PCH state to Cell FACH state when HS-DSCH is configured with no dedicated H-RNTI.

### 8.4.1.50.4 Method of test

Initial Condition

System Simulator: 1 cell

UE: <FFS>

The UE is registered in both CS and PS domains.

Test Procedure

The UE is in the CELL_FACH state with HS-DSCH reception enabled. The SS transmits a PHYSICAL CHANNEL RECONFIGURATION message with IE "RRC State Indicator" set to "CELL_PCH " and assigns a dedicated H_RNTI. The UE shall reply with PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and move to CELL_PCH state. The SS transmits a PAGING TYPE 2 message which includes a matched identifier and the optional IE "CN originated page to connected mode UE". The UE then transmits a MEASUREMENT REPORT message and moves to CELL_FACH state. The UE shall stay in CELL_FACH state and transmit an INITIAL DIRECT TRANSFER message using AM RLC on DCCH.

The SS then transmits a PHYSICAL CHANNEL RECONFIGURATION message with IE "RRC State Indicator" set to "CELL_PCH " and with no dedicated H_RNTI. The UE shall reply with PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and move to CELL_PCH state. The SS transmits a PAGING TYPE 1 message which includes a matched identifier and the optional IE "CN originated page to connected mode UE" The UE then moves to CELL_FACH state and transmits a CELL UPDATE message to the SS on the uplink CCCH, with the IE "Cell update cause" set to value "paging response" and IE ‘Measurement Results on RACH’ containing the measured CPICH RSCP for cell 1 . After receiving such a message, SS transmits a CELL UPDATE CONFIRM message on downlink DCCH mapped to HS-DSCH. Then the UE shall transmit an UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH to acknowledge the receipt of the new UE identities. The UE shall stay in CELL_FACH state and transmit an INITIAL DIRECT TRANSFER message using AM RLC on DCCH.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is brought to CELL_FACH state. |
| 2 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "RRC State Indicator" set to "CELL_PCH" and dedicated H-RNTI |
| 3 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE moves to CELL_PCH state. |
| 4 | ← | | PAGING TYPE 2 | Includes Matched identifier and optional IE “CN originated page to connected mode UE" |
| 5 | → | | MEASUREMENT REPORT | This message shall contain IE "Measured results on RACH" reporting the measured CPICH RSCP for cell 1 and the "Measurement identity" to "16 |
| 6 | → | | INITIAL DIRECT TRANSFER | Response to the paging message sent in step 6 |
| 7 | ← | | PHYSICAL CHANNEL RECONFIGURATION | IE "RRC State Indicator" set to "CELL_PCH" and no dedicated H-RNTI |
| 8 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | UE moves to CELL_PCH state. |
| 9 | ← | | PAGING TYPE 1 | Includes Matched identifier and optional IE “CN originated page to connected mode UE" |
| 10 | → | | CELL UPDATE | The UE moves to CELL FACH state and transmit this message which is set to "paging response" in IE "Cell update cause". This message shall contain IE "Measured results on RACH" reporting the measured CPICH RSCP for cell 1 |
| 11 | ← | | CELL UPDATE CONFIRM | See message content . |
| 12 | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 13 | → | | INITIAL DIRECT TRANSFER | Response to the paging message sent in step 9 |
| 14 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 2)

Use the same message sub-type found in TS 34.108 clause 9, which is entitled "Packet to CELL_FACH from CELL_FACH in PS", with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | Set to an arbitrary string different from '1010 1010 1010 1010' |
| RRC State Indicator<br>UTRAN DRX cycle length coefficient | CELL_PCH<br>3 |

PAGING TYPE 2 (Step 4)

Use the same message type found in clause 9 of TS 34.108, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Paging Cause | Terminating Interactive Call |
| CN Domain Identity | PS Domain |
| Paging Record Type Identifier | Set to "IMSI (GSM-MAP)" for UEs supporting GSM-MAP core network type or "IMSI (DS-41)" for UEs supporting ANSI-41 core network type. |

PAGING TYPE 1 (Step 9)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to the previously assigned SRNC identity |
| - S-RNTI | Set to previously assigned S-RNTI |
| - CN originated page to connected mode UE | |
| -Paging cause | Terminating Interactive Call |
| -CN domain identity | PS Domain |
| -Paging record type identifier | Set to "IMSI (GSM-MAP)" for UEs supporting GSM-MAP core network type or "IMSI (DS-41)" for UEs supporting ANSI-41 core network type. |
| BCCH modification info | Not Present |

MEASUREMENT REPORT (Step 5)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 16 |
| Measured Results | NOT PRESENT |
| Measured results on RACH | Checked that this IE is present |
| Additional measured results | Checked that this IE is absent |
| Event results | Checked that this IE is absent |
| GSM OTD reference cell | Checked that this IE is absent |
| Inter-RAT cell info indication | Checked that this IE is absent |

PHYSICAL CHANNEL RECONFIGURATION (Step 7)

Use the same message sub-type found in TS 34.108 clause 9, which is entitled "Packet to CELL_FACH from CELL_FACH in PS", with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | NOT PRESENT |
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

CELL UPDATE (Step 10)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'paging response ' |
| Measured results on RACH | Checked that this IE is present |

CELL UPDATE CONFIRM (Step 11)

Use the same message sub-type found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New H-RNTI | Set to an arbitrary string different from '1010 1010 1010 1010' |

INITIAL DIRECT TRANSFER (Step 6 and Step13) – for UEs supporting GSM-MAP core networks

Check to see if the same message type found in TS 34.108 clause 9 is received, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| CN domain identity | PS domain |
| Intra Domain NAS Node Selector | |
| - CHOICE version | R99 |
| -- CHOICE CN type | GSM |
| --- CHOICE Routing basis | Local(P)TMSI |
| ---- Routing parameter | This bit string is set to bits b14 through b23 of the TMSI.<br>The TMSI consists of 4 octets (32bits). This can be represented by a string of bits numbered from b0 to b31, with bit b0 being the least significant<br>The "Routing parameter" bit string consists of bits b14 through b23 of the TMSI.<br>The first/ leftmost/ most significant bit of the bit string contains bit b23 of the TMSI |
| --- Entered parameter | Not checked |
| NAS message | Not checked |

INITIAL DIRECT TRANSFER (Step 6 and Step13) – for UEs supporting ANSI-41 core networks

| Information Element | Value/remark |
|---|---|
| CN domain identity | PS Domain |
| Intra Domain NAS Node Selector | |
| - CHOICE version | ANSI-41 : Bitstring(14), all bits set to 0 |
| NAS message | Not checked |
| START | Not checked |
| Measured results on RACH | Not checked |

8.4.1.50.5 Test requirement

After step 2, UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and move to CELL_PCH state.

After step 5, the UE shall move to CELL_FACH state and transmits a MEASUREMENT REPORT message on SRB2 containing the IE "Measured results on RACH" reporting the measured CPICH RSCP for cell 1 and the IE "Measurement identity" set to "16 ".

After step 6, UE shall transmit a INITIAL DIRECT TRANSFER message to SS using AM RLC on DCCH.

After step 7, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message and move to CELL_PCH state.

After step 10, the UE shall move to CELL_FACH state and initiate a cell update procedure and transmits a CELL UPDATE message on RACH containing the IE "Measured results on RACH" reporting the measured CPICH RSCP for cell 1.

After step 12, the UE shall transmit a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH using AM RLC.

After step 13, UE shall transmit a INITIAL DIRECT TRANSFER message to SS using AM RLC on DCCH.

# 8.5 MBMS Specific Procedures

## 8.5.1 MBMS Session Start

### 8.5.1.1 MBMS PTP Session Start at MCCH Acquisition in Idle mode / MBMS Selected Service

#### 8.5.1.1.1 Definition

This test is applicable for all UEs that support MBMS broadcast services.

#### 8.5.1.1.2 Conformance requirement

The UE applies the MCCH acquisition procedure to determine the MBMS services available in the cell and to initiate reception of the services that the UE has joined. The procedure applies to all UEs supporting MBMS, irrespective of their state (idle, URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH).

…

If the variable MBMS_ACTIVATED_SERVICES is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

…

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

The UE shall immediately acquire the MBMS ACCESS INFORMATION and the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

When requested to acquire MBMS control information other than the MBMS ACCESS INFORMATION message , the UE shall:

1> if requested to start reading MCCH at the next modification period:

2> start reading MCCH at the beginning of the next modification period.

1> otherwise

2> start reading MCCH at the beginning of the next repetition period.

1> if requested to stop reading MCCH at the end of the modification period:

2> continue reading MCCH until the required MBMS control information is received or until the UE detects a TTI in which no MCCH information is transmitted, whichever is first;

2> continue reading MCCH in this manner at every subsequent repetition period, until the information is received correctly or until the end of the modification period.

1> otherwise:

2> continue reading MCCH until the required MBMS control information is received or until the UE detects a TTI in which no MCCH information is transmitted, whichever is first;

2> continue reading MCCH in this manner at every subsequent repetition period, until the information is received correctly.

NOTE 1: The UE may combine information received at different repetition periods within a modification period.

When requested to acquire the MBMS ACCESS INFORMATION message, the UE shall:

1> if requested to start reading MCCH at the next modification period:

2> start reading MCCH at the beginning of the next modification period.

1> otherwise:

2> start reading MCCH at the beginning of the next access info period.

1> continue reading MCCH in this manner at every subsequent access info period, until the message is received correctly or until the end of the modification period.

If the UE is CELL_DCH and has a compressed mode pattern that overlaps with the period in which it needs to read MCCH, the UE may temporarily refrain from receiving MCCH unless it is capable of simultaneous operation. If the UE is CELL_FACH and has a measurement occasion that overlaps with the period in which it needs to read MCCH, the UE may temporarily refrain from receiving MCCH unless it is capable of simultaneous operation. A UE in CELL_FACH may omit performing measurements during a measurement occasion in order to receive MCCH provided that this does not prevent it from fulfilling the measurement performance requirements as specified in [19]. In Idle mode as well as in CELL_PCH and URA_PCH states the UE may temporarily refrain from receiving MCCH if needed to fulfil the measurements performance requirements as specified in [19].

NOTE 2: The UTRAN should endeavour to ensure that for each UE in CELL_FACH the assigned measurement occasions do not overlap constantly with the periodic MCCH transmissions.

If the UE selects to another cell, the UE shall re-establish the RLC entity used for MCCH reception.

…

The UE may:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state; and

1> if not receiving an MBMS service provided via a p-t-m radio bearer:

2> monitor the MBMS notification Indicator Channel (MICH).

2> if a notification on the MICH for one or more of the MBMS services included in the variable MBMS_ACTIVATED_SERVICES is detected:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message with delaying the reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if receiving an MBMS service that is provided via a p-t-m radio bearer; or

2> if not receiving an MBMS service that is provided via a p-t-m radio bearer and not monitoring MICH:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

…

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

…

1> if the IE "MBMS required UE action" is set to 'Request PTP RB':

2> if the UE is in idle mode:

3> indicate to upper layers that establishment of a PS signalling connection is required to receive the concerned MBMS service [5], unless the UE has already requested p-t-p RB establishment in the current modification period, and use the establishment cause set to 'MBMS ptp RB request' in the RRC connection establishment procedure.

…

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

…

1> if the UE performs connection establishment for MBMS ptp radio bearer request as specified in subclause 8.6.9.6; and

1> if one or more of the MBMS services for which the UE initiates the ptp radio bearer request concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the ptp radio bearer request:

3> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Short" before those selected with a lower priority;

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

…

In the UE, the initial direct transfer procedure shall be initiated, when the upper layers request establishment of a signalling connection. This request also includes a request for the transfer of a NAS message.

Upon initiation of the initial direct transfer procedure the UE shall:

1> set the variable ESTABLISHMENT_CAUSE to the cause for establishment indicated by upper layers.

Upon initiation of the initial direct transfer procedure when the UE is in idle mode, the UE shall:

1> perform an RRC connection establishment procedure, according to subclause 8.1.3;

NOTE: If an RRC connection establishment is ongoing, this procedure continues unchanged, i.e. it is not interrupted.

1> if the RRC connection establishment procedure was not successful:

2> if the establishment cause for the failed RRC connection establishment was set to "MBMS reception" and a different cause value is stored in the variable "ESTABLISHMENT_CAUSE":

3> UE-AS (RRC) initiates a new RRC connection establishment procedure, using the establishment cause as contained in the variable ESTABLISHMENT_CAUSE.

2> otherwise:

3> indicate failure to establish the signalling connection to upper layers and end the procedure.

1> when the RRC connection establishment procedure is completed successfully:

2> continue with the initial direct transfer procedure as below.

Upon initiation of the initial direct transfer procedure when the UE is in CELL_PCH or URA_PCH state, the UE shall:

1> perform a cell update procedure, according to subclause 8.3.1, using the cause "uplink data transmission";

1> when the cell update procedure completed successfully:

2> continue with the initial direct transfer procedure as below.

The UE shall, in the INITIAL DIRECT TRANSFER message:

1> set the IE "NAS message" as received from upper layers; and

1> set the IE "CN domain identity" as indicated by the upper layers; and

1> set the IE "Intra Domain NAS Node Selector" as follows:

2> derive the IE "Intra Domain NAS Node Selector" from TMSI/PMTSI, IMSI, or IMEI; and

2> provide the coding of the IE "Intra Domain NAS Node Selector" according to the following priorities:

1. derive the routing parameter for IDNNS from TMSI (CS domain) or PTMSI (PS domain) whenever a valid TMSI/PTMSI is available;

2. base the routing parameter for IDNNS on IMSI when no valid TMSI/PTMSI is available;

3. base the routing parameter for IDNNS on IMEI only if no (U)SIM is inserted in the UE.

1> if the UE, on the existing RRC connection, has received a dedicated RRC message containing the IE "Primary PLMN Identity" in the IE "CN Information Info":

2> set the IE "PLMN identity" in the INITIAL DIRECT TRANSFER message to the latest PLMN information received via dedicated RRC signalling. If NAS has indicated the PLMN towards which a signalling connection is requested, and this PLMN is not in agreement with the latest PLMN information received via dedicated RRC signalling, then the initial direct transfer procedure shall be aborted, and NAS shall be informed.

1> if the UE, on the existing RRC connection, has not received a dedicated RRC message containing the IE "CN Information Info" , and if the IE "Multiple PLMN List" was broadcast in the cell where the current RRC connection was established:

2> set the IE "PLMN identity" in the INITIAL DIRECT TRANSFER message to the PLMN chosen by higher layers [5, 25] amongst the PLMNs in the IE "Multiple PLMN List" broadcast in the cell where the RRC connection was established.

1> if the IE "Activated service list" within variable MBMS_ACTIVATED_SERVICES includes one or more MBMS services with the IE "Service type" set to "Multicast" and;

1> if the IE "CN domain identity" as indicated by the upper layers is set to "CS domain" and;

1> if the variable ESTABLISHED_SIGNALLING_CONNECTIONS does not include the CN domain identity 'PS domain':

2> include the IE "MBMS joined information";

2> include the IE "P-TMSI" within the IE "MBMS joined information" if a valid PTMSI is available.

1> if the variable ESTABLISHMENT_CAUSE_ is initialised:

2> set the IE "Establishment cause" to the value of the variable ESTABLISHMENT_CAUSE;

2> clear the variable ESTABLISHMENT_CAUSE.

1> calculate the START according to subclause 8.5.9 for the CN domain as set in the IE "CN Domain Identity"; and

1> include the calculated START value for that CN domain in the IE "START".

The UE shall:

1> transmit the INITIAL DIRECT TRANSFER message on the uplink DCCH using AM RLC on signalling radio bearer RB3;

1> when the INITIAL DIRECT TRANSFER message has been submitted to lower layers for transmission:

2> confirm the establishment of a signalling connection to upper layers; and

2> add the signalling connection with the identity indicated by the IE "CN domain identity" in the variable ESTABLISHED_SIGNALLING_CONNECTIONS.

1> when the successful delivery of the INITIAL DIRECT TRANSFER message has been confirmed by RLC:

2> the procedure ends.

When not stated otherwise elsewhere, the UE may also initiate the initial direct transfer procedure when another procedure is ongoing, and in that case the state of the latter procedure shall not be affected.

A new signalling connection request may be received from upper layers during transition to idle mode. In those cases, from the time of the indication of release to upper layers until the UE has entered idle mode, any such upper layer request to establish a new signalling connection shall be queued. This request shall be processed after the UE has entered idle mode.

…

The UE shall:

1> if the IE "Secondary CCPCH system information MBMS" is included:

2> apply the Secondary CCPCH and FACH indicated by the IE "FACH carrying MCCH" for receiving MCCH.

1> otherwise, if the IE "Secondary CCPCH system information" includes the IE "MCCH configuration information":

2> apply the Secondary CCPCH and FACH indicated by the IE “MCCH configuration information” for receiving MCCH.

…

The UE shall select the Secondary CCPCH for acquiring MCCH information according to the following rules:

1> if System Information Block type 5 or System Information Block type 5bis is defined and includes an S-CCPCH within the IE "Secondary CCPCH system information" including a FACH for which the IE "MCCH configuration information" is included:

2> select that S-CCPCH and FACH for receiving MCCH.

1> otherwise if System Information Block type 5 or System Information Block type 5bis is defined and includes an SCCPCH within the IE "Secondary CCPCH system information MBMS" for which the IE "FACH carrying MCCH" is included:

2> select that S-CCPCH and FACH for receiving MCCH.

Reference

3GPP TS 25.331 clauses 8.7.2, 8.7.1.3, 8.7.3.3.1, 8.6.9.6, 8.1.3.3, 8.1.8.2, 8.1.1.6.5, 8.5.19a.

#### 8.5.1.1.3 Test purpose

To verify that the UE receives the MBMS info in idle mode state and to verify that the UE starts the reception of MBMS services at MCCH acquisition.

#### 8.5.1.1.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 22.

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

Test procedure

**Table 8.5.1.1**

| Parameter | Unit | Cell 21 | | Cell 22 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBM | -60 | OFF | -70 | -60 |

Table 8.5.1.1 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

1) The UE is camping on cell 21, the SS configures its downlink transmission power settings according to columns "T1" in table 8.5.1.1, the UE re-selects to cell 22 supporting MBMS (MBMS_ACTIVATED_SERVICES is not empty). The SS transmits SYSTEM INFORMATION BLOCK TYPE 5 or 5bis messages including the MCCH configuration specified within the IE "Secondary CCPCH system information" (there is only one S-CCPCH in this cell, SS uses S-CCPCH combination from TS34.108 clause 6.10.2.4.3.9 Interactive/Background 32 kbps RAB + SRB for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH + SRB for MCCH) mapped on to an S-CCPCH also used for non-MBMS purposes. The UE shall perform the MCCH acquisition procedure:

2) The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION, the MBMS UNMODIFIED SERVICES INFORMATION (including both IEs “MBMS required UE action” set to “Request PTP RB”) and the MBMS GENERAL INFORMATION.

3) The UE shall request a p-t-p RB establishment.

4) The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of a radio access bearer. The UE shall establish this radio bearer. Then the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC.

5) SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE re-selects to cell 22 supporting MBMS (MBMS service already activated). |
| 1 | ← | | SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis | |
| 2 | ← | | MBMS MODIFIED SERVICES INFORMATION | |
| 3 | | | | The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information in the same modification period. |
| 4 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB. |
| 5 | ← | | MBMS GENERAL INFORMATION | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 6 | → | | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS ptp RB request” and with the “MBMS Selected Services Short” IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 7 | ← | | RRC CONNECTION SETUP | RRC state indicator set to Cell_FACH |
| 8 | → | | RRC CONNECTION SETUP COMPLETE | |
| 8a | → | | MBMS MODIFICATION REQUEST | The UE completing the RRC Connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after step 8 and before step 14. |
| 9 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception”. |
| 10 | ← | | SECURITY MODE COMMAND | |
| 11 | → | | SECURITY MODE COMPLETE | |
| 12 | ← | | RADIO BEARER SETUP | |
| 13 | → | | RADIO BEARER SETUP COMPLETE | |
| 14 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| Modified services list | Only 1 entry |
| - MBMS Transmission identity | MBMS Transmission identity (different from the MBMS activated service) |
| - MBMS required UE action | request PTP RB |

MBMS UNMODIFIED SERVICES INFORMATION (Step 4)

| Information Element | Value/remark |
|---|---|
| Unmodified services list | Only 1 entry |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| MBMS required UE action | Request PTP RB |

RRC CONNECTION REQUEST (Step 6)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI |
| Establishment Cause | MBMS ptp RB request |
| Domain indicator | PS domain |
| MBMS Selected Services | |
| - MBMS Selected Services | Only 1 entry |
| - MBMS Selected Service ID | MBMS short transmission identity referring to the service the UE has selected |
| - Modification period identity | Indicates the modification period the MBMS short transmission identities refer to |

RRC CONNECTION SETUP (Step 7)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Set to same value as received in Step 6 |
| RRC State Indicator | Cell_FACH |

MBMS MODIFICATION REQUEST (Step 8a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info | |
| - CHOICE Status | Some |
| - MBMS Selected Services Full | |
| - MBMS Selected Service ID | Only 1 entry |
| - MBMS Service ID | MBMS service ID of the activated MBMS service |
| - CHOICE PLMN identity | Check to see that one of the below choice element is present |
| - SameAs-MIB | (no data) |
| - explicitPLMN_Id | Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

RADIO BEARER SETUP (Step 12)

Use the same message as the one specified for "MBMS PtP" in TS 34.108 clause 9, with the condition B2.

SYSTEM INFORMATION BLOCK TYPE 5 and 5bis (Step1)

As specified in TS 34.108 clause 6.1 and by using condition M2 for SYSTEM INFORMATION BLOCK TYPE 5 message.

#### 8.5.1.1.5 Test requirements

After step 2, after the UE has received a MBMS modified services Information message, the UE continues acquiring the MBMS informations.

At step 4, after the UE has received an MBMS unmodified services Information message including the IE “MBMS required UE action” set to Request PTP RB, the UE shall indicate to upper layers that the establishment of an RRC connection is required to receive the concerned MBMS service with the establishment cause set to “MBMS ptp RB request”.

At step 13, the UE shall send a RADIO BEARER SETUP COMPLETE message.

### 8.5.1.1m MBMS PTP Session Start at MCCH Acquisition in Idle mode / MBMS Multicast Service

#### 8.5.1.1m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.1.1m.2 Conformance requirement

Same conformance requirement as in clause 8.5.1.1.2 except there is no reference to 3GPP TS 25.331 clause 8.1.3.3.

#### Reference

3GPP TS 25.331 clauses 8.7.2, 8.7.1.3, 8.7.3.3.1, 8.6.9.6, 8.1.8.2, 8.1.1.6.5, 8.5.19a.

#### 8.5.1.1m.3 Test purpose

Same test purpose as in clause 8.5.1.1.3.

8.5.1.1m.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 22.

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.1.1.4.

Expected sequence

Same expected sequence as in clause 8.5.1.1.4 except for RRC CONNECTION REQUEST message content (step 6) and MODIFICATION REQUEST procedure not required.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE re-selects to cell 22 supporting MBMS (MBMS service already activated). |
| 1 | ← | | SYSTEM INFORMATION BLOCK TYPE 5 / SYSTEM INFORMATION BLOCK TYPE 5bis | |
| 2 | ← | | MBMS MODIFIED SERVICES INFORMATION | |
| 3 | | | | The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information in the same modification period. |
| 4 | ← | | MBMS GENERAL INFORMATION | |
| 5 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB. |
| 6 | → | | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS ptp RB request”. |
| 7 | ← | | RRC CONNECTION SETUP | RRC state indicator set to Cell_FACH |
| 8 | → | | RRC CONNECTION SETUP COMPLETE | |
| 9 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Multicast service Reception”. |
| 10 | ← | | SECURITY MODE COMMAND | |
| 11 | → | | SECURITY MODE COMPLETE | |
| 12 | ← | | RADIO BEARER SETUP | |
| 13 | → | | RADIO BEARER SETUP COMPLETE | |
| 14 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

Same specific messages contents as in clause 8.5.1.1.4 except for RRC CONNECTION REQUEST message content (step 6).

RRC CONNECTION REQUEST (Step 6)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI |
| Establishment Cause | MBMS ptp RB request |
| Domain indicator | PS domain |

#### 8.5.1.1m.5 Test requirements

Same test requirement as in clause 8.5.1.1.5.

### 8.5.1.2 MBMS PTP Session Start at MCCH Notification in CELL_PCH / MBMS Selected Service

#### 8.5.1.2.1 Definition

This test is applicable for all UEs that support MBMS broadcast services.

#### 8.5.1.2.2 Conformance requirement

The MBMS notification procedure is used by the UE to respond to a notification provided by UTRAN, indicating a change applicable for one or more MBMS services the UE has joined. The procedure applies to all UEs supporting MBMS, irrespective of their state (idle and connected mode: URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH). The actual notification mechanism to be used depends on the UE state.

…

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if receiving an MBMS service that is provided via a p-t-m radio bearer; or

2> if not receiving an MBMS service that is provided via a p-t-m radio bearer and not monitoring MICH:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

….

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

…

1> if the IE "MBMS required UE action" is set to 'Request PTP RB':

…

2> if the UE is in URA_PCH, Cell_PCH, or CELL_FACH states:

3> perform a cell update procedure with cause "MBMS ptp RB request", as specified in subclause 8.3.1.2, unless the UE has already requested p-t-p RB establishment in the current modification period.

…

A UE shall initiate the cell update procedure in the following cases:

....

1> MBMS ptp RB request:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in URA_PCH, Cell_PCH or Cell_FACH state; and

2> if the UE should perform cell update for MBMS ptp radio bearer request as specified in 8.6.9.6:

3> perform cell update using the cause "MBMS ptp RB request".

…

The UE shall set the IEs in the CELL UPDATE message as follows:

…

1> if the UE performs cell update for MBMS ptp radio bearer request as specified in subclause 8.6.9.6; and

1> if one or more of the MBMS services for which the UE initiates the ptp radio bearer request concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates ptp radio bearer request:

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> otherwise, if the UE performs cell update for MBMS counting as specified in subclause 8.7.4; and

1> if one or more of the MBMS services for which the UE initiates the counting response concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the counting response:

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> if the UE included one or more "MBMS Selected Service ID" IEs:

2> include the IE "MBMS Modification Period identity" and set it to a value in accordance with subclause 8.5.29.

Reference

3GPP TS 25.331 clauses 8.7.3.1, 8.7.3.3.1, 8.6.9.6, 8.3.1.2, 8.3.1.3.

### 8.5.1.2.3 Test purpose

To verify that the UE in Cell_PCH state, correctly handle the Notification procedure after receiving the MODIFIED SERVICES INFORMATION message via MCCH.

### 8.5.1.2.4 Method of test

Initial condition

System Simulator:

1 MBMS cell

User Equipment:

The UE is in CELL_PCH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

Test procedure

1) The UE in Cell_PCH, shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION including the IE “MBMS required UE action” set to “Request PTP RB”.

2) The UE shall perform a cell update procedure with cause "MBMS ptp RB request". The UE transmits a CELL UPDATE message including the IE "MBMS Selected Service ID" of the concerned MBMS Selected service within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity".

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in Cell_PCH state. |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB". |
| 2 | → | | CELL UPDATE | The UE enters the CELL_FACH state. UE performs cell update procedure. The CELL UPDATE message shall contain the value "Cell Update Cause" set to "MBMS ptp RB request" and the “MBMS Selected Services Short” IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 3 | ← | | CELL UPDATE CONFIRM | |
| 3a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 4 | ← | | RADIO BEARER SETUP | |
| 5 | → | | RADIO BEARER SETUP COMPLETE | |
| 5a | → | | MBMS MODIFICATION REQUEST | This message may be received at any point after step 4 and before step 6. |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified services list<br>- MBMS Transmission identity<br><br>- MBMS required UE action | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>request PTP RB |

CELL UPDATE (Step 2)

| Information Element | Value/remark |
|---|---|
| Cell update cause<br>MBMS Selected Services<br>- MBMS Selected Services<br>- MBMS Selected Service ID<br><br>- Modification period identity | MBMS ptp RB request<br><br>Only 1 entry<br>MBMS short transmission identity referring to the service the UE has activated<br>Indicates the modification period the MBMS short transmission identities refer to |

CELL UPDATE CONFIRM (Step 3)

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |
| | |

RADIO BEARER SETUP (Step 4)

Use the same message as the one specified for "MBMS PtP" in TS 34.108 clause 9, with the condition B4.

MBMS MODIFICATION REQUEST (step 5a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info<br>- CHOICE Status<br>- MBMS Selected Services Full<br>- MBMS Selected Service ID<br>- MBMS Service ID<br>- CHOICE PLMN identity<br><br>- SameAs-MIB<br>- explicitPLMN_Id | <br>Some<br><br><br>MBMS service ID of the activated MBMS service<br>Check to see that one of the below choice element is present<br>(no data)<br>Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

#### 8.5.1.2.5 Test requirements

At step 2, the UE shall initiate a cell update procedure for MBMS ptp radio bearer request.

### 8.5.1.2m MBMS PTP Session Start at MCCH Notification in CELL_PCH / MBMS Multicast Service

#### 8.5.1.2m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.1.2m.2 Conformance requirement

Same conformance requirement as in clause 8.5.1.2.2 except there is no reference to 3GPP TS 25.331 clause 8.3.1.3.

#### 8.5.1.2m.3 Test purpose

Same test purpose as in clause 8.5.1.2.3.

#### 8.5.1.2m.4 Method of test

Initial condition

System Simulator:

1 MBMS cell

User Equipment:

The UE is in CELL_PCH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

1) The UE in Cell_PCH, shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION including the IE “MBMS required UE action” set to “Request PTP RB”.

2) The UE shall perform a cell update procedure with cause "MBMS ptp RB request".

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in Cell_PCH state. |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB". |
| 2 | → | | CELL UPDATE | The UE enters the CELL_FACH state. UE performs cell update procedure. The CELL UPDATE message shall contain the value "Cell Update Cause" set to "MBMS ptp RB request" |
| 3 | ← | | CELL UPDATE CONFIRM | |
| 4 | ← | | RADIO BEARER SETUP | |
| 5 | → | | RADIO BEARER SETUP COMPLETE | |
| 6 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

Same specific messages contents as in clause 8.5.1.2.4 except for CELL UPDATE message content (step 2).

CELL UPDATE (Step 2)

| Information Element | Value/remark |
|---|---|
| Cell update cause | MBMS ptp RB request |

#### 8.5.1.2m.5 Test requirements

Same test requirement as in clause 8.5.1.2.5.

### 8.5.1.3 MBMS PTM Session Start at MCCH Acquisition in CELL_FACH state / MBMS Broadcast Service

#### 8.5.1.3.1 Definition and applicability

This test case is applicable for all UEs that support MBMS broadcast services.

#### 8.5.1.3.2 Conformance requirement

If the variable MBMS_ACTIVATED_SERVICES is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re-selecting a cell supporting MBMS, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

…

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3 of TS 25.331.

The UE shall immediately acquire the MBMS ACCESS INFORMATION and the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION

messages. Likewise, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

Reference

3GPP TS 25.331 clauses 8.7.2.2, 8.7.2.3, 8.6.9.6.

#### 8.5.1.3.3 Test purpose

1. To verify that the UE receives the MBMS information on MCCH in CELL_FACH state.
2. To verify that the UE correctly handles the notification procedure after receiving the MBMS MODIFIED SERVICES INFORMATION message via MCCH if no ongoing MBMS p-t-m session (MICH supported/not supported by the UE).
3. To verify that the UE starts the reception of MBMS services according to notification via MICH/MCCH when the UE is in CELL_FACH state.

#### 8.5.1.3.4 Method of test

Initial Condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 22.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No

Test Procedure

**Table 8.5.1.3**

| Parameter | Unit | Cell 21 | | Cell 22 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | Mid Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | OFF | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBM | -60 | OFF | -70 | -60 |

Table 8.5.1.3 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in the CELL_FACH state in Cell 21 and is interested in the broadcast service to be provided by the SS.

The SS applies the power settings of "T1" in table 8.5.1.3. The UE shall reselect to Cell 22 and send a CELL UPDATE message. The UE shall perform the MCCH acquisition procedure. The UE shall continue acquiring the MBMS information messages until it has received a consistent set of MCCH information. The UE received an MBMS UNMODIFIED SERVICES INFORMATION message including IE "MBMS required UE action" set to "Acquire PTM RB info".

The SS waits for the UE to start reception of the MBMS data on MTCH.

The MBMS radio bearer on MTCH is put into loopback mode 3.

The SS sends 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer, then retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The number of received RLC SDUs reported by the UE shall be at least one.

The loopback mode 3 in the UE is deactivated.

SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in Cell_FACH in Cell 21 |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| | | | | SS reconfigures itself according to the settings stated in column "T1" of table 8.5.3.5-1. |
| 3 | → | | CELL UPDATE | This message is transmitted in Cell 22 |
| 4 | ← | | CELL UPDATE CONFIRM | |
| 5 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | MBMS required UE action set to 'Acquire PTM info' |
| 6 | ← | | CLOSE UE TEST LOOP | |
| 7 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 8 | | SS | | The SS broadcasts 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer. |
| 9 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 10 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data. |
| 11 | ← | | OPEN UE TEST LOOP | |
| 12 | → | | OPEN UE TEST LOOP COMPLETE | |
| 13 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

MBMS UNMODIFIED SERVICES INFORMATION (Step 5)

| Information Element | Value/remark |
|---|---|
| Unmodified service list | |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Step 10)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than zero. |

#### 8.5.1.3.5 Test requirement

After step 9, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero.

### 8.5.1.3m MBMS PTM Session Start at MCCH Acquisition in CELL_FACH state / MBMS Multicast Service

#### 8.5.1.3m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.1.3m.2 Conformance requirement

Same conformance requirement as in clause 8.5.1.3.2.

#### 8.5.1.3m.3 Test purpose

Same test purpose as in clause 8.5.1.3.3.

#### 8.5.1.3m.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 22.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.1.3.4.

Specific message contents

Same specific messages contents as in clause 8.5.1.3.4.

#### 8.5.1.3m.5 Test requirements

Same test requirement as in clause 8.5.1.3.5.

## 8.5.1.4 MBMS PTM Session Start at MCCH Notification in CELL_DCH state / MBMS Broadcast Service

### 8.5.1.4.1 Definition

This test case is applicable for all UEs that support MBMS broadcast services and support MBMS p-t-m reception in CELL_DCH state.

### 8.5.1.4.2 Conformance requirement

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3 of TS 25.331.

The UE shall immediately acquire the MBMS ACCESS INFORMATION and the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

Reference

3GPP TS 25.331 clauses 8.7.2.3, 8.7.3.3.1, 8.6.9.6.

### 8.5.1.4.3 Test purpose

1 To verify that the UE handles reading of MCCH during compressed mode measurements in CELL_DCH state if the UE requires compressed mode.

2. To verify that the UE correctly handles the notification procedure after receiving the MBMS MODIFIED SERVICES INFORMATION message via MCCH in CELL_DCH state.

3. To verify that the UE starts the p-t-m reception of MBMS services according to notification via MCCH when the UE is in CELL_DCH state.

### 8.5.1.4.4 Method of test

Initial Condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 24

User Equipment:

The UE is in CELL_DCH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No
- UE supports MBMS p-t-m reception in CELL_DCH state Yes/No
- Compressed mode required Yes/No

Test Procedure

**Table 8.5.1.4**

| Parameter | Unit | Cell 21 | | Cell 24 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -70 | -70 | -60 |

The UE is in the CELL_DCH state in cell 21 and has selected the broadcast service to be provided by the SS.

The SS configures then compressed mode (if required), to prepare the UE for inter-frequency measurements, by sending a PHYSICAL CHANNEL RECONFIGURATION message on DCCH using AM-RLC. The UE shall answer with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

The SS then sets up inter-frequency measurements (event 2b), by sending a MEASUREMENT CONTROL message to the UE. Compressed mode is started at the same time in that message (if required).

The SS notifies on MCCH about the start of an MBMS session. The SS waits for the UE to start reception of the MBMS data on MTCH and then the MBMS radio bearer on MTCH is put into loopback mode 3.

The SS sends 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer. The SS then applies the power settings according to column “T1” in table 8.5.1.4. The UE transmits a MEASUREMENT REPORT message to the SS.

The SS retrives the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The number of received RLC SDUs reported by the UE shall be at least one.

The loopback mode 3 in the UE is deactivated.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | If compresed mode is not required (refer ICS/IXIT), goto step 5. |
| 3 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS downloads the compressed mode parameters in the UE. |
| 4 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE acknowleges the downloading of the compressed mode parameters. |
| 5 | ← | | MEASUREMENT CONTROL | The SS configures inter-frequency measurements in the UE, and If compresed mode is required (refer ICS/IXIT) activates compressed mode. |
| 6 | ← | | MBMS MODIFIED SERVICES INFORMATION | MBMS session start. |
| 7 | SS | | | The SS waits for the UE to start MTCH reception according to the activation time. |
| 8 | ← | | CLOSE UE TEST LOOP | |
| 9 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 10 | SS | | | The SS sends 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer. |
| 11 | | | | The SS changes the power of the cells according to column T1 in table 8.5.1.4. |
| 12 | → | | MEASUREMENT REPORT | Cell 24 triggers event 2b in the UE, which sends a MEASUREMENT REPORT message to the SS. |
| 13 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 14 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data. |
| 15 | ← | | OPEN UE TEST LOOP | |
| 16 | → | | OPEN UE TEST LOOP COMPLETE | |
| 17 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 3)

The contents of PHYSICAL CHANNEL RECONFIGURATION message in this test case is identical to the message sub-type titled as "Packet to CELL_DCH from CELL_DCH in PS" as found in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/Remark | Version |
|---|---|---|
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | Not Present | |
| - DPCH compressed mode info | | |
| - TGPSI | 1 | |
| - TGPS Status Flag | Deactivate | |
| - TGCFN | Not present | |
| - Transmission gap pattern sequence configuration parameters | | |
| - TGMP | FDD Measurement | |
| - TGPRC | Infinity | |
| - TGSN | 8 | |
| - TGL1 | 14 | |
| - TGL2 | Not Present | |
| - TGD | undefined | |
| - TGPL1 | 4 | |
| - RPP | Mode 0 | |
| - ITP | Mode 0 | |
| - CHOICE UL/DL Mode | UL and DL, UL only or DL only (depending on the UE capability) | |
| - Downlink compressed mode method | SF/2 | |
| - Uplink compressed mode method | SF/2 | |
| - Downlink frame type | 11B | |
| - DeltaSIR1 | 20 (2.0) | |
| - DeltaSIRAfter1 | 10 (1.0) | |
| - DeltaSIR2 | Not Present | |
| - DeltaSIRAfter2 | Not Present | |
| - N identify abort | Not Present | |
| - T Reconfirm abort | Not Present | |
| - TX Diversity mode | Not Present | |
| - Default DPCH Offset Value | Not Present | |
| Downlink information per radio link list | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Ref. to the Default setting in clause 6.1 (FDD) | |
| - PDSCH with SHO DCH info | Not Present | R99 and Rel-4 only |
| - PDSCH code mapping | Not Present | R99 and Rel-4 only |
| - Serving HS-DSCH radio link indicator | FALSE | Rel-5 |
| - Serving E-DCH radio link indicator | FALSE | Rel-6 |
| - Downlink DPCH info for each RL | | |
| - CHOICE mode | FDD | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value : Default DPCH Offset Value (as currently stored in SS) mod 38 400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 5 | |
| - Spreading factor | Reference to clause 6.10 Parameter Set 0 | |
| - Code number | | |
| - Scrambling code change | Set to value default1: No code change (if the UE has a compressed mode pattern sequence configured in variable TGPS_IDENTITY or included in the message including IE "Downlink DPCH info for each RL", which is using compressed mode method "SF/2") | |

| | | |
|---|---|---|
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - E-AGCH Info | Not Present | Rel-6 |
| - E-HICH Information | Not Present | Rel-6 |
| - E-RGCH Information | Not Present | Rel-6 |
| - SCCPCH information for FACH | Not Present | R99 and Rel-4 only |

MEASUREMENT CONTROL (Step 5)(FDD)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | 1 inter-frequency cell |
| - Inter-frequency cell id | 24 |
| - Frequency info | Set to the frequency of cell 24 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | FDD |
| - Primary CPICH Info | |
| - Primary Scrambling Code | Scrambling code of cell 24 |
| - Primary CPICH TX power | Not Present |
| - TX Diversity Indicator | FALSE |
| - Cells for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | CPICH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CPICH Ec/No reporting indicator | TRUE |
| - CPICH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | |
| - UE State | CELL_DCH |
| - Inter-frequency set update | |
| - UE autonomous update | On with no reporting |
| - Non autonomous update mode | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -65 dBm |
| - W used frequency | 0 (0.0) |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 1 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -65 dBm |
| - W non-used frequency | 0 |
| DPCH compressed mode status info | If the UE requires compressed mode (refer ICS/IXIT), this IE is present and contains the IEs as follows. If the UE does not require compressed mode (refer ICS/IXIT), this IE is not present. |

| Information Element | Value/Remark |
|---|---|
| - TGPS reconfiguration CFN | ((Current CFN + (256 – TTI/10msec))mod 256 |
| - Transmission gap pattern sequence | |
| - TGPSI | 1 |
| - TGPS Status Flag | Activate |
| - TGCFN | (Current CFN + (256 – TTI/10msec))mod 256 |

MEASUREMENT CONTROL (Step 5)( 3.84Mcps, 1.28Mcps and 7.68Mcps TDD)

| Information Element | Value/Remark |
|---|---|
| Measurement Identity | 2 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement Reporting Transfer Mode | Acknowledged Mode RLC |
| - Periodical Reporting / Event Trigger Reporting Mode | Event Trigger |
| Additional measurements list | Not Present |
| CHOICE measurement type | Inter-frequency measurement |
| - Inter-frequency cell info list | |
| - CHOICE inter-frequency cell removal | No inter-frequency cells removed |
| - New inter-frequency info list | 1 inter-frequency cell |
| - Inter-frequency cell id | 24 |
| - Frequency info | Set to the frequency of cell 24 |
| - Cell info | |
| - Cell individual offset | 0 (0 dB) |
| - Reference time difference to cell | Not present |
| - Read SFN Indicator | FALSE |
| - CHOICE Mode | TDD |
| - Primary CCPCH Info | |
| - CHOICE Mode | TDD |
| - CHOICE TDD option | 1.28Mcps TDD |
| -TSTD indicator | FALSE |
| - Cell parameters ID | Set to same code as used for cell 24 |
| - SCTD indicator | FALSE |
| - Primary CCPCH Tx power | Not present |
| - Timeslot list | Not present |
| - Cells for measurement | Not present |
| - Inter-frequency measurement quantity | |
| - CHOICE reporting criteria | Inter-frequency reporting criteria |
| - Filter Coefficient | 0 |
| - Measurement quantity for frequency quality estimate | PCCPCH RSCP |
| - Inter-frequency reporting quantity | |
| - UTRA Carrier RSSI | FALSE |
| - Frequency quality estimate | FALSE |
| - Non frequency related cell reporting quantities | |
| - SFN-SFN observed time difference reporting indicator | No report |
| - Cell synchronisation information reporting indicator | FALSE |
| - Cell Identity reporting indicator | FALSE |
| - CHOICE mode | TDD |
| - Timeslot ISCP reporting indicator | FALSE |
| - Proposed TGSN Reporting required | FALSE |
| - Primary CCPCH RSCP reporting indicator | TRUE |
| - Pathloss reporting indicator | FALSE |
| - Measurement validity | |
| - UE State | CELL_DCH |
| - Inter-frequency set update | Not present |
| - CHOICE report criteria | Inter-frequency measurement reporting criteria |
| - Parameters required for each event | |
| - Inter-frequency event identity | 2b |
| - Threshold used frequency | -65 dBm |
| - W used frequency | 0 (0.0) |
| - Hysteresis | 2 (1.0 dB) |
| - Time to trigger | 100 ms |
| - Reporting cell status | Report cells within monitored and/or virtual active set on non-used frequency |
| - Maximum number of reported cells per reported non-used frequency | 1 |
| - Parameters required for each non-used frequency | |
| - Threshold non used frequency | -65 dBm |
| - W non-used frequency | 0.0 |
| DPCH compressed mode status info | Not Present |

MEASUREMENT REPORT (Step 12)(FDD)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to the downlink UARFN of cell 24 |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code of cell 24 |
| - CPICH Ec/N0 | Check that this IE is present |
| - CPICH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| - UARFCN uplink | The presence of this IE is not checked |
| - UARFCN downlink | Check that the value of this IE is set to the downlink UARFN of cell 24 |
| - Non freq related measurement event results | |
| - Primary CPICH info | |
| - Primary scrambling code | Check that the value of this IE is set to Scrambling code of cell 24 |

MEASUREMENT REPORT (Step 12) (1.28Mcps TDD)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN | Check that the value of this IE is set to the UARFN of cell 24 |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 24 |
| - Proposed TGSN | Check that this IE is absent |
| - Primary CCPCH Info | Check that this IE is present |
| - PCCPCH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| -Timeslot list | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| - UARFCN | Check that the value of this IE is set to the UARFN of cell 24 |
| - Non freq related measurement event results | Cell measurement event results |
| - CHOICE *mode* | TDD |
| - Primary CCPCH info | |
| - CHOICE *mode* | TDD |
| - CHOICE *TDD option* | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Cell parameters ID | Check to see if set to the same for cell 24 |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 12) (3.84Mcps TDD)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN | Check that the value of this IE is set to the UARFN of cell 4 |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 4 |
| - Proposed TGSN | Check that this IE is absent |
| - Primary CCPCH Info | Check that this IE is present |
| - PCCPCH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| -Timeslot list | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| - UARFCN | Check that the value of this IE is set to the UARFN of cell 4 |
| - Non freq related measurement event results | |
| - CHOICE *mode* | TDD |
| - Primary CCPCH info | |
| - CHOICE *mode* | TDD |
| - CHOICE *TDD option* | 3.84 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to the same for cell 4 |
| - SCTD indicator | FALSE |

MEASUREMENT REPORT (Step 12) (7.68Mcps TDD)

| Information Element | Value/Remark |
|---|---|
| Message Type | |
| Integrity check info | |
| - Message authentication code | This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I. |
| - RRC Message sequence number | This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value. |
| Measurement identity | 2 |
| Measured Results | |
| - Inter-frequency measured results list | |
| - Frequency info | |
| - CHOICE mode | TDD |
| - UARFCN | Check that the value of this IE is set to the UARFN of cell 4 |
| - UTRA carrier RSSI | Check that this IE is absent |
| - Inter-frequency cell measurement results | Check that the value of this IE is set to 1 cell reported |
| - Cell measured results | |
| - Cell Identity | Check that this IE is absent |
| - SFN-SFN observed time difference | Check that this IE is absent |
| - Cell synchronisation information | Check that this IE is absent |
| - CHOICE mode | TDD |
| - Cell parameters Id | Check to see if it's the same for cell 4 |
| - Proposed TGSN | Check that this IE is absent |
| - Primary CCPCH Info | Check that this IE is present |
| - PCCPCH RSCP | Check that this IE is present |
| - Pathloss | Check that this IE is absent |
| -Timeslot list | Check that this IE is absent |
| Measured results on RACH | Check that this IE is absent |
| Additional measured results | Check that this IE is absent |
| Event results | |
| - Inter-frequency measurement event results | |
| - Inter-frequency event identity | 2b |
| - Inter-frequency cells | |
| - Frequency info | |
| - UARFCN | Check that the value of this IE is set to the UARFN of cell 4 |
| - Non freq related measurement event results | |
| - CHOICE *mode* | TDD |
| - Primary CCPCH info | |
| - CHOICE *mode* | TDD |
| - CHOICE *TDD option* | 7.68 Mcps TDD |
| - CHOICE SyncCase | Sync Case 2 |
| - Timeslot | 0 |
| - Cell parameters ID | Check to see if set to the same for cell 4 |
| - SCTD indicator | FALSE |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Step 14)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than zero. |

8.5.1.4.5 Test requirement

After step 3, if compression is required, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

After step 11, the UE shall transmit a MEASUREMENT REPORT message with cell 24 as the reported cell.After step 13, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero.

## 8.5.1.4m MBMS PTM Session Start at MCCH Notification in CELL_DCH state / MBMS Multicast Service

### 8.5.1.4m.1 Definition

This test is applicable for all UEs that support MBMS multicast services and support MBMS p-t-m reception in CELL_DCH state.

### 8.5.1.4m.2 Conformance requirement

Same conformance requirement as in clause 8.5.1.4.2

### 8.5.1.4m.3 Test purpose

Same test purpose as in clause 8.5.1.4.3.

### 8.5.1.4m.4 Method of test

#### Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 24.

User Equipment:

The UE is in CELL_DCH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

#### Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.
- UE supports MBMS p-t-m reception in CELL_DCH state Yes/No

#### Test procedure

Same test procedure as in clause 8.5.1.4.4.

#### Specific message contents

Same specific messages contents as in clause 8.5.1.4.4

### 8.5.1.4m.5 Test requirements

Same test requirement as in clause 8.5.1.4.5.

## 8.5.1.5 MBMS PTM Session Start at MCCH Acquisition in CELL_DCH (for a non-MBMS service) when entering into an MBMS cell (UE capable of MBMS p-t-m reception in CELL_DCH) / MBMS Broadcast Service

### 8.5.1.5.1 Definition and applicability

This test case is applicable for all UEs that support MBMS broadcast services and support MBMS p-t-m reception in CELL_DCH state.

### 8.5.1.5.2 Conformance requirement

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3 of TS 25.331.

The UE shall immediately acquire the MBMS ACCESS INFORMATION and the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the

MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

Reference

3GPP TS 25.331 clauses 8.7.2.3, 8.7.3.3.1, 8.6.9.6.

### 8.5.1.5.3 Test purpose

1. To verify that the UE receives the MBMS information on MCCH in CELL_DCH state.
2. To verify that the UE, when entering into an MBMS cell in CELL_DCH state, starts the p-t-m reception of MBMS services according to the information on MCCH.

### 8.5.1.5.4 Method of test

Initial Condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 24.

User Equipment:

The UE is in CELL_DCH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No
- UE supports MBMS p-t-m reception in CELL_DCH state Yes/No

Test Procedure

**Table 8.5.1.5**

| Parameter | Unit | Cell 21 | | Cell 24 | |
|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -70 | -70 | -60 |

Table 8.5.1.5 illustrates the downlink power to be applied for the 2 cells at various time instants of the test execution.

The UE is in the CELL_DCH state in cell 21 and has selected the broadcast service or joined the multicast service to be provided by the SS. The SS has configured its downlink transmission power setting according to columns "T0" in table 8.5.1.5.

The SS then configures its downlink transmission power setting according to columns "T1" in table 8.5.1.5 and transmits a PHYSICAL CHANNEL RECONFIGURATION message to the UE ordering the UE to change to Cell 24 on frequency Ch 2. At the activation time the UE changes to Cell 24 and transmits a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message using AM RLC.

The SS waits for the UE to start reception of the MBMS data on MTCH and then the MBMS radio bearer on MTCH is put into loopback mode 3.

The SS sends 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer. The SS retrives the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The number of received RLC SDUs reported by the UE shall be at least one.

The loopback mode 3 in the UE is deactivated.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of a failure to reselect to a right cell, then the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | | | | The SS changes the power of the cells according to column T1 in table 8.5.1.5. |
| 4 | ← | | PHYSICAL CHANNEL RECONFIGURATION | The SS instructs the UE to change to Cell 24. |
| 5 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 6 | SS | | | The SS waits for the UE to activate MTCH reception in cell 24. |
| 7 | ← | | CLOSE UE TEST LOOP | |
| 8 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 9 | SS | | | The SS broadcasts 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer. |
| 10 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 11 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data. |
| 12 | ← | | OPEN UE TEST LOOP | |
| 13 | → | | OPEN UE TEST LOOP COMPLETE | |
| 14 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 4) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| Frequency info | Set to the frequency of cell 24 | |
| Downlink information per radio link list | 1 radio link | |
| Downlink information for each radio link | | |
| - CHOICE mode | FDD | |
| - Primary CPICH info | Set to the scrambling code for cell 24 | |

PHYSICAL CHANNEL RECONFIGURATION (Step 4) (3.84Mcps, 1.28Mcps and 7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark | Version |
|---|---|---|
| Frequency info | Set to the frequency of cell 24 | |
| Downlink information per radio link list | 1 radio link | |
| - Downlink information for each radio link | | |
| - CHOICE mode | TDD | |
| - Primary CCPCH info | Set to same code as used for cell 24 | |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Step 11)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than zero. |

#### 8.5.1.5.5 Test requirement

After step 4, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message in cell 24.

After step 10, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero.

### 8.5.1.5m MBMS PTM Session Start at MCCH Acquisition in CELL_DCH (for a non-MBMS service) when entering into an MBMS cell (UE capable of MBMS p-t-m reception in CELL_DCH) / MBMS Multicast Service

#### 8.5.1.5m.1 Definition

This test is applicable for all UEs that support MBMS multicast services and support MBMS p-t-m reception in CELL_DCH state.

#### 8.5.1.5m.2 Conformance requirement

Same conformance requirement as in clause 8.5.1.5.2

#### 8.5.1.5m.3 Test purpose

Same test purpose as in clause 8.5.1.5.3.

#### 8.5.1.5m.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 24.

User Equipment:

The UE is in CELL_DCH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.1.5.4.

Specific message contents

Same specific messages contents as in clause 8.5.1.5.4

8.5.1.5m.5 Test requirements

Same test requirement as in clause 8.5.1.5.5.

## 8.5.1.6 Void

## 8.5.1.6m Void

## 8.5.1.7 Void

## 8.5.1.7m Void

## 8.5.1.8 Void

## 8.5.1.9 MBMS PTM Session Start at MCCH Notification in Idle Mode / MBMS Broadcast Service

### 8.5.1.9.1 Definition and applicability

This test case is applicable for all UEs that support MBMS broadcast services.

### 8.5.1.9.2 Conformance requirement

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

The UE shall immediately acquire the MBMS ACCESS INFORMATION and the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

The UE may:

1> monitor the MBMS notification Indicator Channel (MICH);

1> if a notification on the MICH for one or more of the MBMS services included in the variable MBMS_ACTIVATED_SERVICES is detected:

2> acquire the MBMS MODIFIED SERVICES INFORMATION message with delaying the reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3;

2> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if not monitoring MICH:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3;

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5.

Reference

3GPP TS 25.331 clause 8.7.2.3, 8.7.3.3.1, 8.6.9.6.

### 8.5.1.9.3 Test purpose

1. To verify that the UE receives the MBMS information on MCCH in Idle Mode.
2. To verify that the UE correctly handles the notification procedure after receiving the MBMS MODIFIED SERVICES INFORMATION message via MCCH if no ongoing MBMS p-t-m session (MICH supported/not supported by the UE).
3. To verify that the UE starts the reception of MBMS services according to notification via MICH/MCCH when the UE is in Idle Mode.

### 8.5.1.9.4 Method of test

Initial Condition

System Simulator:

- 1 MBMS cell.

User Equipment:

- The UE is in Idle mode as specified in clause 7.6 of TS 34.108.
- The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No

Test Procedure

UE is moved to CELL_DCH for RB Test Mode to be activated and then the RRC Connection is released to move UE back to Idle Mode.

The SS notifies on MICH and MCCH about the start of an MBMS session. The SS waits for the UE to start reception of the MBMS data on MTCH.

UE is moved to CELL_DCH for the UE Test Loop Mode 3 to be closed and then the RRC Connection is released to move UE back to Idle Mode.

The SS sends 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer.

UE is moved to CELL_DCH then retrives the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The number of received RLC SDUs reported by the UE shall be at least one.

The UE Test Loop is opened and RB Test Mode in the UE is deactivated.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | PAGING TYPE1 | Paging (PS domain, P-TMSI) |
| 2 | → | | RRC CONNECTION REQUEST | |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | SERVICE REQUEST | |
| 6 | ← | | AUTHENTICATION AND CIPHERING REQUEST | |
| 7 | → | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 8 | ← | | SECURITY MODE COMMAND | |
| 9 | → | | SECURITY MODE COMPLETE | |
| 10 | ← | | ACTIVATE RB TEST MODE | |
| 11 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 12 | ← | | RRC CONNECTION RELEASE | |
| 13 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 14 | ← | | MBMS MODIFIED SERVICES INFORMATION | MBMS session start. The SS also sets the Notification Indicator on MICH. The SS waits for the UE to establish the MTCH according to MBMS p-t-m activation time set to the first TTI of the next modification period. |
| 15 | ← | | PAGING TYPE1 (PCCH) | Paging (PS domain, P-TMSI) |
| 16 | → | | RRC CONNECTION REQUEST | |
| 17 | ← | | RRC CONNECTION SETUP | |
| 18 | → | | RRC CONNECTION SETUP COMPLETE | |
| 19 | → | | SERVICE REQUEST | |
| 20 | ← | | AUTHENTICATION AND CIPHERING REQUEST | |
| 21 | → | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 22 | ← | | SECURITY MODE COMMAND | |
| 23 | → | | SECURITY MODE COMPLETE | |
| 24 | ← | | CLOSE UE TEST LOOP | |
| 25 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 26 | ← | | RRC CONNECTION RELEASE | |
| 27 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 28 | SS | | | The SS broadcasts 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer. |
| 29 | ← | | PAGING TYPE1 | Paging (PS domain, P-TMSI) |
| 30 | → | | RRC CONNECTION REQUEST | |
| 31 | ← | | RRC CONNECTION SETUP | |
| 32 | → | | RRC CONNECTION SETUP COMPLETE | |
| 33 | → | | SERVICE REQUEST | |
| 34 | ← | | AUTHENTICATION AND CIPHERING REQUEST | |
| 35 | → | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 36 | ← | | SECURITY MODE COMMAND | |
| 37 | → | | SECURITY MODE COMPLETE | |
| 38 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 39 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data. |
| 40 | ← | | OPEN UE TEST LOOP | |
| 41 | → | | OPEN UE TEST LOOP COMPLETE | |
| 42 | ← | | DEACTIVATE RB TEST MODE | |
| 43 | → | | DEACTIVATE RB TEST MODE COMPLETE | |

Specific Message Contents

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Step 39)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than zero. |

#### 8.5.1.9.5 Test requirement

After step 38, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero.

### 8.5.1.9m MBMS PTM Session Start at MCCH Notification in Idle Mode / MBMS Multicast Service

#### 8.5.1.9m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.1.9m.2 Conformance requirement

Same conformance requirement as in clause 8.5.1.9.2

#### 8.5.1.9m.3 Test purpose

Same test purpose as in clause 8.5.1.9.3.

#### 8.5.1.9m.4 Method of test

Initial Condition

System Simulator:

- 1 MBMS cell.

User Equipment:

- The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.
- The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.1.9.4.

Specific message contents

Same specific messages contents as in clause 8.5.1.9.4

#### 8.5.1.9m.5 Test requirements

Same test requirement as in clause 8.5.1.9.5.

### 8.5.1.10 Void

### 8.5.1.11 MBMS PTP Session Start at MCCH Notification in Idle Mode / MBMS Selected Service

#### 8.5.1.11.1 Definition

This test is applicable for all UEs that support MBMS broadcast services.

8.5.1.11.2 Conformance requirement

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

…

1> if the IE "MBMS required UE action" is set to 'Request PTP RB':

2> if the UE is in idle mode:

3> indicate to upper layers that establishment of a PS signalling connection is required to receive the concerned MBMS [5], unless the UE has already requested p-t-p RB establishment in the current modification period, and use the establishment cause set to 'MBMS ptp RB request' in the RRC connection establishment procedure.

…

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

1> set the IE "Establishment cause" to the value of the variable ESTABLISHMENT_CAUSE;

1> set the IE "Initial UE identity" to the value of the variable INITIAL_UE_IDENTITY;

1> set the IE "Protocol error indicator" to the value of the variable PROTOCOL_ERROR_INDICATOR; and

1> include the IE "Predefined configuration status information" and set this IE to true if the UE has all pre-configurations stored with the same value tag as broadcast in the cell in which the RRC connection establishment is initiated.

1> if the UE is attempting to establish the signalling connection to PS-domain:

2> include the IE "Domain Indicator" and set it to "PS domain".

1> else if the UE is attempting to establish the signalling connection to CS domain:

2> include the IE "Domain Indicator" and set it to "CS domain".

1> if the UE only supports HS-DSCH but not E-DCH:

2> include the IE "UE capability indication" and set it to the "HS-DSCH" value.

1> if the UE supports HS-DSCH and E-DCH:

2> include the IE "UE capability indication" and set it to the "HS-DSCH+E-DCH" value.

1> if the UE performs connection establishment for MBMS ptp radio bearer request as specified in subclause 8.6.9.6; and

1> if one or more of the MBMS services for which the UE initiates the ptp radio bearer request concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the ptp radio bearer request:

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> otherwise if the UE performs connection establishment for MBMS counting as specified in subclause 8.7.4; and

1> if one or more of the MBMS services for which the UE initiates the counting response concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the counting response:

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> if the UE included one or more "MBMS Selected Service ID" IEs:

2> include the IE "MBMS Modification Period identity" and set it to a value in accordance with subclause 8.5.29.

The UE shall not include the IE "UE Specific Behaviour Information 1 idle".

…

If the IE "MBMS short transmission ID" is included the UE shall:

1> if the value of the "MBMS short transmission ID" is less than or equal to the number of services identified by the IE "Modified services list" included in the MBMS MODIFIED SERVICES INFORMATION message acquired in the same modification period as the one in which the "MBMS short transmission ID" is received:

2> consider the "MBMS short transmission ID" to be an index to the list of services contained in the IE "Modified services list" and apply the MBMS transmission identity specified for this entry.

1> otherwise:

2> compile a list of available MBMS services, as included in the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages acquired in the same modification period as the one in which the "MBMS short transmission ID" is received:

3> concatenate the services contained in IE "Modified services list" included in the MBMS MODIFIED SERVICES INFORMATION and the services contained in IE "Unmodified services list" included in the MBMS UNMODIFIED SERVICES INFORMATION.

2> consider the "MBMS short transmission ID" to be the index of the entry in the list of available services and apply the MBMS transmission identity specified for this entry.

…

The UE shall calculate the identity of a Modification period as follows:

*MP identity= (SFNMP div MPlen) mod 2*

With $SFN_{MP}$ being the SFN corresponding with the frame in which the concerned Modification Period starts

$MP_{len}$ being the length of the Modification Period, that is indicated by the IE "Modification period coefficient" that is included in System Information Block type 5 and 5bis.

Reference

3GPP TS 25.331 clauses 8.6.9.6, 8.1.3.3, 8.6.9.8, 8.5.29.

### 8.5.1.11.3 Test purpose

To verify that the UE receives the MBMS info in idle mode state and correctly triggers the P-t-p request procedure.

### 8.5.1.11.4 Method of test

Initial condition

System Simulator:

1 MBMS cell

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included inMBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

Test procedure

1) The UE camping on Cell 21, receives an MBMS MODIFIED SERVICES INFORMATION messages including IEs “MBMS required UE action” set to “Request PTP RB”.

2) The UE shall request a p-t-p RB establishment.The UE transmits a RRC CONNECTION REQUEST message including the IE "MBMS Selected Service ID" of the concerned MBMS selected services within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity".

3) The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of a radio access bearer. The UE shall establish this radio bearer. Then the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB. |
| 2 | → | | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS ptp RB request” and with the “MBMS Selected Services Short” IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 3 | ← | | RRC CONNECTION SETUP | RRC state indicator set to Cell_DCH |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | MBMS MODIFICATION REQUEST | The UE completing the RRC connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after step 5 and before step 11. |
| 6 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception”. |
| 7 | ← | | SECURITY MODE COMMAND | |
| 8 | → | | SECURITY MODE COMPLETE | |
| 9 | ← | | RADIO BEARER SETUP | |
| 10 | → | | RADIO BEARER SETUP COMPLETE | |
| 11 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes otherwise it fails. |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>- MBMS required UE action<br>- Continue MCCH reading | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>Request PTP RB<br>FALSE |

RRC CONNECTION REQUEST (Step 2)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI. |
| Establishment Cause | MBMS ptp RB request |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |
| MBMS Selected Services | |
| MBMS Selected Services | Only 1 entry |
| - MBMS Selected Service ID | MBMS short transmission identity referring to the service the UE has selected |
| - Modification period identity | Indicates the modification period the MBMS short transmission identities refer to |

RRC CONNECTION SETUP (Step 3)

| Information Element | Value/remark |
|---|---|
| Message type | |
| RRC State Indicator | Cell_DCH |

MBMS MODIFICATION REQUEST (steps 5)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info | |
| - CHOICE Status | Some |
| - MBMS Selected Services Full | |
| - MBMS Selected Service ID | Only 1 entry |
| - MBMS Service ID | MBMS service ID of the activated MBMS service |
| - CHOICE PLMN identity | Check to see that one of the below choice element is present |
| - SameAs-MIB | (no data) |
| - explicitPLMN_Id | Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

RADIO BEARER SETUP (Step 9)

Use the same message as the one specified for "MBMS PtP" in TS 34.108 clause 9 with the condition B1.

#### 8.5.1.11.1.5 Test requirements

At step 2, the UE shall transmit a RRC CONNECTION REQUEST message with Establishment cause set to “MBMS ptp RB request”. The UE shall include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity".

### 8.5.1.11m MBMS PTP Session Start at MCCH Notification in Idle Mode / MBMS Multicast Service

#### 8.5.1.11m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.1.11m.2 Conformance requirement

Same conformance requirement as in clause 8.5.1.11.2 except there is no reference to 3GPP TS 25.331 clause 8.1.3.3..

#### Reference

3GPP TS 25.331 clauses 8.6.9.6, 8.6.9.8, 8.5.29.

8.5.1.11m.3 Test purpose

Same test purpose as in clause 8.5.1.11.3.

8.5.1.11m.4 Method of test

Initial condition

System Simulator:

1 MBMS cell

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.1.11.4 except for the point 2:

2) The UE shall request a p-t-p RB establishment.The UE transmits a RRC CONNECTION REQUEST message.

Expected sequence

Same expected sequence as in clause 8.5.5.11.4 except for RRC CONNECTION REQUEST message content (step 2) and MODIFICATION REQUEST procedure not required.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB. |
| 2 | → | | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS ptp RB request” |
| 3 | ← | | RRC CONNECTION SETUP | RRC state indicator set to Cell_DCH |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Multicast service Reception”. |
| 6 | ← | | SECURITY MODE COMMAND | |
| 7 | → | | SECURITY MODE COMPLETE | |
| 8 | ← | | RADIO BEARER SETUP | |
| 9 | → | | RADIO BEARER SETUP COMPLETE | |
| 10 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes otherwise it fails. |

Specific message contents

Same specific messages contents as in clause 8.5.1.11.4 except for RRC CONNECTION REQUEST message content (step 2)

RRC CONNECTION REQUEST (Step 2)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI. |
| Establishment Cause | MBMS ptp RB request |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |
| MBMS Selected Services | Not Present |

#### 8.5.1.11m.5 Test requirements

At step 2, the UE shall transmit a RRC CONNECTION REQUEST message with Establishment cause set to “MBMS ptp RB request”.

### 8.5.1.12 MBMS PTP Session Start at MCCH Notification in URA_PCH / MBMS Selected Service

#### 8.5.1.12.1 Definition

This test is applicable for all UEs that support MBMS broadcast services.

#### 8.5.1.12.2 Conformance requirement

The MBMS notification procedure is used by the UE to respond to a notification provided by UTRAN, indicating a change applicable for one or more MBMS services the UE has joined. The procedure applies to all UEs supporting MBMS, irrespective of their state (idle and connected mode: URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH). The actual notification mechanism to be used depends on the UE state.

…

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if not monitoring MICH:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

….

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

…

1> if the IE "MBMS required UE action" is set to 'Request PTP RB':

…

2> if the UE is in URA_PCH, Cell_PCH or CELL_FACH states:

3> indicate to upper layers to initiate a service request procedure [5] to receive the concerned MBMS service;

3> perform the cell update procedure with cause "MBMS ptp RB request", as specified in subclause 8.3.1.2, unless the UE has already requested p-t-p RB establishment in the current modification period.

…

A UE shall initiate the cell update procedure in the following cases:

....

1> MBMS ptp RB request:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in URA_PCH, Cell_PCH or Cell_FACH state; and

2> if the UE should perform cell update for MBMS ptp radio bearer request as specified in 8.6.9.6:

3> perform cell update using the cause "MBMS ptp RB request".

…

The UE shall set the IEs in the CELL UPDATE message as follows:

…

1> if the UE performs cell update for MBMS ptp radio bearer request as specified in subclause 8.6.9.6; and

1> if one or more of the MBMS services for which the UE initiates the ptp radio bearer request concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates ptp radio bearer request:

3> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Short" before those selected with a lower priority;

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> otherwise, if the UE performs cell update for MBMS counting as specified in subclause 8.7.4; and

1> if one or more of the MBMS services for which the UE initiates the counting response concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the counting response:

3> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Short" before those selected with a lower priority;

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> if the UE included one or more "MBMS Selected Service ID" IEs:

2> include the IE "MBMS Modification Period identity" and set it to a value in accordance with subclause 8.5.29.

…

If the IE "MBMS short transmission ID" is included the UE shall:

1> if the value of the "MBMS short transmission ID" is less than or equal to the number of services identified by the IE "Modified services list" included in the MBMS MODIFIED SERVICES INFORMATION message acquired in the same modification period as the one in which the "MBMS short transmission ID" is received:

2> consider the "MBMS short transmission ID" to be an index to the list of services contained in the IE "Modified services list" and apply the MBMS transmission identity specified for this entry.

1> otherwise:

2> compile a list of available MBMS services, as included in the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages acquired in the same modification period as the one in which the "MBMS short transmission ID" is received:

3> concatenate the services contained in IE "Modified services list" included in the MBMS MODIFIED SERVICES INFORMATION and the services contained in IE "Unmodified services list" included in the MBMS UNMODIFIED SERVICES INFORMATION.

2> consider the "MBMS short transmission ID" to be the index of the entry in the list of available services and apply the MBMS transmission identity specified for this entry.

…

The UE shall calculate the identity of a Modification period as follows:

*MP identity= (SFNMP div MPlen) mod 2*

With $SFN_{MP}$ being the SFN corresponding with the frame in which the concerned Modification Period starts

$MP_{len}$ being the length of the Modification Period, that is indicated by the IE "Modification period coefficient" that is included in System Information Block type 5 and 5bis.

Reference

3GPP TS 25.331 clauses 8.7.3.1, 8.7.3.3.1, 8.6.9.6, 8.3.1.2, 8.3.1.3, 8.6.9.8, 8.5.29.

### 8.5.1.12.3 Test purpose

To verify that the UE receives the MBMS info in URA_PCH state and correctly triggers the P-t-p request procedure.

### 8.5.1.12.4 Method of test

Initial condition

System Simulator:

1 MBMS cell.

User Equipment:

The UE is in URA_PCH state as specified in clause 7.6 of TS 34.108

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

Test procedure

1) The UE is in URA_PCH state, shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION including the IE “MBMS required UE action” set to “Request PTP RB”.

2) The UE shall perform a cell update procedure with cause "MBMS ptp RB request". In case of MBMS Selected service, the UE transmits a CELL UPDATE message including the IE "MBMS Selected Service ID" of the concerned MBMS Selected service within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity".

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB". |
| 1a | | | | The UE enters the CELL_FACH state(Test procedure 2 and 3 only). |
| 2 | → | | CELL UPDATE | UE performs cell update procedure. The CELL UPDATE message shall contain the value "Cell Update Cause" set to "MBMS ptp RB request" |
| 3 | ← | | CELL UPDATE CONFIRM | RRC State Indicator is set to CELL_FACH |
| 3a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 4 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception". |
| 5 | SS | | | SS transmits the SERVICE ACCEPT message to the UE. |
| 6 | ← | | RADIO BEARER SETUP | RRC State Indicator is set to CELL_DCH |
| 7 | → | | RADIO BEARER SETUP COMPLETE | |
| 7a | → | | MBMS MODIFICATION REQUEST | This message may be received at any point after step 6 and before step 8. |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified services list<br>- MBMS Transmission identity<br><br>- MBMS required UE action | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>request PTP RB |

CELL UPDATE (Step 2)

| Information Element | Value/remark |
|---|---|
| Cell update cause<br>MBMS Selected Services<br>- MBMS Selected Services<br>- MBMS Selected Service ID<br><br>- Modification period identity | MBMS ptp RB request<br><br>Only 1 entry<br>MBMS short transmission identity referring to the service the UE has selected<br>Indicates the modification period the MBMS short transmission identities refer to |

CELL UPDATE CONFIRM (Step 3)

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

RADIO BEARER SETUP (Step 6)

Use the same message as the one specified for "MBMS PtP" in TS 34.108 clause 9 with the condition B4.

MBMS MODIFICATION REQUEST (step 7a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info<br>- CHOICE Status<br>- MBMS Selected Services Full<br>- MBMS Selected Service ID<br>- MBMS Service ID<br>- CHOICE PLMN identity<br>- SameAs-MIB<br>- explicitPLMN_Id | <br>Some<br><br><br>MBMS service ID of the activated MBMS service<br>Check to see that one of the below choice element is present<br>(no data)<br>Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

#### 8.5.1.12.5 Test requirements

At step 2, the UE shall initiate a cell update procedure for MBMS ptp radio bearer request. The UE shall include in the transmitted CELL_UPDATE message the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity" in case of MBMS Selected service.

### 8.5.1.12m MBMS PTP Session Start at MCCH Notification in URA_PCH / MBMS Multicast Service

#### 8.5.1.12m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.1.12m.2 Conformance requirement

Same conformance requirement as in clause 8.5.1.12.2.

#### 8.5.1.12m.3 Test purpose

Same test purpose as in clause 8.5.1.12.3.

#### 8.5.1.12m.4 Method of test

##### Initial condition

System Simulator:

1 MBMS cell

User Equipment:

The UE is in URA_PCH state as specified in clause 7.6 of TS 34.108

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

##### Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

##### Test procedure

Same test procedure as in clause 8.5.1.12.4, except that at step 4 UE transmits Service Request, with IE "Service type" set to "MBMS Multicast service Reception".

##### Specific message contents

Same specific messages contents as in clause 8.5.1.12.4 except for CELL UPDATE (Step 2) and Service Request (Step 4)

CELL UPDATE (Step 2)

| Information Element | Value/remark |
|---|---|
| Cell update cause | MBMS ptp RB request |
| MBMS Selected Services | Not present |

#### 8.5.1.12m.5 Test requirements

At step 2, the UE shall initiate a cell update procedure for MBMS ptp radio bearer request .

### 8.5.1.13 MBMS PTP Session Start at MCCH Notification in CELL_FACH / MBMS Selected Service

#### 8.5.1.13.1 Definition

This test is applicable for all UEs that support MBMS broadcast services.

#### 8.5.1.13.2 Conformance requirement

The MBMS notification procedure is used by the UE to respond to a notification provided by UTRAN, indicating a change applicable for one or more MBMS services the UE has joined. The procedure applies to all UEs supporting MBMS, irrespective of their state (idle and connected mode: URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH). The actual notification mechanism to be used depends on the UE state.

…

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if not monitoring MICH:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

….

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

…

1> if the IE "MBMS required UE action" is set to 'Request PTP RB':

…

2> if the UE is in URA_PCH, Cell_PCH or CELL_FACH states:

3> indicate to upper layers to initiate a service request procedure [5] to receive the concerned MBMS service;

3> perform the cell update procedure with cause "MBMS ptp RB request", as specified in subclause 8.3.1.2, unless the UE has already requested p-t-p RB establishment in the current modification period.

…

A UE shall initiate the cell update procedure in the following cases:

....

1> MBMS ptp RB request:

2> if none of the criteria for performing cell update with the causes specified above in the current subclause is met; and

2> if the UE is in URA_PCH, Cell_PCH or Cell_FACH state; and

2> if the UE should perform cell update for MBMS ptp radio bearer request as specified in 8.6.9.6:

3> perform cell update using the cause "MBMS ptp RB request".

…

The UE shall set the IEs in the CELL UPDATE message as follows:

…

1> if the UE performs cell update for MBMS ptp radio bearer request as specified in subclause 8.6.9.6; and

1> if one or more of the MBMS services for which the UE initiates the ptp radio bearer request concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates ptp radio bearer request:

3> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Short" before those selected with a lower priority;

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> otherwise, if the UE performs cell update for MBMS counting as specified in subclause 8.7.4; and

1> if one or more of the MBMS services for which the UE initiates the counting response concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the counting response:

3> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Short" before those selected with a lower priority;

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> if the UE included one or more "MBMS Selected Service ID" IEs:

2> include the IE "MBMS Modification Period identity" and set it to a value in accordance with subclause 8.5.29.

…

If the IE "MBMS short transmission ID" is included the UE shall:

1> if the value of the "MBMS short transmission ID" is less than or equal to the number of services identified by the IE "Modified services list" included in the MBMS MODIFIED SERVICES INFORMATION message acquired in the same modification period as the one in which the "MBMS short transmission ID" is received:

2> consider the "MBMS short transmission ID" to be an index to the list of services contained in the IE "Modified services list" and apply the MBMS transmission identity specified for this entry.

1> otherwise:

2> compile a list of available MBMS services, as included in the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages acquired in the same modification period as the one in which the "MBMS short transmission ID" is received:

3> concatenate the services contained in IE "Modified services list" included in the MBMS MODIFIED SERVICES INFORMATION and the services contained in IE "Unmodified services list" included in the MBMS UNMODIFIED SERVICES INFORMATION.

2> consider the "MBMS short transmission ID" to be the index of the entry in the list of available services and apply the MBMS transmission identity specified for this entry.

…

The UE shall calculate the identity of a Modification period as follows:

*MP identity= (SFNMP div MPlen) mod 2*

With $SFN_{MP}$ being the SFN corresponding with the frame in which the concerned Modification Period starts

$MP_{len}$ being the length of the Modification Period, that is indicated by the IE "Modification period coefficient" that is included in System Information Block type 5 and 5bis.

Reference

3GPP TS 25.331 clauses 8.7.3.1, 8.7.3.3.1, 8.6.9.6, 8.3.1.2, 8.3.1.3, 8.6.9.8, 8.5.29.

### 8.5.1.13.3 Test purpose

To verify that the UE receives the MBMS info in Cell_FACH state and correctly triggers the P-t-p request procedure.

### 8.5.1.13.4 Method of test

Initial condition

System Simulator:

1 MBMS cell.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

Test procedure

1) The UE is in Cell_FACH state, shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION including the IE “MBMS required UE action” set to “Request PTP RB”.

2) The UE shall perform a cell update procedure with cause "MBMS ptp RB request". In case of MBMS Selected service, the UE transmits a CELL UPDATE message including the IE "MBMS Selected Service ID" of the concerned MBMS Selected service within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity".

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB". |
| 2 | → | | CELL UPDATE | UE performs cell update procedure. The CELL UPDATE message shall contain the value "Cell Update Cause" set to "MBMS ptp RB request" |
| 3 | ← | | CELL UPDATE CONFIRM | RRC State Indicator is set to CELL_FACH |
| 4 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception". |
| 5 | SS | | | SS transmits the SERVICE ACCEPT message to the UE. |
| 6 | ← | | RADIO BEARER SETUP | RRC State Indicator is set to CELL_DCH |
| 7 | → | | RADIO BEARER SETUP COMPLETE | |
| 7a | → | | MBMS MODIFICATION REQUEST | This message may be received at any point after step 6 and before step 8. |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified services list<br>- MBMS Transmission identity<br><br>- MBMS required UE action | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>request PTP RB |

CELL UPDATE (Step 2)

| Information Element | Value/remark |
|---|---|
| Cell update cause<br>MBMS Selected Services<br>- MBMS Selected Services<br>- MBMS Selected Service ID<br><br>- Modification period identity | MBMS ptp RB request<br><br>Only 1 entry<br>MBMS short transmission identity referring to the service the UE has selected<br>Indicates the modification period the MBMS short transmission identities refer to |

RADIO BEARER SETUP (Step 6)

Use the same message as the one specified for "MBMS PtP" in TS 34.108 clause 9 with the condition B4.

MBMS MODIFICATION REQUEST (step 7a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info<br>- CHOICE Status<br>- MBMS Selected Services Full<br>- MBMS Selected Service ID<br>- MBMS Service ID<br>- CHOICE PLMN identity<br>- SameAs-MIB<br>- explicitPLMN_Id | <br>Some<br><br><br>MBMS service ID of the activated MBMS service<br>Check to see that one of the below choice element is present<br>(no data)<br>Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

#### 8.5.1.13.5 Test requirements

At step 2, the UE shall initiate a cell update procedure for MBMS ptp radio bearer request. The UE shall include in the transmitted CELL_UPDATE message the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity" in case of MBMS Selected service.

### 8.5.1.13m MBMS PTP Session Start at MCCH Notification in CELL_FACH / MBMS Multicast Service

#### 8.5.1.13m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.1.13m.2 Conformance requirement

Same conformance requirement as in clause 8.5.1.13.2.

#### 8.5.1.13m.3 Test purpose

Same test purpose as in clause 8.5.1.13.3.

#### 8.5.1.13m.4 Method of test

##### Initial condition

System Simulator:

1 MBMS cell

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICESvariable).

##### Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

##### Test procedure

Same test procedure as in clause 8.5.1.13.4, except that at step 4 UE transmits Service Request, with IE "Service type" set to "MBMS Multicast service Reception".

##### Specific message contents

Same specific messages contents as in clause 8.5.1.13.4 except for CELL UPDATE (Step 2) and Service request(step 4)

CELL UPDATE (Step 2)

| Information Element | Value/remark |
|---|---|
| Cell update cause | MBMS ptp RB request |
| MBMS Selected Services | Not present |

#### 8.5.1.13m.5 Test requirements

At step 2, the UE shall initiate a cell update procedure for MBMS ptp radio bearer request.

### 8.5.1.14 MBMS PTM Session Start at MCCH Acquisition / MBSFN mode (TDD)

#### 8.5.1.14.1 Definition

This test is applicable for UEs that support MBMS broadcast services in MBSFN mode and which support either both TDD transmit and receive functions or TDD MBSFN receive only function.

#### 8.5.1.14.2 Conformance requirement

The UE applies the MCCH acquisition procedure to determine the MBMS services available in the cell and to initiate reception of the services that the UE has activated. The procedure applies to all UEs supporting MBMS, irrespective of their state (idle, URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH).

For 1.28 Mcps TDD, if the cell is operating in MBSFN mode, the MCCH will be deployed on the MBSFN Special Timeslot [30].

…

If the variable MBMS_ACTIVATED_SERVICES is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS or an MBSFN cluster, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

…

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

...

For cells operating in MBSFN mode as indicated in subclause 8.1.1.6.3 the UE shall immediately acquire the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise for cells operating in MBSFN mode as indicated in subclause 8.1.1.6.3, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

When requested to acquire MBMS control information other than the MBMS ACCESS INFORMATION message , the UE shall:

1> if requested to start reading MCCH at the next modification period:

2> start reading MCCH at the beginning of the next modification period.

1> otherwise

2> start reading MCCH at the beginning of the next repetition period.

1> if requested to stop reading MCCH at the end of the modification period:

2> continue reading MCCH until the required MBMS control information is received or until the UE detects a TTI in which no MCCH information is transmitted, whichever is first;

2> continue reading MCCH in this manner at every subsequent repetition period, until the information is received correctly or until the end of the modification period.

1> otherwise:

2> continue reading MCCH until the required MBMS control information is received or until the UE detects a TTI in which no MCCH information is transmitted, whichever is first;

2> continue reading MCCH in this manner at every subsequent repetition period, until the information is received correctly.

NOTE 1: The UE may combine information received at different repetition periods within a modification period.

…

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

…

Upon completing the reception of the MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION messages for an activated MBMS service, the UE shall:

1> if the UE is already receiving an MTCH and does not have the capability to receive the new service in addition:

2> the UE behaviour is undefined.

NOTE: In this case, the UE may request upper layers to prioritise the services and only receive the service(s) prioritised by upper layers.

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;

1> if the UE previously received the service by means of a p-t-m radio bearer from a cell belonging to another MBMS cell group:

2> re-establish RLC;

2> re-initialise PDCP.

1> start immediately to use the indicated configuration unless specified otherwise;

1> start or continue receiving the indicated p-t-m radio bearers depending on its UE capabilities.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information i.e. the MBMS MODIFIED SERVICES INFORMATION message, MBMS UNMODIFIED SERVICES INFORMATION

message, MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION message should be acquired in the same modification period.

…

The UE shall:

1> if the IE "Secondary CCPCH system information MBMS" is included:

2> apply the Secondary CCPCH and FACH indicated by the IE "FACH carrying MCCH" for receiving MCCH.

1> otherwise, if the IE "Secondary CCPCH system information" includes the IE "MCCH configuration information":

2> apply the Secondary CCPCH and FACH indicated by the IE “MCCH configuration information” for receiving MCCH.

1> for TDD, if the IE "TDD MBSFN Information" is included:

2> apply the scrambling codes (as referenced by the "Cell parameters ID") to each timeslot indicated by "TDD MBSFN Information".

…

The UE shall select the Secondary CCPCH for acquiring MCCH information according to the following rules:

1> if System Information Block type 5 or System Information Block type 5bis is defined and includes an S-CCPCH within the IE "Secondary CCPCH system information" including a FACH for which the IE "MCCH configuration information" is included:

2> select that S-CCPCH and FACH for receiving MCCH.

1> otherwise if System Information Block type 5 or System Information Block type 5bis is defined and includes an SCCPCH within the IE "Secondary CCPCH system information MBMS" for which the IE "FACH carrying MCCH" is included:

2> select that S-CCPCH and FACH for receiving MCCH.

Reference

3GPP TS 25.331 clauses 8.7.2.1, 8.7.2.2, 8.7.2.3, 8.7.1.3, 8.6.9.6, 8.7.5.3, 8.1.1.6.5, 8.5.19a.

### 8.5.1.14.3 Test purpose

1. To verify that the UE acquires the MBMS information on MCCH after selecting the MBSFN cluster.
2. To verify that the UE, after acquiring the MBMS information on MCCH, starts the p-t-m reception of MBMS services according to the information on MCCH.

### 8.5.1.14.4 Method of test

Initial condition

System Simulator:

- MBSFN carrier: 2 cells, Cell 31 (PLMN1) and Cell 33 (PLMN1). Cell 33 is powered off. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.
- Unicast carrier : 1 cell, Cell 1 with default parameters.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.

- The UE is in MBSFN Idle mode with no services activated as specified in clause 7.6.3 of TS 34.108.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode application available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

**Table 8.5.1.14**

| Parameter | Unit | Cell 1 | | Cell 31 | | Cell 33 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Ch. 1 | | Ch. 2 | | Ch. 3 | |
| CPICH Ec (FDD) | dBm / 3.84MHz | -60 | -60 | - | - | - | - |
| P-CCPCH RSCP (TDD) | dBM | -60 | -60 | -60 | OFF | OFF | -60 |

Table 8.5.1.14 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution.

a) The UE is camping on Cell 1 and Cell 31. SS requests the UE to activate a local service for which there will be a session ongoing on MBSFN Cell 33 (see TS 34.108 clause 11.2.4) when the UE selects that MBSFN cell.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

c) The SS then sends CLOSE UE TEST LOOP to activate RLC SDU counting on the MTCH of Cell 33 (Transmission identity corresponding to the activated local service).

d) The SS switches off Cell 31 and powers on Cell 33.

e) The UE camps on Cell 33 on the MBSFN carrier. The SS transmits the SYSTEM INFORMATION BLOCK TYPE 5 message indicating the configuration of the S-CCPCH carrying MCCH within the IE " Secondary CCPCH system information MBMS". In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 33 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD) or clause 6.11.5.4.4.9 (1.28 Mcps TDD).

f) The UE shall perform the MCCH acquisition procedure. The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION, the MBMS UNMODIFIED SERVICES INFORMATION, the MBMS GENERAL INFORMATION, the MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M INFORMATION.

g) The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. The UE shall start receiving the p-t-m radio bearer for the ongoing activated MBMS service indicated in the MBMS UNMODIFIED SERVICES INFORMATION message according to the configuration defined in the MBMS CURRENT CELL P-T-M INFORMATION (one ongoing session corresponding to the service activated at the UE. The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

h) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the activated service.

i) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | | | | | SS requests the UE to activate a local service. |
| 2 | ← | | U | ACTIVATE RB TEST MODE | |
| 3 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 4 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated. Short Transmission Identity for the selected local service on Cell 33. |
| 5 | SS | | | | The SS powers off Cell 31 and powers on Cell 33. |
| 6 | ← | | M | SYSTEM INFORMATION BLOCK TYPE 5 | |
| 7 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. 124 kbps PS RAB |
| 8 | UE | | M | | The UE shall continue acquiring the above MBMS messages until it has received a consistent set of MCCH information in the same modification period. |
| 9 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 10 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH. |
| 11 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 12 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 13 | ← | | U | OPEN UE TEST LOOP | |
| 14 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 15 | ← | | U | DEACTIVATE RB TEST MODE | |
| 16 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1 with the following exceptions:

There are no exceptions for this test case.

#### 8.5.1.14.5 Test requirements

1) After step 12, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0 for Cell 33 MTCH.

### 8.5.1.15 MBMS PTM Session Start at MCCH Notification / MBSFN mode (TDD)

#### 8.5.1.15.1 Definition

This test is applicable for UEs that support MBMS broadcast services in MBSFN mode and which support either both TDD transmit and receive functions or TDD MBSFN receive only function.

#### 8.5.1.15.2 Conformance requirement

The UE applies the MCCH acquisition procedure to determine the MBMS services available in the cell and to initiate reception of the services that the UE has activated. The procedure applies to all UEs supporting MBMS, irrespective of their state (idle, URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH).

For 1.28 Mcps TDD, if the cell is operating in MBSFN mode, the MCCH will be deployed on the MBSFN Special Timeslot [30].

…

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the

next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

...

For cells operating in MBSFN mode as indicated in subclause 8.1.1.6.3 the UE shall immediately acquire the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise for cells operating in MBSFN mode as indicated in subclause 8.1.1.6.3, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

When requested to acquire MBMS control information other than the MBMS ACCESS INFORMATION message , the UE shall:

1> if requested to start reading MCCH at the next modification period:

2> start reading MCCH at the beginning of the next modification period.

1> otherwise

2> start reading MCCH at the beginning of the next repetition period.

1> if requested to stop reading MCCH at the end of the modification period:

2> continue reading MCCH until the required MBMS control information is received or until the UE detects a TTI in which no MCCH information is transmitted, whichever is first;

2> continue reading MCCH in this manner at every subsequent repetition period, until the information is received correctly or until the end of the modification period.

1> otherwise:

2> continue reading MCCH until the required MBMS control information is received or until the UE detects a TTI in which no MCCH information is transmitted, whichever is first;

2> continue reading MCCH in this manner at every subsequent repetition period, until the information is received correctly.

NOTE 1: The UE may combine information received at different repetition periods within a modification period.

…

The MBMS notification procedure is used by the UE to respond to a notification provided by UTRAN, indicating a change applicable for one or more MBMS services the UE has activated. The procedure applies to all UEs supporting MBMS, irrespective of their state (idle and connected mode: URA_PCH, CELL_PCH, CELL_FACH and CELL_DCH). The actual notification mechanism to be used depends on the UE state.

…

The UE may:

1> monitor the MBMS notification Indicator Channel (MICH);

1> if a notification on the MICH for one or more of the MBMS services included in the variable MBMS_ACTIVATED_SERVICES is detected:

2> acquire the MBMS MODIFIED SERVICES INFORMATION message with delaying the reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3;

2> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if not monitoring MICH during the current or the previous modification period:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

…

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

…

Upon completing the reception of the MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION messages for an activated MBMS service, the UE shall:

1> if the UE is already receiving an MTCH and does not have the capability to receive the new service in addition:

2> the UE behaviour is undefined.

NOTE: In this case, the UE may request upper layers to prioritise the services and only receive the service(s) prioritised by upper layers.

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;

1> if the UE previously received the service by means of a p-t-m radio bearer from a cell belonging to another MBMS cell group:

2> re-establish RLC;

2> re-initialise PDCP.

1> start immediately to use the indicated configuration unless specified otherwise;

1> start or continue receiving the indicated p-t-m radio bearers depending on its UE capabilities.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information i.e. the MBMS MODIFIED SERVICES INFORMATION message, MBMS UNMODIFIED SERVICES INFORMATION message, MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION message should be acquired in the same modification period.

…

The UE shall:

1> if the IE "Secondary CCPCH system information MBMS" is included:

2> apply the Secondary CCPCH and FACH indicated by the IE "FACH carrying MCCH" for receiving MCCH.

1> otherwise, if the IE "Secondary CCPCH system information" includes the IE "MCCH configuration information":

2> apply the Secondary CCPCH and FACH indicated by the IE “MCCH configuration information” for receiving MCCH.

1> for TDD, if the IE "TDD MBSFN Information" is included:

2> apply the scrambling codes (as referenced by the "Cell parameters ID") to each timeslot indicated by "TDD MBSFN Information".

Reference

3GPP TS 25.331 clauses 8.7.2.1, 8.7.2.3, 8.7.1.3, 8.7.3.1, 8.7.3.3.1, 8.6.9.6, 8.7.5.3, 8.1.1.6.5

### 8.5.1.15.3 Test purpose

1. To verify that the UE receives updated MBMS information on MCCH of the MBSFN cluster.
2. To verify that the UE correctly handles the notification procedure after receiving the MBMS MODIFIED SERVICES INFORMATION message via MCCH if there is no ongoing MBMS p-t-m session (MICH supported/not supported by the UE).
3. To verify that the UE starts the reception of MBMS services according to notification via MICH/MCCH.

### 8.5.1.15.4 Method of test

Initial condition

System Simulator:

- MBSFN carrier: 1 cell, Cell 31 (PLMN1). In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.
- Unicast carrier : 1 cell, Cell 1 with default parameters.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.
- The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected (i.e. it is included in MBMS_ACTIVATED_SERVICES variable) a national service for which a session will start on MBSFN Cell 31 (see TS 34.108 clause 11.2.4) during the test.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode application available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

a) The UE is camping on Cell 1 and Cell 31. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 (no session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

c) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on Cell 31 MTCH (Transmission identity indicating the MBMS activated service).

d) The SS notifies on MCCH about the start of an MBMS session for one modification period. MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C4 (one PTM session starting) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

e) From the first SFN of the next modification period the SS transmits MCCH messages on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108; and the SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the activated service. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD) or clause 6.11.5.4.4.9 (1.28 Mcps TDD).

f) The UE establishes the p-t-m radio bearer for the activated service according to the specified service activation time (i.e the first SFN of the modification period following the notification (step d). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

g) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated on Cell 31 for the selected national service on MTCH. |
| 4 | ← | | M | MBMS MCCH Message Configuration C4 | Includes the national service activated at UE in the modified services list for one modification period. Activation time is the start of the next modification period. |
| 5 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. 124 kbps PS RAB |
| 6 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 7 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH starting at the indicated activation time. |
| 8 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 9 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 10 | ← | | U | OPEN UE TEST LOOP | |
| 11 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 12 | ← | | U | DEACTIVATE RB TEST MODE | |
| 13 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1 with the following exceptions:

There are no exceptions for this test case.

#### 8.5.1.15.5 Test requirements

1) After step 9, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0 for the identified MTCH RB on Cell 33.

## 8.5.2 MBMS Session Reconfiguration

### 8.5.2.1 MBMS PTP Session Reconfiguration – Change of Activated Service / MBMS Selected Service

#### 8.5.2.1.1 Definition

This test is applicable for all UEs that support MBMS broadcast services and MBMS service change for a ptp RB and capable of reading MCCH in CELL_DCH state.

#### 8.5.2.1.2 Conformance requirement

If the UE has included the IE "Support of MBMS service change for a ptp RB" in a previous MBMS MODIFICATION REQUEST message and if the IE "RAB information for MBMS ptp bearer" is included then the UE shall:

1> if an entry for the radio access bearer identified by the IE "RB Identity" already exists in the variable ESTABLISHED_RABS and a value of the IE "MBMS Service Identity" is stored in this entry of the variable ESTABLISHED_RABS:

2> notify upper layers that the radio access bearer characterised by the parameters currently stored in this entry of the variable ESTABLISHED_RABS is released;

2> reuse this entry of the variable ESTABLISHED_RABS and update it with the received value of IE "MBMS Service Identity" and, if included, with the received value of IE "MBMS Session Identity";

2> notify upper layers that the radio access bearer characterised by the updated parameters in this entry is established.

1> else:

2> set the variable INVALID_CONFIGURATION to TRUE.

…

The UE may:

1> if not receiving an MBMS service provided via a p-t-m radio bearer; or

1> if receiving an MBMS service provided via a p-t-m radio bearer that has scheduling information for that service on MSCH:

2> monitor the MBMS notification Indicator Channel (MICH).

2> if a notification on the MICH for one or more of the MBMS services included in the variable MBMS_ACTIVATED_SERVICES is detected:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message with delaying the reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

…

The UE shall:

…

1> if in CELL_DCH state:

2> if receiving an MBMS service that is provided via a p-t-m radio bearer:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

…

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3;

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5

…

The UE shall set the contents of the MBMS MODIFICATION REQUEST message as follows:

…

1> if there is a change in selection of one or more of the MBMS Selected Services:

2> if the UE has not selected any MBMS Selected Service:

3> include the IE "MBMS Selected Service Info" and set the Status to 'None'.

2> otherwise:

3> include the IE "MBMS Selected Service Info" and set the Status to 'Some';

3> if the UE supports the actions specified upon reception of the IE "RAB information for MBMS ptp bearer":

4> include the IE "Support of MBMS service change for a ptp RB";

3> for each MBMS Selected Service:

4> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Full" before those selected with a lower priority;

4> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Full".

Reference

3GPP TS 25.331 clauses 8.6.4.2b, 8.7.3.3.1, 8.6.9.6, 8.7.6.2a.

### 8.5.2.1.3 Test purpose

To verify that the UE in Cell_DCH, stops the reception of an MBMS service and starts the reception of a new MBMS service.

### 8.5.2.1.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 24

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has selected the broadcast service to be provided by the SS (MBMS Selected Services: Service_1 included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No
- UE supports MCCH reception in CELL_DCH state Yes/No
- UE Supports MBMS service change for a ptp RB Yes/No

Test procedure

1) The UE camping on cell 21, receives an MBMS UNMODIFIED SERVICES INFORMATION message including the IE “MBMS required UE action” set to “Request PTP RB”.
2) The UE shall request a p-t-p RB establishment. The UE transmits a RRC CONNECTION REQUEST message including the IE “MBMS Selected Service ID” of the concerned MBMS selected services within the IE “MBMS Selected Services Short” and the IE “MBMS Modification Period identity”.
3) Upon reception of the RADIO BEARER SETUP message, the UE shall establish this radio bearer. Then the UE transmits a RADIO BEARER SETUP COMPLETE message and starts receiving the MBMS service provided by the p-t-p RB. The variable ESTABLISHED_RABS contains the RB Identity and the MBMS Service Identity of MBMS Selected Service Service_1.
4) The UE selects the MBMS Service_2 and indicates there is a change in selection of the MBMS Selected Services by transmitting an MBMS MODIFICATION REQUEST message including the IE “Support of MBMS service change for a ptp RB” to indicate it supports the actions upon reception of IE “RAB information for MBMS ptp bearer”.
5) The SS transmits a RADIO BEARER RECONFIGURATION including IE "RAB information for MBMS ptp bearer list " with RAB information for MBMS Selected Service Service_2:
   - The radio access bearer for MBMS Service_1 is released, the UE stops the reception of MBMS Service_1.
   - The ESTABLISHED_RABS is updated with the parameters forMBMS Selected Service Service_2. The radio access bearer for MBMS Selected Service Service_2 is established.
6) The UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message on Cell 24.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | Service_1 is available in Cell 21 |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | |
| 2 | ← | | MBMS GENERAL INFORMATION | |
| 3 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB. |
| 4 | → | | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS ptp RB request” and with the “MBMS Selected Services Short” IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 5 | ← | | RRC CONNECTION SETUP | RRC state indicator set to Cell_FACH |
| 6 | → | | RRC CONNECTION SETUP COMPLETE | |

| | | | |
|---|---|---|---|
| 6a | → | MBMS MODIFICATION REQUEST | The UE completing the RRC Connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after step 6 and before step 12. |
| 7 | UE | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception". |
| 8 | ← | SECURITY MODE COMMAND | |
| 9 | → | SECURITY MODE COMPLETE | |
| 10 | ← | RADIO BEARER SETUP | |
| 11 | → | RADIO BEARER SETUP COMPLETE | |
| 12 | UE | | The UE is receiving the MBMS service provided by the p-t-p RB.<br>RB Identity and MBMS Service Identity of MBMS Service_1<br>stored in ESTABLISHED_RABS |
| 13 | UE | | The UE selects the MBMS Service_2 and de-selects MBMS Service_1 ( via MMI command) |
| 14 | → | MBMS MODIFICATION REQUEST | The UE transmits the message with IE “Support of MBMS service change for a ptp RB” set to TRUE. |
| 15 | ← | RADIO BEARER RECONFIGURATION | IE "RAB information for MBMS ptp bearer list" with RAB information for MBMS Selected Service_2. |
| 16 | UE | | -RAB for MBMS Selected Service_1 is released.The UE stops receiving the MBMS service 1.<br>-ESTABLISHED_RABS is updated with RB Identity and MBMS Service Identity of MBMS Service_2.<br>-RAB for MBMS Selected Service_2 is is established.<br>The UE shall move to the Cell 24 where Service_2 is available |
| 17 | → | RADIO BEARER RECONFIGURATION COMPLETE | |
| 18 | UE | | The UE is receiving the MBMS Selected Service_2 provided by the p-t-p RB. |
| 19 | ←→ | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS UNMODIFIED SERVICES INFORMATION (Step 3)

| Information Element | Value/remark |
|---|---|
| Unmodified services list<br>- MBMS Transmission identity<br><br>MBMS required UE action | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>Request PTP RB |

RRC CONNECTION REQUEST (Step 4)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI |
| Establishment Cause | MBMS ptp RB request |
| Domain indicator | PS domain |
| MBMS Selected Services | |
| - MBMS Selected Services | Only 1 entry |
| - MBMS Selected Service ID | MBMS short transmission identity referring to the service the UE has selected |
| - Modification period identity | Indicates the modification period the MBMS short transmission identities refer to |

RRC CONNECTION SETUP (Step 5)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Set to same value as received in Step 4 |
| RRC State Indicator | Cell_FACH |

MBMS MODIFICATION REQUEST (Step 6a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info | |
| - CHOICE Status | Some |
| - MBMS Selected Services Full | |
| - MBMS Selected Service ID | Only 1 entry |
| - MBMS Service ID | MBMS service ID of the activated MBMS service |
| - CHOICE PLMN identity | Check to see that one of the below choice element is present |
| - SameAs-MIB | (no data) |
| - explicitPLMN_Id | Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

RADIO BEARER SETUP (Step 10)

Use the same message as the one specified for "MBMS PtP" in TS 34.108 clause 9, with the condition B2.

MBMS MODIFICATION REQUEST (Step 14)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| MBMS Selected Service Info | |
| MBMS RB list requested to be released | |
| - RB information to release | |
| - RB identity | RB identity for MBMS service1 provided via ptp RB |
| MBMS Selected Service Info | |
| - MBMS Selected Service ID | Only 1entry |
| - MBMS Service ID | MBMS short transmission identity referring to the service the UE has selected Service_2 |
| Support of MBMS service change for a ptp RB | TRUE |

RADIO BEARER RECONFIGURATION (Step 15)

| Information Element | Value/remark |
|---|---|
| RB information elements | |
| - RAB information for MBMS ptp bearer list | Only 1 entry |
| - RAB information for MBMS ptp bearer | |
| - RB Identity | RBid_1 |
| - MBMS Service Identity | Coded as octets 3 to 5 of the IE *Temporary Mobile Group Identity* for Service_2 |
| - MBMS Session Identity | Session_id_2 |

#### 8.5.2.1.5 Test requirements

At step 4, the UE shall transmit a RRC CONNECTION REQUEST message with Establishment cause set to “MBMS reception” and with the IE “MBMS Selected Service ID” within the IE “MBMS Selected Services Short” and the IE “MBMS Modification Period identity”.

After step 6, the UE shall transmit a RADIO BEARER SETUP COMPLETE message.

At step 13, the UE shall request MBMS P-T-P Modification Request.

After step 15, upon reception of a RADIO BEARER RECONFIGURATION message, the radio access bearer for ptp transmission of MBMS Selected Service Service_1 is released and the radio access bearer used for ptp transmission of MBMS Selected Service Service_2 is established. The UE stops receiving the MBMS Selected Service Service_1 and moves to cell 24.

At step 17, the UE shall transmit a RADIO BEARER RECONFIGURATION COMPLETE message.

### 8.5.2.2 MBMS PTM Session Reconfiguration – Transfer Mode Change to PTP / MBMS Selected Service

#### 8.5.2.2.1 Definition

This test is applicable for all UEs supporting MBMS broadcast services.

#### 8.5.2.2.2 Conformance requirement

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if receiving an MBMS service that is provided via a p-t-m radio bearer; or

2> if not receiving an MBMS service that is provided via a p-t-m radio bearer and not monitoring MICH:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

1> if in CELL_DCH state:

2> if receiving an MBMS service that is provided via a p-t-m radio bearer:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

….

1> if the IE "MBMS required UE action" is set to 'Request PTP RB':

2> if the UE is in idle mode:

3> indicate to upper layers that establishment of a PS signalling connection is required to receive the concerned MBMS service [5], unless the UE has already requested p-t-p RB establishment in the current modification period, and use the establishment cause set to 'MBMS ptp RB request' in the RRC connection establishment procedure.

2> if the UE is in URA_PCH, Cell_PCH, or CELL_FACH states:

3> indicate to upper layers to initiate a service request procedure [5] to receive the concerned MBMS service;

3> perform the cell update procedure with cause "MBMS ptp RB request", as specified in subclause 8.3.1.2, unless the UE has already requested p-t-p RB establishment in the current modification period.

1> if the IE "MBMS required UE action" is set to 'Release PTM RB':

2> stop receiving the concerned MBMS service;

2> if the UE is in a state other than CELL_DCH (for FDD) or if the UE is in Idle mode, URA_PCH or CELL_PCH state (for TDD); and

2> if the UE does not decide to receive an MBMS service for which a preferred frequency applies; and

2> if the IE ‘MBMS dispersion indicator’ is set to TRUE; and

2> if the variable MBMS_PREV_FREQUENCY_INFO is not empty:

3> if any frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO:

4> select a suitable UTRA cell in that frequency.

4> if no suitable UTRA cell in that frequency is found:

5> select a suitable UTRA cell in another frequency.

3> if no frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO.

4> select a frequency randomly among the inter-frequencies indicated in SIB11 or SIB12.

5> select a suitable UTRA cell in the selected frequency

5> if no suitable UTRA cell in the selected frequency is found:

6> select a suitable UTRA cell in another frequency.

3> clear the variable MBMS_PREV_FREQUENCY_INFO.

2> clear all service specific information applicable for the concerned service.

NOTE: The UE is only required to acquire the relevant SIB11 or SIB12, according to what is specified in subclauses 8.1.1.6.11 and 8.1.1.6.12.

…

1> if the UE performs cell update for MBMS ptp radio bearer request as specified in subclause 8.6.9.6; and

1> if one or more of the MBMS services for which the UE initiates the ptp radio bearer request concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates ptp radio bearer request:

3> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Short" before those selected with a lower priority;

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

Reference

3GPP TS 25.331, clauses 8.7.3.3.1, 8.6.9.6, 8.3.1.3.

8.5.2.2.3 Test purpose

To verify UE correctly handles the transfer mode change from MBMS PTM RB to MBMS PTP RB.

8.5.2.2.4 Method of test

Initial condition

System Simulator:

1 MBMS cell, Cell 21

User Equipment:

The UE is in Cell_FACH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No

Test procedure

1) The UE in Cell_FACH state, receives an MBMS MODIFIED SERVICES INFORMATION messages including IEs “MBMS required UE action” set to “Acquire PTM RB info”. The UE starts receiving the indicated p-t-m radio bearer.

2) The SS waits for the UE to start reception of the MBMS data on MTCH and then the MBMS radio bearer on MTCH is put into loopback mode 3.

3) The SS starts broadcasting MBMS data on MTCH on the new concerned MBMS radio bearer. The SS continues to transmit MBMS data for 5s and then the SS retreives the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The number of received RLC SDUs reported by the UE shall be at least one.

4) The UE receives an MBMS MODIFIED SERVICES INFORMATION message including IE “MBMS required UE action” set to “Request PTP RB” for the same concerned MBMS.

5) The UE releases the MBMS PTM RB and shall request a p-t-p RB establishment. The UE shall perform a cell_update procedure with cause “MBMS ptp RB request”.

6) The UE requests reception of the PTP service by transmitting a SERVICE REQUEST message.

7) The SS initiates establishment of a pt-p radio bearer by sending a RADIO BEARER SETUP message to the UE. The UE returns a RADIO BEARER SETUP COMPLETE to confirm that the p-t-p MBMS bearer is established.

8) SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in cell_FACH. |
| 0a | ← | | ACTIVATE RB TEST MODE | |
| 0b | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Acquire PTM RB info". |
| 2 | | | VOID | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 3 | | | VOID | |
| 4 | | | VOID | |
| 5 | → | | | The SS waits a few seconds for the UE to activate MTCH reception |
| 6 | ← | | CLOSE UE TEST LOOP | |
| 7 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 8 | ← | | | The SS broadcasts MBMS data 10 RLC SDUs of on MTCH on the concerned MBMS radio bearer. |
| 9 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | The SS checks that the UE has received MBMS data. |
| 10 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | |
| 11 | SS | | OPEN UE TEST LOOP | |
| 12 | ← | | OPEN UE TEST LOOP COMPLETE | |
| 13 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Request PTP RB”. |
| 14 | → | | CELL UPDATE | The UE transmits the message with cell update cause set to “MBMS ptp RB request” and with the “MBMS Selected Services Short” IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 15 | ← | | CELL UPDATE CONFIRM | RRC State Indicator is set to CELL-FACH |
| 16 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception”. |
| 17 | SS | | | SS transmits the SERVICE ACCEPT message to the UE. |
| 18 | ← | | RADIO BEARER SETUP | RRC State Indicator set to CELL-DCH |
| 19 | → | | RADIO BEARER SETUP COMPLETE | |
| 20 | → | | MBMS MODIFICATION REQUEST | |
| 21 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>MBMS required UE action | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>Acquire PTM RB info |

MBMS MODIFIED SERVICES INFORMATION (Step 13)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>MBMS required UE action | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>Request PTP RB |

CELL UPDATE (Step 14)

| Information Element | Value/remark |
|---|---|
| Cell update cause | MBMS ptp RB request |
| MBMS Selected Services | |
| - MBMS Selected Services | Only 1 entry |
| - MBMS Selected Service ID | MBMS short transmission identity referring to the service the UE has selected |
| - Modification period identity | Indicates the modification period the MBMS short transmission identities refer to |

RADIO BEARER SETUP (Step 18)

Use the same message as the one specified for "MBMS PtP" in TS 34.108 clause 9, with the condition B4.

MBMS MODIFICATION REQUEST (STEP 20)

| Information Element | Value/remark |
|---|---|
| MBMS Selected Service Info | |
| - CHOICE Status | Some |
| - MBMS Selected Services Full | |
| - MBMS Selected Service ID | |
| - MBMS Service ID | MBMS service ID of the activated MBMS service |
| - CHOICE PLMN identity | Check to see that one of the below choice element is present |
| - SameAs-MIB | (no data) |
| - explicitPLMN_Id | Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

#### 8.5.2.2.5 Test requirements

At step 11, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero.

At step 14, the UE shall send a CELL UPDATE message with Cell update cause set to “MBMS ptp RB request”.

At step 19, the UE shall transmit RADIO BEARER SETUP COMPLETE message.

### 8.5.2.2m MBMS PTM Session Reconfiguration - Transfer Mode Change to PTP / MBMS Multicast Service

#### 8.5.2.2m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.2.2m.2 Conformance requirement

Same conformance requirement as in clause 8.5.2.2.2.

#### 8.5.2.2m.3 Test purpose

Same test purpose as in clause 8.5.2.2.3.

#### 8.5.2.2m.4 Method of test

Initial condition

System Simulator:

1 MBMS cell, Cell 21.

User Equipment:

The UE is in Cell_FACH as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.2.2.4.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in cell_FACH. |
| 0a | ← | | ACTIVATE RB TEST MODE | |
| 0b | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Acquire PTM RB info". |
| 2 | ← | | MBMS GENERAL INFORMATION | |
| 3 | ← | | MBMS COMMON P-T-M RB INFORMATION | |
| 4 | ← | | MBMS CURRENT CELL P-T-M RB INFORMATION | |
| 5 | | | | The SS waits a few seconds for the UE to activate MTCH reception |
| 6 | ← | | CLOSE UE TEST LOOP | |
| 7 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 8 | ← | | | The SS broadcasts MBMS data 10 RLC SDUs of on MTCH on the concerned MBMS radio bearer. |
| 9 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | The SS checks that the UE has received MBMS data. |
| 10 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | |
| 11 | ← | | OPEN UE TEST LOOP | |
| 12 | → | | OPEN UE TEST LOOP COMPLETE | |
| 13 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Request PTP RB”. |
| 14 | → | | CELL UPDATE | The UE transmits the message with cell update cause set to “MBMS ptp RB request” and with the “MBMS Selected Services Short” IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 15 | ← | | CELL UPDATE CONFIRM | RRC State Indicator is set to CELL-FACH |
| 16 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Multicast service Reception”. |
| 17 | SS | | | SS transmits the SERVICE ACCEPT message to the UE. |
| 18 | ← | | RADIO BEARER SETUP | RRC State Indicator set to CELL-DCH |
| 19 | → | | RADIO BEARER SETUP COMPLETE | |
| 20 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails |

Specific message contents

Same specific messages contents as in clause 8.5.2.2.4 except for CELL UPDATE message content (step 14).

CELL UPDATE (Step 14)

| Information Element | Value/remark |
|---|---|
| Cell update cause | MBMS ptp RB request |

#### 8.5.2.2m.5 Test requirements

Same test requirement as in clause 8.5.2.2.5.

### 8.5.2.3 MBMS PTP Session Reconfiguration - Transfer mode change to PTM / MBMS Selected Service

#### 8.5.2.3.1 Definition

This test is applicable for all UEs that support MBMS broadcast services and capable of reading MCCH in CELL_DCH state.

#### 8.5.2.3.2 Conformance requirement

If the variable MBMS_ACTIVATED_SERVICES is not empty, the UE shall apply the MCCH acquisition procedure upon selecting (eg. upon power on) or re- selecting a cell supporting MBMS, upon change of MBMS controlling cell (eg. due to an active set update or hard handover), upon entering UTRA from another RAT, upon release of a MBMS PTP RB for the purpose of changing transfer mode, upon return from loss of coverage and upon receiving an indication from upper layers that the set of activated services has changed.

…

A UE entering CELL_DCH shall initiate the MBMS modification request procedure in the following cases:

1> if the UE has any MBMS Selected Service; and

1> if the IE "MCCH configuration information" was received in System Information Block Type 5 or System Information Block Type 5bis prior to entering CELL_DCH.

A UE completing an RRC Connection Setup procedure shall initiate the MBMS modification request procedure in the following cases:

1> if the UE has any MBMS Selected Service; and

1> if the IE "MCCH configuration information" was received in System Information Block Type 5 or System Information Block Type 5bis prior to completing the RRC Connection Setup procedure.

A UE in CELL_DCH shall initiate the MBMS modification request procedure in the following cases:

1> the preferred frequency applicable for the MBMS service prioritised by upper layers is different from the currently used frequency;

1> upper layers request to discontinue reception of an MBMS service provided via a p-t-p radio bearer e.g. because this inhibits reception of a higher priority service;

1> upon a change in selection of the MBMS Selected Services.

NOTE: The above case may occur upon receiving a dedicated notification or in other cases eg. a change of transfer mode from p-t-p to p-t-m for the UE's highest priority MBMS service.

…

If the IE "MBMS RB list released to change transfer mode" is included the UE shall:

1> perform the service prioritisation procedure as specified in subclause 8.5.26, taking into account that the MBMS service(s) for which the radio bearers are released will be provided via p-t-m radio bearer(s).

…

A UE in CELL_DCH shall initiate the MBMS modification request procedure in the following cases:

1> the preferred frequency applicable for the MBMS service prioritised by upper layers is different from the currently used frequency;

1> upper layers request to discontinue reception of an MBMS service provided via a p-t-p radio bearer e.g. because this inhibits reception of a higher priority service;

1> upon a change of the MBMS Selected Services.

NOTE: The above case may occur upon receiving a dedicated notification or in other cases eg. a change of transfer mode from p-t-p to p-t-m for the UE's highest priority MBMS service.

…

1> if the IE "MBMS required UE action" is set to 'Request PTP RB':

2> if the UE is in idle mode:

3> indicate to upper layers that establishment of a PS signalling connection is required to receive the concerned MBMS service [5], unless the UE has already requested p-t-p RB establishment in the current modification period, and use the establishment cause set to 'MBMS ptp RB request' in the RRC connection establishment procedure.

…

If the IE "MBMS RB list released to change transfer mode" is included the UE shall:

1> perform the service prioritisation procedure as specified in subclause 8.5.26, taking into account that the MBMS service(s) for which the radio bearers are released will be provided via p-t-m radio bearer(s).

Reference

3GPP TS 25.331 clauses 8.7.2.2, 8.7.6.2, 8.6.9.5, 8.6.9.6, 8.6.9.5.

### 8.5.2.3.3 Test purpose

To verify that the UE shall apply the MCCH acquisition procedure upon upon release of a MBMS PTP RB for the purpose of changing transfer mode.

### 8.5.2.3.4 Method of test

Initial condition

System Simulator: 1 MBMS cell, Cell 21.

User Equipment:

The UE has a valid IMSI.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No
- UE supports MCCH reception in CELL_DCH Yes/No

Test procedure

1) The UE camping on cell A, receives an MBMS MODIFIED SERVICES INFORMATION message including IE “MBMS required UE action” set to “Request PTP RB”.

2) The UE shall request a p-t-p RB establishment. The UE transmits a RRC CONNECTION REQUEST message including the IE "MBMS Selected Service ID"of the concerned MBMS selected services within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity".

3) Upon reception of the RADIO BEARER SETUP message, the UE shall establish this radio bearer. Then the UE transmits a RADIO BEARER SETUP COMPLETE message and start receiving the MBMS service provided by the p-t-p RB.

4) Upon reception of the RADIO BEARER RELEASE message including the IE “MBMS RB list released to change transfer mode”, the UE shall release the MBMS p-t-p radio bearer for the purpose of changing transfer mode.

5) The UE shall apply the MCCH acquisition procedure. The UE receives a MBMS UNMODIFIED SERVICES INFORMATION message with “MBMS required UE action” IE set to “Acquire PTM RB info”. The UE start receiving the indicated p-t-m radio bearer.

6) The SS waits for the UE to start reception of the MBMS data on MTCH and then the MBMS radio bearer on MTCH is put into loopback mode 3.

7) The SS starts broadcasting MBMS data on MTCH on the new concerned MBMS radio bearer. The SS continues to transmit MBMS data for 5s and then the SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The number of received RLC SDUs reported by the UE shall be at least one.

8) The loopback mode 3 in the UE is deactivated and SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | UE in Idle mode on Cell 21. |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB. |
| 2 | | | void | |
| 3 | | | void | |
| 4 | → | | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS ptp RB request” and with the “MBMS Selected Services Short” IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 5 | ← | | RRC CONNECTION SETUP | RRC state indicator set to Cell_FACH |
| 6 | → | | RRC CONNECTION SETUP COMPLETE | |
| 6a | → | | MBMS MODIFICATION REQUEST | The UE completing the RRC Connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after step 6 and before step 12 |
| 7 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception”. |
| 8 | ← | | SECURITY MODE COMMAND | |
| 9 | → | | SECURITY MODE COMPLETE | |
| 10 | ← | | RADIO BEARER SETUP | |
| 11 | → | | RADIO BEARER SETUP COMPLETE | |
| 12 | UE | | | The UE is receiving the MBMS service provided by the p-t-p RB. |
| 13 | ← | | RADIO BEARER RELEASE | IE "RAB information for MBMS ptp bearer list " with RAB information for MBMS Selected Service_1 |
| 14 | → | | RADIO BEARER RELEASE COMPLETE | the UE releases the MBMS p-t-p radio bearer for the purpose of changing transfer mode. |
| 15 | ← | | ACTIVATE RB TEST MODE | The SS activates the RB TEST MODE |
| 16 | → | | ACTIVATE RB TEST MODE COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 17 | SS | | | The following messages are sent on the next MP. |
| 18 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "Acquire PTM RB info". |
| 19 | | | void | |
| 20 | | | void | |
| 21 | | | void | |
| 22 | | | void | |
| 23 | SS | | | The SS waits a few seconds for the UE to activate MTCH reception |
| 24 | ← | | CLOSE UE TEST LOOP | |
| 25 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 26 | | | | The SS broadcasts MBMS data 10 RLC SDUs of on MTCH on the concerned MBMS radio bearer. |
| 27 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | The SS checks that the UE has received MBMS data. |
| 28 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | |
| 29 | ← | | OPEN UE TEST LOOP | |
| 30 | → | | OPEN UE TEST LOOP COMPLETE | |
| 31 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified services list<br>- MBMS Transmission identity<br>- MBMS required UE action | Only 1 entry<br>MBMS Transmission identity<br>Request PTP RB |

RRC CONNECTION REQUEST (Step 4)

| Information Element | Value/remark |
|---|---|
| Message type<br>Initial UE identity<br>Establishment Cause<br>Domain indicator<br>MBMS Selected Services<br>- MBMS Selected Services<br>- MBMS Selected Service ID<br>- Modification period identity | <br>Same as the registered TMSI or P-TMSI<br>MBMS ptp RB request<br>PS domain<br><br>Only 1 entry<br>MBMS short transmission identity referring to the service the UE has selected<br>Indicates the modification period the MBMS short transmission identities refer to |

RRC CONNECTION SETUP (Step 5)

| Information Element | Value/remark |
|---|---|
| Message type<br>Initial UE identity<br>RRC State Indicator | <br>Set to same value as received in Step 4<br>Cell_FACH |

MBMS MODIFICATION REQUEST (steps 6a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info | |
| - CHOICE Status | Some |
| - MBMS Selected Services Full | |
| - MBMS Selected Service ID | Only 1 entry |
| - MBMS Service ID | MBMS service ID of the activated MBMS service |
| - CHOICE PLMN identity | Check to see that one of the below choice element is present |
| - SameAs-MIB | (no data) |
| - explicitPLMN_Id | Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

RADIO BEARER SETUP (Step 10)

Use the same message as the one specified for "MBMS PtP" in TS 34.108 clause 9, with the condition B2.

RADIO BEARER RELEASE (Step 13)

| Information Element | Value/remark |
|---|---|
| MBMS RB list released to change transfer mode | Only 1 entry |
| - RB information to release | |
| - RB identity | RB identity for MBMS service1 provided via ptp RB |

MBMS MODIFIED SERVICES INFORMATION (Step 18)

| Information Element | Value/remark |
|---|---|
| Modified service list | Only 1 entry |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |

#### 8.5.2.3.5 Test requirements

At step 6, the UE shall send a RRC CONNECTION SETUP COMPLETE message.

At step 11, the UE shall send a RADIO BEARER SETUP COMPLETE message.

At step 14, the UE shall send a RADIO BEARER RELEASE COMPLETE message.

At step 28, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero.

### 8.5.2.3m MBMS PTP Session Reconfiguration - Transfer mode change to PTM / MBMS Multicast Service

#### 8.5.2.3m.1 Definition

This test is applicable for all UEs that support MBMS multicast services and capable of reading MCCH in CELL_DCH state.

#### 8.5.2.3m.2 Conformance requirement

Same conformance requirement as in clause 8.5.2.3.2

#### 8.5.2.3m.3 Test purpose

Same test purpose as in clause 8.5.2.3.3.

8.5.2.3m.4 Method of test

Initial condition

System Simulator:

1 MBMS cell

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.
- UE supports MCCH reception in CELL_DCH Yes/No

Test procedure

Same test procedure as in clause 8.5.2.2.4 except for the point 2:

2) The UE shall request a p-t-p RB establishment. The UE transmits a RRC CONNECTION REQUEST message.

Expected Sequence

Same expected sequence as in clause 8.5.2.3.4 except for RRC CONNECTION REQUEST message content (step 4) and MODIFICATION REQUEST procedure not required.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | UE in Idle mode on Cell 21. |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | |
| 2 | ← | | MBMS GENERAL INFORMATION | |
| 3 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB. |
| 4 | → | | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS ptp RB request” |
| 5 | ← | | RRC CONNECTION SETUP | RRC state indicator set to Cell_FACH |
| 6 | → | | RRC CONNECTION SETUP COMPLETE | |
| 7 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Multicast service Reception”. |
| 8 | ← | | SECURITY MODE COMMAND | |
| 9 | → | | SECURITY MODE COMPLETE | |
| 10 | ← | | RADIO BEARER SETUP | |
| 11 | → | | RADIO BEARER SETUP COMPLETE | |
| 12 | UE | | | The UE is receiving the MBMS service provided by the p-t-p RB. |
| 13 | ← | | RADIO BEARER RELEASE | IE "RAB information for MBMS ptp bearer list " with RAB information for MBMS Service_1 |
| 14 | → | | RADIO BEARER RELEASE COMPLETE | the UE releases the MBMS p-t-p radio bearer for the purpose of changing transfer mode. |
| 15 | ← | | ACTIVATE RB TEST MODE | The SS activates the RB TEST MODE |
| 16 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 17 | SS | | | The following messages are sent on the next MP. |
| 18 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Acquire PTM RB info". |
| 19 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 20 | ← | | MBMS GENERAL INFORMATION | |
| 21 | ← | | MBMS COMMON P-T-M RB INFORMATION | |
| 22 | ← | | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | |
| 23 | SS | | | The SS waits a few seconds for the UE to activate MTCH reception |
| 24 | ← | | CLOSE UE TEST LOOP | |
| 25 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 26 | | | | The SS broadcasts MBMS data 10 RLC SDUs of on MTCH on the concerned MBMS radio bearer. |
| 27 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | The SS checks that the UE has received MBMS data. |
| 28 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | |
| 29 | ← | | OPEN UE TEST LOOP | |
| 30 | → | | OPEN UE TEST LOOP COMPLETE | |
| 31 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

Same specific messages contents as in clause 8.5.2.3.4 except for RRC CONNECTION REQUEST message content (step 4).

RRC CONNECTION REQUEST (Step 4)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI |
| Establishment Cause | MBMS ptp RB request |
| Domain indicator | PS domain |

#### 8.5.2.3m.5 Test requirements

Same test requirement as in clause 8.5.2.3.5.

### 8.5.2.4 MBMS PTM Session Reconfiguration – MTCH data rate change / MBMS Broadcast Service

#### 8.5.2.4.1 Definition and applicability

This test case is applicable for all UEs that support MBMS broadcast services.

#### 8.5.2.4.2 Conformance requirement

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

The UE shall immediately acquire the MBMS ACCESS INFORMATION and the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

The UE may:

1> monitor the MBMS notification Indicator Channel (MICH);

1> if a notification on the MICH for one or more of the MBMS services included in the variable MBMS_ACTIVATED_SERVICES is detected:

2> acquire the MBMS MODIFIED SERVICES INFORMATION message with delaying the reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3;

2> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if not monitoring MICH:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3;

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5.

Reference

3GPP TS 25.331 clauses 8.7.2.3, 8.7.3.3.1, 8.6.9.6.

### 8.5.2.4.3 Test purpose

To verify that the UE shall receive the MBMS notification information while receiving an ongoing MBMS service via a p-t-m radio bearer, and apply the new p-t-m radio bearer configuration.

### 8.5.2.4.4 Method of test

Initial Condition

System Simulator:

1 MBMS cell.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No

Test Procedure

The UE is in the CELL_FACH state and has selected the broadcast service or joined the multicast service to be provided by the SS..

The SS notifies on MICH and MCCH about the start of an MBMS session. The SS waits for the UE to start reception of the MBMS data on MTCH.

The MBMS radio bearer on MTCH is put into loopback mode 3.

The SS sends 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer, then retrives the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The number of received RLC SDUs reported by the UE shall be at least one.

The SS then notifies on the MCCH the change in the MBMS session . The UE reconfigures the rabio bearer to new configuration. The SS sends 10 RLC SDUs of MBMS data on the MTCH on the concerned MBMS radio bearer, then retrives the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The number reported by the UE shall be one more than the value reported at the previous check.

The loopback mode 3 in the UE is deactivated.

SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | MBMS MODIFIED SERVICES INFORMATION | MBMS session start. The SS also sets the Notification Indicator on MICH. The SS waits for the UE to establish the MTCH.<br>SS: MCCH message combination C4 for 1 modification period, then combination C2 |
| 4 | ← | | MBMS COMMON P-T-M RB INFORMATION | UE begins reception of the MBMS service using the 259.2kbps radio bearer configuration as specified in TS 34.108 clause 6.10.2.4.3.7(FDD) or clause 6.11.5.4.4.7 (1.28 Mcps TDD). |
| 5 | ← | | CLOSE UE TEST LOOP | |
| 6 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 7 | SS | | | The SS broadcasts 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer. |
| 8 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 9 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than zero and records the value. |
| 10 | ← | | MBMS MODIFIED SERVICES INFORMATION | SS indicates a change in the MBMS Broadcast Service for Service ID 1 with MBMS p-t-m activation time set to the first TTI of the next modification period.<br>SS: MCCH message combination C4 for 1 modification period, then combination C2 |
| 11 | | | MBMS COMMON P-T-M RB INFORMATION | UE begins reception of the MBMS service using the 129.6kbps radio bearer configuration as specified in TS 34.108 clause 6.10.2.4.3.6(FDD) or clause 6.11.5.4.4.6 (1.28 Mcps TDD). |
| 12 | | | | The SS broadcasts 10 RLC SDUs of MBMS data on MTCH on the concerned MBMS radio bearer, starting at MBMS p-t-m activation time. |
| 13 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 14 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than the reported value at step 9, |
| 15 | ← | | OPEN UE TEST LOOP | |
| 16 | → | | OPEN UE TEST LOOP COMPLETE | |
| 17 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

MBMS MODIFIED SERVICES INFORMATION (Step 3)

| Information Element | Value/remark |
|---|---|
| Modified service list | |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |

MBMS MODIFIED SERVICES INFORMATION (Step 10)

| Information Element | Value/remark |
|---|---|
| Modified service list | |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |
| MBMS p-t-m activation time | Set to the first TTI of the next modification period. |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Step 9)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than zero. |

#### 8.5.2.4.5 Test requirement

At step 9 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

At step 14 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

Note For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the test runs without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at previous check.

### 8.5.2.4m MBMS PTM Session Reconfiguration – MTCH data rate change / MBMS Multicast Service

#### 8.5.2.4m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.2.4m.2 Conformance requirement

Same conformance requirement as in clause 8.52.4.2

#### 8.5.2.4m.3 Test purpose

Same test purpose as in clause 8.5.2.4.3

#### 8.5.2.4m.4 Method of test

Initial condition

System Simulator:

1 MBMS cell

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.2.4.4

Specific message contents

Same specific messages contents as in clause 8.5.2.4.4

#### 8.5.2.4m.5 Test requirements

Same test requirement as in clause 8.5.2.4.5

### 8.5.2.5 MBMS PTM Session Reconfiguration - MTCH Data Rate Change / MBSFN mode (3.84/7.68 Mcps TDD)

#### 8.5.2.5.1 Definition

This test is applicable for UEs that support MBMS broadcast services in MBSFN mode and which support either both TDD transmit and receive functions or TDD MBSFN receive only function.

#### 8.5.2.5.2 Conformance requirement

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

...

For cells operating in MBSFN mode as indicated in subclause 8.1.1.6.3 the UE shall immediately acquire the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise for cells operating in MBSFN mode as indicated in subclause 8.1.1.6.3, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

The UE may:

1> monitor the MBMS notification Indicator Channel (MICH);

1> if a notification on the MICH for one or more of the MBMS services included in the variable MBMS_ACTIVATED_SERVICES is detected:

2> acquire the MBMS MODIFIED SERVICES INFORMATION message with delaying the reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3;

2> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if not monitoring MICH during the current or the previous modification period:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4.

…

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

…

Upon completing the reception of the MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION messages for an activated MBMS service, the UE shall:

1> if the UE is already receiving an MTCH and does not have the capability to receive the new service in addition:

2> the UE behaviour is undefined.

NOTE: In this case, the UE may request upper layers to prioritise the services and only receive the service(s) prioritised by upper layers.

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;

1> if the UE previously received the service by means of a p-t-m radio bearer from a cell belonging to another MBMS cell group:

2> re-establish RLC;

2> re-initialise PDCP.

1> start immediately to use the indicated configuration unless specified otherwise;

1> start or continue receiving the indicated p-t-m radio bearers depending on its UE capabilities.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information i.e. the MBMS MODIFIED SERVICES INFORMATION message, MBMS UNMODIFIED SERVICES INFORMATION message, MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION message should be acquired in the same modification period.

Reference

3GPP TS 25.331 clauses 8.7.2.3, 8.7.3.3.1, 8.6.9.6, 8.7.5.3

### 8.5.2.5.3 Test purpose

To verify that the UE receives the MBMS notification information while receiving an ongoing MBMS service via a p-t-m radio bearer, and applies the new p-t-m radio bearer configuration.

8.5.2.5.4 Method of test

Initial condition

System Simulator:

- MBSFN carrier: 1 cell, Cell 31 (PLMN1). In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.
- Unicast carrier : 1 cell, Cell 1 with default parameters.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.
- The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected (i.e. it is included in MBMS_ACTIVATED_SERVICES variable) a national service for which a session will start on MBSFN Cell 31 (see TS 34.108 clause 11.2.4) during the test.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode application available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

a) The UE is camping on Cell 1 and Cell 31. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 (no session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

c) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on Cell 31 MTCH (Transmission identity indicating the MBMS activated service).

d) The SS notifies on MCCH about the start of an MBMS session for one modification period. MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C4 (one PTM session starting) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

e) MCCH messages are then transmitted by the SS on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

f) The UE establishes the p-t-m radio bearer for the activated service according to the specified service activation time (i.e. the first SFN of the modification period following the notification (step d). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

g) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the activated service. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

h) The SS shall then send UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The UE shall respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0. The SS shall store the counter value.

i) The SS notifies on MCCH about the modification of the MBMS session for one modification period. MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C4 (service modification indicated) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

j) MCCH messages are then transmitted by the SS on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

k) The UE reconfigures the p-t-m radio bearer for the activated service according to the received MBMS COMMON P-T-M RB INFORMATION at the specified service activation time (i.e. the first SFN of the modification period following the notification (step i).

l) The SS broadcasts 10 RLC SDUs on the modified MTCH configured on the MBMS p-t-m radio bearer for the activated service. The service is carried on a 497.6 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.11 (3.84 Mcps TDD) or clause 6.11.6.4.4.11 (7.68 Mcps TDD).

m) The SS shall then send UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The UE shall respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE corresponds to > 0 received RLC SDUs

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated on Cell 31 for the selected national service on MTCH. |
| 4 | ← | | M | MBMS MCCH Message Configuration C4 | Includes the national service activated at UE in the modified services list for one modification period. |
| 5 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. 124 kbps PS RAB |
| 6 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 7 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH starting at the indicated activation time. |
| 8 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 9 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs received on the MTCH is greater than zero. SS stores value. |
| 10 | ← | | M | MBMS MCCH Message Configuration C4 | Includes the ongoing national service in the modified services list for one modification period. New data rate is 496 kbps. |
| 11 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. |
| 12 | SS | | M | | The SS waits for the UE to reconfigure reception of the modified MTCH according to the activation time. Then the SS transmits 10 RLC SDUs on the MTCH. |
| 13 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 14 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 15 | ← | | U | OPEN UE TEST LOOP | |
| 16 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 17 | ← | | U | DEACTIVATE RB TEST MODE | |
| 18 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1 with the following exceptions:

There are no exceptions for this test case.

#### 8.5.2.5.5 Test requirements

1) After step 9, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0 for the service/session activated on the Cell 33 MTCH.

1) After step 14, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0 for the service/session activated on the Cell 33 MTCH.

## 8.5.3 MBMS Frequency Layer Convergence and Dispersion

### 8.5.3.1 MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in Idle mode / MBMS Selected Service

#### 8.5.3.1.1 Definition

This test is applicable for all UEs supporting MBMS broadcast services.

#### 8.5.3.1.2 Conformance requirement

The UE shall perform the MBMS frequency layer selection procedure upon receiving the IE "MBMS Preferred frequency information" or when specified explicitly e.g. as in subclause 8.6.9.2, or when the priority for an MBMS service as indicated by upper layers changes.

The UE shall:

1> if there exist two or more preferred frequencies for services included in variable MBMS_ACTIVATED_SERVICES:

2> request from upper layers the priorities of the different MBMS services included in variable MBMS_ACTIVATED_SERVICES for which a preferred frequency has been received.

1> if the UE is in idle mode:

2> if a preferred frequency layer applies for a service included in variable MBMS_ACTIVATED_SERVICES:

3> select the preferred frequency indicated for the MBMS service(s) prioritised most by upper layers for which a preferred frequency exists as the preferred frequency.

….

1> if a preferred frequency has been selected:

2> if the UE is not in CELL_DCH state:

3> apply the cell-reselection procedure as described in [4], using the received "MBMS Preferred frequency information" applicable to the selected frequency:

4> if HCS is not used, and the IE "Qoffmbms" is not present for the MBMS preferred frequency:

5> consider the cells on the MBMS preferred frequency having a Qoffmbms equal to "infinity".

4> if HCS is used, and the IE "HCS_OFFmbms" is not present for the MBMS preferred frequency:

5> consider the cells on the MBMS preferred frequency having the highest HCS priority level.

3> if the UE re-selects to a cell on the indicated preferred frequency:

4> if the UE is in CELL_FACH, CELL_PCH or URA_PCH:

5> act according to subclause 8.3.1.2.

4> store the frequency information of the frequency on which the UE was operating prior to cell-reselection to the preferred frequency in the variable MBMS_PREV_FREQUENCY_INFORMATION.

4> apply the MCCH acquisition procedure, as specified in subclause 8.7.2.

…

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

1> if the "MBMS required UE action" is set to 'None':

2> take no action with respect to this IE.

1> if the IE "MBMS required UE action" is set to 'Acquire counting info' or set to 'Acquire counting info– PTM RBs unmodified':

2> perform the MBMS counting procedure as specified in subclause 8.7.4;

NOTE: If upper layers indicate that an MBMS transmission has already been received correctly, the UE will continue as if the information about the concerned MBMS transmission was not included in the message. This implies that the UE does not respond to counting for a transmission already received correctly.

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

…

1> if the IE "MBMS required UE action" is set to 'Release PTM RB':

2> stop receiving the concerned MBMS service;

2> if the UE is in a state other than CELL_DCH (for FDD) or if the UE is in Idle mode, URA_PCH or CELL_PCH state (for TDD); and

2> if the UE does not decide to receive an MBMS service; and

2> if the variable MBMS_PREV_FREQUENCY_INFO is not empty:

3> if any frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO:

4> select a suitable UTRA cell in that frequency.

4> if no suitable UTRA cell in that frequency is found:

5> select a suitable UTRA cell in another frequency.

3> if no frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO.

4> select a frequency randomly among the inter-frequencies indicated in SIB11 or SIB12.

5> select a suitable UTRA cell in the selected frequency

5> if no suitable UTRA cell in the selected frequency is found:

6> select a suitable UTRA cell in another frequency.

3> clear the variable MBMS_PREV_FREQUENCY_INFO.

2> clear all service specific information applicable for the concerned service.

NOTE: The UE is only required to acquire the relevant SIB11 or SIB12, according to what is specified in subclauses 8.1.1.6.11 and 8.1.1.6.12.

…

If the UE is receiving an MBMS service that is not included in variable MBMS_ACTIVATED_SERVICES and that is using a p-t-m radio bearer, the UE shall:

1> stop receiving the concerned MBMS service and clear all service specific information applicable for the concerned service.

Upon completing the reception of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages, the UE shall

1> act as follows for each of the services included in these messages provided that the service is included in variable MBMS_ACTIVATED_SERVICES and upper layers indicate that the session has not yet been received correctly (referred to as 'applicable services');

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;

1> if one or more preferred frequency applies for the applicable services:

2> delay acting upon the "MBMS Preferred frequency information" until receiving the relevant MCCH information i.e. the MBMS GENERAL INFORMATION message;

2> act upon the "MBMS Preferred frequency information" as specified in subclause 8.6.9.4 for the service(s) that upper layers indicate to have highest priority.

1> perform MBMS frequency selection procedure as specified in subclause 8.5.27;

1> if the UE receives an MBMS service using a p-t-m radio bearer and the received messages do not contain an IE "MBMS required UE action" set to "Acquire PTM RB info" or set to "Acquire counting info– PTM RBs unmodified" for that service then the UE shall:

2> stop receiving the concerned MBMS service and clear all service specific information applicable for the concerned service.

…

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

1> otherwise if the UE performs connection establishment for MBMS counting as specified in subclause 8.7.4; and

1> if one or more of the MBMS services for which the UE initiates the counting response concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the counting response:

3> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Short" before those selected with a lower priority;

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

Reference

3GPP TS 25.331 clauses 8.5.27, 8.6.9.6, 8.7.2.4, 8.1.3.3.

#### 8.5.3.1.3 Test purpose

To verify that in idle mode, the UE at session start, re-selects to the preferred Frequency Layer for the MBMS services it has activated.

To verify that at session stop the UE re-selects to the frequency where it has previously camped.

#### 8.5.3.1.4 Method of test

##### Initial condition

System Simulator:

2 MBMS (Cell 21, Cell 24).

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

##### Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

##### Test procedure

The UE receives, at notification via MCCH, an MBMS MODIFIED SERVICES INFORMATION message including a preferred frequency in the IE “MBMS preferred frequency”.

The UE shall consider this frequency as the preferred frequency layer for cell re-selection and re-select to Cell 24 at session start for the MBMS service it has activated. The UE shall store the frequency information of the frequency on which the UE was operating prior to cell-reselection to the preferred frequency in the variable MBMS_PREV_FREQUENCY_INFORMATION.

The UE shall perform the MCCH acquisition procedure on the new cell.

The SS transmits an MBMS MODIFIED SERVICE INFORMATION message which includes in the “Modified service list” for the MBMS activated service “MBMS required UE action” set to “Acquire counting info” and MBMS ACCESS INFORMATION message, which includes the MBMS Short Transmission ID associated to the MBMS activated service and “Access probability factor – Idle” set to 0 (corresponds to an actual Probability Factor = 1).

The UE shall transmit an RRC CONNECTION REQUEST message, with “Establishment cause” set to “MBMS reception”. The SS transmits a RRC CONNECTION SETUP. The UE establishes an RRC connection and transmits an RRC CONNECTION SETUP COMPLETE message.

The UE receives an MBMS MODIFIED SERVICES INFORMATION message “MBMS required UE action” IE set to “Acquire PTM RB info”. The UE shall apply the MBMS p-t-m radio bearer configuration procedure to acquire the radio bearer configuration for the MBMS service provided by the SS.

The UE starts receiving the indicated p-t-m radio bearer.

The UE receives an MBMS MODIFIED SERVICES INFORMATION message with IE “MBMS required UE action” set to “Release PTM RB”. The UE shall stop receiving the concerned MBMS service. The variable MBMS_PREV_FREQUENCY_INFO is not empty, and any frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO, therefore the UE shall select Cell 21 (suitable UTRA cell in that frequency).

##### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| Step | Direction | | Message | Comments |
| | UE | SS | | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| Step | Direction | | Message | Comments |
| | UE | SS | | |
| 1 | | | | The UE is in Idle mode on cell 21. |
| 2 | ← | | MBMS MODIFIED SERVICES INFORMATION | Service_id = service activated "MBMS required UE action is set to "none (FLC)" and PFL index is set to the index of the frequency of f2 in the preferred frequency list in MBMS GENERAL INFORMATION. |
| 3 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information is set to f2. |
| 4 | | | | The UE re-selects to cell 24. The SS allows 2 modification periods for the UE to reselect before sending the following messages on cell 24. |
| 5 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "Acquire counting info". |
| 6 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 7 | ← | | MBMS ACCESS INFORMATION | "MBMS short transmission ID" IE set to 1, "Access probability factor – Idle" set to 0 (corresponding to the actual probability factor value 1). SS sends MBMS ACCESS INFORMATION throughout the modification period as defined in 34.108 clause 11.1.2 |
| 8 | → | | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to "MBMS reception" and in case of MBMS Selected service with the "MBMS Selected Services Short" IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 9 | ← | | RRC CONNECTION SETUP | |
| 10 | → | | RRC CONNECTION SETUP COMPLETE | |
| 10a | → | | MBMS MODIFICATION REQUEST | The UE completing the RRC connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure in case of MBMS Selected service. This message may be received at any point after step 10 and before step 12. |
| 11 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception". |
| 12 | ← | | RRC CONNECTION RELEASE | |
| 13 | → | | RRC CONNECTION RELEASE COMPLETE | The UE shall enter idle mode. |
| 14 | SS | | | The following MBMS messages sent on the MCCH will be received in the next Modification Period. |
| 15 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "Acquire PTM RB info". |
| 16 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 17 | SS | | | The following MBMS messages sent on the MCCH will be received in a new Modification Period. |
| 18 | ← | | VOID | |
| 19 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "Release PTM RB". |
| 20 | | | | The UE stops receiving the concerned MBMS service and reselects to Cell 21. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| Step | Direction | | Message | Comments |
| | UE | SS | | |
| 21 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in Idle Mode state, the test passes, otherwise it fails. |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| Modified service list | Only 1 entry |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | None (FLC) |
| - MBMS preferred frequency | |
| - PFL index | Index of the frequency of Cell 24 in the preferred frequency list |

MBMS GENERAL INFORMATION(Step 3)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information | Only 1 entry |
| MBMS preferred frequency list | |
| - MBMS preferred frequency | Value N corresponds with the $n^{th}$ frequency included in the IE New inter-frequency cells that is specified within SIB 11, corresponding to cell 24 frequency (f2). |
| - CHOICE Layer convergence information | No HCS |
| - Qoffmbms | Infinity |

MBMS MODIFIED SERVICES INFORMATION (Step 5)

| Information Element | Value/remark |
|---|---|
| Modified service list | Only 1 entry |
| -MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| -MBMS required UE action | Acquire counting info |
| - MBMS preferred frequency | - |
| - PFL index | Set to the index of the frequency of Cell 24 in the preferred frequency list |

MBMS GENERAL INFORMATION (Steps 6 and 16)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information | Only 1 entry |
| MBMS preferred frequency list | |
| - MBMS preferred frequency | Not present (indicates PFL is current cell frequency) |
| - CHOICE Layer convergence information | No HCS |
| - Qoffmbms | Infinity |

MBMS ACCESS INFORMATION (Step 7)

| Information Element | Value/remark |
|---|---|
| Service list | Only 1 entry |
| - MBMS short transmission ID | Index to the MBMS transmission identity in the previous MBMS MODIFIED SERVICES INFORMATION |
| - Access probability factor - Idle | 0 (corresponding to the actual probability factor value 1) |
| - Connected mode counting scope | |
| - URA_PCH | FALSE |
| - CELL_PCH | FALSE |
| - CELL_FACH | FALSE |

MBMS MODIFICATION REQUEST (steps 10a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info | |
| - CHOICE Status | Some |
| - MBMS Selected Services Full | |
| - MBMS Selected Service ID | Only 1 entry |
| - MBMS Service ID | MBMS service ID of the activated MBMS service |
| - CHOICE PLMN identity | Check to see that one of the below choice element is present |
| - SameAs-MIB | (no data) |
| - explicitPLMN_Id | Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

MBMS MODIFIED SERVICES INFORMATION (Step 15)

| Information Element | Value/remark |
|---|---|
| Modified service list | 1 |
| -MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| -MBMS required UE action | Acquire PTM RB info |
| - MBMS preferred frequency | - |
| - PFL index | Set to the index of the frequency of Cell 24 in the preferred frequency list |

MBMS MODIFIED SERVICES INFORMATION (Step 19)

| Information Element | Value/remark |
|---|---|
| Modified service list | 1 |
| -MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| -MBMS required UE action | 'Release PTM RB' |

#### 8.5.3.1.1.5 Test requirements

At step 8, the UE shall send an RRC CONNECTION REQUEST message on Cell 24 with Establishment cause set to “MBMS reception”.

At step 21, the test result of C.1 shall indicate that the UE is in idle mode on Cell 21.

### 8.5.3.1m MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in Idle mode / MBMS Multicast Service

#### 8.5.3.1m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.3.1m.2 Conformance requirement

Same conformance requirement as in clause 8.5.3.1.2

#### 8.5.3.1m.3 Test purpose

Same test purpose as in clause 8.5.3.1.3.

#### 8.5.3.1m.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21, Cell 24.

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.3.1.4, except that at step 11 UE transmits Service Request, with IE "Service type" set to "MBMS Multicast service Reception".

Specific message contents

Same specific messages contents as in clause 8.5.3.1.4

#### 8.5.3.1m.5 Test requirements

Same test requirement as in clause 8.5.3.1.5.

### 8.5.3.2 MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in CELL_PCH / MBMS Broadcast Service

#### 8.5.3.2.1 Definition

This test is applicable for all UEs supporting MBMS broadcast services.

#### 8.5.3.2.2 Conformance requirement

The UE shall perform the MBMS frequency layer selection procedure upon receiving the IE "MBMS Preferred frequency information", when specified explicitly e.g. as in subclause 8.6.9.2, or when the preferred MBMS service changes.

The UE shall:

1> if there exist two or more preferred frequencies for services included in variable MBMS_ACTIVATED_SERVICES:

2> request from upper layers the priorities of the different MBMS services included in variable MBMS_ACTIVATED_SERVICES for which a preferred frequency has been received.

1> if the UE is in idle mode:

2> if a preferred frequency layer applies for a service included in variable MBMS_ACTIVATED_SERVICES:

3> select the preferred frequency indicated for the MBMS service(s) prioritised most by upper layers for which a preferred frequency exists as the preferred frequency.

1> if the UE is in CELL_FACH, CELL_PCH or URA_PCH state; and

1> if there exists one or more preferred frequencies for services included in variable MBMS_ACTIVATED_SERVICES and the variable MBMS_PL_SERVICE_RESTRICTION_INFO_DEDICATED is set to FALSE:

2>if the IE "RAB information" in the variable ESTABLISHED_RABS is not empty:

3> if the current frequency is the frequency corresponding with the preferred frequency indicated for the MBMS service(s) prioritised most by upper layers for which a preferred frequency exists:

4> select the current frequency as the preferred frequency.

3> else:

4> if there exists one or more preferred frequencies for services included in variable MBMS_ACTIVATED_SERVICES for which the IE "MBMS PL Service Restriction Information" has not been received in the MBMS GENERAL INFORMATION message:

5> select the preferred frequency indicated for the MBMS service(s) prioritised most by upper layers for which a preferred frequency exists for which the IE "MBMS PL Service Restriction Information" has not been received in the MBMS GENERAL INFORMATION message as the preferred frequency.

2> else:

3> select the preferred frequency indicated for the MBMS service(s) prioritised most by upper layers for which a preferred frequency exists as the preferred frequency.

…

1> if a preferred frequency has been selected:

2> if the UE is not in CELL_DCH state:

3> apply the cell-reselection procedure as described in [4], using the received "MBMS Preferred frequency information" applicable to the selected frequency:

4> if HCS is not used, and the IE "Qoffmbms" is not present for the MBMS preferred frequency:

5> consider the cells on the MBMS preferred frequency having a Qoffmbms equal to "infinity".

4> if HCS is used, and the IE "HCS_OFFmbms" is not present for the MBMS preferred frequency:

5> consider the cells on the MBMS preferred frequency having the highest HCS priority level.

3> if the UE re-selects to a cell on the indicated preferred frequency:

4> if the UE is in CELL_FACH, CELL_PCH or URA_PCH:

5> act according to subclause 8.3.1.2.

4> store the frequency information of the frequency on which the UE was operating prior to cell-reselection to the preferred frequency in the variable MBMS_PREV_FREQUENCY_INFORMATION.

4> apply the MCCH acquisition procedure, as specified in subclause 8.7.2.

1> else:

2> if the UE is not in CELL_DCH state:

3> stop applying any "MBMS Preferred frequency information".

…

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

1> if the "MBMS required UE action" is set to 'None':

2> take no action with respect to this IE.

1> if the IE "MBMS required UE action" is set to 'Acquire counting info' or set to 'Acquire counting info– PTM RBs unmodified':

2> perform the MBMS counting procedure as specified in subclause 8.7.4;

NOTE: If upper layers indicate that an MBMS transmission has already been received correctly, the UE will continue as if the information about the concerned MBMS transmission was not included in the message. This implies that the UE does not respond to counting for a transmission already received correctly.

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

…

1> if the IE "MBMS required UE action" is set to 'Release PTM RB':

2> stop receiving the concerned MBMS service;

2> if the UE is in a state other than CELL_DCH (for FDD) or if the UE is in Idle mode, URA_PCH or CELL_PCH state (for TDD); and

2> if the UE does not decide to receive an MBMS service; and

2> if the variable MBMS_PREV_FREQUENCY_INFO is not empty:

3> if any frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO:

4> select a suitable UTRA cell in that frequency.

4> if no suitable UTRA cell in that frequency is found:

5> select a suitable UTRA cell in another frequency.

3> if no frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO.

4> select a frequency randomly among the inter-frequencies indicated in SIB11 or SIB12.

5> select a suitable UTRA cell in the selected frequency.

5> if no suitable UTRA cell in the selected frequency is found:

6> select a suitable UTRA cell in another frequency.

3> clear the variable MBMS_PREV_FREQUENCY_INFO.

2> clear all service specific information applicable for the concerned service.

NOTE: The UE is only required to acquire the relevant SIB11 or SIB12, according to what is specified in subclauses 8.1.1.6.11 and 8.1.1.6.12.

…

If the UE is receiving an MBMS service that is not included in variable MBMS_ACTIVATED_SERVICES and that is using a p-t-m radio bearer, the UE shall:

1> stop receiving the concerned MBMS service and clear all service specific information applicable for the concerned service.

Upon completing the reception of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages, the UE shall

1> act as follows for each of the services included in these messages provided that the service is included in variable MBMS_ACTIVATED_SERVICES and upper layers indicate that the session has not yet been received correctly (referred to as 'applicable services');

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;

1> if one or more preferred frequency applies for the applicable services:

2> delay acting upon the "MBMS Preferred frequency information" until receiving the relevant MCCH information i.e. the MBMS GENERAL INFORMATION message;

2> act upon the "MBMS Preferred frequency information" as specified in subclause 8.6.9.4 for the service(s) that upper layers indicate to have highest priority.

1> perform MBMS frequency selection procedure as specified in subclause 8.5.27;

1> if the UE receives an MBMS service using a p-t-m radio bearer and the received messages do not contain an IE "MBMS required UE action" set to "Acquire PTM RB info" or set to "Acquire counting info– PTM RBs unmodified" for that service then the UE shall:

2> stop receiving the concerned MBMS service and clear all service specific information applicable for the concerned service.

Reference

3GPP TS 25.331 clauses 8.5.27, 8.6.9.6, 8.7.2.4.

#### 8.5.3.2.3 Test purpose

To verify that in CELL_PCH, the UE at session start re-selects to the preferred Frequency Layer for the MBMS services it has activated.

To verify that at session stop the UE re-select to the frequency where it has previously camped.

#### 8.5.3.2.4 Method of test

Initial condition

System Simulator:

System Simulator: 2 MBMS cells, Cell21 and Cell24

User Equipment:

The UE is in CELL_PCH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

Test procedure

The UE receives, at notification via MCCH, an MBMS MODIFIED SERVICES INFORMATION message including a preferred frequency in the IE ”MBMS preferred frequency”.

The UE shall consider this frequency as the preferred frequency layer for cell re-selection and re-select to Cell 24 at session start for the MBMS service it has activated. The UE shall store the frequency information of the frequency on which the UE was operating prior to cell-reselection to the preferred frequency in the variable MBMS_PREV_FREQUENCY_INFORMATION.

The UE shall perform the MCCH acquisition procedure on the new cell.

The UE shall transmit a CELL UPDATE message on the uplink CCCH of Cell 24 and set IE "Cell update cause" to "cell reselection".

After the SS receives this message, it transmits a CELL UPDATE CONFIRM message to the UE on the downlink CCCH. The UE shall move to the CELL_PCH state as indicated by the IE "RRC State Indicator".

The UE receives a MBMS MODIFIED SERVICES INFORMATION message “MBMS required UE action” IE set to Acquire PTM RB info”. The UE shall apply the MBMS p-t-m radio bearer configuration procedure to acquire the radio bearer configuration for the MBMS services the UE has activated.

The UE start receiving the indicated p-t-m radio bearer.

The UE receives a MBMS MODIFIED SERVICES INFORMATION message with IE "MBMS required UE action" set to 'Release PTM RB'. The UE shall stop receiving the concerned MBMS service. The variable MBMS_PREV_FREQUENCY_INFO is not empty, and any frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO , therefore the UE shall select cell 21 (suitable UTRA cell in that frequency).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is in CELL_PCH on cell 21. |
| 2 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to “none” and the “MBMS preferred frequency” IE indicates the reference to f2. |
| 3 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information is set to f2. |
| 4 | UE | | | The UE re-selects to cell 24. |
| 5 | → | | CELL UPDATE | The CELL UPDATE message shall contain the value "Cell Update Cause" set to "cell reselection" |
| 6 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator is set to CELL_PCH. |
| 7 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Acquire PTM RB info". |
| 8 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 9 | | | VOID | |
| 10 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "Release PTM RB" |
| 11 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 12 | ← | | SYSTEM INFORMATION BLOCK TYPE 12<br>SYSTEM INFORMATION BLOCK TYPE 11 | The cell 24 contains cell 21 in SIB11 and SIB12. |
| 13 | UE | | | The UE stops receiving the concerned MBMS services and re-selects to cell 21. |
| 14 | → | | CELL UPDATE | The CELL UPDATE message shall contain the value "Cell Update Cause" set to "cell reselection" |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 15 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator is set to CELL_PCH. |
| 16 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>- MBMS required UE action<br>- MBMS preferred frequency<br>- PFL index | At least the entry including the activated service<br>MBMS Transmission identity indicating MBMS activated service<br>None<br><br>Index for f2 (the frequency that UEs shall consider as the preferred frequency layer for cell re-selection during a session for an MBMS service the UE has activated) |

MBMS GENERAL INFORMATION (Step 3)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information | |
| - MBMS preferred frequency list | Only 1 Entry |
| - CHOICE Layer convergence information | f2 (the frequency that UEs shall consider as the preferred frequency layer for cell re-selection during a session for an MBMS service the UE has activated) |

CELL UPDATE (Step 5 and 14)

Use the message sub-type in default message content defined in 3GPP TS 34.108 [9] clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Cell update cause | cell reselection |

CELL UPDATE CONFIRM (Step 6 and 15)

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 7 |

MBMS MODIFIED SERVICES INFORMATION (Step 7)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>- MBMS required UE action<br>- MBMS preferred frequency<br>- PFL index | At least the entry including the activated service<br>MBMS Transmission identity indicating MBMS activated service<br>Acquire PTM RB'<br>-<br>Set to the index of the frequency of Cell 24 in the preferred frequency list |

MBMS GENERAL INFORMATION (Steps 8 and 11)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information | Only 1 entry |
| MBMS preferred frequency list | |
| - MBMS preferred frequency | Not present (indicates PFL is current cell frequency) |
| - CHOICE Layer convergence information | No HCS |
| - Qoffmbms | Infinity |

MBMS MODIFIED SERVICES INFORMATION (Step 10)

| Information Element | Value/remark |
|---|---|
| Modified service list | At least the entry including the activated service |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | 'Release PTM RB' |

#### 8.5.3.2.5 Test requirements

At step 5, the UE shall perform the cell update procedure using the cause value “MBMS reception” set to “cell reselection” on cell 24.

At step 14, the UE shall perform the cell update procedure using the cause value “MBMS reception” set to “cell reselection” on cell 21.

At step 16, the procedure C.4 shall verify that the UE is in CELL_PCH state.

### 8.5.3.2m MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in CELL_PCH / MBMS Multicast Service

#### 8.5.3.2m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.3.2m.2 Conformance requirement

Same conformance requirement as in clause 8.5.3.2.2

#### 8.5.3.2m.3 Test purpose

Same test purpose as in clause 8.5.3.2.3.

#### 8.5.3.2m.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21, Cell 24.

User Equipment:

The UE is in CELL_PCH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.3.2.4.

Specific message contents

Same specific messages contents as in clause 8.5.3.2.4

8.5.3.2m.5 Test requirements

Same test requirement as in clause 8.5.3.2.5.

## 8.5.3.3 MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in CELL_FACH / MBMS Broadcast Service

### 8.5.3.3.1 Definition

This test is applicable for all UEs supporting MBMS broadcast services.

### 8.5.3.3.2 Conformance requirement

The UE shall perform the MBMS frequency layer selection procedure upon receiving the IE "MBMS Preferred frequency information", when specified explicitly e.g. as in subclause 8.6.9.2, or when the preferred MBMS service changes.

The UE shall:

1> if there exist two or more preferred frequencies for services included in variable MBMS_ACTIVATED_SERVICES:

2> request from upper layers the priorities of the different MBMS services included in variable MBMS_ACTIVATED_SERVICES for which a preferred frequency has been received.

1> if the UE is in idle mode:

2> if a preferred frequency layer applies for a service included in variable MBMS_ACTIVATED_SERVICES:

3> select the preferred frequency indicated for the MBMS service(s) prioritised most by upper layers for which a preferred frequency exists as the preferred frequency.

1> if the UE is in CELL_FACH, CELL_PCH or URA_PCH state; and

1> if there exists one or more preferred frequencies for services included in variable MBMS_ACTIVATED_SERVICES and the variable MBMS_PL_SERVICE_RESTRICTION_INFO_DEDICATED is set to FALSE:

2>if the IE "RAB information" in the variable ESTABLISHED_RABS is not empty:

3> if the current frequency is the frequency corresponding with the preferred frequency indicated for the MBMS service(s) prioritised most by upper layers for which a preferred frequency exists:

4> select the current frequency as the preferred frequency.

3> else:

4> if there exists one or more preferred frequencies for services included in variable MBMS_ACTIVATED_SERVICES for which the IE "MBMS PL Service Restriction Information" has not been received in the MBMS GENERAL INFORMATION message:

5> select the preferred frequency indicated for the MBMS service(s) prioritised most by upper layers for which a preferred frequency exists for which the IE "MBMS PL Service Restriction Information" has not been received in the MBMS GENERAL INFORMATION message as the preferred frequency.

2> else:

3> select the preferred frequency indicated for the MBMS service(s) prioritised most by upper layers for which a preferred frequency exists as the preferred frequency.

…

1> if a preferred frequency has been selected:

2> if the UE is not in CELL_DCH state:

3> apply the cell-reselection procedure as described in [4], using the received "MBMS Preferred frequency information" applicable to the selected frequency:

4> if HCS is not used, and the IE "Qoffmbms" is not present for the MBMS preferred frequency:

5> consider the cells on the MBMS preferred frequency having a Qoffmbms equal to "infinity".

4> if HCS is used, and the IE "HCS_OFFmbms" is not present for the MBMS preferred frequency:

5> consider the cells on the MBMS preferred frequency having the highest HCS priority level.

3> if the UE re-selects to a cell on the indicated preferred frequency:

4> if the UE is in CELL_FACH, CELL_PCH or URA_PCH:

5> act according to subclause 8.3.1.2.

4> store the frequency information of the frequency on which the UE was operating prior to cell-reselection to the preferred frequency in the variable MBMS_PREV_FREQUENCY_INFORMATION.

4> apply the MCCH acquisition procedure, as specified in subclause 8.7.2.

1> else:

2> if the UE is not in CELL_DCH state:

3> stop applying any "MBMS Preferred frequency information".

…

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

1> if the "MBMS required UE action" is set to 'None':

2> take no action with respect to this IE.

1> if the IE "MBMS required UE action" is set to 'Acquire counting info' or set to 'Acquire counting info– PTM RBs unmodified':

2> perform the MBMS counting procedure as specified in subclause 8.7.4;

NOTE: If upper layers indicate that an MBMS transmission has already been received correctly, the UE will continue as if the information about the concerned MBMS transmission was not included in the message. This implies that the UE does not respond to counting for a transmission already received correctly.

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

…

1> if the IE "MBMS required UE action" is set to 'Release PTM RB':

2> stop receiving the concerned MBMS service;

2> if the UE is in a state other than CELL_DCH (for FDD) or if the UE is in Idle mode, URA_PCH or CELL_PCH state (for TDD); and

2> if the UE does not decide to receive an MBMS service; and

2> if the variable MBMS_PREV_FREQUENCY_INFO is not empty:

3> if any frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO:

4> select a suitable UTRA cell in that frequency.

4> if no suitable UTRA cell in that frequency is found:

5> select a suitable UTRA cell in another frequency.

3> if no frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO.

4> select a frequency randomly among the inter-frequencies indicated in SIB11 or SIB12.

5> select a suitable UTRA cell in the selected frequency.

5> if no suitable UTRA cell in the selected frequency is found:

6> select a suitable UTRA cell in another frequency.

3> clear the variable MBMS_PREV_FREQUENCY_INFO.

2> clear all service specific information applicable for the concerned service.

NOTE: The UE is only required to acquire the relevant SIB11 or SIB12, according to what is specified in subclauses 8.1.1.6.11 and 8.1.1.6.12.

…

If the UE is receiving an MBMS service that is not included in variable MBMS_ACTIVATED_SERVICES and that is using a p-t-m radio bearer, the UE shall:

1> stop receiving the concerned MBMS service and clear all service specific information applicable for the concerned service.

Upon completing the reception of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages, the UE shall

1> act as follows for each of the services included in these messages provided that the service is included in variable MBMS_ACTIVATED_SERVICES and upper layers indicate that the session has not yet been received correctly (referred to as 'applicable services');

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;

1> if one or more preferred frequency applies for the applicable services:

2> delay acting upon the "MBMS Preferred frequency information" until receiving the relevant MCCH information i.e. the MBMS GENERAL INFORMATION message;

2> act upon the "MBMS Preferred frequency information" as specified in subclause 8.6.9.4 for the service(s) that upper layers indicate to have highest priority.

1> perform MBMS frequency selection procedure as specified in subclause 8.5.27;

1> if the UE receives an MBMS service using a p-t-m radio bearer and the received messages do not contain an IE "MBMS required UE action" set to "Acquire PTM RB info" or set to "Acquire counting info– PTM RBs unmodified" for that service then the UE shall:

2> stop receiving the concerned MBMS service and clear all service specific information applicable for the concerned service.

Reference

3GPP TS 25.331 clauses 8.5.27, 8.6.9.6, 8.7.2.4.

8.5.3.3.3 Test purpose

To verify that in CELL_FACH, the UE at session start re-selects to the preferred Frequency Layer for the MBMS services it has activated.

To verify that at session stop the UE re-select to the one of the frequencies indicated in the System Information.

8.5.3.3.4 Method of test

Initial condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24 and Cell 27

**Table 8.5.3.3-1**

| Parameter | Unit | Cell 21 | Cell 24 | Cell 27 |
|---|---|---|---|---|
| UTRA RF Channel Number | | f1 | f2 | f3 |
| Test Frequency ID | | Mid Range | High Range | Low Range |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | -66 | -66 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -66 | -66 |

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

Test procedure

SS broadcasts SYSTEM INFORMATION BLOCK TYPE 11 with FACH Measurement Occasion details on Cell 21. The UE receives, at notification via MCCH, an MBMS MODIFIED SERVICES INFORMATION message including a preferred frequency in the IE "MBMS preferred frequency".

The UE shall consider this frequency as the preferred frequency layer for cell re-selection and re-select to Cell 24 at session start for the MBMS service it has activated. The UE shall store the frequency information of the frequency on which the UE was operating prior to cell-reselection to the preferred frequency in the variable MBMS_PREV_FREQUENCY_INFORMATION.

The UE shall perform the MCCH acquisition procedure on the new cell.

The UE shall transmit a CELL UPDATE message on the uplink CCCH of Cell 24 and set IE "Cell update cause" to "cell reselection".

After the SS receives this message, it transmits a CELL UPDATE CONFIRM message to the UE on the downlink CCCH. The UE shall stay in CELL_FACH state as indicated by the IE "RRC State Indicator".

The UE receives a MBMS MODIFIED SERVICES INFORMATION message “MBMS required UE action” IE set to Acquire PTM RB info”. The UE shall apply the MBMS p-t-m radio bearer configuration procedure to acquire the radio bearer configuration for the MBMS services the UE has activated.

The UE starts receiving the indicated p-t-m radio bearer and in order to check this, loop back mode 3 is used.

The UE receives a MBMS MODIFIED SERVICES INFORMATION message with IE "MBMS required UE action" set to 'Release PTM RB'. The UE shall stop receiving the concerned MBMS service. The variable MBMS_PREV_FREQUENCY_INFO is not empty. The frequencies in SIB11 or SIB12 are different from the frequency stored in the variable MBMS_PREV_FREQUENCY_INFO therefore the UE shall select Cell 27 (suitable UTRA cell in the indicated frequency) even if Cell 21 is present.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is in CELL_FACH on Cell 21. |
| 1a | ← | | SYSTEM INFORMATION BLOCK TYPE 11 | SS transmits modified SIB 11, with contents given in specific message contents. |
| 2 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to “none” and the “MBMS preferred frequency” IE indicates the f2. |
| 3 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information is set to f2. |
| 4 | UE | | | The UE re-selects to Cell 24. |
| 5 | → | | CELL UPDATE | The CELL UPDATE message shall contain the value "Cell Update Cause" set to "cell reselection" |
| 6 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator is set to CELL_FACH. |
| 6a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 7 | ← | | ACTIVATE RB TEST MODE | The SS activates the RB TEST MODE |
| 8 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 9 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Acquire PTM RB info". |
| 10 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 11 | ← | | CLOSE UE TEST LOOP | The SS closes the Loop back mode 3 on MTCH. |
| 12 | → | | CLOSE UE TEST LOOP COMPLETE | |
| 13 | SS | | | The SS starts to broadcast MBMS data on MTCH on the concerned MBMS radio bearer. The SS transmits 10 RLC SDUs on the MTCH.. |
| 14 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 15 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data. |
| 16 | ← | | OPEN UE TEST LOOP | |
| 17 | → | | OPEN UE TEST LOOP COMPLETE | |
| 18 | ← | | SYSTEM INFORMATION BLOCK TYPE 11 | Sent on cell 24, with Cell 27, but not the frequency of cell 21 in the neighbour list. |
| 19 | ← | | SYSTEM INFORMATION BLOCK TYPE 4 | Sent on cell 27. $Qhyst1_s$ is set to 12dB in SIB4, to prevent reselection from this cell. |
| 20 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Release PTM RB”. The UE stops receiving the concerned MBMS services and re-selects to Cell 27 |
| 21 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 22 | → | | CELL UPDATE | The CELL UPDATE message shall contain the value "Cell Update Cause" set to "cell reselection" |
| 23 | ← | | CELL UPDATE CONFIRM | "RRC State Indicator is set to CELL_FACH. |
| 23a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 24 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific message contents

SYSTEM INFORMATION BLOCK TYPE 11 (Step 1a)(FDD)

Use the message sub-type in default message content defined in 3GPP TS 34.108 clause 6.1.4 for Cell 21, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | TRUE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| Modified service list | At least the entry including the activated service |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | None |
| - MBMS preferred frequency | |
| - PFL index | Index for f2 (the frequency that UEs shall consider as the preferred frequency layer for cell re-selection during a session for an MBMS service the UE has activated) |

MBMS GENERAL INFORMATION (Step 3)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information | |
| - MBMS preferred frequency list | Only 1 Entry |
| - CHOICE Layer convergence information | f2 (the frequency that UEs shall consider as the preferred frequency layer for cell re-selection during a session for an MBMS service the UE has activated) |

CELL UPDATE (Step 5 and 22)

| Information Element | Value/remark |
|---|---|
| Cell update cause | cell reselection |

CELL UPDATE CONFIRM (Step 6 and 23)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

MBMS MODIFIED SERVICES INFORMATION (Step 9)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>- MBMS required UE action<br>- MBMS preferred frequency<br>- PFL index | At least the entry including the activated service<br>MBMS Transmission identity indicating MBMS activated service<br>'Acquire PTM RB'<br>-<br>Set to the index of the frequency of Cell 24 in the preferred frequency list |

MBMS GENERAL INFORMATION (Steps 10 and 21)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information<br>MBMS preferred frequency list<br>- MBMS preferred frequency<br>- CHOICE Layer convergence information<br>- Qoffmbms | Only 1 entry<br><br>Not present (indicates PFL is current cell frequency)<br>No HCS<br>Infinity |

SYSTEM INFORMATION BLOCK TYPE 11 (Step 18)(FDD)

Use the message sub-type in default message content defined in 3GPP TS 34.108 [9] clause 6.1.4 for Cell 24, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| **- Inter-frequency measurement system information**<br>…..<br>- Inter frequency cell id<br>- Frequency info<br><br>- Cell info<br><br><br><br><br>- Inter frequency cell id<br>- Frequency info<br>- Cell info<br><br><br><br><br>- Inter frequency cell id<br>- Frequency info<br>- Cell info<br><br>- Inter frequency cell id<br>- Frequency info<br>- Cell info | <br><br>27<br>Same content as specified for Inter-frequency cell id=7 in SIB11 for Cell 7 in clause 6.1.4.2<br>Same content as specified for Intra-frequency cell id=7 in SIB11 for Cell 1 in clause 6.1.0b with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.27 (TDD)" in clause 6.1.4.3<br>28<br>Not present<br>Same content as specified for Intra-frequency cell id=8 in SIB11 for Cell 1 in clause 6.1.0b with the exception that value for Primary scrambling code shall be according to clause titled "Default settings for cell No.28 (TDD)" in clause 6.1.4.3<br>7<br>Not Present<br>Same content as specified for Inter-frequency cell id=7 in SIB11 for Cell 1 in clause 6.1.0b<br>8<br>Not present<br>Same content as specified for Inter-frequency cell id=8 in SIB11 for Cell 1 in clause 6.1.0b |

SYSTEM INFORMATION BLOCK TYPE 11 (Step 18)(1.28Mcps TDD)

Use the message sub-type in default message content defined in 3GPP TS 34.108 [9] clause 6.1.4 for Cell 24, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| **- Inter-frequency measurement system information**<br>…..<br>- New inter-frequency cells<br>- Inter-frequency cell id<br>- Frequency info<br>- UARFCN | <br><br>1<br><br>Low Range |

SYSTEM INFORMATION BLOCK TYPE 4 (Step 19)

Use the message sub-type in default message content defined in 3GPP TS 34.108 [9] clause 6.1.4 for Cell 27, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Cell selection and re-selection info | |
| - $Qhyst1_S$ | 6 (12dB) |

MBMS MODIFIED SERVICES INFORMATION (Step 20)

| Information Element | Value/remark |
|---|---|
| Modified service list | At least the entry including the activated service |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | 'Release PTM RB' |

#### 8.5.3.3.5 Test requirements

At step 5, the UE shall perform the cell update procedure on cell 24 using the cause value “cell reselection” set to “cell reselection”.

At step 15, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message and the number of reported RLC SDUs shall be greater than zero.

At step 22, the UE shall perform the cell update procedure on cell 27 using the cause value “cell reselection”.

At step 24 the procedure C.2 shall verify that the UE is in CELL_FACH state.

### 8.5.3.3m MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in CELL_FACH / MBMS Multicast Service

#### 8.5.3.3m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.3.3m.2 Conformance requirement

Same conformance requirement as in clause 8.5.3.3.2

#### 8.5.3.3m.3 Test purpose

Same test purpose as in clause 8.5.3.3.3.

#### 8.5.3.3m.4 Method of test

Initial condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24 and Cell 27.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.3.3.4.

Specific message contents

Same specific messages contents as in clause 8.5.3.3.4

8.5.3.3m.5 Test requirements

Same test requirement as in clause 8.5.3.3.5.

## 8.5.3.4 MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (Idle Mode) / MBMS Broadcast Service

### 8.5.3.4.1 Definition

This test is applicable for all UEs supporting MBMS broadcast services.

### 8.5.3.4.2 Conformance requirement

1> if the IE "MBMS required UE action" is set to 'Release PTM RB':

2> stop receiving the concerned MBMS service;

2> if the UE is in a state other than CELL_DCH (for FDD) or if the UE is in Idle mode, URA_PCH or CELL_PCH state (for TDD); and

2> if the UE does not decide to receive an MBMS service; and

2> if the variable MBMS_PREV_FREQUENCY_INFO is not empty:

3> if any frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO:

4> select a suitable UTRA cell in that frequency.

4> if no suitable UTRA cell in that frequency is found:

5> select a suitable UTRA cell in another frequency.

3> if no frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO.

4> select a frequency randomly among the inter-frequencies indicated in SIB11 or SIB12.

5> select a suitable UTRA cell in the selected frequency

5> if no suitable UTRA cell in the selected frequency is found:

6> select a suitable UTRA cell in another frequency.

3> clear the variable MBMS_PREV_FREQUENCY_INFO.

2> clear all service specific information applicable for the concerned service.

NOTE: The UE is only required to acquire the relevant SIB11 or SIB12, according to what is specified in subclauses 8.1.1.6.11 and 8.1.1.6.12.

Reference

3GPP TS 25.331 clause 8.6.9.6.

### 8.5.3.4.3 Test purpose

To verify that in idle mode state, the UE performs frequency layer dispersion procedure at session stop, when no suitable cell in the previously stored frequency is found.

8.5.3.4.4 Method of test

Initial condition

System Simulator: 3 MBMS cells (Cell 21, Cell 24 and Cell 27), with the downlink transmission power shown in column marked "T0" in table 8.5.3.5-1.

User Equipment:

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No

Test procedure

Table 8.5.3.4-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1 are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.5.3.4-1**

| Parameter | Unit | Cell 21 | | Cell 24 | | Cell 27 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | | Low Range Test Frequency | |
| LAC | | 0001 | | 0002 | | 0003 | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | OFF | -70 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -70 | -70 | -70 | -60 |

Method C is applied (as described and used in clause 6 of TS 34.123-1).

The SS activates Cell 21, Cell 24 and Cell 27 and monitors them for access requests from the UE. The UE is in idle mode on Cell 21.The UE receives, at notification via MCCH, an MBMS MODIFIED SERVICES INFORMATION message including a preferred frequency in the IE" MBMS preferred frequency".

The UE shall consider this frequency as the preferred frequency layer for cell re-selection. The SS waits for random access requests from the UE. The UE moves to Cell 24 at session start for the concerned MBMS service. The UE shall store the frequency information of the frequency on which the UE was operating prior to cell-reselection to the preferred frequency in the variable MBMS_PREV_FREQUENCY_INFORMATION.

The UE shall perform the MCCH acquisition procedure on the new cell.

The UE receives an MBMS MODIFIED SERVICES INFORMATION message with the "MBMS required UE action" IE set to "Acquire PTM RB info". The UE shall apply the MBMS p-t-m radio bearer configuration procedure to acquire the radio bearer configuration for the MBMS service provided by the SS.

The UE starts receiving the indicated p-t-m radio bearer.

SS reconfigures itself according to the settings stated in column "T1" of table 8.5.3.4-1. The SS waits to see if there are any random access requests from the UE. The UE receives a MBMS MODIFIED SERVICES INFORMATION message with IE "MBMS required UE action" is set to 'Release PTM RB'. The UE shall stop receiving the concerned MBMS service. The variable MBMS_PREV_FREQUENCY_INFO is not empty, and no frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO. The SS waits for random access requests from the UE. The UE shall select Cell 27 (suitable UTRA).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE is in Idle mode on Cell 21. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 2 | ← | | MBMS MODIFIED SERVICES INFORMATION | Service_id = service activated<br>"MBMS required UE action is set to "none (FLC)". |
| 3 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information is set to f4. |
| 4 | | | | The SS waits for random access requests from the UE. The UE shall respond on Cell 24, a GMM registration procedure is performed. |
| 5 | | | | The following MBMS messages sent on the MCCH will be received in the next Modification Period. |
| 6 | ← | | MBMS MODIFIED SERVICES INFORMATION | |
| 7 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "Acquire PTM RB info". |
| 8 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 9 | | | | UE starts receiving the indicated p-t-m radio bearer |
| 10 | | SS | | The SS reconfigures itself according to the settings stated in column "T1" of table 8.5.3.4-1. |
| 11 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "Release PTM RB". |
| 12 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 13 | | | | The UE stops receiving the concerned MBMS services.<br>The SS waits for random access requests from the UE. The UE shall respond on Cell 27, a GMM registration procedure is performed. |
| 14 | ←→ | | CALL C.1 | If the test result of C.1 indicates that UE is in Idle Mode state, the test passes, otherwise it fails. |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>- MBMS required UE action<br>- MBMS preferred frequency<br>- PFL index | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>None (FLC)<br><br>index of the frequency of Cell 24 in the preferred frequency list |

MBMS GENERAL INFORMATION (Step 3)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information | |
| MBMS preferred frequency list<br>- MBMS preferred frequency | <br>Value N corresponds with the $n^{th}$ frequency included in the IE New inter-frequency cells that is specified within SIB 11, corresponding to cell 24 frequency. |

MBMS UNMODIFIED SERVICES INFORMATION (Step 7)

| Information Element | Value/remark |
|---|---|
| Modified service list | Only 1 entry |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |
| - MBMS preferred frequency | - |
| - PFL index | index of the frequency of Cell 24 in the preferred frequency list |

MBMS GENERAL INFORMATION (Steps 8 and 12)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information | Only 1 entry |
| MBMS preferred frequency list | |
| - MBMS preferred frequency | Not present (indicates PFL is current cell frequency) |
| - CHOICE Layer convergence information | No HCS |
| - Qoffmbms | infinity |

MBMS MODIFIED SERVICES INFORMATION (Step 11)

| Information Element | Value/remark |
|---|---|
| Modified service list | Only 1 entry |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | 'Release PTM RB' |

#### 8.5.3.4.5 Test requirements

At step 4, the UE shall respond on Cell 24.

At step 13, the UE shall respond on Cell 27.

At step 14 the procedure C.1 shall verify that the UE is in Idle Mode.

### 8.5.3.4m MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (Idle Mode) / MBMS Multicast Service

#### 8.5.3.4m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.3.4m.2 Conformance requirement

Same conformance requirement as in clause 8.5.3.4.2

#### 8.5.3.4m.3 Test purpose

Same test purpose as in clause 8.5.3.4.3.

#### 8.5.3.4m.4 Method of test

Initial condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24 and Cell 27.

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.3.4.4.

Specific message contents

Same specific messages contents as in clause 8.5.3.4.4

#### 8.5.3.4m.5 Test requirements

Same test requirement as in clause 8.5.3.4.5.

### 8.5.3.5 MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (URA_PCH) / MBMS Broadcast Service

#### 8.5.3.5.1 Definition

This test is applicable for allUEs supporting MBMS broadcast services.

#### 8.5.3.5.2 Conformance requirement

1> if the IE "MBMS required UE action" is set to 'Release PTM RB':

2> stop receiving the concerned MBMS service;

2> if the UE is in a state other than CELL_DCH (for FDD) or if the UE is in Idle mode, URA_PCH or CELL_PCH state (for TDD); and

2> if the UE does not decide to receive an MBMS service; and

2> if the variable MBMS_PREV_FREQUENCY_INFO is not empty:

3> if any frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO:

4> select a suitable UTRA cell in that frequency.

4> if no suitable UTRA cell in that frequency is found:

5> select a suitable UTRA cell in another frequency.

3> if no frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO.

4> select a frequency randomly among the inter-frequencies indicated in SIB11 or SIB12.

5> select a suitable UTRA cell in the selected frequency

5> if no suitable UTRA cell in the selected frequency is found:

6> select a suitable UTRA cell in another frequency.

3> clear the variable MBMS_PREV_FREQUENCY_INFO.

2> clear all service specific information applicable for the concerned service.

NOTE: The UE is only required to acquire the relevant SIB11 or SIB12, according to what is specified in subclauses 8.1.1.6.11 and 8.1.1.6.12.

Reference

3GPP TS 25.331, clause 8.6.9.6

#### 8.5.3.5.3 Test purpose

To verify UE performs frequency layer dispersion procedure at session stop in URA_PCH state, when no suitable cell in the previously stored frequency is found.

#### 8.5.3.5.4 Method of test

##### Initial condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24 and Cell 27

User Equipment:

The UE is in URA_PCH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

##### Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No

##### Test procedure

Table 8.5.3.5-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1 are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.5.3.5-1**

| Parameter | Unit | Cell 21 | | Cell 24 | | Cell 27 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | | Low Range Test Frequency | |
| URA ID | | URA-ID 1 | | URA-ID 2 | | URA-ID 3 | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | OFF | -70 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -70 | -70 | -70 | -60 |

The UE is in URA_PCH state on cell 21. SS indicates on MICH and modifies the MCCH to indicate the start of the service which the UE has activated. The UE moves to cell 24 with a cell update and begins reception of the MBMS service using the 64.8kbps radio bearer configuration as specified in TS 34.108 clause 6.10.2.4.3.5. The SS reconfigures itself according to the settings stated in column "T1" of table 8.5.3.5-1. The SS terminates the MBMS service with an indication that the UE should perform frequency layer dispersion. The UE moves to cell 27 with a cell update.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION (Cell 21) | SS indicates availability of the MBMS broadcast or multicast service on cell 24. (Preferred frequency for this service is set to the index of the frequency of Cell 24 in the preferred frequency list)<br><br>SS: MCCH message combination C4 for 1 modification period, then combination C2. |
| 2 | ← | | MBMS GENERAL INFORMATION (Cell 21) | MBMS Qoffset for the preferred frequency for this service set to infinity) |
| 3 | → | | URA UPDATE | UE reselects to cell 24. URA Update cause = "change of URA" |
| 4 | ← | | URA UPDATE CONFIRM | RRC State indicator = URA_PCH |
| 5 | ← | | MBMS UNMODIFIED SERVICES INFORMATION (Cell 24) | UE begins reception of the MBMS service using the 64.8kbps radio bearer configuration as specified in TS 34.108 clause 6.10.2.4.3.5.<br><br>SS: MCCH message combination C2. |
| 6 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 7 | | | | SS reconfigures itself according to the settings stated in column "T1" of table 8.5.3.5-1. |
| 8 | ← | | MBMS MODIFIED SERVICES INFORMATION (Cell 24) | The SS terminates the MBMS service with an indication to perform frequency layer dispersion.<br><br>SS: MCCH message combination C4 for 1 modification period. |
| 9 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 10 | → | | URA UPDATE | UE reselects to cell 27. URA Update cause = "change of URA" |
| 11 | ← | | URA UPDATE CONFIRM | RRC State indicator = URA_PCH |
| 12 | ←→ | | CALL C.5 | If the test result of C.5 indicates that UE is in URA_PCH state, the test passes, otherwise it fails |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

SYSTEM INFORMATION BLOCK TYPE 2

Cell 21:

| Information Element | Value/remark |
|---|---|
| - URA identity list<br>- URA identity | <br>0000 0000 0000 0001B |

Cell 24:

| Information Element | Value/remark |
|---|---|
| - URA identity list<br>- URA identity | <br>0000 0000 0000 0010B |

Cell 27:

| Information Element | Value/remark |
|---|---|
| - URA identity list<br>- URA identity | <br>0000 0000 0000 0011B |

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| MBMS required UE action | None |
| MBMS preferred frequency<br>- PFL index | <br>Set to the index of the frequency of Cell 24 in the preferred frequency list |

MBMS GENERAL INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency list<br>MBMS preferred frequency<br><br><br>Layer convergence information<br>MBMS Qoffset | <br>Value N corresponds with the $n^{th}$ frequency included in the IE New inter-frequency cells that is specified within SIB 11, corresponding to cell 24 frequency.<br>No HCS<br>Infinity |

URA UPDATE (Steps 3 and 10)

| Information Element | Value/remark |
|---|---|
| U-RNTI<br>- SRNC Identity<br>- S-RNTI<br>URA Update Cause | <br>Check to see if set to '0000 0000 0001'<br>Check to see if set to '0000 0000 0000 0000 0001'<br>Check to see if set to 'change of URA' |

URA UPDATE CONFIRM (Steps 4 and 11)

| Information Element | Value/remark |
|---|---|
| UTRAN DRX cycle length coefficient | 7 |

MBMS UNMODIFIED SERVICES INFORMATION (Step 5)

| Information Element | Value/remark |
|---|---|
| MBMS Transmission identity<br><br>MBMS required UE action<br>MBMS preferred frequency<br>- PFL index | MBMS Transmission identity indicating MBMS activated service<br>Acquire PTM RB info<br><br>Set to the index of the frequency of Cell 24 in the preferred frequency list |

MBMS GENERAL INFORMATION (Steps 6 and 9)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information<br>MBMS preferred frequency list<br>- MBMS preferred frequency<br>- CHOICE Layer convergence information<br>- Qoffmbms | Only 1 entry<br><br>Not present (indicates PFL is current cell frequency)<br>No HCS<br>infinity |

MBMS MODIFIED SERVICES INFORMATION (Step 8)

| Information Element | Value/remark |
|---|---|
| MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| MBMS required UE action | Release PTM RB |

#### 8.5.3.5.5 Test requirements

At step 3, the UE performs URA update on cell 24.

At step 10, the UE performs URA update on cell 27.

### 8.5.3.5m MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (URA_PCH) / MBMS Multicast Service

#### 8.5.3.5m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.3.5m.2 Conformance requirement

Same conformance requirement as in clause 8.5.3.5.2

#### 8.5.3.5m.3 Test purpose

Same test purpose as in clause 8.5.3.5.3.

#### 8.5.3.5m.4 Method of test

Initial condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24 and Cell 27.User Equipment:

The UE is in URA_PCH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.3.5.4.

Specific message contents

Same specific messages contents as in clause 8.5.3.5.4

#### 8.5.3.5m.5 Test requirements

Same test requirement as in clause 8.5.3.5.5.

### 8.5.3.6 MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (CELL_FACH) / MBMS Broadcast Service

#### 8.5.3.6.1 Definition

This test is applicable for all UEs supporting MBMS broadcast services.

#### 8.5.3.6.2 Conformance requirement

1> if the IE "MBMS required UE action" is set to 'Release PTM RB':

2> stop receiving the concerned MBMS service;

2> if the UE is in a state other than CELL_DCH (for FDD) or if the UE is in Idle mode, URA_PCH or CELL_PCH state (for TDD); and

2> if the UE does not decide to receive an MBMS service; and

2> if the variable MBMS_PREV_FREQUENCY_INFO is not empty:

3> if any frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO:

4> select a suitable UTRA cell in that frequency.

4> if no suitable UTRA cell in that frequency is found:

5> select a suitable UTRA cell in another frequency.

3> if no frequency in SIB11 or SIB12 has the same frequency stored in the variable MBMS_PREV_FREQUENCY_INFO.

4> select a frequency randomly among the inter-frequencies indicated in SIB11 or SIB12.

5> select a suitable UTRA cell in the selected frequency

5> if no suitable UTRA cell in the selected frequency is found:

6> select a suitable UTRA cell in another frequency.

3> clear the variable MBMS_PREV_FREQUENCY_INFO.

2> clear all service specific information applicable for the concerned service.

NOTE: The UE is only required to acquire the relevant SIB11 or SIB12, according to what is specified in subclauses 8.1.1.6.11 and 8.1.1.6.12.

Reference

3GPP TS 25.331, clause 8.6.9.6.

### 8.5.3.6.3 Test purpose

To verify UE performs frequency layer dispersion procedure at session stop in CELL_FACH state, when no suitable cell in the previously stored frequency is found.

### 8.5.3.6.4 Method of test

Initial condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24 and Cell 27.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No

Test procedure

Table 8.5.3.6-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1 are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.5.3.6-1**

| Parameter | Unit | Cell 21 | | Cell 24 | | Cell 27 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | | Low Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | OFF | -70 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | OFF | -70 | -70 | -70 | -60 |

The UE is in CELL_FACH state on cell 21. The SS broadcasts SYSTEM INFORMATION BLOCK TYPE 11 with FACH Measurement Occasion details on Cell 21. SS indicates on MICH and modifies the MCCH to indicate the start of the service which the UE has activated. The UE moves to cell 24 with a cell update and begins reception of the MBMS service using the 64.8kbps radio bearer configuration as specified in TS 34.108 clause 6.10.2.4.3.5. The SS reconfigures itself according to the settings stated in column "T1" of table 8.5.3.6-1. The SS terminates the MBMS service with an indication that the UE should perform frequency layer dispersion. The UE moves to cell 27 with a cell update.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ← | | SYSTEM INFORMATION BLOCK TYPE 11 | SS transmits modified SIB 11, with contents given in specific message contents. |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION (Cell 21) | SS indicates availability of the MBMS broadcast or multicast service on Cell 24. (Preferred frequency for this service is set to the index of the frequency of Cell 24 in the preferred frequency list)<br><br>SS: MCCH message combination C4 for 1 modification period, then combination C2. |
| 2 | ← | | MBMS GENERAL INFORMATION (Cell 21) | MBMS Qoffset for the preferred frequency for this service set to infinity |
| 3 | → | | CELL UPDATE | UE reselects to Cell 24. Cell Update cause = “Cell reselection” |
| 4 | ← | | CELL UPDATE CONFIRM | RRC State indicator = CELL_FACH |
| 4a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 5 | ← | | MBMS UNMODIFIED SERVICES INFORMATION (Cell 24) | UE begins reception of the MBMS service using the 64.8kbps radio bearer configuration as specified in TS 34.108 clause 6.10.2.4.3.5.<br><br>SS: MCCH message combination C2. |
| 6 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 7 | | | | SS reconfigures itself according to the settings stated in column "T1" of table 8.5.3.6-1. |
| 8 | ← | | MBMS MODIFIED SERVICES INFORMATION (Cell 24) | The SS terminates the MBMS service.<br><br>SS: MCCH message combination C4 for 1 modification period. |
| 9 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 10 | → | | CELL UPDATE | UE reselects to Cell 27. Cell Update cause = “Cell reselection” |
| 11 | ← | | CELL UPDATE CONFIRM | RRC State indicator = CELL_FACH |
| 11a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |

| | | | |
|---|---|---|---|
| 12 | ←→ | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

SYSTEM INFORMATION BLOCK TYPE 11 (Step 0)(FDD)

Use the message sub-type in default message content defined in 3GPP TS 34.108 clause 6.1.4 for Cell 21, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion info | |
| - FACH Measurement occasion cycle length coefficient | 3 |
| - Inter-frequency FDD measurement indicator | TRUE |
| - Inter-frequency TDD measurement indicator | FALSE |
| - Inter-RAT measurement indicators | Not Present |

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| MBMS required UE action | None |
| MBMS preferred frequency | |
| - PFL index | Set to the index of the frequency of Cell 24 in the preferred frequency list |

MBMS GENERAL INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency list | |
| MBMS preferred frequency | Value N corresponds with the $n^{th}$ frequency included in the IE New inter-frequency cells that is specified within SIB 11, corresponding to Cell 24 frequency. |
| Layer convergence information | No HCS |
| MBMS Qoffset | Infinity |

MBMS UNMODIFIED SERVICES INFORMATION (Step 5)

| Information Element | Value/remark |
|---|---|
| MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| MBMS required UE action | Acquire PTM RB info |
| MBMS preferred frequency | |
| - PFL index | Set to the index of the frequency of Cell 24 in the preferred frequency list |

MBMS GENERAL INFORMATION (Steps 6 and 9)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information | Only 1 entry |
| MBMS preferred frequency list | |
| - MBMS preferred frequency | Not present (indicates PFL is current cell frequency) |
| - CHOICE Layer convergence information | No HCS |
| - Qoffmbms | infinity |

MBMS MODIFIED SERVICES INFORMATION (Step 8)

| Information Element | Value/remark |
|---|---|
| MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| MBMS required UE action | Release PTM RB |

CELL UPDATE (Step 3 and 10)

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | 'Cell Reselection' |

CELL UPDATE CONFIRM (Step 4 and 11)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

#### 8.5.3.6.5 Test requirements

At step 3, the UE performs cell update on cell 24.

At step 10, the UE performs cell update on cell 27.

### 8.5.3.6m MBMS Session Stop with Frequency Layer Dispersion - no previous frequency layer available (CELL_FACH) / MBMS Multicast Service

#### 8.5.3.6m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.3.6m.2 Conformance requirement

Same conformance requirement as in clause 8.5.3.6.2

#### 8.5.3.6m.3 Test purpose

Same test purpose as in clause 8.5.3.6.3.

#### 8.5.3.6m.4 Method of test

Initial condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24 and Cell 27

User Equipment:

The UE is in CLL_FACH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.3.6.4.

Specific message contents

Same specific messages contents as in clause 8.5.3.6.4

8.5.3.6m.5 Test requirements

Same test requirement as in clause 8.5.3.6.5.

## 8.5.4 MBMS Modification Request

### 8.5.4.1 Transmission of the MBMS Selected Services Information when entering RRC connected mode and CELL_DCH state / MBMS Selected Service

#### 8.5.4.1.1 Definition

This test is applicable for all UEs that support MBMS broadcast services.

#### 8.5.4.1.2 Conformance requirement

A UE entering CELL_DCH shall initiate the MBMS modification request procedure in the following cases:

1> if the UE has any MBMS Selected Service; and

1> if the IE "MCCH configuration information" was received in System Information Block Type 5 or System Information Block Type 5bis prior to entering CELL_DCH.

A UE completing an RRC Connection Setup procedure shall initiate the MBMS modification request procedure in the following cases:

1> if the UE has any MBMS Selected Service; and

1> if the IE "MCCH configuration information" was received in System Information Block Type 5 or System Information Block Type 5bis prior to completing the RRC Connection Setup procedure.

…

The UE shall set the contents of the MBMS MODIFICATION REQUEST message as follows:

1> if there is a change in selection of one or more of the MBMS Selected Services:

2> if the UE has not selected any MBMS Selected Service:

3> include the MBMS Selected Service Info and set the Status to 'None'.

2> otherwise:

3> include the MBMS Selected Service Info and set the Status to 'Some'.

3> for each MBMS Selected Service:

4> include the MBMS Selected Service ID.

Reference

3GPP TS 25.331 clauses 8.7.6.2, 8.7.6.2a.

#### 8.5.4.1.3 Test purpose

1. To verify that when the list of MBMS Selected Services is not empty, the UE sends the MBMS Selected Services Information to the network when entering RRC connected mode.
2. To verify that when the list of MBMS Selected Services is not empty, the UE sends the MBMS Selected Services Information to the network when entering CELL_DCH state.

8.5.4.1.4 Method of test

Initial condition

System Simulator:

1 MBMS cell.

User Equipment:

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes / No

Test procedure

The UE is in idle mode and has selected MBMS Service 1. The UE performs an outgoing call to setup a PS service. After the RRC connection establishment, the UE transmits an MBMS MODIFICATION REQUEST message containing the selected service to the SS.

Then the SS transmits a PHYSICAL CHANEL RECONFIGURATION message to move the UE to CELL_DCH state. After entering CELL_DCH state, the UE transmits an MBMS MODIFICATION REQUEST message containing the selected service to the SS.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | → | | RRC CONNECTION REQUEST | |
| 2 | ← | | RRC CONNECTION SETUP | |
| 3 | → | | RRC CONNECTION SETUP COMPLETE | |
| 4 | → | | MBMS MODIFICATION REQUEST | This message may be received at any point after step 3 but before step 10. |
| 5 | | | VOID | |
| 6 | ← | | SECURITY MODE COMMAND | |
| 7 | → | | SECURITY MODE COMPLETE | |
| 8 | ← | | RADIO BEARER SETUP | |
| 9 | → | | RADIO BEARER SETUP COMPLETE | |
| 10 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 11 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE enters CELL_DCH state |
| 12 | → | | MBMS MODIFICATION REQUEST | |

Specific message contents

RRC CONNECTION SETUP (Step 2)

Use the message sub-type titled “Transition to CELL_FACH” in TS 34.108 clause 9.

MBMS MODIFICATION REQUEST (steps 4 and 12)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info<br>- CHOICE Status<br>- MBMS Selected Services Full<br>- MBMS Selected Service ID<br>- MBMS Service ID<br>- CHOICE PLMN identity<br>- SameAs-MIB<br>- explicitPLMN_Id | <br>Some<br><br><br>MBMS service ID of the activated MBMS service<br>Check to see that one of the below choice element is present<br>(no data)<br>Check to see if it is set to the same value as "PLMN ID” in the Master Information block transmitted for the current serving cell. |

RADIO BEARER SETUP (Step 8)

Use the message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in 34.108 clause 9.PHYSICAL CHANNEL RECONFIGURATION (Step 10)

Use the message sub-type titled "Packet to CELL_DCH from CELL_FACH in PS" in 34.108 clause 9.

#### 8.5.4.1.5 Test requirements

After step 3, the UE shall transmit an MBMS MODIFICATION REQUEST message.

After step 11, the UE shall transmit an MBMS MODIFICATION REQUEST message.

### 8.5.4.2 Modification of the MBMS Selected Services list whilst in URA_PCH & Cell_FACH / MBMS Selected Service

#### 8.5.4.2.1 Definition

This test is applicable for Rel-6 UEs supporting MBMS broadcast services.

#### 8.5.4.2.2 Conformance requirement

A UE in CELL_FACH, CELL_PCH or URA_PCH state shall initiate the MBMS modification request procedure in the following cases:

1> upon a change of the MBMS Selected Services; and

1> if the IE "Indicate changes in MBMS Selected Services" that is included in the MBMS GENERAL INFORMATION message is set to TRUE.

If the UE is required to initiate the MBMS modification request procedure as specified in the conditions above, the UE shall:

1> transmit an MBMS MODIFICATION REQUEST message with the contents as specified in subclause 8.7.6.2a.

The UE shall set the contents of the MBMS MODIFICATION REQUEST message as follows:

1> if the preferred frequency applicable for the MBMS service prioritised by upper layers is different from the currently used frequency:

2> include the IE "MBMS preferred frequency request" and set it to the prioritised MBMS service identity.

1> if upper layers request to discontinue reception of an MBMS service provided via a p-t-p radio bearer:

2> include the p-t-p radio bearers used for the corresponding MBMS services within the IE "MBMS RB list requested to be released".

1> if the UE enters CELL_DCH; or

1> if the UE completes the RRC connection establishment procedure; or

1> if there is a change in selection of one or more of the MBMS Selected Services:

2> if the UE has not selected any MBMS Selected Service:

3> include the MBMS Selected Service Info and set the Status to 'None'.

2> otherwise:

3> include the MBMS Selected Service Info and set the Status to 'Some'.

3> for each MBMS Selected Service:

4> include the MBMS Selected Service ID.

Reference

3GPP TS 25.331, clauses 8.7.6.2, 8.7.6.2a.

#### 8.5.4.2.3 Test purpose

To verify that when a UE is in URA_PCH the introduction of a MBMS Service ID onto the MCCH does not trigger the UE to send a update to the network.

To verify that when the list of MBMS Selected Services is modified in the UE in URA_PCH or CELL_FACH, when the network indicates it should do so (in the MBMS General Information message), the UE informs the network that the MBMS selected Services have changed.

To verify that when the list of MBMS Selected Services is modified in the UE in CELL_FACH, when the network indicates it should not update the network (in the MBMS General Information message), ensure that the UE does not inform the network that the MBMS selected Services have changed.

#### 8.5.4.2.4 Method of test

Initial condition

System Simulator:

1 MBMS cell.

User Equipment:

The UE is in URA_PCH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes / No

Test procedure

a) The MCCH on Cell 21 is modified to indicate the availability of service 1, and the Notification Indicator on MICH corresponding to service 1 is set. The IE “MBMS re- acquire MCCH” that is included in MBMS MODIFIED SERVICES INFORMATION is set to TRUE. The IE "Indicate changes in MBMS Selected Services" that is included in the MBMS GENERAL INFORMATION message is set to TRUE. The SS starts service 1 using the 64.8kbps radio bearer configuration as specified in TS 34.108 clause 6.10.2.4.3.5.

b) The SS verifies for 1 complete modification period that the UE does not perform a Cell Update or send MBMS MODIFICATION REQUEST.

c) Service 1 is removed from the UE selected services.

d) The UE performs a Cell Update, indicating “Uplink data transmission”. The Cell Update Confirm message moves the UE to CELL_FACH state.

e) The UE transmits MBMS MODIFICATION REQUEST indicating the list of selected services (Status = “None”).

f) Service 1 is added to the UE selected services.

g) The UE transmits MBMS MODIFICATION REQUEST indicating the list of selected services (service 1).

h) The MCCH on Cell 21 is modified, and the Notification Indicator on MICH corresponding to service 1 is set. The IE “MBMS re- acquire MCCH” that is included in MBMS MODIFIED SERVICES INFORMATION is set to TRUE. The IE "Indicate changes in MBMS Selected Services" that is included in the MBMS GENERAL INFORMATION message is set to FALSE.

i) After 1 complete modification period, service 1 is removed from the UE selected services.

j) The SS verifies for 1 complete modification period that the UE does not perform a Cell Update and/or send MBMS MODIFICATION REQUEST.

k) Service 1 is added to the UE selected services.

l) The SS verifies for 1 complete modification period that the UE does not perform a Cell Update and/or send MBMS MODIFICATION REQUEST.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE state in Cell 21 is: URA_PCH<br><br>UE: Service 1 only is selected. |
| 2 | ← | | MBMS MODIFIED SERVICES INFORMATION | SS indicates the availability of the MBMS broadcast service 1.<br><br>'MBMS re- acquire MCCH' = TRUE<br><br>SS: MCCH message combination C4 for 1 modification period, then combination C2. |
| 3 | ← | | MBMS GENERAL INFORMATION | 'Indicate changes in MBMS Selected Services' = TRUE |
| 4 | | | | SS verifies for 1 complete modification period that the UE does not send MBMS MODIFICATION REQUEST. |
| 5 | | | | Service 1 is removed from the UE selected services. |
| 6 | → | | CELL UPDATE | |
| 7 | ← | | CELL UPDATE CONFIRM | The UE shall move to CELL_FACH state |
| 7a | → | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 8 | → | | MBMS MODIFICATION REQUEST | MBMS Selected Service Info: Status = 'None'. |
| 9 | | | | Service 1 is added to the UE selected services. |
| 10 | → | | MBMS MODIFICATION REQUEST | MBMS Selected Service Info: Status = 'Some'. MBMS Selected Service ID = 5 |
| 11 | ← | | MBMS MODIFIED SERVICES INFORMATION | SS indicates a change in MBMS broadcast service 1.<br><br>SS: MCCH message combination C4 for 1 modification period, then combination C2. |
| 12 | ← | | MBMS GENERAL INFORMATION | 'Indicate changes in MBMS Selected Services' = FALSE |
| 13 | | | | After 1 complete modification period, the UE removes service 1 from the selected services. |
| 14 | | | | SS verifies that the UE does not send MBMS MODIFICATION REQUEST or Cell Update. |
| 15 | | | | After 1 complete modification period, the UE adds service 1 to the selected services. |
| 16 | | | | SS verifies that the UE does not send MBMS MODIFICATION REQUEST or Cell Update. |

Specific message contents

MBMS MODIFIED SERVICES INFORMATION (Step 2)

The same message found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br>- MBMS Service ID<br>- MBMS Session ID<br>- MBMS required UE action<br>- Continue MCCH reading | <br><br>'000005'<br>1<br>Acquire PTM RB Info<br>FALSE |
| MBMS re- acquire MCCH | TRUE |

MBMS GENERAL INFORMATION (Step 3)

The same message found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Indicate changes in MBMS Selected Services | TRUE |

CELL UPDATE (Step 6)

The same message found in TS 34.108 clause 9 shall be transmitted by the UE on the uplink CCCH, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | Check to see if set to ‘uplink data transmission’ |

CELL UPDATE CONFIRM (Step 7)

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

MBMS MODIFICATION REQUEST (STEP 8)

| Information Element | Value/remark |
|---|---|
| MBMS Selected Service Info<br>- CHOICE Status | <br>None |

MBMS MODIFICATION REQUEST (STEP 10)

| Information Element | Value/remark |
|---|---|
| MBMS Selected Service Info<br>- CHOICE Status<br>- MBMS Selected Services<br>- MBMS Selected Service ID<br>- CHOICE PLMN identity<br><br>- SameAs-MIB<br>- explicitPLMN_Id | <br>Some<br><br>‘000005’<br>Check to see that one of the below choice element is present<br>(no data)<br>Check to see if it is set to the same value as "PLMN ID” in the Master Information block transmitted for the current serving cell. |

MBMS MODIFIED SERVICES INFORMATION (Step 11)

The same message found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br>- MBMS Service ID<br>- MBMS Session ID<br>- MBMS required UE action<br>- Continue MCCH reading | <br><br>‘000005’<br>1<br>None<br>FALSE |
| MBMS re- acquire MCCH | TRUE |

MBMS GENERAL INFORMATION (Step 12)

The same message found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Indicate changes in MBMS Selected Services | FALSE |

#### 8.5.4.2.5 Test requirements

In steps b, j, and l the UE shall not send MBMS MODIFICATION REQUEST.

In step e the UE shall transmit MBMS GENERAL INFORMATION indicating the list of selected services (Status = "None").

In step g the UE shall transmit MBMS GENERAL INFORMATION indicating the list of selected services (Status = "Some", MBMS Selected Service ID = '000005').

### 8.5.4.3 Testing of the MBMS Selected Services indication from the network whilst in CELL_DCH / MBMS Selected Service

#### 8.5.4.3.1 Definition

This test is applicable for Rel-6 UEs supporting MBMS broadcast services and MBMS p-t-m reception in CELL_DCH state.

#### 8.5.4.3.2 Conformance requirement

A UE in CELL_DCH shall initiate the MBMS modification request procedure in the following cases:

1> the preferred frequency applicable for the MBMS service prioritised by upper layers is different from the currently used frequency;

1> upper layers request to discontinue reception of an MBMS service provided via a p-t-p radio bearer e.g. because this inhibits reception of a higher priority service;

1> upon a change in selection of the MBMS Selected Services.

NOTE: The above case may occur upon receiving a dedicated notification or in other cases eg. a change of transfer mode from p-t-p to p-t-m for the UE's highest priority MBMS service.

...

If the UE is required to initiate the MBMS modification request procedure as specified in the conditions above, the UE shall:

1> transmit an MBMS MODIFICATION REQUEST message with the contents as specified in subclause 8.7.6.2a.

The UE shall set the contents of the MBMS MODIFICATION REQUEST message as follows:

1> if the preferred frequency applicable for the MBMS service prioritised by upper layers is different from the currently used frequency:

2> include the IE "MBMS preferred frequency request" and set it to the prioritised MBMS service identity.

1> if upper layers request to discontinue reception of an MBMS service provided via a p-t-p radio bearer:

2> include the p-t-p radio bearers used for the corresponding MBMS services within the IE "MBMS RB list requested to be released".

1> if the UE enters CELL_DCH; or

1> if the UE completes the RRC connection establishment procedure; or

1> if there is a change in selection of one or more of the MBMS Selected Services:

2> if the UE has not selected any MBMS Selected Service:

3> include the MBMS Selected Service Info and set the Status to 'None'.

2> otherwise:

3> include the MBMS Selected Service Info and set the Status to 'Some'.

3> for each MBMS Selected Service:

4> include the MBMS Selected Service ID.

Reference

3GPP TS 25.331, clauses 8.7.6.2, 8.7.6.2a.

#### 8.5.4.3.3 Test purpose

To verify that the UE updates the MBMS Selected Service Information at the introduction of a MBMS Service ID on the MCCH, when the UE is in CELL_DCH state.

#### 8.5.4.3.4 Method of test

Initial condition

System Simulator:

- 1 MBMS cell.

User Equipment:

- The UE is in CELL_DCH state as specified in clause 7.6 of TS 34.108.
- The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No
- UE supports MBMS MCCH reception in CELL_DCH state Yes/No

Test procedure

a) The MCCH on Cell 21 is modified to indicate the availability of service 1, and the Notification Indicator on MICH corresponding to service 1 is set. The IE “MBMS re- acquire MCCH” that is included in MBMS MODIFIED SERVICES INFORMATION is set to TRUE. The SS starts service 1 using the 64.8kbps radio bearer configuration as specified in TS 34.108 clause 6.10.2.4.3.5.

b) The SS verifies for 1 complete modification period that the UE does not send MBMS MODIFICATION REQUEST.

c) Service 1 is removed from the UE selected services.

d) The UE transmits MBMS MODIFICATION REQUEST indicating the list of selected services (Status = “None”).

e) Service 1 is added to the UE selected services.

f) The UE transmits MBMS MODIFICATION REQUEST indicating the list of selected services (service 1).

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The UE state in Cell 21 is:<br>CELL_DCH<br><br>UE: Service 1 only is selected. |
| 2 | ← | | MBMS MODIFIED SERVICES INFORMATION | SS indicates the availability of the MBMS broadcast service 1.<br><br>'MBMS re- acquire MCCH' = TRUE<br><br>SS: MCCH message combination C4 for 1 modification period, then combination C2. |
| 3 | | | | SS verifies for 1 complete modification period that the UE does not send MBMS MODIFICATION REQUEST. |
| 4 | | | | Service 1 is removed from the UE selected services. |
| 5 | → | | MBMS MODIFICATION REQUEST | MBMS Selected Service Info: Status = 'None'. |
| 6 | | | | Service 1 is added to the UE selected services. |
| 7 | → | | MBMS MODIFICATION REQUEST | MBMS Selected Service Info: Status = 'Some'.<br>MBMS Selected Service ID = 5 |

Specific message contents

MBMS MODIFIED SERVICES INFORMATION (Step 2)

The same message found in TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br>- MBMS Service ID<br>- MBMS Session ID<br>- MBMS required UE action<br>- Continue MCCH reading<br>MBMS re- acquire MCCH | <br><br>'000005'<br>1<br>Acquire PTM RB Info<br>FALSE<br>TRUE |

MBMS MODIFICATION REQUEST (STEP 5)

| Information Element | Value/remark |
|---|---|
| MBMS Selected Service Info<br>- CHOICE Status | <br>None |

MBMS MODIFICATION REQUEST (STEP 7)

| Information Element | Value/remark |
|---|---|
| MBMS Selected Service Info<br>- CHOICE Status<br>- MBMS Selected Services Full<br>- MBMS Selected Service ID<br>- MBMS Service ID<br>- CHOICE PLMN identity<br><br>- SameAs-MIB<br>- explicitPLMN_Id | <br>Some<br><br><br>'000005'<br>Check to see that one of the below choice element is present<br>(no data)<br>Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

#### 8.5.4.3.5 Test requirements

In step 3 the UE shall not send MBMS MODIFICATION REQUEST.

In step 5 the UE shall transmit MBMS MODIFICATION REQUEST indicating the list of selected services (Status = “None”).

In step 7 the UE shall transmit MBMS MODIFICATION REQUEST indicating the list of selected services (Status = “Some”, MBMS Service ID = ‘000005’).

## 8.5.5 MBMS Counting

### 8.5.5.1 MBMS Counting in Idle Mode / MBMS Selected Service

#### 8.5.5.1.1 Definition

This test case is applicable for all UEs supporting MBMS broadcast services.

#### 8.5.5.1.2 Conformance requirement

The MBMS counting procedure is used by the UE to inform UTRAN about its interest to receive an MBMS transmission.

…

The UE initiates the MBMS counting procedure for an MBMS transmission upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" with the value set to 'Acquire counting info' or set to "Acquire counting info– PTM RBs unmodified".

…

Upon receiving the MBMS ACCESS INFORMATION message including one or more MBMS service(s) it has joined, and/ or including one or more MBMS Selected Services the UE shall for each joined and / or selected service:

1> if the UE is in idle mode:

2> draw a random number, "rand", uniformly distributed in the range: $0 \leq rand < 1$

2> if 'rand' is lower than the value indicated by the IE 'Access probability factor-Idle' for the concerned service:

3> indicate to upper layers that establishment of an RRC connection is required to receive the concerned MBMS service, with the establishment cause set to 'MBMS reception';

3> if the above condition applies for more than one service, initiate a single indication to upper layers;

3> if the RRC connection establishment succeeds, the procedure ends.

…

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

…

1> otherwise if the UE performs connection establishment for MBMS counting as specified in subclause 8.7.4; and

1> if one or more of the MBMS services for which the UE initiates the counting response concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the counting response:

3> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Short" before those selected with a lower priority;

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> if the UE included one or more "MBMS Selected Service ID" IEs:

2> include the IE "MBMS Modification Period identity" and set it to a value in accordance with subclause 8.5.29.

Reference

3GPP TS 25.331 clauses 8.7.4, 8.7.4.1, 8.7.4.2, 8.7.4.3, 8.1.3.3.

8.5.5.1.3 Test purpose

To confirm that the UE starts the MBMS counting procedure in idle mode upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" and an ACCESS INFORMATION message including IE "Access probability factor – Idle" set to 0 (corresponding to the actual probability factor value 1).

To verify that the UE correctly includes the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and IE "MBMS Modification Period identity" in the counting response initiated for a MBMS Selected Service.

8.5.5.1.4 Method of test

Initial Condition

System Simulator: 1 MBMS cell (cell 21) using MCCH Longest Default scheduling, and combination C1 as defined in TS 34.108 clause 11.

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

Test Procedure

The SS transmits an MBMS MODIFIED SERVICE INFORMATION message which includes in the “Modified service list” for the MBMS activated service “MBMS required UE action” set to “Acquire counting info”.

The SS transmits an MBMS ACCESS INFORMATION message, which includes the MBMS Short transmission ID associated to the MBMS activated service and “Access probability factor – Idle” set to 0.

NOTE: The “Access probability factor” sent in the MBMS ACCESS INFORMATION message set to 0 corresponds to an actual Probability Factor = 1, according to the formula in TS 25.331 clause 10.2.16e.

The UE transmits an RRC CONNECTION REQUEST message to the SS, with “Establishment cause” set to “MBMS reception”.

The SS transmits an RRC CONNECTION SETUP message to the UE which moves the UE to CELL_DCH state.

When the UE receives this message, the UE establishes an RRC connection and transmits an RRC CONNECTION SETUP COMPLETE message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in idle mode. |
| 1 | | ← | MBMS MODIFIED SERVICES INFORMATION | The SS transmits the message, which includes “MBMS required UE action” set to “Acquire counting info” |
| 2 | | ← | MBMS ACCESS INFORMATION | The SS transmits the message, which includes “MBMS short transmission ID” IE referring to the service the UE has activated and “Access probability factor – Idle” IE set to 0 (corresponding to actual Access Probability = 1). |
| 3 | | → | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS reception” and with the “MBMS Selected Services Short” IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 4 | | ← | RRC CONNECTION SETUP | SS assigns DPCH resources to allow UE to establish an RRC connection.<br>RRC state indicator set to CELL_DCH. |
| 5 | | → | RRC CONNECTION SETUP COMPLETE | |
| 5a | | → | MBMS MODIFICATION REQUEST | The UE completing the RRC Connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after step 5 and before step 7. |
| 6 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception”. |
| 7 | | ←→ | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>- MBMS required UE action | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>Acquire counting info |

MBMS ACCESS INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| Service list | Only 1 entry |
| - MBMS short transmission ID | Index to the MBMS transmission identity in the previous MBMS MODIFIED SERVICES INFORMATION |
| - Access probability factor – Idle | 0 (corresponding to the actual probability factor value 1) |
| - Connected mode counting scope | |
| - URA_PCH | FALSE |
| - CELL_PCH | FALSE |
| - CELL_FACH | FALSE |

RRC CONNECTION REQUEST (Step 3)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI. |
| Establishment Cause | MBMS reception |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |
| MBMS Selected Services | |
| - MBMS Selected Services | Only 1 entry |
| - MBMS Selected Service ID | MBMS short transmission identity referring to the service the UE has selected |
| - Modification period identity | Indicates the modification period the MBMS short transmission identities refer to |

MBMS MODIFICATION REQUEST (steps 5a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info | |
| - CHOICE Status | Some |
| - MBMS Selected Services Full | |
| - MBMS Selected Service ID | Only 1 entry |
| - MBMS Service ID | MBMS service ID of the activated MBMS service |
| - CHOICE PLMN identity | Check to see that one of the below choice element is present |
| - SameAs-MIB | (no data) |
| - explicitPLMN_Id | Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

#### 8.5.5.1.5 Test requirement

At step 3, the UE shall transmit an RRC CONNECTION REQUEST message with “Establishment Cause” set to “MBMS reception” on the uplink CCCH and including in case of MBMS Selected services the IE “MBMS Selected Service ID” of the concerned MBMS selected service within the IE “MBMS Selected Services Short” and the IE “MBMS Modification Period identity”.

At step 5, the UE shall transmit an RRC CONNECTION SETUP COMPLETE message on a dedicated channel.

### 8.5.5.1m MBMS Counting in Idle Mode / MBMS Multicast Service

#### 8.5.5.1m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.5.1m.2 Conformance requirement

Same conformance requirement as in clause 8.5.5.1.2 except there is no reference to 3GPP TS 25.331 clause 8.1.3.3.

Reference

3GPP TS 25.331 clauses 8.7.4, 8.7.4.1, 8.7.4.2, 8.7.4.3.

8.5.5.1m.3 Test purpose

To confirm that the UE starts the MBMS counting procedure in idle mode upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" and an ACCESS INFORMATION message including IE "Access probability factor – Idle" set to 0 (corresponding to the actual probability factor value 1).

8.5.5.1m.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 22

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.5.1.4.

Expected sequence

Same expected sequence as in clause 8.5.5.1.4 except for RRC CONNECTION REQUEST message content (step 3) and MODIFICATION REQUEST procedure not required.

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in idle mode. |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | The SS transmits the message, which includes “MBMS required UE action” set to “Acquire counting info” |
| 2 | ← | | MBMS ACCESS INFORMATION | The SS transmits the message, which includes “MBMS short transmission ID” IE referring to the service the UE has joined and “Access probability factor – Idle” IE set to 0 (corresponding to actual Access Probability = 1). |
| 3 | → | | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS reception” |
| 4 | ← | | RRC CONNECTION SETUP | SS assigns DPCH resources to allow UE to establish an RRC connection.<br>RRC state indicator set to CELL_DCH. |
| 5 | → | | RRC CONNECTION SETUP COMPLETE | |
| 6 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Multicast service Reception”. |
| 7 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

Same specific messages contents as in clause 8.5.5.1.4 except for RRC CONNECTION REQUEST message content (step 3).

RRC CONNECTION REQUEST (Step 3)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI. |
| Establishment Cause | MBMS reception |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |
| MBMS Selected Services | Not present |

#### 8.5.5.1m.5 Test requirements

At step 3, the UE shall transmit an RRC CONNECTION REQUEST message with “Establishment Cause” set to “MBMS reception” on the uplink CCCH.

At step 5, the UE shall transmit an RRC CONNECTION SETUP COMPLETE message on a dedicated channel.

### 8.5.5.2 MBMS Counting in CELL_FACH / MBMS Selected Service

#### 8.5.5.2.1 Definition

This test case is applicable for UEs that support MBMS broadcast services.

#### 8.5.5.2.2 Conformance requirement

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

…

1> if the IE "MBMS required UE action" is set to 'Acquire counting info' or set to 'Acquire counting info– PTM RBs unmodified':

2> perform the MBMS counting procedure as specified in subclause 8.7.4;

NOTE: If upper layers indicate that an MBMS transmission has already been received correctly, the UE will continue as if the information about the concerned MBMS transmission was not included in the message. This implies that the UE does not respond to counting for a transmission already received correctly.

…

The MBMS counting procedure is used by the UE to inform UTRAN about its interest to receive an MBMS transmission. The procedure applies to UEs supporting MBMS that are in idle mode or in connected mode. In connected mode the procedure applies to the URA_PCH, Cell_PCH and/ or Cell_FACH states dependent upon the value of the IE "Connected mode counting scope".

…

The UE initiates the MBMS counting procedure for an MBMS transmission upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" with the value set to 'Acquire counting info' or set to "Acquire counting info– PTM RBs unmodified".

…

Upon receiving the MBMS ACCESS INFORMATION message including one or more MBMS service(s) it has joined, and/ or including one or more MBMS Selected Services the UE shall for each joined and / or selected service:

…

1> if the UE is in URA_PCH state, Cell_PCH or Cell_FACH state and the IE "Connected mode counting scope" indicates that counting is applicable for this UE state:

2> draw a random number, "rand", uniformly distributed in the range: $0 \leq rand < 1$.

2> if 'rand' is lower than the value indicated by the IE 'Access probability factor-connected' for the concerned service:

3> if a cell update has not been successfully transmitted for this service in the current modification period:

4> initiate the cell update procedure with 'Cell update cause' set to "MBMS reception", in accordance with subclause 8.3.1;

4> if the above condition applies for more than one service, initiate a single cell update;

4> if the cell update procedure succeeds,

5> the procedure ends.

2> otherwise:

3> if the message triggering the MBMS counting procedure included the IE "Continue MCCH reading" with a value set to TRUE:

4> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

3> otherwise:

4> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

1> otherwise:

2> the procedure ends;

Upon receiving the MBMS ACCESS INFORMATION message not including an MBMS service(s) the UE has joined:

1> the procedure ends;

…

The UE shall set the IEs in the CELL UPDATE message as follows:

…

1> otherwise, if the UE performs cell update for MBMS counting as specified in subclause 8.7.4; and

1> if one or more of the MBMS services for which the UE initiates the counting response concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the counting response:

3> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Short" before those selected with a lower priority;

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> if the UE included one or more "MBMS Selected Service ID" IEs:

2> include the IE "MBMS Modification Period identity" and set it to a value in accordance with subclause 8.5.29.

Reference

3GPP TS 25.331 clauses 8.6.9.6, 8.7.4, 8.7.4.1, 8.7.4.2, 8.7.4.3, 8.3.1.3.

#### 8.5.5.2.3 Test purpose

To verify that the UE correctly handles the counting procedure in cell_FACH state, upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" and an ACCESS INFORMATION message including IE "Access probability factor – Connected" set to 0.

To verify that the UE correctly includes the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and IE "MBMS Modification Period identity" in the counting response initiated for a MBMS Selected Service.

#### 8.5.5.2.4 Method of test

##### Initial condition

System Simulator: one MBMS cell (cell 21) using MCCH Shortest Default scheduling, and combination C1 as defined in TS 34.108 clause 11.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

##### Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

##### Test procedure

1) The SS sends a MBMS MODIFIED SERVICES INFORMATION message which includes the IE “MBMS required UE action” set to ‘Acquire counting info’ for the MBMS Service identity in the MBMS Transmission identity matching the one in the MBMS_ACTIVATED_SERVICES variable.

2) The SS sends in the same Modification Period the MBMS ACCESS INFORMATION message which includes:

   - the “MBMS short transmission ID” IE referring to the service the UE has activated
   - the “Connected mode counting scope” IE set to TRUE applicable to the UE connected state and
   - the value for “Access probability factor – connected” IE set to 0 (corresponding to the actual probability factor value 1)

3) The UE shall perform the MBMS counting procedure. The UE shall draw a random number ‘rand’. If ‘rand’ is lower than the value indicated by the IE “Access probability factor – connected”, it shall send a CELL UPDATE message to the SS on the uplink CCCH of cell 21 and set IE "Cell update cause" to "MBMS reception". The IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity" shall be included in the counting response initiated for a MBMS Selected Service. After the SS receives this message, it transmits a CELL UPDATE CONFIRM message to the UE on the downlink CCCH.

4) The SS sends the MBMS ACCESS INFORMATION message again in the same Modification Period. The UE shall not perform the MBMS counting procedure during the same Modification Period.

##### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Acquire counting info" |
| 2 | ← | | MBMS ACCESS INFORMATION | “MBMS short transmission ID” IE referring to the service the UE has activated, “Connected mode counting scope” IE set to "TRUE", “Access probability factor – connected” IE set to 0. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 3 | → | | CELL UPDATE | The CELL UPDATE message shall contain the value "Cell Update Cause" set to "MBMS reception" and in case of MBMS Selected service the "MBMS Selected Services Short" IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 4 | ← | | CELL UPDATE CONFIRM | |
| 5 | ← | | MBMS ACCESS INFORMATION | The SS sends again in the same MP a MBMS access Information message. |
| 6 | | | | The SS check that the UE shall not perform again the counting procedure by sending another cell update message. |
| 7 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific message contents

All messages have the same content as defined in 34.108 clause 9.1.1 with the following exceptions:

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified services list | Only 1 entry |
| -MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| -MBMS required UE action | Acquire counting info |

MBMS Access Information (Steps 2 and 5)

| Information Element | Value/remark |
|---|---|
| Service list | Only 1 entry |
| -MBMS short transmission ID | Index to the MBMS transmission identity in the previous MBMS MODIFIED SERVICES INFORMATION |
| -Access probability factor – connected | 0 (corresponding to the actual probability factor value 1) |
| -Connected mode counting scope | |
| - URA_PCH | FALSE |
| - CELL_PCH | FALSE |
| - CELL_FACH | TRUE |

CELL UPDATE (Step 3)

| Information Element | Value/remark |
|---|---|
| Cell update cause | MBMS reception |
| MBMS Selected Services | present in case of MBMS Selected service |
| - MBMS Selected Services | Only 1 entry |
| - MBMS Selected Service ID | MBMS short transmission identity referring to the service the UE has selected |
| - Modification period identity | Indicates the modification period the MBMS short transmission identities refer to |

### 8.5.5.2.5 Test requirements

At step 3, check that the UE performs the MBMS counting procedure by performing the cell update procedure using the cause value "MBMS reception"and using in case of MBMS Selected services the IE "MBMS Selected Service ID"of the concerned MBMS selected service within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity".

At step 6, check that the UE does not perform the MBMS counting again during the same Modification Period.

## 8.5.5.2m MBMS Counting in CELL_FACH / MBMS Multicast Service

### 8.5.5.2m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

### 8.5.5.2m.2 Conformance requirement

Same conformance requirement as in clause 8.5.5.2.2 except there is no reference to 3GPP TS 25.331 clause 8.3.1.3.

### 8.5.5.2m.3 Test purpose

To verify that the UE correctly handles the counting procedure in cell_FACH state, upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" and an ACCESS INFORMATION message including IE "Access probability factor – Connected" set to 0.

### 8.5.5.2m.4 Method of test

#### Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 22

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

#### Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

#### Test procedure

Same test procedure as in clause 8.5.5.2.4 except for the points 2 and 3:

2) The SS sends in the same Modification Period the MBMS ACCESS INFORMATION message which includes:
   - the “MBMS short transmission ID” IE referring to the service the UE has joined
   - the “Connected mode counting scope” IE set to TRUE applicable to the UE connected state and
   - the value for “Access probability factor – connected” IE set to 0 (corresponding to the actual probability factor value 1)
3) The UE shall perform the MBMS counting procedure. The UE shall draw a random number ‘rand’. If ‘rand’ is lower than the value indicated by the IE “Access probability factor – connected”, it shall send a CELL UPDATE message to the SS on the uplink CCCH of cell 21 and set IE "Cell update cause" to "MBMS reception". After the SS receives this message, it transmits a CELL UPDATE CONFIRM message to the UE on the downlink CCCH.

#### Expected sequence

Same expected sequence as in clause 8.5.5.2.4 except for CELL UPDATE message content (step 3).

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "Acquire counting info" |
| 2 | ← | | MBMS ACCESS INFORMATION | "MBMS short transmission ID" IE referring to the service the UE has joined, "Connected mode counting scope" IE set to "TRUE", "Access probability factor – connected" IE set to 0. |
| 3 | → | | CELL UPDATE | The CELL UPDATE message shall contain the value "Cell Update Cause" set to "MBMS reception". |
| 4 | ← | | CELL UPDATE CONFIRM | |
| 5 | ← | | MBMS ACCESS INFORMATION | The SS sends again in the same MP a MBMS access Information message. |
| 6 | | | | The SS check that the UE shall not perform again the counting procedure by sending another cell update message. |
| 7 | ←→ | | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific message contents

Same specific messages contents as in clause 8.5.5.2.4 except for CELL UPDATE message content (step 3).

CELL UPDATE (Step 3)

Use the message sub-type in default message content defined in 3GPP TS 34.108 [9] clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Cell update cause | MBMS reception |

#### 8.5.5.2m.5 Test requirements

At step 3, check that the UE performs the MBMS counting procedure by performing the cell update procedure using the cause value "MBMS reception".

At step 6, check that the UE does not perform the MBMS counting again during the same Modification Period.

### 8.5.5.3 MBMS No Counting in CELL_DCH / MBMS Selected Service

#### 8.5.5.3.1 Definition

This test is applicable for all UEs that support MBMS broadcast services and capable of reading MCCH in CELL_DCH state.

#### 8.5.5.3.2 Conformance requirement

If the IE "MBMS required UE action" is included and concerns an MBMS activated service the UE shall:

1> if the "MBMS required UE action" is set to 'None':

2> take no action with respect to this IE.

1> if the IE "MBMS required UE action" is set to 'Acquire counting info' or set to 'Acquire counting info– PTM RBs unmodified':

2> perform the MBMS counting procedure as specified in subclause 8.7.4;

NOTE: If upper layers indicate that an MBMS transmission has already been received correctly, the UE will continue as if the information about the concerned MBMS transmission was not included in the message. This implies that the UE does not respond to counting for a transmission already received correctly.

…

The MBMS counting procedure is used by the UE to inform UTRAN about its interest to receive an MBMS transmission. The procedure applies to UEs supporting MBMS that are in idle mode or in connected mode. In connected mode the procedure applies to the URA_PCH, Cell_PCH and/ or Cell_FACH states dependent upon the value of the IE "Connected mode counting scope".

The UE initiates the MBMS counting procedure for an MBMS transmission upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" with the value set to 'Acquire counting info' or set to "Acquire counting info– PTM RBs unmodified".

The UE shall acquire the MBMS ACCESS INFORMATION message without delaying reading of MCCH until the next modification period in accordance with subclause 8.7.1.3. If the procedure the UE would apply to respond to counting (Idle mode: RRC connection establishment, connected mode: Cell update) is ongoing, the UE may defer acquiring the MBMS ACCESS INFORMATION message until this procedure has completed.

The UE behaviour upon receiving an MBMS ACCESS INFORMATION message that is contained in more than one TTI is not specified.

Upon receiving the MBMS ACCESS INFORMATION message including one or more MBMS service(s) it has joined, and/or including one or more MBMS Selected Services the UE shall for each joined and/or selected service:

1> if the UE is in idle mode:

…

1> if the UE is in URA_PCH state, Cell_PCH or Cell_FACH state and the IE "Connected mode counting scope" indicates that counting is applicable for this UE state:

…

1> otherwise:

2> the procedure ends;

Reference

3GPP TS 25.331 clauses 8.6.9.6, 8.7.4.1, 8.7.4.2, 8.7.4.3.

### 8.5.5.3.3 Test purpose

To verify that the UE in CELL_DCH state (with the probability factor set to 1) does not perform the MBMS counting procedure.

### 8.5.5.3.4 Method of test

Initial condition

System Simulator: one MBMS cell (cell 21) using MCCH Default2 scheduling, and combination C1 as defined in TS 34.108 clause 11.

User Equipment:

The UE is in CELL_DCH state as specified in clause 7.6 of TS 34.108. The UE has been registered in both CS and PS domains.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

- UE supports MCCH reception in CELL_DCH state Yes/No.

Test procedure

The UE is in CELL_DCH state. The SS transmits an MBMS MODIFIED SERVICES INFORMATION message which includes the IE “MBMS required UE action” set to "Acquire counting info" for the MBMS Service identity in the MBMS Transmission identity matching the one in the MBMS_ACTIVATED_SERVICES variable.

The UE receives an MBMS ACCESS INFORMATION message including the concerned MBMS Selected service.

The UE shall not perform the MBMS counting procedure.

The SS continues to send MBMS ACCESS INFORMATION messages including the MBMS Selected service in the same Modification Period. The UE shall not perform the MBMS counting procedure.

The UE receives an MBMS ACCESS INFORMATION message including the MBMS Selected service in the next Modification Period. The UE shall not perform the MBMS counting procedure.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in CELL_DCH state. |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Acquire counting info" |
| 2 | ← | | MBMS ACCESS INFORMATION | “MBMS short transmission ID” IE referring to the service the UE has activated, “Connected mode counting scope” IE set to "TRUE", “Access probability factor – connected” IE “ set to 0 (corresponding to the actual probability factor value 1). |
| 3 | | | | The SS checks that the UE does not perform the counting procedure. |
| 4 | ← | | MBMS ACCESS INFORMATION | The SS continues to send MBMS access Information messages in the same MP. |
| 5 | | | | The SS checks that the UE does not perform the counting procedure. |
| 6 | ← | | MBMS ACCESS INFORMATION | The SS sends a MBMS access Information message in the next MP. |
| 7 | | | | The SS checks that the UE does not perform the counting procedure. |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>- MBMS required UE action<br>- Continue MCCH reading | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>Acquire counting info<br>TRUE |

MBMS ACCESS INFORMATION (Step 2, Step 4 and Step 6)

| Information Element | Value/remark |
|---|---|
| Service list | Only 1 entry |
| - MBMS short transmission ID | Index to the MBMS transmission identity in the previous MBMS MODIFIED SERVICES INFORMATION |
| - Access probability factor - Idle | 0 (corresponding to the actual probability factor value 1) |
| - Connected mode counting scope | |
| - URA_PCH | TRUE |
| - CELL_PCH | TRUE |
| - CELL_FACH | TRUE |

#### 8.5.5.3.5 Test requirements

After step 2, the UE shall not perform the MBMS counting procedure.

After step 4, the UE shall not perform the MBMS counting procedure.

After step 6, the UE shall not perform the MBMS counting procedure.

### 8.5.5.3m MBMS No Counting in CELL_DCH / MBMS Multicast Service

#### 8.5.5.3m.1 Definition

This test is applicable for all UEs that support MBMS multicast services and capable of reading MCCH in CELL_DCH state.

#### 8.5.5.3m.2 Conformance requirement

Same conformance requirement as in clause 8.5.5.3.2.

#### 8.5.5.3m.3 Test purpose

Same test purpose as in clause 8.5.5.3.3.

#### 8.5.5.3m.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 22

User Equipment:

The UE is in CELL_DCH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.
- UE supports MCCH reception in CELL_DCH state Yes/No.

Test procedure

The UE is in CELL_DCH state. The SS transmits an MBMS MODIFIED SERVICES INFORMATION message which includes the IE “MBMS required UE action” set to "Acquire counting info" for the MBMS Service identity in the MBMS Transmission identity matching the one in the MBMS_ACTIVATED_SERVICES variable.

The UE receives an MBMS ACCESS INFORMATION message including the MBMS service the UE has joined.

The UE shall not perform the MBMS counting procedure.

The SS continues to send MBMS ACCESS INFORMATION messages including the MBMS service the UE has joined in the same Modification Period. The UE shall not perform the MBMS counting procedure.

The UE receives an MBMS ACCESS INFORMATION message including the MBMS service the UE has joined in the next Modification Period. The UE shall not perform the MBMS counting procedure.

Expected sequence

Same expected sequence as in clause 8.5.5.3.4 except for MBMS ACCESS INFORMATION message contents (steps 2, 4 and 6).

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in CELL_DCH state. |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "Acquire counting info" |
| 2 | ← | | MBMS ACCESS INFORMATION | "MBMS short transmission ID" IE referring to the service the UE has joined. |
| 3 | | | | The SS checks that the UE does not perform the counting procedure. |
| 4 | ← | | MBMS ACCESS INFORMATION | The SS continues to send MBMS access Information messages in the same MP. |
| 5 | | | | The SS checks that the UE does not perform the counting procedure. |
| 6 | ← | | MBMS ACCESS INFORMATION | The SS sends a MBMS access Information message in the next MP. |
| 7 | | | | The SS checks that the UE does not perform the counting procedure. |
| 8 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific message contents

Same specific messages contents as in clause 8.5.5.3.4.

8.5.5.3m.5 Test requirements

Same test requirement as in clause 8.5.5.3.5.

## 8.5.5.4 MBMS Counting in CELL_PCH / MBMS Selected Service

### 8.5.5.4.1 Definition

This test case is applicable for UEs that support MBMS broadcast services.

### 8.5.5.4.2 Conformance requirement

The MBMS counting procedure is used by the UE to inform UTRAN about its interest to receive an MBMS transmission. The procedure applies to UEs supporting MBMS that are in idle mode or in connected mode. In connected mode the procedure applies to the URA_PCH, Cell_PCH and/ or Cell_FACH states dependent upon the value of the IE "Connected mode counting scope".

…

The UE initiates the MBMS counting procedure for an MBMS transmission upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" with the value set to 'Acquire counting info' or set to "Acquire counting info– PTM RBs unmodified".

…

Upon receiving the MBMS ACCESS INFORMATION message including one or more MBMS service(s) it has joined, and/ or including one or more MBMS Selected Services the UE shall for each joined and / or selected service:

…

1> if the UE is in URA_PCH state, Cell_PCH or Cell_FACH state and the IE "Connected mode counting scope" indicates that counting is applicable for this UE state:

2> draw a random number, "rand", uniformly distributed in the range: $0 \leq rand < 1$.

2> if 'rand' is lower than the value indicated by the IE 'Access probability factor-connected' for the concerned service:

3> if a cell update has not been successfully transmitted for this service in the current modification period:

4> initiate the cell update procedure with 'Cell update cause' set to "MBMS reception", in accordance with subclause 8.3.1;

4> if the above condition applies for more than one service, initiate a single cell update;

4> if the cell update procedure succeeds,

5> the procedure ends.

2> otherwise:

3> if the message triggering the MBMS counting procedure included the IE "Continue MCCH reading" with a value set to TRUE:

4> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

3> otherwise:

4> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

1> otherwise:

2> the procedure ends;

Upon receiving the MBMS ACCESS INFORMATION message not including an MBMS service(s) the UE has joined:

1> the procedure ends;

…

The UE shall set the IEs in the CELL UPDATE message as follows:

…

1> otherwise, if the UE performs cell update for MBMS counting as specified in subclause 8.7.4; and

1> if one or more of the MBMS services for which the UE initiates the counting response concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the counting response:

3> order the MBMS Selected Services such that those selected with a higher priority are listed in the IE "MBMS Selected Services Short" before those selected with a lower priority;

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> if the UE included one or more "MBMS Selected Service ID" IEs:

2> include the IE "MBMS Modification Period identity" and set it to a value in accordance with subclause 8.5.29.

Reference

3GPP TS 25.331 clauses 8.7.4, 8.7.4.1, 8.7.4.2, 8.7.4.3, 8.3.1.3.

### 8.5.5.4.3 Test purpose

To verify that the UE correctly handles the counting procedure in cell_PCH state, upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" and an ACCESS INFORMATION message including IE "Access probability factor – Connected" set to 0 for the selected services.

To verify that the UE correctly includes the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and IE "MBMS Modification Period identity" in the counting response initiated for a MBMS Selected Service.

### 8.5.5.4.4 Method of test

Initial condition

System Simulator: one MBMS cell (cell 21)

User Equipment:

The UE is in CELL_PCH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

Test procedure

1) The SS sends a MBMS MODIFIED SERVICES INFORMATION message which includes the IE “MBMS required UE action” set to ‘Acquire counting info’ for the MBMS Service identity in the MBMS Transmission identity matching the one in the MBMS_ACTIVATED_SERVICES variable.

2) The SS sends in the same Modification Period the MBMS ACCESS INFORMATION message which includes:

   - the “MBMS short transmission ID” IE referring to the service the UE has activated
   - the “Connected mode counting scope” IE set to TRUE applicable to the UE connected state and
   - the value for “Access probability factor – connected” IE set to 0 (corresponding to the actual probability factor value 1)

3) The UE shall perform the MBMS counting procedure. The UE shall draw a random number ‘rand’. If ‘rand’ is lower than the value indicated by the IE “Access probability factor – connected”, it shall send a CELL UPDATE message to the SS on the uplink CCCH of cell 21 and set IE "Cell update cause" to "MBMS reception". The IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity" shall be included in the counting response initiated for the MBMS Selected Service. After the SS receives this message, it transmits a CELL UPDATE CONFIRM message to the UE on the downlink CCCH. The UE shall move to the Cell_PCH state as indicated by the IE "RRC State Indicator".

4) The SS sends the MBMS ACCESS INFORMATION message again in the same Modification Period. The UE shall not perform the MBMS counting procedure during the same Modification Period.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in cell_PCH |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Acquire counting info" |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 2 | ← | | MBMS ACCESS INFORMATION | "MBMS short transmission ID" IE referring to the service the UE has activated and "Connected mode counting scope" IE set to "TRUE", "Access probability factor – connected" IE set to 0. |
| 3 | → | | CELL UPDATE | The UE shall perform the MBMS counting procedure which triggers the cell updating procedure which moves the UE into CELL_FACH state. The CELL UPDATE message shall contain the value "Cell Update Cause" set to "MBMS reception" and the "MBMS Selected Services Short" IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 4 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to CELL_PCH. |
| 5 | ← | | MBMS ACCESS INFORMATION | The SS sends again in the same MP a MBMS access Information message. |
| 6 | | | | The SS check that the UE shall not perform again the counting procedure by sending another cell update message. |
| 7 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

Specific message contents

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified services list | Only 1 entry |
| -MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| -MBMS required UE action | Acquire counting info |

MBMS ACCESS INFORMATION (Steps 2 and 5)

| Information Element | Value/remark |
|---|---|
| Service list | Only 1 entry |
| -MBMS short transmission ID | Index to the MBMS transmission identity in the previous MBMS MODIFIED SERVICES INFORMATION |
| -Access probability factor – connected | 0 (corresponding to the actual probability factor value 1) |
| -Connected mode counting scope | |
| - URA_PCH | TRUE |
| - CELL_PCH | TRUE |
| - CELL_FACH | TRUE |

CELL UPDATE (Step 3)

Use the message sub-type in default message content defined in 3GPP TS 34.108 [9] clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Cell update cause | MBMS reception |
| MBMS Selected Services | |
| - MBMS Selected Services | Only 1 entry |
| - MBMS Selected Service ID | MBMS short transmission identity referring to the service the UE has selected |
| - Modification period identity | Indicates the modification period the MBMS short transmission identities refer to |

CELL UPDATE CONFIRM (Step 4)

Use the message sub-type in default message content defined in 3GPP TS 34.108 [9] clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | Cell_PCH |
| UTRAN DRX cycle length coefficient | 7 |

#### 8.5.5.4.5 Test requirements

At step 3, check that the UE performs the MBMS counting procedure by performing the cell update procedure using the cause value “MBMS reception” and using in case of MBMS Selected services the IE “MBMS Selected Service ID” of the concerned MBMS selected service within the IE “MBMS Selected Services Short” and the IE “MBMS Modification Period identity”.

At step 6, check that the UE does not perform the MBMS counting again during the same Modification Period.

### 8.5.5.4m MBMS Counting in CELL_PCH / MBMS Multicast Service

#### 8.5.5.4m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.5.4m.2 Conformance requirement

Same conformance requirement as in clause 8.5.5.4.2 except there is no reference to 3GPP TS 25.331 clause 8.3.1.3.

#### 8.5.5.4m.3 Test purpose

To verify that the UE correctly handles the counting procedure in cell_PCH state, upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" and an ACCESS INFORMATION message including IE "Access probability factor – Connected" set to 0.

#### 8.5.5.4m.4 Method of test

##### Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 22

User Equipment:

The UE is in CELL_PCH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

##### Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

##### Test procedure

Same test procedure as in clause 8.5.5.2.4 except for the points 2 and 3:

2) The SS sends in the same Modification Period the MBMS ACCESS INFORMATION message which includes:

   - the “MBMS short transmission ID” IE referring to the service the UE has joined
   - the “Connected mode counting scope” IE set to TRUE applicable to the UE connected state and
   - the value for “Access probability factor – connected” IE set to 0 (corresponding to the actual probability factor value 1)

3) The UE shall perform the MBMS counting procedure. The UE shall draw a random number ‘rand’. If ‘rand’ is lower than the value indicated by the IE “Access probability factor – connected”, it shall send a CELL UPDATE message to the SS on the uplink CCCH of cell 21 and set IE "Cell update cause" to "MBMS reception". After the SS receives this message, it transmits a CELL UPDATE CONFIRM message to the UE on the downlink CCCH. The UE shall move to the Cell_PCH state as indicated by the IE "RRC State Indicator".

### Expected sequence

Same expected sequence as in clause 8.5.5.4.4 except for MBMS ACCESS INFORMATION message content (step 2) and CELL UPDATE message content (step 3).

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in cell_PCH |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | “MBMS required UE action” IE is set to "Acquire counting info" |
| 2 | ← | | MBMS ACCESS INFORMATION | “MBMS short transmission ID” IE referring to the service the UE has joined and “Connected mode counting scope” IE set to "TRUE", “Access probability factor – connected” IE set to 0. |
| 3 | → | | CELL UPDATE | The UE shall perform the MBMS counting procedure which triggers the cell updating procedure which moves the UE into CELL_FACH state. The CELL UPDATE message shall contain the value "Cell Update Cause" set to "MBMS reception". |
| 4 | ← | | CELL UPDATE CONFIRM | IE "RRC State Indicator” is set to CELL_PCH. |
| 5 | ← | | MBMS ACCESS INFORMATION | The SS sends again in the same MP a MBMS access Information message. |
| 6 | | | | The SS check that the UE shall not perform again the counting procedure by sending another cell update message. |
| 7 | ←→ | | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |

### Specific message contents

Same specific messages contents as in clause 8.5.5.4.4.

### CELL UPDATE (Step 3)

Use the message sub-type in default message content defined in 3GPP TS 34.108 [9] clause 9, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| Cell update cause | MBMS reception |

### CELL UPDATE CONFIRM (Step 4)

Use the same specific message content as in clause 8.5.5.4.4 for CELL UPDATE CONFIRM message at Step 4.

#### 8.5.5.4m.5 Test requirements

At step 3, check that the UE performs the MBMS counting procedure by performing the cell update procedure using the cause value “MBMS reception”.

At step 6, check that the UE does not perform the MBMS counting again during the same Modification Period.

### 8.5.5.5 Void

### 8.5.5.6 Void

### 8.5.5.7 RRC Connection establishment for MBMS Counting :Success after T318 Timeout/ MBMS Selected Service

#### 8.5.5.7.1 Definition

This test case is applicable for UEs that support MBMS broadcast services.

#### 8.5.5.7.2 Conformance requirement

The MBMS counting procedure is used by the UE to inform UTRAN about its interest to receive an MBMS transmission. The procedure applies to UEs supporting MBMS that are in idle mode or in connected mode for cells not operating in MBSFN mode as indicated in subclause 8.1.1.6.3.

…

The UE initiates the MBMS counting procedure for an MBMS transmission upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" with the value set to 'Acquire counting info' or set to "Acquire counting info– PTM RBs unmodified".

…

Upon receiving the MBMS ACCESS INFORMATION message for cells not operating in MBSFN mode as indicated in subclause 8.1.1.6.3 including one or more MBMS service(s) it has joined and/or including one or more MBMS Selected Services, the UE shall for each joined and/or selected service:

1> if the UE is in idle mode:

2> draw a random number, "rand", uniformly distributed in the range: $0 \leq rand < 1$

2> if 'rand' is lower than the value indicated by the IE 'Access probability factor-Idle' for the concerned service:

3> indicate to upper layers that establishment of an RRC connection is required to receive the concerned MBMS service, with the establishment cause set to 'MBMS reception';

3> if the above condition applies for more than one service, initiate a single indication to upper layers;

3> if the RRC connection establishment succeeds, the procedure ends.

…

1> submit the RRC CONNECTION REQUEST message for transmission on the uplink CCCH;

1> set counter V300 to 1; and

1> if the variable ESTABLISHMENT_CAUSE is set to "MBMS reception":

2> when the MAC layer indicates success or failure to transmit the message:

3> if the MAC layer indicates failure:

4> enter idle mode;

4> consider the procedure to be unsuccessful;

4> perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;

4> the procedure ends.

3> else:

4> start timer T318;

4> apply value 0 for counter N300 regardless of the value included in IE "UE Timers and Constants in idle mode".

…

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

…

1> otherwise if the UE performs connection establishment for MBMS counting as specified in subclause 8.7.4; and

1> if one or more of the MBMS services for which the UE initiates the counting response concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the counting response:

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> if the UE included one or more "MBMS Selected Service ID" IEs:

2> include the IE "MBMS Modification Period identity" and set it to a value in accordance with subclause 8.5.29.

…

If the counting response procedure (RRC connection establishment or Cell update) fails, the UE shall:

1> if the failure occurs in the same modification period as the one in which the UE initiated the counting response procedure; or

1> if the message triggering the MBMS counting procedure included the IE "Continue MCCH reading" with a value set to TRUE that is applicable in the modification period in which the UE detects the failure:

2> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

1> otherwise:

2> the procedure ends.

Reference

3GPP TS 25.331 clauses 8.7.4, 8.7.4.1, 8.7.4.2, 8.7.4.3, 8.1.3.2, 8.1.3.3, 8.7.4.5.

### 8.5.5.7.3 Test purpose

To confirm that the UE starts T318 timer once UE MAC layer indicates successful transmission of RRC Connection Request message for MBMS counting.

To verify that the UE continues to acquire MBMS ACCESS INFORMATION messages after Expiry of T318, and hence re-start RRC Connection Request procedure for counting.

### 8.5.5.7.4 Method of test

Initial Condition

System Simulator: 1 MBMS cell (cell 21).

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Longest MCCH scheduling configuration defined in 34.108 clause 11.1.1.3 is used.

### Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

### Test Procedure

The SS transmits an MBMS MODIFIED SERVICE INFORMATION message which includes in the “Modified service list” for the MBMS activated service “MBMS required UE action” set to “Acquire counting info”.

The SS transmits an MBMS ACCESS INFORMATION message, which includes the MBMS Short transmission ID associated to the MBMS activated service and “Access probability factor – Idle” set to 0.

NOTE: The “Access probability factor” sent in the MBMS ACCESS INFORMATION message set to 0 corresponds to an actual Probability Factor = 1, according to the formula in TS 25.331 clause 10.2.16e.

The UE transmits an RRC CONNECTION REQUEST message to the SS, with “Establishment cause” set to “MBMS reception”. After MAC indication on successful transmission, starts T318 timer.

SS does not respond to the RRC CONNECTION REQUEST message.

After expiry of T318, UE Re-acquires MBMS ACCESS INFORMATION, and re-starts the counting procedure. The UE transmits an RRC CONNECTION REQUEST message to the SS, with “Establishment cause” set to “MBMS reception”.

The SS transmits an RRC CONNECTION SETUP message to the UE which moves the UE to CELL_DCH state.

When the UE receives this message, the UE establishes an RRC connection and transmits an RRC CONNECTION SETUP COMPLETE message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in idle mode. |
| 1 | | ← | MBMS MODIFIED SERVICES INFORMATION | The SS transmits the message, which includes “MBMS required UE action” set to “Acquire counting info” |
| 2 | | ← | MBMS ACCESS INFORMATION | The SS transmits the message, which includes “MBMS short transmission ID” IE referring to the service the UE has activated and “Access probability factor – Idle” IE set to 0 (corresponding to actual Access Probability = 1). |
| 3 | | ← | MBMS GENERAL INFORMATION | |
| 4 | | → | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS reception” |
| 5 | | | | SS does not respond to RRC Connection Request message in step 4. |
| 6 | | → | RRC CONNECTION REQUEST | The UE re-sends the message with Establishment cause set to “MBMS reception” with the “MBMS Selected Services Short” IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 7 | | ← | RRC CONNECTION SETUP | SS assigns DPCH resources to allow UE to establish an RRC connection.<br>RRC state indicator set to CELL_DCH. |
| 8 | | → | RRC CONNECTION SETUP COMPLETE | |
| 8a | | → | MBMS MODIFICATION REQUEST | The UE completing the RRC connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after step 8 and before step 10. |
| 9 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception”. |
| 10 | | ←→ | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in idle mode | |
| -T300 | 8000 milli seconds |

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified service list | Only 1 entry |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire counting info |
| - Continue MCCH reading | TRUE |

MBMS ACCESS INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| Service list | Only 1 entry |
| - MBMS short transmission ID | Index to the MBMS transmission identity in the previous MBMS MODIFIED SERVICES INFORMATION |
| - Access probability factor – Idle | 0 (corresponding to the actual probability factor value 1) |

MBMS GENERAL INFORMATION (Step 3)

Use the default message type found in TS 34.108, 9.1.1 except for

| | |
|---|---|
| MBMS timers and counters | |
| - T318 | 1500 ms |

RRC CONNECTION REQUEST (Step 4 and 6)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI. |
| Establishment Cause | MBMS reception |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |
| MBMS Selected Services | |
| - MBMS Selected Services | Only 1 entry |
| - MBMS Selected Service ID | MBMS short transmission identity referring to the service the UE has selected |
| - Modification period identity | Indicates the modification period the MBMS short transmission identities refer to |

RRC CONNECTION SETUP (Step 7)

Use the default message type found in TS 34.108, 9.1.1.

RRC CONNECTION SETUP COMPLETE (Step 8)

Use the default message type found in TS 34.108, 9.1.1.

MBMS MODIFICATION REQUEST (steps 8a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info | |
| - CHOICE Status | Some |
| - MBMS Selected Services Full | |
| - MBMS Selected Service ID | Only 1 entry |
| - MBMS Service ID | MBMS service ID of the activated MBMS service |
| - CHOICE PLMN identity | Check to see that one of the below choice element is present |
| - SameAs-MIB | (no data) |
| - explicitPLMN_Id | Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

#### 8.5.5.7.5 Test requirement

At step 4 and 6, the UE shall transmit an RRC CONNECTION REQUEST message with “Establishment Cause” set to “MBMS reception” on the uplink CCCH and including the IE “MBMS Selected Service ID” of the concerned MBMS selected service within the IE “MBMS Selected Services Short” and the IE “MBMS Modification Period identity”.

The time difference between step 4 and 6 should be at least 1500 milliseconds (T318 expiry), and less than 6 seconds (T318 [1500ms] +2*AP [1280ms] +Transmission time on PRACH)

At step 8, the UE shall transmit an RRC CONNECTION SETUP COMPLETE message on a dedicated channel.

### 8.5.5.7m RRC Connection establishment for MBMS Counting :Success after T318 Timeout / MBMS Multicast Service

#### 8.5.5.7m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.5.7m.2 Conformance requirement

Same conformance requirement as in clause 8.5.5.7.2.

#### 8.5.5.7m.3 Test purpose

Same test purpose as in clause 8.5.5.7.3.

#### 8.5.5.7m.4 Method of test

##### Initial Condition

System Simulator: 1 MBMS cell (cell 21).

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

##### Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

##### Test procedure

Same test procedure as in clause 8.5.5.7.4, except expected sequence step 8a is not applicable and at step 9 UE transmits Service Request, with IE "Service type" set to "MBMS Multicast service Reception”.

##### Specific message contents

Same specific messages contents as in clause 8.5.5.7.4 except for RRC CONNECTION REQUEST message content (step 4 and 6). Step 8a contents are not applicable.

RRC CONNECTION REQUEST (Step 4 and 6)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered P-TMSI. |
| Establishment Cause | MBMS reception |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |
| MBMS Selected Services | Not present |

#### 8.5.5.7m.5 Test requirements

Same Test Requirements as in clause 8.5.5.7.5, except UE shall not include in the IE “MBMS Selected Service ID” of the concerned MBMS selected service within the IE “MBMS Selected Services Short” and the IE “MBMS Modification Period identity” in step 4 and 6.

### 8.5.5.8 RRC Connection establishment for MBMS Counting :Success after MAC Layer Failure Indication/ MBMS Selected Service

#### 8.5.5.8.1 Definition

This test case is applicable for UEs that support MBMS broadcast services.

#### 8.5.5.8.2 Conformance requirement

The MBMS counting procedure is used by the UE to inform UTRAN about its interest to receive an MBMS transmission. The procedure applies to UEs supporting MBMS that are in idle mode or in connected mode for cells not operating in MBSFN mode as indicated in subclause 8.1.1.6.3.

…

The UE initiates the MBMS counting procedure for an MBMS transmission upon receiving an MBMS MODIFIED SERVICES message including IE "MBMS required UE action" with the value set to 'Acquire counting info' or set to "Acquire counting info– PTM RBs unmodified".

…

Upon receiving the MBMS ACCESS INFORMATION message for cells not operating in MBSFN mode as indicated in subclause 8.1.1.6.3 including one or more MBMS service(s) it has joined and/or including one or more MBMS Selected Services, the UE shall for each joined and/or selected service:

1> if the UE is in idle mode:

2> draw a random number, "rand", uniformly distributed in the range: $0 \leq rand < 1$

2> if 'rand' is lower than the value indicated by the IE 'Access probability factor-Idle' for the concerned service:

3> indicate to upper layers that establishment of an RRC connection is required to receive the concerned MBMS service, with the establishment cause set to 'MBMS reception';

3> if the above condition applies for more than one service, initiate a single indication to upper layers;

3> if the RRC connection establishment succeeds, the procedure ends.

…

1> submit the RRC CONNECTION REQUEST message for transmission on the uplink CCCH;

1> set counter V300 to 1; and

1> if the variable ESTABLISHMENT_CAUSE is set to "MBMS reception":

2> when the MAC layer indicates success or failure to transmit the message:

3> if the MAC layer indicates failure:

4> enter idle mode;

4> consider the procedure to be unsuccessful;

4> perform other actions when entering idle mode from connected mode as specified in subclause 8.5.2;

4> the procedure ends.

3> else:

4> start timer T318;

4> apply value 0 for counter N300 regardless of the value included in IE "UE Timers and Constants in idle mode".

…

The UE shall, in the transmitted RRC CONNECTION REQUEST message:

…

1> otherwise if the UE performs connection establishment for MBMS counting as specified in subclause 8.7.4; and

1> if one or more of the MBMS services for which the UE initiates the counting response concerns an MBMS Selected Service:

2> for each MBMS Selected Service that is indicated on MCCH and for which the UE initiates the counting response:

3> include the IE "MBMS Selected Service ID" within the IE "MBMS Selected Services Short" and set it to a value in accordance with subclause 8.6.9.8.

1> if the UE included one or more "MBMS Selected Service ID" IEs:

3> include the IE "MBMS Modification Period identity" and set it to a value in accordance with subclause 8.5.29.

…

If the counting response procedure (RRC connection establishment or Cell update) fails, the UE shall:

1> if the failure occurs in the same modification period as the one in which the UE initiated the counting response procedure; or

1> if the message triggering the MBMS counting procedure included the IE "Continue MCCH reading" with a value set to TRUE that is applicable in the modification period in which the UE detects the failure:

2> continue acquiring further MBMS ACCESS INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3.

1> otherwise:

2> the procedure ends.

Reference

3GPP TS 25.331 clauses 8.7.4, 8.7.4.1, 8.7.4.2, 8.7.4.3, 8.1.3.2, 8.1.3.3, 8.7.4.5.

#### 8.5.5.8.3 Test purpose

To confirm that the UE does not start T318 timer once UE MAC layer indicates un-successful transmission of RRC Connection Request message for MBMS counting.

To verify that the UE continues to acquire MBMS ACCESS INFORMATION messages after MAC layer failure indication for first RRC Connection Request transmission, and hence re-start RRC Connection Request procedure for counting.

#### 8.5.5.8.4 Method of test

Initial Condition

System Simulator: 1 MBMS cell (cell 21).

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Longest MCCH scheduling configuration defined in 34.108 clause 11.1.1.3 is used.

### Related ICS/IXIT statements

- MBMS Broadcast service application available on UE Yes/No.

### Test Procedure

The SS transmits an MBMS MODIFIED SERVICE INFORMATION message which includes in the "Modified service list" for the MBMS activated service "MBMS required UE action" set to "Acquire counting info".

The SS transmits an MBMS ACCESS INFORMATION message, which includes the MBMS Short transmission ID associated to the MBMS activated service and "Access probability factor – Idle" set to 0.

NOTE: The "Access probability factor" sent in the MBMS ACCESS INFORMATION message set to 0 corresponds to an actual Probability Factor = 1, according to the formula in TS 25.331 clause 10.2.16e.

The UE submits RRC CONNECTION REQUEST message for transmission, with "Establishment cause" set to "MBMS reception".

SS does not acknowledge the RACH access on AICH.

After Failure indication by UE MAC Layer, UE Re-acquires MBMS ACCESS INFORMATION, and re-starts the counting procedure. The UE transmits RRC CONNECTION REQUEST message to the SS, with "Establishment cause" set to "MBMS reception".

The SS transmits an RRC CONNECTION SETUP message to the UE which moves the UE to CELL_DCH state.

When the UE receives this message, the UE establishes an RRC connection and transmits an RRC CONNECTION SETUP COMPLETE message.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The UE is in idle mode. |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | The SS transmits the message, which includes “MBMS required UE action” set to “Acquire counting info” |
| 2 | ← | | MBMS ACCESS INFORMATION | The SS transmits the message, which includes “MBMS short transmission ID” IE referring to the service the UE activated and “Access probability factor – Idle” IE set to 0 (corresponding to actual Access Probability = 1). |
| 3 | ← | | MBMS GENERAL INFORMATION | |
| 4 | → | | ACCESS PREAMBLE(RRC CONNECTION REQUEST) | |
| 5 | | | | SS does not respond to ACCESS PREAMBLE on AICH channel. |
| 6 | | | | After Failure indication by MAC Layer, UE starts acquiring MBMS ACCESS INFORMATION |
| 7 | → | | RRC CONNECTION REQUEST | The UE re-sends the message with Establishment cause set to “MBMS reception”. (SS ACKS on AICH for ACCESS PREAMBLE) |
| 8 | ← | | RRC CONNECTION SETUP | SS assigns DPCH resources to allow UE to establish an RRC connection.<br>RRC state indicator set to CELL_DCH. |
| 9 | → | | RRC CONNECTION SETUP COMPLETE | |
| 9a | → | | MBMS MODIFICATION REQUEST | The UE completing the RRC connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after step 9 and before step 11. |
| 10 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception”. |
| 11 | ←→ | | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

System Information Block type 1 (FDD)

Use the default system information block with the same type specified in clause 6.1 of TS 34.108, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - UE Timers and constants in idle mode | |
| -T300 | 8000 milli seconds |

MBMS MODIFIED SERVICES INFORMATION (Step 1)

| Information Element | Value/remark |
|---|---|
| Modified service list | Only 1 entry |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire counting info |
| - Continue MCCH reading | TRUE |

MBMS ACCESS INFORMATION (Step 2)

| Information Element | Value/remark |
|---|---|
| Service list | Only 1 entry |
| - MBMS short transmission ID | Index to the MBMS transmission identity in the previous MBMS MODIFIED SERVICES INFORMATION |
| - Access probability factor – Idle | 0 (corresponding to the actual probability factor value 1) |

MBMS GENERAL INFORMATION (Step 3)

Use the default message type found in TS 34.108, 9.1.1 except for

| | |
|---|---|
| MBMS timers and counters | |
| - T318 | 16000 ms |

RRC CONNECTION REQUEST (Step 7)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI. |
| Establishment Cause | MBMS reception |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |
| MBMS Selected Services | |
| - MBMS Selected Services | Only 1 entry |
| - MBMS Selected Service ID | MBMS short transmission identity referring to the service the UE has selected |
| - Modification period identity | Indicates the modification period the MBMS short transmission identities refer to |

RRC CONNECTION SETUP (Step 8)

Use the default message type found in TS 34.108, 9.1.1.

RRC CONNECTION SETUP COMPLETE (Step 9)

Use the default message type found in TS 34.108, 9.1.1.

MBMS MODIFICATION REQUEST (steps 9a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info | |
| - CHOICE Status | Some |
| - MBMS Selected Services Full | |
| - MBMS Selected Service ID | Only 1 entry |
| - MBMS Service ID | MBMS service ID of the activated MBMS service |
| - CHOICE PLMN identity | Check to see that one of the below choice element is present |
| - SameAs-MIB | (no data) |
| - explicitPLMN_Id | Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

#### 8.5.5.8.5 Test requirement

At step 7, the UE shall transmit an RRC CONNECTION REQUEST message with “Establishment Cause” set to “MBMS reception” on the uplink CCCH and including the IE “MBMS Selected Service ID” of the concerned MBMS selected service within the IE “MBMS Selected Services Short” and the IE “MBMS Modification Period identity”.

The time difference between step 4(last Access Preamble Reception) and 7 should be at least 1280 milliseconds (one AP), and less than 4 seconds (2*AP[1280ms]+Transmission time on PRACH).

At step 9, the UE shall transmit an RRC CONNECTION SETUP COMPLETE message on a dedicated channel.

### 8.5.5.8m RRC Connection establishment for MBMS Counting :Success after MAC Layer Failure Indication / MBMS Multicast Service

#### 8.5.5.8m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.5.8m.2 Conformance requirement

Same conformance requirement as in clause 8.5.5.8.2.

#### 8.5.5.8m.3 Test purpose

Same test purpose as in clause 8.5.5.8.3.

#### 8.5.5.8m.4 Method of test

Initial Condition

System Simulator: 1 MBMS cell (cell 21).

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.5.8.4, except expected sequence step 9a is not applicable and at step 10 UE transmits Service Request, with IE "Service type" set to "MBMS Multicast service Reception”.

Specific message contents

Same specific messages contents as in clause 8.5.5.8.4 except for RRC CONNECTION REQUEST message content (step 7). Step 9a contents are not applicable.

RRC CONNECTION REQUEST (Step 7)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered P-TMSI. |
| Establishment Cause | MBMS reception |
| Protocol Error Indicator | Check to see if it is set to FALSE |
| Measured results on RACH | Not checked. |
| MBMS Selected Services | Not present |

#### 8.5.5.8m.5 Test requirements

Same Test Requirements as in clause 8.5.5.8.5, except UE shall not include in the IE "MBMS Selected Service ID" of the concerned MBMS selected service within the IE "MBMS Selected Services Short" and the IE "MBMS Modification Period identity" in step 7.

## 8.5.6 MBMS Controlling Cell Change

### 8.5.6.1 MBMS Controlling Cell Change - Idle mode - Frequency Layer Convergence – HCS Not Used / MBMS Selected Service

#### 8.5.6.1.1 Definition

Test to verify that the UE performs the cell reselection correctly if system information parameters Qoffset, Qhyst, Qoffmbms and Treselection are applied for non-hierarchical cell structures. This test case is applicable for all UEs that support MBMS broadcast services.

#### 8.5.6.1.2 Conformance requirement

When camped normally, the UE shall perform the following tasks:

- select and monitor the indicated PICH and PCH of the cell as specified in clause 8 according to information sent in system information;
- monitor relevant System Information. This is specified in [8];
- perform necessary measurements for the cell reselection evaluation procedure;
- execute the cell reselection evaluation process on the following occasions/triggers:
  1) UE internal triggers, so as to meet performance as specified in [22] and [23];
  2) When information on the BCCH used for the cell reselection evaluation procedure has been modified

If the UE supports MBMS and MBMS is active in the cell and the UE is permitted to receive MBMS services in the cell, the UE shall perform MBMS tasks as specified in subclause 6.3 of TS 25.304.

…

The cell-ranking criterion R is defined by:

$$R_s = Q_{meas,s} + Qhyst_s + Qoffmbms$$

$$R_n = Q_{meas,n} - Qoffset_{s,n} + Qoffmbms - TO_n * (1 - L_n)$$

where:

the signalled value Qoffmbms is only applied to those cells (serving or neighbouring) belonging to the MBMS PL

…

The cells shall be ranked according to the R criteria specified above, deriving $Q_{meas,n}$ and $Q_{meas,s}$ and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in [22] and [23] for FDD, TDD and GSM cells, respectively.

The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$. For UE in RRC connected mode states CELL_PCH or URA_PCH the hysteresis $Qhyst_s$ takes the value $Qhyst1_{s,PCH}$ to calculate $R_s$, if provided in SIB4 [see 8]. For UE in RRC connected mode state CELL_FACH the hysteresis $Qhyst_s$ takes the value $Qhyst1_{s,FACH}$ to calculate $R_s$, if provided in SIB4 [see 8].

…

If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell. If this cell is found to be not suitable, the UE shall behave according to subclause 5.2.6.1.3 of TS 25.304.

…

In all cases, the UE shall reselect the new cell, only if the following conditions are met:

- the new cell is better ranked than the serving cell during a time interval Treselection. For UE in RRC connected mode states CELL_PCH or URA_PCH the interval $Treselection_{s,PCH}$ applies, if provided in SIB4 [see 8], while for UE in RRC connected mode state CELL_FACH the interval $Treselection_{s,FACH}$ applies, if provided in SIB4 [see 8]. For hierarchical cell structures when high mobility state has not been detected, if according to the HCS rules the serving cell is not ranked then all the ranked cells are considered to be better ranked than the serving cell.

Reference

3GPP TS 25.304 clauses 5.2.5.1, 5.2.6.1.4.

### 8.5.6.1.3 Test purpose

1. To verify that a UE in idle mode calculates R from Qhyst, and Qoffset and Qoffmbms, which triggers the cell reselection evaluation process.

2. To verify that a UE in idle mode performs a Serving Cell Reselection to the Preferred Layer at Session Start.

3. To verify that a UE in idle mode performs an intra-frequency Cell Reselection on the Preferred Layer during an ongoing Session

### 8.5.6.1.4 Method of test

Initial Condition

System Simulator: 3 MBMS cells (Cell 21, Cell 24, Cell 26) with the downlink transmission power shown in column marked "T0" in table 8.5.6.1-1.

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108 and camped on Cell 21.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Specific message contents for System information blocks 3 and 11 are used in Cell 21.

Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No

Test procedure

Table 8.5.6.1-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Columns marked “T0” denote the initial conditions, while columns marked “T1” are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.5.6.1-1**

| Parameter | Unit | Cell 21 | | Cell 24 | | Cell 26 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | -60 | -66 | -75 | -75 | -66 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | -66 | -75 | -75 | -66 |

The UE is in idle mode in Cell 21.

The SS notifies on MICH and MCCH in Cell 1 about the start of an MBMS session including a preferred frequency in the IE “MBMS preferred frequency”. The UE reselects to Cell 24 (Frequency Layer Convergence).

The SS transmits an MBMS MODIFIED SERVICE INFORMATION message which includes in the “Modified service list” for the MBMS activated service “MBMS required UE action” set to “Acquire counting info” and MBMS ACCESS INFORMATION message, which includes the MBMS Short Transmission ID associated to the MBMS activated service and “Access probability factor – Idle” set to 0 (corresponds to an actual Probability Factor = 1).

The UE shall transmit an RRC CONNECTION REQUEST message, with “Establishment cause” set to “MBMS reception”. The SS transmits a RRC CONNECTION SETUP. The UE establishes an RRC connection and transmits an RRC CONNECTION SETUP COMPLETE message.

The UE receives an MBMS MODIFIED SERVICES INFORMATION message “MBMS required UE action” IE set to “Acquire PTM RB info”. The UE receives an MBMS NEIGHBOURING CELL P-T-M RB INFORMATION including MBMS neighbouring cell information for Cell 26. The UE shall apply the MBMS p-t-m radio bearer configuration procedure to acquire the radio bearer configuration for the MBMS service provided by the SS.

The UE starts receiving the indicated p-t-m radio bearer.

The SS applies the power settings of “T1” in table 8.5.6.1-1. Then the UE shall reselect to Cell 26 applying the Qoffmbms.

The UE receives an MBMS UNMODIFIED SERVICES INFORMATION message “MBMS required UE action” IE set to “Acquire PTM RB info”. The UE receives an MBMS NEIGHBOURING CELL P-T-M RB INFORMATION including MBMS neighbouring cell information for Cell 24. The UE shall apply the MBMS p-t-m radio bearer configuration and continues receiving the indicated p-t-m radio bearer.

SS calls for generic procedure C.1 to check that UE is in idle mode.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is in idle mode on Cell 21. |
| 2 | ← | | SYSTEM INFORMATION | See specific message contents for SIB3 |
| 3 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "none" and the "MBMS preferred frequency" IE indicates the reference to Ch. 2. |
| 4 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information is set to Ch. 2. Qoffmbms is set to 12 dB. |
| 5 | UE | | | UE reselects to Cell 24 |
| 5a | SS | | | The following MCCH messages are sent on Cell 24. |
| 6 | ← | | MBMS MODIFIED SERVICES INFORMATION | Transmitted "MBMS required UE action" IE is set to "Acquire counting info" |
| 7 | ← | | MBMS ACCESS INFORMATION | "MBMS short transmission ID" IE set to 1, "Access probability factor – Idle" set to 0 (corresponding to the actual probability factor value 1). |
| 8 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 9 | → | | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to "MBMS reception" and in case of MBMS Selected service with the "MBMS Selected Services Short" IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 10 | ← | | RRC CONNECTION SETUP | |
| 11 | → | | RRC CONNECTION SETUP COMPLETE | |
| 11a | → | | MBMS MODIFICATION REQUEST | The UE completing the RRC connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure in case of MBMS selected Service. This message may be received at any point after step 11 and before step 13. |
| 12 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception". |
| 13 | ← | | RRC CONNECTION RELEASE | |
| 14 | → | | RRC CONNECTION RELEASE COMPLETE | The UE shall enter idle state. |
| 15 | ← | | MBMS MODIFIED SERVICES INFORMATION | MBMS session start. The SS also sets the Notification Indicator on MICH. The SS waits for the UE to establish the MTCH. |
| 16 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 17 | ← | | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | This message has info for neighbouring cell 26 |
| 18 | SS | | | The SS applies the power settings of "T1" in Table 8.5.6.1-1 |

| | | | |
|---|---|---|---|
| 19 | UE | | UE performs reselection applying Qoffmbms and reselects the Cell 26 |
| 20 | ← | MBMS UNMODIFIED SERVICES INFORMATION | There is no change in MBMS services already ongoing in previous cell |
| 21 | ← | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 22 | ← | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | This message has info for neighbouring cell 24 |
| 23 | ←→ | CALL C.1 | If the test result of C.1 indicates that UE is in idle mode, the test passes, otherwise it fails. |

Specific Message Contents

SYSTEM INFORMATION BLOCK TYPE 3 (Step 2)

| Information Element | Value/remark |
|---|---|
| Sintersearch | Not Present |

MBMS MODIFIED SERVICES INFORMATION (Step 3)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>- MBMS required UE action<br>- MBMS preferred frequency<br>- PFL index<br><br><br>- Continue MCCH reading | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>None<br><br>Index for Ch 2 (the frequency that UEs shall consider as the preferred frequency layer for cell re-selection during a session for an MBMS service the UE has activated)<br>FALSE |

MBMS GENERAL INFORMATION (Step 4)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information<br>- MBMS preferred frequency list<br>- MBMS preferred frequency<br><br><br>- CHOICE Layer convergence information<br>- No HCS<br>- Qoffmbms | <br>Only 1 entry<br>Ch 2 (the frequency that UEs shall consider as the preferred frequency layer for cell re-selection during a session for an MBMS service the UE has activated)<br><br><br>12 dB |

MBMS MODIFIED SERVICES INFORMATION (Step 6)

| Information Element | Value/remark |
|---|---|
| Modified service list<br>- MBMS Transmission identity<br><br>- MBMS required UE action<br>- Continue MCCH reading | Only 1 entry<br>MBMS Transmission identity indicating MBMS activated service<br>Acquire counting info<br>FALSE |

MBMS MODIFIED SERVICES INFORMATION (Step 15)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Modified service list | |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |
| MBMS p-t-m activation time | SS shall choose a value which is sufficient far ahead for the UE to establish the MTCH |

MBMS UNMODIFIED SERVICES INFORMATION (Step 20)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Unmodified service list | |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |

#### 8.5.6.1.5 Test requirement

After step 6, the UE upon receiving an MBMS MODIFIED SERVICES INFORMATION message with IE "MBMS required UE action" set to 'Acquire counting info', shall perform the counting procedure.

At step 8, the UE shall send an RRC CONNECTION REQUEST message with "Establishment cause" set to 'MBMS reception'.

After step 15, the UE shall reselect to Cell 26 applying the Qoffmbms and the SS shall check that the UE is camped on Cell 26 in idle mode.

### 8.5.6.1m MBMS Controlling Cell Change - Idle mode - Frequency Layer Convergence – HCS Not Used / MBMS Multicast Service

#### 8.5.6.1m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.6.1m.2 Conformance requirement

Same conformance requirement as in clause 8.5.6.1.2

#### 8.5.6.1m.3 Test purpose

Same test purpose as in clause 8.5.6.1.3.

#### 8.5.6.1m.4 Method of test

Initial condition

System Simulator:

3 MBMS cells , Cell 21, Cell 24, Cell 26.

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.6.1.4, except that at step 12 UE transmits Service Request, with IE "Service type" set to "MBMS Multicast service Reception".

Specific message contents

Same specific messages contents as in clause 8.5.6.1.4

#### 8.5.6.1m.5 Test requirements

Same test requirement as in clause 8.5.6.1.5.

### 8.5.6.2 MBMS Controlling Cell Change in CELL_FACH during ongoing session / MBMS Broadcast Service

#### 8.5.6.2.1 Definition and applicability

This test case is applicable for all UEs that support MBMS broadcast services.

#### 8.5.6.2.2 Conformance requirement

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3 of TS 25.331.

The UE shall immediately acquire the MBMS ACCESS INFORMATION and the MBMS GENERAL INFORMATION messages i.e. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information e.g. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

The UE may:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state; and

1> if not receiving an MBMS service provided via a p-t-m radio bearer:

2> monitor the MBMS notification Indicator Channel (MICH).

2> if a notification on the MICH for one or more of the MBMS services included in the variable MBMS_ACTIVATED_SERVICES is detected:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message with delaying the reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3 of TS 25.331;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4 of TS 25.331.

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if receiving an MBMS service that is provided via a p-t-m radio bearer; or

2> if not receiving an MBMS service that is provided via a p-t-m radio bearer and not monitoring MICH:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3 of TS 25.331;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4 of TS 25.331.

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

Reference

3GPP TS 25.331 clause 8.7.2.3, 8.7.3.3.1, 8.6.9.6.

### 8.5.6.2.3 Test purpose

1. To verify that a UE in CELL_FACH state performs an inter-frequency MBMS Controlling Cell Change during an ongoing Session.
2. To verify that a UE in CELL_FACH state performs an intra-frequency MBMS Controlling Cell Change during an ongoing Session.
3. To verify that the UE is able to read MCCH in combination with FACH measurements.
4. To verify that a UE in CELL_FACH is able to apply MBMS NEIGHBOURING CELLS P-T-M RB INFORMATION and receive data on this p-t-m radio bearer.

### 8.5.6.2.4 Method of test

Initial Condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24 and Cell 26.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Specific message contents for System information blocks 3 and 11 are used in Cell 21.

Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No

Test Procedure

Table 8.5.6.2-1 illustrates the downlink power to be applied for the 3 cells in this test case. Initially, the SS applies the power settings of column “T0”.

**Table 8.5.6.2-1**

| Parameter | Unit | Cell 21 | | | Cell 24 | | | Cell 26 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | High Range Test Frequency | | | High Range Test Frequency | | |
| CPICH Ec ( FDD ) | dBm/3.84 MHz | -60 | -80 | -80 | -70 | -60 | -70 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -80 | -80 | -70 | -60 | -70 | -70 | -70 | -60 |

The UE is in CELL_FACH state in Cell 21. The SS notifies on MICH and MCCH about the start of an MBMS session and waits for the UE to activate MTCH reception. The MBMS radio bearer on MTCH is put into loopback mode 3.

The SS sends 10 RLC SDUs of MBMS data on MTCH in Cell 21 on the concerned MBMS radio bearer. The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the UE has received at least one RLC SDUs.

The SS applies the power settings of “T1” in table 8.5.6.2-1. Then the UE shall reselect to Cell 24 and send a CELL UPDATE message on the CCCH. SS then replies with CELL UPDATE CONFIRM message on the downlink DCCH.

The SS provides information about the ongoing MBMS service in cell 24 by sending MBMS UNMODIFIED SERVICES INFORMATION. The SS informs the UE about Cell 26 as neighbouring cell by sending MBMS NEIGHBOURING CELL P-T-M RB INFORMATION in Cell 24. The MBMS radio bearer on MTCH is put into loopback mode 3, and SDU counter is reset to 0.The SS transmits 10 RLC SDUs of MBMS data in Cell 24. The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the reported number is greater than zero.

The SS transmits 10 RLC SDUs of MBMS data in neighbouring Cell 26. The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the reported number is greater than the number reported previously at step 16 of expected sequence.

The SS applies the power settings of “T2” in table 8.5.6.2-1. Then the UE shall reselect to Cell 26 and send a CELL UPDATE message on the CCCH. SS then replies with CELL UPDATE CONFIRM message on the downlink DCCH.

The SS provides information about the ongoing MBMS service in cell 26 by MBMS UNMODIFIED SERVICES INFORMATION. The SS informs the UE about Cell 24 as neighbouring cell by sending MBMS NEIGHBOURING CELL P-T-M RB INFORMATION in Cell 26.

The SS transmits 10 RLC SDUs of MBMS data in Cell 26. The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the reported number is greater than the number reported by the UE previously at step 19 of expected sequence.

The SS transmits 10 RLC SDUs of MBMS data in neighbouring Cell 24. The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the reported number is greater than the number reported by the UE at step 27 of expected sequence.The loopback mode 3 in the UE is deactivated.

SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of selecting the wrong cell, the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | ← | | SYSTEM INFORMATION | See specific message contents for SIB3 and SIB11 |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | MBMS MODIFIED SERVICES INFORMATION | MBMS session start. The SS also sets the Notification Indicator on MICH. The SS waits for the UE to establish the MTCH. |
| 4 | ← | | CLOSE UE TEST LOOP | |
| 5 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 6 | SS | | | The SS broadcasts 10 RLC SDUs of MBMS data in Cell 21. |
| 7 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 8 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data in Cell 21. The SS checks that the number of reported RLC PDUs is greater than zero and records that value. |
| 9 | SS | | | The SS applies the power settings of “T1” in table 8.5.6.2-1. |
| 10 | → | | CELL UPDATE | This message is transmitted in Cell 24. |
| 11 | ← | | CELL UPDATE CONFIRM | |
| 11a | → | | UTRAN MOBILITY INFORMATION CONFIRM | After receipt of this message the SS waits for the UE to establish the MTCH |
| 11b | ← | | CLOSE UE TEST LOOP | |
| 11c | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 12 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | |
| 13 | ← | | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | This message has info for neighbouring cell 26 |
| 14 | SS | | | The SS transmits 10 RLC SDUs of MBMS data in Cell 24. |
| 15 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 16 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data also in Cell 24. The SS checks that the number of reported RLC PDUs is greater than 0. |
| 17 | SS | | | The SS transmits 10 RLC SDUs of MBMS data in neighbouring Cell 26. |
| 18 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 19 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data also from Cell 26. The SS checks that the number of reported RLC PDUs is greater than the value at step 16. |
| 20 | SS | | | The SS applies the power settings of “T2” in table 8.5.6.2-1 |

| | | | |
|---|---|---|---|
| 21 | → | CELL UPDATE | This message is transmitted in cell 26 |
| 22 | ← | CELL UPDATE CONFIRM | |
| 22a | → | UTRAN MOBILITY INFORMATION CONFIRM | |
| 23 | ← | MBMS UNMODIFIED SERVICES INFORMATION | |
| 24 | ← | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | This message has info for cell 24 RAB |
| 25 | SS | | The SS transmits 10 RLC SDUs of MBMS data in Cell 26. |
| 26 | ← | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 27 | → | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data also in Cell 26. The SS checks that the number of reported RLC PDUs is greater than the value at step 19. |
| 28 | SS | | The SS transmits 10 RLC SDUs of MBMS data in neighbouring Cell 24. |
| 29 | ← | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 30 | → | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data also from neighbouring cell 24. The SS checks that the number of reported RLC PDUs is greater than the value at step 27. |
| 31 | ← | OPEN UE TEST LOOP | |
| 32 | → | OPEN UE TEST LOOP COMPLETE | |
| 33 | ←→ | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

SYSTEM INFORMATION BLOCK TYPE 3 (Step 0)

| Information Element | Value/remark |
|---|---|
| Sintersearch | Not Present |

SYSTEM INFORMATION BLOCK TYPE 11 (Step 0) (FDD)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion cycle length coefficient | 3 |
| Inter-frequency FDD measurement indicator | TRUE |

SYSTEM INFORMATION BLOCK TYPE 11 (Step 0) (1.28Mcps TDD)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion cycle length coefficient | 3 |
| Inter-frequency TDD 1.28 Mcps measurement indicator | TRUE |

SYSTEM INFORMATION BLOCK TYPE 11 (Step 0) (3.84Mcps TDD)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion cycle length coefficient | 2 |
| Inter-frequency TDD 3.84 Mcps measurement indicator | TRUE |

SYSTEM INFORMATION BLOCK TYPE 11 (Step 0) (7.68Mcps TDD)

| Information Element | Value/remark |
|---|---|
| FACH measurement occasion cycle length coefficient | 2 |
| Inter-frequency TDD 7.68 Mcps measurement indicator | TRUE |

MBMS UNMODIFIED SERVICES INFORMATION (Step 12 and 23)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Unmodified service list | |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |

CELL UPDATE (Step 10 and 21)

| Information Element | Value/remark |
|---|---|
| Cell update cause | Check that the value is set to “Cell reselection” |

CELL UPDATE CONFIRM (Step 11 and 22)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Steps 8, 16, 19, 27 and 30)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than previous sub-test |

#### 8.5.6.2.5 Test requirement

After step 7 , the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero.

After step 9, the UE shall transmit a CELL UPDATE message in Cell 24.

After step 15, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero.

After step 18, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than the number reported in step 16.

After step 26, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than the number reported in step 19.

After step 29, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than the number reported in step 27.

### 8.5.6.2m MBMS Controlling Cell Change in CELL_FACH during ongoing session / MBMS Multicast Service

#### 8.5.6.2m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.6.2m.2 Conformance requirement

Same conformance requirement as in clause 8.5.6.2.2

#### 8.5.6.2m.3 Test purpose

Same test purpose as in clause 8.5.6.2.3.

#### 8.5.6.2m.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 24

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 8.5.6.2.4.

Specific message contents

Same specific messages contents as in clause 8.5.6.2.4

#### 8.5.6.2m.5 Test requirements

Same test requirement as in clause 8.5.6.2.5.

### 8.5.6.3 MBMS Controlling Cell Change in CELL_PCH during ongoing session / MBMS Broadcast Service

#### 8.5.6.3.1 Definition and applicability

This test case is applicable for all UEs that support MBMS broadcast services.

#### 8.5.6.3.2 Conformance requirement

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3 of TS 25.331.

The UE shall immediately acquire the MBMS ACCESS INFORMATION and the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

…

The UE may:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state; and

1> if not receiving an MBMS service provided via a p-t-m radio bearer:

2> monitor the MBMS notification Indicator Channel (MICH).

2> if a notification on the MICH for one or more of the MBMS services included in the variable MBMS_ACTIVATED_SERVICES is detected:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message with delaying the reading of MCCH until the next modification period and with stopping at the end of the modification period, in accordance with subclause 8.7.1.3 of TS 25.331;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4 of TS 25.331.

The UE shall:

1> if in idle mode, URA_PCH, CELL_PCH or CELL_FACH state:

2> if receiving an MBMS service that is provided via a p-t-m radio bearer; or

2> if not receiving an MBMS service that is provided via a p-t-m radio bearer and not monitoring MICH:

3> acquire the MBMS MODIFIED SERVICES INFORMATION message from MCCH at the start of every modification period, in accordance with subclause 8.7.1.3 of TS 25.331;

3> handle the MBMS MODIFIED SERVICES INFORMATION message as specified in subclause 8.7.3.4 of TS 25.331.

…

1> if the IE "MBMS required UE action" is set to 'Acquire PTM RB info'; or

1> if the IE "MBMS required UE action" is set to 'Acquire counting info– PTM RBs unmodified' and the UE is not receiving a p-t-m RB for the concerned service:

2> continue acquiring the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3

2> act upon the MBMS COMMON P-T-M RB INFORMATION, MBMS CURRENT CELL P-T-M RB INFORMATION and the MBMS NEIGHBOURING CELL P-T-M RB INFORMATION message, if received, in accordance with subclause 8.7.5;

Reference

3GPP TS 25.331 clauses 8.7.2.3, 8.7.3.3.1, 8.6.9.6.

### 8.5.6.3.3 Test purpose

1. To verify that a UE in CELL_PCH state performs an inter-frequency MBMS Controlling Cell Change during an ongoing Session.
2. To verify that a UE in CELL_PCH state performs an intra-frequency MBMS Controlling Cell Change during an ongoing Session.
3. To verify that a UE in CELL_PCH is able to apply MBMS NEIGHBOURING CELLS P-T-M RB INFORMATION and receive data on this p-t-m radio bearer.

### 8.5.6.3.4 Method of test

Initial Condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24 and Cell 26.

User Equipment:

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No

Test Procedure

Table 8.5.6.3-1 illustrates the downlink power to be applied for the 2 cells in this test case. Initially, the SS applies the power settings of column "T0".

**Table 8.5.6.3-1**

| Parameter | Unit | Cell 21 | | | Cell 24 | | | Cell 26 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | High Range Test Frequency | | | High Range Test Frequency | | |
| CPICH Ec ( FDD ) | dBm/3.84 MHz | -60 | -80 | -80 | -70 | -60 | -70 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -80 | -80 | -70 | -60 | -70 | -70 | -70 | -60 |

The UE is in CELL_FACH state in Cell 21. The SS notifies on MICH and MCCH about the start of an MBMS session and waits for the UE to activate MTCH reception.

The SS orders the UE to move to CELL_PCH state by transmitting a PHYSICAL CHANNEL RECONFIGURATION message with the RRC state indicator set to "CELL_PCH".

The SS applies the power settings of "T1" in table 8.5.6.3-1. At this point the UE shall reselect to Cell 24 and send a CELL UPDATE message on the CCCH. SS then replies with CELL UPDATE CONFIRM message on the downlink DCCH and orders the UE to stay in CELL_FACH state. The UE replies with a UTRAN MOBILITY INFORMATION CONFIRM message, and waits for the UE to activate MTCH reception. The MBMS radio bearer on MTCH is put into loopback mode 3.

The SS orders the UE to move to CELL_PCH state by transmitting a PHYSICAL CHANNEL RECONFIGURATION message with the RRC state indicator set to "CELL_PCH". The UE responds with PHYSICAL CHANNEL RECONIGURATION COMPLETE.

The SS provides information about the ongoing MBMS service in cell 24 by sending MBMS UNMODIFIED SERVICES INFORMATION. The SS informs the UE about Cell 26 as neighbouring cell by sending MBMS NEIGHBOURING CELL P-T-M RB INFORMATION in Cell 24. The SS sends 10 RLC SDUs of MBMS data in neighbouring cell 26.

The SS transmits a PAGING TYPE 1 message to the UE on the PCH and the UE moves to CELL_FACH state, sending a CELL UPDATE message. The SS replies with a CELL UPDATE CONFIRM message and UE confirms the received C-RNTI to be used in CELL FACH state by transmitting a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH.

Then the SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the reported number is greater than the number reported previously at step 14 of expected sequence.

The SS orders the UE to move to CELL_PCH state by transmitting a PHYSICAL CHANNEL RECONFIGURATION message with the RRC state indicator set to "CELL_PCH". When the PHYSICAL CHANNEL RECONFIGURATION COMPLETE message has been received, the SS sends 10 RLC SDUs of MBMS data in serving Cell 24.

The SS applies the power settings of "T2" in table 8.5.6.3-1. At this point the UE shall reselect to Cell 26 and send a CELL UPDATE message on the CCCH. SS then replies with CELL UPDATE CONFIRM message on the downlink DCCH and orders the UE to stay in CELL_FACH state. The UE replies with a UTRAN MOBILITY INFORMATION CONFIRM message.

The SS provides information about the ongoing MBMS service in cell 26 by sending MBMS UNMODIFIED SERVICES INFORMATION. The SS informs the UE about Cell 24 as neighbouring cell by sending MBMS NEIGHBOURING CELL P-T-M RB INFORMATION in Cell 26.

The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the UE has received greater number of RLC SDU than reported in previous step 25 of expected sequence.

The SS orders the UE to move to CELL_PCH state by transmitting a PHYSICAL CHANNEL RECONFIGURATION message with the RRC state indicator set to “CELL_PCH” and the UE responds with PHYSICAL CHANNEL RECONIGURATION COMPLETE.

The SS sends 10 RLC SDUs of MBMS data in neighbouring Cell 24.The SS transmits a PAGING TYPE 1 message to the UE on the PCH and the UE moves to CELL_FACH state, sending a CELL UPDATE message. The SS replies with a CELL UPDATE CONFIRM message and UE confirms the received C-RNTI to be used in CELL FACH state by transmitting a UTRAN MOBILITY INFORMATION CONFIRM message on the uplink DCCH.

The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the reported number is greater than the number previously reported by the UE at step 34 of expected sequence.

The loopback mode 3 in the UE is deactivated.

SS calls for generic procedure C.2 to check that UE is in CELL_FACH state.

NOTE: If the UE fails the test because of selecting the wrong cell, the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | MBMS MODIFIED SERVICES INFORMATION | MBMS session start. The SS also sets the Notification Indicator on MICH. The SS waits for the UE to establish the MTCH. |
| 4 | | | Void | |
| 5 | | | Void | |
| 6 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 7 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE now transits to CELL_PCH state |
| 8 | | | Void | |
| 9 | | SS | | The SS applies the power settings of “T1” in table 8.5.6.3-1. |
| 10 | → | | CELL UPDATE | This message is transmitted in Cell 24. |
| 11 | ← | | CELL UPDATE CONFIRM | |
| 12 | → | | UTRAN MOBILITY INFORMATION CONFIRM | The UE stays in CELL_FACH state in Cell 24. The SS waits for the UE to establish the MTCH |
| 13 | ← | | CLOSE UE TEST LOOP | |
| 14 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 15 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 16 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE now transits to CELL_PCH state |
| 17 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | |
| 18 | ← | | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | This message has info for neighbouring cell 26 |
| 19 | | | | The SS transmits 10 RLC SDUs of MBMS data from neighbouring Cell 26. |
| 20 | ← | | PAGING TYPE 1 | |
| 21 | → | | CELL UPDATE | Paging response |
| 22 | ← | | CELL UPDATE CONFIRM | |
| 23 | → | | UTRAN MOBILITY CONFIRM | |
| 24 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 25 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than 0. |
| 26 | ← | | PHYSICAL CHANNEL RECONFIGURATION | |
| 27 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE now transits to CELL_PCH state |
| 28 | | SS | | The SS transmits 10 RLC SDUs of MBMS data from Cell 24. |
| 29 | | SS | | The SS applies the power settings of “T2” in table 8.5.6.3-1 |
| 30 | → | | CELL UPDATE | This message is transmitted in Cell 26. |
| 31 | ← | | CELL UPDATE CONFIRM | |
| 32 | → | | UTRAN MOBILITY INFORMATION CONFIRM | The UE stays in CELL_FACH state in Cell 26 |

| | | | |
|---|---|---|---|
| 33 | ← | MBMS UNMODIFIED SERVICES INFORMATION | |
| 34 | ← | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | This message has info for neighbouring cell 24 |
| 35 | ← | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 36 | → | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than the previously reported number of RLC PDUs at step 25. |
| 37 | ← | PHYSICAL CHANNEL RECONFIGURATION | |
| 38 | → | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The UE now transits to CELL_PCH state |
| 39 | | | The SS transmits 10 RLC SDUs of MBMS data from neighbouring Cell 24. |
| 40 | ← | PAGING TYPE 1 | |
| 41 | → | CELL UPDATE | Paging response |
| 42 | ← | CELL UPDATE CONFIRM | |
| 43 | → | UTRAN MOBILITY INFORMATION CONFIRM | |
| 44 | ← | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 45 | → | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than the previously reported number of RLC PDUs at step 34. |
| 46 | ← | OPEN UE TEST LOOP | |
| 47 | → | OPEN UE TEST LOOP COMPLETE | |
| 48 | ←→ | CALL C.2 | If the test result of C.2 indicates that UE is in CELL_FACH state, the test passes, otherwise it fails. |

Specific Message Contents

MBMS UNMODIFIED SERVICES INFORMATION (Step 17 and 33)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Unmodified service list | |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |

PHYSICAL CHANNEL RECONFIGURATION (Steps 6, 15, 26 and 37)

Use the same message sub-type titled "Packet to CELL_FACH from CELL_FACH in PS" in TS 34.108 clause 9 with following exceptions:

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 7 |

PAGING TYPE 1 (Step 20 and 40)

Use the following message:

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Only 1 entry |
| Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | |
| - SRNC Identity | Set to the previously assigned SRNC identity |
| - S-RNTI | Set to previously assigned S-RNTI |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Steps 10 and 30)

| Information Element | Value/remark |
|---|---|
| Cell update cause | Check that the value is set to “Cell reselection” |

CELL UPDATE CONFIRM (Steps 11, 22, 31 and 42)

Use the same message sub-type found in TS 34.108, clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| New C-RNTI | '1010 1010 1010 1010' |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Step 14)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than zero |

CELL UPDATE (Steps 21 and 41)

| Information Element | Value/remark |
|---|---|
| Cell update cause | Check that the value is set to “Paging response” |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Step 25, 36 and 45)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than the value reported at the previous sub-test. |

### 8.5.6.3.5 Test requirement

After step 9, the UE shall transmit a CELL UPDATE message in Cell 24.

After step 24, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero.

After step 35, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than the number reported in step 25.

After step 44, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than the number reported in step 36.

## 8.5.6.3m MBMS Controlling Cell Change in CELL_PCH during ongoing session / MBMS Multicast Service

### 8.5.6.3m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

### 8.5.6.3m.2 Conformance requirement

Same conformance requirement as in clause 8.5.6.3.2

### 8.5.6.3m.3 Test purpose

Same test purpose as in clause 8.5.6.3.3.

### 8.5.6.3m.4 Method of test

#### Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 24

User Equipment:

The UE is in CELL_PCH state as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

#### Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

#### Test procedure

Same test procedure as in clause 8.5.6.3.4.

#### Specific message contents

Same specific messages contents as in clause 8.5.6.3.4

### 8.5.6.3m.5 Test requirements

Same test requirement as in clause 8.5.6.3.5.

## 8.5.6.4 MBMS Controlling Cell Change - Idle mode - Frequency Layer Convergence – With HCS / MBMS Selected Service

### 8.5.6.4.1 Definition

Test to verify that the UE performs the cell reselection correctly for hierarchical cell structures. This shall be done according to the HCS priority, the received signal quality value Q and the quality level threshold criterion H. This test case is applicable for all UEs that support MBMS broadcast services.

### 8.5.6.4.2 Conformance requirement

When camped normally, the UE shall perform the following tasks:

- select and monitor the indicated PICH and PCH of the cell as specified in clause 8 according to information sent in system information;
- monitor relevant System Information. This is specified in [8];
- perform necessary measurements for the cell reselection evaluation procedure;
- execute the cell reselection evaluation process on the following occasions/triggers:

1) UE internal triggers, so as to meet performance as specified in [22] and [23];

2) When information on the BCCH used for the cell reselection evaluation procedure has been modified

If the UE supports MBMS and MBMS is active in the cell and the UE is permitted to receive MBMS services in the cell, the UE shall perform MBMS tasks as specified in subclause 6.3 of TS 25.304.

…

In the cell reselection process, an MBMS PL shall only be applicable while the UE is receiving an MBMS session from one or more of the ongoing activated MBMS services for which this PL is indicated.

…

The measurement rules below apply in Idle, URA_PCH, CELL_PCH states. In CELL_FACH state the UE is required to perform measurements on all intra-frequency, inter-frequency and inter-RAT cells listed in system information according to requirements specified in [10]. In Idle, URA_PCH, CELL_PCH and CELL_FACH states the UE shall only consider those cells the UE is mandated to measure according to the measurement rules below as measured cells in the cell reselection criteria (subclause 5.2.6.1.4).

If the system information broadcast in the serving cell indicates that HCS is used, then for intra-frequency and inter-frequency measurements, the UE shall:

use HCS $priority_1$ as the HCS priority broadcast in the system information and apply the following rule:

IF an MBMS PL is used THEN

- If the UE is in HCS low mobility state, for serving cell and neighbour cells belonging to the MBMS PL set the HCS priority = HCS $priority_1$ + $HCS_OFF_{mbms}$.
- If the UE is in HCS high mobility state, for serving cell and neighbour cells belonging to the MBMS PL set the HCS priority = HCS $priority_1$.
- for serving cell and neighbour cells not belonging to the MBMS PL, set the HCS priority = HCS $priority_1$.

IF an MBMS PL is not used THEN

For serving cell and all neighbour cells set HCS priority = HCS $priority_1$

…

The quality level threshold criterion H for hierarchical cell structures is used to determine whether prioritised ranking according to hierarchical cell re-selection rules shall apply, and is defined by:

$$H_s = Q_{meas,s} - Qhcs_s$$

$$H_n = Q_{meas,n} - Qhcs_n - TO_n * L_n$$

…

The cell-ranking criterion R is defined by:

$$R_s = Q_{meas,s} + Qhyst_s + Qoffmbms$$

$$R_n = Q_{meas,n} - Qoffset_{s,n} + Qoffmbms - TO_n * (1 - L_n)$$

where:

the signalled value Qoffmbms is only applied to those cells (serving or neighbouring) belonging to the MBMS PL

where:

$TO_n = TEMP_OFFSET_n * W(PENALTY_TIME_n - T_n)$

$L_n = 0$ if $HCS_PRIO_n = HCS_PRIO_s$
$L_n = 1$ if $HCS_PRIO_n <> HCS_PRIO_s$

$W(x) = 0$ for $x < 0$
$W(x) = 1$ for $x >= 0$

$TEMP_OFFSET_n$ applies an offset to the H and R criteria for the duration of $PENALTY_TIME_n$ after a timer $T_n$ has started for that neighbouring cell.

$TEMP_OFFSET_n$ and $PENALTY_TIME_n$ are only applicable if the usage of HCS is indicated in system information.

…

If HCS is used in the serving cell the UE shall perform ranking of all cells that fulfil the criterion S among

1. when in low-mobility (see subclause 5.2.6.1.2),

   - all measured cells, that have the highest HCS_PRIO among those cells that fulfil the criterion H >= 0.
   - all measured cells, not considering HCS priority levels, if no cell fulfil the criterion H >= 0.

…

If the usage of HCS is indicated in system information, $TEMP_OFFSET1_n$ is used for $TEMP_OFFSET_n$ to calculate $TO_n$. If it is indicated in system information that HCS is not used, $TEMP_OFFSET_n$ is not applied when calculating $R_n$. The best ranked cell is the cell with the highest R value.

…

If a TDD or GSM cell is ranked as the best cell, then the UE shall perform cell re-selection to that TDD or GSM cell

…

If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell. If this cell is found to be not suitable, the UE shall behave according to subclause 5.2.6.1.3.

…

The cells shall be ranked according to the R criteria specified above, deriving $Q_{meas,n}$ and $Q_{meas,s}$ and calculating the R values using CPICH RSCP, P-CCPCH RSCP and the averaged received signal level as specified in [22] and [23] for FDD, TDD and GSM cells, respectively.

The offset $Qoffset1_{s,n}$ is used for $Qoffset_{s,n}$ to calculate $R_n$, the hysteresis $Qhyst1_s$ is used for $Qhyst_s$ to calculate $R_s$. For UE in RRC connected mode states CELL_PCH or URA_PCH the hysteresis $Qhyst_s$ takes the value $Qhyst1_{s,PCH}$ to calculate $R_s$, if provided in SIB4 [see 8]. For UE in RRC connected mode state CELL_FACH the hysteresis $Qhyst_s$ takes the value $Qhyst1_{s,FACH}$ to calculate $R_s$, if provided in SIB4 [see 8].

…

If an FDD cell is ranked as the best cell and the quality measure for cell selection and re-selection is set to CPICH RSCP, the UE shall perform cell re-selection to that FDD cell. If this cell is found to be not suitable, the UE shall behave according to subclause 5.2.6.1.3 of TS 25.304.

…

In all cases, the UE shall reselect the new cell, only if the following conditions are met:

- the new cell is better ranked than the serving cell during a time interval Treselection. For UE in RRC connected mode states CELL_PCH or URA_PCH the interval $Treselection_{s,PCH}$ applies, if provided in SIB4 [see 8], while for UE in RRC connected mode state CELL_FACH the interval $Treselection_{s,FACH}$ applies, if provided in SIB4 [see 8]. For hierarchical cell structures when high mobility state has not been detected, if according to the HCS rules the serving cell is not ranked then all the ranked cells are considered to be better ranked than the serving cell.

...

The UE shall perform the MBMS frequency layer selection procedure upon receiving the IE "MBMS Preferred frequency information", when specified explicitly e.g. as in subclause 8.6.9.2, or when the priority for an MBMS service as indicated by upper layers changes.

The UE shall:

1> if there exist two or more preferred frequencies for services included in variable MBMS_ACTIVATED_SERVICES:

2> request from upper layers the priorities of the different MBMS services included in variable MBMS_ACTIVATED_SERVICES for which a preferred frequency has been received.

1> if the UE is in idle mode:

2> if a preferred frequency layer applies for a service included in variable MBMS_ACTIVATED_SERVICES:

3> select the preferred frequency indicated for the MBMS service(s) prioritised most by upper layers for which a preferred frequency exists as the preferred frequency.

Reference

3GPP TS 25.304 clauses 5.2.5.1, 5.2.6.1.0, 5.2.6.1.2, 5.2.6.1.4.

3GPP TS 25.331 clause 8.5.27.

#### 8.5.6.4.3 Test purpose

1. To verify that a UE in idle mode ranks cells based on both HCS priority and R. Qhyst, Qoffset and PENALTY TIME are not applied so R equals CPICH_RSCP.
2. To verify that a UE in idle mode performs a Serving Cell Reselection to the Preferred Layer at Session Start.
3. To verify that a UE in idle mode performs an intra-frequency Cell Reselection on the Preferred Layer during an ongoing Session

#### 8.5.6.4.4 Method of test

##### Initial Condition

System Simulator: 3 MBMS cells (Cell 21, Cell 24, Cell 26) with the downlink transmission power shown in column marked "T0" in table 8.5.6.4-1.

SS shall indicate in System Information that HCS is in use. Qhcs = 0 so all cells fulfil the criterion H >=0.

Each cell shall include the other cells as neighbouring cells in System Information Block Type 11.

UE:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Specific message contents for System information blocks 3 and 11 are used in Cell 21.

##### Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No

Test procedure

Table 8.5.6.4-1 illustrates the downlink power to be applied for the 3 cells at various time instants of the test execution. Columns marked "T0" denote the initial conditions, while columns marked "T1 are to be applied subsequently. The exact instants on which these values shall be applied are described in the texts in this clause.

**Table 8.5.6.4-1**

| Parameter | Unit | Cell 21 | | Cell 24 | | Cell 26 | |
|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T0 | T1 | T0 | T1 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | High Range Test Frequency | | High Range Test Frequency | |
| CPICH Ec (FDD) | dBm/3.84 MHz | -60 | -60 | -60 | -75 | -75 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -60 | -60 | -75 | -75 | -60 |
| HCS_PRIO | | 5 | | 3 | | 3 | |

Method C is applied (as described and used in clause 6 of TS 34.123-1).

The SS activates Cell 21, Cell 24 and Cell 26 and monitors them for access request from the UE. The UE is in idle mode state on Cell 21.The UE receives at notification via MCCH, an MBMS MODIFIED SERVICES INFORMATION message including a preferred frequency in the IE “MBMS preferred frequency”. The HCS_OFFmbms is added to the normal HCS priority level of cells on this MBMS preferred frequency. Cell 24 and Cell 26 have the highest priority.

The UE shall consider this frequency as the preferred frequency layer for cell re-selection. The SS waits for random access requests from the UE. The UE moves to Cell 24 at session start for the concerned MBMS service. The UE shall store the frequency information of the frequency on which the UE was operating prior to cell-reselection to the preferred frequency in the variable MBMS_PREV_FREQUENCY_INFORMATION.

The HCS_OFFmbms is added to the normal HCS priority level of cells on this MBMS preferred frequency. Cell 24 and Cell 26 have the highest priority.

The SS transmits an MBMS MODIFIED SERVICE INFORMATION message which includes in the “Modified service list” for the MBMS activated service “MBMS required UE action” set to “Acquire counting info” and MBMS ACCESS INFORMATION message, which includes the MBMS Short Transmission ID associated to the MBMS activated service and “Access probability factor – Idle” set to 0 (corresponds to an actual Probability Factor = 1).

The UE shall transmit an RRC CONNECTION REQUEST message, with “Establishment cause” set to “MBMS reception”. The SS transmits a RRC CONNECTION SETUP. The UE establishes an RRC connection and transmits an RRC CONNECTION SETUP COMPLETE message.

The UE receives an MBMS MODIFIED SERVICES INFORMATION message “MBMS required UE action” IE set to “Acquire PTM RB info”. The UE receives an MBMS NEIGHBOURING CELL P-T-M RB INFORMATION including MBMS neighbouring cell information for Cell 26. The UE shall apply the MBMS p-t-m radio bearer configuration procedure to acquire the radio bearer configuration for the MBMS service provided by the SS.

The UE starts receiving the indicated p-t-m radio bearer.

The SS applies the power settings of “T1” in table 8.5.6.4-1. The SS waits for random access requests from the UE. The UE shall reselect to Cell 26.

The UE receives an MBMS UNMODIFIED SERVICES INFORMATION message “MBMS required UE action” IE set to “Acquire PTM RB info”. The UE receives an MBMS NEIGHBOURING CELL P-T-M RB INFORMATION including MBMS neighbouring cell information for Cell 24. The UE shall apply the MBMS p-t-m radio bearer configuration and continues receiving the indicated p-t-m radio bearer.

SS calls for generic procedure C.1 to check that UE is in idle mode.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is in idle mode on Cell 21. |
| 2 | ← | | SYSTEM INFORMATION | SS indicates that HCS is used. |
| 3 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "none" and the "MBMS preferred frequency" IE indicates the reference to Ch. 2. |
| 4 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information is set to Ch. 2. |
| 5 | | | | The SS waits for random access requests from the UE. The UE shall responds on Cell 24. |
| 6 | ← | | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" IE is set to "Acquire counting info" |
| 7 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 8 | ← | | MBMS ACCESS INFORMATION | "MBMS short transmission ID" IE set to 1, "Access probability factor – Idle" set to 0 (corresponding to the actual probability factor value 1). |
| 9 | → | | RRC CONNECTION REQUEST | Establishment cause set to MBMS reception. |
| 10 | ← | | RRC CONNECTION SETUP | |
| 11 | → | | RRC CONNECTION SETUP COMPLETE | |
| 11a | → | | MBMS MODIFICATION REQUEST | The UE completing the RRC connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure in case of MBMS selected Service. This message may be received at any point after step 11 and before step 13. |
| 12 | UE | | | UE transmits SERVICE REQUEST, with IE "Service type" set to "MBMS Broadcast service Reception". |
| 13 | ← | | RRC CONNECTION RELEASE | |
| 14 | → | | RRC CONNECTION RELEASE COMPLETE | The UE shall enter idle state. |
| 15 | ← | | MBMS MODIFIED SERVICES INFORMATION | MBMS session start. The SS also sets the Notification Indicator on MICH. The SS waits for the UE to establish the MTCH. |
| 16 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |
| 17 | ← | | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | This message has info for neighbouring cell 26 |
| 18 | SS | | | The SS applies the power settings of "T1" in Table 8.5.6.4-1 |
| 19 | UE | | | The SS waits for random access requests from the UE. The UE shall responds on Cell 26. |
| 20 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | There is no change in MBMS services already ongoing in previous cell |
| 21 | ← | | MBMS GENERAL INFORMATION | MBMS preferred frequency information set without index into SIB11 neighbour list. |

| | | | |
|---|---|---|---|
| 22 | ← | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | This message has info for neighbouring cell 24 |
| 23 | ←→ | CALL C.1 | If the test result of C.1 indicates that UE is in idle mode, the test passes, otherwise it fails. |

Specific Message Contents

SYSTEM INFORMATION BLOCK TYPE 3 (Step 2)

| Information Element | Value/remark |
|---|---|
| Sintersearch | Not Present |

MBMS MODIFIED SERVICES INFORMATION (Step 3)

| Information Element | Value/remark |
|---|---|
| Modified service list | Only 1 Entry |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | None |
| - MBMS preferred frequency | |
| - PFL index | Index for Ch 2 (the frequency that UEs shall consider as the preferred frequency layer for cell re-selection during a session for an MBMS service the UE has activated) |
| - Continue MCCH reading | FALSE |

MBMS GENERAL INFORMATION (Step 4)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency information | |
| - MBMS preferred frequency list | Only 1 Entry |
| - MBMS preferred frequency | Ch 2 (the frequency that UEs shall consider as the preferred frequency layer for cell re-selection during a session for an MBMS service the UE has activated) |
| - CHOICE Layer convergence information | |
| - HCS | |
| - HCS_OFFmbms | 4 (Offset added to the normal HCS priority level of cells on this MBMS preferred frequency) |
| - MBMS PL Service Restriction Information | TRUE |

MBMS MODIFIED SERVICES INFORMATION (Step 6)

| Information Element | Value/remark |
|---|---|
| Modified service list | Only 1 entry |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire counting info |
| - Continue MCCH reading | FALSE |

MBMS MODIFIED SERVICES INFORMATION (Step 15)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Modified service list | |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |
| MBMS p-t-m activation time | Set to the first TTI of the next modification period |

MBMS UNMODIFIED SERVICES INFORMATION (Step 20)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Unmodified service list | |
| - MBMS Transmission identity | MBMS Transmission identity indicating MBMS activated service |
| - MBMS required UE action | Acquire PTM RB info |

#### 8.5.6.4.5 Test requirement

At step 5, the UE shall respond on Cell 24.

At step 15, the UE shall respond on Cell 26.

### 8.5.6.4m MBMS Controlling Cell Change - Idle mode - Frequency Layer Convergence – With HCS / MBMS Multicast Service

#### 8.5.6.4m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

#### 8.5.6.4m.2 Conformance requirement

Same conformance requirement as in clause 8.5.6.4.2

#### 8.5.6.4m.3 Test purpose

Same test purpose as in clause 8.5.6.4.3.

#### 8.5.6.4m.4 Method of test

##### Initial condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24, Cell 26.

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

##### Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.

##### Test procedure

Same test procedure as in clause 8.5.6.4.4, except that at step 12 UE transmits Service Request, with IE "Service type" set to "MBMS Multicast service Reception".

##### Specific message contents

Same specific messages contents as in clause 8.5.6.4.4

#### 8.5.6.4m.5 Test requirements

Same test requirement as in clause 8.5.6.4.5.

## 8.5.6.5 MBMS Controlling Cell Change in CELL_DCH during ongoing session / MBMS Broadcast Service

### 8.5.6.5.1 Definition and applicability

This test case is applicable for all UEs that support MBMS broadcast services and support MBMS p-t-m reception in CELL_DCH state.

### 8.5.6.5.2 Conformance requirement

The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages without delaying reading of MCCH until the next modification period and without stopping at the end of the modification period, in accordance with subclause 8.7.1.3 of TS 25.331.

The UE shall immediately acquire the MBMS ACCESS INFORMATION and the MBMS GENERAL INFORMATION messages ie. it shall not delay reception of these messages until it has completed the acquisition of the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION messages. Likewise, the UE should immediately acquire the MBMS CURRENT CELL P-T-M RB INFORMATION and MBMS NEIGHBOURING CELL P-T-M RB INFORMATION messages.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information eg. both the MBMS MODIFIED SERVICES INFORMATION and the MBMS UNMODIFIED SERVICES INFORMATION message should be acquired in the same modification period.

#### Reference

3GPP TS 25.331 clause 8.7.2.3.

### 8.5.6.5.3 Test purpose

1. To verify that a UE in CELL_DCH state performs an inter-frequency MBMS Controlling Cell Change during an ongoing Session.
2. To verify that a UE in CELL_DCH state performs an intra-frequency MBMS Controlling Cell Change during an ongoing Session.
3. To verify that a UE in CELL_DCH is able to apply MBMS NEIGHBOURING CELLS P-T-M RB INFORMATION and receive data on this p-t-m radio bearer.

### 8.5.6.5.4 Method of test

#### Initial Condition

System Simulator:

3 MBMS cells, Cell 21, Cell 24 and Cell 26.

User Equipment:

The UE is in CELL_DCH state as specified in clause 7.6 of TS 34.108.

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

#### Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No
- UE supports MBMS p-t-m reception in CELL_DCH state Yes/No

#### Test Procedure

Table 8.5.6.5-1 illustrates the downlink power to be applied for the 3 cells in this test case. Initially, the SS applies the power settings of column “T0”.

**Table 8.5.6.5-1**

| Parameter | Unit | Cell 21 | | | Cell 24 | | | Cell 26 | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | T0 | T1 | T2 | T0 | T1 | T2 | T0 | T1 | T2 |
| UTRA RF Channel Number | | Mid Range Test Frequency | | | High Range Test Frequency | | | High Range Test Frequency | | |
| CPICH Ec ( FDD ) | dBm/3.84 MHz | -60 | -80 | -80 | -70 | -60 | -70 | -70 | -70 | -60 |
| P-CCPCH RSCP (TDD) | dBm | -60 | -80 | -80 | -70 | -60 | -70 | -70 | -70 | -60 |

The UE is in the CELL_DCH state in Cell 21. The SS notifies on MICH and MCCH about the start of an MBMS session and waits for the UE to activate MTCH reception. The MBMS radio bearer on MTCH is put into loopback mode 3.

The SS sends 10 RLC SDUs of MBMS data on MTCH in Cell 21 on the concerned MBMS radio bearer. The retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the UE has received at least one RLC SDU.

The SS applies the power settings of “T1” in table 8.5.6.5-1 and orders an inter-frequency hard handover to Cell 24 by transmitting a PHYSICAL CHANNEL RECONFIGURATION message. The UE establishes the dedicated physical channel in Cell 24 and replies with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message, and waits for the UE to activate MTCH reception.

The SS provides information about the ongoing MBMS services in cell 24 by sending MBMS UNMODIFIED SERVICES INFORMATION. The SS informs the UE about Cell 26 as neighbouring cell by sending MBMS NEIGHBOURING CELL P-T-M RB INFORMATION in Cell 24.

The SS sends 10 RLC SDUs of MBMS data in cell 24. The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the reported number is greater than zero.

The SS then sends 10 RLC SDUs of MBMS data in neighbouring cell 26 and SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. UE should be able to receive the MBMS data from neighbouring Cell 26 when camped in Cell 24. The SS checks that the reported number is greater than the number reported by the UE at step 16 of expected sequence.The SS applies the power settings of “T2” in table 8.5.6.5-1 and then orders handover to Cell 26 by transmitting a PHYSICAL CHANNEL RECONFIGURATION message. The UE establishes the dedicated physical channel in Cell 26 and replies with a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message.

The SS provides information about the ongoing MBMS service in cell 26 by sending MBMS UNMODIFIED SERVICES INFORMATION. The SS informs the UE about Cell 24 as neighbouring cell by sending MBMS NEIGHBOURING CELL P-T-M RB INFORMATION in Cell 24.

The SS sends 10 RLC SDUs of MBMS data in cell 26. The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the reported number is greater than the number reported by the UE at step 19.

The SS then sends 10 RLC SDUs of MBMS data in neighbouring cell 24 and SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the reported number is greater than the previous number reported by the UE at step 27.

The loopback mode 3 in the UE is deactivated.

SS calls for generic procedure C.3 to check that UE is in CELL_DCH state.

NOTE: If the UE fails the test because of selecting the wrong cell, the operator may re-run the test.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | MBMS MODIFIED SERVICES INFORMATION | MBMS session start. The SS also sets the Notification Indicator on MICH. The SS waits for the UE to establish the MTCH. |
| 4 | ← | | CLOSE UE TEST LOOP | |
| 5 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 6 | SS | | | The SS broadcasts 10 RLC SDUs of MBMS data in Cell 21. |
| 7 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 8 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data in Cell 21. The SS checks that the number of reported RLC PDUs is greater than zero and record the value. |
| 9 | SS | | | The SS applies the power settings of “T1” in table 8.5.6.5-1. |
| 10 | | | PHYSICAL CHANNEL RECONFIGURATION | Inter-frequency hard handover to Cell 24. |
| 11 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | The SS waits for the UE to establish the MTCH according to the messages in steps 12-13 |
| 12 | ← | | MBMS UNMODIFIED SERVICES INFORMATION | There is no change in MBMS services already ongoing in previous cell |
| 13 | ← | | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | This message has info for neighbouring cell 26 |
| 13a | ← | | CLOSE UE TEST LOOP | |
| 13b | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 14 | SS | | | The SS transmits 10 RLC SDUs of MBMS data in Cell 24. |
| 15 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 16 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data also in Cell 24. The SS checks that the number of reported RLC PDUs is greater than 0. |
| 17 | SS | | | SS transmits 10 RLC SDUs of MBMS data in Cell 26. |
| 18 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 19 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data sent in neighbouring cell 26. The SS checks that the number of reported RLC PDUs is greater than the value at step 16. |
| 20 | SS | | | The SS applies the power settings of “T2” in table 8.5.6.5-1 |
| 21 | | | PHYSICAL CHANNEL RECONFIGURATION | UE moves to Cell 26. |
| 22 | → | | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |

| | | | |
|---|---|---|---|
| 23 | ← | MBMS UNMODIFIED SERVICES INFORMATION | There is no change in MBMS services already ongoing in previous cell |
| 24 | ← | MBMS NEIGHBOURING CELL P-T-M RB INFORMATION | This message has info for neighbouring cell 24 |
| 25 | SS | | SS transmits 10 RLC SDUs of MBMS data in Cell 26. |
| 26 | ← | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 27 | → | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data also in Cell 26. The SS checks that the number of reported RLC PDUs is greater than the value at step 19. |
| 28 | SS | | SS transmits 10 RLC SDUs of MBMS data in Cell 24. |
| 29 | ← | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 30 | → | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the UE has received MBMS data sent in neighbouring cell 24. The SS checks that the number of reported RLC PDUs is greater than the value at step 27. |
| 31 | ← | OPEN UE TEST LOOP | |
| 32 | → | OPEN UE TEST LOOP COMPLETE | |
| 33 | ←→ | CALL C.3 | If the test result of C.3 indicates that UE is in CELL_DCH state, the test passes, otherwise it fails. |

Specific Message Contents

PHYSICAL CHANNEL RECONFIGURATION (Step 10) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for Cell 24 |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the scrambling code for Cell 24 |

PHYSICAL CHANNEL RECONFIGURATION (Step 10) (1.28Mcps and 7.68Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN (Nt) | Same UARFCN as used for cell 24 |
| CHOICE channel requirement | Not present |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | 0 |
| - Downlink DPCH power control information | Not Present |
| - MAC-d HFN initial value | Not Present |
| - CHOICE mode | TDD |
| - CHOICE mode | TDD |
| - CHOICE TDD option | 1.28 Mcps TDD |
| - TSTD indicator | FALSE |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - CHOICE mode | TDD |
| - Default DPCH Offset Value | 0 Integer(0..7) |
| - MAC-hs reset indicator | FALSE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Set to the Cell parameters ID for cell 4 |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | TDD |
| - TFCS ID | Reference to TS34.108 clause 6.11 Parameter Set |
| - Time info | Reference to TS34.108 clause 6.11 Parameter Set |
| - Common timeslot info | Reference to TS34.108 clause 6.11 Parameter Set |
| - Downlink DPCH timeslots and codes | as used for cell 4 |

PHYSICAL CHANNEL RECONFIGURATION (Step 10) (3.84Mcps TDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN (Nt) | Same UARFCN as used for cell 4 |
| CHOICE channel requirement | Not present |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - CFN-targetSFN frame offset | 0 |
| - Downlink DPCH power control information | Not Present |
| - Downlink rate matching restriction information | Not Present |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set |
| - Fixed or flexible position | Reference to TS34.108 clause 6.10 Parameter Set |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set |
| - DPCH compressed mode info | Not present |
| - TX Diversity mode | Not Present |
| - SSDT information | Not Present |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| - MAC-hs reset indicator | FALSE |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | TDD |
| - Primary CCPCH info | Set to the Cell parameters ID for cell 4 |
| - Downlink DPCH info for each RL | |
| - CHOICE mode | TDD |
| - TFCS ID | Reference to TS34.108 clause 6.10 Parameter Set |
| - Time info | Reference to TS34.108 clause 6.10 Parameter Set |
| - Common timeslot info | Reference to TS34.108 clause 6.10 Parameter Set |
| - Downlink DPCH timeslots and codes | as used for cell 4 |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Step 8)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than zero |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Step 16,19,27,30 )

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than the value reported at the previous sub-test. |

PHYSICAL CHANNEL RECONFIGURATION (Step 21) (FDD)

Use the same message as specified for "Packet to CELL_DCH from CELL_DCH in PS" in 34.108 except for the following:

| Information Element | Value/remark |
|---|---|
| Frequency info | |
| - UARFCN uplink(Nu) | Not present<br>Absence of this IE is equivalent to applying the default duplex distance defined for the operating frequency according to 3GPP TS 25.101 [21] |
| - UARFCN downlink(Nd) | Same downlink UARFCN as used for Cell 26 |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indication | Initialise |
| - Default DPCH Offset Value | Arbitrary set to value 0..306688 by step of 512 |
| Downlink information per radio link list | 1 radio link |
| Downlink information for each radio link | |
| - CHOICE mode | FDD |
| - Primary CPICH info | |
| - Primary scrambling code | Set to the scrambling code for Cell 26 |

#### 8.5.6.5.5 Test requirement

After step 7, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero.

After step 10, the UE shall transmit a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message in Cell 24.

After step 15, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than zero

After step 18, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than the number reported in step 16.

After step 26, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than the number reported in step 19.

After step 29, the UE shall transmit a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message with the number of reported RLC SDUs shall be greater than the number reported in step 27.

### 8.5.6.5m MBMS Controlling Cell Change in CELL_DCH during ongoing session / MBMS Multicast Service

#### 8.5.6.5m.1 Definition

This test is applicable for all UEs that support MBMS multicast services and support MBMS p-t-m reception in CELL_DCH state.

#### 8.5.6.5m.2 Conformance requirement

Same conformance requirement as in clause 8.5.6.5.2

#### 8.5.6.5m.3 Test purpose

Same test purpose as in clause 8.5.6.5.3.

#### 8.5.6.5m.4 Method of test

Initial condition

System Simulator:

2 MBMS cells, Cell 21 and Cell 24.

User Equipment:

The UE is in Idle Mode as specified in clause 7.6 of TS 34.108.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

- MBMS Multicast service application available on UE Yes/No.
- UE supports MBMS p-t-m reception in CELL_DCH state Yes/No

Test procedure

Same test procedure as in clause 8.5.6.5.4.

Specific message contents

Same specific messages contents as in clause 8.5.6.5.4

#### 8.5.6.5m.5 Test requirements

Same test requirement as in clause 8.5.6.5.5.

## 8.5.7 MBSFN Specific Procedures (3.84/7.68 Mcps TDD)

### 8.5.7.1 Cell Update: cell reselection in CELL_PCH (unicast carrier) during ongoing MBMS session in MBSFN mode

#### 8.5.7.1.1 Definition

This test is applicable for UEs that support MBMS broadcast services in MBSFN mode and which support either both TDD transmit and receive functions or TDD MBSFN receive only function.

#### 8.5.7.1.2 Conformance requirement

The UE reception of MBMS services provided in MBSFN mode shall not affect the UE behaviour on the unicast carrier. Especially the UE mobility on the unicast carrier is not affected by the reception of MBMS services provided on a cell operating in MBSFN mode and can imply that the reception of the MBMS service on the cell operating in MBSFN mode is impossible due to the limited support of combination of frequency bands for MBMS SFN reception and unicast reception.

…

A UE that is capable of receiving MBMS services on cells operating in MBSFN mode as specified in subclause 8.1.1.6.3 is operating in idle mode and acts on RRC messages and system information received from this cell operating in MBSFN mode independently from messages received from cells not operating in MBSFN mode. This implies that procedures executed based on messages and system information received from a cell operating in MBSFN mode shall not interact with messages and system information received from a cell not operating in MBSFN mode unless explicitely specified otherwise.

NOTE 1: This implies that the UE is operating an independent stack for the reception of MBMS services on cells operating in MBSFN mode as specified in subclause 8.1.1.6.3.

…

A cell provides MBMS service in MBSFN mode if it is indicated so in system information, see subclause 8.1.1.6.3. A UE that supports MBSFN operation may receive MBMS services via a cell operating in MBSFN mode. For FDD and 3.84/7.68 Mcps TDD in order to receive an MBMS service via a MBSFN cluster the UE shall select the MBSFN cluster as specified in [4] in addition to selecting a cell for normal camping as specified in [4].

…

Reference

3GPP TS 25.346 clauses 7.1A.

3GPP TS 25.331 clauses 7.2.1, 8.5.43.

### 8.5.7.1.3 Test purpose

To verify that the UE will perform a Cell Update on the unicast carrier while receiving an ongoing MBMS service via a p-t-m radio bearer on the MBSFN cluster.

### 8.5.7.1.4 Method of test

Initial condition

System Simulator:

- MBSFN carrier: 1 cell, Cell 31 (PLMN1). In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.

- Unicast carrier : 2 cells, Cell 1 and Cell 2 with default parameters.

User Equipment:

- On the unicast carrier the UE is in CELL_PCH (state 6-12) in Cell 1 as specified in clause 7.4 of TS 34.108.

- The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected (i.e. it is included in MBMS_ACTIVATED_SERVICES variable) a national service for which a session will start on MBSFN Cell 31 (see TS 34.108 clause 11.2.4) during the test.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode application available on UE Yes/No.

- Support of TDD transmit and receive functions available on UE Yes/No.

- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

The SS shall apply the downlink power settings as shown below:

Step 1-13:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 31 |
|---|---|---|---|---|
| UTRA RF Channel Number | | Ch. 1 | Ch. 1 | Ch. 2 |
| P-CCPCH RSCP | dBm | -60 | -69 | -60 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | -69 | - |

Step 14-25:

| Parameter | Unit | Cell 1 | Cell 2 | Cell 31 |
|---|---|---|---|---|
| UTRA RF Channel Number | | Ch. 1 | Ch. 1 | Ch. 2 |
| P-CCPCH RSCP | dBm | -69 | -60 | -60 |
| CPICH Ec (FDD) | dBm/3.84MHz | -69 | -60 | - |

a) The UE is camping on Cell 1 and Cell 31. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 (no session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

c) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on Cell 31 MTCH (Transmission identity indicating the MBMS activated service).

d) The SS notifies on MCCH about the start of an MBMS session for one modification period. MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C4 (one PTM session starting) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

e) MCCH messages are then transmitted by the SS on Cell 31 using MBMS configuration C2 (one PTM session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

f) The UE establishes the p-t-m radio bearer for the activated service according to the specified service activation time (i.e. the first SFN of the modification period following the notification (step d). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

g) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for the activated service. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

h) The SS shall then send UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST. The UE shall respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0. The SS shall store the counter value.

i) The SS adjusts the power settings for Cell 1 and Cell 2. When the UE detects the presence of cell 2, it moves to CELL_FACH state and transmits a CELL UPDATE message on the uplink CCCH. The value "cell reselection" shall be set in IE "Cell update cause" in CELL UPDATE message.

j) Upon reception of the CELL_UPDATE message, the SS replies with a CELL UPDATE CONFIRM message with the IE "RRC State Indicator" set to "CELL_PCH". After receiving this message, the UE returns to CELL_PCH state without transmitting any uplink message.

k) The SS calls for generic procedure C.4 to check that the UE is in CELL_PCH state.

l) The SS broadcasts 10 RLC SDUs on the MTCH configured on the MBSFN MBMS p-t-m radio bearer for the activated service.

m) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE corresponds to > 0 received RLC SDUs.

NOTE: If the UE fails the test because of a failure to reselect to the right unicarrier cell (Cell 2), then the operator may re-run the test.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated on Cell 31 for the selected local service on MTCH. |
| 4 | ← | | M | MBMS MCCH Message Configuration C4 | Includes the national service activated at UE in the modified services list for one modification period. |
| 5 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. 124 kbps PS RAB |
| 6 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 7 | SS | | M | | After delaying for a period equal to the MCCH modification period, the SS transmits 10 RLC SDUs on the MTCH. |
| 8 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 9 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. SS stores value. |
| 10 | | | U | | The SS transmits 10 RLC SDUs on the MTCH starting at the indicated activation time. |
| 11 | → | | U | CELL UPDATE | The UE moves to CELL_FACH state and transmits this message with the IE "Cell update cause" set to "cell reselection" |
| 12 | ← | | U | CELL UPDATE CONFIRM | IE "RRC State Indicator" is set to "CELL_PCH". |
| 13 | UE | | U | | The UE is in CELL_PCH state. |
| 14 | ← → | | U | CALL C.4 | If the test result of C.4 indicates that UE is in CELL_PCH state, the test passes, otherwise it fails. |
| 15 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH. |
| 16 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 17 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 18 | ← | | U | OPEN UE TEST LOOP | |
| 19 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 20 | ← | | U | DEACTIVATE RB TEST MODE | |
| 21 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

CELL UPDATE (Step 11)

| Information Element | Value/remark |
|---|---|
| U-RNTI | |
| - SRNC Identity | Check to see if set to '0000 0000 0001' |
| - S-RNTI | Check to see if set to '0000 0000 0000 0000 0001' |
| Cell Update Cause | Check to see if set to 'Cell Re-selection' |

CELL UPDATE CONFIRM (Step 162)

| Information Element | Value/remark |
|---|---|
| RRC State Indicator | CELL_PCH |
| UTRAN DRX cycle length coefficient | 3 |

#### 8.5.7.1.5 Test requirements

1) After step 9, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0 for Cell 31 MTCH.

3) After step 11, the UE shall reselect to Cell 2 and transmit a CELL UPDATE message, containing the IE "Cell update cause" set to "cell reselection".

4) After step 13, the UE shall enter CELL_PCH state.

5) After step 17, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a number > 0 for Cell 31 MTCH.

### 8.5.7.2 Re-acquire MCCH - modified MBSFN inter frequency neighbour list / All MBSFN services notified

#### 8.5.7.2.1 Definition

This test is applicable for UEs that support MBMS broadcast services in MBSFN mode and which support either both TDD transmit and receive functions or TDD MBSFN receive only function.

#### 8.5.7.2.2 Conformance requirement

Upon receiving the MBMS GENERAL INFORMATION message, the UE should store all relevant IEs included in this message. The UE shall also:

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following.

…

For FDD and 3.84/7.68 Mcps TDD if the IE "MBSFN inter frequency neighbour list" is included and the UE does not receive a service from this MBSFN cluster, the UE shall:

1> consider that MBMS services transmitted in MBSFN mode are available on these frequencies;

…

1> if at least one frequency is listed for which "MBSFN services not notified" is indicated in the IE "MBSFN inter frequency neighbour list":

2> if the IE "All MBSFN services notified" is included for one frequency as defined in [21] for FDD and [22] for TDD on which the UE supports reception in MBSFN mode:

3> attempt to receive notifications on one of the frequencies for which the IE "All MBSFN services notified" is included according to subclause 8.7.3.

…

Upon receiving the MBMS MODIFIED SERVICES INFORMATION message, the UE shall act as follows for each of the services included in this messages provided that the service is included in variable MBMS_ACTIVATED_SERVICES and upper layers indicate that the session has not yet been received correctly (referred to as 'applicable services'):

…

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following

…

If the UE receives the IE " MBMS re- acquire MCCH", the UE shall:

1> perform the MCCH acquisition procedure as specified in subclause 8.7.2.

Reference

3GPP TS 25.331 clauses 8.7.2.5, 8.6.9.9ad, 8.7.3.4, 8.6.9.6a.

### 8.5.7.2.3 Test purpose

1. To verify that the UE correctly re-acquires the MCCH information when the UE receives the IE MBMS re-acquire MCCH in a received MBMS MODIFIED SERVICES INFORMATION message.
2. To verify that the UE acts upon the modified IE MBSFN inter frequency neighbour list received in the re-acquired MBMS GENERAL INFORMATION message when a service not received on the current MBSFN cluster is present in the variable MBMS_ACTIVATED_SERVICES.
3. To verify that the UE attempts to receive notifications, for the service not received on the current MBSFN cluster, on one of the frequencies for which the IE "All MBSFN services notified" is included.

### 8.5.7.2.4 Method of test

Initial condition

System Simulator:

- MBSFN carrier: 3 cells, Cell 31, Cell 36 and Cell 38 (all PLMN1). Cell 36 and Cell 38 are powered off. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.

  Unicast carrier: 1 cell, Cell 1 (PLMN1) default configuration.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.
- The UE is in MBSFN Idle mode with no activated service as specified in clause 7.6.3 of TS 34.108.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode application available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

The SS shall apply the downlink power settings as shown below:

Step 1-7:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 33 | Cell 36 |
|---|---|---|---|---|---|
| UTRA RF Channel Number | | Ch. 1 | Ch. 2 | Ch. 3 | Ch. 4 |
| P-CCPCH RSCP | dBm | -60 | -60 | OFF | OFF |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

Step 8-33:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 33 | Cell 36 |
|---|---|---|---|---|---|
| UTRA RF Channel Number | | Ch. 1 | Ch. 2 | Ch. 3 | Ch. 4 |
| P-CCPCH RSCP | dBm | -60 | -60 | -60 | -70 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

a) The UE is camping on Cell 1 and Cell 31. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 (no session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. Note: The IE "MBSFN inter frequency neighbour list" is not present in MBMS GENERAL INFORMATION.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

c) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on MTCH. The Short Transmission identity is set to value "0" corresponding to National Service 5 (see TS 34.108 clause 11.2.4) on either Cell 33 or Cell 36.

d) For Cell 31 in the IE "MBSFN inter frequency neighbour list" of the MBMS GENERAL INFORMATION message the SS adds (i) the frequency for Cell 36 with the IE "MBSFN services notification" set to "MBSFN services not notified" and with the option "All MBSFN services notified" included, and (ii) the frequency for Cell 33 with the IE "MBSFN services notification" set to "MBSFN services not notified" without the option "All MBSFN services notified". The SS sends MBMS MODIFIED SERVICES INFORMATION with IE "MBMS re- acquire MCCH" set to "True".

e) The UE shall re-perform the MCCH acquisition procedure on Cell 31.

f) The SS powers on Cell 33 and Cell 36. MCCH messages are transmitted by the SS on Cell 36 using MBMS configuration C2 (one PTM session ongoing - National Service 5) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. MCCH messages are transmitted by the SS on Cell 33 using MBMS configuration C2 (one PTM session ongoing - National Service 5) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

g) National Service 5 is activated at the UE.

h) The UE shall retune to the frequency for Cell 36, perform MBSFN cluster reselection and shall perform the MCCH acquisition procedure on Cell 36.

i) The UE immediately establishes the p-t-m radio bearer for National Service 5. The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

j) On Cell 33 the SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for National Service 5. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

k) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is = 0.

l) On Cell 36 the SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for National Service 5. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

m) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter

returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | M | MBMS MCCH Message Configuration C1 | No sessions ongoing. IE "MBSFN inter frequency neighbour list" not present in MBMS GENERAL INFORMATION |
| 2 | ← | | U | ACTIVATE RB TEST MODE | |
| 3 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 4 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated with Short Transmission Identity = "0". |
| 5 | ← | | M | MBMS MCCH Message Configuration C1 | Cell 31: IE "MBMS re-acquire MCCH" set to "True" in MBMS MODIFIED SERVICES INFO. Frequencies for Cell 33 and Cell 36 have been added to IE "MBSFN inter frequency neighbour list". |
| 6 | UE | | M | | UE re-acquires MCCH on Cell 31. |
| 7 | SS | | | | The SS powers on Cell 33 and Cell 36. |
| 8 | ← | | M | MBMS MCCH Message Configuration C2 | Cell 33: One PTM session ongoing (National Service 5). 124 kbps PS RAB. |
| 9 | ← | | M | MBMS MCCH Message Configuration C2 | Cell 36: One PTM session ongoing (National Service 5). 124 kbps PS RAB. |
| 10 | UE | | M | | National Service 5 is activated at the UE. |
| 11 | UE | | M | | UE retunes to frequency for Cell 36 and acquires the MCCH. |
| 12 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer for National Service 5 and close the test loop. |
| 13 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH for Cell 33. |
| 14 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 15 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is equal to zero. |
| 16 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH for Cell 36. |
| 17 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 18 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 19 | ← | | U | OPEN UE TEST LOOP | |
| 20 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 21 | ← | | U | DEACTIVATE RB TEST MODE | |
| 22 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

MBMS MODIFIED SERVICES INFORMATION (Step 1, Step 8, and Step 9)

| Information Element | Value/remark | Version |
|---|---|---|
| Modified service list | Not Present | Rel-6 |
| MBMS re- acquire MCCH | Not Present | Rel-6 |
| MBMS dynamic persistence level | Not Present | Rel-6 |
| End of modified MCCH information | Not Present | Rel-6 |
| MBMS number of neighbour cells | 0 | Rel-6 |
| MBMS all unmodified p-t-m services | Not Present | Rel-6 |
| MBMS p-t-m activation time | Not Present | Rel-6 |
| MIB Value tag | Not Present | Rel-7 |

MBMS UNMODIFIED SERVICES INFORMATION (Dedicated National carrier) (Step 1 and Step 5)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| Unmodified service list | Not Present | Rel-6 |

MBMS GENERAL INFORMATION (Step 1)

| Information Element | Value/remark | Version |
|---|---|---|
| … | | |
| MBSFN inter frequency neighbour list | Not Present | Rel-7 |

MBMS MODIFIED SERVICES INFORMATION (Step 5)

| Information Element | Value/remark | Version |
|---|---|---|
| Modified service list | Not Present | Rel-6 |
| MBMS re- acquire MCCH | True | Rel-6 |
| MBMS dynamic persistence level | Not Present | Rel-6 |
| End of modified MCCH information | Not Present | Rel-6 |
| MBMS number of neighbour cells | 0 | Rel-6 |
| MBMS all unmodified p-t-m services | Not Present | Rel-6 |
| MBMS p-t-m activation time | Not Present | Rel-6 |
| MIB Value tag | Not Present | Rel-7 |

MBMS GENERAL INFORMATION (Step 5)

| Information Element | Value/remark | Version |
|---|---|---|
| … | | |
| MBSFN inter frequency neighbour list | | Rel-7 |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f2" | |
| - CHOICE *MBSFN services notification* | MBSFN services not notified | |
| - no data | | |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f3" | |
| - CHOICE *MBSFN services notification* | MBSFN services not notified | |
| - All MBSFN services notified | TRUE | |

MBMS UNMODIFIED SERVICES INFORMATION (Step 8)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| Unmodified service list | 4 services | Rel-6 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 5) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 6) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (Local Service 1) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (Local Service 2) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |

MBMS GENERAL INFORMATION (Step 8)

| Information Element | Value/remark | Version |
|---|---|---|
| … | | |
| MBSFN inter frequency neighbour list | | Rel-7 |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f1" | |
| - CHOICE *MBSFN services notification* | MBSFN services not notified | |
| - no data | | |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f3" | |
| - CHOICE *MBSFN services notification* | MBSFN services not notified | |
| - no data | | |

MBMS UNMODIFIED SERVICES INFORMATION (Step 9)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| Unmodified service list | 8 services | Rel-6 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 1) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | 1 | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 2) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | 1 | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 3) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | 1 | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 4) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | 1 | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 5) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | 2 | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 6) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | 2 | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (Local Service 1) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |

| Information Element | Value/remark | Version |
|---|---|---|
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | 2 | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (Local Service 2) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | 2 | Rel-7 |

MBMS GENERAL INFORMATION (Step 9)

| Information Element | Value/remark | Version |
|---|---|---|
| … | | |
| MBSFN inter frequency neighbour list | | Rel-7 |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f1" | |
| - CHOICE *MBSFN services notification* | MBSFN services notified | |
| - no data | | |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f2" | |
| - CHOICE *MBSFN services notification* | MBSFN services notified | |
| - no data | | |

#### 8.5.7.2.5 Test requirements

1) After step 15, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report that zero RLC SDUs have been received.

2) After step 18, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report that > 0 RLC SDUs have been received.

### 8.5.7.3 Re-acquire MCCH - modified MBSFN inter frequency neighbour list / MBSFN services not notified

#### 8.5.7.3.1 Definition

This test is applicable for UEs that support MBMS broadcast services in MBSFN mode and which support either both TDD transmit and receive functions or TDD MBSFN receive only function.

#### 8.5.7.3.2 Conformance requirement

Upon receiving the MBMS GENERAL INFORMATION message, the UE should store all relevant IEs included in this message. The UE shall also:

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following.

…

For FDD and 3.84/7.68 Mcps TDD if the IE "MBSFN inter frequency neighbour list" is included and the UE does not receive a service from this MBSFN cluster, the UE shall:

1> consider that MBMS services transmitted in MBSFN mode are available on these frequencies;

…

1> if at least one frequency is listed for which "MBSFN services not notified" is indicated in the IE "MBSFN inter frequency neighbour list":

2> if the IE "All MBSFN services notified" is included for one frequency as defined in [21] for FDD and [22] for TDD on which the UE supports reception in MBSFN mode:

…

2> else:

3> attempt to receive notifications on all frequencies for which the IE “MBSFN services not notified” is indicated as specified in subclause 8.7.3 on that band.

…

Upon receiving the MBMS MODIFIED SERVICES INFORMATION message, the UE shall act as follows for each of the services included in this messages provided that the service is included in variable MBMS_ACTIVATED_SERVICES and upper layers indicate that the session has not yet been received correctly (referred to as 'applicable services'):

…

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following

…

If the UE receives the IE " MBMS re- acquire MCCH", the UE shall:

1> perform the MCCH acquisition procedure as specified in subclause 8.7.2.

Reference

3GPP TS 25.331 clauses 8.7.2.3, 8.7.2.5, 8.6.9.9ad, 8.7.3.4, 8.6.9.6a.

### 8.5.7.3.3 Test purpose

1. To verify that the UE correctly re-acquires the MCCH information when the UE receives the IE MBMS re-acquire MCCH in a received MBMS MODIFIED SERVICES INFORMATION message.
2. To verify that the UE acts upon the modified IE MBSFN inter frequency neighbour list received in the re-acquired MBMS GENERAL INFORMATION message when a service not received on the current MBSFN cluster is present in the variable MBMS_ACTIVATED_SERVICES.
3. To verify that in the absence of the IE "All MBSFN services notified" the UE attempts to receive notifications on all frequencies for which the IE “MBSFN services not notified” is indicated on that band.

### 8.5.7.3.4 Method of test

Initial condition

System Simulator:

- MBSFN carrier: 3 cells, Cell 31, Cell 36 and Cell 38 (all PLMN1). Cell 36 and Cell 38 are powered off. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing session) according to subclause 11.2 of TS 34.108.

  Unicast carrier: 1 cell, Cell 1 (PLMN1) default configuration.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.
- The UE is in MBSFN Idle mode with no activated service as specified in clause 7.6.3 of TS 34.108.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode application available on UE Yes/No.
- Support of TDD transmit and receive functions available on UE Yes/No.
- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

The test shall be performed as two independent sub-tests with the UE and SS being returned to Initial Conditions between the sub-tests. The test method shall be the same for the two sub-tests with the exception that:

- In sub-test 1, Local Service 1 in Service Area 1 (Cell 33) shall be activated in the UE;

- In sub-test 2, Local Service 1 in Service Area 4 (Cell 36) shall be activated in the UE.

The SS shall apply the downlink power settings as shown below:

Step 1-7:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 33 | Cell 36 |
|---|---|---|---|---|---|
| UTRA RF Channel Number | | Ch. 1 | Ch. 2 | Ch. 3 | Ch. 4 |
| P-CCPCH RSCP | dBm | -60 | -60 | OFF | OFF |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

Step 8-33:

| Parameter | Unit | Cell 1 | Cell 31 | Cell 33 | Cell 36 |
|---|---|---|---|---|---|
| UTRA RF Channel Number | | Ch. 1 | Ch. 2 | Ch. 3 | Ch. 4 |
| P-CCPCH RSCP | dBm | -60 | -60 | -60 | -60 |
| CPICH Ec (FDD) | dBm/3.84MHz | -60 | - | - | - |

a) The UE is camping on Cell 1 and Cell 31. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 (no session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. Note: The IE "MBSFN inter frequency neighbour list" is not present in MBMS GENERAL INFORMATION.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE.

c) The SS sends CLOSE UE TEST LOOP to activate RLC SDU counting on MTCH. The Short Transmission identity is set to value "2" corresponding to Local Service 1 (see TS 34.108 clause 11.2.4) on either Cell 33 or Cell 36.

d) For Cell 31 in the IE "MBSFN inter frequency neighbour list" of the MBMS GENERAL INFORMATION message the SS adds (i) the frequency for Cell 36 with the IE "MBSFN services notification" set to "MBSFN services not notified" and without the option "All MBSFN services notified", and (ii) the frequency for Cell 33 with the IE "MBSFN services notification" set to "MBSFN services not notified" without the option "All MBSFN services notified". The SS sends MBMS MODIFIED SERVICES INFORMATION with IE "MBMS re- acquire MCCH" set to "True".

e) The UE shall re-perform the MCCH acquisition procedure on Cell 31.

f) The SS powers on Cell 33 and Cell 36. MCCH messages are transmitted by the SS on Cell 36 using MBMS configuration C2 (one PTM session ongoing - Local Service 1) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. MCCH messages are transmitted by the SS on Cell 33 using MBMS configuration C2 (one PTM session ongoing - Local Service 1) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

g) Local Service 1 for the Service Area determined by the sub-test number (see above) is activated at the UE.

h) The UE shall re-tune to the frequency for Cell 33 or Cell 36, perform MBSFN cluster reselection and shall perform the MCCH acquisition procedure. If the UE determines that the selected MBMS service is available on

this cell then the UE proceeds to the next step. Otherwise, the UE re-tunes to the other frequency, performs MBSFN cluster reselection and again performs the MCCH acquisition procedure to find the selected MBMS service.

i) The UE immediately establishes the p-t-m radio bearer for Local Service 1. The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

j) On Cell 33 the SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for Local Service 1. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

k) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check the counter returned by the UE for the MTCH in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS stores the value.

l) On Cell 36 the SS broadcasts 10 RLC SDUs on the MTCH configured on the MBMS p-t-m radio bearer for Local Service 1. The service is carried on a 124 kbps RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD).

m) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check the counter returned by the UE for the MTCH in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE, using the stored intial count from step k).

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | M | MBMS MCCH Message Configuration C1 | No sessions ongoing. IE "MBSFN inter frequency neighbour list" not present in MBMS GENERAL INFORMATION |
| 2 | ← | | U | ACTIVATE RB TEST MODE | |
| 3 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 4 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated with Short Transmission Identity = "2". |
| 5 | ← | | M | MBMS MCCH Message Configuration C1 | Cell 31: IE "MBMS re-acquire MCCH" set to "True" in MBMS MODIFIED SERVICES INFO. Frequencies for Cell 33 and Cell 36 have been added to IE "MBSFN inter frequency neighbour list". |
| 6 | UE | | M | | UE re-acquires MCCH on Cell 31. |
| 7 | SS | | | | The SS powers on Cell 33 and Cell 36. |
| 8 | ← | | M | MBMS MCCH Message Configuration C2 | Cell 33: One PTM session ongoing (Local Service 1). 124 kbps PS RAB. |
| 9 | ← | | M | MBMS MCCH Message Configuration C2 | Cell 36: One PTM session ongoing (Local Service 1). 124 kbps PS RAB. |
| 10 | UE | | M | | Local Service 1 is activated at the UE, for the Service Area determined by the sub-test execution number (see above). |
| 11 | SS | | | | The SS shall set a timer value of 300 seconds to wait for CLOSE UE TEST LOOP COMPLETE from the UE. If a timeout occurs the test shall be deemed failed and execution continues from step 20. |
| 12 | UE | | M | | UE retunes to frequency for Cell 33 and/or Cell 36 and acquires the MCCH. |
| 13 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer for Local Service 1 and close the test loop. |
| 14 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH for Cell 33. |
| 15 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 16 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks the number of reported RLC SDUs received on the MTCH. SS stores the value. |
| 17 | SS | | M | | The SS transmits 10 RLC SDUs on the MTCH for Cell 36. |
| 18 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 19 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks the number of reported RLC SDUs received on the MTCH. |
| 20 | ← | | U | OPEN UE TEST LOOP | |
| 21 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 22 | ← | | U | DEACTIVATE RB TEST MODE | |
| 23 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

MBMS MODIFIED SERVICES INFORMATION (Step 1, Step 8, and Step 9)

| Information Element | Value/remark | Version |
|---|---|---|
| Modified service list | Not Present | Rel-6 |
| MBMS re- acquire MCCH | Not Present | Rel-6 |
| MBMS dynamic persistence level | Not Present | Rel-6 |
| End of modified MCCH information | Not Present | Rel-6 |
| MBMS number of neighbour cells | 0 | Rel-6 |
| MBMS all unmodified p-t-m services | Not Present | Rel-6 |
| MBMS p-t-m activation time | Not Present | Rel-6 |
| MIB Value tag | Not Present | Rel-7 |

MBMS UNMODIFIED SERVICES INFORMATION (Dedicated National carrier) (Step 1 and Step 5)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| Unmodified service list | Not Present | Rel-6 |

MBMS GENERAL INFORMATION (Step 1)

| Information Element | Value/remark | Version |
|---|---|---|
| … | | |
| MBSFN inter frequency neighbour list | Not Present | Rel-7 |

MBMS MODIFIED SERVICES INFORMATION (Step 5)

| Information Element | Value/remark | Version |
|---|---|---|
| Modified service list | Not Present | Rel-6 |
| MBMS re- acquire MCCH | True | Rel-6 |
| MBMS dynamic persistence level | Not Present | Rel-6 |
| End of modified MCCH information | Not Present | Rel-6 |
| MBMS number of neighbour cells | 0 | Rel-6 |
| MBMS all unmodified p-t-m services | Not Present | Rel-6 |
| MBMS p-t-m activation time | Not Present | Rel-6 |
| MIB Value tag | Not Present | Rel-7 |

MBMS GENERAL INFORMATION (Step 5)

| Information Element | Value/remark | Version |
|---|---|---|
| … | | |
| MBSFN inter frequency neighbour list | | Rel-7 |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f2" | |
| - CHOICE *MBSFN services notification* | MBSFN services not notified | |
| - no data | | |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f3" | |
| - CHOICE *MBSFN services notification* | MBSFN services not notified | |
| - no data | | |

MBMS UNMODIFIED SERVICES INFORMATION (Step 8)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| Unmodified service list | 4 services | Rel-6 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 5) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 6) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (Local Service 1) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (Local Service 2) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |

MBMS GENERAL INFORMATION (Step 8)

| Information Element | Value/remark | Version |
|---|---|---|
| … | | |
| MBSFN inter frequency neighbour list | | Rel-7 |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f1" | |
| - CHOICE *MBSFN services notification* | MBSFN services not notified | |
| - no data | | |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f3" | |
| - CHOICE *MBSFN services notification* | MBSFN services not notified | |
| - no data | | |

MBMS UNMODIFIED SERVICES INFORMATION (Step 9)

| Information Element | Value/remark | Version |
|---|---|---|
| Message type | | Rel-6 |
| Unmodified service list | 4 services | Rel-6 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 5) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (National Service 6) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (Local Service 1) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | '01' | |
| - MBMS required UE action | Acquire PTM RB info | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |
| - MBMS Transmission identity | | |
| - MBMS Service ID | (Local Service 2) | |
| - MBMS Service ID | Refer to clause 11.2.4 "MBSFN service availability" | |
| - CHOICE PLMN identity | SameAs-MIB | |
| - no data | | |
| - MBMS Session ID | Not Present | |
| - MBMS required UE action | None | |
| - MBMS preferred frequency | Not Present | |
| - MBSFN cluster frequency | Not Present (MD) | Rel-7 |

MBMS GENERAL INFORMATION (Step 9)

| Information Element | Value/remark | Version |
|---|---|---|
| … | | |
| MBSFN inter frequency neighbour list | | Rel-7 |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f1" | |
| - CHOICE *MBSFN services notification* | MBSFN services notified | |
| - no data | | |
| - MBSFN frequency | | |
| - CHOICE *mode* | TDD | |
| - UARFCN (Nt) | Refer to clause 5.1 "Test frequencies" for frequency "f2" | |
| - CHOICE *MBSFN services notification* | MBSFN services notified | |
| - no data | | |

#### 8.5.7.3.5 Test requirements

For sub-test 1:

1) After step 15, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a count > 0 for the number of RLC SDUs received.

2) After step 18, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a count corresponding to zero RLC SDUs.

For sub-test 2:

1) After step 15, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a count = 0 for the number of RLC SDUs received.

2) After step 18, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report a count > 0 for the number of RLC SDUs received.

### 8.5.7.4 MBSFN TDM Information / TDM services de-multiplexing

#### 8.5.7.4.1 Definition

This test is applicable for UEs that support MBMS broadcast services in MBSFN mode and which support either both TDD transmit and receive functions or TDD MBSFN receive only function.

#### 8.5.7.4.2 Conformance requirement

For cells operating in MBSFN mode as indicated in subclause 8.1.1.6.3 upon receiving the MBMS CURRENT CELL P-T-M RB INFORMATION message, the UE shall act as specified in subclauses 8.7.5.3.

…

The UE applies the MBMS p-t-m radio bearer configuration procedure whenever it detects that one of the activated services is provided by means of a p-t-m radio bearer. This may occur as part of the MCCH acquisition or the MBMS Notification procedure.

…

Upon completing the reception of the MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION messages for an activated MBMS service, the UE shall:

1> if the UE is already receiving an MTCH and does not have the capability to receive the new service in addition:

2> the UE behaviour is undefined.

NOTE: In this case, the UE may request upper layers to prioritise the services and only receive the service(s) prioritised by upper layers.

1> act upon all received information elements as specified in subclause 8.6, unless specified otherwise in the following;

1> if the UE previously received the service by means of a p-t-m radio bearer from a cell belonging to another MBMS cell group:

2> re-establish RLC;

2> re-initialise PDCP.

1> start immediately to use the indicated configuration unless specified otherwise;

1> start or continue receiving the indicated p-t-m radio bearers depending on its UE capabilities.

The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information i.e. the MBMS MODIFIED SERVICES INFORMATION message, MBMS UNMODIFIED SERVICES INFORMATION message, MBMS COMMON P-T-M RB INFORMATION and the MBMS CURRENT CELL P-T-M RB INFORMATION message should be acquired in the same modification period.

…

If the IE "MBSFN TDM Information List" is included, the UE shall:

1> assume that the MBMS service identitfied in IE "MBMS short transmission ID" can be received only in frame(s) with the CFN fulfilling the following equation:

(CFN div N) mod TDM_Rep = TDM_Offset + i, i = 0 to TDM_Length - 1

where

- N is the TTI (in number of 10ms frames) of the FACH
- TDM_Rep is the repetition period
- TDM_Offset is the offset
- TDM_Length is the number of TTIs the MBMS Service is transmitted, starting from TDM _Offset
- CFN is set according to subclause 8.5.15.3 (Initialisation for Cell_FACH).

Reference

3GPP TS 25.331 clauses 8.7.2.5, 8.7.5.2, 8.7.5.3, 8.6.9.9ae

### 8.5.7.4.3 Test purpose

1. To verify that the UE correctly acquires the MCCH, when two services included in the variable MBMS_ACTIVATED_SERVICES are broadcast in a time division multiplexed fashion in the current MBSFN cluster.
2. To verify that the UE correctly acts upon the IE MBSFN TDM Information List received in the MBMS CURRENT CELL P-T-M RB INFORMATION messages for the two services in the variable MBMS_ACTIVATED_SERVICES and correctly de-multiplexes the two sessions.

### 8.5.7.4.4 Method of test

Initial condition

System Simulator:

- MBSFN carrier: 1 cell, Cell 31 (PLMN1). In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 and Default1 MCCH scheduling (one ongoing session) according to subclause 11.2 of TS 34.108.
- Unicast carrier : 1 cell, Cell 1 with default parameters.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.

- The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected (i.e. it is included in MBMS_ACTIVATED_SERVICES variable) a national service for which a session will start on MBSFN Cell 31 (see TS 34.108 clause 11.2.4) during the test.

Related ICS/IXIT statements

- MBMS Broadcast services in MBSFN mode application available on UE Yes/No.

- Support of TDD transmit and receive functions available on UE Yes/No.

- Support of TDD MBSFN receive only function available on UE Yes/No.

Test procedure

a) The UE is camping on Cell 1 and Cell 31. In addition to broadcasting System Information, MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C1 (no session ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

b) The SS sends ACTIVATE RB TEST MODE on the unicast carrier and the UE responds with ACTIVATE RB TEST MODE COMPLETE. The SS then sends CLOSE UE TEST LOOP to activate RLC SDU counting on Cell 31 MTCH (Transmission identity indicating the MBMS activated service).

c) The SS notifies on MCCH, for one modification period, about the start of the MBMS sessions. MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C4 (two PTM sessions starting) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

d) From the first SFN of the next modification period the SS transmits MCCH messages on Cell 31 using MBMS configuration C2 (two PTM sessions ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108

e) The UE establishes the p-t-m radio bearer for the activated service according to the specified service activation time (i.e the first SFN of the modification period following the notification (step c). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

f) The SS then broadcasts 10 RLC SDUs on the MTCH configured for the MBMS service not activated by the UE. The service is carried on the RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD) of TS 34.108. The nominal data rate of the RB as given in TS 34.108 will be scaled down by the factor (TDM_Length/TDM_Rep) as described in TS 25.331 clause 8.6.9.9ae.

g) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is = 0.

h) The SS then broadcasts 10 RLC SDUs on the MTCH configured for the MBMS service activated by the UE. The service is carried on the RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD) of TS 34.108. The nominal data rate of the RB as given in TS 34.108 will be scaled down by the factor (TDM_Length/TDM_Rep) as described in TS 25.331 clause 8.6.9.9ae.

i) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

j) The SS sends OPEN UE TEST LOOP. The UE responds with OPEN UE TEST LOOP COMPLETE.

k) MCCH messages are then transmitted by the SS on Cell 31 using MBMS configuration C1 (no sessions ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108.

l) The SS then delays for 5*modification period and then sends CLOSE UE TEST LOOP to re-start RLC SDU counting on Cell 31 MTCH (Transmission identity indicating the MBMS activated service).

m) The SS notifies on MCCH, for one modification period, about the start of the MBMS sessions. MCCH messages are transmitted by the SS on Cell 31 using MBMS configuration C4 (two PTM sessions starting) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108. A different TDM configuration from that notified in step c) is used.

n) From the first SFN of the next modification period the SS transmits MCCH messages on Cell 31 using MBMS onfiguration C2 (two PTM sessions ongoing) and Default1 MCCH scheduling according to clause 11.2 of TS 34.108

o) The UE establishes the p-t-m radio bearer for the activated service according to the specified service activation time (i.e the first SFN of the modification period following the notification (step c). The UE closes the test loop and starts counting successfully received RLC PDUs on the MTCH. The UE will send CLOSE UE TEST LOOP COMPLETE.

p) The SS then broadcasts 10 RLC SDUs on the MTCH configured for the MBMS service not activated by the UE. The service is carried on the RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD) of TS 34.108. The nominal data rate of the RB as given in TS 34.108 will be scaled down by the factor (TDM_Length/TDM_Rep) as described in TS 25.331 clause 8.6.9.9ae.

q) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is = 0.

r) The SS then broadcasts 10 RLC SDUs on the MTCH configured for the MBMS service activated by the UE. The service is carried on the RB for MBSFN MTCH with 80ms TTI as specified in clause 6.10.3.4.4.9 (3.84 Mcps TDD) or clause 6.11.6.4.4.9 (7.68 Mcps TDD) of TS 34.108. The nominal data rate of the RB as given in TS 34.108 will be scaled down by the factor (TDM_Length/TDM_Rep) as described in TS 25.331 clause 8.6.9.9ae.

s) The SS sends UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST and waits for the UE to respond with UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE. The SS shall check that the counter returned by the UE for the MTCH of the activated service in the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE is > 0.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated for the selected national service on MTCH. |
| 4 | ← | | M | MBMS MCCH Message Configuration C4 | For one modification period. Two sessions starting, one of which is the activated service. |
| 5 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. Two sessions ongoing. |
| 6 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 7 | | SS | M | | Then SS transmits 10 RLC SDUs on the MTCH, for the service not activated by the UE. |
| 8 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 9 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH equals zero. |
| 10 | | SS | M | | Then the SS transmits 10 RLC SDUs on the MTCH for the service activated by the UE. |
| 11 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 12 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 13 | ← | | U | OPEN UE TEST LOOP | |
| 14 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 15 | ← | | M | MBMS MCCH Message Configuration C1 | No sessions ongoing |
| 16 | | SS | M | | SS delays for a period 5*modification period. |
| 17 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 is activated for the selected national service on MTCH. |
| 18 | ← | | M | MBMS MCCH Message Configuration C4 | For one modification period. Two sessions starting, one of which is the activated service. |
| 19 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. Two sessions ongoing |
| 20 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE shall establish the indicated p-t-m radio bearer and close the test loop. |
| 21 | | SS | M | | Then SS transmits 10 RLC SDUs on the MTCH, for the service not activated by the UE. |
| 22 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 23 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH equals zero. |
| 24 | | SS | M | | Then the SS transmits 10 RLC SDUs on the MTCH for the service activated by the UE. |
| 25 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 26 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC SDUs received on the MTCH is greater than zero. |
| 27 | ← | | U | OPEN UE TEST LOOP | |
| 28 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 29 | ← | | U | DEACTIVATE RB TEST MODE | |
| 30 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific message contents

With the following exceptions, all messages have the same content as defined in TS 34.108 clause 9.1.3 for the MBSFN carriers and in TS 34.108 clause 9.1.1 or 9.1.2 for the unicast carrier:

MBMS CURRENT CELL P-T-M RB INFORMATION (Step 4 and Step 5)

| Information Element | Value/remark | Version |
|---|---|---|
| … | | |
| MBSFN TDM Info List | | Rel-7 |
| - MBMS short transmission ID | Index to the activated service | |
| - TDM_Rep | 8 | |
| - TDM_Offset | 4 | |
| - TDM_Length | 4 | |
| - MBMS short transmission ID | Index to the not activated service | |
| - TDM_Rep | 8 | |
| - TDM_Offset | 0 | |
| - TDM_Length | 2 | |

MBMS CURRENT CELL P-T-M RB INFORMATION (Step 18 and Step 19)

| Information Element | Value/remark | Version |
|---|---|---|
| … | | |
| MBSFN TDM Info List | | Rel-7 |
| - MBMS short transmission ID | Index to the activated service | |
| - TDM_Rep | 4 | |
| - TDM_Offset | 0 | |
| - TDM_Length | 1 | |
| - MBMS short transmission ID | Index to the not activated service | |
| - TDM_Rep | 4 | |
| - TDM_Offset | 1 | |
| - TDM_Length | 3 | |

### 8.5.7.4.5 Test requirements

1) After step 9, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report an SDU count = 0.

2) After step 12, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report an SDU count > 0.

3) After step 23, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report an SDU count = 0.

4) After step 26, the UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE message shall report an SDU count > 0.

# 9 Elementary procedures of mobility management

The tests are based on TS 24.008.

In this clause, when the expected sequence require that "a mobile originated CM connection is attempted", it shall be for a service other than emergency call.

In this clause, a initial CM message is either a SETUP message, a REGISTER message or a CP-DATA message (in that case the acknowledged mode of operation on SAPI 3 will have be established and this message will be sent on SAPI 3).

All tests in this clause shall only be performed in Network Mode of Operation II, unless specifically specified otherwise in individual sub-clauses.

All test cases in this clause shall be performed either in CS mode or in CS and PS mode.

If the test cases are to be executed in CS and PS mode the System Simulator behaviour in PS mode should reflect the behaviour of a real network. This means that test cases which initially force the UE into the MM IDLE UPDATED state should force the UE in parallel to enter the GMM REGISTERED state. Test cases which initially reject a UE's attempt to get CS registered, should as well reject a UE's attempt to get PS registered.

The following consequences arise from supporting this type of behaviour:

1. GMM ATTACH REQUEST messages received in the preamble should be accepted and bring the UE into the GMM REGISTERED state
2. subsequent GMM ATTACH REQUEST messages received in the test body should be rejected with Cause value = 7 'GPRS services not allowed'
3. within the test body GMM ROUTING AREA UPDATE REQUEST messages may be received and should be acknowledged resp. rejected the same way as the corresponding LOCATION AREA UPDATING REQUEST messages
4. GMM DETACH REQUEST messages received within the test body should be acknowledged
5. if, at the beginning of a test case, a UE attempts to register in CS mode, and this attempt is rejected, the parallel attempt to register in PS mode should be rejected with the same cause as used to reject the CS registration

In PS mode the UE may attach automatically or not. This should be accounted for by the System Simulator. A manual Attach UE will not be triggered to perform PS registration for subsequent switch on of the UE, in the test body.

Any GMM signalling shown in the Expected Sequence Tables in the following sections is purely informative and shall not be considered to be part of the test purpose or test requirement.

## 9.1 TMSI reallocation

The intention of the TMSI Reallocation procedure is to assign a new temporary identity for the UE. If the message is not understood by the UE, the network could not establish a link to the UE. As this is a common MM procedure, it can be initiated at any time.

### 9.1.1 Definition

### 9.1.2 Conformance requirement

1) A UE shall acknowledge a new TMSI when explicitly allocated during a location updating procedure or an incoming call.
2) The TMSI shall be updated on the USIM when the UE is correctly deactivated in accordance with the manufacturer's instructions.
3) A UE shall answer paging with this TMSI and includes it in the PAGING RESPONSE message.

Reference(s)

TS 24.008 clause 4.3.1.

### 9.1.3 Test purpose

To verify that the UE is able to receive and acknowledge a new TMSI by means of an explicit TMSI reallocation procedure.

To verify that the UE has stored the TMSI in a non-volatile memory.

The implicit reallocation procedure is tested in clause 9.4.1.

### 9.1.4 Method of test

#### Initial conditions

- System Simulator:
  - two cells A and B, belonging to different location areas a and b, default parameters.
  - The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to not allowing IMSI Attach/Detach in both the cells.
- User Equipment:
  - the UE has valid TMSI (= TMSI1), CKSN, CK, IK. It is "idle updated" on cell B.

#### Related ICS/IXIT statement(s)

Switch off button Yes/No.

Way to bring the UE into service.

#### Test Procedure

The UE is paged in cell B and the security mode is established. An explicit TMSI reallocation procedure is performed. The RRC CONNECTION is released. The UE is switched off and then its power supply is interrupted for 10 s. The power supply is resumed and then the UE is switched on and allowed sufficient time to guarantee that the UE is in service (listening to its paging subchannel). The system simulator then checks, by paging, whether the UE has stored the received TMSI.

The UE is made to select cell A. A normal location updating procedure is performed in cell A. An explicit TMSI reallocation procedure is performed and then the location updating procedure is accepted by the SS. The system simulator checks, by paging, whether the UE has stored the allocated TMSI.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| The following messages are sent and shall be received on cell B. | | | | |
| 1 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2 "Initial UE identity" = TMSI1. Establishment Cause: Terminating Conversation Call. |
| 2 | → | | PAGING RESPONSE | "Mobile identity" =TMSI1 |
| 2a | ← | | AUTHENTICATION REQUEST | |
| 2b | → | | AUTHENTICATION RESPONSE | |
| 3 | | SS | | The SS starts integrity protection. |
| 4 | | | Void | |
| 5 | ← | | TMSI REALLOCATION COMMAND | "Mobile identity" = new TMSI (TMSI2) different from TMSI 1. |
| 6 | → | | TMSI REALLOCATION COMPLETE | |
| 7 | | SS | | The SS releases the RRC connection. |
| 8 | | | Void | |
| 9 | UE | | | If possible (see ICS), the UE is switched off. A Detach Request can be received in PS mode. |
| 9a | UE | | | The power supply is interrupted for 10 s. |
| 10 | UE | | | The UE is switched on. The subsequent GMM attach should be rejected if received in the PS mode. |
| 11 | | SS | | The SS waits for 5 seconds to guarantee that the UE is in service (listening to its paging subchannel). |
| 12 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2 "Initial UE identity" = TMSI2. Establishment Cause: Terminating Conversation Call. |
| 13 | → | | PAGING RESPONSE | "Mobile identity" =TMSI2. |
| 14 | | SS | | The SS releases the RRC connection. The following messages are sent and shall be received on cell A |
| 15 | | | Void | |
| 16 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "non-suitable cell" (see note) |
| 17 | | SS | RRC CONNECTION REQUEST | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 18 | | | Void | |
| 19 | | | Void | |
| 20 | → | | LOCATION UPDATING REQUEST | location updating type = normal, "ciphering key sequence number" = CKSN, LAI = b, "mobile identity" = TMSI2. |
| 20a | ← | | AUTHENTICATION REQUEST | |
| 20b | → | | AUTHENTICATION RESPONSE | |
| 20c | | SS | | The SS starts integrity protection. |
| 20d | | | Void | |
| 21 | ← | | TMSI REALLOCATION COMMAND | TMSI = TMSI1. |
| 22 | → | | TMSI REALLOCATION COMPLETE | |
| 23 | ← | | LOCATION UPDATING ACCEPT | This message does not contain the optional Mobile Identity field. |
| 24 | | SS | | The SS releases the RRC connection. |
| 25 | | | Void | |
| 25a | | | | The SS waits for 5 seconds to allow the UE to become "idle updated" on cell A. |
| 26 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2 "Initial UE identity" IE contains the new TMSI (= TMSI1). "Establishment cause": Terminating Conversational Call. |
| 27 | → | | PAGING RESPONSE | "Mobile identity" IE contains the new TMSI (= TMSI1). |
| 28 | | SS | | The SS releases the RRC connection. |
| 29 | | | Void | |

NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".

Specific message contents

None.

9.1.5 Test requirement

At step 5 the UE shall receive and acknowledge a new TMSI (TMSI2) and has stored that in the USIM, and the UE is switched off and on after step 9 and 10.

At step 13 the UE shall transmit a new TMSI2 and includes it in the PAGING RESPONSE message.

At step 27 the UE shall answer paging with this TMSI1 and includes it in the PAGING RESPONSE message.

# 9.2 Authentication

The purpose of this procedure is to verify the user identity. A correct response is essential to guarantee the establishment of the connection. If not, the connection will drop.

The SS shall be able to handle vectors of AUTN, RAND, CK, IK, AUTS and XRES in a similar way as the MSC/BSS entities. The SS and test USIM shall incorporate a test algorithm for generating RES and CK, IK from RAND, AUTN and IK which operates as described in TS 34.108 clause 8.1.2.

## 9.2.1 Authentication accepted

9.2.1.1 Definition

9.2.1.2 Conformance requirement

1) A UE shall correctly respond to an AUTHENTICATION REQUEST message by sending an AUTHENTICATION RESPONSE message with the RES information field set to the same value as the one produced by the authentication algorithm in the network.

2) A UE shall indicate in a PAGING RESPONSE message the ciphering key sequence number which was allocated to it through the authentication procedure.

Reference(s)

TS 24.008 clauses 4.3.2.2 and 4.3.2.4.

9.2.1.3 Test purpose

1) To check that a UE correctly responds to an AUTHENTICATION REQUEST message by sending an AUTHENTICATION RESPONSE message with the RES information field set to the same value as the one produced by the authentication algorithm in the network.

2) To check that a UE indicates in a PAGING RESPONSE message the ciphering key sequence number which was allocated to it through the authentication procedure.

9.2.1.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE has valid TMSI, CKSN (CKSN1), CK, IK. It is "idle updated" on the cell.

Related ICS/IXIT statement(s)

None.

Test Procedure

The UE is paged. After the UE has sent a PAGING RESPONSE message to the SS, the SS initiates an authentication procedure and checks the value RES sent by the UE in the AUTHENTICATION RESPONSE message. The RRC CONNECTION is released. The UE is paged and the SS checks the value of the ciphering key sequence number sent by the UE in the PAGING RESPONSE message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>Establishment Cause: Terminating Conversational Call. |
| 2 | → | | PAGING RESPONSE | CKSN = CKSN1 |
| 3 | ← | | AUTHENTICATION REQUEST | The SS initiates authentication with CKSN2 different from CKSN1. |
| 4 | → | | AUTHENTICATION RESPONSE | "Auth. parameter RES" IE shall be bit exact with the value as produced by the authentication algorithm. |
| 5 | | SS | | The SS releases the RRC connection. |
| 6 | | | Void | |
| 6a | | | | The SS waits for 5 seconds to guarantee that the UE is in service. |
| 7 | | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>Establishment Cause: Terminating Conversational Call. |
| 8 | → | | PAGING RESPONSE | "Ciphering key sequence number" shall be the same as the value that was sent in the last AUTHENTICATION REQUEST message (= CKSN2). |
| 9 | | SS | | The SS releases the RRC connection. |
| 10 | | | Void | |

Specific message contents

None.

9.2.1.5 Test requirement

1) At step 4 the UE shall send an AUTHENTICATION RESPONSE message with the RES information field set to the same value as the XRES calculated by the SS.

2) At step 8 the UE shall indicate in a PAGING RESPONSE message the ciphering key sequence number which was allocated to it through the authentication procedure.

## 9.2.2 Authentication rejected by the network

9.2.2.1 Definition

9.2.2.2 Conformance requirement

1) After reception of an AUTHENTICATION REJECT message the UE shall:

   1.1 not perform normal location updating;

   1.2 not perform periodic location updating;

   1.3 not respond to paging with TMSI;

   1.4 reject any request from CM entity for MM connection except for emergency call;

   1.5 not perform IMSI detach if deactivated.

2) After reception of an AUTHENTICATION REJECT message the UE, if it supports emergency speech call, shall accept a request for an emergency call by sending a RRC CONNECTION REQUEST message with the establishment cause set to "emergency call" and include an IMEI as mobile identity in the CM SERVICE REQUEST message.

3) After reception of an AUTHENTICATION REJECT message the UE shall delete the stored LAI, CKSN and TMSI.

Reference(s)

TS 24.008 clause 4.3.2.5.

#### 9.2.2.3 Test purpose

1) To check that ,after reception of an AUTHENTICATION REJECT message, the UE:

   1.1 does not perform normal location updating;

   1.2 does not perform periodic location updating;

   1.3 does not respond to paging with TMSI;

   1.4 rejects any request from CM entity for MM connection except for emergency call;

   1.5 does not perform IMSI detach if deactivated.

2) To check that, after reception of an AUTHENTICATION REJECT message the UE, if it supports emergency speech call, accepts a request for an emergency call by sending a RRC CONNECTION REQUEST message with the establishment cause set to "emergency call" and includes an IMEI as mobile identity in the CM SERVICE REQUEST message.

3) To check that, after reception of an AUTHENTICATION REJECT message and after having been deactivated and reactivated, the UE performs location updating using its IMSI as mobile identity and indicates deleted LAI and CKSN.

#### 9.2.2.4 Method of test

Initial conditions

- System Simulator:
  - two cells: A and B, belonging to different location areas a and b;
  - IMSI attach/detach is allowed in both cells;
  - the T3212 time-out value is 1/10 hour in both cells.
- User Equipment:
  - the UE has valid TMSI, CKSN, CK and IK. It is "idle updated" on cell B.

Related ICS/IXIT statement(s)

USIM removal possible while UE is powered Yes/No.

Switch off on button Yes/No.

Support of emergency speech call Yes/No.

Test procedure

The SS rejects an authentication. The RRC CONNECTION is released. The SS checks that the UE has entered the state MM IDLE substate NO IMSI, i.e. does not perform normal location updating, does not perform periodic updating, does not respond to paging, rejects any requests from CM entities except emergency calls and does not perform IMSI detach if USIM detachment is performed, switch off is performed, or the power is removed, depending on the UE (see ICS/IXIT).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| The following messages are sent and shall be received on cell B | | | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>Establishment Cause: Terminating Conversational Call.. |
| 2 | → | | PAGING RESPONSE | "Ciphering key sequence number" shall be the same as the value that was sent in the last AUTHENTICATION REQUEST. |
| 3 | ← | | AUTHENTICATION REQUEST | CKSN in this AUTHENTICATION REQUEST should be different from that received in PAGING RESPONSE message. |
| 4 | → | | AUTHENTICATION RESPONSE | |
| 5 | ← | | AUTHENTICATION REJECT | |
| 6 | | SS | | The SS releases the RRC connection. |
| 7 | | | Void | |
| 8 | ← | | PAGING TYPE 1 | The UE is paged in cell B. "UE identity " IE contains TMSI. Paging Cause: Terminating Conversational Call. |
| 9 | UE | | | The UE shall ignore this message. This is verified during 3 s. |
| 10 | | SS | | The SS waits for at least for 15 s. |
| 11 | UE | | | A MO CM connection is attempted. |
| 12 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or cell B. This is checked during 30 s. |
| 13 | UE | | | If the UE supports emergency speech call (see ICS), an emergency call is attempted. |
| 14 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Emergency call". |
| 15 | | | Void | |
| 16 | | | Void | |
| 17 | → | | CM SERVICE REQUEST | "CM service type": Emergency call establishment.<br>"Mobile identity": type of identity is set to IMEI. |
| 18 | ← | | CM SERVICE ACCEPT | |
| 19 | → | | EMERGENCY SETUP | |
| 20 | ← | | RELEASE COMPLETE | "Cause" = unassigned number. |
| 21 | | SS | | The SS releases the RRC connection. |
| 22 | | | Void | |
| The following messages are sent and shall be received on cell A. | | | | |
| 23 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "non-suitable cell".<br>(see note) |
| 24 | UE | | | The UE performs cell reselection according to procedure as specified in (this however is not checked until step 29).<br>The UE shall not initiate an RRC connection establishment on cell A or on cell B. |
| 25 | | SS | | The SS waits at least 7 minutes for a possible periodic updating. |
| 26 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. |
| 27 | UE | | | If possible (see ICS) USIM detachment is performed.<br>Otherwise if possible (see ICS) switch off is performed.<br>Otherwise the power is removed. |
| 28 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. This is checked during 3 s. |
| 29 | UE | | | Depending on what has been performed in step 27 the UE is brought back to operation.<br>The subsequent GMM attach should be rejected if received in the PS mode. |
| 30 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 31 | | | Void | |
| 32 | | | Void | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 33 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = no key available, "Mobile Identity" = IMSI, "LAI" = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE). |
| 34 | ← | | AUTHENTICATION REQUEST | CKSN in this AUTHENTICATION REQUEST should be different from that received in LOCATION UPDATING REQUEST message. |
| 35 | → | | AUTHENTICATION RESPONSE | |
| 36 | ← | | LOCATION UPDATING ACCEPT | "Mobile Identity" = TMSI. |
| 37 | → | | TMSI REALLOCATION COMPLETE | |
| 38 | | SS | | The SS releases the RRC connection. |
| 39 | | | Void | |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 9.2.2.5 Test requirement

1)

1.1 At step 24 the UE shall not send any RRC CONNECTION REQUEST on cell A or on cell B.

1.2 At step 26 the UE shall not send any RRC CONNECTION REQUEST on cell A or on cell B.

1.3 At step 9 the UE shall not respond to paging.

1.4 At step 12 the UE shall not send any RRC CONNECTION REQUEST on cell A or on cell B.

1.5 At step 28 the UE shall not send any RRC CONNECTION REQUEST on cell A or on cell B.

2) At step 14 the UE shall send a RRC CONNECTION REQUEST message with the establishment cause set to "emergency call"; and at step 17 the UE shall send a CM SERVICE REQUEST message with the "CM service type" set to "Emergency call establishment".

3) At step 33 the UE shall perform location updating using its IMSI as mobile identity and indicates deleted LAI and CKSN.

## 9.2.3 Authentication rejected by the UE (MAC code failure)

### 9.2.3.1 Definition

Following a UMTS authentication challenge, the UE may reject the core network, on the grounds of an incorrect AUTN parameter (see TS 33.102).

If the UE considers the MAC code (supplied by the core network in the AUTN parameter) to be invalid, it shall send an AUTHENTICATION FAILURE message to the network, with the reject cause 'MAC failure'.

### 9.2.3.2 Conformance requirement

1) The UE shall respond to an AUTHENTICATION REQUEST message, with a MAC code failure in the AUTN parameter, by sending an AUTHENTICATION FAILURE message with the reject cause 'MAC failure' and start timer T3214. When an AUTHENTICATION REQUEST message containing an invalid MAC has been received by the UE from the network, the UE shall stop any of the retransmission timers that are running (i.e. T3210, T3220 or T3230).

2) Upon receipt of an AUTHENTICATION FAILURE message from the UE, with reject cause 'MAC failure' the network may initiate the identification procedure. Upon reception of an IDENTITY REQUEST message, the UE shall identify itself by sending an IDENTITY RESPONSE message including the IMSI to the network. The

network may then check that the TMSI originally used in the authentication challenge corresponded to the correct IMSI.

3) If the TMSI/IMSI mapping in the network was incorrect, the network should respond by sending a new AUTHENTICATION REQUEST message to the UE. Upon receiving the second AUTHENTICATION REQUEST message from the network, the UE shall stop the timer T3214, if running, and then process the challenge information as normal. Upon successfully validating the network (an AUTHENTICATION REQUEST that contains a valid MAC in the AUTN parameter is received), the UE shall send the AUTHENTICATION RESPONSE message to the network and shall start any retransmission timers (e.g. T3210, T3220 or T3230) , if they were running and stopped when the UE received the first AUTHENTICATION REQUEST message containing an incorrect MAC.

Reference(s)

TS 24.008 clauses 4.3.2.5.1 and 4.3.2.6 (c)

### 9.2.3.3 Test purpose

1) To check that a UE shall correctly respond to an AUTHENTICATION REQUEST message, with a MAC code failure in the AUTN parameter, by sending an AUTHENTICATION FAILURE message with the reject cause 'MAC failure'.

2) To check that upon reception of an IDENTITY REQUEST message, requesting for IMSI, the UE identifies itself by sending an IDENTITY RESPONSE message including the IMSI to the network.

3) To check that upon receiving the second AUTHENTICATION REQUEST message from the network, the UE shall stop the timer T3214, if running, and then process the challenge information as normal. To check that upon successfully validating the network (an AUTHENTICATION REQUEST that contains a valid MAC is received), the UE sends the AUTHENTICATION RESPONSE message to the network.

### 9.2.3.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE has valid TMSI, CKSN (CKSN1), CK, IK. It is "idle updated" on the cell.

Related ICS/IXIT statement(s)

None.

Test procedure

The UE rejects an authentication. The AUTHENTICATION FAILURE is sent by UE. Upon receipt of the AUTHENTICATION FAILURE message the SS initiates identification procedure. The UE responds to the SS by sending IDENTITY RESPONSE message. The SS sends AUTHENTICATION REQUEST message with correct AUTN parameter.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>Establishment Cause: Terminating Conversational Call. |
| 2 | → | | PAGING RESPONSE | CKSN = CKSN1 |
| 3 | ← | | AUTHENTICATION REQUEST | With AUTN parameter having a MAC value different from what is calculated in 34.108 clause 8.1.2.1 step 4. |
| 4 | → | | AUTHENTICATION FAILURE | With reject cause "MAC failure" |
| 5 | ← | | IDENTITY REQUEST | With identity type IMSI |
| 6 | → | | IDENTITY RESPONSE | With IMSI in Mobile Identity IE |
| 7 | ← | | AUTHENTICATION REQUEST | With the AUTN parameter having a valid MAC code, see 34.108 clause 8.1.2.1 step 4. |
| 8 | → | | AUTHENTICATION RESPONSE | Authentication Response Parameter IE (RES) shall be bit exact with the value as produced by the authentication algorithm. |
| 9 | ← | | RRC CONNECTION RELEASE | |
| 10 | → | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

#### 9.2.3.5 Test requirement

1) At step 4 the UE shall send AUTHENTICATION FAILURE message with reject cause set to "MAC failure".

2) At step 6 the UE shall send an IDENTITY RESPONSE message including the IMSI.

3) At step 8 the UE shall send an AUTHENTICATION RESPONSE message.

### 9.2.4 Authentication rejected by the UE (SQN failure)

#### 9.2.4.1 Definition

Following a UMTS authentication challenge, the UE may reject the core network, on the grounds of an incorrect AUTN parameter (see TS 33.102).

If the UE considers the SQN (supplied by the core network in the AUTN parameter) to be out of range, it shall send an AUTHENTICATION FAILURE message to the network, with the reject cause 'Synch failure' and a re-synchronisation token AUTS provided by the USIM (see TS 33.102).

#### 9.2.4.2 Conformance requirement

1) The UE shall respond to an AUTHENTICATION REQUEST message, with an SQN failure in the AUTN parameter, by sending an AUTHENTICATION FAILURE message with the reject cause 'Synch failure' and start the timer T3216 and stop any of the retransmission timers that are running (i.e. T3210, T3220 or T3230). Upon receipt of an AUTHENTICATION FAILURE message from the UE with the reject cause 'synch failure,' the network shall use the returned AUTS parameter from the authentication failure parameter IE in the AUTHENTICATION FAILURE message, to re-synchronise.

2) Upon successfully validating the network (a second AUTHENTICATION REQUEST is received which contains a valid SQN in the AUTN parameter) while T3216 is running, the UE shall send the AUTHENTICATION RESPONSE message to the network and shall start any retransmission timers (e.g. T3210, T3220 or T3230), if they were running and stopped when the UE received the first AUTHENTICATION REQUEST message containing an invalid SQN.

Reference(s)

TS 24.008 clause 4.3.2.5.1, 4.3.2.6 (d)

#### 9.2.4.3 Test purpose

1) To check that a UE shall correctly respond to an AUTHENTICATION REQUEST message, with an SQN failure in the AUTN parameter, by sending an AUTHENTICATION FAILURE message with the reject cause 'Synch failure'.

2) To check that upon successfully validating the network (a second AUTHENTICATION REQUEST is received which contains a valid SQN) while T3216 is running, the UE shall send the AUTHENTICATION RESPONSE message to the network.

#### 9.2.4.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE has valid TMSI, CKSN (CKSN1), CK, IK. It is "idle updated" on the cell.

Related ICS/IXIT statement(s)

None.

Test procedure

The SS sends an AUTHENTICATION REQUEST having an invalid SQN code (i.e. uses the predefined $AMF_{RESYNCH}$ value to trigger the SQN re-synchronisation procedure, see TS 34.108 clause 8.1.2.2) to the UE. The SS verifies that the UE rejects the authentication.

The SS sends a second AUTHENTICATION REQUEST with a valid SQN code (i.e. uses an AMF value different from $AMF_{RESYNCH}$ value, see TS 34.108 clause 8.1.2.2). The SS checks that the UE accepts the authentication request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2 Establishment Cause: Terminating Conversational Call. |
| 2 | → | | PAGING RESPONSE | CKSN = CKSN1 |
| 3 | ← | | AUTHENTICATION REQUEST | with the AMF information field set to $AMF_{RESYNCH}$ value to trigger SQN re-synchronisation procedure in test USIM, see TS 34.108 clause 8.1.2.2. |
| 4 | → | | AUTHENTICATION FAILURE | including the AUTS parameter and with the reject cause set to 'Synch failure' |
| 5 | ← | | AUTHENTICATION REQUEST | with the AMF information field set to value different from $AMF_{RESYNCH}$ value to cause test USIM to treat SQN value as valid, see TS 34.108 clause 8.1.2.2. |
| 6 | → | | AUTHENTICATION RESPONSE | *"Auth. parameter RES" IE shall be bit exact with the value as produced by the authentication algorithm.* |
| 7 | ← | | RRC CONNECTION RELEASE | |
| 8 | → | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

#### 9.2.4.5 Test requirement

1) At step 4 the UE shall reject an authentication and the AUTHENTICATION FAILURE is sent to SS with reject cause "Synch failure".

2) At step 6 the UE shall send an AUTHENTICATION RESPONSE message with the RES information field set to the same value as the XRES calculated by SS.

## 9.2.5 Authentication rejected by the UE / fraudulent network

### 9.2.5.1 Definition

### 9.2.5.2 Conformance requirement

R99 and REL-4:

1. It can be assumed that the source of the authentication challenge is not genuine (authentication not accepted by the UE) if any of the following occur:

   - After sending the AUTHENTICATION FAILURE message with the reject cause 'MAC failure' the timer T3214 expires;

   - Upon receipt of the second AUTHENTICATION REQUEST while T3214 is running and the MAC value cannot be resolved.

     When it has been deemed by the UE that the source of the authentication challenge is not genuine (i.e. authentication not accepted by the UE), the UE shall behave as described in 3GPP TS 24.008 clause 4.3.2.6.1.

2. In addition to the cases specified in 3GPP TS 24.008 subclause 4.3.2.6, the UE may deem that the network has failed the authentication check after any combination of three consecutive authentication failures, regardless whether ‘MAC failure’, ‘invalid SQN’, or ‘GSM authentication unacceptable’ was diagnosed. The authentication failures shall be considered as consecutive only, if the authentication challenges causing the second and third authentication failure are received by the UE, while the timer T3214 or T3216 started after the previous authentication failure is running.

   If the UE deems that the network has failed the authentication check, then it shall request RR or RRC to release the RR connection and the PS signalling connection, if any, and bar the active cell or cells (see 3GPP TS 25.331 and 3GPP TS 04.18).

Reference(s)

3GPP TS 24.008 clauses 4.3.2.6 (c) and 4.3.2.6.1.

REL-5 and later releases:

1. It can be assumed that the source of the authentication challenge is not genuine (authentication not accepted by the UE) if any of the following occur:

   - after sending the AUTHENTICATION FAILURE message with the reject cause "MAC failure" the timer T3214 expires;

   - the UE detects any combination of the authentication failures: "MAC failure", "invalid SQN", and "GSM authentication unacceptable", during three consecutive authentication challenges. The authentication challenges shall be considered as consecutive only, if the authentication challenges causing the second and third authentication failure are received by the UE, while the timer T3214 or T3216 started after the previous authentication failure is running.

     When it has been deemed by the UE that the source of the authentication challenge is not genuine (i.e. authentication not accepted by the UE), the UE shall behave as described in 3GPP TS 24.008 subclause 4.3.2.6.1.

2. If the UE deems that the network has failed the authentication check, then it shall request RR or RRC to release the RR connection and the PS signalling connection, if any, and bar the active cell or cells (see 3GPP TS 25.331 and 3GPP TS 44.018).

Reference(s)

3GPP TS 24.008 clauses 4.3.2.6 (c) and 4.3.2.6.1.

#### 9.2.5.3 Test purpose

R99 and REL-4:

To test UE treating a cell as barred:

1. when the UE receives the second or third AUTHENTICATION REQUEST message with invalid MAC value during the T3214 is running.
2. when the timer T3214 has expired.

REL-5 and later releases:

To test UE treating a cell as barred:

1. when the UE receives the third AUTHENTICATION REQUEST message with invalid MAC value during the T3214 is running.
2. when the timer T3214 has expired.

#### 9.2.5.4 Method of test

##### Initial conditions

- System Simulator:
  - two cells: A and B, belonging to different location areas a and b.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated" on cell A.

##### Related ICS/IXIT statement(s)

None.

##### Test procedure

A location updating procedure is initiated in cell B. The SS sends an AUTHENTICATION REQUEST message with invalid MAC value and the UE responds with an AUTHENTICATION FAILURE message. The SS resends an AUTHENTICATION REQUEST message with invalid MAC value.

For R99 and REL-4: The SS waits 30 seconds. If the UE sends an AUTHENTICATION FAILURE message during this time then the SS repeats the authentication procedure a third time and then waits 30 seconds. The UE moves into idle mode and do not make any access attempt on cell B.

For REL-5 and later release: The SS repeats a third time the authentication procedure, again with invalid MAC value in its AUTHENTICATION REQUEST message. The UE moves into idle mode and do not make any access attempt on cell B.

It is checked that the UE shall not attempt to access the network in cell B.

A location updating procedure is initiated in cell A. The SS sends an AUTHENTICATION REQUEST message with invalid MAC value and the UE responds with an AUTHENTICATION FAILURE message. The SS waits T3214 expiry.

It is checked that the UE shall not attempt to access the network in cell A.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages shall be sent and received on Cell B. |
| 1 | | SS | | Set the cell type of cell B to the “Serving cell”.<br>Set the cell type of cell A to the “non-suitable cell”.<br>(see note) |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “Registration”.<br>If PS mode: a routing area updating procedure should be performed. |
| 3 | → | | LOCATION UPDATING REQUEST | |
| 4 | ← | | AUTHENTICATION REQUEST | with AUTN parameter having a MAC value different from what is calculated in 34.108 clause 8.1.2.1 step 4. |
| 5 | → | | AUTHENTICATION FAILURE | with reject cause "MAC failure" |
| 6 | ← | | AUTHENTICATION REQUEST | with AUTN parameter having a MAC value different from what is calculated in 34.108 clause 8.1.2.1 step 4. |
| 7 | → | | AUTHENTICATION FAILURE | with reject cause "MAC failure"<br>R99 and REL-4: In case message is not received within 30s then the SS should continue from step 10. |
| 8 | ← | | AUTHENTICATION REQUEST | with AUTN parameter having a MAC value different from what is calculated in 34.108 clause 8.1.2.1 step 4.<br>R99 and REL-4: Optional step |
| 9 | | SS | | The SS verifies that the UE does not attempt to access the network for 30s.<br>R99 and REL-4: Optional step |
| | | | | The following messages shall be sent and received on Cell A |
| 10 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "non-suitable cell".<br>(see note) |
| 11 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “Registration”.<br>If PS mode: a routing area updating procedure should be performed. |
| 12 | → | | LOCATION UPDATING REQUEST | |
| 13 | ← | | AUTHENTICATION REQUEST | with AUTN parameter having a MAC value different from what is calculated in 34.108 clause 8.1.2.1 step 4. |
| 14 | → | | AUTHENTICATION FAILURE | with reject cause "MAC failure" |
| 15 | | SS | | The SS waits T3214 expiry. |
| 16 | | SS | | The SS verifies that the UE does not attempt to access the network for 30s. |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

9.2.5.5 Test requirement

For R99 and REL-4 UE:

Alternative 1:

- After step 6, when the UE have received the second AUTHENTICATION REQUEST message with invalid MAC value, the UE shall not attempt to access the network in cell B.

Alternative 2:

- After step6, when the UE have received the second AUTHENTICATION REQUEST message with invalid MAC value while the timer T3214 is running, the UE shall send an AUTHENTICATION FAILURE message with reject cause "MAC failure" to the SS; and

- After step 8, when the UE have received the third AUTHENTICATION REQUEST message with invalid MAC value, the UE shall not attempt to access the network in cell B.

For REL-5 UE:

- After step 6, when the UE have received the second AUTHENTICATION REQUEST message with invalid MAC value while the timer T3214 is running, the UE shall send an AUTHENTICATION FAILURE message with reject cause "MAC failure" to the SS; and

- After step 8, when the UE have received the third AUTHENTICATION REQUEST message with invalid MAC value, the UE shall not attempt to access the network in cell B.

After step 15, when the timer T3214 has expired, the UE shall not attempt to access the network in cell A.

# 9.3 Identification

The purpose of this procedure is to check that the UE gives its identity as requested by the network. If this procedure does not work, it will not be possible for the network to rely on the identity claimed by the UE.

## 9.3.1 General Identification

### 9.3.1.1 Definition

### 9.3.1.2 Conformance requirement

1) When requested by the network the UE shall send its IMSI.

2) When requested by the network the UE shall send the TMSI which it was previously allocated.

3) When requested by the network the UE shall send its IMEI as stored in the UE.

4) When requested by the network the UE shall send its IMEISV as stored in the UE.

Reference(s)

TS 24.008 clause 4.3.3.

### 9.3.1.3 Test purpose

1) To verify that the UE sends identity information as requested by the system in the following cases: IMSI and TMSI are requested in non-security mode, IMEI is requested in security mode.

2) To verify that the UE sends its IMEI, when requested to do so, in non- security mode.

3) To verify that the UE sends its IMEISV, when requested to do so, in non- security mode.

### 9.3.1.4 Method of test

#### 9.3.1.4.1 Identification

Initial conditions

- System Simulator:
  - 1 cell, default values.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated" on the cell.

Related ICS/IXIT statement(s)

IMEI of the UE.

IMEISV of the UE.

Test Procedure

The SS requests identity information from the UE:

- IMSI in non security mode;
- allocated TMSI in non security mode;
- IMEI in non security mode;
- IMEISV in non security mode;
- IMEI in security mode.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>Establishment Cause: Terminating Conversational Call. |
| 2 | → | | PAGING RESPONSE | |
| 3 | ← | | IDENTITY REQUEST | "Identity type" IE is IMSI. |
| 4 | → | | IDENTITY RESPONSE | "Mobile identity" IE specifies the IMSI of the UE. |
| 5 | ← | | IDENTITY REQUEST | "Identity type" IE is TMSI. |
| 6 | → | | IDENTITY RESPONSE | "Mobile identity" IE specifies the allocated TMSI of the UE. |
| 6a | ← | | IDENTITY REQUEST | "Identity type" IE is IMEI. |
| 6b | → | | IDENTITY RESPONSE | "Mobile identity" IE specifies the IMEI of the UE. |
| 6c | ← | | IDENTITY REQUEST | "Identity type" IE is IMEISV. |
| 6d | → | | IDENTITY RESPONSE | "Mobile identity" IE specifies the IMEISV of the UE. |
| 7 | | SS | | The SS starts ciphering and integrity protection. |
| 8 | | | Void | |
| 9 | ← | | IDENTITY REQUEST | "Identity type" IE is IMEI. |
| 10 | → | | IDENTITY RESPONSE | "Mobile identity" IE specifies the IMEI stored in the UE. |
| 11 | | SS | | The SS releases the RRC connection. |
| 12 | | | Void | |

Specific message contents

None.

9.3.1.5 Test requirement

1) At step 4 the UE shall send its IMSI.
2) At step 6 the UE shall send the TMSI which it was previously allocated.
3) At step 6b and step 10 the UE shall send its IMEI as stored in the UE.
4) At step 6d the UE shall send its IMEISV as stored in the UE.

## 9.3.2 Handling of IMSI shorter than the maximum length

9.3.2.1 Definition

9.3.2.2 Conformance requirement

The UE shall be capable of handling an IMSI that is not of the maximum length.

Reference(s)

TS 24.008 clause 10.5.1.4.

#### 9.3.2.3 Test purpose

To check that the UE behaves correctly when activated with an IMSI of length less than the maximum length.

In this condition, the UE shall:

- perform location updating;
- answer to paging with IMSI;
- give the correct IMSI when asked by an IDENTITY REQUEST;
- attempt CM connection establishment when requested to;
- attempt IMSI detach when needed;
- erase its TMSI when the IMSI is sent by the network in a LOCATION UPDATING ACCEPT or a TMSI REALLOCATION COMMAND message.

#### 9.3.2.4 Method of test

##### Initial conditions

- System Simulator:
  - 1 cell, default values;
  - IMSI attach/detach bit set to "1".
- User Equipment:
  - the UE has no valid TMSI;
  - it is "idle updated";
  - the IMSI has the value 001011234.

##### Related ICS/IXIT statement(s)

On/Off switch - Yes/No.

##### Foreseen final state of UE

The UE has no valid TMSI. It is in "idle, updated".

##### Test Procedure

The UE is paged with its IMSI. The UE shall answer to paging and include the correct IMSI in the PAGING RESPONSE message. During call establishment, the SS asks for the IMSI of the UE. The UE shall answer by an IDENTITY RESPONSE message including the correct IMSI. During the active phase of the call, the SS modifies the scrambling code of DL DPCH. The UE performs call re-establishment. The TMSI REALLOCATION COMMAND including a TMSI is sent to the UE. The UE acknowledges this message. The call is released.

The UE is paged with its TMSI. The UE shall answer to paging and includes its TMSI in the PAGING RESPONSE message. During call establishment, the SS sends a TMSI REALLOCATION COMMAND including the IMSI to the UE. The UE shall acknowledge this message. The UE shall erase its TMSI. The call is released.

The UE is switched off or has its power source removed. The UE performs IMSI detach. The UE shall include the correct IMSI in the IMSI DETACH INDICATION message.

The UE is switched on or powered on. The UE performs IMSI attach. The UE shall include the correct IMSI in the LOCATION UPDATING REQUEST message. A TMSI is allocated to the UE.

The LAC of the cell is changed. The UE performs location updating. The SS includes the IMSI in the LOCATION UPDATING ACCEPT message.

A mobile originated CM connection is attempted. The UE shall include the correct IMSI in the CM SERVICE REQUEST message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>"Initial UE identity" IE contains IMSI of UE.<br>Establishment cause: Terminating Conversational Call. |
| 2 | → | | PAGING RESPONSE | "mobile identity" contains the IMSI of the UE. |
| 3 | ← | | IDENTITY REQUEST | "identity type" IE is IMSI. |
| 4 | → | | IDENTITY RESPONSE | "mobile identity" IE contains the IMSI of the UE. |
| 5 | | | | The call is established using the sequence of the generic terminating call set-up procedure. |
| 6 | | | | The SS modifies the scrambling code of DL DPCH for generating lower layer failure.<br>Cell update procedure for radio link failure is performed |
| 6a | | | Void | |
| 6b | | | Void | |
| 6c | | | Void | |
| 7 | | | Void | |
| 8 | | | Void | |
| 9 | | | Void | |
| 10 | | | Void | |
| 10a | ← | | AUTHENTICATION REQUEST | |
| 10b | → | | AUTHENTICATION RESPONSE | |
| 10c | | SS | | The SS starts integrity protection. |
| 10d | | | Void | |
| 11 | ← | | TMSI REALLOCATION COMMAND | "mobile identity" contains a TMSI. |
| 12 | → | | TMSI REALLOCATION COMPLETE | |
| 13 | | SS | | The SS releases the RRC connection. |
| 14 | | | Void | |
| 15 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>"Initial UE identity" IE contains TMSI of UE.<br>Establishment cause: Terminating Conversational Call. |
| 16 | → | | PAGING RESPONSE | "mobile identity" contains the TMSI of the UE. |
| 17 | ← | | AUTHENTICATION REQUEST | |
| 18 | → | | AUTHENTICATION RESPONSE | |
| 18a | | SS | | The SS starts integrity protection. |
| 18b | | | Void | |
| 19 | ← | | TMSI REALLOCATION COMMAND | "mobile identity" contains a IMSI of UE. |
| 20 | → | | TMSI REALLOCATION COMPLETE | |
| 21 | | SS | | The SS releases the RRC connection. |
| 22 | | | Void | |
| 23 | | UE | | If possible (see ICS) the UE is switched off, otherwise the UE has its power source removed.<br>A Detach Request can be received in PS mode. |
| 24 | | SS | | If the UE was switched off it performs IMSI detach.<br>The SS verifies that the IE "Establishment cause" in the received RRC Connection REQUEST message is set to "Detach". |
| 25 | | | Void | |
| 26 | | | Void | |
| 27 | → | | IMSI DETACH INDICATION | "mobile identity" contains IMSI of UE. |
| 28 | | SS | | The SS releases the RRC connection. |
| 29 | | | Void | |
| 30 | | UE | | The UE is switched on or has power restored.<br>The subsequent GMM attach should be rejected if received in the PS mode |
| 31 | | | Void | |
| 32 | | | Void | |
| 33 | | | Void | |
| 34 | → | | LOCATION UPDATING REQUEST | "mobile identity" contains IMSI of UE. |
| 35 | ← | | LOCATION UPDATING ACCEPT | "mobile identity" contains a TMSI. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 36 | → | | TMSI REALLOCATION COMPLETE | |
| 37 | SS | | | The SS releases the RRC connection. |
| 38 | | | Void | |
| 39 | SS | | | The SS changes the LAC of the cell. |
| 40 | SS | | | The SS verifies that the UE sends RRC Connection REQUEST message within 35s of the LAC being changed. |
| 41 | | | Void | |
| 42 | | | Void | |
| 43 | → | | LOCATION UPDATING REQUEST | "mobile identity" contains TMSI of the UE. |
| 44 | ← | | LOCATION UPDATING ACCEPT | "mobile identity" contains IMSI of the UE. |
| 45 | SS | | | The SS releases the RRC connection. |
| 46 | | | Void | |
| 47 | UE | | | a mobile originated CM connection is attempted. |
| 48 | | | Void | |
| 49 | | | Void | |
| 50 | | | Void | |
| 51 | → | | CM SERVICE REQUEST | "mobile identity" contains IMSI of the UE. |
| 52 | SS | | | The SS releases the RRC connection. |
| 53 | | | Void | |

Specific message contents

None.

#### 9.3.2.5 Test requirement

At step 2 the UE shall answer to paging with IMSI.

At step 4 the UE shall answer to the SS with the correct IMSI in an IDENTITY RESPONSE message.

At step 19 the IMSI is sent by the network in a TMSI REALLOCATION COMMAND message, at step 27 the UE shall attempt IMSI detach.

At step 34 the UE shall perform location updating.

At step 44 the IMSI is sent by the network in a LOCATION UPDATING ACCEPT message, at step 51 the UE shall attempt CM connection establishment and include the correct IMSI in the CM SERVICE REQUEST message.

## 9.4 Location updating

This procedure is used to register the UE in the network. If it is not performed correctly, no call can be established.

### 9.4.1 Location updating / accepted

#### 9.4.1.1 Definition

#### 9.4.1.2 Conformance requirement

1.

1.1 if the network accepts a location updating from the UE and reallocates a TMSI in the LOCATION UPDATING ACCEPT message the UE shall acknowledge the reception of the new TMSI;

1.2 the UE shall answer to paging with this TMSI and include it in a PAGING RESPONSE message.

2 If the network accepts a location updating from the UE and the LOCATION UPDATING ACCEPT message contains neither TMSI nor IMSI, the UE shall answer to paging when addressed with the last allocated TMSI and include it in the PAGING RESPONSE message.

3.

3.1 if the network accepts a location updating from the UE by use of a LOCATION UPDATING ACCEPT message containing the IMSI of the UE, the UE shall not answer paging with the last allocated TMSI;

3.2 the UE shall still answer paging with IMSI.

Reference(s)

TS 24.008 clause 4.4.4.6.

#### 9.4.1.3 Test purpose

1) To test the behaviour of the UE if the network accepts the location updating of the UE.

For the network response three different cases are identified:

1.1) TMSI is allocated;

1.2) location updating accept contains neither TMSI nor IMSI;

1.3) location updating accept contains IMSI.

#### 9.4.1.4 Method of test

Initial conditions:

- System Simulator:
  - two cells, A and B, belonging to different location areas with location area identification a and b of the same PLMN;
  - IMSI attach/detach is allowed in both cells;
  - the T3212 time-out value is 1/10 hour in both cells.
- User Equipment:
  - the UE has a valid TMSI (=TMSI1) and CKSN (=CKSN1). It is "idle updated" on cell A.

Related ICS/IXIT statement(s)

None.

Test Procedure

The UE is made to select cell B. A normal location updating with TMSI reallocation is performed in cell B. The RRC CONNECTION is released. The SS checks, by paging, that the UE has stored the newly allocated TMSI. The RRC CONNECTION is released. The UE is made to select cell A. A normal location updating is performed in cell A. The LOCATION UPDATING ACCEPT message contains neither IMSI nor TMSI. The SS checks, by paging, that the UE has kept the old TMSI. The RRC CONNECTION is released. The UE is made to select cell B. A normal location updating is performed in cell B. The LOCATION UPDATING ACCEPT message contains an IMSI. The SS checks, by paging, that the UE has deleted its TMSI and responds to paging with IMSI.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the "non-suitable cell".<br>(see note) |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to: Registration.<br>If PS mode: a routing area updating procedure should be performed. |
| 3 | | | Void | |
| 4 | | | Void | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 5 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = CKSN1, "location area identification" = a, "mobile station classmark 1" as given by the ICS and "mobile identity" = TMSI1. The MM message is included in the RRC messagge INITIAL DIRECT TRANSFER with the CN domain identity set to CS domain. |
| 5a | | SS | | The SS starts integrity protection. |
| 5b | | | Void | |
| 6 | ← | | LOCATION UPDATING ACCEPT | "Mobile identity" = new TMSI (=TMSI2), LAI = b. |
| 7 | → | | TMSI REALLOCATION COMPLETE | |
| 8 | | SS | | |
| 9 | | | Void | |
| 9a | | | | SS waits 5 seconds to guarantee that the UE is in service. |
| 10 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>"Initial UE identity" IE contains the new TMSI (= TMSI2) and the new LAI (=b).<br>Establishment Cause: Terminating Conversational Call. |
| 11 | → | | PAGING RESPONSE | "Mobile identity" IE contains the new TMSI (= TMSI2). |
| 12 | | SS | | The SS releases the RRC Connection. |
| 13 | | | Void | |
| 14 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "non-suitable cell".<br>(see note) |
| 15 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC Connection REQUEST message is set to "Registration".<br>If PS mode: a routing area updating procedure should be performed. |
| 16 | | | Void | |
| 17 | | | Void | |
| 18a | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = CKSN1, "location area identification" = b, "mobile station classmark 1" as given by the ICS and "mobile identity" = TMSI2. |
| 18b | | SS | | The SS starts integrity protection. |
| 18c | | | Void | |
| 19 | ← | | LOCATION UPDATING ACCEPT | "Mobile identity" IE not included. LAI = a |
| 20 | | SS | | |
| 21 | | | Void | The SS releases the RRC connection and waits 5 s to guarantee that the UE is in service. |
| 22 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.12.2<br>"Initial UE identity" IE contains the TMSI (= TMSI2) and LAI (=a).<br>Establishment Cause: Terminating Conversational Call. |
| 23 | → | | PAGING RESPONSE | "Mobile identity" IE contains the TMSI (=TMSI2). |
| 24 | | SS | | The SS releases the RRC connection. |
| 25 | | | Void | |
| 26 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the "non-suitable cell".<br>(see note) |
| 27 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST is set to "Registration".<br>If PS mode: a routing area updating procedure should be performed. |
| 28 | | | Void | |
| 29 | | | Void | |
| 30a | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = CKSN1, "location area identification" = a, "mobile station classmark 1" as given by the ICS and "mobile identity" = TMSI2. |
| 30b | | SS | | The SS starts integrity protection. |
| 30c | | | Void | |
| 31 | ← | | LOCATION UPDATING ACCEPT | "Mobile identity" IE contains IMSI and LAI (=b). |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 32 | | SS | | |
| 33 | | | Void | The SS waits 5 s to guarantee that the UE is in service. |
| 34 | ← | | PAGING TYPE 1 | "UE identity" IE contains the old TMSI (= TMSI2).<br>Paging Cause: Terminating Conversational Call. |
| 35 | UE | | | The UE shall ignore this message. This is checked during 5 s. |
| 36 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>The PagingType1 message sent from the SS should have the “Initial UE identity” IE containing the IMSI.<br>Establishment Cause: Terminating Conversational Call. |
| 37 | → | | PAGING RESPONSE | "Mobile identity" IE contains the IMSI. |
| 38 | | SS | | The SS releases the RRC connection. |
| 39 | | | Void | |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 9.4.1.5 Test requirement

At step 7 the UE shall acknowledge the reception of the new TMSI (TMSI2).

At step 11 the UE shall answer to paging with this TMSI (TMSI2).

At step 23 the UE shall answer to paging with the last allocated TMSI (TMSI2).

At step 35 the UE shall not answer paging with the last allocated TMSI, but at step 37 the UE shall still answer paging with IMSI.

## 9.4.2 Location updating / rejected

### 9.4.2.1 Location updating / rejected / IMSI invalid

#### 9.4.2.1.1 Definition

#### 9.4.2.1.2 Conformance requirement

1) If the network rejects a location updating from the UE with the cause "IMSI unknown in HLR", "Illegal MS" or "Illegal ME" the UE shall:

   1.1 not perform normal location updating;

   1.2 not perform periodic location updating;

   1.3 not respond to paging with IMSI;

   1.4 not respond to paging with TMSI;

   1.5 reject any request from CM entity for MM connection other than for emergency call;

   1.6 not perform IMSI detach if it is switched off or has its power source removed.

2) If the network rejects a location updating from the UE with the cause "IMSI unknown in HLR", "Illegal MS" or "Illegal ME" the UE, if it supports emergency speech call, shall accept a request for an emergency call by sending a RRC CONNECTION Request message with the establishment cause set to "emergency call" and include an IMEI as mobile identity in the CM SERVICE REQUEST message.

3) If the network rejects a location updating from the UE with the cause "IMSI unknown in HLR", "Illegal MS" or "Illegal ME" the UE shall delete the stored LAI, CKSN and TMSI.

Reference(s)

TS 24.008 clause 4.4.4.7.

#### 9.4.2.1.3 Test purpose

To test the behaviour of the UE if the network rejects the location updating of the UE with the cause "IMSI unknown in HLR", "illegal MS" or "Illegal ME".

#### 9.4.2.1.4 Method of test

Initial conditions

- System Simulator:
  - two cells: A and B, belonging to different location areas of the same PLMN;
  - IMSI attach/detach is allowed in both cells;
  - the T3212 time-out value is 1/10 hour in both cells.
- User Equipment:
  - the UE has valid TMSI(= TMSI1), CKSN and CK, IK. It is "idle updated" on cell A.

Related ICS/IXIT statement(s)

USIM removal possible while the UE is powered Yes/No.

Switch off on button Yes/No.

Support for emergency speech call Yes/No.

Test Procedure

The SS rejects a normal location updating with the cause value "IMSI unknown in HLR". The RRC CONNECTION is released. The SS checks that the UE has entered the state MM IDLE and the substate NO IMSI, i.e. does not perform normal location updating when a new cell of the same or another PLMN is entered, does not perform periodic updating, does not respond to paging, rejects any requests from CM entities except emergency calls, does not perform IMSI detach if it is switched off or has its power source removed and deletes the stored LAI, CKSN and TMSI.

The test is repeated with cause value "Illegal MS" and with cause value "Illegal ME".

Expected sequence

The sequence is executed for execution counter k = 1, 2, 3.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell B. |
| 1 | | SS | | Set the cell type of cell B to the "Serving cell". Set the cell type of cell A to the "non-suitable cell". (see note) |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST is set to "Registration". If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with cause “GPRS services not allowed” when LOCATION UPDATING REJECT is sent with cause “IMSI unknown in HLR”. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "LAI" = a, "Mobile Identity" = TMSI1 |
| 6 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "IMSI unknown in HLR" for k = 1, "Illegal MS" for k = 2, "Illegal ME" for k = 3. |
| 7 | | SS | | The SS releases the RRC Connection. |
| 8 | | | Void | |
| | | | | The following messages are sent and shall be received on cell A. |
| 9 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "non-suitable cell". (see note) |
| 10 | | UE | | The UE performs cell reselection according to procedure as specified in (this however is not checked until step 23). The UE shall not initiate an RRC connection establishment on cell A or on cell B. |
| 11 | | SS | | The SS waits at least 7 minutes for a possible periodic updating. |
| 12 | | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. |
| 13 | ← | | PAGING TYPE 1 | The UE is paged in cell A. "UE identity" IE contains IMSI. Paging Cause: Terminating Conversational Call. |
| 14 | | UE | | The UE shall ignore this message. This is verified during 3 s. |
| 15 | ← | | PAGING TYPE 1 | The UE is paged in cell A. "UE identity" IE contains TMSI. Paging Cause: Terminating Conversational Call. |
| 16 | | UE | | The UE shall ignore this message. This is verified during 3 s. |
| 17 | | UE | | A MO CM connection is attempted. |
| 18 | | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. This is checked during 30 s. |
| 19 | | UE | | If the UE supports emergency speech call (see ICS), it is made to perform an emergency call. |
| 20 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUESTis set to "Emergency call". |
| This message is sent in cell A. | | | | |
| 21 | | | Void | |
| 22 | | | Void | |
| 23 | → | | CM SERVICE REQUEST | "CM service type": Emergency call establishment. "Mobile identity": type of identity is set to IMEI. |
| 24 | ← | | CM SERVICE ACCEPT | |
| 25 | → | | EMERGENCY SETUP | |
| 26 | ← | | RELEASE COMPLETE | "Cause" = unassigned number. |
| 27 | | SS | | The SS releases the RRC connection. |
| 28 | | | Void | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 29 | UE | | | If possible (see ICS) USIM detachment is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 30 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. This is checked during 3 s. |
| 31 | UE | | | Depending on what has been performed in step 29 the UE is brought back to operation. The subsequent GMM attach should be rejected if received in the PS mode. |
| 32 | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST is set to "Registration". |
| 33 | | | Void | |
| 34 | | | Void | |
| 35 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = no key available, "mobile station classmark 1" as given by the ICS, "Mobile Identity" = IMSI, "LAI" = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE). |
| 36 | ← | | AUTHENTICATION REQUEST | Assign a CKSN |
| 37 | → | | AUTHENTICATION RESPONSE | |
| 37a | SS | | | The SS starts integrity protection. |
| 38 | ← | | LOCATION UPDATING ACCEPT | "Mobile Identity" = TMSI. |
| 39 | → | | TMSI REALLOCATION COMPLETE | |
| 40 | SS | | | The SS releases the RRC connection. |
| 41 | | | Void | |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 9.4.2.1.5 Test requirement

1) 1.1 At step 10 the UE shall not perform normal location updating.

   1.2 At step 12 the UE shall not perform periodic location updating.

   1.3 At step 14 the UE shall not respond to paging with IMSI.

   1.4 At step 16 the UE shall not respond to paging with TMSI.

   1.5 At step 18 the UE shall reject a MO CM connection.

   1.6 At step 30 the UE shall not initiate an RRC connection establishment on cell A or on cell B.

2) At step 20 the UE shall accept a request for an emergency call with the establishment cause set to "Emergency call".

3) At step 35 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the LAI IE set to "deleted LAI" on cell A.

### 9.4.2.2 Location updating / rejected / PLMN not allowed

#### 9.4.2.2.1 Definition

#### 9.4.2.2.2 Conformance requirement

1) If the network reject a location updating from the UE with the cause "PLMN not allowed" the UE shall:

   1.1 not perform periodic updating;

1.2 not perform IMSI detach when switched off;

1.3 not perform IMSI attach when switched on in the same location area;

1.4 not perform normal location updating when in the same PLMN and when that PLMN is not selected manually;

1.5 reject any request from CM entity for MM connection other than for emergency call.

2) If the network rejects a location updating from the UE with the cause "PLMN not allowed" the UE shall:

2.1 perform normal location updating when a new PLMN is entered;

2.2 accept a request for an emergency call, if it supports emergency speech call h, by sending a RRC CONNECTION REQUEST message with the establishment cause set to "emergency call".

3) If the network rejects a location updating from the UE with the cause "PLMN not allowed" and if after that the PLMN from which this rejection was received, is manually selected, the UE shall perform a normal location updating procedure.

4) If the network rejects a location updating from the UE with the cause "PLMN not allowed" the UE shall delete the stored LAI, CKSN and TMSI.

Reference(s)

TS 24.008 clause 4.4.4.7.

#### 9.4.2.2.3 Test purpose

To test the behaviour of the UE if the network rejects the location updating of the UE with the cause "PLMN not allowed".

#### 9.4.2.2.4 Method of test

Proc 1: Test procedure 1: Location updating / rejected / PLMN not allowed / test 1

Initial conditions

- System Simulator:
  - one cell: C, belonging to PLMN1;
  - two cells: A and B, belonging to different location areas a and b and belonging to PLMN2. PLMN2 is different from HPLMN and from PLMN1;
  - IMSI attach/detach is allowed in cells A and B but not in cell C;
  - the T3212 time-out value is 1/10 hour in cells A and B.

  NB: i) Cell C will be mapped to Cell 1 as found in TS 34.108 clause 6.1.4.1.

  ii) Cell A and B will be mapped to Cell 4 and 5 respectively, as found in TS 34.108 clause 6.1.4.1.
- User Equipment:
  - the UE has a valid TMSI(= TMSI1) and CKSN(= CKSN1). It is "idle updated" on cell C;
  - the UE is in manual mode for PLMN selection.

Related ICS/IXIT statement(s)

USIM removal possible while the UE is powered Yes/No.

Switch off on button Yes/No.

The UE is automatically in automatic mode after switch on Yes/No.

Support for emergency speech call Yes/No.

Test Procedure

The SS rejects a normal location updating with the cause value "PLMN not allowed". The RRC CONNECTION is released. The SS checks that the UE does not perform periodic updating, does not perform IMSI detach, does not perform IMSI attach if activated in the same location area, rejects any request for CM connection establishment other than emergency call, accepts a request for an emergency call, performs normal location updating only when a new PLMN is entered and deletes the stored LAI, CKSN and TMSI.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell B. |
| 1 | UE | | | The UE is switched off (or power is removed). A Detach Request can be received in PS mode. |
| 2 | SS | | | Set the cell type of cell B to the "Serving cell". Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell C to the "non-suitable cell". (see note) |
| 3 | UE | | | The UE is switched on. (or power is reapplied) If necessary the UE is put in manual selection mode. The UE shall offer the new PLMN as available to the user. The PLMN is manually selected. |
| 4 | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". The subsequent GMM attach should be rejected if received in the PS mode. |
| 5 | | | Void | |
| 6 | | | Void | |
| 7 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal |
| 8 | ← | | LOCATION UPDATING REJECT | "Reject cause" = PLMN not allowed. |
| 9 | SS | | | The SS releases the RRC connection. |
| 10 | | | Void | |
| 11 | SS | | | The SS waits for a possible periodic updating for 7 minutes. |
| 12 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. |
| 13 | UE | | | If possible (see ICS) USIM detachment is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 14 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. This is checked during 3 s. |
| 15 | UE | | | Depending on what has been performed in step 13 the UE is brought back to operation. The UE is not made to select PLMN 2. |
| 16 | UE | | | The UE shall not initiate an RRC connection establishment. This is checked during 3 s. |
| | | | | The following message are sent and shall be received on cell A. |
| 17 | SS | | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 18 | UE | | | No access to the network shall be registered by the SS within one minute. |
| 19 | UE | | | If the UE supports emergency speech call (see ICS) it is made to perform an emergency. |
| 20 | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Emergency Call". |
| 21 | | | Void | |
| 22 | | | Void | |
| 23 | → | | CM SERVICE REQUEST | "CM service type" = Emergency call establishment. |

| Step | Direction | Message | Comments |
|---|---|---|---|
| | UE \| SS | | |
| 24 | ← | CM SERVICE ACCEPT | |
| 25 | → | EMERGENCY SETUP | |
| 26 | ← | RELEASE COMPLETE | Cause IE: "unassigned number". |
| 27 | SS | | The SS releases the RRC connection. |
| 28 | | Void | |
| 29 | UE | | A MO CM connection is attempted. |
| 30 | UE | | The UE shall not initiate an RRC connection establishment. This is checked during 30 s. |
| | | | The following messages are sent and shall be received on cell C. |
| 31 | UE | | The UE is switched off. |
| 32 | SS | | Set the cell type of cell C to the "Serving cell".<br>Set the cell type of cell A to the "non-suitable cell".<br>Set the cell type of cell B to the "non-suitable cell".<br>(see note) |
| 33 | UE | | The UE is switched on. If necessary the UE is placed into the automatic mode. |
| 34 | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST is set to "Registration". |
| 35 | | Void | |
| 36 | | Void | |
| 37 | → | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = no key available, "LAI" = deleted LAI (the MCC and MNC hold the values of PLMN1, the LAC is coded FFFE) "mobile identity" = IMSI. |
| 37a | ← | AUTHENTICATION REQUEST | |
| 37b | → | AUTHENTICATION RESPONSE | |
| 37c | SS | | The SS starts integrity protection. |
| 38 | ← | LOCATION UPDATING ACCEPT | "Mobile identity" = TMSI. |
| 39 | → | TMSI REALLOCATION COMPLETE | |
| 40 | SS | | The SS releases the RRC connection. |
| 41 | | Void | |
| NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents:

None.

Proc 2: Test procedure 2: Location updating / rejected / PLMN not allowed / test 2

Initial conditions

- System Simulator:
  - one cell C, belonging to PLMN1;
  - two cells A and B, belonging to different location areas a and b and belonging to PLMN2. PLMN2 is different from HPLMN;
  - IMSI attach/detach is allowed in cells A and B but not in cell C;
  - the T3212 time-out value is 1/10 hour in cells A and B.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated" on cell C.

  NB: i) Cell C will be mapped to Cell 1 as found in TS 34.108 clause 6.1.4.1.

  ii) Cell A and B will be mapped to Cell 4 and 5 respectively, as found in TS 34.108 clause 6.1.4.1.

Related ICS/IXIT statement(s)

USIM removal possible while UE is powered Yes/No.

Switch off on button Yes/No.

The UE is automatically in automatic mode after switch on Yes/No.

Test Procedure

The SS rejects a normal location updating with the cause value "PLMN not allowed". The RRC CONNECTION is released. Then the PLMN from which this rejection was received is manually selected and the SS checks that a normal location updating is performed.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell B. |
| 1 | UE | | | The UE is switched off (or power is removed). A Detach Request can be received in PS mode. |
| 2 | SS | | | Set the cell type of cell B to the "Serving cell". Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell C to the "non-suitable cell". (see note) |
| 3 | UE | | | The UE is switched on (or power is reapplied). |
| 3a | UE | | | If the UE is in manual mode, it shall offer the new PLMN as available to the user. In this case the PLMN is manually selected. |
| 4 | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". The subsequent GMM attach should be rejected if received in the PS mode. |
| 5 | | | Void | |
| 6 | | | Void | |
| 7 | → | | LOCATION UPDATING REQUEST | |
| 8 | ← | | LOCATION UPDATING REJECT | "Reject cause" = PLMN not allowed. |
| 9 | SS | | Void | The SS releases the RRC connection. |
| 10 | | | Void | |
| 11 | UE | | | The UE is made to search for PLMNs and the PLMN indicated by the SS is manually selected. |
| 12 | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 13 | | | Void | |
| 14 | | | Void | |
| 15 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = no key available, "LAI" = deleted LAI (the MCC and MNC hold the values of PLMN1, the LAC is coded FFFE) "mobile identity" = IMSI. |
| 15a | Void | | | |
| 15b | ← | | LOCATION UPDATING REJECT | "Reject cause" = PLMN not allowed. |
| 16 | SS | | | The SS releases the RRC connection. |
| 17 | | | Void | |
| The following messages are sent and shall be received on cell C. | | | | |
| 18 | UE | | | The UE is switched off. |
| 19 | SS | | | Set the cell type of cell C to the "Serving cell". Set the cell type of cell A to the "non-suitable cell". Set the cell type of cell B to the "non-suitable cell". (see note) |
| 20 | UE | | | The UE is switched on. If necessary, the UE is put into the automatic mode. |
| 21 | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 22 | | | Void | |
| 23 | | | Void | |
| 24 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = no key available, "LAI" = deleted LAI (the MCC and MNC hold the values of PLMN1, the LAC is coded FFFE) "mobile identity" = IMSI. |
| 24a | ← | | AUTHENTICATION REQUEST | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 24b | → | | AUTHENTICATION RESPONSE | |
| 24c | | SS | | The SS starts integrity protection. |
| 25 | ← | | LOCATION UPDATING ACCEPT | "Mobile identity" = TMSI. |
| 26 | → | | TMSI REALLOCATION COMPLETE | |
| 27 | | SS | | The SS releases the RRC connection. |
| 28 | | | Void | |
| NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 9.4.2.2.5 Test requirement

1) 1.1 At step 12 in test 1 the UE shall not perform periodic updating.

   1.2 At step 14 in test 1 the UE shall not initiate an RRC connection establishment (IMSI detach).

   1.3 At step 16 in test 1 the UE shall not initiate an RRC connection establishment (IMSI attach).

   1.4 At step 16 in test 1 the UE shall not perform normal location updating.

   1.5 At step 30 in test 1 the UE shall reject a MO CM connection.

2) 2.1 At step 37 in test 1 the UE shall perform normal location updating.

   2.2 At step 20 in test 1 the UE shall accept a request for an emergency call with the establishment cause set to "Emergency call".

3) At step 11 in test 2 the UE is made to search for PLMNs and the PLMN indicated by the SS is manually selected, and at step 15 the UE shall perform a normal location updating procedure.

4) At step 37 in test 1 the UE shall send a LOCATION UPDATING REQUEST message with Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and LAI IE set to "deleted LAI" on cell C.

### 9.4.2.3 Location updating / rejected / location area not allowed

#### 9.4.2.3.1 Definition

#### 9.4.2.3.2 Conformance requirement

1) If the network rejects a location updating from the UE with the cause "Location Area not allowed" the UE shall:

   1.1 not perform periodic updating;

   1.2 not respond to paging with TMSI;

   1.3 reject any request from CM entity for MM connection other than for emergency call;

   1.4 not perform IMSI detach.

   1.5 not delete the list of "equivalent PLMNs".

2) If the network rejects a location updating from the UE with the cause "Location Area not allowed" the UE shall:

   2.1 perform normal location updating when a new location area is entered;

   2.2 accept a request for an emergency call, if it supports emergency speech call h, by sending a RRC CONNECTION REQUEST message with the establishment cause set to "emergency call";

   2.3 delete the list of forbidden LAs after switch off (power off).

3) If the network rejects a location updating from the UE with the cause "Location Area not allowed" the UE shall delete the stored LAI, CKSN and TMSI.

Reference(s)

TS 24.008 clause 4.4.4.7.

9.4.2.3.3 Test purpose

To test the behaviour of the UE if the network rejects the location updating of the UE with the cause "Location Area not allowed".

To test that the UE deletes the list of forbidden LAs after switch off (power off).

9.4.2.3.4 Method of test

Initial conditions

- System Simulator:
  - three cells: A, B and C, belonging to different location areas a, b and c. Cell A and B belongs to PLMN1. Cell C belongs to PLMN2.
  - IMSI attach/detach is allowed in both cells;
  - the T3212 time-out value is 1/10 hour in both cells;
  - Sintersearch values for cells A and B are 20 dB.

  NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.
- User Equipment:
  - the UE has a valid TMSI(= TMSI1) and CKSN(= CKSN1). It is "idle updated" on cell A.
  - the UE has a list of "equivalent PLMNs" containing PLMN1 and PLMN2.

Related ICS/IXIT statement(s)

Switch off on button Yes/No.

Support for emergency speech call Yes/No.

Method to clear the list of forbidden location areas periodically.

Test Procedure

The SS rejects a normal location updating with the cause value "Location Area not allowed". The RRC CONNECTION is released. The SS checks that the UE deletes the stored LAI, CKSN and TMSI, does not perform periodic updating, does not respond to paging with TMSI, rejects any requests from CM entities for MM-connections except emergency calls, does not perform IMSI detach, does not delete the list of "equivalent PLMNs", performs normal location updating when a new location area is entered, deletes the list of forbidden LAs when switched off.

Different types of UE may use different methods to periodically clear the list of forbidden location areas (e.g. every day at 12am). If the list is cleared while the test is being run, it may be necessary to re-run the test.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell B. |
| 1 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the " Suitable neighbour cell ".<br>Set the cell type of cell C to the " Suitable neighbour cell ".<br>(see note). |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = CKSN1, "LAI" = a, "Mobile Identity" = TMSI1 |
| 6 | ← | | LOCATION UPDATING REJECT | "Reject cause" = "Location Area not allowed". |
| 7 | | SS | | After the sending of this message, the SS waits for the disconnection of the mainsignalling link. The SS releases the RRC connection. |
| 8 | | | Void | |
| 9 | | SS | | SS waits for a possible location updating for 7 minutes. |
| 10 | | UE | | The UE shall not initiate an RRC-connection establishment either on cell A, C or cell B. |
| 11 | ← | | PAGING TYPE 1 | The UE is paged in cell B. "UE identity" = TMSI.<br>Paging Cause: Terminating Conversational Call. |
| 12 | | UE | | The UE shall ignore this message. This is checked during 30 s. |
| 13 | | UE | | A MO CM connection is attempted. |
| 14 | | UE | | The UE shall not initiate an RRC connection establishment on cell A, C or cell B. This is checked during 30 s. |
| 15 | | UE | | If the UE supports emergency speech call (see ICS), it is made to perform an emergency call. |
| 16 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Emergency call". |
| 17 | | | Void | |
| 18 | | | Void | |
| 19 | → | | CM SERVICE REQUEST | "CM service type": Emergency call establishment. |
| 20 | ← | | CM SERVICE ACCEPT | |
| 21 | → | | EMERGENCY SETUP | |
| 22 | ← | | RELEASE COMPLETE | Cause: "unassigned number". |
| 23 | | SS | | The SS releases the RRC connection. |
| 24 | | | Void | |
| 25 | | UE | | If possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 26 | | UE | | The UE shall not initiate an RRC connection establishment on cell A, C or on cell B (check for IMSI detach) This is checked during 3 s. |
| 27 | | UE | | Depending on what has been performed in step 25 the UE is brought back to operation.<br>The subsequent GMM attach should be rejected if received in the PS mode with the same cause as used in the LOCATION UPDATING REJECT. |
| 28 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 29 | | | Void | |
| 30 | | | Void | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 31 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = no key available,"LAI" = deleted LAI, "mobile identity" = IMSI (This checks the deletion of the forbidden lists) |
| 32 | ← | | LOCATION UPDATING REJECT | "Reject cause" = "Location Area not allowed". |
| 33 | | SS | | The SS releases the RRC connection. |
| 34 | | | Void | |
| The following messages are sent and shall be received on cell C. | | | | |
| 35 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell B to the " Suitable neighbour cell ". Set the cell type of cell C to the "Serving cell". (see note). |
| 36 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 37 | | | Void | |
| 38 | | | Void | |
| 39 | → | | LOCATION UPDATING REQUEST | |
| 40 | ← | | AUTHENTICATION REQUEST | |
| 41 | → | | AUTHENTICATION RESPONSE | |
| 41a | | SS | | The SS starts integrity protection. |
| 42 | ← | | LOCATION UPDATING ACCEPT | Mobile identity = TMSI. |
| 43 | → | | TMSI REALLOCATION COMPLETE | |
| 44 | | SS | | The SS releases the RRC connection. |
| 45 | | | Void | |
| NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

9.4.2.3.5 Test requirement

1) 1.1 At step 10 the UE shall not perform periodic updating.

   1.2 At step 12 the UE shall not respond to paging with TMSI.

   1.3 At step 14 the UE shall not initiate an RRC connection establishment.

   1.4 At step 26 the UE shall not initiate an RRC connection establishment (IMSI detach).

   1.5 At step 39 the UE shall perform normal location updating on cell C.

2) 2.1 At step 39 the UE shall perform normal location updating.

   2.2 At step 16 the UE shall accept a request for an emergency call.

   2.3 At step 31 the UE shall send a LOCATION UPDATING REQUEST message on cell B.

3) At step 31 the UE shall send a LOCATION UPDATING REQUEST message with Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and LAI IE set to "deleted LAI" on cell B.

## 9.4.2.4 Location updating / rejected / roaming not allowed in this location area

9.4.2.4.1 Definition

9.4.2.4.2 Conformance requirement

1) If the network rejects a location updating from the UE with the cause "Roaming not allowed in this location area" the UE shall:

   1.1 not perform periodic updating;

1.2 void;

1.3 reject any request from CM entity for MM connection other than for emergency call;

1.4 not perform IMSI detach.

2) If the network rejects a location updating from the UE with the cause "Roaming not allowed in this location area" the UE shall:

2.1 perform normal location updating when a new location area is entered;

2.2 accept a request for an emergency call, if it supports emergency speech call, by sending a RRC CONNECTION Request message with the establishment cause set to "emergency call";

2.3 periodically search for its HPLMN.

3) The UE shall reset the list of "Forbidden location areas for roaming" when it is switched off or has its power source removed or when the USIM is removed.

4) The UE shall contain a list of "forbidden location areas for roaming". The location area identification received on the BCCH that triggered the location updating request shall be added to the suitable list whenever a LOCATION UPDATE REJECT message is received with the cause "Roaming not allowed in this location area". The lists shall accommodate each 10 or more location area identifications.

Reference(s)

TS 24.008 clause 4.4.4.7.

#### 9.4.2.4.3 Test purposes

Test purpose 1

To test that on receipt of a rejection using the Roaming cause code, the UE ceases trying to update on that cell, that this situation continues for at least one periodic location interval period, and that the corresponding list is re-set by switching off the UE or removing its power source.

Test purpose 2

To test that if no cell is available, the UE rejects a request from CM entity other than for emergency calls.

Test purpose 3

To test that at least 6 entries can be held in the list of "forbidden location areas for roaming" (the requirement in is to store at least 10 entries. This is not fully tested by the third procedure).

Test purpose 4

To test that if a cell of the Home PLMN is available then the UE returns to it in preference to any other available cell.

Test purpose 5

To test that if the USIM is removed the list of "forbidden location areas for roaming" is cleared.

#### 9.4.2.4.4 Method of test

Initial conditions

The initial conditions shall be met before each of the different procedures.

- System Simulator:
  - for procedures 1, 2, 3 and 5: Two cells A and B, belonging to different location areas of the same PLMN with LAI a and b. The MCC of that PLMN is the same as that of the HPLMN. The MNC of that PLMN is different from that of the HPLMN. For procedure 2, Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1 and Qqualmin values for cells A and B are -16 dB (FDD only);

- for procedure 4: three cells A, B, C of the same PLMN which is not the HPLMN with 3 different location area codes. Cells should differ in signal strength by 10 dB with cell A being the strongest and cell C the weakest. There should be a 20 dB range between A and C. A should be set to a level of - 40 dBm;

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

- IMSI attach/detach is allowed in every cell;
- the T3212 time-out value is 1/10 hour in every cell,

- User Equipment:
  - procedures 1, 2, 3 and 5: The UE has valid TMSI, CKSN and CK, IK. It is "idle updated" on cell B;
  - procedure 4: The UE has valid TMSI, CKSN and CK, IK. It is "idle updated" on cell A;
  - the list of "forbidden location areas for roaming" shall be empty (this may be achieved by either removing the USIM or switching the UE OFF then ON or removing the UE power source depending on ICS).

Related ICS/IXIT statement(s)

USIM removal possible while UE is powered Yes/No.

Switch off on button Yes/No.

Support of emergency speech call Yes/No.

Method to clear the list of location areas for roaming periodically.

The UE is automatically in automatic mode after switch on Yes/No.

#### 9.4.2.4.4.1 Test Procedures

Proc 1: Test procedure 1

- The SS rejects a normal location updating with the cause value "Roaming not allowed in this location area". The RRC CONNECTION is released. The SS checks that the UE does not perform periodic location updating procedure. The UE is turned off and then on. The SS checks that the UE performs location updating on the cell on which its location update request had been rejected (this checks that the LA is not the forbidden list after switch on). This procedure is performed another time but the deletion of the list is checked while removing the USIM (instead of turning off the UE).

Proc 2: Test procedure 2

- The SS rejects a normal location updating with the cause value "Roaming not allowed in this location area". The RRC CONNECTION is released. The SS checks that the UE rejects a request from CM entity but supports an emergency call.

Proc 3: Test procedure 3

- The SS rejects a normal location updating with the cause value "Roaming not allowed in this location area". This is done for 6 different location areas. Then the SS checks that the UE does not attempt to begin a location updating procedure on the non-allowed location areas.

Proc 4: Test procedure 4

- The SS accepts a periodic location updating on a cell not belonging to the HPLMN. Then when the UE attempts to perform a periodic location updating to this cell, the SS rejects this location updating with the cause value "Roaming not allowed in this location area". Three cells are then available, one of them belonging to the HPLMN. It is checked that the UE returns to its HPLMN.

Proc 5: Test procedure 5

If USIM removal is possible while UE is powered:

- The SS rejects a normal location updating with the cause value "Roaming not allowed in this location area". The RRC CONNECTION is released. The SS checks that the UE does not perform periodic location updating

procedure. The USIM is removed and inserted in the UE. The SS checks that the UE performs location updating on the cell on which its location update request had been rejected (this checks that the LA is not the forbidden list after switch on).

Different types of UE may use different methods to periodically clear the list of forbidden areas (e.g. every day at 12am) for roaming. If the list is cleared while the test is being run, it may be necessary to re-run the test.

Expected sequence

The following procedure is used during the test:

- change_LAI (x):
  - the purpose of this procedure is to change the value of Location Area Identifier of cell x;
  - the Location Area Identifier of cell x shall be changed. The code shall be chosen arbitrarily but shall be different from any previously used in this procedure. The code shall have the same MCC as the Home PLMN and shall not have the same MNC as the Home PLMN.

Procedure 1

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "non-suitable cell". (see note). |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | Location Updating Type = normal. |
| 6 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 7 | | SS | | The SS releases the RRC connection |
| 8 | | | Void | |
| 9 | | SS | | The SS waits at least 7 minutes for a possible location updating. |
| 10 | | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. |
| 11 | | UE | | If possible (see ICS) the UE is switched off. Otherwise if possible the power is removed. |
| 12 | | UE | | Depending on what has been performed in step 11 the UE is brought back to operation and placed in an automatic mode. The subsequent GMM attach should be rejected if received in the PS mode. |
| 13 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 14 | | | Void | |
| 15 | | | Void | |
| 16 | → | | LOCATION UPDATING REQUEST | Location Updating Type = normal. |
| 16a | | SS | | The SS starts integrity protection. |
| 17 | ← | | LOCATION UPDATING ACCEPT | "Mobile Identity" not IE included. |
| 18 | | SS | | The SS releases the RRC connection. |
| 19 | | | Void | |

NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".

Procedure 2

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the “Suitable neighbour inter-frequency cell”.<br>(see note). |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>This message is sent on cell A.<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | |
| 6 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 7 | | SS | | The SS releases the RRC connection. |
| 8 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the “Suitable neighbour inter-frequency cell”.<br>(see note). |
| | | | | The following messages are sent and shall be received on cell B. |
| 9 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 10 | | | Void | |
| 11 | | | Void | |
| 12 | → | | LOCATION UPDATING REQUEST | |
| 13 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 14 | | SS | | The SS releases the RRC connection. |
| 15 | | | Void | |
| 16 | | SS | | The SS waits for a possible location updating procedure on both cells A and B for 2 minutes. |
| 17 | | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B within 2 minutes after the end of step 15. |
| 18 | | | Void | |
| 19 | | | Void | |
| 20 | | UE | | A MO CM connection is attempted. |
| 21 | | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. This is checked during 30 s. |
| The following messages are sent and shall be received on cell B.<br>Steps 22 to 31 are performed if the UE supports emergency speech call. | | | | |
| 22 | | UE | | An emergency call is attempted. |
| 23 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Emergency Call". |
| 24 | | | Void | |
| 25 | | | Void | |
| 26 | → | | CM SERVICE REQUEST | "CM service type": Emergency call establishment. |
| 27 | ← | | CM SERVICE ACCEPT | |
| 28 | → | | EMERGENCY SETUP | |
| 29 | ← | | RELEASE COMPLETE | "Cause" = unassigned number. |
| 30 | | SS | | The SS releases the RRC connection. |

| | | | |
|---|---|---|---|
| 31 | | Void | |
| NOTE: | The definitions for "Serving cell" and “Suitable neighbour inter-frequency cell” are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | |

Procedure 3

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| The following messages are sent and shall be received on cell A | | | | |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “Registration”.<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | |
| 6 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 7 | | SS | | The SS releases the RRC connection |
| 8 | | | Void | |
| The following messages are sent and shall be received on cell B. | | | | |
| 9 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “Registration”.<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 10 | | | Void | |
| 11 | | | Void | |
| 12 | → | | LOCATION UPDATING REQUEST | |
| 13 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 14 | | SS | | The SS releases the RRC connection |
| 15 | | | Void | |
| 16 | | SS | | Change_LAI (A) within 5 s after step 13. |
| The following messages are sent and shall be received on cell A. | | | | |
| 17 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST is set to “Registration”.<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 18 | | | Void | |
| 19 | | | Void | |
| 20 | → | | LOCATION UPDATING REQUEST | |
| 21 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 22 | | SS | | The SS releases the RRC connection |
| 23 | | | Void | |
| 24 | | SS | | Change_LAI (B) within 5 s after step 21. |
| The following messages are sent and shall be received on cell B. | | | | |
| 25 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “Registration”.<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 26 | | | Void | |
| 27 | | | Void | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 28 | → | | LOCATION UPDATING REQUEST | |
| 29 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 30 | | SS | | The SS releases the RRC connection. |
| 31 | | | Void | |
| 32 | | SS | | Change_LAI (A) within 5 s after step 29. |
| The following messages are sent and shall be received on cell A. | | | | |
| 33 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “Registration”. If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 34 | | | Void | |
| 35 | | | Void | |
| 36 | → | | LOCATION UPDATING REQUEST | |
| 37 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 38 | | SS | | The SS releases the RRC connection |
| 39 | | | Void | |
| 40 | | SS | | Change_LAI (B) within 5 s after step 37. |
| The following messages are sent and shall be received on cell B. | | | | |
| 41 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “Registration”. If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 42 | | | Void | |
| 43 | | | Void | |
| 44 | → | | LOCATION UPDATING REQUEST | |
| 45 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 46 | | SS | | The SS releases the RRC connection |
| 47 | | | Void | |
| 48 | | SS | | The SS waits for a possible location updating procedure on both cells A and B for 7 minutes. |
| 49 | | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B within 7 minutes after the end of step 47. |
| NOTE: The definitions for "Serving cell" and "Suitable neighbour cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Procedure 4

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| The following messages are sent and shall be received on cell A. | | | | |
| 1 | | SS | | The SS waits for a periodic location updating procedure on cell A for T3212 minutes after the initial conditions have been established. |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | Location Updating Type = periodic. |
| 6 | ← | | LOCATION UPDATING ACCEPT | "Mobile Identity" not IE included. |
| 7 | | SS | | The SS releases the RRC connection |
| 8 | | | Void | |
| 9 | | SS | | The location area identity of cell C shall be changed to that of a location area in the Home PLMN. |
| 10 | | SS | | The SS waits for a periodic location updating procedure on cell A for T3212 minutes. |
| 11 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “Registration”. This message is sent on cell A within T3212 minutes after the end of step 7. |
| 12 | | | Void | |
| 13 | | | Void | |
| 14 | → | | LOCATION UPDATING REQUEST | "Location updating type" = periodic. |
| 15 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 16 | | SS | | The SS releases the RRC connection |
| 17 | | | Void | |
| The following messages are sent and shall be received on cell C. | | | | |
| 18 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “Registration”. If PS mode: a ROUTING AREA UPDATE REQUEST should be accepted. |
| 19 | | | Void | |
| 20 | | | Void | |
| 21 | → | | LOCATION UPDATING REQUEST | "Location updating type" = normal. |
| 21a | | SS | | The SS starts integrity protection. |
| 22 | ← | | LOCATION UPDATING ACCEPT | "Mobile Identity" not IE included. |
| 23 | | SS | | The SS releases the RRC connection |
| 24 | | | Void | |

Procedure 5

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| The following messages are sent and shall be received on cell A. | | | | |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "non-suitable cell".<br>(see note) |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | |
| 6 | ← | | LOCATION UPDATING REJECT | "Reject cause" IE is "Roaming not allowed in this location area". |
| 7 | | | | The SS releases the RRC connection. |
| 8 | | | Void | |
| 9 | | SS | | The SS waits at least 7 minutes for a possible location updating. |
| 10 | | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. |
| 11 | | UE | | The USIM is removed. |
| 12 | | UE | | The USIM is inserted into the ME.<br>The subsequent GMM attach should be rejected if received in the PS mode. |
| 13 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 14 | | | Void | |
| 15 | | | Void | |
| 16 | → | | LOCATION UPDATING REQUEST | Location Updating Type = normal. |
| 16a | ← | | AUTHENTICATION REQUEST | |
| 16b | → | | AUTHENTICATION RESPONSE | |
| 16c | | SS | | The SS starts integrity protection. |
| 17 | ← | | LOCATION UPDATING ACCEPT | "Mobile Identity" not IE included. |
| 18 | | SS | | The SS releases the RRC connection. |
| 19 | | | Void | |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

9.4.2.4.5 Test requirement

1) 1.1 At step 10 in Procedure 1 the UE shall not perform periodic updating.

   1.2 Void.

   1.3 At step 21 in procedure 2 the UE shall not initiate an RRC connection establishment.

   1.4 After step 13 in Procedure 5 the UE shall perform location updating (at step 16; not perform IMSI detach).

2) 2.1 After step 9 in Procedure 2 the UE perform normal location updating (at step 12).

   2.2 At step 23 in Procedure 2 the UE shall initiate a RRC CONNECTION REQUEST message with the establishment cause set to "Emergency call";

   2.3 At step 14 in Procedure 4 the UE shall attempt to location updating with location updating type "periodic" (at step 21: UE returns to HPLMN in preference to any other available cell).

3) After step 12 in Procedure 5 the UE shall perform location updating (at step 16) when the USIM is removed.

4) At step 49 in Procedure 3 the UE shall not attempt to begin a location updating procedure.

### 9.4.2.5 Location updating / rejected / No Suitable Cells In Location Area

#### 9.4.2.5.1 Definition

#### 9.4.2.5.2 Conformance requirement

1) If the network rejects a location updating from the UE with the cause " No Suitable Cells In Location Area " the UE shall:

   1.1 perform normal location updating at a suitable cell in another location area in the same PLMN,

   1.2 not delete the list of "equivalent PLMNs".

Reference(s)

TS 24.008 clause 4.4.4.7.

#### 9.4.2.5.3 Test purpose

To test the behaviour of the UE if the network rejects the location updating of the UE with the cause "No Suitable Cells In Location Area".

#### 9.4.2.5.4 Method of test

Initial conditions

- System Simulator:
  - two cells: A and B, belonging to different location areas a and b and belonging to PLMN1;
  - one cell: C, belonging to PLMN2;
  - one cell: D, belonging to PLMN3;
  - IMSI attach/detach is allowed in cells A, B, C and D;

  NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.2.

  ii) Cell D will be mapped to Cell 7 as found in TS 34.108 clause 6.1.4.2.
- User Equipment:
  - the UE has a valid TMSI(= TMSI1) and CKSN(= CKSN1). It is "idle updated" on cell A.
  - the UE has a list of "equivalent PLMNs" containing PLMN1 and PLMN2.

Related ICS/IXIT statement(s)

None.

Test Procedure

The SS rejects a normal location updating with the cause value "No Suitable Cells In Location Area". The RRC CONNECTION is released. The SS checks that the UE shall search for a suitable cell in a different location area on the equivalent PLMN, which is equal condition for the UE as same PLMN, and shall perform normal location updating procedure in that cell

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| The following messages are sent and shall be received on cell B. | | | | |
| 1 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the "non-suitable cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>Set the cell type of cell D to the "Suitable neighbour cell". (see note) |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = CKSN1, "LAI" = a, "mobile station classmark 1" as given by the ICS and "Mobile Identity" = TMSI1. |
| 6 | ← | | LOCATION UPDATING REJECT | "Reject cause" = "No Suitable Cells In Location Area". |
| 7 | | SS | | The SS releases the RRC connection. |
| 8 | | | Void | |
| The following messages are sent and shall be received on cell C. | | | | |
| 9 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>The subsequent GMM attach should be rejected if received in the PS mode. |
| 10 | | | Void | |
| 11 | | | Void | |
| 12 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = CKSN1, "LAI" = a, "mobile station classmark 1" as given by the ICS, "Mobile Identity" = TMSI1. |
| 13 | | | Void | |
| 14 | | | Void | |
| 15 | | SS | | The SS starts integrity protection. |
| 16 | | | Void | |
| 17 | ← | | LOCATION UPDATING ACCEPT | Mobile identity = TMSI, LAI = c. |
| 18 | → | | TMSI REALLOCATION COMPLETE | |
| 19 | | SS | | The SS releases the RRC connection. |
| 20 | | | Void | |
| NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

9.4.2.5.5 Test requirement

At step 12 the UE shall perform normal location updating on cell C.

## 9.4.3 Location updating / abnormal cases

### 9.4.3.1 Void

### 9.4.3.2 Location updating / abnormal cases / attempt counter less or equal to 4, LAI different

#### 9.4.3.2.1 Definition

#### 9.4.3.2.2 Conformance requirement

1) When a failure such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 has occurred during a normal location updating procedure, if the attempt counter is smaller than 4 and after expiry of T3211, the UE shall resend its LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating Type IE set to "normal location updating".

2) When a failure such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 has occurred during a normal location updating procedure the UE shall:

   2.1 not answer to paging with the previously allocated TMSI;

   2.2 not perform the IMSI detach procedure, when switched off.

3) When a failure such as case e) of clause 4.4.4.9 of TS 24.008 has occurred during a normal location updating procedure and when an emergency call establishment is requested by the user the UE, if it supports emergency speech call, shall send a CM SERVICE REQUEST message with CM Service Type IE set to "emergency call establishment", CKSN IE set to "no key available" and Mobile Identity IE set to its IMSI and after acceptance by the network it shall send an EMERGENCY SETUP message.

4) When a failure such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 has occurred during a normal location updating procedure the UE shall use a request from CM entity other than emergency call as a trigger for a normal location updating procedure and shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating Type IE set to "normal location updating".

5) When a failure such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 has occurred during a normal location updating procedure the UE shall answer to paging with IMSI and shall send a PAGING RESPONSE message with CKSN IE set to "no key available" and Mobile Identity IE set to its IMSI.

6) When a failure such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 has occurred during a normal location updating procedure the UE shall perform a normal location updating procedure as soon as it enters a new cell.

References

TS 24.008 clauses 4.4.4.2, 4.4.4.9.

#### 9.4.3.2.3 Test purpose

To verify that the UE performs normal location updating procedures when its attempt counter is smaller than 4.

To check that the UE does not perform the IMSI detach procedure when "idle not updated".

To verify that when "idle not updated" the UE can perform an emergency call.

To verify that when "idle not updated" the UE uses requests from CM layer other than emergency call as triggering of a normal location updating procedure.

To verify that the UE performs a normal location updating procedure if it enters a new cell while being "idle not updated".

#### 9.4.3.2.4 Method of test

Initial conditions

- System Simulator:

- two cells: A and B of the same PLMN, belonging to different location areas with LAI a and b;
- ATT flag shall be set to IMSI attach/detach allowed.

- User Equipment:
  - the UE is "idle updated" on cell A. A valid CKSN value is stored in the USIM and is noted "initial CKSN". A TMSI is allocated.

### Related ICS/IXIT statements

USIM removal possible while UE is powered Yes/No.

Switch off on button Yes/No.

Support for emergency speech call Yes/No.

### Test Procedure

The UE is made to perform a normal location updating procedure. Five types of failure cases are triggered:

- sending of a Location Updating Reject with cause randomly chosen between all defined cause values except 2, 3, 6, 11, 12 and 13 (which trigger a different action) (case g of TS 24.008 clause 4.4.4.9);
- RRC connection failure (case d);
- sending of a RRC CONNECTION RELEASE message before the normal end of the procedure (case f);
- T3210 time-out (case e);
- RR connection establishment failure (case h).

As there is no stored LAI or the stored LAI is different from the broadcast LAI, and the attempt counter in the UE shall be lower than 4, the UE enters the state MM IDLE and substate ATTEMPTING TO UPDATE and waits for T3211 seconds before trying again a location updating procedure.

Then the behaviour of the UE in the MM IDLE state and ATTEMPTING TO UPDATE substate is checked, that is:

- not answer to paging with TMSI;
- not perform an IMSI detach procedure;
- support request for emergency call;
- use requests from CM layer other than emergency call as triggering of a normal location updating procedure;
- perform normal location updating procedure when a new cell is entered.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| The following messages are sent and shall be received on cell B. | | | | |
| 1 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the "non-suitable cell".<br>(see note) |
| 2 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration.<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = initial value, LAI = a, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 6 | ← | | LOCATION UPDATING REJECT | IE Reject cause is set to #X in table 10.5.95 of TS 24.008, causes #2, #3, #6, #11, #12, #13 and #15 being excluded. |
| 7 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 8 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 9 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 8 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 9 | ← | | RRC CONNECTION SETUP | |
| 12 | → | | RRC CONNECTION SETUP COMPLETE | |
| 13 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 14 | | SS | | The SS modifies the scrambling code of DL DPCH for generating lower layer failure. |
| 15 | | | (void) | |
| 15a | → | | CELL UPDATE | CCCH. |
| 15b | ← | | RRC CONNECTION RELEASE | CCCH. |
| 15c | | SS | | The SS re-modifies the scrambling code of DL DPCH to the original one. |
| 15d | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 16 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 17 | ← | | RRC CONNECTION SETUP | |
| 18 | → | | RRC CONNECTION SETUP COMPLETE | |
| 19 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 20 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 21 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 22 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 23 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 24 | ← | | RRC CONNECTION SETUP | |
| 25 | → | | RRC CONNECTION SETUP COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 26 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 27 | ← | | AUTHENTICATION REQUEST | CKSN = initial CKSN. |
| 28 | → | | AUTHENTICATION RESPONSE | |
| 28a | ← | | SECURITY MODE COMMAND | |
| 28b | → | | SECURITY MODE COMPLETE | |
| 29 | ← | | LOCATION UPDATING ACCEPT | IE mobile Identity = new TMSI. |
| 30 | → | | TMSI REALLOCATION COMPLETE | |
| 31 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. UE is now "idle updated" in cell B. |
| 32 | → | | RRC CONNECTION RELEASE COMPLETE | |
| The following messages are sent and shall be received on cell A. | | | | |
| 33 | SS | | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "non-suitable cell". (see note) |
| 34 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the same cause as used in the LOCATION UPDATING REJECT. |
| 35 | ← | | RRC CONNECTION SETUP | |
| 36 | → | | RRC CONNECTION SETUP COMPLETE | |
| 37 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 38 | SS | | | performs step 6 with reject cause #100 and step 7. |
| 38a | UE | | | performs step8. |
| 39 | ← | | PAGING TYPE 1 | UE identity = old TMSI of the UE. This message is sent continuously to the UE during 8 s. Paging Cause: Terminating Conversational Call. |
| 40 | SS | | | The SS checks that there is no answer from the UE during 12 s. |
| 41 | SS | | | If during steps 39 and 40 the UE attempts to perform a location updating procedure the SS will perform step 38 and then continue the procedure. |
| 42 | UE | | | If possible (see ICS) USIM detachment is performed. Otherwise if possible (see ICS) mobile switch off is performed. Otherwise the power is removed. A Detach Request can be received in PS mode. |
| 43 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during 30 s. |
| 44 | UE | | | Depending on what has been performed in step 42 the UE is brought back to operation. The subsequent GMM attach should be rejected if received in the PS mode. |
| 45 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 46 | ← | | RRC CONNECTION SETUP | |
| 47 | → | | RRC CONNECTION SETUP COMPLETE | |
| 48 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 49 | ← | | AUTHENTICATION REQUEST | CKSN = initial CKSN. |
| 50 | → | | AUTHENTICATION RESPONSE | |
| 50a | ← | | SECURITY MODE COMMAND | |
| 50b | → | | SECURITY MODE COMPLETE | |
| 51 | ← | | LOCATION UPDATING ACCEPT | IE mobile Identity = new TMSI. |
| 52 | → | | TMSI REALLOCATION COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 53 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. UE is now "idle updated" in cell A. |
| 54 | → | | RRC CONNECTION RELEASE COMPLETE | |
| The following messages are sent and shall be received on cell B. | | | | |
| 55 | SS | | | Set the cell type of cell B to the "Serving cell". Set the cell type of cell A to the "non-suitable cell". (see note). |
| 56 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 57 | ← | | RRC CONNECTION SETUP | |
| 58 | → | | RRC CONNECTION SETUP COMPLETE | |
| 59 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = initial value, LAI = a, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 60 | ← | | AUTHENTICATION REQUEST | |
| 61 | → | | AUTHENTICATION RESPONSE | Steps 60 and 61 are performed N times. N shall be chosen in such a way that T3210 expires. |
| 62 | UE | | | The UE shall cease transmission and then shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the expiry of T3210. |
| 63 | UE | | | If the UE supports emergency speech call it is made to perform an emergency call. |
| 64 | → | | RRC CONNECTION REQUEST | Establishment cause: Emergency call. |
| 65 | ← | | RRC CONNECTION SETUP | |
| 66 | → | | RRC CONNECTION SETUP COMPLETE | |
| 67 | → | | CM SERVICE REQUEST | CM service type = Emergency call establishment; CKSN = no key available; Mobile Identity = IMSI. |
| 68 | ← | | CM SERVICE ACCEPT | |
| 69 | → | | EMERGENCY SETUP | |
| 70 | ← | | RELEASE COMPLETE | Cause = unassigned number. |
| 71 | ← | | RRC CONNECTION RELEASE | |
| 72 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 72a | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 73 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 74 | ← | | RRC CONNECTION SETUP | |
| 75 | → | | RRC CONNECTION SETUP COMPLETE | |
| 76 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 77 | ← | | AUTHENTICATION REQUEST | CKSN = initial CKSN. |
| 78 | → | | AUTHENTICATION RESPONSE | |
| 78a | ← | | SECURITY MODE COMMAND | |
| 78b | → | | SECURITY MODE COMPLETE | |
| 79 | ← | | LOCATION UPDATING ACCEPT | IE mobile Identity = new TMSI. |
| 80 | → | | TMSI REALLOCATION COMPLETE | |
| 81 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. UE is now "idle updated" in cell B. |
| 82 | → | | RRC CONNECTION RELEASE COMPLETE | |
| The following messages are sent and shall be received on cell A. | | | | |
| 83 | SS | | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "non-suitable cell". (see note). |
| 84 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 85 | ← | | RRC CONNECTION SETUP | |
| 86 | → | | RRC CONNECTION SETUP COMPLETE | |
| 87 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 88 | | SS | | performs step 14. |
| 88a | | | (void) | |
| 88b | → | | CELL UPDATE | CCCH. |
| 88c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 88d | | SS | | performs step 15c. |
| 89 | UE | | | A MO CM connection is attempted before T3211 expiry. |
| 90 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 91 | ← | | RRC CONNECTION SETUP | |
| 92 | → | | RRC CONNECTION SETUP COMPLETE | |
| 93 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 94 | ← | | LOCATION UPDATING ACCEPT | IE mobile Identity = new TMSI. If the location updating type in the LOCATION UPDATING REQUESTcontains 'FOR', then IE Follow-on Proceed is included in the ACCEPT and steps 96 to 100 will be omitted. |
| 95 | → | | TMSI REALLOCATION COMPLETE | |
| 96 | ← | | RRC CONNECTION RELEASE | |
| 97 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 97a | | SS | | |
| 98 | → | | RRC CONNECTION REQUEST | Establishment cause: Not checked. |
| 99 | ← | | RRC CONNECTION SETUP | |
| 100 | → | | RRC CONNECTION SETUP COMPLETE | |
| 101 | → | | CM SERVICE REQUEST | CKSN = no key available, Mobile identity = TMSI. |
| 102 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. UE is now "idle updated" in cell A. |
| 103 | → | | RRC CONNECTION RELEASE COMPLETE | |
| The following messages are sent and shall be received on cell B. | | | | |
| 104 | | SS | | Set the cell type of cell B to the "Serving cell". Set the cell type of cell A to the "non-suitable cell". (see note). |
| 105 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 106 | ← | | RRC CONNECTION SETUP | |
| 107 | → | | RRC CONNECTION SETUP COMPLETE | |
| 108 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available LAI = a, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 109 | | SS | | performs step 14. |
| 109a | | | (void) | |
| 109b | → | | CELL UPDATE | CCCH. |
| 109c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 109d | | SS | | performs step 15c. |
| The following messages are sent and shall be received on cell A. | | | | |
| 110 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "non-suitable cell". (see note). |
| 110a | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 110b | ← | | RRC CONNECTION SETUP | |
| 110c | → | | RRC CONNECTION SETUP COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 110d | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 110e | SS | | | performs step 14. |
| 110f | → | | CELL UPDATE | CCCH. |
| 110g | ← | | RRC CONNECTION RELEASE | CCCH. |
| 110h | SS | | | performs step 15c. |
| 111 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2 "Initial UE identity" = IMSI. Establishment Cause: Terminating Conversation Call. |
| 112 | → | | PAGING RESPONSE | "Mobile identity" = IMSI, CKSN = no key available. |
| 113 | ← | | RRC CONNECTION RELEASE | |
| 114 | → | | RRC CONNECTION RELEASE COMPLETE | |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 9.4.3.2.5 Test requirement

1) At step 13 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key available" and the Location Updating Type IE set to "normal location updating".

2)

2.1 At step 40 the UE shall not answer to paging with the previously allocated TMSI.

2.2 At step 43 the UE shall not perform the IMSI detach procedure.

3) At step 67 the UE shall send a CM SERVICE REQUEST message with CM Service Type IE set to "emergency call establishment", CKSN IE set to "no key available" and Mobile Identity IE set to its IMSI.

At step 69 the UE shall send an EMERGENCY SETUP message.

4) At step 93 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating Type IE set to "normal location updating".

5) At step 112 the UE shall send a PAGING RESPONSE message with CKSN IE set to "no key available" and Mobile Identity IE set to its IMSI.

6) At step 110d the UE shall perform a normal location updating procedure.

### 9.4.3.3 Location updating / abnormal cases / attempt counter equal to 4

#### 9.4.3.3.1 Definition

#### 9.4.3.3.2 Conformance requirement

1) When four failures such as cases d) to h) of clause 4.4.4.9 of TS 24.008 have occurred during a normal location updating procedure the UE shall:

1.1 perform location updating after T3212 expiry by sending a LOCATION UPATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating Type set to "normal location updating";

1.2 if the T3212 initiated location updating was unsuccessful, then after T3211 expiry the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating Type IE set to "normal location updating".

2) When four failures such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 have occurred during a normal location updating procedure the UE shall not perform the IMSI detach procedure, when switchd off.

3) When four failures such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 have occurred during a normal location updating procedure the UE, if it supports emergency speech call, shall be able to perform an emergency call i.e. the UE is able to send a CM SERVICE REQUEST message with the CM Service Type IE set to "emergency call establishment", CKSN IE set to "no key is available" and Mobile Identity IE set to its IMSI and then send an EMERGENCY SETUP message.

4) When four failures such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 have occurred during a normal location updating procedure:

4.1 the UE shall use a request from CM entity for MM connection for a service other than emergency call as a trigger for a normal location updating procedure and shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating Type IE set to "normal location updating";

4.2 after a location updating triggered by a request from the CM layer which was .unsuccessful, after T3211 expiry the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating Type IE set to "normal location updating".

5) When four failures such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 have occurred during a normal location updating procedure:

5.1 the UE shall perform a normal location updating procedure if it enters a new cell;

5.2 if this location updating is unsuccessful, after T3211 expiry the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating type IE set to "normal location updating".

References

TS 24.008 clause 4.4.4.9.

#### 9.4.3.3.3 Test purpose

To verify that the UE performs normal location updating procedures after T3212 expiry, when its attempt counter has reached value 4 and that the UE reset its attempt counter after a timer T3212 expiry.

To verify that the UE still follows the MM IDLE state and ATTEMPTING TO UPDATE substate requirements after its attempt counter has reached value 4.

To verify that the attempt counter is reset in the cases where it has to be done.

#### 9.4.3.3.4 Method of test

Initial conditions

- System Simulator:
  - two cells: A and B, belonging to different location areas a and b;
  - IMSI attach/detach is allowed in both cells;
  - T3212 is set to 6 minutes.
- User Equipment:
  - the UE is "Idle updated" on cell B with a valid CKSN and a TMSI.

### Related ICS/IXIT statements

USIM removal possible while UE is powered Yes/No.

Switch off on button Yes/No.

Support of emergency speech call Yes/No.

### Test Procedure

The UE is made to perform a normal location updating. The SS triggers a failure in this procedure by modifying scrambling code of DL DPCH. After T3211 expiry the UE will try again the location updating procedure. The SS triggers again a failure by modifying it. This is done again 2 times. At this point the attempt counter shall be equal to 4. It is then checked that T3212 has been started and that at its expiry the UE will try a normal location updating procedure. It is verified that the UE has reset its attempt counter after timer T3212 expiry.

Then it is checked that, when the attempt counter has reached the value of 4, the UE is in the MM IDLE state and ATTEMPTING TO UPDATE substate, that is:

- not perform an IMSI detach procedure;
- support request for emergency call;
- use requests from CM layer other than emergency call as triggering of a normal location updating procedure;
- perform normal location updating procedure when a new cell is entered.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| The following messages are sent and shall be received on cell A. | | | | |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "non-suitable cell". (see note). |
| 2 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration.<br>If PS mode: a ROUTING AREA UPDATE REQUEST should be rejected with the cause “GPRS services not allowed. |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 6 | ← | | LOCATION UPDATING REJECT | IE Reject cause is set to #22 in table 10.5.95 of TS 24.008, causes #2, #3, #6, #11, #12, #13 and #15 being excluded. |
| 7 | ← | | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 8 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 9 | | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 10 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 11 | ← | | RRC CONNECTION SETUP | |
| 12 | → | | RRC CONNECTION SETUP COMPLETE | |
| 13 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 14 | | SS | | The SS modifies the scrambling code of DL DPCH for generating lower layer failure. |
| 15 | | | (void) | |
| 15a | → | | CELL UPDATE | CCCH. |
| 15b | ← | | RRC CONNECTION RELEASE | CCCH. |
| 15c | | SS | | The SS re-modifies the scrambling code of DL DPCH to the original one. |
| 15d | | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 16 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 17 | ← | | RRC CONNECTION SETUP | |
| 18 | → | | RRC CONNECTION SETUP COMPLETE | |
| 19 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 20 | ← | | AUTHENTICATION REQUEST | |
| 21 | → | | AUTHENTICATION RESPONSE | Steps 20 and 21 are performed N times. N shall be chosen in such a way that the Authentication Request is not sent after (T3210 - applicable tolerance) is reached. |
| 21a | → | | SIGNALLING CONNECTION RELEASE INDICATION | The UE shall abort the RR connection.<br>CN domain identity = CS domain |
| 21b | ← | | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 21c | → | | RRC CONNECTION RELEASE COMPLETE | |
| 22 | | UE | | The UE shall cease transmission and then shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the expiry of T3210. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 23 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 24 | ← | | RRC CONNECTION SETUP | |
| 25 | → | | RRC CONNECTION SETUP COMPLETE | |
| 26 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 27 | ← | | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 28 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 29 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3212 (tolerance -15s; 45s) at least after the RRC connection is released. |
| 30 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 31 | ← | | RRC CONNECTION SETUP | |
| 32 | → | | RRC CONNECTION SETUP COMPLETE | |
| 33 | → | | LOCATION UPDATING REQUEST | location updating type: "normal location update" CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE) mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 34 | ← | | LOCATION UPDATING REJECT | IE Reject cause = #17 "network failure". |
| 35 | ← | | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 36 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 37 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 38 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 39 | ← | | RRC CONNECTION SETUP | |
| 40 | → | | RRC CONNECTION SETUP COMPLETE | |
| 41 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE) mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 42 | ← | | AUTHENTICATION REQUEST | CKSN = initial CKSN. |
| 43 | → | | AUTHENTICATION RESPONSE | |
| 43a | ← | | SECURITY MODE COMMAND | |
| 43b | → | | SECURITY MODE COMPLETE | |
| 44 | ← | | LOCATION UPDATING ACCEPT | IE mobile Identity = new TMSI. |
| 45 | → | | TMSI REALLOCATION COMPLETE | |
| 46 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. UE is now "idle, updated" in cell A. |
| 47 | → | | RRC CONNECTION RELEASE COMPLETE | |
| The following messages are sent and shall be received on cell B. | | | | |
| 48 | SS | | | Set the cell type of cell B to the "Serving cell". Set the cell type of cell A to the "non-suitable cell". (see note). |
| 49 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 50 | ← | | RRC CONNECTION SETUP | |
| 51 | → | | RRC CONNECTION SETUP COMPLETE | |
| 52 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = initial value, LAI = a, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |

| Step | Direction | Message | Comments |
|---|---|---|---|
| | UE \| SS | | |
| 53 | ← | LOCATION UPDATING REJECT | IE Reject cause is set to #X in table 10.5.95 of TS 24.008, causes #2, #3, #6, #11, #12, #13 and #15 being excluded. |
| 54 | ← | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 55 | → | RRC CONNECTION RELEASE COMPLETE | |
| 56 | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 57 | → | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 58 | ← | RRC CONNECTION SETUP | |
| 59 | → | RRC CONNECTION SETUP COMPLETE | |
| 60 | → | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 61 | SS | | The SS modifies the scrambling code of DL DPCH for generating lower layer failure. |
| 61a | | (void) | |
| 61b | → | CELL UPDATE | CCCH. |
| 61c | ← | RRC CONNECTION RELEASE | CCCH. |
| 61d | SS | | The SS re-modifies the scrambling code of DL DPCH to the original one. |
| 61e | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 62 | → | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 63 | ← | RRC CONNECTION SETUP | |
| 64 | → | RRC CONNECTION SETUP COMPLETE | |
| 65 | → | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 66 | ← | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 67 | → | RRC CONNECTION RELEASE COMPLETE | |
| 68 | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 69 | → | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 70 | ← | RRC CONNECTION SETUP | |
| 71 | → | RRC CONNECTION SETUP COMPLETE | |
| 72 | → | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE) mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 73 | SS | | performs step 53 and 54. |
| 74 | UE | | performs step 55. If the UE supports emergency speech call, it is made to perform an emergency call. |
| 75 | → | RRC CONNECTION REQUEST | Establishment cause: Emergency call. |
| 76 | ← | RRC CONNECTION SETUP | |
| 77 | → | RRC CONNECTION SETUP COMPLETE | |
| 78 | → | CM SERVICE REQUEST | CM service type = Emergency call establishment; CKSN = no key available; Mobile Identity = IMSI. |
| 79 | ← | CM SERVICE ACCEPT | |
| 80 | → | EMERGENCY SETUP | |
| 81 | ← | RELEASE COMPLETE | Cause = unassigned number. |

| Step | Direction | Message | Comments |
|---|---|---|---|
| | UE \| SS | | |
| 82 | ← | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 83 | → | RRC CONNECTION RELEASE COMPLETE | |
| 84 | UE | | If possible (see ICS) USIM detachment is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 85 | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. This is checked during 30 s. |
| 86 | UE | | Depending on what has been performed in step 84 the UE is brought back to operation. The subsequent GMM attach should be rejected if received in the PS mode. |
| 87 | → | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 88 | ← | RRC CONNECTION SETUP | |
| 89 | → | RRC CONNECTION SETUP COMPLETE | |
| 90 | → | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 91 | ← | AUTHENTICATION REQUEST | CKSN = initial CKSN. |
| 92 | → | AUTHENTICATION RESPONSE | |
| 92a | ← | SECURITY MODE COMMAND | |
| 92b | → | SECURITY MODE COMPLETE | |
| 93 | ← | LOCATION UPDATING ACCEPT | IE mobile Identity = new TMSI. |
| 94 | → | TMSI REALLOCATION COMPLETE | |
| 95 | ← | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. UE is now "idle, updated" in cell B. |
| 96 | → | RRC CONNECTION RELEASE COMPLETE | |
| The following messages are sent and shall be received on cell A. | | | |
| 97 | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "non-suitable cell". (see note). |
| 98 | → | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 99 | ← | RRC CONNECTION SETUP | |
| 100 | → | RRC CONNECTION SETUP COMPLETE | |
| 101 | → | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 102 | ← | LOCATION UPDATING REJECT | IE Reject cause is set to #38 in table 10.5.95 of TS 24.008, causes #2, #3, #6, #11, #12, #13 and #15 being excluded. |
| 103 | ← | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 104 | → | RRC CONNECTION RELEASE COMPLETE | |
| 105 | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 106 | → | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 107 | ← | RRC CONNECTION SETUP | |
| 108 | → | RRC CONNECTION SETUP COMPLETE | |
| 109 | → | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 110 | SS | | The SS modifies the scrambling code of DL DPCH for generating lower layer failure. |
| 111 | | (void) | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 111a | → | | CELL UPDATE | CCCH. |
| 111b | ← | | RRC CONNECTION RELEASE | CCCH. |
| 111c | | SS | | The SS re-modifies the scrambling code of DL DPCH to the original one. |
| 111d | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 112 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 113 | ← | | RRC CONNECTION SETUP | |
| 114 | → | | RRC CONNECTION SETUP COMPLETE | |
| 115 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 116 | ← | | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 117 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 118 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 119 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 120 | ← | | RRC CONNECTION SETUP | |
| 121 | → | | RRC CONNECTION SETUP COMPLETE | |
| 122 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE) mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 123 | | | (void) | |
| 123a | | SS | | performs step 61. |
| 123b | → | | CELL UPDATE | CCCH. |
| 123c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 123d | | SS | | performs step 61d. |
| 124 | UE | | | A MO CM connection is attempted before T3212 expiry. |
| 125 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 126 | ← | | RRC CONNECTION SETUP | |
| 127 | → | | RRC CONNECTION SETUP COMPLETE | |
| 128 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 129 | | | (void) | |
| 129a | | SS | | performs step 61. |
| 129b | → | | CELL UPDATE | CCCH. |
| 129c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 129d | | SS | | performs step 61d. |
| 130 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 131 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 132 | ← | | RRC CONNECTION SETUP | |
| 133 | → | | RRC CONNECTION SETUP COMPLETE | |
| 134 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 135 | ← | | AUTHENTICATION REQUEST | CKSN = initial CKSN. |
| 136 | → | | AUTHENTICATION RESPONSE | |
| 136a | ← | | SECURITY MODE COMMAND | |
| 136b | → | | SECURITY MODE COMPLETE | |

| Step | Direction | Message | Comments |
|---|---|---|---|
| | UE \| SS | | |
| 137 | ← | LOCATION UPDATING ACCEPT | IE mobile Identity = new TMSI. If the location updating type in the LOCATION UPDATING REQUESTcontains 'FOR', then IE Follow-on Proceed is included in the ACCEPT and steps 139 to 143 will be omitted. |
| 138 | → | TMSI REALLOCATION COMPLETE | |
| 139 | ← | RRC CONNECTION RELEASE | |
| 140 | → | RRC CONNECTION RELEASE COMPLETE | UE is now "idle, updated" in cell A.<br>The UE may or may not have memorised the request for CM connection. The steps 141 to 147 are therefore optional for the MS. The SS waits for 10 seconds to check if the UE attempts to make a CM service request, else it will directly go to step 148. |
| 141 | → | RRC CONNECTION REQUEST | |
| 142 | ← | RRC CONNECTION SETUP | |
| 143 | → | RRC CONNECTION SETUP COMPLETE | |
| 144 | → | CM SERVICE REQUEST | CKSN = initial value, Mobile identity = TMSI. |
| 145 | ← | CM SERVICE REJECT | cause #17 (network failure). |
| 146 | ← | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 147 | → | RRC CONNECTION RELEASE COMPLETE | |
| The following messages are sent and shall be received on cell B. | | | |
| 148 | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the "non-suitable cell".<br>(see note). |
| 149 | → | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 150 | ← | RRC CONNECTION SETUP | |
| 151 | → | RRC CONNECTION SETUP COMPLETE | |
| 152 | → | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = initial value, LAI = a, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 153 | ← | LOCATION UPDATING REJECT | IE Reject cause is set to #38 in table 10.5.95 of TS 24.008, causes #2, #3, #6, #11, #12, #13 and #15 being excluded. |
| 154 | ← | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link |
| 155 | → | RRC CONNECTION RELEASE COMPLETE | |
| 156 | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 157 | → | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 158 | ← | RRC CONNECTION SETUP | |
| 159 | → | RRC CONNECTION SETUP COMPLETE | |
| 160 | → | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 161 | SS | | The SS modifies the scrambling code of DL DPCH for generating lower layer failure. |
| 162 | | (void) | |
| 162a | → | CELL UPDATE | CCCH. |
| 162b | ← | RRC CONNECTION RELEASE | CCCH. |
| 162c | SS | | The SS re-modifies the scrambling code of DL DPCH to the original one. |
| 162d | UE | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 163 | → | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 164 | ← | RRC CONNECTION SETUP | |
| 165 | → | RRC CONNECTION SETUP COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 166 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 167 | ← | | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 168 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 169 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 170 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 171 | ← | | RRC CONNECTION SETUP | |
| 172 | → | | RRC CONNECTION SETUP COMPLETE | |
| 173 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE) mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 174 | ← | | LOCATION UPDATING REJECT | IE Reject cause = "retry upon entry into a new cell". |
| 174a | ← | | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 174b | → | | RRC CONNECTION RELEASE COMPLETE | |
| The following messages are sent and shall be received on cell A. | | | | |
| 175 | SS | | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "non-suitable cell". (see note). |
| 176 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 177 | ← | | RRC CONNECTION SETUP | |
| 178 | → | | RRC CONNECTION SETUP COMPLETE | |
| 179 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available , LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE) mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 180 | SS | | | performs the step 61. |
| 181 | | | (void) | |
| 181a | → | | CELL UPDATE | CCCH. |
| 181b | ← | | RRC CONNECTION RELEASE | CCCH. |
| 181c | SS | | | The SS re-modifies the scrambling code of DL DPCH to the original one. |
| 181d | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B during T3211 seconds at least after the RRC connection is released. |
| 182 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 183 | ← | | RRC CONNECTION SETUP | |
| 184 | → | | RRC CONNECTION SETUP COMPLETE | |
| 185 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE), Mobile Identity = IMSI. |
| 186 | ← | | AUTHENTICATION REQUEST | CKSN = initial CKSN. |
| 187 | → | | AUTHENTICATION RESPONSE | |
| 187a | ← | | SECURITY MODE COMMAND | |
| 187b | → | | SECURITY MODE COMPLETE | |
| 188 | ← | | LOCATION UPDATING ACCEPT | IE mobile Identity = new TMSI. |
| 189 | → | | TMSI REALLOCATION COMPLETE | |
| 190 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. UE is now "idle, updated" in cell A. |

| Step | Direction | Message | Comments |
|---|---|---|---|
| | UE \| SS | | |
| 191 | → | RRC CONNECTION RELEASE COMPLETE | |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

9.4.3.3.5 Test requirement

1) 1.1 At step 33 the UE shall perform location updating procedure.

   1.2 At step 41 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating type IE set to "normal location updating".

2) At step78 the UE shall send a CM SERVICE REQUEST message with the CM Service Type IE set to "emergency call establishment", CKSN IE set to "no key is available" and Mobile Identity IE set to its IMSI.

   At step 80 the UE shall send an EMERGENCY SETUP message.

3) At step 85 the UE shall not perform the IMSI detach procedure.

4)

   4.1 At step128 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating type IE set to "normal location updating";

   4.2 At step 134 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating type IE set to "normal location updating".

5)

   5.1 At step 179 the UE shall perform a normal location updating procedure if it enters a new cell;

   5.2 At step 185 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating type IE set to "normal location updating".

## 9.4.3.4 Location updating / abnormal cases / attempt counter less or equal to 4, stored LAI equal to broadcast LAI

9.4.3.4.1 Definition

9.4.3.4.2 Conformance requirement

1) When a failure such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 has occurred during a periodic location updating procedure (the broadcast LAI is equal to the stored LAI):

   1.1 the UE shall be able to establish an MM connection i.e. send a RRC CONNECTION REQUEST message and then a CM SERVICE REQUEST message, CKSN and LAI set to those which have been allocated to the UE, Mobile Identity IE set to the TMSI which has been allocated to the UE;

   1.2 then the UE shall not attempt a location updating procedure.

2) When a failure such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 has occurred during an IMSI attach procedure (the broadcast LAI is equal to the stored LAI):

   2.1 the UE shall be able to establish an MM connection i.e. send a RRC CONNECTION REQUEST message and then a CM SERVICE REQUEST message, CKSN and LAI set to those which have been allocated to the UE, Mobile Identity IE set to the TMSI which has been allocated to the UE;

   2.2 then the UE shall not attempt a location updating procedure.

3) When a failure such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 has occurred during a periodic location updating procedure and the attempt counter is smaller than 4 the UE shall send, after T3211 expiry, a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to the TMSI which has been allocated to the UE, CKSN IE and LAI set to those which have been allocated to the UE and the Location Updating Type IE set to "periodic updating".

   3.1 When the UE's attempt counter reaches the value 4 (four failures such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 have occurred during a periodic location updating procedure) after T3212 expiry it shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating Type IE set to "normal".

4) When the UE's attempt counter reaches the value 4 (four failures such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 have occurred during a periodic location updating procedure) it shall use a request for a CM connection other than emergency call as a trigger for a location updating procedure.

5) When a failure such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 has occurred during an IMSI attach procedure and the attempt counter is smaller than 4 the UE shall send, after T3211 expiry, a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to the TMSI which has been allocated to the UE, CKSN IE and LAI set to those which have been allocated to the UE and the Location Updating type set to "IMSI attach".

   5.1 When the UE's attempt counter reaches the value 4 (four failures such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 have occurred during an IMSI attach procedure) after T3212 expiry it shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating type set to "normal".

6) When the UE's attempt counter reaches the value 4 (four failures such as cases d), f), g) and h) of clause 4.4.4.9 of TS 24.008 have occurred during an IMSI attach procedure) it shall use a request for a CM connection other than emergency call as a trigger for a location updating procedure.

References

TS 24.008 clause 4.4.4.9.

#### 9.4.3.4.3 Test purpose

To verify that in the case when the attempt counter is smaller than 4 and the broadcast LAI is equal to the stored LAI, the UE is in the MM IDLE state and NORMAL SERVICE substate. To verify that timer T3211 is stopped after a MM connection establishment.

To verify that the UE uses the T3211 timer. and that it enters the MM IDLE state and NORMAL SERVICE substate when its attempt counter reaches value 4 even in the case where the stored LAI is equal to the broadcast LAI.

#### 9.4.3.4.4 Method of test

Initial conditions

- System Simulator:
  - one cell: B, belonging to location area b;
  - IMSI attach/detach is allowed;
  - T3212 is set to 6 minutes.

- User Equipment:
  - the UE is "Idle updated" on cell B with a valid CKSN and a TMSI.

Related ICS/IXIT statements

USIM removal possible while UE is powered Yes/No.

Switch off on button Yes/No.

Test Procedure

A failure during the periodic location updating is triggered: as the broadcast LAI is equal to the stored LAI, the UE is still in the MM IDLE state and NORMAL SERVICE substate and timer T3211 is started. A CM connection other than for emergency call is attempted. It is checked that this is possible and that T3211 is stopped. Same test is performed with a failure during an IMSI attach procedure.

Then failures are triggered during the periodic location updating to let the attempt counter to reach the value of 4. The UE shall enter the MM IDLE state and ATTEMPTING TO UPDATE substate and delete any TMSI, stored LAI, ciphering key sequence number and ciphering key. When the attempt counter reaches the value of 4, timer T3212 shall be started. At timer T3212 expiry a location updating procedure is started. A request for CM connection other for than emergency call shall trigger a location updating procedure.

Same tests are performed when the failures are triggered during an IMSI attach procedure.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | The SS shall wait at most T3212 + 45 s. |
| 2 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | LOCATION UPDATING REQUEST | location updating type = periodic, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 6 | | SS | | performs step 6, of 9.4.3.2 with cause #17 and step 7 of 9.4.3.2. |
| 6a | UE | | | performs step 8 of 9.4.3.2. |
| 7 | UE | | | A MO CM connection is attempted before T3211 expiry. |
| 8 | → | | RRC CONNECTION REQUEST | |
| 9 | ← | | RRC CONNECTION SETUP | |
| 10 | → | | RRC CONNECTION SETUP COMPLETE | |
| 11 | → | | CM SERVICE REQUEST | CKSN = initial CKSN, Mobile Identity = TMSI. |
| 12 | ← | | CM SERVICE ACCEPT | |
| 13 | → | | An initial CM message | |
| 14 | ← | | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 15 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 16 | | SS | | The UE shall not initiate an RRC connection establishment. This is checked during T3211. |
| 17 | UE | | | If possible (see ICS) USIM detachment is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. A Detach Request can be received in PS mode. |
| Steps 18 to 23 are optional. | | | | |
| 18 | → | | RRC CONNECTION REQUEST | Establishment Cause: Detach |
| 19 | ← | | RRC CONNECTION SETUP | |
| 20 | → | | RRC CONNECTION SETUP COMPLETE | |
| 21 | → | | IMSI DETACH INDICATION | |
| 22 | ← | | RRC CONNECTION RELEASE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 23 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 24 | UE | | | Depending on what has been performed in step 17 the UE is brought back to operation. The subsequent GMM attach should be rejected if received in the PS mode. |
| 25 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 26 | ← | | RRC CONNECTION SETUP | |
| 27 | → | | RRC CONNECTION SETUP COMPLETE | |
| 28 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 29 | SS | | | performs step 14 of 9.4.3.2. |
| 29a | | | (void) | |
| 29b | → | | CELL UPDATE | CCCH. |
| 29c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 29d | SS | | | performs step 15c of 9.4.3.2. |
| 30 | UE | | | A MO CM connection is attempted before T3211 expiry. |
| 31 | → | | RRC CONNECTION REQUEST | |
| 32 | ← | | RRC CONNECTION SETUP | |
| 33 | → | | RRC CONNECTION SETUP COMPLETE | |
| 34 | → | | CM SERVICE REQUEST | CKSN = initial CKSN, Mobile Identity = TMSI. |
| 35 | ← | | SECURITY MODE COMMAND | |
| 36 | → | | SECURITY MODE COMPLETE | |
| 37 | → | | An initial CM message | |
| 38 | ← | | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 39 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 40 | SS | | | The UE shall not initiate an RRC connection establishment. This is checked during T3211 UE is "idle, updated" in cell B. |
| 40/1 | UE | | | If possible (see ICS) USIM detachment is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| Steps 40/2 to 40/7 are optional. | | | | |
| 40/2 | → | | RRC CONNECTION REQUEST | Establishment Cause: Detach |
| 40/3 | ← | | RRC CONNECTION SETUP | |
| 40/4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 40/5 | → | | IMSI DETACH INDICATION | |
| 40/6 | ← | | RRC CONNECTION RELEASE | |
| 40/7 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 40/8 | UE | | | Depending on what has been performed in step 40/1, the UE is brought back to operation. |
| 40/9 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 40/10 | ← | | RRC CONNECTION SETUP | |
| 40/11 | → | | RRC CONNECTION SETUP COMPLETE | |
| 40/12 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 40/13 | ← | | LOCATION UPDATING ACCEPT | without mobile identity |
| 40/14 | ← | | RRC CONNECTION RELEASE | |
| 40/15 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 41 | SS | | | The SS shall wait at most T3212 + 15 s. |
| 42 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 43 | ← | | RRC CONNECTION SETUP | |
| 44 | → | | RRC CONNECTION SETUP COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 45 | → | | LOCATION UPDATING REQUEST | location updating type = periodic, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 46 | | SS | | performs step 14 of 9.4.3.2. |
| 46a | | | (void) | |
| 46b | → | | CELL UPDATE | CCCH. |
| 46c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 46d | | SS | | performs step 15c of 9.4.3.2. |
| 47 | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 48 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 49 | ← | | RRC CONNECTION SETUP | |
| 50 | → | | RRC CONNECTION SETUP COMPLETE | |
| 51 | → | | LOCATION UPDATING REQUEST | location updating type = periodic, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 52 | | SS | | performs step 6 of 9.4.3.2 with cause #17 and step 7 of 9.4.3.2. |
| 52a | UE | | | performs step 8 of 9.4.3.2. |
| 53 | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 54 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 55 | ← | | RRC CONNECTION SETUP | |
| 56 | → | | RRC CONNECTION SETUP COMPLETE | |
| 57 | → | | LOCATION UPDATING REQUEST | location updating type = periodic, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 58 | | SS | | performs step 14 of 9.4.3.2. |
| 59 | | | (void) | |
| 59a | → | | CELL UPDATE | CCCH. |
| 59b | ← | | RRC CONNECTION RELEASE | CCCH. |
| 59c | | SS | | The SS re-modifies the scrambling code of DL DPCH to the original one. |
| 59d | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 60 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 61 | ← | | RRC CONNECTION SETUP | |
| 62 | → | | RRC CONNECTION SETUP COMPLETE | |
| 63 | → | | LOCATION UPDATING REQUEST | location updating type = periodic, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 64 | | SS | | performs step 14 of 9.4.3.2. |
| 64a | | | (void) | |
| 64b | → | | CELL UPDATE | CCCH. |
| 64c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 64d | | SS | | performs step 15c of 9.4.3.2. |
| 65 | UE | | | The UE shall not initiate an RRC connection establishment during T3212 seconds at least after the RRC connection is released. |
| 66 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 67 | ← | | RRC CONNECTION SETUP | |
| 68 | → | | RRC CONNECTION SETUP COMPLETE | |
| 69 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE) mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 70 | ← | | AUTHENTICATION REQUEST | CKSN = initial CKSN. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 71 | → | | AUTHENTICATION RESPONSE | |
| 71a | ← | | SECURITY MODE COMMAND | |
| 71b | → | | SECURITY MODE COMPLETE | |
| 72 | | | (void) | |
| 72a | ← | | LOCATION UPDATING ACCEPT | IE mobile Identity = TMSI. |
| 72b | → | | TMSI REALLOCATION COMPLETE | |
| 73 | ← | | RRC CONNECTION RELEASE | The SS waits for the disconnection of the main signalling link. |
| 74 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 75 | UE | | | The UE shall not initiate an RRC connection establishment during than T3212 seconds at least after the RRC connection is released. |
| 76 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 77 | ← | | RRC CONNECTION SETUP | |
| 78 | → | | RRC CONNECTION SETUP COMPLETE | |
| 79 | → | | LOCATION UPDATING REQUEST | location updating type = periodic, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 80 | SS | | | performs step 6 of 9.4.3.2 with cause #17 and step 7 of 9.4.3.2. |
| 80a | UE | | | performs step 8 of 9.4.3.2. |
| 81 | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 82 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 83 | ← | | RRC CONNECTION SETUP | |
| 84 | → | | RRC CONNECTION SETUP COMPLETE | |
| 85 | → | | LOCATION UPDATING REQUEST | location updating type = periodic, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 86 | SS | | | performs step 14 of 9.4.3.2. |
| 87 | | | (void) | |
| 87a | → | | CELL UPDATE | CCCH. |
| 87b | ← | | RRC CONNECTION RELEASE | CCCH. |
| 87c | SS | | | The SS re-modifies the scrambling code of DL DPCH to the original one. |
| 87d | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 88 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 89 | ← | | RRC CONNECTION SETUP | |
| 90 | → | | RRC CONNECTION SETUP COMPLETE | |
| 91 | → | | LOCATION UPDATING REQUEST | location updating type = periodic, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 92 | SS | | | performs step 14 of 9.4.3.2. |
| 92a | | | (void) | |
| 92b | → | | CELL UPDATE | CCCH. |
| 92c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 92d | SS | | | performs step 15c of 9.4.3.2. |
| 93 | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 94 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 95 | ← | | RRC CONNECTION SETUP | |
| 96 | → | | RRC CONNECTION SETUP COMPLETE | |
| 97 | → | | LOCATION UPDATING REQUEST | location updating type = periodic, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 98 | | SS | | performs step 6 of 9.4.3.2 with cause #17 and step 7 of 9.4.3.2. |
| 98a | | UE | | performs step 8 of 9.4.3.2. |
| 99 | | UE | | A MO CM connection is attempted before T3212 expiry. |
| 100 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 101 | ← | | RRC CONNECTION SETUP | |
| 102 | → | | RRC CONNECTION SETUP COMPLETE | |
| 103 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE) mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 104 | ← | | LOCATION UPDATING ACCEPT | IE mobile identity = TMSI. If the location updating type in the LOCATION UPDATING REQUESTcontains 'FOR', then IE Follow-on Proceed is included in the ACCEPT and steps 106 to 110 will be omitted. |
| 105 | → | | TMSI REALLOCATION COMPLETE | |
| 106 | ← | | RRC CONNECTION RELEASE | |
| 107 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 108 | → | | RRC CONNECTION REQUEST | |
| 109 | ← | | RRC CONNECTION SETUP | |
| 110 | → | | RRC CONNECTION SETUP COMPLETE | |
| 111 | → | | CM SERVICE REQUEST | CKSN = no key available, Mobile identity = TMSI |
| 112 | ← | | CM SERVICE REJECT | cause #17 (network failure). |
| 113 | ← | | RRC CONNECTION RELEASE | |
| 114 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 115 | UE | | | If possible (see ICS) USIM detachment is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| Steps 116 to 121 are optional. | | | | |
| 116 | → | | RRC CONNECTION REQUEST | Establishment Cause: Detach |
| 117 | ← | | RRC CONNECTION SETUP | |
| 118 | → | | RRC CONNECTION SETUP COMPLETE | |
| 119 | → | | IMSI DETACH INDICATION | |
| 120 | ← | | RRC CONNECTION RELEASE | |
| 121 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 122 | UE | | | Depending on what has been performed in step 115 the UE is brought back to operation. |
| 123 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 124 | ← | | RRC CONNECTION SETUP | |
| 125 | → | | RRC CONNECTION SETUP COMPLETE | |
| 126 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach, CKSN = no key available, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 127 | | SS | | performs step 14 of 9.4.3.2. |
| 128 | | | (void) | |
| 128a | → | | CELL UPDATE | CCCH. |
| 128b | ← | | RRC CONNECTION RELEASE | CCCH. |
| 128c | | SS | | The SS re-modifies the scrambling code of DL DPCH to the original one. |
| 128d | | UE | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 129 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 130 | ← | | RRC CONNECTION SETUP | |
| 131 | → | | RRC CONNECTION SETUP COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 132 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach, CKSN = no key available, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 133 | ← | | RRC CONNECTION RELEASE | After the sending of the message the SS waits for the disconnection of the main signalling link. |
| 134 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 135 | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 136 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 137 | ← | | RRC CONNECTION SETUP | |
| 138 | → | | RRC CONNECTION SETUP COMPLETE | |
| 139 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach, CKSN = no key available, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 140 | | | (void) | |
| 140a | ← | | LOCATION UPDATING REJECT | IE Reject cause is set to #X in table 10.5.95 of TS 24.008, causes #2, #3, #6, #11, #12, #13 and #15 being excluded. |
| 140b | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 141 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 142 | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 143 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 144 | ← | | RRC CONNECTION SETUP | |
| 145 | → | | RRC CONNECTION SETUP COMPLETE | |
| 146 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach, CKSN = no key available, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 147 | SS | | | performs step 14 of 9.4.3.2. |
| 147a | | | (void) | |
| 147b | → | | CELL UPDATE | CCCH. |
| 147c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 147d | SS | | | performs step 15c of 9.4.3.2. |
| 148 | UE | | | The UE shall not initiate an RRC connection establishment during T3212 seconds at least after the RRC connection is released. |
| 149 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 150 | ← | | RRC CONNECTION SETUP | |
| 151 | → | | RRC CONNECTION SETUP COMPLETE | |
| 152 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE) mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 153 | ← | | AUTHENTICATION REQUEST | CKSN = initial CKSN. |
| 154 | → | | AUTHENTICATION RESPONSE | |
| 154a | ← | | SECURITY MODE COMMAND | |
| 154b | → | | SECURITY MODE COMPLETE | |
| 155 | ← | | LOCATION UPDATING ACCEPT | IE mobile Identity = TMSI. |
| 156 | → | | TMSI REALLOCATION COMPLETE | |
| 157 | ← | | RRC CONNECTION RELEASE | |
| 158 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 159 | UE | | | If possible (see ICS) USIM detachment is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| Steps 160 to 165 are optional. | | | | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 160 | → | | RRC CONNECTION REQUEST | Establishment Cause: Detach |
| 161 | ← | | RRC CONNECTION SETUP | |
| 162 | → | | RRC CONNECTION SETUP COMPLETE | |
| 163 | → | | IMSI DETACH INDICATION | |
| 164 | ← | | RRC CONNECTION RELEASE | |
| 165 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 166 | UE | | | Depending on what has been performed in step 159 the UE is brought back to operation. |
| 167 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 168 | ← | | RRC CONNECTION SETUP | |
| 169 | → | | RRC CONNECTION SETUP COMPLETE | |
| 170 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 171 | SS | | | performs step 14 of 9.4.3.2. |
| 171a | | | (void) | |
| 171b | → | | CELL UPDATE | CCCH. |
| 171c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 171d | SS | | | performs step 15c of 9.4.3.2. |
| 172 | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 173 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 174 | ← | | RRC CONNECTION SETUP | |
| 175 | → | | RRC CONNECTION SETUP COMPLETE | |
| 176 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 177 | SS | | | performs step 6 of 9.4.3.2 with cause #17 and step 7 of 9.4.3.2. |
| 177a | UE | | | performs step 8 of 9.4.3.2. |
| 178 | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 179 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 180 | ← | | RRC CONNECTION SETUP | |
| 181 | → | | RRC CONNECTION SETUP COMPLETE | |
| 182 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 183 | SS | | | performs step 14 of 9.4.3.2. |
| 184 | | | (void) | |
| 184a | → | | CELL UPDATE | CCCH. |
| 184b | ← | | RRC CONNECTION RELEASE | CCCH. |
| 184c | SS | | | The SS re-modifies the scrambling code of DL DPCH to the original one. |
| 184d | UE | | | The UE shall not initiate an RRC connection establishment during T3211 at least after the RRC connection is released. |
| 185 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 186 | ← | | RRC CONNECTION SETUP | |
| 187 | → | | RRC CONNECTION SETUP COMPLETE | |
| 188 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach, CKSN = initial value, LAI = b, mobile station classmark 1 as given by the ICS and mobile identity = TMSI. |
| 189 | SS | | | performs step 14 of 9.4.3.2. |
| 189a | | | (void) | |
| 189b | → | | CELL UPDATE | CCCH. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 189c | ← | | RRC CONNECTION RELEASE | CCCH. |
| 189d | | SS | | performs step 15c of 9.4.3.2. |
| 190 | UE | | | A MO CM connection id attempted before T3212 expiry |
| 191 | → | | RRC CONNECTION REQUEST | Establishment cause: Registration. |
| 192 | ← | | RRC CONNECTION SETUP | |
| 193 | → | | RRC CONNECTION SETUP COMPLETE | |
| 194 | → | | LOCATION UPDATING REQUEST | location updating type = normal, CKSN = no key available, LAI = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE) mobile station classmark 1 as given by the ICS and mobile identity = IMSI. |
| 195 | ← | | AUTHENTICATION REQUEST | CKSN = initial CKSN. |
| 196 | → | | AUTHENTICATION RESPONSE | |
| 196a | ← | | SECURITY MODE COMMAND | |
| 196b | → | | SECURITY MODE COMPLETE | |
| 197 | ← | | LOCATION UPDATING ACCEPT | IE mobile Identity = TMSI. If the location updating type in the LOCATION UPDATING REQUESTcontains 'FOR', then IE Follow-on Proceed is included in the ACCEPT and steps 199 to 204 will be omitted. |
| 198 | → | | TMSI REALLOCATION COMPLETE | |
| 199 | ← | | RRC CONNECTION RELEASE | |
| 200 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 201 | | | (void) | |
| 202 | → | | RRC CONNECTION REQUEST | |
| 203 | ← | | RRC CONNECTION SETUP | |
| 204 | → | | RRC CONNECTION SETUP COMPLETE | |
| 205 | → | | CM SERVICE REQUEST | CKSN = initial value, Mobile identity = TMSI. |
| 206 | ← | | CM SERVICE REJECT | cause #17 (network failure). |
| 207 | ← | | RRC CONNECTION RELEASE | |
| 208 | → | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

9.4.3.4.5 Test requirement

1)

1.1 At step 8 the UE shall send a RRC CONNECTION REQUEST message and at step 11 the UE shall send a CM SERVICE REQUEST message, CKSN and LAI set to those which have been allocated to the UE, Mobile Identity IE set to the TMSI which has been allocated to the UE;

1.2 At step 11 the UE shall not attempt a location updating procedure.

2)

2.1 At step 31 the UE shall send a RRC CONNECTION REQUEST message and at step 34 the UE shall send a CM SERVICE REQUEST message, CKSN and LAI set to those which have been allocated to the UE, Mobile Identity IE set to the TMSI which has been allocated to the UE;

2.2 At step 39 the UE shall not attempt a location updating procedure.

3) At step 51 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to the TMSI which has been allocated to the UE, CKSN IE and LAI set to those which have been allocated to the UE and the Location Updating Type IE set to "periodic updating".

3.1 At step 69 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating Type IE set to "normal".

4) At step 103 the UE shall send a LOCATION UPDATING REQUEST message.

5) At step 132 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to the TMSI which has been allocated to the UE, CKSN IE and LAI set to those which have been allocated to the UE and the Location Updating Type IE set to "IMSI attach".

   5.1 At step 152 the UE shall send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating Type IE set to "normal".

6) At step 194 the UE shall send a LOCATION UPDATING REQUEST message.

### 9.4.3.5 Location updating / abnormal cases / Failure due to non-integrity protection

#### 9.4.3.5.1 Definition

#### 9.4.3.5.2 Conformance requirement

Except the messages listed below, no layer 3 signalling messages shall be processed by the receiving MM and GMM entities or forwarded to the CM entities, unless the security mode control procedure is activated for that domain.

- MM messages:
  - AUTHENTICATION REQUEST
  - AUTHENTICATION REJECT
  - IDENTITY REQUEST
  - LOCATION UPDATING ACCEPT (at periodic location update with no change of location area or temporary identity)
  - LOCATION UPDATING REJECT
  - CM SERVICE ACCEPT, if the following two conditions apply:
    - no other MM connection is established; and
    - the CM SERVICE ACCEPT is the response to a CM SERVICE REQUEST with CM SERVICE TYPE IE set to 'emergency call establishment'
  - CM SERVICE REJECT
  - ABORT

References

TS 24.008 clauses 4.1.1.1.1

#### 9.4.3.5.3 Test purpose

To verify that the UE ignores NAS signalling messages when the security mode procedure is not activated.

#### 9.4.3.5.4 Method of test

Initial conditions

- System Simulator:
  - two cells: A and B, belonging to different location areas a and b.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated" on cell A.

Related ICS/IXIT statements

None.

Test Procedure

The location updating procedure is started. Upon reception of LOCATION UPDATING REQUEST message from the UE, the SS responds to LOCATION UPDATING ACCEPT message without the integrity protection. The UE shall ignore this message and restart the location updating procedure at expiry of timer T3211. This time the SS starts the authentication procedure and initiates the integrity protection. After receiving LOCATION UPDATING ACCEPT message, the UE shall respond to TMSI REALLOCATION COMPLETE message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the "non-suitable cell".<br>(see note) |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>If PS mode: a routing area updating procedure should be rejected with cause “GPRS services not allowed”. |
| 3 | → | | LOCATION UPDATING REQUEST | |
| 4 | ← | | AUTHENTICATION REQUEST | |
| 5 | → | | AUTHENTICATION RESPONSE | |
| 6 | | SS | | The SS does not initiate the security mode procedure. |
| 7 | ← | | LOCATION UPDATING ACCEPT | |
| 8 | | UE | | The UE ignores LOCATION UPDATING ACCEPT message. |
| 9 | | SS | | The SS waits T3210 expiry. |
| 10 | | UE | | The UE aborts the RR connection. |
| 11 | | SS | | The SS releases the RRC connection. |
| 12 | | SS | | The SS waits T3211 expiry. |
| 13 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 14 | → | | LOCATION UPDATING REQUEST | |
| 15 | ← | | AUTHENTICATION REQUEST | |
| 16 | → | | AUTHENTICATION RESPONSE | |
| 17 | | SS | | The SS starts the security mode procedure with the integrity protection. |
| 18 | ← | | LOCATION UPDATING ACCEPT | |
| 19 | → | | TMSI REALLOCATION COMPLETE | |
| 20 | | SS | | The SS releases the RRC connection. |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

9.4.3.5.5 Test requirement

At step 8 the UE shall ignore the first LOCATION UPDATING ACCEPT message.

At step 14 the UE shall send LOCATION UPDATING REQUEST message after expiry of timer T3211.

At step 16 the UE shall respond to TMSI REALLOCATION COMPLITE message after the UE receives the second LOCATION UPDATING ACCEPT message.

## 9.4.3.6 Location updating /abnormal cases / CS domain is changed from barred to unbarred because of domain specific access control

### 9.4.3.6.1 Definition

This test is applicable for Rel-5 UEs supporting DSAC and Rel-6 or later UEs.

### 9.4.3.6.2 Conformance requirement

TS 24.008 clause 4.1.1.2.2

> If the PS or CS domain is barred because of domain specific access control, a GPRS MS operating in mode A or B in a network that operates in mode II or III shall use the MM specific procedures or GMM specific procedures, respectively, in the domain which is unbarred. If the MS detects that a domain changes from barred to unbarred, it shall behave as specified in subclauses 4.4.4.9, 4.5.1.2, 4.7.3.1.5, 4.7.5.1.5, and 4.7.13.5.

TS 24.008 clause 4.4.4.9

a) Access barred because of common access class control or CS domain specific access control

   The location updating procedure is not started. The mobile station stays in the current serving cell and applies normal cell reselection process. The procedure is started as soon as possible and if still necessary (when the barred state is ended or because of a cell change).

#### Reference

3GPP TS 24.008 clause 4.1.1.2.2; 4.4.4.9

### 9.4.3.6.3 Test purpose

To test the behaviour of the UE if the CS domain is barred and if it is then changed from barred to unbarred because of domain specific access control in a network that operates mode II.

### 9.4.3.6.4 Method of test

#### Initial condition

An access class x (0-15) is arbitrarily chosen. The USIM is programmed with this access class x. The UE is informed that the CS domain specific access class x is barred in cell B.

System Simulator:

- two cells, A and B, belonging to different location areas with location area identification a and b of the same PLMN and operating in network operation mode II;
- IMSI attach/detach is allowed in both cells;
- the T3212 time-out value is 1/10 hour in both cells.

User Equipment:

> The UE has a valid TMSI (=TMSI1) and CKSN (=CKSN1). It is "idle updated" on cell A.

#### Related ICS/IXIT statements

Support of DSAC Yes/No.

#### Test procedure

1) The UE is made to select cell B.The CS domain specific access class x is barred: the UE shall not initiate a location updating procedure in the CS domain.
2) The SS informs the UE by paging that the CS domain specific access class x is not barred: The UE shall initiate a location updating procedure. The SS checks, by paging, that the UE has stored the newly allocated TMSI. The RRC CONNECTION is released.

#### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the "non-suitable cell".<br>(see note) |
| 2 | | UE | | The UE shall not initiate a location updating procedure as CS domain specific access class x is barred .<br>If PS mode: a routing area updating procedure should be performed. |
| 3 | | SS | | The SS informs the UE by paging that the CS domain specific access class x is not barred anymore. |
| 4 | | UE | | The UE shall initiate a location updating procedure. |
| 5 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to: Registration. |
| 6 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = CKSN1, "location area identification" = a, "mobile station classmark 1" as given by the ICS and "mobile identity" = TMSI1. The MM message is included in the RRC message INITIAL DIRECT TRANSFER with the CN domain identity set to CS domain. |
| 7 | | SS | | The SS starts integrity protection. |
| 8 | ← | | LOCATION UPDATING ACCEPT | "Mobile identity" = new TMSI (=TMSI2), LAI = b. |
| 9 | → | | TMSI REALLOCATION COMPLETE | |
| 9a | | | | The SS releases the RRC Connection. |
| 10 | | SS | | SS waits 5 seconds to guarantee that the UE is in service. |
| 11 | ← | | Mobile terminated establishment of RRC Connection | See TS 34.108 clause 7.1.2<br>"Initial UE identity" IE contains the new TMSI (= TMSI2) and the new LAI (=b).<br>Establishment Cause: Terminating Conversational Call or Supplementary Service □Terminating High Priority Signalling or SMS□Terminating Low Priority Signalling. |
| 12 | → | | PAGING RESPONSE | "Mobile identity" IE contains the new TMSI (= TMSI2). |
| 13 | | SS | | The SS releases the RRC Connection. |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".<br>Only one operation is applicable at step 11 based on the type of CS call that is being made. | | | | |

Specific message contents

None.

9.4.3.6.1.5 Test requirements

At step 2, cell B is serving cell, the CS domain specific access class x is barred:

- the UE shall not use the specific MM location updating procedure.

At step 6, cell B is serving cell, the CS domain specific access class x is not barred anymore:

- the UE shall initiate a location updating procedure.

## 9.4.4 Location updating / release / expiry of T3240

9.4.4.1 Definition

9.4.4.2 Conformance requirement

The UE receiving a LOCATION UPDATING ACCEPT message shall start T3240: it shall abort the RR connection at the expiry of timer T3240.

References

TS 24.008 clauses 4.4.4.8 and 11.2.

#### 9.4.4.3 Test purpose

To verify that the UE aborts the RR-connection at the expiry of timer T3240.

#### 9.4.4.4 Method of test

Initial conditions

- System Simulator:
  - two cells: A and B, belonging to different location areas a and b.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated" on cell A.

Related ICS/IXIT statements

None.

Test Procedure

A normal location updating procedure is performed. The RR-connection is not released by the SS within the timer T3240. It is checked that the UE aborts the RR-connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the "non-suitable cell".<br>(see note 1) |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>If PS mode: a routing area updating procedure should be performed. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | |
| 5a | | SS | | The SS starts integrity protection. |
| 6 | ← | | LOCATION UPDATING ACCEPT | |
| 7 | | SS | | The SS waits T3240 expiry. |
| 8 | → | | SIGNALLING CONNECTION RELEASE INDICATION | The UE shall abort the RR connection.<br>(see note 2)<br>CN domain identity = CS domain |
| 9 | | SS | | The SS releases the RRC connection. |
| 10 | | | Void | |

NOTE1: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".

NOTE2: At the expiration of T3240, as per TS 24.008, RR connection shall be aborted. In UMTS, UE cannot release RRC connection on its own. Instead, UE can abort the RR connection ("CS signalling connection") and send a Signalling Connection Release Indication to the UTRAN, in order to initiate the release of RRC connection.

Specific message contents

None.

#### 9.4.4.5 Test requirement

At step 8 the UE shall abort the RRC connection.

## 9.4.5 Location updating / periodic

### 9.4.5.1 Location updating / periodic spread

#### 9.4.5.1.1 Definition

#### 9.4.5.1.2 Conformance requirement

1) The UEs shall perform spreading of the time before performing a periodic location updating when the location updating timer value is reduced.

2) The UE shall reset timer T3212 when the UE is deactivated, and shall start with a value between zero and the broadcasted value when reactivated in the same cell, IMSI attach being forbidden.

3) When activated the UE shall start timer T3212 with a value randomly drawn in the allowed range.

NOTE: This conformance requirement is not covered by a test purpose. It is intended to be covered by a manufacturer declaration.

References

TS 24.008 clause 4.4.2.

#### 9.4.5.1.3 Test purpose

1) To check that when the location updating timer is reduced, the timer running in the UE is started with a value depending on the current timer value and the new broadcasted T3212 value.

2) To verify that when the UE is reactivated in the same cell (as the one in which it was deactivated), IMSI attach being forbidden, the UE starts the timer T3212 with a value between zero and the broadcasted value.

NOTE: It is not tested that the value is random.

#### 9.4.5.1.4 Method of test

Initial conditions

- System Simulator:
  - one cell, T3212 is set to 30 minutes;
  - IMSI attach is allowed in the cell;
- User Equipment:
  - the UE is deactivated. The stored MCC, MNC and LAC correspond to the broadcasted values. The stored update status is "updated".

Related ICS/IXIT statements

None.

Test procedure

The UE is activated. It performs IMSI attach. 3 minutes after the end of the IMSI attach procedure, the value of T3212 is set to 6 minutes. The UE shall perform periodic location updating 6 minutes after the end of the IMSI attach procedure.

Then, the IMSI attach/detach is forbidden. T3212 is still set to 6 minutes.

The UE is deactivated. The UE is reactivated. It is checked that the UE performs a periodic location updating during the 6 minutes following activation.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is activated. |
| 2 | → | | RRC CONNECTION REQUEST | "Establishment cause": Registration. |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | LOCATION UPDATING REQUEST | "location updating type": IMSI attach. |
| 6 | ← | | LOCATION UPDATING ACCEPT | |
| 7 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 8 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 9 | SS | | | 3 minutes after step 8 the value of T3212 is set to 6 minutes. |
| 10 | → | | RRC CONNECTION REQUEST | "Establishment cause": Registration. This message shall be sent by the UE between 5 minutes 45 s and 6 minutes 15 s after step 8. |
| 11 | ← | | RRC CONNECTION SETUP | |
| 12 | → | | RRC CONNECTION SETUP COMPLETE | |
| 13 | → | | LOCATION UPDATING REQUEST | "location updating type": periodic updating. |
| 14 | ← | | LOCATION UPDATING ACCEPT | |
| 15 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 16 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 17 | SS | | | IMSI attach/detach is not allowed. |
| 18 | UE | | | The UE is deactivated. |
| 19 | UE | | | The UE is activated. |
| 20 | SS | | | The SS waits until the periodic location updating. |
| 21 | → | | RRC CONNECTION REQUEST | "Establishment cause": Registration. This message shall arrive during the 6 minutes following the UE activation. |
| 22 | ← | | RRC CONNECTION SETUP | |
| 23 | → | | RRC CONNECTION SETUP COMPLETE | |
| 24 | → | | LOCATION UPDATING REQUEST | "Location updating type" = periodic. |
| 25 | ← | | LOCATION UPDATING ACCEPT | |
| 26 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 27 | → | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

#### 9.4.5.1.5 Test requirement

At step 10 the UE shall send an RRC CONNECTION REQUEST for a periodic location updating.

At step 21 the UE shall send an RRC CONNECTION REQUEST for a periodic location updating.

### 9.4.5.2 Location updating / periodic normal / test 1

#### 9.4.5.2.1 Definition

#### 9.4.5.2.2 Conformance requirement

1 The UE shall stop and reset the timer T3212 of the periodic location updating procedure when the first MM message is received or SECURITY mode setting is completed in the case of MM connection establishment.

2 The UE shall stop and reset the timer T3212 of the periodic location updating procedure when the UE has responded to paging and thereafter has received the first correct L3 message that is not an RRC message.

References

TS 24.008 clause 4.4.2.

#### 9.4.5.2.3 Test purpose

To verify that the UE stops and resets the timer T3212 of the periodic location updating procedure when:

- the first MM-message is received in the case of MM-connection establishment, security mode being not set;
- the UE has responded to paging and the first correct L3 message that is not an RRC message is received.

NOTE: T3212 is stopped when the MM-idle state is left and restarted when the MM sublayer returns to that state, substate NORMAL SERVICE or ATTEMPTING TO UPDATE. As a consequence, the exact time when T3212 is reset between those two events cannot be tested.

#### 9.4.5.2.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters;
  - IMSI attach/detach is allowed;
  - the T3212 time-out value is 2/10 hour.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated".

Related ICS/IXIT statements

None.

Test procedure

An UE originated MM connection is established and cleared. The RRC CONNECTION is released. It is checked that the UE performs a periodic location updating 12 minutes after the release of the RRC CONNECTION.

One minute after the periodic location updating, the UE is paged, it sends a RRC CONNECTION REQUEST message and the SS responds with an RRC CONNECTION SETUP message, a call is established and then cleared. It is checked that the UE performs a periodic location updating 12 minutes after the release of the link.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | A MO CM connection is attempted. |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | CM SERVICE REQUEST | |
| 6 | ← | | CM SERVICE REJECT | cause #17 (network failure). |
| 7 | | SS | | The SS releases the RRC connection. |
| 8 | | | Void | |
| 9 | | SS | | The SS waits until the periodic location updating. |
| 10 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>This message shall arrive between 11 minutes 45 s and 12 minutes 15 s after the last release of the RRC connection by the SS. |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | → | | LOCATION UPDATING REQUEST | "Location updating type" = periodic. |
| 14 | ← | | LOCATION UPDATING ACCEPT | |
| 15 | | SS | | The SS releases the RRC connection. |
| 16 | | | Void | |
| 17 | | SS | | The SS waits 1 minute. |
| 18 | ← | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>"Mobile identity" = IMSI.<br>"Establishment cause": Terminating Conversational Call. |
| 19 | → | | PAGING RESPONSE | |
| 20 | ← | | AUTHENTICATION REQUEST | |
| 21 | → | | AUTHENTICATION RESPONSE | |
| 22 | | SS | | The SS releases the RRC connection. |
| 23 | | | Void | |
| 24 | | SS | | The SS waits until the periodic location updating. |
| 25 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>This message shall arrive between 11 minutes 45 s and 12 minutes 15 s after the last release of the RRC connection by the SS. |
| 26 | | | Void | |
| 27 | | | Void | |
| 28 | → | | LOCATION UPDATING REQUEST | "Location updating type" = periodic. |
| 29 | ← | | LOCATION UPDATING ACCEPT | |
| 30 | | SS | | The SS releases the RRC connection. |
| 31 | | | Void | |

Specific message contents

None.

9.4.5.2.5 Test requirement

At step 10 the UE shall initiate an RRC CONNECTION REQUEST 12 minutes after the release of the RRC CONNECTION (at step 7).

At step 25 the UE shall initiate an RRC CONNECTION REQUEST 12 minutes after the release of the RRC CONNECTION (at step 22).

## 9.4.5.3 Location updating / periodic normal / test 2

### 9.4.5.3.1 Definition

### 9.4.5.3.2 Conformance requirement

When a LOCATION UPDATING ACCEPT or a LOCATION UPDATING REJECT message is received, the timer T3212 is stopped and reset and the UE shall perform a periodic location updating after T3212 expiry.

References

TS 24.008 clause 4.4.2.

### 9.4.5.3.3 Test purpose

To verify that the UE stops and resets the timer T3212 of the periodic location updating procedure when a LOCATION UPDATING ACCEPT message is received.

NOTE: T3212 is stopped when the MM-idle state is left and restarted when the MM sublayer returns to that state, substate NORMAL SERVICE or ATTEMPTING TO UPDATE. As a consequence, the exact time when T3212 is reset between those two events cannot be tested.

### 9.4.5.3.4 Method of test

Initial conditions

- System Simulator:
  - 2 cells, IMSI attach/detach is allowed in both cells;
  - T3212 is set to 6 minutes;
  - two cells: A and B of the same PLMN, belonging to different location areas with LAI a and b.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated" on cell A.

Related ICS/IXIT statements

USIM removal possible while UE is powered Yes/No.

Switch off on button yes/No.

Test procedure

A normal location updating is performed. The RRC CONNECTION is released. One minute later, the UE is deactivated, then reactivated in the same cell. It is checked that the UE performs an IMSI attach and a periodic location updating 6 minutes after the IMSI attach.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell B. |
| 1 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell A to the "non-suitable cell". (see note) |
| 2 | | SS | | The SS verifies that the IE "establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>If PS mode: a routing area updating procedure should be performed. |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal. |
| 5a | | SS | | The SS starts integrity protection. |
| 6 | ← | | LOCATION UPDATING ACCEPT | |
| 7 | | SS | | The SS releases the RRC connection. |
| 8 | | | Void | |
| 9 | | SS | | The SS waits until the periodic location updating. |
| 10 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>This message shall arrive between 5 minutes 45s and 6 minutes 15 s after the last release of the RRC connection by the SS. |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | → | | LOCATION UPDATING REQUEST | "Location updating type" = periodic. |
| 14 | ← | | LOCATION UPDATING ACCEPT | |
| 15 | | SS | | The SS releases the RRC connection. |
| 16 | | | Void | |
| 17 | | UE | | If possible (see ICS) USIM removal is performed.<br>Otherwise if possible (see ICS) switch off is performed.<br>Otherwise the power is removed.<br>A Detach Request can be received in PS mode.<br>Steps 18 to 23 may be performed or not depending on the action made in step 17. |
| 18 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Detach". |
| 19 | | | Void | |
| 20 | | | Void | |
| 21 | → | | IMSI DETACH INDICATION | |
| 22 | | SS | | The SS releases the RRC connection. |
| 23 | | | Void | |
| 24 | | UE | | Depending on what has been performed in step 17 the UE is brought back to operation.<br>The subsequent GMM attach should be rejected if received in the PS mode. |
| 25 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 26 | | | Void | |
| 27 | | | Void | |
| 28 | → | | LOCATION UPDATING REQUEST | "Location updating type" = IMSI attach. |
| 28a | | SS | | The SS starts integrity protection. |
| 29 | ← | | LOCATION UPDATING ACCEPT | |
| 30 | | SS | | The SS releases the RRC connection. |
| 31 | | | Void | |
| 32 | | SS | | The SS waits until the periodic location updating. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 33 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>This message shall arrive between 5 minutes 45 s and 6 minutes 15s after the last release of the RRC connection by the SS. |
| 34 | | | Void | |
| 35 | | | Void | |
| 36 | → | | LOCATION UPDATING REQUEST | "Location updating type" = periodic. |
| 37 | ← | | LOCATION UPDATING ACCEPT | |
| 38 | | SS | | The SS releases the RRC connection. |
| 39 | | | Void | |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

9.4.5.3.5 Test requirement

After step 28 the UE shall performs an IMSI attach.

After step 33 the UE shall performs periodic location updating 6 minutes after step 28.

## 9.4.5.4 Location updating / periodic search for HPLMN or higher priority PLMN when in VPLMN

### 9.4.5.4.1 Location updating / periodic search for HPLMN or higher priority PLMN / UE waits time T

#### 9.4.5.4.1.1 Definition

#### 9.4.5.4.1.2 Conformance requirement

1. In the case that the mobile has a stored "Equivalent PLMNs" list the mobile shall only select a PLMN if it is of a higher priority than those of the same country as the current serving PLMN which are stored in the "Equivalent PLMNs" list.

2. In steps i), ii) and iii) of the Automatic Network Selection Mode Procedure, the MS shall limit its attempts to access higher priority PLMNs to PLMNs of the same country as the current serving VPLMN;

3. If the MS is in idle mode in a VPLMN, the MS shall periodically attempt to obtain service on its HPLMN or higher priority PLMN listed in "user controlled PLMN selector" or "operator controlled PLMN selector". The MS shall make an attempt if the MS is on the VPLMN at time T after the last attempt.

References

TS 22.011 clause 3.2.2.5. and TS 23.122 4.4.3.3.

#### 9.4.5.4.1.3 Test purpose

To verify that if a UE is camped on a VPLMN it will perform a search for higher priority networks (e.g HPLMN) with a periodicity of T, which is the Search Period stored in the USIM.

This test will confirm that, if a cell from a new PLMN becomes available, within a time T the UE will perform a location updating on it only if the following requirements are met:

- The PLMN of this new cell if from the same country as the VPLMN, and

- This PLMN is the HPLMN stored in the USIM, or has a higher priority than the serving VPLMN or any PLMN from the country of the VPLMN that is stored in the equivalent PLMN list.

9.4.5.4.1.4 Method of test

Initial conditions

- System Simulator:
  - four cells A, B, C and D, belonging to different location areas with location identification a, b, c and d. Their country codes and mobile network codes are defined as follows:

| Cell | Cell No. | MCC | MNC | Test channel |
|---|---|---|---|---|
| A | 1 | 001 | 01 | 1 |
| B | 2 | 022 | 02 | 2 |
| C | 7 | 001 | 10 | 3 |
| D | 4 | 001 | 11 | 4 |
| E | 3 | 001 | 30 | - |

  - the test channels are defined in clause 6, table 6.3
  - initially Cells A, B and C shall not be broadcasting.
  - Cell E is not activated.
- User Equipment:
  - the UE is switched off. The HPLMN Search Period on the USIM shall be set to 6 minutes. The location area information on the USIM is "deleted".
  - The following USIM fields are configured:

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{HPLMNwAcT}$ | 1st | A |
| $EF_{PLMNwAcT}$ | 1st | B |
| | 2nd | E |
| $EF_{OPLMNwAcT}$ | 1st | C |
| | 2nd | D |

In the table PLMN X is the PLMN code from cell X (see above).

Related ICS/IXIT statements

Switch on/off button Yes/No.

Test Procedure

Only Cell D shall be broadcasting. The UE shall be switched on either by using the Power Switch or by applying power. A normal location updating is performed on Cell D. The SS shall include the PLMN E in the list of equivalent PLMNs that is sent in the Location Update Accept message. Cells B and C shall be made available after 7 minutes from switched on, thus ensuring the UE fails to find any higher priority PLMN during its first attempt. It is verified that the UE does not perform a location update request on Cell B or C (waiting for at least 7 minutes after broadcasting of Cells B and C).Then Cell A is also made available, and it is verified that the UE performs a location update request on Cell A within 7 minutes after broadcasting of Cell A. During the test, SIB18 is not broadcast in cell A, B, C, D.

Expected sequence

| Step | Direction | | Message | Contents |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages shall be sent and received on Cell D. |
| 1 | | SS | | Set the cell type of Cell A to the "non-suitable cell".<br>Set the cell type of Cell B to the "non-suitable cell".<br>Set the cell type of Cell C to the "non-suitable cell".<br>Set the cell type of Cell D to the "Suitable neighbour cell". (see note) |
| 1a | | UE | | The UE is switched on by either using the Power Switch or by applying power.<br>If PS Mode: The subsequent GMM attach should be accepted with "Equivalent PLMNs": PLMN E.. |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | LOCATION UPDATING REQUEST | "Location Update Type": Normal. |
| 5a.1 | ← | | AUTHENTICATION REQUEST | |
| 5a.2 | → | | AUTHENTICATION RESPONSE | |
| 5a | | SS | | The SS starts integrity protection. |
| 6 | ← | | LOCATION UPDATING ACCEPT | "Equivalent PLMNs": PLMN E |
| 7 | | SS | | The SS releases the RRC connection. |
| 8 | | | Void | |
| 8a | | SS | | The SS waits a period of 7 minutes after the UE is switched on, this allowing the UE to make its first periodic search. |
| 8b | | SS | | Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell". (see note) |
| 8b.1 | | | Void | |
| 8b.2 | | | Void | |
| 8b.3 | | | Void | |
| 8b.4 | | | Void | |
| 8b.5 | | | Void | |
| 8b.6 | | | Void | |
| 8c | | SS | | The SS shall wait for 7 minutes during which no messages should be received. |
| 9 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". (see note)<br>Within 7 minutes after step 9, the following messages shall be sent and received on Cell A. The lower boundary of time T shall not be checked in this test step. |
| 10 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>If PS mode: a routing area updating procedure should be performed. |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | → | | LOCATION UPDATING REQUEST | "Location Update Type": normal. |
| 13a | | SS | | The SS starts integrity protection. |
| 14 | ← | | LOCATION UPDATING ACCEPT | |
| 15 | | SS | | The SS releases the RRC connection. |
| 16 | | | Void | |
| NOTE: The definitions for "Suitable neighbour cell" and "non-suitable cell"are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

9.4.5.4.1.5 Test requirement

1. At step 8c, the UE shall not send any LOCATION UPDATING REQUEST on cell C.

2. At step 8c, the UE shall not send any LOCATION UPDATING REQUEST on cell B.
3. At step 13 the UE shall send a LOCATION UPDATING REQUEST message on Cell A within 7mins.

#### 9.4.5.4.2 Location updating / periodic search for HPLMN or higher priority PLMN / UE in manual mode

##### 9.4.5.4.2.1 Definition

##### 9.4.5.4.2.2 Conformance requirement

The periodic attempts shall only be performed if in automatic mode when the UE is in a VPLMN.

References

TS 22.011 clause 3.2.2.5. and TS 23.122 clause 4.4.3.3.

##### 9.4.5.4.2.3 Test purpose

To verify that no Search for HPLMN or Higher Priority PLMN is performed when the UE is not in automatic mode.

##### 9.4.5.4.2.4 Method of test

Initial conditions

- System Simulator:
  - two cells A and B, belonging to different location areas with location identification a and b. Cell A shall be a cell of the HPLMN and Cell B shall be a cell of the VPLMN with a Country Code the same as that of Cell A. Initially Cell A shall not be broadcasting. IMSI attach/detach is not allowed on either cell.

  NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.
- User Equipment:
  - the UE is switched off. The HPLMN Search Period on the USIM shall be set to 6 minutes. The location area information on the USIM is "deleted".

Related ICS/IXIT statements

Switch on/off button Yes/No.

Test Procedure

Only Cell B shall be broadcasting. The UE shall be switched on either by using the Power Switch or by applying power. A normal location updating is performed on Cell B. The UE is forced into manual selection mode. Cell A is made available. It is verified that the UE does not attempt to perform a location update on Cell A.

Expected sequence

| Step | Direction | | Message | Contents |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages shall be sent and received on Cell B. |
| 1 | | SS | | Set the cell type of Cell A to the "non-suitable cell". Set the cell type of Cell B to the "Serving cell". (see note) |
| 1a | UE | | | The UE is switched on by either using the Power Switch or by applying power. |
| 2 | → | | RRC CONNECTION REQUEST | "Establishment cause": Registration. |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | LOCATION UPDATING REQUEST | "Location Update Type": Normal. |
| 6 | ← | | LOCATION UPDATING ACCEPT | |
| 7 | ← | | RRC CONNECTION RELEASE | After sending this message the SS waits for the disconnection of the main signalling link. |
| 8 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 9 | UE | | | The UE is forced into manual selection mode. |
| 10 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". (see note) If PS mode: a routing area updating procedure should be performed. |
| 11 | | SS | | The SS waits a period of 6 minutes. During this time no messages shall be received on Cell A. |
| NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

9.4.5.4.2.5 Test requirement

At step 11 the UE shall not attempt to perform a location update.

### 9.4.5.4.3 Location updating / periodic search for HPLMN or higher priority PLMN / UE waits at least two minutes and at most T minutes

9.4.5.4.3.1 Definition

9.4.5.4.3.2 Conformance requirement

After switch on, the UE waits at least 2 minutes and at most T minutes before the first Search for HPLMN or higher priority PLMN is attempted.

References

TS 22.011 clause 3.2.2.5. and TS 23.122 4.4.3.3.

9.4.5.4.3.3 Test purpose

To verify that the UE waits at least 2 minutes and at most T minutes before attempting its first Search for HPLMN or higher priority PLMN.

9.4.5.4.3.4 Method of test

Initial Conditions

- System Simulator:

- two cells A and B, belonging to different location areas with location identification a and b. Cell A shall be a cell of the HPLMN and Cell B shall be a cell of the VPLMN with a Country Code the same as that of Cell A. Initially Cell A shall not be broadcasting. IMSI attach/detach is not allowed on either cell.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

- User Equipment:
  - the UE is switched off. The HPLMN Search Period on the USIM shall be set to 6 minutes. The location area information on the USIM is "deleted".

### Related ICS/IXIT statements

Switch on/off button Yes/No.

### Test Procedure

Only Cell B shall be broadcasting. The UE shall be switched on either by using the Power Switch or by applying power. A normal location updating is performed on Cell B. Cell A is made available. It is verified that the UE attempts to perform a location update on Cell A, after at least 2 minutes have passed following power on and at most T minutes after successful registration.

### Expected sequence

| Step | Direction | | Message | Contents |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages shall be sent and received on Cell B. |
| 1 | | SS | | Set the cell type of Cell A to the "non-suitable cell". Set the cell type of Cell B to the "Serving cell". (see note) |
| 1a | UE | | | The UE is switched on by either using the Power Switch or by applying power. |
| 2 | → | | RRC CONNECTION REQUEST | "Establishment cause": Registration. |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | LOCATION UPDATING REQUEST | "Location Update Type": Normal. |
| 6 | ← | | LOCATION UPDATING ACCEPT | |
| 7 | ← | | RRC CONNECTION RELEASE | After sending this message the SS waits for the disconnection of the main signalling link. |
| 8 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 9 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". (see note) If PS mode: a routing area updating procedure should be performed. |
| 10 | | SS | | The SS waits a period of 2 minutes after the UE is switched on. During this time no messages shall be received on Cell A. The following messages shall be sent and received on cell A. Within 6 minutes after step 6 the following messages shall be sent and received on cell A. |
| 11 | → | | RRC CONNECTION REQUEST | "Establishment cause": Registration. This message shall be sent between 2 and 6 minutes after step 1 |
| 12 | ← | | RRC CONNECTION SETUP | |
| 13 | → | | RRC CONNECTION SETUP COMPLETE | |
| 14 | → | | LOCATION UPDATING REQUEST | "Location Update Type": normal. |
| 15 | ← | | LOCATION UPDATING ACCEPT | |
| 16 | ← | | RRC CONNECTION RELEASE | After sending this message the SS waits for the disconnection of the main signalling link. |
| 17 | → | | RRC CONNECTION RELEASE COMPLETE | |

NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".

Specific message contents

None.

9.4.5.4.3.5 Test requirement

At step 11 the UE shall attempt to perform a location update.

### 9.4.5.4.4 Location updating/periodic search of the higher priority PLMN, VPLMN in a foreign country – higher priority/UE is in automatic mode.

9.4.5.4.4.1 Definition

9.4.5.4.4.2 Conformance requirement

A UE in Automatic Mode shall make periodic attempts to look for a higher priority PLMN of the same country as the currently received PLMN.

References

TS 22.011 clause 3.2.2.5

9.4.5.4.4.3 Test purpose

To verify that the UE selects the highest priority network if the HPLMN/higher priority PLMN Search is performed, when a UE is receiving foreign country's VPLMN and UE is in automatic mode.

9.4.5.4.4.4 Method of test

Initial conditions

- System Simulator:
- Three cells A, B and C, belonging to different location areas with location identification a, b and c. Cell A shall be a cell of the HPLMN, Cell B shall be a cell of the VPLMN with a different Mobile Country Codes that of Cell A and Cell C shall be a cell of a higher priority VPLMN but of the same Mobile Country Code as Cell B. Initially Cell A and Cell C shall not be broadcasting. IMSI attach/detach is not allowed on any cell.
- User Equipment:
  - the UE is switched off. The HPLMN Search Period on the USIM shall be set to 6 minutes. The location area information on the USIM is "deleted". The PLMN Selector on the USIM shall contain entries for both PLMNs of Cell B and Cell C, where PLMN C is of a higher priority than PLMN B.

Related ICS/IXIT statements

Switch on/off button Yes/No.

Test Procedure

Only Cell B shall be broadcasting. The UE shall be switched on either by using the Power Switch or by applying power. A normal location updating is performed on Cell B. The MS is in automatic selection mode. Cell A and Cell C are made available. It is verified that the MS does not attempt to perform a location update on Cell A. It is verified that the MS does perform a location update on Cell C.

Expected sequence

| Step | Direction | | Message | Contents |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages shall be sent and received on Cell B. |
| 1 | | SS | | Set the cell type of Cell A to the "non-suitable cell". Set the cell type of Cell B to the "Serving cell". Set the cell type of Cell C to the "non-suitable cell". (see note) |
| 1a | | UE | | The UE is switched on by either using the Power Switch or by applying power. |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | → | | LOCATION UPDATING REQUEST | "Location Update Type": Normal. |
| 4 | ← | | AUTHENTICATION REQUEST | |
| 5 | → | | AUTHENTICATION RESPONSE | |
| 6 | | SS | | The SS starts integrity protection. |
| 7 | ← | | LOCATION UPDATING ACCEPT | |
| 8 | | SS | | The SS releases the RRC connection. |
| 9 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell C to the "Suitable neighbour cell". (see note) |
| 10 | | SS | | The SS waits a period of 6 minutes. During this time no messages shall be received on Cell A but the following messages are received on Cell C. |
| 11 | → | | LOCATION UPDATING REQUEST | "Location Update Type": normal. |
| 12 | | SS | | The SS starts integrity protection. |
| 13 | ← | | LOCATION UPDATING ACCEPT | |
| 14 | | SS | | The SS releases the RRC connection. |
| NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

9.4.5.4.4.5 Test requirement

1. At step 10, the UE shall not send any LOCATION UPDATING REQUEST on Cell A.
2. At step 11, the UE shall send a LOCATION UPDATING REQUEST message on Cell C.

### 9.4.5.4.5 Location updating/periodic search of the higher priority PLMN, VPLMN in a foreign country – lower priority/UE is in automatic mode.

9.4.5.4.5.1 Definition

9.4.5.4.5.2 Conformance requirement

A UE in Automatic Mode shall make periodic attempts to look for a higher priority PLMN of the same country as the currently received PLMN. The MS shall not select a lower priority PLMN of the same country as the currently received PLMN.

References

TS 22.011 clause 3.2.2.5

9.4.5.4.5.3 Test purpose

To verify that the UE remains on the highest priority network if the HPLMN/higher priority PLMN Search is performed, when a UE is receiving foreign country's VPLMN and UE is in automatic mode.

9.4.5.4.5.4 Method of test

Initial conditions

- System Simulator:
- Three cells A, B and C, belonging to different location areas with location identification a, b and c. Cell A shall be a cell of the HPLMN, Cell B shall be a cell of the VPLMN with a different Mobile Country Codes that of Cell A and Cell C shall be a cell of a lower priority VPLMN but of the same Mobile Country Code as Cell B. Initially Cell A and Cell C shall not be broadcasting. IMSI attach/detach is not allowed on any cell.
- User Equipment:
  - the UE is switched off. The HPLMN Search Period on the USIM shall be set to 6 minutes. The location area information on the USIM is "deleted". The PLMN Selector on the USIM shall contain entries for both PLMNs of Cell B and Cell C, where PLMN B is of a higher priority than PLMN C.

Related ICS/IXIT statements

Switch on/off button Yes/No.

Test Procedure

Only Cell B shall be broadcasting. The UE shall be switched on either by using the Power Switch or by applying power. A normal location updating is performed on Cell B. The MS is in automatic selection mode. Cell A and Cell C are made available. It is verified that the MS does not attempt location update either on Cell A or Cell C.

Expected sequence

| Step | Direction | | Message | Contents |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages shall be sent and received on Cell B. |
| 1 | | SS | | Set the cell type of Cell A to the "non-suitable cell".<br>Set the cell type of Cell B to the "Serving cell".<br>Set the cell type of Cell C to the "non-suitable cell".<br>(see note) |
| 1a | UE | | | The UE is switched on by either using the Power Switch or by applying power. |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | → | | LOCATION UPDATING REQUEST | "Location Update Type": Normal. |
| 4 | ← | | AUTHENTICATION REQUEST | |
| 5 | → | | AUTHENTICATION RESPONSE | |
| 6 | | SS | | The SS starts integrity protection. |
| 7 | ← | | LOCATION UPDATING ACCEPT | |
| 8 | | SS | | The SS releases the RRC connection. |
| 9 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>(see note) |
| 10 | | SS | | The SS waits a period of 6 minutes. During this time no messages shall be received on Cell A and Cell C. |
| NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

9.4.5.4.5.5 Test requirement

1. At step 10, the UE shall not send any LOCATION UPDATING REQUEST on Cell A or Cell C.

### 9.4.5.4.6 Location updating/periodic search of the higher priority PLMN, VPLMN in a foreign country – List of EPLMN contain HPLMN /UE is in automatic mode.

#### 9.4.5.4.6.1 Definition

#### 9.4.5.4.6.2 Conformance requirement

A UE in Automatic Mode shall make periodic attempts to look for a higher priority PLMN of the same country as the currently registered PLMN. For the ranking of PLMNs the UE shall use the order used in subclause 3.2.2.2. In the case that the MS has stored a list of equivalent PLMNs, the UE shall only select a PLMN if it has a higher priority than all the PLMNs, in the list of equivalent PLMNs, which are of the same country as the currently registered PLMN

The Mobile Equipment stores a list of "equivalent PLMNs". This list is replaced or deleted at the end of each location update procedure, routing area update procedure and GPRS attach procedure. The stored list consists of a list of equivalent PLMNs as downloaded by the network plus the PLMN code of the network that downloaded the list. All PLMNs in the stored list are regarded as equivalent to each other for PLMN selection, cell selection/re-selection and handover.

References

TS 22.011 clause 3.2.2.5
TS 23.122 clause 4.4.3

#### 9.4.5.4.6.3 Test purpose

To verify that, in automatic mode, when registered on a VPLMN of a country different to it’s HPLMN, the MS only selects the highest priority network available from upon those of the same country as the serving PLMN. It also verifies that the MS does not take into account PLMNs, including the HPLMN, which are included in the Equivalent PLMN list.

#### 9.4.5.4.6.4 Method of test

Initial conditions

- System Simulator:
- Three cells; Cell A be mapped to Cell 1, Cell B mapped to Cell 4, Cell C mapped to Cell 7, as found in TS 34.108 clause 6.1.4.2.
- Three cells A, B and C, belonging to different location areas with location identification a, b and c. Cell A shall be a cell of the HPLMN, Cell B shall be a cell of the VPLMN with a different Mobile Country Codes that of Cell A and Cell C shall be a cell of a higher priority VPLMN but of the same Mobile Country Code as Cell B. Initially Cell A and Cell C shall not be broadcasting. IMSI attach/detach is not allowed on any cell.
- User Equipment:
    - the UE is switched off. The HPLMN Search Period on the USIM shall be set to 6 minutes. The location area information on the USIM is "deleted". The PLMN Selector on the USIM shall contain entries for both PLMNs of Cell B and Cell C, where PLMN C is of a higher priority than PLMN B.

Related ICS/IXIT statements

Switch on/off button Yes/No.

Test Procedure

Only Cell B shall be broadcasting. The UE shall be switched on either by using the Power Switch or by applying power. A normal location updating is performed on Cell B. During the location update procedure Cell B sends an equivalent PLMN list which includes the HPLMN (Cell A). The MS is in automatic selection mode. The MS receives and store the equivalent PLMN list. Cell A and Cell C are made available. It is verified that the MS does not attempt to perform a location update on Cell A. It is verified that the MS does perform a location update on Cell C.

Expected sequence

| Step | Direction | | Message | Contents |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages shall be sent and received on Cell B. |
| 1 | | SS | | Set the cell type of Cell A to the "non-suitable cell".<br>Set the cell type of Cell B to the "Serving cell".<br>Set the cell type of Cell C to the "non-suitable cell".<br>(see note) |
| 1a | | UE | | The UE is switched on by either using the Power Switch or by applying power.<br>Any subsequent GMM attach from the UE shall be accepted by the SS including the same EPLMN list as sent in the LAU accept in step 7. |
| 2 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | → | | LOCATION UPDATING REQUEST | "Location Update Type": Normal. |
| 4 | ← | | AUTHENTICATION REQUEST | |
| 5 | → | | AUTHENTICATION RESPONSE | |
| 6 | | SS | | The SS starts integrity protection. |
| 7 | ← | | LOCATION UPDATING ACCEPT | EPLMN list containing HPLMN (Cell A) |
| 8 | | SS | | The SS releases the RRC connection. |
| 9 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>(see note) |
| 10 | | SS | | The SS waits a period of 6 minutes. During this time no messages shall be received on Cell A but the following messages are received on Cell C. |
| 11 | → | | LOCATION UPDATING REQUEST | "Location Update Type": normal.<br>Any ROUTING AREA UPDATE REQUEST from the UE shall be accepted by the SS. |
| 12 | | SS | | The SS starts integrity protection. |
| 13 | ← | | LOCATION UPDATING ACCEPT | |
| 14 | | SS | | The SS releases the RRC connection. |
| NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

Contents of System Information Block type 3 (Cell B)

The same content as in default message in TS 34.108 section 6.1.0b with the followinge exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| - Sintersearch | Not present | |

Contents of System Information Block type 4 (Cell B)

The same content as in default message in TS 34.108 section 6.1.0b with the followinge exceptions:

| Information Element | Value/remark | Version |
|---|---|---|
| - Sintersearch | Not present | |

9.4.5.4.6.5 Test requirement

1. At step 10, the UE shall not send any LOCATION UPDATING REQUEST on Cell A.
2. At step 11, the UE shall send a LOCATION UPDATING REQUEST message on Cell C.

## 9.4.6 Location updating / interworking of attach and periodic

### 9.4.6.1 Definition

### 9.4.6.2 Conformance requirement

1) If the UE is in service state NO CELL AVAILABLE, LIMITED SERVICE, PLMN SEARCH or PLMN SEARCH-NORMAL SERVICE when the timer T3212 expires the location updating procedure is delayed until this service state is left.

2) The T3212 time-out value shall not be changed in the NO CELL AVAILABLE, LIMITED SERVICE, PLMN SEARCH and PLMN SEARCH-NORMAL SERVICE states.

3) If the selected cell is in the location area where the UE is registered and IMSI ATTACH is not required and timer T3212 has not expired, then the state is NORMAL SERVICE.

References

1) TS 24.008 clause 4.4.2.

2) TS 24.008 clause 4.4.2.

3) TS 24.008 clause 4.2.1.1.

### 9.4.6.3 Test purpose

1) To check that if the PLU timer expires while the UE is out of coverage, the UE informs the network of its return to coverage.

2) To check that the PLU timer is not disturbed by cells of forbidden PLMNs.

3) To check that if the PLU timer does not expire while out of coverage and if the mobile returns to the LA where it is updated, the UE does not inform the network of its return to coverage.

### 9.4.6.4 Method of test

Initial conditions

- System Simulator:
  - two cells, a and b, of different PLMNs;
  - T3212 is set to 12 minutes on cell a;
  - T3212 is set to 6 minutes on cell b;
  - IMSI attach is allowed in both cells.

  NB: i) Cell b will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.
- User Equipment:
  - the UE is deactivated. The PLMN of cell b is entered in the USIM's forbidden PLMN list.

Related ICS/IXIT statements

None.

Test procedure

The UE is activated and placed in automatic network selection mode. It performs IMSI attach. 1 minute after the end of the IMSI attach procedure, cell a is made unavailable. The UE shall not location update on cell b. 8 minutes after the end of the IMSI attach procedure, cell a is made available. The UE shall not location update on cell a before 11,75 minutes after the end of the IMSI attach procedure. The UE shall perform a periodic location update on cell a between 11,75 minutes and 12,25 minutes after the end of the IMSI attach procedure.

3 minutes after the end of the periodic location updating procedure, cell a is made unavailable. The UE shall not location update on cell b. 14 minutes after the end of the periodic location updating procedure, cell a is made available and cell b is made unavailable. The UE shall perform a location update on cell a before 17 minutes after the end of the periodic location updating procedure.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | SS | | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 1a | UE | | | The UE is activated in automatic network selection mode. |
| 2 | → | | RRC CONNECTION REQUEST | "Establishment cause": Registration. |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | LOCATION UPDATING REQUEST | "location updating type": IMSI attach. |
| 6 | ← | | LOCATION UPDATING ACCEPT | |
| 7 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 8 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 9 | SS | | | The SS waits 1 minute after step 8.<br>Set the cell type of cell A to the "non-suitable cell". (see note) |
| 10 | SS | | | The SS waits 8 minutes after step 8.<br>Set the cell type of cell A to the "Serving cell". (see note) |
| 11 | → | | RRC CONNECTION REQUEST | This message shall be sent by the UE between 11 minutes 45s and 12 minutes 15s after step 8. |
| 12 | ← | | RRC CONNECTION SETUP | |
| 13 | → | | RRC CONNECTION SETUP COMPLETE | |
| 14 | → | | LOCATION UPDATING REQUEST | "location updating type": periodic. |
| 15 | ← | | LOCATION UPDATING ACCEPT | |
| 16 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 17 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 18 | SS | | | The SS waits 3 minutes after step 17.<br>Set the cell type of cell A to the "non-suitable cell". (see note) |
| 19 | SS | | | The SS waits 14 minutes after step 17.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "non-suitable cell". (see note) |
| 20 | → | | RRC CONNECTION REQUEST | This message shall be sent by the UE before 17 minutes after step 17. |
| 21 | ← | | RRC CONNECTION SETUP | |
| 22 | → | | RRC CONNECTION SETUP COMPLETE | |
| 23 | → | | LOCATION UPDATING REQUEST | "Location updating type" = periodic. |
| 24 | ← | | LOCATION UPDATING ACCEPT | |
| 25 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 26 | → | | RRC CONNECTION RELEASE COMPLETE | |
| 27 | UE | | | The UE shall not initiate an RRC connection establishment. This is checked during 12 minutes. |
| NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 9.4.6.5 Test requirement

1) At step 20 the UE shall send an RRC CONNECTION REQUEST and at step 23 the UE shall attempt to perform a location update.

2) At step 11 the UE shall send an RRC CONNECTION REQUEST and at step 14 the UE shall attempt to perform a location update.

3) At step 27 the UE shall not initiate an RRC connection during 12minutes.

### 9.4.7 Location Updating / accept with replacement or deletion of Equivalent PLMN list

#### 9.4.7.1 Definition

Test to verify that the UE replaces or deletes its stored Equivalent PLMN list when no Equivalent PLMN list is included in the LOCATION UPDATING ACCEPT message from the network during a Location Update.

#### 9.4.7.2 Conformance requirement

1) The stored list in the mobile station shall be replaced on each occurrence of the LOCATION UPDATING ACCEPT message.

2) If no equivalent PLMN list is contained in the LOCATION UPDATING ACCEPT message, then the stored equivalent PLMN list in the mobile station shall be deleted.

References

TS 24.008 4.4.4.6

#### 9.4.7.3 Test purpose

1) To verify that the UE replaces its stored equivalent PLMN list if the equivalent PLMN list is contained in the LOCATION UPDATING ACCEPT message received from the network during a location updating procedure.

2) To verify that the UE deletes its stored equivalent PLMN list if no equivalent PLMN list is contained in the LOCATION UPDATING ACCEPT message received from the network during a location updating procedure.

#### 9.4.7.4 Method of test

Initial conditions:

- System Simulator:
  - two cells: A and B, with different PLMN Codes (PLMN 1 and PLMN 2 respectively);
  - Qqualmin values for cells A and B are -16 dB (FDD only)

  NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.
- User Equipment:
  - the UE is switched off. The HPLMN is PLMN 3 and no other information about PLMN priorities or forbidden PLMNs is stored in the USIM. The equivalent PLMN list in the mobile station is empty.
  - the UE is "Idle updated" on cell B.

Related ICS/IXIT statement(s)

Switch off on button Yes/No.

Test procedure

When the UE is initially switched on it will perform a normal location updating in Cell A, which is the only suitable cell available. The LOCATION UPDATING ACCEPT message sent by the SS on reception of the LOCATION UPDATING REQUEST message shall include PLMN 2 in the equivalent PLMN list. When Cell B is made available and its RF signal level is higher than that of Cell A the UE will perform a normal location updating in this cell. The LOCATION UPDATING ACCEPT message sent by the SS shall include PLMN 1 in the equivalent PLMN list. When Cell B is made unavailable the UE shall perform a normal location updating again in Cell A, but in this ocassion the LOCATION UPDATING ACCEPT message shall contain an empty equivalent PLMN list. When Cell B is made available again and its RF signal level is higher than that of Cell A the UE shall not perform a normal location updating in this cell since it is not in the ePLMN list.

Expected Sequence

| Step | Direction | | Message | Contents |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages shall be sent and received on Cell A |
| 1 | | SS | | Set the cell type of Cell A to the "Suitable neighbour cell". Set the cell type of Cell B to the "non-suitable cell". (see note) |
| 2 | UE | | | The UE is switched on by either using the Power Switch or by applying power. |
| 3 | | SS | RRC CONNECTION REQUEST | The IE "Establishment cause" in the received RRC CONNECTION REQUEST message is not checked. |
| 4 | | | Void | |
| 5 | | | Void | |
| 6 | → | | LOCATION UPDATING REQUEST | "Location Update Type": normal. |
| 6a | | SS | | The SS starts integrity protection. |
| 7 | ← | | LOCATION UPDATING ACCEPT | Equivalent PLMNs: PLMN 2 |
| 8 | | SS | | The SS releases the RRC connection. |
| 9 | | | Void | |
| | | | | The following messages shall be sent and received on Cell B. |
| 10 | | SS | | Set the cell type of Cell B to the "Serving cell". (see note) |
| 11 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 12 | | | Void | |
| 13 | | | Void | |
| 14 | → | | LOCATION UPDATING REQUEST | "Location Update Type": normal. |
| 14a | | SS | | The SS starts integrity protection. |
| 15 | ← | | LOCATION UPDATING ACCEPT | Equivalent PLMNs : PLMN 1 |
| 16 | | SS | | The SS releases the RRC connection. |
| 17 | | | Void | |
| | | | | The following messages shall be sent and received on Cell A. |
| 18 | | SS | | Set the cell type of Cell B to the "non-suitable cell". (see note) |
| 19 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 20 | | | Void | |
| 21 | | | Void | |
| 22 | → | | LOCATION UPDATING REQUEST | "Location Update Type": normal. |
| 22a | | SS | | The SS starts integrity protection. |
| 23 | ← | | LOCATION UPDATING ACCEPT | Equivalent PLMNs : empty |
| 24 | | SS | | The SS releases the RRC connection. |
| 25 | | | Void | |
| 26 | | SS | | Set the cell type of Cell B to the "Serving cell". (see note) |
| 27 | | SS | | The SS shall wait for 7 minutes during which no messages should be received. |

NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".

Specific message contents

None.

#### 9.4.7.5 Test requirements

1) At step 14 the UE shall perform a normal location updating in Cell B.

2) At step 27 the UE shall not perform a normal location updating in Cell B.

### 9.4.8 Location Updating after UE power off

#### 9.4.8.1 Definition

Test to verify that the UE stores the equivalent PLMN list at UE power off and uses the stored equivalent PLMN list after UE switch on.

#### 9.4.8.2 Conformance requirement

The equivalent PLMN list shall be stored in the mobile station while switched off so that it can be used for PLMN selection after switch on.

References

TS 24.008 4.4.4.6

#### 9.4.8.3 Test purpose

To verify that the UE stores the equivalent PLMN list at UE switch off and uses the stored equivalent PLMN list after UE switch on.

#### 9.4.8.4 Method of test

Initial conditions

- System Simulator:
  - three cells: A, B and C. Cell A belongs to PLMN1 which is HPLMN. Cell B belongs to PLMN2. Cell C belongs to PLMN3.

  NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.2.

  ii) Cell C will be mapped to Cell 7 as found in TS 34.108 clause 6.1.4.2.
- User Equipment:
  - the UE has a valid TMSI(= TMSI1) and CKSN(= CKSN1). It is "idle updated" on cell B,
  - the UE is equipped with a USIM containing default values except for those listed below.

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{HPLMNwAcT}$ | 1st | PLMN 1 |
| $EF_{PLMNwAcT}$ | Empty | |
| $EF_{OPLMNwAcT}$ | 1st | PLMN 3 |
| | 2nd | PLMN 2 |

UE is previously registered on PLMN 2.

Related ICS/IXIT statement(s)

Switch off on button Yes/No.

Test procedure

The UE is switched on and is in idle-updated state on Cell B. Cell A and C are not available. Cell type of Cell A is then changed to make it available, cell types of Cell B are C are changed to make them unavailable. The UE will perform a normal location updating in Cell A, which is the only suitable cell available and belongs to the HPLMN. The

LOCATION UPDATING ACCEPT message sent by the SS shall include PLMN2 in the equivalent PLMN list. The UE shall be switched-off. Cell A shall be made unavailable and Cells B and C shall be made available. When the UE is switched-on again, the UE shall perform a normal location updating in Cell B and not in Cell C because PLMN2 is stored in the UE equivalent PLMN list.

Expected Sequence

| Step | Direction | | Message | Contents |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages shall be sent and received on Cell A |
| 1 | | SS | | Set the cell type of Cell A to the "Serving cell".<br>Set the cell type of Cell B and Cell C to the "non-suitable cell".<br>(see note) |
| 2 | UE | | | void |
| 3 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration".<br>If PS mode: a routing area updating procedure should be perfomed. |
| 4 | | | Void | |
| 5 | | | Void | |
| 6 | → | | LOCATION UPDATING REQUEST | "Location Update Type": normal. |
| 6a | ← | | AUTHENTICATION REQUEST | |
| 6b | → | | AUTHENTICATION RESPONSE | |
| 6c | | SS | | The SS starts integrity protection. |
| 7 | ← | | LOCATION UPDATING ACCEPT | Equivalent PLMN List: PLMN 2 |
| 8 | | SS | | The SS releases the RRC connection. |
| 9 | UE | | | If possible (see ICS) switch off is performed. Otherwise the power is removed. Steps 9a to 9c may be performed or not depending on the action made in step 9.<br>A Detach Request can be received in PS mode. |
| 9a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Detach". |
| 9b | → | | IMSI DETACH INDICATION | |
| 9c | | SS | | The SS releases the RRC connection. |
| | | | | The following messages shall be sent and received on Cell B. |
| 10 | | | Void | |
| 11 | | SS | | Set the cell type of Cell A to the "non-suitable cell".<br>Set the cell type of Cell B to the "suitable neighbour cell".<br>Set the cell type of Cell C to the "suitable neighbour cell".<br>(see note) |
| 12 | UE | | | Depending on what has been performed in step 9 the UE is brought back to operation.<br>The subsequent GMM attach should be rejected if received in the PS mode. |
| 13 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 14 | | | Void | |
| 15 | | | Void | |
| 16 | → | | LOCATION UPDATING REQUEST | "Location Update Type": normal. |
| 16a | | | | The SS starts integrity protection. |
| 17 | ← | | LOCATION UPDATING ACCEPT | |
| 18 | | SS | | The SS releases the RRC connection. |
| 19 | | | Void | |
| NOTE: The definitions for "Serving cell", "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 9.4.8.5 Test requirements

At step 16 the UE shall perform a normal location updating in Cell B.

### 9.4.9 Location Updating / Accept, Interaction between Equivalent PLMNs and Forbidden PLMNs.

#### 9.4.9.1 Definition

Test to verify that, before storing the 'equivalent PLMN list' received from the network during a Location Update, the UE removes any PLMN already included in the 'forbidden PLMN list'. Consequently the UE shall not select a PLMN Equivalent to the registered PLMN if it is included in the 'forbidden PLMN list' in the USIM.

#### 9.4.9.2 Conformance requirement

The mobile station shall store the equivalent PLMNs list, as provided by the network, except that any PLMN code that is already in the "forbidden PLMN list" shall be removed from the "equivalent PLMNs" list before it is stored by the mobile station.

References

TS 24.008, 4.4.4.6

#### 9.4.9.3 Test purpose

To verify that the UE shall not select a forbidden PLMN even though it is included in the equivalent PLMN list provided by the network because forbidden PLMNs shall not be stored in the mobile's equivalent PLMN list.

#### 9.4.9.4 Method of test

Initial conditions

- System Simulator:
  - two cells: A, and B. Cell A belongs to PLMN1. Cell B belongs to PLMN2.

  NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.
- User Equipment:
  - the UE is switched off;
  - the UE is in automatic PLMN selection mode.
  - the UE is equipped with a USIM containing default values.
  - prior to performing the actual test procedure PLMN2 is set as forbidden PLMN, so that the USIM will contain the following information

| USIM field | Priority | PLMN |
|---|---|---|
| $EF_{FPLMN}$ | PLMN 2 | |

Related ICS/IXIT statement(s)

Switch off on button Yes/No.

Test procedure

Cells A and B are made available. When the UE is switched-on it will perform a normal location updating in Cell A, since Cell B belongs to a forbidden PLMN. The SS will respond sending a LOCATION UPDATING ACCEPT message that includes PLMN2 in the equivalent PLMN list. However the UE shall not store PLMN 2 in its equivalent

PLMN list as it is a forbidden PLMN. Therefore, when Cell A is made unavailable the UE will not select the only remaining cell (Cell B), remaining in limited service state.

Expected Sequence

| Step | Direction | | Message | Contents |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages shall be sent and received on Cell A |
| 1 | | SS | | Set the cell type of Cell A to the "Suitable neighbour cell". Set the cell type of Cell B to the "Suitable neighbour cell". (see note) |
| 2 | UE | | | The UE is switched on by either using the Power Switch or by applying power. |
| 3 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | | | Void | |
| 5 | | | Void | |
| 6 | → | | LOCATION UPDATING REQUEST | "Location Update Type": normal. |
| 6a | | SS | | The SS starts integrity protection. |
| 7 | ← | | LOCATION UPDATING ACCEPT | Equivalent PLMN List: PLMN 2 |
| 8 | | SS | | The SS releases the RRC connection. |
| 9 | | | Void | |
| 10 | | SS | | Set the cell type of Cell A to the "non-suitable cell". (see note) |
| 11 | | SS | | The SS shall wait for 7 minutes during which no messages should be received. |
| NOTE: The definitions for "Suitable neighbour cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

9.4.9.5 Test requirements

At step 11 the UE shall not perform a normal location updating in Cell B.

# 9.5 MM connection

## 9.5.1 Introduction

[tbd]

## 9.5.2 MM connection / establishment in security mode

9.5.2.1 Definition

9.5.2.2 Conformance requirement

1) The UE shall be able to correctly set up an MM connection in a Mobile Originating CM connection attempt and send a CM SERVICE REQUEST message with CKSN information element as stored in the USIM and Mobile Identity information element set to the TMSI.

2) The UE shall be able to interpret security mode setting as acceptance of its CM service request i.e. send a CM message.

References

TS 24.008 clause 4.5.1.1.

### 9.5.2.3 Test purpose

To verify that the UE can correctly set up an MM connection in an origination and interpret security mode setting as acceptance of its CM service request.

### 9.5.2.4 Method of test

#### Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated".

#### Related ICS/IXIT statements

None.

#### Test Procedure

A mobile originating CM connection is initiated. After the UE has sent the CM SERVICE REQUEST message to the SS, an authentication procedure and a security mode setting procedure are performed. Then, the UE sends a CM message and the SS clears the call and releases the RRC CONNECTION.

#### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | A MO CM connection is attempted. |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | CM SERVICE REQUEST | |
| 6 | ← | | AUTHENTICATION REQUEST | |
| 7 | → | | AUTHENTICATION RESPONSE | |
| 8 | SS | | | The SS starts ciphering and integrity protection. |
| 9 | | | Void | |
| A10 | → | | SETUP | The SS expects a SETUP message from the UE, when a call is attempted |
| A11 | ← | | RELEASE COMPLETE | "Cause" IE: "unassigned number". |
| B10 | → | | REGISTER | The SS expects a REGISTER message from the UE, when a Non call related Supplementary service is attempted |
| B11 | ← | | RELEASE COMPLETE | |
| C10 | → | | CP-DATA | The SS expects a CP-DATA message from the UE, when SMS is attempted |
| C11 | ← | | CP-ACK | |
| C12 | ← | | CP-DATA | |
| C13 | → | | CP-ACK | |
| 14 | SS | | | The SS releases the RRC connection. |
| 15 | | | Void | |
| Note: Only one set of messages are applicable at step A10, B10 or C10 based on the type of CS call that is being made | | | | |

#### Specific message contents

None.

### 9.5.2.5 Test requirement

At step 5 the UE shall send the CM SERVICE REQUEST message to the SS.

At step A10 or B10 or C10 the UE shall send a CM message and the SS shall release the RRC connection (step 14).

## 9.5.3 Void

## 9.5.4 MM connection / establishment rejected

### 9.5.4.1 Definition

### 9.5.4.2 Conformance requirement

If a CM SERVICE REJECT message is received by the mobile station, timer T3230 shall be stopped, the requesting CM sublayer entity informed. Then the mobile station shall proceed as follows:

- If the cause value is not #4 or #6 the MM sublayer returns to the previous state (the state where the request was received). Other MM connections shall not be affected by the CM SERVICE REJECT message.

References

TS 24.008 clause 4.5.1.1.

### 9.5.4.3 Test purpose

To verify that the UE stops timer T3230, informs the requesting CM sublayer entity and returns to the previous state.

### 9.5.4.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated".

Related ICS/IXIT statements

None.

Test Procedure

A mobile originating CM connection is attempted. After the UE has sent the CM SERVICE REQUEST message to the SS, the SS responds with a CM SERVICE REJECT message with reject cause "requested service option not subscribed". It is checked that the UE does not send a layer 3 message via the rejected MM connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | A MO CM connection is attempted |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | CM SERVICE REQUEST | A mobile originating CM connection is attempted |
| 6 | ← | | CM SERVICE REJECT | "Reject cause" IE: "requested service option not subscribed". |
| 7 | SS | | | The UE shall not send a layer 3 message. This is checked during 5 s.<br>Note: During this period, a new mobile originating CM connection should not be attempted, since then UE would send a new CM SERVICE REQUEST. |
| 8 | SS | | | SS releases the RRC connection. |

Specific message contents

None.

#### 9.5.4.5 Test requirement

The UE shall attempt MO CM connection (step 1).

At step 5 the UE shall send a CM SERVICE REQUEST.

After step 6 the UE shall not send a layer 3 message.

### 9.5.5 MM connection / establishment rejected cause 4

#### 9.5.5.1 Definition

#### 9.5.5.2 Conformance requirement

The CM SERVICE REQUEST message contains the:

- mobile identity according to clause 10.5.1.4;
- mobile station classmark 2;
- ciphering key sequence number; and
- CM service type identifying the requested type of transaction (e.g. mobile originating call establishment, emergency call establishment, short message service, supplementary service activation, location services)

…

If a CM SERVICE REJECT message is received by the mobile station, timer T3230 shall be stopped, the requesting CM sublayer entity informed. Then the mobile station shall proceed as follows:

…

- If cause value #4 is received, the mobile station aborts any MM connection, deletes any TMSI, LAI and ciphering key sequence number in the SIM, changes the update status to NOT UPDATED (and stores it in the SIM according to clause 4.1.2.2), and enters the MM sublayer state WAIT FOR NETWORK COMMAND. If subsequently the RR connection is released or aborted, this will force the mobile station to initiate a normal location updating). Whether the CM request shall be memorized during the location updating procedure, is a choice of implementation.

References

TS 24.008 clause 4.5.1.1.

#### 9.5.5.3 Test purpose

To verify that the UE can correctly set up an MM connection in a Mobile Originating CM connection attempt and send a CM SERVICE REQUEST message with CKSN information element as stored in the USIM and Mobile Identity information element set to TMSI.

To verify that the UE, when receiving a CM SERVICE REJECT message with reject cause "IMSI unknown in VLR" shall wait for the network to release the RRC connection.

To verify that the UE shall then perform a normal location updating procedure.

#### 9.5.5.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated".

Related ICS/IXIT statements

None.

Test Procedure

A mobile originating CM connection is attempted. After the UE has sent the CM SERVICE REQUEST message to the SS, the SS responds with a CM SERVICE REJECT message with reject cause "IMSI unknown in VLR". On receipt of this message, the UE shall delete any TMSI, LAI, cipher key and cipher key sequence number. The RRC CONNECTION is released. It is checked that the UE performs a normal location updating procedure.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | A MO CM connection is attempted. |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | CM SERVICE REQUEST | CKSN = initial value, Mobile identity = TMSI. |
| 6 | ← | | CM SERVICE REJECT | "Reject cause" = "IMSI unknown in VLR". |
| 7 | | SS | | SS releases the RRC connection. |
| 8 | | | Void | |
| 9 | | SS | | SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to: "Registration". |
| 10 | | | Void | |
| 11 | | | Void | |
| 12 | → | | LOCATION UPDATING REQUEST | "Ciphering key sequence number" = "No key is available". "Mobile identity" = IMSI. "Location area identification" = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE). |
| 13 | ← | | AUTHENTICATION REQUEST | |
| 14 | → | | AUTHENTICATION RESPONSE | |
| 14a | ← | | SECURITY MODE COMMAND | |
| 14b | → | | SECURITY MODE COMPLETE | |
| 15 | ← | | LOCATION UPDATING ACCEPT | "Mobile identity" = new TMSI. |
| 16 | → | | TMSI REALLOCATION COMPLETE | |
| 17 | | SS | | SS releases the RRC connection. |
| 18 | | | Void | |

Specific message contents

None.

#### 9.5.5.5 Test requirement

1) The UE shall attempt MO CM connection (at step 1) and at step 5 the UE shall send a CM SERVICE REQUEST message with CKSN information element as stored in the USIM and Mobile Identity information element set to the TMSI.

2) At step 6 the SS should send a CM SERVICE REJECT message with reject cause "IMSI unknown in VLR", and at step 9 the UE shall initiate RRC connection establishment with establishment cause set to "Registration".

3) At step 12 the UE send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating type set to "deleted LAI".

## 9.5.6 MM connection / expiry T3230

#### 9.5.6.1 Definition

#### 9.5.6.2 Conformance requirement

At T3230 expiry (i.e. no response is given but an RRC connection is available) the MM connection establishment shall be aborted.

References

TS 24.008 clauses 4.5.1.2 and 11.2.

### 9.5.6.3 Test purpose

To verify that at T3230 expiry, the UE aborts the MM-connection establishment.

### 9.5.6.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE has a valid TMSI. It is "idle updated".

Related ICS/IXIT statements

None.

Test Procedure

A mobile originating CM connection is attempted. After the UE has sent the CM SERVICE REQUEST message to the SS, the SS waits for expiry of timer T3230. It is checked that the UE send a MM STATUS message and waits for the release of the RRC-connection.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | A MO CM connection is attempted. |
| 2 | → | | RRC CONNECTION REQUEST | |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | CM SERVICE REQUEST | |
| 6 | SS | | | The SS waits for expiry of timer T3230. |
| 7 | ← | | CM SERVICE ACCEPT | |
| 8 | → | | MM STATUS | "Reject cause" IE is "message type not compatible with protocol state". |
| 9 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 10 | → | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

### 9.5.6.5 Test requirement

The UE shall attempt MO CM connection (step 1).

At step 8 the UE shall send a MM STATUS message.

## 9.5.7 MM connection / abortion by the network

### 9.5.7.1 MM connection / abortion by the network / cause #6

#### 9.5.7.1.1 Definition

#### 9.5.7.1.2 Conformance requirement

At the receipt of the ABORT message the mobile station shall abort any MM connection establishment or call re-establishment procedure and release all MM connections (if any). If cause value #6 is received the mobile station shall delete any TMSI, LAI and ciphering key sequence number stored in the SIM, set the update status to ROAMING NOT ALLOWED (and store it in the SIM according to clause 4.1.2.2) and consider the SIM invalid until switch off or the SIM is removed. As a consequence the mobile station enters state MM IDLE, substate NO IMSI after the release of the RR connection.

The mobile station shall then wait for the network to release the RR connection - see clause 4.5.3.1.

Reference(s)

TS 24.008 clause 4.3.5.2.

#### 9.5.7.1.3 Test purpose

To check that upon reception of an ABORT message with cause #6 during call establishment:

- the UE does not send any layer 3 message;
- after reception of an ABORT message and after having been deactivated and reactivated, the UE performs location updating using its IMSI as mobile identity and indicates deleted LAI and CKSN;
- the UE does not perform location updating, does not answer to paging with TMSI, rejects any request for mobile originating call except emergency call, does not perform IMSI detach;
- the UE accepts a request for emergency call.

#### 9.5.7.1.4 Method of test

Initial Conditions

- System Simulator:
  - 2 cells, default parameters.
- User Equipment:
  - the UE has a valid TMSI, CKSN and CK, IK. It is "idle updated" on cell B.

Related ICS/IXIT Statement(s)

USIM removal possible while UE is powered Yes/No.

Switch off on button Yes/No.

Support of emergency speech call Yes/No.

Test procedure

A mobile originating CM connection is attempted. Upon reception of the AUTHENTICATION RESPONSE message, the SS sends an ABORT message with cause #6. The SS waits for 5 s. The UE shall not send any layer 3 message. The SS releases the RRC connection.

The SS checks that the UE has entered the state MM IDLE substate NO IMSI, i.e. does not perform normal location updating, does not perform periodic updating, does not respond to paging, rejects any requests from CM entities except emergency calls and does not perform IMSI detach if deactivated.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| The following messages are sent and shall be received on cell B | | | | |
| 1 | UE | | | A mobile originating CM connection is attempted. |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | CM SERVICE REQUEST | CKSN = initial value, Mobile identity = TMSI |
| 6 | ← | | AUTHENTICATION REQUEST | |
| 7 | → | | AUTHENTICATION RESPONSE | |
| 8 | ← | | ABORT | "reject cause" = #6. |
| 9 | SS | | | The SS waits for 5 s. |
| 10 | UE | | | The UE shall not send any layer 3 message during that time. |
| 11 | SS | | | SS releases the RRC connection. |
| 12 | | | Void | |
| The following messages are sent and shall be received on cell A. | | | | |
| 13 | SS | | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "non-suitable cell". (see note) If PS mode: a routing area updating procedure should berejected with cause “GPRS services not allowed”. |
| 14 | UE | | | The UE performs cell reselection according to procedure as specified in (this however is not checked until step 27). The UE shall not initiate an RRC connection establishment on cell A or on cell B. |
| 15 | SS | | | The SS waits at least 7 minutes for a possible periodic updating. |
| 16 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. |
| 17 | ← | | PAGING TYPE 1 | "UE identity" IE contains TMSI. Paging Cause: Terminating Conversational Call. |
| 18 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. This is verified during 3 s. |
| 19 | UE | | | A MO CM connection is attempted. |
| 20 | UE | | | The UE shall not initiate an RRC connection establishment on cell A or on cell B. This is checked during 30 s. |
| 21 | UE | | | If the UE supports emergency speech call (see ICS), an emergency call is attempted. |
| 22 | SS | | | SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to: "Emergency call". |
| 23 | | | Void | |
| 24 | | | Void | |
| 25 | → | | CM SERVICE REQUEST | "CM service type": Emergency call establishment. CKSN = No key is available, Mobile identity = IMEI |
| 26 | ← | | CM SERVICE ACCEPT | |
| 27 | → | | EMERGENCY SETUP | |
| 28 | ← | | RELEASE COMPLETE | "Cause" = unassigned number. |
| 29 | SS | | | SS releases the RRC connection. |
| 30 | | | Void | |
| 31 | UE | | | If possible (see ICS) USIM detachment is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 32 | UE | | | A Detach Request can be received in PS mode. The UE shall not initiate an RRC connection establishment on cell A or on cell B. This is checked during 3 s. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 33 | UE | | | Depending on what has been performed in step 31 the UE is brought back to operation. The subsequent GMM attach should be rejected if received in the PS mode. |
| 34 | SS | | | SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to: "Registration". |
| 35 | | | Void | |
| 36 | | | Void | |
| 37 | → | | LOCATION UPDATING REQUEST | "location updating type" = normal, "CKSN" = no key available, "Mobile Identity" = IMSI, "LAI" = deleted LAI (the MCC and MNC hold the previous values, the LAC is coded FFFE). |
| 38 | ← | | AUTHENTICATION REQUEST | "CKSN" = CKSN1. |
| 39 | → | | AUTHENTICATION RESPONSE | |
| 39a | SS | | | The SS starts integrity protection |
| 40 | ← | | LOCATION UPDATING ACCEPT | "Mobile Identity" = TMSI. |
| 41 | → | | TMSI REALLOCATION COMPLETE | |
| 42 | SS | | | SS releases the RRC connection. |
| 43 | | | Void | |
| NOTE: The definitions for "Serving cell" and "non-suitable cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 9.5.7.1.5 Test requirement

1) At step 10 the UE shall not send any layer 3 message.

2)

   2.1 At step 14 the UE shall not initiate an RRC connection establishment (not perform normal location updating).

   2.2 At step 16 the UE shall not initiate an RRC connection establishment.(not perform periodic location updating).

   2.3 At step 18 the UE shall not initiate an RRC connection establishment (not respond to paging with TMSI).

   2.4 At step 20 the UE shall not initiate an RRC connection establishment (reject any request for Mobile Originating call establishment).

   2.5 At step 32 the UE shall not initiate an RRC connection establishment.(not perform IMSI detach).

3) At step 22 the UE shall initiate RRC connection establishment with the establishment cause set to "emergency call".

4) At step 37 the UE send a LOCATION UPDATING REQUEST message with the Mobile Identity IE set to its IMSI, CKSN IE set to "no key is available" and the Location Updating type set to "deleted LAI".

### 9.5.7.2 MM connection / abortion by the network / cause not equal to #6

#### 9.5.7.2.1 Definition

#### 9.5.7.2.2 Conformance requirement

At the receipt of the ABORT message the mobile station shall abort any MM connection establishment or call re-establishment procedure and release all MM connections (if any). If cause value #6 is received the mobile station shall delete any TMSI, LAI and ciphering key sequence number stored in the USIM, set the update status to ROAMING NOT ALLOWED (and store it in the USIM according to TS 24.008 clause 4.1.2.2) and consider the USIM invalid until switch off or the USIM is removed. As a consequence the mobile station enters state MM IDLE, substate NO IMSI after the release of the RR connection.

The mobile station shall then wait for the network to release the RR connection - see TS 24.008 clause 4.5.3.1.

Reference(s)

TS 24.008 clause 4.3.5.

9.5.7.2.3 Test purpose

To check that when multiple MM connections are established, the UE releases all MM connections upon reception of an ABORT message, in the case when the two MM connections are established for a mobile terminating call and a non call related supplementary service operation.

To check that the TMSI is not deleted from UE after reseption of ABORT message with cause another than #6.

9.5.7.2.4 Method of test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - T3212 is set to 6 minutes.
- User Equipment:
  - the UE is in state U10 of a mobile terminating call.

Related ICS/IXIT Statement(s)

The UE supports a non call related supplementary service operation during an active call Yes/No.

Test procedure

A non call related supplementary service operation is attempted at the UE. Upon reception of the REGISTER message, the SS sends an ABORT message with cause # 17. The SS waits for 5 s. The UE shall not send any layer 3 message. The SS releases the RRC connection. The UE shall perform periodic location updating 6 minutes after the SS releases the RRC connection. TMSI shall be used as Mobile Identity in LOCATION UPDATING REQUEST message.

Expected Sequence

This procedure is performed if the UE supports non call related supplementary service operation.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | A non call related supplementary service operation is attempted at the UE. |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | → | | CM SERVICE REQUEST | The SS verifies that the IE " CM service type" in the received CM SERVICE REQUEST is set to "Supplementary service activation". |
| 6 | ← | | CM SERVICE ACCEPT | |
| 7 | → | | REGISTER | |
| 8 | ← | | ABORT | "reject cause" = #17. |
| 9 | SS | | | The SS waits for 5 seconds.The UE shall not send any layer 3 message during that time. |
| 9a | | | Void | |
| 10 | | | Void | |
| 11 | SS | | | The UE indicates the signalling connection release. The SS releases the RRC connection. |
| 12 | | | Void | |
| 13 | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST is set to "Registration".This message shall be sent by the UE between 5 minutes 45s and 6 minutes 15s after step 11. |
| 14 | → | | LOCATION UPDATING REQUEST | "Location updating type" = periodic updating, "Mobile Identity" = TMSI |
| 15 | ← | | LOCATION UPDATING ACCEPT | "Mobile identity" = TMSI. |
| 16 | SS | | | The SS releases the RRC connection. |

Specific message contents

None.

9.5.7.2.5 Test requirement

After step 8 the UE shall release all MM connections.

After step 12 the UE shall perform periodic location updating with TMSI used as Mobile Identity.

## 9.5.8 MM connection / follow-on request pending

### 9.5.8.1 MM connection / follow-on request pending / test 1

9.5.8.1.1 Definition

9.5.8.1.2 Conformance requirement

The UE shall not attempt to establish a new MM connection after location updating on the same RRC connection if not allowed by the network.

Reference(s)

TS 24.008 clause 4.4.4.6.

9.5.8.1.3 Test purpose

To check that when the network does not include the follow on proceed IE in a LOCATION UPDATING ACCEPT message, a UE that has a CM application request pending does not attempt to establish a new MM connection on that RRC connection.

#### 9.5.8.1.4 Method of test

Initial Conditions

- System Simulator:
  - 1 cell, ATT flag is set to "MSs in the cell shall apply IMSI attach and detach procedure".
- User Equipment:
  - the UE has a valid TMSI and is deactivated.

Related ICS/IXIT Statement(s)

None.

Test procedure

The UE is activated and a CM connection is attempted during the location updating procedure. The SS does not include the follow on proceed information element in the LOCATION UPDATING ACCEPT message. The SS waits for at least 8 s. The UE shall not send any layer 3 message for 8 s.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is activated. |
| 2 | → | | RRC CONNECTION REQUEST | "Establishment cause": Registration. |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | LOCATION UPDATING REQUEST | location updating type = IMSI attach. Then the SS waits for 15 s. During this delay a CM connection is attempted. |
| 6 | ← | | LOCATION UPDATING ACCEPT | follow on proceed IE not included. |
| 7 | SS | | | The SS wait for at least 8 s. |
| 8 | UE | | | The UE shall not send any layer 3 message for 8 s after reception of the LOCATION UPDATING ACCEPT message. |
| 9 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 10 | → | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

#### 9.5.8.1.5 Test requirement

After step 8 the UE shall not send any layer 3 messages.

### 9.5.8.2 MM connection / follow-on request pending / test 2

#### 9.5.8.2.1 Definition

#### 9.5.8.2.2 Conformance requirement

A UE supporting the follow-on request procedure and having a CM connection request pending shall correctly establish an MM connection following a location update when allowed by the network.

Reference(s)

TS 24.008 clause 4.4.4.6.

#### 9.5.8.2.3 Test purpose

To check that when the network includes the follow on proceed IE in a LOCATION UPDATING ACCEPT message, a UE that supports the follow on request procedure and that has a CM application request pending establishes successfully a new MM connection on that RRC connection.

#### 9.5.8.2.4 Method of test

##### Initial Conditions

- System Simulator:
  - 1 cell, ATT flag is set to "MSs in the cell shall apply IMSI attach and detach procedure".
- User Equipment:
  - the UE has a valid TMSI and is deactivated.

##### Related ICS/IXIT Statement(s)

UE supports the follow on request procedure Yes/No.

##### Test procedure

The UE is activated and a CM connection is attempted during the location updating procedure. The SS includes the follow on proceed information element in the LOCATION UPDATING ACCEPT message. The SS waits for at least 8 s.

If the UE supports the follow on request procedure:

- the UE shall send a CM SERVICE REQUEST. Upon reception of that message, the SS sends a CM SERVICE ACCEPT message. The UE shall send an initial CM message. Upon reception of that message, the SS releases the RRC connection.

If the UE does not support the follow on request procedure:

- the UE shall not send any layer 3 message for 8 s.

##### Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is activated. |
| 2 | → | | RRC CONNECTION REQUEST | "Establishment cause": Registration. |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | LOCATION UPDATING REQUEST | Location updating type = IMSI attach.<br>Then the SS waits for 15 s. During this delay a CM connection is attempted. |
| 6 | ← | | LOCATION UPDATING ACCEPT | follow on proceed IE included. |
| | | | | If the UE supports the follow on request procedure (see ICS) steps A7 to A9 are performed, otherwise steps B7 to B8 are performed. |
| A7 | → | | CM SERVICE REQUEST | |
| A8 | ← | | CM SERVICE ACCEPT | |
| A9 | → | | An initial CM message | |
| B7 | SS | | | The SS wait for at least 8 s. |
| B8 | UE | | | The UE shall not send any layer 3 message for 8 s after reception of the LOCATION UPDATING ACCEPT message. |
| 10 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 11 | → | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

9.5.8.2.5 Test requirement

After step 6:

The UE shall send a CM SERVICE REQUEST if the UE supports the follow on request procedure.

The UE shall not send any layer 3 message if the UE does not support the follow on request procedure.

## 9.5.8.3 MM connection / follow-on request pending / test 3

9.5.8.3.1 Definition

9.5.8.3.2 Conformance requirement

1) The UE shall not set the follow on proceed IE in a LOCATION UPDATING REQUEST message if no MM connection request is pending.

2) When the network includes the follow on proceed IE in a LOCATION UPDATING ACCEPT message, a UE that has no CM application request pending shall not attempt to establish a new MM connection on that RRC connection.

3) The UE shall correctly handle a CM connection established by the network on the RRC connection that was used for the location updating procedure.

Reference(s)

TS 24.008 clause 4.4.4.6.

9.5.8.3.3 Test purpose

1) To check that a UE that has no CM application request pending sets the follow on proceed IE to No follow-on request pending in a LOCATION UPDATING REQUEST message.

2) To check that when the network includes the follow on proceed IE in a LOCATION UPDATING ACCEPT message, a UE that has no CM application request pending does not attempt to establish a new MM connection on that RRC connection.

3) To check that the UE accepts establishment by the network of a new MM connection on the existing RRC connection.

9.5.8.3.4 Method of test

Initial Conditions

- System Simulator:
  - 1 cell, ATT flag is set to "MSs in the cell shall apply IMSI attach and detach procedure".
- User Equipment:
  - the UE has a valid TMSI and is deactivated.

Related ICS/IXIT Statement(s)

Supported services on TCH.

Test procedure

The UE is activated. The UE performs location updating. The UE shall set the follow on proceed IE to No follow-on request pending in the LOCATION UPDATING REQUEST message. The SS includes the follow on proceed IE in the LOCATION UPDATING ACCEPT message. The SS waits for 5 s. The UE shall not send any layer 3 message for 5 s. The SS sends a SETUP message to the UE requesting a basic service supported by the UE. The UE shall send either a CALL CONFIRMED message if it supports a service on TCH or a RELEASE COMPLETE with cause #88.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is activated. |
| 2 | → | | RRC CONNECTION REQUEST | "Establishment cause": Registration. |
| 3 | ← | | RRC CONNECTION SETUP | |
| 4 | → | | RRC CONNECTION SETUP COMPLETE | |
| 5 | → | | LOCATION UPDATING REQUEST | "Location updating type" = IMSI attach. The FOR bit is set to No follow-on request pending. |
| 6 | ← | | LOCATION UPDATING ACCEPT | follow on proceed IE is included. |
| 7 | SS | | | The SS wait for 5 s. |
| 8 | UE | | | The UE shall not send any layer 3 message for 5 s after reception of the LOCATION UPDATING ACCEPT message. |
| 9 | ← | | SETUP | |
| A10 | → | | CALL CONFIRMED | If the UE supports a basic service on TCH. |
| B10 | → | | RELEASE COMPLETE | If the UE does not support any basic service on TCH. cause #88. |
| 11 | ← | | RRC CONNECTION RELEASE | After the sending of this message, the SS waits for the disconnection of the main signalling link. |
| 12 | → | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

#### 9.5.8.3.5 Test requirement

At step 8 the UE shall not send any layer 3 message.

After step 9:

The UE shall send CALL CONFIRMED message if the UE supports a basic service on TCH.

The UE shall send RELEASE COMPLETE message if the UE does not support a basic service on TCH.

## 9.5.9 MM connection / abnormal cases / CS domain barred because of domain specific access control

#### 9.5.9.1 Definition

This test is applicable for Rel-5 UEs supporting DSAC and Rel-6 or later UEs.

#### 9.5.9.2 Conformance requirement

TS 24.008 clause 4.1.1.2.2

> If the PS or CS domain is barred because of domain specific access control, a GPRS MS operating in mode A or B in a network that operates in mode II or III shall use the MM specific procedures or GMM specific procedures, respectively, in the domain which is unbarred. If the MS detects that a domain changes from barred to unbarred, it shall behave as specified in subclauses 4.4.4.9, 4.5.1.2, 4.7.3.1.5, 4.7.5.1.5, and 4.7.13.5.

TS 24.008 clause 4.5.1.2

e) Access barred because of CS domain specific access control

> The MM connection establishment shall not be initiated. The MS stays in the current serving cell and applies normal cell reselection process. The MM connection establishment may be initiated by CM layer if it is still necessary, i.e. when access is granted or because of a cell change.

Reference

3GPP TS 24.008 clause 4.1.1.2.2 , 4.5.1.2

### 9.5.9.3 Test purpose

To test the behaviour of the UE if the CS domain is changed from unbarred to barred because of domain specific access control in a network that operates mode II.

### 9.5.9.4 Method of test

Initial condition

An access class x (0-15) is arbitrarily chosen. The USIM is programmed with this access class x.The UE is informed that the CS domain specific access class x is barred.

System Simulator:

One cell operating in network operation mode II.
CS domain specific access class x is barred .

User Equipment:

The UE has a valid TMSI and is in idle state .

Related ICS/IXIT statements

Support of DSAC Yes/No.

Test procedure

1) The CS domain specific access class x is barred: a Mobile Originating CM connection is attempted, but: the MM connection establishment shall not be initiated.

2) The SS informs the UE by paging that the CS domain specific access class x is not barred: a Mobile Originating CM connection is attempted and the MM connection establishment is initiated, the UE sends a CM SERVICE REQUEST message. Then the UE sends a CM message and the SS clears the call and releases the RRC connection.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | An MO CM connection is attempted. |
| 2 | UE | | | Check that no CM service request is sent as CS domain specific access class x is barred . |
| 3 | SS | | | The SS informs the UE by paging that the CS domain changes from barred to unbarred. |
| 4 | UE | | | An MO CM connection is attempted. |
| 5 | SS | | | The IE "Establishment cause" in the received RRC CONNECTION REQUEST is not checked. |
| 6 | → | | CM SERVICE REQUEST | |
| 7 | ← | | AUTHENTICATION REQUEST | |
| 8 | → | | AUTHENTICATION RESPONSE | |
| 9 | SS | | | The SS starts ciphering and integrity protection. |
| A10 | → | | SETUP | The SS expects a SETUP message from the UE, when a call is attempted |
| A11 | ← | | RELEASE COMPLETE | "Cause" IE: "unassigned number". |
| B10 | → | | REGISTER | The SS expects a REGISTER message from the UE, when a Non call related Supplementary service is attempted |
| B11 | ← | | RELEASE COMPLETE | |
| C10 | → | | CP-DATA | The SS expects a CP-DATA message from the UE, when SMS is attempted |
| C11 | ← | | CP-ACK | |
| C12 | ← | | CP-DATA | |
| C13 | → | | CP-ACK | |
| 12 | SS | | | The SS releases the RRC connection. |
| Note: | Only one set of messages are applicable at step A10, B10 or C10 based on the type of CS call that is being made. | | | |

Specific message contents

None.

### 9.5.9.5 Test requirements

At step 2, the CS domain specific access class x is barred , the UE shall:

- not send a CM SERVICE REQUEST message.

At step 6, the CS domain specific access class x is not barred, the UE shall:

- send a CM SERVICE REQUEST message.

# 10 Circuit Switched Call Control (CC)

## 10.1 Circuit switched Call Control (CC) state machine verification

### 10.1.1 General on CC state machine verification

The principle of checking the call control functions consists in the validation of each call control identified state.

State U0 as an initial state is not verified in the tests of 10.1.2 (establishment of an outgoing call).

State U0.1 is never verified.

The steps to be followed within each performed test are:

- bring the UE into the required state;
- trigger the tested event;
- check the UE response and new state.

In clauses 10.1.2 and 10.1.3 different tables are defined to bring the UE into the required initial state. The exact table to be chosen is specified individually in clause "Initial conditions" of "Method of test" for each test case.

For each test, unless otherwise specified, a circuit switched basic service among those supported by the UE but excluding the emergency call teleservice shall be chosen arbitrarily, and the test shall be performed according to that basic service. If the only circuit switched basic service supported by the mobile is emergency call, then the incoming call tests shall not be performed and the other call control tests shall be performed with the EMERGENCY SETUP message replacing the SETUP message.

The initial states are to be checked through STATUS ENQUIRY messages sent by the SS, when feasible. This is not explicitly stated in the tables of expected sequences of signalling messages. The checking of final states are explicitly included into the expected sequences of signalling messages.

The following postamble may be used by the SS to bring UE back to idle mode in those test cases, in which it is not already included into expected sequence of signalling messages:

**Table 10.1.1/1: A postamble to bring the UE back to idle mode.**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| N | <-- | | RRC CONNECTION RELEASE | |
| n+1 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| n+2 | UE | | | the UE releases the RRC connection |

The postamble has not been included into the all of the tests in order to leave an option to concatenate the procedures in the future by using a final state of a test case as an initial state to another one.

For the special case of U0, the state is checked by sending STATUS ENQUIRY message with all possible values of transaction identifier (seven values) as U0 is the only state in which for every TI the UE will answer with release complete with cause #81. If U0 is to be verified when no RRC connection exists, first a mobile terminating radio connection must be established.

The UE responses are either call management messages received by the SS or lower layers functions activated within the UE or MMI actions (e.g. the buzzing of an alerting tone).

A time-out within the UE is triggered by the SS when it does not answer back an UE expected response.

The test sequences may be split in 3 main groups:

- establishment and release of an outgoing call;
- establishment and release of an incoming call;

- in-call functions.

Some test cases use Basic Generic Procedures, "Mobile terminated establishment of Radio Resource Connection" and "Radio Bearer Setup Procedure" defined in TS34.108 clause 7.

General tolerance value on protocol timers defined in TS34.108 is used in some test cases if no specific tolerance on timer is defined in a test case.

Remark on verification of transient states

Some call control states of the user equipment may be transient, depending on implementation, configuration of the UE and previous messages.

If a test starts in a transient state, then the test is executed without verification of the starting state.

## 10.1.2 Establishment of an outgoing call

Initial conditions

As a minimum requirement the UE is updated and has been given a TMSI, a ciphering key and cipher key sequence number, and the layer 2, RRC and MM functionalities have been verified.

There are as many CM initial conditions as states to be checked.

The tables below describe message exchanges which bring the UE in the requested initial states.

A state may be taken as initial only when all the states which lead to this initial states have been validated. The order followed in the test procedure will be U0, U0.1, U1, U3, U4, U10, U12, U19, U11 as seen in the table underneath.

The UE is brought again in the initial state starting with U0 at each new test performed.

**Table 10.1.2/1: Establishment of an outgoing call, procedure 1 (late assignment)**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile Originated establishment of Radio Resource Connection | Establishment cause: Originating Conversational Call |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | -> | | CM SERVICE REQUEST | U0.1 |
| 5 | <- | | AUTHENTICATION REQUEST | |
| 6 | -> | | AUTHENTICATION RESPONSE | |
| 7 | <- | | SECURITY MODE COMMAND | |
| 8 | -> | | SECURITY MODE COMPLETE | |
| 9 | -> | | SETUP | U1 |
| 10 | <- | | CALL PROCEEDING | U3 |
| 11 | <- | | ALERTING | U4 |
| 12 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| 13 | <- | | CONNECT | |
| 14 | -> | | CONNECT ACKNOWLEDGE | U10 |
| A15 | <- | | DISCONNECT | U12 (note 1) |
| B15 | <- | | DISCONNECT | U12 (note 2) |
| B16 | -> | | RELEASE | U19 |
| C15 | | | | MMI action, terminate call |
| C16 | -> | | DISCONNECT | U11 |
| NOTE 1: The Progress Indicator IE with progress description #8 "in band information or appropriate pattern now available" is included. | | | | |
| NOTE 2: The Progress Indicator IE is not included. | | | | |

**Table 10.1.2/2: Void**

**Table 10.1.2/3: Establishment of an outgoing call, procedure 3**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile Originated establishment of Radio Resource ConnectionVoid | Establishment cause: Originating Conversational Call |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | -> | | CM SERVICE REQUEST | U0.1 |
| 4a | <- | | AUTHENTICATION REQUEST | |
| 4b | -> | | AUTHENTICATION RESPONSE | |
| 5 | <- | | SECURITY MODE COMMAND | |
| 6 | -> | | SECURITY MODE COMPLETE | |
| 7 | -> | | SETUP | U1 |
| 8 | | | Void | |
| 9 | | | Void | |
| 10 | <- | | CALL PROCEEDING | U3 |
| 11 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| 12 | <- | | ALERTING | U4 |
| 13 | <- | | CONNECT | |
| 14 | -> | | CONNECT ACKNOWLEDGE | U10 |
| A15 | <- | | DISCONNECT | U12 (note 1) |
| B15 | <- | | DISCONNECT | U12 (note 2) |
| B16 | -> | | RELEASE | U19 |
| C15 | | | | MMI action, terminate call |
| C16 | -> | | DISCONNECT | U11 |

NOTE 1: The Progress Indicator IE with progress description #8 "in band information or appropriate pattern now available" is included.
NOTE 2: The Progress indicator IE is not included.

**Table 10.1.2/4: Establishment of an outgoing call, procedure 4**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile Originated establishment of Radio Resource Connection | Establishment cause: Originating Conversational Call |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | -> | | CM SERVICE REQUEST | U0.1 |
| 5 | <- | | IDENTITY REQUEST | |
| 6 | -> | | IDENTITY RESPONSE | |
| 6a | <- | | AUTHENTICATION REQUEST | |
| 6b | -> | | AUTHENTICATION RESPONSE | |
| 7 | <- | | SECURITY MODE COMMAND | |
| 8 | -> | | SECURITY MODE COMPLETE | |
| 9 | -> | | SETUP | U1 |
| 10 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 (note 1) |
| 11 | <- | | CALL PROCEEDING | U3 |
| 12 | <- | | ALERTING | U4 |
| 13 | <- | | CONNECT | |
| 14 | -> | | CONNECT ACKNOWLEDGE | U10 |
| A15 | <- | | DISCONNECT | U12 (note 2) |
| B15 | <- | | DISCONNECT | U12 (note 3) |
| B16 | -> | | RELEASE | U19 |
| C15 | | | | MMI action, terminate call |
| C16 | -> | | DISCONNECT | U11 |

NOTE 1: Assigned channel is appropriate for the chosen bearer capability (see 10.1).
NOTE 2: The Progress Indicator IE with progress description #8 "in band information or appropriate pattern now available" is included.
NOTE 3: The Progress Indicator IE is not included.

## 10.1.2.1 Outgoing call / U0 null state

### 10.1.2.1.1 Outgoing call / U0 null state / MM connection requested

#### 10.1.2.1.1.1 Definition

The call control entity of the User Equipment requests the MM-sublayer to establish a mobile originating MM-connection.

#### 10.1.2.1.1.2 Conformance requirement

If no RR connection exists, the MM sublayer requests the RR sublayer to establish an RR connection and enters MM sublayer state WAIT FOR RR CONNECTION (MM CONNECTION). This request contains an establishment cause and a CM SERVICE REQUEST message.

References

TS 24.008 clause 5.2.1.1 and clause 4.5.1.1

#### 10.1.2.1.1.3 Test purpose

To verify that upon initiation of an outgoing basic call by user the UE initiates establishment of an MM connection, using as first MM message a CM SERVICE REQUEST message with CM service type "Mobile originating call establishment or packet mode connection establishment" or " Emergency call establishment ".

#### 10.1.2.1.1.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. When the SS receives CM SERVICE REQUEST, the contents of it shall be checked.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | -> | | | UE initiates outgoing call |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | -> | | CM SERVICE REQUEST | SS shall verify the CM service type requested by the UE |
| 5 | <- | | | The SS releases the RRC connection. |

Specific message contents:

None.

#### 10.1.2.1.1.5 Test requirements

After step 2 the UE shall initiate establishment of an MM connection, using as first MM message a CM SERVICE REQUEST message with CM service type "Mobile originating call establishment or packet mode connection establishment" or "Emergency call establishment".

### 10.1.2.2 Outgoing call / U0.1 MM connection pending

#### 10.1.2.2.1 Outgoing call / U0.1 MM connection pending / CM service rejected

##### 10.1.2.2.1.1 Definition

A request for MM connection is rejected by the SS.

##### 10.1.2.2.1.2 Conformance requirement

If a CM SERVICE REJECT message is received by the UE, timer T3230 shall be stopped, the requesting CM sublayer entity informed. Then the UE shall proceed as follows:

- If the cause value is not #4 or #6 the MM sublayer returns to the previous state (the state where the request was received). Other MM connections shall not be affected by the CM SERVICE REJECT message.

- If cause value #4 is received, the UE aborts any MM connection, deletes any TMSI, LAI and ciphering key sequence number in the SIM, changes the update status to NOT UPDATED (and stores it in the SIM according to clause 4.1.2.2), and enters the MM sublayer state WAIT FOR NETWORK COMMAND. If subsequently the RR connection is released or aborted, this will force the UE to initiate a normal location updating). Whether the CM request shall be memorized during the location updating procedure, is a choice of implementation.

- If cause value #6 is received, the UE aborts any MM connection, deletes any TMSI, LAI and ciphering key sequence number in the SIM, changes the update status to ROAMING NOT ALLOWED (and stores it in the SIM according to clause 4.1.2.2), and enters the MM sublayer state WAIT FOR NETWORK COMMAND. The UE shall consider the SIM as invalid for non-GPRS services until switch-off or the SIM is removed.

References

TS 24.008, clause 4.5.1.1.

##### 10.1.2.2.1.3 Test purpose

To verify that a CC entity of the UE in CC-state U0.1, "MM-connection pending", upon the UE receiving a CM SERVICE REJECT message, returns to CC state U0, "Null".

##### 10.1.2.2.1.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U0.1 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. When the SS receives CM SERVICE REQUEST, the contents of it shall be checked. The SS rejects it by CM SERVICE REJECT. The SS performs authentication and starts integrity. Then the SS will check the state of the UE by using STATUS ENQUIRY with all the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | CM SERVICE REJECT | |
| 1a | <- | | AUTHENTICATION REQUEST | |
| 1b | -> | | AUTHENTICATION RESPONSE | |
| 1c | | | | SS starts integrity |
| 2 | <- | | STATUS ENQUIRY | |
| 3 | -> | | RELEASE COMPLETE | cause shall be #81 (invalid TI value) |
| 4 | SS | | | repeat steps 2-3 to cover all the transaction identifiers from 000 ...110 |
| 5 | <- | | | The SS releases the RRC connection. |

Specific message contents:

None.

#### 10.1.2.2.1.5 Test requirements

After step 2 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.2.2.2 Outgoing call / U0.1 MM connection pending / CM service accepted

#### 10.1.2.2.2.1 Definition

A CM request is accepted for the MM-connection by the SS.

#### 10.1.2.2.2.2 Conformance requirement

Having entered the "MM connection pending" state, upon MM connection establishment, the call control entity of the UE sends a setup message to its peer entity. This setup message is

- a SETUP message, if the call to be established is a basic call.

It then enters the "call initiated" state.

References

TS 24.008 clause 5.2.1.

#### 10.1.2.2.2.3 Test purpose

To verify that a CC entity of the UE in CC-state U0.1, "MM connection pending", after completion of the security mode control procedure, sends a SETUP message specifying the Called party BCD number that was entered into the UE and then enters CC state U1, "Call initiated".

#### 10.1.2.2.2.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U0.1 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. When the UE is requesting a MM-connection, the SS performs authentication and starts integrity. The UE shall respond with SETUP. Then the SS will check the state of the call control entity by STATUS ENQUIRY with the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | Void | |
| 1a | <- | | AUTHENTICATION REQUEST | |
| 1b | -> | | AUTHENTICATION RESPONSE | |
| 1c | | | | SS starts integrity |
| 2 | -> | | SETUP | with called party BCD number. |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause shall be #30 (response to enq.) and state U1 call initiated. |

Specific message contents:

None.

10.1.2.2.2.5 Test requirements

After step 1 the UE shall send a SETUP message specifying the Called party BCD number that was entered into the UE and then enter CC state U1, "Call initiated".

## 10.1.2.2.3 Outgoing call / U0.1 MM connection pending / lower layer failure

### 10.1.2.2.3.1 Definition

The call control entity of the UE being in the state, U0.1, a lower layer failure is accomplished at the UE and consequently, communication at layer 3 level with the peer entity is terminated.

### 10.1.2.2.3.2 Conformance requirement

1. RR connection failure or IMSI deactivation

   If an RR connection failure occurs or the IMSI is deactivated during the establishment of an MM connection, the MM connection establishment is aborted, timers T3230 is stopped, and an indication is given to the CM entity that requested the MM connection establishment. This shall be treated as a rejection for establishment of the new MM connection, and the MM sublayer shall release all active MM connections.

2. In CELL_DCH State, after receiving N313 consecutive "out of sync" indications from layer 1 for the established DPCCH physical channel in FDD, and the DPCH associated with mapped DCCHs in TDD, the UE shall:

   1> start timer T313;

   1> upon receiving N315 successive "in sync" indications from layer 1 and upon change of UE state:

      2> stop and reset timer T313.

   1> if T313 expires:

      2> consider it as a "Radio link failure".

   Periods in time where neither "in sync" nor "out of sync" is reported by layer 1 do not affect the evaluation of the number of consecutive (resp. successive) "in sync" or "out of sync" indications.

   When a radio link failure occurs, the UE shall:

   1> clear the dedicated physical channel configuration;

1> perform actions as specified for the ongoing procedure;

1> if no procedure is ongoing or no actions are specified for the ongoing procedure:

2> perform a cell update procedure according to subclause 8.3.1 using the cause "radio link failure".

2. In addition, the cell update procedure also serves the following purposes:

…

- to act on a radio link failure in the CELL_DCH state;

References

TS 24.008, clause 4.5.1.2 a), TS 25.331 clause 8.5.6 and 8.3.1.1.

#### 10.1.2.2.3.3 Test purpose

To verify that the UE with a CC entity in state U0.1, "MM connection pending", aborts MM connection establishment, stops timer T3230 and returns to idle mode in case an RR connection failure occurs.

#### 10.1.2.2.3.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U0.1 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. When the UE has sent a CM SERVICE REQUEST message, the SS release the DPCH configuration to generate a lower layer failure at the UE. The SS waits long enough to enable the UE to perform cell update procedure. The SS sends RRC CONNECTION RELEASE message as a response to the CELL UPDATE message from the UE. The SS checks that the UE does not initiate RRC connection establishment during 60 s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS release the DPCH configuration to generate lower layer failure (radio link failure) |
| 2 | -> | | CELL UPDATE | CCCH |
| 3 | <- | | RRC CONNECTION RELEASE | CCCH |
| 4 | | SS | | For a period of 60 s the SS checks that the UE does not initiate RRC connection establishment (since it should not re-attempt MM connection establishment). |

Specific message contents:

None.

#### 10.1.2.2.3.5 Test requirements

After step 4 the UE shall not initiate RRC connection establishment during 60 s.

### 10.1.2.3 Outgoing call / U1 call initiated

#### 10.1.2.3.1 Outgoing call / U1 call initiated / receiving CALL PROCEEDING

##### 10.1.2.3.1.1 Definition

The call control entity of the UE being in the state, U1, a CALL PROCEEDING message is sent by the SS.

##### 10.1.2.3.1.2 Conformance requirement

Having entered the "call initiated" state, when the call control entity of the UE receives a CALL PROCEEDING message, it shall enter the "mobile originating call proceeding" state.

References

TS 24.008, clauses 5.2.1.1, 5.2.1.2 and 5.2.1.3.

##### 10.1.2.3.1.3 Test purpose

To verify that a CC entity of the UE in CC-state U1, "Call initiated", upon receipt of a CALL PROCEEDING message, enters CC state U3, "Mobile originating call proceeding".

##### 10.1.2.3.1.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U1 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U1. The SS sends a CALL PROCEEDING message to the UE. The SS checks by using the status enquiry procedure that the CC entity has entered the state U3.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | CALL PROCEEDING | tone generation not mandatory |
| 2 | | <- | STATUS ENQUIRY | |
| 3 | | -> | STATUS | cause #30, state U3 |

Specific message contents:

None.

##### 10.1.2.3.1.5 Test requirements

After step 1 the UE shall enter CC state U3, "Mobile originating call proceeding".

### 10.1.2.3.2 Outgoing call / U1 call initiated / rejecting with RELEASE COMPLETE

#### 10.1.2.3.2.1 Definition

The call control entity of the UE being in the state, U1, the call is rejected by a RELEASE COMPLETE message sent by the SS.

#### 10.1.2.3.2.2 Conformance requirement

A call control entity of the UE in any call control state shall, upon receipt of a RELEASE COMPLETE message from its peer entity in the network: stop all running call control timers ; release the MM connection; and return to the "null" state.

References

TS 24.008, clause 5.4.4.1.3.

#### 10.1.2.3.2.3 Test purpose

1) To verify that a CC entity of the UE in CC-state U1, "Call initiated", upon receipt of a RELEASE COMPLETE message with valid cause value, enters CC state U0, "Null".

2) To verify that in returning to idle mode, the CC entities relating to the seven mobile originating transaction identifiers are in state U0, "Null".

#### 10.1.2.3.2.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U1 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U1. The SS sends a RELEASE COMPLETE message to the UE. The SS checks by using the status enquiry procedure that the CC entity has entered the state U0 with all the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | RELEASE COMPLETE | This test case does not require a specific cause value. E.g. value #47, resources unavailable, is a suitable value |
| 2 | | <- | STATUS ENQUIRY | |
| 3 | | -> | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 4 | | SS | | repeat steps 2-3 to cover all the transaction identifiers from 000...110 |
| 5 | | <- | | The SS releases the RRC connection.t |

Specific message contents:

None.

#### 10.1.2.3.2.5 Test requirements

After step 2 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.2.3.3 Outgoing call / U1 call initiated / T303 expiry

#### 10.1.2.3.3.1 Definition

The call control entity of the UE being in the state, U1, if no response is then received from the SS, timer T303 expires at the UE side.

#### 10.1.2.3.3.2 Conformance requirement

If timer T303 elapses in the "call initiated" state before any of the CALL PROCEEDING, ALERTING, CONNECT or RELEASE COMPLETE messages has been received, the clearing procedure described in TS 24.008 clause 5.4 is performed.

References

TS 24.008, clause 5.2.1.1 and clause 5.4.

#### 10.1.2.3.3.3 Test purpose

1) To verify that a CC entity of the UE in CC-state U1, "Call initiated", upon expiry of T303 sends a DISCONNECT message to its peer entity and enters state U11, "Disconnect request".

#### 10.1.2.3.3.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U1 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U1. When T303 expires at the UE, the UE shall send DISCONNECT. The SS checks by using the status enquiry procedure that the CC entity has entered the state U11, disconnect request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS waits for T303 expiry. |
| 2 | -> | | DISCONNECT | Shall be transmitted 30 s after the CM SERVICE REQUEST, check the timer T303 accuracy, see TS34.108 clause 4.2.3. |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, status U11 |

Specific message contents:

None.

10.1.2.3.3.5 Test requirements

After step 1 upon expiry of timer T303 the UE shall send a DISCONNECT message and enter state U11, "Disconnect request".

### 10.1.2.3.4 Outgoing call / U1 call initiated / lower layer failure

#### 10.1.2.3.4.1 Definition

The call control entity of the UE being in the state, U1, a lower layer failure is accomplished at the UE and consequently, communication at layer 3 level with the peer entity is terminated.

#### 10.1.2.3.4.2 Conformance requirement

The MM sublayer shall indicate to all CM entities associated with active MM connections that the MM connection is interrupted, the subsequent action of the MM sublayer (call re-establishment, see TS 24.008 clause 4.5.1.6, or local release) will then depend on the decisions by the CM entities.

References

TS 24.008, clause 4.5.2.3 and 5.2.1.1, TS 25.331 clause 8.3.1 and clause 8.5.6.

#### 10.1.2.3.4.3 Test purpose

To verify that after the UE with a CC entity in state U1 "Call initiated", has detected a lower layer failure and has returned to idle mode, the CC entity is in state U0, "Null".

#### 10.1.2.3.4.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U1 by using table 10.1.2/4.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The UE is brought to the state U1. The SS modifies the scrambling code of downlink transmission (DL

DPCH) to generate a lower layer failure at the UE. The SS waits long enough to enable the UE to perform cell update procedure. The SS sends RRC CONNECTION RELEASE message as a response to the CELL UPDATE message from the UE. The SS re-modifies the scrambling code of downlink transmission (DL DPCH) to the original one and waits 60 s. The SS will check that the UE will not send any message during 60 s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | SS | | | SS modifies the scrambling code of DPCH for generating lower layer failure |
| 2 | -> | | CELL UPDATE | CCCH |
| 3 | <- | | RRC CONNECTION RELEASE | CCCH |
| 4 | SS | | | SS re-modifies the scrambling code of DPCH to the original one. |
| 5 | SS | | | SS waits 60 s.<br>UE shall send no message on DCCH |

Specific message contents:

None.

#### 10.1.2.3.4.5 Test requirements

After step 4 the UE shall not send any message to the SS during 60 s.

### 10.1.2.3.5 Outgoing call / U1 call initiated / receiving ALERTING

#### 10.1.2.3.5.1 Definition

The call control entity of the UE being in the state, U1, an ALERTING message is sent to the UE as an indication that a call is being alerted at a called end.

#### 10.1.2.3.5.2 Conformance requirement

When the call control entity of the UE in the "call initiated" state or "mobile originating call proceeding" state receives an ALERTING message then, the call control entity of the UE shall stop timer T303 and T310 (if running) and shall enter the "call delivered" state.

References

TS 24.008, clause 5.2.1.1 and clause 5.2.1.5.

#### 10.1.2.3.5.3 Test purpose

To verify that a CC entity of the UE in CC-state U1, "Call initiated", upon receipt of an ALERTING message, enters CC state U4, "Call delivered".

#### 10.1.2.3.5.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U1 by using table 10.1.2/4.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U1. The SS sends an ALERTING message to the UE. The SS checks by using the status enquiry procedure that the CC entity has entered the state U4, call delivered.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | ALERTING | |
| 2 | | <- | STATUS ENQUIRY | |
| 3 | | -> | STATUS | cause #30, state U4 |

Specific message contents:

None.

10.1.2.3.5.5 Test requirements

After step 1 the UE shall enter CC state U4, "Call delivered".

## 10.1.2.3.6 Outgoing call / U1 call initiated / entering state U10

### 10.1.2.3.6.1 Definition

The call control entity of the UE being in the state, U1, a CONNECT message is received by the UE.

### 10.1.2.3.6.2 Conformance requirement

The call control entity of the UE in the "call initiated" state, in the "mobile originating call proceeding" state or in the "call delivered" state, shall, upon receipt of a CONNECT message:

- attach the user connection;
- return a CONNECT ACKNOWLEDGE message;
- stop any locally generated alerting indication (if applied);
- stop timer T303 and T310 (if running);
- enter the "active" state.

References

TS 24.008, clause 5.2.1.1 and clause 5.2.1.6.

### 10.1.2.3.6.3 Test purpose

To verify that a CC entity of the UE in CC-state U1, "Call initiated", upon receipt of a CONNECT message, sends a CONNECT ACKNOWLEDGE message to its peer entity and enters CC state U10, "Active".

### 10.1.2.3.6.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U1 by using table 10.1.2/4.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U1. The SS sends a CONNECT message to the UE. The UE shall respond by sending a CONNECT ACKNOWLEDGE message. The SS checks by using the status enquiry procedure that the CC entity has entered the state U10, active.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | CONNECT | |
| 2 | | -> | CONNECT ACKNOWLEDGE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U10 |

Specific message contents:

None.

10.1.2.3.6.5 Test requirements

After step 1 the UE shall send a CONNECT ACKNOWLEDGE message and shall enter CC state U10, "Active".

### 10.1.2.3.7 Outgoing call / U1 call initiated / unknown message received

#### 10.1.2.3.7.1 Definition

The call control entity of the UE being in the state, U1, an unknown message is received by the UE.

#### 10.1.2.3.7.2 Conformance requirement

If a UE receives an RR, MM or CC message with message type not defined for the PD or not implemented by the receiver in acknowledged mode, it shall return a status message (STATUS, MM STATUS depending on the protocol discriminator) with cause # 97 "message type non-existent or not implemented".

References

TS 24.008 clause 8.4.

#### 10.1.2.3.7.3 Test purpose

To verify that a CC entity of the UE in CC-state U1, "Call initiated", upon receipt of a message with message type not defined for the protocol discriminator from its peer entity returns a STATUS message.

#### 10.1.2.3.7.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U1 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U1. The SS sends a message with message type not defined for the protocol discriminator to the UE. The UE shall respond with a STATUS message, and finally the SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | unknown message | message type not defined for PD |
| 2 | -> | | STATUS | cause #97, state U1 |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U1 |

Specific message contents:

None.

10.1.2.3.7.5 Test requirements

After step 1 and step 3 the UE shall return a STATUS message with "Call state" set to state U1, "Call initiated".

## 10.1.2.4 Outgoing call / U3 Mobile originating call proceeding

### 10.1.2.4.1 Outgoing call / U3 Mobile originating call proceeding / ALERTING received

#### 10.1.2.4.1.1 Definition

The call control entity of the UE being in the state, U3, an ALERTING message is sent to the UE as an indication that a call is being alerted at a called end.

#### 10.1.2.4.1.2 Conformance requirement

When the call control entity of the UE in the "call initiated" state or "mobile originating call proceeding" state receives an ALERTING message then, the call control entity of the UE shall stop timer T303 and T310 (if running) and shall enter the "call delivered" state.

References

TS 24.008 clause 5.2.1.5.

#### 10.1.2.4.1.3 Test purpose

To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding", upon receipt of a ALERTING message enters CC-state U4, "Call Delivered".

#### 10.1.2.4.1.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The SS sends an ALERTING message to the UE. The SS checks by using the status enquiry procedure that the CC entity has entered the state U4, call delivered.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | ALERTING | |
| 2 | | <- | STATUS ENQUIRY | |
| 3 | | -> | STATUS | cause #30, state U4 |

Specific message contents:

None.

#### 10.1.2.4.1.5 Test requirements

After step 1 the UE shall enter CC-state U4, "Call Delivered".

### 10.1.2.4.2 Outgoing call / U3 Mobile originating call proceeding / CONNECT received

#### 10.1.2.4.2.1 Definition

The call control entity of the UE being in the state, U3, a CONNECT message is received by the UE.

#### 10.1.2.4.2.2 Conformance requirement

The call control entity of the UE in the "call initiated" state, in the "mobile originating call proceeding" state or in the "call delivered" state, shall, upon receipt of a CONNECT message:

- attach the user connection;
- return a CONNECT ACKNOWLEDGE message;
- stop any locally generated alerting indication (if applied);
- stop timer T303 and T310 (if running);
- enter the "active" state.

References

TS 24.008 clause 5.2.1.6.

#### 10.1.2.4.2.3 Test purpose

1) To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding", upon receipt of a CONNECT message returns a "CONNECT ACKNOWLEDGE" message to its peer entity and enters the CC state U10, "Active".

2) To verify that the UE stops locally generated alerting indication, if any.

#### 10.1.2.4.2.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The SS sends a RADIO BEARER SETUP for traffic channel to the UE. The UE shall respond with a RADIO BEARER SETUP COMPLETE message. The SS sends a CONNECT message to the UE. The UE shall respond by sending a CONNECT ACKNOWLEDGE message. The SS checks by using the status enquiry procedure that the CC entity has entered the state U10, active.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| 2 | <- | | CONNECT | the UE shall stop locally generated alerting indication, if any |
| 3 | -> | | CONNECT ACKNOWLEDGE | |
| 4 | <- | | STATUS ENQUIRY | |
| 5 | -> | | STATUS | cause #30, state U10 |

Specific message contents:

None.

10.1.2.4.2.5 Test requirements

After step 1 the UE shall return a "CONNECT ACKNOWLEDGE" message and enter the CC state U10, "Active".

The UE shall stop locally generated alerting indication.

### 10.1.2.4.3 Outgoing call / U3 Mobile originating call proceeding / PROGRESS received without in band information

#### 10.1.2.4.3.1 Definition

The call control entity of the UE being in the state, U3, a PROGRESS message is received by the UE. The PROGRESS message does not contain indication of in-band information availability.

#### 10.1.2.4.3.2 Conformance requirement

1) In order to inform the UE that the call is progressing in the PLMN/ISDN environment the network may send a progress indicator information element to the calling UE either:

   a) in an appropriate call control message, if a state change is required (e.g., ALERTING or CONNECT); or

   b) in the PROGRESS message, if no state change is appropriate.

   This progress indicator information element shall contain progress description value #32 "Call is end-to-end ISDN/PLMN".

2) At any time during the establishment or release of a call and during an active call the network may send a PROGRESS message to the UE.

   On receipt of a PROGRESS message during the establishment or release of a call the UE shall stop all call control timers related to that call.

References

Conformance requirement 1: TS 24.008 clause 5.2.1.4.2

Conformance requirement 2: TS 24.008 clause 5.5.6

10.1.2.4.3.3 Test purpose

1) To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding", upon receipt of a PROGRESS message with valid cause values stays in CC-state U3.

2) To verify that after receipt of the PROGRESS message timer T310 is stopped.

10.1.2.4.3.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The SS sends a PROGRESS message not containing indication of in-band information availability to the UE. The SS checks that the UE has stopped T310, i.e. at T310 time-out no DISCONNECT message is sent by the UE. Then the SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | PROGRESS | (note) |
| 2 | <- | | STATUS ENQUIRY | |
| 3 | -> | | STATUS | cause #30, state U3 |
| 4 | SS | | | SS waits at least 45 s and checks no DISCONNECT is sent by the UE |
| 5 | <- | | STATUS ENQUIRY | |
| 6 | -> | | STATUS | cause #30, state U3 |

NOTE: Tested with a valid Progress Indicator, Progress description value among:

- #32 call is end-to-end PLMN/ISDN.

Specific message contents:

None.

10.1.2.4.3.5 Test requirements

After step 1 the UE shall stay in CC-state U3.

After step 3 SS waits at least 45 s and checks no DISCONNECT is sent by the UE.

### 10.1.2.4.4 Outgoing call / U3 Mobile originating call proceeding / PROGRESS with in band information

#### 10.1.2.4.4.1 Definition

The call control entity of the UE being in the state, U3, a PROGRESS message indicating availability of in band information is received by the UE.

#### 10.1.2.4.4.2 Conformance requirement

1) When the network wants to make the UE attach the user connection (e.g. in order to provide in-band tones/announcement) before the UE has reached the "active" state of a call, the network may include a progress indicator IE indicating user attachment in a suitable CC message:

   - Either it includes the IE in a SETUP, CALL PROCEEDING, ALERTING, or CONNECT message that is send during call establishment

   - it sends a PROGRESS message containing the IE.

   On reception of a SETUP, CALL PROCEEDING, ALERTING, CONNECT, or PROGRESS message the UE shall proceed as specified elsewhere in TS 24.008 clause 5; if the progress indicator IE indicated user attachment and a speech mode traffic channel is appropriate for the call the UE shall in addition: attach the user connection for speech as soon as an appropriate channel in speech mode is available.

2) At any time during the establishment or release of a call and during an active call the network may send a PROGRESS message to the UE.

   On receipt of a PROGRESS message during the establishment or release of a call the UE shall stop all call control timers related to that call.

References

Conformance requirement 1: TS 24.008 clause 5.5.1

Conformance requirement 2: TS 24.008 clause 5.5.6

#### 10.1.2.4.4.3 Test purpose

1) To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding", upon receipt of a PROGRESS message indicating in-band announcement through-connects the traffic channel for speech, if DTCH is in speech mode. If DTCH is not in a speech mode, the UE does not through-connect the DTCH.

2) To verify that after receipt of the PROGRESS message, T310 is stopped.

#### 10.1.2.4.4.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The SS sends a RADIO BEARER SETUP for traffic

channel to the UE. The UE shall respond with a RADIO BEARER SETUP COMPLETE message. The SS sends a PROGRESS message containing indication of in-band information availability to the UE. The SS checks that if channel mode is speech, the DTCH shall be through connected. If channel mode is not speech, the DTCH shall not be through connected. Also the SS checks that the UE has stopped T310, i.e. at T310 time-out no DISCONNECT message is sent by the UE. Then the SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Radio Bearer Setup Procedure | See TS34.108 clause 7.1.3 |
| 2 | <- | | PROGRESS | (note)<br>the UE shall stop all the CC timers , if channel mode is speech, the DTCH shall be through connected. If channel mode is not speech, the DTCH shall not be through connected. |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U3 |
| 5 | | SS | | SS waits at least 45 s and checks no DISCONNECT is sent by the UE. |
| 6 | <- | | STATUS ENQUIRY | |
| 7 | -> | | STATUS | cause #30, state U3 |
| 8 | | SS | | If the channel mode is speech the SS will check that the user connection for speech is attached (both downlink and uplink). |

Specific message contents:

NOTE: Tested with a valid Progress Indicator, Progress description value among:

- #1 call is not end to end PLMN/ISDN;
- #2 destination address is non PLMN/ISDN;
- #3 originating address is non PLMN/ISDN;
- #8 in band information or appropriate pattern now available.

#### 10.1.2.4.4.5 Test requirements

After step 2 the UE shall through-connect the traffic channel for speech, if DTCH is in a speech mode. If DTCH is not in speech mode, the UE shall not through-connect the DTCH.

After step 4 the SS waits at least 45 s and checks no DISCONNECT is sent by the UE.

After step 7 the SS checks that the user connection for speech is attached (both downlink and uplink), if the channel mode is speech.

### 10.1.2.4.5 Outgoing call / U3 Mobile originating call proceeding / DISCONNECT with in band tones

#### 10.1.2.4.5.1 Definition

The call control entity of the UE being in the state, U3, a DISCONNECT message indicating availability of in band information is received by the UE.

#### 10.1.2.4.5.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon receipt of a DISCONNECT message with progress indicator #8:

i) if an appropriate speech traffic channel is not connected, continue clearing as defined in TS24.008 clause 5.4.4.1.2.1 without connecting to the in-band tone/announcement;

ii) if an appropriate speech traffic channel is connected, attach the user connection for speech if it is not yet attached and enter the "disconnect indication" state. In that state, if upper layers request the clearing of the call, the call control entity of the UE shall proceed as defined in TS24.008 clause 5.4.4.1.2.1.

….

The call control entity of the MS in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon receipt of a DISCONNECT message with progress indicator #8 and, either not containing an *Allowed Actions* IE or containing an *Allowed Actions* IE indicating "CCBS activation is not possible":

i) if an appropriate speech traffic channel is not connected,

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.
- not connect to the in-band tone/announcement;

ii) if an appropriate speech traffic channel is connected, attach the user connection for speech if it is not yet attached and enter the "disconnect indication" state. In that state, if upper layers request the clearing of the call, the call control entity of the MS shall:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

References

TS 24.008 and clause 5.4.4.1.1.1 and 5.4.4.2.1.1.

#### 10.1.2.4.5.3 Test purpose

To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding", upon receipt of a DISCONNECT with progress indicator #8 through-connects the speech channel to make in-band announcements available, if traffic channel is in speech mode. If DTCH is not in speech mode, the UE sends a RELEASE message.

#### 10.1.2.4.5.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The SS sends a RADIO BEARER SETUP for traffic channel to the UE. The UE shall respond with a RADIO BEARER SETUP COMPLETE message. The SS sends a

DISCONNECT message containing indication of in-band information availability to the UE. The SS checks that if channel mode is speech, the DTCH shall be through connected and the UE enters state U12, disconnect indication. If channel mode is not speech, the DTCH shall not be through connected and the UE shall enter state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| 2 | <- | | DISCONNECT | (note) |
| A3 | SS | | | DTCH in speech mode:<br>the SS will check that the audio path for in band tones is attached. |
| A4 | <- | | STATUS ENQUIRY | |
| A5 | -> | | STATUS | cause #30, state U12 |
| B3 | -> | | RELEASE | DTCH is not in speech mode: |
| B4 | <- | | STATUS ENQUIRY | |
| B5 | -> | | STATUS | cause #30, state U19 |

Specific message contents:

NOTE: the Progress Indicator, Progress descriptionvalue:

- #8 in band information or appropriate pattern now available.

#### 10.1.2.4.5.5 Test requirements

After step 2 the UE shall through-connect the speech channel to make in-band announcements available, if traffic channel is in speech mode. If DTCH is not in speech mode, the UE shall send a RELEASE message.

### 10.1.2.4.6 Outgoing call / U3 Mobile originating call proceeding / DISCONNECT without in band tones

#### 10.1.2.4.6.1 Definition

The call control entity of the UE being in the state, U3, a DISCONNECT message is received by the UE. The DISCONNECT message does not contain indication of in-band information availability.

#### 10.1.2.4.6.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message without progress indicator information element or with progress indicator different from #8:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

…

The call control entity of the mobile station in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message either without progress indicator information element or with progress indicator different from #8, and, either without the *Allowed Actions* IE or with the *Allowed Actions* IE indicating that "CCBS is not possible":

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and

- enter the "release request" state.References

TS 24.008 clause 5.4.4.1.2.1 and 5.4.4.2.3.1

#### 10.1.2.4.6.3 Test purpose

To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding", upon receipt of a DISCONNECT without progress indicator returns a RELEASE message and enters the CC-state U19, "Release Request".

#### 10.1.2.4.6.4 Method of test

##### Related ICS/IXIT statements

- supported MO circuit switched basic services.

##### Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/3.

##### Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The SS sends a DISCONNECT message not containing indication of in-band information availability to the UE. The UE shall respond with a RELEASE message. The SS checks by using the status enquiry procedure that the CC entity of the UE has entered the state U19, release request.

##### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | DISCONNECT | without progress indicator |
| 2 | | -> | RELEASE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U19 |

##### Specific message contents:

None.

#### 10.1.2.4.6.5 Test requirements

After step 1 the UE shall send a RELEASE message and enter the CC-state U19, "Release Request".

### 10.1.2.4.7 Outgoing call / U3 Mobile originating call proceeding / RELEASE received

#### 10.1.2.4.7.1 Definition

The call control entity of the UE being in the state, U3, a RELEASE message is received by the UE.

#### 10.1.2.4.7.2 Conformance requirement

The call control entity of the UE in any state except the "null" state and the "release request" state, shall, upon receipt of a RELEASE message: stop all running call control timers; send a RELEASE COMPLETE message; release the MM connection; and return to the "null" state.

References

TS 24.008 clause 5.4.3.3

10.1.2.4.7.3 Test purpose

1) To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding", upon receipt of a RELEASE will return a RELEASE COMPLETE and enter the CC-state U0, "Null".

2) To verify that the UE on returning to the idle mode releases the MM-connection and that the CC-entities relating to the seven mobile originating transaction identifiers are in CC-state U0, "Null".

10.1.2.4.7.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The SS sends a RELEASE message to the UE. The UE shall respond with a RELEASE COMPLETE message. The SS checks by using the status enquiry procedure that the CC entity has entered the state U0 with all the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | RELEASE | with cause "Normal, unspecified" |
| 2 | -> | | RELEASE COMPLETE | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 5 | SS | | | repeat steps 3-4 to cover all the transaction identifiers from 000...110 |
| 6 | <- | | | The SS releases the RRC connection. |

Specific message contents:

None.

10.1.2.4.7.5 Test requirements

After step 1 the UE shall send a RELEASE COMPLETE message.

After step 3 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.2.4.8 Outgoing call / U3 Mobile originating call proceeding / termination requested by the user

#### 10.1.2.4.8.1 Definition

The call control entity of the UE being in the state, U3, the user requests to terminate the call.

#### 10.1.2.4.8.2 Conformance requirement

Apart from the exceptions identified in TS 24.008 clause 5.4.2, the call control entity of the UE shall initiate clearing by: stopping all running call control timers, sending a DISCONNECT message; starting timer T305; and entering the "disconnect request" state.

References

TS 24.008 clause 5.4.3.1

#### 10.1.2.4.8.3 Test purpose

To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding", upon request by the user to terminate will send a DISCONNECT message and enter the CC-state U11, "Disconnect Request".

#### 10.1.2.4.8.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator: 1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The user requests termination of the call. The UE shall send a DISCONNECT message. The SS checks by using the status enquiry procedure that the CC entity has entered the state U11, disconnect request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | MMI action, terminate call |
| 2 | -> | | DISCONNECT | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U11 |

Specific message contents:

None.

#### 10.1.2.4.8.5 Test requirements

After step 1 the UE shall send a DISCONNECT message and enter the CC-state U11, "Disconnect Request".

### 10.1.2.4.9 Outgoing call / U3 Mobile originating call proceeding / traffic channel allocation

#### 10.1.2.4.9.1 Definition

The call control entity of the UE being in the state, U3, a radio bearer establishment procedure is performed.

#### 10.1.2.4.9.2 Conformance requirement

It is a network dependent decision when to initiate the assignment of an appropriate traffic channel during the mobile originating call establishment phase. Initiation of a suitable RR procedure to assign an appropriate traffic channel does neither change the state of a call control entity nor affect any call control timer.

References

TS 24.008 clause 5.2.1.9.

#### 10.1.2.4.9.3 Test purpose

To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding", when a traffic channel is allocated by the network performing the radio bearer establishment procedure, stays in CC-state U3.

#### 10.1.2.4.9.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The SS sends a RADIO BEARER SETUP for traffic channel to the UE. The UE shall respond with a RADIO BEARER SETUP COMPLETE message. The SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| 2 | <- | | STATUS ENQUIRY | |
| 3 | -> | | STATUS | cause #30, state U3 |

Specific message contents:

None.

#### 10.1.2.4.9.5 Test requirements

After step 1 the CC state U3, "Mobile Originating Call Proceeding", shall remain unchanged.

### 10.1.2.4.10 Outgoing call / U3 Mobile originating call proceeding / timer T310 time-out

#### 10.1.2.4.10.1 Definition

The call control entity of the UE being in the state, U3, if no response is then received from the SS, timer T310 expires at the UE side.

#### 10.1.2.4.10.2 Conformance requirement

1) If timer T310 elapses before any of the ALERTING, CONNECT or DISCONNECT messages has been received, the UE shall perform the clearing procedure described in TS 24.008 clause 5.4.

2) Apart from the exceptions identified in TS 24.008 clause 5.4.2, the call control entity of the UE shall initiate clearing by: stopping all running call control timers, sending a DISCONNECT message; starting timer T305; and entering the "disconnect request" state.

References

Conformance requirement 1: TS 24.008 clause 5.2.1.3./Abnormal case

Conformance requirement 2: TS 24.008 clause 5.4.3.1.

#### 10.1.2.4.10.3 Test purpose

To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding" will, upon expiry of timer T310, initiate call release by sending DISCONNECT and enter the CC-state U11, "Disconnect Request".

#### 10.1.2.4.10.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The T310 expires at the UE and the UE shall send DISCONNECT. The SS checks timer T310 accuracy and that the CC entity has entered the state U11, disconnect request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | the SS waits for T310 time-out |
| 2 | -> | | DISCONNECT | check the timer T310 accuracy, see TS34.108 clause 4.2.3 |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U11 |

Specific message contents:

None.

#### 10.1.2.4.10.5 Test requirements

After step 1 upon expiry of timer T310 the UE shall initiate call release by sending a DISCONNECT message and enter the CC-state U11, "Disconnect Request".

### 10.1.2.4.11 Outgoing call / U3 Mobile originating call proceeding / lower layer failure

#### 10.1.2.4.11.1 Definition

The call control entity of the UE being in the state, U3, a lower layer failure is accomplished at the UE and consequently, communication at layer 3 level with the peer entity is terminated.

#### 10.1.2.4.11.2 Conformance requirement

The MM sublayer shall indicate to all CM entities associated with active MM connections that the MM connection is interrupted, the subsequent action of the MM sublayer (call re-establishment, see TS 24.008 clause 4.5.1.6, or local release) will then depend on the decisions by the CM entities.

….

The re-establishment procedure allows a MS to resume a connection in progress after a radio link failure, possibly in a new cell and possibly in a new location area. The conditions in which to attempt call re-establishment or not depend on the call control state, see clause 5.5.4 and, whether or not a cell allowing call re-establishment has been found (as described in GSM 05.08). MM connections are identified by their protocol discriminators and transaction identifiers: these shall not be changed during call re-establishment.

The re-establishment takes place when a lower layer failure occurs and at least one MM connection is active (i.e.. the mobile station's MM sublayer is either in state 6 "MM CONNECTION ACTIVE" or state 20 "WAIT FOR ADDITIONAL OUTGOING MM CONNECTION").

….

When a MM connection is active, an indication may be given by the MM sublayer to the call control entity to announce that the current MM connection has been interrupted but might be re-established on request of call control.

Depending whether call re-establishment is allowed or not and on its actual state, call control shall decide to either request re-establishment or to release the MM connection.

a) Re-establishment not required

If the call is in the call establishment or call clearing phase, i.e. any state other than the "active" state or the "mobile originating modify" state, call control shall release the MM connection

….

In CELL_DCH State, after receiving N313 consecutive "out of sync" indications from layer 1 for the established DPCCH physical channel in FDD, and the DPCH associated with mapped DCCHs in TDD, the UE shall:

1> start timer T313;

1> upon receiving N315 successive "in sync" indications from layer 1 and upon change of UE state:

2> stop and reset timer T313.

1> if T313 expires:

2> consider it as a "Radio link failure".

Periods in time where neither "in sync" nor "out of sync" is reported by layer 1 do not affect the evaluation of the number of consecutive (resp. successive) "in sync" or "out of sync" indications.

When a radio link failure occurs, the UE shall:

1> clear the dedicated physical channel configuration;

1> perform actions as specified for the ongoing procedure;

1> if no procedure is ongoing or no actions are specified for the ongoing procedure:

2> perform a cell update procedure according to subclause 8.3.1 using the cause "radio link failure".

In addition, the cell update procedure also serves the following purposes:

…

- to act on a radio link failure in the CELL_DCH state;

References

TS 24.008 clause 4.5.2.3, 4.5.1.6, and 5.5.4, TS 25.331 clause 8.5.6 and 8.3.1.1.

### 10.1.2.4.11.3 Test purpose

To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding" having detected a lower layer failure and having returned to idle mode, the CC entity is in state U0, "Null".

### 10.1.2.4.11.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/4.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The UE is brought to the state U3. The SS releases the DPCH configuration to generate a lower layer failure at the UE. The SS waits long enough to perform cell update procedure. The SS sends RRC CONNECTION RELEASE message as a response to the CELL UPDATE message from the UE.. The SS checks that the UE does not initiate RRC connection establishment during 60 s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS releases the DPCH configuration to generate lower layer failure(radio link failure) |
| 2 | -> | | CELL UPDATE | CCCH |
| 3 | <- | | RRC CONNECTION RELEASE | CCCH |
| 4 | | SS | | For a period of 60 s the SS checks that the UE does not initiate RRC connection establishment (since it should not re-attempt MM connection establishment) |

Specific message contents:

None.

#### 10.1.2.4.11.5 Test requirements

After step 4 the UE shall not initiate RRC Connection Establishment for 60 s.

### 10.1.2.4.12 Outgoing call / U3 Mobile originating call proceeding / unknown message received

#### 10.1.2.4.12.1 Definition

The call control entity of the UE being in the state, U3, an unknown message is received by the UE.

#### 10.1.2.4.12.2 Conformance requirement

If a UE receives an RR, MM or CC message with message type not defined for the PD or not implemented by the receiver in acknowledged mode, it shall return a status message (STATUS, MM STATUS depending on the protocol discriminator) with cause # 97 "message type non-existent or not implemented".

References

TS 24.008 clause 8.4.

#### 10.1.2.4.12.3 Test purpose

To verify that a CC-entity of the UE in CC-state U3, "Mobile Originating Call Proceeding" having received an unknown message from its peer entity returns a STATUS message.

#### 10.1.2.4.12.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U3. The SS sends a message with message type not defined for the protocol discriminator to the UE. The UE shall respond with a STATUS message, and finally the SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | unknown message | message type not defined for PD |
| 2 | -> | | STATUS | cause #97, state U3 |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U3 |

Specific message contents:

None.

#### 10.1.2.4.12.5 Test requirements

After step 1 the UE shall return a STATUS message.

### 10.1.2.4.13 Outgoing call / U3 Mobile originating call proceeding / Internal alerting indication

#### 10.1.2.4.13.1 Definition

The call control entity of the UE being in the state, U3, an ALERTING message is sent to the UE when the user connection is not attached to the radio path.

#### 10.1.2.4.13.2 Conformance requirement

When the call control entity of the UE in the "call initiated" state or "mobile originating call proceeding" state receives an ALERTING message then, the call control entity of the UE shall stop timer T303 and T310 (if running) and shall enter the "call delivered" state. In this state, for speech calls:

- an alerting indication should be given to the user. If the UE has not attached the user connection then the UE shall internally generate an alerting indication. If the UE has attached the user connection then the network is responsible for generating the alerting indication and the UE need not generate one.

References

TS 24.008 clause 5.2.1.5.

#### 10.1.2.4.13.3 Test purpose

When the call control entity of the UE in the "mobile originating call proceeding" state receives an ALERTING message then it enters "call delivered" state and, for speech calls, if the user connection is not attached to the radio path, the UE generates internally an alerting indication.

#### 10.1.2.4.13.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.
- way to give internally generated alerting indication for outgoing calls.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U3 by using table 10.1.2/1.

Test procedure

The SS sends an ALERTING message to the UE. The SS checks by using the status enquiry procedure that the CC entity has entered the state U4, call delivered. Also it is checked that the UE generates internally alerting indication to the user in the way described in the ICS/IXIT statements.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | ALERTING | the UE shall generate an alerting indication to the user in the way described in the ICS/IXIT statements |
| 2 | | <- | STATUS ENQUIRY | |
| 3 | | -> | STATUS | cause #30, state U4 |

Specific message contents:

None.

#### 10.1.2.4.13.5 Test requirements

After step 1 the UE shall enter "Call Delivered" state and, for speech calls, if the user connection is not attached to the radio path, the UE shall internally generate an alerting indication.

### 10.1.2.5 Outgoing call / U4 call delivered

#### 10.1.2.5.1 Outgoing call / U4 call delivered / CONNECT received

##### 10.1.2.5.1.1 Definition

The call control entity of the UE being in the state, U4, a CONNECT message is received by the UE.

##### 10.1.2.5.1.2 Conformance requirement

The call control entity of the UE in the "call initiated" state, in the "mobile originating call proceeding" state or in the "call delivered" state, shall, upon receipt of a CONNECT message:

- attach the user connection;
- return a CONNECT ACKNOWLEDGE message;
- stop any locally generated alerting indication (if applied);
- stop timer T303 and T310 (if running);
- enter the "active" state.

References

TS 24.008 clause 5.2.1.6.

##### 10.1.2.5.1.3 Test purpose

To verify that a CC-entity of the UE in CC-state U4, "Call Delivered", upon receipt of the CONNECT message returns a CONNECT ACKNOWLEDGE to its peer entity and enters the CC-state U10, "Active".

##### 10.1.2.5.1.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U4 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U4. The SS sends a CONNECT message to the UE. The UE shall respond by sending a CONNECT ACKNOWLEDGE message. The SS checks by using the status enquiry procedure that the CC entity has entered the state U10, active.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | CONNECT | |
| 2 | | -> | CONNECT ACKNOWLEDGE | UE stops locally generated alerting indication, if applicable |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U10 |

Specific message contents:

None.

10.1.2.5.1.5 Test requirements

After step 1 the UEshall return a CONNECT ACKNOWLEDGE message and enter the CC state U10, "Active".

### 10.1.2.5.2 Outgoing call / U4 call delivered / termination requested by the user

10.1.2.5.2.1 Definition

The call control entity of the UE being in the state, U4, the user requests to terminate the call.

10.1.2.5.2.2 Conformance requirement

Apart from the exceptions identified in TS 24.008 clause 5.4.2, the call control entity of the UE shall initiate clearing by: stopping all running call control timers, sending a DISCONNECT message; starting timer T305; and entering the "disconnect request" state.

References

TS 24.008 clause 5.4.3.1

10.1.2.5.2.3 Test purpose

To verify that a CC-entity of the UE in CC-state U4, "Call Delivered", upon request by the user to terminate will send a DISCONNECT message and enter the CC-state U11, "Disconnect Request".

10.1.2.5.2.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U4 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U4. The user requests termination of the call. The UE shall send a DISCONNECT message. The SS checks by using the status enquiry procedure that the CC entity has entered the state U11, disconnect request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | MMI action, terminate call |
| 2 | -> | | DISCONNECT | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U11 |

Specific message contents:

None.

10.1.2.5.2.5 Test requirements

After step 1 the UE shall send a DISCONNECT message and enter the CC state U11, "Disconnect Request".

## 10.1.2.5.3 Outgoing call / U4 call delivered / DISCONNECT with in band tones

### 10.1.2.5.3.1 Definition

The call control entity of the UE being in the state, U4, a DISCONNECT message indicating availability of in band information is received by the UE.

### 10.1.2.5.3.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon receipt of a DISCONNECT message with progress indicator #8:

i) if an appropriate speech traffic channel is not connected, continue clearing as defined in TS 24.008 clause 5.4.4.1.2.1 without connecting to the in-band tone/announcement;

ii) if an appropriate speech traffic channel is connected, attach the user connection for speech if it is not yet attached and enter the "disconnect indication" state. In that state, if upper layers request the clearing of the call, the call control entity of the UE shall proceed as defined in TS 24.008 clause 5.4.4.1.2.1.

….

The call control entity of the MS in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon receipt of a DISCONNECT message with progress indicator #8 and, either not containing an *Allowed Actions* IE or containing an *Allowed Actions* IE indicating "CCBS activation is not possible":

i) if an appropriate speech traffic channel is not connected,

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.
- not connect to the in-band tone/announcement;

ii) if an appropriate speech traffic channel is connected, attach the user connection for speech if it is not yet attached and enter the "disconnect indication" state. In that state, if upper layers request the clearing of the call, the call control entity of the MS shall:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

References

TS 24.008 clause 5.4.4.1.1.1 and 5.4.4.2.1.1.

10.1.2.5.3.3 Test purpose

To verify that a CC-entity of the UE in CC-state U4, "Call Delivered", upon receipt of a DISCONNECT with a progress indicator indicating in-band information, through-connects the speech channel to make in-band announcements available, if traffic channel is in speech mode. If DTCH is not in speech mode, the UE shall send a RELEASE message.

10.1.2.5.3.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U4 by using table10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U4. The SS sends a DISCONNECT message containing indication of in-band information availability to the UE. The SS checks that if channel mode is MO telephony, the DTCH shall be through connected and the UE enters state U12, disconnect indication. If channel mode is not speech, the DTCH shall not be through connected and the UE shall enter state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | DISCONNECT | (note) |
| A2 | SS | | | DTCH in speech mode:<br>the SS will check that the audio path for in band tones is attached. |
| A3 | <- | | STATUS ENQUIRY | |
| A4 | -> | | STATUS | cause #30, state U12 |
| B2 | -> | | RELEASE | DTCH is not in speech mode: |
| B3 | <- | | STATUS ENQUIRY | |
| B4 | -> | | STATUS | cause #30, state U19 |

Specific message contents:

NOTE: the Progress Indicator, Progress Description value:

- #8 in band information or appropriate pattern now available.

#### 10.1.2.5.3.5 Test requirements

After step 1 the UE shall through-connect the speech channel to make in-band announcements available, if traffic channel is in speech mode. If DTCH is not in speech mode, the UE shall send a RELEASE message.

### 10.1.2.5.4 Outgoing call / U4 call delivered / DISCONNECT without in band tones

#### 10.1.2.5.4.1 Definition

The call control entity of the UE being in the state, U4, a DISCONNECT message is received by the UE. The DISCONNECT message does not contain indication of in-band information availability.

#### 10.1.2.5.4.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message without progress indicator information element or with progress indicator different from #8:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

…..

The call control entity of the mobile station in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message either without progress indicator information element or with progress indicator different from #8, and, either without the *Allowed Actions* IE or with the *Allowed Actions* IE indicating that "CCBS is not possible":

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

References

TS 24.008 clause 5.4.4.1.2.1 and 5.4.4.2.3.1.

#### 10.1.2.5.4.3 Test purpose

To verify that a CC-entity of the UE in CC-state U4, "Call Delivered", upon receipt of a DISCONNECT without progress indicator, returns a RELEASE message and enters the CC-state U19, "Release Request".

#### 10.1.2.5.4.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U4 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U4. The SS sends a DISCONNECT message not containing indication of in-band information availability to the UE. The UE shall respond with a RELEASE message. The SS checks by using the status enquiry procedure that the CC entity of the UE has entered the state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | DISCONNECT | without progress indicator |
| 2 | | -> | RELEASE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U19 |

Specific message contents:

None.

#### 10.1.2.5.4.5 Test requirements

After step 1 the UE shall return a RELEASE message and enter the CC-state U19, "Release Request".

### 10.1.2.5.5 Outgoing call / U4 call delivered / RELEASE received

#### 10.1.2.5.5.1 Definition

The call control entity of the UE being in the state, U4, a RELEASE message is received by the UE.

#### 10.1.2.5.5.2 Conformance requirement

The call control entity of the UE in any state except the "null" state and the "release request" state, shall, upon receipt of a RELEASE message: stop all running call control timers; send a RELEASE COMPLETE message; release the MM connection; and return to the "null" state.

References

TS 24.008 clause 5.4.3.3.

#### 10.1.2.5.5.3 Test purpose

1) To verify that a CC-entity of the UE in CC-state U4, "Call Delivered", upon receipt of the RELEASE message will respond with the RELEASE COMPLETE message and enter the CC-state U0, "Null".

#### 10.1.2.5.5.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U4 by using table10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U4. The SS sends a RELEASE message to the UE. The UE shall respond with a RELEASE COMPLETE message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | RELEASE | with cause "Normal, unspecified" |
| 2 | -> | | RELEASE COMPLETE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | -> | | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 5 | | | Void | |
| 6 | | <- | | The SS releases the RRC connection. |

Specific message contents:

None.

10.1.2.5.5.5 Test requirements

After step 1 the UE shall respond with the RELEASE COMPLETE message.

### 10.1.2.5.6 Outgoing call / U4 call delivered / lower layer failure

10.1.2.5.6.1 Definition

The call control entity of the UE being in the state, U4, a lower layer failure is accomplished at the UE and consequently, communication at layer 3 level with the peer entity is terminated.

10.1.2.5.6.2 Conformance requirement

The MM sublayer shall indicate to all CM entities associated with active MM connections that the MM connection is interrupted, the subsequent action of the MM sublayer (call re-establishment, see TS 24.008 clause 4.5.1.6, or local release) will then depend on the decisions by the CM entities.

References

TS 24.008 clause 4.5.2.3 and clause 4.5.3, TS 25.331 clause 8.3.1 and clause 8.5.6.

10.1.2.5.6.3 Test purpose

To verify that a CC-entity of the UE in CC-state U4, "Call Delivered" having detected a lower layer failure and has returned to idle mode, the CC-entity is in CC-state U0, "Null".

10.1.2.5.6.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U4 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The UE is brought to the state U4. The SS modifies the scrambling code of downlink transmission (DL DPCH) to generate a lower layer failure at the UE. The SS waits long enough to perform cell update procedure. The SS sends RRC CONNECTION RELEASE message as a response to the CELL UPDATE message from the UE. The SS re-modifies the scrambling code of downlink transmission (DL DPCH) to the original one and waits 60 s. The SS will check that the UE will not send any message during 60 s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS modifies the scrambling code of DPCH for generating lower layer failure |
| 2 | -> | | CELL UPDATE | CCCH |
| 3 | <- | | RRC CONNECTION RELEASE | CCCH |
| 4 | | SS | | SS re-modifies the scrambling code of DPCH to the original one. |
| 5 | | SS | | SS waits 60 s.<br>UE shall send no message on the DCCH |

Specific message contents:

None.

10.1.2.5.6.5 Test requirements

After step 4 the UE shall not send any message to the SS during 60 s.

## 10.1.2.5.7 Outgoing call / U4 call delivered / traffic channel allocation

### 10.1.2.5.7.1 Definition

The call control entity of the UE being in the state, U4, a radio bearer establishment procedure is performed.

### 10.1.2.5.7.2 Conformance requirement

It is a network dependent decision when to initiate the assignment of an appropriate traffic channel during the mobile originating call establishment phase. Initiation of a suitable RR procedure to assign an appropriate traffic channel does neither change the state of a call control entity nor affect any call control timer.

References

TS 24.008 clause 5.2.1.9.

### 10.1.2.5.7.3 Test purpose

To verify that a CC-entity of the UE in CC-state U4, "Call Delivered", when a traffic channel is allocated by the network performing the radio bearer establishment procedure, stays in CC-state U4.

### 10.1.2.5.7.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U4 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U4. The SS sends a RADIO BEARER SETUP for traffic channel to the UE. The UE shall respond with a RADIO BEARER SETUP COMPLETE message. The SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| 2 | <- | | STATUS ENQUIRY | |
| 3 | -> | | STATUS | cause #30, state U4 |

Specific message contents:

None.

10.1.2.5.7.5 Test requirements

After step 1 the CC state U4, "Call delivered", shall remain unchanged.

## 10.1.2.5.8 Outgoing call / U4 call delivered / unknown message received

10.1.2.5.8.1 Definition

The call control entity of the UE being in the state, U4, an unknown message is received by the UE.

10.1.2.5.8.2 Conformance requirement

If a UE receives an RR, MM or CC message with message type not defined for the PD or not implemented by the receiver in acknowledged mode, it shall return a status message (STATUS, MM STATUS depending on the protocol discriminator) with cause # 97 "message type non-existent or not implemented".

References

TS 24.008 clause 8.4.

10.1.2.5.8.3 Test purpose

To verify that a CC-entity of the UE in CC-state U4, "Call Delivered", having received an unknown message from its peer entity returns a STATUS message.

10.1.2.5.8.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U4 by using table 10.1.2/4.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U4. The SS sends a message with message type not defined for the protocol discriminator to the UE. The UE shall respond with a STATUS message, and finally the SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | unknown message | message type not defined for PD |
| 2 | -> | | STATUS | cause #97, state U4 |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U4 |

Specific message contents:

None.

10.1.2.5.8.5 Test requirements

After step 1 the UE shall return a STATUS message.

## 10.1.2.6 U10 active

### 10.1.2.6.1 U10 active / termination requested by the user

#### 10.1.2.6.1.1 Definition

The call control entity of the UE being in the state, U10, the user requests to terminate the call.

#### 10.1.2.6.1.2 Conformance requirement

Apart from the exceptions identified in TS 24.008 clause 5.4.2, the call control entity of the UE shall initiate clearing by: stopping all running call control timers, sending a DISCONNECT message; starting timer T305; and entering the "disconnect request" state.

References

TS 24.008 clause 5.4.3.1

#### 10.1.2.6.1.3 Test purpose

To verify that the a CC-entity of the UE in CC-state U10, "Active", upon request by the user to terminate will send a DISCONNECT message and enter the CC-state U11, "Disconnect Request".

#### 10.1.2.6.1.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U10 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U10. The user requests termination of the call. The UE shall send a DISCONNECT message. The SS checks by using the status enquiry procedure that the CC entity has entered the state U11, disconnect request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | MMI action, terminate call |
| 2 | -> | | DISCONNECT | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U11 |

Specific message contents:

None.

10.1.2.6.1.5 Test requirements

After step 1 the UE shall send a DISCONNECT message and enter the CC state U11, "Disconnect Request".

### 10.1.2.6.2 U10 active / RELEASE received

10.1.2.6.2.1 Definition

The call control entity of the UE being in the state, U10, a RELEASE message is received by the UE.

10.1.2.6.2.2 Conformance requirement

The call control entity of the UE in any state except the "null" state and the "release request" state, shall, upon receipt of a RELEASE message: stop all running call control timers; send a RELEASE COMPLETE message; release the MM connection; and return to the "null" state.

References

TS 24.008 clause 5.4.3.3.

10.1.2.6.2.3 Test purpose

1) To verify that the a CC-entity of the UE in CC-state U10, "Active", upon receive of the RELEASE will respond with the RELEASE COMPLETE message and enter the CC-state U0, "Null"

10.1.2.6.2.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U10 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U10. The SS sends a RELEASE message to the UE. The UE shall respond with a RELEASE COMPLETE message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | RELEASE | with cause "Normal, unspecified" |
| 2 | | -> | RELEASE COMPLETE | the UE starts T3240 |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 5 | | | Void | |
| 6 | | <- | | The SS releases the RRC connection. |

Specific message contents:

None.

10.1.2.6.2.5 Test requirements

After step 1 the UE shall return a RELEASE COMPLETE message.

## 10.1.2.6.3 U10 active / DISCONNECT with in band tones

### 10.1.2.6.3.1 Definition

The call control entity of the UE being in the state, U10, a DISCONNECT message indicating availability of in band information is received by the UE.

### 10.1.2.6.3.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon receipt of a DISCONNECT message with progress indicator #8:

i) if an appropriate speech traffic channel is not connected, continue clearing as defined in TS 24.008 clause 5.4.4.1.2.1 without connecting to the in-band tone/announcement;

ii) if an appropriate speech traffic channel is connected, attach the user connection for speech if it is not yet attached and enter the "disconnect indication" state. In that state, if upper layers request the clearing of the call, the call control entity of the UE shall proceed as defined in TS 24.008 clause 5.4.4.1.2.1.

…

The call control entity of the MS in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon receipt of a DISCONNECT message with progress indicator #8 and, either not containing an *Allowed Actions* IE or containing an *Allowed Actions* IE indicating "CCBS activation is not possible":

i) if an appropriate speech traffic channel is not connected,

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.
- not connect to the in-band tone/announcement;

ii) if an appropriate speech traffic channel is connected, attach the user connection for speech if it is not yet attached and enter the "disconnect indication" state. In that state, if upper layers request the clearing of the call, the call control entity of the MS shall:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and

- enter the "release request" state.

References

TS 24.008 clause 5.4.4.1.1.1 and clause 5.4.4.2.1.1

### 10.1.2.6.3.3 Test purpose

To verify that a CC-entity of the UE in CC-state U10, "Active", upon receipt of a DISCONNECT message with a Progress Indicator indicating in-band information, through-connects the speech channel to make in-band announcements available, if traffic channel is in speech mode. If DTCH is not in speech mode, the UE sends a RELEASE message.

### 10.1.2.6.3.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U10 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U10. The SS sends a DISCONNECT message containing indication of in-band information availability to the UE. The SS checks that if channel mode is speech, the DTCH shall be through connected and the UE enters state U12, disconnect indication. If channel mode is not speech, the DTCH shall not be through connected and the UE enters state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | DISCONNECT | (note) |
| A2 | SS | | | DTCH in speech mode:<br>the SS will check that the audio path for in band tones is attached. |
| A3 | <- | | STATUS ENQUIRY | |
| A4 | -> | | STATUS | cause #30, state U12 |
| B2 | -> | | RELEASE | DTCH is not in speech mode: |
| B3 | <- | | STATUS ENQUIRY | |
| B4 | -> | | STATUS | cause #30, state U19 |

Specific message contents:

NOTE: the Progress Indicator, Progress Description value:

#8 in band information or appropriate pattern now available.

#### 10.1.2.6.3.5 Test requirements

After step 1 the UE shall through-connect the speech channel to make in-band announcements available, if traffic channel is in speech mode. If DTCH is not in speech mode, the UE shall send a RELEASE message.

### 10.1.2.6.4 U10 active / DISCONNECT without in band tones

#### 10.1.2.6.4.1 Definition

The call control entity of the UE being in the state, U10, a DISCONNECT message is received by the UE. The DISCONNECT message does not contain indication of in-band information availability.

#### 10.1.2.6.4.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message without progress indicator information element or with progress indicator different from #8:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

….

The call control entity of the mobile station in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message either without progress indicator information element or with progress indicator different from #8, and, either without the *Allowed Actions* IE or with the *Allowed Actions* IE indicating that "CCBS is not possible":

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

References

TS 24.008 clause 5.4.4.1.2.1 and 5.4.4.2.3.1.

#### 10.1.2.6.4.3 Test purpose

To verify that the a CC-entity of the UE in CC-state U10, "Active", upon receipt of a DISCONNECT message without progress indicator, returns a RELEASE message and enters the CC-state U19, "Release Request".

#### 10.1.2.6.4.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U10 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U10. The SS sends a DISCONNECT message not containing indication of in-band information availability to the UE. The UE shall respond with a RELEASE message. The SS checks by using the status enquiry procedure that the CC entity of the UE has entered the state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | DISCONNECT | without progress indicator |
| 2 | | -> | RELEASE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U19 |

Specific message contents:

None.

#### 10.1.2.6.4.5 Test requirements

After step 1 the UE shall return a RELEASE message and enter the CC-state U19, "Release Request".

### 10.1.2.6.5 U10 active / RELEASE COMPLETE received

#### 10.1.2.6.5.1 Definition

The call control entity of the UE being in the state, U10, the call is cleared by a RELEASE COMPLETE message sent by the SS.

#### 10.1.2.6.5.2 Conformance requirement

1) A call control entity shall accept an incoming RELEASE COMPLETE message used to initiate the call clearing even though the cause information element is not included.

2) A call control entity of the UE in any call control state shall, upon receipt of a RELEASE COMPLETE message from its peer entity in the network: stop all running call control timers ; release the MM connection; and return to the "null" state.

References

Conformance requirement 1: TS 24.008 clause 5.4.2.

Conformance requirement 2: TS 24.008 clause 5.4.4.1.3.

#### 10.1.2.6.5.3 Test purpose

1) To verify that a CC entity of the UE in CC-state U10, "Active" upon receipt of a RELEASE COMPLETE message with valid cause value, enters CC state U0, "Null".

2) To verify that in returning to idle mode, the CC entities relating to the seven mobile originating transaction identifiers are in state U0, "Null".

#### 10.1.2.6.5.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U10 by using table 10.1.2/1.

Test procedure

The SS sends a RELEASE COMPLETE message to the UE. The SS checks by using the status enquiry procedure that the CC entity has entered the state U0 with all the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | RELEASE COMPLETE | note 1 |
| 2 | <- | | STATUS ENQUIRY | note 2 |
| 3 | -> | | RELEASE COMPLETE | cause #81 (invalid TI value), |
| 4 | SS | | | repeat steps 2-3 to cover all the transaction identifiers from 000...110 |
| 5 | <- | | | The SS releases the RRC connection. |

Specific message contents:

NOTE 1: With the cause value chosen arbitrarily or cause value not included.

NOTE 2: TI flag has the value indicating the UE as an originator of the call.

#### 10.1.2.6.5.5 Test requirements

After step 2 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.2.6.6 U10 active / SETUP received

#### 10.1.2.6.6.1 Definition

If the UE does not react correctly when receiving a SETUP message on a new Transaction Identifier during an active call, the active call may be lost.

#### 10.1.2.6.6.2 Conformance requirement

1) A busy UE which satisfies the compatibility requirements indicated in the SETUP message shall respond either with a CALL CONFIRMED message if the call setup is allowed to continue or a RELEASE COMPLETE message if the call setup is not allowed to continue, both with cause #17 "user busy".

References:

TS 24.008 clause 5.2.2.3.1.

#### 10.1.2.6.6.3 Test purpose

1) To verify that a User Equipment that has a call established and receives a SETUP message answers either with a CALL CONFIRMED message with cause "user busy" if it supports call waiting, or with a RELEASE COMPLETE message with cause "user busy" otherwise.

2) To verify that after having sent this message, the UE is still in state U10 for the established call.

#### 10.1.2.6.6.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

- support of call waiting Y/N.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is idle updated with valid TMSI and CKSN.

The UE is brought into the state U10 by using table 10.1.2/1.

Test Procedure

The UE has a mobile originated call in the U10 state. When UE sends a SETUP message and SS receives it in the first call establishment, SS sends a CALL PROCEEDING message without Network Call Control Capabilities IE.

The SS sends a SETUP message to the UE (with signal IE indicating "call waiting tone on" and without Network Call Control Capabilities IE).

If the UE does not support call waiting it shall answer by a RELEASE COMPLETE message.

If the UE supports call waiting it shall answer by a CALL CONFIRMED message followed by an ALERTING. The second transaction is then released by the SS with a RELEASE COMPLETE message.

In both cases the SS checks by using the status enquiry procedure that the CC entity of the UE is still in state U10, active call for the original call.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | SETUP | this message establishes a second transaction The TI value shall be the same as the one that is in use for the MO call. The TI flag shall have the value specified for an MT call. |
| A2 | | -> | RELEASE COMPLETE | if the UE does not support call waiting with cause "user busy" with the TI of the second transaction |
| B2 | | -> | CALL CONFIRMED | if the UE supports call waiting with cause "user busy" with the TI of the second transaction |
| B3 | | -> | ALERTING | with the TI of the second transaction |
| B4 | | <- | RELEASE COMPLETE | with the TI of the second transaction |
| 5 | | <- | STATUS ENQUIRY | with the TI of the original transaction |
| 6 | | -> | STATUS | cause #30, state U10 with the TI of the original transaction |

Specific message contents

SETUP message contains a Signal IE with value "call waiting tone on" (H'07).

10.1.2.6.6.5 Test requirements

After step 1 a UE that has a call established shall answer either with a CALL CONFIRMED message with cause "user busy" if it supports call waiting, or with a RELEASE COMPLETE message with cause "user busy" otherwise.

After step A2 or B4 the UE shall be in state U10 for the established call.

## 10.1.2.7 U11 disconnect request

### 10.1.2.7.1 U11 disconnect request / clear collision

#### 10.1.2.7.1.1 Definition

The call control entity of the UE being in the state, U11, a DISCONNECT message is received by the UE.

#### 10.1.2.7.1.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message without progress indicator information element or with progress indicator different from #8:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

….

The call control entity of the mobile station in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message either without progress indicator information element or with progress indicator different from #8, and, either without the *Allowed Actions* IE or with the *Allowed Actions* IE indicating that "CCBS is not possible":

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

References

TS 24.008 clause 5.4.4.1.2.1 and 5.4.4.2.3.1.

#### 10.1.2.7.1.3 Test purpose

To verify that the a CC-entity of the UE in CC-state U11, "Disconnect Request", upon receipt of a DISCONNECT message, returns to its peer entity the RELEASE message and enters the CC-state U19, "Release Request".

#### 10.1.2.7.1.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U11 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U11. The SS sends a DISCONNECT message to the UE. The UE shall respond with a RELEASE message. The SS checks by using the status enquiry procedure that the CC entity of the UE has entered the state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | DISCONNECT | |
| 2 | | -> | RELEASE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U19 |

Specific message contents:

None.

10.1.2.7.1.5 Test requirements

After step 1 the UE shall return the RELEASE message.

After step 3 the UE shall return a STATUS message with "Call state" set to state U19, "Release Request".

### 10.1.2.7.2 U11 disconnect request / RELEASE received

#### 10.1.2.7.2.1 Definition

The call control entity of the UE being in the state, U11, a RELEASE message is received by the UE.

#### 10.1.2.7.2.2 Conformance requirement

The call control entity of the UE in any state except the "null" state and the "release request" state, shall, upon receipt of a RELEASE message: stop all running call control timers; send a RELEASE COMPLETE message; release the MM connection; and return to the "null" state.

References

TS 24.008 clause 5.4.3.3

#### 10.1.2.7.2.3 Test purpose

1) To verify that the a CC-entity of the UE in CC-state U11, "Disconnect Request", upon receipt of the RELEASE message shall return RELEASE COMPLETE and enter the CC-state U0, "Null".

#### 10.1.2.7.2.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U11 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U11. The SS sends a RELEASE message to the UE. The UE shall respond with a RELEASE COMPLETE message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | RELEASE | |
| 2 | | -> | RELEASE COMPLETE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 5 | | | Void | |
| 6 | | | | The SS releases the RRC connection. |

Specific message contents:

None.

10.1.2.7.2.5 Test requirements

After step 1 the UE shall return the RELEASE COMPLETE.

## 10.1.2.7.3 U11 disconnect request / timer T305 time-out

### 10.1.2.7.3.1 Definition

The call control entity of the UE being in the state, U11, if no response is then received from the SS, timer T305 expires at the UE side.

### 10.1.2.7.3.2 Conformance requirement

The call control entity of the UE in the "disconnect request" state, shall upon expiry of timer T305: send a RELEASE message to the network with the cause number originally contained in the DISCONNECT message and optionally, a second cause information element with cause #102 "recovery on timer expiry", start timer T308, and enter the "release request" state.

References

TS 24.008 clause 5.4.3.5.

### 10.1.2.7.3.3 Test purpose

To verify that the CC-entity of the UE in CC-state U11, "Disconnect Request" shall on expiry of T305, proceed with the connection release procedure by sending the RELEASE message to its peer entity and enters the CC-state U19, "Release Request".

### 10.1.2.7.3.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U11 by using table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U11. Then T305 expires at the UE and the UE shall send a RELEASE message. The SS checks timer T305 accuracy and that the CC entity has entered the state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS waits until T305 expires at the UE |
| 2 | -> | | RELEASE | SS checks the time between DISCONNECT and RELEASE (note), check the timer T305 accuracy, see TS34.108 clause 4.2.3 |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U19 |

Specific message contents:

NOTE: With the same cause value as originally contained in the DISCONNECT message. An additional cause information element (#102 recovery on timer expiry) may be included.

#### 10.1.2.7.3.5 Test requirements

After step 1 upon expiry of timer T305 the UE shall proceed with the connection release procedure by sending the RELEASE message and enter the CC-state U19, "Release Request".

### 10.1.2.7.4 U11 disconnect request / lower layer failure

#### 10.1.2.7.4.1 Definition

The call control entity of the UE being in the state, U11, a lower layer failure is accomplished at the UE and consequently, communication at layer 3 level with the peer entity is terminated.

#### 10.1.2.7.4.2 Conformance requirement

The MM sublayer shall indicate to all CM entities associated with active MM connections that the MM connection is interrupted, the subsequent action of the MM sublayer (call re-establishment, see TS 24.008 clause 4.5.1.6, or local release) will then depend on the decisions by the CM entities.

References

TS 24.008 clause 4.5.2.3 and 4.5.3, TS 25.331 clause 8.3.1 and clause 8.5.6.

#### 10.1.2.7.4.3 Test purpose

To verify that the a CC-entity of the UE in CC-state U11, "Disconnect Request" having detected a lower layer failure returns to the idle mode. The CC entity is thus in state U0, "Null".

#### 10.1.2.7.4.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U11 by using table 10.1.2/4.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The UE is brought to the state U11. The SS modifies the scrambling code of downlink transmission (DL DPCH) to generate a lower layer failure at the UE. The SS waits long enough to enable the UE to perform cell update procedure. The SS sends RRC CONNECTION RELEASE message as a response to the CELL UPDATE message from the UE. The SS re-modifies the scrambling code of downlink transmission (DL DPCH) to the original one and waits 60 s. The SS will check that the UE will not send any message during 60 s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS modifies the scrambling code of DPCH for generating lower layer failure |
| 2 | -> | | CELL UPDATE | CCCH |
| 3 | <- | | RRC CONNECTION RELEASE | CCCH |
| 4 | | SS | | SS re-modifies the scrambling code of DPCH to the original one. |
| 5 | | SS | | SS waits 60 s. |

Specific message contents:

None.

10.1.2.7.4.5 Test requirements

After step 4 the UE shall not send any message to the SS during 60 s.

## 10.1.2.7.5 U11 disconnect request / unknown message received

### 10.1.2.7.5.1 Definition

The call control entity of the UE being in the state, U11, an unknown message is received by the UE.

### 10.1.2.7.5.2 Conformance requirement

If a UE receives an RR, MM or CC message with message type not defined for the PD or not implemented by the receiver in acknowledged mode, it shall return a status message (STATUS, MM STATUS depending on the protocol discriminator) with cause # 97 "message type non-existent or not implemented".

References

TS 24.008 clause 8.4.

### 10.1.2.7.5.3 Test purpose

To verify that a CC-entity of the UE in CC-state U11, "Disconnect Request", having received an unknown message from its peer entity returns a STATUS message.

### 10.1.2.7.5.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U11 by using table 10.1.2/4.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U11. The SS sends a message with message type not defined for the protocol discriminator to the UE. The UE shall respond with a STATUS message, and finally the SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | unknown message | message type not defined for PD |
| 2 | -> | | STATUS | cause #97, state U11 |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U11 |

Specific message contents:

None.

10.1.2.7.5.5 Test requirements

After step 1 the UE shall return a STATUS message.

## 10.1.2.8 U12 disconnect indication

### 10.1.2.8.1 U12 disconnect indication / call releasing requested by the user

#### 10.1.2.8.1.1 Definition

The call control entity of the UE being in the state, U12, the user requests to terminate the call.

#### 10.1.2.8.1.2 Conformance requirement

Response from the upper layers:

i) If the upper layers request the clearing of the call, the call control entity of the UE shall:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

References

TS 24.008 clause 5.4.4.2.2.1

#### 10.1.2.8.1.3 Test purpose

To verify that a CC-entity of the UE in CC-state U12, "Disconnect Indication" being in network initiated call release phase, shall, upon receiving a call release request from the user sends a RELEASE to its peer entity and enters CC-state U19, "Release Request"

#### 10.1.2.8.1.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U12 by using Option A of table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U12. The user requests termination of the call. The UE shall send a RELEASE message. The SS checks by using the status enquiry procedure that the CC entity has entered the state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | MMI action, "on hook" |
| 2 | -> | | RELEASE | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U19 |

Specific message contents:

None.

#### 10.1.2.8.1.5 Test requirements

After step 1 the UE being in network initiated call release phase, shall send a RELEASE message and enter CC-state U19, "Release Request".

### 10.1.2.8.2 U12 disconnect indication / RELEASE received

#### 10.1.2.8.2.1 Definition

The call control entity of the UE being in the state, U12, a RELEASE message is received by the UE.

#### 10.1.2.8.2.2 Conformance requirement

The call control entity of the UE in any state except the "null" state and the "release request" state, shall, upon receipt of a RELEASE message: stop all running call control timers; send a RELEASE COMPLETE message; release the MM connection; and return to the "null" state.

References

TS 24.008 clause 5.4.3.3

#### 10.1.2.8.2.3 Test purpose

1) To verify that a CC-entity of the UE in CC-state U12, "Disconnect Indication", upon receipt of a RELEASE message returns to its peer entity the RELEASE COMPLETE message and enters the CC-state U0, "Null".

2) To verify that the UE on returning to the idle mode releases the MM-connection and that the CC-entities relating to the seven mobile originating transaction identifiers are in CC-state U0, "Null".

#### 10.1.2.8.2.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U12 by using Option A of table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U12. The SS sends a RELEASE message to the UE. The UE shall respond with a RELEASE COMPLETE message. The SS checks by using the status enquiry procedure that the CC entity has entered the state U0 with all the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | RELEASE | |
| 2 | -> | | RELEASE COMPLETE | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 5 | SS | | | repeat steps 3-4 to cover all the transaction identifiers from 000...110 |
| 6 | <- | | | The SS releases the RRC connection |

Specific message contents:

None.

#### 10.1.2.8.2.5 Test requirements

After step 1 the UE shall return the RELEASE COMPLETE message.

After step 3 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.2.8.3 U12 disconnect indication / lower layer failure

#### 10.1.2.8.3.1 Definition

The call control entity of the UE being in the state, U12, a lower layer failure is accomplished at the UE and consequently, communication at layer 3 level with the peer entity is terminated.

10.1.2.8.3.2 Conformance requirement

The MM sublayer shall indicate to all CM entities associated with active MM connections that the MM connection is interrupted, the subsequent action of the MM sublayer (call re-establishment, see TS 24.008 clause 4.5.1.6, or local release) will then depend on the decisions by the CM entities.

References

TS 24.008 clause 4.5.2.3 and clause 4.5.3, TS 25.331 clause 8.3.1 and clause 8.5.6.

10.1.2.8.3.3 Test purpose

To verify that a CC-entity of the UE in CC-state U12, "Disconnect Indication" having detected a lower layer failure returns to idle mode. The CC-entity is thus in state U0, "Null".

10.1.2.8.3.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U12 by using Option A of table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The UE is brought to the state U12. The SS modifies the scrambling code of downlink transmission (DL DPCH) to generate a lower layer failure at the UE. The SS waits long enough to enable the UE to perform cell update procedure. The SS sends RRC CONNECTION RELEASE message as a response to the CELL UPDATE message from the UE. The SS re-modifies the scrambling code of downlink transmission (DL DPCH) to the original one and waits 60 s. The SS will check that the UE will not send any message during 60 s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS modifies the scrambling code of DPCH for generating lower layer failure |
| 2 | -> | | CELL UPDATE | CCCH |
| 3 | <- | | RRC CONNECTION RELEASE | CCCH |
| 4 | | SS | | SS re-modifies the scrambling code of DPCH to the original one. |
| 5 | | SS | | SS waits 60 s.<br>UE shall send no message on the DCCH |

Specific message contents:

None.

10.1.2.8.3.5 Test requirements

After step 4 the UE shall not send any message to the SS during 60 s.

### 10.1.2.8.4 U12 disconnect indication / unknown message received

#### 10.1.2.8.4.1 Definition

The call control entity of the UE being in the state, U12, an unknown message is received by the UE.

#### 10.1.2.8.4.2 Conformance requirement

If a UE receives an RR, MM or CC message with message type not defined for the PD or not implemented by the receiver in acknowledged mode, it shall return a status message (STATUS, MM STATUS depending on the protocol discriminator) with cause # 97 "message type non-existent or not implemented".

References

TS 24.008 clause 8.4.

#### 10.1.2.8.4.3 Test purpose

To verify that a CC-entity of the UE in CC-state U12, "Disconnect Indication" having received an unknown message from its peer entity returns a STATUS message.

#### 10.1.2.8.4.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U12 by using Option A of table 10.1.2/3.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U12. The SS sends a message with message type not defined for the protocol discriminator to the UE. The UE shall respond with a STATUS message, and finally the SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | unknown message | message type not defined for PD |
| 2 | | -> | STATUS | cause #97, state U12 |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U12 |

Specific message contents:

None.

#### 10.1.2.8.4.5 Test requirements

After step 1 the UE shall return a STATUS message.

## 10.1.2.9 Outgoing call / U19 release request

### 10.1.2.9.1 Outgoing call / U19 release request / timer T308 time-out

#### 10.1.2.9.1.1 Definition

The call control entity of the UE being in the state, U19, if no response is then received from the SS, timer T308 expires at the UE side.

#### 10.1.2.9.1.2 Conformance requirement

The call control entity of the UE in the "release request" state shall at first expiry of timer T308 retransmit the RELEASE message and restart timer T308.

References

TS 24.008 clause 5.4.4.1.3.1.

#### 10.1.2.9.1.3 Test purpose

To verify that a CC-entity of the UE in CC-state U19, "Release Request" will, upon the first expiry of timer T308 send the RELEASE message to its peer entity and remain in the CC-state U19.

#### 10.1.2.9.1.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U19 by using table 10.1.2/4.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U19. When T308 expires at the UE, the UE shall send a RELEASE message. The SS checks timer T308 accuracy and that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS waits until T308 at the UE |
| 2 | -> | | RELEASE | SS checks the time between the two RELEASE messages<br>check the timer T308 accuracy, see TS34.108 clause 4.2.3 |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U19 |

Specific message contents:

None.

#### 10.1.2.9.1.5 Test requirements

After step 1 upon the first expiry of timer T308 the UE shall send the RELEASE message and remain in the CC-state U19.

### 10.1.2.9.2 Outgoing call / U19 release request / 2nd timer T308 time-out

#### 10.1.2.9.2.1 Definition

The call control entity of the UE being in the state, U19, if no response is then received after timer T308 has expired two times in success at the UE.

#### 10.1.2.9.2.2 Conformance requirement

At second expiry of timer T308, the call control entity of the UE shall: release the MM connection; and return to the "null" state.

References

TS 24.008 clause 5.4.4.1.3.1.

#### 10.1.2.9.2.3 Test purpose

1) To verify that a CC-entity of the UE in CC-state U19, "Release Request", upon the 2nd expiry of the timer T308, enters the CC-state U0, "Null".

2) To verify that subsequently the UE proceeds with releasing the MM-connection and enters the idle mode with the CC entities relating to the seven mobile originating transaction identifiers in state U0, "Null".

#### 10.1.2.9.2.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U19 by using table 10.1.2/4.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U19. The SS allows T308 expiry at the UE, and the UE shall repeat sending the RELEASE message and start timer T308 again. The SS allows again T308 expiry at the UE. The UE shall abort the RRC connection. The SS waits long enough to enable the UE to return to idle state listening to paging, and then pages UE to create RRC connection. The SS performs authentication and starts integrity. Finally, the SS will check the state of the UE by using STATUS ENQUIRY with the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS waits until T308 expiry at the UE |
| 2 | -> | | RELEASE | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U19 |
| 5 | | SS | | SS waits until the second T308 expiry at the UE |
| 6 | | SS | | SS waits T3240 expiry at the UE |
| 7 | | UE | | The SS releases the RRC connection |
| 8 | | SS | | SS waits 10 s for the UE to return to listening to paging |
| 9 | | | Mobile terminated establishment of Radio Resource Connection | See TS34.108 |
| 9a | -> | | PAGING RESPONSE | |
| 9b | <- | | AUTHENTICATION REQUEST | |
| 9c | -> | | AUTHENTICATION RESPONSE | |
| 9d | | | | SS starts integrity |
| 10 | <- | | STATUS ENQUIRY | |
| 11 | -> | | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 12 | | SS | | repeat steps 10-11 to cover all the transaction identifiers from 000...110 |
| 13 | | | | The SS releases the RRC connection. |

Specific message contents:

None.

#### 10.1.2.9.2.5 Test requirements

After step 5 upon the 2nd expiry of the timer T308 the UE shall enter the CC-state U0, "Null".

After step 10 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.2.9.3 Outgoing call / U19 release request / RELEASE received

#### 10.1.2.9.3.1 Definition

The call control entity of the UE being in the state, U19, a RELEASE message is received by the UE.

#### 10.1.2.9.3.2 Conformance requirement

Clear collision can also occur when both sides simultaneously transfer RELEASE messages related to the same call. The entity receiving such a RELEASE message whilst within the "release request" state shall: stop timer T308; release the MM connection; and enter the "null" state (without sending a RELEASE COMPLETE message).

References

TS 24.008 clause 5.4.4.2.5.1

#### 10.1.2.9.3.3 Test purpose

To verify that a CC-entity of the UE in CC-state U19, "Release Request", upon receipt of a RELEASE, shall release the MM-connection and enters the CC-state U0, "Null" with the CC entities relating to the seven mobile originating transaction identifiers in state U0, "Null".

#### 10.1.2.9.3.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U19 by using table 10.1.2/4.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U19. The SS sends a RELEASE message to the UE. The UE shall release the MM-connection. The SS checks by using the status enquiry procedure that the CC entity has entered the state U0 with all the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | RELEASE | |
| 2 | <- | | STATUS ENQUIRY | |
| 3 | -> | | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 4 | SS | | | repeat steps 2-3 to cover all the transaction identifiers from 000...110 |
| 5 | <- | | | The SS releases the RRC connection |

Specific message contents:

None.

10.1.2.9.3.5 Test requirements

After step 2 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.2.9.4 Outgoing call / U19 release request / RELEASE COMPLETE received

#### 10.1.2.9.4.1 Definition

The call control entity of the UE being in the state, U19, a RELEASE COMPLETE message is received by the UE.

#### 10.1.2.9.4.2 Conformance requirement

1) A call control entity shall accept an incoming RELEASE COMPLETE message used to initiate the call clearing even though the cause information element is not included.

2) A call control entity of the UE in any call control state shall, upon receipt of a RELEASE COMPLETE message from its peer entity in the network: stop all running call control timers ; release the MM connection; and return to the "null" state.

References

Conformance requirement 1: TS 24.008 clause 5.4.2

Conformance requirement 2: TS 24.008 clause 5.4.4.1.3

#### 10.1.2.9.4.3 Test purpose

To verify that a CC-entity of the UE in CC-state U19, "Release Request", upon receipt of a RELEASE COMPLETE, shall release the MM-connection and enters the CC-state U0, "Null" with the CC entities relating to the seven mobile originating transaction identifiers in state U0, "Null".

#### 10.1.2.9.4.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U19 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The CC entity of the UE is brought to the state U19. The SS sends a RELEASE COMPLETE message to the UE. The UE shall release the MM-connection. The SS checks by using the status enquiry procedure that the CC entity has entered the state U0 with all the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | RELEASE COMPLETE | |
| 2 | <- | | STATUS ENQUIRY | |
| 3 | -> | | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 4 | SS | | | repeat steps 2-3 to cover all the transaction identifiers from 000...110 |
| 5 | <- | | | The SS releases the RRC connection. |

Specific message contents:

None.

#### 10.1.2.9.4.5 Test requirements

After step 2 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.2.9.5 Outgoing call / U19 release request / lower layer failure

#### 10.1.2.9.5.1 Definition

The call control entity of the UE being in the state, U19, a lower layer failure is accomplished at the UE and consequently, communication at layer 3 level with the peer entity is terminated.

#### 10.1.2.9.5.2 Conformance requirement

The MM sublayer shall indicate to all CM entities associated with active MM connections that the MM connection is interrupted, the subsequent action of the MM sublayer (call re-establishment, see TS 24.008 clause 4.5.1.6, or local release) will then depend on the decisions by the CM entities.

References

TS 24.008 clause 4.5.2.3 and clause 4.5.3, TS 25.331 clause 8.3.1 and clause 8.5.6.

#### 10.1.2.9.5.3 Test purpose

To verify that a CC-entity of the UE in CC-state U19, "Release Request", having detected a lower layer failure, returns to the idle mode, the CC entity is in state U0, "Null".

#### 10.1.2.9.5.4 Method of test

Related ICS/IXIT statements

- supported MO circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U19 by using table 10.1.2/1.

Test procedure

An MO circuit switched basic service is selected that is supported by the UE; if the UE supports MO telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then, the UE is made to initiate a call. The UE is brought to the state U19. The SS modifies the scrambling code of downlink transmission (DL DPCH) to generate a lower layer failure at the UE. The SS waits long enough to enable the UE to perform cell update procedure. The SS sends RRC CONNECTION RELEASE message as a response to the CELL UPDATE message from the UE. The SS re-modifies the scrambling code of downlink transmission (DL DPCH) to the original one and waits 60 s. The SS will check that the UE will not send any message during 60 s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS modifies the scrambling code of DPCH for generating lower layer failure |
| 2 | -> | | CELL UPDATE | CCCH |
| 3 | <- | | RRC CONNECTION RELEASE | CCCH |
| 4 | | SS | | SS re-modifies the scrambling code of DPCH to the original one. |
| 5 | | SS | | SS waits 60 s.<br>UE shall send no message on the DCCH |

Specific message contents:

None.

#### 10.1.2.9.5.5 Test requirements

After step 4 CC the UE shall not send any message to the SS during 60 s.

## 10.1.3 Establishment of an incoming call / Initial conditions

The tables below describe message exchanges which bring the UE in the requested initial states in case of an incoming call.

A state may be taken as initial only when all the states which lead to this initial states have been validated. The order will be U0, U6, U9, U7, U8, U10, U26 etc. as in the following tables.

**Table 10.1.3/1: Establishment of an incoming call, procedure 1**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>Establishment cause: Terminating Conversational Call. |
| 2 | -> | | PAGING RESPONSE | |
| 3 | <- | | AUTHENTICATION REQUEST | |
| 4 | -> | | AUTHENTICATION RESPONSE | |
| 5 | <- | | SECURITY MODE COMMAND | |
| 6 | -> | | SECURITY MODE COMPLETE | |
| 7 | <- | | SETUP | U6, (note 1) |
| 8 | -> | | CALL CONFIRMED | U9 |
| A9 | -> | | CONNECT | U8, p = Y, (note 2) |
| B9 | -> | | ALERTING | U7, p = N, (note 2) |
| B10 | UE | | | (note 3) |
| B11 | -> | | CONNECT | U8 |
| 12 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| 13 | <- | | CONNECT ACKNOWLEDGE | U10 |
| NOTE 1: With signal information included in the SETUP message.<br>NOTE 2: The UE is supporting immediate connect (p = Y/N). See ICS/IXIT statement.<br>NOTE 3: If necessary (see ICS/IXIT statement), the UE is made to accept the call in the way described in a ICS/IXIT statement. | | | | |

**Table 10.1.3/2: Establishment of an incoming call, procedure 2**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See TS34.108 clause 7.1.2<br>Establishment cause: Terminating Conversational Call. |
| 2 | -> | | PAGING RESPONSE | |
| 2a | <- | | AUTHENTICATION REQUEST | |
| 2b | -> | | AUTHENTICATION RESPONSE | |
| 3 | <- | | SECURITY MODE COMMAND | |
| 4 | -> | | SECURITY MODE COMPLETE | |
| 5 | <- | | SETUP | U6, (note 1) |
| 6 | -> | | CALL CONFIRMED | U9 |
| A7 | -> | | CONNECT | U8, p = Y, (note 2) |
| A8 | | | Radio Bearer Setup Procedure | See TS34.108 clause 7.1.3 |
| B7 | -> | | ALERTING | U7, p = N, (note 2) |
| B8 | | | Radio Bearer Setup Procedure | See TS34.108 clause 7.1.3 |
| B9 | UE | | | (note 3) |
| B10 | -> | | CONNECT | U8 |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | <- | | CONNECT ACKNOWLEDGE | U10 |
| NOTE 1: With signal information included in the SETUP message.<br>NOTE 2: The UE is supporting immediate connect (p = Y/N). See ICS/IXIT statement.<br>NOTE 3: If necessary (see ICS/IXIT statement), the UE is made to accept the call in the way described in a ICS/IXIT statement. | | | | |

**Table 10.1.3/3: Void**

**Table 10.1.3/4: Establishment of an incoming call, procedure 4**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See TS 34.108 clause 7.1.2<br>Establishment cause: Terminating Conversational Call. |
| 2 | -> | | PAGING RESPONSE | |
| 2a | <- | | AUTHENTICATION REQUEST | |
| 2b | -> | | AUTHENTICATION RESPONSE | |
| 3 | <- | | SECURITY MODE COMMAND | |
| 4 | -> | | SECURITY MODE COMPLETE | |
| 5 | <- | | SETUP | U6, (note 1) |
| 6 | -> | | CALL CONFIRMED | U9 |
| 7 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| A8 | -> | | CONNECT | U8, p = Y, (note 2) |
| B8 | -> | | ALERTING | U7, p = N, (note 2) |
| B9 | UE | | | (note 3) |
| B10 | -> | | CONNECT | U8 |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | <- | | CONNECT ACKNOWLEDGE | U10 |
| NOTE 1: The signal information element is not included in the SETUP message.<br>NOTE 2: The UE is supporting immediate connect (p = Y/N). See ICS/IXIT statement.<br>NOTE 3: If necessary (see ICS/IXIT statement), the UE is made to accept the call in the way described in a ICS/IXIT statement. | | | | |

## 10.1.3.1 Incoming call / U0 null state

### 10.1.3.1.1 Incoming call / U0 null state / SETUP received with a non supported bearer capability

#### 10.1.3.1.1.1 Definition

The call control entity of the UE being in the state, U0, a SETUP message is received with only one bearer capability and this bearer capability is not supported by the UE.

#### 10.1.3.1.1.2 Conformance requirement

When the network is providing a basic service at the called side, the UE shall check that the basic service(s) offered by the network in the Bearer Capability information element(s) match(es) the basic services that the UE is able to support. If a mismatch is detected, then the UE shall proceed as follows:

- if the SETUP message contained two bearer capability information elements for only one of which a mismatch is detected, the UE shall either:
  - under the conditions specified in 3GPP TS 27.001 (e.g. TS 61 and TS 62), accept the SETUP message with a CALL CONFIRMED message containing the, possibly negotiated, bearer capability information element for which no mismatch is detected, or
  - reject the call using cause No. 88 "incompatible destination".
- otherwise the UE shall reject the offered call using a RELEASE COMPLETE message with cause No. 88 "incompatible destination".

References

TS 24.008 clause 5.2.2.2 and annex B.3.2

#### 10.1.3.1.1.3 Test purpose

To verify that a CC entity of the UE, upon receipt of SETUP containing one bearer capability and this bearer capability is not supported, returns a RELEASE COMPLETE with correct cause value to its peer entity, and returns to the idle

mode. To verify that the CC-entities relating to the seven mobile terminating transaction identifiers are then in the state U0, "Null".

#### 10.1.3.1.1.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

Test procedure

A mobile terminated call is initiated. The UE receives a SETUP message that contains a bearer capability not supported by the UE. The UE returns a RELEASE COMPLETE message. The SS checks by using the status enquiry procedure that the CC entity is still in the state U0 with all the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | SS sends paging, See TS34.108 |
| 2 | -> | | PAGING RESPONSE | |
| 3 | <- | | AUTHENTICATION REQUEST | |
| 4 | -> | | AUTHENTICATION RESPONSE | |
| 5 | <- | | | The SS starts integrity protection. |
| 6 | | | Void | |
| 7 | <- | | SETUP | (note 1) |
| 8 | -> | | RELEASE COMPLETE | (note 2) |
| 9 | <- | | STATUS ENQUIRY | |
| 10 | -> | | RELEASE COMPLETE | Cause #81 (invalid TI value). |
| 11 | SS | | | Repeat steps 9-10 to cover all the transaction identifiers from 000... 110. |

Specific message contents:

NOTE 1: With one bearer capability and that bearer capability is not supported by the UE.

NOTE 2: With cause #88 incompatible destination.

#### 10.1.3.1.1.5 Test requirements

After step 7 the UE shall return a RELEASE COMPLETE message with cause value #88 (incompatible destination) and return to the idle mode.

After step 9 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

## 10.1.3.2 Incoming call / U6 call present

### 10.1.3.2.1 Incoming call / U6 call present / automatic call rejection

#### 10.1.3.2.1.1 Definition

Although the state U6 is transient, the ability to refuse a call (automatically) in this state is tested, if it is implemented at the UE.

#### 10.1.3.2.1.2 Conformance requirement

If the mobile user wishes to refuse the call, a RELEASE COMPLETE message shall be sent with the cause #21 "call rejected".

References

TS 24.008 clause 5.2.2.3.1

#### 10.1.3.2.1.3 Test purpose

To verify that a CC entity of the UE in CC-state U6, "Call Present", shall upon receipt of a rejection indication of the incoming call from the user, shall send RELEASE COMPLETE with the appropriate cause value to its peer entity and enter the CC-state U0, "Null". The CC entities relating to the seven mobile terminating transaction identifiers are then in state U0, "Null".

#### 10.1.3.2.1.4 Method of test

Related ICS/IXIT statements

- supported teleservices;
- the UE supports an ability to refuse a call after receipt of a SETUP message.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U6 by using table 10.1.3/2.

Test procedure

A teleservice is selected that is supported by the UE; if the UE supports speech, the selected teleservice is speech. If necessary, the UE is configured for that teleservice. Then a mobile terminated call is initiated. The call control entire of the UE is brought to the state U6 (Note: The state U6 is not checked, since it is not stable). The UE is made to refuse the call (the refusal may require some preliminary preparations in order to achieve refusal at this point). The UE shall send a RELEASE COMPLETE message and enter a call control state U0. The SS checks by using the status enquiry procedure that the CC entity has entered the state U0 with all the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | the UE is made to refuse the call |
| 2 | -> | | RELEASE COMPLETE | (note) |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 5 | SS | | | repeat steps 3-4 to cover all the transaction identifiers from 000...110 |
| 6 | <- | | | The SS releases the RRC connection. |

Specific message contents:

NOTE: With cause value #21 call rejected.

#### 10.1.3.2.1.5 Test requirements

After step 1 the UE shall return a RELEASE COMPLETE message with cause value #21 (call rejected) and return to the idle mode.

After step 3 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

## 10.1.3.3 Incoming call / U9 mobile terminating call confirmed

### 10.1.3.3.1 Incoming call / U9 mobile terminating call confirmed / alerting or immediate connecting

#### 10.1.3.3.1.1 Definition

The call control entity of the UE having entered the state, U9, with signal information received in the preceding SETUP message, the subsequent behaviour of the UE is tested.

#### 10.1.3.3.1.2 Conformance requirement

1) The call control entity of the UE having entered the "mobile terminating call confirmed" state, if the call is accepted at the called user side, the UE proceeds as described in TS 24.008 clause 5.2.2.5. Otherwise, if the signal information element was present in the SETUP message user alerting is initiated at the UE side; if the signal information element was not present in the SETUP message, user alerting is initiated when an appropriate channel is available.

   Here, initiation of user alerting means:

   - the generation of an appropriate tone or indication at the UE; and
   - sending of an ALERTING message by the call control entity of the MS to its peer entity in the network and entering the "call received" state.

2) In the "mobile terminating call confirmed" state or the "call received" state, the call control entity in the UE indicates acceptance of a mobile terminating call by:

   - sending a CONNECT message to its peer entity in the network;
   - starting Timer T313; and
   - entering the "connect request" state.

References

Conformance requirement 1: TS 24.008 clause 5.2.2.3.2

Conformance requirement 2: TS 24.008 clause 5.2.2.5.

#### 10.1.3.3.1.3 Test purpose

To verify that a CC entity in CC-state U9, "Mobile Terminating Call Confirmed", (if signalled by the network in previous SETUP message that it may alert) will either send a ALERTING message to its peer entity and enter state U7, or send a CONNECT message to its peer entity and enter U8.

#### 10.1.3.3.1.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U9 by using table 10.1.3/2.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE; if the UE supports MT telephony, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U9 by using a SETUP message containing signalling information element. (The state U9 is not a stable state in this case, and consequently it is not checked as an initial state.) If the UE supports immediate connect for the selected basic service (p = Y), it sends a CONNECT message and enters the state U8, connect request. Otherwise (p = N) the UE sends an ALERTING message and enters the state U7, call received. The SS checks by using the status enquiry procedure that the CC entity has entered its state as described.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| A1 | -> | | CONNECT | p = Y |
| A2 | <- | | STATUS ENQUIRY | |
| A3 | -> | | STATUS | cause #30, state U8 |
| B1 | -> | | ALERTING | p = N |
| B2 | <- | | STATUS ENQUIRY | |
| B3 | -> | | STATUS | cause #30, state U7 |

Specific message contents:

None.

#### 10.1.3.3.1.5 Test requirements

At step A1 the UE shall send a CONNECT message and enter U8 if the network has signalled in previous SETUP message that UE may not alert.

At step B1 the UE shall send an ALERTING message and enter state U7 if the network has signalled in previous SETUP message that UE may alert.

### 10.1.3.3.2 Incoming call / U9 mobile terminating call confirmed / DTCH assignment

#### 10.1.3.3.2.1 Definition

The call control entity of the UE being in the state, U9, a radio bearer establishment procedure is performed for traffic channel.

#### 10.1.3.3.2.2 Conformance requirement

1) It is a network dependent decision when to initiate the assignment of a traffic channel during the mobile terminating call establishment phase.

   Initiation of the assignment phase does not directly change the state of a CC entity nor affect any call control timer, but may have some secondary effects (see e.g. TS 24.008 clause 5.2.2.3.2).

2) The call control entity of the UE having entered the "mobile terminating call confirmed" state, if the call is accepted at the called user side, the UE proceeds as described in TS24.008 clause 5.2.2.5. Otherwise, if the signal information element was present in the SETUP message user alerting is initiated at the UE side; if the signal information element was not present in the SETUP message, user alerting is initiated when an appropriate channel is available.

   Here, initiation of user alerting means:

   - the generation of an appropriate tone or indication at the UE; and
   - sending of an ALERTING message by the call control entity of the MS to its peer entity in the network and entering the "call received" state.

References

Conformance requirement 1: TS 24.008 clause 5.2.2.7

Conformance requirement 2: TS 24.008 clause 5.2.2.3.2.

#### 10.1.3.3.2.3 Test purpose

To verify that a CC-entity of the UE in CC-state U9, "Mobile Terminating Call Confirmed", when a traffic channel is allocated by the network performing the radio bearer establishment procedure, shall sends an ALERTING message and enters state U7.

#### 10.1.3.3.2.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U9 by using table 10.1.3/4.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U9 (by using a SETUP message not containing the signal information element). The SS sends a RADIO BEARER SETUP for traffic channel to the UE. The UE shall respond with a RADIO BEARER SETUP COMPLETE message. The UE sends an ALERTING message and enters state U7, call received. The SS verifies by using the status enquiry procedure that the UE has entered the correct state.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| 2 | | -> | ALERTING | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U7 |

Specific message contents:

None.

#### 10.1.3.3.2.5 Test requirements

After step 1 the UE shall send an ALERTING message and enter state U7.

### 10.1.3.3.3 Void

### 10.1.3.3.4 Incoming call / U9 mobile terminating call confirmed / DISCONNECT received

#### 10.1.3.3.4.1 Definition

The call control entity of the UE being in the state, U9, a DISCONNECT message is received by the UE.

#### 10.1.3.3.4.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message without progress indicator information element or with progress indicator different from #8:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

…

The call control entity of the mobile station in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message either without progress indicator information element or with progress indicator different from #8, and, either without the *Allowed Actions* IE or with the *Allowed Actions* IE indicating that "CCBS is not possible":

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

References

TS 24.008 clause 5.4.4.1.2.1 and 5.4.4.2.3.1

#### 10.1.3.3.4.3 Test purpose

To verify that a CC-entity of the UE in CC-state U9, "Mobile Terminating Call Confirmed", upon receipt of a DISCONNECT returns a RELEASE message and enters the CC-state U19, "Release Request".

#### 10.1.3.3.4.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U9 by using table 10.1.3/4.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U9. The SS sends a DISCONNECT message to the UE. The UE responds by sending a RELEASE message and enters state U19, release request. The SS verifies by using the status enquiry procedure that the UE has entered the correct state.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | DISCONNECT | |
| 2 | | -> | RELEASE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U19 |

Specific message contents:

None.

10.1.3.3.4.5 Test requirements

After step 1 the UE shall return a RELEASE message and enter the CC-state U19, "Release Request".

## 10.1.3.3.5 Incoming call / U9 mobile terminating call confirmed / RELEASE received

### 10.1.3.3.5.1 Definition

The call control entity of the UE being in the state, U9, a RELEASE message is received by the UE.

### 10.1.3.3.5.2 Conformance requirement

The call control entity of the UE in any state except the "null" state and the "release request" state, shall, upon receipt of a RELEASE message: stop all running call control timers; send a RELEASE COMPLETE message; release the MM connection; and return to the "null" state.

References

TS 24.008 clause 5.4.3.3

### 10.1.3.3.5.3 Test purpose

1) To verify that a CC-entity of the UE in CC-state U9, "Mobile Terminating Call Confirmed", upon receipt of a RELEASE will return a RELEASE COMPLETE and enter the CC-state U0, "Null".

2) To verify that the UE on returning to the idle mode releases the MM-connection and that the CC-entities relating to the seven mobile terminating transaction identifiers are in CC-state U0, "Null".

### 10.1.3.3.5.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U9 by using table 10.1.3/4.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U9. The SS sends a RELEASE message to the UE. The UE responds by sending a RELEASE COMPLETE message and enters state U0, null. The SS verifies by using the status enquiry procedure that the UE has entered the correct state with the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | RELEASE | with cause "Normal, unspecified" |
| 2 | | -> | RELEASE COMPLETE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 5 | | SS | | repeat steps 3-4 to cover all the transaction identifiers from 000...110 |
| 6 | | <- | | The SS releases the RRC connection. |

Specific message contents:

None.

10.1.3.3.5.5 Test requirements

After step 1 the UE shall return a RELEASE COMPLETE message.

After step 3 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.3.3.6 Incoming call / U9 mobile terminating call confirmed / lower layer failure

#### 10.1.3.3.6.1 Definition

The call control entity of the UE being in the state, U9, a lower layer failure is accomplished at the UE and consequently, communication at layer 3 level with the peer entity is terminated.

#### 10.1.3.3.6.2 Conformance requirement

The MM sublayer shall indicate to all CM entities associated with active MM connections that the MM connection is interrupted, the subsequent action of the MM sublayer (call re-establishment, see TS 24.008 clause 4.5.1.6, or local release) will then depend on the decisions by the CM entities.

References

TS 24.008 clause 4.5.2.3 and clause 4.5.3, TS 25.331 clause 8.3.1 and clause 8.5.6.

#### 10.1.3.3.6.3 Test purpose

To verify that a CC entity of the UE in CC-state U9, "Mobile Terminating Call Confirmed", having detected a lower layer failure returns to idle mode, the CC entity is in state U0, "Null".

#### 10.1.3.3.6.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U9 by using table 10.1.3/4.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The UE is brought to the state U9. The SS modifies the scrambling code of downlink transmission (DL DPCH) to generate a lower layer failure at the UE. The SS waits long enough to enable the UE to perform cell update procedure. The SS sends RRC CONNECTION RELEASE message as a response to the CELL UPDATE message from the UE. The SS re-modifies the scrambling code of downlink transmission (DL DPCH) to the original one and waits 60 s. The SS will check that the UE will not send any message during 60 s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS modifies the scrambling code of DPCH for generating lower layer failure |
| 2 | -> | | CELL UPDATE | CCCH |
| 3 | <- | | RRC CONNECTION RELEASE | CCCH |
| 4 | | SS | | SS re-modifies the scrambling code of DPCH to the original one. |
| 5 | | SS | | SS waits 60 s.<br>UE shall send no message on the DCCH |

Specific message contents:

None.

10.1.3.3.6.5 Test requirements

After step 4 the UE shall not send any message to the SS during 60 s.

### 10.1.3.3.7 Incoming call / U9 mobile terminating call confirmed / unknown message received

10.1.3.3.7.1 Definition

The call control entity of the UE being in the state, U9, an unknown message is received by the UE.

10.1.3.3.7.2 Conformance requirement

If a UE receives an RR, MM or CC message with message type not defined for the PD or not implemented by the receiver in acknowledged mode, it shall return a status message (STATUS, MM STATUS depending on the protocol discriminator) with cause # 97 "message type non-existent or not implemented".

References

TS 24.008 clause 8.4.

10.1.3.3.7.3 Test purpose

To verify that a CC-entity of the UE in CC-state U9, "Mobile Terminating Call Confirmed" having received an unknown message from its peer entity returns a STATUS message.

#### 10.1.3.3.7.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U9 by using table 10.1.3/4.

Test procedure

A MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U9. The SS sends a message with message type not defined for the protocol discriminator to the UE. The UE shall respond with a STATUS message, and finally the SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | unknown message | message type not defined for PD |
| 2 | | -> | STATUS | cause #97, state U9 |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U9 |

Specific message contents:

None.

#### 10.1.3.3.7.5 Test requirements

After step 1 the UE shall return a STATUS message.

## 10.1.3.4 Incoming call / U7 call received

### 10.1.3.4.1 Incoming call / U7 call received / call accepted

#### 10.1.3.4.1.1 Definition

The call control entity of the UE being in the state, U7, a user accepts the incoming call.

#### 10.1.3.4.1.2 Conformance requirement

In the "mobile terminating call confirmed" state or the "call received" state, the call control entity in the UE indicates acceptance of a mobile terminating call by:

- sending a CONNECT message to its peer entity in the network;
- starting Timer T313; and
- entering the "connect request" state.

References

TS 24.008 clause 5.2.2.5.

10.1.3.4.1.3 Test purpose

To verify that a CC entity of a UE in CC-state U7, "Call Received", upon a user accepting the incoming call, shall send a CONNECT message to its peer entity and enter the CC-state U8, "Connect Request".

10.1.3.4.1.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U7 by using table 10.1.3/1.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U7. The user accepts the incoming call. The UE sends a CONNECT message. The SS checks by using the status enquiry procedure that the CC entity has entered state U8, connect request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | the UE is made to accept the call by the user |
| 2 | -> | | CONNECT | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U8 |

Specific message contents:

None.

10.1.3.4.1.5 Test requirements

After step 1 a UE shall send a CONNECT message and enter the CC-state U8, "Connect Request".

10.1.3.4.2 Incoming call / U7 call received / termination requested by the user

10.1.3.4.2.1 Definition

The call control entity of the UE being in the state, U7, a user requests to terminate incoming call.

10.1.3.4.2.2 Conformance requirement

Apart from the exceptions identified in TS 24.008 clause 5.4.2, the call control entity of the UE shall initiate clearing by: stopping all running call control timers, sending a DISCONNECT message; starting timer T305; and entering the "disconnect request" state.

References

TS 24.008 clause 5.4.3.1

10.1.3.4.2.3 Test purpose

To verify that a CC entity of a UE in CC-state U7, "Call Received", upon request by the user to terminate will send a DISCONNECT message and enter the CC-state U11, "Disconnect Request".

10.1.3.4.2.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U7 by using table 10.1.3/1.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U7. The user initiates clearing the incoming call. The UE sends a DISCONNECT message. The SS checks by using the status enquiry procedure that the CC entity has entered state U11, disconnect request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | the UE is made to terminate/reject the call |
| 2 | -> | | DISCONNECT | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U11 |

Specific message contents:

None.

10.1.3.4.2.5 Test requirements

After step 1 a UE shall send a DISCONNECT message and enter the CC-state U11, "Disconnect Request".

## 10.1.3.4.3 Incoming call / U7 call received / DISCONNECT received

10.1.3.4.3.1 Definition

The call control entity of the UE being in the state, U7, a DISCONNECT message is received by the UE.

10.1.3.4.3.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon receipt of a DISCONNECT message with progress indicator #8:

i) if an appropriate speech traffic channel is not connected, continue clearing as defined in TS 24.008 clause 5.4.4.1.2.1 without connecting to the in-band tone/announcement;

ii) if an appropriate speech traffic channel is connected, attach the user connection for speech if it is not yet attached and enter the "disconnect indication" state. In that state, if upper layers request the clearing of the call, the call control entity of the UE shall proceed as defined in TS 24.008 clause 5.4.4.1.2.1.

….

The call control entity of the MS in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon receipt of a DISCONNECT message with progress indicator #8 and, either not containing an *Allowed Actions* IE or containing an *Allowed Actions* IE indicating "CCBS activation is not possible":

i) if an appropriate speech traffic channel is not connected,

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.
- not connect to the in-band tone/announcement;

ii) if an appropriate speech traffic channel is connected, attach the user connection for speech if it is not yet attached and enter the "disconnect indication" state. In that state, if upper layers request the clearing of the call, the call control entity of the MS shall:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

References

TS 24.008 clause 5.4.4.1.1.1 and 5.4.4.2.1.1.

#### 10.1.3.4.3.3 Test purpose

To verify that a CC entity of a UE in CC-state U7, "Call Received", upon receipt of a DISCONNECT with a progress indicator indicating in-band information from network, if a DTCH was not assigned, returns a RELEASE message and enters the CC-state U19, "Release Request".

#### 10.1.3.4.3.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U7 by using table 10.1.3/1.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U7. The SS sends a DISCONNECT message. The UE responds with a RELEASE message. The SS checks by using the status enquiry procedure that the CC entity has entered state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | DISCONNECT | (note) |
| 2 | | -> | RELEASE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U19 |

Specific message contents:

NOTE: The Progress Indicator, Progress Description value:
#8 in band information or appropriate pattern now available.

10.1.3.4.3.5 Test requirements

After step 1 a UE if a DTCH was not assigned, shall return a RELEASE message and enter the CC-state U19, "Release Request".

### 10.1.3.4.4 Incoming call / U7 call received / RELEASE received

10.1.3.4.4.1 Definition

The call control entity of the UE being in the state, U7, a RELEASE message is received by the UE.

10.1.3.4.4.2 Conformance requirement

The call control entity of the UE in any state except the "null" state and the "release request" state, shall, upon receipt of a RELEASE message: stop all running call control timers; send a RELEASE COMPLETE message; release the MM connection; and return to the "null" state.

References

TS 24.008 clause 5.4.3.3

10.1.3.4.4.3 Test purpose

1) To verify that a CC entity of a UE in CC-state U7, "Call Received", upon receipt of a RELEASE will return a RELEASE COMPLETE and enter the CC-state U0, "Null".

2) To verify that the UE on returning to the idle mode releases the MM-connection and that the CC-entities relating to the seven mobile terminating transaction identifiers are in CC-state U0, "Null".

10.1.3.4.4.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;

- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U7 by using table 10.1.3/1.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U7. The SS sends a RELEASE message. The UE responds with a RELEASE COMPLETE message. The SS checks by using the status enquiry procedure that the CC entity has entered state U0, null, with the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | RELEASE | with cause "Normal, unspecified" |
| 2 | | -> | RELEASE COMPLETE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 5 | | SS | | repeat steps 3-4 to cover all the transaction identifiers from 000...110 |
| 6 | | <- | | The SS releases the RRC connection. |

Specific message contents:

None.

10.1.3.4.4.5 Test requirements

After step 1 a UE shall return a RELEASE COMPLETE message.

After step 3 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.3.4.5 Incoming call / U7 call received / lower layer failure

#### 10.1.3.4.5.1 Definition

The call control entity of the UE being in the state, U7, a lower layer failure is accomplished at the UE and consequently, communication at layer 3 level with the peer entity is terminated.

#### 10.1.3.4.5.2 Conformance requirement

The MM sublayer shall indicate to all CM entities associated with active MM connections that the MM connection is interrupted, the subsequent action of the MM sublayer (call re-establishment, see TS 24.008 clause 4.5.1.6, or local release) will then depend on the decisions by the CM entities.

References

TS 24.008 clause 4.5.2.3 and clause 4.5.3, TS 25.331 clause 8.3.1, and clause 8.5.6.

#### 10.1.3.4.5.3 Test purpose

To verify that a CC entity of a UE in CC-state U7, "Call Received", having detected a lower layer failure returns to idle mode, the CC entity is in state U0, "Null".

#### 10.1.3.4.5.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;

- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U7 by using table 10.1.3/2.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The UE is brought to the state U7. The SS modifies the scrambling code of downlink transmission(DL DPCH) to generate a lower layer failure at the UE. The SS waits long enough to enable the UE to perform cell update procedure. The SS sends RRC CONNECTION RELEASE message as a response to the CELL UPDATE message from the UE. The SS re-modifies the scrambling code of downlink transmission(DL DPCH) to the original one and waits 60 s. The SS will check that the UE will not send any message during 60 s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS modifies the scrambling code of DPCH for generating lower layer failure |
| 2 | -> | | CELL UPDATE | CCCH |
| 3 | <- | | RRC CONNECTION RELEASE | CCCH |
| 4 | | SS | | SS re-modifies the scrambling code of DPCH to the original one. |
| 5 | | SS | | SS waits 60 s.<br>UE shall send no message on the DCCH |

Specific message contents:

None.

10.1.3.4.5.5 Test requirements

After step 4 the UE shall not send any message to the SS during 60 s.

### 10.1.3.4.6 Incoming call / U7 call received / unknown message received

10.1.3.4.6.1 Definition

The call control entity of the UE being in the state, U7, an unknown message is received by the UE.

10.1.3.4.6.2 Conformance requirement

If a UE receives an RR, MM or CC message with message type not defined for the PD or not implemented by the receiver in acknowledged mode, it shall return a status message (STATUS, MM STATUS depending on the protocol discriminator) with cause # 97 "message type non-existent or not implemented".

References

TS 24.008 clause 8.4.

#### 10.1.3.4.6.3 Test purpose

To verify that a CC entity of a UE in CC-state U7, "Call Received", having received an unknown message from its peer entity returns a STATUS message.

#### 10.1.3.4.6.4 Method of test

##### Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

##### Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U7 by using table 10.1.3/1.

##### Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U7. The SS sends a message with message type not defined for the protocol discriminator to the UE. The UE shall respond with a STATUS message, and finally the SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

##### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | unknown message | message type not defined for PD |
| 2 | | -> | STATUS | cause #97, state U7 |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U7 |

##### Specific message contents:

None.

#### 10.1.3.4.6.5 Test requirements

After step 1 a UE shall return a STATUS message.

### 10.1.3.4.7 Incoming call / U7 call received / DTCH assignment

#### 10.1.3.4.7.1 Definition

The call control entity of the UE being in the state, U7, a radio bearer establishment procedure is performed for traffic channel.

#### 10.1.3.4.7.2 Conformance requirement

It is a network dependent decision when to initiate the assignment of a traffic channel during the mobile terminating call establishment phase.

Initiation of the assignment phase does not directly change the state of a CC entity nor affect any call control timer, but may have some secondary effects (see e.g. TS 24.008 clause 5.2.2.3.2).

References

TS 24.008 clause 5.2.2.7.

#### 10.1.3.4.7.3 Test purpose

To verify that a CC entity of a UE in CC-state U7, "Call Received", when a traffic channel is allocated by the network performing the radio bearer establishment procedure, stays in CC-state U7.

#### 10.1.3.4.7.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U7 by using table 10.1.3/1.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected basic service is telephony. If necessary, the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U7. The SS sends a RADIO BEARER SETUP for traffic channel to the UE. The UE shall respond with a RADIO BEARER SETUP COMPLETE message. The SS verifies by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| 2 | <- | | STATUS ENQUIRY | |
| 3 | -> | | STATUS | cause #30, state U7 |

Specific message contents:

None.

#### 10.1.3.4.7.5 Test requirements

After step 1 the CC state U7, "Call Received", shall remain unchanged.

### 10.1.3.4.8 Incoming call / U7 call received / RELEASE COMPLETE received

#### 10.1.3.4.8.1 Definition

The call control entity of the UE being in the state, U7, the call is cleared by a RELEASE COMPLETE message sent by the SS.

#### 10.1.3.4.8.2 Conformance requirement

1) A call control entity shall accept an incoming RELEASE COMPLETE message used to initiate the call clearing even though the cause information element is not included.

2) A call control entity of the UE in any call control state shall, upon receipt of a RELEASE COMPLETE message from its peer entity in the network: stop all running call control timers ; release the MM connection; and return to the "null" state.

References

Conformance requirement 1: TS 24.008 clause 5.4.2

Conformance requirement 2: TS 24.008 clause 5.4.4.1.3

#### 10.1.3.4.8.3 Test purpose

1) To verify that a CC entity of the UE in CC-state U7, "Call received", upon receipt of a RELEASE COMPLETE message with valid cause value, enters CC state U0, "Null".

2) To verify that in returning to idle mode, the CC entities relating to the seven mobile terminating transaction identifiers are in state U0, "Null".

#### 10.1.3.4.8.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U7 by using table 10.1.3/1.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE and for which the UE does not use immediate connection; if the UE supports MT telephony without immediate connection, the selected service is telephony. If necessary, the UE is configured for that basic service. The mobile terminated call is initiated. The CC entity of the UE is brought to U7. The SS sends a RELEASE COMPLETE message to the UE. The SS checks by using the status enquiry procedure that the CC entity has entered the state U0 with all the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | RELEASE COMPLETE | note 1 |
| 2 | | <- | STATUS ENQUIRY | |
| 3 | | -> | RELEASE COMPLETE | cause #81 (invalid TI value), note 2 |
| 4 | | SS | | repeat steps 2-3 to cover all the transaction identifiers from 000...110 |
| 5 | | <- | | The SS releases the RRC connection. |

Specific message contents:

NOTE 1: With the cause value chosen arbitrarily.

NOTE 2: TI flag has the value indicating the SS as an originator of the call.

#### 10.1.3.4.8.5 Test requirements

After step 2 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.3.5 Incoming call / U8 connect request

#### 10.1.3.5.1 Incoming call / U8 connect request / CONNECT acknowledged

##### 10.1.3.5.1.1 Definition

The call control entity of the UE being in the state, U8, a CONNECT ACKNOWLEDGE message is received by the UE.

##### 10.1.3.5.1.2 Conformance requirement

In the "connect request" state, the call control entity of the UE shall, upon receipt of a CONNECT ACKNOWLEDGE message: stop timer T313 and enter the "active" state.

References

TS 24.008 clause 5.2.2.6.

##### 10.1.3.5.1.3 Test purpose

To verify that a CC entity of a UE in CC-state U8, "Connect Request", upon receipt of CONNECT ACKNOWLEDGE shall enter the CC-state U10, " Active".

##### 10.1.3.5.1.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U8 by using table 10.1.3/2.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE; if the UE supports MT telephony, the selected basic service is telephony. If necessary the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U8 (if the UE uses immediate connection for the selected basic service then p = Y, otherwise p = N). The SS sends a CONNECT ACKNOWLEDGE message. The SS checks by using the status enquiry procedure that the CC entity of the UE has entered state U10, active.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| A1 | | | Radio Bearer Setup Procedure | p = Y, See TS34.108 |
| 2 | <- | | CONNECT ACKNOWLEDGE | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U10 |

Specific message contents:

None.

#### 10.1.3.5.1.5 Test requirements

After step 2 a UE shall enter the CC-state U10, "Active".

### 10.1.3.5.2 Incoming call / U8 connect request / timer T313 time-out

#### 10.1.3.5.2.1 Definition

The call control entity of the UE being in the state, U8, if no response is then received from the SS, timer T313 expires at the UE side.

#### 10.1.3.5.2.2 Conformance requirement

1) When timer T313 expires prior to the receipt of a CONNECT ACKNOWLEDGE message, the UE shall initiate clearing in accordance with clause 5.4.3.

2) Apart from the exceptions identified in TS 24.008 clause 5.4.2, the call control entity of the UE shall initiate clearing by: stopping all running call control timers, sending a DISCONNECT message; starting timer T305; and entering the "disconnect request" state.

References

Conformance requirement 1: TS 24.008 clause 5.2.2.6

Conformance requirement 2: TS 24.008 clause 5.4.3.1

#### 10.1.3.5.2.3 Test purpose

To verify that a CC entity of a UE in CC-state U8, "Connect Request", having waited for a reasonable length of time (e.g. expiry of timer T313) without receiving the appropriate protocol message to complete the incoming call, shall initiate the clearing of that incoming call by sending the CC message DISCONNECT and enter the CC-state U11, "Disconnect Request".

#### 10.1.3.5.2.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U8 by using table 10.1.3/2.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE; if the UE supports MT telephony, the selected basic service is telephony. If necessary the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U8 (if the UE uses immediate connection for the selected basic service then p = Y, otherwise p = N). The T313 expires at the UE and the UE sends a DISCONNECT message and enters state U11, disconnect request. The SS checks by using the status enquiry procedure that the UE has entered the correct state.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| A1 | | | Radio Bearer Setup Procedure | p = Y, See TS34.108 |
| 2 | -> | | DISCONNECT | Shall not be sent before 15 s after entry into state U8. But, shall be sent before 1,1 * T313 after entry into state U8. |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U11 |

Specific message contents:

None.

10.1.3.5.2.5 Test requirements

After step A1 a UE shall initiate the clearing of that incoming call by sending a DISCONNECT message and enter the CC-state U11, "Disconnect Request".

## 10.1.3.5.3 Incoming call / U8 connect request / termination requested by the user

### 10.1.3.5.3.1 Definition

The call control entity of the UE being in the state, U8, the user requests for releasing of the call.

### 10.1.3.5.3.2 Conformance requirement

Apart from the exceptions identified in TS 24.008 clause 5.4.2, the call control entity of the UE shall initiate clearing by: stopping all running call control timers, sending a DISCONNECT message; starting timer T305; and entering the "disconnect request" state.

References

TS 24.008 clause 5.4.3.1

### 10.1.3.5.3.3 Test purpose

To verify that a CC entity of a UE in CC-state U8, "Connect Request", upon request by the user to terminate will send a DISCONNECT message and enter the CC-state U11, "Disconnect Request".

### 10.1.3.5.3.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services;
- MT circuit switched basic services for which immediate connect is not used.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U8 by using table 10.1.3/2.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE; if the UE supports MT telephony, the selected basic service is telephony. If necessary the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U8 (if the UE uses immediate connection for the

selected basic service then p = Y, otherwise p = N). Then the user requests termination of the call. The UE sends a DISCONNECT message and enters state U11, disconnect request. The SS verifies by using the status enquiry procedure that the UE has entered the correct state.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| A1 | | | Radio Bearer Setup Procedure | p = Y, See TS34.108 |
| 2 | | | | the user requests to clear the call |
| 3 | -> | | DISCONNECT | |
| 4 | <- | | STATUS ENQUIRY | |
| 5 | -> | | STATUS | cause #30, state U11 |

Specific message contents:

None.

10.1.3.5.3.5 Test requirements

After step 2 a UE shall send a DISCONNECT message and enter the CC-state U11, "Disconnect Request".

### 10.1.3.5.4 Incoming call / U8 connect request / DISCONNECT received with in-band information

10.1.3.5.4.1 Definition

The call control entity of the UE being in the state, U8, a DISCONNECT message indicating availability of in band information is received by the UE.

10.1.3.5.4.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon receipt of a DISCONNECT message with progress indicator #8:

i) if an appropriate speech traffic channel is not connected, continue clearing as defined in TS 24.008 clause 5.4.4.1.2.1 without connecting to the in-band tone/announcement;

ii) if an appropriate speech traffic channel is connected, attach the user connection for speech if it is not yet attached and enter the "disconnect indication" state. In that state, if upper layers request the clearing of the call, the call control entity of the UE shall proceed as defined in TS 24.008 clause 5.4.4.1.2.1.

….

The call control entity of the MS in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon receipt of a DISCONNECT message with progress indicator #8 and, either not containing an *Allowed Actions* IE or containing an *Allowed Actions* IE indicating "CCBS activation is not possible":

i) if an appropriate speech traffic channel is not connected,

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.
- not connect to the in-band tone/announcement;

ii) if an appropriate speech traffic channel is connected, attach the user connection for speech if it is not yet attached and enter the "disconnect indication" state. In that state, if upper layers request the clearing of the call, the call control entity of the MS shall:

- stop all running call control timers;

- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

References

TS 24.008 clause 5.4.4.1.1.1 and 5.4.4.2.1.1.

### 10.1.3.5.4.3 Test purpose

To verify that a CC entity of a UE in CC-state U8, "Connect Request", upon receipt of a DISCONNECT with progress indicator #8 enters CC-state U12, if the traffic channel is in speech mode, and that the UE sends a RELEASE message and enters CC-state U19 if the DTCH is not in speech mode.

### 10.1.3.5.4.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U8 by using table 10.1.3/4.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE; if the UE supports MT telephony, the selected basic service is telephony. If necessary the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U8. The SS sends a DISCONNECT message containing indication of in-band information availability to the UE. If channel mode is speech, the UE enters state U12, disconnect indication. If channel mode is not speech, the UE sends a RELEASE message and enters state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | DISCONNECT | (note) |
| | | | | DTCH in speech mode: |
| A2 | | <- | STATUS ENQUIRY | |
| A3 | | -> | STATUS | cause #30, state U12 |
| | | | | DTCH is not in speech mode: |
| B2 | | -> | RELEASE | |
| B3 | | <- | STATUS ENQUIRY | |
| B4 | | -> | STATUS | cause #30, state U19 |

Specific message contents:

NOTE: The Progress Indicator, Progress description value:

#8 in band information or appropriate pattern now available.

### 10.1.3.5.4.5 Test requirements

After step 1 a UE shall enter CC-state U12, if the traffic channel is in speech mode. If the DTCH is not in speech mode, the UE shall send a RELEASE message and enter CC-state U19.

### 10.1.3.5.5 Incoming call / U8 connect request / DISCONNECT received without in-band information

#### 10.1.3.5.5.1 Definition

The call control entity of the UE being in the state, U8, a DISCONNECT message is received by the UE. The DISCONNECT message does not contain indication of in-band information availability.

#### 10.1.3.5.5.2 Conformance requirement

The call control entity of the UE in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message without progress indicator information element or with progress indicator different from #8:

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

….

The call control entity of the mobile station in any state except the "null" state, the "disconnect indication" state, and the "release request" state, shall, upon the receipt of a DISCONNECT message either without progress indicator information element or with progress indicator different from #8, and, either without the *Allowed Actions* IE or with the *Allowed Actions* IE indicating that "CCBS is not possible":

- stop all running call control timers;
- send a RELEASE message;
- start timer T308; and
- enter the "release request" state.

References

TS 24.008 clause 5.4.4.1.2.1 and 5.4.4.2.3.1.

#### 10.1.3.5.5.3 Test purpose

To verify that a CC entity of a UE in CC-state U8, "Connect Request", upon receipt of a DISCONNECT without progress indicator, returns a RELEASE message and enters the CC-state U19, "Release Request".

#### 10.1.3.5.5.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U8 by using table 10.1.3/4.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE; if the UE supports MT telephony, the selected basic service is telephony. If necessary the UE is configured for that basic service. Then a mobile terminated

call is initiated. The CC entity of the UE is brought to the state U8. The SS sends a DISCONNECT message not containing indication of in-band information availability to the UE. The UE shall respond with a RELEASE message. The SS checks by using the status enquiry procedure that the CC entity of the UE has entered the state U19, release request.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | DISCONNECT | without progress indicator |
| 2 | -> | | RELEASE | |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U19 |

Specific message contents:

None.

10.1.3.5.5.5 Test requirements

After step 1 a UE shall return a RELEASE message and enter the CC-state U19, "Release Request".

### 10.1.3.5.6 Incoming call / U8 connect request / RELEASE received

#### 10.1.3.5.6.1 Definition

The call control entity of the UE being in the state, U8, a RELEASE message is received by the UE.

#### 10.1.3.5.6.2 Conformance requirement

The call control entity of the UE in any state except the "null" state and the "release request" state, shall, upon receipt of a RELEASE message: stop all running call control timers; send a RELEASE COMPLETE message; release the MM connection; and return to the "null" state.

References

TS 24.008 clause 5.4.3.3

#### 10.1.3.5.6.3 Test purpose

1) To verify that a CC entity of a UE in CC-state U8, "Connect Request", upon receipt of a RELEASE will return a RELEASE COMPLETE and enter the CC-state U0, "Null".

2) To verify that the UE on returning to the idle mode releases the MM-connection and that the CC-entities relating to the seven mobile terminating transaction identifiers are in CC-state U0, "Null".

#### 10.1.3.5.6.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U8 by using table 10.1.3/1.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE; if the UE supports MT telephony, the selected basic service is telephony. If necessary the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U8. The SS sends a RELEASE message. The UE responds with a RELEASE COMPLETE message. The SS checks by using the status enquiry procedure that the CC entity has entered state U0, null, with the relevant transaction identifiers.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | RELEASE | with cause "Normal, unspecified" |
| 2 | | -> | RELEASE COMPLETE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | RELEASE COMPLETE | cause #81 (invalid TI value) |
| 5 | | SS | | repeat steps 3-4 to cover all the transaction identifiers from 000...110 |
| 6 | | <- | | The SS releases the RRC connection. |

Specific message contents:

None.

10.1.3.5.6.5 Test requirements

After step 1 a UE shall return a RELEASE COMPLETE message.

After step 3 CC entities relating to all mobile originating transaction identifiers shall send RELEASE COMPLETE messages with cause value #81 (invalid TI value).

### 10.1.3.5.7 Incoming call / U8 connect request / lower layer failure

#### 10.1.3.5.7.1 Definition

The call control entity of the UE being in the state, U8, a lower layer failure is accomplished at the UE and consequently, communication at layer 3 level with the peer entity is terminated.

#### 10.1.3.5.7.2 Conformance requirement

The MM sublayer shall indicate to all CM entities associated with active MM connections that the MM connection is interrupted, the subsequent action of the MM sublayer (call re-establishment, see TS 24.008 clause 4.5.1.6, or local release) will then depend on the decisions by the CM entities.

References

TS 24.008 clause 4.5.2.3 and clause 4.5.3, TS 25.331 clause 8.3.1 and clause 8.5.6.

#### 10.1.3.5.7.3 Test purpose

To verify that a CC entity of a UE in CC-state U8, "Connect Request", having detected a lower layer failure returns to idle mode, the CC entity is in state U0, "Null".

#### 10.1.3.5.7.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U8 by using table 10.1.3/1.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE; if the UE supports MT telephony, the selected basic service is telephony. If necessary the UE is configured for that basic service. Then a mobile terminated call is initiated. The UE is brought to the state U8. The SS modifies the scrambling code of downlink transmission (DL DPCH) to generate a lower layer failure at the UE. The SS waits long enough to enable the UE to perform cell update procedure. The SS sends RRC CONNECTION RELEASE message as a response to the CELL UPDATE message from the UE. The SS re-modifies the scrambling code of downlink transmission (DL DPCH) to the original one and waits 60 s. The SS will check that the UE will not send any message during 60 s.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS modifies the scrambling code of DPCH for generating lower layer failure |
| 2 | -> | | CELL UPDATE | CCCH |
| 3 | <- | | RRC CONNECTION RELEASE | CCCH |
| 4 | | SS | | SS re-modifies the scrambling code of DPCH to the original one. |
| 5 | | SS | | SS waits 60 s.<br>UE shall send no message on the DCCH |

Specific message contents:

None.

10.1.3.5.7.5 Test requirements

After step 4 the UE shall not send any message to the SS during 60 s.

### 10.1.3.5.8 Incoming call / U8 connect request / DTCH assignment

#### 10.1.3.5.8.1 Definition

The call control entity of the UE being in the state, U8, a radio bearer establishment procedure is performed for traffic channel.

#### 10.1.3.5.8.2 Conformance requirement

It is a network dependent decision when to initiate the assignment of a traffic channel during the mobile terminating call establishment phase.

Initiation of the assignment phase does not directly change the state of a CC entity nor affect any call control timer, but may have some secondary effects (see e.g. TS 24.008 clause 5.2.2.3.2

References

TS 24.008 clause 5.2.2.7.

#### 10.1.3.5.8.3 Test purpose

To verify that a CC entity of a UE in CC-state U8, "Connect Request", when a traffic channel is allocated by the network performing the radio bearer establishment procedure, stays in the CC-state U8.

#### 10.1.3.5.8.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U8 by using table 10.1.3/1.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE; if the UE supports MT telephony, the selected basic service is telephony. If necessary the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U8. The SS sends a RADIO BEARER SETUP for traffic channel to the UE. The UE shall respond with a RADIO BEARER SETUP COMPLETE message. The SS verifies by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Radio Bearer Setup Procedure | See TS 34.108 clause 7.1.3 |
| 2 | <- | | STATUS ENQUIRY | |
| 3 | -> | | STATUS | cause #30, state U8 |

Specific message contents:

None.

10.1.3.5.8.5 Test requirements

After step 1 the CC-state U8, "Connect Request", shall remain unchanged.

## 10.1.3.5.9 Incoming call / U8 connect request / unknown message received

10.1.3.5.9.1 Definition

The call control entity of the UE being in the state, U8, an unknown message is received by the UE.

10.1.3.5.9.2 Conformance requirement

If a UE receives an RR, MM or CC message with message type not defined for the PD or not implemented by the receiver in acknowledged mode, it shall return a status message (STATUS, MM STATUS depending on the protocol discriminator) with cause # 97 "message type non-existent or not implemented".

References

TS 24.008 clause 8.4.

10.1.3.5.9.3 Test purpose

To verify that a CC entity of a UE in CC-state U8, "Connect Request", having received an unknown message from its peer entity returns a STATUS message.

10.1.3.5.9.4 Method of test

Related ICS/IXIT statements

- supported MT circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U8 by using table 10.1.3/1.

Test procedure

An MT circuit switched basic service is selected that is supported by the UE; if the UE supports MT telephony, the selected basic service is telephony. If necessary the UE is configured for that basic service. Then a mobile terminated call is initiated. The CC entity of the UE is brought to the state U8. The SS sends a message with message type not defined for the protocol discriminator to the UE. The UE shall respond with a STATUS message, and finally the SS checks by using the status enquiry procedure that the state of the CC entity has remained unchanged.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | unknown message | message type not defined for PD |
| 2 | | -> | STATUS | cause #97, state U8 |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U8 |

Specific message contents:

None.

10.1.3.5.9.5 Test requirements

After step 1 a UE shall return a STATUS message.

# 10.1.4 In call functions

## 10.1.4.1 In-call functions / DTMF information transfer

### 10.1.4.1.1 In-call functions / DTMF information transfer / basic procedures

#### 10.1.4.1.1.1 Definition

Dual Tone Multi Frequency (DTMF) is an inband one out of four plus one out of four signalling system primarily used from terminal instruments in telecommunication networks.

#### 10.1.4.1.1.2 Conformance requirement

1) A user may cause a DTMF tone to be generated e.g. by depression of a key in the UE. The relevant action is interpreted by the UE as a requirement for a DTMF digit to be sent in a START DTMF message on an established FACCH. This message contains the value of the digit to be transmitted (0, 1, ..., 9, A, B, C, D, *, #).

   Only a single digit will be transferred in each START DTMF message.

2) Upon receiving the START DTMF message the network will reconvert the received digit back into a DTMF tone which is applied toward the remote user and returns a START DTMF ACKNOWLEDGE message to the UE. This acknowledgement may be used in the UE to generate an indication as a feedback for a successful transmission.

3) When the user indicates that the DTMF sending should cease e.g. by releasing the key the UE will send a STOP DTMF message to the network.

References

Conformance requirement 1: TS 24.008 clause 5.5.7.1

Conformance requirement 2 and 4: TS 24.008 clause 5.5.7.2

Conformance requirement 3: TS 24.008 clause 5.5.7.3

#### 10.1.4.1.1.3 Test purpose

1) To verify that an UE supporting the Mobile originating DTMF protocol control procedure, having a CC entity for speech in state U10, "Active": when made to send a DTMF tone, sends a START DTMF message.

2) To verify that an UE supporting the Mobile originating DTMF protocol control procedure, having a CC entity for speech in state U10, "Active": when made to send a DTMF tone (the corresponding IA5 character being selected from among the ones supported), sends a START DTMF message specifying the correct IA5 character in the "keypad information" field of the keypad facility information element and to verify that acknowledgement send by the SS is used in the UE to generate a feedback indication for a successful transmission, if applicable.

3) To verify that the UE will send a STOP DTMF message to the network.

4) To verify that the state U10 of the UE CC entity has remained unchanged throughout the test procedure.

#### 10.1.4.1.1.4 Method of test

##### Related ICS/IXIT statements

- supported teleservices;
- supported character set (e.g. 0-9, #, *, A, B, C, D);
- if and how DTMF tone is indicated to the user.

##### Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U10 "Active" by using table 10.1.2/1.

##### Test procedure

The UE being in the active state, a user causes a DTMF tone to be generated e.g. by depression of a key in the UE. A DTMF digit corresponding to the digit indicated by the user is sent in a START DTMF message by the UE. The SS will return a START DTMF ACKNOWLEDGE message to the UE. This acknowledgement may be used in the UE to generate an indication as a feedback for a successful transmission. Then the user indicates that the DTMF sending should cease e.g. by releasing the key. The UE will send a STOP DTMF message to the network which is acknowledged with STOP DTMF ACKNOWLEDGE by the SS.

The sequence described above is repeated for each of the applicable characters 0-9, #, *, A, B, C, and D.

Then a case of rejecting a DTMF tone is tested.

The state of the UE is verified throughout the test procedure.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | Request the user to cause a DTMF tone to be generated |
| | -> | | START DTMF | the SS will verify that the transmitted information corresponds to the digit pressed |
| 2 | <- | | START DTMF ACKNOWLEDGE | possible indication of a DTMF tone depending the ICS/IXIT statements |
| 3 | <- | | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U10 |
| 5 | -> | | STOP DTMF | |
| 6 | <- | | STOP DTMF ACKNOWLEDGE | the DTMF tone indication shall be stopped |
| 7 | | | | the steps 1-6 shall be repeated for each of the applicable characters 0-9, #, *, A, B, C, D. |
| 8 | <- | | STATUS ENQUIRY | |
| 9 | -> | | STATUS | cause #30, state U10 |
| 10 | | SS | | Request the user to cause a DTMF tone to be generated. |
| 11 | -> | | START DTMF | |
| 12 | <- | | START DTMF REJECT | |
| 13 | <- | | STATUS ENQUIRY | |
| 14 | -> | | STATUS | cause #30, state U10 |

Specific message contents:

None.

#### 10.1.4.1.1.5 Test requirements

Upon a user making to send a DTMF tone the UE shall send a START DTMF message on the FACCH to SS.

The SS will verify that the transmitted information corresponds to the digit pressed in the UE.

After step s 2 and 7 (successful DTMF transmission) the CC-state U10, "Active", shall remain unchanged.

After step 12 (unsuccessful DTMF transmission) the CC-state U10, "Active", shall remain unchanged.

### 10.1.4.2 In-call functions / user notification

#### 10.1.4.2.1 In-call functions / User notification / UE terminated

##### 10.1.4.2.1.1 Definition

This is a case for testing user notification procedure terminated by the user equipment.

##### 10.1.4.2.1.2 Conformance requirement

The mobile terminating user notification procedure allows the network to notify a mobile station of any appropriate call-related event during the "active" state of a call. The procedure consists in the network sending a NOTIFY message to the mobile station. No state change occurs at any of the interface sides following the sending or the receipt of this message (but an appropriate indication may optionally be generated in the mobile station).

References

TS 24.008 clause 5.3.1.

##### 10.1.4.2.1.3 Test purpose

To verify that a CC entity of a UE in CC-state U10, "active", upon receiving of a NOTIFY message remains in the active state.

10.1.4.2.1.4 Method of test

Related ICS/IXIT statements

- supported circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U10 "Active" by using table 10.1.2/1.

Test procedure

The UE being in the active state, the SS will send a NOTIFY message to the UE. The state of the UE is checked after that.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | NOTIFY | |
| 2 | <- | | STATUS ENQUIRY | |
| 3 | -> | | STATUS | cause #30, state U10 |

Specific message contents:

None.

10.1.4.2.1.5 Test requirements

After step 1 the CC-state U10, "active", shall remain unchanged.

## 10.1.4.3 In-call functions / channel changes

The two following test cases are for testing some elementary radio resource level procedures during an active state of a call to ensure call maintenance also during Hard handover.

### 10.1.4.3.1 In-call functions / channel changes / a successful channel change in active state/ Hard handover

10.1.4.3.1.1 Definition

This is a case to test a change of the frequency of a physical channel during active state of a call.

10.1.4.3.1.2 Conformance requirement

1) The UE being in the active state after having successful completed a physical channel reconfiguration, shall remain in the active state.

References

TS 24.008 clause 5.3.4.3.2, TS 25.331 clause 8.3.5.

10.1.4.3.1.3 Test purpose

To verify that the UE being in the active state after having successful completed a physical channel reconfiguration remains in the active state.

10.1.4.3.1.4 Method of test

Related ICS/IXIT statements

- supported circuit switched basic services;

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U10 "Active" by using table 10.1.2/1.

Test procedure

The UE being in the active state, the SS initiated physical channel reconfiguration procedure causing an intracell change of channel by sending a PHYSICAL CHANNEL RECONFIGURATION message to the UE. The UE performs physical channel reconfiguration procedure and after the main signalling link is successfully established, the UE returns a PHYSICAL CHANNEL RECONFIGURATION COMPLETE message on the uplink DCCH using AM RLC. The state of the UE is then checked.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | PHYSICAL CHANNEL RECONFIGURATION | |
| 2 | | -> | PHYSICAL CHANNEL RECONFIGURATION COMPLETE | |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | | -> | STATUS | cause #30, state U10 |

Specific message contents:

None.

10.1.4.3.1.5 Test requirements

After step 2 the UE shall remain in the active state.

## 10.1.4.3.2 In-call functions / channel changes / an unsuccessful channel change in active mode/Hard handover

10.1.4.3.2.1 Definition

This is a case to test an unsuccessful change of the frequency of a physical channel during active state of a call.

10.1.4.3.2.2 Conformance requirement

1) The UE, when returning to the old channel after physical channel reconfiguration failure, shall remain in the active state.

References

TS 24.008 clause 5.3.4.3.

10.1.4.3.2.3 Test purpose

To verify that the UE, when returning to the old channel after physical channel reconfiguration failure, will remain in the active state.

10.1.4.3.2.4 Method of test

Related ICS/IXIT statements

- supported circuit switched basic services.

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in MM-state "idle, updated" with valid TMSI and CKSN.

The UE is brought into the state U10 "Active" by using table 10.1.2/1.

Test procedure

The SS sends a PHYSICAL CHANNEL RECONFIGURATION message, but does not activate the assigned physical channel. The UE shall attempt try to activate the new channel (this is not verified) and shall then reactivate the "old" channel. The UE shall send a PHYSICAL CHANNEL RECONFIGURATION FAILURE message on the DCCH using AM RLC and shall set the cause value in IE "failure cause" to "physical channel failure". The state of the UE is then checked.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <- | PHYSICAL CHANNEL RECONFIGURATION | The UE attempts and fails to re-configure the physical channel. |
| 2 | -> | | PHYSICAL CHANNEL RECONFIGURATION FAILURE | NOTE |
| 3 | | <- | STATUS ENQUIRY | |
| 4 | -> | | STATUS | cause #30, state U10 |

Specific message contents:

NOTE: With the cause value "physical channel failure".

10.1.4.3.2.5 Test requirements

After step 2 the UE shall remain in the active state.

## 10.1.4.4 In-call functions / UE terminated in-call modification

### 10.1.4.4.1 In-call functions / UE terminated in-call modification / modify when new mode is not supported

This test is not applicable for R99.

## 10.1.4.5 In-call functions / UE originated in-call modification

### 10.1.4.5.1 In-call functions / UE originated in-call modification / a successful case of modifying

This test is not applicable for R99.

### 10.1.4.5.2 In-call functions / UE originated in-call modification / modify rejected

This test is not applicable for R99.

#### 10.1.4.5.3 In-call functions / UE originated in-call modification / an abnormal case of acceptance

This test is not applicable for R99.

#### 10.1.4.5.4 In-call functions / UE originated in-call modification / an abnormal case of rejection

This test is not applicable for R99.

#### 10.1.4.5.5 In-call functions / UE originated in-call modification / time-out of timer T323

This test is not applicable for R99.

#### 10.1.4.5.6 In-call functions / UE originated in-call modification / a successful channel change in state mobile originating modify

This test is not applicable for R99.

#### 10.1.4.5.7 In-call functions / UE originated in-call modification / an unsuccessful channel change in state mobile originating modify

This test is not applicable for R99.

#### 10.1.4.5.8 In-call functions / UE originated in-call modification / unknown message received

This test is not applicable for R99.

#### 10.1.4.5.9 In-call functions / UE originated in-call modification / a release complete received

This test is not applicable for R99.

## 10.2 Call Re-establishment

### 10.2.1 Void

## 10.3 User to user signalling

### 10.3.1 Definition

The "user to user" information element is used to convey information between the mobile user and a remote ISDN user.

NOTE: There is no test for an UE originating call including a "user-user" information element since it is not a mandatory UE feature.

### 10.3.2 Conformance requirement

The inclusion of the "user-user" information element in downlink call control messages shall cause no adverse effects on the operation of the UE.

References

TS 24.008 clauses 9.3.7, 9.3.23.1 and 10.5.4.25.

### 10.3.3 Purpose of the test

The purpose of this test is to verify that inclusion of the "user-user" information element in either of the down link messages, SETUP or DISCONNECT causes no adverse effects on the operation of the UE.

### 10.3.4 Method of test

Related ICS/IXIT statements

- Supported MT circuit switched basic services.

- Support of user-user information element, and details of suitable codings.

Initial conditions.

System Simulator:

The SS simulates 1 cell, with default parameters.

User Equipment:

The UE is in MM-state "idle updated", with a valid TMSI and CKSN.

Test procedure

The SS attempts to set up a mobile terminated call, with one of the supported circuit switched basic services which has been arbitrarily chosen, the generic call set up procedures for mobile terminating circuit switched calls,(either speech or data) as specified in TS 34.108 clause 7. The default SETUP message contents are modified to include the user-user Information Element. The UE shall not respond adversely to the inclusion of the user-user information element.

After 30 s the SS sends a DISCONNECT message, again the UE shall not respond adversely to the inclusion of the user-user information element, but shall continue to clear down the call normally.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | Generic Call Setup procedure for mobile terminating circuit switched calls defined in TS 34.108, depending on choice of Bearer Capability. The SETUP message contains the user-user IE, see Specific message contents. |
| 2 | | | | The SS waits 30 s. |
| 3 | <- | | DISCONNECT | Message contains the user-user IE, see Specific message contents |
| 4 | -> | | RELEASE | |
| 5 | <- | | RELEASE COMPLETE | |
| 6 | <- | | | The SS releases the RRC connection. |

Specific message contents:

SETUP message contains user-user IE with the string coded in IA5 characters: for example "Call Setup".

DISCONNECT message contains user-user IE with the string coded in IA5 characters: for example "Call Disconnect". (The codings above are for example only. For the case of an UE which supports "user-user" signalling it may be necessary to add meaning to the data fields, see ICS/IXIT statements.)

NOTE: The codings above are for example only. For the case of an UE which supports "user-user" signalling it may be necessary to add meaning to the data fields, see ICS/IXIT statements.

### 10.3.5 Test requirements

After steps 1 and 3 the inclusion of the "user-user" information element in downlink call control messages shall cause no adverse effects on the operation of the UE.

# 11 Session Management Procedures

## 11.1 PDP context activation

### 11.1.1 Initiated by the UE

#### 11.1.1.1 Attach initiated by context activation/QoS Offered by Network is the QoS Requested

##### 11.1.1.1.1 Definition

##### 11.1.1.1.2 Conformance requirement

SM procedures for identified access can only be performed if a GMM context has been established between the UE and the network. If no GMM context has been established, the MM sublayer has to initiate the establishment of a GMM context by use of the GMM procedures as described in chapter 4, 3GPP TS 24.008. After GMM context establishment, SM uses services offered by GMM (see 3GPP TS 24.007). Ongoing SM procedures are suspended during GMM procedure execution.

In UMTS only, integrity protected signalling (see 3GPP TS 24.008 clause 4.1.1.1.1) and in general, see 3GPP TS 33.102) is mandatory. In UMTS only, all protocols shall use integrity protected signalling. Integrity protection of all SM signalling messages is the responsibility of lower layers. It is the network which activates integrity protection. This is done using the security mode control procedure (TS 25.331).

In order to request a PDP context activation, the UE sends an ACTIVATE PDP CONTEXT REQUEST message to the network, enters the state PDP-ACTIVE-PENDING and starts timer T3380. The message contains the selected NSAPI, PDP type, requested QoS and, if the UE requests a static address, the PDP address.

Upon receipt of an ACTIVATE PDP CONTEXT REQUEST message, the network selects a radio priority level based on the QoS negotiated and may reply with an ACTIVATE PDP CONTEXT ACCEPT message. Upon receipt of the message ACTIVATE PDP CONTEXT ACCEPT the UE shall stop timer T3380, shall enter the state PDP-ACTIVE.

If the QoS offered by the network is the same as the QoS requested by the UE, the UE shall accept the negotiated QoS.

In UMTS, both the network and the UE shall store the LLC SAPI and the radio priority in the PDP context. If a UMTS to GSM system change is performed, the new SGSN shall initiate establishment of the logical link using the negotiated QoS profile, the negotiated LLC SAPI, and selected radio priority level stored in the PDP context as in a GSM to GSM Routing Area Update.

A UE, which is capable of operating in both GSM and UMTS, shall use a valid LLC SAPI, while a UE which is capable of operating only in UMTS shall indicate the LLC SAPI value as "LLC SAPI not assigned" in order to avoid unnecessary value range checking and any other possible confusion in the network.

NOTE 1: The radio priority level and the LLC SAPI parameters, though not used in UMTS, shall be included in the messages, in order to support handover between UMTS and GSM networks.

Reference

3GPP TS 24.008 clauses 6.1.1 and 6.1.3.1.1.

##### 11.1.1.1.3 Test purpose

To check that the UE initiates a PS attach, if one is not already active, when PDP context activation is requested.

To test the behaviour of the UE when SS responds to the PDP context activation request with the requested QoS.

##### 11.1.1.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

### Related ICS/IXIT statements

- PS Supported yes/no
- Auto Attach supported yes / no
- Method of context activation

### Test procedure

The UE is attached, then the Detach Request is originated from the UE indicating "GPRS detach without switching off". The SS responds with a Detach Accept after completing the security mode procedures. A PDP context activation is then requested by the user. The PS attach (ATTACH REQUEST) is then indirectly caused by a requested PDP context activation. The SS returns the ATTACH ACCEPT message to the UE. Now session management can proceed with PDP context activation.

On receipt of the ACTIVATE PDP CONTEXT REQUEST message an ACTIVATE PDP CONTEXT ACCEPT is returned by the SS with the same requested QoS. The contents of the ACTIVATE PDP CONTEXT REQUEST message shall then be checked. The SS then waits for T3380 seconds to ensure T3380 has been stopped and no more ACTIVATE PDP CONTEXT REQUEST messages are sent by the UE. The SS then sends a MODIFY PDP CONTEXT REQUEST message to which the UE shall reply with a MODIFY PDP CONTEXT ACCEPT message to ensure the context has been set up.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | UE | | | Detach is performed by the UE using MMI or AT Commands |
| 0 | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Detach". |
| 1 | → | | DETACH REQUEST | |
| 1a | SS | | | The SS starts integrity protection. |
| 2 | ← | | DETACH ACCEPT | SS sends Detach Accept message. |
| 2a | SS | | | The SS releases the RRC connection. |
| 3 | UE | | | Initiate a context activation |
| 3a | SS | | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | → | | ATTACH REQUEST | The UE requests attach |
| 4a | SS | | | The SS starts integrity protection. |
| 5 | ← | | ATTACH ACCEPT | The SS accepts attach<br>Negotiated Ready timer value IE should not be included<br>Force to standby IE set to “Force to standby not indicated” |
| 6 | → | | ACTIVATE PDP CONTEXT REQUEST | The UE requests a PDP context activation (with static PDP address), enters the state PDP-ACTIVE-PENDING and starts timer T3380 |
| 6a | SS | | | The SS establishes the RAB. |
| 7 | ← | | ACTIVATE PDP CONTEXT ACCEPT | The SS accepts the PDP context activation and starts T3380 |
| 7a | UE | | | The UE stops T3380 and enters the state PDP-ACTIVE |
| 8 | SS | | | The SS waits for T3380 expiry to ensure no further activate request messages come from the UE |
| 9 | ← | | MODIFY PDP CONTEXT REQUEST (NETWORK TO UE DIRECTION) | The SS sends a modify request to UE for the activated context |
| 10 | → | | MODIFY PDP CONTEXT ACCEPT (UE TO NETWORK DIRECTION) | The UE accepts the modification request from the SS. This re-confirms that step 6 was correctly executed in the UE. |
| 11 | SS | | | The SS releases the RRC connection due to inactivity (no user data transferred) |

Specific message contents

None.

11.1.1.1.5 Test requirements

At step 0 the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach".

At step 3a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

When requesting a PDP context activation, the UE shall:

- initiate PS ATTACH;
- when the SS responds to a PDP context activation request, initiated by the UE, with the requested QoS, the UE shall complete the PDP context activation procedure. To check if the PDP context activation was successful, SS shall request PDP context modification and UE shall accept it.

## 11.1.1.1a Attach initiated by context activation/QoS Offered by Network is the QoS Requested/Correct handling of QoS extensions for rates above 8640 kbps

### 11.1.1.1a.1 Definition and applicability

UEs which support HS-PDSCH and supporting rates above 8640 kbps (UE Category 9 and/or UE Category 10).

### 11.1.1.1a.2 Conformance requirement

1. SM procedures for identified access can only be performed if a GMM context has been established between the UE and the network. If no GMM context has been established, the MM sublayer has to initiate the establishment of a GMM context by use of the GMM procedures as described in chapter 4. After GMM context establishment, SM uses services offered by GMM (see 3GPP TS 24.007). Ongoing SM procedures are suspended during GMM procedure execution.

   In UMTS only, integrity protected signalling (see 3GPP TS 24.008 clause 4.1.1.1.1) and in general, see 3GPP TS 33.102) is mandatory. In UMTS only, all protocols shall use integrity protected signalling. Integrity protection of all SM signalling messages is the responsibility of lower layers. It is the network which activates integrity protection. This is done using the security mode control procedure (TS 25.331).

2. In order to request a PDP context activation, the UE sends an ACTIVATE PDP CONTEXT REQUEST message to the network, enters the state PDP-ACTIVE-PENDING and starts timer T3380. The message contains the selected NSAPI, PDP type, requested QoS and, if the UE requests a static address, the PDP address. The UE shall ensure that the selected NSAPI is not currently being used by another Session Management entity in the MS.

   Upon receipt of an ACTIVATE PDP CONTEXT REQUEST message, the network selects a radio priority level based on the QoS negotiated and may reply with an ACTIVATE PDP CONTEXT ACCEPT message. Upon receipt of the message ACTIVATE PDP CONTEXT ACCEPT the UE shall stop timer T3380, shall enter the state PDP-ACTIVE. If the offered QoS parameters received from the network differ from the QoS requested by the MS, the MS shall either accept the negotiated QoS or initiate the PDP context deactivation procedure.

   ……

   In UMTS, both the network and the UE shall store the LLC SAPI and the radio priority in the PDP context. If a UMTS to GSM system change is performed, the new SGSN shall initiate establishment of the logical link using the negotiated QoS profile, the negotiated LLC SAPI, and selected radio priority level stored in the PDP context as in a GSM to GSM Routing Area Update.

   A UE, which is capable of operating in both GSM and UMTS, shall use a valid LLC SAPI, while a UE which is capable of operating only in UMTS shall indicate the LLC SAPI value as "LLC SAPI not assigned" in order to avoid unnecessary value range checking and any other possible confusion in the network.

NOTE 1: The radio priority level and the LLC SAPI parameters, though not used in UMTS, shall be included in the messages, in order to support handover between UMTS and GSM networks.

3. The *quality of service* is a type 4 information element with a minimum length of 14 octets and a maximum length of 16 octets. The QoS requested by the MS shall be encoded both in the QoS attributes specified in octets 3-5 and in the QoS attributes specified in octets 6-14.

   In the UE to network direction and in the network to UE direction the following applies:

   - Octets 15 and 16 are optional. If octet 15 is included, then octet 16 shall also be included.

   - A QoS IE received without octets 6-16, without octets 14-16, or without octets 15-16 shall be accepted by the receiving entity.

NOTE: This behavior is required for interworking with entities supporting an earlier version of the protocol, or when the Maximum bit rate for downlink is negotiated to a value lower than 8700 kbps.

…….

| 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | |
|---|---|---|---|---|---|---|---|---|
| Quality of service IEI | | | | | | | | octet 1 |
| Length of quality of service IE | | | | | | | | octet 2 |
| 0 0 spare | | | Delay class | | | Reliability class | | octet 3 |
| Peak throughput | | | | 0 spare | | Precedence class | | octet 4 |
| 0 0 0 spare | | | Mean throughput | | | | | octet 5 |
| Traffic Class | | | Delivery order | | | Delivery of erroneous SDU | | octet 6 |
| Maximum SDU size | | | | | | | | octet 7 |
| Maximum bit rate for uplink | | | | | | | | octet 8 |
| Maximum bit rate for downlink | | | | | | | | octet 9 |
| Residual BER | | | | SDU error ratio | | | | octet 10 |
| Transfer delay | | | | | | Traffic Handling priority | | octet 11 |
| Guaranteed bit rate for uplink | | | | | | | | octet 12 |
| Guaranteed bit rate for downlink | | | | | | | | octet 13 |
| 0 0 0 spare | | | Signal-ling Indicat-ion | Source Statistics Descriptor | | | | octet 14 |
| Maximum bit rate for downlink (extended) | | | | | | | | octet 15 |
| Guaranteed bit rate for downlink (extended) | | | | | | | | octet 16 |

…..

Maximum bit rate for downlink, octet 9 (see 3GPP TS 23.107)

Coding is identical to that of Maximum bit rate for uplink.

If the sending entity wants to indicate a Maximum bit rate for downlink higher than 8640 kbps, it shall set octet 9 to ”11111110”, i.e. 8640 kbps, and shall encode the value for the Maximum bit rate in octet 15.

…..

Maximum bit rate for downlink (extended), octet 15
Bits
8 7 6 5 4 3 2 1
In MS to network direction and in network to MS direction:
0 0 0 0 0 0 0 0 Use the value indicated by the Maximum bit rate for downlink in octet 9.

0 0 0 0 0 0 0 1 Ignore the value indicated by the Maximum bit rate for downlink in octet 9. The maximum bit rate is
0 1 0 0 1 0 1 0 8600 kbps + ((the binary coded value in 8 bits) * 100 kbps), giving a range of values from 8700 kbps to 16000 kbps in 100 kbps increments.

Reference

3GPP TS 24.008 clauses 6.1.1, 6.1.3.1.1 and 10.5.6.5.

11.1.1.1a.3 Test purpose

To check that the UE initiates a PS attach, if one is not already active, when PDP context activation is requested.

To check that the UE performs correct handling of QoS extensions for rates above 8640 kbps, and to check that the UE is, as well, capable of correct handling of QoS not requiring the extension information.

To check the UE successfully completes the PDP context activation when the SS responds to the PDP context activation request with the requested QoS.

11.1.1.1a.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no
- Auto Attach supported yes / no
- Method of context activation
- Supported downlink rates above 8640 kbps yes/no

Test procedure

**Table 11.1.1.1a.1 Test execution test parameters**

| Execution | Maximum bit rate for downlink |
|---|---|
| 1 | Value supported by the UE which is less than 8640 kbps |
| 2 | Value supported by the UE which is bigger than 8640 kbps, see Note 1 |

The UE is attached, then the Detach Request is originated from the UE indicating "GPRS detach without switching off". The SS responds with a Detach Accept after completing the security mode procedures. A PDP context activation is then requested. The IE “Maximum bit rate for downlink” is selected according to Table 11.1.1.1a.1 for execution=1. The PS attach (ATTACH REQUEST) is then indirectly caused by the requested PDP context activation. The SS returns the ATTACH ACCEPT message to the UE. Now session management can proceed with PDP context activation.

On receipt of the ACTIVATE PDP CONTEXT REQUEST message an ACTIVATE PDP CONTEXT ACCEPT is returned by the SS with the same requested QoS. The contents of the ACTIVATE PDP CONTEXT REQUEST message shall then be checked. The SS then waits for T3380 seconds to ensure T3380 has been stopped and no more ACTIVATE PDP CONTEXT REQUEST messages are sent by the UE. The SS then sends a MODIFY PDP CONTEXT REQUEST message to which the UE shall reply with a MODIFY PDP CONTEXT ACCEPT message to ensure the context has been set up.

The test case is repeated with test parameters according to Table 11.1.1.1a.1 for execution=2.

Note 1: A Rel-7 or later UE supporting higher HSDPA categories, 13 or above, is executed as category 9 or 10 depending on UE capability.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 0a | UE | | | Detach is performed by the UE using MMI or AT Commands |
| 0 | SS | | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Detach". |
| 1 | → | | DETACH REQUEST | |
| 1a | SS | | | The SS starts integrity protection. |
| 2 | ← | | DETACH ACCEPT | The SS sends Detach Accept message. |
| 2a | SS | | | The SS releases the RRC connection. |
| 3 | UE | | | The UE initiates a context activation with a requested “Maximum bit rate for downlink” according to Table 11.1.1.1a.1 |
| 3a | SS | | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | → | | ATTACH REQUEST | The UE requests attach |
| 4a | SS | | | The SS starts integrity protection. |
| 5 | ← | | ATTACH ACCEPT | The SS accepts attach<br>Negotiated Ready timer value IE should not be included<br>Force to standby IE set to “Force to standby not indicated” |
| 6 | → | | ACTIVATE PDP CONTEXT REQUEST | The UE requests a PDP context activation (with static PDP address), enters the state PDP-ACTIVE-PENDING and starts timer T3380 |
| 6a | SS | | | The SS establishes the RAB. |
| 7 | ← | | ACTIVATE PDP CONTEXT ACCEPT | The SS accepts the PDP context activation and starts T3380 |
| 7a | UE | | | The UE stops T3380 and enters the state PDP-ACTIVE |
| 8 | SS | | | The SS waits for T3380 seconds to ensure no further activate request messages come from the UE |
| 9 | ← | | MODIFY PDP CONTEXT REQUEST (NETWORK TO UE DIRECTION) | The SS sends a modify request to UE for the activated context |
| 10 | → | | MODIFY PDP CONTEXT ACCEPT (UE TO NETWORK DIRECTION) | The UE accepts the modification request from the SS. This re-confirms that step 6 was correctly executed in the UE. |
| 11 | SS | | | The SS releases the RRC connection due to inactivity (no user data transferred) |

The test sequence is repeated according to Table 11.1.1.1a.1.

Specific message contents

None.

### 11.1.1.1a.5 Test requirements

At step 0 the UE shall send RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach";

At step 3a the UE shall send RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration";

At step 4 the UE shall initiate PS ATTACH;

At step 6 the UE shall send ACTIVE PDP CONTEXT REQUEST message with the IE Requested QoS and Maximum bit rate for downlink set to value according to Table 11.1.1.1a.1;

At step 10 the UE shall send a MODIFY PDP CONTEXT ACCEPT message.

#### 11.1.1.2 QoS offered by the network is a lower QoS

##### 11.1.1.2.1 Void

##### 11.1.1.2.2 Void

### 11.1.2 PDP context activation requested by the network, successful and unsuccessful

#### 11.1.2.1 Definition

Void

#### 11.1.2.2 Conformance requirement

1) Successful PDP context activation requested by the network

   In order to request a PDP context activation, the network sends a REQUEST PDP CONTEXT ACTIVATION message to the UE and starts timer T3385. The message contains an offered PDP address. If available, the APN shall be included in the REQUEST PDP CONTEXT ACTIVATION message.

   Upon receipt of a REQUEST PDP CONTEXT ACTIVATION message, the UE shall than either initiate the PDP context activation procedure as described in 3GPP TS 24.008 clause 6.1.3.1.1, or shall reject the activation request by sending a REQUEST PDP CONTEXT ACTIVATION REJECT message as described in 3GPP TS 24.008 clause 6.1.3.1.4. The value of the reject cause IE of the REQUEST PDP CONTEXT ACTIVATION REJECT message shall indicate the reason for rejection, e.g. "insufficient resources to activate another context".

   The ACTIVATE PDP CONTEXT REQUEST message sent by the UE in order to initiate the PDP context activation procedure shall contain the PDP address, PDP Type and APN requested by the network in the REQUEST PDP CONTEXT ACTIVATION message.

   Upon receipt of the ACTIVATE PDP CONTEXT REQUEST message, the network shall stop timer T3385.

   The same procedures then apply as described for UE initiated PDP context activation (3GPP TS 24.008, clause 6.1.3.1.1.

2) Unsuccessful PDP context activation requested by the network

   Upon receipt of the REQUEST PDP CONTEXT ACTIVATION message, the UE may reject the network requested PDP context activation by sending the REQUEST PDP CONTEXT ACTIVATION REJECT message to the network. The message contains the same TI as included in the REQUEST PDP CONTEXT ACTIVATION and an additional cause code that typically indicates one of the following causes:

   #26: insufficient resources;

   #31: activation rejected, unspecified;

   #40: feature not supported; or

   #95 – 111: protocol errors.

   The network shall stop timer T3385 and enter state PDP-INACTIVE.

3) Whenever a REQUEST PDP CONTEXT ACTIVATION message is received by the UE specifying a transaction identifier relating to a PDP context not in state PDP-INACTIVE, the UE shall locally deactivate the old PDP context relating to the received transaction identifier. Furthermore, the UE shall continue with the activation procedure of a new PDP context as indicated in the received message.

Reference

3GPP TS 24.008 clauses 6.1.3.1.2, 6.1.3.1.4 and 8.3.2.f).

#### 11.1.2.3 Test purpose

To test behaviour of the UE upon receipt of a PDP context activation request from the SS:

a) When UE supports PDP context activation requested by the network

b) When UE supporting PDP context activation requested by the network, receives REQUEST PDP CONTEXT ACTIVATION message with transaction identifier relating to an already active PDP context

c) When UE does not support PDP context activation requested by the network

#### 11.1.2.4 Method of test

##### Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

##### Related ICS/IXIT statements

- PS Supported yes/no

##### Test procedure

A REQUEST PDP CONTEXT ACTIVATION message is sent by the SS. If UE does not accept PDP context activation, it shall send a REQUEST PDP CONTEXT ACTIVATION REJECT message (UE behaviour type B) , else UE will start PDP context activation procedure (UE behaviour type A).

On receipt of the ACTIVATE PDP CONTEXT REQUEST message from the UE, an ACTIVATE PDP CONTEXT ACCEPT message is returned by the SS. This is repeated until the maximum number of PDP contexts supported by the UE is activated (up to two).

When maximum number of PDP contexts is reached, UE shall reject next REQUEST PDP CONTEXT ACTIVATION message.

In response to the last activation request the UE shall return a REQUEST PDP CONTEXT ACTIVATION REJECT message with cause set to 'insufficient resources', 'activation rejected, unspecified', ‘feature not supported’ or 'protocol errors' using cause values #26, #31, #40 or #95-111.

REQUEST PDP CONTEXT ACTIVATION message is then sent by the SS using transaction identifier of the currently active PDP context. The UE shall activate this context to replace the previous context.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | REQUEST PDP CONTEXT ACTIVATION | SS sends Request a PDP context activation to UE and starts timer T3385. UE behaviour type B: test case continues from Step 6 |
| A2 | → | | ACTIVATE PDP CONTEXT REQUEST | UE behaviour type A:UE replies with a PDP context activation request, Traffic class set to Streaming class or Interactive class or Background class |
| A2a | | SS | | The SS stops timer T3385 and establishes the Radio Access Bearer. |
| A3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | SS accepts the PDP context activation. If maximum number of PDP contexts of 2 (in future implementations this number might change) is reached, test execution continues from Step A5. |
| A4 | | SS | | Steps 1, A2, A2a and A3 are repeated untill maximum number of PDP contexts is reached, using various values for Traffic class IE.<br>NOTE: In future implementations, if all 7 contexts are activated steps A5, 6 and 6a shall not be performed. |
| A5 | ← | | REQUEST PDP CONTEXT ACTIVATION | SS requests a PDP context activation and starts timer T3385 |
| 6 | → | | REQUEST PDP CONTEXT ACTIVATION REJECT | The PDP context activation request is rejected with cause 'insufficient resources' or 'activation rejected, unspecified' or 'feature not supported' or 'protocol errors' using cause values #26, #31, #40 or #95-111. |
| 6a | | SS | | The SS stops timer T3385. UE behaviour type B: test case ends. |
| A7 | ← | | REQUEST PDP CONTEXT ACTIVATION | SS requests a PDP context activation for an existing PDP context with the same TI value as one of the active PDP contexts and starts timer T3385 |
| A8 | UE | | | UE locally deactivates the old PDP context with the same TI value |
| A9 | → | | ACTIVATE PDP CONTEXT REQUEST | UE continues with the activation of a new PDP context to replace locally deactivated PDP context |
| A9a | | SS | | The SS stops timer T3385 and releases Radio Access Bearer for old PDP context. |
| A9b | | SS | | The SS establishes the Radio Access Bearer for new PDP context. |
| A10 | ← | | ACTIVATE PDP CONTEXT ACCEPT | SS accepts the PDP context activation |

Specific message contents

Case 1

Step 6: REQUEST PDP CONTEXT ACTIVATION REJECT message contains the same TI as included in the REQUEST PDP CONTEXT ACTIVATION message in step 5.

Step 7: TI IE value is equal to the TI value of one of the active PDP contexts, Offered PDP address IE value and/or Access point name IE value are (is) different from the corresponding IE value(s) in the existing PDP context.

#### 11.1.2.5 Test requirements

The UE that is configured to support one or more PDP contexts simultaneously shall:

- accept PDP context activation initiated by the SS if number of active contexts is lower than the maximum.
- locally deactivate the old PDP context when a REQUEST PDP CONTEXT ACTIVATION message is received, specifying a transaction identifier relating to an active PDP context and continue with the activation procedure of a new PDP context as indicated in the received message.

The UE that does not support PDP Context Activation (a number of active contexts supported by the UE is equal to maximum or UE does not support PDP context) shall reject PDP context activation initiated by the SS.

## 11.1.3 Abnormal Cases

### 11.1.3.1 T3380 Expiry

#### 11.1.3.1.1 Definition

#### 11.1.3.1.2 Conformance requirement

1) On the first expiry of the timer T3380, the UE shall re-send the PDP CONTEXT ACTIVATION REQUEST.
2) On the second expiry of the timer T3380, the UE shall re-send the PDP CONTEXT ACTIVATION REQUEST.
3) On the third expiry of the timer T3380, the UE shall re-send the PDP CONTEXT ACTIVATION REQUEST.
4) On the fourth expiry of the timer T3380, the UE shall re-send the PDP CONTEXT ACTIVATION REQUEST.
5) On the fifth expiry of the timer T3380, the UE shall release all resources possibly allocated for this invocation and shall abort the procedure; no automatic PDP context activation re-attempt shall be performed.

Reference

3GPP TS 24.008 clause 6.1.3.1.5 a).

#### 11.1.3.1.3 Test purpose

To test the behaviour of the UE when the SS does not reply to PDP CONTEXT ACTIVATION REQUEST.

#### 11.1.3.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no
- Method of activating a context

Test procedure

A PDP context activation is requested by the user. The UE shall send the ACTIVATE PDP CONTEXT REQUEST message five times with T3380 seconds between each message. After this, no further ACTIVATE PDP CONTEXT REQUEST messages shall be sent by the UE.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a context activation |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Request a PDP context activation |
| 3 | | SS | | T3380 seconds |
| 4 | → | | ACTIVATE PDP CONTEXT REQUEST | Request a PDP context activation |
| 5 | | SS | | T3380 seconds |
| 6 | → | | ACTIVATE PDP CONTEXT REQUEST | Request a PDP context activation |
| 7 | | SS | | T3380 seconds |
| 8 | → | | ACTIVATE PDP CONTEXT REQUEST | Request a PDP context activation |
| 9 | | SS | | T3380 seconds |
| 10 | → | | ACTIVATE PDP CONTEXT REQUEST | Request a PDP context activation |
| 11 | | SS | | Wait for T3380 seconds to ensure no further ACTIVATE PDP CONTEXT REQUEST messages are sent by the UE |

Specific message contents

None.

#### 11.1.3.1.5 Test requirements

UE shall re-send the ACTIVATE PDP CONTEXT REQUEST to SS five times in order to initiate PDP context, with expiry of timer T3380 between messages. After fifth try, UE shall send no more ACTIVATE PDP CONTEXT REQUEST to SS.

### 11.1.3.2 Collision of UE initiated and network requested PDP context activation

#### 11.1.3.2.1 Definition

This test needs to take into account the number of PDP contexts supported by the UE, to be able to test the response when the network tries to initiate a new context.

#### 11.1.3.2.2 Conformance requirement

A collision of a UE initiated and a network requested PDP context activation procedure is identified by the UE if a REQUEST PDP CONTEXT ACTIVATION message is received from the network after the UE has sent an ACTIVATE PDP CONTEXT REQUEST message, and the UE has not yet received an ACTIVATE PDP CONTEXT ACCEPT or ACTIVATE PDP CONTEXT REJECT message.

NOTE: In general, the UE is unable to test if the PDP type, PDP address and APN in the REQUEST PDP CONTEXT ACTIVATION message are the same as those for the PDN to which it is attempting to activate a context. This is because the UE may have omitted one or more of the parameters in the ACTIVATE PDP CONTEXT REQUEST message, since it is relying on default values to be provided by the network.

In the case of such a collision, the UE initiated PDP context activation shall take precedence over the network requested PDP context activation. If the UE is able to compare the PDP type, PDP address and APN requested in the ACTIVATE PDP CONTEXT REQUEST message with those requested in the REQUEST PDP CONTEXT ACTIVATION message and these parameters are equal, then the UE shall discard the REQUEST PDP CONTEXT ACTIVATION message and shall wait for the network response to its ACTIVATE PDP CONTEXT REQUEST message. If the UE is not able to compare the PDP type, PDP address, and APN requested in the ACTIVATE PDP CONTEXT REQUEST message with those requested in the REQUEST PDP CONTEXT ACTIVATION message, then the UE shall send a REQUEST PDP CONTEXT ACTIVATION REJECT message with the cause 'insufficient resources' to the network, and wait for an ACTIVATE PDP CONTEXT ACCEPT message.

Reference

3GPP TS 24.008 clause 6.1.3.1.5 b), case: Static PDP address collision detected within the UE.

11.1.3.2.3 Test purpose

To test the behaviour of the UE when there is a collision between an UE initiated and network requested PDP context activation detected by the UE.

11.1.3.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no
- Network requested PDP context activation supported yes/no
- Method of PDP context activation

Case 1

For an UE that supports PDP context activation requested by the network.

Test procedure

A PDP context activation is requested by the user with a static PDP address. After receipt of the ACTIVATE PDP CONTEXT REQUEST message the SS sends a REQUEST PDP CONTEXT ACTIVATION message followed by an ACTIVATE PDP CONTEXT ACCEPT message in a time less than T3380 (Use T3380/2). The UE shall send no messages within this time.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a context activation |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Request a PDP context activation (with static PDP address) |
| 3 | ← | | REQUEST PDP CONTEXT ACTIVATION | Request a PDP context activation request |
| 4 | SS | | | Wait for T3380/2 seconds to ensure UE does not re-send ACTIVATE PDP CONTEXT REQUEST |
| 5 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context activation |

Case 2

For a UE that does not support PDP context activation requested by the network.

Test procedure

A PDP context activation is requested by the user. After receipt of the ACTIVATE PDP CONTEXT REQUEST message the SS sends a REQUEST PDP CONTEXT ACTIVATION message. The UE shall send a REQUEST PDP CONTEXT ACTIVATION REJECT message with cause set to 'insufficient resources'. The SS then sends an ACTIVATE PDP CONTEXT ACCEPT.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a context activation |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Request a PDP context activation |
| 3 | ← | | REQUEST PDP CONTEXT ACTIVATION | Request a PDP context activation |
| 4 | → | | REQUEST PDP CONTEXT ACTIVATION REJECT | Cause set to 'insufficient resources'. |
| 5 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context activation |

Specific message contents

For Case 1 and Case 2:

Step 2: ACTIVATE PDP CONTEXT REQUEST message contains PDP address and APN IEs.

Step 3: REQUEST PDPD CONTEXT ACTIVATION message contains the same PDP address and APN values as in Step 2.

#### 11.1.3.2.5 Test requirements

In the case of such collision,

- UE that supports PDP context activation requested by the network shall discard the REQUEST PDP CONTEXT ACTIVATION message from SS and wait for an ACTIVATE PDP CONTEXT ACCEPT message.
- UE that does not support PDP context activation requested by the network shall reject PDP context activation initiated by the SS.

### 11.1.3.3 Network initiated PDP context activation request for an already activated PDP context (on the UE side)

#### 11.1.3.3.1 Definition

#### 11.1.3.3.2 Conformance requirement

If the UE receives a REQUEST PDP CONTEXT ACTIVATION message with the same combination of APN, PDP type and PDP address as an already activated PDP context, the UE shall deactivate the existing PDP context and, if any, all the linked PDP contexts (matching the combination of APN, PDP type and PDP address) locally without notification to the network and proceed with the requested PDP context activation.

Reference

3GPP TS 24.008 clause 6.1.3.1.5 d).

#### 11.1.3.3.3 Test purpose

To test the behaviour of the UE when it detects a network initiated PDP context activation for the PDP context already activated on the UE side.

#### 11.1.3.3.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

PS Supported yes/no

Method of PDP context activation

Test procedure

A PDP context activation is requested by the user. SS accepts PDP context activation. Secondary PDP context activation is requested by the user. SS accepts secondary PDP context activation. SS sends a REQUEST PDP CONTEXT ACTIVATION message with the same combination of APN, PDP type and PDP address as an already activated PDP context. The UE deactivates the existing PDP context and linked secondary PDP context (matching the combination of APN, PDP type and PDP address) locally without notification to the SS and proceeds with the requested PDP context activation.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a context activation |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | UE requests a PDP context activation |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | SS accepts the PDP context activation |
| 4 | → | | ACTIVATE SECONDARY PDP CONTEXT REQUEST | UE requests a secondary PDP context activation |
| 5 | ← | | ACTIVATE SECONDARY PDP CONTEXT ACCEPT | SS accepts the secondary PDP context activation |
| 6 | ← | | REQUEST PDP CONTEXT ACTIVATION | SS requests a PDP context activation with the same combination of APN, PDP type and PDP address as the activated PDP context |
| 7 | UE | | | UE locally deactivates the activated PDP context and the secondary PDP context |
| 9 | → | | ACTIVATE PDP CONTEXT REQUEST | UE replies with a Request PDP context activation |
| 10 | ← | | ACTIVATE PDP CONTEXT ACCEPT | SS accepts the PDP context activation |

Specific message contents

None.

### 11.1.3.3.5 Test requirements

When inconsistency of PDP context between the UE and network is detected by the UE, then local synchronisation procedure shall be initiated in the UE. The PDP context and all (if any) linked contexts are implicitly deactivated and the new request shall be proceeded.

## 11.1.4 Secondary PDP context activation procedures

### 11.1.4.1 Successful Secondary PDP Context Activation Procedure Initiated by the UE

#### 11.1.4.1.1 QoS Offered by Network is the QoS Requested

##### 11.1.4.1.1.1 Definition

##### 11.1.4.1.1.2 Conformance requirement

In order to request a PDP context activation with the same PDP address and APN as an already active PDP context, the UE shall send an ACTIVATE SECONDARY PDP CONTEXT REQUEST message to the network, enter the state PDP-ACTIVE-PENDING and start timer T3380. The message shall contain the selected NSAPI. The UE shall ensure that the selected NSAPI is not currently being used by another Session Management entity in the UE. The message shall also include a QoS profile, a requested LLC SAPI and the Linked TI. The QoS profile is the requested QoS. If present, the TFT shall be sent transparently through the SGSN to the GGSN to enable packet classification and policing for downlink data transfer.

Upon receipt of an ACTIVATE SECONDARY PDP CONTEXT REQUEST, the network shall validate the message by verifying the TI given in the Linked TI IE to be any of the active PDP context(s). The same GGSN address shall be used by the SGSN as for the already established PDP context(s) for that PDP address. The network shall select a radio priority level based on the QoS negotiated and shall reply with an ACTIVATE SECONDARY PDP CONTEXT ACCEPT message, if the request can be accepted.

NOTE 1: If the UE requested a value for a QoS parameter that is not within the range specified by 3GPP TS 23.107, the network should negotiate the parameter to a value that lies within the specified range.

Upon receipt of the message ACTIVATE SECONDARY PDP CONTEXT ACCEPT, the UE shall stop timer T3380 and enter the state PDP-ACTIVE. If the offered QoS parameters received from the network differ from the QoS requested by the UE, the UE shall either accept the negotiated QoS or initiate the PDP context deactivation procedure.

In UMTS, both SGSN and UE shall store the LLC SAPI and the radio priority in the PDP context. If a UMTS to GSM Routing Area Update is performed, the new SGSN shall initiate establishment of the logical link using the negotiated LLC SAPI, the negotiated QoS profile and selected radio priority level stored in the PDP context as in a GSM to GSM Routing Area Update.

An UE, which is capable of operating in both GSM and UMTS, shall use a valid LLC SAPI, while an UE which is capable of operating only in UMTS shall indicate the LLC SAPI value as "LLC SAPI not assigned" in order to avoid unnecessary value range checking and any other possible confusion in the network. When the UE uses a valid LLC SAPI, the network shall return a valid LLC SAPI. The network shall return the “LLC SAPI not assigned” value only when the UE uses the “LLC SAPI not assigned” value.

NOTE 2: The radio priority level and the LLC SAPI parameters, though not used in UMTS, shall be included in the messages, in order to support handover between UMTS and GSM networks.

Reference

3GPP TS 24.008 clauses 6.1.3.2 and 6.1.3.2.1.

##### 11.1.4.1.1.3 Test purpose

To test the behaviour of the UE when SS responds to a Secondary PDP context activation request with the requested QoS.

##### 11.1.4.1.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE and is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no
- Method of context activation
- Secondary PDP context activation supported yes/no

Test procedure

A PDP context activation is requested by the user and accepted by the SS. Secondary PDP context activation is requested by the user. On receipt of the ACTIVATE SECONDARY PDP CONTEXT REQUEST message an ACTIVATE SECONDARY PDP CONTEXT ACCEPT is returned by the SS with the same requested QoS. The SS then waits for T3380 seconds to ensure T3380 has been stopped and no more ACTIVATE SECONDARY PDP CONREXT REQUEST messages are sent by the UE. The SS then sends a MODIFY PDP CONTEXT REQUEST message to which the UE shall reply with a MODIFY PDP CONTEXT ACCEPT message to ensure the context has been set up.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a PDP context activation |
| 1a | SS | | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to either Originating Streaming Call, Originating Interactive Call or Originating Background Call |
| 1b | → | | SERVICE REQUEST | Service type = "signalling" |
| 1c | SS | | | The SS starts integrity protection. |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 2a | SS | | | The SS establishes the RAB |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | The SS accepts the PDP context with the requested QoS |
| 4 | UE | | | The UE initiates a secondary PDP context activation |
| 5 | → | | ACTIVATE SECONDARY PDP CONTEXT REQUEST | The UE requests a Secondary PDP context activation, enters the state PDP-ACTIVE-PENDING and starts timer T3380. NSAPI IE value is different from the value in Step 2. |
| 6 | ← | | ACTIVATE SECONDARY PDP CONTEXT ACCEPT | The SS accepts the Secondary PDP context activation with the requested QoS |
| 7 | SS | | | The SS waits for T3380 seconds to ensure no further activate request messages come from the UE |
| 8 | ← | | MODIFY PDP CONTEXT REQUEST (NETWORK TO UE DIRECTION) | The SS sends a modify request to UE for secondary PDP context |
| 9 | → | | MODIFY PDP CONTEXT ACCEPT (UE TO NETWORK DIRECTION) | The UE accepts the modification request from the SS. This re-confirms that step 5 was correctly executed in the UE. |

Specific message contents

Step 2: TI flag (octet 1, Bit 8) in TI IE is set to ‘0’ and value of TIO (octet 1, Bits 765) is set in range 0-6.

Step 3: TI flag in TI IE is set to ‘1’ and value of TIO is the same as in Step 2. Step 5:

- The Linked TI information element in ACTIVATE SECONDARY PDP CONTEXT REQUEST message specifies the TI for the PDP context already activated. The SS can derive PDP address for the secondary PDP context from the Linked TI,
- TI flag in TI IE is set to ‘0’ and value of TIO is the same as in Step 2 and 3

- NSAPI IE value is different from NSAPI value in Step 2

Step 6 and 8: TI flag in TI IE is set to '1' and value of TIO is the same as in Step 5.

Step 9: TI flag in TI IE is set to '0' and value of TIO is the same as in Step 5.

#### 11.1.4.1.1.5 Test requirements

To pass the test the UE shall:

- when the SS responds to Secondary PDP context activation request initiated by the UE, with the requested QoS, the UE shall complete the Secondary PDP context activation procedure. To check if the Secondary PDP context activation was successful, the SS shall request PDP context modification and UE shall accept it.

### 11.1.4.1.2 QoS Offered by Network is a lower QoS

#### 11.1.4.1.2.1 Void

#### 11.1.4.1.2.2 Void

#### 11.1.4.1.2.3 LLC SAPI rejected by the UE

##### 11.1.4.1.2.3.1 Definition

This test can only be performed if LLC SAPI can be set by the user.

##### 11.1.4.1.2.3.2 Conformance Requirement

In order to request a PDP context activation with the same PDP address and APN as an already active PDP context, the UE shall send an ACTIVATE SECONDARY PDP CONTEXT REQUEST message to the network.

Upon receipt of an ACTIVATE SECONDARY PDP CONTEXT REQUEST, the network shall select a radio priority level based on the QoS negotiated and shall reply with an ACTIVATE SECONDARY PDP CONTEXT ACCEPT message, if the request can be accepted.

Upon receipt of the message ACTIVATE SECONDARY PDP CONTEXT ACCEPT, the UE shall stop timer T3380 and enter the state PDP-ACTIVE.

In GSM the UE shall initiate establishment of the logical link for the LLC SAPI indicated by the network if no logical link has been already established for that SAPI. If the LLC SAPI indicated by the network can not be supported by the UE, the UE shall initiate the PDP context deactivation procedure.

##### 11.1.4.1.2.3.3 Test Purpose

To verify the behaviour of the UE when the network responds to the ACTIVATE SECONDARY PDP CONTEXT REQUEST message with a negotiated LLC SAPI which is not supported by the UE.

##### Reference

3GPP TS 24.008, clause 6.1.3.2.1.

##### 11.1.4.1.2.3.4 Method of test

##### Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

##### Related ICS/IXIT statements

- PS Supported yes/no
- User setting of LLC SAPI supported yes/no

- Method of setting LLC SAPI
- Method of context activation
- Secondary PDP context activation supported yes/no

Test procedure

The requested LLC SAPI is set. This is the only LLC SAPI supported by the UE. A PDP context activation is requested by the user and accepted by the SS. A secondary PDP context activation is requested by the user. On receipt of the ACTIVATE SECONDARY PDP CONTEXT REQUEST message an ACTIVATE SECONDARY PDP CONTEXT ACCEPT message is returned by the SS with the LLC SAPI not supported by the UE. The UE shall then send a DEACTIVATE PDP CONTEXT REQUEST message for the secondary PDP context. A DEACTIVATE PDP CONTEXT ACCEPT message will be sent in return by the SS.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a PDP context activation |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 4 | UE | | | Initiate a secondary PDP context activation |
| 5 | → | | ACTIVATE SECONDARY PDP CONTEXT REQUEST | Request a Secondary PDP context activation |
| 6 | ← | | ACTIVATE SECONDARY PDP CONTEXT ACCEPT | Accept the Secondary PDP context activation with LLC SAPI not supported by the UE |
| 7 | → | | DEACTIVATE PDP CONTEXT REQUEST | Request deactivation of all PDP contexts |
| 8 | ← | | DEACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context deactivation |

Specific message contents

In step 3 *Negotiated LLC SAPI* IE is equal to *Requested LLC SAPI* IE in step 2 and step 5.

In step 7 SM cause IE shall have value #25: LLC or SNDCP failure. Also, *Tear down indicator* IE shall be included in the DEACTIVATE PDP CONTEXT REQUEST message to deactivate all PDP contexts for this PDP address.

## 11.1.4.2 Unsuccessful Secondary PDP Context Activation Procedure Initiated by the UE

### 11.1.4.2.1 Definition

### 11.1.4.2.2 Conformance requirement

Upon receipt of an ACTIVATE SECONDARY PDP CONTEXT REQUEST message, the network may reject the UE initiated PDP context activation by sending an ACTIVATE SECONDARY PDP CONTEXT REJECT message to the UE. Upon receipt of an ACTIVATE SECONDARY PDP CONTEXT REJECT message, the UE shall stop timer T3380 and enter the state PDP-INACTIVE.

Reference

3GPP TS 24.008 clauses 6.1.3.2 and 6.1.3.2.2.

### 11.1.4.2.3 Test purpose

To test the behaviour of the UE when network rejects the UE initiated Secondary PDP context activation.

#### 11.1.4.2.4 Method of test

##### Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE and is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

##### Related ICS/IXIT statements

- PS Supported yes/no
- Method of context activation
- Secondary PDP context activation supported yes/no

##### Test procedure

A PDP context activation is requested by the user and accepted by the SS. Secondary context activation is requested by the user. On receipt of the ACTIVATE SECONDARY PDP CONTEXT REQUEST message from the UE, an ACTIVATE SECONDARY PDP CONTEXT REJECT with cause #43 'unknown PDP context' is returned by the SS. SS shall wait for T3380 seconds to ensure that the UE sends no more ACTIVATE SECONDARY PDP CONTEXT REQUEST messages.

##### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a PDP context activation |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 4 | UE | | | Initiate a secondary PDP context activation |
| 5 | → | | ACTIVATE SECONDARY PDP CONTEXT REQUEST | Request a Secondary PDP context activation |
| 6 | ← | | ACTIVATE SECONDARY PDP CONTEXT REJECT | SS rejects the Secondary PDP context activation with cause '#43: unknown PDP context' |
| 7 | SS | | | Wait for T3380 seconds to ensure no further activate request messages come from the UE |

##### Specific message contents

Step 5. The *Linked TI* information element specifies the TI which is different from the TI in the PDP context activated in steps 1-3.

#### 11.1.4.2.5 Test requirements

After a secondary PDP context activation being rejected by the network, the UE shall not re-send the ACTIVATE SECONDARY PDP CONTEXT REQUEST message.

### 11.1.4.3 Abnormal cases

#### 11.1.4.3.1 T3380 Expiry

##### 11.1.4.3.1.1 Definition

##### 11.1.4.3.1.2 Conformance requirement

1) On the first expiry of the timer T3380, the UE shall re-send the ACTIVATE SECONDARY PDP CONTEXT REQUEST.

2) On the second expiry of the timer T3380, the UE shall re-send the ACTIVATE SECONDARY PDP CONTEXT REQUEST.

3) On the third expiry of the timer T3380, the UE shall re-send the ACTIVATE SECONDARY PDP CONTEXT REQUEST.

4) On the fourth expiry of the timer T3380, the UE shall re-send the ACTIVATE SECONDARY PDP CONTEXT REQUEST.

5) On the fifth expiry of the timer T3380, the UE shall release all resources possibly allocated for this invocation and shall abort the procedure; no automatic secondary PDP context activation re-attempt shall be performed.

Reference

3GPP TS 24.008 clause 6.1.3.2.3 a).

##### 11.1.4.3.1.3 Test purpose

To test the behaviour of the UE when the SS does not reply to ACTIVATE SECONDARY PDP CONTEXT REQUEST message.

##### 11.1.4.3.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no
- Method of activating a context
- Secondary PDP context activation supported yes/no

Test procedure

A PDP context is activated by the user and accepted by the SS. Secondary PDP context activation is requested by the user. The UE shall send ACTIVATE SECONDARY PDP CONTEXT REQUEST message five times with T3380 seconds between each message. After this, no further ACTIVATE SECONDARY PDP CONTEXT REQUEST messages shall be sent by the UE.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a PDP context activation |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 4 | UE | | | Initiate a secondary PDP context activation |
| 5 | → | | ACTIVATE SECONDARY PDP CONTEXT REQUEST | Request a Secondary PDP context activation |
| 6 | | SS | | T3380 seconds |
| 7 | → | | ACTIVATE SECONDARY PDP CONTEXT REQUEST | Request the Secondary PDP context activation |
| 8 | | SS | | T3380 seconds |
| 9 | → | | ACTIVATE SECONDARY PDP CONTEXT REQUEST | Request the Secondary PDP context activation |
| 10 | | SS | | T3380 seconds |
| 11 | → | | ACTIVATE SECONDARY PDP CONTEXT REQUEST | Request the Secondary PDP context activation |
| 12 | | SS | | T3380 seconds |
| 13 | → | | ACTIVATE SECONDARY PDP CONTEXT REQUEST | Request the Secondary PDP context activation |
| 14 | | SS | | Wait for T3380 seconds to ensure no further ACTIVATE SECONDARY PDP CONTEXT REQUEST messages are sent by the UE |

Specific message contents

None.

11.1.4.3.1.5 Test requirements

UE shall re-send the ACTIVATE SECONDARY PDP CONTEXT REQUEST to SS five times in order to initiate a Secondary PDP context, with expiry of timer T3380 between messages. After fifth try, UE shall send no more ACTIVATE SECONDARY PDP CONTEXT REQUEST messages to SS.

# 11.2 PDP context modification procedure

## 11.2.1 Network initiated PDP context modification

### 11.2.1.1 Definition

### 11.2.1.2 Conformance requirement

In order to initiate the procedure, the network sends the MODIFY PDP CONTEXT REQUEST message to the UE and starts timer T3386. The message shall contain the new QoS and the radio priority level and LLC SAPI that shall be used by the UE in GSM at the lower layers for the transmission of data related to the PDP context.

Upon receipt of this message the UE shall reply with the MODIFY PDP CONTEXT ACCEPT message, if the UE accepts the new QoS and the indicated LLC SAPI.

If the UE does not accept the new QoS or the indicated LLC SAPI, the UE shall initiate the PDP context deactivation procedure for the PDP context - the reject cause IE value of the DEACTIVATE PDP CONTEXT REQUEST message shall indicate "QoS not accepted".

The network shall upon receipt of the MODIFY PDP CONTEXT ACCEPT message stop timer T3386.

In UMTS, the network shall establish, reconfigure or continue using the Radio Access Bearer with the new QoS indicated in the MODIFY PDP CONTEXT REQUEST message.

Reference

3GPP TS 24.008 clauses 6.1.3.3 and 6.1.3.3.1.

11.2.1.3 Test purpose

To test behaviour of the UE upon receipt of a MODIFY PDP CONTEXT REQUEST message from SS.

11.2.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no
- Method of activating a PDP context
- Support of automatic PS attach procedure at switch on yes/no

Test procedure

The requested QoS is set. A PDP context is activated by the user and accepted by the SS. A MODIFY PDP CONTEXT REQUEST message is then sent to the UE with a new QoS . The UE shall either send a DEACTIVATE PDP CONTEXT REQUEST (UE behaviour A) or MODIFY PDP CONTEXT ACCEPT (UE behaviour B) message in return.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a PDP context activation |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate the PDP context |
| 2a | SS | | | SS establishes RAB |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 4 | ← | | MODIFY PDP CONTEXT REQUEST (NETWORK TO UE DIRECTION) | Request the modification of a PDP context, with a new QoS and start timer T3386. |
| A5 | → | | DEACTIVATE PDP CONTEXT REQUEST | UE behaviour type A: Initiate the PDP context deactivation. Cause set to 'QoS not accepted' |
| A5a | ← | | DEACTIVATE PDP CONTEXT ACCEPT | UE behaviour type A: Accept the PDP context deactivation and stop timer T3386. |
| A5b | SS | | | The SS releases the RAB associated with this PDP Context. |
| A5c | → | | DETACH REQUEST | UE behaviour type A: A non-auto attach UE may (optionally) send a Detach Request. The SS shall wait up to 'T3390' seconds for the Detach Request. |
| A5d | ← | | DETACH ACCEPT | If the UE transmitted a Detach Request message in step A5c then the SS responds with a Detach Accept message. |
| B5 | → | | MODIFY PDP CONTEXT ACCEPT (UE TO NETWORK DIRECTION) | UE behaviour type B: Accept the PDP context modification |
| B5a | SS | | | Stop timer T3386 |
| 6 | | | Void | |
| 7 | | | Void | |
| 8 | | | Void | |

Specific message contents

None.

11.2.1.5 Test requirements

The UE shall:

- Accept or reject PDP context modification with a new QoS initiated by the SS .

## 11.2.2 UE initiated PDP context modification

### 11.2.2.1 UE initiated PDP Context Modification accepted by network

#### 11.2.2.1.1 Definition

This test can only be performed if minimum QoS can be set by the user.

#### 11.2.2.1.2 Conformance requirement

In order to initiate the procedure, the UE sends the MODIFY PDP CONTEXT REQUEST message to the network, enters the state PDP-MODIFY-PENDING and starts timer T3381. The message may contain the requested new QoS and/or the TFT and the requested LLC SAPI (used in GSM).

Upon receipt of the MODIFY PDP CONTEXT REQUEST message, the network may reply with the MODIFY PDP CONTEXT ACCEPT message in order to accept the context modification. The reply message may contain the negotiated QoS and the radio priority level based on the new QoS profile and the negotiated LLC SAPI, that shall be used in GSM by the logical link.

Upon receipt of the MODIFY PDP CONTEXT ACCEPT message, the UE shall stop the timer T3381. If the offered QoS parameters received from the network differs from the QoS requested by the UE, the UE shall either accept the negotiated QoS or initiate the PDP context deactivation procedure.

Reference

3GPP TS 24.008 clauses 6.1.3.3 and 6.1.3.3.2.

11.2.2.1.3 Test purpose

To test the behaviour of the UE upon receipt of a MODIFY PDP CONTEXT ACCEPT message from the SS with

- Requested QoS;

11.2.2.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no
- User setting of Minimum QoS supported yes/no
- Method of setting minimum QoS
- Method of activating a PDP context

Test procedure

The requested QoS and Minimum QoS are set. A PDP context is activated by the user and accepted by the SS. The UE initiates a PDP context modification by sending a MODIFY PDP CONTEXT REQUEST message with new QoS. The SS accepts the context modification and replies with the MODIFY PDP CONTEXT ACCEPT message with the QoS requested. The SS waits ‘T3390’ seconds to confirm that UE will not initiate a PDP context deactivation.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a PDP context activation |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 4 | → | | MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) | Request the modification of a PDP context, with new QoS |
| 5 | ← | | MODIFY PDP CONTEXT ACCEPT (NETWORK TO UE DIRECTION) | Accept the PDP context modification with QoS requested |
| 6 | | | SS | SS waits ‘T3390’ seconds to confirm UE does not initiate PDP context deactivation. |
| 7 | | | Void | |
| 8 | | | Void | |
| 9 | | | Void | |
| 10 | | | Void | |
| 11 | | | Void | |

Specific message contents

None.

11.2.2.1.5 Test requirements

When requesting the PDP context modification, the UE shall:

- Modify the PDP context if SS replied with the requested QoS;

## 11.2.2.2 UE initiated PDP Context Modification not accepted by the network

11.2.2.2.1 Definition

11.2.2.2.2 Conformance requirement

In order to initiate the procedure, the UE sends the MODIFY PDP CONTEXT REQUEST message to the network, enters the state PDP-MODIFY-PENDING and starts timer T3381. The message may contain the requested new QoS and/or the TFT and the requested LLC SAPI (used in GSM).

Upon receipt of a MODIFY PDP CONTEXT REQUEST message, the network may reject the UE initiated PDP context modification request by sending a MODIFY PDP CONTEXT REJECT message to the UE. The message shall contain a cause code that typically indicates one of the following:

# 26: insufficient resources;

# 32: Service option not supported;

# 41: semantic error in the TFT operation;

# 42: syntactical error in the TFT operation;

# 44: semantic errors in packet filter(s);

# 45: syntactical errors in packet filter(s);

# 95 - 111: protocol errors.

Upon receipt of a MODIFY PDP CONTEXT REJECT message, the UE shall stop timer T3381 and enter the state PDP-ACTIVE.

Reference

3GPP TS 24.008 clauses 6.1.3.3, 6.1.3.3.2 and 6.1.3.3.3.

11.2.2.2.3 Test purpose

To test the behaviour of the UE upon receipt of a MODIFY PDP CONTEXT REJECT message from the System Simulator.

11.2.2.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no

- Method of activating a PDP context

Test procedure

A PDP context is activated by the user and accepted by the SS. The UE initiates a PDP context modification by sending a MODIFY PDP CONTEXT REQUEST message. The SS rejects the context modification and replies with the MODIFY PDP CONTEXT REJECT with cause set to # 26: insufficient resources.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a PDP context activation |
| 1a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to either Originating Streaming Call, Originating Interactive Call or Originating Background Call |
| 1b | → | | SERVICE REQUEST | |
| 1c | SS | | | The SS starts ciphering and integrity protection. |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 2a | SS | | | The SS establishes the RAB |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 4 | → | | MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) | The UE requests modification of the PDP context and starts timer T3381 |
| 5 | ← | | MODIFYPDP CONTEXT REJECT | The SS rejects PDP context modification, SM cause= #26 |
| 5a | | | | The SS starts T3381 |
| 6 | SS | | | Wait for T3381 expiry to ensure no further MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) messages are sent by the UE |

Specific message contents

None.

11.2.2.2.5 Test requirements

After receiving MODIFY PDP CONTEXT REJECT message from the SS, the UE shall not resend PDP context modification request.

## 11.2.3 Abnormal cases

### 11.2.3.1 T3381 Expiry

11.2.3.1.1 Definition

11.2.3.1.2 Conformance requirement

On the first expiry of timer T3381, the UE shall re-send the MODIFY PDP CONTEXT REQUEST message, reset and restart timer T3381. This retransmission is repeated four times, i.e. on the fifth expiry of timer T3381, the UE may continue to use the previously negotiated QoS or it may initiate the PDP context deactivation procedure.

Reference

3GPP TS 24.008 clause 6.1.3.3.4 a) case: In the UE.

11.2.3.1.3 Test purpose

To test the behaviour of the UE when SS does not reply to MODIFY PDP CONTEXT REQUEST message.

11.2.3.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no
- Method of activating a PDP context

Test procedure

A PDP context activation is requested by the user and accepted by the SS. The UE shall send MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) message five times with T3381 seconds between each message. After this no further MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) messages shall be sent by the UE.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a PDP context activation |
| 1a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to either Originating Streaming Call, Originating Interactive Call or Originating Background Call |
| 1b | → | | SERVICE REQUEST | |
| 1c | SS | | | The SS starts ciphering and integrity protection. |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 2a | SS | | | The SS establishes the RAB |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context activation |
| 4 | → | | MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) | Request modification of the PDP context, with new QoS |
| 5 | SS | | | T3381 seconds |
| 6 | → | | MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) | Request modification of the PDP context, with the same QoS as in step 4 |
| 7 | SS | | | T3381 seconds |
| 8 | → | | MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) | Request modification of the PDP context, with the same QoS as in step 4 |
| 9 | SS | | | T3381 seconds |
| 10 | → | | MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) | Request modification of the PDP context, with the same QoS as in step 4 |
| 11 | SS | | | T3381 seconds |
| 12 | → | | MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) | Request modification of the PDP context, with the same QoS as in step 4 |
| 13 | SS | | | Wait for T3381 seconds to ensure no further MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) messages are sent by the UE |

Specific message contents

None.

11.2.3.1.5 Test requirements

UE shall re-send the MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) to SS five times in order to initiate the PDP context modification, with expiry of timer T3381 between messages. After fifth try, UE shall send no more MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) messages to SS.

## 11.2.3.2 Collision of UE and network initiated PDP context modification procedures

11.2.3.2.1 Definition

11.2.3.2.2 Conformance requirement

A collision of a UE and network initiated PDP context modification procedures is identified by the UE if a MODIFY PDP CONTEXT REQUEST message is received from the network after the UE has sent a MODIFY PDP CONTEXT REQUEST message itself, and both messages contain the same TI and the UE has not yet received a MODIFY PDP CONTEXT ACCEPT message from the network.

In the case of such a collision, the network initiated PDP context modification shall take precedence over the UE initiated PDP context modification. The UE shall terminate internally the UE initiated PDP context modification procedure, enter the state PDP-ACTIVE and proceed with the network initiated PDP context modification procedure by sending a MODIFY PDP CONTEXT ACCEPT message.

Reference

3GPP TS 24.008 clause 6.1.3.3.4 b).

11.2.3.2.3 Test purpose

To test behaviour of the UE when it identifies collision of the UE and SS initiated PDP context modification with the same TI.

11.2.3.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no
- Method of activating a PDP context

Test procedure

A PDP context is activated by the user and accepted by the SS. The UE initiates a PDP context modification by sending a MODIFY PDP CONTEXT REQUEST message. Then the SS initiates the PDP context modification by sending MODIFY PDP CONTEXT REQUEST message with the same TI. The UE shall reply to the SS initiated PDP context modification procedure by sending MODIFY PDP CONTEXT ACCEPT message with the same TI.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a PDP context activation |
| 1a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to either Originating Conversational Call, Originating Streaming Call, Originating Interactive Call, Originating Background Call or Originating High Priority Signalling |
| 1b | → | | SERVICE REQUEST | |
| 1c | SS | | | The SS starts ciphering and integrity protection. |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 2a | SS | | | The SS establishes the RAB. |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context activation |
| 4 | → | | MODIFY PDP CONTEXT REQUEST (UE TO NETWORK DIRECTION) | Request modification of the PDP context |
| 5 | ← | | MODIFY PDP CONTEXT REQUEST (NETWORK TO UE DIRECTION) | Request modification of the PDP context with the same TI |
| 6 | UE | | | UE identifies collision, terminates internally the UE initiated PDP context modification procedure |
| 7 | → | | MODIFY PDP CONTEXT ACCEPT (UE TO NETWORK DIRECTION) | Accept SS initiated PDP context modification |

Specific message contents

Steps 2, 4 and 7. TI flag (bit 8) in the TI IE is set to 0 (transaction initiated by the UE).

Steps 3 and 5. TI flag (bit 8) in the TI IE is set to 1.

Steps 2, 3, 4, 5 and 7. The value of the TIO (bits 5-7) in the TI IE is the same in these test steps.

#### 11.2.3.2.5 Test requirements

In step 6, the UE shall terminate internally the UE initiated PDP context modification procedure and proceed with SS initiated PDP context modification.

# 11.3 PDP context deactivation procedures

## 11.3.1 PDP context deactivation initiated by the UE

#### 11.3.1.1 Definition

#### 11.3.1.2 Conformance requirement

In order to deactivate a PDP context, the UE sends a DEACTIVATE PDP CONTEXT REQUEST message to the network, enters the state PDP-INACTIVE-PENDING and starts timer T3390. The message contains the transaction identifier (TI) in use for the PDP context to be deactivated and a cause code that typically indicates one of the following causes:

- #26: insufficient resources;
- #36: regular PDP context deactivation; or
- #37: QoS not accepted.

The network shall reply with the DEACTIVATE PDP CONTEXT ACCEPT message. Upon receipt of the DEACTIVATE PDP CONTEXT ACCEPT message, the UE shall stop timer T3390. In UMTS, the network shall initiate the release of Radio Access Bearer associated with this PDP context.

Whenever any session management message except REQUEST PDP CONTEXT ACTIVATION or SM-STATUS is received by the UE specifying a transaction identifier which is not recognised as relating to an active context or to a context that is in the process of activation or deactivation, the UE shall send a SM-STATUS message with cause #81 "invalid transaction identifier value" using the received transaction identifier value including the extension octet and remain in the PDP-INACTIVE state.

#### Reference

3GPP TS 24.008 clauses 6.1.3.4.1 and 8.3.2 (b).

### 11.3.1.3 Test purpose

To test the behaviour of the UE upon receipt of a DEACTIVATE PDP CONTEXT ACCEPT message from the SS in PDP context deactivation procedure initiated by the UE.

To test the behaviour of the UE upon receipt of a session management message (except REQUEST PDP CONTEXT ACTIVATION or SM-STATUS) specifying a transaction identifier which is not recognised as relating to an active context or to a context that is in the process of activation or deactivation.

### 11.3.1.4 Method of test

#### Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

#### Related ICS/IXIT statements

- PS Supported yes/no
- Method of activating a PDP context
- Method of deactivating the PDP context
- Support of automatic PS attach procedure at switch on yes/no

#### Test procedure

A PDP context is activated by the user and accepted by the SS. PDP context deactivation is then requested by the user. The UE shall send a DEACTIVATE PDP CONTEXT REQUEST message to the SS. The SS shall then reply with a DEACTIVATE PDP CONTEXT ACCEPT message. The SS shall then wait for T3390 seconds to ensure T3390 has been stopped and that no further messages are sent from the UE. The UE in manual mode may perform a detach procedure. The SS shall then send a MODIFY PDP CONTEXT REQUEST for the deactivated context and if the UE has not started a detach procedure it shall reply with an SM STATUS message with cause #81 'transaction identifier not known'.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a context activation with traffic class “originatingStreamingCall”, "originatingInteractiveCall" or "originatingBackgroundCall". |
| 1a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to either Originating Streaming Call, Originating Interactive Call or Originating Background Call |
| 1b | → | | SERVICE REQUEST | |
| 1c | | SS | | The SS starts ciphering and integrity protection. |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 2a | | SS | | The SS establishes the RAB. |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 4 | UE | | | Initiate a context deactivation |
| 5 | → | | DEACTIVATE PDP CONTEXT REQUEST | Request a deactivation of a PDP context and starts waiting for 'T3390'. SM cause set to #36. |
| 6 | ← | | DEACTIVATE PDP CONTEXT ACCEPT | SS accepts the PDP context deactivation and timer ‘T3390’ is canceled. |
| 6a | | | Void | |
| 7 | → | | DETACH REQUEST | The UE may (optionally) send a Detach Request (only Note 1). The SS shall wait up to 'T3390' seconds for the Detach Request. While waiting the SS releases the RAB associated with this PDP Context. If the SS receives a Detach Request the test execution continues from step A8, otherwise from step B8. SS shall check that no further deactivate request messages are sent during this time. |
| A8 | ← | | MODIFY PDP CONTEXT REQUEST (NETWORK TO UE DIRECTION) | Send a modify request to UE for the deactivated context. |
| A9 | | SS | | Start timer 'T3386' and wait until is expires to ensure that UE does not respond to Modify PDP Context Request(Net) after Detach Request has been sent from UE. |
| A10 | ← | | DETACH ACCEPT | SS responds with DETACH ACCEPT message as a Detach Request was transmitted by the UE |
| B8 | ← | | MODIFY PDP CONTEXT REQUEST (NETWORK TO UE DIRECTION) | Send a modify request to UE for the deactivated context. (Allowed for Note 1 and Note 2). |
| B9 | → | | SM STATUS | Cause set to #81 |
| Note 1: Support of automatic PS attach procedure at switch on – no<br>Note 2: Support of automatic PS attach procedure at switch on – yes | | | | |

Specific message contents

Steps 2 and 5: TI flag (bit 8) in TI IE is set to 0 (transaction initiated by the UE).

Steps 3, 6, A8 and B8: TI flag in TI IE is set to 1.

Steps 2, 3, 5, 6, A8 and B8: The value of TIO IE (bits 5-7) of the transaction identifier (TI) is the same in these test steps.

#### 11.3.1.5 Test requirements

At step 1a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to one of the following causes:

- Originating Streaming Call;
- Originating Interactive Call or
- Originating Background Call

In PDP context deactivation procedure initiated by the UE, upon receipt of a DEACTIVATE PDP CONTEXT ACCEPT message from the SS, the UE shall deactivate PDP context associated with given PDP address and TI.

If the UE has not performed a detach procedure then, upon modification procedure initiated by the network, for deactivated PDP context, the UE shall reply with SM STATUS message with cause #81.

### 11.3.2 PDP context deactivation initiated by the network

#### 11.3.2.1 Definition

#### 11.3.2.2 Conformance requirement

In order to deactivate a PDP context, the network sends a DEACTIVATE PDP CONTEXT REQUEST message to the UE and starts timer T3395. The message contains the transaction identifier in use for the PDP context to be deactivated and a cause code that typically indicates one of the following causes:

# 36: regular PDP context deactivation;

# 38: network failure; or

# 39: reactivation requested.

The UE shall, upon receipt of this message, reply with a DEACTIVATE PDP CONTEXT ACCEPT message. Upon receipt of the DEACTIVATE PDP CONTEXT ACCEPT message, the network shall stop the timer T3395. In UMTS, the network shall initiate the release of Radio Access Bearer associated with this PDP context.

Reference

3GPP TS 24.008 clause 6.1.3.4.2.

#### 11.3.2.3 Test purpose

To test the behaviour of the UE upon receipt of a DEACTIVATE PDP CONTEXT REQUEST message from the SS.

#### 11.3.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no
- Method of activating a PDP context
- Support of automatic PS attach procedure at switch on yes/no

Test procedure

A PDP context is activated by the user and accepted by the SS. A DEACTIVATE PDP CONTEXT REQUEST message is then sent by the SS. The UE shall reply with a DEACTIVATE PDP CONTEXT ACCEPT message. The SS shall then wait for T3395 seconds to ensure that no further messages are sent from the UE. The UE in manual mode may perform a detach procedure. The SS shall then send a MODIFY PDP CONTEXT REQUEST for the deactivated context and if the UE has not started a detach procedure it shall reply with an SM STATUS message with cause #81 'invalid transaction identifier value'.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a context activation with traffic class “originatingStreamingCall”, "originatingInteractiveCall" or "originatingBackgroundCall". |
| 1a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to either Originating Streaming Call, Originating Interactive Call or Originating Background Call |
| 1b | → | | SERVICE REQUEST | |
| 1c | SS | | | The SS starts ciphering and integrity protection. |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 2a | SS | | | The SS establishes the RAB. |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 4 | ← | | DEACTIVATE PDP CONTEXT REQUEST | Request a deactivation of a PDP context and starts waiting for 'T3395'. SM cause set to #36. |
| 5 | → | | DEACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context deactivation and timer ‘T3395’ is canceled. |
| 5a | | | Void | |
| 5b | → | | DETACH REQUEST | The UE may (optionally) send a Detach Request (only Note 1). The SS shall wait up to 'T3395' seconds for the Detach Request. While waiting the SS releases the RAB associated with this PDP Context. If the SS receives a Detach Request the test execution continues from step A6, otherwise from step B6. SS shall check that no further deactivate request messages are sent during this time. |
| A6 | ← | | MODIFY PDP CONTEXT REQUEST (NETWORK TO UE DIRECTION) | Send a modify request to UE for the deactivated context. |
| A7 | SS | | | Start timer 'T3386' and wait until is expires to ensure that UE does not respond to Modify PDP Context Request(Net) after Detach Request has been sent from UE. |
| A8 | ← | | DETACH ACCEPT | SS responds with DETACH ACCEPT message as a Detach Request was transmitted by the UE |
| B6 | ← | | MODIFY PDP CONTEXT REQUEST (NETWORK TO UE DIRECTION) | Send a modify request to UE for the deactivated context. (Allowed for Note 1 and Note 2). |
| B7 | → | | SM STATUS | Cause set to #81 |
| Note 1: Support of automatic PS attach procedure at switch on – no<br>Note 2: Support of automatic PS attach procedure at switch on – yes | | | | |

Specific message contents

Steps 2 and 5: TI flag (bit 8) in TI IE is set to 0 (transaction initiated by the UE).

Steps 3, 4, A6 and B6: TI flag in TI IE is set to 1.

Steps 2, 3, 4, 5, A6 and B6: The value of TIO IE (bits 5-7) of the transaction identifier (TI) is the same in these test steps.

#### 11.3.2.5 Test requirements

At step 1a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to one of the following causes:

- Originating Streaming Call;
- Originating Interactive Call or
- Originating Background Call

Upon receipt of a request for deactivation of a PDP context from the SS, the UE shall deactivate PDP context.

If the UE has not performed a detach procedure then, upon modification procedure initiated by the network, for deactivated PDP context, UE shall reply with SM STATUS message with cause #81, as confirmation that previously SS requested PDP context deactivation was performed by the UE.

## 11.3.3 Abnormal cases

### 11.3.3.1 T3390 Expiry

#### 11.3.3.1.1 Definition

#### 11.3.3.1.2 Conformance requirement

Expiry of timers

In the UE:

On the first expiry of timer T3390, the UE shall resent the message DEACTIVATE PDP CONTEXT REQUEST and shall reset and restart the timer T3390. This retransmission is repeated four times, i.e. on the fifth expiry of timer T3390, the UE shall release all resources allocated and shall erase the PDP context related data.

Reference

3GPP TS 24.008 clause 6.1.3.4.3 a), case In the UE.

#### 11.3.3.1.3 Test purpose

To test the behaviour of the UE when the SS does not reply to a DEACTIVATE PDP CONTEXT REQUEST message from the UE.

#### 11.3.3.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

- PS Supported yes/no

- Method of activating a PDP context
- Method of deactivating a PDP context

Test procedure

A PDP context is activated by the user and accepted by the SS. PDP context deactivation is then requested by the user. The UE shall send a DEACTIVATE PDP CONTEXT REQUEST message five times with T3390 seconds between each message. After that, the UE shall release the PDP context. T3390 seconds after the fifth message the SS shall send a MODIFY PDP CONTEXT REQUEST message for the deactivated context and the UE shall reply with SM STATUS with cause set to #81 'Transaction identifier not known'.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a context activation |
| 1a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to either Originating Streaming Call, Originating Interactive Call or Originating Background Call |
| 1b | → | | SERVICE REQUEST | |
| 1c | SS | | | The SS starts ciphering and integrity protection. |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 2a | SS | | | The SS establishes the RAB. |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 4 | UE | | | Initiate a context deactivation |
| 5 | → | | DEACTIVATE PDP CONTEXT REQUEST | Request a deactivation of a PDP context |
| 6 | SS | | | T3390 seconds |
| 7 | → | | DEACTIVATE PDP CONTEXT REQUEST | Request a deactivation of a PDP context |
| 8 | SS | | | T3390 seconds |
| 9 | → | | DEACTIVATE PDP CONTEXT REQUEST | Request a deactivation of a PDP context |
| 10 | SS | | | T3390 seconds |
| 11 | → | | DEACTIVATE PDP CONTEXT REQUEST | Request a deactivation of a PDP context |
| 12 | SS | | | T3390 seconds |
| 13 | → | | DEACTIVATE PDP CONTEXT REQUEST | Request a deactivation of a PDP context |
| 14 | SS | | | Wait T3390 seconds |
| 14a | UE | | | The UE releases the PDP context and all allocated resources |
| 15 | ← | | MODIFY PDP CONTEXT REQUEST (NETWORK TO UE DIRECTION) | Try to modify the deactivated context. |
| 16 | → | | SM STATUS | Cause set to #81 |

Specific message contents

Steps 2, 5, 7, 9, 11 and 13: TI flag (bit 8) in TI IE is set to 0 (transaction initiated by the UE).

Steps 3, and 15: TI flag in TI IE is set to 1.

Steps 2, 3, 5, 7, 9, 11, 13, and 15: The value of TIO IE (bits 5-7) of the transaction identifier (TI) is the same in these test steps.

#### 11.3.3.1.5 Test requirements

If SS does not respond to the UE initiated PDP context deactivation procedure, the UE shall retransmit four more DEACTIVATE PDP CONTEXT REQUESTsfour times, with T3390 timer expiry between the successive messages, before releasing resources allocated to the PDP context and deleting PDP context related data.

### 11.3.3.2 Collision of UE and network initiated PDP context deactivation requests

#### 11.3.3.2.1 Definition

#### 11.3.3.2.2 Conformance requirement

If the UE and the network initiated PDP context deactivation requests collide, the UE and the network shall each reply with the message DEACTIVATE PDP CONTEXT ACCEPT and shall stop timer T3390 and T3395, respectively.

Reference

3GPP TS 24.008 clause 6.1.3.4.3 b).

#### 11.3.3.2.3 Test purpose

To test the behaviour of the UE when there is a collision between an UE initiated and network initiated context deactivation.

#### 11.3.3.2.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN

Related ICS/IXIT statements

- PS Supported yes/no
- Method of activating a PDP context
- Method of deactivating a PDP context

Test procedure

A PDP context is activated by the user and accepted by the SS. Context deactivation is then requested by the user. Upon receipt of the DEACTIVATE PDP CONTEXT REQUEST message the SS sends a DEACTIVATE PDP CONTEXT REQUEST message. The UE shall reply with only one DEACTIVATE PDP CONTEXT ACCEPT message. Upon receipt of this message the SS sends a DEACTIVATE PDP CONTEXT ACCEPT message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Initiate a context activation |
| 1a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to either Originating Streaming Call, Originating Interactive Call or Originating Background Call |
| 1b | → | | SERVICE REQUEST | |
| 1c | SS | | | The SS starts ciphering and integrity protection. |
| 2 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context |
| 2a | SS | | | SS establishes the RAB |
| 3 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 4 | UE | | | Initiate a context deactivation |
| 5 | → | | DEACTIVATE PDP CONTEXT REQUEST | UE requests deactivation of a PDP context |
| 6 | ← | | DEACTIVATE PDP CONTEXT REQUEST | SS requests deactivation of a PDP context and starts T3390 and T3395 |
| 7 | → | | DEACTIVATE PDP CONTEXT ACCEPT | UE accepts the PDP context deactivation requested by the SS |
| 7a | SS | | | SS stops T3395 |
| 8 | ← | | DEACTIVATE PDP CONTEXT ACCEPT | SS accepts the PDP context deactivation requested by the UE |
| 9 | SS | | | SS releases the RAB |
| 10 | SS | | | SS waits for expiry of T3390 to ensure no further deactivate request messages are sent |

Specific message contents

Steps 2 and 5. TI flag (bit 8) in TI IE is set to 0 (transaction initiated by the UE).

Steps 3, 6 and 8. TI flag in TI IE is set to 1.

Steps 2, 3, 5, 6, 7 and 8. The value of TIO IE (bits 5-7) of the transaction identifier (TI) is the same in these test steps.

#### 11.3.3.2.5 Test requirements

When UE and SS initiated PDP context deactivation requests collide, the UE shall reply with DEACTIVATE PDP CONTEXT ACCEPT to the SS.

# 11.4 Unknown or Unforeseen Transaction Identifier/Non-semantical Mandatory Information Element Errors

## 11.4.1 Error cases

### 11.4.1.1 Definition

### 11.4.1.2 Conformance requirement

The mobile station shall ignore a session management message with TI EXT bit = 0. Otherwise, the following procedures shall apply:

- Whenever any session management message, except REQUEST PDP CONTEXT ACTIVATION or SM-STATUS, is received by the UE specifying a transaction identifier which is not recognized as relating to an active context or to a context that is in the process of activation or deactivation, the UE shall send a SM-STATUS message with cause #81 "invalid transaction identifier value" using the received transaction identifier value including the extension octet and remain in the PDP-INACTIVE state.

- When REQUEST PDP CONTEXT ACTIVATION message is received with a transaction identifier flag set to "1", this message shall be ignored.

When on receipt of a message,

- an "imperative message part" error; or
- a "missing mandatory IE " error.

is diagnosed or when a message containing:

- a syntactically incorrect mandatory IE; or
- an IE unknown in the message, but encoded as "comprehension required"; or
- an out of sequence IE encoded as "comprehension required".

is received, the UE shall proceed as follows:

- If the message was a SM message, except DEACTIVATE PDP CONTEXT REQUEST and REQUEST PDP CONTEXT ACTIVATION, the SM-STATUS message with cause # 96 "invalid mandatory information" shall be returned.

  a) If the message is a DEACTIVATE PDP CONTEXT REQUEST, a DEACTIVATE PDP CONTEXT ACCEPT message shall be returned. All resources allocated for that context shall be released.

  b) If the message is a REQUEST PDP CONTEXT ACTIVATION, a REQUEST PDP CONTEXT REJECT message with cause # 96 "Invalid mandatory information" shall be returned.

- If a mobile station receives a GMM message or SM message with message type not defined for the PD or not implemented by the receiver, it shall return a status message (GMM STATUS or SM STATUS depending on the protocol discriminator) with cause #97 'message type non-existent or not implemented'.
- If the mobile station receives a message not compatible with the protocol state, the mobile station shall ignore the message except for the fact that, if an RR connection exists, it returns a status message (STATUS, MM STATUS depending on the protocol discriminator) with cause #98 "Message type not compatible with protocol state". When the message was a GMM message the GMM-STATUS message with cause #98 "Message type not compatible with protocol state" shall be returned. When the message was a SM message the SM-STATUS message with cause #98 'Message type not compatible with protocol state' shall be returned.

Other syntactic errors.

This clause applies to the analysis of the value part of an information element. It defines the following terminology:

- An IE is defined to be syntactically incorrect in a message if it contains at least one value defined as 'reserved', or if its value part violates syntactic rules given in the specification of the value part. However it is not a syntactical error that a type 4 standard IE specifies in its length indicator a greater length than possible according to the value part specification: extra bits are ignored.

Reference

3GPP TS 24.008 clauses 8.3.2, 8.4 and 8.5.

3GPP TS 24.007 clause 11.4.2.

#### 11.4.1.3 Test purpose

To test the behaviour of the UE when messages with unknown or unforeseen transaction identifiers or non-semantical mandatory information element errors occur.

#### 11.4.1.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

### Related ICS/IXIT statements

- PS supported yes/no
- Method of context activation

### Test procedure

A PDP context activation is requested by the SS with the transaction identifier set to '1'. The UE shall not respond to this request.

A PDP context is then activated from the UE. An invalid accept messages is sent by the SS. The UE replies with SM STATUS message. After T3380 seconds UE sends second autogenerated ACTIVATE PDP CONTEXT REQUEST message. SS again replies with invalid ACTIVATE PDP CONTEXT ACCEPT and UE returns SM STATUS message. After further T3380 seconds UE sends third autogenerated ACTIVATE PDP CONTEXT REQUEST message. SS replies with unknown message and UE returns SM STATUS with cause #97 'message type non-existent or not implemented'. After T3380 seconds the UE sends next autogenerated ACTIVATE PDP CONTEXT REQUEST message, SS repies with MODIFY PDP CONTEXT REQUEST and UE returns SM STATUS with cause #98 'message type not compatible with protocol state'. After T3380 seconds the UE sendes last autogenerated ACTIVATE PDP CONTEXT REQUEST message. SS replies with valid accept message.

A deactivate message is then sent from the SS with a different transaction identifier to the one used in the activate request message sent by the UE. The UE shall reply with a SM STATUS message with cause #81 'invalid transaction identifier value'.

Two invalid modification messages are then sent to the UE in turn. The UE shall respond each time with a SM-STATUS message with cause # 96 "invalid mandatory information".

Last MODIFY PDP CONTEXT message sent from SS has TI EXT bit = 0. The UE does not respond to this message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | REQUEST PDP CONTEXT ACTIVATION | Request the activation of a PDP context with the transaction identifier flag set to "1" |
| 2 | | SS | | Wait T3385 seconds to ensure UE does not request context activation |
| 3 | UE | | | Initiate a context request |
| 4 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context from the UE |
| 5 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Unknown IE encoded as 'comprehension required' |
| 6 | → | | SM STATUS | Cause set to #96 |
| 7 | | SS | | Wait T3380 seconds |
| 8 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context from the UE (auto-generated) |
| 9 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Out of sequence IE encoded as 'comprehension required' |
| 10 | → | | SM STATUS | Cause set to #96 |
| 11 | | SS | | Wait T3380 seconds |
| 12 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context from the UE (auto-generated) |
| 13 | ← | | UNKNOWN MESSAGE | Message with unknown message type |
| 14 | → | | SM STATUS | Cause set to #97 |
| 15 | | SS | | Wait T3380 seconds |
| 16 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context from the UE (auto-generated) |
| 17 | ← | | MODIFY PDP CONTEXT REQUEST | Request modification of PDP context |
| 18 | → | | SM STATUS | Cause set to #98 |
| 19 | | SS | | Wait T3380 seconds |
| 20 | → | | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context from the UE (auto-generated) |
| 21 | ← | | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 22 | ← | | DEACTIVATE PDP CONTEXT REQUEST | Try to deactivate the context with a different transaction identifier to that used to activate the context |
| 23 | → | | SM STATUS | Cause set to # 81 |
| 24 | ← | | MODIFY PDP CONTEXT REQUEST(NETWORK TO UE DIRECTION) | Request the modification of the PDP context ('New QoS' mandatory IE missing in the message) |
| 25 | → | | SM STATUS | Cause set to # 96 |
| 26 | ← | | MODIFY PDP CONTEXT REQUEST(NETWORK TO UE DIRECTION) | Request the modification of the PDP context (with 'Requested LLC SAPI' set to reserved value '1100') |
| 27 | → | | SM STATUS | Cause set to # 96 |
| 28 | ← | | MODIFY PDP CONTEXT REQUEST(NETWORK TO UE DIRECTION) | Request the modification of the PDP context (TI EXT bit = 0) |
| 29 | | SS | | Wait T3386 seconds to ensure UE does not respond |

11.4.1.5 Test requirements

TBD.

# 11.5 MBMS Context Activation

## 11.5.1m MBMS Context Activation requested by the network, Successful and Unsuccessful procedure / MBMS Multicast Service

11.5.1m.1 Definition

This test is applicable for Rel-6 UEs supporting MBMS multicast services.

11.5.1m.2 Conformance requirement

The purpose of this procedure is to establish an MBMS context in the MS and in the network for a specific IP Multicast Address using a specific NSAPI for MBMS user plane transmission. The MS shall only initiate the MBMS context activation when requested by the network. However, the trigger for the activation request by the network is initiated by the MS at the application layer.

1) Successful MBMS context activation

In order to request an MBMS context activation, the network sends a REQUEST MBMS CONTEXT ACTIVATION message to the MS, enters the state MBMS-ACTIVE-PENDING and starts timer T3385. The message shall contain the IP multicast address, the APN and the Linked NSAPI.

Upon receipt of a REQUEST MBMS CONTEXT ACTIVATION message, the MS shall validate the message by verifying the NSAPI given in the Linked NSAPI IE to be one of the active PDP context(s), and send an ACTIVATE MBMS CONTEXT REQUEST, enter state MBMS-ACTIVE-PENDING and start timer T3380. The message shall contain an IP multicast address and an APN, which shall be the same as the IP multicast address and the APN requested by the network in the REQUEST MBMS CONTEXT ACTIVATION message. Furthermore, the MS shall include the Supported MBMS bearer capabilities, i.e. the maximum downlink bit rate the MS can handle.

Upon receipt of the ACTIVATE MBMS CONTEXT REQUEST message, the network shall stop timer T3385. If the network accepts the request, it shall reply with an ACTIVATE MBMS CONTEXT ACCEPT message.

Upon receipt of the message ACTIVATE MBMS CONTEXT ACCEPT the MS shall stop timer T3380 and shall enter the state MBMS-ACTIVE.

2) Whenever a REQUEST MBMS CONTEXT ACTIVATION message is received by the MS specifying a transaction identifier relating to a PDP context or MBMS context not in state PDP-INACTIVE, the MS shall locally deactivate the old PDP context or MBMS context relating to the received transaction identifier. Furthermore, the MS shall continue with the activation procedure of a new MBMS context as indicated in the received message.

3) Upon receipt of the REQUEST MBMS CONTEXT ACTIVATION message, the MS may reject the network requested MBMS context activation by sending the REQUEST MBMS CONTEXT ACTIVATION REJECT message to the network The sender of the message shall include the same TI as included in the REQUEST MBMS CONTEXT ACTIVATION and an additional cause code that typically indicates one of the following causes:

……

# 40: feature not supported; or

……

The network shall stop timer T3385 and enter in state PDP-INACTIVE.

Reference

3GPP TS 24.008 clauses 6.1.3.8 and 8.3.2 f.

11.5.1m.3 Test purpose

To test behaviour of the UE upon receipt of a MBMS context activation request from the SS:

a) When UE supports MBMS context activation requested by the network

b) When UE supporting MBMS context activation requested by the network, receives REQUEST MBMS CONTEXT ACTIVATION message with transaction identifier relating to an already active MBMS or PDP context

11.5.1m.4 Method of test

Initial condition

System Simulator:

1 MBMS cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

The UE has at least two PDP context activated. PDP one trans_id 0 and nsapi 5. PDP two trans_id 1 and nsapi 6.

### Related ICS/IXIT statements

MBMS Multicast service application available on UE Yes/No

### Test procedure

The UE joins a multicast service provided by the SS.

A REQUEST MBMS CONTEXT ACTIVATION message is sent by the SS. UE will start MBMS context activation procedure

On receipt of the ACTIVATE MBMS CONTEXT REQUEST message from the UE, an ACTIVATE MBMS CONTEXT ACCEPT message is returned by the SS.

REQUEST MBMS CONTEXT ACTIVATION message is then sent by the SS using transaction identifier of the currently active MBMS context. The UE shall activate this context to replace the previous context.

REQUEST MBMS CONTEXT ACTIVATION message is then sent by the SS using transaction identifier of the currently active PDP context. The UE shall activate this context to replace the previous context.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | SS | | Join MBMS session | Join 1st MBMS session.<br>See TS 34.108 clause 7.6.1 |
| 1 | ← | | REQUEST MBMS CONTEXT ACTIVATION | SS sends Request a MBMS context activation to UE and starts timer T3385. The linked nsapi set to 5. |
| 2 | → | | ACTIVATE MBMS CONTEXT REQUEST | UE supporting Multicast replies with a MBMS context activation request |
| 3 | SS | | | The SS stops timer T3385. |
| 4 | ← | | ACTIVATE MBMS CONTEXT ACCEPT | SS accepts the MBMS context activation. |
| 5 | ← | | REQUEST MBMS CONTEXT ACTIVATION | SS requests a MBMS context activation for an existing MBMS context with the same TI value as one of the active MBMS contexts and starts timer T3385 |
| 6 | UE | | | UE locally deactivates the old MBMS context with the same TI value |
| 7 | → | | ACTIVATE MBMS CONTEXT REQUEST | UE continues with the activation of a new MBMS context to replace locally deactivated MBMS context |
| 8 | SS | | | The SS stops timer T3385. |
| 9 | ← | | ACTIVATE MBMS CONTEXT ACCEPT | SS accepts the MBMS context activation |
| 10 | ← | | REQUEST MBMS CONTEXT ACTIVATION | requests MBMS context activation for an existing PDP<br>context with linked NSAPI 5 and by setting TI value same as the TI value<br>of other active PDP context (TI value set to 1); and starts timer T3385 |
| 11 | UE | | | UE locally deactivates the PDP context with TI value 1 and NSAPI 6 |
| 12 | → | | ACTIVATE MBMS CONTEXT REQUEST | UE continues with the activation of a new MBMS context which is linked to NSAPI 5 |
| 13 | SS | | | The SS stops timer T3385 and releases Radio Access Bearer for old PDP context. |
| 14 | ← | | ACTIVATE MBMS CONTEXT ACCEPT | SS accepts the MBMS context activation |

Specific message contents

Step 5: TI IE value is equal to the TI value of one of the active MBMS contexts , Offered multicast address IE value and/or Access point name IE value are (is) different from the corresponding IE value(s) in the existing MBMS context.

Step 10: TI IE value is equal to the TI value of one of the active PDP contexts .

### 11.5.1m.5 Test requirements

At step 2, the UE shall accept MBMS context activation initiated by the SS.

At step 6, the UE shall locally deactivate the old MBMS context when a REQUEST MBMS CONTEXT ACTIVATION message is received, specifying a transaction identifier relating to an active MBMS context and continue with the activation procedure of a new MBMS context as indicated in the received message.

At step 11, the UE shall locally deactivate the old MBMS context when a REQUEST MBMS CONTEXT ACTIVATION message is received, specifying a transaction identifier relating to an active PDP context and continue with the activation procedure of a new MBMS context as indicated in the received message.

# 11.5.2m Abnormal Cases

## 11.5.2.1m T3380 Expiry / MBMS Multicast Service

### 11.5.2.1m.1 Definition

This test is applicable for Rel-6 UEs supporting MBMS multicast services.

### 11.5.2.1m.2 Conformance requirement

On the first expiry of the timer T3380, the UE shall resend the ACTIVATE MBMS CONTEXT REQUEST and shall reset and restart timer T3380. This retransmission is repeated four times, i.e. on the fifth expiry of timer T3380, the UE shall release all resources possibly allocated for this invocation and shall abort the procedure; no automatic MBMS context activation re-attempt shall be performed.

Upon receipt of the REQUEST MBMS CONTEXT ACTIVATION message, the MS may reject the network requested MBMS context activation by sending the REQUEST MBMS CONTEXT ACTIVATION REJECT message to the network The sender of the message shall include the same TI as included in the REQUEST MBMS CONTEXT ACTIVATION and an additional cause code that typically indicates one of the following causes:

……

# 40: feature not supported; or

……

The network shall stop timer T3385 and enter in state PDP-INACTIVE.

### Reference

3GPP TS 24.008 clause 6.1.3.8.4 a.

### 11.5.2.1.3m Test purpose

To test the behaviour of the UE when the SS does not reply to MBMS CONTEXT ACTIVATION REQUEST.

### 11.5.2.1.4m Method of test

### Initial conditions

System Simulator:

1 MBMS cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

The UE has at least one PDP context activated. PDP one trans_id 0 and nsapi 5.

### Related ICS/IXIT statements

MBMS Multicast service application available on UE Yes/No

### Test procedure

The UE joins a multicast service provided by the SS.

A MBMS context activation is requested by the SS. The UE shall send the ACTIVATE MBMS CONTEXT REQUEST message five times with T3380 seconds between each message. After this, no further ACTIVATE MBMS CONTEXT REQUEST messages shall be sent by the UE.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | | SS | Join MBMS session | Join 1st MBMS session.<br>See TS 34.108 clause 7.6.1 |
| 1 | ← | | REQUEST MBMS CONTEXT ACTIVATION | SS sends Request a MBMS context activation to UE and starts timer T3385. The linked nsapi set to 5. |
| 2 | → | | ACTIVATE MBMS CONTEXT REQUEST | UE supporting Multicast replies with a MBMS context activation request |
| 3 | | SS | | The SS stops timer T3385. |
| 4 | | SS | | T3380 seconds |
| 5 | → | | ACTIVATE MBMS CONTEXT REQUEST | Request a MBMS context activation |
| 6 | | SS | | T3380 seconds |
| 7 | → | | ACTIVATE MBMS CONTEXT REQUEST | Request a MBMS context activation |
| 8 | | SS | | T3380 seconds |
| 9 | → | | ACTIVATE MBMS CONTEXT REQUEST | Request a MBMS context activation |
| 10 | | SS | | T3380 seconds |
| 11 | → | | ACTIVATE MBMS CONTEXT REQUEST | Request a MBMS context activation |
| 12 | | SS | | Wait for T3380 seconds to ensure no further ACTIVATE MBMS CONTEXT REQUEST messages are sent by the UE |

Specific message contents

None.

11.5.2.1m.5 Test requirements

At step 5, the UE On the first expiry of the timer T3380, the UE shall re-send the MBMS CONTEXT ACTIVATION REQUEST.

At step 7, On the second expiry of the timer T3380, the UE shall re-send the MBMS CONTEXT ACTIVATION REQUEST.

At step 9, On the third expiry of the timer T3380, the UE shall re-send the MBMS CONTEXT ACTIVATION REQUEST.

At step 11, On the fourth expiry of the timer T3380, the UE shall re-send the MBMS CONTEXT ACTIVATION REQUEST.

At step 12, On the fifth expiry of the timer T3380, the UE shall release all resources possibly allocated for this invocation and shall abort the procedure; no automatic MBMS context activation re-attempt shall be performed.

## 11.5.2.2m Network initiated MBMS context activation request for an already activated context (on the UE side) / MBMS Multicast Service

11.5.2.2m.1 Definition

This test is applicable for Rel-6 UEs supporting MBMS multicast services.

11.5.2.2m.2 Conformance requirement

……..

MBMS context activation request for an already activated MBMS context (on the mobile station side): If the MS receives a REQUEST MBMS CONTEXT ACTIVATION message with the same combination of APN and IP multicast address (i.e. PDP type and PDP address) as an already activated MBMS context, the MS shall deactivate the existing MBMS context locally without notification to the network and proceed with the requested MBMS context activation.

……..

Upon receipt of the REQUEST MBMS CONTEXT ACTIVATION message, the MS may reject the network requested MBMS context activation by sending the REQUEST MBMS CONTEXT ACTIVATION REJECT message to the network The sender of the message shall include the same TI as included in the REQUEST MBMS CONTEXT ACTIVATION and an additional cause code that typically indicates one of the following causes:

……

# 40: feature not supported; or

……

The network shall stop timer T3385 and enter in state PDP-INACTIVE.

Reference

3GPP TS 24.008 clause 6.1.3.8.4 c).

11.5.2.2m.3 Test purpose

To test the behaviour of the UE when it detects a network initiated MBMS context activation for the MBMS context already activated on the UE side.

11.5.2.2m.4 Method of test

Initial conditions

System Simulator:

1 MBMS cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

The UE has at least one PDP context activated. PDP one trans_id 0 and nsapi 5.

Related ICS/IXIT statements

MBMS Multicast service application available on UE Yes/No

Test procedure

The UE joins a multicast service provided by the SS.

A MBMS context activation is requested by the SS. UE accepts MBMS context activation and sends MBMS CONTEXT ACTIVATION REQUEST which SS responds with MBMS CONTEXT ACTIVATION ACCEPT. SS sends a REQUEST MBMS CONTEXT ACTIVATION message with the same combination of APN and multicast address as an already activated MBMS context. The UE deactivates the existing MBMS context locally without notification to the SS and proceeds with the requested MBMS context activation.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | | SS | Join MBMS session | Join 1st MBMS session.<br>See TS 34.108 clause 7.6.1 |
| 1 | ← | | REQUEST MBMS CONTEXT ACTIVATION | SS sends Request a MBMS context activation to UE and starts timer T3385. The linked nsapi set to 5. |
| 2 | → | | ACTIVATE MBMS CONTEXT REQUEST | UE supporting Multicast replies with a MBMS context activation request. |
| 3 | | SS | | The SS stops timer T3385. |
| 4 | ← | | ACTIVATE MBMS CONTEXT ACCEPT | SS accepts the MBMS context activation. |
| 5 | ← | | REQUEST MBMS CONTEXT ACTIVATION | SS requests a MBMS context activation for an existing MBMS context with the same APN and multicast address as the active MBMS context and starts timer T3385 |
| 6 | UE | | | UE locally deactivates the old MBMS context with the same APN and multicast address |
| 7 | → | | ACTIVATE MBMS CONTEXT REQUEST | UE continues with the activation of a new MBMS context to replace locally deactivated MBMS context |
| 8 | | SS | | The SS stops timer T3385. |
| 9 | ← | | ACTIVATE MBMS CONTEXT ACCEPT | SS accepts the MBMS context activation |

Specific message contents

None.

11.5.2.2.5m Test requirements

At step 6, the UE shall locally deactivate old MBMS context.

At step 7, the UE shall continue with the activation of a new MBMS context.

# 11.6 MBMS Context deactivation

## 11.6.1m MBMS Context deactivation requested by the network, Successful / MBMS Multicast Service

### 11.6.1m.1 Definition

This test case is applicable for Rel-6 UEs that support MBMS multicast services.

### 11.6.1m.2 Conformance requirement

The purpose of the MBMS context deactivation procedure is to deactivate an existing MBMS context in the MS and the network. The MS shall only initiate the MBMS context deactivation when requested by the network, however the trigger for the deactivation request by the network may be initiated by the MS at application layer or by the network, see 3GPP TS 23.246.

After a successful MBMS context deactivation, the associated MBMS NSAPI and TI values shall be released in both the MS and the network and can be reassigned to another MBMS context.

The MBMS context deactivation procedure makes use of the messaging and signalling of the PDP context deactivation procedure as described in the subclause 6.2.3.2.1.

In order to request an MBMS context deactivation, the network sends a DEACTIVATE PDP CONTEXT REQUEST message to the MS, enters the state MBMS-INACTIVE-PENDING and starts timer T3395. The messages contains the transaction identifier (TI) in use for the MBMS context to be deactivated and a cause code that typically indicates one of the following causes:

# 36: regular deactivation;

# 38: network failure;

# 47: multicast group membership time-out.

The MS shall reply with a DEACTIVATE PDP CONTEXT ACCEPT message and enter the state PDP-INACTIVE. Upon receipt of the DEACTIVATE PDP CONTEXT ACCEPT message, the network shall stop the timer T3395 and enter the state PDP-INACTIVE.

….

Whenever any session management message except REQUEST PDP CONTEXT ACTIVATION, REQUEST MBMS CONTEXT ACTIVATION, or SM-STATUS is received by the MS specifying a transaction identifier which is not recognized as relating to an active context or to a context that is in the process of activation or deactivation, the MS shall send a SM-STATUS message with cause #81 "invalid transaction identifier value" using the received transaction identifier value including the extension octet and remain in the PDP-INACTIVE state.

….

The purpose of this procedure is to deactivate an existing PDP context between the MS and the network. The PDP context deactivation may be initiated by the MS or by the network. The *tear down indicator* information element may be included in the DEACTIVATE PDP CONTEXT REQUEST message in order to indicate whether only the PDP context associated with this specific TI or all active PDP contexts sharing the same PDP address and APN as the PDP context associated with this specific TI shall be deactivated. If the tear down is requested, all other active PDP contexts sharing the same PDP address and APN as the PDP context associated with this specific TI shall be deactivated locally without peer-to-peer signalling. If the *tear down indicator* information element is not included in the DEACTIVATE PDP CONTEXT REQUEST message, only the PDP context associated with this specific TI shall be deactivated.

After successful PDP context deactivation, the associated NSAPI and TI values are released and can be reassigned to another PDP context.

If one or more MBMS contexts are linked to a PDP context that has been deactivated, the MS shall deactivate all those MBMS contexts locally (without peer to peer signalling between the MS and the network).

Reference

3GPP TS 24.008 clauses 6.1.3.4, 6.1.3.9 and 8.3.2.

### 11.6.1m.3 Test purpose

To verify that the UE correctly handle a MBMS context deactivation procedure requested by the network, upon reception of a DEACTIVATE PDP CONTEXT REQUEST. To verify that the UE correctly handle a MBMS context deactivation procedure locally, when the linked PDP context is deactivated.

### 11.6.1m.4 Method of test

Initial condition

System Simulator:

1 MBMS cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

The UE has one PDP context activated (trans_id 0 and nsapi 5) and one MBMS context activated (trans_id 1 and mbms nsapi 128).

Related ICS/IXIT statements

MBMS Multicast service application available on UE Yes/No

Test procedure

The UE joins a multicast service provided by the SS.

During the 1st MBMS session the SS sends a DEACTIVATE PDP CONTEXT REQUEST message using transaction identifier of the currently active MBMS context. The SS sets T3395 timer to wait for the response from the UE.

The UE shall initiate a MBMS context deactivation procedure.

The UE shall send the DEACTIVATE PDP CONTEXT ACCEPT message within T3395 timer duration.

In order to check that the MBMS context has been deactivated, a DEACTIVATE PDP CONTEXT REQUEST message using transaction identifier of the deactivated MBMS context is sent by the SS.

The UE shall send the SM STATUS message using cause #81 "invalid transaction identifier value".

The UE joins a multicast service provided by the SS.

During the 2nd MBMS session the SS sends a DEACTIVATE PDP CONTEXT REQUEST message using the tear down indicator.

The UE shall deactivate the MBMS context locally.

In order to check that the MBMS context has been deactivated, a DEACTIVATE PDP CONTEXT REQUEST message using transaction identifier of the deactivated MBMS context is sent by the SS.

The UE shall send the SM STATUS message using cause #81 "invalid transaction identifier value".

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | Join MBMS session | Join 1st MBMS session.<br>See TS 34.108 clause 7.6.1 |
| 1a | ← | | REQUEST MBMS CONTEXT ACTIVATION | SS sends Request a MBMS context activation to UE. The linked nsapi set to 5. |
| 1b | → | | ACTIVATE MBMS CONTEXT REQUEST | UE supporting Multicast replies with a MBMS context activation request |
| 1c | ← | | ACTIVATE MBMS CONTEXT ACCEPT | SS accepts the MBMS context activation. |
| 2 | ← | | DEACTIVATE PDP CONTEXT REQUEST | Request MBMS context deactivation<br>Including trans_id 1<br>For MBMS context ( Nsapi 128)<br>SM cause: #36 regular deactivation.<br>SS starts T3395. |
| 3 | → | | DEACTIVATE PDP CONTEXT ACCEPT | After sending the message the UE enters in state PDP-INACTIVE. |
| 4 | | SS | | SS stop T3395 |
| 5 | ← | | DEACTIVATE PDP CONTEXT REQUEST | Request MBMS context deactivation<br>Including trans_id 1of previous MBMS context activated (Nsapi 128)<br>SM cause: #36 regular deactivation. |
| 6 | → | | SM STATUS | SM cause value to #81 “invalid transaction identifier value”. |
| 7 | | SS | Join MBMS session | Join 2nd MBMS session.<br>See TS 34.108 clause 7.6.1 |
| 7a | ← | | REQUEST MBMS CONTEXT ACTIVATION | SS sends Request a MBMS context activation to UE. The linked nsapi set to 5. |
| 7b | → | | ACTIVATE MBMS CONTEXT REQUEST | UE supporting Multicast replies with a MBMS context activation request |
| 7c | ← | | ACTIVATE MBMS CONTEXT ACCEPT | SS accepts the MBMS context activation. |
| 8 | ← | | DEACTIVATE PDP CONTEXT REQUEST | Tear down requested |
| 9 | UE | | | The UE deactivates the MBMS contexts locally. |
| 10 | | SS | | The SS shall check that no messages are sent from the UE. |
| 11 | ← | | DEACTIVATE PDP CONTEXT REQUEST | Request MBMS context deactivation<br>Including trans_id 1of previous MBMS context activated (Nsapi 128)<br>SM cause: #36 regular deactivation. |
| 12 | → | | SM STATUS | SM cause value to #81 “invalid transaction identifier value”. |

Specific message contents

DEACTIVATE PDP CONTEXT REQUEST (step 2)

| Information Element | Value/remark |
|---|---|
| Transaction identifier | TI value of the MBMS context in use : trans_id1 |
| SM cause | #36 : regular deactivation |

DEACTIVATE PDP CONTEXT ACCEPT (step 3)

| Information Element | Value/remark |
|---|---|
| Transaction identifier | TI value of the MBMS context in use: trans_id1 |

DEACTIVATE PDP CONTEXT REQUEST (steps 5 and 11)

| Information Element | Value/remark |
|---|---|
| Transaction identifier | TI value of the MBMS context which was requested to be deactivated at step 1: trans_id1 |
| SM cause | #36 : regular deactivation |

SM STATUS (steps 6 and 12)

| Information Element | Value/remark |
|---|---|
| Transaction identifier | trans_id1 |
| SM cause | #81 "invalid transaction identifier value" |

DEACTIVATE PDP CONTEXT REQUEST (step 8)

| Information Element | Value/remark |
|---|---|
| Tear down indicator | tear down requested |

#### 11.6.1m.5 Test requirements

In step 3, the UE shall send a DEACTIVATE PDP CONTEXT ACCEPT message containing the transaction identifier (TI) in use for the MBMS context.

In step 6, the UE shall send an SM STATUS message with cause #81 "invalid transaction identifier value" using the received transaction identifier value including the extension octet.

In step 9, the UE shall deactivate the MBMS contexts locally.

In step 12, the UE shall send an SM STATUS message with cause #81 "invalid transaction identifier value" using the received transaction identifier value including the extension octet.

## 11.6.2 Void

## 11.6.3 Void

# 11.7m Network Feature Support IE for MBMS / MBMS Multicast Service

#### 11.7m.1 Definition and applicability

This test is applicable for Rel-6 UEs supporting MBMS multicast services.

#### 11.7m.2 Conformance requirement

The network informs the MS about the support of specific features, such as LCS-MOLR or MBMS, in the "Network feature support" Information Element. The information is either explicitly given by sending the "Network feature support" IE or implicitly by not sending it. The handling in the network is described in subclause 9.4.2.9. The MS may use the indication to inform the user about the availability of the appropriate services and it shall not request services that have not been indicated as available. The indication for MBMS is defined in subclause "MBMS feature support indication" in 3GPP TS 23.246.

…

An SGSN that supports MBMS shall indicate MBMS feature support to the UE during Routing Area Update procedure in the Routing Area Update Accept message and during GPRS attach procedure in the Attach Accept message. The UE then knows it can use already activated MBMS bearers, or activate new MBMS bearers according to subclause 8.2 "MBMS Multicast Service Activation".

An SGSN that does not support MBMS will not indicate MBMS feature support to the UE. This indicates to the UE that MBMS bearers are no longer supported, which may allow the UE to use point-to-point bearers for MBMS data transfer. In this case, the UE shall deactivate all active MBMS UE Contexts locally.

Reference(s)

Clause 4.7.3 of TS 24.008

Clause 8.9a of TS 23.246

### 11.7m.3 Test purpose

To verify that the UE correctly reads the "Network feature support" IE received in ATTACH ACCEPT or ROUTING AREA UPDATE ACCEPT message and does not try to request MBMS services if those are not available in the network.

### 11.7m.4 Method of test

Initial conditions

System Simulator:

2 MBMS cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC2/MNC1/LAC1/RAC1 (RAI-2).

Both cells are operating in network operation mode II.

User Equipment:

The UE is Idle updated on Cell A

Related ICS/IXIT statement(s)

- MBMS Multicast service application available on UE Yes/No

Test procedure

The UE initiates attach procedure for PS services. The SS responds with ATTACH ACCEPT message where "Network feature support" IE indicates that MBMS is supported in the network. The UE shall join the MBMS service. The SS adjusts the cell levels so that the UE starts the ROUTING AREA UPDATE procedure. The SS responds with ROUTING AREA UPDATE ACCEPT message where "Network feature support" IE indicates that MBMS is not supported in the network. The UE shall deactivate the active MBMS context locally. In order to check that the MBMS context has been deactivated, a DEACTIVATE PDP CONTEXT REQUEST message using transaction identifier of the deactivated MBMS context is sent by the SS. The UE shall send the SM STATUS message using cause #81 "invalid transaction identifier value". The UE initiates detach procedure.

The UE initiates attach procedure for PS services. The SS responds with ATTACH ACCEPT message where "Network feature support" IE is omitted and implicitly indicates that MBMS is not supported in the network. The UE shall not try to join the MBMS service. The SS adjusts the cell levels so that the UE starts the ROUTING AREA UPDATE procedure. The SS responds with ROUTING AREA UPDATE ACCEPT message where "Network feature support" IE indicates that MBMS is supported in the network. The UE shall join the MBMS service. The UE initiates detach procedure.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS sets the cell type of cell B to the "Suitable neighbour cell" and the cell type of cell A to the "Serving cell" (see NOTE).<br>The following messages are sent and shall be received on cell A. |
| 2 | → | | ATTACH REQUEST | |
| 3 | ← | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | → | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | ← | | ATTACH ACCEPT | Network feature support: MBMS supported |
| 6 | → | | ATTACH COMPLETE | |
| 7 | SS | | Join MBMS session | Join 1st MBMS session.<br>See TS 34.108 clause 7.6.1 |
| 7a | → | | PDP CONTEXT REQUEST | UE supporting Multicast replies with a PDP context activation request |
| 7b | ← | | PDP CONTEXT ACCEPT | SS accepts the PDP context activation. |
| 7c | ← | | REQUEST MBMS CONTEXT ACTIVATION | SS sends Request a MBMS context activation to UE. The linked nsapi set to 5. |
| 7d | → | | ACTIVATE MBMS CONTEXT REQUEST | UE supporting Multicast replies with a MBMS context activation request |
| 7e | ← | | ACTIVATE MBMS CONTEXT ACCEPT | SS accepts the MBMS context activation. |
| 8 | | | | The following messages are sent and shall be received on cell B. |
| 9 | SS | | | The SS sets the cell type of cell A to the "Suitable neighbour cell" and the cell type of cell B to the "Serving cell" (see NOTE). |
| 10 | → | | ROUTING AREA UPDATE REQUEST | Update type: RA updating<br>Old routing area identification: RAI-1<br>Old P-TMSI signature: P-TMSI-1 signature |
| 11 | SS | | | The SS starts integrity protection. |
| 12 | ← | | ROUTING AREA UPDATE ACCEPT | Update result: RA updated<br>Routing area identification: RAI-2<br>P-TMSI signature: P-TMSI-2 signature<br>Mobile identity: P-TMSI-2<br>Network feature support: MBMS not supported |
| 12a | → | | ROUTING AREA UPDATE COMPLETE | |
| 13 | UE | | | The UE deactivates the MBMS context locally |
| A14 | UE | | | The UE may decide to deactivate the PDP Context. The UE may send a DETACH REQUEST. (NOTE 1). |
| A14a | → | | DEACTIVATE PDP CONTEXT REQUEST | Request deactivation of the PDP context activated in steps 7a-7b |
| A14b | ← | | DEACTIVATE PDP CONTEXT REQUEST | Request MBMS context deactivation<br>Including trans_id 1of previous MBMS context activated (Nsapi 128)<br>SM cause: #36 regular deactivation. |
| A14c | → | | SM STATUS | SM cause value to #81 “invalid transaction identifier value”. |

| | | | |
|---|---|---|---|
| A14d | ← | DEACTIVATE PDP CONTEXT ACCEPT | Accept request to deactivate the PDP context established in steps 7a-7b |
| A14e | ←→ | DETACH REQUEST | Detach type: “normal detach, GPRS detach”<br>Mobile identity = P-TMSI-2<br>If the UE does not transmit DETACH REQUEST, then SS should send the DETACH REQUEST. |
| A14f | ←→ | DETACH ACCEPT | |
| A14g | SS | | The SS shall check that no messages are sent from the UE. |
| B14 | ← | DEACTIVATE PDP CONTEXT REQUEST | Request MBMS context deactivation<br>Including trans_id 1of previous MBMS context activated (Nsapi 128)<br>SM cause: #36 regular deactivation (NOTE 2). |
| B14a | → | SM STATUS | SM cause value to #81 “invalid transaction identifier value”. |
| B14b | | Void | |
| B14c | ← | DETACH REQUEST | Detach type: “re-attach not required” |
| B14d | → | DETACH ACCEPT | |
| 15 | | | The SS sets the cell type of cell B to the "Suitable neighbour cell" and the cell type of cell A to the "Serving cell" (see NOTE).<br>The following messages are sent and shall be received on cell A. |
| 16 | → | ATTACH REQUEST | |
| 17 | ← | AUTHENTICATION AND CIPHERING REQUEST | |
| 18 | → | AUTHENTICATION AND CIPHERING RESPONSE | |
| 19 | ← | ATTACH ACCEPT | Network feature support IE not present |
| 20 | → | ATTACH COMPLETE | |
| 21 | SS | | The SS verifies that the UE does not try to activate PDP context, which is needed prior to JOIN MBMS procedure. |
| 22 | | | The following messages are sent and shall be received on cell B. |
| 23 | SS | | The SS sets the cell type of cell A to the "Suitable neighbour cell" and the cell type of cell B to the "Serving cell" (see NOTE). |
| 24 | → | ROUTING AREA UPDATE REQUEST | Update type: RA updating<br>Old routing area identification: RAI-1<br>Old P-TMSI signature: P-TMSI-1 signature |
| 25 | | | The SS starts integrity protection. |
| 26 | ← | ROUTING AREA UPDATE ACCEPT | Update result: RA updated<br>Routing area identification: RAI-2<br>P-TMSI signature: P-TMSI-2 signature<br>Mobile identity: P-TMSI-2<br>Network feature support: MBMS supported |
| 27 | → | ROUTING AREA UPDATE COMPLETE | |
| 28 | SS | Join MBMS session | Join 2nd MBMS session.<br>See TS 34.108 clause 7.6.1 |
| 29 | | | void |

| | | | |
|---|---|---|---|
| 30 | → | PDP CONTEXT REQUEST | UE supporting Multicast replies with a PDP context activation request |
| 31 | ← | PDP CONTEXT ACCEPT | SS accepts the PDP context activation. |
| 32 | ← | REQUEST MBMS CONTEXT ACTIVATION | SS sends Request a MBMS context activation to UE. The linked nsapi set to 5. |
| 33 | → | ACTIVATE MBMS CONTEXT REQUEST | UE supporting Multicast replies with a MBMS context activation request |
| 34 | ← | ACTIVATE MBMS CONTEXT ACCEPT | SS accepts the MBMS context activation. |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1.5 “Reference Radio Conditions (FDD)”<br>NOTE 1: Support of automatic PS attach procedure at switch on - no<br>NOTE 2: Support of automatic PS attach procedure at switch on - yes | | | |

Specific Message Contents

None

11.7m.5 Test requirements

In step 7 the UE shall join the MBMS session.

In step 13 the UE shall deactivate the MBMS contexts locally.

In step A14c or B14a the UE shall send an SM STATUS message with cause #81 "invalid transaction identifier value" using the received transaction identifier value including the extension octet.

In step 21 the UE shall not try to join the MBMS session.

In step 28 the UE shall join the MBMS session.

# 11.8 MBMS Service Request

## 11.8.1m MBMS Service request procedure not accepted by the network / MBMS Multicast Service

11.8.1m.1 Definition and applicability

This test is applicable for Rel-6 UEs supporting MBMS multicast services.

11.8.1m.2 Conformance requirement

If the Service request cannot be accepted, the network returns a SERVICE REJECT message to the mobile station. An MS that receives a SERVICE REJECT message stops timer T3317. The MS shall then take different actions depending on the received reject cause value:

…

# 40 (No PDP context activated)

- The MS shall deactivate locally all active PDP and MBMS contexts and the MS shall enter the state GMM-REGISTERED.NORMAL-SERVICE. The MS may also activate PDP context(s) to replace any previously active PDP contexts. The MS may also perform the procedures needed in order to activate any previously active multicast service(s).

NOTE: In some cases, user interaction may be required and then the MS cannot activate the PDP and MBMS context(s) automatically.

Reference(s)

Clause 4.7.13.4 of TS 24.008

### 11.8.1m.3 Test purpose

To verify that the UE correctly handles a SERVICE REJECT message with SM cause “#40 No PDP context activated” received from the network and deactivates the MBMS context locally.

### 11.8.1m.4 Method of test

#### Initial conditions

System Simulator:

1 MBMS cell, default parameters.

User Equipment:

The UE is in "PMM-IDLE” mode and has joined the multicast service provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

#### Related ICS/IXIT statement(s)

- MBMS Multicast service application available on UE Yes/No

#### Test procedure

The UE receives an MBMS MODIFIED SERVICES INFORMATION message for an MBMS multicast service for which the UE has activated an MBMS context. The UE will try to establish a PS signalling connection and sends a SERVICE REQUEST message to the SS where the service type is set to "MBMS multicast service reception". The SS returns a SERVICE REJECT message to the UE with SM cause “#40 No PDP context activated”. The UE shall deactivate locally the active MBMS context and shall enter the state GMM-REGISTERED.NORMAL-SERVICE. In order to check that the MBMS context has been deactivated, a DEACTIVATE PDP CONTEXT REQUEST message using transaction identifier of the deactivated MBMS context is sent by the SS. The UE shall send the SM STATUS message using cause #81 "invalid transaction identifier value".

#### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | MBMS MODIFIED SERVICES INFORMATION | The SS informs the UE about a change for the MBMS service available in the cell |
| 2 | → | | SERVICE REQUEST | Service type: MBMS Multicast Service Reception |
| 3 | ← | | SERVICE REJECT | GMM cause: # 40 No PDP context activated |
| 4 | UE | | | The UE deactivates the MBMS context locally |
| 5 | SS | | | The SS shall check that no messages are sent from the UE |
| 6 | ← | | DEACTIVATE PDP CONTEXT REQUEST | Request MBMS context deactivation<br>Including the transaction Identifier of the previous activated MBMS context.<br>SM cause: #36 regular deactivation. |
| 7 | → | | SM STATUS | SM cause value to #81 “invalid transaction identifier value”. |

#### Specific Message Contents

### 11.8.1m.5 Test requirements

In step 2 the UE shall send a SERVICE REQUEST message containing the service type IE MBMS Service Reception.

In step 4 the UE shall deactivate the MBMS contexts locally.

In step 7 the UE shall send an SM STATUS message with cause #81 "invalid transaction identifier value" using the received transaction identifier value including the extension octet.

## 11.8.2 MBMS Service Request procedure collision with Routing Area Update/ MBMS Selected Service

### 11.8.2.1 Definition and applicability

This test is applicable for Rel-6 UEs supporting MBMS broadcast services.

### 11.8.2.2 Conformance requirement

The following abnormal cases can be identified:

…

e) Routing area update procedure is triggered

If a cell change into a new routing area occurs and the necessity of routing area update procedure is determined before the security mode control procedure is completed, a SERVICE ACCEPT or SERVICE REJECT message has been received, the Service request procedure shall be aborted and the routing area updating procedure is started immediately. Follow-on request pending may be indicated in the ROUTING AREA UPDATE REQUEST for the service, which was the trigger of the aborted Service request procedure, to restart the pending service itself or the Service request procedure after the completion of the routing area updating procedure. If the Service type of the aborted SERVICE REQUEST was indicating "data", then the routing area update procedure may be followed by a re-initiated Service request procedure indicating "data", if it is still necessary. If the Service type was indicating "MBMS multicast service reception", or "MBMS broadcast service reception" the Service request procedure shall be aborted.

#### Reference(s)

Clause 4.7.13.5 of TS 24.008 (Rel-7 version)

### 11.8.2.3 Test purpose

To verify that the UE correctly aborts a SERVICE REQUEST procedure if a ROUTING AREA UPDATE procedure is initiated before the SERVICE REQUEST procedure has been completed.

### 11.8.2.4 Method of test

#### Initial conditions

System Simulator:

2 MBMS cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).

Both cells are operating in network operation mode II.

User Equipment:

The UE is in "PMM-IDLE” mode and is interested in the selected service provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

#### Related ICS/IXIT statement(s)

- MBMS Broadcast service application available on UE Yes/No

#### Test procedure

The UE receives an MBMS MODIFIED SERVICES INFORMATION message for an MBMS selected service for which the UE has activated an MBMS context. The UE will try to establish a PS signalling connection and sends a SERVICE REQUEST message to the SS where the service type is set to "MBMS broadcast service reception ". The SS adjusts the cell levels so that the UE starts the ROUTING AREA UPDATE procedure and aborts the SERVICE REQUEST procedure. The ROUTING AREA UPDATE procedure is completed. The SS checks that the UE does not initiate further SERVICE REQUEST

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | The SS sets the cell type of cell B to the "Suitable neighbour cell" and the cell type of cell A to the "Serving cell" (see NOTE).<br>The following messages are sent and shall be received on cell A. |
| 2 | SS | | | SS initiates PTPRB setup procedure by sending MBMS Modified services Information with “MBMS required UE action” IE set to “Request PTP RB”. |
| 2a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to “mbms_PTP_RB_Request”. |
| 2b | UE | | | The UE after completing the RRC Connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after RRC CONNECTION SETUP COMPLETE. |
| 3 | → | | SERVICE REQUEST | Service type: MBMS Broadcast Service Reception<br>Timer T3317 shall be started. |
| 4 | ← | | AUTHENTICATION AND CIPHERING REQUEST | |
| 5 | → | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5a | SS | | | The SS releases the RRC connection. |
| 6 | SS | | | Within timer T3317 the SS sets the cell type of cell A to the "Suitable neighbour cell" and the cell type of cell B to the "Serving cell" (see NOTE). |
| 7 | | | | The SS sets the cell type of cell A to the "Suitable neighbour cell" and the cell type of cell B to the "Serving cell" (see NOTE).<br>The following messages are sent and shall be received on cell B. |
| 8 | UE | | | The SERVICE REQUEST procedure shall be aborted.<br><br>Timer T3317 shall be stopped. |
| 8a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to " registration ". |
| 8b | UE | | | The UE after completing the RRC Connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after RRC CONNECTION SETUP COMPLETE. |
| 9 | → | | ROUTING AREA UPDATE REQUEST | Update type: RA updating<br>Old routing area identification: RAI-1<br>Old P-TMSI signature: P-TMSI-1signature |

| | | | |
|---|---|---|---|
| 10 | SS | | The SS starts integrity protection. |
| 11 | ← | ROUTING AREA UPDATE ACCEPT | Update result: RA updated<br>Routing area identification: RAI-4<br>P-TMSI signature: P-TMSI-2 signature<br>Mobile identity: P-TMSI-2 |
| 12 | → | ROUTING AREA UPDATE COMPLETE | |
| 13 | SS | | SS waits for 30 seconds to check that no further SERVICE REQUEST messages are sent by the UE. |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1.5 “Reference Radio Conditions (FDD)”. | | | |

Specific Message Contents

In step 2, MBMS Modified services Information sent by SS with “MBMS required UE action” IE set to “Request PTP RB”.

11.8.2.5 Test requirements

In step 9 the UE shall send ROUTING AREA UPDATE REQUEST.

## 11.8.2m MBMS Service Request procedure collision with Routing Area Update / MBMS Multicast Service

11.8.2.1m Definition and applicability

This test is applicable for Rel-6 UEs supporting MBMS multicast services.

11.8.2.2m Conformance requirement

Same conformance requirement as in clause 11.8.2.2.

11.8.2.3m Test purpose

Same test purpose as in clause 11.8.2.3.

11.8.2.4m Method of test

Initial conditions

System Simulator:

2 MBMS cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).

Both cells are operating in network operation mode II.

User Equipment:

The UE is in "PMM-IDLE” mode and has joined the multicast service provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statement(s)

- MBMS Multicast service application available on UE Yes/No

Test procedure

Same test procedure as in clause 11.8.2.4m except that the UE receives an MBMS MODIFIED SERVICES INFORMATION message for an MBMS multicast service for which the UE has activated an MBMS context and the Service Type in SERVICE REQUEST message to the SS indicates ‘MBMS Multicast Service Reception’.

Expected sequence

Same expected sequence as in clause 11.8.2.4m except that the expected sequence steps 2b and 8b are not applicable and the Service Type in SERVICE REQUEST message in step 3 indicates ‘MBMS Multicast Service Reception’.

Specific Message Contents

Same as clause 11.8.2.4

11.8.2.5m Test requirements

Same test requirements as in clause 11.8.2.5

# 12 Elementary procedure for Packet Switched Mobility Management

## 12.1 Applicability, default conditions and default messages

All test cases for PS mobility management apply for all PS mobiles unless otherwise stated in a specific test. Within each test case, the ICS statement indicates whether the test shall be performed for mobiles that can only operate in mode - class A, only in mode - class C , or in both mode - class A and C. For some procedures, the mobile class is of no importance.

Note that only the layer 3 messages are described in the document. The mapping of the layer 3 messages to lower layers and the use of logical channels is not described in the present document.

The terms 'PS/CS mode of operation' and 'PS mode of operation' are not used in the present document with some exceptions. Instead the terms 'UE operation mode A' and 'UE operation mode C' are used.

If UE supports mode A and C; the operation mode change from C to A during the test and the resulting signalling caused by the mode change, are out of test scope and up to implementation.

The default conditions and default message contents not specified in this clause must be set as in "PS default conditions"

Below is a list of the RAI values and the corresponding RAC, LAC and MCC used in the test cases:

RAI-1: MCC1/MNC1/LAC1/RAC1 (Used if only one cell)

RAI-2: MCC2/MNC1/LAC1/RAC1

RAI-3: MCC1/MNC1/LAC2/RAC1

RAI-4: MCC1/MNC1/LAC1/RAC2

RAI-5: MCC1/MNC1/LAC1/RAC3

RAI-6: MCC2/MNC1/LAC2/RAC1

RAI-7: MCC2/MNC1/LAC1/RAC2

RAI-8: MCC1/MNC2/LAC1/RAC1

RAI-9: MCC1/MNC2/LAC2/RAC1

RAI10: MCC1/MNC2/LAC1/RAC2

RAI-11: MCC1/MNC3/LAC1/RAC1

RAI-12: MCC1/MNC1/LAC2/RAC2

If the User Equipment initial condition specifies that the mobile has a valid IMSI but the initial condition does not mention P-TMSI, than that shall be interpreted as that the mobile has no valid P-TMSI.

The tests are based on 3GPP TS 24.008.

# 12.2 PS attach procedure

This procedure is used to indicate for the network that the IMSI is available for traffic by establishment of a GMM context.

## 12.2.1 Normal PS attach

The normal PS attach procedure is a GMM procedure used by PS UEs of UE operation mode A or C to IMSI attach for PS services only.

### 12.2.1.1 PS attach / accepted

#### 12.2.1.1.1 Definition

#### 12.2.1.1.2 Conformance requirement

1) If the network accepts the PS attach procedure (signalled by an IMSI) and allocates a P-TMSI, the UE shall acknowledge the P-TMSI and continue communication with the P-TMSI.

2) If the network accepts the PS attach procedure (signalled by P-TMSI) and reallocates a new P-TMSI, the UE shall acknowledge the new P-TMSI and continue communication with the new P-TMSI.

3) If the network accepts the PS attach procedure (signalled by a P-TMSI) from the UE without reallocation of the old P-TMSI, the UE shall continue communication with the old P-TMSI.

Reference

3GPP TS 24.008 clause 4.7.3.1

#### 12.2.1.1.3 Test purpose

To test the behaviour of the UE if the network accepts the PS attach procedure.

The following cases are identified:

1) P-TMSI / P-TMSI signature is allocated;

2) P-TMSI / P-TMSI signature is reallocated;

3) Old P-TMSI / P-TMSI signature is not changed.

#### 12.2.1.1.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A).

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

1) The UE sends an ATTACH REQUEST message with identity IMSI. The SS allocates a P-TMSI and returns ATTACH ACCEPT message with a P-TMSI. The UE acknowledge the P-TMSI by sending ATTACH COMPLETE message. Further communication UE - SS is performed by the new P-TMSI.

2) The UE sends an ATTACH REQUEST message with identity P-TMSI. The SS reallocates a new P-TMSI and returns ATTACH ACCEPT message with the new P-TMSI. The UE acknowledge the P-TMSI by sending ATTACH COMPLETE message. Further communication UE - SS is performed by the new P-TMSI. The UE will not answer signalling addressed to the old P-TMSI.

3) The UE sends an ATTACH REQUEST message with identity P-TMSI. The SS accepts the P-TMSI and returns ATTACH ACCEPT message without any P-TMSI. Further communication UE - SS is performed by the old P-TMSI.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set to attach to the PS services only (see ICS). If this is not supported by the UE, goto step 26. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | SS | | | The SS releases the RRC connection. |
| 6 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging order is for PS services.<br>Paging cause: Terminating interactive call |
| 6a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call". |
| 7 | -> | | SERVICE REQUEST | Service type = "paging response" |
| 7a | SS | | | The SS starts integrity protection and releases the RRC connection. |
| 8 | UE | | | The UE is switched off or power is removed (see ICS). |
| 8a | SS | | | SS checks that the IE "Establishment cause" in any received RRC CONNECTION REQUEST message is set to **"**Detach" (message not sent if power is removed). |
| 9 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS detach' |
| 9a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 10 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 10a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 11 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-2<br>Old Routing area identity = RAI-1 |
| 11a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 11b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 11c | SS | | | The SS starts integrity protection. |
| 12 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 13 | -> | | ATTACH COMPLETE | |
| 14 | | | Void | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 14b | | | Void | |
| 14c | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 14d | SS | | | SS verifies that the UE transmits an RRC CONNECTION REQUEST message. SS will reject this request. The IE "Establishment cause" is not checked. |
| 15 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging order is for PS services. |
| 16 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 17 | UE | | | The UE is switched off or power is removed (see ICS). |
| 17a | SS | | | SS checks that the IE "Establishment cause" in any received RRC CONNECTION REQUEST message is set to "Detach" (message not sent if power is removed). |
| 18 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS detach' |
| 18a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 19 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 19a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 20 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 20a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 20b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 20c | SS | | | The SS starts integrity protection. |
| 21 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Routing area identity = RAI-1<br>Attach result = 'GPRS only attached' |
| 22 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services.<br>Paging cause: Terminating interactive call |
| 22a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call". |
| 22b | | | Void | |
| 22c | | | Void | |
| 23 | -> | | SERVICE REQUEST | Service type = "paging response" |
| 23aa | SS | | | The SS starts integrity protection and releases the RRC connection. |
| 23a | | | Void | |
| 23b | | | Void | |
| 24 | UE | | | The UE is switched off or power is removed (see ICS). |
| 24a | SS | | | SS checks that the IE "Establishment cause" in any received RRC CONNECTION REQUEST message is set to "Detach" (message not sent if power is removed). |
| 25 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS detach' |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 25a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 26 | UE | | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 25a. |

Specific message contents

None.

#### 12.2.1.1.5 Test requirements

At step 2a, 10a and 19a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

At step 6a and 22a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Terminating Interactive Call".

At step 8a, 17a and 24a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach".

At step3, 11 and 20, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

UE shall perform the following actions depending on the Mobile identity in the ATTACH REQUEST message and on the Mobile identity in the ATTACH ACCEPT message.

Case 1) The Mobile identity in the ATTACH REQUEST message is the IMSI and the Mobile identity in the ATTACH ACCEPT message is the P-TMSI.

At step5, UE shall:

- acknowledge the P-TMSI by sending the ATTACH COMPLETE message.

Case 2) The Mobile identity in the ATTACH REQUEST message is the P-TMSI and the Mobile identity in the ATTACH ACCEPT message is the new P-TMSI.

At step13, UE shall:

- acknowledge the new P-TMSI by sending the ATTACH COMPLETE message.

At step23, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

### 12.2.1.2 PS attach / rejected / IMSI invalid / illegal UE

#### 12.2.1.2.1 Definition

#### 12.2.1.2.2 Conformance requirement

1) If the network rejects a PS attach procedure from the User Equipment with the cause 'Illegal MS, the User Equipment shall consider USIM invalid for PS services until power is switched off or USIM is removed.

2) If the network rejects a PS attach procedure from the User Equipment with the cause 'Illegal MS the User Equipment shall delete the stored RAI, PS-CKSN, P-TMSI and P-TMSI signature.

3) If the network rejects a PS attach procedure from the User Equipment with the cause 'Illegal MS, the User Equipment shall delete the LAI.

Reference

3GPP TS 24.008 clause 4.7.3.1.

12.2.1.2.3 Test purpose

To test the behaviour of the UE if the network rejects the PS attach procedure of the UE with the cause 'illegal MS.

12.2.1.2.4 Method of test

Initial condition

System Simulator:

Three cells (not simultaneously activated), cell A with MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in

MCC1/MNC1/LAC2/RAC1 (RAI-3), cell C in MCC2/MNC1/LAC1/RAC1 (RAI-2).

All three cells are operating in network operation mode II (in case of UE operation mode A).

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE in all cells.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode C Yes/No

UE operation mode A Yes/No (only if mode C not supported)

Switch off on button Yes/No

Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a PS attach with the cause value 'Illegal MS'. The SS checks that the UE does not perform PS attach in the same or another PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). |
| | | | | The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells. |
| 2 | | SS | | The SS is set in network operation mode II. Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". Set the cell type of cell C to the "Non-Suitable cell". (see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | | | Void | |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = P-TMSI-1 Old Routing area identity = RAI-1 |
| 5 | <- | | ATTACH REJECT | GMM cause = 'Illegal MS'. |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 8 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| 9 | UE | | | The UE initiates an attach by MMI or by AT command. |
| 10 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| | | | | The following messages are sent and shall be received on cell C. |
| 11 | | SS | | Set the cell type of cell B to the "Non-Suitable cell". Set the cell type of cell C to the "Serving cell". (see note) |
| 12 | UE | | | Cell C is preferred by the UE. |
| 13 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| 14 | UE | | | The UE initiates an attach by MMI or by AT command. |
| 15 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| 16 | UE | | | If possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 17 | UE | | | The UE is powered up or switched on. |
| 18 | UE | | Registration on CS | See TS 34.108 This is applied only for UE in UE operation mode A. SS allocates Mobile identity = TMSI-1. |
| 19 | UE | | | The UE initiates an attach (see ICS). |
| 20 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = IMSI |
| 20a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 20b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 20c | SS | | | The SS starts integrity protection. |

| | | | |
|---|---|---|---|
| 21 | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-2 |
| 22 | -> | ATTACH COMPLETE | |
| NOTE: | The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | |

Specific message contents

None.

12.2.1.2.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, 10, 13 and 15, UE shall:

- not send the ATTACH REQUEST message to SS, even if there is an instruction of attach request from MMI or from AT command.

At step20, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

## 12.2.1.3 PS attach / rejected / IMSI invalid / PS services not allowed

12.2.1.3.1 Definition

12.2.1.3.2 Conformance requirement

1) If the network rejects a PS attach procedure from the User Equipment with the cause 'GPRS services not allowed', the User Equipment shall consider USIM invalid for PS services until power is switched off or USIM is removed.

2) If the network rejects a PS attach procedure from the User Equipment with the cause 'GPRS services not allowed' the User Equipment shall delete the stored RAI, PS-CKSN, P-TMSI and P-TMSI signature.

Reference

3GPP TS 24.008 clause 4.7.3.1.

12.2.1.3.3 Test purpose

To test the behaviour of the UE if the network rejects the PS attach procedure of the UE with the cause 'GPRS services not allowed' (no valid PS-subscription for the IMSI).

12.2.1.3.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (HPLMN, RAI-1) and cell B in MCC2/MNC1/LAC1/RAC1 (RAI-2).
Both cells are operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode C Yes/No

UE operation mode A Yes/No

USIM removal possible without powering down Yes/No

Switch off on button Yes/No

Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a normal attach with the cause value 'GPRS services not allowed'. The SS checks that the UE does not perform PS attach in another PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 2 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 17. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = P-TMSI-1 Old Routing area identity = RAI-1 |
| 5 | | <- | ATTACH REJECT | GMM cause = 'GPRS services not allowed' |
| 5a | | SS | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 7a | UE | | Registration on CS | See TS 34.108 This is applied only for UE in UE operation mode A. |
| 8 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| 9 | UE | | | If possible (see ICS) USIM removal is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 10 | UE | | | The UE gets the USIM replaced, is powered up or switched on and initiates an attach (see ICS). |
| 10a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 11 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = IMSI |
| 11a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 11b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 11c | | SS | | The SS starts integrity protection. |
| 12 | | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature Routing area identity = RAI-2 |
| 13 | | -> | ATTACH COMPLETE | |
| 14 | UE | | | The UE is switched off or power is removed (see ICS). |
| 15 | | -> | DETACH REQUEST | Message not sent if power is removed. Detach type = 'power switched off, GPRS detach' |
| 15a | | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off . |

| | | | |
|---|---|---|---|
| 16<br><br><br><br>17 | <br><br><br><br>UE | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note)<br>The UE is set in UE operation mode A(see ICS) and the test is repeated from step 3 to step 15. |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

12.2.1.3.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step8, UE shall:

- not perform a PS attach procedure.

At step11, after the UE is switched on or a USIM is replaced, UE shall:

- perform the PS attach procedure.

## 12.2.1.4 PS attach / rejected / PLMN not allowed

12.2.1.4.1 Definition

12.2.1.4.2 Conformance requirement

1) If the network rejects a PS attach procedure from the User Equipment with the cause 'PLMN not allowed' the User Equipment shall:

   1.1 not perform PS attach when switched on in the same routing area or location area (except for the HPLMN).

   1.2 not perform PS attach when in the same PLMN and when that PLMN is not selected manually.

   1.3 delete the stored RAI, PS-CKSN, P-TMSI and P-TMSI signature.

   1.4 store the PLMN in the 'forbidden PLMN' list.

2) If the network rejects a PS attach procedure from the User Equipment with the cause 'PLMN not allowed' the User Equipment shall perform PS attach when a new PLMN is entered.

3) If the network rejects a PS attach procedure from the User Equipment with the cause 'PLMN not allowed' and if after that the PLMN from which this rejection was received, is manually selected, the User Equipment shall perform a PS attach procedure.

Reference

3GPP TS 24.008 clause 4.7.3.1.

12.2.1.4.3 Test purpose

To test the behaviour of the UE if the network rejects the PS attach procedure of the UE with the cause 'PLMN not allowed'.

12.2.1.4.4 Method of test

Proc 1: Test procedure 1

Initial condition

System Simulator:

Four cells (not simultaneously activated), cell A in MCC1/MNC2/LAC1/RAC1 (RAI-8), cell B in MCC1/MNC2/LAC1/RAC1 (RAI-8), cell C in MCC1/MNC2/LAC2/RAC1 (RAI-9) and cell D in MCC2/MNC1/LAC1/RAC1 (RAI-2).
All four cells are operating in network operation mode II (in case of UE operation mode A). The PLMN of the four cells should NOT be that of the UE Home PLMN.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

NB: i) Cell D will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-8. UE is Idle Updated on cell A.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

The SS rejects a PS attach with the cause value 'PLMN not allowed'. The SS checks that the UE does not perform PS attach if activated in the same routing area or location area and performs PS attach only when a new PLMN is entered.

Expected Sequence

| Step | Direction | Message | Comments |
|---|---|---|---|
| | UE \| SS | | |
| | SS | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | The UE is set in UE operation mode C (see ICS). |
| 2 | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>Set the cell type of cell D to the "Non-Suitable cell".<br>(see note) |
| 3 | UE | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | | Void | |
| 4 | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-8 |
| 5 | <- | ATTACH REJECT | GMM cause = 'PLMN not allowed' |
| 6 | UE | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| | | | The following messages are sent and shall be received on cell B. |
| 7 | UE | | The UE is switched off. |
| 8 | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 9 | UE | | The UE is powered up or switched on. |
| 10 | UE | | Cell B is preferred by the UE. |
| 11 | UE | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| | | | The following messages are sent and shall be received on cell C. |
| 12 | SS | | Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 13 | UE | | Cell C is preferred by the UE. |
| 14 | UE | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| | | | The following messages are sent and shall be received on cell D. |
| 15 | SS | | Set the cell type of cell C to the "Non-Suitable cell".<br>Set the cell type of cell D to the "Serving cell".<br>(see note) |
| 16 | UE | | Cell D is preferred by the UE. |
| 17 | UE | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A. |
| 18 | UE | | The UE initiates an attach automatically, by MMI or by AT command. |
| 19 | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 19a | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 19b | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 19c | SS | | The SS starts integrity protection. |

| | | | |
|---|---|---|---|
| 20 | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-2 |
| 21 | -> | ATTACH COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Proc 2: Test procedure 2

Initial condition

System Simurator:

One cell operating in network operation mode II: MCC2/MNC1/LAC1/RAC1 (RAI-2). The PLMN of the cell should NOT be that of the Mobile Station Home PLMN.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-2. UE is Idle Updated on cell A.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a PS attach with the cause value 'PLMN not allowed'. The subscribers access rights is changed to allow PS attach. Then the PLMN from which this rejection was received is manually selected and the SS check that a PS attach is performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode C or A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | | | Void | |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-2 |
| 4 | <- | | ATTACH REJECT | GMM cause = 'PLMN not allowed' |
| 5 | UE | | | No ATTACH REQUEST sent to SS (SS waits 30 seconds) |
| 6 | UE | | | The current PLMN is selected manually. |
| 7 | | | Void | |
| 8 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 9 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 9a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 9b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 9c | SS | | | The SS starts integrity protection. |
| 10 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-2 |
| 11 | -> | | ATTACH COMPLETE | |

Specific message contents

None.

12.2.1.4.5 Test requirements

Test requirements for test procedure 1

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step6, UE shall:

- not perform PS attach procedure.

UE shall perform the following actions depending on the PLMN or the routing area or the location area

Case 1) UE is in the same routing area or location area when the power is switched on,

At step11, UE shall:

- not perform PS attach procedure.

Case2) UE is in the same PLMN, and this PLMN is not selected manually

At step14, UE shall:

- not perform PS attach procedure.

Case3) UE is in a new PLMN.

At step19, UE shall:

- perform the PS attach procedure.

Test requirements for test procedure 2

At step3, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step5, UE shall:

- not perform PS attach procedure.

At step9, when the UE is in the new PLMN, and this PLMN is selected manually, UE shall

- perform the PS attach procedure.

## 12.2.1.5a PS attach / rejected / roaming not allowed in this location area

### 12.2.1.5a.1 Definition

### 12.2.1.5a.2 Conformance requirement

1) If the network rejects a PS attach procedure from the User Equipment with the cause 'roaming not allowed in this location area' the User Equipment shall:

   1.1 not perform PS attach when in the same location area.

   1.2 delete the stored RAI, PS-CKSN, P-TMSI and P-TMSI signature.

   1.3 store the LA in the 'forbidden location areas for roaming' list.

   1.4 perform PS attach when a new location area is entered.

   1.5 Periodically search for its HPLMN.

2) The User Equipment shall reset the list of 'Forbidden location areas for roaming' when switched off or when the USIM is removed.

3) The UE shall be capable of storing at least 10 entries in the list of 'Forbidden location areas for roaming'.

Reference

3GPP TS 24.008 clause 4.7.3.1.

### 12.2.1.5a.3 Test purpose

Test purpose 1

To test that on receipt of a rejection using the 'roaming not allowed in this location area' cause code, the UE ceases trying to attach on that location area. Successful PS attach procedure is possible in other location areas.

Test purpose 2

To test that if the UE is switched off or the USIM is removed the list of 'forbidden location areas for roaming' is cleared.

Test purpose 3

To test that at least 6 entries can be held in the list of 'forbidden location areas for roaming' (the requirement in 3GPP TS 24.008 is to store at least 10 entries. This is not fully tested by the third procedure).

Test purpose 4

To test that if a cell of the Home PLMN is available then the UE returns to it in preference to any other available cell.

12.2.1.5a.4 Method of test

Proc 1: Test procedure 1

Initial condition

System Simulator:

Three cells (not simultaneously activated), cell A in MCC2/MNC1/LAC1/RAC1 (RAI-2, Not HPLMN), cell B in

MCC2/MNC1/LAC2/RAC1 (RAI-6, Not HPLMN) and cell C in MCC2/MNC1/LAC1/RAC2 (RAI-7, Not HPLMN).

All three cells are operating in network operation mode II.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-2.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a PS attach with the cause value 'Roaming not allowed in this location area'. A new attempt for a PS attach is not possible. Successful PS attach / detach procedures are performed in another location area. A new attempt for a PS attach is performed in the 1st location area. This attempt shall not succeed, as the LA is on the forbidden list.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 19. |
| 2 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | | | Void | |
| 3b | | SS | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 4 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-2 |
| 5 | | <- | ATTACH REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 6 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| 6a | | SS | | The SS releases the RRC connection. |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 8 | UE | | | Cell B is preferred by the UE. |
| 9 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A.<br>SS checks Mobile identity = IMSI<br>SS allocates Mobile identity = TMSI-1. |
| 10 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 10a | | SS | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 11 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 11a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 11b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 11c | | SS | | The SS starts integrity protection. |
| 12 | | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-6 |
| 13 | | -> | ATTACH COMPLETE | |
| 13a | | SS | | The SS releases the RRC connection. |
| 14 | UE | | | The UE initiates a PS detach (without power off) by MMI or by AT command . |
| 14a | | SS | | SS checks that the IE “Establishment cause” in any received RRC CONNECTION REQUEST message is set to “Detach”. |
| 15 | | -> | DETACH REQUEST | Detach type = 'normal detach, GPRS detach' |
| 16 | | <- | DETACH ACCEPT | |
| 16a | | SS | | The SS releases the RRC connection. |

| | | | |
|---|---|---|---|
| 17 | SS | | The following messages are sent and shall be received on cell C.<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell". (see note) |
| 18 | UE | | Cell C is preferred by the UE. |
| 19 | UE | | No ATTACH REQUEST sent to SS (SS waits 30 seconds).<br>The UE is switched off or power is removed (see ICS) |
| 20 | UE | | UE is switched off. |
| 21 | SS | | Set the cell type of cell C to the "Non-Suitable cell". (see note) |
| 22 | UE | | The UE is set in UE operation mode A if supported (see ICS) and the test is repeated from step 2 to step 20. |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Proc 2: Test procedure 2

Initial condition

System Simulator:

One cell in MCC2/MNC1/LAC1/RAC1 (RAI-2, Not HPLMN) operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-2.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a PS attach updating with the cause value 'Roaming not allowed in this location area'. The UE is switched off for 10 s and switched on again. The SS check that a PS attach is possible on the cell on which the PS attach had been rejected.

If USIM removal is possible without switching off: The SS rejects a PS attach with the cause value 'Roaming not allowed in this location area'. The USIM is removed and inserted in the UE. The SS check that a PS attach is possible on the cell on which the PS attach had been rejected.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | If UE operation mode C is supported, the UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, the UE is set in UE operation mode A. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | | | Void | |
| 2b | SS | | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-2 |
| 4 | <- | | ATTACH REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 5 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| 5a | SS | | | The SS releases the RRC connection. |
| 6 | UE | | | If possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 7 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 8 | | | | |
| 8a | SS | | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 8b | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A.<br>SS allocates Mobile identity = TMSI-1. |
| 9 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 9a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 9b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 9c | SS | | | The SS starts integrity protection. |
| 10 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-2 |
| 11 | -> | | ATTACH COMPLETE | |
| 11a | SS | | | The SS releases the RRC connection. |

Proc 3: Test procedure 3

Initial condition

System Simulator:

Six cells (not simultaneously activated), cell A in MCC2/MNC1/LAC1/RAC1 (RAI-2, Not HPLMN), cell B in MCC2/MNC1/LAC2/RAC1 (RAI-3, Not HPLMN), cell C in MCC2/MNC1/LAC3/RAC1 (Not HPLMN), cell D in MCC2/MNC1/LAC4/RAC1 (Not HPLMN), cell E in MCC2/MNC1/LAC5/RAC1 (Not HPLMN), cell F in MCC2/MNC1/LAC6/RAC1 (Not HPLMN).
All six cells are operating in network operation mode II (in case of UE operation mode A).
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-2.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a PS attach with the cause value 'Roaming not allowed in this location area'. This is done for 6 different location areas. Then the SS checks that the UE does not attempt to perform an attach procedure on the non-allowed location areas.

Different types of UE may use different methods to periodically clear the list of forbidden areas (e.g. every day at 12am) for roaming. If the list is cleared while the test is being run, it may be necessary to re-run the test.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>Set the cell type of cell D to the "Non-Suitable cell".<br>Set the cell type of cell E to the "Non-Suitable cell".<br>Set the cell type of cell F to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | If UE operation mode C is supported, the UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, the UE is set in UE operation mode A. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | | | Void | |
| 3b | | SS | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 4 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-2 |
| 5 | | <- | ATTACH REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 6 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds) |
| 6a | | SS | | The SS releases the RRC connection. |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 8 | UE | | | Cell B is preferred by the UE. |
| 9 | UE | | Registration on CS | See TS 34.108<br>This is applied only in case of UE operation mode A.<br>Parameter mobile identity is IMSI. |
| 10 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 10a | | SS | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 11 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 12 | | <- | ATTACH REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 13 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| 13a | | SS | | The SS releases the RRC connection. |
| | | SS | | The following messages are sent and shall be received on cell C. |
| 14 | | SS | | Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 15 | UE | | | Cell C is preferred by the UE. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 16 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A.<br>Parameter mobile identity is IMSI. |
| 17 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 17a | SS | | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 18 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 19 | <- | | ATTACH REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 20 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| | | | | The following messages are sent and shall be received on cell D. |
| 21a | SS | | | The SS releases the RRC connection. |
| 21 | SS | | | Set the cell type of cell C to the "Non-Suitable cell".<br>Set the cell type of cell D to the "Serving cell". (see note) |
| 22 | UE | | | Cell D is preferred by the UE. |
| 23 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A.<br>Parameter mobile identity is IMSI. |
| 24 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 24a | SS | | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 25 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 26 | <- | | ATTACH REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 27 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| 27a | SS | | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| | | | | The following messages are sent and shall be received on cell E. |
| 28 | SS | | | Set the cell type of cell D to the "Non-Suitable cell".<br>Set the cell type of cell E to the "Serving cell". (see note) |
| 29 | UE | | | Cell E is preferred by the UE. |
| 30 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A.<br>Parameter mobile identity is IMSI. |
| 31 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 31a | SS | | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 32 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 33 | <- | | ATTACH REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 34 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| 34a | SS | | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell F. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 35 | | SS | | Set the cell type of cell E to the "Non-Suitable cell".<br>Set the cell type of cell F to the "Serving cell".<br>(see note) |
| 36 | UE | | | Cell F is preferred by the UE. |
| 37 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A. |
| 38 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 38a | | SS | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 39 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 40 | <- | | ATTACH REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 41 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds) |
| 41a | | SS | | The SS releases the RRC connection. |
| 42 | | SS | | The following messages are sent and shall be received on cell E.<br>Set the cell type of cell E to the "Serving cell".<br>Set the cell type of cell F to the "Non-Suitable cell".<br>(see note) |
| 43 | | SS | | Cell E is preferred by the UE. |
| 44 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 45 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| 46 | | SS | | The following messages are sent and shall be received on cell C.<br>Set the cell type of cell C to the "Serving cell".<br>Set the cell type of cell E to the "Non-Suitable cell".<br>(see note) |
| 47 | | SS | | Cell C is preferred by the UE. |
| 48 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 49 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| 50 | | SS | | The following messages are sent and shall be received on cell A.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 51 | | SS | | Cell A will be preferred by the UE. |
| 52 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 53 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Proc 4: Test procedure4

Initial condition

System Simulator:

Two cells, cell A in MCC2/MNC1/LAC1/RAC1 (not HPLMN, RAI-2) and cell B in MCC1/MNC1/LAC1/RAC1 (HPLMN, RAI-1).
Both cells are operating in network operation mode II (in case of UE operation mode A).

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-2.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

The SS rejects a PS attach with the cause value 'Roaming not allowed in this location area'. A second cell belonging to the HPLMN is activated. It is checked that the UE returns to its HPLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | If UE operation mode C is supported, the UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, the UE is set in UE operation mode A. |
| 2 | | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>(see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | | | Void | |
| 3b | | SS | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 4 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-2 |
| 5 | | <- | ATTACH REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 6 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| 6a | | SS | | The SS releases the RRC connection. |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 8 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A.<br>Parameter mobile identity is IMSI. |
| 9 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 9a | | SS | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 10 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 10a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 10b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 10c | | SS | | The SS starts integrity protection. |
| 11 | | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 12 | | -> | ATTACH COMPLETE | |
| 12a | | -> | | The SS releases the RRC connection. |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.2.1.5a.5 Test requirements

Test requirements for Test procedure1

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step6, when the UE receives the ATTACH REJECT message with GMM cause = 'Roaming not allowed in this location area', UE shall:

- not perform the PS attach procedure.

At step11, when the new location area is entered, UE shall:

- perform the PS attach procedure

At step19, when the rejected location area is entered, UE shall

- not perform PS attach procedure.

Test requirements for Test procedure2

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step5, after the UE receives the ATTACH REJECT message with GMM cause = 'Roaming not allowed in this location area', UE shall:

- not perform PS attach procedure.

At step9, when the UE is switched off or USIM is replaced, UE shall:

- perform the PS attach procedure.

Test requirements for Test procedure3

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step6, 13, 20, 27, 34 and 41, after the UE receives the ATTACH REJECT message with GMM cause = 'Roaming not allowed in this location area', UE shall:

- not perform PS attach procedure.

At step11, 18, 25, 32 and 39 , UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step45, 49 and 53, UE shall:

- not perform PS attach procedure.

Test requirements for Test procedure4

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step6, when the UE receives the ATTACH REJECT message with GMM cause = 'Roaming not allowed in this location area', UE shall:

- not perform PS attach procedure.

At step10, when a new location area is entered, UE shall:

- perform the PS attach procedure.

## 12.2.1.5b PS attach / rejected / No Suitable Cells In Location Area

### 12.2.1.5b.1 Definition

### 12.2.1.5b.2 Conformance requirement

(1) If the network rejects a PS attach procedure from the User Equipment with the cause 'No Suitable Cells In Location Area', the User Equipment shall:

1.1 not perform PS attach when in the same location area.

1.2 delete the stored RAI, PS-CKSN, P-TMSI and P-TMSI signature.

1.3 store the LA in the 'forbidden location areas for roaming' list.

1.4 not delete the list of "equivalent PLMNs".

1.5 perform PS attach when a new location area is entered.

#### Reference

3GPP TS 24.008 clauses 4.7.3.1.

### 12.2.1.5b.3 Test purpose

To test the behaviour of the UE if the network rejects the PS attach procedure of the UE with the cause 'No Suitable Cells In Location Area'.

### 12.2.1.5b.4 Method of test

#### Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4), cell C in MCC2/MNC1/LAC2/RAC1 (RAI-6)

All three cells are operating in network operation mode II.

The PLMN contains Cell C is equivalent to the PLMN that contains Cell A.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

Sintrasearch and Sintersearch values for cells A, B and C are 20 dB.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

#### Test procedure

The SS rejects a PS attach with the cause value 'No Suitable Cells In Location Area'. The SS checks that the UE shall search for a suitable cell in a different location area on the equivalent PLMN and shall perform PS attach procedure in that cell.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-suitable cell".<br>Set the cell type of cell C to the "Non-suitable cell".<br>(see note) |
| 3 | | | Void | |
| 3a | | SS | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Routing area identity = RAI-1<br>Equivalent PLMNs = MCC2,MNC1 |
| 6 | <- | | DETACH REQUEST | Detach type = re-attach required |
| 7 | -> | | DETACH ACCEPT | |
| 8 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>(see note)<br>The SS configures power level of each Cell as follows.<br>Cell A > Cell B = Cell C |
| 9 | | | Void | |
| 10 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 11 | <- | | ATTACH REJECT | GMM cause = 'No Suitable Cells In Location Area' |
| 12 | | SS | | The SS initiates the RRC connection release.<br>The following message are sent and shall be received on cell C. |
| 13 | UE | | Registration on CS | See TS 34.108 |
| 14 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 14a | | | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 15 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 16 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 17 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 18 | | SS | | The SS starts integrity protection. |
| 19 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-6<br>Equivalent PLMNs = MCC1,MNC1 |
| 20 | -> | | ATTACH COMPLETE | |

| | | | |
|---|---|---|---|
| 20a | SS | | The SS releases the RRC connection. |
| NOTE: | The definitions for "Suitable neighbour cell", "Non-suitable cell" and "Serving cell" are specified in TS 34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | |

Specific message contents

None.

12.2.1.5b.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step15, when the UE enters a suitable cell in a different location area on the equivalent PLMN, UE shall:

- perform the PS attach procedure.

## 12.2.1.5c PS attach / rejected / Location area not allowed

12.2.1.5c.1 Definition

12.2.1.5c.2 Conformance requirement

1) If the network rejects a PS attach procedure from the User Equipment with the cause 'Location area not allowed' the User Equipment shall:

   1.1 delete any RAI, P-TMSI, P-TMSI signature and PS ciphering key sequence number.

   1.2 set the PS update status to GU3 ROAMING NOT ALLOWED.

   1.3 reset the attach attempt counter.

   1.4 store the LAI in the list of "forbidden location areas for regional provision of service".

   1.1 perform a cell selection.

   1.2 not delete the list of "equivalent PLMNs".

2) If the network rejects a PS attach procedure from the User Equipment with the cause 'Location area not allowed' and if the User Equipment is IMSI attached via MM procedures the User Equipment shall:

   2.1 set the update status to U3 ROAMING NOT ALLOWED.

   2.2 delete any TMSI, LAI and ciphering key sequence number.

   2.3 reset the location update attempt counter.

Reference

3GPP TS 24.008 clause 4.7.3.1.

12.2.1.5c.3 Test purpose

To test the behaviour of the UE if the network rejects the PS attach procedure of the UE with the cause 'Location area not allowed'.

12.2.1.5c.4 Method of test

Initial condition

System Simulator:

Three cells cell A with MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell C in MCC2/MNC1/LAC2/RAC1 (RAI-6).
All three cells are operating in network operation mode II (in case of UE operation mode A).

The PLMN contains Cell C is equivalent to the PLMN that contains Cell A.

Sintrasearch and Sintersearch values for cells A, B and C are 20 dB.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1, RAI-1.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

The SS rejects a PS attach with the cause value 'Location area not allowed'. The SS checks that the UE does not perform MM IMSI attach while in the same location area and performs PS attach when a new equivalent PLMN is entered.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | If UE operation mode A is supported, If UE operation mode C is supported, the UE is set in UE operation mode A (see ICS). If UE operation mode A is not supported, the UE is set in UE operation mode C. |
| 2 | | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the " Non-suitable cell ".<br>Set the cell type of cell C to the " Non-suitable cell "<br>(see note) |
| 3 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A. |
| 3a | | SS | | SS checks that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Registration”. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1 |
| 4a | -> | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | <- | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Routing area identity = RAI-1<br>Equivalent PLMNs = MCC2,MNC1 |
| 6 | <- | | DETACH REQUEST | Detach type = re-attach required |
| 7 | -> | | DETACH ACCEPT | |
| 8 | | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the " Suitable neighbour cell ".<br>Set the cell type of cell C to the " Suitable neighbour cell "<br>(see note)<br>The SS configures power level of each Cell as follows.<br>Cell A > Cell B > Cell C |
| 9 | | | Void | |
| 10 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1 |
| 11 | <- | | ATTACH REJECT | GMM cause = 'Location area not allowed' |
| 11a | | SS | | The SS releases the RRC connection. |
| 12 | UE | | | The UE performs cell selection.<br>The following messages are sent and shall be received on cell C. |
| 12a | UE | | Registration on CS | See TS 34.108.<br>This is applied only for UE in UE operation mode A. |
| 12b | UE | | | SS checks that the IE “Establishment cause” in any received RRC CONNECTION REQUEST message is set to “Registration” |
| 13 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 14 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 15 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |

| | | | |
|---|---|---|---|
| 16 | SS | | The SS starts integrity protection. |
| 17 | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-6<br>Equivalent PLMNs = MCC1,MNC1 |
| 18 | -> | ATTACH COMPLETE | |
| 19 | UE | | No MM IMSI attach request sent to SS<br>(SS waits 30 seconds). |
| 19a | SS | | The SS releases the RRC connection. |
| NOTE: | The definitions for "Suitable neighbour cell", "Non-suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | |

Specific message contents

None.

12.2.1.5c.5 Test requirements

At step4 and 10, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step12, UE shall:

- perform cell selection.

At step13, UE shall:

- perform PS attach procedure with Mobile identity = IMSI.

At step19, UE shall:

- not perform MM IMSI attach

## 12.2.1.5d PS attach / rejected / PS services not allowed in this PLMN

12.2.1.5d.1 Definition

12.2.1.5d.2 Conformance requirement

1) If the network rejects a PS attach procedure from the User Equipment with the cause 'GPRS services not allowed in this PLMN' the User Equipment shall:

   1.1 delete any RAI, P-TMSI, P-TMSI signature and PS ciphering key sequence number.

   1.2 set the PS update status to GU3 ROAMING NOT ALLOWED.

   1.3 store the PLMN identity in the "forbidden PLMNs for PS service" list.

   1.4 perform a PLMN selection instead of a cell selection, if the UE is in UE operation mode C.

2) If the UE is in UE operation mode A or B and the network is in network operation mode II the User Equipment shall:

   2.1 be still IMSI attached for CS services in the network..

Reference

3GPP TS 24.008 clause 4.7.3.1.

12.2.1.5d.3 Test purpose

To test the behaviour of the UE if the network rejects the PS attach procedure of the UE with the cause 'GPRS services not allowed in this PLMN'.

12.2.1.5d.4 Method of test

Initial condition

System Simulator:

Three cells cell A with MCC1/MNC2/LAC1/RAC1 (RAI-8, Not HPLMN), cell B in MCC1/MNC2/LAC1/RAC2 (RAI-10, Not HPLMN), cell C in MCC2/MNC1/LAC1/RAC2 (RAI-7). All three cells are operating in network operation mode II (in case of UE operation mode A).

The PLMN contains Cell C is equivalent to the PLMN that contains Cell A.

Sintrasearch and Sintersearch values for cells A, B and C are 20 dB.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1, RAI-8.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a PS attach with the cause value 'GPRS services not allowed in this PLMN'. The SS checks that the UE performs PS attach with attach type = GPRS attach when a new equivalent PLMN is entered.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode A OR<br>The UE is set in UE operation mode C (see ICS). |
| 2 | | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the " Non-suitable cell ".<br>Set the cell type of cell C to the " Non-suitable cell "<br>(see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A.<br>Mobile identity = TMSI-1 |
| 5 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1 |
| 5a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 5b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5c | | SS | | The SS starts integrity protection. |
| 6 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>Routing area identity = RAI-8<br>Equivalent PLMNs = MCC2,MNC1 |
| 6a | -> | | ATTACH COMPLETE | |
| 7 | <- | | DETACH REQUEST | Detach type = re-attach required |
| 8 | -> | | DETACH ACCEPT | |
| 9 | | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the " Suitable neighbour cell ".<br>Set the cell type of cell C to the " Suitable neighbour cell "<br>(see note) |
| 10 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1 |
| 11 | <- | | ATTACH REJECT | GMM cause = 'GPRS services not allowed in this PLMN' |
| A12 | UE | | | If the UE is in UE Operation Mode C<br>The UE performs PLMN selection. |
| B12 | UE | | | If the UE is in Operation Mode A<br>The UE initiates an attach automatically, by MMI or by AT command. |
| B12a | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds).<br>The following messages are sent and shall be received on cell A. This verifies that a UE in operation mode A is still IMSI attached for CS services in cell A |
| B12a.1 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| B12a.2 | -> | | RRC CONNECTION REQUEST | |
| B12a.3 | <- | | RRC CONNECTION SETUP | |
| B12a.4 | -> | | RRC CONNECTION SETUP COMPLETE | |
| B12a.5 | -> | | PAGING RESPONSE | |
| B12a.6 | | SS | | The SS releases the RRC connection |

| | | | |
|---|---|---|---|
| B12b | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the " Suitable neighbour cell ".<br>Set the cell type of cell B to the " Suitable neighbour cell ".<br>Set the cell type of cell C to the " Serving cell " (see note)<br>The following messages are sent and shall be received on cell C. |
| B12c | | Registration on CS | Only performed if UE is set to operation mode A. |
| 13 | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 14 | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 15 | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 16 | SS | | The SS starts integrity protection. |
| 17 | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-7<br>Equivalent PLMNs = MCC1,MNC1 |
| 18 | -> | ATTACH COMPLETE | |
| 19 | | Void | |
| NOTE: | The definitions for "Suitable neighbour cell", "Non-suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | |

Specific message contents

None.

#### 12.2.1.5d.5 Test requirements

At step5 and 10, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step A12, UE shall:

- perform PLMN selection, only if the UE is in UE Operation Mode C.

At step13, UE shall:

- in case of operation mode C, perform PS attach procedure with Mobile identity = IMSI to the equivalent cell.
- in case of operation mode A, perform PS attach procedure and CS registration procedure (at step B12c)

At step B12a.1 UE shall:

- respond the Paging for CS domain service on cell A.

### 12.2.1.6 PS attach / abnormal cases / access barred due to access class control

#### 12.2.1.6.1 Definition

#### 12.2.1.6.2 Conformance requirement

1) The UE shall not perform PS attach procedure, but stays in the current serving cell and applies normal cell reselection process.

2) The User Equipment shall perform the PS attach procedure when:

   2.1 Access is granted.

   2.2 Cell is changed.

Reference

3GPP TS 24.008 clause 4.7.3.1.

12.2.1.6.3 Test purpose

Test purpose1

To test the behaviour of the UE in case of access class control (access is granted).

Test purpose2

To test the behaviour of the UE in case of access class control (Cell is changed).

12.2.1.6.4 Method of test

Proc 1: Test procedure1

Initial condition

An access class x (0-15) is arbitrarily chosen. The USIM is programmed with this access class x. Communication with User Equipments using access class x is initially indicated to be barred.

System Simulator:

One cell operating in network operation mode II.
Access class x barred.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode C Yes/No

UE operation mode A Yes/No

Switch off on button Yes/No

Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS indicates access class x barred. A PS attach procedure is not performed.

The SS indicates that access class x is not barred. A PS attach procedure is performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The USIM is programmed with access class x. |
| 2 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 12. |
| 3 | UE | | | The UE is powered up or switched on and attempts to initiate an attach (see ICS). |
| 4 | UE | | | No ATTACH REQUEST sent to SS, as access class x is barred (SS waits 30 seconds). |
| 5 | SS | | | The access class x is not barred anymore. |
| 6 | UE | | | The UE initiates a PS attach either automatically or manually (see ICS). |
| 7 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 7a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 7b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 7c | SS | | | The SS starts integrity protection. |
| 8 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 9 | -> | | ATTACH COMPLETE | |
| 10 | UE | | | The UE is switched off or power is removed (see ICS). |
| 11 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS detach' |
| 11a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 12 | SS | | | The SS is set in network operation mode II. |
| 13 | UE | | | The UE is set in UE operation mode A(see ICS) and the test is repeated from step 3 to step 11. |

Proc 2: Test procedure2

Initial condition

An access class x (0-15) is arbitrarily chosen. The USIM is programmed with this access class x. Communication with User Equipments using access class x is indicated to be barred on cell A.

System Simulator:

Two cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) has access class x barred, cell B in MCC1/MNC1/LAC1/RAC1 (RAI-1) has access class x not barred.
Both cells are operating in network operation mode II (in case of UE operation mode A).
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode C Yes/No

UE operation mode A Yes/No

Switch off on button Yes/No

Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS indicates access class x barred. A PS attach procedure is not performed.

A cell change is performed into a cell where access class x is not barred. A PS attach procedure is performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The USIM is programmed with access class x. |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 2 | | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>(see note) |
| 3 | UE | | | The UE is set in UE operation mode C (see ICS). |
| 4 | UE | | | The UE is powered up or switched on and attempts to initiate an attach (see ICS). |
| 5 | UE | | | No ATTACH REQUEST sent to SS, as access class x is barred<br>(SS waits 30 seconds). |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7 | UE | | | The UE initiates an attach either automatically or manually (see ICS). |
| 8 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 8a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 8b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 8c | | SS | | The SS starts integrity protection. |
| 9 | | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 10 | | -> | ATTACH COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.2.1.6.5 Test requirements

Test requirements for Test procedure1

At step4, when the UE access class x is barred, UE shall:

- not perform a PS attach procedure.

At step7, when the UE access class x is granted, UE shall:

initiate the PS attach procedure.

Test requirements for Test procedure2

At step5, when the UE access class x is barred, UE shall:

- not perform a PS attach procedure.

At step8, when the serving cell is changed, UE shall:

- initiate the PS attach procedure.

### 12.2.1.7 PS attach / abnormal cases / change of routing area

#### 12.2.1.7.1 Definition

#### 12.2.1.7.2 Conformance requirement

If a cell change into a new routing area occurs before an ATTACH ACCEPT or ATTACH REJECT message has been received, the GPRS attach procedure shall be aborted and re-initiated immediately.

Reference

3GPP TS 24.008 clause 4.7.3.1.

#### 12.2.1.7.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

#### 12.2.1.7.4 Method of test

Initial condition

System Simulator:

One cell with MCC1/MNC1/LAC1/RAC1 (RAI-1)
The cell is operating in network operation mode II (in case of UE operation mode A).
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode C Yes/No

UE operation mode A Yes/No (only if mode C not supported)

Switch off on button Yes/No

Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE initiates a PS attach procedure. The ATTACH ACCEPT message is delayed from the SS. The UE receive a new routing area code. The UE shall re-initiate a PS attach procedure in the new routing area.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). |
| 2 | | SS | | The SS is set in network operation mode II. Set the cell type of cell A to the "Serving cell". (see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 5 | | SS | | No response to the ATTACH REQUEST message is given by the SS. |
| 6 | | | Void | |
| 6a | <- | | UTRAN MOBILITY INFORMATION | The SS conveys updated CN system information for the PS domain to the UE in connected mode, including a new routing area code.<br>Note: SS transmits the updated system information with the new RAI information in SIB1 |
| 6b | -> | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 7 | UE | | | The UE automatically re-initiates the attach. |
| 8 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 8a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 8b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 8c | | SS | | The SS starts integrity protection. |
| 9 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Attach result = 'GPRS only attached'<br>Routing area identity = RAI-4 |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

UTRAN MOBILITY INFORMATION (step 6a)

The contents of the UTRAN MOBILITY INFORMATION message in this test case is identical to the default message in TS 34.108, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| New U-RNTI | Not Present |
| New C-RNTI | Not Present |
| UE Timers and constants in connected mode | Not Present |
| CN information info | |
| - PLMN identity | Not Present |
| - CN common GSM-MAP NAS system information | Not Present |
| - CN domain related information | |
| - CN domain identity | CS domain |
| - CN domain specific GSM-MAP NAS system info | |
| - T3212 | Infinity |
| - ATT | 0 |
| - CN domain specific DRX cycle length coefficient | 7 |
| - CN domain related information | |
| - CN domain identity | PS domain |
| - CN domain specific GSM-MAP NAS system info | |
| - RAC | RAC-2 |
| - NMO | 1 (Network Mode of Operation II) |
| - CN domain specific DRX cycle length coefficient | 7 |

#### 12.2.1.7.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected sequence.

At step8, as the UE has received a new RAI in the UTRAN MOBILITY INFORMATION message before the ATTACH ACCEPT message or the ATTACH REJECT message is received by the UE, the UE shall:

- abort the PS attach procedure and re-initiate the PS attach procedure immediately with new information elements.

### 12.2.1.8 PS attach / abnormal cases / power off

#### 12.2.1.8.1 Definition

#### 12.2.1.8.2 Conformance requirement

When power is switched off before ATTACH ACCEPT message is received by the UE, the UE shall abort the PS attach procedure and perform a PS detach procedure.

Reference

3GPP TS 24.008 clause 4.7.3.

#### 12.2.1.8.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

#### 12.2.1.8.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No

Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE is switched off after initiating an attach procedure. A PS detach is automatically performed by the UE before power is switched off.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 7. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Routing area identity = RAI-1 |
| 4 | SS | | | No response to the ATTACH REQUEST message is given by the SS. |
| 5 | UE | | | The UE is powered off and initiates a PS detach (with power off) by |
| 6 | -> | | DETACH REQUEST | Detach type = 'power switched off, GPRS detach' |
| 7 | UE | | | The UE is set in UE operation mode A (see ICS) and the test is repeated from step 2 to step 6. |

Specific message contents

None.

12.2.1.8.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step6, when power is switched off before ATTACH ACCEPT message is received, UE shall:

- abort the PS attach procedure and perform the PS detach procedure.

## 12.2.1.9 PS attach / abnormal cases / PS detach procedure collision

12.2.1.9.1 Definition

12.2.1.9.2 Conformance requirement

1) When a DETACH REQUEST message is received by the UE (any cause except re-attach) while waiting for an ATTACH ACCEPT message, the UE shall terminate the PS attach procedure and continue with the PS detach procedure.

2) When a DETACH REQUEST message is received by the UE (cause re-attach) while waiting for an ATTACH ACCEPT message, the UE shall ignore the PS detach procedure and continue with the PS attach procedure.

Reference

3GPP TS 24.008 clause 4.7.3.1.

12.2.1.9.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

12.2.1.9.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE initiates a PS attach procedure. The SS does not answer the PS attach procedure, but initiates a PS detach procedure (any cause except re-attach). The UE shall terminate the PS attach procedure and continue with the PS detach procedure**.**

The UE initiates a PS attach procedure. The SS does not answer the PS attach procedure, but initiates a PS detach procedure (cause re-attach). The UE shall ignore the PS detach procedure and continue with the PS attach.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4 | SS | | | The SS ignores the ATTACH REQUEST message and initiates a detach procedure. |
| 5 | <- | | DETACH REQUEST | Detach type = 're-attach not required' |
| 6 | -> | | DETACH ACCEPT | |
| 7 | UE | | | The UE initiates the attach procedure by MMI or AT command. |
| 8 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 9 | SS | | | The SS ignores the ATTACH REQUEST message and initiates a detach procedure. |
| 10 | <- | | DETACH REQUEST | Detach type = 're-attach required' |
| 11 | UE | | | The UE ignores the DETACH REQUEST message and continue with the attach procedure. |
| 12 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 13 | -> | | ATTACH COMPLETE | |

Specific message contents

None.

12.2.1.9.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

UE shall perform the following actions depending on the Detach type in the DETACH REQUEST message.

Case1) Detach type = 're-attach not required' GMM cause is not re-attach

At step6, when the DETACH REQUEST message is received by the UE while waiting for an ATTACH ACCEPT message, UE shall:

- terminate the PS attach procedure and continue with the PS detach procedure.

Case2) Detach type = 're-attach required'

At step11, when the DETACH REQUEST message is received by the UE while waiting for an ATTACH ACCEPT message, UE shall:

- ignore the PS detach procedure and continue with the PS attach procedure.

## 12.2.1.10 PS attach / abnormal cases / Failure due to non-integrity protection

12.2.1.10.1 Definition

12.2.1.10.2 Conformance requirement

Except the messages listed below, no layer 3 signalling messages shall be processed by the receiving MM and GMM entities or forwarded to the CM entities, unless the security mode control procedure is activated for that domain.

- GMM messages:
  - AUTHENTICATION & CIPHERING REQUEST
  - AUTHENTICATION & CIPHERING REJECT
  - IDENTITY REQUEST
  - ATTACH REJECT
  - ROUTING AREA UPDATE ACCEPT (at periodic routing area update with no change of routing area or temporary identity)
  - ROUTING AREA UPDATE REJECT
  - SERVICE REJECT
  - DETACH ACCEPT (for non power-off)

Reference(s):

3GPP TS 24.008 clause 4.1.1.1.1

12.2.1.10.3 Test purpose

To verify that the UE ignores NAS signalling messages when the security mode procedure is not activated.

12.2.1.10.4 Method of test

Initial Conditions

System Simulator:

One cell operating in network operation mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

### Related ICS Statements

| | |
|---|---|
| Support of PS service | Yes/No |
| UE operation mode A | Yes/No |
| Switch off on button | Yes/No |

### Test procedure

The attach procedure is initiated. Upon reception of ATTACH REQUEST message from the UE, the SS responds with an ATTACH ACCEPT message without the integrity protection. The UE shall ignore this message and re-transmit ATTACH REQUEST message at expiry of timer T3310.

This time the SS starts the authentication procedure and initiates the integrity protection. After receiving ATTACH ACCEPT message, the UE shall respond to ATTACH COMPLETE message.

### Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach procedure (see ICS). |
| 3 | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 5 | <- | | AUTHENTICATION AND CIPHERING REQUEST | Request authentication.<br>Set PS-CKSN |
| 6 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | RES |
| 7 | SS | | | The SS does not initiate the security mode procedure. |
| 8 | <- | | ATTACH ACCEPT | |
| 9 | UE | | | The UE ignores ATTACH ACCEPT message. |
| 10 | SS | | | The SS waits until the UE sends a new ATTACH REQUEST message in step 11. |
| 11 | -> | | ATTACH REQUEST | The UE re-transmits the message.<br>The SS verifies that this ATTACH REQUEST message is sent by the UE after the expiry of T3310 (15 sec). The period of time to check is either between the ATTACH REQUEST messages or between the RRC CONNECTION REQUEST message and the second ATTACH REQUEST message.<br>Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 12 | <- | | AUTHENTICATION AND CIPHERING REQUEST | Request authentication.<br>Set PS-CKSN |
| 13 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | RES |
| 14 | SS | | | The SS starts integrity protection. |
| 15 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI |
| 16 | -> | | ATTACH COMPLETE | |

Specific Message Contents

None.

12.2.1.10.5 Test requirements

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step9, UE shall;

- ignore the first ATTACH ACCEPT message.

At step11, UE shall;

- re-transmit ATTACH REQUEST message after expiry of timer T3310.

At step16, UE shall;

- respond to ATTACH COMPLETE message after the UE receives the second ATTACH ACCEPT message.

## 12.2.1.11 PS attach / accepted / follow-on request pending indicator set

### 12.2.1.11.1 Definition and applicability

UE which supports follow-on request procedure.

### 12.2.1.11.2 Conformance requirement

1) In UMTS, if the MS wishes to prolong the established PS signalling connection after the GPRS attach procedure, it may set a follow-on request pending indicator on.

2) In UMTS, the network should prolong the PS signalling connection if the mobile station has indicated a follow-on request pending in ATTACH REQUEST. The network may also prolong the PS signalling connection without any indication from the mobile terminal.

Reference

3GPP TS 24.008 clause 4.7.3.1.1 and 4.7.3.1.3

### 12.2.1.11.3 Test purpose

To test the behaviour of the UE if the follow-on request pending indicator can be set on during the attach procedure.

The following cases are identified:

1) follow-on request pending indicator may be set to indicate further signalling messages from the UE

2) follow-on request pending indicator not set, no further signalling messages expected from the UE

### 12.2.1.11.4 Method of test

Initial condition

System Simulator:

1 cell, operating in network operation mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A).

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No

Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
Method of context activation

Support of Follow On Proceed Yes/No

Test procedure

1) The UE is attached, then the Detach Request is originated from the UE indicating "GPRS detach without switching off". The SS responds with a Detach Accept after completing the security mode procedures. A PDP context activation is then requested by the user. The PS attach (ATTACH REQUEST) is then indirectly caused by a requested PDP context activation. UE shall set the Follow-ON Request bit to 1 in the ATTACH REQUEST message. The SS returns the ATTACH ACCEPT message to the UE. Now session management can proceed with PDP context activation. On receipt of the ACTIVATE PDP CONTEXT REQUEST message an ACTIVATE PDP CONTEXT ACCEPT is returned by the SS with the same requested QoS to finish the PC call establishment. The SS releases the RRC connection and the UE is switched off.

2) The UE is switched on and initiates PS attach (ATTACH REQUEST). UE shall set the Follow-ON Request bit to 0 in the ATTACH REQUEST message. The SS returns the ATTACH ACCEPT message to the UE. The SS verifies UE does not sent any messages on the PS Signalling Connection for 10 seconds. SS releases the RRC connection..

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 0 | UE | | | Detach is performed by the UE using MMI or AT Commands |
| 1 | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Detach". |
| 2 | → | | DETACH REQUEST | |
| 3 | | SS | | The SS starts integrity protection. |
| 4 | ← | | DETACH ACCEPT | SS sends Detach Accept message. |
| 5 | | SS | | The SS releases the RRC connection. |
| 6 | UE | | | Initiate a context activation |
| 7 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 8 | → | | ATTACH REQUEST | The UE requests attach. UE shall set the FOR bit to 1 |
| 9 | | SS | | The SS starts integrity protection. |
| 10 | ← | | ATTACH ACCEPT | The SS accepts attach<br>Negotiated Ready timer value IE should not be included<br>Force to standby IE set to “Force to standby not indicated” |
| 11 | → | | ACTIVATE PDP CONTEXT REQUEST | The UE requests a PDP context activation (with static PDP address), enters the state PDP-ACTIVE-PENDING and starts timer T3380 |
| 12 | | SS | | The SS establishes the RAB. |
| 13 | ← | | ACTIVATE PDP CONTEXT ACCEPT | The SS accepts the PDP context activation. |
| 14 | | SS | | The SS releases the RRC connection due to inactivity (no user data transferred) |
| 15 | UE | | | The UE is switched off or power is removed (see ICS). |
| 16 | | SS | | SS checks that the IE "Establishment cause" in any received RRC CONNECTION REQUEST message is set to "Detach" (message not sent if power is removed). |
| 17 | -> | | DETACH REQUEST | Message not sent if power is removed. Detach type = 'power switched off, GPRS detach' |
| 18 | | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 19 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 20 | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 21 | -> | | ATTACH REQUEST | The UE requests attach. The UE shall set the FOR bit to 0. |
| 22 | | | AUTHENTICATION AND CIPHERING REQUEST | |
| 23 | | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 24 | | SS | | The SS starts integrity protection. |

| | | | |
|---|---|---|---|
| 25 | <- | ATTACH ACCEPT | The SS accepts attach<br>Negotiated Ready timer value IE should not be included<br>Force to standby IE set to “Force to standby not indicated” |
| 26 | | | The SS does not respond and waits for the time of 10 seconds. No further messages are expected from the UE on the current PS Signalling Connection. |
| 27 | SS | | The SS releases the RRC connection |

Specific message contents

None.

12.2.1.11.5 Test requirements

At step 8 the UE shall send an ATTACH REQUEST with FOR bit set to 1

At step 21 the UE shall send an ATTACH REQUEST with FOR bit set to 0.

## 12.2.1.12 PS attach / abnormal cases / access barred due to domain specific access restriction for PS domain

12.2.1.12.1 Definition

This test case is applicable for Rel-5 UEs supporting DSAC and Rel-6 or later UEs.

12.2.1.12.2 Conformance requirement

TS24.008 4.1.1.2.2

> If the PS or CS domain is barred because of domain specific access control, a GPRS MS operating in mode A or B in a network that operates in mode II or III shall use the MM specific procedures or GMM specific procedures, respectively, in the domain which is unbarred. If the MS detects that a domain changes from barred to unbarred, it shall behave as specified in subclauses 4.4.4.9, 4.5.1.2, 4.7.3.1.5, 4.7.5.1.5, and 4.7.13.5.

TS24.008 4.7.3.1.5

a) Access barred because of common access class control or PS domain specific access control

> The GPRS attach procedure shall not be started. The MS stays in the current serving cell and applies normal cell reselection process. The GPRS attach procedure is started as soon as possible, i.e. when access is granted or because of a cell change.

Reference

3GPP TS 24.008 clause 4.1.1.2.2, 4.7.3.1.5

12.2.1.12.3 Test purpose

Test purpose

To test the behaviour of the UE in case of domain specific access control for PS domain.

12.2.1.12.4 Method of test

Initial condition

An access class x (0-15) is arbitrarily chosen. The USIM is programmed with this access class x.
The SS informs the UE that the PS domain specific access class x is barred in the cell.

System Simulator:

> One cell operating in network operation mode II.
> PS domain specific access class x is barred.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No Support of DSAC Yes/No

Test procedure

The SS indicates that PS domain access class x is barred. A PS attach procedure is not performed.
The SS indicates that PS domain access class x is not barred. A PS attach procedure is performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The USIM is programmed with access class x. |
| 2 | UE | | | The UE is set in UE operation mode A or C (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and attempts to initiate an attach (see ICS). |
| 4 | UE | | | No ATTACH REQUEST sent to the SS as PS domain access class x is barred.<br>The SS waits 30 seconds. |
| 5 | SS | | | PS domain access class x is not barred anymore. |
| 6 | UE | | | The UE initiates a PS attach either automatically or manually (see ICS). |
| 7 | SS | | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 8 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 9 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 10 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 11 | SS | | | The SS starts an integrity protection. |
| 12 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 13 | -> | | ATTACH COMPLETE | |
| 14 | SS | | | The SS releases the RRC connection. |

Specific message contents

None.

12.2.1.12.5 Test requirements

At step4, when the SS indicates that PS domain specific access class x is barred, the UE shall:

- not perform a PS attach procedure.

At step7, when the SS indicates that PS domain specific access class x is not barred, the UE shall:

- initiate the PS attach procedure.

## 12.2.2 Combined PS attach

### 12.2.2.1 Combined PS attach / PS and non-PS attach accepted

#### 12.2.2.1.1 Definition

#### 12.2.2.1.2 Conformance requirement

1) If the network accepts the combined PS attach procedure (signalled by an IMSI) and allocates a P-TMSI, the UE shall acknowledge the P-TMSI and continue communication with the P-TMSI.

2) If the network accepts the combined PS attach procedure (signalled by P-TMSI) and reallocates a new P-TMSI, the UE shall acknowledge the new P-TMSI and continue communication with the new P-TMSI.

3) If the network accepts the combined PS attach procedure (signalled by a P-TMSI) from the UE without reallocation of the previously used P-TMSI, the UE shall continue communication with the previously used P-TMSI.

4) If the network accepts the combined PS attach procedure and determines that IMSI shall be used in CS operations, the UE shall continue communication with the IMSI for CS operations.

5) If the network accepts the combined PS attach procedure and determines that a TMSI shall be used in CS operations, the UE shall continue communication with the TMSI for CS operations.

Reference

3GPP TS 24.008 clause 4.7.3.2.

#### 12.2.2.1.3 Test purpose

To test the behaviour of the UE if the network accepts the PS attach procedure.

The following cases are identified:

1) P-TMSI / P-TMSI signature is allocated;

2) P-TMSI / P-TMSI signature is reallocated;

3) Old P-TMSI / P-TMSI signature is not changed;

4) Mobile terminating CS call is allowed with IMSI;

5) Mobile terminating CS call is not allowed with TMSI.

#### 12.2.2.1.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode I. ATT flag is set to 0.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

1) The UE sends an ATTACH REQUEST message with identity IMSI. The SS allocates a P-TMSI and returns ATTACH ACCEPT message with a P-TMSI. The UE acknowledge the P-TMSI by sending ATTACH COMPLETE message. Further communication UE - SS is performed by the new P-TMSI. For CS calls, the IMSI is used.

2) The UE is CS paged in order to verify that the IMSI is used for CS calls.

3) The UE is PS paged in order to verify that the new P-TMSI is used for PS services.

4) The UE sends an ATTACH REQUEST message with identity P-TMSI. The SS allocates a new P-TMSI and returns ATTACH ACCEPT message with the new P-TMSI and a new TMSI. The UE acknowledge the P-TMSI and the TMSI by sending ATTACH COMPLETE message. Further communication UE - SS is performed by the new P-TMSI. For CS calls, the new TMSI is used. The UE is CS paged in order to verify that the new TMSI is used for CS services.

5) The UE is PS paged in order to verify that the new P-TMSI is used for PS services. The UE will not answer signalling addressed to the old P-TMSI.

6) The UE sends an ATTACH REQUEST message with identity P-TMSI. The SS accepts the P-TMSI and returns ATTACH ACCEPT message without any P-TMSI. Further communication UE - SS is performed by the previously used P-TMSI.

7) The UE is PS paged in order to verify that the previously used P-TMSI is used for PS services.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity =IMSI<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | SS | | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 6 | <- | | PAGING TYPE1 | Mobile identity = IMSI<br>Paging order is for CS services.<br>Paging cause = "Terminating conversational call" |
| 7 | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating conversational call". |
| 8 | | | Void | |
| 9 | | | Void | |
| 10 | -> | | PAGING RESPONSE | Mobile identity = IMSI |
| 11 | SS | | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 12 | | | Void | |
| 13 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging for PS services<br>Paging cause = "Terminating interactive call" |
| 13a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call". |
| 13b | | | Void | |
| 13c | | | Void | |
| 14 | -> | | SERVICE REQUEST | service type = "paging response" |
| 14aa | SS | | | The SS starts integrity protection. |
| 14a | SS | | | The SS releases the RRC connection. |
| 14b | | | Void | |
| 15 | UE | | | The UE is switched off or power is removed (see ICS). |
| 15a | SS | | | SS checks that the IE "Establishment cause" in any received RRC CONNECTION REQUEST message is set to "Detach". |
| 16 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, combined GPRS / IMSI detach' |
| 16a | SS | | | If the power was not removed, the SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off . |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 17 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 17a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 18 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>TMSI status = no valid TMSI available<br>Old Routing area identity = RAI-1 |
| 18a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 18b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 18c | | SS | | The SS starts integrity protection. |
| 19 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-1 |
| 20 | -> | | ATTACH COMPLETE | |
| 21 | | | Void | |
| 21b | | | Void | |
| 21c | | SS | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 22 | <- | | PAGING TYPE 1 | Mobile identity = TMSI-1<br>Paging order is for CS services.<br>Paging cause = "Terminating conversational call" |
| 23 | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating conversational call". |
| 24 | | | Void | |
| 25 | | | Void | |
| 26 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 27 | | SS | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 28 | | | Void | |
| 29 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging for PS services<br>Paging cause = "Terminating interactive call" |
| 29a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call". |
| 29b | | | Void | |
| 29c | | | Void | |
| 30 | -> | | SERVICE REQUEST | service type = "paging response" |
| 30aa | | | Void | |
| 30a | | SS | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 30b | | | Void | |
| 31 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging for PS services<br>Paging cause = "Terminating interactive call" |
| 32 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 33 | UE | | | The UE is switched off or power is removed (see ICS). |
| 33a | | SS | | SS checks that the IE "Establishment cause" in any received RRC CONNECTION REQUEST message is set to "Detach". |
| 34 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, combined GPRS / IMSI detach' |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 34a | | SS | | If the power was not removed, the SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off . |
| 35 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 35a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 36 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-2<br>Old Routing area identity = RAI-1<br>TMSI status = valid TMSI available or IE not present |
| 36a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 36b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 36c | | SS | | The SS starts integrity protection. |
| 37 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>TMSI and P-TMSI not included.<br>Attach result = 'Combined GPRS/IMSI attached'<br>P-TMSI-3 signature<br>Routing area identity = RAI-1 |
| 37a | | SS | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 38 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging for PS services<br>Paging cause = "Terminating interactive call" |
| 38a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call". |
| 38b | | | Void | |
| 38c | | | Void | |
| 39 | -> | | SERVICE REQUEST | service type = "paging response" |
| 39aa | | | Void | |
| 39a | | SS | | The SS releases the RRC connection. |
| 39b | | | Void | |

Specific message contents

None.

12.2.2.1.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

Case 1) SS accept the combined PS attach procedure (signalled by an IMSI) and allocates a P-TMSI.

At step5, UE shall

- send the ATTACH COMPLETE message.

At step10, when the UE receives the paging message for CS domain with Mobile identity = IMSI, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step14, when the UE receives the paging message for PS domain with Mobile identity = P-TMSI-1, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

Case 2) SS accepts the combined PS attach procedure (signalled by P-TMSI) and reallocates a new P-TMSI and TMSI.

At step20, UE shall:

- send the ATTACH COMPLETE message.

At step26, when the UE receives the paging message for CS domain with Mobile identity = TMSI, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step30, when the UE receives the paging message for PS domain with Mobile identity = P-TMSI-2, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

Case 3) SS accepts the combined PS attach procedure (signalled by a P-TMSI) from the UE without reallocation of the previously used P-TMSI.

At step39, when the UE receives the paging message for PS domain with Mobile identity = P-TMSI-2, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

### 12.2.2.2 Combined PS attach / PS only attach accepted

#### 12.2.2.2.1 Definition

#### 12.2.2.2.2 Conformance requirement

1) If the network accepts the combined PS attach procedure, but GMM cause code 'IMSI unknown in HLR' is sent to the UE the User Equipment shall delete the stored TMSI, LAI and CKSN. The User Equipment shall consider USIM invalid for non-PS services until power is switched off or USIM is removed.

2) If the network accepts the combined PS attach procedure, but GMM cause code 'MSC temporarily not reachable', 'Network failure' or 'Congestion' is sent to the UE, an UE operation mode A UE may perform an MM IMSI attach procedure.

Reference

3GPP TS 24.008 clause 4.7.3.2.

#### 12.2.2.2.3 Test purpose

Test purpose 1

To test the behaviour of the UE if the network accepts the PS attach procedure with indication PS only, GMM cause 'IMSI unknown in HLR'.

Test purpose 2

To test the behaviour of the UE which does not support an automatic MM IMSI attach if the network accepts the PS attach procedure with indication PS only, GMM cause 'MSC temporarily not reachable', 'Network failure' or 'Congestion'.

Test purpose 3

To test the behaviour of the UE which supports an automatic MM IMSI attach if the network accepts the PS attach procedure with indication PS only, GMM cause 'MSC temporarily not reachable', 'Network failure' or 'Congestion'.

#### 12.2.2.2.4 Method of test

Proc 1: Test procedure 1

Initial condition

System Simulator:

One cell operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE sends an ATTACH REQUEST message with identity IMSI. The SS allocates a P-TMSI and returns ATTACH ACCEPT message with a P-TMSI. GMM cause 'IMSI unknown in HLR' is indicated from SS. Further communication UE - SS is performed by the P-TMSI. CS services are not possible.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br><br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>GMM cause = 'IMSI unknown in HLR'<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | <- | | PAGING TYPE1 | Mobile identity = IMSI<br>Paging order is for CS services. |
| 7 | UE | | | The UE shall not initiate an RRC connection.<br>This is checked during 3 seconds. |

Proc 2: Test procedure 2

Initial condition

System Simulator:

One cell operating in network operation mode I. T3212 and T3302 is set to 6 minutes.

User Equipment:

The UE has a valid TMSI, P-TMSI and RAI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE sends an ATTACH REQUEST message. The SS allocates a P-TMSI and returns ATTACH ACCEPT message with a P-TMSI. GMM cause 'MSC temporarily not reachable', 'Network failure' or 'Congestion' is indicated from SS.

The cause code is arbitrarily chosen. The UE sends a ROUTING AREA UPDATE REQUEST message. The SS returns a ROUTING AREA UPDATE ACCEPT message. GMM cause 'MSC temporarily not reachable', 'Network failure' or 'Congestion' is indicated from SS. The cause code is arbitrarily chosen. The ROUTING AREA UPDATE procedure is repeated four times. An UE operation mode A UE may then perform an MM IMSI attach procedure (according to the ICS statement). Further communication UE - SS is performed by the P-TMSI. The existence of a signalling channel is verified by a request for mobile identity.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A and no automatic MM IMSI attach procedure is indicated (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =P-TMSI-1<br>Old Routing area identity = RAI-1<br>TMSI status = valid TMSI available or IE is omitted |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br><br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 5 | -> | | ATTACH COMPLETE | |
| 7 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA / LA updating with IMSI attach'<br>Old P-TMSI signature =P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 8 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-3 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 10 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA / LA updating with IMSI attach'<br>Old P-TMSI signature =P-TMSI-3 signature<br>Old Routing area identity = RAI-1 |
| 11 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-4 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 12 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA / LA updating with IMSI attach'<br>Old P-TMSI signature =P-TMSI-4 signature<br>Old Routing area identity = RAI-1 |
| 13 | SS | | | The SS verifies that the time between the previous routing area update accept and routing area update request is T3311. |
| 14 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-5 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 16 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA / LA updating with IMSI attach'<br>Old P-TMSI signature =P-TMSI-5 signature<br>Old Routing area identity = RAI-1 |
| 17 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-6 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 18-20 | | | (void) | |

Proc 3: Test procedure 3

Initial condition

System Simulator:

One cell operating in network operation mode I. T3212 and T3302 is set to 6 minutes.

User Equipment:

The UE has a valid TMSI, P-TMSI and RAI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No

Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE sends an ATTACH REQUEST message. The SS allocates a P-TMSI and returns ATTACH ACCEPT message with a P-TMSI. GMM cause 'MSC temporarily not reachable', 'Network failure' or 'Congestion' is indicated from SS. The cause code is arbitrarily chosen. The UE sends a ROUTING AREA UPDATE REQUEST message. The SS returns a ROUTING AREA UPDATE ACCEPT message. GMM cause 'MSC temporarily not reachable', 'Network failure' or 'Congestion' is indicated from SS. The cause code is arbitrarily chosen. The ROUTING AREA UPDATE procedure is repeated four times. An UE operation mode A UE may then perform an MM IMSI attach procedure (according to the ICS statement). Further communication UE - SS is performed by the P-TMSI. The existence of a signalling channel is verified by a request for mobile identity.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | Automatic MM IMSI attach procedure is indicated (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1<br>TMSI status = valid TMSI available or IE is omitted |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Attach result = 'GPRS only attached'<br>P-TMSI-2 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 5 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA / LA updating with IMSI attach'<br>Old P-TMSI signature =P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 6 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-3 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 7 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA / LA updating with IMSI attach'<br>Old P-TMSI signature =P-TMSI-3 signature<br>Old Routing area identity = RAI-1 |
| 8 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-4 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA / LA updating with IMSI attach'<br>Old P-TMSI signature =P-TMSI-4 signature<br>Old Routing area identity = RAI-1 |
| 10 | SS | | | The SS verifies that the time between the previous routing area update accept and routing area update request is T3311. |
| 11 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-5 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 12 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA / LA updating with IMSI attach'<br>Old P-TMSI signature =P-TMSI-5 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 13 | SS | | | The SS verifies that the time between the previous routing area update accept and routing area update request is T3311. |
| 14 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-6 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 15 | UE | | | An automatic MM IMSI attach procedure is initiated. |
| 16 | UE | | Registration on CS | Optional step.<br>See TS 34.108<br>This is applied only for UE in UE operation mode A.<br>Parameter mobile identity is TMSI<br>Steps 4917 - 5523 are only performed if the UE has performed the Registration Procedure in step 4116. |
| 17 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 18 | -> | | RRC CONNECTION REQUEST | |
| 19 | <- | | RRC CONNECTION SETUP | |
| 20 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 21 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 22 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 23 | -> | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

12.2.2.2.5 Test requirements

Test requirements for Test porpose1

At step3, when the UE is powered up or switched on, UE shall:

- initiate the Combined PS attach procedure with information elements specified in the above Expected Sequence.

At step7, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

Test requirements for Test porpose2

At step3, when the UE is powered up or switched on, UE shall:

- initiate the Combined PS attach procedure with information elements specified in the above Expected Sequence.

At step7, 10, 12 and 16, when the routing area updating attempt counter is less than 5 and the stored RAI is equal to the RAI of the current serving cell, UE shall:

- perform the combined routing area update procedure indicating "combined RA/LA updating with IMSI attach".

Test requirements for Test porpose3

At step3, when the UE is powered up or switched on, UE shall:

- initiate the Combined PS attach procedure with information elements specified in the above Expected Sequence.

At step5, 7, 9 and 11, when the routing area updating attempt counter is less than 5 and the stored RAI is equal to the RAI of the current serving cell, UE shall:

- perform the combined routing area update procedure indicating "combined RA/LA updating with IMSI attach".

At step16, UE shall:

- perform MM location updating procedure.

At step21, UE shall:

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

### 12.2.2.3 Combined PS attach / PS attach while IMSI attach

#### 12.2.2.3.1 Definition

#### 12.2.2.3.2 Conformance requirement

If the PS UE is already attached for non-PS services by the MM specific attach procedure, but wants to perform an attach for PS services, the combined PS attach procedure is performed.

Reference

3GPP TS 24.008 clause 4.7.3.2.

#### 12.2.2.3.3 Test purpose

To test the behaviour of the UE if PS attach performed while IMSI attached.

#### 12.2.2.3.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode I. ATT flag is set.

User Equipment:

The UE has a valid TMSI-1, P-TMSI-1 and RAI-1.

Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE is forced to register for CS services but not to PS services. The SS verifies that the UE does not respond to paging messages for PS domain. Then the UE is triggered to perform the PS attach procedure and the SS verifies that it responds to PS paging messages.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS) and configured not to perform an automatic PS attach at switch on. |
| 2 | UE | | | The UE is powered up or switched on. No PS attach is performed (see ICS). |
| 3 | | | Registration on CS | See TS 34.108<br>Location updating type = IMSI attach.<br>The SS allocates TMSI-1 |
| 4 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 5 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 6 | UE | | | The UE is triggered to perform a PS attach. |
| 7 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach while IMSI attached' or 'Combined GPRS/IMSI attach'<br>Mobile identity =P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 7a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 7b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 7c | SS | | | The SS starts integrity protection. |
| 8 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>No new mobile identity assigned. TMSI and P-TMSI not included<br>P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 9 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 10 | -> | | RRC CONNECTION REQUEST | |
| 11 | <- | | RRC CONNECTION SETUP | |
| 12 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 13 | -> | | SERVICE REQUEST | service type = "paging response" |
| 14 | <- | | RRC CONNECTION RELEASE | |
| 15 | -> | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

12.2.2.3.5 Test requirements

UE is already attached for non-PS service with the MM specific attach procedure.

At step5, UE shall:

- not respond to the paging message for PS domain.

At step7, when the UE is requested to attach for PS services, UE shall:

- perform the combined PS attach procedure.

At step13, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

## 12.2.2.4 Combined PS attach / rejected / IMSI invalid / illegal ME

### 12.2.2.4.1 Definition

### 12.2.2.4.2 Conformance requirement

1) If the network rejects a combined PS attach procedure from the User Equipment with the cause 'Illegal ME', the User Equipment shall consider USIM invalid for PS and non-PS services until power is switched off or USIM is removed.

2) If the network rejects a combined PS attach procedure from the User Equipment with the cause 'Illegal ME', the User Equipment shall delete the stored TMSI, LAI, CSKN, RAI, PS-CKSN, P-TMSI and P-TMSI signature.

#### Reference

3GPP TS 24.008 clause 4.7.3.2

### 12.2.2.4.3 Test purpose

To test the behaviour of the UE if the network rejects the combined PS attach procedure of the UE with the cause 'Illegal ME'.

### 12.2.2.4.4 Method of test

#### Initial condition

System Simulator:

Three cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) and cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4), cell C in MCC2/MNC1/LAC1/RAC1(RAI-2).
All three cells are operating in network operation mode I.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid TMSI-1, P-TMSI-1 and RAI-1.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
USIM removal possible without powering down Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

#### Test procedure

The SS rejects a PS attach with the cause value 'Illegal ME'. The SS checks that the UE does not perform PS attach in the same or another PLMN. CS services are not possible as the USIM is blocked for CS services. PS services are not possible as the USIM is blocked for PS services.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | SS | | | The following messages are sent and shall be received on cell A.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or 'GPRS attach while IMSI attached'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1<br>TMSI status = valid TMSI available or IE is omitted |
| 5 | <- | | ATTACH REJECT | GMM cause 'Illegal ME'. |
| 6 | UE | | PAGING TYPE1 | Mobile identity = TMSI-1Paging order is for CS services. |
| 7 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| 8 | <- | | PAGING TYPE1 | Mobile identity = IMSI Paging order is for CS services |
| 9 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| 10 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 11 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 12 | SS | | | The following messages are sent and shall be received on cell B.<br>Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 13 | UE | | | Cell B is preferred by the UE. |
| 14 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| 15 | <- | | PAGING TYPE1 | Mobile identity = IMSI Paging order is for CS services |
| 16 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| 17 | SS | | | The following messages are sent and shall be received on cell C.<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 18 | UE | | | Cell C is preferred by the UE. |
| 19 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| 20 | <- | | PAGING TYPE1 | Mobile identity = IMSI Paging order is for PS services |
| 21 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 22 | UE | | | If possible (see ICS) USIM removal is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 23 | UE | | | The UE gets the USIM replaced, is powered up or switched on and initiates an attach (see ICS). |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 24 | UE | | | Step 25 is only performed for non-auto attach UE.<br>A location updating procedure is initiated. |
| 25 | UE | | Registration on CS | See TS34.108<br>Parameter Mobile identity is IMSI. |
| 26 | UE | | | UE initiates an attach automatically (see ICS), by MMI or AT commands. |
| 27 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or 'GPRS attach while IMSI attached'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 27a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 27b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 27c | SS | | | The SS starts integrity protection. |
| 28 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signatureMS identity = TMSI-1<br>Routing area identity = RAI-2 |
| 29 | -> | | ATTACH COMPLETE | |
| 30 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 31 | -> | | RRC CONNECTION REQUEST | |
| 32 | <- | | RRC CONNECTION SETUP | |
| 33 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 34 | -> | | PAGING RESPONSE | Mobile identity = TMSI-2 |
| 35 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 36 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.2.2.4.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step7, 9 and 16, when the UE receives the paging message for CS domain, UE shall,

- not respond to the paging message for CS domain.

At step11 and 21, when the UE receives the paging message for PS domain, UE shall,

- not respond to the paging message for PS domain.

At step27, when the USIM is replaced, UE shall:

- perform the combined PS attach procedure.

At step34, when the UE receives the paging message for CS domain, UE shall,

- respond to the paging message for CS domain by sending the RAGING RESPONSE message.

### 12.2.2.5 Combined PS attach / rejected / PS services and non-PS services not allowed

#### 12.2.2.5.1 Definition

#### 12.2.2.5.2 Conformance requirement

1) If the network rejects a combined PS attach procedure from the User Equipment with the cause 'GPRS services and non-GPRS services not allowed', the User Equipment shall consider USIM invalid for PS and non-PS services until power is switched off or USIM is removed.

2) If the network rejects a combined PS attach procedure from the User Equipment with the cause 'GPRS services and non-GPRS services not allowed', the User Equipment shall delete the stored TMSI, LAI, CSKN, RAI, PS-CKSN, P-TMSI and P-TMSI signature.

Reference

3GPP TS 24.008 clause 4.7.3.2.

#### 12.2.2.5.3 Test purpose

To test the behaviour of the UE if the network rejects the combined PS attach procedure of the UE with the cause 'GPRS services and non-GPRS services not allowed'.

#### 12.2.2.5.4 Method of test

Initial condition

System Simulator:

- Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) and cell B in MCC2/MNC1/LAC1/RAC1 (RAI-2).
  Both cells are operating in network operation mode I.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

- The UE has a valid TMSI-1, P-TMSI-1 and RAI-1.

Related ICS/IXIT statements

- Support of PS service Yes/No
  UE operation mode A Yes/No
  Switch off on button Yes/No
  Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a PS attach with the cause value 'GPRS services and non-GPRS services not allowed'. The SS checks that the UE does not perform PS attach in the same or another PLMN. CS services are not possible as the USIM is blocked for CS services. PS services are not possible as the USIM is blocked for PS services.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 2 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or 'GPRS attach while IMSI attached' Mobile identity =P-TMSI-1 Old Routing area identity = RAI-1 |
| 5 | <- | | ATTACH REJECT | GMM cause 'GPRS services and non-GPRS services not allowed' |
| 6 | UE | | | The SS verifies that the UE does not attempt to access the network. (SS waits 30 seconds). |
| 7 | <- | | PAGING TYPE1 | Mobile identity = IMSI Paging order is for CS services. |
| 8 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| 9 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1 Paging order is for PS Paging. |
| 10 | UE | | | No response from the UE to the request. This is checked for 10 seconds |
| 11 | | SS | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 12 | | | (void) | |
| 13 | UE | | | The SS verifies that the UE does not attempt to access the network. (SS waits 30 seconds). |
| 14 | <- | | PAGING TYPE1 | Mobile identity = IMSI Paging order is for CS services. |
| 15 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| 16 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1 Paging order is for PS services. |
| 17 | UE | | | No response from the UE to the request. This is checked for 10seconds. |
| 18 | UE | | | If possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 19 | UE | | | The UE is powered up or switched. |
| 20 | UE | | Registration on CS | See TS 34.108 This step is applied only for non-auto attach UE. Location Update Procedure initiated from the UE. Parameter mobile identity is IMSI. |
| 21 | UE | | | UE initiates an attach automatically (see ICS), by MMI or AT commands. |
| 22 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or 'GPRS attach while IMSI attached' Mobile identity = IMSI TMSI status = no valid TMSI available |
| 22a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 22b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 22c | SS | | | The SS starts integrity protection. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 23 | | <- | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-2 |
| 24 | | -> | ATTACH COMPLETE | |
| 25 | | <- | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 26 | | -> | RRC CONNECTION REQUEST | |
| 27 | | <- | RRC CONNECTION SETUP | |
| 28 | | -> | RRC CONNECTION SETUP COMPLETE | |
| 29 | | -> | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 30 | | <- | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 31 | | -> | RRC CONNECTION RELEASE COMPLETE | |
| 32 | | <- | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging is for PS services. |
| 33 | | -> | RRC CONNECTION REQUEST | |
| 34 | | <- | RRC CONNECTION SETUP | |
| 35 | | -> | RRC CONNECTION SETUP COMPLETE | |
| 36 | | -> | SERVICE REQUEST | Service type = "paging response" |
| 37 | | <- | RRC CONNECTION RELEASE | |
| 38 | | -> | RRC CONNECTION RELEASE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.2.2.5.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step8 and 14, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

At step10 and 17, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

At step22, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure.

At step29, when the UE receives the paging message for CS domain, UE shall:

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step36, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

### 12.2.2.6 Combined PS attach / rejected / PS services not allowed

#### 12.2.2.6.1 Definition

#### 12.2.2.6.2 Conformance requirement

1) If the network rejects a combined PS attach procedure from the User Equipment with the cause 'GPRS services not allowed', the User Equipment shall consider USIM invalid for PS services until power is switched off or USIM is removed.

2) If the network rejects a combined PS attach procedure from the User Equipment with the cause 'GPRS services not allowed' the User Equipment shall delete the stored RAI, PS-CKSN, P-TMSI and P-TMSI signature.

3) A PS class AUE shall perform an MM IMSI attach procedure.

Reference

3GPP TS 24.008 clause 4.7.3.2

#### 12.2.2.6.3 Test purpose

To test the behaviour of the UE if the network rejects the PS attach procedure of the UE with the cause 'GPRS services not allowed'.

#### 12.2.2.6.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) and cell B in MCC2/MNC1/LAC1/RAC1 (RAI-2).
Both cells are operating in network operation mode I.
ATT flag set to 1

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid TMSI, P-TMSI-1 and RAI-1.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a normal attach with the cause value 'GPRS services not allowed'. The SS checks that the UE does not perform PS attach. PS services are not possible. An UE operation mode A UE shall perform an MM IMSI attach.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 2 | UE | | | The UE is powered up or switched on. |
| 2a | UE | | Registration on CS | See TS 34.108 This step is applied only for non-auto attach UE. Location Update Procedure initiated from the UE. Parameter mobile identity is TMSI-1. |
| 2b | UE | | | UE initiates an attach automatically (see ICS), via MMI or AT commands. |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or 'GPRS attach while IMSI attached' Mobile identity =P-TMSI-1 Old Routing area identity = RAI-1 |
| 4 | <- | | ATTACH REJECT | GMM cause 'GPRS services not allowed' |
| 5 | UE | | | An automatic MM IMSI attach procedure is initiated. |
| 6 | UE | | Registration on CS | See TS 34.108 Location updating type = IMSI attach. The SS allocates TMSI-2. |
| 7 | <- | | PAGING TYPE1 | Mobile identity = TMSI-2 Paging order is for CS services. |
| 8 | -> | | RRC CONNECTION REQUEST | |
| 9 | <- | | RRC CONNECTION SETUP | |
| 10 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 11 | -> | | PAGING RESPONSE | Mobile identity = TMSI-2 |
| 12 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signaling link. |
| 13 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| | | | | The following messages are sent and shall be received on cell B. |
| 14 | | SS | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 15 | UE | | | Cell B is preferred by the UE. |
| 16 | UE | | | A location updating procedure is initiated. |
| 17 | UE | | Registration on CS | See TS 34.108 Location updating type = normal. The SS allocates TMSI-1. |
| 18 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1 Paging order is for CS services. |
| 19 | -> | | RRC CONNECTION REQUEST | |
| 20 | <- | | RRC CONNECTION SETUP | |
| 21 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 22 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 23 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 24 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 25 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1 Paging is for PS services |
| 26 | UE | | | No response from the UE to the request. This is checked for 10seconds. |
| 27 | UE | | | If possible (see ICS) switch off is performed. Otherwise the power is removed. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 27a | UE | | | If switch off is performed then UE performs IMSI detach procedure. |
| 28 | UE | | | The UE is powered up or switched. |
| 28a | UE | | Registration on CS | See TS 34.108<br>This step is applied only for non-auto attach UE.<br>Location Update Procedure initiated from the UE. Parameter mobile identity is TMSI-1. |
| 28b | UE | | | UE initiates an attach automatically (see ICS), via MMI or AT commands. |
| 29 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or 'GPRS attach while IMSI attached'<br>Mobile identity = IMSI |
| 29a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 29b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 29c | SS | | | The SS starts integrity protection. |
| 30 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-2<br>Routing area identity = RAI-2 |
| 31 | -> | | ATTACH COMPLETE | |
| 32 | <- | | PAGING TYPE1 | Mobile identity = TMSI-2<br>Paging order is for CS services. |
| 33 | -> | | RRC CONNECTION REQUEST | |
| 34 | <- | | RRC CONNECTION SETUP | |
| 35 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 36 | -> | | PAGING RESPONSE | Mobile identity = TMSI-2 |
| 37 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 38 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.2.2.6.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step6, if the UE is PS class A, UE shall:

- perform the MM IMSI attach procedure.

At step11, 22 and 36, when the UE receives the paging message for CS domain, UE shall:

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step26, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

At step29, UE shall:

- perform the PS attach procedure.

## 12.2.2.7a Combined PS attach / rejected / location area not allowed

### 12.2.2.7a.1 Definition

### 12.2.2.7a.2 Conformance requirement

1) If the network rejects a combined PS attach procedure from the User Equipment with the cause 'location area not allowed' the User Equipment shall:

   1.1 not perform combined PS attach when in the same location area.

   1.2 delete the stored LAI, CKSN, TMSI, RAI, PS-CKSN, P-TMSI and P-TMSI signature.

   1.3 store the LA in the 'forbidden location areas for regional provision of service'.

   1.4 not delete the list of "equivalent PLMNs".

   1.5 perform a cell selection.

2) If the network rejects a combined PS attach procedure from the User Equipment with the cause 'location area not allowed' the User Equipment shall:

   2.1 perform combined PS attach when a new location area is entered.

   2.2 delete the list of forbidden LAs when power is switched off.

#### Reference

3GPP TS 24.008 clauses 4.7.3.2.

### 12.2.2.7a.3 Test purpose

To test the behaviour of the UE if the network rejects the combined PS attach procedure with the cause 'Location Area not allowed'.

To test that the UE deletes the list of forbidden LAs when power is switched off.

### 12.2.2.7a.4 Method of test

#### Initial condition

System Simulator:

Three cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4), cell C in MCC2/MNC1/LAC2/RAC1 (RAI-6).
All cells are operating in network operation mode I.

The PLMN contains Cell C is equivalent to the PLMN that contains Cell A.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid TMSI, P-TMSI and RAI.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
PS attach attempted automatically by outstanding request Yes/No

#### Test procedure

The SS rejects a combined PS attach with the cause value 'Location Area not allowed'. The SS checks that the UE does not perform combined PS attach while in the location area, performs PS attach when a new location area is entered and

deletes the list of forbidden LAs when switched off. CS services are not possible unless an IMSI attach procedure is performed.

Different types of UE may use different methods to periodically clear the list of forbidden location areas (e.g. every day at 12am). If the list is cleared while the test is being run, it may be necessary to re-run the test.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | | -> | ATTACH REQUEST | Attach type = 'Combined GPRS/ IMSI attach' or "GPRS Attach while IMSI attached"<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 3b | | <- | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-1<br>Equivalent PLMNs = MCC2,MNC1 |
| 3c | | <- | DETACH REQUEST | Detach type = re-attach required |
| 3d | | -> | DETACH ACCEPT | |
| 4 | | -> | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or "GPRS Attach while IMSI attached"<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 5 | | <- | ATTACH REJECT | GMM cause 'Location Area not allowed' |
| 6 | UE | | | No LOCATION UPDATING REQ with type 'IMSI attach' is sent to the SS<br>(SS waits 30 seconds). |
| 7 | | <- | PAGING TYPE1 | Mobile identity = TMSI<br>Paging order is for CS services. |
| 8 | UE | | | The UE shall not initiate an RRC connection.<br>This is checked during 3 seconds. |
| 9 | | <- | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 10 | | -> | | No response from the UE to the request.<br>This is checked for 10 seconds |
| | | | | The following messages are sent and shall be received on cell B. |
| 11 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 11a | UE | | | The UE performs cell selection. |
| 12 | UE | | | Cell B is preferred by the UE. |
| 13 | UE | | | No ATTACH REQUEST or LOCATION UPDATING REQ is sent to SS<br>(SS waits 60 seconds) |
| 15 | | <- | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 16 | UE | | | No response from the UE to the request. This is checked for 10seconds. |
| 17 | UE | | | The UE initiates an attach by MMI or AT command. |
| 18 | | | | No attach is performed by the UE. This is checked for 10 seconds. |
| | | | | The following messages are sent and shall be received on cell C. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 19 | | SS | | Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell". (see note) |
| 19a | | UE | | The UE performs cell selection |
| 20 | | UE | | Cell C is preferred by the UE.<br>Step 20a and 20b are only performed by an UE which will not initiate a PS attach automatically (see ICS) |
| 20a conditional | | UE | Registration on CS | Parameter Mobile identity is IMSI.<br>See TS 34.108 |
| 20b conditional | | UE | | UE initiates an attach via MMI or AT commands. |
| 21 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/ IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 21a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 21b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 21c | | SS | | The SS starts integrity protection. |
| 22 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-6<br>Equivalent PLMNs = MCC1,MNC1 |
| 23 | -> | | ATTACH COMPLETE | |
| 24 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 25 | -> | | RRC CONNECTION REQUEST | |
| 26 | <- | | RRC CONNECTION SETUP | |
| 27 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 28 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 29 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 30 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 31 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 32 | -> | | RRC CONNECTION REQUEST | |
| 33 | <- | | RRC CONNECTION SETUP | |
| 34 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 35 | -> | | SERVICE REQUEST | Service type = "paging response" |
| 36 | <- | | RRC CONNECTION RELEASE | |
| 37 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 38 | | UE | | The UE is switched off or power is removed (see ICS). |
| 39 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, combined GPRS / IMSI detach' |
| 39a | | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| | | | | The following messages are sent and shall be received on cell B. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 40 | UE | | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note)<br>Cell B is preferred by the UE. |
| 41 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 42 | | | | Step 43 is only performed for non-auto attach UE. |
| 43 | UE | | Registration on CS | See TS 34.108 |
| 44 | UE | | | UE initiates an attach automatically (see ICS), by MMI or AT commands. |
| 45 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or "GPRS Attach while IMSI attached"<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-6 |
| 45a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 45b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 45c | SS | | | The SS starts integrity protection. |
| 46 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-2<br>Routing area identity = RAI-4<br>Equivalent PLMNs = MCC2,MNC1 |
| 47 | -> | | ATTACH COMPLETE | |
| 48 | <- | | PAGING TYPE1 | Mobile identity = TMSI-2<br>Paging order is for CS services. |
| 49 | -> | | RRC CONNECTION REQUEST | |
| 50 | <- | | RRC CONNECTION SETUP | |
| 51 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 52 | -> | | PAGING RESPONSE | Mobile identity = TMSI-2 |
| 53 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 54 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 55 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging order is for PS services. |
| 56 | -> | | RRC CONNECTION REQUEST | |
| 57 | <- | | RRC CONNECTION SETUP | |
| 58 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 59 | -> | | SERVICE REQUEST | service type = "paging response" |
| 60 | <- | | RRC CONNECTION RELEASE | |
| 61 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.2.2.7a.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence

At step6, when the UE receives the ATTACH REJECT message with GMM cause = 'Location Area not allowed', UE shall:

- not initiate MM location updating procedure.

At step8, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

At step10 and 16, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

At step13 and 18, when the UE is in the same location area, UE shall:

- not perform PS attach procedure.

At step21, when the UE enters a new location area, UE shall

- perform the combined PS attach procedure.

At step28 and 52, when the UE receives the paging message for CS domain, UE shall:

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step35 and 59, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step45, when the UE is powered up or switched on, UE shall:

- perform the combined PS attach procedure.

## 12.2.2.7b Combined PS attach / rejected / No Suitable Cells In Location Area

### 12.2.2.7b.1 Definition

### 12.2.2.7b.2 Conformance requirement

1) If the network rejects a combined PS attach procedure from the User Equipment with the cause 'No Suitable Cells In Location Area', the User Equipment shall:

   1.1 not perform combined PS attach when in the same location area.

   1.2 delete the stored LAI, CKSN, TMSI, RAI, PS-CKSN, P-TMSI and P-TMSI signature.

   1.3 store the LA in the 'forbidden location areas for roaming'.

   1.4 not delete the list of "equivalent PLMNs".

2) If the network rejects a combined PS attach procedure from the User Equipment with the cause 'No Suitable Cells In Location Area', the User Equipment shall:

   2.1 search for a suitable cell in a different location area on the same PLMN.

#### Reference

3GPP TS 24.008 clauses 4.7.3.2.

### 12.2.2.7b.3 Test purpose

To test the behaviour of the UE if the network rejects the combined PS attach procedure with the cause 'No Suitable Cells In Location Area'.

12.2.2.7b.4 Method of test

Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC2/RAC1 (RAI-3), cell C in MCC2/MNC1/LAC1/RAC1 (RAI-2)

Sintrasearch and Sintersearch values for cells A, B and C are 20 dB.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has valid TMSI, P-TMSI and RAI

The PLMN contains Cell C is equivalent to the PLMN that contains Cell A.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a combined PS attach with the cause value 'No Suitable Cells In Location Area'. The SS checks that the UE shall search for a suitable cell in a different location area on the same PLMN and shall perform combined PS attach procedure in that cell

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following message are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-1<br>Equivalent PLMNs = MCC2,MNC1 |
| 6 | <- | | DETACH REQUEST | Detach type = re-attach required |
| 7 | -> | | DETACH ACCEPT | |
| 8 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>(see note)<br>The SS configures power level of each Cell as follows.<br>Cell A > Cell B = Cell C |
| 9 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 10 | <- | | ATTACH REJECT | GMM cause = 'No Suitable Cells In Location Area' |
| 11 | | SS | | The SS initiates the RRC connection release.<br>The following message are sent and shall be received on cell B. |
| 12 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 13 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 14 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 15 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 16 | | SS | | The SS starts integrity protection. |
| 17 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-2<br>Routing area identity = RAI-3<br>Equivalent PLMNs = MCC2,MNC1 |
| 18 | -> | | ATTACH COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.2.2.7b.5 Test requirements

At step4 and 9, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected sequence.

At step13, when the UE enters a suitable cell in a different location area on the same PLMN, UE shall:

- initiate the combined PS attach procedure.

## 12.2.2.7c Combined PS attach / rejected / Roaming not allowed in this location area

12.2.2.7c.1 Definition

12.2.2.7c.2 Conformance requirement

1) If the network rejects a PS attach procedure from the User Equipment with the cause 'Roaming not allowed in this location area' the User Equipment shall:

   1.1 delete any RAI, P-TMSI, P-TMSI signature and PS ciphering key sequence number.

   1.2 set the PS update status to GU3 ROAMING NOT ALLOWED.

   1.3 delete any TMSI, LAI and ciphering key sequence number.

   1.4 store the LAI in the list of "forbidden location areas for roaming".

   1.5 perform a PLMN selection.

Reference

3GPP TS 24.008 clause 4.7.3.1.

12.2.2.7c.3 Test purpose

To test the behaviour of the UE if the network rejects the PS attach procedure of the UE with the cause 'Roaming not allowed in this location area'.

12.2.2.7c.4 Method of test

Initial condition

System Simulator:

Three cells cell A with MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4) , cell C in MCC1/MNC1/LAC2/RAC2 (RAI-12)
All three cells are operating in network operation mode I.

User Equipment:

The UE has valid TMSI, P-TMSI and RAI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a PS attach with the cause value 'Roaming not allowed in this location area'. The SS checks that the UE performs PLMN selection.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | | -> | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or "GPRS Attach while IMSI attached"<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 5 | | <- | ATTACH REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 6 | UE | | | No LOCATION UPDATING REQ and ATTACH REQ with type 'IMSI attach' is sent to the SS (SS waits 30 seconds). |
| 7 | | <- | PAGING TYPE1 | Mobile identity = TMSI<br>Paging order is for CS services. |
| 8 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| 9 | | <- | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 10 | | -> | | No response from the UE to the request. This is checked for 10 seconds |
| 11 | UE | | | UE performs PLMN selection. |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 12 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 13 | UE | | | Cell B is preferred by the UE. |
| 14 | UE | | | No LOCATION UPDATING REQ is sent to SS (SS waits 60 seconds) |
| 15 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 15a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 15b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 15c | | SS | | The SS starts integrity protection. |
| 16 | | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-4 |
| 17 | | -> | ATTACH COMPLETE | |
| | | SS | | The following messages are sent and shall be received on cell C. |
| 18 | | SS | | Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 19 | UE | | | Cell C is preferred by the UE. |
| 20 | UE | | Registration on CS | Parameter Mobile identity is IMSI.<br>See TS 34.108 |
| 21 | UE | | | UE initiates an attach automatically (see ICS) via MMI or AT commands. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 22 | | <- | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 23 | -> | | RRC CONNECTION REQUEST | |
| 24 | <- | | RRC CONNECTION SETUP | |
| 25 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 26 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 27 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 28 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 29 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging order is for PS services. |
| 30 | -> | | RRC CONNECTION REQUEST | |
| 31 | <- | | RRC CONNECTION SETUP | |
| 32 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 33 | -> | | SERVICE REQUEST | Service type = "paging response" |
| 34 | <- | | RRC CONNECTION RELEASE | |
| 35 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 12.2.2.7c.5 Test requirements

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step6, UE shall:

- not perform MM IMSI attach and PS attach.

At step8, UE shall:

- not respond to paging for CS domain service.

At step10, UE shall:

- not respond to paging for PS domain service.

At step15, UE shall:

- perform PS attach procedure.

At step20, UE shall:

- perform MM IMSI attach procedure.

### 12.2.2.7d Combined PS attach / rejected / PS services not allowed in this PLMN

#### 12.2.2.7d.1 Definition

#### 12.2.2.7d.2 Conformance requirement

1) If the network rejects a PS attach procedure from the User Equipment with the cause 'GPRS services not allowed in this PLMN' the User Equipment shall:

   1.1 delete any RAI, P-TMSI, P-TMSI signature and PS ciphering key sequence number.

1.2 set the PS update status to GU3 ROAMING NOT ALLOWED.

1.3 store the PLMN identity in the "forbidden PLMNs for PS service" list.

2) If the UE is in UE operation mode A the User Equipment shall:

2.1 perform IMSI attach for non-GPRS services by use of the MM IMSI attach procedure.

Reference

3GPP TS 24.008 clause 4.7.3.1.

12.2.2.7d.3 Test purpose

To test the behaviour of the UE if the network rejects the PS attach procedure of the UE with the cause 'GPRS services not allowed in this PLMN'.

12.2.2.7d.4 Method of test

Initial condition

System Simulator:

Two cells cell A with MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC2/MNC1/LAC1/RAC1 (RAI-2). All two cells are operating in network operation mode I.

The PLMN contains Cell B is equivalent to the PLMN that contains Cell A.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1, RAI-1.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a PS attach with the cause value 'GPRS services not allowed in this PLMN'. The SS checks that the UE does not perform PS attach and performs an IMSI attach for non-PS services by use of the MM IMSI attach procedure when in the same cell.

After the cell is changed to equivalent PLMN, the UE shall perform PS attach procedure.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | | SS | | The SS is set in network operation mode I.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the " Non-suitable cell ".<br>(see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A. |
| 5 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 6 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1<br>Equivalent PLMNs = MCC2,MNC1 |
| 7 | <- | | DETACH REQUEST | Detach type = re-attach required |
| 8 | -> | | DETACH ACCEPT | |
| 9 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A. |
| 10 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 11 | <- | | ATTACH REJECT | GMM cause = 'GPRS services not allowed in this PLMN' |
| 12 | UE | | | No ATTACH REQUEST sent to the SS<br>(SS waits 30 seconds). |
| 13 | | SS | | Set the cell type of cell A to the " Non-suitable cell ".<br>Set the cell type of cell B to the " Serving cell".<br>(see note)<br>The following messages are sent and shall be received on cell B. |
| 14 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 15 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 16 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 17 | | SS | | The SS starts integrity protection. |
| 18 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-2<br>Equivalent PLMNs = MCC1,MNC1 |
| 19 | -> | | ATTACH COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 12.2.2.7d.5 Test requirements

At step5 and 10, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step4 and 9, UE shall:

- perform MM IMSI attach.

At step12, UE shall:

- not perform PS attach procedure.

At step14, UE shall:

- perform PS attach procedure.

### 12.2.2.8 Combined PS attach / abnormal cases / attempt counter check / miscellaneous reject causes

#### 12.2.2.8.1 Definition

#### 12.2.2.8.2 Conformance requirement

1) When a combined PS attach procedure is rejected with the attempt counter less than five, the User Equipment shall repeat the combined PS attach procedure after T3311 timeout.

2) When a combined PS attach procedure is rejected with the attempt counter five, the User Equipment shall delete the stored TMSI, LAI, CKSN, P-TMSI, P-TMSI signature, PS CKSN and RAI and start T3302.

3) When the T3302 expire, a new combined PS attach procedure shall be initiated.

| GMM cause codes that can be selected are: |
|---|
| 'IMSI unknown in HLR' |
| 'MS identity cannot be derived by the network' |
| 'Network failure' |
| 'Congestion' |
| 'retry upon entry into a new cell' |
| 'Semantically incorrect message' |
| 'Invalid mandatory information' |
| 'Message type non-existent or not implemented' |
| 'Message type not compatible with the protocol state' |
| 'Information element non-existent or not implemented' |
| 'Conditional IE error' |
| 'Message not compatible with the protocol state' |
| 'Protocol error, unspecified' |

#### Reference

3GPP TS 24.008 clause 4.7.3.2.

#### 12.2.2.8.3 Test purpose

To test the behaviour of the UE with respect to the attempt counter.

#### 12.2.2.8.4 Method of test

##### Initial condition

System Simulator:

One cell operating in network operation mode I.

User Equipment:

The UE has a valid TMSI, P-TMSI and RAI.

##### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No Automatic PS attach procedure at switch on or power on Yes/No

Switch off on button Yes/No

##### Test procedure

The UE initiates a combined PS attach procedure (attempt counter zero).

The SS rejects the attach with an arbitrarily chosen cause code.

The UE initiates a new combined PS attach procedure (attempt counter one) after T3311 expires.

The SS rejects the attach with an arbitrarily chosen cause code.

The UE initiates a new combined PS attach procedure (attempt counter two) after T3311 expires.

The SS rejects the attach with an arbitrarily chosen cause code.

The UE initiates a new combined PS attach procedure (attempt counter three) after T3311 expires.

The SS rejects the attach with an arbitrarily chosen cause code.

The UE initiates a new combined PS attach procedure (attempt counter four) after T3311 expires.

The SS rejects the attach with an arbitrarily chosen cause code.

The UE shall not perform a new successful attach procedure after 15 seconds.

The UE initiates a combined PS attach procedure with attempt counter zero after T3302 expires without P-TMSI, P-TMSI signature, PS CKSN and RAI.

T3302; set to 10 minutes.

T3311; 15 seconds.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4 | <- | | ATTACH REJECT | Arbitrary chosen GMM cause<br>T3302 with value 10 min. |
| 5 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 6 | SS | | | The SS verifies that the time between the attach reject and attach request is T3311 |
| 7 | <- | | ATTACH REJECT | Arbitrarily chosen GMM cause<br>T3302 with value 10 min. |
| 8 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 9 | SS | | | The SS verifies that the time between the attach reject and attach request is T3311 |
| 10 | <- | | ATTACH REJECT | Arbitrarily chosen GMM cause<br>T3302 with value 10 min. |
| 11 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 12 | SS | | | The SS verifies that the time between the attach reject and attach request is T3311 |
| 13 | <- | | ATTACH REJECT | Arbitrarily chosen GMM cause<br>T3302 with value 10 min. |
| 14 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 15 | SS | | | The SS verifies that the time between the attach reject and attach request is T3311 |
| 16 | <- | | ATTACH REJECT | Arbitrarily chosen GMM cause<br>T3302 with value 10 min. |
| 17 (optional step) | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A. Location Update Procedure may be initiated from the UE.<br>Parameter mobile identity is IMSI. |
| 20 | <- | | PAGING TYPE1 | Paging order is for PS services.<br>Mobile identity = P-TMSI-1 |
| 21 | UE | | | No response from the UE to the request. This is checked for 10seconds. |
| 21a | | | Void | |
| 22 | SS | | | The SS verifies that the UE does not attempt to attach for T3302 . |
| 23 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>'GPRS attach while IMSI attached'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 23a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 23b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 23c | SS | | | The SS starts integrity protection. |
| 24 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Mobile identity P-TMSI-1<br>P-TMSI signature<br>Mobile identity = TMSI-1<br>Routing area identity = RAI-1 |
| 25 | -> | | ATTACH COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 26 | | <- | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services.. |
| 27 | | -> | RRC CONNECTION REQUEST | |
| 28 | | <- | RRC CONNECTION SETUP | |
| 29 | | -> | RRC CONNECTION SETUP COMPLETE | |
| 30 | | -> | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 31 | | <- | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 32 | | -> | RRC CONNECTION RELEASE COMPLETE | |
| 33 | | <- | PAGING TYPE1 | Mobile identity = P-TMSI-1 |
| 33a | | -> | RRC CONNECTION REQUEST | |
| 33b | | <- | RRC CONNECTION SETUP | |
| 33c | | -> | RRC CONNECTION SETUP COMPLETE | |
| 34 | | -> | SERVICE REQUEST | Service type = "paging response" |
| 34a | | <- | RRC CONNECTION RELEASE | |
| 34b | | -> | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

12.2.2.8.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

UE shall perform the following actions depending on the conditions described below.

Case1) A combined PS attach procedure is rejected with the attempt counter less than five

At step 5, 8, 11 and 14, when the timer T3311 timeout has occurred, UE shall:

- repeat the combined PS attach procedure.

Case2) A combined PS attach procedure is rejected with the attempt counter five

At step21, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

Case3) The T3302 expires

At step23, UE shall:

- re-initiate the new combined PS attach procedure.

At step30, when the UE receives the paging message for CS domain, UE shall:

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step34, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

## 12.2.2.9 Combined PS attach / abnormal cases / PS detach procedure collision

### 12.2.2.9.1 Definition

### 12.2.2.9.2 Conformance requirement

1) When a DETACH REQUEST message is received by the UE (any cause except re-attach) while waiting for an ATTACH ACCEPT message or ATTACH REJECT message, the UE shall terminate the combined PS attach procedure and continue with the combined PS detach procedure.

2) When a DETACH REQUEST message is received by the UE (cause re-attach) while waiting for an ATTACH ACCEPT message or ATTACH REJECT message, the UE shall ignore the combined PS detach procedure and continue with the combined PS attach procedure.

#### Reference

3GPP TS 24.008 clause 4.7.3.2.

### 12.2.2.9.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

### 12.2.2.9.4 Method of test

#### Initial condition

System Simulator:

One cell operating in network operation mode I.

User Equipment:

The UE has valid TMSI, P-TMSI and RAI. UE is Idle Updated.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
Re-attach automatically when the network commands a detach with no cause value Yes/No

#### Test procedure

The UE initiates a combined PS attach procedure. The SS does not answer the combined PS attach procedure, but initiates a combined PS detach procedure (any cause except re-attach). The UE shall terminate the combined PS attach procedure and continue with the combined PS detach procedure.

The UE initiates a combined PS attach procedure. The SS does not answer the combined PS attach procedure, but initiates a combined PS detach procedure (cause re-attach). The UE shall ignore the combined PS detach procedure and continue with the combined PS attach. CS services are also possible.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4 | SS | | | The SS ignores the ATTACH REQUEST message and initiates a detach procedure. |
| 5 | <- | | DETACH REQUEST | Detach type = 're-attach not required' |
| 6 | -> | | DETACH ACCEPT | |
| 7 | | | (void) | |
| 8 | | | (void) | |
| 9 | UE | | | The UE is attached by MMI or AT command if the UE does not re-attach automatically upon receiving a network initiated detach with no cause value, (see IXIT). |
| 10 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 11 | SS | | | The SS ignores the ATTACH REQUEST message and initiates a detach procedure. |
| 12 | <- | | DETACH REQUEST | Detach type = 're-attach required' |
| 13 | UE | | | The UE ignores the DETACH REQUEST message and continue with the attach procedure |
| 14 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-2<br>Routing area identity = RAI-1 |
| 15 | -> | | ATTACH COMPLETE | |
| 16 | <- | | PAGING TYPE1 | Mobile identity = TMSI-2<br>Paging order is for CS services. |
| 17 | -> | | RRC CONNECTION REQUEST | |
| 18 | <- | | RRC CONNECTION SETUP | |
| 19 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 20 | -> | | PAGING RESPONSE | Mobile identity = TMSI-2 |
| 21 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 22 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 23 | <- | | PAGING TYPE1 | Paging order is for PS services.<br>Mobile identity = P-TMSI-2 |
| 23a | -> | | RRC CONNECTION REQUEST | |
| 23b | <- | | RRC CONNECTION SETUP | |
| 23c | -> | | RRC CONNECTION SETUP COMPLETE | |
| 24 | -> | | SERVICE REQUEST | Service type = "paging response" |
| 24a | <- | | RRC CONNECTION RELEASE | |
| 24b | -> | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

12.2.2.9.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

UE shall perform the following actions depending on the Detach type described below.

Case1) Detach type is not re-attach

At step6, UE shall:

- respond to DETACH REQUEST message by sending DETACH ACCEPT message.

Case2) Detach type is re-attach

At step13, UE shall:

- ignore the PS detach procedure.

At step15, UE shall:

- send the ATTACH COMPLETE message.

At step20, when the UE receives the paging message for CS domain, UE shall:

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step24, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

# 12.3 PS detach procedure

## 12.3.1 UE initiated PS detach procedure

### 12.3.1.1 PS detach / power off / accepted

#### 12.3.1.1.1 Definition

#### 12.3.1.1.2 Conformance requirement

The UE detaches the IMSI for PS services if the UE is switched off.

Reference

3GPP TS 24.008 clause 4.7.4.1

#### 12.3.1.1.3 Test purpose

To test the behaviour of the UE for the detach procedure.

#### 12.3.1.1.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE performs a PS attach procedure.

The UE sends a DETACH REQUEST message to the SS.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set o attach to the PS services only (see ICS). If that is not supported by the UE, goto step 8. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | SS | | | The SS releases the RRC connection. |
| 6 | UE | | | The UE is switched off (see ICS). |
| 6a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Detach". |
| 7 | -> | | DETACH REQUEST | Detach type = 'power switched off, GPRS detach' |
| 7a | | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 8 | UE | | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 7a. |

Specific message contents

None.

12.3.1.1.5 Test requirements

At step 2a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

At step 6a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach".

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step7, when the UE is switched off, UE shall:

- send the DETACH REQUEST message to SS with the Detach type = 'power switched off, GPRS detach'.

### 12.3.1.2 PS detach / accepted

#### 12.3.1.2.1 Definition

#### 12.3.1.2.2 Conformance requirement

1) The GPRS detach procedure is initiated by the UE by sending a DETACH REQUEST message. The detach type information element may indicate "GPRS detach with switching off", "GPRS detach without switching off", "IMSI detach", "GPRS/IMSI detach with switching off" or "GPRS/IMSI detach without switching off".

   The UE shall include the P-TMSI in the DETACH REQUEST message. The UE shall also include a valid P-TMSI signature, if available.

2) Upon completion of the detach procedure, the used P-TMSI signature shall be deleted.

Reference

3GPP TS 24.008 clause 4.7.4.1.1

3GPP TS 24.008 clause 4.7.1.3

#### 12.3.1.2.3 Test purpose

To test the behaviour of the UE for the detach procedure, including treatment of P-TMSI signature.

#### 12.3.1.2.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
UE PS Release Yes/No

Test procedure

The UE performs a PS attach procedure.

The UE sends a DETACH REQUEST message to the SS.

The SS signal to the UE, but no response is received, as the signalling link is disconnected.

The UE performs a PS attach procedure.

The UE sends a DETACH REQUEST message to the SS.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set to attach to the PS services only (see ICS). If that is not supported by the UE, goto step 18. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts ciphering and integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | SS | | | The SS releases the RRC connection. |
| 5 | | | (void) | |
| 6 | UE | | | The UE initiates a PS detach (without power off) by MMI or AT command. |
| 6a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Detach" |
| 7 | -> | | DETACH REQUEST | Detach type = 'normal detach, GPRS detach'<br>Mobile identity = P-TMSI-1<br>P-TMSI-1 signature |
| 7a | SS | | | The SS starts ciphering and integrity protection. |
| 8 | <- | | DETACH ACCEPT | |
| 8a | SS | | | The SS releases the RRC connection. |
| 9 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 10 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 11 | UE | | | The UE initiates an attach by MMI or AT commands |
| 12 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 12a | SS | | | The SS starts ciphering and integrity protection. |
| 13 | <- | | ATTACH ACCEPT | No new mobile identity assigned<br>Attach result = 'GPRS only attached'<br>Routing area identity = RAI-1 |
| 14 | UE | | | The UE initiates a PS detach (without power off) by MMI or AT command. |
| 15 | -> | | DETACH REQUEST | Detach type = 'normal detach, GPRS detach'<br>Mobile identity = P-TMSI-1 |
| 16 | <- | | DETACH ACCEPT | |
| 17 | | | (void) | |
| 18 | UE | | | The UE is set to attach to both PS and non-PS services (see ICS) and the test is repeated from step 2 to step 16. |

Specific message contents

None.

12.3.1.2.5 Test requirements

At step 2a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

At step 6a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach".

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step7, UE shall:

- send the DETACH REQUEST message (without power off) to SS with mobile identity P-TMSI-1 and P-TMSI-1 signature.

At step10, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

At step 12, UE shall

- initiate ATTACH REQUEST message without P-TMSI signature IE.

At step 15, UE shall:

- send the DETACH REQUEST message (without power off) to SS with mobile identity P-TMSI-1 and without P-TMSI-1 signature.

## 12.3.1.3 PS detach / abnormal cases / attempt counter check / procedure timeout

12.3.1.3.1 Definition

12.3.1.3.2 Conformance requirement

1) When a T3321 timeout has occurred during a PS detach procedure with the attempt counter less than five, the User Equipment shall repeat the PS detach procedure.

2) When a T3321 timeout has occurred during a PS detach procedure with the attempt counter five, the User Equipment shall not repeat the procedure.

Reference

3GPP TS 24.008 clause 4.7.4.1.

12.3.1.3.3 Test purpose

To test the behaviour of the UE with respect to the attempt counter.

12.3.1.3.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

The UE performs a PS attach procedure.

The UE initiates a PS detach procedure (attempt counter zero). The SS does not answer with DETACH ACCEPT message before T3321 timeout.

The UE initiates a new PS detach procedure (attempt counter one) after T3321 expires. The SS does not answer with DETACH ACCEPT message before T3321 timeout.

The UE initiates a new PS detach procedure (attempt counter two) after T3321expires. The SS does not answer with DETACH ACCEPT message before T3321 timeout.

The UE initiates a new PS detach procedure (attempt counter three) after T3321 expires. The SS does not answer with DETACH ACCEPT message before T3321 timeout.

The UE initiates a new PS detach procedure (attempt counter four) after T3321 expires. The SS does not answer with DETACH ACCEPT message before T3321 timeout.

The UE initiates a new PS detach procedure with attempt counter five (after T3321expires). The SS does not answer with DETACH ACCEPT message before T3321 timeout.

At T3321 timeout in the UE, the UE then deletes the logical link since the retransmissions have been repeated four times.

The UE performs a new PS attach procedure.

T3321; 15 seconds.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 25. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Attach result = 'GPRS only attached'<br>Routing area identity = RAI-1 |
| 5 | UE | | | The UE initiates a PS detach (without power off) by MMI or AT command. |
| 6 | -> | | DETACH REQUEST | Detach type = 'normal detach, GPRS detach' |
| 7 | SS | | | No response is given from the SS. |
| 8 | SS | | | The SS verifies that the time between the detach requests is 15 seconds |
| 9 | -> | | DETACH REQUEST | Detach type = 'normal detach, GPRS detach' |
| 10 | SS | | | No response is given from the SS. |
| 11 | SS | | | The SS verifies that the time between the detach requests is 15 seconds |
| 12 | -> | | DETACH REQUEST | Detach type = 'normal detach, GPRS detach' |
| 13 | SS | | | No response is given from the SS. |
| 14 | SS | | | The SS verifies that the time between the detach requests is 15 seconds |
| 15 | -> | | DETACH REQUEST | Detach type = 'normal detach, GPRS detach' |
| 16 | SS | | | No response is given from the SS. |
| 17 | SS | | | The SS verifies that the time between the detach requests is 15 seconds |
| 18 | -> | | DETACH REQUEST | Detach type = 'normal detach, GPRS detach' |
| 19 | SS | | | No response is given from the SS within 40 seconds and SS verifies that the UE will not send a DETACH REQUEST again. |
| 20 | UE | | | Initialte a PS attach |
| 21 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 21a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 21b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 21c | SS | | | The SS starts integrity protection. |
| 22 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Attach result = 'GPRS only attached'<br>Routing area identity = RAI-1 |
| 23 | | | | UE is switched off or power is removed (see ICS) |
| 24 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS detach' |
| 24a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 25 | UE | | | The UE is set in UE operation mode A (see ICS) and the test is repeated from step 2 to step 24. |

Specific message contents

None.

12.3.1.3.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attaché procedure with the information elements specified in the above Expected Sequence.

At step9, 12, 15 and 18, when a T3321 expires with the attempt counter less than five, UE shall:

- initiate the new PS detach procedure.

At step19, when the attempt counter is greater than or equal to five, UE shall:

- not repeat the PS detach procedure.

At step20, UE shall:

- initiate the PS attaché procedure.

## 12.3.1.4 PS detach / abnormal cases / GMM common procedure collision

12.3.1.4.1 Definition

12.3.1.4.2 Conformance requirement

When any of the GMM common messages P-TMSI REALLOCATION COMMAND, GMM STATUS or GMM INFORMATION is received by the UE while waiting for a DETACH ACCEPT message with detach cause different from "power off", the UE shall ignore the GMM common message.

Reference

3GPP TS 24.008 clause 4.7.4.1.

12.3.1.4.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

12.3.1.4.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The following test procedure is repeated for sequence counter k = 1,2,3:

The UE performs a PS attach.

The UE initiates a PS detach. The SS initiates a P-TMSI REALLOCATION COMMAND message (k=1), a GMM STATUS message (k=2) and a GMM INFORMATION message (k=3). The UE shall ignore the GMM common messages and continue with the PS detach procedure. The sending of the P-TMSI REALLOCATION COMMAND message (k = 1), the GMM STATUS message (k = 2), the GMM INFORMATION message (k = 3) and the DETACH ACCEPT message shall be completed within Timer T3321 -10%.

The SS signal to the UE, but no response is received, as the signalling link is disconnected.

Expected Sequence

The test sequence is repeated for k = 1 … 3

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | UE | | | The UE initiates a detach (without power off) by MMI or AT command. |
| 7 | -> | | DETACH REQUEST | Detach type = 'normal detach, GPRS detach' |
| 8A (k=1) | SS | | | The SS sends a P-TMSI REALLOCATION COMMAND message |
| 9A (k=1) | <- | | P-TMSI REALLOCATION COMMAND | |
| 10A (k=1) | UE | | | The UE ignores the message. This is verified for 10 seconds. |
| 8B (k=2) | SS | | | The SS sends a GMM STATUS message |
| 9B (k=2) | <- | | GMM STATUS | |
| 10B (k=2) | UE | | | The UE ignores the message. This is verified for 10 seconds. |
| 8C (k=3) | SS | | | The SS sends a GMM INFORMATION message |
| 9C (k=3) | <- | | GMM INFORMATION | |
| 10C (k=3) | UE | | | The UE ignores the message which is verified for 10 seconds or if GMM INFORMATION message not implemented, sends a GMM STATUS with GMM Cause 'Message type non-existent or not implemented'. |
| 11 | <- | | DETACH ACCEPT | The SS responds to the DETACH REQUEST |
| 12 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 13 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |

Note: Steps 8x, 9x, 10x and 11 shall be completed within Timer T3321 -10%.

Specific message contents

None.

12.3.1.4.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step 10A, 10B, 10C and 13, when any of the GMM common messages P-TMSI REALLOCATION COMMAND, GMM STATUS or GMM INFORMATION is received by the UE while waiting for a DETACH ACCEPT message with detach cause different from "power off, UE shall:

- ignore any of the GMM common message.

### 12.3.1.5 PS detach / power off / accepted / PS/IMSI detach

#### 12.3.1.5.1 Definition

#### 12.3.1.5.2 Conformance requirement

The UE detach the IMSI for PS and non-PS services.

Reference

3GPP TS 24.008 clause 4.7.4.1.

#### 12.3.1.5.3 Test purpose

To test the behaviour of the UE for the detach procedure.

#### 12.3.1.5.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE performs a combined PS attach procedure (for PS and non-PS services).

The UE sends a DETACH REQUEST message to the SS. The UE then deletes the logical link.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is setto attach to both the PS and non-PS services (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | SS | | | The SS releases the RRC connection. |
| 6 | UE | | | The UE is switched off (see ICS). |
| 6a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Detach". |
| 7 | -> | | DETACH REQUEST | Detach type = 'power switched off, combined GPRS / IMSI detach' |
| 7a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |

Specific message contents

None.

#### 12.3.1.5.5 Test requirements

At step 2a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

At step 6a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach".

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step7, when the UE is switched off, UE shall:

- send the DETACH REQUEST message to SS with the Detach type = 'power switched off, combined GPRS/ IMSI detach'.

### 12.3.1.6 PS detach / accepted / PS/IMSI detach

#### 12.3.1.6.1 Definition

#### 12.3.1.6.2 Conformance requirement

The UE detach the IMSI for PS and non-PS services.

Reference

3GPP TS 24.008 clause 4.7.4.1.

12.3.1.6.3 Test purpose

To test the behaviour of the UE for the detach procedure.

12.3.1.6.4 Method of test

Initial condition

System Simulator:

- One cell operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

- Support of PS service Yes/No
  UE operation mode A Yes/No
  Switch off on button Yes/No
  Automatic PS attach procedure at switch on or power on Yes/No
  User requested combined PS and non-PS detached without powering off Yes/No

Test procedure

The UE performs a combined PS attach procedure (for PS and non-PS services).

The UE sends a DETACH REQUEST message to the SS. When the UE receives the DETACH ACCEPT, the UE then deletes the logical link.

The SS signal to the UE, but no response is received, as the signalling link is disconnected.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set to attach to both the PS and non-PS services (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | SS | | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | SS | | | The SS releases the RRC connection. |
| 6 | UE | | | The UE initiates a detach (without power off) by MMI or AT command (see ICS). |
| 6a | SS | | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Detach". |
| 7 | -> | | DETACH REQUEST | Detach type = 'normal detach, combined GPRS / IMSI detach' |
| 8 | <- | | DETACH ACCEPT | |
| 8a | SS | | | The SS releases the RRC connection. |
| 9 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 10 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 11 | <- | | PAGING TYPE1 | Mobile identity = IMSI<br>Paging order is for CS services. |
| 12 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |

Specific message contents

None.

12.3.1.6.5 Test requirements

At step 2a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

At step 6a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach".

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step10, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

At step12, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

### 12.3.1.7 PS detach / accepted / IMSI detach

#### 12.3.1.7.1 Definition

#### 12.3.1.7.2 Conformance requirement

The UE shall detach for CS services.

Reference

3GPP TS 24.008 clause 4.7.4.1.

#### 12.3.1.7.3 Test purpose

To test the behaviour of the UE for the detach procedure.

#### 12.3.1.7.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode I.

User Equipment:

- The UE has a valid IMSI.

Related ICS/IXIT statements

- Support of PS service Yes/No
  UE operation mode A Yes/No
  Switch off on button Yes/No
  Automatic PS attach procedure at switch on or power on Yes/No
  User requested non-PS detached Yes/No

Test procedure

The UE performs a combined PS attach procedure (for PS and non-PS services).

The UE performs an PS detach (for non-PS services).

CS services are not possible.

The UE attach for non-PS services by a routing area update procedure and CS services are again possible.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | UE | | | The UE initiates a detach for non-PS services (without power off) (see ICS). |
| 7 | -> | | DETACH REQUEST | Detach type = 'normal detach, IMSI detach' |
| 8 | <- | | DETACH ACCEPT | |
| 9 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 9a | -> | | RRC CONNECTION REQUEST | |
| 9b | <- | | RRC CONNECTION SETUP | |
| 9c | -> | | RRC CONNECTION SETUP COMPLETE | |
| 10 | -> | | SERVICE REQUEST | service type = "paging response" |
| 10a | <- | | RRC CONNECTION RELEASE | |
| 10b | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 11 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services.<br>Paging order is for RRC connection. |
| 12 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| 13 | UE | | | The UE initiates an attach for non-PS services by a RA update procedure (see ICS). |
| 14 | -> | | ROUTING AREA UPDATE REQUEST | Update type = "Combined RA/LA updating with IMSI attach"<br>Old Routing area identity = RAI-1 |
| 15 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated"<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-1 |
| 16 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 17 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 18 | -> | | RRC CONNECTION REQUEST | |
| 19 | <- | | RRC CONNECTION SETUP | |
| 20 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 21 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 22 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 23 | -> | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

12.3.1.7.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step10, after the detach procedure (Detach type = 'normal detach, IMSI detach') is completed, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step12, after the detach procedure (Detach type = 'normal detach, IMSI detach') is completed, UE shall:

- not respond to the paging message for CS.

At step21, after the routing area updating procedure (Update type = 'Combined RA/LA updating') is completed, UE shall:

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

## 12.3.1.8 PS detach / abnormal cases / change of cell into new routing area

12.3.1.8.1 Definition

12.3.1.8.2 Conformance requirement

When a change of cell into a new routing area is performed before DETACH ACCEPT message is received by the UE, the UE shall abort the PS detach procedure and re-initiate it after the routing area update procedure.

Reference

3GPP TS 24.008 clause 4.7.4.1.

12.3.1.8.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

12.3.1.8.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) and cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).
Both cells are operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
User requested combined PS and non-PS detached without powering off Yes/No

Test procedure

The UE performs a combined PS attach procedure (for PS and non-PS services).

Sufficient time is given for the UE to identify the neighbour cell before the UE is triggered to initiate a PS detach procedure. The DETACH ACCEPT message is delayed from the SS.

The UE performs a cell reselection to a cell in a new routing area and performs a routing area update procedure.

The UE shall re-initiate a PS detach procedure when the routing area update procedure is finished.

The UE deletes the logical link.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 2 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' Mobile identity = IMSI TMSI status = no valid TMSI available |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature MS identity = TMSI-1 Routing area identity = RAI-1 |
| 6 | -> | | ATTACH COMPLETE | |
| 6a | | SS | | SS waits 30 sec. |
| 7 | UE | | | The UE initiates a PS detach (without power off) by MMI or AT command. |
| 8 | -> | | DETACH REQUEST | Detach type = 'normal detach, combined GPRS / IMSI detach' |
| 9 | | SS | | No response to the DETACH REQUEST message is given by the SS |
| | | | | The following messages are sent and shall be received on cell B. |
| 10 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell B to the "Serving cell". (see note) Cell B is preferred by the UE. |
| 11 | UE | | | The UE performs a RA update in the new cell. |
| 12 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating' Old P-TMSI signature=P-TMSI-1 signature Old Routing area identity = RAI-1 TMSI status = valid TMSI available or IE omitted |
| 13 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-4 |
| 14 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 15 | -> | | DETACH REQUEST | The detach is automatically re-attempted. Detach type = 'normal detach, combined GPRS / IMSI detach' |
| 16 | <- | | DETACH ACCEPT | |
| NOTE: The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 12.3.1.8.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step12, when a change of cell into a new routing area is performed before DETACH ACCEPT message is received by the UE, UE shall:

- abort a PS detach procedure.
- perform routing area updating procedure.

At step15, when the UE completes a routing area updating procedure, UE shall:

- re-initiate the PS detach procedure.

### 12.3.1.9 PS detach / abnormal cases / PS detach procedure collision

#### 12.3.1.9.1 Definition

#### 12.3.1.9.2 Conformance requirement

When a DETACH REQUEST is received by the UE while waiting for a DETACH ACCEPT message, the UE shall answer the network initiated GPRS detach procedure.

Reference

3GPP TS 24.008 clause 4.7.4.1.

#### 12.3.1.9.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

#### 12.3.1.9.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
User requested combined PS and non-PS detached without powering off Yes/No

Test procedure

The UE performs a combined PS attach procedure (for PS and non-PS services).

The UE initiates a PS detach. The SS does not answer the detach procedure, but initiates a detach procedure (cause re-attach not required). The UE shall continue with the network initiated detach procedure.

The UE deletes the logical link.

PS and CS services are not possible.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A(see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | UE | | | The UE initiates a PS detach (without power off) by MMI or AT command. |
| 7 | -> | | DETACH REQUEST | Detach type = 'normal detach, combined GPRS / IMSI detach' |
| 8 | <- | | DETACH REQUEST | Detach type = 're-attach not required' |
| 9 | -> | | DETACH ACCEPT | The UE answers the network initiated detach. |
| 10 | <- | | DETACH ACCEPT | The SS answers the UE initiated detach. |
| 11 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 12 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 13 | <- | | PAGING TYPE 1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 14 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |

Specific message contents

None.

12.3.1.9.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step9, when the UE receives DETACH REQUEST message from SS before UE initiated GPRS detach procedure has been completed, UE shall:

- send the DETACH ACCEPT message to SS.

At step12, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

At step14, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

## 12.3.2 Network initiated PS detach procedure

### 12.3.2.1 PS detach / re-attach not required / accepted

#### 12.3.2.1.1 Definition

#### 12.3.2.1.2 Conformance requirement

The UE detach the IMSI for PS services.

Reference

3GPP TS 24.008 clause 4.7.4.2.

#### 12.3.2.1.3 Test purpose

To test the behaviour of the UE for the detach procedure.

#### 12.3.2.1.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II (in case of UE operation mode A).

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A).

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE performs a PS attach procedure.

The SS sends a DETACH REQUEST message to the UE. The UE then deletes the logical link.

The SS signal to the UE, but no response is received, as the signalling link is disconnected.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | The SS is set in network operation mode II. |
| 2 | UE | | | The UE is set to either attach to PS only or both the PS and non-PS services (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3a | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 6 | -> | | ATTACH COMPLETE | |
| 7 | | SS | | The SS initiates a PS detach. |
| 8 | <- | | DETACH REQUEST | Detach type = 're-attach not required'<br>GMM cause = ‘GPRS services and non-GPRS services not allowed’ |
| 9 | -> | | DETACH ACCEPT | |
| 9a | | SS | | The SS releases the RRC connection. |
| 10 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 11 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |

Specific message contents

None.

#### 12.3.2.1.5 Test requirements

At step 3a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step9, when the UE receives the DETACH REQUEST message from SS and the detach type IE indicates 're-attach not required', the UE shall:

- send DETACH ACCEPT message to SS.

At step11, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

### 12.3.2.2 PS detach / rejected / IMSI invalid / PS services not allowed

#### 12.3.2.2.1 Definition

#### 12.3.2.2.2 Conformance requirement

1) If the network performs a PS detach procedure with the cause 'GPRS services not allowed', the User Equipment shall consider USIM invalid for PS services until power is switched off or USIM is removed.

2) If the network performs a PS detach procedure with the cause 'GPRS services not allowed' the User Equipment shall delete the stored RAI, PS-CKSN, P-TMSI and P-TMSI signature.

Reference

3GPP TS 24.008 clause 4.7.4.2.

12.3.2.2.3 Test purpose

To test the behaviour of the UE if the network orders a PS detach procedure with the cause 'GPRS services not allowed' (no valid PS-subscription for the IMSI).

12.3.2.2.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (HPLMN, RAI-1) and cell B in MCC2/MNC1/LAC1/RAC1 (RAI-2).
Both cells are operating in network operation mode II.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No
USIM removal possible without powering down Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS performs a detach with the cause value 'GPRS services not allowed'. The SS checks that the UE does not perform PS attach in another PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | SS | | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 2 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 22. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | UE | | Registration on CS | See TS 34.108 This is applied only for UE in UE operation mode A. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = P-TMSI-1 Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 |
| 6 | -> | | ATTACH COMPLETE | |
| 7 | <- | | DETACH REQUEST | Detach type = 're-attach not required' Cause = 'GPRS services not allowed' |
| 8 | -> | | DETACH ACCEPT | |
| | | | | The following messages are sent and shall be received on cell B. |
| 9 | SS | | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 10 | UE | | | Cell B is preferred by the UE. Step 11 is only performed for UE Operation Mode A. |
| 11 | UE | | Registration on CS | See TS 34.108 This is applied only for UE in UE operation mode A. Parameter mobile identity is IMSI. |
| 12 | | | | The UE initiates an attach automatically (see ICS), by MMI or AT commands. |
| 13 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| 14 | UE | | | If possible (see ICS) USIM removal is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 15 | UE | | | The UE gets the USIM replaced, is powered up or switched on and initiates an attach (see ICS). |
| 15a | UE | | Registration on CS | See TS 34.108 This is applied only for UE in UE operation mode A. |
| 16 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = IMSI |
| 16a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 16b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 16c | SS | | | The SS starts integrity protection. |

| | | | |
|---|---|---|---|
| 17 | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-2 |
| 18 | -> | ATTACH COMPLETE | |
| 19 | UE | | The UE is switched off or power is removed (see ICS). |
| 20 | -> | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS detach' |
| 20a | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 21 | | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note) |
| 22 | UE | | The UE is set in UE operation mode A (see ICS) and the test is repeated from step 3 to step 18. |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

12.3.2.2.5 Test requirements

At step4 and 15, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, when the UE receives the DETACH REQUEST message (Detach type = 're-attach not required', Cause = 'GPRS services not allowed') from SS, UE shall:

- send DETACH ACCEPT message.

At step13, UE shall:

- not perform PS attach procedure.

## 12.3.2.3 PS detach / IMSI detach / accepted

12.3.2.3.1 Definition

12.3.2.3.2 Conformance requirement

The UE detach the IMSI for PS services.

Reference

3GPP TS 24.008 clause 4.7.4.2.

12.3.2.3.3 Test purpose

To test the behaviour of the UE for the detach procedure.

12.3.2.3.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

The UE performs a combined PS attach procedure (for PS and non-PS services).

The SS sends a DETACH REQUEST message to the UE. The UE then performs an IMSI detach (detach for non-PS services).

The SS signal to the UE, but no response is received, as the signalling link is disconnected.

The UE attach for non-PS services by a routing area update procedure. Both PS and CS services are possible.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = IMSI<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | SS | | | The SS initiates a detach for non-PS services. |
| 7 | <- | | DETACH REQUEST | Detach type = 'IMSI detach' |
| 8 | -> | | DETACH ACCEPT | |
| 9 | UE | | | The UE initiates an attach for non-PS services (see ICS). |
| 10 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 11 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-1 |
| 12 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 13 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 14 | -> | | RRC CONNECTION REQUEST | |
| 15 | <- | | RRC CONNECTION SETUP | |
| 16 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 17 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 18 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 19 | -> | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

12.3.2.3.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, when the UE receives the DETACH REQUEST message with Detach type = 'IMSI detach', UE shall;

- send the DETACH ACCEPT message to SS.

At step10, after the completion of the detach procedure, UE shall;

- perform combined routing area updating procedure.

At step17, when the UE receives the paging message for CS domain, UE shall:

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

### 12.3.2.4 PS detach / re-attach requested / accepted

#### 12.3.2.4.1 Definition

#### 12.3.2.4.2 Conformance requirement

When receiving the DETACH REQUEST message and the detach type IE indicates "re-attach required", the UE shall deactivate the PDP contexts and deactivate the logical link(s), if any. The UE shall then send a DETACH ACCEPT message to the network and shall change state to GMM-DEREGISTERED. The UE shall, after the completion of the GPRS detach procedure, initiate a GPRS attach procedure. The UE should also activate PDP context(s) to replace any previously active PDP contexts.

A GPRS UE operating in UE operation mode A or B in network operation mode I, which receives an DETACH REQUEST message with detach type indicating "re-attach required" or "re-attach not required" and no cause code, is only detached for GPRS services in the network.

Reference

3GPP TS 24.008 clause 4.7.4.2.2.

#### 12.3.2.4.3 Test purpose

To test the behaviour of the UE for the detach procedure in case automatic re-attach.

#### 12.3.2.4.4 Method of test

Initial condition

System Simulator:

One cell in operating in network operation mode I.

User Equipment:

The UE has a valid TMSI, P-TMSI and RAI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE performs a combined PS attach procedure (for PS and non-PS services).

The SS sends a DETACH REQUEST message to the UE with cause re-attach. The UE then detaches for PS services. The UE automatically performs a new combined PS attach procedure with Attach Type “GPRS attach while IMSI attached” (for PS services) and PS and CS services are again possible.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Mobile identity = TMSI-1<br>Routing area identity = RAI-1<br>No new P-TMSI and P-TMSI signature assigned |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | SS | | | The SS initiates a detach with re-attach. |
| 7 | <- | | DETACH REQUEST | Detach type = 're-attach required', GMM cause omitted |
| 8 | -> | | DETACH ACCEPT | |
| 9 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 10 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Mobile identity = TMSI-1<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 11 | -> | | ATTACH COMPLETE | |
| 12 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging order is for PS services. |
| 12a | -> | | RRC CONNECTION REQUEST | |
| 12b | <- | | RRC CONNECTION SETUP | |
| 12c | -> | | RRC CONNECTION SETUP COMPLETE | |
| 13 | -> | | SERVICE REQUEST | service type = "paging response" |
| 13a | <- | | RRC CONNECTION RELEASE | |
| 13b | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 14 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 15 | -> | | RRC CONNECTION REQUEST | |
| 16 | <- | | RRC CONNECTION SETUP | |
| 17 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 18 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 19 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 20 | -> | | RRC CONNECTION RELEASE COMPLETE | |

Specific message contents

None.

12.3.2.4.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, when the UE receives DETACH REQUEST message with Detach type = 're-attach required', UE shall;

- send DETACH ACCEPT message to SS.

At step9, after UE completed PS detach procedure with Detach type = 're-attach required', UE shall:

- initiate the combined PS attach procedure with an Attach Type of either 'Combined GPRS/IMSI attach' or ‘GPRS attach while IMSI attached’.

At step13, when the UE receives the paging message for PS domain, UE shall;

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step18, when the UE receives the paging message for CS domain, UE shall:

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

### 12.3.2.5 PS detach / rejected / location area not allowed

#### 12.3.2.5.1 Definition

#### 12.3.2.5.2 Conformance requirement

1) If the network performs a PS detach procedure with the cause 'location area not allowed' the User Equipment shall:

   1.1 not perform combined PS attach when in the same location area.

   1.2 delete any RAI or LAI, P-TMSI, P-TMSI signature and PS ciphering key sequence number
   .

   1.3 store the LAI in the list of the 'forbidden location areas for regional provision of service'.

   1.4 delete any TMSI, LAI and ciphering key sequence number if the UE is IMSI attached and if no RRC connection exists or if the UE is operating in UE operation mode A and an RRC connection exists when the RRC connection is subsequently released.

2) If the network performs a PS detach procedure with the cause 'location area not allowed' the User Equipment shall:

   2.1 perform combined PS attach when a new location area is entered.

   2.2 delete the list of forbidden LAs when power is switched off.

Reference

3GPP TS 24.008 clauses 4.7.4.2.

#### 12.3.2.5.3 Test purpose

To test the behaviour of the UE if the network orders the PS detach procedure with the cause 'Location Area not allowed'.

To test that the UE deletes the list of forbidden LAs when power is switched off.

#### 12.3.2.5.4 Method of test

Initial condition

System Simulator:

Three cells (not simultaneously activated), cell A in MCC2/MNC1/LAC1/RAC2 (RAI-2, Not HPLMN), cell B in MCC2/MNC1/LAC1/RAC2 (RAI-7, Not HPLMN), cell C in MCC2/MNC1/LAC2/RAC1 (RAI-6, Not HPLMN).
All cells are operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
PS attach attempted automatically by outstanding request Yes/No

### Test procedure

The SS orders a PS detach with the cause value 'Location Area not allowed'. The SS checks that the UE does not perform combined PS attach while in the location area, performs PS attach when a new location area is entered and deletes the list of forbidden LAs when switched off. CS services are not possible unless an IMSI attach procedure is performed.

Different types of UE may use different methods to periodically clear the list of forbidden location areas (e.g. every day at 12am). If the list is cleared while the test is being run, it may be necessary to re-run the test.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell ".<br>Set the cell type of cell C to the "Non-Suitable cell ".<br>(see note) |
| 2 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-2 |
| 6 | -> | | ATTACH COMPLETE | |
| 7 | <- | | DETACH REQUEST | Detach type = 're-attach not required'<br>Cause 'Location Area not allowed' |
| 8 | -> | | DETACH ACCEPT | |
| 9 | UE | | | No LOCATION UPDATING REQ with type 'IMSI attach' is sent to the SS<br>(SS waits 30 seconds). |
| 10 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 11 | UE | | | The UE shall not initiate an RRC connection.<br>This is checked during 3 seconds. |
| 12 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 13 | UE | | | No response from the UE to the request.<br>This is checked for 10 seconds |
| | | | | The following messages are sent and shall be received on cell B. |
| 14 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 15 | UE | | | Cell B is preferred by the UE. |
| 16 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 17 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds) |
| 18 | UE | | | No LOCATION UPDATING REQ with type 'IMSI attach' is sent to the SS<br>(SS waits 30 seconds). |
| 19 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 20 | UE | | | The UE shall not initiate an RRC connection.<br>This is checked during 3 seconds. |
| 21 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 22 | | | | No response from the UE to the request.<br>This is checked for 10 seconds |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell C. |
| 23 | | SS | | Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 24 | UE | | | Cell C is preferred by the UE.<br>Step 25 and 26 are only performed by an UE which will not initiate a PS attach automatically (see ICS) |
| 25 conditional | UE | | Registration on CS | See TS34.108<br>Parameter mobile identity is IMSI. |
| 26 conditional | UE | | | The UE initiates an attach by MMI or AT command. |
| 27 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 28 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-6 |
| 29 | -> | | ATTACH COMPLETE | |
| 30 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 31 | -> | | RRC CONNECTION REQUEST | |
| 32 | <- | | RRC CONNECTION SETUP | |
| 33 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 34 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 35 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 36 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 37 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 38 | -> | | RRC CONNECTION REQUEST | |
| 39 | <- | | RRC CONNECTION SETUP | |
| 40 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 41 | -> | | SERVICE REQUEST | service type = "paging response" |
| 42 | <- | | RRC CONNECTION RELEASE | |
| 43 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 44 | UE | | | The UE is switched off or power is removed (see ICS). |
| 45 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, combined GPRS / IMSI detach' |
| 45a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| | | | | The following messages are sent and shall be received on cell B. |
| 46 | UE | | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note)<br>Cell B is preferred by the UE. |
| 47 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | Step 48 is only performed for non-auto attach UE. |
| 48 | UE | | Registration on CS | See TS34.108<br>Parameter mobile identity is TMSI-1 |
| 49 | UE | | | UE initiates an attach automatically (see ICS), by MMI or AT commands. |
| 50 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-6<br>TMSI status = valid TMSI available or IE not present |
| 51 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-2<br>Routing area identity = RAI-7 |
| 52 | -> | | ATTACH COMPLETE | |
| 53 | <- | | PAGING TYPE1 | Mobile identity = TMSI-2<br>Paging order is for CS services. |
| 54 | -> | | RRC CONNECTION REQUEST | |
| 55 | <- | | RRC CONNECTION SETUP | |
| 56 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 57 | -> | | PAGING RESPONSE | Mobile identity = TMSI-2 |
| 58 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 59 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 60 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging order is for PS services. |
| 61 | -> | | RRC CONNECTION REQUEST | |
| 62 | <- | | RRC CONNECTION SETUP | |
| 63 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 64 | -> | | SERVICE REQUEST | service type = "paging response" |
| 65 | <- | | RRC CONNECTION RELEASE | |
| 66 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.3.2.5.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, when the UE receive the DETACH REQUEST message (Detach type = 're-attach not required', Cause = 'Location Area not allowed') from SS, UE shall:

- send the DETACH ACCEPT message.

UE shall perform the following action depending on UE location.

1) UE is in the same location area.

At step9 and 18, UE shall:

- not perform location updating procedure.

At step11 and 20, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for PS domain.

At step13 and 22, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

At step17, UE shall;

- not perform PS attach procedure.

2) UE is in the new location area.

At step27, UE shall;

- perform the combined PS attach procedure.

At step34, when the UE receives the paging message for CS domain with Mobile identity = IMSI, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step41, when the UE receives the paging message for PS domain with Mobile identity = P-TMSI-1, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step50, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence

At step57, when the UE receives the paging message for CS domain with Mobile identity = IMSI, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step64, when the UE receives the paging message for PS domain with Mobile identity = P-TMSI-1, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

### 12.3.2.6 PS detach / rejected / No Suitable Cells In Location Area

#### 12.3.2.6.1 Definition

#### 12.3.2.6.2 Conformance requirement

1. If the network performs a PS detach procedure with the cause 'No Suitable Cells In Location Area', the User Equipment shall:

   1.1 delete the stored LAI, CKSN, TMSI, RAI, PS-CKSN, P-TMSI and P-TMSI signature.

   1.2 store the LA in the 'forbidden location areas for roaming'.

Reference

3GPP TS 24.008 clauses 4.7.4.2.

#### 12.3.2.6.3 Test purpose

To test the behaviour of the UE if the network sends the DETACH REQUEST message with the cause 'No Suitable Cells In Location Area'.

#### 12.3.2.6.4 Method of test

Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC2/RAC1 (RAI-3), cell C in MCC2/MNC1/LAC1/RAC1 (RAI-2)

All three cells are operating in network operation mode I.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

Sintrasearch and Sintersearch values for cells A, B and C are 20 dB.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has valid IMSI.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

The SS sends a DETACH REQUEST message with the cause value 'No Suitable Cells In Location Area'. The SS checks that the UE shall not perform combined PS attach while in the same location area on the same PLMN. The SS checks that the UE shall perform PS attach when the UE enters a suitable cell in a different location area on the same PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>(see note)<br>The SS configures power level of each Cell as follows.<br>Cell A > Cell B = Cell C |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | <- | | DETACH REQUEST | Detach type = 're-attach not required'<br>Cause 'No Suitable Cells In Location Area' |
| 7 | -> | | DETACH ACCEPT | |
| | | | | The following message are sent and shall be received on cell B. |
| 8 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 9 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 10 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-2<br>Routing area identity = RAI-□ |
| 11 | -> | | ATTACH COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.3.2.6.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step9, when the UE enters a suitable cell in a different location area on the same PLMN, UE shall:

- perform the PS attach procedure.

## 12.3.2.7 PS detach / rejected / Roaming not allowed in this location area

### 12.3.2.7.1 Definition

### 12.3.2.7.2 Conformance requirement

1) If the network performs a PS detach procedure with the cause 'Roaming not allowed in this location area' the User Equipment shall:

   1.1 delete any RAI, P-TMSI, P-TMSI signature and PS ciphering key sequence number.

   1.2 set the GPRS update status to GU3 ROAMING NOT ALLOWED.

   1.3 reset the attach attempt counter.

   1.4 store the LAI in the list of "forbidden location areas for roaming".

   1.5 perform a PLMN selection.

2) If the UE is IMSI attached via MM procedures, the UE shall in addition:

   2.1 delete any TMSI, LAI and ciphering key sequence number.

   2.2 reset the location update attempt counter.

#### Reference

3GPP TS 24.008 clauses 4.7.4.2.

### 12.3.2.7.3 Test purpose

To test the behaviour of the UE if the network orders the PS detach procedure with the cause ' Roaming not allowed in this location area '.

### 12.3.2.7.4 Method of test

#### Initial condition

System Simulator:

Three cells (not simultaneously activated), cell A in MCC2/MNC1/LAC1/RAC1 (RAI-2, Not HPLMN), cell B in MCC2/MNC1/LAC1/RAC2 (RAI-7, Not HPLMN), cell C in MCC2/MNC1/LAC2/RAC1 (RAI-6, Not HPLMN).
All cells are operating in network operation mode I.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid IMSI.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

#### Test procedure

The SS orders a PS detach with the cause value ' Roaming not allowed in this location area '. The SS checks that the UE does not perform combined PS attach while in the location area, performs PS attach when a new location area is entered and deletes the list of forbidden LAs when switched off. CS services are not possible unless an IMSI attach procedure is performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | | -> | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 4a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | | <- | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-2 |
| 6 | | -> | ATTACH COMPLETE | |
| 7 | | <- | DETACH REQUEST | Detach type = 're-attach not required'<br>Cause 'Roaming not allowed in this location area ' |
| 8 | | -> | DETACH ACCEPT | |
| 9 | UE | | | No LOCATION UPDATING REQ with type 'IMSI attach' is sent to the SS<br>(SS waits 30 seconds). |
| 10 | | <- | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 11 | UE | | | The UE shall not initiate an RRC connection.<br>This is checked during 3 seconds. |
| 12 | | <- | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 13 | UE | | | No response from the UE to the request.<br>This is checked for 10 seconds |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 14 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 15 | UE | | | Cell B is preferred by the UE. |
| 16 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 17 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds) |
| 18 | UE | | | No LOCATION UPDATING REQ with type 'IMSI attach' is sent to the SS<br>(SS waits 30 seconds). |
| 19 | | <- | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 20 | UE | | | The UE shall not initiate an RRC connection.<br>This is checked during 3 seconds. |
| 21 | | <- | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 22 | | | | No response from the UE to the request.<br>This is checked for 10 seconds |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell C. |
| 23 | | SS | | Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 24 | UE | | | Cell C is preferred by the UE. |
| 25 | UE | | Registration on CS | See TS34.108. Step 25 is only Optionally performed for non-auto attach UE A non auto attach UE may perform CS only registration |
| 26 | UE | | | The UE initiates an attach automatically (See ICS), by MMI or AT command. |
| 27 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 27a | ← | | AUTHENTICATION AND CIPHERING REQUEST | |
| 27b | → | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 27c | | SS | | The SS starts integrity protection. |
| 28 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-6 |
| 29 | -> | | ATTACH COMPLETE | |
| 30 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 31 | -> | | RRC CONNECTION REQUEST | |
| 32 | <- | | RRC CONNECTION SETUP | |
| 33 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 34 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 35 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 36 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 37 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 38 | -> | | RRC CONNECTION REQUEST | |
| 39 | <- | | RRC CONNECTION SETUP | |
| 40 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 41 | -> | | SERVICE REQUEST | service type = "paging response" |
| 42 | <- | | RRC CONNECTION RELEASE | |
| 43 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 44 | UE | | | The UE is switched off or power is removed (see ICS). |
| 45 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, combined GPRS / IMSI detach' |
| 45a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| | | | | The following messages are sent and shall be received on cell B. |
| 46 | UE | | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note)<br>Cell B is preferred by the UE. |
| 47 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | Step 48 is only performed for non-auto attach UE. |
| 48 | UE | | Registration on CS | See TS34.108<br>SS allocates Mobile identity = TMSI-1. |
| 49 | UE | | | UE initiates an attach automatically (see ICS), by MMI or AT commands. |
| 50 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-6<br>TMSI status = valid TMSI available or IE not present |
| 51 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-2<br>Routing area identity = RAI-7 |
| 52 | -> | | ATTACH COMPLETE | |
| 53 | <- | | PAGING TYPE1 | Mobile identity = TMSI-2<br>Paging order is for CS services. |
| 54 | -> | | RRC CONNECTION REQUEST | |
| 55 | <- | | RRC CONNECTION SETUP | |
| 56 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 57 | -> | | PAGING RESPONSE | Mobile identity = TMSI-2 |
| 58 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 59 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 60 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging order is for PS services. |
| 61 | -> | | RRC CONNECTION REQUEST | |
| 62 | <- | | RRC CONNECTION SETUP | |
| 63 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 64 | -> | | SERVICE REQUEST | service type = "paging response" |
| 65 | <- | | RRC CONNECTION RELEASE | |
| 66 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.3.2.7.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, when the UE receive the DETACH REQUEST message (Detach type = 're-attach not required', Cause = ' Roaming not allowed in this location area') from SS, UE shall:

- send the DETACH ACCEPT message.

UE shall perform the following action depending on UE location.

1) UE is in the same location area.

At step9 and 18, UE shall:

- not perform location updating procedure.

At step11 and 20, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for PS domain.

At step13 and 22, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

At step17, UE shall;

- not perform PS attach procedure.

2) UE is in the new location area.

At step27, UE shall;

- perform the combined PS attach procedure.

At step34, when the UE receives the paging message for CS domain with Mobile identity = TMSI-1, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step41, when the UE receives the paging message for PS domain with Mobile identity = P-TMSI-1, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step50, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence

At step57, when the UE receives the paging message for CS domain with Mobile identity = TMSI-2, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step64, when the UE receives the paging message for PS domain with Mobile identity = P-TMSI-2, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

### 12.3.2.8 PS detach / rejected / PS services not allowed in this PLMN

#### 12.3.2.8.1 Definition

#### 12.3.2.8.2 Conformance requirement

If the network performs a PS detach procedure with the cause ' GPRS services not allowed in this PLMN ', the UE:

1. shall delete any RAI, P-TMSI, P-TMSI signature, and PS ciphering key sequence number stored, shall set the PS update status to GU3 ROAMING NOT ALLOWED (and shall store it according to section 4.1.3.2) and shall change to state GMM-DEREGISTERED.
2. shall store the PLMN identity in the "forbidden PLMNs for PS service" list.

If the network performs a PS detach procedure with the cause ' GPRS services not allowed in this PLMN ', the UE operating in UE operation mode A in network operation mode I:

1. shall set the timer T3212 to its initial value and restart it, if it is not already running.
2. is still IMSI attached for CS services in the network.

Reference(s):

3GPP TS 24.008 subclause 4.7.4.2.2

#### 12.3.2.8.3 Test purpose

Test purpose for Test procedure1

To test the behaviour of the UE if the network initiates a PS detach procedure with the cause "GPRS services not allowed in this PLMN" (for Conformance requirement1, 2).

Test purpose for Test procedure2

To test the behaviour of the UE operating in UE operation mode A in network operation mode I if the network initiates a PS detach procedure with the cause "GPRS services not allowed in this PLMN" (for Conformance requirement3, 4).

#### 12.3.2.8.4 Method of test

Proc 1: Test procedure 1

Initial conditions

System Simulator:

Two cells cellA in MCC2/MNC1/LAC1/RAC1(RAI-2, Not HPLMN), cellB in MCC1/MNC2/LAC2/RAC1.
Both cells are operating in network operation mode II.
The PLMN contains Cell B is equivalent to the PLMN that contains Cell A.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid TMSI-1, P-TMSI-1 and RAI-2.

The UE has been registered in the CS domain.

Related ICS/IXIT statement(s)

- Support of PS service Yes/No.
- UE operation mode A Yes/No
- UE operation mode C Yes/No (only if mode A not supported)..
- Switch off on button Yes/No.
- Automatic PS attach procedure at switch on or power on Yes/No.

Test procedure

Two cells are configured.

Cell A transmits with higher power so that the UE attempts an attach procedure to cell A.

Cell B is configured as “non-Suitable Cell”.

The UE initiates a PS attach procedure.

The SS sends a PS detach with the cause "GPRS services not allowed in this PLMN".

The SS verifies that the UE does not perform a periodic ROUTING AREA UPDATE procedure in this PLMN after the timer T3312 is expired and does not respond a paging for PS services.

Cell B transmits with high power so that the UE attempts an attach procedure to cell B.

The UE initiates a PS attach procedure.

The SS verifies that the UE performs a periodic ROUTING AREA UPDATE procedure.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | SS | | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode A or C (see ICS). |
| 2 | SS | | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the " non-Suitable cell " |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-2 |
| 5 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 6 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 7 | SS | | | The SS starts integrity protection. |
| 8 | <- | | ATTACH ACCEPT | Attach result = ' GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-2<br>Equivalent PLMNs = MCC1,MNC2<br>Periodic RA Update Timer (T3312) = 6minutes |
| 9 | -> | | ATTACH COMPLETE | |
| 10 | <- | | DETACH REQUEST | Detach Type = 're-attach not required'<br>Cause = 'GPRS services not allowed in this PLMN' |
| 11 | -> | | DETACH ACCEPT | |
| 12 | SS | | | The SS releases the RRC connection. |
| 13 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging order is for PS services. |
| 14 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 15 | UE | | | The SS verifies that the UE does not attempt to access the network for T3312. |
| | | | | The following messages are sent and shall be received on cell B. |
| 16 | SS | | | If UE is set in UE operation mode C then<br>Set the cell type of cell A to the "Suitable neighbour cell ".<br>If UE is set in UE operation mode A then<br>Set the cell type of cell A to the "Non Suitable neighbour cell ".<br>Set the cell type of cell B to the "Serving cell " (see note) |
| 17 | | | | Cell B is preferred by the UE. |
| 18 | | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A. |
| 19 | | | | The UE initiates an attach automatically (See ICS), by MMI or AT command. |
| 20 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 21 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 22 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 23 | SS | | | The SS starts integrity protection. |

| | | | |
|---|---|---|---|
| 24 | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-9<br>Equivalent PLMNs = MCC2,MNC1<br>Periodic RA Update Timer (T3312) = 6minutes |
| 25 | -> | ATTACH COMPLETE | |
| 25a | SS | | The SS releases the RRC connection. |
| 25b | SS | | The SS verifies that the UE does not attempt to access the network for T3312. |
| 26 | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 27 | -> | ROUTING AREA UPDATING REQUEST | Update type = 'Periodic updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-9 |
| 28 | <- | ROUTING AREA UPDATING ACCEPT | No new mobile identity assigned.<br>P-TMSI and TMSI not included.<br>Update result = 'RA updated'<br>Equivalent PLMNs = MCC2,MNC1 |
| NOTE: The definitions for "Suitable neighbour cell", "Non-suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

Proc 2: Test procedure 2

Initial conditions

System Simulator:

One cell is operating in network operation mode I: MCC2/MNC1/LAC1/RAC1(RAI-2, Not HPLMN).

User Equipment:

The UE has a valid TMSI-1, P-TMSI-1 and RAI-2.

Related ICS/IXIT statement(s)

- Support of PS service Yes/No.
- UE operation mode A Yes/No
- Switch off on button Yes/No.
- Automatic PS attach procedure at switch on or power on Yes/No.

Test procedure

One cell is configured.

The UE initiates a combined attach procedure.

The SS sends a PS detach with the cause "GPRS services not allowed in this PLMN".

The SS verifies that the UE performs a periodic location area updating procedure after the timer T3212 is expired.

The SS verifies that the UE responds a paging for CS services.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-2 |
| 4 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 5 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 6 | SS | | | The SS starts integrity protection. |
| 7 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-2 |
| 8 | -> | | ATTACH COMPLETE | |
| 9 | <- | | DETACH REQUEST | Detach Type = 're-attach not required'<br>Cause = 'GPRS services not allowed in this PLMN' |
| 10 | -> | | DETACH ACCEPT | |
| 11 | | | | The SS releases the RRC connection |
| 12 | SS | | | The SS waits for the UE to expiry the timer T3212. |
| 13 | UE | | Registration on CS | The UE performs a location update procedure. See TS 34.108<br>Mobile identity = IMSI |
| 14 | <- | | PAGING TYPE1 | Mobile identity = IMSI<br>Paging order is for CS services.<br>Paging cause = "Terminating conversational call" |
| 15 | SS | | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call". |
| 16 | -> | | PAGING RESPONSE | Mobile identity = IMSI |
| 17 | | | | The SS releases the RRC connection |

Specific message contents

None.

12.3.2.8.5 Test Requirement

Test Requirement for Test procedure1

At step4, when the UE is powered up or switched on, the UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step11, when the UE receives DETACH REQUEST message with the cause "GPRS services not allowed in this PLMN", the UE shall:

- send DETACH ACCEPT message.

At step13, when the UE receives the paging for PS services with "Mobile identity = P-TMSI-2", the UE shall;

- not respond to the paging for PS services.

At step14, when the time T3312 is expired, the UE shall:

- not attempt to access the network.

At step20, when the UE enters the different cell with the equivalent PLMN, the UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step27, when the time T3312 is expired, the UE shall:

- initiate the periodic routing area updating procedure with the information elements specified in the above Expected Sequence.

Test Requirement for Test procedure2

At step3, when the UE is powered up or switched on, the UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step10, when the UE receives DETACH REQUEST message with cause "GPRS services not allowed in this PLMN ", the UE shall:

- send DETACH ACCEPT message.

At step12, while the SS wait for the timer T3312 to expire, the UE shall:

- not perform the periodic location area updating procedure.

At step13, when the T3212 timer is expired, the UE shall:

- initiate the periodic location area updating procedure.

At step16, when the UE receives the paging for CS services with "Mobile identity = IMSI", the UE shall;

- respond to the paging for CS services by sending the PAGING RESPONSE message.

# 12.4 Routing area updating procedure

This procedure is used to update the actual routing area of an UE in the network.

## 12.4.1 Normal routing area updating

The routing area updating procedure is a GMM procedure used by PS UEs of UE operation mode A or C that are IMSI attached for PS services only.

### 12.4.1.1a Routing area updating / accepted

#### 12.4.1.1a.1 Definition

#### 12.4.1.1a.2 Conformance requirement

1) If the network accepts the routing area updating procedure and reallocates a P-TMSI, the UE shall acknowledge the new P-TMSI and continue communication with the new P-TMSI.

2) If the network accepts the routing area updating procedure from the UE without reallocation of the old P-TMSI, the UE shall continue communication with the old P-TMSI.

3) The routing area updating procedure shall also be used by a UE which is attached for PS services if a new PLMN is entered.

Reference

3GPP TS 24.008 clause 4.7.5, 4.7.5.1.

#### 12.4.1.1a.3 Test purpose

To test the behaviour of the UE if the network accepts the routing area updating procedure.

The following cases are identified:

1) P-TMSI / P-TMSI signature is reallocated.

2) Old P-TMSI / P-TMSI signature is not changed.

To test the behaviour of the UE if the UE enters the new PLMN.

12.4.1.1a.4 Method of test

Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4), cell C in MCC2/MNC1/LAC1/RAC2 (RAI-7).
All three cells are operating in network operation mode II.
The PLMN contains cell C is equivalent to the PLMN that contains cell A.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A) in all cells.

Sintrasearch and Sintersearch values for cells A, B and C are 20 dB.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

1) The UE sends a ROUTING AREA UPDATE REQUEST message. The SS reallocates the P-TMSI and returns ROUTING AREA UPDATE ACCEPT message with a new P-TMSI. The UE acknowledge the new P-TMSI by sending ROUTING AREA UPDATE COMPLETE message. Further communication UE - SS is performed by the new P-TMSI. The UE will not answer signalling addressed to the old P-TMSI.

2) The UE sends a ROUTING AREA UPDATE REQUEST message. The SS accepts the P-TMSI and returns ROUTING AREA UPDATE ACCEPT message without any P-TMSI. Further communication UE - SS is performed by the P-TMSI.

3) The UE sends a ROUTING AREA UPDATE REQUEST message. The SS reallocates the P-TMSI and returns ROUTING AREA UPDATE ACCEPT message with a new P-TMSI. The UE acknowledge the new P-TMSI by sending ROUTING AREA UPDATE COMPLETE message.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | The following messages are sent and shall be received on cell A.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>(see note) |
| 2 | UE | | | The UE is set to attach to PS services only (see ICS). If that is not supported by the UE, goto step 32. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3a | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1<br>Equivalent PLMN: MCC = 2, MNC = 1 |
| 6 | -> | | ATTACH COMPLETE | |
| 6a | | SS | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7a | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 8 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>P-TMSI-2 signatureOld P-TMSI signature=<br>Routing area identOld ity = RAI-1 |
| 8a | | SS | | The SS starts integrity protection. |
| 9 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Mobile identity = P-TMSI-1<br>P-TMSI-1 signature<br>Routing area identity = RAI-4<br>Equivalent PLMNs = MCC2,MNC1 |
| 10 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 11 | | | Void | |
| 11b | | | Void | |
| 11c | | SS | | The SS releases the RRC connection. |
| 11d | <- | | PAGING TYPE1 | Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = Paging order is for PS services. |
| 11e | | SS | | SS verifies that the UE transmits an RRC CONNECTION REQUEST message. SS will reject this request. The IE "Establishment cause" is not checked. |
| 12 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging order is for PS services. |
| 13 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| | | | | The following messages are sent and shall be received on cell A. |
| 14 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>(see note) |
| 15 | UE | | | Cell A is preferred by the UE. |
| 15a | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 16 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-4 |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 16a | | SS | | The SS starts integrity protection. |
| 17 | | <- | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-1 signature<br>Routing area identity = RAI-1<br>Equivalent PLMN: MCC = 2, MNC = 1 |
| 17a | | SS | | The SS releases the RRC connection. |
| 18 | | <- | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services.<br>Paging cause = "Terminating interactive call". |
| 18a | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call" |
| 18b | | | Void | |
| 18c | | | Void | |
| 19 | | -> | SERVICE REQUEST | service type = "paging response" |
| 19aa | | SS | | The SS starts integrity protection. |
| 19a | | SS | | The SS releases the RRC connection. |
| 20 | | SS | | The following messages are sent and shall be received on cell C.<br>Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Serving cell". (see note) |
| 21 | | UE | | Cell C is preferred by the UE. |
| 21a | | UE | Registration on CS | See TS 34.108<br>This is applicable only for UE in UE operation mode A. |
| 22 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 23 | | -> | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-1 |
| 24 | | SS | | The SS starts integrity protection. |
| 25 | | <- | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-3<br>P-TMSI Signature = P-TMSI-3 signature<br>Routing area identity = RAI-7<br>Equivalent PLMNs = MCC1,MNC1 |
| 26 | | -> | ROUTING AREA UPDATE COMPLETE | |
| 27 | | SS | | The SS releases the RRC connection. |
| 28 | | UE | | The UE is switched off or power is removed (see ICS). |
| 29 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Detach". |
| 30 | | -> | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS detach' |
| 31 | | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 32 | | UE | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 3 to step 31. |

NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".

Specific message contents

None.

12.4.1.1a.5 Test requirements

At step 3a, 7a, 15a and 22 the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

At step 18a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Terminating Interactive Call".

At step 29 the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach".

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, UE shall;

- initiate the routing area updating procedure with the information elements specified in the above Expected Sequence.

At step13, when the UE receives the paging message for PS domain with Mobile identity = P-TMSI-2, UE shall:

- not respond to the paging message for PS domain.

At step16, UE shall;

- initiate the routing area updating procedure with the information elements specified in the above Expected Sequence.

At step19, when the UE receives the paging message for PS domain with Mobile identity = P-TMSI-1, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step23, UE shall;

- initiate the routing area updating procedure with the information elements specified in the above Expected Sequence.

## 12.4.1.1b Routing area updating / accepted / Signalling connection re-establishment

12.4.1.1b.1 Definition

12.4.1.1b.2 Conformance requirement

When the UE receives an indication from the lower layers that the RRC connection has been released with cause "Directed signalling connection re-establishment", then the UE shall enter PMM-IDLE mode and initiate immediately a normal routing area update procedure (the use of normal or combined procedure depends on the network operation mode in the current serving cell) regardless whether the routing area has been changed since the last update or not.

Reference

3GPP TS 24.008 clause 4.7.2.5, 4.7.5.1

12.4.1.1b.3 Test purpose

To test the behaviour of the UE if the UE receives a RRC CONNECTION RELEASE message with cause = "Directed signalling connection re-establishment".

12.4.1.1b.4 Method of test

Initial condition

System Simulator:

One cell(Cell A) in MCC1/MNC1/LAC1/RAC1 (RAI-1) operating in network operation mode II. ATT flag is set to 0.

User Equipment:

The UE has a valid TMSI, P-TMSI-1 and RAI-1

The UE has been registered in the CS domain.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

a) The UE initiates a Service request procedure in order to establish the PS signalling connection for the upper layer signalling.

b) After the Service request procedure is complete, the SS sends the RRC CONNECTION RELEASE message with cause = "Directed signalling connection re-establishment" to the UE.

c) After the UE release the RRC connection, the UE initiate immediately a normal routing area update procedure.

### Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If that is not supported by the UE, goto step 19. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI1 |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = ' GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 7 | -> | | SERVICE REQUEST | Service type = "signalling", |
| 8 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 9 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 10 | SS | | | The SS starts integrity protection. |
| 10a | SS | | | After reception of Activate PDP Context request SS sends Activate PDP context Reject (with cause 31) so that timer T3380 is stopped in the UE. |
| 10b | SS | | | A non autoattach UE may optionally send Detach Request. After receiving Detach Request Message, SS does not respond to this and moves to step 11. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 11 | | SS | | The SS releases the RRC connection, using Release cause=Directed Signalling Connection Re-establishment |
| 12 | | | Void | |
| 13 | | SS | | SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Call re-establishment". |
| 14 | | | Void | |
| 15 | | | Void | |
| 16 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>(FOR bit not checked)<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-1 |
| 16a | | | | The SS starts integrity protection. |
| 17 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 18 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 18a | | SS | | If UE transmits Detach Request Message at step 10b, expect to receive the message again at this step. |
| 19 | | | | The UE is set in UE Operation mode A (see ICS). And the test is repeated from step 2 to step 18. |

Specific message contents

None.

#### 12.4.1.1b.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step16, UE shall;

- initiate the routing area updating procedure whether the routing area has been changed since the last update or not.

### 12.4.1.1c Void

### 12.4.1.1dm Handling of MBMS context status information in ROUTING AREA UPDATE procedure/ MBMS Multicast Service

#### 12.4.1.1dm.1 Definition

This Test is applicable for all Rel-6 UEs supporting MBMS multicast services.

#### 12.4.1.1dm.2 Conformance requirement

If the MBMS context status information element is included in the ROUTING AREA UPDATE ACCEPT message, then the MS shall deactivate all those MBMS contexts locally (without peer to peer signalling between the MS and network) which are not in SM state PDP-INACTIVE in the MS, but are indicated by the network as being in state PDP-INACTIVE. If no MBMS context status information element is included, then the MS shall deactivate all those MBMS contexts locally which are not in SM state PDP-INACTIVE in the MS.

Reference

3GPP TS 24.008 [4] clause 4.7.5.1.3.

12.4.1.1dm.3 Test purpose

1. To verify that the UE includes correctly the MBMS context status information in the ROUTING AREA UPDATE REQUEST message.

2. To verify that if the MBMS context status information element is included in the ROUTING AREA UPDATE ACCEPT message, then the UE deactivates all those MBMS contexts locally (without peer to peer signalling between the UE and network) which are not in SM state PDP-INACTIVE in the UE, but are indicated by the network as being in state PDP-INACTIVE.

3. To verify that if no MBMS context status information element is included, then the UE deactivates all MBMS contexts locally which are not in SM state PDP-INACTIVE in the MS.

12.4.1.1dm.4 Method of test

Initial condition

System Simulator:

Three MBMS cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4), cell C in MCC2/MNC1/LAC1/RAC2 (RAI-7).
All three cells are operating in network operation mode II.
The PLMN contains cell C is equivalent to the PLMN that contains cell A.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A) in all cells.

Sintrasearch and Sintersearch values for cells A, B and C are set to 20 dB.

Note: Cell A is mapped to Cell 21, Cell B is mapped to Cell 22 and Cell C is mapped to Cell 24 as found in TS 34.108 [9] clause 6.1.4.3.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN in cell A.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

The UE has one PDP context activated, three MBMS contexts activated in SM state MBMS-ACTIVE.

PDP1: trans_id 0 and nsapi 5

MBMS-1 (MBMS-ACTIVE): trans_id 1 and nsapi 128

MBMS-2 (MBMS-ACTIVE): trans_id 2 and nsapi 129

MBMS-3 (MBMS-ACTIVE): trans_id 3 and nsapi 130

Related ICS/IXIT statements

MBMS Multicast service application available on UE Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No

Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

1) The UE sends a ROUTING AREA UPDATE REQUEST message. The SS verifies the MBMS context status IE and returns a ROUTING AREA UPDATE ACCEPT message with a different MBMS context status IE.

2) The UE sends a ROUTING AREA UPDATE REQUEST message. The SS verifies the MBMS context status IE and returns a ROUTING AREA UPDATE ACCEPT message without an MBMS context status IE.

3) The UE sends a ROUTING AREA UPDATE REQUEST message. The SS verifies the MBMS context status IE is not contained in the message and returns a ROUTING AREA UPDATE ACCEPT message without an MBMS context status IE.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 2 | | | | The following messages are sent and shall be received on cell B. |
| 3 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | → | | ROUTING AREA UPDATE REQUEST | UE sets nsapi 128 and 129 and 130 as 1 in MBMS context Status IE and all other as 0. |
| 5 | | SS | | The SS starts integrity protection. |
| 6 | ← | | ROUTING AREA UPDATE ACCEPT | SS sets nsapi 128 as 1 and nsapi 129 and 130 as 0 in MBMS Context Status IE. UE locally deactivates MBMS context with nsapi 129 and nsapi 130. |
| 7 | → | | ROUTING AREA UPDATE COMPLETE | |
| 8 | | SS | | The SS releases the RRC connection. |
| 9 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 10 | | | | The following messages are sent and shall be received on cell A. |
| 11 | | UE | | Cell A is preferred by the UE. |
| 12 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 13 | → | | ROUTING AREA UPDATE REQUEST | UE sets nsapi 128 as 1 in MBMS context Status IE and all other as 0. SS verifies UE deactivated nsapi 129 and 130. |
| 14 | | SS | | The SS starts integrity protection. |
| 15 | ← | | ROUTING AREA UPDATE ACCEPT | SS does not include PDP context status and MBMS Context Status IE. The UE locally deactivates all MBMS contexts and PDP contexts. |
| 16 | → | | ROUTING AREA UPDATE COMPLETE | |
| 17 | | SS | | The SS releases the RRC connection. |
| 18 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell C to the "Serving cell". (see note) |
| 19 | | | | The following messages are sent and shall be received on cell C. |
| 20 | | UE | | Cell C is preferred by the UE. |
| 21 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 22 | → | | ROUTING AREA UPDATE REQUEST | UE does not include PDP context status IE and MBMS Context Status IE. SS verifies UE deactivated nsapi 128 and UE does not include MBMS and PDP context status IEs when no PDP and MBMS context exists. |
| 23 | | | | The SS starts integrity protection. |
| 24 | ← | | ROUTING AREA UPDATE ACCEPT | SS does not include PDP and MBMS Context Status IEs. |
| 25 | → | | ROUTING AREA UPDATE COMPLETE | |

NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 [9] clause 6.1 "Reference Radio Conditions for signalling test cases only".

Specific message contents

ROUTING AREA UPDATE REQUEST (step 4)

| Information Element | Value/remark |
|---|---|
| MBMS context status | |
| MBMS context status IEI | 35 |
| Length of MBMS context status contents | 1 |
| | 07 (NSAPI 128 =1, NSAPI 129 = 1, NSAPI 130 = 1) |

ROUTING AREA UPDATE ACCEPT (step 6)

| Information Element | Value/remark |
|---|---|
| PDP context status | |
| PDP context status IEI | 32 |
| Length of PDP context status contents | 1 |
| | 2x (NSAPI(5)=1) |
| MBMS context status | |
| MBMS context status IEI | 35 |
| Length of MBMS context status contents | 1 |
| | 01 (NSAPI 128 =1, NSAPI 129 = 0, NSAPI 130 = 0) |

ROUTING AREA UPDATE REQUEST (step 13)

| Information Element | Value/remark |
|---|---|
| MBMS context status | |
| MBMS context status IEI | 35 |
| Length of MBMS context status contents | 1 |
| | 01 (NSAPI 128 =1, NSAPI 129 = 0, NSAPI 130 = 0) |

Step 15: The SS does not include PDP Context status IE and MBMS Context Status IE.

Note: Allocate P-TMSI in all ROUTING AREA UPDATE ACCEPT.

#### 12.4.1.1dm.5 Test requirements

At step 4, the UE shall set nsapi 128, 129 and 130 as 1 in the MBMS context Status IE and all others as 0.

At step 13, the UE shall set nsapi 128 as 1 in the MBMS context Status IE and all others as 0.

At step 22, the UE shall not include the PDP context status IE and the MBMS Context Status IE.

### 12.4.1.2 Routing area updating / rejected / IMSI invalid / illegal ME

#### 12.4.1.2.1 Definition

#### 12.4.1.2.2 Conformance requirement

1) If the network rejects a routing area updating procedure from the User Equipment with the cause 'Illegal ME', the User Equipment shall consider USIM invalid for PS services until power is switched off or USIM is removed.

2) If the network rejects a routing area updating procedure from the User Equipment with the cause 'Illegal ME', the User Equipment shall delete the stored RAI, PS-CKSN, P-TMSI and P-TMSI signature.

Reference

3GPP TS 24.008 clause 4.7.5.1.

#### 12.4.1.2.3 Test purpose

To test the behaviour of the UE if the network rejects the routing area updating procedure of the UE with the cause 'Illegal ME'.

12.4.1.2.4 Method of test

Initial condition

System Simulator:

Three cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4), cell C in MCC2/MNC1/LAC1/RAC1 (RAI-2).
All three cells are operating in network operation mode II (in case of UE operation mode A)
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
USIM removal possible without powering down Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a routing area updating with the cause value 'Illegal ME'. The SS checks that the UE does not perform PS attach in the same or another PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). |
| 2 | SS | | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | | | Void | |
| 4 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts integrity protection. |
| 5 | | <- | ATTACH ACCEPT | No new mobile identity assigned.P-TMSI and P-TMSI signature not included.<br>Attach result = 'GPRS only attached'<br>Routing area identity = RAI-1 |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | SS | | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 8 | | -> | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old Routing area identity = RAI-1 |
| 9 | | <- | ROUTING AREA UPDATE REJECT | GMM cause = 'Illegal ME' |
| 10 | | <- | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>PAGING TYPE1 (used for NW-mode II).<br>Paging order is for PS services. |
| 11 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| | | | | The following messages are sent and shall be received on cell C. |
| 12 | SS | | | Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell A to the “Non-Suitable cell”.<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 13 | UE | | | Cell C is preferred by the UE. |
| 14 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| 15 | UE | | | If possible (see ICS) USIM removal is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 16 | UE | | | The UE gets the USIM replaced, is powered up or switched on and initiates an attach (see ICS). |
| 16a | | | | Step 16b is only performed by UE in operation mode A |

| | | | |
|---|---|---|---|
| 16b | UE | Registration on CS | See TS 34.108<br>SS allocates Mobile identity = TMSI-1. |
| 17 | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 17a | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 17b | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 17c | SS | | The SS starts integrity protection. |
| 18 | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-2 |
| 19 | -> | ATTACH COMPLETE | |
| | | | |

NOTE: The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".

Specific message contents

None.

#### 12.4.1.2.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, UE shall;

- initiate the routing area updating procedure with the information elements specified in the above Expected Sequence.

At step11, after the routing area updating procedure is rejected with GMM cause = 'Illegal ME', UE shall;

- not respond to the paging message for PS domain.

At step14, UE shall,

- not initiate PS attach procedure.

At step17, after the UE is powered up or USIM is replaced, UE shall;

- initiate the PS attach procedure.

### 12.4.1.3 Routing area updating / rejected / UE identity cannot be derived by the network

#### 12.4.1.3.1 Definition

#### 12.4.1.3.2 Conformance requirement

If the network rejects a routing area updating procedure from the User Equipment with the cause 'MS identity cannot be derived by the network', the User Equipment shall delete the stored RAI, PS-CKSN, P-TMSI and P-TMSI signature.

Depending on the manufacturer the UE may or may not perform a PS attach procedure.

Reference

3GPP TS 24.008 clause 4.7.5.1.

#### 12.4.1.3.3 Test purpose

To test the behaviour of the UE if the network rejects the routing area updating procedure of the UE with the cause 'MS identity cannot be derived by the network'.

#### 12.4.1.3.4 Method of test

##### Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).
Both cells are operating in network operation mode II (in case of UE operation mode A).
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

##### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Automatic attach procedure when UE identity cannot be derived by the network Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

##### Test procedure

The SS rejects a normal routing area updating with the cause value 'MS identity cannot be derived by the network'. The UE detach locally. A new PS attach may be performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | The SS is set in network operation mode II. Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 2 | UE | | | The UE is set in UE operation mode C (see ICS). |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity =P-TMSI-1 Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 |
| 6 | -> | | ATTACH COMPLETE | |
| | | | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the " Suitable neighbour cell ". Set the cell type of cell B to the "Serving cell". (see note) |
| 8 | UE | | | Cell B is preferred by the UE. |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-1 |
| 10 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'MS identity cannot be derived by the network' |
| 11 | UE | | | If an automatic attach procedure by the UE is not possible when the UE identity cannot be derived by the network (see ICS) goto step 19. |
| 12 | | | void | |
| 13 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = IMSI |
| 13a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 13b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 13c | | SS | | The SS starts integrity protection. |
| 14 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature Routing area identity = RAI-4 |
| 15 | -> | | ATTACH COMPLETE | |
| 16 | UE | | | The UE is switched off or power is removed (see ICS). |
| 17 | -> | | DETACH REQUEST | Message not sent if power is removed. Detach type = 'power switched off, GPRS detach' |
| 18 | | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 19 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>PAGING TYPE1 (used for NW-mode II).<br>Paging order is for PS services. |
| 20 | UE | | | No response from the UE to the request, as the UE has detached locally. This is checked for 10 seconds. |
| NOTE: The definitions for "Non-Suitable cell", Suitable neighbour cell and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.1.3.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step9, UE shall;

- initiate the routing area updating procedure with the information elements specified in the above Expected Sequence.

UE shall perform the following actions depending on the implementation of the UE.

Case 1) UE supports an Automatic PS attach procedure.

At step13, UE shall;

- initiate the PS attach procedure.

Case 2) UE does not support an Automatic PS attach procedure.

At step20, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

## 12.4.1.4a Routing area updating / rejected / location area not allowed

### 12.4.1.4a.1 Definition

### 12.4.1.4a.2 Conformance requirement

1) If the network rejects a routing area updating procedure from the User Equipment with the cause 'location area not allowed' the User Equipment shall:

   1.1 not perform PS attach when in the same location area.

   1.2 delete the stored RAI, PS-CKSN, P-TMSI, P-TMSI signature and TMSI, LAI and ciphering key sequence number.

   1.3 store the LA in the 'forbidden location areas for regional provision of service'.

   1.4 not delete the list of "equivalent PLMNs".

   1.5 perform a cell selection.

2) If the network rejects a routing area updating procedure from the User Equipment with the cause 'location area not allowed' the User Equipment:

   2.1 may perform routing area update when a new location area is entered.

   2.2 shall delete the list of forbidden LAs after switch off (power off).

Reference

3GPP TS 24.008 clauses 4.7.5.1.

12.4.1.4a.3 Test purpose

To test the behaviour of the UE if the network rejects the routing area updating procedure of the UE with the cause 'Location Area not allowed'.

To test that the UE deletes the list of forbidden LAs when power is switched off.

12.4.1.4a.4 Method of test

Initial condition

System Simulator:

Four cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) , cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4), cell C in MCC1/MNC1/LAC2/RAC1 (RAI-3), cell D in MCC2/MNC1/LAC2/RAC1(RAI-6).
All four cells are operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

The PLMN contains Cell D is equivalent to the PLMN that contains Cell C.

NB: i) Cell D will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
USIM removal possible without powering down Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a routing area updating with the cause value 'Location Area not allowed'. The SS checks that the UE does not perform PS attach while in the location area, performs PS attach when a new location area is entered and deletes the list of forbidden LAs when switched off.

Different types of UE may use different methods to periodically clear the list of forbidden location areas (e.g. every day at 12am). If the list is cleared while the test is being run, it may be necessary to re-run the test.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell C. |
| 1 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell".<br>Set the cell type of cell D to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 33. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell C is preferred by the UE. |
| 3a | | | Void | |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-3<br>Equivalent PLMNs = MCC2,MNC1 |
| 6 | -> | | ATTACH COMPLETE | |
| 6a | | SS | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 8 | | SS | | Cell B is preferred by the UE. |
| 8a | | | | The following step is only performed for UE Operation Mode A. |
| 8b | UE | | Registration on CS | See TS34.108<br>Parameter mobile identity is IMSI |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>P-TMSI-1 signatureOld P-TMSI signature=<br>Routing area identOld ity = RAI-3 |
| 10 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'Location Area not allowed' |
| 10a | | SS | | The SS releases the RRC connection. |
| 11 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>PAGING TYPE1 (used for NW-mode II).<br>Paging order is for PS services. |
| 12 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| | | | | The following messages are sent and shall be received on cell A. |
| 13 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note) |
| 13a | UE | | | The UE performs cell selection. |
| 14 | UE | | | Cell A is preferred by the UE. |
| 15 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds) |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 16 | SS | | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell D to the "Serving cell". (see note) |
| 16a | UE | | | The UE performs cell selection. |
| 17 | UE | | | Cell D is preferred by the UE. |
| | | | | The following messages are sent and shall be received on cell D. |
| 17a | | | | The following step is only performed for UE Operation Mode A. |
| 17b | UE | | Registration on CS | See TS34.108<br>Parameter mobile identity is IMSI |
| | UE | | | The UE initiates a PS attach either automatically or manually (see ICS). |
| 18 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 18a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 18b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 18c | SS | | | The SS starts integrity protection. |
| 19 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-6<br>Equivalent PLMNs = MCC1,MNC1 |
| 20 | -> | | ATTACH COMPLETE | |
| 20a | SS | | | The SS releases the RRC connection. |
| 21 | UE | | | If possible (see ICS) USIM removal is performed, go to Step 21a, 21b.<br>Otherwise if possible (see ICS) switch off is performed, go to Step22.<br>Otherwise the power is removed, go to Step22. |
| A21a | -> | | DETACH REQUEST | Detach type = “GPRS detach” |
| A21b | <- | | DETACH ACCEPT | Go to Step23 |
| 22 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS detach' |
| 22a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 23 | UE | | | The UE gets the USIM replaced, is powered up or switched on and initiates an attach (see ICS). |
| 24 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-2<br>Old Routing area identity = RAI-6 |
| 24a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 24b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 24c | SS | | | The SS starts integrity protection. |
| 25 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-6<br>Equivalent PLMNs = MCC1,MNC1 |
| 26 | -> | | ATTACH COMPLETE | |
| 26a | SS | | | The SS releases the RRC connection. |
| | SS | | | The following messages are sent and shall be received on cell A. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 27 | | | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell D to the "Non-Suitable cell". (see note) |
| 28 | | | | Cell A is preferred by the UE. |
| 28a | | | | The following step is only performed for UE Operation Mode A. |
| 28b | UE | | Registration on CS | See TS34.108 Parameter mobile identity is IMSI |
| 29 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating' Old P-TMSI signature=P-TMSI-1 signature Old Routing area identity = RAI-6 |
| 29a | SS | | | The SS starts integrity protection. |
| 30 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.P-TMSI and P-TMSI signature not included.Update result = 'RA updated'<br><br>Routing area identity = RAI-1 Equivalent PLMNs = MCC2,MNC1 |
| 30a | SS | | | The SS releases the RRC connection. |
| 31 | UE | | | The UE is switched off or power is removed (see ICS). |
| 32 | -> | | DETACH REQUEST | Message not sent if power is removed. Detach type = 'power switched off, GPRS detach' |
| 32a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 33 | SS | | | The SS is set in network operation mode II. |
| 34 | UE | | | The UE is set in UE operation mode A (see ICS), cell A is switched off and the test is repeated from step 3 to step 32. |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.1.4a.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step9, UE shall:

- initiate the routing area updating procedure with the information elements specified in the above Expected Sequence.

At step12, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

At step12 and 15, when in the same location area, UE shall

- not perform PS attach procedure.

At step18, when a new location area is entered, UE shall

- perform the PS attach procedure.

At step24, when the USIM is replaced , UE shall;

- perform the PS attach procedure.

At step29, UE shall;

- initiate the routing area updating procedure with the information elements specified in the above Expected Sequence.

## 12.4.1.4b Routing area updating / rejected / No Suitable Cells In Location Area

### 12.4.1.4b.1 Definition

### 12.4.1.4b.2 Conformance requirement

1) If the network rejects a routing area updating procedure from the User Equipment with the cause 'No Suitable Cells In Location Area', the User Equipment shall:

1.1 store the LA identity in the 'forbidden location areas for roaming'.

1.2 search for a suitable cell in a different location area on the same PLMN.

1.3 not delete equivalent PLMNs list.

1.4 not delete the MM and GMM contexts

#### Reference

3GPP TS 24.008 clauses 4.7.5.1.

### 12.4.1.4b.3 Test purpose

To test the behaviour of the UE if the network rejects the routing area updating procedure with the cause 'No Suitable Cells In Location Area'.

### 12.4.1.4b.4 Method of test

#### Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC2/RAC1 (RAI-3), cell C in MCC1/MNC1/LAC1/RAC2 (RAI-4),

Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.2.

Cell C will be mapped to Cell 7 as found in TS 34.108 clause 6.1.4.2.

Qqualmin value for cells A and C is -16

All three cells are operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

User Equipment:

The UE has valid IMSI.

The UE has been registered in the CS domain.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a routing area updating with the cause value 'No Suitable Cells In Location Area'. The SS checks that the UE shall perform Routing Area Update procedure when the UE enters a suitable cell in a different location area on the same PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following message are sent and shall be received on cell C. |
| 1 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell C is preferred by the UE. |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-4 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>(see note)<br>Cell A is preferred by the UE. |
| 7 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-4<br>Mobile identity = P-TMSI-1 |
| 8 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'No Suitable Cells In Location Area'<br>The following message are sent and shall be received on cell B. |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-4<br>Mobile identity = P-TMSI-1<br>The UE shall initiate a location area updating procedure between steps 8 and 12. |
| 10 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-3 |
| 11 | -> | | ROUTING AREA UPDATE COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 12.4.1.4b.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step7, UE shall;

- initiate the routing area updating procedure.

At step9, when the UE enters a suitable cell in a different location area on the same PLMN, UE shall:

- perform the routing area updating procedure.

### 12.4.1.4c Routing area updating / rejected / PS services not allowed in this PLMN

#### 12.4.1.4c.1 Definition

#### 12.4.1.4c.2 Conformance requirement

If the network rejects a routing area updating procedure from the User Equipment with the cause 'GPRS services not allowed in this PLMN', the User Equipment shall:

- delete any RAI, P-TMSI, P-TMSI signature, and PS ciphering key sequence number stored.
- shall set the PS update status to GU3 ROAMING NOT ALLOWED.
- store the PLMN identity in the "forbidden PLMNs for GPRS service" list.
- not delete the equivalent PLMN list.

UE shall perform the following actions depending on the update type, UE operation mode and network operation mode.

1) UE is in UE operation mode C

   UE shall perform a PLMN selection instead of a cell selection.

2) UE is in UE operation mode A, update type = periodic updating and Network is in network operation mode I

   UE shall set the timer T3212 to its initial value and restart it, if it is not already running.

3) UE is in UE operation mode A and Network is in network operation mode II.

   UE shall be still IMSI attached for CS services in the network.

Reference

3GPP TS 24.008 clause 4.7.5.1.4 #14

#### 12.4.1.4c.3 Test purpose

To test the behaviour of the UE if the network rejects the routing area updating procedure of the UE with the cause 'GPRS services not allowed in this PLMN'.

#### 12.4.1.4c.4 Method of test

Proc 1: Test procedure 1

Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC2/LAC1/RAC1 (RAI-8, Not HPLMN), cell B in MCC1/MNC2/LAC1/RAC2 (RAI-10, Not HPLMN), cell C in MCC2/MNC1/LAC1/RAC1 (RAI-2).
All three cells are operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

The PLMN contains Cell C is equivalent to the PLMN that contains Cell A.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1, RAI-8.

If the UE is in UE operation mode A, then the UE has been registered in the CS domain.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedureThe SS rejects a routing area updating with the cause value 'GPRS services not allowed in this PLMN'. The SS checks that the UE performs PLMN selection.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 20. |
| 2 | SS | | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-8 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | No new mobile identity assigned.P-TMSI and P-TMSI signature not included.<br>Attach result = 'GPRS only attached'<br>Routing area identity = RAI-8<br>Equivalent PLMNs = MCC2,MNC1 |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | SS | | | Set the cell type of cell A to the " Suitable neighbour cell ".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 8 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old Routing area identity = RAI-8 |
| 9 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'GPRS services not allowed in this PLMN' |
| 10 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>PAGING TYPE1 (used for NW-mode II).<br>Paging order is for PS services. |
| 11 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 12 | SS | | | Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell A to the "Serving cell".<br>(see note) |
| 12a | | | | The following step 13 is only performed for UE operation mode C. |

| | | | |
|---|---|---|---|
| 13 | UE | | The UE performs PLMN selection. |
| 14 | UE | | No ATTACH REQUEST or LOCATION UPDATE REQUEST sent to the SS (SS waits 30 seconds). |
| 15 | SS | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell C to the "Serving cell". (see note) |
| 16 | | | The following step is only performed for UE operation mode A. |
| 16a | UE | Registration on CS | See TS34.108 Parameter mobile identity is IMSI |
| 17 | -> | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = IMSI |
| 17a | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 17b | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 17c | SS | | The SS starts integrity protection. |
| 18 | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature Routing area identity = RAI-2 Equivalent PLMNs = MCC1,MNC2 |
| 19 | -> | ATTACH COMPLETE | |
| 20 | | | The UE is set in UE operation mode A (see ICS) and the test is repeated from step 2 to step 19. |
| NOTE: The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

Proc 2: Test procedure2

Initial condition

System Simulator:

One cells, cell A in MCC1/MNC2/LAC1/RAC1 (RAI-8, Not HPLMN) operating in network operation mode I.

T3212 is set to 6 minutes.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-8.

The UE is in UE operation mode A.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE initiates a PS attach procedure with identity P-TMSI. The SS reallocates the P-TMSI and returns ATTACH ACCEPT message with a new P-TMSI and timer T3312. The UE acknowledge the new P-TMSI by sending ATTACH COMPLETE message. A routing area updating procedure is performed at T3312 timeout. The SS rejects a routing area updating with the cause value 'GPRS services not allowed in this PLMN'. The UE sets the timer T3212 to its initial value and restart it, if it is not already running.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-8 |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-8<br>Periodic RA Update Timer (T3312) = 6 minutes |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | SS | | | The SS releases the RRC connection. |
| 5b | SS | | | The SS verifies that the time between the attach and the periodic RA updating is T3312 |
| 6 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Periodic updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-8 |
| 7 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'GPRS services not allowed in this PLMN' |
| 8 | UE | | Registration on CS | See TS 34.108<br>Location Update Procedure is initiated from the UE when T3212 is expired. |
| 9 | -> | | void | |
| 10 | <- | | void | |
| NOTE: The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.1.4c.5 Test requirements

Test requirement for Test procedure1

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, UE shall;

- initiate the routing area updating procedure with the information elements specified in the above Expected Sequence.

At step11, after the routing area updating procedure is rejected with GMM cause = 'GPRS services not allowed in this PLMN', UE shall;

- not respond to the paging message for PS domain.

At step13, UE shall,

- initiate PLMN selection.

At step14, UE shall,

- not start registration procedure on CS or PS domain.

At step17, UE shall;

- initiate the PS attach procedure.

Test requirement for Test procedure 2

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step6, UE shall;

- initiate the routing area updating procedure with the information elements specified in the above Expected Sequence.

At step7, after the routing area updating procedure is rejected with GMM cause = 'GPRS services not allowed in this PLMN', UE shall;

- set the timer T3212 to its initial value and restart it.

At step8, UE shall,

- initiate the periodic location area updating procedure when the timer T3212 is expired.

## 12.4.1.4d Routing area updating / rejected / Roaming not allowed in this location area

### 12.4.1.4d.1 Definition

### 12.4.1.4d.2 Conformance requirement

1) If the network rejects a routing area updating procedure from the User Equipment with the cause 'roaming not allowed in this location area' the User Equipment:

   1.1 shall not perform PS attach when in the same location area.

   1.2 shall store the LA in the 'forbidden location areas for roaming'.

   1.3 shall perform a routing area updating when entering into a new location area if the LAI or the PLMN identity is not contained in any of the lists "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" or "forbidden PLMNs" and the current status is different from "IDLE NO IMSI".

2) The User Equipment shall erase the list of 'Forbidden location areas for roaming' when switched off or when the USIM is removed.

References

3GPP TS 24.008 clause 4.7.5.1.4.

3GPP TS 23.122 clause 4.5.2.

3GPP TS 24.008 clause 4.4.1.

### 12.4.1.4d.3 Test purpose

Test purpose 1

To test that on receipt of a rejection using the 'Roaming not allowed in this location area' cause code, the UE ceases trying a routing area updating procedure on that location area. Successful routing area updating procedure is possible in other location areas.

Test purpose 2

To test that if the UE is switched off or the USIM is removed the list of 'forbidden location areas for roaming' is cleared.

12.4.1.4d.4 Method of test

Proc 1: Test procedure 1

Initial condition

System Simulator:

Two cells, cell A in MCC2/MNC1/LAC1/RAC1 (RAI-2), cell B in MCC2/MNC1/LAC2/RAC1 (RAI-6). Both cells are operating in network operation mode II.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a routing area updating with the cause value 'Roaming not allowed in this location area'. A new attempt for a PS attach is not possible. Successful PS attach procedure is performed in another location area. The UE is moved back to the 1st location area. A routing area updating shall not be performed, as the LA is on the forbidden list.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | UE | | Registration on CS | See TS34.108 SS allocates Mobile identity = TMSI-1. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach ' Mobile identity =IMSI |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-2 |
| 6 | -> | | ATTACH COMPLETE | |
| | | | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the " Non-suitable cell ". Set the cell type of cell B to the "Serving cell". (see note) |
| 8 | UE | | | Cell B is preferred by the UE. |
| 8a | UE | | Registration on CS | See TS 34.108 Location Update Procedure initiated from the UE. |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-2 |
| 10 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 11 | UE | | | The UE initiates an attach by MMI or by AT command. |
| 12 | UE | | | No ATTACH REQUEST sent to SS (SS waits 30 seconds). |
| 13 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2 Paging order is for PS services. |
| 14 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 15 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1 Paging order is for CS services. |
| 16 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| | | | | The following messages are sent and shall be received on cell A. |
| 17 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 18 | UE | | | Cell A is preferred by the UE. |
| 19 | UE | | Registration on CS | See TS 34.108 Location Update Procedure initiated from the UE. SS allocates Mobile identity = TMSI-1. |
| 20 | | | Void | |
| 21 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating' Mobile identity = P-TMSI-2 |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 21a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 21b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 21c | SS | | | The SS starts integrity protection. |
| 22 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-2 |
| 23 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 24 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 25 | | | Void | |
| 26 | | | Void | |
| 27 | | | Void | |
| 28 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 29 | SS | | | The SS releases the RRC connection. |
| 30 | | | Void | |
| 31 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 32 | | | Void | |
| 33 | | | Void | |
| 34 | | | Void | |
| 35 | -> | | SERVICE REQUEST | service type = "paging response" |
| 36 | SS | | | The SS releases the RRC connection. |
| 37 | | | Void | |
| | | | | The following messages are sent and shall be received on cell B. |
| 38 | SS | | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell". (see note) |
| 39 | UE | | | No ROUTING AREA UPDATE REQUEST sent to SS<br>(SS waits 30 seconds). |
| 40 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 41 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Proc 2: Test procedure 2

Initial condition

System Simulator:

Two cells, cell A in MCC2/MNC1/LAC1/RAC1 (RAI-2), cell B in MCC2/MNC1/LAC2/RAC1 (RAI-6). Both cells are operating in network operation mode II.

User Equipment:

The UE has a valid IMSI. UE is Idle Updated on cell A.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
USIM removal possible without powering down Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a routing area updating with the cause value 'Roaming not allowed in this location area'. The UE is switched off for 10 seconds and switched on again. The SS checks that a PS attach is possible on the cell on which the previous routing area updating had been rejected.

If USIM removal is possible without switching off:
The SS rejects a routing area updating with the cause value 'Roaming not allowed in this location area'. The USIM is removed and inserted in the UE. The SS checks that a PS attach procedure and routing area updating procedure is possible on the cell on which the routing area updating had previously been rejected.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS. |
| 3 | UE | | Registration on CS | See TS34.108 SS allocates Mobile identity = TMSI-1. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach ' Mobile identity =IMSI |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-2 |
| 6 | -> | | ATTACH COMPLETE | |
| | | | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the "Non-suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 8 | UE | | | Cell B is preferred by the UE. |
| 8a | UE | | Registration on CS | See TS 34.108 Location Update Procedure initiated from the UE. SS allocates Mobile identity = TMSI-2 |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-2 |
| 10 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 11 | UE | | | The UE initiates an attach by MMI or by AT command. |
| 12 | UE | | | No ATTACH REQUEST sent to SS (SS waits 30 seconds). |
| 13 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2 Paging order is for PS services. |
| 14 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 15 | <- | | PAGING TYPE1 | Mobile identity = TMSI-2 Paging order is for CS services. |
| 16 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| 17 | UE | | | If possible (see ICS) USIM removal is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 18 | UE | | | The UE gets the USIM replaced, is powered up or switched on. |
| 19 | UE | | Registration on CS | See TS 34.108 Location Update Procedure initiated from the UE. SS allocates Mobile identity = TMSI-1 |
| 20 | UE | | | The UE initiates an attach automatically (see ICS) by MMI or AT command. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 21 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach '<br>Mobile identity =P-TMSI-2 |
| 22a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 22b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 22c | | SS | | The SS starts integrity protection. |
| 22 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-6 |
| 23 | -> | | ATTACH COMPLETE | |
| 24 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 25 | | | Void | |
| 26 | | | Void | |
| 27 | | | Void | |
| 28 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 29 | | SS | | The SS releases the RRC connection. |
| 30 | | | Void | |
| 31 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1 |
| 32 | | | Void | |
| 33 | | | Void | |
| 34 | | | Void | |
| 35 | -> | | SERVICE REQUEST | service type = "paging response" |
| 36 | | SS | | The SS releases the RRC connection. |
| 37 | | | Void | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.1.4d.5 Test requirements

Test requirements for Test procedure 1

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step9, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate the routing area update procedure with the information elements specified above Expected Sequence

At step12, when the SS rejects the routing area update procedure with GMM cause = 'Roaming not allowed in this location area', UE shall:

- not initiate a PS attach procedure.

At step14, when the UE receives the paging message for PS domain, UE shall;

- not respond to the paging message for PS domain.

At step16, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

At step21, UE shall:

- initiate the routing area update procedure.

At step28, when the UE receives the paging message for CS domain, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step35, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step41, when the UE receives the paging message for PS domain, UE shall;

- not respond to the paging message for PS domain.

Test requirements for Test procedure 2

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step9, UE shall:

- initiate the routing area update procedure with the information elements specified above Expected Sequence.

At step14, when the UE receives the paging message for PS domain, UE shall;

- not respond to the paging message for PS domain.

At step16, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

At step21, UE shall:

- initiate the PS attach procedure.

At step28, when the UE receives the paging message for CS domain, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step35, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

### 12.4.1.5 Routing area updating / abnormal cases / attempt counter check / miscellaneous reject causes

#### 12.4.1.5.1 Definition

#### 12.4.1.5.2 Conformance requirement

When a routing area updating procedure is rejected with the attempt counter less than five, the UE shall repeat the routing area updating procedure after T3311 timeout.

When a T3311 timeout has occurred during a routing area updating procedure with the attempt counter five, the UE shall start timer T3302.

When the T3302 expire, a new routing area updating procedure shall be initiated.

Reference

3GPP TS 24.008 clause 4.7.5.1.

#### 12.4.1.5.3 Test purpose

To test the behaviour of the UE with respect to the attempt counter.

#### 12.4.1.5.4 Method of test

##### Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4). The ATT-flag shall indicate that the MS should use IMSI attach/detach procedures.
Both cells are operating in network operation mode II (in case of UE operation mode A).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

##### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

##### Test procedure

The UE initiates a routing area updating procedure (attempt counter zero).

The SS rejects the routing area updating procedure with a GMM cause 'congestion' code.

The UE initiates a new routing area updating procedure (attempt counter one) after T3311 expires.

The SS rejects the routing area updating procedure with a GMM cause 'congestion' code.

The UE initiates a new routing area updating procedure (attempt counter two) after T3311 expires.

The SS rejects the routing area updating procedure with a GMM cause 'congestion' code.

The UE initiates a new routing area updating procedure (attempt counter three) after T3311 expires.

The SS rejects the routing area updating procedure with a GMM cause 'congestion' code.

The UE initiates a new routing area updating procedure (attempt counter four) after T3311 expires.

The SS rejects the routing area updating procedure with a GMM cause 'congestion' code.

The UE initiates a new routing area updating procedure with attempt counter five (after T3311 expires).

The SS rejects the routing area updating procedure with a GMM cause 'congestion' code.

The UE shall not perform a new successful routing area updating procedure after T3311 seconds.

The UE initiates a routing area updating procedure with attempt counter zero after T3302 expires with the stored P-TMSI, P-TMSI signature, PS CKSN and RAI.

T3302; set to 12 minutes.

T3311; set to 15 seconds.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). |
| 2 | | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note) |
| 2a | | | Void | |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | UE | | Registration on CS | See TS 34.108<br>This step is applied only for UE in UE operation mode A.<br>Parameter mobile identity is TMSI. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Attach result = 'GPRS only attached'<br>P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7 | | SS | | Cell B is preferred by the UE. |
| 8 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 9 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'Congestion' |
| 10 | | SS | | The SS verifies that the time between the routing area updating requests is 15 seconds |
| 11 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 12 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'Congestion' |
| 13 | | SS | | The SS verifies that the time between the routing area updating requests is 15 seconds |
| 14 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 15 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'Congestion' |
| 16 | | SS | | The SS verifies that the time between the routing area updating requests is 15 seconds |
| 17 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 18 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'Congestion' |
| 19 | SS | | | The SS verifies that the time between the routing area updating requests is 15 seconds |
| 20 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br><br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 21 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'Congestion' |
| 22 | SS | | | The SS verifies that the UE does not attempt to attach for 12 minutes . |
| 23 | SS | | | The SS shall release the PS signalling connection. |
| 23a | | | Void | |
| 24 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br><br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 24a | | | | The SS starts integrity protection. |
| 25 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-3 signature<br>Routing area identity = RAI-4 |
| 26 | -> | | ROUTING AREA UPDATE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.1.5.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, UE shall:

- perform the routing area updating procedure.

UE shall perform the following actions depending on the conditions described below.

Case 1) At step11, 14, 17 and 20, a routing area updating procedure is rejected from SS with the attempt counter less than five,

UE shall:

- repeat the routing area updating procedure after T3311 timeout

Case2) At step22 a routing area updating procedure is rejected from SS with the attempt counter five

At step22, UE shall:

- not initiate a routing area updating procedure.

Case3) At step24, the T3302 expires

UE shall:

- initiate the new routing area updating procedure

### 12.4.1.6 Routing area updating / abnormal cases / change of cell into new routing area

#### 12.4.1.6.1 Definition

#### 12.4.1.6.2 Conformance requirement

When a change of cell into a new routing area is performed before the routing area updating procedure is finished, the UE shall abort the routing area updating procedure and re-initiate it in the new routing area.

Reference

3GPP TS 24.008 clause 4.7.5.1.

#### 12.4.1.6.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

#### 12.4.1.6.4 Method of test

Initial condition

System Simulator:

Three cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4) and cell C In MCC1/MNC1/LAC1/RAC3 (RAI-5).
All cells are operating in network operation mode II (in case of UE operation mode A).
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE initiates a routing area updating procedure. The ROUTING AREA UPDATE ACCEPT message is delayed from the SS. The UE performs a cell update into a new routing area. The UE shall re-initiate a routing area updating procedure in the new routing area.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 18. |
| 2 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 6 | | -> | ATTACH COMPLETE | |
| | | | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 8 | | SS | | Cell B is preferred by the UE. |
| 9 | | -> | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 10 | | SS | | No response to the ROUTING AREA UPDATE REQUEST message is given by the SS |
| | | | | The following messages are sent and shall be received on cell C. |
| 11 | | SS | | Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 12 | | SS | | Cell C is preferred by the UE. |
| 13 | | -> | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 14 | | <- | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-3 signature<br>Routing area identity = RAI-5 |
| 15 | | -> | ROUTING AREA UPDATE COMPLETE | |
| 16 | UE | | | The UE is switched off or power is removed (see ICS). |
| 17 | | -> | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS detach' |

| | | | |
|---|---|---|---|
| 17a | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 18<br>19 | SS<br>UE | | The SS is set in network operation mode II.<br>The UE is set in UE operation mode A (see ICS). Set the cell type of cell C to the "Non-Suitable cell".The test is repeated from step 2 to step 17. |
| NOTE: | The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | |

Specific message contents

None.

12.4.1.6.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step9, UE shall:

- initiate the routing area update procedure.

At step13, when change of cell into a new routing area is performed before the routing area updating procedure is finished, UE shall:

- abort the routing area updating procedure.
- re-initiate new routing area updating procedure in the new routing area.

## 12.4.1.7 Void

## 12.4.1.8 Routing area updating / abnormal cases / P-TMSI reallocation procedure collision

12.4.1.8.1 Definition

12.4.1.8.2 Conformance requirement

When a P-TMSI REALLOCATION COMMAND message is received by the UE while waiting for a ROUTING AREA UPDATE ACCEPT message, the UE shall ignore the P-TMSI reallocation procedure and continue with the routing area updating procedure.

Reference

3GPP TS 24.008 clause 4.7.5.1.

12.4.1.8.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

12.4.1.8.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) and cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).
Both cells are operating in network operation mode II (in case of UE operation mode A).

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No (only if mode C not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

The UE initiates a routing area updating procedure. The SS does not answer the routing area updating procedure, but initiates a P-TMSI reallocation procedure. The UE shall ignore the P-TMSI reallocation procedure and continue with the routing area updating procedure.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). |
| 2 | | SS | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach result = 'GPRS only attached'<br>Mobile identity = IMSI |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 6 | -> | | ATTACH COMPLETE | |
| | | | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 8 | | SS | | Cell B is preferred by the UE. |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-1 |
| 10 | <- | | P-TMSI REALLOCATION COMMAND | Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 11 | UE | | | The UE ignores the P-TMSI reallocation command. |
| 12 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-4 |
| 13 | -> | | ROUTING AREA UPDATE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.1.8.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step9, UE shall:

- initiate the routing area updating procedure.

At step11, when a P-TMSI REALLOCATION COMMAND message is received from SS while waiting for a ROUTING AREA UPDATE ACCEPT message, UE shall:

- ignore the P-TMSI reallocation procedure.
- continue with the routing area updating procedure.

## 12.4.2 Combined routing area updating

The combined routing area updating procedure is a GMM procedure used by PS UEs of UE operation mode A that are IMSI attached for PS and non-PS services. In order to use the combined routing area updating procedure, the network must operate in network operation mode I.

### 12.4.2.1 Combined routing area updating / combined RA/LA accepted

12.4.2.1.1 Definition

#### 12.4.2.1.2 Conformance requirement

1) If the network accepts the combined routing area updating procedure and reallocates a P-TMSI, the UE shall acknowledge the new P-TMSI and continue communication with the new P-TMSI.

2) If the network accepts the combined routing area updating procedure from the UE without reallocation of the old P-TMSI, the UE shall continue communication with the old P-TMSI.

Reference

3GPP TS 24.008 clause 4.7.5.2.

#### 12.4.2.1.3 Test purpose

To test the behaviour of the UE if the network accepts the combined routing area updating procedure.

The following cases are identified:

1) P-TMSI / P-TMSI signature is reallocated.

2) Old P-TMSI / P-TMSI signature is not changed.

3) Mobile terminating CS call is allowed with IMSI.

4) Mobile terminating CS call is allowed with TMSI.

#### 12.4.2.1.4 Method of test

Initial condition

System Simulator:

Two cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4). Both cells operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

1) A combined PS attach procedure is performed. The UE sends a ROUTING AREA UPDATE REQUEST message. The SS reallocates the P-TMSI, unassigns the TMSI and returns ROUTING AREA UPDATE ACCEPT message with a new P-TMSI and IMSI. The UE acknowledge the new P-TMSI by sending ROUTING AREA UPDATE COMPLETE message. Further communication UE - SS is performed by the new P-TMSI. For CS calls, the IMSI is used

2) The UE is CS paged in order to verify that the IMSI is used for CS calls.

3) A combined PS attach procedure is performed. The UE sends an ROUTING AREA UPDATE REQUEST message. The SS accepts the P-TMSI signature and returns ROUTING AREA UPDATE ACCEPT message without any P-TMSI and with a new TMSI. The UE acknowledge the new TMSI by sending ROUTING AREA UPDATE COMPLETE message. Further communication UE-SS is performed by the old P-TMSI. For CS calls, the new TMSI is used.

4) The UE is CS paged in order to verify that the TMSI is used for CS calls.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 1a | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' Mobile identity =IMSI TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | | SS | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 6a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 7 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-1 TMSI status = no valid TMSI available |
| 7a | | SS | | The SS starts integrity protection. |
| 8 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature MS identity = IMSI Routing area identity = RAI-4 |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 9 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 9a | SS | | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 10 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services.<br>Paging cause = "Terminating interactive call". |
| 10a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call". |
| 10b | | | Void | |
| 10c | | | Void | |
| 11 | -> | | SERVICE REQUEST | service type = "paging response" |
| 11aa | SS | | | The SS starts integrity protection. |
| 11a | SS | | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 11b | | | Void | |
| 12 | <- | | PAGING TYPE1 | Mobile identity = IMSI<br>Paging order is for CS services.<br>Paging cause = "Terminating conversational call" |
| 13 | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating conversational call". |
| 14 | | | Void | |
| 15 | | | Void | |
| 16 | -> | | PAGING RESPONSE | Mobile identity = IMSI |
| 17 | SS | | | The SS releases the RRC connection. |
| 18 | | | Void | |
| | | | | The following messages are sent and shall be received on cell A. |
| 19 | SS | | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>(see note) |
| 19a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 20 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-4<br>TMSI status = no valid TMSI available |
| 20a | SS | | | The SS starts integrity protection. |
| 21 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated'<br>No P-TMSI<br>P-TMSI-2 signature<br>Mobile identity = TMSI-1<br>Routing area identity = RAI-1 |
| 22 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 23 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services.<br>Paging cause = "Terminating interactive call". |
| 23a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call". |
| 23b | | | Void | |
| 23c | | | Void | |
| 24 | -> | | SERVICE REQUEST | service type = "paging response" |
| 24aa | SS | | | The SS starts integrity protection. |
| 24a | SS | | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 24b | | | Void | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 25 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services.<br>Paging cause = "Terminating conversational call" |
| 26 | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating conversational call". |
| 27 | | | Void | |
| 28 | | | Void | |
| 29 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 30 | | SS | | The SS releases the RRC connection. |
| 31 | | | Void | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.2.1.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with information elements specified in the above Expected Sequence.

At step7, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate the combined routing area update procedure(Update type = 'Combined RA/LA updating') with the information elements specified above Expected Sequence.

At step9, UE shall:

- acknowledge the new P-TMSI by sending the ROUTING AREA UPDATE COMPLETE message.

At step11, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step16, when the UE receives the paging message for CS domain, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step20, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate the combined routing area update procedure(Update type = 'Combined RA/LA updating') with the information elements specified above Expected Sequence.

At step22, UE shall:

- acknowledge the new TMSI by sending the ROUTING AREA UPDATE COMPLETE message.

At step24, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step29, when the UE receives the paging message for CS domain, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

## 12.4.2.2 Combined routing area updating / UE in CS operation at change of RA

12.4.2.2.1 Definition

#### 12.4.2.2.2 Conformance requirement

PS UE in UE operation mode A that is in an ongoing CS transaction at change of routing area shall initiate the normal routing area updating procedure.

#### Reference

3GPP TS 24.008 clause 4.7.5.2.1

#### 12.4.2.2.3 Test purpose

To test the behaviour of the UE if the routing area is changed during an ongoing circuit switched transmission.

#### 12.4.2.2.4 Method of test

#### Initial condition

System Simulator:

One cell, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) is operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

#### Test procedure

A combined PS attach procedure is performed. SS Initiates a CS call with UE in UE Operation Mode A. The routing area change. The UE will perform the normal routing area updating procedure during the ongoing circuit-switched transaction.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | | Set the cell type of cell A to the "Serving cell". (see note) |
| 1a | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | SS | | | The SS releases the RRC connection. |
| 6 | SS | | | A CS call is initiated. |
| 7 | | | Void | |
| 8 | | | Void | |
| 8a | <- | | UTRAN MOBILITY INFORMATION | The SS conveys updated CN system information for the PS domain to the UE in connected mode, including a new routing area code. |
| 8b | -> | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 9a | SS | | | The SS starts integrity protection. |
| 10 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-4 |
| 11 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 11a | SS | | | The SS releases the PS signalling connection, but keeps the RRC connection. |
| 12 | <- | | PAGING TYPE2 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 13 | -> | | SERVICE REQUEST | service type = "paging response" |
| 13a | SS | | | The SS starts integrity protection. |
| 13b | SS | | | The SS releases the CS call. |
| 14 | SS | | | The SS initiates the RRC connection release. |
| 14a | -> | | ROUTING AREA UPDATE REQUEST | Update type = “combined RA/LA updating” or "combined RA/LA updating with IMSI Attach",<br>Old P-TMSI signature=P-TMSI-1 signature,<br>Old Routing area identity = RAI-4,<br>TMSI status = no valid TMSI available |
| 14b | SS | | | The SS starts integrity protection. |
| 14c | <- | | ROUTING AREA UPDATE ACCEPT | Update result = "combined RA/LA updated",<br>No P-TMSI,<br>P-TMSI-3 signature,<br>Routing area identity = RAI-1 |

NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".

Specific message contents

UTRAN MOBILITY INFORMATION (step 8a)

The contents of the UTRAN MOBILITY INFORMATION message in this test case is identical to the default message in TS 34.108, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| New U-RNTI | Not Present |
| New C-RNTI | Not Present |
| UE Timers and constants in connected mode | Not Present |
| CN information info | |
| - PLMN identity | Not Present |
| - CN common GSM-MAP NAS system information | Not Present |
| - CN domain related information | |
| - CN domain identity | CS domain |
| - CN domain specific GSM-MAP NAS system info | |
| - T3212 | 30 |
| - ATT | 1 |
| - CN domain specific DRX cycle length coefficient | 7 |
| - CN domain related information | |
| - CN domain identity | PS domain |
| - CN domain specific GSM-MAP NAS system info | |
| - RAC | RAC-2 |
| - NMO | 0 (Network Mode of Operation I) |
| - CN domain specific DRX cycle length coefficient | 7 |

#### 12.4.2.2.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with information elements specified in the above Expected Sequence.

At step9, when the UE has received the new RAI from the SS in the UTRAN MOBILITY INFORMATION message, the UE shall:

- initiate the normal routing area updating procedure.

### 12.4.2.3 Combined routing area updating / RA only accepted

#### 12.4.2.3.1 Definition

#### 12.4.2.3.2 Conformance requirement

1) If the network accepts the combined PS attach procedure, but GMM cause code 'IMSI unknown in HLR' is sent to the UE the User Equipment shall delete the stored TMSI, LAI and CKSN. The User Equipment shall consider USIM invalid for non-PS services until power is switched off or USIM is removed.

2) If the network accepts the combined PS attach procedure, but GMM cause code 'MSC temporarily not reachable', 'Network failure' or 'Congestion' is sent to the UE, an UE operation mode A UE may perform an MM IMSI attach procedure.

Reference

3GPP TS 24.008 clause 4.7.5.2.

#### 12.4.2.3.3 Test purpose

Test porpose 1

To test the behaviour of the UE if the network accepts the routing area updating procedure with indication RA only, GMM cause 'IMSI unknown in HLR'.

Test porpose 2

To test the behaviour of the UE if the network accepts the routing area updating procedure with indication RA only, GMM cause 'MSC temporarily not reachable', 'Network failure' or 'Congestion'.

#### 12.4.2.3.4 Method of test

Proc 1: Test Procedure 1

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).
Both cells operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

After attach, the UE sends an ROUTING AREA UPDATE REQUEST message. The SS allocates a P-TMSI and returns ROUTING AREA UPDATE ACCEPT message with a P-TMSI. GMM cause 'IMSI unknown in HLR' is indicated from SS. Further communication UE - SS is performed by the P-TMSI. CS services are not possible.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note) |
| 1a | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 8 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-4<br>GMM cause = 'IMSI unknown in HLR' |
| 9 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 10 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services. |
| 10a | -> | | RRC CONNECTION REQUEST | |
| 10b | <- | | RRC CONNECTION SETUP | |
| 10c | -> | | RRC CONNECTION SETUP COMPLETE | |
| 11 | -> | | SERVICE REQUEST | service type = "paging response" |
| 11a | <- | | RRC CONNECTION RELEASE | |
| 11b | -> | | RRC CONNECTION RELEASE COMPLETE | |
| 12 | <- | | PAGING TYPE1 | Mobile identity = IMSI<br>Paging order is for CS services. |
| 13 | UE | | | The UE shall not initiate an RRC connection.<br>This is checked during 3 seconds. |
| NOTE: The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Proc 2: Test Procedure 2

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).
Both cells operating in network operation mode I. T3212 is set to 6 minutes.

User Equipment:

The UE has a valid IMSI.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Automatic MM IMSI attach procedure for UE operation mode A UE Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

After attach, the UE sends an ROUTING AREA UPDATE REQUEST message . The SS allocates a new P-TMSI signature and returns ROUTING AREA UPDATE ACCEPT message. GMM cause 'MSC temporarily not reachable', 'Network failure' or 'Congestion' is indicated from SS. The cause code is arbitrarily chosen. This procedure is repeated until the routing area updating attempt counter is equal to five. An UE operation mode A UE may perform an MM IMSI attach procedure (according to the ICS statement). Further communication UE - SS is performed by the P-TMSI. The existence of a signalling channel is verified by a request for mobile identity. It is further verified that the UE after a successful IMSI attach procedure can perform CS services.

### Expected Sequence

Dependent whether the option 'Automatic MM IMSI attach procedure for UE operation mode A UE' is not supported or not, the steps 1-13 or 14-35 apply depending on manufacturer (see ICS).

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | The following messages are sent and shall be received on cell A<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note) |
| 1a | | UE | | The UE is set in UE operation mode A and no automatic MM IMSI attach procedure is indicated (see ICS). |
| 2 | | UE | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or 'GPRS attach while IMSI attached'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | | SS | | The following messages are sent and shall be received on cell B.<br>Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 7 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 8 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1P-TMSI-1 signature<br>Routing area identity = RAI-4<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 9 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 10 | | | | The routing area updating attempt counter =1.<br>The combined routing area updating procedure is reinitialised at the expiry of T3311 |
| 11 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-4<br>TMSI status = no valid TMSI available |
| 12 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-4<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 13 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 14 | | | | The routing area updating attempt counter =2.<br>The combined routing area updating procedure is reinitialised at the expiry of T3311 |
| 15 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-4<br>TMSI status = no valid TMSI available |
| 16 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-4<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 17 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 18 | | | | The routing area updating attempt counter =3.<br>The combined routing area updating procedure is reinitialised at the expiry of T3311 |
| 19 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-4<br>TMSI status = no valid TMSI available |
| 20 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-4<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 21 | -> | | ROUTING AREA UPDATE COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 22 | | | | The routing area updating attempt counter =4.<br>The combined routing area updating procedure is reinitialised at the expiry of T3311 |
| 23 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-4<br>TMSI status = no valid TMSI available |
| 24 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-4<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 25 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 26 | | | | The routing area updating attempt counter =5.<br>The combined routing area updating procedure is reinitialised at the expiry of T3311 |
| 27 | UE | | | The UE is switched off or power is removed (see ICS). |
| 28 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS detach'<br>Stop the sequence. |
| 28a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| | | | | The following messages are sent and shall be received on cell B |
| 29 | UE | | | The UE is set in UE operation mode A and automatic MM IMSI attach procedure is indicated (see ICS). |
| 30 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 31 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or 'GPRS attach while IMSI attached'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 31a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 31b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 31c | SS | | | The SS starts integrity protection. |
| 32 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-4 |
| 33 | -> | | ATTACH COMPLETE | |
| | | | | The following messages are sent and shall be received on cell A. |
| 34 | SS | | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell ".<br>(see note) |
| 35 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-4<br>TMSI status = no valid TMSI available |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 36 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 37 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 38 | | | | The routing area updating attempt counter =1.<br>The combined routing area updating procedure is reinitialised at the expiry of T3311 |
| 39 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 40 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 41 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 42 | | | | The routing area updating attempt counter =2.<br>The combined routing area updating procedure is reinitialised at the expiry of T3311 |
| 43 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 44 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 45 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 46 | | | | The routing area updating attempt counter =3.<br>The combined routing area updating procedure is reinitialised at the expiry of T3311 |
| 47 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 48 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 49 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 50 | | | | The routing area updating attempt counter =4.<br>The combined routing area updating procedure is reinitialised at the expiry of T3311 |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 51 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 52 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1<br>GMM cause = 'MSC temporarily not reachable', 'Network failure' or 'Congestion' (arbitrarily chosen) |
| 53 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 54 | | | | The routing area updating attempt counter =5. |
| 55 | UE | | Registration on CS | Optional step.<br>See TS 34.108<br>This is applied only for UE in UE operation mode A.<br>Parameter mobile identity is TMSI-1.<br>Steps 56 - 62 are only performed if the UE has performed the Registration Procedure in step 55. |
| 56 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services. |
| 57 | -> | | RRC CONNECTION REQUEST | |
| 58 | <- | | RRC CONNECTION SETUP | |
| 59 | -> | | RRC CONNECTION SETUP COMPLETE | |
| 60 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 61 | <- | | RRC CONNECTION RELEASE | After sending of this message, the SS waits for disconnection of the CS signalling link. |
| 62 | -> | | RRC CONNECTION RELEASE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.2.3.5 Test requirements

Test requirements for Test Procedure 1

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with information elements specified in the above Expected Sequence.

At step7, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate the combined routing area updating procedure.

At step9, UE shall:

- acknowledge the new P-TMSI by sending the ROUTING AREA UPDATE COMPLETE message.

At step11, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step13, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

Test requirements for Test Procedure 2

At step3 and 31, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with information elements specified in the above Expected Sequence.

At step6 and 35, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate the combined routing area updating procedure.

At step11, 15, 19 and 23, UE shall:

- re-initiate the combined routing area updating procedure.

At step39, 43, 47 and 51, UE shall:

- re-initiate the combined routing area updating procedure.

At step55, UE shall:

- perform MM location updating procedure.

At step60, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

### 12.4.2.3a Void

### 12.4.2.4 Combined routing area updating / rejected / PLMN not allowed

12.4.2.4.1 Definition

#### 12.4.2.4.2 Conformance requirement

1) If the network rejects a combined routing area updating procedure from the User Equipment with the cause 'PLMN not allowed' the User Equipment shall:

   1.1 not perform combined GPRS attach when switched on in the same location area or PLMN, except when the PLMN identity is equal to the HPLMN.

   1.2 delete the stored RAI, PS-CKSN, P-TMSI, P-TMSI signature, TMSI CKSN and LAI.

   1.3 store the PLMN in the 'forbidden PLMN list', except when the PLMN identity is equal to the HPLMN.

2) An MS that receives a ROUTING AREA UPDATE REJECT message stops timer T3330, enters state MM IDLE and for all causes except #12, #14 and #15 deletes the list of "equivalent PLMNs".

Reference

3GPP TS 24.008 clause 4.7.5.2.

3GPP TS 23.122 clause 3.1.

#### 12.4.2.4.3 Test purpose

To test the behaviour of the UE if the network rejects the combined routing area updating procedure of the UE with the cause 'PLMN not allowed'.

#### 12.4.2.4.4 Method of test

Initial condition

System Simulator:

Four cells (not simultaneously activated), cell A in MCC1/MNC2/LAC1/RAC1 (RAI-8), cell B in MCC1/MNC2/LAC1/RAC2 (RAI-10), cell D in MCC2/MNC1/LAC1/RAC1 (RAI-2) and cell E in MCC1/MNC3/LAC1/RAC1 (RAI-11).

The PLMN containing Cell E is equivalent to the PLMN that contains Cell A.
All four cells are operating in network operation mode I

The HPLMN is different from MCC1/MNC2.

Sintrasearch and Sintersearch values for cells A, B, D and E are 20 dB.

NB: i) Cell D will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.2.

ii) Cell E will be mapped to Cell 7 as found in TS 34.108 clause 6.1.4.2.

User Equipment:

The UE has a valid IMSI.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
PS attach attempted automatically by outstanding request Yes/No

### Test procedure

The SS rejects a combined routing area updating with the cause value 'PLMN not allowed'. The SS checks that the UE does not perform PS attach if activated in the same PLMN. The SS checks that the UE does not perform IMSI attach if activated in the same PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br><br>Set the cell type of cell D to the "Non-Suitable cell".<br>Set the cell type of cell E to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS. |
| 2a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-8<br>P-TMSI Signature = P-TMSI-8 signature<br>Routing area identity = RAI-8<br>MS identity = TMSI-1<br>Equivalent PLMN: MCC = 1, MNC=3 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | | SS | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell B and cell E. |
| 7 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell E to the "Suitable neighbour cell".<br>(see note) |
| 8 | UE | | | Cell B is preferred by the UE. |
| 8a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'Old P-TMSI Signature= P-TMSI-8 signature<br>Old Routing area identity = RAI-8.<br>TMSI status = valid TMSI available or IE not present<br>Mobile identity = P-TMSI-8 |
| 10 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'PLMN not allowed' |
| 10a | | SS | | The SS releases the RRC connection. |
| 10b | | | | Cell E is preferred by the UE<br>Step 11 and 11a are only performed by an UE which will not initiate a PS attach automatically (see ICS) |
| 11 conditional | UE | | Registration on CS | See TS 34.108<br>Location Update Procedure is initiated from the UE. |
| 11a conditional | | | | The UE initiates an attach by MMI or by AT command. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 12 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 12a | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' or 'GPRS attach while IMSI attached'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 13 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 14 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 14a | | SS | | The SS starts integrity protection. |
| 15 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-11<br>P-TMSI Signature = P-TMSI-11 signature<br>Routing area identity = RAI-11<br>MS identity = TMSI-2<br>Equivalent PLMN: MCC = 1, MNC=2 |
| 16 | -> | | ATTACH COMPLETE | |
| 17 | | SS | | The SS releases the RRC connection. |
| 18 | <- | | PAGING TYPE1 | Paging is sent on cell A.<br>Mobile identity= P-TMSI-11<br>Paging order for PS services |
| 18a | | | | The UE shall not initiate an RRC connection.<br>This is checked during 3 seconds. |
| 19 | <- | | PAGING TYPE1 | Paging is sent on cell B.<br>Mobile identity = TMSI-2<br>Paging order is for CS services. |
| 20 | | UE | | The UE shall not initiate an RRC connection.<br>This is checked during 3 seconds. |
| 21 | | | Void | |
| 22 | | | Void | |
| 23 | | | Void | |
| 24 | | | Void | |
| 25 | | | Void | |
| 26 | | | Void | |
| 27 | | SS | | The following messages are sent and shall be received on cell D.<br>Set the cell type of cell B and E to the "Non-Suitable cell".<br>Set the cell type of cell D to the "Serving cell". (see note) |
| 28 | | UE | | Cell D is preferred by the UE. |
| 28a | | | Void | |
| 29 | | | Void | |
| 29a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 30 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'combined RA/LA updating' or 'Combined RA/LA updating with IMSI attach'.<br>Old P-TMSI Signature= P-TMSI-11 signature<br>Old Routing area identity = RAI-11<br>TMSI status = valid TMSI available or IE not present |
| 30a | | SS | | The SS starts integrity protection. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 31 | | <- | ROUTING AREA UPDATE ACCEPT | Update result = 'combined RA/LA updated '<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-2 |
| 32 | | -> | ROUTING AREA UPDATE COMPLETE | |
| NOTE: | The definitions for "Non-Suitable cell", "Serving cell" and "Suitable neighbour cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

12.4.2.4.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with information elements specified in the above Expected Sequence.

At step9, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- -initiate the combined routing area update procedure(Update type = 'Combined RA/LA updating') with the information elements specified above Expected Sequence.

At step 10, the UE shall delete the equivalent PLMN list (MCC=1, MNC=3).

At step 12, the UE shall initiate a PS attach procedure to cell E.

At step18, when the UE receives the paging message for PS domain, UE shall:

- not respond to the paging message for PS domain.

At step19, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

At step30, UE shall:

- perform the combined routing area update procedure.

## 12.4.2.5a Combined routing area updating / rejected / roaming not allowed in this location area

12.4.2.5a.1 Definition

12.4.2.5a.2 Conformance requirement

1) If the network rejects a combined routing area updating procedure from the User Equipment with the cause 'roaming not allowed in this location area' the User Equipment:

   1.1 shall not perform combined PS attach when in the same location area.

   1.2 shall store the LA in the 'forbidden location areas for roaming'.

   1.3 shall perform a routing area update when entering in a new location area if the LAI or the PLMN identity is not contained in any of the lists "forbidden LAs for roaming", "forbidden LAs for regional provision of service", "forbidden PLMNs for GPRS service" or "forbidden PLMNs" and the current update status is different from "IDLE NO IMSI".

2) The User Equipment shall reset the list of 'Forbidden location areas for roaming' when switched off or when the USIM is removed.

Reference

3GPP TS 24.008 clause 4.7.5.2.

3GPP TS 23.122 clause 4.5.2.

12.4.2.5a.3 Test purpose

Test purpose 1

To test that on receipt of a rejection using the 'Roaming not allowed in this location area' cause code, the UE ceases trying a routing area updating procedure on that location area. Successful combined routing area updating procedure is possible in other location areas.

Test purpose 2

To test that if the UE is switched off or the USIM is removed the list of 'forbidden location areas for roaming' is cleared.

12.4.2.5a.4 Method of test

Proc 1: Test procedure 1

Initial condition

System Simulator:

Two cells, cell A in MCC2/MNC1/LAC1/RAC1 (RAI-2, Not HPLMN), cell B in MCC2/MNC1/LAC2/RAC1 (RAI-6, Not HPLMN).
Both cells are operating in network operation mode I.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a combined routing area updating with the cause value 'Roaming not allowed in this location area'. A new attempt for a combined PS attach is not possible. Successful combined routing area updating procedure is performed in another location area. The UE is moved back to the 1st location area. A combined routing area updating shall not be performed, as the LA is on the forbidden list.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS. |
| 2a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' Mobile identity =IMSI TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-2 MS identity = TMSI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | | SS | | The SS releases the RRC connection. |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the "Non-suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 8 | UE | | | Cell B is preferred by the UE. |
| 8a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-2 Mobile identiy = P-TMSI-2 |
| 9a | | SS | | SS starts integrity protection |
| 10 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 10a | | SS | | The SS releases the RRC connection. |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2 Paging order is for PS services. |
| 14 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 15 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1 Paging order is for CS services. |
| 16 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 17 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 18 | UE | | | Cell A is preferred by the UE. |
| 18a | | | Void | |
| 19 | | | Void | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 19a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 20 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating' or 'Combined RA/LA updating with IMSI attach' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-2 Mobile identiy = P-TMSI-2 |
| 20a | | SS | | The SS starts integrity protection. |
| 21 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature Routing area identity = RAI-2 MS identity = TMSI-1 |
| 22 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 22a | | SS | | The SS releases the RRC connection. |
| 23 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1 Paging order is for CS services. Paging cause = "Terminating conversational call" |
| 24 | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating conversational call". |
| 25 | | | Void | |
| 26 | | | Void | |
| 27 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 27a | | SS | | The SS starts integrity protection. |
| 28 | | SS | | The SS releases the RRC connection |
| 29 | | | Void | |
| 30 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1 Paging order is for PS services. Paging cause = "Terminating background call" |
| 30a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating background call". |
| 30b | | | Void | |
| 30c | | | Void | |
| 31 | -> | | SERVICE REQUEST | service type = "paging response" |
| 31o | | SS | | The SS starts integrity protection. |
| 31a | | SS | | The SS releases the RRC connection. |
| 31b | | | Void | |
| | | | | The following messages are sent and shall be received on cell B. |
| 32 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 33 | | UE | | No ROUTING AREA UPDATE REQUEST sent to SS (SS waits 30 seconds). |
| 34 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2 Paging order is for PS services. |
| 35 | | UE | | No response from the UE to the request. This is checked for 10 seconds. |

NOTE: The definitions for "Suitable neighbour cell", "Non-suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".

Proc 2: Test procedure 2

Initial condition

System Simulator:

Two cells, cell A in MCC2/MNC1/LAC1/RAC1 (RAI-2, Not HPLMN), cell B in MCC2/MNC1/LAC2/RAC1 (RAI-6, Not HPLMN).
Both cells are operating in network operation mode I.

User Equipment:

The UE has a valid IMSI. UE is Idle Updated on cell A.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
USIM removal possible without powering down Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a combined routing area updating with the cause value 'Roaming not allowed in this location area'. The UE is switched off for 10 seconds and switched on again. The SS checks that a combined PS attach is possible on the cell on which the previous combined routing area updating had been rejected.

If USIM removal is possible without switching off:
The SS rejects a routing area updating with the cause value 'Roaming not allowed in this location area'. The USIM is removed and inserted in the UE. The SS checks that a PS attach procedure and routing area updating procedure is possible on the cell on which the routing area updating had previously been rejected.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS. |
| 2a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' Mobile identity =IMSI TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-2 MS identity = TMSI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | | SS | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell B. |
| 7 | | SS | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 8 | UE | | | Cell B is preferred by the UE. |
| 8a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-2 Mobile identiy = P-TMSI-2 |
| 9a | | SS | | The SS starts integrity protection |
| 10 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'Roaming not allowed in this location area' |
| 10a | | SS | | The SS releases the RRC connection. |
| 11 | | | Void | |
| 12 | | | Void | |
| 13 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2 Paging order is for PS services. |
| 14 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| 15 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1 Paging order is for CS services. |
| 16 | UE | | | The UE shall not initiate an RRC connection. This is checked during 3 seconds. |
| 17 | UE | | | If possible (see ICS) USIM removal is performed. Otherwise if possible (see ICS) switch off is performed. Otherwise the power is removed. |
| 17a | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 18 | UE | | | The UE gets the USIM replaced, is powered up or switched on. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 18a | UE | | Registration on CS | See TS 34.108<br>This step is applied only for non-auto attach UE.<br>Location Update Procedure initiated from the UE. |
| 19 | UE | | | The UE initiates an attach (see ICS) by MMI or AT command. |
| 19a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 20 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =P-TMSI_2<br>TMSI status = valid TMSI available or IE not present |
| 20a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 20b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 20c | SS | | | The SS starts integrity protection. |
| 21 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-6<br>MS identity = TMSI-1 |
| 22 | -> | | ATTACH COMPLETE | |
| 22a | SS | | | The SS releases the RRC connection. |
| 23 | <- | | PAGING TYPE1 | Mobile identity = TMSI-1<br>Paging order is for CS services.<br>Paging cause = "Terminating conversational call" |
| 24 | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating conversational call". |
| 25 | | | Void | |
| 26 | | | Void | |
| 27 | -> | | PAGING RESPONSE | Mobile identity = TMSI-1 |
| 27a | SS | | | The SS starts integrity protection. |
| 28 | SS | | | The SS releases the RRC connection. |
| 29 | | | Void | |
| 30 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging cause = "Terminating background call" |
| 30a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating background call". |
| 30b | | | Void | |
| 30c | | | Void | |
| 31 | -> | | SERVICE REQUEST | service type = "paging response" |
| 31o | SS | | | The SS starts integrity protection. |
| 31a | SS | | | The SS releases the RRC connection. |
| 31b | | | Void | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.2.5a.5 Test requirements

Test requirements for Test procedure1

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with information elements specified in the above Expected Sequence.

At step9, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate the combined routing area update procedure(Update type = 'Combined RA/LA updating') with the information elements specified above Expected Sequence

At step12, when the SS rejects the combined routing area update procedure with GMM cause = 'Roaming not allowed in this location area', UE shall:

- not initiate a PS attach procedure.

At step14, when the UE receives the paging message for PS domain, UE shall;

- not respond to the paging message for PS domain.

At step16, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

At step20, UE shall:

- initiate the combined RA/LA updating procedure.

At step27, when the UE receives the paging message for CS domain, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step31, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

At step35, when the UE receives the paging message for PS domain, UE shall;

- not respond to the paging message for PS domain.

Test requirements for Test procedure2

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with information elements specified in the above Expected Sequence.

At step9, UE shall:

- initiate the combined routing area update procedure(Update type = 'Combined RA/LA updating') with the information elements specified above Expected Sequence.

At step14, when the UE receives the paging message for PS domain, UE shall;

- not respond to the paging message for PS domain.

At step16, when the UE receives the paging message for CS domain, UE shall:

- not respond to the paging message for CS domain.

At step20, UE shall:

- initiate the combined PS attach procedure.

At step27, when the UE receives the paging message for CS domain, UE shall;

- respond to the paging message for CS domain by sending the PAGING RESPONSE message.

At step31, when the UE receives the paging message for PS domain, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

## 12.4.2.5b Combined routing area updating / rejected / No Suitable Cells In Location Area

### 12.4.2.5b.1 Definition

### 12.4.2.5b.2 Conformance requirement

1) If the network rejects a combined routing area updating procedure from the User Equipment with the cause 'No Suitable Cells In Location Area', the User Equipment shall:

   1.1 store the LA or the PLMN identity in the 'forbidden location areas for roaming'.

   1.2 search for a suitable cell in a different location area on the same PLMN.

2) An MS that receives a ROUTING AREA UPDATE REJECT message stops timer T3330, enters state MM IDLE and for all causes except #12, #14 and #15 deletes the list of "equivalent PLMNs".

Reference

3GPP TS 24.008 clauses 4.7.5.2.4

### 12.4.2.5b.3 Test purpose

To test the behaviour of the UE if the network rejects a combined routing area updating procedure of the UE with the cause 'No Suitable Cells In Location Area'.

To test that the UE deletes the list of forbidden LAs when power is switched off'.

### 12.4.2.5b.4 Method of test

Initial condition

System Simulator:

Five cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC2/RAC1 (RAI-3), cell C in MCC2/MNC1/LAC1/RAC1 (RAI-2), cell D in MCC1/MNC1/LAC1/RAC2 (RAI-4), cell E in MCC1/MNC2/LAC1/RAC1 (RAI-5).

All five cells are operating in network operation mode I.

The PLMN contains Cell A, B and D is equivalent to the PLMN that contains Cell E.

Sintrasearch and Sintersearch values for cells A, B, D and E are 20 dB.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.2.

ii) Cell D will be mapped to Cell 3 as found in TS 34.108 clause 6.1.4.2.

iii) Cell E will be mapped to Cell 7 as found in TS 34.108 clause 6.1.4.2.

User Equipment:

The UE has valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a combined routing area updating with the cause value 'No Suitable Cells In Location Area'. The SS checks that the UE shall performa combined routing area update procedure when the UE enters a suitable cell in a different location area on the same PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following message are sent and shall be received on cell D. |
| 1 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>Set the cell type of cell D to the "Serving cell".<br>Set the cell type of cell E to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell D is preferred by the UE. |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-4<br>MS identity = IMSI<br>Equivalent PLMN: MCC = 1, MNC=2 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | | SS | | The SS releases the RRC connection. |
| 6 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>Set the cell type of cell D to the "Non-Suitable cell".<br>(see note)<br>The SS configures power level of each Cell as follows.<br>Cell A > Cell B = Cell C<br>Cell A is preferred by the UE. |
| 7 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-4 |
| 8 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = 'No Suitable Cells In Location Area' |
| 8a | | SS | | The SS releases the RRC connection.<br>The following message are sent and shall be received on cell B. |
| 9 | -> | | ROUTING AREA UPDATE REQUEST | Attach type = 'Combined RA/LA updating with IMSI attach'<br>Mobile identity = P-TMSI-1 |
| 10 | <- | | ROUTING AREA UPDATE ACCEPT | Attach result = 'Combined RA/LA updating with IMSI attach'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-3<br>Equivalent PLMN: MCC = 1, MNC=2 |
| 11 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 11a | | SS | | The SS releases the RRC connection. |

| | | | |
|---|---|---|---|
| 12 | SS | | Set the cell type of cell D to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell E to the "Suitable neighbour cell".<br>(note)<br>The SS deactivates Cell B and activates Cell D and Cell E<br>The SS configures power level of each Cell as follows.<br>Cell D > Cell E |
| 13 | | | Cell D is preferred by the UE. |
| 14 | -> | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-4 |
| 15 | <- | ROUTING AREA UPDATE REJECT | GMM cause = 'No Suitable Cells In Location Area' |
| 15a | SS | | The SS releases the RRC connection. |
| 16 | | | The following message are sent and shall be received on cell E. |
| 17 | -> | ROUTING AREA UPDATE REQUEST | Attach type = 'Combined RA/LA updating with IMSI attach'<br>Mobile identity = IMSI |
| 18 | <- | ROUTING AREA UPDATE ACCEPT | Attach result = 'Combined RA/LA updated'<br>Allocated P-TMSI = P-TMSI-3<br>P-TMSI Signature = P-TMSI-3 signature<br>Routing area identity = RAI-5<br>Equivalent PLMN: MCC=1. MNC=2 |
| 19 | -> | ROUTING AREA UPDATE COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell", "Serving cell" and "Non-Suitable cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

12.4.2.5b.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the Combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step7, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate the combined routing area update procedure.

At step 8, the UE shall maintain the equivalent PLMN list (MCC=1, MNC=2).

At step9, when the UE enters a suitable cell in a different location area on the same PLMN, UE shall:

- perform the combined routing area update procedure.

At step 15, the UE shall maintain the equivalent PLMN list (MCC=1, MNC=2).

At step 17, when the UE enters a suitable cell in a different but equivalent PLMN (MCC=1, MNC=2), UE shall:

- perform the combined routing area update procedure.

## 12.4.2.5c Combined routing area updating / rejected / Location area not allowed

### 12.4.2.5c.1 Definition

### 12.4.2.5c.2 Conformance requirement

If the network rejects a combined routing area updating procedure from the User Equipment with the cause 'Location area not allowed', the User Equipment shall:

- delete any RAI, P-TMSI, P-TMSI signature, and PS ciphering key sequence number stored.
- set the PS update status to GU3 ROAMING NOT ALLOWED.
- delete any TMSI, LAI and ciphering key sequence number.
- store the LAI in the list of "forbidden location areas for regional provision of service"
- not delete the list of "equivalent PLMNs".
- perform a cell selection.

#### Reference

3GPP TS 24.008 clauses 4.7.5.2.4

### 12.4.2.5c.3 Test purpose

To test the behaviour of the UE if the network rejects the routing area updating procedure of the UE with the cause 'GPRS services not allowed in this PLMN'.

### 12.4.2.5c.4 Method of test

#### Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC2/RAC1 (RAI-3), cell C in MCC2/MNC1/LAC2/RAC1 (RAI-6).
All three cells are operating in network operation mode I (in case of UE operation mode A).

The PLMN contains Cell C is equivalent to the PLMN that contains Cell A.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid IMSI.

The UE is in UE operation mode A.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

#### Test procedure

The SS rejects a combined routing area updating with the cause value 'Location area not allowed'. The SS checks that the UE performs combined PS attach when the UE enters a equivalent PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | SS | | | The SS is set in network operation mode I.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-2<br>MS identity = TMSI-1<br>Equivalent PLMNs = MCC2,MNC1 |
| 5a | -> | | ATTACH COMPLETE | |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | SS | | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 8 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-2 |
| 9 | <- | | ROUTING AREA UPDATE REJECT | GMM cause = Location area not allowed ' |
| 10 | UE | | | The UE initiates an attach by MMI or by AT command. |
| 12 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| 13 | SS | | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the " Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 14 | UE | | | The UE performs cell selection. |
| | | | | The following messages are sent and shall be received on cell C. |
| 15 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 16 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-6<br>MS identity = TMSI-2<br>Equivalent PLMNs = MCC1,MNC1 |
| 17 | -> | | ATTACH COMPLETE | |

| NOTE: | The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". |
|---|---|

Specific message contents

None.

12.4.2.5c.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the Combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, UE shall:

- initiate the combined routing area update procedure.

At step 12, the UE shall:

- not initiate combined PS attach procure.

At step 14, the UE shall:

- perform combined PS attach procedure with Mobile identity = IMSI and Attach result = 'Combined GPRS/IMSI attached' to the equivalent cell.

## 12.4.2.5d Combined routing area updating / rejected / PS services not allowed in this PLMN

12.4.2.5d.1 Definition

12.4.2.5d.2 Conformance requirement

If the network rejects a combined routing area updating procedure from the User Equipment with the cause 'GPRS services not allowed in this PLMN', the User Equipment shall:

- delete any RAI, P-TMSI, P-TMSI signature, and PS ciphering key sequence number stored.
- set the PS update status to GU3 ROAMING NOT ALLOWED.
- store the PLMN identity in the "forbidden PLMNs for GPRS service" list.
- not delete the list of "equivalent PLMNs".

Reference

3GPP TS 24.008 clauses 4.7.5.2.4

12.4.2.5d.3 Test purpose

To test the behaviour of the UE if the network rejects the routing area updating procedure of the UE with the cause 'GPRS services not allowed in this PLMN'.

12.4.2.5d.4 Method of test

Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC2/LAC1/RAC1 (RAI-8), cell C in MCC2/MNC1/LAC2/RAC1 (RAI-6).
All three cells are operating in network operation mode I (in case of UE operation mode A).

The PLMN contains Cell C is equivalent to the PLMN that contains Cell A.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.2.

ii) Cell C will be mapped to Cell 7 as found in TS 34.108 clause 6.1.4.2.

User Equipment:

The UE has a valid IMSI.

The UE is in UE operation mode A.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

The SS rejects a combined routing area updating with the cause value 'GPRS services not allowed in this PLMN'. The SS checks that the UE performs combined PS attach when the UE enters a equivalent PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). |
| 2 | SS | | | The SS is set in network operation mode II.<br>Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1<br>MS identity = TMSI-1<br>Equivalent PLMNs = MCC2,MNC1 |
| 5 | -> | | ATTACH COMPLETE | |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | SS | | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 8 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-8 |
| 9 | <- | | ROUTING AREA UPDATE REJECT | GMM cause ='GPRS services not allowed in this PLMN' |
| 10 | UE | | | The UE initiates an attach by MMI or by AT command. |
| 12 | UE | | | No ATTACH REQUEST sent to SS<br>(SS waits 30 seconds). |
| 13 | SS | | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the " Non-Suitable cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| | | | | The following messages are sent and shall be received on cell C. |
| 14 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 15 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-6<br>MS identity = TMSI-2<br>Equivalent PLMNs = MCC1,MNC1 |
| 16 | -> | | ATTACH COMPLETE | |

| NOTE: | The definitions for "Non-Suitable cell", "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". |
|---|---|

Specific message contents

None.

12.4.2.5d.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the Combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, UE shall:

- initiate the combined routing area update procedure.

At step 12, the UE shall:

- not initiate combined PS attach procure.

At step 14, the UE shall:

- perform combined PS attach procedure with Mobile identity = IMSI and Attach result = 'Combined GPRS/IMSI attached' to the equivalent cell.

## 12.4.2.6 Combined routing area updating / abnormal cases / access barred due to access class control

12.4.2.6.1 Definition

12.4.2.6.2 Conformance requirement

1) The UE shall not perform combined routing area updating procedure, but stays in the current serving cell and applies normal cell reselection process.

2) The User Equipment shall perform the combined routing area updating procedure when:

   2.1 Access is granted.

   2.2 Cell is changed.

Reference

3GPP TS 24.008 clause 4.7.5.2.

12.4.2.6.3 Test purpose

Test purpose 1

To test the behaviour of the UE in case of access class control (access is granted).

Test purpose 2

To test the behaviour of the UE in case of access class control (cell is changed).

12.4.2.6.4 Method of test

Proc 1: Test procedure 1

Initial condition

An access class x (0-15) is arbitrarily chosen. The USIM is programmed with this access class x. Communication with User Equipments using access class x is initially indicated to be barred on Cell B.

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) has Access Class x not barred, cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4) has Access Class x barred.
Both cells are operating in network operation mode I.

User Equipment:

The UE has valid IMSI. UE is Idle Updated on cell A.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

A PS attach procedure is performed. The routing area is changed. The SS indicates access class x barred. A routing area updating procedure is not performed.

The SS indicates that access class x is not barred. A routing area updating procedure is performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' Mobile identity =IMSI TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 MS identity = IMSI |
| 5 | -> | | ATTACH COMPLETE | |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 8 | UE | | | No ROUTING AREA UPDATE REQUEST sent to SS, as access class x is barred (SS waits 30 seconds). |
| 9 | | SS | | The access class x is not barred anymore. |
| 10 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-1 TMSI status = no valid TMSI available |
| 10a | | | | SS starts integrity protection |
| 11 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature MS identity = TMSI-1 Routing area identity = RAI-4 |
| 12 | -> | | ROUTING AREA UPDATE COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

Proc 2: Test procedure 2

Initial condition

An access class x (0-15) is arbitrarily chosen. The USIM is programmed with this access class x. Communication with User Equipments using access class x is indicated to be barred on cell B.

System Simulator:

Three cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) has access class x not barred, cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4) has access class x barred, cell C in

MCC1/MNC1/LAC1/RAC2 (RAI-4) has access class x not barred.
All three cells are operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

A PS attach procedure is performed. The routing area is changed. The SS indicates access class x barred. A routing area updating procedure is not performed.

A cell change is performed into a cell where access class x is not barred. A routing area updating procedure is performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1<br>MS identity = IMSI |
| 5 | -> | | ATTACH COMPLETE | |
| | | | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the " Suitable neighbour cell ".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 8 | UE | | | No ROUTING AREA UPDATE REQUEST sent to SS, as access class x is barred<br>(SS waits 30 seconds). |
| | | | | The following messages are sent and shall be received on cell C. |
| 9 | | SS | | Set the cell type of cell B to the "Suitable neighbour cell ".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 10 | UE | | | Cell C is preferred by the UE. |
| 11 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 11a | | | | SS starts integrity protection |
| 12 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-4 |
| 13 | -> | | ROUTING AREA UPDATE COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 12.4.2.6.5 Test requirements

Test requirements for Test procedure 1

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with information elements specified in the above Expected Sequence.

At step8, when the access class x is barred , UE shall:

- not perform the combined routing area updating procedure.

At step10, when the access class x is not barred, UE shall:

- perform the combined routing area updating procedure.

Test requirements for Test procedure 2

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with information elements specified in the above Expected Sequence.

At step8, when the access class x is barred UE shall:

- not perform the combined routing area updating procedure.

At step11, when the serving cell is changed, UE shall:

- perform the combined routing area updating procedure.

### 12.4.2.7 Combined routing area updating / abnormal cases / attempt counter check / procedure timeout

12.4.2.7.1 Definition

#### 12.4.2.7.2 Conformance requirement

1) When a T3330 timeout has occurred during a routing area updating procedure, the UE shall repeat the routing area updating procedure after T3330 timeout until the procedure is repeated five times.

2) When a routing area updating procedure is repeated five times, the routing area updating attempt counter is incremented and five more routing area updating procedures are performed. This procedure is repeated until the routing area updating attempt counter is five, the UE shall then start timer T3302.

3) When the T3302 expire, a new routing area updating procedure shall be initiated.

Reference

3GPP TS 24.008 clause 4.7.5.2.

#### 12.4.2.7.3 Test purpose

To test the behaviour of the UE with respect to the attempt counter.

#### 12.4.2.7.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).
Both cells are operating in network operation mode I.

User Equipment:

The UE has a valid IMSI. UE is Idle Updated on cell A.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE initiates a routing area updating procedure (routing area updating attempt counter zero). The SS does not answer with ROUTING AREA UPDATE ACCEPT message before T3330 timeout. The UE restarts the routing area updating procedure four times. The SS never answers with ROUTING AREA UPDATE ACCEPT message before T3330 timeout. After five consecutive routing area update procedures, the routing area updating attempt counter is incremented and T3311 is started.

The UE initiates a new routing area updating procedure (routing area updating attempt counter one) after T3311 expires. The SS does not answer with ROUTING AREA UPDATE ACCEPT message before T3330 timeout. The UE restarts the routing area updating procedure four times. The SS never answers with ROUTING AREA UPDATE ACCEPT message before T3330 timeout. After five consecutive routing area update procedures, the routing area updating attempt counter is incremented and T3311 is started.

The UE initiates a new routing area updating procedure (routing area updating attempt counter two) after T3311 expires. The SS does not answer with ROUTING AREA UPDATE ACCEPT message before T3330 timeout. The UE restarts the routing area updating procedure four times. The SS never answers with ROUTING AREA UPDATE ACCEPT message before T3330 timeout. After five consecutive routing area update procedures, the routing area updating attempt counter is incremented and T3311 is started.

The UE initiates a new routing area updating procedure (routing area updating attempt counter three) after T3311 expires. The SS does not answer with ROUTING AREA UPDATE ACCEPT message before T3330 timeout. The UE restarts the routing area updating procedure four times. The SS never answers with ROUTING AREA UPDATE ACCEPT message before T3330 timeout. After five consecutive routing area update procedures, the routing area updating attempt counter is incremented and T3311 is started.

The UE initiates a new routing area updating procedure (routing area updating attempt counter four) after T3311 expires. The SS does not answer with ROUTING AREA UPDATE ACCEPT message before T3330 timeout. The UE restarts the routing area updating procedure four times. The SS never answers with ROUTING AREA UPDATE ACCEPT message before T3330 timeout. After five consecutive routing area update procedures, the routing area updating attempt counter is incremented and as the routing area updating attempt counter is five. T3302 is started.

The UE may perform a Location Update procedure.

The UE initiates a routing area updating procedure with routing area updating attempt counter zero after T3302 expires with the stored P-TMSI, P-TMSI signature, PS CKSN and RAI.

T3302; set to 12 minutes.

T3311; 15 seconds.

T3330; 15 seconds.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1<br>MS identity = IMSI |
| 5 | -> | | ATTACH COMPLETE | |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7 | UE | | | Cell B is preferred by the UE.<br>K = 1. |
| 8 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available<br>Routing area updating attempt counter = k (k is not visible. It is only used for clarifying the sequence.)<br>Retransmission counter = 0 |
| 9 | SS | | | No response is given from the SS. |
| 10 | SS | | | The SS verifies that the time between the RA update requests is T3330seconds |
| 11 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available<br>Routing area updating attempt counter = k<br>Retransmission counter = 1 |
| 12 | SS | | | No response is given from the SS. |
| 13 | SS | | | The SS verifies that the time between the RA update requests is T3330seconds |
| 14 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available<br>Routing area updating attempt counter = k<br>Retransmission counter = 2 |
| 15 | SS | | | No response is given from the SS. |
| 16 | SS | | | The SS verifies that the time between the RA update requests is T3330seconds |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 17 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available<br>Routing area updating attempt counter = k<br>Retransmission counter = 3 |
| 18 | SS | | | No response is given from the SS. |
| 19 | SS | | | The SS verifies that the time between the RA update requests is T3330seconds |
| 20 | -> | | ROUTING AREA UPDATING REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available<br>Routing area updating attempt counter = k<br>Retransmission counter = 4 |
| 21 | SS | | | No response is given from the SS. |
| 22 | SS | | | The SS verifies that the time between the RA update requests is T3311 + T3330 seconds. |
| 23 | SS | | | Step 8 – 22 is repeated four times with k = 2, k = 3, k = 4 and k = 5 |
| 23a optional | UE | | Registration on CS | The UE may perform a normal location updating procedure.<br>See TS 34.108 |
| 24 | SS | | | The SS verifies that the time between the RA update requests is T3302 + T3330 seconds |
| 25 | -> | | ROUTING AREA UPDATE REQUEST | Update type =<br>- 'combined RA/LA updating with IMSI attach'<br>(If Step23a is performed)<br>- 'combined RA/LA updating'<br>(If Step23a is not performed)<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 26 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = IMSI<br>Routing area identity = RAI-4 |
| 27 | -> | | ROUTING AREA UPDATE COMPLETE | |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.2.7.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with information elements specified in the above Expected Sequence.

At step8, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate the combined routing area updating procedure with information elements specified in the above Expected Sequence.

UE shall perform the following actions depending on the conditions described below.

Case 1) A timer T3330 timeout has occurred during a combined routing area updating procedure with the Routing area attempt counter less than five and the Retransmission counter less than five

At step11, 14, 17 and 20, UE shall:

- repeat the combined routing area updating procedure after the timer T3330 timeout

Case2) A timer T3330 timeout has occurred during a combined routing area updating procedure with the Routing area attempt counter less than five and the Retransmission counter five

At step 22, UE shall:

- not repeat the combined routing area updating procedure.

Case 3) A timer T3311 timeout has occurred and the Routing area attempt counter is less than five,

At step23, UE shall:

- repeat the combined routing area updating procedure

Case 4) A timer T3330 timeout has occurred during a combined routing area updating procedure with the Routing area attempt counter five and the Retransmission counter five.

At step24, UE shall:

- not initiate a routing area updating procedure.

Case5) The timer T3302 expires

At step25, UE shall:

- initiate the new routing area updating procedure

### 12.4.2.8 Combined routing area updating / abnormal cases / change of cell into new routing area

12.4.2.8.1 Definition

#### 12.4.2.8.2 Conformance requirement

When a change of cell into a new routing area is performed before the routing area updating procedure is finished, the UE shall abort the routing area updating procedure and re-initiate it in the new routing area.

Reference

3GPP TS 24.008 clause 4.7.5.2.

#### 12.4.2.8.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

#### 12.4.2.8.4 Method of test

Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4), cell C in MCC1/MNC1/LAC1/RAC3 (RAI-5).
All three cells are operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE initiates a routing area updating procedure. The ROUTING AREA UPDATE ACCEPT message is delayed from the SS. The UE performs a cell update into a new routing area. The UE shall re-initiate a routing area updating procedure in the new routing area. The UE shall not increment the attempt counter.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>(see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS. |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1<br>MS identity = IMSI |
| 5 | -> | | ATTACH COMPLETE | |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 8 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 9 | | SS | | No response id given from the SS. |
| | | SS | | The following messages are sent and shall be received on cell C. |
| 10 | | SS | | Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Serving cell".<br>(see note) |
| 11 | UE | | | The RF level of cell B is lowered, and the RF level of cell C is increased, until cell C is preferred by the UE. |
| 12 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = no valid TMSI available |
| 13 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = IMSI<br>Routing area identity = RAI-5 |
| 14 | -> | | ROUTING AREA UPDATE COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 12.4.2.8.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate the routing area update procedure.

At step12, when change of cell into new routing area is performed before the routing area updating procedure is finished, UE shall:

- abort the routing area updating procedure.
- re-initiate new routing area updating procedure in the new routing area.

### 12.4.2.9 Void

### 12.4.2.10 Combined routing area updating / abnormal cases / PS detach procedure collision

#### 12.4.2.10.1 Definition

#### 12.4.2.10.2 Conformance requirement

1) When a detach request is received with cause 'GPRS detach' or 'combined GPRS/IMSI detach' by the UE while waiting for a ROUTING AREA UPDATE ACCEPT message, the UE shall terminate the routing area updating procedure and continue with the PS detach procedure.

2) When a detach request is received with cause 'IMSI detach' by the UE while waiting for a ROUTING AREA UPDATE ACCEPT message, the UE shall ignore the detach request and continue with the routing area updating procedure.

Reference

3GPP TS 24.008 clause 4.7.5.2.

#### 12.4.2.10.3 Test purpose

To test the behaviour of the UE in case of procedure collision.

#### 12.4.2.10.4 Method of test

Proc 1: Test procedure 1

Initial condition

System Simulator:

Two cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4). Both cells are operating in network operation mode I.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE initiates a routing area updating procedure. The SS does not answer the routing area updating procedure, but initiates a PS detach procedure with cause 'GPRS detach' or 'combined GPRS/IMSI detach'. The UE shall terminate the routing area updating procedure and continue with the PS detach procedure.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS. |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' Mobile identity =IMSI TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 MS identity = IMSI |
| 5 | -> | | ATTACH COMPLETE | |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 8 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-1 TMSI status = no valid TMSI available |
| 9 | | SS | | The SS ignores the ROUTING AREA UPDATE REQUEST message and initiates a detach procedure. |
| 10 | <- | | DETACH REQUEST | Detach type = 're-attach not required' |
| 11 | -> | | DETACH ACCEPT | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

Proc 2: Test procedure 2

Initial condition

System Simulator:

Two cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4). Both cells are operating in network operation mode I.

User Equipment:

The UE has a valid P-TMSI and RAI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE initiates a routing area updating procedure. The SS does not answer the routing area updating procedure, but initiates a PS detach procedure with cause 'IMSI detach'. The UE shall ignore the detach procedure and continue with the routing area updating procedure.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Suitable neighbour cell". (see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS. |
| 3 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach' Mobile identity =IMSI TMSI status = no valid TMSI available |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 MS identity = IMSI |
| 5 | -> | | ATTACH COMPLETE | |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 6 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 7 | UE | | | Cell B is preferred by the UE. |
| 8 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-1 TMSI status = no valid TMSI available |
| 9 | | SS | | The SS ignores the ROUTING AREA UPDATE REQUEST message and initiates a detach procedure. |
| 10 | <- | | DETACH REQUEST | Detach type = 'IMSI detach' |
| 11 | UE | | | The UE ignores the DETACH REQUEST message and continue the routing area updating procedure. |
| 12 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature MS identity = IMSI Routing area identity = RAI-4 |
| 13 | -> | | ROUTING AREA UPDATE COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.2.10.5 Test requirements

Test requirements for Test procedure 1

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate routing area update procedure.

At step11, when the UE receives a DETACH REQUEST message with cause 'GPRS detach' or 'combined GPRS/IMSI detach' from SS while waiting for a ROUTING AREA UPDATE ACCEPT message, UE shall:

- terminate the routing area updating procedure
- continue with the PS detach procedure.

Test requirements for Test procedure 2

At step3, when the UE is powered up or switched on, UE shall:

- initiate the combined PS attach procedure with the information elements specified in the above Expected Sequence.

At step8, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- initiate routing area update procedure.

At step11, the UE receives a DETACH REQUEST message with cause 'IMSI detach' from SS while waiting for a ROUTING AREA UPDATE ACCEPT message, UE shall:

- ignore the detach request procedure.
- continue with the routing area updating procedure.

## 12.4.2.11 Combined routing area updating / abnormal cases / access barred due to domain specific access restriction for CS domain

### 12.4.2.11.1 Definition

This test case is applicable for Rel-5 UEs supporting DSAC and Rel-6 or later UEs.

### 12.4.2.11.2 Conformance requirement

If the PS or CS domain is barred because of domain specific access control, a GPRS MS operating in mode A or B in a network that operates in mode I shall act as if in network operation mode II or III (depending on whether a PCCCH is present in Gb-mode) and access to the barred domain shall be stopped entirely. If the MS detects that a domain is barred, this shall not trigger any MM or GMM specific procedure.

...

Additionally the MS shall treat the expiry of T3312 when the PS domain changes from barred to unbarred, analogous to the descriptions for the cases when the timer expires out of coverage or in a cell that does not support GPRS (see subclause 4.7.2.2).

If timer T3312 expires and both the PS and CS domain are barred, then a GPRS MS operating in mode A or B in a network that operates in mode I shall treat the expiry of T3312 when the GPRS MS detects that the PS or CS domain becomes unbarred, analogous to the descriptions for the cases when the timer expires out of coverage (see subclause 4.7.2.2).

If the PS domain is barred and timer T3312 expires during an ongoing CS connection, then a GPRS MS operating in mode A or B in a network that operates in mode I shall treat the expiry of T3312 when the MM state MM-IDLE is entered, analogous to the descriptions for the cases when the timer expires out of coverage or in a cell that does not support GPRS (see subclause 4.7.2.2), or in a cell where the PS domain is barred.

A GPRS MS operating in mode A or B in a network that operates in mode I shall perform a combined routing area update procedure indicating "combined RA/LA updating with IMSI attach" (in order to establish the Gs association in the MSC/VLR) when the following conditions are fulfilled:

- the GPRS MS detects that CS or PS domain or both change from barred to unbarred;
- as a result of the change of the domain specific barring status, both domains are unbarred; and
- for the last attempt to update the registration of the location area an MM specific procedure was performed (see subclause 4.7.5.2.1) or for the last attempt to update the registration of the routing area a normal routing area update was performed.

#### Reference

3GPP TS 24.008 clause 4.1.1.2.1

### 12.4.2.11.3 Test purpose

To test the behaviour of the UE in case of domain specific access control for CS domain.

### 12.4.2.11.4 Method of test

#### Initial condition

An access class x (0-15) is arbitrarily chosen. The USIM is programmed with this access class x.
The SS informs the UE that the CS domain specific access class x is barred in the cell B.

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) has CS domain specific access class x is not barred, cell B in MCC1/MNC1/LAC2/RAC1 (RAI-3) has CS domain specific access class x is barred.
Both cells are operating in network operation mode I.

User Equipment:

The UE has valid IMSI.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
Support of DSAC Yes/No

#### Test procedure

A combined PS attach procedure is performed. The routing area is changed. The SS indicates that CS domain access class x is barred. A combined routing area updating procedure is not performed but a routing area updating procedure with RA updating is performed.

The SS indicates that CS domain specific access class x is not barred. A combined routing area updating procedure with IMSI attach is performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The USIM is programmed with access class x. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 4 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 5 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 6 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 7 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 8 | | SS | | The SS starts an integrity protection. |
| 9 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1<br>MS identity = TMSI-2 |
| 10 | -> | | ATTACH COMPLETE | |
| 11 | | SS | | The SS releases the RRC connection. |
| | | SS | | The following messages are sent and shall be received on cell B. |
| 12 | | SS | | Set the cell type of cell A to the "Non-Suitable cell ".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 13 | UE | | | Cell B, CS domain specific access class x is barred, is preferred by the UE. |
| 14 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 15 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 16 | | | | The SS starts an integrity protection |
| 17 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-3<br>Periodic RA update timer(T3312) = 6 minutes |
| 18 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 19 | | SS | | The SS releases the RRC connection. |
| 20 | | SS | | The access class x is not barred anymore. |
| 21 | | | Void | |
| 22 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 23 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA//LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Old Routing area identity = RAI-3 |
| 24 | | | | The SS starts an integrity protection |

| | | | |
|---|---|---|---|
| 25 | <- | ROUTING AREA UPDATE ACCEPT | Update result = ' combined RA/LA updated '<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-3 |
| 26 | -> | ROUTING AREA UPDATE COMPLETE | |
| 27 | SS | | The SS releases the RRC connection. |
| NOTE: | The definitions for "Serving cell" and "Non-Suitable cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | |

Specific message contents

None.

#### 12.4.2.11.5 Test requirements

At step15, when the SS indicates that PS domain specific access class x is barred, the UE shall:

- perform the normal (non combined) routing area updating procedure.

At step23, when the SS indicates that PS domain specific access class x is not barred, the UE shall:

- perform the combined routing area updating procedure with IMSI attach.

### 12.4.2.12 Combined routing area updating / abnormal cases / access barred due to domain specific access restriction for PS domain

#### 12.4.2.12.1 Definition

This test case is applicable for Rel-5 UEs supporting DSAC and Rel-6 or later UEs.

#### 12.4.2.12.2 Conformance requirement

TS24.008 clause 4.1.1.2.1

If the PS or CS domain is barred because of domain specific access control, a GPRS MS operating in mode A or B in a network that operates in mode I shall act as if in network operation mode II or III (depending on whether a PCCCH is present in Gb-mode) and access to the barred domain shall be stopped entirely. If the MS detects that a domain is barred, this shall not trigger any MM or GMM specific procedure.

A GPRS MS operating in mode A or B in a network that operates in mode I shall perform a normal location updating procedure (in order to remove the Gs association in the MSC/VLR) when the following conditions are fulfilled:

- the GPRS MS has camped on a cell where the PS domain is barred and the CS domain is unbarred; and
- T3312, T3311, T3302, or T3330 expires; and
- for the last attempt to update the registration of the location area a combined GMM procedure was performed.

Additionally the MS shall treat the expiry of T3312 when the PS domain changes from barred to unbarred, analogous to the descriptions for the cases when the timer expires out of coverage or in a cell that does not support GPRS (see subclause 4.7.2.2).

If timer T3312 expires and both the PS and CS domain are barred, then a GPRS MS operating in mode A or B in a network that operates in mode I shall treat the expiry of T3312 when the GPRS MS detects that the PS or CS domain becomes unbarred, analogous to the descriptions for the cases when the timer expires out of coverage (see subclause 4.7.2.2).

If the PS domain is barred and timer T3312 expires during an ongoing CS connection, then a GPRS MS operating in mode A or B in a network that operates in mode I shall treat the expiry of T3312 when the MM state MM-IDLE is entered, analogous to the descriptions for the cases when the timer expires out of coverage or in a cell that does not support GPRS (see subclause 4.7.2.2), or in a cell where the PS domain is barred.

A GPRS MS operating in mode A or B in a network that operates in mode I shall perform a combined routing area update procedure indicating "combined RA/LA updating with IMSI attach" (in order to establish the Gs association in the MSC/VLR) when the following conditions are fulfilled:

- the GPRS MS detects that CS or PS domain or both change from barred to unbarred;
- as a result of the change of the domain specific barring status, both domains are unbarred; and
- for the last attempt to update the registration of the location area an MM specific procedure was performed (see subclause 4.7.5.2.1) or for the last attempt to update the registration of the routing area a normal routing area update was performed.

Reference

3GPP TS 24.008 clause 4.1.1.2.1

12.4.2.12.3 Test purpose

To test the behaviour of the UE in case of domain specific access class control for PS domain.

12.4.2.12.4 Method of test

Initial condition

An access class x (0-15) is arbitrarily chosen. The USIM is programmed with this access class x.
The SS informs the UE that that the PS domain specific access class x is barred in the cell B.

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1) has PS domain specific access class x is not barred, cell B in MCC1/MNC1/LAC2/RAC1 (RAI-3) has PS domain specific access class x is barred.
Both cells are operating in network operation mode I.
T3212 is set to 6 minutes.

User Equipment:

The UE has a valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
Support of DSAC Yes/No

Test procedure

A combined PS attach procedure is performed. The routing area is changed. The SS indicates PS domain specific access class x is barred. A routing area updating procedure is not performed but a normal location area updating procedure is performed.

The SS indicates that PS domain specific access class x is not barred. A combined routing area updating procedure with IMSI attach is performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note) |
| 2 | | UE | | The USIM is programmed with access class x. |
| 3 | | UE | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 4 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 5 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity =IMSI<br>TMSI status = no valid TMSI available |
| 6 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 7 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 8 | | SS | | The SS starts an integrity protection. |
| 9 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1<br>MS identity = TMSI-2 |
| 10 | -> | | ATTACH COMPLETE | |
| 11 | | SS | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell B. |
| 12 | | SS | | Set the cell type of cell A to the “Non-Suitable cell”.<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| 13 | | UE | | Cell B, PS domain specific access class x is barred, is preferred by the UE. |
| 14 | | | Registration on CS | See TS 34.108 |
| 15 | | SS | | The access class x is not barred anymore. |
| 16 | | | Void | |
| 17 | | | Void | |
| 18 | | SS | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 19 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 20 | | | | The SS starts an integrity protection |
| 21 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-3 |
| 22 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 23 | | SS | | The SS releases the RRC connection. |
| NOTE: The definitions for "Serving cell" and "Non-Suitable cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

#### 12.4.2.12.5 Test requirements

At step14, when the SS indicates PS domain specific access class x is barred, the UE shall:

- perform the normal location area updating procedure.

At step19, when the SS indicates PS domain specific access class x is not barred, the UE shall:

- perform the combined routing area updating procedure with IMSI attach.

## 12.4.3 Periodic routing area updating

### 12.4.3.1 Periodic routing area updating / accepted

12.4.3.1.1 Definition

#### 12.4.3.1.2 Conformance requirement

The User Equipment shall perform a periodic routing area update procedure after a T3312 timeout.

Reference

3GPP TS 24.008 clauses 4.7.2.2 and 4.7.5.1.

#### 12.4.3.1.3 Test purpose

To test the behaviour of the UE with respect to the periodic routing area updating procedure.

#### 12.4.3.1.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II (in case of UE operation mode A).
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No
USIM removal possible without powering down Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The UE initiates a PS attach procedure with identity P-TMSI. The SS reallocates the P-TMSI and returns ATTACH ACCEPT message with a new P-TMSI and timer T3312. The UE acknowledge the new P-TMSI by sending ATTACH COMPLETE message. A routing area updating procedure is performed at T3312 timeout.

T3312; set to 6 minutes.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 11. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1<br>T3312 = 6 minutes |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | | SS | | The SS releases the RRC connection. |
| 5b | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 6 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Periodic updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 7 | | SS | | The SS verifies that the time between the attach and the periodic RA updating is T3312 |
| 7a | | SS | | The SS starts integrity protection. |
| 8 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-3 signature<br>Routing area identity = RAI-1 |
| 8a | | SS | | The SS releases the RRC connection. |
| 9 | | | Void | |
| 9a | | | Void | |
| 10 | | | Void | |
| 10a | | | Void | |
| 11 | | | | The SS is set in network operation mode II. |
| 12 | UE | | | The UE is set in UE operation mode A(see ICS) and the test is repeated from step 3 to step 10. |

Specific message contents

None.

12.4.3.1.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step6, when the timer T3312 is expired, UE shall:

- initiate the routing area updating procedure with Update type = 'Periodic updating'.

## 12.4.3.2 Periodic routing area updating / accepted / T3312 default value

12.4.3.2.1 Definition

#### 12.4.3.2.2 Conformance requirement

The User Equipment shall perform a periodic routing area update procedure after a T3312 timeout.

#### Reference

3GPP TS 24.008 clauses 4.7.2.2 and 4.7.5.2.

#### 12.4.3.2.3 Test purpose

To test the behaviour of the UE with respect to the periodic routing area updating procedure.

#### 12.4.3.2.4 Method of test

#### Initial condition

System Simulator:

One cell operating in network operation mode I.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

#### Test procedure

The UE initiates a combined PS attach procedure. The SS reallocates the P-TMSI and returns ATTACH ACCEPT message with a new P-TMSI and timer T3312. The UE acknowledge the new P-TMSI by sending ATTACH COMPLETE message. After 54 minutes, a periodic routing area updating procedure is initiated by the UE.

T3312; default value 54 minutes.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2 | -> | | ATTACH REQUEST | Attach type = 'Combined GPRS/IMSI attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 2a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 2b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 2c | SS | | | The SS starts integrity protection. |
| 3 | <- | | ATTACH ACCEPT | Attach result = 'Combined GPRS/IMSI attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Mobile identity = TMSI-1<br>Routing area identity = RAI-1<br>T3312 = 54 min |
| 4 | -> | | ATTACH COMPLETE | |
| 5 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Periodic updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>TMSI status = valid TMSI available or IE not present. |
| 6 | SS | | | The SS verifies that the time between the attach request and the periodic RA updating is T3312 |
| 7 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI and TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-3 signature<br>Routing area identity = RAI-1 |

Specific message contents

None.

12.4.3.2.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step5, when the timer T3312 is expired, UE shall:

- initiate the routing area updating procedure with Update type = 'Periodic updating'.

## 12.4.3.3 Periodic routing area updating / no cell available / network mode I

12.4.3.3.1 Definition

12.4.3.3.2 Conformance requirement

If the UE is both IMSI attached for PS and non-PS services, and if the UE lost coverage of the registered PLMN and timer T3312 expires; if the UE returns to coverage in a cell that supports PS and the network is in network operation mode I, then the UE shall perform a combined routing area update procedure indicating 'combined RA/LA updating with IMSI attach'.

Reference

3GPP TS 24.008 clauses 4.7.2.2 and 4.7.5.1.

#### 12.4.3.3.3 Test purpose

To test the behaviour of the UE with respect to the periodic routing area updating procedure.

#### 12.4.3.3.4 Method of test

##### Initial condition

System Simulator:

Two cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4). Cell A is operating in network operation mode II and cell B is in network operation mode I.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

##### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

##### Test procedure

The UE initiates a PS attach procedure. The SS reallocates the P-TMSI and returns ATTACH ACCEPT message with a new P-TMSI and timer T3312. The UE acknowledge the new P-TMSI by sending ATTACH COMPLETE message. PS radio contact is distorted before T3312 timeout. PS radio contact is established again (after T3312 timeout), and a routing area updating procedure is performed immediately.

T3312; set to 6 minutes.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 2 | | SS | | The UE is set in UE operation mode A (see ICS). |
| 3 | | UE | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = P-TMSI-1 Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | | SS | | The SS starts integrity protection. |
| 5 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 T3312 = 6 minutes |
| 6 | -> | | ATTACH COMPLETE | |
| 7 | | SS | | After 5 minutes, the signal strength is lowered until the UE has lost contact with the SS. Set the cell type of cell A to the "non-suitable cell".(see note) |
| 8 | | SS | | Wait 2 minutes. |
| | | | | The following messages are sent and shall be received on cell B. |
| 9 | | SS | | Set the cell type of cell B to the "Serving cell". (see note) |
| 10 | | UE | | Cell B is preferred by the UE. |
| 11 | | UE | | The UE immediately starts a combined RA updating procedure |
| 12 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Combined RA/LA updating with IMSI attach' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-1 TMSI status = valid TMSI available or IE is omitted. |
| 13 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'Combined RA/LA updated' Allocated P-TMSI = P-TMSI-3 P-TMSI Signature = P-TMSI-3 signature MS identity = TMSI-2 Routing area identity = RAI-4 |
| 14 | -> | | ROUTING AREA UPDATE COMPLETE | |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.4.3.3.5 Test requirements

At step4, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step12, when the UE is both IMSI attached for PS and non-PS service , and if the UE lost coverage of the reiterated PLMN and the timer T3312 expires, if the UE returns to coverage in a cell that supports PS and the network is in network oration mode I, UE shall:

- perform the combined routing area update procedure indicating "combined RA/LA updating with IMSI attach".

## 12.4.3.4 Periodic routing area updating / no cell available

12.4.3.4.1 Definition

### 12.4.3.4.2 Conformance requirement

If the UE is both IMSI attached for PS and non-PS services, and if the UE lost coverage of the registered PLMN and timer T3312 expires; if the UE returns to coverage in a cell that supports PS and the network is in network operation mode II, then the UE shall perform a periodic routing area update procedure and a periodic location update procedure.

#### Reference

3GPP TS 24.008 clauses 4.7.2.2 and 4.7.5.2.

### 12.4.3.4.3 Test purpose

To test the behaviour of the UE with respect to the periodic routing area updating procedure.

### 12.4.3.4.4 Method of test

#### Initial condition

System Simulator:

One cell operating in network operation mode II.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

#### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

#### Test procedure

The UE initiates a PS attach procedure. The SS reallocates the P-TMSI and returns ATTACH ACCEPT message with a new P-TMSI and timer T3312. The UE acknowledge the new P-TMSI by sending ATTACH COMPLETE message. PS radio contact is distorted before T3312 timeout. PS radio contact is established again (after T3312 timeout), and a periodic routing area updating procedure is performed immediately (no periodic location update procedure is performed as T3212=infinity).

T3312; set to 6 minutes.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 1a | UE | | Registration on CS | See TS 34.108<br>This is applicable only for UE in UE operation mode A. |
| 2 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 2a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 2b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 2c | | SS | | The SS starts integrity protection. |
| 3 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1<br>T3312 = 6 minutes |
| 4 | -> | | ATTACH COMPLETE | |
| 5-12 | | | (void) | |
| 13 | | SS | | After 5 minutes, the signal strength is lowered until the UE have lost contact with the SS. |
| 14 | | SS | | After 2 minutes, the signal strength is increased until the UE have got contact with the SS. |
| 15 | UE | | | The UE immediately start the periodic RA updating procedure |
| 16 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Periodic updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1 |
| 17 | <- | | ROUTING AREA UPDATE ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Update result = 'RA updated'<br>P-TMSI-3 signature<br>Routing area identity = RAI-1 |

Specific message contents

RRC System information block type 1

| Information element | CommentValue |
|---|---|
| T3212 (Periodical Location updating) | Infinity |

#### 12.4.3.4.5 Test requirements

At step2, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step16, when the UE is both IMSI attached for PS and non-PS service, and if the UE lost coverage of the reiterated PLMN and the timer T3312 expires, if the UE returns to coverage in a cell in the same RA that supports PS and that indicates that the network is in network operation mode II, UE shall:

- perform the periodic routing area updating procedure indicating "Periodic updating".

## 12.5 P-TMSI reallocation

### 12.5.1 Definition

### 12.5.2 Conformance requirement

1) A User Equipment shall acknowledge a new P-TMSI when explicitly allocated.

2) The P-TMSI shall be updated on the USIM when the User Equipment is correctly deactivated in accordance with the manufacturer's instructions.

3) A User Equipment shall use the given P-TMSI in further communication with the network.

### Reference

3GPP TS 24.008 clause 4.7.6.

## 12.5.3 Test purpose

To verify that the UE is able to receive and acknowledge a new P-TMSI by means of an explicit P-TMSI reallocation procedure.

To verify that the UE has stored the P-TMSI in a non-volatile memory.

The implicit reallocation procedure is tested in the attach procedure.

## 12.5.4 Method of test

### Initial condition

System Simulator:

- One cell operating in network operation mode II.
- The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No (only if mode A not supported)
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

An explicit P-TMSI reallocation procedure is performed (P-TMSI reallocation command sent from the SS and acknowledged from the UE by P-TMSI reallocation complete). The UE is PS detached and switched off. Its power supply is interrupted for 10 seconds. The power supply is resumed and then the UE is switched on. A PS attach procedure is performed with the given P-TMSI as identity.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode A (see ICS). If UE operation mode A not supported set the UE in operation mode C. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | <- | | P-TMSI REALLOCATION COMMAND | Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 7 | -> | | P-TMSI REALLOCATION COMPLETE | |
| 8 | UE | | | The UE is switched off or power is removed (see ICS). |
| 8a | SS | | | SS checks that the IE "Establishment cause" in any received RRC CONNECTION REQUEST message is set to "Detach". |
| 9 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRSdetach' |
| 9a | SS | | | If the power was not removed, the SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off . |
| 10 | UE | | | Ensure the power is removed from the UE for at least 10 seconds |
| 11 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 11a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 12 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-2<br>Old Routing area identity = RAI-1 |
| 12a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 12b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 12c | SS | | | The SS starts integrity protection. |
| 13 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI not included.<br>Attach result = 'GPRS only attached'<br>P-TMSI-3 signature<br>Routing area identity = RAI-1 |
| 13a | SS | | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 14 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-2<br>Paging order is for PS services.<br>Paging cause = "Terminating interactive call". |

| | | | |
|---|---|---|---|
| 15 | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call". |
| 16 | | Void | |
| 17 | | Void | |
| 18 | -> | SERVICE REQUEST | service type = "paging response" |
| 18a | SS | | The SS starts integrity protection. |
| 19 | SS | | The SS releases the RRC connection. |
| 20 | | Void | |

Specific message contents

None.

12.5.5 Test requirements

At step3, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step7, when the UE receives P-TMSI REALLOCATION COMMAND message from SS, UE shall:

- acknowledge the new P-TMSI by sending P-TMSI REALLOCATION COMPLETE message.

At step12, when the UE is powered up or switched on, UE shall:

- initiate the PS attach procedure with the information elements specified in the above Expected Sequence.

At step18, when the UE receives the paging message for PS domain with Mobile identity = P-TMSI-2, UE shall:

- respond to the paging message for PS domain by sending the SERVICE REQUEST message.

# 12.6 PS authentication

## 12.6.1 Test of authentication

The purpose of this procedure is to verify the user identity. A correct response is essential to guarantee the establishment of the connection. If not, the connection will drop.

### 12.6.1.1 Authentication accepted

12.6.1.1.1 Definition

12.6.1.1.2 Conformance requirement

A User Equipment shall correctly respond in an authentication and ciphering procedure by sending a response with the RES information field set to the same value as the one produced by the authentication and ciphering algorithm in the network.

Reference

3GPP TS 24.008 clause 4.7.7.

12.6.1.1.3 Test purpose

To test the behaviour of the UE if the network accepts the authentication and ciphering procedure.

12.6.1.1.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).
Both cells are operating in network operation mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A) in both cells.

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

A PS attach is performed, and the SS initiates an authentication and ciphering procedure.

The SS checks the value RES sent by the UE in the AUTHENTICATION AND CIPHERING RESPONSE message.

The UE initiates a routing area updating procedure and the SS checks the value of the PS Ciphering Key Sequence Number sent by the UE in the ROUTING AREA REQUEST message.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 2 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C not supported, goto step 17. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = IMSI |
| 5 | | <- | AUTHENTICATION AND CIPHERING REQUEST | Request authentication. Set PS-CKSN-1 |
| 6 | | -> | AUTHENTICATION AND CIPHERING RESPONSE | RES |
| 7 | | SS | | The SS checks the RES value and starts integrity protection. |
| 8 | | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 |
| 9 | | -> | ATTACH COMPLETE | |
| 9a | | SS | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell B. |
| 10 | | SS | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 10a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 11 | | -> | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-1 PS-CKSN-1 |
| 12 | | SS | | The value of PS-CKSN is checked. Integrity protection is started. |
| 13 | | <- | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature Routing area identity = RAI-4 |
| 14 | | -> | ROUTING AREA UPDATE COMPLETE | |
| 15 | UE | | | The UE is switched off or power is removed (see ICS). |
| 16 | | -> | DETACH REQUEST | Message not sent if power is removed. Detach type = 'power switched off, GPRSdetach' |
| 16a | | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 17 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |

| | | | |
|---|---|---|---|
| 18 | UE | | The UE is set in UE operation mode A (see ICS) and the test is repeated from step 3 to step 16a. |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

12.6.1.1.5 Test requirements

At steps 3a and 10a the UE shall transmit an RRC CONNECTION REQUEST message with the IE "Establishment cause" set to "Registration".

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step6, when the UE receives the AUTHENTICATION AND CIPHERING REQUEST message form SS, UE shall:

- send the AUTHENTICATION AND CIPHERING RESPONSE message with the RES information field set to the same value as the one produced by the authentication and ciphering algorithm in the network.

At step11, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- perform routing area updating procedure.

## 12.6.1.2 Authentication rejected by the network

12.6.1.2.1 Definition

12.6.1.2.2 Conformance requirement

Upon receipt of an AUTHENTICATION AND CIPHERING REJECT message, the UE shall set the PS update status to GU3 ROAMING NOT ALLOWED and shall delete the P-TMSI, P-TMSI signature, RAI and PS ciphering key sequence number stored.

The USIM shall be considered as invalid until switching off or the USIM is removed.

If the AUTHENTICATION AND CIPHERING REJECT message is received, the UE shall abort any GMM procedure, shall stop the timers T3310 and T3330 (if running) and shall enter state GMM-DEREGISTERED.

Reference

3GPP TS 24.008 clauses 4.7.7.5.

12.6.1.2.3 Test purpose

To test the behaviour of the UE if the network rejects the authentication and ciphering procedure.

12.6.1.2.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).
Both cells are operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

The test sequence is repeated for K = 1, 2.

A complete PS attach procedure is performed. The SS rejects the following authentication and ciphering procedure. The UE is paged with its IMSI and shall not respond.
The Cell is changed into a new Routing Area.

The SS checks that the UE does not perform normal routing area updating.

The SS then checks that the UE does not perform a PS detach.

The SS checks that the UE does not perform a PS Attach procedure.

### Expected Sequence

The test sequence is repeated for k = 1, 2

For k =1, the UE is set in UE operation mode C. If MS operation mode C not supported then k = 2.

For k = 2 the UE is set in UE operation mode A.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | | | Void | |
| 2b | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = IMSI |
| 4 | | | Void | |
| 5 | | | Void | |
| 6 | | <- | AUTHENTICATION AND CIPHERING REQUEST | Request authentication. Set PS-CKSN-1 |
| 7 | | -> | AUTHENTICATION AND CIPHERING RESPONSE | RES |
| 8 | | <- | AUTHENTICATION AND CIPHERING REJECT | |
| 8a | | SS | | The SS releases the RRC connection and waits 5s to allow the UE to read system information. |
| 9 | | <- | PAGING TYPE1 | Mobile identity = IMSI Paging order is for PS services. |
| 10 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| | | | | The following messages are sent and shall be received on cell B. |
| 11 | | SS | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 12 | UE | | | Cell B is preferred by the MS. |
| 13 | UE | | | No ROUTING AREA UPDATE REQUEST sent to the SS (SS waits 30 seconds). |
| 14 | UE | | | The UE initiates an attach by MMI or by AT command. |
| 15 | UE | | | No ATTACH REQUEST sent to the SS (SS waits 30 seconds). |
| 16 | UE | | | The UE is switched off (see ICS). |
| 17 | SS | | | No DETACH REQUEST sent to the SS (SS waits 30 seconds). |
| 18 | | | | The UE is powered up or switched on and initiates an attach (see ICS). Step 19 is only performed for k =2 |
| 19 | UE | | Registration on CS | See TS 34.108 SS checks Mobile identity = IMSI. SS allocates Mobile identity = TMSI-1. |
| 19a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 20 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = IMSI |
| 20a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 20b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 20c | | SS | | The SS starts integrity protection. |
| 21 | | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature Routing area identity = RAI-4 |

| | | | |
|---|---|---|---|
| 22 | -> | ATTACH COMPLETE | |
| 22a | SS | | The SS releases the RRC connection. |
| 23 | UE | | The UE is switched off or power is removed. (see ICS) |
| 23a | SS | | SS checks that the IE "Establishment cause" in any received RRC CONNECTION REQUEST message is set to "Detach". |
| 24 | -> | DETACH REQUEST | Message not sent if power is removed. |
| 24a | SS | | If the power was not removed, the SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off . |
| 25 | UE | | If k=1 then the test is repeated for k=2. |
| NOTE: The definitions for "Non-Suitable celll" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

12.6.1.2.5 Test requirements

At step3, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step9, when the UE receives the AUTHENTICATION AND CIPHERING REJECT message, UE shall:

- not respond paging message for PS domain.

At step13, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- not perform normal routing area updating.

At step17, when the UE is switched off, UE shall:

- not perform PS detach procedure.

## 12.6.1.3 Authentication rejected by the UE

### 12.6.1.3.1 GMM cause 'MAC failure'

12.6.1.3.1.1 Definition

12.6.1.3.1.2 Conformance requirement

If the UE considers the MAC code (supplied by the core network in the AUTN parameter) to be invalid, the UE shall send AUTHENTICATION AND CIPHERING FAILURE message with the reject cause 'MAC failure' to the System Simulator.

Reference

3GPP TS 24.008 clause 4.7.7.

12.6.1.3.1.3 Test purpose

To test the behaviors of the UE, when the UE considers the MAC code (supplied by the core network in the AUTN parameter) to be invalid.

12.6.1.3.1.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).
Both cells are operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

The MAC (Message Authentication Code) code, which is included in AUTHENTICATION AND CIPHERING REQUEST, is invalid value.

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

A PS attach is performed, and the SS initiates an authentication and ciphering procedure.

The UE sends AUTHENTICATION AND CIPHERING FAILURE message with reject cause 'MAC failure' to the SS.

The SS initiates an identification procedure, upon receipt of a failure message with reject cause 'MAC failure'.

After the identification procedure is complete, the SS re-initiates an authentication and ciphering procedure.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note 1) |
| 2 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, goto step 25. |
| 3 | UE | | | |
| 4 | | | | The following messages are sent and shall be received on cell A. |
| 5 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 5a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 6 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobility identity = IMSI |
| 7 | <- | | AUTHENTICATION AND CIPHERING REQUEST | Request authentication. Invalid Message Authentication Code (MAC). |
| 9 | -> | | AUTHENTICATION AND CIPHERING FAILURE | GMM cause='MAC failure' |
| 9a | <- | | IDENTITY REQUEST | Identity type = IMSI |
| 9b | -> | | IDENTITY RESPONSE | Mobile identity = IMSI |
| 10 | <- | | AUTHENTICATION AND CIPHERING REQUEST | Request authentication. Including PS-CSKN-1 |
| 11 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | RES |
| 12 | | SS | | The SS checks the RES value and starts integrity protection. |
| 13 | | | Void | |
| 14 | | | Void | |
| 15 | | | Void | |
| 16 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 |
| 17 | -> | | ATTACH COMPLETE | |
| 17a | | SS | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell B. |
| 18 | | SS | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell B to the "Serving cell". (see note 1) |
| 18a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 19 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-1 PS-CKSN-1 |
| 20 | | SS | | The SS checks the value of PS-CKSN and starts integrity protection. |
| 21 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature Routing area identity = RAI-4 |
| 22 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 23 | UE | | | The UE is switched off or power is removed (see ICS). |

| | | | |
|---|---|---|---|
| 24 | -> | DETACH REQUEST | Message is not sent if power is removed. Detach type = 'power switched off, GPRSdetach' |
| 24a | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 25 | UE | | The UE is set in UE operation mode A (see ICS) and the test is repeated from step 1 to step 24. |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

12.6.1.3.1.5 Test requirements

At step6, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information element specified in the above Expected Sequence.

At step9, when the UE receives the AUTHENTICATION AND CIPHERING REQUEST with Invalid Message Authentication Code, UE shall:

- send the AUTHENTICATION AND CIPHERING FAILURE message with GMM cause 'MAC failure' to the SS

At step11, when the UE receives the second AUTHENTICATION AND CIPHERING REQUEST message (containing a valid MAC) from SS, UE shall:

- send the AUTHENTICATION AND CIPHERING RESPONSE message to SS.

At step9b, when the UE receives the IDENTITY REQUEST message with Identity type = IMSI from SS, UE shall:

- send the IDENTITY RESPONSE message with Mobile identity = IMSI to SS.

## 12.6.1.3.2 GMM cause 'Synch failure'

12.6.1.3.2.1 Definition

12.6.1.3.2.2 Conformance requirement

If the UE considers the SQN (supplied by the core network in the AUTN parameter) to be out of range, the UE shall send AUTHENTICATION AND CIPHERING FAILURE message with the reject cause 'Synch failure' to the System Simulator.

Reference

3GPP TS 24.008 clause 4.7.7.

12.6.1.3.2.3 Test purpose

To test the behaviors of the UE, when the UE considers the SQN (supplied by the core network in the AUTN parameter) to be out of range.

12.6.1.3.2.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4).
Both cells are operating in network operation mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

### Test procedure

A PS attach is performed, and the SS initiates an authentication and ciphering procedure.

UE sends AUTHENTICATION AND CIPHERING FAILURE message with reject cause 'synch failure' to the SS.

SS re-initiates an authentication and ciphering procedure.

### Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | SS | | | Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note 1) |
| 2 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, goto step 21. |
| | | | | The following messages are sent and shall be received on cell A. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 3a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobility identity = IMSI |
| 5 | <- | | AUTHENTICATION AND CIPHERING REQUEST | Request authentication. SQN is out of range. |
| 6 | | | Void | |
| 7 | -> | | AUTHENTICATION AND CIPHERING FAILURE | GMM cause = 'Synch failure' AUTS parameter |
| 8 | SS | | | set new authentication vectors. (re-synchronisation) |
| 9 | <- | | AUTHENTICATION AND CIPHERING REQUEST | Request authentication. Including PS-CKSN-1 |
| 10 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | RES |
| 11 | SS | | | The SS checks the RES value and starts integrity protection. |
| 12 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 |
| 13 | -> | | ATTACH COMPLETE | |
| 13a | SS | | | The SS releases the RRC connection. |
| | | | | The following messages are sent and shall be received on cell B. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 14 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell". (see note 1) |
| 14a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 15 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-2 signature<br>Old Routing area identity = RAI-1<br>PS-CKSN-1 |
| 16 | | SS | | The SS checks the value of PS-CKSN and starts integrity protection |
| 17 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-4 |
| 18 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 19 | UE | | | The UE is switched off or power is removed (see ICS). |
| 20 | -> | | DETACH REQUEST | Message is not sent if power is removed.<br>Detach type = 'power switched off, GPRSdetach' |
| 20a | | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 21 | UE | | | The UE is set in UE operation mode A (see ICS) and the test is repeated from step 1 to step 20. |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.6.1.3.2.5 Test requirements

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information element specified in the above Expected Sequence.

At step7, when the UE receives the AUTHENTICATION AND CIPHERING REQUEST message(SQN is out of range.), UE shall:

- send the AUTHENTICATION AND CIPHERING FAILURE message with GMM cause 'synch failure' to the SS

At step9, when the UE receives the second AUTHENTICATION AND CIPHERING REQUEST message from SS, UE shall:

- send the AUTHENTICATION AND CIPHERING RESPONSE message to SS.

At step15, when the RF level of the attached cell is lower than the RF level of the new cell, UE shall:

- perform routing area updating procedure.

#### 12.6.1.3.3 Authentication rejected by the UE / fraudulent network

##### 12.6.1.3.3.1 Definition

##### 12.6.1.3.3.2 Conformance requirement

R99 and REL-4:

1. It can be assumed that the source of the authentication challenge is not genuine (authentication not accepted by the UE) if any of the following occur:

   - After sending the AUTHENTICATION & CIPHERING FAILURE message with GMM cause 'MAC failure' the timer T3318 expires;

   - Upon receipt of the second AUTHENTICATION & CIPHERING REQUEST message from the network while the T3318 is running and the MAC value cannot be resolved.

   When it has been deemed by the MS that the source of the authentication challenge is not genuine (authentication not accepted by the MS), the MS shall behave as described in 3GPP 24.008 clause 4.7.7.6.1.

2. In addition to the cases specified in subclause 4.7.7.6, the UE may deem that the network has failed the authentication check after any combination of three consecutive authentication failures, regardless whether 'MAC failure', 'invalid SQN', or 'GSM authentication unacceptable' was diagnosed. The authentication failures shall be considered as consecutive only, if the authentication challenges causing the second and third authentication failure are received by the UE, while the timer T3318 or T3320 started after the previous authentication failure is running.

   If the UE deems that the network has failed the authentication check, then it shall request RR or RRC to release the RR connection and the PS signalling connection, if any, and bar the active cell or cells (see 3GPP TS 25.331 and 3GPP TS 04.18).

Reference

3GPP TS 24.008 clause 4.7.7.6 (f) and 4.7.7.6.1.

REL-5 and later releases:

1. It can be assumed that the source of the authentication challenge is not genuine (authentication not accepted by the UE) if any of the following occurs:

   - after sending the AUTHENTICATION & CIPHERING FAILURE message with GMM cause 'MAC failure' the timer T3318 expires;

   - the MS detects any combination of the authentication failures: "MAC failure", "invalid SQN", and "GSM authentication unacceptable", during three consecutive authentication challenges. The authentication challenges shall be considered as consecutive only, if the authentication challenges causing the second and third authentication failure are received by the MS, while the timer T3318 or T3320 started after the previous authentication failure is running.

   When it has been deemed by the MS that the source of the authentication challenge is not genuine (authentication not accepted by the MS), the MS shall behave as described in 3GPP TS 24.008 subclause 4.7.7.6.1.

2. If the UE deems that the network has failed the authentication check, then it shall request RR or RRC to release the RR connection and the PS signalling connection, if any, and bar the active cell or cells (see 3GPP TS 25.331 and 3GPP TS 44.018).

Reference

3GPP TS 24.008 clause 4.7.7.6 (f) and 4.7.7.6.1.

##### 12.6.1.3.3.3 Test purpose

R99 and REL-4

To test UE treating a cell as barred:

1. when the network sends the second or third AUTHENTICATION & CIPHERING REQUEST message with invalid MAC code during the timer T3318 is running.

2. when the timer T3318 has expired.

REL-5 or later release:

To test UE treating a cell as barred:

1. when the network sends the third AUTHENTICATION & CIPHERING REQUEST message with invalid MAC code during the timer T3318 is running.

2. when the timer T3318 has expired.

#### 12.6.1.3.3.4 Method of test

##### Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC1/LAC1/RAC1(RAI-1), cell B in MCC1/MNC1/LAC1/RAC2(RAI-2).
Both cells are operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

##### Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

##### Test procedure

Two cells are configured. Cell A transmits with higher power so that the UE attempts an attach procedure to cell A.

During the attach procedure, the SS initiates an authentication and ciphering procedure but it sends an incorrect Message Authentication Code (MAC) value in its AUTHENTICATION AND CIPHERING REQUEST message.

The UE sends AUTHENTICATION AND CIPHERING FAILURE message to the SS indicating authentication failure.

The SS repeats a second time the authentication procedure, again with an incorrect Message Authentication Code (MAC) value in its AUTHENTICATION AND CIPHERING REQUEST message.

For R99 and REL-4: SS waits 30 seconds. If the UE sends an AUTHENTICATION AND CIPHERING FAILURE message during this time then the the SS repeats the authentication procedure a third time and then waits 30 seconds. The UE moves into idle mode and do not make any access attempt on Cell A.

For REL-5 or later relaese: The SS repeats a third time the authentication procedure, again with an incorrect Message Authentication Code (MAC) value in its AUTHENTICATION AND CIPHERING REQUEST message. The UE moves into idle mode and do not make any access attempt on Cell A.

The UE shall attempt to attach to cell B. The SS initiates an authentication and ciphering procedure but it sends an incorrect Message Authentication Code (MAC) value in its AUTHENTICATION AND CIPHERING REQUEST message. The UE sends AUTHENTICATION AND CIPHERING FAILURE message to the SS indicating authentication failure.

The SS waits for T3318 to expire.

The UE shall treat now both cells as barred and shall not attempt to access the network, even if the user triggers the UE to perform an attach procedure.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>(see note)<br>The following messages are sent and shall be received on cell A. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach procedure. |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobility identity = IMSI |
| 4 | <- | | AUTHENTICATION AND CIPHERING REQUEST | Request for authentication.<br>Invalid Message Authentication Code (MAC). |
| 5 | -> | | AUTHENTICATION AND CIPHERING FAILURE | GMM cause='MAC failure' |
| 6 | <- | | AUTHENTICATION AND CIPHERING REQUEST | Request for authentication.<br>Invalid Message Authentication Code (MAC). |
| 7 | -> | | AUTHENTICATION AND CIPHERING FAILURE | GMM cause='MAC failure'<br>R99 and REL-4: In case message is not received within 30s then SS should continue from step 9. |
| 7a | <- | | AUTHENTICATION AND CIPHERING REQUEST | Request for authentication.<br>Invalid Message Authentication Code (MAC).<br>R99 and REL-4: Optional step |
| 7b | | | Void | |
| 8 | | SS | | SS verifies that the UE does not attempt to access the network for 30s.<br>R99 and REL-4: Optional step |
| 9 | | SS | | Set the cell type of cell A to the "Non-Suitable cell".<br>Set the cell type of cell B to the "Serving cell".<br>(see note) |
| | | | | UE shall attempt an attach on cell B.<br>The following messages are sent and shall be received on cell B. |
| 10 | UE | | | The UE initiates an attach by MMI or AT command. |
| 11 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobility identity = IMSI |
| 12 | <- | | AUTHENTICATION AND CIPHERING REQUEST | Request for authentication.<br>Invalid Message Authentication Code (MAC). |
| 13 | -> | | AUTHENTICATION AND CIPHERING FAILURE | GMM cause='MAC failure' |
| 14 | | SS | | SS waits T3318 (20s) |
| 15 | | SS | | SS verifies that the UE does not attempt to access the network for 30s. |
| 16 | UE | | | The UE initiates an attach by MMI or AT command. |
| 17 | | SS | | SS verifies that the UE does not attempt to access the network for 30s. |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.6.1.3.3.5 Test requirements

At step3, when the UE is powered on or switched on, the UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

After step4, when the UE have received the first AUTHENTICATION AND CIPHERING REQUEST message with invalid Message Authentication Code (MAC), the UE shall:

- send the AUTHENTICATION AND CIPHERING FAILURE message with GMM cause 'MAC failure' to the SS.

For R99 and REL-4 UE:

Alternative 1:

- After step 6, when the UE have received the second AUTHENTICATION AND CIPHERING REQUEST message with invalid Message Authentication Code (MAC), the UE shall not attempt to access the network.

Alternative 2:

- After step6, when the UE have received the second AUTHENTICATION AND CIPHERING REQUEST message with invalid Message Authentication Code (MAC) while the timer T3318 is running, the UE shall send an AUTHENTICATION AND CIPHERING FAILURE message with GMM cause 'MAC failure' to the SS; and

- After step 7a , when the UE have received the third AUTHENTICATION AND CIPHERING REQUEST message with invalid Message Authentication Code (MAC), the UE shall not attempt to access the network.

For REL-5 UE:

- After step 6, when the UE receives the second AUTHENTICATION AND CIPHERING REQUEST message with invalid Message Authentication Code (MAC) from the network while the timer T3318 is running, the UE shall send an AUTHENTICATION AND CIPHERING FAILURE message with GMM cause 'MAC failure' to the SS; and

- After step 7a, when the UE have received the third AUTHENTICATION AND CIPHERING REQUEST message with invalid Message Authentication Code (MAC), the UE shall not attempt to access the network.

At step 11, when the activated cell is changed from cell A to cell B, the UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

After step 12, when the UE have received the AUTHENTICATION AND CIPHERING REQUEST message with invalid Message Authentication Code (MAC), the UE shall:

- send an AUTHENTICATION AND CIPHERING FAILURE message with GMM cause 'MAC failure' to the SS.

At step 17, when the timer T3318 have expired, the UE shall:

- not attempt to access the network.

## 12.6.2 Void

# 12.7 Identification procedure

The purpose of this procedure is to check that the UE gives its identity as requested by the network. If this procedure does not work, it will not be possible for the network to rely on the identity claimed by the UE.

## 12.7.1 General Identification

12.7.1.1 Definition

12.7.1.2 Conformance requirement

1) When requested by the network the User Equipment shall send its IMSI.

2) When requested by the network the User Equipment shall send its IMEI as stored in the Mobile Equipment.

3) When requested by the network the User Equipment shall send its IMEISV as stored in the Mobile Equipment.

Reference

3GPP TS 24.008 clauses 4.7.8

12.7.1.3 Test purpose

To verify that the UE sends identity information as requested by the system. The following identities can be requested: IMSI, IMEI and IMEISV.

12.7.1.4 Method of test

Initial condition

System Simulator:

One cell operating in network mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A).

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS requests identity information from the UE:

- IMSI
- IMEI
- IMEISV

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | The UE is set to attach to PS services only (see ICS). If that is not supported by the UE, goto step 14. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 4 | | | Void | |
| 5 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 5a | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5b | | SS | | The SS starts ciphering and integrity protection. |
| 6 | <- | | IDENTITY REQUEST | Identity type = IMSI |
| 7 | -> | | IDENTITY RESPONSE | Mobile identity = IMSI |
| 8 | <- | | IDENTITY REQUEST | Identity type = IMEI |
| 9 | -> | | IDENTITY RESPONSE | Mobile identity = IMEI |
| 10 | <- | | IDENTITY REQUEST | Identity type = IMEISV |
| 11 | -> | | IDENTITY RESPONSE | Mobile identity = IMEISV |
| 11a | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 11b | -> | | ATTACH COMPLETE | |
| 11c | | SS | | The SS releases the RRC connection. |
| 12 | UE | | | The UE is switched off or power is removed (see ICS). |
| 12a | | SS | | SS checks that the IE "Establishment cause" in any received RRC CONNECTION REQUEST message is set to "Detach" (message not received if power is removed). |
| 13 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRSdetach' |
| 13a | | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 14 | UE | | | The UE is set to attach to both PS and non-PS services (see ICS) and the test is repeated from step 2 to step 13a. |

Specific message contents

None.

12.7.1.5 Test requirements

At step 2a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

At step 12a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach".

At step3, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step7, when the SS requests an IMSI with the IDENTITY REQUEST message, UE shall:

- send the IDENTITY RESPONSE message with the Mobile identity = IMSI.

At step9, when the SS requests an IMEI with the IDENTITY REQUEST message, UE shall:

- send the IDENTITY RESPONSE message with the Mobile identity = IMEI.

At step11, when the SS requests an IMEISV with the IDENTITY REQUEST message, UE shall:

- send the IDENTITY RESPONSE message with the Mobile identity = IMEISV.

# 12.8 GMM READY timer handling

12.8.1 Definition

12.8.2 Conformance requirement

If a READY timer value is received by an UE capable of both UMTS and GSM in the ATTACH ACCEPT or the ROUTING AREA UPDATE ACCEPT messages, then the received value shall be stored by the UE in order to be used at an intersystem change from UMTS to GSM.

Reference

3GPP TS 24.008 clause 4.7.2.1

12.8.3 Test purpose

To verify that READY timer value received in UTRA can be used in GSM.

12.8.4 Method of test

12.8.4.1 Test procedure

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A (UTRAN) in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B (GSM) in MCC1/MNC1/LAC1/RAC2 (RAI-4).

Cell B is in neigbour cell list of cell A.
Both cells are operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in cell A (UTRAN).
The value of ATT flag in SIB3 IE “Control Channel Description” is set to value “0” in cell B (GSM).

In SIB3 and SIB4 the IE “$S_{searchRAT}$”, is set to value “20dB” in cell A (UTRAN).

User Equipment:

The UE has a valid IMSI.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

UE supports both GSM/GPRS and UTRAN Radio Access Technologies Yes/No
UE supports UTRAN interactive/ background UL: 64kbps, DL: 64 kbps/PS RAB + uplink:3.4 DL:3.4 kbps SRBs Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

An attach is performed.

T3314; set to 60 seconds

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | | SS | | Set the cell type of cell A to the "Serving cell". Cell B is switched off. (see note) |
| 2 | UE | | | The UE is set in UE operation mode A (see ICS). If UE operation mode A not supported set the UE in operation mode C. The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = IMSI |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached' Allocated P-TMSI = P-TMSI-2 P-TMSI Signature = P-TMSI-2 signature Routing area identity = RAI-1 T3314 = 60 seconds T3312=6 minutes |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | | SS | | The SS releases the RRC connection. |
| 6 | | SS | | Set the cell type of cell A to the "Suitable neighbour cell".Set the cell type of cell B to the "Serving cell". |
| 7 | UE | | | UE establish cell reselection to GSM system The following messages are received on Cell B (GERAN) |
| 8a | UE | | Registration on CS | Optional step. See TS 34.108 Location Update Procedure may be initiated from the UE. |
| 8 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating' Old P-TMSI signature=P-TMSI-2 signature Old Routing area identity = RAI-1 |
| 9 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated' Allocated P-TMSI = P-TMSI-1 P-TMSI Signature = P-TMSI-1 signature Routing area identity = RAI-4 |
| 10 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 11 | | SS | | The SS verifies that the time between the end of Step 10 and the periodic RA updating is Ready Timer Period (T3314) + Periodic Routing Area Updating timer (T3312) (+/- 10%) |
| 12 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'Periodic updating' Old P-TMSI signature=P-TMSI-1 signature Old Routing area identity = RAI-4 |
| 13 | <- | | ROUTING AREA UPDATE ACCEPT | Update type = 'RA updated' |
| 14 | UE | | | UE is swithed off or power is removed (see ICS) |
| 15 | -> | | DETACH REQUEST | Message not sent if power is removed. Detach type = 'power switched off, GPRS detach' |

NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only".

Specific message contents

None.

12.8.5 Test requirements

At step4, when the UE receives the ATTACH ACCEPT or the ROUTING AREA UPDATE ACCEPT messages, UE shall:

- store the received READY timer value.

At step12, UE shall establish periodic Routing Area Update after Timer Period (T3314) + Periodic Routing Area Updating timer (T3312) (+/- 10%).

# 12.9 Service Request procedure (UMTS Only)

## 12.9.1 Service Request Initiated by UE Procedure

12.9.1.1 Definition

12.9.1.2 Conformance requirement

UE shall send the Service Request message to the network in order to establish the PS signalling connection for the upper layer signalling or for the resource reservation for active PDP context(s).

Reference

TS 24.008 clauses 4.7.13

TS 23.060 clauses 6.12.1

12.9.1.3 Test purpose

To test the behaviour of the UE if the UE initiates the CM layer service (e.g. SM or SMS) procedure.

12.9.1.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A).

User Equipment:

The UE has a valid IMSI

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No

Switch off on button Yes/No

Test procedure

a) The UE in PMM-IDLE state sends a SERVICE REQUEST message to the SS in order to establish the PS signalling connection for the upper layer signalling.

b) After the SS receives the SERVICE REQUEST message, the SS sends a SERVICE REJECT message.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set to attach to PS services only (see ICS). If that is not supported by the UE, goto step 12. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). |
| 2a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts ciphering and integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | SS | | | The SS releases the RRC connection. |
| 6 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 6a | SS | | | The IE "Establishment cause" in the received RRC CONNECTION REQUEST message is not checked. |
| 7 | -> | | SERVICE REQUEST | Service type = "signalling", |
| 8 | <- | | SERVICE REJECT | Reject cause = "GPRS services not allowed" |
| 9 | -> | | Void | |
| 9a | SS | | | The SS releases the RRC connection. |
| 10 | UE | | | The UE is switched off or power is removed (see ICS). |
| 10a | | | Void | |
| 11 | | | Void | |
| 11a | | | Void | |
| 12 | UE | | | The UE is set to attach to both PS and non-PS services (see ICS) and the test is repeated from step 2 to step 11a. |

Specific message contents

None.

12.9.1.5 Test requirements

At step 2a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

At step 10a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach".

At step3, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step7, when the UE has any signalling message (e.g. for SM or SMS) that requires security protection, the UE shall:

- send the SERVICE REQUEST message with service type indicated "signalling".

## 12.9.2 Service Request Initiated by Network Procedure

### 12.9.2.1 Definition

### 12.9.2.2 Conformance requirement

When the UE receives a paging request for PS domain from the network in PMM-IDLE mode, the UE shall send the SERVICE REQUEST message to the network.

#### Reference

TS 24.008 clauses 4.7.13

TS 23.060 clauses 6.12.2

### 12.9.2.3 Test purpose

To test the behavior of the UE if the UE receives the paging request for PS domain service from the network.

### 12.9.2.4 Method of test

#### Initial condition

System Simulator:

One cell operating in network operation mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE to prevent repeated CS domain registration and/or IMSI Detach by UEs in operation mode A).

User Equipment:

The UE has a valid IMSI

The UE has been registered in the CS domain.

#### Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No

Switch off on button Yes/No

#### Test procedure

a) The UE is in PMM-IDLE state. The SS pages the UE by sending a Paging message to the UE.

b) The UE sends a SERVICE REQUEST message to the SS. Service Type specifies Paging Response. The Service Request is carried over the radio in an RRC Direct Transfer message.

c) After the SS receives the SERVICE REQUEST message from the UE, SS initiates an authentication procedure.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set to attach to PS services only (see ICS). If that is not supported by the UE, goto step 12. |
| 2 | UE | | | The UE is powered up or switched in and initiates an attach (see ICS). |
| 2a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | SS | | | The SS starts ciphering and integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 5a | SS | | | The SS releases the RRC connection. |
| 6 | <- | | PAGING TYPE1 | Mobile identity = P-TMSI-1<br>Paging order is for PS services.<br>Paging cause = "Terminating interactive call" |
| 6a | SS | | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating interactive call". |
| 7 | -> | | SERVICE REQUEST | Service type = "Paging response" |
| 8 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 9 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 9a | SS | | | SS starts integrity protection and releases the RRC connection. |
| 10 | UE | | | The UE is switched off or power is removed (see ICS). |
| 10a | SS | | | SS checks that the IE "Establishment cause" in any received RRC CONNECTION REQUEST message is set to "Detach" (message not sent if power is removed). |
| 11 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRSdetach' |
| 11a | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 12 | UE | | | The UE is set to attach to both PS and non-PS services (see ICS) and the test is repeated from step 2 to step 11a. |

Specific message contents

None.

12.9.2.5 Test requirements

At step 2a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Registration".

At step 6a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Terminating interactive Call".

At step 10a the UE shall send an RRC CONNECTION REQUEST message with the IE Establishment cause set to "Detach".

At step3, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step 7, when the UE receives a paging request for PS domain from the network in PMM-IDLE mode, the UE shall:

- send the SERVICE REQUEST message with service type indicated "paging response".

## 12.9.3 Service Request / rejected / Illegal MS

### 12.9.3.1 Definition

### 12.9.3.2 Conformance requirement

If the network rejects a service request procedure from the UE with the cause "Illegal MS", the UE shall:

1) set the GPRS update status to GU3 ROAMING NOT ALLOWED and enter state GMM DEREGISTRATED. A UE operating in MS operation A shall in addition to set the update status to U3 ROAMING NOT ALLOWED.

2) delete any P-TMSI, P-TMSI signature, RAI and GPRS ciphering key sequence number. A UE operating in MS operation A shall in addition delete any TMSI, LAI and ciphering key sequence number.

3) consider the USIM as invalid for PS service until switched off or the USIM is removed.

Reference

TS 24.008 clauses 4.7.13.4

### 12.9.3.3 Test purpose

To test the behaviour of the UE if the network rejects the service request procedure with the cause "Illegal MS".

### 12.9.3.4 Method of test

Initial condition

System Simulator:

One cell operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1, RAI-1 and IMSI.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No

USIM removal possible without powering down Yes/No

Switch off on button Yes/No

Test procedure

a) The UE sends a SERVICE REQUEST message to the SS in order to establish the PS signalling connection for the upper layer signalling.

b) After the SS receiving the SERVICE REQUEST message, the SS sends a SERVICE REJECT message with the cause value #3(Illegal MS).

c) After the UE receives the SERVICE REJECT message with the cause value #3(Illegal MS), the UE deletes any P-TMSI, P-TMSI signature, RAI and GPRS ciphering key sequence number.

d) The SS checks that the UE does not initiate an upper-layer signalling until the power of the UE is switched off.

e) The SS checks that the UE does not initiate an upper-layer signalling until the USIM is removed from the UE.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following message are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, go to step 38. |
| 2 | SS | | | The SS is set in network operation mode II and activates cell A. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts ciphering and integrity protection. |
| 5 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Routing area identity = RAI-1<br>Attach result = 'GPRS only attached' |
| 6 | SS | | | UE is moved to PMM idle.<br>(The SS releases the RRC connection) |
| 7 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 8 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 9 | <- | | SERVICE REJECT | Reject cause = "Illegal MS" |
| 9a | SS | | | The SS releases the RRC connection |
| 10 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 11 | SS | | | The SS verifies that the UE does not attempt to access the network.<br>(SS waits 30 seconds) |
| 12 | UE | | | The UE is switched off. |
| 13 | | | Void | |
| 14 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 14a | UE | | Registration on CS | See TS 34.108<br>This is applicable only for UE in UE operation mode A. |
| 14b | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 15 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 15a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 15b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 15c | SS | | | The SS starts ciphering and integrity protection. |
| 16 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 17 | -> | | ATTACH COMPLETE | |
| 17a | SS | | | UE is moved to PMM idle.<br>(The SS releases the RRC connection) |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 18 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 19 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 20 | <- | | SERVICE REJECT | Reject cause = "Illegal MS" |
| 20a | SS | | | The SS releases the RRC connection |
| 21 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 22 | SS | | | The SS verifies that the UE does not attempt to access the network.<br>(SS waits 30 seconds) |
| 23 | UE | | | If possible (see ICS) USIM replacement is performed. Otherwise if possible (see ICS) switch / power off is performed. The UE is then powered up or switched on (see ICS). |
| 24 | UE | | Registration on CS | See TS 34.108<br>This is applicable only for UE in UE operation mode A. |
| 25 | UE | | | The UE initiates a PS attach, by MMI or by AT command. |
| 25a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 26 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 26a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 26b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 26c | SS | | | The SS starts ciphering and integrity protection. |
| 27 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 28 | -> | | ATTACH COMPLETE | |
| 28a | SS | | | UE is moved to PMM idle.<br>(The SS releases the RRC connection) |
| 29 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 30 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 31 | <- | | SERVICE REJECT | Reject cause = "Illegal MS" |
| 32 | | | VOID | |
| 33 | | | VOID | |
| 34 | SS | | | The SS releases RRC connection. |
| 35 | UE | | | The UE is switched off or power is removed (see ICS). |
| 36 | | | Void | |
| 37 | | | Void | |
| 38 | UE | | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 37. |

Specific message contents

None.

### 12.9.3.5 Test requirements

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step11, when the UE receives the SERVICE REJECT message with cause "Illegal MS" UE shall:

- not attempt to access the network.

At step15, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step22, when the UE receives the SERVICE REJECT message with cause "Illegal MS" UE shall:

- not attempt to access the network.

At step26, when the UE gets the USIM replaced, is powered up or switched on,UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step30, UE shall:

- initiate the service request procedure.

## 12.9.4 Service Request / rejected / PS services not allowed

### 12.9.41 Definition

### 12.9.4.2 Conformance requirement

If the network rejects a service request procedure from the UE with the cause "GPRS services not allowed", the UE shall:

1) set the GPRS update state to GU3 ROAMING NOT ALLOWED.
2) delete any P-TMSI, P-TMSI signature, RAI and GPRS ciphering key sequence number.
3) consider the USIM as invalid for PS service until the UE is switched off or until the USIM is removed.

#### Reference

TS 24.008 clauses 4.7.13.4

### 12.9.4.3 Test purpose

To test the behaviour of the UE if the network rejects the service request procedure with the cause "GPRS services not allowed in this PLMN".

### 12.9.4.4 Method of test

#### Initial condition

System Simulator:

One cell operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

#### Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No

Switch off on button Yes/No

Test procedure

a) The UE sends a SERVICE REQUEST message to the SS in order to establish the PS signalling connection for the upper layer signalling.

b) After the SS receiving the SERVICE REQUEST message, the SS sends a SERVICE REJECT message with the cause value #7(GPRS services not allowed).

c) After the UE receives the SERVICE REJECT message with the cause value #7(GPRS services not allowed), the UE deletes any P-TMSI, P-TMSI signature, RAI and GPRS ciphering key sequence number.

d) The SS checks that the UE does not initiate an upper-layer signalling until the UE is switched off.

e) The SS checks that the UE does not initiate an upper-layer signalling until the USIM is removed from the UE.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following message are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, go to step 38. |
| 2 | SS | | | The SS is set in network operation mode II and activates cell A. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts ciphering and integrity protection. |
| 5 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Routing area identity = RAI-1<br>Attach result = 'GPRS only attached' |
| 6 | SS | | | UE is moved to PMM idle.<br>(The SS releases the RRC connection) |
| 7 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 8 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 9 | <- | | SERVICE REJECT | Reject cause = "GPRS services not allowed" |
| 9a | SS | | | The SS releases the RRC connection |
| 10 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 11 | SS | | | The SS verifies that the UE does not attempt to access the network.<br>(SS wait 30seconds) |
| 12 | UE | | | The UE is switched off. |
| 13 | | | Void | |
| 14 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 14a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 15 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 15a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 15b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 15c | SS | | | The SS starts ciphering and integrity protection. |
| 16 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 17 | -> | | ATTACH COMPLETE | |
| 17a | SS | | | UE is moved to PMM idle.<br>(The SS releases the RRC connection) |
| 18 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 19 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 20 | <- | | SERVICE REJECT | Reject cause = "GPRS services not allowed" |
| 20a | | SS | | The SS releases the RRC connection |
| 21 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 22 | | SS | | The SS verifies that the UE does not attempt to access the network.<br>(SS wait 30seconds) |
| 23 | UE | | | The UE gets the USIM replaced, is powered up or switched on. |
| 24 | | | Void | |
| 25 | UE | | | The UE initiates a PS attach, by MMI or by AT command. |
| 25a | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 26 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 26a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 26b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 26c | | SS | | The SS starts ciphering and integrity protection. |
| 27 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-1 |
| 28 | -> | | ATTACH COMPLETE | |
| 28a | | SS | | UE is moved to PMM idle.<br>(The SS releases the RRC connection) |
| 29 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 30 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 31 | <- | | SERVICE REJECT | Reject cause = "GPRS services not allowed" |
| 32 | | | VOID | |
| 33 | | | VOID | |
| 34 | | SS | | The SS releases RRC connection. |
| 35 | UE | | | The UE is switched off or power is removed (see ICS). |
| 36 | | | Void | |
| 37 | | | Void | |
| 38 | UE | | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 37. |

Specific message contents

12.9.4.5 Test requirements

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step11, when the UE receives the SERVICE REJECT message with cause "GPRS services not allowed" UE shall:

- not attempt to access the network.

At step15, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step22, when the UE receives the SERVICE REJECT message with cause "GPRS services not allowed" UE shall:

- not attempt to access the network.

At step26, when the UE gets the USIM replaced, is powered up or switched on,UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step30, UE shall:

- initiate the service request procedure.

## 12.9.5 Service Request / rejected / MS identity cannot be derived by the network

### 12.9.5.1 Definition

### 12.9.5.2 Conformance requirement

If the network rejects a service request procedure from the UE with the cause "MS identity cannot be derived by the network", the UE shall:

1) set the GPRS update states to GU2 NOT UPDATED.
2) delete any P-TMSI, P-TMSI signature, RAI and GPRS ciphering key sequence number.
3) initiate the PS attach procedure automatically.

#### Reference

TS 24.008 clauses 4.7.13.4

### 12.9.5.3 Test purpose

To test the behaviour of the UE if the network rejects the service request procedure with the cause "MS identity cannot be derived by the network".

### 12.9.5.4 Method of test

#### Initial condition

System Simulator:

One cell operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

#### Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No

Switch off on button Yes/No

Automatic PS attach procedure at switch on or power on Yes/No

#### Test procedure

a) The UE sends a SERVICE REQUEST message to the SS in order to establish the PS signalling connection for the upper layer signalling.

b) After the SS receiving the SERVICE REQUEST message, the SS sends a SERVICE REJECT message with the cause value #9 (MS identity cannot be derived by the network).

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following message are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, go to step 23. |
| 2 | SS | | | The SS is set in network operation mode II and activates cell A. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts ciphering and integrity protection. |
| 5 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Routing area identity = RAI-1<br>Attach result = 'GPRS only attached' |
| 6 | SS | | | UE is moved to PMM idle.<br>(The SS releases the RRC connection) |
| 7 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 8 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 9 | <- | | SERVICE REJECT | Reject cause = "MS identity cannot be derived by the network" |
| 9a | SS | | | The SS releases the RRC connection |
| 10 | UE | | | The UE automatically initiates the PS attach procedure. |
| 10a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 11 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = IMSI |
| 11a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 11b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 11c | SS | | | The SS starts ciphering and integrity protection. |
| 12 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature |
| 13 | -> | | ATTACH COMPLETE | |
| 13a | SS | | | UE is moved to PMM idle.<br>(The SS releases the RRC connection) |
| 14 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 15 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 16 | <- | | SERVICE REJECT | Reject cause = “GPRS services not allowed” |
| 17 | | | VOID | |
| 18 | | | VOID | . |
| 19 | SS | | | The SS releases RRC connection. |
| 20 | UE | | | The UE is switched off or power is removed (see ICS). |
| 21 | | | Void | |

| | | | |
|---|---|---|---|
| 22 | | Void | |
| 23 | UE | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 22. |

Specific message contents

None.

12.9.5.5 Test requirements

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step11, when the UE receives the SERVICE REJECT message with cause "MS identity cannot be derived by the network" UE shall:

- initiate PS attach procedure automatically.

## 12.9.6 Service Request / rejected / PLMN not allowed

12.9.6.1 Definition

12.9.6.2 Conformance requirement

If the network rejects a service request procedure from the UE with the cause "PLMN not allowed", the UE shall:

1) delete any RAI, P-TMSI, P-TMSI signature and GPRS ciphering key sequence number.
2) set the GPRS update status to GU3 ROAMING NOT ALLOWED.
3) store the PLMN identity in the appropriate forbidden list.

Reference

TS 24.008 clauses 4.7.13.4

12.9.6.3 Test purpose

To test the behaviour of the UE if the network rejects the service request procedure with the cause "PLMN not allowed".

12.9.6.4 Method of test

Initial condition

System Simulator:

Two cells (not simultaneously activated), cell A in MCC1/MNC2/LAC1/RAC1 (RAI-8, Not HPLMN), cell B in MCC2/MNC1/LAC1/RAC1 (RAI-2, Not HPLMN).
All two cells are operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in both cells.

NB: i) Cell B will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-8.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No

Switch off on button Yes/No

Test procedure

a) The UE sends a SERVICE REQUEST message to the SS in order to establish the PS signalling connection for the upper layer signalling.

b) After the SS receiving the SERVICE REQUEST message, the SS sends a SERVICE REJECT message with the cause value #11 (PLMN not allowed).

c) The SS checks that the UE does not initiate an upper-layer signalling until the UE is switched off.

d) The SS checks that the UE does not answer a Page from the SS until the power of the UE is switched off.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following message are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, go to step 24. |
| 2 | SS | | | The SS is set in network operation mode II. Set the cell type of cell A to the "Serving cell". Set the cell type of cell B to the "Non-Suitable cell". (see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = P-TMSI-1 Old Routing area identity = RAI-8 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts ciphering and integrity protection. |
| 5 | <- | | ATTACH ACCEPT | No new mobile identity assigned. P-TMSI and P-TMSI signature not included. Routing area identity = RAI-8 Attach result = 'GPRS only attached' |
| 6 | SS | | | UE is moved to PMM idle. (The SS releases the RRC connection) |
| 7 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 8 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 9 | <- | | SERVICE REJECT | Reject cause = "PLMN not allowed" |
| 9a | SS | | | The SS releases the RRC connection |
| 10 | UE | | | The UE stores the PLMN identity in the "forbidden PLMN list". |
| 11 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 12 | SS | | | The SS verifies that the UE does not attempt to access the network. (SS wait 30second) |
| 13 | <- | | PAGING TYPE1 | Paging order is for PS service |
| 14 | UE | | | No response from the UE to the request. This is checked for 10 seconds. |
| | | | | The following messages shall be sent and shall be received on cell B. |
| 15 | SS | | | Set the cell type of cell A to the "Non-Suitable cell". Set the cell type of cell B to the "Serving cell". (see note) |
| 16 | UE | | | Cell B is preferred by the UE. |
| 16a | UE | | Registration on CS | See TS 34.108 This is applicable only for UE in UE operation mode A. |
| 17 | UE | | | The UE initiates an attach automatically, by MMI or by AT command. |
| 17a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 18 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach' Mobile identity = IMSI |

| | | | | |
|---|---|---|---|---|
| 18a | <- | AUTHENTICATION CIPHERING REQUEST | AND | |
| 18b | -> | AUTHENTICATION CIPHERING RESPONSE | AND | |
| 18c | SS | | | The SS starts ciphering and integrity protection. |
| 19 | <- | ATTACH ACCEPT | | Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-2<br>Attach result = 'GPRS only attached' |
| 20 | -> | ATTACH COMPLETE | | |
| 21 | UE | | | The UE is switched off or power is removed (see ICS). |
| 22 | -> | DETACH REQUEST | | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRSdetach' |
| 23 | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 24 | UE | | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 23. |
| NOTE: The definitions for "Non-Suitable cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | | |

Specific message contents

None.

12.9.6.5 Test requirements

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step9, when the UE receives the SERVICE REJECT message with cause "PLMN not allowed", UE shall:

- not perform a PS attach procedure in the same PLMN.

At step13, when the UE receives the paging message for PS domain UE shall:

- not respond to the paging message for PS domain.

At step18, UE shall:

- perform PS attach procedure.

## 12.9.7a Service Request / rejected / No PDP context activated

12.9.7a.1 Definition

12.9.7a.2 Conformance requirement

If the network rejects a service request procedure with the cause "No PDP context activated":

- The UE shall deactivate locally all active PDP contexts and the UE shall enter the state GMM-REGISTERED.NORMAL-SERVICE. The UE may also activate PDP context(s) to replace any previously active PDP contexts.

NOTE: In some cases, user interaction may be required and then the UE cannot activate the PDP context(s) automatically.

Reference

TS 24.008 clauses 4.7.13.4

### 12.9.7a.3 Test purpose

To test the behaviour of the UE if the network rejects the service request procedure with the cause "No PDP context activated".

### 12.9.7a.4 Method of test

#### Initial condition

System Simulator:

One cell operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

#### Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No

Switch off on button Yes/No

Method of context activation

Support of automatic PS attach procedure at switch on Yes/No

#### Test procedure

a) The UE sends a SERVICE REQUEST message to the SS in order to establish the PS signalling connection for the upper layer signalling.

b) After the SS receiving the SERVICE REQUEST message, the SS sends a SERVICE REJECT message with the cause value #40 (No PDP context activated).

c) After the UE receives the SERVICE REJECT message, the UE shall deactivate locally all active PDP contexts or the UE in manual mode may perform a detach procedure.

d) If the UE not automatically activates the PDP context (to replace the previously active PDP context) then a PS call is initiated by MMI or by AT command. The UE shall send a SERVICE REQUEST with Service type = "signalling".

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following message are sent and shall be received on cell A. |
| 1 | | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, go to step 26. |
| 2 | | | | The SS is set in network operation mode II and activates cell A. |
| 3 | | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts ciphering and integrity protection. |
| 5 | <- | | ATTACH ACCEPT | |
| 6 | -> | | ATTACH COMPLETE | |
| 6a | SS | | | UE is moved to PMM idle. (The SS releases the RRC connection) |
| 7 | UE | | | The UE initiates a PS call, by MMI or by AT command. |
| 8 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 9 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 10 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 11 | SS | | | The SS initiates a security mode control procedure. |
| 12 | UE | | | After a PS call is established, the UE suspends transmission of the user data. |
| 13 | SS | | | The SS initiates a Radio Bearer release procedure. |
| 14 | UE | | | The UE resumes the transmission of the user data. |
| 15 | -> | | SERVICE REQUEST | Service type = "data" |
| 16 | <- | | SERVICE REJECT | Reject cause = "No PDP context activated" |
| 17 | UE | | | The UE shall deactivate locally all active PDP contexts or the UE in manual mode may perform a detach procedure. |
| A17 | → | | DETACH REQUEST | This step is performed only when UE is in manual attach mode: The UE may (optionally) send a Detach Request (only Note 1). |
| A18 | ← | | DETACH ACCEPT | This step is performed only when UE is in manual attach mode: SS responds with DETACH ACCEPT message as a Detach Request was transmitted by the UE. |
| 17a | SS | | | UE is moved to PMM idle. (The SS releases the RRC connection) |
| A17a | | | | This step is performed only when UE is in manual attach mode: The UE initiates the attach procedure by MMI or AT command (only Note 1). The attach procedure is performed only if steps A17 and A18 have been performed. |
| 18 | UE | | | The UE initiates a PS call, automatically, by MMI or by AT command. |
| 19 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 20 | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 21 | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 22 | SS | | | SS initiates a security procedure by sending SECURITY MODE COMMAND message. |

| | | | |
|---|---|---|---|
| 23 | UE | | The UE is switched off or power is removed (see ICS). |
| 24 | UE | | The UE initiates Detach request, by MMI or by AT command. |
| 25 | -> | DETACH REQUEST | Message not sent if power is removed. Detach type = 'power switched off, GPRSdetach' |
| 26 | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 27 | UE | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 25. |
| Note 1: Support of automatic PS attach procedure at switch on – no | | | |

Specific message contents

None.

12.9.7a.5 Test requirements

At step4, when the UE is powered on or switched on, the UE shall initiate the PS attach procedure.

At step15, the UE shall initiates a Service request procedure by sending a SERVICE REQUEST message with Service type = "data".

At step19, the UE shall initiates a Service request procedure by sending a SERVICE REQUEST message with Service type = "signalling".

## 12.9.7b Service Request / rejected / No Suitable Cells In Location Area

12.9.7b.1 Definition

12.9.7b.2 Conformance requirement

If the network rejects a service request procedure from the UE with the cause "No Suitable Cells In Location Area", the UE shall:

1) set the GPRS update status to GU3 ROAMING NOT ALLOWED and shall change to state GMM-REGISTERED.LIMITED-SERVICE.

2) store the LAI in the list of 'forbidden location areas for roaming'.

If no RRC connection exists, the UE shall perform the following additional actions immediately. If the UE is operating in operation mode A and an RRC connection exists, the UE shall perform these actions when the RRC connection is subsequently released:

1) if the UE is IMSI attached, the UE shall set the update status to U3 ROAMING NOT ALLOWED and shall reset the location update attempt counter. The new MM state is MM IDLE.

2) search for a suitable cell in a different location area on the same PLMN.

Reference

TS 24.008 clauses 4.7.13.4

12.9.7b.3 Test purpose

To test the behaviour of the UE if the network rejects the service request procedure with the cause "No Suitable Cells In Location Area".

12.9.7b.4 Method of test

Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC2/RAC1 (RAI-3), cell C in MCC2/MNC1/LAC1/RAC1 (RAI-2)

All three cells are operating in network operation mode II.

NB: i) Cell B will be mapped to Cell 7 (on frequency f3) & Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has valid IMSI.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a Service request with the cause value 'No Suitable Cells In Location Area'. The SS checks that the UE shall perform routing area updating procedure when the UE enters a suitable cell in a different location area on the same PLMN.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | SS | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Suitable neighbour cell".<br>Set the cell type of cell C to the "Suitable neighbour cell".<br>(see note)<br>The SS configures power level of each Cell as follows.<br>Cell A > Cell B = Cell C |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, goto step 15. |
| 2 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 2a | UE | | Registration on CS | See TS 34.108<br>This is applicable only for UE in UE operation mode A. |
| 2b | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 3 | -> | | ATTACH REQUEST | Attach type = "GPRS attach"<br>Mobile identity = IMSI |
| 3a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 3b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 3c | | SS | | The SS starts ciphering and integrity protection. |
| 4 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>MS identity = TMSI-1<br>Routing area identity = RAI-1 |
| 5 | -> | | ATTACH COMPLETE | |
| 6 | | SS | | The SS initiates the RRC connection release. |
| 7 | UE | | | The UE initiates a PS call, by MMI or by AT command. |
| 8 | -> | | SERVICE REQUEST | Service type = 'signalling' |
| 9 | <- | | SERVICE REJECT | Reject cause = 'No Suitable Cells In Location Area' |
| 9a | | SS | | The SS releases the RRC connection |
| 9aa | | SS | | Set the cell type of cell B to the "Serving cell".<br>Set the cell type of cell C to the "Serving cell".<br>Set the cell type of cell A to the "Suitable neighbour cell".<br>The following message are sent and shall be received on cell B. |
| 9b | UE | | Registration on CS | See TS 34.108<br>This is applicable only for UE in UE operation mode A. |
| 9c | | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 10 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Old P-TMSI signature=P-TMSI-1 signature<br>Mobile identity = P-TMSI-1<br>Old routing area identity = RAI-1 |
| 10a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 10b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 10c | | SS | | The SS starts ciphering and integrity protection. |

| | | | |
|---|---|---|---|
| 11 | <- | ROUTING AREA UPDATE ACCEPT | Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-3<br>Update result = 'RA updated' |
| 12 | -> | ROUTING AREA UPDATE COMPLETE | |
| 13 | UE | | The UE is switched off or power is removed (see ICS). |
| 13a | | IMSI DETACH INDICATION | Message not sent if power is removed<br>This is applicable only for UE in UE operation mode A. |
| 14 | -> | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRSdetach' |
| 14a | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 15 | UE | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 14. |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

### 12.9.7b.5 Test requirements

At step3, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step10, when the UE enters a suitable cell in a different location area on the same PLMN, UE shall:

- perform the routing area updating procedure.

## 12.9.7c Service Request / rejected / Roaming not allowed in this location area

### 12.9.7c.1 Definition

### 12.9.7c.2 Conformance requirement

If the network rejects a service request procedure from the UE with the cause "Roaming not allowed in this location area", the UE shall:

1) set the PS update status to GU3 ROAMING NOT ALLOWED
2) store the LAI in the list of "forbidden location areas for roaming".
3) perform a PLMN selection.

Reference

TS 24.008 clauses 4.7.13.4

### 12.9.7c.3 Test purpose

To test the behaviour of the UE if the network rejects the service request procedure with the cause "Roaming not allowed in this location area".

12.9.7c.4 Method of test

Initial condition

System Simulator:

Three cells, cell A in MCC1/MNC1/LAC1/RAC1 (RAI-1), cell B in MCC1/MNC1/LAC1/RAC2 (RAI-4), cell C in MCC2/MNC1/LAC1/RAC1 (RAI-2)

All three cells are operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE) in all cells.

NB: i) Cell C will be mapped to Cell 4 as found in TS 34.108 clause 6.1.4.1.

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode A Yes/No
UE operation mode C Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No

Test procedure

The SS rejects a Service request with the cause value 'Roaming not allowed in this location area'. The SS checks that the UE shall not perform PS attach procedure when the UE enters a different location area.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | SS | | | The following messages are sent and shall be received on cell A. |
| 1 | SS | | | Set the cell type of cell A to the "Serving cell".<br>Set the cell type of cell B to the "Non-Suitable cell".<br>Set the cell type of cell C to the "Non-Suitable cell".<br>(see note) |
| 2 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, go to step 19. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 3a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 4 | | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts ciphering and integrity protection. |
| 5 | | <- | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Attach result = 'GPRS only attached'<br>Routing area identity = RAI-1 |
| 6 | SS | | | The SS initiates the RRC connection release. |
| 7 | UE | | | The UE initiates a PS call, by MMI or by AT command. |
| 8 | | -> | SERVICE REQUEST | Service type = "signalling" |
| 9 | | <- | SERVICE REJECT | Reject cause = "roaming not allowed in this location area" |
| 9a | SS | | | The SS releases the RRC connection. |
| 10 | UE | | | The UE performs PLMN selection. |
| 11 | SS | | | Set the cell type of cell A to the " Non-Suitable cell".<br>Set the cell type of cell B to the " Serving cell".<br>(see note) |
| 12 | SS | | | The SS verifies that the UE does not attempt to access the network.<br>(SS waits 30 seconds). |
| 13 | SS | | | Set the cell type of cell B to the " Non-Suitable cell".<br>Set the cell type of cell C to the " Serving cell".<br>(see note)<br>The following messages are sent and shall be received on cell C. |
| 13a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 13a.1 | UE | | Registration on CS | See TS 34.108<br>This is applied only for UE in UE operation mode A. |
| 14 | | -> | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating'<br>Mobile identity = P-TMSI-1<br>Old routing area identity = RAI-1 |
| 14a | | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 14b | | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 14c | SS | | | The SS starts integrity protection. |

| | | | |
|---|---|---|---|
| 15 | <- | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>MS identity = TMSI-2<br>Routing area identity = RAI-2 |
| 16 | -> | ROUTING AREA UPDATE COMPLETE | |
| 17 | UE | | The UE is switched off or power is removed (see ICS). |
| 18 | -> | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRS Detach' |
| 18a | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 19 | UE | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 3 to step 18. |
| NOTE: The definitions for "Suitable neighbour cell" and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

None.

12.9.7c.5 Test requirements

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step12, when the UE enters a same location area, UE shall:

- not initiate the PS attach procedure.

At step14, when the UE enters a different location area, UE shall:

- initiate the routing area updating procedure with information elements specified in the above Expected Sequence.

## 12.9.8 Service Request / Abnormal cases / Access barred due to access class control

12.9.8.1 Definition

12.9.8.2 Conformance requirement

If the UE access class X is barred, the UE shall:

1) not start Service Request procedure.

2) stay in the current serving cell.

3) applie normal cell reselection process.

If the UE access class X is granted or serving cell is changed, the UE may:

1) start Service Request procedure.

Reference

TS 24.008 clauses 4.7.13.5.

### 12.9.8.3 Test purpose

To test the behavior of the UE in case of access class control (access is granted).

### 12.9.8.4 Method of test

#### Initial condition

A random access class X (0-15) is selected. The USIM is programmed with this access class X.

System Simulator:

One cell operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

#### Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode C Yes/No

UE operation mode A Yes/No

Switch off on button Yes/No

Automatic PS attach procedure at switch on or power on Yes/No

#### Test procedure

The SS initiates access class X barred. A service request procedure is not performed.

The SS initiates that access class X is not barred. A service request procedure is performed.

#### Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, go to step 15. |
| 1a | UE | | | The UE is powered up or switched on and attempt to initiate an ATTACH. (see ICS) |
| 2 | | | Void | |
| 3 | | | Void | |
| 4 | | | Void | |
| 4a | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |
| 5 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 5a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 5b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5c | SS | | | The SS starts ciphering and integrity protection. |
| 6 | <- | | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 7 | -> | | ATTACH COMPLETE | |

| | | | |
|---|---|---|---|
| 7a | SS | | UE is moved to PMM idle.<br>(The SS releases the RRC connection) |
| 7b | SS | | The access class x is barred in cell A |
| 8 | UE | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 8a | UE | | No SERVICE REQUEST sent to SS, as access class x is barred.<br>SS waits 30 seconds |
| 8b | SS | | The access class x is not barred any more |
| 8c | UE | | In manual attach mode UE may send a Detach Request (Note 1). If the SS receives a Detach Request the test execution continues from step 14. |
| 8d | UE | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 9 | -> | SERVICE REQUEST | Service Type = "signalling". |
| 10 | <- | SERVICE REJECT | GMM cause = 'GPRS services not allowed' |
| 11 | | VOID | |
| 11a | SS | | The SS releases the RRC connection. |
| 12 | UE | | The UE is switched off or power is removed (see ICS). |
| 13 | | Void | |
| 14 | | Void | |
| 15 | UE | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 1a to step 12. |
| Note 1: Support of automatic PS attach procedure at switch on - no | | | |

Specific message contents

None.

12.9.8.5 Test requirements

At step 8a, when the UE access class x is barred, UE shall:

- not perform Service Request procedure.

At step9, UE shall:

- perform Service Request procedure.

## 12.9.9 Service Request / Abnormal cases / Routing area update procedure is triggered

12.9.9.1 Definition

12.9.9.2 Conformance requirement

If a cell change into a new routing area occurs and the necessity of routing area update procedure is determined before the security mode control procedure is completed, the UE shall:

- abort Service request procedure.
- start routing area update procedure immediately.

Reference

TS 24.008 clause 4.7.13.5

#### 12.9.9.3 Test purpose

To test the behavior of the UE in case of collision between Routing area update procedure and Service request procedure.

#### 12.9.9.4 Method of test

##### Initial condition

System Simulator:

One cell with MCC1/MNC1/LAC1/RAC1 (RAI-1)
The cell is operating in network operation mode II .

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

##### Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No

Switch off on button Yes/No

##### Test procedure

a) The UE sends a SERVICE REQUEST message to the SS in order to establish the PS signalling connection for the upper layer signalling in cell A.

b) The SS conveys change of routing area code to the UE..

c) The UE aborts Service request procedure and performs Routing area updating procedure.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following messages are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, go to step 22. |
| 2 | SS | | | The SS is set in network operation mode II. Set the cell type of cell A to the "Serving cell". (see note) |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts ciphering and integrity protection. |
| 5 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Routing area identity = RAI-1<br>Attach result = 'GPRS only attached' |
| 5a | | | Void | |
| 6 | SS | | | UE is moved to PMM Idle.<br>The SS releases the RRC connection. |
| 6a | UE | | | The UE initiates upper-layer signalling, e.g., Activate PDP Context request, by MMI or by AT command. |
| 7 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 8 | <- | | UTRAN MOBILITY INFORMATION | The SS conveys updated CN system information for the PS domain to the UE in connected mode, including a new routing area code.<br>Note: SS transmits the updated system information with the new RAI information in SIB1 |
| 8a | -> | | UTRAN MOBILITY INFORMATION CONFIRM | |
| 9 | UE | | | The UE aborts Service request procedure. |
| 10 | -> | | ROUTING AREA UPDATE REQUEST | Update type = 'RA updating' |
| 10a | ← | | AUTHENTICATION AND CIPHERING REQUEST | |
| 10b | → | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 10c | SS | | | The SS starts ciphering and integrity protection. |
| 11 | <- | | ROUTING AREA UPDATE ACCEPT | Update result = 'RA updated'<br>Allocated P-TMSI = P-TMSI-1<br>P-TMSI Signature = P-TMSI-1 signature<br>Routing area identity = RAI-4 |
| 12 | -> | | ROUTING AREA UPDATE COMPLETE | |
| 12a | | | | If the UE initiates a PDP Context, this is rejected and if the UE is in manual GPRS Attach Mode, the UE may perform a detach procedure at this point.<br>If the UE intitiates a Service Request, this is rejected with reject cause of 07 – “GPRS Services not Allowed”. |
| 13 | | | Void | |
| 14 | | | Void | |
| 15 | | | Void | |

| | | | |
|---|---|---|---|
| 16 | | Void | |
| 17 | | Void | |
| 18 | | Void | |
| 19 | UE | | The UE is switched off or power is removed (see ICS). |
| 20 | -> | DETACH REQUEST | Message not sent if power is removed or if the UE in manual GPRS Attach Mode has already detached.<br>Detach type = 'power switched off, GPRSdetach' |
| 21 | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message has been received within 1 second then the SS shall consider the UE as switched off. |
| 22 | UE | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 21. |
| NOTE: The definitions for "Suitable neighbour cell", “Non-suitable cell” and "Serving cell" are specified in TS34.108 clause 6.1 "Reference Radio Conditions for signalling test cases only". | | | |

Specific message contents

UTRAN MOBILITY INFORMATION (step 8)

The contents of the UTRAN MOBILITY INFORMATION message in this test case is identical to the default message in TS 34.108, with the following exceptions.

| Information Element | Value/remark |
|---|---|
| New U-RNTI | Not Present |
| New C-RNTI | Not Present |
| UE Timers and constants in connected mode | Not Present |
| CN information info | |
| - PLMN identity | Not Present |
| - CN common GSM-MAP NAS system information | Not Present |
| - CN domain related information | |
| - CN domain identity | CS domain |
| - CN domain specific GSM-MAP NAS system info | |
| - T3212 | Infinity |
| - ATT | 0 |
| - CN domain specific DRX cycle length coefficient | 7 |
| - CN domain related information | |
| - CN domain identity | PS domain |
| - CN domain specific GSM-MAP NAS system info | |
| - RAC | RAC-2 |
| - NMO | 1 (Network Mode of Operation II) |
| - CN domain specific DRX cycle length coefficient | 7 |

### 12.9.9.5 Test requirements

At step 4, the UE shall send an ATTACH REQUEST message

At step 7, the UE shall send a SERVICE REQUEST message with Service type = "signalling".

At step 8, as the UE has received a new RAI in the UTRAN MOBILITY INFORMATION message before the SERVICE ACCEPT message or the SERVICE REJECT message is received, the UE shall abort service request procedure.

At step 10, the UE shall send a ROUTING AREA UPDATE REQUEST message.

## 12.9.10 Service Request / Abnormal cases / Power off

### 12.9.10.1 Definition

### 12.9.10.2 Conformance requirement

When the UE in GMM-SERVICE-REQUEST-INITIATED state is switched off, UE shall:

- perform PS detach procedure.

#### Reference

TS 24.008 clauses 4.7.13.5

### 12.9.10.3 Test purpose

To test the behavior of the UE in case of collision between Service request procedure and "powered off".

### 12.9.10.4 Method of test

#### Initial condition

System Simulator:

One cell operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

#### Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No

Switch off on button Yes/No

#### Test procedure

The UE is switched off after initiating a Service request procedure. A PS detach is automatically performed by the UE before power is switched off.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following message are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, go to step 11. |
| 2 | SS | | | The SS is set in network operation mode II and activates cell A. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts ciphering and integrity protection. |
| 5 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Routing area identity = RAI-1<br>Attach result = 'GPRS only attached' |
| 6 | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 7 | -> | | SERVICE REQUEST | Service type = "signalling" |
| 8 | UE | | | The UE is powered off and initiates a PS detach (with power off) by MMI or by AT command. |
| 9 | -> | | DETACH REQUEST | Detach type = 'power switched off, GPRSdetach' |
| 10 | SS | | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 11 | UE | | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 10. |

Specific message contents

None.

12.9.10.5 Test requirements

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step7, UE shall:

- perform the service request procedure

At step9, when the UE is switched off during the Service Request procedure, UE shall;

- abort the Service request procedure.

- perform the PS detach procedure.

## 12.9.11 Service Request / Abnormal cases / Service request procedure collision

### 12.9.11.1 Definition

### 12.9.11.2 Conformance requirement

Abnormal cases in the MS

The following abnormal cases can be identified:

- Procedure collision

  If the MS receives a DETACH REQUEST message from the network in state GMM-SERVICE-REQUEST-INITIATED, the GPRS detach procedure shall be progressed and the Service request procedure shall be aborted. If the cause IE, in the DETACH REQUEST message, indicated a "reattach request", the GPRS attach procedure shall be performed.

#### Reference

TS 24.008 clauses 4.7.13.5

### 12.9.11.3 Test purpose

To test the behaviour of the UE in case of collision between Service request procedure and PS detach procedure.

### 12.9.11.4 Method of test

#### Initial condition

System Simulator:

One cell operating in network operation mode II.
The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

#### Related ICS/IXIT statements

Support of PS service Yes/No

UE operation mode A Yes/No
UE operation mode C Yes/No

Switch off on button Yes/No

#### Test procedure

a) The UE sends a SERVICE REQUEST message to the SS in order to establish the PS signalling connection for the upper layer signalling.

b) The SS does not respond to the SERVICE REQUEST for data. Instead it sends a DETACH REQUEST message to the UE, with the Detach type IE set to value "re-attach required".

c) After the UE receives the DETACH REQUEST message, the repeats the attach procedure.

d) The UE is switched off or power is removed. If the UE is switched off it sends a DETACH REQUEST.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| | | | | The following message are sent and shall be received on cell A. |
| 1 | UE | | | The UE is set in UE operation mode C (see ICS). If UE operation mode C is not supported, go to step 17. |
| 2 | SS | | | The SS is set in network operation mode II and activates cell A. |
| 3 | UE | | | The UE is powered up or switched on and initiates an attach (see ICS). Cell A is preferred by the UE. |
| 4 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 4a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 4c | SS | | | The SS starts ciphering and integrity protection. |
| 5 | <- | | ATTACH ACCEPT | No new mobile identity assigned.<br>P-TMSI and P-TMSI signature not included.<br>Routing area identity = RAI-1<br>Attach result = 'GPRS only attached' |
| 6 | SS | | | UE is moved to PMM idle.<br>(The SS releases the RRC connection) |
| 7a | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 7b | -> | | SERVICE REQUEST | Service type ="signalling" |
| 7c | SS | | | The SS starts ciphering and integrity protection. |
| 7d | SS | | | The SS initiates a Radio Bearer release procedure. |
| 7e | UE | | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 8 | -> | | SERVICE REQUEST | Service type = "data" |
| 9 | SS | | | The SS does not respond to SERVICE REQUEST message. |
| 10 | <- | | DETACH REQUEST | Detach type = "re-attach required" |
| 10a | -> | | DETACH ACCEPT | |
| 11 | -> | | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 11a | <- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 11b | -> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 11c | SS | | | The SS starts ciphering and integrity protection. |
| 12 | <- | | ATTACH ACCEPT | Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1<br>Attach result = 'GPRS only attached' |
| 13 | -> | | ATTACH COMPLETE | |
| 14 | UE | | | The UE is switched off or power is removed (see ICS). |
| 15 | -> | | DETACH REQUEST | Message not sent if power is removed.<br>Detach type = 'power switched off, GPRSdetach' |

| | | | |
|---|---|---|---|
| 16 | SS | | The SS releases the RRC connection. If no RRC CONNECTION RELEASE COMPLETE message have been received within 1 second then the SS shall consider the UE as switched off. |
| 17 | UE | | The UE is set to attach to both the PS and non-PS services (see ICS) and the test is repeated from step 2 to step 16. |

Specific message contents

None.

12.9.11.5 Test requirements

At step4, when the UE is powered on or switched on, UE shall:

- initiate the PS attach procedure with information elements specified in the above Expected Sequence.

At step11, when the UE receives a DETACH REQUEST message from the network before the Service request procedure completes, UE shall;

- repeat the attach procedure.

- retry the Service request procedure

At step 19 if the UE is switched off, UE shall:

- perform the PS detach procedure.

## 12.9.12 Service Request / RAB re-establishment / UE initiated / Single PDP context

12.9.12.1 Definition

12.9.12.2 Conformance requirement

The following procedures shall be performed in the MS when radio coverage is lost:

- For a PDP context using background or interactive traffic class, the PDP context is preserved even if RRC re-establishment procedures have failed.

- For a PDP context using streaming or conversational traffic class, the PDP context is preserved, but the maximum bit rate is downgraded to 0 kbit/s (for both uplink and downlink) when the RRC re-establishment procedure has failed. After coverage is regained and if the MS did not deactivate the PDP Context locally the MS should start MS-initiated PDP Context Modification procedure or the PDP Context Deactivation procedure. The MS shall use the PDP Context Modification procedure to re-activate the PDP context and re-establish the RAB.

The following procedures shall be performed in the MS when the RRC layer indicate to higher layer that a RAB has been released and the RAB release was not initiated due to a PDP Context Deactivation Procedure:

- For a PDP context using background or interactive traffic class, the PDP context is be preserved with no modifications.

- For a PDP context using streaming or conversational traffic class, the PDP context is preserved, but the maximum bit rate is downgraded to 0 kbit/s (for both uplink and downlink).

At this point or at a later stage, the MS may start a PDP Context Deactivation procedure or PDP Context Modification procedure. The MS shall use the PDP Context Modification procedure to re-activate the PDP context and re-establish the RAB.

The procedure for re-establishment of RABs allows the SGSN to re-establish RABs for active PDP contexts that don't have an associated RAB.

The MS initiates the re-establishment of RABs by using the Service Request (Service Type = Data) message.

The criteria to invoke the Service request procedure are when;

b) the MS, either in PMM-IDLE or PMM-CONNECTED mode, has pending user data to be sent and no radio access bearer is established for the corresponding PDP context. The procedure is initiated by an indication from the lower layers (see 3GPP TS 24.007). In this case, the service type shall be set to "data".

After completion of a Service request procedure, the pending service is resumed and uses then the connection established by the procedure. If the service type is indicating "data", then the radio access bearers for all activated PDP contexts are re-established by the network, except for those activated PDP contexts having maximum bit rate value set to 0 kbit/s for both uplink and downlink. The re-establishment of radio access bearers for those PDP contexts is specified in subclause 6.1.3.3 of 3GPP TS 24.008.

Reference

TS 23.060 clause 9.2.3.4-5, 9.2.5.2

TS 24.008 clause 4.7.13

### 12.9.12.3 Test purpose

To verify that the UE initiates a Service request procedure due to uplink data transmission with one preserved PDP context with traffic class "Background class" after normal RRC connection release as well as when radio coverage is lost.

To verify that the radio access bearer can be re-established for the preserved PDP context, initiated by the UE.

### 12.9.12.4 Method of test

Initial condition

System Simulator:

One cell, default parameters.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

Support of PS service Yes/No

Test procedure

a) A PDP context with traffic class "Background class" is activated including the radio access bearer.

b) The SS releases the RRC connection, but keeps the PDP context.

c) Due to transmission of uplink data, the UE initiates an RRC connection establishment and sends a SERVICE REQUEST.

d) The SS performs security mode control procedure and establishes the RAB for the active PDP context using a Radio bearer establishment procedure and the same QoS as previously, without the need for PDP context modification.

e) The SS configured the cell as a non-suitable "Off" cell for 4 minutes, making the UE to release the RAB and enter idle mode due to that radio coverage is lost.

f) The SS configures the cell as a serving cell.

g) Due to transmission of uplink data, the UE initiates an RRC connection establishment and sends a SERVICE REQUEST.

h) The SS performs security mode control procedure and establishes the RAB for the active PDP context using a Radio bearer establishment procedure and the same QoS as previously, without the need for PDP context modification.

Expected Sequence

| Step | Direction UE \| SS | Message | Comments |
|---|---|---|---|
| 1 | UE | | Initiate a PDP context activation |
| 2 | → | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context with traffic class "Background class" |
| 3 | SS | | The SS starts ciphering and integrity protection and establishes the radio access bearer. |
| 4 | ← | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 5 | SS | | The SS releases the RRC connection |
| 6 | UE | | The UE initiates transmission of uplink data, by MMI or by AT command. |
| 7 | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Originating Background Call". |
| 8 | → | SERVICE REQUEST | Service type = "data" |
| 9 | SS | | The SS starts ciphering and integrity protection. |
| 10 | SS | | The SS establishes the radio access bearer for the active PDP context, using the same QoS that was used at activation. |
| 11 | SS | | The SS configures the cell as a non-suitable "Off" cell and waits for 4 minutes, making the UE to release the RAB and enter idle mode. |
| 12 | SS | | The SS configures the cell as a serving cell. |
| 13 | UE | | The UE initiates transmission of uplink data, by MMI or by AT command. |
| 14 | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Originating Background Call". |
| 15 | → | SERVICE REQUEST | Service type = "data" |
| 16 | SS | | The SS starts ciphering and integrity protection. |
| 17 | SS | | The SS establishes the radio access bearer for the active PDP context, using the same QoS that was used at activation. |

Specific message contents

None.

12.9.12.5 Test requirements

After steps 7 and 14, UE shall:

- transmit a SERVICE REQUEST message with service type "data"

## 12.9.13 Service Request / RAB re-establishment / UE initiated / multiple PDP contexts

### 12.9.13.1 Definition

### 12.9.13.2 Conformance requirement

The following procedures shall be performed in the MS when the RRC layer indicate to higher layer that a RAB has been released and the RAB release was not initiated due to a PDP Context Deactivation Procedure:

- For a PDP context using background or interactive traffic class, the PDP context is be preserved with no modifications.

- For a PDP context using streaming or conversational traffic class, the PDP context is preserved, but the maximum bit rate is downgraded to 0 kbit/s (for both uplink and downlink).

At this point or at a later stage, the MS may start a PDP Context Deactivation procedure or PDP Context Modification procedure. The MS shall use the PDP Context Modification procedure to re-activate the PDP context and re-establish the RAB.

The procedure for re-establishment of RABs allows the SGSN to re-establish RABs for active PDP contexts that don't have an associated RAB.

The MS initiates the re-establishment of RABs by using the Service Request (Service Type = Data) message.

The criteria to invoke the Service request procedure are when;

b) the MS, either in PMM-IDLE or PMM-CONNECTED mode, has pending user data to be sent and no radio access bearer is established for the corresponding PDP context. The procedure is initiated by an indication from the lower layers (see 3GPP TS 24.007). In this case, the service type shall be set to "data".

After completion of a Service request procedure, the pending service is resumed and uses then the connection established by the procedure. If the service type is indicating "data", then the radio access bearers for all activated PDP contexts are re-established by the network, except for those activated PDP contexts having maximum bit rate value set to 0 kbit/s for both uplink and downlink. The re-establishment of radio access bearers for those PDP contexts is specified in subclause 6.1.3.3 of 3GPP TS 24.008.

#### Reference

TS 23.060 clause 9.2.3.4-5, 9.2.5.2

TS 24.008 clause 4.7.13

### 12.9.13.3 Test purpose

To verify that the UE initiates a Service request procedure due to uplink data transmission with two PDP contexts with different traffic classes are activated, when one is of traffic class "background class" and the other is of traffic class "interactive class", after normal RRC connection release.

To verify that the radio access bearers can be re-established with a single radio bearer establishment procedure for the preserved PDP contexts, when initiated by the UE.

### 12.9.13.4 Method of test

#### Initial condition

System Simulator:

One cell, default parameters.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

Related ICS/IXIT statements

| | |
|---|---|
| Support of PS service | Yes/No |
| Secondary PDP context activation procedure | Yes/no |

Test procedure

a) Two PDP contexts with different Traffic Classes are activated including the radio access bearers.

b) The SS releases the RRC connection, but keeps the two PDP contexts.

c) Due to transmission of uplink data, the UE initiates an RRC connection establishment and sends a SERVICE REQUEST.

d) The SS performs security mode control procedure and establishes the RABs for the two active PDP contexts using a single Radio bearer establishment procedure and the same QoS as previously, without the need for PDP context modification.

Expected Sequence

| Step | Direction UE \| SS | Message | Comments |
|---|---|---|---|
| 1 | UE | | Initiate a PDP context activation |
| 2 | → | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context with traffic class "Background class" |
| 3 | SS | | The SS establishes the radio access bearer. |
| 4 | ← | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 5 | UE | | Initiate a secondary PDP context activation |
| 6 | → | ACTIVATE SECONDARY PDP CONTEXT REQUEST | Request a Secondary PDP context activation with traffic class "Interactive class" |
| 7 | SS | | The SS establishes the radio access bearer. |
| 8 | ← | ACTIVATE SECONDARY PDP CONTEXT ACCEPT | Accept the Secondary PDP context activation |
| 9 | SS | | The SS releases the RRC connection. |
| 10 | UE | | The UE initiates transmission of uplink data, by MMI or by AT command. |
| 11 | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Originating Interactive Call", which is the most demanding traffic class among the active PDP contexts. |
| 12 | → | SERVICE REQUEST | Service type = "data" |
| 13 | SS | | The SS starts ciphering and integrity protection. |
| 14 | SS | | The SS establishes the radio access bearers simultaneously for the two active PDP contexts, using the same QoS that was used at activation. |

Specific message contents

None.

12.9.13.5 Test requirements

After step 11, UE shall:

- transmit a SERVICE REQUEST message with service type "data".

## 12.9.14 Service Request / RAB re-establishment / Network initiated / single PDP context

### 12.9.14.1 Definition

### 12.9.14.2 Conformance requirement

The following procedures shall be performed in the MS when the RRC layer indicate to higher layer that a RAB has been released and the RAB release was not initiated due to a PDP Context Deactivation Procedure:

- For a PDP context using background or interactive traffic class, the PDP context is be preserved with no modifications.

- For a PDP context using streaming or conversational traffic class, the PDP context is preserved, but the maximum bit rate is downgraded to 0 kbit/s (for both uplink and downlink).

At this point or at a later stage, the MS may start a PDP Context Deactivation procedure or PDP Context Modification procedure. The MS shall use the PDP Context Modification procedure to re-activate the PDP context and re-establish the RAB.

The procedure for re-establishment of RABs allows the SGSN to re-establish RABs for active PDP contexts that don't have an associated RAB.

When RABs for an MS that has no RRC connection needs to be re-established, the CN must first page the MS.

The criteria to invoke the Service request procedure are when;

c) the MS receives a paging request for PS domain from the network in PMM-IDLE mode. In this case, the service type shall be set to "paging response".

After completion of a Service request procedure, the pending service is resumed and uses then the connection established by the procedure. If the service type is indicating "data", then the radio access bearers for all activated PDP contexts are re-established by the network, except for those activated PDP contexts having maximum bit rate value set to 0 kbit/s for both uplink and downlink. The re-establishment of radio access bearers for those PDP contexts is specified in subclause 6.1.3.3 of 3GPP TS 24.008.

#### Reference

TS 23.060 clause 9.2.3.4-5, 9.2.5.2

TS 24.008 clause 4.7.13

### 12.9.14.3 Test purpose

To verify that the radio access bearers can be re-established for the preserved PDP context with traffic class "Background class", when initiated from the network, after normal RRC connection release.

### 12.9.14.4 Method of test

System Simulator:

One cell, default parameters.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

#### Related ICS/IXIT statements

Support of PS service Yes/No

Test procedure

a) A PDP context with traffic class "Background class" is activated including the radio access bearer.

b) The SS releases the RRC connection, but keeps the PDP context.

c) The SS initiates paging of the UE.

d) As response to the paging, the UE initiates an RRC connection establishment and sends a SERVICE REQUEST.

e) The SS performs security mode control procedure and establishes the RAB for the active PDP context using the same QoS as previously, without the need for PDP context modification.

Expected Sequence

| Step | Direction UE \| SS | Message | Comments |
|---|---|---|---|
| 1 | UE | | Initiate a PDP context activation |
| 2 | → | ACTIVATE PDP CONTEXT REQUEST | Activate a PDP context with traffic class "Background class" |
| 3 | SS | | The SS starts ciphering and integrity protection and establishes the radio access bearer. |
| 4 | ← | ACTIVATE PDP CONTEXT ACCEPT | Accept the PDP context |
| 5 | SS | | The SS releases the RRC connection. |
| 6 | SS | | The SS waits for 5 s to ensure the UE is in service. |
| 7 | ← | PAGING TYPE 1 | The SS initiates paging of the UE using the paging cause "Terminating Background Call"' |
| 8 | SS | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to the same value as the paging cause. |
| 9 | → | SERVICE REQUEST | Service type = "Paging response" |
| 10 | SS | | The SS starts ciphering and integrity protection. |
| 11 | SS | | The SS establishes the radio access bearer for the active PDP context, using the same QoS that was used at activation. |

Specific message contents

None.

12.9.14.5 Test requirements

After step 8, UE shall:

- transmit a SERVICE REQUEST with service type "Paging response"

## 12.9.15 Service Request / abnormal cases / access barred due to domain specific access restriction for PS domain

12.9.15.1 Definition

This test case is applicable for Rel-5 UEs supporting DSAC and Rel-6 or later UEs.

12.9.15.2 Conformance requirement

TS24.008 4.1.1.2.2

> If the PS or CS domain is barred because of domain specific access control, a GPRS MS operating in mode A or B in a network that operates in mode II or III shall use the MM specific procedures or GMM specific procedures, respectively, in the domain which is unbarred. If the MS detects that a domain changes from barred to unbarred, it shall behave as specified in subclauses 4.4.4.9, 4.5.1.2, 4.7.3.1.5, 4.7.5.1.5, and 4.7.13.5.

TS24.008 4.7.13.5

a) Access barred because of common access class control or PS domain specific access control

The Service request procedure shall not be started. The MS stays in the current serving cell and applies normal cell reselection process. The Service request procedure may be started by CM layer if it is still necessary, i.e. when access is granted or because of a cell change.

Reference

TS 24.008 clauses 4.1.1.2.2, 4.7.13.5.

### 12.9.15.3 Test purpose

To test the behaviour of the UE in case of domain specific access control for PS domain.

### 12.9.15.4 Method of test

Initial condition

A PS domain specific access class X (0-15) is arbitrary selected. The USIM is programmed with this access class X.

System Simulator:

One cell operating in network operation mode II.

The SIB1 IE "CN domain specific NAS system information", for the CS Domain, is set to value "00 00" (T3212 value is set to 0 and ATT flag is set to FALSE).

User Equipment:

The UE has a valid P-TMSI-1 and RAI-1.

The UE has been registered in the CS domain.

Related ICS/IXIT statements

Support of PS service Yes/No
UE operation mode C Yes/No
UE operation mode A Yes/No
Switch off on button Yes/No
Automatic PS attach procedure at switch on or power on Yes/No
Support of DSAC Yes/No

Test procedure

The PS attach procedure is performed.

The SS initiates PS domain specific access class X is barred. A service request procedure is not performed.

The SS initiates PS domain specific access class X is not barred. A service request procedure is performed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The USIM is programmed with access class x. |
| 2 | UE | | | The UE is set in UE operation mode A or C (see ICS).<br>(The UE is set in UE operation mode A in case of the UE supporting both UE operation mode A and C.) |
| 3 | UE | | | The UE is powered up or switched on and attempt to initiate an ATTACH. (see ICS) |
| 4 | SS | | | The SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Registration". |

| | | | |
|---|---|---|---|
| 5 | -> | ATTACH REQUEST | Attach type = 'GPRS attach'<br>Mobile identity = P-TMSI-1<br>Old Routing area identity = RAI-1 |
| 6 | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 7 | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 8 | SS | | The SS starts an integrity protection. |
| 9 | <- | ATTACH ACCEPT | Attach result = 'GPRS only attached'<br>Allocated P-TMSI = P-TMSI-2<br>P-TMSI Signature = P-TMSI-2 signature<br>Routing area identity = RAI-1 |
| 10 | -> | ATTACH COMPLETE | |
| 11 | SS | | The SS releases the RRC connection |
| 12 | SS | | PS domain specific access class X is barred in cell |
| 13 | UE | | The UE initiates an upper-layer signalling for PS domain, e.g., Active PDP Context request, by MMI or by AT command. |
| 14 | UE | | No SERVICE REQUEST sent to the SS as PS domain access class x is barred.<br>The SS waits 30 seconds |
| 15 | UE | | Step15, 16 and 17 are applied only for UE in UE operation mode A.<br>The UE initiates an upper-layer signalling for CS domain, e.g., CM service request, by MMI or by AT command. |
| 16 | UE | | A CS call is initiated by the UE. |
| 17 | | | UE sends CM Service Request with CM Service Type= ‘Mobile originating call establishment’<br>SS send CM Service Reject with Reject Cause=’Congestion’<br>The SS releases the RRC Connection. |
| 18 | SS | | The access class x is not barred any more |
| 18a | UE | | If UE automatically initiates a Service request goto step 20.<br>If UE does not initiate a Service Request,go to Step 19. |
| 19 | UE | | The UE initiates an upper-layer signalling, e.g., Active PDP Context request, by MMI or by AT command. |
| 20 | SS | | The IE "Establishment cause" in the received RRC CONNECTION REQUEST message is not checked. |
| 21 | -> | SERVICE REQUEST | Service Type = "signalling". |
| 22 | <- | SERVICE REJECT | GMM cause = 'GPRS services not allowed' |
| 23 | SS | | The SS releases the RRC connection. |

Specific message contents

None.

12.9.15.5 Test requirements

At step14, when the SS indicates that PS domain specific access class X is barred, the UE shall:

- not perform Service Request procedure.

At step21, when the SS indicates that PS domain specific access class X is not barred, the UE shall:

- perform Service Request procedure.

## 12.9.16 MBMS SERVICE REQUEST / counting / MBMS Selected Service

### 12.9.16.1 Definition

This Test is applicable for all Rel-6 UEs supporting MBMS broadcast services.

### 12.9.16.2 Conformance requirement

The purpose of this procedure is to transfer the PMM mode from PMM-IDLE to PMM-CONNECTED mode, and/or to assign radio access bearer in case of PDP contexts are activated without radio access bearer assigned. In latter case, the PMM mode may be PMM-IDLE mode or may alternatively be the PMM-CONNECTED mode if the MS requires radio access bearer re-establishment. This procedure is used for;

……

- counting the number of mobile stations in a cell which are interested in a specific MBMS service.

.....

For counting the number of mobile stations in PMM-IDLE mode interested in a specific MBMS service, the trigger is given from the network by the MBMS notification procedure [8].

Service type can take either of the following values; ....., "MBMS multicast service reception" or "MBMS broadcast service reception". Each of the values shall be selected according to the criteria to initiate the Service request procedure.

If the UE is triggered to send a Service Request message for both MBMS multicast service and MBMS broadcast service simultaneously, the UE shall include a Service Type indicating "MBMS multicast service reception".

…….

The criteria to invoke the Service request procedure are when;

…….

d) the MS is in PMM-IDLE or PMM_CONNECTED mode, receives an MBMS notification for an MBMS multicast service for which the MS has activated an MBMS context or for an MBMS broadcast service which has been selected for reception locally by upper layers in the MS, and is prompted by the contents of the notification to establish a PS signalling connection. In this case, the service type shall be set to "MBMS multicast service reception" or "MBMS broadcast service reception", respectively.

…….

If one of the above criteria to invoke the Service request procedure is fulfilled, then the Service request procedure may only be initiated by the MS when the following conditions are fulfilled:

- its GPRS update status is GU1 UPDATED; and
- no GMM specific procedure is ongoing

#### Reference

3GPP TS 24.008 clauses 4.7.13

3GPP TS 25.331 clauses 8.6.9.6

3GPP TS 23.246 clauses 8.16

### 12.9.16.3 Test purpose

To test the behaviour of the UE that, when MBMS Modified services Information is sent with “MBMS required UE action” IE set to “Acquire counting info”, then UE initiates a Service Request procedure.

### 12.9.16.4 Method of test

#### Initial condition

System Simulator:

One MBMS cell operating in network operation mode I.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

UE operation mode A Yes/No
Switch off on button Yes/No

MBMS Broadcast service application available on UE Yes/No

Test procedure

a) The UE in PMM IDLE mode sends a SERVICE REQUEST to the SS, in response to the 'modified services information' indicating 'counting' to enable MBMS reception

b) After the SS receives the SERVICE REQUEST message, the SS sends a SERVICE REJECT message.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS initiates counting procedure by sending MBMS Modified services Information with "MBMS required UE action" IE set to "Acquire counting info" |
| 1a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "mbms_Reception". |
| 1b | UE | | | The UE after completing the RRC Connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after RRC CONNECTION SETUP COMPLETE and before step 4. |
| 2 | -> | | SERVICE REQUEST | Service Type indicating 'MBMS Broadcast Service Reception''. |
| 3 | <- | | SERVICE REJECT | The SS does not start security procedures, but rejects the Service request with reject cause value other than #3, #6, #7, #9, #10, #11, #12, #13, #15, and #40. |
| 4 | | SS | | The SS releases the RRC Connection. The UE is switched off or power is removed (see ICS) |

Specific message contents

In step 1, MBMS Modified services Information sent by SS with "MBMS required UE action" IE set to "Acquire counting info".

12.9.16.5 Test requirements

1. At step 2, the UE initiates a service request procedure with the 'Service type' set to 'MBMS Broadcast Service Reception'.

## 12.9.16m MBMS SERVICE REQUEST / counting / MBMS Multicast Service

12.9.16m.1 Definition

This test is applicable for all UEs that support MBMS multicast services.

12.9.16m.2 Conformance requirement

Same conformance requirement as in clause 12.9.16.2

12.9.16m.3 Test purpose

Same test purpose as in clause 12.9.16.3.

12.9.16m.4 Method of test

Initial condition

System Simulator:

Same as in clause 12.9.16.4.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

UE operation mode A Yes/No
Switch off on button Yes/No

MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 12.9.16.4.

Expected Sequence

Same expected sequence as in clause 12.9.16.4 except that expected sequence step 1b is not applicable and the Service Type in SERVICE REQUEST message in step 2 indicates ‘MBMS Multicast Service Reception’.

Specific message contents

Same specific messages contents as in clause 12.9.16.4

12.9.16m.5 Test requirements

1. At step 2, the UE initiates a service request procedure with the ‘Service type’ set to ‘MBMS Multicast Service Reception’ and ‘MBMS Context Status’ set appropriately.

## 12.9.17 MBMS SERVICE REQUEST / point to point RBs / MBMS Selected Service

12.9.17.1 Definition

This Test is applicable for all Rel-6 UEs supporting MBMS broadcast services.

12.9.17.2 Conformance requirement

The purpose of this procedure is to transfer the PMM mode from PMM-IDLE to PMM-CONNECTED mode, and/or to assign radio access bearer in case of PDP contexts are activated without radio access bearer assigned. In latter case, the PMM mode may be PMM-IDLE mode or may alternatively be the PMM-CONNECTED mode if the MS requires radio access bearer re-establishment. This procedure is used for;

…….

- requesting the establishment of a point-to-point Radio Bearer for receiving a MBMS service.

……

For establishing a point-to-point radio bearer to allow MBMS service, the trigger is given from the RRC determining this need from the MBMS control parameters broadcasted by the network [8].

Service type can take either of the following values; ..... "MBMS multicast service reception" or "MBMS broadcast service reception". Each of the values shall be selected according to the criteria to initiate the Service request procedure.

If the UE is triggered to send a Service Request message for both MBMS multicast service and MBMS broadcast service simultaneously, the UE shall include a Service Type indicating "MBMS multicast service reception".

The criteria to invoke the Service request procedure are when;

……..

e) the MS in PMM-IDLE or PMM_CONNECTED mode, determines from the broadcast MBMS control parameters that there is a need to establish a point-to-point Radio Bearer to enable MBMS reception. In this case, the service type shall be set to "MBMS multicast service reception" or "MBMS broadcast service reception", respectively.

If one of the above criteria to invoke the Service request procedure is fulfilled, then the Service request procedure may only be initiated by the MS when the following conditions are fulfilled:

- its GPRS update status is GU1 UPDATED; and
- no GMM specific procedure is ongoing.

Reference

3GPP TS 24.008 clauses 4.7.13

3GPP TS 25.331 clauses 8.6.9.6

3GPP TS 23.246 clauses 8.16

### 12.9.17.3 Test purpose

To test the behaviour of the UE that, when MBMS Modified services Information is sent with “MBMS required UE action” IE set to “Request PTP RB”, then UE initiates a Service Request procedure.

### 12.9.17.4 Method of test

Initial condition

System Simulator:

One MBMS cell operating in network operation mode I.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

The UE is interested in the selected service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

UE operation mode A Yes/No
Switch off on button Yes/No

MBMS Broadcast service application available on UE Yes/No

Test procedure

a) The UE in PMM IDLE mode sends a SERVICE REQUEST to the SS, in response to the ‘modified services information’ indicating ‘Request PTP RB’ to enable MBMS reception

b) RABs are established after Security procedure.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | SS initiates PTPRB setup procedure by sending MBMS Modified services Information with "MBMS required UE action" IE set to "Request PTP RB" |
| 1a | | SS | | SS checks that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Request PTP RB" . |
| 1b | UE | | | The UE after completing the RRC Connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after RRC CONNECTION SETUP COMPLETE and before step 3. |
| 2 | -> | | SERVICE REQUEST | Service Type = 'MBMS Broadcast Service Reception'. |
| 3 | | SS | | The SS start security procedures. After completion of Security procedure SS establishes the RAB |

Specific message contents

In step 1, MBMS Modified services Information sent by SS with "MBMS required UE action" IE set to "Request PTP RB".

12.9.17.5 Test requirements

1. At step 2, the UE initiates a service request procedure with the 'Service type' set to 'MBMS Broadcast Service Reception'.

## 12.9.17m MBMS SERVICE REQUEST / point to point RBs / MBMS Multicast Service

12.9.17m.1 Definition

This Test is applicable for all Rel-6 UEs supporting MBMS multicast services.

12.9.17m.2 Conformance requirement

Same conformance requirement as in clause 12.9.17.2

12.9.17m.3 Test purpose

Same test purpose as in clause 12.9.17.3.

12.9.17m.4 Method of test

Initial condition

System Simulator:

Same as in clause 12.9.17.4.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

UE operation mode A Yes/No
Switch off on button Yes/No

MBMS Multicast service application available on UE Yes/No.

Test procedure

Same test procedure as in clause 12.9.17.4 except that expected sequence step 1b is not applicable and the Service Type in SERVICE REQUEST message in step 2 indicates 'MBMS Multicast Service Reception'.

Specific message contents

Same specific messages contents as in clause 12.9.17.4

12.9.17m.5 Test requirements

1. At step 2, the UE initiates a service request procedure with the 'Service type' set to 'MBMS Multicast Service Reception' and 'MBMS Context Status' set appropriately.

## 12.9.18m Handling of MBMS context status information in SERVICE REQUEST and SERVICE ACCEPT messages / MBMS Multicast Service

12.9.18m.1 Definition

This Test is applicable for all Rel-6 UEs supporting MBMS multicast services.

12.9.18m.2 Conformance requirement

…….

If the MBMS context status information element is included in the SERVICE ACCEPT message, then the MS shall deactivate all those MBMS contexts locally (without peer to peer signalling between the MS and network) which are not in SM state PDP-INACTIVE in the UE, but are indicated by the network as being in state PDP-INACTIVE. If no MBMS context status information element is included, then the MS shall deactivate all those MBMS contexts locally which are not in SM state PDP-INACTIVE in the MS.

Reference

3GPP TS 24.008 clauses 4.7.13.

12.9.18m.3 Test purpose

1. To verify that the UE includes correct MBMS context status information in SERVICE REQUEST message

2. To verify that if the MBMS context status information element is included in the SERVICE ACCEPT message, then the UE deactivates all those MBMS contexts locally (without peer to peer signalling between the UE and network) which are not in SM state PDP-INACTIVE in the UE, but are indicated by the network as being in state PDP-INACTIVE.

3. To verify that if no MBMS context status information element is included, then the UE deactivates all MBMS contexts locally which are not in SM state PDP-INACTIVE in the UE.

12.9.18m.4 Method of test

Initial condition

System Simulator:

1 MBMS cell, default parameters.

User Equipment:

The UE is in GMM-state "GMM-REGISTERED, normal service" with valid P-TMSI and CKSN.

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

The UE has PDP context activated and two MBMS contexts activated.

PDP one trans_id 0 and nsapi 5

MBMS one trans_id 1 and nsapi 128 and

MBMS two trans_id 2 and nsapi 129.

For Both the MBMS associated PDP is with nsapi 5

### Related ICS/IXIT statements

MBMS Multicast service application available on UE Yes/No

### Test procedure

a) The UE initiates RAB Reestablishment for Dormant PDP which in turn triggers a Service request procedure in order to move to state PMM_CONNECTED for the RAB reestablishment.

b) Service procedure completes at completion of security procedure.

c) SS shall not release RRC connection and SS shall not establish the RAB.

d) UE initiates Service Request Procedure which completes with Service Accept this time.

### Expected Sequence

| | UE SS | | |
|---|---|---|---|
| 1 | UE | | The UE initiates transmission of uplink data, by MMI or by AT command. |
| 2 | -> | SERVICE REQUEST | Service type = "data", UE sets nsapi 128 and 129 as 1 in MBMS context Status IE and all other as 0. |
| 3 | <- | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | -> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | SS | | The SS starts integrity protection. |
| 6 | SS | | SS shall not release RRC connection and SS shall not establish the RAB |

| | | | |
|---|---|---|---|
| 7 | UE | | The UE initiates transmission of uplink data, by MMI or by AT command. |
| 8 | -> | SERVICE REQUEST | Service type = "data", UE sets nsapi 128 and 129 as 1 in MBMS context Status IE and all other as 0. |
| 9 | <- | SERVICE ACCEPT | SS sets nsapi 129 as 0 in MBMS Context Status IE. UE locally deactivates MBMS context with extended_nsapi 129 |
| 10 | SS | | SS shall not release RRC connection and SS shall not establish the RAB |
| 11 | UE | | The UE initiates transmission of uplink data, by MMI or by AT command, after time T3319. |
| 12 | -> | SERVICE REQUEST | Service type = "data", UE sets nsapi 128 1 in MBMS context Status IE and all other as 0.This verifies UE deactivated MBMS Context with nsapi 129 |
| 13 | <- | SERVICE ACCEPT | SS does not include MBMS Context Status IE. UE locally deactivates all MBMS contexts. |
| 14 | | | UE may deactivate associated PDP with MBMS contexts as all the associated MBMS contexts are deactivated. |
| 15 | SS | | SS shall not release RRC connection and SS shall not establish the RAB |
| 16 | UE | | The UE initiates transmission of uplink data, by MMI or by AT command, after time T3319. |
| 17 | -> | SERVICE REQUEST | UE does not include MBMS Context Status IE. This verifies UE deactivated nsapi 128 and UE does not include MBMS context status IE when no MBMS context exists. |
| 18 | <- | SERVICE ACCEPT | |

Specific message contents

Step 9: SS sets nsapi 129 as 0 in MBMS Context Status IE.

Step 13: SS does not include MBMS Context Status IE.

12.9.18m.5 Test requirements

At step 8, UE sets nsapi 128 and 129 as 1 in MBMS context Status IE and all other as 0 in the service request message.

At step 12, UE sets nsapi 128 as 1 in MBMS context Status IE and all other as 0 in the service request message.

At step 17, UE does not include MBMS Context Status IE in the service request message.

# 13 General Tests

## 13.1 Emergency call / general

In this clause, the emergency call service is tested for user equipment that support Emergency speech call in the following cases:

- emergency call initiated in the MM idle state with authentication and with security mode procedure applied;
- emergency call initiated in the MM idle, no IMSI state (hence without authentication and without security mode procedure applied), the network accepting the call;
- emergency call initiated in the MM idle, no IMSI state (hence without authentication and without security mode procedure applied), the network rejecting the call.

## 13.2 Emergency call

Emergency call establishment can be initiated by an UE whether location updating has been successful or not and whether a USIM is inserted into the UE or not; but only if the UE is equipped for speech.

If the procedures tested in this clause are not correctly implemented in the UE, establishment, maintenance and clearing of connections might fail in the essential case of emergency calls.

### 13.2.1 Emergency call / with USIM

#### 13.2.1.1 Emergency call / with USIM / accept case

##### 13.2.1.1.1 Definition

When a USIM is present, subscriber specific emergency call set-up MMI shall be provided. The operator shall specify preferred emergency call MMI(s) (e.g. 911 for US citizens or 110, 118 and 119 for Japanese citizens) for use in any (i.e. home or visited) PLMN. This shall be stored in the USIM and the UE shall read this and use any entry of these digits to set up an emergency call. It shall be possible to store more than one instance of this field.

When a USIM containing stored emergency numbers is present, only those numbers are identified as emergency numbers, i.e. default emergency numbers stored in the UE are ignored.

##### 13.2.1.1.2 Conformance requirement

1) A MM connection for an emergency call may be established in all states of the mobility management sublayer which allow MM connection establishment for a normal originating call.

   When a user requests an emergency call establishment the UE will send a CM SERVICE REQUEST message to the network with a CM service type information element indicating emergency call establishment..

2) Having entered the "MM connection pending" state, upon MM connection establishment, the call control entity of the UE sends a setup message to its peer entity. This setup message is

   - a SETUP message, if the call to be established is a basic call; and
   - an EMERGENCY SETUP message, if the call to be established is an emergency call.

3) Upon receiving an indication that the call has been accepted, the call control entity of the network shall: through connect the traffic channel (including the connection of an interworking function, if required) and send a CONNECT message to its peer entity at the calling UE; start timer T313 and enter the "connect indication" state.

   This message indicates to the call control entity of the calling UE that a connection has been established through the network.

4) The call control entity of the network shall initiate clearing by: sending a DISCONNECT message; and entering the "disconnect indication" state.

Reference(s):

- For conformance requirement 1: TS 24.008 clause 4.5.1.5, TS 22.101 clause 8.
- For conformance requirement 2: TS 24.008, clause 5.2.1.
- For conformance requirement 3: TS 24.008, clause 5.2.1.6.
- For conformance requirement 4: TS 24.008, clause 5.4.4.

#### 13.2.1.1.3 Test purpose

1) To verify that an UE supporting speech in the state "MM idle", when made to call the emergency call number, sends a CM SERVICE REQUEST message specifying the correct CKSN and TMSI, with CM service type IE "emergency call establishment".
2) To verify that after security mode setting by the SS, the UE sends an EMERGENCY SETUP message.
3) To verify that, the SS having sent a CALL PROCEEDING message and then an ALERTING message the correct performance of a connect procedure and that the UE has through connected the DTCH in both directions.
4) To verify that the call is cleared correctly.

#### 13.2.1.1.4 Method of test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE is in state "MM idle" with valid TMSI and CKSN.

Related ICS/IXIT Statement(s)

- Emergency speech call yes/no

Test procedure

The UE is made to initiate an emergency call. Having reached the active state, the call is cleared by the SS.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The "emergency number" is entered. Number shall be one programmed in test USIM $EF_{ECC}$ (Emergency Call Codes), ref. 34.108 clause 8.3.2.21. |
| 2 | --> | | | UE establishes RRC procedure for emergency call.<br>Establishment cause: Emergency Call |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | --> | | CM SERVICE REQUEST | The CM service type IE indicates "emergency call establishment". |
| 6 | <-- | | AUTHENTICATION REQUEST | IE Authentication Parameter AUTN shall be present in the message. |
| 7 | --> | | AUTHENTICATION RESPONSE | SRES specifies correct value. |
| 8 | | | | SS starts security procedure. |
| 9 | | | Void | |
| 10 | | | Void | |
| 11 | --> | | EMERGENCY SETUP | If the Bearer capability IE is not included the default UMTS AMR speech version shall be assumed. |
| 12 | <-- | | CALL PROCEEDING | |
| 13 | <-- | | ALERTING | |
| 14 | <-- | | | SS sets up the radio bearer with the rate indicated by the EMERGENCY SETUP message. |
| 15 | | | Void | |
| 16 | <-- | | CONNECT | |
| 17 | --> | | CONNECT ACKNOWLEDGE | |
| 18 | UE | | | The DTCH is through connected in both directions. |
| 19 | <-- | | DISCONNECT | SS disconnects the call and associated radio bearer. |

Specific Message Contents

None.

#### 13.2.1.1.5 Test requirements

In step 2 of the Expected Sequence the UE shall establish RRC procedure with establishment cause Emergency Call.

In step 5 of the Expected Sequence the UE shall send a CM SERVICE REQUEST message with CM service type emergency call establishment.

In step 11 of the Expected Sequence the UE shall send an EMERGENCY SETUP message.

In step 18 of the Expected Sequence the UE has through connected the DTCH in both directions.

In step 19 of the Expected Sequence the call is cleared correctly.

## 13.2.2 Emergency call / without USIM

### 13.2.2.1 Emergency call / without USIM / accept case

#### 13.2.2.1.1 Definition

The following emergency numbers shall be stored in the UE for use without USIM: 000, 08, 112, 110, 118, 119, 911 and 999.

#### 13.2.2.1.2 Conformance requirement

1) A MM connection for an emergency call may be established in all states of the mobility management sublayer which allow MM connection establishment for a normal originating call.

When a user requests an emergency call establishment the UE will send a CM SERVICE REQUEST message to the network with a CM service type information element indicating emergency call establishment.

Normally, the UE will be identified by an IMSI or a TMSI. However, if none of these identifiers is available in the UE, then the UE shall use the IMEI for identification purposes.

2) As a serving network option, emergency calls may be established without the network having to apply the security mode procedure as defined in TS 24.008.

   The following are the only cases where the "security procedure not applied" option may be used:

   a) Authentication is impossible because the USIM is absent.

3) Having entered the "MM connection pending" state, upon MM connection establishment, the call control entity of the UE sends a setup message to its peer entity. This setup message is:

   - a SETUP message, if the call to be established is a basic call; and
   - an EMERGENCY SETUP message, if the call to be established is an emergency call.

4) Upon receiving an indication that the call has been accepted, the call control entity of the network shall: through connect the traffic channel (including the connection of an interworking function, if required) and send a CONNECT message to its peer entity at the calling UE; start timer T313 and enter the "connect indication" state.

   This message indicates to the call control entity of the calling UE that a connection has been established through the network.

5) The call control entity of the network shall initiate clearing by: sending a DISCONNECT message; and entering the "disconnect indication" state.

Reference(s):

- For conformance requirement 1: TS 24.008 clause 4.5.1.5, TS 22.101 clause 8.
- For conformance requirement 2: TS 33.102, clause 6.4.9.2.
- For conformance requirements 3: TS 24.008, clause 5.2.1.
- For conformance requirement 4: TS 24.008, clause 5.2.1.6.
- For conformance requirement 5: TS 24.008, clause 5.4.4.

#### 13.2.2.1.3 Test purpose

1) To verify that the UE in the "MM idle, no IMSI" state (no USIM inserted) when made to call the emergency call number, sends a CM SERVICE REQUEST message in which the ciphering key sequence number IE indicates "no key is available", the CM service type IE indicates "emergency call establishment" and the mobile identity IE specifies the IMEI of the UE.

2) To verify that after receipt of a CM SERVICE ACCEPT message without security mode procedure applied from the SS, the UE sends an EMERGENCY SETUP message.

3) To verify that the SS having sent a CALL PROCEEDING message and then an ALERTING message the correct performance of a connect procedure and that the UE has through connected the DTCH in both directions.

4) To verify that the call is cleared correctly.

#### 13.2.2.1.4 Method of test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:

- the UE is in MM-state "MM idle, no IMSI", no USIM inserted.

Related ICS/IXIT Statement(s)

- Emergency speech call yes/no

Test procedure

The UE is made to initiate an emergency call. The call is established without authentication and security. Having reached the active state, the call is cleared by the SS.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The "emergency number" is entered. One of the following emergency numbers shall be used: 000, 08, 112, 110, 118, 119, 911 or 999. |
| 2 | --> | | | UE establishes RRC procedure for emergency call.<br>Establishment cause: Emergency Call |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | --> | | CM SERVICE REQUEST | The CM service type IE indicates "emergency call establishment". The mobile identity IE specifies the IMEI of the UE. The cipher key sequence number IE indicates "no key is available". |
| 6 | <-- | | CM SERVICE ACCEPT | |
| 7 | --> | | EMERGENCY SETUP | If the Bearer capability IE is not included the default UMTS AMR speech version shall be assumed. |
| 8 | <-- | | CALL PROCEEDING | |
| 9 | <-- | | ALERTING | |
| 10 | <-- | | | SS sets up the radio bearer with the rate indicated by the EMERGENCY SETUP message. |
| 11 | | | Void | |
| 12 | <-- | | CONNECT | |
| 13 | --> | | CONNECT ACKNOWLEDGE | |
| 14 | UE | | | The DTCH is through connected in both directions. |
| 15 | <-- | | DISCONNECT | SS disconnects the call and associated radio bearer. |

Specific Message Contents

None.

#### 13.2.2.1.5 Test requirements

In step 2 of the Expected Sequence the UE shall establish RRC procedure with establishment cause Emergency Call.

In step 5 of the Expected Sequence the UE shall send a CM SERVICE REQUEST message with CM service type emergency call establishment, mobile identity IMEI and cipher key sequence number no key is available.

In step 7 of the Expected Sequence the UE shall send an EMERGENCY SETUP message.

In step 14 of the Expected Sequence the UE has through connected the DTCH in both directions.

In step 15 of the Expected Sequence the call is cleared correctly.

### 13.2.2.2 Emergency call / without USIM / reject case

#### 13.2.2.2.1 Definition

The following emergency numbers shall be stored in the UE for use without USIM: 000, 08, 112, 110, 118, 119, 911 and 999.

#### 13.2.2.2.2 Conformance requirement

1) A MM connection for an emergency call may be established in all states of the mobility management sublayer which allow MM connection establishment for a normal originating call.

   When a user requests an emergency call establishment the UE will send a CM SERVICE REQUEST message to the network with a CM service type information element indicating emergency call establishment.

   Normally, the UE will be identified by an IMSI or a TMSI. However, if none of these identifiers is available in the UE, then the UE shall use the IMEI for identification purposes.

2) If the network does not accept the emergency call request, e.g., because IMEI was used as identification and this capability is not supported by the network, the network will reject the request by returning a CM SERVICE REJECT message to the UE.

Reference(s):

- For conformance requirement 1: TS 24.008 clause 4.5.1.5, TS 22.101 clause 8.
- For conformance requirement 2: TS 24.008 clause 4.5.1.5.

#### 13.2.2.2.3 Test purpose

1) To verify that the UE in the "MM idle, no IMSI" state (no USIM inserted) when made to call the emergency call number, sends a CM SERVICE REQUEST message in which the ciphering key sequence number IE indicates "no key is available", the CM service type IE indicates "emergency call establishment", and the mobile identity IE specifies the IMEI of the UE.

2) To verify that after receipt of a CM SERVICE REJECT message from the SS, the UE abandons the emergency call establishment.

#### 13.2.2.2.4 Method of test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE is in state "MM idle, no IMSI", no USIM inserted.

Related ICS/IXIT Statement(s)

- Emergency speech call yes/no

Test procedure

The UE is made to initiate an emergency call. The call is established without authentication, and security. The SS responds to the CM SERVICE REQUEST from the UE with a CM SERVICE REJECT message specifying in the reject cause IE the reject cause value "IMEI not accepted". The SS then verifies for during 5 seconds that the UE does not send a layer 3 message. Then the call is cleared by the SS. The SS verifies during 20 seconds after disconnection of the main signalling link that the UE does not initiate a RRC connection establishment.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The "emergency number" is entered. One of the following emergency numbers shall be used: 000, 08, 112, 110, 118, 119, 911 or 999. |
| 2 | --> | | | UE establishes RRC procedure for emergency call.<br>Establishment cause: Emergency Call |
| 3 | | | Void | |
| 4 | | | Void | |
| 5 | --> | | CM SERVICE REQUEST | The CM service type IE indicates "emergency call establishment". The mobile identity IE specifies the IMEI of the UE. The cipher key sequence number IE indicates "no key is available". |
| 6 | <-- | | CM SERVICE REJECT | The reject cause IE specifies reject cause value #5, "IMEI not accepted". |
| 7 | SS | | | During 5 seconds, the SS verifies that the UE does not send L3 messages. |
| 8 | | | Void | |
| 9 | | | Void | |
| 10 | SS | | | During 20 seconds, the SS verifies that the UE does not initiate a RRC connection establishment |

Specific Message Contents:

None.

13.2.2.2.5 Test requirements

In step 2 of the Expected Sequence the UE shall establish RRC procedure with establishment cause Emergency Call.

In step 5 of the Expected Sequence the UE shall send a CM SERVICE REQUEST message with CM service type emergency call establishment, mobile identity IMEI and cipher key sequence number no key is available.

In step 6 of the Expected Sequence the UE shall abandon the emergency call establishment.

# 14 Interoperability Radio Bearer Tests

## 14.1 General information for interoperability radio bearer tests

The purpose of the interoperability radio bearer test cases are to ensure interoperability of UE's in different regions and networks. For this purpose representative radio bearer configurations that will be used in real network implementations have been defined in TS 34.108 [9], clause 6.10.

The applicability of radio bearer tests is dependent on the UE uplink and downlink radio access capabilities and UE support tele- and bearer-services. See TS 34.123-2, annex B for applicability of the specific test cases.

For radio bearer combinations which are representative to multiple traffic classes, such as “Interactive or Background”, “Streaming or Interactive or Background” etc, then it is only required to execute the radio bearer test procedure once using one of the applicable traffic class for the UE under test.

NOTE As the purpose of the radio bearer test cases is to functionally verify that the UE is able to establish the radio bearer combination, and to verify correct data transfer using the different transport formats, then the necessary test coverage is achieved by perfoming the radio bearer test procedure once for one of the applicable traffic classes.

### 14.1.1 Generic radio bearer test procedure for single RB configurations

This procedure is used to test single radio bearer configurations and speech only radio bearers. For testing of multiple radio bearer combinations as well as for testing simultaneous transmission and reception of user data and signalling data then the procedure as specified in 14.1.2 should be used.

Initial conditions

UE in idle mode

Test procedure

a) The SS establish setup the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test.

b) The SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. See note 1.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 2.

d) The SS transmits, for all radio bearers under test, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test of the actual radio bearer test. See note 3.

e) The SS checks that, for all radio bearers under test, the content of the received RLC SDU has the correct content and is received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

f) The SS opens the UE test loop.

g) Steps b) to f) are repeated for all sub-tests

h) The SS may optionally release the radio bearer.

i) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The restricted set of TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signaling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2. This message is transmitted only for cell DCH state.

NOTE 2: Selection of UL RLC SDU size parameter:
For the case when the reference radio bearer configuration under test uses RLC transperant mode in downlink and is not configured for segmented operation then the radio bearer test case shall set the UL RLC SDU size equal to the UL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transperent mode. In case the reference radio bearer configuration under test does not use RLC transparent mode then the UL RLC SDU size parameter shall be selected to achieve loop back of all test data received in the DL RLC SDU, i.e. the UL RLC SDU size is set to the nearest multiple of the payload size of the UL TF under test minus the size of the length indicator and expansion bit which is equal or bigger than the test data size. For some reference radio bearer configurations this may cause the UE to return the UL RLC SDU in more than one TTI, i.e. in case no UL TF is available to cover the UL RLC SDU size. However, as the test procedure only send downlink test data once there is no risk for the UE transmission buffer to become full even if the returned RLC SDUs need to be tranmitted in more than one TTI.

NOTE 3: Selection of test data size:
For the case when the reference radio bearer configuration under test uses RLC transperant mode in downlink and is not configured for segmented operation then the radio bearer test case shall use a DL RLC SDU size (defined by the "Test data size" parameter) equal to the DL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transperent mode. In case the reference radio bearer configuration under test does not use RLC transparent mode in downlink, the DL RLC SDU size/ test data size shall be set equal to the payload size of the DL TF under test minus the size of the length indicator and the expansion bit.

Expected sequence

**CS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | PAGING RESPONSE (DCCH) | RR |
| 6a | <-- | | AUTHENTICATION REQUEST | |
| 6b | --> | | AUTHENTICATION RESPONSE | |
| 6c | <-- | | SECURITY MODE COMMAND | |
| 6d | --> | | SECURITY MODE COMPLETE | |

**PS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6a | --> | | SERVICE REQUEST (DCCH) | GMM |
| 6b | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 6c | --> | | SECURITY MODE COMPLETE | RRC see note 1 |

Note 1 In addition to activate integrity protection Step 6b and Step 6c are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1..6 | <-- --> | | Paging | Use the CS paging procedure for testing of CS and combined CS/PS reference radio bearer configurations.<br><br>Use the PS paging procedure for testing of PS reference radio bearer configurations. |
| 7 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 8 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 9 | <-- | | RADIO BEARER SETUP (DCCH) | RRC.<br>Channelization code must be set to SF – 1 for the DL DPCH configured.<br>Channelization code must be set to SF – 1 for the DL DPCH configured.<br>Secondary Scrambling Code IE must be omittedFor the PS radio bearer the 'pdcp info' IE must be omitted. |
| 10 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 11 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test<br>See Note 1 |
| 12 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 13 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 14 | <-- | | DOWNLINK RLC SDU | Send test data using the downlink transport format combination under test |
| 15 | --> | | UPLINK RLC SDU | |
| 16 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 17 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 18 | | | Repeat steps 11 to 17 for every sub-test. | |
| 19 | | | RB RELEASE | RRC<br>Optional step |
| 20 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 21 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |
| Note 1: TRANSPORT FORMAT COMBINATION CONTROL message is transmitted only for cell DCH state. | | | | |

## 14.1.1a Generic radio bearer test procedure for standalone AMR RB configurations using SRB#5 for TFC control

This procedure is used to test single AMR radio bearer configurations that use SRB#5 for TFC control.

Initial conditions

UE in idle mode

Test procedure

a) The SS establish the AMR reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test. As part of the RADIO BEARER SETUP the TFC subsets as defined for the actual radio bearer configuration is setup.

b) The SS signals the "TFC subset identity" in the TRANSPORT FORMAT COMBINATION CONTROL message on SRB#5 as specified for the sub-test of the actual AMR radio bearer test. See note 1.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 2.

d) The SS transmits, for all radio bearers under test, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test of the actual radio bearer test. See note 3.

e) The SS checks that, for all radio bearers under test, the content of the received RLC SDU has the correct content and is received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

f) The SS opens the UE test loop.

g) Steps b) to f) are repeated for all sub-tests

h) The SS may optionally release the radio bearer.

i) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The TFC subset associated with the signalled “TFC subset identity” in the TRANSPORT FORMAT COMBINATION CONTROL message is defined by the actual AMR reference radio bearer under test.

NOTE 2: Selection of UL RLC SDU size parameter:
The UL RLC SDU size parameter is set equal to the UL RLC PDU size.

NOTE 3: Selection of test data size:
The test data size is set equal to the DL RLC PDU size.

Expected sequence

**CS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | <-- | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | | <-- | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| 3 | | --> | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | | <-- | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | | --> | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | | --> | PAGING RESPONSE (DCCH) | RR |
| 6a | | <-- | AUTHENTICATION REQUEST | |
| 6b | | --> | AUTHENTICATION RESPONSE | |
| 6c | | <-- | SECURITY MODE COMMAND | |
| 6d | | --> | SECURITY MODE COMPLETE | |
| 7 | | <-- | ACTIVATE RB TEST MODE (DCCH) | TC |
| 8 | | --> | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 9 | | <-- | RADIO BEARER SETUP (DCCH) | RRC.<br>TRANSPORT FORMAT COMBINATION CONTROL message on SRB#5 are setup as part of the RADIO BEARER SETUP message. |
| 10 | | --> | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 11 | | <-- | TRANSPORT FORMAT COMBINATION CONTROL message | SRB#5, includes the TFS subset identity IE |
| 12 | | <-- | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 13 | | --> | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 14 | | <-- | DOWNLINK RLC SDU | Send test data using the downlink transport format combination under test |
| 15 | | --> | UPLINK RLC SDU | |
| 16 | | <-- | OPEN UE TEST LOOP (DCCH) | TC |
| 17 | | --> | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 18 | | | Repeat steps 11 to 17 for every sub-test. | |
| 19 | | | RB RELEASE | RRC<br>Optional step |
| 20 | | <-- | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 21 | | --> | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |

## 14.1.2 Generic test procedure for testing multi-RB combinations and simultaneous signalling

This procedure is used to test multiple radio bearer combinations. This procedure is also used to verify simultaneous transmission and reception of user data and signalling data.

Initial conditions

UE in idle mode

Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test. For the case when the reference radio bearer configuration includes radio bearers for both CS and PS domain then the radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s),also the transport format combination set for only CS

radio bearers has to provided. The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers . The Physical channel configuration shall be done for both CS and PS radio bearers combined. Here the transport format combination set for both CS and PS radio bearers shall be provided.

b) The SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. See note 1.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 2.

d) The SS starts transmitting continuous test data for all radio bearers under test. The number of RLC SDUs to transmit every TTI and the size "Test data size" is specified for each sub-test of the actual radio bearer test. See note 3.

e) The SS waits to receive an UL RLC SDU on each RB. The SS waits a maximum time of T1 for this to occur, where T1 is equal to 12 times the largest TTI. See note 4

f) SS transmits a MEASUREMENT CONTROL message requesting periodic reporting with a period of T2.

g) SS waits the time equal to 4 times T2

h) During step e) to g) the SS checks that, for all radio bearers under test, the content of the received RLC SDUs have the correct content and is received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

i) The SS opens the UE test loop.

j) Steps b) to i) are repeated for all sub-tests

h) The SS may optionally release the radio bearer.

i) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The restricted set of TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signaling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

NOTE 2: Selection of UL RLC SDU size parameter:
For the case when the reference radio bearer configuration under test uses RLC transperant mode in downlink and is not configured for segmented operation then the radio bearer test case shall set the UL RLC SDU size equal to the UL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transperent mode. In case the reference radio bearer configuration under test does not use RLC transparent mode then, as the test procedure is based on continous downlink transmission of test data in sub-sequent TTIs, the UL RLC SDU size parameter shall be selected to adopt to the uplink data rate and to the uplink/downlink TTI ratio. Selection of UL RLC SDU size for the different radio bearers under test should be such that the UE returns data in sub-sequent TTIs without causing the UE transmission buffer to become full. To achieve this the UL RLC SDU size shall be set to UL TF payload size under test, divided by the ratio between downlink and uplink TTI , minus the size of length indicator and expansion bit, . E.g. for a AM radio bearer having the the uplink RLC payload size equal to 320, the downlink TTI equal to 10 ms, and the uplink TTI equal to 20 ms, then for the transport format 4x336 (TF payload size = 4x320=1280 bits) the UL RLC SDU size parameter should be set to 632 bits (=(1280bits/(20ms/10ms))- 8 bits).

NOTE 3: Selection of test data size:
For the case when the reference radio bearer configuration under test uses RLC transperant mode in downlink and is not configured for segmented operation then the radio bearer test case shall use a DL RLC SDU size (defined by the "Test data size" parameter) equal to the DL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transperent mode. In case the reference radio bearer configuration under test does not use RLC transparent mode in downlink, the DL RLC SDU size/ test data size shall be set equal to the payload size of the DL TF under test minus the size of the length indicator and the expansion bit.

NOTE 4: [10] TS 34.109 clause 5.3.2.9 defines the loopback delay requirement for UE test loop mode 1 to be max 10 times actual TTI of a radio bearer when RLC and MAC is operated in transparent mode. As RLC/MAC may be operated in non-transparent modes depending on the actual reference radio bearer configuration to be tested an additional 2 TTI have been added to secure that UE starts transmitting data in uplink before SS transmit the MEASUREMENT CONTROL message.

Expected sequence

**CS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | PAGING RESPONSE (DCCH) | RR |
| 6a | <-- | | AUTHENTICATION REQUEST | |
| 6b | --> | | AUTHENTICATION RESPONSE | |
| 6c | <-- | | SECURITY MODE COMMAND | |
| 6d | --> | | SECURITY MODE COMPLETE | |

**PS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6a | --> | | SERVICE REQUEST (DCCH) | GMM |
| 6b | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 6c | --> | | SECURITY MODE COMPLETE | RRC see note 1 |

Note 1 In addition to activate integrity protection Step 6b and Step 6c are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1..6 | <-- --> | | Paging | Use the CS paging procedure for testing of CS and combined CS/PS reference radio bearer configurations.<br><br>Use the PS paging procedure for testing of PS reference radio bearer configurations. |
| **Case A: CS or PS radio bearers only** | | | | |
| A7 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| A8 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| A9 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>Channelization code must be set to SF – 1 for the DL DPCH configured.<br>PS radio bearer(s) are configured. For the PS radio bearer(s) the 'pdcp info' IE must be omitted.<br>Secondary Scrambling Code IE must be omitted |
| A10 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **Case B: CS + PS radio bearers** | | | | |
| B7 | <-- | | PAGING TYPE 2 (DCCH) | TMSI (GSM-MAP)/ P-TMSI |
| B7a | --> | | SERVICE REQUEST (DCCH) | GMM |
| B7b | <-- | | SECURITY MODE COMMAND | RRC See note |
| B7c | --> | | SECURITY MODE COMPLETE | RRC See note |
| B8 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| B8a | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| B9 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured |
| B10 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B10a | | | Void | |
| B10b | | | Void | |
| B10c | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>Channelization code must be set to SF – 1 for the DL DPCH configured.<br>Secondary Scrambling Code IE must be omitted<br>PS radio bearer(s) are configured. For the PS radio bearer the poll-SDU value must be set to 4 and the 'pdcp info' IE must be omitted. |
| B10d | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 11 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test |
| 12 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 13 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 14a | <-- --> | | Test data | SS sends continuous test data in every TTI using the downlink transport format combination under test. The number of RLC SDUs and their sizes are specified in the actual test case.<br><br>SS checks returned data |
| 14b | | | Wait T1 | SS continues to send data every TTI and check the returned data for a maximum time of T1 for the first UL RLC SDU to be received on each RB.<br>T1 = 12 times the max TTI in the actual radio bearer combination under test |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 15a | <-- | | Test data (DTCH) + | SS continues sending test data in every TTI. |
| | --> | | | |
| | <-- | | MEASUREMENT CONTROL (DCCH) | SS sends a MEASUREMENT CONTROL message simultaneously to the test data requesting periodic reporting at interval T2 |
| 15b | <-- | | Test data (DTCH) + | SS continues to send data in every TTI and check the returned data for time 4xT2 |
| | --> | | | |
| | --> | | MEASUREMENT REPORT (DCCH) | SS checks that at least one MEASUREMENT REPORT message is received |
| 16 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 17 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 18 | | | Repeat steps 11 to 17 for every sub-test. | |
| 19 | | | RB RELEASE (DCCH) | RRC<br>Optional step |
| 20 | <-- | | DEACTIVATE RB TEST MODE (DCCH) | TC<br>Optional step |
| 21 | --> | | DEACTIVATE RB TEST MODE COMPLETE (DCCH) | TC<br>Optional step |
| Note. | For case B (CS+PS radio bearers) the second security mode procedure is needed to enable testing of ciphering on the PS radio bearers. For the CS domain the security mode procedure is performed as part of the CS paging procedure. | | | |

## 14.1.2a Generic test procedure for testing multi-RB combinations and simultaneous signalling in case of DSCH

This procedure is used to test multiple radio bearer combinations where PS data goes on the DSCH. This procedure is also used to verify simultaneous transmission and reception of user data and signaling data.

### Initial conditions

UE in idle mode

### Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test. For the case when the reference radio bearer configuration includes radio bearers for both CS and PS domain then the radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s), also the transport format combination set for only CS radio bearers has to be provided. The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers.

b) The SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. Here first time only the TFCs for the data on CS RAB and the data on PS RAB are restricted.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 1.

d) The SS transmits test data on all radio bearers under test. The number of RLC SDUs to transmit every TTI and the size "Test data size" is specified for each sub-test of the actual radio bearer test. See note 2.

e) The SS checks that UE has looped back the data on the CS and PS Radio bearer.

f) The SS opens the UE test loop.

g) SS uses the RRC transport format combination control procedure. And now restricts the TFCs for the data on CS RAB and the data on PS RAB and also on SRB.

h) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 2.

i) SS transmit data on the CS RAB a MEASUREMENT CONTROL message requesting periodic reporting with a period of T2.

j) SS transmits the data on PS RAB.

k) SS waits the time equal to 4 times T2

l) SS checks that, for all radio bearers under test, the content of the received RLC SDUs have the correct content and is received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loop back of RLC SDUs.

m) The SS opens the UE test loop.

n) (Void)

o) Steps b) to m) are repeated for all sub-tests

p) The SS may optionally release the radio bearer.

q) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: Selection of UL RLC SDU size parameter:
For the case when the reference radio bearer configuration under test uses RLC transparent mode in downlink and is not configured for segmented operation then the radio bearer test case shall set the UL RLC SDU size equal to the UL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transparent mode. Selection of UL RLC SDU size for the different radio bearers under test should be such that the UE returns data in sub-sequent TTIs without causing the UE transmission buffer to become full. To achieve this the UL RLC SDU size shall be set to UL TF payload size under test, minus the size of length indicator and expansion bit, and divided by the ratio between downlink and uplink TTI. E.g. for a AM radio bearer having the uplink RLC payload size equal to 320, the downlink TTI equal to 10 ms, and the uplink TTI equal to 20 ms, then for the transport format 4x336 (TF payload size = 4x320=1280 bits) the UL RLC SDU size parameter should be set to 632 bits (=1280bits/(20ms/10ms)- 8 bits).

NOTE 2: Selection of test data size:
For the case when the reference radio bearer configuration under test uses RLC transparent mode in downlink and is not configured for segmented operation then the radio bearer test case shall use a DL RLC SDU size (defined by the "Test data size" parameter) equal to the DL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transparent mode. In case the reference radio bearer configuration under test does not use RLC transparent mode in downlink, the DL RLC SDU size/ test data size shall be set equal to the payload size of the DL TF under test minus the size of the length indicator and the expansion bit.

NOTE 3: The restricted set of TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signaling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

Expected sequence

**CS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | PAGING RESPONSE (DCCH) | RR |
| 6a | <-- | | AUTHENTICATION REQUEST | |
| 6b | --> | | AUTHENTICATION RESPONSE | |
| 6c | <-- | | SECURITY MODE COMMAND | |
| 6d | --> | | SECURITY MODE COMPLETE | |

**PS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6a | --> | | SERVICE REQUEST (DCCH) | GMM |
| 6b | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 6c | --> | | SECURITY MODE COMPLETE | RRC see note 1 |

NOTE 1 In addition to activate integrity protection Step 6b and Step 6c are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Expected sequence for DSCH multi RAB test cases.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1..6 | <-- --> | | Paging | Use the CS paging procedure for testing of CS and combined CS/PS reference radio bearer configurations.<br><br>Use the PS paging procedure for testing of PS reference radio bearer configurations. |
| **Case A: CS or PS radio bearers only** | | | | |
| A7 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| A8 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| A9 | ← | | RADIO BEARER SETUP (DCCH) | RRC |
| A9 | ← | | RADIO BEARER SETUP (DCCH) | RRC |
| A10 | → | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **Case B: CS + PS radio bearers** | | | | |
| B7 | <-- | | PAGING TYPE 2 (DCCH) | TMSI (GSM-MAP)/ P-TMSI |
| B7a | --> | | SERVICE REQUEST (DCCH) | GMM |
| B7b | <-- | | SECURITY MODE COMMAND | RRC See note |
| B7c | --> | | SECURITY MODE COMPLETE | RRC See note |
| B8 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| B8a | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| B9 | ← | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured |
| B10 | → | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B10a | ← | | SECURITY MODE COMMAND | See Note |
| B10b | → | | SECURITY MODE COMPLETE | RRC |
| B10c | ← | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured |
| B10c | → | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 11 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-testHere the UL TFS are restricted to test the simultaneous data on CS and PS RAB. |
| 12 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 13 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 14a | <-- | | Test data (DTCH 1) and Test data on DTCH 2 | SS Sends the data on the CS RAB (DPCH).SS Sends the data on the PS RAB .(PDSCH)<br>(Note 1) |
| 14b | → | | Test data (DTCH 1) + Test Data (DTCH 2) | SS Receives the data on CS RAB, PS RAB |
| 14c | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 14d | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 15a | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test<br>Here the UL TFS are restricted to test the simultaneous data on CS and PS RAB and SRB |
| 15b | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 15c | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15d | <-- | | Test data (DTCH 1) and Test data on DTCH 2 | SS Sends the data on the CS RAB (DPCH). SS Sends the data on the PS RAB. (PDSCH)<br>(Note 1) |
| 15e | ← | | MEASUREMENT CONTROL (DCCH) | SS sends a MEASUREMENT CONTROL message simultaneously to the test data requesting periodic reporting at interval T2<br>(Note 1) |
| 15f | --><br><br>--> | | Test data (DTCH 1) + Test Data (DTCH 2)<br><br>MEASUREMENT REPORT (DCCH) | SS Receives the data on CS RAB, PS RAB and the Measurement Control Report.<br>SS Shall get at least on measurement Control report.message<br>(Note 1) |
| 16 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 17 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 18 | | | Repeat steps 11 to 17 for every sub-test. | |
| 19 | | | RB RELEASE (DCCH) | RRC<br>Optional step |
| 20 | <-- | | DEACTIVATE RB TEST MODE (DCCH) | TC<br>Optional step |
| 21 | --> | | DEACTIVATE RB TEST MODE COMPLETE (DCCH) | TC<br>Optional step |
| Note. | For case B (CS+PS radio bearers) the second security mode procedure is needed to enable testing of ciphering on the PS radio bearers. For the CS domain the security mode procedure is performed as part of the CS paging procedure. | | | |

NOTE 1:

Here using the test steps 11 to 14d, the simultaneous data on the CS and PS RAB can be tested.

And using the steps 15a to 15f, the simultaneous data on CS RAB, PS RAB and SRB can be tested.

For testing the simultaneous data on CS RAB, PS RAB and SRB, following procedure is used.

First data on the CS RAB is sent. Then in the next step Measurement Control message is sent.

In the Downlink the restricted transport format combination will be (1 1), that SS MAC has to send the data on CS RAB and the measurement control message on SRB simultaneously.

Here it is assumed that, since the transport format combination (1, 0) (that is send only data) will not be available in the DL, the MAC has to wait until it get something to transmit on the SRB.

Then data on the PS RAB is sent.

With this on the UE UL Side, the data will be available on both CS and PS RAB and also on the SRB. With this the transport format combination (1,1, 1) that is simultaneous data on RAB and SRB can be tested in the uplink.

Specific message contents

RADIO BEARER SETUP message: AM or UM (Packet to CELL_DCH from CELL_DCH in PS))

| Information Element | Value/remark | Version |
|---|---|---|
| New DSCH-RNTI | 0000 0000 0000 0010B | |
| RRC State indicator | CELL_DCH | |
| RAB information for setup | | |
| - RB mapping info | | |
| - Information for each multiplexing option | 1 RBMuxOptions | |
| - RLC logical channel mapping indicator | Not Present | |
| - Number of uplink RLC logical channels | 1 | |
| - Uplink transport channel type | DCH | |
| - UL Transport channel identity | 1 | |
| - Logical channel identity | Not Present | |
| - CHOICE RLC size list | Configured | |
| - MAC logical channel priority | 8 | |
| - Downlink RLC logical channel info | | |
| - Number of downlink RLC logical channels | 1 | |
| - Downlink transport channel type | DSCH | |
| - DL DCH Transport channel identity | Not Present | |
| - DL DSCH Transport channel identity | 19 | |
| - Logical channel identity | 1 | |
| Added or Reconfigured TrCH information list | 1 DCH added, 1 DCH reconfigured | |
| DL Transport channel information common for all transport channel | | |
| - SCCPCH TFCS | Not Present | |
| - CHOICE mode | FDD | |
| - CHOICE DL parameters | Explicit | |
| - DL DCH TFCS | | |
| - CHOICE TFCI signalling | Split | |
| - Split Type | Hard | |
| - Length of TFCI(field2) | 5 | |
| - TFCI Field 1 information | | |
| - CHOICE TFCS representation | Complete reconfiguration | |
| - TFCS complete reconfigure | | |
| - CHOICE CTFC Size | | |
| - CTFC information | This IE is repeated for TFC numbers and reference to TS34.108 clause 6.10.2.4 | |
| - CTFC | Reference to TS34.108 clause 6.10.2.4 Parameter Set | |
| - Power offset information | Not present | |
| - TFCI Field 2 information | | |
| - CHOICE *Signalling method* | Explicit | |
| - TFCS explicit configuration | | |
| - CHOICE TFCS representation | Complete reconfiguration | |
| - CTFC information | This IE is repeated for TFC numbers and reference to TS34.108 clause 6.10.2.4 | |
| - CTFC | Reference to TS34.108 clause 6.10.2.4 Parameter Set | |
| - Power offset information | Not present | |
| Deleted TrCH information list | Not Present | |
| Added or Reconfigured TrCH information list | | |
| - Added or Reconfigured DL TrCH information | | |
| - Downlink transport channel type | DSCH | |
| - DL Transport channel identity | 19 | |
| - CHOICE DL parameters | Explicit | |
| - TFS | | |
| - CHOICE Transport channel type | Dedicated transport channels | |
| - Dynamic Transport format information | | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) | |
| - Transmission Time Interval | Not Present | |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Semi-static Transport Format information | | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 | |

| Information Element | Value/remark | Version |
|---|---|---|
| | Parameter Set | |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DCH quality target | Not Present | |
| - Downlink transport channel type | DCH | |
| - DL Transport channel identity | 10 | |
| - CHOICE DL parameters | Same as UL | |
| - Uplink transport channel type | DCH | |
| - UL TrCH identity | 5 | |
| - DCH quality target | | |
| - BLER Quality value | -2.0 | |
| CHOICE channel requirement | Uplink DPCH info | |
| - Uplink DPCH power control info | | |
| - DPCCH power offset | -80dB | |
| - PC Preamble | 1 frame | |
| - SRB delay | 7 frames | |
| - Power Control Algorithm | Algorithm1 | |
| - TPC step size | 1dB | |
| - Scrambling code type | Long | |
| - Scrambling code number | 0 (0 to 16777215) | |
| - Number of DPDCH | Not Present(1) | |
| - spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Number of FBI bit | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Puncturing Limit | Reference to TS34.108 clause 6.10 Parameter Set | |
| CHOICE Mode | FDD | |
| - Downlink PDSCH information | | |
| - PDSCH with SHO DCH Info | Not Present | |
| - PDSCH code mapping | | |
| - DL Scrambling Code | Primary scrambling code | |
| - Choice *signalling method* | Explicit | |
| - PDSCH code info | This IE is repeated for TFC numbers and reference to TS34.108 clause 6.10.2.4 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Reference to TS34.108 clause 6.10 Parameter Set | |
| - multi-code info | 1 | |
| Downlink information common for all radio links | | |
| - Downlink DPCH info common for all RL | | |
| - Timing indicator | Maintain | |
| - CFN-targetSFN frame offset | Not Present | |
| - Downlink DPCH power control information | | |
| - DPC mode | 0 (single) | |
| - CHOICE mode | FDD | |
| - Power offset $P_{Pilot\text{-}DPDCH}$ | 0 | |
| - DL rate matching restriction information | Not Present | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Fixed or Flexible Position | Reference to TS34.108 clause 6.10 Parameter Set | |
| - TFCI existence | Reference to TS34.108 clause 6.10 Parameter Set | |
| - CHOICE SF | Reference to TS34.108 clause 6.10 Parameter Set | |
| - DPCH compressed mode info | Not Present | |
| - TX Diversity mode | None | |

| Information Element | Value/remark | Version |
|---|---|---|
| - SSDT information | Not Present | R99 and Rel-4 only |
| - Default DPCH Offset Value | Not Present | |
| Downlink information for each radio link list | | |
| - Downlink information for each radio link | | |
| - Choice mode | FDD | |
| - Primary CPICH info | | |
| - Primary scrambling code | Reference to clause 6.1 "Default settings (FDD)" | |
| - PDSCH with SHO DCH info | Not Present | |
| - PDSCH code mapping | | |
| - DL Scrambling Code | Primary scrambling code | |
| - Choice *signalling method* | Explicit | |
| - PDSCH code info | This IE is repeated for TFC numbers and reference to TS34.108 clause 6.10.2.4 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | Reference to TS34.108 clause 6.10 Parameter Set | |
| - multi-code info | 1 | |
| - Downlink DPCH info for each RL | | |
| - Primary CPICH usage for channel estimation | Primary CPICH may be used | |
| - DPCH frame offset | Set to value Default DPCH Offset Value (as currently stored in SS) mod 38400 | |
| - Secondary CPICH info | Not Present | |
| - DL channelisation code | | |
| - Secondary scrambling code | 1 | |
| - Spreading factor | Reference to TS34.108 clause 6.10 Parameter Set | |
| - Code number | 0 | |
| - Scrambling code change | No change | |
| - TPC combination index | 0 | |
| - SSDT Cell Identity | Not Present | R99 and Rel-4 only |
| - Closed loop timing adjustment mode | Not Present | |
| - SCCPCH information for FACH | Not Present | |

## 14.1.3 General information interoperability radio bearer tests for HS-DSCH

### 14.1.3.1 HS-DSCH radio bearer test parameters

In the radio bearer tests on radio bearers mapped on HS-DSCH, the following UE specific parameters should be used.

**Table 14.1.3.1.1: FDD HS-DSCH physical layer parameters for FDD HS-DSCH physical layer categories**

| HS-DSCH category | Maximum number of HS-DSCH codes received | Minimum inter-TTI interval | Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI NOTE 1 | Total number of soft channel bits | Supported modulations without MIMO operation | Supported modulations simultaneous with MIMO operation |
|---|---|---|---|---|---|---|
| Category 1 | 5 | 3 | 7298 | 19200 | QPSK, 16QAM | Not applicable (MIMO not supported) |
| Category 2 | 5 | 3 | 7298 | 28800 | | |
| Category 3 | 5 | 2 | 7298 | 28800 | | |
| Category 4 | 5 | 2 | 7298 | 38400 | | |
| Category 5 | 5 | 1 | 7298 | 57600 | | |
| Category 6 | 5 | 1 | 7298 | 67200 | | |
| Category 7 | 10 | 1 | 14411 | 115200 | | |
| Category 8 | 10 | 1 | 14411 | 134400 | | |
| Category 9 | 15 | 1 | 20251 | 172800 | | |
| Category 10 | 15 | 1 | 27952 | 172800 | | |
| Category 11 | 5 | 2 | 3630 | 14400 | QPSK | |

| HS-DSCH category | Maximum number of HS-DSCH codes received | Minimum inter-TTI interval | Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI NOTE 1 | Total number of soft channel bits | Supported modulations without MIMO operation | Supported modulations simultaneous with MIMO operation |
|---|---|---|---|---|---|---|
| Category 12 | 5 | 1 | 3630 | 28800 | | |
| Category 13 | 15 | 1 | 35280 | 259200 | QPSK, 16QAM, 64QAM | |
| Category 14 | 15 | 1 | 42192 | 259200 | | |
| Category 15 | 15 | 1 | 23370 | 345600 | QPSK, 16QAM | |
| Category 16 | 15 | 1 | 27952 | 345600 | | |
| Category 17 NOTE 2 | 15 | 1 | 35280 | 259200 | QPSK, 16QAM, 64QAM | – |
| | | | 23370 | 345600 | – | QPSK, 16QAM |
| Category 18 NOTE 3 | 15 | 1 | 42192 | 259200 | QPSK, 16QAM, 64QAM | – |
| | | | 27952 | 345600 | – | QPSK, 16QAM |

NOTE 1: Depending on the HS-DSCH configuration, the indicated maximum number of bits of an HS-DSCH transport block does not have to correspond exactly to an entry in the transport block size table to be applied [9].

NOTE 2: A UE of category 17 supports the physical capabilities of categories 13 and 15, but not simultaneously. The first row of category 17 in table 5.1a specifies the capabilities when MIMO is not configured and the capabilities of category 13 apply, the second row specifies the capabilities when MIMO is configured and the capabilities of category 15 apply.

NOTE 3: A UE of category 18 supports the physical capabilities of categories 14 and 16, but not simultaneously. The first row of category 18 in table 5.1a specifies the capabilities when MIMO is not configured and the capabilities of category 14 apply, the second row specifies the capabilities when MIMO is configured and the capabilities of category 16 apply.

### 14.1.3.2 Selecting TFRC test points

#### 14.1.3.2.1 Principle for non-enhanced Layer 2

The transport format and resource combination (TFRC) is identified by the UE by the type of modulation, number of channalisation codes and the transport format and resource identifier (TFRI) signalled on the HS-SCCH.

For the HSDPA radio bearer test cases the principle for selecting typical test points for TFRC is:

1. Select one TFRC per modulation scheme and number of MAC-d PDUs.
2. For each number of MAC-d PDUs select the TFRC minimizing padding.
3. Any TFRC that would cause turbo coder irregularities should be avoided.

The problem with turbo coder regularities appears at certain coding rates. The coding rate for a certain TFCR is:

$Coding_rate = (TB_{size} + N_{CRC}) / (N_{codes} \cdot N_{phy_bits})$, where

$TB_{size}$ is the selected transport block,

$N_{CRC}$ is the number of CRC bits,

$N_{codes}$ is the number of channelistion codes, and

$N_{phy_bits}$ is the number physical bits per code (960 for QPSK and 1920 for 16QAM).

Table 14.1.3.2.1 lists the coding rates that cause turbo coder irregularities. In case a candidate TFRC value is causing turbo coder irregularities then the closest higher TFRI value, which do not cause any turbo coder irregularities, is selected.

**Table 14.1.3.2.1: Coding rates causing degradation due to turbo coder irregularities**

| Coding rate | Comment |
|---|---|
| 0.77-0.79 | Cause loss up to 3.5 dB |
| 0.835-0.84 | Cause loss up to 1.5 dB |
| 0.871-0.878 | Cause loss up to 2 dB |
| 0.91-0.914 | Cause loss up to 2 dB |

NOTE The coding rates in Table 14.2.3.2.1 is based on the simulations as described in RAN WG1 document R1-030444 (Turbo-coding and puncturing interactions on HS-DSCH in R5 HSDPA)

The selection algorithm for the TFRC test points for a certain UE category and MAC-d PDU size is:

1. Set the number of MAC-d PDUs, N_PDU, to 1
2. Calculate the minimum transport block size to fit the number of MAC-d PDUs.
3. If the transport block size is less or equal to the UE capability for "Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI" in Table 14.1.3.1.1 then continue with step 4 else there is no more testing points.
4. Select the QPSK test point:
   If it, for the actual UE category and for the selected transport block size, exists a TFRI for QPSK then select the TFRI that maximises the number of codes.
5. Select the 16QAM test point:
   If it, for the actual UE category and for the selected transport block size, exists a TFRI for 16QAM then select the TFRI that maximises the number of codes.
6. Check that the coding rate for the selected TFRC does not cause turbo coder irregularities, see Table 14.1.3.2.1. If the coding rate is ok then accept the testing point and continue with step 8 else continue with step 7.
7. If the coding rate is not ok then select the next higher TFRI value that corresponds to an acceptable coding rate. Calculate the transport block size correspondent to the modified TFRI values and if it is less or equal to the UE capability for "Maximum number of bits of an HS-DSCH transport block received within an HS-DSCH TTI" in Table 14.1.3.1.1 then accept the testing point else skip it.
8. Increment N_PDUs. If N_PDU is less or equal to 70 then repeat from step 2 else there is no more testing points.

### 14.1.3.2.1a Principle for enhanced Layer 2

For the combination of MAC-ehs and Fixed RLC then the same principle to select test points as for the non-enhanced Layer 2 case as described in sub-clause 14.1.3.2.1 is used (MAC-d PDU size 336 and 656 bits).

For the combination of MAC-ehs and Flexible RLC then the same TFRI test points as for the fixed MAC-d PDU size=656 bits case are used.

### 14.1.3.3 TFRC test points for MAC-d PDU size=336

**Table 14.1.3.3.1: TFRC test points for UE category 1 to UE category 6 for MAC-d PDU size=336**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 365 | QPSK | 1 | 19 | |
| 2 | 699 | QPSK | 2 | 8 | |
| 2 | 699 | 16QAM | 1 | 8 | |
| 3 | 1036 | QPSK | 3 | 7 | |
| 3 | 1036 | 16QAM | 1 | 30 | |
| 4 | 1380 | QPSK | 4 | 7 | |
| 4 | 1380 | 16QAM | 2 | 7 | |
| 5 | 1711 | QPSK | 5 | 6 | |
| 5 | 1711 | 16QAM | 2 | 19 | |
| 6 | 2046 | QPSK | 5 | 16 | |
| 6 | 2046 | 16QAM | 3 | 6 | |
| 7 | 2404 | QPSK | 5 | 25 | |
| 7 | 2404 | 16QAM | 3 | 15 | |
| 8 | 2726 | QPSK | 5 | 32 | |
| 8 | 2726 | 16QAM | 4 | 6 | |
| 9 | 3090 | QPSK | 5 | 39 | |
| 9 | 3090 | 16QAM | 5 | 0 | |
| 10 | 3440 | QPSK | 5 | 45 | |
| 10 | 3440 | 16QAM | 5 | 6 | |
| 11 | 3830 | QPSK | 5 | 51 | TFRI = 50 would have minimised padding but is not acceptable as the coding rate (0.78875) would have given 3.5 dB due to turbo coder irregularities. TFRI=51 is selected. |
| 11 | 3762 | 16QAM | 5 | 11 | |
| 12 | 4115 | QPSK | 5 | 55 | |
| 12 | 4115 | 16QAM | 5 | 16 | |
| 13 | 4420 | QPSK | 5 | 59 | |
| 13 | 4420 | 16QAM | 5 | 20 | |
| 14 | 4748 | 16QAM | 5 | 24 | |
| 15 | 5101 | 16QAM | 5 | 28 | |
| 16 | 5480 | 16QAM | 5 | 32 | |
| 17 | 5782 | 16QAM | 5 | 35 | |
| 18 | 6101 | 16QAM | 5 | 38 | |
| 19 | 6438 | 16QAM | 5 | 41 | |
| 20 | 6793 | 16QAM | 5 | 44 | |
| 21 | 7168 | 16QAM | 5 | 47 | |

**Table 14.1.3.3.2: TFRC test points for UE category 7 and UE category 8 for MAC-d PDU size=336**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 365 | QPSK | 1 | 19 | |
| 2 | 699 | QPSK | 2 | 8 | |
| 2 | 699 | 16QAM | 1 | 8 | |
| 3 | 1036 | QPSK | 3 | 7 | |
| 3 | 1036 | 16QAM | 1 | 30 | |
| 4 | 1380 | QPSK | 4 | 7 | |
| 4 | 1380 | 16QAM | 2 | 7 | |
| 5 | 1711 | QPSK | 5 | 6 | |
| 5 | 1711 | 16QAM | 2 | 19 | |
| 6 | 2046 | QPSK | 6 | 6 | |
| 6 | 2046 | 16QAM | 3 | 6 | |
| 7 | 2404 | QPSK | 7 | 6 | |
| 7 | 2404 | 16QAM | 3 | 15 | |
| 8 | 2726 | QPSK | 8 | 6 | |
| 8 | 2726 | 16QAM | 4 | 6 | |
| 9 | 3090 | QPSK | 10 | 0 | |
| 9 | 3090 | 16QAM | 5 | 0 | |
| 10 | 3440 | QPSK | 10 | 6 | |
| 10 | 3440 | 16QAM | 5 | 6 | |
| 11 | 3762 | QPSK | 10 | 11 | |
| 11 | 3762 | 16QAM | 6 | 1 | |
| 12 | 4115 | QPSK | 10 | 16 | |
| 12 | 4115 | 16QAM | 6 | 6 | |
| 13 | 4420 | QPSK | 10 | 20 | |
| 13 | 4420 | 16QAM | 7 | 1 | |
| 14 | 4748 | QPSK | 10 | 24 | |
| 14 | 4748 | 16QAM | 7 | 5 | |
| 15 | 5101 | QPSK | 10 | 28 | |
| 15 | 5101 | 16QAM | 8 | 2 | |
| 16 | 5480 | QPSK | 10 | 32 | |
| 16 | 5480 | 16QAM | 8 | 6 | |
| 17 | 5782 | QPSK | 10 | 35 | |
| 17 | 5782 | 16QAM | 9 | 2 | |
| 18 | 6101 | QPSK | 10 | 38 | |
| 18 | 6101 | 16QAM | 10 | 0 | |
| 19 | 6438 | QPSK | 10 | 41 | |
| 19 | 6438 | 16QAM | 10 | 3 | |
| 20 | 6793 | QPSK | 10 | 44 | |
| 20 | 6793 | 16QAM | 10 | 6 | |
| 21 | 7168 | QPSK | 10 | 47 | |
| 21 | 7168 | 16QAM | 10 | 9 | |
| 22 | 7564 | QPSK | 10 | 50 | TFRI = 49 would have minimised padding but is not acceptable as the coding rate (0.7765) would have given 3.5 dB due to turbo coder irregularities. TFRI=50 is selected. |
| 22 | 7430 | 16QAM | 10 | 11 | |

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 23 | 7981 | QPSK | 10 | 52 | |
| 23 | 7840 | 16QAM | 10 | 14 | |
| 24 | 8125 | QPSK | 10 | 54 | |
| 24 | 8125 | 16QAM | 10 | 16 | |
| 25 | 8422 | QPSK | 10 | 56 | |
| 25 | 8422 | 16QAM | 10 | 18 | |
| 26 | 8886 | QPSK | 10 | 59 | |
| 26 | 8886 | 16QAM | 10 | 21 | |
| 27 | 9210 | QPSK | 10 | 61 | |
| 27 | 9210 | 16QAM | 10 | 23 | |
| 28 | 9546 | 16QAM | 10 | 25 | |
| 29 | 9894 | 16QAM | 10 | 27 | |
| 30 | 10255 | 16QAM | 10 | 29 | |
| 31 | 10440 | 16QAM | 10 | 30 | |
| 32 | 10821 | 16QAM | 10 | 32 | |
| 33 | 11216 | 16QAM | 10 | 34 | |
| 34 | 11625 | 16QAM | 10 | 36 | |
| 35 | 11835 | 16QAM | 10 | 37 | |
| 36 | 12266 | 16QAM | 10 | 39 | |
| 37 | 12488 | 16QAM | 10 | 40 | |
| 38 | 12943 | 16QAM | 10 | 42 | |
| 39 | 13177 | 16QAM | 10 | 43 | |
| 40 | 13657 | 16QAM | 10 | 45 | |
| 41 | 13904 | 16QAM | 10 | 46 | |
| 42 | 14155 | 16QAM | 10 | 47 | |

**Table 14.1.3.3.3: TFRC test points for UE category 9 for MAC-d PDU size=336**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 365 | QPSK | 1 | 19 | |
| 2 | 699 | QPSK | 2 | 8 | |
| 2 | 699 | 16QAM | 1 | 8 | |
| 3 | 1036 | QPSK | 3 | 7 | |
| 3 | 1036 | 16QAM | 1 | 30 | |
| 4 | 1380 | QPSK | 4 | 7 | |
| 4 | 1380 | 16QAM | 2 | 7 | |
| 5 | 1711 | QPSK | 5 | 6 | |
| 5 | 1711 | 16QAM | 2 | 19 | |
| 6 | 2046 | QPSK | 6 | 6 | |
| 6 | 2046 | 16QAM | 3 | 6 | |
| 7 | 2404 | QPSK | 7 | 6 | |
| 7 | 2404 | 16QAM | 3 | 15 | |
| 8 | 2726 | QPSK | 8 | 6 | |
| 8 | 2726 | 16QAM | 4 | 6 | |
| 9 | 3090 | QPSK | 10 | 0 | |
| 9 | 3090 | 16QAM | 5 | 0 | |
| 10 | 3440 | QPSK | 11 | 1 | |
| 10 | 3440 | 16QAM | 5 | 6 | |
| 11 | 3762 | QPSK | 12 | 1 | |
| 11 | 3762 | 16QAM | 6 | 1 | |
| 12 | 4115 | QPSK | 13 | 2 | |
| 12 | 4115 | 16QAM | 6 | 6 | |
| 13 | 4420 | QPSK | 14 | 1 | |
| 13 | 4420 | 16QAM | 7 | 1 | |
| 14 | 4748 | QPSK | 15 | 2 | |
| 14 | 4748 | 16QAM | 7 | 5 | |
| 15 | 5101 | QPSK | 15 | 6 | |
| 15 | 5101 | 16QAM | 8 | 2 | |
| 16 | 5480 | QPSK | 15 | 10 | |
| 16 | 5480 | 16QAM | 8 | 6 | |
| 17 | 5782 | QPSK | 15 | 13 | |
| 17 | 5782 | 16QAM | 9 | 2 | |
| 18 | 6101 | QPSK | 15 | 16 | |
| 18 | 6101 | 16QAM | 10 | 0 | |
| 19 | 6438 | QPSK | 15 | 19 | |
| 19 | 6438 | 16QAM | 10 | 3 | |
| 20 | 6793 | QPSK | 15 | 22 | |
| 20 | 6793 | 16QAM | 11 | 0 | |
| 21 | 7168 | QPSK | 15 | 25 | |
| 21 | 7168 | 16QAM | 11 | 3 | |
| 22 | 7430 | QPSK | 15 | 27 | |
| 22 | 7430 | 16QAM | 12 | 0 | |
| 23 | 7840 | QPSK | 15 | 30 | |
| 23 | 7840 | 16QAM | 12 | 3 | |
| 24 | 8125 | QPSK | 15 | 32 | |
| 24 | 8125 | 16QAM | 13 | 1 | |
| 25 | 8422 | QPSK | 15 | 34 | |

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 25 | 8422 | 16QAM | 13 | 3 | |
| 26 | 8886 | QPSK | 15 | 37 | |
| 26 | 8886 | 16QAM | 14 | 2 | |
| 27 | 9210 | QPSK | 15 | 39 | |
| 27 | 9210 | 16QAM | 15 | 0 | |
| 28 | 9546 | QPSK | 15 | 41 | |
| 28 | 9546 | 16QAM | 15 | 2 | |
| 29 | 9894 | QPSK | 15 | 43 | |
| 29 | 9894 | 16QAM | 15 | 4 | |
| 30 | 10255 | QPSK | 15 | 45 | |
| 30 | 10255 | 16QAM | 15 | 6 | |
| 31 | 10440 | QPSK | 15 | 46 | |
| 31 | 10440 | 16QAM | 15 | 7 | |
| 32 | 10821 | QPSK | 15 | 48 | |
| 32 | 10821 | 16QAM | 15 | 9 | |
| 33 | 11418 | QPSK | 15 | 51 | TFRI = 50 would have minimised padding but is not acceptable as the coding rate (0.78056) would have given 3.5 dB due to turbo coder irregularities. TFRI=51 is selected. |
| 33 | 11216 | 16QAM | 15 | 11 | |
| 34 | 11625 | QPSK | 15 | 52 | |
| 34 | 11625 | 16QAM | 15 | 13 | |
| 35 | 11835 | QPSK | 15 | 53 | |
| 35 | 11835 | 16QAM | 15 | 14 | |
| 36 | 12266 | QPSK | 15 | 55 | |
| 36 | 12266 | 16QAM | 15 | 16 | |
| 37 | 12488 | QPSK | 15 | 56 | |
| 37 | 12488 | 16QAM | 15 | 17 | |
| 38 | 12943 | QPSK | 15 | 58 | |
| 38 | 12943 | 16QAM | 15 | 19 | |
| 39 | 13177 | QPSK | 15 | 59 | |
| 39 | 13177 | 16QAM | 15 | 20 | |
| 40 | 13657 | QPSK | 15 | 61 | |
| 40 | 13657 | 16QAM | 15 | 22 | |
| 41 | 13904 | QPSK | 15 | 62 | |
| 41 | 13904 | 16QAM | 15 | 23 | |
| 42 | 14155 | 16QAM | 15 | 24 | |
| 43 | 14671 | 16QAM | 15 | 26 | |
| 44 | 14936 | 16QAM | 15 | 27 | |
| 45 | 15206 | 16QAM | 15 | 28 | |
| 46 | 15481 | 16QAM | 15 | 29 | |
| 47 | 16045 | 16QAM | 15 | 31 | |
| 48 | 16335 | 16QAM | 15 | 32 | |
| 49 | 16630 | 16QAM | 15 | 33 | |
| 50 | 16931 | 16QAM | 15 | 34 | |
| 51 | 17237 | 16QAM | 15 | 35 | |
| 52 | 17548 | 16QAM | 15 | 36 | |
| 53 | 17865 | 16QAM | 15 | 37 | |
| 54 | 18188 | 16QAM | 15 | 38 | |

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 55 | 18517 | 16QAM | 15 | 39 | |
| 56 | 18851 | 16QAM | 15 | 40 | |
| 57 | 19192 | 16QAM | 15 | 41 | |
| 58 | 19538 | 16QAM | 15 | 42 | |
| 59 | 19891 | 16QAM | 15 | 43 | |
| 60 | 20251 | 16QAM | 15 | 44 | |

**Table 14.1.3.3.4: TFRC test points for UE category 10 for MAC-d PDU size=336**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 365 | QPSK | 1 | 19 | |
| 2 | 699 | QPSK | 2 | 8 | |
| 2 | 699 | 16QAM | 1 | 8 | |
| 3 | 1036 | QPSK | 3 | 7 | |
| 3 | 1036 | 16QAM | 1 | 30 | |
| 4 | 1380 | QPSK | 4 | 7 | |
| 4 | 1380 | 16QAM | 2 | 7 | |
| 5 | 1711 | QPSK | 5 | 6 | |
| 5 | 1711 | 16QAM | 2 | 19 | |
| 6 | 2046 | QPSK | 6 | 6 | |
| 6 | 2046 | 16QAM | 3 | 6 | |
| 7 | 2404 | QPSK | 7 | 6 | |
| 7 | 2404 | 16QAM | 3 | 15 | |
| 8 | 2726 | QPSK | 8 | 6 | |
| 8 | 2726 | 16QAM | 4 | 6 | |
| 9 | 3090 | QPSK | 10 | 0 | |
| 9 | 3090 | 16QAM | 5 | 0 | |
| 10 | 3440 | QPSK | 11 | 1 | |
| 10 | 3440 | 16QAM | 5 | 6 | |
| 11 | 3762 | QPSK | 12 | 1 | |
| 11 | 3762 | 16QAM | 6 | 1 | |
| 12 | 4115 | QPSK | 13 | 2 | |
| 12 | 4115 | 16QAM | 6 | 6 | |
| 13 | 4420 | QPSK | 14 | 1 | |
| 13 | 4420 | 16QAM | 7 | 1 | |
| 14 | 4748 | QPSK | 15 | 2 | |
| 14 | 4748 | 16QAM | 7 | 5 | |
| 15 | 5101 | QPSK | 15 | 6 | |
| 15 | 5101 | 16QAM | 8 | 2 | |
| 16 | 5480 | QPSK | 15 | 10 | |
| 16 | 5480 | 16QAM | 8 | 6 | |
| 17 | 5782 | QPSK | 15 | 13 | |
| 17 | 5782 | 16QAM | 9 | 2 | |
| 18 | 6101 | QPSK | 15 | 16 | |
| 18 | 6101 | 16QAM | 10 | 0 | |
| 19 | 6438 | QPSK | 15 | 19 | |
| 19 | 6438 | 16QAM | 10 | 3 | |
| 20 | 6793 | QPSK | 15 | 22 | |
| 20 | 6793 | 16QAM | 11 | 0 | |
| 21 | 7168 | QPSK | 15 | 25 | |
| 21 | 7168 | 16QAM | 11 | 3 | |
| 22 | 7430 | QPSK | 15 | 27 | |
| 22 | 7430 | 16QAM | 12 | 0 | |
| 23 | 7840 | QPSK | 15 | 30 | |
| 23 | 7840 | 16QAM | 12 | 3 | |
| 24 | 8125 | QPSK | 15 | 32 | |
| 24 | 8125 | 16QAM | 13 | 1 | |
| 25 | 8422 | QPSK | 15 | 34 | |

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 25 | 8422 | 16QAM | 13 | 3 | |
| 26 | 8886 | QPSK | 15 | 37 | |
| 26 | 8886 | 16QAM | 14 | 2 | |
| 27 | 9210 | QPSK | 15 | 39 | |
| 27 | 9210 | 16QAM | 15 | 0 | |
| 28 | 9546 | QPSK | 15 | 41 | |
| 28 | 9546 | 16QAM | 15 | 2 | |
| 29 | 9894 | QPSK | 15 | 43 | |
| 29 | 9894 | 16QAM | 15 | 4 | |
| 30 | 10255 | QPSK | 15 | 45 | |
| 30 | 10255 | 16QAM | 15 | 6 | |
| 31 | 10440 | QPSK | 15 | 46 | |
| 31 | 10440 | 16QAM | 15 | 7 | |
| 32 | 10821 | QPSK | 15 | 48 | |
| 32 | 10821 | 16QAM | 15 | 9 | |
| 33 | 11418 | QPSK | 15 | 51 | TFRI = 50 would have minimised padding but is not acceptable as the coding rate (0.78056) would have given 3.5 dB due to turbo coder irregularities. TFRI=51 is selected. |
| 33 | 11216 | 16QAM | 15 | 11 | |
| 34 | 11625 | QPSK | 15 | 52 | |
| 34 | 11625 | 16QAM | 15 | 13 | |
| 35 | 11835 | QPSK | 15 | 53 | |
| 35 | 11835 | 16QAM | 15 | 14 | |
| 36 | 12266 | QPSK | 15 | 55 | |
| 36 | 12266 | 16QAM | 15 | 16 | |
| 37 | 12488 | QPSK | 15 | 56 | |
| 37 | 12488 | 16QAM | 15 | 17 | |
| 38 | 12943 | QPSK | 15 | 58 | |
| 38 | 12943 | 16QAM | 15 | 19 | |
| 39 | 13177 | QPSK | 15 | 59 | |
| 39 | 13177 | 16QAM | 15 | 20 | |
| 40 | 13657 | QPSK | 15 | 61 | |
| 40 | 13657 | 16QAM | 15 | 22 | |
| 41 | 13904 | QPSK | 15 | 62 | |
| 41 | 13904 | 16QAM | 15 | 23 | |
| 42 | 14155 | 16QAM | 15 | 24 | |
| 43 | 14671 | 16QAM | 15 | 26 | |
| 44 | 14936 | 16QAM | 15 | 27 | |
| 45 | 15206 | 16QAM | 15 | 28 | |
| 46 | 15481 | 16QAM | 15 | 29 | |
| 47 | 16045 | 16QAM | 15 | 31 | |
| 48 | 16335 | 16QAM | 15 | 32 | |
| 49 | 16630 | 16QAM | 15 | 33 | |
| 50 | 16931 | 16QAM | 15 | 34 | |
| 51 | 17237 | 16QAM | 15 | 35 | |
| 52 | 17548 | 16QAM | 15 | 36 | |
| 53 | 17865 | 16QAM | 15 | 37 | |
| 54 | 18188 | 16QAM | 15 | 38 | |

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 55 | 18517 | 16QAM | 15 | 39 | |
| 56 | 18851 | 16QAM | 15 | 40 | |
| 57 | 19192 | 16QAM | 15 | 41 | |
| 58 | 19538 | 16QAM | 15 | 42 | |
| 59 | 19891 | 16QAM | 15 | 43 | |
| 60 | 20251 | 16QAM | 15 | 44 | |
| 61 | 20617 | 16QAM | 15 | 45 | |
| 62 | 20989 | 16QAM | 15 | 46 | |
| 63 | 21368 | 16QAM | 15 | 47 | |
| 64 | 21754 | 16QAM | 15 | 48 | |
| 65 | 22147 | 16QAM | 15 | 49 | |
| 66 | 22955 | 16QAM | 15 | 51 | TFRI = 50 would have minimised padding but is not acceptable as the coding rate (0.78375) would have given 3.5 dB due to turbo coder irregularities. TFRI=51 is selected. |
| 67 | 22955 | 16QAM | 15 | 51 | TFRI = 50 would have minimised padding but is not acceptable as the coding rate (0.78375) would have given 3.5 dB due to turbo coder irregularities. TFRI=51 is selected. |
| 68 | 22955 | 16QAM | 15 | 51 | |
| 69 | 23370 | 16QAM | 15 | 52 | |
| 70 | 23792 | 16QAM | 15 | 53 | |

**Table 14.1.3.3.5: TFRC test points for UE category 11 and UE category 12 for MAC-d PDU size=336**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 365 | QPSK | 1 | 19 | |
| 2 | 699 | QPSK | 2 | 8 | |
| 3 | 1036 | QPSK | 3 | 7 | |
| 4 | 1380 | QPSK | 4 | 7 | |
| 5 | 1711 | QPSK | 5 | 6 | |
| 6 | 2046 | QPSK | 5 | 16 | |
| 7 | 2404 | QPSK | 5 | 25 | |
| 8 | 2726 | QPSK | 5 | 32 | |
| 9 | 3090 | QPSK | 5 | 39 | |
| 10 | 3440 | QPSK | 5 | 45 | |

### 14.1.3.4 TFRC test points for MAC-d PDU size=656

**Table 14.1.3.4.1: TFRC test points for UE category 1 to UE category 6 for MAC-d PDU size=656**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 686 | QPSK | 2 | 7 | |
| 1 | 686 | 16QAM | 1 | 7 | |
| 2 | 1356 | QPSK | 4 | 6 | |
| 2 | 1356 | 16QAM | 2 | 6 | |
| 3 | 2010 | QPSK | 5 | 15 | |
| 3 | 2010 | 16QAM | 3 | 5 | |
| 4 | 2677 | QPSK | 5 | 31 | |
| 4 | 2677 | 16QAM | 4 | 5 | |
| 5 | 3319 | QPSK | 5 | 43 | |
| 5 | 3319 | 16QAM | 5 | 4 | |
| 6 | 3970 | QPSK | 5 | 53 | |
| 6 | 3970 | 16QAM | 5 | 14 | |
| 7 | 4664 | QPSK | 5 | 62 | |
| 7 | 4664 | 16QAM | 5 | 23 | |
| 8 | 5287 | 16QAM | 5 | 30 | |
| 9 | 5993 | 16QAM | 5 | 37 | |
| 10 | 6673 | 16QAM | 5 | 43 | |
| 11 | 7298 | 16QAM | 5 | 48 | |

**Table 14.1.3.4.2: TFRC test points for UE category 7 and UE category 8 for MAC-d PDU size=656**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 686 | QPSK | 2 | 7 | |
| 1 | 686 | 16QAM | 1 | 7 | |
| 2 | 1356 | QPSK | 4 | 6 | |
| 2 | 1356 | 16QAM | 2 | 6 | |
| 3 | 2010 | QPSK | 6 | 5 | |
| 3 | 2010 | 16QAM | 3 | 5 | |
| 4 | 2677 | QPSK | 8 | 5 | |
| 4 | 2677 | 16QAM | 4 | 5 | |
| 5 | 3319 | QPSK | 10 | 4 | |
| 5 | 3319 | 16QAM | 5 | 4 | |
| 6 | 3970 | QPSK | 10 | 14 | |
| 6 | 3970 | 16QAM | 6 | 4 | |
| 7 | 4664 | QPSK | 10 | 23 | |
| 7 | 4664 | 16QAM | 7 | 4 | |
| 8 | 5287 | QPSK | 10 | 30 | |
| 8 | 5287 | 16QAM | 8 | 4 | |
| 9 | 5993 | QPSK | 10 | 37 | |
| 9 | 5993 | 16QAM | 9 | 4 | |
| 10 | 6673 | QPSK | 10 | 43 | |
| 10 | 6673 | 16QAM | 10 | 5 | |
| 11 | 7298 | QPSK | 10 | 48 | |
| 11 | 7298 | 16QAM | 10 | 10 | |
| 12 | 7981 | QPSK | 10 | 53 | |
| 12 | 7981 | 16QAM | 10 | 15 | |
| 13 | 8574 | QPSK | 10 | 57 | |
| 13 | 8574 | 16QAM | 10 | 19 | |
| 14 | 9210 | QPSK | 10 | 61 | |
| 14 | 9210 | 16QAM | 10 | 23 | |
| 15 | 9894 | 16QAM | 10 | 27 | |
| 16 | 10629 | 16QAM | 10 | 31 | |
| 17 | 11216 | 16QAM | 10 | 34 | |
| 18 | 11835 | 16QAM | 10 | 37 | |
| 19 | 12488 | 16QAM | 10 | 40 | |
| 20 | 13177 | 16QAM | 10 | 43 | |
| 21 | 13904 | 16QAM | 10 | 46 | |

**Table 14.1.3.4.3: TFRC test points for UE category 9 for MAC-d PDU size=656**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 686 | QPSK | 2 | 7 | |
| 1 | 686 | 16QAM | 1 | 7 | |
| 2 | 1356 | QPSK | 4 | 6 | |
| 2 | 1356 | 16QAM | 2 | 6 | |
| 3 | 2010 | QPSK | 6 | 5 | |
| 3 | 2010 | 16QAM | 3 | 5 | |
| 4 | 2677 | QPSK | 8 | 5 | |
| 4 | 2677 | 16QAM | 4 | 5 | |
| 5 | 3319 | QPSK | 10 | 4 | |
| 5 | 3319 | 16QAM | 5 | 4 | |
| 6 | 3970 | QPSK | 13 | 0 | |
| 6 | 3970 | 16QAM | 6 | 4 | |
| 7 | 4664 | QPSK | 15 | 1 | |
| 7 | 4664 | 16QAM | 7 | 4 | |
| 8 | 5287 | QPSK | 15 | 8 | |
| 8 | 5287 | 16QAM | 8 | 4 | |
| 9 | 5993 | QPSK | 15 | 15 | |
| 9 | 5993 | 16QAM | 9 | 4 | |
| 10 | 6673 | QPSK | 15 | 21 | |
| 10 | 6673 | 16QAM | 10 | 5 | |
| 11 | 7298 | QPSK | 15 | 26 | |
| 11 | 7298 | 16QAM | 11 | 4 | |
| 12 | 7981 | QPSK | 15 | 31 | |
| 12 | 7981 | 16QAM | 13 | 0 | |
| 13 | 8574 | QPSK | 15 | 35 | |
| 13 | 8574 | 16QAM | 14 | 0 | |
| 14 | 9210 | QPSK | 15 | 39 | |
| 14 | 9210 | 16QAM | 15 | 0 | |
| 15 | 9894 | QPSK | 15 | 43 | |
| 15 | 9894 | 16QAM | 15 | 4 | |
| 16 | 10629 | QPSK | 15 | 47 | |
| 16 | 10629 | 16QAM | 15 | 8 | |
| 17 | 11418 | QPSK | 15 | 51 | TFRI = 50 would have minimised padding but is not acceptable as the coding rate (0.7806) would have given 3.5 dB due to turbo coder irregularities TFRI=51 is selected. |
| 17 | 11216 | 16QAM | 15 | 11 | |
| 18 | 11835 | QPSK | 15 | 53 | |
| 18 | 11835 | 16QAM | 15 | 14 | |
| 19 | 12488 | QPSK | 15 | 56 | |
| 19 | 12488 | 16QAM | 15 | 17 | |
| 20 | 13177 | QPSK | 15 | 59 | |
| 20 | 13177 | 16QAM | 15 | 20 | |
| 21 | 13904 | QPSK | 15 | 62 | |
| 21 | 13904 | 16QAM | 15 | 23 | |
| 22 | 14671 | 16QAM | 15 | 26 | |
| 23 | 15206 | 16QAM | 15 | 28 | |
| 24 | 16045 | 16QAM | 15 | 31 | |

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 25 | 16630 | 16QAM | 15 | 33 | |
| 26 | 17237 | 16QAM | 15 | 35 | |
| 27 | 17865 | 16QAM | 15 | 37 | |
| 28 | 18517 | 16QAM | 15 | 39 | |
| 29 | 19192 | 16QAM | 15 | 41 | |
| 30 | 19891 | 16QAM | 15 | 43 | |

**Table 14.1.3.4.4: TFRC test points for UE category 10 for MAC-d PDU size=656**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 686 | QPSK | 2 | 7 | |
| 1 | 686 | 16QAM | 1 | 7 | |
| 2 | 1356 | QPSK | 4 | 6 | |
| 2 | 1356 | 16QAM | 2 | 6 | |
| 3 | 2010 | QPSK | 6 | 5 | |
| 3 | 2010 | 16QAM | 3 | 5 | |
| 4 | 2677 | QPSK | 8 | 5 | |
| 4 | 2677 | 16QAM | 4 | 5 | |
| 5 | 3319 | QPSK | 10 | 4 | |
| 5 | 3319 | 16QAM | 5 | 4 | |
| 6 | 3970 | QPSK | 13 | 0 | |
| 6 | 3970 | 16QAM | 6 | 4 | |
| 7 | 4664 | QPSK | 15 | 1 | |
| 7 | 4664 | 16QAM | 7 | 4 | |
| 8 | 5287 | QPSK | 15 | 8 | |
| 8 | 5287 | 16QAM | 8 | 4 | |
| 9 | 5993 | QPSK | 15 | 15 | |
| 9 | 5993 | 16QAM | 9 | 4 | |
| 10 | 6673 | QPSK | 15 | 21 | |
| 10 | 6673 | 16QAM | 10 | 5 | |
| 11 | 7298 | QPSK | 15 | 26 | |
| 11 | 7298 | 16QAM | 11 | 4 | |
| 12 | 7981 | QPSK | 15 | 31 | |
| 12 | 7981 | 16QAM | 13 | 0 | |
| 13 | 8574 | QPSK | 15 | 35 | |
| 13 | 8574 | 16QAM | 14 | 0 | |
| 14 | 9210 | QPSK | 15 | 39 | |
| 14 | 9210 | 16QAM | 15 | 0 | |
| 15 | 9894 | QPSK | 15 | 43 | |
| 15 | 9894 | 16QAM | 15 | 4 | |
| 16 | 10629 | QPSK | 15 | 47 | |
| 16 | 10629 | 16QAM | 15 | 8 | |
| 17 | 11418 | QPSK | 15 | 51 | TFRI = 50 would have minimised padding but is not acceptable as the coding rate (0.7806) would have given 3.5 dB due to turbo coder irregularities TFRI=51 is selected. |

| | | | | | |
|---|---|---|---|---|---|
| 17 | 11216 | 16QAM | 15 | 11 | |
| 18 | 11835 | QPSK | 15 | 53 | |
| 18 | 11835 | 16QAM | 15 | 14 | |
| 19 | 12488 | QPSK | 15 | 56 | |
| 19 | 12488 | 16QAM | 15 | 17 | |
| 20 | 13177 | QPSK | 15 | 59 | |
| 20 | 13177 | 16QAM | 15 | 20 | |
| 21 | 13904 | QPSK | 15 | 62 | |
| 21 | 13904 | 16QAM | 15 | 23 | |
| 22 | 14671 | 16QAM | 15 | 26 | |
| 23 | 15206 | 16QAM | 15 | 28 | |
| 24 | 16045 | 16QAM | 15 | 31 | |
| 25 | 16630 | 16QAM | 15 | 33 | |
| 26 | 17237 | 16QAM | 15 | 35 | |
| 27 | 17865 | 16QAM | 15 | 37 | |
| 28 | 18517 | 16QAM | 15 | 39 | |
| 29 | 19192 | 16QAM | 15 | 41 | |
| 30 | 19891 | 16QAM | 15 | 43 | |
| 31 | 20617 | 16QAM | 15 | 45 | |
| 32 | 21368 | 16QAM | 15 | 47 | |
| 33 | 21754 | 16QAM | 15 | 48 | |
| 34 | 22955 | 16QAM | 15 | 51 | TFRI = 50 would have minimised padding but is not acceptable as the coding rate (0.78375) would have given 3.5 dB due to turbo coder irregularities TFRI=51 is selected. |
| 35 | 23370 | 16QAM | 15 | 52 | |
| 36 | 23792 | 16QAM | 15 | 53 | |
| 37 | 24659 | 16QAM | 15 | 55 | |
| 38 | 25558 | 16QAM | 15 | 57 | TFRI = 56 would have minimised padding but is not acceptable as the coding rate (0.8725) would have given 2 dB due to turbo coder irregularities TFRI=57 is selected. |
| 39 | 26020 | 16QAM | 15 | 58 | |
| 40 | 26490 | 16QAM | 15 | 59 | |
| 41 | 26969 | 16QAM | 15 | 60 | |
| 42 | 27952 | 16QAM | 15 | 62 | |

**Table 14.1.3.4.5: TFRC test points for UE category 11 and UE category 12 for MAC-d PDU size=656**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of codes | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 686 | QPSK | 2 | 7 | |
| 2 | 1356 | QPSK | 4 | 6 | |
| 3 | 2010 | QPSK | 5 | 15 | |
| 4 | 2677 | QPSK | 5 | 31 | |
| 5 | 3319 | QPSK | 5 | 43 | |

## 14.1.3.4b TB test points for enhanced Layer 2

### 14.1.3.4b.1 TFRC test points for MAC-ehs and QPSK with fixed MAC-d PDU size=336

NOTE 1 For M= QPSK then table 14.1.3.4b.1.1 is used. For M= 16QAM then table 14.1.3.4b.1.2 is used. For M= 64QAM then table 14.1.3.4b.1.3 is used.

NOTE 2 Column "Applicable Physical HS-DSCH UE categories" defines the applicability of test points vs Physical HS-DSCH UE categories.

**Table 14.1.3.4b.1.1: Test points for QPSK and fixed MAC-d PDU size=336**

| # MAC-d PDUs | Selected TBS | Modulation scheme | Number of codes | TFRI | Applicable Physical HS-DSCH UE categories | Comments |
|---|---|---|---|---|---|---|
| 1 | 360 | QPSK | 1 | 30 | 1 to 18 | |
| 2 | 712 | QPSK | 2 | 9 | 1 to 18 | |
| 3 | 1072 | QPSK | 3 | 9 | 1 to 18 | |
| 4 | 1432 | QPSK | 4 | 9 | 1 to 18 | |
| 5 | 1776 | QPSK | 5 | 9 | 1 to 18 | |
| 6 | 2128 | QPSK | 5 | 19 | 1 to 6,11 and 12 | |
| 6 | 2128 | QPSK | 7 | 0 | 7 to 10 and 13 to 18 | |
| 7 | 2496 | QPSK | 5 | 28 | 1 to 6,11 and 12 | |
| 7 | 2496 | QPSK | 8 | 1 | 7 to 10 and 13 to 18 | |
| 8 | 2832 | QPSK | 5 | 35 | 1 to 6,11 and 12 | |
| 8 | 2832 | QPSK | 9 | 2 | 7 to 10 and 13 to 18 | |
| 9 | 3208 | QPSK | 5 | 42 | 1 to 6,11 and 12 | |
| 9 | 3208 | QPSK | 10 | 3 | 7 to 10 and 13 to 18 | |
| 10 | 3576 | QPSK | 5 | 48 | 1 to 6,11 and 12 | |
| 10 | 3576 | QPSK | 10 | 9 | 7 and 8 | |
| 10 | 3576 | QPSK | 11 | 4 | 9 to 10 and 13 to 18 | |
| 11 | 3912 | QPSK | 5 | 53 | 1 to 6 | |
| 11 | 3912 | QPSK | 10 | 14 | 7 and 8 | |
| 11 | 3912 | QPSK | 12 | 4 | 9 to 10 and 13 to 18 | |
| 12 | 4272 | QPSK | 5 | 58 | 1 to 6 | |
| 12 | 4272 | QPSK | 10 | 19 | 7 and 8 | |
| 12 | 4272 | QPSK | 14 | 0 | 9 to 10 and 13 to 18 | |
| 13 | 4592 | QPSK | 5 | 62 | 1 to 6 | |
| 13 | 4592 | QPSK | 10 | 23 | 7 and 8 | |
| 13 | 4592 | QPSK | 15 | 0 | 9 to 10 and 13 to 18 | |
| 14 | 4936 | QPSK | 10 | 27 | 7 and 8 | |
| 14 | 4936 | QPSK | 15 | 4 | 9 to 10 and 13 to 18 | |
| 15 | 5296 | QPSK | 10 | 31 | 7 and 8 | |
| 15 | 5296 | QPSK | 15 | 8 | 9 to 10 and 13 to 18 | |
| 16 | 5688 | QPSK | 10 | 35 | 7 and 8 | |
| 16 | 5688 | QPSK | 15 | 12 | 9 to 10 and 13 to 18 | |
| 17 | 6008 | QPSK | 10 | 38 | 7 and 8 | |
| 17 | 6008 | QPSK | 15 | 15 | 9 to 10 and 13 to 18 | |
| 18 | 6448 | QPSK | 10 | 42 | 7 and 8 | |
| 18 | 6448 | QPSK | 15 | 19 | 9 to 10 and 13 to 18 | |
| 19 | 6808 | QPSK | 10 | 45 | 7 and 8 | |
| 19 | 6808 | QPSK | 15 | 22 | 9 to 10 and 13 to 18 | |
| 20 | 7056 | QPSK | 10 | 47 | 7 and 8 | |
| 20 | 7056 | QPSK | 15 | 24 | 9 to 10 and 13 to 18 | |
| 21 | 7440 | QPSK | 10 | 51 | 7 and 8 | TFRI = 50 would have minimised padding but is not acceptable as the coding rate (0.792) would have given 3.5 |

| | | | | | | |
|---|---|---|---|---|---|---|
| | | | | | | dB due to turbo coder irregularities. TFRI=51 is selected. |
| 21 | 7440 | QPSK | 15 | 27 | 9 to 10 and 13 to 18 | |
| 22 | 7856 | QPSK | 10 | 53 | 7 and 8 | |
| 22 | 7856 | QPSK | 15 | 30 | 9 to 10 and 13 to 18 | |
| 23 | 8136 | QPSK | 10 | 55 | 7 and 8 | |
| 23 | 8136 | QPSK | 15 | 32 | 9 to 10 and 13 to 18 | |
| 24 | 8592 | QPSK | 10 | 58 | 7 and 8 | |
| 24 | 8592 | QPSK | 15 | 35 | 9 to 10 and 13 to 18 | |
| 25 | 8904 | QPSK | 10 | 60 | 7 and 8 | |
| 25 | 8904 | QPSK | 15 | 37 | 9 to 10 and 13 to 18 | |
| 26 | 9224 | QPSK | 10 | 62 | 7 and 8 | |
| 26 | 9224 | QPSK | 15 | 39 | 9 to 10 and 13 to 18 | |

**Table 14.1.3.4b.1.2: Test points for 16QAM and fixed MAC-d PDU size=336**

| # MAC-d PDUs | Selected TBS | Modulation scheme | Number of codes | TFRI | Applicable Physical HS-DSCH UE categories | Comments |
|---|---|---|---|---|---|---|
| 2 | 712 | 16QAM | 1 | 9 | 1 to 10 and 13 to 18 | |
| 3 | 1072 | 16QAM | 1 | 32 | 1 to 10 and 13 to 18 | |
| 4 | 1432 | 16QAM | 2 | 9 | 1 to 10 and 13 to 18 | |
| 5 | 1776 | 16QAM | 2 | 21 | 1 to 10 and 13 to 18 | |
| 6 | 2128 | 16QAM | 3 | 9 | 1 to 10 and 13 to 18 | |
| 7 | 2496 | 16QAM | 3 | 18 | 1 to 10 and 13 to 18 | |
| 8 | 2832 | 16QAM | 4 | 8 | 1 to 10 and 13 to 18 | |
| 9 | 3208 | 16QAM | 5 | 3 | 1 to 10 and 13 to 18 | |
| 10 | 3576 | 16QAM | 5 | 9 | 1 to 10 and 13 to 18 | |
| 11 | 3912 | 16QAM | 5 | 14 | 1 to 6 | |
| 11 | 3912 | 16QAM | 6 | 4 | 7 to 10 and 13 to 18 | |
| 12 | 4272 | 16QAM | 5 | 19 | 1 to 6 | |
| 12 | 4272 | 16QAM | 7 | 0 | 7 to 10 and 13 to 18 | |
| 13 | 4592 | 16QAM | 5 | 23 | 1 to 6 | |
| 13 | 4592 | 16QAM | 7 | 4 | 7 to 10 and 13 to 18 | |
| 14 | 4936 | 16QAM | 5 | 27 | 1 to 6 | |
| 14 | 4936 | 16QAM | 8 | 1 | 7 to 10 and 13 to 18 | |
| 15 | 5296 | 16QAM | 5 | 31 | 1 to 6 | |
| 15 | 5296 | 16QAM | 8 | 5 | 7 to 10 and 13 to 18 | |
| 16 | 5688 | 16QAM | 5 | 35 | 1 to 6 | |
| 16 | 5688 | 16QAM | 9 | 2 | 7 to 10 and 13 to 18 | |
| 17 | 6008 | 16QAM | 5 | 38 | 1 to 6 | |
| 17 | 6008 | 16QAM | 9 | 5 | 7 to 10 and 13 to 18 | |
| 18 | 6448 | 16QAM | 5 | 42 | 1 to 6 | |
| 18 | 6448 | 16QAM | 10 | 3 | 7 to 10 and 13 to 18 | |
| 19 | 6808 | 16QAM | 5 | 45 | 1 to 6 | |
| 19 | 6808 | 16QAM | 10 | 6 | 7 and 8 | |
| 19 | 6808 | 16QAM | 11 | 1 | 9 to 10 and 13 to 18 | |
| 20 | 7056 | 16QAM | 5 | 47 | 1 to 6 | |
| 20 | 7056 | 16QAM | 10 | 8 | 7 and 8 | |
| 20 | 7056 | 16QAM | 11 | 3 | 9 to 10 and 13 to 18 | |
| 21 | 7440 | 16QAM | 10 | 11 | 7 and 8 | |
| 21 | 7440 | 16QAM | 11 | 6 | 9 to 10 and 13 to 18 | |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | 7856 | 16QAM | 10 | 14 | 7 and 8 | |
| 22 | 7856 | 16QAM | 13 | 0 | 9 to 10 and 13 to 18 | |
| 23 | 8136 | 16QAM | 10 | 16 | 7 and 8 | |
| 23 | 8136 | 16QAM | 13 | 2 | 9 to 10 and 13 to 18 | |
| 24 | 8592 | 16QAM | 10 | 19 | 7 and 8 | |
| 24 | 8592 | 16QAM | 14 | 0 | 9 to 10 and 13 to 18 | |
| 25 | 8904 | 16QAM | 10 | 21 | 7 and 8 | |
| 25 | 8904 | 16QAM | 14 | 2 | 9 to 10 and 13 to 18 | |
| 26 | 9224 | 16QAM | 10 | 23 | 7 and 8 | |
| 26 | 9224 | 16QAM | 15 | 1 | 9 to 10 and 13 to 18 | |

**Table 14.1.3.4b.1.3: Test points for 64QAM and fixed MAC-d PDU size=336**

| # MAC-d PDUs | Selected TBS | Modulation scheme | Number of codes | TFRI | Applicable Physical HS-DSCH UE categories | Comments |
|---|---|---|---|---|---|---|
| 3 | 1072 | 64QAM | 1 | 9 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 4 | 1432 | 64QAM | 1 | 25 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 5 | 1776 | 64QAM | 1 | 37 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 6 | 2128 | 64QAM | 2 | 9 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 7 | 2496 | 64QAM | 2 | 18 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 8 | 2832 | 64QAM | 3 | 2 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 9 | 3208 | 64QAM | 3 | 9 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 10 | 3576 | 64QAM | 3 | 15 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 11 | 3912 | 64QAM | 4 | 4 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 12 | 4272 | 64QAM | 4 | 9 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 13 | 4592 | 64QAM | 5 | 0 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 14 | 4936 | 64QAM | 5 | 4 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 15 | 5296 | 64QAM | 5 | 8 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 16 | 5688 | 64QAM | 6 | 2 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 17 | 6008 | 64QAM | 6 | 5 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 18 | 6448 | 64QAM | 6 | 9 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 19 | 6808 | 64QAM | 7 | 3 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 20 | 7056 | 64QAM | 7 | 5 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 21 | 7440 | 64QAM | 8 | 1 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 22 | 7856 | 64QAM | 8 | 4 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 23 | 8136 | 64QAM | 8 | 6 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 24 | 8592 | 64QAM | 9 | 2 | 13, 14, 17 non-MIMO, 18 non-MIMO | |

| | | | | | | |
|---|---|---|---|---|---|---|
| 25 | 8904 | 64QAM | 9 | 4 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 26 | 9224 | 64QAM | 10 | 1 | 13, 14, 17 non-MIMO, 18 non-MIMO | |

### 14.1.3.4b.2 TFRC test points for MAC-ehs and fixed MAC-d PDU size=656 or flexible MAC-d PDU size; or for radio bearer combinations with mix of fixed and flexible MAC-d PDU sizes

NOTE 1 For M= QPSK then table 14.1.3.4b.2.1 is used. For M= 16QAM then table 14.1.3.4b.2.2 is used. For M= 64QAM then table 14.1.3.4b.2.3 is used. For the case of MIMO and mix of QPSK and 16QAM for MIMO data flow#1 and MIMO data flow#2 then table 14.1.3.4b.2.4 is used.

NOTE 2 Column "Applicable Physical HS-DSCH UE categories" defines the applicability of test points vs Physical HS-DSCH UE categories.

NOTE 3 For the case a configuration with flexible MAC-d PDU size is under test then the parameter as denoted $N_{PDUs}$ is only used to index the test points. For the case of configuration with fixed MAC-d PDU size=656 then this parameter also indicates the number of MAC-d PDUs the SS use when transmitting the test data in downlink.

**Table 14.1.3.4b.2.1: Test points for QPSK, fixed MAC-d PDU size=656 or flexible MAC-d PDU size; or for radio bearer combinations with mix of fixed and flexible MAC-d PDU sizes**

| # MAC-d PDUs# MAC-d PDUs for the fixed RLC case | Selected TBS | Modulation scheme | Number of codes | TFRI | Applicable Physical HS-DSCH UE categories | Comments |
|---|---|---|---|---|---|---|
| 1 | 688 | QPSK | 2 | 7 | 1 to 18 | |
| 2 | 1360 | QPSK | 4 | 6 | 1 to 18 | |
| 3 | 2048 | QPSK | 5 | 17 | 1 to 6,11 and 12 | |
| 3 | 2048 | QPSK | 6 | 7 | 7 to 10 and 13 to 18 | |
| 4 | 2736 | QPSK | 5 | 33 | 1 to 6,11 and 12 | |
| 4 | 2736 | QPSK | 9 | 0 | 7 to 10 and 13 to 18 | |
| 5 | 3384 | QPSK | 5 | 45 | 1 to 6,11 and 12 | |
| 5 | 3384 | QPSK | 10 | 6 | 7 and 8 | |
| 5 | 3384 | QPSK | 11 | 1 | 9 to 10 and 13 to 18 | |
| 6 | 4048 | QPSK | 5 | 55 | 1 to 6 | |
| 6 | 4048 | QPSK | 10 | 16 | 7 and 8 | |
| 6 | 4048 | QPSK | 13 | 1 | 9 to 10 and 13 to 18 | |
| 7 | 4760 | QPSK | 10 | 25 | 7 and 8 | |
| 7 | 4760 | QPSK | 15 | 2 | 9 to 10 and 13 to 18 | |
| 8 | 5392 | QPSK | 10 | 32 | 7 and 8 | |
| 8 | 5392 | QPSK | 15 | 9 | 9 to 10 and 13 to 18 | |
| 9 | 6112 | QPSK | 10 | 39 | 7 and 8 | |
| 9 | 6112 | QPSK | 15 | 16 | 9 to 10 and 13 to 18 | |
| 10 | 6808 | QPSK | 10 | 45 | 7 and 8 | |
| 10 | 6808 | QPSK | 15 | 22 | 9 to 10 and 13 to 18 | |
| 11 | 7440 | QPSK | 10 | 51 | 7 and 8 | TFRI = 50 would have minimised padding but is not acceptable as the coding rate (0.792) would have given 3.5 dB due to turbo coder irregularities. TFRI=51 is selected. |

| | | | | | | |
|---|---|---|---|---|---|---|
| 11 | 7440 | QPSK | 15 | 27 | 9 to 10 and 13 to 18 | |
| 12 | 8136 | QPSK | 10 | 55 | 7 and 8 | |
| 12 | 8136 | QPSK | 15 | 32 | 9 to 10 and 13 to 18 | |
| 13 | 8744 | QPSK | 10 | 60 | 7 and 8 | TFRI = 59 would have minimised padding but is not acceptable as the coding rate (0.913) would have given 2 dB due to turbo coder irregularities. TFRI=60 is selected. |
| 13 | 8744 | QPSK | 15 | 36 | 9 to 10 and 13 to 18 | |
| 14 | 9560 | QPSK | 15 | 41 | 9 to 10 and 13 to 18 | |
| 15 | 10088 | QPSK | 15 | 44 | 9 to 10 and 13 to 18 | |
| 16 | 10840 | QPSK | 15 | 48 | 9 to 10 and 13 to 18 | |
| 17 | 11432 | QPSK | 15 | 51 | 9 to 10 and 13 to 18 | |
| 18 | 12280 | QPSK | 15 | 55 | 9 to 10 and 13 to 18 | |
| 19 | 12960 | QPSK | 15 | 58 | 9 to 10 and 13 to 18 | |
| 20 | 13672 | QPSK | 15 | 61 | 9 to 10 and 13 to 18 | |

**Table 14.1.3.4b.2.2: Test points for 16QAM, fixed MAC-d PDU size=656 or flexible MAC-d PDU size; or for radio bearer combinations with mix of fixed and flexible MAC-d PDU sizes**

| # MAC-d PDUs# MAC-d PDUs for the fixed RLC case | Selected TBS | Modulation scheme | Number of codes | TFRI | Applicable Physical HS-DSCH UE categories | Comments |
|---|---|---|---|---|---|---|
| 1 | 688 | 16QAM | 1 | 7 | 1 to 10 and 13 to 18 | |
| 2 | 1360 | 16QAM | 2 | 6 | 1 to 10 and 13 to 18 | |
| 3 | 2048 | 16QAM | 3 | 7 | 1 to 10 and 13 to 18 | |
| 4 | 2736 | 16QAM | 4 | 6 | 1 to 10 and 13 to 18 | |
| 5 | 3384 | 16QAM | 5 | 6 | 1 to 10 and 13 to 18 | |
| 6 | 4048 | 16QAM | 6 | 6 | 7 to 10 and 13 to 18 | |
| 7 | 4760 | 16QAM | 5 | 25 | 1 to 6 | |
| 7 | 4760 | 16QAM | 7 | 6 | 7 to 10 and 13 to 18 | |
| 8 | 5392 | 16QAM | 5 | 32 | 1 to 6 | |
| 8 | 5392 | 16QAM | 8 | 6 | 7 to 10 and 13 to 18 | |
| 9 | 6112 | 16QAM | 5 | 39 | 1 to 6 | |
| 9 | 6112 | 16QAM | 10 | 0 | 7 to 10 and 13 to 18 | |
| 10 | 6808 | 16QAM | 5 | 45 | 1 to 6 | |
| 10 | 6808 | 16QAM | 10 | 6 | 7 and 8 | |
| 10 | 6808 | 16QAM | 11 | 1 | 9 to 10 and 13 to 18 | |
| 11 | 7440 | 16QAM | 10 | 11 | 7 and 8 | |
| 11 | 7440 | 16QAM | 12 | 1 | 9 to 10 and 13 to | |

| | | | | | | |
|---|---|---|---|---|---|---|
| | | | | | 18 | |
| 12 | 8136 | 16QAM | 10 | 16 | 7 and 8 | |
| 12 | 8136 | 16QAM | 13 | 2 | 9 to 10 and 13 to 18 | |
| 13 | 8744 | 16QAM | 10 | 20 | 7 and 8 | |
| 13 | 8744 | 16QAM | 14 | 1 | 9 to 10 and 13 to 18 | |
| | | | | | | |
| 14 | 9560 | 16QAM | 10 | 25 | 7 and 8 | |
| 14 | 9560 | 16QAM | 15 | 3 | 9 to 10 and 13 to 18 | |
| 15 | 10088 | 16QAM | 10 | 28 | 7 and 8 | |
| 15 | 10088 | 16QAM | 15 | 6 | 9 to 10 and 13 to 18 | |
| 16 | 10840 | 16QAM | 10 | 32 | 7 and 8 | |
| 16 | 10840 | 16QAM | 15 | 10 | 9 to 10 and 13 to 18 | |
| 17 | 11432 | 16QAM | 10 | 35 | 7 and 8 | |
| 17 | 11432 | 16QAM | 15 | 13 | 9 to 10 and 13 to 18 | |
| 18 | 12280 | 16QAM | 10 | 39 | 7 and 8 | |
| 18 | 12280 | 16QAM | 15 | 17 | 9 to 10 and 13 to 18 | |
| 19 | 12960 | 16QAM | 10 | 42 | 7 and 8 | |
| 19 | 12960 | 16QAM | 15 | 20 | 9 to 10 and 13 to 18 | |
| 20 | 13672 | 16QAM | 10 | 45 | 7 and 8 | |
| 20 | 13672 | 16QAM | 15 | 23 | 9 to 10 and 13 to 18 | |
| 21 | 14168 | 16QAM | 10 | 47 | 7 and 8 | |
| 21 | 14168 | 16QAM | 15 | 25 | 9 to 10 and 13 to 18 | |
| 22 | 14952 | 16QAM | 15 | 28 | 9 to 10 and 13 to 18 | |
| 23 | 15496 | 16QAM | 15 | 30 | 9 to 10 and 13 to 18 | |
| 24 | 16352 | 16QAM | 15 | 33 | 9 to 10 and 13 to 18 | |
| 25 | 16944 | 16QAM | 15 | 35 | 9 to 10 and 13 to 18 | |
| 26 | 17568 | 16QAM | 15 | 37 | 9 to 10 and 13 to 18 | |
| n/a | 17880 | 16QAM | 15 | 38 | 9 to 10 and 13 to 18 | See Note 1 |
| n/a | 18536 | 16QAM | 15 | 40 | 9 to 10 and 13 to 18 | See Note 1 |
| n/a | 19208 | 16QAM | 15 | 42 | 9 to 10 and 13 to 18 | See Note 1 |
| n/a | 19904 | 16QAM | 15 | 44 | 9 to 10 and 13 to 18 | See Note 1 |
| n/a | 20632 | 16QAM | 15 | 46 | 10 and 13 to 18 | See Note 1 |
| n/a | 21384 | 16QAM | 15 | 48 | 10 and 13 to 18 | See Note 1 |
| n/a | 21768 | 16QAM | 15 | 49 | 10 and 13 to 18 | See Note 1 |
| n/a | 22968 | 16QAM | 15 | 52 | 10 and 13 to 18 | See Note 1<br><br>TFRI = 51 would have minimised padding but is not acceptable as the coding rate (0.784) would have given 3.5 dB due to turbo coder irregularities TFRI=52 is selected. |
| n/a | 23384 | 16QAM | 15 | 53 | 10, 13, 14,16, 17 non-MIMO and 18 | See Note 1 |
| n/a | 23808 | 16QAM | 15 | 54 | 10, 13, 14,16, 17 non-MIMO and 18 | See Note 1 |
| n/a | 24672 | 16QAM | 15 | 56 | 10, 13, 14,16, 17 non-MIMO and 18 | See Note 1 |

| | | | | | | |
|---|---|---|---|---|---|---|
| n/a | 25568 | 16QAM | 15 | 58 | 10, 13, 14,16, 17 non-MIMO and 18 | See Note 1<br><br>TFRI = 57 would have minimised padding but is not acceptable as the coding rate (0.873) would have given 2 dB due to turbo coder irregularities TFRI=58 is selected. |
| n/a | 26032 | 16QAM | 15 | 59 | 10, 13, 14,16, 17 non-MIMO and 18 | See Note 1 |
| n/a | 26504 | 16QAM | 15 | 60 | 10, 13, 14,16, 17 non-MIMO and 18 | See Note 1 |
| n/a | 26976 | 16QAM | 15 | 61 | 10, 13, 14,16, 17 non-MIMO and 18 | See Note 1 |
| Note 1 | This test point is not applicable for the fixed RLC case as the number of MAC-d PDUs would have exceeded the maximum limit of 26 as specified by TS 25.321 clause 9.1.4. | | | | | |

**Table 14.1.3.4b.2.3: Test points for 64QAM, fixed MAC-d PDU size=656 or flexible MAC-d PDU size; or for radio bearer combinations with mix of fixed and flexible MAC-d PDU sizes**

| # MAC-d PDUs# MAC-d PDUs for the fixed RLC case | Selected TBS | Modulation scheme | Number of codes | TFRI | Applicable Physical HS-DSCH UE categories | Comments |
|---|---|---|---|---|---|---|
| 2 | 1360 | 64QAM | 1 | 22 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 3 | 2048 | 64QAM | 2 | 7 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 4 | 2736 | 64QAM | 3 | 0 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 5 | 3384 | 64QAM | 3 | 12 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 6 | 4048 | 64QAM | 4 | 6 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 7 | 4760 | 64QAM | 5 | 2 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 8 | 5392 | 64QAM | 5 | 9 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 9 | 6112 | 64QAM | 6 | 6 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 10 | 6808 | 64QAM | 7 | 3 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 11 | 7440 | 64QAM | 8 | 1 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 12 | 8136 | 64QAM | 8 | 6 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 13 | 8744 | 64QAM | 9 | 3 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 14 | 9560 | 64QAM | 10 | 3 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 15 | 10088 | 64QAM | 11 | 0 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 16 | 10840 | 64QAM | 11 | 4 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 17 | 11432 | 64QAM | 12 | 2 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 18 | 12280 | 64QAM | 13 | 2 | 13, 14, 17 non-MIMO, 18 non-MIMO | |

| | | | | | | |
|---|---|---|---|---|---|---|
| 19 | 12960 | 64QAM | 14 | 1 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 20 | 13672 | 64QAM | 14 | 4 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 21 | 14168 | 64QAM | 15 | 1 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 22 | 14952 | 64QAM | 15 | 4 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 23 | 15496 | 64QAM | 15 | 6 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 24 | 16352 | 64QAM | 15 | 9 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 25 | 16944 | 64QAM | 15 | 11 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| 26 | 17568 | 64QAM | 15 | 13 | 13, 14, 17 non-MIMO, 18 non-MIMO | |
| n/a | 17880 | 64QAM | 15 | 14 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 18536 | 64QAM | 15 | 16 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 19208 | 64QAM | 15 | 18 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 19904 | 64QAM | 15 | 20 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 20632 | 64QAM | 15 | 22 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 21384 | 64QAM | 15 | 24 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 21768 | 64QAM | 15 | 25 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 22560 | 64QAM | 15 | 27 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 23384 | 64QAM | 15 | 29 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 23808 | 64QAM | 15 | 30 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 24672 | 64QAM | 15 | 32 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 25120 | 64QAM | 15 | 33 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 26032 | 64QAM | 15 | 35 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 26504 | 64QAM | 15 | 36 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 26976 | 64QAM | 15 | 37 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 27960 | 64QAM | 15 | 39 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 28464 | 64QAM | 15 | 40 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 28976 | 64QAM | 15 | 41 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 30032 | 64QAM | 15 | 43 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 30576 | 64QAM | 15 | 44 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 31128 | 64QAM | 15 | 45 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 31688 | 64QAM | 15 | 46 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 32264 | 64QAM | 15 | 47 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |

| | | | | | | |
|---|---|---|---|---|---|---|
| n/a | 32848 | 64QAM | 15 | 48 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 34040 | 64QAM | 15 | 50 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 34656 | 64QAM | 15 | 51 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 35280 | 64QAM | 15 | 52 | 13, 14, 17 non-MIMO, 18 non-MIMO | See Note 1 |
| n/a | 35920 | 64QAM | 15 | 53 | 14 and 18 non-MIMO | See Note 1 |
| n/a | 36568 | 64QAM | 15 | 54 | 14 and 18 non-MIMO | See Note 1 |
| n/a | 37224 | 64QAM | 15 | 55 | 14 and 18 non-MIMO | See Note 1 |
| n/a | 37896 | 64QAM | 15 | 56 | 14 and 18 non-MIMO | See Note 1 |
| n/a | 38576 | 64QAM | 15 | 57 | 14 and 18 non-MIMO | See Note 1 |
| n/a | 39272 | 64QAM | 15 | 58 | 14 and 18 non-MIMO | See Note 1 |
| n/a | 39984 | 64QAM | 15 | 59 | 14 and 18 non-MIMO | See Note 1 |
| n/a | 40704 | 64QAM | 15 | 60 | 14 and 18 non-MIMO | See Note 1 |
| n/a | 40704 | 64QAM | 15 | 60 | 14 and 18 non-MIMO | See Note 1 |
| n/a | 41440 | 64QAM | 15 | 61 | 14 and 18 non-MIMO | See Note 1 |
| n/a | 42192 | 64QAM | 15 | 62 | 14 and 18 non-MIMO | See Note 1 |
| Note 1 | This test point is not applicable for the fixed RLC case as the number of MAC-d PDUs would have exceeded the maximum limit of 26 as specified by TS 25.321 clause 9.1.4. | | | | | |

**Table 14.1.3.4b.2.4: Test points for MIMO and mix of QPSK and 16QAM for MIMO data flow#1 and MIMO data flow#2, fixed MAC-d PDU size=656 or flexible MAC-d PDU size; or for radio bearer combinations with mix of fixed and flexible MAC-d PDU sizes**

| Test point Index<br><br>See note 1 | Number of codes | MIMO Flow#1 | | | | MIMO Flow#2 | | | | Applicable Physical HS-DSCH UE categories | Comments |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | # MAC-d PDUs# MAC-d PDUs for the fixed RLC case | Selected TBS (TBS1) | Modulation scheme (M1) | TFRI1 | # MAC-d PDUs# MAC-d PDUs for the fixed RLC case | Selected TBS (TBS2) | Modulation scheme (M2) | TFRI2 | | |
| 1 | 2 | 2 | 1360 | 16QAM | 6 | 1 | 688 | QPSK | 7 | 15 to 18 | |
| 2 | 4 | 4 | 2736 | 16QAM | 6 | 2 | 1360 | QPSK | 6 | 15 to 18 | |
| 3 | 5 | 5 | 3384 | 16QAM | 6 | 3 | 2048 | QPSK | 17 | 15 to 18 | |
| 4 | 6 | 6 | 4048 | 16QAM | 6 | 3 | 2048 | QPSK | 7 | 15 to 18 | |
| 5 | 5 | 7 | 4760 | 16QAM | 25 | 4 | 2736 | QPSK | 33 | 15 to 18 | |
| 6 | 8 | 8 | 5392 | 16QAM | 6 | 4 | 2736 | QPSK | 7 | 15 to 18 | |
| 7 | 5 | 9 | 6112 | 16QAM | 39 | 5 | 3384 | QPSK | 45 | 15 to 18 | |
| 8 | 10 | 10 | 6808 | 16QAM | 6 | 5 | 3384 | QPSK | 6 | 15 to 18 | |
| 9 | 11 | 10 | 6688 | 16QAM | 1 | 5 | 3384 | QPSK | 1 | 15 to 18 | |
| 10 | 5 | 11 | 7440 | 16QAM | 50 | 6 | 4048 | QPSK | 55 | 15 to 18 | |
| 11 | 10 | 11 | 7440 | 16QAM | 11 | 6 | 4048 | QPSK | 16 | 15 to 18 | |
| 12 | 13 | 12 | 8136 | 16QAM | 2 | 6 | 4048 | QPSK | 1 | 15 to 18 | |
| 13 | 10 | 13 | 8744 | 16QAM | 20 | 7 | 4760 | QPSK | 25 | 15 to 18 | |
| 14 | 15 | 14 | 9560 | 16QAM | 3 | 7 | 4760 | QPSK | 2 | 15 to 18 | |
| 15 | 10 | 15 | 10088 | 16QAM | 28 | 8 | 53952 | QPSK | 32 | 15 to 18 | |
| 16 | 15 | 15 | 10088 | 16QAM | 6 | 8 | 5392 | QPSK | 9 | 15 to 18 | |
| 17 | 10 | 16 | 10840 | 16QAM | 32 | 9 | 6112 | QPSK | 39 | 15 to 18 | |
| 18 | 15 | 16 | 10840 | 16QAM | 10 | 9 | 5112 | QPSK | 16 | 15 to 18 | |
| 19 | 10 | 17 | 11432 | 16QAM | 35 | 10 | 6808 | QPSK | 45 | 15 to 18 | |
| 20 | 15 | 17 | 11432 | 16QAM | 13 | 10 | 6808 | QPSK | 22 | 15 to 18 | |
| 21 | 10 | 18 | 12280 | 16QAM | 39 | 11 | 7440 | QPSK | 51 | 15 to 18 | MIMO Flow#2: TFRI = 50 would have minimised padding but is not acceptable as the |

| Test point Index<br><br>See note 1 | Number of codes | MIMO Flow#1 | | | | MIMO Flow#2 | | | | Applicable Physical HS-DSCH UE categories | Comments |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | # MAC-d PDUs# MAC-d PDUs for the fixed RLC case | Selected TBS (TBS1) | Modulation scheme (M1) | TFRI1 | # MAC-d PDUs# MAC-d PDUs for the fixed RLC case | Selected TBS (TBS2) | Modulation scheme (M2) | TFRI2 | | |
| | | | | | | | | | | | coding rate (0.782) would have given 3.5 dB due to turbo coder irregularities TFRI=51 is selected. |
| 22 | 15 | 18 | 12280 | 16QAM | 17 | 11 | 7440 | QPSK | 27 | 15 to 18 | |
| 23 | 10 | 19 | 12960 | 16QAM | 42 | 12 | 8136 | QPSK | 55 | 15 to 18 | |
| 24 | 15 | 19 | 12960 | 16QAM | 20 | 12 | 8136 | QPSK | 32 | 15 to 18 | |
| 25 | 10 | 20 | 13672 | 16QAM | 45 | 13 | 8744 | QPSK | 60 | 15 to 18 | MIMO Flow#2: TFRI = 59 would have minimised padding but is not acceptable as the coding rate (0.913) would have given 2 dB due to turbo coder irregularities. TFRI=60 is selected. |
| 26 | 15 | 20 | 13672 | 16QAM | 23 | 13 | 8744 | QPSK | 36 | 15 to 18 | |
| | | | | | | | | | | | |
| 28 | 15 | 21 | 14168 | 16QAM | 25 | 14 | 9560 | QPSK | 41 | 15 to 18 | |
| 29 | 15 | 22 | 14952 | 16QAM | 28 | 15 | 10088 | QPSK | 44 | 15 to 18 | |
| 30 | 15 | 23 | 15496 | 16QAM | 30 | 16 | 10840 | QPSK | 48 | 15 to 18 | |

| Test point Index<br><br>See note 1 | Number of codes | MIMO Flow#1 | | | | MIMO Flow#2 | | | | Applicable Physical HS-DSCH UE categories | Comments |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | # MAC-d PDUs# MAC-d PDUs for the fixed RLC case | Selected TBS (TBS1) | Modulation scheme (M1) | TFRI1 | # MAC-d PDUs# MAC-d PDUs for the fixed RLC case | Selected TBS (TBS2) | Modulation scheme (M2) | TFRI2 | | |
| 31 | 15 | 24 | 16352 | 16QAM | 33 | 17 | 11432 | QPSK | 51 | 15 to 18 | |
| 32 | 15 | 25 | 16944 | 16QAM | 35 | 18 | 12280 | QPSK | 55 | 15 to 18 | |
| 33 | 15 | 26 | 17568 | 16QAM | 37 | 19 | 12960 | QPSK | 58 | 15 to 18 | |
| 34 | 15 | n/a | 17880 | 16QAM | 38 | 20 | 13672 | QPSK | 61 | 15 to 18 | See note 2 |
| 35 | 15 | n/a | 18536 | 16QAM | 40 | 21 | 14168 | QPSK | 63 | 15 to 18 | See note 2 |

Note 1 The test point index is included to provide a unique reference to the different test points for the MIMO mixed modulation case.
Note 2 This test point is not applicable for the fixed RLC case as the number of MAC-d PDUs would have exceeded the maximum limit of 26 as specified by TS 25.321 clause 9.1.4.

### 14.1.3.5 Generic test procedure for HS-DSCH radio bearer combinations with non-enhanced Layer 2

This procedure is used to test HS-DSCH radio bearer combinations with non-enhanced layer 2. The procedure is run once for each sub-test of the actual HS-DSCH radio bearer test case.

Definition of test variables:

| | |
|---|---|
| $N_{\underline{codes}}$ | Number of HS-DSCH codes (1..15, maximum number dependent on UE category) |
| $M$ | Type of modulation scheme (QPSK, 16QAM, 64QAM) |
| $TB_{size}$ | Transport Block size |
| $N_{PDUs}$ | Number of MAC-d PDUs |
| $H_{\underline{ID}}$ | HARQ process identifier (0..7) |

Initial conditions

UE in idle mode

Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test. For the case when the reference radio bearer configuration includes radio bearers for both CS and PS domain then the radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s). The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers . The Physical channel configuration shall be done for both CS and PS radio bearers combined. Here the transport format combination set for both CS and PS radio bearers shall be provided. See note 1 and note 3.

b) The SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. See note 2.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test.

d) The SS selects the first TFRC test point ($N_{PDUs}$ , $M$, $N_{\underline{codes}}$ and TFRI) according to the applicable table in sub-clauses 14.1.3.3 (MAC-d PDU size=336) or 14.1.3.4 (MAC-d PDU size=656).

e) The SS sets $H_{\underline{ID}}$ = 0.

f) The SS creates 4 DL RLC SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). See note 4.

g) The SS transmits, for each DTCH mapped to HS-DSCH, 4 DL RLC SDUs concatenated into a MAC-hs PDU using the selected TFRC and $H_{\underline{ID}}$. If the radio bearer combination under test includes downlink DTCHs mapped to DCH then the SS transmits, for all DTCHs mapped to DCH, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test of the actual radio bearer test case.

h) The SS checks that the content of the UE returned RLC SDUs have the correct content and are received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

i) The SS sets $H_{\underline{ID}}$ = ($H_{\underline{ID}}$ + 1) modulo $Max_H_{\underline{ID}}$, where $Max_H_{\underline{ID}}$ equals the number of HARQ processes to be verified by the actual sub-test

j) The SS repeats steps f) to i) for the remaining TFRC test point ($N_{PDUs}$ , $M$, $N_{\underline{codes}}$ and TFRI) according to the applicable table in sub-clauses 14.1.3.3 (MAC-d PDU size=336) or 14.1.3.4 (MAC-d PDU size=656) for the UE category and MAC-d PDU size under test.

k) The SS opens the UE test loop.

l) The SS release the radio bearer. See note 5.

m) Steps a) to l) are repeated for all sub-tests. See note 6.

n) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test. The number of soft channel bits per HARQ process is split equally among the number of HARQ processes configured for the actual sub-test - i.e. “Total number of soft channel bits” for the UE category according to table 14.1.3.1.1 divided by the number of HARQ processes under test. The number of reordering queues are 1 for single HS-DSCH radio bearer configurations. The MAC-hs window size, RLC Transmission window size and RLC Receiving window size shall be configured as specified for the actual sub-test.

NOTE 2: The restricted set of uplink TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signaling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

NOTE 3: The MAC-hs window size and RLC Receiver and transmitter window sizes need to be chosen such that the UE capability for “Minimum total RLC AM and MAC-hs buffer size” is not exceeded for the UE category under test.

NOTE 4: The test data for DTCHs mapped on HS-DSCH is divided into 4 RLC SDUs to keep the maximum SDU size below or equal to 1500 octets (1500 octets is the limit of QoS parameter “Max SDU size” in SM).

NOTE 5: The Secondary scrambling code in the RADIO BEARER RELEASE message is set to the same value used in the RADIO BEARER SETUP MESSAGE.

NOTE 6: CS radio bearer is setup once during the first sub-test.

Expected sequence (repeated for each sub-test, see note 3)

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| **Case A: PS radio bearers only** | | | | |
| A1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| A2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| A3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| A4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| A5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| A6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| A7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| A8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| A9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| A10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| A11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured. For the PS radio bearer(s) the 'pdcp info' IE shall be omitted. |
| A12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **End of branch for Case A** | | | | |
| **Case B: CS + PS radio bearers** | | | | |
| B1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| B2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| B3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| B4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| B5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| B6 | --> | | PAGING RESPONSE (DCCH) | RR |
| B6a | <-- | | AUTHENTICATION REQUEST | |
| B6b | --> | | AUTHENTICATION RESPONSE | |
| B7 | <-- | | SECURITY MODE COMMAND | |
| B8 | --> | | SECURITY MODE COMPLETE | |
| B9 | <-- | | PAGING TYPE 2 (DCCH) | TMSI (GSM-MAP)/ P-TMSI |
| B9a | --> | | SERVICE REQUEST (DCCH) | GMM |
| B9b | <-- | | SECURITY MODE COMMAND | RRC See note 2 |
| B9c | --> | | SECURITY MODE COMPLETE | RRC |
| B10 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| B10a | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| B11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured |
| B12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B12a | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| B12b | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **End of branch for Case B** | | | | |
| 13 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test |
| 14 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 15 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 16 | SS | | | For each DTCHs mapped on HS-DSCH the SS creates test data for the first TFRC . The test data shall be dived into 4 RLC SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 - 8 bits.The SS sets *H*ID = 0. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 17 | <-- | | DOWNLINK MAC-hs PDU (HS-DSCH#1)<br>…<br>DOWNLINK MAC-hs PDU (HS-DSCH#N)<br><br>DL RLC SDU (DL DCH#1)<br>…<br>DL RLC SDU (DL DCH#M) | For each DTCH mapped on HS-DSCH the SS sends test data divided into 4 RLC SDUs for HARQ processe *H*ID.<br>For each DTCH mapped on DCH the SS sends test data using the downlink transport format combination under test. |
| 18 | --> | | UPLINK RLC SDUs | The SS checks, for each DTCH, that the content and transport format of the received UL RLC SDUs are correct. |
| 19 | SS | | | The SS sets *H*ID = (*H*ID + 1) modulo *Max_H*ID. The SS creates test data for the next TFRC and repeat steps 17 to 18 until all TFRCs have been tested. |
| 20 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 21 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 22 | | | RB RELEASE | RRC |
| 23 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 24 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |

Note 1 In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Note 2 For case B (CS+PS radio bearers) the second security mode procedure is needed to enable testing of ciphering on the PS radio bearers.

Note 3 For case A (PS radio bearers) steps A1 to A10 will be executed once during first sub-test. For case B (CS+PS radio bearers) steps B1 to B12 will be executed once during first sub-test.

### 14.1.3.5a Generic test procedure for HS-DSCH radio bearer combinations with enhanced Layer 2

This procedure is used to test HS-DSCH radio bearer combinations with enhanced Layer 2. The procedure is run once for each sub-test of the actual HS-DSCH radio bearer test case.

Definition of test variables common for both the flexible and fixed RLC cases:

| | |
|---|---|
| $N_{\underline{codes}}$ | Number of HS-DSCH codes (1..15, maximum number dependent on UE category) |
| *M* | Type of modulation scheme (QPSK, 16QAM, 64QAM) |
| *M1* | Type of modulation scheme for MIMO data flow#1 for the case different modulations schemes are used for the MIMO data flows (QPSK, 16QAM) |
| *M2* | Type of modulation scheme for MIMO data flow#2 for the case different modulations schemes are used for the MIMO data flows (QPSK, 16QAM) |
| $TB_{size}$ | Transport Block size |
| $H_{\underline{ID}}$ | HARQ process identifier (0..7 when MIMO is not supported 0..15 when MIMO is supported) |
| $H_{\underline{CONF}}$ | Configured number of HARQ processes for the subtest |

Definition of test variables for the fixed RLC case:

| | |
|---|---|
| $N_{PDUs}$ | Number of MAC-d PDUs. |

Definition of test variables for the flexible RLC case:

| | |
|---|---|
| *Max_RLC_PDU_size* | Maximum size of RLC PDUs. If the DL RLC SDU corresponds to a RLC PDU > *Max_RLC_PDU_size* then the SS shall segment the RLC SDU into the minimum number of RLC PDUs with the size less or equal to *Max_RLC_PDU_size.* |

Initial conditions

UE in idle mode

Test procedure

NOTE The test case should specify if the test procedure is to be executed for the MIMO case. If nothing is stated in the test case then the test procedure is to be executed for the non-MIMO case. The test case should also specify which modulation scheme M the testing is intended for, i.e. if more than one modulation schemes are to be tested then the test case need to specify multiple test executions, one for each modulation scheme. If nothing is specified in the test case then M=QPSK shall be assumed.

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test. For the case when the reference radio bearer configuration includes radio bearers for both CS and PS domain then the radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s). The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers . The Physical channel configuration shall be done for both CS and PS radio bearers combined. Here the transport format combination set for both CS and PS radio bearers shall be provided. See note 1 and note 3.

b) The SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. See note 2.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test.

d) For the non-MIMO case: The SS selects the first TFRC test point ($N_{PDUs}$ , *M,* $N_{\underline{codes}}$ and TFRI) according to the applicable table in sub-clauses 14.1.3.4b.1 (MAC-d PDU size=336) or 14.1.3.4b.2 (MAC-d PDU size=656 or Felxible MAC-d PDU size).

For the MIMO case and M1=M2=QPSK: The SS selects the first TFRC test point ($N_{PDUs}$ , *M,* $N_{\underline{codes}}$ and TFRI) according to table 14.1.3.4b.2.1. Same TFRC test point is used for both MIMO data flows.

For the MIMO case and M1=M2=16QAM: The SS selects the first TFRC test point ($N_{PDUs}$ , *M,* $N_{\underline{codes}}$ and TFRI) according to table 14.1.3.4b.2.2. Same TFRC test point is used for both MIMO data flows.

For the MIMO case and M1=16QAM and M2=QPSK: The SS selects the first TFRC test points for MIMO data flows#1 ($N_{PDUs1}$ , *M1,* $N_{\underline{codes}}$ and TFRI1) and MIMO data flows#2 ($N_{PDUs2}$ , *M2,* $N_{\underline{codes}}$ and TFRI2) according to table 14.1.3.4b.2.4.

e) The SS sets $H_{\underline{ID}} = 0$.

f) For the fixed MAC-d PDU size case: The SS creates 4 DL RLC SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). See note 4.

For the flexible MAC-d PDU size case: If the transport block size $TB_{size}$ is >500 bit the SS creates 4 DL RLC SDUs of size 8*FLOOR (($TB_{size}$ – 136 bit)/32) (largest possible RLC SDU size considering octet alignment and MAC-ehs and RLC AM headers). If the transport block size $TB_{size}$ is $\leq$ 500 bit the SS creates 1 DL RLC SDUs of size 8*FLOOR(($TB_{size}$ – 40 bit)/8) . See note 4. The SS segments each of the DL RLC SDUs into one or more DL RLC PDUs according to the *Max_RLC_PDU_size* parameter.

For the MIMO case step f) is repeated for each MIMO data flow.

g) If MIMO is not used then the SS transmits, for each DTCH mapped to HS-DSCH, all the DL RLC PDUs generated in step f) concatenated into a MAC-ehs PDU using the selected TFRC and $H_{\underline{ID}}$. If the radio bearer combination under test includes downlink DTCHs mapped to DCH then the SS transmits, for all DTCHs

mapped to DCH, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test of the actual radio bearer test case. Goto step i).

h) If MIMO is used then the SS transmits, for each DTCH mapped to HS-DSCH and for each MIMO data flow, the DL RLC PDUs generated in step f) concatenated into a MAC-ehs PDUs using the selected TFRC and the HARQ processes $H_{ID}$ and $(H_{ID} + H_{CONF}/2) \bmod H_{CONF}$ respectively. If the radio bearer combination under test includes downlink DTCHs mapped to DCH then the SS transmits, for all DTCHs mapped to DCH, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test of the actual radio bearer test case.

i) The SS checks that the content of the UE returned RLC SDUs have the correct content and are received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

j) The SS sets $H_{ID} = (H_{ID} + 1) \bmod H_{CONF}$ where $H_{CONF}$ is the configured number of processes and equals the number of HARQ processes to be verified by the actual sub-test

k) The SS repeats steps e) to j) for the remaining TFRC test points according to the applicable table in sub-clause 14.1.3.2.1a (principle for Enhanced Layer 2)

l) The SS repeats steps e) to j) for the remaining TFRC test point ($N_{PDUs}$ , $M$, $N_{codes}$ and TFRI) according to the applicable table in sub-clauses 14.1.3.4b.1 (MAC-d PDU size=336) or 14.1.3.4b.2 (MAC-d PDU size=656 or Felxible MAC-d PDU size). m) The SS opens the UE test loop.

n) The SS release the radio bearer. See note 5.

o) Steps a) to n) are repeated for all sub-tests. See note 6.

p) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test. The number of soft channel bits per HARQ process is split equally among the number of HARQ processes configured for the actual sub-test - i.e. “Total number of soft channel bits” for the UE category according to table 14.1.3.1.1 divided by the number of HARQ processes under test. The number of reordering queues are 1 for single HS-DSCH radio bearer configurations. The MAC-hs window size, RLC Transmission window size and RLC Receiving window size shall be configured as specified for the actual sub-test.

NOTE 2: The restricted set of uplink TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signaling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

NOTE 3: The MAC-hs window size and RLC Receiver and transmitter window sizes need to be chosen such that the UE capability for “Minimum total RLC AM and MAC-hs buffer size” is not exceeded for the UE category under test.

NOTE 4: The test data for DTCHs mapped on HS-DSCH is divided into 4 RLC SDUs to keep the maximum SDU size below or equal to 1500 octets (1500 octets is the limit of QoS parameter “Max SDU size” in SM). To allow for testing of the smallest TB sizes a single RLC PDU is used when the TB size is small to reduce the L2 header overhead.

NOTE 5: The Secondary scrambling code in the RADIO BEARER RELEASE message is set to the same value used in the RADIO BEARER SETUP MESSAGE.

NOTE 6: CS radio bearer is setup once during the first sub-test.

Expected sequence (repeated for each sub-test, see note 3)

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| **Case A: PS radio bearers only** | | | | |
| A1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| A2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| A3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| A4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| A5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| A6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| A7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| A8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| A9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| A10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| A11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured. For the PS radio bearer(s) the 'pdcp info' IE shall be omitted. |
| A12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **End of branch for Case A** | | | | |
| **Case B: CS + PS radio bearers** | | | | |
| B1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| B2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| B3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| B4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| B5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| B6 | --> | | PAGING RESPONSE (DCCH) | RR |
| B6a | <-- | | AUTHENTICATION REQUEST | |
| B6b | --> | | AUTHENTICATION RESPONSE | |
| B7 | <-- | | SECURITY MODE COMMAND | |
| B8 | --> | | SECURITY MODE COMPLETE | |
| B9 | <-- | | PAGING TYPE 2 (DCCH) | TMSI (GSM-MAP)/ P-TMSI |
| B9a | --> | | SERVICE REQUEST (DCCH) | GMM |
| B9b | <-- | | SECURITY MODE COMMAND | RRC See note 2 |
| B9c | --> | | SECURITY MODE COMPLETE | RRC |
| B10 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| B10a | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| B11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured |
| B12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B12a | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| B12b | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **End of branch for Case B** | | | | |
| 13 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test |
| 14 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 15 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 16 | SS | | | For each DTCHs mapped on HS-DSCH the SS creates test data for the first test point. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 17 | <-- | | DOWNLINK MAC-ehs PDU (HS-DSCH#1)<br>…<br>DOWNLINK MAC-ehs PDU (HS-DSCH#N)<br><br>DL RLC SDU (DL DCH#1)<br>…<br>DL RLC SDU (DL DCH#M) | For each DTCH mapped on HS-DSCH the SS sends test for HARQ processe *H*ID. For each DTCH mapped on DCH the SS sends test data using the downlink transport format combination under test. |
| 18 | --> | | UPLINK RLC SDUs | The SS checks, for each DTCH, that the content and transport format of the received UL RLC SDUs are correct. |
| 19 | SS | | | The SS sets *H*ID = (*H*ID + 1) modulo $H_{CONF}$. The SS creates test data for the next TFRC and repeat steps 17 to 18 until all TFRCs have been tested. |
| 20 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 21 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 22 | | | RB RELEASE | RRC |
| 23 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 24 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |

Note 1: In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Note 2: For case B (CS+PS radio bearers) the second security mode procedure is needed to enable testing of ciphering on the PS radio bearers.

Note 3: For case A (PS radio bearers) steps A1 to A10 will be executed once during first sub-test. For case B (CS+PS radio bearers) steps B1 to B12 will be executed once during first sub-test.

Specific Message Content:

Use the same RADIO BEARER SETUP message as specified in 34.108 with the following exceptions for step A11, B12a :

| Information Element | Value/remark | Version |
|---|---|---|
| HS-DSCH TB size table | octet aligned | Rel-7 |

### 14.1.3.6 Generic test procedure for HS-DSCH radio bearer combinations with AMR RB configurations using SRB#5 for TFC control

This procedure is used to test AMR radio bearer using SRB#5 for TFC control in combination with HS-DSCH radio bearers. The procedure is run once for each sub-test of the actual HS-DSCH radio bearer test case.

Definition of test variables:

| | |
|---|---|
| $N_{codes}$ | Number of HS-DSCH codes (1..15, maximum number dependent on UE category) |
| $M$ | Type of modulation scheme (QPSK, 16QAM) |
| $TB_{size}$ | Transport Block size |
| $N_{PDUs}$ | Number of MAC-d PDUs |
| $H_{ID}$ | HARQ process identifier (0..7) |

Initial conditions

UE in idle mode

Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test. As part of the RADIO BEARER SETUP the TFC subsets as defined for the actual radio bearer configuration is setup. The radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s). The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers . The Physical channel configuration shall be done for both CS and PS radio bearers combined. Here the transport format combination set for both CS and PS radio bearers shall be provided. See note 1 and note 3.

b) The SS signals the "TFC subset identity" in the TRANSPORT FORMAT COMBINATION CONTROL message on SRB#5 as specified for the sub-test of the actual AMR radio bearer test. See note 6.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test.

d) The SS selects the first TFRC test point ($N_{PDUs}$ , $M$, $N_{\underline{codes}}$ and TFRI) according to the applicable table in sub-clauses 14.1.3.3 (MAC-d PDU size=336) or 14.1.3.4 (MAC-d PDU size=656).

e) The SS sets $H_{\underline{ID}} = 0$.

f) The SS creates 4 DL RLC SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). See note 4.

g) The SS transmits, for each DTCH mapped to HS-DSCH, 4 DL RLC SDUs concatenated into a MAC-hs PDU using the selected TFRC and $H_{\underline{ID}}$. If the radio bearer combination under test includes downlink DTCHs mapped to DCH then the SS transmits, for all DTCHs mapped to DCH, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test of the actual radio bearer test case.

h) The SS checks that the content of the UE returned RLC SDUs have the correct content and are received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

i) The SS sets $H_{\underline{ID}} = (H_{\underline{ID}} + 1)$ modulo $Max_H_{\underline{ID}}$, where $Max_H_{\underline{ID}}$ equals the number of HARQ processes to be verified by the actual sub-test

j) The SS repeats steps f) to i) for the remaining TFRC test point ($N_{PDUs}$ , $M$, $N_{\underline{codes}}$ and TFRI) according to the applicable table in sub-clauses 14.1.3.3 (MAC-d PDU size=336) or 14.1.3.4 (MAC-d PDU size=656) for the UE category and MAC-d PDU size under test.

k) The SS opens the UE test loop.

l) The SS release the radio bearer. See note 5.

m) Steps a) to l) are repeated for all sub-tests. See note 7.

n) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test. The number of soft channel bits per HARQ process is split equally among the number of HARQ processes configured for the actual sub-test - i.e. "Total number of soft channel bits" for the UE category according to table 14.1.3.1.1 divided by the number of HARQ processes under test. The number of reordering queues are 1 for single HS-DSCH radio bearer configurations. The MAC-hs window size, RLC Transmission window size and RLC Receiving window size shall be configured as specified for the actual sub-test.

NOTE 2: Void

NOTE 3: The MAC-hs window size and RLC Receiver and transmitter window sizes need to be chosen such that the UE capability for “Minimum total RLC AM and MAC-hs buffer size” is not exceeded for the UE category under test.

NOTE 4: The test data for DTCHs mapped on HS-DSCH is divided into 4 RLC SDUs to keep the maximum SDU size below or equal to 1500 octets (1500 octets is the limit of QoS parameter “Max SDU size” in SM).

NOTE 5: The Secondary scrambling code in the RADIO BEARER RELEASE message is set to the same value used in the RADIO BEARER SETUP MESSAGE.

NOTE 6: The TFC subset associated with the signalled “TFC subset identity” in the TRANSPORT FORMAT COMBINATION CONTROL message is defined by the actual AMR reference radio bearer under test.

NOTE 7: CS radio bearer is setup once during the first sub-test.

Expected sequence (repeated for each sub-test, see note 3)

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | PAGING RESPONSE (DCCH) | RR |
| 6a | <-- | | AUTHENTICATION REQUEST | |
| 6b | --> | | AUTHENTICATION RESPONSE | |
| 7 | <-- | | SECURITY MODE COMMAND | |
| 8 | --> | | SECURITY MODE COMPLETE | |
| 9 | <-- | | PAGING TYPE 2 (DCCH) | TMSI (GSM-MAP)/ P-TMSI |
| 9a | --> | | SERVICE REQUEST (DCCH) | GMM |
| 9b | <-- | | SECURITY MODE COMMAND | RRC See note 2 |
| 9c | --> | | SECURITY MODE COMPLETE | RRC |
| 10 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 10a | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured<br>The TFC subsets associated with the signalling of the TFC subset identity in the TRANSPORT FORMAT COMBINATION CONTROL message on SRB#5 are setup as part of the RADIO BEARER SETUP message. |
| 12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 12a | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| 12b | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 12c | <-- | | TRANSPORT FORMAT COMBINATION CONTROL message | SRB#5, includes the TFS subset identity IE |
| 13 | | | Void | |
| 14 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 15 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 16 | SS | | | For each DTCHs mapped on HS-DSCH the SS creates test data for the first TFRC . The test data shall be dived into 4 RLC SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 - 8 bits.The SS sets *H*ID = 0. |
| 17 | <-- | | DOWNLINK MAC-hs PDU (HS-DSCH#1)<br>…<br>DOWNLINK MAC-hs PDU (HS-DSCH#N)<br><br>DL RLC SDU (DL DCH#1)<br>…<br>DL RLC SDU (DL DCH#M) | For each DTCH mapped on HS-DSCH the SS sends test data divided into 4 RLC SDUs for HARQ processe *H*ID.<br>For each DTCH mapped on DCH the SS sends test data using the downlink transport format combination under test. |
| 18 | --> | | UPLINK RLC SDUs | The SS checks, for each DTCH, that the content and transport format of the received UL RLC SDUs are correct. |
| 19 | SS | | | The SS sets *H*ID = (*H*ID + 1) modulo *Max_H*ID. The SS creates test data for the next TFRC and repeat steps 17 to 18 until all TFRCs have been tested. |
| 20 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 21 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 22 | | | RB RELEASE | RRC |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 23 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 24 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |

Note 1 In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Note 2 The second security mode procedure is needed to enable testing of ciphering on the PS radio bearers.

Note 3 Steps 1 to 12 will be executed once during first sub-test.

## 14.1.4 General information interoperability radio bearer tests for E-DCH and HS-DSCH combinations

### 14.1.4.1 Generic test procedure for HS-DSCH and E-DCH radio bearer combinations

This procedure is used to test E-DCH radio bearer combinations. The procedure is run once for each sub-test of the actual E-DCH radio bearer test case.

NOTE This test procedure is based on the generic test procedure for radio bearer combinations on HS-DSCH and DCH in sction 14.1.3.5. As the testing of DTCH mapped to HS-DSCH is considered well covered by the radio bearer test cases for radio bearer combinations on HS-DSCH and DCH then the focus in this test procedure is on the uplink DTCH mapped to E-DCH. The main difference compared to the generic test procedure in 14.1.3.5 is that for DTCH mapped to HS-DSCH only one TFRC test point and one HARQ process alternative is tested.

Definition of test variables:

| | |
|---|---|
| $N_{\underline{codes}}$ | The number of HS-DSCH codes (1..15, maximum number dependent on UE category) as specified by the sub-test. |
| $M$ | The type of modulation scheme (QPSK, 16QAM) as specified by the sub-test. |
| $N_{PDUs}$ | The number of MAC-d PDUs for the DTCH(s) mapped on HS-DSCH as specified by the sub-test. |
| $H_{\underline{ID}}$ | The HARQ process identifier (0..7) as specified by the sub-test. |

Initial conditions

UE in idle mode

Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test. For the case when the reference radio bearer configuration includes radio bearers for both CS and PS domain then the radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s). The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers . The Physical channel configuration shall be done for both CS and PS radio bearers combined. Here the transport format combination set for both CS and PS radio bearers shall be provided. See note 1 and note 3.

b) For DTCH mapped to DCH in uplink the SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. See note 2.

c) The SS closes the test loop using UE test loop mode 1 and set the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test.

d) The SS issues an absolute grant that allows the UE to send at maximum bit rate (index 31).

e) The SS sets the HS-DSCH TFRC test point as specified for the sub-test using table 9.2.3.1 in [6] ($N_{PDUs}$ , $M$, $N_{\underline{codes}}$ and $TFRI$).

f) The SS sets $H_{\underline{ID}}$ to the number of HARQ processes specified for the sub-test.

h) The SS transmits, for each DTCH mapped to HS-DSCH, a DL RLC SDUs having the size equal the to the “Test data size” as specified for the sub-test concatenated into a MAC-hs PDU using the selected TFRC and $H_{\underline{ID}}$. If the radio bearer combination under test includes downlink DTCHs mapped to DCH then the SS transmits, for all DTCHs mapped to DCH, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test.

i) The SS checks that the content of the UE returned RLC SDUs have the correct content and are received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

j) The SS opens the UE test loop.

l) The SS release the radio bearer. See note 4.

m) Steps a) to l) are repeated for all sub-tests. See note 5.

n) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test. The number of soft channel bits per HARQ process is split equally among the number of HARQ processes configured for the actual sub-test - i.e. “Total number of soft channel bits” for the UE category according to table 14.1.3.1.1 divided by the number of HARQ processes under test. The number of reordering queues are 1 for single HS-DSCH radio bearer configurations. The MAC-hs window size, RLC Transmission window size and RLC Receiving window size shall be configured as specified for the actual sub-test.

NOTE 2: The restricted set of uplink TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signaling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

NOTE 3: The MAC-hs window size and RLC Receiver and transmitter window sizes need to be chosen such that the UE capability for “Minimum total RLC AM and MAC-hs buffer size” is not exceeded for the UE category under test.

NOTE 4: The Secondary scrambling code in the RADIO BEARER RELEASE message is set to the same value used in the RADIO BEARER SETUP MESSAGE.

NOTE 5: CS radio bearer is setup once during the first sub-test.

Expected sequence (repeated for each sub-test, see note 3)

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| **Case A: PS radio bearers only** | | | | |
| A1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| A2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| A3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| A4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| A5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| A6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| A7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| A8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| A9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| A10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| A11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>.<br>PS radio bearer(s) are configured. For the PS radio bearer(s) the 'pdcp info' IE shall be omitted. |
| A12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **End of branch for Case A** | | | | |
| **Case B: CS + PS radio bearers** | | | | |
| B1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| B2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| B3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| B4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| B5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| B6 | --> | | PAGING RESPONSE (DCCH) | RR |
| B6a | <-- | | AUTHENTICATION REQUEST | |
| B6b | --> | | AUTHENTICATION RESPONSE | |
| B7 | <-- | | SECURITY MODE COMMAND | |
| B8 | --> | | SECURITY MODE COMPLETE | |
| B9 | <-- | | PAGING TYPE 2 (DCCH) | TMSI (GSM-MAP)/ P-TMSI |
| B9a | --> | | SERVICE REQUEST (DCCH) | GMM |
| B9b | <-- | | SECURITY MODE COMMAND | RRC See note 2 |
| B9c | --> | | SECURITY MODE COMPLETE | RRC |
| B10 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| B10a | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| B11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured |
| B12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B12a | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| B12b | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B12c | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test |
| **End of branch for Case B** | | | | |
| 13 | | | Void | |
| 14 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 15 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 16 | SS | | | The SS sets the HS-DSCH TFRC test point ($N_{PDUs}$ , *M*, *N*codes and TFRI). and the number of HARQ processes as as specified for the sub-test. |
| 17 | <-- | | DOWNLINK MAC-hs PDU (HS-DSCH#1)<br>…<br>DOWNLINK MAC-hs PDU (HS-DSCH#N)<br><br>DL RLC SDU (DL DCH#1)<br>…<br>DL RLC SDU (DL DCH#M) | For each DTCH mapped on HS-DSCH the SS sends test data.<br>For each DTCH mapped on DCH the SS sends test data using the downlink transport format combination under test. |
| 18 | --> | | UPLINK RLC SDUs | The SS checks, for each DTCH, that the content and transport format of the received UL RLC SDUs are correct. |
| 19 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 20 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 21 | | | RB RELEASE | RRC |
| 22 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 23 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |

Note 1 In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Note 2 For case B (CS+PS radio bearers) the second security mode procedure is needed to enable testing of ciphering on the PS radio bearers.

Note 3 For case A (PS radio bearers) steps A1 to A10 will be executed once during first sub-test. For case B (CS+PS radio bearers) steps B1 to B12 will be executed once during first sub-test.

### 14.1.4.1a Generic test procedure for HS-DSCH and E-DCH radio bearer combinations with downlink enhanced Layer 2

This procedure is used to test HS-DSCH and E-DCH radio bearer combinations for the case of downlink enhanced Layer 2 is used. The procedure is run once for each sub-test of the actual HS-DSCH and E-DCH radio bearer test case.

This procedure is the same as the procedure in 14.1.4.1 with the exception that MAC-ehs is used in step h) instead of MAC-hs and table 9.2.3.2 in [6] is used for TFRC calculation in step e instead of table 9.2.3.1.

Specific Message Content:

Use the same RADIO BEARER SETUP message as specified in 34.108 with the following exceptions for step A11, B12a :

| Information Element | Value/remark | Version |
|---|---|---|
| HS-DSCH TB size table | octet aligned | Rel-7 |

### 14.1.4.2 Generic test procedure for HS-DSCH and E-DCH radio bearer combinations with AMR RB configurations using SRB#5 for TFC control

This procedure is used to test AMR radio bearer using SRB#5 for TFC control in combination with HS-DSCH/E-DCH radio bearers. The procedure is run once for each sub-test of the actual E-DCH radio bearer test case.

Definition of test variables:

| | |
|---|---|
| $N_{\underline{codes}}$ | The number of HS-DSCH codes (1..15, maximum number dependent on UE category) as specified by the sub-test. |

| | |
|---|---|
| $M$ | The type of modulation scheme (QPSK, 16QAM) as specified by the sub-test. |
| $N_{PDUs}$ | The number of MAC-d PDUs for the DTCH(s) mapped on HS-DSCH as specified by the sub-test. |
| $H_{\underline{ID}}$ | The HARQ process identifier (0..7) as specified by the sub-test. |

Initial conditions

UE in idle mode

Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test. The radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s). The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers . The Physical channel configuration shall be done for both CS and PS radio bearers combined. Here the transport format combination set for both CS and PS radio bearers shall be provided. See note 1 and note 2.

b) The SS signals the "TFC subset identity" in the TRANSPORT FORMAT COMBINATION CONTROL message on SRB#5 as specified for the sub-test of the actual AMR radio bearer test. See note 4.

c) The SS closes the test loop using UE test loop mode 1 and set the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test.

d) The SS issues an absolute grant that allows the UE to send at maximum bit rate (signalling value 29).

e) The SS sets the HS-DSCH TFRC test point as specified for the sub-test ($N_{PDUs}$ , $M$, $N_{\underline{codes}}$ and $TFRI$).

f) The SS sets $H_{\underline{ID}}$ to the number of HARQ processes specified for the sub-test.

h) The SS transmits, for each DTCH mapped to HS-DSCH, a DL RLC SDUs having the size equal the to the "Test data size" as specified for the sub-test concatenated into a MAC-hs PDU using the selected TFRC and $H_{\underline{ID}}$. If the radio bearer combination under test includes downlink DTCHs mapped to DCH then the SS transmits, for all DTCHs mapped to DCH, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test.

i) The SS checks that the content of the UE returned RLC SDUs have the correct content and are received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

j) The SS opens the UE test loop.

l) The SS release the radio bearer. See note 3.

m) Steps a) to l) are repeated for all sub-tests. See note 5.

n) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test. The number of soft channel bits per HARQ process is split equally among the number of HARQ processes configured for the actual sub-test - i.e. "Total number of soft channel bits" for the UE category according to table 14.1.3.1.1 divided by the number of HARQ processes under test. The number of reordering queues are 1 for single HS-DSCH radio bearer configurations. The MAC-hs window size, RLC Transmission window size and RLC Receiving window size shall be configured as specified for the actual sub-test.

NOTE 2: The MAC-hs window size and RLC Receiver and transmitter window sizes need to be chosen such that the UE capability for "Minimum total RLC AM and MAC-hs buffer size" is not exceeded for the UE category under test.

NOTE 3: The Secondary scrambling code in the RADIO BEARER RELEASE message is set to the same value used in the RADIO BEARER SETUP MESSAGE.

NOTE 4: The TFC subset associated with the signalled "TFC subset identity" in the TRANSPORT FORMAT COMBINATION CONTROL message is defined by the actual AMR reference radio bearer under test.

NOTE 5: CS radio bearer is setup once during the first sub-test.

Expected sequence (repeated for each sub-test, see note 3)

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | PAGING RESPONSE (DCCH) | RR |
| 7 | <-- | | AUTHENTICATION REQUEST | |
| 8 | --> | | AUTHENTICATION RESPONSE | |
| 9 | <-- | | SECURITY MODE COMMAND | |
| 10 | --> | | SECURITY MODE COMPLETE | |
| 11 | <-- | | PAGING TYPE 2 (DCCH) | TMSI (GSM-MAP)/P-TMSI |
| 12 | --> | | SERVICE REQUEST (DCCH) | GMM |
| 13 | <-- | | SECURITY MODE COMMAND | RRC See note 2 |
| 14 | --> | | SECURITY MODE COMPLETE | RRC |
| 15 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 16 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 17 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured |
| 18 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 19 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| 20 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 21 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL message | SRB#5, includes the TFS subset identity IE |
| 22 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 23 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 24 | SS | | | The SS sets the HS-DSCH TFRC test point ($N_{PDUs}$ , $M$, $N$codes and TFRI).<br>and the number of HARQ processes as as specified for the sub-test. |
| 25 | <-- | | DOWNLINK MAC-hs PDU (HS-DSCH#1)<br>…<br>DOWNLINK MAC-hs PDU (HS-DSCH#N)<br><br>DL RLC SDU (DL DCH#1)<br>…<br>DL RLC SDU (DL DCH#M) | For each DTCH mapped on HS-DSCH the SS sends test data.<br>For each DTCH mapped on DCH the SS sends test data using the downlink transport format combination under test. |
| 26 | --> | | UPLINK RLC SDUs | The SS checks, for each DTCH, that the content and transport format of the received UL RLC SDUs are correct. |
| 27 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 28 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 29 | | | RB RELEASE | RRC |
| 30 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 31 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |

Note 1 In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Note 2 The second security mode procedure is needed to enable testing of ciphering on the PS radio bearers.

Note 3 Steps 1 to 18 will be executed once during first sub-test.

## 14.1.5 Generic test procedure for radio bearers on MTCH

### Initial conditions

System Simulator: 1 MBMS cell

The UE is in CELL_FACH state as specified in clause 7.6 of TS 34.108.

The UE has selected the broadcast service or joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

### Test procedure

a) The UE is in the CELL_FACH state. The SS notifies on MICH and MCCH about the start of an MBMS session and waits for the UE to activate MTCH reception.

b) The SS closes the test loop using UE test loop mode 3.

c) The SS broadcast 10 RLC SDUs on the MTCH configured on the concerned MBMS radio bearer. The MBMS data is broadcasted using RLC SDU size and transport format as specified for sub-test 1.

d) The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the UE has received at least one RLC SDU and records the reported value.

e) Repeat steps f) and g) for the remaining sub-tests.

f) The SS broadcast 10 RLC SDUs on the MTCH configured on the concerned MBMS radio bearer. The MBMS data is broadcasted using RLC SDU size and transport format as specified for the sub-test under test.

g) The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the UE has received at least one RLC SDU of the MBMS data sent in step f). The SS records the reported value. See note 1.

h) The SS deactivates the UE test loop mode 3.

NOTE 1: For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. To enable the SS to measure the number of received RLC SDUs for the different sub-tests then the SS needs to record the reported values for each sub-test and make the checking of the reported value relative to the previously reported value.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | ACTIVATE RB TEST MODE | |
| 2 | → | | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | MBMS MODIFIED SERVICES INFORMATION | MBMS session start. The SS also sets the Notification Indicator on MICH. The SS waits for the UE to establish the MTCH according to the activation time. |
| 4 | ← | | CLOSE UE TEST LOOP | |
| 5 | → | | CLOSE UE TEST LOOP COMPLETE | Loop back mode 3 on MTCH is activated. |
| 6 | | SS | | The SS transmits 10 RLC SDUs on the MTCH. The MBMS data is broadcasted using RLC SDU size and transport format as specified for sub-test 1. |
| 7 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 8 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than zero and records the value. |
| 9 | | SS | | The SS repeats steps 10 to 12 for the remaining sub-tests (sub-test 2 etc.). |
| 10 | | SS | | The SS transmits 10 RLC SDUs on the MTCH. The MBMS data is broadcasted using RLC SDU size and transport format as specified for the current sub-test under test. |
| 11 | ← | | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 12 | → | | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than the recorded value from the previous sub-test. The SS records the reported value. |
| 13 | ← | | OPEN UE TEST LOOP | |
| 14 | → | | OPEN UE TEST LOOP COMPLETE | |
| 15 | ← | | DEACTIVATE RB TEST MODE | |
| 16 | → | | DEACTIVATE RB TEST MODE COMPLETE | |

Specific Message Contents

MBMS MODIFIED SERVICES INFORMATION (Step 3)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Modified service list | |
| - MBMS Transmission identity | |
| - MBMS Service ID | 1 |
| - MBMS Session ID | 1 |
| - MBMS required UE action | Acquire PTM RB info |
| MBMS p-t-m activation time | SS shall choose a value which is sufficient far ahead for the UE to establish the MTCH |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Steps 8)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than zero |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Steps 12)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than the value reported at the previous sub-test. |

## 14.1.6 Generic test procedure for MBMS PTP radio bearers for HS-DSCH combinations

This procedure is used to test MBMS PTP radio bearer combinations for HS-DSCH. The procedure is run once for each sub-test of the actual MBMS PTP radio bearer test case. The generic test procedure has two branches: one for the MBMS Selective Service case and one for the MBMS Multicast Service case. The branch to use is specified in the specific test cases.

NOTE The testing of MBMS PTP radio bearer combinations on DPCH and HS-PDSCH is focusing on verifying that the UE is capable to establish the radio bearer combination and to verify correct data transfer using all the possible uplink TFS for transport channels mapped on DCH.This test procedure is based on the generic test procedure for radio bearer combinations on HS-DSCH and DCH in sction 14.1.3.5. The main difference compared to the generic test procedure in 14.1.3.5 is that for DTCH mapped to HS-DSCH only one TFRC test point and one HARQ process alternative is tested.

### Initial conditions

System Simulator: 1 MBMS cell

The UE is in idle mode state as specified in clause 7.6 of TS 34.108.

The UE has selected the broadcast service or joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

### Test procedure

a) The UE is in the idle mode state.

b) The UE shall detect the available MBMS services by acquiring the MBMS MODIFIED SERVICES INFORMATION (including IE “MBMS required UE action” set to “Request PTP RB”) and the MBMS GENERAL INFORMATION.

c) The UE shall request a p-t-p RB establishment.

d) The SS transmits a RADIO BEARER SETUP message to the UE. This message requests the establishment of a radio access bearer. The UE shall establish this radio bearer. Then the UE transmits a RADIO BEARER SETUP COMPLETE message using AM RLC. See note 1 and note 3.

e) The SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. See note 2.

f) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test.

g) The SS selects the first TFRC test point ($N_{PDUs}$ , $M$, $N_{\underline{codes}}$ and TFRI) according to the applicable table in sub-clauses 14.1.3.3 (MAC-d PDU size=336) or 14.1.3.4 (MAC-d PDU size=656).

h) The SS sets $H_{\underline{ID}} = 0$.

i) (void)

j) The SS transmits, for each DTCH mapped to HS-DSCH, a DL RLC SDU having the size equal the to the “Test data size” as specified for the sub-test concatenated into a MAC-hs PDU using the selected TFRC and $H_{\underline{ID}}$. If the radio bearer combination under test includes downlink DTCHs mapped to DCH then the SS transmits, for all DTCHs mapped to DCH, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test of the actual radio bearer test case.

k) The SS checks that the content of the UE returned RLC SDUs have the correct content and are received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

l) The SS opens the UE test loop.

m) Steps e) to l) are repeated for all sub-tests.

n) The SS release the radio bearer. See note 5.

o) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test. The number of soft channel bits per HARQ process is split equally among the number of HARQ processes configured for the actual sub-test - i.e. “Total number of soft channel bits” for the UE category according to table 14.1.3.1.1 divided by the number of HARQ processes under test. The number of reordering queues are 1 for single HS-DSCH radio bearer configurations. The MAC-hs window size, RLC Transmission window size and RLC Receiving window size shall be configured as specified for the actual sub-test.

NOTE 2: The restricted set of uplink TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signaling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

NOTE 3: The MAC-hs window size and RLC Receiver and transmitter window sizes need to be chosen such that the UE capability for “Minimum total RLC AM and MAC-hs buffer size” is not exceeded for the UE category under test.

NOTE 4: (void)

NOTE 5: The Secondary scrambling code in the RADIO BEARER RELEASE message is set to the same value used in the RADIO BEARER SETUP MESSAGE.

Expected sequence

| Step | Direction | | Message | Comment |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | Void | |
| 2 | | → | Void | |
| 3 | | ← | MBMS MODIFIED SERVICES INFORMATION | "MBMS required UE action" set to Request PTP RB. |
| 4 | | | | The UE shall continue acquiring the above messages until it has received a consistent set of MCCH information in the same modification period. |
| 5 | | ← | MBMS GENERAL INFORMATION | |
| 6 | | → | RRC CONNECTION REQUEST | The UE transmits the message with Establishment cause set to “MBMS ptp RB request” and with the “MBMS Selected Services Short” IE referring to the concerned MBMS Selected service and the corresponding Modification period identity. |
| 7 | | ← | RRC CONNECTION SETUP | RRC state indicator set to Cell_DCH |
| 8 | | → | RRC CONNECTION SETUP COMPLETE | |

| | | | |
|---|---|---|---|
| 9 | → | MBMS MODIFICATION REQUEST | Only for the MBMS broadcast case: The UE completing the RRC Connection Setup procedure shall initiate the MBMS MODIFICATION REQUEST procedure. This message may be received at any point after step 8 and before step 24. |
| 10 | SS | | The SS verifies that the IE "Service type" in the received SERVICE REQUEST message is set to “MBMS Broadcast Service Reception” or “MBMS service used by the test case” respectively depending on the MBMS service used by the test case. |
| 11 | ← | SECURITY MODE COMMAND | |
| 12 | → | SECURITY MODE COMPLETE | |
| 12a | ← | ACTIVATE RB TEST MODE | |
| 12b | → | ACTIVATE RB TEST MODE COMPLETE | |
| 13 | ← | RADIO BEARER SETUP | |
| 14 | → | RADIO BEARER SETUP COMPLETE | |
| 15 | | Void | |
| 16 | | Void | |
| 17 | <-- | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test |
| 18 | <-- | CLOSE UE TEST LOOP (DCCH) | The SS sets the HS-DSCH TFRC test point and the number of HARQ processes as specified for the sub-test. |
| 19 | --> | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 20 | SS | | For each DTCHs mapped on HS-DSCH the SS creates test data for the first TFRC . The test data shall be dived into 4 RLC SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 - 8 bits.The SS sets $H_{ID}$ = 0. |
| 21 | <-- | DOWNLINK MAC-hs PDU (HS-DSCH#1)<br>…<br>DOWNLINK MAC-hs PDU (HS-DSCH#N)<br><br>DL RLC SDU (DL DCH#1)<br>…<br>DL RLC SDU (DL DCH#M) | For each DTCH mapped on HS-DSCH the SS sends test data.<br>For each DTCH mapped on DCH the SS sends test data using the downlink transport format combination under test. |
| 22 | --> | UPLINK RLC SDUs | The SS checks, for each DTCH, that the content and transport format of the received UL RLC SDUs are correct. |
| 23 | <-- | OPEN UE TEST LOOP (DCCH) | TC |
| 24 | --> | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 25 | SS | | The SS repeats steps 15 to 24 for each sub-test |
| 26 | | RB RELEASE | RRC |
| 27 | <-- | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 28 | --> | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |

Specific Message Contents

MBMS MODIFIED SERVICES INFORMATION (Step 3)

| Information Element | Value/remark |
|---|---|
| Modified services list<br>- MBMS Transmission identity<br>- MBMS required UE action | Only 1 entry<br>MBMS Transmission identity<br>request PTP RB |

RRC CONNECTION REQUEST for the MBMS broadcast case (Step 6)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI |
| Establishment Cause | MBMS ptp RB request |
| Domain indicator | PS domain |
| MBMS Selected Services | |
| - MBMS Selected Services | Only 1 entry |
| - MBMS Selected Service ID | MBMS short transmission identity referring to the service the UE has selected |
| - Modification period identity | Indicates the modification period the MBMS short transmission identities refer to |

RRC CONNECTION REQUEST for the MBMS muticast case (Step 6)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Same as the registered TMSI or P-TMSI |
| Establishment Cause | MBMS ptp RB request |
| Domain indicator | PS domain |

RRC CONNECTION SETUP (Step 7)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Initial UE identity | Set to same value as received in Step 7 |
| RRC State Indicator | Cell_DCH |

# 14.2 Combinations on DPCH

## 14.2.1 Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH

Test to verify establishment and signalling of stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.1.

The test case is performed by running test case 9.4.1 (Location updating / accepted) using the stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.1.

## 14.2.2 Stand-alone UL:3.4 DL:3.4 kbps SRBs for DCCH

Test to verify establishment and signalling of stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.2.

The test case is performed by running test case 9.4.1 (Location updating / accepted) using the stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.2.

## 14.2.3 Stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH

Impicitely tested.

NOTE The stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH in TS 34.108, clause 6.10.2.4.1.3 is the default signalling radio bearer used in the generic setup procedure as specified in TS 34.108 clasue 7.

## 14.2.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.4.1 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

#### 14.2.4.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.4.

#### 14.2.4.3 Method of test

See 14.1.1 for test procedure. However, in this test the RM attribute values used shall be derived separately in the UL and DL as the mid-values of the RM attríbute value ranges as specified by the reference radio bearer configuration

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

#### 14.2.4.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x81); RB6/TF1 (1x103); and RB7/TF1 (1x60).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.
   - for sub-test 2: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS

## 14.2.4a Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 14.2.4a.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.4a.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.4a.

#### 14.2.4a.3 Method of test

See 14.1.1 for test procedure. However, in this test the RM attribute values used shall be derived separately in the UL and DL as the mid-values of the RM attríbute value ranges as specified by the reference radio bearer configuration.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0) |
| UL_TFC5 | (TF5, TF4, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF0, TF1) |
| UL_TFC9 | (TF3, TF2, TF0, TF1) |
| UL_TFC10 | (TF4, TF3, TF0, TF1) |
| UL_TFC11 | (TF5, TF4, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0) |
| DL_TFC5 | (TF5, TF4, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF0, TF1) |
| DL_TFC9 | (TF3, TF2, TF0, TF1) |
| DL_TFC10 | (TF4, TF3, TF0, TF1) |
| DL_TFC11 | (TF5, TF4, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.

See clause 14.1.1 for test procedure.

### 14.2.4a.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53)
   - for sub-test 3: RB5/TF3 (1x55) and RB6/TF2 (1x63)
   - for sub-test 4: RB5/TF4 (1x75) and RB6/TF3 (1x84)
   - for sub-test 5: RB5/TF5 (1x81), RB6/TF4 (1x103) and RB7/TF1 (1x60)

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.

   - for sub-test 2,3 and 4: an RLC SDU on RB5 and RB6 having the same content as sent by SS; and no data shall be received on RB7.

   - for sub-test 5: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS.

## 14.2.4b Conversational / speech / UL:(12.2 7.4 5.9 4.75) DL:(12.2 7.4 5.9 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH + DL:0.15 kbps SRB#5 for DCCH

### 14.2.4b.1 Conformance requirement

See clause 14.2.4.1.

### 14.2.4b.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.4b.

### 14.2.4b.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x87 | N/A | N/A |
| | TF4, bits | 1x61 | 1x103 | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0) |
| UL_TFC5 | (TF5, TF4, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF0, TF1) |
| UL_TFC9 | (TF3, TF2, TF0, TF1) |
| UL_TFC10 | (TF4, TF3, TF0, TF1) |
| UL_TFC11 | (TF5, TF4, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH1 | DCCH2 (SRB#5) |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 | 0x3 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x148 | 1x3 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A | N/A |
| | TF3, bits | 1x55 | 1x87 | N/A | N/A | N/A |
| | TF4, bits | 1x61 | 1x103 | N/A | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH1, DCCH2) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0, TF0) |
| DL_TFC5 | (TF5, TF4, TF1, TF0, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC8 | (TF2, TF1, TF0, TF1, TF0) |
| DL_TFC9 | (TF3, TF2, TF0, TF1, TF0) |
| DL_TFC10 | (TF4, TF3, TF0, TF1, TF0) |
| DL_TFC11 | (TF5, TF4, TF1, TF1, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC13 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC14 | (TF2, TF1, TF0, TF0, TF1) |
| DL_TFC15 | (TF3, TF2, TF0, TF0, TF1) |
| DL_TFC16 | (TF4, TF3, TF0, TF0, TF1) |
| DL_TFC17 | (TF5, TF4, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF0, TF1, TF1) |
| DL_TFC21 | (TF3, TF2, TF0, TF1, TF1) |
| DL_TFC22 | (TF4, TF3, TF0, TF1, TF1) |
| DL_TFC23 | (TF5, TF4, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | TFC subset identity (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, DL_TFC7, DL_TFC12, UL_TFC0, UL_TFC6 | 0 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, DL_TFC8, DL_TFC12, UL_TFC0, UL_TFC6 | 0 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, DL_TFC9, DL_TFC12, UL_TFC0, UL_TFC6 | 1 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, DL_TFC10, DL_TFC12, UL_TFC0, UL_TFC6 | 2 | RB5: 61 bits<br>RB6: 87 bits<br>RB7: 60 bits | RB5: 61 bits<br>RB6: 87 bits<br>RB7: No data |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, DL_TFC11, DL_TFC12, UL_TFC0, UL_TFC6 | 3 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits |

NOTE 1: TFC subset identity shall be signalled by the SS on the downlink SRB#5, see generic test procedure in clause 14.1.1a.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.

See clause 14.1.1a for test procedure.

### 14.2.4b.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).

- for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53)
- for sub-test 3: RB5/TF3 (1x55) and RB6/TF2 (1x63)
- for sub-test 4: RB5/TF4 (1x61) and RB6/TF3 (1x87)
- for sub-test 5: RB5/TF5 (1x81), RB6/TF4 (1x103) and RB7/TF1 (1x60)

3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.
   - for sub-test 2,3 and 4: an RLC SDU on RB5 and RB6 having the same content as sent by SS; and no data shall be received on RB7.
   - for sub-test 5: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS.

## 14.2.5 Conversational / speech / UL:10.2 DL:10.2 kbps / CS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 14.2.5.1 Conformance requirement

See clause 14.2.4.1.

### 14.2.5.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.5.

### 14.2.5.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65 | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x99 | 1x40 | 1x148 |
| | TF2, bits | 1x65 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x99 | 1x40 | 1x148 |
| | TF2, bits | 1x65 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note2) | Test data size (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 14.1.1 for test procedure.

#### 14.2.5.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x65); RB6/TF1 (1x99); and RB7/TF1 (1x40).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.
   - for sub-test 2: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS.

### 14.2.5a Conversational / speech / UL:(10.2, 6.7, 5.9, 4.75) DL:(10.2, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 14.2.5a.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.5a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.5a.

#### 14.2.5a.3 Method of test

See 14.1.1 for test procedure. However, in this test the RM attribute values used shall be derived separately in the UL and DL as the mid-values of the RM attríbute value ranges as specified by the reference radio bearer configuration.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65 | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x40 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A | N/A |
| | TF4, bits | 1x58 | 1x99 | N/A | N/A |
| | TF5, bits | 1x65 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0) |
| UL_TFC5 | (TF5, TF4, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF0, TF1) |
| UL_TFC9 | (TF3, TF2, TF0, TF1) |
| UL_TFC10 | (TF4, TF3, TF0, TF1) |
| UL_TFC11 | (TF5, TF4, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x40 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A | N/A |
| | TF4, bits | 1x58 | 1x99 | N/A | N/A |
| | TF5, bits | 1x65 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0) |
| DL_TFC5 | (TF5, TF4, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF0, TF1) |
| DL_TFC9 | (TF3, TF2, TF0, TF1) |
| DL_TFC10 | (TF4, TF3, TF0, TF1) |
| DL_TFC11 | (TF5, TF4, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 39 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 40 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 40 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10 | RB5: 58 bits<br>RB6: 76 bits<br>RB7: 40 bits | RB5: 58 bits<br>RB6: 76 bits<br>RB7: No data |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.

See clause 14.1.1 for test procedure.

### 14.2.5a.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53)
   - for sub-test 3: RB5/TF3 (1x55) and RB6/TF2 (1x63)
   - for sub-test 4: RB5/TF4 (1x58) and RB6/TF3 (1x76)
   - for sub-test 5: RB5/TF5 (1x65), RB6/TF4 (1x99) and RB7/TF1 (1x40)

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by the SS; and no data shall be received on RB6 or RB7.

   - for sub-test 2, 3 and 4: an RLC SDU on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7.

   - for sub-test 5: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by the SS.

## 14.2.6 Conversational / speech / UL:7.95 DL:7.95 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.6.1 Conformance requirement

See clause 14.2.4.1.

### 14.2.6.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.6.

### 14.2.6.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x75 | 0x84 | 0X60 | 0x148 |
| | TF1, bits | 1x39 | 1x84 | N/A | 1x148 |
| | TF2, bits | 1x75 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF0, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x84 | 0X60 | 0x148 |
| | TF1, bits | 1x39 | 1x84 | N/A | 1x148 |
| | TF2, bits | 1x75 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF0, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (note2) | Test data size (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 84 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 14.1.1 for test procedure.

#### 14.2.6.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x75) and RB6/TF1 (1x84).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS; and no data shall be received on RB7.

## 14.2.7 Conversational / speech / UL:7.4 DL:7.4 kbps / CS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.2.7.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.7.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.7.

#### 14.2.7.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x61 | 0x87 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x87 | N/A | 1x148 |
| | TF2, bits | 1x61 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF0, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x87 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x87 | N/A | 1x148 |
| | TF2, bits | 1x61 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF0, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (note2) | Test data size (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 87 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 61 bits<br>RB6: 87 bits<br>RB7: 60 bits | RB5: 61 bits<br>RB6: 87 bits<br>RB7: No data |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 14.1.1 for test procedure.

### 14.2.7.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x61) and RB6/TF1 (1x87).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS; and no data shall be received on RB7.

## 14.2.7a Conversational / speech / UL:(7.4, 6.7, 5.9, 4.75) DL:(7.4, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 14.2.7a.1 Conformance requirement

See clause 14.2.4.1.

### 14.2.7a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.7a.

### 14.2.7a.3 Method of test

See 14.1.1 for test procedure. However, in this test the RM attribute values used shall be derived separately in the UL and DL as the mid-values of the RM attríbute value ranges as specified by the reference radio bearer configuration.

Uplink TFS:

| | **TFI** | **RB5 (RAB subflow #1)** | **RB6 (RAB subflow #2)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x61 | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A |
| | TF4, bits | 1x58 | 1x87 | N/A |
| | TF5, bits | 1x61 | N/A | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, RB7,DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF3, TF2, TF0) |
| UL_TFC4 | (TF4, TF3, TF0) |
| UL_TFC5 | (TF5, TF4, TF0) |
| UL_TFC6 | (TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1) |
| UL_TFC9 | (TF3, TF2, TF1) |
| UL_TFC10 | (TF4, TF3, TF1) |
| UL_TFC11 | (TF5, TF4, TF1) |

Downlink TFS:

| | | **RB5 (RAB subflow #1)** | **RB6 (RAB subflow #2)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A |
| | TF4, bits | 1x58 | 1x87 | N/A |
| | TF5, bits | 1x61 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF3, TF2, TF0) |
| DL_TFC4 | (TF4, TF3, TF0) |
| DL_TFC5 | (TF5, TF4, TF0) |
| DL_TFC6 | (TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1) |
| DL_TFC9 | (TF3, TF2, TF1) |
| DL_TFC10 | (TF4, TF3, TF1) |
| DL_TFC11 | (TF5, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 39 bits<br>RB6: 87 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8 | RB5: 42 bits<br>RB6: 53 bits | RB5: 42 bits<br>RB6: 53 bits |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9 | RB5: 55 bits<br>RB6: 63 bits | RB5: 55 bits<br>RB6: 63 bits |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10 | RB5: 58 bits<br>RB6: 76 bits | RB5: 58 bits<br>RB6: 76 bits |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 61 bits<br>RB6: 87 bits | RB5: 61 bits<br>RB6: 87 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.

See clause 14.1.1 for test procedure.

#### 14.2.7a.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53)
   - for sub-test 3: RB5/TF3 (1x55) and RB6/TF2 (1x63)
   - for sub-test 4: RB5/TF4 (1x58) and RB6/TF3 (1x76)
   - for sub-test 5: RB5/TF5 (1x61) and RB6/TF4 (1x87)
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by the SS; and no data shall be received on RB6.
   - for sub-test 2 to 5: an RLC SDU on RB5 and RB6 having the same content as sent by the SS.

### 14.2.8 Conversational / speech / UL:6.7 DL:6.7 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.2.8.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.8.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.8.

#### 14.2.8.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x58 | 0x76 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x76 | N/A | 1x148 |
| | TF2, bits | 1x58 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF0, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x76 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x76 | N/A | 1x148 |
| | TF2, bits | 1x58 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF0, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (note2) | Test data size (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 76 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 58 bits<br>RB6: 76 bits<br>RB7: 60 bits | RB5: 58 bits<br>RB6: 76 bits<br>RB7: No data |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 14.1.1 for test procedure.

#### 14.2.8.4 Test requirements

See clause 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x58) and RB6/TF1 (1x76).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS ; and no data shall be received on RB7

### 14.2.9 Conversational / speech / UL:5.9 DL:5.9 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.2.9.1 Conformance requirement

See clause 14.2.4.1.

14.2.9.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.9.

14.2.9.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x55 | 0x63 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x63 | N/A | 1x148 |
| | TF2, bits | 1x55 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF0, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x63 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x63 | N/A | 1x148 |
| | TF2, bits | 1x55 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF0, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (note2) | Test data size (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 63 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 14.1.1 for test procedure.

#### 14.2.9.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x55) and RB6/TF1 (1x63).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS; and no data shall be received on RB7

### 14.2.10 Conversational / speech / UL:5.15 DL:5.15 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.2.10.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.10.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.10.

#### 14.2.10.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x49 | 0x54 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x54 | N/A | 1x148 |
| | TF2, bits | 1x49 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF0, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x54 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x54 | N/A | 1x148 |
| | TF2, bits | 1x49 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF0, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (note2) | Test data size (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 54 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 49 bits<br>RB6: 54 bits<br>RB7: 60 bits | RB5: 49 bits<br>RB6: 54 bits<br>RB7: No data |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 14.1.1 for test procedure.

#### 14.2.10.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x49) and RB6/TF1 (1x54).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS; and no data shall be received on RB7.

### 14.2.11 Conversational / speech / UL:4.75 DL:4.75 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.2.11.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.11.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.11.

#### 14.2.11.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x49 | 0x53 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | N/A | 1x148 |
| | TF2, bits | 1x42 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF0, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x53 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | N/A | 1x148 |
| | TF2, bits | 1x42 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF0, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (note2) | Test data size (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 53 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 14.1.1 for test procedure.

### 14.2.11.4 Test requirements

See clause 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15 the UE transmitted transport format shall be

   - for sub-test 1: RB5/TF1 (1x39).

   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

## 14.2.12 Conversational / unknown / UL:28.8 DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.12.1 Conformance requirement

See 14.2.4.1.

### 14.2.12.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.12.

### 14.2.12.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: 'Timer based discard without explicit signalling' is configured in uplink to secure that the UE will be able to return data in uplink for the case when the UE test loop function, due to processing delays, will not deliver the SDUs in one and the same TTI, but instead in two subsequent TTIs. | |

Uplink TFS:

| | TFI | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note2 ) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 576 | RB5: 576 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 576 | RB5: 2x576 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 14.1.1 for test procedure.

### 14.2.12.4 Test requirements

See clause 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
   - for sub-test 2: RB5/TF2 (2x576) or RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 2: two RLC SDUs on RB5 having the same content as sent by SS.

## 14.2.13 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.13.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI

#### 14.2.13.1.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.13.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.13 for the 20 ms TTI case.

#### 14.2.13.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 2x640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 14.1.1 for test procedure.

#### 14.2.13.1.4 Test requirements

See clause 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (2x640).
3. At step 15 the UE shall return
   - for sub-test 1: two RLC SDUs on RB5 having the same content as sent by SS.

### 14.2.13.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI

#### 14.2.13.2.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.13.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.13 for the 40 ms TTI case.

#### 14.2.13.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 4x640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

### 14.2.13.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (4x640).
3. At step 15 the UE shall return
   - for sub-test 1: four RLC SDUs on RB5 having the same content as sent by SS.

## 14.2.14 Conversational / unknown / UL:32 DL:32 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.14.1 Conversational / unknown / UL:32 DL:32 kbps / CS RAB / 20 ms TTI

#### 14.2.14.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.14.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.14 for the 20 ms TTI case.

#### 14.2.14.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 1x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 1x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

#### 14.2.14.1.4 Test requirements

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x640).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

### 14.2.14.2 Conversational / unknown / UL:32 DL:32 kbps / CS RAB / 40 ms TTI

#### 14.2.14.2.1 Conformance requirement

See 14.2.4.1.

#### 14.2.14.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.14 for the 40 ms TTI case.

#### 14.2.14.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 2x640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

#### 14.2.14.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (2x640).
3. At step 15 the UE shall return
   - for sub-test 1: two RLC SDUs on RB5 having the same content as sent by SS.

## 14.2.15 Streaming / unknown / UL:14.4/DL:14.4 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.2.15.1 Conformance requirement

See 14.2.4.1.

#### 14.2.15.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.15.

14.2.15.3 Method of test

Uplink TFS:

| | TFI | RB5 (14.4 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (14.4 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 576 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

14.2.15.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

## 14.2.16 Streaming / unknown / UL:28.8/DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.16.1 Conformance requirement

See 14.2.4.1.

### 14.2.16.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.16.

### 14.2.16.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 576 | RB5: 576 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 576 | RB5: 2x576 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

### 14.2.16.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
   - for sub-test 2: RB5/TF2 (2x576) or RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 2: two RLC SDU on RB5 having the same content as sent by SS.

## 14.2.17 Streaming / unknown / UL:57.6/DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.17.1 Conformance requirement

See 14.2.4.1.

### 14.2.17.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.17.

14.2.17.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | **TFI** | **RB5 (57.6 kbps)** | **DCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |
| | TF3, bits | 3x576 | N/A |
| | TF4, bits | 4x576 | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | **TFI** | **RB5 (57.6 kbps)** | **DCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |
| | TF3, bits | 3x576 | N/A |
| | TF4, bits | 4x576 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5, | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 576 | RB5: 576 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 576 | RB5: 2x576 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 576 | RB5: 3x576 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 576 | RB5: 4x576 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

### 14.2.17.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
   - for sub-test 2: RB5/TF2 (2x576) or RB5/TF1 (1x576).
   - for sub-test 3: RB5/TF3 (3x576) or RB5/TF1 (1x576).
   - for sub-test 4: RB5/TF4 (4x576) or RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: one RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 2: two RLC SDU on RB5 having the same content as sent by SS.

- for sub-test 3: three RLC SDU on RB5 having the same content as sent by SS.
- for sub-test 4: four RLC SDU on RB5 having the same content as sent by SS.

## 14.2.18 Void

## 14.2.19 Void

## 14.2.20 Void

## 14.2.21 Void

## 14.2.22 Void

## 14.2.23 Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.23.1 Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC,10 ms TTI)

#### 14.2.23.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.23.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.23 for the turbo channel coding and uplink 10 ms TTI case.

#### 14.2.23.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312 | RB5: 312 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

#### 14.2.23.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 14.2.23.2 Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 20 ms TTI)

#### 14.2.23.2.1 Conformance requirement

See 14.2.4.1.

#### 14.2.23.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.23 for the turbo channel coding and uplink 20 ms TTI case.

#### 14.2.23.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC1 | UL_TFC2 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| NOTE1: : UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

#### 14.2.23.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
3. At step 15 the UE shall return
   - for sub-test 1 and 2: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 14.2.23.3 Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 10 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.23 for the convolutional channel coding and uplink 10 ms TTI case.

See test case 14.2.23.1 for test procedure and test requirement.

### 14.2.23.4 Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 20 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.23 for the convolutional channel coding and uplink 20 ms TTI case.

See test case 14.2.23.2 for test procedure and test requirement.

# 14.2.23a Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

## 14.2.23a.1 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / CC

### 14.2.23a.1.1 Conformance requirement

See 14.2.4.1.

### 14.2.23a.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.23a, for a convolutional coding case.

### 14.2.23a.1.3 Method of test

See 14.1.1 for test procedure.

Uplink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (8 kbps RAB, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (8 kbps RAB, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2, | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312 | RB5: 312 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

#### 14.2.23a.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 14.2.23a.2 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / TC

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.23a, for a turbo coding case.

See test case 14.2.23a.1 for test procedure and test requirement.

## 14.2.23b Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 14.2.23b.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.23b.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.23b.

#### 14.2.23b.3 Method of test

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC3,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC3 ,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 14.1.1 for test procedure.

### 14.2.23b.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).

3. At step 15 the UE shall return

   - for sub-test 1 and 2: an RLC SDU on RB5 having the same content as sent by the SS.

## 14.2.23c Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.23c.

### 14.2.23c.1 Conformance requirement

See 14.2.4.1.

### 14.2.23c.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.23c.

### 14.2.23c.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC5,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
For RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 14.1.1 for test procedure.

### 14.2.23c.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).

3. At step 15 the UE shall return

   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 14.2.23d Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 14.2.23d.1 Conformance requirement

See 14.2.4.1.

### 14.2.23d.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.23d.

### 14.2.23d.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC3,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC3 ,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |

NOTE1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
For RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 14.1.1 for test procedure.

#### 14.2.23d.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 2: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 14.2.24 Void

## 14.2.25 Interactive or background / UL:32 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.25.1 Interactive or background / UL:32 DL: 64 kbps / PS RAB / (TC, 10 ms TTI)

#### 14.2.25.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.25.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.25 for the uplink turbo channel coding and 10 ms TTI case.

#### 14.2.25.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 1272 | RB5: 1272 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

### 14.2.25.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1 to 4: RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 14.2.25.2 Interactive or background / UL:32 DL: 64 kbps / PS RAB / (TC, 20 ms TTI)

### 14.2.25.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.25.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.25 for the uplink turbo channel coding and 20 ms TTI case.

### 14.2.25.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 1272 | RB5: 1272 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

#### 14.2.25.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF2 (2x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 14.2.25.3 Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 10 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.25 for the uplink convolutional channel coding and 10 ms TTI case.

See test case 14.2.25.1 for test procedure and test requirement.

### 14.2.25.4 Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 20 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.25 for the uplink convolutional channel coding and 20 ms TTI case.

See test case 14.2.25.2 for test procedure and test requirement.

## 14.2.26 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.26.1 Conformance requirement

See 14.2.4.1.

### 14.2.26.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.26.

### 14.2.26.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 14.1.1 for test procedure.

### 14.2.26.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return

- for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 14.2.27 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.27.1 Conformance requirement

See 14.2.4.1.

### 14.2.27.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.27.

### 14.2.27.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 14.1.1 for test procedure.

### 14.2.27.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return

- for sub-test 1, 2 and 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
- for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

## 14.2.28 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.28.1 Conformance requirement

See 14.2.4.1.

### 14.2.28.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.28.

### 14.2.28.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| NOTE1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

### 14.2.28.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 14.2.29 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 14.2.29.1 Conformance requirement

See 14.2.4.1.

### 14.2.29.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.29.

### 14.2.29.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2872 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 14.1.1 for test procedure.

### 14.2.29.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).

- for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
- for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
- for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
- for sub-test 5: RB5/TF3 (3x336) or RB5/TF1 (1x336).

3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 and 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

## 14.2.30 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 14.2.30.1 Conformance requirement

See 14.2.4.1.

### 14.2.30.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.30.

### 14.2.30.3 Method of test

Uplink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 2872 | RB5: 2872 |

NOTE1: UL_TFC0, UL_TFC1 and UL_TFC6 are part of minimum set of TFCIs.
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 14.1.1 for test procedure.

#### 14.2.30.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
   - for sub-test 5: RB5/TF5 (9x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 14.2.31 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 14.2.31.1 Interactive or background / UL:64 DL:256 kbps / PS RAB / 10 ms TTI

#### 14.2.31.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.31.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.31 for the downlink 10 ms TTI case.

#### 14.2.31.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (256 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 14.1.1 for test procedure.

#### 14.2.31.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be

- for sub-test 1: RB5/TF1 (1x336).
- for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
- for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
- for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).

3. At step 15 the UE shall return
   - for sub-test 1, 2 and 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

## 14.2.31.2 Interactive or background / UL:64 DL:256 kbps / PS RAB / 20 ms TTI

### 14.2.31.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.31.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.31 for the downlink 20 ms TTI case.

### 14.2.31.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (256 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF0, TF1) |
| DL_TFC8 | (TF1, TF1) |
| DL_TFC9 | (TF2, TF1) |
| DL_TFC10 | (TF3, TF1) |
| DL_TFC11 | (TF4, TF1) |
| DL_TFC12 | (TF5, TF1) |
| DL_TFC13 | (TF6, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |

NOTE1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 14.1.1 for test procedure.

#### 14.2.31.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 to 6: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-tests 1, 2, 4, 5 and 6: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

## 14.2.32 Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 14.2.32.1 Interactive or background / UL:64 DL:384 kbps / PS RAB / 10 ms TTI

#### 14.2.32.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.32.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.32 for the 10 ms TTI case.

#### 14.2.32.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 14.1.1 for test procedure.

#### 14.2.32.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4 and 5: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 and 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

### 14.2.32.2 Interactive or background / UL:64 DL:384 kbps / PS RAB / 20 ms TTI

#### 14.2.32.2.1 Conformance requirement

See 14.2.4.1.

#### 14.2.32.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.32 for the 20 ms TTI case.

#### 14.2.32.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC9, , UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |

NOTE1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 14.1.1 for test procedure.

#### 14.2.32.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).

- for sub-test 4 to 8: RB5/TF4 (4x336).

3. At step 15 the UE shall return

   - for sub-tests 1, 2, and 4 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

## 14.2.33 Interactive or background / UL:128 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 14.2.33.1 Interactive or background / UL:128 DL:384 kbps / PS RAB / 10 ms TTI

#### 14.2.33.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.33.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.33 for the 10 ms TTI case.

#### 14.2.33.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 3832 | RB5: 3832 |

NOTE1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 14.1.1 for test procedure.

#### 14.2.33.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4 and 5: RB5/TF4 (8x336).

3. At step 15 the UE shall return

   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 14.2.33.2 Interactive or background / UL:128 DL:384 kbps / PS RAB / 20 ms TTI

### 14.2.33.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.33.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.33 for the 20 ms TTI case.

### 14.2.33.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5, | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |

NOTE1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 14.1.1 for test procedure.

#### 14.2.33.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4 to 8: RB5/TF4 (8x336).

3. At step 15 the UE shall return

   - for sub-test 1 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 14.2.34 Interactive or background / UL:384 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.34.1 Interactive or background / UL:384 DL:384 kbps / PS RAB / 10 ms TTI

#### 14.2.34.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.34.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.34 for the 10 ms TTI case.

#### 14.2.34.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 3832 | RB5: 3832 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

#### 14.2.34.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).

- for sub-test 4: RB5/TF4 (8x336).
- for sub-test 5: RB5/TF4 (12x336).

3. At step 15 the UE shall return
   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 14.2.34.2 Interactive or background / UL:384 DL:384 kbps / PS RAB / 20 ms TTI

### 14.2.34.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.34.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.34. for the 20 ms TTI case

### 14.2.34.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF6, TF0) |
| UL_TFC7 | (TF7, TF0) |
| UL_TFC8 | (TF8, TF0) |
| UL_TFC9 | (TF0, TF1) |
| UL_TFC10 | (TF1, TF1) |
| UL_TFC11 | (TF2, TF1) |
| UL_TFC12 | (TF3, TF1) |
| UL_TFC13 | (TF4, TF1) |
| UL_TFC14 | (TF5, TF1) |
| UL_TFC15 | (TF6, TF1) |
| UL_TFC16 | (TF7, TF1) |
| UL_TFC17 | (TF8, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC11 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC9, UL_TFC13 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC9, UL_TFC14 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC6 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC7 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC7, UL_TFC9, UL_TFC16 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC8 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC8, UL_TFC9, UL_TFC17 | RB5: 7672 | RB5: 7672 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC9 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 14.1.1 for test procedure.

#### 14.2.34.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
   - for sub-test 5: RB5/TF5 (12x336).

- for sub-test 6: RB5/TF6 (16x336).
- for sub-test 7: RB5/TF7 (20x336).
- for sub-test 8: RB5/TF8 (24x336).

3. At step 15 the UE shall return
   - for sub-test 1 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 14.2.35 Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.35.1 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 10 ms TTI

#### 14.2.35.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.35.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.35 for the 10 ms TTI case.

#### 14.2.35.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 32x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF0, TF1) |
| DL_TFC12 | (TF1, TF1) |
| DL_TFC13 | (TF2, TF1) |
| DL_TFC14 | (TF3, TF1) |
| DL_TFC15 | (TF4, TF1) |
| DL_TFC16 | (TF5, TF1) |
| DL_TFC17 | (TF6, TF1) |
| DL_TFC18 | (TF7, TF1) |
| DL_TFC19 | (TF8, TF1) |
| DL_TFC20 | (TF9, TF1) |
| DL_TFC21 | (TF10, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1272 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size

See 14.1.1 for test procedure.

#### 14.2.35.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 to 10: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-tests 1, 2 and 4 to 10: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 2552 bits equal to the content of the test data sent by the SS in downlink.

### 14.2.35.2 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 20 ms TTI

#### 14.2.35.2.1 Conformance requirement

See 14.2.4.1.

#### 14.2.35.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.35 for the 20 ms TTI case.

#### 14.2.35.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 32x656 | N/A |
| | TF11, bits | 36x656 | N/A |
| | TF12, bits | 40x656 | N/A |
| | TF13, bits | 44x656 | N/A |
| | TF14, bits | 48x656 | N/A |
| | TF15, bits | 52x656 | N/A |
| | TF16, bits | 56x656 | N/A |
| | TF17, bits | 60x656 | N/A |
| | TF18, bits | 64x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF11, TF0) |
| DL_TFC12 | (TF12, TF0) |
| DL_TFC13 | (TF13, TF0) |
| DL_TFC14 | (TF14, TF0) |
| DL_TFC15 | (TF15, TF0) |
| DL_TFC16 | (TF16, TF0) |
| DL_TFC17 | (TF17, TF0) |
| DL_TFC18 | (TF18, TF0) |
| DL_TFC19 | (TF0, TF1) |
| DL_TFC20 | (TF1, TF1) |
| DL_TFC21 | (TF2, TF1) |
| DL_TFC22 | (TF3, TF1) |
| DL_TFC23 | (TF4, TF1) |
| DL_TFC24 | (TF5, TF1) |
| DL_TFC25 | (TF6, TF1) |
| DL_TFC26 | (TF7, TF1) |
| DL_TFC27 | (TF8, TF1) |
| DL_TFC28 | (TF9, TF1) |
| DL_TFC29 | (TF10, TF1) |
| DL_TFC30 | (TF11, TF1) |
| DL_TFC31 | (TF12, TF1) |
| DL_TFC32 | (TF13, TF1) |
| DL_TFC33 | (TF14, TF1) |
| DL_TFC34 | (TF15, TF1) |

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC35 | (TF16, TF1) |
| DL_TFC36 | (TF17, TF1) |
| DL_TFC37 | (TF18, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1272 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |
| 11 | DL_TFC11 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 23032 | RB5: 23032 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 12 | DL_TFC12 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 25592 | RB5: 25592 |
| 13 | DL_TFC13 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 28152 | RB5: 28152 |
| 14 | DL_TFC14 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 30712 | RB5: 30712 |
| 15 | DL_TFC15 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 33272 | RB5: 33272 |
| 16 | DL_TFC16 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 35832 | RB5: 35832 |
| 17 | DL_TFC17 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 38392 | RB5: 38392 |
| 18 | DL_TFC18 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 40952 | RB5: 40952 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 14.1.1 for test procedure.

#### 14.2.35.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 to 18: RB5/TF4 (4x336).

3. At step 15 the UE shall return

   - for sub-tests 1, 2 and 4 to 18: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

   - for sub-test 3: an RLC SDU on RB5 having the first 2552 bits equal to the content of the test data sent by the SS in downlink.

## 14.2.36 Void

## 14.2.37 Void

## 14.2.38 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.38.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 20 ms TTI)

#### 14.2.38.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.38.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38 for the turbo channel coding and 20 ms TTI case.

#### 14.2.38.1.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC14 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC15 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF2, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (8 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1<br>DL_TFC7 | UL_TFC1<br>UL_TFC10 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC9,<br>UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2<br>DL_TFC8 | UL_TFC2<br>UL_TFC11 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC9,<br>UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3<br>DL_TFC9 | UL_TFC3<br>UL_TFC12 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC9,<br>UL_TFC12 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4<br>DL_TFC10 | UL_TFC4<br>UL_TFC13 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC9,<br>UL_TFC10,<br>UL_TFC12,<br>UL_TFC13 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5<br>DL_TFC11 | UL_TFC5<br>UL_TFC14 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5,<br>UL_TFC9,<br>UL_TFC11,<br>UL_TFC12,<br>UL_TFC14 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC3<br>DL_TFC9 | UL_TFC6<br>UL_TFC15 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC6,<br>UL_TFC9,<br>UL_TFC15 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 7 | DL_TFC4<br>DL_TFC10 | UL_TFC7<br>UL_TFC16 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC6,<br>UL_TFC7,<br>UL_TFC9,<br>UL_TFC10,<br>UL_TFC15,<br>UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 8 | DL_TFC5<br>DL_TFC11 | UL_TFC8<br>UL_TFC17 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC6,<br>UL_TFC8,<br>UL_TFC9,<br>UL_TFC11,<br>UL_TFC15,<br>UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC9 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB8 is 20 ms while the downlink TTI is 40 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over two subsequent TTIs, i.e. UL RLC SDU SIZE has been set to two times the uplink TFS size minus 8 (the size of a 7 bit length indicator and expansion bit). | | | | | | |

#### 14.2.38.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub test.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3 and 6: RLC SDUs on RB8 having the first 312 bits equal to the content sent by the SS in the downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4 and 7: RLC SDUs on RB5 having the same content as sent by SS and on RB8 having the first 312 bits equal to the content sent by the SS in the downlink; and no data shall be received on RB6 and RB7.
   - for sub-test 5 and 8: RLC SDUs on RB5, RB6, RB7 having the same content as sent by SS and on RB8 having the first 312 bits equal to the content sent by the SS in the downlink.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.38.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 10 ms TTI)

#### 14.2.38.2.1 Conformance requirement

See 14.2.4.1.

#### 14.2.38.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38 for the turbo channel coding and 10 ms TTI case.

#### 14.2.38.2.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (8 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1<br>DL_TFC7 | UL_TFC1<br>UL_TFC7 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC6,<br>UL_TFC7 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2<br>DL_TFC8 | UL_TFC2<br>UL_TFC8 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC6,<br>UL_TFC8 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3<br>DL_TFC9 | UL_TFC3<br>UL_TFC9 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC6,<br>UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4<br>DL_TFC10 | UL_TFC4<br>UL_TFC10 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC6,<br>UL_TFC7,<br>UL_TFC9,<br>UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5<br>DL_TFC11 | UL_TFC5<br>UL_TFC11 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC8,<br>UL_TFC9,<br>UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB8 is 10 ms while the downlink TTI is 40 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over four tsubsequent TTIs, i.e. UL RLC SDU SIZE has been set to four times the uplink TFS size minus 8 (the size of a 7 bit length indicator and expansion bit).

#### 14.2.38.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub test.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the first 312 bits equal to the content sent by the SS in the downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 4: RLC SDUs on RB5 having the same content as sent by SS and on RB8 having the first 312 bits equal to the content sent by the SS in the downlink; and no data shall be received on RB6 and RB7.
- for sub-test 5: RLC SDUs on RB5, RB6, RB7 having the same content as sent by SS and on RB8 having the first 312 bits equal to the content sent by the SS in the downlink.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.38.3 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 20 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38 for the convolutional channel coding and 20 ms TTI case.

See test case 14.2.38.1 for test procedure and test requirement.

### 14.2.38.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 10 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38 for the convolutional channel coding and 10 ms TTI case.

See test case 14.2.38.2 for test procedure and test requirement.

## 14.2.38a Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:0 DL:0 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 14.2.38a.1 Conformance requirement

See 14.2.4.1.

#### 14.2.38a.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38a.

#### 14.2.38a.3 Method of test

See 14.1.2 for test procedure. However, in this test the RM attribute values used shall be derived separately in the UL and DL as the mid-values of the RM attríbute value ranges as specified by the reference radio bearer configuration.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (0 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | N/A | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF0, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (0 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | N/A | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF0, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1<br>DL_TFC4 | UL_TFC1<br>UL_TFC4 | DL_TFC0, DL_TFC3,<br>UL_TFC0, UL_TFC3, | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 0 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2<br>DL_TFC5 | UL_TFC2<br>UL_TFC5 | DL_TFC0, DL_TFC3,<br>UL_TFC0, UL_TFC3, | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 0 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

### 14.2.38a.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.38b Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 14.2.38b.1 Conformance requirement

See 14.2.4.1.

### 14.2.38b.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38b.

### 14.2.38b.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (8 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (8 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1<br>DL_TFC7 | UL_TFC1<br>UL_TFC7 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC6,<br>UL_TFC7 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2<br>DL_TFC8 | UL_TFC2<br>UL_TFC8 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC6,<br>UL_TFC8 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3<br>DL_TFC9 | UL_TFC3<br>UL_TFC9 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC6,<br>UL_TFC9 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4<br>DL_TFC10 | UL_TFC4<br>UL_TFC10 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC6,<br>UL_TFC7,<br>UL_TFC9,<br>UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5<br>DL_TFC11 | UL_TFC5<br>UL_TFC11 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC8,<br>UL_TFC9,<br>UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).

### 14.2.38b.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.

- for sub-test 3: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 4: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 5: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.38c Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 14.2.38c.1 Conformance requirement

See 14.2.4.1.

### 14.2.38c.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38c.

### 14.2.38c.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC4, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC5, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC4, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 11 | DL_TFC11, DL_TFC26 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC5, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC4, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 14 | DL_TFC14, DL_TFC29 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC5, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, , UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

#### 14.2.38c.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3, 6, 9 and 12: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4, 7, 10 and 13: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5, 8, 11 and 14: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.38d Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 14.2.38d.1 Conformance requirement

See 14.2.4.1.

#### 14.2.38d.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38d.

14.2.38d.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 + RB9 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x340 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x340 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x340 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x340 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x340 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8+RB9, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 + RB9 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x340 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x340 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x340 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x340 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x340 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8+RB9, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) Note 2 | Test data size (bits) Note 2 |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>RB9: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data<br>RB9: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>RB9: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data<br>RB9: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>RB9: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312<br>RB9: No data |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC15, DUL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>RB9: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312<br>RB9: No data |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>RB9: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>RB9: No data |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>RB9: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632<br>RB9: No data |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>RB9: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632<br>RB9: No data |
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>RB9: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>RB9: No data |

| | | | | | | |
|---|---|---|---|---|---|---|
| 9 | DL_TFC9, DL_TFC24 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952<br>RB9: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 952<br>RB9: No data |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952<br>RB9: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 952<br>RB9: No data |
| 11 | DL_TFC11, DL_TFC26 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952<br>RB9: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952<br>RB9: No data |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>RB9: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272<br>RB9: No data |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>RB9: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272<br>RB9: No data |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>RB9: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>RB9: No data |
| 15 | DL_TFC14, DL_TFC29 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>RB9: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data<br>RB9: 1272 |

| | |
|---|---|
| NOTE1: | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs |
| NOTE2: | See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB8 and RB9: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). |

#### 14.2.38d.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7, RB8 or RB9.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8 or RB9.
   - for sub-test 3, 6, 9 and 12: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6, RB7 or RB9.
   - for sub-test 4, 7, 10 and 13: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6, RB7 or RB9.
   - for sub-test 5, 8, 11 and 14: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS. No data shall be received on RB9.
   - for sub-test 15: RLC SDUs on RB5, RB6, RB7 and RB9 having the same content as sent by SS; and no data shall be received on RB8.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.38e Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:0 DL:0 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 14.2.38e.1 Conformance requirement

See 14.2.4.1.

#### 14.2.38e.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38e.

#### 14.2.38e.3 Method of test

See 14.1.2 for test procedure. However, in this test the RM attribute values used shall be derived separately in the UL and DL as the mid-values of the RM attríbute value ranges as specified by the reference radio bearer configuration.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (0 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | N/A | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A | N/A |

| | | | | | | |
|---|---|---|---|---|---|---|
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0, TF0) |
| UL_TFC5 | (TF5, TF4, TF1, TF0, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF0, TF0, TF1) |
| UL_TFC9 | (TF3, TF2, TF0, TF0, TF1) |
| UL_TFC10 | (TF4, TF3, TF0, TF0, TF1) |
| UL_TFC11 | (TF5, TF4, TF1, TF0, TF1) |

Downlink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (0 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | N/A | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0, TF0) |
| DL_TFC5 | (TF5, TF4, TF1, TF0, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF0, TF0, TF1) |
| DL_TFC9 | (TF3, TF2, TF0, TF0, TF1) |
| DL_TFC10 | (TF4, TF3, TF0, TF0, TF1) |
| DL_TFC11 | (TF5, TF4, TF1, TF0, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC7 | UL_TFC1, UL_TFC7 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 0 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC8 | UL_TFC2, UL_TFC8 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 0 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC9 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 0 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: No data |
| 4 | DL_TFC4, DL_TFC10 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 0 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: No data |
| 5 | DL_TFC5, DL_TFC11 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 0 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: No data |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5 and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

### 14.2.38e.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return

- for sub-test 1: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6, RB7 and RB8.
- for sub-test 2,3 and 4: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7 and RB8.
- for sub-test 5: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and no data shall be received on RB8.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.38f Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 14.2.38f.1 Conformance requirement

See clause 14.2.4.1.

### 14.2.38f.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38f.

### 14.2.38f.3 Method of test

See clause 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (8 kbps, 40 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,RB8,DCCH) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| UL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| UL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| UL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| UL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| UL_TFC5 | (TF5,TF4,TF1,TF0,TF0) |
| UL_TFC6 | (TF0,TF0,TF0,TF1,TF0) |
| UL_TFC7 | (TF1,TF0,TF0,TF1,TF0) |
| UL_TFC8 | (TF2,TF1,TF0,TF1,TF0) |
| UL_TFC9 | (TF3,TF2,TF0,TF1,TF0) |
| UL_TFC10 | (TF4,TF3,TF0,TF1,TF0) |
| UL_TFC11 | (TF5,TF4,TF1,TF1,TF0) |
| UL_TFC12 | (TF0,TF0,TF0,TF0,TF1) |
| UL_TFC13 | (TF1,TF0,TF0,TF0,TF1) |
| UL_TFC14 | (TF2,TF1,TF0,TF0,TF1) |
| UL_TFC15 | (TF3,TF2,TF0,TF0,TF1) |
| UL_TFC16 | (TF4,TF3,TF0,TF0,TF1) |
| UL_TFC17 | (TF5,TF4,TF1,TF0,TF1) |
| UL_TFC18 | (TF0,TF0,TF0,TF1,TF1) |
| UL_TFC19 | (TF1,TF0,TF0,TF1,TF1) |
| UL_TFC20 | (TF2,TF1,TF0,TF1,TF1) |
| UL_TFC21 | (TF3,TF2,TF0,TF1,TF1) |
| UL_TFC22 | (TF4,TF3,TF0,TF1,TF1) |
| UL_TFC23 | (TF5,TF4,TF1,TF1,TF1) |

Downlink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (8 kbps, 40 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| DL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| DL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| DL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| DL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| DL_TFC5 | (TF5,TF4,TF1,TF0,TF0) |
| DL_TFC6 | (TF0,TF0,TF0,TF1,TF0) |
| DL_TFC7 | (TF1,TF0,TF0,TF1,TF0) |
| DL_TFC8 | (TF2,TF1,TF0,TF1,TF0) |
| DL_TFC9 | (TF3,TF2,TF0,TF1,TF0) |
| DL_TFC10 | (TF4,TF3,TF0,TF1,TF0) |
| DL_TFC11 | (TF5,TF4,TF1,TF1,TF0) |
| DL_TFC12 | (TF0,TF0,TF0,TF0,TF1) |
| DL_TFC13 | (TF1,TF0,TF0,TF0,TF1) |
| DL_TFC14 | (TF2,TF1,TF0,TF0,TF1) |
| DL_TFC15 | (TF3,TF2,TF0,TF0,TF1) |
| DL_TFC16 | (TF4,TF3,TF0,TF0,TF1) |
| DL_TFC17 | (TF5,TF4,TF1,TF0,TF1) |
| DL_TFC18 | (TF0,TF0,TF0,TF1,TF1) |
| DL_TFC19 | (TF1,TF0,TF0,TF1,TF1) |
| DL_TFC20 | (TF2,TF1,TF0,TF1,TF1) |
| DL_TFC21 | (TF3,TF2,TF0,TF1,TF1) |
| DL_TFC22 | (TF4,TF3,TF0,TF1,TF1) |
| DL_TFC23 | (TF5,TF4,TF1,TF1,TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs<br><br>(note 1) | UL RLC SDU size<br><br>(note 2) | Test data size<br><br>(note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1,<br>DL_TFC13 | UL_TFC1,<br>UL_TFC13 | DL_TFC0, DL_TFC12,<br>UL_TFC0, UL_TFC12 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC12,<br>UL_TFC13 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2,<br>DL_TFC14 | UL_TFC2,<br>UL_TFC14 | DL_TFC0, DL_TFC12,<br>UL_TFC0, UL_TFC12 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC12,<br>UL_TFC14 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: No data |
| 3 | DL_TFC3,<br>DL_TFC15 | UL_TFC3,<br>UL_TFC15 | DL_TFC0, DL_TFC12,<br>UL_TFC0, UL_TFC12 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC12,<br>UL_TFC15 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: No data |
| 4 | DL_TFC4,<br>DL_TFC16 | UL_TFC4,<br>UL_TFC16 | DL_TFC0, DL_TFC12,<br>UL_TFC0, UL_TFC12 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC12,<br>UL_TFC16 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: No data |
| 5 | DL_TFC5,<br>DL_TFC17 | UL_TFC5,<br>UL_TFC17 | DL_TFC0, DL_TFC12,<br>UL_TFC0, UL_TFC12 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC12,<br>UL_TFC17 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: No data |
| 6 | DL_TFC6,<br>DL_TFC18 | UL_TFC6,<br>UL_TFC18 | DL_TFC0, DL_TFC12,<br>UL_TFC0, UL_TFC12 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC12,<br>UL_TFC18 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 7 | DL_TFC7, DL_TFC19 | UL_TFC7, UL_TFC19 | DL_TFC0, DL_TFC6, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7, UL_TFC12, UL_TFC13, UL_TFC18, UL_TFC19 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 312 bits |
| 8 | DL_TFC8, DL_TFC20 | UL_TFC8, UL_TFC20 | DL_TFC0, DL_TFC6, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC12, UL_TFC14, UL_TFC18, UL_TFC20 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 312 bits |
| 9 | DL_TFC9, DL_TFC21 | UL_TFC9, UL_TFC21 | DL_TFC0, DL_TFC6, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9, UL_TFC12, UL_TFC15, UL_TFC18, UL_TFC21 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 312 bits |
| 10 | DL_TFC10, DL_TFC22 | UL_TFC10, UL_TFC22 | DL_TFC0, DL_TFC6, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC12, UL_TFC16, UL_TFC18, UL_TFC22 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 312 bits |
| 11 | DL_TFC11, DL_TFC23 | UL_TFC11, UL_TFC23 | DL_TFC0, DL_TFC6, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11, UL_TFC12, UL_TFC17, UL_TFC18, UL_TFC23 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6 and UL_TFC12 are part of minimum set of TFCIs.

NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

#### 14.2.38f.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2,3 and 4: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7 and RB8.
   - for sub-test 5: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and no data shall be received on RB8.
   - for sub-test 6: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
   - for sub-test 8,9 and 10: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by the SS; and no data shall be received on RB7.
   - for sub-test 11: RLC SDUs on RB5, RB6 , RB7 and RB8 having the same content as sent by the SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.38g Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 14.2.38g.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.38g.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38g.

#### 14.2.38g.3 Method of test

See clause 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (16 kbps, 40 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | 2x336 | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,RB8,DCCH) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| UL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| UL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| UL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| UL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| UL_TFC5 | (TF5,TF4,TF1,TF0,TF0) |
| UL_TFC6 | (TF0,TF0,TF0,TF1,TF0) |
| UL_TFC7 | (TF1,TF0,TF0,TF1,TF0) |
| UL_TFC8 | (TF3,TF2,TF0,TF1,TF0) |
| UL_TFC9 | (TF4,TF3,TF0,TF1,TF0) |
| UL_TFC10 | (TF5,TF4,TF1,TF1,TF0) |
| UL_TFC11 | (TF0,TF0,TF0,TF2,TF0) |
| UL_TFC12 | (TF1,TF0,TF0,TF2,TF0) |
| UL_TFC13 | (TF3,TF2,TF0,TF2,TF0) |
| UL_TFC14 | (TF4,TF3,TF0,TF2,TF0) |
| UL_TFC15 | (TF5,TF4,TF1,TF2,TF0) |
| UL_TFC16 | (TF0,TF0,TF0,TF0,TF1) |
| UL_TFC17 | (TF1,TF0,TF0,TF0,TF1) |
| UL_TFC18 | (TF2,TF1,TF0,TF0,TF1) |
| UL_TFC19 | (TF3,TF2,TF0,TF0,TF1) |
| UL_TFC20 | (TF4,TF3,TF0,TF0,TF1) |
| UL_TFC21 | (TF5,TF4,TF1,TF0,TF1) |
| UL_TFC22 | (TF0,TF0,TF0,TF1,TF1) |
| UL_TFC23 | (TF1,TF0,TF0,TF1,TF1) |
| UL_TFC24 | (TF3,TF2,TF0,TF1,TF1) |
| UL_TFC25 | (TF4,TF3,TF0,TF1,TF1) |
| UL_TFC26 | (TF5,TF4,TF1,TF1,TF1) |
| UL_TFC27 | (TF0,TF0,TF0,TF2,TF1) |
| UL_TFC28 | (TF1,TF0,TF0,TF2,TF1) |
| UL_TFC29 | (TF3,TF2,TF0,TF2,TF1) |
| UL_TFC30 | (TF4,TF3,TF0,TF2,TF1) |
| UL_TFC31 | (TF5,TF4,TF1,TF2,TF1) |

Downlink TFS:

| | **TFI** | **RB5 (RAB subflow #1)** | **RB6 (RAB subflow #2)** | **RB7 (RAB subflow #3)** | **RB8 (16 kbps, 40 ms TTI)** | **DCCH** |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | 2x336 | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| DL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| DL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| DL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| DL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| DL_TFC5 | (TF5,TF4,TF1,TF0,TF0) |
| DL_TFC6 | (TF0,TF0,TF0,TF1,TF0) |
| DL_TFC7 | (TF1,TF0,TF0,TF1,TF0) |
| DL_TFC8 | (TF2,TF1,TF0,TF1,TF0) |
| DL_TFC9 | (TF3,TF2,TF0,TF1,TF0) |
| DL_TFC10 | (TF4,TF3,TF0,TF1,TF0) |
| DL_TFC11 | (TF5,TF4,TF1,TF1,TF0) |
| DL_TFC12 | (TF0,TF0,TF0,TF2,TF0) |
| DL_TFC13 | (TF1,TF0,TF0,TF2,TF0) |
| DL_TFC14 | (TF2,TF1,TF0,TF2,TF0) |
| DL_TFC15 | (TF3,TF2,TF0,TF2,TF0) |
| DL_TFC16 | (TF4,TF3,TF0,TF2,TF0) |
| DL_TFC17 | (TF5,TF4,TF1,TF2,TF0) |
| DL_TFC18 | (TF0,TF0,TF0,TF0,TF1) |
| DL_TFC19 | (TF1,TF0,TF0,TF0,TF1) |
| DL_TFC20 | (TF2,TF1,TF0,TF0,TF1) |
| DL_TFC21 | (TF3,TF2,TF0,TF0,TF1) |
| DL_TFC22 | (TF4,TF3,TF0,TF0,TF1) |
| DL_TFC23 | (TF5,TF4,TF1,TF0,TF1) |
| DL_TFC24 | (TF0,TF0,TF0,TF1,TF1) |
| DL_TFC25 | (TF1,TF0,TF0,TF1,TF1) |
| DL_TFC26 | (TF2,TF1,TF0,TF1,TF1) |
| DL_TFC27 | (TF3,TF2,TF0,TF1,TF1) |
| DL_TFC28 | (TF4,TF3,TF0,TF1,TF1) |
| DL_TFC29 | (TF5,TF4,TF1,TF1,TF1) |
| DL_TFC30 | (TF0,TF0,TF0,TF2,TF1) |
| DL_TFC31 | (TF1,TF0,TF0,TF2,TF1) |
| DL_TFC32 | (TF2,TF1,TF0,TF2,TF1) |
| DL_TFC33 | (TF3,TF2,TF0,TF2,TF1) |
| DL_TFC34 | (TF4,TF3,TF0,TF2,TF1) |
| DL_TFC35 | (TF5,TF4,TF1,TF2,TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs<br><br>(note 1) | UL RLC SDU size<br><br>(note 2) | Test data size<br><br>(note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC19 | UL_TFC1, UL_TFC17 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC16, UL_TFC17 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC20 | UL_TFC2, UL_TFC18 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC16, UL_TFC18 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC21 | UL_TFC3, UL_TFC19 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC16, UL_TFC19 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: No data |
| 4 | DL_TFC4, DL_TFC22 | UL_TFC4, UL_TFC20 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC16, UL_TFC20 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: No data |
| 5 | DL_TFC5, DL_TFC23 | UL_TFC5, UL_TFC21 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC16, UL_TFC21 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: No data |
| 6 | DL_TFC6, DL_TFC24 | UL_TFC6, UL_TFC22 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC16, UL_TFC22 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 7 | DL_TFC7, DL_TFC25 | UL_TFC7, UL_TFC23 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7, UL_TFC16, UL_TFC17, UL_TFC22, UL_TFC23 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 312 bits |
| 8 | DL_TFC8, DL_TFC26 | UL_TFC8, UL_TFC24 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC16, UL_TFC19, UL_TFC22, UL_TFC24 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 312 bits |
| 9 | DL_TFC9, DL_TFC27 | UL_TFC8, UL_TFC24 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC16, UL_TFC19, UL_TFC22, UL_TFC24 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 312 bits |
| 10 | DL_TFC10, DL_TFC28 | UL_TFC9, UL_TFC25 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9, UL_TFC16, UL_TFC20, UL_TFC22, UL_TFC25 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 312 bits |
| 11 | DL_TFC11, DL_TFC29 | UL_TFC10, UL_TFC26 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC16, UL_TFC21, UL_TFC22, UL_TFC26 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 12 | DL_TFC12, DL_TFC30 | UL_TFC11, UL_TFC27 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11, UL_TFC16, UL_TFC27 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 bits |
| 13 | DL_TFC13, DL_TFC31 | UL_TFC12, UL_TFC28 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC17, UL_TFC27, UL_TFC28 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 632 bits |
| 14 | DL_TFC14, DL_TFC32 | UL_TFC13, UL_TFC29 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11, UL_TFC13, UL_TFC16, UL_TFC19, UL_TFC27, UL_TFC29 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 632 bits |
| 15 | DL_TFC15, DL_TFC33 | UL_TFC13, UL_TFC29 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11, UL_TFC13, UL_TFC16, UL_TFC19, UL_TFC27, UL_TFC29 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 632 bits |
| 16 | DL_TFC16, DL_TFC34 | UL_TFC14, UL_TFC30 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11, UL_TFC14, UL_TFC16, UL_TFC20, UL_TFC27, UL_TFC30 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 632 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 17 | DL_TFC17, DL_TFC35 | UL_TFC15, UL_TFC31 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC27, UL_TFC31 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6 and UL_TFC16 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). | | | | | | |

### 14.2.38g.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2,3 and 4: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7 and RB8.
   - for sub-test 5: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and no data shall be received on RB8.
   - for sub-test 6: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
   - for sub-test 8: RLC SDUs on RB5 having the first 42 bits equal to the content of the test data sent by the SS in downlink ; RLC SDUs on RB6 having the first 53 bits equal to the content of the test data sent by the SS in downlink ; RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB7.
   - for sub-test 9 and 10: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by the SS; and no data shall be received on RB7.
   - for sub-test 11: RLC SDUs on RB5, RB6 , RB7 and RB8 having the same content as sent by the SS.

- for sub-test 12: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 13: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
- for sub-test 14: RLC SDUs on RB5 having the first 42 bits equal to the content of the test data sent by the SS in downlink ; RLC SDUs on RB6 having the first 53 bits equal to the content of the test data sent by the SS in downlink ; RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB7.
- for sub-test 15 and 16: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by the SS; and no data shall be received on RB7.
- for sub-test 17: RLC SDUs on RB5, RB6 , RB7 and RB8 having the same content as sent by the SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.38h Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 14.2.38h.1 Conformance requirement

See clause 14.2.4.1.

### 14.2.38h.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38h.

### 14.2.38h.3 Method of test

See clause 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps, 40 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | 2x336 | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | 3x336 | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | 4x336 | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,RB8,DCCH) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| UL_TFC1 | (TF0,TF0,TF0,TF1,TF0) |
| UL_TFC2 | (TF0,TF0,TF0,TF2,TF0) |
| UL_TFC3 | (TF0,TF0,TF0,TF4,TF0) |
| UL_TFC4 | (TF5,TF4,TF1,TF0,TF0) |
| UL_TFC5 | (TF5,TF4,TF1,TF1,TF0) |
| UL_TFC6 | (TF5,TF4,TF1,TF2,TF0) |
| UL_TFC7 | (TF5,TF4,TF1,TF4,TF0) |
| UL_TFC8 | (TF4,TF3,TF0,TF0,TF0) |
| UL_TFC9 | (TF4,TF3,TF0,TF1,TF0) |
| UL_TFC10 | (TF3,TF2,TF0,TF0,TF0) |
| UL_TFC11 | (TF2,TF1,TF0,TF0,TF0) |
| UL_TFC12 | (TF1,TF0,TF0,TF0,TF0) |
| UL_TFC13 | (TF1,TF0,TF0,TF1,TF0) |
| UL_TFC14 | (TF1,TF0,TF0,TF2,TF0) |
| UL_TFC15 | (TF1,TF0,TF0,TF4,TF0) |
| UL_TFC16 | (TF0,TF0,TF0,TF0,TF1) |
| UL_TFC17 | (TF0,TF0,TF0,TF1,TF1) |
| UL_TFC18 | (TF0,TF0,TF0,TF2,TF1) |
| UL_TFC19 | (TF0,TF0,TF0,TF4,TF1) |
| UL_TFC20 | (TF5,TF4,TF1,TF0,TF1) |
| UL_TFC21 | (TF5,TF4,TF1,TF1,TF1) |
| UL_TFC22 | (TF5,TF4,TF1,TF2,TF1) |
| UL_TFC23 | (TF5,TF4,TF1,TF4,TF1) |
| UL_TFC24 | (TF4,TF3,TF0,TF0,TF1) |
| UL_TFC25 | (TF4,TF3,TF0,TF1,TF1) |
| UL_TFC26 | (TF3,TF2,TF0,TF0,TF1) |
| UL_TFC27 | (TF2,TF1,TF0,TF0,TF1) |
| UL_TFC28 | (TF1,TF0,TF0,TF0,TF1) |
| UL_TFC29 | (TF1,TF0,TF0,TF1,TF1) |
| UL_TFC30 | (TF1,TF0,TF0,TF2,TF1) |
| UL_TFC31 | (TF1,TF0,TF0,TF4,TF1) |

Downlink TFS:

| | **TFI** | **RB5 (RAB subflow #1)** | **RB6 (RAB subflow #2)** | **RB7 (RAB subflow #3)** | **RB8 (32 kbps, 40 ms TTI)** | **DCCH** |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | 2x336 | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | 3x336 | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | 4x336 | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| DL_TFC1 | (TF0,TF0,TF0,TF1,TF0) |
| DL_TFC2 | (TF0,TF0,TF0,TF2,TF0) |
| DL_TFC3 | (TF0,TF0,TF0,TF4,TF0) |
| DL_TFC4 | (TF5,TF4,TF1,TF0,TF0) |
| DL_TFC5 | (TF5,TF4,TF1,TF1,TF0) |
| DL_TFC6 | (TF5,TF4,TF1,TF2,TF0) |
| DL_TFC7 | (TF5,TF4,TF1,TF4,TF0) |
| DL_TFC8 | (TF4,TF3,TF0,TF0,TF0) |
| DL_TFC9 | (TF4,TF3,TF0,TF1,TF0) |
| DL_TFC10 | (TF4,TF3,TF0,TF2,TF0) |
| DL_TFC11 | (TF4,TF3,TF0,TF4,TF0) |
| DL_TFC12 | (TF3,TF2,TF0,TF0,TF0) |
| DL_TFC13 | (TF3,TF2,TF0,TF1,TF0) |
| DL_TFC14 | (TF3,TF2,TF0,TF2,TF0) |
| DL_TFC15 | (TF3,TF2,TF0,TF4,TF0) |
| DL_TFC16 | (TF2,TF1,TF0,TF0,TF0) |
| DL_TFC17 | (TF2,TF1,TF0,TF1,TF0) |
| DL_TFC18 | (TF2,TF1,TF0,TF2,TF0) |
| DL_TFC19 | (TF2,TF1,TF0,TF4,TF0) |
| DL_TFC20 | (TF1,TF0,TF0,TF0,TF0) |
| DL_TFC21 | (TF1,TF0,TF0,TF1,TF0) |
| DL_TFC22 | (TF1,TF0,TF0,TF2,TF0) |
| DL_TFC23 | (TF1,TF0,TF0,TF4,TF0) |
| DL_TFC24 | (TF0,TF0,TF0,TF0,TF1) |
| DL_TFC25 | (TF0,TF0,TF0,TF1,TF1) |
| DL_TFC26 | (TF0,TF0,TF0,TF2,TF1) |
| DL_TFC27 | (TF0,TF0,TF0,TF4,TF1) |
| DL_TFC28 | (TF5,TF4,TF1,TF0,TF1) |
| DL_TFC29 | (TF5,TF4,TF1,TF1,TF1) |
| DL_TFC30 | (TF5,TF4,TF1,TF2,TF1) |
| DL_TFC31 | (TF5,TF4,TF1,TF4,TF1) |
| DL_TFC32 | (TF4,TF3,TF0,TF0,TF1) |
| DL_TFC33 | (TF4,TF3,TF0,TF1,TF1) |
| DL_TFC34 | (TF4,TF3,TF0,TF2,TF1) |
| DL_TFC35 | (TF4,TF3,TF0,TF4,TF1) |
| DL_TFC36 | (TF3,TF2,TF0,TF0,TF1) |
| DL_TFC37 | (TF3,TF2,TF0,TF1,TF1) |
| DL_TFC38 | (TF3,TF2,TF0,TF2,TF1) |
| DL_TFC39 | (TF3,TF2,TF0,TF4,TF1) |
| DL_TFC40 | (TF2,TF1,TF0,TF0,TF1) |
| DL_TFC41 | (TF2,TF1,TF0,TF1,TF1) |
| DL_TFC42 | (TF2,TF1,TF0,TF2,TF1) |
| DL_TFC43 | (TF2,TF1,TF0,TF4,TF1) |
| DL_TFC44 | (TF1,TF0,TF0,TF0,TF1) |
| DL_TFC45 | (TF1,TF0,TF0,TF1,TF1) |
| DL_TFC46 | (TF1,TF0,TF0,TF2,TF1) |
| DL_TFC47 | (TF1,TF0,TF0,TF4,TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs<br><br>(note 1) | UL RLC SDU size<br><br>(note 2) | Test data size<br><br>(note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1,<br>DL_TFC25 | UL_TFC1,<br>UL_TFC17 | DL_TFC0, DL_TFC24,<br>UL_TFC0, UL_TFC16 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC4,<br>UL_TFC8,<br>UL_TFC10,<br>UL_TFC11,<br>UL_TFC12,<br>UL_TFC16,<br>UL_TFC17 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 2 | DL_TFC2,<br>DL_TFC26 | UL_TFC2,<br>UL_TFC18 | DL_TFC0, DL_TFC24,<br>UL_TFC0, UL_TFC16 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC4,<br>UL_TFC8,<br>UL_TFC10,<br>UL_TFC11,<br>UL_TFC12,<br>UL_TFC16,<br>UL_TFC18 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 3 | DL_TFC3,<br>DL_TFC27 | UL_TFC3,<br>UL_TFC19 | DL_TFC0, DL_TFC24,<br>UL_TFC0, UL_TFC16 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC8,<br>UL_TFC10,<br>UL_TFC11,<br>UL_TFC12,<br>UL_TFC16,<br>UL_TFC19 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 4 | DL_TFC4,<br>DL_TFC28 | UL_TFC4,<br>UL_TFC20 | DL_TFC0, DL_TFC24,<br>UL_TFC0, UL_TFC16 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC4,<br>UL_TFC8,<br>UL_TFC10,<br>UL_TFC11,<br>UL_TFC12,<br>UL_TFC16,<br>UL_TFC20 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: No data |
| 5 | DL_TFC5,<br>DL_TFC29 | UL_TFC5,<br>UL_TFC21 | DL_TFC0, DL_TFC24,<br>UL_TFC0, UL_TFC16 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC8,<br>UL_TFC10,<br>UL_TFC11,<br>UL_TFC12,<br>UL_TFC16,<br>UL_TFC17,<br>UL_TFC20,<br>UL_TFC21 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits |
| 6 | DL_TFC6,<br>DL_TFC30 | UL_TFC6,<br>UL_TFC22 | DL_TFC0, DL_TFC24,<br>UL_TFC0, UL_TFC16 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC4,<br>UL_TFC6,<br>UL_TFC8,<br>UL_TFC10,<br>UL_TFC11,<br>UL_TFC12,<br>UL_TFC16,<br>UL_TFC18,<br>UL_TFC20,<br>UL_TFC22 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 7 | DL_TFC7, DL_TFC31 | UL_TFC7, UL_TFC23 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC7, UL_TFC8, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC19, UL_TFC20, UL_TFC23 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits |
| 8 | DL_TFC8, DL_TFC32 | UL_TFC8, UL_TFC24 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC24 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: No data |
| 9 | DL_TFC9, DL_TFC33 | UL_TFC9, UL_TFC25 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC17, UL_TFC24, UL_TFC25 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 312 bits |
| 10 | DL_TFC10, DL_TFC34 | UL_TFC9, UL_TFC25 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC17, UL_TFC24, UL_TFC25 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 632 bits |
| 11 | DL_TFC11, DL_TFC35 | UL_TFC9, UL_TFC25 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC17, UL_TFC24, UL_TFC25 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 1272 bits |
| 12 | DL_TFC12, DL_TFC36 | UL_TFC10, UL_TFC26 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC10, UL_TFC16, UL_TFC26 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: No data |

| | | | | | | |
|---|---|---|---|---|---|---|
| 13 | DL_TFC13, DL_TFC37 | UL_TFC9, UL_TFC25 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC17, UL_TFC24, UL_TFC25 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 312 bits |
| 14 | DL_TFC14, DL_TFC38 | UL_TFC9, UL_TFC25 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC17, UL_TFC24, UL_TFC25 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 632 bits |
| 15 | DL_TFC15, DL_TFC39 | UL_TFC9, UL_TFC25 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC17, UL_TFC24, UL_TFC25 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 1272 bits |
| 16 | DL_TFC16, DL_TFC40 | UL_TFC11, UL_TFC27 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC27 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: No data |
| 17 | DL_TFC17, DL_TFC41 | UL_TFC9, UL_TFC25 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC17, UL_TFC24, UL_TFC25 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 312 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 18 | DL_TFC18, DL_TFC42 | UL_TFC9, UL_TFC25 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC17, UL_TFC24, UL_TFC25 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 632 bits |
| 19 | DL_TFC19, DL_TFC43 | UL_TFC9, UL_TFC25 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC17, UL_TFC24, UL_TFC25 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 1272 bits |
| 20 | DL_TFC20, DL_TFC44 | UL_TFC12, UL_TFC28 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC16, UL_TFC28 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 21 | DL_TFC21, DL_TFC45 | UL_TFC13, UL_TFC29 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC13, UL_TFC16, UL_TFC17, UL_TFC28, UL_TFC29 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 312 bits |
| 22 | DL_TFC22, DL_TFC46 | UL_TFC14, UL_TFC30 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC14, UL_TFC16, UL_TFC18, UL_TFC28, UL_TFC30 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 632 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 23 | DL_TFC23, DL_TFC47 | UL_TFC15, UL_TFC31 | DL_TFC0, DL_TFC24, UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC11, UL_TFC12, UL_TFC15, UL_TFC16, UL_TFC19, UL_TFC28, UL_TFC31 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 1272 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC11, UL_TFC12 and UL_TFC16 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). | | | | | | |

### 14.2. 38h.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1,2 and 3: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and no data shall be received on RB8.
   - for sub-test 5, 6 and 7: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by the SS.
   - for sub-test 8: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7 and RB8.
   - for sub-test 9: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by the SS; and no data shall be received on RB7.
   - for sub-test 10 and 11: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; RLC SDUs on RB8 having the same content as the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB7.

- for sub-test 12: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7 and RB8.

- for sub-test 13: RLC SDUs on RB5 having the first 55 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB6 having the first 63 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB7.

- for sub-test 14 and 15: RLC SDUs on RB5 having the first 55 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB6 having the first 63 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB8 having the same content as the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB7.

- for sub-test 16: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7 and RB8.

- for sub-test 17: RLC SDUs on RB5 having the first 42 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB6 having the first 53 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB7.

- for sub-test 18 and 19: RLC SDUs on RB5 having the first 42 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB6 having the first 53 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB8 having the same content as the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB7.

- for sub-test 20: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6, RB7 and RB8.

- for sub-test 21, 22 and 23: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.38i Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 14.2.38i.1 Conformance requirement

See clause 14.2.4.1.

### 14.2.38i.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38i.

### 14.2.38i.3 Method of test

See clause 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | 2x336 | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | 3x336 | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | 4x336 | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,RB8,DCCH) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| UL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| UL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| UL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| UL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| UL_TFC5 | (TF5,TF4,TF1,TF0,TF0) |
| UL_TFC6 | (TF0,TF0,TF0,TF1,TF0) |
| UL_TFC7 | (TF1,TF0,TF0,TF1,TF0) |
| UL_TFC8 | (TF2,TF1,TF0,TF1,TF0) |
| UL_TFC9 | (TF3,TF2,TF0,TF1,TF0) |
| UL_TFC10 | (TF4,TF3,TF0,TF1,TF0) |
| UL_TFC11 | (TF5,TF4,TF1,TF1,TF0) |
| UL_TFC12 | (TF0,TF0,TF0,TF2,TF0) |
| UL_TFC13 | (TF1,TF0,TF0,TF2,TF0) |
| UL_TFC14 | (TF2,TF1,TF0,TF2,TF0) |
| UL_TFC15 | (TF3,TF2,TF0,TF2,TF0) |
| UL_TFC16 | (TF4,TF3,TF0,TF2,TF0) |
| UL_TFC17 | (TF5,TF4,TF1,TF2,TF0) |
| UL_TFC18 | (TF0,TF0,TF0,TF4,TF0) |
| UL_TFC19 | (TF1,TF0,TF0,TF4,TF0) |
| UL_TFC20 | (TF2,TF1,TF0,TF4,TF0) |
| UL_TFC21 | (TF3,TF2,TF0,TF4,TF0) |
| UL_TFC22 | (TF4,TF3,TF0,TF4,TF0) |
| UL_TFC23 | (TF5,TF4,TF1,TF4,TF0) |
| UL_TFC24 | (TF0,TF0,TF0,TF0,TF1) |
| UL_TFC25 | (TF1,TF0,TF0,TF0,TF1) |
| UL_TFC26 | (TF2,TF1,TF0,TF0,TF1) |
| UL_TFC27 | (TF3,TF2,TF0,TF0,TF1) |
| UL_TFC28 | (TF4,TF3,TF0,TF0,TF1) |
| UL_TFC29 | (TF5,TF4,TF1,TF0,TF1) |
| UL_TFC30 | (TF0,TF0,TF0,TF1,TF1) |
| UL_TFC31 | (TF1,TF0,TF0,TF1,TF1) |
| UL_TFC32 | (TF2,TF1,TF0,TF1,TF1) |
| UL_TFC33 | (TF3,TF2,TF0,TF1,TF1) |
| UL_TFC34 | (TF4,TF3,TF0,TF1,TF1) |
| UL_TFC35 | (TF5,TF4,TF1,TF1,TF1) |
| UL_TFC36 | (TF0,TF0,TF0,TF2,TF1) |
| UL_TFC37 | (TF1,TF0,TF0,TF2,TF1) |
| UL_TFC38 | (TF2,TF1,TF0,TF2,TF1) |
| UL_TFC39 | (TF3,TF2,TF0,TF2,TF1) |
| UL_TFC40 | (TF4,TF3,TF0,TF2,TF1) |
| UL_TFC41 | (TF5,TF4,TF1,TF2,TF1) |
| UL_TFC42 | (TF0,TF0,TF0,TF4,TF1) |
| UL_TFC43 | (TF1,TF0,TF0,TF4,TF1) |
| UL_TFC44 | (TF2,TF1,TF0,TF4,TF1) |
| UL_TFC45 | (TF3,TF2,TF0,TF4,TF1) |
| UL_TFC46 | (TF4,TF3,TF0,TF4,TF1) |
| UL_TFC47 | (TF5,TF4,TF1,TF4,TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | 2x336 | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | 3x336 | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | 4x336 | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| DL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| DL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| DL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| DL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| DL_TFC5 | (TF5,TF4,TF1,TF0,TF0) |
| DL_TFC6 | (TF0,TF0,TF0,TF1,TF0) |
| DL_TFC7 | (TF1,TF0,TF0,TF1,TF0) |
| DL_TFC8 | (TF2,TF1,TF0,TF1,TF0) |
| DL_TFC9 | (TF3,TF2,TF0,TF1,TF0) |
| DL_TFC10 | (TF4,TF3,TF0,TF1,TF0) |
| DL_TFC11 | (TF5,TF4,TF1,TF1,TF0) |
| DL_TFC12 | (TF0,TF0,TF0,TF2,TF0) |
| DL_TFC13 | (TF1,TF0,TF0,TF2,TF0) |
| DL_TFC14 | (TF2,TF1,TF0,TF2,TF0) |
| DL_TFC15 | (TF3,TF2,TF0,TF2,TF0) |
| DL_TFC16 | (TF4,TF3,TF0,TF2,TF0) |
| DL_TFC17 | (TF5,TF4,TF1,TF2,TF0) |
| DL_TFC18 | (TF0,TF0,TF0,TF3,TF0) |
| DL_TFC19 | (TF1,TF0,TF0,TF3,TF0) |
| DL_TFC20 | (TF2,TF1,TF0,TF3,TF0) |
| DL_TFC21 | (TF3,TF2,TF0,TF3,TF0) |
| DL_TFC22 | (TF4,TF3,TF0,TF3,TF0) |
| DL_TFC23 | (TF5,TF4,TF1,TF3,TF0) |
| DL_TFC24 | (TF0,TF0,TF0,TF4,TF0) |
| DL_TFC25 | (TF1,TF0,TF0,TF4,TF0) |
| DL_TFC26 | (TF2,TF1,TF0,TF4,TF0) |
| DL_TFC27 | (TF3,TF2,TF0,TF4,TF0) |
| DL_TFC28 | (TF4,TF3,TF0,TF4,TF0) |
| DL_TFC29 | (TF5,TF4,TF1,TF4,TF0) |
| DL_TFC30 | (TF0,TF0,TF0,TF0,TF1) |
| DL_TFC31 | (TF1,TF0,TF0,TF0,TF1) |
| DL_TFC32 | (TF2,TF1,TF0,TF0,TF1) |
| DL_TFC33 | (TF3,TF2,TF0,TF0,TF1) |
| DL_TFC34 | (TF4,TF3,TF0,TF0,TF1) |
| DL_TFC35 | (TF5,TF4,TF1,TF0,TF1) |
| DL_TFC36 | (TF0,TF0,TF0,TF1,TF1) |
| DL_TFC37 | (TF1,TF0,TF0,TF1,TF1) |
| DL_TFC38 | (TF2,TF1,TF0,TF1,TF1) |
| DL_TFC39 | (TF3,TF2,TF0,TF1,TF1) |
| DL_TFC40 | (TF4,TF3,TF0,TF1,TF1) |
| DL_TFC41 | (TF5,TF4,TF1,TF1,TF1) |
| DL_TFC42 | (TF0,TF0,TF0,TF2,TF1) |
| DL_TFC43 | (TF1,TF0,TF0,TF2,TF1) |
| DL_TFC44 | (TF2,TF1,TF0,TF2,TF1) |
| DL_TFC45 | (TF3,TF2,TF0,TF2,TF1) |
| DL_TFC46 | (TF4,TF3,TF0,TF2,TF1) |
| DL_TFC47 | (TF5,TF4,TF1,TF2,TF1) |
| DL_TFC48 | (TF0,TF0,TF0,TF3,TF1) |
| DL_TFC49 | (TF1,TF0,TF0,TF3,TF1) |
| DL_TFC50 | (TF2,TF1,TF0,TF3,TF1) |
| DL_TFC51 | (TF3,TF2,TF0,TF3,TF1) |
| DL_TFC52 | (TF4,TF3,TF0,TF3,TF1) |
| DL_TFC53 | (TF5,TF4,TF1,TF3,TF1) |
| DL_TFC54 | (TF0,TF0,TF0,TF4,TF1) |
| DL_TFC55 | (TF1,TF0,TF0,TF4,TF1) |
| DL_TFC56 | (TF2,TF1,TF0,TF4,TF1) |
| DL_TFC57 | (TF3,TF2,TF0,TF4,TF1) |
| DL_TFC58 | (TF4,TF3,TF0,TF4,TF1) |
| DL_TFC59 | (TF5,TF4,TF1,TF4,TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC31 | UL_TFC1, UL_TFC25 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC25 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC32 | UL_TFC2, UL_TFC26 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC26 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC33 | UL_TFC3, UL_TFC27 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC27 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: No data |
| 4 | DL_TFC4, DL_TFC34 | UL_TFC4, UL_TFC28 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC28 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: No data |
| 5 | DL_TFC5, DL_TFC35 | UL_TFC5, UL_TFC29 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC29 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: No data |
| 6 | DL_TFC6, DL_TFC36 | UL_TFC6, UL_TFC30 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC30 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 7 | DL_TFC7,<br>DL_TFC37 | UL_TFC7,<br>UL_TFC31 | DL_TFC0, DL_TFC30,<br>UL_TFC0, UL_TFC24 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC7,<br>UL_TFC24,<br>UL_TFC25,<br>UL_TFC30,<br>UL_TFC31 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 312 bits |
| 8 | DL_TFC8,<br>DL_TFC38 | UL_TFC8,<br>UL_TFC32 | DL_TFC0, DL_TFC30,<br>UL_TFC0, UL_TFC24 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC8,<br>UL_TFC24,<br>UL_TFC26,<br>UL_TFC30,<br>UL_TFC32 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 312 bits |
| 9 | DL_TFC9,<br>DL_TFC39 | UL_TFC9,<br>UL_TFC33 | DL_TFC0, DL_TFC30,<br>UL_TFC0, UL_TFC24 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC9,<br>UL_TFC24,<br>UL_TFC27,<br>UL_TFC30,<br>UL_TFC33 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 312 bits |
| 10 | DL_TFC10,<br>DL_TFC40 | UL_TFC10,<br>UL_TFC34 | DL_TFC0, DL_TFC30,<br>UL_TFC0, UL_TFC24 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC10,<br>UL_TFC24,<br>UL_TFC28,<br>UL_TFC30,<br>UL_TFC34 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 312 bits |
| 11 | DL_TFC11,<br>DL_TFC41 | UL_TFC11,<br>UL_TFC35 | DL_TFC0, DL_TFC30,<br>UL_TFC0, UL_TFC24 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC11,<br>UL_TFC24,<br>UL_TFC29,<br>UL_TFC30,<br>UL_TFC35 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 12 | DL_TFC12, DL_TFC42 | UL_TFC12, UL_TFC36 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC24, UL_TFC36 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 bits |
| 13 | DL_TFC13, DL_TFC43 | UL_TFC13, UL_TFC37 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC13, UL_TFC24, UL_TFC25, UL_TFC36, UL_TFC37 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 632 bits |
| 14 | DL_TFC14, DL_TFC44 | UL_TFC14, UL_TFC38 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC14, UL_TFC24, UL_TFC26, UL_TFC36, UL_TFC38 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 632 bits |
| 15 | DL_TFC15, DL_TFC45 | UL_TFC15, UL_TFC39 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC15, UL_TFC24, UL_TFC27, UL_TFC36, UL_TFC39 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 632 bits |
| 16 | DL_TFC16, DL_TFC46 | UL_TFC16, UL_TFC40 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC16, UL_TFC24, UL_TFC28, UL_TFC36, UL_TFC40 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 632 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 17 | DL_TFC17, DL_TFC47 | UL_TFC17, UL_TFC41 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC17, UL_TFC24, UL_TFC29, UL_TFC36, UL_TFC41 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits |
| 18 | DL_TFC18, DL_TFC48 | UL_TFC18, UL_TFC42 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC24, UL_TFC42 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 952 bits |
| 19 | DL_TFC19, DL_TFC49 | UL_TFC19, UL_TFC43 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC19, UL_TFC24, UL_TFC25, UL_TFC42, UL_TFC43 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 952 bits |
| 20 | DL_TFC20, DL_TFC50 | UL_TFC20, UL_TFC44 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC20, UL_TFC24, UL_TFC26, UL_TFC42, UL_TFC44 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 952 bits |
| 21 | DL_TFC21, DL_TFC51 | UL_TFC21, UL_TFC45 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC21, UL_TFC24, UL_TFC27, UL_TFC42, UL_TFC45 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 952 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | DL_TFC22, DL_TFC52 | UL_TFC22, UL_TFC46 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC22, UL_TFC24, UL_TFC28, UL_TFC42, UL_TFC46 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 952 bits |
| 23 | DL_TFC23, DL_TFC53 | UL_TFC23, UL_TFC47 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC23, UL_TFC24, UL_TFC29, UL_TFC42, UL_TFC47 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 952 bits |
| 24 | DL_TFC24, DL_TFC54 | UL_TFC18, UL_TFC42 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC24, UL_TFC42 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 bits |
| 25 | DL_TFC25, DL_TFC55 | UL_TFC19, UL_TFC43 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC19, UL_TFC24, UL_TFC25, UL_TFC42, UL_TFC43 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 1272 bits |
| 26 | DL_TFC26, DL_TFC56 | UL_TFC20, UL_TFC44 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC20, UL_TFC24, UL_TFC26, UL_TFC42, UL_TFC44 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 1272 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 27 | DL_TFC27, DL_TFC57 | UL_TFC21, UL_TFC45 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC21, UL_TFC24, UL_TFC27, UL_TFC42, UL_TFC45 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 1272 bits |
| 28 | DL_TFC28, DL_TFC58 | UL_TFC22, UL_TFC46 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC22, UL_TFC24, UL_TFC28, UL_TFC42, UL_TFC46 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 1272 bits |
| 29 | DL_TFC29, DL_TFC59 | UL_TFC23, UL_TFC47 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC23, UL_TFC24, UL_TFC29, UL_TFC42, UL_TFC47 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6 and UL_TFC24 are part of minimum set of TFCIs.

NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

### 14.2.38i.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 15 the UE shall return

   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6, RB7 and RB8.

   - for sub-test 2,3 and 4: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7 and RB8.

   - for sub-test 5: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and no data shall be received on RB8.

- for sub-test 6: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 7: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
- for sub-test 8,9 and 10: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by the SS; and no data shall be received on RB7.
- for sub-test 11: RLC SDUs on RB5, RB6 , RB7 and RB8 having the same content as sent by the SS.
- for sub-test 12: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 13: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
- for sub-test 14,15 and 16: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by the SS; and no data shall be received on RB7.
- for sub-test 17: RLC SDUs on RB5, RB6 , RB7 and RB8 having the same content as sent by the SS.
- for sub-test 18: RLC SDUs on RB8 having the first 952 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 19: RLC SDUs on RB5 having the same content as sent by the SS; RLC SDUs on RB8 having the first 952 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
- for sub-test 20,21 and 22: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; RLC SDUs on RB8 having the first 952 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB7.
- for sub-test 23: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and RLC SDUs on RB8 having the first 952 bits equal to the content of the test data sent by the SS in downlink.
- for sub-test 24: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 25: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
- for sub-test 26,27 and 28: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by the SS; and no data shall be received on RB7.
- for sub-test 29: RLC SDUs on RB5, RB6 , RB7 and RB8 having the same content as sent by the SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.38j Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 14.2.38j.1 Conformance requirement

See clause 14.2.4.1.

### 14.2.38j.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.38j.

### 14.2.38j.3 Method of test

See clause 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | 2x336 | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | 3x336 | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | 4x336 | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,RB8,DCCH) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| UL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| UL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| UL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| UL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| UL_TFC5 | (TF5,TF4,TF1,TF0,TF0) |
| UL_TFC6 | (TF0,TF0,TF0,TF1,TF0) |
| UL_TFC7 | (TF1,TF0,TF0,TF1,TF0) |
| UL_TFC8 | (TF2,TF1,TF0,TF1,TF0) |
| UL_TFC9 | (TF3,TF2,TF0,TF1,TF0) |
| UL_TFC10 | (TF4,TF3,TF0,TF1,TF0) |
| UL_TFC11 | (TF5,TF4,TF1,TF1,TF0) |
| UL_TFC12 | (TF0,TF0,TF0,TF2,TF0) |
| UL_TFC13 | (TF1,TF0,TF0,TF2,TF0) |
| UL_TFC14 | (TF2,TF1,TF0,TF2,TF0) |
| UL_TFC15 | (TF3,TF2,TF0,TF2,TF0) |
| UL_TFC16 | (TF4,TF3,TF0,TF2,TF0) |
| UL_TFC17 | (TF5,TF4,TF1,TF2,TF0) |
| UL_TFC18 | (TF0,TF0,TF0,TF4,TF0) |
| UL_TFC19 | (TF1,TF0,TF0,TF4,TF0) |
| UL_TFC20 | (TF2,TF1,TF0,TF4,TF0) |
| UL_TFC21 | (TF3,TF2,TF0,TF4,TF0) |
| UL_TFC22 | (TF4,TF3,TF0,TF4,TF0) |
| UL_TFC23 | (TF5,TF4,TF1,TF4,TF0) |
| UL_TFC24 | (TF0,TF0,TF0,TF0,TF1) |
| UL_TFC25 | (TF1,TF0,TF0,TF0,TF1) |
| UL_TFC26 | (TF2,TF1,TF0,TF0,TF1) |
| UL_TFC27 | (TF3,TF2,TF0,TF0,TF1) |
| UL_TFC28 | (TF4,TF3,TF0,TF0,TF1) |
| UL_TFC29 | (TF5,TF4,TF1,TF0,TF1) |
| UL_TFC30 | (TF0,TF0,TF0,TF1,TF1) |
| UL_TFC31 | (TF1,TF0,TF0,TF1,TF1) |
| UL_TFC32 | (TF2,TF1,TF0,TF1,TF1) |
| UL_TFC33 | (TF3,TF2,TF0,TF1,TF1) |
| UL_TFC34 | (TF4,TF3,TF0,TF1,TF1) |
| UL_TFC35 | (TF5,TF4,TF1,TF1,TF1) |
| UL_TFC36 | (TF0,TF0,TF0,TF2,TF1) |
| UL_TFC37 | (TF1,TF0,TF0,TF2,TF1) |
| UL_TFC38 | (TF2,TF1,TF0,TF2,TF1) |
| UL_TFC39 | (TF3,TF2,TF0,TF2,TF1) |
| UL_TFC40 | (TF4,TF3,TF0,TF2,TF1) |
| UL_TFC41 | (TF5,TF4,TF1,TF2,TF1) |
| UL_TFC42 | (TF0,TF0,TF0,TF4,TF1) |
| UL_TFC43 | (TF1,TF0,TF0,TF4,TF1) |
| UL_TFC44 | (TF2,TF1,TF0,TF4,TF1) |
| UL_TFC45 | (TF3,TF2,TF0,TF4,TF1) |
| UL_TFC46 | (TF4,TF3,TF0,TF4,TF1) |
| UL_TFC47 | (TF5,TF4,TF1,TF4,TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (128 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | 2x336 | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | 4x336 | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | 8x336 | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| DL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| DL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| DL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| DL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| DL_TFC5 | (TF5,TF4,TF1,TF0,TF0) |
| DL_TFC6 | (TF0,TF0,TF0,TF1,TF0) |
| DL_TFC7 | (TF1,TF0,TF0,TF1,TF0) |
| DL_TFC8 | (TF2,TF1,TF0,TF1,TF0) |
| DL_TFC9 | (TF3,TF2,TF0,TF1,TF0) |
| DL_TFC10 | (TF4,TF3,TF0,TF1,TF0) |
| DL_TFC11 | (TF5,TF4,TF1,TF1,TF0) |
| DL_TFC12 | (TF0,TF0,TF0,TF2,TF0) |
| DL_TFC13 | (TF1,TF0,TF0,TF2,TF0) |
| DL_TFC14 | (TF2,TF1,TF0,TF2,TF0) |
| DL_TFC15 | (TF3,TF2,TF0,TF2,TF0) |
| DL_TFC16 | (TF4,TF3,TF0,TF2,TF0) |
| DL_TFC17 | (TF5,TF4,TF1,TF2,TF0) |
| DL_TFC18 | (TF0,TF0,TF0,TF3,TF0) |
| DL_TFC19 | (TF1,TF0,TF0,TF3,TF0) |
| DL_TFC20 | (TF2,TF1,TF0,TF3,TF0) |
| DL_TFC21 | (TF3,TF2,TF0,TF3,TF0) |
| DL_TFC22 | (TF4,TF3,TF0,TF3,TF0) |
| DL_TFC23 | (TF5,TF4,TF1,TF3,TF0) |
| DL_TFC24 | (TF0,TF0,TF0,TF4,TF0) |
| DL_TFC25 | (TF1,TF0,TF0,TF4,TF0) |
| DL_TFC26 | (TF2,TF1,TF0,TF4,TF0) |
| DL_TFC27 | (TF3,TF2,TF0,TF4,TF0) |
| DL_TFC28 | (TF4,TF3,TF0,TF4,TF0) |
| DL_TFC29 | (TF5,TF4,TF1,TF4,TF0) |
| DL_TFC30 | (TF0,TF0,TF0,TF0,TF1) |
| DL_TFC31 | (TF1,TF0,TF0,TF0,TF1) |
| DL_TFC32 | (TF2,TF1,TF0,TF0,TF1) |
| DL_TFC33 | (TF3,TF2,TF0,TF0,TF1) |
| DL_TFC34 | (TF4,TF3,TF0,TF0,TF1) |
| DL_TFC35 | (TF5,TF4,TF1,TF0,TF1) |
| DL_TFC36 | (TF0,TF0,TF0,TF1,TF1) |
| DL_TFC37 | (TF1,TF0,TF0,TF1,TF1) |
| DL_TFC38 | (TF2,TF1,TF0,TF1,TF1) |
| DL_TFC39 | (TF3,TF2,TF0,TF1,TF1) |
| DL_TFC40 | (TF4,TF3,TF0,TF1,TF1) |
| DL_TFC41 | (TF5,TF4,TF1,TF1,TF1) |
| DL_TFC42 | (TF0,TF0,TF0,TF2,TF1) |
| DL_TFC43 | (TF1,TF0,TF0,TF2,TF1) |
| DL_TFC44 | (TF2,TF1,TF0,TF2,TF1) |
| DL_TFC45 | (TF3,TF2,TF0,TF2,TF1) |
| DL_TFC46 | (TF4,TF3,TF0,TF2,TF1) |
| DL_TFC47 | (TF5,TF4,TF1,TF2,TF1) |
| DL_TFC48 | (TF0,TF0,TF0,TF3,TF1) |
| DL_TFC49 | (TF1,TF0,TF0,TF3,TF1) |
| DL_TFC50 | (TF2,TF1,TF0,TF3,TF1) |
| DL_TFC51 | (TF3,TF2,TF0,TF3,TF1) |
| DL_TFC52 | (TF4,TF3,TF0,TF3,TF1) |
| DL_TFC53 | (TF5,TF4,TF1,TF3,TF1) |
| DL_TFC54 | (TF0,TF0,TF0,TF4,TF1) |
| DL_TFC55 | (TF1,TF0,TF0,TF4,TF1) |
| DL_TFC56 | (TF2,TF1,TF0,TF4,TF1) |
| DL_TFC57 | (TF3,TF2,TF0,TF4,TF1) |
| DL_TFC58 | (TF4,TF3,TF0,TF4,TF1) |
| DL_TFC59 | (TF5,TF4,TF1,TF4,TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC31 | UL_TFC1, UL_TFC25 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC25 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC32 | UL_TFC2, UL_TFC26 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC26 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC33 | UL_TFC3, UL_TFC27 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC27 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: No data |
| 4 | DL_TFC4, DL_TFC34 | UL_TFC4, UL_TFC28 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC28 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: No data |
| 5 | DL_TFC5, DL_TFC35 | UL_TFC5, UL_TFC29 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC29 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: No data |
| 6 | DL_TFC6, DL_TFC36 | UL_TFC6, UL_TFC30 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC24, UL_TFC30 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 7 | DL_TFC7, DL_TFC37 | UL_TFC7, UL_TFC31 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7, UL_TFC24, UL_TFC25, UL_TFC30, UL_TFC31 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 312 bits |
| 8 | DL_TFC8, DL_TFC38 | UL_TFC8, UL_TFC32 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC24, UL_TFC26, UL_TFC30, UL_TFC32 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 312 bits |
| 9 | DL_TFC9, DL_TFC39 | UL_TFC9, UL_TFC33 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9, UL_TFC24, UL_TFC27, UL_TFC30, UL_TFC33 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 312 bits |
| 10 | DL_TFC10, DL_TFC40 | UL_TFC10, UL_TFC34 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC24, UL_TFC28, UL_TFC30, UL_TFC34 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 312 bits |
| 11 | DL_TFC11, DL_TFC41 | UL_TFC11, UL_TFC35 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11, UL_TFC24, UL_TFC29, UL_TFC30, UL_TFC35 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 312 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 12 | DL_TFC12, DL_TFC42 | UL_TFC12, UL_TFC36 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC24, UL_TFC36 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 bits |
| 13 | DL_TFC13, DL_TFC43 | UL_TFC13, UL_TFC37 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC13, UL_TFC24, UL_TFC25, UL_TFC36, UL_TFC37 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 632 bits |
| 14 | DL_TFC14, DL_TFC44 | UL_TFC14, UL_TFC38 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC14, UL_TFC24, UL_TFC26, UL_TFC36, UL_TFC38 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 632 bits |
| 15 | DL_TFC15, DL_TFC45 | UL_TFC15, UL_TFC39 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC15, UL_TFC24, UL_TFC27, UL_TFC36, UL_TFC39 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 632 bits |
| 16 | DL_TFC16, DL_TFC46 | UL_TFC16, UL_TFC40 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC16, UL_TFC24, UL_TFC28, UL_TFC36, UL_TFC40 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 632 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 17 | DL_TFC17, DL_TFC47 | UL_TFC17, UL_TFC41 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC17, UL_TFC24, UL_TFC29, UL_TFC36, UL_TFC41 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 632 bits |
| 18 | DL_TFC18, DL_TFC48 | UL_TFC18, UL_TFC42 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC24, UL_TFC42 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 bits |
| 19 | DL_TFC19, DL_TFC49 | UL_TFC19, UL_TFC43 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC19, UL_TFC24, UL_TFC25, UL_TFC42, UL_TFC43 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 1272 bits |
| 20 | DL_TFC20, DL_TFC50 | UL_TFC20, UL_TFC44 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC20, UL_TFC24, UL_TFC26, UL_TFC42, UL_TFC44 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 1272 bits |
| 21 | DL_TFC21, DL_TFC51 | UL_TFC21, UL_TFC45 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC21, UL_TFC24, UL_TFC27, UL_TFC42, UL_TFC45 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 1272 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | DL_TFC22, DL_TFC52 | UL_TFC22, UL_TFC46 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC22, UL_TFC24, UL_TFC28, UL_TFC42, UL_TFC46 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 1272 bits |
| 23 | DL_TFC23, DL_TFC53 | UL_TFC23, UL_TFC47 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC23, UL_TFC24, UL_TFC29, UL_TFC42, UL_TFC47 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits |
| 24 | DL_TFC24, DL_TFC54 | UL_TFC18, UL_TFC42 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC24, UL_TFC42 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 bits |
| 25 | DL_TFC25, DL_TFC55 | UL_TFC19, UL_TFC43 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC19, UL_TFC24, UL_TFC25, UL_TFC42, UL_TFC43 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data<br>RB8: 2552 bits |
| 26 | DL_TFC26, DL_TFC56 | UL_TFC20, UL_TFC44 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC20, UL_TFC24, UL_TFC26, UL_TFC42, UL_TFC44 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data<br>RB8: 2552 bits |

| | | | | | | |
|---|---|---|---|---|---|---|
| 27 | DL_TFC27, DL_TFC57 | UL_TFC21, UL_TFC45 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC21, UL_TFC24, UL_TFC27, UL_TFC42, UL_TFC45 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data<br>RB8: 2552 bits |
| 28 | DL_TFC28, DL_TFC58 | UL_TFC22, UL_TFC46 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC22, UL_TFC24, UL_TFC28, UL_TFC42, UL_TFC46 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data<br>RB8: 2552 bits |
| 29 | DL_TFC29, DL_TFC59 | UL_TFC23, UL_TFC47 | DL_TFC0, DL_TFC30, UL_TFC0, UL_TFC24 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC18, UL_TFC23, UL_TFC24, UL_TFC29, UL_TFC42, UL_TFC47 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 1272 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits<br>RB8: 2552 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6 and UL_TFC24 are part of minimum set of TFCIs.

NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

### 14.2.38j.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2,3 and 4: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7 and RB8.
   - for sub-test 5: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and no data shall be received on RB8.

- for sub-test 6: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 7: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
- for sub-test 8,9 and 10: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by the SS; and no data shall be received on RB7.
- for sub-test 11: RLC SDUs on RB5, RB6 , RB7 and RB8 having the same content as sent by the SS.
- for sub-test 12: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 13: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
- for sub-test 14,15 and 16: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by the SS; and no data shall be received on RB7.
- for sub-test 17: RLC SDUs on RB5, RB6 , RB7 and RB8 having the same content as sent by the SS.
- for sub-test 18: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 19: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
- for sub-test 20,21 and 22: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by the SS; and no data shall be received on RB7.
- for sub-test 23: RLC SDUs on RB5, RB6 , RB7 and RB8 having the same content as sent by the SS.
- for sub-test 24: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 25: RLC SDUs on RB5 having the same content as sent by the SS; RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
- for sub-test 26,27 and 28: RLC SDUs on RB5 and RB6 having the same content as sent by the SS; RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB7.
- for sub-test 29: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.39 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 14.2.39.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (TC, 10 ms TTI)

#### 14.2.39.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.39.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.39 for the uplink turbo channel coding and 10 ms TTI case.

14.2.39.1.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps, 10 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1 UL_TFC7 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC8 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5 UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC8, DL_TFC23 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 9 | DL_TFC9, DL_TFC24 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 11 | DL_TFC11, DL_TFC26 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |

NOTE1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC6 are part of minimum set of TFCIs
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB8 is 10 ms while the downlink TTI is 20 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over two subsequent TTIs, i.e. UL RLC SDU SIZE has been set to two times the uplink TFS size minus 8 bits (size of 7 bit length indicator and expansion bit).

#### 14.2.39.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 15a and step 15b the UE shall return

   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.

   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.

   - for sub-test 3: RLC SDUs on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

   - for sub-test 4: RLC SDUs on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

   - for sub-test 5: RLC SDUs on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

   - for sub-test 6: RLC SDUs on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

   - for sub-test 7: RLC SDUs on RB8 having the content equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

   - for sub-test 8: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.

   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

   - for sub-test 10: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

   - for sub-test 11: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

   - for sub-test 12: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

   - for sub-test 13: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

   - for sub-test 14: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.39.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (TC, 20 ms TTI)

### 14.2.39.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.39.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.39 for the uplink turbo channel coding and 20 ms TTI case.

14.2.39.2.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC14 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC15 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF2, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC12 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC13 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC9, UL_TFC10, UL_TFC12, UL_TFC13 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, UL_TFC14 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC9, UL_TFC11, UL_TFC12, UL_TFC14 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, UL_TFC15 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC6, UL_TFC15 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC7, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 11 | DL_TFC11, DL_TFC26 | UL_TFC8, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC6, UL_TFC15 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC7, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC8, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC9 are part of minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

#### 14.2.39.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 6: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 8: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 10: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 11: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 12: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 13: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 14: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.39.3 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 10 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.39 for the uplink convolutional channel coding and 10 ms TTI case.

See test case 14.2.39.1 for test procedure and test requirement.

### 14.2.39.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 20 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.39 for the uplink convolutional channel coding and 20 ms TTI case.

See test case 14.2.39.2 for test procedure and test requirement.

## 14.2.40 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH

#### 14.2.40.1 Conformance requirement

See 14.2.4.1.

#### 14.2.40.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.40.

#### 14.2.40.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 11 | DL_TFC11, DL_TFC26 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC2, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

#### 14.2.40.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3, 6, 9 and 12: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4, 7, 10 and 13: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5, 8, 11 and 14: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.41 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.2.41.1 Conformance requirement

See 14.2.4.1.

#### 14.2.41.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.41.

14.2.41.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (128 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TCF18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 11 | DL_TFC11, DL_TFC26 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC15, , UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

### 14.2.41.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 6: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 8: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 10: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 11: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 12: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 13: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 14: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.42 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.42.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB / 10 ms TTI

#### 14.2.42.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.42.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.42 for the downlink 10 ms TTI case.

#### 14.2.42.1.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (256 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, DL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, DL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, DL_TFC18 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, DL_TFC19 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, DL_TFC20 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, DL_TFC21 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, DL_TFC22 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, DL_TFC23 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC9, DL_TFC24 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC10, DL_TFC25 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 11 | DL_TFC11, DL_TFC26 | UL_TFC11, DL_TFC26 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC12, DL_TFC27 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC13, DL_TFC28 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC14, DL_TFC29 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB8 is 20 ms while the downlink TTI is 10 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over each TTIs, i.e. UL RLC SDU SIZE has been set to the uplink TFS size under test minus 8 (the size of a 7 bit length indicator and expansion bit). | | | | | | |

#### 14.2.42.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 6: RLC SDUs on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB8 having the content equal to the content of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 8: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 10: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 11: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 12: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 13: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 14: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.42.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB / 20 ms TTI

### 14.2.42.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.42.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.42 for the downlink 20 ms TTI case.

### 14.2.42.2.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (256 kbps, 20 ms) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x336 | N/A |
| | TF6, bits | N/A | N/A | N/A | 16x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| DL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| DL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| DL_TFC18 | (TF0, TF0, TF0, TF6, TF0) |
| DL_TFC19 | (TF1, TF0, TF0, TF6, TF0) |
| DL_TFC20 | (TF2, TF1, TF1, TF6, TF0) |
| DL_TFC21 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC30 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC31 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC32 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC33 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC34 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC35 | (TF2, TF1, TF1, TF4, TF1) |
| DL_TFC36 | (TF0, TF0, TF0, TF5, TF1) |
| DL_TFC37 | (TF1, TF0, TF0, TF5, TF1) |
| DL_TFC38 | (TF2, TF1, TF1, TF5, TF1) |
| DL_TFC39 | (TF0, TF0, TF0, TF6, TF1) |
| DL_TFC40 | (TF1, TF0, TF0, TF6, TF1) |
| DL_TFC41 | (TF2, TF1, TF1, TF6, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC22 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC23 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC24 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC25 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC26 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC27 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC28 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 8 | DL_TFC8, DL_TFC29 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21 UL_TFC23 | RB5: 81 RB6: 103 RB7: 60 RB8: 632 | RB5: 81 RB6: 103 RB7: 60 RB8: 632 |
| 9 | DL_TFC9, DL_TFC30 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39 RB6: 103 RB7: 60 RB8: 952 | RB5: No data RB6: No data RB7: No data RB8: 1272 |
| 10 | DL_TFC10, DL_TFC31 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39 RB6: 103 RB7: 60 RB8: 952 | RB5: 39 RB6: No data RB7: No data RB8: 1272 |
| 11 | DL_TFC11, DL_TFC32 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81 RB6: 103 RB7: 60 RB8: 952 | RB5: 81 RB6: 103 RB7: 60 RB8: 1272 |
| 12 | DL_TFC12, DL_TFC33 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39 RB6: 103 RB7: 60 RB8: 1272 | RB5: No data RB6: No data RB7: No data RB8: 2552 |
| 13 | DL_TFC13, DL_TFC34 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27 UL_TFC28 | RB5: 39 RB6: 103 RB7: 60 RB8: 1272 | RB5: 39 RB6: No data RB7: No data RB8: 2552 |
| 14 | DL_TFC14, DL_TFC35 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81 RB6: 103 RB7: 60 RB8: 1272 | RB5: 81 RB6: 103 RB7: 60 RB8: 2552 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 15 | DL_TFC15, DL_TFC36 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 16 | DL_TFC16, DL_TFC37 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27 UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 17 | DL_TFC17, DL_TFC38 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3832 |
| 18 | DL_TFC18, DL_TFC39 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 19 | DL_TFC19, DL_TFC40 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 20 | DL_TFC20, DL_TFC41 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |

NOTE1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs

NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).

#### 14.2.42.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB5 and RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 6: RLC SDUs on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB5 and RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
   - for sub-test 8: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 10: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 11: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 12: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 13: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 14: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 15: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 16: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 17: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 18: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 19: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 20: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.43 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.43.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB / 10 ms TTI

#### 14.2.43.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.43.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.43 for the downlink 10 ms TTI case.

#### 14.2.43.1.3 Method of test

See 14.1.2 for test procedure.

For the PS DL:384/UL:64 kbps radio bearer the downlink TTI is 10ms while the uplink TTI is 20ms. As the SS will send one DL SDU every 10 ms then the UE test loop function will return 2 UL SDUs per uplink TTI. To not cause uplink transmission buffer overflow then the UL RLC SDU size should be chosen such that the UE will transmit 2 RLC SDUs per uplink TTI. For the case when the transport format under test does not allow for 2 SDUs to fit into the transport format size without requiring concatenation then the UL RLC SDU size shall be chosen such that one SDU is returned per uplink TTI.

The following RLC parameter value is used in the RADIO BEARER SETUP message used to setup the PS DL:384/UL:64 kbps radio bearer:

| | |
|---|---|
| Uplink RLC<br>Transmission window size | 512 |

| | |
|---|---|
| Downlink RLC<br>Receiving window size | 512 |

NOTE The transmission and receiving window size values have been chosen to avoid that UE transmission and reception buffers become full during the test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (384 kbps, 10 ms) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| DL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| DL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| DL_TFC18 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC30 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC31 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC32 | (TF2, TF1, TF1, TF4, TF1) |
| DL_TFC33 | (TF0, TF0, TF0, TF5, TF1) |
| DL_TFC34 | (TF1, TF0, TF0, TF5, TF1) |
| DL_TFC35 | (TF2, TF1, TF1, TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 4) | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC19 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC20 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC21 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 2) | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC22 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 2) | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC23 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC17, UL_TFC18, UL_TFC15, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 2) | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC24 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 3) | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC25 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 3) | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 4) | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 8 | DL_TFC8, DL_TFC26 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 3) | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC27 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC18, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>(note 2) | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 10 | DL_TFC10, DL_TFC28 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>(note 2) | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 11 | DL_TFC11, DL_TFC29 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>(note 2) | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC12, DL_TFC30 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 13 | DL_TFC13, DL_TFC31 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 14 | DL_TFC14, DL_TFC32 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 4) | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 15 | DL_TFC15, DL_TFC33 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 16 | DL_TFC16, DL_TFC34 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 17 | DL_TFC17, DL_TFC35 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3832 |

NOTE 1: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit).

NOTE 2: RB8 (TF1/TF3): For sub-tests where uplink transport format TF1 (1x336) or TF3 (3x336) are used then no adoptation to the difference in downlink TTI (10 ms) and uplink TTI (20ms) is possible as this would require the UE to concatenate 2 SDUs into one PDU for TF1; or into three PDUs for TF3. For these sub-tests the UL RLC SDU size is set equal to the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

NOTE 3: RB8 (TF2/TF4): For sub-tests where uplink transport formats TF2 (2x336) or TF4 (4x336) is used then to adopt to the difference in downlink TTI (10 ms) and uplink TTI (20ms) the UL RLC SDU size has been chosen such that 2 SDUs will be returned per uplink TTI. I.e. the UL RLC SDU size is set equal to half the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

NOTE 4: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.

NOTE 5: DL_TFC1 for subtests 4, 7, 10, 13 and 16 and DL_TFC2 for subtests 5, 8, 11, 14 and 17 are necessary to cope with the effect of the acknowlegde PDUs in AM mode.

#### 14.2.43.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 4: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
- for sub-test 5: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by the SS.
- for sub-test 6: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 7: RLC SDUs on RB5 having the same content as sent by the SS; RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
- for sub-test 8: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink.
- for sub-test 9: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 10: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
- for sub-test 11: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by the SS.
- for sub-test 12: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 13: RLC SDUs on RB5 having the same content as sent by the SS; RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
- for sub-test 14: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink.
- for sub-test 15: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 16: RLC SDUs on RB5 having the same content as sent by the SS; RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
- for sub-test 17: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the the SS; and RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.43.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB / 20 ms TTI

### 14.2.43.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.43.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.43 for the downlink 20 ms TTI case.

The following RLC parameter value is used in the RADIO BEARER SETUP message used to setup the PS DL:384/UL:64 kbps radio bearer:

| | |
|---|---|
| Uplink RLC<br>Transmission window size | 512 |

| | |
|---|---|
| Downlink RLC<br>Receiving window size | 512 |

NOTE: The transmission and receiving window size values have been chosen to avoid that UE transmission and reception buffers become full during the test.

14.2.43.2.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (384 kbps, 20 ms) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x336 | N/A |
| | TF6, bits | N/A | N/A | N/A | 16x336 | N/A |
| | TF7, bits | N/A | N/A | N/A | 20x336 | N/A |
| | TF8, bits | N/A | N/A | N/A | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| DL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| DL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| DL_TFC18 | (TF0, TF0, TF0, TF6, TF0) |
| DL_TFC19 | (TF1, TF0, TF0, TF6, TF0) |
| DL_TFC20 | (TF2, TF1, TF1, TF6, TF0) |
| DL_TFC21 | (TF0, TF0, TF0, TF7, TF0) |
| DL_TFC22 | (TF1, TF0, TF0, TF7, TF0) |
| DL_TFC23 | (TF2, TF1, TF1, TF7, TF0) |
| DL_TFC24 | (TF0, TF0, TF0, TF8, TF0) |
| DL_TFC25 | (TF1, TF0, TF0, TF8, TF0) |
| DL_TFC26 | (TF2, TF1, TF1, TF8, TF0) |
| DL_TFC27 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC30 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC31 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC32 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC33 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC34 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC35 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC36 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC37 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC38 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC39 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC40 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC41 | (TF2, TF1, TF1, TF4, TF1) |
| DL_TFC42 | (TF0, TF0, TF0, TF5, TF1) |
| DL_TFC43 | (TF1, TF0, TF0, TF5, TF1) |
| DL_TFC44 | (TF2, TF1, TF1, TF5, TF1) |

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC45 | (TF0, TF0, TF0, TF6, TF1) |
| DL_TFC46 | (TF1, TF0, TF0, TF6, TF1) |
| DL_TFC47 | (TF2, TF1, TF1, TF6, TF1) |
| DL_TFC48 | (TF0, TF0, TF0, TF7, TF1) |
| DL_TFC49 | (TF1, TF0, TF0, TF7, TF1) |
| DL_TFC50 | (TF2, TF1, TF1, TF7, TF1) |
| DL_TFC51 | (TF0, TF0, TF0, TF8, TF1) |
| DL_TFC52 | (TF1, TF0, TF0, TF8, TF1) |
| DL_TFC53 | (TF2, TF1, TF1, TF8, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC28 | UL_TFC1,UL_TFC16 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC29 | UL_TFC2,UL_TFC17 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC30 | UL_TFC3,UL_TFC19 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC31 | UL_TFC4,UL_TFC19 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15, | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC32 | UL_TFC5,UL_TFC20 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18 UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC33 | UL_TFC6,UL_TFC21 | DL_TFC0, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 7 | DL_TFC7, DL_TFC34 | UL_TFC7,UL_TFC22 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC8, DL_TFC35 | UL_TFC8,UL_TFC23 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC36 | UL_TFC9,UL_TFC24 | DL_TFC0, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 10 | DL_TFC10, DL_TFC37 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24 UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 11 | DL_TFC11, DL_TFC38 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC12, DL_TFC39 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 13 | DL_TFC13, DL_TFC40 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 14 | DL_TFC14, DL_TFC41 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 15 | DL_TFC15, DL_TFC42 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC3, DL_TFC27, DL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 16 | DL_TFC16, DL_TFC43 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 17 | DL_TFC17, DL_TFC44 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3832 |
| 18 | DL_TFC18, DL_TFC45 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 19 | DL_TFC19, DL_TFC46 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 20 | DL_TFC20, DL_TFC47 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 21 | DL_TFC21, DL_TFC48 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 6392 |
| 22 | DL_TFC22, DL_TFC49 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 6392 |
| 23 | DL_TFC23, DL_TFC50 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 6392 |
| 24 | DL_TFC24, DL_TFC51 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 25 | DL_TFC25, DL_TFC52 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC1, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 26 | DL_TFC26, DL_TFC53 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC2, DL_TFC3, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 7672 |

NOTE1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs

NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).

NOTE 3: DL_TFC1 for subtests 4, 7, 10, 13, 16, 18, 21 and 24 and DL_TFC2 for subtests and 5, 8, 11, 14, 17, 20, 23 and 26 are necessary to cope with the effect of the acknowlegde PDUs in AM mode.

#### 14.2.43.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB5 and RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 6: RLC SDUs on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB5 and RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
   - for sub-test 8: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 10: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 11: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 12: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 13: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 14: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 15: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 16: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 17: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 18: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 19: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 20: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 21: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 22: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 23: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 24: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 25: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 26: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.44 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.44.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB / 10 ms TTI

#### 14.2.44.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.44.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.44 for the downlink 10 ms TTI case.

#### 14.2.44.1.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (128 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (2048 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x656 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x656 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x656 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x656 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x656 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x656 | N/A |
| | TF6, bits | N/A | N/A | N/A | 16x656 | N/A |
| | TF7, bits | N/A | N/A | N/A | 20x656 | N/A |
| | TF8, bits | N/A | N/A | N/A | 24x656 | N/A |
| | TF9, bits | N/A | N/A | N/A | 28x656 | N/A |
| | TF10, bits | N/A | N/A | N/A | 32x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| DL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| DL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| DL_TFC18 | (TF0, TF0, TF0, TF6, TF0) |
| DL_TFC19 | (TF1, TF0, TF0, TF6, TF0) |
| DL_TFC20 | (TF2, TF1, TF1, TF6, TF0) |
| DL_TFC21 | (TF0, TF0, TF0, TF7, TF0) |
| DL_TFC22 | (TF1, TF0, TF0, TF7, TF0) |
| DL_TFC23 | (TF2, TF1, TF1, TF7, TF0) |
| DL_TFC24 | (TF0, TF0, TF0, TF8, TF0) |
| DL_TFC25 | (TF1, TF0, TF0, TF8, TF0) |
| DL_TFC26 | (TF2, TF1, TF1, TF8, TF0) |
| DL_TFC27 | (TF0, TF0, TF0, TF9, TF0) |
| DL_TFC28 | (TF1, TF0, TF0, TF9, TF0) |
| DL_TFC29 | (TF2, TF1, TF1, TF9, TF0) |
| DL_TFC30 | (TF0, TF0, TF0, TF10, TF0) |
| DL_TFC31 | (TF1, TF0, TF0, TF10, TF0) |
| DL_TFC32 | (TF2, TF1, TF1, TF10, TF0) |
| DL_TFC33 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC34 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC35 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC36 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC37 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC38 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC39 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC40 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC41 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC42 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC43 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC44 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC45 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC46 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC47 | (TF2, TF1, TF1, TF4, TF1) |
| DL_TFC48 | (TF0, TF0, TF0, TF5, TF1) |
| DL_TFC49 | (TF1, TF0, TF0, TF5, TF1) |
| DL_TFC50 | (TF2, TF1, TF1, TF5, TF1) |
| DL_TFC51 | (TF0, TF0, TF0, TF6, TF1) |
| DL_TFC52 | (TF1, TF0, TF0, TF6, TF1) |
| DL_TFC53 | (TF2, TF1, TF1, TF6, TF1) |
| DL_TFC54 | (TF0, TF0, TF0, TF7, TF1) |
| DL_TFC55 | (TF1, TF0, TF0, TF7, TF1) |
| DL_TFC56 | (TF2, TF1, TF1, TF7, TF1) |
| DL_TFC57 | (TF0, TF0, TF0, TF8, TF1) |
| DL_TFC58 | (TF1, TF0, TF0, TF8, TF1) |
| DL_TFC59 | (TF2, TF1, TF1, TF8, TF1) |
| DL_TFC60 | (TF0, TF0, TF0, TF9, TF1) |
| DL_TFC61 | (TF1, TF0, TF0, TF9, TF1) |
| DL_TFC62 | (TF2, TF1, TF1, TF9, TF1) |
| DL_TFC63 | (TF0, TF0, TF0, TF10, TF1) |
| DL_TFC64 | (TF1, TF0, TF0, TF10, TF1) |
| DL_TFC65 | (TF2, TF1, TF1, TF10, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC34 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC35 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC36 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 4 | DL_TFC4, DL_TFC37 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 5 | DL_TFC5, DL_TFC38 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 6 | DL_TFC6, DL_TFC39 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 7 | DL_TFC7, DL_TFC40 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 8 | DL_TFC8, DL_TFC41 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 9 | DL_TFC9, DL_TFC42 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 10 | DL_TFC10, DL_TFC43 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 11 | DL_TFC11, DL_TFC44 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 12 | DL_TFC12, DL_TFC45 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 13 | DL_TFC13, DL_TFC46 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 14 | DL_TFC14, DL_TFC47 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27 UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 15 | DL_TFC15, DL_TFC48 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 16 | DL_TFC16, DL_TFC49 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 17 | DL_TFC17, DL_TFC50 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 7672 |
| 18 | DL_TFC18, DL_TFC51 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 10232 |
| 19 | DL_TFC19, DL_TFC52 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 10232 |
| 20 | DL_TFC20, DL_TFC53 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 10232 |
| 21 | DL_TFC21, DL_TFC54 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 12792 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 22 | DL_TFC22, DL_TFC55 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 12792 |
| 23 | DL_TFC23, DL_TFC56 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 12792 |
| 24 | DL_TFC24, DL_TFC57 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 15352 |
| 25 | DL_TFC25, DL_TFC58 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 15352 |
| 26 | DL_TFC26, DL_TFC59 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 15352 |
| 27 | DL_TFC27, DL_TFC60 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 17912 |
| 28 | DL_TFC28, DL_TFC61 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 17912 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 29 | DL_TFC29, DL_TFC62 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27 UL_TFC29 | RB5: 81 RB6: 103 RB7: 60 RB8: 2552 | RB5: 81 RB6: 103 RB7: 60 RB8: 17912 |
| 30 | DL_TFC30, DL_TFC63 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39 RB6: 103 RB7: 60 RB8: 2552 | RB5: No data RB6: No data RB7: No data RB8: 20472 |
| 31 | DL_TFC31, DL_TFC64 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39 RB6: 103 RB7: 60 RB8: 2552 | RB5: 39 RB6: No data RB7: No data RB8: 20472 |
| 32 | DL_TFC32, DL_TFC65 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27 UL_TFC29 | RB5: 81 RB6: 103 RB7: 60 RB8: 2552 | RB5: 81 RB6: 103 RB7: 60 RB8: 20472 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB8 is 20 ms while the downlink TTI is 10 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over each TTI, ie the uplink TFS size minus 8 bits (size of 7 bit length indicator and expansion bit).

#### 14.2.44.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 15 the UE shall return

   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.

   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.

- for sub-test 3: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 4: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 5: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 6: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 7: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 8: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 9: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 10: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 11: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 12: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 13: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 14: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 15: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 16: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 17: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 18: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 19: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 20: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 21: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 22: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 23: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
- for sub-test 24: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 25: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 26: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
- for sub-test 27: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 28: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 29: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
- for sub-test 30: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 31: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 32: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.44.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB / 20 ms TTI

### 14.2.44.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.44.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.44 for the downlink 20 ms TTI case.

### 14.2.44.2.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (128 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (2048 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x656 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x656 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x656 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x656 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x656 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x656 | N/A |
| | TF6, bits | N/A | N/A | N/A | 16x656 | N/A |
| | TF7, bits | N/A | N/A | N/A | 20x656 | N/A |
| | TF8, bits | N/A | N/A | N/A | 24x656 | N/A |
| | TF9, bits | N/A | N/A | N/A | 28x656 | N/A |
| | TF10, bits | N/A | N/A | N/A | 32x656 | N/A |
| | TF11, bits | N/A | N/A | N/A | 36x656 | N/A |
| | TF12, bits | N/A | N/A | N/A | 40x656 | N/A |
| | TF13, bits | N/A | N/A | N/A | 44x656 | N/A |
| | TF14, bits | N/A | N/A | N/A | 48x656 | N/A |
| | TF15, bits | N/A | N/A | N/A | 52x656 | N/A |
| | TF16, bits | N/A | N/A | N/A | 56x656 | N/A |
| | TF17, bits | N/A | N/A | N/A | 60x656 | N/A |
| | TF18, bits | N/A | N/A | N/A | 64x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| DL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| DL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| DL_TFC18 | (TF0, TF0, TF0, TF6, TF0) |
| DL_TFC19 | (TF1, TF0, TF0, TF6, TF0) |
| DL_TFC20 | (TF2, TF1, TF1, TF6, TF0) |
| DL_TFC21 | (TF0, TF0, TF0, TF7, TF0) |
| DL_TFC22 | (TF1, TF0, TF0, TF7, TF0) |
| DL_TFC23 | (TF2, TF1, TF1, TF7, TF0) |
| DL_TFC24 | (TF0, TF0, TF0, TF8, TF0) |
| DL_TFC25 | (TF1, TF0, TF0, TF8, TF0) |
| DL_TFC26 | (TF2, TF1, TF1, TF8, TF0) |
| DL_TFC27 | (TF0, TF0, TF0, TF9, TF0) |
| DL_TFC28 | (TF1, TF0, TF0, TF9, TF0) |
| DL_TFC29 | (TF2, TF1, TF1, TF9, TF0) |
| DL_TFC30 | (TF0, TF0, TF0, TF10, TF0) |
| DL_TFC31 | (TF1, TF0, TF0, TF10, TF0) |
| DL_TFC32 | (TF2, TF1, TF1, TF10, TF0) |
| DL_TFC33 | (TF0, TF0, TF0, TF11, TF0) |
| DL_TFC34 | (TF1, TF0, TF0, TF11, TF0) |
| DL_TFC35 | (TF2, TF1, TF1, TF11, TF0) |
| DL_TFC36 | (TF0, TF0, TF0, TF12, TF0) |
| DL_TFC37 | (TF1, TF0, TF0, TF12, TF0) |
| DL_TFC38 | (TF2, TF1, TF1, TF12, TF0) |
| DL_TFC39 | (TF0, TF0, TF0, TF13, TF0) |
| DL_TFC40 | (TF1, TF0, TF0, TF13, TF0) |
| DL_TFC41 | (TF2, TF1, TF1, TF13, TF0) |
| DL_TFC42 | (TF0, TF0, TF0, TF14, TF0) |
| DL_TFC43 | (TF1, TF0, TF0, TF14, TF0) |
| DL_TFC44 | (TF2, TF1, TF1, TF14, TF0) |
| DL_TFC45 | (TF0, TF0, TF0, TF15, TF0) |
| DL_TFC46 | (TF1, TF0, TF0, TF15, TF0) |
| DL_TFC47 | (TF2, TF1, TF1, TF15, TF0) |
| DL_TFC48 | (TF0, TF0, TF0, TF16, TF0) |
| DL_TFC49 | (TF1, TF0, TF0, TF16, TF0) |
| DL_TFC50 | (TF2, TF1, TF1, TF16, TF0) |
| DL_TFC51 | (TF0, TF0, TF0, TF17, TF0) |
| DL_TFC52 | (TF1, TF0, TF0, TF17, TF0) |
| DL_TFC53 | (TF2, TF1, TF1, TF17, TF0) |
| DL_TFC54 | (TF0, TF0, TF0, TF18, TF0) |
| DL_TFC55 | (TF1, TF0, TF0, TF18, TF0) |
| DL_TFC56 | (TF2, TF1, TF1, TF18, TF0) |
| DL_TFC57 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC58 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC59 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC60 | (TF0, TF0, TF0, TF1, TF1) |

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC61 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC61 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC63 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC64 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC65 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC66 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC67 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC68 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC69 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC70 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC71 | (TF2, TF1, TF1, TF4, TF1) |
| DL_TFC72 | (TF0, TF0, TF0, TF5, TF1) |
| DL_TFC73 | (TF1, TF0, TF0, TF5, TF1) |
| DL_TFC74 | (TF2, TF1, TF1, TF5, TF1) |
| DL_TFC75 | (TF0, TF0, TF0, TF6, TF1) |
| DL_TFC76 | (TF1, TF0, TF0, TF6, TF1) |
| DL_TFC77 | (TF2, TF1, TF1, TF6, TF1) |
| DL_TFC78 | (TF0, TF0, TF0, TF7, TF1) |
| DL_TFC79 | (TF1, TF0, TF0, TF7, TF1) |
| DL_TFC80 | (TF2, TF1, TF1, TF7, TF1) |
| DL_TFC81 | (TF0, TF0, TF0, TF8, TF1) |
| DL_TFC82 | (TF1, TF0, TF0, TF8, TF1) |
| DL_TFC83 | (TF2, TF1, TF1, TF8, TF1) |
| DL_TFC84 | (TF0, TF0, TF0, TF9, TF1) |
| DL_TFC85 | (TF1, TF0, TF0, TF9, TF1) |
| DL_TFC86 | (TF2, TF1, TF1, TF9, TF1) |
| DL_TFC87 | (TF0, TF0, TF0, TF10, TF1) |
| DL_TFC88 | (TF1, TF0, TF0, TF10, TF1) |
| DL_TFC89 | (TF2, TF1, TF1, TF10, TF1) |
| DL_TFC90 | (TF0, TF0, TF0, TF11, TF1) |
| DL_TFC91 | (TF1, TF0, TF0, TF11, TF1) |
| DL_TFC92 | (TF2, TF1, TF1, TF11, TF1) |
| DL_TFC93 | (TF0, TF0, TF0, TF12, TF1) |
| DL_TFC94 | (TF1, TF0, TF0, TF12, TF1) |
| DL_TFC95 | (TF2, TF1, TF1, TF12, TF1) |
| DL_TFC96 | (TF0, TF0, TF0, TF13, TF1) |
| DL_TFC97 | (TF1, TF0, TF0, TF13, TF1) |
| DL_TFC98 | (TF2, TF1, TF1, TF13, TF1) |
| DL_TFC99 | (TF0, TF0, TF0, TF14, TF1) |
| DL_TFC100 | (TF1, TF0, TF0, TF14, TF1) |
| DL_TFC101 | (TF2, TF1, TF1, TF14, TF1) |
| DL_TFC102 | (TF0, TF0, TF0, TF15, TF1) |
| DL_TFC103 | (TF1, TF0, TF0, TF15, TF1) |
| DL_TFC104 | (TF2, TF1, TF1, TF15, TF1) |
| DL_TFC105 | (TF0, TF0, TF0, TF16, TF1) |
| DL_TFC106 | (TF1, TF0, TF0, TF16, TF1) |
| DL_TFC107 | (TF2, TF1, TF1, TF16, TF1) |
| DL_TFC108 | (TF0, TF0, TF0, TF17, TF1) |
| DL_TFC109 | (TF1, TF0, TF0, TF17, TF1) |
| DL_TFC110 | (TF2, TF1, TF1, TF17, TF1) |
| DL_TFC111 | (TF0, TF0, TF0, TF18, TF1) |
| DL_TFC112 | (TF1, TF0, TF0, TF18, TF1) |
| DL_TFC113 | (TF2, TF1, TF1, TF18, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC58 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC59 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC60 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 4 | DL_TFC4, DL_TFC61 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18 UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 5 | DL_TFC5, DL_TFC62 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 6 | DL_TFC6, DL_TFC63 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 7 | DL_TFC7, DL_TFC64 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 8 | DL_TFC8, DL_TFC65 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 9 | DL_TFC9, DL_TFC66 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 10 | DL_TFC10, DL_TFC67 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 11 | DL_TFC11, DL_TFC68 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9 UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 12 | DL_TFC12, DL_TFC69 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 13 | DL_TFC13, DL_TFC70 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 14 | DL_TFC14, DL_TFC71 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 15 | DL_TFC15, DL_TFC72 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 16 | DL_TFC16, DL_TFC73 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 17 | DL_TFC17, DL_TFC74 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27 UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 7672 |
| 18 | DL_TFC18, DL_TFC75 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 10232 |
| 19 | DL_TFC19, DL_TFC76 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 10232 |
| 20 | DL_TFC20, DL_TFC77 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 10232 |
| 21 | DL_TFC21, DL_TFC78 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 12792 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 22 | DL_TFC22, DL_TFC79 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 12792 |
| 23 | DL_TFC23, DL_TFC80 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 12792 |
| 24 | DL_TFC24, DL_TFC81 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 15352 |
| 25 | DL_TFC25, DL_TFC82 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 15352 |
| 26 | DL_TFC26, DL_TFC83 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 15352 |
| 27 | DL_TFC27, DL_TFC84 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 17912 |
| 28 | DL_TFC28, DL_TFC85 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 17912 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 29 | DL_TFC29, DL_TFC86 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 17912 |
| 30 | DL_TFC30, DL_TFC87 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 20472 |
| 31 | DL_TFC31, DL_TFC88 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 20472 |
| 32 | DL_TFC32, DL_TFC89 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 20472 |
| 33 | DL_TFC33, DL_TFC90 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 23032 |
| 34 | DL_TFC34, DL_TFC91 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 23032 |
| 35 | DL_TFC35, DL_TFC92 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 23032 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 36 | DL_TFC36, DL_TFC93 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 25592 |
| 37 | DL_TFC37, DL_TFC94 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 25592 |
| 38 | DL_TFC38, DL_TFC95 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 25592 |
| 39 | DL_TFC39, DL_TFC96 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 28152 |
| 40 | DL_TFC40, DL_TFC97 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 28152 |
| 41 | DL_TFC41, DL_TFC98 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 28152 |
| 42 | DL_TFC42, DL_TFC99 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 30712 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 43 | DL_TFC43, DL_TFC100 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 30712 |
| 44 | DL_TFC44, DL_TFC101 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 30712 |
| 45 | DL_TFC45, DL_TFC102 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 33272 |
| 46 | DL_TFC46, DL_TFC103 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 33272 |
| 47 | DL_TFC47, DL_TFC104 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 33272 |
| 48 | DL_TFC48, DL_TFC105 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 35832 |
| 49 | DL_TFC49, DL_TFC106 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 35832 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 50 | DL_TFC50, DL_TFC107 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 35832 |
| 51 | DL_TFC51, DL_TFC108 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 38392 |
| 52 | DL_TFC52, DL_TFC109 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 38392 |
| 53 | DL_TFC53, DL_TFC110 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 38392 |
| 54 | DL_TFC54, DL_TFC111 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 40952 |
| 55 | DL_TFC55, DL_TFC112 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 40952 |
| 56 | DL_TFC56, DL_TFC113 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 40952 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

#### 14.2.44.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 6: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 8: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 10: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 11: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 12: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 13: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 14: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 15: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 16: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 17: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 18: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 19: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 20: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 21: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 22: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 23: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 24: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 25: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 26: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 27: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 28: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 29: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 30: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 31: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 32: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 33: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 34: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 35: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 36: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 37: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 38: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 39: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 40: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 41: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 42: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 43: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 44: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 45: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 46: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 47: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 48: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 49: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 50: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 51: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 52: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 53: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 54: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 55: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 56: RLC SDUs on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.45 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming / unknown / UL:57.6 DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.45.1 Conformance requirement

See 14.2.4.1.

### 14.2.45.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.45.

### 14.2.45.3 Method of test

See 14.1.2 for test procedure.

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Streaming / unknown / UL:57.6 DL:57.6 kbps / CS RAB (RB8):

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (57.6 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x576 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x576 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x576 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x576 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x576 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (57.6 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x576 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x576 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x576 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x576 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x576 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, DL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, DL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3,UL_TFC18 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 576 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, DL_TFC19 | DL_TFC0, DL_TFC15, , UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 576 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, DL_TFC20 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, DL_TFC21 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1152 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, DL_TFC22 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2x576 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, DL_TFC23 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2x576 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC9, DL_TFC24 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 3x576 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 3x576 |
| 11 | DL_TFC11, DL_TFC26 | UL_TFC11, DL_TFC26 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3x576 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC12, DL_TFC27 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC26 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 4x576 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC13, DL_TFC28 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 4x576 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC14, DL_TFC29 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 4x576 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

#### 14.2.45.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified in the actual sub test.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3, 6, 9 and 12: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4, 7, 10 and 13: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5, 8, 11 and 14: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.46 Void

## 14.2.47 Void

## 14.2.48 Void

## 14.2.49 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.49.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI

#### 14.2.49.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.49.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.49 for the 20 ms TTI case.

#### 14.2.49.1.3 Method of test

See 14.1.2 for test procedure. However, in this test the RM attribute values used shall be derived separately in the UL and DL as the mid-values of the RM attríbute value ranges as specified by the reference radio bearer configuration.

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB8):

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 2x640 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 2x640 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC7 | UL_TFC1, DL_TFC7 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC8 | UL_TFC2, DL_TFC8 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC9 | UL_TFC3, DL_TFC9 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2x640 |
| 4 | DL_TFC4, DL_TFC10 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2x640 |
| 5 | DL_TFC5, DL_TFC11 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2x640 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

14.2.49.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by the SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.49.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI

### 14.2.49.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.49.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.49 for the 40 ms TTI case.

### 14.2.49.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB8):

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 4x640 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 4x640 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC7 | UL_TFC1, DL_TFC7 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC7 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC8 | UL_TFC2, DL_TFC8 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC9 | UL_TFC3, DL_TFC9 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 4x640 |
| 4 | DL_TFC4, DL_TFC10 | UL_TFC4, DL_TFC10 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 4x640 |
| 5 | DL_TFC5, DL_TFC11 | UL_TFC5, DL_TFC11 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 4x640 |

NOTE1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC6 are part of minimum set of TFCIs.
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TB size.

#### 14.2.49.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: four RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 4: RLC SDUs on RB5 and four RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 5: RLC SDUs on RB5, RB6 and RB7; and four RLC SDUs on RB8 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.49a Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL(12.2 7.95 5.9 4.75) kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH (20ms TTI)

### 14.2.49a.1 Conformance requirement

See 14.2.4.1.

### 14.2.49a.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.49a for 20ms TTI case.

### 14.2.49a.3 Method of test

See 14.1.2 for test procedure.

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB8):

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 2x640 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, 64 kbps RAB, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0, TF0) |
| UL_TFC5 | (TF5, TF4, TF1, TF0, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC8 | (TF2, TF1, TF0, TF1, TF0) |
| UL_TFC9 | (TF3, TF2, TF0, TF1, TF0) |
| UL_TFC10 | (TF4, TF3, TF0, TF1, TF0) |
| UL_TFC11 | (TF5, TF4, TF1, TF1, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC13 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC14 | (TF2, TF1, TF0, TF0, TF1) |
| UL_TFC15 | (TF3, TF2, TF0, TF0, TF1) |
| UL_TFC16 | (TF4, TF3, TF0, TF0, TF1) |
| UL_TFC17 | (TF5, TF4, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF0, TF1, TF1) |
| UL_TFC21 | (TF3, TF2, TF0, TF1, TF1) |
| UL_TFC22 | (TF4, TF3, TF0, TF1, TF1) |
| UL_TFC23 | (TF5, TF4, TF1, TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 2x640 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB2, RB3, RB4, 64 kbps RAB, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0, TF0) |
| DL_TFC5 | (TF5, TF4, TF1, TF0, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC8 | (TF2, TF1, TF0, TF1, TF0) |
| DL_TFC9 | (TF3, TF2, TF0, TF1, TF0) |
| DL_TFC10 | (TF4, TF3, TF0, TF1, TF0) |
| DL_TFC11 | (TF5, TF4, TF1, TF1, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC13 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC14 | (TF2, TF1, TF0, TF0, TF1) |
| DL_TFC15 | (TF3, TF2, TF0, TF0, TF1) |
| DL_TFC16 | (TF4, TF3, TF0, TF0, TF1) |
| DL_TFC17 | (TF5, TF4, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF0, TF1, TF1) |
| DL_TFC21 | (TF3, TF2, TF0, TF1, TF1) |
| DL_TFC22 | (TF4, TF3, TF0, TF1, TF1) |
| DL_TFC23 | (TF5, TF4, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC13 | UL_TFC1, UL_TFC13 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC13 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC14 | UL_TFC2, UL_TFC14 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC14 | RB5: 42<br>RB6: 53<br>RB7: 60<br>RB8: 640 | RB5: 42<br>RB6: 53<br>RB7: No data<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC15 | UL_TFC3, UL_TFC15 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC15 | RB5: 55<br>RB6: 63<br>RB7: 60<br>RB8: 640 | RB5: 55<br>RB6: 63<br>RB7: No data<br>RB8: No data |
| 4 | DL_TFC4, DL_TFC16 | UL_TFC4, UL_TFC16 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC16 | RB5: 75<br>RB6: 84<br>RB7: 60<br>RB8: 640 | RB5: 75<br>RB6: 84<br>RB7: No data<br>RB8: No data |
| 5 | DL_TFC5, DL_TFC17 | UL_TFC5, UL_TFC17 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 6 | DL_TFC6, DL_TFC18 | UL_TFC6, UL_TFC18 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC18 | RB5:81<br>RB6:103<br>RB7: 60<br>RB8: 1280 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1280 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 7 | DL_TFC7, DL_TFC19 | UL_TFC7, UL_TFC19 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7, UL_TFC12, UL_TFC13, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1280 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1280 |
| 8 | DL_TFC8, DL_TFC20 | UL_TFC8, UL_TFC20 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC12, UL_TFC14, UL_TFC18, UL_TFC20 | RB5: 42<br>RB6: 53<br>RB7: 60<br>RB8: 1280 | RB5: 42<br>RB6: 53<br>RB7: No data<br>RB8: 1280 |
| 9 | DL_TFC9, DL_TFC21 | UL_TFC9, UL_TFC21 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9, UL_TFC12, UL_TFC15, UL_TFC18, UL_TFC21 | RB5: 55<br>RB6: 63<br>RB7: 60<br>RB8: 1280 | RB5: 55<br>RB6: 63<br>RB7: No data<br>RB8: 1280 |
| 10 | DL_TFC10, DL_TFC22 | UL_TFC10, UL_TFC22 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC12, UL_TFC16, UL_TFC18, UL_TFC22 | RB5: 75<br>RB6: 84<br>RB7: 60<br>RB8: 1280 | RB5: 75<br>RB6: 84<br>RB7: No data<br>RB8: 1280 |
| 11 | DL_TFC11, DL_TFC23 | UL_TFC11, UL_TFC23 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11, UL_TFC12, UL_TFC17, UL_TFC18, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1280 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1280 |

NOTE1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6 and UL_TFC12 are part of minimum set of TFCIs.

NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TB size.

#### 14.2.49a.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2, 3, 4: RLC SDUs on RB5, RB6 having the same content as sent by SS; and no data shall be received on RB7 and RB8.
   - for sub-test 5: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 6: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6, RB7.
   - for sub-test 8, 9, 10: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by SS; and no data shall be received on RB7.
   - for sub-test 11: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.49a.1 Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL(12.2 7.95 5.9 4.75) kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH (40ms TTI)

#### 14.2.49a.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.49a.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.49a for 40 ms TTI case .

#### 14.2.49a.1.3 Method of test

See 14.1.2 for test procedure.

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB8):

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 4x640 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, 64 kbps RAB, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0, TF0) |
| UL_TFC5 | (TF5, TF4, TF1, TF0, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC8 | (TF2, TF1, TF0, TF1, TF0) |
| UL_TFC9 | (TF3, TF2, TF0, TF1, TF0) |
| UL_TFC10 | (TF4, TF3, TF0, TF1, TF0) |
| UL_TFC11 | (TF5, TF4, TF1, TF1, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC13 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC14 | (TF2, TF1, TF0, TF0, TF1) |
| UL_TFC15 | (TF3, TF2, TF0, TF0, TF1) |
| UL_TFC16 | (TF4, TF3, TF0, TF0, TF1) |
| UL_TFC17 | (TF5, TF4, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF0, TF1, TF1) |
| UL_TFC21 | (TF3, TF2, TF0, TF1, TF1) |
| UL_TFC22 | (TF4, TF3, TF0, TF1, TF1) |
| UL_TFC23 | (TF5, TF4, TF1, TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 (alt. 1x0) | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 4x640 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB2, RB3, RB4, 64 kbps RAB, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0, TF0) |
| DL_TFC5 | (TF5, TF4, TF1, TF0, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC8 | (TF2, TF1, TF0, TF1, TF0) |
| DL_TFC9 | (TF3, TF2, TF0, TF1, TF0) |
| DL_TFC10 | (TF4, TF3, TF0, TF1, TF0) |
| DL_TFC11 | (TF5, TF4, TF1, TF1, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC13 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC14 | (TF2, TF1, TF0, TF0, TF1) |
| DL_TFC15 | (TF3, TF2, TF0, TF0, TF1) |
| DL_TFC16 | (TF4, TF3, TF0, TF0, TF1) |
| DL_TFC17 | (TF5, TF4, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF0, TF1, TF1) |
| DL_TFC21 | (TF3, TF2, TF0, TF1, TF1) |
| DL_TFC22 | (TF4, TF3, TF0, TF1, TF1) |
| DL_TFC23 | (TF5, TF4, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC13 | UL_TFC1, UL_TFC13 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC13 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC14 | UL_TFC2, UL_TFC14 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC14 | RB5: 42<br>RB6: 53<br>RB7: 60<br>RB8: 640 | RB5: 42<br>RB6: 53<br>RB7: No data<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC15 | UL_TFC3, UL_TFC15 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC15 | RB5: 55<br>RB6: 63<br>RB7: 60<br>RB8: 640 | RB5: 55<br>RB6: 63<br>RB7: No data<br>RB8: No data |
| 4 | DL_TFC4, DL_TFC16 | UL_TFC4, UL_TFC16 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC16 | RB5: 75<br>RB6: 84<br>RB7: 60<br>RB8: 640 | RB5: 75<br>RB6: 84<br>RB7: No data<br>RB8: No data |
| 5 | DL_TFC5, DL_TFC17 | UL_TFC5, UL_TFC17 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 6 | DL_TFC6, DL_TFC18 | UL_TFC6, UL_TFC18 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC12, UL_TFC18 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2560 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2560 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 7 | DL_TFC7, DL_TFC19 | UL_TFC7, UL_TFC19 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7, UL_TFC12, UL_TFC13, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2560 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2560 |
| 8 | DL_TFC8, DL_TFC20 | UL_TFC8, UL_TFC20 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC12, UL_TFC14, UL_TFC18, UL_TFC20 | RB5: 42<br>RB6: 53<br>RB7: 60<br>RB8: 2560 | RB5: 42<br>RB6: 53<br>RB7: No data<br>RB8: 2560 |
| 9 | DL_TFC9, DL_TFC21 | UL_TFC9, UL_TFC21 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9, UL_TFC12, UL_TFC15, UL_TFC18, UL_TFC21 | RB5: 55<br>RB6: 63<br>RB7: 60<br>RB8: 2560 | RB5: 55<br>RB6: 63<br>RB7: No data<br>RB8: 2560 |
| 10 | DL_TFC10, DL_TFC22 | UL_TFC10, UL_TFC22 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC12, UL_TFC16, UL_TFC18, UL_TFC22 | RB5: 75<br>RB6: 84<br>RB7: 60<br>RB8: 2560 | RB5: 75<br>RB6: 84<br>RB7: No data<br>RB8: 2560 |
| 11 | DL_TFC11, DL_TFC23 | UL_TFC11, UL_TFC23 | DL_TFC0, DL_TFC12, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11, UL_TFC12, UL_TFC17, UL_TFC18, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2560 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2560 |

NOTE1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6 and UL_TFC12 are part of minimum set of TFCIs

NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TB size.

#### 14.2.49a.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2, 3, 4: RLC SDUs on RB5, RB6 having the same content as sent by SS; and no data shall be received on RB7 and RB8.
   - for sub-test 5: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 6: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6, RB7.
   - for sub-test 8, 9, 10: RLC SDUs on RB5, RB6 and RB8 having the same content as sent by SS; and no data shall be received on RB7.
   - for sub-test 11: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.50 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.50.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 20 ms TTI

#### 14.2.50.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.50.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.50 for the 20 ms TTI case.

14.2.50.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5 and RB6):

| | RB5 (64 kbps) | RB6 (64 kbps) |
|---|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | | |

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (64 kbps) | RB6 (64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 2x640 | 1x148 |
| | TF2, bits | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF0, TF1) |
| UL_TFC5 | (TF1, TF0, TF1) |
| UL_TFC6 | (TF0, TF1, TF1) |
| UL_TFC7 | (TF1, TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | RB6 (64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 2x640 | 1x148 |
| | TF2, bits | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF0, TF1, TF0) |
| DL_TFC3 | (TF1, TF1, TF0) |
| DL_TFC4 | (TF0, TF0, TF1) |
| DL_TFC5 | (TF1, TF0, TF1) |
| DL_TFC6 | (TF0, TF1, TF1) |
| DL_TFC7 | (TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC5 | UL_TFC1, DL_TFC5 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC5 | RB5: 640<br>RB6: 640 | RB5: 2x640<br>RB6: No data |
| 2 | DL_TFC2, DL_TFC6 | UL_TFC2, DL_TFC6 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6 | RB5: 640<br>RB6: 640 | RB5: No data<br>RB6: 2x640 |
| 3 | DL_TFC3, DL_TFC7 | UL_TFC3, DL_TFC7 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 640<br>RB6: 640 | RB5: 2x640<br>RB6: 2x640 |

NOTE1: UL_TFC0, UL_TFC1, UL_TFC2, UL_and UL_TFC4 are part of minimum set of TFCIs
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TB size.

### 14.2.50.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 3: RLC SDUs on RB5 and RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.50.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 40 ms TTI

### 14.2.50.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.50.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.50 for the 40 ms TTI case.

### 14.2.50.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5 and RB6):

| | **RB5 (64 kbps)** | **RB6 (64 kbps)** |
|---|---|---|
| Uplink RLC | | |
| TM RLC | | |
| Segmentation indication | FALSE | FALSE |
| Transmission RLC discard | | |
| CHOICE *SDU Discard Mode* | | |
| Timer based no explicit | | |
| Timer_discard | 100ms | 100ms |
| Downlink RLC | | |
| TM RLC | | |
| Segmentation indication | FALSE | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | | |

See 14.1.2 for test procedure.

Uplink TFS:

| | **TFI** | **RB5 (64 kbps)** | **RB6 (64 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 4x640 | 1x148 |
| | TF2, bits | N/A | N/A | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF0, TF1) |
| UL_TFC5 | (TF1, TF0, TF1) |
| UL_TFC6 | (TF0, TF1, TF1) |
| UL_TFC7 | (TF1, TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | RB6 (64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 4x640 | 1x148 |
| | TF2, bits | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF0, TF1, TF0) |
| DL_TFC3 | (TF1, TF1, TF0) |
| DL_TFC4 | (TF0, TF0, TF1) |
| DL_TFC5 | (TF1, TF0, TF1) |
| DL_TFC6 | (TF0, TF1, TF1) |
| DL_TFC7 | (TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC5 | UL_TFC1, DL_TFC5 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC5 | RB5: 640 RB6: 640 | RB5: 4x640 RB6: No data |
| 2 | DL_TFC2, DL_TFC6 | UL_TFC2, DL_TFC6 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6 | RB5: 640 RB6: 640 | RB5: No data RB6: 4x640 |
| 3 | DL_TFC3, DL_TFC7 | UL_TFC3, DL_TFC7 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 640 RB6: 640 | RB5: 4x640 RB6: 4x640 |

NOTE1: UL_TFC0, UL_TFC1, UL_TFC2, UL_and UL_TFC4 are part of minimum set of TFCIs
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TB size.

### 14.2.50.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.

- for sub-test 3: RLC SDUs on RB5 and RB6 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.51 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.51.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:64 DL:64 kbps / PS RAB

#### 14.2.51.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.51.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.51 for the 20 ms TTI case.

#### 14.2.51.1.3 Method of test

See 14.1.2 for test procedure.

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps, 20 ms TTI)** | **RB6 (I/B 64 kbps, 20 ms TTI)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps, 20 ms TTI) | RB6 (I/B 64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, UL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, UL_TFC12 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC3, UL_TFC13 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 952 | RB5: No data<br>RB6: 952 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC4, UL_TFC14 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 1272 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC5, UL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC6, UL_TFC16 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC7, UL_TFC17 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 2x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC8, UL_TFC18 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 640<br>RB6: 952 | RB5: 2x640<br>RB6: 952 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 9 | DL_TFC9, DL_TFC19 | UL_TFC9, UL_TFC19 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 2x640<br>RB6: 1272 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5 and UL_TFC10 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). | | | | | | |

#### 14.2.51.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1, 2, 3, 4: RLC SDUs on RB6 having the same content as sent by the SS; and no data shall be received on RB5.
   - for sub-test 5: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6.
   - for sub-test 6, 7, 8 and 9: RLC SDUs on RB5 and RB6 having the same content as sent by the SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.51.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:64 DL:64 kbps / PS RAB

#### 14.2.51.2.1 Conformance requirement

See 14.2.4.1.

#### 14.2.51.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.51 for the 40 ms TTI case.

14.2.51.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 14.1.2 for test procedure.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 64 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, DL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, DL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC3, DL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 952 | RB5: No data<br>RB6: 952 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC4, DL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 1272 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC5, DL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC6, DL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC7, DL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC8, DL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 640<br>RB6: 952 | RB5: 4x640<br>RB6: 952 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 9 | DL_TFC9, DL_TFC19 | UL_TFC9, DL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640 RB6: 1272 | RB5: 4x640 RB6: 1272 |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC5, UL_and UL_TFC10 are part of minimum set of TFCIs<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB5 has been set equal to the uplink TB size . | | | | | | |

#### 14.2.51.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 3, 4: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 5: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6, 7, 8 and 9: RLC SDUs on RB5 and RLC SDUs on RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.51a Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or Background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 14.2.51a.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:8 DL:8 kbps / PS RAB

#### 14.2.51a.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.51a.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.51a for the 20 ms TTI case.

14.2.51a.1.3 Method of test

Initial Conditions

The following RLC Info parameter values for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: 'Timer based discard without explicit signalling' is configured in uplink to secure that the UE will be able to return data in uplink for the case when the UE test loop function, due to processing delays, will not deliver the SDUs in one and the same TTI, but instead in two subsequent TTIs. | |

See 14.1.2 for test procedure.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 8 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF0, TF1) |
| UL_TFC5 | (TF1, TF0, TF1) |
| UL_TFC6 | (TF0, TF1, TF1) |
| UL_TFC7 | (TF1, TF1, TF1) |

Downlink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 8kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF0, TF1, TF0) |
| DL_TFC3 | (TF1, TF1, TF0) |
| DL_TFC4 | (TF0, TF0, TF1) |
| DL_TFC5 | (TF1, TF0, TF1) |
| DL_TFC6 | (TF0, TF1, TF1) |
| DL_TFC7 | (TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_ TFC2<br>DL_ TFC6 | UL_ TFC2<br>UL_ TFC6 | DL_TFC0, DL_TFC4,<br>UL_TFC0, UL_TFC4, | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC4,<br>UL_TFC6 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_ TFC1<br>DL_ TFC5 | UL_ TFC1<br>UL_ TFC5 | DL_TFC0, DL_TFC4,<br>UL_TFC0, UL_TFC4, | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC4,<br>UL_TFC5 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: No data |
| 3 | DL_TFC3<br>DL_TFC7 | UL_TFC3<br>UL_TFC7 | DL_TFC0, DL_TFC4,<br>UL_TFC0, UL_TFC4, | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC7 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: 312 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2_and UL_TFC4 are part of minimum set of TFCIs

NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).

### 14.2.51a.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 2: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 3: RLC SDUs on RB5 and RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.51a.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:8 DL:8 kbps / PS RAB

### 14.2.51a.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.51a.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.51a for the 40 ms TTI case.

### 14.2.51a.2.3 Method of test

Initial Conditions

The following RLC Info parameter values for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: 'Timer based discard without explicit signalling' is configured in uplink to secure that the UE will be able to return data in uplink for the case when the UE test loop function, due to processing delays, will not deliver the SDUs in one and the same TTI, but instead in two subsequent TTIs. | |

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 8 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF1, TF0, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF0, TF1) |
| UL_TFC5 | (TF0, TF1, TF1) |
| UL_TFC6 | (TF1, TF0, TF1) |
| UL_TFC7 | (TF1, TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF1, TF0, TF0) |
| DL_TFC3 | (TF1, TF1, TF0) |
| DL_TFC4 | (TF0, TF0, TF1) |
| DL_TFC5 | (TF0, TF1, TF1) |
| DL_TFC6 | (TF1, TF0, TF1) |
| DL_TFC7 | (TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) Note 2 | Test data size (bits) Note 2 |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1<br>DL_TFC5, | UL_TFC1<br>UL_TFC5 | DL_TFC0, DL_TFC4,<br>UL_TFC0, UL_TFC4, | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC4,<br>UL_TFC5 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2<br>DL_TFC5, | UL_TFC2<br>UL_TFC6 | DL_TFC0, DL_TFC4,<br>UL_TFC0, UL_TFC4, | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC4,<br>UL_TFC6 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: No data |
| 3 | DL_TFC3<br>DL_TFC5, | UL_TFC3<br>UL_TFC7 | DL_TFC0, DL_TFC4,<br>UL_TFC0, UL_TFC4, | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC7 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: 312 |

NOTE1: UL_TFC0, UL_TFC1, UL_TFC2_and UL_TFC4 are part of minimum set of TFCIs
NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).

### 14.2.51a.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 2: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 3: RLC SDUs on RB5 and RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

# 14.2.51b Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or Background / UL:16 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

## 14.2.51b.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:16 DL:64 kbps / PS RAB

### 14.2.51b.1.1 Conformance requirement

See 14.2.4.1.

### 14.2.51b.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.51b for the 20 ms TTI case.

### 14.2.51b.1.3 Method of test

Initial Conditions

The following RLC Info parameter values for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: 'Timer based discard without explicit signalling' is configured in uplink to secure that the UE will be able to return data in uplink for the case when the UE test loop function, due to processing delays, will not deliver the SDUs in one and the same TTI, but instead in two subsequent TTIs. | |

See 14.1.2 for test procedure.

For the PS UL:16/DL:64 kbps radio bearer the downlink TTI is 20ms while the uplink TTI is 40ms. As the SS will send one DL SDU every 20 ms then the UE test loop function will return 2 UL SDUs per uplink TTI. To not cause uplink transmission buffer overflow then the UL RLC SDU size should be chosen such that the UE will transmit 2 RLC SDUs per uplink TTI. For the case when the transport format under test does not allow for 2 SDUs to fit into the transport format size without requiring concatenation then the UL RLC SDU size shall be chosen such that one SDU is returned per uplink TTI.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 16 kbps, 40 ms TTI)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF1, TF0, TF0) |
| UL_TFC4 | (TF1, TF1, TF0) |
| UL_TFC5 | (TF1, TF2, TF0) |
| UL_TFC6 | (TF0, TF0, TF1) |
| UL_TFC7 | (TF0, TF1, TF1) |
| UL_TFC8 | (TF0, TF2, TF1) |
| UL_TFC9 | (TF1, TF0, TF1) |
| UL_TFC10 | (TF1, TF1, TF1) |
| UL_TFC11 | (TF1, TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, UL_TFC7 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC7 | RB5: 1280 RB6: 312 (note 3) | RB5: No data RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, UL_TFC8 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8 | RB5: 1280 RB6: 312 (note 4) | RB5: No data RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC2, UL_TFC8 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8 | RB5: 1280 RB6: 312 (note 4) | RB5: No data RB6: 952 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC2, UL_TFC8 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8 | RB5: 640 RB6: 312 (note 4) | RB5: No data RB6: 1272 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 640 RB6: 312 | RB5: 2x640 RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC1, DL_TFC5, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 640 RB6: 312 (note 3) | RB5: 2x640 RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC1, DL_TFC5, DL_TFC6, DL_TFC10, UL_TFC0, UL_TFC4, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 640 RB6: 312 (note 4) | RB5: 2x640 RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC1, DL_TFC5, DL_TFC6, DL_TFC10, UL_TFC0, UL_TFC4, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL TFC4, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 640 RB6: 312 (note 4) | RB5: 2x640 RB6: 952 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 9 | DL_TFC9, DL_TFC19 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC1, DL_TFC5, DL_TFC6, DL_TFC10, UL_TFC0, UL_TFC4, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 640 RB6: 312 (note 4) | RB5: 2x640 RB6: 1272 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC3 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).
NOTE 3: RB6 (TF1): For sub-tests where uplink transport format TF1 (1x336) is used then no adoptation to the difference in downlink TTI (20 ms) and uplink TTI (40ms) is possible as this would require the UE to concatenate 2 SDUs into one PDU. For these sub-tests the UL RLC SDU size is set equal to the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).
NOTE 4: RB6 (TF2): For sub-tests where uplink transport formats TF2 (2x336) is used then to adopt to the difference in downlink TTI (20 ms) and uplink TTI (40ms) the UL RLC SDU size has been chosen such that 2 SDUs will be returned per uplink TTI. I.e. the UL RLC SDU size is set equal to half the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

#### 14.2.51b.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 2: RLC SDUs on RB6 having the first 312 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5.
   - for sub-test 3, 4: RLC SDUs on RB5 having the same content as sent by SS; and RLC SDUs on RB6 having the content equal to the first 312 bits of the test data sent by the SS in downlink
   - for sub-test 5: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6 : RLC SDUs on RB5 and RB6 having the same content as sent by SS
   - for sub-test 7 : RLC SDUs on RB5 having the same content as sent by SS; and RLC SDUs on RB6 having the content equal to the first 312 bits of the test data sent by the SS in downlink
   - for sub-test 8 , 9 : RLC SDUs on RB5 having the same content as sent by SS; and RLC SDUs on RB6 having the content equal to the first 312 bits of the test data sent by the SS in downlink
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.51b.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:16 DL:64 kbps / PS RAB

#### 14.2.51b.2.1 Conformance requirement

See 14.2.4.1.

14.2.51b.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.51b for the 40 ms TTI case.

14.2.51b.2.3 Method of test

Initial Conditions

The following RLC Info parameter values for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling' is configured in uplink to secure that the UE will be able to return data in uplink for the case when the UE test loop function, due to processing delays, will not deliver the SDUs in one and the same TTI, but instead in two subsequent TTIs. | |

See 14.1.2 for test procedure.

For the PS UL:16/DL:64 kbps radio bearer the downlink TTI is 20ms while the uplink TTI is 40ms. As the SS will send one DL SDU every 20 ms then the UE test loop function will return 2 UL SDUs per uplink TTI. To not cause uplink transmission buffer overflow then the UL RLC SDU size should be chosen such that the UE will transmit 2 RLC SDUs per uplink TTI. For the case when the transport format under test does not allow for 2 SDUs to fit into the transport format size without requiring concatenation then the UL RLC SDU size shall be chosen such that one SDU is returned per uplink TTI.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 16 kbps, 40 ms TTI)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF1, TF0, TF0) |
| UL_TFC4 | (TF1, TF1, TF0) |
| UL_TFC5 | (TF1, TF2, TF0) |
| UL_TFC6 | (TF0, TF0, TF1) |
| UL_TFC7 | (TF0, TF1, TF1) |
| UL_TFC8 | (TF0, TF2, TF1) |
| UL_TFC9 | (TF1, TF0, TF1) |
| UL_TFC10 | (TF1, TF1, TF1) |
| UL_TFC11 | (TF1, TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, UL_TFC7 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC7 | RB5: 640<br>RB6: 312<br>(note 3) | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, UL_TFC8 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8 | RB5: 640<br>RB6: 312<br>(note 4) | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC2, UL_TFC8 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8 | RB5: 640<br>RB6: 312<br>(note 4) | RB5: No data<br>RB6: 952 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC2, UL_TFC8 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC8 | RB5: 640<br>RB6: 312<br>(note 4) | RB5: No data<br>RB6: 1272 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 640<br>RB6: 312<br>(note 3) | RB5: 4x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 640<br>RB6: 312<br>(note 4) | RB5: 4x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 640<br>RB6: 312<br>(note 4) | RB5: 4x640<br>RB6: 952 |
| 9 | DL_TFC9, DL_TFC19 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 640<br>RB6: 312<br>(note 4) | RB5: 4x640<br>RB6: 1272 |

| | |
|---|---|
| NOTE 1: | UL_TFC0, UL_TFC1, UL_TFC3 and UL_TFC6 are part of minimum set of TFCIs. |
| NOTE 2: | See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). |
| NOTE 3: | RB6 (TF1): For sub-tests where uplink transport format TF1 (1x336) is used then no adoptation to the difference in downlink TTI (20 ms) and uplink TTI (40ms) is possible as this would require the UE to concatenate 2 SDUs into one PDU. For these sub-tests the UL RLC SDU size is set equal to the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). |
| NOTE 4: | RB6 (TF2): For sub-tests where uplink transport formats TF2 (2x336) is used then to adopt to the difference in downlink TTI (20 ms) and uplink TTI (40ms) the UL RLC SDU size has been chosen such that 2 SDUs will be returned per uplink TTI. I.e. the UL RLC SDU size is set equal to half the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). |

#### 14.2.51b.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 2: RLC SDUs on RB6 having the first 312 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5.
   - for sub-test 3, 4: RLC SDUS on RB5 having the same content as sent by SS; and rlc sduSon RB6 having the content equal to the first 312 bits of the test data sent by the SS in downlink
   - for sub-test 5: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6 : RLC SDUs on RB5 and RB6 having the same content as sent by SS
   - for sub-test 7 : RLC SDUs on RB5 having the same content as sent by SS; and RLC SDUs on RB6 having the content equal to the first 312 bits of the test data sent by the SS in downlink
   - for sub-test 8 , 9 : RLC SDUs on RB5 having the same content as sent by SS ; and RLC SDUs on RB6 having the content equal to the first 312 bits of the test data sent by the SS in downlink
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.52 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.52.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:64 DL:128 kbps / PS RAB

#### 14.2.52.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.52.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.52 for the 20 ms TTI case.

14.2.52.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 14.1.2 for test procedure.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 64 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 128 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, DL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, DL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC3, DL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 952 | RB5: No data<br>RB6: 1272 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC4, DL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 2552 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC5, DL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC6, DL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC7, DL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 2x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC8, DL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 640<br>RB6: 952 | RB5: 2x640<br>RB6: 1272 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 9 | DL_TFC9, DL_TFC19 | UL_TFC9, DL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 2x640<br>RB6: 2552 |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC5_and UL_TFC10 are part of minimum set of TFCIs<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB5 has been set equal to the uplink TB size. | | | | | | |

#### 14.2.52.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 3, 4: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 5: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6: RLC SDUs on RB5 and RLC SDUs on RB6 having the same content as sent by SS.
   - For sub-test 3: RLC SDUs on RB6 having the content equal to the first 952 bits of the test data sent by the SS in downlink;
   - For sub-test 4: RLC SDUs on RB6 having the content equal to the first 1272 bits of the test data sent by the SS in downlink;
   - for sub-test 8: RLC SDUs on RB6 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS.
   - for sub-test 9: RLC SDUs on RB6 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.52.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:64 DL:128 kbps / PS RAB

#### 14.2.52.2.1 Conformance requirement

See 14.2.4.1.

#### 14.2.52.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.51 for the 40 ms TTI case.

14.2.52.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 14.1.2 for test procedure.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 64 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 128 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, DL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, DL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC3, DL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 952 | RB5: No data<br>RB6: 1272 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC4, DL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 2552 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 5 | DL_TFC5, DL_TFC15 | UL_TFC5, DL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC6, DL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC7, DL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC8, DL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 640<br>RB6: 952 | RB5: 4x640<br>RB6: 1272 |
| 9 | DL_TFC9, DL_TFC19 | UL_TFC9, DL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 4x640<br>RB6: 2552 |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC5_and UL_TFC10 are part of minimum set of TFCIs<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB5 has been set equal to the uplink TB size . | | | | | | |

### 14.2.52.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 3, 4: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.

- for sub-test 5: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
- for sub-test 6: RLC SDUs on RB5 and RLC SDUs on RB6 having the same content as sent by SS.
- For sub-test 3: RLC SDUs on RB6 having the content equal to the first 652 bits of the test data sent by the SS in downlink;
- For sub-test 4: RLC SDUs on RB6 having the content equal to the first 1272 bits of the test data sent by the SS in downlink;
- for sub-test 8: RLC SDUs on RB6 having the content equal to the first 652 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS.
- for sub-test 9: RLC SDUs on RB6 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.53 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.53.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:128 DL:128 kbps / PS RAB

#### 14.2.53.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.53.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.53 for the 20 ms TTI case.

#### 14.2.53.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 128 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 128 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, DL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, DL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC3, DL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 1272 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC4, DL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 2552 | RB5: No data<br>RB6: 2552 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC5, DL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC6, DL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC7, DL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 2x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC8, DL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 640<br>RB6: 1272 | RB5: 2x640<br>RB6: 1272 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 9 | DL_TFC9, DL_TFC19 | UL_TFC9, DL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640<br>RB6: 2552 | RB5: 2x640<br>RB6: 2552 |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC5_and UL_TFC10 are part of minimum set of TFCIs<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB5 has been set equal to the uplink TFS size under test. | | | | | | |

#### 14.2.53.1.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 3, 4: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 5: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6, 7, 8 and 9: RLC SDUs on RB5 and RLC SDUs on RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.53.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:128 DL:128 kbps / PS RAB

#### 14.2.53.2.1 Conformance requirement

See 14.2.4.1.

#### 14.2.53.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.53 for the 40 ms TTI case.

14.2.53.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 14.1.2 for test procedure.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 128 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 128 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, UL_TFC11 | UL_TFC1, UL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, UL_TFC12 | UL_TFC2, UL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, UL_TFC13 | UL_TFC3, UL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 1272 |
| 4 | DL_TFC4, UL_TFC14 | UL_TFC4, UL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 2552 | RB5: No data<br>RB6: 2552 |
| 5 | DL_TFC5, UL_TFC15 | UL_TFC5, UL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: No data |
| 6 | DL_TFC6, UL_TFC16 | UL_TFC6, UL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5 UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: 312 |
| 7 | DL_TFC7, UL_TFC17 | UL_TFC7, UL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: 632 |
| 8 | DL_TFC8, UL_TFC18 | UL_TFC8, UL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 4x640<br>RB6: 1272 | RB5: 4x640<br>RB6: 1272 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note1) | UL RLC SDU size (bits) (note2) | Test data size (bits) (note2) |
|---|---|---|---|---|---|---|
| 9 | DL_TFC9, UL_TFC19 | UL_TFC9, UL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640 RB6: 2552 | RB5: 4x640 RB6: 2552 |
| NOTE1: UL_TFC0, UL_TFC1, UL_TFC5_and UL_TFC10 are part of minimum set of TFCIs<br>NOTE2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB5 has been set equal to the uplink TFS size under test. | | | | | | |

#### 14.2.53.2.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 3, 4: RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 5: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6, 7, 8 and 9: RLC SDUs on RB5 and RLC SDUs on RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.54 Void

## 14.2.55 Void

## 14.2.56 Interactive or background / UL:8 DL:8 kbps / PS RAB + Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 14.2.56.1 Conformance requirement

See 14.2.4.1.

#### 14.2.56.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.56.

#### 14.2.56.3 Method of test

See 14.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 + RB6 (2x8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x340 | 0x148 |
| | TF1, bits | 1x340 | 1x148 |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | | RB5 + RB6 (2x8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x340 | 0x148 |
| | TF1, bits | 1x340 | 1x148 |

Downlink TFCS:

| TFCI | (RB5+RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC3 | UL_TFC1, UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312<br>RB6: 312 | RB5: 312<br>RB6: no data |
| 2 | DL_TFC1, DL_TFC3 | UL_TFC1, UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312<br>RB6: 312 | RB5: no data<br>RB6: 312 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC2 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

### 14.2.56.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 15a and step 15b the UE shall return

   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.

   - for sub-test 2: RLC SDUs on RB6; and no data shall be received on RB5.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.57 Interactive or background / UL:64 DL:64 kbps / PS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 14.2.57.1 Conformance requirement

See 14.2.4.1.

### 14.2.57.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.57.

### 14.2.57.3 Method of test

See 14.1.2 for test procedure. However, in this test the RM attribute values used shall be derived separately in the UL and DL as the mid-values of the RM attríbute value ranges as specified by the reference radio bearer configuration.

Specific Message Content:

Use the RADIO BEARER SETUP message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - RAB information for setup | |
| - RAB info | (AM DTCH for PS domain) |
| - RAB identity | 0000 0101B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 20 |
| - PDCP Info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 4 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter |

| Information Element | Value/remark |
|---|---|
| - MAC logical channel priority<br>- Downlink RLC logical channel info<br>- Number of downlink RLC logical channels<br>- Downlink transport channel type<br>- DL DCH Transport channel identity<br>- DL DSCH Transport channel identity<br>- Logical channel identity | Set<br>8<br><br>1<br>FACH<br>Not Present<br>Not Present<br>7 |
| - RAB identity | 0000 0110B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 22 |
| - PDCP info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 4 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 8 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |

| Information Element | Value/remark |
|---|---|
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 8 |

Uplink TFS:

| | TFI | RB5 + RB6 (64 kbps RAB, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x340 | 0x148 |
| | TF1, bits | 1x340 | 1x148 |
| | TF2, bits | 2x340 | N/A |
| | TF3, bits | 3x340 | N/A |
| | TF4, bits | 4x340 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 + RB6 (64 kbps RAB, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x340 | 0x148 |
| | TF1, bits | 1x340 | 1x148 |
| | TF2, bits | 2x340 | N/A |
| | TF3, bits | 3x340 | N/A |
| | TF4, bits | 4x340 | N/A |

Downlink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1<br>DL_TFC6 | UL_TFC1<br>DL_TFC6 | DL_TFC0,<br>DL_TFC5,<br>UL_TFC0,<br>UL_TFC5 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC5,<br>UL_TFC6 | RB5: 312<br>RB6: 312 | RB5: 312<br>RB6: No data |
| 2 | DL_TFC2<br>DL_TFC7 | UL_TFC2<br>DL_TFC7 | DL_TFC0,<br>DL_TFC5,<br>UL_TFC0,<br>UL_TFC5 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC5,<br>UL_TFC7 | RB5: 632<br>RB6: 632 | RB5: 632<br>RB6: No data |
| 3 | DL_TFC3<br>DL_TFC8 | UL_TFC3<br>DL_TFC8 | DL_TFC0,<br>DL_TFC5,<br>UL_TFC0,<br>UL_TFC5 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC3,<br>UL_TFC5,<br>UL_TFC8 | RB5: 952<br>RB6: 952 | RB5: 952<br>RB6: No data |
| 4 | DL_TFC4<br>DL_TFC9 | UL_TFC4<br>DL_TFC9 | DL_TFC0,<br>DL_TFC5,<br>UL_TFC0,<br>UL_TFC5 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC9 | RB5: 1272<br>RB6: 1272 | RB5: 1272<br>RB6: No data |
| 5 | DL_TFC4<br>DL_TFC9 | UL_TFC4<br>DL_TFC9 | DL_TFC0,<br>DL_TFC5,<br>UL_TFC0,<br>UL_TFC5 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC4,<br>UL_TFC5,<br>UL_TFC9 | RB5: 1272<br>RB5: 1272 | RB5: No data<br>RB6: 1272 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

#### 14.2.57.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1 to 4: RLC SDUs on RB5 having the same content as the DL RLC SDUs sent by the SS in RB5.
   - for sub-test 5: RLC SDUs on RB6 having the same content as the DL RLC SDUs sent by the SS in RB6.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 14.2.58 Streaming / unknown / UL:16 DL:64 kbps / PS RAB + Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 14.2.58.1 Conformance requirement

See 14.2.4.1.

#### 14.2.58.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.58.

14.2.58.3 Method of test

See 14.1.2 for test procedure. However, in this test the RM attribute values used shall be derived separately in the UL and DL as the mid-values of the RM attríbute value ranges as specified by the reference radio bearer configuration.

Uplink TFS:

| | TFI | RB5 uplink (16 kbps, 20 ms TTI) | RB6 (8 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF0, TF1) |
| UL_TFC5 | (TF1, TF0, TF1) |
| UL_TFC6 | (TF0, TF1, TF1) |
| UL_TFC7 | (TF1, TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps, 40 ms TTI) | RB6 (8 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x336 | 0x148 |
| | TF1, bits | 1x656 | 1x336 | 1x148 |
| | TF2, bits | 2x656 | N/A | N/A |
| | TF3, bits | 4x656 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF0, TF0) |
| DL_TFC3 | (TF3, TF0, TF0) |
| DL_TFC4 | (TF0, TF1, TF0) |
| DL_TFC5 | (TF1, TF1, TF0) |
| DL_TFC6 | (TF2, TF1, TF0) |
| DL_TFC7 | (TF3, TF1, TF0) |
| DL_TFC8 | (TF0, TF0, TF1) |
| DL_TFC9 | (TF1, TF0, TF1) |
| DL_TFC10 | (TF2, TF0, TF1) |
| DL_TFC11 | (TF3, TF0, TF1) |
| DL_TFC12 | (TF0, TF1, TF1) |
| DL_TFC13 | (TF1, TF1, TF1) |
| DL_TFC14 | (TF2, TF1, TF1) |
| DL_TFC15 | (TF3, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC9 | UL_TFC1, UL_TFC5 | DL_TFC0, DL_TFC8, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC5 | RB5: 632 RB6: 312 | RB5: 632 RB6: no data |
| 2 | DL_TFC2, DL_TFC10 | UL_TFC1, UL_TFC5 | DL_TFC0, DL_TFC1, DL_TFC8, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC5 | RB5: 632 RB6: 312 | RB5: 1272 RB6: no data |
| 3 | DL_TFC3, DL_TFC11 | UL_TFC1, UL_TFC5 | DL_TFC0, DL_TFC1, DL_TFC8, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC5 | RB5: 632 RB6: 312 | RB5: 2552 RB6: no data |
| 4 | DL_TFC4, DL_TFC12 | UL_TFC2, UL_TFC6 | DL_TFC0, DL_TFC8, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6 | RB5: 632 RB6: 312 | RB5: no data RB6: 312 |
| 5 | DL_TFC5, DL_TFC13 | UL_TFC3, UL_TFC7 | DL_TFC0, DL_TFC1, DL_TFC4, DL_TFC8, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 632 RB6: 312 | RB5: 632 RB6: 312 |
| 6 | DL_TFC6, DL_TFC14 | UL_TFC3, UL_TFC7 | DL_TFC0, DL_TFC1, DL_TFC2, DL_TFC4, DL_TFC5, DL_TFC8, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 632 RB6: 312 | RB5: 1272 RB6: 312 |
| 7 | DL_TFC7, DL_TFC15 | UL_TFC3, UL_TFC7 | DL_TFC0, DL_TFC1, DL_TFC3 DL_TFC4, DL_TFC5, DL_TFC8, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 632 RB6: 312 | RB5: 2552 RB6: 312 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC4 are part of minimum set of TFCIs.

NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB5 is 20 ms while the downlink TTI is 40 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over two subsequent TTIs, i.e. UL RLC SDU size has been set to two times the payload size of the UL TF under test minus 8 bits (the size of a 7 bit length indicator and expansion bit).
RB6: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the uplink TFS size minus 8 bits (the size of a 7 bit length indicator and expansion bit).

#### 14.2.58.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6.
   - for sub-test 2 and 3: RLC SDUs on RB5 having the first 632 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6.
   - for sub-test 4: RLC SDUs on RB6 having the same content as sent by the SS; and no data shall be received on RB5.
   - for sub-test 5: RLC SDUs on RB5 and RB6 having the same content as sent by the SS.
   - for sub-test 6 and 7: RLC SDUs on RB5 having the first 632 bits equal to the content of the test data sent by the SS in downlink; and RLC SDUs on RB6 having the same content as sent by the SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.58a Streaming / unknown / UL:16 DL:128 kbps / PS RAB + Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 14.2.58a.1 Conformance requirement

See 14.2.4.1.

#### 14.2.58a.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.58a.

#### 14.2.58a.3 Method of test

See 14.1.2 for test procedure. However, in this test the RM attribute values used shall be derived separately in the UL and DL as the mid-values of the RM attríbute value ranges as specified by the reference radio bearer configuration.

Specific Message Content:

Use the RADIO BEARER SETUP message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - RAB information for setup | |
| - RAB info | (AM DTCH for PS domain) |
| - RAB identity | 0000 0101B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 20 |
| - PDCP Info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |

| | |
|---|---|
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RAB identity | 0000 0110B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 22 |
| - PDCP info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 2 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 7 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | Not Present |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 8 |
| Added or Reconfigured UL TrCH information | 2 DCH added, 1 DCH reconfigured |
| - Uplink transport channel type | DCH |

| | |
|---|---|
| - UL Transport channel identity | 1 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE Logical Channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 2 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE Logical Channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 5 |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE Logical Channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set |
| Added or Reconfigured DL TrCH information | 3 TrCHs(DCH for DCCH and DCH for DTCH) |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 6 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE Logical Channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -2.0 |
| - Downlink transport channel type | DCH |

| | |
|---|---|
| - DL Transport channel identity | 7 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE Logical Channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -2.0 |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 10 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channel |
| - Dynamic transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10 Parameter Set |
| - CHOICE Logical Channel list | All |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10 Parameter Set |
| - DCH quality target | |
| - BLER Quality value | -2.0 |

Uplink TFS:

| | **TFI** | **RB5 uplink (16 kbps, 20 ms TTI)** | **RB6 (8 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x336 | 1x148 |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF0, TF1) |
| UL_TFC5 | (TF1, TF0, TF1) |
| UL_TFC6 | (TF0, TF1, TF1) |
| UL_TFC7 | (TF1, TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (128 kbps, 20 ms TTI) | RB6 (8 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x336 | 0x148 |
| | TF1, bits | 1x656 | 1x336 | 1x148 |
| | TF2, bits | 2x656 | N/A | N/A |
| | TF3, bits | 3x656 | N/A | N/A |
| | TF4, bits | 4x656 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF0, TF0) |
| DL_TFC3 | (TF3, TF0, TF0) |
| DL_TFC4 | (TF4, TF0, TF0) |
| DL_TFC5 | (TF0, TF1, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF2, TF1, TF0) |
| DL_TFC8 | (TF3, TF1, TF0) |
| DL_TFC9 | (TF4, TF1, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF1, TF0, TF1) |
| DL_TFC12 | (TF2, TF0, TF1) |
| DL_TFC13 | (TF3, TF0, TF1) |
| DL_TFC14 | (TF4, TF0, TF1) |
| DL_TFC15 | (TF0, TF1, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF2, TF1, TF1) |
| DL_TFC18 | (TF3, TF1, TF1) |
| DL_TFC19 | (TF4, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, UL_TFC5 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC5 | RB5: 312 RB6: 312 | RB5: 632 RB6: no data |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC1, UL_TFC5 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC5 | RB5: 312 RB6: 312 | RB5: 1272 RB6: no data |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC1, UL_TFC5 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC5 | RB5: 312 RB6: 312 | RB5: 1912 RB6: no data |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC1, UL_TFC5 | DL_TFC0, DL_TFC1, DL_TFC10, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC5 | RB5: 312 RB6: 312 | RB5: 2552 RB6: no data |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC2, UL_TFC6 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6 | RB5: 312 RB6: 312 | RB5: no data RB6: 312 |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC3, UL_TFC7 | DL_TFC0, DL_TFC1, DL_TFC5, DL_TFC10, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 312 RB6: 312 | RB5: 632 RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC3, UL_TFC7 | DL_TFC0, DL_TFC1, DL_TFC5, DL_TFC6, DL_TFC10, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 312 RB6: 312 | RB5: 1272 RB6: 312 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC3, UL_TFC7 | DL_TFC0, DL_TFC1, DL_TFC5, DL_TFC6, DL_TFC10, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 312 RB6: 312 | RB5: 1912 RB6: 312 |
| 9 | DL_TFC9, DL_TFC19 | UL_TFC3, UL_TFC7 | DL_TFC0, DL_TFC1, DL_TFC5, DL_TFC6, DL_TFC10, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 312 RB6: 312 | RB5: 2552 RB6: 312 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC4 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the UL TF under test minus 8 bits (the size of a 7 bit length indicator and expansion bit).<br>RB6: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the uplink TF under test minus 8 bits (the size of a 7 bit length indicator and expansion bit). | | | | | | |

#### 14.2.58a.4 Test requirements

See 14.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1, 2, 3 and 4: RLC SDUs on RB5 having the first 312 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6.
   - for sub-test 5: RLC SDUs on RB6 having the same content as sent by the SS; and no data shall be received on RB5.
   - for sub-test 6, 7, 8 and 9: RLC SDUs on RB5 having the first 312 bits equal to the content of the test data sent by the SS in downlink; and RLC SDUs on RB6 having the same content as sent by the SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 14.2.59 Void

## 14.2.60 Void

## 14.2.61 Void

## 14.2.62 Conversational / speech / UL:(12.65 8.85 6.6) DL:(12.65 8.85 6.6) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH + DL:0.15 kbps SRB#5 for DCCH.

#### 14.2.62.1 Conformance requirement

See clause 14.2.4.1.

#### 14.2.62.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.62.

14.2.62.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x72 | 0x181 | 0x60 | 0x148 |
| | TF1, bits | 1x40 | 1x78 | N/A | 1x148 |
| | TF2, bits | 1x54 | 1x113 | N/A | N/A |
| | TF3, bits | 1x64 | 1x181 | N/A | N/A |
| | TF4, bits | 1x72 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0) |
| UL_TFC5 | (TF0, TF0, TF0, TF1) |
| UL_TFC6 | (TF1, TF0, TF0, TF1) |
| UL_TFC7 | (TF2, TF1, TF0, TF1) |
| UL_TFC8 | (TF3, TF2, TF0, TF1) |
| UL_TFC9 | (TF4, TF3, TF0, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH1 | DCCH2 (SRB #5) |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x181 | 0x60 | 0x148 | 0x3 |
| | TF1, bits | 1x40 | 1x78 | N/A | 1x148 | 1x3 |
| | TF2, bits | 1x54 | 1x113 | N/A | N/A | N/A |
| | TF3, bits | 1x64 | 1x181 | N/A | N/A | N/A |
| | TF4, bits | 1x72 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH1, DCCH2) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0, TF0) |
| DL_TFC5 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC6 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC7 | (TF2, TF1, TF0, TF1, TF0) |
| DL_TFC8 | (TF3, TF2, TF0, TF1, TF0) |
| DL_TFC9 | (TF4, TF3, TF0, TF1, TF0) |
| DL_TFC10 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC11 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC12 | (TF2, TF1, TF0, TF0, TF1) |
| DL_TFC13 | (TF3, TF2, TF0, TF0, TF1) |
| DL_TFC14 | (TF4, TF3, TF0, TF0, TF1) |
| DL_TFC15 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC17 | (TF2, TF1, TF0, TF1, TF1) |
| DL_TFC18 | (TF3, TF2, TF0, TF1, TF1) |
| DL_TFC19 | (TF4, TF3, TF0, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | TFC subset identity (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, DL_TFC6, DL_TFC10, UL_TFC0, UL_TFC5 | 0 | RB5: 40 bits<br>RB6: 181 bits<br>RB7: 60 bits | RB5: 40 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, DL_TFC7, DL_TFC10, UL_TFC0, UL_TFC5 | 0 | RB5: 54 bits<br>RB6: 78 bits<br>RB7: 60 bits | RB5: 54 bits<br>RB6: 78 bits<br>RB7: No data |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, DL_TFC8, DL_TFC10, UL_TFC0, UL_TFC5 | 1 | RB5: 64 bits<br>RB6: 113 bits<br>RB7: 60 bits | RB5: 64 bits<br>RB6: 113 bits<br>RB7: No data |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, DL_TFC9, DL_TFC10, UL_TFC0, UL_TFC5 | 2 | RB5: 72 bits<br>RB6: 181 bits<br>RB7: 60 bits | RB5: 72 bits<br>RB6: 181 bits<br>RB7: No data |
| NOTE 1: TFC subset identity shall be signalled by the SS on the downlink SRB#5, see generic test procedure in clause 14.1.1a.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 14.1.1a for test procedure.

#### 14.2.62.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x40).
   - for sub-test 2: RB5/TF2 (1x54) and RB6/TF1 (1x78)
   - for sub-test 3: RB5/TF3 (1x64) and RB6/TF2 (1x113)
   - for sub-test 4: RB5/TF4 (1x72) and RB6/TF3 (1x181)
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 2,3 and 4: an RLC SDU on RB5 and RB6 having the same content as sent by SS; and no data shall be received on RB7.

## 14.2.63 Interactive or background / UL:64 DL:768 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.2.63.1 Interactive or background / UL:64 DL:768 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH/ 10 ms TTI

#### 14.2.63.1.1 Conformance requirement

See 14.2.4.1.

#### 14.2.63.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.63 for the downlink 10 ms TTI case.

14.2.63.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (768 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 14.1.1 for test procedure.

#### 14.2.63.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).

- for sub-test 3: RB5/TF3 (3x336).
- for sub-test 4 to 8: RB5/TF4 (4x336).

3. At step 15 the UE shall return
   - for sub-test 1, 2 and 4 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

## 14.2.63.2 Interactive or background / UL:64 DL:768 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / 20 ms TTI

### 14.2.63.2.1 Conformance requirement

See 14.2.4.1.

### 14.2.63.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.1.63 for the downlink 20 ms TTI case.

### 14.2.63.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (768 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |
| | TF9, bits | 28x336 | N/A |
| | TF10, bits | 32x336 | N/A |
| | TF11, bits | 36x336 | N/A |
| | TF12, bits | 40x336 | N/A |
| | TF13, bits | 44x336 | N/A |
| | TF14, bits | 48x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF11, TF0) |
| DL_TFC12 | (TF12 TF0) |
| DL_TFC13 | (TF13, TF0) |
| DL_TFC14 | (TF14, TF0) |
| DL_TFC15 | (TF0, TF1) |
| DL_TFC16 | (TF1, TF1) |
| DL_TFC17 | (TF2, TF1) |
| DL_TFC18 | (TF3, TF1) |
| DL_TFC19 | (TF4, TF1) |
| DL_TFC20 | (TF5, TF1) |
| DL_TFC21 | (TF6, TF1) |
| DL_TFC22 | (TF7, TF1) |
| DL_TFC23 | (TF8, TF1) |
| DL_TFC24 | (TF9, TF1) |
| DL_TFC25 | (TF10, TF1) |
| DL_TFC26 | (TF11, TF1) |
| DL_TFC27 | (TF12 TF1) |
| DL_TFC28 | (TF13, TF1) |
| DL_TFC29 | (TF14, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 8952 | RB5: 8952 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 11 | DL_TFC11 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 11512 | RB5: 11512 |
| 12 | DL_TFC12 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 13 | DL_TFC13 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 14072 | RB5: 14072 |
| 14 | DL_TFC14 | UL_TFC4 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size. | | | | | | |

See 14.1.1 for test procedure.

#### 14.2.63.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 to 14: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2 and 4 to 14: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

# 14.3 Combinations on PDSCH and DPCH

## 14.3.1 Void

## 14.3.2 Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 14.3.2.1 Interactive or background / UL:64 DL:384 kbps / PS RAB / 10 ms TTI

#### 14.3.2.1.1 Conformance requirement

See 14.2.4.1.

#### 14.3.2.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.2.2 for the downlink 10 ms TTI case.

#### 14.3.2.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

DSCH downlink TFS:

| | TFI | RB5 (384 kbps) |
|---|---|---|
| TFS | DSCH_TF0, bits | 0x354 |
| | DSCH_TF1, bits | 1x354 |
| | DSCH_TF2, bits | 2x354 |
| | DSCH_TF3, bits | 4x354 |
| | DSCH_TF4, bits | 8x354 |
| | DSCH_TF5, bits | 12x354 |

DSCH downlink TFCS:

| TFCI | RB5 |
|---|---|
| DL_DSCH_TFC0 | DSCH_TF0 |
| DL_DSCH_TFC1 | DSCH_TF1 |
| DL_DSCH_TFC2 | DSCH_TF2 |
| DL_DSCH_TFC3 | DSCH_TF3 |
| DL_DSCH_TFC4 | DSCH_TF4 |
| DL_DSCH_TFC5 | DSCH_TF5 |

DCH downlink TFS:

| | TFI | DCCH |
|---|---|---|
| TFS | DCH_TF0, bits | 0x148 |
| | DCH_TF1, bits | 1x148 |

DCH downlink TFCS:

| TFCI | DCCH |
|---|---|
| DL_DCH_TFC0 | DCH_TF0 |
| DL_DCH_TFC1 | DCH_TF1 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_TFC1 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_DSCH_TFC2 | UL_TFC2 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_DSCH_TFC3 | UL_TFC3 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_DSCH_TFC4 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_DSCH_TFC5 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2 : See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: the UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 14.1.1 for test procedure.

### 14.3.2.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 and 5: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 and 6: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS.

### 14.3.2.2 Interactive or background / UL:64 DL:384 kbps / PS RAB / 20 ms TTI

#### 14.3.2.2.1 Conformance requirement

See 14.2.4.1.

#### 14.3.2.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.2.2 for the downlink 20 ms TTI case.

#### 14.3.2.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

DSCH downlink TFS:

| | TFI | RB5 (384 kbps) |
|---|---|---|
| TFS | DSCH_TF0, bits | 0x354 |
| | DSCH_TF1, bits | 1x354 |
| | DSCH_TF2, bits | 2x354 |
| | DSCH_TF3, bits | 4x354 |
| | DSCH_TF4, bits | 8x354 |
| | DSCH_TF5, bits | 12x354 |
| | DSCH_TF6, bits | 16x354 |
| | DSCH_TF7, bits | 20x354 |
| | DSCH_TF8, bits | 24x354 |

DSCH downlink TFCS:

| TFCI | RB5 |
|---|---|
| DL_DSCH_TFC0 | DSCH_TF0 |
| DL_DSCH_TFC1 | DSCH_TF1 |
| DL_DSCH_TFC2 | DSCH_TF2 |
| DL_DSCH_TFC3 | DSCH_TF3 |
| DL_DSCH_TFC4 | DSCH_TF4 |
| DL_DSCH_TFC5 | DSCH_TF5 |
| DL_DSCH_TFC6 | DSCH_TF6 |
| DL_DSCH_TFC7 | DSCH_TF7 |
| DL_DSCH_TFC8 | DSCH_TF8 |

DCH downlink TFS:

| | TFI | DCCH |
|---|---|---|
| TFS | DCH_TF0, bits | 0x148 |
| | DCH_TF1, bits | 1x148 |

DCH downlink TFCS:

| TFCI | DCCH |
|---|---|
| DL_DCH_TFC0 | DCH_TF0 |
| DL_DCH_TFC1 | DCH_TF1 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_TFC1 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_DSCH_TFC2 | UL_TFC2 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_DSCH_TFC3 | UL_TFC3 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_DSCH_TFC4 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 5 | DL_DSCH_TFC5 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_DSCH_TFC6 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_DSCH_TFC7 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 6392 | RB5: 6392 |
| 8 | DL_DSCH_TFC8 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. .<br>RB5: the UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 14.1.1 for test procedure.

#### 14.3.2.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4, 5, 6, 7 and 8: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1 , 2, 4, 5, 6, 7 and 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS.

## 14.3.3 Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 14.3.3.1 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 10 ms TTI

#### 14.3.3.1.1 Conformance requirement

See 14.2.4.1.

14.3.3.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.2.3 for the downlink 10 ms TTI case.

14.3.3.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

DSCH downlink TFS:

| | TFI | RB5 (384 kbps) |
|---|---|---|
| TFS | DSCH_TF0, bits | 0x674 |
| | DSCH_TF1, bits | 1x674 |
| | DSCH_TF2, bits | 2x674 |
| | DSCH_TF3, bits | 4x674 |
| | DSCH_TF4, bits | 8x674 |
| | DSCH_TF5, bits | 12x674 |
| | DSCH_TF6, bits | 16x674 |
| | DSCH_TF7, bits | 20x674 |
| | DSCH_TF8, bits | 24x674 |
| | DSCH_TF9, bits | 28x674 |
| | DSCH_TF10, bits | 32x674 |

DSCH downlink TFCS:

| TFCI | RB5 |
|---|---|
| DL_DSCH_TFC0 | DSCH_TF0 |
| DL_DSCH_TFC1 | DSCH_TF1 |
| DL_DSCH_TFC2 | DSCH_TF2 |
| DL_DSCH_TFC3 | DSCH_TF3 |
| DL_DSCH_TFC4 | DSCH_TF4 |
| DL_DSCH_TFC5 | DSCH_TF5 |
| DL_DSCH_TFC6 | DSCH_TF6 |
| DL_DSCH_TFC7 | DSCH_TF7 |
| DL_DSCH_TFC8 | DSCH_TF8 |
| DL_DSCH_TFC9 | DSCH_TF9 |
| DL_DSCH_TFC10 | DSCH_TF10 |

DCH downlink TFS:

| | TFI | DCCH |
|---|---|---|
| TFS | DCH_TF0, bits | 0x148 |
| | DCH_TF1, bits | 1x148 |

DCH downlink TFCS:

| TFCI | DCCH |
|---|---|
| DL_DCH_TFC0 | DCH_TF0 |
| DL_DCH_TFC1 | DCH_TF1 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_TFC1 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_DSCH_TFC2 | UL_TFC2 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1272 | RB5: 1272 |
| 3 | DL_DSCH_TFC3 | UL_TFC3 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2552 |
| 4 | DL_DSCH_TFC4 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_DSCH_TFC5 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_DSCH_TFC6 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 7 | DL_DSCH_TFC7 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_DSCH_TFC8 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 9 | DL_DSCH_TFC9 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_DSCH_TFC10 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2 : See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: the UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 14.1.1 for test procedure.

#### 14.3.3.1.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4, 5, 6, 7, 8, 9 and 10: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 to 10: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 2552 bits equal to the content of the DL RLC SDU sent by the SS.

### 14.3.3.2 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 20 ms TTI

#### 14.3.3.2.1 Conformance requirement

See 14.2.4.1.

#### 14.3.3.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.2.3 for the downlink 20 ms TTI case.

#### 14.3.3.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

DSCH downlink TFS:

| | TFI | RB5 (384 kbps) |
|---|---|---|
| TFS | DSCH_TF0, bits | 0x674 |
| | DSCH_TF1, bits | 1x674 |
| | DSCH_TF2, bits | 2x674 |
| | DSCH_TF3, bits | 4x674 |
| | DSCH_TF4, bits | 8x674 |
| | DSCH_TF5, bits | 12x674 |
| | DSCH_TF6, bits | 16x674 |
| | DSCH_TF7, bits | 20x674 |
| | DSCH_TF8, bits | 24x674 |
| | DSCH_TF9, bits | 28x674 |
| | DSCH_TF10, bits | 32x674 |
| | DSCH_TF11, bits | 36x674 |
| | DSCH_TF12, bits | 40x674 |
| | DSCH_TF13, bits | 44x674 |
| | DSCH_TF14, bits | 48x674 |
| | DSCH_TF15, bits | 52x674 |
| | DSCH_TF16, bits | 56x674 |
| | DSCH_TF17, bits | 60x674 |
| | DSCH_TF18, bits | 64x674 |

DSCH downlink TFCS:

| TFCI | RB5 |
|---|---|
| DL_DSCH_TFC0 | DSCH_TF0 |
| DL_DSCH_TFC1 | DSCH_TF1 |
| DL_DSCH_TFC2 | DSCH_TF2 |
| DL_DSCH_TFC3 | DSCH_TF3 |
| DL_DSCH_TFC4 | DSCH_TF4 |
| DL_DSCH_TFC5 | DSCH_TF5 |
| DL_DSCH_TFC6 | DSCH_TF6 |
| DL_DSCH_TFC7 | DSCH_TF7 |
| DL_DSCH_TFC8 | DSCH_TF8 |
| DL_DSCH_TFC9 | DSCH_TF9 |
| DL_DSCH_TFC10 | DSCH_TF10 |
| DL_DSCH_TFC11 | DSCH_TF11 |
| DL_DSCH_TFC12 | DSCH_TF12 |
| DL_DSCH_TFC13 | DSCH_TF13 |
| DL_DSCH_TFC14 | DSCH_TF14 |
| DL_DSCH_TFC15 | DSCH_TF15 |
| DL_DSCH_TFC16 | DSCH_TF16 |
| DL_DSCH_TFC17 | DSCH_TF17 |
| DL_DSCH_TFC18 | DSCH_TF18 |

DCH downlink TFS:

| | TFI | DCCH |
|---|---|---|
| TFS | DCH_TF0, bits | 0x148 |
| | DCH_TF1, bits | 1x148 |

DCH downlink TFCS:

| TFCI | DCCH |
|---|---|
| DL_DCH_TFC0 | DCH_TF0 |
| DL_DCH_TFC1 | DCH_TF1 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_TFC1 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_DSCH_TFC2 | UL_TFC2 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1272 | RB5: 1272 |
| 3 | DL_DSCH_TFC3 | UL_TFC3 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2552 |
| 4 | DL_DSCH_TFC4 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_DSCH_TFC5 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_DSCH_TFC6 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 20232 |
| 7 | DL_DSCH_TFC7 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_DSCH_TFC8 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| 9 | DL_DSCH_TFC9 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_DSCH_TFC10 | UL_TFC4 | DL_DSCH_TFC0, DL_DSC_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |
| 11 | DL_DSCH_TFC11 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 23032 | RB5: 23032 |
| 12 | DL_DSCH_TFC12 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 25592 | RB5: 25592 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 13 | DL_DSCH_TFC13 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 28152 | RB5: 28152 |
| 14 | DL_DSCH_TFC14 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 30712 | RB5: 30712 |
| 15 | DL_DSCH_TFC15 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 33272 | RB5: 33272 |
| 16 | DL_DSCH_TFC16 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 35832 | RB5: 35832 |
| 17 | DL_DSCH_TFC17 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 38392 | RB5: 38392 |
| 18 | DL_DSCH_TFC18 | UL_TFC4 | DL_DSCH_TFC0, DL_DCH_TFC0, DL_DCH_TFC1, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 40952 | RB5: 40952 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: the UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 14.1.1 for test procedure.

#### 14.3.3.2.4 Test requirements

See 14.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 to 18: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 to 18: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 2552 bits equal to the content of the DL RLC SDU sent by the SS.

## 14.3.4 Void

## 14.3.5 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.3.5.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 10 ms TTI

#### 14.3.5.1.1 Conformance requirement

See 14.2.4.1

#### 14.3.5.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.2.5 for the downlink 10 ms TTI case.

#### 14.3.5.1.3 Method of test

Uplink TFS:

| | **TFI** | **RB5 (RAB subflow #1)** | **RB6 (RAB subflow #2)** | **RB7 (RAB subflow #3)** | **RB8 (64 kbps, 20 ms TTI)** | **DCCH** |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

DSCH downlink TFS:

| | TFI | RB5 (384 kbps) |
|---|---|---|
| TFS | DSCH_TF0, bits | 0x354 |
| | DSCH_TF1, bits | 1x354 |
| | DSCH_TF2, bits | 2x354 |
| | DSCH_TF3, bits | 4x354 |
| | DSCH_TF4, bits | 8x354 |
| | DSCH_TF5, bits | 12x354 |

DSCH downlink TFCS:

| TFCI | RB8 |
|---|---|
| DL_DSCH_TFC0 | DSCH_TF0 |
| DL_DSCH_TFC1 | DSCH_TF1 |
| DL_DSCH_TFC2 | DSCH_TF2 |
| DL_DSCH_TFC3 | DSCH_TF3 |
| DL_DSCH_TFC4 | DSCH_TF4 |
| DL_DSCH_TFC5 | DSCH_TF5 |

Downlink TFS (For CS):

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 |
| | TF1, bits | 1x39 | 1x103 | 1x60 |
| | TF2, bits | 1x81 | N/A | N/A |
| | TF3, bits | N/A | N/A | N/A |
| | TF4, bits | N/A | N/A | N/A |
| | TF5, bits | N/A | N/A | N/A |

DCH downlink TFS:

| | TFI | DCCH |
|---|---|---|
| TFS | DCH_TF0, bits | 0x148 |
| | DCH_TF1, bits | 1x148 |

DCH downlink TFCS:

| TFCI | DCCH |
|---|---|
| DL_DCH_TFC0 | DCH_TF0 |
| DL_DCH_TFC1 | DCH_TF1 |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, DCH_TF0) |
| DL_TFC1 | (TF1, TF0, TF0, DCH_TF0) |
| DL_TFC2 | (TF2, TF1, TF1, DCH_TF0) |
| DL_TFC3 | (TF0, TF0, TF0, DCH_TF1) |
| DL_TFC4 | (TF1, TF0, TF0, DCH_TF1) |
| DL_TFC5 | (TF2, TF1, TF1, DCH_TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (Note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1,<br>DL_TFC4, | UL_TFC1,<br>UL_TFC16 | DL_DSCH_TFC0,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC15 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC15,<br>UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2,<br>DL_TFC5, | UL_TFC2,<br>UL_TFC17 | DL_DSCH_TFC0,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC15 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC15,<br>UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC1,<br>DL_TFC4,<br>DL_DSCH_TFC1 | UL_TFC3,<br>UL_TFC18 | DL_DSCH_TFC0,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC15 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC15,<br>UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (Note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 4 | DL_TFC1, DL_TFC4, DL_DSCH_TFC1 | UL_TFC4, UL_TFC19 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC2, DL_TFC5, DL_DSCH_TFC1 | UL_TFC5, UL_TFC20 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC5, UL_TFC15, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC1, DL_TFC4, DL_DSCH_TFC2 | UL_TFC6, UL_TFC21 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3,UL_TFC6,UL_TFC15,UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC1, DL_TFC4, DL_DSCH_TFC2 | UL_TFC7, UL_TFC22 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC7, UL_TFC15, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC2, DL_TFC5, DL_DSCH_TFC2 | UL_TFC8, UL_TFC23 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC1, DL_TFC4, DL_DSCH_TFC3 | UL_TFC9, UL_TFC24 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9 UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 10 | DL_TFC1, DL_TFC4, DL_DSCH_TFC3 | UL_TFC10, UL_TFC25 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC10 UL_TFC15, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 11 | DL_TFC2, DL_TFC5, DL_DSCH_TFC3 | UL_TFC11, UL_TFC26 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11 ,UL_TFC15, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC1, DL_TFC4, DL_DSCH_TFC4 | UL_TFC12, UL_TFC27 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (Note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 13 | DL_TFC1, DL_TFC4, DL_DSCH_TFC4 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 14 | DL_TFC2, DL_TFC5, DL_DSCH_TFC4 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 15 | DL_TFC1, DL_TFC4, DL_DSCH_TFC5 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 3882 |
| 16 | DL_TFC2, DL_TFC5, DL_DSCH_TFC5 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3882 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, and UL_TFC15 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). The size of the uplink RLC SDU is set to the uplink TFS size minus 8 bits (size of 7 bit length indicator and expansion bit).

#### 14.3.5.1.4 Test requirements

See 14.1.2a for definition of step B10 and step 15.

1. At step B10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15e and 15f the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15e and 15f the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as the DL RLC SDUs sent by the SS; and no data shall be received on RB6, RB7 and RB8
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as the DL RLC SDUs sent by the SS; and no data shall be received on RB8.
   - for sub-test 3 and 6: RLC SDUs on RB8 having the same content as the DL RLC SDUs sent by the SS; no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4 and 7: RLC SDUs on RB5 and RB8 having the same content as the DL RLC SDUs sent by the SS.
   - for sub-test 5 and 8: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as the DL RLC SDUs sent by the SS.
   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 10: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 11: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 12: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 13 and 15: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 14 and 16: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15f UE shall send at least one MEASUREMENT REPORT message.

## 14.3.5.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 20 ms TTI

### 14.3.5.2.1 Conformance requirement

See 14.2.4.1

### 14.3.5.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.2.5 for the downlink 20 ms TTI case.

### 14.3.5.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

DSCH downlink TFS:

| | TFI | RB5 (384 kbps) |
|---|---|---|
| TFS | DSCH_TF0, bits | 0x354 |
| | DSCH_TF1, bits | 1x354 |
| | DSCH_TF2, bits | 2x354 |
| | DSCH_TF3, bits | 4x354 |
| | DSCH_TF4, bits | 8x354 |
| | DSCH_TF5, bits | 12x354 |
| | DSCH_TF6, bits | 16x354 |
| | DSCH_TF7, bits | 20x354 |
| | DSCH_TF8, bits | 24x354 |

DSCH downlink TFCS:

| TFCI | RB8 |
|---|---|
| DL_DSCH_TFC0 | DSCH_TF0 |
| DL_DSCH_TFC1 | DSCH_TF1 |
| DL_DSCH_TFC2 | DSCH_TF2 |
| DL_DSCH_TFC3 | DSCH_TF3 |
| DL_DSCH_TFC4 | DSCH_TF4 |
| DL_DSCH_TFC5 | DSCH_TF5 |
| DL_DSCH_TFC6 | DSCH_TF6 |
| DL_DSCH_TFC7 | DSCH_TF7 |
| DL_DSCH_TFC8 | DSCH_TF8 |

Downlink TFS (For CS):

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 |
| | TF1, bits | 1x39 | 1x103 | 1x60 |
| | TF2, bits | 1x81 | N/A | N/A |
| | TF3, bits | N/A | N/A | N/A |
| | TF4, bits | N/A | N/A | N/A |
| | TF5, bits | N/A | N/A | N/A |

DCH downlink TFS:

| | TFI | DCCH |
|---|---|---|
| TFS | DCH_TF0, bits | 0x148 |
| | DCH_TF1, bits | 1x148 |

DCH downlink TFCS:

| TFCI | DCCH |
|---|---|
| DL_DCH_TFC0 | DCH_TF0 |
| DL_DCH_TFC1 | DCH_TF1 |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, DCH_TF0) |
| DL_TFC1 | (TF1, TF0, TF0, DCH_TF0) |
| DL_TFC2 | (TF2, TF1, TF1, DCH_TF0) |
| DL_TFC3 | (TF0, TF0, TF0, DCH_TF1) |
| DL_TFC4 | (TF1, TF0, TF0, DCH_TF1) |
| DL_TFC5 | (TF2, TF1, TF1, DCH_TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC4, | UL_TFC1, UL_TFC16 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC5, | UL_TFC2, UL_TFC17 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC1, DL_TFC4, DL_DSCH_TFC1 | UL_TFC3, UL_TFC18 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 4 | DL_TFC1, DL_TFC4, DL_DSCH_TFC1 | UL_TFC4, UL_TFC19 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC2, DL_TFC5, DL_DSCH_TFC1 | UL_TFC5, UL_TFC20 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC20, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC1, DL_TFC4, DL_DSCH_TFC2 | UL_TFC6, UL_TFC21 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC1, DL_TFC4, DL_DSCH_TFC2 | UL_TFC7, UL_TFC22 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC7, UL_TFC15, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC2, DL_TFC5, DL_DSCH_TFC2 | UL_TFC8, UL_TFC23 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC1, DL_TFC4, DL_DSCH_TFC3 | UL_TFC9, UL_TFC24 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24, , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 10 | DL_TFC1, DL_TFC4, DL_DSCH_TFC3 | UL_TFC10, UL_TFC25 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC10, UL_TFC15, UL_TFC25, , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 11 | DL_TFC2, DL_TFC5, DL_DSCH_TFC3 | UL_TFC11, UL_TFC26 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC15, UL_TFC26, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC1, DL_TFC4, DL_DSCH_TFC4 | UL_TFC12, UL_TFC27 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 13 | DL_TFC1, DL_TFC4, DL_DSCH_TFC4 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 14 | DL_TFC2, DL_TFC5, DL_DSCH_TFC4 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3,, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 15 | DL_TFC1, DL_TFC4, DL_DSCH_TFC5 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3,, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 3882 |
| 16 | DL_TFC2, DL_TFC5, DL_DSCH_TFC5 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3882 |
| 17 | DL_TFC1, DL_TFC4, DL_DSCH_TFC6 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 18 | DL_TFC2, DL_TFC5, DL_DSCH_TFC6 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |
| 19 | DL_TFC1, DL_TFC4, DL_DSCH_TFC7 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 6392 |
| 20 | DL_TFC2, DL_TFC5, DL_DSCH_TFC7 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 6392 |
| 21 | DL_TFC1, DL_TFC4, DL_DSCH_TFC8 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 22 | DL_TFC2, DL_TFC5, DL_DSCH_TFC8 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 7672 |
| | | | | | | |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, and UL_TFC15 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).

#### 14.3.5.2.4 Test requirements

See 14.1.2a for definition of step B10 and step 15.

1. At step B10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15e and 15f the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15e and 15f the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as the DL RLC SDUs sent by the SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as the DL RLC SDUs sent by the SS; and no data shall be received on RB8.
   - for sub-test 3 and 6: RLC SDUs on RB8 having the same content as the DL RLC SDUs sent by the SS; no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4 and 7: RLC SDUs on RB5 and RB8 having the same content as the DL RLC SDUs sent by the SS.
   - for sub-test 5 and 8: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as the DL RLC SDUs sent by the SS.
   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 10: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 11: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 12: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-tests 13, 15, 17, 19 and 21: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-tests14, 16, 18, 20 and 22: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
4. At step 15f UE shall send at least one MEASUREMENT REPORT message.

## 14.3.6 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.3.6.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 10 ms TTI

#### 14.3.6.1.1 Conformance requirement

See 14.2.4.1

#### 14.3.6.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.2.6 for the downlink 10 ms TTI case.

#### 14.3.6.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

DSCH downlink TFS:

| | TFI | RB5 (2048 kbps) |
|---|---|---|
| TFS | DSCH_TF0, bits | 0x674 |
| | DSCH_TF1, bits | 1x674 |
| | DSCH_TF2, bits | 2x674 |
| | DSCH_TF3, bits | 4x674 |
| | DSCH_TF4, bits | 8x674 |
| | DSCH_TF5, bits | 12x674 |
| | DSCH_TF6, bits | 16x674 |
| | DSCH_TF7, bits | 20x674 |
| | DSCH_TF8, bits | 24x674 |
| | DSCH_TF9, bits | 28x674 |
| | DSCH_TF10, bits | 32x674 |

DSCH downlink TFCS:

| TFCI | RB8 |
|---|---|
| DL_DSCH_TFC0 | DSCH_TF0 |
| DL_DSCH_TFC1 | DSCH_TF1 |
| DL_DSCH_TFC2 | DSCH_TF2 |
| DL_DSCH_TFC3 | DSCH_TF3 |
| DL_DSCH_TFC4 | DSCH_TF4 |
| DL_DSCH_TFC5 | DSCH_TF5 |
| DL_DSCH_TFC6 | DSCH_TF6 |
| DL_DSCH_TFC7 | DSCH_TF7 |
| DL_DSCH_TFC8 | DSCH_TF8 |
| DL_DSCH_TFC9 | DSCH_TF9 |
| DL_DSCH_TFC10 | DSCH_TF10 |

Downlink TFS (For CS):

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 |
| | TF1, bits | 1x39 | 1x103 | 1x60 |
| | TF2, bits | 1x81 | N/A | N/A |
| | TF3, bits | N/A | N/A | N/A |
| | TF4, bits | N/A | N/A | N/A |
| | TF5, bits | N/A | N/A | N/A |

DCH downlink TFS:

| | TFI | DCCH |
|---|---|---|
| TFS | DCH_TF0, bits | 0x148 |
| | DCH_TF1, bits | 1x148 |

DCH downlink TFCS:

| TFCI | DCCH |
|---|---|
| DL_DCH_TFC0 | DCH_TF0 |
| DL_DCH_TFC1 | DCH_TF1 |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, DCH_TF0) |
| DL_TFC1 | (TF1, TF0, TF0, DCH_TF0) |
| DL_TFC2 | (TF2, TF1, TF1, DCH_TF0) |
| DL_TFC3 | (TF0, TF0, TF0, DCH_TF1) |
| DL_TFC4 | (TF1, TF0, TF0, DCH_TF1) |
| DL_TFC5 | (TF2, TF1, TF1, DCH_TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC4, | UL_TFC1, UL_TFC16 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16, , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC5, | UL_TFC2, UL_TFC17 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17, , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC1, DL_TFC4, DL_DSCH_TFC1 | UL_TFC3, UL_TFC18 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 4 | DL_TFC1, DL_TFC4, DL_DSCH_TFC1 | UL_TFC4, UL_TFC19 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 5 | DL_TFC2, DL_TFC5, DL_DSCH_TFC1 | UL_TFC5, UL_TFC20 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC20, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 6 | DL_TFC1, DL_TFC4, DL_DSCH_TFC2 | UL_TFC6, UL_TFC21 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 7 | DL_TFC1, DL_TFC4, DL_DSCH_TFC2 | UL_TFC7, UL_TFC22 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC7, UL_TFC15, UL_TFC22, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 8 | DL_TFC2, DL_TFC5, DL_DSCH_TFC2 | UL_TFC8, UL_TFC23 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 9 | DL_TFC1, DL_TFC4, DL_DSCH_TFC3 | UL_TFC9, UL_TFC24 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24, , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 10 | DL_TFC1, DL_TFC4, DL_DSCH_TFC3 | UL_TFC10, UL_TFC25 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC10, UL_TFC15, UL_TFC25, , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 11 | DL_TFC2, DL_TFC5, DL_DSCH_TFC3 | UL_TFC11, UL_TFC26 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC15, UL_TFC26, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 12 | DL_TFC1, DL_TFC4, DL_DSCH_TFC4 | UL_TFC12, UL_TFC27 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 13 | DL_TFC1, DL_TFC4, DL_DSCH_TFC4 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 14 | DL_TFC2, DL_TFC5, DL_DSCH_TFC4 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |
| 15 | DL_TFC1, DL_TFC4, DL_DSCH_TFC5 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 16 | DL_TFC2, DL_TFC5, DL_DSCH_TFC5 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 7672 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 17 | DL_TFC1, DL_TFC4, DL_DSCH_TFC6 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 10232 |
| 18 | DL_TFC2, DL_TFC5, DL_DSCH_TFC6 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 10232 |
| 19 | DL_TFC1, DL_TFC4, DL_DSCH_TFC7 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 12792 |
| 20 | DL_TFC2, DL_TFC5, DL_DSCH_TFC7 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 12792 |
| 21 | DL_TFC1, DL_TFC4, DL_DSCH_TFC8 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 15352 |
| 22 | DL_TFC2, DL_TFC5, DL_DSCH_TFC8 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 15352 |
| 23 | DL_TFC1, DL_TFC4, DL_DSCH_TFC9 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 17912 |
| 24 | DL_TFC2, DL_TFC5, DL_DSCH_TFC9 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 17912 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 25 | DL_TFC1, DL_TFC4, DL_DSCH_TFC10 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 20472 |
| 26 | DL_TFC2, DL_TFC5, DL_DSCH_TFC10 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 20472 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, and UL_TFC15 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). The size of the uplink RLC SDU has been set such that it will be transmitted over each TTI, i.e. the uplink TFS size minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

#### 14.3.6.1.4 Test requirements

See 14.1.2a for definition of step B10 and step 15.

1. At step B10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15e and 15f the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15e and 15f the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as the DL RLC SDUs sent by the SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as the DL RLC SDUs sent by the SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 6: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 8: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 10: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 11: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 12: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-tests 13, 15, 17, 19, 21, 23 and 25: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-tests 14, 16, 18, 20, 22, 24 and 26: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15f UE shall send at least one MEASUREMENT REPORT message.

## 14.3.6.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 10 ms TTI

### 14.3.6.2.1 Conformance requirement

See 14.2.4.1

### 14.3.6.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.2.6 for the downlink 20 ms TTI case.

### 14.3.6.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

DSCH downlink TFS:

| | TFI | RB5 (2048 kbps) |
|---|---|---|
| TFS | DSCH_TF0, bits | 0x674 |
| | DSCH_TF1, bits | 1x674 |
| | DSCH_TF2, bits | 2x674 |
| | DSCH_TF3, bits | 4x674 |
| | DSCH_TF4, bits | 8x674 |
| | DSCH_TF5, bits | 12x674 |
| | DSCH_TF6, bits | 16x674 |
| | DSCH_TF7, bits | 20x674 |
| | DSCH_TF8, bits | 24x674 |
| | DSCH_TF9, bits | 28x674 |
| | DSCH_TF10, bits | 32x674 |
| | DSCH_TF11, bits | 36x674 |
| | DSCH_TF12, bits | 40x674 |
| | DSCH_TF13, bits | 44x674 |
| | DSCH_TF14, bits | 48x674 |
| | DSCH_TF15, bits | 52x674 |
| | DSCH_TF16, bits | 56x674 |
| | DSCH_TF17, bits | 60x674 |
| | DSCH_TF18, bits | 64x674 |

DSCH downlink TFCS:

| TFCI | RB8 |
|---|---|
| DL_DSCH_TFC0 | DSCH_TF0 |
| DL_DSCH_TFC1 | DSCH_TF1 |
| DL_DSCH_TFC2 | DSCH_TF2 |
| DL_DSCH_TFC3 | DSCH_TF3 |
| DL_DSCH_TFC4 | DSCH_TF4 |
| DL_DSCH_TFC5 | DSCH_TF5 |
| DL_DSCH_TFC6 | DSCH_TF6 |
| DL_DSCH_TFC7 | DSCH_TF7 |
| DL_DSCH_TFC8 | DSCH_TF8 |
| DL_DSCH_TFC9 | DSCH_TF9 |
| DL_DSCH_TFC10 | DSCH_TF10 |
| DL_DSCH_TFC11 | DSCH_TF11 |
| DL_DSCH_TFC12 | DSCH_TF12 |
| DL_DSCH_TFC13 | DSCH_TF13 |
| DL_DSCH_TFC14 | DSCH_TF14 |
| DL_DSCH_TFC15 | DSCH_TF15 |
| DL_DSCH_TFC16 | DSCH_TF16 |
| DL_DSCH_TFC17 | DSCH_TF17 |
| DL_DSCH_TFC18 | DSCH_TF18 |

Downlink TFS (For CS):

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 |
| | TF1, bits | 1x39 | 1x103 | 1x60 |
| | TF2, bits | 1x81 | N/A | N/A |
| | TF3, bits | N/A | N/A | N/A |
| | TF4, bits | N/A | N/A | N/A |
| | TF5, bits | N/A | N/A | N/A |

DCH downlink TFS:

| | TFI | DCCH |
|---|---|---|
| TFS | DCH_TF0, bits | 0x148 |
| | DCH_TF1, bits | 1x148 |

DCH downlink TFCS:

| TFCI | DCCH |
|---|---|
| DL_DCH_TFC0 | DCH_TF0 |
| DL_DCH_TFC1 | DCH_TF1 |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, DCH_TF0) |
| DL_TFC1 | (TF1, TF0, TF0, DCH_TF0) |
| DL_TFC2 | (TF2, TF1, TF1, DCH_TF0) |
| DL_TFC3 | (TF0, TF0, TF0, DCH_TF1) |
| DL_TFC4 | (TF1, TF0, TF0, DCH_TF1) |
| DL_TFC5 | (TF2, TF1, TF1, DCH_TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC4, | UL_TFC1, UL_TFC16 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC16, , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC5, | UL_TFC2, UL_TFC17 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC17, , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC1, DL_TFC4, DL_DSCH_TFC1 | UL_TFC3, UL_TFC18 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC15, UL_TFC18, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 4 | DL_TFC1, DL_TFC4, DL_DSCH_TFC1 | UL_TFC4, UL_TFC19 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 5 | DL_TFC2, DL_TFC5, DL_DSCH_TFC1 | UL_TFC5, UL_TFC20 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC20, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 6 | DL_TFC1, DL_TFC4, DL_DSCH_TFC2 | UL_TFC6, UL_TFC21 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC6, UL_TFC15, UL_TFC21, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 7 | DL_TFC1, DL_TFC4, DL_DSCH_TFC2 | UL_TFC7, UL_TFC22 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC7, UL_TFC15, UL_TFC22, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 8 | DL_TFC2, DL_TFC5, DL_DSCH_TFC2 | UL_TFC8, UL_TFC23 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 9 | DL_TFC1, DL_TFC4, DL_DSCH_TFC3 | UL_TFC9, UL_TFC24 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC9, UL_TFC15, UL_TFC24, , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 10 | DL_TFC1, DL_TFC4, DL_DSCH_TFC3 | UL_TFC10, UL_TFC25 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC10, UL_TFC15, UL_TFC25, , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 11 | DL_TFC2, DL_TFC5, DL_DSCH_TFC3 | UL_TFC11, UL_TFC26 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC15, UL_TFC26, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 12 | DL_TFC1, DL_TFC4, DL_DSCH_TFC4 | UL_TFC12, UL_TFC27 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15, UL_TFC27, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 13 | DL_TFC1, DL_TFC4, DL_DSCH_TFC4 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 14 | DL_TFC2, DL_TFC5, DL_DSCH_TFC4 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3,, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |
| 15 | DL_TFC1, DL_TFC4, DL_DSCH_TFC5 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3,, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 16 | DL_TFC2, DL_TFC5, DL_DSCH_TFC5 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 7672 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 17 | DL_TFC1, DL_TFC4, DL_DSCH_TFC6 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 10232 |
| 18 | DL_TFC2, DL_TFC5, DL_DSCH_TFC6 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 10232 |
| 19 | DL_TFC1, DL_TFC4, DL_DSCH_TFC7 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 12792 |
| 20 | DL_TFC2, DL_TFC5, DL_DSCH_TFC7 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 12792 |
| 21 | DL_TFC1, DL_TFC4, DL_DSCH_TFC8 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 15352 |
| 22 | DL_TFC2, DL_TFC5, DL_DSCH_TFC8 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 15352 |
| 23 | DL_TFC1, DL_TFC4, DL_DSCH_TFC9 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 17912 |
| 24 | DL_TFC2, DL_TFC5, DL_DSCH_TFC9 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 17912 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 25 | DL_TFC1, DL_TFC4, DL_DSCH_TFC10 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 20472 |
| 26 | DL_TFC2, DL_TFC5, DL_DSCH_TFC10 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 20472 |
| 27 | DL_TFC1, DL_TFC4, DL_DSCH_TFC11 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 23032 |
| 28 | DL_TFC2, DL_TFC5, DL_DSCH_TFC11 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 23032 |
| 29 | DL_TFC1, DL_TFC4, DL_DSCH_TFC12 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 25592 |
| 30 | DL_TFC2, DL_TFC5, DL_DSCH_TFC12 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 25592 |
| 31 | DL_TFC1, DL_TFC4, DL_DSCH_TFC13 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 28152 |
| 32 | DL_TFC2, DL_TFC5, DL_DSCH_TFC13 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 28152 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 33 | DL_TFC1, DL_TFC4, DL_DSCH_TFC14 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC13, UL_TFC15, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 30712 |
| 34 | DL_TFC2, DL_TFC5, DL_DSCH_TFC14 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 30712 |
| 35 | DL_TFC1, DL_TFC4, DL_DSCH_TFC15 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 33272 |
| 36 | DL_TFC2, DL_TFC5, DL_DSCH_TFC15 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 33272 |
| 37 | DL_TFC1, DL_TFC4, DL_DSCH_TFC16 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 35832 |
| 38 | DL_TFC2, DL_TFC5, DL_DSCH_TFC16 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 35832 |
| 39 | DL_TFC1, DL_TFC4, DL_DSCH_TFC17 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 38392 |
| 40 | DL_TFC2, DL_TFC5, DL_DSCH_TFC17 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 38392 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 41 | DL_TFC1, DL_TFC4, DL_DSCH_TFC18 | UL_TFC13, UL_TFC28 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28, , , | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 40952 |
| 42 | DL_TFC2, DL_TFC5, DL_DSCH_TFC18 | UL_TFC14, UL_TFC29 | DL_DSCH_TFC0, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC14, UL_TFC15, UL_TFC29, , , | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 40952 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, and UL_TFC15 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).

#### 14.3.6.2.4 Test requirements

See 14.1.2a for definition of step B10 and step 15.

1. At step B10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15e and 15f the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15e and 15f the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as the DL RLC SDUs sent by the SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as the DL RLC SDUs sent by the SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 6: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 8: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 9: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 10: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 11: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 12: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-tests 13, 15, 17, 19, 21, 23, 25, 27, 29, 31, 33, 35, 37, 39 and 41: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-tests 14, 16, 18, 20, 22, 24, 26, 28, 30, 32, 34, 36, 38, 40 and 42: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15f UE shall send at least one MEASUREMENT REPORT message.

# 14.4 Combinations on SCCPCH

## 14.4.1 Stand-alone signalling RB for PCCH

Void

## 14.4.2 Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.3.2.

This radio bearer configuration is tested with three different SYSTEM INFORMATION (BCCH) configurations:

1. The contents of System Information Block type 5 / System Information Block type 5bis shall be as per the specific message content.

   Two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 14.4.2.1.

2. The contents of System Information Block type 5 / System Information Block type 5bis as specified in TS 34.108, clause 6.1.3.

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 14.4.2.2.

3. The contents of System Information Block type 5 / System Information Block type 5bis and 6 as specified in TS 34.108, clause 6.1.2.

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

   This configuration is verified in test case 14.4.2.3.

### 14.4.2.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 14.4.2.1.1 Conformance requirement

See 14.2.4.1.

#### 14.4.2.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.2.4.3.2 and 6.10.2.4.4.1 for the case when two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.2.4.4.1 (Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 14.4.2.1.3 Method of Test

The contents of System Information Block type 5 / System Information Block type 5bis shall be as per the specific message content.

Uplink TFS:

| | **TFI** | **RB7+SRB (32kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1x168 |
| | TF1, bits | 1x360 |

Uplink TFCS:

| **TFCI** | **RB7+SRB** |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | **SRBs** | **RB7 (32 kbps)** |
|---|---|---|---|
| TFS | TF0, bits | 0x168 | 0x360 |
| | TF1, bits | 1x168 | 1x360 |
| | TF2, bits | 2x168 | N/A |
| | | | |

Downlink TFCS:

| **TFCI** | **(SRB, RB7)** |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|
| 1 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | RB7: 312 bits | RB7: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | |

See 14.1.1 for test procedure.

Specific Message Contents

Use the default parameter values for the system information block 5 with the same type specified in clause

6.1.1 of TS 34.108, with the following exceptions

| Information Element | Value/remark |
|---|---|
| - SIB6 indicator | FALSE |

#### 14.4.2.1.4 Test Requirements

See 14.1.1 for definition of step 15

1. At step 15 the UE transmitted transport format shall be RB7/TF1 (1x360).
2. At step 15 the UE shall return an RLC SDU on RB7 having the same content as sent by SS

### 14.4.2.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 14.4.2.2.1 Conformance requirement

See 14.2.4.1.

#### 14.4.2.2.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.2.4.3.2 and 6.10.2.4.4.1 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.2.4.4.1 (Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 14.4.2.2.3 Method of Test

The contents of System Information Block type 5 / System Information Block type 5bis shall be as specified in TS 34.108, clause 6.1.3.

Uplink TFS:

| | TFI | RB7+SRB (32kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x168 |
| | TF1, bits | 1x360 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | SRBs | RB7 (32 kbps) |
|---|---|---|---|
| TFS | TF0, bits | 0x168 | 0x360 |
| | TF1, bits | 1x168 | 1x360 |
| | TF2, bits | 2x168 | N/A |
| | | | |

Downlink TFCS:

| TFCI | (SRB, RB7) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|
| 1 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | RB7: 312 bits | RB7: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | |

See 14.1.1 for test procedure.

#### 14.4.2.2.4 Test Requirements

See 14.1.1 for definition of step 15

1. At step 15 the UE transmitted transport format shall be RB7/TF1 (1x360).
2. At step 15 the UE shall return an RLC SDU on RB7 having the same content as sent by SS

### 14.4.2.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 14.4.2.3.1 Conformance requirement

See 14.2.4.1.

#### 14.4.2.3.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.2.4.3.2 and 6.10.2.4.4.1 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.2.4.4.1 (Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 14.4.2.3.3 Method of Test

The contents of System Information Block type 5 / System Information Block type 5bis and 6 shall be as specified in TS 34.108, clause 6.1.2.

Uplink TFS:

| | TFI | RB7+SRB (32kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x168 |
| | TF1, bits | 1x360 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | SRBs | RB7 (32 kbps) |
|---|---|---|---|
| TFS | TF0, bits | 0x168 | 0x360 |
| | TF1, bits | 1x168 | 1x360 |
| | TF2, bits | 2x168 | N/A |
| | | | |

Downlink TFCS:

| TFCI | (SRB, RB7) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|
| 1 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | RB7: 312 bits | RB7: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | |

See 14.1.1 for test procedure.

#### 14.4.2.3.4 Test Requirements

See 14.1.1 for definition of step 15

1. At step 15 the UE transmitted transport format shall be RB7/TF1 (1x360).

2. At step 15 the UE shall return an RLC SDU on RB7 having the same content as sent by SS

## 14.4.2a Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.3.2a.

This radio bearer configuration is tested with three different SYSTEM INFORMATION (BCCH) configurations:

1. The contents of System Information Block type 5 / System Information Block type 5bis shall be as per the message specific content.

   Two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 14.4.2a.1.

2. The contents of System Information Block type 5 / System Information Block type 5bis as specified in TS 34.108, clause 6.1.3.

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 14.4.2a.2.

3. The contents of System Information Block type 5 / System Information Block type 5bis and 6 as specified in TS 34.108, clause 6.1.2.

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

   This configuration is verified in test case 14.4.2a.3.

Specific Message Content for Radio Bearer Setup message to be used for these test cases:

Use the RADIO BEARER SETUP message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - RAB information for setup | |
| - RAB info | (AM DTCH for PS domain) |
| - RAB identity | 0000 0101B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 20 |
| - PDCP Info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter |

| Information Element | Value/remark |
|---|---|
| - MAC logical channel priority<br>- Downlink RLC logical channel info<br>- Number of downlink RLC logical channels<br>- Downlink transport channel type<br>- DL DCH Transport channel identity<br>- DL DSCH Transport channel identity<br>- Logical channel identity | Set<br>8<br><br>1<br>FACH<br>Not Present<br>Not Present<br>7 |
| - RAB identity | 0000 0110B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 24 |
| - PDCP info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 10 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 10 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 10 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |

| Information Element | Value/remark |
|---|---|
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 10 |

## 14.4.2a.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

### 14.4.2a.1.1 Conformance requirement

See 14.2.4.1.

### 14.4.2a.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.3.2a and 6.10.2.4.4.2 for the case when two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.2.4.4.2 (Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

### 14.4.2a.1.3 Method of Test

The contents of System Information Block type shall be as per the specific message content below.

See 14.1.1 for test procedure.

NOTE The test procedure for single radio bearer configurations is used as there are no uplink transport format combination for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | TFI | RB7+RB8+SRB (2x32 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x168 |
| | TF1, bits | 1x360 |

Uplink TFCS:

| TFCI | RB7 + RB8 |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | SRBs | RB7 + RB8 (2x32 kbps) |
|---|---|---|---|
| TFS | TF0, bits | 0x168 | 0x360 |
| | TF1, bits | 1x168 | 1x360 |
| | TF2, bits | 2x168 | N/A |

Downlink TFCS:

| TFCI | (SRB, RB7+RB8) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|
| 1 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | RB7: 312 bits<br>RB8: 312 bits | RB7: 312 bits<br>RB8: No data |
| 2 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | RB7: 312 bits<br>RB8: 312 bits | RB7: No data<br>RB8: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB7 and RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | |

Specific Message Contents

Use the default parameter values for the system information block 5 with the same type specified in clause

6.1.1 of TS 34.108, with the following exceptions

| Information Element | Value/remark |
|---|---|
| - SIB6 indicator | FALSE |

#### 14.4.2a.1.4 Test Requirements

See 14.1.1 for definition of step 15

1. At step 15 the UE transmitted transport format shall be TF1 (1x360).
2. At step 15 the UE shall return
   - for sub test 1: RLC SDUs on RB7 having the same content as sent by SS
   - for sub test 2: RLC SDUs on RB8 having the same content as sent by SS

### 14.4.2a.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 14.4.2a.2.1 Conformance requirement

See 14.2.4.1.

#### 14.4.2a.2.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.2.4.3.2 and 6.10.2.4.4.2 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.2.4.4.2 (Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

### 14.4.2a.2.3 Method of Test

The contents of System Information Block type 5 / System Information Block type 5bis shall be as specified in TS 34.108, clause 6.1.3.

See 14.1.1 for test procedure.

NOTE The test procedure for single radio bearer configurations is used as there are no uplink transport format combination for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | TFI | RB7 + RB8 (2x32 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x168 |
| | TF1, bits | 1x360 |

Uplink TFCS:

| TFCI | RB7 + RB8 |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | SRBs | RB7 + RB8 (2x32 kbps) |
|---|---|---|---|
| TFS | TF0, bits | 0x168 | 0x360 |
| | TF1, bits | 1x168 | 1x360 |
| | TF2, bits | 2x168 | N/A |

Downlink TFCS:

| TFCI | (SRB, RB7+RB8) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|
| 1 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | RB7: 312 bits<br>RB8: 312 bits | RB7: 312 bits<br>RB8: No data |
| 2 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | RB7: 312 bits<br>RB8: 312 bits | RB7: No data<br>RB8: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB7 and RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | |

#### 14.4.2a.2.4 Test Requirements

See 14.1.1 for definition of step 15

1. At step 15 the UE transmitted transport format shall be TF1 (1x360).
2. At step 15 the UE shall return
   - for sub test 1: RLC SDUs on RB7 having the same content as sent by SS
   - for sub test 2: RLC SDUs on RB8 having the same content as sent by SS

### 14.4.2a.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 14.4.2a.3.1 Conformance requirement

See 14.2.4.1.

#### 14.4.2a.3.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.2.4.3.2 and 6.10.2.4.4.2 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.2.4.4.2 (Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 14.4.2a.3.3 Method of Test

The contents of System Information Block type 5 / System Information Block type 5bis and 6 shall be as specified in TS 34.108, clause 6.1.2.

See 14.1.1 for test procedure.

NOTE The test procedure for single radio bearer configurations is used as there are no uplink transport format combination for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | **TFI** | **RB7+RB8+SRB (2x32 kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1x168 |
| | TF1, bits | 1x360 |

Uplink TFCS:

| **TFCI** | **RB7 + RB8** |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | SRBs | RB7 + RB8 (2x32 kbps) |
|---|---|---|---|
| TFS | TF0, bits | 0x168 | 0x360 |
| | TF1, bits | 1x168 | 1x360 |
| | TF2, bits | 2x168 | N/A |

Downlink TFCS:

| TFCI | (SRB, RB7+RB8) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|
| 1 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | RB7: 312 bits<br>RB8: 312 bits | RB7: 312 bits<br>RB8: No data |
| 2 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | RB7: 312 bits<br>RB8: 312 bits | RB7: No data<br>RB8: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB7 and RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | |

#### 14.4.2a.3.4 Test Requirements

1. At step 15 the UE transmitted transport format shall be TF1 (1x360).
2. At step 15 the UE shall return
   - for sub test 1: RLC SDUs on RB7 having the same content as sent by SS
   - for sub test 2: RLC SDUs on RB8 having the same content as sent by SS

### 14.4.3 Interactive/Background 32 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH

#### 14.4.3.1 Conformance requirement

See 14.2.4.1.

#### 14.4.3.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.2.4.3.3 and 6.10.2.4.4.1 for the case when one SCCPCH is used in this SYSTEM INFORMATION (BCCH) configuration. The SCCPCH carries the PCH, the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.2.4.4.1 (Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

14.4.3.3 Method of Test

The contents of System Information Block type 5 / System Information Block type 5bis and 6 shall be as specified in TS 34.108, clause 6.1.

Uplink TFS:

| | TFI | RB8 (32kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x168 |
| | TF1, bits | 1x360 |

Uplink TFCS:

| TFCI | RB8 |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | PCCH | SRBs | RB8 (32 kbps) |
|---|---|---|---|---|
| TFS | TF0, bits | 0x240 | 0x168 | 0x360 |
| | TF1, bits | 1x240 | 1x168 | 1x360 |
| | TF2, bits | N/A | 2x168 | N/A |

Downlink TFCS:

| TFCI | (PCCH, SRB, RB8) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF0, TF1, TF0) |
| DL_TFC3 | (TF1, TF1, TF0) |
| DL_TFC4 | (TF0, TF2, TF0) |
| DL_TFC5 | (TF1, TF2, TF0) |
| DL_TFC6 | (TF0, TF0, TF1) |
| DL_TFC7 | (TF0, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|
| 1 | DL_TFC6 | UL_TFC1 | DL_TFC0, UL_TFC0 | RB8: 312 bits | RB8: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | |

See 14.1.1 for test procedure.

14.4.3.4 Test requirements

See 14.1.1 for definition of step 15

1. At step 15 the UE transmitted transport format shall be RB8/TF1 (1x360).
2. At step 15 the UE shall return an RLC SDU on RB8 having the same content as sent by SS

## 14.4.4 RB for CTCH + SRB for CCCH +SRB for BCCH

### 14.4.4.1 Definition and applicability

Applicable only for a UE supporting Cell Broadcast Services (CBS) as a type of Broadcast/Multicast Services.

It shall be possible to indicate the reception of certain CBS message contents carried with certain activated CG message types in a clear way on UE side.

### 14.4.4.2 Conformance Requirement

See 14.2.4.1 and 7.4.2.1.2.

### 14.4.4.3 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.3.4 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.2.4.3.3. Data transfer on CTCH is tested similar to testing BMC for a UE in idle mode as specified in TS 34.123-1, clause 7.4.2, data transfer on CCCH is tested by establishing a RRC connection.

### 14.4.4.4 Method of Test

Initial conditions:

The contents of System Information Block type 1 shall be as per the specific message content.

The contents of System Information Block type 5 / System Information Block type 5bis and 6 shall be as specified in TS 34.108, clause 6.1.2.

The UE is RRC idle mode, the BMC entity is established.

The CB message ID stored on the SIM shall be known for this test (parameter for CBS PDUs). The CBS data type shall be allocated and activated in the UE.

Related ICS/IXIT Statement(s)

As in clause 7.4.2.1.4

Uplink TFS:

| | TFI | RB7+SRB (32 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x168 |
| | TF1, bits | 1x360 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | RB7 (32 kbps on CTCH) | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x168 | 0x168 |
| | TF1, bits | 1x168 | 1x168 |

Downlink TFCS:

| TFCI | (RB7, SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |

Test Procedure:

a) The UE in RRC Idle mode is triggered to wait for the next system information. The UE is activated to receive CBS messages.

b) The UE and the SS have configured their RLC, MAC, and PHYs layers with all CB related system information.

c) The SS sends the CVS message containing an activated CGS message type according to CB-Data 1 to the UE; this shall be repeated for CPREP times (indicated by the parameter "repetition period").

d) The UE indicates in an unambiguous way, that this message was received.

e) Steps 1 – 4 in the Expected sequence are followed by the steps 2 – 6 of the test procedure according to clause 14.1.1.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | SYSTEM INFORMATION | |
| 2 | | | | The SS waits for about 10 s to make sure, that the UE is configured to receive CBS data |
| 3 | | ← | BMC CBS Message | Activated CBS message with CB Data 1 message content as described by the manufacturer. This message shall be repeated "CPREP" times, Parameter:<br>- Message_ID,<br>- Serial-No,<br>- Data coding scheme,<br>- CB-Data 1, |
| 4 | | | | After having received the BMC CBS message the UE shall indicate the reception of CB Data 1 in a clear way. |

Specific Message Contents

Use the default parameter values for the System Information Block type 1 with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions

| Information Element | Conditions | Value/remark |
|---|---|---|
| - CN domain identity | | PS |
| - CHOICE CN Type | | GSM-MAP |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | | 05 00H |
| - CN domain specific DRX cycle length coefficient | | 9 |
| - CN domain identity | | CS |
| - CHOICE CN Type | | GSM-MAP |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | | 1E 01H |
| - CN domain specific DRX cycle length coefficient | | 9 |

#### 14.4.4.5 Test Requirements

At step 4 in the Expected sequence, the UE shall store and decode a received activated CBS message.

At step e of the test procedure according to clause 14.1.1 the RRC Connection shall be established.

## 14.4.5 64.8kbps RB for MTCH with 80 ms TTI / MBMS Broadcast Service

#### 14.4.5.1 Conformance Requirement

The UE shall correctly receive user data on the MTCH from the peer to peer RLC entitity according to the configured MTCH.

Reference(s)

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

3GPP TS 25.331 (RRC)

#### 14.4.5.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.3.5.

#### 14.4.5.3 Method of Test

Initial Condition

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).Related ICS/IXIT statements

MBMS Broadcast service application available on UE Yes / No

Test Procedure

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (64.8 kbps) |
|---|---|---|
| TFS | TF0, bits | 0x664 |
| | TF1, bits | 1x664 |
| | TF2, bits | 2x664 |
| | TF3, bits | 3x664 |
| | TF4, bits | 4x664 |
| | TF5, bits | 5x664 |
| | TF6, bits | 6x664 |
| | TF7, bits | 7x664 |
| | TF8, bits | 8x664 |

Downlink TFCS:

| TFCI | RB for MTCH (64.8 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitly tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 16 bits (size of 2, 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 14.4.5.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

Note For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

## 14.4.5m 64.8kbps RB for MTCH with 80 ms TTI / MBMS Multicast Service

#### 14.4.5m.1 Conformance Requirement

Same conformance requirement as in clause 14.4.5.1.

#### 14.4.5m.2 Test purpose

Same test pupose as in clause 14.4.5.2.

#### 14.4.5m.3 Method of Test

Initial Condition

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

MBMS Multicast service application available on UE Yes / No

Test Procedure

Same test procedure as in clause 14.4.5.3

#### 14.4.5m.4 Test Requirements

Same test requirements as in clause 14.4.5.4.

### 14.4.6 129.6 kbps RB for MTCH with 80 ms TTI / MBMS Broadcast Service

#### 14.4.6.1 Conformance Requirement

See 14.4.5.1.

#### 14.4.6.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.3.6.

#### 14.4.6.3 Method of Test

Initial Condition

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

MBMS Broadcast service application available on UE Yes / No

Test Procedure

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (129.6 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x664 |
| | TF1, bits | 1x664 |
| | TF2, bits | 2x664 |
| | TF3, bits | 3x664 |
| | TF4, bits | 4x664 |
| | TF5, bits | 5x664 |
| | TF6, bits | 6x664 |
| | TF7, bits | 7x664 |
| | TF8, bits | 8x664 |
| | TF9, bits | 9x664 |
| | TF10, bits | 10x664 |
| | TF11, bits | 11x664 |
| | TF12, bits | 12x664 |
| | TF13, bits | 13x664 |
| | TF14, bits | 14x664 |
| | TF15, bits | 15x664 |
| | TF16, bits | 16x664 |

Downlink TFCS:

| TFCI | RB for MTCH (129.6 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |
| DL_TFC9 | (TF9) |
| DL_TFC10 | (TF10) |
| DL_TFC11 | (TF11) |
| DL_TFC12 | (TF12) |
| DL_TFC13 | (TF13) |
| DL_TFC14 | (TF14) |
| DL_TFC15 | (TF15) |
| DL_TFC16 | (TF16) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitly tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| 9 | DL_TFC9 | DL_TFC0 | 5824 |
| 10 | DL_TFC10 | DL_TFC0 | 6472 |
| 11 | DL_TFC11 | DL_TFC0 | 7120 |
| 12 | DL_TFC12 | DL_TFC0 | 7768 |
| 13 | DL_TFC13 | DL_TFC0 | 8416 |
| 14 | DL_TFC14 | DL_TFC0 | 9064 |
| 15 | DL_TFC15 | DL_TFC0 | 9712 |
| 16 | DL_TFC16 | DL_TFC0 | 10360 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 16 bits (size of 2, 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

### 14.4.6.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

Note For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

## 14.4.6m 129.6 kbps RB for MTCH with 80 ms TTI / MBMS Multicast Service

### 14.4.6m.1 Conformance Requirement

Same conformance requirement as in clause 14.4.6.1.

### 14.4.6m.2 Test purpose

Same test pupose as in clause 14.4.6.2.

### 14.4.6m.3 Method of Test

Initial Condition

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

MBMS Multicast service application available on UE Yes / No

Test Procedure

Same test procedure as in clause 14.4.6.3.

### 14.4.6m.4 Test Requirements

Same test requirements as in clause 14.4.6.4.

## 14.4.7 259.2 kbps RB for MTCH with 40 ms TTI / MBMS Broadcast Service

### 14.4.7.1 Conformance Requirement

See 14.4.5.1.

### 14.4.7.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.3.7.

### 14.4.7.3 Method of Test

Initial Condition

The UE is interested in the broadcast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).Related ICS/IXIT statements

MBMS Broadcast service application available on UE Yes / No

Test Procedure

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (259.2 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x664 |
| | TF1, bits | 1x664 |
| | TF2, bits | 2x664 |
| | TF3, bits | 3x664 |
| | TF4, bits | 4x664 |
| | TF5, bits | 5x664 |
| | TF6, bits | 6x664 |
| | TF7, bits | 7x664 |
| | TF8, bits | 8x664 |
| | TF9, bits | 9x664 |
| | TF10, bits | 10x664 |
| | TF11, bits | 11x664 |
| | TF12, bits | 12x664 |
| | TF13, bits | 13x664 |
| | TF14, bits | 14x664 |
| | TF15, bits | 15x664 |
| | TF16, bits | 16x664 |

Downlink TFCS:

| TFCI | RB for MTCH (259.2 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |
| DL_TFC9 | (TF9) |
| DL_TFC10 | (TF10) |
| DL_TFC11 | (TF11) |
| DL_TFC12 | (TF12) |
| DL_TFC13 | (TF13) |
| DL_TFC14 | (TF14) |
| DL_TFC15 | (TF15) |
| DL_TFC16 | (TF16) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitly tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| 9 | DL_TFC9 | DL_TFC0 | 5824 |
| 10 | DL_TFC10 | DL_TFC0 | 6472 |
| 11 | DL_TFC11 | DL_TFC0 | 7120 |
| 12 | DL_TFC12 | DL_TFC0 | 7768 |
| 13 | DL_TFC13 | DL_TFC0 | 8416 |
| 14 | DL_TFC14 | DL_TFC0 | 9064 |
| 15 | DL_TFC15 | DL_TFC0 | 9712 |
| 16 | DL_TFC16 | DL_TFC0 | 10360 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 16 bits (size of 2, 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 14.4.7.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

Note For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

## 14.4.7m 259.2 kbps RB for MTCH with 40 ms TTI / MBMS Multicast Service

#### 14.4.7m.1 Conformance Requirement

Same conformance requirement as in clause 14.4.7.1.

#### 14.4.7m.2 Test purpose

Same test pupose as in clause 14.4.7.2.

#### 14.4.7m.3 Method of Test

Initial Condition

The UE has joined the multicast service to be provided by the SS (included in MBMS_ACTIVATED_SERVICES variable).

Related ICS/IXIT statements

MBMS Multicast service application available on UE Yes / No

Test Procedure

Same test procedure as in clause 14.4.7.3.

14.4.7m.4 Test Requirements

Same test requirements as in clause 14.4.7.4.

# 14.5 Combinations on PRACH

## 14.5.1 Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH

The reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.4.1 is implicitly tested by the test cases 14.4.2.1, 14.4.2.2, 14.4.2.3 and 14.4.3.

## 14.5.2 Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH

The reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.4.2 is implicitly tested by the test cases 14.4.2a.1, 14.4.2a.2 and 14.4.2a.3.

# 14.6 Combinations on DPCH and HS-PDSCH

## 14.6.1 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

14.6.1.1 Conformance requirement

For all transmissions of a transport block, the transport block size is derived from the TFRI value as specified below, except only in those cases of retransmissions where the Node-B selects a combination for which no mapping exists between the original transport block size and the selected combination of channelisation Code set and modulation type. In such cases, the transport block size index value signalled to the UE shall be set to 111111, i.e., $k_i$=63.

Let $k_i$ be the TFRI signalled on the HS-SCCH value and let $k_{0,i}$ be the value in the table 9.2.3.1 corresponding to the modulation and the number of codes signalled on the HS-SCCH. Let $k_t$ be the sum of the two values: $k_t = k_i + k_{0,i}$. The transport block size $L(k_t)$ can be obtained by accessing the position $k_t$ in the table in Annex A (normative) or by using the formula below (informative):

If $k_t < 40$

$$L(k_t) = 125 + 12 \cdot k_t$$

else

$$L(k_t) = \lfloor L_{\min} p^{k_t} \rfloor$$

$$p = 2085/2048$$

$$L_{\min} = 296$$

end

**Table 9.2.3.1: Values of $k_{0,i}$ for different numbers of channelization codes and modulation schemes**

| Combination $i$ | Modulation scheme | Number of channelization codes | $k_{0,i}$ |
|---|---|---|---|
| 0 | QPSK | 1 | 1 |
| 1 | | 2 | 40 |
| 2 | | 3 | 63 |
| 3 | | 4 | 79 |

| | | | |
|---|---|---|---|
| 4 | | 5 | 92 |
| 5 | | 6 | 102 |
| 6 | | 7 | 111 |
| 7 | | 8 | 118 |
| 8 | | 9 | 125 |
| 9 | | 10 | 131 |
| 10 | | 11 | 136 |
| 11 | | 12 | 141 |
| 12 | | 13 | 145 |
| 13 | | 14 | 150 |
| 14 | | 15 | 153 |
| 15 | 16QAM | 1 | 40 |
| 16 | | 2 | 79 |
| 17 | | 3 | 102 |
| 18 | | 4 | 118 |
| 19 | | 5 | 131 |
| 20 | | 6 | 141 |
| 21 | | 7 | 150 |
| 22 | | 8 | 157 |
| 23 | | 9 | 164 |
| 24 | | 10 | 169 |
| 25 | | 11 | 175 |
| 26 | | 12 | 180 |
| 27 | | 13 | 184 |
| 28 | | 14 | 188 |
| 29 | | 15 | 192 |

……

The following table provides the mapping between $k_t$ (as per the definition in subclause 9.2.3.1) and the HS-DSCH Transport Block Size ($L(k_t)$):

| Index | TB Size | Index | TB Size | Index | TB Size |
|---|---|---|---|---|---|
| 1 | 137 | 86 | 1380 | 171 | 6324 |
| 2 | 149 | 87 | 1405 | 172 | 6438 |
| 3 | 161 | 88 | 1430 | 173 | 6554 |
| 4 | 173 | 89 | 1456 | 174 | 6673 |
| 5 | 185 | 90 | 1483 | 175 | 6793 |
| 6 | 197 | 91 | 1509 | 176 | 6916 |
| 7 | 209 | 92 | 1537 | 177 | 7041 |
| 8 | 221 | 93 | 1564 | 178 | 7168 |
| 9 | 233 | 94 | 1593 | 179 | 7298 |
| 10 | 245 | 95 | 1621 | 180 | 7430 |
| 11 | 257 | 96 | 1651 | 181 | 7564 |
| 12 | 269 | 97 | 1681 | 182 | 7700 |
| 13 | 281 | 98 | 1711 | 183 | 7840 |
| 14 | 293 | 99 | 1742 | 184 | 7981 |
| 15 | 305 | 100 | 1773 | 185 | 8125 |
| 16 | 317 | 101 | 1805 | 186 | 8272 |
| 17 | 329 | 102 | 1838 | 187 | 8422 |
| 18 | 341 | 103 | 1871 | 188 | 8574 |
| 19 | 353 | 104 | 1905 | 189 | 8729 |
| 20 | 365 | 105 | 1939 | 190 | 8886 |
| 21 | 377 | 106 | 1974 | 191 | 9047 |
| 22 | 389 | 107 | 2010 | 192 | 9210 |
| 23 | 401 | 108 | 2046 | 193 | 9377 |
| 24 | 413 | 109 | 2083 | 194 | 9546 |
| 25 | 425 | 110 | 2121 | 195 | 9719 |
| 26 | 437 | 111 | 2159 | 196 | 9894 |
| 27 | 449 | 112 | 2198 | 197 | 10073 |
| 28 | 461 | 113 | 2238 | 198 | 10255 |
| 29 | 473 | 114 | 2279 | 199 | 10440 |
| 30 | 485 | 115 | 2320 | 200 | 10629 |
| 31 | 497 | 116 | 2362 | 201 | 10821 |
| 32 | 509 | 117 | 2404 | 202 | 11017 |
| 33 | 521 | 118 | 2448 | 203 | 11216 |
| 34 | 533 | 119 | 2492 | 204 | 11418 |
| 35 | 545 | 120 | 2537 | 205 | 11625 |
| 36 | 557 | 121 | 2583 | 206 | 11835 |
| 37 | 569 | 122 | 2630 | 207 | 12048 |
| 38 | 581 | 123 | 2677 | 208 | 12266 |
| 39 | 593 | 124 | 2726 | 209 | 12488 |
| 40 | 605 | 125 | 2775 | 210 | 12713 |
| 41 | 616 | 126 | 2825 | 211 | 12943 |
| 42 | 627 | 127 | 2876 | 212 | 13177 |
| 43 | 639 | 128 | 2928 | 213 | 13415 |
| 44 | 650 | 129 | 2981 | 214 | 13657 |
| 45 | 662 | 130 | 3035 | 215 | 13904 |
| 46 | 674 | 131 | 3090 | 216 | 14155 |
| 47 | 686 | 132 | 3145 | 217 | 14411 |
| 48 | 699 | 133 | 3202 | 218 | 14671 |
| 49 | 711 | 134 | 3260 | 219 | 14936 |
| 50 | 724 | 135 | 3319 | 220 | 15206 |
| 51 | 737 | 136 | 3379 | 221 | 15481 |
| 52 | 751 | 137 | 3440 | 222 | 15761 |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 764 | 138 | 3502 | 223 | 16045 |
| 54 | 778 | 139 | 3565 | 224 | 16335 |
| 55 | 792 | 140 | 3630 | 225 | 16630 |
| 56 | 806 | 141 | 3695 | 226 | 16931 |
| 57 | 821 | 142 | 3762 | 227 | 17237 |
| 58 | 836 | 143 | 3830 | 228 | 17548 |
| 59 | 851 | 144 | 3899 | 229 | 17865 |
| 60 | 866 | 145 | 3970 | 230 | 18188 |
| 61 | 882 | 146 | 4042 | 231 | 18517 |
| 62 | 898 | 147 | 4115 | 232 | 18851 |
| 63 | 914 | 148 | 4189 | 233 | 19192 |
| 64 | 931 | 149 | 4265 | 234 | 19538 |
| 65 | 947 | 150 | 4342 | 235 | 19891 |
| 66 | 964 | 151 | 4420 | 236 | 20251 |
| 67 | 982 | 152 | 4500 | 237 | 20617 |
| 68 | 1000 | 153 | 4581 | 238 | 20989 |
| 69 | 1018 | 154 | 4664 | 239 | 21368 |
| 70 | 1036 | 155 | 4748 | 240 | 21754 |
| 71 | 1055 | 156 | 4834 | 241 | 22147 |
| 72 | 1074 | 157 | 4921 | 242 | 22548 |
| 73 | 1093 | 158 | 5010 | 243 | 22955 |
| 74 | 1113 | 159 | 5101 | 244 | 23370 |
| 75 | 1133 | 160 | 5193 | 245 | 23792 |
| 76 | 1154 | 161 | 5287 | 246 | 24222 |
| 77 | 1175 | 162 | 5382 | 247 | 24659 |
| 78 | 1196 | 163 | 5480 | 248 | 25105 |
| 79 | 1217 | 164 | 5579 | 249 | 25558 |
| 80 | 1239 | 165 | 5680 | 250 | 26020 |
| 81 | 1262 | 166 | 5782 | 251 | 26490 |
| 82 | 1285 | 167 | 5887 | 252 | 26969 |
| 83 | 1308 | 168 | 5993 | 253 | 27456 |
| 84 | 1331 | 169 | 6101 | 254 | 27952 |
| 85 | 1356 | 170 | 6211 | | |

Reference(s)

3GPP TS 25.321, 9.2.3.1 and Annex A

#### 14.6.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.1.

#### 14.6.1.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE “HS-DSCH physical layer category” (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 2 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 6 | 512 | 256 | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | |
| | 11 | 3 | 1024 | 128 | | | | | |
| | 12 | 6 | 1024 | 128 | | | | | |
| 2 | 1 | 2 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 2 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 6 | 256 | 256 | | | | | |
| | 6 | 6 | 256 | 256 | | | | | |
| | 7 | 6 | 512 | 512 | | | | | |
| | 8 | 6 | 512 | 512 | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | |
| | 11 | 3 | 512 | 128 | | | | | |
| | 12 | 6 | 512 | 128 | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 |
| | 2 | 8 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 256 | | | | | |
| | 4 | 8 | 512 | 256 | | | | | |
| | 5 | 8 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 256 | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | |
| | 11 | 8 | 512 | 128 | | | | | |
| | 12 | 8 | 512 | 128 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 14.6.1.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (3x336).
   - for sub-test 4: TF4 (4x336)
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 14.6.1a Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.6.1a.1 Conformance requirement

See 14.6.1.1.

#### 14.6.1a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.1a.

#### 14.6.1a.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 2 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 6 | 512 | 256 | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | |
| | 11 | 3 | 1024 | 128 | | | | | |
| | 12 | 6 | 1024 | 128 | | | | | |
| 2 | 1 | 2 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 2 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 6 | 256 | 256 | | | | | |
| | 6 | 6 | 256 | 256 | | | | | |
| | 7 | 6 | 512 | 512 | | | | | |
| | 8 | 6 | 512 | 512 | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | |
| | 11 | 3 | 512 | 128 | | | | | |
| | 12 | 6 | 512 | 128 | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 |
| | 2 | 8 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 256 | | | | | |
| | 4 | 8 | 512 | 256 | | | | | |
| | 5 | 8 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 256 | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | |
| | 11 | 8 | 512 | 128 | | | | | |
| | 12 | 8 | 512 | 128 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 14.6.1a.4 Test requirements

See 14.1.3.5.2 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (4x336).
   - for sub-test 4: TF4 (8x336).
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 14.6.1b Interactive or background / UL:64 DL: [max bit rate depending on UE category] with Fixed RLC and MAC-ehs PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: QPSK and 16QAM

#### 14.6.1b.1 Conformance requirement

See 14.6.1.1.

#### 14.6.1b.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.1 for the QPSK, 16QAM and non-MIMO case using the downlink enhanced Layer 2 configuration with Fixed RLC and MAC-ehs .

#### 14.6.1b.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-7 IE “HS-DSCH physical layer category extension”. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Radio bearer | TS 34.108, clause 6.10.2.4.5.1 using downlink MAC-d flow parameters according to Alt 2 (Fixed RLC and MAC-ehs) |
| MAC-ehs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5a is run for each sub-test for test execution 1 and 2.

| Execution counter | Downlink Modulation Scheme (M) | MIMO |
|---|---|---|
| 1 | QPSK | No |
| 2 | 16QAM | No |

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 2 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 6 | 512 | 256 | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | |
| | 11 | 3 | 1024 | 128 | | | | | |
| | 12 | 6 | 1024 | 128 | | | | | |
| | 13 | 6 | 2047 | 512 | | | | | |
| | 14 | 6 | 2047 | 512 | | | | | |
| | 15 | 6 | 2047 | 512 | | | | | |
| | 16 | 6 | 2047 | 512 | | | | | |
| | 17 | 6 | 2047 | 512 | | | | | |
| | 18 | 6 | 2047 | 512 | | | | | |
| 2 | 1 | 2 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 2 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 6 | 256 | 256 | | | | | |
| | 6 | 6 | 256 | 256 | | | | | |
| | 7 | 6 | 512 | 512 | | | | | |
| | 8 | 6 | 512 | 512 | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | |
| | 11 | 3 | 512 | 128 | | | | | |
| | 12 | 6 | 512 | 128 | | | | | |
| | 13 | 6 | 1024 | 1024 | | | | | |
| | 14 | 6 | 1024 | 1024 | | | | | |
| | 15 | 6 | 1024 | 1024 | | | | | |
| | 16 | 6 | 1024 | 1024 | | | | | |
| | 17 | 6 | 1024 | 1024 | | | | | |
| | 18 | 6 | 1024 | 1024 | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 |
| | 2 | 8 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 256 | | | | | |
| | 4 | 8 | 512 | 256 | | | | | |
| | 5 | 8 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 256 | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | |
| | 10 | 8 | 2047 | 1024 | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | |
| | 13 | 8 | 2047 | 1024 | | | | | |
| | 14 | 8 | 2047 | 1024 | | | | | |
| | 15 | 8 | 2047 | 1024 | | | | | |

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | 16 | 8 | 2047 | 1024 | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |
| | 10 | 8 | 1024 | 1024 | | | | | |
| | 11 | 8 | 512 | 128 | | | | | |
| | 12 | 8 | 512 | 128 | | | | | |
| | 13 | 8 | 1024 | 1024 | | | | | |
| | 14 | 8 | 1024 | 1024 | | | | | |
| | 15 | 8 | 1024 | 1024 | | | | | |
| | 16 | 8 | 1024 | 1024 | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

### 14.6.1b.4 Test requirements

See 14.1.3.5a for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (3x336).
   - for sub-test 4: TF4 (4x336)
3. At step 18 and for each TFRC test point:

   The UE shall for each radio bearer return the equal number RLC SDUs as sent by the SS in downlink. If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return RLC SDUs where the SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5a.2 sends either 1 SDU or 4 SDUs depending on the transport block size under tests. For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

# 14.6.1c Interactive or background / UL:64 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: 64QAM

## 14.6.1c.1 Conformance requirement

See 14.6.1.1.

## 14.6.1c.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.1 for the 64QAM and non-MIMO case using the downlink enhanced Layer 2 configuration with Fixed RLC and MAC-ehs .

## 14.6.1c.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-7 IE "HS-DSCH physical layer category extension". This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| Radio bearer | TS 34.108, clause 6.10.2.4.5.1 using downlink MAC-d flow parameters according to Alt 3 (Flexible RLC and MAC-ehs) |
| MAC-ehs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |
| RB: Max_RLC_PDU_size [octets] | 300 |

The generic test procedure in 14.1.3.5a is run for each sub-test with M=64QAM and non-MIMO case.

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 13 | 6 | 2047 | 512 | Flexible | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 14 | 6 | 2047 | 512 | | | | | |
| | 17 | 6 | 2047 | 512 | | | | | |
| | 18 | 6 | 2047 | 512 | | | | | |
| 2 | 13 | 6 | 1024 | 1024 | Flexible | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 14 | 6 | 1024 | 1024 | | | | | |
| | 17 | 6 | 1024 | 1024 | | | | | |
| | 18 | 6 | 1024 | 1024 | | | | | |
| 3 | 13 | 8 | 2047 | 1024 | Flexible | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 |
| | 14 | 8 | 2047 | 1024 | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | |
| 4 | 13 | 8 | 1024 | 1024 | Flexible | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 |
| | 14 | 8 | 1024 | 1024 | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

### 14.6.1c.4 Test requirements

See 14.1.3.5a for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (3x336).
   - for sub-test 4: TF4 (4x336)
3. At step 18 and for each TFRC test point:

   The UE shall for each radio bearer return the equal number RLC SDUs as sent by the SS in downlink. If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return RLC SDUs where the SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5a.2 sends either 1 SDU or 4 SDUs depending on the transport block size under tests. For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

# 14.6.1d Interactive or background / UL:64 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: QPSK, 16QAM and MIMO

## 14.6.1d.1 Conformance requirement

See 14.6.1.1.

## 14.6.1d.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.1 for the QPSK, 16QAM and MIMO case using the downlink enhanced Layer 2 configuration with Flexible RLC and MAC-ehs .

## 14.6.1d.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-7 IE "HS-DSCH physical layer category extension". This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is configured.

The following parameters are specific for this test case:

| Parameter | Value | Comments |
|---|---|---|
| Radio bearer | TS 34.108, clause 6.10.2.4.5.1 using downlink MAC-d flow parameters according to Alt 3 (Flexible RLC and MAC-ehs). | |
| MIMO N_cqi_typeA/M_cqi ratio | 1/1 | 25.331, 10.3.6.41a |
| Second CPICH pattern | Antenna2 P-CPICH | 25.331, 10.3.6.41b |
| precodingWeight2 | 00 | 25.212, Table 14A |
| MAC-ehs receiver window size | 16 | |
| RLC Transmission window size | See sub-test table | |
| RLC Receiving window size | See sub-test table | |

The generic test procedure in 14.1.3.5a is run for each sub-test for test execution 1 and 2.

| Execution counter | Downlink Modulation Scheme (M1) MIMO data flow#1 | Downlink Modulation Scheme (M2) MIMO data flow#2 | MIMO |
|---|---|---|---|
| 1 | QPSK | QPSK | Yes |
| 2 | 16QAM | 16QAM | Yes |
| 3 | 16QAM | QPSK | Yes |

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Transmission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 15 | 12 | 2047 | 512 | Flexible | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 16 | 12 | 2047 | 512 | | | | | |
| | 17 | 12 | 2047 | 512 | | | | | |
| | 18 | 12 | 2047 | 512 | | | | | |
| 2 | 15 | 12 | 1024 | 1024 | Flexible | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 16 | 12 | 1024 | 1024 | | | | | |
| | 17 | 12 | 1024 | 1024 | | | | | |
| | 18 | 12 | 1024 | 1024 | | | | | |
| 3 | 15 | 16 | 2047 | 1024 | Flexible | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 |
| | 16 | 16 | 2047 | 1024 | | | | | |
| | 17 | 16 | 2047 | 1024 | | | | | |
| | 18 | 16 | 2047 | 1024 | | | | | |
| 4 | 15 | 16 | 1024 | 1024 | Flexible | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 |
| | 16 | 16 | 1024 | 1024 | | | | | |
| | 17 | 16 | 1024 | 1024 | | | | | |
| | 18 | 16 | 1024 | 1024 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

### 14.6.1d.4 Test requirements

See 14.1.3.5a for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (3x336).

- for sub-test 4: TF4 (4x336)

3. At step 18 and for each TFRC test point:

   The UE shall for each radio bearer return the equal number RLC SDUs as sent by the SS in downlink. If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return RLC SDUs where the SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5a.2 sends either 2 SDU or 8 SDUs depending on the transport block size under tests. For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 14.6.2 Interactive or background / UL:384 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.6.2.1 Conformance requirement

See 14.6.1.1.

### 14.6.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.2.

### 14.6.2.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 256 | 336 | UL_TFC1 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 |
| | 2 | 2 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 6 | 512 | 256 | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | |
| | 11 | 3 | 512 | 256 | | | | | |
| | 12 | 6 | 512 | 256 | | | | | |
| 2 | 1 | 2 | 256 | 256 | 656 | UL_TFC2 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 |
| | 2 | 2 | 256 | 256 | | | | | |
| | 3 | 3 | 256 | 256 | | | | | |
| | 4 | 3 | 256 | 256 | | | | | |
| | 5 | 6 | 256 | 256 | | | | | |
| | 6 | 6 | 256 | 256 | | | | | |
| | 7 | 6 | 512 | 512 | | | | | |
| | 8 | 6 | 512 | 512 | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | |
| | 11 | 3 | 256 | 256 | | | | | |
| | 12 | 6 | 256 | 256 | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 |
| | 2 | 8 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 256 | | | | | |
| | 4 | 8 | 512 | 256 | | | | | |
| | 5 | 8 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 256 | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | |
| | 11 | 8 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 256 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | |
| | 11 | 8 | 256 | 256 | | | | | |
| | 12 | 8 | 256 | 256 | | | | | |
| 5 | 1 | 8 | 256 | 256 | 656 | UL_TFC5 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 3832 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | |
| | 11 | 8 | 256 | 256 | | | | | |
| | 12 | 8 | 256 | 256 | | | | | |
| NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.<br>NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI. | | | | | | | | | |

#### 14.6.2.4 Test requirements

See 14.1.3.5.2 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (4x336).
   - for sub-test 4: TF4 (8x336).
   - for sub-test 5: TF5 (12x336).
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 14.6.3 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.6.3.1 Conformance requirement

See 14.6.1.1.

#### 14.6.3.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.3.

#### 14.6.3.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE “HS-DSCH physical layer category” (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (384 kbps, 10 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| UL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| UL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| UL_TFC18 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC30 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC31 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC32 | (TF2, TF1, TF1, TF4, TF1) |
| UL_TFC33 | (TF0, TF0, TF0, TF5, TF1) |
| UL_TFC34 | (TF1, TF0, TF0, TF5, TF1) |
| UL_TFC35 | (TF2, TF1, TF1, TF5, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:384 kbps radio bearer (RB8) has the highest number of transport formats (5 for TTI=10 ms and excluding TF0) then 5 sub-tests has been defined. The selected UL TFCI to achieve test coverage of TF1 to TF5 for RB8 and for the different speech transport formats are: UL_TFC4 for TF1, UL_TFC8 for TF2, UL_TFC11 for TF3, UL_TFC13 for TF4 and UL_TFC17 for TF5.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 256 | 336 | DL_TFC1 | UL_TFC4 | DL_TFC0, | UL_TFC0, UL_TFC1, | RB5: 39 | RB5: 39 |
| | 2 | 2 | 512 | 256 | | | | DL_TFC3, | UL_TFC2, | RB6: 103 | RB6: No data |
| | 3 | 3 | 512 | 256 | | | | UL_TFC0, | UL_TFC3, | RB7: 60 | RB7: No data |
| | 4 | 3 | 512 | 256 | | | | UL_TFC18 | UL_TFC4, | RB8: 312 | RB8: See note 4 |
| | 5 | 6 | 512 | 256 | | | | | UL_TFC18, UL_TFC22 | | |
| | 6 | 6 | 512 | 256 | | | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | | | |
| | 11 | 3 | 512 | 256 | | | | | | | |
| | 12 | 6 | 512 | 256 | | | | | | | |
| 2 | 1 | 2 | 256 | 256 | 656 | DL_TFC2 | UL_TFC8 | DL_TFC0, | UL_TFC0, UL_TFC1, | RB5: 81 | RB5: 81 |
| | 2 | 2 | 256 | 256 | | | | DL_TFC3, | UL_TFC2, | RB6: 103 | RB6: 103 |
| | 3 | 3 | 256 | 256 | | | | UL_TFC0, UL_TFC18 | UL_TFC3, | RB7: 60 | RB7: 60 |
| | 4 | 3 | 256 | 256 | | | | | UL_TFC8, | RB8: 632 | RB8: See note 4 |
| | 5 | 6 | 256 | 256 | | | | | UL_TFC18, UL_TFC26 | | |
| | 6 | 6 | 256 | 256 | | | | | | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 3 | 256 | 256 | | | | | | | |
| | 12 | 6 | 256 | 256 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | DL_TFC2 | UL_TFC11 | DL_TFC0, | UL_TFC0, UL_TFC1, | RB5: 81 | RB5: 81 |
| | 2 | 8 | 512 | 256 | | | | DL_TFC3, | UL_TFC2, | RB6: 103 | RB6: 103 |
| | 3 | 8 | 512 | 256 | | | | UL_TFC0, UL_TFC18 | UL_TFC3, | RB7: 60 | RB7: 60 |
| | 4 | 8 | 512 | 256 | | | | | | RB8: 1272 | RB8: See note 4 |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 10 | 6 | 2047 | 1024 | | | | | UL_TFC11, | | |
| | 11 | 8 | 512 | 256 | | | | | | | |
| | 12 | 8 | 512 | 256 | | | | | UL_TFC18, | | |
| | | | | | | | | | | | |
| | | | | | | | | | UL_TFC29 | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC13 | DL_TFC0, | UL_TFC0, | RB5: 39 | RB5: 39 |
| | 2 | 8 | 256 | 256 | | | | | UL_TFC1, | | |
| | 3 | 8 | 256 | 256 | | | | DL_TFC3, | | RB6: 103 | RB6: No data |
| | 4 | 8 | 256 | 256 | | | | | UL_TFC2, | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | UL_TFC0, | | RB7: 60 | RB7: No data |
| | 7 | 8 | 512 | 512 | | | | UL_TFC18 | UL_TFC3, | | |
| | 8 | 8 | 512 | 512 | | | | | | RB8: 2552 | RB8: See note 4 |
| | 9 | 8 | 1024 | 512 | | | | | UL_TFC13, | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 256 | 256 | | | | | | | |
| | 12 | 8 | 256 | 256 | | | | | UL_TFC18, | | |
| | | | | | | | | | | | |
| | | | | | | | | | UL_TFC31 | | |
| 5 | 1 | 8 | 256 | 256 | 656 | DL_TFC2 | UL_TFC17 | DL_TFC0, | UL_TFC0, | RB5: 81 | RB5: 81 |
| | 2 | 8 | 256 | 256 | | | | | UL_TFC1, | | |
| | 3 | 8 | 256 | 256 | | | | DL_TFC3, | | RB6: 103 | RB6: 103 |
| | 4 | 8 | 256 | 256 | | | | | UL_TFC2, | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | UL_TFC0, | | RB7: 60 | RB7: 60 |
| | 7 | 8 | 512 | 512 | | | | UL_TFC18 | UL_TFC3, | | |
| | 8 | 8 | 512 | 512 | | | | | | RB8: 3832 | RB8: See note 4 |
| | 9 | 8 | 1024 | 512 | | | | | UL_TFC17, | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 256 | 256 | | | | | | | |
| | 12 | 8 | 256 | 256 | | | | | UL_TFC18, | | |
| | | | | | | | | | | | |
| | | | | | | | | | UL_TFC35 | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC18 are part of minimum set of TFCIs.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|

NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 14.6.3.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 14.6.3a Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.6.3a.1 Conformance requirement

See 14.6.1.1.

#### 14.6.3a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.3a for the uplink 64 kbps case.

#### 14.6.3a.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB8) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB8 and for the different speech transport formats are: UL_TFC4 for TF1, UL_TFC8 for TF2, UL_TFC11 for TF3 and UL_TFC13 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 128 | 336 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 2 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 6 | 512 | 256 | | | | | | | |
| | 6 | 6 | 512 | 256 | | | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | | | |
| | 11 | 3 | 1024 | 128 | | | | | | | |
| | 12 | 6 | 1024 | 128 | | | | | | | |
| 2 | 1 | 2 | 256 | 128 | 656 | DL_TFC2 | UL_TFC8 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 2 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 6 | 256 | 256 | | | | | | | |
| | 6 | 6 | 256 | 256 | | | | | | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 3 | 512 | 128 | | | | | | | |
| | 12 | 6 | 512 | 128 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | DL_TFC2 | UL_TFC11 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |

| | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC13 | DL_TFC0, | UL_TFC0, | RB5: 39 | RB5: 39 |
| | 2 | 8 | 256 | 256 | | | | | UL_TFC1, | | |
| | 3 | 8 | 256 | 256 | | | | DL_TFC3, | | RB6: 103 | RB6: No data |
| | 4 | 8 | 256 | 256 | | | | | UL_TFC2, | | |
| | 5 | 8 | 256 | 256 | | | | | | RB7: 60 | RB7: No data |
| | 6 | 8 | 256 | 256 | | | | UL_TFC0, | | | |
| | 7 | 8 | 512 | 512 | | | | UL_TFC15 | UL_TFC3, | | |
| | 8 | 8 | 512 | 512 | | | | | | RB8: 1272 | RB8: See note 4 |
| | 9 | 8 | 1024 | 512 | | | | | UL_TFC13, | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | UL_TFC15, | | |
| | | | | | | | | | | | |
| | | | | | | | | | UL_TFC28 | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 14.6.3a.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 14.6.4 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.6.4.1 Conformance requirement

See 14.6.1.1.

#### 14.6.4.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.4.

#### 14.6.4.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

##### Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps, 20 ms TTI) | RB6 (I/B 384 kbps, 10 ms TTI) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |
| | TF5, bits | N/A | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0) |
| UL_TFC1 | (TF1,TF0,TF0) |
| UL_TFC2 | (TF0,TF1,TF0) |
| UL_TFC3 | (TF1,TF1,TF0) |
| UL_TFC4 | (TF0,TF2,TF0) |
| UL_TFC5 | (TF1,TF2,TF0) |
| UL_TFC6 | (TF0,TF3,TF0) |
| UL_TFC7 | (TF1,TF3,TF0) |
| UL_TFC8 | (TF0,TF4,TF0) |
| UL_TFC9 | (TF1,TF4,TF0) |
| UL_TFC10 | (TF0,TF5,TF0) |
| UL_TFC11 | (TF1,TF5,TF0) |
| UL_TFC12 | (TF0,TF0,TF1) |
| UL_TFC13 | (TF1,TF0,TF1) |
| UL_TFC14 | (TF0,TF1,TF1) |
| UL_TFC15 | (TF1,TF1,TF1) |
| UL_TFC16 | (TF0,TF2,TF1) |
| UL_TFC17 | (TF1,TF2,TF1) |
| UL_TFC18 | (TF0,TF3,TF1) |
| UL_TFC19 | (TF1,TF3,TF1) |
| UL_TFC20 | (TF0,TF4,TF1) |
| UL_TFC21 | (TF1,TF4,TF1) |
| UL_TFC22 | (TF0,TF5,TF1) |
| UL_TFC23 | (TF1,TF5,TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:384 kbps radio bearer (RB6) has the highest number of transport formats (5 for TTI=10 ms and excluding TF0) then 5 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF5 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3, UL_TFC9 for TF4 and UL_TFC11 for TF5.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 256 | 336 | DL_TFC1 | UL_TFC3 | DL_TFC0, | UL_TFC0, | RB5: 640 | RB5: 2x640 |
| | 2 | 2 | 512 | 256 | | | | | UL_TFC1, | | |
| | 3 | 3 | 512 | 256 | | | | DL_TFC2, | | RB6: 312 | RB6: See note 4 |
| | 4 | 3 | 512 | 256 | | | | | UL_TFC2, | | |
| | 5 | 6 | 512 | 256 | | | | UL_TFC0, | | | |
| | 6 | 6 | 512 | 256 | | | | | UL_TFC3, | | |
| | 7 | 6 | 1536 | 512 | | | | UL_TFC12 | | | |
| | 8 | 6 | 1536 | 512 | | | | | UL_TFC12, | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | UL_TFC15 | | |
| | 11 | 3 | 512 | 256 | | | | | | | |
| | 12 | 6 | 512 | 256 | | | | | | | |
| 2 | 1 | 2 | 256 | 256 | 656 | DL_TFC1 | UL_TFC5 | DL_TFC0, | UL_TFC0, | RB5: 640 | RB5: 2x640 |
| | 2 | 2 | 256 | 256 | | | | | UL_TFC1, | | |
| | 3 | 3 | 256 | 256 | | | | DL_TFC2, | | RB6: 632 | RB6: See note 4 |
| | 4 | 3 | 256 | 256 | | | | | UL_TFC2, | | |
| | 5 | 6 | 256 | 256 | | | | UL_TFC0, | | | |
| | 6 | 6 | 256 | 256 | | | | UL_TFC12 | UL_TFC5, | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | UL_TFC12, | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | UL_TFC17 | | |
| | 11 | 3 | 256 | 256 | | | | | | | |
| | 12 | 6 | 256 | 256 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | DL_TFC1 | UL_TFC7 | DL_TFC0, | UL_TFC0, | RB5: 640 | RB5: 2x640 |
| | 2 | 8 | 512 | 256 | | | | | UL_TFC1, | | |
| | 3 | 8 | 512 | 256 | | | | DL_TFC2, | | RB6: 1272 | RB6: See note 4 |
| | 4 | 8 | 512 | 256 | | | | | UL_TFC2, | | |
| | 5 | 8 | 512 | 256 | | | | UL_TFC0, | | | |
| | 6 | 8 | 512 | 256 | | | | UL_TFC12 | UL_TFC7, | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | UL_TFC12, | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | UL_TFC19 | | |
| | 11 | 8 | 512 | 256 | | | | | | | |
| | 12 | 8 | 512 | 256 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC9 | DL_TFC0, | UL_TFC0, | RB5: 640 | RB5: 2x640 |
| | 2 | 8 | 256 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 3 | 8 | 256 | 256 | | | | | UL_TFC1, | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | UL_TFC2, | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | UL_TFC9, | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | UL_TFC12, | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 256 | 256 | | | | | UL_TFC21 | | |
| | 12 | 8 | 256 | 256 | | | | | | | |
| 5 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC11 | DL_TFC0, | UL_TFC0, | RB5: 640 | RB5: 2x640 |
| | 2 | 8 | 256 | 256 | | | | | UL_TFC1, | | |
| | 3 | 8 | 256 | 256 | | | | DL_TFC2, | | RB6: 3832 | RB6: See note 4 |
| | 4 | 8 | 256 | 256 | | | | | UL_TFC2, | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | UL_TFC0, | | | |
| | 7 | 8 | 512 | 512 | | | | UL_TFC12 | UL_TFC11, | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | UL_TFC12, | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 256 | 256 | | | | | UL_TFC23 | | |
| | 12 | 8 | 256 | 256 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC12 are part of minimum set of TFCIs.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 14.6.4.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 14.6.4a Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.6.4a.1 Conformance requirement

See 14.6.1.1.

#### 14.6.4a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.4a.

#### 14.6.4a.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps, 20ms TTI) | RB6 (I/B 64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF2, TF0) |
| UL_TFC5 | (TF1, TF2, TF0) |
| UL_TFC6 | (TF0, TF3, TF0) |
| UL_TFC7 | (TF1, TF3, TF0) |
| UL_TFC8 | (TF0, TF4, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF1, TF1) |
| UL_TFC14 | (TF0, TF2, TF1) |
| UL_TFC15 | (TF1, TF2, TF1) |
| UL_TFC16 | (TF0, TF3, TF1) |
| UL_TFC17 | (TF1, TF3, TF1) |
| UL_TFC18 | (TF0, TF4, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps, 20ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB6) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3 and UL_TFC9 for TF4.

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB6) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3 and UL_TFC9 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 128 | 336 | DL_TFC1 | UL_TFC3 | DL_TFC0, | UL_TFC0, | RB5: 640 | RB5: 2x640 |
| | 2 | 2 | 512 | 128 | | | | | UL_TFC1, | | |
| | 3 | 3 | 512 | 128 | | | | DL_TFC2, | | RB6: 312 | RB6: See note 4 |
| | 4 | 3 | 512 | 128 | | | | | UL_TFC2, | | |
| | 5 | 6 | 512 | 256 | | | | UL_TFC0, | | | |
| | 6 | 6 | 512 | 256 | | | | | UL_TFC3, | | |
| | 7 | 6 | 1536 | 512 | | | | UL_TFC10 | | | |
| | 8 | 6 | 1536 | 512 | | | | | UL_TFC10, | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | UL_TFC13 | | |
| | 11 | 3 | 1024 | 128 | | | | | | | |
| | 12 | 6 | 1024 | 128 | | | | | | | |
| 2 | 1 | 2 | 256 | 128 | 656 | DL_TFC1 | UL_TFC5 | DL_TFC0, | UL_TFC0, | RB5: 640 | RB5: 2x640 |
| | 2 | 2 | 256 | 128 | | | | | UL_TFC1, | | |
| | 3 | 3 | 256 | 128 | | | | DL_TFC2, | | RB6: 632 | RB6: See note 4 |
| | 4 | 3 | 256 | 128 | | | | | UL_TFC2, | | |
| | 5 | 6 | 256 | 256 | | | | UL_TFC0, | | | |
| | 6 | 6 | 256 | 256 | | | | UL_TFC10 | UL_TFC5, | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | UL_TFC10, | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | UL_TFC15 | | |
| | 11 | 3 | 512 | 128 | | | | | | | |
| | 12 | 6 | 512 | 128 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | DL_TFC1 | UL_TFC7 | DL_TFC0, | UL_TFC0, | RB5: 640 | RB5: 2x640 |
| | 2 | 8 | 512 | 256 | | | | | UL_TFC1, | | |
| | 3 | 8 | 512 | 256 | | | | DL_TFC2, | | RB6: 952 | RB6: See note 4 |
| | 4 | 8 | 512 | 256 | | | | | UL_TFC2, | | |
| | 5 | 8 | 512 | 256 | | | | UL_TFC0, | | | |
| | 6 | 8 | 512 | 256 | | | | UL_TFC10 | UL_TFC7, | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | UL_TFC10, | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | UL_TFC17 | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC9 | DL_TFC0, | UL_TFC0, | RB5: 640 | RB5: 2x640 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 4 | 8 | 256 | 256 | | | | DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC10, UL_TFC19 | RB6: 1272 | RB6: See note 4 |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 14.6.4a.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 14.6.5 Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.6.5.1 Conformance requirement

See 14.6.1.1.

#### 14.6.5.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.5.

#### 14.6.5.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | **TFI** | **RB5 + RB6 (64 kbps RAB, 10 ms TTI)** | **DCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x340 | 0x148 |
| | TF1, bits | 1x340 | 1x148 |
| | TF2, bits | 2x340 | N/A |
| | TF3, bits | 4x340 | N/A |
| | TF4, bits | 8x340 | N/A |
| | TF5, bits | 12x340 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the 2 x Interactive Background PS radio bearer. As the 2 x Interactive Background UL:384 kbps radio bearer (RB5+RB6) have 5 transport formats then 5 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF5 for RB5+RB6 are: UL_TFC1 for TF1, UL_TFC2 for TF2, UL_TFC3 for TF3, UL_TFC4 for TF4 and UL_TFC5 for TF5.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 256 | 336 | N/A | UL_TFC1 | UL_TFC0, | UL_TFC0, | RB5: 312 | See note 4 |
| | 2 | 2 | 512 | 256 | | | | | UL_TFC1, | | |
| | 3 | 3 | 512 | 256 | | | | UL_TFC6 | | RB6: 312 | |
| | 4 | 3 | 512 | 256 | | | | | UL_TFC6, | | |
| | 5 | 6 | 512 | 256 | | | | | | | |
| | 6 | 6 | 512 | 256 | | | | | UL_TFC7 | | |
| | 7 | 6 | 1536 | 512 | | | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | | | |
| | 11 | 3 | 512 | 256 | | | | | | | |
| | 12 | 6 | 512 | 256 | | | | | | | |
| 2 | 1 | 2 | 256 | 256 | 656 | N/A | UL_TFC2 | UL_TFC0, | UL_TFC0, | RB5: 632 | See note 4 |
| | 2 | 2 | 256 | 256 | | | | | UL_TFC1, | | |
| | 3 | 3 | 256 | 256 | | | | UL_TFC6 | | RB6: 632 | |
| | 4 | 3 | 256 | 256 | | | | | UL_TFC2, | | |
| | 5 | 6 | 256 | 256 | | | | | | | |
| | 6 | 6 | 256 | 256 | | | | | UL_TFC6, | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | UL_TFC8 | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 3 | 256 | 256 | | | | | | | |
| | 12 | 6 | 256 | 256 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | N/A | UL_TFC3 | UL_TFC0, | UL_TFC0, | RB5: 1272 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | UL_TFC1, | | |
| | 3 | 8 | 512 | 256 | | | | UL_TFC6 | | RB6: 1272 | |
| | 4 | 8 | 512 | 256 | | | | | UL_TFC3, | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | UL_TFC6, | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | UL_TFC9 | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 256 | | | | | | | |
| | 12 | 8 | 512 | 256 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | N/A | UL_TFC4 | UL_TFC0, | UL_TFC0, | RB5: 2552 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 4 | 8 | 256 | 256 | | | | UL_TFC6 | UL_TFC1, | RB6: 2552 | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | UL_TFC4, | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | UL_TFC6, | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 256 | 256 | | | | | | | |
| | 12 | 8 | 256 | 256 | | | | | UL_TFC10 | | |
| 5 | 1 | 8 | 256 | 256 | 656 | N/A | UL_TFC5 | UL_TFC0, | UL_TFC0, | RB5: 3832 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | UL_TFC1, | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | UL_TFC6 | | RB6: 3832 | |
| | 5 | 8 | 256 | 256 | | | | | UL_TFC5, | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | UL_TFC6, | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | UL_TFC11 | | |
| | 11 | 8 | 256 | 256 | | | | | | | |
| | 12 | 8 | 256 | 256 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC6 are part of minimum set of TFCIs.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 14.6.5.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 14.6.5a Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.6.5a.1 Conformance requirement

See 14.6.1.1.

#### 14.6.5a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.5a.

#### 14.6.5a.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 + RB6 (64 kbps RAB, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x340 | 0x148 |
| | TF1, bits | 1x340 | 1x148 |
| | TF2, bits | 2x340 | N/A |
| | TF3, bits | 3x340 | N/A |
| | TF4, bits | 4x340 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the 2 x Interactive Background PS radio bearer. As the 2 x Interactive Background UL:64 kbps radio bearer (RB5+RB6) has 4 transport formats then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB5+RB6 are: UL_TFC1 for TF1, UL_TFC2 for TF2, UL_TFC3 for TF3 and UL_TFC4 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 128 | 336 | N/A | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 RB6: 312 | See note 4 |
| | 2 | 2 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 6 | 512 | 256 | | | | | | | |
| | 6 | 6 | 512 | 256 | | | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | | | |
| | 11 | 3 | 512 | 128 | | | | | | | |
| | 12 | 6 | 512 | 128 | | | | | | | |
| 2 | 1 | 2 | 256 | 128 | 656 | N/A | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 RB6: 632 | See note 4 |
| | 2 | 2 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 6 | 256 | 256 | | | | | | | |
| | 6 | 6 | 256 | 256 | | | | | | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 3 | 1024 | 128 | | | | | | | |
| | 12 | 6 | 1024 | 128 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | N/A | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 RB6: 952 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | N/A | UL_TFC4 | UL_TFC0, | UL_TFC0, | RB5: 1272 | See note 4 |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 2 | 8 | 256 | 256 | | | | | UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 14.6.5a.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 14.6.6 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.6.6.1 Conformance requirement

See 14.6.1.1.

#### 14.6.6.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.6.

#### 14.6.6.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | **TFI** | **RB5 (Streaming 128 kbps, 20ms)** | **RB6 (I/B 128 kbps, 20ms)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x336 | 0x148 |
| | TF1, bits | 1x656 | 1x336 | 1x148 |
| | TF2, bits | 2x656 | 2x336 | N/A |
| | TF3, bits | 4x656 | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF0, TF0) |
| UL_TFC3 | (TF3, TF0, TF0) |
| UL_TFC4 | (TF0, TF1, TF0) |
| UL_TFC5 | (TF1, TF1, TF0) |
| UL_TFC6 | (TF2, TF1, TF0) |
| UL_TFC7 | (TF3, TF1, TF0) |
| UL_TFC8 | (TF0, TF2, TF0) |
| UL_TFC9 | (TF1, TF2, TF0) |
| UL_TFC10 | (TF2, TF2, TF0) |
| UL_TFC11 | (TF3, TF2, TF0) |
| UL_TFC12 | (TF0, TF3, TF0) |
| UL_TFC13 | (TF1, TF3, TF0) |
| UL_TFC14 | (TF2, TF3, TF0) |
| UL_TFC15 | (TF3, TF3, TF0) |
| UL_TFC16 | (TF0, TF4, TF0) |
| UL_TFC17 | (TF1, TF4, TF0) |
| UL_TFC18 | (TF2, TF4, TF0) |
| UL_TFC19 | (TF3, TF4, TF0) |
| UL_TFC20 | (TF0, TF0, TF1) |
| UL_TFC21 | (TF1, TF0, TF1) |
| UL_TFC22 | (TF2, TF0, TF1) |
| UL_TFC23 | (TF3, TF0, TF1) |
| UL_TFC24 | (TF0, TF1, TF1) |
| UL_TFC25 | (TF1, TF1, TF1) |
| UL_TFC26 | (TF2, TF1, TF1) |
| UL_TFC27 | (TF3, TF1, TF1) |
| UL_TFC28 | (TF0, TF2, TF1) |
| UL_TFC29 | (TF1, TF2, TF1) |
| UL_TFC30 | (TF2, TF2, TF1) |
| UL_TFC31 | (TF3, TF2, TF1) |
| UL_TFC32 | (TF0, TF3, TF1) |
| UL_TFC33 | (TF1, TF3, TF1) |
| UL_TFC34 | (TF2, TF3, TF1) |
| UL_TFC35 | (TF3, TF3, TF1) |
| UL_TFC36 | (TF0, TF4, TF1) |
| UL_TFC37 | (TF1, TF4, TF1) |
| UL_TFC38 | (TF2, TF4, TF1) |
| UL_TFC39 | (TF3, TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Streaming + Interactive Background PS radio bearer. The Streaming UL:128 kbps + Interactive Background UL:128 kbps radio bearer (RB5+RB6) have 40 transport format combinations. As the transport formats where RB5, RB6 or DCCH has no data (TF0 for RB5, RB6 or DCCH) is considered as implicitly tested when the transport format combinations with data is tested then no specific sub-tests for those transport format combinations have been specified. The selected UL TFCI to achieve test coverage of TF1 to TF3 for RB5 and TF1 to TF4 for RB6 are: UL_TFC5 to UL_TFC7, UL_TFC9 to UL_TFC11, UL_TFC13 to UL_TFC15 and UL_TFC17 to UL_TFC19.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 128 | 336 | N/A | UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC20, UL_TFC21 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC25 | RB5: 632 RB6: 312 | See note 4 |
| | 2 | 2 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 6 | 512 | 256 | | | | | | | |
| | 6 | 6 | 512 | 256 | | | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | | | |
| | 11 | 3 | 1024 | 128 | | | | | | | |
| | 12 | 6 | 1024 | 128 | | | | | | | |
| 2 | 1 | 2 | 256 | 128 | 656 | N/A | UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC4, UL_TFC20, | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, | RB5: 1272 RB6: 312 | See note 4 |
| | 2 | 2 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 6 | 256 | 256 | | | | | | | |
| | 6 | 6 | 256 | 256 | | | | | | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 11 | 3 | 512 | 128 | | | | UL_TFC6 | UL_TFC6, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC26 | | |
| | 12 | 6 | 512 | 128 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | N/A | UL_TFC7 | UL_TFC0, UL_TFC3, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC7, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC27 | RB5: 2552 RB6: 312 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | N/A | UL_TFC9 | UL_TFC0, | UL_TFC0, | RB5: 632 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 4 | 8 | 256 | 256 | | | | UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC29 | RB6: 632 | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| 5 | 1 | 8 | 512 | 256 | 656 | N/A | UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC20, UL_TFC21 | RB5: 1272 RB6: 632 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | | | | , UL_TFC24 , UL_TFC30 | | |
| 6 | 1 | 8 | 256 | 256 | 656 | N/A | UL_TFC11 | UL_TFC0, UL_TFC3, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC8, UL_TFC11 , UL_TFC20 , UL_TFC21 , UL_TFC24 , UL_TFC31 | RB5: 2552 RB6: 632 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| 7 | 1 | 8 | 512 | 256 | 656 | N/A | UL_TFC13 | UL_TFC0, UL_TFC1, UL_TFC12, | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC12 | RB5: 632 RB6: 1272 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 10 | 6 | 2047 | 1024 | | | | UL_TFC4, UL_TFC20, UL_TFC6 | , UL_TFC13, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC33 | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| 8 | 1 | 8 | 256 | 256 | 656 | N/A | UL_TFC14 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC12, UL_TFC14, UL_TFC20, UL_TFC21, | RB5: 1272 RB6: 1272 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | | | | UL_TFC24, UL_TFC34 | | |
| 9 | 1 | 8 | 512 | 256 | 656 | N/A | UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC12, UL_TFC15, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC35 | RB5: 2552 RB6: 1272 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| 10 | 1 | 8 | 256 | 256 | 656 | N/A | UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC16, UL_TFC4, | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC16, | RB5: 632 RB6: 2552 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 11 | 8 | 512 | 128 | | | | UL_TFC20, UL_TFC6 | UL_TFC17, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC37 | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| 11 | 1 | 8 | 512 | 256 | 656 | N/A | UL_TFC18 | UL_TFC0, UL_TFC8, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC16, UL_TFC18, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC38 | RB5: 1272 RB6: 2552 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 12 | 1 | 8 | 256 | 256 | 656 | N/A | UL_TFC19 | UL_TFC0, UL_TFC3, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC16, UL_TFC19, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC39 | RB5: 2552 RB6: 2552 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC4 and UL_TFC20 are part of minimum set of TFCIs. Also the transport format combinations UL_TFC21 and UL_TFC24 using TF1 on either RB5 or RB6 and TF1 on DCCH has been included in the allowed TFCs as those could happen during the sub-test.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 14.6.6.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 14.6.6a Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: QPSK and 16QAM

#### 14.6.6a.1 Conformance requirement

See 14.6.1.1.

#### 14.6.6a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.6 for the QPSK, 16QAM and non-MIMO case using the downlink enhanced Layer 2 configuration with MAC-ehs and combination of Fixed and Flexible RLC.

#### 14.6.6a.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-7 IE “HS-DSCH physical layer category extension”. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is configured.

The Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB is refered to as RB5. The Interactive or background / UL:128 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs / PS RAB is refered to as RB6.

The following parameters are specific for this test case and RB5 and RB6:

| Parameter | Value |
|---|---|
| Radio bearer | TS 34.108, clause 6.10.2.4.5.6 using downlink MAC-d flow parameters according to Alt 2 (Fixed RLC and MAC-ehs) for RB5 and MAC-d flow parameters according to Alt 3 (Flexible RLC and MAC-ehs) for RB6 |
| MAC-ehs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |
| RB6: Max_RLC_PDU_size [octets] | 300 |

The generic test procedure in 14.1.3.5a is run for each sub-test for test execution 1 and 2.

| Execution counter | Downlink Modulation Scheme (M) | MIMO |
|---|---|---|
| 1 | QPSK | No |
| 2 | 16QAM | No |

Uplink TFS:

| | TFI | RB5 (Streaming 128 kbps, 20ms) | RB6 (I/B 128 kbps, 20ms) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x336 | 0x148 |
| | TF1, bits | 1x656 | 1x336 | 1x148 |
| | TF2, bits | 2x656 | 2x336 | N/A |
| | TF3, bits | 4x656 | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF0, TF0) |
| UL_TFC3 | (TF3, TF0, TF0) |
| UL_TFC4 | (TF0, TF1, TF0) |
| UL_TFC5 | (TF1, TF1, TF0) |
| UL_TFC6 | (TF2, TF1, TF0) |
| UL_TFC7 | (TF3, TF1, TF0) |
| UL_TFC8 | (TF0, TF2, TF0) |
| UL_TFC9 | (TF1, TF2, TF0) |
| UL_TFC10 | (TF2, TF2, TF0) |
| UL_TFC11 | (TF3, TF2, TF0) |
| UL_TFC12 | (TF0, TF3, TF0) |
| UL_TFC13 | (TF1, TF3, TF0) |
| UL_TFC14 | (TF2, TF3, TF0) |
| UL_TFC15 | (TF3, TF3, TF0) |
| UL_TFC16 | (TF0, TF4, TF0) |
| UL_TFC17 | (TF1, TF4, TF0) |
| UL_TFC18 | (TF2, TF4, TF0) |
| UL_TFC19 | (TF3, TF4, TF0) |
| UL_TFC20 | (TF0, TF0, TF1) |
| UL_TFC21 | (TF1, TF0, TF1) |
| UL_TFC22 | (TF2, TF0, TF1) |
| UL_TFC23 | (TF3, TF0, TF1) |
| UL_TFC24 | (TF0, TF1, TF1) |
| UL_TFC25 | (TF1, TF1, TF1) |
| UL_TFC26 | (TF2, TF1, TF1) |
| UL_TFC27 | (TF3, TF1, TF1) |
| UL_TFC28 | (TF0, TF2, TF1) |
| UL_TFC29 | (TF1, TF2, TF1) |
| UL_TFC30 | (TF2, TF2, TF1) |
| UL_TFC31 | (TF3, TF2, TF1) |
| UL_TFC32 | (TF0, TF3, TF1) |
| UL_TFC33 | (TF1, TF3, TF1) |
| UL_TFC34 | (TF2, TF3, TF1) |
| UL_TFC35 | (TF3, TF3, TF1) |
| UL_TFC36 | (TF0, TF4, TF1) |
| UL_TFC37 | (TF1, TF4, TF1) |
| UL_TFC38 | (TF2, TF4, TF1) |
| UL_TFC39 | (TF3, TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Streaming + Interactive Background PS radio bearer. The Streaming UL:128 kbps + Interactive Background UL:128 kbps radio bearer (RB5+RB6) have 40 transport format combinations. As the transport formats where RB5, RB6 or DCCH has no data (TF0 for RB5, RB6 or DCCH) is considered as implicitly tested when the transport format combinations with data is tested then no specific sub-tests for those transport format combinations have been specified. The selected UL TFCI to achieve test coverage of TF1 to TF3 for RB5 and TF1 to TF4 for RB6 are: UL_TFC5 to UL_TFC7, UL_TFC9 to UL_TFC11, UL_TFC13 to UL_TFC15 and UL_TFC17 to UL_TFC19.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 128 | RB5:336 RB6: Flexible | N/A | UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC20, UL_TFC21 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC25 | RB5: 632 RB6: 312 | See note 4 |
| | 2 | 2 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 6 | 512 | 256 | | | | | | | |
| | 6 | 6 | 512 | 256 | | | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | | | |
| | 11 | 3 | 1024 | 128 | | | | | | | |
| | 12 | 6 | 1024 | 128 | | | | | | | |
| | 13 | 6 | 2047 | 512 | | | | | | | |
| | 14 | 6 | 2047 | 512 | | | | | | | |
| | 15 | 6 | 2047 | 512 | | | | | | | |
| | 16 | 6 | 2047 | 512 | | | | | | | |
| | 17 | 6 | 2047 | 512 | | | | | | | |
| | 18 | 6 | 2047 | 512 | | | | | | | |
| 2 | 1 | 2 | 256 | 128 | RB5: 656 RB6: Flexible | N/A | UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC26 | RB5: 1272 RB6: 312 | See note 4 |
| | 2 | 2 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 6 | 256 | 256 | | | | | | | |
| | 6 | 6 | 256 | 256 | | | | | | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 3 | 512 | 128 | | | | | | | |
| | 12 | 6 | 512 | 128 | | | | | | | |
| | 13 | 6 | 1024 | 1024 | | | | | | | |
| | 14 | 6 | 1024 | 1024 | | | | | | | |
| | 15 | 6 | 1024 | 1024 | | | | | | | |
| | 16 | 6 | 1024 | 1024 | | | | | | | |
| | 17 | 6 | 1024 | 1024 | | | | | | | |
| | 18 | 6 | 1024 | 1024 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 3 | 1 | 8 | 512 | 256 | RB5:336 RB6: Flexible | N/A | UL_TFC7 | UL_TFC0, UL_TFC3, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC7, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC27 | RB5: 2552 RB6: 312 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 8 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| | 13 | 8 | 2047 | 1024 | | | | | | | |
| | 14 | 8 | 2047 | 1024 | | | | | | | |
| | 15 | 8 | 2047 | 1024 | | | | | | | |
| | 16 | 8 | 2047 | 1024 | | | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | RB5: 656 RB6: Flexible | N/A | UL_TFC9 | UL_TFC0, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC29 | RB5: 632 RB6: 632 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 8 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| | 13 | 8 | 1024 | 1024 | | | | | | | |
| | 14 | 8 | 1024 | 1024 | | | | | | | |
| | 15 | 8 | 1024 | 1024 | | | | | | | |
| | 16 | 8 | 1024 | 1024 | | | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | | | |
| 5 | 1 | 8 | 512 | 256 | RB5: 656 RB6: Flexible | N/A | UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC20, UL_TFC21, UL_TFC24, | RB5: 1272 RB6: 632 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 10 | 8 | 2047 | 1024 | | | | | UL_TFC30 | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| | 13 | 8 | 2047 | 1024 | | | | | | | |
| | 14 | 8 | 2047 | 1024 | | | | | | | |
| | 15 | 8 | 2047 | 1024 | | | | | | | |
| | 16 | 8 | 2047 | 1024 | | | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | | | |
| 6 | 1 | 8 | 256 | 256 | RB5: 656 RB6: Flexible | N/A | UL_TFC11 | UL_TFC0, UL_TFC3, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC8, UL_TFC11, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC31 | RB5: 2552 RB6: 632 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 8 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| | 13 | 8 | 1024 | 1024 | | | | | | | |
| | 14 | 8 | 1024 | 1024 | | | | | | | |
| | 15 | 8 | 1024 | 1024 | | | | | | | |
| | 16 | 8 | 1024 | 1024 | | | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | | | |
| 7 | 1 | 8 | 512 | 256 | RB5: 656 RB6: Flexible | N/A | UL_TFC13 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC12, UL_TFC13, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC33 | RB5: 632 RB6: 1272 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 8 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| | 13 | 8 | 2047 | 1024 | | | | | | | |
| | 14 | 8 | 2047 | 1024 | | | | | | | |
| | 15 | 8 | 2047 | 1024 | | | | | | | |
| | 16 | 8 | 2047 | 1024 | | | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 8 | 1 | 8 | 256 | 256 | RB5: 656 RB6: Flexible | N/A | UL_TFC14 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC12, UL_TFC14, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC34 | RB5: 1272 RB6: 1272 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 8 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| | 13 | 8 | 1024 | 1024 | | | | | | | |
| | 14 | 8 | 1024 | 1024 | | | | | | | |
| | 15 | 8 | 1024 | 1024 | | | | | | | |
| | 16 | 8 | 1024 | 1024 | | | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | | | |
| 9 | 1 | 8 | 512 | 256 | RB5: 656 RB6: Flexible | N/A | UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC12, UL_TFC15, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC35 | RB5: 2552 RB6: 1272 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 8 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| | 13 | 8 | 2047 | 1024 | | | | | | | |
| | 14 | 8 | 2047 | 1024 | | | | | | | |
| | 15 | 8 | 2047 | 1024 | | | | | | | |
| | 16 | 8 | 2047 | 1024 | | | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | | | |
| 10 | 1 | 8 | 256 | 256 | RB5: 656 RB6: Flexible | N/A | UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC16, UL_TFC17, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC37 | RB5: 632 RB6: 2552 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 10 | 8 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| | 13 | 8 | 1024 | 1024 | | | | | | | |
| | 14 | 8 | 1024 | 1024 | | | | | | | |
| | 15 | 8 | 1024 | 1024 | | | | | | | |
| | 16 | 8 | 1024 | 1024 | | | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | | | |
| 11 | 1 | 8 | 512 | 256 | RB5: 656 RB6: Flexible | N/A | UL_TFC18 | UL_TFC0, UL_TFC8, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC16, UL_TFC18, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC38 | RB5: 1272 RB6: 2552 | See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 8 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| | 13 | 8 | 2047 | 1024 | | | | | | | |
| | 14 | 8 | 2047 | 1024 | | | | | | | |
| | 15 | 8 | 2047 | 1024 | | | | | | | |
| | 16 | 8 | 2047 | 1024 | | | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | | | |
| 12 | 1 | 8 | 256 | 256 | RB5: 656 RB6: Flexible | N/A | UL_TFC19 | UL_TFC0, UL_TFC3, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC16, UL_TFC19, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC39 | RB5: 2552 RB6: 2552 | See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 8 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| | 13 | 8 | 1024 | 1024 | | | | | | | |
| | 14 | 8 | 1024 | 1024 | | | | | | | |
| | 15 | 8 | 1024 | 1024 | | | | | | | |
| | 16 | 8 | 1024 | 1024 | | | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test. | | | | | | | | | | | |
| NOTE 2: UL_TFC0, UL_TFC1, UL_TFC4 and UL_TFC20 are part of minimum set of TFCIs. Also the transport format combinations UL_TFC21 and UL_TFC24 using TF1 on either RB5 or RB6 and TF1 on DCCH has been included in the allowed TFCs as those could happen during the sub-test. | | | | | | | | | | | |
| NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI. | | | | | | | | | | | |
| NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5a. | | | | | | | | | | | |

#### 14.6.6a.4 Test requirements

See 14.1.3.5a for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 18 and for each TFRC test point:

   The UE shall for each radio bearer return the equal number RLC SDUs as sent by the SS in downlink. If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return RLC SDUs where the SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5a.2 sends either 1 SDU or 4 SDUs depending on the transport block size under tests. For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 14.6.6b Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: 64QAM

#### 14.6.6b.1 Conformance requirement

See 14.6.1.1.

#### 14.6.6b.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.6 for the QPSK, 16QAM and non-MIMO case using the downlink enhanced Layer 2 configuration with MAC-ehs and combination of Fixed and Flexible RLC.

#### 14.6.6b.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-7 IE “HS-DSCH physical layer category extension”. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is configured.

The Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB is refered to as RB5. The Interactive or background / UL:128 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs / PS RAB is refered to as RB6.

The following parameters are specific for this test case and RB5 and RB6:

| Parameter | Value |
|---|---|
| Radio bearer | TS 34.108, clause 6.10.2.4.5.6 using downlink MAC-d flow parameters according to Alt 2 (Fixed RLC and MAC-ehs) for RB5 and MAC-d flow parameters according to Alt 3 (Flexible RLC and MAC-ehs) for RB6 |
| MAC-ehs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |
| RB6: Max_RLC_PDU_size [octets] | 300 |

The generic test procedure in 14.1.3.5a is run for each sub-test with M=64QAM and non-MIMO case.

Uplink TFS:

| | TFI | RB5 (Streaming 128 kbps, 20ms) | RB6 (I/B 128 kbps, 20ms) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x336 | 0x148 |
| | TF1, bits | 1x656 | 1x336 | 1x148 |
| | TF2, bits | 2x656 | 2x336 | N/A |
| | TF3, bits | 4x656 | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF0, TF0) |
| UL_TFC3 | (TF3, TF0, TF0) |
| UL_TFC4 | (TF0, TF1, TF0) |
| UL_TFC5 | (TF1, TF1, TF0) |
| UL_TFC6 | (TF2, TF1, TF0) |
| UL_TFC7 | (TF3, TF1, TF0) |
| UL_TFC8 | (TF0, TF2, TF0) |
| UL_TFC9 | (TF1, TF2, TF0) |
| UL_TFC10 | (TF2, TF2, TF0) |
| UL_TFC11 | (TF3, TF2, TF0) |
| UL_TFC12 | (TF0, TF3, TF0) |
| UL_TFC13 | (TF1, TF3, TF0) |
| UL_TFC14 | (TF2, TF3, TF0) |
| UL_TFC15 | (TF3, TF3, TF0) |
| UL_TFC16 | (TF0, TF4, TF0) |
| UL_TFC17 | (TF1, TF4, TF0) |
| UL_TFC18 | (TF2, TF4, TF0) |
| UL_TFC19 | (TF3, TF4, TF0) |
| UL_TFC20 | (TF0, TF0, TF1) |
| UL_TFC21 | (TF1, TF0, TF1) |
| UL_TFC22 | (TF2, TF0, TF1) |
| UL_TFC23 | (TF3, TF0, TF1) |
| UL_TFC24 | (TF0, TF1, TF1) |
| UL_TFC25 | (TF1, TF1, TF1) |
| UL_TFC26 | (TF2, TF1, TF1) |
| UL_TFC27 | (TF3, TF1, TF1) |
| UL_TFC28 | (TF0, TF2, TF1) |
| UL_TFC29 | (TF1, TF2, TF1) |
| UL_TFC30 | (TF2, TF2, TF1) |
| UL_TFC31 | (TF3, TF2, TF1) |
| UL_TFC32 | (TF0, TF3, TF1) |
| UL_TFC33 | (TF1, TF3, TF1) |
| UL_TFC34 | (TF2, TF3, TF1) |
| UL_TFC35 | (TF3, TF3, TF1) |
| UL_TFC36 | (TF0, TF4, TF1) |
| UL_TFC37 | (TF1, TF4, TF1) |
| UL_TFC38 | (TF2, TF4, TF1) |
| UL_TFC39 | (TF3, TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Streaming + Interactive Background PS radio bearer. The Streaming UL:128 kbps + Interactive Background UL:128 kbps radio bearer (RB5+RB6) have 40 transport format combinations. As the transport formats where RB5, RB6 or DCCH has no data (TF0 for RB5, RB6 or DCCH) is considered as implicitly tested when the transport format combinations with data is tested then no specific sub-tests for those transport format combinations have been specified. The selected UL TFCI to achieve test coverage of TF1 to TF3 for RB5 and TF1 to TF4 for RB6 are: UL_TFC5 to UL_TFC7, UL_TFC9 to UL_TFC11, UL_TFC13 to UL_TFC15 and UL_TFC17 to UL_TFC19.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 13 | 6 | 2047 | 512 | RB5:336 RB6: Flexible | N/A | UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC20, UL_TFC21 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC25 | RB5: 632 RB6: 312 | See note 4 |
| | 14 | 6 | 2047 | 512 | | | | | | | |
| | 17 | 6 | 2047 | 512 | | | | | | | |
| | 18 | 6 | 2047 | 512 | | | | | | | |
| 2 | 13 | 6 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC26 | RB5: 1272 RB6: 312 | See note 4 |
| | 14 | 6 | 1024 | 1024 | | | | | | | |
| | 17 | 6 | 1024 | 1024 | | | | | | | |
| | 18 | 6 | 1024 | 1024 | | | | | | | |
| 3 | 13 | 8 | 2047 | 1024 | RB5:336 RB6: Flexible | N/A | UL_TFC7 | UL_TFC0, UL_TFC3, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC7, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC27 | RB5: 2552 RB6: 312 | See note 4 |
| | 14 | 8 | 2047 | 1024 | | | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | | | |
| 4 | 13 | 8 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC9 | UL_TFC0, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC29 | RB5: 632 RB6: 632 | See note 4 |
| | 14 | 8 | 1024 | 1024 | | | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | | | |
| 5 | 13 | 8 | 2047 | 1024 | RB5: 656 | N/A | UL_TFC10 | UL_TFC0, | UL_TFC0, | RB5: 1272 | See note 4 |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 14 | 8 | 2047 | 1024 | RB6: Flexible | | | UL_TFC2, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC30 | RB6: 632 | |
| | 17 | 8 | 2047 | 1024 | | | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | | | |
| 6 | 13 | 8 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC11 | UL_TFC0, UL_TFC3, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC8, UL_TFC11, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC31 | RB5: 2552 RB6: 632 | See note 4 |
| | 14 | 8 | 1024 | 1024 | | | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | | | |
| 7 | 13 | 8 | 2047 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC13 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC12, UL_TFC13, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC33 | RB5: 632 RB6: 1272 | See note 4 |
| | 14 | 8 | 2047 | 1024 | | | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | | | |
| 8 | 13 | 8 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC14 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC12, UL_TFC14, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC34 | RB5: 1272 RB6: 1272 | See note 4 |
| | 14 | 8 | 1024 | 1024 | | | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | | | |
| 9 | 13 | 8 | 2047 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC12, UL_TFC15, UL_TFC20, UL_TFC21, UL_TFC24, | RB5: 2552 RB6: 1272 | See note 4 |
| | 14 | 8 | 2047 | 1024 | | | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | | | | UL_TFC35 | | |
| 10 | 13 | 8 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC16, UL_TFC17, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC37 | RB5: 632 RB6: 2552 | See note 4 |
| | 14 | 8 | 1024 | 1024 | | | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | | | |
| 11 | 13 | 8 | 2047 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC18 | UL_TFC0, UL_TFC8, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC16, UL_TFC18, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC38 | RB5: 1272 RB6: 2552 | See note 4 |
| | 14 | 8 | 2047 | 1024 | | | | | | | |
| | 17 | 8 | 2047 | 1024 | | | | | | | |
| | 18 | 8 | 2047 | 1024 | | | | | | | |
| 12 | 13 | 8 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC19 | UL_TFC0, UL_TFC3, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC16, UL_TFC19, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC39 | RB5: 2552 RB6: 2552 | See note 4 |
| | 14 | 8 | 1024 | 1024 | | | | | | | |
| | 17 | 8 | 1024 | 1024 | | | | | | | |
| | 18 | 8 | 1024 | 1024 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC4 and UL_TFC20 are part of minimum set of TFCIs. Also the transport format combinations UL_TFC21 and UL_TFC24 using TF1 on either RB5 or RB6 and TF1 on DCCH has been included in the allowed TFCs as those could happen during the sub-test.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5a.

#### 14.6.6b.4 Test requirements

See 14.1.3.5a for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   The UE shall for each radio bearer return the equal number RLC SDUs as sent by the SS in downlink. If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return RLC SDUs where the SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5a.2 sends either 1 SDU or 4 SDUs depending on the transport block size under tests. For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 14.6.6c Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / DL: QPSK, 16QAM and MIMO

#### 14.6.6c.1 Conformance requirement

See 14.6.1.1.

#### 14.6.6c.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.6 for the QPSK, 16QAM and MIMO case using the downlink enhanced Layer 2 configuration with MAC-ehs and combination of Fixed and Flexible RLC.

#### 14.6.6c.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-7 IE “HS-DSCH physical layer category extension”. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is configured.

The Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB is refered to as RB5. The Interactive or background / UL:128 DL: [max bit rate depending on UE category] with Flexible RLC and MAC-ehs / PS RAB is refered to as RB6.

The following parameters are specific for this test case and RB5 and RB6:

| Parameter | Value | Comments |
|---|---|---|
| Radio bearer | TS 34.108, clause 6.10.2.4.5.6 using downlink MAC-d flow parameters according to Alt 2 (Fixed RLC and MAC-ehs) for RB5 and MAC-d flow parameters according to Alt 3 (Flexible RLC and MAC-ehs) for RB6 | |
| MAC-ehs receiver window size | 16 | |
| MIMO N_cqi_typeA/M_cqi ratio | 1/1 | 25.331, 10.3.6.41a |
| Second CPICH pattern | Antenna2 P-CPICH | 25.331, 10.3.6.41b |
| precodingWeight2 | 00 | 25.212, Table 14A |
| RLC Transmission window size | See sub-test table | |
| RLC Receiving window size | See sub-test table | |
| RB6: Max_RLC_PDU_size [octets] | 300 | |

The generic test procedure in 14.1.3.5a is run for each sub-test for test execution 1 and 2.

| Execution counter | Downlink Modulation Scheme (M1) MIMO data flow#1 | Downlink Modulation Scheme (M2) MIMO data flow#2 | MIMO |
|---|---|---|---|
| 1 | QPSK | QPSK | Yes |
| 2 | 16QAM | 16QAM | Yes |
| 3 | 16QAM | QPSK | Yes |

Uplink TFS:

| | TFI | RB5 (Streaming 128 kbps, 20ms) | RB6 (I/B 128 kbps, 20ms) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x336 | 0x148 |
| | TF1, bits | 1x656 | 1x336 | 1x148 |
| | TF2, bits | 2x656 | 2x336 | N/A |
| | TF3, bits | 4x656 | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF0, TF0) |
| UL_TFC3 | (TF3, TF0, TF0) |
| UL_TFC4 | (TF0, TF1, TF0) |
| UL_TFC5 | (TF1, TF1, TF0) |
| UL_TFC6 | (TF2, TF1, TF0) |
| UL_TFC7 | (TF3, TF1, TF0) |
| UL_TFC8 | (TF0, TF2, TF0) |
| UL_TFC9 | (TF1, TF2, TF0) |
| UL_TFC10 | (TF2, TF2, TF0) |
| UL_TFC11 | (TF3, TF2, TF0) |
| UL_TFC12 | (TF0, TF3, TF0) |
| UL_TFC13 | (TF1, TF3, TF0) |
| UL_TFC14 | (TF2, TF3, TF0) |
| UL_TFC15 | (TF3, TF3, TF0) |
| UL_TFC16 | (TF0, TF4, TF0) |
| UL_TFC17 | (TF1, TF4, TF0) |
| UL_TFC18 | (TF2, TF4, TF0) |
| UL_TFC19 | (TF3, TF4, TF0) |
| UL_TFC20 | (TF0, TF0, TF1) |
| UL_TFC21 | (TF1, TF0, TF1) |
| UL_TFC22 | (TF2, TF0, TF1) |
| UL_TFC23 | (TF3, TF0, TF1) |
| UL_TFC24 | (TF0, TF1, TF1) |
| UL_TFC25 | (TF1, TF1, TF1) |
| UL_TFC26 | (TF2, TF1, TF1) |
| UL_TFC27 | (TF3, TF1, TF1) |
| UL_TFC28 | (TF0, TF2, TF1) |
| UL_TFC29 | (TF1, TF2, TF1) |
| UL_TFC30 | (TF2, TF2, TF1) |
| UL_TFC31 | (TF3, TF2, TF1) |
| UL_TFC32 | (TF0, TF3, TF1) |
| UL_TFC33 | (TF1, TF3, TF1) |
| UL_TFC34 | (TF2, TF3, TF1) |
| UL_TFC35 | (TF3, TF3, TF1) |
| UL_TFC36 | (TF0, TF4, TF1) |
| UL_TFC37 | (TF1, TF4, TF1) |
| UL_TFC38 | (TF2, TF4, TF1) |
| UL_TFC39 | (TF3, TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Streaming + Interactive Background PS radio bearer. The Streaming UL:128 kbps + Interactive Background UL:128 kbps radio bearer (RB5+RB6) have 40 transport format combinations. As the transport formats where RB5, RB6 or DCCH has no data (TF0 for RB5, RB6 or DCCH) is considered as implicitly tested when the transport format combinations with data is tested then no specific sub-tests for those transport format combinations have been specified. The selected UL TFCI to achieve test coverage of TF1 to TF3 for RB5 and TF1 to TF4 for RB6 are: UL_TFC5 to UL_TFC7, UL_TFC9 to UL_TFC11, UL_TFC13 to UL_TFC15 and UL_TFC17 to UL_TFC19.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 15 | 12 | 2047 | 512 | RB5:336 RB6: Flexible | N/A | UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC20, UL_TFC21 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC25 | RB5: 632 RB6: 312 | See note 4 |
| | 16 | 12 | 2047 | 512 | | | | | | | |
| | 17 | 12 | 2047 | 512 | | | | | | | |
| | 18 | 12 | 2047 | 512 | | | | | | | |
| 2 | 15 | 12 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC26 | RB5: 1272 RB6: 312 | See note 4 |
| | 16 | 12 | 1024 | 1024 | | | | | | | |
| | 17 | 12 | 1024 | 1024 | | | | | | | |
| | 18 | 12 | 1024 | 1024 | | | | | | | |
| 3 | 15 | 16 | 2047 | 1024 | RB5:336 RB6: Flexible | N/A | UL_TFC7 | UL_TFC0, UL_TFC3, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC7, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC27 | RB5: 2552 RB6: 312 | See note 4 |
| | 16 | 16 | 2047 | 1024 | | | | | | | |
| | 17 | 16 | 2047 | 1024 | | | | | | | |
| | 18 | 16 | 2047 | 1024 | | | | | | | |
| 4 | 15 | 16 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC9 | UL_TFC0, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC29 | RB5: 632 RB6: 632 | See note 4 |
| | 16 | 16 | 1024 | 1024 | | | | | | | |
| | 17 | 16 | 1024 | 1024 | | | | | | | |
| | 18 | 16 | 1024 | 1024 | | | | | | | |
| 5 | 15 | 16 | 2047 | 1024 | RB5: 656 | N/A | UL_TFC10 | UL_TFC0, | UL_TFC0, | RB5: 1272 | See note 4 |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 16 | 16 | 2047 | 1024 | RB6: Flexible | | | UL_TFC2, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC30 | RB6: 632 | |
| | 17 | 16 | 2047 | 1024 | | | | | | | |
| | 18 | 16 | 2047 | 1024 | | | | | | | |
| 6 | 15 | 16 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC11 | UL_TFC0, UL_TFC3, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC8, UL_TFC11, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC31 | RB5: 2552 RB6: 632 | See note 4 |
| | 16 | 16 | 1024 | 1024 | | | | | | | |
| | 17 | 16 | 1024 | 1024 | | | | | | | |
| | 18 | 16 | 1024 | 1024 | | | | | | | |
| 7 | 15 | 16 | 2047 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC13 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC12, UL_TFC13, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC33 | RB5: 632 RB6: 1272 | See note 4 |
| | 16 | 16 | 2047 | 1024 | | | | | | | |
| | 17 | 16 | 2047 | 1024 | | | | | | | |
| | 18 | 16 | 2047 | 1024 | | | | | | | |
| 8 | 15 | 16 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC14 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC12, UL_TFC14, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC34 | RB5: 1272 RB6: 1272 | See note 4 |
| | 16 | 16 | 1024 | 1024 | | | | | | | |
| | 17 | 16 | 1024 | 1024 | | | | | | | |
| | 18 | 16 | 1024 | 1024 | | | | | | | |
| 9 | 15 | 16 | 2047 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC12, UL_TFC15, UL_TFC20, UL_TFC21, UL_TFC24, | RB5: 2552 RB6: 1272 | See note 4 |
| | 16 | 16 | 2047 | 1024 | | | | | | | |
| | 17 | 16 | 2047 | 1024 | | | | | | | |
| | 18 | 16 | 2047 | 1024 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | | | | UL_TFC35 | | |
| 10 | 15 | 16 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC16, UL_TFC17, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC37 | RB5: 632 RB6: 2552 | See note 4 |
| | 16 | 16 | 1024 | 1024 | | | | | | | |
| | 17 | 16 | 1024 | 1024 | | | | | | | |
| | 18 | 16 | 1024 | 1024 | | | | | | | |
| 11 | 15 | 16 | 2047 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC18 | UL_TFC0, UL_TFC8, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC16, UL_TFC18, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC38 | RB5: 1272 RB6: 2552 | See note 4 |
| | 16 | 16 | 2047 | 1024 | | | | | | | |
| | 17 | 16 | 2047 | 1024 | | | | | | | |
| | 18 | 16 | 2047 | 1024 | | | | | | | |
| 12 | 15 | 16 | 1024 | 1024 | RB5: 656 RB6: Flexible | N/A | UL_TFC19 | UL_TFC0, UL_TFC3, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC16, UL_TFC19, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC39 | RB5: 2552 RB6: 2552 | See note 4 |
| | 16 | 16 | 1024 | 1024 | | | | | | | |
| | 17 | 16 | 1024 | 1024 | | | | | | | |
| | 18 | 16 | 1024 | 1024 | | | | | | | |

1. NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
2. NOTE 2: UL_TFC0, UL_TFC1, UL_TFC4 and UL_TFC20 are part of minimum set of TFCIs. Also the transport format combinations UL_TFC21 and UL_TFC24 using TF1 on either RB5 or RB6 and TF1 on DCCH has been included in the allowed TFCs as those could happen during the sub-test.
3. NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
   RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
4. NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5a.

#### 14.6.6c.4 Test requirements

See 14.1.3.5a for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   The UE shall for each radio bearer return the equal number RLC SDUs as sent by the SS in downlink. If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return RLC SDUs where the SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5a.2 sends either 2 SDU or 8 SDUs depending on the transport block size under tests. For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 14.6.7 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 14.6.7.1 Conformance requirement

See 14.6.1.1.

#### 14.6.7.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.7.

#### 14.6.7.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE “HS-DSCH physical layer category” (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (Streaming 128 kbps, 20ms) | RB9 (I/B 128 kbps, 20ms) | DCCH |
|---|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x656 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x656 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x656 | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x656 | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6 + RB7 + RB8 + RB9, DCCH) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0,TF0,TF0,TF0) |
| UL_TFC1 | (TF1,TF0,TF0,TF0,TF0,TF0) |
| UL_TFC2 | (TF2,TF1,TF1,TF0,TF0,TF0) |
| UL_TFC3 | (TF0,TF0,TF0,TF1,TF0,TF0) |
| UL_TFC4 | (TF0,TF0,TF0,TF0,TF1,TF0) |
| UL_TFC5 | (TF0,TF0,TF0,TF2,TF1,TF0) |
| UL_TFC6 | (TF1,TF0,TF0,TF2,TF1,TF0) |
| UL_TFC7 | (TF2,TF1,TF1,TF2,TF1,TF0) |
| UL_TFC8 | (TF0,TF0,TF0,TF3,TF1,TF0) |
| UL_TFC9 | (TF1,TF0,TF0,TF3,TF1,TF0) |
| UL_TFC10 | (TF2,TF1,TF1,TF3,TF1,TF0) |
| UL_TFC11 | (TF0,TF0,TF0,TF2,TF2,TF0) |
| UL_TFC12 | (TF1,TF0,TF0,TF2,TF2,TF0) |
| UL_TFC13 | (TF2,TF1,TF1,TF2,TF2,TF0) |
| UL_TFC14 | (TF0,TF0,TF0,TF3,TF2,TF0) |
| UL_TFC15 | (TF1,TF0,TF0,TF3,TF2,TF0) |
| UL_TFC16 | (TF2,TF1,TF1,TF3,TF2,TF0) |
| UL_TFC17 | (TF0,TF0,TF0,TF1,TF3,TF0) |
| UL_TFC18 | (TF1,TF0,TF0,TF1,TF3,TF0) |
| UL_TFC19 | (TF2,TF1,TF1,TF1,TF3,TF0) |
| UL_TFC20 | (TF0,TF0,TF0,TF2,TF3,TF0) |
| UL_TFC21 | (TF1,TF0,TF0,TF2,TF3,TF0) |
| UL_TFC22 | (TF2,TF1,TF1,TF2,TF3,TF0) |
| UL_TFC23 | (TF0,TF0,TF0,TF3,TF3,TF0) |
| UL_TFC24 | (TF1,TF0,TF0,TF3,TF3,TF0) |
| UL_TFC25 | (TF2,TF1,TF1,TF3,TF3,TF0) |
| UL_TFC26 | (TF0,TF0,TF0,TF2,TF4,TF0) |
| UL_TFC27 | (TF1,TF0,TF0,TF2,TF4,TF0) |
| UL_TFC28 | (TF2,TF1,TF1,TF2,TF4,TF0) |
| UL_TFC29 | (TF0,TF0,TF0,TF3,TF4,TF0) |
| UL_TFC30 | (TF1,TF0,TF0,TF3,TF4,TF0) |
| UL_TFC31 | (TF2,TF1,TF1,TF3,TF4,TF0) |
| UL_TFC32 | (TF0,TF0,TF0,TF0,TF0,TF1) |
| UL_TFC33 | (TF1,TF0,TF0,TF0,TF0,TF1) |
| UL_TFC34 | (TF2,TF1,TF1,TF0,TF0,TF1) |
| UL_TFC35 | (TF0,TF0,TF0,TF2,TF1,TF1) |
| UL_TFC36 | (TF1,TF0,TF0,TF2,TF1,TF1) |
| UL_TFC37 | (TF2,TF1,TF1,TF2,TF1,TF1) |
| UL_TFC38 | (TF0,TF0,TF0,TF3,TF1,TF1) |
| UL_TFC39 | (TF1,TF0,TF0,TF3,TF1,TF1) |
| UL_TFC40 | (TF2,TF1,TF1,TF3,TF1,TF1) |
| UL_TFC41 | (TF0,TF0,TF0,TF2,TF2,TF1) |
| UL_TFC42 | (TF1,TF0,TF0,TF2,TF2,TF1) |
| UL_TFC43 | (TF2,TF1,TF1,TF2,TF2,TF1) |
| UL_TFC44 | (TF0,TF0,TF0,TF3,TF2,TF1) |
| UL_TFC45 | (TF1,TF0,TF0,TF3,TF2,TF1) |
| UL_TFC46 | (TF2,TF1,TF1,TF3,TF2,TF1) |
| UL_TFC47 | (TF0,TF0,TF0,TF1,TF3,TF1) |
| UL_TFC48 | (TF1,TF0,TF0,TF1,TF3,TF1) |
| UL_TFC49 | (TF2,TF1,TF1,TF1,TF3,TF1) |
| UL_TFC50 | (TF0,TF0,TF0,TF2,TF3,TF1) |
| UL_TFC51 | (TF1,TF0,TF0,TF2,TF3,TF1) |
| UL_TFC52 | (TF2,TF1,TF1,TF2,TF3,TF1) |

| | |
|---|---|
| UL_TFC53 | (TF0,TF0,TF0,TF3,TF3,TF1) |
| UL_TFC54 | (TF1,TF0,TF0,TF3,TF3,TF1) |
| UL_TFC55 | (TF2,TF1,TF1,TF3,TF3,TF1) |
| UL_TFC56 | (TF0,TF0,TF0,TF2,TF4,TF1) |
| UL_TFC57 | (TF1,TF0,TF0,TF2,TF4,TF1) |
| UL_TFC58 | (TF2,TF1,TF1,TF2,TF4,TF1) |
| UL_TFC59 | (TF0,TF0,TF0,TF3,TF4,TF1) |
| UL_TFC60 | (TF1,TF0,TF0,TF3,TF4,TF1) |
| UL_TFC61 | (TF2,TF1,TF1,TF3,TF4,TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech + Streaming + Interactive Background PS radio bearer. The CS speech 12.2 kbps + Streaming UL:128 kbps + Interactive Background UL:128 kbps radio bearer (RB5+RB6+RB7+RB8+RB9) have 62 transport format combinations. As the transport formats where RB5, RB6, RB7, RB8, RB9 or DCCH has no data (TF0 for RB5, RB6, RB7, RB8, RB9 or DCCH) is considered as implicitly tested when the transport format combinations with data is tested then no specific sub-tests for those transport format combinations have been specified. The selected UL TFCI to achieve test coverage of TF1 to TF3 for RB8 and TF1 to TF4 for RB9 are: UL_TFC3, UL_TFC6 to UL_TFC7, UL_TFC9 to UL_TFC10, UL_TFC11 to UL_TFC12, UL_TFC15 to UL_TFC16, UL_TFC18 to UL_TFC19, UL_TFC21 to UL_TFC22, UL_TFC24 to UL_TFC25, UL_TFC27 to UL_TFC28 and UL_TFC30 to UL_TFC31.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 256 | 128 | 656 | DL_TFC1 | UL_TFC6 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC1, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC32 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>RB9: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8, RB9: See note 4 |
| | 2 | 2 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 6 | 256 | 256 | | | | | | | |
| | 6 | 6 | 256 | 256 | | | | | | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 3 | 512 | 128 | | | | | | | |
| | 12 | 6 | 512 | 128 | | | | | | | |
| 2 | 1 | 8 | 512 | 256 | 336 | DL_TFC2 | UL_TFC7 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC2, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>RB9: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8, RB9: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | | | | UL_TFC5,<br>UL_TFC7,<br>UL_TFC32 | | |
| 3 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC9 | DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC8 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC8,<br>UL_TFC9,<br>UL_TFC32 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552<br>RB9: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8, RB9: See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| 4 | 1 | 8 | 512 | 256 | 656 | DL_TFC2 | UL_TFC10 | DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC2,<br>UL_TFC8 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 ,<br>UL_TFC8, | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552<br>RB9: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8, RB9: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | | | | UL_TFC10,<br>UL_TFC32 | | |
| 5 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC12 | DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC11 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC11,<br>UL_TFC12,<br>UL_TFC32 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>RB9: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8, RB9: See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| 6 | 1 | 8 | 512 | 256 | 656 | DL_TFC2 | UL_TFC13 | DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC2,<br>UL_TFC11 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC11,<br>UL_TFC13, | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>RB9: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8, RB9: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | | | | UL_TFC32 | | |
| 7 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC15 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC1, UL_TFC14 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC14, UL_TFC15, UL_TFC32 | RB5: 39 RB6: 103 RB7: 60 RB8: 2552 RB9: 632 | RB5: 39 RB6: No data RB7: No data RB8, RB9: See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| 8 | 1 | 8 | 512 | 256 | 656 | DL_TFC2 | UL_TFC16 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC2, UL_TFC14 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC14, UL_TFC16, UL_TFC32 | RB5: 81 RB6: 103 RB7: 60 RB8: 2552 RB9: 632 | RB5: 81 RB6: 103 RB7: 60 RB8, RB9: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 9 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC18 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC1, UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC17, UL_TFC18, UL_TFC32 | RB5: 39 RB6: 103 RB7: 60 RB8: 632 RB9: 1272 | RB5: 39 RB6: No data RB7: No data RB8, RB9: See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| 10 | 1 | 8 | 512 | 256 | 656 | DL_TFC2 | UL_TFC19 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC2, UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC17, UL_TFC19, UL_TFC32 | RB5: 81 RB6: 103 RB7: 60 RB8: 632 RB9: 1272 | RB5: 81 RB6: 103 RB7: 60 RB8, RB9: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| 11 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC21 | DL_TFC0, | UL_TFC0, | RB5: 39 | RB5: 39 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 5 | 8 | 256 | 256 | | | | DL_TFC3, UL_TFC0, UL_TFC1, UL_TFC20 | UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC20, UL_TFC21, UL_TFC32 | RB6: 103 RB7: 60 RB8: 1272 RB9: 1272 | RB6: No data RB7: No data RB8, RB9: See note 4 |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| 12 | 1 | 8 | 512 | 256 | 656 | DL_TFC2 | UL_TFC22 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC2, UL_TFC20 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC20, UL_TFC22, UL_TFC32 | RB5: 81 RB6: 103 RB7: 60 RB8: 1272 RB9: 1272 | RB5: 81 RB6: 103 RB7: 60 RB8, RB9: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| 13 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC24 | DL_TFC0, DL_TFC3, | UL_TFC0, UL_TFC1, | RB5: 39 RB6: 103 | RB5: 39 RB6: No data |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 7 | 8 | 512 | 512 | | | | UL_TFC0, UL_TFC1, UL_TFC23 | UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC23, UL_TFC24, UL_TFC32 | RB7: 60 RB8: 2552 RB9: 1272 | RB7: No data RB8, RB9: See note 4 |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| 14 | 1 | 8 | 512 | 256 | 656 | DL_TFC1 | UL_TFC27 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC1, UL_TFC26 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC26, UL_TFC27, UL_TFC32 | RB5: 39 RB6: 103 RB7: 60 RB8: 1272 RB9: 2552 | RB5: 39 RB6: No data RB7: No data RB8, RB9: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| 15 | 1 | 8 | 256 | 256 | 656 | DL_TFC2 | UL_TFC28 | DL_TFC0, DL_TFC3, UL_TFC0, | UL_TFC0, UL_TFC1, UL_TFC2, | RB5: 81 RB6: 103 RB7: 60 | RB5: 81 RB6: 103 RB7: 60 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 8 | 1024 | 512 | | | | UL_TFC2, UL_TFC26 | UL_TFC3, UL_TFC4, UL_TFC26, UL_TFC28, UL_TFC32 | RB8: 1272 RB9: 2552 | RB8, RB9: See note 4 |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |
| | 12 | 8 | 512 | 128 | | | | | | | |
| 16 | 1 | 8 | 512 | 256 | 656 | DL_TFC1 | UL_TFC30 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC1, UL_TFC29 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC29, UL_TFC30, UL_TFC32 | RB5: 39 RB6: 103 RB7: 60 RB8: 2552 RB9: 2552 | RB5: 39 RB6: No data RB7: No data RB8, RB9: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 1024 | 128 | | | | | | | |
| | 12 | 8 | 1024 | 128 | | | | | | | |
| 17 | 1 | 8 | 256 | 256 | 656 | DL_TFC2 | UL_TFC31 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC2, | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, | RB5: 81 RB6: 103 RB7: 60 RB8: 2552 RB9: 2552 | RB5: 81 RB6: 103 RB7: 60 RB8, RB9: See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 128 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 12 | 8 | 512 | 128 | | | | UL_TFC29 | UL_TFC4, UL_TFC29, UL_TFC31, UL_TFC32 | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 and UL_TFC32 are part of minimum set of TFCIs.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 14.6.7.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 14.6.8 Conversational / speech / UL:(12.65 8.85 6.6) DL:(12.65 8.85 6.6) kbps / CS RAB + Interactive or Background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH + DL:0.15 kbps SRB#5 for DCCH

#### 14.6.8.1 Conformance requirement

See 14.6.1.1.

#### 14.6.8.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.8.

#### 14.6.8.3 Method of test

Note The reference to UE Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The generic test procedure in 14.1.3.6 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (I/B 384 kbps, 10ms) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x72 | 0x181 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x40 | 1x78 | N/A | 1x336 | 1x148 |
| | TF2, bits | 1x54 | 1x113 | N/A | 2x336 | N/A |
| | TF3, bits | 1x64 | 1x181 | N/A | 4x336 | N/A |
| | TF4, bits | 1x72 | N/A | N/A | 8x336 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| UL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| UL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| UL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| UL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| UL_TFC5 | (TF0,TF0,TF0,TF0,TF1) |
| UL_TFC6 | (TF1,TF0,TF0,TF0,TF1) |
| UL_TFC7 | (TF2,TF1,TF0,TF0,TF1) |
| UL_TFC8 | (TF3,TF2,TF0,TF0,TF1) |
| UL_TFC9 | (TF4,TF3,TF0,TF0,TF1) |
| UL_TFC10 | (TF0,TF0,TF0,TF1,TF0) |
| UL_TFC11 | (TF1,TF0,TF0,TF1,TF0) |
| UL_TFC12 | (TF2,TF1,TF0,TF1,TF0) |
| UL_TFC13 | (TF3,TF2,TF0,TF1,TF0) |
| UL_TFC14 | (TF4,TF3,TF0,TF1,TF0) |
| UL_TFC15 | (TF0,TF0,TF0,TF1,TF1) |
| UL_TFC16 | (TF1,TF0,TF0,TF1,TF1) |
| UL_TFC17 | (TF2,TF1,TF0,TF1,TF1) |
| UL_TFC18 | (TF3,TF2,TF0,TF1,TF1) |
| UL_TFC19 | (TF4,TF3,TF0,TF1,TF1) |
| UL_TFC20 | (TF0,TF0,TF0,TF2,TF0) |
| UL_TFC21 | (TF1,TF0,TF0,TF2,TF0) |
| UL_TFC22 | (TF2,TF1,TF0,TF2,TF0) |
| UL_TFC23 | (TF3,TF2,TF0,TF2,TF0) |
| UL_TFC24 | (TF4,TF3,TF0,TF2,TF0) |
| UL_TFC25 | (TF0,TF0,TF0,TF2,TF1) |
| UL_TFC26 | (TF1,TF0,TF0,TF2,TF1) |
| UL_TFC27 | (TF2,TF1,TF0,TF2,TF1) |
| UL_TFC28 | (TF3,TF2,TF0,TF2,TF1) |
| UL_TFC29 | (TF4,TF3,TF0,TF2,TF1) |
| UL_TFC30 | (TF0,TF0,TF0,TF3,TF0) |
| UL_TFC31 | (TF1,TF0,TF0,TF3,TF0) |
| UL_TFC32 | (TF2,TF1,TF0,TF3,TF0) |
| UL_TFC33 | (TF3,TF2,TF0,TF3,TF0) |
| UL_TFC34 | (TF4,TF3,TF0,TF3,TF0) |
| UL_TFC35 | (TF0,TF0,TF0,TF3,TF1) |
| UL_TFC36 | (TF1,TF0,TF0,TF3,TF1) |
| UL_TFC37 | (TF2,TF1,TF0,TF3,TF1) |
| UL_TFC38 | (TF3,TF2,TF0,TF3,TF1) |
| UL_TFC39 | (TF4,TF3,TF0,TF3,TF1) |
| UL_TFC40 | (TF0,TF0,TF0,TF4,TF0) |
| UL_TFC41 | (TF1,TF0,TF0,TF4,TF0) |
| UL_TFC42 | (TF2,TF1,TF0,TF4,TF0) |
| UL_TFC43 | (TF3,TF2,TF0,TF4,TF0) |
| UL_TFC44 | (TF4,TF3,TF0,TF4,TF0) |
| UL_TFC45 | (TF0,TF0,TF0,TF4,TF1) |
| UL_TFC46 | (TF1,TF0,TF0,TF4,TF1) |
| UL_TFC47 | (TF2,TF1,TF0,TF4,TF1) |
| UL_TFC48 | (TF3,TF2,TF0,TF4,TF1) |
| UL_TFC49 | (TF4,TF3,TF0,TF4,TF1) |
| UL_TFC50 | (TF0,TF0,TF0,TF5,TF0) |
| UL_TFC51 | (TF1,TF0,TF0,TF5,TF0) |
| UL_TFC52 | (TF2,TF1,TF0,TF5,TF0) |
| UL_TFC53 | (TF3,TF2,TF0,TF5,TF0) |
| UL_TFC54 | (TF4,TF3,TF0,TF5,TF0) |
| UL_TFC55 | (TF0,TF0,TF0,TF5,TF1) |
| UL_TFC56 | (TF1,TF0,TF0,TF5,TF1) |
| UL_TFC57 | (TF2,TF1,TF0,TF5,TF1) |
| UL_TFC58 | (TF3,TF2,TF0,TF5,TF1) |
| UL_TFC59 | (TF4,TF3,TF0,TF5,TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH1 | DCCH2 (SRB #5) |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x181 | 0x60 | 0x148 | 0x3 |
| | TF1, bits | 1x40 | 1x78 | N/A | 1x148 | 1x3 |
| | TF2, bits | 1x54 | 1x113 | N/A | N/A | N/A |
| | TF3, bits | 1x64 | 1x181 | N/A | N/A | N/A |
| | TF4, bits | 1x72 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH1, DCCH2) |
|---|---|
| DL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| DL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| DL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| DL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| DL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| DL_TFC5 | (TF0,TF0,TF0,TF1,TF0) |
| DL_TFC6 | (TF1,TF0,TF0,TF1,TF0) |
| DL_TFC7 | (TF2,TF1,TF0,TF1,TF0) |
| DL_TFC8 | (TF3,TF2,TF0,TF1,TF0) |
| DL_TFC9 | (TF4,TF3,TF0,TF1,TF0) |
| DL_TFC10 | (TF0,TF0,TF0,TF0,TF1) |
| DL_TFC11 | (TF1,TF0,TF0,TF0,TF1) |
| DL_TFC12 | (TF2,TF1,TF0,TF0,TF1) |
| DL_TFC13 | (TF3,TF2,TF0,TF0,TF1) |
| DL_TFC14 | (TF4,TF3,TF0,TF0,TF1) |
| DL_TFC15 | (TF0,TF0,TF0,TF1,TF1) |
| DL_TFC16 | (TF1,TF0,TF0,TF1,TF1) |
| DL_TFC17 | (TF2,TF1,TF0,TF1,TF1) |
| DL_TFC18 | (TF3,TF2,TF0,TF1,TF1) |
| DL_TFC19 | (TF4,TF3,TF0,TF1,TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:384 kbps radio bearer (RB8) has the highest number of transport formats (5 for TTI=10 ms and excluding TF0) then 5 sub-tests has been defined. The selected UL TFCI to achieve test coverage of TF1 to TF5 for RB8 and for the different speech transport formats are: UL_TFC11 for TF1, UL_TFC22 for TF2, UL_TFC33 for TF3, UL_TFC44 for TF4 and UL_TFC54 for TF5.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | TFC subset identity (note 5) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 256 | 336 | DL_TFC1 | UL_TFC11 | DL_TFC0, DL_TFC5, DL_TFC6, DL_TFC10, UL_TFC0, UL_TFC5, UL_TFC16 | 0 | RB5: 40<br>RB6: 78<br>RB7: 60<br>RB8: 312 | RB5: 40<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 2 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 6 | 512 | 256 | | | | | | | |
| | 6 | 6 | 512 | 256 | | | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | | | |
| | 11 | 3 | 512 | 256 | | | | | | | |
| | 12 | 6 | 512 | 256 | | | | | | | |
| 2 | 1 | 2 | 256 | 256 | 656 | DL_TFC2 | UL_TFC22 | DL_TFC0, DL_TFC5, DL_TFC7, DL_TFC10, UL_TFC0, UL_TFC5, UL_TFC27 | 0 | RB5: 54<br>RB6: 78<br>RB7: 60<br>RB8: 632 | RB5: 54<br>RB6: 78<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 2 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 6 | 256 | 256 | | | | | | | |
| | 6 | 6 | 256 | 256 | | | | | | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 3 | 256 | 256 | | | | | | | |
| | 12 | 6 | 256 | 256 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | DL_TFC3 | UL_TFC33 | DL_TFC0, DL_TFC5, | 1 | RB5: 64<br>RB6: 113 | RB5: 64<br>RB6: 113 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | TFC subset identity (note 5) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 6 | 8 | 512 | 256 | | | | DL_TFC8, | | RB7: 60 | RB7: No data |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | DL_TFC10, | | RB8: 1272 | RB8: See note 4 |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 1024 | | | | UL_TFC0, | | | |
| | 11 | 8 | 512 | 256 | | | | | | | |
| | 12 | 8 | 512 | 256 | | | | UL_TFC5, | | | |
| | | | | | | | | UL_TFC38 | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC4 | UL_TFC44 | DL_TFC0, | 2 | RB5: 72 | RB5: 72 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | DL_TFC5, | | RB6: 181 | RB6: 181 |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | DL_TFC9, | | RB7: 60 | RB7: No data |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | DL_TFC10, | | RB8: 2552 | RB8: See note 4 |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | UL_TFC0, | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 256 | 256 | | | | | | | |
| | 12 | 8 | 256 | 256 | | | | UL_TFC5, | | | |
| | | | | | | | | UL_TFC49 | | | |
| 5 | 1 | 8 | 256 | 256 | 656 | DL_TFC4 | UL_TFC54 | DL_TFC0, | 2 | RB5: 72 | RB5: 72 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | DL_TFC5, | | RB6: 181 | RB6: 181 |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | DL_TFC9, | | RB7: 60 | RB7: No data |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | DL_TFC10, | | RB8: 3832 | RB8: See note 4 |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | UL_TFC0, | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 256 | 256 | | | | | | | |
| | 12 | 8 | 256 | 256 | | | | UL_TFC5, | | | |
| | | | | | | | | UL_TFC59 | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | TFC subset identity (note 5) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| SDUs used in the sub-test and within the UE capabilities for the actual UE category under test. | | | | | | | | | | | |

NOTE 2: Void.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.6.

NOTE 5: TFC subset identity shall be signalled by the SS on the downlink SRB#5, see generic test procedure in clause 14.1.3.6.

#### 14.6.8.4 Test requirements

See 14.1.3.6 for definition of the referenced step numbers.

1. At step B12b the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for RB5 and RB6 the UE shall return an RLC SDU having the same content as sent by SS. No data shall be received on RB7.
4. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 14.6.9 Streaming MBMS PTP / unknown / UL:16 DL: [max bit rate depending on UE category] kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / MBMS Selected Service

NOTE The testing of MBMS PTP radio bearer combinations on DPCH and HSPDSCH is focusing on verifying that the UE is capable to establish the radio bearer combination and to verify correct data transfer using all the possible uplink TFS for transport channels mapped on DCH. The verification of MAC-hs transport block size selection and that the UE is capable of transmitting all the possible transport block sizes within the UE capability is tested in the MAC-hs test case 7.1.5.6.

#### 14.6.9.1 Conformance requirement

The UE shall be able to establish the UTRAN requested MBMS PTP radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested MBMS PTP radio bearer configuration.

Reference(s)

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

3GPP TS 25.331 (RRC)

#### 14.6.9.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.9:

#### 14.6.9.3 Method of test

Note The reference to HS-DSCH Category refers to the UE capability as signalled in the Rel-5 IE “HS-DSCH physical layer category” (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See table for paramterers for different HS-DSCH Categories |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | HS-PDSCH TFRC (note 2) | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 1 | 2 | 256 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 2 | 2 | 256 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 3 | 3 | 256 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 4 | 3 | 256 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 5 | 6 | 256 | 256 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 6 | 6 | 256 | 256 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 7 | 6 | 512 | 512 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 8 | 6 | 512 | 512 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 9 | 6 | 1024 | 512 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 10 | 6 | 1024 | 1024 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 11 | 3 | 512 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 12 | 6 | 512 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 14.1.3.4 (MAC-d PDU size=656) for recommended TFRC values for different transport block size.

Uplink TFS:

| | TFI | RB5 (16 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

The generic test procedure in 14.1.6, using the MBMS Selected Service branch, is run for each sub-test.

Sub-tests:

| Sub-test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) |
|---|---|---|---|---|
| 1 | UL_TFC1 | UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI. | | | | |

### 14.6.9.4 Test requirements

See 14.1.6 for definition of step 14 and step 22.

1. At step 14 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 22 the UE shall return a RLC SDU where the first 312 bits has the same content as the RLC SDUs sent by the SS in downlink.

## 14.6.9m Streaming MBMS PTP / unknown / UL:16 DL: [max bit rate depending on UE category] kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / MBMS Multicast Service

This test case is identical to test case 14.6.9 with the exception that the SS shall use the MBMS Multicast Service branch in the generic test procedure in 14.1.6.

## 14.6.10 Streaming MBMS PTP / unknown / UL:16 DL: [max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / MBMS Selected Service

NOTE The testing of MBMS PTP radio bearer combinations on DPCH and HSPDSCH is focusing on verifying that the UE is capable to establish the radio bearer combination and to verify correct data transfer using all the possible uplink TFS for transport channels mapped on DCH. The verification of MAC-hstransport block size selection and that the UE is capable of transmitting all the possible transport block sizes within the UE capability is tested in the MAC-hs test case 7.1.5.6.

### 14.6.10.1 Conformance requirement

The UE shall be able to establish the UTRAN requested MBMS PTP radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested MBMS PTP radio bearer configuration.

Reference(s)

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

3GPP TS 25.331 (RRC)

14.6.10.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.5.10:

14.6.10.3 Method of test

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See table for paramterers for different HS-DSCH Categories |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | HS-PDSCH TFRC (note 2) | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 1 | 2 | 256 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 2 | 2 | 256 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 3 | 3 | 256 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 4 | 3 | 256 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 5 | 6 | 256 | 256 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 6 | 6 | 256 | 256 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 7 | 6 | 512 | 512 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 8 | 6 | 512 | 512 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 9 | 6 | 1024 | 512 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 10 | 6 | 1024 | 1024 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 11 | 3 | 512 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |
| 12 | 6 | 512 | 128 | 656 | 677 | 1 | QPSK | 2 | 7 |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 14.1.3.4 (MAC-d PDU size=656) for recommended TFRC values for different transport block size.

Uplink TFS:

| | TFI | RB5 (16 kbps, 20 ms TTI) | RB6 + RB7 (64 kbps RAB, 20 ms TTI) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x340 | 0x148 |
| | TF1, bits | 1x336 | 1x340 | 1x148 |
| | TF2, bits | N/A | 2x340 | N/A |
| | TF3, bits | N/A | 3x340 | N/A |
| | TF4, bits | N/A | 4x340 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6 + RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF2, TF0) |
| UL_TFC5 | (TF1, TF2, TF0) |
| UL_TFC6 | (TF0, TF3, TF0) |
| UL_TFC7 | (TF1, TF3, TF0) |
| UL_TFC8 | (TF0, TF4, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF1, TF1) |
| UL_TFC14 | (TF0, TF2, TF1) |
| UL_TFC15 | (TF1, TF2, TF1) |
| UL_TFC16 | (TF0, TF3, TF1) |
| UL_TFC17 | (TF1, TF3, TF1) |
| UL_TFC18 | (TF0, TF4, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

The generic test procedure in 14.1.6, using the MBMS Selected Service branch, is run for each sub-test.

Sub-tests:

| Sub-test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data for RB6+RB7 |
|---|---|---|---|---|---|
| 1 | UL_TFC1 | UL_TFC0, UL_TFC11 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC10, UL_TFC11 | RB5: 312<br>RB6: 312<br>RB7: 312 | Test data for RB6+RB7 sent on RB6 |
| 2 | UL_TFC2 | UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC10, UL_TFC12 | RB5: 312<br>RB6: 312<br>RB7: 312 | Test data for RB6+RB7 sent on RB6 |
| 3 | UL_TFC3 | UL_TFC0, UL_TFC13 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 312<br>RB6: 312<br>RB7: 312 | Test data for RB6+RB7 sent on RB6 |
| 4 | UL_TFC4 | UL_TFC0, UL_TFC14 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC10, UL_TFC14 | RB5: 312<br>RB6: 632<br>RB7: 632 | Test data for RB6+RB7 sent on RB6 |
| 5 | UL_TFC5 | UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 312<br>RB6: 632<br>RB7: 632 | Test data for RB6+RB7 sent on RB6 |
| 6 | UL_TFC6 | UL_TFC0, UL_TFC16 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC10, UL_TFC16 | RB5: 312<br>RB6: 952<br>RB7: 952 | Test data for RB6+RB7 sent on RB6 |
| 7 | UL_TFC7 | UL_TFC0, UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC7, UL_TFC10, UL_TFC17 | RB5: 312<br>RB6: 952<br>RB7: 952 | Test data for RB6+RB7 sent on RB6 |
| 8 | UL_TFC8 | UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC8, UL_TFC10, UL_TFC18 | RB5: 312<br>RB6: 1272<br>RB7: 1272 | Test data for RB6+RB7 sent on RB6 |
| 9 | UL_TFC9 | UL_TFC0, UL_TFC19 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC10, UL_TFC19 | RB5: 312<br>RB6: 1272<br>RB7: 1272 | Test data for RB6+RB7 sent on RB6 |
| 10 | UL_TFC9 | UL_TFC0, UL_TFC19 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC10, UL_TFC19 | RB5: 312<br>RB6: 1272<br>RB7: 1272 | Test data for RB6+RB7 sent on RB7 |

| |
|---|
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC10 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI. |

#### 14.6.10.4 Test requirements

See 14.1.6 for definition of step 14 and step 22.

1. At step 14 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 22 the UE shall return
   - for sub-test 1: RLC SDU on RB5 where the first 312 bits has the same content as the RLC SDUs sent by the SS in downlink and no data on RB6 and RB7.
   - for sub-test 2: RLC SDU on RB6 where the first 312 bits has the same content as the RLC SDUs sent by the SS in downlink and no data on RB5 and RB7.
   - for sub-test 3: RLC SDU on RB5 and RB6 where the first 312 bits has the same content as the RLC SDUs sent by the SS in downlink and no data on RB7.
   - for sub-test 4: RLC SDU on RB6 where the first 632 bits has the same content as the RLC SDUs sent by the SS in downlink and no data on RB5 and RB7.
   - for sub-test 5: RLC SDU on RB5 and RB6 where the first 312 bits for RB5 and the .first 632 bits for RB6 has the same content as the RLC SDUs sent by the SS in downlink and no data on RB7.
   - for sub-test 6: RLC SDU on RB6 where the first 952 bits has the same content as the RLC SDUs sent by the SS in downlink and no data on RB5 and RB7.
   - for sub-test 7: RLC SDU on RB5 and RB6 where the first 312 bits for RB5 and the first 952 bits for RB6 has the same content as the RLC SDUs sent by the SS in downlink and no data on RB7.
   - for sub-test 8: RLC SDU on RB6 where the first 1272 bits has the same content as the RLC SDUs sent by the SS in downlink and no data on RB5 and RB7.
   - for sub-test 9: RLC SDU on RB5 and RB6 where the first 312 bits for RB5 and the first 1272 bits for RB6 has the same content as the RLC SDUs sent by the SS in downlink and no data on RB7.
   - for sub-test 10: RLC SDU on RB5 and RB7 where the first 312 bits for RB5 and the first 1272 bits for RB7 has the same content as the RLC SDUs sent by the SS in downlink and no data on RB6.

### 14.6.10m Streaming MBMS PTP / unknown / UL:16 DL: [max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / MBMS Multicast Service

This test case is identical to test case 14.6.10 with the exception that the SS shall use the MBMS Multicast Service branch in the generic test procedure in 14.1.6.

## 14.7 Combinations on DPCH, HS-PDSCH and E-DPDCH

NOTE The testing of radio bearer combinations on DPCH, HSPDSCH and E-DPDCH is focusing on verifying that the UE is capable to establish the radio bearer combination and to verify correct data transfer using all the possible uplink TFS for transport channels mapped on DCH and all the configured MAC-d PDU sizes for the transport channel mapped to E-DCH. The verification of MAC-e/es transport block size selection and that the UE is capable of transmitting all the possible transport block sizes within the UE capability is tested in the MAC-e/es test case 7.1.6.3.2.

## 14.7.1 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH

### 14.7.1.1 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

### 14.7.1.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.1:

1. To verify that the UE is able to establish the radio bearer combination.
2. To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

### 14.7.1.3 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-6 IE "E-DCH physical layer category". All UEs supporting E-DCH should signal a category between 1 and 6 for this IE even if the UE physical capability category is above 6.

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 5 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 6 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 7 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 8 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 9 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 10 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 11 | 3 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 12 | 6 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 14.1.3.3 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | | |

The generic test procedure in 14.1.4.1 is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL RLC SDU size (note 2) | Test data size (note 3) |
|---|---|---|---|---|---|
| 1 | 1 to 6 | 10ms, Table 0 | 4 | 312 | 312 |
| 2 | 2,4 and 6 | 2ms, Table 0 | 8 | 312 | 312 |
| NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.<br>NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested. | | | | | |

### 14.7.1.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU with same content as sent in downlink.

## 14.7.1a Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH/ UL 16QAM

### 14.7.1a.1 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

### 14.7.1a.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.1:

1. To verify that the UE is able to establish the radio bearer combination.
2. To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

### 14.7.1a.3 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-6 IE "E-DCH physical layer category". All UEs supporting E-DCH should signal a category between 1 and 6 for this IE even if the UE physical capability category is above 6.

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 7 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS (note 2) | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 5 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 6 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 7 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 8 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 9 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 10 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 11 | 3 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 12 | 6 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 14.1.3.3 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | | |

The generic test procedure in 14.1.4.1 is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL RLC SDU size (note 2 &4) | Test data size (note 3) |
|---|---|---|---|---|---|
| 1 | 7 | 2ms, Table 2 | 8 | 7992 | 312 |
| NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.<br>NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.<br>NOTE 4: The UL RLC SDU size is calculated as 25*320-8= 7992, such that TB size 8450 corresponding to E-TFCI 103 will be selected. With PLnon-max = 0.84, [(8450+24[CRC] ) *3 [TC] ]= 25422 bits. 25422* PLnon-max =21355 , this guarantees as per algorithm in 25.212 clause 4.8.4.1,16QAM to be selected [2×$M_2$+2×$M_4$] | | | | | |

### 14.7.1a.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU with first 312 bits equal to the content of the DL RLC SDU sent by the SS.

## 14.7.2 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH

### 14.7.2.1 Conformance requirement

See 14.7.1.1.

### 14.7.2.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.2:

1. To verify that the UE is able to establish.teh radio bearer combination.
2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

### 14.7.2.3 Method of test

See 14.7.1.3.

### 14.7.2.4 Test requirements

See 14.7.1.4.

## 14.7.3 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH

### 14.7.3.1 Conformance requirement

See 14.7.1.1.

### 14.7.3.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.3:

1. To verify that the UE is able to establish.teh radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

### 14.7.3.3 Method of test

See 14.7.1.3.

### 14.7.3.4 Test requirements

See 14.7.1.4.

## 14.7.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 14.7.4.1 Conformance requirement

See 14.7.1.1.

### 14.7.4.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.4:

1. To verify that the UE is able to establish the radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH in combination with the possible TFCI of the conversional speech radio bearer.

### 14.7.4.3 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-6 IE "E-DCH physical layer category". All UEs supporting E-DCH should signal a category between 1 and 6 for this IE even if the UE physical capability category is above 6.

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

Uplink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 5 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 6 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 7 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 8 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 9 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 10 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 11 | 3 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 12 | 6 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size (“Minimum TBS”) is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 14.1.3.3 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | | |

The generic test procedure in 14.1.4.1 is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | DCH | | | | UL RLC SDU size (note 3) | Test data size (note 4) |
|---|---|---|---|---|---|---|---|---|---|
| | | | | DL TFCS Under test | UL TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 2) | | |
| 1 | 1 to 6 | 10ms, Table 0 | 4 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 2 | 1 to 6 | 10ms, Table 0 | 4 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 3 | 2, 4 and 6 | 2ms, Table 0 | 8 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 UL_TFC4 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | 2, 4 and 6 | 2ms, Table 0 | 8 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.
NOTE 4: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.

#### 14.7.4.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the sub-test.
3. At step 18 and for each radio bearer where test data is sent in downlink the UE shall return a RLC SDU with same content as sent in downlink. For radio bearers where no data is sent in downlink then no data shall be received in uplink.

### 14.7.5 Streaming or interative or background / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH

#### 14.7.5.1 Conformance requirement

See 14.7.1.1.

#### 14.7.5.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.5:

1. To verify that the UE is able to establish the radio bearer combination.
2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

#### 14.7.5.3 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-6 IE "E-DCH physical layer category". All UEs supporting E-DCH should signal a category between 1 and 6 for this IE even if the UE physical capability category is above 6.

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The first Streaming or background or interactive / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is refered to as RB5 and the second Streaming or interactive or background UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is referred to RB6.

The following parameters are specific for this test case and RB5 and RB6:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 5 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 6 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 7 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 8 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 9 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 10 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 11 | 3 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 12 | 6 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |

NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size ("Minimum TBS") is bigger than the maximum MAC-d PDU size under test + the MAC-hs header size (21 bits). See 14.1.3.3 (MAC-d PDU size=336) for recommended TFRC values for different transport block size.

The generic test procedure in 14.1.4.1 is run for each sub-test.

Sub-tests:

| Sub-test | E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|
| 1 | 1 to 6 | 10ms, Table 0 | 4 | RB5:312<br>RB6:312 | RB5:312<br>RB6:312 |
| 2 | 2,4 and 6 | 2ms, Table 0 | 8 | RB5:312<br>RB6:312 | RB5:312<br>RB6:312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.
NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.

### 14.7.5.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU on RB5 and RB6 with same content as sent in downlink.

## 14.7.6 Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or Interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL: :[max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH

### 14.7.6.1 Conformance requirement

See 14.7.1.1.

### 14.7.6.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.6:

1. To verify that the UE is able to establish the radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

### 14.7.6.3 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-6 IE "E-DCH physical layer category". All UEs supporting E-DCH should signal a category between 1 and 6 for this IE even if the UE physical capability category is above 6.

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is refered to as RB5 and the Streaming or interactive or background UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is referred to RB6

The following parameters are specific for this test case and RB5 and RB6:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RB5: HS-DSCH MAC-d PDU size | See sub-test table |
| RB6: HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS (note 2) | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 1 | 2 | 512 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 2 | 2 | 512 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 3 | 3 | 512 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 4 | 3 | 512 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 5 | 6 | 512 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 6 | 6 | 512 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 7 | 6 | 1536 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 8 | 6 | 1536 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 9 | 6 | 2047 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 10 | 6 | 2047 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 11 | 3 | 1024 | 344 | 365 | 1 | QPSK | 1 | 19 |
| 12 | 6 | 1024 | 344 | 365 | 1 | QPSK | 1 | 19 |

NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI considering all sub-tests. i.e. such that the MAC-hs transport block size ("Minimum TBS") is bigger than the maximum MAC-d PDU size under test + the MAC-hs header size.

NOTE 2: For RB5 (UM) the maximum MAC-d PDU size is 344 and the MAC-hs header size is 21 bits, this result in the maximum required TBS for RB5 of 365 bits. For RB6 (AM) the maximum MAC-d PDU size is 336 and the MAC-hs header size is 21 bits, this result in the maximum required TBS for RB6 of 357 bits. The HS-PDSCH TFRC need to be selected for a TBS bigger or equal to 365.

The generic test procedure in 14.1.4.1 is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL MAC-d PDU size under test | DL MAC-d PDU size under test | UL RLC SDU size (note 2) | Test data size (note 3) |
|---|---|---|---|---|---|---|---|
| 1 | 1 to 6 | 10ms, Table 0 | 4 | RB5:96<br>RB6:336 | RB5:112<br>RB6:336 | RB5:80<br>RB6:312 | RB5:96<br>RB6:312 |
| 2 | 1 to 6 | 10ms, Table 0 | 4 | RB5:112<br>RB6:336 | RB5:112<br>RB6:336 | RB5:96<br>RB6:312 | RB5:96<br>RB6:312 |
| 3 | 1 to 6 | 10ms, Table 0 | 4 | RB5:144<br>RB6:336 | RB5:144<br>RB6:336 | RB5:128<br>RB6:312 | RB5:128<br>RB6:312 |
| 4 | 1 to 6 | 10ms, Table 0 | 4 | RB5:160<br>RB6:336 | RB5:160<br>RB6:336 | RB5:144<br>RB6:312 | RB5:144<br>RB6:312 |
| 5 | 1 to 6 | 10ms, Table 0 | 4 | RB5:176<br>RB6:336 | RB5:176<br>RB6:336 | RB5:160<br>RB6:312 | RB5:160<br>RB6:312 |
| 6 | 1 to 6 | 10ms, Table 0 | 4 | RB5:192<br>RB6:336 | RB5:192<br>RB6:336 | RB5:176<br>RB6:312 | RB5:176<br>RB6:312 |
| 7 | 1 to 6 | 10ms, Table 0 | 4 | RB5:208<br>RB6:336 | RB5:224<br>RB6:336 | RB5:192<br>RB6:312 | RB5:208<br>RB6:312 |
| 8 | 1 to 6 | 10ms, Table 0 | 4 | RB5:224<br>RB6:336 | RB5:224<br>RB6:336 | RB5:208<br>RB6:312 | RB5:208<br>RB6:312 |
| 9 | 1 to 6 | 10ms, Table 0 | 4 | RB5:288<br>RB6:336 | RB5:296<br>RB6:336 | RB5:272<br>RB6:312 | RB5:280<br>RB6:312 |
| 10 | 1 to 6 | 10ms, Table 0 | 4 | RB5:296<br>RB6:336 | RB5:296<br>RB6:336 | RB5:280<br>RB6:312 | RB5:280<br>RB6:312 |
| 11 | 1 to 6 | 10ms, Table 0 | 4 | RB5:312<br>RB6:336 | RB5:344<br>RB6:336 | RB5:296<br>RB6:312 | RB5:328<br>RB6:312 |
| 12 | 1 to 6 | 10ms, Table 0 | 4 | RB5:344<br>RB6:336 | RB5:344<br>RB6:336 | RB5:328<br>RB6:312 | RB5:328<br>RB6:312 |
| 13 | 2,4,6 | 2ms, Table 0 | 8 | RB5:96<br>RB6:336 | RB5:112<br>RB6:336 | RB5:80<br>RB6:312 | RB5:96<br>RB6:312 |
| 14 | 2,4,6 | 2ms, Table 0 | 8 | RB5:112<br>RB6:336 | RB5:112<br>RB6:336 | RB5:96<br>RB6:312 | RB5:96<br>RB6:312 |
| 15 | 2,4,6 | 2ms, Table 0 | 8 | RB5:144<br>RB6:336 | RB5:144<br>RB6:336 | RB5:128<br>RB6:312 | RB5:128<br>RB6:312 |
| 16 | 2,4,6 | 2ms, Table 0 | 8 | RB5:160<br>RB6:336 | RB5:160<br>RB6:336 | RB5:144<br>RB6:312 | RB5:144<br>RB6:312 |
| 17 | 2,4,6 | 2ms, Table 0 | 8 | RB5:176<br>RB6:336 | RB5:176<br>RB6:336 | RB5:160<br>RB6:312 | RB5:160<br>RB6:312 |
| 18 | 2,4,6 | 2ms, Table 0 | 8 | RB5:192 | RB5:192 | RB5:176 | RB5:176 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | | | | RB6:336 | RB6:336 | RB6:312 | RB6:312 |
| 19 | 2,4,6 | 2ms, Table 0 | 8 | RB5:208<br>RB6:336 | RB5:224<br>RB6:336 | RB5:192<br>RB6:312 | RB5:208<br>RB6:312 |
| 20 | 2,4,6 | 2ms, Table 0 | 8 | RB5:224<br>RB6:336 | RB5:224<br>RB6:336 | RB5:208<br>RB6:312 | RB5:208<br>RB6:312 |
| 21 | 2,4,6 | 2ms, Table 0 | 8 | RB5:288<br>RB6:336 | RB5:296<br>RB6:336 | RB5:272<br>RB6:312 | RB5:280<br>RB6:312 |
| 22 | 2,4,6 | 2ms, Table 0 | 8 | RB5:296<br>RB6:336 | RB5:296<br>RB6:336 | RB5:280<br>RB6:312 | RB5:280<br>RB6:312 |
| 23 | 2,4,6 | 2ms, Table 0 | 8 | RB5:312<br>RB6:336 | RB5:344<br>RB6:336 | RB5:296<br>RB6:312 | RB5:328<br>RB6:312 |
| 24 | 2,4,6 | 2ms, Table 0 | 8 | RB5:344<br>RB6:336 | RB5:344<br>RB6:336 | RB5:328<br>RB6:312 | RB5:328<br>RB6:312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.

NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit). This will enable the UE to return th data within one UL TTI.

NOTE 3: The test data size is for DTCH mapped to E-DCH is selected according to the MAC-d PDU size to be tested = DL RLC payload size for the MAC-d PDU size minus 8 bits (size of 7 bit length indicator and expansion bit).

#### 14.7.6.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU on RB5 and RB6 with same content as sent in downlink. For the case the returned UL RLC SDU size under test is smaller than the sent DL RLC SDU size then the payload of the received UL RLC SDU shall have the same content as the first N bits of the DL RLC SDU payload, where N equals the payload size of the UL RLC SDU.

## 14.7.6a Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or Interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL: :[max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH/ UL 16QAM

#### 14.7.6a.1 Conformance requirement

See 14.7.1.1.

#### 14.7.6a.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.6:

1. To verify that the UE is able to establish the radio bearer combination.
2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

14.7.6a.3 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-7 IE "E-DCH physical layer category extension".

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is refered to as RB5 and the Streaming or interactive or background UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is referred to RB6

The following parameters are specific for this test case and RB5 and RB6:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RB5: HS-DSCH MAC-d PDU size | See sub-test table |
| RB6: HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 7 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | |
|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Max MAC-d PDU size | Max MAC-d PDU size | Max MAC-d PDU size | Max MAC-d PDU size |
| 1 | 2 | 512 | 344 | 365 | 1 | QPSK | 1 |
| 2 | 2 | 512 | 344 | 365 | 1 | QPSK | 1 |
| 3 | 3 | 512 | 344 | 365 | 1 | QPSK | 1 |
| 4 | 3 | 512 | 344 | 365 | 1 | QPSK | 1 |
| 5 | 6 | 512 | 344 | 365 | 1 | QPSK | 1 |
| 6 | 6 | 512 | 344 | 365 | 1 | QPSK | 1 |
| 7 | 6 | 1536 | 344 | 365 | 1 | QPSK | 1 |
| 8 | 6 | 1536 | 344 | 365 | 1 | QPSK | 1 |
| 9 | 6 | 2047 | 344 | 365 | 1 | QPSK | 1 |
| 10 | 6 | 2047 | 344 | 365 | 1 | QPSK | 1 |
| 11 | 3 | 1024 | 344 | 365 | 1 | QPSK | 1 |
| 12 | 6 | 1024 | 344 | 365 | 1 | QPSK | 1 |

NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI considering all sub-tests. i.e. such that the MAC-hs transport block size ("Minimum TBS") is bigger than the maximum MAC-d PDU size under test + the MAC-hs header size.

NOTE 2: For RB5 (UM) the maximum MAC-d PDU size is 344 and the MAC-hs header size is 21 bits, this result in the maximum required TBS for RB5 of 365 bits. For RB6 (AM) the maximum MAC-d PDU size is 336 and the MAC-hs header size is 21 bits, this result in the maximum required TBS for RB6 of 357 bits. The HS-PDSCH TFRC need to be selected for a TBS bigger or equal to 365.

The generic test procedure in 14.1.4.1 is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL MAC-d PDU size under test | DL MAC-d PDU size under test | UL RLC SDU size (note 2) | Test data size (note 3) |
|---|---|---|---|---|---|---|---|
| 1 | 7 | 2ms, Table 2 | 8 | RB5:96<br>RB6:336 | RB5:112<br>RB6:336 | RB5:80<br>RB6: 7992 | RB5:96<br>RB6:312 |
| 2 | 7 | 2ms, Table 2 | 8 | RB5:112<br>RB6:336 | RB5:112<br>RB6:336 | RB5:96<br>RB6: 7992 | RB5:96<br>RB6:312 |
| 3 | 7 | 2ms, Table 2 | 8 | RB5:144<br>RB6:336 | RB5:144<br>RB6:336 | RB5:128<br>RB6: 7992 | RB5:128<br>RB6:312 |
| 4 | 7 | 2ms, Table 2 | 8 | RB5:160<br>RB6:336 | RB5:160<br>RB6:336 | RB5:144<br>RB6: 7992 | RB5:144<br>RB6:312 |
| 5 | 7 | 2ms, Table 2 | 8 | RB5:176<br>RB6:336 | RB5:176<br>RB6:336 | RB5:160<br>RB6: 7992 | RB5:160<br>RB6:312 |
| 6 | 7 | 2ms, Table 2 | 8 | RB5:192<br>RB6:336 | RB5:192<br>RB6:336 | RB5:176<br>RB6: 7992 | RB5:176<br>RB6:312 |
| 7 | 7 | 2ms, Table 2 | 8 | RB5:208<br>RB6:336 | RB5:224<br>RB6:336 | RB5:192<br>RB6: 7992 | RB5:208<br>RB6:312 |
| 8 | 7 | 2ms, Table 2 | 8 | RB5:224<br>RB6:336 | RB5:224<br>RB6:336 | RB5:208<br>RB6: 7992 | RB5:208<br>RB6:312 |
| 9 | 7 | 2ms, Table 2 | 8 | RB5:288<br>RB6:336 | RB5:296<br>RB6:336 | RB5:272<br>RB6: 7992 | RB5:280<br>RB6:312 |
| 10 | 7 | 2ms, Table 2 | 8 | RB5:296<br>RB6:336 | RB5:296<br>RB6:336 | RB5:280<br>RB6: 7992 | RB5:280<br>RB6:312 |
| 11 | 7 | 2ms, Table 2 | 8 | RB5:312<br>RB6:336 | RB5:344<br>RB6:336 | RB5:296<br>RB6: 7992 | RB5:328<br>RB6:312 |
| 12 | 7 | 2ms, Table 2 | 8 | RB5:344<br>RB6:336 | RB5:344<br>RB6:336 | RB5:328<br>RB6: 7992 | RB5:328<br>RB6:312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.

NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit). This will enable the UE to return th data within one UL TTI.

NOTE 3: The test data size is for DTCH mapped to E-DCH is selected according to the MAC-d PDU size to be tested = DL RLC payload size for the MAC-d PDU size minus 8 bits (size of 7 bit length indicator and expansion bit).

NOTE 4: The UL RLC SDU size is calculated as 25*320-8= 7992, such that TB size 8450 corresponding to E-TFCI 103 will be selected. With PLnon-max = 0.84, [(8450+24[CRC] ) *3 [TC] ]= 25422 bits. 25422* PLnon-max =21355 , this guarantees as per algorithm in 25.212 clause 4.8.4.1,16QAM to be selected [$2\times M_2+2\times M_4$]

### 14.7.6a.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 18 the UE shall return a RLC SDU on RB5 with same content as sent in downlink and on RB6 with first 312 bits equal to the content of the DL RLC SDU sent by the SS. For the case the returned UL RLC SDU size under test is smaller than the sent DL RLC SDU size then the payload of the received UL RLC SDU shall have the same content as the first N bits of the DL RLC SDU payload, where N equals the payload size of the UL RLC SDU.

## 14.7.6b Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps with Flexible RLC and MAC-ehs / PS RAB + Streaming or Interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] with Fixed RLC and MAC-ehs / PS RAB + UL:[max bit rate depending on UE category and TTI] DL: :[max bit rate depending on UE category] SRBs for DCCH on E-DCH and SRBs with Fixed RLC and MAC-ehs on HS-DSCH / UL: QPSK and DL: QPSK

### 14.7.6b.1 Conformance requirement

See 14.7.1.1.

### 14.7.6b.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.6 for the case for the QPSK and non-MIMO case using the downlink enhanced Layer 2 configuration with MAC-ehs and Fixed and Flexible RLC configured:

1. To verify that the UE is able to establish the radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

### 14.7.6b.3 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-6 IE “E-DCH physical layer category”. All UEs supporting E-DCH should signal a category between 1 and 6 for this IE even if the UE physical capability category is above 6.

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-7 IE “HS-DSCH physical layer category extension”. This IE corresponds to the HS-DSCH category supported by the UE when is configured.

The Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is refered to as RB5 and the Streaming or interactive or background UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is referred to RB6

The following parameters are specific for this test case and RB5 and RB6:

| Parameter | Value |
|---|---|
| Radio bearer | TS 34.108, clause 6.10.2.4.6.6 using downlink MAC-d flow parameters according to Alt 3 (Flexible RLC and MAC-ehs) for RB5; using downlink MAC-d flow parameters according to Alt 2 (Fixed RLC and MAC-ehs) for RB6; and using Alt 2 (Fixed RLC and MAC-ehs) for the SRB#1 to SRB#4. |
| MAC-ehs receiver window size | 16 |
| Alternative E-bit interpretation | TRUE |
| RB5: HS-DSCH MAC-d PDU size | See sub-test table |
| RB6: HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS (note 2) | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 1 | 2 | 512 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 2 | 2 | 512 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 3 | 3 | 512 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 4 | 3 | 512 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 5 | 6 | 512 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 6 | 6 | 512 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 7 | 6 | 1536 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 8 | 6 | 1536 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 9 | 6 | 2047 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 10 | 6 | 2047 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 11 | 3 | 1024 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 12 | 6 | 1024 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 13 | 6 | 2047 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 14 | 6 | 2047 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 15 | 6 | 2047 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 16 | 6 | 2047 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 17 | 6 | 2047 | 344 | 368 | 1 | QPSK | 1 | 31 |
| 18 | 6 | 2047 | 344 | 368 | 1 | QPSK | 1 | 31 |

NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI considering all sub-tests. i.e. such that the MAC-hs transport block size ("Minimum TBS") is bigger than the maximum MAC-d PDU size under test + the MAC-ehs header size.

NOTE 2: For RB5 (UM) the maximum MAC-d PDU size is 344 and the MAC-ehs header size is 24 bits, this result in the maximum required TBS for RB5 of 368 bits. For RB6 (AM) the maximum MAC-d PDU size is 336 and the MAC-ehs header size is 24 bits, this result in the maximum required TBS for RB6 of 360 bits. The HS-PDSCH TFRC need to be selected for a TBS bigger or equal to 368.

The generic test procedure in 14.1.4.1a is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL MAC-d PDU size under test | DL MAC-d PDU size under test | UL RLC SDU size (note 2) | Test data size (note 3) |
|---|---|---|---|---|---|---|---|
| 1 | 1 to 6 | 10ms, Table 0 | 4 | RB5:96<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:80<br>RB6:312 | RB5:96<br>RB6:312 |
| 2 | 1 to 6 | 10ms, Table 0 | 4 | RB5:112<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:96<br>RB6:312 | RB5:96<br>RB6:312 |
| 3 | 1 to 6 | 10ms, Table 0 | 4 | RB5:144<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:128<br>RB6:312 | RB5:128<br>RB6:312 |
| 4 | 1 to 6 | 10ms, Table 0 | 4 | RB5:160<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:144<br>RB6:312 | RB5:144<br>RB6:312 |
| 5 | 1 to 6 | 10ms, Table 0 | 4 | RB5:176<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:160<br>RB6:312 | RB5:160<br>RB6:312 |
| 6 | 1 to 6 | 10ms, Table 0 | 4 | RB5:192<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:176<br>RB6:312 | RB5:176<br>RB6:312 |
| 7 | 1 to 6 | 10ms, Table 0 | 4 | RB5:208<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:192<br>RB6:312 | RB5:208<br>RB6:312 |
| 8 | 1 to 6 | 10ms, Table 0 | 4 | RB5:224<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:208<br>RB6:312 | RB5:208<br>RB6:312 |
| 9 | 1 to 6 | 10ms, Table 0 | 4 | RB5:288<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:272<br>RB6:312 | RB5:280<br>RB6:312 |
| 10 | 1 to 6 | 10ms, Table 0 | 4 | RB5:296<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:288<br>RB6:312 | RB5:280<br>RB6:312 |
| 11 | 1 to 6 | 10ms, Table 0 | 4 | RB5:312<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:296<br>RB6:312 | RB5:328<br>RB6:312 |
| 12 | 1 to 6 | 10ms, Table 0 | 4 | RB5:344<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:328<br>RB6:312 | RB5:328<br>RB6:312 |
| 13 | 2,4,6 | 2ms, Table 0 | 8 | RB5:96<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:80<br>RB6:312 | RB5:96<br>RB6:312 |
| 14 | 2,4,6 | 2ms, Table 0 | 8 | RB5:112<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:96<br>RB6:312 | RB5:96<br>RB6:312 |
| 15 | 2,4,6 | 2ms, Table 0 | 8 | RB5:144<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:128<br>RB6:312 | RB5:128<br>RB6:312 |
| 16 | 2,4,6 | 2ms, Table 0 | 8 | RB5:160<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:144<br>RB6:312 | RB5:144<br>RB6:312 |
| 17 | 2,4,6 | 2ms, Table 0 | 8 | RB5:176<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:160<br>RB6:312 | RB5:160<br>RB6:312 |
| 18 | 2,4,6 | 2ms, Table 0 | 8 | RB5:192 | RB5:Flexible | RB5:176 | RB5:176 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | | | | RB6:336 | RB6:336 | RB6:312 | RB6:312 |
| 19 | 2,4,6 | 2ms, Table 0 | 8 | RB5:208<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:192<br>RB6:312 | RB5:208<br>RB6:312 |
| 20 | 2,4,6 | 2ms, Table 0 | 8 | RB5:224<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:208<br>RB6:312 | RB5:208<br>RB6:312 |
| 21 | 2,4,6 | 2ms, Table 0 | 8 | RB5:288<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:272<br>RB6:312 | RB5:280<br>RB6:312 |
| 22 | 2,4,6 | 2ms, Table 0 | 8 | RB5:296<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:280<br>RB6:312 | RB5:280<br>RB6:312 |
| 23 | 2,4,6 | 2ms, Table 0 | 8 | RB5:312<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:296<br>RB6:312 | RB5:328<br>RB6:312 |
| 24 | 2,4,6 | 2ms, Table 0 | 8 | RB5:344<br>RB6:336 | RB5:Flexible<br>RB6:336 | RB5:328<br>RB6:312 | RB5:328<br>RB6:312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.

NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit). This will enable the UE to return th data within one UL TTI.

NOTE 3: The test data size is for DTCH mapped to E-DCH is selected according to the MAC-d PDU size to be tested = DL RLC payload size for the MAC-d PDU size minus 8 bits (size of 7 bit length indicator and expansion bit).

#### 14.7.6b.4 Test requirements

See 14.1.4.1a for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU on RB5 and RB6 with same content as sent in downlink. For the case the returned UL RLC SDU size under test is smaller than the sent DL RLC SDU size then the payload of the received UL RLC SDU shall have the same content as the first N bits of the DL RLC SDU payload, where N equals the payload size of the UL RLC SDU.

### 14.7.7 Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or Interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + Streaming or Interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL: :[max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH

#### 14.7.7.1 Conformance requirement

See 14.7.1.1.

#### 14.7.7.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.7:

1. To verify that the UE is able to establish the radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

### 14.7.7.3 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-6 IE "E-DCH physical layer category". All UEs supporting E-DCH should signal a category between 1 and 6 for this IE even if the UE physical capability category is above 6.

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The Conversational / unknown or speech / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is refered to as RB5, the first Streaming or interactive or background UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is referred to RB6 and the second the first Streaming or interactive or background UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is referred to RB7.

The following parameters are specific for this test case and RB5, RB6 and RB7:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RB5: HS-DSCH MAC-d PDU size | See sub-test table |
| RB6: HS-DSCH MAC-d PDU size | 336 |
| RB7: HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS (note 2) | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 5 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 6 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 7 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 8 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 9 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 10 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 11 | 3 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 12 | 6 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |

NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI considering all sub-tests. i.e. such that the MAC-hs transport block size ("Minimum TBS") is bigger than the maximum MAC-d PDU size under test + the MAC-hs header size.

NOTE 2: For RB5 (UM) the maximum MAC-d PDU size is 336 and the MAC-hs header size is 21 bits, this result in the maximum required TBS for RB5 of 357 bits. For RB6 and RB7 the maximum MAC-d PDU size is 336 and the MAC-hs header size is 21 bits, this result in the maximum required TBS for RB6 of 357 bits. The HS-PDSCH TFRC need to be selected for a TBS bigger or equal to 357.

The generic test procedure in 14.1.4.1 is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL MAC-d PDU size under test | DL MAC-d PDU size under test | UL RLC SDU size (note 2) | Test data size (note 3) |
|---|---|---|---|---|---|---|---|
| 1 | 1 to 6 | 10ms, Table 0 | 4 | RB5:96<br>RB6:336<br>RB7:336 | RB5:112<br>RB6:336<br>RB7:336 | RB5:80<br>RB6:312<br>RB7:312 | RB5:96<br>RB6:312<br>RB7:312 |
| 2 | 1 to 6 | 10ms, Table 0 | 4 | RB5:112<br>RB6:336<br>RB7:336 | RB5:112<br>RB6:336<br>RB7:336 | RB5:96<br>RB6:312<br>RB7:312 | RB5:96<br>RB6:312<br>RB7:312 |
| 3 | 1 to 6 | 10ms, Table 0 | 4 | RB5:144<br>RB6:336<br>RB7:336 | RB5:144<br>RB6:336<br>RB7:336 | RB5:128<br>RB6:312<br>RB7:312 | RB5:128<br>RB6:312<br>RB7:312 |
| 4 | 1 to 6 | 10ms, Table 0 | 4 | RB5:160<br>RB6:336<br>RB7:336 | RB5:160<br>RB6:336<br>RB7:336 | RB5:144<br>RB6:312<br>RB7:312 | RB5:144<br>RB6:312<br>RB7:312 |
| 5 | 1 to 6 | 10ms, Table 0 | 4 | RB5:176<br>RB6:336<br>RB7:336 | RB5:176<br>RB6:336<br>RB7:336 | RB5:160<br>RB6:312<br>RB7:312 | RB5:160<br>RB6:312<br>RB7:312 |
| 6 | 1 to 6 | 10ms, Table 0 | 4 | RB5:192<br>RB6:336<br>RB7:336 | RB5:192<br>RB6:336<br>RB7:336 | RB5:176<br>RB6:312<br>RB7:312 | RB5:176<br>RB6:312<br>RB7:312 |
| 7 | 1 to 6 | 10ms, Table 0 | 4 | RB5:208<br>RB6:336<br>RB7:336 | RB5:224<br>RB6:336<br>RB7:336 | RB5:192<br>RB6:312<br>RB7:312 | RB5:208<br>RB6:312<br>RB7:312 |
| 8 | 1 to 6 | 10ms, Table 0 | 4 | RB5:224<br>RB6:336<br>RB7:336 | RB5:224<br>RB6:336<br>RB7:336 | RB5:208<br>RB6:312<br>RB7:312 | RB5:208<br>RB6:312<br>RB7:312 |
| 9 | 1 to 6 | 10ms, Table 0 | 4 | RB5:288<br>RB6:336<br>RB7:336 | RB5:296<br>RB6:336<br>RB7:336 | RB5:272<br>RB6:312<br>RB7:312 | RB5:280<br>RB6:312<br>RB7:312 |
| 10 | 1 to 6 | 10ms, Table 0 | 4 | RB5:296<br>RB6:336<br>RB7:336 | RB5:296<br>RB6:336<br>RB7:336 | RB5:280<br>RB6:312<br>RB7:312 | RB5:280<br>RB6:312<br>RB7:312 |
| 11 | 1 to 6 | 10ms, Table 0 | 4 | RB5:312 | RB5:336 | RB5:296 | RB5:320 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| | | | | RB6:336<br>RB7:336 | RB6:336<br>RB7:336 | RB6:312<br>RB7:312 | RB6:312<br>RB7:312 |
| 12 | 1 to 6 | 10ms, Table 0 | 4 | RB5:336<br>RB6:336<br>RB7:336 | RB5:336<br>RB6:336<br>RB7:336 | RB5:320<br>RB6:312<br>RB7:312 | RB5:320<br>RB6:312<br>RB7:312 |
| 13 | 2,4,6 | 2ms, Table 0 | 8 | RB5:96<br>RB6:336<br>RB7:336 | RB5:112<br>RB6:336<br>RB7:336 | RB5:80<br>RB6:312<br>RB7:312 | RB5:96<br>RB6:312<br>RB7:312 |
| 14 | 2,4,6 | 2ms, Table 0 | 8 | RB5:112<br>RB6:336<br>RB7:336 | RB5:112<br>RB6:336<br>RB7:336 | RB5:96<br>RB6:312<br>RB7:312 | RB5:96<br>RB6:312<br>RB7:312 |
| 15 | 2,4,6 | 2ms, Table 0 | 8 | RB5:144<br>RB6:336<br>RB7:336 | RB5:144<br>RB6:336<br>RB7:336 | RB5:128<br>RB6:312<br>RB7:312 | RB5:128<br>RB6:312<br>RB7:312 |
| 16 | 2,4,6 | 2ms, Table 0 | 8 | RB5:160<br>RB6:336<br>RB7:336 | RB5:160<br>RB6:336<br>RB7:336 | RB5:144<br>RB6:312<br>RB7:312 | RB5:144<br>RB6:312<br>RB7:312 |
| 17 | 2,4,6 | 2ms, Table 0 | 8 | RB5:176<br>RB6:336<br>RB7:336 | RB5:176<br>RB6:336<br>RB7:336 | RB5:160<br>RB6:312<br>RB7:312 | RB5:160<br>RB6:312<br>RB7:312 |
| 18 | 2,4,6 | 2ms, Table 0 | 8 | RB5:192<br>RB6:336<br>RB7:336 | RB5:192<br>RB6:336<br>RB7:336 | RB5:176<br>RB6:312<br>RB7:312 | RB5:176<br>RB6:312<br>RB7:312 |
| 19 | 2,4,6 | 2ms, Table 0 | 8 | RB5:208<br>RB6:336<br>RB7:336 | RB5:224<br>RB6:336<br>RB7:336 | RB5:192<br>RB6:312<br>RB7:312 | RB5:208<br>RB6:312<br>RB7:312 |
| 20 | 2,4,6 | 2ms, Table 0 | 8 | RB5:224<br>RB6:336<br>RB7:336 | RB5:224<br>RB6:336<br>RB7:336 | RB5:208<br>RB6:312<br>RB7:312 | RB5:208<br>RB6:312<br>RB7:312 |
| 21 | 2,4,6 | 2ms, Table 0 | 8 | RB5:288<br>RB6:336<br>RB7:336 | RB5:296<br>RB6:336<br>RB7:336 | RB5:272<br>RB6:312<br>RB7:312 | RB5:280<br>RB6:312<br>RB7:312 |
| 22 | 2,4,6 | 2ms, Table 0 | 8 | RB5:296<br>RB6:336<br>RB7:336 | RB5:296<br>RB6:336<br>RB7:336 | RB5:280<br>RB6:312<br>RB7:312 | RB5:280<br>RB6:312<br>RB7:312 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 23 | 2,4,6 | 2ms, Table 0 | 8 | RB5:312<br>RB6:336<br>RB7:336 | RB5:336<br>RB6:336<br>RB7:336 | RB5:296<br>RB6:312<br>RB7:312 | RB5:320<br>RB6:312<br>RB7:312 |
| 24 | 2,4,6 | 2ms, Table 0 | 8 | RB5:336<br>RB6:336<br>RB7:336 | RB5:336<br>RB6:336<br>RB7:336 | RB5:320<br>RB6:312<br>RB7:312 | RB5:320<br>RB6:312<br>RB7:312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.

NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit). This will enable the UE to return th data within one UL TTI.

NOTE 3: The test data size is for DTCH mapped to E-DCH is selected according to the MAC-d PDU size to be tested = DL RLC payload size for the MAC-d PDU size minus 8 bits (size of 7 bit length indicator and expansion bit).

Specific Message Contents

Use the same RADIO BEARER SETUP message as specified in 34.108 using condition A16 with the following exceptions:

| | |
|---|---|
| - RAB information for setup | The IE “RAB information for setup” shall be present in addition to the IE “RAB information for setup” present in the default message for condition A16. This means that three RABs shall be established. |
| - RAB info | (high-speed AM DTCH for PS domain) |
| - RAB identity | 0000 0111B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 27 |
| - PDCP info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 256 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 100 |
| - Timer_poll | 100 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - CHOICE Downlink RLC PDU Size | Reference to clause 6 Parameter Set |
| - In-sequence delivery | TRUE |
| - Receiving window size | 768 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 100 |
| - Timer_EPC | Not Present |

| | |
|---|---|
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - One sided RLC re-establishment | FALSE |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOption |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | E-DCH |
| - Logical channel identity | 8 |
| - E-DCH MAC-d flow identity | 4 |
| - DDI | 7 |
| - RLC PDU size list | 1 RLC PDU size |
| - RLC PDU size | 336 bits |
| - Include in scheduling info | TRUE |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | HS-DSCH |
| - DL DCH Transport channel identity | Not present |
| - DL DSCH Transport channel identity | Not present |
| - DL HS-DSCH MAC-d flow identity | 3 |
| - Logical channel identity | Not Present |
| Added or Reconfigured UL TrCH information | 1 E-DCH added with one DCCH MAC-d flow and three DTCH MAC-d flows |
| - Uplink transport channel type | E-DCH |
| - CHOICE UL parameters | E-DCH |
| - E-DCH Transmission Time Interval | 10 ms |
| - HARQ info for E-DCH | |
| - HARQ RV Configuration | rvtable |
| - Added or reconfigured E-DCH MAC-d flow | (for DCCH) |
| - E-DCH MAC-d flow identity | 1 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Non-scheduled grant info |
| - Max MAC-e PDU contents size | 162 bits |
| - 2 ms non-scheduled transmission grant HARQ process allocation | Not Present |
| - Uplink transport channel type | E-DCH |
| - CHOICE UL parameters | E-DCH |
| - E-DCH Transmission Time Interval | 10 ms |
| - HARQ info for E-DCH | |
| - HARQ RV Configuration | rvtable |
| - Added or reconfigured E-DCH MAC-d flow | (for first DTCH) |
| - E-DCH MAC-d flow identity | 2 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| - Added or reconfigured E-DCH MAC-d flow | (for second DTCH) |
| - E-DCH MAC-d flow identity | 3 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| - Added or reconfigured E-DCH MAC-d flow | (for third DTCH) |
| - E-DCH MAC-d flow identity | 4 |
| - E-DCH MAC-d flow power offset | 0 |
| - E-DCH MAC-d flow maximum number of retransmissions | 7 |
| - E-DCH MAC-d flow multiplexing list | Not Present |
| - CHOICE transmission grant type | Scheduled grant info |
| Added or Reconfigured DL TrCH information | 1 TrCH (HS-DSCH for DTCH and DCCH) |
| - Downlink transport channel type | HS-DSCH |
| - DL Transport channel identity | Not Present |
| - CHOICE DL parameters | HS-DSCH |
| - HARQ Info | |
| - Number of Processes | Reference to clause 6.10.2.4.5 Parameter Set |

| | |
|---|---|
| - CHOICE *Memory Partitioning* | Implicit |
| - Added or reconfigured MAC-d flow | |
| - MAC-hs queue to add or reconfigure list | (four queues) |
| - MAC-hs queue Id | 0 (for first DTCH) |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue Id | 1 (for DCCH) |
| - MAC-d Flow Identity | 1 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 148 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue Id | 2 (for second DTCH) |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue Id | 3 (for third DTCH) |
| - MAC-d Flow Identity | 0 |
| - T1 | 50 |
| - MAC-hs window size | 16 |
| - MAC-d PDU size Info | |
| - MAC-d PDU size | 336 |
| - MAC-d PDU size index | 0 |
| - MAC-hs queue to delete list | Not present |
| - DCH quality target | Not present |

#### 14.7.7.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 18 the UE shall return a RLC SDU on RB5, RB6 and RB7 with same content as sent in downlink. For the case the returned UL RLC SDU size under test is smaller than the sent DL RLC SDU size then the payload of the received UL RLC SDU shall have the same content as the first N bits of the DL RLC SDU payload, where N equals the payload size of the UL RLC SDU.

### 14.7.8 Conversational / speech / UL:(12.65 8.85 6.6) DL:(12.65 8.85 6.6) kbps / CS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH + DL:0.15 kbps SRB#5 for DCCH

#### 14.7.8.1 Conformance requirement

See 14.7.1.1.

#### 14.7.8.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.8:

1. To verify that the UE is able to establish the radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

14.7.8.3 Method of test

Note The reference to E-DCH Category refers to the UE capability as signalled in the Rel-6 IE "E-DCH physical layer category". All UEs supporting E-DCH should signal a category between 1 and 6 for this IE even if the UE physical capability category is above 6.

Note The reference to HS-DSCH Categories refers to the UE capability as signalled in the Rel-5 IE "HS-DSCH physical layer category" (1 to 12). All UEs supporting HS-DSCH should signal a category between 1 and 12 for this IE even if the UE physical capability category is above 12. This IE corresponds to the HS-DSCH category supported by the UE when MAC-ehs is not configured.

The following parameters are specific for this test case:

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH 3.4 |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x72 | 0x181 | 0x60 | 0x148 |
| | TF1, bits | 1x40 | 1x78 | N/A | 1x148 |
| | TF2, bits | 1x54 | 1x113 | N/A | N/A |
| | TF3, bits | 1x64 | 1x181 | N/A | N/A |
| | TF4, bits | 1x72 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH 3.4) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0,TF0) |
| UL_TFC1 | (TF1,TF0,TF0,TF0) |
| UL_TFC2 | (TF2,TF1,TF0,TF0) |
| UL_TFC3 | (TF3,TF2,TF0,TF0) |
| UL_TFC4 | (TF4,TF3,TF0,TF0) |
| UL_TFC5 | (TF0,TF0,TF0,TF1) |
| UL_TFC6 | (TF1,TF0,TF0,TF1) |
| UL_TFC7 | (TF2,TF1,TF0,TF1) |
| UL_TFC8 | (TF3,TF2,TF0,TF1) |
| UL_TFC9 | (TF4,TF3,TF0,TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH 3.4 | DCCH 0.15 (SRB #5) |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x181 | 0x60 | 0x148 | 0x3 |
| | TF1, bits | 1x40 | 1x78 | N/A | 1x148 | 1x3 |
| | TF2, bits | 1x54 | 1x113 | N/A | N/A | N/A |
| | TF3, bits | 1x64 | 1x181 | N/A | N/A | N/A |
| | TF4, bits | 1x72 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH 3.4, DCCH 0.15) |
|---|---|
| DL_TFC0 | (TF0,TF0,TF0,TF0,TF0) |
| DL_TFC1 | (TF1,TF0,TF0,TF0,TF0) |
| DL_TFC2 | (TF2,TF1,TF0,TF0,TF0) |
| DL_TFC3 | (TF3,TF2,TF0,TF0,TF0) |
| DL_TFC4 | (TF4,TF3,TF0,TF0,TF0) |
| DL_TFC5 | (TF0,TF0,TF0,TF1,TF0) |
| DL_TFC6 | (TF1,TF0,TF0,TF1,TF0) |
| DL_TFC7 | (TF2,TF1,TF0,TF1,TF0) |
| DL_TFC8 | (TF3,TF2,TF0,TF1,TF0) |
| DL_TFC9 | (TF4,TF3,TF0,TF1,TF0) |
| DL_TFC10 | (TF0,TF0,TF0,TF0,TF1) |
| DL_TFC11 | (TF1,TF0,TF0,TF0,TF1) |
| DL_TFC12 | (TF2,TF1,TF0,TF0,TF1) |
| DL_TFC13 | (TF3,TF2,TF0,TF0,TF1) |
| DL_TFC14 | (TF4,TF3,TF0,TF0,TF1) |
| DL_TFC15 | (TF0,TF0,TF0,TF1,TF1) |
| DL_TFC16 | (TF1,TF0,TF0,TF1,TF1) |
| DL_TFC17 | (TF2,TF1,TF0,TF1,TF1) |
| DL_TFC18 | (TF3,TF2,TF0,TF1,TF1) |
| DL_TFC19 | (TF4,TF3,TF0,TF1,TF1) |

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 5 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 6 | 6 | 512 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 7 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 8 | 6 | 1536 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 9 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 10 | 6 | 2047 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 11 | 3 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |
| 12 | 6 | 1024 | 336 | 357 | 1 | QPSK | 1 | 19 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size (“Minimum TBS”) is bigger than the maximum MAC-d PDU size under test test data + RLC, MAC-d and MAC-hs header size (21 bits). See 14.1.3.3 (MAC-d PDU size=336). | | | | | | | | |

The generic test procedure in 14.1.4.2 is run for each sub-test.

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech radio bearer.

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | DCH | | | | UL RLC SDU size (note 3) | Test data size (note 4) |
|---|---|---|---|---|---|---|---|---|---|
| | | | | DL TFCS Under test | UL TFCS Under test | Implicitly tested | TFC subset identity (note 5) | | |
| 1 | 1 to 6 | 10ms, Table 0 | 4 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, DL_TFC6, DL_TFC10, UL_TFC0, UL_TFC5, UL_TFC6 | 0 | RB5: 40<br>RB6: 181<br>RB7: 60<br>RB8: 312 | RB5: 40<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 2 | 1 to 6 | 10ms, Table 0 | 4 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, DL_TFC7, DL_TFC10, UL_TFC0, UL_TFC5, UL_TFC7 | 0 | RB5: 54<br>RB6: 78<br>RB7: 60<br>RB8: 312 | RB5: 54<br>RB6: 78<br>RB7: No data<br>RB8: 312 |
| 3 | 2,4 and 6 | 2ms, Table 0 | 8 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, DL_TFC8, DL_TFC10, UL_TFC0, UL_TFC5, UL_TFC8 | 1 | RB5: 64<br>RB6: 113<br>RB7: 60<br>RB8: 312 | RB5: 64<br>RB6: 113<br>RB7: No data<br>RB8: 312 |
| 4 | 2,4 and 6 | 2ms, Table 0 | 8 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, DL_TFC9, DL_TFC10, UL_TFC0, UL_TFC5, UL_TFC9 | 2 | RB5: 72<br>RB6: 181<br>RB7: 60<br>RB8: 312 | RB5: 72<br>RB6: 181<br>RB7: No data<br>RB8: 312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.
NOTE 2: Void
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.
NOTE 4: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.
NOTE 5: TFC subset identity shall be signalled by the SS on the downlink SRB#5, see generic test procedure in clause 14.1.4.2.

#### 14.7.8.4 Test requirements

See 14.1.4.2 for definition of step numbers. For each sub-test:

1. At step 20 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 26 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the sub-test.
3. At step 26 and for each radio bearer where test data is sent in downlink the UE shall return a RLC SDU with same content as sent in downlink. For radio bearers where no data is sent in downlink then no data shall be received in uplink.

### 14.7.9 Conversational / speech / UL:(12.2, 7.95, 5.9, 4.75) kbps DL: (12.2, 7.95, 5.9, 4.75) kbps / CS RAB on E-DCH and HS-DSCH + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH

#### 14.7.9.1 Conformance requirement

See 14.7.1.1.

#### 14.7.9.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.9 (Alt.2)

#### 14.7.9.3 Method of test

The following parameters are specific for this test case:

| E-DCH Category | RLC Transmission window size | Modulation Scheme |
|---|---|---|
| 1 | 512 | QPSK |
| 2 | 512 | |
| 3 | 512 | |
| 4 | 512 | |
| 5 | 1536 | |
| 6 | 1536 | |
| 7 | 1536 | |

| HS-DSCH Category | Number of HARQ processes | RLC Receiving window size |
|---|---|---|
| 1 | 2 | 512 |
| 2 | 2 | 512 |
| 3 | 3 | 512 |
| 4 | 3 | 512 |
| 5 | 6 | 512 |
| 6 | 6 | 512 |
| 7 | 6 | 1536 |
| 8 | 6 | 1536 |
| 9 | 6 | 2047 |
| 10 | 6 | 2047 |
| 11 | 3 | 1024 |
| 12 | 6 | 1024 |
| 13 | 6 | 2047 |
| 14 | 6 | 2047 |
| 15 | 6 | 2047 |
| 16 | 6 | 2047 |
| 17 | 6 | 2047 |
| 18 | 6 | 2047 |

| HS-PDSCH TFRC for mac-ehs (note 1) | | | | | |
|---|---|---|---|---|---|
| Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 56 | 80 | 1 | QPSK | 1 | 0 |
| 112 | 136 | 1 | QPSK | 1 | 2 |
| 136 | 160 | 1 | QPSK | 1 | 5 |
| 176 | 200 | 1 | QPSK | 1 | 10 |
| 264 | 288 | 1 | QPSK | 1 | 22 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-ehs transport block size is equal to or bigger than the maximum MAC-d PDU size under test + MAC-ehs header size (24 bits). | | | | | |

The generic test procedure in 14.1.4.1a is run for each sub-test.

Testing of UE supporting UE HS-DSCH physical layer category 13 to 18 shall be performed in accordance to test parameters, sub-tests and test points for UE HS-DSCH physical layer category 10.

Testing of UE supporting UE E-DCH category 7 shall be performed in accordance to test parameters, sub-tests and test points for E-DCH category 6.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | MAC-d PDU size under test ( UL and DL ) | UL RLC SDU size (note 2) | Test data size (note 3) |
|---|---|---|---|---|---|---|
| 1 | 1 to 7 | 10ms, Table 0 | 4 | 56 | 48 | 48 |
| 2 | 2,4, 6, 7 | 2ms, Table 0 | 8 | 56 | 48 | 48 |
| 3 | 1 to 7 | 10ms, Table 0 | 4 | 112 | 104 | 104 |
| 4 | 2,4, 6, 7 | 2ms, Table 0 | 8 | 112 | 104 | 104 |
| 5 | 1 to 7 | 10ms, Table 0 | 4 | 136 | 128 | 128 |
| 6 | 2,4, 6, 7 | 2ms, Table 0 | 8 | 136 | 128 | 128 |
| 7 | 1 to 7 | 10ms, Table 0 | 4 | 176 | 168 | 168 |
| 8 | 2,4, 6, 7 | 2ms, Table 0 | 8 | 176 | 168 | 168 |
| 9 | 1 to 7 | 10ms, Table 0 | 4 | 264 | 256 | 256 |
| 10 | 2,4, 6, 7 | 2ms, Table 0 | 8 | 264 | 256 | 256 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.
NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.

#### 14.7.9.4 Test requirements

See 14.1.4.1a for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU on RB5 with same content as sent in downlink.

### 14.7.10 Conversational / speech / UL:(12.65, 8.85, 6.6) kbps DL: (12.65, 8.85, 6.6) kbps / CS RAB on E-DCH and HS-DSCH + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH

#### 14.7.10.1 Conformance requirement

See 14.7.1.1.

#### 14.7.10.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.2.4.6.10 (Alt.2)

#### 14.7.10.3 Method of test

The following parameters are specific for this test case:

| E-DCH Category | RLC Transmission window size | Modulation Scheme |
|---|---|---|
| 1 | 512 | QPSK |
| 2 | 512 | |
| 3 | 512 | |
| 4 | 512 | |
| 5 | 1536 | |
| 6 | 1536 | |
| 7 | 1536 | |

| HS-DSCH Category | Number of HARQ processes | RLC Receiving window size |
|---|---|---|
| 1 | 2 | 512 |
| 2 | 2 | 512 |
| 3 | 3 | 512 |
| 4 | 3 | 512 |
| 5 | 6 | 512 |
| 6 | 6 | 512 |
| 7 | 6 | 1536 |
| 8 | 6 | 1536 |
| 9 | 6 | 2047 |
| 10 | 6 | 2047 |
| 11 | 3 | 1024 |
| 12 | 6 | 1024 |
| 13 | 6 | 2047 |
| 14 | 6 | 2047 |
| 15 | 6 | 2047 |
| 16 | 6 | 2047 |
| 17 | 6 | 2047 |
| 18 | 6 | 2047 |

| HS-PDSCH TFRC for mac-ehs (note 1) | | | | | |
|---|---|---|---|---|---|
| Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number of codes | TFRI |
| 56 | 80 | 1 | QPSK | 1 | 0 |
| 152 | 176 | 1 | QPSK | 1 | 7 |
| 200 | 224 | 1 | QPSK | 1 | 13 |
| 272 | 296 | 1 | QPSK | 1 | 22 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-ehs transport block size is equal to or bigger than the maximum MAC-d PDU size under test + MAC-ehs header size (24 bits). | | | | | |

The generic test procedure in 14.1.4.1a is run for each sub-test.

Testing of UE supporting UE HS-DSCH physical layer category 13 to 18 shall be performed in accordance to test parameters, sub-tests and test points for UE HS-DSCH physical layer category 10.

Testing of UE supporting UE E-DCH category 7 shall be performed in accordance to test parameters, sub-tests and test points for E-DCH category 6.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | MAC-d PDU size under test ( UL and DL ) | UL RLC SDU size (note 2) | Test data size (note 3) |
|---|---|---|---|---|---|---|
| 1 | 1 to 7 | 10ms, Table 0 | 4 | 56 | 48 | 48 |
| 2 | 2,4, 6, 7 | 2ms, Table 0 | 8 | 56 | 48 | 48 |
| 3 | 1 to 7 | 10ms, Table 0 | 4 | 152 | 144 | 144 |
| 4 | 2,4, 6, 7 | 2ms, Table 0 | 8 | 152 | 144 | 144 |
| 5 | 1 to 7 | 10ms, Table 0 | 4 | 200 | 192 | 192 |
| 6 | 2,4, 6, 7 | 2ms, Table 0 | 8 | 200 | 192 | 192 |
| 7 | 1 to 7 | 10ms, Table 0 | 4 | 272 | 264 | 264 |
| 8 | 2,4, 6, 7 | 2ms, Table 0 | 8 | 272 | 264 | 264 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.
NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.

### 14.7.10.4 Test requirements

See 14.1.4.1a for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU on RB5 with same content as sent in downlink.

# 15 Supplementary Services

This clause is FFS.

# 16 Short message service (SMS)

Ref.: 3GPP TS 23.040, 3GPP TS 24.011 (point to point)
3GPP TS 23.041, (cell broadcast)

General

The purpose of these tests is to verify that the UE can handle Iu mode system functions when submitting or receiving Short Messages (SM) between UE and a short message service centre as described in 3GPP TS 23.040.

The procedures are based upon services provided by the Mobility Management (MM) sublayer and GPRS Mobility Managemant(GMM) sublayer which are not tested in this case.

The SMS comprises three basic services; SMS point to point services on CS mode, on PS mode and SMS cell broadcast service. The SMS point to point services on CS mode shall work in an active UE at any time independent of whether or not there is a speech or data call in progress. The SMS point to point services on PS mode shall work in an active UE at any time independent of whether or not there is a PDP context in progress. The SMS cell broadcast service only works when the UE is in idle mode.

Since the timer TC1M currently is not standardized, the value of TC1M shall be declared by the manufacturer (to be used in clauses 16.1.1 and 16.1.2).

The manufacturer shall declare whether SMS messages are stored in the USIM and/or the ME. This shall be referred to as the SMS message store in the following tests.

Unless otherwise stated default message contents from 3GPP TS 34.108 applies for following tests.

## 16.1 Short message service point to point on CS mode

All of test cases in this clause are applied to UE supporting CS mode.

### 16.1.1 SMS mobile terminated

#### 16.1.1.1 Definition

#### 16.1.1.2 Conformance requirements

An active UE shall be able to receive short message TPDU (SMS-DELIVER) at any time, independently of whether or not there is a speech or data call in progress. A report will always be returned to the SC, confirming that the UE has received the short message.

Reference

3GPP TS 23.040 clause 3.1.

#### 16.1.1.3 Test purpose

To verify the ability of a UE to receive and decode the SMS where provided for the point to point service.

#### 16.1.1.4 Method of test

Initial Conditions

- System simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the SMS message storage shall be empty.

Related ICS/IXIT Statements

Support for Short message MT/PP.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

Support for call control state U10.

Maximum number of retransmissions of an unacknowledged CP-DATA message.

Test procedure

a) The UE terminates the establishment of Radio Resource Connection. After the completion of the RRC Connection the SS authenticates the UE.

After the SS receives SECURITY MODE COMPLETE, the SS sends a CP-DATA message. The information element of the CP-DATA message will be RP-DATA RPDU (SMS DELIVER TPDU).

b) The SS waits a maximum of 25 s for the CP-ACK message and then a maximum of 60 s for the CP-DATA message containing the RP-ACK RPDU.

c) The SS sends a CP-ACK to the UE within TC1M with no further CP-DATA messages and the SS initiates RRC Connection release.

d) Steps a), b) and c) are repeated but the first CP-DATA message from the UE is not acknowledged. The second CP-DATA message from the UE is acknowledged by a CP-ACK within a time TC1M.

e) Steps a) and b) are repeated. The SS is configured not to send CP-ACK. Then maximum 3 CP-DATA retransmissions may occur. After a duration of 4 times TC1M + 10 s (Maximum of T3240) SS initiates the channel release. This is the appropriate time to wait to verify that the UE does not send more than the maximum allowed (3) CP-DATA retransmissions.

f) The SMS message store shall be cleared manually by the operator.

g) A data or speech call is established on a DTCH with the SS and the state U10 of call control is entered.

The SS sends a CP-DATA message. The information element of the CP-DATA message will be RP-DATA RPDU (SMS DELIVER TPDU). The SS waits a maximum of 25 s for the CP-ACK message and then a maximum of 60 s for the CP-DATA message containing the RP-ACK RPDU.

h) The SS sends a CP-ACK to the UE within TC1M with no further CP-DATA messages. SS will wait for a period of 120ms. for the UE to send acknowledgement to the CP-ACK prior to the SS initiating the DISCONNECT. The SS initiates RRC Connection release. The SMS message store shall be cleared manually by the operator.

i) Steps g) and h) are repeated but the first CP-DATA message from the UE is not acknowledged. The second CP-DATA message from the UE is acknowledged by a CP-ACK within a time TC1M.

j) Step g) is repeated. The SS is configured not to send CP-ACK. Then maximum 3 CP-DATA retransmissions may occur. After a duration of 4 times TC1M + 10 s (Maximum of T3240) SS initiates the channel release. This is the appropriate time to wait to verify that the UE does not send more than the maximum allowed (3) CP-DATA retransmissions (during a call in progress).

k) A data or speech call is established on a DTCH with the SS and the state U10 of call control shall be entered. The speech call is cleared by the SS with a disconnect message. (The call clearing is continued on the DCCH in parallel to the following exchange of messages related to SMS).

The SS sends a CP-DATA RPDU (SMS DELIVER TPDU) message. The information element of the CP-DATA message is RP-DATA.

The SS waits a maximum of 25 s for the CP-ACK message and then a maximum of 60 s for the CP-DATA message containing the RP-ACK RPDU.

The SS sends a CP-ACK to the UE within TC1M with no further CP-DATA messages and the SS initiates channel release.

The SMS message store shall be cleared manually by the operator.

l) A data or speech call is established with the SS and the state U10 of call control is entered. The speech call shall be cleared from the UE. (The call clearing is continued in parallel to the following exchange of messages related to SMS).

The SS sends a CP-DATA message. The information element of the CP-DATA message is RP-DATA RPDU (SMS DELIVER TPDU).

The SS waits a maximum of 25 s for the CP-ACK message and then a maximum of 60 s for the CP-DATA message containing the RP-ACK RPDU.

The SS sends a CP-ACK to the UE within TC1M with no further CP-DATA messages and the SS initiates RRC Connection release.

The SMS message store shall be cleared manually by the operator.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS 34.108. The IE “Paging cause” in the PAGING TYPE 1 message is set to “Terminating Low Priority Signalling”. The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Terminating Low Priority Signalling”. |
| 2 | --> | | PAGING RESPONSE | |
| 3 | <-- | | AUTHENTICATION REQUEST | |
| 4 | --> | | AUTHENTICATION RESPONSE | |
| 5 | | SS | | The SS starts integrity protection |
| 6 | | | (void) | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 8 | | SS | | Waits max 25 s for CP-ACK |
| 9 | --> | | CP-ACK | |
| 10 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 11 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 12 | <-- | | CP-ACK | |
| 13 | | SS | | The SS releases the RRC connection |
| 14 | | UE | | The UE shall indicate that an SM has arrived. |
| 15 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS 34.108. The IE “Paging cause” in the PAGING TYPE 1 message is set to “Terminating Low Priority Signalling”. The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Terminating Low Priority Signalling”. |
| 16 | --> | | PAGING RESPONSE | |
| 17 | <-- | | AUTHENTICATION REQUEST | |
| 18 | --> | | AUTHENTICATION RESPONSE | |
| 19 | | SS | | The SS starts integrity protection |
| 20 | | | (void) | |
| 21 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 22 | | SS | | Waits max 25 s for CP-ACK |
| 23 | --> | | CP-ACK | |
| 24 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 25 | --> | | CP-DATA | First CP-DATA from UE, contains RP-ACK RPDU |
| 26 | | SS | | First CP-DATA message not acknowledged by SS |
| 27 | --> | | CP-DATA | Retransmitted CP-DATA from UE within twice TC1M, after step 25, contains RP-ACK RPDU |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 28 | <-- | | CP-ACK | Second CP_DATA message is acknowledged |
| 29 | | SS | | The SS releases the RRC connection |
| 30 | UE | | | The UE shall indicate that an SM has arrived. |
| 31 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS 34.108. The IE "Paging cause" in the PAGING TYPE 1 message is set to "Terminating Low Priority Signalling". The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Terminating Low Priority Signalling". |
| 32 | --> | | PAGING RESPONSE | |
| 33 | <-- | | AUTHENTICATION REQUEST | |
| 34 | --> | | AUTHENTICATION RESPONSE | |
| 35 | | SS | | The SS starts integrity protection |
| 36 | | | (void) | |
| 37 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 38 | | SS | | Waits max 25 s for CP-ACK |
| 39 | --> | | CP-ACK | |
| 40 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 41 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 42 | | SS | | First CP-DATA message not acknowledged by SS |
| 43 | | | CP-DATA | Retransmitted CP-DATA from UE within twice TC1M after step 41, contains RP-ACK RPDU |
| 44 | | SS | | Retransmitted CP-DATA message not acknowledged by SS |
| 45 | UE | | | Depending upon the maximum number of CP-DATA retransmissions implemented, step 43 and 44 may be repeated. The maximum number of retransmissions may however not exceed three. The UE may also send less than 3 re-transmissions. The same RRC connection shall be used for CP-DATA retransmissions. |
| 45a | UE | | | The UE may send a Signalling Connection Release Indication message immediately when TC1M has run out. This is according to TS 24.011 clause 5.3.2.1. |
| 46 | | SS | | The SS releases the RRC connection after a duration of 4*TC1M + 10 s (Maximum of T3240) from step 41. |
| 47 | | | (void) | |
| 48 | UE | | | The UE shall indicate that an SM has arrived. |
| 49 | | SS | | A data or speech call is established on a DTCH and the state U10 of call control is entered. |
| 50 | | | (void) | |
| 51 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 52 | | SS | | Waits max 25 s for CP-ACK |
| 53 | --> | | CP-ACK | |
| 54 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 55 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 56 | <-- | | CP-ACK | |
| 56a | | SS | | SS will wait for 120 ms for the ACK SUFI. |
| 57 | <-- | | DISCONNECT | Disconnect the active call |
| 58 | --> | | RELEASE | |
| 58a | ← | | RELEASE COMPLETE | |
| 58b | | SS | | The SS releases the RRC connection |
| 59 | UE | | | The UE shall indicate that an SM has arrived. |
| 60 | UE | | | Clear the SMS message store |
| 61 | | SS | | A data or speech call is established on a DTCH and the state U10 of call control is entered. |
| 62 | | | (void) | |
| 63 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 64 | | SS | | Waits max 25 s for CP-ACK |
| 65 | --> | | CP-ACK | |
| 66 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 67 | --> | | CP-DATA | First CP-DATA from UE, contains RP-ACK RPDU |
| 68 | | SS | | First CP-DATA message not acknowledged by SS |
| 69 | --> | | CP-DATA | Retransmitted CP-DATA message within twice TC1M after step 67, contains RP-ACK RPDU |
| 70 | <-- | | CP-ACK | Second CP-DATA message is acknowledged |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 70a | | SS | | SS will wait for 120 ms for the ACK SUFI. |
| 71 | <-- | | DISCONNECT | Disconnect the active call |
| 72 | --> | | RELEASE | |
| 73 | ← | | RELEASE COMPLETE | |
| 74 | | SS | | The SS releases the RRC connection |
| 75 | UE | | | The UE shall indicate that an SM has arrived. |
| 76 | UE | | | Clear the SMS message store |
| 77 | | SS | | A data or speech call is established on a DTCH and the state U10 of call control is entered. |
| 78 | | | (void) | |
| 79 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 80 | | SS | | Waits max 25 s for CP-ACK |
| 81 | --> | | CP-ACK | |
| 82 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 83 | --> | | CP-DATA | First CP-DATA from UE, contains RP-ACK RPDU |
| 84 | | SS | | First CP-DATA message not acknowledged by SS |
| 85 | --> | | CP-DATA | Retransmitted CP-DATA message within twice TC1M after step 83, contains RP-ACK RPDU |
| 86 | | SS | | Retransmitted CP-DATA message not acknowledged by SS |
| 87 | UE | | | Depending on the maximum number of CP-DATA retransmissions implemented, step 85-86 may be repeated. The maximum number of retransmissions may however not exceed three. The UE may also send less than 3 re-transmissions. The same RRC connection shall be used for CP-DATA retransmissions. |
| 87a | ← | | DISCONNECT | Disconnect the active call |
| 87b | → | | RELEASE | |
| 87c | ← | | RELEASE COMPLETE | |
| 88 | | | (void) | |
| 89 | | SS | | The SS releases the RRC connection after a duration of 4*TC1M + 10 s (Maximum of T3240) from step 83. |
| 90 | UE | | | The UE shall indicate that an SM has arrived. |
| 91 | UE | | | Clear the SMS message store |
| 92 | | SS | | A data or speech call is established on a DTCH and the state U10 of call control is entered. |
| 93 | | | (void) | |
| 94 | <-- | | DISCONNECT | The speech call is cleared by the SS. The call clearing is continued in parallel to the following exchange of messages related to SMS. |
| 95 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 96 | | | void | |
| 96a | → | | RELEASE | UE releases the connection |
| 96b | ← | | RELEASE COMPLETE | SS completes the connection release (Step 96a and 96b may be executed after step 97) |
| 97 | --> | | CP-ACK | |
| | | | Void | |
| 98 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 99 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 100 | <-- | | CP-ACK | |
| 101 | | SS | | The SS releases the RRC connection. |
| 102 | UE | | | The UE shall indicate that an SM has arrived. |
| 103 | UE | | | Clear the SMS message store |
| 104 | | SS | | A data or speech call is established on a DTCH and the state U10 of call control is entered. |
| 105 | | | (void) | |
| 106 | --> | | DISCONNECT | The speech call is cleared from the UE. The call clearing is continued in parallel to the following exchange of messages related to SMS. |
| 107 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 108 | <-- | | RELEASE | This message is likely to be sent before all of the CP-DATA message has been sent on the DCCH. |
| 109 | --> | | RELEASE COMPLETE | |
| 110 | --> | | CP-ACK | shall be sent before 25 s after the start of step 107 |
| 111 | | SS | | Waits max 60 s for RP-ACK RPDU |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 112 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 113 | <-- | | CP-ACK | |
| 114 | SS | | | The SS releases the RRC connection |
| 115 | UE | | | The UE shall indicate that an SM has arrived. |
| 116 | UE | | | Clear the SMS message store |
| NOTE: Time values for SS wait time are chosen sufficiently high to be sure that the UE has enough time to respond to the different messages. | | | | |

Specific Message Contents

SMS DELIVER TPDU (not containing a type 0 message)

| Information element | Comment Value |
|---|---|
| TP-PID | Different from Type 0: “01000000”B |
| TP-UDL | 160 |
| TP-UD (140 octets) | text of message (160 characters) |
| NOTE: The 160 characters in TP-UD shall include at least one occurrence of each character in the default alphabet (see 3GPP TS 23.038, clause 6.2.1). | |

### 16.1.1.5 Test requirements

After step 7 UE shall receive SMS-DELIVER TPDU and send CP-ACK within 25 s and CP-DATA containing RP-ACK within 60 s after sending CP-ACK.

After step 14 UE shall indicate that an SM has arrived.

After step 25 UE shall retransmit CP-DATA containing RP-ACK within twice TC1M.

After step 30 UE shall indicate that an SM has arrived.

After step 43 UE shall repeat CP-DATA retransmissions and the maximum number of retransmissions must not exceed three.

After step 48 UE shall indicate that an SM has arrived.

After step 51 UE shall receive SMS-DELIVER TPDU and send CP-ACK within 25 s and CP-DATA containing RP-ACK within 60 s after sending CP-ACK.

After step 59 UE shall indicate that an SM has arrived.

After step 67 UE shall retransmit CP-DATA containing RP-ACK within twice TC1M.

After step 75 UE shall indicate that an SM has arrived.

After step 79 UE shall repeat CP-DATA retransmissions and the maximum number of retransmissions must not exceed three.

After step 90 UE shall indicate that an SM has arrived.

After step 95 UE shall receive SMS-DELIVER TPDU and send CP-ACK within 25 s and CP-DATA containing RP-ACK within 60 s after sending CP-ACK.

After step 102 UE shall indicate that an SM has arrived.

After step 107 UE shall receive SMS-DELIVER TPDU and send CP-ACK within 25 s and CP-DATA containing RP-ACK within 60 s after sending CP-ACK.

After step 115 UE shall indicate that an SM has arrived.

## 16.1.2 SMS mobile originated

### 16.1.2.1 Definition

### 16.1.2.2 Conformance requirements

An active UE shall be able to submit short message TPDU (SMS-SUBMIT) at any time, independently of whether or not there is a speech or data call in progress.

#### Reference

3GPP TS 23.040 clause 3.1.

### 16.1.2.3 Test purpose

To verify that the UE is able to correctly send a short message where the SMS is provided for the point to point service.

### 16.1.2.4 Method of test

#### Initial Conditions

- System simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the SMS message storage shall be empty.

#### Related ICS/IXIT Statements

Support for Short message MO/PP.

Support for state U10 of call control.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

Maximum number of retransmissions of an unacknowledged CP-DATA message.

#### Test procedure

a) The UE shall be set up to send an SM to the SS. The UE establishes successfully an RRC connection.

b) The SS performs authentication and after that, the SS starts integrity protection.

c) The SS responds to the CP-DATA containing RP-DATA RPDU (SMS SUBMIT TPDU) from the UE with a CP-ACK message within TC1M followed by a CP-DATA message containing the correct RP-ACK RPDU. The SS waits a maximum of 25 s for the CP-ACK message.

d) The SS sends a channel release message to the UE.

e) Steps a) and b) are repeated. The SS is configured not to send the CP-ACK message. Then maximum 3 CP-DATA retransmissions may occur. After a duration of 4 times TC1M + 10 s (Maximum of T3240) the SS initiates channel release. This is the appropriate time to wait to verify that the UE does not send more than the maximum CP-DATA retransmissions.

f) Steps a) and b) are repeated. On receipt of the CP-DATA from the UE the SS sends a CP-ERROR message within TC1M containing a "Network Failure" cause. Then the SS initiates channel release.

g) A data or speech call is established with the SS and the state U10 of call control is entered. The UE is set up to send an SM to the SS. After the reception of the CM SERVICE REQUEST, the SS sends a CM SERVICE ACCEPT message.

h) The SS responds to the CP-DATA containing RP-DATA RPDU (SMS SUBMIT TPDU) from the UE with a CP-ACK message within TC1M followed by a CP-DATA message containing the correct RP-ACK RPDU. The SS waits a maximum of 25 s for the CP-ACK message. Then the SS sends a channel release message to the UE.

i) Step g) is repeated. The SS is configured not to send the CP-ACK message. Then maximum 3 CP-DATA retransmissions may occur. After a duration of 4 times TC1M + 10 s (Maximum of T3240) the SS initiates channel release. This is the appropriate time to wait to verify that the UE does not send more than the maximum CP-DATA retransmissions (during a call in progress).

j) (void)

k) The UE is set up to send an SM to the SS. On receipt of the CM SERVICE REQUEST the SS sends a CM SERVICE REJECT message with the reject cause set to "Service Option not supported" or "Service Option temporarily out of order". After 5 s the SS initiates channel release.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set up to send an SM |
| 2 | SS | | | The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originating Low Priority Signalling”. |
| 3 | <-- | | Void | |
| 4 | --> | | Void | |
| 5 | --> | | CM SERVICE REQUEST | CM service type set to "Short Message Service" |
| 6 | <-- | | AUTHENTICATION REQUEST | |
| 7 | --> | | AUTHENTICATION RESPONSE | |
| 8 | SS | | | The SS starts integrity protection |
| 9 | | | Void | |
| 10 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 11 | <-- | | CP-ACK | Sent within TC1M after step 10 |
| 12 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 13 | SS | | | Waits max 25 s for CP-ACK |
| 14 | --> | | CP-ACK | |
| 15 | SS | | | The SS releases the RRC connection. |
| 16 | UE | | | The UE is set up to send an SM |
| 17 | SS | | | The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originating Low Priority Signalling”. |
| 18 | | | Void | |
| 19 | | | Void | |
| 20 | | | Void | |
| 21 | | | (void) | |
| 22 | --> | | CM SERVICE REQUEST | CM service type set to "Short Message Service" |
| 23 | <-- | | AUTHENTICATION REQUEST | |
| 24 | --> | | AUTHENTICATION RESPONSE | |
| 25 | <-- | | SECURITY MODE COMMAND | |
| 26 | --> | | SECURITY MODE COMPLETE | |
| 27 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 28 | SS | | | SS configured not to send CP-ACK |
| 29 | --> | | CP-DATA | Retransmitted CP-DATA message within twice TC1M after step 27 |
| 30 | UE | | | Depending on the maximum number of CP-DATA retransmissions implemented, step 29 may be repeated. The maximum number of retransmissions may however not exceed three. The UE may also send less than 3 re-transmissions. The same RRC connection shall be used for CP-DATA retransmissions. |
| 30aa | UE | | | The UE may send a Signalling Connection Release Indication message immediately when TC1M has run out. This is according to TS 24.011 clause 5.3.2.1. |
| 30a | SS | | | The SS releases the RRC connection after a duration of 4*TC1m + 10 s (Maximum of T3240) from step 27. |
| 30b | | | (void) | |
| 31 | | | (void) | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 32 | UE | | | The UE is set up to send an SM |
| 33 | SS | | | The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originating Low Priority Signalling”. |
| 34 | | | (void) | |
| 35 | | | (void) | |
| 36 | | | (void) | |
| 37 | --> | | CM SERVICE REQUEST | CM service type set to "Short Message Service" |
| 38 | <-- | | AUTHENTICATION REQUEST | |
| 39 | --> | | AUTHENTICATION RESPONSE | |
| 40 | SS | | | The SS starts integrity protection |
| 41 | | | (void) | |
| 42 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 43 | <-- | | CP-ERROR | Sent within TC1M containing "Network Failure" cause. |
| 44 | SS | | | The SS releases the RRC connection. |
| 45 | | | (void) | |
| 46 | SS | | | A data or speech call is established on a DTCH and the state U10 of call control is entered. |
| 47 | UE | | | The UE is set up to send an SM |
| 48 | --> | | CM SERVICE REQUEST | CM service type set to "short message " |
| 49 | <-- | | CM SERVICE ACCEPT | |
| 50 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 51 | <-- | | CP-ACK | Sent within TC1M after step 50 |
| 52 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 53 | SS | | | Waits max 25 s for CP-ACK |
| 54 | --> | | CP-ACK | |
| 55 | SS | | | The SS releases the RRC connection. |
| 56 | | | (void) | |
| 57 | SS | | | A data or speech call is established on a DTCH and the state U10 of call control is entered. |
| 57a | UE | | | The UE is set up to send an SM |
| 58 | --> | | CM SERVICE REQUEST | CM service type set to "Short Message Service", upon CP-DATA retransmission new RRC connection has to be established, see step 64a. |
| 59 | <-- | | CM SERVICE ACCEPT | |
| 60 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 61 | SS | | | SS configured not to send CP-ACK |
| 62 | --> | | CP-DATA | Reransmitted CP-DATA message within twice TC1M after step 60 |
| 63 | UE | | | Depending on the maximum number of CP-DATA retransmissions implemented, step 62 may be repeated. The maximum number of retransmissions may however not exceed three. The UE may also send less than 3 re-transmissions. The same RRC connection shall be used for CP-DATA retransmissions. |
| 63a | | | (void) | |
| 64 | SS | | | The SS releases the RRC connection after a duration of 4*TC1m + 10 s (Maximum of T3240) from step 60. |
| 64a | | | (void) | |
| 65 | | | (void) | |
| 66-78 | | | (void) | |
| 79 | UE | | | The UE is set up to send an SM |
| 80 | SS | | | The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originating Low Priority Signalling”. |
| 81 | | | (void) | |
| 82 | --> | | CM SERVICE REQUEST | CM service type set to "Short Message Service" |
| 83 | <-- | | CM SERVICE REJECT | Reject cause set to "Service Option not supported" or "Service Option temporarily out of order" |
| 84 | | | (void) | |
| 85 | SS | | | The SS releases the RRC connection. 5 s after CM SERVICE REJECT |
| 86 | | | (void) | |

NOTE: Time values for SS wait times are chosen sufficiently high to be sure that the UE has enough time to respond to the different messages.

Specific Message Contents

SMS SUBMIT TPDU

| Information element | Comment Value |
|---|---|
| TP-UDL<br>TP-UD (140 octets) | as applicable<br>160 ASCII characters |

#### 16.1.2.5 Test requirements

After step 10 UE shall send a CP-DATA containing RP-data. The RP-DATA shall contain SMS SUBMIT TPDU.

After step 27 UE shall retransmit a CP-DATA containing RP-data and the maximum number of retransmissions must not exceed three. The RP-DATA shall contain SMS SUBMIT TPDU.

After step 50 UE shall send a CP-DATA containing RP-data. The RP-DATA shall contain SMS SUBMIT TPDU.

After step 62 UE shall retransmit a CP-DATA containing RP-data and the maximum number of retransmissions must not exceed three. The RP-DATA shall contain SMS SUBMIT TPDU.

After step 85 UE shall not send any CP-DATA.

### 16.1.3 Test of memory full condition and memory available notification:

The Memory Available Notification provides a means for the UE to notify the network that it has memory available to receive one or more short messages. The SMS status field in the USIM contains status information on the "memory available" notification flag.

#### 16.1.3.1 Definition

#### 16.1.3.2 Conformance requirement

1. When a mobile terminated message is Class 2, the UE shall ensure that the message has been transferred to the SMS data field in the USIM before sending an acknowledgement to the SC. The UE shall return a protocol error message if the short message cannot be stored in the USIM and there is other short message storage available in the UE. If all the short message storage in the UE is already in use, the UE shall return "memory capability exceeded".

2. When the UE rejects a short message due to lack of available memory capability the need to transfer notification shall be stored in the USIM.

3. If the memory capability becomes available because memory is cleared, the value of the memory capability exceeded notification flag in the USIM is read. If the flag is set, the UE notifies the network that memory capability is now available. After a positive acknowledgement from the network, the ME unsets the memory capability exceeded notification flag in the USIM.

References

- 3GPP TS 23.038 clause 4

- 3GPP TS 23.040 clauses 9.2.3.10, 10.3 (operation 14)..

#### 16.1.3.3 Test purpose

1. To verify that the UE sends the correct acknowledgement when its memory in the USIM becomes full.

2. To verify that the UE sends the correct acknowledgement when its memory in the ME and the USIM becomes full, and sets the "memory exceeded" notification flag in the USIM.

3. To verify that the UE performs the "memory available" procedure when its message store becomes available for receiving short messages, and only at this moment.

16.1.3.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the SMS message storage shall be empty;
  - the UE shall be connected to the USIM simulator. The following shall be present in the USIM simulator:
    - $EF_{SMS}$ with at least one record;
    - $EF_{SMSS}$, with SMS "Memory Cap. Exceed" notification flag set to "memory available";
    - Service no. 10 (SMS) in $EF_{UST}$ set to allocated and activated.
  - for storing of Class 1 Short Messages the UE shall be set up to store Short Messages in the ME memory (by way of MMI, as described in ICS/IXIT statement).

Related ICS/IXIT Statements

Support for Short message MT/PP.

Whether SMS messages are stored in the USIM and/or the ME.

The value of timer TC1M.

Test procedure

a) step a) of clause 16.1.5.3 (test of Class 2 Short Messages) is repeated until the UE sends a negative acknowledgement (RP-ERROR). The USIM simulator shall indicate if the "memory capability exceeded" notification flag has been set on the USIM.

b) a Class 1 Short Message is sent to the UE.

c) step b) is repeated until the UE sends a negative acknowledgement (RP-ERROR). The USIM simulator shall indicate if the "memory capability exceeded" notification flag has been set on the USIM.

d) a Short Message is sent to the UE with the DCS field of the SMS-DELIVER TPDU set to 0.

e) the SS prompts the operator to read a short message and to remove it from the message store of the UE.

f) the SS waits for a RRC CONNECTION REQUEST from the UE, and sends a RRC CONNECTION SETUP.

g) after the SS receives a RRC CONNECTION SETUP COMPLETE, the SS authenticates the UE and activates ciphering.

h) the SS answers to the RP-SMMA from the UE with a CP-DATA containing a RP-ACK RPDU.

i) after the UE has acknowledged the CP-DATA with a CP-ACK, the SS releases the RRC connection. The USIM simulator shall indicate if the "memory capability exceeded" notification flag has been unset on the USIM.

j) step e) is repeated.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | PAGING RESPONSE | |
| 3 | <-- | | AUTHENTICATION REQUEST | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 4 | --> | | AUTHENTICATION RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 2 Short Message |
| 8 | SS | | | Waits max 25 s for CP-ACK |
| 9 | --> | | CP-ACK | |
| 10 | SS | | | Waits max 60 s for RP-ACK RPDU |
| 11 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 12 | <-- | | CP-ACK | Within TC1M after step 11 |
| 13 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. Step 1-13 is repeated until UE sends a negative acknowledgement (RP-ERROR) in step 11. The RP-ERROR RPDU cause field shall be "Protocol error, unspecified" if there is message capability in the USIM, or "Memory capability exceeded" if there is no message capability in the USIM. If the total memory store of the UE is full, the ME shall set the "memory capability exceeded" notification flag on the USIM. |
| 14 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 15 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 16 | --> | | PAGING RESPONSE | |
| 17 | <-- | | AUTHENTICATION REQUEST | |
| 18 | --> | | AUTHENTICATION RESPONSE | |
| 19 | <-- | | SECURITY MODE COMMAND | |
| 20 | --> | | SECURITY MODE COMPLETE | |
| 21 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 1 Short Message |
| 22 | SS | | | Waits max 25 s for CP-ACK |
| 23 | --> | | CP-ACK | |
| 24 | SS | | | Waits max 60 s for RP-ACK RPDU |
| 25 | --> | | CP-DATA | Shall contain RP-ACK RPDU if there is memory capability in the ME. If not it shall contain RP-ERROR RPDU which cause field shall be "memory capability exceeded". If the total memory store of the UE now becomes full at this step, the ME shall set the "memory cap. exceed" notification flag on the USIM. |
| 26 | <-- | | CP-ACK | Within TC1M after step 25 |
| 27 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. Step 15-27 is repeated until the UE sends an RP-ERROR. The USIM simulator shall indicate if the "memory capability exceeded" notification flag has been set on the USIM. |
| 28 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 29 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 30 | --> | | PAGING RESPONSE | |
| 31 | <-- | | AUTHENTICATION REQUEST | |
| 32 | --> | | AUTHENTICATION RESPONSE | |
| 33 | <-- | | SECURITY MODE COMMAND | |
| 34 | --> | | SECURITY MODE COMPLETE | |
| 35 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) with TP-DCS set to 0 |
| 36 | SS | | | Waits max 25 s for CP-ACK |
| 37 | --> | | CP-ACK | |
| 38 | SS | | | Waits max 60 s for RP-ACK RPDU |
| 39 | --> | | CP-DATA | Shall contain RP-ERROR RPDU with error cause "memory capability exceeded". |
| 40 | <-- | | CP-ACK | Within TC1M after step 39 |
| 41 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 42 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 43 | SS | | | Prompts the operator to remove one of the short messages from the message store of the UE. |
| 44 | <-- | | SYSTEM INFORMATION | BCCH |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 45 | --> | | RRC CONNECTION REQUEST | CCCH |
| 46 | <-- | | RRC CONNECTION SETUP | CCCH |
| 47 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 48 | --> | | CM SERVICE REQUEST | CM service type information element is set to "Short message transfer". |
| 49 | <-- | | CM SERVICE ACCEPT | |
| 50 | --> | | CP-DATA | Contains RP-SMMA RPDU |
| 51 | <-- | | CP-ACK | |
| 52 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 53 | --> | | CP-ACK | Acknowledge of CP-DATA containing the RP-ACK RPDU. The ME shall unset the "memory capability exceeded" notification flag on the USIM. |
| 54 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. The USIM simulator shall indicate if the "memory capability exceeded" notification flag has been unset on the USIM. |
| 55 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 56 | SS | | | Prompts the operator to remove one of the short messages from the message store of the UE. |
| 57 | UE | | | Shall not attempt to send a RP-SMMA RPDU. This is verified by checking that the UE does not send a CHANNEL REQUEST message with the establishment cause "Other services which can be completed with an SDCCH" |
| NOTE: Time values for SS wait time are chosen sufficiently high to be sure that the UE has enough time to respond to the different messages. | | | | |

Specific Message Contents

SMS-DELIVER TPDU in step 7

| Information element | CommentValue |
|---|---|
| TP-DCS | default alphabet, class 2 "11110010"B |

SMS-DELIVER TPDU in step 21

| | |
|---|---|
| TP-DCS | default alphabet, class 1 "11110001"B |

SMS-DELIVER TPDU in step 35

| | |
|---|---|
| TP-DCS | default alphabet "00000000"B |

### 16.1.3.5 Test requirements

After UE sends a negative acknowledgement (RP-ERROR) in step 11, the USIM simulator shall indicate if the "memory capability exceeded" notification flag has been set on the USIM.

After UE sends a negative acknowledgement (RP-ERROR) in step 25, the USIM simulator shall indicate if the "memory capability exceeded" notification flag has been set on the USIM.

After step 53 the ME shall unset the "memory capability exceeded" notification flag on the USIM.

After step 57 UE shall not attempt to send a RP-SMMA RPDU.

## 16.1.4 Test of the status report capabilities and of SMS-COMMAND:

This test applies to UEs which support the status report capabilities.

16.1.4.1 Definition

16.1.4.2 Conformance requirement

The SMS offers the SC the capabilities of informing the UE of the status of a previously sent mobile originated short message. This is achieved by the SC returning a status report TPDU (SMS-STATUS-REPORT) to the originating UE.

SMS-COMMAND enables an UE to invoke an operation at the SC.

The UE shall increment TP-MR by 1 for each SMS-SUBMIT or SMS-COMMAND being submitted.

References

- 3GPP TS 23.040 clause 3.2.9.
- 3GPP TS 23.040 clauses 9.2.3.2, 9.2.3.4, 9.2.3.5, 9.2.3.6, 9.2.3.14, 9.2.3.18, 9.2.3.19, 9.2.3.26.

16.1.4.3 Test purpose

1) To verify that the UE is able to accept a SMS-STATUS-REPORT TPDU.
2) To verify that the UE is able to use the SMS-COMMAND functionality correctly and sends an SMS-COMMAND TPDU with the correct TP-Message-Reference.

16.1.4.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated".

Related ICS/IXIT Statements

Support of SMS MO/PP and MT/PP.

Test procedure

a) The UE is made to send a Mobile Originated short message setting TP-SRR as in steps a) to d) of test 16.1.2 (SMS Mobile originated).

b) The SS sends a CP-DATA message containing a RP-DATA RPDU itself containing an SMS-STATUS-REPORT TPDU.

c) The SS sends a RRC CONNECTION RELEASE message.

d) The UE is made to send an SMS-COMMAND message enquiring about the previously submitted short message.

e) void.

f) The SS acknowledges the CP-DATA message from the UE with a CP-ACK followed by a CP-DATA message containing an RP-ACK RPDU

g) After receiving the CP-ACK from the UE, the SS releases the RRC connection by using a RRC CONNECTION RELEASE message.

h) The UE is made to send an SMS-COMMAND message requiring to delete the previously submitted short message.

i) steps e) to g) are repeated.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION | BCCH |
| 2 | --> | | RRC CONNECTION REQUEST | CCCH |
| 3 | <-- | | RRC CONNECTION SETUP | CCCH |
| 4 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 5 | --> | | CM SERVICE REQUEST | |
| 6 | <-- | | AUTHENTICATION REQUEST | |
| 7 | --> | | AUTHENTICATION RESPONSE | |
| 8 | <-- | | SECURITY MODE COMMAND | |
| 9 | --> | | SECURITY MODE COMPLETE | |
| 10 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 11 | <-- | | CP-ACK | Sent within TC1M after step 10 |
| 12 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 13 | SS | | | Waits max 25 s for CP-ACK |
| 14 | --> | | CP-ACK | |
| 15 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 16 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 17 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 18 | --> | | PAGING RESPONSE | |
| 19 | <-- | | AUTHENTICATION REQUEST | |
| 20 | --> | | AUTHENTICATION RESPONSE | |
| 21 | <-- | | SECURITY MODE COMMAND | |
| 22 | --> | | SECURITY MODE COMPLETE | |
| 23 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS-STATUS-REPORT TPDU) |
| 24 | --> | | CP-ACK | |
| 25 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 26 | <-- | | CP-ACK | |
| 27 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 28 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 29 | UE | | | The UE is made to send an SMS-COMMAND message enquiring about the previously submitted SM |
| 30 | <-- | | SYSTEM INFORMATION | BCCH |
| 31 | --> | | RRC CONNECTION REQUEST | CCCH |
| 32 | <-- | | RRC CONNECTION SETUP | CCCH |
| 33 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 34 | --> | | CM SERVICE REQUEST | |
| 35 | <-- | | AUTHENTICATION REQUEST | |
| 36 | --> | | AUTHENTICATION RESPONSE | |
| 37 | <-- | | SECURITY MODE COMMAND | |
| 38 | --> | | SECURITY MODE COMPLETE | |
| 39 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS-COMMAND TPDU) which shall contain the correct TP-MR |
| 40 | <-- | | CP-ACK | |
| 41 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 42 | --> | | CP-ACK | |
| 43 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 44 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 45 | UE | | The UE is made to send an SMS-COMMAND | message requiring to delete the previously submitted SM. |
| 46 | --> | | RRC CONNECTION REQUEST | CCCH |
| 47 | <-- | | RRC CONNECTION SETUP | CCCH |
| 48 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 49 | --> | | CM SERVICE REQUEST | |
| 50 | <-- | | AUTHENTICATION REQUEST | |
| 51 | --> | | AUTHENTICATION RESPONSE | |
| 52 | <-- | | SECURITY MODE COMMAND | |
| 53 | --> | | SECURITY MODE COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 54 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS-COMMAND TPDU) which shall contain the correct TP-MR |
| 55 | <-- | | CP-ACK | |
| 56 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 57 | --> | | CP-ACK | |
| 58 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 59 | --> | | RRC CONNECTION RELEASE COMPLETE | |

Specific Message Contents

SMS SUBMIT TPDU

| Information element | Comment Value |
|---|---|
| TP-SRR | status report is requested "1"B |

SMS-STATUS-REPORT TPDU (SS to UE in step 23):

| Information element | Comment Value |
|---|---|
| TP-MR | same as previous SMS-SUBMIT |
| TP-MMS | no more messages "1"B |
| TP-SRQ | result of SMS-SUBMIT "0"B |
| TP-RA | same as the Destination address of the SMS-SUBMIT |
| TP-ST | SM received "00000000"B |

first SMS-COMMAND TPDU (UE to SS in step 39)

| Information element | Comment Value |
|---|---|
| TP-MR | TP-MR in previous SMS-SUBMIT plus "1" |
| TP-SRR | status report requested "1"B |
| TP-CT | Enquiry relating to previously submitted short message "00000000"B |
| TP-MN | not checked (TP-MR in previous SMS-SUBMIT) |

second SMS-COMMAND TPDU (UE to SS in step 54)

| Information element | Comment Value |
|---|---|
| TP-MR | TP-MR in previous SMS-COMMAND plus "1" |
| TP-CT | Delete previously submitted short message "00000010"B |
| TP-MN | not checked (TP-MR in previous SMS-SUBMIT) |

#### 16.1.4.5 Test requirements

After step 23 UE accept a SMS-STATUS-REPORT TPDU.

After step 39 UE shall send a SMS-COMMAND TPDU with the correct TP-Message-Reference.

After step 54 UE shall send a SMS-COMMAND TPDU with the correct TP-Message-Reference.

## 16.1.5 Test of message class 0 to 3

### 16.1.5.1 Short message class 0

#### 16.1.5.1.1 Definition

#### 16.1.5.1.2 Conformance requirement

When a mobile terminated message is class 0 and the UE has the capability of indicating short messages, the UE shall indicate the message immediately and send an acknowledgement to the SC when the message has successfully reached

the UE irrespective of whether there is memory available in the USIM or ME. The message shall not be automatically stored in the USIM or ME.

Reference

3GPP TS 23.038 clause 4.

#### 16.1.5.1.3 Test purpose

To verify that the UE will accept and indicate but not store a class 0 message, and that it will accept and indicate a class 0 message if its message store is full.

NOTE: failure of this test in a UE could cause it to reject a class 0 message when its SMS memory becomes full. This could lead to unwanted repetitions between the UE and the service centre.

#### 16.1.5.1.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the UE message store shall be empty.

Related ICS/IXIT Statements

Support for Short message MT/PP.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

Test procedure

a) The SS sends a class 0 message by using the method described in step a) of clause 16.1.1 but with the TPDU described in this clause.

b) The UE message store shall be filled (for example by using the method of clause 16.1.3 test of the memory available notification) with the same SMS-DELIVER TPDU except that TP-DCS is set to class 1.

c) The SS sends a class 0 message as in step a).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | PAGING RESPONSE | |
| 3 | <-- | | AUTHENTICATION REQUEST | |
| 4 | --> | | AUTHENTICATION RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 0 Short Message |
| 8 | --> | | CP-ACK | |
| 9 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | UE | | | The content of the short message shall be indicated by the ME. The UE shall not store the message. This can be checked by verifying that it is impossible to retrieve any short messages from the UE message store. |
| 14 | SS | | | The UE message store shall be filled (for example by using the method of 16.1.3) with Class 1 SMS-DELIVER TPDU. |
| 15 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 16 | --> | | PAGING RESPONSE | |
| 17 | <-- | | AUTHENTICATION REQUEST | |
| 18 | --> | | AUTHENTICATION RESPONSE | |
| 19 | <-- | | SECURITY MODE COMMAND | |
| 20 | --> | | SECURITY MODE COMPLETE | |
| 21 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 0 Short Message |
| 22 | --> | | CP-ACK | |
| 23 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 24 | <-- | | CP-ACK | |
| 25 | <-- | | RRC CONNECTION RELEASE | |
| 26 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 27 | UE | | | The content of the short message shall be indicated by the ME. |

Specific Message Contents

SMS-DELIVER TPDU (containing a class 0 message) (SS to UE)

| Information element | Comment | Value |
|---|---|---|
| TP-DCS | default alphabet, class 0 | "1111 0000"B |

SMS-DELIVER TPDU (containing a class 1 message to fill the UE message store) (SS to UE)

| Information element | Comment | Value |
|---|---|---|
| TP-DCS | default alphabet, class 1 | "1111 0001"B |

#### 16.1.5.1.5 Test requirements

After step 7 UE shall accept and indicate but not store a class 0 message.

After step 21 UE shall accept and indicate a class 0 message.

### 16.1.5.2 Test of class 1 short messages

This test shall apply to UEs which support:

- storing of received Class 1 Short Messages; and
- indicating of stored Short Messages.

#### 16.1.5.2.1 Definition

#### 16.1.5.2.2 Conformance requirement

When a mobile terminated message is class 1, the UE shall send an acknowledgement to the SC when the message has successfully reached the UE and can be stored, either in the ME or in the USIM.

##### Reference

3GPP TS 23.038 clause 4.

#### 16.1.5.2.3 Test purpose

This procedure verifies that the UE acts correctly on receiving a class 1 message, i.e. that it stores the message in the ME or USIM and sends an acknowledgement (at RP and CP-Layer).

#### 16.1.5.2.4 Method of test

##### Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the UE message store shall be empty;
  - for storing of class 1 Short Messages, the UE shall be set up to store Short Messages in the ME memory (by way of MMI, as described in ICS/IXIT statement).

##### Related ICS/IXIT Statements

Support for Short message MT/PP.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

##### Test procedure

a) The SS delivers a Short Message of class 1 to the UE as specified in clause 16.1.1, step a).

b) The Short Message is recalled (e.g. by means of the MMI).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | PAGING RESPONSE | |
| 3 | <-- | | AUTHENTICATION REQUEST | |
| 4 | --> | | AUTHENTICATION RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 1 Short Message |
| 8 | --> | | CP-ACK | |
| 9 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | UE | | | The short message shall be recalled and indicated at the UE. |

Specific Message Contents

SMS-DELIVER TPDU (containing a class 1 message) (SS to UE)

| Information element | Comment | Value |
|---|---|---|
| TP-DCS | default alphabet, class 1 | "1111 0001"B |

#### 16.1.5.2.5 Test requirements

After step 7 UE shall store the message in the ME or USIM and send an acknowledgement.

### 16.1.5.3 Test of class 2 short messages

#### 16.1.5.3.1 Definition

Class 2 Short Messages are defined as USIM specific, and the UE shall ensure that a message of this class is stored on the USIM.

#### 16.1.5.3.2 Conformance requirement

When a mobile terminated message is Class 2, the UE shall ensure that the message has been correctly transferred to the SMS data field in the USIM before sending an acknowledgement to the SC. The UE shall return a "protocol error, unspecified" error message if the short message cannot be stored in the USIM and there is other short message storage available at the UE. If all the short message storage at the UE is already in use, the UE shall return "memory capacity exceeded".

References

- 3GPP TS 23.040 clause 9.2.3.10.
- 3GPP TS 23.038 clause 4.
- 3GPP TS 34.108 clause 8.3.2.28.

#### 16.1.5.3.3 Test purpose

This procedure verifies that the UE acts correctly on receiving a class 2 message, i.e. that it stores the message correctly in the USIM, and if this is not possible, returns a protocol error message, with the correct error cause, to the network.

There are 2 cases:

1) if the UE supports storing of short messages in the USIM and in the ME, and storage in the ME is not full, and the short message cannot be stored in the USIM, the error cause shall be "protocol error, unspecified";

2) if the UE supports storing of short messages in the USIM and not in the ME, and storage in the ME is not full, and the short message cannot be stored in the USIM, the error cause shall be "memory capacity exceeded".

NOTE: If the UE supports storing of short messages in the USIM and the ME, and storage in the ME is full, and the short message cannot be stored in the USIM, the error cause shall be "memory capacity exceeded". This case is not tested in this test.

16.1.5.3.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the ME message store shall be empty;
  - the ME shall be connected to the USIM simulator. The following shall be present in the USIM simulator:
    - $EF_{SMS}$ with at least two free records and one full record;
    - $EF_{SMSS}$, with SMS "Memory Cap. Exceed" notification flag set to "memory available";
    - Service no. 10 (SMS) in $EF_{UST}$ set to allocated and activated;
    - for storing of Class 1 Short Messages the UE shall be set up to store Short Messages in the ME memory (by way of MMI, as described in ICS/IXIT statement).

Related ICS/IXIT Statements

Support for Short message MT/PP.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

Test procedure

a) The SS delivers a Short Message of class 2 to the UE as specified in clause 16.1.1, step b).

b) Following an attempt by the ME to store the short message in a free record of $EF_{SMS}$ in the USIM, the USIM simulator returns the status response "OK" ("90 00").

c) Step a) is repeated.

d) Following an attempt by the ME to store the short message in a free record of $EF_{SMS}$ in the USIM, the USIM simulator returns the status response "memory problem" ("92 40").

e) The USIM simulator indicates if an attempt was made in steps a) and c) to store the messages and if the messages are stored according to the requirement.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | < | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | PAGING RESPONSE | |
| 3 | <-- | | AUTHENTICATION REQUEST | |
| 4 | --> | | AUTHENTICATION RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 2 Short Message |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 8 | --> | | CP-ACK | |
| 9 | ME | | | The ME shall correctly store the short message in a free record of EFSMS in the USIM, i.e.<br>- the ME shall use a free record<br>- the first byte of the record shall indicate "message received by UE from network"<br>- the TS-Service-Centre-Address shall be correctly stored<br>- the TPDU shall be identical to that sent by the SS<br>- bytes following the TPDU shall be set to "FF" |
| 10 | USIM | | | The USIM simulator returns the status response "OK" ("90 00"). The USIM simulator shall indicate if an attempt was made by the ME to store the short message in the USIM. |
| 11 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 12 | <-- | | CP-ACK | |
| 13 | <-- | | RRC CONNECTION RELEASE | |
| 14 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 15 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 16 | --> | | PAGING RESPONSE | |
| 17 | <-- | | AUTHENTICATION REQUEST | |
| 18 | --> | | AUTHENTICATION RESPONSE | |
| 19 | <-- | | SECURITY MODE COMMAND | |
| 20 | --> | | SECURITY MODE COMPLETE | |
| 21 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 2 Short Message |
| 22 | --> | | CP-ACK | |
| 23 | ME | | | The ME shall attempt to store the short message in a free record of EFSMS in the USIM. |
| 24 | USIM | | | The USIM simulator returns the status response "memory problem" ("92 40"). The USIM simulator shall indicate if an attempt was made by the ME to store the short message in the USIM. |
| 25 | --> | | CP-DATA | Contains RP-ERROR RPDU with error cause "protocol error, unspecified" if the UE supports storing of short messages in the ME, or error cause "memory capacity exceeded" if not. |
| 26 | <-- | | CP-ACK | |
| 27 | <-- | | RRC CONNECTION RELEASE | |
| 28 | --> | | RRC CONNECTION RELEASE COMPLETE | |

Specific Message Contents

SMS-DELIVER TPDU (containing a class 2 message) (SS to UE)

| Information element | Comment | Value |
|---|---|---|
| TP-DCS | default alphabet, class 2 | "1111 0010"B |

16.1.5.3.5 Test requirements

After step 10 UE shall confirm that the short message is stored in the USIM and send CP-DATA containing RP-ACK RPDU.

After step 25 UE shall confirm that the short message cannot be stored in the USIM and send CP-DATA containing RP-ERROR RPDU. If UE supports storing of short message in the ME, the error cause of RP-ERROR RPDU shall be "protocol error, unspecified", and if not the error cause of RP-ERROR RPDU shall be "memory capacity exceeded"

#### 16.1.5.4 Test of class 3 short messages

For further study.

### 16.1.6 Test of short message type 0 (R99 and REL-4 UE)

#### 16.1.6.1 Definition and applicability

This tests that the UE correctly acknowledges the receipt of the short message type 0 to the SC in Circuit Switched mode. It is highly recommended that the UE discards the contents of the short message type 0.

This test shall apply to all R99 and REL-4 UEs supporting receipt of short messages in CS mode.

#### 16.1.6.2 Conformance requirement

When a mobile terminated message is type 0, the UE shall acknowledge receipt of the short message to the SC but may discard its contents.

Note: It is highly recommended that the UE discards the type 0 short message. This means that the UE is able to receive the type 0 short message irrespective of whether there is memory available in the (U)SIM or ME or not, the UE does not indicate the receipt of the type 0 short message to the user, and the message is not stored in the (U)SIM or ME.

Reference(s)

3GPP TS 23.040, 9.2.3.9.

#### 16.1.6.3 Test purpose

To verify that the UE will acknowledge receipt of the short message to the SC. The UE should discard its contents.

NOTE: failure of this test in a UE could cause it to reject a type 0 message when the network is trying to reach the UE. This could lead to unwanted repetitions between the UE and the service centre.

#### 16.1.6.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

the UE shall be in MM-state "Idle, updated".

Related ICS/IXIT Statements

Support for Short Message MT/PP.

The value of timer TC1M.

Foreseen Final State of UE

Idle, updated.

Test Procedure

The SS sends a type 0 message by using the method described in step a) of section 16.1.1 but with the TPDU described in this section.

Maximum Duration of Test

1 minute

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | PAGING RESPONSE | |
| 3 | <-- | | AUTHENTICATION REQUEST | |
| 4 | --> | | AUTHENTICATION RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), type 0 Short Message |
| 8 | --> | | CP-ACK | |
| 9 | --> | | CP-DATA | Contains RP-ACK TP-Protocol-Identifier (TP-PID). |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | UE | | | It is highly recommended that the UE discards the type 0 short message. This means that the UE is able to receive the type 0 short message irrespective of whether there is memory available in the (U)SIM or ME or not, the UE does not indicate the receipt of the type 0 short message to the user, and the message is not stored in the (U)SIM or ME. |

Specific Message Contents:

SMS-DELIVER TPDU (containing a type 0 message) (SS to UE):

| Information element | Comment Value |
|---|---|
| TP-MTI | SMS-DELIVER "00"B |
| TP-MMS | more messages are waiting in SC "0"B |
| TP-RP | no reply path "0"B |
| TP-UDHI | TP-UD contains only the SM"0"B |
| TP-SRI | no status report returned 0 |
| TP-OA | an international number coded E.164 |
| TP-PID | Type 0: "01000000"B |
| TP-DCS | default alphabet "0000 0000"B |
| TP-SCTS | any legal value (cf. 3GPP TS 23.040) |
| TP-UDL | 160 |
| TP-UD (140 octets) | text of message (160 characters) |

## 16.1.6a Test of short message type 0 (≥ REL-5 UE)

### 16.1.6a.1 Definition and applicability

This tests that the UE correctly acknowledges the receipt of the short message type 0 to the SC in Circuit Switched mode. The UE shall discard the contents of the short message type 0.

This test shall apply to all ≥ REL-5 UEs supporting receipt of short messages in CS mode.

### 16.1.6a.2 Conformance requirement

When a mobile terminated message is type 0, the UE shall acknowledge receipt of the short message to the SC but shall discard its contents. This means that

- the UE shall be able to receive the type 0 short message irrespective of whether there is memory available in the (U)SIM or ME or not,
- the UE shall not indicate the receipt of the type 0 short message to the user,
- the short message shall neither be stored in the (U)SIM nor ME.

References

3GPP TS 23.040 9.2.3.1, 9.2.3.2, 9.2.3.4, 9.2.3.7, 9.2.3.9, 9.2.3.10, 9.2.3.11, 9.2.3.16, 9.2.3.17, 9.2.3.23.

### 16.1.6a.3 Test purpose

To verify that the UE will acknowledge receipt of the short message to the SC. The UE shall discard its contents. This means that

- the UE shall be able to receive the type 0 short message irrespective of whether there is memory available in the (U)SIM or ME or not,
- the UE shall not indicate the receipt of the type 0 short message to the user,
- the short message shall neither be stored in the (U)SIM nor ME.

NOTE: Failure of this test in a UE could cause it to reject a type 0 message when the network is trying to reach the UE. This could lead to unwanted repetitions between the US and the service centre. In addition service affecting restrictions could happen to the customer.

### 16.1.6a.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

the UE shall be in MM-state "Idle, updated".

the ME- and (U)SIM message store shall be empty.

Related ICS/IXIT Statements

Support for Short Message MT/PP.

The value of timer TC1M.

Foreseen Final State of UE

Idle, updated.

Test Procedure

a) The SS sends a type 0 short message by using the method described in step a) of clause 16.1.1 but with the TPDU described in this section.

b) The ME- and (U)SIM short message store shall be filled (for example by using the method of clause 16.1.3 test of the memory available notification).

c) The SS sends a type 0 short message as in step a).

Maximum Duration of Test

5 minutes

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | PAGING RESPONSE | |
| 3 | <-- | | AUTHENTICATION REQUEST | |
| 4 | --> | | AUTHENTICATION RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), type 0 Short Message |
| 8 | --> | | CP-ACK | |
| 9 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | UE | | | The UE shall discard the type 0 short message. This means that the UE does not indicate the receipt of the type 0 short message to the user. The UE shall not store the message in the (U)SIM or ME. This can be checked by verifying that it is impossible to retrieve any short messages from the ME- and (U)SIM message store. |
| 14 | | SS | | The ME- and (U)SIM message store shall be filled (for example by using the method of 16.1.3). |
| 15 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 16 | --> | | PAGING RESPONSE | |
| 17 | <-- | | AUTHENTICATION REQUEST | |
| 18 | --> | | AUTHENTICATION RESPONSE | |
| 19 | <-- | | SECURITY MODE COMMAND | |
| 20 | --> | | SECURITY MODE COMPLETE | |
| 21 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), type 0 Short Message |
| 22 | --> | | CP-ACK | |
| 23 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 24 | <-- | | CP-ACK | |
| 25 | <-- | | RRC CONNECTION RELEASE | |
| 26 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 27 | UE | | | The UE shall discard the type 0 short message. This means that the UE does not indicate the receipt of the type 0 short message to the user. The UE shall not store the message in the (U)SIM or ME. This can be checked by verifying that it is impossible to retrieve any short messages from the ME- and (U)SIM message store. |

Specific Message Contents:

SMS-DELIVER TPDU (containing a type 0 message) (SS to UE):

| Information element | Comment | Value |
|---|---|---|
| TP-MTI | SMS-DELIVER | "00"B |
| TP-MMS | more messages are waiting in SC | "0"B |
| TP-RP | no reply path | "0"B |
| TP-UDHI | TP-UD contains only the SM | "0"B |
| TP-SRI | no status report returned | "0"B |
| TP-OA | an international number coded E.164 | |
| TP-PID | Type 0: | "01000000"B |
| TP-DCS | default alphabet | “0000 0000"B |
| TP-SCTS | any legal value (cf. 3GPP TS 23.040) | |
| TP-UDL | | 160 |
| TP-UD (140 octets) | text of message (160 characters) | |

#### 16.1.6a.5 Test requirements

After step 9 (ME- and (U)SIM message store not filled) UE shall send CP-DATA containing RP-ACK RPDU (TP-Protocol-Identifier: type 0 Short Message).

After step 13 UE shall discard the type 0 short message (it is impossible to retrieve any short messages from the ME- and (U)SIM message store).

After step 23 (ME- and (U)SIM message store filled) UE shall send CP-DATA containing RP-ACK RPDU (TP-Protocol-Identifier: type 0 Short Message).

After step 27 UE shall discard the type 0 short message (it is impossible to retrieve any short messages from the ME- and (U)SIM message store).

### 16.1.7 Test of the replace mechanism for SM type 1-7

#### 16.1.7.1 Definition

#### 16.1.7.2 Conformance requirement

On receipt of a short message, the UE shall check to see if the associated Protocol Identifier contains a Replace Short Message Type code. If such a code is present, then the UE will check the associated originating address (TP-OA) and replace any existing stored message having the same Protocol Identifier code and originating address with the new short message.

References

3GPP TS 23.040 clause 9.2.3.2, 9.2.3.9.

#### 16.1.7.3 Test purpose

This procedure verifies the correct implementation of the replace mechanism for Replace Short Messages.

#### 16.1.7.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the UE message store shall be empty.

Related ICS/IXIT Statements

Support for Short message MT/PP.

The value of timer TC1M.

Test procedure

a) Two different numbers n and m are drawn randomly between 1 and 7. Two different addresses for TP-Originating-Address (TPOA1 and TPOA2) are drawn.

b) The SS delivers a short message to the UE as specified in clause 16.1.1 step a). In the SMS-DELIVER TPDU, the TP-Protocol-Identifier parameter is "Replace Short Message Type n", the TP-Originating-Address is TPOA1, and the RP-Originating-Address is RPOA.

c) Step b) is repeated but with a different TP-Originating-Address (TPOA2), and different contents of TP-User-Data in the SMS-DELIVER TPDU. The other parameters are the same as in step b).

d) Void

e) Step c) is repeated but with the TP-Protocol-Identifier equal to "Replace Short Message Type m", and contents of TP-User-Data different from the former two messages. The other parameters are the same as in step c).

f) Step e) is repeated but the contents of TP-User-Data are different from that used in step e).

g) The SS prompts the operator to indicate the Short Messages stored in the UE.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | PAGING RESPONSE | |
| 3 | <-- | | AUTHENTICATION REQUEST | |
| 4 | --> | | AUTHENTICATION RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-PID is "Replace Short Message Type n", TP-OA is TPOA1 and RP-OA is RPOA |
| 8 | --> | | CP-ACK | |
| 9 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 14 | --> | | PAGING RESPONSE | |
| 15 | <-- | | AUTHENTICATION REQUEST | |
| 16 | --> | | AUTHENTICATION RESPONSE | |
| 17 | <-- | | SECURITY MODE COMMAND | |
| 18 | --> | | SECURITY MODE COMPLETE | |
| 19 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-PID is "Replace Short Message Type n", TP-OA is TPOA2 and RP-OA is RPOA, TP-UD different from step 7 |
| 20 | --> | | CP-ACK | |
| 21 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 22 | <-- | | CP-ACK | |
| 23 | <-- | | RRC CONNECTION RELEASE | |
| 24 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 25 | | | (void) | |
| 26 | | | (void) | |
| 27 | | | (void) | |
| 28 | | | (void) | |
| 29 | | | (void) | |
| 30 | | | (void) | |
| 31 | | | (void) | |
| 32 | | | (void) | |
| 33 | | | (void) | |
| 34 | | | (void) | |
| 35 | | | (void) | |
| 36 | | | (void) | |
| 37 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 38 | --> | | PAGING RESPONSE | |
| 39 | <-- | | AUTHENTICATION REQUEST | |
| 40 | --> | | AUTHENTICATION RESPONSE | |
| 41 | <-- | | SECURITY MODE COMMAND | |
| 42 | --> | | SECURITY MODE COMPLETE | |
| 43 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-PID is "Replace Short Message Type m", TP-OA is TPOA2 and RP-OA is RPOA, TP-UD different from step 7 and 19 |
| 44 | --> | | CP-ACK | |
| 45 | --> | | CP-DATA | Contains RP-ACK RPDU. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 46 | <-- | | CP-ACK | |
| 47 | <-- | | RRC CONNECTION RELEASE | |
| 48 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 49 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 50 | --> | | PAGING RESPONSE | |
| 51 | <-- | | AUTHENTICATION REQUEST | |
| 52 | --> | | AUTHENTICATION RESPONSE | |
| 53 | <-- | | SECURITY MODE COMMAND | |
| 54 | --> | | SECURITY MODE COMPLETE | |
| 55 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-PID is "Replace Short Message Type m", TP-OA is TPOA2 and RP-OA is RPOA, TP-UD different from step 43 |
| 56 | --> | | CP-ACK | |
| 57 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 58 | <-- | | CP-ACK | |
| 59 | <-- | | RRC CONNECTION RELEASE | |
| 60 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 61 | SS | | | Prompts the operator to indicate the Short Messages stored in the UE. Only the Short Messages delivered in step 7, 19 and 55 shall be retrievable and indicated |

Specific Message Contents

SMS-DELIVER TPDU

| Information element | Comment Value |
|---|---|
| TP-MMS | no more messages are waiting in SC "1"B |
| TP-PID | binary 01000xxx, xxx represents n resp. m (see test method description) |

16.1.7.5 Test requirements

After step 61 only the Short Messages delivered in step 7, 19 and 55 shall be retrieved and indicated.

## 16.1.8 Test of the reply path scheme

16.1.8.1 Definition

16.1.8.2 Conformance requirement

When a replying UE receives an original mobile terminated short message it has:

- originating SME = TP-Originating Address in the SMS-DELIVER TPDU;
- original SC = RP-Originating Address in the RP-MT-DATA.

When submitting the reply mobile originated short message, the replying UE should use parameters as follows:

- TP-Destination Address in SMS-SUBMIT TPDU = originating SME;
- RP-Destination Address in RP-MO-DATA = original SC.

References

3GPP TS 23.040 3.2.10, 9.2.3.2, 9.2.3.17, Annex D.5, D.6.

NOTE: Annex D of 3GPP TS 23.040 is only informative.

16.1.8.3 Test purpose

This procedure verifies that the UE is able to send a Reply Short Message back to the correct originating SME even if in the meantime it receives another Short Message.

16.1.8.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the UE message store shall be empty.

Related ICS/IXIT Statements

Support for Short message MT/PP.

Support for Short message MO/PP.

The value of timer TC1M.

Test procedure

a) The SS delivers a Short Message as specified in clause 16.1.1, step b) with TP-Reply-Path set to 1.

b) Step a) is repeated but with:
   - different TP-Originating-Address for the originating SME;
   - different RP-Originating-Address for the original SC; and
   - different message contents TP-User-Data.

c) UE sends the Reply Short Message corresponding to one of two received Short Messages (e.g. by means of the MMI).

d) step c) is repeated for the other Short Message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | PAGING RESPONSE | |
| 3 | <-- | | AUTHENTICATION REQUEST | |
| 4 | --> | | AUTHENTICATION RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-RP set to 1 |
| 8 | --> | | CP-ACK | Sent within TC1M after step 7 |
| 9 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 14 | --> | | PAGING RESPONSE | |
| 15 | <-- | | AUTHENTICATION REQUEST | |
| 16 | --> | | AUTHENTICATION RESPONSE | |
| 17 | <-- | | SECURITY MODE COMMAND | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 18 | --> | | SECURITY MODE COMPLETE | |
| 19 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-OA, RP-OA and TP-UD different from step 7 |
| 20 | --> | | CP-ACK | Sent within TC1M after step 7 |
| 21 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 22 | <-- | | CP-ACK | |
| 23 | <-- | | RRC CONNECTION RELEASE | |
| 24 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 25 | UE | | | UE establishes the RRC connection in order to send the Reply Short Message corresponding to one of two received Short Messages: |
| 26 | <-- | | SYSTEM INFORMATION | BCCH |
| 27 | --> | | RRC CONNECTION REQUEST | CCCH |
| 28 | <-- | | RRC CONNECTION SETUP | CCCH |
| 29 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 30 | --> | | CM SERVICE REQUEST | |
| 31 | <-- | | AUTHENTICATION REQUEST | |
| 32 | --> | | AUTHENTICATION RESPONSE | |
| 33 | <-- | | SECURITY MODE COMMAND | |
| 34 | --> | | SECURITY MODE COMPLETE | |
| 35 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) RP-DA = RP-OA corresponding to the message TP-DA = TP-OA corresponding to the message |
| 36 | <-- | | CP-ACK | Sent within TC1M after step 35 |
| 37 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 38 | SS | | | Waits max 25 s for CP-ACK |
| 39 | --> | | CP-ACK | |
| 40 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 40A | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 41 | UE | | | UE establishes the RRC connection in order to send the Reply Short Message corresponding to other Short Message. |
| 42 | <-- | | SYSTEM INFORMATION | BCCH |
| 43 | --> | | RRC CONNECTION REQUEST | CCCH |
| 44 | <-- | | RRC CONNECTION SETUP | CCCH |
| 45 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 46 | --> | | CM SERVICE REQUEST | |
| 47 | <-- | | AUTHENTICATION REQUEST | |
| 48 | --> | | AUTHENTICATION RESPONSE | |
| 49 | <-- | | SECURITY MODE COMMAND | |
| 50 | --> | | SECURITY MODE COMPLETE | |
| 51 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) RP-DA = RP-OA corresponding to the Message TP-DA = TP-OA corresponding to the message |
| 52 | <-- | | CP-ACK | Sent within TC1M after step 51 |
| 53 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 54 | SS | | | Waits max 25 s for CP-ACK |
| 55 | --> | | CP-ACK | |
| 56 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 57 | --> | | RRC CONNECTION RELEASE COMPLETE | |

Specific Message Contents

SMS-DELIVER TPDU

| Information element | Comment | Value |
|---|---|---|
| TP-MMS | no more messages are waiting in SC | "1"B |
| TP-RP | Reply Path exists | "1"B |

16.1.8.5 Test requirements

After step 35 UE shall send the Reply Short Message corresponding to one of two previously received short messages.

After step 51 UE shall send the Reply Short Message corresponding to the other of two previously received short messages.

## 16.1.9 Multiple SMS mobile originated

### 16.1.9.1 UE in idle mode

This test applies to UE supporting the ability of sending multiple short messages on the same RRC connection when there is no call in progress.

16.1.9.1.1 Definition

16.1.9.1.2 Conformance requirements

Release 1999:

If another short message or a memory available notification is to be sent, an originating SMR entity in the UE may choose to continue to use the same RRC connection. When the UE chooses to use the same RRC connection, then:

- the UE shall transmit a CM SERVICE REQUEST for the new CM connection before the final CP-ACK (e.g. the one that acknowledges the CP-DATA that carried the RP-ACK) for the old MM connection is transmitted;
- before transmission of the first CP-DATA on the new MM connection, the UE shall transmit the CP-ACK for the old MM connection;
- the Transaction Identifier used on the new MM connection shall be different to that used on the old MM connection; and
- the UE shall not initiate establishment of the new MM connection before the final CP-DATA (e.g. the one carrying the RP-ACK) has been received.

Release 4 or later release:

In the case of a SMS transfer via the CS domain, when the UE chooses to use the same RR or CS signalling connection, then:

- the UE shall transmit a CM SERVICE REQUEST for the new CM connection before the final CP-ACK (i.e. the one that acknowledges the CP-DATA that carried the RP-ACK) for the old MM connection is transmitted;
- before transmission of the first CP-DATA on the new MM connection, the UE may transmit the CP-ACK for the old MM connection; the UE shall not transmit the final CP-ACK after the new CP-DATA;
- the Transaction Identifier used on the new MM connection shall be different to that used on the old MM connection; and
- the UE shall not initiate establishment of the new MM connection before the final CP-DATA (e.g. the one carrying the RP-ACK) has been received.

References

- 3GPP TS 23.040 clause 3.1.
- 3GPP TS 24.011 clause 5.4.

#### 16.1.9.1.3 Test purpose

To verify that the UE is able to correctly concatenate multiple short messages on the same RRC connection when using a DCCH.

#### 16.1.9.1.4 Method of test

##### Initial conditions

- System simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the SMS message storage shall be empty.

##### Related ICS/IXIT statements

Support for concatenation of multiple short messages MO/PP on the same RRC connection.

Description of how to enter multiple SMS.

Whether SMS messages are stored in the USIM and/or the ME.

##### Foreseen final state of UE

Idle, updated.

##### Test procedure

a) The UE shall be set up to send 3 short messages as multiple SM to the SS. The UE establishes successfully an RRC connection and then the SS performs the authentication.

b) The SS starts integrity protection.

c) The SS responds to the CP-DATA containing RP-DATA RPDU (SMS SUBMIT TPDU) from the UE with a CP-ACK message followed by a CP-DATA message containing the correct RP-ACK RPDU. The Transaction Identifier used on this MM connection is 'x'.

d) The UE shall transmit a CM SERVICE REQUEST for the new CM connection (for the second short message) before the final CP-ACK (the one that acknowledges the CP-DATA that carried the RP-ACK before) for the old MM connection is transmitted. The UE shall not initiate establishment of the new MM connection before the final CP-DATA (i.e. the one carrying the RP-ACK for the first short message) has been received. Before transmission of the first CP-DATA on the new MM connection:

   - For R99: The UE shall transmit the CP-ACK for the old MM connection. The Transaction Identifier used on the new MM connection shall be y, where y <> x (see step c)). Thereby, the UE can transmit the final CP-ACK after either the sending of the CM SERVICE REQUEST for the new CM connection or the reception of the CM SERVICE ACCEPT for the new CM connection, thus two branches for the transmission of the final CP-ACK are possible which are specified in the expected sequence table like A and B respectively. The SS waits for the UE to transmit the final CP-ACK. If received within 5 s then the SS transmits the CM SERVICE ACCEPT and waits for the UE to transmit the first CP-DATA on the new MM connection (branch A). If the final CP-ACK is not received within 5 s then the SS transmits the CM SERVICE ACCEPT and waits for the UE to send the final CP-ACK followed by the first CP-DATA on the new MM connection (branch B).

   - For Rel-4 or later release: The UE may transmit the CP-ACK for the old MM connection. The Transaction Identifier used on the new MM connection shall be y, where y <> x (see step c)). Thereby, the UE can transmit the final CP-ACK after either the sending of the CM SERVICE REQUEST for the new CM connection or the reception of the CM SERVICE ACCEPT for the new CM connection or not to send a CP-ACK at all, thus three cases are possible. These cases are specified using two branches for the transmission of the final CP-ACK where the transmission of the final CP-ACK for the old MM connection is optional. The two branches are specified in the expected sequence table like A and B respectively. The SS waits for the UE

to transmit the final CP-ACK. If received within 5 s then the SS transmits the CM SERVICE ACCEPT and waits for the UE to transmit the first CP-DATA on the new MM connection (branch A). If the final CP-ACK is not received within 5 s then the SS transmits the CM SERVICE ACCEPT and then waits for the UE to send the final CP-ACK (optional) and/or the first CP-DATA on the new MM connection (branch B).

e) Void.

f) The SS responds to the CP-DATA containing RP-DATA RPDU (SMS SUBMIT TPDU) from the UE with a CP-ACK message followed by a CP-DATA message containing the correct RP-ACK RPDU.

g) The UE shall transmit a CM SERVICE REQUEST for the new CM connection (for the third short message) before the final CP-ACK (the one that acknowledges the CP-DATA that carried the RP-ACK before) for the old MM connection is transmitted. Before transmission of the first CP-DATA on the new MM connection:

- For R99: The UE shall transmit the CP-ACK for the old MM connection. The Transaction Identifier used on the new MM connection shall be z, where z <> y (see step d)). The UE shall not initiate establishment of the new MM connection before the final CP-DATA (i.e. the one carrying the RP-ACK for the second short message) has been received. Thereby, the UE can transmit the final CP-ACK after either the sending of the CM SERVICE REQUEST for the new CM connection or the reception of the CM SERVICE ACCEPT for the new CM connection, thus two branches for the transmission of the final CP-ACK are possible which are specified in the expected sequence table like A and B respectively. The SS waits for the UE to transmit the final CP-ACK. If received within 5 s then the SS transmits the CM SERVICE ACCEPT and waits for the UE to transmit the first CP-DATA on the new MM connection (branch A). If the final CP-ACK is not received within 5 s then the SS transmits the CM SERVICE ACCEPT and waits for the UE to send the final CP-ACK followed by the first CP-DATA on the new MM connection (branch B).

- For Rel-4 or later release: The UE may transmit the CP-ACK for the old MM connection. The Transaction Identifier used on the new MM connection shall be z, where z <> y (see step d)). Thereby, the UE can transmit the final CP-ACK after either the sending of the CM SERVICE REQUEST for the new CM connection or the reception of the CM SERVICE ACCEPT for the new CM connection or not to send a CP-ACK at all, thus three cases are possible. These cases are specified using two branches for the transmission of the final CP-ACK where the transmission of the final CP-ACK for the old MM connection is optional. The two branches are specified in the expected sequence table like A and B respectively. The SS waits for the UE to transmit the final CP-ACK. If received within 5 s then the SS transmits the CM SERVICE ACCEPT and waits for the UE to transmit the first CP-DATA on the new MM connection (branch A). If the final CP-ACK is not received within 5 s then the SS transmits the CM SERVICE ACCEPT and then waits for the UE to send the final CP-ACK (optional) and/or the first CP-DATA on the new MM connection (branch B).

h) Void.

i) The SS responds to the CP-DATA containing RP-DATA RPDU (SMS SUBMIT TPDU) from the UE with a CP-ACK message followed by a CP-DATA message containing the correct RP-ACK RPDU.

j) The SS waits a maximum of 5 s after sending CP-DATA for the CP-ACK message from the UE.

k) The SS sends a RRC CONNECTION RELEASE to the UE.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set up to send 3 short messages as multiple SM |
| 2 | SS | | | The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originating Low Priority Signalling”. |
| 3 | | | (void) | |
| 4 | | | (void) | |
| 5 | --> | | CM SERVICE REQUEST | CM service type set to "Short Message Service". |
| 6 | <-- | | AUTHENTICATION REQUEST | |
| 7 | --> | | AUTHENTICATION RESPONSE | |
| 8 | SS | | | The SS starts integrity protection |
| 9 | | | Void | |
| 10 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU). The Transaction Identifier used in steps 10, 11, 12 and 14 shall be x. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 11 | <-- | | CP-ACK | |
| 12 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 13 | --> | | CM SERVICE REQUEST | CM service type set to "Short Message Service". |
| 14 | --> | | CP-ACK | The one that acknowledges the CP-DATA which carried the RP-ACK RPDU.<br>If CP-ACK received then continue at A15<br>If CP-ACK is not received within 5 s from the CM SERVICE REQUEST was sent in step 13 then goto step B15a.<br>(See note 1 and note 2) |
| Branch A | | | | |
| A15 | <-- | | CM SERVICE ACCEPT | After having sent the CM SERVICE ACCEPT then goto step 16. |
| Branch B | | | | |
| B15a | <-- | | CM SERVICE ACCEPT | |
| B15b | --> | | CP-ACK | The one that acknowledges the CP-DATA which carried the RP-ACK RPDU.<br>For Rel-4 or later release UE: Optional step (See note 2) |
| 16 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU). The Transaction Identifier used in steps 16, 17, 18 and 20 shall be y where y <> x (see step 10). |
| 17 | <-- | | CP-ACK | |
| 18 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 19 | --> | | CM SERVICE REQUEST | CM service type set to "Short Message Service". |
| 20 | --> | | CP-ACK | The one that acknowledges the CP-DATA which carried the RP-ACK RPDU.<br>If CP-ACK received then continue at A21<br>If CP-ACK is not received within 5 s from the CM SERVICE REQUEST was sent in step 19 then goto step B21a.<br>(See note 1 and note 2) |
| Branch A | | | | |
| A21 | <-- | | CM SERVICE ACCEPT | After having sent the CM SERVICE ACCEPT then goto step 22. |
| Branch B | | | | |
| B21a | <-- | | CM SERVICE ACCEPT | |
| B21b | --> | | CP-ACK | The one that acknowledges the CP-DATA which carried the RP-ACK RPDU.<br>For Rel-4 or later release UE: Optional step (See note 2) |
| 22 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU). The Transaction Identifier used in steps 22, 23, 24 and 25 shall be z, where z <> y (see step 16). |
| 23 | <-- | | CP-ACK | |
| 24 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 25 | --> | | CP-ACK | Shall be sent within 5 s of step 24 |
| 26 | SS | | | The SS releases the RRC connection |
| NOTE 1: 5 s have been agreed to be a reasonable value to secure that the UE have enough time to respond to the different messages. | | | | |
| NOTE 2: The CP-ACK for the old MM connection can be received either before or after the reception of the CM SERVICE ACCEPT message. For Release 4 or later release the UE transmission of the final CP-ACK is optional. | | | | |

#### 16.1.9.1.5 Test requirements

In step 13 the UE shall transmit a CM SERVICE REQUEST for the new CM connection (for the second short message) before the final CP-ACK for the old MM connection is transmitted.

In step 19 the UE shall transmit a CM SERVICE REQUEST for the new CM connection (for the third short message) before the final CP-ACK for the old MM connection is transmitted.

### 16.1.9.2 UE in active mode

This test applies to UE supporting the ability of sending concatenated multiple short messages when there is a call in progress.

16.1.9.2.1 Definition

16.1.9.2.2 Conformance requirements

Release 1999:

If another short message or a memory available notification is to be sent, an originating SMR entity in the UE may choose to continue to use the same RRC connection. When the UE chooses to use the same RRC connection, then:

- the UE shall transmit a CM SERVICE REQUEST for the new CM connection before the final CP-ACK (e.g. the one that acknowledges the CP-DATA that carried the RP-ACK) for the old MM connection is transmitted;
- before transmission of the first CP-DATA on the new MM connection, the UE shall transmit the CP-ACK for the old MM connection;
- the Transaction Identifier used on the new MM connection shall be different to that used on the old MM connection; and
- the UE shall not initiate establishment of the new MM connection before the final CP-DATA (e.g. the one carrying the RP-ACK) has been received.

Release 4 or later release:

In the case of a SMS transfer via the CS domain, when the UE chooses to use the same RR or CS signalling connection, then:

- the UE shall transmit a CM SERVICE REQUEST for the new CM connection before the final CP-ACK (i.e. the one that acknowledges the CP-DATA that carried the RP-ACK) for the old MM connection is transmitted;
- before transmission of the first CP-DATA on the new MM connection, the UE may transmit the CP-ACK for the old MM connection; the UE shall not transmit the final CP-ACK after the new CP-DATA;
- the Transaction Identifier used on the new MM connection shall be different to that used on the old MM connection; and
- the UE shall not initiate establishment of the new MM connection before the final CP-DATA (e.g. the one carrying the RP-ACK) has been received.

References

- 3GPP TS 23.040 clause 3.1.
- 3GPP TS 24.011 clause 5.4.

16.1.9.2.3 Test purpose

To verify that the UE is able to correctly concatenate multiple short messages on the same RRC connection when sent parallel to a call.

16.1.9.2.4 Method of test

Initial conditions

- System simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the SMS message storage shall be empty.

Related ICS/IXIT statements

Support for concatenation of multiple short messages MO/PP on the same RRC connection.

Description of how to enter multiple SMS.

Support for state U10 of call control.

Whether SMS messages are stored in the USIM and/or the ME.

Foreseen final state of UE

Idle, updated.

Test procedure

a) A data or speech call is established on a DTCH with the SS and the state U10 of call control is entered. The UE is set up to send 3 short messages as multiple SM to the SS. After the reception of the CM SERVICE REQUEST, the SS sends a CM SERVICE ACCEPT message.

b) Steps c) to k) of the test procedure in clause 16.1.9.1.4 are repeated.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | SS | | A data or speech call is established on a DTCH and the state U10 of call control is entered. |
| 2 | UE | | | The UE is set up to send 3 short messages as multiple SM |
| 3 | --> | | CM SERVICE REQUEST | Sent in a layer 2 frame on the DCCH. CM service type set to "Short Message Service" |
| 4 | <-- | | CM SERVICE ACCEPT | |
| 7 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU). The Transaction Identifier used in steps 7, 8, 9 and 11 shall be x. |
| 8 | <-- | | CP-ACK | |
| 9 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 10 | --> | | CM SERVICE REQUEST | Sent in a layer 2 frame on the DCCH. CM service type set to "Short Message Service" |
| 11 | --> | | CP-ACK | The one that acknowledges the CP-DATA which carried the RP-ACK RPDU.<br>If CP-ACK received then continue at A12<br>If CP-ACK is not received within 5 s from the CM SERVICE REQUEST was sent in step 10 then goto step B11.<br>(See note 1 and note 2) |
| Branch A | | | | |
| A12 | <-- | | CM SERVICE ACCEPT | After having sent the CM SERVICE ACCEPT then goto step 13. |
| Branch B | | | | |
| B11 | <-- | | CM SERVICE ACCEPT | |
| B12 | --> | | CP-ACK | The one that acknowledges the CP-DATA which carried the RP-ACK RPDU.<br>For Rel-4 or later release UE: Optional step (See note 2) |
| 13 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU). The Transaction Identifier used in steps 13, 14, 15 and 17 shall be y where y <> x (see step 7). |
| 14 | <-- | | CP-ACK | |
| 15 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 16 | --> | | CM SERVICE REQUEST | Sent in a layer 2 frame on the DCCH. CM service type set to "Short Message Service" |
| 17 | --> | | CP-ACK | The one that acknowledges the CP-DATA which carried the RP-ACK RPDU.<br>If CP-ACK received then continue at A18.<br>If CP-ACK is not received within 5 s from the CM SERVICE REQUEST was sent in step 16 then goto step B17.<br>(See note 1 and note 2) |
| Branch A | | | | |
| A18 | <-- | | CM SERVICE ACCEPT | |
| Branch B | | | | |
| B17 | <-- | | CM SERVICE ACCEPT | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| B18 | --> | | CP-ACK | The one that acknowledges the CP-DATA which carried the RP-ACK RPDU.<br>For Rel-4 or later release UE: Optional step (See note 2) |
| 19 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU). The Transaction Identifier used in steps 19, 20, 21 and 22 shall be z, where z <> y (see step 13). |
| 20 | <-- | | CP-ACK | |
| 21 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 22 | --> | | CP-ACK | Shall be sent within 5 s of step 21 |
| 23 | SS | | | The SS releases the RRC connection |
| NOTE 1: 5 s have been agreed to be a reasonable value to secure that the UE have enough time to respond to the different messages. | | | | |
| NOTE 2: The CP-ACK for the old MM connection can be received either before or after the reception of the CM SERVICE ACCEPT message. For Release 4 or later release the UE transmission of the final CP-ACK is optional. | | | | |

#### 16.1.9.2.5 Test requirements

In step 10 the UE shall transmit a CM SERVICE REQUEST for the new CM connection (for the second short message) before the final CP-ACK for the old MM connection is transmitted.

In step 16 the UE shall transmit a CM SERVICE REQUEST for the new CM connection (for the third short message) before the final CP-ACK for the old MM connection is transmitted.

### 16.1.10 Test of capabilities of simultaneously receiving a short message whilst sending a mobile originated short message

#### 16.1.10.1 Definition

#### 16.1.10.2 Conformance requirements

An active UE shall be able to receive a short message TPDU (SMS-DELIVER) at any time, independently of whether or not there is an SMS mobile originated call (SMS-SUBMIT or SMS-COMMAND) in progress.

References

3GPP TS 23.040 clauses 3.1, 9.2.3.16.

3GPP TS 24.011 clause 3.2.

#### 16.1.10.3 Test purpose

The test verifies that the UE is capable of simultaneously receiving a network originated SM whilst sending a mobile originated SM.

#### 16.1.10.4 Method of test

Initial Conditions

- System simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in MM-state "Idle, updated";
  - the SMS message storage shall be empty.

Related ICS/IXIT Statements

Support for Short message MO/PP and MT/PP.

Support for state U10 of call control.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

Test procedure

a) The SS is configured to receive a mobile originated SM. In clause 16.1.2 steps a) and b) are repeated and, using the end of the CP-DATA message from the UE as a trigger, the SS sends a SM to the UE. In this case a new transaction identifier shall be used in the CP messages of SMS mobile terminated.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set up to send an SM |
| 2 | SS | | | The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Originating Low Priority Signalling". |
| 3 | | | (void) | |
| 4 | | | (void) | |
| 5 | --> | | CM SERVICE REQUEST | CM service type set to "Short Message Service" |
| 6 | <-- | | AUTHENTICATION REQUEST | |
| 7 | --> | | AUTHENTICATION RESPONSE | |
| 8 | SS | | | The SS starts integrity protection |
| 9 | | | (void) | |
| 10 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 11 | SS | | | The SS sends an SM to the UE triggered by the end of the CP-DATA message from the UE |
| 12 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 13 | UE | | | The UE shall correctly receive the SM and indicate that a message has arrived. In the MO case the UE shall send the CP-ACK message with transaction identifier assigned to this transfer. In the MT case the UE shall send a CP-ACK message and a CP-DATA message containing the RP-ACK RPDU. The transaction identifier shall be the same as chosen by the SS for the MT transfer. |
| NOTE: Time values for SS wait times are chosen sufficiently high to be sure that the UE has enough time to respond to the different messages. | | | | |

Specific Message Contents

SMS SUBMIT TPDU

| Information element | Comment Value |
|---|---|
| TP-UDL | as applicable |
| TP-UD (140 octets) | 160 ASCII characters |

16.1.10.5 Test requirements

After step 12 UE shall correctly receive the SM and indicate that a message has arrived.

# 16.2 Short message service point to point on PS mode

All of test cases in this clause are applied to the UE supported PS mode.

## 16.2.1 SMS mobile terminated

16.2.1.1 Definition

16.2.1.2 Conformance requirements

An active UE shall be able to receive short message TPDU (SMS-DELIVER) at any time, independently of whether or not there is a PDP context in progress. A report will always be returned to the SC, confirming that the UE has received the short message.

References

3GPP TS 23.040 clauses 3.1, 9.2.3.16.

16.2.1.3 Test purpose

To verify the ability of a UE to receive and decode the SMS where provided for the point to point service.

16.2.1.4 Method of test

Initial Conditions

- System simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in GMM-state "GMM-REGISTERED";
  - the SMS message storage shall be empty.

Related ICS/IXIT Statements

Support for Short message MT/PP.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

Support for session management state"PDP-ACTIVE".

Maximum number of retransmissions of an unacknowledged CP-DATA message.

Test procedure

a) Mobile terminates establishment of Radio Resource Connection. After the completion of RRC Connection the SS authenticates the UE and activates ciphering.

   After the SS receives SECURITY MODE COMPLETE, the SS sends a CP-DATA message. The information element of the CP-DATA message will be RP-DATA RPDU (SMS DELIVER TPDU).

b) The SS waits a maximum of 25 s for the CP-ACK message and then a maximum of 60 s for the CP-DATA message containing the RP-ACK RPDU.

c) The SS sends a CP-ACK to the UE within TC1M with no further CP-DATA messages and the SS initiates channel release.

d) Steps a), b) and c) are repeated but the first CP-DATA message from the UE is not acknowledged. The second CP-DATA message from the UE is acknowledged by a CP-ACK within a time TC1M.

e) Steps a) and b) are repeated. The SS is configured not to send CP-ACK. Then maximum 3 CP-DATA retransmissions may occur. After a duration of 4 times TC1M + 10 s (Maximum for T3317) SS initiates the channel release. This is the appropriate time to wait to verify that the UE does not send more than the maximum allowed (3) CP-DATA retransmissions.

f) The SMS message store shall be cleared manually by the operator.

g) A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered.

   The SS sends a CP-DATA message. The information element of the CP-DATA message will be RP-DATA RPDU (SMS DELIVER TPDU). The SS waits a maximum of 25 s for the CP-ACK message and then a maximum of 60 s for the CP-DATA message containing the RP-ACK RPDU.

h) The SS sends a CP-ACK to the UE within TC1M with no further CP-DATA messages and the SS initiates channel release. The SMS message store shall be cleared manually by the operator.

i) Steps g) and h) are repeated but the first CP-DATA message from the UE is not acknowledged. The second CP-DATA message from the UE is acknowledged by a CP-ACK within a time TC1M.

j) Step g) is repeated. The SS is configured not to send CP-ACK. Then maximum 3 CP-DATA retransmissions may occur. After a duration of 4 times TC1M + 10 s (Maximum for T3317) SS initiates the channel release. This is the appropriate time to wait to verify that the UE does not send more than the maximum allowed (3) CP-DATA retransmissions (during PDP context in progress).

k) A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered. The PDP context is cleared by the SS with a disconnect message. (The PDP context deactivating is continued in parallel to the following exchange of messages related to SMS).

The SS sends a CP-DATA RPDU (SMS DELIVER TPDU) message. The information element of the CP-DATA message is RP-DATA.

The SS waits a maximum of 25 s for the CP-ACK message and then a maximum of 60 s for the CP-DATA message containing the RP-ACK RPDU.

The SS sends a CP-ACK to the UE within TC1M with no further CP-DATA messages and the SS initiates channel release.

The SMS message store shall be cleared manually by the operator.

l) A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered. The PDP context shall be cleared from the UE. (The PDP context deactivating is continued in parallel to the following exchange of messages related to SMS).

The SS sends a CP-DATA message. The information element of the CP-DATA message is RP-DATA RPDU (SMS DELIVER TPDU).

The SS waits a maximum of 25 s for the CP-ACK message and then a maximum of 60 s for the CP-DATA message containing the RP-ACK RPDU.

The SS sends a CP-ACK to the UE within TC1M with no further CP-DATA messages and the SS initiates channel release.

The SMS message store shall be cleared manually by the operator.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108. The IE “Paging cause” in the PAGING TYPE 1 message is set to “Terminating Low Priority Signalling”. The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Terminating Low Priority Signalling”. |
| 2 | --> | | SERVICE REQUEST | |
| 3 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | | SS | | The SS starts integrity protection |
| 6 | | | (void) | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 8 | | SS | | Waits max 25 s for CP-ACK |
| 9 | --> | | CP-ACK | |
| 10 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 11 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 12 | <-- | | CP-ACK | |
| 13 | | SS | | The SS releases the RRC connection. |
| 14 | UE | | | The UE shall indicate that an SM has arrived. |
| 15 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108. The IE “Paging cause” in the PAGING TYPE 1 message is set to “Terminating Low Priority Signalling”. The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Terminating Low Priority Signalling” |
| 16 | --> | | SERVICE REQUEST | |
| 17 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 18 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 19 | | SS | | The SS starts integrity protection |
| 20 | | | (void) | |
| 21 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 22 | | SS | | Waits max 25 s for CP-ACK |
| 23 | --> | | CP-ACK | |
| 24 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 25 | --> | | CP-DATA | First CP-DATA from UE, contains RP-ACK RPDU |
| 26 | | SS | | First CP-DATA message not acknowledged by SS |
| 27 | --> | | CP-DATA | Retransmitted CP-DATA from UE within twice TC1M, after step 25, contains RP-ACK RPDU |
| 28 | <-- | | CP-ACK | Second CP_DATA message is acknowledged |
| 29 | | SS | | The SS releases the RRC connection. |
| 30 | UE | | | The UE shall indicate that an SM has arrived. |
| 31 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108. The IE “Paging cause” in the PAGING TYPE 1 message is set to “Terminating Low Priority Signalling”. The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Terminating Low Priority Signalling”. |
| 32 | --> | | SERVICE REQUEST | |
| 33 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 34 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 35 | | SS | | The SS starts integrity protection |
| 36 | | | (void) | |
| 37 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 38 | | SS | | Waits max 25 s for CP-ACK |
| 39 | --> | | CP-ACK | |
| 40 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 41 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 42 | | SS | | First CP-DATA message not acknowledged by SS |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 43 | | | CP-DATA | Retransmitted CP-DATA from UE within twice TC1M after step 41, contains RP-ACK RPDU |
| 44 | SS | | | Retransmitted CP-DATA message not acknowledged by SS |
| 45 | UE | | | Depending upon the maximum number of CP-DATA retransmissions implemented, step 43 and 44 may be repeated. The maximum number of retransmissions may however not exceed three. The UE may also send less than 3 re-transmissions. The same RRC connection shall be used for CP-DATA retransmissions. |
| 45a | UE | | | The UE may send a Signalling Connection Release Indication message immediately when TC1M has run out. This is according to TS 24.011 clause 5.3.2.1. |
| 46 | SS | | | The SS releases the RRC connection after a duration of 4*TC1M + 10 s (Maximum for T3317) from step 41. |
| 47 | | | Void | |
| 48 | UE | | | The UE shall indicate that an SM has arrived. |
| 49 | UE | | | A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered. |
| 50 | | | (void) | |
| 51 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 52 | SS | | | Waits max 25 s for CP-ACK |
| 53 | --> | | CP-ACK | |
| 54 | SS | | | Waits max 60 s for RP-ACK RPDU |
| 55 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 56 | <-- | | CP-ACK | |
| 57 | <-- | | DEACTIVATE PDP CONTEXT REQUEST | Deactivates an existing PDP context. |
| 58 | --> | | DEACTIVATE PDP CONTEXT ACCEPT | |
| 58a | --> | | DETACH REQUEST | A manual attach UE is detached |
| 58b | <-- | | DETACH ACCEPT | |
| 58c | SS | | | The SS releases the RRC connection. |
| 59 | UE | | | The UE shall indicate that an SM has arrived. |
| 60 | UE | | | Clear the SMS message store |
| 61 | UE | | | A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered. |
| 62 | | | (void) | |
| 63 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 64 | SS | | | Waits max 25 s for CP-ACK |
| 65 | --> | | CP-ACK | |
| 66 | SS | | | Waits max 60 s for RP-ACK RPDU |
| 67 | --> | | CP-DATA | First CP-DATA from UE, contains RP-ACK RPDU |
| 68 | SS | | | First CP-DATA message not acknowledged by SS |
| 69 | --> | | CP-DATA | Retransmitted CP-DATA message within twice TC1M after step 67, contains RP-ACK RPDU |
| 70 | <-- | | CP-ACK | Second CP-DATA message is acknowledged |
| 71 | <-- | | DEACTIVATE PDP CONTEXT REQUEST | Deactivates an existing PDP context. |
| 72 | --> | | DEACTIVATE PDP CONTEXT ACCEPT | |
| 72a | --> | | DETACH REQUEST | A manual attach UE is detached |
| 72b | <-- | | DETACH ACCEPT | |
| 73 | SS | | | The SS releases the RRC connection |
| 74 | UE | | | The UE shall indicate that an SM has arrived. |
| 75 | UE | | | Clear the SMS message store |
| 76 | UE | | | A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered. |
| 77 | | | (void) | |
| 78 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 79 | SS | | | Waits max 25 s for CP-ACK |
| 80 | --> | | CP-ACK | |
| 81 | SS | | | Waits max 60 s for RP-ACK RPDU |
| 82 | --> | | CP-DATA | First CP-DATA from UE, contains RP-ACK RPDU |
| 83 | SS | | | First CP-DATA message not acknowledged by SS |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 84 | --> | | CP-DATA | Retransmitted CP-DATA message within twice TC1M after step 82, contains RP-ACK RPDU |
| 85 | SS | | | Retransmitted CP-DATA message not acknowledged by SS |
| 86 | UE | | | Depending on the maximum number of CP-DATA retransmissions implemented, step 83-84 may be repeated. The maximum number of retransmissions may however not exceed three. The UE may also send less than 3 re-transmissions. The same RRC connection shall be used for CP-DATA retransmissions. |
| 86a | <-- | | DEACTIVATE PDP CONTEXT REQUEST | Deactivates an existing PDP context. |
| 86b | --> | | DEACTIVATE PDP CONTEXT ACCEPT | |
| 86c | --> | | DETACH REQUEST | A manual attach UE is detached |
| 86d | <-- | | DETACH ACCEPT | |
| 87 | SS | | | The SS releases the RRC connection after a duration of 4*TC1M + 10 s (Maximum for T3317) from step 82. |
| 88 | | | (void) | |
| 89 | UE | | | The UE shall indicate that an SM has arrived. |
| 90 | UE | | | Clear the SMS message store |
| 91 | SS | | | A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered. |
| 92 | | | (void) | |
| 93 | | | (void) | |
| 94 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 94a | <-- | | DEACTIVATE PDP CONTEXT REQUEST | The PDP context is deactivated by the SS. The PDP context deactivating is continued in parallel to the following exchange of messages related to SMS. |
| 94b | --> | | DEACTIVATE PDP CONTEXT ACCEPT | This message should be transmitted within T3395 Expiry and at any step before step 96 |
| 94c | | | VOID | |
| 94d | | | VOID | |
| 94e | | | VOID | |
| 95 | SS | | | Waits max 25 s for CP-ACK |
| 96 | --> | | CP-ACK | |
| 97 | SS | | | Waits max 60 s for RP-ACK RPDU |
| 98 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 99 | <-- | | CP-ACK | |
| 99a | --> | | DETACH REQUEST | A manual attach UE is detached |
| 99b | <-- | | DETACH ACCEPT | |
| 100 | SS | | | The SS releases the RRC connection |
| 101 | UE | | | The UE shall indicate that an SM has arrived. |
| 102 | UE | | | Clear the SMS message store |
| 103 | UE | | | A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered. |
| 104 | | | (void) | |
| 105 | --> | | DEACTIVATE PDP CONTEXT REQUEST | The PDP context is deactivated by the UE. The PDP context deactivation is continued in parallel to the following |
| 106 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |
| 107 | <-- | | DEACTIVATE PDP CONTEXT ACCEPT | |
| 107a | | | VOID | |
| 107b | | | VOID | |
| 107c | | | VOID | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 108 | → | | CP-ACK | shall be sent before 25 s after the start of step 106 |
| 109 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 110 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 111 | <-- | | CP-ACK | |
| 111a | --> | | DETACH REQUEST | A manual attach UE is detached |
| 111b | <-- | | DETACH ACCEPT | |
| 112 | | SS | | The SS releases the RRC connection |
| 113 | UE | | | The UE shall indicate that an SM has arrived. |
| 114 | UE | | | Clear the SMS message store |
| NOTE: Time values for SS wait time are chosen sufficiently high to be sure that the UE has enough time to respond to the different messages. | | | | |

Specific Message Contents

SMS DELIVER TPDU (not containing a type 0 message)

| Information element | Comment Value |
|---|---|
| TP-PID | Different from Type 0: “01000000”B |
| TP-UDL | 160 |
| TP-UD (140 octets) | text of message (160 characters) |
| NOTE: The 160 characters in TP-UD shall include at least one occurrence of each character in the default alphabet (see 3GPP TS 23.038, clause 6.2.1). | |

### 16.2.1.5 Test requirements

After step 7 UE shall receive SMS-DELIVER TPDU and send CP-ACK within 25 s and CP-DATA containing RP-ACK within 60 s.

After step 14 UE shall indicate that an SM has arrived.

After step 27 UE shall retransmit CP-DATA containing RP-ACK within twice TC1M.

After step 30 UE shall indicate that an SM has arrived.

After step 43 UE shall repeat CP-DATA retransmissions and the maximum number of retransmissions must not exceed three.

After step 48 UE shall indicate that an SM has arrived.

After step 51 UE shall receive SMS-DELIVER TPDU and send CP-ACK within 25 s and CP-DATA containing RP-ACK within 60 s.

After step 59 UE shall indicate that an SM has arrived.

After step 69 UE shall retransmit CP-DATA containing RP-ACK within twice TC1M.

After step 74 UE shall indicate that an SM has arrived.

After step 84 UE shall repeat CP-DATA retransmissions and the maximum number of retransmissions must not exceed three.

After step 89 UE shall indicate that an SM has arrived.

After step 94 UE shall receive SMS-DELIVER TPDU and send CP-ACK within 25 s and CP-DATA containing RP-ACK within 60 s.

After step 101 UE shall indicate that an SM has arrived.

After step 106 UE shall receive SMS-DELIVER TPDU and send CP-ACK within 25 s and CP-DATA containing RP-ACK within 60 s.

After step 113 UE shall indicate that an SM has arrived.

## 16.2.2 SMS mobile originated

### 16.2.2.1 Definition

### 16.2.2.2 Conformance requirements

An active UE shall be able to submit short message TPDU (SMS-SUBMIT) at any time, independently of whether or not there is a PDP context in progress.

References

3GPP TS 23.040 clause 3.1, 9.2.3.16.

### 16.2.2.3 Test purpose

To verify that the UE is able to correctly send a short message where the SMS is provided for the point to point service.

### 16.2.2.4 Method of test

Initial Conditions

- System simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in GMM-state "GMM-REGISTERED";
  - the SMS message storage shall be empty.

Related ICS/IXIT Statements

Support for Short message MO/PP.

Support for state PDP-ACTIVE of session management.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

Maximum number of retransmissions of an unacknowledged CP-DATA message.

Test procedure

a) The UE shall be set up to send an SM to the SS. The UE establishes successfully an RRC connection.

b) The SS performs authentication and after that, the SS starts integrity protection.

c) The SS responds to the CP-DATA containing RP-DATA RPDU (SMS SUBMIT TPDU) from the UE with a CP-ACK message within TC1M followed by a CP-DATA message containing the correct RP-ACK RPDU. The SS waits a maximum of 25 s for the CP-ACK message.

d) The SS sends a channel release message to the UE.

e) Steps a) and b) are repeated. The SS is configured not to send the CP-ACK message. Then maximum 3 CP-DATA retransmissions may occur. After a duration of 4 times TC1M + 10 s (Maximum for T3317) SS initiates channel release. This is the appropriate time to wait to verify that the UE does not send more than the maximum CP-DATA retransmissions.

f) Steps a) and b) are repeated. On receipt of the CP-DATA from the UE the SS sends a CP-ERROR message within TC1M containing a "Network Failure" cause. Then the SS initiates channel release.

g) A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered. The UE is set up to send an SM to the SS.

h) The SS responds to the CP-DATA containing RP-DATA RPDU (SMS SUBMIT TPDU) from the UE with a CP-ACK message within TC1M followed by a CP-DATA message containing the correct RP-ACK RPDU. The SS waits a maximum of 25 s for the CP-ACK message. Then the SS sends a channel release message to the UE.

i) Step g) is repeated. The SS is configured not to send the CP-ACK message. Then maximum 3 CP-DATA retransmissions may occur. After a duration of 4 times TC1M + 10 s (Maximum for T3317) the SS initiates channel release. This is the appropriate time to wait to verify that the UE does not send more than the maximum CP-DATA retransmissions (during a PDP context in progress).

j) (void)

k) The UE is set up to send an SM to the SS. On receipt of the SERVICE REQUEST the SS sends a SERVICE REJECT message with the reject cause set to "GPRS services not allowed". After 5 s the SS initiates channel release.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set up to send an SM |
| 2 | | SS | | The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originating Low Priority Signalling”. |
| 3 | | | (void) | |
| 4 | | | (void) | |
| 5 | --> | | SERVICE REQUEST | |
| 6 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 7 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 8 | | SS | | The SS starts integrity protection |
| 9 | | | (void) | |
| 10 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 11 | <-- | | CP-ACK | Sent within TC1M after step 10 |
| 12 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 13 | | SS | | Waits max 25 s for CP-ACK |
| 14 | --> | | CP-ACK | |
| 15 | | SS | | The SS releases the RRC connection |
| 16 | | | (void) | |
| 17 | UE | | | The UE is set up to send an SM |
| 18 | | SS | | The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originating Low Priority Signalling”. |
| 19 | | | (void) | |
| 20 | | | (void) | |
| 21 | --> | | SERVICE REQUEST | |
| 22 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 23 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 24 | | SS | | The SS starts integrity protection |
| 25 | | | (void) | |
| 26 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 27 | | SS | | SS configured not to send CP-ACK |
| 28 | --> | | CP-DATA | Retransmitted CP-DATA message within twice TC1M after step 26 |
| 29 | UE | | | Depending on the maximum number of CP-DATA retransmissions implemented, step 28 may be repeated. The maximum number of retransmissions may however not exceed three. The UE may also send less than 3 re-transmissions. The same RRC connection shall be used for CP-DATA retransmissions. |
| 29a | UE | | | The UE may send a Signalling Connection Release Indication message immediately when TC1M has run out. This is according to TS 24.011 clause 5.3.2.1. |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 30 | | SS | | The SS releases the RRC connection after a duration of 4*TC1M + 10 s (Maximum for T3317) from step 26. |
| 30a | | | (void) | |
| 31 | | | (void) | |
| 32 | UE | | | The UE is set up to send an SM |
| 33 | | SS | | The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originating Low Priority Signalling”. |
| 34 | | | (void) | |
| 35 | | | (void) | |
| 36 | --> | | SERVICE REQUEST | |
| 37 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 38 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 39 | | SS | | The SS starts integrity protection |
| 40 | | | (void) | |
| 41 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 42 | <-- | | CP-ERROR | Sent within TC1M containing "Network Failure" cause. |
| 43 | | SS | | The SS releases the RRC connection. |
| 44 | | | (void) | |
| 45 | UE | | | A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered. |
| 46 | UE | | | The UE is set up to send an SM |
| 47 | | | (void) | |
| 48 | | | (void) | |
| 49 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 50 | <-- | | CP-ACK | Sent within TC1M after step 49 |
| 51 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 52 | | SS | | Waits max 25 s for CP-ACK |
| 53 | --> | | CP-ACK | |
| 53a | <-- | | DEACTIVATE PDP CONTEXT REQUEST | Deactivates an existing PDP context. |
| 53b | --> | | DEACTIVATE PDP CONTEXT ACCEPT | |
| 53c | --> | | DETACH REQUEST | A manual attach UE is detached |
| 53d | <-- | | DETACH ACCEPT | |
| 54 | | SS | | The SS releases the RRC connection. |
| 55 | | | (void) | |
| 56 | UE | | | A PDP context is established with the SS and the state PDP-ACTIVE of session management is entered. |
| 56a | UE | | | The UE is set up to send an SM. Continue at step 59 (signalling connection already established in step 56). |
| 56b | | | (void) | |
| 56c | | | (void) | |
| 56d | | | (void) | |
| 56e | | | (void) | |
| 57 | | | (void) | |
| 58 | | | (void) | |
| 59 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 60 | | SS | | SS configured not to send CP-ACK |
| 61 | --> | | CP-DATA | Retransmitted CP-DATA message within twice TC1M after step 59 |
| 62 | UE | | | Depending on the maximum number of CP-DATA retransmissions implemented, step 61 may be repeated. The maximum number of retransmissions may however not exceed three. The UE may also send less than 3 re-transmissions. The same RRC connection shall be used for CP-DATA retransmissions. |
| 63 | | SS | | The SS releases the RRC connection after a duration of 4*TC1M + 10 s (Maximum for T3317) from step 59. |
| 63a | | | (void) | |
| 64 | | | (void) | |
| 65-77 | | | (void) | |
| 78 | UE | | | The UE is set up to send an SM |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 79 | SS | | | The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originating Low Priority Signalling”. |
| 80 | | | (void) | |
| 81 | --> | | SERVICE REQUEST | |
| 82 | <-- | | SERVICE REJECT | Reject cause set to "GPRS services not allowed" |
| 83 | SS | | | The SS releases the RRC connection. The RRC connection is releases 5 s after SERVICE REJECT |
| NOTE: Time values for SS wait times are chosen sufficiently high to be sure that the UE has enough time to respond to the different messages. | | | | |

Specific Message Contents

SMS SUBMIT TPDU

| Information element | Comment Value |
|---|---|
| TP-UDL | as applicable |
| TP-UD (140 octets) | 160 ASCII characters |

#### 16.2.2.5 Test requirements

After step 10 UE shall send a CP-DATA containing RP-data. The RP-DATA shall contain SMS SUBMIT TPDU.

After step 26 UE shall retransmit a CP-DATA containing RP-data. The RP-DATA shall contain SMS SUBMIT TPDU.

After step 49 UE shall send a CP-DATA containing RP-data. The RP-DATA shall contain SMS SUBMIT TPDU.

After step 61 UE shall repeat CP-DATA retransmissions and the maximum number of retransmissions must not exceed three.

After step 82 UE shall not send CP-DATA.

## 16.2.3 Test of memory full condition and memory available notification:

The Memory Available Notification provides a means for the UE to notify the network that it has memory available to receive one or more short messages. The SMS status field in the USIM contains status information on the "memory available" notification flag.

#### 16.2.3.1 Definition

#### 16.2.3.2 Conformance requirement

1. When a mobile terminated message is Class 2, the UE shall ensure that the message has been transferred to the SMS data field in the USIM before sending an acknowledgement to the SC. The UE shall return a protocol error message if the short message cannot be stored in the USIM and there is other short message storage available in the UE. If all the short message storage in the UE is already in use, the UE shall return "memory capability exceeded".

2. When the UE rejects a short message due to lack of available memory capability the need to transfer notification shall be stored in the USIM.

3. If the memory capability becomes available because memory is cleared, the value of the memory capability exceeded notification flag in the USIM is read. If the flag is set, the UE notifies the network that memory capability is now available. After a positive acknowledgement from the network, the ME unsets the memory capability exceeded notification flag in the USIM.

References

- 3GPP TS 23.038 clause 4.

- 3GPP TS 23.040 clauses 9.2.3.10, 10.3 (operation 14).

#### 16.2.3.3 Test purpose

1. To verify that the UE sends the correct acknowledgement when its memory in the USIM becomes full.
2. To verify that the UE sends the correct acknowledgement when its memory in the ME and the USIM becomes full, and sets the "memory exceeded" notification flag in the USIM.
3. To verify that the UE performs the "memory available" procedure when its message store becomes available for receiving short messages, and only at this moment.

#### 16.2.3.4 Method of test

##### Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in GMM-state "GMM-REGISTERED";
  - the SMS message storage shall be empty;
  - the UE shall be connected to the USIM simulator. The following shall be present in the USIM simulator:
    - $EF_{SMS}$ with at least one record;
    - $EF_{SMSS}$, with SMS "Memory Cap. Exceed" notification flag set to "memory available";
    - Service no. 10 (SMS) in $EF_{UST}$ set to allocated and activated.
  - for storing of Class 1 Short Messages the UE shall be set up to store Short Messages in the ME memory (by way of MMI, as described in ICS/IXIT statement).

##### Related ICS/IXIT Statements

Support for Short message MT/PP.

Whether SMS messages are stored in the USIM and/or the ME.

The value of timer TC1M.

##### Test procedure

a) step a) of clause 16.2.5.3 (test of Class 2 Short Messages) is repeated until the UE sends a negative acknowledgement (RP-ERROR). The USIM simulator shall indicate if the "memory capability exceeded" notification flag has been set on the USIM.

b) a Class 1 Short Message is sent to the UE.

c) step b) is repeated until the UE sends a negative acknowledgement (RP-ERROR). The USIM simulator shall indicate if the "memory capability exceeded" notification flag has been set on the USIM.

d) a Short Message is sent to the UE with the DCS field of the SMS-DELIVER TPDU set to 0.

e) the SS prompts the operator to read a short message and to remove it from the message store of the UE.

f) the SS waits for a RRC CONNECTION REQUEST from the UE, and sends a RRC CONNECTION SETUP.

g) after the SS receives a RRC CONNECTION SETUP COMPLETE, the SS authenticates the UE and activates ciphering.

h) the SS answers to the RP-SMMA from the UE with a CP-DATA containing a RP-ACK RPDU.

i) after the UE has acknowledged the CP-DATA with a CP-ACK, the SS releases the RRC connection. The USIM simulator shall indicate if the "memory capability exceeded" notification flag has been unset on the USIM.

j) step e) is repeated.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | SERVICE REQUEST | |
| 3 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 2 Short Message |
| 8 | | SS | | Waits max 25 s for CP-ACK |
| 9 | --> | | CP-ACK | |
| 10 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 11 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 12 | <-- | | CP-ACK | Within TC1M after step 11 |
| 13 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. Step 1-13 is repeated until UE sends a negative acknowledgement (RP-ERROR) in step 11. The RP-ERROR RPDU cause field shall be "Protocol error, unspecified" if there is message capability in the USIM, or "Memory capability exceeded" if there is no message capability in the USIM. If the total memory store of the UE is full, the ME shall set the "memory capability exceeded" notification flag on the USIM. |
| 14 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 15 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 16 | --> | | SERVICE REQUEST | |
| 17 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 18 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 19 | <-- | | SECURITY MODE COMMAND | |
| 20 | --> | | SECURITY MODE COMPLETE | |
| 21 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 1 Short Message |
| 22 | | SS | | Waits max 25 s for CP-ACK |
| 23 | --> | | CP-ACK | |
| 24 | | SS | | Waits max 60 s for RP-ACK RPDU |
| 25 | --> | | CP-DATA | Shall contain RP-ACK RPDU if there is memory capability in the ME. If not it shall contain RP-ERROR RPDU which cause field shall be "memory capability exceeded". If the total memory store of the UE now becomes full at this step, the ME shall set the "memory cap. exceed" notification flag on the USIM. |
| 26 | <-- | | CP-ACK | Within TC1M after step 25 |
| 27 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. Step 16-27 is repeated until the UE sends an RP-ERROR. The USIM simulator shall indicate if the "memory capability exceeded" notification flag has been set on the USIM. |
| 28 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 29 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 30 | --> | | SERVICE REQUEST | |
| 31 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 32 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 33 | <-- | | SECURITY MODE COMMAND | |
| 34 | --> | | SECURITY MODE COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 35 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) with TP-DCS set to 0 |
| 36 | SS | | | Waits max 25 s for CP-ACK |
| 37 | --> | | CP-ACK | |
| 38 | SS | | | Waits max 60 s for RP-ACK RPDU |
| 39 | --> | | CP-DATA | Shall contain RP-ERROR RPDU with error cause "memory capability exceeded". |
| 40 | <-- | | CP-ACK | Within TC1M after step 39 |
| 41 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 42 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 43 | SS | | | Prompts the operator to remove one of the short messages from the message store of the UE. |
| 44 | <-- | | SYSTEM INFORMATION | BCCH |
| 45 | --> | | RRC CONNECTION REQUEST | CCCH |
| 46 | <-- | | RRC CONNECTION SETUP | CCCH |
| 47 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 48 | --> | | SERVICE REQUEST | |
| 49 | <-- | | SERVICE ACCEPT | |
| 50 | --> | | CP-DATA | Contains RP-SMMA RPDU |
| 51 | <-- | | CP-ACK | |
| 52 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 53 | --> | | CP-ACK | Acknowledge of CP-DATA containing the RP-ACK RPDU. The ME shall unset the "memory capability exceeded" notification flag on the USIM. |
| 54 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. The USIM simulator shall indicate if the "memory capability exceeded" notification flag has been unset on the USIM. |
| 55 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 56 | SS | | | Prompts the operator to remove one of the short messages from the message store of the UE. |
| 57 | UE | | | Shall not attempt to send a RP-SMMA RPDU. This is verified by checking that the UE does not send a CHANNEL REQUEST message with the establishment cause "Other services which can be completed with an SDCCH" |
| NOTE: Time values for SS wait time are chosen sufficiently high to be sure that the UE has enough time to respond to the different messages. | | | | |

Specific Message Contents

SMS-DELIVER TPDU in step 7

| Information element | Comment Value |
|---|---|
| TP-DCS | default alphabet, class 2 "11110010"B |

SMS-DELIVER TPDU in step 21

| | |
|---|---|
| TP-DCS | default alphabet, class 1 "11110001"B |

SMS-DELIVER TPDU in step 35

| | |
|---|---|
| TP-DCS | default alphabet "00000000"B |

### 16.2.3.5 Test requirements

After UE sends a negative acknowledgement (RP-ERROR) in step 11, the USIM simulator shall indicate if the "memory capability exceeded" notification flag has been set on the USIM.

After UE sends a negative acknowledgement (RP-ERROR) in step 25, the USIM simulator shall indicate if the "memory capability exceeded" notification flag has been set on the USIM.

After step 53 the ME shall unset the "memory capability exceeded" notification flag on the USIM.

After step 57 UE shall not attempt to send a RP-SMMA RPDU.

## 16.2.4 Test of the status report capabilities and of SMS-COMMAND:

This test applies to UEs which support the status report capabilities.

### 16.2.4.1 Definition

### 16.2.4.2 Conformance requirement

The SMS offers the SC the capabilities of informing the UE of the status of a previously sent mobile originated short message. This is achieved by the SC returning a status report TPDU (SMS-STATUS-REPORT) to the originating UE.

SMS-COMMAND enables an UE to invoke an operation at the SC.

The UE shall increment TP-MR by 1 for each SMS-SUBMIT or SMS-COMMAND being submitted.

References

- 3GPP TS 23.040 clauses 3.2.9, 9.2.3.2, 9.2.3.4, 9.2.3.5, 9.2.3.6, 9.2.3.14, 9.2.3.18, 9.2.3.19, 9.2.3.26.

### 16.2.4.3 Test purpose

1) To verify that the UE is able to accept a SMS-STATUS-REPORT TPDU.

2) To verify that the UE is able to use the SMS-COMMAND functionality correctly and sends an SMS-COMMAND TPDU with the correct TP-Message-Reference.

### 16.2.4.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in GMM-state "GMM-REGISTERED".

Related ICS/IXIT Statements

Support of SMS MO/PP and MT/PP.

Test procedure

a) The UE is made to send a Mobile Originated short message setting TP-SRR as in steps a) to d) of test 16.2.2 (SMS Mobile originated).

b) The SS sends a CP-DATA message containing a RP-DATA RPDU itself containing an SMS-STATUS-REPORT TPDU.

c) The SS sends a RRC CONNECTION RELEASE message.

d) The UE is made to send an SMS-COMMAND message enquiring about the previously submitted short message.

e) Void.

f) The SS acknowledges the CP-DATA message from the UE with a CP-ACK followed by a CP-DATA message containing an RP-ACK RPDU.

g) After receiving the CP-ACK from the UE, the SS releases the RRC connection by using a RRC CONNECTION RELEASE message.

h) The UE is made to send an SMS-COMMAND message requiring to delete the previously submitted short message.

i) steps e) to g) are repeated.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION | BCCH |
| 2 | --> | | RRC CONNECTION REQUEST | CCCH |
| 3 | <-- | | RRC CONNECTION SETUP | CCCH |
| 4 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 5 | --> | | SERVICE REQUEST | |
| 6 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 7 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 8 | <-- | | SECURITY MODE COMMAND | |
| 9 | --> | | SECURITY MODE COMPLETE | |
| 10 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 11 | <-- | | CP-ACK | Sent within TC1M after step 10 |
| 12 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 13 | SS | | | Waits max 25 s for CP-ACK |
| 14 | --> | | CP-ACK | |
| 15 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 16 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 17 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 18 | --> | | SERVICE REQUEST | |
| 19 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 20 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 21 | <-- | | SECURITY MODE COMMAND | |
| 22 | --> | | SECURITY MODE COMPLETE | |
| 23 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS-STATUS-REPORT TPDU) |
| 24 | --> | | CP-ACK | |
| 25 | --> | | CP-DATA | Contains RP-ACK RPDU |
| 26 | <-- | | CP-ACK | |
| 27 | <-- | | RRC CONNECTION RELEASE | |
| 28 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 29 | UE | | | The UE is made to send an SMS-COMMAND message enquiring about the previously submitted SM |
| 30 | <-- | | SYSTEM INFORMATION | BCCH |
| 31 | --> | | RRC CONNECTION REQUEST | CCCH |
| 32 | <-- | | RRC CONNECTION SETUP | CCCH |
| 33 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 34 | --> | | SERVICE REQUEST | |
| 35 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 36 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 37 | <-- | | SECURITY MODE COMMAND | |
| 38 | --> | | SECURITY MODE COMPLETE | |
| 39 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS-COMMAND TPDU) which shall contain the correct TP-MR |
| 40 | <-- | | CP-ACK | |
| 41 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 42 | --> | | CP-ACK | |
| 43 | <-- | | RRC CONNECTION RELEASE | |
| 44 | --> | | RRC CONNECTION RELEASE COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 45 | UE | | The UE is made to send an SMS-COMMAND | message requiring to delete the previously submitted SM. |
| 46 | --> | | RRC CONNECTION REQUEST | CCCH |
| 47 | <-- | | RRC CONNECTION SETUP | CCCH |
| 48 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 49 | --> | | SERVICE REQUEST | |
| 50 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 51 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 52 | <-- | | SECURITY MODE COMMAND | |
| 53 | --> | | SECURITY MODE COMPLETE | |
| 54 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS-COMMAND TPDU) which shall contain the correct TP-MR |
| 55 | <-- | | CP-ACK | |
| 56 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 57 | --> | | CP-ACK | |
| 58 | <-- | | RRC CONNECTION RELEASE | |
| 59 | --> | | RRC CONNECTION RELEASE COMPLETE | |

Specific Message Contents

SMS SUBMIT TPDU

| Information element | Comment Value |
|---|---|
| TP-SRR | status report is requested "1"B |

SMS-STATUS-REPORT TPDU (SS to UE in step 23):

| Information element | Comment Value |
|---|---|
| TP-MR | same as previous SMS-SUBMIT |
| TP-MMS | no more messages "1"B |
| TP-SRQ | result of SMS-SUBMIT "0"B |
| TP-RA | same as the Destination address of the SMS-SUBMIT |
| TP-ST | SM received "00000000"B |

first SMS-COMMAND TPDU (UE to SS in step 39)

| Information element | Comment Value |
|---|---|
| TP-MR | TP-MR in previous SMS-SUBMIT plus "1" |
| TP-SRR | status report requested "1"B |
| TP-CT | Enquiry relating to previously submitted short message "00000000"B |
| TP-MN | not checked (TP-MR in previous SMS-SUBMIT) |

second SMS-COMMAND TPDU (UE to SS in step 54)

| Information element | Comment Value |
|---|---|
| TP-MR | TP-MR in previous SMS-COMMAND plus "1" |
| TP-CT | Delete previously submitted short message "00000010"B |
| TP-MN | not checked (TP-MR in previous SMS-SUBMIT) |

### 16.2.4.5 Test requirements

After step 23 UE accept a SMS-STATUS-REPORT TPDU.

After step 39 UE shall send a SMS-COMMAND TPDU with the correct TP-Message-Reference.

After step 54 UE shall send a SMS-COMMAND TPDU with the correct TP-Message-Reference.

## 16.2.5 Test of message class 0 to 3

### 16.2.5.1 Short message class 0

#### 16.2.5.1.1 Definition

#### 16.2.5.1.2 Conformance requirement

When a mobile terminated message is class 0 and the UE has the capability of indicating short messages, the UE shall indicate the message immediately and send an acknowledgement to the SC when the message has successfully reached the UE irrespective of whether there is memory available in the USIM or ME. The message shall not be automatically stored in the USIM or ME.

Reference

3GPP TS 23.038 clause 4.

#### 16.2.5.1.3 Test purpose

To verify that the UE will accept and indicate but not store a class 0 message, and that it will accept and indicate a class 0 message if its message store is full.

NOTE: failure of this test in a UE could cause it to reject a class 0 message when its SMS memory becomes full. This could lead to unwanted repetitions between the UE and the service centre.

#### 16.2.5.1.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in GMM-state "GMM-REGISTERED";
  - the UE message store shall be empty.

Related ICS/IXIT Statements

Support for Short message MT/PP.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

Test procedure

a) The SS sends a class 0 message by using the method described in step a) of clause 16.2.1 but with the TPDU described in this clause.

b) The UE message store shall be filled (for example by using the method of clause 16.2.3 test of the memory available notification) with the same SMS-DELIVER TPDU except that TP-DCS is set to class 1.

c) The SS sends a class 0 message as in step a).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | SERVICE REQUEST | |
| 3 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 0 Short Message |
| 8 | --> | | CP-ACK | |
| 9 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | UE | | | The content of the short message shall be indicated by the ME. The UE shall not store the message. This can be checked by verifying that it is impossible to retrieve any short messages from the UE message store. |
| 14 | | SS | | The UE message store shall be filled (for example by using the method of 16.2.3) with Class 1 SMS-DELIVER TPDU. |
| 15 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 16 | --> | | SERVICE REQUEST | |
| 17 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 18 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 19 | <-- | | SECURITY MODE COMMAND | |
| 20 | --> | | SECURITY MODE COMPLETE | |
| 21 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 0 Short Message |
| 22 | --> | | CP-ACK | |
| 23 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 24 | <-- | | CP-ACK | |
| 25 | <-- | | RRC CONNECTION RELEASE | |
| 26 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 27 | UE | | | The content of the short message shall be indicated by the ME. |

Specific Message Contents

SMS-DELIVER TPDU (containing a class 0 message) (SS to UE)

| Information element | Comment | Value |
|---|---|---|
| TP-DCS | default alphabet, class 0 | "1111 0000"B |

SMS-DELIVER TPDU (containing a class 1 message to fill the UE message store) (SS to UE)

| Information element | Comment | Value |
|---|---|---|
| TP-DCS | default alphabet, class 1 | "1111 0001"B |

16.2.5.1.5 Test requirements

After step 7 UE shall accept and indicate but not store a class 0 message.

After step 21 UE shall accept and indicate a class 0 message.

### 16.2.5.2 Test of class 1 short messages

This test shall apply to UEs which support:

- storing of received Class 1 Short Messages; and
- indicating of stored Short Messages.

#### 16.2.5.2.1 Definition

#### 16.2.5.2.2 Conformance requirement

When a mobile terminated message is class 1, the UE shall send an acknowledgement to the SC when the message has successfully reached the UE and can be stored, either in the ME or in the USIM.

Reference

3GPP TS 23.038 clause 4.

#### 16.2.5.2.3 Test purpose

This procedure verifies that the UE acts correctly on receiving a class 1 message, i.e. that it stores the message in the ME or USIM and sends an acknowledgement (at RP and CP-Layer).

#### 16.2.5.2.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in GMM-state "GMM-REGISTERED";
  - the UE message store shall be empty;
  - for storing of class 1 Short Messages, the UE shall be set up to store Short Messages in the ME memory (by way of MMI, as described in ICS/IXIT statement).

Related ICS/IXIT Statements

Support for Short message MT/PP.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

Test procedure

a) The SS delivers a Short Message of class 1 to the UE as specified in clause 16.2.1, step a).

b) The Short Message is recalled (e.g. by means of the MMI).

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | SERVICE REQUEST | |
| 3 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 1 Short Message |
| 8 | --> | | CP-ACK | |
| 9 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | UE | | | The short message shall be recalled and indicated at the UE. |

Specific Message Contents

SMS-DELIVER TPDU (containing a class 1 message) (SS to UE)

| Information element | CommentValue | |
|---|---|---|
| TP-DCS | default alphabet, class 1 | "1111 0001"B |

#### 16.2.5.2.5 Test requirements

After step 7 UE shall store the message in the ME or USIM and send an acknowledgement.

### 16.2.5.3 Test of class 2 short messages

#### 16.2.5.3.1 Definition

Class 2 Short Messages are defined as USIM specific, and the UE shall ensure that a message of this class is stored on the USIM.

#### 16.2.5.3.2 Conformance requirement

When a mobile terminated message is Class 2, the UE shall ensure that the message has been correctly transferred to the SMS data field in the USIM before sending an acknowledgement to the SC. The UE shall return a "protocol error, unspecified" error message if the short message cannot be stored in the USIM and there is other short message storage available at the UE. If all the short message storage at the UE is already in use, the UE shall return "memory capacity exceeded".

References

3GPP TS 23.040 clause 9.2.3.10.

3GPP TS 23.038 clause 4.3

3GPP TS 34.108 clause 8.3.2.28.

#### 16.2.5.3.3 Test purpose

This procedure verifies that the UE acts correctly on receiving a class 2 message, i.e. that it stores the message correctly in the USIM, and if this is not possible, returns a protocol error message, with the correct error cause, to the network.

There are 2 cases:

1) if the UE supports storing of short messages in the USIM and in the ME, and storage in the ME is not full, and the short message cannot be stored in the USIM, the error cause shall be "protocol error, unspecified";

2) if the UE supports storing of short messages in the USIM and not in the ME, and storage in the ME is not full, and the short message cannot be stored in the USIM, the error cause shall be "memory capacity exceeded".

NOTE: If the UE supports storing of short messages in the USIM and the ME, and storage in the ME is full, and the short message cannot be stored in the USIM, the error cause shall be "memory capacity exceeded". This case is not tested in this test.

#### 16.2.5.3.4 Method of test

##### Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in GMM-state "GMM-REGISTERED";
  - the ME message store shall be empty;
  - the ME shall be connected to the USIM simulator. The following shall be present in the USIM simulator:
    - $EF_{SMS}$ with at least two free records and one full record;
    - $EF_{SMSS}$, with SMS "Memory Cap. Exceed" notification flag set to "memory available";
    - Service no. 10 (SMS) in $EF_{UST}$ set to allocated and activated;
    - for storing of Class 1 Short Messages the UE shall be set up to store Short Messages in the ME memory (by way of MMI, as described in ICS/IXIT statement).

##### Related ICS/IXIT Statements

Support for Short message MT/PP.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

##### Test procedure

a) The SS delivers a Short Message of class 2 to the UE as specified in clause 16.2.1, step b).

b) Following an attempt by the ME to store the short message in a free record of $EF_{SMS}$ in the USIM, the USIM simulator returns the status response "OK" ("90 00").

c) Step a) is repeated.

d) Following an attempt by the ME to store the short message in a free record of $EF_{SMS}$ in the USIM, the USIM simulator returns the status response "memory problem" ("92 40").

e) The USIM simulator indicates if an attempt was made in steps a) and c) to store the messages and if the messages are stored according to the requirement.

##### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | SERVICE REQUEST | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 3 | | <-- | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | | --> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | | <-- | SECURITY MODE COMMAND | |
| 6 | | --> | SECURITY MODE COMPLETE | |
| 7 | | <-- | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 2 Short Message |
| 8 | | --> | CP-ACK | |
| 9 | ME | | | The ME shall correctly store the short message in a free record of EFSMS in the USIM, i.e.<br>- the ME shall use a free record<br>- the first byte of the record shall indicate "message received by UE from network"<br>- the TS-Service-Centre-Address shall be correctly stored<br>- the TPDU shall be identical to that sent by the SS<br>- bytes following the TPDU shall be set to "FF" |
| 10 | USIM | | | The USIM simulator returns the status response "OK" ("90 00"). The USIM simulator shall indicate if an attempt was made by the ME to store the short message in the USIM. |
| 11 | | --> | CP-DATA | Contains RP-ACK RPDU. |
| 12 | | <-- | CP-ACK | |
| 13 | | <-- | RRC CONNECTION RELEASE | |
| 14 | | --> | RRC CONNECTION RELEASE COMPLETE | |
| 15 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 16 | | --> | SERVICE REQUEST | |
| 17 | | <-- | AUTHENTICATION AND CIPHERING REQUEST | |
| 18 | | --> | AUTHENTICATION AND CIPHERING RESPONSE | |
| 19 | | <-- | SECURITY MODE COMMAND | |
| 20 | | --> | SECURITY MODE COMPLETE | |
| 21 | | <-- | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), Class 2 Short Message |
| 22 | | --> | CP-ACK | |
| 23 | ME | | | The ME shall attempt to store the short message in a free record of EFSMS in the USIM. |
| 24 | USIM | | | The USIM simulator returns the status response "memory problem" ("92 40"). The USIM simulator shall indicate if an attempt was made by the ME to store the short message in the USIM. |
| 25 | | --> | CP-DATA | Contains RP-ERROR RPDU with error cause "protocol error, unspecified" if the UE supports storing of short messages in the ME, or error cause "memory capacity exceeded" if not. |
| 26 | | <-- | CP-ACK | |
| 27 | | <-- | RRC CONNECTION RELEASE | |
| 28 | | --> | RRC CONNECTION RELEASE COMPLETE | |

Specific Message Contents

SMS-DELIVER TPDU (containing a class 2 message) (SS to UE)

| Information element | Comment | Value |
|---|---|---|
| TP-DCS | default alphabet, class 2 | "1111 0010"B |

#### 16.2.5.3.5 Test requirements

After step 10 UE shall confirm that the short message is stored in the USIM and send CP-DATA containing RP-ACK RPDU.

After step 24 UE shall confirm that the short message cannot be stored in the USIM and send CP-DATA containing RP-ERROR RPDU. If UE supports storing of short message in the ME, the error cause of RP-ERROR RPDU shall be "protocol error, unspecified", and if not the error cause of RP-ERROR RPDU shall be "memory capacity exceeded"

### 16.2.5.4 Test of class 3 short messages

For further study.

## 16.2.6 Test of short message type 0 (R99 and REL-4 UE)

#### 16.2.6.1 Definition and applicability

This tests that the UE correctly acknowledges the receipt of the short message type 0 to the SC in Packet Switched mode. It is highly recommended that the UE discards the contents of the short message type 0.

This test shall apply to all R99 and REL-4 UEs supporting receipt of short messages in PS mode.

#### 16.2.6.2 Conformance requirement

When a mobile terminated message is type 0, the UE shall acknowledge receipt of the short message to the SC but may discard its contents.

Note: It is highly recommended that the UE discards the type 0 short message. This means that the UE is able to receive the type 0 short message irrespective of whether there is memory available in the (U)SIM or ME or not, the UE does not indicate the receipt of the type 0 short message to the user, and the message is not stored in the (U)SIM or ME.

Reference(s)

3GPP TS 23.040, 9.2.3.9.

#### 16.2.6.3 Test purpose

To verify that the UE will acknowledge receipt of the short message to the SC. The UE should discard its contents.

NOTE: failure of this test in a UE could cause it to reject a type 0 message when the network is trying to reach the UE. This could lead to unwanted repetitions between the UE and the service centre.

#### 16.2.6.4 Method of test

Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

the UE shall be in GMM-state "GMM-REGISTERED";

Related ICS/IXIT Statements

Support for Short Message MT/PP.

The value of timer TC1M.

Foreseen Final State of UE

Idle, updated.

Test Procedure

The SS sends a type 0 message by using the method described in step a) of section 16.2.1 but with the TPDU described in this section.

Maximum Duration of Test

1 minute

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | SERVICE REQUEST | |
| 3 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), type 0 Short Message |
| 8 | --> | | CP-ACK | |
| 9 | --> | | CP-DATA | Contains RP-ACK TP-Protocol-Identifier (TP-PID). |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | UE | | | It is highly recommended that the UE discards the type 0 short message. This means that the UE is able to receive the type 0 short message irrespective of whether there is memory available in the (U)SIM or ME or not, the UE does not indicate the receipt of the type 0 short message to the user, and the message is not stored in the (U)SIM or ME. |

Specific Message Contents:

SMS-DELIVER TPDU (containing a type 0 message) (SS to UE):

| Information element | Comment Value |
|---|---|
| TP-MTI | SMS-DELIVER "00"B |
| TP-MMS | more messages are waiting in SC "0"B |
| TP-RP | no reply path "0"B |
| TP-UDHI | TP-UD contains only the SM"0"B |
| TP-SRI | no status report returned0 |
| TP-OA | an international number coded E.164 |
| TP-PID | Type 0: "01000000"B |
| TP-DCS | default alphabet “0000 0000"B |
| TP-SCTS | any legal value (cf. 3GPP TS 23.040) |
| TP-UDL | 160 |
| TP-UD (140 octets) | text of message (160 characters) |

## 16.2.6a Test of short message type 0 (≥ REL-5 UE)

### 16.2.6a.1 Definition and applicability

This tests that the UE correctly acknowledges the receipt of the short message type 0 to the SC in Packet Switched mode. The UE discards the contents of the short message type 0.

This test shall apply to all ≥ REL-5 UEs supporting receipt of short messages in PS mode.

### 16.2.6a.2 Conformance requirement

When a mobile terminated message is type 0, the UE shall acknowledge receipt of the short message to the SC but shall discard its contents. This means that

- the UE shall be able to receive the type 0 short message irrespective of whether there is memory available in the (U)SIM or ME or not,
- the UE shall not indicate the receipt of the type 0 short message to the user,
- the short message shall neither be stored in the (U)SIM nor ME.

#### References

3GPP TS 23.040 9.2.3.2, 9.2.3.4, 9.2.3.7, 9.2.3.9, 9.2.3.10, 9.2.3.11, 9.2.3.16, 9.2.3.17, 9.2.3.23.

### 16.2.6a.3 Test purpose

To verify that the UE will acknowledge receipt of the short message to the SC. The UE shall discard its contents. This means that

- the UE shall be able to receive the type 0 short message irrespective of whether there is memory available in the (U)SIM or ME or not,
- the UE shall not indicate the receipt of the type 0 short message to the user,
- the short message shall neither be stored in the (U)SIM nor ME.

NOTE: failure of this test in a UE could cause it to reject a type 0 message when the network is trying to reach the UE. This could lead to unwanted repetitions between the US and the service centre. In addition service affecting restrictions could happen to the customer.

### 16.2.6a.4 Method of test

#### Initial conditions

System Simulator:

1 cell, default parameters.

User Equipment:

the UE shall be in GMM-state "GMM-REGISTERED";

the ME- and (U)SIM message store shall be empty.

#### Related ICS/IXIT Statements

Support for Short Message MT/PP.

The value of timer TC1M.

#### Foreseen Final State of UE

Idle, updated.

Test Procedure

a) The SS sends a type 0 short message by using the method described in step a) of clause 16.2.1 but with the TPDU described in this section.

b) The ME- and (U)SIM short message store shall be filled (for example by using the method of clause 16.2.3 test of the memory available notification).

c) The SS sends a type 0 short message as in step a).

Maximum Duration of Test

5 minutes

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | SERVICE REQUEST | |
| 3 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), type 0 Short Message |
| 8 | --> | | CP-ACK | |
| 9 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | UE | | | The UE shall discard the type 0 short message. This means that the UE does not indicate the receipt of the type 0 short message to the user. The UE shall not store the message in the (U)SIM or ME. This can be checked by verifying that it is impossible to retrieve any short messages from the ME- and (U)SIM message store. |
| 14 | SS | | | The ME- and (U)SIM message store shall be filled (for example by using the method of 16.1.3). |
| 15 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 16 | --> | | SERVICE REQUEST | |
| 17 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 18 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 19 | <-- | | SECURITY MODE COMMAND | |
| 20 | --> | | SECURITY MODE COMPLETE | |
| 21 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU), type 0 Short Message |
| 22 | --> | | CP-ACK | |
| 23 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 24 | <-- | | CP-ACK | |
| 25 | <-- | | RRC CONNECTION RELEASE | |
| 26 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 27 | UE | | | The UE shall discard the type 0 short message. This means that the UE does not indicate the receipt of the type 0 short message to the user. The UE shall not store the message in the (U)SIM or ME. This can be checked by verifying that it is impossible to retrieve any short messages from the ME- and (U)SIM message store. |

Specific Message Contents:

SMS-DELIVER TPDU (containing a type 0 message) (SS to UE):

| Information element | Comment | Value |
|---|---|---|
| TP-MTI | SMS-DELIVER | "00"B |
| TP-MMS | more messages are waiting in SC | "0"B |
| TP-RP | no reply path | "0"B |
| TP-UDHI | TP-UD contains only the SM | "0"B |
| TP-SRI | no status report returned | "0"B |
| TP-OA | an international number coded E.164 | |
| TP-PID | Type 0: | "01000000"B |
| TP-DCS | default alphabet | “0000 0000"B |
| TP-SCTS | any legal value (cf. 3GPP TS 23.040) | |
| TP-UDL | | 160 |
| TP-UD (140 octets) | text of message (160 characters) | |

#### 16.2.6a.5 Test requirements

After step 9 (ME- and (U)SIM message store not filled) UE shall send CP-DATA containing RP-ACK RPDU (TP-Protocol-Identifier: type 0 Short Message).

After step 13 UE shall discard the type 0 short message (it is impossible to retrieve any short messages from the ME- and (U)SIM message store).

After step 23 (ME- and (U)SIM message store filled) UE shall send CP-DATA containing RP-ACK RPDU (TP-Protocol-Identifier: type 0 Short Message).

After step 27 UE shall discard the type 0 short message (it is impossible to retrieve any short messages from the ME- and (U)SIM message store).

### 16.2.7 Test of the replace mechanism for SM type 1-7

#### 16.2.7.1 Definition

#### 16.2.7.2 Conformance requirement

On receipt of a short message, the UE shall check to see if the associated Protocol Identifier contains a Replace Short Message Type code. If such a code is present, then the UE will check the associated originating address (TP-OA) and replace any existing stored message having the same Protocol Identifier code and originating address with the new short message.

References

3GPP TS 23.040 clause 9.2.3.2, 9.2.3.9.

#### 16.2.7.3 Test purpose

This procedure verifies the correct implementation of the replace mechanism for Replace Short Messages.

#### 16.2.7.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in GMM-state "GMM-REGISTERED";
  - the UE message store shall be empty.

Related ICS/IXIT Statements

Support for Short message MT/PP.

The value of timer TC1M.

Test procedure

a) Two different numbers n and m are drawn randomly between 1 and 7. Two different addresses for TP-Originating-Address (TPOA1 and TPOA2) are drawn.

b) The SS delivers a short message to the UE as specified in clause 16.2.1 step a). In the SMS-DELIVER TPDU, the TP-Protocol-Identifier parameter is "Replace Short Message Type n", the TP-Originating-Address is TPOA1, and the RP-Originating-Address is RPOA.

c) Step b) is repeated but with a different TP-Originating-Address (TPOA2), and different contents of TP-User-Data in the SMS-DELIVER TPDU. The other parameters are the same as in step b).

d)

e) Step c) is repeated but with the TP-Protocol-Identifier equal to "Replace Short Message Type m", and contents of TP-User-Data different from the former two messages. The other parameters are the same as in step c).

f) Step e) is repeated but the contents of TP-User-Data are different from that used in step e).

g) The SS prompts the operator to indicate the Short Messages stored in the UE.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | SERVICE REQUEST | |
| 3 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-PID is "Replace Short Message Type n", TP-OA is TPOA1 and RP-OA is RPOA |
| 8 | --> | | CP-ACK | |
| 9 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 14 | --> | | SERVICE REQUEST | |
| 15 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 16 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 17 | <-- | | SECURITY MODE COMMAND | |
| 18 | --> | | SECURITY MODE COMPLETE | |
| 19 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-PID is "Replace Short Message Type n", TP-OA is TPOA2 and RP-OA is RPOA1, TP-UD different from step 7 |
| 20 | --> | | CP-ACK | |
| 21 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 22 | <-- | | CP-ACK | |
| 23 | <-- | | RRC CONNECTION RELEASE | |
| 24 | --> | | RRC CONNECTION RELEASE COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 25 | | | (void) | |
| 26 | | | (void) | |
| 27 | | | (void) | |
| 28 | | | (void) | |
| 29 | | | (void) | |
| 30 | | | (void) | |
| 31 | | | (void) | |
| 32 | | | (void) | |
| 33 | | | (void) | |
| 34 | | | (void) | |
| 35 | | | (void) | |
| 36 | | | (void) | |
| 37 | | | (void) | See 3GPP TS34.108 |
| 38 | --> | | SERVICE REQUEST | |
| 39 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 40 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 41 | <-- | | SECURITY MODE COMMAND | |
| 42 | --> | | SECURITY MODE COMPLETE | |
| 43 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-PID is "Replace Short Message Type m", TP-OA is TPOA2 and RP-OA is RPOA, TP-UD different from step 7 and 19 |
| 44 | --> | | CP-ACK | |
| 45 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 46 | <-- | | CP-ACK | |
| 47 | <-- | | RRC CONNECTION RELEASE | |
| 48 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 49 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 50 | --> | | SERVICE REQUEST | |
| 51 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 52 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 53 | <-- | | SECURITY MODE COMMAND | |
| 54 | --> | | SECURITY MODE COMPLETE | |
| 55 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-PID is "Replace Short Message Type m", TP-OA is TPOA2 and RP-OA is RPOA, TP-UD different from step 43 |
| 56 | --> | | CP-ACK | |
| 57 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 58 | <-- | | CP-ACK | |
| 59 | <-- | | RRC CONNECTION RELEASE | |
| 60 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 61 | SS | | | Prompts the operator to indicate the Short Messages stored in the UE. Only the Short Messages delivered in step 7, 19 and 55 shall be retrievable and indicated |

Specific Message Contents

SMS-DELIVER TPDU

| Information element | CommentValue |
|---|---|
| TP-MMS | no more messages are waiting in SC "1"B |
| TP-PID | binary 01000xxx, xxx represents n resp. m (see test method description) |

#### 16.2.7.5 Test requirements

After step 61 only the Short Messages delivered in step 7, 19 and 55 shall be retrieved and indicated.

### 16.2.8 Test of the reply path scheme

#### 16.2.8.1 Definition

#### 16.2.8.2 Conformance requirement

When a replying UE receives an original mobile terminated short message it has:

- originating SME = TP-Originating Address in the SMS-DELIVER TPDU;
- original SC = RP-Originating Address in the RP-MT-DATA.

When submitting the reply mobile originated short message, the replying UE should use parameters as follows:

- TP-Destination Address in SMS-SUBMIT TPDU = originating SME;
- RP-Destination Address in RP-MO-DATA = original SC.

References

3GPP TS 23.040 3.2.10, 9.2.3.2, 9.2.3.17, Annex D clauses D.5 and D.6.

NOTE: Annex D of 3GPP TS 23.040 is only informative.

#### 16.2.8.3 Test purpose

This procedure verifies that the UE is able to send a Reply Short Message back to the correct originating SME even if in the meantime it receives another Short Message.

#### 16.2.8.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in GMM-state "GMM-REGISTERED";
  - the UE message store shall be empty.

Related ICS/IXIT Statements

Support for Short message MT/PP.

Support for Short message MO/PP.

The value of timer TC1M.

Test procedure

a) The SS delivers a Short Message as specified in clause 16.2.1, step b) with TP-Reply-Path set to 1.

b) Step a) is repeated but with:
   - different TP-Originating-Address for the originating SME;
   - different RP-Originating-Address for the original SC; and
   - different message contents TP-User-Data.

c) UE sends the Reply Short Message corresponding to one of two received Short Messages (e.g. by means of the MMI).

d) step c) is repeated for the other Short Message.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 2 | --> | | SERVICE REQUEST | |
| 3 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 4 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 5 | <-- | | SECURITY MODE COMMAND | |
| 6 | --> | | SECURITY MODE COMPLETE | |
| 7 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-RP set to 1 |
| 8 | --> | | CP-ACK | Sent within TC1M after step 7 |
| 9 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 10 | <-- | | CP-ACK | |
| 11 | <-- | | RRC CONNECTION RELEASE | |
| 12 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 13 | | | Mobile terminated establishment of Radio Resource Connection | See 3GPP TS34.108 |
| 14 | --> | | SERVICE REQUEST | |
| 15 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 16 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 17 | <-- | | SECURITY MODE COMMAND | |
| 18 | --> | | SECURITY MODE COMPLETE | |
| 19 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) TP-OA, RP-OA and TP-UD different from step 7 |
| 20 | --> | | CP-ACK | Sent within TC1M after step 7 |
| 21 | --> | | CP-DATA | Contains RP-ACK RPDU. |
| 22 | <-- | | CP-ACK | |
| 23 | <-- | | RRC CONNECTION RELEASE | |
| 24 | --> | | RRC CONNECTION RELEASE COMPLETE | |
| 25 | UE | | | UE establishes the RRC connection in order to send the Reply Short Message corresponding to one of two received Short Messages |
| 26 | <-- | | SYSTEM INFORMATION | BCCH |
| 27 | --> | | RRC CONNECTION REQUEST | CCCH |
| 28 | <-- | | RRC CONNECTION SETUP | CCCH |
| 29 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 30 | --> | | SERVICE REQUEST | |
| 31 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 32 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 33 | <-- | | SECURITY MODE COMMAND | |
| 34 | --> | | SECURITY MODE COMPLETE | |
| 35 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) RP-DA = RP-OA corresponding to the message TP-DA = TP-OA corresponding to the message |
| 36 | <-- | | CP-ACK | Sent within TC1M after step 35 |
| 37 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 38 | SS | | | Waits max 25 s for CP-ACK |
| 39 | --> | | CP-ACK | |
| 40 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 41 | --> | | RRC CONNECTION RELEASE COMPLETE | |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 42 | UE | | | UE establishes the RRC connection in order to send the Reply Short Message corresponding to other Short Message. |
| 43 | <-- | | SYSTEM INFORMATION | BCCH |
| 44 | --> | | RRC CONNECTION REQUEST | CCCH |
| 45 | <-- | | RRC CONNECTION SETUP | CCCH |
| 46 | --> | | RRC CONNECTION SETUP COMPLETE | DCCH |
| 47 | --> | | SERVICE REQUEST | |
| 48 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 49 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 50 | <-- | | SECURITY MODE COMMAND | |
| 51 | --> | | SECURITY MODE COMPLETE | |
| 52 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) RP-DA = RP-OA corresponding to the Message TP-DA = TP-OA corresponding to the message |
| 53 | <-- | | CP-ACK | Sent within TC1M after step 52 |
| 54 | <-- | | CP-DATA | Contains RP-ACK RPDU |
| 55 | SS | | | Waits max 25 s for CP-ACK |
| 56 | --> | | CP-ACK | |
| 57 | <-- | | RRC CONNECTION RELEASE | RRC connection is released. |
| 58 | --> | | RRC CONNECTION RELEASE COMPLETE | |

Specific Message Contents

SMS-DELIVER TPDU

| Information element | Comment | Value |
|---|---|---|
| TP-MMS | no more messages are waiting in SC | "1"B |
| TP-RP | Reply Path exists | "1"B |

#### 16.2.8.5 Test requirements

After step 35 UE shall send the Reply Short Message corresponding to one of two previously received short messages.

After step 52 UE shall send the Reply Short Message corresponding to the other of two previously received short messages.

## 16.2.9 Multiple SMS mobile originated

### 16.2.9.1 UE in idle mode

This test is not applicable for R99.

### 16.2.9.2 UE in active mode

This test is not applicable for R99.

## 16.2.10 Test of capabilities of simultaneously receiving a short message whilst sending a mobile originated short message

#### 16.2.10.1 Definition

#### 16.2.10.2 Conformance requirements

An active UE shall be able to receive a short message TPDU (SMS-DELIVER) at any time, independently of whether or not there is an SMS mobile originated call (SMS-SUBMIT or SMS-COMMAND) in progress.

References

3GPP TS 23.040 clause 3.1, 9.2.3.16.

3GPP TS 24.011 clause 3.2.

### 16.2.10.3 Test purpose

The test verifies that the UE is capable of simultaneously receiving a network originated SM whilst sending a mobile originated SM.

### 16.2.10.4 Method of test

Initial Conditions

- System simulator:
  - 1 cell, default parameters.
- User Equipment:
  - the UE shall be in GMM-state "GMM-REGISTERED";
  - the SMS message storage shall be empty.

Related ICS/IXIT Statements

Support for Short message MO/PP and MT/PP.

Support for state PDP-ACTIVE of session management.

The value of timer TC1M.

Whether SMS messages are stored in the USIM and/or the ME.

Test procedure

a) The SS is configured to receive a mobile originated SM. In clause 16.2.2 steps a) and b) are repeated and, using the end of the CP-DATA message from the UE as a trigger, the SS sends a SM to the UE. In this case a new transaction identifier shall be used in the CP messages of SMS mobile terminated.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The UE is set up to send an SM |
| 2 | SS | | | The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originating Low Priority Signalling”. |
| 3 | | | (void) | |
| 4 | | | (void) | |
| 5 | --> | | SERVICE REQUEST | |
| 6 | <-- | | AUTHENTICATION AND CIPHERING REQUEST | |
| 7 | --> | | AUTHENTICATION AND CIPHERING RESPONSE | |
| 8 | SS | | | The SS starts integrity protection |
| 9 | | | | |
| 10 | --> | | CP-DATA | Contains RP-DATA RPDU (SMS SUBMIT TPDU) |
| 11 | SS | | | The SS sends an SM to the UE triggered by the end of the CP-DATA message from the UE |
| 12 | <-- | | CP-DATA | Contains RP-DATA RPDU (SMS DELIVER TPDU) |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 13 | UE | | | The UE shall correctly receive the SM and indicate that a message has arrived. In the MO case the UE shall send the CP-ACK message with transaction identifier assigned to this transfer. In the MT case the UE shall send a CP-ACK message and a CP-DATA message containing the RP-ACK RPDU. The transaction identifier shall be the same as chosen by the SS for the MT transfer. |
| NOTE: Time values for SS wait times are chosen sufficiently high to be sure that the UE has enough time to respond to the different messages. | | | | |

Specific Message Contents

SMS SUBMIT TPDU

| Information element | CommentValue |
|---|---|
| TP-UDL<br>TP-UD (140 octets) | as applicable<br>160 ASCII characters |

#### 16.2.10.5 Test requirements

After step 12 UE shall correctly receive the SM and indicate that a message has arrived.

## 16.3 Short message service cell broadcast

### 16.3.1 Definition

### 16.3.2 Conformance requirements

In idle mode, the UE has the ability to ignore repeated broadcasts of CBS messages already received (the message has not changed since it was last broadcast i.e. sequence number has not changed within the message's indicated geographical area);

A UE supporting Cell Broadcast Service (CBS) shall be capable to receive BMC messages in the Idle mode.

References

- 3GPP TS 23.041 clause 8.
- 3GPP TS 25.324 clause 11.

### 16.3.3 Test purpose

This test verifies that an UE supporting SMS-CB is able to receive SMS-CB messages and is able to ignore repeated broadcasts of CBS messages.

### 16.3.4 Method of test

Initial conditions

- System Simulator:
  - 1 cell, default parameters;
  - the SS provides a BCCH/CCCH to support the UE in idle mode;
  - periodic location updating is disabled.
- User Equipment:
  - the UE shall be in the idle updated state.

Related ICS/IXIT Statements

Support for short message transmission cell broadcast.

Test procedure

Three Cell Broadcast (CB) messages are sent by the SS on the CTCH with message codes 0,1,1 in serial number fields respectively.

NOTE: If the UE fails the test because of a failure to receive the message due to collision of CTCH and paging occasion, then the operator may re-run the test.

Expected sequence

Since the SMS-CB messages are sent continuously, a table is not applicable in this test.

Specific Message Contents:

Use the default parameter values for the system information block 1 with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| | | |
|---|---|---|
| - CN domain identity | | PS |
| - CHOICE CN Type | | GSM-MAP |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | | 05 00H |
| - CN domain specific DRX cycle length coefficient | | 9 |
| - CN domain identity | | CS |
| - CHOICE CN Type | | GSM-MAP |
| - CN domain specific NAS system information | | |
| - GSM-MAP NAS system information | | 1E 01H |
| - CN domain specific DRX cycle length coefficient | | 9 |

Use the default parameter values for the system information block 5 with the same type specified in clause 6.1.0b of TS 34.108, with the following exceptions:

| | |
|---|---|
| - FACH/PCH information | |
| - TFS | (PCH) |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC Size | 240 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 0 |
| - Number of Transport blocks | 1 |
| - CHOICE Logical channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 230 |
| - CRC size | 16 bit |
| - Transport channel Identity | 12 (for PCH) |
| - CTCH indicator | FALSE |
| - TFS | (FACH) |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC Size | 168 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 0 |
| - Number of Transport blocks | 1 |
| - Number of Transport blocks | 2 |
| - CHOICE Logical channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Convolutional |
| - Coding Rate | 1/2 |
| - Rate matching attribute | 220 |
| - CRC size | 16 bit |

| | |
|---|---|
| - Transport channel Identity | 13 (for FACH) |
| - CTCH indicator | TRUE |
| - TFS | (FACH) |
| - CHOICE Transport channel type | Common transport channels |
| - Dynamic Transport format information | |
| - RLC Size | 360 |
| - Number of TB and TTI List | |
| - Number of Transport blocks | 0 |
| - Number of Transport blocks | 1 |
| - CHOICE Logical channel List | ALL |
| - Semi-static Transport Format information | |
| - Transmission time interval | 10 ms |
| - Type of channel coding | Turbo |
| - Rate matching attribute | 130 |
| - CRC size | 16bit |
| - Transport channel Identity | 14 (for FACH) |
| - CTCH indicator | FALSE |
| - PICH info | |
| - CHOICE mode | FDD |
| - Channelisation code | 2 |
| - Number of PI per frame | 18 |
| - STTD indicator | FALSE |
| - CBS DRX Level 1 information | |
| - Period of CTCH allocation (N) | 2 |
| - CBS frame offset (K) | 0 |

Cell broadcast test message content

| Information element | Comment Value |
|---|---|
| Message Type | CBS Message "1"B (see 3GPP TS 25.324, clause 11.1) |
| Message ID | |
| Serial Number | |
| - Geographical scope | "01"B |
| - Message code | see test procedure "0000000000"B or "0000000001"B |
| - Update number | as applicable |
| Data Coding Scheme | Default alphabet, English "00000001"B |
| CB Data | max 1246 octets |

### 16.3.5 Test requirements

In consequence of test the UE shall ignore third message and store two messages.

# 16.4 Default message contents:

## 16.4.1 Default message contents for SM-CP protocol

CP-DATA

| Information element | Comment Value |
|---|---|
| Protocol Discriminator | SMS messages ("1001"B) |
| Transaction Identifier | |
| TIO | any value from the set {0, ..., 6} |
| TI flag | 0 |
| Message type | 00000001 |
| CP-User data | |
| length indicator | |
| RPDU | max 248 octets |

CP-ACK

| Information element | Comment Value |
|---|---|
| Transaction Identifier | |
| TIO | |
| TI flag | |
| Message type | 00000100 |

CP-ERROR

| Information element | Comment Value |
|---|---|
| Transaction Identifier | |
| TIO | |
| TI flag | |
| Message type | 00010000 |
| CP-Cause | |
| Cause value | see 3GPP TS 24.011, clause 8.1.4.2 |

## 16.4.2 Default message contents for SM-RP protocol

RP-DATA

| Information element | Comment Value |
|---|---|
| RP-Message Type | "001"B (SS->UE) or "000"B(UE->SS) |
| RP-Message Reference | see 3GPP TS 24.011, clause 8.2.3 |
| RP-Originator Address | see 3GPP TS 24.011, clause 8.2.5.1 |
| RP-Destination Address | see 3GPP TS 24.011, clause 8.2.5.2 |
| RP-User Data | see 3GPP TS 24.011, clause 8.2.5.3 |
| Length indicator | |
| TP-DATA | max 233 octets |

RP-ACK

| Information element | Comment Value |
|---|---|
| RP-Message Type | "010"B (UE->SS) or "011"B(SS->UE) |
| RP-Message Reference | see 3GPP TS 24.011, clause 8.2.3 |
| RP-User Data | see 3GPP TS 24.011, clause 8.2.5.3 : optional, may be present or not |
| RP-User Data IEI | "1000001"B |
| Length indicator | |
| TP-Data | max 232 octets |

RP-ERROR

| Information element | Comment Value |
|---|---|
| RP-Message Type | "100"B (UE->SS) or "101"B(SS->UE) |
| RP-Message Reference | see 3GPP TS 24.011, clause 8.2.3 |
| RP-Cause | see 3GPP TS 24.011, clause 8.2.5.4 |
| RP-User Data | see 3GPP TS 24.011, clause 8.2.5.3: optional, may be present or not |
| RP-User Data IEI | "1000001"B |
| Length indicator | |
| TP-Data | max 232 octets |

RP-SMMA (UE->SS)

| Information element | Comment Value |
|---|---|
| RP-Message Type | "110"B (UE->SS) |
| RP-Message Reference | see 3GPP TS 24.011, clause 8.2.3 |

## 16.4.3 Default message contents for SM-TP protocol

SMS DELIVER TPDU

| Information element | Comment Value |
|---|---|
| TP-MTI | SMS DELIVER "00"B |
| TP-MMS | more messages are waiting in SC "0"B |
| TP-RP | no reply path "0"B |
| TP-UDHI | TP-UD contains only the SM"0"B |
| TP-SRI | no status report returned"0"B |
| TP-OA | an international number coded E.164 |
| TP-PID | default"00000000"B |
| TP-DCS | default alphabet "00000000"B |
| TP-SCTS | any legal value (cf. 3GPP TS 23.040) |
| TP-UDL | |
| TP-UD | max 140 octets |

SMS SUBMIT TPDU

| Information element | Comment | Value |
|---|---|---|
| TP-MTI | SMS SUBMIT | "01"B |
| TP-RD | SC shall accept same SMS-SUBMIT | "0"B |
| TP-VPF | TP-VP field not present | "00"B |
| TP-RP | no reply path | "0"B |
| TP-UDHI | TP-UD contains only the SM | "00"B |
| TP-SRR | no request of status report | "00"B |
| TP-MR | | |
| TP-DA | an international number coded E164 | |
| TP-PID | default | "00000000"B |
| TP-DCS | default alphabet | "00000000"B |
| TP-VP | | |
| TP-UDL | | |
| TP-UD | max 140 octets | |

SMS COMMAND TPDU

| Information element | Comment | Value |
|---|---|---|
| TP-MTI | SMS-COMMAND | "10"B |
| TP-UDHI | TP-UD contains only the SM | "00"B |
| TP-SRR | status report not requested | "0"B |
| TP-MR | | |
| TP-PID | default | "00000000"B |
| TP-CT | | |
| TP-MN | | |
| TP-DA | an international number coded E164 | |
| TP-CDL | | |
| TP-CD | | |

SMS STATUS REPORT TPDU

| Information element | Comment Value |
|---|---|
| TP-MTI | SMS-STATUS-REPORT"10"B |
| TP-MMS | no more messages "1"B |
| TP-SRQ | result of SMS-SUBMIT "0"B |
| TP-MR | |
| TP-RA | the destination address of the previous SM MO |
| TP-SCTS | any legal value (cf. 3GPP TS 23.040, clause 9.2.3.11) |
| TP-DT | any legal value (cf. 3GPP TS 23.040, clause 9.2.3.13) |
| TP-ST | see 3GPP TS 23.040, clause 9.2.3.15 |

# 17 Specific features

## 17.1 Test of autocalling restrictions

### 17.1.1 General

It is essential that all autocalling apparatus is prevented from continuously dialling a given number, to avoid machines repeatedly disturbing PSTN subscribers in error, or numerous repeat attempts to unobtainable numbers which cause waste of valuable network resources. Therefore autocalling restrictions are defined by TS 22.001.

The tests shall be performed using all of the call methods specified by the supplier in the IXIT statement TS 34.123-2. The supplier shall state any autocalling procedures implemented and how many times they can be repeated to a single number and the minimum re-attempt interval(s), i.e. the complete re-try schedule or algorithm with parameter values. The supplier shall further describe any automatic methods for making repeated calls to a single number. The supplier shall also state in the IXIT statement the number of B-party numbers that can be stored on the list of blacklisted numbers as described in TS 22.001, annex E.

For an external R-interface the supplier shall state in the IXIT statement the procedure for autocalling restrictions for that interface and the possible parameter settings for the number of times the LTE can make a re-attempt and the minimum accepted time between re-attempts accepted by the UE. The conditions for clearing the autocalling constraints shall be stated in the IXIT statement.

For external interfaces the LTE must be programmed so that it clearly attempts to violate the autocalling constraints.

For all the tests in this clause the call setup procedure uses the Generic Setup Procedure for Circuit Switched connection as specified in TS 34.108 clause 7. A Radio Access Bearer to set up shall be selected from one of the speech or CS data bearers within the capability of the UE as specified in the ICS statement. Unless otherwise indicated, this procedure shall only run to the transmission by the SS or UE of the SETUP message (CC).

### 17.1.2 Constraining the access to a single number (TS 22.001 category 3)

#### 17.1.2.1 Definition

This test checks that when an auto-dialled call to a B-party number fails due to a category 3 cause, only one retry to that number is permitted.

During this test the SETUP messages shall contain the same B-party number.

No manual intervention shall be performed except to initiate and end the test.

#### 17.1.2.2 Conformance requirement

A repeat call attempt may be made when a call attempt is unsuccessful for the reasons listed below (as defined in TS 24.008).

These reasons are classified in three major categories:

1. "Busy destination";
2. "Unobtainable destination - temporary";
3. "Unobtainable destination - permanent/long term".

NOTE: Cause values for each category are defined in TS 22.001, annex E.

The table below describes a repeat call restriction pattern to any B number. This pattern defines a maximum number (n) of call repeat attempts; when this number n is reached, the associated B number shall be blacklisted by the UE until a manual re-set at the UE is performed in respect of that B number. When a repeat attempt to any one B number fails, or is blacklisted, this does not prevent calls being made to other B numbers.

For the categories 1 and 2 above, n shall be 10; for category 3, n shall be 1.

| Call attempt | Minimum duration between call attempts |
|---|---|
| Initial call attempt | - |
| 1st repeat attempt | 5 s |
| 2nd repeat attempt | 1 min |
| 3rd repeat attempt | 1 min |
| 4th repeat attempt | 1 min |
| 5th repeat attempt | 3 min |
| . | |
| . | |
| nth repeat attempt | 3 min |

Reference:

3GPP TS 22.001 annex E.

17.1.2.3 Test purpose

To ensure the correct behaviour of the UE to TS 22.001 Category 3.

17.1.2.4 Method of test

Initial condition.

There shall be no numbers in the list of blacklisted numbers in the UE. The time set between the first re-attempt and the next re-attempt is set to the minimum value possible. The number of re-attempts is set to the lowest possible number, greater than 1, that is supported by the UE. The autocalling function is invoked for the B-party number to be used during the test.

Related ICS/IXIT Statement(s)

ICS: TBD.

IXIT: Description of auto calling management:

- selection of the auto calling;
- indication that the call failed and a re-try is attempted;
- indication that a call finally failed.

Test Procedure

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | "called number" entered |
| 2 | → | | GENERIC SETUP PROCEDURE MOBILE ORIGINATED, CS (Up to SETUP) | Establishment cause indicates "originating call". |
| 3 | ← | | RELEASE COMPLETE | Cause value from category 3 of TS 22.001, Annex E. |
| 4 | ← | | RRC CONNECTION RELEASE | |
| 5 | → | | RRC CONNECTION RELEASE COMPLETE | The signalling link is released |
| 6 | | | | The UE is invoking the auto calling function. The time between step 4 and 7 must be minimum 5 sec. |
| 7 | → | | GENERIC SETUP PROCEDURE MOBILE ORIGINATED, CS (Up to SETUP) | Establishment cause indicates "originating call". |
| 8 | ← | | RELEASE COMPLETE | Cause value from category 3 of TS 22.001, Annex E. |
| 9 | ← | | RRC CONNECTION RELEASE | |
| 10 | → | | RRC CONNECTION RELEASE COMPLETE | The main signalling link is released |
| 11 | UE | | | Clear the auto calling constraint after a minimum of 2 minutes from step 9. |

#### 17.1.2.5 Test requirements

The time between step 4 and 7 must be minimum 5 s.

No further call attempt shall be made after step 9.

### 17.1.3 Constraining the access to a single number (TS 22.001 categories 1 and 2)

#### 17.1.3.1 Definition

This test checks that when an auto-dialled call to a B-party number fails due to a category 2 cause, the time between of retries complies with the requirements, and the number of retries does not exceed that declared by the UE manufacturer, and is never more than 10.

During this test the SETUP messages shall contain the same B-party number.

No manual intervention shall be performed except to initiate and end the test.

#### 17.1.3.2 Conformance requirement

The UE must fulfil the requirements for category 1 and 2, see clause 17.1.2.2.

Reference:

3GPP TS 22.001 annex E.

#### 17.1.3.3 Test purpose

To ensure the correct behaviour of the UE to TS 22.001 Categories 1 and 2.

#### 17.1.3.4 Method of test

Initial condition

There shall be no numbers in the list of blacklisted numbers in the UE. The re-try scheme is set to give the shortest possible intervals between re-tries. The number of re-attempts is set to the maximum possible number (N), that is supported by the UE. The autocalling function is invoked for the B-party number to be used during the test.

Related ICS/IXIT Statement(s)

ICS: TBD

IXIT: Description of auto calling management:

- selection of the auto calling;
- indication that the call failed and a re-try is attempted;
- indication that a call finally failed.

Test Procedure

A, UE originated, generic call setup is performed up to the SETUP message. The SS then releases the establishment with a cause value from category 1 or 2 (TS 22.001, annex E).

The UE is continuously making new generic call setup attempts invoked by the auto calling function after each RRC CONNECTION RELEASE from the SS.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | "called number" entered |
| 2 | → | | GENERIC SETUP PROCEDURE MOBILE ORIGINATED, CS (Up to SETUP) | Establishment cause indicates "originating call". |
| 3 | ← | | RELEASE COMPLETE | Cause value from category 1 or 2 of TS 22.001, Annex E. This shall be chosen randomly, from both categories. Cause no. 27 shall be excluded if the UE has implemented in category 3 of TS 22.001, as declared in IXIT statement |
| 4 | ← | | RRC CONNECTION RELEASE | |
| 5 | | | | The UE is invoking the auto calling function. 1: At the first re-attempt the time between step 4 and 7 must be minimum 5 sec. 2: At the 2nd, 3rd and 4th re-attempt the time between step 4 and 7 must be minimum 1 min. 3: At the 5th to 10th re-attempt the time between step 4 and 7 must be minimum 3 min. |
| 6 | → | | RRC CONNECTION RELEASE COMPLETE | The signalling link is released |
| 7 | → | | GENERIC SETUP PROCEDURE MOBILE ORIGINATED, CS (Up to SETUP) | Establishment cause indicates "originating call". |
| 8 | ← | | RELEASE COMPLETE | Cause value from category 1 or 2 of TS 22.001, Annex E. This shall be chosen randomly, from both categories. Cause no. 27 shall be excluded if the UE has implemented in category 3 of TS 22.001, as declared in PIXIT statement |
| 9 | ← | | RRC CONNECTION RELEASE | |
| 10 | → | | RRC CONNECTION RELEASE COMPLETE | The signalling link is released. |
| 11 | | | | The auto calling function shall repeat step 5 to 9 (N-1) times. The UE shall not make more than maximum 10 re-attempts. |
| 12 | UE | | | Clear the auto calling constraint by manual intervention after a minimum of 4 minutes from step 11. Following the final completion of step 11 the UE initiate a call prior to manual intervention. |

#### 17.1.3.5 Test requirements

1: At the first re-attempt the time between step 4 and 7 must be minimum 5 sec. 2: At the 2nd, 3rd and 4th re-attempt the time between step 4 and 7 must be minimum 1 min. 3: At the 5th to 10th re-attempt the time between step 4 and 7 must be minimum 3 min.

The UE shall not make more than maximum 10 re-attempts.

### 17.1.4 Behaviour of the UE when its list of blacklisted numbers is full

#### 17.1.4.1 Definition and applicability

This tests that the UE does not allow autocalling when its list of blacklisted numbers is full.

The number of B-party numbers that can be stored in the list of blacklisted numbers, as stated in the IXIT statement, is M.

This test shall only apply to UE that are capable of autocalling more than M B-party numbers.

#### 17.1.4.2 Conformance requirement

The number of B numbers that can be held in the blacklist is at the manufacturers discretion but there shall be at least 8. However, when the blacklist is full the UE shall prohibit further automatic call attempts to any one number until the blacklist is manually cleared at the UE in respect of one or more B numbers.

Reference

TS 22.001, Annex E.

#### 17.1.4.3 Test purpose

To ensure the correct behaviour of the UE when its list of blacklisted numbers is full.

#### 17.1.4.4 Method of test

Initial condition

The list of blacklisted numbers, in the UE, shall be full. This may be achieved as described in the procedure in clause 17.1.2, applied to M B-party numbers.

Related ICS/IXIT Statement(s)

PICS: TBD.

PIXIT: Description of auto calling management:

- selection of the auto calling;
- indication that the call failed and a re-try is attempted;
- indication that a call finally failed.

Test Procedure

The autocalling function is invoked for a B-party number that is not in the list of blacklisted numbers.

Clear the autocalling constraint by manual intervention after a minimum of 10 s.

#### 17.1.4.5 Test requirements

The UE must not initiate a call.

## 17.2 Location Services

This subclause contains test cases for Location Services (LCS).

### 17.2.1 Default conditions during LCS tests

#### 17.2.1.1 Default system information

Default system information, as specified in TS 34.108 subclause 6.1, is broadcasted. SIB15/SIB15.x are not broadcasted unless otherwise stated in the specific test cases.

#### 17.2.1.2 Simulated A-GPS environment

During A-GPS teststhe SS shall generate satellite signals that are of a sufficient number and strength not to prevent the UE from responding to a positioning request with a valid measurement response. Any assistance data provided during these tests shall be consistent with the satellite signals generated during these tests.

It is considered that six satellite signals with the level of the simulated satellites all at -125dBm +/- 6dB should be suitable, however this does not imply any conformance requirements on the UE.

A suitable GPS scenario together with associated assistance data is defined in TS 34.108 clause 10.7.

The accuracy of the GPS time-of-week in the provided assistance data shall be within +/- 2 s relative to the GPS time in the system simulator.

#### 17.2.1.3 A-GPS assistance data sets

This section defines the assistance data sets supplied by the SS in A-GPS test cases.

Throughout this section, "adequate assistance data" means the assistance data used in test cases where it is expected that a UE supporting A-GPS will be able to perform the requested positioning operation using the supplied assistance data, and "inadequate assistance data" is the assistance data used in test cases that expect that the UE will be unable to perform the requested operation. The values of all the fields in all cases are defined in TS 34.108 clause 10.7.

#### 17.2.1.3.1 Adequate assistance data for UE-based A-GPS

For UE-based test cases requiring adequate assistance data, the IE "UE positioning GPS assistance data" is spread across two separate MEASUREMENT CONTROL messages, and set as follows:

First MEASUREMENT CONTROL MESSAGE:

| | |
|---|---|
| - UE positioning GPS assistance data | |
| - UE positioning GPS reference time | |
| - GPS week | Set according to 17.2.1.2 |
| - GPS TOW msec | Set according to 17.2.1.2 |
| - UTRAN GPS reference time | Not present |
| - SFN-TOW uncertainty | Not present |
| - $T_{UTRAN-GPS}$ drift rate | Not present |
| - GPS TOW assist | Not present |
| - UE positioning GPS reference UE position | Set according to 17.2.1.2 |
| - UE positioning GPS DGPS corrections | Not present |
| - UE positioning GPS navigation model | |
| - Satellite information | For satellites 1-3 |
| - SatID | Set according to 17.2.1.2 |
| - Satellite status | NS NN |
| - GPS ephemeris and clock corr. param. | Set according to 17.2.1.2 |
| - UE positioning GPS ionospheric model | Set according to 17.2.1.2 |
| - UE positioning GPS UTC model | Not present |
| - UE positioning GPS almanac | Not present |
| - UE positioning GPS acquisition assistance | Not present |
| - UE positioning GPS real-time integrity | Not present |

Second MEASUREMENT CONTROL message:

| | |
|---|---|
| - UE positioning GPS assistance data | |
| - UE positioning GPS reference time | Not present |
| - UE positioning GPS reference UE position | Not present |
| - UE positioning GPS DGPS corrections | Not present |
| - UE positioning GPS navigation model | |
| - Satellite information | For satellites 4-6 |
| - SatID | Set according to 17.2.1.2 |
| - Satellite status | NS NN |
| - GPS ephemeris and clock corr. param. | Set according to 17.2.1.2 |
| - UE positioning GPS ionospheric model | Not present |
| - UE positioning GPS UTC model | Not present |
| - UE positioning GPS almanac | Not present |
| - UE positioning GPS acquisition assistance | Not present |
| - UE positioning GPS real-time integrity | Not present |

#### 17.2.1.3.2 Inadequate assistance data for UE-based A-GPS

For UE-based test cases requiring inadequate assistance data, the IE "UE positioning GPS assistance data" is set to "Not present" in the MEASUREMENT CONTROL message.

#### 17.2.1.3.3 Adequate assistance data for UE-assisted A-GPS

For UE-assisted test cases requiring adequate assistance data, the IE "UE positioning GPS assistance data" is set as follows for the first MEASUREMENT CONTROL message:

| | |
|---|---|
| - UE positioning GPS assistance data | |
| - UE positioning GPS reference time | |
| - GPS week | Set according to 17.2.1.2 |
| - GPS TOW msec | Set according to 17.2.1.2 |
| - UTRAN GPS reference time | Not present |
| - SFN-TOW uncertainty | Not present |
| - $T_{UTRAN-GPS}$ drift rate | Not present |
| - GPS TOW assist | Not present |
| - UE positioning GPS reference UE position | Not present |
| - UE positioning GPS DGPS corrections | Not present |
| - UE positioning GPS navigation model | Not present |
| - UE positioning GPS ionospheric model | Not present |
| - UE positioning GPS UTC model | Not present |
| - UE positioning GPS almanac | Not present |
| - UE positioning GPS acquisition assistance | |
| - GPS TOW msec | Set according to 17.2.1.2 |
| - UTRAN GPS reference time | Not present |
| - Satellite information | Set according to 17.2.1.2 |
| - UE positioning GPS real-time integrity | Not present |

If the UE requests further assistance data, the SS sends subsequent MEASUREMENT CONTROL messages containing the assistance data fields requested by the UE that are available in the SS as specified in TS 34.108 clause 10.7 and in clause 17.2.1.3.5.

#### 17.2.1.3.4 Inadequate assistance data for UE-assisted A-GPS

For UE-assisted test cases requiring inadequate assistance data, the IE “UE positioning GPS assistance data” is set to “Not present” in the MEASUREMENT CONTROL message.

#### 17.2.1.3.5 Response to assistance data requests from UE

If the SS needs to send assistance data in response to a request for additional assistance data from the UE, or in response to an MO-LR request for assistance data, the IE “UE positioning GPS assistance data” is set as follows:

| | |
|---|---|
| - UE positioning GPS assistance data<br>- UE positioning GPS reference time | <br>Set according to 17.2.1.2 if requested by the UE |
| - GPS week | Set according to 17.2.1.2 |
| - GPS TOW msec | Set according to 17.2.1.2 |
| - UTRAN GPS reference time | Not present |
| - SFN-TOW uncertainty | Not present |
| - $T_{UTRAN-GPS}$ drift rate | Not present |
| - GPS TOW assist | Not present |
| - UE positioning GPS reference UE position<br><br>- UE positioning GPS DGPS corrections<br>- UE positioning GPS navigation model | Set according to 17.2.1.2 if requested by the UE<br>Not sent<br>Set according to 17.2.1.2 if requested by the UE |
| - Satellite information | For satellites 1-6 |
| - SatID | Set according to 17.2.1.2 |
| - Satellite status | NS NN |
| - GPS ephemeris and clock corr. param. | Set according to 17.2.1.2 |
| - UE positioning GPS ionospheric model<br><br>- UE positioning GPS UTC model<br>- UE positioning GPS almanac | Set according to 17.2.1.2 if requested by the UE<br>Not sent<br>Set according to 17.2.1.2 if requested by the UE |
| - WNa | Set according to 17.2.1.2 |
| - Satellite information | Set according to 17.2.1.2 |
| - SV Global Health | Not present |
| - UE positioning GPS acquisition assistance | Set according to 17.2.1.2 if requested by the UE |
| - GPS TOW msec | Set according to 17.2.1.2 |
| - UTRAN GPS reference time | Not present |
| - Satellite information | Set according to 17.2.1.2 |
| - UE positioning GPS real-time integrity | Not sent |

If the UE requests the GPS navigation model then the SS provides navigation model satellite information for at most three satellites in any one MEASUREMENT CONTROL or ASSISTANCE DATA DELIVERY message; additional satellites are sent in subsequent MEASUREMENT CONTROL or ASSISTANCE DATA DELIVERY messages.

If the UE requests the GPS almanac then the SS provides almanac information spread across at least two MEASUREMENT CONTROL or ASSISTANCE DATA DELIVERY messages.

If the UE requests both GPS navigation model and almanac then the SS provides them in different MEASUREMENT CONTROL or ASSISTANCE DATA DELIVERY messages.

## 17.2.2 Assisted GPS Network Induced Tests

### 17.2.2.1 LCS Network Induced location request/ UE-Based GPS/ Emergency Call / with USIM

#### 17.2.2.1.1 Definition

This test case applies to all UEs supporting UE-Based GPS Location Service capabilities.

#### 17.2.2.1.2 Conformance requirements

1) A MM connection for an emergency call may be established in all states of the mobility management sublayer which allow MM connection establishment for a normal originating call.

   When a user requests an emergency call establishment the UE will send a CM SERVICE REQUEST message to the network with a CM service type information element indicating emergency call establishment.

2) Having entered the "MM connection pending" state, upon MM connection establishment, the call control entity of the UE sends a setup message to its peer entity. This setup message is

- a SETUP message, if the call to be established is a basic call; and
- an EMERGENCY SETUP message, if the call to be established is an emergency call.

3) If the IE "UE positioning GPS reference time" is included, the UE shall:

1> store the IE "GPS Week" in "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as the current GPS week;

1> store the IE "GPS TOW msec" in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as an estimate of the GPS Time-of-Week at the time of reception of the complete message containing the IE "GPS TOW msec";

NOTE: The UE does not need to apply any compensation on the GPS Time-of-Week.

4) If the IE "UE positioning GPS reference UE position" is included, the UE shall:

1> store this IE in the IE "UE positioning GPS reference UE position" in variable UE_POSITIONING_GPS_DATA; and

1> use it as a priori knowledge of the approximate location of the UE.

5) The UE shall when a measurement report is triggered:

2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or on the list of satellites included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning:

3> include IE "UE positioning Position Estimate Info" in the MEASUREMENT REPORT and set the contents of the IE as follows:

4> if the UE does not support the capability to perform the UE GPS timing of cell frames measurement; or

4> if the IE "GPS timing of Cell wanted" is set to FALSE:

5> include the IE "GPS TOW msec".

4> if IE "Vertical Accuracy" has been included in IE "UE positioning reporting quantity":

5> if the IE "Vertical Accuracy" has been assigned to a value unequal to "0":

6> if the UE has been able to calculate a 3-dimensional position:

7> include IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

6> if the UE has not been able to calculate a 3-dimensional position:

7> act as if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity".

4> if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity":

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to a value unequal to 0:

6> include either IE "Ellipsoid point with uncertainty circle" or IE "Ellipsoid point with uncertainty ellipse" or IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

Reference(s):

- Conformance requirement 1: TS 24.008 clause 4.5.1.5.
- Conformance requirement 2: TS 24.008, clause 5.2.1.
- Conformance requirement 3: TS 25.331, clause 8.6.7.19.3.7.

- Conformance requirement 4: TS 25.331, clause 8.6.7.19.3.8.
- Conformance requirement 5: TS 25.331, clause 8.6.7.19.1b.

#### 17.2.2.1.3 Test Purpose

To verify when an emergency call is initiated by a UE with a USIM, and the network performs a location request using the RRC measurement control procedure by sending Measurement Control message , then the UE respond with a Measurement Report containing UE location.

#### 17.2.2.1.4 Method of Test

##### Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellites: As specified in 17.2.1.2
- User Equipment:
  - the UE is in state "MM idle" with valid TMSI and CKSN.

##### Related PICS/PIXIT Statements

- Emergency speech call yes/no
- UE Based Network Assisted GPS

##### Test procedure

The UE is made to initiate an emergency call.

After the call has been through-connected in both directions, the SS orders an A-GPS positioning measurement using two MEASUREMENT CONTROL messages. The last MEASUREMENT CONTROL message orders periodical reporting by sending a MEASUREMENT CONTROL message requesting periodical measurement reporting (1 report, interval 64s).

The UE then performs positioning measurements, calculates "UE Positioning Position Estimate Info" and responds with this in the RRC message MEASUREMENT REPORT.

Finally the SS clears the call.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The "emergency number" is entered. Number shall be one programmed in test USIM $EF_{ECC}$ (Emergency Call Codes), ref. 34.108 clause 8.3.2.21. |
| 2 | --> | | | UE establishes RRC procedure for emergency call.<br>Establishment cause: Emergency Call<br>SS checks that the UE capability includes A-GPS UE based positioning measurement |
| 3 | --> | | CM SERVICE REQUEST | The CM service type IE indicates "emergency call establishment". |
| 4 | <-- | | AUTHENTICATION REQUEST | IE Authentication Parameter AUTN shall be present in the message. |
| 5 | --> | | AUTHENTICATION RESPONSE | SRES specifies correct value. |
| 6 | | | | SS starts security procedure. |
| 7 | --> | | EMERGENCY SETUP | If the Bearer capability IE is not included the default UMTS AMR speech version shall be assumed. |
| 8 | <-- | | CALL PROCEEDING | |
| 9 | <-- | | ALERTING | |
| 10 | <-- | | | SS sets up the radio bearer with the rate indicated by the EMERGENCY SETUP message. |
| 11 | <-- | | CONNECT | |
| 12 | --> | | CONNECT ACKNOWLEDGE | |
| 13 | UE | | | The DTCH is through connected in both directions. |
| 14 | <- | | MEASUREMENT CONTROL | |
| 15 | <- | | MEASUREMENT CONTROL | |
| 16 | --> | | MEASUREMENT REPORT | |
| 17 | <-- | | DISCONNECT | SS disconnects the call and associated radio bearer. |

Specific Message Contents

MEASUREMENT CONTROL (Step 14):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | |
| - No reporting | |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the first MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 15):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the second MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 16):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | UE positioning measured results |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | |
| - CHOICE *Reference time* | GPS reference time only |
| - GPS TOW msec | Not checked |
| - CHOICE *Position estimate* | One of 'Ellipsoid point with uncertainty Circle' or 'Ellipsoid point with uncertainty Ellipse' or 'Ellipsoid point with altitude and uncertainty Ellipsoid' |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

17.2.2.1.5 Test requirements

After step 12 the UE shall have through connected the DTCH in both directions.

After step 15 the UE shall respond with a MEASUREMENT REPORT message.

## 17.2.2.2 LCS Network Induced location request/ UE-Based GPS/ Emergency Call / without USIM

### 17.2.2.2.1 Definition

This test case applies to all UEs supporting UE-Based GPS Location Service capabilities.

### 17.2.2.2.2 Conformance requirements

1) A MM connection for an emergency call may be established in all states of the mobility management sublayer which allow MM connection establishment for a normal originating call.

   When a user requests an emergency call establishment the UE will send a CM SERVICE REQUEST message to the network with a CM service type information element indicating emergency call establishment.

   Normally, the UE will be identified by an IMSI or a TMSI. However, if none of these identifiers is available in the UE, then the UE shall use the IMEI for identification purposes.

2) As a serving network option, emergency calls may be established without the network having to apply the security mode procedure as defined in TS 24.008.

   The following are the only cases where the "security procedure not applied" option may be used:

   a) Authentication is impossible because the USIM is absent.

3) Having entered the "MM connection pending" state, upon MM connection establishment, the call control entity of the UE sends a setup message to its peer entity. This setup message is

   - a SETUP message, if the call to be established is a basic call; and
   - an EMERGENCY SETUP message, if the call to be established is an emergency call.

4) If the IE "UE positioning GPS reference time" is included, the UE shall:

   1> store the IE "GPS Week" in "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as the current GPS week;

   1> store the IE "GPS TOW msec" in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as an estimate of the GPS Time-of-Week at the time of reception of the complete message containing the IE "GPS TOW msec";

   NOTE: The UE does not need to apply any compensation on the GPS Time-of-Week.

5) If the IE "UE positioning GPS reference UE position" is included, the UE shall:

   1> store this IE in the IE "UE positioning GPS reference UE position" in variable UE_POSITIONING_GPS_DATA; and

   1> use it as a priori knowledge of the approximate location of the UE.

6) The UE shall when a measurement report is triggered:

   2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or on the list of satellites included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning:

      3> include IE "UE positioning Position Estimate Info" in the MEASUREMENT REPORT and set the contents of the IE as follows:

         4> if the UE does not support the capability to perform the UE GPS timing of cell frames measurement; or

         4> if the IE "GPS timing of Cell wanted" is set to FALSE:

            5> include the IE "GPS TOW msec".

         4> if IE "Vertical Accuracy" has been included in IE "UE positioning reporting quantity":

5> if the IE "Vertical Accuracy" has been assigned to a value unequal to "0":

6> if the UE has been able to calculate a 3-dimensional position:

7> include IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

6> if the UE has not been able to calculate a 3-dimensional position:

7> act as if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity".

4> if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity":

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to a value unequal to 0:

6> include either IE "Ellipsoid point with uncertainty circle" or IE "Ellipsoid point with uncertainty ellipse" or IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

Reference(s):

- Conformance requirement 1: TS 24.008 clause 4.5.1.5, TS 22.101 clause 8.
- Conformance requirement 2: TS 33.102, clause 6.4.9.2.
- Conformance requirement 3: TS 24.008, clause 5.2.1.
- Conformance requirement 4: TS 25.331, clause 8.6.7.19.3.7.
- Conformance requirement 5: TS 25.331, clause 8.6.7.19.3.8.
- Conformance requirement 6: TS 25.331, clause 8.6.7.19.1b.

#### 17.2.2.2.3 Test Purpose

To verify when an emergency call is initiated by a UE in the "MM idle, no IMSI" state (no USIM inserted) and the network performs a location request using the RRC measurement control procedure by sending Measurement Control message , then the UE respond with a Measurement Report containing UE location.

#### 17.2.2.2.4 Method of Test

##### Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellites: As specified in 17.2.1.2
- User Equipment:
  - the UE is in MM-state "MM idle, no IMSI", no USIM inserted.

##### Related PICS/PIXIT Statements

- Emergency speech call yes/no
- UE Based Network Assisted GPS

##### Test procedure

The UE is made to initiate an emergency call.

After the call has been through-connected in both directions, the SS orders an A-GPS positioning measurement using two MEASUREMENT CONTROL messages. The last MEASUREMENT CONTROL message orders periodical reporting by sending a MEASUREMENT CONTROL message requesting periodical measurement reporting (1 report, interval 64s).

The UE then performs positioning measurements, calculates "UE Positioning Position Estimate Info" and responds with this in the RRC message MEASUREMENT REPORT.

Finally the SS clears the call.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The "emergency number" is entered. One of the following emergency numbers shall be used: 000, 08, 112, 110, 118, 119, 911 or 999. |
| 2 | --> | | | UE establishes RRC procedure for emergency call.<br>Establishment cause: Emergency Call<br>SS checks that the UE capability includes A-GPS UE based positioning measurement |
| 3 | --> | | CM SERVICE REQUEST | The CM service type IE indicates "emergency call establishment". |
| 4 | <-- | | CM SERVICE ACCEPT | |
| 5 | --> | | EMERGENCY SETUP | If the Bearer capability IE is not included the default UMTS AMR speech version shall be assumed. |
| 6 | <-- | | CALL PROCEEDING | |
| 7 | <-- | | ALERTING | |
| 8 | <-- | | | SS sets up the radio bearer with the rate indicated by the EMERGENCY SETUP message. |
| 9 | <-- | | CONNECT | |
| 10 | --> | | CONNECT ACKNOWLEDGE | |
| 11 | UE | | | The DTCH is through connected in both directions. |
| 12 | <- | | MEASUREMENT CONTROL | |
| 13 | <- | | MEASUREMENT CONTROL | |
| 14 | --> | | MEASUREMENT REPORT | |
| 15 | <-- | | DISCONNECT | SS disconnects the call and associated radio bearer. |

Specific Message Contents

MEASUREMENT CONTROL (Step 12):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | |
| - No reporting | |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the first MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 13):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the second MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 14):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | UE positioning measured results |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | |
| - CHOICE *Reference time* | GPS reference time only |
| - GPS TOW msec | Not checked |
| - CHOICE *Position estimate* | One of 'Ellipsoid point with uncertainty Circle' or 'Ellipsoid point with uncertainty Ellipse' or 'Ellipsoid point with altitude and uncertainty Ellipsoid' |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

17.2.2.2.5 Test requirements

After step 10 the UE shall have through connected the DTCH in both directions.

After step 13 the UE shall respond with a MEASUREMENT REPORT message containing a position estimate.

### 17.2.2.3 LCS Network induced location request/ UE-Assisted GPS/ Emergency call/ With USIM

#### 17.2.2.3.1 Definition

This test case applies to all UEs supporting UE-Assisted GPS Location Service capabilities.

#### 17.2.2.3.2 Conformance requirements

1) A MM connection for an emergency call may be established in all states of the mobility management sublayer which allow MM connection establishment for a normal originating call.

   When a user requests an emergency call establishment the UE will send a CM SERVICE REQUEST message to the network with a CM service type information element indicating emergency call establishment.

2) Having entered the "MM connection pending" state, upon MM connection establishment, the call control entity of the UE sends a setup message to its peer entity. This setup message is

   - a SETUP message, if the call to be established is a basic call; and
   - an EMERGENCY SETUP message, if the call to be established is an emergency call.

3) if the IE "Measurement command" has the value "setup":

   2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

   …

   2> for any other measurement type:

      3> if the measurement is valid in the current RRC state of the UE:

         4> begin measurements according to the stored control information for this measurement identity.

4) The UE shall:

1> when a measurement report is triggered:

   2> if the UE was able to perform measurements on at least one neighbour cell included in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED in case of OTDOA or one satellite included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning or one cell from the active set in case of CELL ID:

      3> if the IE "Vertical Accuracy" is included:

         4> interpret the presence of this IE to indicate that the UTRAN desires to compute a 3-dimensional position estimate.

      3> if the IE "Positioning Methods" is set to "GPS":

         4> include the IE "UE positioning GPS measured results" in the measurement report and set the contents of the IE as follows:

            5> if the UE supports the capability to provide the GPS timing of the cell frames measurement:

               6> if the IE "GPS timing of Cell wanted" is set to TRUE:

                  7> perform the UE GPS timing of cell frames measurement on the serving cell or on one cell of the active set.

                  7> include the IE "Primary CPICH Info" for FDD or the IE "cell parameters id" for TDD; and

                  7> include the IE "Reference SFN" and the IE "UE GPS timing of cell frames".

               6> if the IE "GPS timing of Cell wanted" is set to FALSE:

7> include the IE "GPS TOW msec".

5> if the UE does not support the capability to provide the GPS timing of the cell:

6> include the IE "GPS TOW msec".

References

- Conformance requirement 1: TS 24.008 clause 4.5.1.5.
- Conformance requirement 2: TS 24.008, clause 5.2.1.
- Conformance requirement 3: TS 25.331, clause 8.4.1.3.
- Conformance requirement 4: TS 25.331, clause 8.6.7.19.1a.

### 17.2.2.3.3 Test Purpose

To verify when an emergency call is initiated by a UE with a USIM, and the network performs a location request using the RRC measurement control procedure by sending Measurement Control message , then the UE respond with a Measurement Report containing “UE positioning GPS measured results”.

### 17.2.2.3.4 Method of Test

Initial Conditions

System Simulator (SS):

1 cell, default parameters

Satellites: As specified in 17.2.1.2

UE:

- the UE is in state "MM idle" with valid TMSI and CKSN.

Related PICS/PIXIT Statements

- Emergency speech call yes/no
- UE Assisted Network Assisted GPS

Test Procedure

The UE is made to initiate an emergency call.

After the call has been through-connected in both directions, the SS orders an A-GPS positioning measurement using a MEASUREMENT CONTROL message, including assistance data as specified in section 17.2.1.3.3. The UE may request additional assistance data by sending a MEASUREMENT REPORT message containing a positioning error indication with the IE “Error reason” set to “Assistance Data Missing”. If the UE requests additional assistance data, the SS provides the requested assistance data in one or more MEASUREMENT CONTROL messages.

The UE then performs positioning measurements and responds with the RRC message MEASUREMENT REPORT.

Finally the SS clears the call.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The "emergency number" is entered. Number shall be one programmed in test USIM $EF_{ECC}$ (Emergency Call Codes), ref. 34.108 clause 8.3.2.21. |
| 2 | --> | | | UE establishes RRC procedure for emergency call.<br>Establishment cause: Emergency Call<br>SS checks that the UE capability includes A-GPS UE assisted positioning measurement |
| 3 | --> | | CM SERVICE REQUEST | The CM service type IE indicates "emergency call establishment". |
| 4 | <-- | | AUTHENTICATION REQUEST | IE Authentication Parameter AUTN shall be present in the message. |
| 5 | --> | | AUTHENTICATION RESPONSE | SRES specifies correct value. |
| 6 | SS | | | SS starts security procedure. |
| 7 | --> | | EMERGENCY SETUP | If the Bearer capability IE is not included the default UMTS AMR speech version shall be assumed. |
| 8 | <-- | | CALL PROCEEDING | |
| 9 | <-- | | ALERTING | |
| 10 | <-- | | | SS sets up the radio bearer with the rate indicated by the EMERGENCY SETUP message. |
| 11 | <-- | | CONNECT | |
| 12 | --> | | CONNECT ACKNOWLEDGE | |
| 13 | UE | | | The DTCH is through connected in both directions. |
| 14 | <- | | MEASUREMENT CONTROL | |
| 15 | --> | | MEASUREMENT REPORT | UE reports positioning measurement results (Option 1) or requests additional assistance data (Option 2). |
| 15a | <- | | MEASUREMENT CONTROL | If UE requested additional assistance data in step 15, SS provides the requested data in one or more MEASUREMENT CONTROL messages as specified in section 17.2.1.3.5. |
| 15b | -> | | MEASUREMENT REPORT | If UE requested additional assistance data in step 15, this message contains the IE “UE positioning GPS measured results”. |
| 16 | <-- | | DISCONNECT | SS disconnects the call and associated radio bearer. |

Specific Message Contents

MEASUREMENT CONTROL (Step 14):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | TRUE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for “Adequate assistance data for UE-assisted A-GPS” in 17.2.1.3.3 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 15 (Option 1) or 15b (Option 2))

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT REPORT (Step 15 (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Assistance Data Missing |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT CONTROL (Step 15a (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - Vertical accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified in 17.2.1.3.5 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

17.2.2.3.5 Test requirements

After step 12 the UE shall have through connected the DTCH in both directions.

After step 14 the UE shall send a MEASUREMENT REPORT message containing the IE “UE positioning GPS measured results”.

### 17.2.2.4 LCS Network induced location request/ UE-Assisted GPS/ Emergency call/ Without USIM

#### 17.2.2.4.1 Definition

This test case applies to all UEs supporting UE-assisted A-GPS Location Service capabilities.

#### 17.2.2.4.2 Conformance requirements

1) A MM connection for an emergency call may be established in all states of the mobility management sublayer which allow MM connection establishment for a normal originating call.

   When a user requests an emergency call establishment the UE will send a CM SERVICE REQUEST message to the network with a CM service type information element indicating emergency call establishment.

   Normally, the UE will be identified by an IMSI or a TMSI. However, if none of these identifiers is available in the UE, then the UE shall use the IMEI for identification purposes.

2) As a serving network option, emergency calls may be established without the network having to apply the security mode procedure as defined in TS 24.008.

   The following are the only cases where the "security procedure not applied" option may be used:

a) Authentication is impossible because the USIM is absent.

3) Having entered the "MM connection pending" state, upon MM connection establishment, the call control entity of the UE sends a setup message to its peer entity. This setup message is

   - a SETUP message, if the call to be established is a basic call; and
   - an EMERGENCY SETUP message, if the call to be established is an emergency call.

4) if the IE "Measurement command" has the value "setup":

   2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

   …

   2> for any other measurement type:

      3> if the measurement is valid in the current RRC state of the UE:

         4> begin measurements according to the stored control information for this measurement identity.

5) The UE shall:

1> when a measurement report is triggered:

   2> if the UE was able to perform measurements on at least one neighbour cell included in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED in case of OTDOA or one satellite included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning or one cell from the active set in case of CELL ID:

      3> if the IE "Vertical Accuracy" is included:

         4> interpret the presence of this IE to indicate that the UTRAN desires to compute a 3-dimensional position estimate.

      3> if the IE "Positioning Methods" is set to "GPS":

         4> include the IE "UE positioning GPS measured results" in the measurement report and set the contents of the IE as follows:

5> if the UE supports the capability to provide the GPS timing of the cell frames measurement:

6> if the IE "GPS timing of Cell wanted" is set to TRUE:

7> perform the UE GPS timing of cell frames measurement on the serving cell or on one cell of the active set.

7> include the IE "Primary CPICH Info" for FDD or the IE "cell parameters id" for TDD; and

7> include the IE "Reference SFN" and the IE "UE GPS timing of cell frames".

6> if the IE "GPS timing of Cell wanted" is set to FALSE:

7> include the IE "GPS TOW msec".

5> if the UE does not support the capability to provide the GPS timing of the cell:

6> include the IE "GPS TOW msec".

References

- Conformance requirement 1: TS 24.008 clause 4.5.1.5, TS 22.101 clause 8.
- Conformance requirement 2: TS 33.102, clause 6.4.9.2.
- Conformance requirement 3: TS 24.008, clause 5.2.1.
- Conformance requirement 4: TS 25.331, clause 8.4.1.3.
- Conformance requirement 5: TS 25.331, clause 8.6.7.19.1a.

#### 17.2.2.4.3 Test Purpose

To verify that when an emergency call is initiated by a UE with no USIM, and the network performs a network-induced location request using UE-assisted A-GPS, the UE responds with a Measurement Report containing the IE “UE positioning GPS measured results”.

#### 17.2.2.4.4 Method of Test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellites: As specified in 17.2.1.2
- User Equipment:
  - the UE is in state "MM idle" with no IMSI and no USIM inserted.

Related PICS/PIXIT Statements

- Emergency speech call yes/no
- UE Assisted Network Assisted GPS

Test procedure

The UE is made to initiate an emergency call. The call is established without authentication and security.

After the call has been through-connected in both directions, the SS orders an A-GPS positioning measurement using a MEASUREMENT CONTROL message, including assistance data as specified in section 17.2.1.3.3. The UE may request additional assistance data by sending a MEASUREMENT REPORT message containing a positioning error indication with the IE “Error reason” set to “Assistance Data Missing”. If the UE requests additional assistance data, the SS provides the requested assistance data in one or more MEASUREMENT CONTROL messages.

The UE sends a MEASUREMENT REPORT message including the IE “UE positioning GPS measured results”.

Finally the SS clears the call.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | UE | | | The "emergency number" is entered. One of the following emergency numbers shall be used: 000, 08, 112, 110, 118, 119, 911 or 999. |
| 2 | --> | | | UE establishes RRC procedure for emergency call.<br>Establishment cause: Emergency Call<br>SS checks that the UE capability includes A-GPS UE-assisted positioning measurement. |
| 3 | --> | | CM SERVICE REQUEST | The CM service type IE indicates "emergency call establishment". The mobile identity IE specifies the IMEI of the UE. The cipher key sequence number IE indicates "no key is available". |
| 4 | <-- | | CM SERVICE ACCEPT | |
| 5 | --> | | EMERGENCY SETUP | If the Bearer capability IE is not included the default UMTS AMR speech version shall be assumed. |
| 6 | <-- | | CALL PROCEEDING | |
| 7 | <-- | | ALERTING | |
| 8 | <-- | | | SS sets up the radio bearer with the rate indicated by the EMERGENCY SETUP message. |
| 9 | <-- | | CONNECT | |
| 10 | --> | | CONNECT ACKNOWLEDGE | |
| 11 | UE | | | The DTCH is through connected in both directions. |
| 12 | <- | | MEASUREMENT CONTROL | Assistance data as specified in section 17.2.1.3.3. |
| 13 | --> | | MEASUREMENT REPORT | UE reports the IE “UE positioning GPS measured results” (Option 1) or requests additional assistance data (Option 2). |
| 13a | <- | | MEASUREMENT CONTROL | If UE requested additional assistance data in step 13, SS provides the requested data in one or more MEASUREMENT CONTROL messages as specified in section 17.2.1.3.5. |
| 13b | -> | | MEASUREMENT REPORT | If UE requested additional assistance data in step 13, this message contains the IE “UE positioning GPS measured results”. |
| 14 | <-- | | DISCONNECT | SS disconnects the call and associated radio bearer. |

Specific Message Contents

MEASUREMENT CONTROL (Step 12):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | TRUE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for “Adequate assistance data for UE-assisted A-GPS” in section 17.2.1.3.3 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 13 (Option 1) or 13b (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | UE positioning measured results |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT REPORT (Step 13 (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Assistance Data Missing |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT CONTROL (Step 13a (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - Vertical accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified in 17.2.1.3.5 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

### 17.2.2.4.5 Test requirements

After step 10 the UE shall have through connected the DTCH in both directions.

After step 12 the UE shall respond with a MEASUREMENT REPORT message containing the IE “UE positioning GPS measured results”.

## 17.2.3 Assisted GPS Mobile Originated Tests

### 17.2.3.1 Void

### 17.2.3.2 LCS Mobile originated location request/ UE-Based GPS/ Position estimate request/ Success

#### 17.2.3.2.1 Definition

This test case applies to all UEs supporting UE-Based GPS Location Service capabilities and providing a method to trigger an MO-LR request for a position estimate.

#### 17.2.3.2.2 Conformance requirements

1) The MS invokes a MO-LR by sending a REGISTER message to the network containing a LCS-MOLR invoke component.

2) if the IE "Measurement command" has the value "modify":

   2> for all IEs present in the MEASUREMENT CONTROL message:

      3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":

         4> if measurement type is set to "UE positioning measurement" and the IE "UE positioning GPS assistance data" is present, for any of the optional IEs "UE positioning GPS reference time", "UE positioning GPS reference UE position", "UE positioning GPS DGPS corrections", "UE positioning GPS ionospheric model", "UE positioning GPS UTC model", "UE positioning GPS acquisition assistance", "UE positioning GPS real-time integrity" that are present in the MEASUREMENT CONTROL message:

            5> replace all instances of the IEs listed above (and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IEs received in the MEASUREMENT CONTROL message;

            5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

3) If the IE "UE positioning GPS Navigation Model" is included, for each satellite, the UE shall:

   1> use IE "Satellite Status" to determine if an update of IE "UE positioning GPS Ephemeris and Clock Correction parameters" has been provided for the satellite indicated by the IE "SatID";

   1> if an update has been provided for this satellite:

      2> act as specified in subclause 8.6.7.19.3.4.

   If the IE "UE positioning GPS Ephemeris and Clock Correction parameters" is included, for each satellite, the UE shall:

   1> update the variable UE_POSITIONING_GPS_DATA as follows:

      2> store this IE at the position indicated by the IE "Sat ID" in the IE "UE positioning GPS Navigation Model" in the variable UE_POSITIONING_GPS_DATA, possibly overwriting any existing information in this position.

   1> act on these GPS ephemeris and clock correction parameters in a manner similar to that specified in [12].

4) The UE shall when a measurement report is triggered:

2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or on the list of satellites included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning:

3> include IE "UE positioning Position Estimate Info" in the MEASUREMENT REPORT and set the contents of the IE as follows:

4> if the UE does not support the capability to perform the UE GPS timing of cell frames measurement; or

4> if the IE "GPS timing of Cell wanted" is set to FALSE:

5> include the IE "GPS TOW msec".

4> if IE "Vertical Accuracy" has been included in IE "UE positioning reporting quantity":

5> if the IE "Vertical Accuracy" has been assigned to a value unequal to "0":

6> if the UE has been able to calculate a 3-dimensional position:

7> include IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

6> if the UE has not been able to calculate a 3-dimensional position:

7> act as if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity".

4> if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity":

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to value "0":

6> may include IE "Ellipsoid point".

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to a value unequal to 0:

6> include either IE "Ellipsoid point with uncertainty circle" or IE "Ellipsoid point with uncertainty ellipse" or IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

5) The network shall pass the result of the location procedure to the MS by sending a FACILITY message to the MS containing a LCS-MOLR return result component.

6) After the last location request operation the MS shall terminate the dialogue by sending a RELEASE COMPLETE message.

Reference(s):

- Conformance requirements 1, 5 and 6: TS 24.030, subclause 5.1.1
- Conformance requirement 2: TS 25.331, subclause 8.4.1.3.
- Conformance requirement 3: TS 25.331, subclauses 8.6.7.19.3.3a, 8.6.7.19.3.4.
- Conformance requirement 4: TS 25.331, subclause 8.6.7.19.1b
- Reference [12] in these conformance requirements denotes document ICD-GPS-200: “Navstar GPS Space Segment/Navigation User Interface”.

#### 17.2.3.2.3 Test Purpose

To verify the UE behaviour at a mobile originated location request procedure using network-assisted UE-based GPS.

17.2.3.2.4 Method of Test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellites: As specified in 17.2.1.2
- User Equipment:
  - The UE is in state "MM idle" with valid TMSI and CKSN.
  - The UE is in state “PMM idle” with valid P-TMSI

Related PICS/PIXIT Statements

- UE Based Network Assisted GPS
- Method of triggering an MO-LR request for a position estimate.

Test Procedure

The UE invokes call independent supplementary service through a CM SERVICE REQUEST. The SS initiates authentication and ciphering.

Then the UE invokes an MO-LR request of type “locationEstimate”. The SS orders an A-GPS positioning measurement using two MEASUREMENT CONTROL messages, including assistance data. The UE then initiates periodic measurement reporting. After the first received MEASUREMENT REPORT message, the SS responds with a FACILITY message containing an MO-LR result. When UE receives the FACILITY message, it clears the transaction by sending a RELEASE COMPLETE message.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | -> | | | The UE establishes an RRC connection for location service. The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originated High Priority Signalling”. |
| 2 | -> | | CM SERVICE REQUEST | The CM service type IE indicates "call independent supplementary service” |
| 3 | <- | | AUTHENTICATION REQUEST | |
| 4 | -> | | AUTHENTICATION RESPONSE | |
| 5 | SS | | | The SS starts ciphering and integrity protection. |
| 6 | -> | | REGISTER | Call Independent SS containing Facility IE with an LCS MO-LR request of type “locationEstimate”. |
| 7 | <- | | MEASUREMENT CONTROL | |
| 8 | <- | | MEASUREMENT CONTROL | |
| 9 | -> | | MEASUREMENT REPORT | |
| 10 | <- | | FACILITY | LCS MO-LR result message containing location estimate |
| 11 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| 12 | SS | | | The SS releases the RRC connection and the test case ends. |

Specific Message Contents

REGISTER (Step 6)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | REGISTER (xx11 1011) |
| Facility | Invoke = LCS-MOLR<br>LCS-MOLRArg<br>molr-Type ->locationEstimate |
| SS version indicator | Value 1 or above |

MEASUREMENT CONTROL (Step 7):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | |
| - No reporting | |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the first MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 8):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - Vertical accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the second MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 9)

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | |
| - CHOICE *Reference time* | |
| - GPS reference time only | |
| - GPS TOW msec | Not checked |
| - CHOICE *Position estimate* | One of 'Ellipsoid point with uncertainty Circle' or 'Ellipsoid point with uncertainty Ellipse' or 'Ellipsoid point with altitude and uncertainty Ellipsoid' |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

FACILITY (Step 10)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | FACILITY (0011 1010) |
| Facility | Return result = LCS-MOLR<br>LCS-MOLRRes -> locationEstimate |

RELEASE COMPLETE (Step 11)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | RELEASE COMPLETE (xx10 1010) |

#### 17.2.3.2.5 Test requirements

After step 5 the UE shall transmit a REGISTER message with an LCS MO-LR request with the IE "MOLR-Type" set to "locationEstimate".

After step 8, the UE shall respond with a MEASUREMENT REPORT message.

After step 10, the UE shall send a RELEASE COMPLETE message.

### 17.2.3.3 LCS Mobile originated location request/ UE-Based or UE-Assisted GPS/ Assistance data request/ Success

#### 17.2.3.3.1 Definition

This test case applies to all UEs supporting UE-Based or UE-Assisted GPS Location Service capabilities and providing a method to trigger an MO-LR request for assistance data.

#### 17.2.3.3.2 Conformance requirements

1) The MS invokes a MO-LR by sending a REGISTER message to the network containing a LCS-MOLR invoke component.

2) The network shall pass the result of the location procedure to the MS by sending a FACILITY message to the MS containing a LCS-MOLR return result component.

3) After the last location request operation the MS shall terminate the dialogue by sending a RELEASE COMPLETE message.

Reference(s):

- Conformance requirements 1, 2 and 3: TS 24.030, subclause 5.1.1

#### 17.2.3.3.3 Test Purpose

To verify the UE behaviour at a mobile originated location request procedure using network-assisted network assisted GPS.

#### 17.2.3.3.4 Method of Test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellites: As specified in 17.2.1.2
- User Equipment:

- The UE shall begin the test with no GPS assistance data stored.
- The UE is in state "MM idle" with valid TMSI and CKSN.
- The UE is in state “PMM idle” with valid P-TMSI

### Related PICS/PIXIT Statements

- UE Based Network Assisted GPS
- UE Assisted Network Assisted GPS
- Method of clearing stored GPS assistance data
- Method of triggering an MO-LR request for assistance data.

### Test Procedure

The stored GPS assistance data in the UE shall be cleared.

The UE invokes call independent supplementary service through a CM SERVICE REQUEST. The SS initiates authentication and ciphering.

Then the UE invokes an MO-LR request of type “assistanceData”.

The SS transmits an ASSISTANCE DATA delivery message with assistance data. When the assistance data delivery was successful, the SS sends a FACILITY message to the UE.

The UE clears the transaction by sending a RELEASE COMPLETE message.

### Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | | Void | |
| 2 | -> | | | The UE establishes an RRC connection for location service. The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originated High Priority Signalling”. |
| 3 | -> | | CM SERVICE REQUEST | The CM service type IE indicates "call independent supplementary service” |
| 4 | <- | | AUTHENTICATION REQUEST | |
| 5 | -> | | AUTHENTICATION RESPONSE | |
| 6 | | SS | | The SS starts ciphering and integrity protection. |
| 7 | -> | | REGISTER | Call Independent SS containing Facility IE with an LCS MO-LR request of type “assistanceData”. |
| 8 | <- | | ASSISTANCE DATA DELIVERY | The SS provides the requested data in one or more ASSISTANCE DATA DELIVERY messages as specified in section 17.2.1.3.5 |
| 9 | <- | | FACILITY | |
| 10 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| 11 | | SS | | The SS releases the RRC connection and the test case ends |

Specific Message Contents

REGISTER (Step 7)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | REGISTER (xx11 1011)<br>Invoke = LCS-MOLR<br>LCS-MOLRArg<br>molr-Type ->assistanceData<br>locationMethod -> assistedGPS<br>gpsAssistanceData -> OCTET STRING<br>Octets 1 to 38 are coded in the same way as octets 3 to 7+2n of Requested GPS Data IE in 3GPP TS 49.031 (Contents are not verified, SS will use octet 1 to identify the GPS assistance data requested by the MS) |
| SS version indicator | Value 1 or above |

ASSISTANCE DATA DELIVERY (Step 8):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| UE positioning OTDOA assistance data for UE-based | Not present |
| UE positioning GPS assistance data | Set as specified in 17.2.1.3.5. |

FACILITY (Step 9)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | FACILITY (0011 1010)<br>Return result = LCS-MOLR<br>LCS-MOLRRes -> EMPTY |

RELEASE COMPLETE (Step 10)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type | RELEASE COMPLETE (0x10 1010) |

#### 17.2.3.3.5 Test requirements

After step 5 the UE shall transmit a REGISTER message with an LCS MO-LR request with the IE “MOLR-Type” set to “assistanceData”.

After step 8, the UE shall send a RELEASE COMPLETE message.

### 17.2.3.4 LCS Mobile originated location request/ UE-Assisted GPS/ Position Estimate/ Success

#### 17.2.3.4.1 Definition

This test case applies to all UEs supporting UE-Assisted GPS Location Service capabilities and providing a method to trigger an MO-LR request for a position estimate.

17.2.3.4.2 Conformance requirements

1) The MS invokes a MO-LR by sending a REGISTER message to the network containing a LCS-MOLR invoke component.

2) if the IE "Measurement command" has the value "setup":

   2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

   …

   2> for any other measurement type:

      3> if the measurement is valid in the current RRC state of the UE:

         4> begin measurements according to the stored control information for this measurement identity.

3) The UE shall:

   1> when a measurement report is triggered:

   2> if the UE was able to perform measurements on at least one neighbour cell included in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED in case of OTDOA or one satellite included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning or one cell from the active set in case of CELL ID:

      3> if the IE "Vertical Accuracy" is included:

         4> interpret the presence of this IE to indicate that the UTRAN desires to compute a 3-dimensional position estimate.

      3> if the IE "Positioning Methods" is set to "GPS":

         4> include the IE "UE positioning GPS measured results" in the measurement report and set the contents of the IE as follows:

            5> if the UE supports the capability to provide the GPS timing of the cell frames measurement:

               6> if the IE "GPS timing of Cell wanted" is set to TRUE:

                  7> perform the UE GPS timing of cell frames measurement on the serving cell or on one cell of the active set.

                  7> include the IE "Primary CPICH Info" for FDD or the IE "cell parameters id" for TDD; and

                  7> include the IE "Reference SFN" and the IE "UE GPS timing of cell frames".

               6> if the IE "GPS timing of Cell wanted" is set to FALSE:

                  7> include the IE "GPS TOW msec".

            5> if the UE does not support the capability to provide the GPS timing of the cell:

               6> include the IE "GPS TOW msec".

4) The network shall pass the result of the location procedure to the MS by sending a FACILITY message to the MS containing a LCS-MOLR return result component.

5) After the last location request operation the MS shall terminate the dialogue by sending a RELEASE COMPLETE message.

References:

- Conformance requirements 1, 4 and 5: TS 24.030, subclause 5.1.1

- Conformance requirement 2: TS 25.331, subclause 8.4.1.3

- Conformance requirement 3: TS 25.331, subclause 8.6.7.19b

#### 17.2.3.4.3 Test Purpose

To verify the UE behaviour in the mobile-originated location request procedure using network-assisted UE-assisted GPS to request a position estimate from the network.

#### 17.2.3.4.4 Method of Test

##### Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellites: As specified in 17.2.1.2
- User Equipment:
  - The UE is in state "MM idle" with valid TMSI and CKSN.
  - The UE is in state "PMM idle" with valid P-TMSI

##### Related PICS/PIXIT Statements

- UE Assisted Network Assisted GPS
- Method of triggering an MO-LR request for a position estimate.

##### Test Procedure

The UE invokes call independent supplementary service through a CM SERVICE REQUEST. The SS initiates authentication and ciphering.

The UE invokes an MO-LR request through the Facility IE in a REGISTER message. The MO-LR request is of type “locationEstimate”.

The SS orders an A-GPS positioning measurement using a MEASUREMENT CONTROL message, including assistance data as specified in section 17.2.1.3.3. The UE may request additional assistance data by sending a MEASUREMENT REPORT message containing a positioning error indication with the IE “Error reason” set to “Assistance Data Missing”. If the UE requests additional assistance data, the SS provides the requested assistance data in one or more MEASUREMENT CONTROL messages.

The UE then initiates periodic measurement reporting. After receiving the MEASUREMENT REPORT message, the SS responds with a FACILITY message containing an MO-LR result. When UE receives the FACILITY message, it clears the transaction by sending a RELEASE COMPLETE message.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | -> | | | The UE establishes an RRC connection for location service. The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Originated High Priority Signalling". |
| 2 | -> | | CM SERVICE REQUEST | The CM service type IE indicates "call independent supplementary service" |
| 3 | <- | | AUTHENTICATION REQUEST | |
| 4 | -> | | AUTHENTICATION RESPONSE | |
| 5 | SS | | | The SS starts ciphering and integrity protection. |
| 6 | -> | | REGISTER | Call Independent SS containing Facility IE with an LCS MO-LR request. The IE "MOLR-Type" is set to "locationEstimate". |
| 7 | <- | | MEASUREMENT CONTROL | |
| 8 | -> | | MEASUREMENT REPORT | UE reports the IE "UE positioning GPS measured results" (Option 1) or requests additional assistance data (Option 2). |
| 8a | <- | | MEASUREMENT CONTROL | If UE requested additional assistance data in step 8, SS provides the requested data in one or more MEASUREMENT CONTROL messages as specified in section 17.2.1.3.5. |
| 8b | -> | | MEASUREMENT REPORT | If UE requested additional assistance data in step 8, this message contains the IE "UE positioning GPS measured results". |
| 9 | <- | | FACILITY | LCS MO-LR result message containing location estimate |
| 10 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| 11 | SS | | | The SS releases the RRC connection and the test case ends |

Specific Message Contents

REGISTER (Step 6)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (xx11 1011)<br>Invoke = LCS-MOLR<br>LCS-MOLRArg<br>molr-Type -> locationEstimate<br>Value 1 or above |

MEASUREMENT CONTROL (Step 7):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | TRUE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for “Adequate assistance data for UE-assisted A-GPS” in 17.2.1.3.3 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 8 (Option 1) or 8b (Option 2))

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT REPORT (Step 8 (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Assistance Data Missing |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT CONTROL (Step 8a (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - Vertical accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified in 17.2.1.3.5 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

FACILITY (Step 9)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | FACILITY (0011 1010)<br>Return result = LCS-MOLR<br>LCS-MOLRRes -> locationEstimate<br>locationEstimate ->any values may be used. The SS shall not be required to calculate the value from the returned gps-MeasureInfo values |

RELEASE COMPLETE (Step 10)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type | RELEASE COMPLETE (xx10 1010) |

#### 17.2.3.4.5 Test requirements

After step 5 the UE shall transmit a REGISTER message with an LCS MO-LR request with the IE “MOLR-Type” set to “locationEstimate”.

After step 7, the UE shall respond with a MEASUREMENT REPORT message containing the IE “UE positioning GPS measured results”.

After step 9, the UE shall send a RELEASE COMPLETE message.

### 17.2.3.5 Void

### 17.2.3.6 LCS Mobile originated location request/ UE-Based GPS/ Transfer to third party/ Success

#### 17.2.3.6.1 Definition

This test case applies to all UEs supporting UE-Based GPS Location Service capabilities and providing a method to trigger an MO-LR request for transfer to 3rd party.

#### 17.2.3.6.2 Conformance requirements

1) The MS invokes a MO-LR by sending a REGISTER message to the network containing a LCS-MOLR invoke component.

2) If the UE is requesting that its location be sent to an external LCS client, the message shall include the identity of the LCS client and may include the address of the GMLC through which the LCS client should be accessed.

3) if the IE "Measurement command" has the value "setup":

   2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

   …

   2> for any other measurement type:

      3> if the measurement is valid in the current RRC state of the UE:

         4> begin measurements according to the stored control information for this measurement identity.

4) if the IE "Measurement command" has the value "modify":

2> for all IEs present in the MEASUREMENT CONTROL message:

3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":

4> if measurement type is set to "UE positioning measurement" and the IE "UE positioning GPS assistance data" is present, for any of the optional IEs "UE positioning GPS reference time", "UE positioning GPS reference UE position", "UE positioning GPS DGPS corrections", "UE positioning GPS ionospheric model", "UE positioning GPS UTC model", "UE positioning GPS acquisition assistance", "UE positioning GPS real-time integrity" that are present in the MEASUREMENT CONTROL message:

5> replace all instances of the IEs listed above (and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IEs received in the MEASUREMENT CONTROL message;

5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

5) If the IE "UE positioning GPS Navigation Model" is included, for each satellite, the UE shall:

1> use IE "Satellite Status" to determine if an update of IE "UE positioning GPS Ephemeris and Clock Correction parameters" has been provided for the satellite indicated by the IE "SatID";

1> if an update has been provided for this satellite:

2> act as specified in subclause 8.6.7.19.3.4.

If the IE "UE positioning GPS Ephemeris and Clock Correction parameters" is included, for each satellite, the UE shall:

1> update the variable UE_POSITIONING_GPS_DATA as follows:

2> store this IE at the position indicated by the IE "Sat ID" in the IE "UE positioning GPS Navigation Model" in the variable UE_POSITIONING_GPS_DATA, possibly overwriting any existing information in this position.

1> act on these GPS ephemeris and clock correction parameters in a manner similar to that specified in [12].

6) The UE shall when a measurement report is triggered:

2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or on the list of satellites included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning:

3> include IE "UE positioning Position Estimate Info" in the MEASUREMENT REPORT and set the contents of the IE as follows:

4> if the UE does not support the capability to perform the UE GPS timing of cell frames measurement; or

4> if the IE "GPS timing of Cell wanted" is set to FALSE:

5> include the IE "GPS TOW msec".

4> if IE "Vertical Accuracy" has been included in IE "UE positioning reporting quantity":

5> if the IE "Vertical Accuracy" has been assigned to a value unequal to "0":

6> if the UE has been able to calculate a 3-dimensional position:

7> include IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

6> if the UE has not been able to calculate a 3-dimensional position:

7> act as if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity".

4> if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity":

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to value "0":

6> may include IE "Ellipsoid point".

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to a value unequal to 0:

6> include either IE "Ellipsoid point with uncertainty circle" or IE "Ellipsoid point with uncertainty ellipse" or IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

7) The network shall pass the result of the location procedure to the MS by sending a FACILITY message to the MS containing a LCS-MOLR return result component.

8) After the last location request operation the MS shall terminate the dialogue by sending a RELEASE COMPLETE message.

Reference(s):

- Conformance requirements 1, 7 and 8: TS 24.030, subclause 5.1.1
- Conformance requirement 3: TS 25.331, subclause 8.4.1.3
- Conformance requirement 2: TS 23.171, subclause 8.8.1
- Conformance requirement 4: TS 25.331, subclause 8.4.1.3
- Conformance requirement 5: TS 25.331, subclauses 8.6.7.19.3.3a, 8.6.7.19.3.4
- Conformance requirement 6: TS 25.331, subclause 8.6.7.19.1b
- Reference [12] in these conformance requirements denotes document ICD-GPS-200: “Navstar GPS Space Segment/Navigation User Interface”.

#### 17.2.3.6.3 Test Purpose

To verify the UE behaviour in the mobile-originated location request procedure using network-assisted UE-based GPS to request a position estimate from the network for transfer to a third-party LCS client.

#### 17.2.3.6.4 Method of Test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellites: As specified in 17.2.1.2
- User Equipment:
  - The UE is in state "MM idle" with valid TMSI and CKSN.
  - The UE is in state “PMM idle” with valid P-TMSI

Related PICS/PIXIT Statements

- UE Based Network Assisted GPS
- Method of triggering an MO-LR request for transfer to 3rd party

Test Procedure

The UE invokes call independent supplementary service through a CM SERVICE REQUEST. The SS initiates authentication and ciphering.

The UE invokes a MO-LR request through the Facility IE in a REGISTER message. The MO-LR request is of type "locationEstimate". The IE "LCSClientExternalID" is set to the ID of a valid external LCS client.

The SS orders an A-GPS positioning measurement using MEASUREMENT CONTROL messages, including assistance data.

The UE sends a MEASUREMENT REPORT message containing a location estimate.

The SS sends a FACILITY message confirming that the transfer to the external client succeeded. When UE receives the FACILITY message, it clears the transaction by sending a RELEASE COMPLETE message.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | -> | | | The UE establishes an RRC connection for location service. The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Originated High Priority Signalling". |
| 2 | -> | | CM SERVICE REQUEST | The CM service type IE indicates "call independent supplementary service" |
| 3 | <- | | AUTHENTICATION REQUEST | |
| 4 | -> | | AUTHENTICATION RESPONSE | |
| 5 | SS | | | The SS starts ciphering and integrity protection. |
| 6 | -> | | REGISTER | Call Independent SS containing Facility IE with an LCS MO-LR request. The IE "MOLR-Type" is set to "locationEstimate". The IE "LCSClientExternalID" is set to a valid ID for an external LCS client. |
| 7 | <- | | MEASUREMENT CONTROL | |
| 8 | <- | | MEASUREMENT CONTROL | |
| 9 | -> | | MEASUREMENT REPORT | |
| 10 | <- | | FACILITY | LCS MO-LR result message as confirmation that the position estimate was transferred to the requested LCS client. |
| 11 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| | | | | |
| 12 | SS | | | The SS releases the RRC connection and the test case ends |

Specific Message Contents

REGISTER (Step 6)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | REGISTER (xx11 1011) |
| Facility | Invoke = LCS-MOLR<br>LCS-MOLRArg<br>molr-Type ->locationEstimate<br>lcsClientExternalID -> externalAddress |
| SS version indicator | Value 1 or above |

MEASUREMENT CONTROL (Step 7):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | |
| - No reporting | |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the first MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 8):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the second MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 9)

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | |
| - CHOICE *Reference time* | |
| - GPS reference time only | |
| - GPS TOW msec | Not checked |
| - CHOICE *Position estimate* | One of 'Ellipsoid point with uncertainty Circle' or 'Ellipsoid point with uncertainty Ellipse' or 'Ellipsoid point with altitude and uncertainty Ellipsoid' |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

FACILITY (Step 10)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | FACILITY (0011 1010)<br>Return result = LCS-MOLR<br>LCS-MOLRRes -> locationEstimate |

RELEASE COMPLETE (Step 11)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type | RELEASE COMPLETE (xx10 1010) |

#### 17.2.3.6.5 Test requirements

After step 5 the UE shall transmit a REGISTER message with an LCS MO-LR request with the IE “MOLR-Type” set to “locationEstimate” and the IE “LCSClientExternalID” set to the ID of a valid external LCS client.

After step 8, the UE shall respond with a MEASUREMENT REPORT message containing the IE “Position Estimate”.

After step 11, the UE shall send a RELEASE COMPLETE message.

### 17.2.3.7 LCS Mobile originated location request/ UE-Assisted GPS/ Transfer to third party/ Success

#### 17.2.3.7.1 Definition

This test case applies to all UEs supporting UE-Assisted GPS Location Service capabilities and providing a method to trigger an MO-LR request for transfer to 3rd party.

#### 17.2.3.7.2 Conformance requirements

1) The MS invokes a MO-LR by sending a REGISTER message to the network containing a LCS-MOLR invoke component.

2) If the UE is requesting that its location be sent to an external LCS client, the message shall include the identity of the LCS client and may include the address of the GMLC through which the LCS client should be accessed.

3) if the IE "Measurement command" has the value "setup":

   2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

   …

   2> for any other measurement type:

      3> if the measurement is valid in the current RRC state of the UE:

         4> begin measurements according to the stored control information for this measurement identity.

4) The UE shall:

   1> when a measurement report is triggered:

      2> if the UE was able to perform measurements on at least one neighbour cell included in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED in case of OTDOA or one satellite included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning or one cell from the active set in case of CELL ID:

         3> if the IE "Vertical Accuracy" is included:

4> interpret the presence of this IE to indicate that the UTRAN desires to compute a 3-dimensional position estimate.

3> if the IE "Positioning Methods" is set to "GPS":

4> include the IE "UE positioning GPS measured results" in the measurement report and set the contents of the IE as follows:

5> if the UE supports the capability to provide the GPS timing of the cell frames measurement:

6> if the IE "GPS timing of Cell wanted" is set to TRUE:

7> perform the UE GPS timing of cell frames measurement on the serving cell or on one cell of the active set.

7> include the IE "Primary CPICH Info" for FDD or the IE "cell parameters id" for TDD; and

7> include the IE "Reference SFN" and the IE "UE GPS timing of cell frames".

6> if the IE "GPS timing of Cell wanted" is set to FALSE:

7> include the IE "GPS TOW msec".

5> if the UE does not support the capability to provide the GPS timing of the cell:

6> include the IE "GPS TOW msec".

5) The network shall pass the result of the location procedure to the MS by sending a FACILITY message to the MS containing a LCS-MOLR return result component.

6) After the last location request operation the MS shall terminate the dialogue by sending a RELEASE COMPLETE message.

Reference(s):

- Conformance requirements 1, 5 and 6: TS 24.030, subclause 5.1.1
- Conformance requirement 2: TS 23.171, subclause 8.8.1
- Conformance requirement 3: TS 25.331, subclause 8.4.1.3
- Conformance requirement 4: TS 25.331, subclauses 8.6.7.19.3.3b

#### 17.2.3.7.3 Test Purpose

To verify the UE behaviour in the mobile-originated location request procedure using network-assisted UE-assisted GPS to request a position estimate from the network for transfer to a third-party LCS client.

#### 17.2.3.7.4 Method of Test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellites: As specified in 17.2.1.2
- User Equipment:
  - The UE is in state "MM idle" with valid TMSI and CKSN.
  - The UE is in state “PMM idle” with valid P-TMSI

Related PICS/PIXIT Statements

- UE Assisted Network Assisted GPS
- Method of triggering an MO-LR request for transfer to 3rd party

Test Procedure

The UE invokes call independent supplementary service through a CM SERVICE REQUEST. The SS initiates authentication and ciphering.

The UE invokes a MO-LR request through the Facility IE in a REGISTER message. The MO-LR request is of type "locationEstimate". The IE "LCSClientExternalID" is set to the ID of a valid external LCS client.

The SS orders an A-GPS positioning measurement using a MEASUREMENT CONTROL message, including assistance data as specified in section 17.2.1. 3.3. The UE may request additional assistance data by sending a MEASUREMENT REPORT message containing a positioning error indication with the IE "Error reason" set to "Assistance Data Missing". If the UE requests additional assistance data, the SS provides the requested assistance data in one or more MEASUREMENT CONTROL messages.

The UE sends a MEASUREMENT REPORT message containing IE "UE positioning GPS measured results".

The SS sends a FACILITY message confirming that the transfer to the external client succeeded. When UE receives the FACILITY message, it clears the transaction by sending a RELEASE COMPLETE message.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | -> | | | The UE establishes an RRC connection for location service. The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to "Originated High Priority Signalling". |
| 2 | -> | | CM SERVICE REQUEST | The CM service type IE indicates "call independent supplementary service" |
| 3 | <- | | AUTHENTICATION REQUEST | |
| 4 | -> | | AUTHENTICATION RESPONSE | |
| 5 | SS | | | The SS starts ciphering and integrity protection. |
| 6 | -> | | REGISTER | Call Independent SS containing Facility IE with an LCS MO-LR request. The IE "MOLR-Type" is set to "locationEstimate". The IE "LCSClientExternalID" is set to a valid ID for an external LCS client. |
| 7 | <- | | MEASUREMENT CONTROL | |
| 8 | -> | | MEASUREMENT REPORT | UE reports positioning measurement results (Option 1) or requests additional assistance data (Option 2). |
| 8a | <- | | MEASUREMENT CONTROL | If UE requested additional assistance data in step 8, SS provides the requested data in one or more MEASUREMENT CONTROL messages as specified in section 17.2.1.3.5. |
| 8b | -> | | MEASUREMENT REPORT | If UE requested additional assistance data in step 8, this message contains the IE "UE positioning GPS measured results". |
| 9 | <- | | FACILITY | LCS MO-LR result message as confirmation that the position estimate was transferred to the requested LCS client. |
| 10 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| | | | | |
| 11 | SS | | | The SS releases the RRC connection and the test case ends |

Specific Message Contents

REGISTER (Step 6)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | REGISTER (xx11 1011) |
| Facility | Invoke = LCS-MOLR<br>LCS-MOLRArg<br>molr-Type ->locationEstimate<br>lcsClientExternalID -> externalAddress |
| SS version indicator | Value 1 or above |

MEASUREMENT CONTROL (Step 7):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | TRUE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for “Adequate assistance data for UE-assisted A-GPS” in 17.2.1.3.3 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Steps 8 (Option 1) or 8b (Option 2))

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT REPORT (Step 8 (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Assistance Data Missing |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT CONTROL (Step 8a (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified in 17.2.1.3.5 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

FACILITY (Step 9)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | FACILITY (0011 1010)<br>Return result = LCS-MOLR<br>LCS-MOLRRes -> locationEstimate<br>locationEstimate ->any values may be used. The SS shall not be required to calculate the value from the returned gps-MeasureInfo values |

RELEASE COMPLETE (Step 10)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type | RELEASE COMPLETE (xx10 1010) |

#### 17.2.3.7.5 Test requirements

After step 5 the UE shall transmit a REGISTER message with an LCS MO-LR request with the IE "MOLR-Type" set to "locationEstimate" and the IE "LCSClientExternalID" set to the ID of a valid external LCS client.

After step 7, the UE shall respond with a MEASUREMENT REPORT message containing the IE "UE positioning GPS measured results".

After step 9, the UE shall send a RELEASE COMPLETE message.

### 17.2.3.8 LCS Mobile originated location request/ UE-Based or UE-Assisted GPS/ Assistance data request/ Failure

#### 17.2.3.8.1 Definition

This test case applies to all UEs supporting UE-based or UE-assisted GPS Location Service capabilities and providing a method to trigger an MO-LR request for assistance data.

#### 17.2.3.8.2 Conformance requirements

1) The MS invokes a MO-LR by sending a REGISTER message to the network containing a LCS-MOLR invoke component.

2) If the network is unable to successfully fulfil the request received from the MS (e.g. to provide a location estimate or location assistance information), it shall clear the transaction by sending a RELEASE COMPLETE message containing a return error component. Error values are specified in 3GPP TS 24.080.

3) PositionMethodFailure: This error is returned by the network when the network is unable to obtain any of the location information requested or none of the information obtained satisfies the requested LCS QoS or if requested LCS assistance data could not be transferred or requested deciphering keys for broadcast assistance data could not be returned.

Reference(s):

- Conformance requirements 1 and 2: TS 24.030, subclause 5.1.1

- Conformance requirement 3: TS 24.080, subclause 4.3.2.29

#### 17.2.3.8.3 Test Purpose

To verify the UE behaviour at a mobile originated location request for GPS assistance data where the network is unable to provide the requested GPS assistance data.

17.2.3.8.4 Method of Test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
- User Equipment:

  The UE shall begin the test with no GPS assistance data stored.
  - The UE is in state "MM idle" with valid TMSI and CKSN.
  - The UE is in state “PMM idle” with valid P-TMSI

Related PICS/PIXIT Statements

- UE Based Network Assisted GPS, or UE Assisted Network Assisted GPS
- Method of triggering an MO-LR request for assistance data.
- Method of clearing stored GPS assistance data

Test Procedure

The stored GPS assistance data in the UE shall be cleared.

The UE invokes call independent supplementary service through a CM SERVICE REQUEST. The SS initiates authentication and ciphering.

The UE invokes an MO-LR request of type “assistanceData”.

The SS is unable to provide the requested assistance data.

The SS sends a RELEASE COMPLETE message containing a return error component.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| **1** | | | **Void** | |
| **2** | **->** | | | **The UE establishes an RRC connection for location service. The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originated High Priority Signalling”.** |
| **3** | **->** | | **CM SERVICE REQUEST** | **The CM service type IE indicates "call independent supplementary service”** |
| **4** | **<-** | | **AUTHENTICATION REQUEST** | |
| **5** | **->** | | **AUTHENTICATION RESPONSE** | |
| **6** | **SS** | | | **The SS starts ciphering and integrity protection.** |
| **7** | **->** | | **REGISTER** | **Call Independent SS containing Facility IE with an LCS MO-LR request of type “assistanceData”.** |
| **8** | **SS** | | | **SS is unable to provide the requested assistance data** |
| **9** | **<-** | | **RELEASE COMPLETE** | **SS terminates the dialogue containing a return error component** |
| **10** | **SS** | | | **The SS waits for 10 seconds to verify that the UE does not send a RELEASE COMPLETE message.** |
| **11** | **SS** | | | **The SS releases the RRC connection and the test case ends** |

Specific Message Contents

REGISTER (Step 7)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | REGISTER (xx11 1011) |
| Facility | Invoke = LCS-MOLR<br>LCS-MOLRArg<br>molr-Type ->assistanceData<br>locationMethod -> assistedGPS<br>gpsAssistanceData -> OCTET STRING<br>Octets 1 to 38 are coded in the same way as octets 3 to 7+2n of Requested GPS Data IE in 3GPP TS 49.031 (Content is not verified) |
| SS version indicator | Value 1 or above |

RELEASE COMPLETE (Step 9)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | RELEASE COMPLETE (0010 1010) |
| Facility | Return error = LCS-MOLR<br>Error -> positionMethodFailure |

#### 17.2.3.8.5 Test requirements

After step 6 the UE shall transmit a REGISTER message with an LCS MO-LR request with the IE “MOLR-Type” set to “assistanceData”.

During step 10 the UE shall not send any RELEASE COMPLETE message.

### 17.2.3.9 LCS Mobile originated location request/ UE-Based GPS/ Position estimate request/ Failure

#### 17.2.3.9.1 Definition

This test case applies to all UEs supporting UE-Based GPS Location Service capabilities and providing a method to trigger an MO-LR request for a position estimate.

#### 17.2.3.9.2 Conformance requirements

1) The MS invokes a MO-LR by sending a REGISTER message to the network containing a LCS-MOLR invoke component. SS Version Indicator value 1 or above shall be used.

2) if the IE "Measurement command" has the value "modify":

   2> for all IEs present in the MEASUREMENT CONTROL message:

      3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":

         4> if measurement type is set to "UE positioning measurement" and the IE "UE positioning GPS assistance data" is present, for any of the optional IEs "UE positioning GPS reference time", "UE positioning GPS reference UE position", "UE positioning GPS DGPS corrections", "UE positioning GPS ionospheric model", "UE positioning GPS UTC model", "UE positioning GPS acquisition assistance", "UE positioning GPS real-time integrity" that are present in the MEASUREMENT CONTROL message:

            5> replace all instances of the IEs listed above (and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IEs received in the MEASUREMENT CONTROL message;

5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

3) If the IE "UE positioning GPS Navigation Model" is included, for each satellite, the UE shall:

1> use IE "Satellite Status" to determine if an update of IE "UE positioning GPS Ephemeris and Clock Correction parameters" has been provided for the satellite indicated by the IE "SatID";

1> if an update has been provided for this satellite:

2> act as specified in subclause 8.6.7.19.3.4.

If the IE "UE positioning GPS Ephemeris and Clock Correction parameters" is included, for each satellite, the UE shall:

1> update the variable UE_POSITIONING_GPS_DATA as follows:

2> store this IE at the position indicated by the IE "Sat ID" in the IE "UE positioning GPS Navigation Model" in the variable UE_POSITIONING_GPS_DATA, possibly overwriting any existing information in this position.

1> act on these GPS ephemeris and clock correction parameters in a manner similar to that specified in [12].

4) The UE shall when a measurement report is triggered:

2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or on the list of satellites included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning:

3> include IE "UE positioning Position Estimate Info" in the MEASUREMENT REPORT and set the contents of the IE as follows:

4> if the UE does not support the capability to perform the UE GPS timing of cell frames measurement; or

4> if the IE "GPS timing of Cell wanted" is set to FALSE:

5> include the IE "GPS TOW msec".

4> if IE "Vertical Accuracy" has been included in IE "UE positioning reporting quantity":

5> if the IE "Vertical Accuracy" has been assigned to a value unequal to "0":

6> if the UE has been able to calculate a 3-dimensional position:

7> include IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

6> if the UE has not been able to calculate a 3-dimensional position:

7> act as if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity".

4> if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity":

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to value "0":

6> may include IE "Ellipsoid point".

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to a value unequal to 0:

6> include either IE "Ellipsoid point with uncertainty circle" or IE "Ellipsoid point with uncertainty ellipse" or IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

5) The UE shall set the contents of the IE "UE positioning Error" as follows:

…

1> if the IE "Positioning Methods" in IE "UE positioning reporting quantity" has been assigned to value "GPS":

2> if there were not enough GPS satellites to be received:

3> set IE "Error reason" to "Not Enough GPS Satellites".

2> if some GPS assistance data was missing:

3> set IE "Error reason" to "Assistance Data Missing"; and

3> if the IE ""Additional Assistance Data Request" included in the IE "UE positioning reporting quantity" stored in the variable MEASUREMENT_IDENTITY is set to TRUE:

4> include the IE "GPS Additional Assistance Data Request".

6) If the network is unable to successfully fulfil the request received from the MS (e.g. to provide a location estimate or location assistance information), it shall clear the transaction by sending a RELEASE COMPLETE message containing a return error component. Error values are specified in 3GPP TS 24.080.

7) PositionMethodFailure: This error is returned by the network when the network is unable to obtain any of the location information requested or none of the information obtained satisfies the requested LCS QoS or if requested LCS assistance data could not be transferred or requested deciphering keys for broadcast assistance data could not be returned.

Reference(s):

- Conformance requirements 1 and 6: TS 24.030, subclause 5.1.1
- Conformance requirement 2: TS 25.331, subclause 8.4.1.3.
- Conformance requirement 3: TS 25.331, subclauses 8.6.7.19.3.3a, 8.6.7.19.3.4.
- Conformance requirement 4: TS 25.331, subclause 8.6.7.19.1b
- Conformance requirement 5: TS 25.331, subclause 8.6.7.19.5
- Conformance requirement 7: TS 24.080, subclause 4.3.2.29
- Reference [12] in these conformance requirements denotes document ICD-GPS-200: “Navstar GPS Space Segment/Navigation User Interface”.

#### 17.2.3.9.3 Test Purpose

To verify the UE behaviour at a mobile originated location request procedure using network-assisted UE-based GPS when the MO-LR procedure fails due to failure of positioning method.

#### 17.2.3.9.4 Method of Test

Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellite Simulator is switched off
- User Equipment:
  - The UE is in state "MM idle" with valid TMSI and CKSN.
  - The UE is in state “PMM idle” with valid P-TMSI
  - The UE shall begin the test with no GPS assistance data stored.

Related PICS/PIXIT Statements

- UE Based Network Assisted GPS
- Method of triggering an MO-LR request for a position estimate.
- Method of clearing stored GPS assistance data

Test Procedure

The stored GPS assistance data in the UE shall be cleared.

The UE invokes call independent supplementary service through a CM SERVICE REQUEST. The SS initiates authentication and ciphering.

Then the UE invokes an MO-LR request of type “locationEstimate”. The SS orders an A-GPS positioning measurement using two MEASUREMENT CONTROL messages, including assistance data.

The UE sends a MEASUREMENT REPORT message reporting a positioning error for not enough satellite signals received.

The SS sends a RELEASE COMPLETE message containing a return error component.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| **1** | **->** | | | **The UE establishes an RRC connection for location service. The SS verifies that the IE “Establishment cause” in the received RRC CONNECTION REQUEST message is set to “Originated High Priority Signalling”.** |
| **2** | **->** | | **CM SERVICE REQUEST** | **The CM service type IE indicates "call independent supplementary service”** |
| **3** | **<-** | | **AUTHENTICATION REQUEST** | |
| **4** | **->** | | **AUTHENTICATION RESPONSE** | |
| **5** | **SS** | | | **The SS starts ciphering and integrity protection.** |
| **6** | **->** | | **REGISTER** | **Call Independent SS containing Facility IE with a LCS MO-LR request of type “locationEstimate”.** |
| **7** | **<-** | | **MEASUREMENT CONTROL** | |
| **8** | **<-** | | **MEASUREMENT CONTROL** | |
| **9** | **->** | | **MEASUREMENT REPORT** | **Positioning error report “not enough GPS satellites”** |
| **10** | **SS** | | | **SS is unable to fulfil the MO-LR request** |
| **11** | **<-** | | **RELEASE COMPLETE** | **SS terminates the dialogue containing a return error component** |
| **12** | **SS** | | | **The SS releases the RRC connection and the test case ends.** |

Specific Message Contents

REGISTER (Step 6)

| **Information element** | **Value/remark** |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility<br><br><br>SS version indicator | <br>REGISTER (xx11 1011)<br>Invoke = LCS-MOLR<br>LCS-MOLRArg<br>molr-Type ->locationEstimate<br>Value 1 or above |

MEASUREMENT CONTROL (Step 7):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | |
| - No reporting | |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the first MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 8):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the second MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 9):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Not Enough GPS Satellites |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

RELEASE COMPLETE (Step 11)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | RELEASE COMPLETE (0010 1010) |
| Facility | Return error = LCS-MOLR<br>Error -> positionMethodFailure |

#### 17.2.3.9.5 Test requirements

After step 5 the UE shall transmit a REGISTER message with a LCS MO-LR request with the IE “MOLR-Type” set to “locationEstimate”.

After step 8, the UE shall respond with a MEASUREMENT REPORT message containing the IE “UE positioning error”, with “Error reason” set to “Not Enough GPS Satellites”.

## 17.2.4 Assisted GPS Mobile Terminated Tests

### 17.2.4.1 LCS Mobile terminated location request/ UE-Based GPS

#### 17.2.4.1.1 Definition

This test case applies to all UEs supporting UE-Based GPS Location Service capabilities.

#### 17.2.4.1.2 Conformance requirements

1) The network invokes a location notification procedure by sending a REGISTER message containing a LCS-LocationNotification invoke component to the UE. This may be sent either to request verification for MT-LR or to notify about already authorized MT-LR.

   In the case of location notification no response is required from the UE, the UE shall terminate the dialoque by sending a RELEASE COMPLETE message containing a LocationNotification return result.

2) if the IE "Measurement command" has the value "modify":

   2> for all IEs present in the MEASUREMENT CONTROL message:

      3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":

         4> if measurement type is set to "UE positioning measurement" and the IE "UE positioning GPS assistance data" is present, for any of the optional IEs "UE positioning GPS reference time", "UE positioning GPS reference UE position", "UE positioning GPS DGPS corrections", "UE positioning GPS ionospheric model", "UE positioning GPS UTC model", "UE positioning GPS acquisition assistance", "UE positioning GPS real-time integrity" that are present in the MEASUREMENT CONTROL message:

            5> replace all instances of the IEs listed above (and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IEs received in the MEASUREMENT CONTROL message;

            5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

3) If the IE "UE positioning GPS Navigation Model" is included, for each satellite, the UE shall:

   1> use IE "Satellite Status" to determine if an update of IE "UE positioning GPS Ephemeris and Clock Correction parameters" has been provided for the satellite indicated by the IE "SatID";

   1> if an update has been provided for this satellite:

      2> act as specified in subclause 8.6.7.19.3.4 of TS 25.331.

4) If the IE "UE positioning GPS Ephemeris and Clock Correction parameters" is included, for each satellite, the UE shall:

   1> update the variable UE_POSITIONING_GPS_DATA as follows:

      2> store this IE at the position indicated by the IE "Sat ID" in the IE "UE positioning GPS Navigation Model" in the variable UE_POSITIONING_GPS_DATA, possibly overwriting any existing information in this position.

   1> act on these GPS ephemeris and clock correction parameters in a manner similar to that specified in ICD-GPS-200.

5) If the IE "UE positioning GPS reference time" is included, the UE shall:

   1> store the IE "GPS Week" in "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as the current GPS week;

   1> store the IE "GPS TOW msec" in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as an estimate of the GPS Time-of-Week at the time of reception of the complete message containing the IE "GPS TOW msec";

   NOTE: The UE does not need to apply any compensation on the GPS Time-of-Week.

6) If the IE "UE positioning GPS reference UE position" is included, the UE shall:

   1> store this IE in the IE "UE positioning GPS reference UE position" in variable UE_POSITIONING_GPS_DATA; and

   1> use it as a priori knowledge of the approximate location of the UE.

7) The UE shall when a measurement report is triggered:

   2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or on the list of satellites included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning:

      3> include IE "UE positioning Position Estimate Info" in the MEASUREMENT REPORT and set the contents of the IE as follows:

         4> if the UE does not support the capability to perform the UE GPS timing of cell frames measurement; or

         4> if the IE "GPS timing of Cell wanted" is set to FALSE:

            5> include the IE "GPS TOW msec".

         4> if IE "Vertical Accuracy" has been included in IE "UE positioning reporting quantity":

            5> if the IE "Vertical Accuracy" has been assigned to a value unequal to "0":

               6> if the UE has been able to calculate a 3-dimensional position:

                  7> include IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

               6> if the UE has not been able to calculate a 3-dimensional position:

                  7> act as if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity".

         4> if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity":

            5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to value "0":

               6> may include IE "Ellipsoid point".

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to a value unequal to 0:

6> include either IE "Ellipsoid point with uncertainty circle" or IE "Ellipsoid point with uncertainty ellipse" or IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

References

- Conformance requirement 1: TS 24.030, clause 4.1.1.
- Conformance requirement 2: TS 25.331, clause 8.4.1.3.
- Conformance requirement 3: TS 25.331, clause 8.6.7.19.3.3a.
- Conformance requirement 4: TS 25.331, clause 8.6.7.19.3.4.
- Conformance requirement 5: TS 25.331, clause 8.6.7.19.3.7.
- Conformance requirement 6: TS 25.331, clause 8.6.7.19.3.8.
- Conformance requirement 7: TS 25.331, clause 8.6.7.19.1b.

#### 17.2.4.1.3 Test Purpose

To verify that when the UE receives a REGISTER message during an established CS call, containing a LCS Location Notification Invoke component set to NotifyLocationAllowed, the UE displays information about the LCS client correctly and sends a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionGranted.

To verify that the UE responds with a Measurement Report message containing UE location when the assistance data is divided between several Measurement Control messages using Measurement Command “Modify”.

#### 17.2.4.1.4 Method of Test

Initial Conditions

System Simulator (SS):

- 1 cell, default parameters
- Satellites: As specified in 17.2.1.2

UE:

- State “CS-CELL DCH Initial (State 6-1)” as specified in clause 7.4.1 of TS 34.108.

Related PICS/PIXIT Statements

- UE supporting CS domain services
- UE Based Network Assisted GPS
- UE supporting Mobile Terminated Location Request

Test Procedure

The SS initiates authentication and ciphering and sends an SS REGISTER message containing a Facility IE containing a DTAP LCS Location Notification Invoke message set to notifyLocationAllowed. The LCS Client Name contained in the USSD text string of the lcs-LocationNotification shall be displayed. The UE then responds with a RELEASE COMPLETE message containing a LocationNotification return to terminate the dialogue.

The SS orders an A-GPS positioning measurement using two MEASUREMENT CONTROL messages. The last MEASUREMENT CONTROL message orders periodical reporting.

The UE then initiates periodic measurement reporting and sends a MEASUREMENT REPORT message including a location estimate.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | AUTHENTICATION REQUEST | |
| 2 | -> | | AUTHENTICATION RESPONSE | |
| 3 | SS | | | SS starts security procedure |
| 4 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyLocationAllowed |
| 5 | UE | | | The UE displays information about LCS client |
| 6 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| 7 | <- | | MEASUREMENT CONTROL | |
| 8 | <- | | MEASUREMENT CONTROL | Periodical reporting is configured. |
| 9 | -> | | MEASUREMENT REPORT | |
| 10 | SS | | | SS releases the RRC connection and the test case ends |

Specific Message Contents

REGISTER (Step 4)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = lcs-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyLocationAllowed,<br>locationType -> current Location ,<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 6)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>RELEASE COMPLETE (xx10 1010)<br>Return result = lcs-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionGranted |

MEASUREMENT CONTROL (Step 7):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | |
| - No reporting | |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the first MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 8):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the second MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 9)

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | |
| - CHOICE *Reference time* | |
| - GPS reference time only | |
| - GPS TOW msec | Not checked |
| - CHOICE *Position estimate* | One of 'Ellipsoid point with uncertainty Circle' or 'Ellipsoid point with uncertainty Ellipse' or 'Ellipsoid point with altitude and uncertainty Ellipsoid' |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

17.2.4.1.5 Test requirements

After step 5 the UE shall send a RELEASE COMPLETE message.

After step 8 the UE shall respond with a MEASUREMENT REPORT message.

### 17.2.4.2 LCS Mobile-terminated location request/UE-Based GPS/ Request for additional assistance data/ Success

#### 17.2.4.2.1 Definition

This test case applies to all UEs supporting UE-Based GPS Location Service capabilities.

#### 17.2.4.2.2 Conformance requirements

1) if the IE “Measurement command” has the value “modify”:

   2> for all IEs present in the MEASUREMENT CONTROL message:

   - if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE “measurement identity”:

   - if measurement type is set to “UE positioning measurement” and the IE “UE positioning GPS assistance data” is present, for any of the optional IEs “UE positioning GPS reference time”, “UE positioning GPS reference UE position”, “UE positioning GPS DGPS corrections”, “UE positioning GPS ionospheric model”, “UE positioning GPS UTC model”, “UE positioning GPS acquisition assistance”, “UE positioning GPS real-time integrity” that are present in the MEASUREMENT CONTROL message:

   5> replace all instances of the IEs listed above (and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE “measurement identity” with the IEs received in the MEASUREMENT CONTROL message;

   5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

2) If the IE “UE positioning GPS Navigation Model” is included, for each satellite, the UE shall:

   1> use IE “Satellite Status” to determine if an update of IE “UE positioning GPS Ephemeris and Clock Correction parameters” has been provided for the satellite indicated by the IE “SatID”;

   1> if an update has been provided for this satellite:

   2> act as specified in subclause 8.6.7.19.3.4.

3) If the IE “UE positioning GPS Ephemeris and Clock Correction parameters” is included, for each satellite, the UE shall:

   1> update the variable UE_POSITIONING_GPS_DATA as follows:

   2> store this IE at the position indicated by the IE “Sat ID” in the IE “UE positioning GPS Navigation Model” in the variable UE_POSITIONING_GPS_DATA, possibly overwriting any existing information in this position.

   1> act on these GPS ephemeris and clock correction parameters in a manner similar to that specified in [12].

4) If the IE “UE positioning GPS reference time” is included, the UE shall:

   1> store the IE “GPS Week” in “UE positioning GPS reference time” in variable UE_POSITIONING_GPS_DATA and use it as the current GPS week;

   - store the IE “GPS TOW msec” in the IE “UE positioning GPS reference time” in variable UE_POSITIONING_GPS_DATA and use it as an estimate of the GPS Time-of-Week at the time of reception of the complete message containing the IE “GPS TOW msec”;

   NOTE: The UE does not need to apply any compensation on the GPS Time-of-Week.

   - if the IE “SFN” and IE “UTRAN GPS timing of cell frames” are included:

   - if the UE is able to utilise the IEs:

- store these IEs in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA;
- if the IE "Primary CPICH Info" for FDD or IE "cell parameters id" for TDD is not included:
  - if the UE is not in CELL_DCH state:
    - use IEs "SFN" and "UTRAN GPS timing of cell frames" to estimate the relationship between GPS time and air-interface timing of the NODE B transmission in the serving cell.
  - if the UE is in CELL_DCH state:
    - ignore IEs "SFN" and "UTRAN GPS timing of cell frames".
- if the IE "Primary CPICH Info" for FDD or IE "cell parameters id" for TDD is also included:
  - store this IE in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA;
  - use IEs "SFN" and "UTRAN GPS timing of cell frames" to estimate the relationship between GPS time and air-interface timing of the NODE B transmission in the cell indicated by "Primary CPICH info" or "cell parameters id".

- if the IE "SFN-TOW Uncertainty" is included:
  - store this IE in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it to determine if the relationship between GPS time and air-interface timing of the NODE B transmission is known to within at least 10ms.
- if the IE "$T_{UTRAN-GPS}$ drift rate" is included:
  - store this IE in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA; and
  - may use it as an estimate of the drift rate of the NODE B clock relative to GPS time.
- if the IE "GPS TOW Assist" is included:
  - for each satellite:

    3> delete all information currently stored in the IE "GPS TOW Assist" in the IE "UE positioning GPS reference time" in the variable UE_POSITIONING_GPS_DATA;

    3> store the received GPS TOW Assist information in the IE "UE positioning GPS reference time" in the variable UE_POSITIONING_GPS_DATA.

5) If the IE "UE positioning GPS reference UE position" is included, the UE shall:

   1> store this IE in the IE "UE positioning GPS reference UE position" in variable UE_POSITIONING_GPS_DATA; and

   1> use it as a priori knowledge of the approximate location of the UE.

6) If IE "UE positioning GPS ionospheric model" is included, the UE shall:

   1> store this IE in the IE "UE positioning GPS ionospheric model" in variable UE_POSITIONING_GPS_DATA;

   1> act on these GPS ionospheric model parameters in a manner similar to that specified in [12].

7) The UE shall when a measurement report is triggered:

   2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or on the list of satellites included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning:

- include IE “UE positioning Position Estimate Info” in the MEASUREMENT REPORT and set the contents of the IE as follows:
  - if the UE does not support the capability to perform the UE GPS timing of cell frames measurement; or
  - if the IE “GPS timing of Cell wanted” is set to FALSE:
    - include the IE “GPS TOW msec”.
  - if IE “Vertical Accuracy” has been included in IE “UE positioning reporting quantity”:
    - if the IE “Vertical Accuracy” has been assigned to a value unequal to “0”:
      - if the UE has been able to calculate a 3-dimensional position:
        - include IE “Ellipsoid point with altitude and uncertainty ellipsoid” as the position estimate.
      - if the UE has not been able to calculate a 3-dimensional position:
        - act as if IE “Vertical Accuracy” has not been included in IE “UE positioning reporting quantity”.
  - if IE “Vertical Accuracy” has not been included in IE “UE positioning reporting quantity”:
  - if IE “Horizontal Accuracy” in IE “UE positioning reporting quantity” has been assigned to a value unequal to 0:

    6> include either IE “Ellipsoid point with uncertainty circle” or IE “Ellipsoid point with uncertainty ellipse” or IE “Ellipsoid point with altitude and uncertainty ellipsoid” as the position estimate.

8) The UE shall set the contents of the IE "UE positioning Error" as follows:

…

1> if the IE "Positioning Methods" in IE "UE positioning reporting quantity" has been assigned to value "GPS":

2> if there were not enough GPS satellites to be received:

3> set IE "Error reason" to "Not Enough GPS Satellites".

2> if some GPS assistance data was missing:

3> set IE "Error reason" to "Assistance Data Missing"; and

3> if the IE ""Additional Assistance Data Request" included in the IE "UE positioning reporting quantity" stored in the variable MEASUREMENT_IDENTITY is set to TRUE:

4> include the IE "GPS Additional Assistance Data Request".

Reference(s):

- Conformance requirement 1: TS 25.331, subclause 8.4.1.3.
- Conformance requirement 2: TS 25.331, subclauses 8.6.7.19.3.3a, 8.6.7.19.3.4.
- Conformance requirement 3: TS 25.331, clause 8.6.7.19.1b.
- Conformance requirement 4: TS 25.331, clause 8.6.7.19.3.7.
- Conformance requirement 5: TS 25.331, clause 8.6.7.19.3.8.
- Conformance requirement 6: TS 25.331, clause 8.6.7.19.3.5.
- Conformance requirement 7: TS 25.331, clause 8.6.7.19.1b.
- Conformance requirement 8: TS 25.331, clause 8.6.7.19.5.

- Reference [12] in these conformance requirements denotes document ICD-GPS-200: “Navstar GPS Space Segment/Navigation User Interface”.

#### 17.2.4.2.3 Test Purpose

To verify the UE’s behavior in a mobile-terminated location request procedure using UE-based A-GPS with assistance data from the network.

To verify that the UE in CELL_DCH state accepts assistance data received in multiple MEASUREMENT CONTROL messages.

To verify that the UE includes the IE “GPS Additional Assistance Data Request” to request assistance data when it does not have enough assistance data to compute a position.

#### 17.2.4.2.4 Method of Test

##### Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellites: As specified in 17.2.1.2
- User Equipment:
  - The UE shall begin the test with no GPS assistance data stored.
  - State "CS-CELL DCH Initial (State 6-1)" as specified in clause 7.4.1 of TS 34.108.

##### Related PICS/PIXIT Statements

- UE Based Network Assisted GPS
- Method of clearing stored GPS assistance data
- UE supporting Mobile Terminated Location Request

##### Test Procedure

The stored GPS assistance data in the UE shall be cleared.

The SS initiates authentication and ciphering and sends an SS REGISTER message containing a Facility IE containing a DTAP LCS Location Notification Invoke message set to notifyLocationAllowed. The LCS Client Name contained in the USSD text string of the lcs-LocationNotification shall be displayed. The UE then responds with a RELEASE COMPLETE message containing a LocationNotification return to terminate the dialogue.

The SS orders an A-GPS positioning measurement using MEASUREMENT CONTROL including no assistance data.

The UE sends a MEASUREMENT REPORT message to report a positioning error, requesting further assistance data. The SS response with one or more MEASUREMENT CONTROL messages that include the requested assistance data and instructs the UE not to repeat the request for assistance data. The final MEASUREMENT CONTROL message orders periodic reporting.

The UE performs positioning measurements and responds with a MEASUREMENT REPORT message containing a valid position estimate in the IE “UE Positioning Position Estimate Info”.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <- | | AUTHENTICATION REQUEST | |
| 2 | -> | | AUTHENTICATION RESPONSE | |
| 3 | SS | | | SS starts security procedure |
| 4 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyLocationAllowed |
| 5 | UE | | | The UE displays information about LCS client |
| 6 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| 7 | <-- | | MEASUREMENT CONTROL | No assistance data, and “Additional Assistance Data Request” IE set to TRUE. |
| 8 | --> | | MEASUREMENT REPORT | Positioning error report with request for further assistance data. |
| 9 | <-- | | MEASUREMENT CONTROL | The SS provides the requested data in one or more MEASUREMENT CONTROL messages as specified in section 17.2.1.3.5. The final MEASUREMENT CONTROL message contains: Reporting mode: Periodical reporting Amount of reporting: 1 Reporting interval: 64000 |
| 10 | --> | | MEASUREMENT REPORT | Measurement report message containing UE position estimate. |
| 11 | SS | | | SS releases the RRC connection and the test case ends |

Specific Message Contents

REGISTER (Step 4)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | REGISTER (0011 1011)<br>Invoke = lcs-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyLocationAllowed,<br>locationType -> current Location ,<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 6)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | RELEASE COMPLETE (xx10 1010)<br>Return result = lcs-LocationNotification<br><br>LocationNotificationRes<br>verificationResponse -> permissionGranted |

MEASUREMENT CONTROL (Step 7):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Measurement Reporting Mode | Not present |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | TRUE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for “Inadequate assistance data for UE-based A-GPS” in 17.2.1.3.2 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 8):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Assistance Data Missing |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT CONTROL (Step 9):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Set as required according to position in sequence of messages |
| - Amount of reporting | Set as required according to position in sequence of messages |
| - Reporting interval | Set as required according to position in sequence of messages |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified in 17.2.1.3.5 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 10):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | |
| - CHOICE *Reference time* | |
| - GPS reference time only | |
| - GPS TOW msec | Not checked |
| - CHOICE *Position estimate* | One of 'Ellipsoid point with uncertainty Circle' or 'Ellipsoid point with uncertainty Ellipse' or 'Ellipsoid point with altitude and uncertainty Ellipsoid' |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

17.2.4.2.5 Test Requirements

At step 7 the UE shall send a MEASUREMENT REPORT message containing the IE "UE positioning error", with "Error reason" set to "Assistance Data Missing".

At step 9 the UE shall send a MEASUREMENT REPORT message containing a valid UE position estimate.

### 17.2.4.3 LCS Mobile-terminated location request/UE-Based GPS/ Failure – Not Enough Satellites

#### 17.2.4.3.1 Definition

This test case applies to all UEs supporting UE-Based GPS Location Service capabilities.

#### 17.2.4.3.2 Conformance requirements

7) if the IE “Measurement command” has the value “modify”:

2> for all IEs present in the MEASUREMENT CONTROL message:

- if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE “measurement identity”:

- if measurement type is set to “UE positioning measurement” and the IE “UE positioning GPS assistance data” is present, for any of the optional IEs “UE positioning GPS reference time”, “UE positioning GPS reference UE position”, “UE positioning GPS DGPS corrections”, “UE positioning GPS ionospheric model”, “UE positioning GPS UTC model”, “UE positioning GPS acquisition assistance”, “UE positioning GPS real-time integrity” that are present in the MEASUREMENT CONTROL message:

5> replace all instances of the IEs listed above (and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE “measurement identity” with the IEs received in the MEASUREMENT CONTROL message;

5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

8) If the IE “UE positioning GPS Navigation Model” is included, for each satellite, the UE shall:

1> use IE “Satellite Status” to determine if an update of IE “UE positioning GPS Ephemeris and Clock Correction parameters” has been provided for the satellite indicated by the IE “SatID”;

1> if an update has been provided for this satellite:

2> act as specified in subclause 8.6.7.19.3.4.

9) If the IE “UE positioning GPS Ephemeris and Clock Correction parameters” is included, for each satellite, the UE shall:

1> update the variable UE_POSITIONING_GPS_DATA as follows:

2> store this IE at the position indicated by the IE “Sat ID” in the IE “UE positioning GPS Navigation Model” in the variable UE_POSITIONING_GPS_DATA, possibly overwriting any existing information in this position.

1> act on these GPS ephemeris and clock correction parameters in a manner similar to that specified in [12].

10) If the IE “UE positioning GPS reference time” is included, the UE shall:

1> store the IE “GPS Week” in “UE positioning GPS reference time” in variable UE_POSITIONING_GPS_DATA and use it as the current GPS week;

- store the IE “GPS TOW msec” in the IE “UE positioning GPS reference time” in variable UE_POSITIONING_GPS_DATA and use it as an estimate of the GPS Time-of-Week at the time of reception of the complete message containing the IE “GPS TOW msec”;

NOTE: The UE does not need to apply any compensation on the GPS Time-of-Week.

- if the IE “SFN” and IE “UTRAN GPS timing of cell frames” are included:

- if the UE is able to utilise the IEs:

- store these IEs in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA;
- if the IE "Primary CPICH Info" for FDD or IE "cell parameters id" for TDD is not included:
  - if the UE is not in CELL_DCH state:
    - use IEs "SFN" and "UTRAN GPS timing of cell frames" to estimate the relationship between GPS time and air-interface timing of the NODE B transmission in the serving cell.
  - if the UE is in CELL_DCH state:
    - ignore IEs "SFN" and "UTRAN GPS timing of cell frames".
- if the IE "Primary CPICH Info" for FDD or IE "cell parameters id" for TDD is also included:
  - store this IE in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA;
  - use IEs "SFN" and "UTRAN GPS timing of cell frames" to estimate the relationship between GPS time and air-interface timing of the NODE B transmission in the cell indicated by "Primary CPICH info" or "cell parameters id".

- if the IE "SFN-TOW Uncertainty" is included:
  - store this IE in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it to determine if the relationship between GPS time and air-interface timing of the NODE B transmission is known to within at least 10ms.
- if the IE "$T_{UTRAN-GPS}$ drift rate" is included:
  - store this IE in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA; and
  - may use it as an estimate of the drift rate of the NODE B clock relative to GPS time.
- if the IE "GPS TOW Assist" is included:
  - for each satellite:

    3> delete all information currently stored in the IE "GPS TOW Assist" in the IE "UE positioning GPS reference time" in the variable UE_POSITIONING_GPS_DATA;

    3> store the received GPS TOW Assist information in the IE "UE positioning GPS reference time" in the variable UE_POSITIONING_GPS_DATA.

11) If the IE "UE positioning GPS reference UE position" is included, the UE shall:

1> store this IE in the IE "UE positioning GPS reference UE position" in variable UE_POSITIONING_GPS_DATA; and

1> use it as a priori knowledge of the approximate location of the UE.

12) If IE "UE positioning GPS ionospheric model" is included, the UE shall:

1> store this IE in the IE "UE positioning GPS ionospheric model" in variable UE_POSITIONING_GPS_DATA;

1> act on these GPS ionospheric model parameters in a manner similar to that specified in [12].

7) The UE shall when a measurement report is triggered:

2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or on the list of satellites included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning:

- include IE “UE positioning Position Estimate Info” in the MEASUREMENT REPORT and set the contents of the IE as follows:
  - if the UE does not support the capability to perform the UE GPS timing of cell frames measurement; or
  - if the IE “GPS timing of Cell wanted” is set to FALSE:
    - include the IE “GPS TOW msec”.
  - if IE “Vertical Accuracy” has been included in IE “UE positioning reporting quantity”:
    - if the IE “Vertical Accuracy” has been assigned to a value unequal to “0”:
      - if the UE has been able to calculate a 3-dimensional position:
        - include IE “Ellipsoid point with altitude and uncertainty ellipsoid” as the position estimate.
      - if the UE has not been able to calculate a 3-dimensional position:
        - act as if IE “Vertical Accuracy” has not been included in IE “UE positioning reporting quantity”.
  - if IE “Vertical Accuracy” has not been included in IE “UE positioning reporting quantity”:
  - if IE “Horizontal Accuracy” in IE “UE positioning reporting quantity” has been assigned to a value unequal to 0:

        7> include either IE “Ellipsoid point with uncertainty circle” or IE “Ellipsoid point with uncertainty ellipse” or IE “Ellipsoid point with altitude and uncertainty ellipsoid” as the position estimate.

8) The UE shall set the contents of the IE "UE positioning Error" as follows:

…

1> if the IE "Positioning Methods" in IE "UE positioning reporting quantity" has been assigned to value "GPS":

2> if there were not enough GPS satellites to be received:

3> set IE "Error reason" to "Not Enough GPS Satellites".

2> if some GPS assistance data was missing:

3> set IE "Error reason" to "Assistance Data Missing"; and

3> if the IE ""Additional Assistance Data Request" included in the IE "UE positioning reporting quantity" stored in the variable MEASUREMENT_IDENTITY is set to TRUE:

4> include the IE "GPS Additional Assistance Data Request".

Reference(s):

- Conformance requirement 1: TS 25.331, subclause 8.4.1.3.
- Conformance requirement 2: TS 25.331, subclauses 8.6.7.19.3.3a, 8.6.7.19.3.4.
- Conformance requirement 3: TS 25.331, clause 8.6.7.19.1b.
- Conformance requirement 4: TS 25.331, clause 8.6.7.19.3.7.
- Conformance requirement 5: TS 25.331, clause 8.6.7.19.3.8.
- Conformance requirement 6: TS 25.331, clause 8.6.7.19.3.5.
- Conformance requirement 7: TS 25.331, clause 8.6.7.19.1b.
- Conformance requirement 8: TS 25.331, clause 8.6.7.19.5.

- Reference [12] in these conformance requirements denotes document ICD-GPS-200: “Navstar GPS Space Segment/Navigation User Interface”.

#### 17.2.4.3.3 Test Purpose

To verify the UE’s behavior in a mobile-terminated location request procedure using UE-based A-GPS with assistance data from the network.

To verify that the UE in CELL_DCH state accepts assistance data received in multiple MEASUREMENT CONTROL messages.

To verify that the UE sets the IE Error Reason in ‘UE Postioning Error’ to ‘Not Enough GPS Satellites’ when it does not receive enough satellite signals to compute a position.

#### 17.2.4.3.4 Method of Test

##### Initial Conditions

- System Simulator:
  - 1 cell, default parameters.
  - Satellite Simulator is switched off.
- User Equipment:
  - State "CS-CELL DCH Initial (State 6-1)" as specified in clause 7.4.1 of TS 34.108.
  - The UE shall begin the test with no GPS assistance data stored.

##### Related PICS/PIXIT Statements

- UE Based Network Assisted GPS
- Method of clearing stored GPS assistance data
- UE supporting Mobile Terminated Location Request

##### Test Procedure

The stored GPS assistance data in the UE shall be cleared.

The SS initiates authentication and ciphering and sends an SS REGISTER message containing a Facility IE containing a DTAP LCS Location Notification Invoke message set to notifyLocationAllowed. The LCS Client Name contained in the USSD text string of the lcs-LocationNotification shall be displayed. The UE then responds with a RELEASE COMPLETE message containing a LocationNotification return to terminate the dialogue.

The SS orders an A-GPS positioning measurement using two MEASUREMENT CONTROL messages. The last MEASUREMENT CONTROL message orders periodical reporting.

The UE sends a MEASUREMENT REPORT message reporting a positioning error for not enough satellite signal.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | AUTHENTICATION REQUEST | |
| 2 | --> | | AUTHENTICATION RESPONSE | |
| 3 | SS | | | SS starts security procedure |
| 4 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyLocationAllowed |
| 5 | UE | | | The UE displays information about LCS client |
| 6 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| 7<br>8<br>9 | <--<br><--<br--> | | MEASUREMENT CONTROL<br>MEASUREMENT CONTROL<br>MEASUREMENT REPORT | <br>Periodical reporting is configured<br>Positioning error report 'not enough GPS satellites' |
| 10 | SS | | | SS releases the RRC connection and the test case ends |

Specific Message Contents

REGISTER (Step 4)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = lcs-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyLocationAllowed,<br>locationType -> current Location ,<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 6)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>RELEASE COMPLETE (xx10 1010)<br>Return result = lcs-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionGranted |

MEASUREMENT CONTROL (Step 7):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | |
| - No reporting | |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the first MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 8):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the second MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 9):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Not Enough GPS Satellites |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

#### 17.2.4.3.5 Test Requirements

At step 8 the UE shall send a MEASUREMENT REPORT message containing the IE “UE positioning error”, with “Error reason” set to “Not Enough GPS Satellites”.

### 17.2.4.4 LCS Mobile terminated location request/ UE-Assisted GPS/ Success

#### 17.2.4.4.1 Definition

This test case applies to all UEs supporting UE-Assisted GPS Location Service capabilities.

#### 17.2.4.4.2 Conformance requirements

1) The network invokes a location notification procedure by sending a REGISTER message containing a LCS-LocationNotification invoke component to the UE. This may be sent either to request verification for MT-LR or to notify about already authorized MT-LR.

   In the case of location notification no response is required from the UE, the UE shall terminate the dialoque by sending a RELEASE COMPLETE message containing a LocationNotification return result.

2) if the IE "Measurement command" has the value "setup":

   2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

   …

   2> for any other measurement type:

      3> if the measurement is valid in the current RRC state of the UE:

         4> begin measurements according to the stored control information for this measurement identity.

3) The UE shall:

   1> when a measurement report is triggered:

   2> if the UE was able to perform measurements on at least one neighbour cell included in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED in case of OTDOA or one satellite included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning or one cell from the active set in case of CELL ID:

      3> if the IE "Vertical Accuracy" is included:

         4> interpret the presence of this IE to indicate that the UTRAN desires to compute a 3-dimensional position estimate.

      3> if the IE "Positioning Methods" is set to "GPS":

         4> include the IE "UE positioning GPS measured results" in the measurement report and set the contents of the IE as follows:

            5> if the UE supports the capability to provide the GPS timing of the cell frames measurement:

               6> if the IE "GPS timing of Cell wanted" is set to TRUE:

                  7> perform the UE GPS timing of cell frames measurement on the serving cell or on one cell of the active set.

                  7> include the IE "Primary CPICH Info" for FDD or the IE "cell parameters id" for TDD; and

                  7> include the IE "Reference SFN" and the IE "UE GPS timing of cell frames".

               6> if the IE "GPS timing of Cell wanted" is set to FALSE:

                  7> include the IE "GPS TOW msec".

            5> if the UE does not support the capability to provide the GPS timing of the cell:

6> include the IE "GPS TOW msec".

References

- Conformance requirement 1: TS 24.030, subclause 5.1.1
- Conformance requirement 2: TS 25.331, clause 8.4.1.3.
- Conformance requirement 3: TS 25.331, clause 8.6.7.19.1a.

#### 17.2.4.4.3 Test Purpose

To verify the UE behaviour in the mobile-terminated location request procedure using network-assisted UE-assisted GPS to deliver UE positioning measurements to the network.

#### 17.2.4.4.4 Method of Test

Initial Conditions

System Simulator (SS):

- 1 cell, default parameters
- Satellites: As specified in 17.2.1.2

UE:

- State “CS-CELL DCH Initial (State 6-1)” as specified in clause 7.4.1 of TS 34.108.

Related PICS/PIXIT Statements

- UE supporting CS domain services
- UE Assisted Network Assisted GPS
- UE supporting Mobile Terminated Location Request

Test Procedure

The SS initiates authentication and ciphering and sends an SS REGISTER message containing a Facility IE containing a DTAP LCS Location Notification Invoke message set to notifyLocationAllowed. The LCS Client Name contained in the USSD text string of the lcs-LocationNotification shall be displayed. The UE then responds with a RELEASE COMPLETE message containing a LocationNotification return to terminate the dialogue.

The SS orders an A-GPS positioning measurement using a MEASUREMENT CONTROL message. The assistance data is as described in section 17.2.1.3.3 (Adequate assistance data for UE-assisted A-GPS). The MEASUREMENT CONTROL message orders periodical reporting.

The UE may request additional assistance data by sending a MEASUREMENT REPORT message containing a positioning error indication with the IE “Error reason” set to “Assistance Data Missing”. If the UE requests additional assistance data, the SS provides the requested assistance data in one or more MEASUREMENT CONTROL messages.

The UE then initiates periodic measurement reporting and sends a MEASUREMENT REPORT message including the IE “UE positioning GPS measured results”.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | AUTHENTICATION REQUEST | |
| 2 | --> | | AUTHENTICATION RESPONSE | |
| 3 | SS | | | SS starts security procedure |
| 4 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyLocationAllowed |
| 5 | UE | | | The UE displays information about LCS client |
| 6 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| 7 | <- | | MEASUREMENT CONTROL | Periodical reporting is configured. |
| 8 | -> | | MEASUREMENT REPORT | UE reports positioning measurement results (Option 1) or requests additional assistance data (Option 2). |
| 8a | <- | | MEASUREMENT CONTROL | If UE requested additional assistance data in step 8, SS provides the requested data in one or more MEASUREMENT CONTROL messages as specified in section 17.2.1.3.5. |
| 8b | -> | | MEASUREMENT REPORT | If UE requested additional assistance data in step 8, this message contains the IE “UE positioning GPS measured results”. |
| 9 | SS | | | SS releases the RRC connection and the test case ends |

Specific Message Contents

REGISTER (Step 4)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = lcs-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyLocationAllowed,<br>locationType -> current Location ,<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 6)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>RELEASE COMPLETE (xx10 1010)<br>Return result = lcs-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionGranted |

MEASUREMENT CONTROL (Step 7):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | TRUE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for “Adequate assistance data for UE-assisted A-GPS” in 17.2.1.3.3 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 8 (Option 1) or 8b (Option 2))

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT REPORT (Step 8 (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Assistance Data Missing |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT CONTROL (Step 8a (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - Vertical accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified in 17.2.1.3.5 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

17.2.4.4.5 Test requirements

After step 5 the UE shall send a RELEASE COMPLETE message.

After step 7 the UE shall respond with a MEASUREMENT REPORT message containing the IE “UE positioning GPS measured results”.

### 17.2.4.5 LCS Mobile terminated location request/ UE-Assisted GPS/ Request for additional assistance data/ Success

#### 17.2.4.5.1 Definition

This test case applies to all UEs supporting UE-Assisted GPS Location Service capabilities.

#### 17.2.4.5.2 Conformance requirements

1) The network invokes a location notification procedure by sending a REGISTER message containing a LCS-LocationNotification invoke component to the UE. This may be sent either to request verification for MT-LR or to notify about already authorized MT-LR.

   In the case of location notification no response is required from the UE, the UE shall terminate the dialoque by sending a RELEASE COMPLETE message containing a LocationNotification return result.

2) if the IE "Measurement command" has the value "modify":

   2> for all IEs present in the MEASUREMENT CONTROL message:

      3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":

         4> if measurement type is set to "UE positioning measurement" and the IE "UE positioning GPS assistance data" is present, for any of the optional IEs "UE positioning GPS reference time", "UE positioning GPS reference UE position", "UE positioning GPS DGPS corrections", "UE positioning GPS ionospheric model", "UE positioning GPS UTC model", "UE positioning GPS acquisition assistance", "UE positioning GPS real-time integrity" that are present in the MEASUREMENT CONTROL message:

            5> replace all instances of the IEs listed above (and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IEs received in the MEASUREMENT CONTROL message;

            5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

3) The UE shall:

   1> when a measurement report is triggered:

      2> if the UE was able to perform measurements on at least one neighbour cell included in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED in case of OTDOA or one satellite included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning or one cell from the active set in case of CELL ID:

         3> if the IE "Vertical Accuracy" is included:

            4> interpret the presence of this IE to indicate that the UTRAN desires to compute a 3-dimensional position estimate.

         3> if the IE "Positioning Methods" is set to "GPS":

            4> include the IE "UE positioning GPS measured results" in the measurement report and set the contents of the IE as follows:

               5> if the UE supports the capability to provide the GPS timing of the cell frames measurement:

                  6> if the IE "GPS timing of Cell wanted" is set to TRUE:

                     7> perform the UE GPS timing of cell frames measurement on the serving cell or on one cell of the active set.

7> include the IE "Primary CPICH Info" for FDD or the IE "cell parameters id" for TDD; and

7> include the IE "Reference SFN" and the IE "UE GPS timing of cell frames".

6> if the IE "GPS timing of Cell wanted" is set to FALSE:

7> include the IE "GPS TOW msec".

5> if the UE does not support the capability to provide the GPS timing of the cell:

6> include the IE "GPS TOW msec".

4) 1> if the UE is not able to report the requested measurement results:

2> include IE "UE positioning error" in the MEASUREMENT REPORT and set the contents of this IE as specified in subclause 8.6.7.19.5.

5) if the IE "Positioning Methods" in IE "UE positioning reporting quantity" has been assigned to value "GPS":

2> if there were not enough GPS satellites to be received:

3> set IE "Error reason" to "Not Enough GPS Satellites".

2> if some GPS assistance data was missing:

3> set IE "Error reason" to "Assistance Data Missing"; and

3> if the IE "Additional Assistance Data Request" included in the IE "UE positioning reporting quantity" stored in the variable MEASUREMENT_IDENTITY is set to FALSE:

4> not include the IE "GPS Additional Assistance Data Request", and use the assistance data available for doing a positioning estimate.

References

- Conformance requirement 1: TS 24.030, subclause 5.1.1
- Conformance requirement 2: TS 25.331, clause 8.4.1.3.
- Conformance requirements 3 and 4: TS 25.331, clause 8.6.7.19.1a.
- Conformance requirement 5: TS 25.331, clause 8.6.7.19.5.

### 17.2.4.5.3 Test Purpose

To verify the UE behaviour in the mobile-terminated location request procedure using network-assisted UE-assisted GPS to deliver UE positioning measurements to the network.

To verify that the UE includes the IE “GPS Additional Assistance Data Request” to request additional assistance data when it does not have enough assistance data to perform the requested measurements.

### 17.2.4.5.4 Method of Test

Initial Conditions

System Simulator (SS):

- 1 cell, default parameters
- Satellites: As specified in 17.2.1.2

UE:

- The UE shall begin the test with no GPS assistance data stored.
- State“CS-CELL DCH Initial (State 6-1)” as specified in clause 7.4.1 of TS 34.108.

Related PICS/PIXIT Statements

- UE supporting CS domain services
- UE Assisted Network Assisted GPS
- Method of clearing stored GPS assistance data
- UE supporting Mobile Terminated Location Request

Test Procedure

The stored GPS assistance data in the UE shall be cleared.

The SS initiates authentication and ciphering and sends an SS REGISTER message containing a Facility IE containing a DTAP LCS Location Notification Invoke message set to notifyLocationAllowed. The LCS Client Name contained in the USSD text string of the lcs-LocationNotification shall be displayed. The UE then responds with a RELEASE COMPLETE message containing a LocationNotification return to terminate the dialogue.

The SS orders an A-GPS positioning measurement using a MEASUREMENT CONTROL message. The assistance data is as described in section 17.2.1.3.2 (Inadequate assistance data for UE-assisted A-GPS). The MEASUREMENT CONTROL message orders periodical reporting.

The UE then initiates periodic measurement reporting and sends a MEASUREMENT REPORT message including a request for additional assistance data. The SS responds with one or more MEASUREMENT CONTROL messages containing assistance data as specified in section 17.2.1.3.5 (Response to additional assistance data requests from UE). The UE sends a MEASUREMENT REPORT message including the IE “UE positioning GPS measured results”.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | AUTHENTICATION REQUEST | |
| 2 | --> | | AUTHENTICATION RESPONSE | |
| 3 | SS | | | SS starts security procedure |
| 4 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyLocationAllowed |
| 5 | UE | | | The UE displays information about LCS client |
| 6 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| 7 | <- | | MEASUREMENT CONTROL | Periodical reporting is configured. Assistance data set as specified in section 17.2.1.3.2 (Inadequate assistance data for UE-assisted A-GPS). |
| 8 | -> | | MEASUREMENT REPORT | UE requests additional assistance data. |
| 9 | <- | | MEASUREMENT CONTROL | The SS provides the requested data in one or more MEASUREMENT CONTROL messages as defined in section 17.2.1.3.5 |
| 10 | -> | | MEASUREMENT REPORT | UE sends the IE “UE positioning GPS measured results”. |
| 11 | SS | | | SS releases the RRC connection and the test case ends |

Specific Message Contents

REGISTER (Step 4)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = lcs-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyLocationAllowed,<br>locationType -> current Location ,<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 6)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>RELEASE COMPLETE (xx10 1010)<br>Return result = lcs-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionGranted |

MEASUREMENT CONTROL (Step 7):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | TRUE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for “Inadequate assistance data for UE-assisted A-GPS” in 17.2.1.3.2 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 8):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Assistance Data Missing |
| - GPS additional assistance data request | |
| - Almanac | Present, if requested by UE |
| - UTC model | Present, if requested by UE |
| - Ionospheric model | Present, if requested by UE |
| - Navigation model | Present, if requested by UE |
| - DGPS corrections | Present, if requested by UE |
| - Reference location | Present, if requested by UE |
| - Reference time | Present, if requested by UE |
| - Acquisition assistance | Present, if requested by UE |
| - Real-time integrity | Present, if requested by UE |
| - Navigation model additional data | Present, if requested by UE |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT CONTROL (Step 9):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified in 17.2.1.3.5 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 10)

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

#### 17.2.4.5.5 Test requirements

After step 5 the UE shall send a RELEASE COMPLETE message.

After step 7 the UE shall respond with a MEASUREMENT REPORT message containing the IE “UE positioning error”, with “Error reason” set to “Assistance data missing”.

After step 9 the UE shall send a MEASUREMENT REPORT message containing the IE “UE positioning GPS measured results”.

### 17.2.4.6 LCS Mobile terminated location request/ UE-Based GPS/ Privacy Verification/ Location Allowed if No Response

#### 17.2.4.6.1 Definition

This test case applies to all UEs supporting UE-Based GPS Location Service capabilities.

#### 17.2.4.6.2 Conformance requirements

1) The network invokes a location notification procedure by sending a REGISTER message containing a LCS-LocationNotification invoke component to the UE. This may be sent either to request verification for MT-LR or to notify about already authorized MT-LR.

2) In case of privacy verification the MS shall respond to the request by sending a RELEASE COMPLETE message containing the mobile subscriber's response in a return result component.

3) If the timer expires in the network before any response from the MS (e.g. due to no response from the user), the network shall interpret this by applying the default treatment defined in GSM 03.71 for GSM and TS 23.171 for UMTS (i.e. disallow location if barred by subscription and allow location if allowed by subscription).

4) if the IE "Measurement command" has the value "setup":

   2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

   …

   2> for any other measurement type:

      3> if the measurement is valid in the current RRC state of the UE:

         4> begin measurements according to the stored control information for this measurement identity.

5) if the IE "Measurement command" has the value "modify":

   2> for all IEs present in the MEASUREMENT CONTROL message:

      3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":

         4> if measurement type is set to "UE positioning measurement" and the IE "UE positioning GPS assistance data" is present, for any of the optional IEs "UE positioning GPS reference time", "UE positioning GPS reference UE position", "UE positioning GPS DGPS corrections", "UE positioning GPS ionospheric model", "UE positioning GPS UTC model", "UE positioning GPS acquisition assistance", "UE positioning GPS real-time integrity" that are present in the MEASUREMENT CONTROL message:

            5> replace all instances of the IEs listed above (and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IEs received in the MEASUREMENT CONTROL message;

            5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

6) If the IE "UE positioning GPS Navigation Model" is included, for each satellite, the UE shall:

   1> use IE "Satellite Status" to determine if an update of IE "UE positioning GPS Ephemeris and Clock Correction parameters" has been provided for the satellite indicated by the IE "SatID";

   1> if an update has been provided for this satellite:

      2> act as specified in subclause 8.6.7.19.3.4 of TS 25.331.

7) If the IE "UE positioning GPS Ephemeris and Clock Correction parameters" is included, for each satellite, the UE shall:

   1> update the variable UE_POSITIONING_GPS_DATA as follows:

      2> store this IE at the position indicated by the IE "Sat ID" in the IE "UE positioning GPS Navigation Model" in the variable UE_POSITIONING_GPS_DATA, possibly overwriting any existing information in this position.

   1> act on these GPS ephemeris and clock correction parameters in a manner similar to that specified in ICD-GPS-200.

8) If the IE "UE positioning GPS reference time" is included, the UE shall:

   1> store the IE "GPS Week" in "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as the current GPS week;

   1> store the IE "GPS TOW msec" in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as an estimate of the GPS Time-of-Week at the time of reception of the complete message containing the IE "GPS TOW msec";

   NOTE: The UE does not need to apply any compensation on the GPS Time-of-Week.

9) If the IE "UE positioning GPS reference UE position" is included, the UE shall:

   1> store this IE in the IE "UE positioning GPS reference UE position" in variable UE_POSITIONING_GPS_DATA; and

   1> use it as a priori knowledge of the approximate location of the UE.

10) The UE shall when a measurement report is triggered:

   2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or on the list of satellites included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning:

3> include IE "UE positioning Position Estimate Info" in the MEASUREMENT REPORT and set the contents of the IE as follows:

4> if the UE does not support the capability to perform the UE GPS timing of cell frames measurement; or

4> if the IE "GPS timing of Cell wanted" is set to FALSE:

5> include the IE "GPS TOW msec".

4> if IE "Vertical Accuracy" has been included in IE "UE positioning reporting quantity":

5> if the IE "Vertical Accuracy" has been assigned to a value unequal to "0":

6> if the UE has been able to calculate a 3-dimensional position:

7> include IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

6> if the UE has not been able to calculate a 3-dimensional position:

7> act as if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity".

4> if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity":

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to value "0":

6> may include IE "Ellipsoid point".

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to a value unequal to 0:

6> include either IE "Ellipsoid point with uncertainty circle" or IE "Ellipsoid point with uncertainty ellipse" or IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

References

- Conformance requirement 1, 2 and 3: TS 24.030, clause 4.1.1.

-- Conformance requirements 4 and 5: TS 25.331, subclause 8.4.1.3

- Conformance requirement 6: TS 25.331, clause 8.6.7.19.3.3a.

- Conformance requirement 7: TS 25.331, clause 8.6.7.19.3.4.

- Conformance requirement 8: TS 25.331, clause 8.6.7.19.3.7.

- Conformance requirement 9: TS 25.331, clause 8.6.7.19.3.8.

- Conformance requirement 10: TS 25.331, clause 8.6.7.19.1b.

### 17.2.4.6.3 Test Purpose

To verify that when the UE receives a REGISTER message, containing a LCS Location Notification Invoke component set to notifyAndVerify-LocationAllowedIfNoResponse, the UE notifies the user of the request and indicates that the default response is location allowed if no response and providing the opportunity to accept or deny the request and sends a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionDenied or permissionGranted as appropriate.

### 17.2.4.6.4 Method of Test

Initial Conditions

System Simulator (SS):

- 1 cell, default parameters
- Satellites: As specified in 17.2.1.2

UE:

- State “CS-CELL DCH Initial (State 6-1)” as specified in clause 7.4.1 of TS 34.108.

### Related PICS/PIXIT Statements

- UE Based Network Assisted GPS
- px_UeLcsNotification: value for UE LCS Notification timeout timer
- UE supporting Mobile Terminated Location Request

### Test Procedure

The SS initiates authentication and ciphering and sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse.

The LCS Client Name contained in the USSD text string of the lcs-LocationNotification should be displayed with the option to accept or deny the request and an indication that location will be allowed if no user response is received.

The user accepts the location request. The UE responds with a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionGranted.

The SS orders an A-GPS positioning measurement using MEASUREMENT CONTROL messages.

The UE sends a MEASUREMENT REPORT message including a location estimate.

The SS sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse.

The user denies the location request. The UE responds with a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionDenied.

The SS sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse.

The user ignores the location request by taking no action.

The SS orders an A-GPS positioning measurement using MEASUREMENT CONTROL messages.

The UE then sends a MEASUREMENT REPORT message including a location estimate.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | AUTHENTICATION REQUEST | |
| 2 | --> | | AUTHENTICATION RESPONSE | |
| 3 | SS | | | SS starts security procedure |
| 4 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse |
| 5 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 6 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be allowed in the absence of a response |
| 7 | UE | | | The user accepts the location request before timer T(LCSN) expires |
| 8 | -> | | RELEASE COMPLETE | Containing a LocationNotification return result with verificationResponse set to permissionGranted |
| 9 | <- | | MEASUREMENT CONTROL | |
| 10 | <- | | MEASUREMENT CONTROL | |
| 11 | -> | | MEASUREMENT REPORT | |
| 12 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse |
| 13 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 14 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be allowed in the absence of a response |
| 15 | UE | | | The user denies the location request before timer T(LCSN) expires |
| 16 | -> | | RELEASE COMPLETE | Containing a LocationNotification return result with verificationResponse set to permissionDenied |
| 17 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse |
| 18 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 19 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be allowed in the absence of a response |
| 20 | UE | | | The user does not reply |
| 21 | SS | | | SS waits until T(LCSN) expires to ensure that the UE does not send a RELEASE COMPLETE message. |
| 22 | <- | | RELEASE COMPLETE | SS terminates the dialogue |
| 23 | <- | | MEASUREMENT CONTROL | |
| 24 | <- | | MEASUREMENT CONTROL | |
| 25 | -> | | MEASUREMENT REPORT | |
| 26 | SS | | | SS releases the connection and the test case ends |

Specific Message Contents

REGISTER (Step 4)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 8)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>RELEASE COMPLETE (xx10 1010)<br>Return result = LCS-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionGranted |

MEASUREMENT CONTROL (Step 9):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | |
| - No reporting | |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the first MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 10):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the second MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 11)

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | |
| - CHOICE *Reference time* | |
| - GPS reference time only | |
| - GPS TOW msec | Not checked |
| - CHOICE *Position estimate* | One of 'Ellipsoid point with uncertainty Circle' or 'Ellipsoid point with uncertainty Ellipse' or 'Ellipsoid point with altitude and uncertainty Ellipsoid' |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

REGISTER (Step 12)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 16)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | RELEASE COMPLETE (xx10 1010)<br>Return result = LCS-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionDenied |

REGISTER (Step 17)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 22)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type | RELEASE COMPLETE (0010 1010) |

MEASUREMENT CONTROL (Step 23):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | |
| - No reporting | |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the first MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 24):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | Not present |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - Vertical accuracy | Set according to 17.2.1.2 (unequal to 0) |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the second MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 25)

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | |
| - CHOICE *Reference time* | |
| - GPS reference time only | |
| - GPS TOW msec | Not checked |
| - CHOICE *Position estimate* | One of 'Ellipsoid point with uncertainty Circle' or 'Ellipsoid point with uncertainty Ellipse' or 'Ellipsoid point with altitude and uncertainty Ellipsoid' |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

17.2.4.6.5 Test requirements

After step 7 the UE shall send a RELEASE COMPLETE message with verificationResponse set to permissionGranted.

After step 10 the UE shall respond with a MEASUREMENT REPORT message containing a UE position estimate.

After step 15 the UE shall send a RELEASE COMPLETE message with verificationResponse set to permissionDenied.

After step 24 the UE shall respond with a MEASUREMENT REPORT message containing a UE position estimate.

## 17.2.4.7 LCS Mobile terminated location request/ UE-Based GPS/ Privacy Verification/ Location Not Allowed if No Response

### 17.2.4.7.1 Definition

This test case applies to all UEs supporting UE-Based GPS Location Service capabilities.

### 17.2.4.7.2 Conformance requirements

1) The network invokes a location notification procedure by sending a REGISTER message containing a LCS-LocationNotification invoke component to the UE. This may be sent either to request verification for MT-LR or to notify about already authorized MT-LR.

2) In case of privacy verification the MS shall respond to the request by sending a RELEASE COMPLETE message containing the mobile subscriber's response in a return result component.

3) If the timer expires in the network before any response from the MS (e.g. due to no response from the user), the network shall interpret this by applying the default treatment defined in GSM 03.71 for GSM and TS 23.171 for UMTS (i.e. disallow location if barred by subscription and allow location if allowed by subscription).

4) if the IE "Measurement command" has the value "setup":

   2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

   …

   2> for any other measurement type:

      3> if the measurement is valid in the current RRC state of the UE:

         4> begin measurements according to the stored control information for this measurement identity.

5) if the IE "Measurement command" has the value "modify":

   2> for all IEs present in the MEASUREMENT CONTROL message:

      3> if a measurement was stored in the variable MEASUREMENT_IDENTITY associated to the identity by the IE "measurement identity":

         4> if measurement type is set to "UE positioning measurement" and the IE "UE positioning GPS assistance data" is present, for any of the optional IEs "UE positioning GPS reference time", "UE positioning GPS reference UE position", "UE positioning GPS DGPS corrections", "UE positioning GPS ionospheric model", "UE positioning GPS UTC model", "UE positioning GPS acquisition assistance", "UE positioning GPS real-time integrity" that are present in the MEASUREMENT CONTROL message:

            5> replace all instances of the IEs listed above (and all their children) stored in variable MEASUREMENT_IDENTITY associated to the identity indicated by the IE "measurement identity" with the IEs received in the MEASUREMENT CONTROL message;

            5> leave all other stored information elements unchanged in the variable MEASUREMENT_IDENTITY.

6) If the IE "UE positioning GPS Navigation Model" is included, for each satellite, the UE shall:

   1> use IE "Satellite Status" to determine if an update of IE "UE positioning GPS Ephemeris and Clock Correction parameters" has been provided for the satellite indicated by the IE "SatID";

   1> if an update has been provided for this satellite:

      2> act as specified in subclause 8.6.7.19.3.4 of TS 25.331.

7) If the IE "UE positioning GPS Ephemeris and Clock Correction parameters" is included, for each satellite, the UE shall:

1> update the variable UE_POSITIONING_GPS_DATA as follows:

2> store this IE at the position indicated by the IE "Sat ID" in the IE "UE positioning GPS Navigation Model" in the variable UE_POSITIONING_GPS_DATA, possibly overwriting any existing information in this position.

1> act on these GPS ephemeris and clock correction parameters in a manner similar to that specified in ICD-GPS-200.

8) If the IE "UE positioning GPS reference time" is included, the UE shall:

1> store the IE "GPS Week" in "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as the current GPS week;

1> store the IE "GPS TOW msec" in the IE "UE positioning GPS reference time" in variable UE_POSITIONING_GPS_DATA and use it as an estimate of the GPS Time-of-Week at the time of reception of the complete message containing the IE "GPS TOW msec";

NOTE: The UE does not need to apply any compensation on the GPS Time-of-Week.

9) If the IE "UE positioning GPS reference UE position" is included, the UE shall:

1> store this IE in the IE "UE positioning GPS reference UE position" in variable UE_POSITIONING_GPS_DATA; and

1> use it as a priori knowledge of the approximate location of the UE.

10) The UE shall when a measurement report is triggered:

2> if the UE has been able to calculate a position after performing measurements on the cells included in the variable UE_POSITIONING_OTDOA_DATA_UE_BASED in case of OTDOA or on the list of satellites included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning:

3> include IE "UE positioning Position Estimate Info" in the MEASUREMENT REPORT and set the contents of the IE as follows:

4> if the UE does not support the capability to perform the UE GPS timing of cell frames measurement; or

4> if the IE "GPS timing of Cell wanted" is set to FALSE:

5> include the IE "GPS TOW msec".

4> if IE "Vertical Accuracy" has been included in IE "UE positioning reporting quantity":

5> if the IE "Vertical Accuracy" has been assigned to a value unequal to "0":

6> if the UE has been able to calculate a 3-dimensional position:

7> include IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

6> if the UE has not been able to calculate a 3-dimensional position:

7> act as if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity".

4> if IE "Vertical Accuracy" has not been included in IE "UE positioning reporting quantity":

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to value "0":

6> may include IE "Ellipsoid point".

5> if IE "Horizontal Accuracy" in IE "UE positioning reporting quantity" has been assigned to a value unequal to 0:

6> include either IE "Ellipsoid point with uncertainty circle" or IE "Ellipsoid point with uncertainty ellipse" or IE "Ellipsoid point with altitude and uncertainty ellipsoid" as the position estimate.

References

- Conformance requirement 1, 2 and 3: TS 24.030, clause 4.1.1.
- Conformance requirements 4 and 5: TS 25.331, clause 8.4.1.3.
- Conformance requirement 6: TS 25.331, clause 8.6.7.19.3.3a.
- Conformance requirement 7: TS 25.331, clause 8.6.7.19.3.4.
- Conformance requirement 8: TS 25.331, clause 8.6.7.19.3.7.
- Conformance requirement 9: TS 25.331, clause 8.6.7.19.3.8.
- Conformance requirement 10: TS 25.331, clause 8.6.7.19.1b.

### 17.2.4.7.3 Test Purpose

To verify that when the UE receives a REGISTER message, containing a LCS Location Notification Invoke component set to notifyAndVerify-LocationNotAllowedIfNoResponse, the UE notifies the user of the request and indicates that the default response is location not allowed if no response and providing the opportunity to accept or deny the request and sends a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionDenied or permissionGranted as appropriate.

### 17.2.4.7.4 Method of Test

Initial Conditions

System Simulator (SS):

- 1 cell, default parameters
- Satellites: As specified in 17.2.1.2

UE:

- State “CS-CELL DCH Initial (State 6-1)” as specified in clause 7.4.1 of TS 34.108.

Related PICS/PIXIT Statements

- UE Based Network Assisted GPS
- px_UeLcsNotification: value for UE LCS Notification timeout timer
- UE supporting Mobile Terminated Location Request

Test Procedure

The SS initiates authentication and ciphering and sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse.

The LCS Client Name contained in the USSD text string of the lcs-LocationNotification should be displayed with the option to accept or deny the request and an indication that location will be not allowed if no user response is received.

The user accepts the location request. The UE responds with a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionGranted.

The SS orders an A-GPS positioning measurement using MEASUREMENT CONTROL messages.

The UE sends a MEASUREMENT REPORT message including a location estimate.

The SS sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse.

The user denies the location request. The UE responds with a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionDenied.

The SS sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse.

The user ignores the location request by taking no action. If the timer expires in the SS before any response from the UE is received, the SS interprets this by applying the default treatment LocationNotAllowed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | AUTHENTICATION REQUEST | |
| 2 | --> | | AUTHENTICATION RESPONSE | |
| 3 | SS | | | SS starts security procedure |
| 4 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse |
| 5 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 6 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be not allowed in the absence of a response |
| 7 | UE | | | The user accepts the location request before timer T(LCSN) expires |
| 8 | -> | | RELEASE COMPLETE | Containing a LocationNotification return result with verificationResponse set to permissionGranted |
| 9 | <- | | MEASUREMENT CONTROL | |
| 10 | <- | | MEASUREMENT CONTROL | |
| 11 | -> | | MEASUREMENT REPORT | |
| 12 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse |
| 13 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 14 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be not allowed in the absence of a response |
| 15 | UE | | | The user denies the location request before timer T(LCSN) expires |
| 16 | -> | | RELEASE COMPLETE | Containing a LocationNotification return result with verificationResponse set to permissionDenied |
| 17 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse |
| 18 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 19 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be not allowed in the absence of a response |
| 20 | UE | | | The user does not reply |
| 21 | SS | | | SS waits until T(LCSN) expires to verify that the UE does not send a RELEASE COMPLETE message. |
| 22 | <- | | RELEASE COMPLETE | SS terminates the dialogue |
| 23 | SS | | | SS releases the connection and the test case ends |

Specific Message Contents

REGISTER (Step 4)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationNotAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 8)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>RELEASE COMPLETE (xx10 1010)<br>Return result = LCS-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionGranted |

MEASUREMENT CONTROL (Step 9):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | |
| - No reporting | |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the first MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL (Step 10):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | Not present |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE based |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for the second MEASUREMENT CONTROL message for "Adequate assistance data for UE-based A-GPS" in 17.2.1.3.1 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Step 11)

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | |
| - CHOICE *Reference time* | |
| - GPS reference time only | |
| - GPS TOW msec | Not checked |
| - CHOICE *Position estimate* | One of 'Ellipsoid point with uncertainty Circle' or 'Ellipsoid point with uncertainty Ellipse' or 'Ellipsoid point with altitude and uncertainty Ellipsoid' |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

REGISTER (Step 12)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationNotAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 16)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>RELEASE COMPLETE (xx10 1010)<br>Return result = LCS-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionDenied |

REGISTER (Step 17)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationNotAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 22)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type | <br>RELEASE COMPLETE (0010 1010) |

#### 17.2.4.7.5 Test requirements

After step 7 the UE shall send a RELEASE COMPLETE message with verificationResponse set to permissionGranted.

After step 10 the UE shall respond with a MEASUREMENT REPORT message containing a UE position estimate.

After step 15 the UE shall send a RELEASE COMPLETE message with verificationResponse set to permissionDenied.

During step 21 the UE shall not send any RELEASE COMPLETE message.

### 17.2.4.8 LCS Mobile terminated location request/ UE-Assisted GPS/ Privacy Verification/ Location Allowed if No Response

#### 17.2.4.8.1 Definition

This test case applies to all UEs supporting UE-Assisted GPS Location Service capabilities.

17.2.4.8.2 Conformance requirements

1) The network invokes a location notification procedure by sending a REGISTER message containing a LCS-LocationNotification invoke component to the UE. This may be sent either to request verification for MT-LR or to notify about already authorized MT-LR.

2) In case of privacy verification the MS shall respond to the request by sending a RELEASE COMPLETE message containing the mobile subscriber's response in a return result component.

3) If the timer expires in the network before any response from the MS (e.g. due to no response from the user), the network shall interpret this by applying the default treatment defined in GSM 03.71 for GSM and TS 23.171 for UMTS (i.e. disallow location if barred by subscription and allow location if allowed by subscription).

4) if the IE "Measurement command" has the value "setup":

   2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

   …

   2> for any other measurement type:

      3> if the measurement is valid in the current RRC state of the UE:

         4> begin measurements according to the stored control information for this measurement identity.

5) The UE shall:

   1> when a measurement report is triggered:

      2> if the UE was able to perform measurements on at least one neighbour cell included in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED in case of OTDOA or one satellite included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning or one cell from the active set in case of CELL ID:

         3> if the IE "Vertical Accuracy" is included:

            4> interpret the presence of this IE to indicate that the UTRAN desires to compute a 3-dimensional position estimate.

         3> if the IE "Positioning Methods" is set to "GPS":

            4> include the IE "UE positioning GPS measured results" in the measurement report and set the contents of the IE as follows:

               5> if the UE supports the capability to provide the GPS timing of the cell frames measurement:

                  6> if the IE "GPS timing of Cell wanted" is set to TRUE:

                     7> perform the UE GPS timing of cell frames measurement on the serving cell or on one cell of the active set.

                     7> include the IE "Primary CPICH Info" for FDD or the IE "cell parameters id" for TDD; and

                     7> include the IE "Reference SFN" and the IE "UE GPS timing of cell frames".

                  6> if the IE "GPS timing of Cell wanted" is set to FALSE:

                     7> include the IE "GPS TOW msec".

               5> if the UE does not support the capability to provide the GPS timing of the cell:

                  6> include the IE "GPS TOW msec".

References

- Conformance requirement 1, 2 and 3: TS 24.030, clause 4.1.1.

- Conformance requirement 4: TS 25.331, clause 8.4.1.3.
- Conformance requirement 5: TS 25.331, clause 8.6.7.19.3.3b.

#### 17.2.4.8.3 Test Purpose

To verify that when the UE receives a REGISTER message, containing a LCS Location Notification Invoke component set to notifyAndVerify-LocationAllowedIfNoResponse, the UE notifies the user of the request and indicates that the default response is location allowed if no response and providing the opportunity to accept or deny the request and sends a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionDenied or permissionGranted as appropriate.

#### 17.2.4.8.4 Method of Test

##### Initial Conditions

System Simulator (SS):

- 1 cell, default parameters
- Satellites: As specified in 17.2.1.2

UE:

- State "CS-CELL DCH Initial (State 6-1)" as specified in clause 7.4.1 of TS 34.108.

##### Related PICS/PIXIT Statements

- UE Assisted Network Assisted GPS
- px_UeLcsNotification: value for UE LCS Notification timeout timer
- UE supporting Mobile Terminated Location Request

##### Test Procedure

The SS initiates authentication and ciphering and sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse.

The LCS Client Name contained in the USSD text string of the lcs-LocationNotification should be displayed with the option to accept or deny the request and an indication that location will be allowed if no user response is received.

The user accepts the location request. The UE responds with a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionGranted.

The SS orders an A-GPS positioning measurement using a MEASUREMENT CONTROL message, including assistance data as specified in section 17.2.1.3.3. The UE may request additional assistance data by sending a MEASUREMENT REPORT message containing a positioning error indication with the IE “Error reason” set to “Assistance Data Missing”. If the UE requests additional assistance data, the SS provides the requested assistance data in one or more MEASUREMENT CONTROL messages.

The UE sends a MEASUREMENT REPORT message including IE “UE positioning GPS measured results”.

The SS sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse.

The SS sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse.

The user denies the location request. The UE responds with a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionDenied.

The SS sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse.

The user ignores the location request by taking no action. If the timer expires in the SS before any response from the UE is received, the SS interprets this by applying the default treatment LocationAllowed.

The SS orders an A-GPS positioning measurement using a MEASUREMENT CONTROL message, including assistance data as specified in section 17.2.1.3.3. The UE may request additional assistance data by sending a MEASUREMENT REPORT message containing a positioning error indication with the IE “Error reason” set to “Assistance Data Missing”. If the UE requests additional assistance data, the SS provides the requested assistance data in one or more MEASUREMENT CONTROL messages.

The UE then sends a MEASUREMENT REPORT message including IE “UE positioning GPS measured results”.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | AUTHENTICATION REQUEST | |
| 2 | --> | | AUTHENTICATION RESPONSE | |
| 3 | SS | | | SS starts security procedure |
| 4 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse |
| 5 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 6 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be allowed in the absence of a response |
| 7 | UE | | | The user accepts the location request before timer T(LCSN) expires |
| 8 | -> | | RELEASE COMPLETE | Containing a LocationNotification return result with verificationResponse set to permissionGranted |
| 9 | <- | | MEASUREMENT CONTROL | Assistance data set as specified for “Adequate assistance data for UE-assisted A-GPS” in 17.2.1.3.3 |
| 10 | -> | | MEASUREMENT REPORT | UE reports positioning measurement results (Option 1) or requests additional assistance data (Option 2). |
| 10a | <- | | MEASUREMENT CONTROL | If UE requested additional assistance data in step 10, SS provides the requested data in one or more MEASUREMENT CONTROL messages as specified in section 17.2.1.3.5. |
| 10b | -> | | MEASUREMENT REPORT | If UE requested additional assistance data in step 10, this message contains the IE “UE positioning GPS measured results”. |
| 11 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse |
| 12 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 13 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be allowed in the absence of a response |
| 14 | UE | | | The user denies the location request before timer T(LCSN) expires |
| 15 | -> | | RELEASE COMPLETE | Containing a LocationNotification return result with verificationResponse set to permissionDenied |
| 16 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationAllowedIfNoResponse |
| 17 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 18 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be allowed in the absence of a response |
| 19 | UE | | | The user does not reply |
| 20 | SS | | | SS waits until T(LCSN) expires to verify that the UE does not send a RELEASE COMPLETE message. |
| 21 | <- | | RELEASE COMPLETE | SS terminates the dialogue |
| 22 | <- | | MEASUREMENT CONTROL | Assistance data set as specified for “Adequate assistance data for UE-assisted A-GPS” in 17.2.1.3.5 |
| 23 | -> | | MEASUREMENT REPORT | UE reports positioning measurement results (Option 1) or requests additional assistance data (Option 2). |

| | | | |
|---|---|---|---|
| 23a | <- | MEASUREMENT CONTROL | If UE requested additional assistance data in step 23, SS provides the requested data in one or more MEASUREMENT CONTROL messages as specified in section 17.2.1.3.5. |
| 23b | -> | MEASUREMENT REPORT | If UE requested additional assistance data in step 23, this message contains the IE “UE positioning GPS measured results”. |
| 24 | SS | | SS releases the connection and the test case ends |

Specific Message Contents

REGISTER (Step 4)

| **Information element** | **Value/remark** |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 8)

| **Information element** | **Value/remark** |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>RELEASE COMPLETE (xx10 1010)<br>Return result = LCS-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionGranted |

MEASUREMENT CONTROL (Step 9):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | TRUE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for “Adequate assistance data for UE-assisted A-GPS” in 17.2.1.3.3 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Steps 10 (Option 1) or 10b (Option 2))

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT REPORT (Step 10 (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Assistance Data Missing |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT CONTROL (Step 10a (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified in 17.2.1.3.5 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

REGISTER (Step 11)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 15)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>RELEASE COMPLETE (xx10 1010)<br>Return result = LCS-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionDenied |

REGISTER (Step 16)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 21)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type | <br>RELEASE COMPLETE (0010 1010) |

MEASUREMENT CONTROL (Step 22):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | TRUE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for “Adequate assistance data for UE-assisted A-GPS” in 17.2.1.3.3 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Steps 23 (Option 1) or 23b (Option 2))

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT REPORT (Step 23 (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Assistance Data Missing |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT CONTROL (Step 23a (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified in 17.2.1.3.5 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

17.2.4.8.5 Test requirements

After step 7 the UE shall send a RELEASE COMPLETE message with verificationResponse set to permissionGranted.

After step 9 the UE shall respond with a MEASUREMENT REPORT message containing the IE “UE positioning GPS measured results”.

After step 14 the UE shall send a RELEASE COMPLETE message with verificationResponse set to permissionDenied.

After step 22 the UE shall respond with a MEASUREMENT REPORT message containing the IE “UE positioning GPS measured results”.

### 17.2.4.9 LCS Mobile terminated location request/ UE-Assisted GPS/ Privacy Verification/ Location Not Allowed if No Response

#### 17.2.4.9.1 Definition

This test case applies to all UEs supporting UE-Assisted GPS Location Service capabilities.

#### 17.2.4.9.2 Conformance requirements

1) The network invokes a location notification procedure by sending a REGISTER message containing a LCS-LocationNotification invoke component to the UE. This may be sent either to request verification for MT-LR or to notify about already authorized MT-LR.

2) In case of privacy verification the MS shall respond to the request by sending a RELEASE COMPLETE message containing the mobile subscriber's response in a return result component.

3) If the timer expires in the network before any response from the MS (e.g. due to no response from the user), the network shall interpret this by applying the default treatment defined in GSM 03.71 for GSM and TS 23.171 for UMTS (i.e. disallow location if barred by subscription and allow location if allowed by subscription).

4) if the IE "Measurement command" has the value "setup":

   2> store this measurement in the variable MEASUREMENT_IDENTITY according to the IE "measurement identity", first releasing any previously stored measurement with that identity if that exists;

   …

   2> for any other measurement type:

      3> if the measurement is valid in the current RRC state of the UE:

         4> begin measurements according to the stored control information for this measurement identity.

5) The UE shall:

   1> when a measurement report is triggered:

      2> if the UE was able to perform measurements on at least one neighbour cell included in the variable UE_POSITIONING_OTDOA_DATA_UE_ASSISTED in case of OTDOA or one satellite included in the variable UE_POSITIONING_GPS_DATA in case of GPS positioning or one cell from the active set in case of CELL ID:

         3> if the IE "Vertical Accuracy" is included:

            4> interpret the presence of this IE to indicate that the UTRAN desires to compute a 3-dimensional position estimate.

         3> if the IE "Positioning Methods" is set to "GPS":

            4> include the IE "UE positioning GPS measured results" in the measurement report and set the contents of the IE as follows:

               5> if the UE supports the capability to provide the GPS timing of the cell frames measurement:

                  6> if the IE "GPS timing of Cell wanted" is set to TRUE:

                     7> perform the UE GPS timing of cell frames measurement on the serving cell or on one cell of the active set.

7> include the IE "Primary CPICH Info" for FDD or the IE "cell parameters id" for TDD; and

7> include the IE "Reference SFN" and the IE "UE GPS timing of cell frames".

6> if the IE "GPS timing of Cell wanted" is set to FALSE:

7> include the IE "GPS TOW msec".

5> if the UE does not support the capability to provide the GPS timing of the cell:

6> include the IE "GPS TOW msec".

References

- Conformance requirement 1, 2 and 3: TS 24.030, clause 4.1.1.
- Conformance requirement 4: TS 25.331, clause 8.4.1.3.
- Conformance requirement 5: TS 25.331, clause 8.6.7.19.3.3b.

### 17.2.4.9.3 Test Purpose

To verify that when the UE receives a REGISTER message, containing a LCS Location Notification Invoke component set to notifyAndVerify-LocationNotAllowedIfNoResponse, the UE notifies the user of the request and indicates that the default response is location not allowed if no response and providing the opportunity to accept or deny the request and sends a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionDenied or permissionGranted as appropriate.

### 17.2.4.9.4 Method of Test

Initial Conditions

System Simulator (SS):

- 1 cell, default parameters
- Satellites: As specified in 17.2.1.2

UE:

- State “CS-CELL DCH Initial (State 6-1)” as specified in clause 7.4.1 of TS 34.108.

Related PICS/PIXIT Statements

- UE Assisted Network Assisted GPS
- px_UeLcsNotification: value for UE LCS Notification timeout timer
- UE supporting Mobile Terminated Location Request

Test Procedure

The SS initiates authentication and ciphering and sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse.

The LCS Client Name contained in the USSD text string of the lcs-LocationNotification should be displayed with the option to accept or deny the request and an indication that location will be allowed if no user response is received.

The user accepts the location request. The UE responds with a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionGranted.

The SS orders an A-GPS positioning measurement using a MEASUREMENT CONTROL message, including assistance data as specified in section 17.2.1.3.3.. The UE may request additional assistance data by sending a MEASUREMENT REPORT message containing a positioning error indication with the IE “Error reason” set to “Assistance Data Missing”. If the UE requests additional assistance data, the SS provides the requested assistance data in one or more MEASUREMENT CONTROL messages.

The UE sends a MEASUREMENT REPORT message including IE “UE positioning GPS measured results”.

The SS sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse.

The user denies the location request. The UE responds with a RELEASE COMPLETE message containing a LocationNotification return result with verificationResponse set to permissionDenied.

The SS sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse.

The user ignores the location request by taking no action. If the timer expires in the SS before any response from the UE is received, the SS interprets this by applying the default treatment LocationNotAllowed.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | AUTHENTICATION REQUEST | |
| 2 | --> | | AUTHENTICATION RESPONSE | |
| 3 | SS | | | SS starts security procedure |
| 4 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse |
| 5 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 6 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be not allowed in the absence of a response |
| 7 | UE | | | The user accepts the location request before timer T(LCSN) expires |
| 8 | -> | | RELEASE COMPLETE | Containing a LocationNotification return result with verificationResponse set to permissionGranted |
| 9 | <- | | MEASUREMENT CONTROL | |
| 10 | -> | | MEASUREMENT REPORT | UE reports positioning measurement results (Option 1) or requests additional assistance data (Option 2). |
| 10a | <- | | MEASUREMENT CONTROL | If UE requested additional assistance data in step 10, SS provides the requested data in one or more MEASUREMENT CONTROL messages as specified in section 17.2.1.3.5. |
| 10b | -> | | MEASUREMENT REPORT | If UE requested additional assistance data in step 10, this message contains the IE “UE positioning GPS measured results”. |
| 11 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse |
| 12 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 13 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be not allowed in the absence of a response |
| 14 | UE | | | The user denies the location request before timer T(LCSN) expires |
| 15 | -> | | RELEASE COMPLETE | Containing a LocationNotification return result with verificationResponse set to permissionDenied |
| 16 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyAndVerify-LocationNotAllowedIfNoResponse |
| 17 | SS | | | SS starts timer T(LCSN) set to 90% of px_UeLcsNotification |
| 18 | UE | | | The UE notifies the user of the location request and indicates to the user that location will be not allowed in the absence of a response |
| 19 | UE | | | The user does not reply |
| 20 | SS | | | SS waits until T(LCSN) expires to verify that the UE does not send a RELEASE COMPLETE message. |
| 21 | <- | | RELEASE COMPLETE | SS terminates the dialogue |
| 22 | SS | | | SS releases the connection and the test case ends |

Specific Message Contents

REGISTER (Step 4)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationNotAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 8)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>RELEASE COMPLETE (xx10 1010)<br>Return result = LCS-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionGranted |

MEASUREMENT CONTROL (Step 9):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | TRUE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified for “Adequate assistance data for UE-assisted A-GPS” in 17.2.1.3.3 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT REPORT (Steps 10 (Option 1) or 10b (Option 2))

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Present |
| - UE positioning error | Not present |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT REPORT (Step 10 (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measured Results | |
| - CHOICE *Measurement* | |
| - UE positioning measured results | |
| - UE positioning OTDOA measured results | Not present |
| - UE positioning position estimate info | Not present |
| - UE positioning GPS measured results | Not present |
| - UE positioning error | |
| - Error reason | Assistance Data Missing |
| - GPS additional assistance data request | |
| - Almanac | Not checked |
| - UTC model | Not checked |
| - Ionospheric model | Not checked |
| - Navigation model | Not checked |
| - DGPS corrections | Not checked |
| - Reference location | Not checked |
| - Reference time | Not checked |
| - Acquisition assistance | Not checked |
| - Real-time integrity | Not checked |
| - Navigation model additional data | Not checked |
| Measured Results on RACH | Not present |
| Additional Measured Results | Not present |
| Event Results | Not present |

MEASUREMENT CONTROL (Step 10a (Option 2)):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Modify |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE assisted |
| - Positioning methods | GPS |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Set as specified in 17.2.1.3.5 |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

REGISTER (Step 11)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | REGISTER (0011 1011) |
| Facility | Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationNotAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 15)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | RELEASE COMPLETE (xx10 1010) |
| Facility | Return result = LCS-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionDenied |

REGISTER (Step 16)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | RELEASE COMPLETE (0010 1010)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyAndVerify-LocationNotAllowedIfNoResponse<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 21)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type | RELEASE COMPLETE (0x10 1010) |

#### 17.2.4.9.5 Test requirements

After step 7 the UE shall send a RELEASE COMPLETE message with verificationResponse set to permissionGranted.

After step 9 the UE shall respond with a MEASUREMENT REPORT message containing the IE "UE positioning GPS measured results".

After step 14 the UE shall send a RELEASE COMPLETE message with verificationResponse set to permissionDenied.

During step 20 the UE shall not send any RELEASE COMPLETE message.

### 17.2.4.10 LCS Mobile terminated location request/ UE-Based or UE-Assisted GPS/ Configuration Incomplete

#### 17.2.4.10.1 Definition

This test case applies to all UEs supporting UE-based or UE-assisted network assisted GPS, but not UE-based OTDOA.

#### 17.2.4.10.2 Conformance requirements

1) The network invokes a location notification procedure by sending a REGISTER message containing a LCS-LocationNotification invoke component to the UE. This may be sent either to request verification for MT-LR or to notify about already authorized MT-LR.

2) In the case of location notification no response is required from the MS, the MS shall terminate the dialogue by sending a RELEASE COMPLETE message containing a LocationNotification return result.

3) The UE shall perform the following consistency check:

   1> if UE, according to its capabilities, does not support UE-based OTDOA and if IE "Positioning Methods" is set to "OTDOA" and if IE "Method Type" is set to "UE-based":

      2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

   1> if UE, according to its capabilities, does not support UE-based GPS and if IE "Positioning Methods" is set to "GPS" and if IE "Method Type" is set to "UE-based":

      2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

   1> if UE, according to its capabilities, does not support UE-assisted GPS and if IE "Positioning Methods" is set to "GPS" and if IE "Method Type" is set to "UE-assisted":

      2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

1> if UE, according to its capabilities, does not support UE-based positioning and if IE "Positioning Methods" is set to "OTDOAorGPS" and if IE "Method Type" is set to "UE-based":

2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

1> if UE, according to its capabilities, does not support Rx-Tx time difference type 2 measurement and if IE "Positioning Methods" is set to "Cell ID":

2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

1> if UE, according to its capabilities, does not support UE GPS timing of cell frames measurement and if IE "GPS timing of Cell wanted" is set to TRUE:

2> set the variable CONFIGURATION_INCOMPLETE to TRUE.

4) If the variable CONFIGURATION_INCOMPLETE is set to TRUE, the UE shall:

1> retain the measurement configuration that was valid before the MEASUREMENT CONTROL message was received;

1> set the IE "RRC transaction identifier" in the MEASUREMENT CONTROL FAILURE message to the value of "RRC transaction identifier" in the entry for the MEASUREMENT CONTROL message in the table "Accepted transactions" in the variable TRANSACTIONS and clear that entry;

1> clear the variable CONFIGURATION_INCOMPLETE;

1> set the cause value in IE "failure cause" to "Configuration incomplete";

1> submit the MEASUREMENT CONTROL FAILURE message to lower layers for transmission on the DCCH using AM RLC;

1> continue with any ongoing processes and procedures as if the invalid MEASUREMENT CONTROL message has not been received;

1> and the procedure ends.

5) The UE should set the variable UNSUPPORTED_CONFIGURATION to TRUE if the received message is not according to the UE capabilities.

References

- Conformance requirement 1, 2: TS 24.030, clause 4.1.1.
- Conformance requirement 3: TS 25.331, clause 8.6.7.19.1
- Conformance requirement 4: TS 25.331, clause 8.4.1.4a
- Conformance requirement 5: TS 25.331 clause 8.5.20

### 17.2.4.10.3 Test Purpose

To verify that the UE sends a MEASUREMENT CONTROL FAILURE message, after receiving a MEASUREMENT CONTROL message with IE “Method Type” set a value which is inconsistent with the UE positioning capabilities.

To verify that the UE set the "failure cause" IE to value "configuration incomplete" in the uplink MEASUREMENT CONTROL FAILURE message.

### 17.2.4.10.4 Method of Test

Initial Conditions

System Simulator (SS):

- 1 cell, default parameters

UE:

- State “CS-CELL DCH Initial (State 6-1)” as specified in clause 7.4.1 of TS 34.108.

Related PICS/PIXIT Statements

- UE Based Network Assisted GPS
- UE Assisted Network Assisted GPS
- UE supporting Mobile Terminated Location Request

Test Procedure

The SS initiates authentication and ciphering and sends a REGISTER message containing a Facility IE containing a LCS Location Notification Invoke component set to notifyLocationAllowed.

The UE responds with a RELEASE COMPLETE message containing a LocationNotification return result.

The SS sends a MEASUREMENT CONTROL message with “Method type” set to a value not supported by the UE as indicated in the “UE positioning capability” contained in the “UE radio access capability” (method not to be supported is UE-based OTDOA).

The UE sends a MEASUREMENT CONTROL FAILURE message with Failure Cause “Configuration Incomplete” or “unsupported configuration.

Expected Sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | AUTHENTICATION REQUEST | |
| 2 | --> | | AUTHENTICATION RESPONSE | |
| 3 | SS | | | SS starts security procedure |
| 4 | <- | | REGISTER | Call Independent SS containing Facility IE Location Notification Invoke message set to notifyLocationAllowed |
| 5 | UE | | | The UE notifies the user of the location request |
| 6 | -> | | RELEASE COMPLETE | The UE terminates the dialogue |
| 7 | SS | | | SS verifies that UE does not support UE-based OTDOA |
| 8 | <- | | MEASUREMENT CONTROL | IE “Method type” is set to a method not supported by the UE (UE-based OTDOA) |
| 9 | -> | | MEASUREMENT CONTROL FAILURE | Failure cause “Configuration Incomplete” or “Unsupported Configuration" |
| 10 | SS | | | SS releases the connection and the test case ends |

Specific Message Contents

REGISTER (Step 4)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier<br>Message type<br>Facility | <br>REGISTER (0011 1011)<br>Invoke = LCS-LocationNotification<br>LocationNotificationArg<br>notificationType -> notifyLocationAllowed<br>locationType -> current Location<br>lcsClientExternalID -> externalAddress<br>lcsClientName ->dataCodingScheme<br>nameString |

RELEASE COMPLETE (Step 6)

| Information element | Value/remark |
|---|---|
| Protocol Discriminator | Call Independent SS message (1011) |
| Transaction identifier | |
| Message type | RELEASE COMPLETE (xx10 1010) |
| Facility | Return result = LCS-LocationNotification<br>LocationNotificationRes<br>verificationResponse -> permissionGranted |

MEASUREMENT CONTROL (Step 8):

| Information element | Value/remark |
|---|---|
| **Measurement Information Elements** | |
| Measurement Identity | 10 |
| Measurement Command | Setup |
| Measurement Reporting Mode | |
| - Measurement report transfer mode | Acknowledged mode RLC |
| - Periodical reporting / Event trigger reporting mode | Periodical reporting |
| Additional Measurements List | Not present |
| CHOICE *Measurement type* | UE positioning measurement |
| - UE positioning measurement | |
| - UE positioning reporting quantity | |
| - Method type | UE-based |
| - Positioning methods | OTDOA |
| - Response time | 128 |
| - Horizontal accuracy | 127 |
| - Vertical accuracy | 127 |
| - GPS timing of cell wanted | FALSE |
| - Multiple sets | FALSE |
| - Additional assistance data request | FALSE |
| - Environmental characterization | Not present |
| - Measurement validity | |
| - UE state | All states |
| - CHOICE *Reporting criteria* | Periodical reporting criteria |
| - Amount of reporting | 1 |
| - Reporting interval | 64000 |
| - UE pos OTDOA assistance data for UE-assisted | Not present |
| - UE pos OTDOA assistance data for UE-based | Not present |
| - UE positioning GPS assistance data | Not present |
| **Physical Channel Information Elements** | |
| DPCH compressed mode status info | Not present |

MEASUREMENT CONTROL FAILURE (Step 9)

| Information Element | Value/remark |
|---|---|
| RRC transaction identifier | Set to the same value of the same IE in the MEASUREMENT CONTROL message sent in Step 5 |
| Failure cause | Failure cause “Configuration Incomplete” or “Unsupported Configuration" |

### 17.2.4.10.5 Test requirements

After step 5 the UE shall send a RELEASE COMPLETE message.

After step 8, the UE shall transmit MEASUREMENT CONTROL FAILURE message, stating the IE "failure cause" as "configuration incomplete". The UE shall not transmit any MEASUREMENT REPORT messages during the execution of this test case.

# 18 Multi-Layer Functional Tests

The present clause specifies the multi-layer functional test cases that are not covered by the interoperability radio bearer test cases in clause 14 or by any other test cases in the present document.

## 18.1 Radio Bearer Tests for 1.28 Mcps TDD option

### 18.1.1 General information for radio bearer tests (1.28 Mcps TDD)

The purpose of these radio bearer test cases is to test properly the Reference Radio Bearer configurations included in TS34.108 [9], clause 6.11 for 1.28 Mcps TDD option.

The applicability of radio bearer tests is dependent on the UE uplink and downlink radio access capabilities and UE support tele- and bearer-services. See TS 34.123-2, annex B for applicability of the specific test cases.

The test procedure for radio bearer for 1.28Mcps option is identical to generic radio bearer test procedure in chap 14.

14.1.1.1 Generic radio bearer test procedure for Single RB configuration is used for generic radio bearer test procedure for single RB configuration of 1.28 Mcps TDD option.

14.1.1.2 Generic test procedure for testing multi-RB combination and simulateneous signalling is used for generic test procedure for testing multi-RB combination ans simulateneous signalling of 1.28 Mcps TDD option.

For radio bearer combinations which are representative to multiple traffic classes, such as “Interactive or Background”, “Streaming or Interactive or Background” etc, then it is only required to execute the radio bearer test procedure once using one of the applicable traffic class for the UE under test.

NOTE As the purpose of the radio bearer test cases is to functionally verify that the UE is able to establish the radio bearer combination, and to verify correct data transfer using the different transport formats, then the necessary test coverage is achieved by perfoming the radio bearer test procedure once for one of the applicable traffic classes.

#### 18.1.1.1 Generic radio bearer test procedure for Single RB configuration

See 14.1.1for test procedure

#### 18.1.1.2 Generic test procedure for testing multi-RB configuration and simulateneous signalling

See 14.1. 2 for test procedure

#### 18.1.1.3 Generic test procedure radio bearers on MTCH

See 14.1.5 for test procedure

#### 18.1.1.4 General information interoperability radio bearer tests for E-DCH and HS-DSCH combinations

See 14.1.4 for test procedure

### 18.1.2 Combinations on DPCH

#### 18.1.2.1 Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH

Test to verify establishment and signalling of stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.1.

The test case is performed by running test case 9.4.1 (Location updating / accepted) using the stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.1.

### 18.1.2.2 Stand-alone UL:3.4 DL:3.4 kbps SRBs for DCCH

Test to verify establishment and signalling of stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.2.

The test case is performed by running test case 9.4.1 (Location updating / accepted) using the stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.2.

### 18.1.2.3 Stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH

Implicitly tested.

NOTE The stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH in TS 34.108, clause 6.11.5.4.1.3 is the default signalling radio bearer used in the generic setup procedure as specified in TS 34.108 clasue 7.

### 18.1.2.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.4.1 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

#### 18.1.2.4.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.4.

#### 18.1.2.4.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.4.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x81); RB6/TF1 (1x103); and RB7/TF1 (1x60).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.
   - for sub-test 2: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS

### 18.1.2.4a Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH(TDD)

#### 18.1.2.4a.1 Definition and applicability

All UEs which support TDD.

#### 18.1.2.4a.2 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

18.1.2.4a.3 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.4.

18.1.2.4a.4 Method of test

Initial Condition

System Simulator: 2 cells - Cell 1 and 2 are active. Each cell configure 3 carriers， one is the primary carrier，the other two are secondary carrier.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.4a.5 Test requirements

See 18.1.1.1 for definition of step 10 and step 15. (establish the connection on the secondary carrier)

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x81); RB6/TF1 (1x103); and RB7/TF1 (1x60).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.

- for sub-test 2: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS

### 18.1.2.5 Conversational / speech / UL:10.2 DL:10.2 kbps / CS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

#### 18.1.2.5.1 Conformance requirement

See clause 18.1.2.4.1.

#### 18.1.2.5.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.5.

#### 18.1.2.5.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65(alt. 1x0) | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x99 | 1x40 | 1x148 |
| | TF2, bits | 1x65 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x99 | 1x40 | 1x148 |
| | TF2, bits | 1x65 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.1.1.1 for test procedure.

### 18.1.2.5.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x65); RB6/TF1 (1x99); and RB7/TF1 (1x40).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.

   - for sub-test 2: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS.

## 18.1.2.6 Conversational / speech / UL:7.95 DL:7.95 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.6.1 Conformance requirement

See clause 18.1.2.4.1.

### 18.1.2.6.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.6.

### 18.1.2.6.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x75 (alt. 1x0) | 0x84 | 0x148 |
| | TF1, bits | 1x39 | 1x84 | 1x148 |
| | TF2, bits | 1x75 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x84 | 0x148 |
| | TF1, bits | 1x39 | 1x84 | 1x148 |
| | TF2, bits | 1x75 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 84 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 75 bits<br>RB6: 84 bits | RB5: 75 bits<br>RB6: 84 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.1.1.1 for test procedure.

#### 18.1.2.6.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x75) and RB6/TF1 (1x84).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS.

### 18.1.2.7 Conversational / speech / UL:7.4 DL:7.4 kbps / CS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.7.1 Conformance requirement

See clause 18.1.2.4.1.

#### 18.1.2.7.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.7.

#### 18.1.2.7.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x61 (alt. 1x0) | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x87 | 1x148 |
| | TF2, bits | 1x61 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x87 | 1x148 |
| | TF2, bits | 1x61 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 87 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 61 bits<br>RB6: 87 bits | RB5: 61 bits<br>RB6: 87 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.1.1.1 for test procedure.

### 18.1.2.7.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x61) and RB6/TF1 (1x87).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.

   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

## 18.1.2.8 Conversational / speech / UL:6.7 DL:6.7 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.8.1 Conformance requirement

See clause 18.1.2.4.1.

### 18.1.2.8.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.8.

### 18.1.2.8.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x58 (alt. 1x0) | 0x76 | 0x148 |
| | TF1, bits | 1x39 | 1x76 | 1x148 |
| | TF2, bits | 1x58 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x76 | 0x148 |
| | TF1, bits | 1x39 | 1x76 | 1x148 |
| | TF2, bits | 1x58 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 76 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 58 bits<br>RB6: 76 bits | RB5: 58 bits<br>RB6: 76 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.1.1.1 for test procedure.

#### 18.1.2.8.4 Test requirements

See clause 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x58) and RB6/TF1 (1x76).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

### 18.1.2.9 Conversational / speech / UL:5.9 DL:5.9 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.9.1 Conformance requirement

See clause 18.1.2.4.1.

#### 18.1.2.9.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.9.

#### 18.1.2.9.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x55 (alt. 1x0) | 0x63 | 0x148 |
| | TF1, bits | 1x39 | 1x63 | 1x148 |
| | TF2, bits | 1x55 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x63 | 0x148 |
| | TF1, bits | 1x39 | 1x63 | 1x148 |
| | TF2, bits | 1x55 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 63 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 55 bits<br>RB6: 63 bits | RB5: 55 bits<br>RB6: 63 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.1.1.1.1 for test procedure.

### 18.1.2.9.4 Test requirements

See 18.1.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x55) and RB6/TF1 (1x63).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.

   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

## 18.1.2.10 Conversational / speech / UL:5.15 DL:5.15 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH

### 18.1.2.10.1 Conformance requirement

See clause 18.1.2.4.1.

### 18.1.2.10.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.10.

### 18.1.2.10.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x49 (alt. 1x0) | 0x54 | 0x148 |
| | TF1, bits | 1x39 | 1x54 | 1x148 |
| | TF2, bits | 1x49 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x54 | 0x148 |
| | TF1, bits | 1x39 | 1x54 | 1x148 |
| | TF2, bits | 1x49 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 54 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 49 bits<br>RB6: 54 bits | RB5: 49 bits<br>RB6: 54 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.1.1.1 for test procedure.

#### 18.1.2.10.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x49) and RB6/TF1 (1x54).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

### 18.1.2.11 Conversational / speech / UL:4.75 DL:4.75 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH

#### 18.1.2.11.1 Conformance requirement

See clause 18.1.2.4.1.

#### 18.1.2.11.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.11.

#### 18.1.2.11.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x49 (alt. 1x0) | 0x53 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x53 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 53 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 42 bits<br>RB6: 53 bits | RB5: 42 bits<br>RB6: 53 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.1.1.1 for test procedure.

### 18.1.2.11.4 Test requirements

See clause 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.

- for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

## 18.1.2.12 Conversational / unknown / UL:28.8 DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.12.1 Conformance requirement

See 18.1.2.4.1.

### 18.1.2.12.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.12.

### 18.1.2.12.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: 'Timer based discard without explicit signalling' is configured in uplink to secure that the UE will be able to return data in uplink for the case when the UE test loop function, due to processing delays, will not deliver the SDUs in one and the same TTI, but instead in two subsequent TTIs. | |

Uplink TFS:

| | TFI | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 576 | RB5: 576 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 576 | RB5: 2x576 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.1.1.1 for test procedure.

#### 18.1.2.12.4 Test requirements

See clause 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
   - for sub-test 2: RB5/TF2 (2x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

- for sub-test 2: two RLC SDUs on RB5 having the same content as sent by SS.

### 18.1.2.13 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.13.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI

##### 18.1.2.13.1.1 Conformance requirement

See clause 18.1.2.4.1.

##### 18.1.2.13.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.13 for the 20 ms TTI case.

18.1.2.13.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 2x640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.1.1.1 for test procedure.

#### 18.1.2.13.1.4 Test requirements

See clause 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (2x640).
3. At step 15 the UE shall return
   - for sub-test 1: two RLC SDUs on RB5 having the same content as sent by SS.

### 18.1.2.13.1a Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI(TDD)

#### 18.1.2.13.1a.1 Definition and applicability

All UEs which support TDD.

#### 18.1.2.13.1a.2 Conformance requirement

See clause 18.1.2.4.1.

#### 18.1.2.13.1a.3 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.13 for the 20 ms TTI case.

#### 18.1.2.13.1a.4 Method of test

Initial Conditions

System Simulator: 2 cells - Cell 1 and 2 are active. Each cell configure 3 carriers， one is the primary carrier，the other two are secondary carrier.

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 2x640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.1.1.1 for test procedure.

#### 18.1.2.13.1a.5 Test requirements

See clause 18.1.1.1 for definition of step 10 and step 15 (establish the connection on the secondary carrier).

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (2x640).
3. At step 15 the UE shall return
   - for sub-test 1: two RLC SDUs on RB5 having the same content as sent by SS.

### 18.1.2.13.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI

#### 18.1.2.13.2.1 Conformance requirement

See clause 18.1.2.4.1.

18.1.2.13.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.13 for the 40 ms TTI case.

18.1.2.13.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 4x640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.13.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (4x640).
3. At step 15 the UE shall return
   - for sub-test 1: four RLC SDUs on RB5 having the same content as sent by SS.

## 18.1.2.14 Conversational / unknown / UL:32 DL:32 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.14.1 Conversational / unknown / UL:32 DL:32 kbps / CS RAB / 20 ms TTI

#### 18.1.2.14.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.14.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.14 for the 20 ms TTI case.

#### 18.1.2.14.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 1x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 1x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.14.1.4 Test requirements

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x640).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

### 18.1.2.14.2 Conversational / unknown / UL:32 DL:32 kbps / CS RAB / 40 ms TTI

#### 18.1.2.14.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.14.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.14 for the 40 ms TTI case.

18.1.2.14.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 2x640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.14.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (2x640).
3. At step 15 the UE shall return
   - for sub-test 1: two RLC SDUs on RB5 having the same content as sent by SS.

### 18.1.2.15 Streaming / unknown / UL:14.4/DL:14.4 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.15.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.15.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.15.

#### 18.1.2.15.3 Method of test

Uplink TFS:

| | TFI | RB5 (14.4 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (14.4 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 576 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.15.4 Test requirements

See 18,1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

### 18.1.2.16 Streaming / unknown / UL:28.8/DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.16.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.16.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.16.

18.1.2.16.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 576 | RB5: 576 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 576 | RB5: 2x576 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.16.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
   - for sub-test 2: RB5/TF2 (2x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 2: two RLC SDU on RB5 having the same content as sent by SS.

### 18.1.2.17 Streaming / unknown / UL:57.6/DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.17.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.17.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.17.

18.1.2.17.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | **TFI** | **RB5 (57.6 kbps)** | **DCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |
| | TF3, bits | 3x576 | N/A |
| | TF4, bits | 4x576 | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | **TFI** | **RB5 (57.6 kbps)** | **DCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |
| | TF3, bits | 3x576 | N/A |
| | TF4, bits | 4x576 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5, | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 576 | RB5: 576 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 576 | RB5: 2x576 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 576 | RB5: 3x576 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 576 | RB5: 4x576 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

### 18.1.2.17.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
   - for sub-test 2: RB5/TF2 (2x576).
   - for sub-test 3: RB5/TF3 (3x576).
   - for sub-test 4: RB5/TF4 (4x576).
3. At step 15 the UE shall return
   - for sub-test 1: one RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 2: two RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 3: three RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 4: four RLC SDU on RB5 having the same content as sent by SS.

## 18.1.2.18 Streaming / unknown / UL:0 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.18.1 Conformance requirement

See 18.1.2.4.1.

### 18.1.2.18.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.18.

To be able to test the downlink radio bearer using the UE loopback function for the reference radio bearer UL:0 DL: 64 kbps, the reference radio bearer configuration according to TS 34.108, clause 6.11.5.4.1.15.1 (Streaming/unknown/UL:14.4 kbps) is used in uplink.

### 18.1.2.18.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (14.4 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x320 | 0x148 |
| | TF1, bits | 1x320 | 1x148 |
| | TF2, bits | 2x320 | N/A |
| | TF3, bits | 4x320 | N/A |
| | TF4, bits | 8x320 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 320 |
| 2 | DL_TFC2 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 2x320 |
| 3 | DL_TFC3 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 4x320 |
| 4 | DL_TFC4 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 8x320 |
| NOTE 1: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.18.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 where the first 320 bits have the same content as the RLC SDU sent by the SS.
   - for sub-test 2 to 4: one or more RLC SDUs on RB5 where the first 320 bits have the same content as the RLC SDU sent by the SS.

### 18.1.2.19 Streaming / unknown / UL:64 DL:0 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.19.1 Conformance requirement

See 18.1.2.4.1.

18.1.2.19.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.19.

To be able to test the uplink radio bearer using the UE loopback function for the reference radio bearer UL:64 DL: 0 kbps, the reference radio bearer configuration according to TS 34.108, clause 6.11.5.4.1.15.2 (Streaming/unknown/DL:14.4 kbps) is used in downlink.

18.1.2.19.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication | <br><br>TRUE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>TRUE |

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x320 | 0x148 |
| | TF1, bits | 1x320 | 1x148 |
| | TF2, bits | 2x320 | N/A |
| | TF3, bits | 4x320 | N/A |
| | TF4, bits | 8x320 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (14.4 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 320 | RB5: 576 (note 2) |
| 2 | DL_TFC1 | UL_TFC2 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 640 | RB5: 576 (note 3) |
| 3 | DL_TFC1 | UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1280 | RB5: 576 (note 4) |
| 4 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2560 | RB5: 576 (note 5) |

NOTE 1: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
NOTE 2: SS is using a DL RLC SDU with 576 bits as test data (=DL RLC PDU size for DL/TF1). UE will return the first 320 bits of the test data.
NOTE 3: SS is using a DL RLC SDU size of 576 bits as test data (=DL RLC PDU size for DL/TF1). UE will return an RLC SDU repeating the received DL RLC SDU two times (truncating the last one to fit the UL RLC SDU size of 640 bits).
NOTE 4: SS is using a DL RLC SDU size of 576 bits as test data (=DL RLC PDU size for DL/TF1). UE will return an RLC SDU repeating the received DL RLC SDU three times (truncating the last one to fit the UL RLC SDU size of 1280 bits).
NOTE 5: SS is using a DL RLC SDU size of 576 bits as test data (=DL RLC PDU size for DL/TF1). UE will return an RLC SDU repeating the received DL RLC SDU five times (truncating the last one to fit the UL RLC SDU size of 2560 bits).

See 18.1.1.1 for test procedure.

### 18.1.2.19.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x320).
   - for sub-test 2: RB5/TF2 (2x320).
   - for sub-test 3: RB5/TF3 (4x320).
   - for sub-test 4: RB5/TF4 (8x320).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as the first 320 bits of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 for which the first 576 bits are equal to the sent DL RLC SDU bit pattern and the remaining 64 bits are equal to the first 64 bits of the sent DL RLC SDU.
   - for sub-test 3: an RLC SDU on RB5 for which the first 1152 bits are equal to the sent DL RLC SDU bit pattern repeated twice and the remaining 128 bits are equal to the first 128 bits of the sent DL RLC SDU.
   - for sub-test 4: an RLC SDU on RB5 for which the first 2304 bits are equal to the sent DL RLC SDU bit pattern repeated four times and the remaining 256 bits are equal to the first 256 of the sent DL RLC SDU.

### 18.1.2.20 Void

### 18.1.2.21 Void

### 18.1.2.22 Void

### 18.1.2.23 Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.23.1 Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC,10 ms TTI)

##### 18.1.2.23.1.1 Conformance requirement

See 18.1.2.4.1.

##### 18.1.2.23.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.23 for the turbo channel coding and uplink 10 ms TTI case.

##### 18.1.2.23.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312 | RB5: 312 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.23.1.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.23.2 Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 20 ms TTI)

#### 18.1.2.23.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.23.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.23 for the turbo channel coding and uplink 20 ms TTI case.

#### 18.1.2.23.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC1 | UL_TFC2 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.23.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
3. At step 15 the UE shall return
   - for sub-test 1 and 2: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.23.3 Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 10 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.23 for the convolutional channel coding and uplink 10 ms TTI case.

See test case 18.1.2.23.1 for test procedure and test requirement.

### 18.1.2.23.4 Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 20 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.23 for the convolutional channel coding and uplink 20 ms TTI case.

See test case 18.1.2.23.2 for test procedure and test requirement.

## 18.1.2.24 Interactive or background / UL:64 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.24.1 Interactive or background / UL:64 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / TC

#### 18.1.2.24.1.1 Conformance requirement

See 18.1.2.4.1.1.

18.1.2.24.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.24 for the downlink turbo coding case.

18.1.2.24.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC1 | UL_TFC2 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC1 | UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.24.1.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.24.2 Interactive or background / UL:64 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / CC

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.24 for the downlink convolutional channel coding case.

See test case 18.1.2.24.1 for test procedure and test requirement.

## 18.1.2.25 Interactive or background / UL:32 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.25.1 Interactive or background / UL:32 DL: 64 kbps / PS RAB / (TC, 10 ms TTI)

#### 18.1.2.25.1.1 Conformance requirement

See 18.1.2.4.1.

18.1.2.25.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.25 for the uplink turbo channel coding and 10 ms TTI case.

18.1.2.25.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 1272 | RB5: 1272 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.25.1.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1 to 4: RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.25.2 Interactive or background / UL:32 DL: 64 kbps / PS RAB / (TC, 20 ms TTI)

#### 18.1.2.25.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.25.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.25 for the uplink turbo channel coding and 20 ms TTI case.

#### 18.1.2.25.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 1272 | RB5: 1272 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.25.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF2 (2x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.25.3 Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 10 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.25 for the uplink convolutional channel coding and 10 ms TTI case.

See test case 18.1.2.25.1 for test procedure and test requirement.

### 18.1.2.25.4 Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 20 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.25 for the uplink convolutional channel coding and 20 ms TTI case.

See test case 18.1.2.25.2 for test procedure and test requirement.

## 18.1.2.26 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.26.1 Conformance requirement

See 18.1.2.4.1.

### 18.1.2.26.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.26.

### 18.1.2.26.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.1.1.1 for test procedure.

#### 18.1.2.26.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.27 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.27.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.27.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.27.

#### 18.1.2.27.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.1.1.1 for test procedure.

#### 18.1.2.27.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2 and 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

### 18.1.2.28 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.28.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.28.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.28.

#### 18.1.2.28.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.28.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.29 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

#### 18.1.2.29.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.29.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.29.

#### 18.1.2.29.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2872 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.1.1.1 for test procedure.

#### 18.1.2.29.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
   - for sub-test 5: RB5/TF3 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 and 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

### 18.1.2.30 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

#### 18.1.2.30.1 Conformance requirement

See 18.1.2.4.1.

18.1.2.30.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.30.

18.1.2.30.3 Method of test

Uplink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 2872 | RB5: 2872 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.30.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
   - for sub-test 5: RB5/TF5 (9x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.1.2.31 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.1.2.31.1 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH/ 10 ms TTI

#### 18.1.2.31.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.31.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.31 for the downlink 10 ms TTI case.

18.1.2.31.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (256 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.1.1.1 for test procedure.

#### 18.1.2.31.1.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2 and 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

### 18.1.2.31.2 Interactive or background / UL:64 DL:256 kbps / PS RAB / 20 ms TTI

#### 18.1.2.31.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.31.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.31 for the downlink 20 ms TTI case.

#### 18.1.2.31.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (256 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF0, TF1) |
| DL_TFC8 | (TF1, TF1) |
| DL_TFC9 | (TF2, TF1) |
| DL_TFC10 | (TF3, TF1) |
| DL_TFC11 | (TF4, TF1) |
| DL_TFC12 | (TF5, TF1) |
| DL_TFC13 | (TF6, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.31.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 to 6: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 6: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.32 Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

#### 18.1.2.32.1 Interactive or background / UL:64 DL:384 kbps / PS RAB / 10 ms TTI

##### 18.1.2.32.1.1 Conformance requirement

See 18.1.2.4.1.

##### 18.1.2.32.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.32 for the 10 ms TTI case.

18.1.2.32.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.1.1.1 for test procedure.

#### 18.1.2.32.1.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 and 5: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 and 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the test data sent by the SS in downlink.

### 18.1.2.32.2 Interactive or background / UL:64 DL:384 kbps / PS RAB / 20 ms TTI

#### 18.1.2.32.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.32.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.32 for the 20 ms TTI case.

18.1.2.32.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC9, , UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.32.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 to 8: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.1.2.33 Interactive or background / UL:128 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.1.2.33.1 Interactive or background / UL:128 DL:384 kbps / PS RAB / 10 ms TTI

#### 18.1.2.33.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.33.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.33 for the 10 ms TTI case.

#### 18.1.2.33.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 3832 | RB5: 3832 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.33.1.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4 and 5: RB5/TF4 (8x336).
3. At step 15 the UE shall return

- for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.33.2 Interactive or background / UL:128 DL:384 kbps / PS RAB / 20 ms TTI

#### 18.1.2.33.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.33.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.33 for the 20 ms TTI case.

#### 18.1.2.33.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5, | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.33.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4 to 8: RB5/TF4 (8x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.1.2.34 Interactive or background / UL:384 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.34.1 Interactive or background / UL:384 DL:384 kbps / PS RAB / 10 ms TTI

#### 18.1.2.34.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.34.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.34 for the 10 ms TTI case.

#### 18.1.2.34.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC7 | UL_TFC0, UL_TFC1, UL_TFC7, UL_TFC8 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC7 | UL_TFC0, UL_TFC2, UL_TFC7, UL_TFC9 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC7 | UL_TFC0, UL_TFC3, UL_TFC7, UL_TFC10 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC7 | UL_TFC0, UL_TFC4, UL_TFC7, UL_TFC11 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC7 | UL_TFC0, UL_TFC5, UL_TFC7, UL_TFC12 | RB5: 3832 | RB5: 3832 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

### 18.1.2.34.1.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).

- for sub-test 2: RB5/TF2 (2x336).
- for sub-test 3: RB5/TF3 (4x336).
- for sub-test 4: RB5/TF4 (8x336).
- for sub-test 5: RB5/TF4 (12x336).

3. At step 15 the UE shall return
   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.34.2 Interactive or background / UL:384 DL:384 kbps / PS RAB / 20 ms TTI

#### 18.1.2.34.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.34.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.34. for the 20 ms TTI case

#### 18.1.2.34.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF6, TF0) |
| UL_TFC7 | (TF7, TF0) |
| UL_TFC8 | (TF8, TF0) |
| UL_TFC9 | (TF0, TF1) |
| UL_TFC10 | (TF1, TF1) |
| UL_TFC11 | (TF2, TF1) |
| UL_TFC12 | (TF3, TF1) |
| UL_TFC13 | (TF4, TF1) |
| UL_TFC14 | (TF5, TF1) |
| UL_TFC15 | (TF6, TF1) |
| UL_TFC16 | (TF7, TF1) |
| UL_TFC17 | (TF8, TF1) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC4, UL_TFC9, UL_TFC13 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC5, UL_TFC9, UL_TFC14 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC6 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC7 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC7, UL_TFC9, UL_TFC16 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC8 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC8, UL_TFC9, UL_TFC17 | RB5: 7672 | RB5: 7672 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.34.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
   - for sub-test 5: RB5/TF5 (12x336).
   - for sub-test 6: RB5/TF6 (16x336).
   - for sub-test 7: RB5/TF7 (20x336).
   - for sub-test 8: RB5/TF8 (24x336).

3. At step 15 the UE shall return

   - for sub-test 1 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.1.2.35 Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.35.1 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 10 ms TTI

#### 18.1.2.35.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.35.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.35 for the 10 ms TTI case.

#### 18.1.2.35.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 32x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF0, TF1) |
| DL_TFC12 | (TF1, TF1) |
| DL_TFC13 | (TF2, TF1) |
| DL_TFC14 | (TF3, TF1) |
| DL_TFC15 | (TF4, TF1) |
| DL_TFC16 | (TF5, TF1) |
| DL_TFC17 | (TF6, TF1) |
| DL_TFC18 | (TF7, TF1) |
| DL_TFC19 | (TF8, TF1) |
| DL_TFC20 | (TF9, TF1) |
| DL_TFC21 | (TF10, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1272 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.1.1.1 for test procedure.

### 18.1.2.35.1.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).

- for sub-test 4 to 10: RB5/TF4 (4x336).

3. At step 15 the UE shall return

   - for sub-test 1 to 10: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.35.2 Interactive or background / UL:64 DL:2048 kbps / PS RAB / 20 ms TTI

#### 18.1.2.35.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.35.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.35 for the 20 ms TTI case.

#### 18.1.2.35.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 32x656 | N/A |
| | TF11, bits | 36x656 | N/A |
| | TF12, bits | 40x656 | N/A |
| | TF13, bits | 44x656 | N/A |
| | TF14, bits | 48x656 | N/A |
| | TF15, bits | 52x656 | N/A |
| | TF16, bits | 56x656 | N/A |
| | TF17, bits | 60x656 | N/A |
| | TF18, bits | 64x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF11, TF0) |
| DL_TFC12 | (TF12, TF0) |
| DL_TFC13 | (TF13, TF0) |
| DL_TFC14 | (TF14, TF0) |
| DL_TFC15 | (TF15, TF0) |
| DL_TFC16 | (TF16, TF0) |
| DL_TFC17 | (TF17, TF0) |
| DL_TFC18 | (TF18, TF0) |
| DL_TFC19 | (TF0, TF1) |
| DL_TFC20 | (TF1, TF1) |
| DL_TFC21 | (TF2, TF1) |
| DL_TFC22 | (TF3, TF1) |
| DL_TFC23 | (TF4, TF1) |
| DL_TFC24 | (TF5, TF1) |
| DL_TFC25 | (TF6, TF1) |
| DL_TFC26 | (TF7, TF1) |
| DL_TFC27 | (TF8, TF1) |
| DL_TFC28 | (TF9, TF1) |
| DL_TFC29 | (TF10, TF1) |
| DL_TFC30 | (TF11, TF1) |
| DL_TFC31 | (TF12, TF1) |
| DL_TFC32 | (TF13, TF1) |
| DL_TFC33 | (TF14, TF1) |
| DL_TFC34 | (TF15, TF1) |

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC35 | (TF16, TF1) |
| DL_TFC36 | (TF17, TF1) |
| DL_TFC37 | (TF18, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1272 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |
| 11 | DL_TFC11 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 23032 | RB5: 23032 |
| 12 | DL_TFC12 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 25592 | RB5: 25592 |
| 13 | DL_TFC13 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 28152 | RB5: 28152 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 14 | DL_TFC14 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 30712 | RB5: 30712 |
| 15 | DL_TFC15 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 33272 | RB5: 33272 |
| 16 | DL_TFC16 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 35832 | RB5: 35832 |
| 17 | DL_TFC17 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 38392 | RB5: 38392 |
| 18 | DL_TFC18 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 40952 | RB5: 40952 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.35.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 to 18: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 18: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.1.2.36 Interactive or background / UL:128 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.36.1 Interactive or background / UL:128 DL:2048 kbps / PS RAB / 10 ms TTI

#### 18.1.2.36.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.36.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.36 for the 10 ms TTI case.

18.1.2.36.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 32x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF0, TF1) |
| DL_TFC12 | (TF1, TF1) |
| DL_TFC13 | (TF2, TF1) |
| DL_TFC14 | (TF3, TF1) |
| DL_TFC15 | (TF4, TF1) |

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC16 | (TF5, TF1) |
| DL_TFC17 | (TF6, TF1) |
| DL_TFC18 | (TF7, TF1) |
| DL_TFC19 | (TF8, TF1) |
| DL_TFC20 | (TF9, TF1) |
| DL_TFC21 | (TF10, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1272 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2552 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.1.1.1 for test procedure.

### 18.1.2.36.1.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4 to 10: RB5/TF4 (8x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 10: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.36.2 Interactive or background / UL:128 DL:2048 kbps / PS RAB / 20 ms TTI

#### 18.1.2.36.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.36.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.36 for the 20 ms TTI case.

#### 18.1.2.36.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 32x656 | N/A |
| | TF11, bits | 36x656 | N/A |
| | TF12, bits | 40x656 | N/A |
| | TF13, bits | 44x656 | N/A |
| | TF14, bits | 48x656 | N/A |
| | TF15, bits | 52x656 | N/A |
| | TF16, bits | 56x656 | N/A |
| | TF17, bits | 60x656 | N/A |
| | TF18, bits | 64x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF11, TF0) |
| DL_TFC12 | (TF12, TF0) |
| DL_TFC13 | (TF13, TF0) |
| DL_TFC14 | (TF14, TF0) |
| DL_TFC15 | (TF15, TF0) |
| DL_TFC16 | (TF16, TF0) |
| DL_TFC17 | (TF17, TF0) |
| DL_TFC18 | (TF18, TF0) |
| DL_TFC19 | (TF0, TF1) |
| DL_TFC20 | (TF1, TF1) |
| DL_TFC21 | (TF2, TF1) |
| DL_TFC22 | (TF3, TF1) |
| DL_TFC23 | (TF4, TF1) |
| DL_TFC24 | (TF5, TF1) |
| DL_TFC25 | (TF6, TF1) |
| DL_TFC26 | (TF7, TF1) |
| DL_TFC27 | (TF8, TF1) |
| DL_TFC28 | (TF9, TF1) |
| DL_TFC29 | (TF10, TF1) |
| DL_TFC30 | (TF11, TF1) |
| DL_TFC31 | (TF12, TF1) |
| DL_TFC32 | (TF13, TF1) |
| DL_TFC33 | (TF14, TF1) |
| DL_TFC34 | (TF15, TF1) |

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC35 | (TF16, TF1) |
| DL_TFC36 | (TF17, TF1) |
| DL_TFC37 | (TF18, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1272 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2552 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |
| 11 | DL_TFC11 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 23032 | RB5: 23032 |
| 12 | DL_TFC12 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 25592 | RB5: 25592 |
| 13 | DL_TFC13 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 28152 | RB5: 28152 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 14 | DL_TFC14 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 30712 | RB5: 30712 |
| 15 | DL_TFC15 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 33272 | RB5: 33272 |
| 16 | DL_TFC16 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 35832 | RB5: 35832 |
| 17 | DL_TFC17 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 38392 | RB5: 38392 |
| 18 | DL_TFC18 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 40952 | RB5: 40952 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.36.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4 to 18: RB5/TF4 (8x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 18: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.1.2.37 Interactive or background / UL:384 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.37.1 Interactive or background / UL:384 DL:2048 kbps / PS RAB / 10 ms TTI

#### 18.1.2.37.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.37.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.37 for the 10 ms TTI case.

18.1.2.37.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 32x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF0, TF1) |
| DL_TFC12 | (TF1, TF1) |

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC13 | (TF2, TF1) |
| DL_TFC14 | (TF3, TF1) |
| DL_TFC15 | (TF4, TF1) |
| DL_TFC16 | (TF5, TF1) |
| DL_TFC17 | (TF6, TF1) |
| DL_TFC18 | (TF7, TF1) |
| DL_TFC19 | (TF8, TF1) |
| DL_TFC20 | (TF9, TF1) |
| DL_TFC21 | (TF10, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC3 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC5 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC3 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 20472 | RB5: 20472 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.37.1.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF3 (8x336).
   - for sub-test 5 to 10: RB5/TF4 (12x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 10: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.1.2.37.2 Interactive or background / UL:384 DL:2048 kbps / PS RAB / 20 ms TTI

#### 18.1.2.37.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.37.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.37 for the 20 ms TTI case.

#### 18.1.2.37.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF6, TF0) |
| UL_TFC7 | (TF7, TF0) |
| UL_TFC8 | (TF8, TF0) |
| UL_TFC9 | (TF0, TF1) |
| UL_TFC10 | (TF1, TF1) |
| UL_TFC11 | (TF2, TF1) |
| UL_TFC12 | (TF3, TF1) |
| UL_TFC13 | (TF4, TF1) |

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC14 | (TF5, TF1) |
| UL_TFC15 | (TF6, TF1) |
| UL_TFC16 | (TF7, TF1) |
| UL_TFC17 | (TF8, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 32x656 | N/A |
| | TF11, bits | 36x656 | N/A |
| | TF12, bits | 40x656 | N/A |
| | TF13, bits | 44x656 | N/A |
| | TF14, bits | 48x656 | N/A |
| | TF15, bits | 52x656 | N/A |
| | TF16, bits | 56x656 | N/A |
| | TF17, bits | 60x656 | N/A |
| | TF18, bits | 64x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF11, TF0) |
| DL_TFC12 | (TF12, TF0) |
| DL_TFC13 | (TF13, TF0) |
| DL_TFC14 | (TF14, TF0) |
| DL_TFC15 | (TF15, TF0) |
| DL_TFC16 | (TF16, TF0) |
| DL_TFC17 | (TF17, TF0) |
| DL_TFC18 | (TF18, TF0) |
| DL_TFC19 | (TF0, TF1) |
| DL_TFC20 | (TF1, TF1) |
| DL_TFC21 | (TF2, TF1) |
| DL_TFC22 | (TF3, TF1) |
| DL_TFC23 | (TF4, TF1) |
| DL_TFC24 | (TF5, TF1) |
| DL_TFC25 | (TF6, TF1) |
| DL_TFC26 | (TF7, TF1) |
| DL_TFC27 | (TF8, TF1) |

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC28 | (TF9, TF1) |
| DL_TFC29 | (TF10, TF1) |
| DL_TFC30 | (TF11, TF1) |
| DL_TFC31 | (TF12, TF1) |
| DL_TFC32 | (TF13, TF1) |
| DL_TFC33 | (TF14, TF1) |
| DL_TFC34 | (TF15, TF1) |
| DL_TFC35 | (TF16, TF1) |
| DL_TFC36 | (TF17, TF1) |
| DL_TFC37 | (TF18, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11 | RB5: 1272 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 2552 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC4, UL_TFC9, UL_TFC13 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC5, UL_TFC9, UL_TFC14 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC6 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC7 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC7, UL_TFC9, UL_TFC16 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC8 | DL_TFC0, DL_TFC19, , UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC8, UL_TFC9, UL_TFC17 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC3 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC6 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 20472 | RB5: 20472 |
| 11 | DL_TFC11 | UL_TFC3 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 23032 | RB5: 23032 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 12 | DL_TFC12 | UL_TFC7 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC7, UL_TFC9, UL_TFC16 | RB5: 25592 | RB5: 25592 |
| 13 | DL_TFC13 | UL_TFC3 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 28152 | RB5: 28152 |
| 14 | DL_TFC14 | UL_TFC8 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC8, UL_TFC9, UL_TFC17 | RB5: 30712 | RB5: 30712 |
| 15 | DL_TFC15 | UL_TFC3 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 33272 | RB5: 33272 |
| 16 | DL_TFC16 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC4, UL_TFC9, UL_TFC13 | RB5: 35832 | RB5: 35832 |
| 17 | DL_TFC17 | UL_TFC7 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC7, UL_TFC9, UL_TFC16 | RB5: 38392 | RB5: 38392 |
| 18 | DL_TFC18 | UL_TFC6 | DL_TFC0, DL_TFC19, , UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 40952 | RB5: 40952 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been choosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.1.1.1 for test procedure.

### 18.1.2.37.2.4 Test requirements

See 18.1.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8336).
   - for sub-test 5: RB5/TF5 (12x336).
   - for sub-test 6: RB5/TF6 (16x336).
   - for sub-test 7: RB5/TF7 (20x336).
   - for sub-test 8 to 18: RB5/TF4 (24x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 18: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.1.2.38 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.38.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 20 ms TTI)

#### 18.1.2.38.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.38.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.38 for the turbo channel coding and 20 ms TTI case.

#### 18.1.2.38.1.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC14 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC15 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF2, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (8 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1<br>DL_TFC7 | UL_TFC1<br>UL_TFC10 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC9,<br>UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2<br>DL_TFC8 | UL_TFC2<br>UL_TFC11 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC2,<br>UL_TFC9,<br>UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3<br>DL_TFC9 | UL_TFC3<br>UL_TFC12 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC3,<br>UL_TFC9,<br>UL_TFC12 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4<br>DL_TFC10 | UL_TFC4<br>UL_TFC13 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC9,<br>UL_TFC10,<br>UL_TFC12,<br>UL_TFC13 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5<br>DL_TFC11 | UL_TFC5<br>UL_TFC14 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5,<br>UL_TFC9,<br>UL_TFC11,<br>UL_TFC12,<br>UL_TFC14 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC3<br>DL_TFC9 | UL_TFC6<br>UL_TFC15 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC6,<br>UL_TFC9,<br>UL_TFC15 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 7 | DL_TFC4<br>DL_TFC10 | UL_TFC7<br>UL_TFC16 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC6,<br>UL_TFC7,<br>UL_TFC9,<br>UL_TFC10,<br>UL_TFC15,<br>UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 8 | DL_TFC5<br>DL_TFC11 | UL_TFC8<br>UL_TFC17 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC9 | UL_TFC0,<br>UL_TFC2,<br>UL_TFC6,<br>UL_TFC8,<br>UL_TFC9,<br>UL_TFC11,<br>UL_TFC15,<br>UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB8 is 20 ms while the downlink TTI is 40 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over two subsequent TTIs, i.e. UL RLC SDU SIZE has been set to two times the uplink TFS size minus 8 (the size of a 7 bit length indicator and expansion bit).

#### 18.1.2.38.1.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub test.

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.

   - for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.

   - for sub-test 3 and 6: an RLC SDU on RB8 having the first 312 bits equal to the content sent by the SS in the downlink; and no data shall be received on RB5, RB6 and RB7.

   - for sub-test 4 and 7: an RLC SDU on RB5 having the same content as sent by SS and on RB8 having the first 312 bits equal to the content sent by the SS in the downlink; and no data shall be received on RB6 and RB7.

   - for sub-test 5 and 8: an RLC SDU on RB5, RB6, RB7 having the same content as sent by SS and on RB8 having the first 312 bits equal to the content sent by the SS in the downlink.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.38.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (TC, 10 ms TTI)

#### 18.1.2.38.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.38.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.38 for the turbo channel coding and 10 ms TTI case.

#### 18.1.2.38.2.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (8 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1<br>DL_TFC7 | UL_TFC1<br>UL_TFC7 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC6,<br>UL_TFC7 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2<br>DL_TFC8 | UL_TFC2<br>UL_TFC8 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC2,<br>UL_TFC6,<br>UL_TFC8 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3<br>DL_TFC9 | UL_TFC3<br>UL_TFC9 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC3,<br>UL_TFC6,<br>UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4<br>DL_TFC10 | UL_TFC4<br>UL_TFC10 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC1,<br>UL_TFC3,<br>UL_TFC4,<br>UL_TFC6,<br>UL_TFC7,<br>UL_TFC9,<br>UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5<br>DL_TFC11 | UL_TFC5<br>UL_TFC11 | DL_TFC0, DL_TFC6,<br>UL_TFC0, UL_TFC6 | UL_TFC0,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5,<br>UL_TFC6,<br>UL_TFC8,<br>UL_TFC9,<br>UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB8 is 10 ms while the downlink TTI is 40 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over four tsubsequent TTIs, i.e. UL RLC SDU SIZE has been set to four times the uplink TFS size minus 8 (the size of a 7 bit length indicator and expansion bit).

#### 18.1.2.38.2.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub test.
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: an RLC SDU on RB8 having the first 312 bits equal to the content sent by the SS in the downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: an RLC SDU on RB5 having the same content as sent by SS and on RB8 having the first 312 bits equal to the content sent by the SS in the downlink; and no data shall be received on RB6 and RB7.
   - for sub-test 5: an RLC SDU on RB5, RB6, RB7 having the same content as sent by SS and on RB8 having the first 312 bits equal to the content sent by the SS in the downlink.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.38.3 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 20 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.38 for the convolutional channel coding and 20 ms TTI case.

See test case 18.1.2.38.1 for test procedure and test requirement.

### 18.1.2.38.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:8 kbps / PS RAB / (CC, 10 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.38 for the convolutional channel coding and 10 ms TTI case.

See test case 18.1.2.38.2 for test procedure and test requirement.

## 18.1.2.39 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.1.2.39.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (TC, 10 ms TTI)

#### 18.1.2.39.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.39.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.39 for the uplink turbo channel coding and 10 ms TTI case.

#### 18.1.2.39.1.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps, 10 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1 UL_TFC7 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC8 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5 UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC8, DL_TFC23 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 952 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 11 | DL_TFC11, DL_TFC26 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB8 is 10 ms while the downlink TTI is 20 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over two subsequent TTIs, i.e. UL RLC SDU SIZE has been set to two times the uplink TFS size minus 8 bits (size of 7 bit length indicator and expansion bit).

#### 18.1.2.39.1.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: an RLC SDU on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: an RLC SDU on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: an RLC SDU on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 6: an RLC SDU on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 7: an RLC SDU on RB8 having the content equal to the content of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 8: an RLC SDU on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
- for sub-test 9: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 10: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 11: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.
- for sub-test 12: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 13: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 14: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.39.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (TC, 20 ms TTI)

#### 18.1.2.39.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.39.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.39 for the uplink turbo channel coding and 20 ms TTI case.

#### 18.1.2.39.2.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC14 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC15 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF2, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC12 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC13 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC9, UL_TFC10, UL_TFC12, UL_TFC13 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, UL_TFC14 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC9, UL_TFC11, UL_TFC12, UL_TFC14 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, UL_TFC15 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC6, UL_TFC15 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC7, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 952 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 11 | DL_TFC11, DL_TFC26 | UL_TFC8, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC6, UL_TFC15 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC7, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC8, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).

#### 18.1.2.39.2.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: an RLC SDU on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: an RLC SDU on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: an RLC SDU on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 6: an RLC SDU on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 7: an RLC SDU on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 8: an RLC SDU on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
- for sub-test 9: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 10: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 11: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.
- for sub-test 12: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 13: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 14: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

#### 18.1.2.39.3 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 10 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.39 for the uplink convolutional channel coding and 10 ms TTI case.

See test case 18.1.2.39.1 for test procedure and test requirement.

#### 18.1.2.39.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:64 kbps / PS RAB / (CC, 20 ms TTI)

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.39 for the uplink convolutional channel coding and 20 ms TTI case.

See test case 18.1.2.39.2 for test procedure and test requirement.

### 18.1.2.40 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH

#### 18.1.2.40.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.40.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.40.

#### 18.1.2.40.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC15, DUL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 952 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 952 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 11 | DL_TFC11, DL_TFC26 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

### 18.1.2.40.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3, 6, 9 and 12: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4, 7, 10 and 13: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5, 8, 11 and 14: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.41 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.41.1 Conformance requirement

See 18.1.2.4.1.

### 18.1.2.41.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.41.

### 18.1.2.41.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (128 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC3 UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TCF18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 11 | DL_TFC11, DL_TFC26 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC15, , UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

### 18.1.2.41.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 6: RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 7: RLC SDUs on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 8: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
- for sub-test 9: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 10: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 11: RLC SDUs on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.
- for sub-test 12: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 13: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 14: RLC SDUs on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; RLC SDUs on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.42 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.42.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB / 10 ms TTI

#### 18.1.2.42.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.42.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.42 for the downlink 10 ms TTI case.

#### 18.1.2.42.1.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (256 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, DL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, DL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, DL_TFC18 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, DL_TFC19 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, DL_TFC20 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, DL_TFC21 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, DL_TFC22 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, DL_TFC23 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC9, DL_TFC24 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC10, DL_TFC25 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 11 | DL_TFC11, DL_TFC26 | UL_TFC11, DL_TFC26 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC12, DL_TFC27 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC13, DL_TFC28 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC14, DL_TFC29 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB8 is 20 ms while the downlink TTI is 10 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over each TTIs, i.e. UL RLC SDU SIZE has been set to the uplink TFS size under test minus 8 (the size of a 7 bit length indicator and expansion bit). | | | | | | |

#### 18.1.2.42.1.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: an RLC SDU on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: an RLC SDU on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: an RLC SDU on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 6: an RLC SDU on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 7: an RLC SDU on RB8 having the content equal to the content of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 8: an RLC SDU on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
- for sub-test 9: an RLC SDU on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 10: an RLC SDU on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 11: an RLC SDU on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.
- for sub-test 12: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 13: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 14: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.42.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:256 kbps / PS RAB / 20 ms TTI

#### 18.1.2.42.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.42.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.42 for the downlink 20 ms TTI case.

#### 18.1.2.42.2.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (256 kbps, 20 ms) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x336 | N/A |
| | TF6, bits | N/A | N/A | N/A | 16x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| DL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| DL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| DL_TFC18 | (TF0, TF0, TF0, TF6, TF0) |
| DL_TFC19 | (TF1, TF0, TF0, TF6, TF0) |
| DL_TFC20 | (TF2, TF1, TF1, TF6, TF0) |
| DL_TFC21 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC30 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC31 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC32 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC33 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC34 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC35 | (TF2, TF1, TF1, TF4, TF1) |
| DL_TFC36 | (TF0, TF0, TF0, TF5, TF1) |
| DL_TFC37 | (TF1, TF0, TF0, TF5, TF1) |
| DL_TFC38 | (TF2, TF1, TF1, TF5, TF1) |
| DL_TFC39 | (TF0, TF0, TF0, TF6, TF1) |
| DL_TFC40 | (TF1, TF0, TF0, TF6, TF1) |
| DL_TFC41 | (TF2, TF1, TF1, TF6, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC22 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC23 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC24 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC25 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC26 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC27 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC28 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC8, DL_TFC29 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21 UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC30 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 10 | DL_TFC10, DL_TFC31 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 11 | DL_TFC11, DL_TFC32 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC12, DL_TFC33 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 13 | DL_TFC13, DL_TFC34 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27 UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 14 | DL_TFC14, DL_TFC35 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 15 | DL_TFC15, DL_TFC36 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 16 | DL_TFC16, DL_TFC37 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27 UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 17 | DL_TFC17, DL_TFC38 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3832 |
| 18 | DL_TFC18, DL_TFC39 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 19 | DL_TFC19, DL_TFC40 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 20 | DL_TFC20, DL_TFC41 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC21, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

### 18.1.2.42.2.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: an RLC SDU on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: an RLC SDU on RB5 and RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
   - for sub-test 5: an RLC SDU on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 6: an RLC SDU on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: an RLC SDU on RB5 and RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
   - for sub-test 8: an RLC SDU on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
   - for sub-test 9: an RLC SDU on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 10: an RLC SDU on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 11: an RLC SDU on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 12: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 13: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 14: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 15: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 16: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 17: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 18: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 19: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 20: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.43 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.43.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB / 10 ms TTI

#### 18.1.2.43.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.43.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.43 for the downlink 10 ms TTI case.

#### 18.1.2.43.1.3 Method of test

See 18.1.1.2 for test procedure.

For the PS DL:384/UL:64 kbps radio bearer the downlink TTI is 10ms while the uplink TTI is 20ms. As the SS will send one DL SDU every 10 ms then the UE test loop function will return 2 UL SDUs per uplink TTI. To not cause uplink transmission buffer overflow then the UL RLC SDU size should be chosen such that the UE will transmit 2 RLC SDUs per uplink TTI. For the case when the transport format under test does not allow for 2 SDUs to fit into the transport format size without requiring concatenation then the UL RLC SDU size shall be chosen such that one SDU is returned per uplink TTI.

The following RLC parameter value is used in the RADIO BEARER SETUP message used to setup the PS DL:384/UL:64 kbps radio bearer:

| | |
|---|---|
| Uplink RLC<br>Transmission window size | 512 |

NOTE The transmission window size value have been chosen to avoid that UE transmission buffer becomes full during the test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (384 kbps, 10 ms) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| DL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| DL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| DL_TFC18 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC30 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC31 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC32 | (TF2, TF1, TF1, TF4, TF1) |
| DL_TFC33 | (TF0, TF0, TF0, TF5, TF1) |
| DL_TFC34 | (TF1, TF0, TF0, TF5, TF1) |
| DL_TFC35 | (TF2, TF1, TF1, TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC19 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC20 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC21 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 2) | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 4 | DL_TFC4, DL_TFC22 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 2) | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC23 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC5, UL_TFC17, UL_TFC18, UL_TFC15, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 2) | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC24 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 3) | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC25 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 3) | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC8, DL_TFC26 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312<br>(note 3) | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC27 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>(note 2) | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 10 | DL_TFC10, DL_TFC28 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>(note 2) | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 11 | DL_TFC11, DL_TFC29 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272<br>(note 2) | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC12, DL_TFC30 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 13 | DL_TFC13, DL_TFC31 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 14 | DL_TFC14, DL_TFC32 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 15 | DL_TFC15, DL_TFC33 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 16 | DL_TFC16, DL_TFC34 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC18, , UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 17 | DL_TFC17, DL_TFC35 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC18, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632<br>(note 3) | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3832 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| NOTE 1: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |
| NOTE 2: RB8 (TF1/TF3): For sub-tests where uplink transport format TF1 (1x336) or TF3 (3x336) are used then no adoptation to the difference in downlink TTI (10 ms) and uplink TTI (20ms) is possible as this would require the UE to concatenate 2 SDUs into one PDU for TF1; or into three PDUs for TF3. For these sub-tests the UL RLC SDU size is set equal to the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). | | | | | | |
| NOTE 3: RB8 (TF2/TF4): For sub-tests where uplink transport formats TF2 (2x336) or TF4 (4x336) is used then to adopt to the difference in downlink TTI (10 ms) and uplink TTI (20ms) the UL RLC SDU size has been chosen such that 2 SDUs will be returned per uplink TTI. I.e. the UL RLC SDU size is set equal to half the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). | | | | | | |

### 18.1.2.43.1.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by the SS.
   - for sub-test 6: RLC SDUs on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: RLC SDUs on RB5 having the same content as sent by the SS; RLC SDUs on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.
   - for sub-test 8: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and RLC SDUs on RB8 having the first 312 bits equal to the content of the test data sent by the SS in downlink.
   - for sub-test 9: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 10: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
   - for sub-test 11: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by the SS.
   - for sub-test 12: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 13: RLC SDUs on RB5 having the same content as sent by the SS; RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.

- for sub-test 14: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink.

- for sub-test 15: RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 16: RLC SDUs on RB5 having the same content as sent by the SS; RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.

- for sub-test 17: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the the SS; and RLC SDUs on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.43.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:384 kbps / PS RAB / 20 ms TTI

### 18.1.2.43.2.1 Conformance requirement

See 18.1.2.4.1.

### 18.1.2.43.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.43 for the downlink 20 ms TTI case.

### 18.1.2.43.2.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (384 kbps, 20 ms) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x336 | N/A |
| | TF6, bits | N/A | N/A | N/A | 16x336 | N/A |
| | TF7, bits | N/A | N/A | N/A | 20x336 | N/A |
| | TF8, bits | N/A | N/A | N/A | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| DL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| DL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| DL_TFC18 | (TF0, TF0, TF0, TF6, TF0) |
| DL_TFC19 | (TF1, TF0, TF0, TF6, TF0) |
| DL_TFC20 | (TF2, TF1, TF1, TF6, TF0) |
| DL_TFC21 | (TF0, TF0, TF0, TF7, TF0) |
| DL_TFC22 | (TF1, TF0, TF0, TF7, TF0) |
| DL_TFC23 | (TF2, TF1, TF1, TF7, TF0) |
| DL_TFC24 | (TF0, TF0, TF0, TF8, TF0) |
| DL_TFC25 | (TF1, TF0, TF0, TF8, TF0) |
| DL_TFC26 | (TF2, TF1, TF1, TF8, TF0) |
| DL_TFC27 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC30 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC31 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC32 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC33 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC34 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC35 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC36 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC37 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC38 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC39 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC40 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC41 | (TF2, TF1, TF1, TF4, TF1) |
| DL_TFC42 | (TF0, TF0, TF0, TF5, TF1) |
| DL_TFC43 | (TF1, TF0, TF0, TF5, TF1) |
| DL_TFC44 | (TF2, TF1, TF1, TF5, TF1) |
| DL_TFC45 | (TF0, TF0, TF0, TF6, TF1) |
| DL_TFC46 | (TF1, TF0, TF0, TF6, TF1) |
| DL_TFC47 | (TF2, TF1, TF1, TF6, TF1) |
| DL_TFC48 | (TF0, TF0, TF0, TF7, TF1) |
| DL_TFC49 | (TF1, TF0, TF0, TF7, TF1) |
| DL_TFC50 | (TF2, TF1, TF1, TF7, TF1) |
| DL_TFC51 | (TF0, TF0, TF0, TF8, TF1) |
| DL_TFC52 | (TF1, TF0, TF0, TF8, TF1) |
| DL_TFC53 | (TF2, TF1, TF1, TF8, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC28 | UL_TFC1,UL_TFC16 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC29 | UL_TFC2,UL_TFC17 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC30 | UL_TFC3,UL_TFC19 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 312 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 4 | DL_TFC4, DL_TFC31 | UL_TFC4,UL_TFC19 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15, | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 5 | DL_TFC5, DL_TFC32 | UL_TFC5,UL_TFC20 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18 UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |
| 6 | DL_TFC6, DL_TFC33 | UL_TFC6,UL_TFC21 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 7 | DL_TFC7, DL_TFC34 | UL_TFC7,UL_TFC22 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 8 | DL_TFC8, DL_TFC35 | UL_TFC8,UL_TFC23 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 9 | DL_TFC9, DL_TFC36 | UL_TFC9,UL_TFC24 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 10 | DL_TFC10, DL_TFC37 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24 UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 11 | DL_TFC11, DL_TFC38 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 12 | DL_TFC12, DL_TFC39 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 13 | DL_TFC13, DL_TFC40 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 14 | DL_TFC14, DL_TFC41 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 15 | DL_TFC15, DL_TFC42 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 16 | DL_TFC16, DL_TFC43 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC27, , UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 3832 |
| 17 | DL_TFC17, DL_TFC44 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3832 |
| 18 | DL_TFC18, DL_TFC45 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 19 | DL_TFC19, DL_TFC46 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 20 | DL_TFC20, DL_TFC47 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |
| 21 | DL_TFC21, DL_TFC48 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 6392 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 22 | DL_TFC22, DL_TFC49 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 6392 |
| 23 | DL_TFC23, DL_TFC50 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 6392 |
| 24 | DL_TFC24, DL_TFC51 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 25 | DL_TFC25, DL_TFC52 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 26 | DL_TFC26, DL_TFC53 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC27, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 7672 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).

### 18.1.2.43.2.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: an RLC SDU on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 4: an RLC SDU on RB5 and RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.

- for sub-test 5: an RLC SDU on RB5, RB6, RB7 and RB8 having the same content as sent by SS.

- for sub-test 6: an RLC SDU on RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 7: an RLC SDU on RB5 and RB8 having the content equal to the content of the test data sent by the SS in downlink; and no data shall be received on RB6 and RB7.

- for sub-test 8: an RLC SDU on RB5, RB6, RB7 and RB8 having the same content as sent by SS.

- for sub-test 9: an RLC SDU on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 10: an RLC SDU on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 11: an RLC SDU on RB8 having the content equal to the first 952 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 12: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 13: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 14: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 15: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 16: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 17: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 18: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 19: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 20: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 21: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 22: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 23: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 24: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 25: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 26: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.44 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.44.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB / 10 ms TTI

#### 18.1.2.44.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.44.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.44 for the downlink 10 ms TTI case.

#### 18.1.2.44.1.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (128 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (2048 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x656 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x656 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x656 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x656 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x656 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x656 | N/A |
| | TF6, bits | N/A | N/A | N/A | 16x656 | N/A |
| | TF7, bits | N/A | N/A | N/A | 20x656 | N/A |
| | TF8, bits | N/A | N/A | N/A | 24x656 | N/A |
| | TF9, bits | N/A | N/A | N/A | 28x656 | N/A |
| | TF10, bits | N/A | N/A | N/A | 32x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| DL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| DL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| DL_TFC18 | (TF0, TF0, TF0, TF6, TF0) |
| DL_TFC19 | (TF1, TF0, TF0, TF6, TF0) |
| DL_TFC20 | (TF2, TF1, TF1, TF6, TF0) |
| DL_TFC21 | (TF0, TF0, TF0, TF7, TF0) |
| DL_TFC22 | (TF1, TF0, TF0, TF7, TF0) |
| DL_TFC23 | (TF2, TF1, TF1, TF7, TF0) |
| DL_TFC24 | (TF0, TF0, TF0, TF8, TF0) |
| DL_TFC25 | (TF1, TF0, TF0, TF8, TF0) |
| DL_TFC26 | (TF2, TF1, TF1, TF8, TF0) |
| DL_TFC27 | (TF0, TF0, TF0, TF9, TF0) |
| DL_TFC28 | (TF1, TF0, TF0, TF9, TF0) |
| DL_TFC29 | (TF2, TF1, TF1, TF9, TF0) |
| DL_TFC30 | (TF0, TF0, TF0, TF10, TF0) |
| DL_TFC31 | (TF1, TF0, TF0, TF10, TF0) |
| DL_TFC32 | (TF2, TF1, TF1, TF10, TF0) |
| DL_TFC33 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC34 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC35 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC36 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC37 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC38 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC39 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC40 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC41 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC42 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC43 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC44 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC45 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC46 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC47 | (TF2, TF1, TF1, TF4, TF1) |
| DL_TFC48 | (TF0, TF0, TF0, TF5, TF1) |
| DL_TFC49 | (TF1, TF0, TF0, TF5, TF1) |
| DL_TFC50 | (TF2, TF1, TF1, TF5, TF1) |
| DL_TFC51 | (TF0, TF0, TF0, TF6, TF1) |
| DL_TFC52 | (TF1, TF0, TF0, TF6, TF1) |
| DL_TFC53 | (TF2, TF1, TF1, TF6, TF1) |
| DL_TFC54 | (TF0, TF0, TF0, TF7, TF1) |
| DL_TFC55 | (TF1, TF0, TF0, TF7, TF1) |
| DL_TFC56 | (TF2, TF1, TF1, TF7, TF1) |
| DL_TFC57 | (TF0, TF0, TF0, TF8, TF1) |
| DL_TFC58 | (TF1, TF0, TF0, TF8, TF1) |
| DL_TFC59 | (TF2, TF1, TF1, TF8, TF1) |
| DL_TFC60 | (TF0, TF0, TF0, TF9, TF1) |
| DL_TFC61 | (TF1, TF0, TF0, TF9, TF1) |
| DL_TFC62 | (TF2, TF1, TF1, TF9, TF1) |
| DL_TFC63 | (TF0, TF0, TF0, TF10, TF1) |
| DL_TFC64 | (TF1, TF0, TF0, TF10, TF1) |
| DL_TFC65 | (TF2, TF1, TF1, TF10, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC34 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC35 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC36 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 4 | DL_TFC4, DL_TFC37 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 5 | DL_TFC5, DL_TFC38 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 6 | DL_TFC6, DL_TFC39 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 7 | DL_TFC7, DL_TFC40 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 8 | DL_TFC8, DL_TFC41 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 9 | DL_TFC9, DL_TFC42 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 10 | DL_TFC10, DL_TFC43 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 11 | DL_TFC11, DL_TFC44 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 12 | DL_TFC12, DL_TFC45 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 13 | DL_TFC13, DL_TFC46 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 14 | DL_TFC14, DL_TFC47 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27 UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |
| 15 | DL_TFC15, DL_TFC48 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 16 | DL_TFC16, DL_TFC49 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 17 | DL_TFC17, DL_TFC50 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 7672 |
| 18 | DL_TFC18, DL_TFC51 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 10232 |
| 19 | DL_TFC19, DL_TFC52 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 10232 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 20 | DL_TFC20, DL_TFC53 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 10232 |
| 21 | DL_TFC21, DL_TFC54 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 12792 |
| 22 | DL_TFC22, DL_TFC55 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 12792 |
| 23 | DL_TFC23, DL_TFC56 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 12792 |
| 24 | DL_TFC24, DL_TFC57 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 15352 |
| 25 | DL_TFC25, DL_TFC58 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 15352 |
| 26 | DL_TFC26, DL_TFC59 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 15352 |
| 27 | DL_TFC27, DL_TFC60 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 17912 |
| 28 | DL_TFC28, DL_TFC61 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 17912 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 29 | DL_TFC29, DL_TFC62 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27 UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 17912 |
| 30 | DL_TFC30, DL_TFC63 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 20472 |
| 31 | DL_TFC31, DL_TFC64 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 20472 |
| 32 | DL_TFC32, DL_TFC65 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC33, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27 UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 20472 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the uplink TTI for RB8 is 20 ms while the downlink TTI is 10 ms then, to achieve continous data transmission in uplink the size of the uplink RLC SDU has been set such that it will be transmitted over each TTI, ie the uplink TFS size minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

### 18.1.2.44.1.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.

- for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.

- for sub-test 3: an RLC SDU on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 4: an RLC SDU on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 5: an RLC SDU on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 6: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 7: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 8: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 9: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 10: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 11: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 12: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 13: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 14: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 15: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 16: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 17: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 18: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 19: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 20: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 21: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 22: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 23: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 24: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 25: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 26: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.
- for sub-test 27: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 28: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 29: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.
- for sub-test 30: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
- for sub-test 31: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
- for sub-test 32: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.44.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:128 DL:2048 kbps / PS RAB / 20 ms TTI

#### 18.1.2.44.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.44.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.44 for the downlink 20 ms TTI case.

#### 18.1.2.44.2.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (128 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (2048 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x656 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x656 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x656 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x656 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x656 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x656 | N/A |
| | TF6, bits | N/A | N/A | N/A | 16x656 | N/A |
| | TF7, bits | N/A | N/A | N/A | 20x656 | N/A |
| | TF8, bits | N/A | N/A | N/A | 24x656 | N/A |
| | TF9, bits | N/A | N/A | N/A | 28x656 | N/A |
| | TF10, bits | N/A | N/A | N/A | 32x656 | N/A |
| | TF11, bits | N/A | N/A | N/A | 36x656 | N/A |
| | TF12, bits | N/A | N/A | N/A | 40x656 | N/A |
| | TF13, bits | N/A | N/A | N/A | 44x656 | N/A |
| | TF14, bits | N/A | N/A | N/A | 48x656 | N/A |
| | TF15, bits | N/A | N/A | N/A | 52x656 | N/A |
| | TF16, bits | N/A | N/A | N/A | 56x656 | N/A |
| | TF17, bits | N/A | N/A | N/A | 60x656 | N/A |
| | TF18, bits | N/A | N/A | N/A | 64x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| DL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| DL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| DL_TFC18 | (TF0, TF0, TF0, TF6, TF0) |
| DL_TFC19 | (TF1, TF0, TF0, TF6, TF0) |
| DL_TFC20 | (TF2, TF1, TF1, TF6, TF0) |
| DL_TFC21 | (TF0, TF0, TF0, TF7, TF0) |
| DL_TFC22 | (TF1, TF0, TF0, TF7, TF0) |
| DL_TFC23 | (TF2, TF1, TF1, TF7, TF0) |
| DL_TFC24 | (TF0, TF0, TF0, TF8, TF0) |
| DL_TFC25 | (TF1, TF0, TF0, TF8, TF0) |
| DL_TFC26 | (TF2, TF1, TF1, TF8, TF0) |
| DL_TFC27 | (TF0, TF0, TF0, TF9, TF0) |
| DL_TFC28 | (TF1, TF0, TF0, TF9, TF0) |
| DL_TFC29 | (TF2, TF1, TF1, TF9, TF0) |
| DL_TFC30 | (TF0, TF0, TF0, TF10, TF0) |
| DL_TFC31 | (TF1, TF0, TF0, TF10, TF0) |
| DL_TFC32 | (TF2, TF1, TF1, TF10, TF0) |
| DL_TFC33 | (TF0, TF0, TF0, TF11, TF0) |
| DL_TFC34 | (TF1, TF0, TF0, TF11, TF0) |
| DL_TFC35 | (TF2, TF1, TF1, TF11, TF0) |
| DL_TFC36 | (TF0, TF0, TF0, TF12, TF0) |
| DL_TFC37 | (TF1, TF0, TF0, TF12, TF0) |
| DL_TFC38 | (TF2, TF1, TF1, TF12, TF0) |
| DL_TFC39 | (TF0, TF0, TF0, TF13, TF0) |
| DL_TFC40 | (TF1, TF0, TF0, TF13, TF0) |
| DL_TFC41 | (TF2, TF1, TF1, TF13, TF0) |
| DL_TFC42 | (TF0, TF0, TF0, TF14, TF0) |
| DL_TFC43 | (TF1, TF0, TF0, TF14, TF0) |
| DL_TFC44 | (TF2, TF1, TF1, TF14, TF0) |
| DL_TFC45 | (TF0, TF0, TF0, TF15, TF0) |
| DL_TFC46 | (TF1, TF0, TF0, TF15, TF0) |
| DL_TFC47 | (TF2, TF1, TF1, TF15, TF0) |
| DL_TFC48 | (TF0, TF0, TF0, TF16, TF0) |
| DL_TFC49 | (TF1, TF0, TF0, TF16, TF0) |
| DL_TFC50 | (TF2, TF1, TF1, TF16, TF0) |
| DL_TFC51 | (TF0, TF0, TF0, TF17, TF0) |
| DL_TFC52 | (TF1, TF0, TF0, TF17, TF0) |
| DL_TFC53 | (TF2, TF1, TF1, TF17, TF0) |
| DL_TFC54 | (TF0, TF0, TF0, TF18, TF0) |
| DL_TFC55 | (TF1, TF0, TF0, TF18, TF0) |
| DL_TFC56 | (TF2, TF1, TF1, TF18, TF0) |
| DL_TFC57 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC58 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC59 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC60 | (TF0, TF0, TF0, TF1, TF1) |

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC61 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC61 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC63 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC64 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC65 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC66 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC67 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC68 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC69 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC70 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC71 | (TF2, TF1, TF1, TF4, TF1) |
| DL_TFC72 | (TF0, TF0, TF0, TF5, TF1) |
| DL_TFC73 | (TF1, TF0, TF0, TF5, TF1) |
| DL_TFC74 | (TF2, TF1, TF1, TF5, TF1) |
| DL_TFC75 | (TF0, TF0, TF0, TF6, TF1) |
| DL_TFC76 | (TF1, TF0, TF0, TF6, TF1) |
| DL_TFC77 | (TF2, TF1, TF1, TF6, TF1) |
| DL_TFC78 | (TF0, TF0, TF0, TF7, TF1) |
| DL_TFC79 | (TF1, TF0, TF0, TF7, TF1) |
| DL_TFC80 | (TF2, TF1, TF1, TF7, TF1) |
| DL_TFC81 | (TF0, TF0, TF0, TF8, TF1) |
| DL_TFC82 | (TF1, TF0, TF0, TF8, TF1) |
| DL_TFC83 | (TF2, TF1, TF1, TF8, TF1) |
| DL_TFC84 | (TF0, TF0, TF0, TF9, TF1) |
| DL_TFC85 | (TF1, TF0, TF0, TF9, TF1) |
| DL_TFC86 | (TF2, TF1, TF1, TF9, TF1) |
| DL_TFC87 | (TF0, TF0, TF0, TF10, TF1) |
| DL_TFC88 | (TF1, TF0, TF0, TF10, TF1) |
| DL_TFC89 | (TF2, TF1, TF1, TF10, TF1) |
| DL_TFC90 | (TF0, TF0, TF0, TF11, TF1) |
| DL_TFC91 | (TF1, TF0, TF0, TF11, TF1) |
| DL_TFC92 | (TF2, TF1, TF1, TF11, TF1) |
| DL_TFC93 | (TF0, TF0, TF0, TF12, TF1) |
| DL_TFC94 | (TF1, TF0, TF0, TF12, TF1) |
| DL_TFC95 | (TF2, TF1, TF1, TF12, TF1) |
| DL_TFC96 | (TF0, TF0, TF0, TF13, TF1) |
| DL_TFC97 | (TF1, TF0, TF0, TF13, TF1) |
| DL_TFC98 | (TF2, TF1, TF1, TF13, TF1) |
| DL_TFC99 | (TF0, TF0, TF0, TF14, TF1) |
| DL_TFC100 | (TF1, TF0, TF0, TF14, TF1) |
| DL_TFC101 | (TF2, TF1, TF1, TF14, TF1) |
| DL_TFC102 | (TF0, TF0, TF0, TF15, TF1) |
| DL_TFC103 | (TF1, TF0, TF0, TF15, TF1) |
| DL_TFC104 | (TF2, TF1, TF1, TF15, TF1) |
| DL_TFC105 | (TF0, TF0, TF0, TF16, TF1) |
| DL_TFC106 | (TF1, TF0, TF0, TF16, TF1) |
| DL_TFC107 | (TF2, TF1, TF1, TF16, TF1) |
| DL_TFC108 | (TF0, TF0, TF0, TF17, TF1) |
| DL_TFC109 | (TF1, TF0, TF0, TF17, TF1) |
| DL_TFC110 | (TF2, TF1, TF1, TF17, TF1) |
| DL_TFC111 | (TF0, TF0, TF0, TF18, TF1) |
| DL_TFC112 | (TF1, TF0, TF0, TF18, TF1) |
| DL_TFC113 | (TF2, TF1, TF1, TF18, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC58 | UL_TFC1, UL_TFC16 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC59 | UL_TFC2, UL_TFC17 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC60 | UL_TFC3, UL_TFC18 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 4 | DL_TFC4, DL_TFC61 | UL_TFC4, UL_TFC19 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18 UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 632 |
| 5 | DL_TFC5, DL_TFC62 | UL_TFC5, UL_TFC20 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 |
| 6 | DL_TFC6, DL_TFC63 | UL_TFC6, UL_TFC21 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 7 | DL_TFC7, DL_TFC64 | UL_TFC7, UL_TFC22 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1272 |
| 8 | DL_TFC8, DL_TFC65 | UL_TFC8, UL_TFC23 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 |
| 9 | DL_TFC9, DL_TFC66 | UL_TFC9, UL_TFC24 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |
| 10 | DL_TFC10, DL_TFC67 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2552 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 11 | DL_TFC11, DL_TFC68 | UL_TFC11, UL_TFC26 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC9 UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 |
| 12 | DL_TFC12, DL_TFC69 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 13 | DL_TFC13, DL_TFC70 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 5112 |
| 14 | DL_TFC14, DL_TFC71 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 5112 |
| 15 | DL_TFC15, DL_TFC72 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 16 | DL_TFC16, DL_TFC73 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 7672 |
| 17 | DL_TFC17, DL_TFC74 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27 UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 7672 |
| 18 | DL_TFC18, DL_TFC75 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 10232 |
| 19 | DL_TFC19, DL_TFC76 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 10232 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 20 | DL_TFC20, DL_TFC77 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 10232 |
| 21 | DL_TFC21, DL_TFC78 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 12792 |
| 22 | DL_TFC22, DL_TFC79 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 12792 |
| 23 | DL_TFC23, DL_TFC80 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 12792 |
| 24 | DL_TFC24, DL_TFC81 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 15352 |
| 25 | DL_TFC25, DL_TFC82 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 15352 |
| 26 | DL_TFC26, DL_TFC83 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 15352 |
| 27 | DL_TFC27, DL_TFC84 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 17912 |
| 28 | DL_TFC28, DL_TFC85 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 17912 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 29 | DL_TFC29, DL_TFC86 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 17912 |
| 30 | DL_TFC30, DL_TFC87 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 20472 |
| 31 | DL_TFC31, DL_TFC88 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 20472 |
| 32 | DL_TFC32, DL_TFC89 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 20472 |
| 33 | DL_TFC33, DL_TFC90 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 23032 |
| 34 | DL_TFC34, DL_TFC91 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 23032 |
| 35 | DL_TFC35, DL_TFC92 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 23032 |
| 36 | DL_TFC36, DL_TFC93 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 25592 |
| 37 | DL_TFC37, DL_TFC94 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 25592 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 38 | DL_TFC38, DL_TFC95 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 25592 |
| 39 | DL_TFC39, DL_TFC96 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 28152 |
| 40 | DL_TFC40, DL_TFC97 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 28152 |
| 41 | DL_TFC41, DL_TFC98 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 28152 |
| 42 | DL_TFC42, DL_TFC99 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 30712 |
| 43 | DL_TFC43, DL_TFC100 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 30712 |
| 44 | DL_TFC44, DL_TFC101 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 30712 |
| 45 | DL_TFC45, DL_TFC102 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 33272 |
| 46 | DL_TFC46, DL_TFC103 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 33272 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 47 | DL_TFC47, DL_TFC104 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 33272 |
| 48 | DL_TFC48, DL_TFC105 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 35832 |
| 49 | DL_TFC49, DL_TFC106 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 35832 |
| 50 | DL_TFC50, DL_TFC107 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 35832 |
| 51 | DL_TFC51, DL_TFC108 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 38392 |
| 52 | DL_TFC52, DL_TFC109 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 38392 |
| 53 | DL_TFC53, DL_TFC110 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 38392 |
| 54 | DL_TFC54, DL_TFC111 | UL_TFC12, UL_TFC27 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC27 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 40952 |
| 55 | DL_TFC55, DL_TFC112 | UL_TFC13, UL_TFC28 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 40952 |

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 56 | DL_TFC56, DL_TFC113 | UL_TFC14, UL_TFC29 | DL_TFC0, DL_TFC57, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 40952 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

#### 18.1.2.44.2.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: an RLC SDU on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: an RLC SDU on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: an RLC SDU on RB8 having the content equal to the first 312 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 6: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 7: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 8: an RLC SDU on RB8 having the content equal to the first 632 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.
   - for sub-test 9: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 10: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 11: an RLC SDU on RB8 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 12: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 13: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 14: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 15: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 16: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 17: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 18: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 19: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 20: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 21: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 22: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 23: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 24: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 25: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 26: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 27: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 28: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 29: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 30: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 31: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 32: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 33: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 34: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 35: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 36: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 37: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 38: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 39: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 40: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 41: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 42: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 43: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 44: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 45: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 46: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 47: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 48: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 49: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 50: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 51: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 52: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 53: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

- for sub-test 54: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; and no data shall be received on RB5, RB6 and RB7.

- for sub-test 55: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 and RB7.

- for sub-test 56: an RLC SDU on RB8 having the content equal to the first 2552 bits of the test data sent by the SS in downlink; an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.45 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming / unknown / UL:57.6 DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.45.1 Conformance requirement

See 18.1.2.4.1.

### 18.1.2.45.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.45.

### 18.1.2.45.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (57.6 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x576 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x576 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x576 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x576 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x576 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (57.6 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x576 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x576 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x576 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x576 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x576 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, DL_TFC16 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC15, UL_TFC16 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, DL_TFC17 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC15, UL_TFC17 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3,UL_TFC18 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC15, UL_TFC18 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 576 |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, DL_TFC19 | DL_TFC0, DL_TFC15, , UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC3 UL_TFC4, UL_TFC15, UL_TFC16, UL_TFC18, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 576 |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, DL_TFC20 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC15, UL_TFC17, UL_TFC18, UL_TFC20 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC6, DL_TFC21 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC6, UL_TFC15, UL_TFC21 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1152 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1152 |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC7, DL_TFC22 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7, UL_TFC15, UL_TFC16, UL_TFC21, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1152 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1152 |
| 8 | DL_TFC8, DL_TFC23 | UL_TFC8, DL_TFC23 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8, UL_TFC15, UL_TFC17, UL_TFC21, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1152 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1152 |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC9, DL_TFC24 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC9, UL_TFC15, UL_TFC24 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1728 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1728 |
| 10 | DL_TFC10, DL_TFC25 | UL_TFC10, UL_TFC25 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10, UL_TFC15, UL_TFC16, UL_TFC24, UL_TFC25 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1728 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1728 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 11 | DL_TFC11, DL_TFC26 | UL_TFC11, DL_TFC26 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC9, UL_TFC11, UL_TFC15, UL_TFC17, UL_TFC24, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1728 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1728 |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC12, DL_TFC27 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC12, UL_TFC15, UL_TFC26 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2304 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2304 |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC13, DL_TFC28 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC13, UL_TFC15, UL_TFC16, UL_TFC27, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2304 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2304 |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC14, DL_TFC29 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC14, UL_TFC15, UL_TFC17, UL_TFC27, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2304 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2304 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test . | | | | | | |

### 18.1.2.45.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified in the actual sub test.
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3, 6, 9 and 12: an RLC SDU on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4, 7, 10 and 13: an RLC SDU on RB5 and RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5, 8, 11 and 14: an RLC SDU on RB5, RB6, RB7 and RB8 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.46 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming / unknown / UL:0 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.46.1 Conformance requirement

See 18.1.2.4.1.

### 18.1.2.46.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.46.

To be able to test the downlink radio bearer using the UE loopback function for the reference radio bearer UL:0 DL: 64 kbps,, the reference radio bearer configuration according to TS 34.108, clause 6.11.5.4.1.15.1 (Streaming/unknown/UL:14.4 kbps) is used in uplink.

### 18.1.2.46.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (14.4 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x576 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x576 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x320 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x320 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x320 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x320 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x320 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| DL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| DL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| DL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| DL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| DL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| DL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| DL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| DL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| DL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| DL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| DL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| DL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| DL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| DL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| DL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| DL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| DL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| DL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC16 | UL_TFC1, UL_TFC7 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC17 | UL_TFC2, UL_TFC8 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC18 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 320<br>(note 2) |
| 4 | DL_TFC4, DL_TFC19 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 320<br>(note 2) |
| 5 | DL_TFC5, DL_TFC20 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 320<br>(note 2) |
| 6 | DL_TFC6, DL_TFC21 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 640<br>(note 3) |
| 7 | DL_TFC7, DL_TFC22 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 640<br>(note 3) |
| 8 | DL_TFC8, DL_TFC23 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640<br>(note 3) |
| 9 | DL_TFC9, DL_TFC24 | UL_TFC3, UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 1280<br>(note 4) |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 10 | DL_TFC10, DL_TFC25 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9 UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 1280<br>(note 4) |
| 11 | DL_TFC11, DL_TFC26 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1280<br>(note 4) |
| 12 | DL_TFC12, DL_TFC27 | UL_TFC3 UL_TFC9 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2560<br>(note 5) |
| 13 | DL_TFC13, DL_TFC28 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2560<br>(note 5) |
| 14 | DL_TFC14, DL_TFC29 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC15, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 576 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2560<br>(note 5) |

NOTE 1: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
NOTE 2: RB8: SS is using a DL RLC SDU with 320 bits as test data (=DL RLC PDU size for DL/TF1). UE will return one RLC PDU. SS creates an UL RLC SDU from the first 320 bits of the received RLC PDU.
NOTE 3: RB8: SS is using a DL RLC SDU size of 640 bits as test data (=DL RLC PDU size for DL/TF2). UE will return one RLC PDU. SS creates an UL RLC SDU from the received RLC PDU.
NOTE 4: RB8: SS is using a DL RLC SDU size of 1280 bits as test data (=DL RLC PDU size for DL/TF3). UE will return one RLC PDU. SS creates an UL RLC SDU from the received RLC PDU.
NOTE 5: RB8: SS is using a DL RLC SDU size of 2560 bits as test data (=DL RLC PDU size for DL/TF4). UE will return one RLC PDU. SS creates an UL RLC SDU from the received RLC PDU.
As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TFS size under test

### 18.1.2.46.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified in the actual sub test.

3. At step 15 the UE shall return

   - for sub-test 3, 6, 9 and 12: no data on RB5, RB6 and RB7.

- for sub-test 1, 4, 7, 10 and 13: an RLC SDU on RB5 having the same content as sent by the SS; and no data shall be received on RB6 or RB7.
- for sub-test 2, 5, 8, 11 and 14: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by the SS.
- for sub-test 1 to 2: no data on RB8.
- for sub-test 3 to 5: an RLC SDU on RB8 having the same content as sent by the SS.
- for sub-test 6 to 14: an RLC SDU on RB5 having the same content as the first 576 bits of the RLC SDU sent by the SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.47 Void

## 18.1.2.48 Void

## 18.1.2.49 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.49.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI

#### 18.1.2.49.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.49.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.49 for the 20 ms TTI case.

#### 18.1.2.49.1.3 Method of test

See 18.1.1.2 for test procedure.

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB8):

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 2x640 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 2x640 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC7 | UL_TFC1, DL_TFC7 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC8 | UL_TFC2, DL_TFC8 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC9 | UL_TFC3, DL_TFC9 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 2x640 |
| 4 | DL_TFC4, DL_TFC10 | UL_TFC4, UL_TFC10 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 2x640 |
| 5 | DL_TFC5, DL_TFC11 | UL_TFC5, UL_TFC11 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 2x640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.1.1.1 for test procedure.

#### 18.1.2.49.1.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 15a and step 15b the UE shall return
   - for sub-test 1: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: RLC SDUs on RB5, RB6 and RB7 having the same content as sent by the SS; and no data shall be received on RB8.
   - for sub-test 3: RLC SDUs on RB8 having the same content as sent by the SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: RLC SDUs on RB5 and RB8 having the same content as sent by the SS; and no data shall be received on RB6 and RB7.
   - for sub-test 5: RLC SDUs on RB5, RB6, RB7 and RB8 having the same content as sent by the SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.49.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI

#### 18.1.2.49.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.49.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.49 for the 40 ms TTI case.

#### 18.1.2.49.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB8):

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 4x640 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x640 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 4x640 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| DL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| DL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1, TF0, TF1) |
| DL_TFC9 | (TF0, TF0, TF0, TF1, TF1) |
| DL_TFC10 | (TF1, TF0, TF0, TF1, TF1) |
| DL_TFC11 | (TF2, TF1, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC7 | UL_TFC1, DL_TFC7 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: No data |
| 2 | DL_TFC2, DL_TFC8 | UL_TFC2, DL_TFC8 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: No data |
| 3 | DL_TFC3, DL_TFC9 | UL_TFC3, DL_TFC9 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: No data<br>RB6: No data<br>RB7: No data<br>RB8: 4x640 |
| 4 | DL_TFC4, DL_TFC10 | UL_TFC4, DL_TFC10 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC6, UL_TFC7, UL_TFC9, UL_TFC10 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 4x640 |
| 5 | DL_TFC5, DL_TFC11 | UL_TFC5, DL_TFC11 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC3, UL_TFC5, UL_TFC6, UL_TFC8, UL_TFC9, UL_TFC11 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 640 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 4x640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. As the TTI for RB8 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TB size. | | | | | | |

### 18.1.2.49.2.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6, RB7 and RB8.
   - for sub-test 2: an RLC SDU on RB5, RB6 and RB7 having the same content as sent by SS; and no data shall be received on RB8.
   - for sub-test 3: four RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB5, RB6 and RB7.
   - for sub-test 4: an RLC SDU on RB5 and four RLC SDUs on RB8 having the same content as sent by SS; and no data shall be received on RB6 and RB7.
   - - for sub-test 5: an RLC SDU on RB5, RB6 and RB7; and four RLC SDUs on RB8 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.50 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.50.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 20 ms TTI

#### 18.1.2.50.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.50.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.50 for the 20 ms TTI case.

#### 18.1.2.50.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5 and RB6):

| | **RB5 (64 kbps)** | **RB6 (64 kbps)** |
|---|---|---|
| Uplink RLC | | |
| TM RLC | | |
| Segmentation indication | FALSE | FALSE |
| Transmission RLC discard | | |
| CHOICE *SDU Discard Mode* | | |
| Timer based no explicit | | |
| Timer_discard | 100ms | 100ms |
| Downlink RLC | | |
| TM RLC | | |
| Segmentation indication | FALSE | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | | |

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (64 kbps) | RB6 (64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 2x640 | 1x148 |
| | TF2, bits | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF0, TF1) |
| UL_TFC5 | (TF1, TF0, TF1) |
| UL_TFC6 | (TF0, TF1, TF1) |
| UL_TFC7 | (TF1, TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | RB6 (64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 2x640 | 1x148 |
| | TF2, bits | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF0, TF1, TF0) |
| DL_TFC3 | (TF1, TF1, TF0) |
| DL_TFC4 | (TF0, TF0, TF1) |
| DL_TFC5 | (TF1, TF0, TF1) |
| DL_TFC6 | (TF0, TF1, TF1) |
| DL_TFC7 | (TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC5 | UL_TFC1, DL_TFC5 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5 | RB5: 640<br>RB6: 640 | RB5: 2x640<br>RB6: No data |
| 2 | DL_TFC2, DL_TFC6 | UL_TFC2, DL_TFC6 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC2, UL_TFC4, UL_TFC6 | RB5: 640<br>RB6: 640 | RB5: No data<br>RB6: 2x640 |
| 3 | DL_TFC3, DL_TFC7 | UL_TFC3, DL_TFC7 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 640<br>RB6: 640 | RB5: 2x640<br>RB6: 2x640 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TB size.

#### 18.1.2.50.1.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1: two RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: two RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 3: two RLC SDUs on RB5 and RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.50.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 40 ms TTI

#### 18.1.2.50.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.50.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.50 for the 40 ms TTI case.

18.1.2.50.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5 and RB6):

| | RB5 (64 kbps) | RB6 (64 kbps) |
|---|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | | |

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (64 kbps) | RB6 (64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 4x640 | 1x148 |
| | TF2, bits | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF0, TF1) |
| UL_TFC5 | (TF1, TF0, TF1) |
| UL_TFC6 | (TF0, TF1, TF1) |
| UL_TFC7 | (TF1, TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | RB6 (64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 4x640 | 1x148 |
| | TF2, bits | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF0, TF1, TF0) |
| DL_TFC3 | (TF1, TF1, TF0) |
| DL_TFC4 | (TF0, TF0, TF1) |
| DL_TFC5 | (TF1, TF0, TF1) |
| DL_TFC6 | (TF0, TF1, TF1) |
| DL_TFC7 | (TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC5 | UL_TFC1, DL_TFC5 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5 | RB5: 640<br>RB6: 640 | RB5: 4x640<br>RB6: No data |
| 2 | DL_TFC2, DL_TFC6 | UL_TFC2, DL_TFC6 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC2, UL_TFC4, UL_TFC6 | RB5: 640<br>RB6: 640 | RB5: No data<br>RB6: 4x640 |
| 3 | DL_TFC3, DL_TFC7 | UL_TFC3, DL_TFC7 | DL_TFC0, DL_TFC4, UL_TFC0, UL_TFC4 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 640<br>RB6: 640 | RB5: 4x640<br>RB6: 4x640 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size has been set equal to the uplink TB size. | | | | | | |

### 18.1.2.50.2.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1: four RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: four RLC SDUs on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 3: four RLC SDUs on RB5 and RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.51 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.51.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:64 DL:64 kbps / PS RAB

#### 18.1.2.51.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.51.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.51 for the 20 ms TTI case.

#### 18.1.2.51.1.3 Method of test

See 18.1.1.2 for test procedure.

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps, 20 ms TTI)** | **RB6 (I/B 64 kbps, 20 ms TTI)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps, 20 ms TTI) | RB6 (I/B 64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, UL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, UL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC3, UL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 952 | RB5: No data<br>RB6: 952 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC4, UL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 1272 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC5, UL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC6, UL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC7, UL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 2x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC8, UL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 640<br>RB6: 952 | RB5: 2x640<br>RB6: 952 |
| 9 | DL_TFC9, DL_TFC19 | UL_TFC9, UL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 2x640<br>RB6: 1272 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). | | | | | | |

### 18.1.2.51.1.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15a and step 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 15a and step 15b the UE shall return

   - for sub-test 1, 2, 3, 4: RLC SDUs on RB6 having the same content as sent by the SS; and no data shall be received on RB5.

   - for sub-test 5: RLC SDUs on RB5 having the same content as sent by the SS; and no data shall be received on RB6.

   - for sub-test 6, 7, 8 and 9: RLC SDUs on RB5 and RB6 having the same content as sent by the SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.51.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:64 DL:64 kbps / PS RAB

#### 18.1.2.51.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.51.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.51 for the 40 ms TTI case.

#### 18.1.2.51.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 18.1.1.2 for test procedure.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 64 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, DL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, DL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC3, DL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 952 | RB5: No data<br>RB6: 952 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC4, DL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 1272 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC5, DL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC5, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC6, DL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC6, UL_TFC10, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC7, DL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC8, DL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 640<br>RB6: 952 | RB5: 4x640<br>RB6: 952 |
| 9 | DL_TFC9, DL_TFC19 | UL_TFC9, DL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 4x640<br>RB6: 1272 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB5 has been set equal to the uplink TB size . | | | | | | |

#### 18.1.2.51.2.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 3, 4: an RLC SDU on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 5: two RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6, 7, 8 and 9: two RLC SDUs on RB5 and one RLC SDU on RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.52 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.52.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:64 DL:128 kbps / PS RAB

#### 18.1.2.52.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.52.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.52 for the 20 ms TTI case.

#### 18.1.2.52.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 128 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, DL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, DL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC3, DL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 952 | RB5: No data<br>RB6: 1272 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC4, DL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 2552 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC5, DL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC6, DL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC7, DL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 2x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC8, DL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 640<br>RB6: 952 | RB5: 2x640<br>RB6: 1272 |
| 9 | DL_TFC9, DL_TFC19 | UL_TFC9, DL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 2x640<br>RB6: 2552 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB5 has been set equal to the uplink TB size.

#### 18.1.2.52.1.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 3, 4: an RLC SDU on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 5: two RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6: two RLC SDUs on RB5 and one RLC SDU on RB6 having the same content as sent by SS.
   - For sub-test 3: RLC SDU on RB6 having the content equal to the first 952 bits of the test data sent by the SS in downlink;
   - For sub-test 4: RLC SDU on RB6 having the content equal to the first 1272 bits of the test data sent by the SS in downlink;
   - for sub-test 8: an RLC SDU on RB6 having the content equal to the first 952 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 9: an RLC SDU on RB6 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.52.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:64 DL:128 kbps / PS RAB

#### 18.1.2.52.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.52.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.51 for the 40 ms TTI case.

18.1.2.52.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 18.1.1.2 for test procedure.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 64 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 128 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, DL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, DL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC3, DL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 952 | RB5: No data<br>RB6: 1272 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC4, DL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 2552 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC5, DL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: No data |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 6 | DL_TFC6, DL_TFC16 | UL_TFC6, DL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC7, DL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC8, DL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 640<br>RB6: 952 | RB5: 4x640<br>RB6: 1272 |
| 9 | DL_TFC9, DL_TFC19 | UL_TFC9, DL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC15, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 4x640<br>RB6: 2552 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB5 has been set equal to the uplink TB size . | | | | | | |

### 18.1.2.52.2.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 3, 4: an RLC SDU on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 5: four RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6: four RLC SDUs on RB5 and one RLC SDU on RB6 having the same content as sent by SS.
   - For sub-test 3: RLC SDU on RB6 having the content equal to the first 652 bits of the test data sent by the SS in downlink;
   - For sub-test 4: RLC SDU on RB6 having the content equal to the first 1272 bits of the test data sent by the SS in downlink;

- for sub-test 8: an RLC SDU on RB6 having the content equal to the first 652 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS.
- for sub-test 9: an RLC SDU on RB6 having the content equal to the first 1272 bits of the test data sent by the SS in downlink; an RLC SDU on RB5 having the same content as sent by SS.

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.2.53 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.1.2.53.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 20 ms TTI + Interactive or background / UL:128 DL:128 kbps / PS RAB

#### 18.1.2.53.1.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.53.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.53 for the 20 ms TTI case.

#### 18.1.2.53.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 18.1.1.2 for test procedure.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 128 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 128 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 2x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC11 | UL_TFC1, DL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, DL_TFC12 | UL_TFC2, DL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, DL_TFC13 | UL_TFC3, DL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 1272 |
| 4 | DL_TFC4, DL_TFC14 | UL_TFC4, DL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 2552 | RB5: No data<br>RB6: 2552 |
| 5 | DL_TFC5, DL_TFC15 | UL_TFC5, DL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: No data |
| 6 | DL_TFC6, DL_TFC16 | UL_TFC6, DL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 2x640<br>RB6: 312 |
| 7 | DL_TFC7, DL_TFC17 | UL_TFC7, DL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 2x640<br>RB6: 632 |
| 8 | DL_TFC8, DL_TFC18 | UL_TFC8, DL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 640<br>RB6: 1272 | RB5: 2x640<br>RB6: 1272 |
| 9 | DL_TFC9, DL_TFC19 | UL_TFC9, DL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640<br>RB6: 2552 | RB5: 2x640<br>RB6: 2552 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB5 has been set equal to the uplink TFS size under test.

18.1.2.53.1.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 3, 4: an RLC SDU on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 5: two RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6, 7, 8 and 9: two RLC SDUs on RB5 and one RLC SDU on RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.53.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB / 40 ms TTI + Interactive or background / UL:128 DL:128 kbps / PS RAB

#### 18.1.2.53.2.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.53.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.53 for the 40 ms TTI case.

#### 18.1.2.53.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 128 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF0, TF1, TF0) |
| UL_TFC2 | (TF0, TF2, TF0) |
| UL_TFC3 | (TF0, TF3, TF0) |
| UL_TFC4 | (TF0, TF4, TF0) |
| UL_TFC5 | (TF1, TF0, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF1, TF2, TF0) |
| UL_TFC8 | (TF1, TF3, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF0, TF1, TF1) |
| UL_TFC12 | (TF0, TF2, TF1) |
| UL_TFC13 | (TF0, TF3, TF1) |
| UL_TFC14 | (TF0, TF4, TF1) |
| UL_TFC15 | (TF1, TF0, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF1, TF2, TF1) |
| UL_TFC18 | (TF1, TF3, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 128 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF0, TF1, TF0) |
| DL_TFC2 | (TF0, TF2, TF0) |
| DL_TFC3 | (TF0, TF3, TF0) |
| DL_TFC4 | (TF0, TF4, TF0) |
| DL_TFC5 | (TF1, TF0, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF1, TF2, TF0) |
| DL_TFC8 | (TF1, TF3, TF0) |
| DL_TFC9 | (TF1, TF4, TF0) |
| DL_TFC10 | (TF0, TF0, TF1) |
| DL_TFC11 | (TF0, TF1, TF1) |
| DL_TFC12 | (TF0, TF2, TF1) |
| DL_TFC13 | (TF0, TF3, TF1) |
| DL_TFC14 | (TF0, TF4, TF1) |
| DL_TFC15 | (TF1, TF0, TF1) |
| DL_TFC16 | (TF1, TF1, TF1) |
| DL_TFC17 | (TF1, TF2, TF1) |
| DL_TFC18 | (TF1, TF3, TF1) |
| DL_TFC19 | (TF1, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, UL_TFC11 | UL_TFC1, UL_TFC11 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC10, UL_TFC11 | RB5: 640<br>RB6: 312 | RB5: No data<br>RB6: 312 |
| 2 | DL_TFC2, UL_TFC12 | UL_TFC2, UL_TFC12 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC10, UL_TFC12 | RB5: 640<br>RB6: 632 | RB5: No data<br>RB6: 632 |
| 3 | DL_TFC3, UL_TFC13 | UL_TFC3, UL_TFC13 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 1272 | RB5: No data<br>RB6: 1272 |
| 4 | DL_TFC4, UL_TFC14 | UL_TFC4, UL_TFC14 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC10, UL_TFC14 | RB5: 640<br>RB6: 2552 | RB5: No data<br>RB6: 2552 |
| 5 | DL_TFC5, UL_TFC15 | UL_TFC5, UL_TFC15 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: No data |
| 6 | DL_TFC6, UL_TFC16 | UL_TFC6, UL_TFC16 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5 UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: 312 |
| 7 | DL_TFC7, UL_TFC17 | UL_TFC7, UL_TFC17 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: 632 |
| 8 | DL_TFC8, UL_TFC18 | UL_TFC8, UL_TFC18 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 4x640<br>RB6: 1272 | RB5: 4x640<br>RB6: 1272 |
| 9 | DL_TFC9, UL_TFC19 | UL_TFC9, UL_TFC19 | DL_TFC0, DL_TFC10, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 640<br>RB6: 2552 | RB5: 4x640<br>RB6: 2552 |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB5 has been set equal to the uplink TFS size under test.

#### 18.1.2.53.2.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 3, 4: an RLC SDU on RB6 having the same content as sent by SS; and no data shall be received on RB5.
   - for sub-test 5: four RLC SDUs on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 6, 7, 8 and 9: four RLC SDUs on RB5 and one RLC SDU on RB6 having the same content as sent by SS.
4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

### 18.1.2.54 Interactive or background / UL:64 DL:128 kbps / PS RAB + Streaming / unknown / UL:0 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.2.54.1 Conformance requirement

See 18.1.2.4.1.

#### 18.1.2.54.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.1.54.

To be able to test the downlink radio bearer using the UE loopback function for the reference radio bearer UL:0 DL: 64 kbps, the reference radio bearer configuration according to TS 34.108, clause 6.11.5.4.1.15.1 (Streaming/unknown/UL:14.4 kbps) is used in uplink.

#### 18.1.2.54.3 Method of test

See 18.1.1.2 for test procedure.

Uplink TFS:

| | TFI | RB5 (I/B 64 kbps) | RB6 (Str. 14.4 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x576 | 0x148 |
| | TF1, bits | 1x336 | 1x576 | 1x148 |
| | TF2, bits | 2x336 | N/A | N/A |
| | TF3, bits | 3x336 | N/A | N/A |
| | TF4, bits | 4x336 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF0, TF0) |
| UL_TFC3 | (TF3, TF0, TF0) |
| UL_TFC4 | (TF4, TF0, TF0) |
| UL_TFC5 | (TF0, TF1, TF0) |
| UL_TFC6 | (TF1, TF1, TF0) |
| UL_TFC7 | (TF2, TF1, TF0) |
| UL_TFC8 | (TF3, TF1, TF0) |
| UL_TFC9 | (TF4, TF1, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF1, TF0, TF1) |
| UL_TFC12 | (TF2, TF0, TF1) |
| UL_TFC13 | (TF3, TF0, TF1) |
| UL_TFC14 | (TF4, TF0, TF1) |
| UL_TFC15 | (TF0, TF1, TF1) |
| UL_TFC16 | (TF1, TF1, TF1) |
| UL_TFC17 | (TF2, TF1, TF1) |
| UL_TFC18 | (TF3, TF1, TF1) |
| UL_TFC19 | (TF4, TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (I/B 128 kbps) | RB6 (Str. 64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x320 | 0x148 |
| | TF1, bits | 1x336 | 1x320 | 1x148 |
| | TF2, bits | 2x336 | 2x320 | N/A |
| | TF3, bits | 4x336 | 4x320 | N/A |
| | TF4, bits | 8x336 | 8x320 | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF0, TF0) |
| DL_TFC3 | (TF3, TF0, TF0) |
| DL_TFC4 | (TF4, TF0, TF0) |
| DL_TFC5 | (TF0, TF1, TF0) |
| DL_TFC6 | (TF1, TF1, TF0) |
| DL_TFC7 | (TF2, TF1, TF0) |
| DL_TFC8 | (TF3, TF1, TF0) |
| DL_TFC9 | (TF4, TF1, TF0) |
| DL_TFC10 | (TF0, TF2, TF0) |
| DL_TFC11 | (TF1, TF2, TF0) |
| DL_TFC12 | (TF2, TF2, TF0) |
| DL_TFC13 | (TF3, TF2, TF0) |
| DL_TFC14 | (TF4, TF2, TF0) |
| DL_TFC15 | (TF0, TF3, TF0) |
| DL_TFC16 | (TF1, TF3, TF0) |
| DL_TFC17 | (TF2, TF3, TF0) |
| DL_TFC18 | (TF3, TF3, TF0) |
| DL_TFC19 | (TF4, TF3, TF0) |
| DL_TFC20 | (TF0, TF4, TF0) |
| DL_TFC21 | (TF1, TF4, TF0) |
| DL_TFC22 | (TF2, TF4, TF0) |
| DL_TFC23 | (TF3, TF4, TF0) |
| DL_TFC24 | (TF4, TF4, TF0) |

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC25 | (TF0, TF0, TF1) |
| DL_TFC26 | (TF1, TF0, TF1) |
| DL_TFC27 | (TF2, TF0, TF1) |
| DL_TFC28 | (TF3, TF0, TF1) |
| DL_TFC29 | (TF4, TF0, TF1) |
| DL_TFC30 | (TF0, TF1, TF1) |
| DL_TFC31 | (TF1, TF1, TF1) |
| DL_TFC32 | (TF2, TF1, TF1) |
| DL_TFC33 | (TF3, TF1, TF1) |
| DL_TFC34 | (TF4, TF1, TF1) |
| DL_TFC35 | (TF0, TF2, TF1) |
| DL_TFC36 | (TF1, TF2, TF1) |
| DL_TFC37 | (TF2, TF2, TF1) |
| DL_TFC38 | (TF3, TF2, TF1) |
| DL_TFC39 | (TF4, TF2, TF1) |
| DL_TFC40 | (TF0, TF3, TF1) |
| DL_TFC41 | (TF1, TF3, TF1) |
| DL_TFC42 | (TF2, TF3, TF1) |
| DL_TFC43 | (TF3, TF3, TF1) |
| DL_TFC44 | (TF4, TF3, TF1) |
| DL_TFC45 | (TF0, TF4, TF1) |
| DL_TFC46 | (TF1, TF4, TF1) |
| DL_TFC47 | (TF2, TF4, TF1) |
| DL_TFC48 | (TF3, TF4, TF1) |
| DL_TFC49 | (TF4, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1, DL_TFC26 | UL_TFC1, UL_TFC11 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC10, UL_TFC11 | RB5: 312<br>RB6: 576 | RB5: 312<br>RB6: No data |
| 2 | DL_TFC2, DL_TFC27 | UL_TFC2, UL_TFC12 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC10, UL_TFC12 | RB5: 632<br>RB6: 576 | RB5: 632<br>RB6: No data |
| 3 | DL_TFC3, DL_TFC28 | UL_TFC3, UL_TFC13 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 952<br>RB6: 576 | RB5: 1272<br>RB6: No data |
| 4 | DL_TFC4, DL_TFC29 | UL_TFC4, UL_TFC14 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC10, UL_TFC14 | RB5: 1272<br>RB6: 576 | RB5: 2552<br>RB6: No data |
| 5 | DL_TFC5, DL_TFC30 | UL_TFC5, UL_TFC15 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 312<br>RB6: 576 | RB5: No data<br>RB6: 320<br>(note 2) |
| 6 | DL_TFC6, DL_TFC31 | UL_TFC6, UL_TFC16 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 312<br>RB6: 576 | RB5: 312<br>RB6: 320<br>(note 2) |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 7 | DL_TFC7, DL_TFC32 | UL_TFC7, UL_TFC17 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC5 UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 632 RB6: 576 | RB5: 632 RB6: 320 (note 2) |
| 8 | DL_TFC8, DL_TFC33 | UL_TFC8, UL_TFC18 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC5 UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 952 RB6: 576 | RB5: 1272 RB6: 320 (note 2) |
| 9 | DL_TFC9, DL_TFC34 | UL_TFC9, UL_TFC19 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 1272 RB6: 576 | RB5: 2552 RB6: 320 (note 2) |
| 10 | DL_TFC10, DL_TFC35 | UL_TFC5, UL_TFC15 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 312 RB6: 576 | RB5: No data RB6: 640 (note 3) |
| 11 | DL_TFC11, DL_TFC36 | UL_TFC6, UL_TFC16 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 312 RB6: 576 | RB5: 312 RB6: 640 (note 3) |
| 12 | DL_TFC12, DL_TFC37 | UL_TFC7, UL_TFC17 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC5 UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 632 RB6: 576 | RB5: 632 RB6: 640 (note 3) |
| 13 | DL_TFC13, DL_TFC38 | UL_TFC8, UL_TFC18 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 952 RB6: 576 | RB5: 1272 RB6: 640 (note 3) |
| 14 | DL_TFC14, DL_TFC39 | UL_TFC9, UL_TFC19 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 1272 RB6: 576 | RB5: 2552 RB6: 640 (note 3) |
| 15 | DL_TFC15, DL_TFC40 | UL_TFC5, UL_TFC15 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 312 RB6: 576 | RB5: No data RB6: 1280 (note 4) |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 16 | DL_TFC16, DL_TFC41 | UL_TFC6, UL_TFC16 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 312 RB6: 576 | RB5: 312 RB6: 1280 (note 4) |
| 17 | DL_TFC17, DL_TFC42 | UL_TFC7, UL_TFC17 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 632 RB6: 576 | RB5: 632 RB6: 1280 (note 4) |
| 18 | DL_TFC18, DL_TFC43 | UL_TFC8, UL_TFC18 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC5, UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 952 RB6: 576 | RB5: 1272 RB6: 1280 (note 4) |
| 19 | DL_TFC19, DL_TFC44 | UL_TFC9, UL_TFC19 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 1272 RB6: 576 | RB5: 2552 RB6: 1280 (note 4) |
| 20 | DL_TFC20, DL_TFC45 | UL_TFC5, UL_TFC15 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 312 RB6: 576 | RB5: No data RB6: 2560 (note 5) |
| 21 | DL_TFC21, DL_TFC46 | UL_TFC6, UL_TFC16 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC10, UL_TFC11, UL_TFC15, UL_TFC16 | RB5: 312 RB6: 576 | RB5: 312 RB6: 2560 (note 5) |
| 22 | DL_TFC22, DL_TFC47 | UL_TFC7, UL_TFC17 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC5, UL_TFC7, UL_TFC10, UL_TFC12, UL_TFC15, UL_TFC17 | RB5: 632 RB6: 576 | RB5: 632 RB6: 2560 (note 5) |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 23 | DL_TFC23, DL_TFC48 | UL_TFC8, UL_TFC18 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC3, UL_TFC5 UL_TFC8, UL_TFC10, UL_TFC13, UL_TFC15, UL_TFC18 | RB5: 952 RB6: 576 | RB5: 1272 RB6: 2560 (note 5) |
| 24 | DL_TFC24, DL_TFC49 | UL_TFC9, UL_TFC19 | DL_TFC0, DL_TFC25, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC4, UL_TFC5, UL_TFC9, UL_TFC10, UL_TFC14, UL_TFC15, UL_TFC19 | RB5: 1272 RB6: 576 | RB5: 2552 RB6: 2560 (note 5) |

NOTE 1: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
NOTE 2: RB6: SS is using a DL RLC SDU with 320 bits as test data (=DL RLC PDU size for DL/TF1). UE will return one RLC PDU. SS creates an UL RLC SDU from the first 320 bits of the received RLC PDU.
NOTE 3: RB6: SS is using a DL RLC SDU size of 640 bits as test data (=DL RLC PDU size for DL/TF2). UE will return one RLC PDU. SS creates an UL RLC SDU from the received RLC PDU.
NOTE 4: RB6: SS is using a DL RLC SDU size of 1280 bits as test data (=DL RLC PDU size for DL/TF3). UE will return one RLC PDU. SS creates an UL RLC SDU from the received RLC PDU.
NOTE 5: RB6: SS is using a DL RLC SDU size of 2560 bits as test data (=DL RLC PDU size for DL/TF4). UE will return one RLC PDU. SS creates an UL RLC SDU from the received RLC PDU.
RB5: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). As the TTI for RB5 and RB6 is the same for both downlink and uplink then UL RLC SDU size has been set to achieve UE to return one SDU per TTI, i.e. the UL RLC SDU size for RB5 has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit).and .the UL RLC SDU size for RB6 has been set equal to the uplink TFS size under test.

### 18.1.2.54.4 Test requirements

See 18.1.1.2 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15a and 15b the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual subtest.
3. At step 15 the UE shall return
   - for sub-test 1, 2, 6, 7, 11, 12, 16, 17, 21, 22: an RLC SDU on RB5 having the same content as sent by the SS.
   - for sub-test 5, 10, 15 and 20: no data shall be received on RB5.
   - for sub-test 1 to 4: no data shall be received on RB6.
   - for sub-test 5 to 9: an RLC SDU on RB6 having the same content as sent by the SS.
   - for sub-test 10, 11, 12, 15, 16, 17, 20, 21 and 22: an RLC SDU on RB5 having the same content as the first 576 bits of the RLC SDU sent by the SS.
   - For sub-test 3,8,13,18,23: an RLC SDU on RB5 having the content equal to the first 952 bits of the test data sent by the SS in downlink;
   - For sub-test 4,9,14,19,24: an RLC SDU on RB5 having the content equal to the first 1272 bits of the test data sent by the SS in downlink;

4. At step 15b the UE shall send at least one MEASUREMENT REPORT message.

## 18.1.3 Combinations on SCCPCH

### 18.1.3.1 Stand-alone signalling RB for PCCH

Impicitely tested.

NOTE The stand-alone signalling radio bearer for PCCH in TS 34.108, clause 6.11.5.4.4.1 is used in RRC test case 8.1.2.2.

### 18.1.3.2 Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.4.2.

This radio bearer configuration is tested with three different SYSTEM INFORMATION (BCCH) configurations:

1. The contents of System Information Block type 5 and 6 as specified in TS 34.108, clause 6.1.1.

   Two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 18.1.3.2.1.

2. The contents of System Information Block type 5 as specified in TS 34.108, clause 6.1.3.

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 18.1.3.2.2.

3. The contents of System Information Block type 5 and 6 as specified in TS 34.108, clause 6.1.2.

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

   This configuration is verified in test case 18.1.3.2.3.

#### 18.1.3.2.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

##### 18.1.3.2.1.1 Conformance requirement

See 18.1.2.4.1

##### 18.1.3.2.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.5.4.4.2 and 6.11.5.4.5.1 for the case when two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.5.4.5.1 (Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

##### 18.1.3.2.1.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.1.

Uplink TFS:

| | TFI | RB7+SRB (32kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x171 |
| | TF1, bits | 1x363 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | SRBs | RB7 (32 kbps) |
|---|---|---|---|
| TFS | TF0, bits | 0x171 | 0x363 |
| | TF1, bits | 1x171 | 1x363 |
| | TF2, bits | 2x171 | N/A |
| | | | |

Downlink TFCS:

| TFCI | (SRB, RB7) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| | |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | UL_TFC1, UL_TFC0 | RB7: 312 bits | RB7: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

See 18.1.1 for test procedure.

#### 18.1.3.2.1.4 Test Requirements

See 18.1.1 for definition of step 15

1. At step 15 the UE transmitted transport format shall be RB7/TF1 (1x363).
2. At step 15 the UE shall return an RLC SDU on RB7 having the same content as sent by SS

### 18.1.3.2.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.1.3.2.2.1 Conformance requirement

See 18.1.2.4

18.1.3.2.2.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.5.4.4.2 and 6.11.5.4.5.1 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.5.4.5.1 (Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

18.1.3.2.2.3 Method of Test

The contents of System Information Block type 5 shall be as specified in TS 34.108, clause 6.1.3.

Uplink TFS:

| | TFI | RB7+SRB (32kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x171 |
| | TF1, bits | 1x363 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | SRBs | RB7 (32 kbps) |
|---|---|---|---|
| TFS | TF0, bits | 0x171 | 0x363 |
| | TF1, bits | 1x171 | 1x363 |
| | TF2, bits | 2x171 | N/A |
| | | | |

Downlink TFCS:

| TFCI | (SRB, RB7) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| | |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | UL_TFC1, UL_TFC0 | RB7: 312 bits | RB7: 312 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit).

See 18.1.1 for test procedure.

#### 18.1.3.2.2.4 Test Requirements

See 18.1.1 for definition of step 15

1. At step 15 the UE transmitted transport format shall be RB7/TF1 (1x363).
2. At step 15 the UE shall return an RLC SDU on RB7 having the same content as sent by SS

### 18.1.3.2.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.1.3.2.3.1 Conformance requirement

See 18.1.2.4.1

#### 18.1.3.2.3.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.5.4.4.2 and 6.11.5.4.5.1 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.5.4.5.1 (Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.1.3.2.3.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.2.

Uplink TFS:

| | **TFI** | **RB7+SRB (32kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1x171 |
| | TF1, bits | 1x363 |

Uplink TFCS:

| **TFCI** | **RB7+SRB** |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | **SRBs** | **RB7 (32 kbps)** |
|---|---|---|---|
| TFS | TF0, bits | 0x171 | 0x363 |
| | TF1, bits | 1x171 | 1x363 |
| | TF2, bits | 2x171 | N/A |
| | | | |

Downlink TFCS:

| TFCI | (SRB, RB7) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC3 | UL_TFC1 | DL_TFC0, UL_TFC0 | UL_TFC1, UL_TFC0 | RB7: 312 bits | RB7: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

See 18.1.1 for test procedure.

#### 18.1.3.2.3.4 Test Requirements

See 18.1.1 for definition of step 15

1. At step 15 the UE transmitted transport format shall be RB7/TF1 (1x363).
2. At step 15 the UE shall return an RLC SDU on RB7 having the same content as sent by SS

### 18.1.3.3 Interactive/Background 32 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH

#### 18.1.3.3.1 Conformance requirement

See 18.1.2.4

#### 18.1.3.3.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.5.4.4.3 and 6.11.5.4.5.1 for the case when one SCCPCH is used in this SYSTEM INFORMATION (BCCH) configuration. The SCCPCH carries the PCH, the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.5.4.5.1 (Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.1.3.3.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.

Uplink TFS:

| | TFI | RB8 (32kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x171 |
| | TF1, bits | 1x363 |

Uplink TFCS:

| TFCI | RB8 |
|---|---|
| UL_TFC0 | TF0 |
| UL_TFC1 | TF1 |

Downlink TFS:

| | | PCCH | SRBs | RB8 (32 kbps) |
|---|---|---|---|---|
| TFS | TF0, bits | 0x240 | 0x171 | 0x363 |
| | TF1, bits | 1x240 | 1x171 | 1x363 |
| | TF2, bits | N/A | 2x171 | N/A |
| | | | | |

Downlink TFCS:

| TFCI | (PCCH, SRB, RB8) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF0, TF1, TF0) |
| DL_TFC3 | (TF1, TF1, TF0) |
| DL_TFC4 | (TF0, TF2, TF0) |
| DL_TFC5 | (TF1, TF2, TF0) |
| DL_TFC6 | (TF0, TF0, TF1) |
| DL_TFC7 | (TF0, TF1, TF1) |
| | |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC6 | UL_TFC1 | DL_TFC0, UL_TFC0 | UL_TFC1, UL_TFC0 | RB8: 312 bits | RB8: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size paramater has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

See 18.1.1 for test procedure.

#### 18.1.3.3.4 Test requirements

See 18.1.1 for definition of step 15

1. At step 15 the UE transmitted transport format shall be RB8/TF1 (1x360).
2. At step 15 the UE shall return an RLC SDU on RB8 having the same content as sent by SS

### 18.1.3.4 64.8kbps RB for MTCH with 40 ms TTI

#### 18.1.3.4.1 Conformance Requirement

The UE shall correctly receive user data on the MTCH from the peer to peer RLC entitity according to the configured MTCH.

Reference(s)

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

3GPP TS 25.331 (RRC)

#### 18.1.3.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.4.5.

#### 18.1.3.4.3 Method of Test

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (64.8 kbps) |
|---|---|---|
| TFS | TF0, bits | 0x665 |
| | TF1, bits | 1x665 |
| | TF2, bits | 2x665 |
| | TF3, bits | 3x665 |
| | TF4, bits | 4x665 |

Downlink TFCS:

| TFCI | RB for MTCH (64.8 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.1.3.4.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

## 18.1.3.5 129.6 kbps RB for MTCH with 40 ms TTI

### 18.1.3.5.1 Conformance Requirement

See 18.1.3.4.1.

### 18.1.3.5.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.4.6.

### 18.1.3.5.3 Method of Test

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (129.6 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x665 |
| | TF1, bits | 1x665 |
| | TF2, bits | 2x665 |
| | TF3, bits | 3x665 |
| | TF4, bits | 4x665 |
| | TF5, bits | 5x665 |
| | TF6, bits | 6x665 |
| | TF7, bits | 7x665 |
| | TF8, bits | 8x665 |

Downlink TFCS:

| TFCI | RB for MTCH (129.6 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.1.3.5.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

### 18.1.3.6 259.2 kbps RB for MTCH with 40 ms TTI

#### 18.1.3.6.1 Conformance Requirement

See 18.1.3.4.1.

#### 18.1.3.6.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.4.7.

#### 18.1.3.6.3 Method of Test

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (259.2 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x665 |
| | TF1, bits | 1x665 |
| | TF2, bits | 2x665 |
| | TF3, bits | 3x665 |
| | TF4, bits | 4x665 |
| | TF5, bits | 5x665 |
| | TF6, bits | 6x665 |
| | TF7, bits | 7x665 |
| | TF8, bits | 8x665 |
| | TF9, bits | 9x665 |
| | TF10, bits | 10x665 |
| | TF11, bits | 11x665 |
| | TF12, bits | 12x665 |
| | TF13, bits | 13x665 |
| | TF14, bits | 14x665 |
| | TF15, bits | 15x665 |
| | TF16, bits | 16x665 |

Downlink TFCS:

| TFCI | RB for MTCH (259.2 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |
| DL_TFC9 | (TF9) |
| DL_TFC10 | (TF10) |
| DL_TFC11 | (TF11) |
| DL_TFC12 | (TF12) |
| DL_TFC13 | (TF13) |
| DL_TFC14 | (TF14) |
| DL_TFC15 | (TF15) |
| DL_TFC16 | (TF16) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| 9 | DL_TFC9 | DL_TFC0 | 5824 |
| 10 | DL_TFC10 | DL_TFC0 | 6472 |
| 11 | DL_TFC11 | DL_TFC0 | 7120 |
| 12 | DL_TFC12 | DL_TFC0 | 7768 |
| 13 | DL_TFC13 | DL_TFC0 | 8416 |
| 14 | DL_TFC14 | DL_TFC0 | 9064 |
| 15 | DL_TFC15 | DL_TFC0 | 9712 |
| 16 | DL_TFC16 | DL_TFC0 | 10360 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

### 18.1.3.6.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

## 18.1.4 Combinations on PRACH

### 18.1.4.1 Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH

The reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.5.1 is implicitely tested by the test cases 18.1.3.2.1, 18.1.3.2.2, 18.1.3.2.3 and 18.1.3.3.

## 18.1.5 Combinations on DPCH and HS-PDSCH

### 18.1.5.1 Interactive or background / UL:8 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5)

#### 18.1.5.1.1 Conformance requirement

The mapping of transport block size, in bits, to TFRI value is dependent upon the UE's HS-DSCH capability class.

**Table 18.1.5.1.1: HS-DSCH physical layer and RLC and MAC-hs parameters for 1.28 Mcps TDD HS-DSCH physical layer categories**

| HS-DSCH category | Maximum number of HS-DSCH codes per timeslot | Maximum number of HS-DSCH timeslots per TTI | Maximum number of HS-DSCH transport channel bits that can be received within an HS-DSCH TTI | Total number of soft channel bits | Maximum number of AM RLC entities | Minimum total RLC AM and MAC-hs buffer size [kBytes] |
|---|---|---|---|---|---|---|
| UE Category 1 | 12 | 5 | 7008 | 28160 | 6 | 50 |
| UE Category 2 | 12 | 5 | 7008 | 56320 | 6 | 50 |
| UE Category 3 | 12 | 5 | 7008 | 84480 | 6 | 50 |
| UE Category 4 | 16 | 5 | 7008 | 28160 | 6 | 50 |
| UE Category 5 | 16 | 5 | 7008 | 56320 | 6 | 50 |
| UE Category 6 | 16 | 5 | 7008 | 84480 | 6 | 50 |
| UE Category 7 | 12 | 5 | 10204 | 40944 | 6 | 50 |
| UE Category 8 | 12 | 5 | 10204 | 81888 | 6 | 50 |
| UE Category 9 | 12 | 5 | 10204 | 122832 | 6 | 50 |
| UE Category 10 | 16 | 5 | 10204 | 40944 | 6 | 50 |
| UE Category 11 | 16 | 5 | 10204 | 81888 | 6 | 50 |
| UE Category 12 | 16 | 5 | 10204 | 122832 | 6 | 50 |
| UE Category 13 | 16 | 5 | 14043 | 56320 | 6 | 100 |
| UE Category 14 | 16 | 5 | 14043 | 112640 | 6 | 100 |
| UE Category 15 | 16 | 5 | 14043 | 168960 | 6 | 100 |

If $k$ is the signalled TFRI value then the corresponding HS-DSCH transport block size $L_k$ is given by:

If $k$ = 1..62

$$L_k = \lfloor L_{\min} p^{k-1} \rfloor$$

where

$p = \frac{6214}{5973}$ if the HS-DSCH physical layer category is between 1 and 3 inclusively,

$p = \frac{1292}{1228}$ if the HS-DSCH physical layer category is between 4 and 6 inclusively,

$p = \frac{1901}{1795}$ if the HS-DSCH physical layer category is between 7 and 9 inclusively,

$p = \frac{9445}{8877}$ if the HS-DSCH physical layer category is between 10 and 12 inclusively,

$p = \frac{2345}{2196}$ if the HS-DSCH physical layer category is between 13 and 15 inclusively,

and

$L_{\min} = 240$

If $k = 63$ then,

$L_k$ = 2788 if the HS-DSCH physical layer category is between 1 and 3 inclusively,

5600 if the HS-DSCH physical layer category is between 4 and 6 inclusively,

8416 if the HS-DSCH physical layer category is between 7 and 9 inclusively,

11226 if the HS-DSCH physical layer category is between 10 and 12 inclusively,

14043 if the HS-DSCH physical layer category is between 13 and 15 inclusively.

If $k$=0, $L_k$ indicates NULL and shall not be used to signal a transport block size in the TFRI.

Transport block sizes calculated by this formula shall equal the values indicated in the following tables: –

**Table 18.1.5.1.2: HSDPA Transport Block Sizes for 1.28 Mcps TDD, for HS-DSCH physical layer category [1, 3]**

| TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] |
|---|---|---|---|---|---|---|---|
| 0 | NULL | 16 | 434 | 32 | 817 | 48 | 1540 |
| 1 | 240 | 17 | 451 | 33 | 851 | 49 | 1602 |
| 2 | 249 | 18 | 470 | 34 | 885 | 50 | 1667 |
| 3 | 259 | 19 | 489 | 35 | 921 | 51 | 1734 |
| 4 | 270 | 20 | 508 | 36 | 958 | 52 | 1804 |
| 5 | 281 | 21 | 529 | 37 | 996 | 53 | 1877 |
| 6 | 292 | 22 | 550 | 38 | 1037 | 54 | 1952 |
| 7 | 304 | 23 | 572 | 39 | 1078 | 55 | 2031 |
| 8 | 316 | 24 | 596 | 40 | 1122 | 56 | 2113 |
| 9 | 329 | 25 | 620 | 41 | 1167 | 57 | 2198 |
| 10 | 342 | 26 | 645 | 42 | 1214 | 58 | 2287 |
| 11 | 356 | 27 | 671 | 43 | 1263 | 59 | 2380 |
| 12 | 370 | 28 | 698 | 44 | 1314 | 60 | 2476 |
| 13 | 385 | 29 | 726 | 45 | 1367 | 61 | 2575 |
| 14 | 401 | 30 | 755 | 46 | 1423 | 62 | 2679 |
| 15 | 417 | 31 | 786 | 47 | 1480 | 63 | 2788 |

**Table 18.1.5.1.3: HSDPA Transport Block Sizes for 1.28 Mcps TDD, for HS-DSCH physical layer category [4, 6]**

| TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] |
|---|---|---|---|---|---|---|---|
| 0 | NULL | 16 | 514 | 32 | 1159 | 48 | 2613 |
| 1 | 240 | 17 | 541 | 33 | 1219 | 49 | 2749 |
| 2 | 252 | 18 | 569 | 34 | 1283 | 50 | 2893 |
| 3 | 265 | 19 | 598 | 35 | 1350 | 51 | 3043 |
| 4 | 279 | 20 | 630 | 36 | 1420 | 52 | 3202 |
| 5 | 294 | 21 | 662 | 37 | 1494 | 53 | 3369 |
| 6 | 309 | 22 | 697 | 38 | 1572 | 54 | 3544 |
| 7 | 325 | 23 | 733 | 39 | 1654 | 55 | 3729 |
| 8 | 342 | 24 | 772 | 40 | 1740 | 56 | 3924 |
| 9 | 360 | 25 | 812 | 41 | 1831 | 57 | 4128 |
| 10 | 379 | 26 | 854 | 42 | 1926 | 58 | 4343 |
| 11 | 398 | 27 | 899 | 43 | 2027 | 59 | 4570 |
| 12 | 419 | 28 | 946 | 44 | 2132 | 60 | 4808 |
| 13 | 441 | 29 | 995 | 45 | 2244 | 61 | 5058 |
| 14 | 464 | 30 | 1047 | 46 | 2361 | 62 | 5322 |
| 15 | 488 | 31 | 1101 | 47 | 2484 | 63 | 5600 |

**Table 18.1.5.1.4: HSDPA Transport Block Sizes for 1.28 Mcps TDD, for HS-DSCH physical layer category [7, 9]**

| TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] |
|---|---|---|---|---|---|---|---|
| 0 | NULL | 16 | 567 | 32 | 1421 | 48 | 3559 |
| 1 | 240 | 17 | 601 | 33 | 1505 | 49 | 3769 |
| 2 | 254 | 18 | 636 | 34 | 1594 | 50 | 3991 |
| 3 | 269 | 19 | 674 | 35 | 1688 | 51 | 4227 |
| 4 | 285 | 20 | 713 | 36 | 1787 | 52 | 4477 |
| 5 | 301 | 21 | 756 | 37 | 1893 | 53 | 4741 |
| 6 | 319 | 22 | 800 | 38 | 2005 | 54 | 5021 |
| 7 | 338 | 23 | 848 | 39 | 2123 | 55 | 5318 |
| 8 | 358 | 24 | 898 | 40 | 2249 | 56 | 5632 |
| 9 | 379 | 25 | 951 | 41 | 2383 | 57 | 5964 |
| 10 | 402 | 26 | 1007 | 42 | 2522 | 58 | 6317 |
| 11 | 425 | 27 | 1066 | 43 | 2671 | 59 | 6690 |
| 12 | 451 | 28 | 1129 | 44 | 2829 | 60 | 7085 |
| 13 | 477 | 29 | 1196 | 45 | 2996 | 61 | 7503 |
| 14 | 505 | 30 | 1267 | 46 | 3173 | 62 | 7946 |
| 15 | 535 | 31 | 1341 | 47 | 3360 | 63 | 8416 |

**Table 18.1.5.1.5: HSDPA Transport Block Sizes for 1.28 Mcps TDD, for HS-DSCH physical layer category [10, 12]**

| TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] |
|---|---|---|---|---|---|---|---|
| 0 | NULL | 16 | 608 | 32 | 1641 | 48 | 4427 |
| 1 | 240 | 17 | 647 | 33 | 1746 | 49 | 4711 |
| 2 | 255 | 18 | 688 | 34 | 1858 | 50 | 5012 |
| 3 | 271 | 19 | 732 | 35 | 1977 | 51 | 5333 |
| 4 | 289 | 20 | 779 | 36 | 2103 | 52 | 5674 |
| 5 | 307 | 21 | 829 | 37 | 2238 | 53 | 6037 |
| 6 | 327 | 22 | 882 | 38 | 2381 | 54 | 6424 |
| 7 | 348 | 23 | 939 | 39 | 2533 | 55 | 6835 |
| 8 | 370 | 24 | 999 | 40 | 2695 | 56 | 7272 |
| 9 | 394 | 25 | 1063 | 41 | 2868 | 57 | 7737 |
| 10 | 419 | 26 | 1131 | 42 | 3051 | 58 | 8232 |
| 11 | 446 | 27 | 1203 | 43 | 3247 | 59 | 8759 |
| 12 | 474 | 28 | 1280 | 44 | 3455 | 60 | 9320 |
| 13 | 505 | 29 | 1362 | 45 | 3676 | 61 | 9916 |
| 14 | 537 | 30 | 1449 | 46 | 3911 | 62 | 10550 |
| 15 | 571 | 31 | 1542 | 47 | 4161 | 63 | 11226 |

**Table 18.1.5.1.6: HSDPA Transport Block Sizes for 1.28 Mcps TDD, for HS-DSCH physical layer category [13,15]**

| TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] |
|---|---|---|---|---|---|---|---|
| 0 | NULL | 16 | 642 | 32 | 1836 | 48 | 5250 |
| 1 | 240 | 17 | 686 | 33 | 1961 | 49 | 5606 |
| 2 | 256 | 18 | 732 | 34 | 2094 | 50 | 5987 |
| 3 | 273 | 19 | 782 | 35 | 2236 | 51 | 6393 |
| 4 | 292 | 20 | 835 | 36 | 2388 | 52 | 6827 |
| 5 | 312 | 21 | 892 | 37 | 2550 | 53 | 7290 |
| 6 | 333 | 22 | 952 | 38 | 2723 | 54 | 7785 |
| 7 | 355 | 23 | 1017 | 39 | 2908 | 55 | 8313 |
| 8 | 380 | 24 | 1086 | 40 | 3105 | 56 | 8877 |
| 9 | 405 | 25 | 1160 | 41 | 3316 | 57 | 9479 |
| 10 | 433 | 26 | 1238 | 42 | 3541 | 58 | 10123 |
| 11 | 462 | 27 | 1322 | 43 | 3781 | 59 | 10809 |
| 12 | 494 | 28 | 1412 | 44 | 4037 | 60 | 11543 |
| 13 | 527 | 29 | 1508 | 45 | 4311 | 61 | 12326 |
| 14 | 563 | 30 | 1610 | 46 | 4604 | 62 | 13162 |
| 15 | 601 | 31 | 1719 | 47 | 4916 | 63 | 14056 |

Reference(s)

3GPP TS 25.321, 9.2.3.1 and Annex A

### 18.1.5.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.1.

### 18.1.5.1.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

Uplink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 4 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

### 18.1.5.1.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

## 18.1.5.1a Interactive or background / UL:8 (multiframe) DL: [max bit rate depending on UE category] / PS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH (multiframe) (REL-5)

### 18.1.5.1a.1 Conformance requirement

See clause 18.1.5.1.1.

### 18.1.5.1a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.1a.

### 18.1.5.1a.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 4 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 2 | 1 | 4 | 512 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

### 18.1.5.1a.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in

downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

### 18.1.5.2 Interactive or background / UL:16 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5)

#### 18.1.5.2.1 Conformance requirement

See clause 18.1.5.1.1.

#### 18.1.5.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.2.

#### 18.1.5.2.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 4 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 2 | 1 | 4 | 512 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

### 18.1.5.2.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in

downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

## 18.1.5.2a Interactive or background / UL:16(multiframe) DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH(multiframe) (REL-5)

### 18.1.5.2a.1 Conformance requirement

See clause 18.1.5.1.1.

### 18.1.5.2a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.2a.

### 18.1.5.2a.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 4 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 2 | 1 | 4 | 512 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 3 | 1 | 4 | 512 | 128 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 4 | 1 | 4 | 512 | 128 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.1.5.2a.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (3x336).
   - for sub-test 4: TF4 (4x336).
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

### 18.1.5.3 Interactive or background / UL:32 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5)

#### 18.1.5.3.1 Conformance requirement

See clause 18.1.5.1.1.

#### 18.1.5.3.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.3.

#### 18.1.5.3.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 4 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 2 | 1 | 4 | 512 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

### 18.1.5.3.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 18 the UE transmitted transport format shall be

   - for sub-test 1: TF1 (1x336).

   - for sub-test 2: TF2 (2x336).

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

## 18.1.5.3a Interactive or background / UL:32(multiframe) DL: [max bit rate depending on UE category] / PS RAB +UL:3.4 DL:3.4 kbps SRBs for DCCH(multiframe) (REL-5)

### 18.1.5.3a.1 Conformance requirement

See clause 18.1.5.1.1.

### 18.1.5.3a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.3a.

### 18.1.5.3a.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 4 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 2 | 1 | 4 | 512 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 3 | 1 | 4 | 512 | 128 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 4 | 1 | 4 | 512 | 128 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.1.5.3a.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (4x336).
   - for sub-test 4: TF4 (8x336).
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

### 18.1.5.4 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5)

#### 18.1.5.4.1 Conformance requirement

See 18.1.5.1.1

#### 18.1.5.4.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.4.

#### 18.1.5.4.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 4 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 2 | 1 | 4 | 512 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 3 | 1 | 4 | 512 | 128 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 4 | 1 | 4 | 512 | 128 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.1.5.4.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (3x336).
   - for sub-test 4: TF4 (4x336).
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

### 18.1.5.5 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5)

#### 18.1.5.5.1 Conformance requirement

See 18.1.5.1.1.

#### 18.1.5.5.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.5.

#### 18.1.5.5.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 4 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 2 | 1 | 4 | 512 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 3 | 1 | 4 | 512 | 128 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |
| 4 | 1 | 4 | 512 | 128 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 |
| | 2 | 6 | 512 | 256 | | | | | |
| | 3 | 8 | 512 | 512 | | | | | |
| | 4 | 4 | 512 | 128 | | | | | |
| | 5 | 6 | 512 | 256 | | | | | |
| | 6 | 8 | 512 | 512 | | | | | |
| | 7 | 4 | 512 | 128 | | | | | |
| | 8 | 6 | 512 | 256 | | | | | |
| | 9 | 8 | 512 | 512 | | | | | |
| | 10 | 4 | 512 | 128 | | | | | |
| | 11 | 6 | 512 | 256 | | | | | |

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | 12 | 8 | 512 | 512 | | | | | |
| | 13 | 4 | 512 | 128 | | | | | |
| | 14 | 6 | 512 | 256 | | | | | |
| | 15 | 8 | 512 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.1.5.5.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (4x336).
   - for sub-test 4: TF4 (8x336).
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

### 18.1.5.6 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:32 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5)

#### 18.1.5.6.1 Conformance requirement

See 18.1.5.1.1.

#### 18.1.5.6.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.5.

#### 18.1.5.6.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (32 kbps) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:32 kbps radio bearer (RB8) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB8 and for the different speech transport formats are: UL_TFC4 for TF1, UL_TFC8 for TF2, UL_TFC11 for TF3 and UL_TFC13 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 256 | 336 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 2 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 6 | 512 | 256 | | | | | | | |
| | 6 | 6 | 512 | 256 | | | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | | | |
| | 11 | 3 | 512 | 256 | | | | | | | |
| | 12 | 6 | 512 | 256 | | | | | | | |
| 2 | 1 | 2 | 256 | 256 | 656 | DL_TFC2 | UL_TFC8 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 2 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 6 | 256 | 256 | | | | | | | |
| | 6 | 6 | 256 | 256 | | | | | | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 3 | 256 | 256 | | | | | | | |
| | 12 | 6 | 256 | 256 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | DL_TFC2 | UL_TFC11 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC15, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 8 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 256 | | | | | | | |
| | 12 | 8 | 512 | 256 | | | | | | | |

| | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC13 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 8 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 256 | 256 | | | | | | | |
| | 12 | 8 | 256 | 256 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.1.5.6.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

### 18.1.5.7 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (REL-5)

#### 18.1.5.7.1 Conformance requirement

See 18.1.5.1.1.

#### 18.1.5.7.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.7.

#### 18.1.5.7.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20ms) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB8) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB8 and for the different speech transport formats are: UL_TFC4 for TF1, UL_TFC8 for TF2, UL_TFC11 for TF3 and UL_TFC13 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 256 | 336 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 2 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 6 | 512 | 256 | | | | | | | |
| | 6 | 6 | 512 | 256 | | | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | | | |
| | 11 | 3 | 512 | 256 | | | | | | | |
| | 12 | 6 | 512 | 256 | | | | | | | |
| 2 | 1 | 2 | 256 | 256 | 656 | DL_TFC2 | UL_TFC8 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 2 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 6 | 256 | 256 | | | | | | | |
| | 6 | 6 | 256 | 256 | | | | | | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 3 | 256 | 256 | | | | | | | |
| | 12 | 6 | 256 | 256 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | DL_TFC2 | UL_TFC11 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC15, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 8 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 256 | | | | | | | |
| | 12 | 8 | 512 | 256 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC13 | DL_TFC0, | UL_TFC0, | RB5: 39 | RB5: 39 |

| | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 8 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 256 | 256 | | | | | | | |
| | 12 | 8 | 256 | 256 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.1.5.6.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

### 18.1.5.8 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.5.8.1 Conformance requirement

See 18.5.1.1.

#### 18.1.5.8.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.6.8.

#### 18.1.5.8.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 64 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF2, TF0) |
| UL_TFC5 | (TF1, TF2, TF0) |
| UL_TFC6 | (TF0, TF3, TF0) |
| UL_TFC7 | (TF1, TF3, TF0) |
| UL_TFC8 | (TF0, TF4, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF1, TF1) |
| UL_TFC14 | (TF0, TF2, TF1) |
| UL_TFC15 | (TF1, TF2, TF1) |
| UL_TFC16 | (TF0, TF3, TF1) |
| UL_TFC17 | (TF1, TF3, TF1) |
| UL_TFC18 | (TF0, TF4, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB6) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3 and UL_TFC9 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 512 | 256 | 336 | DL_TFC1 | UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 2 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 6 | 512 | 256 | | | | | | | |
| | 6 | 6 | 512 | 256 | | | | | | | |
| | 7 | 6 | 1536 | 512 | | | | | | | |
| | 8 | 6 | 1536 | 512 | | | | | | | |
| | 9 | 6 | 2047 | 512 | | | | | | | |
| | 10 | 6 | 2047 | 512 | | | | | | | |
| | 11 | 3 | 512 | 256 | | | | | | | |
| | 12 | 6 | 512 | 256 | | | | | | | |
| 2 | 1 | 2 | 256 | 256 | 656 | DL_TFC1 | UL_TFC5 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 2 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 6 | 256 | 256 | | | | | | | |
| | 6 | 6 | 256 | 256 | | | | | | | |
| | 7 | 6 | 512 | 512 | | | | | | | |
| | 8 | 6 | 512 | 512 | | | | | | | |
| | 9 | 6 | 1024 | 512 | | | | | | | |
| | 10 | 6 | 1024 | 1024 | | | | | | | |
| | 11 | 3 | 256 | 256 | | | | | | | |
| | 12 | 6 | 256 | 256 | | | | | | | |
| 3 | 1 | 8 | 512 | 256 | 336 | DL_TFC1 | UL_TFC7 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC7, UL_TFC10, UL_TFC17 | RB5: 640<br>RB6: 952 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 8 | 512 | 256 | | | | | | | |
| | 3 | 8 | 512 | 256 | | | | | | | |
| | 4 | 8 | 512 | 256 | | | | | | | |
| | 5 | 8 | 512 | 256 | | | | | | | |
| | 6 | 8 | 512 | 256 | | | | | | | |
| | 7 | 8 | 1536 | 512 | | | | | | | |
| | 8 | 8 | 1536 | 512 | | | | | | | |
| | 9 | 8 | 2047 | 512 | | | | | | | |
| | 10 | 8 | 2047 | 1024 | | | | | | | |
| | 11 | 8 | 512 | 256 | | | | | | | |
| | 12 | 8 | 512 | 256 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC9 | DL_TFC0, | UL_TFC0, | RB5: 640 | RB5: 4x640 |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 2 | 8 | 256 | 256 | | | | DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC10, UL_TFC19 | RB6: 1272 | RB6: See note 4 |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | | | |
| | 10 | 8 | 1024 | 1024 | | | | | | | |
| | 11 | 8 | 256 | 256 | | | | | | | |
| | 12 | 8 | 256 | 256 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

#### 18.1.5.8.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

### 18.1.6.1 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH

#### 18.1.6.1.1 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

#### 18.1.6.1.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.7.2:

1. To verify that the UE is able to establish the radio bearer combination.
2. To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

#### 18.1.6.1.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | |
|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | TFRI |
| 1 | 4 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 2 | 6 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 3 | 8 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 4 | 4 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 5 | 6 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 6 | 8 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 7 | 4 | 1536 | 336 | 358 | 1 | QPSK | 8 |
| 8 | 6 | 1536 | 336 | 358 | 1 | QPSK | 8 |
| 9 | 8 | 2047 | 336 | 358 | 1 | QPSK | 8 |
| 10 | 4 | 2047 | 336 | 370 | 1 | QPSK | 8 |
| 11 | 6 | 1024 | 336 | 370 | 1 | QPSK | 8 |
| 12 | 8 | 1024 | 336 | 370 | 1 | QPSK | 8 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 14.1.3.3 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | |

The generic test procedure in 14.1.4.1 is run for each sub-test. Testing of UE supporting UE E-DCH physical layer category 6 shall be performed in accordance to test parameters, sub-tests and test points for UE HS-DSCH physical layer category 6. Testing of UE supporting UE HS-DSCH physical layer category 13 to 15 shall be performed in accordance to test parameters, sub-tests and test points for UE HS-DSCH physical layer category 10.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL RLC SDU size (note 2) | Test data size (note 3) |
|---|---|---|---|---|---|
| 1 | 1 to 6 | 5ms, Table 0 | 4 | 312 | 312 |
| NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.<br>NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested. | | | | | |

18.1.6.1.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU with same content as sent in downlink.

## 18.1.6.1a Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH/ UL 16QAM

18.1.6.1a.1 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

### 18.1.6.1a.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.7.2:

1. To verify that the UE is able to establish the radio bearer combination.
2. To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

### 18.1.6.1a.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| **6** | **1536** |

| **HS-DSCH Category** | **HS-PDSCH Number of HARQ processes** | **RLC Receiving window size** | **HS-PDSCH TFRC (note 1)** | | | | |
|---|---|---|---|---|---|---|---|
| | | | **Max MAC-d PDU size** | **Minimum TBS** | **Number of MAC-d PDUs** | **Modulation scheme** | **TFRI** |
| 1 | 4 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 2 | 6 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 3 | 8 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 4 | 4 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 5 | 6 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 6 | 8 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 7 | 4 | 1536 | 336 | 358 | 1 | QPSK | 8 |
| 8 | 6 | 1536 | 336 | 358 | 1 | QPSK | 8 |
| 9 | 8 | 2047 | 336 | 358 | 1 | QPSK | 8 |
| 10 | 4 | 2047 | 336 | 370 | 1 | QPSK | 8 |
| 11 | 6 | 1024 | 336 | 370 | 1 | QPSK | 8 |
| 12 | 8 | 1024 | 336 | 370 | 1 | QPSK | 8 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 14.1.3.3 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | |

The generic test procedure in 14.1.4.1 is run for each sub-test. Testing of UE supporting UE HS-DSCH physical layer category 13 to 15 shall be performed in accordance to test parameters, sub-tests and test points for UE HS-DSCH physical layer category 10.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL RLC SDU size (note 2 &4) | Test data size (note 3) |
|---|---|---|---|---|---|
| 1 | 6 | 5ms, Table 0 | 8 | 7992 | 312 |
| NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.<br>NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.<br>NOTE 4: The UL RLC SDU size is calculated as 25*320-8= 7992, such that TB size 8455 corresponding to E-TFCI 103 will be selected. With PLnon-max = 0.84, [(8455+24[CRC] ) *3 [TC] ]= 25437 bits. 25437* PLnon-max =21367 , this guarantees as per algorithm in 25.222 clause 4.8.4.1,16QAM to be selected [$2\times M_2+2\times M_4$] | | | | | |

18.1.6.1a.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU with first 312 bits equal to the content of the DL RLC SDU sent by the SS.

## 18.1.6.2 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH

18.1.6.2.1 Conformance requirement

See 18.1.6.1.1.

18.1.6.2.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.7.3:

1. To verify that the UE is able to establish.teh radio bearer combination.
2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

18.1.6.2.3 Method of test

See 18.1.6.1.3.

18.1.6.2.4 Test requirements

See 18.1.6.1.4.

## 18.1.6.3 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH

18.1.6.3.1 Conformance requirement

See 18.1.6.1.1.

#### 18.1.6.3.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.7.4:

1. To verify that the UE is able to establish.teh radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

#### 18.1.6.3.3 Method of test

See 18.1.6.1.3.

#### 18.1.6.3.4 Test requirements

See 18.1.6.1.4.

### 18.1.6.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.1.6.4.1 Conformance requirement

See 18.1.6.1.1.

#### 18.1.6.4.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.7.5:

1. To verify that the UE is able to establish the radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH in combination with the possible TFCI of the conversional speech radio bearer.

#### 18.1.6.4.3 Method of test

The following parameters are specific for this test case:

Uplink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | |
|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | TFRI |
| 1 | 4 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 2 | 6 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 3 | 8 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 4 | 4 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 5 | 6 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 6 | 8 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 7 | 4 | 1536 | 336 | 358 | 1 | QPSK | 8 |
| 8 | 6 | 1536 | 336 | 358 | 1 | QPSK | 8 |
| 9 | 8 | 2047 | 336 | 358 | 1 | QPSK | 8 |
| 10 | 4 | 2047 | 336 | 370 | 1 | QPSK | 8 |
| 11 | 6 | 1024 | 336 | 370 | 1 | QPSK | 8 |
| 12 | 8 | 1024 | 336 | 370 | 1 | QPSK | 8 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 14.1.3.3 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | |

The generic test procedure in 14.1.4.1 is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | DCH | | | | UL RLC SDU size (note 3) | Test data size (note 4) |
|---|---|---|---|---|---|---|---|---|---|
| | | | | DL TFCS Under test | UL TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | | |
| 1 | 1 to 6 | 5ms, Table 0 | 4 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 2 | 1 to 6 | 5ms, Table 0 | 4 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.
NOTE 4: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.

#### 18.1.6.4.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the sub-test.
3. At step 18 and for each radio bearer where test data is sent in downlink the UE shall return a RLC SDU with same content as sent in downlink. For radio bearers where no data is sent in downlink then no data shall be received in uplink.

### 18.1.6.5 Streaming or interative or background / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH

#### 18.1.6.5.1 Conformance requirement

See 18.1.6.1.1.

#### 18.1.6.5.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.11.5.4.7.7:

1. To verify that the UE is able to establish the radio bearer combination.
2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

#### 18.1.6.5.3 Method of test

The first Streaming or background or interactive / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is refered to as RB5 and the second Streaming or interactive or background UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is referred to RB6.

The following parameters are specific for this test case and RB5 and RB6:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | |
|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | TFRI |
| 1 | 4 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 2 | 6 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 3 | 8 | 512 | 336 | 370 | 1 | QPSK | 12 |
| 4 | 4 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 5 | 6 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 6 | 8 | 512 | 336 | 360 | 1 | QPSK | 9 |
| 7 | 4 | 1536 | 336 | 358 | 1 | QPSK | 8 |
| 8 | 6 | 1536 | 336 | 358 | 1 | QPSK | 8 |
| 9 | 8 | 2047 | 336 | 358 | 1 | QPSK | 8 |
| 10 | 4 | 2047 | 336 | 370 | 1 | QPSK | 8 |
| 11 | 6 | 1024 | 336 | 370 | 1 | QPSK | 8 |
| 12 | 8 | 1024 | 336 | 370 | 1 | QPSK | 8 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 14.1.3.3 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | |

The generic test procedure in 14.1.4.1 is run for each sub-test.

Sub-tests:

| Sub-test | E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|
| 1 | 1 to 6 | 5ms, Table 0 | 4 | RB5:312<br>RB6:312 | RB5:312<br>RB6:312 |
| NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.<br>NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested. | | | | | |

### 18.1.6.5.4 Test requirements

See 14.1.4.1 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU on RB5 and RB6 with same content as sent in downlink.

# 18.2 Radio Bearer Tests for 3.84 Mcps TDD option

## 18.2.1 General information for radio bearer tests (3.84 Mcps TDD)

The purpose of these radio bearer test cases is to test properly the Reference Radio Bearer configurations included in TS34.108 [9], clause 6.10.3 for 3.84 Mcps TDD option.

The applicability of radio bearer tests is dependent on the UE uplink and downlink radio access capabilities and UE support tele- and bearer-services.

For radio bearer combinations which are representative to multiple traffic classes, such as “Interactive or Background”, “Streaming or Interactive or Background” etc, then it is only required to execute the radio bearer test procedure once using one of the applicable traffic class for the UE under test.

NOTE As the purpose of the radio bearer test cases is to functionally verify that the UE is able to establish the radio bearer combination, and to verify correct data transfer using the different transport formats, then the necessary test coverage is achieved by perfoming the radio bearer test procedure once for one of the applicable traffic classes.

### 18.2.1.1 Generic radio bearer test procedure for Single RB configuration

See 14.1.1 for test procedure

### 18.2.1.2 Generic test procedure for testing multi-RB configuration and simultaneous signalling

See 14.1.2 for test procedure

### 18.2.1.2a Generic test procedure for testing multi-RB combinations and simultaneous signalling in case of DSCH

This procedure is used to test multiple radio bearer combinations where PS data goes on the DSCH. This procedure is also used to verify simultaneous transmission and reception of user data and signalling data.

#### 18.2.1.2a.1 Initial conditions

UE in idle mode

#### 18.2.1.2a.2 Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test. For the case when the reference radio bearer configuration includes radio bearers for both CS and PS domain then the radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s), also the transport format combination set for only CS radio bearers has to be provided. The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers.

b) The SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. Here first time only the TFCs for the data on CS RAB and the data on PS RAB are restricted.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 1.

d) The SS transmits test data on all radio bearers under test. The number of RLC SDUs to transmit every TTI and the size "Test data size" is specified for each sub-test of the actual radio bearer test. See note 2.

e) The SS checks that UE has looped back the data on the CS and PS Radio bearer.

f) The SS opens the UE test loop.

g) SS uses the RRC transport format combination control procedure. And now restricts the TFCs for the data on CS RAB and the data on PS RAB and also on SRB.

h) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 2.

i) SS transmit data on the CS RAB a MEASUREMENT CONTROL message requesting periodic reporting with a period of T2.

j) SS transmits the data on PS RAB.

k) SS waits the time equal to 2 times T2

l) SS checks that, for all radio bearers under test, the content of the received RLC SDUs have the correct content and is received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loop back of RLC SDUs.

m) The SS opens the UE test loop.

n) (Void)

o) Steps b) to m) are repeated for all sub-tests

p) The SS may optionally release the radio bearer.

q) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: Selection of UL RLC SDU size parameter:
For the case when the reference radio bearer configuration under test uses RLC transparent mode in downlink and is not configured for segmented operation then the radio bearer test case shall set the UL RLC SDU size equal to the UL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transparent mode. Selection of UL RLC SDU size for the different radio bearers under test should be such that the UE returns data in sub-sequent TTIs without causing the UE transmission buffer to become full. To achieve this the UL RLC SDU size shall be set to UL TF payload size under test, minus the size of length indicator and expansion bit, and divided by the ratio between downlink and uplink TTI. E.g. for a AM radio bearer having the uplink RLC payload size equal to 320, the downlink TTI equal to 10 ms, and the uplink TTI equal to 20 ms, then for the transport format 4x336 (TF payload size = 4x320=1280 bits) the UL RLC SDU size parameter should be set to 632 bits (=1280bits/(20ms/10ms)- 8 bits).

NOTE 2: Selection of test data size:
For the case when the reference radio bearer configuration under test uses RLC transparent mode in downlink and is not configured for segmented operation then the radio bearer test case shall use a DL RLC SDU size (defined by the "Test data size" parameter) equal to the DL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transparent mode. In case the reference radio bearer configuration under test does not use RLC transparent mode in downlink, the DL RLC SDU size/ test data size shall be set equal to the payload size of the DL TF under test minus the size of the length indicator and the expansion bit.

NOTE 3: The restricted set of TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signalling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

Expected sequence

**CS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | PAGING RESPONSE (DCCH) | RR |
| 6a | <-- | | AUTHENTICATION REQUEST | |
| 6b | --> | | AUTHENTICATION RESPONSE | |
| 6c | <-- | | SECURITY MODE COMMAND | |
| 6d | --> | | SECURITY MODE COMPLETE | |

**PS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6a | --> | | SERVICE REQUEST (DCCH) | GMM |
| 6b | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 6c | --> | | SECURITY MODE COMPLETE | RRC see note 1 |

NOTE 1 In addition to activate integrity protection Step 6b and Step 6c are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Expected sequence for DSCH multi RAB test cases.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1..6 | <-- --> | | Paging | Use the CS paging procedure for testing of CS and combined CS/PS reference radio bearer configurations.<br><br>Use the PS paging procedure for testing of PS reference radio bearer configurations. |
| 7 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 8 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| **Case A: CS or PS radio bearers only** | | | | |
| A9 | ← | | RADIO BEARER SETUP (DCCH) | RRC |
| A10 | → | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **Case B: CS + PS radio bearers** | | | | |
| B9 | ← | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured |
| B10 | → | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B10a | ← | | SECURITY MODE COMMAND | See NOTE |
| B10b | → | | SECURITY MODE COMPLETE | RRC |
| B10c | ← | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured |
| B10c | → | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 11 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations are limited to "Restricted UL TFCIs", as specified for the sub-test. Here the UL TFS are restricted to test the simultaneous data on CS and PS RAB. |
| 12 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 13 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 14a | <-- | | Test data (DTCH 1) and Test data on DTCH 2 | SS Sends the data on the CS RAB (DPCH).SS Sends the data on the PS RAB .(PDSCH)<br>(NOTE 1) |
| 14b | → | | Test data (DTCH 1) + Test Data (DTCH 2) | SS Receives the data on CS RAB, PS RAB |
| 14c | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 14d | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 15a | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test<br>Here the UL TFS are restricted to test the simultaneous data on CS and PS RAB and SRB |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 15b | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 15c | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15d | <-- | | Test data (DTCH 1) and Test data on DTCH 2 | SS Sends the data on the CS RAB (DPCH). SS Sends the data on the PS RAB. (PDSCH)<br>(NOTE 1) |
| 15e | ← | | MEASUREMENT CONTROL (DCCH) | SS sends a MEASUREMENT CONTROL message simultaneously to the test data requesting periodic reporting at interval T2<br>(NOTE 1) |
| 15f | --><br><br>--> | | Test data (DTCH 1) + Test Data (DTCH 2)<br><br>MEASUREMENT REPORT (DCCH) | SS Receives the data on CS RAB, PS RAB and the Measurement Control Report.<br>SS Shall get at least on measurement Control report.message<br>(NOTE 1) |
| 16 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 17 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 18 | | | Repeat steps 11 to 17 for every sub-test. | |
| 19 | | | RB RELEASE (DCCH) | RRC<br>Optional step |
| 20 | <-- | | DEACTIVATE RB TEST MODE (DCCH) | TC<br>Optional step |
| 21 | --> | | DEACTIVATE RB TEST MODE COMPLETE (DCCH) | TC<br>Optional step |
| NOTE: For case B (CS+PS radio bearers) the second security mode procedure is needed to enable testing of ciphering on the PS radio bearers. For the CS domain the security mode procedure is performed as part of the CS paging procedure. | | | | |

NOTE 1:

Here using the test steps 11 to 14d, the simultaneous data on the CS and PS RAB can be tested.

And using the steps 15a to 15f, the simultaneous data on CS RAB, PS RAB and SRB can be tested.

For testing the simultaneous data on CS RAB, PS RAB and SRB, following procedure is used.

First data on the CS RAB is sent. Then in the next step Measurement Control message is sent.

In the Downlink the restricted transport format combination will be (1 1), that SS MAC has to send the data on CS RAB and the measurement control message on SRB simultaneously.

Here it is assumed that, since the transport format combination (1, 0) (that is send only data) will not be available in the DL, the MAC has to wait until it gets something to transmit on the SRB.

Then data on the PS RAB is sent.

With this on the UE UL Side, the data will be available on both CS and PS RAB and also on the SRB. With this the transport format combination (1,1, 1) that is simultaneous data on RAB and SRB can be tested in the uplink.

Specific message contents

RADIO BEARER SETUP message: AM or UM (Packet to CELL_DCH from CELL_DCH in PS))

| Information Element | Value/remark |
|---|---|
| New DSCH-RNTI | 0000 0000 0000 0010B |
| RRC State indicator | CELL_DCH |
| RAB information for setup | |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | 19 |
| - Logical channel identity | 1 |
| Added or Reconfigured TrCH information list | 1 DCH added, 1 DCH reconfigured |
| DL Transport channel information common for all transport channel | |
| - SCCPCH TFCS | Not Present |
| - CHOICE mode | TDD |
| - Individual DL CCTrCH information | This number is of which of multiple CCTrCHs as indicated in TS34.108 clause 6.10.3.4 Parameter Set |
| - DL TFCS Identity | TFCS ID 1 or 2 |
| - Shared Channel Indicator | FALSE |
| - CHOICE DL parameters | Independent |
| - DL TFCS | |
| - CHOICE TFCI signalling | Split |
| - Split Type | Normal |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS complete reconfigure | |
| - CHOICE CTFC Size | |
| - CTFC information | This IE is repeated for TFC numbers and reference to TS34.108 clause 6.10.3.4 |
| - CTFC | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Power offset information | Not present |
| Deleted TrCH information list | Not Present |
| Added or Reconfigured TrCH information list | |
| - Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | DSCH |
| - DL Transport channel identity | 19 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - DCH quality target | Not Present |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 10 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |

| Information Element | Value/remark |
|---|---|
| - UL TrCH identity | 5 |
| - DCH quality target | |
| - BLER Quality value | -2.0 |
| CHOICE channel requirement | Uplink DPCH info |
| - Uplink DPCH power control info | |
| - CHOICE Mode | TDD |
| - CHOICE TDD Option | 3.84 Mcps TDD |
| - UL target SIR | Not Present |
| -CHOICE UL OL PC info | Broadcast UL OL PC info (NULL) |
| - CHOICE mode | TDD |
| - Uplink Timing Advance Control | Not Present |
| - UL CCTrCH List | 1 or 2 Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - TFCS ID | 1 or 2 |
| - UL target SIR | 0.0 |
| - Timing info | |
| - Activation time | Now |
| - Duration | Infinite |
| - Common timeslot info | |
| - 2nd interleaver mode | Frame |
| - TFCI coding | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Puncturing limit | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Repetition period | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Repetition length | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Uplink DPCH timeslots and codes | |
| - Dynamic SF usage | FALSE |
| - First Individual timeslot info | |
| - Timeslot number | |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Timeslot number | (0..14) |
| - TFCI existence | TRUE |
| - Midamble Shift and burst type | |
| - Choice TDD option | 3.84 Mcps TDD |
| - Choice Burst Type | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Midamble Allocation Mode | Default midamble |
| - Midamble Configuration | 3 or 4 based on burst type |
| - CHOICE TDD option | 3.84 Mcps TDD (no data) |
| - First timeslot Code List | 1..2 |
| - Channelisation Code | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - CHOICE more timeslots | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - UL CCTrCH List to Remove | If this test has only 1 CCTrCH Reference to TS34.108 clause 6.10.3.4 Parameter Set. If 2 CCTrCH then “Not Present” |
| - TFCS ID | 2 |
| CHOICE Mode | TDD (no data) |
| Downlink information common for all radio links | |
| - Downlink DPCH info common for all RL | |
| - Timing indicator | Maintain |
| - CFN-targetSFN frame offset | Not Present |
| - Downlink DPCH power control information | |
| - CHOICE Mode | TDD |
| - TPC Step Size | 1 |
| - MAC-d HFN initial value | Bit String(24) |
| - CHOICE Mode | TDD (no data) |
| - CHOICE Mode | TDD (no data) |
| - CHOICE TDD option | 3.84 Mcps (no data) |
| - Default DPCH Offset Value | Not Present |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | |
| - Choice mode | TDD |
| - Primary CCPCH info | |
| - CHOICE Mode | TDD |
| - CHOICE TDD option | 3.84 Mcps |
| - CHOICE SyncCase | Sync Case 1 |
| - Timeslot | PCCPCH timeslot (0..14) |
| - Cell parameters ID | Same as cell (0..127) |
| - SCTD indicator | FALSE |

| Information Element | Value/remark |
|---|---|
| - Downlink DPCH info for each RL | |
| - CHOICE Mode | TDD |
| - DL CCTrCH List | 1 or 2 Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - TFCS ID | 1 or 2 |
| - Timing info | |
| - Activation time | Now |
| - Duration | Infinite |
| - Common timeslot info | |
| - 2nd interleaver mode | Frame |
| - TFCI coding | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Puncturing limit | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Repetition period | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Repetition length | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Downlink DPCH timeslots and codes | |
| - First Individual timeslot info | |
| - Timeslot number | |
| - CHOICE TDD option | 3.84 Mcps TDD |
| - Timeslot number | (0..14) |
| - TFCI existence | TRUE |
| - Midamble Shift and burst type | |
| - Choice TDD option | 3.84 Mcps TDD |
| - Choice Burst Type | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - Midamble Allocation Mode | Default midamble |
| - Midamble Configuration | 3 or 4 based on burst type |
| - CHOICE TDD option | 3.84 Mcps TDD (no data) |
| - First timeslot channelisation codes | |
| - CHOICE codes representation | Bitmap |
| - Channelisation codes bitmap | Bit string(16) Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - CHOICE more timeslots | Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - UL CCTrCH TPC List | 1 or 2 Reference to TS34.108 clause 6.10.3.4 Parameter Set |
| - UL TPC TFCS Identity | |
| - TFCS ID | 1 or 2 |
| - Shared Channel Indicator | FALSE |
| - UL CCTrCH List to Remove | If this test has only 1 CCTrCH Reference to TS34.108 clause 6.10.3.4 Parameter Set. If 2 CCTrCH then “Not Present” |
| - TFCS ID | 2 |
| - SCCPCH information for FACH | Not Present |

### 18.2.1.3 Generic test procedure for testing Single Speech Radio Bearers on USCH/DSCH channels and multiple radio configuration signalling on RACH/FACH

This procedure is used to test single speech only PS radio bearer on DSCH and USCH and multiple configuration signal bearers on RACH/FACH

#### 18.2.1.3.1 Initial conditions

UE in idle mode

#### Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test.

b) The SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 1.

d) The SS transmits test data on all radio bearers under test. The number of RLC SDUs to transmit every TTI and the size "Test data size" is specified for each sub-test of the actual radio bearer test. See note 2.

e) The SS checks that, for all radio bearers under test, the content of the received RLC SDU has the correct content and is received having the correct transport format.

f) The SS opens the UE test loop.

g) SS uses the RRC transport format combination control procedure. And now restricts the TFCs for the data on CS RAB and the data on PS RAB and also on SRB.

h) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 2.

i) SS transmit data on the CS RAB a MEASUREMENT CONTROL message requesting periodic reporting with a period of T2.

j) SS transmits the data on PS RAB.

k) SS waits the time equal to 2 times T2

l) SS checks that, for all radio bearers under test, the content of the received RLC SDUs have the correct content and is received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loop back of RLC SDUs.

m) The SS opens the UE test loop.

n) (Void)

o) Steps b) to m) are repeated for all sub-tests

p) The SS may optionally release the radio bearer.

q) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: Selection of UL RLC SDU size parameter:
For the case when the reference radio bearer configuration under test uses RLC transparent mode in downlink and is not configured for segmented operation then the radio bearer test case shall set the UL RLC SDU size equal to the UL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transparent mode. Selection of UL RLC SDU size for the different radio bearers under test should be such that the UE returns data in sub-sequent TTIs without causing the UE transmission buffer to become full. To achieve this the UL RLC SDU size shall be set to UL TF payload size under test, minus the size of length indicator and expansion bit, and divided by the ratio between downlink and uplink TTI. E.g. for a AM radio bearer having the uplink RLC payload size equal to 320, the downlink TTI equal to 10 ms, and the uplink TTI equal to 20 ms, then for the transport format 4x336 (TF payload size = 4x320=1280 bits) the UL RLC SDU size parameter should be set to 632 bits (=1280bits/(20ms/10ms)- 8 bits).

NOTE 2: Selection of test data size:
For the case when the reference radio bearer configuration under test uses RLC transparent mode in downlink and is not configured for segmented operation then the radio bearer test case shall use a DL RLC SDU size (defined by the "Test data size" parameter) equal to the DL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transparent mode. In case the reference radio bearer configuration under test does not use RLC transparent mode in downlink, the DL RLC SDU size/ test data size shall be set equal to the payload size of the DL TF under test minus the size of the length indicator and the expansion bit.

NOTE 3: The restricted set of TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signalling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

Expected sequence

**PS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6a | --> | | SERVICE REQUEST (DCCH) | GMM |
| 6b | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 6c | --> | | SECURITY MODE COMPLETE | RRC see note 1 |

NOTE 1 In addition to activate integrity protection Step 6b and Step 6c are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Expected sequence for DSCH multi RAB test cases.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1..6 | <-- --> | | Paging | Use the CS paging procedure for testing of CS and combined CS/PS reference radio bearer configurations.<br><br>Use the PS paging procedure for testing of PS reference radio bearer configurations. |
| 7 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 8 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 9 | <-- | | RADIO BEARER SETUP (DCCH) | RRC |
| 10 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **CASE A: If DTCH on FACH/RACH** | | | | |
| A10a | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| A10b | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| A10c | <-- | | Test data (DTCH ) | SS Sends the data on the FACH |
| A10d | --> | | Test data (DTCH ) | SS Receives the data on RACH |
| A10e | | | Repeat steps 10c to 10d for every RACH/FACH sub-test | |
| A10f | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| A10g | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| A10h | <-- | | PHYSICAL SHARED CHANNEL ALLOCATION (SHCCH) | This message is used by UTRAN to assign physical resources to USCH/DSCH transport channels in TDD, for temporary usage by the UE. UM on SHCCH |
| A10i | --> | | PUSCH CAPACITY REQUEST (SHCCH) | Confirm establishment of PUSCH and PDSCH channels |
| **CASE B: If No DTCH on FACH/RACH** | | | | |
| B10a | <-- | | PHYSICAL SHARED CHANNEL ALLOCATION (SHCCH) | This message is used by UTRAN to assign physical resources to USCH/DSCH transport channels in TDD, for temporary usage by the UE. UM on SHCCH |
| B10b | --> | | PUSCH CAPACITY REQUEST (SHCCH) | Confirm establishment of PUSCH and PDSCH channels |
| 11 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test Here the UL TFS are restricted to test the simultaneous data on CS and PS RAB. |
| 12 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 13 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 14 | <-- | | Test data (DTCH ) | SS Sends the data on the PS RAB .(PDSCH)<br>(NOTE 1) |
| 15 | --> | | Test data (DTCH ) | SS Receives the data on PS RAB |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 16 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 17 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 18 | | | Repeat steps 11 to 17 for every Shared Ch sub-test | |
| 19 | | | RB RELEASE (DCCH) | RRC<br>Optional step |
| 20 | <-- | | DEACTIVATE RB TEST MODE (DCCH) | TC<br>Optional step |
| 21 | --> | | DEACTIVATE RB TEST MODE COMPLETE (DCCH) | TC<br>Optional step |

## 18.2.1.4 General information interoperability radio bearer tests for HS-DSCH

### 18.2.1.4.1 HS-DSCH radio bearer test parameters

In the radio bearer tests on radio bearers mapped on HS-DSCH, the following UE specific parameters should be used.

**Table 18.2.1.4.1.1: 3.84Mcps TDD HS-DSCH physical layer and RLC and MAC-hs parameters for 3.84Mcps TDD HS-DSCH physical layer categories**

| HS-DSCH category | Maximum number of HS-DSCH codes per timeslot | Maximum number of HS-DSCH timeslots per TTI | Maximum number of HS-DSCH transport channel bits that can be received within an HS-DSCH TTI | Total number of soft channel bits | Maximum number of AM RLC entities | Minimum total RLC AM and MAC-hs buffer size [kBytes] |
|---|---|---|---|---|---|---|
| Category 1 | 16 | 2 | 12000 | 52992 | 6 | 50 |
| Category 2 | 16 | 12 | 12000 | 52992 | 6 | 50 |
| Category 3 | 16 | 4 | 24000 | 105984 | 6 | 50 |
| Category 4 | 16 | 12 | 24000 | 105984 | 6 | 50 |
| Category 5 | 16 | 6 | 36000 | 158976 | 6 | 100 |
| Category 6 | 16 | 12 | 36000 | 158976 | 6 | 100 |
| Category 7 | 16 | 12 | 53000 | 211968 | 6 | 150 |
| Category 8 | 16 | 12 | 73000 | 264960 | 8 | 150 |
| Category 9 | 16 | 12 | 102000 | 317952 | 8 | 200 |

### 18.2.1.4.2 Selecting TFRC test points

#### 18.2.1.4.2.1 Principle

The principle for selecting TFRC test points is the same as specified for FDD in section 14.1.3.2.1 except the following:

a) A total of 3 HARQ processes are assumed.

b) Burst type 1 is assumed when calculating the number of physical channel bits ($N_{phy_bits}$) so that 1 HS-DSCH code in 1 TS carries 244bits for QPSK and 488bits for 16QAM.

c) The number of HS-DSCH codes allocated in the HS-SCCH is termed $N_{codes}$ and the number of TS allocated in the HS-SCCH is termed $N_{TS\ and\ thus}$ the code rate is determined by:

$$Coding_rate = (TB_{size} + N_{CRC}) / (N_{codes} * N_{TS} * N_{phy_bits})$$

d) The number of MAC-d PDUs, N_PDU can be incremented until N_PDU is 318.

e) The HS-SCCH signalling is such that it is only possible to allocate resources in a rectangular fashion; i.e. 21 resource units can be allocated by 3 SF16 codes over 7 timeslots. However it is not possible to make an allocation of 3 SF16 codes in TS2 and 2 SF16 codes in TS3

Note that the number of codes allocated, $N_{codes}$, and the number of TS, $N_{TS}$, allocated in the HS-SCCH are used in the tables in sections 18.2.1.4.3 and 18.2.1.4.4.

### 18.2.1.4.3 TFRC test points for MAC-d PDU size=336

**Table 18.2.1.4.3.1: TFRC test points for UE category 1 for MAC-d PDU size=336, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | $N_{codes}*N_{TS}$ allocated in HS-SCCH | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 126 | |
| 1 | 357 | 16QAM | 2 | 126 | |
| 2 | 693 | QPSK | 8 | 171 | |
| 2 | 693 | 16QAM | 4 | 171 | |
| 3 | 1029 | QPSK | 12 | 198 | |
| 3 | 1029 | 16QAM | 6 | 198 | |
| 4 | 1365 | QPSK | 16 | 217 | |
| 4 | 1365 | 16QAM | 8 | 217 | |
| 5 | 1701 | QPSK | 20 | 232 | |
| 5 | 1701 | 16QAM | 10 | 232 | |
| 6 | 2037 | QPSK | 24 | 244 | |
| 6 | 2037 | 16QAM | 12 | 244 | |
| 7 | 2373 | QPSK | 28 | 255 | |
| 7 | 2373 | 16QAM | 14 | 255 | |
| 8 | 2709 | QPSK | 32 | 264 | |
| 8 | 2709 | 16QAM | 16 | 264 | |
| 9 | 3045 | QPSK | 32 | 272 | |
| 9 | 3045 | 16QAM | 18 | 272 | |
| 10 | 3381 | QPSK | 32 | 279 | |
| 10 | 3381 | 16QAM | 20 | 279 | |
| 11 | 3717 | QPSK | 32 | 285 | |
| 11 | 3717 | 16QAM | 22 | 285 | |
| 12 | 4053 | QPSK | 32 | 291 | |
| 12 | 4053 | 16QAM | 24 | 291 | |
| 13 | 4389 | QPSK | 32 | 297 | |
| 13 | 4389 | 16QAM | 26 | 297 | |
| 14 | 4725 | QPSK | 32 | 302 | |
| 14 | 4725 | 16QAM | 28 | 302 | |
| 15 | 5061 | QPSK | 32 | 306 | |
| 15 | 5061 | 16QAM | 30 | 306 | |
| 16 | 5397 | QPSK | 32 | 311 | |
| 16 | 5397 | 16QAM | 32 | 311 | |
| 17 | 5733 | QPSK | 32 | 315 | |
| 17 | 5733 | 16QAM | 32 | 315 | |
| 18 | 6069 | QPSK | 32 | 320 | |
| 18 | 6069 | 16QAM | 32 | 319 | |
| 19 | 6405 | QPSK | 32 | 323 | |
| 19 | 6405 | 16QAM | 32 | 323 | |
| 20 | 6741 | QPSK | 32 | 326 | |
| 20 | 6741 | 16QAM | 32 | 326 | |
| 21 | 7077 | QPSK | 32 | 329 | |
| 21 | 7077 | 16QAM | 32 | 329 | |
| 22 | 7413 | QPSK | 32 | 332 | |
| 22 | 7413 | 16QAM | 32 | 332 | |
| 23 | 7749 | 16QAM | 32 | 336 | |
| 24 | 8085 | 16QAM | 32 | 338 | |
| 25 | 8421 | 16QAM | 32 | 341 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 8757 | 16QAM | 32 | 344 | |
| 27 | 9093 | 16QAM | 32 | 346 | |
| 28 | 9429 | 16QAM | 32 | 349 | |
| 29 | 9765 | 16QAM | 32 | 351 | |
| 30 | 10101 | 16QAM | 32 | 354 | |
| 31 | 10437 | 16QAM | 32 | 356 | |
| 32 | 10773 | 16QAM | 32 | 358 | |
| 33 | 11109 | 16QAM | 32 | 360 | |
| 34 | 11445 | 16QAM | 32 | 362 | |
| 35 | 11781 | 16QAM | 32 | 364 | |

**Table 18.2.1.4.3.2: TFRC test points for UE category 2 for MAC-d PDU size=336, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 126 | |
| 1 | 357 | 16QAM | 2 | 126 | |
| 2 | 693 | QPSK | 8 | 171 | |
| 2 | 693 | 16QAM | 4 | 171 | |
| 3 | 1029 | QPSK | 12 | 198 | |
| 3 | 1029 | 16QAM | 6 | 198 | |
| 4 | 1365 | QPSK | 16 | 217 | |
| 4 | 1365 | 16QAM | 8 | 217 | |
| 5 | 1701 | QPSK | 21 | 232 | |
| 5 | 1701 | 16QAM | 10 | 232 | |
| 6 | 2037 | QPSK | 25 | 244 | |
| 6 | 2037 | 16QAM | 12 | 244 | |
| 7 | 2373 | QPSK | 28 | 255 | |
| 7 | 2373 | 16QAM | 14 | 255 | |
| 8 | 2709 | QPSK | 33 | 264 | |
| 8 | 2709 | 16QAM | 16 | 264 | |
| 9 | 3045 | QPSK | 36 | 272 | |
| 9 | 3045 | 16QAM | 18 | 272 | |
| 10 | 3381 | QPSK | 40 | 279 | |
| 10 | 3381 | 16QAM | 20 | 279 | |
| 11 | 3717 | QPSK | 45 | 285 | |
| 11 | 3717 | 16QAM | 22 | 285 | |
| 12 | 4053 | QPSK | 50 | 291 | |
| 12 | 4053 | 16QAM | 25 | 291 | |
| 13 | 4389 | QPSK | 54 | 297 | |
| 13 | 4389 | 16QAM | 27 | 297 | |
| 14 | 4725 | QPSK | 56 | 302 | |
| 14 | 4725 | 16QAM | 28 | 302 | |
| 15 | 5061 | QPSK | 60 | 306 | |
| 15 | 5061 | 16QAM | 30 | 306 | |
| 16 | 5397 | QPSK | 66 | 311 | |
| 16 | 5397 | 16QAM | 33 | 311 | |
| 17 | 5733 | QPSK | 70 | 315 | |
| 17 | 5733 | 16QAM | 35 | 315 | |
| 18 | 6069 | QPSK | 72 | 319 | |
| 18 | 6069 | 16QAM | 36 | 319 | |
| 19 | 6405 | QPSK | 72 | 323 | |
| 19 | 6405 | 16QAM | 36 | 323 | |
| 20 | 6741 | QPSK | 72 | 326 | |
| 20 | 6741 | 16QAM | 36 | 326 | |
| 21 | 7077 | QPSK | 72 | 329 | |
| 21 | 7077 | 16QAM | 36 | 329 | |
| 22 | 7413 | QPSK | 72 | 332 | |
| 22 | 7413 | 16QAM | 36 | 332 | |
| 23 | 7749 | QPSK | 72 | 336 | |
| 23 | 7749 | 16QAM | 36 | 336 | |
| 24 | 8085 | QPSK | 72 | 338 | |
| 24 | 8085 | 16QAM | 36 | 338 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 72 | 341 | |
| 25 | 8421 | 16QAM | 36 | 341 | |
| 26 | 8757 | QPSK | 72 | 344 | |
| 26 | 8757 | 16QAM | 36 | 344 | |
| 27 | 9093 | QPSK | 72 | 346 | |
| 27 | 9093 | 16QAM | 36 | 346 | |
| 28 | 9429 | QPSK | 72 | 349 | |
| 28 | 9429 | 16QAM | 36 | 349 | |
| 29 | 9765 | QPSK | 72 | 351 | |
| 29 | 9765 | 16QAM | 36 | 351 | |
| 30 | 10101 | QPSK | 72 | 354 | |
| 30 | 10101 | 16QAM | 36 | 354 | |
| 31 | 10437 | QPSK | 72 | 356 | |
| 31 | 10437 | 16QAM | 36 | 356 | |
| 32 | 10773 | QPSK | 72 | 358 | |
| 32 | 10773 | 16QAM | 36 | 358 | |
| 33 | 11109 | QPSK | 72 | 360 | |
| 33 | 11109 | 16QAM | 36 | 360 | |
| 34 | 11445 | QPSK | 72 | 362 | |
| 34 | 11445 | 16QAM | 36 | 362 | |
| 35 | 11781 | QPSK | 72 | 364 | |
| 35 | 11781 | 16QAM | 36 | 364 | |

**Table 18.2.1.4.3.3: TFRC test points for UE category 3 for MAC-d PDU size=336, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 126 | |
| 1 | 357 | 16QAM | 2 | 126 | |
| 2 | 693 | QPSK | 8 | 171 | |
| 2 | 693 | 16QAM | 4 | 171 | |
| 3 | 1029 | QPSK | 12 | 198 | |
| 3 | 1029 | 16QAM | 6 | 198 | |
| 4 | 1365 | QPSK | 16 | 217 | |
| 4 | 1365 | 16QAM | 8 | 217 | |
| 5 | 1701 | QPSK | 21 | 232 | |
| 5 | 1701 | 16QAM | 10 | 232 | |
| 6 | 2037 | QPSK | 24 | 244 | |
| 6 | 2037 | 16QAM | 12 | 244 | |
| 7 | 2373 | QPSK | 28 | 255 | |
| 7 | 2373 | 16QAM | 14 | 255 | |
| 8 | 2709 | QPSK | 33 | 264 | |
| 8 | 2709 | 16QAM | 16 | 264 | |
| 9 | 3045 | QPSK | 36 | 272 | |
| 9 | 3045 | 16QAM | 18 | 272 | |
| 10 | 3381 | QPSK | 40 | 279 | |
| 10 | 3381 | 16QAM | 20 | 279 | |
| 11 | 3717 | QPSK | 45 | 285 | |
| 11 | 3717 | 16QAM | 22 | 285 | |
| 12 | 4053 | QPSK | 48 | 291 | |
| 12 | 4053 | 16QAM | 24 | 291 | |
| 13 | 4389 | QPSK | 52 | 297 | |
| 13 | 4389 | 16QAM | 27 | 297 | |
| 14 | 4725 | QPSK | 56 | 302 | |
| 14 | 4725 | 16QAM | 28 | 302 | |
| 15 | 5061 | QPSK | 60 | 306 | |
| 15 | 5061 | 16QAM | 30 | 306 | |
| 16 | 5397 | QPSK | 64 | 311 | |
| 16 | 5397 | 16QAM | 33 | 311 | |
| 17 | 5733 | QPSK | 64 | 315 | |
| 17 | 5733 | 16QAM | 33 | 315 | |
| 18 | 6069 | QPSK | 64 | 319 | |
| 18 | 6069 | 16QAM | 36 | 319 | |
| 19 | 6405 | QPSK | 64 | 323 | |
| 19 | 6405 | 16QAM | 39 | 323 | |
| 20 | 6741 | QPSK | 64 | 326 | |
| 20 | 6741 | 16QAM | 40 | 326 | |
| 21 | 7077 | QPSK | 64 | 329 | |
| 21 | 7077 | 16QAM | 42 | 329 | |
| 22 | 7413 | QPSK | 64 | 332 | |
| 22 | 7413 | 16QAM | 45 | 332 | |
| 23 | 7749 | QPSK | 64 | 336 | |
| 23 | 7749 | 16QAM | 48 | 336 | |
| 24 | 8085 | QPSK | 64 | 338 | |
| 24 | 8085 | 16QAM | 48 | 338 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 64 | 341 | |
| 25 | 8421 | 16QAM | 52 | 341 | |
| 26 | 8757 | QPSK | 64 | 344 | |
| 26 | 8757 | 16QAM | 52 | 344 | |
| 27 | 9093 | QPSK | 64 | 346 | |
| 27 | 9093 | 16QAM | 56 | 346 | |
| 28 | 9429 | QPSK | 64 | 349 | |
| 28 | 9429 | 16QAM | 56 | 349 | |
| 29 | 9765 | QPSK | 64 | 351 | |
| 29 | 9765 | 16QAM | 60 | 351 | |
| 30 | 10101 | QPSK | 64 | 354 | |
| 30 | 10101 | 16QAM | 60 | 354 | |
| 31 | 10437 | QPSK | 64 | 356 | |
| 31 | 10437 | 16QAM | 64 | 356 | |
| 32 | 10773 | QPSK | 64 | 358 | |
| 32 | 10773 | 16QAM | 64 | 358 | |
| 33 | 11109 | QPSK | 64 | 360 | |
| 33 | 11109 | 16QAM | 64 | 360 | |
| 34 | 11445 | QPSK | 64 | 362 | |
| 34 | 11445 | 16QAM | 64 | 362 | |
| 35 | 11781 | QPSK | 64 | 364 | |
| 35 | 11781 | 16QAM | 64 | 364 | |
| 36 | 12117 | QPSK | 64 | 367 | |
| 36 | 12117 | 16QAM | 64 | 366 | |
| 37 | 12453 | QPSK | 64 | 368 | |
| 37 | 12453 | 16QAM | 64 | 368 | |
| 38 | 12789 | QPSK | 64 | 370 | |
| 38 | 12789 | 16QAM | 64 | 370 | |
| 39 | 13125 | QPSK | 64 | 371 | |
| 39 | 13125 | 16QAM | 64 | 371 | |
| 40 | 13461 | QPSK | 64 | 373 | |
| 40 | 13461 | 16QAM | 64 | 373 | |
| 41 | 13797 | QPSK | 64 | 375 | |
| 41 | 13797 | 16QAM | 64 | 375 | |
| 42 | 14133 | QPSK | 64 | 377 | |
| 42 | 14133 | 16QAM | 64 | 377 | |
| 43 | 14469 | QPSK | 64 | 378 | |
| 43 | 14469 | 16QAM | 64 | 378 | |
| 44 | 14805 | QPSK | 64 | 380 | |
| 44 | 14805 | 16QAM | 64 | 380 | |
| 45 | 15141 | QPSK | 64 | 381 | |
| 45 | 15141 | 16QAM | 64 | 381 | |
| 46 | 15477 | 16QAM | 64 | 383 | |
| 47 | 15813 | 16QAM | 64 | 384 | |
| 48 | 16149 | 16QAM | 64 | 386 | |
| 49 | 16485 | 16QAM | 64 | 387 | |
| 50 | 16821 | 16QAM | 64 | 388 | |
| 51 | 17157 | 16QAM | 64 | 390 | |
| 52 | 17493 | 16QAM | 64 | 391 | |
| 53 | 17829 | 16QAM | 64 | 392 | |
| 54 | 18165 | 16QAM | 64 | 394 | |
| 55 | 18501 | 16QAM | 64 | 395 | |
| 56 | 18837 | 16QAM | 64 | 396 | |

| | | | | | |
|---|---|---|---|---|---|
| 57 | 19173 | 16QAM | 64 | 397 | |
| 58 | 19509 | 16QAM | 64 | 398 | |
| 59 | 19845 | 16QAM | 64 | 400 | |
| 60 | 20181 | 16QAM | 64 | 401 | |
| 61 | 20517 | 16QAM | 64 | 402 | |
| 62 | 20853 | 16QAM | 64 | 403 | |
| 63 | 21189 | 16QAM | 64 | 404 | |
| 64 | 21525 | 16QAM | 64 | 405 | |
| 65 | 21861 | 16QAM | 64 | 406 | |
| 66 | 22197 | 16QAM | 64 | 407 | |
| 67 | 22533 | 16QAM | 64 | 408 | |
| 68 | 22869 | 16QAM | 64 | 409 | |
| 69 | 23205 | 16QAM | 64 | 410 | |
| 70 | 23541 | 16QAM | 64 | 411 | |
| 71 | 23877 | 16QAM | 64 | 412 | |

**Table 18.2.1.4.3.4: TFRC test points for UE category 4 for MAC-d PDU size=336, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 126 | |
| 1 | 357 | 16QAM | 2 | 126 | |
| 2 | 693 | QPSK | 8 | 171 | |
| 2 | 693 | 16QAM | 4 | 171 | |
| 3 | 1029 | QPSK | 12 | 198 | |
| 3 | 1029 | 16QAM | 6 | 198 | |
| 4 | 1365 | QPSK | 16 | 217 | |
| 4 | 1365 | 16QAM | 8 | 217 | |
| 5 | 1701 | QPSK | 21 | 232 | |
| 5 | 1701 | 16QAM | 10 | 232 | |
| 6 | 2037 | QPSK | 25 | 244 | |
| 6 | 2037 | 16QAM | 12 | 244 | |
| 7 | 2373 | QPSK | 28 | 255 | |
| 7 | 2373 | 16QAM | 14 | 255 | |
| 8 | 2709 | QPSK | 33 | 264 | |
| 8 | 2709 | 16QAM | 16 | 264 | |
| 9 | 3045 | QPSK | 36 | 272 | |
| 9 | 3045 | 16QAM | 18 | 272 | |
| 10 | 3381 | QPSK | 40 | 279 | |
| 10 | 3381 | 16QAM | 20 | 279 | |
| 11 | 3717 | QPSK | 45 | 285 | |
| 11 | 3717 | 16QAM | 22 | 285 | |
| 12 | 4053 | QPSK | 50 | 291 | |
| 12 | 4053 | 16QAM | 25 | 291 | |
| 13 | 4389 | QPSK | 54 | 297 | |
| 13 | 4389 | 16QAM | 27 | 297 | |
| 14 | 4725 | QPSK | 56 | 302 | |
| 14 | 4725 | 16QAM | 28 | 302 | |
| 15 | 5061 | QPSK | 60 | 306 | |
| 15 | 5061 | 16QAM | 30 | 306 | |
| 16 | 5397 | QPSK | 66 | 311 | |
| 16 | 5397 | 16QAM | 33 | 311 | |
| 17 | 5733 | QPSK | 70 | 315 | |
| 17 | 5733 | 16QAM | 35 | 315 | |
| 18 | 6069 | QPSK | 75 | 319 | |
| 18 | 6069 | 16QAM | 36 | 319 | |
| 19 | 6405 | QPSK | 78 | 323 | |
| 19 | 6405 | 16QAM | 39 | 323 | |
| 20 | 6741 | QPSK | 81 | 326 | |
| 20 | 6741 | 16QAM | 40 | 326 | |
| 21 | 7077 | QPSK | 84 | 329 | |
| 21 | 7077 | 16QAM | 42 | 329 | |
| 22 | 7413 | QPSK | 91 | 332 | |
| 22 | 7413 | 16QAM | 45 | 332 | |
| 23 | 7749 | QPSK | 96 | 336 | |
| 23 | 7749 | 16QAM | 48 | 336 | |
| 24 | 8085 | QPSK | 99 | 338 | |
| 24 | 8085 | 16QAM | 49 | 338 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 104 | 341 | |
| 25 | 8421 | 16QAM | 52 | 341 | |
| 26 | 8757 | QPSK | 108 | 344 | |
| 26 | 8757 | 16QAM | 54 | 344 | |
| 27 | 9093 | QPSK | 112 | 346 | |
| 27 | 9093 | 16QAM | 56 | 346 | |
| 28 | 9429 | QPSK | 117 | 349 | |
| 28 | 9429 | 16QAM | 56 | 349 | |
| 29 | 9765 | QPSK | 120 | 351 | |
| 29 | 9765 | 16QAM | 60 | 351 | |
| 30 | 10101 | QPSK | 121 | 354 | |
| 30 | 10101 | 16QAM | 60 | 354 | |
| 31 | 10437 | QPSK | 128 | 356 | |
| 31 | 10437 | 16QAM | 64 | 356 | |
| 32 | 10773 | QPSK | 132 | 358 | |
| 32 | 10773 | 16QAM | 66 | 358 | |
| 33 | 11109 | QPSK | 135 | 360 | |
| 33 | 11109 | 16QAM | 66 | 360 | |
| 34 | 11445 | QPSK | 140 | 362 | |
| 34 | 11445 | 16QAM | 70 | 362 | |
| 35 | 11781 | QPSK | 144 | 364 | |
| 35 | 11781 | 16QAM | 72 | 364 | |
| 36 | 12117 | QPSK | 144 | 366 | |
| 36 | 12117 | 16QAM | 72 | 366 | |
| 37 | 12453 | QPSK | 144 | 368 | |
| 37 | 12453 | 16QAM | 72 | 368 | |
| 38 | 12789 | QPSK | 144 | 370 | |
| 38 | 12789 | 16QAM | 72 | 370 | |
| 39 | 13125 | QPSK | 144 | 371 | |
| 39 | 13125 | 16QAM | 72 | 371 | |
| 40 | 13461 | QPSK | 144 | 373 | |
| 40 | 13461 | 16QAM | 72 | 373 | |
| 41 | 13797 | QPSK | 144 | 375 | |
| 41 | 13797 | 16QAM | 72 | 375 | |
| 42 | 14133 | QPSK | 144 | 377 | |
| 42 | 14133 | 16QAM | 72 | 377 | |
| 43 | 14469 | QPSK | 144 | 378 | |
| 43 | 14469 | 16QAM | 72 | 378 | |
| 44 | 14805 | QPSK | 144 | 380 | |
| 44 | 14805 | 16QAM | 72 | 380 | |
| 45 | 15141 | QPSK | 144 | 381 | |
| 45 | 15141 | 16QAM | 72 | 381 | |
| 46 | 15477 | QPSK | 144 | 383 | |
| 46 | 15477 | 16QAM | 72 | 383 | |
| 47 | 15813 | QPSK | 144 | 384 | |
| 47 | 15813 | 16QAM | 72 | 384 | |
| 48 | 16149 | QPSK | 144 | 386 | |
| 48 | 16149 | 16QAM | 72 | 386 | |
| 49 | 16485 | QPSK | 144 | 387 | |
| 49 | 16485 | 16QAM | 72 | 387 | |
| 50 | 16821 | QPSK | 144 | 388 | |
| 50 | 16821 | 16QAM | 72 | 388 | |
| 51 | 17157 | QPSK | 144 | 390 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16QAM | 72 | 390 | |
| 52 | 17493 | QPSK | 144 | 391 | |
| 52 | 17493 | 16QAM | 72 | 391 | |
| 53 | 17829 | QPSK | 144 | 392 | |
| 53 | 17829 | 16QAM | 72 | 392 | |
| 54 | 18165 | QPSK | 144 | 394 | |
| 54 | 18165 | 16QAM | 72 | 394 | |
| 55 | 18501 | QPSK | 144 | 395 | |
| 55 | 18501 | 16QAM | 72 | 395 | |
| 56 | 18837 | QPSK | 144 | 396 | |
| 56 | 18837 | 16QAM | 72 | 396 | |
| 57 | 19173 | QPSK | 144 | 397 | |
| 57 | 19173 | 16QAM | 72 | 397 | |
| 58 | 19509 | QPSK | 144 | 398 | |
| 58 | 19509 | 16QAM | 72 | 398 | |
| 59 | 19845 | QPSK | 144 | 400 | |
| 59 | 19845 | 16QAM | 72 | 400 | |
| 60 | 20181 | QPSK | 144 | 401 | |
| 60 | 20181 | 16QAM | 72 | 401 | |
| 61 | 20517 | QPSK | 144 | 402 | |
| 61 | 20517 | 16QAM | 72 | 402 | |
| 62 | 20853 | QPSK | 144 | 403 | |
| 62 | 20853 | 16QAM | 72 | 403 | |
| 63 | 21189 | QPSK | 144 | 404 | |
| 63 | 21189 | 16QAM | 72 | 404 | |
| 64 | 21525 | QPSK | 144 | 405 | |
| 64 | 21525 | 16QAM | 72 | 405 | |
| 65 | 21861 | QPSK | 144 | 406 | |
| 65 | 21861 | 16QAM | 72 | 406 | |
| 66 | 22197 | QPSK | 144 | 407 | |
| 66 | 22197 | 16QAM | 72 | 407 | |
| 67 | 22533 | QPSK | 144 | 408 | |
| 67 | 22533 | 16QAM | 72 | 408 | |
| 68 | 22869 | QPSK | 144 | 409 | |
| 68 | 22869 | 16QAM | 72 | 409 | |
| 69 | 23205 | QPSK | 144 | 410 | |
| 69 | 23205 | 16QAM | 72 | 410 | |
| 70 | 23541 | QPSK | 144 | 411 | |
| 70 | 23541 | 16QAM | 72 | 411 | |
| 71 | 23877 | QPSK | 144 | 412 | |
| 71 | 23877 | 16QAM | 72 | 412 | |

**Table 18.2.1.4.3.5: TFRC test points for UE category 5 for MAC-d PDU size=336, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 126 | |
| 1 | 357 | 16QAM | 2 | 126 | |
| 2 | 693 | QPSK | 8 | 171 | |
| 2 | 693 | 16QAM | 4 | 171 | |
| 3 | 1029 | QPSK | 12 | 198 | |
| 3 | 1029 | 16QAM | 6 | 198 | |
| 4 | 1365 | QPSK | 16 | 217 | |
| 4 | 1365 | 16QAM | 8 | 217 | |
| 5 | 1701 | QPSK | 21 | 232 | |
| 5 | 1701 | 16QAM | 10 | 232 | |
| 6 | 2037 | QPSK | 25 | 244 | |
| 6 | 2037 | 16QAM | 12 | 244 | |
| 7 | 2373 | QPSK | 28 | 255 | |
| 7 | 2373 | 16QAM | 14 | 255 | |
| 8 | 2709 | QPSK | 33 | 264 | |
| 8 | 2709 | 16QAM | 16 | 264 | |
| 9 | 3045 | QPSK | 36 | 272 | |
| 9 | 3045 | 16QAM | 18 | 272 | |
| 10 | 3381 | QPSK | 40 | 279 | |
| 10 | 3381 | 16QAM | 20 | 279 | |
| 11 | 3717 | QPSK | 45 | 285 | |
| 11 | 3717 | 16QAM | 22 | 285 | |
| 12 | 4053 | QPSK | 50 | 291 | |
| 12 | 4053 | 16QAM | 25 | 291 | |
| 13 | 4389 | QPSK | 54 | 297 | |
| 13 | 4389 | 16QAM | 27 | 297 | |
| 14 | 4725 | QPSK | 56 | 302 | |
| 14 | 4725 | 16QAM | 28 | 302 | |
| 15 | 5061 | QPSK | 60 | 306 | |
| 15 | 5061 | 16QAM | 30 | 306 | |
| 16 | 5397 | QPSK | 66 | 311 | |
| 16 | 5397 | 16QAM | 33 | 311 | |
| 17 | 5733 | QPSK | 70 | 315 | |
| 17 | 5733 | 16QAM | 35 | 315 | |
| 18 | 6069 | QPSK | 75 | 319 | |
| 18 | 6069 | 16QAM | 36 | 319 | |
| 19 | 6405 | QPSK | 78 | 323 | |
| 19 | 6405 | 16QAM | 39 | 323 | |
| 20 | 6741 | QPSK | 80 | 326 | |
| 20 | 6741 | 16QAM | 40 | 326 | |
| 21 | 7077 | QPSK | 84 | 329 | |
| 21 | 7077 | 16QAM | 42 | 329 | |
| 22 | 7413 | QPSK | 90 | 332 | |
| 22 | 7413 | 16QAM | 45 | 332 | |
| 23 | 7749 | QPSK | 96 | 336 | |
| 23 | 7749 | 16QAM | 48 | 336 | |
| 24 | 8085 | QPSK | 96 | 338 | |
| 24 | 8085 | 16QAM | 48 | 338 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 96 | 341 | |
| 25 | 8421 | 16QAM | 52 | 341 | |
| 26 | 8757 | QPSK | 96 | 344 | |
| 26 | 8757 | 16QAM | 54 | 344 | |
| 27 | 9093 | QPSK | 96 | 346 | |
| 27 | 9093 | 16QAM | 56 | 346 | |
| 28 | 9429 | QPSK | 96 | 349 | |
| 28 | 9429 | 16QAM | 56 | 349 | |
| 29 | 9765 | QPSK | 96 | 351 | |
| 29 | 9765 | 16QAM | 60 | 351 | |
| 30 | 10101 | QPSK | 96 | 354 | |
| 30 | 10101 | 16QAM | 60 | 354 | |
| 31 | 10437 | QPSK | 96 | 356 | |
| 31 | 10437 | 16QAM | 64 | 356 | |
| 32 | 10773 | QPSK | 96 | 358 | |
| 32 | 10773 | 16QAM | 66 | 358 | |
| 33 | 11109 | QPSK | 96 | 360 | |
| 33 | 11109 | 16QAM | 66 | 360 | |
| 34 | 11445 | QPSK | 96 | 362 | |
| 34 | 11445 | 16QAM | 70 | 362 | |
| 35 | 11781 | QPSK | 96 | 364 | |
| 35 | 11781 | 16QAM | 72 | 364 | |
| 36 | 12117 | QPSK | 96 | 366 | |
| 36 | 12117 | 16QAM | 75 | 366 | |
| 37 | 12453 | QPSK | 96 | 368 | |
| 37 | 12453 | 16QAM | 75 | 368 | |
| 38 | 12789 | QPSK | 96 | 370 | |
| 38 | 12789 | 16QAM | 78 | 370 | |
| 39 | 13125 | QPSK | 96 | 371 | |
| 39 | 13125 | 16QAM | 80 | 371 | |
| 40 | 13461 | QPSK | 96 | 373 | |
| 40 | 13461 | 16QAM | 80 | 373 | |
| 41 | 13797 | QPSK | 96 | 375 | |
| 41 | 13797 | 16QAM | 84 | 375 | |
| 42 | 14133 | QPSK | 96 | 377 | |
| 42 | 14133 | 16QAM | 84 | 377 | |
| 43 | 14469 | QPSK | 96 | 378 | |
| 43 | 14469 | 16QAM | 84 | 378 | |
| 44 | 14805 | QPSK | 96 | 380 | |
| 44 | 14805 | 16QAM | 90 | 380 | |
| 45 | 15141 | QPSK | 96 | 381 | |
| 45 | 15141 | 16QAM | 90 | 381 | |
| 46 | 15477 | QPSK | 96 | 383 | |
| 46 | 15477 | 16QAM | 96 | 383 | |
| 47 | 15813 | QPSK | 96 | 384 | |
| 47 | 15813 | 16QAM | 96 | 384 | |
| 48 | 16149 | QPSK | 96 | 386 | |
| 48 | 16149 | 16QAM | 96 | 386 | |
| 49 | 16485 | QPSK | 96 | 387 | |
| 49 | 16485 | 16QAM | 96 | 387 | |
| 50 | 16821 | QPSK | 96 | 388 | |
| 50 | 16821 | 16QAM | 96 | 388 | |
| 51 | 17157 | QPSK | 96 | 390 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16QAM | 96 | 390 | |
| 52 | 17493 | QPSK | 96 | 391 | |
| 52 | 17493 | 16QAM | 96 | 391 | |
| 53 | 17829 | QPSK | 96 | 392 | |
| 53 | 17829 | 16QAM | 96 | 392 | |
| 54 | 18165 | QPSK | 96 | 395 | |
| 54 | 18165 | 16QAM | 96 | 394 | |
| 55 | 18501 | QPSK | 96 | 395 | |
| 55 | 18501 | 16QAM | 96 | 395 | |
| 56 | 18837 | QPSK | 96 | 396 | |
| 56 | 18837 | 16QAM | 96 | 396 | |
| 57 | 19173 | QPSK | 96 | 397 | |
| 57 | 19173 | 16QAM | 96 | 397 | |
| 58 | 19509 | QPSK | 96 | 398 | |
| 58 | 19509 | 16QAM | 96 | 398 | |
| 59 | 19845 | QPSK | 96 | 400 | |
| 59 | 19845 | 16QAM | 96 | 400 | |
| 60 | 20181 | QPSK | 96 | 401 | |
| 60 | 20181 | 16QAM | 96 | 401 | |
| 61 | 20517 | QPSK | 96 | 402 | |
| 61 | 20517 | 16QAM | 96 | 402 | |
| 62 | 20853 | QPSK | 96 | 403 | |
| 62 | 20853 | 16QAM | 96 | 403 | |
| 63 | 21189 | QPSK | 96 | 404 | |
| 63 | 21189 | 16QAM | 96 | 404 | |
| 64 | 21525 | QPSK | 96 | 405 | |
| 64 | 21525 | 16QAM | 96 | 405 | |
| 65 | 21861 | QPSK | 96 | 406 | |
| 65 | 21861 | 16QAM | 96 | 406 | |
| 66 | 22197 | QPSK | 96 | 407 | |
| 66 | 22197 | 16QAM | 96 | 407 | |
| 67 | 22533 | QPSK | 96 | 408 | |
| 67 | 22533 | 16QAM | 96 | 408 | |
| 68 | 22869 | QPSK | 96 | 409 | |
| 68 | 22869 | 16QAM | 96 | 409 | |
| 69 | 23205 | QPSK | 96 | 410 | |
| 69 | 23205 | 16QAM | 96 | 410 | |
| 70 | 23541 | 16QAM | 96 | 411 | |
| 71 | 23877 | 16QAM | 96 | 412 | |
| 72 | 24213 | 16QAM | 96 | 413 | |
| 73 | 24549 | 16QAM | 96 | 414 | |
| 74 | 24885 | 16QAM | 96 | 415 | |
| 75 | 25221 | 16QAM | 96 | 416 | |
| 76 | 25557 | 16QAM | 96 | 417 | |
| 77 | 25893 | 16QAM | 96 | 418 | |
| 78 | 26229 | 16QAM | 96 | 419 | |
| 79 | 26565 | 16QAM | 96 | 420 | |
| 80 | 26901 | 16QAM | 96 | 420 | |
| 81 | 27237 | 16QAM | 96 | 421 | |
| 82 | 27573 | 16QAM | 96 | 422 | |
| 83 | 27909 | 16QAM | 96 | 423 | |
| 84 | 28245 | 16QAM | 96 | 424 | |
| 85 | 28581 | 16QAM | 96 | 425 | |

| | | | | | |
|---|---|---|---|---|---|
| 86 | 28917 | 16QAM | 96 | 425 | |
| 87 | 29253 | 16QAM | 96 | 426 | |
| 88 | 29589 | 16QAM | 96 | 427 | |
| 89 | 29925 | 16QAM | 96 | 428 | |
| 90 | 30261 | 16QAM | 96 | 428 | |
| 91 | 30597 | 16QAM | 96 | 429 | |
| 92 | 30933 | 16QAM | 96 | 430 | |
| 93 | 31269 | 16QAM | 96 | 431 | |
| 94 | 31605 | 16QAM | 96 | 431 | |
| 95 | 31941 | 16QAM | 96 | 432 | |
| 96 | 32277 | 16QAM | 96 | 433 | |
| 97 | 32613 | 16QAM | 96 | 434 | |
| 98 | 32949 | 16QAM | 96 | 434 | |
| 99 | 33285 | 16QAM | 96 | 435 | |
| 100 | 33621 | 16QAM | 96 | 436 | |
| 101 | 33957 | 16QAM | 96 | 436 | |
| 102 | 34293 | 16QAM | 96 | 437 | |
| 103 | 34629 | 16QAM | 96 | 438 | |
| 104 | 34965 | 16QAM | 96 | 438 | |
| 105 | 35301 | 16QAM | 96 | 439 | |
| 106 | 35637 | 16QAM | 96 | 442 | |
| 107 | 35973 | 16QAM | 96 | 442 | |

**Table 18.2.1.4.3.6: TFRC test points for UE category 6 for MAC-d PDU size=336, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 126 | |
| 1 | 357 | 16QAM | 2 | 126 | |
| 2 | 693 | QPSK | 8 | 171 | |
| 2 | 693 | 16QAM | 4 | 171 | |
| 3 | 1029 | QPSK | 12 | 198 | |
| 3 | 1029 | 16QAM | 6 | 198 | |
| 4 | 1365 | QPSK | 16 | 217 | |
| 4 | 1365 | 16QAM | 8 | 217 | |
| 5 | 1701 | QPSK | 21 | 232 | |
| 5 | 1701 | 16QAM | 10 | 232 | |
| 6 | 2037 | QPSK | 25 | 244 | |
| 6 | 2037 | 16QAM | 12 | 244 | |
| 7 | 2373 | QPSK | 28 | 255 | |
| 7 | 2373 | 16QAM | 14 | 255 | |
| 8 | 2709 | QPSK | 33 | 264 | |
| 8 | 2709 | 16QAM | 16 | 264 | |
| 9 | 3045 | QPSK | 36 | 272 | |
| 9 | 3045 | 16QAM | 18 | 272 | |
| 10 | 3381 | QPSK | 40 | 279 | |
| 10 | 3381 | 16QAM | 20 | 279 | |
| 11 | 3717 | QPSK | 45 | 285 | |
| 11 | 3717 | 16QAM | 22 | 285 | |
| 12 | 4053 | QPSK | 50 | 291 | |
| 12 | 4053 | 16QAM | 25 | 291 | |
| 13 | 4389 | QPSK | 54 | 297 | |
| 13 | 4389 | 16QAM | 27 | 297 | |
| 14 | 4725 | QPSK | 56 | 302 | |
| 14 | 4725 | 16QAM | 28 | 302 | |
| 15 | 5061 | QPSK | 60 | 306 | |
| 15 | 5061 | 16QAM | 30 | 306 | |
| 16 | 5397 | QPSK | 66 | 311 | |
| 16 | 5397 | 16QAM | 33 | 311 | |
| 17 | 5733 | QPSK | 70 | 315 | |
| 17 | 5733 | 16QAM | 35 | 315 | |
| 18 | 6069 | QPSK | 75 | 319 | |
| 18 | 6069 | 16QAM | 36 | 319 | |
| 19 | 6405 | QPSK | 78 | 323 | |
| 19 | 6405 | 16QAM | 39 | 323 | |
| 20 | 6741 | QPSK | 81 | 326 | |
| 20 | 6741 | 16QAM | 40 | 326 | |
| 21 | 7077 | QPSK | 84 | 329 | |
| 21 | 7077 | 16QAM | 42 | 329 | |
| 22 | 7413 | QPSK | 91 | 332 | |
| 22 | 7413 | 16QAM | 45 | 332 | |
| 23 | 7749 | QPSK | 96 | 336 | |
| 23 | 7749 | 16QAM | 48 | 336 | |
| 24 | 8085 | QPSK | 99 | 338 | |
| 24 | 8085 | 16QAM | 49 | 338 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 104 | 341 | |
| 25 | 8421 | 16QAM | 52 | 341 | |
| 26 | 8757 | QPSK | 108 | 344 | |
| 26 | 8757 | 16QAM | 54 | 344 | |
| 27 | 9093 | QPSK | 112 | 346 | |
| 27 | 9093 | 16QAM | 56 | 346 | |
| 28 | 9429 | QPSK | 117 | 349 | |
| 28 | 9429 | 16QAM | 56 | 349 | |
| 29 | 9765 | QPSK | 120 | 351 | |
| 29 | 9765 | 16QAM | 60 | 351 | |
| 30 | 10101 | QPSK | 121 | 354 | |
| 30 | 10101 | 16QAM | 60 | 354 | |
| 31 | 10437 | QPSK | 128 | 356 | |
| 31 | 10437 | 16QAM | 64 | 356 | |
| 32 | 10773 | QPSK | 132 | 358 | |
| 32 | 10773 | 16QAM | 66 | 358 | |
| 33 | 11109 | QPSK | 135 | 360 | |
| 33 | 11109 | 16QAM | 66 | 360 | |
| 34 | 11445 | QPSK | 140 | 362 | |
| 34 | 11445 | 16QAM | 70 | 362 | |
| 35 | 11781 | QPSK | 144 | 364 | |
| 35 | 11781 | 16QAM | 72 | 364 | |
| 36 | 12117 | QPSK | 150 | 366 | |
| 36 | 12117 | 16QAM | 75 | 366 | |
| 37 | 12453 | QPSK | 154 | 368 | |
| 37 | 12453 | 16QAM | 77 | 368 | |
| 38 | 12789 | QPSK | 156 | 370 | |
| 38 | 12789 | 16QAM | 78 | 370 | |
| 39 | 13125 | QPSK | 160 | 371 | |
| 39 | 13125 | 16QAM | 80 | 371 | |
| 40 | 13461 | QPSK | 165 | 373 | |
| 40 | 13461 | 16QAM | 81 | 373 | |
| 41 | 13797 | QPSK | 168 | 375 | |
| 41 | 13797 | 16QAM | 84 | 375 | |
| 42 | 14133 | QPSK | 176 | 377 | |
| 42 | 14133 | 16QAM | 88 | 377 | |
| 43 | 14469 | QPSK | 176 | 378 | |
| 43 | 14469 | 16QAM | 88 | 378 | |
| 44 | 14805 | QPSK | 180 | 380 | |
| 44 | 14805 | 16QAM | 91 | 380 | |
| 45 | 15141 | QPSK | 180 | 381 | |
| 45 | 15141 | 16QAM | 91 | 381 | |
| 46 | 15477 | QPSK | 192 | 383 | |
| 46 | 15477 | 16QAM | 96 | 383 | |
| 47 | 15813 | QPSK | 192 | 384 | |
| 47 | 15813 | 16QAM | 96 | 384 | |
| 48 | 16149 | QPSK | 192 | 386 | |
| 48 | 16149 | 16QAM | 100 | 386 | |
| 49 | 16485 | QPSK | 192 | 387 | |
| 49 | 16485 | 16QAM | 100 | 387 | |
| 50 | 16821 | QPSK | 192 | 388 | |
| 50 | 16821 | 16QAM | 100 | 388 | |
| 51 | 17157 | QPSK | 192 | 390 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16QAM | 105 | 390 | |
| 52 | 17493 | QPSK | 192 | 391 | |
| 52 | 17493 | 16QAM | 108 | 391 | |
| 53 | 17829 | QPSK | 192 | 392 | |
| 53 | 17829 | 16QAM | 108 | 392 | * |
| 54 | 18165 | QPSK | 192 | 394 | * |
| 54 | 18165 | 16QAM | 108 | 394 | |
| 55 | 18501 | QPSK | 192 | 395 | |
| 55 | 18501 | 16QAM | 108 | 395 | |
| 56 | 18837 | QPSK | 192 | 396 | |
| 56 | 18837 | 16QAM | 108 | 396 | |
| 57 | 19173 | QPSK | 192 | 397 | |
| 57 | 19173 | 16QAM | 108 | 397 | |
| 58 | 19509 | QPSK | 192 | 398 | |
| 58 | 19509 | 16QAM | 108 | 398 | |
| 59 | 19845 | QPSK | 192 | 400 | |
| 59 | 19845 | 16QAM | 108 | 400 | |
| 60 | 20181 | QPSK | 192 | 401 | |
| 60 | 20181 | 16QAM | 108 | 401 | |
| 61 | 20517 | QPSK | 192 | 402 | |
| 61 | 20517 | 16QAM | 108 | 402 | |
| 62 | 20853 | QPSK | 192 | 403 | |
| 62 | 20853 | 16QAM | 108 | 403 | |
| 63 | 21189 | QPSK | 192 | 404 | |
| 63 | 21189 | 16QAM | 108 | 404 | |
| 64 | 21525 | QPSK | 192 | 405 | |
| 64 | 21525 | 16QAM | 108 | 405 | |
| 65 | 21861 | QPSK | 192 | 406 | |
| 65 | 21861 | 16QAM | 108 | 406 | |
| 66 | 22197 | QPSK | 192 | 407 | |
| 66 | 22197 | 16QAM | 108 | 407 | |
| 67 | 22533 | QPSK | 192 | 408 | |
| 67 | 22533 | 16QAM | 108 | 408 | |
| 68 | 22869 | QPSK | 192 | 409 | |
| 68 | 22869 | 16QAM | 108 | 409 | |
| 69 | 23205 | QPSK | 192 | 410 | |
| 69 | 23205 | 16QAM | 108 | 410 | |
| 70 | 23541 | QPSK | 192 | 411 | |
| 70 | 23541 | 16QAM | 108 | 411 | |
| 71 | 23877 | QPSK | 192 | 412 | |
| 71 | 23877 | 16QAM | 108 | 412 | |
| 72 | 24213 | QPSK | 192 | 413 | |
| 72 | 24213 | 16QAM | 108 | 413 | |
| 73 | 24549 | QPSK | 192 | 414 | |
| 73 | 24549 | 16QAM | 108 | 414 | |
| 74 | 24885 | QPSK | 192 | 415 | |
| 74 | 24885 | 16QAM | 108 | 415 | |
| 75 | 25221 | QPSK | 192 | 416 | |
| 75 | 25221 | 16QAM | 108 | 416 | |
| 76 | 25557 | QPSK | 192 | 417 | |
| 76 | 25557 | 16QAM | 108 | 417 | |
| 77 | 25893 | QPSK | 192 | 418 | |
| 77 | 25893 | 16QAM | 108 | 418 | |

| | | | | | |
|---|---|---|---|---|---|
| 78 | 26229 | QPSK | 192 | 419 | |
| 78 | 26229 | 16QAM | 108 | 419 | |
| 79 | 26565 | QPSK | 192 | 420 | |
| 79 | 26565 | 16QAM | 108 | 420 | |
| 80 | 26901 | QPSK | 192 | 420 | |
| 80 | 26901 | 16QAM | 108 | 420 | |
| 81 | 27237 | QPSK | 192 | 421 | |
| 81 | 27237 | 16QAM | 108 | 421 | |
| 82 | 27573 | QPSK | 192 | 422 | |
| 82 | 27573 | 16QAM | 108 | 422 | |
| 83 | 27909 | QPSK | 192 | 423 | |
| 83 | 27909 | 16QAM | 108 | 423 | |
| 84 | 28245 | QPSK | 192 | 424 | |
| 84 | 28245 | 16QAM | 108 | 424 | |
| 85 | 28581 | QPSK | 192 | 425 | |
| 85 | 28581 | 16QAM | 108 | 425 | |
| 86 | 28917 | QPSK | 192 | 425 | |
| 86 | 28917 | 16QAM | 108 | 425 | |
| 87 | 29253 | QPSK | 192 | 426 | |
| 87 | 29253 | 16QAM | 108 | 426 | |
| 88 | 29589 | QPSK | 192 | 427 | |
| 88 | 29589 | 16QAM | 108 | 427 | |
| 89 | 29925 | QPSK | 192 | 428 | |
| 89 | 29925 | 16QAM | 108 | 428 | |
| 90 | 30261 | QPSK | 192 | 428 | |
| 90 | 30261 | 16QAM | 108 | 428 | |
| 91 | 30597 | QPSK | 192 | 429 | |
| 91 | 30597 | 16QAM | 108 | 429 | |
| 92 | 30933 | QPSK | 192 | 430 | |
| 92 | 30933 | 16QAM | 108 | 430 | |
| 93 | 31269 | QPSK | 192 | 431 | |
| 93 | 31269 | 16QAM | 108 | 431 | |
| 94 | 31605 | QPSK | 192 | 431 | |
| 94 | 31605 | 16QAM | 108 | 431 | |
| 95 | 31941 | QPSK | 192 | 432 | |
| 95 | 31941 | 16QAM | 108 | 432 | |
| 96 | 32277 | QPSK | 192 | 433 | |
| 96 | 32277 | 16QAM | 108 | 433 | |
| 97 | 32613 | QPSK | 192 | 434 | |
| 97 | 32613 | 16QAM | 108 | 434 | |
| 98 | 32949 | QPSK | 192 | 434 | |
| 98 | 32949 | 16QAM | 108 | 434 | |
| 99 | 33285 | QPSK | 192 | 435 | |
| 99 | 33285 | 16QAM | 108 | 435 | |
| 100 | 33621 | QPSK | 192 | 436 | |
| 100 | 33621 | 16QAM | 108 | 436 | |
| 101 | 33957 | QPSK | 192 | 436 | |
| 101 | 33957 | 16QAM | 108 | 436 | |
| 102 | 34293 | QPSK | 192 | 437 | |
| 102 | 34293 | 16QAM | 108 | 437 | |
| 103 | 34629 | QPSK | 192 | 438 | |
| 103 | 34629 | 16QAM | 108 | 438 | |
| 104 | 34965 | QPSK | 192 | 438 | |

| | | | | | |
|---|---|---|---|---|---|
| 104 | 34965 | 16QAM | 108 | 438 | |
| 105 | 35301 | QPSK | 192 | 439 | |
| 105 | 35301 | 16QAM | 108 | 439 | |
| 106 | 35637 | QPSK | 192 | 442 | |
| 106 | 35637 | 16QAM | 108 | 440 | |
| 107 | 35973 | QPSK | 192 | 442 | |
| 107 | 35973 | 16QAM | 108 | 440 | |

**Table 18.2.1.4.3.7: TFRC test points for UE category 7 for MAC-d PDU size=336, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 126 | |
| 1 | 357 | 16QAM | 2 | 126 | |
| 2 | 693 | QPSK | 8 | 171 | |
| 2 | 693 | 16QAM | 4 | 171 | |
| 3 | 1029 | QPSK | 12 | 198 | |
| 3 | 1029 | 16QAM | 6 | 198 | |
| 4 | 1365 | QPSK | 16 | 217 | |
| 4 | 1365 | 16QAM | 8 | 217 | |
| 5 | 1701 | QPSK | 21 | 232 | |
| 5 | 1701 | 16QAM | 10 | 232 | |
| 6 | 2037 | QPSK | 25 | 244 | |
| 6 | 2037 | 16QAM | 12 | 244 | |
| 7 | 2373 | QPSK | 28 | 255 | |
| 7 | 2373 | 16QAM | 14 | 255 | |
| 8 | 2709 | QPSK | 33 | 264 | |
| 8 | 2709 | 16QAM | 16 | 264 | |
| 9 | 3045 | QPSK | 36 | 272 | |
| 9 | 3045 | 16QAM | 18 | 272 | |
| 10 | 3381 | QPSK | 40 | 279 | |
| 10 | 3381 | 16QAM | 20 | 279 | |
| 11 | 3717 | QPSK | 45 | 285 | |
| 11 | 3717 | 16QAM | 22 | 285 | |
| 12 | 4053 | QPSK | 50 | 291 | |
| 12 | 4053 | 16QAM | 25 | 291 | |
| 13 | 4389 | QPSK | 54 | 297 | |
| 13 | 4389 | 16QAM | 27 | 297 | |
| 14 | 4725 | QPSK | 56 | 302 | |
| 14 | 4725 | 16QAM | 28 | 302 | |
| 15 | 5061 | QPSK | 60 | 306 | |
| 15 | 5061 | 16QAM | 30 | 306 | |
| 16 | 5397 | QPSK | 66 | 311 | |
| 16 | 5397 | 16QAM | 33 | 311 | |
| 17 | 5733 | QPSK | 70 | 315 | |
| 17 | 5733 | 16QAM | 35 | 315 | |
| 18 | 6069 | QPSK | 75 | 319 | |
| 18 | 6069 | 16QAM | 36 | 319 | |
| 19 | 6405 | QPSK | 78 | 323 | |
| 19 | 6405 | 16QAM | 39 | 323 | |
| 20 | 6741 | QPSK | 81 | 326 | |
| 20 | 6741 | 16QAM | 40 | 326 | |
| 21 | 7077 | QPSK | 84 | 329 | |
| 21 | 7077 | 16QAM | 42 | 329 | |
| 22 | 7413 | QPSK | 91 | 332 | |
| 22 | 7413 | 16QAM | 45 | 332 | |
| 23 | 7749 | QPSK | 96 | 336 | |
| 23 | 7749 | 16QAM | 48 | 336 | |
| 24 | 8085 | QPSK | 99 | 338 | |
| 24 | 8085 | 16QAM | 49 | 338 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 104 | 341 | |
| 25 | 8421 | 16QAM | 52 | 341 | |
| 26 | 8757 | QPSK | 108 | 344 | |
| 26 | 8757 | 16QAM | 54 | 344 | |
| 27 | 9093 | QPSK | 112 | 346 | |
| 27 | 9093 | 16QAM | 56 | 346 | |
| 28 | 9429 | QPSK | 117 | 349 | |
| 28 | 9429 | 16QAM | 56 | 349 | |
| 29 | 9765 | QPSK | 120 | 351 | |
| 29 | 9765 | 16QAM | 60 | 351 | |
| 30 | 10101 | QPSK | 121 | 354 | |
| 30 | 10101 | 16QAM | 60 | 354 | |
| 31 | 10437 | QPSK | 128 | 356 | |
| 31 | 10437 | 16QAM | 64 | 356 | |
| 32 | 10773 | QPSK | 132 | 358 | |
| 32 | 10773 | 16QAM | 66 | 358 | |
| 33 | 11109 | QPSK | 135 | 360 | |
| 33 | 11109 | 16QAM | 66 | 360 | |
| 34 | 11445 | QPSK | 140 | 362 | |
| 34 | 11445 | 16QAM | 70 | 362 | |
| 35 | 11781 | QPSK | 144 | 364 | |
| 35 | 11781 | 16QAM | 72 | 364 | |
| 36 | 12117 | QPSK | 150 | 366 | |
| 36 | 12117 | 16QAM | 75 | 366 | |
| 37 | 12453 | QPSK | 154 | 368 | |
| 37 | 12453 | 16QAM | 77 | 368 | |
| 38 | 12789 | QPSK | 156 | 370 | |
| 38 | 12789 | 16QAM | 78 | 370 | |
| 39 | 13125 | QPSK | 160 | 371 | |
| 39 | 13125 | 16QAM | 80 | 371 | |
| 40 | 13461 | QPSK | 165 | 373 | |
| 40 | 13461 | 16QAM | 81 | 373 | |
| 41 | 13797 | QPSK | 168 | 375 | |
| 41 | 13797 | 16QAM | 84 | 375 | |
| 42 | 14133 | QPSK | 176 | 377 | |
| 42 | 14133 | 16QAM | 88 | 377 | |
| 43 | 14469 | QPSK | 176 | 378 | |
| 43 | 14469 | 16QAM | 88 | 378 | |
| 44 | 14805 | QPSK | 180 | 380 | |
| 44 | 14805 | 16QAM | 91 | 380 | |
| 45 | 15141 | QPSK | 180 | 381 | |
| 45 | 15141 | 16QAM | 91 | 381 | |
| 46 | 15477 | QPSK | 192 | 383 | |
| 46 | 15477 | 16QAM | 96 | 383 | |
| 47 | 15813 | QPSK | 192 | 384 | |
| 47 | 15813 | 16QAM | 96 | 384 | |
| 48 | 16149 | QPSK | 192 | 386 | |
| 48 | 16149 | 16QAM | 100 | 386 | |
| 49 | 16485 | QPSK | 192 | 387 | |
| 49 | 16485 | 16QAM | 100 | 387 | |
| 50 | 16821 | QPSK | 192 | 388 | |
| 50 | 16821 | 16QAM | 100 | 388 | |
| 51 | 17157 | QPSK | 192 | 390 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16QAM | 105 | 390 | |
| 52 | 17493 | QPSK | 192 | 391 | |
| 52 | 17493 | 16QAM | 108 | 391 | |
| 53 | 17829 | QPSK | 192 | 392 | |
| 53 | 17829 | 16QAM | 108 | 392 | |
| 54 | 18165 | QPSK | 192 | 394 | |
| 54 | 18165 | 16QAM | 112 | 394 | |
| 55 | 18501 | QPSK | 192 | 395 | |
| 55 | 18501 | 16QAM | 112 | 395 | |
| 56 | 18837 | QPSK | 192 | 396 | |
| 56 | 18837 | 16QAM | 112 | 396 | |
| 57 | 19173 | QPSK | 192 | 397 | |
| 57 | 19173 | 16QAM | 117 | 397 | |
| 58 | 19509 | QPSK | 192 | 398 | |
| 58 | 19509 | 16QAM | 120 | 398 | |
| 59 | 19845 | QPSK | 192 | 400 | |
| 59 | 19845 | 16QAM | 121 | 400 | |
| 60 | 20181 | QPSK | 192 | 401 | |
| 60 | 20181 | 16QAM | 121 | 401 | |
| 61 | 20517 | QPSK | 192 | 402 | |
| 61 | 20517 | 16QAM | 126 | 402 | |
| 62 | 20853 | QPSK | 192 | 403 | |
| 62 | 20853 | 16QAM | 128 | 403 | |
| 63 | 21189 | QPSK | 192 | 404 | |
| 63 | 21189 | 16QAM | 130 | 404 | |
| 64 | 21525 | QPSK | 192 | 405 | |
| 64 | 21525 | 16QAM | 132 | 405 | |
| 65 | 21861 | QPSK | 192 | 406 | |
| 65 | 21861 | 16QAM | 132 | 406 | |
| 66 | 22197 | QPSK | 192 | 407 | |
| 66 | 22197 | 16QAM | 135 | 407 | |
| 67 | 22533 | QPSK | 192 | 408 | |
| 67 | 22533 | 16QAM | 135 | 408 | |
| 68 | 22869 | QPSK | 192 | 409 | |
| 68 | 22869 | 16QAM | 140 | 409 | |
| 69 | 23205 | QPSK | 192 | 410 | |
| 69 | 23205 | 16QAM | 143 | 410 | |
| 70 | 23541 | QPSK | 192 | 411 | |
| 70 | 23541 | 16QAM | 144 | 411 | |
| 71 | 23877 | QPSK | 192 | 412 | |
| 71 | 23877 | 16QAM | 144 | 412 | |
| 72 | 24213 | QPSK | 192 | 413 | |
| 72 | 24213 | 16QAM | 144 | 413 | |
| 73 | 24549 | QPSK | 192 | 414 | |
| 73 | 24549 | 16QAM | 144 | 414 | |
| 74 | 24885 | QPSK | 192 | 415 | |
| 74 | 24885 | 16QAM | 144 | 415 | |
| 75 | 25221 | QPSK | 192 | 416 | |
| 75 | 25221 | 16QAM | 144 | 416 | |
| 76 | 25557 | QPSK | 192 | 417 | |
| 76 | 25557 | 16QAM | 144 | 417 | |
| 77 | 25893 | QPSK | 192 | 418 | |
| 77 | 25893 | 16QAM | 144 | 418 | |

| | | | | | |
|---|---|---|---|---|---|
| 78 | 26229 | QPSK | 192 | 419 | |
| 78 | 26229 | 16QAM | 144 | 419 | |
| 79 | 26565 | QPSK | 192 | 420 | |
| 79 | 26565 | 16QAM | 144 | 420 | |
| 80 | 26901 | QPSK | 192 | 420 | |
| 80 | 26901 | 16QAM | 144 | 420 | |
| 81 | 27237 | QPSK | 192 | 421 | |
| 81 | 27237 | 16QAM | 144 | 421 | |
| 82 | 27573 | QPSK | 192 | 422 | |
| 82 | 27573 | 16QAM | 144 | 422 | |
| 83 | 27909 | QPSK | 192 | 423 | |
| 83 | 27909 | 16QAM | 144 | 423 | |
| 84 | 28245 | QPSK | 192 | 424 | |
| 84 | 28245 | 16QAM | 144 | 424 | |
| 85 | 28581 | QPSK | 192 | 425 | |
| 85 | 28581 | 16QAM | 144 | 425 | |
| 86 | 28917 | QPSK | 192 | 425 | |
| 86 | 28917 | 16QAM | 144 | 425 | |
| 87 | 29253 | QPSK | 192 | 426 | |
| 87 | 29253 | 16QAM | 144 | 426 | |
| 88 | 29589 | QPSK | 192 | 427 | |
| 88 | 29589 | 16QAM | 144 | 427 | |
| 89 | 29925 | QPSK | 192 | 428 | |
| 89 | 29925 | 16QAM | 144 | 428 | |
| 90 | 30261 | QPSK | 192 | 428 | |
| 90 | 30261 | 16QAM | 144 | 428 | |
| 91 | 30597 | QPSK | 192 | 429 | |
| 91 | 30597 | 16QAM | 144 | 429 | |
| 92 | 30933 | QPSK | 192 | 430 | |
| 92 | 30933 | 16QAM | 144 | 430 | |
| 93 | 31269 | QPSK | 192 | 431 | |
| 93 | 31269 | 16QAM | 144 | 431 | |
| 94 | 31605 | QPSK | 192 | 431 | |
| 94 | 31605 | 16QAM | 144 | 431 | |
| 95 | 31941 | QPSK | 192 | 432 | |
| 95 | 31941 | 16QAM | 144 | 432 | |
| 96 | 32277 | QPSK | 192 | 433 | |
| 96 | 32277 | 16QAM | 144 | 433 | |
| 97 | 32613 | QPSK | 192 | 434 | |
| 97 | 32613 | 16QAM | 144 | 434 | |
| 98 | 32949 | QPSK | 192 | 434 | |
| 98 | 32949 | 16QAM | 144 | 434 | |
| 99 | 33285 | QPSK | 192 | 435 | |
| 99 | 33285 | 16QAM | 144 | 435 | |
| 100 | 33621 | QPSK | 192 | 436 | |
| 100 | 33621 | 16QAM | 144 | 436 | |
| 101 | 33957 | QPSK | 192 | 436 | |
| 101 | 33957 | 16QAM | 144 | 436 | |
| 102 | 34293 | QPSK | 192 | 437 | |
| 102 | 34293 | 16QAM | 144 | 437 | |
| 103 | 34629 | QPSK | 192 | 438 | |
| 103 | 34629 | 16QAM | 144 | 438 | |
| 104 | 34965 | QPSK | 192 | 438 | |

| | | | | | |
|---|---|---|---|---|---|
| 104 | 34965 | 16QAM | 144 | 438 | |
| 105 | 35301 | QPSK | 192 | 439 | |
| 105 | 35301 | 16QAM | 144 | 439 | |
| 106 | 35637 | QPSK | 192 | 442 | |
| 106 | 35637 | 16QAM | 144 | 440 | |
| 107 | 35973 | QPSK | 192 | 442 | |
| 107 | 35973 | 16QAM | 144 | 440 | |
| 108 | 36309 | QPSK | 192 | 442 | |
| 108 | 36309 | 16QAM | 144 | 441 | |
| 109 | 36645 | QPSK | 192 | 442 | |
| 109 | 36645 | 16QAM | 144 | 441 | |
| 110 | 36981 | QPSK | 192 | 442 | |
| 110 | 36981 | 16QAM | 144 | 442 | |
| 111 | 37317 | QPSK | 192 | 443 | |
| 111 | 37317 | 16QAM | 144 | 443 | |
| 112 | 37653 | QPSK | 192 | 443 | |
| 112 | 37653 | 16QAM | 144 | 443 | |
| 113 | 37989 | QPSK | 192 | 444 | |
| 113 | 37989 | 16QAM | 144 | 444 | |
| 114 | 38325 | QPSK | 192 | 445 | |
| 114 | 38325 | 16QAM | 144 | 445 | |
| 115 | 38661 | QPSK | 192 | 445 | |
| 115 | 38661 | 16QAM | 144 | 445 | |
| 116 | 38997 | QPSK | 192 | 446 | |
| 116 | 38997 | 16QAM | 144 | 446 | |
| 117 | 39333 | QPSK | 192 | 446 | |
| 117 | 39333 | 16QAM | 144 | 446 | |
| 118 | 39669 | QPSK | 192 | 447 | |
| 118 | 39669 | 16QAM | 144 | 447 | |
| 119 | 40005 | QPSK | 192 | 447 | |
| 119 | 40005 | 16QAM | 144 | 447 | |
| 120 | 40341 | QPSK | 192 | 448 | |
| 120 | 40341 | 16QAM | 144 | 448 | |
| 121 | 40677 | QPSK | 192 | 449 | |
| 121 | 40677 | 16QAM | 144 | 449 | |
| 122 | 41013 | QPSK | 192 | 449 | |
| 122 | 41013 | 16QAM | 144 | 449 | |
| 123 | 41349 | QPSK | 192 | 450 | |
| 123 | 41349 | 16QAM | 144 | 450 | |
| 124 | 41685 | QPSK | 192 | 450 | |
| 124 | 41685 | 16QAM | 144 | 450 | |
| 125 | 42021 | QPSK | 192 | 451 | |
| 125 | 42021 | 16QAM | 144 | 451 | |
| 126 | 42357 | QPSK | 192 | 451 | |
| 126 | 42357 | 16QAM | 144 | 451 | |
| 127 | 42693 | QPSK | 192 | 452 | |
| 127 | 42693 | 16QAM | 144 | 452 | |
| 128 | 43029 | QPSK | 192 | 452 | |
| 128 | 43029 | 16QAM | 144 | 452 | |
| 129 | 43372 | QPSK | 192 | 453 | |
| 129 | 43372 | 16QAM | 144 | 453 | |
| 130 | 43708 | QPSK | 192 | 454 | |
| 130 | 43708 | 16QAM | 144 | 454 | |

| | | | | | |
|---|---|---|---|---|---|
| 131 | 44044 | QPSK | 192 | 454 | |
| 131 | 44044 | 16QAM | 144 | 454 | |
| 132 | 44380 | QPSK | 192 | 455 | |
| 132 | 44380 | 16QAM | 144 | 455 | |
| 133 | 44716 | QPSK | 192 | 455 | |
| 133 | 44716 | 16QAM | 144 | 455 | |
| 134 | 45052 | QPSK | 192 | 456 | |
| 134 | 45052 | 16QAM | 144 | 456 | |
| 135 | 45388 | QPSK | 192 | 456 | |
| 135 | 45388 | 16QAM | 144 | 456 | |
| 136 | 45724 | QPSK | 192 | 457 | |
| 136 | 45724 | 16QAM | 144 | 457 | |
| 137 | 46060 | QPSK | 192 | 457 | |
| 137 | 46060 | 16QAM | 144 | 457 | |
| 138 | 46396 | 16QAM | 144 | 458 | |
| 139 | 46732 | 16QAM | 144 | 458 | |
| 140 | 47068 | 16QAM | 144 | 459 | |
| 141 | 47404 | 16QAM | 144 | 459 | |
| 142 | 47740 | 16QAM | 144 | 460 | |
| 143 | 48076 | 16QAM | 144 | 460 | |
| 144 | 48412 | 16QAM | 144 | 460 | |
| 145 | 48748 | 16QAM | 144 | 461 | |
| 146 | 49084 | 16QAM | 144 | 461 | |
| 147 | 49420 | 16QAM | 144 | 462 | |
| 148 | 49756 | 16QAM | 144 | 462 | |
| 149 | 50092 | 16QAM | 144 | 463 | |
| 150 | 50428 | 16QAM | 144 | 463 | |
| 151 | 50764 | 16QAM | 144 | 464 | |
| 152 | 51100 | 16QAM | 144 | 464 | |
| 153 | 51436 | 16QAM | 144 | 465 | |
| 154 | 51772 | 16QAM | 144 | 465 | |
| 155 | 52108 | 16QAM | 144 | 465 | |
| 156 | 52444 | 16QAM | 144 | 466 | |
| 157 | 52780 | 16QAM | 144 | 466 | |

**Table 18.2.1.4.3.8: TFRC test points for UE category 8 for MAC-d PDU size=336, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 126 | |
| 1 | 357 | 16QAM | 2 | 126 | |
| 2 | 693 | QPSK | 8 | 171 | |
| 2 | 693 | 16QAM | 4 | 171 | |
| 3 | 1029 | QPSK | 12 | 198 | |
| 3 | 1029 | 16QAM | 6 | 198 | |
| 4 | 1365 | QPSK | 16 | 217 | |
| 4 | 1365 | 16QAM | 8 | 217 | |
| 5 | 1701 | QPSK | 21 | 232 | |
| 5 | 1701 | 16QAM | 10 | 232 | |
| 6 | 2037 | QPSK | 25 | 244 | |
| 6 | 2037 | 16QAM | 12 | 244 | |
| 7 | 2373 | QPSK | 28 | 255 | |
| 7 | 2373 | 16QAM | 14 | 255 | |
| 8 | 2709 | QPSK | 33 | 264 | |
| 8 | 2709 | 16QAM | 16 | 264 | |
| 9 | 3045 | QPSK | 36 | 272 | |
| 9 | 3045 | 16QAM | 18 | 272 | |
| 10 | 3381 | QPSK | 40 | 279 | |
| 10 | 3381 | 16QAM | 20 | 279 | |
| 11 | 3717 | QPSK | 45 | 285 | |
| 11 | 3717 | 16QAM | 22 | 285 | |
| 12 | 4053 | QPSK | 50 | 291 | |
| 12 | 4053 | 16QAM | 25 | 291 | |
| 13 | 4389 | QPSK | 54 | 297 | |
| 13 | 4389 | 16QAM | 27 | 297 | |
| 14 | 4725 | QPSK | 56 | 302 | |
| 14 | 4725 | 16QAM | 28 | 302 | |
| 15 | 5061 | QPSK | 60 | 306 | |
| 15 | 5061 | 16QAM | 30 | 306 | |
| 16 | 5397 | QPSK | 66 | 311 | |
| 16 | 5397 | 16QAM | 33 | 311 | |
| 17 | 5733 | QPSK | 70 | 315 | |
| 17 | 5733 | 16QAM | 35 | 315 | |
| 18 | 6069 | QPSK | 75 | 319 | |
| 18 | 6069 | 16QAM | 36 | 319 | |
| 19 | 6405 | QPSK | 78 | 323 | |
| 19 | 6405 | 16QAM | 39 | 323 | |
| 20 | 6741 | QPSK | 81 | 326 | |
| 20 | 6741 | 16QAM | 40 | 326 | |
| 21 | 7077 | QPSK | 84 | 329 | |
| 21 | 7077 | 16QAM | 42 | 329 | |
| 22 | 7413 | QPSK | 91 | 332 | |
| 22 | 7413 | 16QAM | 45 | 332 | |
| 23 | 7749 | QPSK | 96 | 336 | |
| 23 | 7749 | 16QAM | 48 | 336 | |
| 24 | 8085 | QPSK | 99 | 338 | |
| 24 | 8085 | 16QAM | 49 | 338 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 104 | 341 | |
| 25 | 8421 | 16QAM | 52 | 341 | |
| 26 | 8757 | QPSK | 108 | 344 | |
| 26 | 8757 | 16QAM | 54 | 344 | |
| 27 | 9093 | QPSK | 112 | 346 | |
| 27 | 9093 | 16QAM | 56 | 346 | |
| 28 | 9429 | QPSK | 117 | 349 | |
| 28 | 9429 | 16QAM | 56 | 349 | |
| 29 | 9765 | QPSK | 120 | 351 | |
| 29 | 9765 | 16QAM | 60 | 351 | |
| 30 | 10101 | QPSK | 121 | 354 | |
| 30 | 10101 | 16QAM | 60 | 354 | |
| 31 | 10437 | QPSK | 128 | 356 | |
| 31 | 10437 | 16QAM | 64 | 356 | |
| 32 | 10773 | QPSK | 132 | 358 | |
| 32 | 10773 | 16QAM | 66 | 358 | |
| 33 | 11109 | QPSK | 135 | 360 | |
| 33 | 11109 | 16QAM | 66 | 360 | |
| 34 | 11445 | QPSK | 140 | 362 | |
| 34 | 11445 | 16QAM | 70 | 362 | |
| 35 | 11781 | QPSK | 144 | 364 | |
| 35 | 11781 | 16QAM | 72 | 364 | |
| 36 | 12117 | QPSK | 150 | 366 | |
| 36 | 12117 | 16QAM | 75 | 366 | |
| 37 | 12453 | QPSK | 154 | 368 | |
| 37 | 12453 | 16QAM | 77 | 368 | |
| 38 | 12789 | QPSK | 156 | 370 | |
| 38 | 12789 | 16QAM | 78 | 370 | |
| 39 | 13125 | QPSK | 160 | 371 | |
| 39 | 13125 | 16QAM | 80 | 371 | |
| 40 | 13461 | QPSK | 165 | 373 | |
| 40 | 13461 | 16QAM | 81 | 373 | |
| 41 | 13797 | QPSK | 168 | 375 | |
| 41 | 13797 | 16QAM | 84 | 375 | |
| 42 | 14133 | QPSK | 176 | 377 | |
| 42 | 14133 | 16QAM | 88 | 377 | |
| 43 | 14469 | QPSK | 176 | 378 | |
| 43 | 14469 | 16QAM | 88 | 378 | |
| 44 | 14805 | QPSK | 180 | 380 | |
| 44 | 14805 | 16QAM | 91 | 380 | |
| 45 | 15141 | QPSK | 180 | 381 | |
| 45 | 15141 | 16QAM | 91 | 381 | |
| 46 | 15477 | QPSK | 192 | 383 | |
| 46 | 15477 | 16QAM | 96 | 383 | |
| 47 | 15813 | QPSK | 192 | 384 | |
| 47 | 15813 | 16QAM | 96 | 384 | |
| 48 | 16149 | QPSK | 192 | 386 | |
| 48 | 16149 | 16QAM | 100 | 386 | |
| 49 | 16485 | QPSK | 192 | 387 | |
| 49 | 16485 | 16QAM | 100 | 387 | |
| 50 | 16821 | QPSK | 192 | 388 | |
| 50 | 16821 | 16QAM | 100 | 388 | |
| 51 | 17157 | QPSK | 192 | 390 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16QAM | 105 | 390 | |
| 52 | 17493 | QPSK | 192 | 391 | |
| 52 | 17493 | 16QAM | 108 | 391 | |
| 53 | 17829 | QPSK | 192 | 392 | |
| 53 | 17829 | 16QAM | 108 | 392 | |
| 54 | 18165 | QPSK | 192 | 394 | |
| 54 | 18165 | 16QAM | 112 | 394 | |
| 55 | 18501 | QPSK | 192 | 395 | |
| 55 | 18501 | 16QAM | 112 | 395 | |
| 56 | 18837 | QPSK | 192 | 396 | |
| 56 | 18837 | 16QAM | 112 | 396 | |
| 57 | 19173 | QPSK | 192 | 397 | |
| 57 | 19173 | 16QAM | 117 | 397 | |
| 58 | 19509 | QPSK | 192 | 398 | |
| 58 | 19509 | 16QAM | 120 | 398 | |
| 59 | 19845 | QPSK | 192 | 400 | |
| 59 | 19845 | 16QAM | 121 | 400 | |
| 60 | 20181 | QPSK | 192 | 401 | |
| 60 | 20181 | 16QAM | 121 | 401 | |
| 61 | 20517 | QPSK | 192 | 402 | |
| 61 | 20517 | 16QAM | 126 | 402 | |
| 62 | 20853 | QPSK | 192 | 403 | |
| 62 | 20853 | 16QAM | 128 | 403 | |
| 63 | 21189 | QPSK | 192 | 404 | |
| 63 | 21189 | 16QAM | 130 | 404 | |
| 64 | 21525 | QPSK | 192 | 405 | |
| 64 | 21525 | 16QAM | 132 | 405 | |
| 65 | 21861 | QPSK | 192 | 406 | |
| 65 | 21861 | 16QAM | 132 | 406 | |
| 66 | 22197 | QPSK | 192 | 407 | |
| 66 | 22197 | 16QAM | 135 | 407 | |
| 67 | 22533 | QPSK | 192 | 408 | |
| 67 | 22533 | 16QAM | 135 | 408 | |
| 68 | 22869 | QPSK | 192 | 409 | |
| 68 | 22869 | 16QAM | 140 | 409 | |
| 69 | 23205 | QPSK | 192 | 410 | |
| 69 | 23205 | 16QAM | 143 | 410 | |
| 70 | 23541 | QPSK | 192 | 411 | |
| 70 | 23541 | 16QAM | 144 | 411 | |
| 71 | 23877 | QPSK | 192 | 412 | |
| 71 | 23877 | 16QAM | 144 | 412 | |
| 72 | 24213 | QPSK | 192 | 413 | |
| 72 | 24213 | 16QAM | 144 | 413 | |
| 73 | 24549 | QPSK | 192 | 414 | |
| 73 | 24549 | 16QAM | 150 | 414 | |
| 74 | 24885 | QPSK | 192 | 415 | |
| 74 | 24885 | 16QAM | 154 | 415 | |
| 75 | 25221 | QPSK | 192 | 416 | |
| 75 | 25221 | 16QAM | 156 | 416 | |
| 76 | 25557 | QPSK | 192 | 417 | |
| 76 | 25557 | 16QAM | 156 | 417 | |
| 77 | 25893 | QPSK | 192 | 418 | |
| 77 | 25893 | 16QAM | 160 | 418 | |

| | | | | | |
|---|---|---|---|---|---|
| 78 | 26229 | QPSK | 192 | 419 | |
| 78 | 26229 | 16QAM | 160 | 419 | |
| 79 | 26565 | QPSK | 192 | 420 | |
| 79 | 26565 | 16QAM | 165 | 420 | |
| 80 | 26901 | QPSK | 192 | 420 | |
| 80 | 26901 | 16QAM | 165 | 420 | |
| 81 | 27237 | QPSK | 192 | 421 | |
| 81 | 27237 | 16QAM | 168 | 421 | |
| 82 | 27573 | QPSK | 192 | 422 | |
| 82 | 27573 | 16QAM | 168 | 422 | |
| 83 | 27909 | QPSK | 192 | 423 | |
| 83 | 27909 | 16QAM | 168 | 423 | |
| 84 | 28245 | QPSK | 192 | 424 | |
| 84 | 28245 | 16QAM | 168 | 424 | |
| 85 | 28581 | QPSK | 192 | 425 | |
| 85 | 28581 | 16QAM | 176 | 425 | |
| 86 | 28917 | QPSK | 192 | 425 | |
| 86 | 28917 | 16QAM | 176 | 425 | |
| 87 | 29253 | QPSK | 192 | 426 | |
| 87 | 29253 | 16QAM | 180 | 426 | |
| 88 | 29589 | QPSK | 192 | 427 | |
| 88 | 29589 | 16QAM | 180 | 427 | |
| 89 | 29925 | QPSK | 192 | 428 | |
| 89 | 29925 | 16QAM | 180 | 428 | |
| 90 | 30261 | QPSK | 192 | 428 | |
| 90 | 30261 | 16QAM | 180 | 428 | |
| 91 | 30597 | QPSK | 192 | 429 | |
| 91 | 30597 | 16QAM | 180 | 429 | |
| 92 | 30933 | QPSK | 192 | 430 | |
| 92 | 30933 | 16QAM | 180 | 430 | |
| 93 | 31269 | QPSK | 192 | 431 | |
| 93 | 31269 | 16QAM | 180 | 431 | |
| 94 | 31605 | QPSK | 192 | 431 | |
| 94 | 31605 | 16QAM | 180 | 431 | |
| 95 | 31941 | QPSK | 192 | 432 | |
| 95 | 31941 | 16QAM | 180 | 432 | |
| 96 | 32277 | QPSK | 192 | 433 | |
| 96 | 32277 | 16QAM | 180 | 433 | |
| 97 | 32613 | QPSK | 192 | 434 | |
| 97 | 32613 | 16QAM | 180 | 434 | |
| 98 | 32949 | QPSK | 192 | 434 | |
| 98 | 32949 | 16QAM | 180 | 434 | |
| 99 | 33285 | QPSK | 192 | 435 | |
| 99 | 33285 | 16QAM | 180 | 435 | |
| 100 | 33621 | QPSK | 192 | 436 | |
| 100 | 33621 | 16QAM | 180 | 436 | |
| 101 | 33957 | QPSK | 192 | 436 | |
| 101 | 33957 | 16QAM | 180 | 436 | |
| 102 | 34293 | QPSK | 192 | 437 | |
| 102 | 34293 | 16QAM | 180 | 437 | |
| 103 | 34629 | QPSK | 192 | 438 | |
| 103 | 34629 | 16QAM | 180 | 438 | |
| 104 | 34965 | QPSK | 192 | 438 | |

| | | | | | |
|---|---|---|---|---|---|
| 104 | 34965 | 16QAM | 180 | 438 | |
| 105 | 35301 | QPSK | 192 | 439 | |
| 105 | 35301 | 16QAM | 180 | 439 | |
| 106 | 35637 | QPSK | 192 | 442 | |
| 106 | 35637 | 16QAM | 180 | 440 | |
| 107 | 35973 | QPSK | 192 | 442 | |
| 107 | 35973 | 16QAM | 180 | 440 | |
| 108 | 36309 | QPSK | 192 | 442 | |
| 108 | 36309 | 16QAM | 180 | 441 | |
| 109 | 36645 | QPSK | 192 | 442 | |
| 109 | 36645 | 16QAM | 180 | 441 | |
| 110 | 36981 | QPSK | 192 | 442 | |
| 110 | 36981 | 16QAM | 180 | 442 | |
| 111 | 37317 | QPSK | 192 | 443 | |
| 111 | 37317 | 16QAM | 180 | 443 | |
| 112 | 37653 | QPSK | 192 | 443 | |
| 112 | 37653 | 16QAM | 180 | 443 | |
| 113 | 37989 | QPSK | 192 | 444 | |
| 113 | 37989 | 16QAM | 180 | 444 | |
| 114 | 38325 | QPSK | 192 | 445 | |
| 114 | 38325 | 16QAM | 180 | 445 | |
| 115 | 38661 | QPSK | 192 | 445 | |
| 115 | 38661 | 16QAM | 180 | 445 | |
| 116 | 38997 | QPSK | 192 | 446 | |
| 116 | 38997 | 16QAM | 180 | 446 | |
| 117 | 39333 | QPSK | 192 | 446 | |
| 117 | 39333 | 16QAM | 180 | 446 | |
| 118 | 39669 | QPSK | 192 | 447 | |
| 118 | 39669 | 16QAM | 180 | 447 | |
| 119 | 40005 | QPSK | 192 | 447 | |
| 119 | 40005 | 16QAM | 180 | 447 | |
| 120 | 40341 | QPSK | 192 | 448 | |
| 120 | 40341 | 16QAM | 180 | 448 | |
| 121 | 40677 | QPSK | 192 | 449 | |
| 121 | 40677 | 16QAM | 180 | 449 | |
| 122 | 41013 | QPSK | 192 | 449 | |
| 122 | 41013 | 16QAM | 180 | 449 | |
| 123 | 41349 | QPSK | 192 | 450 | |
| 123 | 41349 | 16QAM | 180 | 450 | |
| 124 | 41685 | QPSK | 192 | 450 | |
| 124 | 41685 | 16QAM | 180 | 450 | |
| 125 | 42021 | QPSK | 192 | 451 | |
| 125 | 42021 | 16QAM | 180 | 451 | |
| 126 | 42357 | QPSK | 192 | 451 | |
| 126 | 42357 | 16QAM | 180 | 451 | |
| 127 | 42693 | QPSK | 192 | 452 | |
| 127 | 42693 | 16QAM | 180 | 452 | |
| 128 | 43029 | QPSK | 192 | 452 | |
| 128 | 43029 | 16QAM | 180 | 452 | |
| 129 | 43372 | QPSK | 192 | 453 | |
| 129 | 43372 | 16QAM | 180 | 453 | |
| 130 | 43708 | QPSK | 192 | 454 | |
| 130 | 43708 | 16QAM | 180 | 454 | |

| | | | | | |
|---|---|---|---|---|---|
| 131 | 44044 | QPSK | 192 | 454 | |
| 131 | 44044 | 16QAM | 180 | 454 | |
| 132 | 44380 | QPSK | 192 | 455 | |
| 132 | 44380 | 16QAM | 180 | 455 | |
| 133 | 44716 | QPSK | 192 | 455 | |
| 133 | 44716 | 16QAM | 180 | 455 | |
| 134 | 45052 | QPSK | 192 | 456 | |
| 134 | 45052 | 16QAM | 180 | 456 | |
| 135 | 45388 | QPSK | 192 | 456 | |
| 135 | 45388 | 16QAM | 180 | 456 | |
| 136 | 45724 | QPSK | 192 | 457 | |
| 136 | 45724 | 16QAM | 180 | 457 | |
| 137 | 46060 | QPSK | 192 | 457 | |
| 137 | 46060 | 16QAM | 180 | 457 | |
| 138 | 46396 | 16QAM | 180 | 458 | |
| 139 | 46732 | 16QAM | 180 | 458 | |
| 140 | 47068 | 16QAM | 180 | 459 | |
| 141 | 47404 | 16QAM | 180 | 459 | |
| 142 | 47740 | 16QAM | 180 | 460 | |
| 143 | 48076 | 16QAM | 180 | 460 | |
| 144 | 48412 | 16QAM | 180 | 460 | |
| 145 | 48748 | 16QAM | 180 | 461 | |
| 146 | 49084 | 16QAM | 180 | 461 | |
| 147 | 49420 | 16QAM | 180 | 462 | |
| 148 | 49756 | 16QAM | 180 | 462 | |
| 149 | 50092 | 16QAM | 180 | 463 | |
| 150 | 50428 | 16QAM | 180 | 463 | |
| 151 | 50764 | 16QAM | 180 | 464 | |
| 152 | 51100 | 16QAM | 180 | 464 | |
| 153 | 51436 | 16QAM | 180 | 465 | |
| 154 | 51772 | 16QAM | 180 | 465 | |
| 155 | 52108 | 16QAM | 180 | 465 | |
| 156 | 52444 | 16QAM | 180 | 466 | |
| 157 | 52780 | 16QAM | 180 | 466 | |
| 158 | 53116 | 16QAM | 180 | 467 | |
| 159 | 53452 | 16QAM | 180 | 467 | |
| 160 | 53788 | 16QAM | 180 | 468 | |
| 161 | 54124 | 16QAM | 180 | 468 | |
| 162 | 54460 | 16QAM | 180 | 469 | |
| 163 | 54796 | 16QAM | 180 | 469 | |
| 164 | 55132 | 16QAM | 180 | 469 | |
| 165 | 55468 | 16QAM | 180 | 470 | |
| 166 | 55804 | 16QAM | 180 | 470 | |
| 167 | 56140 | 16QAM | 180 | 471 | |
| 168 | 56476 | 16QAM | 180 | 471 | |
| 169 | 56812 | 16QAM | 180 | 471 | |
| 170 | 57148 | 16QAM | 180 | 472 | |
| 171 | 57484 | 16QAM | 180 | 472 | |
| 172 | 57820 | 16QAM | 180 | 473 | |
| 173 | 58156 | 16QAM | 180 | 473 | |
| 174 | 58492 | 16QAM | 180 | 473 | |
| 175 | 58828 | 16QAM | 180 | 474 | |
| 176 | 59164 | 16QAM | 180 | 474 | |

| | | | | | |
|---|---|---|---|---|---|
| 177 | 59500 | 16QAM | 180 | 475 | |
| 178 | 59836 | 16QAM | 180 | 475 | |
| 179 | 60172 | 16QAM | 180 | 475 | |
| 180 | 60508 | 16QAM | 180 | 476 | |
| 181 | 60844 | 16QAM | 180 | 476 | |
| 182 | 61180 | 16QAM | 180 | 476 | |
| 183 | 61516 | 16QAM | 180 | 477 | |
| 184 | 61852 | 16QAM | 180 | 477 | |
| 185 | 62188 | 16QAM | 180 | 478 | |
| 186 | 62524 | 16QAM | 180 | 478 | |
| 187 | 62860 | 16QAM | 180 | 478 | |
| 188 | 63196 | 16QAM | 180 | 479 | |
| 189 | 63532 | 16QAM | 180 | 479 | |
| 190 | 63868 | 16QAM | 180 | 479 | |
| 191 | 64204 | 16QAM | 180 | 480 | |
| 192 | 64540 | 16QAM | 180 | 480 | |
| 193 | 64876 | 16QAM | 180 | 480 | |
| 194 | 65212 | 16QAM | 180 | 481 | |
| 195 | 65548 | 16QAM | 180 | 481 | |
| 196 | 65884 | 16QAM | 180 | 481 | |
| 197 | 66220 | 16QAM | 180 | 482 | |
| 198 | 66556 | 16QAM | 180 | 482 | |
| 199 | 66892 | 16QAM | 180 | 483 | |
| 200 | 67228 | 16QAM | 180 | 483 | |
| 201 | 67564 | 16QAM | 180 | 483 | |
| 202 | 67900 | 16QAM | 180 | 484 | |
| 203 | 68236 | 16QAM | 180 | 484 | |
| 204 | 68572 | 16QAM | 180 | 484 | |
| 205 | 68908 | 16QAM | 180 | 485 | |
| 206 | 69244 | 16QAM | 180 | 485 | |
| 207 | 69580 | 16QAM | 180 | 485 | |
| 208 | 69916 | 16QAM | 180 | 486 | |
| 209 | 70252 | 16QAM | 180 | 486 | |
| 210 | 70588 | 16QAM | 180 | 486 | |
| 211 | 70924 | 16QAM | 180 | 487 | |
| 212 | 71260 | 16QAM | 180 | 487 | |
| 213 | 71596 | 16QAM | 180 | 487 | |
| 214 | 71932 | 16QAM | 180 | 487 | |
| 215 | 72268 | 16QAM | 180 | 489 | |
| 216 | 72604 | 16QAM | 180 | 489 | |
| 217 | 72940 | 16QAM | 180 | 489 | |

**Table 18.2.1.4.3.9: TFRC test points for UE category 9 for MAC-d PDU size=336, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 126 | 4 | |
| 1 | 357 | 16QAM | 126 | 2 | |
| 2 | 693 | QPSK | 171 | 8 | |
| 2 | 693 | 16QAM | 171 | 4 | |
| 3 | 1029 | QPSK | 198 | 12 | |
| 3 | 1029 | 16QAM | 198 | 6 | |
| 4 | 1365 | QPSK | 217 | 16 | |
| 4 | 1365 | 16QAM | 217 | 8 | |
| 5 | 1701 | QPSK | 232 | 21 | |
| 5 | 1701 | 16QAM | 232 | 10 | |
| 6 | 2037 | QPSK | 244 | 25 | |
| 6 | 2037 | 16QAM | 244 | 12 | |
| 7 | 2373 | QPSK | 255 | 28 | |
| 7 | 2373 | 16QAM | 255 | 14 | |
| 8 | 2709 | QPSK | 264 | 33 | |
| 8 | 2709 | 16QAM | 264 | 16 | |
| 9 | 3045 | QPSK | 272 | 36 | |
| 9 | 3045 | 16QAM | 272 | 18 | |
| 10 | 3381 | QPSK | 279 | 40 | |
| 10 | 3381 | 16QAM | 279 | 20 | |
| 11 | 3717 | QPSK | 285 | 45 | |
| 11 | 3717 | 16QAM | 285 | 22 | |
| 12 | 4053 | QPSK | 291 | 50 | |
| 12 | 4053 | 16QAM | 291 | 25 | |
| 13 | 4389 | QPSK | 297 | 54 | |
| 13 | 4389 | 16QAM | 297 | 27 | |
| 14 | 4725 | QPSK | 302 | 56 | |
| 14 | 4725 | 16QAM | 302 | 28 | |
| 15 | 5061 | QPSK | 306 | 60 | |
| 15 | 5061 | 16QAM | 306 | 30 | |
| 16 | 5397 | QPSK | 311 | 66 | |
| 16 | 5397 | 16QAM | 311 | 33 | |
| 17 | 5733 | QPSK | 315 | 70 | |
| 17 | 5733 | 16QAM | 315 | 35 | |
| 18 | 6069 | QPSK | 319 | 75 | |
| 18 | 6069 | 16QAM | 319 | 36 | |
| 19 | 6405 | QPSK | 323 | 78 | |
| 19 | 6405 | 16QAM | 323 | 39 | |
| 20 | 6741 | QPSK | 326 | 81 | |
| 20 | 6741 | 16QAM | 326 | 40 | |
| 21 | 7077 | QPSK | 329 | 84 | |
| 21 | 7077 | 16QAM | 329 | 42 | |
| 22 | 7413 | QPSK | 332 | 91 | |
| 22 | 7413 | 16QAM | 332 | 45 | |
| 23 | 7749 | QPSK | 336 | 96 | |
| 23 | 7749 | 16QAM | 336 | 48 | |
| 24 | 8085 | QPSK | 338 | 99 | |
| 24 | 8085 | 16QAM | 338 | 49 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 341 | 104 | |
| 25 | 8421 | 16QAM | 341 | 52 | |
| 26 | 8757 | QPSK | 344 | 108 | |
| 26 | 8757 | 16QAM | 344 | 54 | |
| 27 | 9093 | QPSK | 346 | 112 | |
| 27 | 9093 | 16QAM | 346 | 56 | |
| 28 | 9429 | QPSK | 349 | 117 | |
| 28 | 9429 | 16QAM | 349 | 56 | |
| 29 | 9765 | QPSK | 351 | 120 | |
| 29 | 9765 | 16QAM | 351 | 60 | |
| 30 | 10101 | QPSK | 354 | 121 | |
| 30 | 10101 | 16QAM | 354 | 60 | |
| 31 | 10437 | QPSK | 356 | 128 | |
| 31 | 10437 | 16QAM | 356 | 64 | |
| 32 | 10773 | QPSK | 358 | 132 | |
| 32 | 10773 | 16QAM | 358 | 66 | |
| 33 | 11109 | QPSK | 360 | 135 | |
| 33 | 11109 | 16QAM | 360 | 66 | |
| 34 | 11445 | QPSK | 362 | 140 | |
| 34 | 11445 | 16QAM | 362 | 70 | |
| 35 | 11781 | QPSK | 364 | 144 | |
| 35 | 11781 | 16QAM | 364 | 72 | |
| 36 | 12117 | QPSK | 366 | 150 | |
| 36 | 12117 | 16QAM | 366 | 75 | |
| 37 | 12453 | QPSK | 368 | 154 | |
| 37 | 12453 | 16QAM | 368 | 77 | |
| 38 | 12789 | QPSK | 370 | 156 | |
| 38 | 12789 | 16QAM | 370 | 78 | |
| 39 | 13125 | QPSK | 371 | 160 | |
| 39 | 13125 | 16QAM | 371 | 80 | |
| 40 | 13461 | QPSK | 373 | 165 | |
| 40 | 13461 | 16QAM | 373 | 81 | |
| 41 | 13797 | QPSK | 375 | 168 | |
| 41 | 13797 | 16QAM | 375 | 84 | |
| 42 | 14133 | QPSK | 377 | 176 | |
| 42 | 14133 | 16QAM | 377 | 88 | |
| 43 | 14469 | QPSK | 378 | 176 | |
| 43 | 14469 | 16QAM | 378 | 88 | |
| 44 | 14805 | QPSK | 380 | 180 | |
| 44 | 14805 | 16QAM | 380 | 91 | |
| 45 | 15141 | QPSK | 381 | 180 | |
| 45 | 15141 | 16QAM | 381 | 91 | |
| 46 | 15477 | QPSK | 383 | 192 | |
| 46 | 15477 | 16QAM | 383 | 96 | |
| 47 | 15813 | QPSK | 384 | 192 | |
| 47 | 15813 | 16QAM | 384 | 96 | |
| 48 | 16149 | QPSK | 386 | 192 | |
| 48 | 16149 | 16QAM | 386 | 100 | |
| 49 | 16485 | QPSK | 387 | 192 | |
| 49 | 16485 | 16QAM | 387 | 100 | |
| 50 | 16821 | QPSK | 388 | 192 | |
| 50 | 16821 | 16QAM | 388 | 100 | |
| 51 | 17157 | QPSK | 390 | 192 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16QAM | 390 | 105 | |
| 52 | 17493 | QPSK | 391 | 192 | |
| 52 | 17493 | 16QAM | 391 | 108 | |
| 53 | 17829 | QPSK | 392 | 192 | |
| 53 | 17829 | 16QAM | 392 | 108 | |
| 54 | 18165 | QPSK | 394 | 192 | |
| 54 | 18165 | 16QAM | 394 | 112 | |
| 55 | 18501 | QPSK | 395 | 192 | |
| 55 | 18501 | 16QAM | 395 | 112 | |
| 56 | 18837 | QPSK | 396 | 192 | |
| 56 | 18837 | 16QAM | 396 | 112 | |
| 57 | 19173 | QPSK | 397 | 192 | |
| 57 | 19173 | 16QAM | 397 | 117 | |
| 58 | 19509 | QPSK | 398 | 192 | |
| 58 | 19509 | 16QAM | 398 | 120 | |
| 59 | 19845 | QPSK | 400 | 192 | |
| 59 | 19845 | 16QAM | 400 | 121 | |
| 60 | 20181 | QPSK | 401 | 192 | |
| 60 | 20181 | 16QAM | 401 | 121 | |
| 61 | 20517 | QPSK | 402 | 192 | |
| 61 | 20517 | 16QAM | 402 | 126 | |
| 62 | 20853 | QPSK | 403 | 192 | |
| 62 | 20853 | 16QAM | 403 | 128 | |
| 63 | 21189 | QPSK | 404 | 192 | |
| 63 | 21189 | 16QAM | 404 | 130 | |
| 64 | 21525 | QPSK | 405 | 192 | |
| 64 | 21525 | 16QAM | 405 | 132 | |
| 65 | 21861 | QPSK | 406 | 192 | |
| 65 | 21861 | 16QAM | 406 | 132 | |
| 66 | 22197 | QPSK | 407 | 192 | |
| 66 | 22197 | 16QAM | 407 | 135 | |
| 67 | 22533 | QPSK | 408 | 192 | |
| 67 | 22533 | 16QAM | 408 | 135 | |
| 68 | 22869 | QPSK | 409 | 192 | |
| 68 | 22869 | 16QAM | 409 | 140 | |
| 69 | 23205 | QPSK | 410 | 192 | |
| 69 | 23205 | 16QAM | 410 | 143 | |
| 70 | 23541 | QPSK | 411 | 192 | |
| 70 | 23541 | 16QAM | 411 | 144 | |
| 71 | 23877 | QPSK | 412 | 192 | |
| 71 | 23877 | 16QAM | 412 | 144 | |
| 72 | 24213 | QPSK | 413 | 192 | |
| 72 | 24213 | 16QAM | 413 | 144 | |
| 73 | 24549 | QPSK | 414 | 192 | |
| 73 | 24549 | 16QAM | 414 | 150 | |
| 74 | 24885 | QPSK | 415 | 192 | |
| 74 | 24885 | 16QAM | 415 | 154 | |
| 75 | 25221 | QPSK | 416 | 192 | |
| 75 | 25221 | 16QAM | 416 | 156 | |
| 76 | 25557 | QPSK | 417 | 192 | |
| 76 | 25557 | 16QAM | 417 | 156 | |
| 77 | 25893 | QPSK | 418 | 192 | |
| 77 | 25893 | 16QAM | 418 | 160 | |

| | | | | | |
|---|---|---|---|---|---|
| 78 | 26229 | QPSK | 419 | 192 | |
| 78 | 26229 | 16QAM | 419 | 160 | |
| 79 | 26565 | QPSK | 420 | 192 | |
| 79 | 26565 | 16QAM | 420 | 165 | |
| 80 | 26901 | QPSK | 420 | 192 | |
| 80 | 26901 | 16QAM | 420 | 165 | |
| 81 | 27237 | QPSK | 421 | 192 | |
| 81 | 27237 | 16QAM | 421 | 168 | |
| 82 | 27573 | QPSK | 422 | 192 | |
| 82 | 27573 | 16QAM | 422 | 168 | |
| 83 | 27909 | QPSK | 423 | 192 | |
| 83 | 27909 | 16QAM | 423 | 168 | |
| 84 | 28245 | QPSK | 424 | 192 | |
| 84 | 28245 | 16QAM | 424 | 168 | |
| 85 | 28581 | QPSK | 425 | 192 | |
| 85 | 28581 | 16QAM | 425 | 176 | |
| 86 | 28917 | QPSK | 425 | 192 | |
| 86 | 28917 | 16QAM | 425 | 176 | |
| 87 | 29253 | QPSK | 426 | 192 | |
| 87 | 29253 | 16QAM | 426 | 180 | |
| 88 | 29589 | QPSK | 427 | 192 | |
| 88 | 29589 | 16QAM | 427 | 180 | |
| 89 | 29925 | QPSK | 428 | 192 | |
| 89 | 29925 | 16QAM | 428 | 180 | |
| 90 | 30261 | QPSK | 428 | 192 | |
| 90 | 30261 | 16QAM | 428 | 180 | |
| 91 | 30597 | QPSK | 429 | 192 | |
| 91 | 30597 | 16QAM | 429 | 180 | |
| 92 | 30933 | QPSK | 430 | 192 | |
| 92 | 30933 | 16QAM | 430 | 180 | |
| 93 | 31269 | QPSK | 431 | 192 | |
| 93 | 31269 | 16QAM | 431 | 192 | |
| 94 | 31605 | QPSK | 431 | 192 | |
| 94 | 31605 | 16QAM | 431 | 192 | |
| 95 | 31941 | QPSK | 432 | 192 | |
| 95 | 31941 | 16QAM | 432 | 192 | |
| 96 | 32277 | QPSK | 433 | 192 | |
| 96 | 32277 | 16QAM | 433 | 192 | |
| 97 | 32613 | QPSK | 434 | 192 | |
| 97 | 32613 | 16QAM | 434 | 192 | |
| 98 | 32949 | QPSK | 434 | 192 | |
| 98 | 32949 | 16QAM | 434 | 192 | |
| 99 | 33285 | QPSK | 435 | 192 | |
| 99 | 33285 | 16QAM | 435 | 192 | |
| 100 | 33621 | QPSK | 436 | 192 | |
| 100 | 33621 | 16QAM | 436 | 192 | |
| 101 | 33957 | QPSK | 436 | 192 | |
| 101 | 33957 | 16QAM | 436 | 192 | |
| 102 | 34293 | QPSK | 437 | 192 | |
| 102 | 34293 | 16QAM | 437 | 192 | |
| 103 | 34629 | QPSK | 438 | 192 | |
| 103 | 34629 | 16QAM | 438 | 192 | |
| 104 | 34965 | QPSK | 438 | 192 | |

| | | | | | |
|---|---|---|---|---|---|
| 104 | 34965 | 16QAM | 438 | 192 | |
| 105 | 35301 | QPSK | 439 | 192 | |
| 105 | 35301 | 16QAM | 439 | 192 | |
| 106 | 35637 | QPSK | 442 | 192 | |
| 106 | 35637 | 16QAM | 440 | 192 | |
| 107 | 35973 | QPSK | 442 | 192 | |
| 107 | 35973 | 16QAM | 440 | 192 | |
| 108 | 36309 | QPSK | 442 | 192 | |
| 108 | 36309 | 16QAM | 441 | 192 | |
| 109 | 36645 | QPSK | 442 | 192 | |
| 109 | 36645 | 16QAM | 441 | 192 | |
| 110 | 36981 | QPSK | 442 | 192 | |
| 110 | 36981 | 16QAM | 442 | 192 | |
| 111 | 37317 | QPSK | 443 | 192 | |
| 111 | 37317 | 16QAM | 443 | 192 | |
| 112 | 37653 | QPSK | 443 | 192 | |
| 112 | 37653 | 16QAM | 443 | 192 | |
| 113 | 37989 | QPSK | 444 | 192 | |
| 113 | 37989 | 16QAM | 444 | 192 | |
| 114 | 38325 | QPSK | 445 | 192 | |
| 114 | 38325 | 16QAM | 445 | 192 | |
| 115 | 38661 | QPSK | 445 | 192 | |
| 115 | 38661 | 16QAM | 445 | 192 | |
| 116 | 38997 | QPSK | 446 | 192 | |
| 116 | 38997 | 16QAM | 446 | 192 | |
| 117 | 39333 | QPSK | 446 | 192 | |
| 117 | 39333 | 16QAM | 446 | 192 | |
| 118 | 39669 | QPSK | 447 | 192 | |
| 118 | 39669 | 16QAM | 447 | 192 | |
| 119 | 40005 | QPSK | 447 | 192 | |
| 119 | 40005 | 16QAM | 447 | 192 | |
| 120 | 40341 | QPSK | 448 | 192 | |
| 120 | 40341 | 16QAM | 448 | 192 | |
| 121 | 40677 | QPSK | 449 | 192 | |
| 121 | 40677 | 16QAM | 449 | 192 | |
| 122 | 41013 | QPSK | 449 | 192 | |
| 122 | 41013 | 16QAM | 449 | 192 | |
| 123 | 41349 | QPSK | 450 | 192 | |
| 123 | 41349 | 16QAM | 450 | 192 | |
| 124 | 41685 | QPSK | 450 | 192 | |
| 124 | 41685 | 16QAM | 450 | 192 | |
| 125 | 42021 | QPSK | 451 | 192 | |
| 125 | 42021 | 16QAM | 451 | 192 | |
| 126 | 42357 | QPSK | 451 | 192 | |
| 126 | 42357 | 16QAM | 451 | 192 | |
| 127 | 42693 | QPSK | 452 | 192 | |
| 127 | 42693 | 16QAM | 452 | 192 | |
| 128 | 43029 | QPSK | 452 | 192 | |
| 128 | 43029 | 16QAM | 452 | 192 | |
| 129 | 43372 | QPSK | 453 | 192 | |
| 129 | 43372 | 16QAM | 453 | 192 | |
| 130 | 43708 | QPSK | 454 | 192 | |
| 130 | 43708 | 16QAM | 454 | 192 | |

| | | | | | |
|---|---|---|---|---|---|
| 131 | 44044 | QPSK | 454 | 192 | |
| 131 | 44044 | 16QAM | 454 | 192 | |
| 132 | 44380 | QPSK | 455 | 192 | |
| 132 | 44380 | 16QAM | 455 | 192 | |
| 133 | 44716 | QPSK | 455 | 192 | |
| 133 | 44716 | 16QAM | 455 | 192 | |
| 134 | 45052 | QPSK | 456 | 192 | |
| 134 | 45052 | 16QAM | 456 | 192 | |
| 135 | 45388 | QPSK | 456 | 192 | |
| 135 | 45388 | 16QAM | 456 | 192 | |
| 136 | 45724 | QPSK | 457 | 192 | |
| 136 | 45724 | 16QAM | 457 | 192 | |
| 137 | 46060 | QPSK | 457 | 192 | |
| 137 | 46060 | 16QAM | 457 | 192 | |
| 138 | 46396 | 16QAM | 458 | 192 | |
| 139 | 46732 | 16QAM | 458 | 192 | |
| 140 | 47068 | 16QAM | 459 | 192 | |
| 141 | 47404 | 16QAM | 459 | 192 | |
| 142 | 47740 | 16QAM | 460 | 192 | |
| 143 | 48076 | 16QAM | 460 | 192 | |
| 144 | 48412 | 16QAM | 460 | 192 | |
| 145 | 48748 | 16QAM | 461 | 192 | |
| 146 | 49084 | 16QAM | 461 | 192 | |
| 147 | 49420 | 16QAM | 462 | 192 | |
| 148 | 49756 | 16QAM | 462 | 192 | |
| 149 | 50092 | 16QAM | 463 | 192 | |
| 150 | 50428 | 16QAM | 463 | 192 | |
| 151 | 50764 | 16QAM | 464 | 192 | |
| 152 | 51100 | 16QAM | 464 | 192 | |
| 153 | 51436 | 16QAM | 465 | 192 | |
| 154 | 51772 | 16QAM | 465 | 192 | |
| 155 | 52108 | 16QAM | 465 | 192 | |
| 156 | 52444 | 16QAM | 466 | 192 | |
| 157 | 52780 | 16QAM | 466 | 192 | |
| 158 | 53116 | 16QAM | 467 | 192 | |
| 159 | 53452 | 16QAM | 467 | 192 | |
| 160 | 53788 | 16QAM | 468 | 192 | |
| 161 | 54124 | 16QAM | 468 | 192 | |
| 162 | 54460 | 16QAM | 469 | 192 | |
| 163 | 54796 | 16QAM | 469 | 192 | |
| 164 | 55132 | 16QAM | 469 | 192 | |
| 165 | 55468 | 16QAM | 470 | 192 | |
| 166 | 55804 | 16QAM | 470 | 192 | |
| 167 | 56140 | 16QAM | 471 | 192 | |
| 168 | 56476 | 16QAM | 471 | 192 | |
| 169 | 56812 | 16QAM | 471 | 192 | |
| 170 | 57148 | 16QAM | 472 | 192 | |
| 171 | 57484 | 16QAM | 472 | 192 | |
| 172 | 57820 | 16QAM | 473 | 192 | |
| 173 | 58156 | 16QAM | 473 | 192 | |
| 174 | 58492 | 16QAM | 473 | 192 | |
| 175 | 58828 | 16QAM | 474 | 192 | |
| 176 | 59164 | 16QAM | 474 | 192 | |

| | | | | | |
|---|---|---|---|---|---|
| 177 | 59500 | 16QAM | 475 | 192 | |
| 178 | 59836 | 16QAM | 475 | 192 | |
| 179 | 60172 | 16QAM | 475 | 192 | |
| 180 | 60508 | 16QAM | 476 | 192 | |
| 181 | 60844 | 16QAM | 476 | 192 | |
| 182 | 61180 | 16QAM | 476 | 192 | |
| 183 | 61516 | 16QAM | 477 | 192 | |
| 184 | 61852 | 16QAM | 477 | 192 | |
| 185 | 62188 | 16QAM | 478 | 192 | |
| 186 | 62524 | 16QAM | 478 | 192 | |
| 187 | 62860 | 16QAM | 478 | 192 | |
| 188 | 63196 | 16QAM | 479 | 192 | |
| 189 | 63532 | 16QAM | 479 | 192 | |
| 190 | 63868 | 16QAM | 479 | 192 | |
| 191 | 64204 | 16QAM | 480 | 192 | |
| 192 | 64540 | 16QAM | 480 | 192 | |
| 193 | 64876 | 16QAM | 480 | 192 | |
| 194 | 65212 | 16QAM | 481 | 192 | |
| 195 | 65548 | 16QAM | 481 | 192 | |
| 196 | 65884 | 16QAM | 481 | 192 | |
| 197 | 66220 | 16QAM | 482 | 192 | |
| 198 | 66556 | 16QAM | 482 | 192 | |
| 199 | 66892 | 16QAM | 483 | 192 | |
| 200 | 67228 | 16QAM | 483 | 192 | |
| 201 | 67564 | 16QAM | 483 | 192 | |
| 202 | 67900 | 16QAM | 484 | 192 | |
| 203 | 68236 | 16QAM | 484 | 192 | |
| 204 | 68572 | 16QAM | 484 | 192 | |
| 205 | 68908 | 16QAM | 485 | 192 | |
| 206 | 69244 | 16QAM | 485 | 192 | |
| 207 | 69580 | 16QAM | 485 | 192 | |
| 208 | 69916 | 16QAM | 486 | 192 | |
| 209 | 70252 | 16QAM | 486 | 192 | |
| 210 | 70588 | 16QAM | 486 | 192 | |
| 211 | 70924 | 16QAM | 487 | 192 | |
| 212 | 71260 | 16QAM | 487 | 192 | |
| 213 | 71596 | 16QAM | 487 | 192 | |
| 214 | 71932 | 16QAM | 487 | 192 | |
| 215 | 72268 | 16QAM | 489 | 192 | |
| 216 | 72604 | 16QAM | 489 | 192 | |
| 217 | 72940 | 16QAM | 489 | 192 | |
| 218 | 73276 | 16QAM | 489 | 192 | |
| 219 | 73612 | 16QAM | 489 | 192 | |
| 220 | 73948 | 16QAM | 489 | 192 | |
| 221 | 74284 | 16QAM | 490 | 192 | |
| 222 | 74620 | 16QAM | 490 | 192 | |
| 223 | 74956 | 16QAM | 490 | 192 | |
| 224 | 75292 | 16QAM | 491 | 192 | |
| 225 | 75628 | 16QAM | 491 | 192 | |
| 226 | 75964 | 16QAM | 491 | 192 | |
| 227 | 76300 | 16QAM | 492 | 192 | |
| 228 | 76636 | 16QAM | 492 | 192 | |
| 229 | 76972 | 16QAM | 492 | 192 | |

| | | | | | |
|---|---|---|---|---|---|
| 230 | 77308 | 16QAM | 492 | 192 | |
| 231 | 77644 | 16QAM | 494 | 192 | |
| 232 | 77980 | 16QAM | 494 | 192 | |
| 233 | 78316 | 16QAM | 494 | 192 | |
| 234 | 78652 | 16QAM | 494 | 192 | |
| 235 | 78988 | 16QAM | 494 | 192 | |
| 236 | 79324 | 16QAM | 494 | 192 | |
| 237 | 79660 | 16QAM | 494 | 192 | |
| 238 | 79996 | 16QAM | 495 | 192 | |
| 239 | 80332 | 16QAM | 495 | 192 | |
| 240 | 80668 | 16QAM | 495 | 192 | |
| 241 | 81004 | 16QAM | 497 | 192 | |
| 242 | 81340 | 16QAM | 497 | 192 | |
| 243 | 81676 | 16QAM | 497 | 192 | |
| 244 | 82012 | 16QAM | 497 | 192 | |
| 245 | 82348 | 16QAM | 497 | 192 | |
| 246 | 82684 | 16QAM | 497 | 192 | |
| 247 | 83020 | 16QAM | 497 | 192 | |
| 248 | 83356 | 16QAM | 498 | 192 | |
| 249 | 83692 | 16QAM | 498 | 192 | |
| 250 | 84028 | 16QAM | 498 | 192 | |
| 251 | 84364 | 16QAM | 498 | 192 | |
| 252 | 84700 | 16QAM | 499 | 192 | |
| 253 | 85036 | 16QAM | 499 | 192 | |
| 254 | 85372 | 16QAM | 499 | 192 | |
| 255 | 85708 | 16QAM | 499 | 192 | |
| 256 | 86044 | 16QAM | 500 | 192 | |
| 257 | 86387 | 16QAM | 500 | 192 | |
| 258 | 86723 | 16QAM | 500 | 192 | |
| 259 | 87059 | 16QAM | 501 | 192 | |
| 260 | 87395 | 16QAM | 501 | 192 | |
| 261 | 87731 | 16QAM | 501 | 192 | |
| 262 | 88067 | 16QAM | 501 | 192 | |
| 263 | 88403 | 16QAM | 502 | 192 | |
| 264 | 88739 | 16QAM | 502 | 192 | |
| 265 | 89075 | 16QAM | 502 | 192 | |
| 266 | 89411 | 16QAM | 502 | 192 | |
| 267 | 89747 | 16QAM | 503 | 192 | |
| 268 | 90083 | 16QAM | 503 | 192 | |
| 269 | 90419 | 16QAM | 503 | 192 | |
| 270 | 90755 | 16QAM | 503 | 192 | |
| 271 | 91091 | 16QAM | 504 | 192 | |
| 272 | 91427 | 16QAM | 504 | 192 | |
| 273 | 91763 | 16QAM | 504 | 192 | |
| 274 | 92099 | 16QAM | 504 | 192 | |
| 275 | 92435 | 16QAM | 505 | 192 | |
| 276 | 92771 | 16QAM | 505 | 192 | |
| 277 | 93107 | 16QAM | 505 | 192 | |
| 278 | 93443 | 16QAM | 505 | 192 | |

### 18.2.1.4.4 TFRC test points for MAC-d PDU size=656

**Table 18.2.1.4.4.1: TFRC test points for UE category 1 for MAC-d PDU size=656, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 169 | |
| 1 | 677 | 16QAM | 4 | 169 | |
| 2 | 1333 | QPSK | 16 | 215 | |
| 2 | 1333 | 16QAM | 8 | 215 | |
| 3 | 1989 | QPSK | 24 | 243 | |
| 3 | 1989 | 16QAM | 12 | 243 | |
| 4 | 2645 | QPSK | 32 | 262 | |
| 4 | 2645 | 16QAM | 16 | 262 | |
| 5 | 3301 | QPSK | 32 | 277 | |
| 5 | 3301 | 16QAM | 20 | 277 | |
| 6 | 3957 | QPSK | 32 | 290 | |
| 6 | 3957 | 16QAM | 24 | 290 | |
| 7 | 4613 | QPSK | 32 | 300 | |
| 7 | 4613 | 16QAM | 28 | 300 | |
| 8 | 5269 | QPSK | 32 | 309 | |
| 8 | 5269 | 16QAM | 32 | 309 | |
| 9 | 5925 | QPSK | 32 | 317 | |
| 9 | 5925 | 16QAM | 32 | 317 | |
| 10 | 6581 | QPSK | 32 | 324 | |
| 10 | 6581 | 16QAM | 32 | 324 | |
| 11 | 7237 | QPSK | 32 | 331 | |
| 11 | 7237 | 16QAM | 32 | 331 | |
| 12 | 7893 | 16QAM | 32 | 337 | |
| 13 | 8549 | 16QAM | 32 | 342 | |
| 14 | 9205 | 16QAM | 32 | 347 | |
| 15 | 9861 | 16QAM | 32 | 352 | |
| 16 | 10517 | 16QAM | 32 | 356 | |
| 17 | 11173 | 16QAM | 32 | 360 | |
| 18 | 11829 | 16QAM | 32 | 364 | |

**Table 18.2.1.4.4.2: TFRC test points for UE category 2 for MAC-d PDU size=656, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 169 | |
| 1 | 677 | 16QAM | 4 | 169 | |
| 2 | 1333 | QPSK | 16 | 215 | |
| 2 | 1333 | 16QAM | 8 | 215 | |
| 3 | 1989 | QPSK | 24 | 243 | |
| 3 | 1989 | 16QAM | 12 | 243 | |
| 4 | 2645 | QPSK | 32 | 262 | |
| 4 | 2645 | 16QAM | 16 | 262 | |
| 5 | 3301 | QPSK | 40 | 277 | |
| 5 | 3301 | 16QAM | 20 | 277 | |
| 6 | 3957 | QPSK | 49 | 290 | |
| 6 | 3957 | 16QAM | 24 | 290 | |
| 7 | 4613 | QPSK | 56 | 300 | |
| 7 | 4613 | 16QAM | 28 | 300 | |
| 8 | 5269 | QPSK | 65 | 309 | |
| 8 | 5269 | 16QAM | 32 | 309 | |
| 9 | 5925 | QPSK | 72 | 317 | |
| 9 | 5925 | 16QAM | 36 | 317 | |
| 10 | 6581 | QPSK | 72 | 324 | |
| 10 | 6581 | 16QAM | 36 | 324 | |
| 11 | 7237 | QPSK | 72 | 331 | |
| 11 | 7237 | 16QAM | 36 | 331 | |
| 12 | 7893 | QPSK | 72 | 337 | |
| 12 | 7893 | 16QAM | 36 | 337 | |
| 13 | 8549 | QPSK | 72 | 342 | |
| 13 | 8549 | 16QAM | 36 | 342 | |
| 14 | 9205 | QPSK | 72 | 347 | |
| 14 | 9205 | 16QAM | 36 | 347 | |
| 15 | 9861 | QPSK | 72 | 352 | |
| 15 | 9861 | 16QAM | 36 | 352 | |
| 16 | 10517 | QPSK | 72 | 356 | |
| 16 | 10517 | 16QAM | 36 | 356 | |
| 17 | 11173 | QPSK | 72 | 360 | |
| 17 | 11173 | 16QAM | 36 | 360 | |
| 18 | 11829 | QPSK | 72 | 364 | |
| 18 | 11829 | 16QAM | 36 | 364 | |

**Table 18.2.1.4.4.3: TFRC test points for UE category 3 for MAC-d PDU size=656, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 169 | |
| 1 | 677 | 16QAM | 4 | 169 | |
| 2 | 1333 | QPSK | 16 | 215 | |
| 2 | 1333 | 16QAM | 8 | 215 | |
| 3 | 1989 | QPSK | 24 | 243 | |
| 3 | 1989 | 16QAM | 12 | 243 | |
| 4 | 2645 | QPSK | 32 | 262 | |
| 4 | 2645 | 16QAM | 16 | 262 | |
| 5 | 3301 | QPSK | 40 | 277 | |
| 5 | 3301 | 16QAM | 20 | 277 | |
| 6 | 3957 | QPSK | 48 | 290 | |
| 6 | 3957 | 16QAM | 24 | 290 | |
| 7 | 4613 | QPSK | 56 | 300 | |
| 7 | 4613 | 16QAM | 28 | 300 | |
| 8 | 5269 | QPSK | 64 | 309 | |
| 8 | 5269 | 16QAM | 32 | 309 | |
| 9 | 5925 | QPSK | 64 | 317 | |
| 9 | 5925 | 16QAM | 36 | 317 | |
| 10 | 6581 | QPSK | 64 | 324 | |
| 10 | 6581 | 16QAM | 40 | 324 | |
| 11 | 7237 | QPSK | 64 | 331 | |
| 11 | 7237 | 16QAM | 44 | 331 | |
| 12 | 7893 | QPSK | 64 | 337 | |
| 12 | 7893 | 16QAM | 48 | 337 | |
| 13 | 8549 | QPSK | 64 | 342 | |
| 13 | 8549 | 16QAM | 52 | 342 | |
| 14 | 9205 | QPSK | 64 | 347 | |
| 14 | 9205 | 16QAM | 56 | 347 | |
| 15 | 9861 | QPSK | 64 | 352 | |
| 15 | 9861 | 16QAM | 60 | 352 | |
| 16 | 10517 | QPSK | 64 | 356 | |
| 16 | 10517 | 16QAM | 64 | 356 | |
| 17 | 11173 | QPSK | 64 | 360 | |
| 17 | 11173 | 16QAM | 64 | 360 | |
| 18 | 11829 | QPSK | 64 | 364 | |
| 18 | 11829 | 16QAM | 64 | 364 | |
| 19 | 12485 | QPSK | 64 | 368 | |
| 19 | 12485 | 16QAM | 64 | 368 | |
| 20 | 13141 | QPSK | 64 | 372 | |
| 20 | 13141 | 16QAM | 64 | 372 | |
| 21 | 13797 | QPSK | 64 | 375 | |
| 21 | 13797 | 16QAM | 64 | 375 | |
| 22 | 14453 | QPSK | 64 | 378 | |
| 22 | 14453 | 16QAM | 64 | 378 | |
| 23 | 15109 | QPSK | 64 | 381 | |
| 23 | 15109 | 16QAM | 64 | 381 | |
| 24 | 15765 | 16QAM | 64 | 384 | |
| 25 | 16421 | 16QAM | 64 | 387 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | 16QAM | 64 | 389 | |
| 27 | 17733 | 16QAM | 64 | 392 | |
| 28 | 18389 | 16QAM | 64 | 394 | |
| 29 | 19045 | 16QAM | 64 | 397 | |
| 30 | 19701 | 16QAM | 64 | 399 | |
| 31 | 20357 | 16QAM | 64 | 401 | |
| 32 | 21013 | 16QAM | 64 | 404 | |
| 33 | 21669 | 16QAM | 64 | 406 | |
| 34 | 22325 | 16QAM | 64 | 408 | |
| 35 | 22981 | 16QAM | 64 | 410 | |
| 36 | 23637 | 16QAM | 64 | 412 | |

**Table 18.2.1.4.4.4: TFRC test points for UE category 4 for MAC-d PDU size=656, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 169 | |
| 1 | 677 | 16QAM | 4 | 169 | |
| 2 | 1333 | QPSK | 16 | 215 | |
| 2 | 1333 | 16QAM | 8 | 215 | |
| 3 | 1989 | QPSK | 24 | 243 | |
| 3 | 1989 | 16QAM | 12 | 243 | |
| 4 | 2645 | QPSK | 32 | 262 | |
| 4 | 2645 | 16QAM | 16 | 262 | |
| 5 | 3301 | QPSK | 40 | 277 | |
| 5 | 3301 | 16QAM | 20 | 277 | |
| 6 | 3957 | QPSK | 49 | 290 | |
| 6 | 3957 | 16QAM | 24 | 290 | |
| 7 | 4613 | QPSK | 56 | 300 | |
| 7 | 4613 | 16QAM | 28 | 300 | |
| 8 | 5269 | QPSK | 65 | 309 | |
| 8 | 5269 | 16QAM | 32 | 309 | |
| 9 | 5925 | QPSK | 72 | 317 | |
| 9 | 5925 | 16QAM | 36 | 317 | |
| 10 | 6581 | QPSK | 81 | 324 | |
| 10 | 6581 | 16QAM | 40 | 324 | |
| 11 | 7237 | QPSK | 88 | 331 | |
| 11 | 7237 | 16QAM | 44 | 331 | |
| 12 | 7893 | QPSK | 98 | 337 | |
| 12 | 7893 | 16QAM | 49 | 337 | |
| 13 | 8549 | QPSK | 105 | 342 | |
| 13 | 8549 | 16QAM | 52 | 342 | |
| 14 | 9205 | QPSK | 112 | 347 | |
| 14 | 9205 | 16QAM | 56 | 347 | |
| 15 | 9861 | QPSK | 121 | 352 | |
| 15 | 9861 | 16QAM | 60 | 352 | |
| 16 | 10517 | QPSK | 128 | 356 | |
| 16 | 10517 | 16QAM | 64 | 356 | |
| 17 | 11173 | QPSK | 135 | 360 | |
| 17 | 11173 | 16QAM | 66 | 360 | |
| 18 | 11829 | QPSK | 144 | 364 | |
| 18 | 11829 | 16QAM | 72 | 364 | |
| 19 | 12485 | QPSK | 144 | 368 | |
| 19 | 12485 | 16QAM | 72 | 368 | |
| 20 | 13141 | QPSK | 144 | 372 | |
| 20 | 13141 | 16QAM | 72 | 372 | |
| 21 | 13797 | QPSK | 144 | 375 | |
| 21 | 13797 | 16QAM | 72 | 375 | |
| 22 | 14453 | QPSK | 144 | 378 | |
| 22 | 14453 | 16QAM | 72 | 378 | |
| 23 | 15109 | QPSK | 144 | 381 | |
| 23 | 15109 | 16QAM | 72 | 381 | |
| 24 | 15765 | QPSK | 144 | 384 | |
| 24 | 15765 | 16QAM | 72 | 384 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 16421 | QPSK | 144 | 387 | |
| 25 | 16421 | 16QAM | 72 | 387 | |
| 26 | 17077 | QPSK | 144 | 389 | |
| 26 | 17077 | 16QAM | 72 | 389 | |
| 27 | 17733 | QPSK | 144 | 392 | |
| 27 | 17733 | 16QAM | 72 | 392 | |
| 28 | 18389 | QPSK | 144 | 394 | |
| 28 | 18389 | 16QAM | 72 | 394 | |
| 29 | 19045 | QPSK | 144 | 397 | |
| 29 | 19045 | 16QAM | 72 | 397 | |
| 30 | 19701 | QPSK | 144 | 399 | |
| 30 | 19701 | 16QAM | 72 | 399 | |
| 31 | 20357 | QPSK | 144 | 401 | |
| 31 | 20357 | 16QAM | 72 | 401 | |
| 32 | 21013 | QPSK | 144 | 404 | |
| 32 | 21013 | 16QAM | 72 | 404 | |
| 33 | 21669 | QPSK | 144 | 406 | |
| 33 | 21669 | 16QAM | 72 | 406 | |
| 34 | 22325 | QPSK | 144 | 408 | |
| 34 | 22325 | 16QAM | 72 | 408 | |
| 35 | 22981 | QPSK | 144 | 410 | |
| 35 | 22981 | 16QAM | 72 | 410 | |
| 36 | 23637 | QPSK | 144 | 412 | |
| 36 | 23637 | 16QAM | 72 | 412 | |

**Table 18.2.1.4.4.5: TFRC test points for UE category 5 for MAC-d PDU size=656, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 169 | |
| 1 | 677 | 16QAM | 4 | 169 | |
| 2 | 1333 | QPSK | 16 | 215 | |
| 2 | 1333 | 16QAM | 8 | 215 | |
| 3 | 1989 | QPSK | 24 | 243 | |
| 3 | 1989 | 16QAM | 12 | 243 | |
| 4 | 2645 | QPSK | 32 | 262 | |
| 4 | 2645 | 16QAM | 16 | 262 | |
| 5 | 3301 | QPSK | 40 | 277 | |
| 5 | 3301 | 16QAM | 20 | 277 | |
| 6 | 3957 | QPSK | 48 | 290 | |
| 6 | 3957 | 16QAM | 24 | 290 | |
| 7 | 4613 | QPSK | 56 | 300 | |
| 7 | 4613 | 16QAM | 28 | 300 | |
| 8 | 5269 | QPSK | 65 | 309 | |
| 8 | 5269 | 16QAM | 32 | 309 | |
| 9 | 5925 | QPSK | 72 | 317 | |
| 9 | 5925 | 16QAM | 36 | 317 | |
| 10 | 6581 | QPSK | 80 | 324 | |
| 10 | 6581 | 16QAM | 40 | 324 | |
| 11 | 7237 | QPSK | 84 | 331 | |
| 11 | 7237 | 16QAM | 44 | 331 | |
| 12 | 7893 | QPSK | 96 | 337 | |
| 12 | 7893 | 16QAM | 48 | 337 | |
| 13 | 8549 | QPSK | 96 | 342 | |
| 13 | 8549 | 16QAM | 52 | 342 | |
| 14 | 9205 | QPSK | 96 | 347 | |
| 14 | 9205 | 16QAM | 56 | 347 | |
| 15 | 9861 | QPSK | 96 | 352 | |
| 15 | 9861 | 16QAM | 60 | 352 | |
| 16 | 10517 | QPSK | 96 | 356 | |
| 16 | 10517 | 16QAM | 64 | 356 | |
| 17 | 11173 | QPSK | 96 | 360 | |
| 17 | 11173 | 16QAM | 66 | 360 | |
| 18 | 11829 | QPSK | 96 | 364 | |
| 18 | 11829 | 16QAM | 72 | 364 | |
| 19 | 12485 | QPSK | 96 | 368 | |
| 19 | 12485 | 16QAM | 75 | 368 | |
| 20 | 13141 | QPSK | 96 | 372 | |
| 20 | 13141 | 16QAM | 80 | 372 | |
| 21 | 13797 | QPSK | 96 | 375 | |
| 21 | 13797 | 16QAM | 84 | 375 | |
| 22 | 14453 | QPSK | 96 | 378 | |
| 22 | 14453 | 16QAM | 84 | 378 | |
| 23 | 15109 | QPSK | 96 | 381 | |
| 23 | 15109 | 16QAM | 90 | 381 | |
| 24 | 15765 | QPSK | 96 | 384 | |
| 24 | 15765 | 16QAM | 96 | 384 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 16421 | QPSK | 96 | 387 | |
| 25 | 16421 | 16QAM | 96 | 387 | |
| 26 | 17077 | QPSK | 96 | 389 | |
| 26 | 17077 | 16QAM | 96 | 389 | |
| 27 | 17733 | QPSK | 96 | 392 | |
| 27 | 17733 | 16QAM | 96 | 392 | |
| 28 | 18389 | QPSK | 96 | 395 | |
| 28 | 18389 | 16QAM | 96 | 394 | |
| 29 | 19045 | QPSK | 96 | 397 | |
| 29 | 19045 | 16QAM | 96 | 397 | |
| 30 | 19701 | QPSK | 96 | 399 | |
| 30 | 19701 | 16QAM | 96 | 399 | |
| 31 | 20357 | QPSK | 96 | 401 | |
| 31 | 20357 | 16QAM | 96 | 401 | |
| 32 | 21013 | QPSK | 96 | 404 | |
| 32 | 21013 | 16QAM | 96 | 404 | |
| 33 | 21669 | QPSK | 96 | 406 | |
| 33 | 21669 | 16QAM | 96 | 406 | |
| 34 | 22325 | QPSK | 96 | 408 | |
| 34 | 22325 | 16QAM | 96 | 408 | |
| 35 | 22981 | QPSK | 96 | 410 | |
| 35 | 22981 | 16QAM | 96 | 410 | |
| 36 | 23637 | 16QAM | 96 | 412 | |
| 37 | 24293 | 16QAM | 96 | 413 | |
| 38 | 24949 | 16QAM | 96 | 415 | |
| 39 | 25605 | 16QAM | 96 | 417 | |
| 40 | 26261 | 16QAM | 96 | 419 | |
| 41 | 26917 | 16QAM | 96 | 420 | |
| 42 | 27573 | 16QAM | 96 | 422 | |
| 43 | 28229 | 16QAM | 96 | 424 | |
| 44 | 28885 | 16QAM | 96 | 425 | |
| 45 | 29541 | 16QAM | 96 | 427 | |
| 46 | 30197 | 16QAM | 96 | 428 | |
| 47 | 30853 | 16QAM | 96 | 430 | |
| 48 | 31509 | 16QAM | 96 | 431 | |
| 49 | 32165 | 16QAM | 96 | 433 | |
| 50 | 32821 | 16QAM | 96 | 434 | |
| 51 | 33477 | 16QAM | 96 | 435 | |
| 52 | 34133 | 16QAM | 96 | 437 | |
| 53 | 34789 | 16QAM | 96 | 438 | |
| 54 | 35445 | 16QAM | 96 | 439 | |

**Table 18.2.1.4.4.6: TFRC test points for UE category 6 for MAC-d PDU size=656, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 169 | |
| 1 | 677 | 16QAM | 4 | 169 | |
| 2 | 1333 | QPSK | 16 | 215 | |
| 2 | 1333 | 16QAM | 8 | 215 | |
| 3 | 1989 | QPSK | 24 | 243 | |
| 3 | 1989 | 16QAM | 12 | 243 | |
| 4 | 2645 | QPSK | 32 | 262 | |
| 4 | 2645 | 16QAM | 16 | 262 | |
| 5 | 3301 | QPSK | 40 | 277 | |
| 5 | 3301 | 16QAM | 20 | 277 | |
| 6 | 3957 | QPSK | 49 | 290 | |
| 6 | 3957 | 16QAM | 24 | 290 | |
| 7 | 4613 | QPSK | 56 | 300 | |
| 7 | 4613 | 16QAM | 28 | 300 | |
| 8 | 5269 | QPSK | 65 | 309 | |
| 8 | 5269 | 16QAM | 32 | 309 | |
| 9 | 5925 | QPSK | 72 | 317 | |
| 9 | 5925 | 16QAM | 36 | 317 | |
| 10 | 6581 | QPSK | 81 | 324 | |
| 10 | 6581 | 16QAM | 40 | 324 | |
| 11 | 7237 | QPSK | 88 | 331 | |
| 11 | 7237 | 16QAM | 44 | 331 | |
| 12 | 7893 | QPSK | 98 | 337 | |
| 12 | 7893 | 16QAM | 49 | 337 | |
| 13 | 8549 | QPSK | 105 | 342 | |
| 13 | 8549 | 16QAM | 52 | 342 | |
| 14 | 9205 | QPSK | 112 | 347 | |
| 14 | 9205 | 16QAM | 56 | 347 | |
| 15 | 9861 | QPSK | 121 | 352 | |
| 15 | 9861 | 16QAM | 60 | 352 | |
| 16 | 10517 | QPSK | 128 | 356 | |
| 16 | 10517 | 16QAM | 64 | 356 | |
| 17 | 11173 | QPSK | 135 | 360 | |
| 17 | 11173 | 16QAM | 66 | 360 | |
| 18 | 11829 | QPSK | 144 | 364 | |
| 18 | 11829 | 16QAM | 72 | 364 | |
| 19 | 12485 | QPSK | 154 | 368 | |
| 19 | 12485 | 16QAM | 77 | 368 | |
| 20 | 13141 | QPSK | 160 | 372 | |
| 20 | 13141 | 16QAM | 81 | 372 | |
| 21 | 13797 | QPSK | 168 | 375 | |
| 21 | 13797 | 16QAM | 84 | 375 | |
| 22 | 14453 | QPSK | 176 | 378 | |
| 22 | 14453 | 16QAM | 88 | 378 | |
| 23 | 15109 | QPSK | 180 | 381 | |
| 23 | 15109 | 16QAM | 91 | 381 | |
| 24 | 15765 | QPSK | 192 | 384 | |
| 24 | 15765 | 16QAM | 96 | 384 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 16421 | QPSK | 192 | 387 | |
| 25 | 16421 | 16QAM | 100 | 387 | |
| 26 | 17077 | QPSK | 192 | 389 | |
| 26 | 17077 | 16QAM | 105 | 389 | |
| 27 | 17733 | QPSK | 192 | 392 | |
| 27 | 17733 | 16QAM | 108 | 392 | |
| 28 | 18389 | QPSK | 192 | 394 | |
| 28 | 18389 | 16QAM | 108 | 394 | |
| 29 | 19045 | QPSK | 192 | 397 | |
| 29 | 19045 | 16QAM | 108 | 397 | |
| 30 | 19701 | QPSK | 192 | 399 | |
| 30 | 19701 | 16QAM | 108 | 399 | |
| 31 | 20357 | QPSK | 192 | 401 | |
| 31 | 20357 | 16QAM | 108 | 401 | |
| 32 | 21013 | QPSK | 192 | 404 | |
| 32 | 21013 | 16QAM | 108 | 404 | |
| 33 | 21669 | QPSK | 192 | 406 | |
| 33 | 21669 | 16QAM | 108 | 406 | |
| 34 | 22325 | QPSK | 192 | 408 | |
| 34 | 22325 | 16QAM | 108 | 408 | |
| 35 | 22981 | QPSK | 192 | 410 | |
| 35 | 22981 | 16QAM | 108 | 410 | |
| 36 | 23637 | QPSK | 192 | 412 | |
| 36 | 23637 | 16QAM | 108 | 412 | |
| 37 | 24293 | QPSK | 192 | 413 | |
| 37 | 24293 | 16QAM | 108 | 413 | |
| 38 | 24949 | QPSK | 192 | 415 | |
| 38 | 24949 | 16QAM | 108 | 415 | |
| 39 | 25605 | QPSK | 192 | 417 | |
| 39 | 25605 | 16QAM | 108 | 417 | |
| 40 | 26261 | QPSK | 192 | 419 | |
| 40 | 26261 | 16QAM | 108 | 419 | |
| 41 | 26917 | QPSK | 192 | 420 | |
| 41 | 26917 | 16QAM | 108 | 420 | |
| 42 | 27573 | QPSK | 192 | 422 | |
| 42 | 27573 | 16QAM | 108 | 422 | |
| 43 | 28229 | QPSK | 192 | 424 | |
| 43 | 28229 | 16QAM | 108 | 424 | |
| 44 | 28885 | QPSK | 192 | 425 | |
| 44 | 28885 | 16QAM | 108 | 425 | |
| 45 | 29541 | QPSK | 192 | 427 | |
| 45 | 29541 | 16QAM | 108 | 427 | |
| 46 | 30197 | QPSK | 192 | 428 | |
| 46 | 30197 | 16QAM | 108 | 428 | |
| 47 | 30853 | QPSK | 192 | 430 | |
| 47 | 30853 | 16QAM | 108 | 430 | |
| 48 | 31509 | QPSK | 192 | 431 | |
| 48 | 31509 | 16QAM | 108 | 431 | |
| 49 | 32165 | QPSK | 192 | 433 | |
| 49 | 32165 | 16QAM | 108 | 433 | |
| 50 | 32821 | QPSK | 192 | 434 | |
| 50 | 32821 | 16QAM | 108 | 434 | |
| 51 | 33477 | QPSK | 192 | 435 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 33477 | 16QAM | 108 | 435 | |
| 52 | 34133 | QPSK | 192 | 437 | |
| 52 | 34133 | 16QAM | 108 | 437 | |
| 53 | 34789 | QPSK | 192 | 438 | |
| 53 | 34789 | 16QAM | 108 | 438 | |
| 54 | 35445 | QPSK | 192 | 439 | |
| 54 | 35445 | 16QAM | 108 | 439 | |

**Table 18.2.1.4.4.7: TFRC test points for UE category 7 for MAC-d PDU size=656, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 169 | |
| 1 | 677 | 16QAM | 4 | 169 | |
| 2 | 1333 | QPSK | 16 | 215 | |
| 2 | 1333 | 16QAM | 8 | 215 | |
| 3 | 1989 | QPSK | 24 | 243 | |
| 3 | 1989 | 16QAM | 12 | 243 | |
| 4 | 2645 | QPSK | 32 | 262 | |
| 4 | 2645 | 16QAM | 16 | 262 | |
| 5 | 3301 | QPSK | 40 | 277 | |
| 5 | 3301 | 16QAM | 20 | 277 | |
| 6 | 3957 | QPSK | 49 | 290 | |
| 6 | 3957 | 16QAM | 24 | 290 | |
| 7 | 4613 | QPSK | 56 | 300 | |
| 7 | 4613 | 16QAM | 28 | 300 | |
| 8 | 5269 | QPSK | 65 | 309 | |
| 8 | 5269 | 16QAM | 32 | 309 | |
| 9 | 5925 | QPSK | 72 | 317 | |
| 9 | 5925 | 16QAM | 36 | 317 | |
| 10 | 6581 | QPSK | 81 | 324 | |
| 10 | 6581 | 16QAM | 40 | 324 | |
| 11 | 7237 | QPSK | 88 | 331 | |
| 11 | 7237 | 16QAM | 44 | 331 | |
| 12 | 7893 | QPSK | 98 | 337 | |
| 12 | 7893 | 16QAM | 49 | 337 | |
| 13 | 8549 | QPSK | 105 | 342 | |
| 13 | 8549 | 16QAM | 52 | 342 | |
| 14 | 9205 | QPSK | 112 | 347 | |
| 14 | 9205 | 16QAM | 56 | 347 | |
| 15 | 9861 | QPSK | 121 | 352 | |
| 15 | 9861 | 16QAM | 60 | 352 | |
| 16 | 10517 | QPSK | 128 | 356 | |
| 16 | 10517 | 16QAM | 64 | 356 | |
| 17 | 11173 | QPSK | 135 | 360 | |
| 17 | 11173 | 16QAM | 66 | 360 | |
| 18 | 11829 | QPSK | 144 | 364 | |
| 18 | 11829 | 16QAM | 72 | 364 | |
| 19 | 12485 | QPSK | 154 | 368 | |
| 19 | 12485 | 16QAM | 77 | 368 | |
| 20 | 13141 | QPSK | 160 | 372 | |
| 20 | 13141 | 16QAM | 81 | 372 | |
| 21 | 13797 | QPSK | 168 | 375 | |
| 21 | 13797 | 16QAM | 84 | 375 | |
| 22 | 14453 | QPSK | 176 | 378 | |
| 22 | 14453 | 16QAM | 88 | 378 | |
| 23 | 15109 | QPSK | 180 | 381 | |
| 23 | 15109 | 16QAM | 91 | 381 | |
| 24 | 15765 | QPSK | 192 | 384 | |
| 24 | 15765 | 16QAM | 96 | 384 | |
| 25 | 16421 | QPSK | 192 | 387 | |
| 25 | 16421 | 16QAM | 100 | 387 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | QPSK | 192 | 389 | |
| 26 | 17077 | 16QAM | 105 | 389 | |
| 27 | 17733 | QPSK | 192 | 392 | |
| 27 | 17733 | 16QAM | 108 | 392 | |
| 28 | 18389 | QPSK | 192 | 394 | |
| 28 | 18389 | 16QAM | 112 | 394 | |
| 29 | 19045 | QPSK | 192 | 397 | |
| 29 | 19045 | 16QAM | 117 | 397 | |
| 30 | 19701 | QPSK | 192 | 399 | |
| 30 | 19701 | 16QAM | 121 | 399 | |
| 31 | 20357 | QPSK | 192 | 401 | |
| 31 | 20357 | 16QAM | 121 | 401 | |
| 32 | 21013 | QPSK | 192 | 404 | |
| 32 | 21013 | 16QAM | 130 | 404 | |
| 33 | 21669 | QPSK | 192 | 406 | |
| 33 | 21669 | 16QAM | 132 | 406 | |
| 34 | 22325 | QPSK | 192 | 408 | |
| 34 | 22325 | 16QAM | 135 | 408 | |
| 35 | 22981 | QPSK | 192 | 410 | |
| 35 | 22981 | 16QAM | 143 | 410 | |
| 36 | 23637 | QPSK | 192 | 412 | |
| 36 | 23637 | 16QAM | 144 | 412 | |
| 37 | 24293 | QPSK | 192 | 413 | |
| 37 | 24293 | 16QAM | 144 | 413 | |
| 38 | 24949 | QPSK | 192 | 415 | |
| 38 | 24949 | 16QAM | 144 | 415 | |
| 39 | 25605 | QPSK | 192 | 417 | |
| 39 | 25605 | 16QAM | 144 | 417 | |
| 40 | 26261 | QPSK | 192 | 419 | |
| 40 | 26261 | 16QAM | 144 | 419 | |
| 41 | 26917 | QPSK | 192 | 420 | |
| 41 | 26917 | 16QAM | 144 | 420 | |
| 42 | 27573 | QPSK | 192 | 422 | |
| 42 | 27573 | 16QAM | 144 | 422 | |
| 43 | 28229 | QPSK | 192 | 424 | |
| 43 | 28229 | 16QAM | 144 | 424 | |
| 44 | 28885 | QPSK | 192 | 425 | |
| 44 | 28885 | 16QAM | 144 | 425 | |
| 45 | 29541 | QPSK | 192 | 427 | |
| 45 | 29541 | 16QAM | 144 | 427 | |
| 46 | 30197 | QPSK | 192 | 428 | |
| 46 | 30197 | 16QAM | 144 | 428 | |
| 47 | 30853 | QPSK | 192 | 430 | |
| 47 | 30853 | 16QAM | 144 | 430 | |
| 48 | 31509 | QPSK | 192 | 431 | |
| 48 | 31509 | 16QAM | 144 | 431 | |
| 49 | 32165 | QPSK | 192 | 433 | |
| 49 | 32165 | 16QAM | 144 | 433 | |
| 50 | 32821 | QPSK | 192 | 434 | |
| 50 | 32821 | 16QAM | 144 | 434 | |
| 51 | 33477 | QPSK | 192 | 435 | |
| 51 | 33477 | 16QAM | 144 | 435 | |
| 52 | 34133 | QPSK | 192 | 437 | |
| 52 | 34133 | 16QAM | 144 | 437 | |
| 53 | 34789 | QPSK | 192 | 438 | |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 34789 | 16QAM | 144 | 438 | |
| 54 | 35445 | QPSK | 192 | 439 | |
| 54 | 35445 | 16QAM | 144 | 439 | |
| 55 | 36101 | QPSK | 192 | 442 | |
| 55 | 36101 | 16QAM | 144 | 440 | |
| 56 | 36757 | QPSK | 192 | 442 | |
| 56 | 36757 | 16QAM | 144 | 442 | |
| 57 | 37413 | QPSK | 192 | 443 | |
| 57 | 37413 | 16QAM | 144 | 443 | |
| 58 | 38069 | QPSK | 192 | 444 | |
| 58 | 38069 | 16QAM | 144 | 444 | |
| 59 | 38725 | QPSK | 192 | 445 | |
| 59 | 38725 | 16QAM | 144 | 445 | |
| 60 | 39381 | QPSK | 192 | 446 | |
| 60 | 39381 | 16QAM | 144 | 446 | |
| 61 | 40037 | QPSK | 192 | 448 | |
| 61 | 40037 | 16QAM | 144 | 448 | |
| 62 | 40693 | QPSK | 192 | 449 | |
| 62 | 40693 | 16QAM | 144 | 449 | |
| 63 | 41349 | QPSK | 192 | 450 | |
| 63 | 41349 | 16QAM | 144 | 450 | |
| 64 | 42005 | QPSK | 192 | 451 | |
| 64 | 42005 | 16QAM | 144 | 451 | |
| 65 | 42661 | QPSK | 192 | 452 | |
| 65 | 42661 | 16QAM | 144 | 452 | |
| 66 | 43317 | QPSK | 192 | 453 | |
| 66 | 43317 | 16QAM | 144 | 453 | |
| 67 | 43973 | QPSK | 192 | 454 | |
| 67 | 43973 | 16QAM | 144 | 454 | |
| 68 | 44629 | QPSK | 192 | 455 | |
| 68 | 44629 | 16QAM | 144 | 455 | |
| 69 | 45285 | QPSK | 192 | 456 | |
| 69 | 45285 | 16QAM | 144 | 456 | |
| 70 | 45941 | QPSK | 192 | 457 | |
| 70 | 45941 | 16QAM | 144 | 457 | |
| 71 | 46597 | 16QAM | 144 | 458 | |
| 72 | 47253 | 16QAM | 144 | 459 | |
| 73 | 47909 | 16QAM | 144 | 460 | |
| 74 | 48565 | 16QAM | 144 | 461 | |
| 75 | 49221 | 16QAM | 144 | 462 | |
| 76 | 49877 | 16QAM | 144 | 463 | |
| 77 | 50533 | 16QAM | 144 | 463 | |
| 78 | 51189 | 16QAM | 144 | 464 | |
| 79 | 51845 | 16QAM | 144 | 465 | |
| 80 | 52501 | 16QAM | 144 | 466 | |

**Table 18.2.1.4.4.8: TFRC test points for UE category 8 for MAC-d PDU size=656, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 169 | |
| 1 | 677 | 16QAM | 4 | 169 | |
| 2 | 1333 | QPSK | 16 | 215 | |
| 2 | 1333 | 16QAM | 8 | 215 | |
| 3 | 1989 | QPSK | 24 | 243 | |
| 3 | 1989 | 16QAM | 12 | 243 | |
| 4 | 2645 | QPSK | 32 | 262 | |
| 4 | 2645 | 16QAM | 16 | 262 | |
| 5 | 3301 | QPSK | 40 | 277 | |
| 5 | 3301 | 16QAM | 20 | 277 | |
| 6 | 3957 | QPSK | 49 | 290 | |
| 6 | 3957 | 16QAM | 24 | 290 | |
| 7 | 4613 | QPSK | 56 | 300 | |
| 7 | 4613 | 16QAM | 28 | 300 | |
| 8 | 5269 | QPSK | 65 | 309 | |
| 8 | 5269 | 16QAM | 32 | 309 | |
| 9 | 5925 | QPSK | 72 | 317 | |
| 9 | 5925 | 16QAM | 36 | 317 | |
| 10 | 6581 | QPSK | 81 | 324 | |
| 10 | 6581 | 16QAM | 40 | 324 | |
| 11 | 7237 | QPSK | 88 | 331 | |
| 11 | 7237 | 16QAM | 44 | 331 | |
| 12 | 7893 | QPSK | 98 | 337 | |
| 12 | 7893 | 16QAM | 49 | 337 | |
| 13 | 8549 | QPSK | 105 | 342 | |
| 13 | 8549 | 16QAM | 52 | 342 | |
| 14 | 9205 | QPSK | 112 | 347 | |
| 14 | 9205 | 16QAM | 56 | 347 | |
| 15 | 9861 | QPSK | 121 | 352 | |
| 15 | 9861 | 16QAM | 60 | 352 | |
| 16 | 10517 | QPSK | 128 | 356 | |
| 16 | 10517 | 16QAM | 64 | 356 | |
| 17 | 11173 | QPSK | 135 | 360 | |
| 17 | 11173 | 16QAM | 66 | 360 | |
| 18 | 11829 | QPSK | 144 | 364 | |
| 18 | 11829 | 16QAM | 72 | 364 | |
| 19 | 12485 | QPSK | 154 | 368 | |
| 19 | 12485 | 16QAM | 77 | 368 | |
| 20 | 13141 | QPSK | 160 | 372 | |
| 20 | 13141 | 16QAM | 81 | 372 | |
| 21 | 13797 | QPSK | 168 | 375 | |
| 21 | 13797 | 16QAM | 84 | 375 | |
| 22 | 14453 | QPSK | 176 | 378 | |
| 22 | 14453 | 16QAM | 88 | 378 | |
| 23 | 15109 | QPSK | 180 | 381 | |
| 23 | 15109 | 16QAM | 91 | 381 | |
| 24 | 15765 | QPSK | 192 | 384 | |
| 24 | 15765 | 16QAM | 96 | 384 | |
| 25 | 16421 | QPSK | 192 | 387 | |
| 25 | 16421 | 16QAM | 100 | 387 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | QPSK | 192 | 389 | |
| 26 | 17077 | 16QAM | 105 | 389 | |
| 27 | 17733 | QPSK | 192 | 392 | |
| 27 | 17733 | 16QAM | 108 | 392 | |
| 28 | 18389 | QPSK | 192 | 394 | |
| 28 | 18389 | 16QAM | 112 | 394 | |
| 29 | 19045 | QPSK | 192 | 397 | |
| 29 | 19045 | 16QAM | 117 | 397 | |
| 30 | 19701 | QPSK | 192 | 399 | |
| 30 | 19701 | 16QAM | 121 | 399 | |
| 31 | 20357 | QPSK | 192 | 401 | |
| 31 | 20357 | 16QAM | 121 | 401 | |
| 32 | 21013 | QPSK | 192 | 404 | |
| 32 | 21013 | 16QAM | 130 | 404 | |
| 33 | 21669 | QPSK | 192 | 406 | |
| 33 | 21669 | 16QAM | 132 | 406 | |
| 34 | 22325 | QPSK | 192 | 408 | |
| 34 | 22325 | 16QAM | 135 | 408 | |
| 35 | 22981 | QPSK | 192 | 410 | |
| 35 | 22981 | 16QAM | 143 | 410 | |
| 36 | 23637 | QPSK | 192 | 412 | |
| 36 | 23637 | 16QAM | 144 | 412 | |
| 37 | 24293 | QPSK | 192 | 413 | |
| 37 | 24293 | 16QAM | 144 | 413 | |
| 38 | 24949 | QPSK | 192 | 415 | |
| 38 | 24949 | 16QAM | 154 | 415 | |
| 39 | 25605 | QPSK | 192 | 417 | |
| 39 | 25605 | 16QAM | 156 | 417 | |
| 40 | 26261 | QPSK | 192 | 419 | |
| 40 | 26261 | 16QAM | 160 | 419 | |
| 41 | 26917 | QPSK | 192 | 420 | |
| 41 | 26917 | 16QAM | 165 | 420 | |
| 42 | 27573 | QPSK | 192 | 422 | |
| 42 | 27573 | 16QAM | 168 | 422 | |
| 43 | 28229 | QPSK | 192 | 424 | |
| 43 | 28229 | 16QAM | 168 | 424 | |
| 44 | 28885 | QPSK | 192 | 425 | |
| 44 | 28885 | 16QAM | 176 | 425 | |
| 45 | 29541 | QPSK | 192 | 427 | |
| 45 | 29541 | 16QAM | 180 | 427 | |
| 46 | 30197 | QPSK | 192 | 428 | |
| 46 | 30197 | 16QAM | 180 | 428 | |
| 47 | 30853 | QPSK | 192 | 430 | |
| 47 | 30853 | 16QAM | 180 | 430 | |
| 48 | 31509 | QPSK | 192 | 431 | |
| 48 | 31509 | 16QAM | 180 | 431 | |
| 49 | 32165 | QPSK | 192 | 433 | |
| 49 | 32165 | 16QAM | 180 | 433 | |
| 50 | 32821 | QPSK | 192 | 434 | |
| 50 | 32821 | 16QAM | 180 | 434 | |
| 51 | 33477 | QPSK | 192 | 435 | |
| 51 | 33477 | 16QAM | 180 | 435 | |
| 52 | 34133 | QPSK | 192 | 437 | |
| 52 | 34133 | 16QAM | 180 | 437 | |
| 53 | 34789 | QPSK | 192 | 438 | |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 34789 | 16QAM | 180 | 438 | |
| 54 | 35445 | QPSK | 192 | 439 | |
| 54 | 35445 | 16QAM | 180 | 439 | |
| 55 | 36101 | QPSK | 192 | 442 | |
| 55 | 36101 | 16QAM | 180 | 440 | |
| 56 | 36757 | QPSK | 192 | 442 | |
| 56 | 36757 | 16QAM | 180 | 442 | |
| 57 | 37413 | QPSK | 192 | 443 | |
| 57 | 37413 | 16QAM | 180 | 443 | |
| 58 | 38069 | QPSK | 192 | 444 | |
| 58 | 38069 | 16QAM | 180 | 444 | |
| 59 | 38725 | QPSK | 192 | 445 | |
| 59 | 38725 | 16QAM | 180 | 445 | |
| 60 | 39381 | QPSK | 192 | 446 | |
| 60 | 39381 | 16QAM | 180 | 446 | |
| 61 | 40037 | QPSK | 192 | 448 | |
| 61 | 40037 | 16QAM | 180 | 448 | |
| 62 | 40693 | QPSK | 192 | 449 | |
| 62 | 40693 | 16QAM | 180 | 449 | |
| 63 | 41349 | QPSK | 192 | 450 | |
| 63 | 41349 | 16QAM | 180 | 450 | |
| 64 | 42005 | QPSK | 192 | 451 | |
| 64 | 42005 | 16QAM | 180 | 451 | |
| 65 | 42661 | QPSK | 192 | 452 | |
| 65 | 42661 | 16QAM | 180 | 452 | |
| 66 | 43317 | QPSK | 192 | 453 | |
| 66 | 43317 | 16QAM | 180 | 453 | |
| 67 | 43973 | QPSK | 192 | 454 | |
| 67 | 43973 | 16QAM | 180 | 454 | |
| 68 | 44629 | QPSK | 192 | 455 | |
| 68 | 44629 | 16QAM | 180 | 455 | |
| 69 | 45285 | QPSK | 192 | 456 | |
| 69 | 45285 | 16QAM | 180 | 456 | |
| 70 | 45941 | QPSK | 192 | 457 | |
| 70 | 45941 | 16QAM | 180 | 457 | |
| 71 | 46597 | 16QAM | 180 | 458 | |
| 72 | 47253 | 16QAM | 180 | 459 | |
| 73 | 47909 | 16QAM | 180 | 460 | |
| 74 | 48565 | 16QAM | 180 | 461 | |
| 75 | 49221 | 16QAM | 180 | 462 | |
| 76 | 49877 | 16QAM | 180 | 463 | |
| 77 | 50533 | 16QAM | 180 | 463 | |
| 78 | 51189 | 16QAM | 180 | 464 | |
| 79 | 51845 | 16QAM | 180 | 465 | |
| 80 | 52501 | 16QAM | 180 | 466 | |
| 81 | 53157 | 16QAM | 180 | 467 | |
| 82 | 53813 | 16QAM | 180 | 468 | |
| 83 | 54469 | 16QAM | 180 | 469 | |
| 84 | 55125 | 16QAM | 180 | 469 | |
| 85 | 55781 | 16QAM | 180 | 470 | |
| 86 | 56437 | 16QAM | 180 | 471 | |
| 87 | 57093 | 16QAM | 180 | 472 | |
| 88 | 57749 | 16QAM | 180 | 473 | |
| 89 | 58405 | 16QAM | 180 | 473 | |
| 90 | 59061 | 16QAM | 180 | 474 | |

| | | | | | |
|---|---|---|---|---|---|
| 91 | 59717 | 16QAM | 180 | 475 | |
| 92 | 60373 | 16QAM | 180 | 476 | |
| 93 | 61029 | 16QAM | 180 | 476 | |
| 94 | 61685 | 16QAM | 180 | 477 | |
| 95 | 62341 | 16QAM | 180 | 478 | |
| 96 | 62997 | 16QAM | 180 | 478 | |
| 97 | 63653 | 16QAM | 180 | 479 | |
| 98 | 64309 | 16QAM | 180 | 480 | |
| 99 | 64965 | 16QAM | 180 | 481 | |
| 100 | 65621 | 16QAM | 180 | 481 | |
| 101 | 66277 | 16QAM | 180 | 482 | |
| 102 | 66933 | 16QAM | 180 | 483 | |
| 103 | 67589 | 16QAM | 180 | 483 | |
| 104 | 68245 | 16QAM | 180 | 484 | |
| 105 | 68901 | 16QAM | 180 | 485 | |
| 106 | 69557 | 16QAM | 180 | 485 | |
| 107 | 70213 | 16QAM | 180 | 486 | |
| 108 | 70869 | 16QAM | 180 | 486 | |
| 109 | 71525 | 16QAM | 180 | 487 | |
| 110 | 72181 | 16QAM | 180 | 489 | |
| 111 | 72837 | 16QAM | 180 | 489 | |

**Table 18.2.1.4.4.9: TFRC test points for UE category 9 for MAC-d PDU size=656, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 169 | |
| 1 | 677 | 16QAM | 4 | 169 | |
| 2 | 1333 | QPSK | 16 | 215 | |
| 2 | 1333 | 16QAM | 8 | 215 | |
| 3 | 1989 | QPSK | 24 | 243 | |
| 3 | 1989 | 16QAM | 12 | 243 | |
| 4 | 2645 | QPSK | 32 | 262 | |
| 4 | 2645 | 16QAM | 16 | 262 | |
| 5 | 3301 | QPSK | 40 | 277 | |
| 5 | 3301 | 16QAM | 20 | 277 | |
| 6 | 3957 | QPSK | 49 | 290 | |
| 6 | 3957 | 16QAM | 24 | 290 | |
| 7 | 4613 | QPSK | 56 | 300 | |
| 7 | 4613 | 16QAM | 28 | 300 | |
| 8 | 5269 | QPSK | 65 | 309 | |
| 8 | 5269 | 16QAM | 32 | 309 | |
| 9 | 5925 | QPSK | 72 | 317 | |
| 9 | 5925 | 16QAM | 36 | 317 | |
| 10 | 6581 | QPSK | 81 | 324 | |
| 10 | 6581 | 16QAM | 40 | 324 | |
| 11 | 7237 | QPSK | 88 | 331 | |
| 11 | 7237 | 16QAM | 44 | 331 | |
| 12 | 7893 | QPSK | 98 | 337 | |
| 12 | 7893 | 16QAM | 49 | 337 | |
| 13 | 8549 | QPSK | 105 | 342 | |
| 13 | 8549 | 16QAM | 52 | 342 | |
| 14 | 9205 | QPSK | 112 | 347 | |
| 14 | 9205 | 16QAM | 56 | 347 | |
| 15 | 9861 | QPSK | 121 | 352 | |
| 15 | 9861 | 16QAM | 60 | 352 | |
| 16 | 10517 | QPSK | 128 | 356 | |
| 16 | 10517 | 16QAM | 64 | 356 | |
| 17 | 11173 | QPSK | 135 | 360 | |
| 17 | 11173 | 16QAM | 66 | 360 | |
| 18 | 11829 | QPSK | 144 | 364 | |
| 18 | 11829 | 16QAM | 72 | 364 | |
| 19 | 12485 | QPSK | 154 | 368 | |
| 19 | 12485 | 16QAM | 77 | 368 | |
| 20 | 13141 | QPSK | 160 | 372 | |
| 20 | 13141 | 16QAM | 81 | 372 | |
| 21 | 13797 | QPSK | 168 | 375 | |
| 21 | 13797 | 16QAM | 84 | 375 | |
| 22 | 14453 | QPSK | 176 | 378 | |
| 22 | 14453 | 16QAM | 88 | 378 | |
| 23 | 15109 | QPSK | 180 | 381 | |
| 23 | 15109 | 16QAM | 91 | 381 | |
| 24 | 15765 | QPSK | 192 | 384 | |
| 24 | 15765 | 16QAM | 96 | 384 | |
| 25 | 16421 | QPSK | 192 | 387 | |
| 25 | 16421 | 16QAM | 100 | 387 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | QPSK | 192 | 389 | |
| 26 | 17077 | 16QAM | 105 | 389 | |
| 27 | 17733 | QPSK | 192 | 392 | |
| 27 | 17733 | 16QAM | 108 | 392 | |
| 28 | 18389 | QPSK | 192 | 394 | |
| 28 | 18389 | 16QAM | 112 | 394 | |
| 29 | 19045 | QPSK | 192 | 397 | |
| 29 | 19045 | 16QAM | 117 | 397 | |
| 30 | 19701 | QPSK | 192 | 399 | |
| 30 | 19701 | 16QAM | 121 | 399 | |
| 31 | 20357 | QPSK | 192 | 401 | |
| 31 | 20357 | 16QAM | 121 | 401 | |
| 32 | 21013 | QPSK | 192 | 404 | |
| 32 | 21013 | 16QAM | 130 | 404 | |
| 33 | 21669 | QPSK | 192 | 406 | |
| 33 | 21669 | 16QAM | 132 | 406 | |
| 34 | 22325 | QPSK | 192 | 408 | |
| 34 | 22325 | 16QAM | 135 | 408 | |
| 35 | 22981 | QPSK | 192 | 410 | |
| 35 | 22981 | 16QAM | 143 | 410 | |
| 36 | 23637 | QPSK | 192 | 412 | |
| 36 | 23637 | 16QAM | 144 | 412 | |
| 37 | 24293 | QPSK | 192 | 413 | |
| 37 | 24293 | 16QAM | 144 | 413 | |
| 38 | 24949 | QPSK | 192 | 415 | |
| 38 | 24949 | 16QAM | 154 | 415 | |
| 39 | 25605 | QPSK | 192 | 417 | |
| 39 | 25605 | 16QAM | 156 | 417 | |
| 40 | 26261 | QPSK | 192 | 419 | |
| 40 | 26261 | 16QAM | 160 | 419 | |
| 41 | 26917 | QPSK | 192 | 420 | |
| 41 | 26917 | 16QAM | 165 | 420 | |
| 42 | 27573 | QPSK | 192 | 422 | |
| 42 | 27573 | 16QAM | 168 | 422 | |
| 43 | 28229 | QPSK | 192 | 424 | |
| 43 | 28229 | 16QAM | 168 | 424 | |
| 44 | 28885 | QPSK | 192 | 425 | |
| 44 | 28885 | 16QAM | 176 | 425 | |
| 45 | 29541 | QPSK | 192 | 427 | |
| 45 | 29541 | 16QAM | 180 | 427 | |
| 46 | 30197 | QPSK | 192 | 428 | |
| 46 | 30197 | 16QAM | 180 | 428 | |
| 47 | 30853 | QPSK | 192 | 430 | |
| 47 | 30853 | 16QAM | 180 | 430 | |
| 48 | 31509 | QPSK | 192 | 431 | |
| 48 | 31509 | 16QAM | 192 | 431 | |
| 49 | 32165 | QPSK | 192 | 433 | |
| 49 | 32165 | 16QAM | 192 | 433 | |
| 50 | 32821 | QPSK | 192 | 434 | |
| 50 | 32821 | 16QAM | 192 | 434 | |
| 51 | 33477 | QPSK | 192 | 435 | |
| 51 | 33477 | 16QAM | 192 | 435 | |
| 52 | 34133 | QPSK | 192 | 437 | |
| 52 | 34133 | 16QAM | 192 | 437 | |
| 53 | 34789 | QPSK | 192 | 438 | |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 34789 | 16QAM | 192 | 438 | |
| 54 | 35445 | QPSK | 192 | 439 | |
| 54 | 35445 | 16QAM | 192 | 439 | |
| 55 | 36101 | QPSK | 192 | 442 | |
| 55 | 36101 | 16QAM | 192 | 440 | |
| 56 | 36757 | QPSK | 192 | 442 | |
| 56 | 36757 | 16QAM | 192 | 442 | |
| 57 | 37413 | QPSK | 192 | 443 | |
| 57 | 37413 | 16QAM | 192 | 443 | |
| 58 | 38069 | QPSK | 192 | 444 | |
| 58 | 38069 | 16QAM | 192 | 444 | |
| 59 | 38725 | QPSK | 192 | 445 | |
| 59 | 38725 | 16QAM | 192 | 445 | |
| 60 | 39381 | QPSK | 192 | 446 | |
| 60 | 39381 | 16QAM | 192 | 446 | |
| 61 | 40037 | QPSK | 192 | 448 | |
| 61 | 40037 | 16QAM | 192 | 448 | |
| 62 | 40693 | QPSK | 192 | 449 | |
| 62 | 40693 | 16QAM | 192 | 449 | |
| 63 | 41349 | QPSK | 192 | 450 | |
| 63 | 41349 | 16QAM | 192 | 450 | |
| 64 | 42005 | QPSK | 192 | 451 | |
| 64 | 42005 | 16QAM | 192 | 451 | |
| 65 | 42661 | QPSK | 192 | 452 | |
| 65 | 42661 | 16QAM | 192 | 452 | |
| 66 | 43317 | QPSK | 192 | 453 | |
| 66 | 43317 | 16QAM | 192 | 453 | |
| 67 | 43973 | QPSK | 192 | 454 | |
| 67 | 43973 | 16QAM | 192 | 454 | |
| 68 | 44629 | QPSK | 192 | 455 | |
| 68 | 44629 | 16QAM | 192 | 455 | |
| 69 | 45285 | QPSK | 192 | 456 | |
| 69 | 45285 | 16QAM | 192 | 456 | |
| 70 | 45941 | QPSK | 192 | 457 | |
| 70 | 45941 | 16QAM | 192 | 457 | |
| 71 | 46597 | 16QAM | 192 | 458 | |
| 71 | 47253 | 16QAM | 192 | 459 | |
| 72 | 47909 | 16QAM | 192 | 460 | |
| 72 | 48565 | 16QAM | 192 | 461 | |
| 73 | 49221 | 16QAM | 192 | 462 | |
| 73 | 49877 | 16QAM | 192 | 463 | |
| 74 | 50533 | 16QAM | 192 | 463 | |
| 74 | 51189 | 16QAM | 192 | 464 | |
| 75 | 51845 | 16QAM | 192 | 465 | |
| 75 | 52501 | 16QAM | 192 | 466 | |
| 76 | 53157 | 16QAM | 192 | 467 | |
| 76 | 53813 | 16QAM | 192 | 468 | |
| 77 | 54469 | 16QAM | 192 | 469 | |
| 77 | 55125 | 16QAM | 192 | 469 | |
| 78 | 55781 | 16QAM | 192 | 470 | |
| 78 | 56437 | 16QAM | 192 | 471 | |
| 79 | 57093 | 16QAM | 192 | 472 | |
| 79 | 57749 | 16QAM | 192 | 473 | |
| 80 | 58405 | 16QAM | 192 | 473 | |
| 80 | 59061 | 16QAM | 192 | 474 | |

| | | | | | |
|---|---|---|---|---|---|
| 81 | 59717 | 16QAM | 192 | 475 | |
| 81 | 60373 | 16QAM | 192 | 476 | |
| 82 | 61029 | 16QAM | 192 | 476 | |
| 82 | 61685 | 16QAM | 192 | 477 | |
| 83 | 62341 | 16QAM | 192 | 478 | |
| 83 | 62997 | 16QAM | 192 | 478 | |
| 84 | 63653 | 16QAM | 192 | 479 | |
| 84 | 64309 | 16QAM | 192 | 480 | |
| 85 | 64965 | 16QAM | 192 | 481 | |
| 85 | 65621 | 16QAM | 192 | 481 | |
| 86 | 66277 | 16QAM | 192 | 482 | |
| 86 | 66933 | 16QAM | 192 | 483 | |
| 87 | 67589 | 16QAM | 192 | 483 | |
| 87 | 68245 | 16QAM | 192 | 484 | |
| 88 | 68901 | 16QAM | 192 | 485 | |
| 88 | 69557 | 16QAM | 192 | 485 | |
| 89 | 70213 | 16QAM | 192 | 486 | |
| 89 | 70869 | 16QAM | 192 | 486 | |
| 90 | 71525 | 16QAM | 192 | 487 | |
| 90 | 72181 | 16QAM | 192 | 489 | |
| 91 | 72837 | 16QAM | 192 | 489 | |
| 91 | 73493 | 16QAM | 192 | 489 | |
| 92 | 74149 | 16QAM | 192 | 490 | |
| 92 | 74805 | 16QAM | 192 | 490 | |
| 93 | 75461 | 16QAM | 192 | 491 | |
| 93 | 76117 | 16QAM | 192 | 491 | |
| 94 | 76773 | 16QAM | 192 | 492 | |
| 94 | 77429 | 16QAM | 192 | 494 | |
| 95 | 78085 | 16QAM | 192 | 494 | |
| 95 | 78741 | 16QAM | 192 | 494 | |
| 96 | 79397 | 16QAM | 192 | 494 | |
| 96 | 80053 | 16QAM | 192 | 495 | |
| 97 | 80709 | 16QAM | 192 | 495 | |
| 97 | 81365 | 16QAM | 192 | 497 | |
| 98 | 82021 | 16QAM | 192 | 497 | |
| 98 | 82677 | 16QAM | 192 | 497 | |
| 99 | 83333 | 16QAM | 192 | 498 | |
| 99 | 83989 | 16QAM | 192 | 498 | |
| 100 | 84652 | 16QAM | 192 | 499 | |
| 100 | 85308 | 16QAM | 192 | 499 | |
| 101 | 85964 | 16QAM | 192 | 500 | |
| 101 | 86620 | 16QAM | 192 | 500 | |
| 102 | 87276 | 16QAM | 192 | 501 | |
| 102 | 87932 | 16QAM | 192 | 501 | |
| 103 | 88588 | 16QAM | 192 | 502 | |
| 103 | 89244 | 16QAM | 192 | 502 | |
| 104 | 89900 | 16QAM | 192 | 503 | |
| 104 | 90556 | 16QAM | 192 | 503 | |
| 105 | 91212 | 16QAM | 192 | 504 | |
| 105 | 91868 | 16QAM | 192 | 504 | |
| 106 | 92524 | 16QAM | 192 | 505 | |
| 106 | 93180 | 16QAM | 192 | 505 | |

### 18.2.1.5 Generic test procedure for radio bearers on MTCH

See 14.1.5 for test procedure

### 18.2.1.6 Generic test procedure for radio bearers on MBSFN MTCH

#### 18.2.1.6.1 Initial conditions

System Simulator:

- 1 MBMS MBSFN Cell 31 with default parameters.

  In addition to broadcasting System Information, MCCH messages are transmitted by the SS using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing service). See subclause 11.1 of TS 34.108.

- 1 unicast carrier Cell 1 with default parameters.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.

- The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected the broadcast service to be provided by the SS on the MBSFN cell (included in MBMS_ACTIVATED_SERVICES variable).

#### 18.2.1.6.2 Test procedure

a) The SS sends CLOSE UE TEST LOOP via the unicast carrier cell, requesting activation of Test Loop Mode 3 specifying the MBSFN MBMS short transmission identity of the MTCH for the activated service

b) The SS notifies on MCCH about the start of an MBMS session and waits for the UE to activate MTCH reception at the specified activation time.

c) At the specified activation time the UE establishes the p-t-m radio bearer and closes the UE test loop. The UE sends CLOSE UE TEST LOOP COMPLETE..

d) The SS broadcasts 10 RLC SDUs on the MTCH configured on the concerned MBMS radio bearer. The MBMS data is broadcast using RLC SDU size and transport format as specified for sub-test 1.

e) The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the UE has received at least one RLC SDU.

f) Repeat steps g) and h) for the remaining sub-tests.

g) The SS broadcast 10 RLC SDUs on the MTCH configured on the concerned MBMS radio bearer. The MBMS data is broadcasted using RLC SDU size and transport format as specified for the sub-test under test.

h) The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the UE has received at least one RLC SDU of the MBMS data sent in step g).

i) The SS deactivates the UE test loop mode 3.

NOTE 1: For a UE in UE test loop mode 3 the RLC SDU counter value is only reset upon reception of the CLOSE UE TEST LOOP message configuring UE test loop mode 3. To enable the SS to measure the number of received RLC SDUs for the different sub-tests the SS needs to record the reported values for each sub-test and perform the checking of the reported value relative to the previously reported value.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 on MTCH for the activated service. |
| 4 | ← | | M | MBMS MCCH Message Configuration C4 | Includes the service activated at UE in the modified services list for one modification period. |
| 5 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. |
| 6 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE establishes the MTCH according to the activation time and closes the test loop. |
| 7 | | SS | M | | The SS transmits 10 RLC SDUs on the MTCH. The MBMS data is broadcast using RLC SDU size and transport format as specified for sub-test 1. |
| 8 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 9 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than zero and records the value. |
| 10 | | SS | | | The SS repeats steps 10 to 12 for the remaining sub-tests (sub-test 2 etc.). |
| 11 | | SS | M | | The SS transmits 10 RLC SDUs on the MTCH. The MBMS data is broadcast using RLC SDU size and transport format as specified for the current sub-test under test. |
| 12 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 13 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than the recorded value from the previous sub-test. The SS records the reported value. |
| 14 | ← | | U | OPEN UE TEST LOOP | |
| 15 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 16 | ← | | U | DEACTIVATE RB TEST MODE | |
| 17 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific Message Contents

MBMS MODIFIED SERVICES INFORMATION (Step 4)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Modified service list | |
| - MBMS Transmission identity | |
| - MBMS Service ID | 1 |
| - MBMS Session ID | 1 |
| - MBMS required UE action | Acquire PTM RB info |
| MBMS p-t-m activation time | SS shall choose a value which is sufficiently far ahead for the UE to establish the MTCH |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Steps 9)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than zero |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Steps 13)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than the value reported at the previous sub-test. |

## 18.2.1.7 General information for interoperability radio bearer tests for E-DCH and HS-DSCH combinations

### 18.2.1.7.1 Generic test procedure for HS-DSCH and E-DCH radio bearer combinations

This procedure is used to test E-DCH radio bearer combinations. The procedure is run once for each sub-test of the actual E-DCH radio bearer test case.

Definition of test variables:

$N_{\underline{TS}}$ The number of HS-DSCH timeslots as specified by the sub-test. This parameter is dependent on the UE capability.

$N_{\underline{codes}}$ The number of HS-DSCH codes (1..16) as specified by the sub-test. This parameter is not dependent on UE capability, all UEs can support 16 HS-DSCH codes.

*M* The type of modulation scheme (QPSK, 16QAM) as specified by the sub-test.

$N_{PDUs}$ The number of MAC-d PDUs for the DTCH(s) mapped on HS-DSCH as specified by the sub-test.

$H_{\underline{ID}}$ The HARQ process identifier (0..3) as specified by the sub-test.

#### 18.2.1.7.1.1 Initial conditions

UE in idle mode

#### 18.2.1.7.1.2 Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test. For the case when the reference radio bearer configuration includes radio bearers for both CS and PS domain then the radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s). The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers . The Physical channel configuration shall be done for both CS and PS radio bearers combined. Here the transport format combination set for both CS and PS radio bearers shall be provided. See note 1 and note 3.

b) For DTCH mapped to DCH in uplink the SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. See note 2.

c) The SS closes the test loop using UE test loop mode 1 and set the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test.

d) The SS issues an absolute grant that allows the UE to send at maximum bit rate.

e) The SS sets the HS-DSCH TFRC test point as specified for the sub-test ($N_{PDUs}$ , *M*, $N\underline{codes}$, $N_{\underline{TS}}$ and *TFRI*).

f) The SS sets $H_{\underline{ID}}$ to the number of HARQ processes specified for the sub-test.

h) The SS transmits, for each DTCH mapped to HS-DSCH, a DL RLC SDUs having the size equal the to the “Test data size” as specified for the sub-test concatenated into a MAC-hs PDU using the selected TFRC and $H_{\underline{ID}}$. If the radio bearer combination under test includes downlink DTCHs mapped to DCH then the SS transmits, for all DTCHs mapped to DCH, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test.

i) The SS checks that the content of the UE returned RLC SDUs have the correct content and are received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

j) The SS opens the UE test loop.

l) The SS release the radio bearer. See note 4.

m) Steps a) to l) are repeated for all sub-tests. See note 5.

n) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test. The number of soft channel bits per HARQ process is split equally among the number of HARQ processes configured for the actual sub-test - i.e. “Total number of soft channel bits” for the UE category according to table 18.2.1.4.1.1 divided by the number of HARQ processes under test. The number of reordering queues are 1 for single HS-DSCH radio bearer configurations. The MAC-hs window size, RLC Transmission window size and RLC Receiving window size shall be configured as specified for the actual sub-test.

NOTE 2: The restricted set of uplink TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signaling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

NOTE 3: The MAC-hs window size and RLC Receiver and transmitter window sizes need to be chosen such that the UE capability for “Minimum total RLC AM and MAC-hs buffer size” is not exceeded for the UE category under test.

NOTE 4: The Secondary scrambling code in the RADIO BEARER RELEASE message is set to the same value used in the RADIO BEARER SETUP MESSAGE.

NOTE 5: CS radio bearer is setup once during the first sub-test.

Expected sequence (repeated for each sub-test, see note 3)

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| **Case A: PS radio bearers only** | | | | |
| A1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| A2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| A3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| A4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| A5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| A6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| A7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| A8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| A9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| A10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| A11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>.<br>PS radio bearer(s) are configured. For the PS radio bearer(s) the 'pdcp info' IE shall be omitted. |
| A12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **End of branch for Case A** | | | | |
| **Case B: CS + PS radio bearers** | | | | |
| B1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| B2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| B3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| B4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| B5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| B6 | --> | | PAGING RESPONSE (DCCH) | RR |
| B6a | <-- | | AUTHENTICATION REQUEST | |
| B6b | --> | | AUTHENTICATION RESPONSE | |
| B7 | <-- | | SECURITY MODE COMMAND | |
| B8 | --> | | SECURITY MODE COMPLETE | |
| B9 | <-- | | PAGING TYPE 2 (DCCH) | TMSI (GSM-MAP)/ P-TMSI |
| B9a | --> | | SERVICE REQUEST (DCCH) | GMM |
| B9b | <-- | | SECURITY MODE COMMAND | RRC See note 2 |
| B9c | --> | | SECURITY MODE COMPLETE | RRC |
| B10 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| B10a | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| B11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured |
| B12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B12a | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| B12b | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B12c | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test |
| **End of branch for Case B** | | | | |
| 13 | | | Void | |
| 14 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 15 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 16 | SS | | | The SS sets the HS-DSCH TFRC test point ($N_{PDUs}$ , $M$, $N$codes, $N_{TS}$ and TFRI). and the number of HARQ processes as as specified for the sub-test. |
| 17 | <-- | | DOWNLINK MAC-hs PDU (HS-DSCH#1)<br>…<br>DOWNLINK MAC-hs PDU (HS-DSCH#N)<br><br>DL RLC SDU (DL DCH#1)<br>…<br>DL RLC SDU (DL DCH#M) | For each DTCH mapped on HS-DSCH the SS sends test data.<br>For each DTCH mapped on DCH the SS sends test data using the downlink transport format combination under test. |
| 18 | --> | | UPLINK RLC SDUs | The SS checks, for each DTCH, that the content and transport format of the received UL RLC SDUs are correct. |
| 19 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 20 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 21 | | | RB RELEASE | RRC |
| 22 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 23 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |

NOTE 1 In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

NOTE 2 For case B (CS+PS radio bearers) the second security mode procedure is needed to enable testing of ciphering on the PS radio bearers.

NOTE 3 For case A (PS radio bearers) steps A1 to A10 will be executed once during first sub-test. For case B (CS+PS radio bearers) steps B1 to B12 will be executed once during first sub-test.

## 18.2.2 Combinations on DPCH

### 18.2.2.1 Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH

Test to verify establishment and signalling of stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.1.

The test case is performed by running test case 9.4.1 (Location updating / accepted) using the stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.1.

### 18.2.2.1a Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH (multiframe)

Test to verify establishment and signalling of stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.1a.

The test case is performed by running test case 9.4.1 (Location updating / accepted) using the stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.1a.

### 18.2.2.2 Stand-alone UL:3.4 DL:3.4 kbps SRBs for DCCH

Test to verify establishment and signalling of stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.2.

The test case is performed by running test case 9.4.1 (Location updating / accepted) using the stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.2.

### 18.2.2.3 Stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH

Implicitly tested.

NOTE The stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH in TS 34.108, clause 6.10.3.4.1.3 is the default signalling radio bearer used in the generic setup procedure as specified in TS 34.108 clause 7.

### 18.2.2.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.2.4.1 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signalled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

#### 18.2.2.4.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.4.

#### 18.2.2.4.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.4.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x81); RB6/TF1 (1x103); and RB7/TF1 (1x60).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.
   - for sub-test 2: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS

### 18.2.2.4a Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 18.2.2.4a.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.4a.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.4a.

#### 18.2.2.4a.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0) |
| UL_TFC5 | (TF5, TF4, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF0, TF1) |
| UL_TFC9 | (TF3, TF2, TF0, TF1) |
| UL_TFC10 | (TF4, TF3, TF0, TF1) |
| UL_TFC11 | (TF5, TF4, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0) |
| DL_TFC5 | (TF5, TF4, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF0, TF1) |
| DL_TFC9 | (TF3, TF2, TF0, TF1) |
| DL_TFC10 | (TF4, TF3, TF0, TF1) |
| DL_TFC11 | (TF5, TF4, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.

See clause 18.2.1.1 for test procedure.

### 18.2.2.4a.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53)
   - for sub-test 3: RB5/TF3 (1x55) and RB6/TF2 (1x63)
   - for sub-test 4: RB5/TF4 (1x75) and RB6/TF3 (1x84)
   - for sub-test 5: RB5/TF5 (1x81), RB6/TF4 (1x103) and RB7/TF1 (1x60)

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.

   - for sub-test 2,3 and 4: an RLC SDU on RB5 and RB6 having the same content as sent by SS; and no data shall be received on RB7.

   - for sub-test 5: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS.

## 18.2.2.5 Conversational / speech / UL:10.2 DL:10.2 kbps / CS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.2.2.5.1 Conformance requirement

See clause 18.2.2.4.1.

### 18.2.2.5.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.5.

### 18.2.2.5.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65(alt. 1x0) | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x99 | 1x40 | 1x148 |
| | TF2, bits | 1x65 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65(alt. 1x0) | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x99 | 1x40 | 1x148 |
| | TF2, bits | 1x65 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.2.1.1 for test procedure.

#### 18.2.2.5.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x65); RB6/TF1 (1x99); and RB7/TF1 (1x40).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.
   - for sub-test 2: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS.

### 18.2.2.5a Conversational / speech / UL:(10.2, 6.7, 5.9, 4.75) DL:(10.2, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 18.2.2.5a.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.5a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.5a.

#### 18.2.2.5a.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65(alt. 1x0) | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x40 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A | N/A |
| | TF4, bits | 1x58 | 1x99 | N/A | N/A |
| | TF5, bits | 1x65 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0) |
| UL_TFC5 | (TF5, TF4, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF0, TF1) |
| UL_TFC9 | (TF3, TF2, TF0, TF1) |
| UL_TFC10 | (TF4, TF3, TF0, TF1) |
| UL_TFC11 | (TF5, TF4, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65(alt. 1x0) | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x40 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A | N/A |
| | TF4, bits | 1x58 | 1x99 | N/A | N/A |
| | TF5, bits | 1x65 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0) |
| DL_TFC5 | (TF5, TF4, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF0, TF1) |
| DL_TFC9 | (TF3, TF2, TF0, TF1) |
| DL_TFC10 | (TF4, TF3, TF0, TF1) |
| DL_TFC11 | (TF5, TF4, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 39 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 40 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 40 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10 | RB5: 58 bits<br>RB6: 76 bits<br>RB7: 40 bits | RB5: 58 bits<br>RB6: 76 bits<br>RB7: No data |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.

See clause 18.2.1.1 for test procedure.

### 18.2.2.5a.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53)
   - for sub-test 3: RB5/TF3 (1x55) and RB6/TF2 (1x63)
   - for sub-test 4: RB5/TF4 (1x58) and RB6/TF3 (1x76)
   - for sub-test 5: RB5/TF5 (1x65), RB6/TF4 (1x99) and RB7/TF1 (1x40)

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by the SS; and no data shall be received on RB6 or RB7.

   - for sub-test 2, 3 and 4: an RLC SDU on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7.

   - for sub-test 5: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by the SS.

## 18.2.2.6 Conversational / speech / UL:7.95 DL:7.95 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.2.6.1 Conformance requirement

See clause 18.2.2.4.1.

### 18.2.2.6.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.6.

### 18.2.2.6.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x75(alt. 1x0) | 0x84 | 0x148 |
| | TF1, bits | 1x39 | 1x84 | 1x148 |
| | TF2, bits | 1x75 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x75(alt. 1x0) | 0x84 | 0x148 |
| | TF1, bits | 1x39 | 1x84 | 1x148 |
| | TF2, bits | 1x75 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 84 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 75 bits<br>RB6: 84 bits | RB5: 75 bits<br>RB6: 84 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.2.1.1 for test procedure.

.

#### 18.2.2.6.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x75) and RB6/TF1 (1x84).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS.

### 18.2.2.7 Conversational / speech / UL:7.4 DL:7.4 kbps / CS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.2.7.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.7.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.7.

#### 18.2.2.7.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x61 (alt. 1x0) | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x87 | 1x148 |
| | TF2, bits | 1x61 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x61 (alt. 1x0) | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x87 | 1x148 |
| | TF2, bits | 1x61 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 87 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 61 bits<br>RB6: 87 bits | RB5: 61 bits<br>RB6: 87 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.2.1.1 for test procedure.

### 18.2.2.7.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x61) and RB6/TF1 (1x87).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.

   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

## 18.2.2.7a Conversational / speech / UL:(7.4, 6.7, 5.9, 4.75) DL:(7.4, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 18.2.2.7a.1 Conformance requirement

See clause 18.2.2.4.1.

### 18.2.2.7a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.7a.

### 18.2.2.7a.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x61(alt. 1x0) | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A |
| | TF4, bits | 1x58 | 1x87 | N/A |
| | TF5, bits | 1x61 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF3, TF2, TF0) |
| UL_TFC4 | (TF4, TF3, TF0) |
| UL_TFC5 | (TF5, TF4, TF0) |
| UL_TFC6 | (TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1) |
| UL_TFC9 | (TF3, TF2, TF1) |
| UL_TFC10 | (TF4, TF3, TF1) |
| UL_TFC11 | (TF5, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x61 (alt. 1x0) | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A |
| | TF4, bits | 1x58 | 1x87 | N/A |
| | TF5, bits | 1x61 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF3, TF2, TF0) |
| DL_TFC4 | (TF4, TF3, TF0) |
| DL_TFC5 | (TF5, TF4, TF0) |
| DL_TFC6 | (TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1) |
| DL_TFC9 | (TF3, TF2, TF1) |
| DL_TFC10 | (TF4, TF3, TF1) |
| DL_TFC11 | (TF5, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 39 bits<br>RB6: 87 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8 | RB5: 42 bits<br>RB6: 53 bits | RB5: 42 bits<br>RB6: 53 bits |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9 | RB5: 55 bits<br>RB6: 63 bits | RB5: 55 bits<br>RB6: 63 bits |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10 | RB5: 58 bits<br>RB6: 76 bits | RB5: 58 bits<br>RB6: 76 bits |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 61 bits<br>RB6: 87 bits | RB5: 61 bits<br>RB6: 87 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5 and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.2.1.1 for test procedure.

#### 18.2.2.7a.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53)
   - for sub-test 3: RB5/TF3 (1x55) and RB6/TF2 (1x63)
   - for sub-test 4: RB5/TF4 (1x58) and RB6/TF3 (1x76)
   - for sub-test 5: RB5/TF5 (1x61) and RB6/TF4 (1x87)
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by the SS; and no data shall be received on RB6.
   - for sub-test 2 to 5: an RLC SDU on RB5 and RB6 having the same content as sent by the SS.

### 18.2.2.8 Conversational / speech / UL:6.7 DL:6.7 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.2.8.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.8.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.8.

#### 18.2.2.8.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x58(alt. 1x0) | 0x76 | 0x148 |
| | TF1, bits | 1x39 | 1x76 | 1x148 |
| | TF2, bits | 1x58 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x58(alt. 1x0) | 0x76 | 0x148 |
| | TF1, bits | 1x39 | 1x76 | 1x148 |
| | TF2, bits | 1x58 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 76 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 58 bits<br>RB6: 76 bits | RB5: 58 bits<br>RB6: 76 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.2.1.1 for test procedure.

#### 18.2.2.8.4 Test requirements

See clause 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x58) and RB6/TF1 (1x76).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

### 18.2.2.9 Conversational / speech / UL:5.9 DL:5.9 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.2.9.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.9.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.9.

#### 18.2.2.9.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x55(alt. 1x0) | 0x63 | 0x148 |
| | TF1, bits | 1x39 | 1x63 | 1x148 |
| | TF2, bits | 1x55 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x55 (alt. 1x0) | 0x63 | 0x148 |
| | TF1, bits | 1x39 | 1x63 | 1x148 |
| | TF2, bits | 1x55 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 63 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 55 bits<br>RB6: 63 bits | RB5: 55 bits<br>RB6: 63 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.2.1.1 for test procedure.

### 18.2.2.9.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15 the UE transmitted transport format shall be

   - for sub-test 1: RB5/TF1 (1x39).

   - for sub-test 2: RB5/TF2 (1x55) and RB6/TF1 (1x63).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.

   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

## 18.2.2.10 Conversational / speech / UL:5.15 DL:5.15 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH

### 18.2.2.10.1 Conformance requirement

See clause 18.2.2.4.1.

### 18.2.2.10.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.10.

### 18.2.2.10.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x49 (alt. 1x0) | 0x54 | 0x148 |
| | TF1, bits | 1x39 | 1x54 | 1x148 |
| | TF2, bits | 1x49 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x49 (alt. 1x0) | 0x54 | 0x148 |
| | TF1, bits | 1x39 | 1x54 | 1x148 |
| | TF2, bits | 1x49 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 54 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 49 bits<br>RB6: 54 bits | RB5: 49 bits<br>RB6: 54 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.2.1.1 for test procedure.

#### 18.2.2.10.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x49) and RB6/TF1 (1x54).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

### 18.2.2.11 Conversational / speech / UL:4.75 DL:4.75 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH

#### 18.2.2.11.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.11.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.11.

#### 18.2.2.11.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x49(alt.1x0 ) | 0x53 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0X42 (alt.1x0 ) | 0x53 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 53 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 42 bits<br>RB6: 53 bits | RB5: 42 bits<br>RB6: 53 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.2.1.1 for test procedure.

### 18.2.2.11.4 Test requirements

See clause 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53).
3. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
- for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

## 18.2.2.12 Conversational / unknown / UL:28.8 DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.2.12.1 Conformance requirement

See 18.2.2.4.1.

### 18.2.2.12.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.12.

### 18.2.2.12.3 Method of test

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication | FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | FALSE |

Uplink TFS:

| | TFI | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note2 ) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 576 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.2.1.1 for test procedure.

#### 18.2.2.12.4 Test requirements

See clause 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

### 18.2.2.13 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.2.13.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.13.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.13.

#### 18.2.2.13.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 2x640 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.2.1.1 for test procedure.

### 18.2.2.13.4 Test requirements

See clause 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (2x640).
3. At step 15 the UE shall return
   - for sub-test 1: two RLC SDUs on RB5 having the same content as sent by SS.

## 18.2.2.14 Conversational / unknown / UL:32 DL:32 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.2.14.1 Conformance requirement

See 18.2.2.4.1.

### 18.2.2.14.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.14.

### 18.2.2.14.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication | FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | FALSE |

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 1x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 1x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 640 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.14.4 Test requirements

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x640).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

### 18.2.2.15 Streaming / unknown / UL:14.4/DL:14.4 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.2.15.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.15.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.15.

#### 18.2.2.15.3 Method of test

Uplink TFS:

| | TFI | RB5 (14.4 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (14.4 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 576 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.15.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

### 18.2.2.16 Streaming / unknown / UL:28.8/DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.2.16.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.16.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.16.

#### 18.2.2.16.3 Method of test

Uplink TFS:

| | TFI | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 576 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.16.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

### 18.2.2.17 Streaming / unknown / UL:57.6/DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.2.17.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.17.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.17.

18.2.2.17.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (57.6 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |
| | TF3, bits | 3x576 | N/A |
| | TF4, bits | 4x576 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (57.6 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |
| | TF3, bits | 3x576 | N/A |
| | TF4, bits | 4x576 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5, | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 576 | RB5: 576 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 576 | RB5: 2x576 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 576 | RB5: 3x576 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 576 | RB5: 4x576 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

### 18.2.2.17.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
   - for sub-test 2: RB5/TF2 (2x576) or RB5/TF1 (1x576).
   - for sub-test 3: RB5/TF3 (3x576) or RB5/TF1 (1x576).
   - for sub-test 4: RB5/TF4 (4x576) or RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: one RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 2: two RLC SDU on RB5 having the same content as sent by SS.

- for sub-test 3: three RLC SDU on RB5 having the same content as sent by SS.
- for sub-test 4: four RLC SDU on RB5 having the same content as sent by SS.

### 18.2.2.18 Void

### 18.2.2.19 Void

### 18.2.2.20 Void

### 18.2.2.21 Void

### 18.2.2.22 Void

### 18.2.2.23 Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.2.23.1 Interactive or background / UL:32 DL:8 kbps / PS RAB / (Payload size 320)

##### 18.2.2.23.1.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.2.23.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.23 for uplink payload size 320 case.

##### 18.2.2.23.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC1 | UL_TFC2 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.23.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
3. At step 15 the UE shall return
   - for sub-test 1 and 2: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.2.2.23.2 Interactive or background / UL:32 DL:8 kbps / PS RAB / Payload size 128

#### 18.2.2.23.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.23.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.23 for the uplink payload size 128 case.

#### 18.2.2.23.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 5x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC1 | UL_TFC2 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 312 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

### 18.2.2.23.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (5x144).
3. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.

- for sub-test 2: an RLC SDU on RB5 having the same content as 2 times plus 8 lsb's of the DL RLC SDU sent by the SS.

## 18.2.2.23a Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 18.2.2.23a.1 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 40 ms TTI

#### 18.2.2.23a.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.23a.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.23a, for the uplink 40 ms TT case.

#### 18.2.2.23a.1.3 Method of test

See 18.2.1.1 for test procedure.

Uplink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (8 kbps RAB, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (8 kbps RAB, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2, | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312 | RB5: 312 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

#### 18.2.2.23a.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.2.2.23a.2 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 80 ms TTI

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.23a, for the uplink 80 ms TTI case.

See test case 18.2.2.23.2 for test procedure and test requirement.

## 18.2.2.23b Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 18.2.2.23b.1 Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320.

#### 18.2.2.23b.1.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.23b.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.23b, for the uplink payload size 320 case.

#### 18.2.2.23b.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC3,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC3 ,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 18.2.1.1 for test procedure.

### 18.2.2.23b.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).

3. At step 15 the UE shall return

   - for sub-test 1 and 2: an RLC SDU on RB5 having the same content as sent by the SS.

### 18.2.2.23b.2 Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128.

#### 18.2.2.23b.2.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.23b.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.23b, for the uplink payload size 128 case.

#### 18.2.2.23b.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 5x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC3,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC3 ,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.23b.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (5x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as sent by the SS.

### 18.2.2.23c Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 18.2.2.23c.1 Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320.

#### 18.2.2.23c.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.23c.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.23c the uplink payload size 320 case.

#### 18.2.2.23c.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC5,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>For RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.23c.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.2.2.23c.2 Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128.

#### 18.2.2.23c.2.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.23c.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.23c, for the uplink payload size 128 case.

#### 18.2.2.23c.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 5x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC5,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
For RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 18.2.1.1 for test procedure.

### 18.2.2.23c.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (5x144).
   - for sub-test 3: RB5/TF2 (7x144).
   - for sub-test 4: RB5/TF2 (10x144).

3. At step 15 the UE shall return

   - for sub for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 832 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4: an RLC SDU on RB5 having the same content as sent by the SS.

## 18.2.2.23d Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 18.2.2.23d.1 Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320.

#### 18.2.2.23d.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.23d.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.23d, for the uplink payload size of 320 case.

#### 18.2.2.23d.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC3,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC3 ,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC3 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
For RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 18.2.1.1 for test procedure.

#### 18.2.2.23d.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 2: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.2.2.23d.2 Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128.

#### 18.2.2.23d.2.1 Conformance requirement

See clause 18.2.2.4.1.

#### 18.2.2.23d.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.23d, for the uplink payload size 128 case.

#### 18.2.2.23d.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 5x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC3,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC3 ,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 18.2.1.1 for test procedure.

### 18.2.2.23d.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.

2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (5x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as sent by the SS.

## 18.2.2.24 Void

## 18.2.2.25 Interactive or background / UL:32 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.2.25.1 Interactive or background / UL:32 DL: 64 kbps / PS RAB / Payload size 320

#### 18.2.2.25.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.25.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.25 for the uplink payload size of 320 case.

#### 18.2.2.25.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 1272 | RB5: 1272 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.25.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1 and 3: RB5/TF1 (1x336).
   - for sub-test 2 and 4: RB5/TF1 (2x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.2.2.25.2 Interactive or background / UL:32 DL: 64 kbps / PS RAB / Payload 128

#### 18.2.2.25.2.1 Conformance requirement

See 18.2.2.4.1.

18.2.2.25.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.25 for the uplink payload 128 case.

18.2.2.25.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 5x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 1016 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 1272 | RB5: 1272 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.25.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (5x144).
   - for sub-test 3: RB5/TF1 (1x144).
   - for sub-test 4: RB5/TF2 (5x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.2.2.26 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.2.26.1 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1

#### 18.2.2.26.1.1 Conformance requirement

See 18.2.2.4.1.

18.2.2.26.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.26 for the uplink payload 320 case with physical configuration 1.

18.2.2.26.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF16 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 1148 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 (alt. 0.44) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

### 18.2.2.26.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return

- for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.2.2.26.2 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2

#### 18.2.2.26.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.26.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.26 for the uplink payload 128 case with physical configuration 2.

#### 18.2.2.26.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF2 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 2784 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 760 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

#### 18.2.2.26.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF3 (7x144).
   - for sub-test 4: RB5/TF4 (10x144).
3. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 128 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 832 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.2.2.27 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.2.27.1 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1

#### 18.2.2.27.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.27.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.27 for the uplink payload 320 case with physical configuration 1.

#### 18.2.2.27.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | Physical Configuration 1 |
|---|---|---|
| DPCH Uplink | Midamble | 512 chips |
| | Codes and time slots | SF16 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 1148 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 (alt. 0.44) |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Downlink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 8 codes x 1 time slot |
| | Max. Number of data bits/radio frame | 2192 bits |
| | TFCI code word | 16 bits |
| | Puncturing limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

#### 18.2.2.27.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2 and 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 640 lsb's of the DL RLC SDU sent by the SS.

### 18.2.2.27.2 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2

#### 18.2.2.27.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.27.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.27 for the uplink payload 128 case with physical configuration 2.

18.2.2.27.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF2 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 2784 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 4 codes x 2 time slots + SF16 x 3 codes x 2 time slots |
| | Max. Number of data bits/radio frame | 3848 bits |
| | TFCI code word | 16 bits |
| | Puncturing limit | 0.84 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 760 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

### 18.2.2.27.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF3 (7x144).
   - for sub-test 4: RB5/TF4 (10x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.

- for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 128 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 512 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.2.2.28 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.2.28.1 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1

#### 18.2.2.28.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.28.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.28 for the uplink payload 320 case with physical configuration 1.

#### 18.2.2.28.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 1 |
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 1 timeslot |
| | Max. Number of data bits/radio frame | 2064 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.44 (alt. 0.40) |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Downlink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 8 codes x 1 time slot |
| | Max. Number of data bits/radio frame | 2192 bits |
| | TFCI code word | 16 bits |
| | Puncturing limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.28.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.2.2.28.2 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2

#### 18.2.2.28.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.28.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.28 for the uplink payload 128 case with physical configuration 2.

#### 18.2.2.28.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 7x144 | N/A |
| | TF3, bits | 14x144 | N/A |
| | TF4, bits | 20x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 2 timeslots + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 5376 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | **TFI** | **RB5 (128 kbps)** | **DCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| **TFCI** | **(RB5, DCCH)** |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 4 codes x 2 time slots + SF16 x 3 codes x 2 time slots |
| | Max. Number of data bits/radio frame | 3848 bits |
| | TFCI code word | 16 bits |
| | Puncturing limit | 0.84 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 888 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.28.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (7x144).
   - for sub-test 3: RB5/TF3 (14x144).
   - for sub-test 4: RB5/TF4 (20x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 256 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 512 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.2.2.29 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.2.2.29.1 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 320

#### 18.2.2.29.1.1 Conformance requirement

See 18.2.2.4.1.

18.2.2.29.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.29 for the uplink payload 320 case with physical configuration 1.

18.2.2.29.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF16 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 1148 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 (alt. 0.44) |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2872 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

### 18.2.2.29.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).

- for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
- for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
- for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
- for sub-test 5: RB5/TF3 (3x336) or RB5/TF1 (1x336).

3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 and 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 640 lsb's of the DL RLC SDU sent by the SS.

### 18.2.2.29.2 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2

#### 18.2.2.29.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.29.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.29 for the uplink payload 128 case with physical configuration 2.

#### 18.2.2.29.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF2 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 2784 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 760 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 3576 | RB5: 2872 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

#### 18.2.2.29.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF4 (10x144).
   - for sub-test 4: RB5/TF4 (10x144).
   - for sub-test 5: RB5/TF3 (7x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 128 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3 and 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 5: an RLC SDU on RB5 having the same content as 1 times plus 712 lsb's of the DL RLC SDU sent by the SS.

## 18.2.2.30 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.2.2.30.1 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 320, TTI 20 ms

#### 18.2.2.30.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.30.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.30 for the uplink payload 320, TTI 20 ms case.

#### 18.2.2.30.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 2872 | RB5: 2872 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.30.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
   - for sub-test 5: RB5/TF5 (9x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.2.2.30.2 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 128, TTI 40 ms

#### 18.2.2.30.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.30.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.30 for the uplink payload 128, TTI 40 ms case.

18.2.2.30.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 10x144 | N/A |
| | TF3, bits | 20x144 | N/A |
| | TF4, bits | 30x144 | N/A |
| | TF5, bits | 45x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 1272 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 2552 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 3832 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 5752 | RB5: 2872 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

### 18.2.2.30.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (10x144).
   - for sub-test 3: RB5/TF3 (20x144).
   - for sub-test 4: RB5/TF4 (30x144).
   - for sub-test 5: RB5/TF5 (45x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 640 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 1280 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4: an RLC SDU on RB5 having the same content as 1 times plus 1280 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 5: an RLC SDU on RB5 having the same content as 1 times plus 2880 lsb's of the DL RLC SDU sent by the SS.

## 18.2.2.31 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.2.2.31.1 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH/ Payload 320, 10 ms TTI Down Link, Physical Configuration 1

#### 18.2.2.31.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.31.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.31 for the uplink payload 320, the downlink 10 ms TTI, and physical configuration 1 case.

#### 18.2.2.31.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 1 |
| | Midamble | 512 chips |
| | Codes and time slots | SF16 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 1148 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 (alt. 0.44) |

Downlink TFS:

| | TFI | RB5 (256 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

### 18.2.2.31.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).

3. At step 15 the UE shall return

   - for sub-test 1, 2 and 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 640 lsb's of the DL RLC SDU sent by the SS.

### 18.2.2.31.2 Interactive or background / UL:64 DL:256 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2

#### 18.2.2.31.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.31.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.31 for the uplink payload 128, the downlink 20 ms TTI, and physical configuration 2 case.

#### 18.2.2.31.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF2 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 2784 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (256 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF0, TF1) |
| DL_TFC8 | (TF1, TF1) |
| DL_TFC9 | (TF2, TF1) |
| DL_TFC10 | (TF3, TF1) |
| DL_TFC11 | (TF4, TF1) |
| DL_TFC12 | (TF5, TF1) |
| DL_TFC13 | (TF6, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 760 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.31.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF3 (7x144).
   - for sub-test 4 to 6: RB5/TF4 (10x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 128 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 512 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4 to 6: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.2.2.32 Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.2.2.32.1 Interactive or background / UL:64 DL:384 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1

#### 18.2.2.32.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.32.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.32 for the uplink payload 320, the downlink 10 ms TTI, and physical configuration 1 case.

#### 18.2.2.32.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | Physical Configuration 1 |
|---|---|---|
| DPCH Uplink | Midamble | 512 chips |
| | Codes and time slots | SF16 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 1148 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 (alt. 0.44) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Physical channel parameters

| DPCH Downlink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 8 codes x 3 time slots |
| | Max. Number of data bits/radio frame | 6608 bits |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

#### 18.2.2.32.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4 and 5: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 and 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 640 lsb's of the DL RLC SDU sent by the SS.

### 18.2.2.32.2 Interactive or background / UL:64 DL:384 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2

#### 18.2.2.32.2.1 Conformance requirement

See 18.2.2.4.1.

18.2.2.32.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.32 for the uplink payload 128, the downlink 20 ms TTI, and physical configuration 2 case.

18.2.2.32.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF2 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 2784 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Physical channel parameters

| DPCH Downlink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 6 codes x 4 time slots + SF16 x 4 codes x 1 time slot (alt. SF1 x 1 code x 3 time slots) |
| | Max. Number of data bits/radio frame | 7712 bits (alt. 13232 bits) |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.60 (alt. 1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 760 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC9, , UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.32.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF3 (7x144).
   - for sub-test 4 to 8: RB5/TF4 (10x144).
3. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 128 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 512 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 4 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.2.2.33 Interactive or background / UL:128 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.2.2.33.1 Interactive or background / UL:128 DL:384 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1

#### 18.2.2.33.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.33.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.33 for the uplink payload 320, the downlink 10 ms TTI, and physical configuration 1 case.

#### 18.2.2.33.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 1 |
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 1 timeslot |
| | Max. Number of data bits/radio frame | 2064 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.44 (alt. 0.40) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Physical channel parameters

| DPCH Downlink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 8 codes x 3 time slots |
| | Max. Number of data bits/radio frame | 6608 bits |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 3832 | RB5: 3832 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE2 : See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.1 for test procedure.

#### 18.2.2.33.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4 and 5: RB5/TF4 (8x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.2.2.33.2 Interactive or background / UL:128 DL:384 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2

#### 18.2.2.33.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.33.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.33 for the uplink payload 128, the downlink 20 ms TTI, and physical configuration 2 case.

18.2.2.33.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 7x144 | N/A |
| | TF3, bits | 14x144 | N/A |
| | TF4, bits | 20x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 2 timeslots + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 5376 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 6 codes x 4 time slots + SF16 x 4 codes x 1 time slot (alt. SF1 x 1 code x 3 time slots) |
| | Max. Number of data bits/radio frame | 7712 bits (alt. 13232 bits) |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.60 (alt. 1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 888 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5, | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.1 for test procedure.

### 18.2.2.33.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (7x144).
   - for sub-test 3: RB5/TF3 (14x144).

- for sub-test 4 to 8: RB5/TF4 (20x144).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.

   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 256 lsb's of the DL RLC SDU sent by the SS.

   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 512 lsb's of the DL RLC SDU sent by the SS.

   - for sub-test 4, 6, and 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

   - for sub-test 5: an RLC SDU on RB5 having the same content as 1 times plus 1280 lsb's of the DL RLC SDU sent by the SS.

   - for sub-test 7: an RLC SDU on RB5 having the same content as 1 times plus 1280 lsb's of the DL RLC SDU sent by the SS.

## 18.2.2.34 Interactive or background / UL:384 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.2.34.1 Interactive or background / UL:384 DL:384 kbps / PS RAB / 10 ms TTI, Physical Configuration 1

#### 18.2.2.34.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.34.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.34 for the 10 ms TTI, physical configuration 1 case.

#### 18.2.2.34.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 1 |
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 3 time slots |
| | Max. Number of data bits/radio frame | 6480 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 |

Downlink TFS:

| | **TFI** | **RB5 (384 kbps, 10ms)** | **DCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| **TFCI** | **(RB5, DCCH)** |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 1 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 8 codes x 3 time slots |
| | Max. Number of data bits/radio frame | 6608 bits |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 3832 | RB5: 3832 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.2.34.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
   - for sub-test 5: RB5/TF4 (12x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.2.2.34.2 Interactive or background / UL:384 DL:384 kbps / PS RAB / 20 ms TTI, Physical Configuration 2

#### 18.2.2.34.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.34.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.34. for the 20 ms TTI, physical configuration 2 case

18.2.2.34.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF6, TF0) |
| UL_TFC7 | (TF7, TF0) |
| UL_TFC8 | (TF8, TF0) |
| UL_TFC9 | (TF0, TF1) |
| UL_TFC10 | (TF1, TF1) |
| UL_TFC11 | (TF2, TF1) |
| UL_TFC12 | (TF3, TF1) |
| UL_TFC13 | (TF4, TF1) |
| UL_TFC14 | (TF5, TF1) |
| UL_TFC15 | (TF6, TF1) |
| UL_TFC16 | (TF7, TF1) |
| UL_TFC17 | (TF8, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 5 timeslots + SF4 x 1 code x 2 timeslots (alt. {SF2 x 1 code + SF4 x 1 code} x 4 timeslots) |
| | Max. Number of data bits/radio frame | 13104 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Physical channel parameters

| DPCH Downlink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 6 codes x 4 time slots + SF16 x 4 codes x 1 time slot (alt. SF1 x 1 code x 3 time slots) |
| | Max. Number of data bits/radio frame | 7712 bits (alt. 13232 bits) |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.60 (alt. 1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC11 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC9, UL_TFC13 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC9, UL_TFC14 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC6 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC7 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC7, UL_TFC9, UL_TFC16 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC8 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC8, UL_TFC9, UL_TFC17 | RB5: 7672 | RB5: 7672 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC9 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.1 for test procedure.

### 18.2.2.34.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
   - for sub-test 5: RB5/TF5 (12x336).

- for sub-test 6: RB5/TF6 (16x336).
- for sub-test 7: RB5/TF7 (20x336).
- for sub-test 8: RB5/TF8 (24x336).

3. At step 15 the UE shall return
   - for sub-test 1 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.2.2.35 Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.2.35.1 Interactive or background / UL:64 DL:2048 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1

#### 18.2.2.35.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.2.35.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.35 for the uplink payload 320, the downlink 10 ms TTI, and physical configuration 1 case.

#### 18.2.2.35.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 31x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF0, TF1) |
| DL_TFC12 | (TF1, TF1) |
| DL_TFC13 | (TF2, TF1) |
| DL_TFC14 | (TF3, TF1) |
| DL_TFC15 | (TF4, TF1) |
| DL_TFC16 | (TF5, TF1) |
| DL_TFC17 | (TF6, TF1) |
| DL_TFC18 | (TF7, TF1) |
| DL_TFC19 | (TF8, TF1) |
| DL_TFC20 | (TF9, TF1) |
| DL_TFC21 | (TF10, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 3 time slots |
| | Max. Number of data bits/radio frame | 6480 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1272 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.1 for test procedure.

### 18.2.2.35.1.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 to 10: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, and 4 to 10: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 320 lsb's of the DL RLC SDU sent by the SS.

## 18.2.2.35.2 Interactive or background / UL:64 DL:2048 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2

### 18.2.2.35.2.1 Conformance requirement

See 18.2.2.4.1.

### 18.2.2.35.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.1.35 for the uplink payload 128, the downlink 20 ms TTI, and physical configuration 2 case.

### 18.2.2.35.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 32x656 | N/A |
| | TF11, bits | 36x656 | N/A |
| | TF12, bits | 40x656 | N/A |
| | TF13, bits | 44x656 | N/A |
| | TF14, bits | 48x656 | N/A |
| | TF15, bits | 52x656 | N/A |
| | TF16, bits | 56x656 | N/A |
| | TF17, bits | 60x656 | N/A |
| | TF18, bits | 64x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF11, TF0) |
| DL_TFC12 | (TF12, TF0) |
| DL_TFC13 | (TF13, TF0) |
| DL_TFC14 | (TF14, TF0) |
| DL_TFC15 | (TF15, TF0) |
| DL_TFC16 | (TF16, TF0) |
| DL_TFC17 | (TF17, TF0) |
| DL_TFC18 | (TF18, TF0) |
| DL_TFC19 | (TF0, TF1) |
| DL_TFC20 | (TF1, TF1) |
| DL_TFC21 | (TF2, TF1) |
| DL_TFC22 | (TF3, TF1) |
| DL_TFC23 | (TF4, TF1) |
| DL_TFC24 | (TF5, TF1) |
| DL_TFC25 | (TF6, TF1) |
| DL_TFC26 | (TF7, TF1) |
| DL_TFC27 | (TF8, TF1) |
| DL_TFC28 | (TF9, TF1) |
| DL_TFC29 | (TF10, TF1) |
| DL_TFC30 | (TF11, TF1) |
| DL_TFC31 | (TF12, TF1) |
| DL_TFC32 | (TF13, TF1) |
| DL_TFC33 | (TF14, TF1) |
| DL_TFC34 | (TF15, TF1) |

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC35 | (TF16, TF1) |
| DL_TFC36 | (TF17, TF1) |
| DL_TFC37 | (TF18, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 13 codes x 4 time slots + SF16 x 12 codes x 7 time slot |
| | Max. Number of data bits/radio frame | 37520 bits (alt. 37504) |
| | TFCI code word | 16 bits (alt. 32 bits) |
| | Puncturing limit | 0.56 |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1536 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2688 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |
| 11 | DL_TFC11 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 23032 | RB5: 23032 |
| 12 | DL_TFC12 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 25592 | RB5: 25592 |
| 13 | DL_TFC13 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 28152 | RB5: 28152 |
| 14 | DL_TFC14 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 30712 | RB5: 30712 |
| 15 | DL_TFC15 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 33272 | RB5: 33272 |
| 16 | DL_TFC16 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 35832 | RB5: 35832 |
| 17 | DL_TFC17 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 38392 | RB5: 38392 |
| 18 | DL_TFC18 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 40952 | RB5: 40952 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.1 for test procedure.

### 18.2.2.35.2.4 Test requirements

See 18.2.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF3 (7x144).
   - for sub-test 4 to 18: RB5/TF4 (10x144).
3. At step 15 the UE shall return
   - for sub-test 1, and 4 to 18: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 264 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 136 lsb's of the DL RLC SDU sent by the SS.

### 18.2.2.36 Void

### 18.2.2.37 Void

## 18.2.3 Combinations on PDSCH, SCCPCH, PUSCH and PRACH

### 18.2.3.1 Interactive or background / UL: 64 DL: 256 kbps / PS RAB + UL: 3.4/16.8 DL: 3.4/33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.1.1 Interactive or background / UL: 64(payload 320) DL: 256 kbps (10 ms TTI) / PS RAB + UL: 3.4/16.8 DL: 3.4/33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.2.3.1.1.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.3.1.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.1. for the uplink payload of 320 bits and downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, 16.8 kbps SHCCH and the 3.4 kbps DCCH. The Interactive/Background PS RAB on the USCH has a 320 bit Payload Size.
- The RACH channel can carry combinations of the signalling Radio Bearer for 16.8 kbps CCCH, DCCH, and SHCCH excluding or including an Interactive/Background 12.8 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB, the 16 kbps SHCCH and the 3.4 kbps DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI.
- The FACH can carry combinations of the signalling Radio Bearer for 33.6 kbps CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 32 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.3.1.1.3 Method of test

The contents of the System Information Block type 5 are specified in clause 8.1.2.2 with the following modifications.

| | |
|---|---|
| - PUSCH system information | |
| - PUSCH Identity | 1 |
| - PUSCH info | |
| - TFCS ID | 1 |
| - Common timeslot info | |
| - 2nd interleaving mode | Frame |
| - TFCI coding | 16 |
| - Puncturing Limit | 0.40 |
| - Repetition period | 1 |
| - Repetition length | 1 |
| - PUSCH timeslots and codes | |
| - Dynamic SF usage | FALSE |
| - First timeslot Code List | 1 |
| - Channelisation Code | As required by individual test below |
| - CHOISE more timeslots | As required by individual test below |
| - USCH TFS | As required by individual test below |
| - USCH TFCS | As required by individual test below |

Uplink TFS for the 64 kbps USCH:

| | TFI | DTCH | SHCCH (SRB#5) | DCCH (SRB#1 – SRB#4) |
|---|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 3x337 | N/A | N/A |
| | TF4, bits | 4x337 | N/A | N/A |

Uplink TFCS for the 64 kbps USCH:

| TFCI | (DTCH, SHCCH, DCCH) |
|---|---|
| UL_USCH_TFC0 | (TF0, TF0, TF0) |
| UL_USCH_TFC1 | (TF1, TF0, TF0) |
| UL_USCH_TFC2 | (TF2, TF0, TF0) |
| UL_USCH_TFC3 | (TF3, TF0, TF0) |
| UL_USCH_TFC4 | (TF4, TF0, TF0) |
| UL_USCH_TFC5 | (TF0, TF1, TF0) |
| UL_USCH_TFC6 | (TF1, TF1, TF0) |
| UL_USCH_TFC7 | (TF2, TF1, TF0) |
| UL_USCH_TFC8 | (TF3, TF1, TF0) |
| UL_USCH_TFC9 | (TF4, TF1, TF0) |
| UL_USCH_TFC10 | (TF0, TF0, TF1) |
| UL_USCH_TFC11 | (TF1, TF0, TF1) |
| UL_USCH_TFC12 | (TF2, TF0, TF1) |
| UL_USCH_TFC13 | (TF3, TF0, TF1) |
| UL_USCH_TFC14 | (TF4, TF0, TF1) |
| UL_USCH_TFC15 | (TF0, TF1, TF1) |
| UL_USCH_TFC16 | (TF1, TF1, TF1) |
| UL_USCH_TFC17 | (TF2, TF1, TF1) |
| UL_USCH_TFC18 | (TF3, TF1, TF1) |
| UL_USCH_TFC19 | (TF4, TF1, TF1) |

Uplink TFS for the RACH without DTCH:

| | TFI | CCCH (SRB#0) | DCCH (SRB#1 – SRB#5) | SHCCH (SRB#5) |
|---|---|---|---|---|
| TFS | TF0, bits | 1x170 | 1x170 | 1x170 |

Uplink TFCS for the RACH without DTCH:

| TFCI | (CCCH, DCCH, SHCCH) |
|---|---|
| UL_RACH_TFC0 | (TF0) |

Uplink TFS for the RACH with DTCH:

| | TFI | DTCH (20 ms TTI) | CCCH (SRB#0) | DCCH (SRB#1 – SRB#4) | SHCCH (SRB#5) |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x170 | 1x170 | 1x170 | 1x170 |

Uplink TFCS for the RACH with DTCH:

| TFCI | (DTCH, CCCH, DCCH, SHCCH) |
|---|---|
| UL_RACH_DTCH_ TFC0 | (TF0) |

Downlink TFS for 256 kbps DSCH:

| | TFI | DTCH(256kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 4x337 | N/A | N/A |
| | TF4, bits | 8x337 | N/A | N/A |

Downlink TFCS for the 256 kbps DSCH:

| TFCI | DTCH, SHCCH, DCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF0, TF1, TF0), |
| DL_DSCH_TFC6 | (TF1, TF1, TF0), |
| DL_DSCH_TFC7 | (TF2, TF1, TF0), |
| DL_DSCH_TFC8 | (TF3, TF1, TF0), |
| DL_DSCH_TFC9 | (TF4, TF1, TF0), |
| DL_DSCH_TFC10 | (TF0, TF0, TF1), |
| DL_DSCH_TFC11 | (TF1, TF0, TF1), |
| DL_DSCH_TFC12 | (TF2, TF0, TF1), |
| DL_DSCH_TFC13 | (TF3, TF0, TF1), |
| DL_DSCH_TFC14 | (TF4, TF0, TF1), |
| DL_DSCH_TFC15 | (TF0, TF1, TF1), |
| DL_DSCH_TFC16 | (TF1, TF1, TF1), |
| DL_DSCH_TFC17 | (TF2, TF1, TF1), |
| DL_DSCH_TFC18 | (TF3, TF1, TF1), |
| DL_DSCH_TFC19 | (TF4, TF1, TF1) |

Downlink TFS for FACH without DTCH:

| | TFI | CCCH/DCCH/SHCCH/BCCH |
|---|---|---|
| TFS | TF0, bits | 0x171 |
| | TF1, bits | 1x171 |
| | TF2, bits | 2x171 |
| | TF3, bits | 3x171 |
| | TF4 ,bits | 4x171 |

Downlink TFCS for FACH without DTCH:

| TFCI | CCCH/DCCH/SHCCH/BCCH |
|---|---|
| DL_FACH_TFC0 | TF0 |
| DL_ FACH_TFC1 | TF1 |
| DL_ FACH_TFC2 | TF2 |
| DL_ FACH_TFC3 | TF3 |
| DL_ FACH_TFC4 | TF4 |

Downlink TFS for FACH with DTCH:

| | TFI | DTCH/CCCH/DCCH/SHCCH/BCCH |
|---|---|---|
| TFS | TF0, bits | 0x171 |
| | TF1, bits | 1x171 |
| | TF2, bits | 2x171 |
| | TF3, bits | 1x363 |
| | TF4 ,bits | 3x171 |
| | TF5, bits | 4x171 |
| | TF6, bits | 2x363 |

Downlink TFCS for FACH with DTCH:

| TFCI | DTCH/CCCH/DCCH/SHCCH/BCCH |
|---|---|
| DL_ FACH_TFC0_DTCH | TF0 |
| DL_ FACH_TFC1_DTCH | TF1 |
| DL_ FACH_TFC2_DTCH | TF2 |
| DL_ FACH_TFC3_DTCH | TF3 |
| DL_ FACH_TFC4_DTCH | TF4 |
| DL_ FACH_TFC5_DTCH | TF5 |
| DL_ FACH_TFC6_DTCH | TF6 |

Sub-tests for RACH/FACH:

See Section 18.2.6.1

Sub-tests – USCH & DSCH:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 312 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 632 | DTCH: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1912 | DTCH: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 | DTCH: 2552 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC11, and UL_TFC15 are part of the minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.3.1.1.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (3x337).
   - for sub-test 4: DTCH/TF4 (4x337).
4. At step 15 the UE shall return
   - for sub-test 1, 2, and 4: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on DTCH having the first 1272 bits equal to the content as the DL RLC SDU sent by the SS in the downlink.

#### 18.2.3.1.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.2.3.1.2.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.3.1.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.1 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 256 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.3.1.2.3 Method of test

Uplink TFS for the 64 kbps USCH – 145 bit TBS & 20 ms TTI:

| | TFI | DTCH | SHCCH (SRB#5) | DCCH (SRB#1 – SRB#4) |
|---|---|---|---|---|
| TFS | TF0, bits | 0x145 | 0x169 | 0x149 |
| | TF1, bits | 1x145 | 1x169 | 1x149 |
| | TF2, bits | 3x145 | N/A | N/A |
| | TF3, bits | 7x145 | N/A | N/A |
| | TF4, bits | 10x145 | N/A | N/A |

Uplink TFCS for the 64 kbps USCH – 145 bit TBS & 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for 256 kbps DSCH – 10 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for 256 kbps DSCH - 10 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.2.6.1

Sub-tests – USCH (337 bit TBS & 20 ms TTI) & DSCH (337 bit TBS & 10 ms TTI):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 376 (128x1)x3 - 8 | DTCH: 312 (320 x 1) - 8 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15, | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 760 (128x3)x2 - 8 | DTCH: 632 (320 x 2) - 8 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15, | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1784 (7x128) x 2 - 8 | DTCH: 1272 (4 x 320) - 8 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 (10x128) x 2 - 8 | DTCH: 2552 (8 x 320) - 8 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.3 for test procedure.

#### 18.2.3.1.2.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH/TF2 (3x145).
   - for sub-test 3: DTCH/TF3 (7x145).
   - for sub-test 4: DTCH/TF4 (10x145).
4. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on DTCH having the first 312 bits equal to the content of the DL RLC SDU sent by the SS.
- for sub-test 2: an RLC SDU on DTCH having the first 632 bits equal to the content of the DL RLC SDU sent by the SS.
- for sub-test 3: an RLC SDU on DTCH having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS.
- for sub-test 4: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS

#### 18.2.3.1.3 Interactive or background / UL: 64(337 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.2.3.1.3.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.3.1.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.1 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the 256 kbps Interactive/Background PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 256 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.3.1.3.3 Method of test

Uplink TFS for the 64 kbps USCH – 337 bit TBS & 20 ms TTI:

See corresponding table in Section 18.2.3.1.1.3

Uplink TFS for the 64 kbps USCH – 337 bit TBS & 20 ms TTI:

See corresponding table in Section 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in Section 18.2.3.1.1.3

Uplink TFCS for the RACH without DTCH:

See corresponding table in Section 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in Section 18.2.3.1.1.3

Uplink TFCS for the RACH with DTCH:

See corresponding table in Section 18.2.3.1.1.3

Downlink TFS for 256 kbps DSCH – 337 bit TBS & 20 ms TTI:

| | TFI | DTCH(256kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 4x337 | N/A | N/A |
| | TF4, bits | 8x337 | N/A | N/A |
| | TF5, bits | 12x337 | N/A | N/A |
| | TF6, bits | 16x337 | N/A | N/A |

Downlink TFS for 256 kbps DSCH – 337 bit TBS & 20 ms TTI:

| TFCI | DTCH, SHCCH, DCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0, TF0), |
| DL_DSCH_TFC7 | (TF0, TF1, TF0), |
| DL_DSCH_TFC8 | (TF1, TF1, TF0), |
| DL_DSCH_TFC9 | (TF2, TF1, TF0), |
| DL_DSCH_TFC10 | (TF3, TF1, TF0), |
| DL_DSCH_TFC11 | (TF4, TF1, TF0), |
| DL_DSCH_TFC12 | (TF5, TF1, TF0), |
| DL_DSCH_TFC13 | (TF6, TF1, TF0), |
| DL_DSCH_TFC14 | (TF0, TF0, TF1), |
| DL_DSCH_TFC15 | (TF1, TF0, TF1), |
| DL_DSCH_TFC16 | (TF2, TF0, TF1), |
| DL_DSCH_TFC17 | (TF3, TF0, TF1), |
| DL_DSCH_TFC18 | (TF4, TF0, TF1), |
| DL_DSCH_TFC19 | (TF5, TF0, TF1), |
| DL_DSCH_TFC20 | (TF6, TF0, TF1), |
| DL_DSCH_TFC21 | (TF0, TF1, TF1), |
| DL_DSCH_TFC22 | (TF1, TF1, TF1), |
| DL_DSCH_TFC23 | (TF2, TF1, TF1), |
| DL_DSCH_TFC24 | (TF3, TF1, TF1), |
| DL_DSCH_TFC25 | (TF4, TF1, TF1), |
| DL_DSCH_TFC26 | (TF5, TF1, TF1), |
| DL_DSCH_TFC27 | (TF6, TF1, TF1) |

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in Section 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in Section 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in Section 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in Section 18.2.3.1.1.3

Sub-tests for RACH/FACH – 20 ms TTI:

See Section 18.2.6.1

Sub-tests for DSCH/USCH – 20 ms TTI & UL TBS (337 bit) and DL TBS (337 bit):

Sub-tests – USCH (337 bit TBS & 20 ms TTI) & DSCH (337 bit TBS & 20 ms TTI):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 312 (1 x 320) - 8 | DTCH: 312 (1 x 320) - 8 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 632 (2 x 320) - 8 | DTCH: 632 (1 x 320) - 8 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1912 (3 x 320) - 8 | DTCH: 1272 (4 x 320) - 8 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 (4 x 320) x 2 - 8 | DTCH: 2552 (8 x 320) - 8 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 3832 (4 x 320) x 3 - 8 | DTCH: 3832 (12 x 320) - 8 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (4 x 320) x 4 - 8 | DTCH: 5112 (16 x 320) - 8 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.3 for test procedure.

#### 18.2.3.2.3.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST

3. At step 15 the UE transmitted transport format shall be

   - for sub-test 1: DTCH/TF1 (1x337).

   - for sub-test 2: DTCH/TF2 (2x337).

   - for sub-test 3: DTCH/TF3 (3x337).

   - for sub-test 4, 5, and 6: DTCH/TF4 (4x337).

4. At step 15 the UE shall return

   - for sub-test 1, 2, 4, 5, and 6: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

   - for sub-test 3: an RLC SDU on DTCH having the first 1272 bits equal content as the DL RLC SDU sent by the SS.

### 18.2.3.1.4 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH 64 kbps + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.1.4.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.3.1.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.1 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.

- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the 256 kbps Interactive/Background PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).

- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 256 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.3.1.4.3 Method of test

Uplink TFS for the 64 kbps USCH – 145 bit TBS & 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the 64 kbps USCH – 145 bit TBS & 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for 256 kbps DSCH – 20 ms TTI:

See corresponding table in 18.2.3.1.3.2

Downlink TFCS for the 256 kbps DSCH – 20 ms TTI:

See corresponding table in 18.2.3.1.3.2

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.2.6.1

Sub-tests – USCH (145 bit TBS & 20 ms TTI) & DSCH (337 bit TBS & 10 ms TTI):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 376 (128 x 1)x3 - 8 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 760 (128 x 3) x 2 - 8 | DTCH: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1784 (7x128) x 2 - 8 | DTCH: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19, | DTCH: 2552 (10x128) x 2 - 8 | DTCH: 2552 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 3832 (10x128) x 3 - 8 | DTCH: 3832 (12 x 320) - 8 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (10x128) x 4 - 8 | DTCH: 5112 (16 x 320) - 8 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.3 for test procedure.

#### 18.2.3.1.4.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST.

3. At step 15 the UE transmitted transport format shall be

   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH/TF2 (3x145).
   - for sub-test 3: DTCH/TF3 (7x145).
   - for sub-test 4, 5 and 6: DTCH/TF4 (10x145).

4. At step 15 the UE shall return

   - for sub-test 4 to 6: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 1: an RLC SDU on DTCH having the first 312 bits equal content as the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on DTCH having the first 632 bits equal content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on DTCH having the first 1272 bits equal content as the DL RLC SDU sent by the SS.

### 18.2.3.2 Interactive or background / UL: 64 DL: 384 kbps / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.2.1 Interactive or background / UL: 64(337 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.2.3.2.1.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.3.2.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.2 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB, the SHCCH and the DCC. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

18.2.3.2.1.3 Method of Test

Uplink TFS for the 64 kbps USCH – 337 bit TBS & 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the 64 kbps USCH – 337 bit TBS & 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for 384 kbps DSCH – 337 bit TBS & 10 ms TTI:

| | TFI | DTCH(384 kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 4x337 | N/A | N/A |
| | TF4, bits | 8x337 | N/A | N/A |
| | TF5, bits | 12x337 | N/A | N/A |

Downlink TFS for 384 kbps DSCH – 337 bit TBS & 10 ms TTI:

| TFCI | DTCH,SHCCH,DCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0, TF0), |
| DL_DSCH_TFC6 | (TF0, TF1, TF0), |
| DL_DSCH_TFC7 | (TF1, TF1, TF0), |
| DL_DSCH_TFC8 | (TF2, TF1, TF0), |
| DL_DSCH_TFC9 | (TF3, TF1, TF0), |
| DL_DSCH_TFC10 | (TF4, TF1, TF0), |
| DL_DSCH_TFC11 | (TF5, TF1, TF0), |
| DL_DSCH_TFC12 | (TF0, TF0, TF1), |
| DL_DSCH_TFC13 | (TF1, TF0, TF1), |
| DL_DSCH_TFC14 | (TF2, TF0, TF1), |
| DL_DSCH_TFC15 | (TF3, TF0, TF1), |
| DL_DSCH_TFC16 | (TF4, TF0, TF1), |
| DL_DSCH_TFC17 | (TF5, TF0, TF1), |
| DL_DSCH_TFC18 | (TF0, TF1, TF1), |
| DL_DSCH_TFC19 | (TF1, TF1, TF1), |
| DL_DSCH_TFC20 | (TF2, TF1, TF1), |
| DL_DSCH_TFC21 | (TF3, TF1, TF1), |
| DL_DSCH_TFC22 | (TF4, TF1, TF1) |
| DL_DSCH_TFC23 | (TF5, TF1, TF1) |

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-tests for RACH/FACH – 20 ms TTI:

See Section 18.2.6.1

Sub-tests – USCH (337 bit TBS & 20 ms TTI) & DSCH (337 bit TBS & 10 ms TTI):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 312 (1x320)x1 - 8 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15, | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 632 (2x320)x1 - 8 | DTCH: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1912 (3 x 320) x 2 - 8 | DTCH: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 (4 x 320) x 2 - 8 | DTCH: 2552 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | RB5: 3832 (4 x 320) x 3 - 8 | RB5: 3832 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. .
RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.3 for test procedure.

#### 18.2.3.2.1.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH /TF2 (2x337).
   - for sub-test 3: DTCH /TF3 (3x337).
   - for sub-test 4 and 5: DTCH /TF4 (4x337)
4. At step 15 the UE shall return
   - for sub-test 1, 2, 4, 5: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS

### 18.2.3.2.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 384 kbps / PS RAB/10 ms TTI/145 bits TBS (337 bit TBS – 10 ms TTI) + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.2.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.3.2.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.2 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH, and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.3.2.2.3 Method of test

Uplink TFS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.2.3.1.1.3

U plink TFCS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for the 384 kbps DSCH – 10 ms TTI:

See corresponding table in 18.2.3.2.1.3

Downlink TFCS for the 384 kbps DSCH - 10 ms TTI:

See corresponding table in 18.2.3.2.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-tests for RACH/FACH – 20 ms TTI:

See Section 18.2.6.1

Sub-tests for USCH/DSCH – 10 ms TTI & UL 145 bit TBS and DL 337 bit TBS:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 376 (1x128)x3 - 8 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 760 (3x128)x2 - 8 | DTCH: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1784 (7x128)x2 - 8 | DTCH: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 (10x128)x2 - 8 | DTCH: 2552 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | RB5: 3832 (3x128)x10 - 8 | RB5: 3832 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. .
RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.3 for test procedure.

#### 18.2.3.2.2.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH /TF2 (3x145).
   - for sub-test 3: DTCH /TF3 (7x145).
   - for sub-test 4: RB5/TF4 (10x145)

4. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the first 312 bits equal to the content of the DL RLC SDU sent by the SS
   - for sub-test 2: an RLC SDU on RB5 having the first 632 bits equal to the content of the DL RLC SDU sent by the SS
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS
   - for sub-tests 4, 5: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

#### 18.2.3.2.3 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.2.3.2.3.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.3.2.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.2 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.3.2.3.3 Method of Test

See 18.2.1.3 for test procedure

Uplink TFS for the 64 kbps USCH – Transport Block Size 337 bits:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the 64 kbps USCH – Transport Block Size 337 bits:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for the 384 kbps DSCH – 20 ms TTI:

| | TFI | DTCH(384 kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 4x337 | N/A | N/A |
| | TF4, bits | 8x337 | N/A | N/A |
| | TF5, bits | 12x337 | N/A | N/A |
| | TF6, bits | 16x337 | N/A | N/A |
| | TF7, bits | 20x337 | N/A | N/A |
| | TF8, bits | 24x337 | N/A | N/A |

Downlink TFCS for the 384 kbps DSCH - 20 ms TTI:

| TFCI | DTCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0, TF0), |
| DL_DSCH_TFC7 | (TF7, TF0, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0, TF0), |
| DL_DSCH_TFC9 | (TF0, TF1, TF0), |
| DL_DSCH_TFC10 | (TF1, TF1, TF0), |
| DL_DSCH_TFC11 | (TF2, TF1, TF0), |
| DL_DSCH_TFC12 | (TF3, TF1, TF0), |
| DL_DSCH_TFC13 | (TF4, TF1, TF0), |
| DL_DSCH_TFC14 | (TF5, TF1, TF0), |
| DL_DSCH_TFC15 | (TF6, TF1, TF0), |
| DL_DSCH_TFC16 | (TF7, TF1, TF0), |
| DL_DSCH_TFC17 | (TF8, TF1, TF0), |
| DL_DSCH_TFC18 | (TF0, TF0, TF1), |
| DL_DSCH_TFC19 | (TF1, TF0, TF1), |
| DL_DSCH_TFC20 | (TF2, TF0, TF1), |
| DL_DSCH_TFC21 | (TF3, TF0, TF1), |
| DL_DSCH_TFC22 | (TF4, TF0, TF1), |
| DL_DSCH_TFC23 | (TF5, TF0, TF1), |
| DL_DSCH_TFC24 | (TF6, TF0, TF1), |
| DL_DSCH_TFC25 | (TF7, TF0, TF1), |
| DL_DSCH_TFC26 | (TF8, TF0, TF1), |
| DL_DSCH_TFC27 | (TF0, TF1, TF1), |
| DL_DSCH_TFC28 | (TF1, TF1, TF1), |
| DL_DSCH_TFC29 | (TF2, TF1, TF1), |
| DL_DSCH_TFC30 | (TF3, TF1, TF1), |
| DL_DSCH_TFC31 | (TF4, TF1, TF1), |
| DL_DSCH_TFC32 | (TF5, TF1, TF1), |
| DL_DSCH_TFC33 | (TF6, TF1, TF1) |
| DL_DSCH_TFC34 | (TF7, TF1, TF1) |
| DL_DSCH_TFC35 | (TF8, TF1, TF1) |

Downlink TFS for FACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-tests for RACH/FACH – 20 ms TTI:

See Section 18.2.6.1

Sub-tests for DSCH/USCH – 20 ms TTI & UL TBS (337 bit) and DL TBS (337 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6 UL_USCH_TFC10 UL_USCH_TFC11 UL_USCH_TFC15 UL_USCH_TFC16 | DTCH: 312 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7 UL_USCH_TFC10 UL_USCH_TFC12 UL_USCH_TFC15 UL_USCH_TFC17 | RB5: 632 | RB5: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8 UL_USCH_TFC10 UL_USCH_TFC13 UL_USCH_TFC15 UL_USCH_TFC18 | RB5: 1912 (3x320) x 2 - 8 | RB5: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9 UL_USCH_TFC10 UL_USCH_TFC14 UL_USCH_TFC15 UL_USCH_TFC19 | RB5: 2552 | RB5: 2552 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9 UL_USCH_TFC10 UL_USCH_TFC14 UL_USCH_TFC15 UL_USCH_TFC19 | RB5: 3832 | RB5: 3832 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9 UL_USCH_TFC10 UL_USCH_TFC14 UL_USCH_TFC15 UL_USCH_TFC19 | RB5: 5112 | RB5: 5112 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC9, DL_DSCH_TFC18, DL_DSCH_TFC27, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | RB5: 6392 | RB5: 6392 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | RB5: 6392 | RB5: 6392 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. .<br>RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.3.2.1.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH /TF2 (2x337).
   - for sub-test 3: DTCH /TF3 (3x337).
   - for sub-test 4, 5, 6, 7, and 8: DTCH /TF4 (4x337)
4. At step 15 the UE shall return
   - for sub-test 1, 2, 4, 5, 7 and 8: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS

### 18.2.3.2.4 Interactive or background / UL: 64 (145 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 20 ms TTI) / PS RAB+ UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.2.4.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.3.2.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.1 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.

- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the 384 kbps Interactive/Background PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).

- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.3.2.4.3 Method of test

Uplink TFCS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for the 384 kbps DSCH – 20 ms TTI:

See corresponding table in 18.2.3.1.3.2

Downlink TFCS for the 384 kbps DSCH - 20 ms TTI:

See corresponding table in 18.2.3.1.3.2

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.2.6.1

Sub-tests for DSCH/USCH – 20 ms TTI & UL TBS (145 bit) and DL TBS (337 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 376 (1x128)x3 - 8 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 760 (3x128)x2 - 8 | DTCH: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1784 (7x128)x2 - 8 | DTCH: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 (10x128)x2 - 8 | DTCH: 2552 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 3832 (10x128)x3 - 8 | DTCH: 3832 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (10x128)x4 - 8 | DTCH: 5112 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 6392 (10x128)x5 - 8 | DTCH: 6392 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 8 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 7672 (10x128)x6 - 8 | DTCH: 7672 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.3.2.4.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH/TF2 (3x145).
   - for sub-test 3: DTCH/TF3 (7x145).
   - for sub-test 4, 5, 6, 7, and 8: DTCH/TF4 (10x145).
4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on DTCH having the first 312 bits equal content as the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on DTCH having the first 632 bits equal content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on DTCH having the first 1272 bits equal content as the DL RLC SDU sent by the SS.
   - for sub-test 4,5,6,7 and 8: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

### 18.2.3.3 Interactive or background / UL: 64 DL: 2048 kbps/ PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.3.1 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.2.3.3.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.3.3.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.3 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 2048 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 2048 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.3.3.1.3 Method of test

Uplink TFS for the 64 kbps USCH – Transport Block Size 337 bits:

- See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the 64 kbps USCH – Transport Block Size 337 bits:

- See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

- See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

- See corresponding table in 18.2.3.1.1.3

Downlink TFS for 2048 kbps DSCH – 10 ms TTI:

| | **TFI** | **DTCH(2048 kbps)** | **SHCCH SRB#5** | **DCCH SRB#1-#4** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x657 | 0x169 | 0x149 |
| | TF1, bits | 1x657 | 1x169 | 1x149 |
| | TF2, bits | 2x657 | N/A | N/A |
| | TF3, bits | 4x657 | N/A | N/A |
| | TF4, bits | 8x657 | N/A | N/A |
| | TF5, bits | 12x657 | N/A | N/A |
| | TF6, bits | 16x657 | N/A | N/A |
| | TF7, bits | 20x657 | N/A | N/A |
| | TF8, bits | 24x657 | N/A | N/A |
| | TF9, bits | 28x657 | N/A | N/A |
| | TF10, bits | 30x657 | N/A | N/A |

Downlink TFCS for 2048 kbps DSCH - 10 ms TTI:

| TFCI | DTCH,SHCCH,DCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0, TF0), |
| DL_DSCH_TFC7 | (TF7, TF0, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0, TF0), |
| DL_DSCH_TFC9 | (TF9, TF0, TF0), |
| DL_DSCH_TFC10 | (TF10, TF0, TF0), |
| DL_DSCH_TFC11 | (TF0, TF1, TF0), |
| DL_DSCH_TFC12 | (TF1, TF1, TF0), |
| DL_DSCH_TFC13 | (TF2, TF1, TF0), |
| DL_DSCH_TFC14 | (TF3, TF1, TF0), |
| DL_DSCH_TFC15 | (TF4, TF1, TF0), |
| DL_DSCH_TFC16 | (TF5, TF1, TF0), |
| DL_DSCH_TFC17 | (TF6, TF1, TF0), |
| DL_DSCH_TFC18 | (TF7, TF1, TF0), |
| DL_DSCH_TFC19 | (TF8, TF1, TF0), |
| DL_DSCH_TFC20 | (TF9, TF1, TF0), |
| DL_DSCH_TFC21 | (TF0, TF0, TF1), |
| DL_DSCH_TFC22 | (TF1, TF0, TF1), |
| DL_DSCH_TFC23 | (TF2, TF0, TF1), |
| DL_DSCH_TFC24 | (TF3, TF0, TF1), |
| DL_DSCH_TFC25 | (TF4, TF0, TF1), |
| DL_DSCH_TFC26 | (TF5, TF0, TF1), |
| DL_DSCH_TFC27 | (TF6, TF0, TF1), |
| DL_DSCH_TFC28 | (TF7, TF0, TF1), |
| DL_DSCH_TFC29 | (TF8, TF0, TF1), |
| DL_DSCH_TFC30 | (TF9, TF0, TF1), |
| DL_DSCH_TFC31 | (TF0, TF1, TF1), |
| DL_DSCH_TFC32 | (TF1, TF1, TF1), |
| DL_DSCH_TFC33 | (TF2, TF1, TF1), |
| DL_DSCH_TFC34 | (TF3, TF1, TF1), |
| DL_DSCH_TFC35 | (TF4, TF1, TF1), |
| DL_DSCH_TFC36 | (TF5, TF1, TF1), |
| DL_DSCH_TFC37 | (TF6, TF1, TF1), |
| DL_DSCH_TFC38 | (TF7, TF1, TF1), |
| DL_DSCH_TFC39 | (TF8, TF1, TF1), |
| DL_DSCH_TFC40 | (TF9, TF1, TF1), |

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.2.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL TBS (337 bit) and DL TBS (657 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 632 (320 x1 ) x 2 - 8 | RB5: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 1272 (320 x2 ) x2 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 2872 (320 x3 ) x3 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (320 x4 ) x4 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 7672 (320 x4 ) x6 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 10232 (320 x4 ) x8 - 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, | DTCH: 12792 (320 x4 ) x10 - 8 | DTCH: 12792 |

| | | | | | | |
|---|---|---|---|---|---|---|
| | | | | UL_USCH_TFC19 | | |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 15352 (320 x4 ) x12 - 8 | DTCH: 15352 |
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 17912 (320 x4 ) x14 - 8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 20472 (320 x4 ) x16 - 8 | DTCH: 20472 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.3.3.1.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (3x337).
   - for sub-test 4 to 10: DTCH/TF4 (4x337)
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 to 10: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on DTCH having the first 2552 bits equal to the content of the DL RLC SDU sent by the SS.

### 18.2.3.3.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.3.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.3.3.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.2 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.3.2.3.3 Method of test

Uplink TFS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.2.3.1.1.3

U plink TFCS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for DSCH – 10 ms TTI:

See corresponding table in 18.2.3.3.1.3

Downlink TFCS for DSCH - 10 ms TTI:

See corresponding table in 18.2.3.3.1.3

Downlink TFS for FACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-tests for RACH/FACH – 20 ms TTI:

See Section 18.2.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL TBS (145 bit) and DL TBS (657 bit):

| Sub - test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 632 (128 x1 ) x5 - 8 | RB5: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 1528 (128 x3 ) x4 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18, | DTCH: 2680 (128 x7 ) x3 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (128 x10 ) x4 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_SCH_TFC19 | DTCH: 7672 (128 x10 ) x6- 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 10232 (128 x10 ) x8- 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 12792 (128 x10)x10- 8 | DTCH: 12792 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 15352 (128 x10)x12-8 | DTCH: 15352 |
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 17912 (128 x10)x14-8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 20472 (128 x10)x16-8 | DTCH: 20472 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.3.2.3.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH /TF2 (3x145).
   - for sub-test 3: DTCH /TF3 (7x145).
   - for sub-test 4 to 10: DTCH /TF4 (10x145)
4. At step 15 the UE shall return
   - for sub-test 1, 4, 5, 6, 7, 8, 9, and 10: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS
   - for sub-test 3: an RLC SDU on RB5 having the first 2552 bits equal to the content of the DL RLC SDU sent by the SS

### 18.2.3.3.3 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB+ UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.3.3.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.3.3.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.3 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 2048 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 2048 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.3.3.3.3 Method of test

Uplink TFS for the USCH – Transport Block Size 337 bits:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the USCH – Transport Block Size 337 bits:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for 2048 kbps DSCH – 20 ms TTI:

| | TFI | DTCH(2048 kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| TFS | TF0, bits | 0x657 | 0x169 | 0x149 |
| | TF1, bits | 1x657 | 1x169 | 1x149 |
| | TF2, bits | 2x657 | N/A | N/A |
| | TF3, bits | 4x657 | N/A | N/A |
| | TF4, bits | 8x657 | N/A | N/A |
| | TF5, bits | 12x657 | N/A | N/A |
| | TF6, bits | 16x657 | N/A | N/A |
| | TF7, bits | 20x657 | N/A | N/A |
| | TF8, bits | 24x657 | N/A | N/A |
| | TF9, bits | 28x657 | N/A | N/A |
| | TF10, bits | 32x657 | N/A | N/A |
| | TF11, bits | 36x657 | N/A | N/A |
| | TF12, bits | 40x657 | N/A | N/A |
| | TF13, bits | 44x657 | N/A | N/A |
| | TF14, bits | 48x657 | N/A | N/A |
| | TF15, bits | 52x657 | N/A | N/A |
| | TF16, bits | 56x657 | N/A | N/A |
| | TF17, bits | 60x657 | N/A | N/A |
| | TF18, bits | 64x657 | N/A | N/A |

Downlink TFCS for 2048 kbps DSCH - 20 ms TTI:

| TFCI | DTCH,SHCCH,DCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0, TF0), |
| DL_DSCH_TFC7 | (TF7, TF0, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0, TF0), |
| DL_DSCH_TFC9 | (TF9, TF0, TF0), |
| DL_DSCH_TFC10 | (TF10, TF0, TF0), |
| DL_DSCH_TFC11 | (TF11, TF0, TF0), |
| DL_DSCH_TFC12 | (TF12, TF0, TF0), |
| DL_DSCH_TFC13 | (TF13, TF0, TF0), |
| DL_DSCH_TFC14 | (TF14, TF0, TF0), |
| DL_DSCH_TFC15 | (TF15, TF0, TF0), |
| DL_DSCH_TFC16 | (TF16, TF0, TF0), |
| DL_DSCH_TFC17 | (TF17, TF0, TF0), |
| DL_DSCH_TFC18 | (TF18, TF0, TF0), |
| DL_DSCH_TFC19 | (TF0, TF1, TF0), |
| DL_DSCH_TFC20 | (TF1, TF1, TF0), |
| DL_DSCH_TFC21 | (TF2, TF1, TF0), |
| DL_DSCH_TFC22 | (TF3, TF1, TF0), |
| DL_DSCH_TFC23 | (TF4, TF1, TF0), |
| DL_DSCH_TFC24 | (TF5, TF1, TF0), |
| DL_DSCH_TFC25 | (TF6, TF1, TF0), |
| DL_DSCH_TFC26 | (TF7, TF1, TF0), |
| DL_DSCH_TFC27 | (TF8, TF1, TF0), |
| DL_DSCH_TFC28 | (TF9, TF1, TF0), |
| DL_DSCH_TFC29 | (TF10, TF1, TF0), |
| DL_DSCH_TFC30 | (TF11, TF1, TF0), |
| DL_DSCH_TFC31 | (TF12, TF1, TF0), |
| DL_DSCH_TFC32 | (TF13, TF1, TF0), |
| DL_DSCH_TFC33 | (TF14, TF1, TF0), |
| DL_DSCH_TFC34 | (TF15, TF1, TF0), |
| DL_DSCH_TFC35 | (TF16, TF1, TF0), |
| DL_DSCH_TFC36 | (TF17, TF1, TF0), |
| DL_DSCH_TFC37 | (TF18, TF1, TF0), |
| DL_DSCH_TFC38 | (TF0, TF0, TF1), |
| DL_DSCH_TFC39 | (TF1, TF0, TF1), |
| DL_DSCH_TFC40 | (TF2, TF0, TF1), |
| DL_DSCH_TFC41 | (TF3, TF0, TF1), |
| DL_DSCH_TFC42 | (TF4, TF0, TF1), |
| DL_DSCH_TFC43 | (TF5, TF0, TF1), |
| DL_DSCH_TFC44 | (TF6, TF0, TF1), |
| DL_DSCH_TFC45 | (TF7, TF0, TF1), |
| DL_DSCH_TFC46 | (TF8, TF0, TF1), |
| DL_DSCH_TFC47 | (TF9, TF0, TF1), |
| DL_DSCH_TFC48 | (TF10, TF0, TF1), |
| DL_DSCH_TFC49 | (TF11, TF0, TF1), |
| DL_DSCH_TFC50 | (TF12, TF0, TF1), |
| DL_DSCH_TFC51 | (TF13, TF0, TF1), |
| DL_DSCH_TFC52 | (TF14, TF0, TF1), |
| DL_DSCH_TFC53 | (TF15, TF0, TF1), |
| DL_DSCH_TFC54 | (TF16, TF0, TF1), |
| DL_DSCH_TFC55 | (TF17, TF0, TF1), |
| DL_DSCH_TFC56 | (TF18, TF0, TF1), |
| DL_DSCH_TFC57 | (TF0, TF1, TF1), |
| DL_DSCH_TFC58 | (TF1, TF1, TF1), |
| DL_DSCH_TFC59 | (TF2, TF1, TF1), |
| DL_DSCH_TFC61 | (TF3, TF1, TF1), |

| | |
|---|---|
| DL_DSCH_TFC62 | (TF4, TF1, TF1), |
| DL_DSCH_TFC63 | (TF5, TF1, TF1), |
| DL_DSCH_TFC64 | (TF6, TF1, TF1), |
| DL_DSCH_TFC65 | (TF7, TF1, TF1), |
| DL_DSCH_TFC66 | (TF8, TF1, TF1), |
| DL_DSCH_TFC67 | (TF9, TF1, TF1), |
| DL_DSCH_TFC68 | (TF10, TF1, TF1), |
| DL_DSCH_TFC69 | (TF11, TF1, TF1), |
| DL_DSCH_TFC70 | (TF12, TF1, TF1), |
| DL_DSCH_TFC71 | (TF13, TF1, TF1), |
| DL_DSCH_TFC72 | (TF14, TF1, TF1), |
| DL_DSCH_TFC73 | (TF16, TF1, TF1), |
| DL_DSCH_TFC74 | (TF17, TF1, TF1), |
| DL_DSCH_TFC75 | (TF18, TF1, TF1), |

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.2.6.1

Sub-tests for DSCH/USCH – 20 ms TTI & UL TBS (337 bit) and DL TBS (657 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 632 (320 x1 ) x2 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 1272 (320 x2 ) x2 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 2872 (320 x3 ) x3 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (320 x4 ) x4 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 7672 (320 x4 ) x6 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 10232 (320 x4 ) x8 - 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 12792 (320 x4 ) x10 - 8 | DTCH: 12792 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 15352 (320 x4 ) x12 - 8 | DTCH: 15352 |
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 17912 (320 x4 ) x14 - 8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 20472 (320 x4 ) x16 - 8 | DTCH: 20472 |
| 11 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 23032 (320 x4 ) x18 - 8 | DTCH: 23032 |
| 12 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 25592 (320 x4 ) x20 - 8 | DTCH: 25592 |
| 13 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 28152 (320 x4 ) x22 - 8 | DTCH: 28152 |
| 14 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 30712 (320 x4 ) x24 - 8 | DTCH: 30712 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 15 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 33272 (320 x4 ) x26 - 8 | DTCH: 33272 |
| 16 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 35832 (320 x4 ) x28 - 8 | DTCH: 35832 |
| 17 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 38392 (320 x4 ) x30 - 8 | DTCH: 38392 |
| 18 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 40952 (320 x4 ) x32 - 8 | DTCH: 40952 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs

NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.3 for test procedure.

#### 18.2.3.3.3.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (3x337).
   - for sub-tests 4 to 18: DTCH/TF4 (4x337).
3. At step 15 the UE shall return

- for sub-test 1 to 18: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

#### 18.2.3.3.4 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.2.3.3.4.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.3.3.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.2 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 2048 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 2048 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.3.3.4.3 Method of test

Uplink TFS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.2.3.1.1.3

Uplink TFCS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for 2048 kbps DSCH – 20 ms TTI:

See corresponding table in 18.2.3.3.3.3

Downlink TFCS for 2048 kbps DSCH – 20 ms TTI:

See corresponding table in 18.2.3.3.3.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.2.6.1

Sub-tests for DSCH/USCH – 20 ms TTI & UL TBS (145 bit) and DL TBS (657 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 632 (128 x1 ) x5 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 1528 (128 x3 ) x4 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 2680 (128 x7 ) x3 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (128 x10 ) x4 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 7672 (128 x10 ) x6-8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 10232 (128x10 ) x8 - 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 12792 (128 x10)x10-8 | DTCH: 12792 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 15352 (128 x10)x12-8 | DTCH: 15352 |
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 17912 (128 x10)x14-8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 20472 (128 x10)x16-8 | DTCH: 20472 |
| 11 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 23032 (320 x4 ) x18 - 8 | DTCH: 23032 |
| 12 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 25592 (128 x10 ) x20 - 8 | DTCH: 25592 |
| 13 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 28152 (128 x10) x22 - 8 | DTCH: 28152 |
| 14 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 30712 (128 x10) x24 - 8 | DTCH: 30712 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 15 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 33272 (128 x10) x26 - 8 | DTCH: 33272 |
| 16 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 35832 (128 x10) x28 - 8 | DTCH: 35832 |
| 17 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 38392 (128 x10) x30 - 8 | DTCH: 38392 |
| 18 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 40952 (128 x10) x32 - 8 | DTCH: 40952 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.2.1.3 for test procedure.

#### 18.2.3.3.4.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH/TF2 (3x145).
   - for sub-test 3: DTCH/TF3 (7x145).
   - for sub-tests 4 to 18: DTCH/TF4 (10x145).
4. At step 15 the UE shall return

- for sub-test 4 to 18: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
- for sub-test 2: an RLC SDU on DTCH having the first 1272 bits equal to the contents as the DL RLC SDU sent by the SS.
- for sub-test 3: an RLC SDU on DTCH having the first 2552 bits equal to the contents as the DL RLC SDU sent by the SS.

### 18.2.3.4 Interactive or background / UL: 384 DL: 2048 kbps / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.4.1 Interactive or background / UL: 384 DL (337 bit TBS – 20 ms TTI): 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB+ UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.2.3.4.1.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.3.4.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.4 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 384 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 384 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.3.4.1.3 Method of test

Uplink TFS for the 384 kbps USCH – Transport Block Size 337 bits:

| | TFI | DTCH | SHCCH (SRB#5) | DCCH (SRB#1 – SRB#4) |
|---|---|---|---|---|
| **TFS** | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 4x337 | N/A | N/A |
| | TF4, bits | 8x337 | N/A | N/A |
| | TF5, bits | 12x337 | N/A | N/A |
| | TF6, bits | 16x337 | N/A | N/A |
| | TF7, bits | 20x337 | N/A | N/A |
| | TF8, bits | 24x337 | N/A | N/A |

Uplink TFCS for the 384 kbps USCH – Transport Block size 337 bits:

| TFCI | (DTCH, SHCCH, DCCH) |
|---|---|
| UL_USCH_TFC0 | (TF0, TF0, TF0), |
| UL_USCH_TFC1 | (TF1, TF0, TF0), |
| UL_USCH_TFC2 | (TF2, TF0, TF0), |
| UL_USCH_TFC3 | (TF3, TF0, TF0), |
| UL_USCH_TFC4 | (TF4, TF0, TF0), |
| UL_USCH_TFC5 | (TF5, TF0, TF0), |
| UL_USCH_TFC6 | (TF6, TF0, TF0), |
| UL_USCH_TFC7 | (TF7, TF0, TF0), |
| UL_USCH_TFC8 | (TF8, TF0, TF0), |
| UL_USCH_TFC9 | (TF0, TF1, TF0), |
| UL_USCH_TFC10 | (TF1, TF1, TF0), |
| UL_USCH_TFC11 | (TF2, TF1, TF0), |
| UL_USCH_TFC12 | (TF3, TF1, TF0), |
| UL_USCH_TFC13 | (TF4, TF1, TF0), |
| UL_USCH_TFC14 | (TF5, TF1, TF0), |
| UL_USCH_TFC15 | (TF6, TF1, TF0), |
| UL_USCH_TFC16 | (TF7, TF1, TF0), |
| UL_USCH_TFC17 | (TF8, TF1, TF0), |
| UL_USCH_TFC18 | (TF0, TF0, TF1), |
| UL_USCH_TFC19 | (TF1, TF0, TF1), |
| UL_USCH_TFC20 | (TF2, TF0, TF1), |
| UL_USCH_TFC21 | (TF3, TF0, TF1), |
| UL_USCH_TFC22 | (TF4, TF0, TF1), |
| UL_USCH_TFC23 | (TF5, TF0, TF1), |
| UL_USCH_TFC24 | (TF6, TF0, TF1), |
| UL_USCH_TFC25 | (TF7, TF0, TF1), |
| UL_USCH_TFC26 | (TF8, TF0, TF1), |
| UL_USCH_TFC27 | (TF0, TF1, TF1), |
| UL_USCH_TFC28 | (TF1, TF1, TF1), |
| UL_USCH_TFC29 | (TF2, TF1, TF1), |
| UL_USCH_TFC30 | (TF3, TF1, TF1), |
| UL_USCH_TFC31 | (TF4, TF1, TF1), |
| UL_USCH_TFC32 | (TF5, TF1, TF1), |
| UL_USCH_TFC33 | (TF6, TF1, TF1), |
| UL_USCH_TFC34 | (TF7, TF1, TF1), |
| UL_USCH_TFC35 | (TF8, TF1, TF1), |

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.2

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.2

Downlink TFS for 2048 kbps DSCH – 10 ms TTI:

See corresponding table in 18.2.3.3.1.3

Downlink TFCS for 2048 kbps DSCH - 10 ms TTI

See corresponding table in 18.2.3.3.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.2.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL TBS (337 bit) and DL TBS (337 bit):

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH _TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC18, UL_USCH_TFC19, UL_USCH_TFC27, UL_USCH_TFC28 | DTCH: 312 (320 x1) x2 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC2, UL_USCH_TFC9, UL_USCH_TFC11, UL_USCH_TFC18, UL_USCH_TFC20, UL_USCH_TFC27, UL_USCH_TFC29 | DTCH: 1272 (320 x2) x2 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21, UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 2552 (320 x4) x2 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 5112 (320 x8) x2 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC5 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 7672 (320 x12) x2 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC14, UL_USCH_TFC18, UL_USCH_TFC23, UL_USCH_TFC27, UL_USCH_TFC32 | DTCH: 10232 (320 x16) x2 - 8 | DTCH:10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 12792 (320 x20) x2 - 8 | DTCH: 12792 |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC7, UL_USCH_TFC9, UL_USCH_TFC16, UL_USCH_TFC18, UL_USCH_TFC25, UL_USCH_TFC27, UL_USCH_TFC34 | DTCH: 15352 (320 x24) x2 - 8 | DTCH: 1 5352 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 17912 (320 x8) x7 - 8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 19192 (320 x20) x3 - 8 | DTCH: 19192 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC18 and UL_TFC27 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

#### 18.2.3.4.1.4 Test requirements

See 18.1.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST.
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (4x337).
   - for sub-test 4: DTCH/TF3 (8x337).
   - for sub-test 5: DTCH/TF4 (12x337)
   - for sub-test 6: DTCH/TF4 (16x337)
   - for sub-test 7: DTCH/TF4 (20x337)
   - for sub-test 8: DTCH/TF4 (24x337)
   - for sub-test 9: DTCH/TF4 (8x337)
   - for sub-test 10: DTCH/TF4 (20x337).
4. At step 15 the UE shall return

   - for sub-test 1 to 10: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

### 18.2.3.4.2 Interactive or background / UL: 384(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.4.2.1 Conformance requirement

See 18.2.2.4.1.

18.2.3.4.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.4 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 384 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 384 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

18.2.3.4.1.3 Method of test

Uplink TFS for the 384 kbps USCH – Transport Block Size 145 bits:

| | TFI | DTCH | SHCCH (SRB#5) | DCCH (SRB#1 – SRB#4) |
|---|---|---|---|---|
| **TFS** | TF0, bits | 0x145 | 0x169 | 0x149 |
| | TF1, bits | 1x145 | 1x169 | 1x149 |
| | TF2, bits | 3x145 | N/A | N/A |
| | TF3, bits | 7x145 | N/A | N/A |
| | TF4, bits | 10x145 | N/A | N/A |
| | TF5, bits | 20x145 | N/A | N/A |
| | TF6, bits | 30x145 | N/A | N/A |
| | TF7, bits | 40x145 | N/A | N/A |
| | TF8, bits | 60x145 | N/A | N/A |

Uplink TFCS for the 384 kbps USCH – Transport Block size 145 bits:

See corresponding table in 18.2.3.4.1.2

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.2

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.2

Downlink TFS for 2048 kbps DSCH – 10 ms TTI:

See corresponding table in 18.2.3.3.1.3

Downlink TFCS for 2048 kbps DSCH - 10 ms TTI

See corresponding table in 18.2.3.3.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.2.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL TBS (337 bit) and DL TBS (337 bit):

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH _TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC18, UL_USCH_TFC19, UL_USCH_TFC27, UL_USCH_TFC28 | DTCH: 632 (128 x1) x5 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC2, UL_USCH_TFC9, UL_USCH_TFC11, UL_USCH_TFC18, UL_USCH_TFC20, UL_USCH_TFC27, UL_USCH_TFC29 | DTCH: 1272 (128x5) x2- 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21, UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 2552 (128 x10) x2 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 5112 (128 x20) x2 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC5 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 7672 (128 x30) x2 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC14, UL_USCH_TFC18, UL_USCH_TFC23, UL_USCH_TFC27, UL_USCH_TFC32 | DTCH: 10232 (128 x40) x2 - 8 | DTCH:10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 12792 (128 x50) x2 - 8 | DTCH: 12792 |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC7, UL_USCH_TFC9, UL_USCH_TFC16, UL_USCH_TFC18, UL_USCH_TFC25, UL_USCH_TFC27, UL_USCH_TFC34 | DTCH: 15352 (128 x60) x2 - 8 | DTCH: 15352 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 17912 (128 x20) x7 - 8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 19192 (128 x50) x3 - 8 | DTCH: 19192 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC18 and UL_TFC27 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

#### 18.2.3.4.1.4 Test requirements

See 18.1.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH/TF2 (5x145).
   - for sub-test 3: DTCH/TF3 (10x145).
   - for sub-test 4: DTCH/TF3 (20x145).
   - for sub-test 5: DTCH/TF4 (30x145)
   - for sub-test 6: DTCH/TF4 (40x145).
   - for sub-test 7: DTCH/TF4 (50x145).
   - for sub-test 8: DTCH/TF4 (60x145).
   - for sub-test 9: DTCH/TF4 (20x145).
   - for sub-test 10: DTCH/TF4 (50x145).
4. At step 15 the UE shall return

   - for sub-test 1 to 10: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

### 18.2.3.4.3 Interactive or background / UL: 384 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.2.3.4.3.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.3.4.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.4 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 384 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 384 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.3.4.3.3 Method of test

Uplink TFS for the 384 kbps USCH – Transport Block Size 337 bits:

- See corresponding table in 18.2..3.3.3.2

Uplink TFCS for the 384 kbps USCH – Transport Block size 337 bits:

- See corresponding table in 18.2.3.3.3.2

Uplink TFS for the RACH without DTCH:

- See corresponding table in 18.2.3.1.1.2

Uplink TFS for the RACH with DTCH:

- See corresponding table in 18.2.3.1.1.2

Downlink TFS for 2048 kbps DSCH – 20 ms TTI:

- See corresponding table in 18.2.3.3.1.3

Downlink TFCS for 2048 kbps DSCH – 20 ms TTI

- See corresponding table in 18.2.3.3.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

- See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

- See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

- See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

- See corresponding table in 18.2.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

- See Section 18.2.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL TBS (337 bit) and DL TBS (337 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC18, UL_USCH_TFC19, UL_USCH_TFC27, UL_USCH_TFC28 | DTCH: 632 (320 x1 ) x2 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC9, UL_USCH_TFC11, UL_USCH_TFC18, UL_USCH_TFC20, UL_USCH_TFC27, UL_USCH_TFC29 | DTCH: 1272 (320 x2 ) x2 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21, UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 2872 (320 x4 ) x2 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 5112 (320 x8 ) x2 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC5 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC14, UL_USCH_TFC18, UL_USCH_TFC23, UL_USCH_TFC27, UL_USCH_TFC32 | DTCH: 7672 (320 x12 ) x2 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 10232 (320 x16 ) x2 - 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC7, UL_USCH_TFC9, UL_USCH_TFC16, UL_USCH_TFC18, UL_USCH_TFC25, UL_USCH_TFC27, UL_USCH_TFC34 | DTCH: 12792 (320 x20 ) x2 - 8 | DTCH: 12792 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC8, UL_USCH_TFC9, UL_USCH_TFC17, UL_USCH_TFC18, UL_USCH_TFC26, UL_USCH_TFC27, UL_USCH_TFC35 | DTCH: 15352 (320 x24 ) x2 - 8 | DTCH: 15352 |
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 17912 (320 x8 ) x7- 8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 20472 (320 x8 ) x8- 8 | DTCH: 20472 |
| 11 | DL_DSCH_TFC10 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21, UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 23032 (320 x4 ) x18 - 8 | DTCH: 23032 |
| 12 | DL_DSCH_TFC10 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 25592 (320 x16 ) x5 - 8 | DTCH: 25592 |
| 13 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 28152 (320 x8 ) x11 - 8 | DTCH: 28152 |
| 14 | DL_DSCH_TFC10 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 20472 (320 x24 ) x4 - 8 | DTCH: 30712 |
| 15 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 33272 (320 x8 ) x13 - 8 | DTCH: 33272 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 16 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 20472 (320 x4 ) x28 - 8 | DTCH: 35832 |
| 17 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 38392 (320 x8 ) x14 - 8 | DTCH: 38392 |
| 18 | DL_DSCH_TFC10 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 40952 (320 x24 ) x8-8 | DTCH: 40952 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

#### 18.2.3.4.3.4 Test requirements

See 18.1.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST.
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (4x337).
   - for sub-test 4: DTCH/TF3 (8x337).
   - for sub-test 5: DTCH/TF4 (12x337)
   - for sub-test 6: DTCH/TF5 (16x337)
   - for sub-test 7: DTCH/TF6 (20x337)
   - for sub-test 8: DTCH/TF8 (24x337)
   - for sub-test 9 to 13: DTCH/TF4 (8x337)
   - for sub-test 11: DTCH/TF3 (4x337)
   - for sub-test 12: DTCH/TF6 (16x337)
   - for sub-test 13: DTCH/TF4 (8x337)
   - for sub-test 14: DTCH/TF8 (24x337)

- for sub-test 15 to 17: DTCH/TF4 (8x337)
- for sub-test 18: DTCH/TF8 (24x337)

4. At step 15 the UE shall return

   - for sub-test 1 to 18: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

#### 18.2.3.4.4 Interactive or background / UL: 384(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.2.3.4.4.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.3.4.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.10.3.4.2.4 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 384 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 384 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.3.4.4.3 Method of test

Uplink TFS for the 384 kbps USCH – Transport Block Size 337 bits:

See corresponding table in 18.2..3.3.3.2

Uplink TFCS for the 384 kbps USCH – Transport Block size 337 bits:

See corresponding table in 18.2.3.3.3.2

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.2.3.1.1.2

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.2.3.1.1.2

Downlink TFS for 2048 kbps DSCH – 20 ms TTI:

See corresponding table in 18.2.3.3.1.3

Downlink TFCS for 2048 kbps DSCH – 20 ms TTI

See corresponding table in 18.2.3.3.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.2.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.2.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL 145 bit TBS and DL 337 bit TBS:

| Sub -test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC18, UL_USCH_TFC19 UL_USCH_TFC27, UL_USCH_TFC28 | DTCH: 632 (128x1 ) x4 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC9, UL_USCH_TFC11, UL_USCH_TFC18, UL_USCH_TFC20 UL_USCH_TFC27, UL_USCH_TFC29 | DTCH: 1272 (128x5) x2 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21 UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 2872 (128x10) x2 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 5112 (128x20) x2 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC5 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC14 UL_USCH_TFC18, UL_USCH_TFC23, UL_USCH_TFC27, UL_USCH_TFC32 | DTCH: 7672 (128x30) x2 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 10232 (128x40) x2 - 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC7, UL_USCH_TFC9, UL_USCH_TFC16 UL_USCH_TFC18, UL_USCH_TFC25, UL_USCH_TFC27, UL_USCH_TFC34 | DTCH: 12792 (128x50) x2 - 8 | DTCH: 12792 |

| Sub -test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC8, UL_USCH_TFC9, UL_USCH_TFC17, UL_USCH_TFC18, UL_USCH_TFC26, UL_USCH_TFC27, UL_USCH_TFC35 | DTCH: 15352 (128x60) x2 - 8 | DTCH: 15352 |
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 17912 (128x20) x7- 8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 20472 (128x20) x8- 8 | DTCH: 20472 |
| 11 | DL_DSCH_TFC10 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21, UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 23032 (128x10) x18 - 8 | DTCH: 23032 |
| 12 | DL_DSCH_TFC10 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 25592 (128x40) x5 - 8 | DTCH: 25592 |
| 13 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 28152 (128x20) x11 - 8 | DTCH: 28152 |
| 14 | DL_DSCH_TFC10 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15 UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 30712 (128x60 ) x4 - 8 | DTCH: 30712 |
| 15 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 33272 (128x20) x13 - 8 | DTCH: 33272 |

| Sub -test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 16 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 35832 (128x20) x14 - 8 | DTCH: 35832 |
| 17 | DL_DSCH_TFC10 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 38392 (128x10) x30 - 8 | DTCH: 38392 |
| 18 | DL_DSCH_TFC10 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 40952 (128x40) x8- 8 | DTCH: 40952 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

#### 18.2.3.4.3.4 Test requirements

See 18.1.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST.
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x128).
   - for sub-test 2: DTCH/TF2 (5x128).
   - for sub-test 3: DTCH/TF3 (10x128).
   - for sub-test 4: DTCH/TF4 (20x128).
   - for sub-test 5: DTCH/TF5 (30x128)
   - for sub-test 6: DTCH/TF6 (40x128)
   - for sub-test 7: DTCH/TF7 (50x128)
   - for sub-test 8: DTCH/TF8 (60x128)
   - for sub-test 9 to 13: DTCH/TF4 (20x128)
   - for sub-test 14: DTCH/TF8 (60x128)
   - for sub-test 15 to 16: DTCH/TF4 (8x128)
   - for sub-test 17: DTCH/TF3(10x128)
   - for sub-test 18: DTCH/TF6 (40x128)

4. At step 15 the UE shall return

   - for sub-test 1 to 18: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

## 18.2.4 Combinations on PDSCH, SCCPCH, DPCH, PUSCH and PRACH

### 18.2.4.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 256 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.2.4.1.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 kbps (320 bit payload – 20 ms TTI) DL: 256 kbps (320 bit payload – 10 ms TTI) / PS RAB/ + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.1.1.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.1.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH, RACH, and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.1. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 320 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 256 kbps PS RAB on the DSCH has a 320 bit payload and 10 ms TTI.
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.4.1.1.3 Method of test

Uplink TFS for DCH:

| | TFI | RAB Subflow#1 DTCH | RAB Subflow#2 DTCH | RAB Subflow#3 DTCH | SRB#1-SRB#4 DCCH |
|---|---|---|---|---|---|
| **TFS** | TF0, bits | 0x81(alt. 1x0) (note) | 0x103 | 0x60 | 0x148 (alt. 1x0) (note) |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS for DCH:

| TFCI | (Subflow#1, Subflow#2, Subflow#3, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC_3 are part of the minimum set of TFCIs.<br>NOTE 2: In case TB size zero is configured for any transport channel, the first TFC is required; it is optional otherwise. | |

Uplink TFS for USCH – 320 bit payload& 20 ms TTI:

| | TFI | RAB DTCH | SRB SHCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 |
| | TF1, bits | 1x337 | 1x169 |
| | TF2, bits | 2x337 | N/A |
| | TF3, bits | 3x337 | N/A |
| | TF4, bits | 4x337 | N/A |

Uplink TFCS for USCH – 320 bit payload& 20 ms TTI:

| TFCI | (RAB, SHCCH) |
|---|---|
| UL_USCH_TFC0 | (TF0, TF0) |
| UL_USCH_TFC1 | (TF1, TF0) |
| UL_USCH_TFC2 | (TF2, TF0) |
| UL_USCH_TFC3 | (TF3, TF1) |
| UL_USCH_TFC4 | (TF4, TF1) |
| UL_USCH_TFC5 | (TF0, TF1) |
| UL_USCH_TFC6 | (TF1, TF1) |
| UL_USCH_TFC7 | (TF2, TF1) |
| UL_USCH_TFC8 | (TF3, TF1) |
| UL_USCH_TFC9 | (TF4, TF1) |
| NOTE: UL_USCH_TFC0, UL_USCH_TFC1 and UL_USCH_TFC5 are part of the minimum set of TCIs | |

TFS for RACH:

| | TFI | SRB#0 & SRB#5 CCCH, SHCCH |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Downlink TFS for DCH:

| | | RAB subflow #1 DTCH | RAB subflow #2 DTCH | RAB subflow #3 DTCH | SRB#1-SRB#4 DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 (alt. 1x0) (note) | 0x103 | 0x60 | 0x148 (alt. 1x0) (note) |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS for DCH:

| TFCI | DTCH(RAB Subflow#1 – RAB subflow#3), DCCH |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS for DSCH – 320 bit payload& 10 ms TTI:

| | | DTCH<br>RAB Subflow#4 | SHCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 |
| | TF1, bits | 1x337 | 1x169 |
| | TF2, bits | 2x337 | N/A |
| | TF3, bits | 4x337 | N/A |
| | TF4, bits | 8x337 | N/A |

Downlink TFCS for DSCH – 320 bit payload& 10 ms TTI:

| TFCI | 256 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0) |
| DL_DSCH_TFC1 | (TF1, TF0) |
| DL_DSCH_TFC2 | (TF2, TF0) |
| DL_DSCH_TFC3 | (TF3, TF0) |
| DL_DSCH_TFC4 | (TF4, TF0) |
| DL_DSCH_TFC5 | (TF0, TF1) |
| DL_DSCH_TFC6 | (TF1, TF1) |
| DL_DSCH_TFC7 | (TF2, TF1) |
| DL_DSCH_TFC8 | (TF3, TF1) |
| DL_DSCH_TFC9 | (TF4, TF1) |

Downlink TFS for FACH – 32 kbps:

| | | CCCH/SHCCH/BCCH |
|---|---|---|
| TFS | TF0, bits | 0x171 |
| | TF1, bits | 1x171 |
| | TF2, bits | 2x171 |
| | TF3, bits | 3x171(alt. N/A) |
| | TF4, bits | 4x171(alt. N/A) |

Downlink TFCS for FACH– 32 kbps:

| TFCI | CCCH/SHCCH/BCCH |
|---|---|
| DL_FACH_TFC0 | (TF0) |
| DL_FACH_TFC1 | (TF1) |
| DL_FACH_TFC2 | (TF2) |
| DL_FACH_TFC3 | (TF3) |
| DL_FACH_TFC4 | (TF4) |
| | ALT |
| DL_FACH_TFC0 | (TF0,) |
| DL_FACH_TFC1 | (TF1) |
| DL_FACH_TFC2 | (TF2) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC5, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | Subflow#1:39 Subflow#2:103 Subflow#3:60 Subflow#4:312 | Subflow#1:39 Subflow#2:No data Subflow#1:No data Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC5, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:312 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:No data |
| 3 | DL_TFC1, DL_DSCH_TFC1 | UL_TFC1, UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC5, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | Subflow#1:39 Subflow#2:103 Subflow#3:60 Subflow#4:312 | Subflow#1:39 Subflow#2:No data Subflow#1:No data Subflow#4:312 (1x320) - 8 |
| 4 | DL_TFC2, DL_DSCH_TFC1 | UL_TFC2, UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC5, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:312 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:312 |
| 5 | DL_TFC1, DL_DSCH_TFC2 | UL_TFC1, UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC5, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | Subflow#1:39 Subflow#2:103 Subflow#3:60 Subflow#4:632 | Subflow#1:39 Subflow#2:No data Subflow#1:No data Subflow#4:632 (2x320) - 8 |
| 6 | DL_TFC2, DL_DSCH_TFC2 | UL_TFC2, UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC5, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:632 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:632 |
| 7 | DL_TFC1, DL_DSCH_TFC3 | UL_TFC1, UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC5, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3, | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8 UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | Subflow#1:39 Subflow#2:103 Subflow#3:60 Subflow#4:1912 (3x320) x 2 - 8 | Subflow#1:39 Subflow#2:No data Subflow#1:No data Subflow#4:1272 (4x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2, DL_DSCH_TFC3 | UL_TFC2, UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC5, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:1912 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:1272 |
| 9 | DL_TFC1, DL_DSCH_TFC4 | UL_TFC1, UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC5, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | Subflow#1:39 Subflow#2:103 Subflow#3:60 Subflow#4:2552 | Subflow#1:39 Subflow#2:No data Subflow#1:No data Subflow#4:2552 (8x320) - 8 |
| 10 | DL_TFC2, DL_DSCH_TFC4 | UL_TFC2, UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC5, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:2552 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:2552 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: UL_USCH_TFC0 UL_USCH_TFC1 and UL_USCH_TFC5 are part o f the minimum TFCIs<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.1.1.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be:
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1(1x337)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)

4. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.

   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS

   - for sub-test 3, 5, and 9: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 4, 6, and 10: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

#### 18.2.4.1.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 256 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.1.2.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.1.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH , FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.1. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 145 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 256 kbps PS RAB on the DSCH has a 320 bit payload and 10 ms TTI. (TBS).

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.4.1.2.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH – 145 bit payload & 20 ms TTI:

| | TFI | RAB DTCH | SRB SHCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x145 | 0x169 |
| | TF1, bits | 1x145 | 1x169 |
| | TF2, bits | 3x145 | N/A |
| | TF3, bits | 7x145 | N/A |
| | TF4, bits | 10x145 | N/A |

Uplink TFCS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH – 320 bit payload& 10 ms TTI:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DSCH – 320 bit payload& 10 ms TTI:

See comparable table in 18.2.4.1.1.3

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0<br>UL_USCH_TFC1<br>UL_USCH_TFC5<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(128 x 1)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(128 x 1)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(128 x 3)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(128 x 3)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3, | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128) x 2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: UL_USCH_TFC0 UL_USCH_TFC1 and UL_USCH_TFC5 are part o f the minimum TFCIs<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.1.2.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1(1x145)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60); Subflow#4/TF1(1x145)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2(3x145)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60);Subflow#4/TF2(3x145)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3(7x145)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60); Subflow#4/TF3(7x145)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4(10x145)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60); Subflow#4/TF4(10x145)

4. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.

   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as the RLC SDU sent by SS

   - for sub-test 3: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 312 bits equal to the content as sent by SS

   - for sub-test 4: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 312 bits equal to the content as sent by SS

   - for sub-test 5: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 632 bits equal to the content as sent by SS

   - for sub-test 6: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 632 bits equal to the content as sent by SS

   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

   - for sub-test 9: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 10: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as the RLC SDU as sent by SS

#### 18.2.4.1.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 256 kbps (320 bit payload – 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.1.3.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.1.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH , FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.1. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 320 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 256 kbps PS RAB on the DSCH has a 320 bit payload and 20 ms TTI.

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

18.2.4.1.3.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH - 320 bit payload& 20 ms TTI:

| | | **DTCH RAB Subflow#4** | **SHCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 |
| | TF1, bits | 1x337 | 1x169 |
| | TF2, bits | 2x337 | N/A |
| | TF3, bits | 4x337 | N/A |
| | TF4, bits | 8x337 | N/A |
| | TF5, bits | 12x337 | N/A |
| | TF6, bits | 16x337 | N/A |

Downlink TFCS for DSCH – 320 bit payload& 20 ms TTI:

| TFCI | 256 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0), |
| DL_DSCH_TFC7 | (TF0, TF1), |
| DL_DSCH_TFC8 | (TF1, TF1), |
| DL_DSCH_TFC9 | (TF2, TF1), |
| DL_DSCH_TFC10 | (TF3, TF1), |
| DL_DSCH_TFC11 | (TF4, TF1), |
| DL_DSCH_TFC12 | (TF5, TF1), |
| DL_DSCH_TFC13 | (TF6, TF1) |

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912<br>(3x320) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:3832<br>(12x320) -8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320) -8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4 x 320)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(16x320) -8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4 x 320)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(16x320) -8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.1.3.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x337)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60); Subflow#4/TF4 (4x337)
   - for sub-test 13: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 14: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
   - for sub-test 3, 5, and 9: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 4, 6, and 10: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

- for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

#### 18.2.4.1.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 256 kbps (320 bit payload – 20 ms TTI)/ PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.1.4.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.1.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH , FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.1. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 145 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 256 kbps PS RAB on the DSCH has a 320 bit payload and 20 ms TTI. (TBS).
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.4.1.4.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.1.3.3

Downlink TFCS for DSCH - 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.1.3.3

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0<br>UL_USCH_TFC1<br>UL_USCH_TFC5<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(128 x 1)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(128 x 3)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(128 x 3)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:3832<br>(12x320) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(16x320) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(16x320) - 8 |

| | |
|---|---|
| NOTE 1: | UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs. |
| NOTE 2: | UL_USCH_TFC0 UL_USCH_TFC1 and UL_USCH_TFC5 are part o f the minimum TFCIs |
| NOTE 3: | See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. |

See 18.2.1.3 for test procedure.

#### 18.2.4.1.4.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x145)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x145)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2(2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (3x145)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF2 (3x337)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (7x145)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (10x145)
   - for sub-test 13: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 14: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (10x145)
4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
   - for sub-test 3, 5, and 9: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 4, 6, and 10: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 7,9,11,13: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

- for sub-test 8,10,12,14: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

### 18.2.4.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 384 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH+ DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.2.4.2.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (320 bit payload – 20 ms TTI) DL: 384 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.2.1.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.2.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH, RACH, and DCH) and three DL transport channels (DSCH , FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.2. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 320 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 256 kbps PS RAB on the DSCH has a 320 bit payload and 10 ms TTI.

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.4.2.1.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH – 320 bit payload& 10 ms TTI:

| | | **DTCH RAB Subflow#4** | **SHCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 |
| | TF1, bits | 1x337 | 1x169 |
| | TF2, bits | 2x337 | N/A |
| | TF3, bits | 4x337 | N/A |
| | TF4, bits | 8x337 | N/A |
| | TF4, bits | 12x337 | N/A |

Downlink TFCS for DSCH – 320 bit payload& 10 ms TTI:

| **TFCI** | **384 kbps RAB DTCH & SHCCH** |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0), |
| DL_DSCH_TFC6 | (TF0, TF1), |
| DL_DSCH_TFC7 | (TF1, TF1), |
| DL_DSCH_TFC8 | (TF2, TF1), |
| DL_DSCH_TFC9 | (TF3, TF1), |
| DL_DSCH_TFC10 | (TF4, TF1), |
| DL_DSCH_TFC11 | (TF5, TF1) |

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312<br>(1x320) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:632<br>(2x320) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3, | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912<br>(3x320) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(4x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x320) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:2552<br>(8x320) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:3832<br>(12x320)-8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320)-8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.2.1.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)

- for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1(1x337)
- for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
- for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)
- for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
- for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
- for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
- for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
- for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
- for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)

4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
   - for sub-test 3, 5, 9 and 11: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 4, 6, 10 and 12: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

#### 18.2.4.2.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (128 bit payload - 20 ms TTI) DL: 384 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.2.2.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.2.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.2. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 384 kbps PS RAB on the DSCH has a 320 bit payload and 10 ms TTI. (TBS).
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH, and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.4.2.2.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH – 10 ms TTI:

See comparable table in 18.2.4.2.1.3

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC6, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | Subflow#1:39 Subflow#2:103 Subflow#3:60 Subflow#4:312 | Subflow#1:39 Subflow#2:No data Subflow#3:No data Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC6, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:312 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:No data |
| 3 | DL_TFC1, DL_DSCH_TFC1 | UL_TFC1, UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC6, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | Subflow#1:39 Subflow#2:103 Subflow#3:60 Subflow#4:376 (1x128)x3 - 8 | Subflow#1:39 Subflow#2:No data Subflow#3:No data Subflow#4:312 (1x320) - 8 |
| 4 | DL_TFC2, DL_DSCH_TFC1 | UL_TFC2, UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC6, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | Subflow#1:81 Subflow#2:103 Subflow#4:376 (1x128)x3 - 8 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:312 |
| 5 | DL_TFC1, DL_DSCH_TFC2 | UL_TFC1, UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC6, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | Subflow#1:39 Subflow#2:103 Subflow#3:60 Subflow#4:760 (3x128)x2 - 8 | Subflow#1:39 Subflow#2:No data Subflow#3:No data Subflow#4:632 (2x320) - 8 |
| 6 | DL_TFC2, DL_DSCH_TFC2 | UL_TFC2, UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC6, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:760 (3x128)x2 - 8 | Subflow#1:81 Subflow#2:103 Subflow#3:60 Subflow#4:632 |
| 7 | DL_TFC1, DL_DSCH_TFC3 | UL_TFC1, UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC6, UL_USCH_TFC0, UL_USCH_TFC5, DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | Subflow#1:39 Subflow#2:103 Subflow#3:60 Subflow#4:1784 (7x128)x2 - 8 | Subflow#1:39 Subflow#2:No data Subflow#3:No data Subflow#4:1272 (4x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#4:1784<br>(7x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552<br>(8x320) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:3832<br>(12x320)-8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320)-8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: UL_USCH_TFC0 UL_USCH_TFC1 and UL_USCH_TFC5 are part o f the minimum TFCIs<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.2.2.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)

- for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x145)
- for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x145)
- for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (3x128)
- for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (3x128)
- for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (7x128)
- for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (7x128)
- for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x128)
- for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x128)
- for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x128)
- for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x128)

4. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
- for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
- for sub-test 3: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 312 bits equal to content sent by SS
- for sub-test 4: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 312 bits equal to content sent by SS
- for sub-test 5: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 632 bits equal to content sent by SS
- for sub-test 6: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 632 bits equal to content sent by SS
- for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
- for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
- for sub-test 9: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same contents equal to content sent by SS
- for sub-test 10: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same contents equal to content sent by SS

### 18.2.4.2.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 384 kbps (320 bit payload – 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.2.4.2.3.1 Conformance requirement

See 18.2.2.4.1

#### 18.2.4.2.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.2. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 320 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 384 kbps PS RAB on the DSCH has a 320 bit payload and 20 ms TTI.
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.4.2.3.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH - 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for USCH - 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH - 320 bit payload& 20 ms TTI:

| | | DTCH<br>RAB Subflow#4 | SHCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 |
| | TF1, bits | 1x337 | 1x169 |
| | TF2, bits | 2x337 | N/A |
| | TF3, bits | 4x337 | N/A |
| | TF4, bits | 8x337 | N/A |
| | TF5, bits | 12x337 | N/A |
| | TF6, bits | 16x337 | N/A |
| | TF7, bits | 20x337 | N/A |
| | TF8, bits | 24x337 | N/A |

Downlink TFCS for DSCH – - 320 bit payload & 20 ms TTI:

| TFCI | 384 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0), |
| DL_DSCH_TFC7 | (TF7, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0), |
| DL_DSCH_TFC9 | (TF0, TF1), |
| DL_DSCH_TFC10 | (TF1, TF1), |
| DL_DSCH_TFC11 | (TF2, TF1), |
| DL_DSCH_TFC12 | (TF3, TF1), |
| DL_DSCH_TFC13 | (TF4, TF1), |
| DL_DSCH_TFC14 | (TF5, TF1), |
| DL_DSCH_TFC15 | (TF6, TF1), |
| DL_DSCH_TFC16 | (TF7, TF1), |
| DL_DSCH_TFC17 | (TF8, TF1) |

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0<br>UL_USCH_TFC1<br>UL_USCH_TFC5<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312<br>(1x320) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632<br>(2x320) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912<br>(3x320)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272<br>(4x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x320)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552<br>(8x320) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:3832<br>(12x320) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(16x320) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(16x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(4x320)x5 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:6392<br>(20x320) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(4x320)x5 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(20x320) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:7672<br>(24x320) - 8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(24x320) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.2.3.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x337)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)

- for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
- for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
- for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
- for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
- for sub-test 1,13,15,and 17: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
- for sub-test 12,14,16,18: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)

4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
   - for sub-test 3, 5, 9 and 11: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 4, 6, 10 and 12: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
   - for sub-test 9,11,13,15 and 17: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
   - for sub-test 8,10,12,14,16 and 18: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

#### 18.2.4.2.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 384 kbps (320 bit payload – 20 ms TTI)/ PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.2.4.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.2.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.2. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 384 kbps PS RAB on the DSCH has a 320 bit payload and 20 ms TTI. (TBS).
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.4.2.4.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for USCH:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.2.3.1

Downlink TFCS for DSCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.2.3.1

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0<br>UL_USCH_TFC1<br>UL_USCH_TFC5<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(1x128)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:312<br>(1x320) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(1x128)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(3x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632<br>(2x320) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(3x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(4x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552<br>(8x320) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:3832<br>(12x320) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320)-8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(16x320) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(16x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(10x128)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:6392<br>(20x320) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(10x128) 6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(20x320) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(10x128)x7 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:7672<br>(24x320)-8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(10x128)x7 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(24x320) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: UL_USCH_TFC0 UL_USCH_TFC1 and UL_USCH_TFC5 are part o f the minimum TFCIs<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.2.4.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x145)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1(1x145)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (3x128)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (3x128)

- for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (7x128)
- for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (7x128)
- for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x128)
- for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x128)
- for sub-test 11,13,15, and 17: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x128)
- for sub-test 12,14,16, and 18: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x128)

4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
   - for sub-test 3, 5, 9 and 1,13, 15 and 17: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 4, 6, 10,12, 14 16 and 18: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

### 18.2.4.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 2048 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.2.4.3.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 2048 kbps (640 bit payload - 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.3.1.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.3.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH, RACH, and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.3. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 640 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 320 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 2048 kbps PS RAB on the DSCH has a 640 bit payload and 10 ms TTI.
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.4.3.1.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH – 640 bit payload & 10 ms TTI:

| | | **DTCH RAB Subflow#4** | **SHCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x657 | 0x169 |
| | TF1, bits | 1x657 | 1x169 |
| | TF2, bits | 2x657 | N/A |
| | TF3, bits | 4x657 | N/A |
| | TF4, bits | 8x657 | N/A |
| | TF5, bits | 12x657 | N/A |
| | TF6, bits | 16x657 | N/A |
| | TF7, bits | 20x657 | N/A |
| | TF8, bits | 24x657 | N/A |
| | TF9, bits | 28x657 | N/A |
| | TF10,bits | 30x657 | N/A |

Downlink TFCS for DSCH – 640 bit payload & 10 ms TTI:

| TFCI | 2048 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0) |
| DL_DSCH_TFC7 | (TF7, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0), |
| DL_DSCH_TFC9 | (TF9, TF0), |
| DL_DSCH_TFC10 | (TF10, TF0), |
| DL_DSCH_TFC11 | (TF0, TF1), |
| DL_DSCH_TFC12 | (TF1, TF1), |
| DL_DSCH_TFC13 | (TF2, TF1), |
| DL_DSCH_TFC14 | (TF3, TF1), |
| DL_DSCH_TFC15 | (TF4, TF1), |
| DL_DSCH_TFC16 | (TF5, TF1), |
| DL_DSCH_TFC17 | (TF6, TF1), |
| DL_DSCH_TFC18 | (TF7, TF1), |
| DL_DSCH_TFC19 | (TF8, TF1), |
| DL_DSCH_TFC20 | (TF9, TF1) |

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(320x1)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632<br>(1x640) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(320x1)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(1x640) - 8 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(320x2)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272<br>(2x640) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(320x2)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(2x640) - 8 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2872<br>(3x320)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552<br>(4x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2872<br>(3x320)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x640) - 8 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(8x640) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(8x640) - 8 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:7672<br>(12x640) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(12x640) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(4x320)x8 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:10228<br>(16x640) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(4x320)x8 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:10228<br>(16x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(4x320)x10 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:12792<br>(20x640) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(4x320)x10 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:12792<br>(20x640) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(4x320)x12 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:15352<br>(24x640) - 8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(4x320)x12 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:15352<br>(24x640) - 8 |
| 19 | DL_TFC1,<br>DL_DSCH_TFC9 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(4x320)x14 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:17912<br>(28x640) - 8 |
| 20 | DL_TFC2,<br>DL_DSCH_TFC9 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(4x320)x14 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:17912<br>(28x640) - 8 |
| 21 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:19192<br>(4x320)x15 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:19192<br>(30x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:19192<br>(4x320)x15 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:19192<br>(30x640) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.3.1.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x337)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
   - for sub-test 13,15,17,19,21: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 14,16,18,20,22: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS

- for sub-test 3, 5, 9,11,13,15,17,19 and 21: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 4, 6, 10, 12, 14, 16,18, 20, 22: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

- for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

#### 18.2.4.3.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (128 bit payload - 20 ms TTI) DL: 2048 kbps (640 bit payload - 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.3.2.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.3.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.3. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 640 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 2048 kbps PS RAB on the DSCH has a 640 bit payload and 10 ms TTI. (TBS).

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.4.3.2.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH - 145 bit payload & 20 ms TTI:

See comparable table in 18.2.4.1.2.3

Uplink TFCS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH – 10 ms TTI:

See comparable table in 18.2.4.3.1.3

Downlink TFCS for DSCH – 10 ms TTI:

See comparable table in 18.2.4.3.1.3

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(128x1)x5 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632<br>(1x640) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0<br>UL_USCH_TFC1<br>UL_USCH_TFC5<br>UL_USCH_TFC6<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(128x1)x5 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(1x640) - 8 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1528<br>(128x3)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(2x640) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1528<br>(128x3)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(2x640) - 8 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2680<br>(128x7)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:2552<br>(4x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2680<br>(128x7)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x640) - 8 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(128x10)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(8x640) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(128x10)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(8x640) - 8 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(128x10)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:7672<br>(12x640) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>128(x10)x6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(12x640) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10232<br>(128x10)x8 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:10232<br>(16x640) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4: 10232<br>(128x10)x8 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:10232<br>(16x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(128x10)x10 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:12792<br>(20x640) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(128x10)x10 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:12792<br>(20x640) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(128x10)x12 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:15352<br>(24x640) - 8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(128x10)x12 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:15352<br>(24x640) - 8 |
| 19 | DL_TFC1,<br>DL_DSCH_TFC9 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(128x10)x14 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:17912<br>(28x640) - 8 |
| 20 | DL_TFC2,<br>DL_DSCH_TFC9 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(128x10)x14 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:17912<br>(28x640) - 8 |
| 21 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:19192<br>(128x10)x15 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:19192<br>(30x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:19192<br>(128x10)x15 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:19192<br>(30x640) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.3.2.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1(1x145)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x145)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (3x145)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (3x145)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (7x145)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (7x145)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)
   - for sub-test 13,15,17,19,21: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 14,16,18,20,22: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)
4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS

- for sub-test 3, 9,11,13,15,17,19 and 21: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 4, 10, 12, 14, 16,18, 20, 22: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 5: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

- for sub-test 6: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

- for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

- for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

#### 18.2.4.3.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 2048 kbps (640 bit payload - 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.3.3.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.3.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH, RACH, and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.3. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 640 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 2048 kbps DL PS RAB channel has a 657 bit Transport Block Size (TBS).

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.2.4.3.3.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for USCH:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH – 20 ms TTI:

| | | **DTCH RAB Subflow#4** | **SHCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x657 | 0x169 |
| | TF1, bits | 1x657 | 1x169 |
| | TF2, bits | 2x657 | N/A |
| | TF3, bits | 4x657 | N/A |
| | TF4, bits | 8x657 | N/A |
| | TF5, bits | 12x657 | N/A |
| | TF6, bits | 16x657 | N/A |
| | TF7, bits | 20x657 | N/A |
| | TF8, bits | 24x657 | N/A |
| | TF9, bits | 28x657 | N/A |
| | TF10,bits | 32x657 | N/A |
| | TF11,bits | 36x657 | N/A |
| | TF12,bits | 40x657 | N/A |
| | TF13,bits | 44x657 | N/A |
| | TF14,bits | 48x657 | N/A |
| | TF15,bits | 52x657 | N/A |
| | TF16,bits | 56x657 | N/A |
| | TF17,bits | 60x657 | N/A |
| | TF17,bits | 64x657 | N/A |

Downlink TFCS for DSCH –20 ms TTI:

| TFCI | 2048 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0) |
| DL_DSCH_TFC7 | (TF7, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0), |
| DL_DSCH_TFC9 | (TF9, TF0), |
| DL_DSCH_TFC10 | (TF10, TF0), |
| DL_DSCH_TFC11 | (TF11, TF0), |
| DL_DSCH_TFC12 | (TF12, TF0), |
| DL_DSCH_TFC13 | (TF13, TF0), |
| DL_DSCH_TFC14 | (TF14, TF0), |
| DL_DSCH_TFC15 | (TF15, TF0), |
| DL_DSCH_TFC16 | (TF16, TF0), |
| DL_DSCH_TFC17 | (TF17, TF0), |
| DL_DSCH_TFC18 | (TF18, TF0), |
| DL_DSCH_TFC19 | (TF0, TF1), |
| DL_DSCH_TFC20 | (TF1, TF1), |
| DL_DSCH_TFC21 | (TF2, TF1), |
| DL_DSCH_TFC22 | (TF3, TF1), |
| DL_DSCH_TFC23 | (TF4, TF1), |
| DL_DSCH_TFC24 | (TF5, TF1), |
| DL_DSCH_TFC25 | (TF6, TF1), |
| DL_DSCH_TFC26 | (TF7, TF1), |
| DL_DSCH_TFC27 | (TF8, TF1), |
| DL_DSCH_TFC28 | (TF9, TF1) |
| DL_DSCH_TFC29 | (TF10, TF1), |
| DL_DSCH_TFC30 | (TF11, TF1), |
| DL_DSCH_TFC31 | (TF12, TF1), |
| DL_DSCH_TFC32 | (TF13, TF1), |
| DL_DSCH_TFC33 | (TF14, TF1), |
| DL_DSCH_TFC34 | (TF15, TF1), |
| DL_DSCH_TFC35 | (TF16, TF1), |
| DL_DSCH_TFC36 | (TF17, TF1), |
| DL_DSCH_TFC37 | (TF17, TF1), |

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(320x1)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:632<br>(1x640) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(320x1)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(1x640) - 8 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(320x2)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(2x640) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(320x2)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(2x640) - 8 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3, | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2872<br>(3x320) x 3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:2552<br>(4x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2872<br>(3x320) x 3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x640) - 8 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320) x 4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:5112<br>(8x640) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320) x 4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(8x640) - 8 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:7672<br>(12x640) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(12x640) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(4x320)x8 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:10228<br>(16x640) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(4x320)x8 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:10228<br>(16x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(4x320)x10 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:12792<br>(20x640) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(4x320)x10 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:12792<br>(20x640) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(4x320)x12 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:15352<br>(24x640) - 8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(4x320)x12 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:15352<br>(24x640) - 8 |
| 19 | DL_TFC1,<br>DL_DSCH_TFC9 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(4x320)x14 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:17912<br>(28x640) - 8 |
| 20 | DL_TFC2,<br>DL_DSCH_TFC9 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(4x320)x14 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:17912<br>(28x640) - 8 |
| 21 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 20472<br>(4x320)x16 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:20472<br>(32x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 20472<br>(4x320)x16 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:20472<br>(32x640) - 8 |
| 23 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 23032<br>(4x320)x18 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:23032<br>(36x640) - 8 |
| 24 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 23032<br>(4x320)x18 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:23032<br>(36x640) - 8 |
| 25 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 25592<br>(4x320)x20 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:25592<br>(40x640) - 8 |
| 26 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 25592<br>(4x320)x20 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:25592<br>(40x640) - 8 |
| 27 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 28152<br>(4x320)x22 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:28152<br>(44x640) - 8 |
| 28 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:28152<br>(4x320)x22 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:28152<br>(44x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 29 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:30712<br>(4x320)x24 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:30712<br>(48x640) - 8 |
| 30 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:30712<br>(4x320)x24 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:30712<br>(48x640) - 8 |
| 31 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:33272<br>(4x320)x26 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:33272<br>(52x640) - 8 |
| 32 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:33272<br>(4x320)x26 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:33272<br>(52x640) - 8 |
| 33 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:35832<br>(4x320)x28 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:35832<br>(56x640) - 8 |
| 34 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:35832<br>(4x320)x28 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:35832<br>(56x640) - 8 |
| 35 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:38392<br>(4x320)x30 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:38392<br>(60x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 36 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:38392<br>(4x320)x30 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:38392<br>(60x640) - 8 |
| 37 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:40952<br>(4x320)x32 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:40952<br>(64x640) - 8 |
| 38 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:40952<br>(4x320)x32 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:40952<br>(64x640) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.3.3.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x337)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)

- for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)

- for sub-test 13,15,17,19,21,23,25,27,29,31,33,35, and 37: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)

- for sub-test 14,16,18,20,22,24,26,28,30,32,34,36,and 38: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)

4. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.

- for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS

- for sub-test 3, 5, 9,11,13,15,17,19,21,23,25,27,29,31,33,35, and 37: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 4, 6, 10, 12, 14, 16,18, 20, 22,24,26,28,30,32,34,36, and 38: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

- for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

#### 18.2.4.3.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 2048 kbps (640 bit payload - 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.2.4.3.3.1 Conformance requirement

See 18.2.2.4.1

##### 18.2.4.3.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.10.3.4.3.3. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 640 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 2048 kbps PS RAB on the DSCH has a 640 bit payload and 20 ms TTI. (TBS).

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.2.4.3.3.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Uplink TFS for USCH:

See comparable table in 18.2.4.1.1.3

Uplink TFCS for USCH:

See comparable table in 18.2.4.1.1.3

TFS for RACH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.2.4.1.1.3

Downlink TFS for DSCH – 640 bit payload & 20 ms TTI:

See comparable table in 18.2.4.3.3.3

Downlink TFCS for DSCH – 640 bit payload & 20 ms TTI:

See comparable table in 18.2.4.3.3.3

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.2.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.2.4.1.1.3

Sub-tests – USCH:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(128x1)x5 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:632<br>(1x640) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(128x1)x5 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(1x640) - 8 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1528<br>(128x3)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(2x640) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1528<br>(128x3)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(2x640) - 8 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2680<br>(128x7) x 3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:2552<br>(4x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2680<br>(128x7) x 3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x640) - 8 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:5112<br>(8x640) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(8x640) - 8 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(10x128)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:7672<br>(12x640) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(10x128)x6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(12x640) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(10x128)x8 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:10228<br>(16x640) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(10x128)x8 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:10228<br>(16x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(10x1280)x10 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:12792<br>(20x640) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(10x128)x10 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:12792<br>(20x640) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(10x128)x12 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:15352<br>(24x640) - 8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(10x128)x12 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:15352<br>(24x640) - 8 |
| 19 | DL_TFC1,<br>DL_DSCH_TFC9 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(10x128)x14 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:17912<br>(28x640) - 8 |
| 20 | DL_TFC2,<br>DL_DSCH_TFC9 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(10x128)x14 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:17912<br>(28x640) - 8 |
| 21 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 20472<br>(10x128)x16 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:20472<br>(32x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:20472<br>(10x128)x16 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:20472<br>(32x640) - 8 |
| 23 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:23032<br>(10x128)x18 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:23032<br>(36x640) - 8 |
| 24 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:23032<br>(10x128)x18 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:23032<br>(36x640) - 8 |
| 25 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:25592<br>(10x128)x20 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:25592<br>(40x640) - 8 |
| 26 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 25592<br>(10x128)x20 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:25592<br>(40x640) - 8 |
| 27 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 28152<br>(10x128)x22 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:28152<br>(44x640) - 8 |
| 28 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:28152<br>(10x128)x22 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:28152<br>(44x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 29 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:30712<br>(10x128)x24 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:30712<br>(48x640) - 8 |
| 30 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:30712<br>(10x128)x24 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:30712<br>(48x640) - 8 |
| 31 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:33272<br>(10x128)x26 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:33272<br>(52x640) - 8 |
| 32 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:33272<br>(10x128)x26 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:33272<br>(52x640) - 8 |
| 33 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:35832<br>(10x128)x28 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:35832<br>(56x640) - 8 |
| 34 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:35832<br>(10x128)x28 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:35832<br>(56x640) - 8 |
| 35 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:38392<br>(10x128)x30 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:38392<br>(60x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 36 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:38392<br>(10x128)x30 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:38392<br>(60x640) - 8 |
| 37 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:40952<br>(10x128)x32 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:40952<br>(64x640) - 8 |
| 38 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:40952<br>(10x128)x32 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:40952<br>(64x640) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.2.1.3 for test procedure.

#### 18.2.4.3.3.4 Test requirements

See 18.2.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1(1x145)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1(1x145)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (3x145)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2(3x145)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (7x145)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (7x145)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)

- for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)

- for sub-test 13,15,17,19,21,23,2,5,27,29,31,33,35 and 37: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)

- for sub-test 14,16,18,20,22,24,26,28,30,32,34,36 and 38: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)

4. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.

   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS

   - for sub-test 3, 9,11,13,15,17,19,21,23,25,27,29,31,33,35 and 37: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 4, 10, 12, 14, 16,18, 20, 22,24,26,28,30,32,34,36 and 38: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 5: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

   - for sub-test 6: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

## 18.2.4 Void

## 18.2.5 Combinations on SCCPCH

### 18.2.5.1 Stand-alone signalling RB for PCCH

#### 18.2.5.1.1 Stand-alone signalling RB for PCCH at 12 kbps

##### 18.2.5.1.1.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.5.1.1.2 Test Purpose

To verify establishment and data transfer of Paging 1 message which comprises IE "BCCH Modification Information", with the "Value Tag" different from the "MIB Value Tag" of the current Master Information Block. This test is specified in TS 34.108, clause 6.10.3.4.4.1. The SCCPCH carries the PCH at 12 kbps.

##### 18.2.5.1.1.3 Method of Test

The contents of the System Information Block type 5 are specified in clause 8.1.2.2.

Downlink TFS for PCCH:

| | | SRBs |
|---|---|---|
| TFS | TF0, bits | 0x240 |
| | TF1, bits | 1x240 |

Downlink TFCS for PCCH:

| TFCI | (SRB) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |

Sub-test:

See 18.2.1.1 for test procedure.

#### 18.2.5.1.1.4 Test Requirements

See 18.2.1.1 for definition of step 6

1. At step 6 the UE transmitted PAGING RESPONSE (DCCH) received at the SS shall complete the test and end gracefully.

### 18.2.5.1.2 Stand-alone signalling RB for PCCH at 8 kbps

#### 18.2.5.1.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.5.1.2.2 Test Purpose

To verify establishment and data transfer of Paging 1 message which comprises IE "BCCH Modification Information", with the "Value Tag" different from the "MIB Value Tag" of the current Master Information Block. This test specified in TS 34.108, clause 6.10.3.4.4.1. The SCCPCH carries the PCH at 8 kbps.

#### 18.2.5.1.2.3 Method of Test

The contents of the System Information Block type 5 is specified in clause 8.1.2.2.

Downlink TFS for PCCH:

| | | SRBs |
|---|---|---|
| TFS | TF0, bits | 0x80 |
| | TF1, bits | 1x80 |
| | TF2, bits | 2x80 |

Downlink TFCS:

| TFCI | (SRB) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |

Sub-tests:

See 18.2.1.1 for test procedure.

#### 18.2.5.1.2.4 Test Requirements

See 18.2.1.1 for definition of step 6

1. At step 6 the UE transmitted PAGING RESPONSE (DCCH) received at the SS shall complete the test and end gracefully.

### 18.2.5.2 Interactive/Background PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.2.

This radio bearer configuration is tested with three different SYSTEM INFORMATION (BCCH) configurations:

1. The contents of System Information Block type 5 and 6 as specified in TS 34.108, clause 6.1.1(TDD FFS).

   Two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for Interactive/Background PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 18.2.5.2.1.

2. The contents of System Information Block type 5 as specified in TS 34.108, clause 6.1.3 (TDD FFS).

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for Interactive/Background PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 18.2.5.2.2.

3. The contents of System Information Block type 5 and 6 as specified in TS 34.108, clause 6.1.2 (TDD FFS).

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

   This configuration is verified in test case 18.2.5.2.3.

#### 18.2.5.2.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

##### 18.2.5.2.1.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.5.2.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.3.4.4.2 and 6.10.3.4.5.2 for the case when two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.3.4.5.2(Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

##### 18.2.5.2.1.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.1 (TDD FFS).

Uplink TFS:

| | **TFI** | **RB7+SRB (12.8 kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1 x 170 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS for SCCPCH#2:

| | TFI | RB7 (32 kbps) | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3, bits | N/A | 3x171 |
| | TF4, bits | N/A | 4x171 |

Downlink TFCS for SCCPCH#2:

| TFCI | (RB7,SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF0, TF3) |
| DL_TFC4 | (TF0, TF4) |
| DL_TFC5 | (TF1, TF0) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF1, TF2) |
| DL_TFC8 | (TF2, TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits | RB7: 312 bits |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits | RB7: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

#### 18.2.5.2.1.4 Test Requirements

See 18.2.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB7 having the same content as the DL RLC SDU sent by the SS.

### 18.2.5.2.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.2.5.2.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.5.2.2.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.3.4.4.2 and 6.10.3.4.5.2 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.3.4.5.2 (Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.2.5.2.2.3 Method of Test

The contents of System Information Block type 5 shall be as specified in TS 34.108, clause 6.1.3 (TDD FFS).

Uplink TFS:

| | **TFI** | **RB7+SRB (12.8 kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| **TFCI** | **RB7+SRB** |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS (for SCCPCH#2 & SCCPCH#3):

| | **TFI** | **RB7 (32 kbps)** | **SRBs** |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3,bits | N/A | 3x171 |
| | TF4,bits | N/A | 4x171 |

Downlink TFCS (for SCCPCH#2 & SCCPCH#3):

| **TFCI** | **(RB7,SRB)** |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF0, TF3) |
| DL_TFC4 | (TF0, TF4) |
| DL_TFC5 | (TF1, TF0) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF1, TF2) |
| DL_TFC8 | (TF2, TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits | RB7: 312 bits |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits | RB7: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

#### 18.2.5.2.2.4 Test Requirements

See 18.2.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB7 having the same content as the DL RLC SDU sent by the SS.

### 18.2.5.2.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.2.5.2.3.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.5.2.3.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.3.4.4.2 and 6.10.3.4.5.2 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.3.4.5.2 (Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.2.5.2.3.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.2 (TDD FFS).

Uplink TFS:

| | TFI | RB7+SRB (12.8 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1 x 170 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS for SCCPCH#3:

| | TFI | RB7 (32 kbps) | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3,bits | N/A | 3x171 |
| | TF4,bits | N/A | 4x171 |

Downlink TFCS for SCCPCH#3:

| TFCI | (SRB, RB7) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF0, TF3) |
| DL_TFC4 | (TF0, TF4) |
| DL_TFC5 | (TF1,TF0) |
| DL_TFC6 | (TF1,TF2) |
| DL_TFC7 | (TF1,TF3) |
| DL_TFC8 | (TF2,TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits | RB7: 312 bits |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits | RB7: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

#### 18.2.5.2.3.4 Test Requirements

See 18.2.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB7 having the same content as the DL RLC SDU sent by the SS.

### 18.2.5.2a Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.2a.

This radio bearer configuration is tested with three different SYSTEM INFORMATION (BCCH) configurations:

1. The contents of System Information Block type 5 shall be as per the message specific content below.

Two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

This configuration is verified in test case 18.2.5.2a.1.

2. The contents of System Information Block type 5 as specified in TS 34.108, clause 6.1.3.

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 18.2.5.2a.2.

3. The contents of System Information Block type 5 and 6 as specified in TS 34.108, clause 6.1.2.

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

   This configuration is verified in test case 18.2.5.2a.3.

Specific Message Content for Radio Bearer Setup message to be used for these test cases:

Use the RADIO BEARER SETUP message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - RAB information for setup | |
| - RAB info | (AM DTCH for PS domain) |
| - RAB identity | 0000 0101B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 20 |
| - PDCP Info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |

| Information Element | Value/remark |
|---|---|
| - DL DCH Transport channel identity<br>- DL DSCH Transport channel identity<br>- Logical channel identity | Not Present<br>Not Present<br>7 |
| - RAB identity | 0000 0110B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 24 |
| - PDCP info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 10 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 10 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 10 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |

| Information Element | Value/remark |
|---|---|
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 10 |

### 18.2.5.2a.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.2.5.2a.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.5.2a.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.2a and 6.10.3.4.5.3 for the case when two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.3.4.5.3.1 (Interactive/Background 12.8 kbps PS RAB + Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.2.5.2a.1.3 Method of Test

The contents of System Information Block type 5 per the specific message content below.

See 18.2.1.1 for test procedure.

NOTE The test procedure for single radio bearer configurations is used as there are no uplink transport format combinations for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | TFI | RB7+RB8+SRB (2x12.8 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | RB7 + RB8 |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS for SCCPCH#2:

| | TFI | RB7 + RB8 (2x32 kbps) | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3, bits | N/A | 3x171 |
| | TF4, bits | N/A | 4x171 |

Downlink TFCS for SCCPCH #2:

| TFCI | (RB7+RB8, SRB) |
|---|---|
| DL_TFC0 | (TF0,TF0) |
| DL_TFC1 | (TF0,TF1) |
| DL_TFC2 | (TF0,TF2) |
| DL_TFC3 | (TF0,TF3) |
| DL_TFC4 | (TF0,TF4) |
| DL_TFC5 | (TF1,TF0) |
| DL_TFC6 | (TF1,TF1) |
| DL_TFC7 | (TF1,TF2) |
| DL_TFC8 | (TF2,TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits<br>RB8: 376 bits | RB7: 312 bits<br>RB8: No Data |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits<br>RB8: 632 bits | RB7: No Data<br>RB8: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

Specific Message Contents

Use the default parameter values for the system information block 5 with the same type specified in clause

6.1.1 of TS 34.108, with the following exceptions

| Information Element | Value/remark |
|---|---|
| - SIB6 indicator | FALSE |

See 18.2.1.1 for test procedure.

#### 18.2.5.2.3.4 Test Requirements

See 18.2.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB8 having the same content as the DL RLC SDU sent by the SS.

### 18.2.5.2a.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.2.5.2a.2. 1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.5.2a.2. 2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.3.4.4.2a and 6.10.3.4.5.3 for the case when three SCCPCHs are used in this SYSTEM INFORMATION

configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.3.4.5.3.1 (Interactive/Background 12.8 kbps PS RAB + Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.2.5.2a.2.1.3 Method of Test

The contents of System Information Block type 5 shall be as specified in TS 34.108, clause 6.1.3.

See 18.2.1.1 for test procedure.

NOTE The test procedure for single radio bearer configurations is used as there are no uplink transport format combinations for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | **TFI** | **RB7 + RB8 (2x12.8 kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| **TFCI** | **RB7 + RB8** |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | **TFI** | **RB7 + RB8 (2x32 kbps)** | **SRBs** |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3, bits | N/A | 3x171 |
| | TF4, bits | N/A | 4x171 |

Downlink TFCS for SCCPCH#2 & #3:

| **TFCI** | **(SRB, RB7+RB8)** |
|---|---|
| DL_TFC0 | (TF0,TF0) |
| DL_TFC1 | (TF0,TF1) |
| DL_TFC2 | (TF0,TF2) |
| DL_TFC3 | (TF0,TF3) |
| DL_TFC4 | (TF0,TF4) |
| DL_TFC5 | (TF1,TF0) |
| DL_TFC6 | (TF1,TF1) |
| DL_TFC7 | (TF1,TF2) |
| DL_TFC8 | (TF2,TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits<br>RB8: 376 bits | RB7: 312 bits<br>RB8: No Data |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits<br>RB8: 632 bits | RB7: No Data<br>RB8: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

#### 18.2.5.2.3.4 Test Requirements

See 18.2.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB8 having the same content as the DL RLC SDU sent by the SS.

### 18.2.5.2a.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.2.5.2a.3.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.5.2a.3. 2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.2.4.3.2 and 6.10.2.4.4.2 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.2.4.4.2 (Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.2.5.2a.3.1.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.2.

See 18.2.1.1 for test procedure.

NOTE The test procedure for single radio bearer configurations is used as there are no uplink transport format combinations for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | TFI | RB7+RB8+SRB (2x12.8 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | RB7 + RB8 |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS for SCCPCH #3:

| | TFI | RB7 + RB8 (2x32 kbps) | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3, bits | N/A | 3x171 |
| | TF4, bits | N/A | 4x171 |

Downlink TFCS for third SCCPCH:

| TFCI | (SRB, RB7+RB8) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0,TF1) |
| DL_TFC2 | (TF0,TF2) |
| DL_TFC3 | (TF0,TF3) |
| DL_TFC4 | (TF0,TF4) |
| DL_TFC5 | (TF1,TF0) |
| DL_TFC6 | (TF1,TF1) |
| DL_TFC7 | (TF1,TF2) |
| DL_TFC8 | (TF2,TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits<br>RB8: 376 bits | RB7: 312 bits<br>RB8: No Data |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits<br>RB8: 632 bits | RB7: No Data<br>RB8: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

#### 18.2.5.2.3.4 Test Requirements

See 18.2.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.

- for sub-test 2: an RLC SDU on RB8 having the same content as the DL RLC SDU sent by the SS.

## 18.2.5.2b SRBs for CCCH + SRB for DCCH + SRB for BCCH

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.2b.

This radio bearer configuration is tested with one SYSTEM INFORMATION (BCCH) configuration:

1. The contents of System Information Block type 5 and 6 as specified in TS 34.108, clause 6.1.1 (TDD FSS).

   Two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for SRBs on CCCH/ DCCH/ BCCH.

### 18.2.5.2b.1 Conformance requirement

See 18.2.2.4.1.

### 18.2.5.2b.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.2b and 6.10.3.4.5.1 for the case when one SCCPCH is used in this SYSTEM INFORMATION configuration. The SCCPCH carries the FACH for SRBs on CCCH/ DCCH/ BCCH.

### 18.2.5.2b.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.1(TDD FSS).

See 18.2.1.1 for test procedure.

NOTE The test procedure for single radio bearer configurations is used as there are no uplink transport format combinations for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | **TFI** | **SRB** |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| **TFCI** | **SRB** |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS for SCCPCH:

| | **TFI** | **SRBs** |
|---|---|---|
| TFS | TF0, bits | 0x171 |
| | TF1, bits | 1x171 |
| | TF2, bits | 2x171 |
| | TF3, bits | 3x171 |
| | TF4, bits | 4x171 |

Downlink TFCS for SCCPCH:

| TFCI | (SRB) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |

#### 18.2.5.2b.4 Test Requirements

See 18.2.1.1 for definition of step 6

1. At step 6 the UE transmitted PAGING RESPONSE (DCCH) received at the SS shall complete the test and end gracefully.

### 18.2.5.3 Interactive/Background RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH

#### 18.2.5.3.1 Interactive/Background 32 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH

##### 18.2.5.3.1.1 Conformance requirement

See 18.2.2.4.1.

##### 18.2.5.3.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.3.4.4.3 and 6.10.3.4.5.2 for the case when one SCCPCH is used in this SYSTEM INFORMATION (BCCH) configuration. The SCCPCH carries the PCH, the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.3.4.5.2 (Interactive/Background - 12.2 kbps) PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

##### 18.2.5.3.1.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.0b.

Uplink TFS:

| | TFI | RB8 (12.8 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | RB8 |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | TFI | RB8 (32 kbps) | PCCH | SRBs |
|---|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x240 | 0x171 |
| | TF1, bits | 1x363 | 1x240 | 1x171 |
| | TF2, bits | 2x363 | N/A | 2x171 |
| | TF3, bits | N/A | N/A | 3x171 |
| | TF4, bits | N/A | N/A | 4x171 |

Downlink TFCS:

| TFCI | (RB8, PCCH, SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0), |
| DL_TFC1 | (TF0, TF0, TF1), |
| DL_TFC2 | (TF0, TF0, TF2), |
| DL_TFC3 | (TF0, TF0, TF3), |
| DL_TFC4 | (TF0, TF0, TF4), |
| DL_TFC5 | (TF0, TF1, TF0), |
| DL_TFC6 | (TF0, TF1, TF1), |
| DL_TFC7 | (TF0, TF1, TF2), |
| DL_TFC8 | (TF0, TF1, TF3), |
| DL_TFC9 | (TF0, TF1, TF4), |
| DL_TFC10 | (TF1, TF0, TF0), |
| DL_TFC11 | (TF1, TF0, TF1), |
| DL_TFC12 | (TF1, TF0, TF2), |
| DL_TFC13 | (TF1, TF0, TF3), |
| DL_TFC14 | (TF1, TF0, TF4), |
| DL_TFC15 | (TF1, TF1, TF0), |
| DL_TFC16 | (TF1, TF1, TF1), |
| DL_TFC17 | (TF1, TF1, TF2), |
| DL_TFC18 | (TF1, TF1, TF3), |
| DL_TFC19 | (TF1, TF1, TF4), |
| DL_TFC20 | (TF2, TF0, TF0), |
| DL_TFC21 | (TF2, TF0, TF1), |
| DL_TFC22 | (TF2, TF0, TF2), |
| DL_TFC23 | (TF2, TF0, TF3), |
| DL_TFC24 | (TF2, TF0, TF4), |
| DL_TFC25 | (TF2, TF1, TF0), |
| DL_TFC26 | (TF2, TF1, TF1), |
| DL_TFC27 | (TF2, TF1, TF2), |
| DL_TFC28 | (TF2, TF1, TF3), |
| DL_TFC29 | (TF2, TF1, TF4) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (note) | Test data size (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC20 | UL_TFC1 | DL_TFC0, UL_TFC0 | UL_TFC0 | RB8:632 bits | RB8: 632 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

See 18.2.1.1 for test procedure.

#### 18.2.5.3.1.4 Test requirements

See 18.2.1.1 for definition of step 15

1. At step 15 the UE shall return an RLC SDU on RB8 having the same content as sent by SS

### 18.2.5.3.2 Interactive/Background 16 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH

#### 18.2.5.3.2.1 Conformance requirement

See 18.2.2.4.1.

18.2.5.3.2.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.3.4.4.3 and 6.10.3.4.5.2 for the case when one SCCPCH is used in this SYSTEM INFORMATION (BCCH) configuration. The SCCPCH carries the PCH, the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.3.4.5.2 (Interactive/Background - 12.2 kbps) PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

18.2.5.3.2.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.0b.

Uplink TFS:

| | **TFI** | **RB8 (12.8 kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| **TFCI** | **RB8** |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | **TFI** | **RB8 (32 kbps)** | **PCCH** | **SRBs** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x80 | 0x171 |
| | TF1, bits | 1x363 | 1x80 | 1x171 |
| | TF2, bits | N/A | 2x80 | 2x171 |

Downlink TFCS:

| **TFCI** | **(SRB, PCCH,RB8)** |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0), |
| DL_TFC1 | (TF0, TF0, TF1), |
| DL_TFC2 | (TF0, TF0, TF2), |
| DL_TFC3 | (TF0, TF1, TF0), |
| DL_TFC4 | (TF0, TF1, TF1), |
| DL_TFC5 | (TF0, TF2, TF0), |
| DL_TFC6 | (TF0, TF2, TF1), |
| DL_TFC7 | (TF1, TF0, TF0) |

Sub-tests:

| **Sub-test** | **Downlink TFCS under test** | **Uplink TFCS Under test** | **Implicitly tested** | **Restricted UL TFCIs** | **UL RLC SDU size (note)** | **Test data size (note)** |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0, UL_TFC0 | UL_TFC0 | RB8: 376 bits | RB8: 312 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.2.1.1 for test procedure.

#### 18.2.5.3.2.4 Test requirements

See 18.2.1.1 for definition of step 15

1. At step 15 the UE shall return an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.

## 18.2.5.3a SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH

### 18.2.5.3a.1 SRBs for PCCH at 12 kbps + SRB for CCCH + SRB for DCCH + SRB for BCCH at 32 kbps

#### 18.2.5.3a.1.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.5.3a.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause for the case when one SCCPCH is used in this SYSTEM INFORMATION (BCCH) configuration. The SCCPCH carries the PCH at 12 kbps and the FACH for SRBs on CCCH/ DCCH/ BCCH at 32 kbps.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.3.4.5.1 (SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.2.5.3a.1.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.0b.

Uplink TFS:

| | TFI | SRB |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | SRB |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | TFI | PCCH | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x240 | 0x171 |
| | TF1, bits | 1x240 | 1x171 |
| | TF2, bits | N/A | 2x171 |
| | TF3,bits | N/A | 3x171 |
| | TF4,bits | N/A | 4x171 |

Downlink TFCS:

| TFCI | (PCCH, SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF0, TF3) |
| DL_TFC4 | (TF0, TF4) |
| DL_TFC5 | (TF1, TF0) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF1, TF2) |
| DL_TFC8 | (TF1, TF3) |
| DL_TFC9 | (TF1, TF4) |

Sub-tests:

See 18.2.1.1 for test procedure.

#### 18.2.5.3a.1.4 Test requirements

See 18.2.1.1 for definition of step 6x

1. At step 6x the UE transmitted SECURITY MODE COMPLETE (DCCH) received at the SS shall complete the test and end gracefully.

### 18.2.5.3a.2 SRBs for PCCH at 8 kbps kbps + SRB for CCCH + SRB for DCCH + SRB for BCCH at 16 kbps

#### 18.2.5.3a.2.1 Conformance requirement

See 18.2.2.4.1.

#### 18.2.5.3a.2.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause for the case when one SCCPCH is used in this SYSTEM INFORMATION (BCCH) configuration. The SCCPCH carries the PCH at 8 kbps and the FACH for SRBs on CCCH/ DCCH/ BCCH at 16 kbps.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.3.4.5.1 (SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.2.5.3a.2.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.0b.

Uplink TFS:

| | TFI | SRB |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | SRB |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | TFI | PCCH | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x80 | 0x171 |
| | TF1, bits | 1x80 | 1x171 |
| | TF2, bits | 2x80 | 2x171 |

Downlink TFCS:

| TFCI | (PCCH, SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF1, TF0) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF0) |
| DL_TFC6 | (TF2, TF1) |

Sub-tests:

See 18.2.1.1 for test procedure.

#### 18.2.5.3a.2.4 Test requirements

See 18.2.1.1 for definition of step 6x

1. At step 6x the UE transmitted SECURITY MODE COMPLETE (DCCH) received at the SS shall complete the test and end gracefully.

### 18.2.5.4 RB for CTCH + SRB for CCCH +SRB for BCCH.

#### 18.2.5.4.1 Definition and applicability

Applicable only for a UE supporting Cell Broadcast Services (CBS) as a type of Broadcast/Multicast Services.

It shall be possible to indicate the reception of certain CBS message contents carried with certain activated CG message types in a clear way on UE side.

#### 18.2.5.4.2 Conformance Requirement

See 18.2.2.4.1 and 7.4.2.1.2.

#### 18.2.5.4.3 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.4 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.3.4.4.3. Data transfer on CTCH is tested similar to testing BMC for a UE in idle mode as specified in TS 34.123-1, clause 7.4.2, data transfer on CCCH is tested by establishing a RRC connection.

#### 18.2.5.4.4 Method of Test

Initial conditions:

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.2.

The UE is RRC idle mode, the BMC entity is established.

The CB message ID stored on the SIM shall be known for this test (parameter for CBS PDUs). The CBS data type shall be allocated and activated in the UE.

Related ICS/IXIT Statement(s):

As in clause 7.4.2.1.4

Uplink TFS:

| | TFI | RB7+SRB (32 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | TFI | RB7 (16 kbps on CTCH) | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x163 | 0x171 |
| | TF1, bits | 1x163 | 1x171 |
| | TF2, bits | 2x163 | 2x171 |

Downlink TFCS:

| TFCI | (RB7, SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF1, TF0) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF0) |

Test Procedure:

a) The UE in RRC Idle mode is triggered to wait for the next system information. The UE is activated to receive CBS messages.

b) The UE and the SS have configured their RLC, MAC, and PHYs layers with all CB related system information.

c) The SS sends the CVS message containing an activated CGS message type accroding to CB-Data 1 to the UE; this shall be repeated for CPREP times (indicated by the parameter "repetition period").

d) The UE indicates in an unambigous way, that this message was received.

e) Steps 1a → 1d in the Expected sequence are followed by the steps 2 – 6 of the test procedure according to clause 18.2.1.1.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1a | ← | | SYSTEM INFORMATION | |
| 1b | | | | The SS waits for about 10 s to make sure, that the UE is configured to receive CBS data |
| 1c | ← | | BMC CBS Message | Activated CBS message with CB Data 1 message content as described by the manufacturer. This message shall be repeated "CPREP" times, Parameter:<br>- Message_ID,<br>- Serial-No,<br>- Data coding scheme,<br>- CB-Data 1, |
| 1d | | | | After having received the BMC CBS message the UE shall indicate the reception of CB Data 1 in a clear way. |

#### 18.2.5.4.5 Test Requirements

At step 1d in the table above, the UE shall store and decode a received activated CBS message.

At step 5 of the test procedure according to clause 18.2.1.1 the RRC Connection shall be established.

### 18.2.5.5 64.8kbps RB for MTCH with 80 ms TTI

#### 18.2.5.5.1 Conformance Requirement

The UE shall correctly receive user data on the MTCH from the peer to peer RLC entitity according to the configured MTCH.

Reference(s)

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

3GPP TS 25.331 (RRC)

#### 18.2.5.5.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.5.

#### 18.2.5.5.3 Method of Test

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (64.8 kbps) |
|---|---|---|
| TFS | TF0, bits | 0x665 |
| | TF1, bits | 1x665 |
| | TF2, bits | 2x665 |
| | TF3, bits | 3x665 |
| | TF4, bits | 4x665 |
| | TF5, bits | 5x665 |
| | TF6, bits | 6x665 |
| | TF7, bits | 7x665 |
| | TF8, bits | 8x665 |

Downlink TFCS:

| TFCI | RB for MTCH (64.8 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.2.5.5.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

### 18.2.5.6 129.6 kbps RB for MTCH with 80 ms TTI

#### 18.2.5.6.1 Conformance Requirement

See 18.2.5.5.1.

#### 18.2.5.6.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.6.

#### 18.2.5.6.3 Method of Test

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (129.6 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x664 |
| | TF1, bits | 1x664 |
| | TF2, bits | 2x664 |
| | TF3, bits | 3x664 |
| | TF4, bits | 4x664 |
| | TF5, bits | 5x664 |
| | TF6, bits | 6x664 |
| | TF7, bits | 7x664 |
| | TF8, bits | 8x664 |
| | TF9, bits | 9x664 |
| | TF10, bits | 10x664 |
| | TF11, bits | 11x664 |
| | TF12, bits | 12x664 |
| | TF13, bits | 13x664 |
| | TF14, bits | 14x664 |
| | TF15, bits | 15x664 |
| | TF16, bits | 16x664 |

Downlink TFCS:

| TFCI | RB for MTCH (129.6 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |
| DL_TFC9 | (TF9) |
| DL_TFC10 | (TF10) |
| DL_TFC11 | (TF11) |
| DL_TFC12 | (TF12) |
| DL_TFC13 | (TF13) |
| DL_TFC14 | (TF14) |
| DL_TFC15 | (TF15) |
| DL_TFC16 | (TF16) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| 9 | DL_TFC9 | DL_TFC0 | 5824 |
| 10 | DL_TFC10 | DL_TFC0 | 6472 |
| 11 | DL_TFC11 | DL_TFC0 | 7120 |
| 12 | DL_TFC12 | DL_TFC0 | 7768 |
| 13 | DL_TFC13 | DL_TFC0 | 8416 |
| 14 | DL_TFC14 | DL_TFC0 | 9064 |
| 15 | DL_TFC15 | DL_TFC0 | 9712 |
| 16 | DL_TFC16 | DL_TFC0 | 10360 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.2.5.6.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

### 18.2.5.7 259.2 kbps RB for MTCH with 40 ms TTI

#### 18.2.5.7.1 Conformance Requirement

See 18.2.5.5.1.

#### 18.2.5.7.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.7.

#### 18.2.5.7.3 Method of Test

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (259.2 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x665 |
| | TF1, bits | 1x665 |
| | TF2, bits | 2x665 |
| | TF3, bits | 3x665 |
| | TF4, bits | 4x665 |
| | TF5, bits | 5x665 |
| | TF6, bits | 6x665 |
| | TF7, bits | 7x665 |
| | TF8, bits | 8x665 |
| | TF9, bits | 9x665 |
| | TF10, bits | 10x665 |
| | TF11, bits | 11x665 |
| | TF12, bits | 12x665 |
| | TF13, bits | 13x665 |
| | TF14, bits | 14x665 |
| | TF15, bits | 15x665 |
| | TF16, bits | 16x665 |

Downlink TFCS:

| TFCI | RB for MTCH (259.2 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |
| DL_TFC9 | (TF9) |
| DL_TFC10 | (TF10) |
| DL_TFC11 | (TF11) |
| DL_TFC12 | (TF12) |
| DL_TFC13 | (TF13) |
| DL_TFC14 | (TF14) |
| DL_TFC15 | (TF15) |
| DL_TFC16 | (TF16) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| 9 | DL_TFC9 | DL_TFC0 | 5824 |
| 10 | DL_TFC10 | DL_TFC0 | 6472 |
| 11 | DL_TFC11 | DL_TFC0 | 7120 |
| 12 | DL_TFC12 | DL_TFC0 | 7768 |
| 13 | DL_TFC13 | DL_TFC0 | 8416 |
| 14 | DL_TFC14 | DL_TFC0 | 9064 |
| 15 | DL_TFC15 | DL_TFC0 | 9712 |
| 16 | DL_TFC16 | DL_TFC0 | 10360 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.2.5.7.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

### 18.2.5.8 124.4kbps RB for MBSFN MTCH with 80 ms TTI

#### 18.2.5.8.1 Conformance Requirement

The UE shall correctly receive user data on the MTCH from the peer to peer RLC entitity according to the configured MTCH.

Reference(s)

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

3GPP TS 25.331 (RRC)

#### 18.2.5.8.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.9.

#### 18.2.5.8.3 Method of Test

See subclause 18.2.1.6 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (124.4 kbps) |
|---|---|---|
| TFS | TF0, bits | 0x4993 |
| | TF1, bits | 1x4993 |
| | TF2, bits | 2x4993 |

Downlink TFCS:

| TFCI | RB for MTCH (124.4 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 4960 |
| 2 | DL_TFC2 | DL_TFC0 | 9936 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 16 bits (size of 15 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.2.5.8.4 Test Requirements

See subclause 18.2.1.6 for definition of steps 9 and 13.

1. For the first sub-test: At step 9 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 13 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 18.2.1.6 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

### 18.2.5.9 320.4kbps RB for MBSFN MTCH with 80 ms TTI

#### 18.2.5.9.1 Conformance Requirement

See 18.2.5.8.1.

#### 18.2.5.9.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.10.

#### 18.2.5.9.3 Method of Test

See subclause 18.2.1.6 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (320.4 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x4289 |
| | TF1, bits | 1x4289 |
| | TF2, bits | 6x4289 |

Downlink TFCS:

| TFCI | RB for MTCH (320.4 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 4256 |
| 2 | DL_TFC2 | DL_TFC0 | 25616 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 16 bits (size of 15 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.2.5.9.4 Test Requirements

See subclause 18.2.1.6 for definition of steps 9 and 13.

1. For the first sub-test: At step 9 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 13 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 18.2.1.6 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

### 18.2.5.10 497.6kbps RB for MBSFN MTCH with 80 ms TTI

#### 18.2.5.10.1 Conformance Requirement

See 18.2.5.8.1.

#### 18.2.5.10.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.11.

#### 18.2.5.10.3 Method of Test

See subclause 18.2.1.6 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (497.6 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x4993 |
| | TF1, bits | 1x4993 |
| | TF2, bits | 8x4993 |

Downlink TFCS:

| TFCI | RB for MTCH (497.6 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (note 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 4960 |
| 2 | DL_TFC2 | DL_TFC0 | 39792 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 16 bits (size of 15 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.2.5.10.4 Test Requirements

See subclause 18.2.1.6 for definition of steps 9 and 13.

1. For the first sub-test: At step 9 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 13 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 18.2.1.6 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

## 18.2.6 Combinations on PRACH

### 18.2.6.1 SRB for CCCH + SRB for DCCH

The reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.5.1 is implicitly tested by the test cases 18.2.5.2b.1.

### 18.2.6.2 Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH

The reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.5.2 is implicitly tested by the test cases 18.2.5.2.1, 18.2.5.2.2, 18.2.5.2.3 and 18.2.5.3.

### 18.2.6.3 Interactive/Background 12.8 kbps PS RAB + Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH

The reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.5.3 is implicitly tested by the test cases 18.2.5.2a.1, 18.2.5.2a.2 and 18.2.5.2a.3.

## 18.2.7 Combinations on DPCH and HS-PDSCH

### 18.2.7.1 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.7.1.1 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size

##### 18.2.7.1.1.1 Conformance requirement

For HS-DSCH the transport block size is derived from the value signalled on the HS-SCCH. The mapping between the TFRI value and the transport block size for each mode is specified below:

Let $k$ be the signalled TFRI value, then the corresponding HS-DSCH transport block size $L_k$ is given by :

If $k$=1..510

$$L_k = \lfloor L_{\min} p^k \rfloor$$

$$p = \frac{8313}{8192}$$

$$L_{\min} = 57$$

If $k$ = 511

$L_k$ = 102000

If $k$=0, $L_k$ indicates NULL and shall not be used to signal a transport block size in the TFRI.

Transport block sizes calculated by this formula shall equal the values indicated in Table 18.2.7.1.1.1.1

**Table 18.2.7.1.1.1.1: HSDPA Transport Block Sizes for 3.84 Mcps TDD**

| TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] |
|---|---|---|---|---|---|---|---|
| 0 | NULL | 128 | 372 | 256 | 2432 | 384 | 15890 |
| 1 | 57 | 129 | 377 | 257 | 2468 | 385 | 16124 |
| 2 | 58 | 130 | 383 | 258 | 2504 | 386 | 16362 |
| 3 | 59 | 131 | 389 | 259 | 2541 | 387 | 16604 |
| 4 | 60 | 132 | 394 | 260 | 2579 | 388 | 16849 |
| 5 | 61 | 133 | 400 | 261 | 2617 | 389 | 17098 |
| 6 | 62 | 134 | 406 | 262 | 2656 | 390 | 17351 |
| 7 | 63 | 135 | 412 | 263 | 2695 | 391 | 17607 |
| 8 | 64 | 136 | 418 | 264 | 2735 | 392 | 17867 |
| 9 | 65 | 137 | 424 | 265 | 2775 | 393 | 18131 |
| 10 | 66 | 138 | 431 | 266 | 2816 | 394 | 18399 |
| 11 | 66 | 139 | 437 | 267 | 2858 | 395 | 18671 |
| 12 | 67 | 140 | 443 | 268 | 2900 | 396 | 18946 |
| 13 | 68 | 141 | 450 | 269 | 2943 | 397 | 19226 |
| 14 | 69 | 142 | 457 | 270 | 2986 | 398 | 19510 |
| 15 | 71 | 143 | 463 | 271 | 3030 | 399 | 19798 |
| 16 | 72 | 144 | 470 | 272 | 3075 | 400 | 20091 |
| 17 | 73 | 145 | 477 | 273 | 3121 | 401 | 20388 |
| 18 | 74 | 146 | 484 | 274 | 3167 | 402 | 20689 |
| 19 | 75 | 147 | 491 | 275 | 3213 | 403 | 20994 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 20 | 76 | 148 | 499 | 276 | 3261 | 404 | 21304 |
| 21 | 77 | 149 | 506 | 277 | 3309 | 405 | 21619 |
| 22 | 78 | 150 | 514 | 278 | 3358 | 406 | 21938 |
| 23 | 79 | 151 | 521 | 279 | 3408 | 407 | 22263 |
| 24 | 81 | 152 | 529 | 280 | 3458 | 408 | 22591 |
| 25 | 82 | 153 | 537 | 281 | 3509 | 409 | 22925 |
| 26 | 83 | 154 | 545 | 282 | 3561 | 410 | 23264 |
| 27 | 84 | 155 | 553 | 283 | 3613 | 411 | 23607 |
| 28 | 85 | 156 | 561 | 284 | 3667 | 412 | 23956 |
| 29 | 87 | 157 | 569 | 285 | 3721 | 413 | 24310 |
| 30 | 88 | 158 | 578 | 286 | 3776 | 414 | 24669 |
| 31 | 89 | 159 | 586 | 287 | 3832 | 415 | 25033 |
| 32 | 91 | 160 | 595 | 288 | 3888 | 416 | 25403 |
| 33 | 92 | 161 | 604 | 289 | 3946 | 417 | 25778 |
| 34 | 93 | 162 | 613 | 290 | 4004 | 418 | 26159 |
| 35 | 95 | 163 | 622 | 291 | 4063 | 419 | 26545 |
| 36 | 96 | 164 | 631 | 292 | 4123 | 420 | 26938 |
| 37 | 98 | 165 | 640 | 293 | 4184 | 421 | 27335 |
| 38 | 99 | 166 | 650 | 294 | 4246 | 422 | 27739 |
| 39 | 100 | 167 | 659 | 295 | 4309 | 423 | 28149 |
| 40 | 102 | 168 | 669 | 296 | 4372 | 424 | 28565 |
| 41 | 103 | 169 | 679 | 297 | 4437 | 425 | 28987 |
| 42 | 105 | 170 | 689 | 298 | 4502 | 426 | 29415 |
| 43 | 107 | 171 | 699 | 299 | 4569 | 427 | 29849 |
| 44 | 108 | 172 | 709 | 300 | 4636 | 428 | 30290 |
| 45 | 110 | 173 | 720 | 301 | 4705 | 429 | 30738 |
| 46 | 111 | 174 | 730 | 302 | 4774 | 430 | 31192 |
| 47 | 113 | 175 | 741 | 303 | 4845 | 431 | 31652 |
| 48 | 115 | 176 | 752 | 304 | 4916 | 432 | 32120 |
| 49 | 116 | 177 | 763 | 305 | 4989 | 433 | 32594 |
| 50 | 118 | 178 | 775 | 306 | 5063 | 434 | 33076 |
| 51 | 120 | 179 | 786 | 307 | 5138 | 435 | 33564 |
| 52 | 122 | 180 | 798 | 308 | 5213 | 436 | 34060 |
| 53 | 123 | 181 | 809 | 309 | 5290 | 437 | 34563 |
| 54 | 125 | 182 | 821 | 310 | 5369 | 438 | 35074 |
| 55 | 127 | 183 | 834 | 311 | 5448 | 439 | 35592 |
| 56 | 129 | 184 | 846 | 312 | 5528 | 440 | 36117 |
| 57 | 131 | 185 | 858 | 313 | 5610 | 441 | 36651 |
| 58 | 133 | 186 | 871 | 314 | 5693 | 442 | 37192 |
| 59 | 135 | 187 | 884 | 315 | 5777 | 443 | 37742 |
| 60 | 137 | 188 | 897 | 316 | 5862 | 444 | 38299 |
| 61 | 139 | 189 | 910 | 317 | 5949 | 445 | 38865 |
| 62 | 141 | 190 | 924 | 318 | 6037 | 446 | 39439 |
| 63 | 143 | 191 | 937 | 319 | 6126 | 447 | 40021 |
| 64 | 145 | 192 | 951 | 320 | 6217 | 448 | 40613 |
| 65 | 147 | 193 | 965 | 321 | 6308 | 449 | 41212 |
| 66 | 150 | 194 | 980 | 322 | 6402 | 450 | 41821 |
| 67 | 152 | 195 | 994 | 323 | 6496 | 451 | 42439 |
| 68 | 154 | 196 | 1009 | 324 | 6592 | 452 | 43066 |
| 69 | 156 | 197 | 1024 | 325 | 6689 | 453 | 43702 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 70 | 159 | 198 | 1039 | 326 | 6788 | 454 | 44347 |
| 71 | 161 | 199 | 1054 | 327 | 6889 | 455 | 45002 |
| 72 | 163 | 200 | 1070 | 328 | 6990 | 456 | 45667 |
| 73 | 166 | 201 | 1085 | 329 | 7094 | 457 | 46342 |
| 74 | 168 | 202 | 1101 | 330 | 7198 | 458 | 47026 |
| 75 | 171 | 203 | 1118 | 331 | 7305 | 459 | 47721 |
| 76 | 173 | 204 | 1134 | 332 | 7413 | 460 | 48426 |
| 77 | 176 | 205 | 1151 | 333 | 7522 | 461 | 49141 |
| 78 | 178 | 206 | 1168 | 334 | 7633 | 462 | 49867 |
| 79 | 181 | 207 | 1185 | 335 | 7746 | 463 | 50603 |
| 80 | 184 | 208 | 1203 | 336 | 7860 | 464 | 51351 |
| 81 | 186 | 209 | 1221 | 337 | 7976 | 465 | 52109 |
| 82 | 189 | 210 | 1239 | 338 | 8094 | 466 | 52879 |
| 83 | 192 | 211 | 1257 | 339 | 8214 | 467 | 53660 |
| 84 | 195 | 212 | 1276 | 340 | 8335 | 468 | 54453 |
| 85 | 198 | 213 | 1294 | 341 | 8458 | 469 | 55257 |
| 86 | 201 | 214 | 1313 | 342 | 8583 | 470 | 56073 |
| 87 | 204 | 215 | 1333 | 343 | 8710 | 471 | 56901 |
| 88 | 207 | 216 | 1353 | 344 | 8839 | 472 | 57742 |
| 89 | 210 | 217 | 1373 | 345 | 8969 | 473 | 58595 |
| 90 | 213 | 218 | 1393 | 346 | 9102 | 474 | 59460 |
| 91 | 216 | 219 | 1413 | 347 | 9236 | 475 | 60338 |
| 92 | 219 | 220 | 1434 | 348 | 9373 | 476 | 61230 |
| 93 | 222 | 221 | 1456 | 349 | 9511 | 477 | 62134 |
| 94 | 226 | 222 | 1477 | 350 | 9652 | 478 | 63052 |
| 95 | 229 | 223 | 1499 | 351 | 9794 | 479 | 63983 |
| 96 | 232 | 224 | 1521 | 352 | 9939 | 480 | 64928 |
| 97 | 236 | 225 | 1543 | 353 | 10086 | 481 | 65887 |
| 98 | 239 | 226 | 1566 | 354 | 10235 | 482 | 66860 |
| 99 | 243 | 227 | 1589 | 355 | 10386 | 483 | 67848 |
| 100 | 246 | 228 | 1613 | 356 | 10539 | 484 | 68850 |
| 101 | 250 | 229 | 1637 | 357 | 10695 | 485 | 69867 |
| 102 | 254 | 230 | 1661 | 358 | 10853 | 486 | 70899 |
| 103 | 258 | 231 | 1685 | 359 | 11013 | 487 | 71946 |
| 104 | 261 | 232 | 1710 | 360 | 11176 | 488 | 73009 |
| 105 | 265 | 233 | 1736 | 361 | 11341 | 489 | 74087 |
| 106 | 269 | 234 | 1761 | 362 | 11508 | 490 | 75182 |
| 107 | 273 | 235 | 1787 | 363 | 11678 | 491 | 76292 |
| 108 | 277 | 236 | 1814 | 364 | 11851 | 492 | 77419 |
| 109 | 281 | 237 | 1840 | 365 | 12026 | 493 | 78563 |
| 110 | 285 | 238 | 1868 | 366 | 12204 | 494 | 79723 |
| 111 | 290 | 239 | 1895 | 367 | 12384 | 495 | 80901 |
| 112 | 294 | 240 | 1923 | 368 | 12567 | 496 | 82095 |
| 113 | 298 | 241 | 1952 | 369 | 12752 | 497 | 83308 |
| 114 | 303 | 242 | 1981 | 370 | 12941 | 498 | 84539 |
| 115 | 307 | 243 | 2010 | 371 | 13132 | 499 | 85787 |
| 116 | 312 | 244 | 2039 | 372 | 13326 | 500 | 87054 |
| 117 | 316 | 245 | 2070 | 373 | 13523 | 501 | 88340 |
| 118 | 321 | 246 | 2100 | 374 | 13722 | 502 | 89645 |
| 119 | 326 | 247 | 2131 | 375 | 13925 | 503 | 90969 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 120 | 331 | 248 | 2163 | 376 | 14131 | 504 | 92313 |
| 121 | 336 | 249 | 2195 | 377 | 14340 | 505 | 93676 |
| 122 | 340 | 250 | 2227 | 378 | 14551 | 506 | 95060 |
| 123 | 346 | 251 | 2260 | 379 | 14766 | 507 | 96464 |
| 124 | 351 | 252 | 2293 | 380 | 14984 | 508 | 97889 |
| 125 | 356 | 253 | 2327 | 381 | 15206 | 509 | 99335 |
| 126 | 361 | 254 | 2362 | 382 | 15430 | 510 | 100802 |
| 127 | 366 | 255 | 2397 | 383 | 15658 | 511 | 102000 |

Reference(s)

3GPP TS 25.321 Section 9.2.3.2

#### 18.2.7.1.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.1 for the UL 336 bit block size case.

#### 18.2.7.1.1.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 3 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 3 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 3 | 256 | 256 | | | | | |
| | 6 | 3 | 256 | 256 | | | | | |
| | 7 | 3 | 512 | 512 | | | | | |
| | 8 | 3 | 512 | 512 | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 |
| | 2 | 3 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.2.7.1.1.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).

- for sub-test 2: TF2 (2x336).
- for sub-test 3: TF3 (3x336).
- for sub-test 4: TF4 (4x336).

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.1.2 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size

#### 18.2.7.1.2.1 Conformance requirement

See 18.2.7.1.1.1

#### 18.2.7.1.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.1 for the UL 144 bit block size case.

#### 18.2.7.1.2.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 120 |
| | 2 | 3 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 376 |
| | 2 | 3 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 3 | 256 | 256 | | | | | |
| | 6 | 3 | 256 | 256 | | | | | |
| | 7 | 3 | 512 | 512 | | | | | |
| | 8 | 3 | 512 | 512 | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 888 |
| | 2 | 3 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.2.7.1.2.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x144).

- for sub-test 2: TF2 (3x144).
- for sub-test 3: TF3 (7x144).
- for sub-test 4: TF4 (10x144).

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 18.2.7.2 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.7.2.1 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size

#### 18.2.7.2.1.1 Conformance requirement

See 18.2.7.1.1.1.

#### 18.2.7.2.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.2 for the UL 336 bit block size case.

#### 18.2.7.2.1.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 3 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 3 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 3 | 256 | 256 | | | | | |
| | 6 | 3 | 256 | 256 | | | | | |
| | 7 | 3 | 512 | 512 | | | | | |
| | 8 | 3 | 512 | 512 | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 |
| | 2 | 3 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

### 18.2.7.2.1.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).

- for sub-test 2: TF2 (2x336).
- for sub-test 3: TF3 (4x336).
- for sub-test 4: TF4 (8x336).

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.2.2 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size

#### 18.2.7.2.2.1 Conformance requirement

See 18.2.7.1.1.1.

#### 18.2.7.2.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.2 for the UL 144 bit block size case.

#### 18.2.7.2.2.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 7x144 | N/A |
| | TF3, bits | 14x144 | N/A |
| | TF4, bits | 20x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 120 |
| | 2 | 3 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 888 |
| | 2 | 3 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 3 | 256 | 256 | | | | | |
| | 6 | 3 | 256 | 256 | | | | | |
| | 7 | 3 | 512 | 512 | | | | | |
| | 8 | 3 | 512 | 512 | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 |
| | 2 | 3 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.2.7.2.2.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x144).

- for sub-test 2: TF2 (7x144).
- for sub-test 3: TF3 (14x144).
- for sub-test 4: TF4 (20x144).

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 18.2.7.3 Interactive or background / UL:384 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.7.3.1 Conformance requirement

See 18.2.7.1.1.1.

### 18.2.7.3.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.3.

### 18.2.7.3.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Transmission window size (note 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 |
| | 2 | 3 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 |
| | 2 | 3 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 3 | 256 | 256 | | | | | |
| | 6 | 3 | 256 | 256 | | | | | |
| | 7 | 3 | 512 | 512 | | | | | |
| | 8 | 3 | 512 | 512 | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 |
| | 2 | 3 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |
| 5 | 1 | 8 | 256 | 256 | 656 | UL_TFC5 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 3832 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

### 18.2.7.3.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (4x336).
   - for sub-test 4: TF4 (8x336).
   - for sub-test 5: TF5 (12x336).
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 18.2.7.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.2.7.4.1 Conformance requirement

See 18.2.7.1.1.1.

### 18.2.7.4.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.4.

### 18.2.7.4.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (384 kbps, 10 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| UL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| UL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| UL_TFC18 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC30 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC31 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC32 | (TF2, TF1, TF1, TF4, TF1) |
| UL_TFC33 | (TF0, TF0, TF0, TF5, TF1) |
| UL_TFC34 | (TF1, TF0, TF0, TF5, TF1) |
| UL_TFC35 | (TF2, TF1, TF1, TF5, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:384 kbps radio bearer (RB8) has the highest number of transport formats (5 for TTI=10 ms and excluding TF0) then 5 sub-tests has been defined. The selected UL TFCI to achieve test coverage of TF1 to TF5 for RB8 and for the different speech transport formats are: UL_TFC4 for TF1, UL_TFC8 for TF2, UL_TFC11 for TF3, UL_TFC13 for TF4 and UL_TFC17 for TF5.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 256 | 336 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC18, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 256 | 656 | DL_TFC2 | UL_TFC8 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC18, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC2 | UL_TFC11 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC18, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC13 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC18, UL_TFC31 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 5 | 1 | 3 | 256 | 256 | 656 | DL_TFC2 | UL_TFC17 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC17, UL_TFC18, UL_TFC35 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3832 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC18 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.2.7.4.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.5 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.7.5.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB, UL 336bit block size

##### 18.2.7.5.1.1 Conformance requirement

See 18.2.7.1.1.1.

##### 18.2.7.5.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.5 for the UL 336 bit block size case.

##### 18.2.7.5.1.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB8) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB8 and for the different speech transport formats are: UL_TFC4 for TF1, UL_TFC8 for TF2, UL_TFC11 for TF3 and UL_TFC13 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | DL_TFC2 | UL_TFC8 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC2 | UL_TFC11 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC15, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC13 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |

| | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 8 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.2.7.5.1.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.5.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB, UL 144bit block size

#### 18.2.7.5.2.1 Conformance requirement

See 18.2.7.1.1.1.

#### 18.2.7.5.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.5 for the UL 144 bit block size case.

#### 18.2.7.5.2.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x144 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x144 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 3x144 | N/A |
| | TF3, bits | N/A | N/A | N/A | 7x144 | N/A |
| | TF4, bits | N/A | N/A | N/A | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB8) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB8 and for the different speech transport formats are: UL_TFC4 for TF1, UL_TFC8 for TF2, UL_TFC11 for TF3 and UL_TFC13 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 120 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | DL_TFC2 | UL_TFC8 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 376 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC2 | UL_TFC11 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC15, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 888 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC13 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See note 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |

| | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 8 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.2.7.5.2.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.6 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.7.6.1 Conformance requirement

See 18.2.7.1.1.1.

#### 18.2.7.6.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.6.

#### 18.2.7.6.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 384 kbps, 10 ms TTI) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |
| | TF5, bits | N/A | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0) |
| UL_TFC1 | (TF1,TF0,TF0) |
| UL_TFC2 | (TF0,TF1,TF0) |
| UL_TFC3 | (TF1,TF1,TF0) |
| UL_TFC4 | (TF0,TF2,TF0) |
| UL_TFC5 | (TF1,TF2,TF0) |
| UL_TFC6 | (TF0,TF3,TF0) |
| UL_TFC7 | (TF1,TF3,TF0) |
| UL_TFC8 | (TF0,TF4,TF0) |
| UL_TFC9 | (TF1,TF4,TF0) |
| UL_TFC10 | (TF0,TF5,TF0) |
| UL_TFC11 | (TF1,TF5,TF0) |
| UL_TFC12 | (TF0,TF0,TF1) |
| UL_TFC13 | (TF1,TF0,TF1) |
| UL_TFC14 | (TF0,TF1,TF1) |
| UL_TFC15 | (TF1,TF1,TF1) |
| UL_TFC16 | (TF0,TF2,TF1) |
| UL_TFC17 | (TF1,TF2,TF1) |
| UL_TFC18 | (TF0,TF3,TF1) |
| UL_TFC19 | (TF1,TF3,TF1) |
| UL_TFC20 | (TF0,TF4,TF1) |
| UL_TFC21 | (TF1,TF4,TF1) |
| UL_TFC22 | (TF0,TF5,TF1) |
| UL_TFC23 | (TF1,TF5,TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:384 kbps radio bearer (RB6) has the highest number of transport formats (5 for TTI=10 ms and excluding TF0) then 5 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF5 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3, UL_TFC9 for TF4 and UL_TFC11 for TF5.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 256 | 336 | DL_TFC1 | UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC5 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC12, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC1 | UL_TFC7 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC7, UL_TFC12, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC9 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC12, UL_TFC21 | RB5: 640<br>RB6: 2552 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 5 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC11 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC11, UL_TFC12, UL_TFC23 | RB5: 640<br>RB6: 3832 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC12 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.2.7.6.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.7 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.7.7.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 336bit block size

##### 18.2.7.7.1.1 Conformance requirement

See 18.2.7.1.1.1.

##### 18.2.7.7.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.7 for the UL 336 bit block size case.

##### 18.2.7.7.1.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF2, TF0) |
| UL_TFC5 | (TF1, TF2, TF0) |
| UL_TFC6 | (TF0, TF3, TF0) |
| UL_TFC7 | (TF1, TF3, TF0) |
| UL_TFC8 | (TF0, TF4, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF1, TF1) |
| UL_TFC14 | (TF0, TF2, TF1) |
| UL_TFC15 | (TF1, TF2, TF1) |
| UL_TFC16 | (TF0, TF3, TF1) |
| UL_TFC17 | (TF1, TF3, TF1) |
| UL_TFC18 | (TF0, TF4, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB6) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3 and UL_TFC9 for TF4.

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB6) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3 and UL_TFC9 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | DL_TFC1 | UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | DL_TFC1 | UL_TFC5 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC1 | UL_TFC7 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC7, UL_TFC10, UL_TFC17 | RB5: 640<br>RB6: 952 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC9 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC10, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.<br>NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.<br>NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5. | | | | | | | | | | | |

#### 18.2.7.7.1.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.7.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 144bit block size

#### 18.2.7.7.2.1 Conformance requirement

See 18.2.7.1.1.1.

#### 18.2.7.7.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.7 for the UL 144 bit block size case.

#### 18.2.7.7.2.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x144 | 0x148 |
| | TF1, bits | 4x640 | 1x144 | 1x148 |
| | TF2, bits | N/A | 3x144 | N/A |
| | TF3, bits | N/A | 7x144 | N/A |
| | TF4, bits | N/A | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF2, TF0) |
| UL_TFC5 | (TF1, TF2, TF0) |
| UL_TFC6 | (TF0, TF3, TF0) |
| UL_TFC7 | (TF1, TF3, TF0) |
| UL_TFC8 | (TF0, TF4, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF1, TF1) |
| UL_TFC14 | (TF0, TF2, TF1) |
| UL_TFC15 | (TF1, TF2, TF1) |
| UL_TFC16 | (TF0, TF3, TF1) |
| UL_TFC17 | (TF1, TF3, TF1) |
| UL_TFC18 | (TF0, TF4, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB6) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3 and UL_TFC9 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | DL_TFC1 | UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 120 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | DL_TFC1 | UL_TFC5 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 376 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC1 | UL_TFC7 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC7, UL_TFC10, UL_TFC17 | RB5: 640<br>RB6: 888 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC9 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC10, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 4x640<br>RB6: See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.<br>NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.<br>NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5. | | | | | | | | | | | |

#### 18.2.7.7.2.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.8 Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.7.8.1 Conformance requirement

See 18.2.7.1.1.1.

#### 18.2.7.8.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.8.

#### 18.2.7.8.3 Method of test

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | **TFI** | **RB6 (I/B 384 kbps)** | **RB6 (I/B 384 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x340 | 0x340 | 0x148 |
| | TF1, bits | 1x340 | 1x340 | 1x148 |
| | TF2, bits | 2x340 | 2x340 | N/A |
| | TF3, bits | 4x340 | 4x340 | N/A |
| | TF4, bits | 8x340 | 8x340 | N/A |
| | TF5, bits | 12x340 | 12x340 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the 2 x Interactive Background PS radio bearer. As the 2 x Interactive Background UL:384 kbps radio bearer (RB5+RB6) have 5 transport formats then 5 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF5 for RB5+RB6 are: UL_TFC1 for TF1, UL_TFC2 for TF2, UL_TFC3 for TF3, UL_TFC4 for TF4 and UL_TFC5 for TF5.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC1 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 RB6: 312 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC2 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 RB6: 632 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC3 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 RB6: 1272 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC4 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 RB6: 2552 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 5 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC5 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 3832<br>RB6: 3832 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.2.7.8.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.9 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.7.9.1 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 340bit block size

##### 18.2.7.9.1.1 Conformance requirement

See 18.2.7.1.1.1.

##### 18.2.7.9.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.9 for the UL 340 bit block size case.

##### 18.2.7.9.1.3 Method of test

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 + RB6 (64 kbps RAB, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x340 | 0x148 |
| | TF1, bits | 1x340 | 1x148 |
| | TF2, bits | 2x340 | N/A |
| | TF3, bits | 3x340 | N/A |
| | TF4, bits | 4x340 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the 2 x Interactive Background PS radio bearer. As the 2 x Interactive Background UL:64 kbps radio bearer (RB5+RB6) has 4 transport formats then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB5+RB6 are: UL_TFC1 for TF1, UL_TFC2 for TF2, UL_TFC3 for TF3 and UL_TFC4 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | N/A | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 RB6: 312 | See note 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | N/A | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 RB6: 632 | See note 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 RB6: 952 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 RB6: 1272 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.<br>NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.<br>NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5. | | | | | | | | | | | |

#### 18.2.7.9.1.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.9.1 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 148bit block size

#### 18.2.7.9.1.1 Conformance requirement

See 18.2.7.1.1.1.

#### 18.2.7.9.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.9 for the UL 148 bit block size case.

#### 18.2.7.9.1.3 Method of test

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | **TFI** | **RB5 + RB6 (64 kbps RAB, 20 ms TTI)** | **DCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x148 | 0x148 |
| | TF1, bits | 1x148 | 1x148 |
| | TF2, bits | 3x148 | N/A |
| | TF3, bits | 7x148 | N/A |
| | TF4, bits | 10x148 | N/A |

Uplink TFCS:

| **TFCI** | **(RB5 + RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the 2 x Interactive Background PS radio bearer. As the 2 x Interactive Background UL:64 kbps radio bearer (RB5+RB6) has 4 transport formats then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB5+RB6 are: UL_TFC1 for TF1, UL_TFC2 for TF2, UL_TFC3 for TF3 and UL_TFC4 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | N/A | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 120 RB6: 120 | See note 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | N/A | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 376 RB6: 376 | See note 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 888 RB6: 888 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 RB6: 1272 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.<br>NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.<br>NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5. | | | | | | | | | | | |

#### 18.2.7.9.1.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.10 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.7.10.1 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size

#### 18.2.7.10.1.1 Conformance requirement

See 18.2.7.1.1.1.

#### 18.2.7.10.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.10 for the UL 336 bit block size case.

#### 18.2.7.10.1.3 Method of test

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | **TFI** | **RB5 (Streaming 128 kbps, 20ms)** | **RB6 (I/B 128 kbps, 20ms)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x336 | 0x148 |
| | TF1, bits | 1x656 | 1x336 | 1x148 |
| | TF2, bits | 2x656 | 2x336 | N/A |
| | TF3, bits | 4x656 | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF0, TF0) |
| UL_TFC3 | (TF3, TF0, TF0) |
| UL_TFC4 | (TF0, TF1, TF0) |
| UL_TFC5 | (TF1, TF1, TF0) |
| UL_TFC6 | (TF2, TF1, TF0) |
| UL_TFC7 | (TF3, TF1, TF0) |
| UL_TFC8 | (TF0, TF2, TF0) |
| UL_TFC9 | (TF1, TF2, TF0) |
| UL_TFC10 | (TF2, TF2, TF0) |
| UL_TFC11 | (TF3, TF2, TF0) |
| UL_TFC12 | (TF0, TF3, TF0) |
| UL_TFC13 | (TF1, TF3, TF0) |
| UL_TFC14 | (TF2, TF3, TF0) |
| UL_TFC15 | (TF3, TF3, TF0) |
| UL_TFC16 | (TF0, TF4, TF0) |
| UL_TFC17 | (TF1, TF4, TF0) |
| UL_TFC18 | (TF2, TF4, TF0) |
| UL_TFC19 | (TF3, TF4, TF0) |
| UL_TFC20 | (TF0, TF0, TF1) |
| UL_TFC21 | (TF1, TF0, TF1) |
| UL_TFC22 | (TF2, TF0, TF1) |
| UL_TFC23 | (TF3, TF0, TF1) |
| UL_TFC24 | (TF0, TF1, TF1) |
| UL_TFC25 | (TF1, TF1, TF1) |
| UL_TFC26 | (TF2, TF1, TF1) |
| UL_TFC27 | (TF3, TF1, TF1) |
| UL_TFC28 | (TF0, TF2, TF1) |
| UL_TFC29 | (TF1, TF2, TF1) |
| UL_TFC30 | (TF2, TF2, TF1) |
| UL_TFC31 | (TF3, TF2, TF1) |
| UL_TFC32 | (TF0, TF3, TF1) |
| UL_TFC33 | (TF1, TF3, TF1) |
| UL_TFC34 | (TF2, TF3, TF1) |
| UL_TFC35 | (TF3, TF3, TF1) |
| UL_TFC36 | (TF0, TF4, TF1) |
| UL_TFC37 | (TF1, TF4, TF1) |
| UL_TFC38 | (TF2, TF4, TF1) |
| UL_TFC39 | (TF3, TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Streaming + Interactive Background PS radio bearer. The Streaming UL:128 kbps + Interactive Background UL:128 kbps radio bearer (RB5+RB6) have 40 transport format combinations. As the transport formats where RB5, RB6 or DCCH has no data (TF0 for RB5, RB6 or DCCH) is considered as implicitely tested when the transport format combinations with data is tested then no specific sub-tests for those transport format combinations have been specified. The selected UL TFCI to achieve test coverage of TF1 to TF3 for RB5 and TF1 to TF4 for RB6 are: UL_TFC5 to UL_TFC7, UL_TFC9 to UL_TFC11, UL_TFC13 to UL_TFC15 and UL_TFC17 to UL_TFC19.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | N/A | UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC20, UL_TFC21 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC25 | RB5: 632 RB6: 312 | See note 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | N/A | UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC26 | RB5: 1272 RB6: 312 | See note 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC7 | UL_TFC0, UL_TFC3, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC7, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC27 | RB5: 2552 RB6: 312 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC9 | UL_TFC0, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC20, | RB5: 632 RB6: 632 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 7 | 3 | 512 | 512 | | | | | UL_TFC21, UL_TFC24, UL_TFC29 | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 5 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC30 | RB5: 1272 RB6: 632 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 6 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC11 | UL_TFC0, UL_TFC3, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC8, UL_TFC11, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC31 | RB5: 2552 RB6: 632 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 7 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC13 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC12, UL_TFC13, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC33 | RB5: 632 RB6: 1272 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 8 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC14 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC12, UL_TFC14, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC34 | RB5: 1272 RB6: 1272 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 9 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC15 | UL_TFC0, | UL_TFC0, | RB5: 2552 | See note 4 |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 2 | 3 | 512 | 256 | | | | UL_TFC3, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC12, UL_TFC15, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC35 | RB6: 1272 | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 10 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC16, UL_TFC17, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC37 | RB5: 632 RB6: 2552 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 11 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC18 | UL_TFC0, UL_TFC8, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC16, UL_TFC18, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC38 | RB5: 1272 RB6: 2552 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 12 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC19 | UL_TFC0, UL_TFC3, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC16, UL_TFC19, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC39 | RB5: 2552 RB6: 2552 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC4 and UL_TFC20 are part of minimum set of TFCIs. Also the transport format combinations UL_TFC21 and UL_TFC24 using TF1 on either RB5 or RB6 and TF1 on DCCH has been included in the allowed TFCs as those could happen during the sub-test.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5. | | | | | | | | | | | |

#### 18.2.7.10.1.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.2.7.10.2 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size

#### 18.2.7.10.2.1 Conformance requirement

See 18.2.7.1.1.1.

#### 18.2.7.10.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.6.10 for the UL 144 bit block size case.

#### 18.2.7.10.2.3 Method of test

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | **TFI** | **RB5 (Streaming 128 kbps, 20ms)** | **RB6 (I/B 128 kbps, 20ms)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x144 | 0x148 |
| | TF1, bits | 1x656 | 1x144 | 1x148 |
| | TF2, bits | 2x656 | 7x144 | N/A |
| | TF3, bits | 4x656 | 14x144 | N/A |
| | TF4, bits | N/A | 20x144 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF0, TF0) |
| UL_TFC3 | (TF3, TF0, TF0) |
| UL_TFC4 | (TF0, TF1, TF0) |
| UL_TFC5 | (TF1, TF1, TF0) |
| UL_TFC6 | (TF2, TF1, TF0) |
| UL_TFC7 | (TF3, TF1, TF0) |
| UL_TFC8 | (TF0, TF2, TF0) |
| UL_TFC9 | (TF1, TF2, TF0) |
| UL_TFC10 | (TF2, TF2, TF0) |
| UL_TFC11 | (TF3, TF2, TF0) |
| UL_TFC12 | (TF0, TF3, TF0) |
| UL_TFC13 | (TF1, TF3, TF0) |
| UL_TFC14 | (TF2, TF3, TF0) |
| UL_TFC15 | (TF3, TF3, TF0) |
| UL_TFC16 | (TF0, TF4, TF0) |
| UL_TFC17 | (TF1, TF4, TF0) |
| UL_TFC18 | (TF2, TF4, TF0) |
| UL_TFC19 | (TF3, TF4, TF0) |
| UL_TFC20 | (TF0, TF0, TF1) |
| UL_TFC21 | (TF1, TF0, TF1) |
| UL_TFC22 | (TF2, TF0, TF1) |
| UL_TFC23 | (TF3, TF0, TF1) |
| UL_TFC24 | (TF0, TF1, TF1) |
| UL_TFC25 | (TF1, TF1, TF1) |
| UL_TFC26 | (TF2, TF1, TF1) |
| UL_TFC27 | (TF3, TF1, TF1) |
| UL_TFC28 | (TF0, TF2, TF1) |
| UL_TFC29 | (TF1, TF2, TF1) |
| UL_TFC30 | (TF2, TF2, TF1) |
| UL_TFC31 | (TF3, TF2, TF1) |
| UL_TFC32 | (TF0, TF3, TF1) |
| UL_TFC33 | (TF1, TF3, TF1) |
| UL_TFC34 | (TF2, TF3, TF1) |
| UL_TFC35 | (TF3, TF3, TF1) |
| UL_TFC36 | (TF0, TF4, TF1) |
| UL_TFC37 | (TF1, TF4, TF1) |
| UL_TFC38 | (TF2, TF4, TF1) |
| UL_TFC39 | (TF3, TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Streaming + Interactive Background PS radio bearer. The Streaming UL:128 kbps + Interactive Background UL:128 kbps radio bearer (RB5+RB6) have 40 transport format combinations. As the transport formats where RB5, RB6 or DCCH has no data (TF0 for RB5, RB6 or DCCH) is considered as implicitely tested when the transport format combinations with data is tested then no specific sub-tests for those transport format combinations have been specified. The selected UL TFCI to achieve test coverage of TF1 to TF3 for RB5 and TF1 to TF4 for RB6 are: UL_TFC5 to UL_TFC7, UL_TFC9 to UL_TFC11, UL_TFC13 to UL_TFC15 and UL_TFC17 to UL_TFC19.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | N/A | UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC20, UL_TFC21 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC25 | RB5: 632 RB6: 120 | See note 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | N/A | UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC26 | RB5: 1272 RB6: 120 | See note 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC7 | UL_TFC0, UL_TFC3, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC7, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC27 | RB5: 2552 RB6: 120 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC9 | UL_TFC0, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC20, | RB5: 632 RB6: 888 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 7 | 3 | 512 | 512 | | | | | UL_TFC21, UL_TFC24, UL_TFC29 | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 5 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC30 | RB5: 1272 RB6: 888 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 6 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC11 | UL_TFC0, UL_TFC3, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC8, UL_TFC11, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC31 | RB5: 2552 RB6: 888 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 7 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC13 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC12, UL_TFC13, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC33 | RB5: 632 RB6: 1784 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 8 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC14 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC12, UL_TFC14, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC34 | RB5: 1272 RB6: 1784 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 9 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC15 | UL_TFC0, | UL_TFC0, | RB5: 2552 | See note 4 |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 2 | 3 | 512 | 256 | | | | UL_TFC3, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC12, UL_TFC15, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC35 | RB6: 1784 | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 10 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC16, UL_TFC17, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC37 | RB5: 632 RB6: 2552 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 11 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC18 | UL_TFC0, UL_TFC8, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC16, UL_TFC18, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC38 | RB5: 1272 RB6: 2552 | See note 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 12 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC19 | UL_TFC0, UL_TFC3, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC16, UL_TFC19, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC39 | RB5: 2552 RB6: 2552 | See note 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC4 and UL_TFC20 are part of minimum set of TFCIs. Also the transport format combinations UL_TFC21 and UL_TFC24 using TF1 on either RB5 or RB6 and TF1 on DCCH has been included in the allowed TFCs as those could happen during the sub-test.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (note 1) | RLC Trans-mission window size (note 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | UL RLC SDU size (bits) (note 3) | Test data size (bits) (note 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5. | | | | | | | | | | | |

#### 18.2.7.10.2.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 18.2.8 Combinations on DPCH, HS-DSCH and E-PUCH

### 18.2.8.1 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH

#### 18.2.8.1.1 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

#### 18.2.8.1.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.7.1:

1. To verify that the UE is able to establish the radio bearer combination.
2. To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

#### 18.2.8.1.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 1536 |
| 5 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number HS-DSCH timeslots | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 5 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 6 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 7 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 8 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 9 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 126 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 18.2.7.1.1 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | | |

The generic test procedure in 18.2.1.5 is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL RLC SDU size (note 2) | Test data size (note 3) |
|---|---|---|---|---|---|
| 1 | 1 to 5 | 10ms, Table 0 | 4 | 312 | 312 |
| NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.<br>NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested. | | | | | |

#### 18.2.8.1.4 Test requirements

See 18.2.1.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU with same content as sent in downlink.

### 18.2.8.3 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH

#### 18.2.8.3.1 Conformance requirement

See 18.2.8.1.1.

#### 18.2.8.3.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.7.3:

1. To verify that the UE is able to establish.teh radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

#### 18.2.8.3.3 Method of test

See 18.2.8.1.3.

#### 18.2.8.3.4 Test requirements

See 18.2.8.1.4.

### 18.2.8.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.2.8.4.1 Conformance requirement

See 18.2.8.1.1.

#### 18.2.8.4.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.7.4:

1. To verify that the UE is able to establish the radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH in combination with the possible TFCI of the conversional speech radio bearer.

#### 18.2.8.4.3 Method of test

The following parameters are specific for this test case:

Uplink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number HS-DSCH timeslots | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 5 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 6 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 7 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 8 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 9 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 126 |

NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 18.2.7.1.1 (MAC-d PDU size=336) for recommended TFRC values for different transport block size.

The generic test procedure in 18.2.1.5 is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | DCH | | | | UL RLC SDU size (note 3) | Test data size (note 4) |
|---|---|---|---|---|---|---|---|---|---|
| | | | | DL TFCS Under test | UL TFCS Under test | Implicitely tested | Restricted UL TFCIs (note 2) | | |
| 1 | 1 to 5 | 10ms, Table 0 | 4 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 2 | 1 to 5 | 10ms, Table 0 | 4 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.
NOTE 4: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.

#### 18.2.8.4.4 Test requirements

See 18.2.1.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the sub-test.
3. At step 18 and for each radio bearer where test data is sent in downlink the UE shall return a RLC SDU with same content as sent in downlink. For radio bearers where no data is sent in downlink then no data shall be received in uplink.

### 18.2.8.5 Streaming or interactive or background / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH

#### 18.2.8.5.1 Conformance requirement

See 18.2.8.1.1.

#### 18.2.8.5.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.7.5:

1. To verify that the UE is able to establish the radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

#### 18.2.8.5.3 Method of test

The first Streaming or background or interactive / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is refered to as RB5 and the second Streaming or interactive or background UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is referred to RB6.

The following parameters are specific for this test case and RB5 and RB6:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (note 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number HS-DSCH timeslots | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 5 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 6 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 7 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 8 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 126 |
| 9 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 126 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 18.2.7.1.1 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | | |

The generic test procedure in 18.2.1.5 is run for each sub-test.

Sub-tests:

| Sub-test | E-DCH Category | E-DPDCH TTI and E-TFCI Table (note 1) | E-DPDCH Number of HARQ processes | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|
| 1 | 1 to 5 | 10ms, Table 0 | 4 | RB5:312<br>RB6:312 | RB5:312<br>RB6:312 |
| NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.<br>NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested. | | | | | |

### 18.2.8.5.4 Test requirements

See 18.2.1.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU on RB5 and RB6 with same content as sent in downlink.

# 18.3 Radio Bearer Tests for 7.68 Mcps TDD option

## 18.3.1 General information for radio bearer tests (7.68 Mcps TDD)

The purpose of these radio bearer test cases is to test properly the Reference Radio Bearer configurations included in TS34.108 [9], clause 6.11.6 for 7.68 Mcps TDD option.

The applicability of radio bearer tests is dependent on the UE uplink and downlink radio access capabilities and UE support tele- and bearer-services.

For radio bearer combinations which are representative to multiple traffic classes, such as “Interactive or Background”, “Streaming or Interactive or Background” etc, then it is only required to execute the radio bearer test procedure once using one of the applicable traffic class for the UE under test.

NOTE As the purpose of the radio bearer test cases is to functionally verify that the UE is able to establish the radio bearer combination, and to verify correct data transfer using the different transport formats, then the necessary test coverage is achieved by perfoming the radio bearer test procedure once for one of the applicable traffic classes.

### 18.3.1.1 Generic radio bearer test procedure for Single RB configuration

See 14.1.1 for test procedure

### 18.3.1.2 Generic test procedure for testing multi-RB configuration and simultaneous signalling

See 14.1.2 for test procedure

### 18.3.1.2a Generic test procedure for testing multi-RB combinations and simultaneous signalling in case of DSCH

This procedure is used to test multiple radio bearer combinations where PS data goes on the DSCH. This procedure is also used to verify simultaneous transmission and reception of user data and signalling data.

#### 18.3.1.2a.1 Initial conditions

UE in idle mode

#### 18.3.1.2a.2 Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.11.6 for the actual radio bearer test. For the case when the reference radio bearer configuration includes radio bearers for both CS and PS domain then the radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s), also the transport format combination set for only CS radio bearers has to be provided. The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers.

b) The SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. Here first time only the TFCs for the data on CS RAB and the data on PS RAB are restricted.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 1.

d) The SS transmits test data on all radio bearers under test. The number of RLC SDUs to transmit every TTI and the size "Test data size" is specified for each sub-test of the actual radio bearer test. See note 2.

e) The SS checks that UE has looped back the data on the CS and PS Radio bearer.

f) The SS opens the UE test loop.

g) SS uses the RRC transport format combination control procedure. And now restricts the TFCs for the data on CS RAB and the data on PS RAB and also on SRB.

h) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 2.

i) SS transmit data on the CS RAB a MEASUREMENT CONTROL message requesting periodic reporting with a period of T2.

j) SS transmits the data on PS RAB.

k) SS waits the time equal to 2 times T2

l) SS checks that, for all radio bearers under test, the content of the received RLC SDUs have the correct content and is received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loop back of RLC SDUs.

m) The SS opens the UE test loop.

n) (Void)

o) Steps b) to m) are repeated for all sub-tests

p) The SS may optionally release the radio bearer.

q) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: Selection of UL RLC SDU size parameter:
For the case when the reference radio bearer configuration under test uses RLC transparent mode in downlink and is not configured for segmented operation then the radio bearer test case shall set the UL RLC SDU size equal to the UL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transparent mode. Selection of UL RLC SDU size for the different radio bearers under test should be such that the UE returns data in sub-sequent TTIs without causing the UE transmission buffer to become full. To achieve this the UL RLC SDU size shall be set to UL TF payload size under test, minus the size of length indicator and expansion bit, and divided by the ratio between downlink and uplink TTI. E.g. for a AM radio bearer having the uplink RLC payload size equal to 320, the downlink TTI equal to 10 ms, and the uplink TTI equal to 20 ms, then for the transport format 4x336 (TF payload size = 4x320=1280 bits) the UL RLC SDU size parameter should be set to 632 bits (=1280bits/(20ms/10ms)- 8 bits).

NOTE 2: Selection of test data size:
For the case when the reference radio bearer configuration under test uses RLC transparent mode in downlink and is not configured for segmented operation then the radio bearer test case shall use a DL RLC SDU size (defined by the "Test data size" parameter) equal to the DL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transparent mode. In case the reference radio bearer configuration under test does not use RLC transparent mode in downlink, the DL RLC SDU size/ test data size shall be set equal to the payload size of the DL TF under test minus the size of the length indicator and the expansion bit.

NOTE 3: The restricted set of TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signalling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

Expected sequence

**CS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6 | --> | | PAGING RESPONSE (DCCH) | RR |
| 6a | <-- | | AUTHENTICATION REQUEST | |
| 6b | --> | | AUTHENTICATION RESPONSE | |
| 6c | <-- | | SECURITY MODE COMMAND | |
| 6d | --> | | SECURITY MODE COMPLETE | |

**PS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6a | --> | | SERVICE REQUEST (DCCH) | GMM |
| 6b | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 6c | --> | | SECURITY MODE COMPLETE | RRC see note 1 |

NOTE 1 In addition to activate integrity protection Step 6b and Step 6c are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Expected sequence for DSCH multi RAB test cases.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1..6 | <-- --> | | Paging | Use the CS paging procedure for testing of CS and combined CS/PS reference radio bearer configurations.<br><br>Use the PS paging procedure for testing of PS reference radio bearer configurations. |
| 7 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 8 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| **Case A: CS or PS radio bearers only** | | | | |
| A9 | ← | | RADIO BEARER SETUP (DCCH) | RRC |
| A10 | → | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **Case B: CS + PS radio bearers** | | | | |
| B9 | ← | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured |
| B10 | → | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B10a | ← | | SECURITY MODE COMMAND | See Note |
| B10b | → | | SECURITY MODE COMPLETE | RRC |
| B10c | ← | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured |
| B10c | → | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| 11 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations are limited to "Restricted UL TFCIs", as specified for the sub-test. Here the UL TFS are restricted to test the simultaneous data on CS and PS RAB. |
| 12 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 13 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 14a | <-- | | Test data (DTCH 1) and Test data on DTCH 2 | SS Sends the data on the CS RAB (DPCH).SS Sends the data on the PS RAB .(PDSCH)<br>(NOTE 1) |
| 14b | → | | Test data (DTCH 1) + Test Data (DTCH 2) | SS Receives the data on CS RAB, PS RAB |
| 14c | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 14d | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 15a | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test<br>Here the UL TFS are restricted to test the simultaneous data on CS and PS RAB and SRB |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 15b | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 15c | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 15d | <-- | | Test data (DTCH 1) and Test data on DTCH 2 | SS Sends the data on the CS RAB (DPCH). SS Sends the data on the PS RAB. (PDSCH)<br>(NOTE 1) |
| 15e | ← | | MEASUREMENT CONTROL (DCCH) | SS sends a MEASUREMENT CONTROL message simultaneously to the test data requesting periodic reporting at interval T2<br>(NOTE 1) |
| 15f | --><br><br>--> | | Test data (DTCH 1) + Test Data (DTCH 2)<br><br>MEASUREMENT REPORT (DCCH) | SS Receives the data on CS RAB, PS RAB and the Measurement Control Report.<br>SS Shall get at least on measurement Control report.message<br>(NOTE 1) |
| 16 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 17 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 18 | | | Repeat steps 11 to 17 for every sub-test. | |
| 19 | | | RB RELEASE (DCCH) | RRC<br>Optional step |
| 20 | <-- | | DEACTIVATE RB TEST MODE (DCCH) | TC<br>Optional step |
| 21 | --> | | DEACTIVATE RB TEST MODE COMPLETE (DCCH) | TC<br>Optional step |
| NOTE. For case B (CS+PS radio bearers) the second security mode procedure is needed to enable testing of ciphering on the PS radio bearers. For the CS domain the security mode procedure is performed as part of the CS paging procedure. | | | | |

NOTE 1:

Here using the test steps 11 to 14d, the simultaneous data on the CS and PS RAB can be tested.

And using the steps 15a to 15f, the simultaneous data on CS RAB, PS RAB and SRB can be tested.

For testing the simultaneous data on CS RAB, PS RAB and SRB, following procedure is used.

First data on the CS RAB is sent. Then in the next step Measurement Control message is sent.

In the Downlink the restricted transport format combination will be (1 1), that SS MAC has to send the data on CS RAB and the measurement control message on SRB simultaneously.

Here it is assumed that, since the transport format combination (1, 0) (that is send only data) will not be available in the DL, the MAC has to wait until it gets something to transmit on the SRB.

Then data on the PS RAB is sent.

With this on the UE UL Side, the data will be available on both CS and PS RAB and also on the SRB. With this the transport format combination (1,1, 1) that is simultaneous data on RAB and SRB can be tested in the uplink.

Specific message contents

RADIO BEARER SETUP message: AM or UM (Packet to CELL_DCH from CELL_DCH in PS))

| Information Element | Value/remark |
|---|---|
| New DSCH-RNTI | 0000 0000 0000 0010B |
| RRC State indicator | CELL_DCH |
| RAB information for setup | |
| - RB mapping info | |
| - Information for each multiplexing option | 1 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | Not Present |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DSCH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | 19 |
| - Logical channel identity | 1 |
| Added or Reconfigured TrCH information list | 1 DCH added, 1 DCH reconfigured |
| DL Transport channel information common for all transport channel | |
| - SCCPCH TFCS | Not Present |
| - CHOICE mode | TDD |
| - Individual DL CCTrCH information | This number is of which of multiple CCTrCHs as indicated in TS34.108 clause 6.11.6.4 Parameter Set |
| - DL TFCS Identity | TFCS ID 1 or 2 |
| - Shared Channel Indicator | FALSE |
| - CHOICE DL parameters | Independent |
| - DL TFCS | |
| - CHOICE TFCI signalling | Split |
| - Split Type | Normal |
| - TFCI Field 1 information | |
| - CHOICE TFCS representation | Complete reconfiguration |
| - TFCS complete reconfigure | |
| - CHOICE CTFC Size | |
| - CTFC information | This IE is repeated for TFC numbers and reference to TS34.108 clause 6.11.3.4 |
| - CTFC | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Power offset information | Not present |
| Deleted TrCH information list | Not Present |
| Added or Reconfigured TrCH information list | |
| - Added or Reconfigured DL TrCH information | |
| - Downlink transport channel type | DSCH |
| - DL Transport channel identity | 19 |
| - CHOICE DL parameters | Explicit |
| - TFS | |
| - CHOICE Transport channel type | Dedicated transport channels |
| - Dynamic Transport format information | |
| - RLC Size | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Number of TBs and TTI List | (This IE is repeated for TFI number.) |
| - Transmission Time Interval | Not Present |
| - Number of Transport blocks | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Semi-static Transport Format information | |
| - Transmission time interval | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Type of channel coding | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Coding Rate | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Rate matching attribute | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - CRC size | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - DCH quality target | Not Present |
| - Downlink transport channel type | DCH |
| - DL Transport channel identity | 10 |
| - CHOICE DL parameters | Same as UL |
| - Uplink transport channel type | DCH |

| Information Element | Value/remark |
|---|---|
| - UL TrCH identity | 5 |
| - DCH quality target | |
| - BLER Quality value | -2.0 |
| CHOICE channel requirement | Uplink DPCH info |
| - Uplink DPCH power control info | |
| - CHOICE Mode | TDD |
| - UL target SIR | Not Present |
| -CHOICE UL OL PC info | Broadcast UL OL PC info (NULL) |
| - CHOICE mode | TDD |
| - Uplink Timing Advance Control | Not Present |
| - UL CCTrCH List | 1 or 2 Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - TFCS ID | 1 or 2 |
| - UL target SIR | 0dB |
| - Timing info | |
| - Activation time | Now |
| - Duration | Infinite |
| - Common timeslot info | |
| - 2nd interleaver mode | Frame |
| - TFCI coding | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Puncturing limit | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Repetition period | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Repetition length | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - Uplink DPCH timeslots and codes VHCR | |
| - Dynamic SF usage | FALSE |
| - First Individual timeslot info | |
| - Timeslot number | |
| - Timeslot number | (0..14) |
| - TFCI existence | TRUE |
| - Midamble Shift and burst type | |
| - Choice TDD option | 7.68 Mcps TDD |
| - Choice Burst Type | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Midamble Allocation Mode | Default midamble |
| - Midamble Configuration | 3 or 4 based on burst type |
| - CHOICE TDD option | 7.68 Mcps TDD (no data) |
| - First timeslot Code List | 1..2 |
| - Channelisation Code | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - CHOICE more timeslots | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - UL CCTrCH List to Remove | If this test has only 1 CCTrCH Reference to TS34.108 clause 6.11.6.4 Parameter Set. If 2 CCTrCH then “Not Present” |
| - TFCS ID | 2 |
| CHOICE Mode | TDD (no data) |
| Downlink information common for all radio links | |
| - CHOICE DPCH info | Downlink DPCH info common for all RL |
| - Timing indicator | Maintain |
| - CFN-targetSFN frame offset | Not Present |
| - Downlink DPCH power control information | |
| - CHOICE Mode | TDD |
| - TPC Step Size | 1 |
| - MAC-d HFN initial value | Bit String(24) |
| - CHOICE Mode | TDD (no data) |
| - CHOICE Mode | TDD (no data) |
| - CHOICE TDD option | 7.68 Mcps (no data) |
| - Default DPCH Offset Value | Not Present |
| Downlink information for each radio link list | |
| - Downlink information for each radio link | |
| - Choice mode | 7.68 Mcps TDD |
| - Primary CCPCH info | |
| - CHOICE Mode | TDD |
| - CHOICE TDD option | 7.68 Mcps TDD |
| - CHOICE SyncCase | Sync Case 1 |
| - Timeslot | PCCPCH timeslot (0..14) |
| - Cell parameters ID | Same as cell (0..127) |
| - SCTD indicator | FALSE |
| - Downlink DPCH info for each RL | |

| Information Element | Value/remark |
|---|---|
| - CHOICE Mode | TDD |
| - DL CCTrCH List | 1 or 2 Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - TFCS ID | 1 or 2 |
| - Timing info | |
| - Activation time | Now |
| - Duration | Infinite |
| - Common timeslot info | |
| - 2nd interleaver mode | Frame |
| - TFCI coding | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Puncturing limit | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Repetition period | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Repetition length | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Downlink DPCH timeslots and codes VHCR | |
| - First Individual timeslot info | |
| - Timeslot number | |
| - Timeslot number | (0..14) |
| - TFCI existence | TRUE |
| - Midamble Shift and burst type | |
| - Choice TDD option | 7.68 Mcps TDD |
| - Choice Burst Type | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - Midamble Allocation Mode | Default midamble |
| - Midamble Configuration | 3 or 4 based on burst type |
| - CHOICE TDD option | 7.68 Mcps TDD (no data) |
| - First timeslot channelisation codes VHCR | |
| - CHOICE codes representation | Bitmap |
| - Channelisation codes bitmap | Bit string(16) Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - CHOICE more timeslots | Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - UL CCTrCH TPC List | 1 or 2 Reference to TS34.108 clause 6.11.6.4 Parameter Set |
| - UL TPC TFCS Identity | |
| - TFCS ID | 1 or 2 |
| - Shared Channel Indicator | FALSE |
| - UL CCTrCH List to Remove | If this test has only 1 CCTrCH Reference to TS34.108 clause 6.11.6.4 Parameter Set. If 2 CCTrCH then “Not Present” |
| - TFCS ID | 2 |
| - SCCPCH information for FACH | Not Present |

### 18.3.1.3 Generic test procedure for testing Single Speech Radio Bearers on USCH/DSCH channels and multiple radio configuration signalling on RACH/FACH

This procedure is used to test single speech only PS radio bearer on DSCH and USCH and multiple configuration signal bearers on RACH/FACH

#### 18.3.1.3.1 Initial conditions

UE in idle mode

#### 18.3.1.3.2 Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.10 for the actual radio bearer test.

b) The SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure.

c) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 1.

d) The SS transmits test data on all radio bearers under test. The number of RLC SDUs to transmit every TTI and the size "Test data size" is specified for each sub-test of the actual radio bearer test. See note 2.

e) The SS checks that, for all radio bearers under test, the content of the received RLC SDU has the correct content and is received having the correct transport format.

f) The SS opens the UE test loop.

g) SS uses the RRC transport format combination control procedure. And now restricts the TFCs for the data on CS RAB and the data on PS RAB and also on SRB.

h) The SS closes the test loop using UE test loop mode 1 and setting the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test. See note 2.

i) SS transmit data on the CS RAB a MEASUREMENT CONTROL message requesting periodic reporting with a period of T2.

j) SS transmits the data on PS RAB.

k) SS waits the time equal to 2 times T2

l) SS checks that, for all radio bearers under test, the content of the received RLC SDUs have the correct content and is received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loop back of RLC SDUs.

m) The SS opens the UE test loop.

n) (Void)

o) Steps b) to m) are repeated for all sub-tests

p) The SS may optionally release the radio bearer.

q) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: Selection of UL RLC SDU size parameter:
For the case when the reference radio bearer configuration under test uses RLC transparent mode in downlink and is not configured for segmented operation then the radio bearer test case shall set the UL RLC SDU size equal to the UL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transparent mode. Selection of UL RLC SDU size for the different radio bearers under test should be such that the UE returns data in sub-sequent TTIs without causing the UE transmission buffer to become full. To achieve this the UL RLC SDU size shall be set to UL TF payload size under test, minus the size of length indicator and expansion bit, and divided by the ratio between downlink and uplink TTI. E.g. for a AM radio bearer having the uplink RLC payload size equal to 320, the downlink TTI equal to 10 ms, and the uplink TTI equal to 20 ms, then for the transport format 4x336 (TF payload size = 4x320=1280 bits) the UL RLC SDU size parameter should be set to 632 bits (=1280bits/(20ms/10ms)- 8 bits).

NOTE 2: Selection of test data size:
For the case when the reference radio bearer configuration under test uses RLC transparent mode in downlink and is not configured for segmented operation then the radio bearer test case shall use a DL RLC SDU size (defined by the "Test data size" parameter) equal to the DL RLC PDU size. See [7] TS 25.322 for details regarding UE operation in RLC transparent mode. In case the reference radio bearer configuration under test does not use RLC transparent mode in downlink, the DL RLC SDU size/ test data size shall be set equal to the payload size of the DL TF under test minus the size of the length indicator and the expansion bit.

NOTE 3: The restricted set of TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signalling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

Expected sequence

**PS paging procedure**

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| 2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| 3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| 4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| 5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| 6a | --> | | SERVICE REQUEST (DCCH) | GMM |
| 6b | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| 6c | --> | | SECURITY MODE COMPLETE | RRC see note 1 |

NOTE 1 In addition to activate integrity protection Step 6b and Step 6c are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

Expected sequence for DSCH multi RAB test cases.

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1..6 | <-- --> | | Paging | Use the CS paging procedure for testing of CS and combined CS/PS reference radio bearer configurations.<br><br>Use the PS paging procedure for testing of PS reference radio bearer configurations. |
| 7 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| 8 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| 9 | <-- | | RADIO BEARER SETUP (DCCH) | RRC |
| 10 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **CASE A: If DTCH on FACH/RACH** | | | | |
| A10a | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| A10b | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| A10c | <-- | | Test data (DTCH ) | SS Sends the data on the FACH |
| A10d | --> | | Test data (DTCH ) | SS Receives the data on RACH |
| A10e | | | Repeat steps 10c to 10d for every RACH/FACH sub-test | |
| A10f | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| A10g | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| A10h | <-- | | PHYSICAL SHARED CHANNEL ALLOCATION (SHCCH) | This message is used by UTRAN to assign physical resources to USCH/DSCH transport channels in TDD, for temporary usage by the UE. UM on SHCCH |
| A10i | --> | | PUSCH CAPACITY REQUEST (SHCCH) | Confirm establishment of PUSCH and PDSCH channels |
| **CASE B: If No DTCH on FACH/RACH** | | | | |
| B10a | <-- | | PHYSICAL SHARED CHANNEL ALLOCATION (SHCCH) | This message is used by UTRAN to assign physical resources to USCH/DSCH transport channels in TDD, for temporary usage by the UE. UM on SHCCH |
| B10b | --> | | PUSCH CAPACITY REQUEST (SHCCH) | Confirm establishment of PUSCH and PDSCH channels |
| 11 | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test Here the UL TFS are restricted to test the simultaneous data on CS and PS RAB. |
| 12 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 13 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |
| 14 | <-- | | Test data (DTCH ) | SS Sends the data on the PS RAB .(PDSCH)<br>(NOTE 1) |
| 15 | --> | | Test data (DTCH ) | SS Receives the data on PS RAB |
| 16 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 17 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 18 | | | Repeat steps 11 to 17 for every Shared Ch sub-test | |
| 19 | | | RB RELEASE (DCCH) | RRC<br>Optional step |
| 20 | <-- | | DEACTIVATE RB TEST MODE (DCCH) | TC<br>Optional step |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 21 | --> | | DEACTIVATE RB TEST MODE COMPLETE (DCCH) | TC<br>Optional step |

## 18.3.1.4 General information interoperability radio bearer tests for HS-DSCH

### 18.3.1.4.1 HS-DSCH radio bearer test parameters

In the radio bearer tests on radio bearers mapped on HS-DSCH, the following UE specific parameters should be used.

**Table 18.3.1.4.1.1: 7.68Mcps TDD HS-DSCH physical layer and RLC and MAC-hs parameters for 7.68Mcps TDD HS-DSCH physical layer categories**

| HS-DSCH category | Maximum number of HS-DSCH codes per timeslot | Maximum number of HS-DSCH timeslots per TTI | Maximum number of HS-DSCH transport channel bits that can be received within an HS-DSCH TTI | Total number of soft channel bits | Maximum number of AM RLC entities | Minimum total RLC AM and MAC-hs buffer size [kBytes] |
|---|---|---|---|---|---|---|
| Category 1 | 32 | 1 | 12000 | 52992 | 6 | 50 |
| Category 2 | 32 | 12 | 12000 | 52992 | 6 | 50 |
| Category 3 | 32 | 2 | 24000 | 105984 | 6 | 50 |
| Category 4 | 32 | 12 | 24000 | 105984 | 6 | 50 |
| Category 5 | 32 | 3 | 36000 | 158976 | 6 | 100 |
| Category 6 | 32 | 12 | 36000 | 158976 | 6 | 100 |
| Category 7 | 32 | 4 | 53000 | 211968 | 6 | 150 |
| Category 8 | 32 | 12 | 53000 | 211968 | 6 | 150 |
| Category 9 | 32 | 5 | 73000 | 264960 | 8 | 150 |
| Category 10 | 32 | 12 | 73000 | 264960 | 8 | 150 |
| Category 11 | 32 | 8 | 106000 | 423936 | 8 | 200 |
| Category 12 | 32 | 12 | 106000 | 423936 | 8 | 200 |
| Category 13 | 32 | 12 | 204000 | 635904 | 8 | 400 |

### 18.3.1.4.2 Selecting TFRC test points

#### 18.3.1.4.2.1 Principle

The principle for selecting TFRC test points is the same as specified for FDD in section 14.1.3.2.1 except the following:

a) A total of 3 HARQ processes are assumed.

b) Burst type 1 is assumed when calculating the number of physical channel bits ($N_{phy_bits}$) so that 1 HS-DSCH code in 1 TS carries 244bits for QPSK and 488bits for 16QAM.

c) The number of HS-DSCH codes allocated in the HS-SCCH is termed $N_{codes}$ and the number of TS allocated in the HS-SCCH is termed $N_{TS\ and\ thus}$ the code rate is determined by:

$$Coding_rate = (TB_{size} + N_{CRC}) / (N_{codes} * N_{TS} * N_{phy_bits})$$

d) The number of MAC-d PDUs, N_PDU can be incremented until N_PDU is 318.

e) The HS-SCCH signalling is such that it is only possible to allocate resources in a rectangular fashion; i.e. 21 resource units can be allocated by 3 SF32 codes over 7 timeslots. However it is not possible to make an allocation of 3 SF32 codes in TS2 and 2 SF32 codes in TS3

Note that the number of codes allocated, $N_{codes}$, and the number of TS, $N_{TS}$, allocated in the HS-SCCH are used in the tables in sections 18.3.1.4.3 and 18.3.1.4.4.

### 18.3.1.4.3 TFRC test points for MAC-d PDU size=336

**Table 18.3.1.4.3.1: TFRC test points for UE category 1 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | $N_{codes}*N_{TS}$ allocated in HS-SCCH | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 32 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 32 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 32 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 32 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 32 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 32 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 32 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 32 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 32 | 285 | |
| 16 | 5397 | 16 QAM | 32 | 285 | |
| 17 | 5733 | QPSK | 32 | 288 | |
| 17 | 5733 | 16 QAM | 32 | 288 | |
| 18 | 6069 | QPSK | 32 | 293 | |
| 18 | 6069 | 16 QAM | 32 | 292 | |
| 19 | 6405 | QPSK | 32 | 295 | |
| 19 | 6405 | 16 QAM | 32 | 295 | |
| 20 | 6741 | QPSK | 32 | 300 | |
| 20 | 6741 | 16 QAM | 32 | 299 | |
| 21 | 7077 | QPSK | 32 | 302 | |
| 21 | 7077 | 16 QAM | 32 | 302 | |
| 22 | 7413 | QPSK | 32 | 304 | |
| 22 | 7413 | 16 QAM | 32 | 304 | |
| 23 | 7749 | QPSK | 32 | 307 | |
| 23 | 7749 | 16 QAM | 32 | 307 | |
| 24 | 8085 | 16 QAM | 32 | 310 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | 16 QAM | 32 | 312 | |
| 26 | 8757 | 16 QAM | 32 | 315 | |
| 27 | 9093 | 16 QAM | 32 | 317 | |
| 28 | 9429 | 16 QAM | 32 | 319 | |
| 29 | 9765 | 16 QAM | 32 | 322 | |
| 30 | 10101 | 16 QAM | 32 | 324 | |
| 31 | 10437 | 16 QAM | 32 | 326 | |
| 32 | 10773 | 16 QAM | 32 | 328 | |
| 33 | 11109 | 16 QAM | 32 | 330 | |
| 34 | 11445 | 16 QAM | 32 | 332 | |
| 35 | 11781 | 16 QAM | 32 | 333 | |

**Table 18.3.1.4.3.2: TFRC test points for UE category 2 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 4 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 8 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 12 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 16 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 21 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 25 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 29 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 33 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 36 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 40 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 45 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 50 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 54 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 58 | 276 | |
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 63 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 66 | 285 | |
| 17 | 5733 | QPSK | 70 | 288 | |
| 17 | 5733 | 16 QAM | 70 | 288 | |
| 18 | 6069 | QPSK | 72 | 292 | |
| 18 | 6069 | 16 QAM | 72 | 292 | |
| 19 | 6405 | QPSK | 72 | 295 | |
| 19 | 6405 | 16 QAM | 72 | 295 | |
| 20 | 6741 | QPSK | 72 | 299 | |
| 20 | 6741 | 16 QAM | 72 | 299 | |
| 21 | 7077 | QPSK | 72 | 302 | |
| 21 | 7077 | 16 QAM | 72 | 302 | |
| 22 | 7413 | QPSK | 72 | 304 | |
| 22 | 7413 | 16 QAM | 72 | 304 | |
| 23 | 7749 | QPSK | 72 | 307 | |
| 23 | 7749 | 16 QAM | 72 | 307 | |
| 24 | 8085 | QPSK | 72 | 310 | |
| 24 | 8085 | 16 QAM | 72 | 310 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 72 | 312 | |
| 25 | 8421 | 16 QAM | 72 | 312 | |
| 26 | 8757 | QPSK | 72 | 315 | |
| 26 | 8757 | 16 QAM | 72 | 315 | |
| 27 | 9093 | QPSK | 72 | 317 | |
| 27 | 9093 | 16 QAM | 72 | 317 | |
| 28 | 9429 | QPSK | 72 | 319 | |
| 28 | 9429 | 16 QAM | 72 | 319 | |
| 29 | 9765 | QPSK | 72 | 322 | |
| 29 | 9765 | 16 QAM | 72 | 322 | |
| 30 | 10101 | QPSK | 72 | 324 | |
| 30 | 10101 | 16 QAM | 72 | 324 | |
| 31 | 10437 | QPSK | 72 | 326 | |
| 31 | 10437 | 16 QAM | 72 | 326 | |
| 32 | 10773 | QPSK | 72 | 328 | |
| 32 | 10773 | 16 QAM | 72 | 328 | |
| 33 | 11109 | QPSK | 72 | 330 | |
| 33 | 11109 | 16 QAM | 72 | 330 | |
| 34 | 11445 | QPSK | 72 | 332 | |
| 34 | 11445 | 16 QAM | 72 | 332 | |
| 35 | 11781 | QPSK | 72 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |

**Table 18.3.1.4.3.3: TFRC test points for UE category 3 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 32 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 44 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 62 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 64 | 285 | |
| 16 | 5397 | 16 QAM | 32 | 285 | |
| 17 | 5733 | QPSK | 64 | 288 | |
| 17 | 5733 | 16 QAM | 34 | 288 | |
| 18 | 6069 | QPSK | 64 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 64 | 295 | |
| 19 | 6405 | 16 QAM | 38 | 295 | |
| 20 | 6741 | QPSK | 64 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 64 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 64 | 304 | |
| 22 | 7413 | 16 QAM | 44 | 304 | |
| 23 | 7749 | QPSK | 64 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 64 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 64 | 312 | |
| 25 | 8421 | 16 QAM | 50 | 312 | |
| 26 | 8757 | QPSK | 64 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 64 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 64 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 64 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 64 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 64 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 64 | 328 | |
| 32 | 10773 | 16 QAM | 64 | 328 | |
| 33 | 11109 | QPSK | 64 | 330 | |
| 33 | 11109 | 16 QAM | 64 | 330 | |
| 34 | 11445 | QPSK | 64 | 332 | |
| 34 | 11445 | 16 QAM | 64 | 332 | |
| 35 | 11781 | QPSK | 64 | 333 | |
| 35 | 11781 | 16 QAM | 64 | 333 | |
| 36 | 12117 | QPSK | 64 | 336 | |
| 36 | 12117 | 16 QAM | 64 | 335 | |
| 37 | 12453 | QPSK | 64 | 337 | |
| 37 | 12453 | 16 QAM | 64 | 337 | |
| 38 | 12789 | QPSK | 64 | 339 | |
| 38 | 12789 | 16 QAM | 64 | 339 | |
| 39 | 13125 | QPSK | 64 | 340 | |
| 39 | 13125 | 16 QAM | 64 | 340 | |
| 40 | 13461 | QPSK | 64 | 343 | |
| 40 | 13461 | 16 QAM | 64 | 342 | |
| 41 | 13797 | QPSK | 64 | 343 | |
| 41 | 13797 | 16 QAM | 64 | 343 | |
| 42 | 14133 | QPSK | 64 | 345 | |
| 42 | 14133 | 16 QAM | 64 | 345 | |
| 43 | 14469 | QPSK | 64 | 346 | |
| 43 | 14469 | 16 QAM | 64 | 346 | |
| 44 | 14805 | QPSK | 64 | 348 | |
| 44 | 14805 | 16 QAM | 64 | 348 | |
| 45 | 15141 | QPSK | 64 | 349 | |
| 45 | 15141 | 16 QAM | 64 | 349 | |
| 46 | 15477 | QPSK | 64 | 350 | |
| 46 | 15477 | 16 QAM | 64 | 350 | |
| 47 | 15813 | 16 QAM | 64 | 352 | |
| 48 | 16149 | 16 QAM | 64 | 353 | |
| 49 | 16485 | 16 QAM | 64 | 354 | |
| 50 | 16821 | 16 QAM | 64 | 356 | |
| 51 | 17157 | 16 QAM | 64 | 357 | |
| 52 | 17493 | 16 QAM | 64 | 358 | |
| 53 | 17829 | 16 QAM | 64 | 359 | |
| 54 | 18165 | 16 QAM | 64 | 360 | |
| 55 | 18501 | 16 QAM | 64 | 362 | |

| | | | | | |
|---|---|---|---|---|---|
| 56 | 18837 | 16 QAM | 64 | 363 | |
| 57 | 19173 | 16 QAM | 64 | 364 | |
| 58 | 19509 | 16 QAM | 64 | 365 | |
| 59 | 19845 | 16 QAM | 64 | 366 | |
| 60 | 20181 | 16 QAM | 64 | 367 | |
| 61 | 20517 | 16 QAM | 64 | 368 | |
| 62 | 20853 | 16 QAM | 64 | 369 | |
| 63 | 21189 | 16 QAM | 64 | 370 | |
| 64 | 21525 | 16 QAM | 64 | 371 | |
| 65 | 21861 | 16 QAM | 64 | 372 | |
| 66 | 22197 | 16 QAM | 64 | 373 | |
| 67 | 22533 | 16 QAM | 64 | 374 | |
| 68 | 22869 | 16 QAM | 64 | 375 | |
| 69 | 23205 | 16 QAM | 64 | 376 | |
| 70 | 23541 | 16 QAM | 64 | 377 | |
| 71 | 23877 | 16 QAM | 64 | 380 | |

**Table 18.3.1.4.3.4: TFRC test points for UE category 4 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 33 | 285 | |
| 17 | 5733 | QPSK | 70 | 288 | |
| 17 | 5733 | 16 QAM | 35 | 288 | |
| 18 | 6069 | QPSK | 75 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 78 | 295 | |
| 19 | 6405 | 16 QAM | 39 | 295 | |
| 20 | 6741 | QPSK | 84 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 88 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 91 | 304 | |
| 22 | 7413 | 16 QAM | 45 | 304 | |
| 23 | 7749 | QPSK | 95 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 100 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 102 | 312 | |
| 25 | 8421 | 16 QAM | 51 | 312 | |
| 26 | 8757 | QPSK | 108 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 112 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 116 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 121 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 125 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 128 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 133 | 328 | |
| 32 | 10773 | 16 QAM | 66 | 328 | |
| 33 | 11109 | QPSK | 138 | 330 | |
| 33 | 11109 | 16 QAM | 69 | 330 | |
| 34 | 11445 | QPSK | 140 | 332 | |
| 34 | 11445 | 16 QAM | 70 | 332 | |
| 35 | 11781 | QPSK | 144 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |
| 36 | 12117 | QPSK | 144 | 335 | |
| 36 | 12117 | 16 QAM | 72 | 335 | |
| 37 | 12453 | QPSK | 144 | 337 | |
| 37 | 12453 | 16 QAM | 72 | 337 | |
| 38 | 12789 | QPSK | 144 | 339 | |
| 38 | 12789 | 16 QAM | 72 | 339 | |
| 39 | 13125 | QPSK | 144 | 340 | |
| 39 | 13125 | 16 QAM | 72 | 340 | |
| 40 | 13461 | QPSK | 144 | 342 | |
| 40 | 13461 | 16 QAM | 72 | 342 | |
| 41 | 13797 | QPSK | 144 | 343 | |
| 41 | 13797 | 16 QAM | 72 | 343 | |
| 42 | 14133 | QPSK | 144 | 345 | |
| 42 | 14133 | 16 QAM | 72 | 345 | |
| 43 | 14469 | QPSK | 144 | 346 | |
| 43 | 14469 | 16 QAM | 72 | 346 | |
| 44 | 14805 | QPSK | 144 | 348 | |
| 44 | 14805 | 16 QAM | 72 | 348 | |
| 45 | 15141 | QPSK | 144 | 349 | |
| 45 | 15141 | 16 QAM | 72 | 349 | |
| 46 | 15477 | QPSK | 144 | 350 | |
| 46 | 15477 | 16 QAM | 72 | 350 | |
| 47 | 15813 | QPSK | 144 | 352 | |
| 47 | 15813 | 16 QAM | 72 | 352 | |
| 48 | 16149 | QPSK | 144 | 353 | |
| 48 | 16149 | 16 QAM | 72 | 353 | |
| 49 | 16485 | QPSK | 144 | 354 | |
| 49 | 16485 | 16 QAM | 72 | 354 | |
| 50 | 16821 | QPSK | 144 | 356 | |
| 50 | 16821 | 16 QAM | 72 | 356 | |
| 51 | 17157 | QPSK | 144 | 357 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16 QAM | 72 | 357 | |
| 52 | 17493 | QPSK | 144 | 358 | |
| 52 | 17493 | 16 QAM | 72 | 358 | |
| 53 | 17829 | QPSK | 144 | 359 | |
| 53 | 17829 | 16 QAM | 72 | 359 | |
| 54 | 18165 | QPSK | 144 | 360 | |
| 54 | 18165 | 16 QAM | 72 | 360 | |
| 55 | 18501 | QPSK | 144 | 362 | |
| 55 | 18501 | 16 QAM | 72 | 362 | |
| 56 | 18837 | QPSK | 144 | 363 | |
| 56 | 18837 | 16 QAM | 72 | 363 | |
| 57 | 19173 | QPSK | 144 | 364 | |
| 57 | 19173 | 16 QAM | 72 | 364 | |
| 58 | 19509 | QPSK | 144 | 365 | |
| 58 | 19509 | 16 QAM | 72 | 365 | |
| 59 | 19845 | QPSK | 144 | 366 | |
| 59 | 19845 | 16 QAM | 72 | 366 | |
| 60 | 20181 | QPSK | 144 | 367 | |
| 60 | 20181 | 16 QAM | 72 | 367 | |
| 61 | 20517 | QPSK | 144 | 368 | |
| 61 | 20517 | 16 QAM | 72 | 368 | |
| 62 | 20853 | QPSK | 144 | 369 | |
| 62 | 20853 | 16 QAM | 72 | 369 | |
| 63 | 21189 | QPSK | 144 | 370 | |
| 63 | 21189 | 16 QAM | 72 | 370 | |
| 64 | 21525 | QPSK | 144 | 371 | |
| 64 | 21525 | 16 QAM | 72 | 371 | |
| 65 | 21861 | QPSK | 144 | 372 | |
| 65 | 21861 | 16 QAM | 72 | 372 | |
| 66 | 22197 | QPSK | 144 | 373 | |
| 66 | 22197 | 16 QAM | 72 | 373 | |
| 67 | 22533 | QPSK | 144 | 374 | |
| 67 | 22533 | 16 QAM | 72 | 374 | |
| 68 | 22869 | QPSK | 144 | 375 | |
| 68 | 22869 | 16 QAM | 72 | 375 | |
| 69 | 23205 | QPSK | 144 | 376 | |
| 69 | 23205 | 16 QAM | 72 | 376 | |
| 70 | 23541 | QPSK | 144 | 377 | |
| 70 | 23541 | 16 QAM | 72 | 377 | |
| 71 | 23877 | QPSK | 144 | 378 | |
| 71 | 23877 | 16 QAM | 72 | 378 | |

**Table 18.3.1.4.3.5: TFRC test points for UE category 5 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 33 | 285 | |
| 17 | 5733 | QPSK | 69 | 288 | |
| 17 | 5733 | 16 QAM | 34 | 288 | |
| 18 | 6069 | QPSK | 75 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 78 | 295 | |
| 19 | 6405 | 16 QAM | 39 | 295 | |
| 20 | 6741 | QPSK | 84 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 87 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 90 | 304 | |
| 22 | 7413 | 16 QAM | 45 | 304 | |
| 23 | 7749 | QPSK | 93 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 96 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 96 | 312 | |
| 25 | 8421 | 16 QAM | 51 | 312 | |
| 26 | 8757 | QPSK | 96 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 96 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 96 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 96 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 96 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 96 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 96 | 328 | |
| 32 | 10773 | 16 QAM | 66 | 328 | |
| 33 | 11109 | QPSK | 96 | 330 | |
| 33 | 11109 | 16 QAM | 69 | 330 | |
| 34 | 11445 | QPSK | 96 | 332 | |
| 34 | 11445 | 16 QAM | 69 | 332 | |
| 35 | 11781 | QPSK | 96 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |
| 36 | 12117 | QPSK | 96 | 335 | |
| 36 | 12117 | 16 QAM | 72 | 335 | |
| 37 | 12453 | QPSK | 96 | 337 | |
| 37 | 12453 | 16 QAM | 75 | 337 | |
| 38 | 12789 | QPSK | 96 | 339 | |
| 38 | 12789 | 16 QAM | 78 | 339 | |
| 39 | 13125 | QPSK | 96 | 340 | |
| 39 | 13125 | 16 QAM | 81 | 340 | |
| 40 | 13461 | QPSK | 96 | 342 | |
| 40 | 13461 | 16 QAM | 81 | 342 | |
| 41 | 13797 | QPSK | 96 | 343 | |
| 41 | 13797 | 16 QAM | 84 | 343 | |
| 42 | 14133 | QPSK | 96 | 345 | |
| 42 | 14133 | 16 QAM | 87 | 345 | |
| 43 | 14469 | QPSK | 96 | 346 | |
| 43 | 14469 | 16 QAM | 87 | 346 | |
| 44 | 14805 | QPSK | 96 | 348 | |
| 44 | 14805 | 16 QAM | 90 | 348 | |
| 45 | 15141 | QPSK | 96 | 349 | |
| 45 | 15141 | 16 QAM | 93 | 349 | |
| 46 | 15477 | QPSK | 96 | 350 | |
| 46 | 15477 | 16 QAM | 93 | 350 | |
| 47 | 15813 | QPSK | 96 | 352 | |
| 47 | 15813 | 16 QAM | 96 | 352 | |
| 48 | 16149 | QPSK | 96 | 353 | |
| 48 | 16149 | 16 QAM | 96 | 353 | |
| 49 | 16485 | QPSK | 96 | 354 | |
| 49 | 16485 | 16 QAM | 96 | 354 | |
| 50 | 16821 | QPSK | 96 | 356 | |
| 50 | 16821 | 16 QAM | 96 | 356 | |
| 51 | 17157 | QPSK | 96 | 357 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16 QAM | 96 | 357 | |
| 52 | 17493 | QPSK | 96 | 358 | |
| 52 | 17493 | 16 QAM | 96 | 358 | |
| 53 | 17829 | QPSK | 96 | 359 | |
| 53 | 17829 | 16 QAM | 96 | 359 | |
| 54 | 18165 | QPSK | 96 | 362 | |
| 54 | 18165 | 16 QAM | 96 | 360 | |
| 55 | 18501 | QPSK | 96 | 362 | |
| 55 | 18501 | 16 QAM | 96 | 362 | |
| 56 | 18837 | QPSK | 96 | 363 | |
| 56 | 18837 | 16 QAM | 96 | 363 | |
| 57 | 19173 | QPSK | 96 | 364 | |
| 57 | 19173 | 16 QAM | 96 | 364 | |
| 58 | 19509 | QPSK | 96 | 365 | |
| 58 | 19509 | 16 QAM | 96 | 365 | |
| 59 | 19845 | QPSK | 96 | 366 | |
| 59 | 19845 | 16 QAM | 96 | 366 | |
| 60 | 20181 | QPSK | 96 | 367 | |
| 60 | 20181 | 16 QAM | 96 | 367 | |
| 61 | 20517 | QPSK | 96 | 368 | |
| 61 | 20517 | 16 QAM | 96 | 368 | |
| 62 | 20853 | QPSK | 96 | 369 | |
| 62 | 20853 | 16 QAM | 96 | 369 | |
| 63 | 21189 | QPSK | 96 | 371 | |
| 63 | 21189 | 16 QAM | 96 | 370 | |
| 64 | 21525 | QPSK | 96 | 371 | |
| 64 | 21525 | 16 QAM | 96 | 371 | |
| 65 | 21861 | QPSK | 96 | 372 | |
| 65 | 21861 | 16 QAM | 96 | 372 | |
| 66 | 22197 | QPSK | 96 | 373 | |
| 66 | 22197 | 16 QAM | 96 | 373 | |
| 67 | 22533 | QPSK | 96 | 374 | |
| 67 | 22533 | 16 QAM | 96 | 374 | |
| 68 | 22869 | QPSK | 96 | 375 | |
| 68 | 22869 | 16 QAM | 96 | 375 | |
| 69 | 23205 | 16 QAM | 96 | 376 | |
| 70 | 23541 | 16 QAM | 96 | 377 | |
| 71 | 23877 | 16 QAM | 96 | 378 | |
| 72 | 24213 | 16 QAM | 96 | 378 | |
| 73 | 24549 | 16 QAM | 96 | 379 | |
| 74 | 24885 | 16 QAM | 96 | 380 | |
| 75 | 25221 | 16 QAM | 96 | 381 | |
| 76 | 25557 | 16 QAM | 96 | 382 | |
| 77 | 25893 | 16 QAM | 96 | 383 | |
| 78 | 26229 | 16 QAM | 96 | 383 | |
| 79 | 26565 | 16 QAM | 96 | 384 | |
| 80 | 26901 | 16 QAM | 96 | 385 | |
| 81 | 27237 | 16 QAM | 96 | 386 | |
| 82 | 27573 | 16 QAM | 96 | 386 | |
| 83 | 27909 | 16 QAM | 96 | 387 | |
| 84 | 28245 | 16 QAM | 96 | 388 | |
| 85 | 28581 | 16 QAM | 96 | 389 | |
| 86 | 28917 | 16 QAM | 96 | 389 | |

| | | | | | |
|---|---|---|---|---|---|
| 87 | 29253 | 16 QAM | 96 | 390 | |
| 88 | 29589 | 16 QAM | 96 | 391 | |
| 89 | 29925 | 16 QAM | 96 | 392 | |
| 90 | 30261 | 16 QAM | 96 | 392 | |
| 91 | 30597 | 16 QAM | 96 | 393 | |
| 92 | 30933 | 16 QAM | 96 | 394 | |
| 93 | 31269 | 16 QAM | 96 | 394 | |
| 94 | 31605 | 16 QAM | 96 | 395 | |
| 95 | 31941 | 16 QAM | 96 | 396 | |
| 96 | 32277 | 16 QAM | 96 | 396 | |
| 97 | 32613 | 16 QAM | 96 | 397 | |
| 98 | 32949 | 16 QAM | 96 | 398 | |
| 99 | 33285 | 16 QAM | 96 | 398 | |
| 100 | 33621 | 16 QAM | 96 | 399 | |
| 101 | 33957 | 16 QAM | 96 | 399 | |
| 102 | 34293 | 16 QAM | 96 | 400 | |
| 103 | 34629 | 16 QAM | 96 | 401 | |
| 104 | 34965 | 16 QAM | 96 | 401 | |
| 105 | 35301 | 16 QAM | 96 | 402 | |
| 106 | 35637 | 16 QAM | 96 | 405 | |
| 107 | 35973 | 16 QAM | 96 | 405 | |

**Table 18.3.1.4.3.6: TFRC test points for UE category 6 for MAC-d PDU size=336, 3.84Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 33 | 285 | |
| 17 | 5733 | QPSK | 70 | 288 | |
| 17 | 5733 | 16 QAM | 35 | 288 | |
| 18 | 6069 | QPSK | 75 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 78 | 295 | |
| 19 | 6405 | 16 QAM | 39 | 295 | |
| 20 | 6741 | QPSK | 84 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 88 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 91 | 304 | |
| 22 | 7413 | 16 QAM | 45 | 304 | |
| 23 | 7749 | QPSK | 95 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 100 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 102 | 312 | |
| 25 | 8421 | 16 QAM | 51 | 312 | |
| 26 | 8757 | QPSK | 108 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 112 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 116 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 121 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 125 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 128 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 133 | 328 | |
| 32 | 10773 | 16 QAM | 66 | 328 | |
| 33 | 11109 | QPSK | 138 | 330 | |
| 33 | 11109 | 16 QAM | 69 | 330 | |
| 34 | 11445 | QPSK | 140 | 332 | |
| 34 | 11445 | 16 QAM | 70 | 332 | |
| 35 | 11781 | QPSK | 145 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |
| 36 | 12117 | QPSK | 147 | 335 | |
| 36 | 12117 | 16 QAM | 72 | 335 | |
| 37 | 12453 | QPSK | 154 | 337 | |
| 37 | 12453 | 16 QAM | 77 | 337 | |
| 38 | 12789 | QPSK | 156 | 339 | |
| 38 | 12789 | 16 QAM | 78 | 339 | |
| 39 | 13125 | QPSK | 162 | 340 | |
| 39 | 13125 | 16 QAM | 81 | 340 | |
| 40 | 13461 | QPSK | 165 | 342 | |
| 40 | 13461 | 16 QAM | 81 | 342 | |
| 41 | 13797 | QPSK | 170 | 343 | |
| 41 | 13797 | 16 QAM | 85 | 343 | |
| 42 | 14133 | QPSK | 176 | 345 | |
| 42 | 14133 | 16 QAM | 88 | 345 | |
| 43 | 14469 | QPSK | 176 | 346 | |
| 43 | 14469 | 16 QAM | 88 | 346 | |
| 44 | 14805 | QPSK | 184 | 348 | |
| 44 | 14805 | 16 QAM | 92 | 348 | |
| 45 | 15141 | QPSK | 187 | 349 | |
| 45 | 15141 | 16 QAM | 93 | 349 | |
| 46 | 15477 | QPSK | 190 | 350 | |
| 46 | 15477 | 16 QAM | 95 | 350 | |
| 47 | 15813 | QPSK | 196 | 352 | |
| 47 | 15813 | 16 QAM | 98 | 352 | |
| 48 | 16149 | QPSK | 200 | 353 | |
| 48 | 16149 | 16 QAM | 100 | 353 | |
| 49 | 16485 | QPSK | 203 | 354 | |
| 49 | 16485 | 16 QAM | 100 | 354 | |
| 50 | 16821 | QPSK | 209 | 356 | |
| 50 | 16821 | 16 QAM | 104 | 356 | |
| 51 | 17157 | QPSK | 210 | 357 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16 QAM | 105 | 357 | |
| 52 | 17493 | QPSK | 216 | 358 | |
| 52 | 17493 | 16 QAM | 108 | 358 | |
| 53 | 17829 | QPSK | 217 | 359 | |
| 53 | 17829 | 16 QAM | 108 | 359 | * |
| 54 | 18165 | QPSK | 217 | 360 | * |
| 54 | 18165 | 16 QAM | 108 | 360 | |
| 55 | 18501 | QPSK | 217 | 362 | |
| 55 | 18501 | 16 QAM | 108 | 362 | |
| 56 | 18837 | QPSK | 217 | 363 | |
| 56 | 18837 | 16 QAM | 108 | 363 | |
| 57 | 19173 | QPSK | 217 | 364 | |
| 57 | 19173 | 16 QAM | 108 | 364 | |
| 58 | 19509 | QPSK | 217 | 365 | |
| 58 | 19509 | 16 QAM | 108 | 365 | |
| 59 | 19845 | QPSK | 217 | 366 | |
| 59 | 19845 | 16 QAM | 108 | 366 | |
| 60 | 20181 | QPSK | 217 | 367 | |
| 60 | 20181 | 16 QAM | 108 | 367 | |
| 61 | 20517 | QPSK | 217 | 368 | |
| 61 | 20517 | 16 QAM | 108 | 368 | |
| 62 | 20853 | QPSK | 217 | 369 | |
| 62 | 20853 | 16 QAM | 108 | 369 | |
| 63 | 21189 | QPSK | 217 | 370 | |
| 63 | 21189 | 16 QAM | 108 | 370 | |
| 64 | 21525 | QPSK | 217 | 371 | |
| 64 | 21525 | 16 QAM | 108 | 371 | |
| 65 | 21861 | QPSK | 217 | 372 | |
| 65 | 21861 | 16 QAM | 108 | 372 | |
| 66 | 22197 | QPSK | 217 | 373 | |
| 66 | 22197 | 16 QAM | 108 | 373 | |
| 67 | 22533 | QPSK | 217 | 374 | |
| 67 | 22533 | 16 QAM | 108 | 374 | |
| 68 | 22869 | QPSK | 217 | 375 | |
| 68 | 22869 | 16 QAM | 108 | 375 | |
| 69 | 23205 | QPSK | 217 | 376 | |
| 69 | 23205 | 16 QAM | 108 | 376 | |
| 70 | 23541 | QPSK | 217 | 377 | |
| 70 | 23541 | 16 QAM | 108 | 377 | |
| 71 | 23877 | QPSK | 217 | 378 | |
| 71 | 23877 | 16 QAM | 108 | 378 | |
| 72 | 24213 | QPSK | 217 | 378 | |
| 72 | 24213 | 16 QAM | 108 | 378 | |
| 73 | 24549 | QPSK | 217 | 379 | |
| 73 | 24549 | 16 QAM | 108 | 379 | |
| 74 | 24885 | QPSK | 217 | 380 | |
| 74 | 24885 | 16 QAM | 108 | 380 | |
| 75 | 25221 | QPSK | 217 | 381 | |
| 75 | 25221 | 16 QAM | 108 | 381 | |
| 76 | 25557 | QPSK | 217 | 382 | |
| 76 | 25557 | 16 QAM | 108 | 382 | |
| 77 | 25893 | QPSK | 217 | 383 | |
| 77 | 25893 | 16 QAM | 108 | 383 | |

| | | | | | |
|---|---|---|---|---|---|
| 78 | 26229 | QPSK | 217 | 383 | |
| 78 | 26229 | 16 QAM | 108 | 383 | |
| 79 | 26565 | QPSK | 217 | 384 | |
| 79 | 26565 | 16 QAM | 108 | 384 | |
| 80 | 26901 | QPSK | 217 | 385 | |
| 80 | 26901 | 16 QAM | 108 | 385 | |
| 81 | 27237 | QPSK | 217 | 386 | |
| 81 | 27237 | 16 QAM | 108 | 386 | |
| 82 | 27573 | QPSK | 217 | 386 | |
| 82 | 27573 | 16 QAM | 108 | 386 | |
| 83 | 27909 | QPSK | 217 | 387 | |
| 83 | 27909 | 16 QAM | 108 | 387 | |
| 84 | 28245 | QPSK | 217 | 388 | |
| 84 | 28245 | 16 QAM | 108 | 388 | |
| 85 | 28581 | QPSK | 217 | 389 | |
| 85 | 28581 | 16 QAM | 108 | 389 | |
| 86 | 28917 | QPSK | 217 | 389 | |
| 86 | 28917 | 16 QAM | 108 | 389 | |
| 87 | 29253 | QPSK | 217 | 390 | |
| 87 | 29253 | 16 QAM | 108 | 390 | |
| 88 | 29589 | QPSK | 217 | 391 | |
| 88 | 29589 | 16 QAM | 108 | 391 | |
| 89 | 29925 | QPSK | 217 | 392 | |
| 89 | 29925 | 16 QAM | 108 | 392 | |
| 90 | 30261 | QPSK | 217 | 392 | |
| 90 | 30261 | 16 QAM | 108 | 392 | |
| 91 | 30597 | QPSK | 217 | 393 | |
| 91 | 30597 | 16 QAM | 108 | 393 | |
| 92 | 30933 | QPSK | 217 | 394 | |
| 92 | 30933 | 16 QAM | 108 | 394 | |
| 93 | 31269 | QPSK | 217 | 394 | |
| 93 | 31269 | 16 QAM | 108 | 394 | |
| 94 | 31605 | QPSK | 217 | 395 | |
| 94 | 31605 | 16 QAM | 108 | 395 | |
| 95 | 31941 | QPSK | 217 | 396 | |
| 95 | 31941 | 16 QAM | 108 | 396 | |
| 96 | 32277 | QPSK | 217 | 396 | |
| 96 | 32277 | 16 QAM | 108 | 396 | |
| 97 | 32613 | QPSK | 217 | 397 | |
| 97 | 32613 | 16 QAM | 108 | 397 | |
| 98 | 32949 | QPSK | 217 | 398 | |
| 98 | 32949 | 16 QAM | 108 | 398 | |
| 99 | 33285 | QPSK | 217 | 398 | |
| 99 | 33285 | 16 QAM | 108 | 398 | |
| 100 | 33621 | QPSK | 217 | 399 | |
| 100 | 33621 | 16 QAM | 108 | 399 | |
| 101 | 33957 | QPSK | 217 | 399 | |
| 101 | 33957 | 16 QAM | 108 | 399 | |
| 102 | 34293 | QPSK | 217 | 400 | |
| 102 | 34293 | 16 QAM | 108 | 400 | |
| 103 | 34629 | QPSK | 217 | 401 | |
| 103 | 34629 | 16 QAM | 108 | 401 | |
| 104 | 34965 | QPSK | 217 | 401 | |

| | | | | | |
|---|---|---|---|---|---|
| 104 | 34965 | 16 QAM | 108 | 401 | |
| 105 | 35301 | QPSK | 217 | 402 | |
| 105 | 35301 | 16 QAM | 108 | 402 | |
| 106 | 35637 | QPSK | 217 | 403 | |
| 106 | 35637 | 16 QAM | 108 | 403 | |
| 107 | 35973 | QPSK | 217 | 403 | |
| 107 | 35973 | 16 QAM | 108 | 403 | |

**Table 18.3.1.4.3.7: TFRC test points for UE category 7 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 33 | 285 | |
| 17 | 5733 | QPSK | 69 | 288 | |
| 17 | 5733 | 16 QAM | 34 | 288 | |
| 18 | 6069 | QPSK | 75 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 78 | 295 | |
| 19 | 6405 | 16 QAM | 39 | 295 | |
| 20 | 6741 | QPSK | 84 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 88 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 90 | 304 | |
| 22 | 7413 | 16 QAM | 45 | 304 | |
| 23 | 7749 | QPSK | 93 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 100 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 100 | 312 | |
| 25 | 8421 | 16 QAM | 51 | 312 | |
| 26 | 8757 | QPSK | 108 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 112 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 116 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 120 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 124 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 128 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 128 | 328 | |
| 32 | 10773 | 16 QAM | 66 | 328 | |
| 33 | 11109 | QPSK | 128 | 330 | |
| 33 | 11109 | 16 QAM | 69 | 330 | |
| 34 | 11445 | QPSK | 128 | 332 | |
| 34 | 11445 | 16 QAM | 69 | 332 | |
| 35 | 11781 | QPSK | 128 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |
| 36 | 12117 | QPSK | 128 | 335 | |
| 36 | 12117 | 16 QAM | 72 | 335 | |
| 37 | 12453 | QPSK | 128 | 337 | |
| 37 | 12453 | 16 QAM | 76 | 337 | |
| 38 | 12789 | QPSK | 128 | 339 | |
| 38 | 12789 | 16 QAM | 78 | 339 | |
| 39 | 13125 | QPSK | 128 | 340 | |
| 39 | 13125 | 16 QAM | 81 | 340 | |
| 40 | 13461 | QPSK | 128 | 342 | |
| 40 | 13461 | 16 QAM | 81 | 342 | |
| 41 | 13797 | QPSK | 128 | 343 | |
| 41 | 13797 | 16 QAM | 84 | 343 | |
| 42 | 14133 | QPSK | 128 | 345 | |
| 42 | 14133 | 16 QAM | 88 | 345 | |
| 43 | 14469 | QPSK | 128 | 346 | |
| 43 | 14469 | 16 QAM | 88 | 346 | |
| 44 | 14805 | QPSK | 128 | 348 | |
| 44 | 14805 | 16 QAM | 92 | 348 | |
| 45 | 15141 | QPSK | 128 | 349 | |
| 45 | 15141 | 16 QAM | 93 | 349 | |
| 46 | 15477 | QPSK | 128 | 350 | |
| 46 | 15477 | 16 QAM | 93 | 350 | |
| 47 | 15813 | QPSK | 128 | 352 | |
| 47 | 15813 | 16 QAM | 96 | 352 | |
| 48 | 16149 | QPSK | 128 | 353 | |
| 48 | 16149 | 16 QAM | 100 | 353 | |
| 49 | 16485 | QPSK | 128 | 354 | |
| 49 | 16485 | 16 QAM | 100 | 354 | |
| 50 | 16821 | QPSK | 128 | 356 | |
| 50 | 16821 | 16 QAM | 104 | 356 | |
| 51 | 17157 | QPSK | 128 | 357 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16 QAM | 104 | 357 | |
| 52 | 17493 | QPSK | 128 | 358 | |
| 52 | 17493 | 16 QAM | 108 | 358 | |
| 53 | 17829 | QPSK | 128 | 359 | |
| 53 | 17829 | 16 QAM | 108 | 359 | |
| 54 | 18165 | QPSK | 128 | 360 | |
| 54 | 18165 | 16 QAM | 108 | 360 | |
| 55 | 18501 | QPSK | 128 | 362 | |
| 55 | 18501 | 16 QAM | 112 | 362 | |
| 56 | 18837 | QPSK | 128 | 363 | |
| 56 | 18837 | 16 QAM | 116 | 363 | |
| 57 | 19173 | QPSK | 128 | 364 | |
| 57 | 19173 | 16 QAM | 116 | 364 | |
| 58 | 19509 | QPSK | 128 | 365 | |
| 58 | 19509 | 16 QAM | 120 | 365 | |
| 59 | 19845 | QPSK | 128 | 366 | |
| 59 | 19845 | 16 QAM | 120 | 366 | |
| 60 | 20181 | QPSK | 128 | 367 | |
| 60 | 20181 | 16 QAM | 124 | 367 | |
| 61 | 20517 | QPSK | 128 | 368 | |
| 61 | 20517 | 16 QAM | 124 | 368 | |
| 62 | 20853 | QPSK | 128 | 369 | |
| 62 | 20853 | 16 QAM | 128 | 369 | |
| 63 | 21189 | QPSK | 128 | 370 | |
| 63 | 21189 | 16 QAM | 128 | 370 | |
| 64 | 21525 | QPSK | 128 | 371 | |
| 64 | 21525 | 16 QAM | 128 | 371 | |
| 65 | 21861 | QPSK | 128 | 372 | |
| 65 | 21861 | 16 QAM | 128 | 372 | |
| 66 | 22197 | QPSK | 128 | 373 | |
| 66 | 22197 | 16 QAM | 128 | 373 | |
| 67 | 22533 | QPSK | 128 | 374 | |
| 67 | 22533 | 16 QAM | 128 | 374 | |
| 68 | 22869 | QPSK | 128 | 375 | |
| 68 | 22869 | 16 QAM | 128 | 375 | |
| 69 | 23205 | QPSK | 128 | 376 | |
| 69 | 23205 | 16 QAM | 128 | 376 | |
| 70 | 23541 | QPSK | 128 | 377 | |
| 70 | 23541 | 16 QAM | 128 | 377 | |
| 71 | 23877 | QPSK | 128 | 380 | |
| 71 | 23877 | 16 QAM | 128 | 378 | |
| 72 | 24213 | QPSK | 128 | 380 | |
| 72 | 24213 | 16 QAM | 128 | 378 | |
| 73 | 24549 | QPSK | 128 | 380 | |
| 73 | 24549 | 16 QAM | 128 | 379 | |
| 74 | 24885 | QPSK | 128 | 380 | |
| 74 | 24885 | 16 QAM | 128 | 380 | |
| 75 | 25221 | QPSK | 128 | 381 | |
| 75 | 25221 | 16 QAM | 128 | 381 | |
| 76 | 25557 | QPSK | 128 | 382 | |
| 76 | 25557 | 16 QAM | 128 | 382 | |
| 77 | 25893 | QPSK | 128 | 383 | |
| 77 | 25893 | 16 QAM | 128 | 383 | |

| | | | | | |
|---|---|---|---|---|---|
| 78 | 26229 | QPSK | 128 | 383 | |
| 78 | 26229 | 16 QAM | 128 | 383 | |
| 79 | 26565 | QPSK | 128 | 384 | |
| 79 | 26565 | 16 QAM | 128 | 384 | |
| 80 | 26901 | QPSK | 128 | 385 | |
| 80 | 26901 | 16 QAM | 128 | 385 | |
| 81 | 27237 | QPSK | 128 | 386 | |
| 81 | 27237 | 16 QAM | 128 | 386 | |
| 82 | 27573 | QPSK | 128 | 386 | |
| 82 | 27573 | 16 QAM | 128 | 386 | |
| 83 | 27909 | QPSK | 128 | 387 | |
| 83 | 27909 | 16 QAM | 128 | 387 | |
| 84 | 28245 | QPSK | 128 | 389 | |
| 84 | 28245 | 16 QAM | 128 | 388 | |
| 85 | 28581 | QPSK | 128 | 389 | |
| 85 | 28581 | 16 QAM | 128 | 389 | |
| 86 | 28917 | QPSK | 128 | 389 | |
| 86 | 28917 | 16 QAM | 128 | 389 | |
| 87 | 29253 | QPSK | 128 | 390 | |
| 87 | 29253 | 16 QAM | 128 | 390 | |
| 88 | 29589 | QPSK | 128 | 391 | |
| 88 | 29589 | 16 QAM | 128 | 391 | |
| 89 | 29925 | QPSK | 128 | 392 | |
| 89 | 29925 | 16 QAM | 128 | 392 | |
| 90 | 30261 | QPSK | 128 | 392 | |
| 90 | 30261 | 16 QAM | 128 | 392 | |
| 91 | 30597 | QPSK | 128 | 393 | |
| 91 | 30597 | 16 QAM | 128 | 393 | |
| 92 | 30933 | 16 QAM | 128 | 394 | |
| 93 | 31269 | 16 QAM | 128 | 394 | |
| 94 | 31605 | 16 QAM | 128 | 395 | |
| 95 | 31941 | 16 QAM | 128 | 396 | |
| 96 | 32277 | 16 QAM | 128 | 396 | |
| 97 | 32613 | 16 QAM | 128 | 397 | |
| 98 | 32949 | 16 QAM | 128 | 398 | |
| 99 | 33285 | 16 QAM | 128 | 398 | |
| 100 | 33621 | 16 QAM | 128 | 399 | |
| 101 | 33957 | 16 QAM | 128 | 399 | |
| 102 | 34293 | 16 QAM | 128 | 400 | |
| 103 | 34629 | 16 QAM | 128 | 401 | |
| 104 | 34965 | 16 QAM | 128 | 401 | |
| 105 | 35301 | 16 QAM | 128 | 402 | |
| 106 | 35637 | 16 QAM | 128 | 403 | |
| 107 | 35973 | 16 QAM | 128 | 403 | |
| 108 | 36309 | 16 QAM | 128 | 404 | |
| 109 | 36645 | 16 QAM | 128 | 404 | |
| 110 | 36981 | 16 QAM | 128 | 405 | |
| 111 | 37317 | 16 QAM | 128 | 405 | |
| 112 | 37653 | 16 QAM | 128 | 406 | |
| 113 | 37989 | 16 QAM | 128 | 406 | |
| 114 | 38325 | 16 QAM | 128 | 407 | |
| 115 | 38661 | 16 QAM | 128 | 408 | |
| 116 | 38997 | 16 QAM | 128 | 408 | |

| | | | | | |
|---|---|---|---|---|---|
| 117 | 39333 | 16 QAM | 128 | 409 | |
| 118 | 39669 | 16 QAM | 128 | 409 | |
| 119 | 40005 | 16 QAM | 128 | 410 | |
| 120 | 40341 | 16 QAM | 128 | 410 | |
| 121 | 40677 | 16 QAM | 128 | 411 | |
| 122 | 41013 | 16 QAM | 128 | 411 | |
| 123 | 41349 | 16 QAM | 128 | 412 | |
| 124 | 41685 | 16 QAM | 128 | 412 | |
| 125 | 42021 | 16 QAM | 128 | 413 | |
| 126 | 42357 | 16 QAM | 128 | 413 | |
| 127 | 42693 | 16 QAM | 128 | 414 | |
| 128 | 43029 | 16 QAM | 128 | 414 | |
| 129 | 43372 | 16 QAM | 128 | 415 | |
| 130 | 43708 | 16 QAM | 128 | 415 | |
| 131 | 44044 | 16 QAM | 128 | 416 | |
| 132 | 44380 | 16 QAM | 128 | 416 | |
| 133 | 44716 | 16 QAM | 128 | 417 | |
| 134 | 45052 | 16 QAM | 128 | 417 | |
| 135 | 45388 | 16 QAM | 128 | 418 | |
| 136 | 45724 | 16 QAM | 128 | 418 | |
| 137 | 46060 | 16 QAM | 128 | 419 | |
| 138 | 46396 | 16 QAM | 128 | 419 | |
| 139 | 46732 | 16 QAM | 128 | 419 | |
| 140 | 47068 | 16 QAM | 128 | 420 | |
| 141 | 47404 | 16 QAM | 128 | 420 | |
| 142 | 47740 | 16 QAM | 128 | 423 | |
| 143 | 48076 | 16 QAM | 128 | 423 | |
| 144 | 48412 | 16 QAM | 128 | 423 | |
| 145 | 48748 | 16 QAM | 128 | 423 | |
| 146 | 49084 | 16 QAM | 128 | 423 | |
| 147 | 49420 | 16 QAM | 128 | 423 | |
| 148 | 49756 | 16 QAM | 128 | 423 | |
| 149 | 50092 | 16 QAM | 128 | 424 | |
| 150 | 50428 | 16 QAM | 128 | 424 | |
| 151 | 50764 | 16 QAM | 128 | 425 | |
| 152 | 51100 | 16 QAM | 128 | 425 | |
| 153 | 51436 | 16 QAM | 128 | 425 | |
| 154 | 51772 | 16 QAM | 128 | 427 | |
| 155 | 52108 | 16 QAM | 128 | 427 | |
| 156 | 52444 | 16 QAM | 128 | 427 | |
| 157 | 52780 | 16 QAM | 128 | 427 | |

**Table 18.3.1.4.3.8: TFRC test points for UE category 8 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 33 | 285 | |
| 17 | 5733 | QPSK | 70 | 288 | |
| 17 | 5733 | 16 QAM | 35 | 288 | |
| 18 | 6069 | QPSK | 75 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 78 | 295 | |
| 19 | 6405 | 16 QAM | 39 | 295 | |
| 20 | 6741 | QPSK | 84 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 88 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 91 | 304 | |
| 22 | 7413 | 16 QAM | 45 | 304 | |
| 23 | 7749 | QPSK | 95 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 100 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 102 | 312 | |
| 25 | 8421 | 16 QAM | 51 | 312 | |
| 26 | 8757 | QPSK | 108 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 112 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 116 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 121 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 125 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 128 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 133 | 328 | |
| 32 | 10773 | 16 QAM | 66 | 328 | |
| 33 | 11109 | QPSK | 138 | 330 | |
| 33 | 11109 | 16 QAM | 69 | 330 | |
| 34 | 11445 | QPSK | 140 | 332 | |
| 34 | 11445 | 16 QAM | 70 | 332 | |
| 35 | 11781 | QPSK | 145 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |
| 36 | 12117 | QPSK | 147 | 335 | |
| 36 | 12117 | 16 QAM | 72 | 335 | |
| 37 | 12453 | QPSK | 154 | 337 | |
| 37 | 12453 | 16 QAM | 77 | 337 | |
| 38 | 12789 | QPSK | 156 | 339 | |
| 38 | 12789 | 16 QAM | 78 | 339 | |
| 39 | 13125 | QPSK | 162 | 340 | |
| 39 | 13125 | 16 QAM | 81 | 340 | |
| 40 | 13461 | QPSK | 165 | 342 | |
| 40 | 13461 | 16 QAM | 81 | 342 | |
| 41 | 13797 | QPSK | 170 | 343 | |
| 41 | 13797 | 16 QAM | 85 | 343 | |
| 42 | 14133 | QPSK | 176 | 345 | |
| 42 | 14133 | 16 QAM | 88 | 345 | |
| 43 | 14469 | QPSK | 176 | 346 | |
| 43 | 14469 | 16 QAM | 88 | 346 | |
| 44 | 14805 | QPSK | 184 | 348 | |
| 44 | 14805 | 16 QAM | 92 | 348 | |
| 45 | 15141 | QPSK | 187 | 349 | |
| 45 | 15141 | 16 QAM | 93 | 349 | |
| 46 | 15477 | QPSK | 190 | 350 | |
| 46 | 15477 | 16 QAM | 95 | 350 | |
| 47 | 15813 | QPSK | 196 | 352 | |
| 47 | 15813 | 16 QAM | 98 | 352 | |
| 48 | 16149 | QPSK | 200 | 353 | |
| 48 | 16149 | 16 QAM | 100 | 353 | |
| 49 | 16485 | QPSK | 203 | 354 | |
| 49 | 16485 | 16 QAM | 100 | 354 | |
| 50 | 16821 | QPSK | 209 | 356 | |
| 50 | 16821 | 16 QAM | 104 | 356 | |
| 51 | 17157 | QPSK | 210 | 357 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16 QAM | 105 | 357 | |
| 52 | 17493 | QPSK | 216 | 358 | |
| 52 | 17493 | 16 QAM | 108 | 358 | |
| 53 | 17829 | QPSK | 220 | 359 | |
| 53 | 17829 | 16 QAM | 110 | 359 | |
| 54 | 18165 | QPSK | 220 | 360 | |
| 54 | 18165 | 16 QAM | 110 | 360 | |
| 55 | 18501 | QPSK | 231 | 362 | |
| 55 | 18501 | 16 QAM | 115 | 362 | |
| 56 | 18837 | QPSK | 234 | 363 | |
| 56 | 18837 | 16 QAM | 117 | 363 | |
| 57 | 19173 | QPSK | 234 | 364 | |
| 57 | 19173 | 16 QAM | 119 | 364 | |
| 58 | 19509 | QPSK | 242 | 365 | |
| 58 | 19509 | 16 QAM | 121 | 365 | |
| 59 | 19845 | QPSK | 243 | 366 | |
| 59 | 19845 | 16 QAM | 121 | 366 | |
| 60 | 20181 | QPSK | 250 | 367 | |
| 60 | 20181 | 16 QAM | 125 | 367 | |
| 61 | 20517 | QPSK | 253 | 368 | |
| 61 | 20517 | 16 QAM | 126 | 368 | |
| 62 | 20853 | QPSK | 256 | 369 | |
| 62 | 20853 | 16 QAM | 128 | 369 | |
| 63 | 21189 | QPSK | 261 | 370 | |
| 63 | 21189 | 16 QAM | 130 | 370 | |
| 64 | 21525 | QPSK | 264 | 371 | |
| 64 | 21525 | 16 QAM | 133 | 371 | |
| 65 | 21861 | QPSK | 270 | 372 | |
| 65 | 21861 | 16 QAM | 135 | 372 | |
| 66 | 22197 | QPSK | 275 | 373 | |
| 66 | 22197 | 16 QAM | 136 | 373 | |
| 67 | 22533 | QPSK | 280 | 374 | |
| 67 | 22533 | 16 QAM | 140 | 374 | |
| 68 | 22869 | QPSK | 280 | 375 | |
| 68 | 22869 | 16 QAM | 140 | 375 | |
| 69 | 23205 | QPSK | 288 | 376 | |
| 69 | 23205 | 16 QAM | 144 | 376 | |
| 70 | 23541 | QPSK | 289 | 377 | |
| 70 | 23541 | 16 QAM | 144 | 377 | |
| 71 | 23877 | QPSK | 289 | 378 | |
| 71 | 23877 | 16 QAM | 144 | 378 | |
| 72 | 24213 | QPSK | 289 | 378 | |
| 72 | 24213 | 16 QAM | 144 | 378 | |
| 73 | 24549 | QPSK | 289 | 379 | |
| 73 | 24549 | 16 QAM | 144 | 379 | |
| 74 | 24885 | QPSK | 289 | 380 | |
| 74 | 24885 | 16 QAM | 144 | 380 | |
| 75 | 25221 | QPSK | 289 | 381 | |
| 75 | 25221 | 16 QAM | 144 | 381 | |
| 76 | 25557 | QPSK | 289 | 382 | |
| 76 | 25557 | 16 QAM | 144 | 382 | |
| 77 | 25893 | QPSK | 289 | 383 | |
| 77 | 25893 | 16 QAM | 144 | 383 | |

| | | | | | |
|---|---|---|---|---|---|
| 78 | 26229 | QPSK | 289 | 383 | |
| 78 | 26229 | 16 QAM | 144 | 383 | |
| 79 | 26565 | QPSK | 289 | 384 | |
| 79 | 26565 | 16 QAM | 144 | 384 | |
| 80 | 26901 | QPSK | 289 | 385 | |
| 80 | 26901 | 16 QAM | 144 | 385 | |
| 81 | 27237 | QPSK | 289 | 386 | |
| 81 | 27237 | 16 QAM | 144 | 386 | |
| 82 | 27573 | QPSK | 289 | 386 | |
| 82 | 27573 | 16 QAM | 144 | 386 | |
| 83 | 27909 | QPSK | 289 | 387 | |
| 83 | 27909 | 16 QAM | 144 | 387 | |
| 84 | 28245 | QPSK | 289 | 388 | |
| 84 | 28245 | 16 QAM | 144 | 388 | |
| 85 | 28581 | QPSK | 289 | 389 | |
| 85 | 28581 | 16 QAM | 144 | 389 | |
| 86 | 28917 | QPSK | 289 | 389 | |
| 86 | 28917 | 16 QAM | 144 | 389 | |
| 87 | 29253 | QPSK | 289 | 390 | |
| 87 | 29253 | 16 QAM | 144 | 390 | |
| 88 | 29589 | QPSK | 289 | 391 | |
| 88 | 29589 | 16 QAM | 144 | 391 | |
| 89 | 29925 | QPSK | 289 | 392 | |
| 89 | 29925 | 16 QAM | 144 | 392 | |
| 90 | 30261 | QPSK | 289 | 392 | |
| 90 | 30261 | 16 QAM | 144 | 392 | |
| 91 | 30597 | QPSK | 289 | 393 | |
| 91 | 30597 | 16 QAM | 144 | 393 | |
| 92 | 30933 | QPSK | 289 | 394 | |
| 92 | 30933 | 16 QAM | 144 | 394 | |
| 93 | 31269 | QPSK | 289 | 394 | |
| 93 | 31269 | 16 QAM | 144 | 394 | |
| 94 | 31605 | QPSK | 289 | 395 | |
| 94 | 31605 | 16 QAM | 144 | 395 | |
| 95 | 31941 | QPSK | 289 | 396 | |
| 95 | 31941 | 16 QAM | 144 | 396 | |
| 96 | 32277 | QPSK | 289 | 396 | |
| 96 | 32277 | 16 QAM | 144 | 396 | |
| 97 | 32613 | QPSK | 289 | 397 | |
| 97 | 32613 | 16 QAM | 144 | 397 | |
| 98 | 32949 | QPSK | 289 | 398 | |
| 98 | 32949 | 16 QAM | 144 | 398 | |
| 99 | 33285 | QPSK | 289 | 398 | |
| 99 | 33285 | 16 QAM | 144 | 398 | |
| 100 | 33621 | QPSK | 289 | 399 | |
| 100 | 33621 | 16 QAM | 144 | 399 | |
| 101 | 33957 | QPSK | 289 | 399 | |
| 101 | 33957 | 16 QAM | 144 | 399 | |
| 102 | 34293 | QPSK | 289 | 400 | |
| 102 | 34293 | 16 QAM | 144 | 400 | |
| 103 | 34629 | QPSK | 289 | 401 | |
| 103 | 34629 | 16 QAM | 144 | 401 | |
| 104 | 34965 | QPSK | 289 | 401 | |

| | | | | | |
|---|---|---|---|---|---|
| 104 | 34965 | 16 QAM | 144 | 401 | |
| 105 | 35301 | QPSK | 289 | 402 | |
| 105 | 35301 | 16 QAM | 144 | 402 | |
| 106 | 35637 | QPSK | 289 | 403 | |
| 106 | 35637 | 16 QAM | 144 | 403 | |
| 107 | 35973 | QPSK | 289 | 403 | |
| 107 | 35973 | 16 QAM | 144 | 403 | |
| 108 | 36309 | QPSK | 289 | 404 | |
| 108 | 36309 | 16 QAM | 144 | 404 | |
| 109 | 36645 | QPSK | 289 | 404 | |
| 109 | 36645 | 16 QAM | 144 | 404 | |
| 110 | 36981 | QPSK | 289 | 405 | |
| 110 | 36981 | 16 QAM | 144 | 405 | |
| 111 | 37317 | QPSK | 289 | 405 | |
| 111 | 37317 | 16 QAM | 144 | 405 | |
| 112 | 37653 | QPSK | 289 | 406 | |
| 112 | 37653 | 16 QAM | 144 | 406 | |
| 113 | 37989 | QPSK | 289 | 406 | |
| 113 | 37989 | 16 QAM | 144 | 406 | |
| 114 | 38325 | QPSK | 289 | 407 | |
| 114 | 38325 | 16 QAM | 144 | 407 | |
| 115 | 38661 | QPSK | 289 | 408 | |
| 115 | 38661 | 16 QAM | 144 | 408 | |
| 116 | 38997 | QPSK | 289 | 408 | |
| 116 | 38997 | 16 QAM | 144 | 408 | |
| 117 | 39333 | QPSK | 289 | 409 | |
| 117 | 39333 | 16 QAM | 144 | 409 | |
| 118 | 39669 | QPSK | 289 | 409 | |
| 118 | 39669 | 16 QAM | 144 | 409 | |
| 119 | 40005 | QPSK | 289 | 410 | |
| 119 | 40005 | 16 QAM | 144 | 410 | |
| 120 | 40341 | QPSK | 289 | 410 | |
| 120 | 40341 | 16 QAM | 144 | 410 | |
| 121 | 40677 | QPSK | 289 | 411 | |
| 121 | 40677 | 16 QAM | 144 | 411 | |
| 122 | 41013 | QPSK | 289 | 411 | |
| 122 | 41013 | 16 QAM | 144 | 411 | |
| 123 | 41349 | QPSK | 289 | 412 | |
| 123 | 41349 | 16 QAM | 144 | 412 | |
| 124 | 41685 | QPSK | 289 | 412 | |
| 124 | 41685 | 16 QAM | 144 | 412 | |
| 125 | 42021 | QPSK | 289 | 413 | |
| 125 | 42021 | 16 QAM | 144 | 413 | |
| 126 | 42357 | QPSK | 289 | 413 | |
| 126 | 42357 | 16 QAM | 144 | 413 | |
| 127 | 42693 | QPSK | 289 | 414 | |
| 127 | 42693 | 16 QAM | 144 | 414 | |
| 128 | 43029 | QPSK | 289 | 414 | |
| 128 | 43029 | 16 QAM | 144 | 414 | |
| 129 | 43372 | QPSK | 289 | 415 | |
| 129 | 43372 | 16 QAM | 144 | 415 | |
| 130 | 43708 | QPSK | 289 | 415 | |
| 130 | 43708 | 16 QAM | 144 | 415 | |

| | | | | | |
|---|---|---|---|---|---|
| 131 | 44044 | QPSK | 289 | 416 | |
| 131 | 44044 | 16 QAM | 144 | 416 | |
| 132 | 44380 | QPSK | 289 | 416 | |
| 132 | 44380 | 16 QAM | 144 | 416 | |
| 133 | 44716 | QPSK | 289 | 417 | |
| 133 | 44716 | 16 QAM | 144 | 417 | |
| 134 | 45052 | QPSK | 289 | 417 | |
| 134 | 45052 | 16 QAM | 144 | 417 | |
| 135 | 45388 | QPSK | 289 | 418 | |
| 135 | 45388 | 16 QAM | 144 | 418 | |
| 136 | 45724 | QPSK | 289 | 418 | |
| 136 | 45724 | 16 QAM | 144 | 418 | |
| 137 | 46060 | QPSK | 289 | 419 | |
| 137 | 46060 | 16 QAM | 144 | 419 | |
| 138 | 46396 | QPSK | 289 | 419 | |
| 138 | 46396 | 16 QAM | 144 | 419 | |
| 139 | 46732 | QPSK | 289 | 419 | |
| 139 | 46732 | 16 QAM | 144 | 419 | |
| 140 | 47068 | QPSK | 289 | 420 | |
| 140 | 47068 | 16 QAM | 144 | 420 | |
| 141 | 47404 | QPSK | 289 | 420 | |
| 141 | 47404 | 16 QAM | 144 | 420 | |
| 142 | 47740 | QPSK | 289 | 421 | |
| 142 | 47740 | 16 QAM | 144 | 421 | |
| 143 | 48076 | QPSK | 289 | 421 | |
| 143 | 48076 | 16 QAM | 144 | 421 | |
| 144 | 48412 | QPSK | 289 | 422 | |
| 144 | 48412 | 16 QAM | 144 | 422 | |
| 145 | 48748 | QPSK | 289 | 422 | |
| 145 | 48748 | 16 QAM | 144 | 422 | |
| 146 | 49084 | QPSK | 289 | 422 | |
| 146 | 49084 | 16 QAM | 144 | 422 | |
| 147 | 49420 | QPSK | 289 | 423 | |
| 147 | 49420 | 16 QAM | 144 | 423 | |
| 148 | 49756 | QPSK | 289 | 423 | |
| 148 | 49756 | 16 QAM | 144 | 423 | |
| 149 | 50092 | QPSK | 289 | 424 | |
| 149 | 50092 | 16 QAM | 144 | 424 | |
| 150 | 50428 | QPSK | 289 | 424 | |
| 150 | 50428 | 16 QAM | 144 | 424 | |
| 151 | 50764 | QPSK | 289 | 425 | |
| 151 | 50764 | 16 QAM | 144 | 425 | |
| 152 | 51100 | QPSK | 289 | 425 | |
| 152 | 51100 | 16 QAM | 144 | 425 | |
| 153 | 51436 | QPSK | 289 | 425 | |
| 153 | 51436 | 16 QAM | 144 | 425 | |
| 154 | 51772 | QPSK | 289 | 426 | |
| 154 | 51772 | 16 QAM | 144 | 426 | |
| 155 | 52108 | QPSK | 289 | 426 | |
| 155 | 52108 | 16 QAM | 144 | 426 | |
| 156 | 52444 | QPSK | 289 | 427 | |
| 156 | 52444 | 16 QAM | 144 | 427 | |
| 157 | 52780 | QPSK | 289 | 427 | |

| | | | | | |
|---|---|---|---|---|---|
| 157 | 52780 | 16 QAM | 144 | 427 | |

**Table 18.3.1.4.3.9: TFRC test points for UE category 9 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 33 | 285 | |
| 17 | 5733 | QPSK | 70 | 288 | |
| 17 | 5733 | 16 QAM | 35 | 288 | |
| 18 | 6069 | QPSK | 75 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 78 | 295 | |
| 19 | 6405 | 16 QAM | 39 | 295 | |
| 20 | 6741 | QPSK | 84 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 88 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 90 | 304 | |
| 22 | 7413 | 16 QAM | 45 | 304 | |
| 23 | 7749 | QPSK | 95 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 100 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 8421 | QPSK | 100 | 312 | |
| 25 | 8421 | 16 QAM | 51 | 312 | |
| 26 | 8757 | QPSK | 108 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 112 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 116 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 120 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 125 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 128 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 130 | 328 | |
| 32 | 10773 | 16 QAM | 66 | 328 | |
| 33 | 11109 | QPSK | 135 | 330 | |
| 33 | 11109 | 16 QAM | 69 | 330 | |
| 34 | 11445 | QPSK | 140 | 332 | |
| 34 | 11445 | 16 QAM | 70 | 332 | |
| 35 | 11781 | QPSK | 145 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |
| 36 | 12117 | QPSK | 145 | 335 | |
| 36 | 12117 | 16 QAM | 72 | 335 | |
| 37 | 12453 | QPSK | 150 | 337 | |
| 37 | 12453 | 16 QAM | 76 | 337 | |
| 38 | 12789 | QPSK | 155 | 339 | |
| 38 | 12789 | 16 QAM | 78 | 339 | |
| 39 | 13125 | QPSK | 160 | 340 | |
| 39 | 13125 | 16 QAM | 81 | 340 | |
| 40 | 13461 | QPSK | 160 | 342 | |
| 40 | 13461 | 16 QAM | 81 | 342 | |
| 41 | 13797 | QPSK | 160 | 343 | |
| 41 | 13797 | 16 QAM | 85 | 343 | |
| 42 | 14133 | QPSK | 160 | 345 | |
| 42 | 14133 | 16 QAM | 88 | 345 | |
| 43 | 14469 | QPSK | 160 | 346 | |
| 43 | 14469 | 16 QAM | 88 | 346 | |
| 44 | 14805 | QPSK | 160 | 348 | |
| 44 | 14805 | 16 QAM | 92 | 348 | |
| 45 | 15141 | QPSK | 160 | 349 | |
| 45 | 15141 | 16 QAM | 93 | 349 | |
| 46 | 15477 | QPSK | 160 | 350 | |
| 46 | 15477 | 16 QAM | 95 | 350 | |
| 47 | 15813 | QPSK | 160 | 352 | |
| 47 | 15813 | 16 QAM | 96 | 352 | |
| 48 | 16149 | QPSK | 160 | 353 | |
| 48 | 16149 | 16 QAM | 100 | 353 | |
| 49 | 16485 | QPSK | 160 | 354 | |
| 49 | 16485 | 16 QAM | 100 | 354 | |
| 50 | 16821 | QPSK | 160 | 356 | |
| 50 | 16821 | 16 QAM | 104 | 356 | |
| 51 | 17157 | QPSK | 160 | 357 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 17157 | 16 QAM | 105 | 357 | |
| 52 | 17493 | QPSK | 160 | 358 | |
| 52 | 17493 | 16 QAM | 108 | 358 | |
| 53 | 17829 | QPSK | 160 | 359 | |
| 53 | 17829 | 16 QAM | 110 | 359 | |
| 54 | 18165 | QPSK | 160 | 360 | |
| 54 | 18165 | 16 QAM | 110 | 360 | |
| 55 | 18501 | QPSK | 160 | 362 | |
| 55 | 18501 | 16 QAM | 115 | 362 | |
| 56 | 18837 | QPSK | 160 | 363 | |
| 56 | 18837 | 16 QAM | 116 | 363 | |
| 57 | 19173 | QPSK | 160 | 364 | |
| 57 | 19173 | 16 QAM | 116 | 364 | |
| 58 | 19509 | QPSK | 160 | 365 | |
| 58 | 19509 | 16 QAM | 120 | 365 | |
| 59 | 19845 | QPSK | 160 | 366 | |
| 59 | 19845 | 16 QAM | 120 | 366 | |
| 60 | 20181 | QPSK | 160 | 367 | |
| 60 | 20181 | 16 QAM | 125 | 367 | |
| 61 | 20517 | QPSK | 160 | 368 | |
| 61 | 20517 | 16 QAM | 125 | 368 | |
| 62 | 20853 | QPSK | 160 | 369 | |
| 62 | 20853 | 16 QAM | 128 | 369 | |
| 63 | 21189 | QPSK | 160 | 370 | |
| 63 | 21189 | 16 QAM | 130 | 370 | |
| 64 | 21525 | QPSK | 160 | 371 | |
| 64 | 21525 | 16 QAM | 130 | 371 | |
| 65 | 21861 | QPSK | 160 | 372 | |
| 65 | 21861 | 16 QAM | 135 | 372 | |
| 66 | 22197 | QPSK | 160 | 373 | |
| 66 | 22197 | 16 QAM | 135 | 373 | |
| 67 | 22533 | QPSK | 160 | 374 | |
| 67 | 22533 | 16 QAM | 140 | 374 | |
| 68 | 22869 | QPSK | 160 | 375 | |
| 68 | 22869 | 16 QAM | 140 | 375 | |
| 69 | 23205 | QPSK | 160 | 376 | |
| 69 | 23205 | 16 QAM | 140 | 376 | |
| 70 | 23541 | QPSK | 160 | 377 | |
| 70 | 23541 | 16 QAM | 145 | 377 | |
| 71 | 23877 | QPSK | 160 | 378 | |
| 71 | 23877 | 16 QAM | 145 | 378 | |
| 72 | 24213 | QPSK | 160 | 378 | |
| 72 | 24213 | 16 QAM | 145 | 378 | |
| 73 | 24549 | QPSK | 160 | 379 | |
| 73 | 24549 | 16 QAM | 150 | 379 | |
| 74 | 24885 | QPSK | 160 | 380 | |
| 74 | 24885 | 16 QAM | 150 | 380 | |
| 75 | 25221 | QPSK | 160 | 381 | |
| 75 | 25221 | 16 QAM | 155 | 381 | |
| 76 | 25557 | QPSK | 160 | 382 | |
| 76 | 25557 | 16 QAM | 155 | 382 | |
| 77 | 25893 | QPSK | 160 | 383 | |
| 77 | 25893 | 16 QAM | 160 | 383 | |

| | | | | | |
|---|---|---|---|---|---|
| 78 | 26229 | QPSK | 160 | 383 | |
| 78 | 26229 | 16 QAM | 160 | 383 | |
| 79 | 26565 | QPSK | 160 | 384 | |
| 79 | 26565 | 16 QAM | 160 | 384 | |
| 80 | 26901 | QPSK | 160 | 385 | |
| 80 | 26901 | 16 QAM | 160 | 385 | |
| 81 | 27237 | QPSK | 160 | 386 | |
| 81 | 27237 | 16 QAM | 160 | 386 | |
| 82 | 27573 | QPSK | 160 | 386 | |
| 82 | 27573 | 16 QAM | 160 | 386 | |
| 83 | 27909 | QPSK | 160 | 387 | |
| 83 | 27909 | 16 QAM | 160 | 387 | |
| 84 | 28245 | QPSK | 160 | 388 | |
| 84 | 28245 | 16 QAM | 160 | 388 | |
| 85 | 28581 | QPSK | 160 | 389 | |
| 85 | 28581 | 16 QAM | 160 | 389 | |
| 86 | 28917 | QPSK | 160 | 389 | |
| 86 | 28917 | 16 QAM | 160 | 389 | |
| 87 | 29253 | QPSK | 160 | 390 | |
| 87 | 29253 | 16 QAM | 160 | 390 | |
| 88 | 29589 | QPSK | 160 | 391 | |
| 88 | 29589 | 16 QAM | 160 | 391 | |
| 89 | 29925 | QPSK | 160 | 393 | |
| 89 | 29925 | 16 QAM | 160 | 392 | |
| 90 | 30261 | QPSK | 160 | 393 | |
| 90 | 30261 | 16 QAM | 160 | 392 | |
| 91 | 30597 | QPSK | 160 | 393 | |
| 91 | 30597 | 16 QAM | 160 | 393 | |
| 92 | 30933 | QPSK | 160 | 394 | |
| 92 | 30933 | 16 QAM | 160 | 394 | |
| 93 | 31269 | QPSK | 160 | 394 | |
| 93 | 31269 | 16 QAM | 160 | 394 | |
| 94 | 31605 | QPSK | 160 | 395 | |
| 94 | 31605 | 16 QAM | 160 | 395 | |
| 95 | 31941 | QPSK | 160 | 396 | |
| 95 | 31941 | 16 QAM | 160 | 396 | |
| 96 | 32277 | QPSK | 160 | 396 | |
| 96 | 32277 | 16 QAM | 160 | 396 | |
| 97 | 32613 | QPSK | 160 | 397 | |
| 97 | 32613 | 16 QAM | 160 | 397 | |
| 98 | 32949 | QPSK | 160 | 398 | |
| 98 | 32949 | 16 QAM | 160 | 398 | |
| 99 | 33285 | QPSK | 160 | 398 | |
| 99 | 33285 | 16 QAM | 160 | 398 | |
| 100 | 33621 | QPSK | 160 | 399 | |
| 100 | 33621 | 16 QAM | 160 | 399 | |
| 101 | 33957 | QPSK | 160 | 399 | |
| 101 | 33957 | 16 QAM | 160 | 399 | |
| 102 | 34293 | QPSK | 160 | 400 | |
| 102 | 34293 | 16 QAM | 160 | 400 | |
| 103 | 34629 | QPSK | 160 | 401 | |
| 103 | 34629 | 16 QAM | 160 | 401 | |
| 104 | 34965 | QPSK | 160 | 401 | |

| | | | | | |
|---|---|---|---|---|---|
| 104 | 34965 | 16 QAM | 160 | 401 | |
| 105 | 35301 | QPSK | 160 | 403 | |
| 105 | 35301 | 16 QAM | 160 | 402 | |
| 106 | 35637 | QPSK | 160 | 403 | |
| 106 | 35637 | 16 QAM | 160 | 403 | |
| 107 | 35973 | QPSK | 160 | 403 | |
| 107 | 35973 | 16 QAM | 160 | 403 | |
| 108 | 36309 | QPSK | 160 | 404 | |
| 108 | 36309 | 16 QAM | 160 | 404 | |
| 109 | 36645 | QPSK | 160 | 404 | |
| 109 | 36645 | 16 QAM | 160 | 404 | |
| 110 | 36981 | QPSK | 160 | 405 | |
| 110 | 36981 | 16 QAM | 160 | 405 | |
| 111 | 37317 | QPSK | 160 | 405 | |
| 111 | 37317 | 16 QAM | 160 | 405 | |
| 112 | 37653 | QPSK | 160 | 406 | |
| 112 | 37653 | 16 QAM | 160 | 406 | |
| 113 | 37989 | QPSK | 160 | 406 | |
| 113 | 37989 | 16 QAM | 160 | 406 | |
| 114 | 38325 | QPSK | 160 | 407 | |
| 114 | 38325 | 16 QAM | 160 | 407 | |
| 115 | 38661 | 16 QAM | 160 | 408 | |
| 116 | 38997 | 16 QAM | 160 | 408 | |
| 117 | 39333 | 16 QAM | 160 | 409 | |
| 118 | 39669 | 16 QAM | 160 | 409 | |
| 119 | 40005 | 16 QAM | 160 | 410 | |
| 120 | 40341 | 16 QAM | 160 | 410 | |
| 121 | 40677 | 16 QAM | 160 | 411 | |
| 122 | 41013 | 16 QAM | 160 | 411 | |
| 123 | 41349 | 16 QAM | 160 | 412 | |
| 124 | 41685 | 16 QAM | 160 | 412 | |
| 125 | 42021 | 16 QAM | 160 | 413 | |
| 126 | 42357 | 16 QAM | 160 | 413 | |
| 127 | 42693 | 16 QAM | 160 | 414 | |
| 128 | 43029 | 16 QAM | 160 | 414 | |
| 129 | 43372 | 16 QAM | 160 | 415 | |
| 130 | 43708 | 16 QAM | 160 | 415 | |
| 131 | 44044 | 16 QAM | 160 | 416 | |
| 132 | 44380 | 16 QAM | 160 | 416 | |
| 133 | 44716 | 16 QAM | 160 | 417 | |
| 134 | 45052 | 16 QAM | 160 | 417 | |
| 135 | 45388 | 16 QAM | 160 | 418 | |
| 136 | 45724 | 16 QAM | 160 | 418 | |
| 137 | 46060 | 16 QAM | 160 | 419 | |
| 138 | 46396 | 16 QAM | 160 | 419 | |
| 139 | 46732 | 16 QAM | 160 | 419 | |
| 140 | 47068 | 16 QAM | 160 | 420 | |
| 141 | 47404 | 16 QAM | 160 | 420 | |
| 142 | 47740 | 16 QAM | 160 | 421 | |
| 143 | 48076 | 16 QAM | 160 | 421 | |
| 144 | 48412 | 16 QAM | 160 | 422 | |
| 145 | 48748 | 16 QAM | 160 | 422 | |
| 146 | 49084 | 16 QAM | 160 | 422 | |

| | | | | | |
|---|---|---|---|---|---|
| 147 | 49420 | 16 QAM | 160 | 423 | |
| 148 | 49756 | 16 QAM | 160 | 423 | |
| 149 | 50092 | 16 QAM | 160 | 424 | |
| 150 | 50428 | 16 QAM | 160 | 424 | |
| 151 | 50764 | 16 QAM | 160 | 425 | |
| 152 | 51100 | 16 QAM | 160 | 425 | |
| 153 | 51436 | 16 QAM | 160 | 425 | |
| 154 | 51772 | 16 QAM | 160 | 426 | |
| 155 | 52108 | 16 QAM | 160 | 426 | |
| 156 | 52444 | 16 QAM | 160 | 427 | |
| 157 | 52780 | 16 QAM | 160 | 427 | |
| 158 | 53116 | 16 QAM | 160 | 427 | |
| 159 | 53452 | 16 QAM | 160 | 428 | |
| 160 | 53788 | 16 QAM | 160 | 428 | |
| 161 | 54124 | 16 QAM | 160 | 429 | |
| 162 | 54460 | 16 QAM | 160 | 429 | |
| 163 | 54796 | 16 QAM | 160 | 429 | |
| 164 | 55132 | 16 QAM | 160 | 430 | |
| 165 | 55468 | 16 QAM | 160 | 430 | |
| 166 | 55804 | 16 QAM | 160 | 431 | |
| 167 | 56140 | 16 QAM | 160 | 431 | |
| 168 | 56476 | 16 QAM | 160 | 431 | |
| 169 | 56812 | 16 QAM | 160 | 432 | |
| 170 | 57148 | 16 QAM | 160 | 432 | |
| 171 | 57484 | 16 QAM | 160 | 432 | |
| 172 | 57820 | 16 QAM | 160 | 433 | |
| 173 | 58156 | 16 QAM | 160 | 433 | |
| 174 | 58492 | 16 QAM | 160 | 433 | |
| 175 | 58828 | 16 QAM | 160 | 434 | |
| 176 | 59164 | 16 QAM | 160 | 434 | |
| 177 | 59500 | 16 QAM | 160 | 437 | |
| 178 | 59836 | 16 QAM | 160 | 437 | |
| 179 | 60172 | 16 QAM | 160 | 437 | |
| 180 | 60508 | 16 QAM | 160 | 437 | |
| 181 | 60844 | 16 QAM | 160 | 437 | |
| 182 | 61180 | 16 QAM | 160 | 437 | |
| 183 | 61516 | 16 QAM | 160 | 437 | |
| 184 | 61852 | 16 QAM | 160 | 437 | |
| 185 | 62188 | 16 QAM | 160 | 437 | |
| 186 | 62524 | 16 QAM | 160 | 438 | |
| 187 | 62860 | 16 QAM | 160 | 438 | |
| 188 | 63196 | 16 QAM | 160 | 438 | |
| 189 | 63532 | 16 QAM | 160 | 439 | |
| 190 | 63868 | 16 QAM | 160 | 439 | |
| 191 | 64204 | 16 QAM | 160 | 439 | |
| 192 | 64540 | 16 QAM | 160 | 441 | |
| 193 | 64876 | 16 QAM | 160 | 441 | |
| 194 | 65212 | 16 QAM | 160 | 441 | |
| 195 | 65548 | 16 QAM | 160 | 441 | |
| 196 | 65884 | 16 QAM | 160 | 441 | |
| 197 | 66220 | 16 QAM | 160 | 441 | |
| 198 | 66556 | 16 QAM | 160 | 442 | |
| 199 | 66892 | 16 QAM | 160 | 442 | |

| | | | | | |
|---|---|---|---|---|---|
| 200 | 67228 | 16 QAM | 160 | 442 | |
| 201 | 67564 | 16 QAM | 160 | 442 | |
| 202 | 67900 | 16 QAM | 160 | 443 | |
| 203 | 68236 | 16 QAM | 160 | 443 | |
| 204 | 68572 | 16 QAM | 160 | 443 | |
| 205 | 68908 | 16 QAM | 160 | 444 | |
| 206 | 69244 | 16 QAM | 160 | 444 | |
| 207 | 69580 | 16 QAM | 160 | 444 | |
| 208 | 69916 | 16 QAM | 160 | 445 | |
| 209 | 70252 | 16 QAM | 160 | 445 | |
| 210 | 70588 | 16 QAM | 160 | 445 | |
| 211 | 70924 | 16 QAM | 160 | 445 | |
| 212 | 71260 | 16 QAM | 160 | 446 | |
| 213 | 71596 | 16 QAM | 160 | 446 | |
| 214 | 71932 | 16 QAM | 160 | 446 | |
| 215 | 72268 | 16 QAM | 160 | 447 | |
| 216 | 72604 | 16 QAM | 160 | 447 | |
| 217 | 72940 | 16 QAM | 160 | 447 | |

**Table 18.3.1.4.3.10: TFRC test points for UE category 10 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |

| | | | | | |
|---|---|---|---|---|---|
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 33 | 285 | |
| 17 | 5733 | QPSK | 70 | 288 | |
| 17 | 5733 | 16 QAM | 35 | 288 | |
| 18 | 6069 | QPSK | 75 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 78 | 295 | |
| 19 | 6405 | 16 QAM | 39 | 295 | |
| 20 | 6741 | QPSK | 84 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 88 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 91 | 304 | |
| 22 | 7413 | 16 QAM | 45 | 304 | |
| 23 | 7749 | QPSK | 95 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 100 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |
| 25 | 8421 | QPSK | 102 | 312 | |
| 25 | 8421 | 16 QAM | 51 | 312 | |
| 26 | 8757 | QPSK | 108 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 112 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 116 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 121 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 125 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 128 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 133 | 328 | |
| 32 | 10773 | 16 QAM | 66 | 328 | |
| 33 | 11109 | QPSK | 138 | 330 | |
| 33 | 11109 | 16 QAM | 69 | 330 | |
| 34 | 11445 | QPSK | 140 | 332 | |
| 34 | 11445 | 16 QAM | 70 | 332 | |
| 35 | 11781 | QPSK | 145 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |
| 36 | 12117 | QPSK | 147 | 335 | |
| 36 | 12117 | 16 QAM | 72 | 335 | |
| 37 | 12453 | QPSK | 154 | 337 | |
| 37 | 12453 | 16 QAM | 77 | 337 | |
| 38 | 12789 | QPSK | 156 | 339 | |
| 38 | 12789 | 16 QAM | 78 | 339 | |
| 39 | 13125 | QPSK | 162 | 340 | |
| 39 | 13125 | 16 QAM | 81 | 340 | |
| 40 | 13461 | QPSK | 165 | 342 | |
| 40 | 13461 | 16 QAM | 81 | 342 | |
| 41 | 13797 | QPSK | 170 | 343 | |

| | | | | | |
|---|---|---|---|---|---|
| 41 | 13797 | 16 QAM | 85 | 343 | |
| 42 | 14133 | QPSK | 176 | 345 | |
| 42 | 14133 | 16 QAM | 88 | 345 | |
| 43 | 14469 | QPSK | 176 | 346 | |
| 43 | 14469 | 16 QAM | 88 | 346 | |
| 44 | 14805 | QPSK | 184 | 348 | |
| 44 | 14805 | 16 QAM | 92 | 348 | |
| 45 | 15141 | QPSK | 187 | 349 | |
| 45 | 15141 | 16 QAM | 93 | 349 | |
| 46 | 15477 | QPSK | 190 | 350 | |
| 46 | 15477 | 16 QAM | 95 | 350 | |
| 47 | 15813 | QPSK | 196 | 352 | |
| 47 | 15813 | 16 QAM | 98 | 352 | |
| 48 | 16149 | QPSK | 200 | 353 | |
| 48 | 16149 | 16 QAM | 100 | 353 | |
| 49 | 16485 | QPSK | 203 | 354 | |
| 49 | 16485 | 16 QAM | 100 | 354 | |
| 50 | 16821 | QPSK | 209 | 356 | |
| 50 | 16821 | 16 QAM | 104 | 356 | |
| 51 | 17157 | QPSK | 210 | 357 | |
| 51 | 17157 | 16 QAM | 105 | 357 | |
| 52 | 17493 | QPSK | 216 | 358 | |
| 52 | 17493 | 16 QAM | 108 | 358 | |
| 53 | 17829 | QPSK | 220 | 359 | |
| 53 | 17829 | 16 QAM | 110 | 359 | |
| 54 | 18165 | QPSK | 220 | 360 | |
| 54 | 18165 | 16 QAM | 110 | 360 | |
| 55 | 18501 | QPSK | 231 | 362 | |
| 55 | 18501 | 16 QAM | 115 | 362 | |
| 56 | 18837 | QPSK | 234 | 363 | |
| 56 | 18837 | 16 QAM | 117 | 363 | |
| 57 | 19173 | QPSK | 234 | 364 | |
| 57 | 19173 | 16 QAM | 119 | 364 | |
| 58 | 19509 | QPSK | 242 | 365 | |
| 58 | 19509 | 16 QAM | 121 | 365 | |
| 59 | 19845 | QPSK | 243 | 366 | |
| 59 | 19845 | 16 QAM | 121 | 366 | |
| 60 | 20181 | QPSK | 250 | 367 | |
| 60 | 20181 | 16 QAM | 125 | 367 | |
| 61 | 20517 | QPSK | 253 | 368 | |
| 61 | 20517 | 16 QAM | 126 | 368 | |
| 62 | 20853 | QPSK | 256 | 369 | |
| 62 | 20853 | 16 QAM | 128 | 369 | |
| 63 | 21189 | QPSK | 261 | 370 | |
| 63 | 21189 | 16 QAM | 130 | 370 | |
| 64 | 21525 | QPSK | 264 | 371 | |
| 64 | 21525 | 16 QAM | 133 | 371 | |
| 65 | 21861 | QPSK | 270 | 372 | |
| 65 | 21861 | 16 QAM | 135 | 372 | |
| 66 | 22197 | QPSK | 275 | 373 | |
| 66 | 22197 | 16 QAM | 136 | 373 | |
| 67 | 22533 | QPSK | 280 | 374 | |
| 67 | 22533 | 16 QAM | 140 | 374 | |

| | | | | | |
|---|---|---|---|---|---|
| 68 | 22869 | QPSK | 280 | 375 | |
| 68 | 22869 | 16 QAM | 140 | 375 | |
| 69 | 23205 | QPSK | 288 | 376 | |
| 69 | 23205 | 16 QAM | 144 | 376 | |
| 70 | 23541 | QPSK | 290 | 377 | |
| 70 | 23541 | 16 QAM | 145 | 377 | |
| 71 | 23877 | QPSK | 297 | 378 | |
| 71 | 23877 | 16 QAM | 147 | 378 | |
| 72 | 24213 | QPSK | 297 | 378 | |
| 72 | 24213 | 16 QAM | 147 | 378 | |
| 73 | 24549 | QPSK | 300 | 379 | |
| 73 | 24549 | 16 QAM | 150 | 379 | |
| 74 | 24885 | QPSK | 308 | 380 | |
| 74 | 24885 | 16 QAM | 154 | 380 | |
| 75 | 25221 | QPSK | 312 | 381 | |
| 75 | 25221 | 16 QAM | 156 | 381 | |
| 76 | 25557 | QPSK | 312 | 382 | |
| 76 | 25557 | 16 QAM | 156 | 382 | |
| 77 | 25893 | QPSK | 320 | 383 | |
| 77 | 25893 | 16 QAM | 161 | 383 | |
| 78 | 26229 | QPSK | 320 | 383 | |
| 78 | 26229 | 16 QAM | 161 | 383 | |
| 79 | 26565 | QPSK | 324 | 384 | |
| 79 | 26565 | 16 QAM | 162 | 384 | |
| 80 | 26901 | QPSK | 330 | 385 | |
| 80 | 26901 | 16 QAM | 165 | 385 | |
| 81 | 27237 | QPSK | 336 | 386 | |
| 81 | 27237 | 16 QAM | 168 | 386 | |
| 82 | 27573 | QPSK | 336 | 386 | |
| 82 | 27573 | 16 QAM | 168 | 386 | |
| 83 | 27909 | QPSK | 341 | 387 | |
| 83 | 27909 | 16 QAM | 171 | 387 | |
| 84 | 28245 | QPSK | 348 | 388 | |
| 84 | 28245 | 16 QAM | 175 | 388 | |
| 85 | 28581 | QPSK | 352 | 389 | |
| 85 | 28581 | 16 QAM | 176 | 389 | |
| 86 | 28917 | QPSK | 352 | 389 | |
| 86 | 28917 | 16 QAM | 176 | 389 | |
| 87 | 29253 | QPSK | 360 | 390 | |
| 87 | 29253 | 16 QAM | 180 | 390 | |
| 88 | 29589 | QPSK | 360 | 391 | |
| 88 | 29589 | 16 QAM | 180 | 391 | |
| 89 | 29925 | QPSK | 361 | 392 | |
| 89 | 29925 | 16 QAM | 180 | 392 | |
| 90 | 30261 | QPSK | 361 | 392 | |
| 90 | 30261 | 16 QAM | 180 | 392 | |
| 91 | 30597 | QPSK | 361 | 393 | |
| 91 | 30597 | 16 QAM | 180 | 393 | |
| 92 | 30933 | QPSK | 361 | 394 | |
| 92 | 30933 | 16 QAM | 180 | 394 | |
| 93 | 31269 | QPSK | 361 | 394 | |
| 93 | 31269 | 16 QAM | 180 | 394 | |
| 94 | 31605 | QPSK | 361 | 395 | |

| | | | | | |
|---|---|---|---|---|---|
| 94 | 31605 | 16 QAM | 180 | 395 | |
| 95 | 31941 | QPSK | 361 | 396 | |
| 95 | 31941 | 16 QAM | 180 | 396 | |
| 96 | 32277 | QPSK | 361 | 396 | |
| 96 | 32277 | 16 QAM | 180 | 396 | |
| 97 | 32613 | QPSK | 361 | 397 | |
| 97 | 32613 | 16 QAM | 180 | 397 | |
| 98 | 32949 | QPSK | 361 | 398 | |
| 98 | 32949 | 16 QAM | 180 | 398 | |
| 99 | 33285 | QPSK | 361 | 398 | |
| 99 | 33285 | 16 QAM | 180 | 398 | |
| 100 | 33621 | QPSK | 361 | 399 | |
| 100 | 33621 | 16 QAM | 180 | 399 | |
| 101 | 33957 | QPSK | 361 | 399 | |
| 101 | 33957 | 16 QAM | 180 | 399 | |
| 102 | 34293 | QPSK | 361 | 400 | |
| 102 | 34293 | 16 QAM | 180 | 400 | |
| 103 | 34629 | QPSK | 361 | 401 | |
| 103 | 34629 | 16 QAM | 180 | 401 | |
| 104 | 34965 | QPSK | 361 | 401 | |
| 104 | 34965 | 16 QAM | 180 | 401 | |
| 105 | 35301 | QPSK | 361 | 402 | |
| 105 | 35301 | 16 QAM | 180 | 402 | |
| 106 | 35637 | QPSK | 361 | 403 | |
| 106 | 35637 | 16 QAM | 180 | 403 | |
| 107 | 35973 | QPSK | 361 | 403 | |
| 107 | 35973 | 16 QAM | 180 | 403 | |
| 108 | 36309 | QPSK | 361 | 404 | |
| 108 | 36309 | 16 QAM | 180 | 404 | |
| 109 | 36645 | QPSK | 361 | 404 | |
| 109 | 36645 | 16 QAM | 180 | 404 | |
| 110 | 36981 | QPSK | 361 | 405 | |
| 110 | 36981 | 16 QAM | 180 | 405 | |
| 111 | 37317 | QPSK | 361 | 405 | |
| 111 | 37317 | 16 QAM | 180 | 405 | |
| 112 | 37653 | QPSK | 361 | 406 | |
| 112 | 37653 | 16 QAM | 180 | 406 | |
| 113 | 37989 | QPSK | 361 | 406 | |
| 113 | 37989 | 16 QAM | 180 | 406 | |
| 114 | 38325 | QPSK | 361 | 407 | |
| 114 | 38325 | 16 QAM | 180 | 407 | |
| 115 | 38661 | QPSK | 361 | 408 | |
| 115 | 38661 | 16 QAM | 180 | 408 | |
| 116 | 38997 | QPSK | 361 | 408 | |
| 116 | 38997 | 16 QAM | 180 | 408 | |
| 117 | 39333 | QPSK | 361 | 409 | |
| 117 | 39333 | 16 QAM | 180 | 409 | |
| 118 | 39669 | QPSK | 361 | 409 | |
| 118 | 39669 | 16 QAM | 180 | 409 | |
| 119 | 40005 | QPSK | 361 | 410 | |
| 119 | 40005 | 16 QAM | 180 | 410 | |
| 120 | 40341 | QPSK | 361 | 410 | |
| 120 | 40341 | 16 QAM | 180 | 410 | |

| | | | | | |
|---|---|---|---|---|---|
| 121 | 40677 | QPSK | 361 | 411 | |
| 121 | 40677 | 16 QAM | 180 | 411 | |
| 122 | 41013 | QPSK | 361 | 411 | |
| 122 | 41013 | 16 QAM | 180 | 411 | |
| 123 | 41349 | QPSK | 361 | 412 | |
| 123 | 41349 | 16 QAM | 180 | 412 | |
| 124 | 41685 | QPSK | 361 | 412 | |
| 124 | 41685 | 16 QAM | 180 | 412 | |
| 125 | 42021 | QPSK | 361 | 413 | |
| 125 | 42021 | 16 QAM | 180 | 413 | |
| 126 | 42357 | QPSK | 361 | 413 | |
| 126 | 42357 | 16 QAM | 180 | 413 | |
| 127 | 42693 | QPSK | 361 | 414 | |
| 127 | 42693 | 16 QAM | 180 | 414 | |
| 128 | 43029 | QPSK | 361 | 414 | |
| 128 | 43029 | 16 QAM | 180 | 414 | |
| 129 | 43372 | QPSK | 361 | 415 | |
| 129 | 43372 | 16 QAM | 180 | 415 | |
| 130 | 43708 | QPSK | 361 | 415 | |
| 130 | 43708 | 16 QAM | 180 | 415 | |
| 131 | 44044 | QPSK | 361 | 416 | |
| 131 | 44044 | 16 QAM | 180 | 416 | |
| 132 | 44380 | QPSK | 361 | 416 | |
| 132 | 44380 | 16 QAM | 180 | 416 | |
| 133 | 44716 | QPSK | 361 | 417 | |
| 133 | 44716 | 16 QAM | 180 | 417 | |
| 134 | 45052 | QPSK | 361 | 417 | |
| 134 | 45052 | 16 QAM | 180 | 417 | |
| 135 | 45388 | QPSK | 361 | 418 | |
| 135 | 45388 | 16 QAM | 180 | 418 | |
| 136 | 45724 | QPSK | 361 | 418 | |
| 136 | 45724 | 16 QAM | 180 | 418 | |
| 137 | 46060 | QPSK | 361 | 419 | |
| 137 | 46060 | 16 QAM | 180 | 419 | |
| 138 | 46396 | QPSK | 361 | 419 | |
| 138 | 46396 | 16 QAM | 180 | 419 | |
| 139 | 46732 | QPSK | 361 | 419 | |
| 139 | 46732 | 16 QAM | 180 | 419 | |
| 140 | 47068 | QPSK | 361 | 420 | |
| 140 | 47068 | 16 QAM | 180 | 420 | |
| 141 | 47404 | QPSK | 361 | 420 | |
| 141 | 47404 | 16 QAM | 180 | 420 | |
| 142 | 47740 | QPSK | 361 | 421 | |
| 142 | 47740 | 16 QAM | 180 | 421 | |
| 143 | 48076 | QPSK | 361 | 421 | |
| 143 | 48076 | 16 QAM | 180 | 421 | |
| 144 | 48412 | QPSK | 361 | 422 | |
| 144 | 48412 | 16 QAM | 180 | 422 | |
| 145 | 48748 | QPSK | 361 | 422 | |
| 145 | 48748 | 16 QAM | 180 | 422 | |
| 146 | 49084 | QPSK | 361 | 422 | |
| 146 | 49084 | 16 QAM | 180 | 422 | |
| 147 | 49420 | QPSK | 361 | 423 | |

| | | | | | |
|---|---|---|---|---|---|
| 147 | 49420 | 16 QAM | 180 | 423 | |
| 148 | 49756 | QPSK | 361 | 423 | |
| 148 | 49756 | 16 QAM | 180 | 423 | |
| 149 | 50092 | QPSK | 361 | 424 | |
| 149 | 50092 | 16 QAM | 180 | 424 | |
| 150 | 50428 | QPSK | 361 | 424 | |
| 150 | 50428 | 16 QAM | 180 | 424 | |
| 151 | 50764 | QPSK | 361 | 425 | |
| 151 | 50764 | 16 QAM | 180 | 425 | |
| 152 | 51100 | QPSK | 361 | 425 | |
| 152 | 51100 | 16 QAM | 180 | 425 | |
| 153 | 51436 | QPSK | 361 | 425 | |
| 153 | 51436 | 16 QAM | 180 | 425 | |
| 154 | 51772 | QPSK | 361 | 426 | |
| 154 | 51772 | 16 QAM | 180 | 426 | |
| 155 | 52108 | QPSK | 361 | 426 | |
| 155 | 52108 | 16 QAM | 180 | 426 | |
| 156 | 52444 | QPSK | 361 | 427 | |
| 156 | 52444 | 16 QAM | 180 | 427 | |
| 157 | 52780 | QPSK | 361 | 427 | |
| 157 | 52780 | 16 QAM | 180 | 427 | |
| 158 | 53116 | QPSK | 361 | 427 | |
| 158 | 53116 | 16 QAM | 180 | 427 | |
| 159 | 53452 | QPSK | 361 | 428 | |
| 159 | 53452 | 16 QAM | 180 | 428 | |
| 160 | 53788 | QPSK | 361 | 428 | |
| 160 | 53788 | 16 QAM | 180 | 428 | |
| 161 | 54124 | QPSK | 361 | 429 | |
| 161 | 54124 | 16 QAM | 180 | 429 | |
| 162 | 54460 | QPSK | 361 | 429 | |
| 162 | 54460 | 16 QAM | 180 | 429 | |
| 163 | 54796 | QPSK | 361 | 429 | |
| 163 | 54796 | 16 QAM | 180 | 429 | |
| 164 | 55132 | QPSK | 361 | 430 | |
| 164 | 55132 | 16 QAM | 180 | 430 | |
| 165 | 55468 | QPSK | 361 | 430 | |
| 165 | 55468 | 16 QAM | 180 | 430 | |
| 166 | 55804 | QPSK | 361 | 431 | |
| 166 | 55804 | 16 QAM | 180 | 431 | |
| 167 | 56140 | QPSK | 361 | 431 | |
| 167 | 56140 | 16 QAM | 180 | 431 | |
| 168 | 56476 | QPSK | 361 | 431 | |
| 168 | 56476 | 16 QAM | 180 | 431 | |
| 169 | 56812 | QPSK | 361 | 432 | |
| 169 | 56812 | 16 QAM | 180 | 432 | |
| 170 | 57148 | QPSK | 361 | 432 | |
| 170 | 57148 | 16 QAM | 180 | 432 | |
| 171 | 57484 | QPSK | 361 | 432 | |
| 171 | 57484 | 16 QAM | 180 | 432 | |
| 172 | 57820 | QPSK | 361 | 433 | |
| 172 | 57820 | 16 QAM | 180 | 433 | |
| 173 | 58156 | QPSK | 361 | 433 | |
| 173 | 58156 | 16 QAM | 180 | 433 | |

| | | | | | |
|---|---|---|---|---|---|
| 174 | 58492 | QPSK | 361 | 433 | |
| 174 | 58492 | 16 QAM | 180 | 433 | |
| 175 | 58828 | QPSK | 361 | 434 | |
| 175 | 58828 | 16 QAM | 180 | 434 | |
| 176 | 59164 | QPSK | 361 | 434 | |
| 176 | 59164 | 16 QAM | 180 | 434 | |
| 177 | 59500 | QPSK | 361 | 435 | |
| 177 | 59500 | 16 QAM | 180 | 435 | |
| 178 | 59836 | QPSK | 361 | 435 | |
| 178 | 59836 | 16 QAM | 180 | 435 | |
| 179 | 60172 | QPSK | 361 | 435 | |
| 179 | 60172 | 16 QAM | 180 | 435 | |
| 180 | 60508 | QPSK | 361 | 436 | |
| 180 | 60508 | 16 QAM | 180 | 436 | |
| 181 | 60844 | QPSK | 361 | 436 | |
| 181 | 60844 | 16 QAM | 180 | 436 | |
| 182 | 61180 | QPSK | 361 | 436 | |
| 182 | 61180 | 16 QAM | 180 | 436 | |
| 183 | 61516 | QPSK | 361 | 437 | |
| 183 | 61516 | 16 QAM | 180 | 437 | |
| 184 | 61852 | QPSK | 361 | 437 | |
| 184 | 61852 | 16 QAM | 180 | 437 | |
| 185 | 62188 | QPSK | 361 | 437 | |
| 185 | 62188 | 16 QAM | 180 | 437 | |
| 186 | 62524 | QPSK | 361 | 438 | |
| 186 | 62524 | 16 QAM | 180 | 438 | |
| 187 | 62860 | QPSK | 361 | 438 | |
| 187 | 62860 | 16 QAM | 180 | 438 | |
| 188 | 63196 | QPSK | 361 | 438 | |
| 188 | 63196 | 16 QAM | 180 | 438 | |
| 189 | 63532 | QPSK | 361 | 439 | |
| 189 | 63532 | 16 QAM | 180 | 439 | |
| 190 | 63868 | QPSK | 361 | 439 | |
| 190 | 63868 | 16 QAM | 180 | 439 | |
| 191 | 64204 | QPSK | 361 | 439 | |
| 191 | 64204 | 16 QAM | 180 | 439 | |
| 192 | 64540 | QPSK | 361 | 440 | |
| 192 | 64540 | 16 QAM | 180 | 440 | |
| 193 | 64876 | QPSK | 361 | 440 | |
| 193 | 64876 | 16 QAM | 180 | 440 | |
| 194 | 65212 | QPSK | 361 | 440 | |
| 194 | 65212 | 16 QAM | 180 | 440 | |
| 195 | 65548 | QPSK | 361 | 441 | |
| 195 | 65548 | 16 QAM | 180 | 441 | |
| 196 | 65884 | QPSK | 361 | 441 | |
| 196 | 65884 | 16 QAM | 180 | 441 | |
| 197 | 66220 | QPSK | 361 | 441 | |
| 197 | 66220 | 16 QAM | 180 | 441 | |
| 198 | 66556 | QPSK | 361 | 442 | |
| 198 | 66556 | 16 QAM | 180 | 442 | |
| 199 | 66892 | QPSK | 361 | 442 | |
| 199 | 66892 | 16 QAM | 180 | 442 | |
| 200 | 67228 | QPSK | 361 | 442 | |

| | | | | | |
|---|---|---|---|---|---|
| 200 | 67228 | 16 QAM | 180 | 442 | |
| 201 | 67564 | QPSK | 361 | 442 | |
| 201 | 67564 | 16 QAM | 180 | 442 | |
| 202 | 67900 | QPSK | 361 | 443 | |
| 202 | 67900 | 16 QAM | 180 | 443 | |
| 203 | 68236 | QPSK | 361 | 443 | |
| 203 | 68236 | 16 QAM | 180 | 443 | |
| 204 | 68572 | QPSK | 361 | 443 | |
| 204 | 68572 | 16 QAM | 180 | 443 | |
| 205 | 68908 | QPSK | 361 | 444 | |
| 205 | 68908 | 16 QAM | 180 | 444 | |
| 206 | 69244 | QPSK | 361 | 444 | |
| 206 | 69244 | 16 QAM | 180 | 444 | |
| 207 | 69580 | QPSK | 361 | 444 | |
| 207 | 69580 | 16 QAM | 180 | 444 | |
| 208 | 69916 | QPSK | 361 | 445 | |
| 208 | 69916 | 16 QAM | 180 | 445 | |
| 209 | 70252 | QPSK | 361 | 445 | |
| 209 | 70252 | 16 QAM | 180 | 445 | |
| 210 | 70588 | QPSK | 361 | 445 | |
| 210 | 70588 | 16 QAM | 180 | 445 | |
| 211 | 70924 | QPSK | 361 | 445 | |
| 211 | 70924 | 16 QAM | 180 | 445 | |
| 212 | 71260 | QPSK | 361 | 446 | |
| 212 | 71260 | 16 QAM | 180 | 446 | |
| 213 | 71596 | QPSK | 361 | 446 | |
| 213 | 71596 | 16 QAM | 180 | 446 | |
| 214 | 71932 | QPSK | 361 | 446 | |
| 214 | 71932 | 16 QAM | 180 | 446 | |
| 215 | 72268 | QPSK | 361 | 448 | |
| 215 | 72268 | 16 QAM | 180 | 447 | |
| 216 | 72604 | QPSK | 361 | 448 | |
| 216 | 72604 | 16 QAM | 180 | 447 | |
| 217 | 72940 | QPSK | 361 | 448 | |
| 217 | 72940 | 16 QAM | 180 | 447 | |

**Table 18.3.1.4.3.10: TFRC test points for UE category 11 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |

| | | | | | |
|---|---|---|---|---|---|
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 33 | 285 | |
| 17 | 5733 | QPSK | 70 | 288 | |
| 17 | 5733 | 16 QAM | 35 | 288 | |
| 18 | 6069 | QPSK | 75 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 78 | 295 | |
| 19 | 6405 | 16 QAM | 39 | 295 | |
| 20 | 6741 | QPSK | 84 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 88 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 91 | 304 | |
| 22 | 7413 | 16 QAM | 45 | 304 | |
| 23 | 7749 | QPSK | 95 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 100 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |
| 25 | 8421 | QPSK | 102 | 312 | |
| 25 | 8421 | 16 QAM | 51 | 312 | |
| 26 | 8757 | QPSK | 108 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 112 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 116 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 120 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 125 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 128 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 133 | 328 | |
| 32 | 10773 | 16 QAM | 66 | 328 | |

| | | | | | |
|---|---|---|---|---|---|
| 33 | 11109 | QPSK | 138 | 330 | |
| 33 | 11109 | 16 QAM | 69 | 330 | |
| 34 | 11445 | QPSK | 140 | 332 | |
| 34 | 11445 | 16 QAM | 70 | 332 | |
| 35 | 11781 | QPSK | 145 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |
| 36 | 12117 | QPSK | 147 | 335 | |
| 36 | 12117 | 16 QAM | 72 | 335 | |
| 37 | 12453 | QPSK | 154 | 337 | |
| 37 | 12453 | 16 QAM | 77 | 337 | |
| 38 | 12789 | QPSK | 156 | 339 | |
| 38 | 12789 | 16 QAM | 78 | 339 | |
| 39 | 13125 | QPSK | 162 | 340 | |
| 39 | 13125 | 16 QAM | 81 | 340 | |
| 40 | 13461 | QPSK | 162 | 342 | |
| 40 | 13461 | 16 QAM | 81 | 342 | |
| 41 | 13797 | QPSK | 168 | 343 | |
| 41 | 13797 | 16 QAM | 85 | 343 | |
| 42 | 14133 | QPSK | 176 | 345 | |
| 42 | 14133 | 16 QAM | 88 | 345 | |
| 43 | 14469 | QPSK | 176 | 346 | |
| 43 | 14469 | 16 QAM | 88 | 346 | |
| 44 | 14805 | QPSK | 184 | 348 | |
| 44 | 14805 | 16 QAM | 92 | 348 | |
| 45 | 15141 | QPSK | 186 | 349 | |
| 45 | 15141 | 16 QAM | 93 | 349 | |
| 46 | 15477 | QPSK | 189 | 350 | |
| 46 | 15477 | 16 QAM | 95 | 350 | |
| 47 | 15813 | QPSK | 196 | 352 | |
| 47 | 15813 | 16 QAM | 98 | 352 | |
| 48 | 16149 | QPSK | 200 | 353 | |
| 48 | 16149 | 16 QAM | 100 | 353 | |
| 49 | 16485 | QPSK | 203 | 354 | |
| 49 | 16485 | 16 QAM | 100 | 354 | |
| 50 | 16821 | QPSK | 208 | 356 | |
| 50 | 16821 | 16 QAM | 104 | 356 | |
| 51 | 17157 | QPSK | 210 | 357 | |
| 51 | 17157 | 16 QAM | 105 | 357 | |
| 52 | 17493 | QPSK | 216 | 358 | |
| 52 | 17493 | 16 QAM | 108 | 358 | |
| 53 | 17829 | QPSK | 217 | 359 | |
| 53 | 17829 | 16 QAM | 110 | 359 | |
| 54 | 18165 | QPSK | 217 | 360 | |
| 54 | 18165 | 16 QAM | 110 | 360 | |
| 55 | 18501 | QPSK | 224 | 362 | |
| 55 | 18501 | 16 QAM | 115 | 362 | |
| 56 | 18837 | QPSK | 232 | 363 | |
| 56 | 18837 | 16 QAM | 116 | 363 | |
| 57 | 19173 | QPSK | 232 | 364 | |
| 57 | 19173 | 16 QAM | 119 | 364 | |
| 58 | 19509 | QPSK | 240 | 365 | |
| 58 | 19509 | 16 QAM | 120 | 365 | |
| 59 | 19845 | QPSK | 240 | 366 | |

| | | | | | |
|---|---|---|---|---|---|
| 59 | 19845 | 16 QAM | 120 | 366 | |
| 60 | 20181 | QPSK | 248 | 367 | |
| 60 | 20181 | 16 QAM | 125 | 367 | |
| 61 | 20517 | QPSK | 248 | 368 | |
| 61 | 20517 | 16 QAM | 126 | 368 | |
| 62 | 20853 | QPSK | 256 | 369 | |
| 62 | 20853 | 16 QAM | 128 | 369 | |
| 63 | 21189 | QPSK | 256 | 370 | |
| 63 | 21189 | 16 QAM | 130 | 370 | |
| 64 | 21525 | QPSK | 256 | 371 | |
| 64 | 21525 | 16 QAM | 133 | 371 | |
| 65 | 21861 | QPSK | 256 | 372 | |
| 65 | 21861 | 16 QAM | 135 | 372 | |
| 66 | 22197 | QPSK | 256 | 373 | |
| 66 | 22197 | 16 QAM | 136 | 373 | |
| 67 | 22533 | QPSK | 256 | 374 | |
| 67 | 22533 | 16 QAM | 140 | 374 | |
| 68 | 22869 | QPSK | 256 | 375 | |
| 68 | 22869 | 16 QAM | 140 | 375 | |
| 69 | 23205 | QPSK | 256 | 376 | |
| 69 | 23205 | 16 QAM | 144 | 376 | |
| 70 | 23541 | QPSK | 256 | 377 | |
| 70 | 23541 | 16 QAM | 145 | 377 | |
| 71 | 23877 | QPSK | 256 | 378 | |
| 71 | 23877 | 16 QAM | 147 | 378 | |
| 72 | 24213 | QPSK | 256 | 378 | |
| 72 | 24213 | 16 QAM | 147 | 378 | |
| 73 | 24549 | QPSK | 256 | 379 | |
| 73 | 24549 | 16 QAM | 150 | 379 | |
| 74 | 24885 | QPSK | 256 | 380 | |
| 74 | 24885 | 16 QAM | 154 | 380 | |
| 75 | 25221 | QPSK | 256 | 381 | |
| 75 | 25221 | 16 QAM | 156 | 381 | |
| 76 | 25557 | QPSK | 256 | 382 | |
| 76 | 25557 | 16 QAM | 156 | 382 | |
| 77 | 25893 | QPSK | 256 | 383 | |
| 77 | 25893 | 16 QAM | 161 | 383 | |
| 78 | 26229 | QPSK | 256 | 383 | |
| 78 | 26229 | 16 QAM | 161 | 383 | |
| 79 | 26565 | QPSK | 256 | 384 | |
| 79 | 26565 | 16 QAM | 162 | 384 | |
| 80 | 26901 | QPSK | 256 | 385 | |
| 80 | 26901 | 16 QAM | 162 | 385 | |
| 81 | 27237 | QPSK | 256 | 386 | |
| 81 | 27237 | 16 QAM | 168 | 386 | |
| 82 | 27573 | QPSK | 256 | 386 | |
| 82 | 27573 | 16 QAM | 168 | 386 | |
| 83 | 27909 | QPSK | 256 | 387 | |
| 83 | 27909 | 16 QAM | 168 | 387 | |
| 84 | 28245 | QPSK | 256 | 388 | |
| 84 | 28245 | 16 QAM | 175 | 388 | |
| 85 | 28581 | QPSK | 256 | 389 | |
| 85 | 28581 | 16 QAM | 176 | 389 | |

| | | | | | |
|---|---|---|---|---|---|
| 86 | 28917 | QPSK | 256 | 389 | |
| 86 | 28917 | 16 QAM | 176 | 389 | |
| 87 | 29253 | QPSK | 256 | 390 | |
| 87 | 29253 | 16 QAM | 180 | 390 | |
| 88 | 29589 | QPSK | 256 | 391 | |
| 88 | 29589 | 16 QAM | 182 | 391 | |
| 89 | 29925 | QPSK | 256 | 392 | |
| 89 | 29925 | 16 QAM | 186 | 392 | |
| 90 | 30261 | QPSK | 256 | 392 | |
| 90 | 30261 | 16 QAM | 186 | 392 | |
| 91 | 30597 | QPSK | 256 | 393 | |
| 91 | 30597 | 16 QAM | 189 | 393 | |
| 92 | 30933 | QPSK | 256 | 394 | |
| 92 | 30933 | 16 QAM | 192 | 394 | |
| 93 | 31269 | QPSK | 256 | 394 | |
| 93 | 31269 | 16 QAM | 192 | 394 | |
| 94 | 31605 | QPSK | 256 | 395 | |
| 94 | 31605 | 16 QAM | 196 | 395 | |
| 95 | 31941 | QPSK | 256 | 396 | |
| 95 | 31941 | 16 QAM | 196 | 396 | |
| 96 | 32277 | QPSK | 256 | 396 | |
| 96 | 32277 | 16 QAM | 196 | 396 | |
| 97 | 32613 | QPSK | 256 | 397 | |
| 97 | 32613 | 16 QAM | 200 | 397 | |
| 98 | 32949 | QPSK | 256 | 398 | |
| 98 | 32949 | 16 QAM | 203 | 398 | |
| 99 | 33285 | QPSK | 256 | 398 | |
| 99 | 33285 | 16 QAM | 203 | 398 | |
| 100 | 33621 | QPSK | 256 | 399 | |
| 100 | 33621 | 16 QAM | 208 | 399 | |
| 101 | 33957 | QPSK | 256 | 399 | |
| 101 | 33957 | 16 QAM | 208 | 399 | |
| 102 | 34293 | QPSK | 256 | 400 | |
| 102 | 34293 | 16 QAM | 210 | 400 | |
| 103 | 34629 | QPSK | 256 | 401 | |
| 103 | 34629 | 16 QAM | 210 | 401 | |
| 104 | 34965 | QPSK | 256 | 401 | |
| 104 | 34965 | 16 QAM | 210 | 401 | |
| 105 | 35301 | QPSK | 256 | 402 | |
| 105 | 35301 | 16 QAM | 217 | 402 | |
| 106 | 35637 | QPSK | 256 | 403 | |
| 106 | 35637 | 16 QAM | 217 | 403 | |
| 107 | 35973 | QPSK | 256 | 403 | |
| 107 | 35973 | 16 QAM | 217 | 403 | |
| 108 | 36309 | QPSK | 256 | 404 | |
| 108 | 36309 | 16 QAM | 224 | 404 | |
| 109 | 36645 | QPSK | 256 | 404 | |
| 109 | 36645 | 16 QAM | 224 | 404 | |
| 110 | 36981 | QPSK | 256 | 405 | |
| 110 | 36981 | 16 QAM | 224 | 405 | |
| 111 | 37317 | QPSK | 256 | 405 | |
| 111 | 37317 | 16 QAM | 224 | 405 | |
| 112 | 37653 | QPSK | 256 | 406 | |

| | | | | | |
|---|---|---|---|---|---|
| 112 | 37653 | 16 QAM | 232 | 406 | |
| 113 | 37989 | QPSK | 256 | 406 | |
| 113 | 37989 | 16 QAM | 232 | 406 | |
| 114 | 38325 | QPSK | 256 | 407 | |
| 114 | 38325 | 16 QAM | 232 | 407 | |
| 115 | 38661 | QPSK | 256 | 408 | |
| 115 | 38661 | 16 QAM | 240 | 408 | |
| 116 | 38997 | QPSK | 256 | 408 | |
| 116 | 38997 | 16 QAM | 240 | 408 | |
| 117 | 39333 | QPSK | 256 | 409 | |
| 117 | 39333 | 16 QAM | 240 | 409 | |
| 118 | 39669 | QPSK | 256 | 409 | |
| 118 | 39669 | 16 QAM | 240 | 409 | |
| 119 | 40005 | QPSK | 256 | 410 | |
| 119 | 40005 | 16 QAM | 248 | 410 | |
| 120 | 40341 | QPSK | 256 | 410 | |
| 120 | 40341 | 16 QAM | 248 | 410 | |
| 121 | 40677 | QPSK | 256 | 411 | |
| 121 | 40677 | 16 QAM | 248 | 411 | |
| 122 | 41013 | QPSK | 256 | 411 | |
| 122 | 41013 | 16 QAM | 248 | 411 | |
| 123 | 41349 | QPSK | 256 | 412 | |
| 123 | 41349 | 16 QAM | 256 | 412 | |
| 124 | 41685 | QPSK | 256 | 412 | |
| 124 | 41685 | 16 QAM | 256 | 412 | |
| 125 | 42021 | QPSK | 256 | 413 | |
| 125 | 42021 | 16 QAM | 256 | 413 | |
| 126 | 42357 | QPSK | 256 | 413 | |
| 126 | 42357 | 16 QAM | 256 | 413 | |
| 127 | 42693 | QPSK | 256 | 414 | |
| 127 | 42693 | 16 QAM | 256 | 414 | |
| 128 | 43029 | QPSK | 256 | 414 | |
| 128 | 43029 | 16 QAM | 256 | 414 | |
| 129 | 43372 | QPSK | 256 | 415 | |
| 129 | 43372 | 16 QAM | 256 | 415 | |
| 130 | 43708 | QPSK | 256 | 415 | |
| 130 | 43708 | 16 QAM | 256 | 415 | |
| 131 | 44044 | QPSK | 256 | 416 | |
| 131 | 44044 | 16 QAM | 256 | 416 | |
| 132 | 44380 | QPSK | 256 | 416 | |
| 132 | 44380 | 16 QAM | 256 | 416 | |
| 133 | 44716 | QPSK | 256 | 417 | |
| 133 | 44716 | 16 QAM | 256 | 417 | |
| 134 | 45052 | QPSK | 256 | 417 | |
| 134 | 45052 | 16 QAM | 256 | 417 | |
| 135 | 45388 | QPSK | 256 | 418 | |
| 135 | 45388 | 16 QAM | 256 | 418 | |
| 136 | 45724 | QPSK | 256 | 418 | |
| 136 | 45724 | 16 QAM | 256 | 418 | |
| 137 | 46060 | QPSK | 256 | 419 | |
| 137 | 46060 | 16 QAM | 256 | 419 | |
| 138 | 46396 | QPSK | 256 | 419 | |
| 138 | 46396 | 16 QAM | 256 | 419 | |

| | | | | | |
|---|---|---|---|---|---|
| 139 | 46732 | QPSK | 256 | 419 | |
| 139 | 46732 | 16 QAM | 256 | 419 | |
| 140 | 47068 | QPSK | 256 | 420 | |
| 140 | 47068 | 16 QAM | 256 | 420 | |
| 141 | 47404 | QPSK | 256 | 420 | |
| 141 | 47404 | 16 QAM | 256 | 420 | |
| 142 | 47740 | QPSK | 256 | 423 | |
| 142 | 47740 | 16 QAM | 256 | 421 | |
| 143 | 48076 | QPSK | 256 | 423 | |
| 143 | 48076 | 16 QAM | 256 | 421 | |
| 144 | 48412 | QPSK | 256 | 423 | |
| 144 | 48412 | 16 QAM | 256 | 422 | |
| 145 | 48748 | QPSK | 256 | 423 | |
| 145 | 48748 | 16 QAM | 256 | 422 | |
| 146 | 49084 | QPSK | 256 | 423 | |
| 146 | 49084 | 16 QAM | 256 | 422 | |
| 147 | 49420 | QPSK | 256 | 423 | |
| 147 | 49420 | 16 QAM | 256 | 423 | |
| 148 | 49756 | QPSK | 256 | 423 | |
| 148 | 49756 | 16 QAM | 256 | 423 | |
| 149 | 50092 | QPSK | 256 | 424 | |
| 149 | 50092 | 16 QAM | 256 | 424 | |
| 150 | 50428 | QPSK | 256 | 424 | |
| 150 | 50428 | 16 QAM | 256 | 424 | |
| 151 | 50764 | QPSK | 256 | 425 | |
| 151 | 50764 | 16 QAM | 256 | 425 | |
| 152 | 51100 | QPSK | 256 | 425 | |
| 152 | 51100 | 16 QAM | 256 | 425 | |
| 153 | 51436 | QPSK | 256 | 425 | |
| 153 | 51436 | 16 QAM | 256 | 425 | |
| 154 | 51772 | QPSK | 256 | 427 | |
| 154 | 51772 | 16 QAM | 256 | 426 | |
| 155 | 52108 | QPSK | 256 | 427 | |
| 155 | 52108 | 16 QAM | 256 | 426 | |
| 156 | 52444 | QPSK | 256 | 427 | |
| 156 | 52444 | 16 QAM | 256 | 427 | |
| 157 | 52780 | QPSK | 256 | 427 | |
| 157 | 52780 | 16 QAM | 256 | 427 | |
| 158 | 53116 | QPSK | 256 | 427 | |
| 158 | 53116 | 16 QAM | 256 | 427 | |
| 159 | 53452 | QPSK | 256 | 428 | |
| 159 | 53452 | 16 QAM | 256 | 428 | |
| 160 | 53788 | QPSK | 256 | 428 | |
| 160 | 53788 | 16 QAM | 256 | 428 | |
| 161 | 54124 | QPSK | 256 | 429 | |
| 161 | 54124 | 16 QAM | 256 | 429 | |
| 162 | 54460 | QPSK | 256 | 429 | |
| 162 | 54460 | 16 QAM | 256 | 429 | |
| 163 | 54796 | QPSK | 256 | 429 | |
| 163 | 54796 | 16 QAM | 256 | 429 | |
| 164 | 55132 | QPSK | 256 | 430 | |
| 164 | 55132 | 16 QAM | 256 | 430 | |
| 165 | 55468 | QPSK | 256 | 430 | |

| | | | | | |
|---|---|---|---|---|---|
| 165 | 55468 | 16 QAM | 256 | 430 | |
| 166 | 55804 | QPSK | 256 | 431 | |
| 166 | 55804 | 16 QAM | 256 | 431 | |
| 167 | 56140 | QPSK | 256 | 431 | |
| 167 | 56140 | 16 QAM | 256 | 431 | |
| 168 | 56476 | QPSK | 256 | 431 | |
| 168 | 56476 | 16 QAM | 256 | 431 | |
| 169 | 56812 | QPSK | 256 | 432 | |
| 169 | 56812 | 16 QAM | 256 | 432 | |
| 170 | 57148 | QPSK | 256 | 432 | |
| 170 | 57148 | 16 QAM | 256 | 432 | |
| 171 | 57484 | QPSK | 256 | 432 | |
| 171 | 57484 | 16 QAM | 256 | 432 | |
| 172 | 57820 | QPSK | 256 | 433 | |
| 172 | 57820 | 16 QAM | 256 | 433 | |
| 173 | 58156 | QPSK | 256 | 433 | |
| 173 | 58156 | 16 QAM | 256 | 433 | |
| 174 | 58492 | QPSK | 256 | 433 | |
| 174 | 58492 | 16 QAM | 256 | 433 | |
| 175 | 58828 | QPSK | 256 | 434 | |
| 175 | 58828 | 16 QAM | 256 | 434 | |
| 176 | 59164 | QPSK | 256 | 434 | |
| 176 | 59164 | 16 QAM | 256 | 434 | |
| 177 | 59500 | QPSK | 256 | 435 | |
| 177 | 59500 | 16 QAM | 256 | 435 | |
| 178 | 59836 | QPSK | 256 | 435 | |
| 178 | 59836 | 16 QAM | 256 | 435 | |
| 179 | 60172 | QPSK | 256 | 435 | |
| 179 | 60172 | 16 QAM | 256 | 435 | |
| 180 | 60508 | QPSK | 256 | 436 | |
| 180 | 60508 | 16 QAM | 256 | 436 | |
| 181 | 60844 | QPSK | 256 | 436 | |
| 181 | 60844 | 16 QAM | 256 | 436 | |
| 182 | 61180 | QPSK | 256 | 436 | |
| 182 | 61180 | 16 QAM | 256 | 436 | |
| 183 | 61516 | QPSK | 256 | 437 | |
| 183 | 61516 | 16 QAM | 256 | 437 | |
| 184 | 61852 | QPSK | 256 | 437 | |
| 184 | 61852 | 16 QAM | 256 | 437 | |
| 185 | 62188 | QPSK | 256 | 437 | |
| 185 | 62188 | 16 QAM | 256 | 437 | |
| 186 | 62524 | 16 QAM | 256 | 438 | |
| 187 | 62860 | 16 QAM | 256 | 438 | |
| 188 | 63196 | 16 QAM | 256 | 438 | |
| 189 | 63532 | 16 QAM | 256 | 439 | |
| 190 | 63868 | 16 QAM | 256 | 439 | |
| 191 | 64204 | 16 QAM | 256 | 439 | |
| 192 | 64540 | 16 QAM | 256 | 440 | |
| 193 | 64876 | 16 QAM | 256 | 440 | |
| 194 | 65212 | 16 QAM | 256 | 440 | |
| 195 | 65548 | 16 QAM | 256 | 441 | |
| 196 | 65884 | 16 QAM | 256 | 441 | |
| 197 | 66220 | 16 QAM | 256 | 441 | |

| | | | | | |
|---|---|---|---|---|---|
| 198 | 66556 | 16 QAM | 256 | 442 | |
| 199 | 66892 | 16 QAM | 256 | 442 | |
| 200 | 67228 | 16 QAM | 256 | 442 | |
| 201 | 67564 | 16 QAM | 256 | 442 | |
| 202 | 67900 | 16 QAM | 256 | 443 | |
| 203 | 68236 | 16 QAM | 256 | 443 | |
| 204 | 68572 | 16 QAM | 256 | 443 | |
| 205 | 68908 | 16 QAM | 256 | 444 | |
| 206 | 69244 | 16 QAM | 256 | 444 | |
| 207 | 69580 | 16 QAM | 256 | 444 | |
| 208 | 69916 | 16 QAM | 256 | 445 | |
| 209 | 70252 | 16 QAM | 256 | 445 | |
| 210 | 70588 | 16 QAM | 256 | 445 | |
| 211 | 70924 | 16 QAM | 256 | 445 | |
| 212 | 71260 | 16 QAM | 256 | 446 | |
| 213 | 71596 | 16 QAM | 256 | 446 | |
| 214 | 71932 | 16 QAM | 256 | 446 | |
| 215 | 72268 | 16 QAM | 256 | 447 | |
| 216 | 72604 | 16 QAM | 256 | 447 | |
| 217 | 72940 | 16 QAM | 256 | 447 | |
| 218 | 73276 | 16 QAM | 256 | 448 | |
| 219 | 73612 | 16 QAM | 256 | 448 | |
| 220 | 73948 | 16 QAM | 256 | 448 | |
| 221 | 74284 | 16 QAM | 256 | 448 | |
| 222 | 74620 | 16 QAM | 256 | 449 | |
| 223 | 74956 | 16 QAM | 256 | 449 | |
| 224 | 75292 | 16 QAM | 256 | 449 | |
| 225 | 75628 | 16 QAM | 256 | 449 | |
| 226 | 75964 | 16 QAM | 256 | 450 | |
| 227 | 76300 | 16 QAM | 256 | 450 | |
| 228 | 76636 | 16 QAM | 256 | 450 | |
| 229 | 76972 | 16 QAM | 256 | 451 | |
| 230 | 77308 | 16 QAM | 256 | 451 | |
| 231 | 77644 | 16 QAM | 256 | 451 | |
| 232 | 77980 | 16 QAM | 256 | 451 | |
| 233 | 78316 | 16 QAM | 256 | 452 | |
| 234 | 78652 | 16 QAM | 256 | 452 | |
| 235 | 78988 | 16 QAM | 256 | 452 | |
| 236 | 79324 | 16 QAM | 256 | 452 | |
| 237 | 79660 | 16 QAM | 256 | 453 | |
| 238 | 79996 | 16 QAM | 256 | 453 | |
| 239 | 80332 | 16 QAM | 256 | 453 | |
| 240 | 80668 | 16 QAM | 256 | 454 | |
| 241 | 81004 | 16 QAM | 256 | 454 | |
| 242 | 81340 | 16 QAM | 256 | 454 | |
| 243 | 81676 | 16 QAM | 256 | 454 | |
| 244 | 82012 | 16 QAM | 256 | 455 | |
| 245 | 82348 | 16 QAM | 256 | 455 | |
| 246 | 82684 | 16 QAM | 256 | 455 | |
| 247 | 83020 | 16 QAM | 256 | 455 | |
| 248 | 83356 | 16 QAM | 256 | 456 | |
| 249 | 83692 | 16 QAM | 256 | 456 | |
| 250 | 84028 | 16 QAM | 256 | 456 | |

| | | | | | |
|---|---|---|---|---|---|
| 251 | 84364 | 16 QAM | 256 | 456 | |
| 252 | 84700 | 16 QAM | 256 | 457 | |
| 253 | 85036 | 16 QAM | 256 | 457 | |
| 254 | 85372 | 16 QAM | 256 | 457 | |
| 255 | 85708 | 16 QAM | 256 | 457 | |
| 256 | 86044 | 16 QAM | 256 | 458 | |
| 257 | 86387 | 16 QAM | 256 | 458 | |
| 258 | 86723 | 16 QAM | 256 | 458 | |
| 259 | 87059 | 16 QAM | 256 | 458 | |
| 260 | 87395 | 16 QAM | 256 | 459 | |
| 261 | 87731 | 16 QAM | 256 | 459 | |
| 262 | 88067 | 16 QAM | 256 | 459 | |
| 263 | 88403 | 16 QAM | 256 | 459 | |
| 264 | 88739 | 16 QAM | 256 | 459 | |
| 265 | 89075 | 16 QAM | 256 | 460 | |
| 266 | 89411 | 16 QAM | 256 | 460 | |
| 267 | 89747 | 16 QAM | 256 | 460 | |
| 268 | 90083 | 16 QAM | 256 | 460 | |
| 269 | 90419 | 16 QAM | 256 | 461 | |
| 270 | 90755 | 16 QAM | 256 | 461 | |
| 271 | 91091 | 16 QAM | 256 | 461 | |
| 272 | 91427 | 16 QAM | 256 | 461 | |
| 273 | 91763 | 16 QAM | 256 | 462 | |
| 274 | 92099 | 16 QAM | 256 | 462 | |
| 275 | 92435 | 16 QAM | 256 | 462 | |
| 276 | 92771 | 16 QAM | 256 | 462 | |
| 277 | 93107 | 16 QAM | 256 | 462 | |
| 278 | 93443 | 16 QAM | 256 | 463 | |
| 279 | 93779 | 16 QAM | 256 | 463 | |
| 280 | 94115 | 16 QAM | 256 | 463 | |
| 281 | 94451 | 16 QAM | 256 | 463 | |
| 282 | 94787 | 16 QAM | 256 | 464 | |
| 283 | 95123 | 16 QAM | 256 | 464 | |
| 284 | 95459 | 16 QAM | 256 | 464 | |
| 285 | 95795 | 16 QAM | 256 | 464 | |
| 286 | 96131 | 16 QAM | 256 | 464 | |
| 287 | 96467 | 16 QAM | 256 | 466 | |
| 288 | 96803 | 16 QAM | 256 | 466 | |
| 289 | 97139 | 16 QAM | 256 | 466 | |
| 290 | 97475 | 16 QAM | 256 | 466 | |
| 291 | 97811 | 16 QAM | 256 | 466 | |
| 292 | 98147 | 16 QAM | 256 | 466 | |
| 293 | 98483 | 16 QAM | 256 | 466 | |
| 294 | 98819 | 16 QAM | 256 | 466 | |
| 295 | 99155 | 16 QAM | 256 | 466 | |
| 296 | 99491 | 16 QAM | 256 | 467 | |
| 297 | 99827 | 16 QAM | 256 | 467 | |
| 298 | 100163 | 16 QAM | 256 | 467 | |
| 299 | 100499 | 16 QAM | 256 | 467 | |
| 300 | 100835 | 16 QAM | 256 | 467 | |
| 301 | 101171 | 16 QAM | 256 | 468 | |
| 302 | 101507 | 16 QAM | 256 | 468 | |
| 303 | 101843 | 16 QAM | 256 | 468 | |

| | | | | | |
|---|---|---|---|---|---|
| 304 | 102179 | 16 QAM | 256 | 468 | |
| 305 | 102515 | 16 QAM | 256 | 468 | |
| 306 | 102851 | 16 QAM | 256 | 469 | |
| 307 | 103187 | 16 QAM | 256 | 469 | |
| 308 | 103523 | 16 QAM | 256 | 469 | |
| 309 | 103859 | 16 QAM | 256 | 469 | |
| 310 | 104195 | 16 QAM | 256 | 469 | |
| 311 | 104531 | 16 QAM | 256 | 470 | |
| 312 | 104867 | 16 QAM | 256 | 470 | |
| 313 | 105203 | 16 QAM | 256 | 470 | |
| 314 | 105539 | 16 QAM | 256 | 470 | |
| 315 | 105875 | 16 QAM | 256 | 470 | |

**Table 18.3.1.4.3.10: TFRC test points for UE category 12 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 33 | 285 | |
| 17 | 5733 | QPSK | 70 | 288 | |
| 17 | 5733 | 16 QAM | 35 | 288 | |

| | | | | | |
|---|---|---|---|---|---|
| 18 | 6069 | QPSK | 75 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 78 | 295 | |
| 19 | 6405 | 16 QAM | 39 | 295 | |
| 20 | 6741 | QPSK | 84 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 88 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 91 | 304 | |
| 22 | 7413 | 16 QAM | 45 | 304 | |
| 23 | 7749 | QPSK | 95 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 100 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |
| 25 | 8421 | QPSK | 102 | 312 | |
| 25 | 8421 | 16 QAM | 51 | 312 | |
| 26 | 8757 | QPSK | 108 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 112 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 116 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 121 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 125 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 128 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 133 | 328 | |
| 32 | 10773 | 16 QAM | 66 | 328 | |
| 33 | 11109 | QPSK | 138 | 330 | |
| 33 | 11109 | 16 QAM | 69 | 330 | |
| 34 | 11445 | QPSK | 140 | 332 | |
| 34 | 11445 | 16 QAM | 70 | 332 | |
| 35 | 11781 | QPSK | 145 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |
| 36 | 12117 | QPSK | 147 | 335 | |
| 36 | 12117 | 16 QAM | 72 | 335 | |
| 37 | 12453 | QPSK | 154 | 337 | |
| 37 | 12453 | 16 QAM | 77 | 337 | |
| 38 | 12789 | QPSK | 156 | 339 | |
| 38 | 12789 | 16 QAM | 78 | 339 | |
| 39 | 13125 | QPSK | 162 | 340 | |
| 39 | 13125 | 16 QAM | 81 | 340 | |
| 40 | 13461 | QPSK | 165 | 342 | |
| 40 | 13461 | 16 QAM | 81 | 342 | |
| 41 | 13797 | QPSK | 170 | 343 | |
| 41 | 13797 | 16 QAM | 85 | 343 | |
| 42 | 14133 | QPSK | 176 | 345 | |
| 42 | 14133 | 16 QAM | 88 | 345 | |
| 43 | 14469 | QPSK | 176 | 346 | |
| 43 | 14469 | 16 QAM | 88 | 346 | |
| 44 | 14805 | QPSK | 184 | 348 | |

| | | | | | |
|---|---|---|---|---|---|
| 44 | 14805 | 16 QAM | 92 | 348 | |
| 45 | 15141 | QPSK | 187 | 349 | |
| 45 | 15141 | 16 QAM | 93 | 349 | |
| 46 | 15477 | QPSK | 190 | 350 | |
| 46 | 15477 | 16 QAM | 95 | 350 | |
| 47 | 15813 | QPSK | 196 | 352 | |
| 47 | 15813 | 16 QAM | 98 | 352 | |
| 48 | 16149 | QPSK | 200 | 353 | |
| 48 | 16149 | 16 QAM | 100 | 353 | |
| 49 | 16485 | QPSK | 203 | 354 | |
| 49 | 16485 | 16 QAM | 100 | 354 | |
| 50 | 16821 | QPSK | 209 | 356 | |
| 50 | 16821 | 16 QAM | 104 | 356 | |
| 51 | 17157 | QPSK | 210 | 357 | |
| 51 | 17157 | 16 QAM | 105 | 357 | |
| 52 | 17493 | QPSK | 216 | 358 | |
| 52 | 17493 | 16 QAM | 108 | 358 | |
| 53 | 17829 | QPSK | 220 | 359 | |
| 53 | 17829 | 16 QAM | 110 | 359 | |
| 54 | 18165 | QPSK | 220 | 360 | |
| 54 | 18165 | 16 QAM | 110 | 360 | |
| 55 | 18501 | QPSK | 231 | 362 | |
| 55 | 18501 | 16 QAM | 115 | 362 | |
| 56 | 18837 | QPSK | 234 | 363 | |
| 56 | 18837 | 16 QAM | 117 | 363 | |
| 57 | 19173 | QPSK | 234 | 364 | |
| 57 | 19173 | 16 QAM | 119 | 364 | |
| 58 | 19509 | QPSK | 242 | 365 | |
| 58 | 19509 | 16 QAM | 121 | 365 | |
| 59 | 19845 | QPSK | 243 | 366 | |
| 59 | 19845 | 16 QAM | 121 | 366 | |
| 60 | 20181 | QPSK | 250 | 367 | |
| 60 | 20181 | 16 QAM | 125 | 367 | |
| 61 | 20517 | QPSK | 253 | 368 | |
| 61 | 20517 | 16 QAM | 126 | 368 | |
| 62 | 20853 | QPSK | 256 | 369 | |
| 62 | 20853 | 16 QAM | 128 | 369 | |
| 63 | 21189 | QPSK | 261 | 370 | |
| 63 | 21189 | 16 QAM | 130 | 370 | |
| 64 | 21525 | QPSK | 264 | 371 | |
| 64 | 21525 | 16 QAM | 133 | 371 | |
| 65 | 21861 | QPSK | 270 | 372 | |
| 65 | 21861 | 16 QAM | 135 | 372 | |
| 66 | 22197 | QPSK | 275 | 373 | |
| 66 | 22197 | 16 QAM | 136 | 373 | |
| 67 | 22533 | QPSK | 280 | 374 | |
| 67 | 22533 | 16 QAM | 140 | 374 | |
| 68 | 22869 | QPSK | 280 | 375 | |
| 68 | 22869 | 16 QAM | 140 | 375 | |
| 69 | 23205 | QPSK | 288 | 376 | |
| 69 | 23205 | 16 QAM | 144 | 376 | |
| 70 | 23541 | QPSK | 290 | 377 | |
| 70 | 23541 | 16 QAM | 145 | 377 | |

| | | | | | |
|---|---|---|---|---|---|
| 71 | 23877 | QPSK | 297 | 378 | |
| 71 | 23877 | 16 QAM | 147 | 378 | |
| 72 | 24213 | QPSK | 297 | 378 | |
| 72 | 24213 | 16 QAM | 147 | 378 | |
| 73 | 24549 | QPSK | 300 | 379 | |
| 73 | 24549 | 16 QAM | 150 | 379 | |
| 74 | 24885 | QPSK | 308 | 380 | |
| 74 | 24885 | 16 QAM | 154 | 380 | |
| 75 | 25221 | QPSK | 312 | 381 | |
| 75 | 25221 | 16 QAM | 156 | 381 | |
| 76 | 25557 | QPSK | 312 | 382 | |
| 76 | 25557 | 16 QAM | 156 | 382 | |
| 77 | 25893 | QPSK | 320 | 383 | |
| 77 | 25893 | 16 QAM | 161 | 383 | |
| 78 | 26229 | QPSK | 320 | 383 | |
| 78 | 26229 | 16 QAM | 161 | 383 | |
| 79 | 26565 | QPSK | 324 | 384 | |
| 79 | 26565 | 16 QAM | 162 | 384 | |
| 80 | 26901 | QPSK | 330 | 385 | |
| 80 | 26901 | 16 QAM | 165 | 385 | |
| 81 | 27237 | QPSK | 336 | 386 | |
| 81 | 27237 | 16 QAM | 168 | 386 | |
| 82 | 27573 | QPSK | 336 | 386 | |
| 82 | 27573 | 16 QAM | 168 | 386 | |
| 83 | 27909 | QPSK | 341 | 387 | |
| 83 | 27909 | 16 QAM | 171 | 387 | |
| 84 | 28245 | QPSK | 348 | 388 | |
| 84 | 28245 | 16 QAM | 175 | 388 | |
| 85 | 28581 | QPSK | 352 | 389 | |
| 85 | 28581 | 16 QAM | 176 | 389 | |
| 86 | 28917 | QPSK | 352 | 389 | |
| 86 | 28917 | 16 QAM | 176 | 389 | |
| 87 | 29253 | QPSK | 360 | 390 | |
| 87 | 29253 | 16 QAM | 180 | 390 | |
| 88 | 29589 | QPSK | 360 | 391 | |
| 88 | 29589 | 16 QAM | 182 | 391 | |
| 89 | 29925 | QPSK | 372 | 392 | |
| 89 | 29925 | 16 QAM | 186 | 392 | |
| 90 | 30261 | QPSK | 372 | 392 | |
| 90 | 30261 | 16 QAM | 186 | 392 | |
| 91 | 30597 | QPSK | 372 | 393 | |
| 91 | 30597 | 16 QAM | 189 | 393 | |
| 92 | 30933 | QPSK | 384 | 394 | |
| 92 | 30933 | 16 QAM | 192 | 394 | |
| 93 | 31269 | QPSK | 384 | 394 | |
| 93 | 31269 | 16 QAM | 192 | 394 | |
| 94 | 31605 | QPSK | 384 | 395 | |
| 94 | 31605 | 16 QAM | 196 | 395 | |
| 95 | 31941 | QPSK | 384 | 396 | |
| 95 | 31941 | 16 QAM | 198 | 396 | |
| 96 | 32277 | QPSK | 384 | 396 | |
| 96 | 32277 | 16 QAM | 198 | 396 | |
| 97 | 32613 | QPSK | 384 | 397 | |

| | | | | | |
|---|---|---|---|---|---|
| 97 | 32613 | 16 QAM | 200 | 397 | |
| 98 | 32949 | QPSK | 384 | 398 | |
| 98 | 32949 | 16 QAM | 204 | 398 | |
| 99 | 33285 | QPSK | 384 | 398 | |
| 99 | 33285 | 16 QAM | 204 | 398 | |
| 100 | 33621 | QPSK | 384 | 399 | |
| 100 | 33621 | 16 QAM | 208 | 399 | |
| 101 | 33957 | QPSK | 384 | 399 | |
| 101 | 33957 | 16 QAM | 208 | 399 | |
| 102 | 34293 | QPSK | 384 | 400 | |
| 102 | 34293 | 16 QAM | 210 | 400 | |
| 103 | 34629 | QPSK | 384 | 401 | |
| 103 | 34629 | 16 QAM | 210 | 401 | |
| 104 | 34965 | QPSK | 384 | 401 | |
| 104 | 34965 | 16 QAM | 210 | 401 | |
| 105 | 35301 | QPSK | 384 | 402 | |
| 105 | 35301 | 16 QAM | 217 | 402 | |
| 106 | 35637 | QPSK | 384 | 403 | |
| 106 | 35637 | 16 QAM | 220 | 403 | |
| 107 | 35973 | QPSK | 384 | 403 | |
| 107 | 35973 | 16 QAM | 220 | 403 | |
| 108 | 36309 | QPSK | 384 | 404 | |
| 108 | 36309 | 16 QAM | 225 | 404 | |
| 109 | 36645 | QPSK | 384 | 404 | |
| 109 | 36645 | 16 QAM | 225 | 404 | |
| 110 | 36981 | QPSK | 384 | 405 | |
| 110 | 36981 | 16 QAM | 230 | 405 | |
| 111 | 37317 | QPSK | 384 | 405 | |
| 111 | 37317 | 16 QAM | 230 | 405 | |
| 112 | 37653 | QPSK | 384 | 406 | |
| 112 | 37653 | 16 QAM | 232 | 406 | |
| 113 | 37989 | QPSK | 384 | 406 | |
| 113 | 37989 | 16 QAM | 232 | 406 | |
| 114 | 38325 | QPSK | 384 | 407 | |
| 114 | 38325 | 16 QAM | 234 | 407 | |
| 115 | 38661 | QPSK | 384 | 408 | |
| 115 | 38661 | 16 QAM | 240 | 408 | |
| 116 | 38997 | QPSK | 384 | 408 | |
| 116 | 38997 | 16 QAM | 240 | 408 | |
| 117 | 39333 | QPSK | 384 | 409 | |
| 117 | 39333 | 16 QAM | 243 | 409 | |
| 118 | 39669 | QPSK | 384 | 409 | |
| 118 | 39669 | 16 QAM | 243 | 409 | |
| 119 | 40005 | QPSK | 384 | 410 | |
| 119 | 40005 | 16 QAM | 248 | 410 | |
| 120 | 40341 | QPSK | 384 | 410 | |
| 120 | 40341 | 16 QAM | 248 | 410 | |
| 121 | 40677 | QPSK | 384 | 411 | |
| 121 | 40677 | 16 QAM | 253 | 411 | |
| 122 | 41013 | QPSK | 384 | 411 | |
| 122 | 41013 | 16 QAM | 253 | 411 | |
| 123 | 41349 | QPSK | 384 | 412 | |
| 123 | 41349 | 16 QAM | 256 | 412 | |

| | | | | | |
|---|---|---|---|---|---|
| 124 | 41685 | QPSK | 384 | 412 | |
| 124 | 41685 | 16 QAM | 256 | 412 | |
| 125 | 42021 | QPSK | 384 | 413 | |
| 125 | 42021 | 16 QAM | 261 | 413 | |
| 126 | 42357 | QPSK | 384 | 413 | |
| 126 | 42357 | 16 QAM | 261 | 413 | |
| 127 | 42693 | QPSK | 384 | 414 | |
| 127 | 42693 | 16 QAM | 264 | 414 | |
| 128 | 43029 | QPSK | 384 | 414 | |
| 128 | 43029 | 16 QAM | 264 | 414 | |
| 129 | 43372 | QPSK | 384 | 415 | |
| 129 | 43372 | 16 QAM | 270 | 415 | |
| 130 | 43708 | QPSK | 384 | 415 | |
| 130 | 43708 | 16 QAM | 270 | 415 | |
| 131 | 44044 | QPSK | 384 | 416 | |
| 131 | 44044 | 16 QAM | 270 | 416 | |
| 132 | 44380 | QPSK | 384 | 416 | |
| 132 | 44380 | 16 QAM | 270 | 416 | |
| 133 | 44716 | QPSK | 384 | 417 | |
| 133 | 44716 | 16 QAM | 276 | 417 | |
| 134 | 45052 | QPSK | 384 | 417 | |
| 134 | 45052 | 16 QAM | 276 | 417 | |
| 135 | 45388 | QPSK | 384 | 418 | |
| 135 | 45388 | 16 QAM | 280 | 418 | |
| 136 | 45724 | QPSK | 384 | 418 | |
| 136 | 45724 | 16 QAM | 280 | 418 | |
| 137 | 46060 | QPSK | 384 | 419 | |
| 137 | 46060 | 16 QAM | 286 | 419 | |
| 138 | 46396 | QPSK | 384 | 419 | |
| 138 | 46396 | 16 QAM | 286 | 419 | |
| 139 | 46732 | QPSK | 384 | 419 | |
| 139 | 46732 | 16 QAM | 286 | 419 | |
| 140 | 47068 | QPSK | 384 | 420 | |
| 140 | 47068 | 16 QAM | 289 | 420 | |
| 141 | 47404 | QPSK | 384 | 420 | |
| 141 | 47404 | 16 QAM | 289 | 420 | |
| 142 | 47740 | QPSK | 384 | 421 | |
| 142 | 47740 | 16 QAM | 289 | 421 | |
| 143 | 48076 | QPSK | 384 | 421 | |
| 143 | 48076 | 16 QAM | 289 | 421 | |
| 144 | 48412 | QPSK | 384 | 422 | |
| 144 | 48412 | 16 QAM | 289 | 422 | |
| 145 | 48748 | QPSK | 384 | 422 | |
| 145 | 48748 | 16 QAM | 289 | 422 | |
| 146 | 49084 | QPSK | 384 | 422 | |
| 146 | 49084 | 16 QAM | 289 | 422 | |
| 147 | 49420 | QPSK | 384 | 423 | |
| 147 | 49420 | 16 QAM | 289 | 423 | |
| 148 | 49756 | QPSK | 384 | 423 | |
| 148 | 49756 | 16 QAM | 289 | 423 | |
| 149 | 50092 | QPSK | 384 | 424 | |
| 149 | 50092 | 16 QAM | 289 | 424 | |
| 150 | 50428 | QPSK | 384 | 424 | |

| | | | | | |
|---|---|---|---|---|---|
| 150 | 50428 | 16 QAM | 289 | 424 | |
| 151 | 50764 | QPSK | 384 | 425 | |
| 151 | 50764 | 16 QAM | 289 | 425 | |
| 152 | 51100 | QPSK | 384 | 425 | |
| 152 | 51100 | 16 QAM | 289 | 425 | |
| 153 | 51436 | QPSK | 384 | 425 | |
| 153 | 51436 | 16 QAM | 289 | 425 | |
| 154 | 51772 | QPSK | 384 | 426 | |
| 154 | 51772 | 16 QAM | 289 | 426 | |
| 155 | 52108 | QPSK | 384 | 426 | |
| 155 | 52108 | 16 QAM | 289 | 426 | |
| 156 | 52444 | QPSK | 384 | 427 | |
| 156 | 52444 | 16 QAM | 289 | 427 | |
| 157 | 52780 | QPSK | 384 | 427 | |
| 157 | 52780 | 16 QAM | 289 | 427 | |
| 158 | 53116 | QPSK | 384 | 427 | |
| 158 | 53116 | 16 QAM | 289 | 427 | |
| 159 | 53452 | QPSK | 384 | 428 | |
| 159 | 53452 | 16 QAM | 289 | 428 | |
| 160 | 53788 | QPSK | 384 | 428 | |
| 160 | 53788 | 16 QAM | 289 | 428 | |
| 161 | 54124 | QPSK | 384 | 429 | |
| 161 | 54124 | 16 QAM | 289 | 429 | |
| 162 | 54460 | QPSK | 384 | 429 | |
| 162 | 54460 | 16 QAM | 289 | 429 | |
| 163 | 54796 | QPSK | 384 | 429 | |
| 163 | 54796 | 16 QAM | 289 | 429 | |
| 164 | 55132 | QPSK | 384 | 430 | |
| 164 | 55132 | 16 QAM | 289 | 430 | |
| 165 | 55468 | QPSK | 384 | 430 | |
| 165 | 55468 | 16 QAM | 289 | 430 | |
| 166 | 55804 | QPSK | 384 | 431 | |
| 166 | 55804 | 16 QAM | 289 | 431 | |
| 167 | 56140 | QPSK | 384 | 431 | |
| 167 | 56140 | 16 QAM | 289 | 431 | |
| 168 | 56476 | QPSK | 384 | 431 | |
| 168 | 56476 | 16 QAM | 289 | 431 | |
| 169 | 56812 | QPSK | 384 | 432 | |
| 169 | 56812 | 16 QAM | 289 | 432 | |
| 170 | 57148 | QPSK | 384 | 432 | |
| 170 | 57148 | 16 QAM | 289 | 432 | |
| 171 | 57484 | QPSK | 384 | 432 | |
| 171 | 57484 | 16 QAM | 289 | 432 | |
| 172 | 57820 | QPSK | 384 | 433 | |
| 172 | 57820 | 16 QAM | 289 | 433 | |
| 173 | 58156 | QPSK | 384 | 433 | |
| 173 | 58156 | 16 QAM | 289 | 433 | |
| 174 | 58492 | QPSK | 384 | 433 | |
| 174 | 58492 | 16 QAM | 289 | 433 | |
| 175 | 58828 | QPSK | 384 | 434 | |
| 175 | 58828 | 16 QAM | 289 | 434 | |
| 176 | 59164 | QPSK | 384 | 434 | |
| 176 | 59164 | 16 QAM | 289 | 434 | |

| | | | | | |
|---|---|---|---|---|---|
| 177 | 59500 | QPSK | 384 | 435 | |
| 177 | 59500 | 16 QAM | 289 | 435 | |
| 178 | 59836 | QPSK | 384 | 435 | |
| 178 | 59836 | 16 QAM | 289 | 435 | |
| 179 | 60172 | QPSK | 384 | 435 | |
| 179 | 60172 | 16 QAM | 289 | 435 | |
| 180 | 60508 | QPSK | 384 | 436 | |
| 180 | 60508 | 16 QAM | 289 | 436 | |
| 181 | 60844 | QPSK | 384 | 436 | |
| 181 | 60844 | 16 QAM | 289 | 436 | |
| 182 | 61180 | QPSK | 384 | 436 | |
| 182 | 61180 | 16 QAM | 289 | 436 | |
| 183 | 61516 | QPSK | 384 | 437 | |
| 183 | 61516 | 16 QAM | 289 | 437 | |
| 184 | 61852 | QPSK | 384 | 437 | |
| 184 | 61852 | 16 QAM | 289 | 437 | |
| 185 | 62188 | QPSK | 384 | 437 | |
| 185 | 62188 | 16 QAM | 289 | 437 | |
| 186 | 62524 | QPSK | 384 | 438 | |
| 186 | 62524 | 16 QAM | 289 | 438 | |
| 187 | 62860 | QPSK | 384 | 438 | |
| 187 | 62860 | 16 QAM | 289 | 438 | |
| 188 | 63196 | QPSK | 384 | 438 | |
| 188 | 63196 | 16 QAM | 289 | 438 | |
| 189 | 63532 | QPSK | 384 | 439 | |
| 189 | 63532 | 16 QAM | 289 | 439 | |
| 190 | 63868 | QPSK | 384 | 439 | |
| 190 | 63868 | 16 QAM | 289 | 439 | |
| 191 | 64204 | QPSK | 384 | 439 | |
| 191 | 64204 | 16 QAM | 289 | 439 | |
| 192 | 64540 | QPSK | 384 | 440 | |
| 192 | 64540 | 16 QAM | 289 | 440 | |
| 193 | 64876 | QPSK | 384 | 440 | |
| 193 | 64876 | 16 QAM | 289 | 440 | |
| 194 | 65212 | QPSK | 384 | 440 | |
| 194 | 65212 | 16 QAM | 289 | 440 | |
| 195 | 65548 | QPSK | 384 | 441 | |
| 195 | 65548 | 16 QAM | 289 | 441 | |
| 196 | 65884 | QPSK | 384 | 441 | |
| 196 | 65884 | 16 QAM | 289 | 441 | |
| 197 | 66220 | QPSK | 384 | 441 | |
| 197 | 66220 | 16 QAM | 289 | 441 | |
| 198 | 66556 | QPSK | 384 | 442 | |
| 198 | 66556 | 16 QAM | 289 | 442 | |
| 199 | 66892 | QPSK | 384 | 442 | |
| 199 | 66892 | 16 QAM | 289 | 442 | |
| 200 | 67228 | QPSK | 384 | 442 | |
| 200 | 67228 | 16 QAM | 289 | 442 | |
| 201 | 67564 | QPSK | 384 | 442 | |
| 201 | 67564 | 16 QAM | 289 | 442 | |
| 202 | 67900 | QPSK | 384 | 443 | |
| 202 | 67900 | 16 QAM | 289 | 443 | |
| 203 | 68236 | QPSK | 384 | 443 | |

| | | | | | |
|---|---|---|---|---|---|
| 203 | 68236 | 16 QAM | 289 | 443 | |
| 204 | 68572 | QPSK | 384 | 443 | |
| 204 | 68572 | 16 QAM | 289 | 443 | |
| 205 | 68908 | QPSK | 384 | 444 | |
| 205 | 68908 | 16 QAM | 289 | 444 | |
| 206 | 69244 | QPSK | 384 | 444 | |
| 206 | 69244 | 16 QAM | 289 | 444 | |
| 207 | 69580 | QPSK | 384 | 444 | |
| 207 | 69580 | 16 QAM | 289 | 444 | |
| 208 | 69916 | QPSK | 384 | 445 | |
| 208 | 69916 | 16 QAM | 289 | 445 | |
| 209 | 70252 | QPSK | 384 | 445 | |
| 209 | 70252 | 16 QAM | 289 | 445 | |
| 210 | 70588 | QPSK | 384 | 445 | |
| 210 | 70588 | 16 QAM | 289 | 445 | |
| 211 | 70924 | QPSK | 384 | 445 | |
| 211 | 70924 | 16 QAM | 289 | 445 | |
| 212 | 71260 | QPSK | 384 | 446 | |
| 212 | 71260 | 16 QAM | 289 | 446 | |
| 213 | 71596 | QPSK | 384 | 446 | |
| 213 | 71596 | 16 QAM | 289 | 446 | |
| 214 | 71932 | QPSK | 384 | 446 | |
| 214 | 71932 | 16 QAM | 289 | 446 | |
| 215 | 72268 | QPSK | 384 | 448 | |
| 215 | 72268 | 16 QAM | 289 | 447 | |
| 216 | 72604 | QPSK | 384 | 448 | |
| 216 | 72604 | 16 QAM | 289 | 447 | |
| 217 | 72940 | QPSK | 384 | 448 | |
| 217 | 72940 | 16 QAM | 289 | 447 | |
| 218 | 73276 | QPSK | 384 | 448 | |
| 218 | 73276 | 16 QAM | 289 | 448 | |
| 219 | 73612 | QPSK | 384 | 448 | |
| 219 | 73612 | 16 QAM | 289 | 448 | |
| 220 | 73948 | QPSK | 384 | 448 | |
| 220 | 73948 | 16 QAM | 289 | 448 | |
| 221 | 74284 | QPSK | 384 | 448 | |
| 221 | 74284 | 16 QAM | 289 | 448 | |
| 222 | 74620 | QPSK | 384 | 449 | |
| 222 | 74620 | 16 QAM | 289 | 449 | |
| 223 | 74956 | QPSK | 384 | 449 | |
| 223 | 74956 | 16 QAM | 289 | 449 | |
| 224 | 75292 | QPSK | 384 | 449 | |
| 224 | 75292 | 16 QAM | 289 | 449 | |
| 225 | 75628 | QPSK | 384 | 449 | |
| 225 | 75628 | 16 QAM | 289 | 449 | |
| 226 | 75964 | QPSK | 384 | 450 | |
| 226 | 75964 | 16 QAM | 289 | 450 | |
| 227 | 76300 | QPSK | 384 | 450 | |
| 227 | 76300 | 16 QAM | 289 | 450 | |
| 228 | 76636 | QPSK | 384 | 450 | |
| 228 | 76636 | 16 QAM | 289 | 450 | |
| 229 | 76972 | QPSK | 384 | 451 | |
| 229 | 76972 | 16 QAM | 289 | 451 | |

| | | | | | |
|---|---|---|---|---|---|
| 230 | 77308 | QPSK | 384 | 451 | |
| 230 | 77308 | 16 QAM | 289 | 451 | |
| 231 | 77644 | QPSK | 384 | 451 | |
| 231 | 77644 | 16 QAM | 289 | 451 | |
| 232 | 77980 | QPSK | 384 | 451 | |
| 232 | 77980 | 16 QAM | 289 | 451 | |
| 233 | 78316 | QPSK | 384 | 452 | |
| 233 | 78316 | 16 QAM | 289 | 452 | |
| 234 | 78652 | QPSK | 384 | 452 | |
| 234 | 78652 | 16 QAM | 289 | 452 | |
| 235 | 78988 | QPSK | 384 | 452 | |
| 235 | 78988 | 16 QAM | 289 | 452 | |
| 236 | 79324 | QPSK | 384 | 452 | |
| 236 | 79324 | 16 QAM | 289 | 452 | |
| 237 | 79660 | QPSK | 384 | 453 | |
| 237 | 79660 | 16 QAM | 289 | 453 | |
| 238 | 79996 | QPSK | 384 | 453 | |
| 238 | 79996 | 16 QAM | 289 | 453 | |
| 239 | 80332 | QPSK | 384 | 453 | |
| 239 | 80332 | 16 QAM | 289 | 453 | |
| 240 | 80668 | QPSK | 384 | 455 | |
| 240 | 80668 | 16 QAM | 289 | 454 | |
| 241 | 81004 | QPSK | 384 | 455 | |
| 241 | 81004 | 16 QAM | 289 | 454 | |
| 242 | 81340 | QPSK | 384 | 455 | |
| 242 | 81340 | 16 QAM | 289 | 454 | |
| 243 | 81676 | QPSK | 384 | 455 | |
| 243 | 81676 | 16 QAM | 289 | 454 | |
| 244 | 82012 | QPSK | 384 | 455 | |
| 244 | 82012 | 16 QAM | 289 | 455 | |
| 245 | 82348 | QPSK | 384 | 455 | |
| 245 | 82348 | 16 QAM | 289 | 455 | |
| 246 | 82684 | QPSK | 384 | 455 | |
| 246 | 82684 | 16 QAM | 289 | 455 | |
| 247 | 83020 | QPSK | 384 | 455 | |
| 247 | 83020 | 16 QAM | 289 | 455 | |
| 248 | 83356 | QPSK | 384 | 456 | |
| 248 | 83356 | 16 QAM | 289 | 456 | |
| 249 | 83692 | QPSK | 384 | 456 | |
| 249 | 83692 | 16 QAM | 289 | 456 | |
| 250 | 84028 | QPSK | 384 | 456 | |
| 250 | 84028 | 16 QAM | 289 | 456 | |
| 251 | 84364 | QPSK | 384 | 456 | |
| 251 | 84364 | 16 QAM | 289 | 456 | |
| 252 | 84700 | QPSK | 384 | 457 | |
| 252 | 84700 | 16 QAM | 289 | 457 | |
| 253 | 85036 | QPSK | 384 | 457 | |
| 253 | 85036 | 16 QAM | 289 | 457 | |
| 254 | 85372 | QPSK | 384 | 457 | |
| 254 | 85372 | 16 QAM | 289 | 457 | |
| 255 | 85708 | QPSK | 384 | 457 | |
| 255 | 85708 | 16 QAM | 289 | 457 | |
| 256 | 86044 | QPSK | 384 | 458 | |

| | | | | | |
|---|---|---|---|---|---|
| 256 | 86044 | 16 QAM | 289 | 458 | |
| 257 | 86387 | QPSK | 384 | 458 | |
| 257 | 86387 | 16 QAM | 289 | 458 | |
| 258 | 86723 | QPSK | 384 | 458 | |
| 258 | 86723 | 16 QAM | 289 | 458 | |
| 259 | 87059 | QPSK | 384 | 458 | |
| 259 | 87059 | 16 QAM | 289 | 458 | |
| 260 | 87395 | QPSK | 384 | 459 | |
| 260 | 87395 | 16 QAM | 289 | 459 | |
| 261 | 87731 | QPSK | 384 | 459 | |
| 261 | 87731 | 16 QAM | 289 | 459 | |
| 262 | 88067 | QPSK | 384 | 459 | |
| 262 | 88067 | 16 QAM | 289 | 459 | |
| 263 | 88403 | QPSK | 384 | 459 | |
| 263 | 88403 | 16 QAM | 289 | 459 | |
| 264 | 88739 | QPSK | 384 | 459 | |
| 264 | 88739 | 16 QAM | 289 | 459 | |
| 265 | 89075 | QPSK | 384 | 460 | |
| 265 | 89075 | 16 QAM | 289 | 460 | |
| 266 | 89411 | QPSK | 384 | 460 | |
| 266 | 89411 | 16 QAM | 289 | 460 | |
| 267 | 89747 | QPSK | 384 | 460 | |
| 267 | 89747 | 16 QAM | 289 | 460 | |
| 268 | 90083 | QPSK | 384 | 460 | |
| 268 | 90083 | 16 QAM | 289 | 460 | |
| 269 | 90419 | QPSK | 384 | 461 | |
| 269 | 90419 | 16 QAM | 289 | 461 | |
| 270 | 90755 | QPSK | 384 | 461 | |
| 270 | 90755 | 16 QAM | 289 | 461 | |
| 271 | 91091 | QPSK | 384 | 461 | |
| 271 | 91091 | 16 QAM | 289 | 461 | |
| 272 | 91427 | QPSK | 384 | 461 | |
| 272 | 91427 | 16 QAM | 289 | 461 | |
| 273 | 91763 | QPSK | 384 | 462 | |
| 273 | 91763 | 16 QAM | 289 | 462 | |
| 274 | 92099 | QPSK | 384 | 462 | |
| 274 | 92099 | 16 QAM | 289 | 462 | |
| 275 | 92435 | QPSK | 384 | 462 | |
| 275 | 92435 | 16 QAM | 289 | 462 | |
| 276 | 92771 | QPSK | 384 | 462 | |
| 276 | 92771 | 16 QAM | 289 | 462 | |
| 277 | 93107 | QPSK | 384 | 462 | |
| 277 | 93107 | 16 QAM | 289 | 462 | |
| 278 | 93443 | 16 QAM | 289 | 463 | |
| 279 | 93779 | 16 QAM | 289 | 463 | |
| 280 | 94115 | 16 QAM | 289 | 463 | |
| 281 | 94451 | 16 QAM | 289 | 463 | |
| 282 | 94787 | 16 QAM | 289 | 464 | |
| 283 | 95123 | 16 QAM | 289 | 464 | |
| 284 | 95459 | 16 QAM | 289 | 464 | |
| 285 | 95795 | 16 QAM | 289 | 464 | |
| 286 | 96131 | 16 QAM | 289 | 464 | |
| 287 | 96467 | 16 QAM | 289 | 465 | |

| | | | | | |
|---|---|---|---|---|---|
| 288 | 96803 | 16 QAM | 289 | 465 | |
| 289 | 97139 | 16 QAM | 289 | 465 | |
| 290 | 97475 | 16 QAM | 289 | 465 | |
| 291 | 97811 | 16 QAM | 289 | 466 | |
| 292 | 98147 | 16 QAM | 289 | 466 | |
| 293 | 98483 | 16 QAM | 289 | 466 | |
| 294 | 98819 | 16 QAM | 289 | 466 | |
| 295 | 99155 | 16 QAM | 289 | 466 | |
| 296 | 99491 | 16 QAM | 289 | 467 | |
| 297 | 99827 | 16 QAM | 289 | 467 | |
| 298 | 100163 | 16 QAM | 289 | 467 | |
| 299 | 100499 | 16 QAM | 289 | 467 | |
| 300 | 100835 | 16 QAM | 289 | 467 | |
| 301 | 101171 | 16 QAM | 289 | 468 | |
| 302 | 101507 | 16 QAM | 289 | 468 | |
| 303 | 101843 | 16 QAM | 289 | 468 | |
| 304 | 102179 | 16 QAM | 289 | 468 | |
| 305 | 102515 | 16 QAM | 289 | 468 | |
| 306 | 102851 | 16 QAM | 289 | 469 | |
| 307 | 103187 | 16 QAM | 289 | 469 | |
| 308 | 103523 | 16 QAM | 289 | 469 | |
| 309 | 103859 | 16 QAM | 289 | 469 | |
| 310 | 104195 | 16 QAM | 289 | 469 | |
| 311 | 104531 | 16 QAM | 289 | 470 | |
| 312 | 104867 | 16 QAM | 289 | 470 | |
| 313 | 105203 | 16 QAM | 289 | 470 | |
| 314 | 105539 | 16 QAM | 289 | 470 | |
| 315 | 105875 | 16 QAM | 289 | 470 | |

**Table 18.3.1.4.3.10: TFRC test points for UE category 13 for MAC-d PDU size=336, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 357 | QPSK | 4 | 115 | |
| 1 | 357 | 16 QAM | 2 | 115 | |
| 2 | 693 | QPSK | 8 | 156 | |
| 2 | 693 | 16 QAM | 4 | 156 | |
| 3 | 1029 | QPSK | 12 | 181 | |
| 3 | 1029 | 16 QAM | 6 | 181 | |
| 4 | 1365 | QPSK | 16 | 199 | |
| 4 | 1365 | 16 QAM | 8 | 199 | |
| 5 | 1701 | QPSK | 21 | 213 | |
| 5 | 1701 | 16 QAM | 10 | 213 | |
| 6 | 2037 | QPSK | 25 | 224 | |
| 6 | 2037 | 16 QAM | 12 | 224 | |
| 7 | 2373 | QPSK | 29 | 233 | |
| 7 | 2373 | 16 QAM | 14 | 233 | |
| 8 | 2709 | QPSK | 33 | 242 | |
| 8 | 2709 | 16 QAM | 16 | 242 | |
| 9 | 3045 | QPSK | 36 | 249 | |
| 9 | 3045 | 16 QAM | 18 | 249 | |

| | | | | | |
|---|---|---|---|---|---|
| 10 | 3381 | QPSK | 40 | 255 | |
| 10 | 3381 | 16 QAM | 20 | 255 | |
| 11 | 3717 | QPSK | 45 | 261 | |
| 11 | 3717 | 16 QAM | 22 | 261 | |
| 12 | 4053 | QPSK | 50 | 267 | |
| 12 | 4053 | 16 QAM | 25 | 267 | |
| 13 | 4389 | QPSK | 54 | 272 | |
| 13 | 4389 | 16 QAM | 27 | 272 | |
| 14 | 4725 | QPSK | 58 | 276 | |
| 14 | 4725 | 16 QAM | 29 | 276 | |
| 15 | 5061 | QPSK | 63 | 281 | |
| 15 | 5061 | 16 QAM | 31 | 281 | |
| 16 | 5397 | QPSK | 66 | 285 | |
| 16 | 5397 | 16 QAM | 33 | 285 | |
| 17 | 5733 | QPSK | 70 | 288 | |
| 17 | 5733 | 16 QAM | 35 | 288 | |
| 18 | 6069 | QPSK | 75 | 292 | |
| 18 | 6069 | 16 QAM | 36 | 292 | |
| 19 | 6405 | QPSK | 78 | 295 | |
| 19 | 6405 | 16 QAM | 39 | 295 | |
| 20 | 6741 | QPSK | 84 | 299 | |
| 20 | 6741 | 16 QAM | 42 | 299 | |
| 21 | 7077 | QPSK | 88 | 302 | |
| 21 | 7077 | 16 QAM | 44 | 302 | |
| 22 | 7413 | QPSK | 91 | 304 | |
| 22 | 7413 | 16 QAM | 45 | 304 | |
| 23 | 7749 | QPSK | 95 | 307 | |
| 23 | 7749 | 16 QAM | 46 | 307 | |
| 24 | 8085 | QPSK | 100 | 310 | |
| 24 | 8085 | 16 QAM | 50 | 310 | |
| 25 | 8421 | QPSK | 102 | 312 | |
| 25 | 8421 | 16 QAM | 51 | 312 | |
| 26 | 8757 | QPSK | 108 | 315 | |
| 26 | 8757 | 16 QAM | 54 | 315 | |
| 27 | 9093 | QPSK | 112 | 317 | |
| 27 | 9093 | 16 QAM | 56 | 317 | |
| 28 | 9429 | QPSK | 116 | 319 | |
| 28 | 9429 | 16 QAM | 58 | 319 | |
| 29 | 9765 | QPSK | 121 | 322 | |
| 29 | 9765 | 16 QAM | 60 | 322 | |
| 30 | 10101 | QPSK | 125 | 324 | |
| 30 | 10101 | 16 QAM | 62 | 324 | |
| 31 | 10437 | QPSK | 128 | 326 | |
| 31 | 10437 | 16 QAM | 64 | 326 | |
| 32 | 10773 | QPSK | 133 | 328 | |
| 32 | 10773 | 16 QAM | 66 | 328 | |
| 33 | 11109 | QPSK | 138 | 330 | |
| 33 | 11109 | 16 QAM | 69 | 330 | |
| 34 | 11445 | QPSK | 140 | 332 | |
| 34 | 11445 | 16 QAM | 70 | 332 | |
| 35 | 11781 | QPSK | 145 | 333 | |
| 35 | 11781 | 16 QAM | 72 | 333 | |
| 36 | 12117 | QPSK | 147 | 335 | |

| | | | | | |
|---|---|---|---|---|---|
| 36 | 12117 | 16 QAM | 72 | 335 | |
| 37 | 12453 | QPSK | 154 | 337 | |
| 37 | 12453 | 16 QAM | 77 | 337 | |
| 38 | 12789 | QPSK | 156 | 339 | |
| 38 | 12789 | 16 QAM | 78 | 339 | |
| 39 | 13125 | QPSK | 162 | 340 | |
| 39 | 13125 | 16 QAM | 81 | 340 | |
| 40 | 13461 | QPSK | 165 | 342 | |
| 40 | 13461 | 16 QAM | 81 | 342 | |
| 41 | 13797 | QPSK | 170 | 343 | |
| 41 | 13797 | 16 QAM | 85 | 343 | |
| 42 | 14133 | QPSK | 176 | 345 | |
| 42 | 14133 | 16 QAM | 88 | 345 | |
| 43 | 14469 | QPSK | 176 | 346 | |
| 43 | 14469 | 16 QAM | 88 | 346 | |
| 44 | 14805 | QPSK | 184 | 348 | |
| 44 | 14805 | 16 QAM | 92 | 348 | |
| 45 | 15141 | QPSK | 187 | 349 | |
| 45 | 15141 | 16 QAM | 93 | 349 | |
| 46 | 15477 | QPSK | 190 | 350 | |
| 46 | 15477 | 16 QAM | 95 | 350 | |
| 47 | 15813 | QPSK | 196 | 352 | |
| 47 | 15813 | 16 QAM | 98 | 352 | |
| 48 | 16149 | QPSK | 200 | 353 | |
| 48 | 16149 | 16 QAM | 100 | 353 | |
| 49 | 16485 | QPSK | 203 | 354 | |
| 49 | 16485 | 16 QAM | 100 | 354 | |
| 50 | 16821 | QPSK | 209 | 356 | |
| 50 | 16821 | 16 QAM | 104 | 356 | |
| 51 | 17157 | QPSK | 210 | 357 | |
| 51 | 17157 | 16 QAM | 105 | 357 | |
| 52 | 17493 | QPSK | 216 | 358 | |
| 52 | 17493 | 16 QAM | 108 | 358 | |
| 53 | 17829 | QPSK | 220 | 359 | |
| 53 | 17829 | 16 QAM | 110 | 359 | |
| 54 | 18165 | QPSK | 220 | 360 | |
| 54 | 18165 | 16 QAM | 110 | 360 | |
| 55 | 18501 | QPSK | 231 | 362 | |
| 55 | 18501 | 16 QAM | 115 | 362 | |
| 56 | 18837 | QPSK | 234 | 363 | |
| 56 | 18837 | 16 QAM | 117 | 363 | |
| 57 | 19173 | QPSK | 234 | 364 | |
| 57 | 19173 | 16 QAM | 119 | 364 | |
| 58 | 19509 | QPSK | 242 | 365 | |
| 58 | 19509 | 16 QAM | 121 | 365 | |
| 59 | 19845 | QPSK | 243 | 366 | |
| 59 | 19845 | 16 QAM | 121 | 366 | |
| 60 | 20181 | QPSK | 250 | 367 | |
| 60 | 20181 | 16 QAM | 125 | 367 | |
| 61 | 20517 | QPSK | 253 | 368 | |
| 61 | 20517 | 16 QAM | 126 | 368 | |
| 62 | 20853 | QPSK | 256 | 369 | |
| 62 | 20853 | 16 QAM | 128 | 369 | |

| | | | | | |
|---|---|---|---|---|---|
| 63 | 21189 | QPSK | 261 | 370 | |
| 63 | 21189 | 16 QAM | 130 | 370 | |
| 64 | 21525 | QPSK | 264 | 371 | |
| 64 | 21525 | 16 QAM | 133 | 371 | |
| 65 | 21861 | QPSK | 270 | 372 | |
| 65 | 21861 | 16 QAM | 135 | 372 | |
| 66 | 22197 | QPSK | 275 | 373 | |
| 66 | 22197 | 16 QAM | 136 | 373 | |
| 67 | 22533 | QPSK | 280 | 374 | |
| 67 | 22533 | 16 QAM | 140 | 374 | |
| 68 | 22869 | QPSK | 280 | 375 | |
| 68 | 22869 | 16 QAM | 140 | 375 | |
| 69 | 23205 | QPSK | 288 | 376 | |
| 69 | 23205 | 16 QAM | 144 | 376 | |
| 70 | 23541 | QPSK | 290 | 377 | |
| 70 | 23541 | 16 QAM | 145 | 377 | |
| 71 | 23877 | QPSK | 297 | 378 | |
| 71 | 23877 | 16 QAM | 147 | 378 | |
| 72 | 24213 | QPSK | 297 | 378 | |
| 72 | 24213 | 16 QAM | 147 | 378 | |
| 73 | 24549 | QPSK | 300 | 379 | |
| 73 | 24549 | 16 QAM | 150 | 379 | |
| 74 | 24885 | QPSK | 308 | 380 | |
| 74 | 24885 | 16 QAM | 154 | 380 | |
| 75 | 25221 | QPSK | 312 | 381 | |
| 75 | 25221 | 16 QAM | 156 | 381 | |
| 76 | 25557 | QPSK | 312 | 382 | |
| 76 | 25557 | 16 QAM | 156 | 382 | |
| 77 | 25893 | QPSK | 320 | 383 | |
| 77 | 25893 | 16 QAM | 161 | 383 | |
| 78 | 26229 | QPSK | 320 | 383 | |
| 78 | 26229 | 16 QAM | 161 | 383 | |
| 79 | 26565 | QPSK | 324 | 384 | |
| 79 | 26565 | 16 QAM | 162 | 384 | |
| 80 | 26901 | QPSK | 330 | 385 | |
| 80 | 26901 | 16 QAM | 165 | 385 | |
| 81 | 27237 | QPSK | 336 | 386 | |
| 81 | 27237 | 16 QAM | 168 | 386 | |
| 82 | 27573 | QPSK | 336 | 386 | |
| 82 | 27573 | 16 QAM | 168 | 386 | |
| 83 | 27909 | QPSK | 341 | 387 | |
| 83 | 27909 | 16 QAM | 171 | 387 | |
| 84 | 28245 | QPSK | 348 | 388 | |
| 84 | 28245 | 16 QAM | 175 | 388 | |
| 85 | 28581 | QPSK | 352 | 389 | |
| 85 | 28581 | 16 QAM | 176 | 389 | |
| 86 | 28917 | QPSK | 352 | 389 | |
| 86 | 28917 | 16 QAM | 176 | 389 | |
| 87 | 29253 | QPSK | 360 | 390 | |
| 87 | 29253 | 16 QAM | 180 | 390 | |
| 88 | 29589 | QPSK | 360 | 391 | |
| 88 | 29589 | 16 QAM | 182 | 391 | |
| 89 | 29925 | QPSK | 372 | 392 | |

| | | | | | |
|---|---|---|---|---|---|
| 89 | 29925 | 16 QAM | 186 | 392 | |
| 90 | 30261 | QPSK | 372 | 392 | |
| 90 | 30261 | 16 QAM | 186 | 392 | |
| 91 | 30597 | QPSK | 372 | 393 | |
| 91 | 30597 | 16 QAM | 189 | 393 | |
| 92 | 30933 | QPSK | 384 | 394 | |
| 92 | 30933 | 16 QAM | 192 | 394 | |
| 93 | 31269 | QPSK | 384 | 394 | |
| 93 | 31269 | 16 QAM | 192 | 394 | |
| 94 | 31605 | QPSK | 384 | 395 | |
| 94 | 31605 | 16 QAM | 196 | 395 | |
| 95 | 31941 | QPSK | 384 | 396 | |
| 95 | 31941 | 16 QAM | 198 | 396 | |
| 96 | 32277 | QPSK | 384 | 396 | |
| 96 | 32277 | 16 QAM | 198 | 396 | |
| 97 | 32613 | QPSK | 384 | 397 | |
| 97 | 32613 | 16 QAM | 200 | 397 | |
| 98 | 32949 | QPSK | 384 | 398 | |
| 98 | 32949 | 16 QAM | 204 | 398 | |
| 99 | 33285 | QPSK | 384 | 398 | |
| 99 | 33285 | 16 QAM | 204 | 398 | |
| 100 | 33621 | QPSK | 384 | 399 | |
| 100 | 33621 | 16 QAM | 208 | 399 | |
| 101 | 33957 | QPSK | 384 | 399 | |
| 101 | 33957 | 16 QAM | 208 | 399 | |
| 102 | 34293 | QPSK | 384 | 400 | |
| 102 | 34293 | 16 QAM | 210 | 400 | |
| 103 | 34629 | QPSK | 384 | 401 | |
| 103 | 34629 | 16 QAM | 210 | 401 | |
| 104 | 34965 | QPSK | 384 | 401 | |
| 104 | 34965 | 16 QAM | 210 | 401 | |
| 105 | 35301 | QPSK | 384 | 402 | |
| 105 | 35301 | 16 QAM | 217 | 402 | |
| 106 | 35637 | QPSK | 384 | 403 | |
| 106 | 35637 | 16 QAM | 220 | 403 | |
| 107 | 35973 | QPSK | 384 | 403 | |
| 107 | 35973 | 16 QAM | 220 | 403 | |
| 108 | 36309 | QPSK | 384 | 404 | |
| 108 | 36309 | 16 QAM | 225 | 404 | |
| 109 | 36645 | QPSK | 384 | 404 | |
| 109 | 36645 | 16 QAM | 225 | 404 | |
| 110 | 36981 | QPSK | 384 | 405 | |
| 110 | 36981 | 16 QAM | 230 | 405 | |
| 111 | 37317 | QPSK | 384 | 405 | |
| 111 | 37317 | 16 QAM | 230 | 405 | |
| 112 | 37653 | QPSK | 384 | 406 | |
| 112 | 37653 | 16 QAM | 232 | 406 | |
| 113 | 37989 | QPSK | 384 | 406 | |
| 113 | 37989 | 16 QAM | 232 | 406 | |
| 114 | 38325 | QPSK | 384 | 407 | |
| 114 | 38325 | 16 QAM | 234 | 407 | |
| 115 | 38661 | QPSK | 384 | 408 | |
| 115 | 38661 | 16 QAM | 240 | 408 | |

| | | | | | |
|---|---|---|---|---|---|
| 116 | 38997 | QPSK | 384 | 408 | |
| 116 | 38997 | 16 QAM | 240 | 408 | |
| 117 | 39333 | QPSK | 384 | 409 | |
| 117 | 39333 | 16 QAM | 243 | 409 | |
| 118 | 39669 | QPSK | 384 | 409 | |
| 118 | 39669 | 16 QAM | 243 | 409 | |
| 119 | 40005 | QPSK | 384 | 410 | |
| 119 | 40005 | 16 QAM | 248 | 410 | |
| 120 | 40341 | QPSK | 384 | 410 | |
| 120 | 40341 | 16 QAM | 248 | 410 | |
| 121 | 40677 | QPSK | 384 | 411 | |
| 121 | 40677 | 16 QAM | 253 | 411 | |
| 122 | 41013 | QPSK | 384 | 411 | |
| 122 | 41013 | 16 QAM | 253 | 411 | |
| 123 | 41349 | QPSK | 384 | 412 | |
| 123 | 41349 | 16 QAM | 256 | 412 | |
| 124 | 41685 | QPSK | 384 | 412 | |
| 124 | 41685 | 16 QAM | 256 | 412 | |
| 125 | 42021 | QPSK | 384 | 413 | |
| 125 | 42021 | 16 QAM | 261 | 413 | |
| 126 | 42357 | QPSK | 384 | 413 | |
| 126 | 42357 | 16 QAM | 261 | 413 | |
| 127 | 42693 | QPSK | 384 | 414 | |
| 127 | 42693 | 16 QAM | 264 | 414 | |
| 128 | 43029 | QPSK | 384 | 414 | |
| 128 | 43029 | 16 QAM | 264 | 414 | |
| 129 | 43372 | QPSK | 384 | 415 | |
| 129 | 43372 | 16 QAM | 270 | 415 | |
| 130 | 43708 | QPSK | 384 | 415 | |
| 130 | 43708 | 16 QAM | 270 | 415 | |
| 131 | 44044 | QPSK | 384 | 416 | |
| 131 | 44044 | 16 QAM | 270 | 416 | |
| 132 | 44380 | QPSK | 384 | 416 | |
| 132 | 44380 | 16 QAM | 270 | 416 | |
| 133 | 44716 | QPSK | 384 | 417 | |
| 133 | 44716 | 16 QAM | 276 | 417 | |
| 134 | 45052 | QPSK | 384 | 417 | |
| 134 | 45052 | 16 QAM | 276 | 417 | |
| 135 | 45388 | QPSK | 384 | 418 | |
| 135 | 45388 | 16 QAM | 280 | 418 | |
| 136 | 45724 | QPSK | 384 | 418 | |
| 136 | 45724 | 16 QAM | 280 | 418 | |
| 137 | 46060 | QPSK | 384 | 419 | |
| 137 | 46060 | 16 QAM | 286 | 419 | |
| 138 | 46396 | QPSK | 384 | 419 | |
| 138 | 46396 | 16 QAM | 286 | 419 | |
| 139 | 46732 | QPSK | 384 | 419 | |
| 139 | 46732 | 16 QAM | 286 | 419 | |
| 140 | 47068 | QPSK | 384 | 420 | |
| 140 | 47068 | 16 QAM | 290 | 420 | |
| 141 | 47404 | QPSK | 384 | 420 | |
| 141 | 47404 | 16 QAM | 290 | 420 | |
| 142 | 47740 | QPSK | 384 | 421 | |

| | | | | | |
|---|---|---|---|---|---|
| 142 | 47740 | 16 QAM | 297 | 421 | |
| 143 | 48076 | QPSK | 384 | 421 | |
| 143 | 48076 | 16 QAM | 297 | 421 | |
| 144 | 48412 | QPSK | 384 | 422 | |
| 144 | 48412 | 16 QAM | 300 | 422 | |
| 145 | 48748 | QPSK | 384 | 422 | |
| 145 | 48748 | 16 QAM | 300 | 422 | |
| 146 | 49084 | QPSK | 384 | 422 | |
| 146 | 49084 | 16 QAM | 300 | 422 | |
| 147 | 49420 | QPSK | 384 | 423 | |
| 147 | 49420 | 16 QAM | 300 | 423 | |
| 148 | 49756 | QPSK | 384 | 423 | |
| 148 | 49756 | 16 QAM | 300 | 423 | |
| 149 | 50092 | QPSK | 384 | 424 | |
| 149 | 50092 | 16 QAM | 310 | 424 | |
| 150 | 50428 | QPSK | 384 | 424 | |
| 150 | 50428 | 16 QAM | 310 | 424 | |
| 151 | 50764 | QPSK | 384 | 425 | |
| 151 | 50764 | 16 QAM | 312 | 425 | |
| 152 | 51100 | QPSK | 384 | 425 | |
| 152 | 51100 | 16 QAM | 312 | 425 | |
| 153 | 51436 | QPSK | 384 | 425 | |
| 153 | 51436 | 16 QAM | 312 | 425 | |
| 154 | 51772 | QPSK | 384 | 426 | |
| 154 | 51772 | 16 QAM | 320 | 426 | |
| 155 | 52108 | QPSK | 384 | 426 | |
| 155 | 52108 | 16 QAM | 320 | 426 | |
| 156 | 52444 | QPSK | 384 | 427 | |
| 156 | 52444 | 16 QAM | 324 | 427 | |
| 157 | 52780 | QPSK | 384 | 427 | |
| 157 | 52780 | 16 QAM | 324 | 427 | |
| 158 | 53116 | QPSK | 384 | 427 | |
| 158 | 53116 | 16 QAM | 324 | 427 | |
| 159 | 53452 | QPSK | 384 | 428 | |
| 159 | 53452 | 16 QAM | 330 | 428 | |
| 160 | 53788 | QPSK | 384 | 428 | |
| 160 | 53788 | 16 QAM | 330 | 428 | |
| 161 | 54124 | QPSK | 384 | 429 | |
| 161 | 54124 | 16 QAM | 336 | 429 | |
| 162 | 54460 | QPSK | 384 | 429 | |
| 162 | 54460 | 16 QAM | 336 | 429 | |
| 163 | 54796 | QPSK | 384 | 429 | |
| 163 | 54796 | 16 QAM | 336 | 429 | |
| 164 | 55132 | QPSK | 384 | 430 | |
| 164 | 55132 | 16 QAM | 341 | 430 | |
| 165 | 55468 | QPSK | 384 | 430 | |
| 165 | 55468 | 16 QAM | 341 | 430 | |
| 166 | 55804 | QPSK | 384 | 431 | |
| 166 | 55804 | 16 QAM | 348 | 431 | |
| 167 | 56140 | QPSK | 384 | 431 | |
| 167 | 56140 | 16 QAM | 348 | 431 | |
| 168 | 56476 | QPSK | 384 | 431 | |
| 168 | 56476 | 16 QAM | 348 | 431 | |

| | | | | | |
|---|---|---|---|---|---|
| 169 | 56812 | QPSK | 384 | 432 | |
| 169 | 56812 | 16 QAM | 352 | 432 | |
| 170 | 57148 | QPSK | 384 | 432 | |
| 170 | 57148 | 16 QAM | 352 | 432 | |
| 171 | 57484 | QPSK | 384 | 432 | |
| 171 | 57484 | 16 QAM | 352 | 432 | |
| 172 | 57820 | QPSK | 384 | 433 | |
| 172 | 57820 | 16 QAM | 360 | 433 | |
| 173 | 58156 | QPSK | 384 | 433 | |
| 173 | 58156 | 16 QAM | 360 | 433 | |
| 174 | 58492 | QPSK | 384 | 433 | |
| 174 | 58492 | 16 QAM | 360 | 433 | |
| 175 | 58828 | QPSK | 384 | 434 | |
| 175 | 58828 | 16 QAM | 360 | 434 | |
| 176 | 59164 | QPSK | 384 | 434 | |
| 176 | 59164 | 16 QAM | 360 | 434 | |
| 177 | 59500 | QPSK | 384 | 435 | |
| 177 | 59500 | 16 QAM | 360 | 435 | |
| 178 | 59836 | QPSK | 384 | 435 | |
| 178 | 59836 | 16 QAM | 360 | 435 | |
| 179 | 60172 | QPSK | 384 | 435 | |
| 179 | 60172 | 16 QAM | 360 | 435 | |
| 180 | 60508 | QPSK | 384 | 436 | |
| 180 | 60508 | 16 QAM | 372 | 436 | |
| 181 | 60844 | QPSK | 384 | 436 | |
| 181 | 60844 | 16 QAM | 372 | 436 | |
| 182 | 61180 | QPSK | 384 | 436 | |
| 182 | 61180 | 16 QAM | 372 | 436 | |
| 183 | 61516 | QPSK | 384 | 437 | |
| 183 | 61516 | 16 QAM | 384 | 437 | |
| 184 | 61852 | QPSK | 384 | 437 | |
| 184 | 61852 | 16 QAM | 384 | 437 | |
| 185 | 62188 | QPSK | 384 | 437 | |
| 185 | 62188 | 16 QAM | 384 | 437 | |
| 186 | 62524 | QPSK | 384 | 438 | |
| 186 | 62524 | 16 QAM | 384 | 438 | |
| 187 | 62860 | QPSK | 384 | 438 | |
| 187 | 62860 | 16 QAM | 384 | 438 | |
| 188 | 63196 | QPSK | 384 | 438 | |
| 188 | 63196 | 16 QAM | 384 | 438 | |
| 189 | 63532 | QPSK | 384 | 439 | |
| 189 | 63532 | 16 QAM | 384 | 439 | |
| 190 | 63868 | QPSK | 384 | 439 | |
| 190 | 63868 | 16 QAM | 384 | 439 | |
| 191 | 64204 | QPSK | 384 | 439 | |
| 191 | 64204 | 16 QAM | 384 | 439 | |
| 192 | 64540 | QPSK | 384 | 440 | |
| 192 | 64540 | 16 QAM | 384 | 440 | |
| 193 | 64876 | QPSK | 384 | 440 | |
| 193 | 64876 | 16 QAM | 384 | 440 | |
| 194 | 65212 | QPSK | 384 | 440 | |
| 194 | 65212 | 16 QAM | 384 | 440 | |
| 195 | 65548 | QPSK | 384 | 441 | |

| | | | | | |
|---|---|---|---|---|---|
| 195 | 65548 | 16 QAM | 384 | 441 | |
| 196 | 65884 | QPSK | 384 | 441 | |
| 196 | 65884 | 16 QAM | 384 | 441 | |
| 197 | 66220 | QPSK | 384 | 441 | |
| 197 | 66220 | 16 QAM | 384 | 441 | |
| 198 | 66556 | QPSK | 384 | 442 | |
| 198 | 66556 | 16 QAM | 384 | 442 | |
| 199 | 66892 | QPSK | 384 | 442 | |
| 199 | 66892 | 16 QAM | 384 | 442 | |
| 200 | 67228 | QPSK | 384 | 442 | |
| 200 | 67228 | 16 QAM | 384 | 442 | |
| 201 | 67564 | QPSK | 384 | 442 | |
| 201 | 67564 | 16 QAM | 384 | 442 | |
| 202 | 67900 | QPSK | 384 | 443 | |
| 202 | 67900 | 16 QAM | 384 | 443 | |
| 203 | 68236 | QPSK | 384 | 443 | |
| 203 | 68236 | 16 QAM | 384 | 443 | |
| 204 | 68572 | QPSK | 384 | 443 | |
| 204 | 68572 | 16 QAM | 384 | 443 | |
| 205 | 68908 | QPSK | 384 | 444 | |
| 205 | 68908 | 16 QAM | 384 | 444 | |
| 206 | 69244 | QPSK | 384 | 444 | |
| 206 | 69244 | 16 QAM | 384 | 444 | |
| 207 | 69580 | QPSK | 384 | 444 | |
| 207 | 69580 | 16 QAM | 384 | 444 | |
| 208 | 69916 | QPSK | 384 | 445 | |
| 208 | 69916 | 16 QAM | 384 | 445 | |
| 209 | 70252 | QPSK | 384 | 445 | |
| 209 | 70252 | 16 QAM | 384 | 445 | |
| 210 | 70588 | QPSK | 384 | 445 | |
| 210 | 70588 | 16 QAM | 384 | 445 | |
| 211 | 70924 | QPSK | 384 | 445 | |
| 211 | 70924 | 16 QAM | 384 | 445 | |
| 212 | 71260 | QPSK | 384 | 446 | |
| 212 | 71260 | 16 QAM | 384 | 446 | |
| 213 | 71596 | QPSK | 384 | 446 | |
| 213 | 71596 | 16 QAM | 384 | 446 | |
| 214 | 71932 | QPSK | 384 | 446 | |
| 214 | 71932 | 16 QAM | 384 | 446 | |
| 215 | 72268 | QPSK | 384 | 448 | |
| 215 | 72268 | 16 QAM | 384 | 447 | |
| 216 | 72604 | QPSK | 384 | 448 | |
| 216 | 72604 | 16 QAM | 384 | 447 | |
| 217 | 72940 | QPSK | 384 | 448 | |
| 217 | 72940 | 16 QAM | 384 | 447 | |
| 218 | 73276 | QPSK | 384 | 448 | |
| 218 | 73276 | 16 QAM | 384 | 448 | |
| 219 | 73612 | QPSK | 384 | 448 | |
| 219 | 73612 | 16 QAM | 384 | 448 | |
| 220 | 73948 | QPSK | 384 | 448 | |
| 220 | 73948 | 16 QAM | 384 | 448 | |
| 221 | 74284 | QPSK | 384 | 448 | |
| 221 | 74284 | 16 QAM | 384 | 448 | |

| | | | | | |
|---|---|---|---|---|---|
| 222 | 74620 | QPSK | 384 | 449 | |
| 222 | 74620 | 16 QAM | 384 | 449 | |
| 223 | 74956 | QPSK | 384 | 449 | |
| 223 | 74956 | 16 QAM | 384 | 449 | |
| 224 | 75292 | QPSK | 384 | 449 | |
| 224 | 75292 | 16 QAM | 384 | 449 | |
| 225 | 75628 | QPSK | 384 | 449 | |
| 225 | 75628 | 16 QAM | 384 | 449 | |
| 226 | 75964 | QPSK | 384 | 450 | |
| 226 | 75964 | 16 QAM | 384 | 450 | |
| 227 | 76300 | QPSK | 384 | 450 | |
| 227 | 76300 | 16 QAM | 384 | 450 | |
| 228 | 76636 | QPSK | 384 | 450 | |
| 228 | 76636 | 16 QAM | 384 | 450 | |
| 229 | 76972 | QPSK | 384 | 451 | |
| 229 | 76972 | 16 QAM | 384 | 451 | |
| 230 | 77308 | QPSK | 384 | 451 | |
| 230 | 77308 | 16 QAM | 384 | 451 | |
| 231 | 77644 | QPSK | 384 | 451 | |
| 231 | 77644 | 16 QAM | 384 | 451 | |
| 232 | 77980 | QPSK | 384 | 451 | |
| 232 | 77980 | 16 QAM | 384 | 451 | |
| 233 | 78316 | QPSK | 384 | 452 | |
| 233 | 78316 | 16 QAM | 384 | 452 | |
| 234 | 78652 | QPSK | 384 | 452 | |
| 234 | 78652 | 16 QAM | 384 | 452 | |
| 235 | 78988 | QPSK | 384 | 452 | |
| 235 | 78988 | 16 QAM | 384 | 452 | |
| 236 | 79324 | QPSK | 384 | 452 | |
| 236 | 79324 | 16 QAM | 384 | 452 | |
| 237 | 79660 | QPSK | 384 | 453 | |
| 237 | 79660 | 16 QAM | 384 | 453 | |
| 238 | 79996 | QPSK | 384 | 453 | |
| 238 | 79996 | 16 QAM | 384 | 453 | |
| 239 | 80332 | QPSK | 384 | 453 | |
| 239 | 80332 | 16 QAM | 384 | 453 | |
| 240 | 80668 | QPSK | 384 | 455 | |
| 240 | 80668 | 16 QAM | 384 | 454 | |
| 241 | 81004 | QPSK | 384 | 455 | |
| 241 | 81004 | 16 QAM | 384 | 454 | |
| 242 | 81340 | QPSK | 384 | 455 | |
| 242 | 81340 | 16 QAM | 384 | 454 | |
| 243 | 81676 | QPSK | 384 | 455 | |
| 243 | 81676 | 16 QAM | 384 | 454 | |
| 244 | 82012 | QPSK | 384 | 455 | |
| 244 | 82012 | 16 QAM | 384 | 455 | |
| 245 | 82348 | QPSK | 384 | 455 | |
| 245 | 82348 | 16 QAM | 384 | 455 | |
| 246 | 82684 | QPSK | 384 | 455 | |
| 246 | 82684 | 16 QAM | 384 | 455 | |
| 247 | 83020 | QPSK | 384 | 455 | |
| 247 | 83020 | 16 QAM | 384 | 455 | |
| 248 | 83356 | QPSK | 384 | 456 | |

| | | | | | |
|---|---|---|---|---|---|
| 248 | 83356 | 16 QAM | 384 | 456 | |
| 249 | 83692 | QPSK | 384 | 456 | |
| 249 | 83692 | 16 QAM | 384 | 456 | |
| 250 | 84028 | QPSK | 384 | 456 | |
| 250 | 84028 | 16 QAM | 384 | 456 | |
| 251 | 84364 | QPSK | 384 | 456 | |
| 251 | 84364 | 16 QAM | 384 | 456 | |
| 252 | 84700 | QPSK | 384 | 457 | |
| 252 | 84700 | 16 QAM | 384 | 457 | |
| 253 | 85036 | QPSK | 384 | 457 | |
| 253 | 85036 | 16 QAM | 384 | 457 | |
| 254 | 85372 | QPSK | 384 | 457 | |
| 254 | 85372 | 16 QAM | 384 | 457 | |
| 255 | 85708 | QPSK | 384 | 457 | |
| 255 | 85708 | 16 QAM | 384 | 457 | |
| 256 | 86044 | QPSK | 384 | 458 | |
| 256 | 86044 | 16 QAM | 384 | 458 | |
| 257 | 86387 | QPSK | 384 | 458 | |
| 257 | 86387 | 16 QAM | 384 | 458 | |
| 258 | 86723 | QPSK | 384 | 458 | |
| 258 | 86723 | 16 QAM | 384 | 458 | |
| 259 | 87059 | QPSK | 384 | 458 | |
| 259 | 87059 | 16 QAM | 384 | 458 | |
| 260 | 87395 | QPSK | 384 | 459 | |
| 260 | 87395 | 16 QAM | 384 | 459 | |
| 261 | 87731 | QPSK | 384 | 459 | |
| 261 | 87731 | 16 QAM | 384 | 459 | |
| 262 | 88067 | QPSK | 384 | 459 | |
| 262 | 88067 | 16 QAM | 384 | 459 | |
| 263 | 88403 | QPSK | 384 | 459 | |
| 263 | 88403 | 16 QAM | 384 | 459 | |
| 264 | 88739 | QPSK | 384 | 459 | |
| 264 | 88739 | 16 QAM | 384 | 459 | |
| 265 | 89075 | QPSK | 384 | 460 | |
| 265 | 89075 | 16 QAM | 384 | 460 | |
| 266 | 89411 | QPSK | 384 | 460 | |
| 266 | 89411 | 16 QAM | 384 | 460 | |
| 267 | 89747 | QPSK | 384 | 460 | |
| 267 | 89747 | 16 QAM | 384 | 460 | |
| 268 | 90083 | QPSK | 384 | 460 | |
| 268 | 90083 | 16 QAM | 384 | 460 | |
| 269 | 90419 | QPSK | 384 | 461 | |
| 269 | 90419 | 16 QAM | 384 | 461 | |
| 270 | 90755 | QPSK | 384 | 461 | |
| 270 | 90755 | 16 QAM | 384 | 461 | |
| 271 | 91091 | QPSK | 384 | 461 | |
| 271 | 91091 | 16 QAM | 384 | 461 | |
| 272 | 91427 | QPSK | 384 | 461 | |
| 272 | 91427 | 16 QAM | 384 | 461 | |
| 273 | 91763 | QPSK | 384 | 462 | |
| 273 | 91763 | 16 QAM | 384 | 462 | |
| 274 | 92099 | QPSK | 384 | 462 | |
| 274 | 92099 | 16 QAM | 384 | 462 | |

| | | | | | |
|---|---|---|---|---|---|
| 275 | 92435 | QPSK | 384 | 462 | |
| 275 | 92435 | 16 QAM | 384 | 462 | |
| 276 | 92771 | QPSK | 384 | 462 | |
| 276 | 92771 | 16 QAM | 384 | 462 | |
| 277 | 93107 | QPSK | 384 | 462 | |
| 277 | 93107 | 16 QAM | 384 | 462 | |
| 278 | 93443 | 16 QAM | 384 | 463 | |
| 279 | 93779 | 16 QAM | 384 | 463 | |
| 280 | 94115 | 16 QAM | 384 | 463 | |
| 281 | 94451 | 16 QAM | 384 | 463 | |
| 282 | 94787 | 16 QAM | 384 | 464 | |
| 283 | 95123 | 16 QAM | 384 | 464 | |
| 284 | 95459 | 16 QAM | 384 | 464 | |
| 285 | 95795 | 16 QAM | 384 | 464 | |
| 286 | 96131 | 16 QAM | 384 | 464 | |
| 287 | 96467 | 16 QAM | 384 | 465 | |
| 288 | 96803 | 16 QAM | 384 | 465 | |
| 289 | 97139 | 16 QAM | 384 | 465 | |
| 290 | 97475 | 16 QAM | 384 | 465 | |
| 291 | 97811 | 16 QAM | 384 | 466 | |
| 292 | 98147 | 16 QAM | 384 | 466 | |
| 293 | 98483 | 16 QAM | 384 | 466 | |
| 294 | 98819 | 16 QAM | 384 | 466 | |
| 295 | 99155 | 16 QAM | 384 | 466 | |
| 296 | 99491 | 16 QAM | 384 | 467 | |
| 297 | 99827 | 16 QAM | 384 | 467 | |
| 298 | 100163 | 16 QAM | 384 | 467 | |
| 299 | 100499 | 16 QAM | 384 | 467 | |
| 300 | 100835 | 16 QAM | 384 | 467 | |
| 301 | 101171 | 16 QAM | 384 | 468 | |
| 302 | 101507 | 16 QAM | 384 | 468 | |
| 303 | 101843 | 16 QAM | 384 | 468 | |
| 304 | 102179 | 16 QAM | 384 | 468 | |
| 305 | 102515 | 16 QAM | 384 | 468 | |
| 306 | 102851 | 16 QAM | 384 | 469 | |
| 307 | 103187 | 16 QAM | 384 | 469 | |
| 308 | 103523 | 16 QAM | 384 | 469 | |
| 309 | 103859 | 16 QAM | 384 | 469 | |
| 310 | 104195 | 16 QAM | 384 | 469 | |
| 311 | 104531 | 16 QAM | 384 | 470 | |
| 312 | 104867 | 16 QAM | 384 | 470 | |
| 313 | 105203 | 16 QAM | 384 | 470 | |
| 314 | 105539 | 16 QAM | 384 | 470 | |
| 315 | 105875 | 16 QAM | 384 | 470 | |
| 316 | 106211 | 16 QAM | 384 | 471 | |
| 317 | 106547 | 16 QAM | 384 | 471 | |
| 318 | 106883 | 16 QAM | 384 | 471 | |
| 319 | 107219 | 16 QAM | 384 | 471 | |
| 320 | 107555 | 16 QAM | 384 | 471 | |
| 321 | 107891 | 16 QAM | 384 | 472 | |
| 322 | 108227 | 16 QAM | 384 | 472 | |
| 323 | 108563 | 16 QAM | 384 | 472 | |
| 324 | 108899 | 16 QAM | 384 | 472 | |

| | | | | | |
|---|---|---|---|---|---|
| 325 | 109235 | 16 QAM | 384 | 472 | |
| 326 | 109571 | 16 QAM | 384 | 473 | |
| 327 | 109907 | 16 QAM | 384 | 473 | |
| 328 | 110243 | 16 QAM | 384 | 473 | |
| 329 | 110579 | 16 QAM | 384 | 473 | |
| 330 | 110915 | 16 QAM | 384 | 473 | |
| 331 | 111251 | 16 QAM | 384 | 474 | |
| 332 | 111587 | 16 QAM | 384 | 474 | |
| 333 | 111923 | 16 QAM | 384 | 474 | |
| 334 | 112259 | 16 QAM | 384 | 474 | |
| 335 | 112595 | 16 QAM | 384 | 474 | |
| 336 | 112931 | 16 QAM | 384 | 475 | |
| 337 | 113267 | 16 QAM | 384 | 475 | |
| 338 | 113603 | 16 QAM | 384 | 475 | |
| 339 | 113939 | 16 QAM | 384 | 475 | |
| 340 | 114275 | 16 QAM | 384 | 475 | |
| 341 | 114611 | 16 QAM | 384 | 475 | |
| 342 | 114947 | 16 QAM | 384 | 476 | |
| 343 | 115283 | 16 QAM | 384 | 476 | |
| 344 | 115619 | 16 QAM | 384 | 476 | |
| 345 | 115955 | 16 QAM | 384 | 476 | |
| 346 | 116291 | 16 QAM | 384 | 476 | |
| 347 | 116627 | 16 QAM | 384 | 477 | |
| 348 | 116963 | 16 QAM | 384 | 477 | |
| 349 | 117299 | 16 QAM | 384 | 477 | |
| 350 | 117635 | 16 QAM | 384 | 477 | |
| 351 | 117971 | 16 QAM | 384 | 477 | |
| 352 | 118307 | 16 QAM | 384 | 477 | |
| 353 | 118643 | 16 QAM | 384 | 478 | |
| 354 | 118979 | 16 QAM | 384 | 478 | |
| 355 | 119315 | 16 QAM | 384 | 478 | |
| 356 | 119651 | 16 QAM | 384 | 478 | |
| 357 | 119987 | 16 QAM | 384 | 478 | |
| 358 | 120323 | 16 QAM | 384 | 478 | |
| 359 | 120659 | 16 QAM | 384 | 479 | |
| 360 | 120995 | 16 QAM | 384 | 479 | |
| 361 | 121331 | 16 QAM | 384 | 479 | |
| 362 | 121667 | 16 QAM | 384 | 479 | |
| 363 | 122003 | 16 QAM | 384 | 479 | |
| 364 | 122339 | 16 QAM | 384 | 480 | |
| 365 | 122675 | 16 QAM | 384 | 480 | |
| 366 | 123011 | 16 QAM | 384 | 480 | |
| 367 | 123347 | 16 QAM | 384 | 480 | |
| 368 | 123683 | 16 QAM | 384 | 480 | |
| 369 | 124019 | 16 QAM | 384 | 480 | |
| 370 | 124355 | 16 QAM | 384 | 481 | |
| 371 | 124691 | 16 QAM | 384 | 481 | |
| 372 | 125027 | 16 QAM | 384 | 481 | |
| 373 | 125363 | 16 QAM | 384 | 481 | |
| 374 | 125699 | 16 QAM | 384 | 481 | |
| 375 | 126035 | 16 QAM | 384 | 481 | |
| 376 | 126371 | 16 QAM | 384 | 482 | |
| 377 | 126707 | 16 QAM | 384 | 482 | |

| | | | | | |
|---|---|---|---|---|---|
| 378 | 127043 | 16 QAM | 384 | 482 | |
| 379 | 127379 | 16 QAM | 384 | 482 | |
| 380 | 127715 | 16 QAM | 384 | 482 | |
| 381 | 128051 | 16 QAM | 384 | 482 | |
| 382 | 128387 | 16 QAM | 384 | 483 | |
| 383 | 128723 | 16 QAM | 384 | 483 | |
| 384 | 129059 | 16 QAM | 384 | 483 | |
| 385 | 129402 | 16 QAM | 384 | 483 | |
| 386 | 129738 | 16 QAM | 384 | 483 | |
| 387 | 130074 | 16 QAM | 384 | 483 | |
| 388 | 130410 | 16 QAM | 384 | 484 | |
| 389 | 130746 | 16 QAM | 384 | 484 | |
| 390 | 131082 | 16 QAM | 384 | 484 | |
| 391 | 131418 | 16 QAM | 384 | 484 | |
| 392 | 131754 | 16 QAM | 384 | 484 | |
| 393 | 132090 | 16 QAM | 384 | 484 | |
| 394 | 132426 | 16 QAM | 384 | 484 | |
| 395 | 132762 | 16 QAM | 384 | 485 | |
| 396 | 133098 | 16 QAM | 384 | 485 | |
| 397 | 133434 | 16 QAM | 384 | 485 | |
| 398 | 133770 | 16 QAM | 384 | 485 | |
| 399 | 134106 | 16 QAM | 384 | 485 | |
| 400 | 134442 | 16 QAM | 384 | 485 | |
| 401 | 134778 | 16 QAM | 384 | 486 | |
| 402 | 135114 | 16 QAM | 384 | 486 | |
| 403 | 135450 | 16 QAM | 384 | 486 | |
| 404 | 135786 | 16 QAM | 384 | 486 | |
| 405 | 136122 | 16 QAM | 384 | 486 | |
| 406 | 136458 | 16 QAM | 384 | 486 | |
| 407 | 136794 | 16 QAM | 384 | 486 | |
| 408 | 137130 | 16 QAM | 384 | 487 | |
| 409 | 137466 | 16 QAM | 384 | 487 | |
| 410 | 137802 | 16 QAM | 384 | 487 | |
| 411 | 138138 | 16 QAM | 384 | 487 | |
| 412 | 138474 | 16 QAM | 384 | 487 | |
| 413 | 138810 | 16 QAM | 384 | 487 | |
| 414 | 139146 | 16 QAM | 384 | 488 | |
| 415 | 139482 | 16 QAM | 384 | 488 | |
| 416 | 139818 | 16 QAM | 384 | 488 | |
| 417 | 140154 | 16 QAM | 384 | 488 | |
| 418 | 140490 | 16 QAM | 384 | 488 | |
| 419 | 140826 | 16 QAM | 384 | 488 | |
| 420 | 141162 | 16 QAM | 384 | 488 | |
| 421 | 141498 | 16 QAM | 384 | 489 | |
| 422 | 141834 | 16 QAM | 384 | 489 | |
| 423 | 142170 | 16 QAM | 384 | 489 | |
| 424 | 142506 | 16 QAM | 384 | 489 | |
| 425 | 142842 | 16 QAM | 384 | 489 | |
| 426 | 143178 | 16 QAM | 384 | 489 | |
| 427 | 143514 | 16 QAM | 384 | 489 | |
| 428 | 143850 | 16 QAM | 384 | 491 | |
| 429 | 144186 | 16 QAM | 384 | 491 | |
| 430 | 144522 | 16 QAM | 384 | 491 | |

| | | | | | |
|---|---|---|---|---|---|
| 431 | 144858 | 16 QAM | 384 | 491 | |
| 432 | 145194 | 16 QAM | 384 | 491 | |
| 433 | 145530 | 16 QAM | 384 | 491 | |
| 434 | 145866 | 16 QAM | 384 | 491 | |
| 435 | 146202 | 16 QAM | 384 | 491 | |
| 436 | 146538 | 16 QAM | 384 | 491 | |
| 437 | 146874 | 16 QAM | 384 | 491 | |
| 438 | 147210 | 16 QAM | 384 | 491 | |
| 439 | 147546 | 16 QAM | 384 | 491 | |
| 440 | 147882 | 16 QAM | 384 | 491 | |
| 441 | 148218 | 16 QAM | 384 | 492 | |
| 442 | 148554 | 16 QAM | 384 | 492 | |
| 443 | 148890 | 16 QAM | 384 | 492 | |
| 444 | 149226 | 16 QAM | 384 | 492 | |
| 445 | 149562 | 16 QAM | 384 | 492 | |
| 446 | 149898 | 16 QAM | 384 | 492 | |
| 447 | 150234 | 16 QAM | 384 | 492 | |
| 448 | 150570 | 16 QAM | 384 | 492 | |
| 449 | 150906 | 16 QAM | 384 | 493 | |
| 450 | 151242 | 16 QAM | 384 | 493 | |
| 451 | 151578 | 16 QAM | 384 | 493 | |
| 452 | 151914 | 16 QAM | 384 | 493 | |
| 453 | 152250 | 16 QAM | 384 | 493 | |
| 454 | 152586 | 16 QAM | 384 | 493 | |
| 455 | 152922 | 16 QAM | 384 | 493 | |
| 456 | 153258 | 16 QAM | 384 | 494 | |
| 457 | 153594 | 16 QAM | 384 | 494 | |
| 458 | 153930 | 16 QAM | 384 | 494 | |
| 459 | 154266 | 16 QAM | 384 | 494 | |
| 460 | 154602 | 16 QAM | 384 | 494 | |
| 461 | 154938 | 16 QAM | 384 | 494 | |
| 462 | 155274 | 16 QAM | 384 | 494 | |
| 463 | 155610 | 16 QAM | 384 | 495 | |
| 464 | 155946 | 16 QAM | 384 | 495 | |
| 465 | 156282 | 16 QAM | 384 | 495 | |
| 466 | 156618 | 16 QAM | 384 | 495 | |
| 467 | 156954 | 16 QAM | 384 | 495 | |
| 468 | 157290 | 16 QAM | 384 | 495 | |
| 469 | 157626 | 16 QAM | 384 | 495 | |
| 470 | 157962 | 16 QAM | 384 | 495 | |
| 471 | 158298 | 16 QAM | 384 | 496 | |
| 472 | 158634 | 16 QAM | 384 | 496 | |
| 473 | 158970 | 16 QAM | 384 | 496 | |
| 474 | 159306 | 16 QAM | 384 | 496 | |
| 475 | 159642 | 16 QAM | 384 | 496 | |
| 476 | 159978 | 16 QAM | 384 | 496 | |
| 477 | 160314 | 16 QAM | 384 | 496 | |
| 478 | 160650 | 16 QAM | 384 | 497 | |
| 479 | 160986 | 16 QAM | 384 | 497 | |
| 480 | 161322 | 16 QAM | 384 | 497 | |
| 481 | 161658 | 16 QAM | 384 | 497 | |
| 482 | 161994 | 16 QAM | 384 | 497 | |
| 483 | 162330 | 16 QAM | 384 | 497 | |

| | | | | | |
|---|---|---|---|---|---|
| 484 | 162666 | 16 QAM | 384 | 497 | |
| 485 | 163002 | 16 QAM | 384 | 497 | |
| 486 | 163338 | 16 QAM | 384 | 498 | |
| 487 | 163674 | 16 QAM | 384 | 498 | |
| 488 | 164010 | 16 QAM | 384 | 498 | |
| 489 | 164346 | 16 QAM | 384 | 498 | |
| 490 | 164682 | 16 QAM | 384 | 498 | |
| 491 | 165018 | 16 QAM | 384 | 498 | |
| 492 | 165354 | 16 QAM | 384 | 498 | |
| 493 | 165690 | 16 QAM | 384 | 498 | |
| 494 | 166026 | 16 QAM | 384 | 499 | |
| 495 | 166362 | 16 QAM | 384 | 499 | |
| 496 | 166698 | 16 QAM | 384 | 499 | |
| 497 | 167034 | 16 QAM | 384 | 499 | |
| 498 | 167370 | 16 QAM | 384 | 499 | |
| 499 | 167706 | 16 QAM | 384 | 499 | |
| 500 | 168042 | 16 QAM | 384 | 499 | |
| 501 | 168378 | 16 QAM | 384 | 499 | |
| 502 | 168714 | 16 QAM | 384 | 501 | |
| 503 | 169050 | 16 QAM | 384 | 501 | |
| 504 | 169386 | 16 QAM | 384 | 501 | |
| 505 | 169722 | 16 QAM | 384 | 501 | |
| 506 | 170058 | 16 QAM | 384 | 501 | |
| 507 | 170394 | 16 QAM | 384 | 501 | |
| 508 | 170730 | 16 QAM | 384 | 501 | |
| 509 | 171066 | 16 QAM | 384 | 501 | |
| 510 | 171402 | 16 QAM | 384 | 501 | |
| 511 | 171738 | 16 QAM | 384 | 501 | |
| 512 | 172074 | 16 QAM | 384 | 501 | |
| 513 | 172417 | 16 QAM | 384 | 501 | |
| 514 | 172753 | 16 QAM | 384 | 501 | |
| 515 | 173089 | 16 QAM | 384 | 501 | |
| 516 | 173425 | 16 QAM | 384 | 501 | |
| 517 | 173761 | 16 QAM | 384 | 501 | |
| 518 | 174097 | 16 QAM | 384 | 502 | |
| 519 | 174433 | 16 QAM | 384 | 502 | |
| 520 | 174769 | 16 QAM | 384 | 502 | |
| 521 | 175105 | 16 QAM | 384 | 502 | |
| 522 | 175441 | 16 QAM | 384 | 502 | |
| 523 | 175777 | 16 QAM | 384 | 502 | |
| 524 | 176113 | 16 QAM | 384 | 502 | |
| 525 | 176449 | 16 QAM | 384 | 502 | |
| 526 | 176785 | 16 QAM | 384 | 503 | |
| 527 | 177121 | 16 QAM | 384 | 503 | |
| 528 | 177457 | 16 QAM | 384 | 503 | |
| 529 | 177793 | 16 QAM | 384 | 503 | |
| 530 | 178129 | 16 QAM | 384 | 503 | |
| 531 | 178465 | 16 QAM | 384 | 503 | |
| 532 | 178801 | 16 QAM | 384 | 503 | |
| 533 | 179137 | 16 QAM | 384 | 503 | |
| 534 | 179473 | 16 QAM | 384 | 503 | |
| 535 | 179809 | 16 QAM | 384 | 504 | |
| 536 | 180145 | 16 QAM | 384 | 504 | |

| | | | | | |
|---|---|---|---|---|---|
| 537 | 180481 | 16 QAM | 384 | 504 | |
| 538 | 180817 | 16 QAM | 384 | 504 | |
| 539 | 181153 | 16 QAM | 384 | 504 | |
| 540 | 181489 | 16 QAM | 384 | 504 | |
| 541 | 181825 | 16 QAM | 384 | 504 | |
| 542 | 182161 | 16 QAM | 384 | 504 | |
| 543 | 182497 | 16 QAM | 384 | 504 | |
| 544 | 182833 | 16 QAM | 384 | 505 | |
| 545 | 183169 | 16 QAM | 384 | 505 | |
| 546 | 183505 | 16 QAM | 384 | 505 | |
| 547 | 183841 | 16 QAM | 384 | 505 | |
| 548 | 184177 | 16 QAM | 384 | 505 | |
| 549 | 184513 | 16 QAM | 384 | 505 | |
| 550 | 184849 | 16 QAM | 384 | 505 | |
| 551 | 185185 | 16 QAM | 384 | 505 | |

### 18.3.1.4.4 TFRC test points for MAC-d PDU size=656

**Table 18.3.1.4.4.1: TFRC test points for UE category 1 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 32 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 32 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 32 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 32 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 32 | 290 | |
| 9 | 5925 | 16 QAM | 32 | 290 | |
| 10 | 6581 | QPSK | 32 | 297 | |
| 10 | 6581 | 16 QAM | 32 | 297 | |
| 11 | 7237 | QPSK | 32 | 303 | |
| 11 | 7237 | 16 QAM | 32 | 303 | |
| 12 | 7893 | 16 QAM | 32 | 308 | |
| 13 | 8549 | 16 QAM | 32 | 313 | |
| 14 | 9205 | 16 QAM | 32 | 318 | |
| 15 | 9861 | 16 QAM | 32 | 322 | |
| 16 | 10517 | 16 QAM | 32 | 326 | |
| 17 | 11173 | 16 QAM | 32 | 330 | |
| 18 | 11829 | 16 QAM | 32 | 334 | |

**Table 18.3.1.4.4.2: TFRC test points for UE category 2 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 65 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 72 | 297 | |
| 10 | 6581 | 16 QAM | 36 | 297 | |
| 11 | 7237 | QPSK | 72 | 303 | |
| 11 | 7237 | 16 QAM | 36 | 303 | |
| 12 | 7893 | QPSK | 72 | 308 | |
| 12 | 7893 | 16 QAM | 36 | 308 | |
| 13 | 8549 | QPSK | 72 | 313 | |
| 13 | 8549 | 16 QAM | 36 | 313 | |
| 14 | 9205 | QPSK | 72 | 318 | |
| 14 | 9205 | 16 QAM | 36 | 318 | |
| 15 | 9861 | QPSK | 72 | 322 | |
| 15 | 9861 | 16 QAM | 36 | 322 | |
| 16 | 10517 | QPSK | 72 | 326 | |
| 16 | 10517 | 16 QAM | 36 | 326 | |
| 17 | 11173 | QPSK | 72 | 330 | |
| 17 | 11173 | 16 QAM | 36 | 330 | |
| 18 | 11829 | QPSK | 72 | 334 | |
| 18 | 11829 | 16 QAM | 36 | 334 | |

**Table 18.3.1.4.4.3: TFRC test points for UE category 3 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 56 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 64 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 64 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 64 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 64 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 64 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 64 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 64 | 318 | |
| 14 | 9205 | 16 QAM | 56 | 318 | |
| 15 | 9861 | QPSK | 64 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 64 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 64 | 330 | |
| 17 | 11173 | 16 QAM | 64 | 330 | |
| 18 | 11829 | QPSK | 64 | 334 | |
| 18 | 11829 | 16 QAM | 64 | 334 | |
| 19 | 12485 | QPSK | 64 | 337 | |
| 19 | 12485 | 16 QAM | 64 | 337 | |
| 20 | 13141 | QPSK | 64 | 340 | |
| 20 | 13141 | 16 QAM | 64 | 340 | |
| 21 | 13797 | QPSK | 64 | 343 | |
| 21 | 13797 | 16 QAM | 64 | 343 | |
| 22 | 14453 | QPSK | 64 | 346 | |
| 22 | 14453 | 16 QAM | 64 | 346 | |
| 23 | 15109 | QPSK | 64 | 349 | |
| 23 | 15109 | 16 QAM | 64 | 349 | |
| 24 | 15765 | 16 QAM | 64 | 352 | |
| 25 | 16421 | 16 QAM | 64 | 354 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | 16 QAM | 64 | 357 | |
| 27 | 17733 | 16 QAM | 64 | 359 | |
| 28 | 18389 | 16 QAM | 64 | 361 | |
| 29 | 19045 | 16 QAM | 64 | 363 | |
| 30 | 19701 | 16 QAM | 64 | 365 | |
| 31 | 20357 | 16 QAM | 64 | 368 | |
| 32 | 21013 | 16 QAM | 64 | 370 | |
| 33 | 21669 | 16 QAM | 64 | 371 | |
| 34 | 22325 | 16 QAM | 64 | 373 | |
| 35 | 22981 | 16 QAM | 64 | 375 | |
| 36 | 23637 | 16 QAM | 64 | 377 | |

**Table 18.3.1.4.4.4: TFRC test points for UE category 4 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 65 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 81 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 88 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 96 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 105 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 114 | 318 | |
| 14 | 9205 | 16 QAM | 57 | 318 | |
| 15 | 9861 | QPSK | 121 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 128 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 138 | 330 | |
| 17 | 11173 | 16 QAM | 69 | 330 | |
| 18 | 11829 | QPSK | 144 | 334 | |
| 18 | 11829 | 16 QAM | 72 | 334 | |
| 19 | 12485 | QPSK | 144 | 337 | |
| 19 | 12485 | 16 QAM | 72 | 337 | |
| 20 | 13141 | QPSK | 144 | 340 | |
| 20 | 13141 | 16 QAM | 72 | 340 | |
| 21 | 13797 | QPSK | 144 | 343 | |
| 21 | 13797 | 16 QAM | 72 | 343 | |
| 22 | 14453 | QPSK | 144 | 346 | |
| 22 | 14453 | 16 QAM | 72 | 346 | |
| 23 | 15109 | QPSK | 144 | 349 | |
| 23 | 15109 | 16 QAM | 72 | 349 | |
| 24 | 15765 | QPSK | 144 | 352 | |
| 24 | 15765 | 16 QAM | 72 | 352 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 16421 | QPSK | 144 | 354 | |
| 25 | 16421 | 16 QAM | 72 | 354 | |
| 26 | 17077 | QPSK | 144 | 357 | |
| 26 | 17077 | 16 QAM | 72 | 357 | |
| 27 | 17733 | QPSK | 144 | 359 | |
| 27 | 17733 | 16 QAM | 72 | 359 | |
| 28 | 18389 | QPSK | 144 | 361 | |
| 28 | 18389 | 16 QAM | 72 | 361 | |
| 29 | 19045 | QPSK | 144 | 363 | |
| 29 | 19045 | 16 QAM | 72 | 363 | |
| 30 | 19701 | QPSK | 144 | 365 | |
| 30 | 19701 | 16 QAM | 72 | 365 | |
| 31 | 20357 | QPSK | 144 | 368 | |
| 31 | 20357 | 16 QAM | 72 | 368 | |
| 32 | 21013 | QPSK | 144 | 370 | |
| 32 | 21013 | 16 QAM | 72 | 370 | |
| 33 | 21669 | QPSK | 144 | 371 | |
| 33 | 21669 | 16 QAM | 72 | 371 | |
| 34 | 22325 | QPSK | 144 | 373 | |
| 34 | 22325 | 16 QAM | 72 | 373 | |
| 35 | 22981 | QPSK | 144 | 375 | |
| 35 | 22981 | 16 QAM | 72 | 375 | |
| 36 | 23637 | QPSK | 144 | 377 | |
| 36 | 23637 | 16 QAM | 72 | 377 | |

**Table 18.3.1.4.4.5: TFRC test points for UE category 5 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 64 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 81 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 87 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 96 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 96 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 96 | 318 | |
| 14 | 9205 | 16 QAM | 57 | 318 | |
| 15 | 9861 | QPSK | 96 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 96 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 96 | 330 | |
| 17 | 11173 | 16 QAM | 69 | 330 | |
| 18 | 11829 | QPSK | 96 | 334 | |
| 18 | 11829 | 16 QAM | 72 | 334 | |
| 19 | 12485 | QPSK | 96 | 337 | |
| 19 | 12485 | 16 QAM | 75 | 337 | |
| 20 | 13141 | QPSK | 96 | 340 | |
| 20 | 13141 | 16 QAM | 81 | 340 | |
| 21 | 13797 | QPSK | 96 | 343 | |
| 21 | 13797 | 16 QAM | 84 | 343 | |
| 22 | 14453 | QPSK | 96 | 346 | |
| 22 | 14453 | 16 QAM | 87 | 346 | |
| 23 | 15109 | QPSK | 96 | 349 | |
| 23 | 15109 | 16 QAM | 93 | 349 | |
| 24 | 15765 | QPSK | 96 | 352 | |
| 24 | 15765 | 16 QAM | 96 | 352 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 16421 | QPSK | 96 | 354 | |
| 25 | 16421 | 16 QAM | 96 | 354 | |
| 26 | 17077 | QPSK | 96 | 357 | |
| 26 | 17077 | 16 QAM | 96 | 357 | |
| 27 | 17733 | QPSK | 96 | 359 | |
| 27 | 17733 | 16 QAM | 96 | 359 | |
| 28 | 18389 | QPSK | 96 | 362 | |
| 28 | 18389 | 16 QAM | 96 | 361 | |
| 29 | 19045 | QPSK | 96 | 363 | |
| 29 | 19045 | 16 QAM | 96 | 363 | |
| 30 | 19701 | QPSK | 96 | 365 | |
| 30 | 19701 | 16 QAM | 96 | 365 | |
| 31 | 20357 | QPSK | 96 | 368 | |
| 31 | 20357 | 16 QAM | 96 | 368 | |
| 32 | 21013 | QPSK | 96 | 371 | |
| 32 | 21013 | 16 QAM | 96 | 370 | |
| 33 | 21669 | QPSK | 96 | 371 | |
| 33 | 21669 | 16 QAM | 96 | 371 | |
| 34 | 22325 | QPSK | 96 | 373 | |
| 34 | 22325 | 16 QAM | 96 | 373 | |
| 35 | 22981 | QPSK | 96 | 375 | |
| 35 | 22981 | 16 QAM | 96 | 375 | |
| 36 | 23637 | 16 QAM | 96 | 377 | |
| 37 | 24293 | 16 QAM | 96 | 379 | |
| 38 | 24949 | 16 QAM | 96 | 380 | |
| 39 | 25605 | 16 QAM | 96 | 382 | |
| 40 | 26261 | 16 QAM | 96 | 383 | |
| 41 | 26917 | 16 QAM | 96 | 385 | |
| 42 | 27573 | 16 QAM | 96 | 386 | |
| 43 | 28229 | 16 QAM | 96 | 388 | |
| 44 | 28885 | 16 QAM | 96 | 389 | |
| 45 | 29541 | 16 QAM | 96 | 391 | |
| 46 | 30197 | 16 QAM | 96 | 392 | |
| 47 | 30853 | 16 QAM | 96 | 394 | |
| 48 | 31509 | 16 QAM | 96 | 395 | |
| 49 | 32165 | 16 QAM | 96 | 396 | |
| 50 | 32821 | 16 QAM | 96 | 397 | |
| 51 | 33477 | 16 QAM | 96 | 399 | |
| 52 | 34133 | 16 QAM | 96 | 400 | |
| 53 | 34789 | 16 QAM | 96 | 401 | |
| 54 | 35445 | 16 QAM | 96 | 402 | |

**Table 18.3.1.4.4.6: TFRC test points for UE category 6 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 65 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 81 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 88 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 96 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 105 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 114 | 318 | |
| 14 | 9205 | 16 QAM | 57 | 318 | |
| 15 | 9861 | QPSK | 121 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 128 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 138 | 330 | |
| 17 | 11173 | 16 QAM | 69 | 330 | |
| 18 | 11829 | QPSK | 147 | 334 | |
| 18 | 11829 | 16 QAM | 72 | 334 | |
| 19 | 12485 | QPSK | 154 | 337 | |
| 19 | 12485 | 16 QAM | 77 | 337 | |
| 20 | 13141 | QPSK | 162 | 340 | |
| 20 | 13141 | 16 QAM | 81 | 340 | |
| 21 | 13797 | QPSK | 170 | 343 | |
| 21 | 13797 | 16 QAM | 85 | 343 | |
| 22 | 14453 | QPSK | 176 | 346 | |
| 22 | 14453 | 16 QAM | 88 | 346 | |
| 23 | 15109 | QPSK | 187 | 349 | |
| 23 | 15109 | 16 QAM | 93 | 349 | |
| 24 | 15765 | QPSK | 196 | 352 | |
| 24 | 15765 | 16 QAM | 98 | 352 | |

| | | | | | |
|---|---|---|---|---|---|
| 25 | 16421 | QPSK | 203 | 354 | |
| 25 | 16421 | 16 QAM | 100 | 354 | |
| 26 | 17077 | QPSK | 210 | 357 | |
| 26 | 17077 | 16 QAM | 105 | 357 | |
| 27 | 17733 | QPSK | 217 | 359 | |
| 27 | 17733 | 16 QAM | 108 | 359 | |
| 28 | 18389 | QPSK | 217 | 361 | |
| 28 | 18389 | 16 QAM | 108 | 361 | |
| 29 | 19045 | QPSK | 217 | 363 | |
| 29 | 19045 | 16 QAM | 108 | 363 | |
| 30 | 19701 | QPSK | 217 | 365 | |
| 30 | 19701 | 16 QAM | 108 | 365 | |
| 31 | 20357 | QPSK | 217 | 368 | |
| 31 | 20357 | 16 QAM | 108 | 368 | |
| 32 | 21013 | QPSK | 217 | 370 | |
| 32 | 21013 | 16 QAM | 108 | 370 | |
| 33 | 21669 | QPSK | 217 | 371 | |
| 33 | 21669 | 16 QAM | 108 | 371 | |
| 34 | 22325 | QPSK | 217 | 373 | |
| 34 | 22325 | 16 QAM | 108 | 373 | |
| 35 | 22981 | QPSK | 217 | 375 | |
| 35 | 22981 | 16 QAM | 108 | 375 | |
| 36 | 23637 | QPSK | 217 | 377 | |
| 36 | 23637 | 16 QAM | 108 | 377 | |
| 37 | 24293 | QPSK | 217 | 379 | |
| 37 | 24293 | 16 QAM | 108 | 379 | |
| 38 | 24949 | QPSK | 217 | 380 | |
| 38 | 24949 | 16 QAM | 108 | 380 | |
| 39 | 25605 | QPSK | 217 | 382 | |
| 39 | 25605 | 16 QAM | 108 | 382 | |
| 40 | 26261 | QPSK | 217 | 383 | |
| 40 | 26261 | 16 QAM | 108 | 383 | |
| 41 | 26917 | QPSK | 217 | 385 | |
| 41 | 26917 | 16 QAM | 108 | 385 | |
| 42 | 27573 | QPSK | 217 | 386 | |
| 42 | 27573 | 16 QAM | 108 | 386 | |
| 43 | 28229 | QPSK | 217 | 388 | |
| 43 | 28229 | 16 QAM | 108 | 388 | |
| 44 | 28885 | QPSK | 217 | 389 | |
| 44 | 28885 | 16 QAM | 108 | 389 | |
| 45 | 29541 | QPSK | 217 | 391 | |
| 45 | 29541 | 16 QAM | 108 | 391 | |
| 46 | 30197 | QPSK | 217 | 392 | |
| 46 | 30197 | 16 QAM | 108 | 392 | |
| 47 | 30853 | QPSK | 217 | 394 | |
| 47 | 30853 | 16 QAM | 108 | 394 | |
| 48 | 31509 | QPSK | 217 | 395 | |
| 48 | 31509 | 16 QAM | 108 | 395 | |
| 49 | 32165 | QPSK | 217 | 396 | |
| 49 | 32165 | 16 QAM | 108 | 396 | |
| 50 | 32821 | QPSK | 217 | 397 | |
| 50 | 32821 | 16 QAM | 108 | 397 | |
| 51 | 33477 | QPSK | 217 | 399 | |

| | | | | | |
|---|---|---|---|---|---|
| 51 | 33477 | 16 QAM | 108 | 399 | |
| 52 | 34133 | QPSK | 217 | 400 | |
| 52 | 34133 | 16 QAM | 108 | 400 | |
| 53 | 34789 | QPSK | 217 | 401 | |
| 53 | 34789 | 16 QAM | 108 | 401 | |
| 54 | 35445 | QPSK | 217 | 402 | |
| 54 | 35445 | 16 QAM | 108 | 402 | |

**Table 18.3.1.4.4.7: TFRC test points for UE category 7 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 64 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 81 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 88 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 96 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 104 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 112 | 318 | |
| 14 | 9205 | 16 QAM | 57 | 318 | |
| 15 | 9861 | QPSK | 120 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 128 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 128 | 330 | |
| 17 | 11173 | 16 QAM | 69 | 330 | |
| 18 | 11829 | QPSK | 128 | 334 | |
| 18 | 11829 | 16 QAM | 72 | 334 | |
| 19 | 12485 | QPSK | 128 | 337 | |
| 19 | 12485 | 16 QAM | 76 | 337 | |
| 20 | 13141 | QPSK | 128 | 340 | |
| 20 | 13141 | 16 QAM | 81 | 340 | |
| 21 | 13797 | QPSK | 128 | 343 | |
| 21 | 13797 | 16 QAM | 84 | 343 | |
| 22 | 14453 | QPSK | 128 | 346 | |
| 22 | 14453 | 16 QAM | 88 | 346 | |
| 23 | 15109 | QPSK | 128 | 349 | |
| 23 | 15109 | 16 QAM | 93 | 349 | |
| 24 | 15765 | QPSK | 128 | 352 | |
| 24 | 15765 | 16 QAM | 96 | 352 | |
| 25 | 16421 | QPSK | 128 | 354 | |
| 25 | 16421 | 16 QAM | 100 | 354 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | QPSK | 128 | 357 | |
| 26 | 17077 | 16 QAM | 104 | 357 | |
| 27 | 17733 | QPSK | 128 | 359 | |
| 27 | 17733 | 16 QAM | 108 | 359 | |
| 28 | 18389 | QPSK | 128 | 361 | |
| 28 | 18389 | 16 QAM | 112 | 361 | |
| 29 | 19045 | QPSK | 128 | 363 | |
| 29 | 19045 | 16 QAM | 116 | 363 | |
| 30 | 19701 | QPSK | 128 | 365 | |
| 30 | 19701 | 16 QAM | 120 | 365 | |
| 31 | 20357 | QPSK | 128 | 368 | |
| 31 | 20357 | 16 QAM | 124 | 368 | |
| 32 | 21013 | QPSK | 128 | 370 | |
| 32 | 21013 | 16 QAM | 128 | 370 | |
| 33 | 21669 | QPSK | 128 | 371 | |
| 33 | 21669 | 16 QAM | 128 | 371 | |
| 34 | 22325 | QPSK | 128 | 373 | |
| 34 | 22325 | 16 QAM | 128 | 373 | |
| 35 | 22981 | QPSK | 128 | 375 | |
| 35 | 22981 | 16 QAM | 128 | 375 | |
| 36 | 23637 | QPSK | 128 | 377 | |
| 36 | 23637 | 16 QAM | 128 | 377 | |
| 37 | 24293 | QPSK | 128 | 380 | |
| 37 | 24293 | 16 QAM | 128 | 379 | |
| 38 | 24949 | QPSK | 128 | 380 | |
| 38 | 24949 | 16 QAM | 128 | 380 | |
| 39 | 25605 | QPSK | 128 | 382 | |
| 39 | 25605 | 16 QAM | 128 | 382 | |
| 40 | 26261 | QPSK | 128 | 383 | |
| 40 | 26261 | 16 QAM | 128 | 383 | |
| 41 | 26917 | QPSK | 128 | 385 | |
| 41 | 26917 | 16 QAM | 128 | 385 | |
| 42 | 27573 | QPSK | 128 | 386 | |
| 42 | 27573 | 16 QAM | 128 | 386 | |
| 43 | 28229 | QPSK | 128 | 389 | |
| 43 | 28229 | 16 QAM | 128 | 388 | |
| 44 | 28885 | QPSK | 128 | 389 | |
| 44 | 28885 | 16 QAM | 128 | 389 | |
| 45 | 29541 | QPSK | 128 | 391 | |
| 45 | 29541 | 16 QAM | 128 | 391 | |
| 46 | 30197 | QPSK | 128 | 392 | |
| 46 | 30197 | 16 QAM | 128 | 392 | |
| 47 | 30853 | 16 QAM | 128 | 394 | |
| 48 | 31509 | 16 QAM | 128 | 395 | |
| 49 | 32165 | 16 QAM | 128 | 396 | |
| 50 | 32821 | 16 QAM | 128 | 397 | |
| 51 | 33477 | 16 QAM | 128 | 399 | |
| 52 | 34133 | 16 QAM | 128 | 400 | |
| 53 | 34789 | 16 QAM | 128 | 401 | |
| 54 | 35445 | 16 QAM | 128 | 402 | |
| 55 | 36101 | 16 QAM | 128 | 403 | |
| 56 | 36757 | 16 QAM | 128 | 404 | |
| 57 | 37413 | 16 QAM | 128 | 406 | |
| 58 | 38069 | 16 QAM | 128 | 407 | |
| 59 | 38725 | 16 QAM | 128 | 408 | |

| | | | | | |
|---|---|---|---|---|---|
| 60 | 39381 | 16 QAM | 128 | 409 | |
| 61 | 40037 | 16 QAM | 128 | 410 | |
| 62 | 40693 | 16 QAM | 128 | 411 | |
| 63 | 41349 | 16 QAM | 128 | 412 | |
| 64 | 42005 | 16 QAM | 128 | 413 | |
| 65 | 42661 | 16 QAM | 128 | 414 | |
| 66 | 43317 | 16 QAM | 128 | 415 | |
| 67 | 43973 | 16 QAM | 128 | 416 | |
| 68 | 44629 | 16 QAM | 128 | 417 | |
| 69 | 45285 | 16 QAM | 128 | 417 | |
| 70 | 45941 | 16 QAM | 128 | 418 | |
| 71 | 46597 | 16 QAM | 128 | 419 | |
| 72 | 47253 | 16 QAM | 128 | 420 | |
| 73 | 47909 | 16 QAM | 128 | 423 | |
| 74 | 48565 | 16 QAM | 128 | 423 | |
| 75 | 49221 | 16 QAM | 128 | 423 | |
| 76 | 49877 | 16 QAM | 128 | 423 | |
| 77 | 50533 | 16 QAM | 128 | 424 | |
| 78 | 51189 | 16 QAM | 128 | 425 | |
| 79 | 51845 | 16 QAM | 128 | 427 | |
| 80 | 52501 | 16 QAM | 128 | 427 | |

**Table 18.3.1.4.4.8: TFRC test points for UE category 8 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 65 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 81 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 88 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 96 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 105 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 114 | 318 | |
| 14 | 9205 | 16 QAM | 57 | 318 | |
| 15 | 9861 | QPSK | 121 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 128 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 138 | 330 | |
| 17 | 11173 | 16 QAM | 69 | 330 | |
| 18 | 11829 | QPSK | 147 | 334 | |
| 18 | 11829 | 16 QAM | 72 | 334 | |
| 19 | 12485 | QPSK | 154 | 337 | |
| 19 | 12485 | 16 QAM | 77 | 337 | |
| 20 | 13141 | QPSK | 162 | 340 | |
| 20 | 13141 | 16 QAM | 81 | 340 | |
| 21 | 13797 | QPSK | 170 | 343 | |
| 21 | 13797 | 16 QAM | 85 | 343 | |
| 22 | 14453 | QPSK | 176 | 346 | |
| 22 | 14453 | 16 QAM | 88 | 346 | |
| 23 | 15109 | QPSK | 187 | 349 | |
| 23 | 15109 | 16 QAM | 93 | 349 | |
| 24 | 15765 | QPSK | 196 | 352 | |
| 24 | 15765 | 16 QAM | 98 | 352 | |
| 25 | 16421 | QPSK | 203 | 354 | |
| 25 | 16421 | 16 QAM | 100 | 354 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | QPSK | 210 | 357 | |
| 26 | 17077 | 16 QAM | 105 | 357 | |
| 27 | 17733 | QPSK | 220 | 359 | |
| 27 | 17733 | 16 QAM | 110 | 359 | |
| 28 | 18389 | QPSK | 225 | 361 | |
| 28 | 18389 | 16 QAM | 112 | 361 | |
| 29 | 19045 | QPSK | 234 | 363 | |
| 29 | 19045 | 16 QAM | 117 | 363 | |
| 30 | 19701 | QPSK | 242 | 365 | |
| 30 | 19701 | 16 QAM | 121 | 365 | |
| 31 | 20357 | QPSK | 253 | 368 | |
| 31 | 20357 | 16 QAM | 126 | 368 | |
| 32 | 21013 | QPSK | 261 | 370 | |
| 32 | 21013 | 16 QAM | 130 | 370 | |
| 33 | 21669 | QPSK | 264 | 371 | |
| 33 | 21669 | 16 QAM | 133 | 371 | |
| 34 | 22325 | QPSK | 275 | 373 | |
| 34 | 22325 | 16 QAM | 136 | 373 | |
| 35 | 22981 | QPSK | 280 | 375 | |
| 35 | 22981 | 16 QAM | 140 | 375 | |
| 36 | 23637 | QPSK | 289 | 377 | |
| 36 | 23637 | 16 QAM | 144 | 377 | |
| 37 | 24293 | QPSK | 289 | 379 | |
| 37 | 24293 | 16 QAM | 144 | 379 | |
| 38 | 24949 | QPSK | 289 | 380 | |
| 38 | 24949 | 16 QAM | 144 | 380 | |
| 39 | 25605 | QPSK | 289 | 382 | |
| 39 | 25605 | 16 QAM | 144 | 382 | |
| 40 | 26261 | QPSK | 289 | 383 | |
| 40 | 26261 | 16 QAM | 144 | 383 | |
| 41 | 26917 | QPSK | 289 | 385 | |
| 41 | 26917 | 16 QAM | 144 | 385 | |
| 42 | 27573 | QPSK | 289 | 386 | |
| 42 | 27573 | 16 QAM | 144 | 386 | |
| 43 | 28229 | QPSK | 289 | 388 | |
| 43 | 28229 | 16 QAM | 144 | 388 | |
| 44 | 28885 | QPSK | 289 | 389 | |
| 44 | 28885 | 16 QAM | 144 | 389 | |
| 45 | 29541 | QPSK | 289 | 391 | |
| 45 | 29541 | 16 QAM | 144 | 391 | |
| 46 | 30197 | QPSK | 289 | 392 | |
| 46 | 30197 | 16 QAM | 144 | 392 | |
| 47 | 30853 | QPSK | 289 | 394 | |
| 47 | 30853 | 16 QAM | 144 | 394 | |
| 48 | 31509 | QPSK | 289 | 395 | |
| 48 | 31509 | 16 QAM | 144 | 395 | |
| 49 | 32165 | QPSK | 289 | 396 | |
| 49 | 32165 | 16 QAM | 144 | 396 | |
| 50 | 32821 | QPSK | 289 | 397 | |
| 50 | 32821 | 16 QAM | 144 | 397 | |
| 51 | 33477 | QPSK | 289 | 399 | |
| 51 | 33477 | 16 QAM | 144 | 399 | |
| 52 | 34133 | QPSK | 289 | 400 | |
| 52 | 34133 | 16 QAM | 144 | 400 | |
| 53 | 34789 | QPSK | 289 | 401 | |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 34789 | 16 QAM | 144 | 401 | |
| 54 | 35445 | QPSK | 289 | 402 | |
| 54 | 35445 | 16 QAM | 144 | 402 | |
| 55 | 36101 | QPSK | 289 | 403 | |
| 55 | 36101 | 16 QAM | 144 | 403 | |
| 56 | 36757 | QPSK | 289 | 404 | |
| 56 | 36757 | 16 QAM | 144 | 404 | |
| 57 | 37413 | QPSK | 289 | 406 | |
| 57 | 37413 | 16 QAM | 144 | 406 | |
| 58 | 38069 | QPSK | 289 | 407 | |
| 58 | 38069 | 16 QAM | 144 | 407 | |
| 59 | 38725 | QPSK | 289 | 408 | |
| 59 | 38725 | 16 QAM | 144 | 408 | |
| 60 | 39381 | QPSK | 289 | 409 | |
| 60 | 39381 | 16 QAM | 144 | 409 | |
| 61 | 40037 | QPSK | 289 | 410 | |
| 61 | 40037 | 16 QAM | 144 | 410 | |
| 62 | 40693 | QPSK | 289 | 411 | |
| 62 | 40693 | 16 QAM | 144 | 411 | |
| 63 | 41349 | QPSK | 289 | 412 | |
| 63 | 41349 | 16 QAM | 144 | 412 | |
| 64 | 42005 | QPSK | 289 | 413 | |
| 64 | 42005 | 16 QAM | 144 | 413 | |
| 65 | 42661 | QPSK | 289 | 414 | |
| 65 | 42661 | 16 QAM | 144 | 414 | |
| 66 | 43317 | QPSK | 289 | 415 | |
| 66 | 43317 | 16 QAM | 144 | 415 | |
| 67 | 43973 | QPSK | 289 | 416 | |
| 67 | 43973 | 16 QAM | 144 | 416 | |
| 68 | 44629 | QPSK | 289 | 417 | |
| 68 | 44629 | 16 QAM | 144 | 417 | |
| 69 | 45285 | QPSK | 289 | 417 | |
| 69 | 45285 | 16 QAM | 144 | 417 | |
| 70 | 45941 | QPSK | 289 | 418 | |
| 70 | 45941 | 16 QAM | 144 | 418 | |
| 71 | 46597 | QPSK | 289 | 419 | |
| 71 | 46597 | 16 QAM | 144 | 419 | |
| 72 | 47253 | QPSK | 289 | 420 | |
| 72 | 47253 | 16 QAM | 144 | 420 | |
| 73 | 47909 | QPSK | 289 | 421 | |
| 73 | 47909 | 16 QAM | 144 | 421 | |
| 74 | 48565 | QPSK | 289 | 422 | |
| 74 | 48565 | 16 QAM | 144 | 422 | |
| 75 | 49221 | QPSK | 289 | 423 | |
| 75 | 49221 | 16 QAM | 144 | 423 | |
| 76 | 49877 | QPSK | 289 | 423 | |
| 76 | 49877 | 16 QAM | 144 | 423 | |
| 77 | 50533 | QPSK | 289 | 424 | |
| 77 | 50533 | 16 QAM | 144 | 424 | |
| 78 | 51189 | QPSK | 289 | 425 | |
| 78 | 51189 | 16 QAM | 144 | 425 | |
| 79 | 51845 | QPSK | 289 | 426 | |
| 79 | 51845 | 16 QAM | 144 | 426 | |
| 80 | 52501 | QPSK | 289 | 427 | |
| 80 | 52501 | 16 QAM | 144 | 427 | |

**Table 18.3.1.4.4.9: TFRC test points for UE category 9 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 65 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 81 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 88 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 96 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 105 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 112 | 318 | |
| 14 | 9205 | 16 QAM | 57 | 318 | |
| 15 | 9861 | QPSK | 120 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 128 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 135 | 330 | |
| 17 | 11173 | 16 QAM | 69 | 330 | |
| 18 | 11829 | QPSK | 145 | 334 | |
| 18 | 11829 | 16 QAM | 72 | 334 | |
| 19 | 12485 | QPSK | 150 | 337 | |
| 19 | 12485 | 16 QAM | 76 | 337 | |
| 20 | 13141 | QPSK | 160 | 340 | |
| 20 | 13141 | 16 QAM | 81 | 340 | |
| 21 | 13797 | QPSK | 160 | 343 | |
| 21 | 13797 | 16 QAM | 85 | 343 | |
| 22 | 14453 | QPSK | 160 | 346 | |
| 22 | 14453 | 16 QAM | 88 | 346 | |
| 23 | 15109 | QPSK | 160 | 349 | |
| 23 | 15109 | 16 QAM | 93 | 349 | |
| 24 | 15765 | QPSK | 160 | 352 | |
| 24 | 15765 | 16 QAM | 96 | 352 | |
| 25 | 16421 | QPSK | 160 | 354 | |
| 25 | 16421 | 16 QAM | 100 | 354 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | QPSK | 160 | 357 | |
| 26 | 17077 | 16 QAM | 105 | 357 | |
| 27 | 17733 | QPSK | 160 | 359 | |
| 27 | 17733 | 16 QAM | 110 | 359 | |
| 28 | 18389 | QPSK | 160 | 361 | |
| 28 | 18389 | 16 QAM | 112 | 361 | |
| 29 | 19045 | QPSK | 160 | 363 | |
| 29 | 19045 | 16 QAM | 116 | 363 | |
| 30 | 19701 | QPSK | 160 | 365 | |
| 30 | 19701 | 16 QAM | 120 | 365 | |
| 31 | 20357 | QPSK | 160 | 368 | |
| 31 | 20357 | 16 QAM | 125 | 368 | |
| 32 | 21013 | QPSK | 160 | 370 | |
| 32 | 21013 | 16 QAM | 130 | 370 | |
| 33 | 21669 | QPSK | 160 | 371 | |
| 33 | 21669 | 16 QAM | 130 | 371 | |
| 34 | 22325 | QPSK | 160 | 373 | |
| 34 | 22325 | 16 QAM | 135 | 373 | |
| 35 | 22981 | QPSK | 160 | 375 | |
| 35 | 22981 | 16 QAM | 140 | 375 | |
| 36 | 23637 | QPSK | 160 | 377 | |
| 36 | 23637 | 16 QAM | 145 | 377 | |
| 37 | 24293 | QPSK | 160 | 379 | |
| 37 | 24293 | 16 QAM | 150 | 379 | |
| 38 | 24949 | QPSK | 160 | 380 | |
| 38 | 24949 | 16 QAM | 150 | 380 | |
| 39 | 25605 | QPSK | 160 | 382 | |
| 39 | 25605 | 16 QAM | 155 | 382 | |
| 40 | 26261 | QPSK | 160 | 383 | |
| 40 | 26261 | 16 QAM | 160 | 383 | |
| 41 | 26917 | QPSK | 160 | 385 | |
| 41 | 26917 | 16 QAM | 160 | 385 | |
| 42 | 27573 | QPSK | 160 | 386 | |
| 42 | 27573 | 16 QAM | 160 | 386 | |
| 43 | 28229 | QPSK | 160 | 388 | |
| 43 | 28229 | 16 QAM | 160 | 388 | |
| 44 | 28885 | QPSK | 160 | 389 | |
| 44 | 28885 | 16 QAM | 160 | 389 | |
| 45 | 29541 | QPSK | 160 | 391 | |
| 45 | 29541 | 16 QAM | 160 | 391 | |
| 46 | 30197 | QPSK | 160 | 393 | |
| 46 | 30197 | 16 QAM | 160 | 392 | |
| 47 | 30853 | QPSK | 160 | 394 | |
| 47 | 30853 | 16 QAM | 160 | 394 | |
| 48 | 31509 | QPSK | 160 | 395 | |
| 48 | 31509 | 16 QAM | 160 | 395 | |
| 49 | 32165 | QPSK | 160 | 396 | |
| 49 | 32165 | 16 QAM | 160 | 396 | |
| 50 | 32821 | QPSK | 160 | 397 | |
| 50 | 32821 | 16 QAM | 160 | 397 | |
| 51 | 33477 | QPSK | 160 | 399 | |
| 51 | 33477 | 16 QAM | 160 | 399 | |
| 52 | 34133 | QPSK | 160 | 400 | |
| 52 | 34133 | 16 QAM | 160 | 400 | |
| 53 | 34789 | QPSK | 160 | 401 | |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 34789 | 16 QAM | 160 | 401 | |
| 54 | 35445 | QPSK | 160 | 403 | |
| 54 | 35445 | 16 QAM | 160 | 402 | |
| 55 | 36101 | QPSK | 160 | 403 | |
| 55 | 36101 | 16 QAM | 160 | 403 | |
| 56 | 36757 | QPSK | 160 | 404 | |
| 56 | 36757 | 16 QAM | 160 | 404 | |
| 57 | 37413 | QPSK | 160 | 406 | |
| 57 | 37413 | 16 QAM | 160 | 406 | |
| 58 | 38069 | QPSK | 160 | 407 | |
| 58 | 38069 | 16 QAM | 160 | 407 | |
| 59 | 38725 | 16 QAM | 160 | 408 | |
| 60 | 39381 | 16 QAM | 160 | 409 | |
| 61 | 40037 | 16 QAM | 160 | 410 | |
| 62 | 40693 | 16 QAM | 160 | 411 | |
| 63 | 41349 | 16 QAM | 160 | 412 | |
| 64 | 42005 | 16 QAM | 160 | 413 | |
| 65 | 42661 | 16 QAM | 160 | 414 | |
| 66 | 43317 | 16 QAM | 160 | 415 | |
| 67 | 43973 | 16 QAM | 160 | 416 | |
| 68 | 44629 | 16 QAM | 160 | 417 | |
| 69 | 45285 | 16 QAM | 160 | 417 | |
| 70 | 45941 | 16 QAM | 160 | 418 | |
| 71 | 46597 | 16 QAM | 160 | 419 | |
| 72 | 47253 | 16 QAM | 160 | 420 | |
| 73 | 47909 | 16 QAM | 160 | 421 | |
| 74 | 48565 | 16 QAM | 160 | 422 | |
| 75 | 49221 | 16 QAM | 160 | 423 | |
| 76 | 49877 | 16 QAM | 160 | 423 | |
| 77 | 50533 | 16 QAM | 160 | 424 | |
| 78 | 51189 | 16 QAM | 160 | 425 | |
| 79 | 51845 | 16 QAM | 160 | 426 | |
| 80 | 52501 | 16 QAM | 160 | 427 | |
| 81 | 53157 | 16 QAM | 160 | 427 | |
| 82 | 53813 | 16 QAM | 160 | 428 | |
| 83 | 54469 | 16 QAM | 160 | 429 | |
| 84 | 55125 | 16 QAM | 160 | 430 | |
| 85 | 55781 | 16 QAM | 160 | 430 | |
| 86 | 56437 | 16 QAM | 160 | 431 | |
| 87 | 57093 | 16 QAM | 160 | 432 | |
| 88 | 57749 | 16 QAM | 160 | 433 | |
| 89 | 58405 | 16 QAM | 160 | 433 | |
| 90 | 59061 | 16 QAM | 160 | 434 | |
| 91 | 59717 | 16 QAM | 160 | 437 | |
| 92 | 60373 | 16 QAM | 160 | 437 | |
| 93 | 61029 | 16 QAM | 160 | 437 | |
| 94 | 61685 | 16 QAM | 160 | 437 | |
| 95 | 62341 | 16 QAM | 160 | 437 | |
| 96 | 62997 | 16 QAM | 160 | 438 | |
| 97 | 63653 | 16 QAM | 160 | 439 | |
| 98 | 64309 | 16 QAM | 160 | 439 | |
| 99 | 64965 | 16 QAM | 160 | 441 | |
| 100 | 65621 | 16 QAM | 160 | 441 | |
| 101 | 66277 | 16 QAM | 160 | 441 | |
| 102 | 66933 | 16 QAM | 160 | 442 | |

| | | | | | |
|---|---|---|---|---|---|
| 103 | 67589 | 16 QAM | 160 | 442 | |
| 104 | 68245 | 16 QAM | 160 | 443 | |
| 105 | 68901 | 16 QAM | 160 | 444 | |
| 106 | 69557 | 16 QAM | 160 | 444 | |
| 107 | 70213 | 16 QAM | 160 | 445 | |
| 108 | 70869 | 16 QAM | 160 | 445 | |
| 109 | 71525 | 16 QAM | 160 | 446 | |
| 110 | 72181 | 16 QAM | 160 | 447 | |
| 111 | 72837 | 16 QAM | 160 | 447 | |

**Table 18.3.1.4.4.10: TFRC test points for UE category 10 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 65 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 81 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 88 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 96 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 105 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 114 | 318 | |
| 14 | 9205 | 16 QAM | 57 | 318 | |
| 15 | 9861 | QPSK | 121 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 128 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 138 | 330 | |
| 17 | 11173 | 16 QAM | 69 | 330 | |
| 18 | 11829 | QPSK | 147 | 334 | |
| 18 | 11829 | 16 QAM | 72 | 334 | |
| 19 | 12485 | QPSK | 154 | 337 | |
| 19 | 12485 | 16 QAM | 77 | 337 | |
| 20 | 13141 | QPSK | 162 | 340 | |
| 20 | 13141 | 16 QAM | 81 | 340 | |
| 21 | 13797 | QPSK | 170 | 343 | |
| 21 | 13797 | 16 QAM | 85 | 343 | |
| 22 | 14453 | QPSK | 176 | 346 | |
| 22 | 14453 | 16 QAM | 88 | 346 | |
| 23 | 15109 | QPSK | 187 | 349 | |
| 23 | 15109 | 16 QAM | 93 | 349 | |
| 24 | 15765 | QPSK | 196 | 352 | |
| 24 | 15765 | 16 QAM | 98 | 352 | |
| 25 | 16421 | QPSK | 203 | 354 | |
| 25 | 16421 | 16 QAM | 100 | 354 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | QPSK | 210 | 357 | |
| 26 | 17077 | 16 QAM | 105 | 357 | |
| 27 | 17733 | QPSK | 220 | 359 | |
| 27 | 17733 | 16 QAM | 110 | 359 | |
| 28 | 18389 | QPSK | 225 | 361 | |
| 28 | 18389 | 16 QAM | 112 | 361 | |
| 29 | 19045 | QPSK | 234 | 363 | |
| 29 | 19045 | 16 QAM | 117 | 363 | |
| 30 | 19701 | QPSK | 242 | 365 | |
| 30 | 19701 | 16 QAM | 121 | 365 | |
| 31 | 20357 | QPSK | 253 | 368 | |
| 31 | 20357 | 16 QAM | 126 | 368 | |
| 32 | 21013 | QPSK | 261 | 370 | |
| 32 | 21013 | 16 QAM | 130 | 370 | |
| 33 | 21669 | QPSK | 264 | 371 | |
| 33 | 21669 | 16 QAM | 133 | 371 | |
| 34 | 22325 | QPSK | 275 | 373 | |
| 34 | 22325 | 16 QAM | 136 | 373 | |
| 35 | 22981 | QPSK | 280 | 375 | |
| 35 | 22981 | 16 QAM | 140 | 375 | |
| 36 | 23637 | QPSK | 290 | 377 | |
| 36 | 23637 | 16 QAM | 145 | 377 | |
| 37 | 24293 | QPSK | 300 | 379 | |
| 37 | 24293 | 16 QAM | 150 | 379 | |
| 38 | 24949 | QPSK | 308 | 380 | |
| 38 | 24949 | 16 QAM | 154 | 380 | |
| 39 | 25605 | QPSK | 312 | 382 | |
| 39 | 25605 | 16 QAM | 156 | 382 | |
| 40 | 26261 | QPSK | 320 | 383 | |
| 40 | 26261 | 16 QAM | 161 | 383 | |
| 41 | 26917 | QPSK | 330 | 385 | |
| 41 | 26917 | 16 QAM | 165 | 385 | |
| 42 | 27573 | QPSK | 336 | 386 | |
| 42 | 27573 | 16 QAM | 168 | 386 | |
| 43 | 28229 | QPSK | 348 | 388 | |
| 43 | 28229 | 16 QAM | 175 | 388 | |
| 44 | 28885 | QPSK | 352 | 389 | |
| 44 | 28885 | 16 QAM | 176 | 389 | |
| 45 | 29541 | QPSK | 360 | 391 | |
| 45 | 29541 | 16 QAM | 180 | 391 | |
| 46 | 30197 | QPSK | 361 | 392 | |
| 46 | 30197 | 16 QAM | 180 | 392 | |
| 47 | 30853 | QPSK | 361 | 394 | |
| 47 | 30853 | 16 QAM | 180 | 394 | |
| 48 | 31509 | QPSK | 361 | 395 | |
| 48 | 31509 | 16 QAM | 180 | 395 | |
| 49 | 32165 | QPSK | 361 | 396 | |
| 49 | 32165 | 16 QAM | 180 | 396 | |
| 50 | 32821 | QPSK | 361 | 397 | |
| 50 | 32821 | 16 QAM | 180 | 397 | |
| 51 | 33477 | QPSK | 361 | 399 | |
| 51 | 33477 | 16 QAM | 180 | 399 | |
| 52 | 34133 | QPSK | 361 | 400 | |
| 52 | 34133 | 16 QAM | 180 | 400 | |
| 53 | 34789 | QPSK | 361 | 401 | |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 34789 | 16 QAM | 180 | 401 | |
| 54 | 35445 | QPSK | 361 | 402 | |
| 54 | 35445 | 16 QAM | 180 | 402 | |
| 55 | 36101 | QPSK | 361 | 403 | |
| 55 | 36101 | 16 QAM | 180 | 403 | |
| 56 | 36757 | QPSK | 361 | 404 | |
| 56 | 36757 | 16 QAM | 180 | 404 | |
| 57 | 37413 | QPSK | 361 | 406 | |
| 57 | 37413 | 16 QAM | 180 | 406 | |
| 58 | 38069 | QPSK | 361 | 407 | |
| 58 | 38069 | 16 QAM | 180 | 407 | |
| 59 | 38725 | QPSK | 361 | 408 | |
| 59 | 38725 | 16 QAM | 180 | 408 | |
| 60 | 39381 | QPSK | 361 | 409 | |
| 60 | 39381 | 16 QAM | 180 | 409 | |
| 61 | 40037 | QPSK | 361 | 410 | |
| 61 | 40037 | 16 QAM | 180 | 410 | |
| 62 | 40693 | QPSK | 361 | 411 | |
| 62 | 40693 | 16 QAM | 180 | 411 | |
| 63 | 41349 | QPSK | 361 | 412 | |
| 63 | 41349 | 16 QAM | 180 | 412 | |
| 64 | 42005 | QPSK | 361 | 413 | |
| 64 | 42005 | 16 QAM | 180 | 413 | |
| 65 | 42661 | QPSK | 361 | 414 | |
| 65 | 42661 | 16 QAM | 180 | 414 | |
| 66 | 43317 | QPSK | 361 | 415 | |
| 66 | 43317 | 16 QAM | 180 | 415 | |
| 67 | 43973 | QPSK | 361 | 416 | |
| 67 | 43973 | 16 QAM | 180 | 416 | |
| 68 | 44629 | QPSK | 361 | 417 | |
| 68 | 44629 | 16 QAM | 180 | 417 | |
| 69 | 45285 | QPSK | 361 | 417 | |
| 69 | 45285 | 16 QAM | 180 | 417 | |
| 70 | 45941 | QPSK | 361 | 418 | |
| 70 | 45941 | 16 QAM | 180 | 418 | |
| 71 | 46597 | QPSK | 361 | 419 | |
| 71 | 46597 | 16 QAM | 180 | 419 | |
| 72 | 47253 | QPSK | 361 | 420 | |
| 72 | 47253 | 16 QAM | 180 | 420 | |
| 73 | 47909 | QPSK | 361 | 421 | |
| 73 | 47909 | 16 QAM | 180 | 421 | |
| 74 | 48565 | QPSK | 361 | 422 | |
| 74 | 48565 | 16 QAM | 180 | 422 | |
| 75 | 49221 | QPSK | 361 | 423 | |
| 75 | 49221 | 16 QAM | 180 | 423 | |
| 76 | 49877 | QPSK | 361 | 423 | |
| 76 | 49877 | 16 QAM | 180 | 423 | |
| 77 | 50533 | QPSK | 361 | 424 | |
| 77 | 50533 | 16 QAM | 180 | 424 | |
| 78 | 51189 | QPSK | 361 | 425 | |
| 78 | 51189 | 16 QAM | 180 | 425 | |
| 79 | 51845 | QPSK | 361 | 426 | |
| 79 | 51845 | 16 QAM | 180 | 426 | |
| 80 | 52501 | QPSK | 361 | 427 | |
| 80 | 52501 | 16 QAM | 180 | 427 | |

| | | | | | |
|---|---|---|---|---|---|
| 81 | 53157 | QPSK | 361 | 427 | |
| 81 | 53157 | 16 QAM | 180 | 427 | |
| 82 | 53813 | QPSK | 361 | 428 | |
| 82 | 53813 | 16 QAM | 180 | 428 | |
| 83 | 54469 | QPSK | 361 | 429 | |
| 83 | 54469 | 16 QAM | 180 | 429 | |
| 84 | 55125 | QPSK | 361 | 430 | |
| 84 | 55125 | 16 QAM | 180 | 430 | |
| 85 | 55781 | QPSK | 361 | 430 | |
| 85 | 55781 | 16 QAM | 180 | 430 | |
| 86 | 56437 | QPSK | 361 | 431 | |
| 86 | 56437 | 16 QAM | 180 | 431 | |
| 87 | 57093 | QPSK | 361 | 432 | |
| 87 | 57093 | 16 QAM | 180 | 432 | |
| 88 | 57749 | QPSK | 361 | 433 | |
| 88 | 57749 | 16 QAM | 180 | 433 | |
| 89 | 58405 | QPSK | 361 | 433 | |
| 89 | 58405 | 16 QAM | 180 | 433 | |
| 90 | 59061 | QPSK | 361 | 434 | |
| 90 | 59061 | 16 QAM | 180 | 434 | |
| 91 | 59717 | QPSK | 361 | 435 | |
| 91 | 59717 | 16 QAM | 180 | 435 | |
| 92 | 60373 | QPSK | 361 | 435 | |
| 92 | 60373 | 16 QAM | 180 | 435 | |
| 93 | 61029 | QPSK | 361 | 436 | |
| 93 | 61029 | 16 QAM | 180 | 436 | |
| 94 | 61685 | QPSK | 361 | 437 | |
| 94 | 61685 | 16 QAM | 180 | 437 | |
| 95 | 62341 | QPSK | 361 | 437 | |
| 95 | 62341 | 16 QAM | 180 | 437 | |
| 96 | 62997 | QPSK | 361 | 438 | |
| 96 | 62997 | 16 QAM | 180 | 438 | |
| 97 | 63653 | QPSK | 361 | 439 | |
| 97 | 63653 | 16 QAM | 180 | 439 | |
| 98 | 64309 | QPSK | 361 | 439 | |
| 98 | 64309 | 16 QAM | 180 | 439 | |
| 99 | 64965 | QPSK | 361 | 440 | |
| 99 | 64965 | 16 QAM | 180 | 440 | |
| 100 | 65621 | QPSK | 361 | 441 | |
| 100 | 65621 | 16 QAM | 180 | 441 | |
| 101 | 66277 | QPSK | 361 | 441 | |
| 101 | 66277 | 16 QAM | 180 | 441 | |
| 102 | 66933 | QPSK | 361 | 442 | |
| 102 | 66933 | 16 QAM | 180 | 442 | |
| 103 | 67589 | QPSK | 361 | 442 | |
| 103 | 67589 | 16 QAM | 180 | 442 | |
| 104 | 68245 | QPSK | 361 | 443 | |
| 104 | 68245 | 16 QAM | 180 | 443 | |
| 105 | 68901 | QPSK | 361 | 444 | |
| 105 | 68901 | 16 QAM | 180 | 444 | |
| 106 | 69557 | QPSK | 361 | 444 | |
| 106 | 69557 | 16 QAM | 180 | 444 | |
| 107 | 70213 | QPSK | 361 | 445 | |
| 107 | 70213 | 16 QAM | 180 | 445 | |
| 108 | 70869 | QPSK | 361 | 445 | |

| | | | | | |
|---|---|---|---|---|---|
| 108 | 70869 | 16 QAM | 180 | 445 | |
| 109 | 71525 | QPSK | 361 | 446 | |
| 109 | 71525 | 16 QAM | 180 | 446 | |
| 110 | 72181 | QPSK | 361 | 448 | |
| 110 | 72181 | 16 QAM | 180 | 447 | |
| 111 | 72837 | QPSK | 361 | 448 | |
| 111 | 72837 | 16 QAM | 180 | 447 | |

**Table 18.3.1.4.4.11: TFRC test points for UE category 11 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 65 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 81 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 88 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 96 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 105 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 114 | 318 | |
| 14 | 9205 | 16 QAM | 57 | 318 | |
| 15 | 9861 | QPSK | 120 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 128 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 138 | 330 | |
| 17 | 11173 | 16 QAM | 69 | 330 | |
| 18 | 11829 | QPSK | 147 | 334 | |
| 18 | 11829 | 16 QAM | 72 | 334 | |
| 19 | 12485 | QPSK | 154 | 337 | |
| 19 | 12485 | 16 QAM | 77 | 337 | |
| 20 | 13141 | QPSK | 162 | 340 | |
| 20 | 13141 | 16 QAM | 81 | 340 | |
| 21 | 13797 | QPSK | 168 | 343 | |
| 21 | 13797 | 16 QAM | 85 | 343 | |
| 22 | 14453 | QPSK | 176 | 346 | |
| 22 | 14453 | 16 QAM | 88 | 346 | |
| 23 | 15109 | QPSK | 186 | 349 | |
| 23 | 15109 | 16 QAM | 93 | 349 | |
| 24 | 15765 | QPSK | 196 | 352 | |
| 24 | 15765 | 16 QAM | 98 | 352 | |
| 25 | 16421 | QPSK | 203 | 354 | |
| 25 | 16421 | 16 QAM | 100 | 354 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | QPSK | 210 | 357 | |
| 26 | 17077 | 16 QAM | 105 | 357 | |
| 27 | 17733 | QPSK | 217 | 359 | |
| 27 | 17733 | 16 QAM | 110 | 359 | |
| 28 | 18389 | QPSK | 224 | 361 | |
| 28 | 18389 | 16 QAM | 112 | 361 | |
| 29 | 19045 | QPSK | 232 | 363 | |
| 29 | 19045 | 16 QAM | 116 | 363 | |
| 30 | 19701 | QPSK | 240 | 365 | |
| 30 | 19701 | 16 QAM | 120 | 365 | |
| 31 | 20357 | QPSK | 248 | 368 | |
| 31 | 20357 | 16 QAM | 126 | 368 | |
| 32 | 21013 | QPSK | 256 | 370 | |
| 32 | 21013 | 16 QAM | 130 | 370 | |
| 33 | 21669 | QPSK | 256 | 371 | |
| 33 | 21669 | 16 QAM | 133 | 371 | |
| 34 | 22325 | QPSK | 256 | 373 | |
| 34 | 22325 | 16 QAM | 136 | 373 | |
| 35 | 22981 | QPSK | 256 | 375 | |
| 35 | 22981 | 16 QAM | 140 | 375 | |
| 36 | 23637 | QPSK | 256 | 377 | |
| 36 | 23637 | 16 QAM | 145 | 377 | |
| 37 | 24293 | QPSK | 256 | 379 | |
| 37 | 24293 | 16 QAM | 150 | 379 | |
| 38 | 24949 | QPSK | 256 | 380 | |
| 38 | 24949 | 16 QAM | 154 | 380 | |
| 39 | 25605 | QPSK | 256 | 382 | |
| 39 | 25605 | 16 QAM | 156 | 382 | |
| 40 | 26261 | QPSK | 256 | 383 | |
| 40 | 26261 | 16 QAM | 161 | 383 | |
| 41 | 26917 | QPSK | 256 | 385 | |
| 41 | 26917 | 16 QAM | 162 | 385 | |
| 42 | 27573 | QPSK | 256 | 386 | |
| 42 | 27573 | 16 QAM | 168 | 386 | |
| 43 | 28229 | QPSK | 256 | 388 | |
| 43 | 28229 | 16 QAM | 175 | 388 | |
| 44 | 28885 | QPSK | 256 | 389 | |
| 44 | 28885 | 16 QAM | 176 | 389 | |
| 45 | 29541 | QPSK | 256 | 391 | |
| 45 | 29541 | 16 QAM | 182 | 391 | |
| 46 | 30197 | QPSK | 256 | 392 | |
| 46 | 30197 | 16 QAM | 186 | 392 | |
| 47 | 30853 | QPSK | 256 | 394 | |
| 47 | 30853 | 16 QAM | 192 | 394 | |
| 48 | 31509 | QPSK | 256 | 395 | |
| 48 | 31509 | 16 QAM | 196 | 395 | |
| 49 | 32165 | QPSK | 256 | 396 | |
| 49 | 32165 | 16 QAM | 196 | 396 | |
| 50 | 32821 | QPSK | 256 | 397 | |
| 50 | 32821 | 16 QAM | 200 | 397 | |
| 51 | 33477 | QPSK | 256 | 399 | |
| 51 | 33477 | 16 QAM | 208 | 399 | |
| 52 | 34133 | QPSK | 256 | 400 | |
| 52 | 34133 | 16 QAM | 210 | 400 | |
| 53 | 34789 | QPSK | 256 | 401 | |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 34789 | 16 QAM | 210 | 401 | |
| 54 | 35445 | QPSK | 256 | 402 | |
| 54 | 35445 | 16 QAM | 217 | 402 | |
| 55 | 36101 | QPSK | 256 | 403 | |
| 55 | 36101 | 16 QAM | 217 | 403 | |
| 56 | 36757 | QPSK | 256 | 404 | |
| 56 | 36757 | 16 QAM | 224 | 404 | |
| 57 | 37413 | QPSK | 256 | 406 | |
| 57 | 37413 | 16 QAM | 232 | 406 | |
| 58 | 38069 | QPSK | 256 | 407 | |
| 58 | 38069 | 16 QAM | 232 | 407 | |
| 59 | 38725 | QPSK | 256 | 408 | |
| 59 | 38725 | 16 QAM | 240 | 408 | |
| 60 | 39381 | QPSK | 256 | 409 | |
| 60 | 39381 | 16 QAM | 240 | 409 | |
| 61 | 40037 | QPSK | 256 | 410 | |
| 61 | 40037 | 16 QAM | 248 | 410 | |
| 62 | 40693 | QPSK | 256 | 411 | |
| 62 | 40693 | 16 QAM | 248 | 411 | |
| 63 | 41349 | QPSK | 256 | 412 | |
| 63 | 41349 | 16 QAM | 256 | 412 | |
| 64 | 42005 | QPSK | 256 | 413 | |
| 64 | 42005 | 16 QAM | 256 | 413 | |
| 65 | 42661 | QPSK | 256 | 414 | |
| 65 | 42661 | 16 QAM | 256 | 414 | |
| 66 | 43317 | QPSK | 256 | 415 | |
| 66 | 43317 | 16 QAM | 256 | 415 | |
| 67 | 43973 | QPSK | 256 | 416 | |
| 67 | 43973 | 16 QAM | 256 | 416 | |
| 68 | 44629 | QPSK | 256 | 417 | |
| 68 | 44629 | 16 QAM | 256 | 417 | |
| 69 | 45285 | QPSK | 256 | 417 | |
| 69 | 45285 | 16 QAM | 256 | 417 | |
| 70 | 45941 | QPSK | 256 | 418 | |
| 70 | 45941 | 16 QAM | 256 | 418 | |
| 71 | 46597 | QPSK | 256 | 419 | |
| 71 | 46597 | 16 QAM | 256 | 419 | |
| 72 | 47253 | QPSK | 256 | 420 | |
| 72 | 47253 | 16 QAM | 256 | 420 | |
| 73 | 47909 | QPSK | 256 | 423 | |
| 73 | 47909 | 16 QAM | 256 | 421 | |
| 74 | 48565 | QPSK | 256 | 423 | |
| 74 | 48565 | 16 QAM | 256 | 422 | |
| 75 | 49221 | QPSK | 256 | 423 | |
| 75 | 49221 | 16 QAM | 256 | 423 | |
| 76 | 49877 | QPSK | 256 | 423 | |
| 76 | 49877 | 16 QAM | 256 | 423 | |
| 77 | 50533 | QPSK | 256 | 424 | |
| 77 | 50533 | 16 QAM | 256 | 424 | |
| 78 | 51189 | QPSK | 256 | 425 | |
| 78 | 51189 | 16 QAM | 256 | 425 | |
| 79 | 51845 | QPSK | 256 | 427 | |
| 79 | 51845 | 16 QAM | 256 | 426 | |
| 80 | 52501 | QPSK | 256 | 427 | |
| 80 | 52501 | 16 QAM | 256 | 427 | |

| | | | | | |
|---|---|---|---|---|---|
| 81 | 53157 | QPSK | 256 | 427 | |
| 81 | 53157 | 16 QAM | 256 | 427 | |
| 82 | 53813 | QPSK | 256 | 428 | |
| 82 | 53813 | 16 QAM | 256 | 428 | |
| 83 | 54469 | QPSK | 256 | 429 | |
| 83 | 54469 | 16 QAM | 256 | 429 | |
| 84 | 55125 | QPSK | 256 | 430 | |
| 84 | 55125 | 16 QAM | 256 | 430 | |
| 85 | 55781 | QPSK | 256 | 430 | |
| 85 | 55781 | 16 QAM | 256 | 430 | |
| 86 | 56437 | QPSK | 256 | 431 | |
| 86 | 56437 | 16 QAM | 256 | 431 | |
| 87 | 57093 | QPSK | 256 | 432 | |
| 87 | 57093 | 16 QAM | 256 | 432 | |
| 88 | 57749 | QPSK | 256 | 433 | |
| 88 | 57749 | 16 QAM | 256 | 433 | |
| 89 | 58405 | QPSK | 256 | 433 | |
| 89 | 58405 | 16 QAM | 256 | 433 | |
| 90 | 59061 | QPSK | 256 | 434 | |
| 90 | 59061 | 16 QAM | 256 | 434 | |
| 91 | 59717 | QPSK | 256 | 435 | |
| 91 | 59717 | 16 QAM | 256 | 435 | |
| 92 | 60373 | QPSK | 256 | 435 | |
| 92 | 60373 | 16 QAM | 256 | 435 | |
| 93 | 61029 | QPSK | 256 | 436 | |
| 93 | 61029 | 16 QAM | 256 | 436 | |
| 94 | 61685 | QPSK | 256 | 437 | |
| 94 | 61685 | 16 QAM | 256 | 437 | |
| 95 | 62341 | QPSK | 256 | 437 | |
| 95 | 62341 | 16 QAM | 256 | 437 | |
| 96 | 62997 | QPSK | 256 | 438 | |
| 96 | 63653 | 16 QAM | 256 | 439 | |
| 97 | 64309 | QPSK | 256 | 439 | |
| 97 | 64965 | 16 QAM | 256 | 440 | |
| 98 | 65621 | QPSK | 256 | 441 | |
| 98 | 66277 | 16 QAM | 256 | 441 | |
| 99 | 66933 | QPSK | 256 | 442 | |
| 99 | 67589 | 16 QAM | 256 | 442 | |
| 100 | 68245 | QPSK | 256 | 443 | |
| 100 | 68901 | 16 QAM | 256 | 444 | |
| 101 | 69557 | QPSK | 256 | 444 | |
| 101 | 70213 | 16 QAM | 256 | 445 | |
| 102 | 70869 | QPSK | 256 | 445 | |
| 102 | 71525 | 16 QAM | 256 | 446 | |
| 103 | 72181 | QPSK | 256 | 447 | |
| 103 | 72837 | 16 QAM | 256 | 447 | |
| 104 | 73493 | QPSK | 256 | 448 | |
| 104 | 74149 | 16 QAM | 256 | 448 | |
| 105 | 74805 | QPSK | 256 | 449 | |
| 105 | 75461 | 16 QAM | 256 | 449 | |
| 106 | 76117 | QPSK | 256 | 450 | |
| 106 | 76773 | 16 QAM | 256 | 450 | |
| 107 | 77429 | QPSK | 256 | 451 | |
| 107 | 78085 | 16 QAM | 256 | 451 | |
| 108 | 78741 | QPSK | 256 | 452 | |

| | | | | | |
|---|---|---|---|---|---|
| 108 | 79397 | 16 QAM | 256 | 453 | |
| 109 | 80053 | QPSK | 256 | 453 | |
| 109 | 80709 | 16 QAM | 256 | 454 | |
| 110 | 81365 | QPSK | 256 | 454 | |
| 110 | 82021 | 16 QAM | 256 | 455 | |
| 111 | 82677 | QPSK | 256 | 455 | |
| 111 | 83333 | 16 QAM | 256 | 456 | |
| 112 | 83989 | QPSK | 256 | 456 | |
| 112 | 84652 | 16 QAM | 256 | 457 | |
| 113 | 85308 | QPSK | 256 | 457 | |
| 113 | 85964 | 16 QAM | 256 | 457 | |
| 114 | 86620 | QPSK | 256 | 458 | |
| 114 | 87276 | 16 QAM | 256 | 458 | |
| 115 | 87932 | QPSK | 256 | 459 | |
| 115 | 88588 | 16 QAM | 256 | 459 | |
| 116 | 89244 | QPSK | 256 | 460 | |
| 116 | 89900 | 16 QAM | 256 | 460 | |
| 117 | 90556 | QPSK | 256 | 461 | |
| 117 | 91212 | 16 QAM | 256 | 461 | |
| 118 | 91868 | QPSK | 256 | 462 | |
| 118 | 92524 | 16 QAM | 256 | 462 | |
| 119 | 93180 | QPSK | 256 | 463 | |
| 119 | 93836 | 16 QAM | 256 | 463 | |
| 120 | 94492 | QPSK | 256 | 463 | |
| 120 | 95148 | 16 QAM | 256 | 464 | |
| 121 | 95804 | QPSK | 256 | 464 | |
| 121 | 96460 | 16 QAM | 256 | 466 | |
| 122 | 97116 | QPSK | 256 | 466 | |
| 122 | 97772 | 16 QAM | 256 | 466 | |
| 123 | 98428 | QPSK | 256 | 466 | |
| 123 | 99084 | 16 QAM | 256 | 466 | |
| 124 | 99740 | QPSK | 256 | 467 | |
| 124 | 100396 | 16 QAM | 256 | 467 | |
| 125 | 101052 | QPSK | 256 | 468 | |
| 125 | 101708 | 16 QAM | 256 | 468 | |
| 126 | 102364 | QPSK | 256 | 468 | |
| 126 | 103020 | 16 QAM | 256 | 469 | |
| 127 | 103676 | QPSK | 256 | 469 | |
| 127 | 104332 | 16 QAM | 256 | 470 | |
| 128 | 104988 | QPSK | 256 | 470 | |
| 128 | 105644 | 16 QAM | 256 | 470 | |

**Table 18.3.1.4.4.12: TFRC test points for UE category 12 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 65 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 81 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 88 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 96 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 105 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 114 | 318 | |
| 14 | 9205 | 16 QAM | 57 | 318 | |
| 15 | 9861 | QPSK | 121 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 128 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 138 | 330 | |
| 17 | 11173 | 16 QAM | 69 | 330 | |
| 18 | 11829 | QPSK | 147 | 334 | |
| 18 | 11829 | 16 QAM | 72 | 334 | |
| 19 | 12485 | QPSK | 154 | 337 | |
| 19 | 12485 | 16 QAM | 77 | 337 | |
| 20 | 13141 | QPSK | 162 | 340 | |
| 20 | 13141 | 16 QAM | 81 | 340 | |
| 21 | 13797 | QPSK | 170 | 343 | |
| 21 | 13797 | 16 QAM | 85 | 343 | |
| 22 | 14453 | QPSK | 176 | 346 | |
| 22 | 14453 | 16 QAM | 88 | 346 | |
| 23 | 15109 | QPSK | 187 | 349 | |
| 23 | 15109 | 16 QAM | 93 | 349 | |
| 24 | 15765 | QPSK | 196 | 352 | |
| 24 | 15765 | 16 QAM | 98 | 352 | |
| 25 | 16421 | QPSK | 203 | 354 | |
| 25 | 16421 | 16 QAM | 100 | 354 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | QPSK | 210 | 357 | |
| 26 | 17077 | 16 QAM | 105 | 357 | |
| 27 | 17733 | QPSK | 220 | 359 | |
| 27 | 17733 | 16 QAM | 110 | 359 | |
| 28 | 18389 | QPSK | 225 | 361 | |
| 28 | 18389 | 16 QAM | 112 | 361 | |
| 29 | 19045 | QPSK | 234 | 363 | |
| 29 | 19045 | 16 QAM | 117 | 363 | |
| 30 | 19701 | QPSK | 242 | 365 | |
| 30 | 19701 | 16 QAM | 121 | 365 | |
| 31 | 20357 | QPSK | 253 | 368 | |
| 31 | 20357 | 16 QAM | 126 | 368 | |
| 32 | 21013 | QPSK | 261 | 370 | |
| 32 | 21013 | 16 QAM | 130 | 370 | |
| 33 | 21669 | QPSK | 264 | 371 | |
| 33 | 21669 | 16 QAM | 133 | 371 | |
| 34 | 22325 | QPSK | 275 | 373 | |
| 34 | 22325 | 16 QAM | 136 | 373 | |
| 35 | 22981 | QPSK | 280 | 375 | |
| 35 | 22981 | 16 QAM | 140 | 375 | |
| 36 | 23637 | QPSK | 290 | 377 | |
| 36 | 23637 | 16 QAM | 145 | 377 | |
| 37 | 24293 | QPSK | 300 | 379 | |
| 37 | 24293 | 16 QAM | 150 | 379 | |
| 38 | 24949 | QPSK | 308 | 380 | |
| 38 | 24949 | 16 QAM | 154 | 380 | |
| 39 | 25605 | QPSK | 312 | 382 | |
| 39 | 25605 | 16 QAM | 156 | 382 | |
| 40 | 26261 | QPSK | 320 | 383 | |
| 40 | 26261 | 16 QAM | 161 | 383 | |
| 41 | 26917 | QPSK | 330 | 385 | |
| 41 | 26917 | 16 QAM | 165 | 385 | |
| 42 | 27573 | QPSK | 336 | 386 | |
| 42 | 27573 | 16 QAM | 168 | 386 | |
| 43 | 28229 | QPSK | 348 | 388 | |
| 43 | 28229 | 16 QAM | 175 | 388 | |
| 44 | 28885 | QPSK | 352 | 389 | |
| 44 | 28885 | 16 QAM | 176 | 389 | |
| 45 | 29541 | QPSK | 360 | 391 | |
| 45 | 29541 | 16 QAM | 182 | 391 | |
| 46 | 30197 | QPSK | 372 | 392 | |
| 46 | 30197 | 16 QAM | 186 | 392 | |
| 47 | 30853 | QPSK | 384 | 394 | |
| 47 | 30853 | 16 QAM | 192 | 394 | |
| 48 | 31509 | QPSK | 384 | 395 | |
| 48 | 31509 | 16 QAM | 196 | 395 | |
| 49 | 32165 | QPSK | 384 | 396 | |
| 49 | 32165 | 16 QAM | 198 | 396 | |
| 50 | 32821 | QPSK | 384 | 397 | |
| 50 | 32821 | 16 QAM | 200 | 397 | |
| 51 | 33477 | QPSK | 384 | 399 | |
| 51 | 33477 | 16 QAM | 208 | 399 | |
| 52 | 34133 | QPSK | 384 | 400 | |
| 52 | 34133 | 16 QAM | 210 | 400 | |
| 53 | 34789 | QPSK | 384 | 401 | |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 34789 | 16 QAM | 210 | 401 | |
| 54 | 35445 | QPSK | 384 | 402 | |
| 54 | 35445 | 16 QAM | 217 | 402 | |
| 55 | 36101 | QPSK | 384 | 403 | |
| 55 | 36101 | 16 QAM | 220 | 403 | |
| 56 | 36757 | QPSK | 384 | 404 | |
| 56 | 36757 | 16 QAM | 225 | 404 | |
| 57 | 37413 | QPSK | 384 | 406 | |
| 57 | 37413 | 16 QAM | 232 | 406 | |
| 58 | 38069 | QPSK | 384 | 407 | |
| 58 | 38069 | 16 QAM | 234 | 407 | |
| 59 | 38725 | QPSK | 384 | 408 | |
| 59 | 38725 | 16 QAM | 240 | 408 | |
| 60 | 39381 | QPSK | 384 | 409 | |
| 60 | 39381 | 16 QAM | 243 | 409 | |
| 61 | 40037 | QPSK | 384 | 410 | |
| 61 | 40037 | 16 QAM | 248 | 410 | |
| 62 | 40693 | QPSK | 384 | 411 | |
| 62 | 40693 | 16 QAM | 253 | 411 | |
| 63 | 41349 | QPSK | 384 | 412 | |
| 63 | 41349 | 16 QAM | 256 | 412 | |
| 64 | 42005 | QPSK | 384 | 413 | |
| 64 | 42005 | 16 QAM | 261 | 413 | |
| 65 | 42661 | QPSK | 384 | 414 | |
| 65 | 42661 | 16 QAM | 264 | 414 | |
| 66 | 43317 | QPSK | 384 | 415 | |
| 66 | 43317 | 16 QAM | 270 | 415 | |
| 67 | 43973 | QPSK | 384 | 416 | |
| 67 | 43973 | 16 QAM | 270 | 416 | |
| 68 | 44629 | QPSK | 384 | 417 | |
| 68 | 44629 | 16 QAM | 276 | 417 | |
| 69 | 45285 | QPSK | 384 | 417 | |
| 69 | 45285 | 16 QAM | 276 | 417 | |
| 70 | 45941 | QPSK | 384 | 418 | |
| 70 | 45941 | 16 QAM | 280 | 418 | |
| 71 | 46597 | QPSK | 384 | 419 | |
| 71 | 46597 | 16 QAM | 286 | 419 | |
| 72 | 47253 | QPSK | 384 | 420 | |
| 72 | 47253 | 16 QAM | 289 | 420 | |
| 73 | 47909 | QPSK | 384 | 421 | |
| 73 | 47909 | 16 QAM | 289 | 421 | |
| 74 | 48565 | QPSK | 384 | 422 | |
| 74 | 48565 | 16 QAM | 289 | 422 | |
| 75 | 49221 | QPSK | 384 | 423 | |
| 75 | 49221 | 16 QAM | 289 | 423 | |
| 76 | 49877 | QPSK | 384 | 423 | |
| 76 | 49877 | 16 QAM | 289 | 423 | |
| 77 | 50533 | QPSK | 384 | 424 | |
| 77 | 50533 | 16 QAM | 289 | 424 | |
| 78 | 51189 | QPSK | 384 | 425 | |
| 78 | 51189 | 16 QAM | 289 | 425 | |
| 79 | 51845 | QPSK | 384 | 426 | |
| 79 | 51845 | 16 QAM | 289 | 426 | |
| 80 | 52501 | QPSK | 384 | 427 | |
| 80 | 52501 | 16 QAM | 289 | 427 | |

| | | | | | |
|---|---|---|---|---|---|
| 81 | 53157 | QPSK | 384 | 427 | |
| 81 | 53157 | 16 QAM | 289 | 427 | |
| 82 | 53813 | QPSK | 384 | 428 | |
| 82 | 53813 | 16 QAM | 289 | 428 | |
| 83 | 54469 | QPSK | 384 | 429 | |
| 83 | 54469 | 16 QAM | 289 | 429 | |
| 84 | 55125 | QPSK | 384 | 430 | |
| 84 | 55125 | 16 QAM | 289 | 430 | |
| 85 | 55781 | QPSK | 384 | 430 | |
| 85 | 55781 | 16 QAM | 289 | 430 | |
| 86 | 56437 | QPSK | 384 | 431 | |
| 86 | 56437 | 16 QAM | 289 | 431 | |
| 87 | 57093 | QPSK | 384 | 432 | |
| 87 | 57093 | 16 QAM | 289 | 432 | |
| 88 | 57749 | QPSK | 384 | 433 | |
| 88 | 57749 | 16 QAM | 289 | 433 | |
| 89 | 58405 | QPSK | 384 | 433 | |
| 89 | 58405 | 16 QAM | 289 | 433 | |
| 90 | 59061 | QPSK | 384 | 434 | |
| 90 | 59061 | 16 QAM | 289 | 434 | |
| 91 | 59717 | QPSK | 384 | 435 | |
| 91 | 59717 | 16 QAM | 289 | 435 | |
| 92 | 60373 | QPSK | 384 | 435 | |
| 92 | 60373 | 16 QAM | 289 | 435 | |
| 93 | 61029 | QPSK | 384 | 436 | |
| 93 | 61029 | 16 QAM | 289 | 436 | |
| 94 | 61685 | QPSK | 384 | 437 | |
| 94 | 61685 | 16 QAM | 289 | 437 | |
| 95 | 62341 | QPSK | 384 | 437 | |
| 95 | 62341 | 16 QAM | 289 | 437 | |
| 96 | 62997 | QPSK | 384 | 438 | |
| 96 | 62997 | 16 QAM | 289 | 438 | |
| 97 | 63653 | QPSK | 384 | 439 | |
| 97 | 63653 | 16 QAM | 289 | 439 | |
| 98 | 64309 | QPSK | 384 | 439 | |
| 98 | 64309 | 16 QAM | 289 | 439 | |
| 99 | 64965 | QPSK | 384 | 440 | |
| 99 | 64965 | 16 QAM | 289 | 440 | |
| 100 | 65621 | QPSK | 384 | 441 | |
| 100 | 65621 | 16 QAM | 289 | 441 | |
| 101 | 66277 | QPSK | 384 | 441 | |
| 101 | 66277 | 16 QAM | 289 | 441 | |
| 102 | 66933 | QPSK | 384 | 442 | |
| 102 | 66933 | 16 QAM | 289 | 442 | |
| 103 | 67589 | QPSK | 384 | 442 | |
| 103 | 67589 | 16 QAM | 289 | 442 | |
| 104 | 68245 | QPSK | 384 | 443 | |
| 104 | 68245 | 16 QAM | 289 | 443 | |
| 105 | 68901 | QPSK | 384 | 444 | |
| 105 | 68901 | 16 QAM | 289 | 444 | |
| 106 | 69557 | QPSK | 384 | 444 | |
| 106 | 69557 | 16 QAM | 289 | 444 | |
| 107 | 70213 | QPSK | 384 | 445 | |
| 107 | 70213 | 16 QAM | 289 | 445 | |
| 108 | 70869 | QPSK | 384 | 445 | |

| | | | | | |
|---|---|---|---|---|---|
| 108 | 70869 | 16 QAM | 289 | 445 | |
| 109 | 71525 | QPSK | 384 | 446 | |
| 109 | 71525 | 16 QAM | 289 | 446 | |
| 110 | 72181 | QPSK | 384 | 448 | |
| 110 | 72181 | 16 QAM | 289 | 447 | |
| 111 | 72837 | QPSK | 384 | 448 | |
| 111 | 72837 | 16 QAM | 289 | 447 | |
| 112 | 73493 | QPSK | 384 | 448 | |
| 112 | 73493 | 16 QAM | 289 | 448 | |
| 113 | 74149 | QPSK | 384 | 448 | |
| 113 | 74149 | 16 QAM | 289 | 448 | |
| 114 | 74805 | QPSK | 384 | 449 | |
| 114 | 74805 | 16 QAM | 289 | 449 | |
| 115 | 75461 | QPSK | 384 | 449 | |
| 115 | 75461 | 16 QAM | 289 | 449 | |
| 116 | 76117 | QPSK | 384 | 450 | |
| 116 | 76117 | 16 QAM | 289 | 450 | |
| 117 | 76773 | QPSK | 384 | 450 | |
| 117 | 76773 | 16 QAM | 289 | 450 | |
| 118 | 77429 | QPSK | 384 | 451 | |
| 118 | 77429 | 16 QAM | 289 | 451 | |
| 119 | 78085 | QPSK | 384 | 451 | |
| 119 | 78085 | 16 QAM | 289 | 451 | |
| 120 | 78741 | QPSK | 384 | 452 | |
| 120 | 78741 | 16 QAM | 289 | 452 | |
| 121 | 79397 | QPSK | 384 | 453 | |
| 121 | 79397 | 16 QAM | 289 | 453 | |
| 122 | 80053 | QPSK | 384 | 453 | |
| 122 | 80053 | 16 QAM | 289 | 453 | |
| 123 | 80709 | QPSK | 384 | 455 | |
| 123 | 80709 | 16 QAM | 289 | 454 | |
| 124 | 81365 | QPSK | 384 | 455 | |
| 124 | 81365 | 16 QAM | 289 | 454 | |
| 125 | 82021 | QPSK | 384 | 455 | |
| 125 | 82021 | 16 QAM | 289 | 455 | |
| 126 | 82677 | QPSK | 384 | 455 | |
| 126 | 82677 | 16 QAM | 289 | 455 | |
| 127 | 83333 | QPSK | 384 | 456 | |
| 127 | 83333 | 16 QAM | 289 | 456 | |
| 128 | 83989 | QPSK | 384 | 456 | |
| 128 | 83989 | 16 QAM | 289 | 456 | |
| 129 | 84652 | QPSK | 384 | 457 | |
| 129 | 84652 | 16 QAM | 289 | 457 | |
| 130 | 85308 | QPSK | 384 | 457 | |
| 130 | 85308 | 16 QAM | 289 | 457 | |
| 131 | 85964 | QPSK | 384 | 457 | |
| 131 | 85964 | 16 QAM | 289 | 457 | |
| 132 | 86620 | QPSK | 384 | 458 | |
| 132 | 86620 | 16 QAM | 289 | 458 | |
| 133 | 87276 | QPSK | 384 | 458 | |
| 133 | 87276 | 16 QAM | 289 | 458 | |
| 134 | 87932 | QPSK | 384 | 459 | |
| 134 | 87932 | 16 QAM | 289 | 459 | |
| 135 | 88588 | QPSK | 384 | 459 | |
| 135 | 88588 | 16 QAM | 289 | 459 | |

| | | | | | |
|---|---|---|---|---|---|
| 136 | 89244 | QPSK | 384 | 460 | |
| 136 | 89244 | 16 QAM | 289 | 460 | |
| 137 | 89900 | QPSK | 384 | 460 | |
| 137 | 89900 | 16 QAM | 289 | 460 | |
| 138 | 90556 | QPSK | 384 | 461 | |
| 138 | 90556 | 16 QAM | 289 | 461 | |
| 139 | 91212 | QPSK | 384 | 461 | |
| 139 | 91212 | 16 QAM | 289 | 461 | |
| 140 | 91868 | QPSK | 384 | 462 | |
| 140 | 91868 | 16 QAM | 289 | 462 | |
| 141 | 92524 | QPSK | 384 | 462 | |
| 141 | 92524 | 16 QAM | 289 | 462 | |
| 142 | 93180 | QPSK | 289 | 463 | |
| 142 | 93836 | 16 QAM | 289 | 463 | |
| 143 | 94492 | QPSK | 289 | 463 | |
| 143 | 95148 | 16 QAM | 289 | 464 | |
| 144 | 95804 | QPSK | 289 | 464 | |
| 144 | 96460 | 16 QAM | 289 | 465 | |
| 145 | 97116 | QPSK | 289 | 465 | |
| 145 | 97772 | 16 QAM | 289 | 466 | |
| 146 | 98428 | QPSK | 289 | 466 | |
| 146 | 99084 | 16 QAM | 289 | 466 | |
| 147 | 99740 | QPSK | 289 | 467 | |
| 147 | 100396 | 16 QAM | 289 | 467 | |
| 148 | 101052 | QPSK | 289 | 468 | |
| 148 | 101708 | 16 QAM | 289 | 468 | |
| 149 | 102364 | QPSK | 289 | 468 | |
| 149 | 103020 | 16 QAM | 289 | 469 | |
| 150 | 103676 | QPSK | 289 | 469 | |
| 150 | 104332 | 16 QAM | 289 | 470 | |
| 151 | 104988 | QPSK | 289 | 470 | |
| 151 | 105644 | 16 QAM | 289 | 470 | |

**Table 18.3.1.4.4.13: TFRC test points for UE category 13 for MAC-d PDU size=656, 7.68Mcps TDD**

| Number of MAC-d PDUs | Selected transport block size [bits] | Modulation scheme | Number of resource units | TFRI | Comments |
|---|---|---|---|---|---|
| 1 | 677 | QPSK | 8 | 155 | |
| 1 | 677 | 16 QAM | 4 | 155 | |
| 2 | 1333 | QPSK | 16 | 197 | |
| 2 | 1333 | 16 QAM | 8 | 197 | |
| 3 | 1989 | QPSK | 24 | 222 | |
| 3 | 1989 | 16 QAM | 12 | 222 | |
| 4 | 2645 | QPSK | 32 | 240 | |
| 4 | 2645 | 16 QAM | 16 | 240 | |
| 5 | 3301 | QPSK | 40 | 254 | |
| 5 | 3301 | 16 QAM | 20 | 254 | |
| 6 | 3957 | QPSK | 48 | 265 | |
| 6 | 3957 | 16 QAM | 24 | 265 | |
| 7 | 4613 | QPSK | 57 | 275 | |
| 7 | 4613 | 16 QAM | 28 | 275 | |
| 8 | 5269 | QPSK | 65 | 283 | |
| 8 | 5269 | 16 QAM | 32 | 283 | |
| 9 | 5925 | QPSK | 72 | 290 | |
| 9 | 5925 | 16 QAM | 36 | 290 | |
| 10 | 6581 | QPSK | 81 | 297 | |
| 10 | 6581 | 16 QAM | 40 | 297 | |
| 11 | 7237 | QPSK | 88 | 303 | |
| 11 | 7237 | 16 QAM | 44 | 303 | |
| 12 | 7893 | QPSK | 96 | 308 | |
| 12 | 7893 | 16 QAM | 48 | 308 | |
| 13 | 8549 | QPSK | 105 | 313 | |
| 13 | 8549 | 16 QAM | 52 | 313 | |
| 14 | 9205 | QPSK | 114 | 318 | |
| 14 | 9205 | 16 QAM | 57 | 318 | |
| 15 | 9861 | QPSK | 121 | 322 | |
| 15 | 9861 | 16 QAM | 60 | 322 | |
| 16 | 10517 | QPSK | 128 | 326 | |
| 16 | 10517 | 16 QAM | 64 | 326 | |
| 17 | 11173 | QPSK | 138 | 330 | |
| 17 | 11173 | 16 QAM | 69 | 330 | |
| 18 | 11829 | QPSK | 147 | 334 | |
| 18 | 11829 | 16 QAM | 72 | 334 | |
| 19 | 12485 | QPSK | 154 | 337 | |
| 19 | 12485 | 16 QAM | 77 | 337 | |
| 20 | 13141 | QPSK | 162 | 340 | |
| 20 | 13141 | 16 QAM | 81 | 340 | |
| 21 | 13797 | QPSK | 170 | 343 | |
| 21 | 13797 | 16 QAM | 85 | 343 | |
| 22 | 14453 | QPSK | 176 | 346 | |
| 22 | 14453 | 16 QAM | 88 | 346 | |
| 23 | 15109 | QPSK | 187 | 349 | |
| 23 | 15109 | 16 QAM | 93 | 349 | |
| 24 | 15765 | QPSK | 196 | 352 | |
| 24 | 15765 | 16 QAM | 98 | 352 | |
| 25 | 16421 | QPSK | 203 | 354 | |
| 25 | 16421 | 16 QAM | 100 | 354 | |

| | | | | | |
|---|---|---|---|---|---|
| 26 | 17077 | QPSK | 210 | 357 | |
| 26 | 17077 | 16 QAM | 105 | 357 | |
| 27 | 17733 | QPSK | 220 | 359 | |
| 27 | 17733 | 16 QAM | 110 | 359 | |
| 28 | 18389 | QPSK | 225 | 361 | |
| 28 | 18389 | 16 QAM | 112 | 361 | |
| 29 | 19045 | QPSK | 234 | 363 | |
| 29 | 19045 | 16 QAM | 117 | 363 | |
| 30 | 19701 | QPSK | 242 | 365 | |
| 30 | 19701 | 16 QAM | 121 | 365 | |
| 31 | 20357 | QPSK | 253 | 368 | |
| 31 | 20357 | 16 QAM | 126 | 368 | |
| 32 | 21013 | QPSK | 261 | 370 | |
| 32 | 21013 | 16 QAM | 130 | 370 | |
| 33 | 21669 | QPSK | 264 | 371 | |
| 33 | 21669 | 16 QAM | 133 | 371 | |
| 34 | 22325 | QPSK | 275 | 373 | |
| 34 | 22325 | 16 QAM | 136 | 373 | |
| 35 | 22981 | QPSK | 280 | 375 | |
| 35 | 22981 | 16 QAM | 140 | 375 | |
| 36 | 23637 | QPSK | 290 | 377 | |
| 36 | 23637 | 16 QAM | 145 | 377 | |
| 37 | 24293 | QPSK | 300 | 379 | |
| 37 | 24293 | 16 QAM | 150 | 379 | |
| 38 | 24949 | QPSK | 308 | 380 | |
| 38 | 24949 | 16 QAM | 154 | 380 | |
| 39 | 25605 | QPSK | 312 | 382 | |
| 39 | 25605 | 16 QAM | 156 | 382 | |
| 40 | 26261 | QPSK | 320 | 383 | |
| 40 | 26261 | 16 QAM | 161 | 383 | |
| 41 | 26917 | QPSK | 330 | 385 | |
| 41 | 26917 | 16 QAM | 165 | 385 | |
| 42 | 27573 | QPSK | 336 | 386 | |
| 42 | 27573 | 16 QAM | 168 | 386 | |
| 43 | 28229 | QPSK | 348 | 388 | |
| 43 | 28229 | 16 QAM | 175 | 388 | |
| 44 | 28885 | QPSK | 352 | 389 | |
| 44 | 28885 | 16 QAM | 176 | 389 | |
| 45 | 29541 | QPSK | 360 | 391 | |
| 45 | 29541 | 16 QAM | 182 | 391 | |
| 46 | 30197 | QPSK | 372 | 392 | |
| 46 | 30197 | 16 QAM | 186 | 392 | |
| 47 | 30853 | QPSK | 384 | 394 | |
| 47 | 30853 | 16 QAM | 192 | 394 | |
| 48 | 31509 | QPSK | 384 | 395 | |
| 48 | 31509 | 16 QAM | 196 | 395 | |
| 49 | 32165 | QPSK | 384 | 396 | |
| 49 | 32165 | 16 QAM | 198 | 396 | |
| 50 | 32821 | QPSK | 384 | 397 | |
| 50 | 32821 | 16 QAM | 200 | 397 | |
| 51 | 33477 | QPSK | 384 | 399 | |
| 51 | 33477 | 16 QAM | 208 | 399 | |
| 52 | 34133 | QPSK | 384 | 400 | |
| 52 | 34133 | 16 QAM | 210 | 400 | |
| 53 | 34789 | QPSK | 384 | 401 | |

| | | | | | |
|---|---|---|---|---|---|
| 53 | 34789 | 16 QAM | 210 | 401 | |
| 54 | 35445 | QPSK | 384 | 402 | |
| 54 | 35445 | 16 QAM | 217 | 402 | |
| 55 | 36101 | QPSK | 384 | 403 | |
| 55 | 36101 | 16 QAM | 220 | 403 | |
| 56 | 36757 | QPSK | 384 | 404 | |
| 56 | 36757 | 16 QAM | 225 | 404 | |
| 57 | 37413 | QPSK | 384 | 406 | |
| 57 | 37413 | 16 QAM | 232 | 406 | |
| 58 | 38069 | QPSK | 384 | 407 | |
| 58 | 38069 | 16 QAM | 234 | 407 | |
| 59 | 38725 | QPSK | 384 | 408 | |
| 59 | 38725 | 16 QAM | 240 | 408 | |
| 60 | 39381 | QPSK | 384 | 409 | |
| 60 | 39381 | 16 QAM | 243 | 409 | |
| 61 | 40037 | QPSK | 384 | 410 | |
| 61 | 40037 | 16 QAM | 248 | 410 | |
| 62 | 40693 | QPSK | 384 | 411 | |
| 62 | 40693 | 16 QAM | 253 | 411 | |
| 63 | 41349 | QPSK | 384 | 412 | |
| 63 | 41349 | 16 QAM | 256 | 412 | |
| 64 | 42005 | QPSK | 384 | 413 | |
| 64 | 42005 | 16 QAM | 261 | 413 | |
| 65 | 42661 | QPSK | 384 | 414 | |
| 65 | 42661 | 16 QAM | 264 | 414 | |
| 66 | 43317 | QPSK | 384 | 415 | |
| 66 | 43317 | 16 QAM | 270 | 415 | |
| 67 | 43973 | QPSK | 384 | 416 | |
| 67 | 43973 | 16 QAM | 270 | 416 | |
| 68 | 44629 | QPSK | 384 | 417 | |
| 68 | 44629 | 16 QAM | 276 | 417 | |
| 69 | 45285 | QPSK | 384 | 417 | |
| 69 | 45285 | 16 QAM | 276 | 417 | |
| 70 | 45941 | QPSK | 384 | 418 | |
| 70 | 45941 | 16 QAM | 280 | 418 | |
| 71 | 46597 | QPSK | 384 | 419 | |
| 71 | 46597 | 16 QAM | 286 | 419 | |
| 72 | 47253 | QPSK | 384 | 420 | |
| 72 | 47253 | 16 QAM | 290 | 420 | |
| 73 | 47909 | QPSK | 384 | 421 | |
| 73 | 47909 | 16 QAM | 297 | 421 | |
| 74 | 48565 | QPSK | 384 | 422 | |
| 74 | 48565 | 16 QAM | 300 | 422 | |
| 75 | 49221 | QPSK | 384 | 423 | |
| 75 | 49221 | 16 QAM | 300 | 423 | |
| 76 | 49877 | QPSK | 384 | 423 | |
| 76 | 49877 | 16 QAM | 300 | 423 | |
| 77 | 50533 | QPSK | 384 | 424 | |
| 77 | 50533 | 16 QAM | 310 | 424 | |
| 78 | 51189 | QPSK | 384 | 425 | |
| 78 | 51189 | 16 QAM | 312 | 425 | |
| 79 | 51845 | QPSK | 384 | 426 | |
| 79 | 51845 | 16 QAM | 320 | 426 | |
| 80 | 52501 | QPSK | 384 | 427 | |
| 80 | 52501 | 16 QAM | 324 | 427 | |

| | | | | | |
|---|---|---|---|---|---|
| 81 | 53157 | QPSK | 384 | 427 | |
| 81 | 53157 | 16 QAM | 324 | 427 | |
| 82 | 53813 | QPSK | 384 | 428 | |
| 82 | 53813 | 16 QAM | 330 | 428 | |
| 83 | 54469 | QPSK | 384 | 429 | |
| 83 | 54469 | 16 QAM | 336 | 429 | |
| 84 | 55125 | QPSK | 384 | 430 | |
| 84 | 55125 | 16 QAM | 341 | 430 | |
| 85 | 55781 | QPSK | 384 | 430 | |
| 85 | 55781 | 16 QAM | 341 | 430 | |
| 86 | 56437 | QPSK | 384 | 431 | |
| 86 | 56437 | 16 QAM | 348 | 431 | |
| 87 | 57093 | QPSK | 384 | 432 | |
| 87 | 57093 | 16 QAM | 352 | 432 | |
| 88 | 57749 | QPSK | 384 | 433 | |
| 88 | 57749 | 16 QAM | 360 | 433 | |
| 89 | 58405 | QPSK | 384 | 433 | |
| 89 | 58405 | 16 QAM | 360 | 433 | |
| 90 | 59061 | QPSK | 384 | 434 | |
| 90 | 59061 | 16 QAM | 360 | 434 | |
| 91 | 59717 | QPSK | 384 | 435 | |
| 91 | 59717 | 16 QAM | 360 | 435 | |
| 92 | 60373 | QPSK | 384 | 435 | |
| 92 | 60373 | 16 QAM | 360 | 435 | |
| 93 | 61029 | QPSK | 384 | 436 | |
| 93 | 61029 | 16 QAM | 372 | 436 | |
| 94 | 61685 | QPSK | 384 | 437 | |
| 94 | 61685 | 16 QAM | 384 | 437 | |
| 95 | 62341 | QPSK | 384 | 437 | |
| 95 | 62341 | 16 QAM | 384 | 437 | |
| 96 | 62997 | QPSK | 384 | 438 | |
| 96 | 62997 | 16 QAM | 384 | 438 | |
| 97 | 63653 | QPSK | 384 | 439 | |
| 97 | 63653 | 16 QAM | 384 | 439 | |
| 98 | 64309 | QPSK | 384 | 439 | |
| 98 | 64309 | 16 QAM | 384 | 439 | |
| 99 | 64965 | QPSK | 384 | 440 | |
| 99 | 64965 | 16 QAM | 384 | 440 | |
| 100 | 65621 | QPSK | 384 | 441 | |
| 100 | 65621 | 16 QAM | 384 | 441 | |
| 101 | 66277 | QPSK | 384 | 441 | |
| 101 | 66277 | 16 QAM | 384 | 441 | |
| 102 | 66933 | QPSK | 384 | 442 | |
| 102 | 66933 | 16 QAM | 384 | 442 | |
| 103 | 67589 | QPSK | 384 | 442 | |
| 103 | 67589 | 16 QAM | 384 | 442 | |
| 104 | 68245 | QPSK | 384 | 443 | |
| 104 | 68245 | 16 QAM | 384 | 443 | |
| 105 | 68901 | QPSK | 384 | 444 | |
| 105 | 68901 | 16 QAM | 384 | 444 | |
| 106 | 69557 | QPSK | 384 | 444 | |
| 106 | 69557 | 16 QAM | 384 | 444 | |
| 107 | 70213 | QPSK | 384 | 445 | |
| 107 | 70213 | 16 QAM | 384 | 445 | |
| 108 | 70869 | QPSK | 384 | 445 | |

| | | | | | |
|---|---|---|---|---|---|
| 108 | 70869 | 16 QAM | 384 | 445 | |
| 109 | 71525 | QPSK | 384 | 446 | |
| 109 | 71525 | 16 QAM | 384 | 446 | |
| 110 | 72181 | QPSK | 384 | 448 | |
| 110 | 72181 | 16 QAM | 384 | 447 | |
| 111 | 72837 | QPSK | 384 | 448 | |
| 111 | 72837 | 16 QAM | 384 | 447 | |
| 112 | 73493 | QPSK | 384 | 448 | |
| 112 | 73493 | 16 QAM | 384 | 448 | |
| 113 | 74149 | QPSK | 384 | 448 | |
| 113 | 74149 | 16 QAM | 384 | 448 | |
| 114 | 74805 | QPSK | 384 | 449 | |
| 114 | 74805 | 16 QAM | 384 | 449 | |
| 115 | 75461 | QPSK | 384 | 449 | |
| 115 | 75461 | 16 QAM | 384 | 449 | |
| 116 | 76117 | QPSK | 384 | 450 | |
| 116 | 76117 | 16 QAM | 384 | 450 | |
| 117 | 76773 | QPSK | 384 | 450 | |
| 117 | 76773 | 16 QAM | 384 | 450 | |
| 118 | 77429 | QPSK | 384 | 451 | |
| 118 | 77429 | 16 QAM | 384 | 451 | |
| 119 | 78085 | QPSK | 384 | 451 | |
| 119 | 78085 | 16 QAM | 384 | 451 | |
| 120 | 78741 | QPSK | 384 | 452 | |
| 120 | 78741 | 16 QAM | 384 | 452 | |
| 121 | 79397 | QPSK | 384 | 453 | |
| 121 | 79397 | 16 QAM | 384 | 453 | |
| 122 | 80053 | QPSK | 384 | 453 | |
| 122 | 80053 | 16 QAM | 384 | 453 | |
| 123 | 80709 | QPSK | 384 | 455 | |
| 123 | 80709 | 16 QAM | 384 | 454 | |
| 124 | 81365 | QPSK | 384 | 455 | |
| 124 | 81365 | 16 QAM | 384 | 454 | |
| 125 | 82021 | QPSK | 384 | 455 | |
| 125 | 82021 | 16 QAM | 384 | 455 | |
| 126 | 82677 | QPSK | 384 | 455 | |
| 126 | 82677 | 16 QAM | 384 | 455 | |
| 127 | 83333 | QPSK | 384 | 456 | |
| 127 | 83333 | 16 QAM | 384 | 456 | |
| 128 | 83989 | QPSK | 384 | 456 | |
| 128 | 83989 | 16 QAM | 384 | 456 | |
| 129 | 84652 | QPSK | 384 | 457 | |
| 129 | 84652 | 16 QAM | 384 | 457 | |
| 130 | 85308 | QPSK | 384 | 457 | |
| 130 | 85308 | 16 QAM | 384 | 457 | |
| 131 | 85964 | QPSK | 384 | 457 | |
| 131 | 85964 | 16 QAM | 384 | 457 | |
| 132 | 86620 | QPSK | 384 | 458 | |
| 132 | 86620 | 16 QAM | 384 | 458 | |
| 133 | 87276 | QPSK | 384 | 458 | |
| 133 | 87276 | 16 QAM | 384 | 458 | |
| 134 | 87932 | QPSK | 384 | 459 | |
| 134 | 87932 | 16 QAM | 384 | 459 | |
| 135 | 88588 | QPSK | 384 | 459 | |
| 135 | 88588 | 16 QAM | 384 | 459 | |

| | | | | | |
|---|---|---|---|---|---|
| 136 | 89244 | QPSK | 384 | 460 | |
| 136 | 89244 | 16 QAM | 384 | 460 | |
| 137 | 89900 | QPSK | 384 | 460 | |
| 137 | 89900 | 16 QAM | 384 | 460 | |
| 138 | 90556 | QPSK | 384 | 461 | |
| 138 | 90556 | 16 QAM | 384 | 461 | |
| 139 | 91212 | QPSK | 384 | 461 | |
| 139 | 91212 | 16 QAM | 384 | 461 | |
| 140 | 91868 | QPSK | 384 | 462 | |
| 140 | 91868 | 16 QAM | 384 | 462 | |
| 141 | 92524 | QPSK | 384 | 462 | |
| 141 | 92524 | 16 QAM | 384 | 462 | |
| 142 | 93180 | 16 QAM | 384 | 463 | |
| 143 | 93836 | 16 QAM | 384 | 463 | |
| 144 | 94492 | 16 QAM | 384 | 463 | |
| 145 | 95148 | 16 QAM | 384 | 464 | |
| 146 | 95804 | 16 QAM | 384 | 464 | |
| 147 | 96460 | 16 QAM | 384 | 465 | |
| 148 | 97116 | 16 QAM | 384 | 465 | |
| 149 | 97772 | 16 QAM | 384 | 466 | |
| 150 | 98428 | 16 QAM | 384 | 466 | |
| 151 | 99084 | 16 QAM | 384 | 466 | |
| 152 | 99740 | 16 QAM | 384 | 467 | |
| 153 | 100396 | 16 QAM | 384 | 467 | |
| 154 | 101052 | 16 QAM | 384 | 468 | |
| 155 | 101708 | 16 QAM | 384 | 468 | |
| 156 | 102364 | 16 QAM | 384 | 468 | |
| 157 | 103020 | 16 QAM | 384 | 469 | |
| 158 | 103676 | 16 QAM | 384 | 469 | |
| 159 | 104332 | 16 QAM | 384 | 470 | |
| 160 | 104988 | 16 QAM | 384 | 470 | |
| 161 | 105644 | 16 QAM | 384 | 470 | |
| 162 | 106300 | 16 QAM | 384 | 471 | |
| 163 | 106956 | 16 QAM | 384 | 471 | |
| 164 | 107612 | 16 QAM | 384 | 472 | |
| 165 | 108268 | 16 QAM | 384 | 472 | |
| 166 | 108924 | 16 QAM | 384 | 472 | |
| 167 | 109580 | 16 QAM | 384 | 473 | |
| 168 | 110236 | 16 QAM | 384 | 473 | |
| 169 | 110892 | 16 QAM | 384 | 473 | |
| 170 | 111548 | 16 QAM | 384 | 474 | |
| 171 | 112204 | 16 QAM | 384 | 474 | |
| 172 | 112860 | 16 QAM | 384 | 474 | |
| 173 | 113516 | 16 QAM | 384 | 475 | |
| 174 | 114172 | 16 QAM | 384 | 475 | |
| 175 | 114828 | 16 QAM | 384 | 476 | |
| 176 | 115484 | 16 QAM | 384 | 476 | |
| 177 | 116140 | 16 QAM | 384 | 476 | |
| 178 | 116796 | 16 QAM | 384 | 477 | |
| 179 | 117452 | 16 QAM | 384 | 477 | |
| 180 | 118108 | 16 QAM | 384 | 477 | |
| 181 | 118764 | 16 QAM | 384 | 478 | |
| 182 | 119420 | 16 QAM | 384 | 478 | |
| 183 | 120076 | 16 QAM | 384 | 478 | |
| 184 | 120732 | 16 QAM | 384 | 479 | |

| | | | | | |
|---|---|---|---|---|---|
| 185 | 121388 | 16 QAM | 384 | 479 | |
| 186 | 122044 | 16 QAM | 384 | 479 | |
| 187 | 122700 | 16 QAM | 384 | 480 | |
| 188 | 123356 | 16 QAM | 384 | 480 | |
| 189 | 124012 | 16 QAM | 384 | 480 | |
| 190 | 124668 | 16 QAM | 384 | 481 | |
| 191 | 125324 | 16 QAM | 384 | 481 | |
| 192 | 125980 | 16 QAM | 384 | 481 | |
| 193 | 126636 | 16 QAM | 384 | 482 | |
| 194 | 127292 | 16 QAM | 384 | 482 | |
| 195 | 127948 | 16 QAM | 384 | 482 | |
| 196 | 128604 | 16 QAM | 384 | 483 | |
| 197 | 129260 | 16 QAM | 384 | 483 | |
| 198 | 129916 | 16 QAM | 384 | 483 | |
| 199 | 130572 | 16 QAM | 384 | 484 | |
| 200 | 131228 | 16 QAM | 384 | 484 | |
| 201 | 131884 | 16 QAM | 384 | 484 | |
| 202 | 132540 | 16 QAM | 384 | 485 | |
| 203 | 133196 | 16 QAM | 384 | 485 | |
| 204 | 133852 | 16 QAM | 384 | 485 | |
| 205 | 134508 | 16 QAM | 384 | 485 | |
| 206 | 135164 | 16 QAM | 384 | 486 | |
| 207 | 135820 | 16 QAM | 384 | 486 | |
| 208 | 136476 | 16 QAM | 384 | 486 | |
| 209 | 137132 | 16 QAM | 384 | 487 | |
| 210 | 137788 | 16 QAM | 384 | 487 | |
| 211 | 138444 | 16 QAM | 384 | 487 | |
| 212 | 139100 | 16 QAM | 384 | 488 | |
| 213 | 139756 | 16 QAM | 384 | 488 | |
| 214 | 140412 | 16 QAM | 384 | 488 | |
| 215 | 141068 | 16 QAM | 384 | 488 | |
| 216 | 141724 | 16 QAM | 384 | 489 | |
| 217 | 142380 | 16 QAM | 384 | 489 | |
| 218 | 143036 | 16 QAM | 384 | 489 | |
| 219 | 143692 | 16 QAM | 384 | 491 | |
| 220 | 144348 | 16 QAM | 384 | 491 | |
| 221 | 145004 | 16 QAM | 384 | 491 | |
| 222 | 145660 | 16 QAM | 384 | 491 | |
| 223 | 146316 | 16 QAM | 384 | 491 | |
| 224 | 146972 | 16 QAM | 384 | 491 | |
| 225 | 147628 | 16 QAM | 384 | 491 | |
| 226 | 148284 | 16 QAM | 384 | 492 | |
| 227 | 148940 | 16 QAM | 384 | 492 | |
| 228 | 149596 | 16 QAM | 384 | 492 | |
| 229 | 150252 | 16 QAM | 384 | 492 | |
| 230 | 150908 | 16 QAM | 384 | 493 | |
| 231 | 151564 | 16 QAM | 384 | 493 | |
| 232 | 152220 | 16 QAM | 384 | 493 | |
| 233 | 152876 | 16 QAM | 384 | 493 | |
| 234 | 153532 | 16 QAM | 384 | 494 | |
| 235 | 154188 | 16 QAM | 384 | 494 | |
| 236 | 154844 | 16 QAM | 384 | 494 | |
| 237 | 155500 | 16 QAM | 384 | 495 | |
| 238 | 156156 | 16 QAM | 384 | 495 | |
| 239 | 156812 | 16 QAM | 384 | 495 | |

| | | | | | |
|---|---|---|---|---|---|
| 240 | 157468 | 16 QAM | 384 | 495 | |
| 241 | 158124 | 16 QAM | 384 | 496 | |
| 242 | 158780 | 16 QAM | 384 | 496 | |
| 243 | 159436 | 16 QAM | 384 | 496 | |
| 244 | 160092 | 16 QAM | 384 | 496 | |
| 245 | 160748 | 16 QAM | 384 | 497 | |
| 246 | 161404 | 16 QAM | 384 | 497 | |
| 247 | 162060 | 16 QAM | 384 | 497 | |
| 248 | 162716 | 16 QAM | 384 | 497 | |
| 249 | 163372 | 16 QAM | 384 | 498 | |
| 250 | 164028 | 16 QAM | 384 | 498 | |
| 251 | 164684 | 16 QAM | 384 | 498 | |
| 252 | 165340 | 16 QAM | 384 | 498 | |
| 253 | 165996 | 16 QAM | 384 | 499 | |
| 254 | 166652 | 16 QAM | 384 | 499 | |
| 255 | 167308 | 16 QAM | 384 | 499 | |
| 256 | 167964 | 16 QAM | 384 | 499 | |
| 257 | 168627 | 16 QAM | 384 | 501 | |
| 258 | 169283 | 16 QAM | 384 | 501 | |
| 259 | 169939 | 16 QAM | 384 | 501 | |
| 260 | 170595 | 16 QAM | 384 | 501 | |
| 261 | 171251 | 16 QAM | 384 | 501 | |
| 262 | 171907 | 16 QAM | 384 | 501 | |
| 263 | 172563 | 16 QAM | 384 | 501 | |
| 264 | 173219 | 16 QAM | 384 | 501 | |
| 265 | 173875 | 16 QAM | 384 | 501 | |
| 266 | 174531 | 16 QAM | 384 | 502 | |
| 267 | 175187 | 16 QAM | 384 | 502 | |
| 268 | 175843 | 16 QAM | 384 | 502 | |
| 269 | 176499 | 16 QAM | 384 | 502 | |
| 270 | 177155 | 16 QAM | 384 | 503 | |
| 271 | 177811 | 16 QAM | 384 | 503 | |
| 272 | 178467 | 16 QAM | 384 | 503 | |
| 273 | 179123 | 16 QAM | 384 | 503 | |
| 274 | 179779 | 16 QAM | 384 | 504 | |
| 275 | 180435 | 16 QAM | 384 | 504 | |
| 276 | 181091 | 16 QAM | 384 | 504 | |
| 277 | 181747 | 16 QAM | 384 | 504 | |
| 278 | 182403 | 16 QAM | 384 | 504 | |
| 279 | 183059 | 16 QAM | 384 | 505 | |
| 280 | 183715 | 16 QAM | 384 | 505 | |
| 281 | 184371 | 16 QAM | 384 | 505 | |
| 282 | 185027 | 16 QAM | 384 | 505 | |

### 18.3.1.5 Generic test procedure radio bearers on MTCH

See 14.1.5 for test procedure

### 18.3.1.6 Generic test procedure for radio bearers on MBSFN MTCH

#### 18.3.1.6.1 Initial conditions

System Simulator:

- 1 MBMS MBSFN Cell 31 with default parameters.

In addition to broadcasting System Information, MCCH messages are transmitted by the SS using MBMS configuration C1 and Default1 MCCH scheduling (No ongoing service). See subclause 11.1 of TS 34.108.

- 1 unicast carrier Cell 1 with default parameters.

User Equipment:

- On the unicast carrier cell the UE is in registered Idle Mode on PS (state 3) if the UE only supports PS domain or registered Idle Mode on CS/PS (state 7) if the UE supports both CS and PS domains, as specified in clause 7.2.2 of TS 34.108.

- The UE is in MBSFN Idle mode with one activated service as specified in clause 7.6.4 of TS 34.108. The UE has selected the broadcast service to be provided by the SS on the MBSFN cell (included in MBMS_ACTIVATED_SERVICES variable).

#### 18.3.1.6.2 Test procedure

a) The SS sends CLOSE UE TEST LOOP via the unicast carrier cell, requesting activation of Test Loop Mode 3 specifying the MBSFN MBMS short transmission identity of the MTCH for the activated service

b) The SS notifies on MCCH about the start of an MBMS session and waits for the UE to activate MTCH reception at the specified activation time.

c) At the specified activation time the UE establishes the p-t-m radio bearer and closes the UE test loop. The UE sends CLOSE UE TEST LOOP COMPLETE..

d) The SS broadcasts 10 RLC SDUs on the MTCH configured on the concerned MBMS radio bearer. The MBMS data is broadcast using RLC SDU size and transport format as specified for sub-test 1.

e) The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the UE has received at least one RLC SDU.

f) Repeat steps g) and h) for the remaining sub-tests.

g) The SS broadcast 10 RLC SDUs on the MTCH configured on the concerned MBMS radio bearer. The MBMS data is broadcasted using RLC SDU size and transport format as specified for the sub-test under test.

h) The SS retrieves the number of RLC SDUs on MTCH counted by the UE by sending the UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST message. The SS checks that the UE has received at least one RLC SDU of the MBMS data sent in step g).

i) The SS deactivates the UE test loop mode 3.

NOTE 1: For a UE in UE test loop mode 3 the RLC SDU counter value is only reset upon reception of the CLOSE UE TEST LOOP message configuring UE test loop mode 3. To enable the SS to measure the number of received RLC SDUs for the different sub-tests the SS needs to record the reported values for each sub-test and perform the checking of the reported value relative to the previously reported value.

Expected sequence

| Step | Direction | | Carrier | Message | Comment |
|---|---|---|---|---|---|
| | UE | SS | | | |
| 1 | ← | | U | ACTIVATE RB TEST MODE | |
| 2 | → | | U | ACTIVATE RB TEST MODE COMPLETE | |
| 3 | ← | | U | CLOSE UE TEST LOOP | Loop back mode 3 on MTCH for the activated service. |
| 4 | ← | | M | MBMS MCCH Message Configuration C4 | Includes the service activated at UE in the modified services list for one modification period. |
| 5 | ← | | M | MBMS MCCH Message Configuration C2 | No modified services. One ongoing service corresponding to that activated at the UE. |
| 6 | → | | U | CLOSE UE TEST LOOP COMPLETE | The UE establishes the MTCH according to the activation time and closes the test loop. |
| 7 | | SS | M | | The SS transmits 10 RLC SDUs on the MTCH. The MBMS data is broadcast using RLC SDU size and transport format as specified for sub-test 1. |
| 8 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | . |
| 9 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than zero and records the value. |
| 10 | | SS | | | The SS repeats steps 10 to 12 for the remaining sub-tests (sub-test 2 etc.). |
| 11 | | SS | M | | The SS transmits 10 RLC SDUs on the MTCH. The MBMS data is broadcast using RLC SDU size and transport format as specified for the current sub-test under test. |
| 12 | ← | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER REQUEST | |
| 13 | → | | U | UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE | The SS checks that the number of reported RLC PDUs is greater than the recorded value from the previous sub-test. The SS records the reported value. |
| 14 | ← | | U | OPEN UE TEST LOOP | |
| 15 | → | | U | OPEN UE TEST LOOP COMPLETE | |
| 16 | ← | | U | DEACTIVATE RB TEST MODE | |
| 17 | → | | U | DEACTIVATE RB TEST MODE COMPLETE | |

Specific Message Contents

MBMS MODIFIED SERVICES INFORMATION (Step 4)

| Information Element | Value/remark |
|---|---|
| Message type | |
| Modified service list | |
| - MBMS Transmission identity | |
| - MBMS Service ID | 1 |
| - MBMS Session ID | 1 |
| - MBMS required UE action | Acquire PTM RB info |
| MBMS p-t-m activation time | SS shall choose a value which is sufficiently far ahead for the UE to establish the MTCH |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Steps 9)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than zero |

UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE (Steps 13)

| Information Element | Value/remark |
|---|---|
| RLC SDU Counter Value | Check that the number is greater than the value reported at the previous sub-test. |

## 18.3.1.7 General information for interoperability radio bearer tests for E-DCH and HS-DSCH combinations

### 18.3.1.7.1 Generic test procedure for HS-DSCH and E-DCH radio bearer combinations

This procedure is used to test E-DCH radio bearer combinations. The procedure is run once for each sub-test of the actual E-DCH radio bearer test case.

Definition of test variables:

| | |
|---|---|
| $N_{\underline{TS}}$ | The number of HS-DSCH timeslots as specified by the sub-test. This parameter is dependent on the UE capability. |
| $N_{\underline{codes}}$ | The number of HS-DSCH codes (1..32) as specified by the sub-test. This parameter is not dependent on UE capability, all UEs can support 32 HS-DSCH codes. |
| $M$ | The type of modulation scheme (QPSK, 16QAM) as specified by the sub-test. |
| $N_{PDUs}$ | The number of MAC-d PDUs for the DTCH(s) mapped on HS-DSCH as specified by the sub-test. |
| $H_{\underline{ID}}$ | The HARQ process identifier (0..3) as specified by the sub-test. |

#### 18.3.1.7.1.1 Initial conditions

UE in idle mode

#### 18.3.1.7.1.2 Test procedure

a) The SS establish the reference radio bearer configuration as specified in TS 34.108, clause 6.11 for the actual radio bearer test. For the case when the reference radio bearer configuration includes radio bearers for both CS and PS domain then the radio bearer setup procedure has to be performed once per domain. The first radio bearer setup procedure shall perform configuration of the physical channel for the radio bearer combination under test as well as the transport channels for the CS radio bearer(s). The second radio bearer procedure shall perform the configuration for the transport channel for the PS radio bearers . The Physical channel configuration shall be done for both CS and PS radio bearers combined. Here the transport format combination set for both CS and PS radio bearers shall be provided. See note 1 and note 3.

b) For DTCH mapped to DCH in uplink the SS limits the UE allowed uplink transport format combinations according to the "Restricted UL TFCIs", as specified for the sub-test of the actual radio bearer test, using the RRC transport format combination control procedure. See note 2.

c) The SS closes the test loop using UE test loop mode 1 and set the UL RLC SDU size parameter, for all radio bearers under test, according to the "UL RLC SDU size" value as specified for the sub-test of the actual radio bearer test.

d) The SS issues an absolute grant that allows the UE to send at maximum bit rate.

e) The SS sets the HS-DSCH TFRC test point as specified for the sub-test ($N_{PDUs}$ , $M$, $N\underline{codes}$, $N_{\underline{TS}}$ and $TFRI$).

f) The SS sets $H_{\underline{ID}}$ to the number of HARQ processes specified for the sub-test.

h) The SS transmits, for each DTCH mapped to HS-DSCH, a DL RLC SDUs having the size equal the to the “Test data size” as specified for the sub-test concatenated into a MAC-hs PDU using the selected TFRC and $H_{ID}$. If the radio bearer combination under test includes downlink DTCHs mapped to DCH then the SS transmits, for all DTCHs mapped to DCH, one or more RLC SDUs having the size equal to the "Test data size" as specified for the sub-test.

i) The SS checks that the content of the UE returned RLC SDUs have the correct content and are received having the correct transport format. See TS 34.109 [10] clause 5.3.2.6.2 for details regarding the UE loopback of RLC SDUs.

j) The SS opens the UE test loop.

l) The SS release the radio bearer. See note 4.

m) Steps a) to l) are repeated for all sub-tests. See note 5.

n) The SS may optionally deactivate the radio bearer test mode.

NOTE 1: The SS configures the physical channel parameters according to the actual UE category under test. The number of soft channel bits per HARQ process is split equally among the number of HARQ processes configured for the actual sub-test - i.e. “Total number of soft channel bits” for the UE category according to table 18.3.1.4.1.1 divided by the number of HARQ processes under test. The number of reordering queues are 1 for single HS-DSCH radio bearer configurations. The MAC-hs window size, RLC Transmission window size and RLC Receiving window size shall be configured as specified for the actual sub-test.

NOTE 2: The restricted set of uplink TFCIs shall contain all possible TFCI that could happen in a sub-test. The actual TTI of the different radio bearers and signaling radio bearers as well as the possible UE processing delays shall be taken into consideration. The restricted set of TFCIs must comply with the minimum set of TFCIs as specified in TS 25.331, clause 8.6.5.2.

NOTE 3: The MAC-hs window size and RLC Receiver and transmitter window sizes need to be chosen such that the UE capability for “Minimum total RLC AM and MAC-hs buffer size” is not exceeded for the UE category under test.

NOTE 4: The Secondary scrambling code in the RADIO BEARER RELEASE message is set to the same value used in the RADIO BEARER SETUP MESSAGE.

NOTE 5: CS radio bearer is setup once during the first sub-test.

Expected sequence (repeated for each sub-test, see note 3)

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| **Case A: PS radio bearers only** | | | | |
| A1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| A2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (PS domain, P-TMSI) |
| A3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| A4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| A5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| A6 | --> | | SERVICE REQUEST (DCCH) | GMM |
| A7 | <-- | | SECURITY MODE COMMAND | RRC see note 1 |
| A8 | --> | | SECURITY MODE COMPLETE | RRC see note 1 |
| A9 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| A10 | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| A11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>.<br>PS radio bearer(s) are configured. For the PS radio bearer(s) the 'pdcp info' IE shall be omitted. |
| A12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| **End of branch for Case A** | | | | |
| **Case B: CS + PS radio bearers** | | | | |
| B1 | <-- | | SYSTEM INFORMATION (BCCH) | Broadcast |
| B2 | <-- | | PAGING TYPE 1 (PCCH) | Paging (CS domain, TMSI) |
| B3 | --> | | RRC CONNECTION REQUEST (CCCH) | RRC |
| B4 | <-- | | RRC CONNECTION SETUP (CCCH) | RRC |
| B5 | --> | | RRC CONNECTION SETUP COMPLETE (DCCH) | RRC |
| B6 | --> | | PAGING RESPONSE (DCCH) | RR |
| B6a | <-- | | AUTHENTICATION REQUEST | |
| B6b | --> | | AUTHENTICATION RESPONSE | |
| B7 | <-- | | SECURITY MODE COMMAND | |
| B8 | --> | | SECURITY MODE COMPLETE | |
| B9 | <-- | | PAGING TYPE 2 (DCCH) | TMSI (GSM-MAP)/ P-TMSI |
| B9a | --> | | SERVICE REQUEST (DCCH) | GMM |
| B9b | <-- | | SECURITY MODE COMMAND | RRC See note 2 |
| B9c | --> | | SECURITY MODE COMPLETE | RRC |
| B10 | <-- | | ACTIVATE RB TEST MODE (DCCH) | TC |
| B10a | --> | | ACTIVATE RB TEST MODE COMPLETE (DCCH) | TC |
| B11 | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>CS radio bearer(s) are configured |
| B12 | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B12a | <-- | | RADIO BEARER SETUP (DCCH) | RRC<br>PS radio bearer(s) are configured. For the PS radio bearer the 'pdcp info' IE shall be omitted. |
| B12b | --> | | RADIO BEARER SETUP COMPLETE (DCCH) | RRC |
| B12c | <-- | | TRANSPORT FORMAT COMBINATION CONTROL (DCCH) | RRC<br>Transport format combinations is limited to "Restricted UL TFCIs", as specified for the sub-test |
| **End of branch for Case B** | | | | |
| 13 | | | Void | |
| 14 | <-- | | CLOSE UE TEST LOOP (DCCH) | TC<br>UE test mode 1<br>RLC SDU size is for every active radio bearer set to "UL RLC SDU size", as specified for the sub-test. |
| 15 | --> | | CLOSE UE TEST LOOP COMPLETE (DCCH) | TC |

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 16 | SS | | | The SS sets the HS-DSCH TFRC test point ($N_{PDUs}$ , $M$, $N$codes, $N_{TS}$ and TFRI). and the number of HARQ processes as as specified for the sub-test. |
| 17 | <-- | | DOWNLINK MAC-hs PDU (HS-DSCH#1)<br>…<br>DOWNLINK MAC-hs PDU (HS-DSCH#N)<br><br>DL RLC SDU (DL DCH#1)<br>…<br>DL RLC SDU (DL DCH#M) | For each DTCH mapped on HS-DSCH the SS sends test data.<br>For each DTCH mapped on DCH the SS sends test data using the downlink transport format combination under test. |
| 18 | --> | | UPLINK RLC SDUs | The SS checks, for each DTCH, that the content and transport format of the received UL RLC SDUs are correct. |
| 19 | <-- | | OPEN UE TEST LOOP (DCCH) | TC |
| 20 | --> | | OPEN UE TEST LOOP COMPLETE (DCCH) | TC |
| 21 | | | RB RELEASE | RRC |
| 22 | <-- | | DEACTIVATE RB TEST MODE | TC<br>Optional step |
| 23 | --> | | DEACTIVATE RB TEST MODE COMPLETE | TC<br>Optional step |

NOTE 1 In addition to activate integrity protection Step 6 and Step 7 are inserted in order to stop T3317 timer in the UE, which starts after transmitting SERVICE REQUEST message.

NOTE 2 For case B (CS+PS radio bearers) the second security mode procedure is needed to enable testing of ciphering on the PS radio bearers.

NOTE 3 For case A (PS radio bearers) steps A1 to A10 will be executed once during first sub-test. For case B (CS+PS radio bearers) steps B1 to B12 will be executed once during first sub-test.

## 18.3.2 Combinations on DPCH

### 18.3.2.1 Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH

Test to verify establishment and signalling of stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.1.

The test case is performed by running test case 9.4.1 (Location updating / accepted) using the stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.1.

### 18.3.2.1a Stand-alone UL:1.7 DL:1.7 kbps SRBs for DCCH (multiframe)

Test to verify establishment and signalling of stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.1a.

The test case is performed by running test case 9.4.1 (Location updating / accepted) using the stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.1a.

### 18.3.2.2 Stand-alone UL:3.4 DL:3.4 kbps SRBs for DCCH

Test to verify establishment and signalling of stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.2.

The test case is performed by running test case 9.4.1 (Location updating / accepted) using the stand-alone signalling reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.2.

### 18.3.2.3 Stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH

Implicitly tested.

NOTE The stand-alone UL:13.6 DL:13.6 kbps SRBs for DCCH in TS 34.108, clause 6.11.6.4.1.3 is the default signalling radio bearer used in the generic setup procedure as specified in TS 34.108 clause 7.

### 18.3.2.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.4.1 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signalled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

#### 18.3.2.4.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.4.

#### 18.3.2.4.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

#### 18.3.2.4.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x81); RB6/TF1 (1x103); and RB7/TF1 (1x60).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.
   - for sub-test 2: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS

### 18.3.2.4a Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL:(12.2 7.95 5.9 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 18.3.2.4a.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.4a.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.4a.

18.3.2.4a.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0) |
| UL_TFC5 | (TF5, TF4, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF0, TF1) |
| UL_TFC9 | (TF3, TF2, TF0, TF1) |
| UL_TFC10 | (TF4, TF3, TF0, TF1) |
| UL_TFC11 | (TF5, TF4, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x60 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x84 | N/A | N/A |
| | TF4, bits | 1x75 | 1x103 | N/A | N/A |
| | TF5, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0) |
| DL_TFC5 | (TF5, TF4, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF0, TF1) |
| DL_TFC9 | (TF3, TF2, TF0, TF1) |
| DL_TFC10 | (TF4, TF3, TF0, TF1) |
| DL_TFC11 | (TF5, TF4, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 39 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 60 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 60 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10 | RB5: 75 bits<br>RB6: 84 bits<br>RB7: 60 bits | RB5: 75 bits<br>RB6: 84 bits<br>RB7: No data |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits | RB5: 81 bits<br>RB6: 103 bits<br>RB7: 60 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.

See clause 18.3.1.1 for test procedure.

### 18.3.2.4a.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53)
   - for sub-test 3: RB5/TF3 (1x55) and RB6/TF2 (1x63)
   - for sub-test 4: RB5/TF4 (1x75) and RB6/TF3 (1x84)
   - for sub-test 5: RB5/TF5 (1x81), RB6/TF4 (1x103) and RB7/TF1 (1x60)

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.

   - for sub-test 2,3 and 4: an RLC SDU on RB5 and RB6 having the same content as sent by SS; and no data shall be received on RB7.

   - for sub-test 5: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS.

## 18.3.2.5 Conversational / speech / UL:10.2 DL:10.2 kbps / CS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.3.2.5.1 Conformance requirement

See clause 18.3.2.4.1.

### 18.3.2.5.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.5.

### 18.3.2.5.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65(alt. 1x0) | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x99 | 1x40 | 1x148 |
| | TF2, bits | 1x65 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65(alt. 1x0) | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x99 | 1x40 | 1x148 |
| | TF2, bits | 1x65 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.3.1.1 for test procedure.

#### 18.3.2.5.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x65); RB6/TF1 (1x99); and RB7/TF1 (1x40).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6 or RB7.
   - for sub-test 2: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by SS.

### 18.3.2.5a Conversational / speech / UL:(10.2, 6.7, 5.9, 4.75) DL:(10.2, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

#### 18.3.2.5a.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.5a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.5a.

#### 18.3.2.5a.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65(alt. 1x0) | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x40 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A | N/A |
| | TF4, bits | 1x58 | 1x99 | N/A | N/A |
| | TF5, bits | 1x65 | N/A | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0, TF0) |
| UL_TFC3 | (TF3, TF2, TF0, TF0) |
| UL_TFC4 | (TF4, TF3, TF0, TF0) |
| UL_TFC5 | (TF5, TF4, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF0, TF1) |
| UL_TFC9 | (TF3, TF2, TF0, TF1) |
| UL_TFC10 | (TF4, TF3, TF0, TF1) |
| UL_TFC11 | (TF5, TF4, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x65(alt. 1x0) | 0x99 | 0x40 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x40 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A | N/A |
| | TF4, bits | 1x58 | 1x99 | N/A | N/A |
| | TF5, bits | 1x65 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0, TF0) |
| DL_TFC3 | (TF3, TF2, TF0, TF0) |
| DL_TFC4 | (TF4, TF3, TF0, TF0) |
| DL_TFC5 | (TF5, TF4, TF1, TF0) |
| DL_TFC6 | (TF0, TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF0, TF1) |
| DL_TFC9 | (TF3, TF2, TF0, TF1) |
| DL_TFC10 | (TF4, TF3, TF0, TF1) |
| DL_TFC11 | (TF5, TF4, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 39 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 39 bits<br>RB6: No data<br>RB7: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8 | RB5: 42 bits<br>RB6: 53 bits<br>RB7: 40 bits | RB5: 42 bits<br>RB6: 53 bits<br>RB7: No data |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9 | RB5: 55 bits<br>RB6: 63 bits<br>RB7: 40 bits | RB5: 55 bits<br>RB6: 63 bits<br>RB7: No data |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10 | RB5: 58 bits<br>RB6: 76 bits<br>RB7: 40 bits | RB5: 58 bits<br>RB6: 76 bits<br>RB7: No data |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits | RB5: 65 bits<br>RB6: 99 bits<br>RB7: 40 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.

See clause 18.3.1.1 for test procedure.

### 18.3.2.5a.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53)
   - for sub-test 3: RB5/TF3 (1x55) and RB6/TF2 (1x63)
   - for sub-test 4: RB5/TF4 (1x58) and RB6/TF3 (1x76)
   - for sub-test 5: RB5/TF5 (1x65), RB6/TF4 (1x99) and RB7/TF1 (1x40)

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by the SS; and no data shall be received on RB6 or RB7.

   - for sub-test 2, 3 and 4: an RLC SDU on RB5 and RB6 having the same content as sent by the SS; and no data shall be received on RB7.

   - for sub-test 5: an RLC SDU on each of RB5, RB6 and RB7 having the same content as sent by the SS.

## 18.3.2.6 Conversational / speech / UL:7.95 DL:7.95 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.3.2.6.1 Conformance requirement

See clause 18.3.2.4.1.

### 18.3.2.6.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.6.

### 18.3.2.6.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x75(alt. 1x0) | 0x84 | 0x148 |
| | TF1, bits | 1x39 | 1x84 | 1x148 |
| | TF2, bits | 1x75 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x75(alt. 1x0) | 0x84 | 0x148 |
| | TF1, bits | 1x39 | 1x84 | 1x148 |
| | TF2, bits | 1x75 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 84 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 75 bits<br>RB6: 84 bits | RB5: 75 bits<br>RB6: 84 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.3.1.1 for test procedure.

.

#### 18.3.2.6.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x75) and RB6/TF1 (1x84).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS.

### 18.3.2.7 Conversational / speech / UL:7.4 DL:7.4 kbps / CS RAB+ UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.7.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.7.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.7.

#### 18.3.2.7.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x61 (alt. 1x0) | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x87 | 1x148 |
| | TF2, bits | 1x61 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x61 (alt. 1x0) | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x87 | 1x148 |
| | TF2, bits | 1x61 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 87 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 61 bits<br>RB6: 87 bits | RB5: 61 bits<br>RB6: 87 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.3.1.1 for test procedure.

### 18.3.2.7.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x61) and RB6/TF1 (1x87).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.

   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

## 18.3.2.7a Conversational / speech / UL:(7.4, 6.7, 5.9, 4.75) DL:(7.4, 6.7, 5.9, 4.75) kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 18.3.2.7a.1 Conformance requirement

See clause 18.3.2.4.1.

### 18.3.2.7a.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.7a.

### 18.3.2.7a.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x61(alt. 1x0) | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A |
| | TF4, bits | 1x58 | 1x87 | N/A |
| | TF5, bits | 1x61 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7,DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF3, TF2, TF0) |
| UL_TFC4 | (TF4, TF3, TF0) |
| UL_TFC5 | (TF5, TF4, TF0) |
| UL_TFC6 | (TF0, TF0, TF1) |
| UL_TFC7 | (TF1, TF0, TF1) |
| UL_TFC8 | (TF2, TF1, TF1) |
| UL_TFC9 | (TF3, TF2, TF1) |
| UL_TFC10 | (TF4, TF3, TF1) |
| UL_TFC11 | (TF5, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x61 (alt. 1x0) | 0x87 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | 1x63 | N/A |
| | TF3, bits | 1x55 | 1x76 | N/A |
| | TF4, bits | 1x58 | 1x87 | N/A |
| | TF5, bits | 1x61 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF3, TF2, TF0) |
| DL_TFC4 | (TF4, TF3, TF0) |
| DL_TFC5 | (TF5, TF4, TF0) |
| DL_TFC6 | (TF0, TF0, TF1) |
| DL_TFC7 | (TF1, TF0, TF1) |
| DL_TFC8 | (TF2, TF1, TF1) |
| DL_TFC9 | (TF3, TF2, TF1) |
| DL_TFC10 | (TF4, TF3, TF1) |
| DL_TFC11 | (TF5, TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC7 | RB5: 39 bits<br>RB6: 87 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC8 | RB5: 42 bits<br>RB6: 53 bits | RB5: 42 bits<br>RB6: 53 bits |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC9 | RB5: 55 bits<br>RB6: 63 bits | RB5: 55 bits<br>RB6: 63 bits |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC10 | RB5: 58 bits<br>RB6: 76 bits | RB5: 58 bits<br>RB6: 76 bits |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 61 bits<br>RB6: 87 bits | RB5: 61 bits<br>RB6: 87 bits |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC5 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.

See clause 18.3.1.1 for test procedure.

#### 18.3.2.7a.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53)
   - for sub-test 3: RB5/TF3 (1x55) and RB6/TF2 (1x63)
   - for sub-test 4: RB5/TF4 (1x58) and RB6/TF3 (1x76)
   - for sub-test 5: RB5/TF5 (1x61) and RB6/TF4 (1x87)
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by the SS; and no data shall be received on RB6.
   - for sub-test 2 to 5: an RLC SDU on RB5 and RB6 having the same content as sent by the SS.

### 18.3.2.8 Conversational / speech / UL:6.7 DL:6.7 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.8.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.8.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.8.

#### 18.3.2.8.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x58(alt. 1x0) | 0x76 | 0x148 |
| | TF1, bits | 1x39 | 1x76 | 1x148 |
| | TF2, bits | 1x58 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x58(alt. 1x0) | 0x76 | 0x148 |
| | TF1, bits | 1x39 | 1x76 | 1x148 |
| | TF2, bits | 1x58 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 76 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 58 bits<br>RB6: 76 bits | RB5: 58 bits<br>RB6: 76 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.3.1.1 for test procedure.

#### 18.3.2.8.4 Test requirements

See clause 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x58) and RB6/TF1 (1x76).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

### 18.3.2.9 Conversational / speech / UL:5.9 DL:5.9 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.9.1 Conformance requirement

See clause 18.3.2.4.1.

18.3.2.9.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.9.

18.3.2.9.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x55(alt. 1x0) | 0x63 | 0x148 |
| | TF1, bits | 1x39 | 1x63 | 1x148 |
| | TF2, bits | 1x55 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x55 (alt. 1x0) | 0x63 | 0x148 |
| | TF1, bits | 1x39 | 1x63 | 1x148 |
| | TF2, bits | 1x55 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 63 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 55 bits<br>RB6: 63 bits | RB5: 55 bits<br>RB6: 63 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.3.1.1 for test procedure.

#### 18.3.2.9.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x55) and RB6/TF1 (1x63).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

### 18.3.2.10 Conversational / speech / UL:5.15 DL:5.15 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH

#### 18.3.2.10.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.10.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.10.

#### 18.3.2.10.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x49 (alt. 1x0) | 0x54 | 0x148 |
| | TF1, bits | 1x39 | 1x54 | 1x148 |
| | TF2, bits | 1x49 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x49 (alt. 1x0) | 0x54 | 0x148 |
| | TF1, bits | 1x39 | 1x54 | 1x148 |
| | TF2, bits | 1x49 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 54 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 49 bits<br>RB6: 54 bits | RB5: 49 bits<br>RB6: 54 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.3.1.1 for test procedure.

#### 18.3.2.10.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x49) and RB6/TF1 (1x54).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

### 18.3.2.11 Conversational / speech / UL:4.75 DL:4.75 kbps / CS RAB + UL:1.7 DL:1.7 kbps SRBs for DCCH

#### 18.3.2.11.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.11.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.11.

18.3.2.11.3 Method of test

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x49(alt.1x0 ) | 0x53 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | N/A | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0X42 (alt.1x0 ) | 0x53 | 0x148 |
| | TF1, bits | 1x39 | 1x53 | 1x148 |
| | TF2, bits | 1x42 | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (note 2) | Test data size (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39 bits<br>RB6: 53 bits | RB5: 39 bits<br>RB6: No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5, | RB5: 42 bits<br>RB6: 53 bits | RB5: 42 bits<br>RB6: 53 bits |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.3.1.1 for test procedure.

#### 18.3.2.11.4 Test requirements

See clause 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x39).
   - for sub-test 2: RB5/TF2 (1x42) and RB6/TF1 (1x53).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS; and no data shall be received on RB6.
   - for sub-test 2: an RLC SDU on each of RB5 and RB6 having the same content as sent by SS

### 18.3.2.12 Conversational / unknown / UL:28.8 DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.12.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.12.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.12.

#### 18.3.2.12.3 Method of test

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication | FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | FALSE |

Uplink TFS:

| | TFI | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note2 ) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 576 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.3.1.1 for test procedure.

#### 18.3.2.12.4 Test requirements

See clause 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

### 18.3.2.13 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.13.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.13.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.13.

18.3.2.13.3 Method of test

Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 2x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 2x640 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See clause 18.3.1.1 for test procedure.

#### 18.3.2.13.4 Test requirements

See clause 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (2x640).
3. At step 15 the UE shall return
   - for sub-test 1: two RLC SDUs on RB5 having the same content as sent by SS.

### 18.3.2.14 Conversational / unknown / UL:32 DL:32 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.14.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.14.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.14.

#### 18.3.2.14.3 Method of test

##### Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication | FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | FALSE |

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 1x640 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 1x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 640 | RB5: 640 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

#### 18.3.2.14.4 Test requirements

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x640).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

### 18.3.2.15 Streaming / unknown / UL:14.4/DL:14.4 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.15.1 Conformance requirement

See 18.3.2.4.1.

18.3.2.15.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.15.

18.3.2.15.3 Method of test

Uplink TFS:

| | TFI | RB5 (14.4 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | TFI | RB5 (14.4 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 576 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

18.3.2.15.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

## 18.3.2.16 Streaming / unknown / UL:28.8/DL:28.8 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.3.2.16.1 Conformance requirement

See 18.3.2.4.1.

### 18.3.2.16.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.16.

### 18.3.2.16.3 Method of test

Uplink TFS:

| | TFI | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | | RB5 (28.8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 576 | RB5: 576 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

#### 18.3.2.16.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as sent by SS.

### 18.3.2.17 Streaming / unknown / UL:57.6/DL:57.6 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.17.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.17.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.17.

#### 18.3.2.17.3 Method of test

##### Initial Conditions

The following RLC Info parameter values shall be set by the SS:

| | |
|---|---|
| Uplink RLC<br>TM RLC<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard<br>Segmentation indication | <br><br><br><br><br>100ms<br>FALSE |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

Uplink TFS:

| | TFI | RB5 (57.6 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |
| | TF3, bits | 3x576 | N/A |
| | TF4, bits | 4x576 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (57.6 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x576 | 0x148 |
| | TF1, bits | 1x576 | 1x148 |
| | TF2, bits | 2x576 | N/A |
| | TF3, bits | 3x576 | N/A |
| | TF4, bits | 4x576 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (note) | Test data size (bits) (note) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5, | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 576 | RB5: 576 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 576 | RB5: 2x576 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 576 | RB5: 3x576 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 576 | RB5: 4x576 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.2.17.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x576).
   - for sub-test 2: RB5/TF2 (2x576) or RB5/TF1 (1x576).
   - for sub-test 3: RB5/TF3 (3x576) or RB5/TF1 (1x576).
   - for sub-test 4: RB5/TF4 (4x576) or RB5/TF1 (1x576).
3. At step 15 the UE shall return
   - for sub-test 1: one RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 2: two RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 3: three RLC SDU on RB5 having the same content as sent by SS.
   - for sub-test 4: four RLC SDU on RB5 having the same content as sent by SS.

### 18.3.2.18 Void

### 18.3.2.19 Void

### 18.3.2.20 Void

### 18.3.2.21 Void

### 18.3.2.22 Void

### 18.3.2.23 Interactive or background / UL:32 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.23.1 Interactive or background / UL:32 DL:8 kbps / PS RAB / (Payload size 320)

##### 18.3.2.23.1.1 Conformance requirement

See 18.3.2.4.1.

##### 18.3.2.23.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.23 for uplink payload size 320 case.

##### 18.3.2.23.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC1 | UL_TFC2 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

#### 18.3.2.23.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
3. At step 15 the UE shall return
   - for sub-test 1 and 2: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.3.2.23.2 Interactive or background / UL:32 DL:8 kbps / PS RAB / Payload size 128

#### 18.3.2.23.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.23.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.23 for the uplink payload size 128 case.

#### 18.3.2.23.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 5x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC1 | UL_TFC2 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 312 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.2.23.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).

- for sub-test 2: RB5/TF2 (5x144).

3. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.

- for sub-test 2: an RLC SDU on RB5 having the same content as 2 times plus 8 lsb's of the DL RLC SDU sent by the SS.

## 18.3.2.23a Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 18.3.2.23a.1 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 40 ms TTI

#### 18.3.2.23a.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.23a.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.23a, for the uplink 40 ms TT case.

#### 18.3.2.23a.1.3 Method of test

See 18.3.1.1 for test procedure.

Uplink TFS:

| | TFI | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Uplink TFCS:

| TFCI | (8 kbps RAB, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF0, TF1) |
| UL_TFC3 | (TF1, TF1) |

Downlink TFS:

| | | RB5 (8 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |

Downlink TFCS:

| TFCI | (8 kbps RAB, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC2, | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312 | RB5: 312 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC2 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: Test data size has been set to DL TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the uplink TFS size under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

#### 18.3.2.23a.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.3.2.23a.2 Interactive or background / UL:8 DL:8 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / 80 ms TTI

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.23a, for the uplink 80 ms TTI case.

See test case 18.3.2.23.2 for test procedure and test requirement.

## 18.3.2.23b Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 18.3.2.23b.1 Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320.

#### 18.3.2.23b.1.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.23b.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.23b, for the uplink payload size 320 case.

#### 18.3.2.23b.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC3,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC3 ,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 18.3.1.1 for test procedure.

### 18.3.2.23b.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1 and 2: an RLC SDU on RB5 having the same content as sent by the SS.

### 18.3.2.23b.2 Interactive or background / UL:16 DL:16 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128.

#### 18.3.2.23b.2.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.23b.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.23b, for the uplink payload size 128 case.

#### 18.3.2.23b.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 5x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC3,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC3 ,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 18.3.1.1 for test procedure.

#### 18.3.2.23b.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (5x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as sent by the SS.

## 18.3.2.23c Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 18.3.2.23c.1 Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320.

#### 18.3.2.23c.1.1 Conformance requirement

See 18.3.2.4.1.

### 18.3.2.23c.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.23c the uplink payload size 320 case.

### 18.3.2.23c.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC5,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>For RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit). | | | | | | |

See 18.3.1.1 for test procedure.

#### 18.3.2.23c.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.3.2.23c.2 Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128.

#### 18.3.2.23c.2.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.23c.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.23c, for the uplink payload size 128 case.

18.3.2.23c.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 5x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC5,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, UL_TFC0 DL_TFC5 ,UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
For RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 18.3.1.1 for test procedure.

### 18.3.2.23c.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (5x144).
   - for sub-test 3: RB5/TF2 (7x144).
   - for sub-test 4: RB5/TF2 (10x144).

3. At step 15 the UE shall return

   - for sub for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 832 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4: an RLC SDU on RB5 having the same content as sent by the SS.

## 18.3.2.23d Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH.

### 18.3.2.23d.1 Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 320.

#### 18.3.2.23d.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.23d.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.23d, for the uplink payload size of 320 case.

#### 18.3.2.23d.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC3,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC3 ,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC3 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
For RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 18.3.1.1 for test procedure.

#### 18.3.2.23d.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 2: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.3.2.23d.2 Interactive or background / UL:32 DL:32 kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload size 128.

#### 18.3.2.23d.2.1 Conformance requirement

See clause 18.3.2.4.1.

#### 18.3.2.23d.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.23d, for the uplink payload size 128 case.

18.3.2.23d.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (16 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 5x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF0, TF1) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, UL_TFC0 DL_TFC3,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, UL_TFC0 DL_TFC3 ,UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC3 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size has been set equal to the size of the payload size of the UL TF under test minus 8 bits (the size of 7 bit length indicator and expansion bit).

See 18.3.1.1 for test procedure.

#### 18.3.2.23d.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send a RADIO BEARER SETUP COMPLETE message.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (5x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as sent by the SS.

### 18.3.2.24 Void

### 18.3.2.25 Interactive or background / UL:32 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.2.25.1 Interactive or background / UL:32 DL: 64 kbps / PS RAB / Payload size 320

##### 18.3.2.25.1.1 Conformance requirement

See 18.3.2.4.1.

##### 18.3.2.25.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.25 for the uplink payload size of 320 case.

##### 18.3.2.25.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 1272 | RB5: 1272 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.2.25.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1 and 3: RB5/TF1 (1x336).
   - for sub-test 2 and 4: RB5/TF1 (2x336).

3. At step 15 the UE shall return

   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.3.2.25.2 Interactive or background / UL:32 DL: 64 kbps / PS RAB / Payload 128

### 18.3.2.25.2.1 Conformance requirement

See 18.3.2.4.1.

### 18.3.2.25.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.25 for the uplink payload 128 case.

### 18.3.2.25.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (32 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 5x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF0, TF1) |
| UL_TFC4 | (TF1, TF1) |
| UL_TFC5 | (TF2, TF1) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4 | RB5: 1016 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 1272 | RB5: 1272 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

#### 18.3.2.25.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (5x144).
   - for sub-test 3: RB5/TF1 (1x144).
   - for sub-test 4: RB5/TF2 (5x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.3.2.26 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.3.2.26.1 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1

#### 18.3.2.26.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.26.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.26 for the uplink payload 320 case with physical configuration 1.

#### 18.3.2.26.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF16 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 1148 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 (alt. 0.44) |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

### 18.3.2.26.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.3.2.26.2 Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2

#### 18.3.2.26.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.26.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.26 for the uplink payload 128 case with physical configuration 2.

#### 18.3.2.26.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 2 |
| | Midamble | 512 chips |
| | Codes and time slots | SF2 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 2784 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 760 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 952 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

#### 18.3.2.26.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF3 (7x144).
   - for sub-test 4: RB5/TF4 (10x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 128 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 832 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.3.2.27 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.3.2.27.1 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1

#### 18.3.2.27.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.27.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.27 for the uplink payload 320 case with physical configuration 1.

#### 18.3.2.27.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 1 |
| | Midamble | 512 chips |
| | Codes and time slots | SF16 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 1148 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 (alt. 0.44) |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Downlink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 8 codes x 1 time slot |
| | Max. Number of data bits/radio frame | 2192 bits |
| | TFCI code word | 16 bits |
| | Puncturing limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

#### 18.3.2.27.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2 and 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 640 lsb's of the DL RLC SDU sent by the SS.

### 18.3.2.27.2 Interactive or background / UL:64 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2

#### 18.3.2.27.2.1 Conformance requirement

See 18.3.2.4.1.

18.3.2.27.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.27 for the uplink payload 128 case with physical configuration 2.

18.3.2.27.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF2 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 2784 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 4 codes x 2 time slots + SF16 x 3 codes x 2 time slots |
| | Max. Number of data bits/radio frame | 3848 bits |
| | TFCI code word | 16 bits |
| | Puncturing limit | 0.84 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 760 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

### 18.3.2.27.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15 the UE transmitted transport format shall be

   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF3 (7x144).
   - for sub-test 4: RB5/TF4 (10x144).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 128 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 512 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.3.2.28 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.3.2.28.1 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 320, Physical Configuration 1

#### 18.3.2.28.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.28.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.28 for the uplink payload 320 case with physical configuration 1.

#### 18.3.2.28.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 1 timeslot |
| | Max. Number of data bits/radio frame | 2064 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.44 (alt. 0.40) |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Downlink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 8 codes x 1 time slot |
| | Max. Number of data bits/radio frame | 2192 bits |
| | TFCI code word | 16 bits |
| | Puncturing limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

#### 18.3.2.28.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.3.2.28.2 Interactive or background / UL:128 DL:128 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2

#### 18.3.2.28.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.28.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.28 for the uplink payload 128 case with physical configuration 2.

#### 18.3.2.28.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 7x144 | N/A |
| | TF3, bits | 14x144 | N/A |
| | TF4, bits | 20x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 2 timeslots + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 5376 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 4 codes x 2 time slots + SF16 x 3 codes x 2 time slots |
| | Max. Number of data bits/radio frame | 3848 bits |
| | TFCI code word | 16 bits |
| | Puncturing limit | 0.84 |

Sub-tests:

| **Sub-test** | **Downlink TFCS Under test** | **Uplink TFCS Under test** | **Implicitly tested** | **Restricted UL TFCIs** (note 1) | **UL RLC SDU size (bits)** (note 2) | **Test data size (bits)** (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 888 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.2.28.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (7x144).
   - for sub-test 3: RB5/TF3 (14x144).
   - for sub-test 4: RB5/TF4 (20x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 256 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 512 lsb's of the DL RLC SDU sent by the SS.

- for sub-test 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.3.2.29 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.3.2.29.1 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 320

#### 18.3.2.29.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.29.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.29 for the uplink payload 320 case with physical configuration 1.

#### 18.3.2.29.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | Physical Configuration 1 |
|---|---|---|
| DPCH Uplink | Midamble | 512 chips |
| | Codes and time slots | SF16 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 1148 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 (alt. 0.44) |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2872 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

#### 18.3.2.29.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
   - for sub-test 5: RB5/TF3 (3x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 and 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 640 lsb's of the DL RLC SDU sent by the SS.

### 18.3.2.29.2 Interactive or background / UL:64 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 128, Physical Configuration 2

#### 18.3.2.29.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.29.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.29 for the uplink payload 128 case with physical configuration 2.

#### 18.3.2.29.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 2 |
| | Midamble | 512 chips |
| | Codes and time slots | SF2 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 2784 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | **TFI** | **RB5 (144 kbps)** | **DCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| **TFCI** | **(RB5, DCCH)** |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 760 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 3576 | RB5: 2872 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

#### 18.3.2.29.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF4 (10x144).
   - for sub-test 4: RB5/TF4 (10x144).
   - for sub-test 5: RB5/TF3 (7x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 128 lsb's of the DL RLC SDU sent by the SS.

- for sub-test 3 and 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
- for sub-test 5: an RLC SDU on RB5 having the same content as 1 times plus 712 lsb's of the DL RLC SDU sent by the SS.

## 18.3.2.30 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.3.2.30.1 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 320, TTI 20 ms

#### 18.3.2.30.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.30.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.30 for the uplink payload 320, TTI 20 ms case.

#### 18.3.2.30.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 2872 | RB5: 2872 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.2.30.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).

- for sub-test 4: RB5/TF4 (8x336).
- for sub-test 5: RB5/TF5 (9x336).

3. At step 15 the UE shall return
   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.3.2.30.2 Interactive or background / UL:144 DL:144 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH / Payload 128, TTI 40 ms

### 18.3.2.30.2.1 Conformance requirement

See 18.3.2.4.1.

### 18.3.2.30.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.30 for the uplink payload 128, TTI 40 ms case.

### 18.3.2.30.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 10x144 | N/A |
| | TF3, bits | 20x144 | N/A |
| | TF4, bits | 30x144 | N/A |
| | TF5, bits | 45x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Downlink TFS:

| | TFI | RB5 (144 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 9x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 1272 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 2552 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 3832 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 5752 | RB5: 2872 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.2.30.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (10x144).
   - for sub-test 3: RB5/TF3 (20x144).

- for sub-test 4: RB5/TF4 (30x144).
- for sub-test 5: RB5/TF5 (45x144).

3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 640 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 1280 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4: an RLC SDU on RB5 having the same content as 1 times plus 1280 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 5: an RLC SDU on RB5 having the same content as 1 times plus 2880 lsb's of the DL RLC SDU sent by the SS.

## 18.3.2.31 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.3.2.31.1 Interactive or background / UL:64 DL:256 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH/ Payload 320, 10 ms TTI Down Link, Physical Configuration 1

#### 18.3.2.31.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.31.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.31 for the uplink payload 320, the downlink 10 ms TTI, and physical configuration 1 case.

#### 18.3.2.31.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 1 |
| | Midamble | 512 chips |
| | Codes and time slots | SF16 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 1148 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 (alt. 0.44) |

Downlink TFS:

| | TFI | RB5 (256 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF0, TF1) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF2, TF1) |
| DL_TFC8 | (TF3, TF1) |
| DL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC5, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

#### 18.3.2.31.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2 and 4: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 640 lsb's of the DL RLC SDU sent by the SS.

### 18.3.2.31.2 Interactive or background / UL:64 DL:256 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2

#### 18.3.2.31.2.1 Conformance requirement

See 18.3.2.4.1.

18.3.2.31.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.31 for the uplink payload 128, the downlink 20 ms TTI, and physical configuration 2 case.

18.3.2.31.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF2 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 2784 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (256 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF0, TF1) |
| DL_TFC8 | (TF1, TF1) |
| DL_TFC9 | (TF2, TF1) |
| DL_TFC10 | (TF3, TF1) |
| DL_TFC11 | (TF4, TF1) |
| DL_TFC12 | (TF5, TF1) |
| DL_TFC13 | (TF6, TF1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 760 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC7, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.2.31.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF3 (7x144).
   - for sub-test 4 to 6: RB5/TF4 (10x144).
3. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 128 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 512 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 4 to 6: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.3.2.32 Interactive or background / UL:64 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.3.2.32.1 Interactive or background / UL:64 DL:384 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1

#### 18.3.2.32.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.32.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.32 for the uplink payload 320, the downlink 10 ms TTI, and physical configuration 1 case.

#### 18.3.2.32.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 512 chips |
| | Codes and time slots | SF16 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 1148 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 (alt. 0.44) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Physical channel parameters

| DPCH Downlink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 8 codes x 3 time slots |
| | Max. Number of data bits/radio frame | 6608 bits |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 1) | Test data size (bits) (note 1) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1912 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |

NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

#### 18.3.2.32.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336) or RB5/TF1 (1x336).
   - for sub-test 3: RB5/TF3 (3x336) or RB5/TF1 (1x336).
   - for sub-test 4 and 5: RB5/TF4 (4x336) or RB5/TF1 (1x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 and 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 640 lsb's of the DL RLC SDU sent by the SS.

## 18.3.2.32.2 Interactive or background / UL:64 DL:384 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2

### 18.3.2.32.2.1 Conformance requirement

See 18.3.2.4.1.

### 18.3.2.32.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.32 for the uplink payload 128, the downlink 20 ms TTI, and physical configuration 2 case.

### 18.3.2.32.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 2 |
| | Midamble | 512 chips |
| | Codes and time slots | SF2 x 1 code x 1 time slot + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 2784 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Physical channel parameters

| DPCH Downlink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 6 codes x 4 time slots + SF16 x 4 codes x 1 time slot (alt. SF1 x 1 code x 3 time slots) |
| | Max. Number of data bits/radio frame | 7712 bits (alt. 13232 bits) |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.60 (alt. 1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 760 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC9, , UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.2.32.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF3 (7x144).
   - for sub-test 4 to 8: RB5/TF4 (10x144).
3. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 128 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 512 lsb's of the DL RLC SDU sent by the SS.
- for sub-test 4 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.3.2.33 Interactive or background / UL:128 DL:384 kbps / PS RAB + UL:3.4 DL: 3.4 kbps SRBs for DCCH

### 18.3.2.33.1 Interactive or background / UL:128 DL:384 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1

#### 18.3.2.33.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.33.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.33 for the uplink payload 320, the downlink 10 ms TTI, and physical configuration 1 case.

#### 18.3.2.33.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Uplink | | Physical Configuration 1 |
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 1 timeslot |
| | Max. Number of data bits/radio frame | 2064 bits |
| | TFCI code word | 16 bits |

| | | |
|---|---|---|
| | TPC | 2 bits |
| | Puncturing Limit | 0.44 (alt. 0.40) |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 1 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 8 codes x 3 time slots |
| | Max. Number of data bits/radio frame | 6608 bits |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 3832 | RB5: 3832 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE2 : See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.3.1.1 for test procedure.

#### 18.3.2.33.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4 and 5: RB5/TF4 (8x336).
3. At step 15 the UE shall return
   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.3.2.33.2 Interactive or background / UL:128 DL:384 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2

#### 18.3.2.33.2.1 Conformance requirement

See 18.3.2.4.1.

18.3.2.33.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.33 for the uplink payload 128, the downlink 20 ms TTI, and physical configuration 2 case.

18.3.2.33.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 7x144 | N/A |
| | TF3, bits | 14x144 | N/A |
| | TF4, bits | 20x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 2 timeslots + SF4 x 1 code x 1 time slot |
| | Max. Number of data bits/radio frame | 5376 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 6 codes x 4 time slots + SF16 x 4 codes x 1 time slot (alt. SF1 x 1 code x 3 time slots) |
| | Max. Number of data bits/radio frame | 7712 bits (alt. 13232 bits) |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.60 (alt. 1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 376 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 888 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5, | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.3.1.1 for test procedure.

### 18.3.2.33.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (7x144).
   - for sub-test 3: RB5/TF3 (14x144).

- for sub-test 4 to 8: RB5/TF4 (20x144).

3. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB5 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.

   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 256 lsb's of the DL RLC SDU sent by the SS.

   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 512 lsb's of the DL RLC SDU sent by the SS.

   - for sub-test 4, 6, and 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

   - for sub-test 5: an RLC SDU on RB5 having the same content as 1 times plus 1280 lsb's of the DL RLC SDU sent by the SS.

   - for sub-test 7: an RLC SDU on RB5 having the same content as 1 times plus 1280 lsb's of the DL RLC SDU sent by the SS.

## 18.3.2.34 Interactive or background / UL:384 DL:384 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.3.2.34.1 Interactive or background / UL:384 DL:384 kbps / PS RAB / 10 ms TTI, Physical Configuration 1

#### 18.3.2.34.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.34.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.34 for the 10 ms TTI, physical configuration 1 case.

#### 18.3.2.34.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 3 time slots |
| | Max. Number of data bits/radio frame | 6480 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 |

Downlink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF0, TF1) |
| DL_TFC7 | (TF1, TF1) |
| DL_TFC8 | (TF2, TF1) |
| DL_TFC9 | (TF3, TF1) |
| DL_TFC10 | (TF4, TF1) |
| DL_TFC11 | (TF5, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 1 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 8 codes x 3 time slots |
| | Max. Number of data bits/radio frame | 6608 bits |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC6, UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 3832 | RB5: 3832 |
| NOTE 1: UL_TFC0, UL_TFC1 and UL_TFC6 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.2.34.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
   - for sub-test 5: RB5/TF4 (12x336).

3. At step 15 the UE shall return

   - for sub-test 1 to 5: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

### 18.3.2.34.2 Interactive or background / UL:384 DL:384 kbps / PS RAB / 20 ms TTI, Physical Configuration 2

#### 18.3.2.34.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.34.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.34. for the 20 ms TTI, physical configuration 2 case

#### 18.3.2.34.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF6, TF0) |
| UL_TFC7 | (TF7, TF0) |
| UL_TFC8 | (TF8, TF0) |
| UL_TFC9 | (TF0, TF1) |
| UL_TFC10 | (TF1, TF1) |
| UL_TFC11 | (TF2, TF1) |
| UL_TFC12 | (TF3, TF1) |
| UL_TFC13 | (TF4, TF1) |
| UL_TFC14 | (TF5, TF1) |
| UL_TFC15 | (TF6, TF1) |
| UL_TFC16 | (TF7, TF1) |
| UL_TFC17 | (TF8, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 2 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 5 timeslots + SF4 x 1 code x 2 timeslots (alt. {SF2 x 1 code + SF4 x 1 code} x 4 timeslots) |

| | | |
|---|---|---|
| | Max. Number of data bits/radio frame | 13104 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 1 |

Downlink TFS:

| | TFI | RB5 (384 kbps, 20ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |
| | TF6, bits | 16x336 | N/A |
| | TF7, bits | 20x336 | N/A |
| | TF8, bits | 24x336 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF0, TF1) |
| DL_TFC10 | (TF1, TF1) |
| DL_TFC11 | (TF2, TF1) |
| DL_TFC12 | (TF3, TF1) |
| DL_TFC13 | (TF4, TF1) |
| DL_TFC14 | (TF5, TF1) |
| DL_TFC15 | (TF6, TF1) |
| DL_TFC16 | (TF7, TF1) |
| DL_TFC17 | (TF8, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 6 codes x 4 time slots + SF16 x 4 codes x 1 time slot (alt. SF1 x 1 code x 3 time slots) |
| | Max. Number of data bits/radio frame | 7712 bits (alt. 13232 bits) |
| | TFCI code word | 16 bits |
| | Puncturing Limit | 0.60 (alt. 1) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC10 | RB5: 312 | RB5: 312 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC11 | RB5: 632 | RB5: 632 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC9, UL_TFC12 | RB5: 1272 | RB5: 1272 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC9, UL_TFC13 | RB5: 2552 | RB5: 2552 |
| 5 | DL_TFC5 | UL_TFC5 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC9, UL_TFC14 | RB5: 3832 | RB5: 3832 |
| 6 | DL_TFC6 | UL_TFC6 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC9, UL_TFC15 | RB5: 5112 | RB5: 5112 |
| 7 | DL_TFC7 | UL_TFC7 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC7, UL_TFC9, UL_TFC16 | RB5: 6392 | RB5: 6392 |
| 8 | DL_TFC8 | UL_TFC8 | DL_TFC0, DL_TFC9, UL_TFC0, UL_TFC9 | UL_TFC0, UL_TFC1, UL_TFC8, UL_TFC9, UL_TFC17 | RB5: 7672 | RB5: 7672 |
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC9 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.2.34.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (4x336).
   - for sub-test 4: RB5/TF4 (8x336).
   - for sub-test 5: RB5/TF5 (12x336).

- for sub-test 6: RB5/TF6 (16x336).
- for sub-test 7: RB5/TF7 (20x336).
- for sub-test 8: RB5/TF8 (24x336).

3. At step 15 the UE shall return
   - for sub-test 1 to 8: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.

## 18.3.2.35 Interactive or background / UL:64 DL:2048 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.3.2.35.1 Interactive or background / UL:64 DL:2048 kbps / PS RAB / Payload 320, 10 ms TTI Down Link, Physical Configuration 1

#### 18.3.2.35.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.35.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.35 for the uplink payload 320, the downlink 10 ms TTI, and physical configuration 1 case.

#### 18.3.2.35.1.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 31x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF0, TF1) |
| DL_TFC12 | (TF1, TF1) |
| DL_TFC13 | (TF2, TF1) |
| DL_TFC14 | (TF3, TF1) |
| DL_TFC15 | (TF4, TF1) |
| DL_TFC16 | (TF5, TF1) |
| DL_TFC17 | (TF6, TF1) |
| DL_TFC18 | (TF7, TF1) |
| DL_TFC19 | (TF8, TF1) |
| DL_TFC20 | (TF9, TF1) |
| DL_TFC21 | (TF10, TF1) |

Physical channel parameters

| DPCH Uplink | | Physical Configuration 1 |
|---|---|---|
| | Midamble | 256 chips |
| | Codes and time slots | SF2 x 1 code x 3 time slots |
| | Max. Number of data bits/radio frame | 6480 bits |
| | TFCI code word | 16 bits |
| | TPC | 2 bits |
| | Puncturing Limit | 0.48 |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1272 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2872 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC11, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |

NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.3.1.1 for test procedure.

#### 18.3.2.35.1.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x336).
   - for sub-test 2: RB5/TF2 (2x336).
   - for sub-test 3: RB5/TF3 (3x336).
   - for sub-test 4 to 10: RB5/TF4 (4x336).
3. At step 15 the UE shall return
   - for sub-test 1, 2, and 4 to 10: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 320 lsb's of the DL RLC SDU sent by the SS.

### 18.3.2.35.2 Interactive or background / UL:64 DL:2048 kbps / PS RAB / Payload 128, 20 ms TTI Down Link, Physical Configuration 2

#### 18.3.2.35.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.2.35.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.1.35 for the uplink payload 128, the downlink 20 ms TTI, and physical configuration 2 case.

#### 18.3.2.35.2.3 Method of test

Uplink TFS:

| | TFI | RB5 (64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (2048 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x148 |
| | TF1, bits | 1x656 | 1x148 |
| | TF2, bits | 2x656 | N/A |
| | TF3, bits | 4x656 | N/A |
| | TF4, bits | 8x656 | N/A |
| | TF5, bits | 12x656 | N/A |
| | TF6, bits | 16x656 | N/A |
| | TF7, bits | 20x656 | N/A |
| | TF8, bits | 24x656 | N/A |
| | TF9, bits | 28x656 | N/A |
| | TF10, bits | 32x656 | N/A |
| | TF11, bits | 36x656 | N/A |
| | TF12, bits | 40x656 | N/A |
| | TF13, bits | 44x656 | N/A |
| | TF14, bits | 48x656 | N/A |
| | TF15, bits | 52x656 | N/A |
| | TF16, bits | 56x656 | N/A |
| | TF17, bits | 60x656 | N/A |
| | TF18, bits | 64x656 | N/A |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF2, TF0) |
| DL_TFC3 | (TF3, TF0) |
| DL_TFC4 | (TF4, TF0) |
| DL_TFC5 | (TF5, TF0) |
| DL_TFC6 | (TF6, TF0) |
| DL_TFC7 | (TF7, TF0) |
| DL_TFC8 | (TF8, TF0) |
| DL_TFC9 | (TF9, TF0) |
| DL_TFC10 | (TF10, TF0) |
| DL_TFC11 | (TF11, TF0) |
| DL_TFC12 | (TF12, TF0) |
| DL_TFC13 | (TF13, TF0) |
| DL_TFC14 | (TF14, TF0) |
| DL_TFC15 | (TF15, TF0) |
| DL_TFC16 | (TF16, TF0) |
| DL_TFC17 | (TF17, TF0) |
| DL_TFC18 | (TF18, TF0) |
| DL_TFC19 | (TF0, TF1) |
| DL_TFC20 | (TF1, TF1) |
| DL_TFC21 | (TF2, TF1) |

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC22 | (TF3, TF1) |
| DL_TFC23 | (TF4, TF1) |
| DL_TFC24 | (TF5, TF1) |
| DL_TFC25 | (TF6, TF1) |
| DL_TFC26 | (TF7, TF1) |
| DL_TFC27 | (TF8, TF1) |
| DL_TFC28 | (TF9, TF1) |
| DL_TFC29 | (TF10, TF1) |
| DL_TFC30 | (TF11, TF1) |
| DL_TFC31 | (TF12, TF1) |
| DL_TFC32 | (TF13, TF1) |
| DL_TFC33 | (TF14, TF1) |
| DL_TFC34 | (TF15, TF1) |
| DL_TFC35 | (TF16, TF1) |
| DL_TFC36 | (TF17, TF1) |
| DL_TFC37 | (TF18, TF1) |

Physical channel parameters

| | | |
|---|---|---|
| DPCH Downlink | | Physical Configuration 2 |
| | Midamble | 256 chips |
| | Codes and time slots | SF16 x 13 codes x 4 time slots + SF16 x 12 codes x 7 time slot |
| | Max. Number of data bits/radio frame | 37520 bits (alt. 37504) |
| | TFCI code word | 16 bits (alt. 32 bits) |
| | Puncturing limit | 0.56 |

Sub-tests:

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 632 | RB5: 632 |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 1536 | RB5: 1272 |
| 3 | DL_TFC3 | UL_TFC3 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 2688 | RB5: 2552 |
| 4 | DL_TFC4 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 5112 | RB5: 5112 |
| 5 | DL_TFC5 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 7672 | RB5: 7672 |
| 6 | DL_TFC6 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 10232 | RB5: 10232 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| 7 | DL_TFC7 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 12792 | RB5: 12792 |
| 8 | DL_TFC8 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 15352 | RB5: 15352 |
| 9 | DL_TFC9 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 17912 | RB5: 17912 |
| 10 | DL_TFC10 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 20472 | RB5: 20472 |
| 11 | DL_TFC11 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 23032 | RB5: 23032 |
| 12 | DL_TFC12 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 25592 | RB5: 25592 |
| 13 | DL_TFC13 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 28152 | RB5: 28152 |
| 14 | DL_TFC14 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 30712 | RB5: 30712 |
| 15 | DL_TFC15 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 33272 | RB5: 33272 |
| 16 | DL_TFC16 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 35832 | RB5: 35832 |
| 17 | DL_TFC17 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4 UL_TFC5, UL_TFC9 | RB5: 38392 | RB5: 38392 |
| 18 | DL_TFC18 | UL_TFC4 | DL_TFC0, DL_TFC19, UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 40952 | RB5: 40952 |

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (note 1) | UL RLC SDU size (bits) (note 2) | Test data size (bits) (note 2) |
|---|---|---|---|---|---|---|
| NOTE 1: UL_TFC0, UL_TFC1, and UL_TFC5 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.3.1.1 for test procedure.

#### 18.3.2.35.2.4 Test requirements

See 18.3.1.1 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: RB5/TF1 (1x144).
   - for sub-test 2: RB5/TF2 (3x144).
   - for sub-test 3: RB5/TF3 (7x144).
   - for sub-test 4 to 18: RB5/TF4 (10x144).
3. At step 15 the UE shall return
   - for sub-test 1, and 4 to 18: an RLC SDU on RB5 having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the same content as 1 times plus 264 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the same content as 1 times plus 136 lsb's of the DL RLC SDU sent by the SS.

### 18.3.2.36 Void

### 18.3.2.37 Void

## 18.3.3 Combinations on PDSCH, SCCPCH, PUSCH and PRACH

### 18.3.3.1 Interactive or background / UL: 64 DL: 256 kbps / PS RAB + UL: 3.4/16.8 DL: 3.4/33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.1.1 Interactive or background / UL: 64(payload 320) DL: 256 kbps (10 ms TTI) / PS RAB + UL: 3.4/16.8 DL: 3.4/33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.3.3.1.1.1 Conformance requirement

See 18.3.2.4.1.

##### 18.3.3.1.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.1. for the uplink payload of 320 bits and downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, 16.8 kbps SHCCH and the 3.4 kbps DCCH. The Interactive/Background PS RAB on the USCH has a 320 bit Payload Size.
- The RACH channel can carry combinations of the signalling Radio Bearer for 16.8 kbps CCCH, DCCH, and SHCCH excluding or including an Interactive/Background 12.8 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB, the 16 kbps SHCCH and the 3.4 kbps DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI.
- The FACH can carry combinations of the signalling Radio Bearer for 33.6 kbps CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 32 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

18.3.3.1.1.3 Method of test

**The contents of the System Information Block type 5 are specified in clause 8.1.2.2 with the following modifications.**

| | |
|---|---|
| - PUSCH system information | |
| - PUSCH Identity | 1 |
| - PUSCH info | |
| - TFCS ID | 1 |
| - Common timeslot info | |
| - 2nd interleaving mode | Frame |
| - TFCI coding | 16 |
| - Puncturing Limit | 0.40 |
| - Repetition period | 1 |
| - Repetition length | 1 |
| - PUSCH timeslots and codes | |
| - Dynamic SF usage | FALSE |
| - First timeslot Code List | 1 |
| - Channelisation Code | As required by individual test below |
| - CHOISE more timeslots | As required by individual test below |
| - USCH TFS | As required by individual test below |
| - USCH TFCS | As required by individual test below |

Uplink TFS for the 64 kbps USCH:

| | TFI | DTCH | SHCCH (SRB#5) | DCCH (SRB#1 – SRB#4) |
|---|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 3x337 | N/A | N/A |
| | TF4, bits | 4x337 | N/A | N/A |

Uplink TFCS for the 64 kbps USCH:

| TFCI | (DTCH, SHCCH, DCCH) |
|---|---|
| UL_USCH_TFC0 | (TF0, TF0, TF0) |
| UL_USCH_TFC1 | (TF1, TF0, TF0) |
| UL_USCH_TFC2 | (TF2, TF0, TF0) |
| UL_USCH_TFC3 | (TF3, TF0, TF0) |
| UL_USCH_TFC4 | (TF4, TF0, TF0) |
| UL_USCH_TFC5 | (TF0, TF1, TF0) |
| UL_USCH_TFC6 | (TF1, TF1, TF0) |
| UL_USCH_TFC7 | (TF2, TF1, TF0) |
| UL_USCH_TFC8 | (TF3, TF1, TF0) |
| UL_USCH_TFC9 | (TF4, TF1, TF0) |
| UL_USCH_TFC10 | (TF0, TF0, TF1) |
| UL_USCH_TFC11 | (TF1, TF0, TF1) |
| UL_USCH_TFC12 | (TF2, TF0, TF1) |
| UL_USCH_TFC13 | (TF3, TF0, TF1) |
| UL_USCH_TFC14 | (TF4, TF0, TF1) |
| UL_USCH_TFC15 | (TF0, TF1, TF1) |
| UL_USCH_TFC16 | (TF1, TF1, TF1) |
| UL_USCH_TFC17 | (TF2, TF1, TF1) |
| UL_USCH_TFC18 | (TF3, TF1, TF1) |
| UL_USCH_TFC19 | (TF4, TF1, TF1) |

Uplink TFS for the RACH without DTCH:

| | TFI | CCCH (SRB#0) | DCCH (SRB#1 – SRB#5) | SHCCH (SRB#5) |
|---|---|---|---|---|
| TFS | TF0, bits | 1x170 | 1x170 | 1x170 |

Uplink TFCS for the RACH without DTCH:

| TFCI | (CCCH, DCCH, SHCCH) |
|---|---|
| UL_RACH_TFC0 | (TF0) |

Uplink TFS for the RACH with DTCH:

| | TFI | DTCH (20 ms TTI) | CCCH (SRB#0) | DCCH (SRB#1 – SRB#4) | SHCCH (SRB#5) |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x170 | 1x170 | 1x170 | 1x170 |

Uplink TFCS for the RACH with DTCH:

| TFCI | (DTCH, CCCH, DCCH, SHCCH) |
|---|---|
| UL_RACH_DTCH_ TFC0 | (TF0) |

Downlink TFS for 256 kbps DSCH:

| | TFI | DTCH(256kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 4x337 | N/A | N/A |
| | TF4, bits | 8x337 | N/A | N/A |

Downlink TFCS for the 256 kbps DSCH:

| TFCI | DTCH, SHCCH, DCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF0, TF1, TF0), |
| DL_DSCH_TFC6 | (TF1, TF1, TF0), |
| DL_DSCH_TFC7 | (TF2, TF1, TF0), |
| DL_DSCH_TFC8 | (TF3, TF1, TF0), |
| DL_DSCH_TFC9 | (TF4, TF1, TF0), |
| DL_DSCH_TFC10 | (TF0, TF0, TF1), |
| DL_DSCH_TFC11 | (TF1, TF0, TF1), |
| DL_DSCH_TFC12 | (TF2, TF0, TF1), |
| DL_DSCH_TFC13 | (TF3, TF0, TF1), |
| DL_DSCH_TFC14 | (TF4, TF0, TF1), |
| DL_DSCH_TFC15 | (TF0, TF1, TF1), |
| DL_DSCH_TFC16 | (TF1, TF1, TF1), |
| DL_DSCH_TFC17 | (TF2, TF1, TF1), |
| DL_DSCH_TFC18 | (TF3, TF1, TF1), |
| DL_DSCH_TFC19 | (TF4, TF1, TF1) |

Downlink TFS for FACH without DTCH:

| | TFI | CCCH/DCCH/SHCCH/BCCH |
|---|---|---|
| TFS | TF0, bits | 0x171 |
| | TF1, bits | 1x171 |
| | TF2, bits | 2x171 |
| | TF3, bits | 3x171 |
| | TF4 ,bits | 4x171 |

Downlink TFCS for FACH without DTCH:

| TFCI | CCCH/DCCH/SHCCH/BCCH |
|---|---|
| DL_FACH_TFC0 | TF0 |
| DL_ FACH_TFC1 | TF1 |
| DL_ FACH_TFC2 | TF2 |
| DL_ FACH_TFC3 | TF3 |
| DL_ FACH_TFC4 | TF4 |

Downlink TFS for FACH with DTCH:

| | TFI | DTCH/CCCH/DCCH/SHCCH/BCCH |
|---|---|---|
| TFS | TF0, bits | 0x171 |
| | TF1, bits | 1x171 |
| | TF2, bits | 2x171 |
| | TF3, bits | 1x363 |
| | TF4 ,bits | 3x171 |
| | TF5, bits | 4x171 |
| | TF6, bits | 2x363 |

Downlink TFCS for FACH with DTCH:

| TFCI | DTCH/CCCH/DCCH/SHCCH/BCCH |
|---|---|
| DL_FACH_TFC0_DTCH | TF0 |
| DL_FACH_TFC1_DTCH | TF1 |
| DL_FACH_TFC2_DTCH | TF2 |
| DL_FACH_TFC3_DTCH | TF3 |
| DL_FACH_TFC4_DTCH | TF4 |
| DL_FACH_TFC5_DTCH | TF5 |
| DL_FACH_TFC6_DTCH | TF6 |

Sub-tests for RACH/FACH:

See Section 18.3.6.1

Sub-tests – USCH & DSCH:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 312 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 632 | DTCH: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1912 | DTCH: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 | DTCH: 2552 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10, UL_TFC11, and UL_TFC15 are part of the minimum set of TFCIs.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.3.1.3 for test procedure.

#### 18.3.3.1.1.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (3x337).
   - for sub-test 4: DTCH/TF4 (4x337).
4. At step 15 the UE shall return
   - for sub-test 1, 2, and 4: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

- for sub-test 3: an RLC SDU on DTCH having the first 1272 bits equal to the content as the DL RLC SDU sent by the SS in the downlink.

### 18.3.3.1.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.1.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.1.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.1 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 256 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.1.2.3 Method of test

Uplink TFS for the 64 kbps USCH – 145 bit TBS & 20 ms TTI:

| | TFI | DTCH | SHCCH (SRB#5) | DCCH (SRB#1 – SRB#4) |
|---|---|---|---|---|
| TFS | TF0, bits | 0x145 | 0x169 | 0x149 |
| | TF1, bits | 1x145 | 1x169 | 1x149 |
| | TF2, bits | 3x145 | N/A | N/A |
| | TF3, bits | 7x145 | N/A | N/A |
| | TF4, bits | 10x145 | N/A | N/A |

Uplink TFCS for the 64 kbps USCH – 145 bit TBS & 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for 256 kbps DSCH – 10 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for 256 kbps DSCH - 10 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.3.6.1

Sub-tests – USCH (337 bit TBS & 20 ms TTI) & DSCH (337 bit TBS & 10 ms TTI):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 376 (128x1)x3 - 8 | DTCH: 312 (320 x 1) - 8 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15, | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 760 (128x3)x2 - 8 | DTCH: 632 (320 x 2) - 8 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15, | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1784 (7x128) x 2 - 8 | DTCH: 1272 (4 x 320) - 8 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 (10x128) x 2 - 8 | DTCH: 2552 (8 x 320) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.3.1.2.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST

3. At step 15 the UE transmitted transport format shall be

   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH/TF2 (3x145).
   - for sub-test 3: DTCH/TF3 (7x145).
   - for sub-test 4: DTCH/TF4 (10x145).

4. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on DTCH having the first 312 bits equal to the content of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on DTCH having the first 632 bits equal to the content of the DL RLC SDU sent by the SS.

- for sub-test 3: an RLC SDU on DTCH having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS.
- for sub-test 4: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS

### 18.3.3.1.3 Interactive or background / UL: 64(337 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.1.3.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.1.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.1 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the 256 kbps Interactive/Background PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 256 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.1.3.3 Method of test

Uplink TFS for the 64 kbps USCH – 337 bit TBS & 20 ms TTI:

See corresponding table in Section 18.3.3.1.1.3

Uplink TFS for the 64 kbps USCH – 337 bit TBS & 20 ms TTI:

See corresponding table in Section 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in Section 18.3.3.1.1.3

Uplink TFCS for the RACH without DTCH:

See corresponding table in Section 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in Section 18.3.3.1.1.3

Uplink TFCS for the RACH with DTCH:

See corresponding table in Section 18.3.3.1.1.3

Downlink TFS for 256 kbps DSCH – 337 bit TBS & 20 ms TTI:

| | TFI | DTCH(256kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 4x337 | N/A | N/A |
| | TF4, bits | 8x337 | N/A | N/A |
| | TF5, bits | 12x337 | N/A | N/A |
| | TF6, bits | 16x337 | N/A | N/A |

Downlink TFS for 256 kbps DSCH – 337 bit TBS & 20 ms TTI:

| TFCI | DTCH, SHCCH, DCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0, TF0), |
| DL_DSCH_TFC7 | (TF0, TF1, TF0), |
| DL_DSCH_TFC8 | (TF1, TF1, TF0), |
| DL_DSCH_TFC9 | (TF2, TF1, TF0), |
| DL_DSCH_TFC10 | (TF3, TF1, TF0), |
| DL_DSCH_TFC11 | (TF4, TF1, TF0), |
| DL_DSCH_TFC12 | (TF5, TF1, TF0), |
| DL_DSCH_TFC13 | (TF6, TF1, TF0), |
| DL_DSCH_TFC14 | (TF0, TF0, TF1), |
| DL_DSCH_TFC15 | (TF1, TF0, TF1), |
| DL_DSCH_TFC16 | (TF2, TF0, TF1), |
| DL_DSCH_TFC17 | (TF3, TF0, TF1), |
| DL_DSCH_TFC18 | (TF4, TF0, TF1), |
| DL_DSCH_TFC19 | (TF5, TF0, TF1), |
| DL_DSCH_TFC20 | (TF6, TF0, TF1), |
| DL_DSCH_TFC21 | (TF0, TF1, TF1), |
| DL_DSCH_TFC22 | (TF1, TF1, TF1), |
| DL_DSCH_TFC23 | (TF2, TF1, TF1), |
| DL_DSCH_TFC24 | (TF3, TF1, TF1), |
| DL_DSCH_TFC25 | (TF4, TF1, TF1), |
| DL_DSCH_TFC26 | (TF5, TF1, TF1), |
| DL_DSCH_TFC27 | (TF6, TF1, TF1) |

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in Section 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in Section 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in Section 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in Section 18.3.3.1.1.3

Sub-tests for RACH/FACH – 20 ms TTI:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 20 ms TTI & UL TBS (337 bit) and DL TBS (337 bit):

Sub-tests – USCH (337 bit TBS & 20 ms TTI) & DSCH (337 bit TBS & 20 ms TTI):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 312 (1 x 320) - 8 | DTCH: 312 (1 x 320) - 8 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 632 (2 x 320) - 8 | DTCH: 632 (1 x 320) - 8 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1912 (3 x 320) - 8 | DTCH: 1272 (4 x 320) - 8 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 (4 x 320) x 2 - 8 | DTCH: 2552 (8 x 320) - 8 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 3832 (4 x 320) x 3 - 8 | DTCH: 3832 (12 x 320) - 8 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (4 x 320) x 4 - 8 | DTCH: 5112 (16 x 320) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.3.1.3 for test procedure.

### 18.3.3.2.3.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST

3. At step 15 the UE transmitted transport format shall be

   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (3x337).
   - for sub-test 4, 5, and 6: DTCH/TF4 (4x337).

4. At step 15 the UE shall return

   - for sub-test 1, 2, 4, 5, and 6: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on DTCH having the first 1272 bits equal content as the DL RLC SDU sent by the SS.

#### 18.3.3.1.4 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 256 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH 64 kbps + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.3.3.1.4.1 Conformance requirement

See 18.3.2.4.1.

##### 18.3.3.1.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.1 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the 256 kbps Interactive/Background PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 256 kbps PS RAB.
- To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.3.3.1.4.3 Method of test

Uplink TFS for the 64 kbps USCH – 145 bit TBS & 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the 64 kbps USCH – 145 bit TBS & 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for 256 kbps DSCH – 20 ms TTI:

See corresponding table in 18.3.3.1.3.2

Downlink TFCS for the 256 kbps DSCH – 20 ms TTI:

See corresponding table in 18.3.3.1.3.2

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.3.6.1

Sub-tests – USCH (145 bit TBS & 20 ms TTI) & DSCH (337 bit TBS & 10 ms TTI):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 376 (128 x 1)x3 - 8 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 760 (128 x 3) x 2 - 8 | DTCH: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1784 (7x128) x 2 - 8 | DTCH: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19, | DTCH: 2552 (10x128) x 2 - 8 | DTCH: 2552 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 3832 (10x128) x 3 - 8 | DTCH: 3832 (12 x 320) - 8 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (10x128) x 4 - 8 | DTCH: 5112 (16 x 320) - 8 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.3.1.3 for test procedure.

#### 18.3.3.1.4.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST.
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH/TF2 (3x145).
   - for sub-test 3: DTCH/TF3 (7x145).
   - for sub-test 4, 5 and 6: DTCH/TF4 (10x145).
4. At step 15 the UE shall return
   - for sub-test 4 to 6: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 1: an RLC SDU on DTCH having the first **312** bits equal content as the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on DTCH having the first **632** bits equal content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on DTCH having the first 1272 bits equal content as the DL RLC SDU sent by the SS.

### 18.3.3.2 Interactive or background / UL: 64 DL: 384 kbps / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.2.1 Interactive or background / UL: 64(337 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.3.3.2.1.1 Conformance requirement

See 18.3.2.4.1.

##### 18.3.3.2.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.2 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB, the SHCCH and the DCC. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).

- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.
- To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.2.1.3 Method of Test

Uplink TFS for the 64 kbps USCH – 337 bit TBS & 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the 64 kbps USCH – 337 bit TBS & 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for 384 kbps DSCH – 337 bit TBS & 10 ms TTI:

| | TFI | DTCH(384 kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| **TFS** | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 4x337 | N/A | N/A |
| | TF4, bits | 8x337 | N/A | N/A |
| | TF5, bits | 12x337 | N/A | N/A |

Downlink TFS for 384 kbps DSCH – 337 bit TBS & 10 ms TTI:

| TFCI | DTCH,SHCCH,DCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0, TF0), |
| DL_DSCH_TFC6 | (TF0, TF1, TF0), |
| DL_DSCH_TFC7 | (TF1, TF1, TF0), |
| DL_DSCH_TFC8 | (TF2, TF1, TF0), |
| DL_DSCH_TFC9 | (TF3, TF1, TF0), |
| DL_DSCH_TFC10 | (TF4, TF1, TF0), |
| DL_DSCH_TFC11 | (TF5, TF1, TF0), |
| DL_DSCH_TFC12 | (TF0, TF0, TF1), |
| DL_DSCH_TFC13 | (TF1, TF0, TF1), |
| DL_DSCH_TFC14 | (TF2, TF0, TF1), |
| DL_DSCH_TFC15 | (TF3, TF0, TF1), |
| DL_DSCH_TFC16 | (TF4, TF0, TF1), |
| DL_DSCH_TFC17 | (TF5, TF0, TF1), |
| DL_DSCH_TFC18 | (TF0, TF1, TF1), |
| DL_DSCH_TFC19 | (TF1, TF1, TF1), |
| DL_DSCH_TFC20 | (TF2, TF1, TF1), |
| DL_DSCH_TFC21 | (TF3, TF1, TF1), |
| DL_DSCH_TFC22 | (TF4, TF1, TF1) |
| DL_DSCH_TFC23 | (TF5, TF1, TF1) |

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-tests for RACH/FACH – 20 ms TTI:

See Section 18.3.6.1

Sub-tests – USCH (337 bit TBS & 20 ms TTI) & DSCH (337 bit TBS & 10 ms TTI):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 312 (1x320)x1 - 8 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15, | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 632 (2x320)x1 - 8 | DTCH: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1912 (3 x 320) x 2 - 8 | DTCH: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 (4 x 320) x 2 - 8 | DTCH: 2552 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | RB5: 3832 (4 x 320) x 3 - 8 | RB5: 3832 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. .
RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.3.1.3 for test procedure.

#### 18.3.3.2.1.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH /TF2 (2x337).
   - for sub-test 3: DTCH /TF3 (3x337).
   - for sub-test 4 and 5: DTCH /TF4 (4x337)
4. At step 15 the UE shall return
   - for sub-test 1, 2, 4, 5: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS

### 18.3.3.2.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 384 kbps / PS RAB/10 ms TTI/145 bits TBS (337 bit TBS – 10 ms TTI) + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.2.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.2.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.2 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH, and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.
- To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.2.2.3 Method of test

Uplink TFS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.3.3.1.1.3

U plink TFCS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for the 384 kbps DSCH – 10 ms TTI:

See corresponding table in 18.3.3.2.1.3

Downlink TFCS for the 384 kbps DSCH - 10 ms TTI:

See corresponding table in 18.3.3.2.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-tests for RACH/FACH – 20 ms TTI:

See Section 18.3.6.1

Sub-tests for USCH/DSCH – 10 ms TTI & UL 145 bit TBS and DL 337 bit TBS:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 376 (1x128)x3 - 8 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 760 (3x128)x2 - 8 | DTCH: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1784 (7x128)x2 - 8 | DTCH: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 (10x128)x2 - 8 | DTCH: 2552 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC6, DL_DSCH_TFC12, DL_DSCH_TFC18, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | RB5: 3832 (3x128)x10 - 8 | RB5: 3832 |

NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. .
RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals.

See 18.3.1.3 for test procedure.

#### 18.3.3.2.2.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).

- for sub-test 2: DTCH /TF2 (3x145).
- for sub-test 3: DTCH /TF3 (7x145).
- for sub-test 4: RB5/TF4 (10x145)

4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB5 having the first 312 bits equal to the content of the DL RLC SDU sent by the SS
   - for sub-test 2: an RLC SDU on RB5 having the first 632 bits equal to the content of the DL RLC SDU sent by the SS
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS
   - for sub-tests 4, 5: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

### 18.3.3.2.3 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.2.3.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.2.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.2 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.
- To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.2.3.3 Method of Test

See 18.3.1.3 for test procedure

Uplink TFS for the 64 kbps USCH – Transport Block Size 337 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the 64 kbps USCH – Transport Block Size 337 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for the 384 kbps DSCH – 20 ms TTI:

| | TFI | DTCH(384 kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| **TFS** | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 4x337 | N/A | N/A |
| | TF4, bits | 8x337 | N/A | N/A |
| | TF5, bits | 12x337 | N/A | N/A |
| | TF6, bits | 16x337 | N/A | N/A |
| | TF7, bits | 20x337 | N/A | N/A |
| | TF8, bits | 24x337 | N/A | N/A |

Downlink TFCS for the 384 kbps DSCH - 20 ms TTI:

| TFCI | DTCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0, TF0), |
| DL_DSCH_TFC7 | (TF7, TF0, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0, TF0), |
| DL_DSCH_TFC9 | (TF0, TF1, TF0), |
| DL_DSCH_TFC10 | (TF1, TF1, TF0), |
| DL_DSCH_TFC11 | (TF2, TF1, TF0), |
| DL_DSCH_TFC12 | (TF3, TF1, TF0), |
| DL_DSCH_TFC13 | (TF4, TF1, TF0), |
| DL_DSCH_TFC14 | (TF5, TF1, TF0), |
| DL_DSCH_TFC15 | (TF6, TF1, TF0), |
| DL_DSCH_TFC16 | (TF7, TF1, TF0), |
| DL_DSCH_TFC17 | (TF8, TF1, TF0), |
| DL_DSCH_TFC18 | (TF0, TF0, TF1), |
| DL_DSCH_TFC19 | (TF1, TF0, TF1), |
| DL_DSCH_TFC20 | (TF2, TF0, TF1), |
| DL_DSCH_TFC21 | (TF3, TF0, TF1), |
| DL_DSCH_TFC22 | (TF4, TF0, TF1), |
| DL_DSCH_TFC23 | (TF5, TF0, TF1), |
| DL_DSCH_TFC24 | (TF6, TF0, TF1), |
| DL_DSCH_TFC25 | (TF7, TF0, TF1), |
| DL_DSCH_TFC26 | (TF8, TF0, TF1), |
| DL_DSCH_TFC27 | (TF0, TF1, TF1), |
| DL_DSCH_TFC28 | (TF1, TF1, TF1), |
| DL_DSCH_TFC29 | (TF2, TF1, TF1), |
| DL_DSCH_TFC30 | (TF3, TF1, TF1), |
| DL_DSCH_TFC31 | (TF4, TF1, TF1), |
| DL_DSCH_TFC32 | (TF5, TF1, TF1), |
| DL_DSCH_TFC33 | (TF6, TF1, TF1) |
| DL_DSCH_TFC34 | (TF7, TF1, TF1) |
| DL_DSCH_TFC35 | (TF8, TF1, TF1) |

Downlink TFS for FACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-tests for RACH/FACH – 20 ms TTI:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 20 ms TTI & UL TBS (337 bit) and DL TBS (337 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6 UL_USCH_TFC10 UL_USCH_TFC11 UL_USCH_TFC15 UL_USCH_TFC16 | DTCH: 312 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7 UL_USCH_TFC10 UL_USCH_TFC12 UL_USCH_TFC15 UL_USCH_TFC17 | RB5: 632 | RB5: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8 UL_USCH_TFC10 UL_USCH_TFC13 UL_USCH_TFC15 UL_USCH_TFC18 | RB5: 1912 (3x320) x 2 - 8 | RB5: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9 UL_USCH_TFC10 UL_USCH_TFC14 UL_USCH_TFC15 UL_USCH_TFC19 | RB5: 2552 | RB5: 2552 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9 UL_USCH_TFC10 UL_USCH_TFC14 UL_USCH_TFC15 UL_USCH_TFC19 | RB5: 3832 | RB5: 3832 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC9 DL_DSCH_TFC18 DL_DSCH_TFC27 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10 UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9 UL_USCH_TFC10 UL_USCH_TFC14 UL_USCH_TFC15 UL_USCH_TFC19 | RB5: 5112 | RB5: 5112 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC9, DL_DSCH_TFC18, DL_DSCH_TFC27, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | RB5: 6392 | RB5: 6392 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC5, DL_DSCH_TFC10, DL_DSCH_TFC15, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | RB5: 6392 | RB5: 6392 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. .<br>RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.3.2.1.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH /TF2 (2x337).
   - for sub-test 3: DTCH /TF3 (3x337).
   - for sub-test 4, 5, 6, 7, and 8: DTCH /TF4 (4x337)
4. At step 15 the UE shall return
   - for sub-test 1, 2, 4, 5, 7 and 8: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on RB5 having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS

### 18.3.3.2.4 Interactive or background / UL: 64 (145 bit TBS – 20 ms TTI) DL: 384 kbps (337 bit TBS – 20 ms TTI) / PS RAB+ UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.2.4.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.2.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.1 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the 384 kbps Interactive/Background PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.
- To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.2.4.3 Method of test

Uplink TFCS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for the 384 kbps DSCH – 20 ms TTI:

See corresponding table in 18.3.3.1.3.2

Downlink TFCS for the 384 kbps DSCH - 20 ms TTI:

See corresponding table in 18.3.3.1.3.2

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 20 ms TTI & UL TBS (145 bit) and DL TBS (337 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 376 (1x128)x3 - 8 | DTCH: 312 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 760 (3x128)x2 - 8 | DTCH: 632 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 1784 (7x128)x2 - 8 | DTCH: 1272 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 2552 (10x128)x2 - 8 | DTCH: 2552 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 3832 (10x128)x3 - 8 | DTCH: 3832 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (10x128)x4 - 8 | DTCH: 5112 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 6392 (10x128)x5 - 8 | DTCH: 6392 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 8 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC7, DL_DSCH_TFC14, DL_DSCH_TFC21, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 7672 (10x128)x6 - 8 | DTCH: 7672 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB5: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.3.2.4.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH/TF2 (3x145).
   - for sub-test 3: DTCH/TF3 (7x145).
   - for sub-test 4, 5, 6, 7, and 8: DTCH/TF4 (10x145).
4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on DTCH having the first 312 bits equal content as the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on DTCH having the first 632 bits equal content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on DTCH having the first 1272 bits equal content as the DL RLC SDU sent by the SS.
   - for sub-test 4,5,6,7 and 8: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

### 18.3.3.3 Interactive or background / UL: 64 DL: 2048 kbps/ PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.3.1 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

##### 18.3.3.3.1.1 Conformance requirement

See 18.3.2.4.1.

##### 18.3.3.3.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.3 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 2048 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 2048 kbps PS RAB.
- To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.3.3.3.1.3 Method of test

Uplink TFS for the 64 kbps USCH – Transport Block Size 337 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the 64 kbps USCH – Transport Block Size 337 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for 2048 kbps DSCH – 10 ms TTI:

| TFS | TFI | DTCH(2048 kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| | TF0, bits | 0x657 | 0x169 | 0x149 |
| | TF1, bits | 1x657 | 1x169 | 1x149 |
| | TF2, bits | 2x657 | N/A | N/A |
| | TF3, bits | 4x657 | N/A | N/A |

| | | | | |
|---|---|---|---|---|
| | TF4, bits | 8x657 | N/A | N/A |
| | TF5, bits | 12x657 | N/A | N/A |
| | TF6, bits | 16x657 | N/A | N/A |
| | TF7, bits | 20x657 | N/A | N/A |
| | TF8, bits | 24x657 | N/A | N/A |
| | TF9, bits | 28x657 | N/A | N/A |
| | TF10, bits | 30x657 | N/A | N/A |

Downlink TFCS for 2048 kbps DSCH - 10 ms TTI:

| TFCI | DTCH,SHCCH,DCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0, TF0), |
| DL_DSCH_TFC7 | (TF7, TF0, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0, TF0), |
| DL_DSCH_TFC9 | (TF9, TF0, TF0), |
| DL_DSCH_TFC10 | (TF10, TF0, TF0), |
| DL_DSCH_TFC11 | (TF0, TF1, TF0), |
| DL_DSCH_TFC12 | (TF1, TF1, TF0), |
| DL_DSCH_TFC13 | (TF2, TF1, TF0), |
| DL_DSCH_TFC14 | (TF3, TF1, TF0), |
| DL_DSCH_TFC15 | (TF4, TF1, TF0), |
| DL_DSCH_TFC16 | (TF5, TF1, TF0), |
| DL_DSCH_TFC17 | (TF6, TF1, TF0), |
| DL_DSCH_TFC18 | (TF7, TF1, TF0), |
| DL_DSCH_TFC19 | (TF8, TF1, TF0), |
| DL_DSCH_TFC20 | (TF9, TF1, TF0), |
| DL_DSCH_TFC21 | (TF0, TF0, TF1), |
| DL_DSCH_TFC22 | (TF1, TF0, TF1), |
| DL_DSCH_TFC23 | (TF2, TF0, TF1), |
| DL_DSCH_TFC24 | (TF3, TF0, TF1), |
| DL_DSCH_TFC25 | (TF4, TF0, TF1), |
| DL_DSCH_TFC26 | (TF5, TF0, TF1), |
| DL_DSCH_TFC27 | (TF6, TF0, TF1), |
| DL_DSCH_TFC28 | (TF7, TF0, TF1), |
| DL_DSCH_TFC29 | (TF8, TF0, TF1), |
| DL_DSCH_TFC30 | (TF9, TF0, TF1), |
| DL_DSCH_TFC31 | (TF0, TF1, TF1), |
| DL_DSCH_TFC32 | (TF1, TF1, TF1), |
| DL_DSCH_TFC33 | (TF2, TF1, TF1), |
| DL_DSCH_TFC34 | (TF3, TF1, TF1), |
| DL_DSCH_TFC35 | (TF4, TF1, TF1), |
| DL_DSCH_TFC36 | (TF5, TF1, TF1), |
| DL_DSCH_TFC37 | (TF6, TF1, TF1), |
| DL_DSCH_TFC38 | (TF7, TF1, TF1), |
| DL_DSCH_TFC39 | (TF8, TF1, TF1), |
| DL_DSCH_TFC40 | (TF9, TF1, TF1), |

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL TBS (337 bit) and DL TBS (657 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 632 (320 x1 ) x 2 - 8 | RB5: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 1272 (320 x2 ) x2 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 2872 (320 x3 ) x3 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (320 x4 ) x4 - 8 | DTCH: 5112 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 7672 (320 x4 ) x6 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 10232 (320 x4 ) x8 - 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 12792 (320 x4 ) x10 - 8 | DTCH: 12792 |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 15352 (320 x4 ) x12 - 8 | DTCH: 15352 |
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 17912 (320 x4 ) x14 - 8 | DTCH: 17912 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>DL_DSCH_TFC21,<br>DL_DSCH_TFC31,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>UL_USCH_TFC10,<br>UL_USCH_TFC15 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_USCH_TFC10,<br>UL_USCH_TFC14,<br>UL_USCH_TFC15,<br>UL_USCH_TFC19 | DTCH: 20472<br>(320 x4 ) x16 - 8 | DTCH: 20472 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.3.3.1.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (3x337).
   - for sub-test 4 to 10: DTCH/TF4 (4x337)
3. At step 15 the UE shall return
   - for sub-test 1, 2, 4 to 10: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on DTCH having the first 2552 bits equal to the content of the DL RLC SDU sent by the SS.

### 18.3.3.3.2 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.3.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.3.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.2 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 256 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.2.3.3 Method of test

Uplink TFS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.3.3.1.1.3

U plink TFCS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for DSCH – 10 ms TTI:

See corresponding table in 18.3.3.3.1.3

Downlink TFCS for DSCH - 10 ms TTI:

See corresponding table in 18.3.3.3.1.3

Downlink TFS for FACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-tests for RACH/FACH – 20 ms TTI:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL TBS (145 bit) and DL TBS (657 bit):

| Sub - test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 632 (128 x1 ) x5 - 8 | RB5: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 1528 (128 x3 ) x4 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18, | DTCH: 2680 (128 x7 ) x3 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (128 x10 ) x4 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_SCH_TFC19 | DTCH: 7672 (128 x10 ) x6- 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 10232 (128 x10 ) x8- 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 12792 (128 x10)x10- 8 | DTCH: 12792 |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, | UL_USCH_TFC0, UL_USCH_TFC1, | DTCH: 15352 | DTCH: 15352 |

| | | | | | | |
|---|---|---|---|---|---|---|
| | | | DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | (128 x10)x12- 8 | |
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 17912 (128 x10)x14- 8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC11, DL_DSCH_TFC21, DL_DSCH_TFC31, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 20472 (128 x10)x16- 8 | DTCH: 20472 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.3.2.3.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH /TF2 (3x145).
   - for sub-test 3: DTCH /TF3 (7x145).
   - for sub-test 4 to 10: DTCH /TF4 (10x145)
4. At step 15 the UE shall return
   - for sub-test 1, 4, 5, 6, 7, 8, 9, and 10: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB5 having the first 1272 bits equal to the content of the DL RLC SDU sent by the SS
   - for sub-test 3: an RLC SDU on RB5 having the first 2552 bits equal to the content of the DL RLC SDU sent by the SS

### 18.3.3.3.3 Interactive or background / UL: 64 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB+ UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.3.3.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.3.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.3 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 2048 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 2048 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.3.3.3 Method of test

Uplink TFS for the USCH – Transport Block Size 337 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the USCH – Transport Block Size 337 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for 2048 kbps DSCH – 20 ms TTI:

| | TFI | DTCH(2048 kbps) | SHCCH SRB#5 | DCCH SRB#1-#4 |
|---|---|---|---|---|
| TFS | TF0, bits | 0x657 | 0x169 | 0x149 |
| | TF1, bits | 1x657 | 1x169 | 1x149 |
| | TF2, bits | 2x657 | N/A | N/A |
| | TF3, bits | 4x657 | N/A | N/A |
| | TF4, bits | 8x657 | N/A | N/A |
| | TF5, bits | 12x657 | N/A | N/A |
| | TF6, bits | 16x657 | N/A | N/A |
| | TF7, bits | 20x657 | N/A | N/A |
| | TF8, bits | 24x657 | N/A | N/A |
| | TF9, bits | 28x657 | N/A | N/A |
| | TF10, bits | 32x657 | N/A | N/A |
| | TF11, bits | 36x657 | N/A | N/A |
| | TF12, bits | 40x657 | N/A | N/A |
| | TF13, bits | 44x657 | N/A | N/A |
| | TF14, bits | 48x657 | N/A | N/A |
| | TF15, bits | 52x657 | N/A | N/A |
| | TF16, bits | 56x657 | N/A | N/A |
| | TF17, bits | 60x657 | N/A | N/A |
| | TF18, bits | 64x657 | N/A | N/A |

Downlink TFCS for 2048 kbps DSCH - 20 ms TTI:

| TFCI | DTCH,SHCCH,DCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0, TF0), |
| DL_DSCH_TFC7 | (TF7, TF0, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0, TF0), |
| DL_DSCH_TFC9 | (TF9, TF0, TF0), |
| DL_DSCH_TFC10 | (TF10, TF0, TF0), |
| DL_DSCH_TFC11 | (TF11, TF0, TF0), |
| DL_DSCH_TFC12 | (TF12, TF0, TF0), |
| DL_DSCH_TFC13 | (TF13, TF0, TF0), |
| DL_DSCH_TFC14 | (TF14, TF0, TF0), |
| DL_DSCH_TFC15 | (TF15, TF0, TF0), |
| DL_DSCH_TFC16 | (TF16, TF0, TF0), |
| DL_DSCH_TFC17 | (TF17, TF0, TF0), |
| DL_DSCH_TFC18 | (TF18, TF0, TF0), |
| DL_DSCH_TFC19 | (TF0, TF1, TF0), |
| DL_DSCH_TFC20 | (TF1, TF1, TF0), |
| DL_DSCH_TFC21 | (TF2, TF1, TF0), |
| DL_DSCH_TFC22 | (TF3, TF1, TF0), |
| DL_DSCH_TFC23 | (TF4, TF1, TF0), |
| DL_DSCH_TFC24 | (TF5, TF1, TF0), |
| DL_DSCH_TFC25 | (TF6, TF1, TF0), |
| DL_DSCH_TFC26 | (TF7, TF1, TF0), |
| DL_DSCH_TFC27 | (TF8, TF1, TF0), |
| DL_DSCH_TFC28 | (TF9, TF1, TF0), |
| DL_DSCH_TFC29 | (TF10, TF1, TF0), |
| DL_DSCH_TFC30 | (TF11, TF1, TF0), |
| DL_DSCH_TFC31 | (TF12, TF1, TF0), |
| DL_DSCH_TFC32 | (TF13, TF1, TF0), |
| DL_DSCH_TFC33 | (TF14, TF1, TF0), |
| DL_DSCH_TFC34 | (TF15, TF1, TF0), |
| DL_DSCH_TFC35 | (TF16, TF1, TF0), |
| DL_DSCH_TFC36 | (TF17, TF1, TF0), |
| DL_DSCH_TFC37 | (TF18, TF1, TF0), |
| DL_DSCH_TFC38 | (TF0, TF0, TF1), |
| DL_DSCH_TFC39 | (TF1, TF0, TF1), |
| DL_DSCH_TFC40 | (TF2, TF0, TF1), |
| DL_DSCH_TFC41 | (TF3, TF0, TF1), |
| DL_DSCH_TFC42 | (TF4, TF0, TF1), |
| DL_DSCH_TFC43 | (TF5, TF0, TF1), |
| DL_DSCH_TFC44 | (TF6, TF0, TF1), |
| DL_DSCH_TFC45 | (TF7, TF0, TF1), |
| DL_DSCH_TFC46 | (TF8, TF0, TF1), |
| DL_DSCH_TFC47 | (TF9, TF0, TF1), |
| DL_DSCH_TFC48 | (TF10, TF0, TF1), |
| DL_DSCH_TFC49 | (TF11, TF0, TF1), |
| DL_DSCH_TFC50 | (TF12, TF0, TF1), |
| DL_DSCH_TFC51 | (TF13, TF0, TF1), |
| DL_DSCH_TFC52 | (TF14, TF0, TF1), |
| DL_DSCH_TFC53 | (TF15, TF0, TF1), |
| DL_DSCH_TFC54 | (TF16, TF0, TF1), |
| DL_DSCH_TFC55 | (TF17, TF0, TF1), |
| DL_DSCH_TFC56 | (TF18, TF0, TF1), |
| DL_DSCH_TFC57 | (TF0, TF1, TF1), |
| DL_DSCH_TFC58 | (TF1, TF1, TF1), |
| DL_DSCH_TFC59 | (TF2, TF1, TF1), |
| DL_DSCH_TFC61 | (TF3, TF1, TF1), |
| DL_DSCH_TFC62 | (TF4, TF1, TF1), |
| DL_DSCH_TFC63 | (TF5, TF1, TF1), |

| | |
|---|---|
| DL_DSCH_TFC64 | (TF6, TF1, TF1), |
| DL_DSCH_TFC65 | (TF7, TF1, TF1), |
| DL_DSCH_TFC66 | (TF8, TF1, TF1), |
| DL_DSCH_TFC67 | (TF9, TF1, TF1), |
| DL_DSCH_TFC68 | (TF10, TF1, TF1), |
| DL_DSCH_TFC69 | (TF11, TF1, TF1), |
| DL_DSCH_TFC70 | (TF12, TF1, TF1), |
| DL_DSCH_TFC71 | (TF13, TF1, TF1), |
| DL_DSCH_TFC72 | (TF14, TF1, TF1), |
| DL_DSCH_TFC73 | (TF16, TF1, TF1), |
| DL_DSCH_TFC74 | (TF17, TF1, TF1), |
| DL_DSCH_TFC75 | (TF18, TF1, TF1), |

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 20 ms TTI & UL TBS (337 bit) and DL TBS (657 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 632 (320 x1 ) x2 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 1272 (320 x2 ) x2 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 2872 (320 x3 ) x3 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (320 x4 ) x4 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 7672 (320 x4 ) x6 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 10232 (320 x4 ) x8 - 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 12792 (320 x4 ) x10 - 8 | DTCH: 12792 |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 15352 (320 x4 ) x12 - 8 | DTCH: 15352 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 17912 (320 x4 ) x14 - 8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 20472 (320 x4 ) x16 - 8 | DTCH: 20472 |
| 11 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 23032 (320 x4 ) x18 - 8 | DTCH: 23032 |
| 12 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 25592 (320 x4 ) x20 - 8 | DTCH: 25592 |
| 13 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 28152 (320 x4 ) x22 - 8 | DTCH: 28152 |
| 14 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 30712 (320 x4 ) x24 - 8 | DTCH: 30712 |
| 15 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 33272 (320 x4 ) x26 - 8 | DTCH: 33272 |
| 16 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 35832 (320 x4 ) x28 - 8 | DTCH: 35832 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 17 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 38392 (320 x4 ) x30 - 8 | DTCH: 38392 |
| 18 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 40952 (320 x4 ) x32 - 8 | DTCH: 40952 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.3.3.3.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (3x337).
   - for sub-tests 4 to 18: DTCH/TF4 (4x337).
3. At step 15 the UE shall return
   - for sub-test 1 to 18: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

### 18.3.3.3.4 Interactive or background / UL: 64(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 16.8 DL: 33.6 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.3.4.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.3.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.2 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB, SHCCH and the DCCH.

- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 64 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 2048 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).

- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 2048 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.3.4.3 Method of test

Uplink TFS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFCS for the 64 kbps USCH – Transport Block Size 145 bits:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.3

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for 2048 kbps DSCH – 20 ms TTI:

See corresponding table in 18.3.3.3.3.3

Downlink TFCS for 2048 kbps DSCH – 20 ms TTI:

See corresponding table in 18.3.3.3.3.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 20 ms TTI & UL TBS (145 bit) and DL TBS (657 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC6, UL_USCH_TFC10, UL_USCH_TFC11, UL_USCH_TFC15, UL_USCH_TFC16 | DTCH: 632 (128 x1 ) x5 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC5, UL_USCH_TFC7, UL_USCH_TFC10, UL_USCH_TFC12, UL_USCH_TFC15, UL_USCH_TFC17 | DTCH: 1528 (128 x3 ) x4 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC5, UL_USCH_TFC8, UL_USCH_TFC10, UL_USCH_TFC13, UL_USCH_TFC15, UL_USCH_TFC18 | DTCH: 2680 (128 x7 ) x3 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 5112 (128 x10 ) x4 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 7672 (128 x10 ) x6- 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 10232 (128x10 ) x8 - 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 12792 (128 x10)x10- 8 | DTCH: 12792 |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 15352 (128 x10)x12- 8 | DTCH: 15352 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 17912 (128 x10)x14-8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 20472 (128 x10)x16-8 | DTCH: 20472 |
| 11 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 23032 (320 x4 ) x18 - 8 | DTCH: 23032 |
| 12 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 25592 (128 x10 ) x20 - 8 | DTCH: 25592 |
| 13 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 28152 (128 x10) x22 - 8 | DTCH: 28152 |
| 14 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 30712 (128 x10) x24 - 8 | DTCH: 30712 |
| 15 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 33272 (128 x10) x26 - 8 | DTCH: 33272 |
| 16 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 35832 (128 x10) x28 - 8 | DTCH: 35832 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 17 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 38392 (128 x10) x30 - 8 | DTCH: 38392 |
| 18 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC14, UL_USCH_TFC15, UL_USCH_TFC19 | DTCH: 40952 (128 x10) x32 - 8 | DTCH: 40952 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC10 and UL_TFC15 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.3.3.4.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH/TF2 (3x145).
   - for sub-test 3: DTCH/TF3 (7x145).
   - for sub-tests 4 to 18: DTCH/TF4 (10x145).
4. At step 15 the UE shall return
   - for sub-test 4 to 18: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on DTCH having the first 1272 bits equal to the contents as the DL RLC SDU sent by the SS.
   - for sub-test 3: an RLC SDU on DTCH having the first 2552 bits equal to the contents as the DL RLC SDU sent by the SS.

## 18.3.3.4 Interactive or background / UL: 384 DL: 2048 kbps / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

### 18.3.3.4.1 Interactive or background / UL: 384 DL (337 bit TBS – 20 ms TTI): 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB+ UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.4.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.4.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.4 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 384 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 384 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.4.1.3 Method of test

Uplink TFS for the 384 kbps USCH – Transport Block Size 337 bits:

| | **TFI** | **DTCH** | **SHCCH (SRB#5)** | **DCCH (SRB#1 – SRB#4)** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 | 0x149 |
| | TF1, bits | 1x337 | 1x169 | 1x149 |
| | TF2, bits | 2x337 | N/A | N/A |
| | TF3, bits | 4x337 | N/A | N/A |
| | TF4, bits | 8x337 | N/A | N/A |
| | TF5, bits | 12x337 | N/A | N/A |
| | TF6, bits | 16x337 | N/A | N/A |
| | TF7, bits | 20x337 | N/A | N/A |
| | TF8, bits | 24x337 | N/A | N/A |

Uplink TFCS for the 384 kbps USCH – Transport Block size 337 bits:

| TFCI | (DTCH, SHCCH, DCCH) |
|---|---|
| UL_USCH_TFC0 | (TF0, TF0, TF0), |
| UL_USCH_TFC1 | (TF1, TF0, TF0), |
| UL_USCH_TFC2 | (TF2, TF0, TF0), |
| UL_USCH_TFC3 | (TF3, TF0, TF0), |
| UL_USCH_TFC4 | (TF4, TF0, TF0), |
| UL_USCH_TFC5 | (TF5, TF0, TF0), |
| UL_USCH_TFC6 | (TF6, TF0, TF0), |
| UL_USCH_TFC7 | (TF7, TF0, TF0), |
| UL_USCH_TFC8 | (TF8, TF0, TF0), |
| UL_USCH_TFC9 | (TF0, TF1, TF0), |
| UL_USCH_TFC10 | (TF1, TF1, TF0), |
| UL_USCH_TFC11 | (TF2, TF1, TF0), |
| UL_USCH_TFC12 | (TF3, TF1, TF0), |
| UL_USCH_TFC13 | (TF4, TF1, TF0), |
| UL_USCH_TFC14 | (TF5, TF1, TF0), |
| UL_USCH_TFC15 | (TF6, TF1, TF0), |
| UL_USCH_TFC16 | (TF7, TF1, TF0), |
| UL_USCH_TFC17 | (TF8, TF1, TF0), |
| UL_USCH_TFC18 | (TF0, TF0, TF1), |
| UL_USCH_TFC19 | (TF1, TF0, TF1), |
| UL_USCH_TFC20 | (TF2, TF0, TF1), |
| UL_USCH_TFC21 | (TF3, TF0, TF1), |
| UL_USCH_TFC22 | (TF4, TF0, TF1), |
| UL_USCH_TFC23 | (TF5, TF0, TF1), |
| UL_USCH_TFC24 | (TF6, TF0, TF1), |
| UL_USCH_TFC25 | (TF7, TF0, TF1), |
| UL_USCH_TFC26 | (TF8, TF0, TF1), |
| UL_USCH_TFC27 | (TF0, TF1, TF1), |
| UL_USCH_TFC28 | (TF1, TF1, TF1), |
| UL_USCH_TFC29 | (TF2, TF1, TF1), |
| UL_USCH_TFC30 | (TF3, TF1, TF1), |
| UL_USCH_TFC31 | (TF4, TF1, TF1), |
| UL_USCH_TFC32 | (TF5, TF1, TF1), |
| UL_USCH_TFC33 | (TF6, TF1, TF1), |
| UL_USCH_TFC34 | (TF7, TF1, TF1), |
| UL_USCH_TFC35 | (TF8, TF1, TF1), |

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.2

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.2

Downlink TFS for 2048 kbps DSCH – 10 ms TTI:

See corresponding table in 18.3.3.3.1.3

Downlink TFCS for 2048 kbps DSCH - 10 ms TTI

See corresponding table in 18.3.3.3.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL TBS (337 bit) and DL TBS (337 bit):

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH _TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC18, UL_USCH_TFC19, UL_USCH_TFC27, UL_USCH_TFC28 | DTCH: 312 (320 x1) x2 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC2, UL_USCH_TFC9, UL_USCH_TFC11, UL_USCH_TFC18, UL_USCH_TFC20, UL_USCH_TFC27, UL_USCH_TFC29 | DTCH: 1272 (320 x2) x2 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21, UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 2552 (320 x4) x2 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 5112 (320 x8) x2 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC5 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 7672 (320 x12) x2 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC14, UL_USCH_TFC18, UL_USCH_TFC23, UL_USCH_TFC27, UL_USCH_TFC32 | DTCH: 10232 (320 x16) x2 - 8 | DTCH:10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 12792 (320 x20) x2 - 8 | DTCH: 12792 |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC7, UL_USCH_TFC9, UL_USCH_TFC16, UL_USCH_TFC18, UL_USCH_TFC25, UL_USCH_TFC27, UL_USCH_TFC34 | DTCH: 15352 (320 x24) x2 - 8 | DTCH: 1 5352 |
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 17912 (320 x8) x7 - 8 | DTCH: 17912 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 19192 (320 x20) x3 - 8 | DTCH: 19192 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC18 and UL_TFC27 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

#### 18.3.3.4.1.4 Test requirements

See 18.1.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST.
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (4x337).
   - for sub-test 4: DTCH/TF3 (8x337).
   - for sub-test 5: DTCH/TF4 (12x337)
   - for sub-test 6: DTCH/TF4 (16x337)
   - for sub-test 7: DTCH/TF4 (20x337)
   - for sub-test 8: DTCH/TF4 (24x337)
   - for sub-test 9: DTCH/TF4 (8x337)
   - for sub-test 10: DTCH/TF4 (20x337).
4. At step 15 the UE shall return
   - for sub-test 1 to 10: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

### 18.3.3.4.2 Interactive or background / UL: 384(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 10 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.4.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.4.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.4 for the downlink 10 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 384 kbps UL PS RAB, SHCCH and the DCCH.

- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 384 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).

- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.4.1.3 Method of test

Uplink TFS for the 384 kbps USCH – Transport Block Size 145 bits:

| | TFI | DTCH | SHCCH (SRB#5) | DCCH (SRB#1 – SRB#4) |
|---|---|---|---|---|
| TFS | TF0, bits | 0x145 | 0x169 | 0x149 |
| | TF1, bits | 1x145 | 1x169 | 1x149 |
| | TF2, bits | 3x145 | N/A | N/A |
| | TF3, bits | 7x145 | N/A | N/A |
| | TF4, bits | 10x145 | N/A | N/A |
| | TF5, bits | 20x145 | N/A | N/A |
| | TF6, bits | 30x145 | N/A | N/A |
| | TF7, bits | 40x145 | N/A | N/A |
| | TF8, bits | 60x145 | N/A | N/A |

Uplink TFCS for the 384 kbps USCH – Transport Block size 145 bits:

See corresponding table in 18.3.3.4.1.2

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.2

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.2

Downlink TFS for 2048 kbps DSCH – 10 ms TTI:

See corresponding table in 18.3.3.3.1.3

Downlink TFCS for 2048 kbps DSCH - 10 ms TTI

See corresponding table in 18.3.3.3.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL TBS (337 bit) and DL TBS (337 bit):

| Sub-test | Downlink TFCS Under Test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH _TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC18, UL_USCH_TFC19, UL_USCH_TFC27, UL_USCH_TFC28 | DTCH: 632 (128 x1) x5 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC2, UL_USCH_TFC9, UL_USCH_TFC11, UL_USCH_TFC18, UL_USCH_TFC20, UL_USCH_TFC27, UL_USCH_TFC29 | DTCH: 1272 (128x5) x2- 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21, UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 2552 (128 x10) x2 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 5112 (128 x20) x2 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC5 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 7672 (128 x30) x2 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC14, UL_USCH_TFC18, UL_USCH_TFC23, UL_USCH_TFC27, UL_USCH_TFC32 | DTCH: 10232 (128 x40) x2 - 8 | DTCH:10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 12792 (128 x50) x2 - 8 | DTCH: 12792 |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC7, UL_USCH_TFC9, UL_USCH_TFC16, UL_USCH_TFC18, UL_USCH_TFC25, UL_USCH_TFC27, UL_USCH_TFC34 | DTCH: 15352 (128 x60) x2 - 8 | DTCH: 15352 |
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 17912 (128 x20) x7 - 8 | DTCH: 17912 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC9, UL_USCH_TFC18, UL_USCH_TFC27 | UL_USCH_TFC0, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 19192 (128 x50) x3 - 8 | DTCH: 19192 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC9, UL_TFC18 and UL_TFC27 are part of the minimum set of TFCIs<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>The UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

#### 18.3.3.4.1.4 Test requirements

See 18.1.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x145).
   - for sub-test 2: DTCH/TF2 (5x145).
   - for sub-test 3: DTCH/TF3 (10x145).
   - for sub-test 4: DTCH/TF3 (20x145).
   - for sub-test 5: DTCH/TF4 (30x145)
   - for sub-test 6: DTCH/TF4 (40x145).
   - for sub-test 7: DTCH/TF4 (50x145).
   - for sub-test 8: DTCH/TF4 (60x145).
   - for sub-test 9: DTCH/TF4 (20x145).
   - for sub-test 10: DTCH/TF4 (50x145).
4. At step 15 the UE shall return
   - for sub-test 1 to 10: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

### 18.3.3.4.3 Interactive or background / UL: 384 (337 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.4.3.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.4.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.4 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 384 kbps UL PS RAB, SHCCH and the DCCH.

- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 384 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).

- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.4.3.3 Method of test

Uplink TFS for the 384 kbps USCH – Transport Block Size 337 bits:

See corresponding table in 18.3..3.3.3.2

Uplink TFCS for the 384 kbps USCH – Transport Block size 337 bits:

See corresponding table in 18.3.3.3.3.2

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.2

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.2

Downlink TFS for 2048 kbps DSCH – 20 ms TTI:

See corresponding table in 18.3.3.3.1.3

Downlink TFCS for 2048 kbps DSCH – 20 ms TTI

See corresponding table in 18.3.3.3.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL TBS (337 bit) and DL TBS (337 bit):

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC18, UL_USCH_TFC19, UL_USCH_TFC27, UL_USCH_TFC28 | DTCH: 632 (320 x1 ) x2 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC9, UL_USCH_TFC11, UL_USCH_TFC18, UL_USCH_TFC20, UL_USCH_TFC27, UL_USCH_TFC29 | DTCH: 1272 (320 x2 ) x2 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21, UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 2872 (320 x4 ) x2 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 5112 (320 x8 ) x2 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC5 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC14, UL_USCH_TFC18, UL_USCH_TFC23, UL_USCH_TFC27, UL_USCH_TFC32 | DTCH: 7672 (320 x12 ) x2 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 10232 (320 x16 ) x2 - 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC7, UL_USCH_TFC9, UL_USCH_TFC16, UL_USCH_TFC18, UL_USCH_TFC25, UL_USCH_TFC27, UL_USCH_TFC34 | DTCH: 12792 (320 x20 ) x2 - 8 | DTCH: 12792 |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC8, UL_USCH_TFC9, UL_USCH_TFC17, UL_USCH_TFC18, UL_USCH_TFC26, UL_USCH_TFC27, UL_USCH_TFC35 | DTCH: 15352 (320 x24 ) x2 - 8 | DTCH: 15352 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 17912 (320 x8 ) x7- 8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 20472 (320 x8 ) x8- 8 | DTCH: 20472 |
| 11 | DL_DSCH_TFC10 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21, UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 23032 (320 x4 ) x18 - 8 | DTCH: 23032 |
| 12 | DL_DSCH_TFC10 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 25592 (320 x16 ) x5 - 8 | DTCH: 25592 |
| 13 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 28152 (320 x8 ) x11 - 8 | DTCH: 28152 |
| 14 | DL_DSCH_TFC10 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 20472 (320 x24 ) x4 - 8 | DTCH: 30712 |
| 15 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 33272 (320 x8 ) x13 - 8 | DTCH: 33272 |
| 16 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 20472 (320 x4 ) x28 - 8 | DTCH: 35832 |

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 17 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 38392 (320 x8 ) x14 - 8 | DTCH: 38392 |
| 18 | DL_DSCH_TFC10 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 40952 (320 x24 ) x8-8 | DTCH: 40952 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

#### 18.3.3.4.3.4 Test requirements

See 18.1.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST.
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x337).
   - for sub-test 2: DTCH/TF2 (2x337).
   - for sub-test 3: DTCH/TF3 (4x337).
   - for sub-test 4: DTCH/TF3 (8x337).
   - for sub-test 5: DTCH/TF4 (12x337)
   - for sub-test 6: DTCH/TF5 (16x337)
   - for sub-test 7: DTCH/TF6 (20x337)
   - for sub-test 8: DTCH/TF8 (24x337)
   - for sub-test 9 to 13: DTCH/TF4 (8x337)
   - for sub-test 11: DTCH/TF3 (4x337)
   - for sub-test 12: DTCH/TF6 (16x337)
   - for sub-test 13: DTCH/TF4 (8x337)
   - for sub-test 14: DTCH/TF8 (24x337)
   - for sub-test 15 to 17: DTCH/TF4 (8x337)
   - for sub-test 18: DTCH/TF8 (24x337)
4. At step 15 the UE shall return
   - for sub-test 1 to 18: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

### 18.3.3.4.4 Interactive or background / UL: 384(145 bit TBS – 20 ms TTI) DL: 2048 kbps (657 bit TBS – 20 ms TTI) / PS RAB + UL: 3.4 DL: 16.8 kbps SRBs for DCCH, CCCH and BCCH + UL: 16.8 DL: 16 kbps SRBs for SHCCH

#### 18.3.3.4.4.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.3.4.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for two UL transport channels (a RACH and a USCH) and two DL transport channels (DSCH and FACH) as specified in TS 34.108, clause 6.11.6.4.2.4 for the downlink 20 ms TTI case.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 384 kbps UL PS RAB, SHCCH and the DCCH.
- The RACH channel can carry combinations of the signalling Radio Bearer for CCCH, DCCH, and SHCCH *excluding or including* an Interactive/Background 384 kbps UL PS RAB.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB, the SHCCH and the DCCH. The Interactive/Background PS RAB on the DSCH has a 10 ms TTI. The Interactive/Background 384 kbps UL PS RAB channel has a 145 bit Transport Block Size (TBS).
- The FACH can carry combinations of the signalling Radio Bearer for CCCH, DCCH, SCCH, BCCH and *excluding or including* an Interactive/Background 384 kbps PS RAB.

To be able to test the downlink radio bearer on the DSCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.3.4.4.3 Method of test

Uplink TFS for the 384 kbps USCH – Transport Block Size 337 bits:

See corresponding table in 18.3..3.3.3.2

Uplink TFCS for the 384 kbps USCH – Transport Block size 337 bits:

See corresponding table in 18.3.3.3.3.2

Uplink TFS for the RACH without DTCH:

See corresponding table in 18.3.3.1.1.2

Uplink TFS for the RACH with DTCH:

See corresponding table in 18.3.3.1.1.2

Downlink TFS for 2048 kbps DSCH – 20 ms TTI:

See corresponding table in 18.3.3.3.1.3

Downlink TFCS for 2048 kbps DSCH – 20 ms TTI

See corresponding table in 18.3.3.3.1.3

Downlink TFS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH without DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Downlink TFCS for FACH with DTCH – 20 ms TTI:

See corresponding table in 18.3.3.1.1.3

Sub-test for RACH/FACH – 20 ms TT1:

See Section 18.3.6.1

Sub-tests for DSCH/USCH – 10 ms TTI & UL 145 bit TBS and DL 337 bit TBS:

| Sub -test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_DSCH_TFC1 | UL_USCH_TFC1 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC9, UL_USCH_TFC10, UL_USCH_TFC18, UL_USCH_TFC19 UL_USCH_TFC27, UL_USCH_TFC28 | DTCH: 632 (128x1 ) x4 - 8 | DTCH: 632 |
| 2 | DL_DSCH_TFC2 | UL_USCH_TFC2 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC2, UL_USCH_TFC9, UL_USCH_TFC11, UL_USCH_TFC18, UL_USCH_TFC20 UL_USCH_TFC27, UL_USCH_TFC29 | DTCH: 1272 (128x5) x2 - 8 | DTCH: 1272 |
| 3 | DL_DSCH_TFC3 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57 UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21 UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 2872 (128x10) x2 - 8 | DTCH: 2552 |
| 4 | DL_DSCH_TFC4 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 5112 (128x20) x2 - 8 | DTCH: 5112 |
| 5 | DL_DSCH_TFC5 | UL_USCH_TFC5 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC5, UL_USCH_TFC9, UL_USCH_TFC14 UL_USCH_TFC18, UL_USCH_TFC23, UL_USCH_TFC27, UL_USCH_TFC32 | DTCH: 7672 (128x30) x2 - 8 | DTCH: 7672 |
| 6 | DL_DSCH_TFC6 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 10232 (128x40) x2 - 8 | DTCH: 10232 |
| 7 | DL_DSCH_TFC7 | UL_USCH_TFC7 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC7, UL_USCH_TFC9, UL_USCH_TFC16 UL_USCH_TFC18, UL_USCH_TFC25, UL_USCH_TFC27, UL_USCH_TFC34 | DTCH: 12792 (128x50) x2 - 8 | DTCH: 12792 |
| 8 | DL_DSCH_TFC8 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC8, UL_USCH_TFC9, UL_USCH_TFC17, UL_USCH_TFC18, UL_USCH_TFC26, UL_USCH_TFC27, UL_USCH_TFC35 | DTCH: 15352 (128x60) x2 - 8 | DTCH: 15352 |

| Sub -test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 9 | DL_DSCH_TFC9 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 17912 (128x20) x7- 8 | DTCH: 17912 |
| 10 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 20472 (128x20) x8- 8 | DTCH: 20472 |
| 11 | DL_DSCH_TFC10 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC3, UL_USCH_TFC9, UL_USCH_TFC12, UL_USCH_TFC18, UL_USCH_TFC21, UL_USCH_TFC27, UL_USCH_TFC30 | DTCH: 23032 (128x10) x18 - 8 | DTCH: 23032 |
| 12 | DL_DSCH_TFC10 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15, UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 25592 (128x40) x5 - 8 | DTCH: 25592 |
| 13 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 28152 (128x20) x11 - 8 | DTCH: 28152 |
| 14 | DL_DSCH_TFC10 | UL_USCH_TFC8 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC6, UL_USCH_TFC9, UL_USCH_TFC15 UL_USCH_TFC18, UL_USCH_TFC24, UL_USCH_TFC27, UL_USCH_TFC33 | DTCH: 30712 (128x60 ) x4 - 8 | DTCH: 30712 |
| 15 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 33272 (128x20) x13 - 8 | DTCH: 33272 |
| 16 | DL_DSCH_TFC10 | UL_USCH_TFC4 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 35832 (128x20) x14 - 8 | DTCH: 35832 |

| Sub -test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (bits) (NOTE) | Test data size (bits) (NOTE) |
|---|---|---|---|---|---|---|
| 17 | DL_DSCH_TFC10 | UL_USCH_TFC3 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 38392 (128x10) x30 - 8 | DTCH: 38392 |
| 18 | DL_DSCH_TFC10 | UL_USCH_TFC6 | DL_DSCH_TFC0, DL_DSCH_TFC19, DL_DSCH_TFC38, DL_DSCH_TFC57, UL_USCH_TFC0, UL_USCH_TFC5, UL_USCH_TFC10, UL_USCH_TFC15 | UL_USCH_TFC0, UL_USCH_TFC1, UL_USCH_TFC4, UL_USCH_TFC9, UL_USCH_TFC13, UL_USCH_TFC18, UL_USCH_TFC22, UL_USCH_TFC27, UL_USCH_TFC31 | DTCH: 40952 (128x40) x8- 8 | DTCH: 40952 |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. DTCH: the UL RLC SDU size have been chosen such that the UE will return all data received in downlink and that the UL RLC SDU will fill up the uplink transport format set under test over one or several transmission time intervals. | | | | | | |

#### 18.3.3.4.3.4 Test requirements

See 18.1.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST.
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: DTCH/TF1 (1x128).
   - for sub-test 2: DTCH/TF2 (5x128).
   - for sub-test 3: DTCH/TF3 (10x128).
   - for sub-test 4: DTCH/TF4 (20x128).
   - for sub-test 5: DTCH/TF5 (30x128)
   - for sub-test 6: DTCH/TF6 (40x128)
   - for sub-test 7: DTCH/TF7 (50x128)
   - for sub-test 8: DTCH/TF8 (60x128)
   - for sub-test 9 to 13: DTCH/TF4 (20x128)
   - for sub-test 14: DTCH/TF8 (60x128)
   - for sub-test 15 to 16: DTCH/TF4 (8x128)
   - for sub-test 17: DTCH/TF3(10x128)
   - for sub-test 18: DTCH/TF6 (40x128)
4. At step 15 the UE shall return
   - for sub-test 1 to 18: an RLC SDU on DTCH having the same content as the DL RLC SDU sent by the SS.

## 18.3.4 Combinations on PDSCH, SCCPCH, DPCH, PUSCH and PRACH

### 18.3.4.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 256 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.3.4.1.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 kbps (320 bit payload – 20 ms TTI) DL: 256 kbps (320 bit payload – 10 ms TTI) / PS RAB/ + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.3.4.1.1.1 Conformance requirement

See 18.3.2.4.1

##### 18.3.4.1.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH, RACH, and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.1. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 320 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 256 kbps PS RAB on the DSCH has a 320 bit payload and 10 ms TTI.
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.3.4.1.1.3 Method of test

Uplink TFS for DCH:

| | TFI | RAB Subflow#1 DTCH | RAB Subflow#2 DTCH | RAB Subflow#3 DTCH | SRB#1-SRB#4 DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81(alt. 1x0) (NOTE) | 0x103 | 0x60 | 0x148 (alt. 1x0) (NOTE) |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Uplink TFCS for DCH:

| TFCI | (Subflow#1, Subflow#2, Subflow#3, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC_3 are part of the minimum set of TFCIs.<br>NOTE 2: In case TB size zero is configured for any transport channel, the first TFC is required; it is optional otherwise. | |

Uplink TFS for USCH – 320 bit payload& 20 ms TTI:

| | TFI | RAB DTCH | SRB SHCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 |
| | TF1, bits | 1x337 | 1x169 |
| | TF2, bits | 2x337 | N/A |
| | TF3, bits | 3x337 | N/A |
| | TF4, bits | 4x337 | N/A |

Uplink TFCS for USCH – 320 bit payload& 20 ms TTI:

| TFCI | (RAB, SHCCH) |
|---|---|
| UL_USCH_TFC0 | (TF0, TF0) |
| UL_USCH_TFC1 | (TF1, TF0) |
| UL_USCH_TFC2 | (TF2, TF0) |
| UL_USCH_TFC3 | (TF3, TF1) |
| UL_USCH_TFC4 | (TF4, TF1) |
| UL_USCH_TFC5 | (TF0, TF1) |
| UL_USCH_TFC6 | (TF1, TF1) |
| UL_USCH_TFC7 | (TF2, TF1) |
| UL_USCH_TFC8 | (TF3, TF1) |
| UL_USCH_TFC9 | (TF4, TF1) |
| NOTE: UL_USCH_TFC0, UL_USCH_TFC1 and UL_USCH_TFC5 are part of the minimum set of TCIs | |

TFS for RACH:

| | TFI | SRB#0 & SRB#5 CCCH, SHCCH |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Downlink TFS for DCH:

| | | RAB subflow #1 DTCH | RAB subflow #2 DTCH | RAB subflow #3 DTCH | SRB#1-SRB#4 DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 (alt. 1x0) (NOTE) | 0x103 | 0x60 | 0x148 (alt. 1x0) (NOTE) |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS for DCH:

| TFCI | DTCH(RAB Subflow#1 – RAB subflow#3), DCCH |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Downlink TFS for DSCH – 320 bit payload& 10 ms TTI:

| | | DTCH<br>RAB Subflow#4 | SHCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 |
| | TF1, bits | 1x337 | 1x169 |
| | TF2, bits | 2x337 | N/A |
| | TF3, bits | 4x337 | N/A |
| | TF4, bits | 8x337 | N/A |

Downlink TFCS for DSCH – 320 bit payload& 10 ms TTI:

| TFCI | 256 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0) |
| DL_DSCH_TFC1 | (TF1, TF0) |
| DL_DSCH_TFC2 | (TF2, TF0) |
| DL_DSCH_TFC3 | (TF3, TF0) |
| DL_DSCH_TFC4 | (TF4, TF0) |
| DL_DSCH_TFC5 | (TF0, TF1) |
| DL_DSCH_TFC6 | (TF1, TF1) |
| DL_DSCH_TFC7 | (TF2, TF1) |
| DL_DSCH_TFC8 | (TF3, TF1) |
| DL_DSCH_TFC9 | (TF4, TF1) |

Downlink TFS for FACH – 32 kbps:

| | | CCCH/SHCCH/BCCH |
|---|---|---|
| TFS | TF0, bits | 0x171 |
| | TF1, bits | 1x171 |
| | TF2, bits | 2x171 |
| | TF3, bits | 3x171(alt. N/A) |
| | TF4, bits | 4x171(alt. N/A) |

Downlink TFCS for FACH– 32 kbps:

| TFCI | CCCH/SHCCH/BCCH |
|---|---|
| DL_FACH_TFC0 | (TF0) |
| DL_FACH_TFC1 | (TF1) |
| DL_FACH_TFC2 | (TF2) |
| DL_FACH_TFC3 | (TF3) |
| DL_FACH_TFC4 | (TF4) |
| | ALT |
| DL_FACH_TFC0 | (TF0,) |
| DL_FACH_TFC1 | (TF1) |
| DL_FACH_TFC2 | (TF2) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:312<br>(1x320) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:632<br>(2x320) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3, | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912<br>(3x320) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(4x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:2552<br>(8x320) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: UL_USCH_TFC0 UL_USCH_TFC1 and UL_USCH_TFC5 are part o f the minimum TFCIs<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.1.1.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be:
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1(1x337)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)

4. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.

   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS

   - for sub-test 3, 5, and 9: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 4, 6, and 10: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

### 18.3.4.1.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 256 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.3.4.1.2.1 Conformance requirement

See 18.3.2.4.1

#### 18.3.4.1.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH , FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.1. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 145 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 256 kbps PS RAB on the DSCH has a 320 bit payload and 10 ms TTI. (TBS).

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.4.1.2.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH – 145 bit payload & 20 ms TTI:

| | TFI | RAB DTCH | SRB SHCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x145 | 0x169 |
| | TF1, bits | 1x145 | 1x169 |
| | TF2, bits | 3x145 | N/A |
| | TF3, bits | 7x145 | N/A |
| | TF4, bits | 10x145 | N/A |

Uplink TFCS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH – 320 bit payload& 10 ms TTI:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DSCH – 320 bit payload& 10 ms TTI:

See comparable table in 18.3.4.1.1.3

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0<br>UL_USCH_TFC1<br>UL_USCH_TFC5<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(128 x 1)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(128 x 1)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(128 x 3)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(128 x 3)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3, | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128) x 2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: UL_USCH_TFC0 UL_USCH_TFC1 and UL_USCH_TFC5 are part o f the minimum TFCIs<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.1.2.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1(1x145)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60); Subflow#4/TF1(1x145)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2(3x145)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60);Subflow#4/TF2(3x145)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3(7x145)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60); Subflow#4/TF3(7x145)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4(10x145)

- for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60); Subflow#4/TF4(10x145)

4. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.

   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as the RLC SDU sent by SS

   - for sub-test 3: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 312 bits equal to the content as sent by SS

   - for sub-test 4: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 312 bits equal to the content as sent by SS

   - for sub-test 5: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 632 bits equal to the content as sent by SS

   - for sub-test 6: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 632 bits equal to the content as sent by SS

   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

   - for sub-test 9: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 10: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as the RLC SDU as sent by SS

### 18.3.4.1.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 256 kbps (320 bit payload – 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.3.4.1.3.1 Conformance requirement

See 18.3.2.4.1

#### 18.3.4.1.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH , FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.1. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 320 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 256 kbps PS RAB on the DSCH has a 320 bit payload and 20 ms TTI.
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.4.1.3.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH - 320 bit payload& 20 ms TTI:

| | | **DTCH RAB Subflow#4** | **SHCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 |
| | TF1, bits | 1x337 | 1x169 |
| | TF2, bits | 2x337 | N/A |
| | TF3, bits | 4x337 | N/A |
| | TF4, bits | 8x337 | N/A |
| | TF5, bits | 12x337 | N/A |
| | TF6, bits | 16x337 | N/A |

Downlink TFCS for DSCH – 320 bit payload& 20 ms TTI:

| TFCI | 256 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0), |
| DL_DSCH_TFC7 | (TF0, TF1), |
| DL_DSCH_TFC8 | (TF1, TF1), |
| DL_DSCH_TFC9 | (TF2, TF1), |
| DL_DSCH_TFC10 | (TF3, TF1), |
| DL_DSCH_TFC11 | (TF4, TF1), |
| DL_DSCH_TFC12 | (TF5, TF1), |
| DL_DSCH_TFC13 | (TF6, TF1) |

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912<br>(3x320) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:3832<br>(12x320) -8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320) -8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4 x 320)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(16x320) -8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4 x 320)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(16x320) -8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.1.3.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x337)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1(1x60); Subflow#4/TF4 (4x337)
   - for sub-test 13: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 14: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
   - for sub-test 3, 5, and 9: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 4, 6, and 10: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

- for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

#### 18.3.4.1.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 256 kbps (320 bit payload – 20 ms TTI)/ PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.3.4.1.4.1 Conformance requirement

See 18.3.2.4.1

##### 18.3.4.1.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH , FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.1. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 145 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 256 kbps PS RAB on the DSCH has a 320 bit payload and 20 ms TTI. (TBS).
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

##### 18.3.4.1.4.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.1.3.3

Downlink TFCS for DSCH - 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.1.3.3

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0<br>UL_USCH_TFC1<br>UL_USCH_TFC5<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(128 x 1)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(128 x 3)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(128 x 3)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:3832<br>(12x320) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(16x320) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC7,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(16x320) - 8 |

| | |
|---|---|
| NOTE 1: | UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs. |
| NOTE 2: | UL_USCH_TFC0 UL_USCH_TFC1 and UL_USCH_TFC5 are part o f the minimum TFCIs |
| NOTE 3: | See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. |

See 18.3.1.3 for test procedure.

#### 18.3.4.1.4.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x145)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x145)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2(2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (3x145)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF2 (3x337)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (7x145)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (10x145)
   - for sub-test 13: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 14: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (10x145)
4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
   - for sub-test 3, 5, and 9: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 4, 6, and 10: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 7,9,11,13: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

- for sub-test 8,10,12,14: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

## 18.3.4.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 384 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH+ DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

### 18.3.4.2.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (320 bit payload – 20 ms TTI) DL: 384 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.3.4.2.1.1 Conformance requirement

See 18.3.2.4.1

#### 18.3.4.2.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH, RACH, and DCH) and three DL transport channels (DSCH , FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.2. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 320 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 256 kbps PS RAB on the DSCH has a 320 bit payload and 10 ms TTI.

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.4.2.1.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH – 320 bit payload& 10 ms TTI:

| | | DTCH<br>RAB Subflow#4 | SHCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 |
| | TF1, bits | 1x337 | 1x169 |
| | TF2, bits | 2x337 | N/A |
| | TF3, bits | 4x337 | N/A |
| | TF4, bits | 8x337 | N/A |
| | TF4, bits | 12x337 | N/A |

Downlink TFCS for DSCH – 320 bit payload& 10 ms TTI:

| TFCI | 384 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0), |
| DL_DSCH_TFC6 | (TF0, TF1), |
| DL_DSCH_TFC7 | (TF1, TF1), |
| DL_DSCH_TFC8 | (TF2, TF1), |
| DL_DSCH_TFC9 | (TF3, TF1), |
| DL_DSCH_TFC10 | (TF4, TF1), |
| DL_DSCH_TFC11 | (TF5, TF1) |

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312<br>(1x320) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:632<br>(2x320) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3, | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912<br>(3x320) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(4x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x320) x 2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:2552<br>(8x320) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:3832<br>(12x320)-8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320)-8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.2.1.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)

- for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1(1x337)
- for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
- for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)
- for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
- for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
- for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
- for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
- for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
- for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)

4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
   - for sub-test 3, 5, 9 and 11: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 4, 6, 10 and 12: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

#### 18.3.4.2.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (128 bit payload - 20 ms TTI) DL: 384 kbps (320 bit payload – 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.3.4.2.2.1 Conformance requirement

See 18.3.2.4.1

##### 18.3.4.2.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.2. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 256 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 384 kbps PS RAB on the DSCH has a 320 bit payload and 10 ms TTI. (TBS).
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH, and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.4.2.2.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH – 10 ms TTI:

See comparable table in 18.3.4.2.1.3

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(1x128)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312<br>(1x320) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#4:376<br>(1x128)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(3x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632<br>(2x320) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(3x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272<br>(4x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#4:1784<br>(7x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552<br>(8x320) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:3832<br>(12x320)-8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320)-8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: UL_USCH_TFC0 UL_USCH_TFC1 and UL_USCH_TFC5 are part o f the minimum TFCIs<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.2.2.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)

- for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x145)
- for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x145)
- for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (3x128)
- for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (3x128)
- for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (7x128)
- for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (7x128)
- for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x128)
- for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x128)
- for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x128)
- for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x128)

4. At step 15 the UE shall return

- for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
- for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
- for sub-test 3: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 312 bits equal to content sent by SS
- for sub-test 4: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 312 bits equal to content sent by SS
- for sub-test 5: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 632 bits equal to content sent by SS
- for sub-test 6: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 632 bits equal to content sent by SS
- for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
- for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
- for sub-test 9: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same contents equal to content sent by SS
- for sub-test 10: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same contents equal to content sent by SS

### 18.3.4.2.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 384 kbps (320 bit payload – 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.3.4.2.3.1 Conformance requirement

See 18.3.2.4.1

#### 18.3.4.2.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.2. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 320 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 384 kbps PS RAB on the DSCH has a 320 bit payload and 20 ms TTI.
- he FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.4.2.3.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH - 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for USCH - 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH - 320 bit payload& 20 ms TTI:

| | | DTCH<br>RAB Subflow#4 | SHCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x337 | 0x169 |
| | TF1, bits | 1x337 | 1x169 |
| | TF2, bits | 2x337 | N/A |
| | TF3, bits | 4x337 | N/A |
| | TF4, bits | 8x337 | N/A |
| | TF5, bits | 12x337 | N/A |
| | TF6, bits | 16x337 | N/A |
| | TF7, bits | 20x337 | N/A |
| | TF8, bits | 24x337 | N/A |

Downlink TFCS for DSCH – - 320 bit payload & 20 ms TTI:

| TFCI | 384 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0), |
| DL_DSCH_TFC7 | (TF7, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0), |
| DL_DSCH_TFC9 | (TF0, TF1), |
| DL_DSCH_TFC10 | (TF1, TF1), |
| DL_DSCH_TFC11 | (TF2, TF1), |
| DL_DSCH_TFC12 | (TF3, TF1), |
| DL_DSCH_TFC13 | (TF4, TF1), |
| DL_DSCH_TFC14 | (TF5, TF1), |
| DL_DSCH_TFC15 | (TF6, TF1), |
| DL_DSCH_TFC16 | (TF7, TF1), |
| DL_DSCH_TFC17 | (TF8, TF1) |

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0<br>UL_USCH_TFC1<br>UL_USCH_TFC5<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:312<br>(1x320) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632<br>(2x320) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912<br>(3x320)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272<br>(4x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1912 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x320)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552<br>(8x320) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:3832<br>(12x320) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(4x320)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(16x320) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(16x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(4x320)x5 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:6392<br>(20x320) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(4x320)x5 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(20x320) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:7672<br>(24x320) - 8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(24x320) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.2.3.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x337)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)

- for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
- for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
- for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
- for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
- for sub-test 1,13,15,and 17: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
- for sub-test 12,14,16,18: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)

4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
   - for sub-test 3, 5, 9 and 11: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 4, 6, 10 and 12: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
   - for sub-test 9,11,13,15 and 17: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
   - for sub-test 8,10,12,14,16 and 18: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

#### 18.3.4.2.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 384 kbps (320 bit payload – 20 ms TTI)/ PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.3.4.2.4.1 Conformance requirement

See 18.3.2.4.1

##### 18.3.4.2.4.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.2. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 320 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 384 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 384 kbps PS RAB on the DSCH has a 320 bit payload and 20 ms TTI. (TBS).
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.4.2.4.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for USCH:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.2.3.1

Downlink TFCS for DSCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.2.3.1

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0<br>UL_USCH_TFC1<br>UL_USCH_TFC5<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(1x128)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:312<br>(1x320) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:376<br>(1x128)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(3x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632<br>(2x320) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:760<br>(3x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(4x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1784<br>(7x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC6,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552<br>(8x320) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(10x128)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:3832<br>(12x320) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(10x128)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:3832<br>(12x320)-8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(16x320) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(16x320) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(10x128)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:6392<br>(20x320) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(10x128) 6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:6392<br>(20x320) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(10x128)x7 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:7672<br>(24x320)-8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC9,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(10x128)x7 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(24x320) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: UL_USCH_TFC0 UL_USCH_TFC1 and UL_USCH_TFC5 are part o f the minimum TFCIs<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.2.4.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x145)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1(1x145)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (3x128)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (3x128)

- for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (7x128)
- for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (7x128)
- for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x128)
- for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x128)
- for sub-test 11,13,15, and 17: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x128)
- for sub-test 12,14,16, and 18: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x128)

4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS
   - for sub-test 3, 5, 9 and 1,13, 15 and 17: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 4, 6, 10,12, 14 16 and 18: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS
   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS
   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

## 18.3.4.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 DL: 2048 kbps / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

### 18.3.4.3.1 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 2048 kbps (640 bit payload - 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.3.4.3.1.1 Conformance requirement

See 18.3.2.4.1

#### 18.3.4.3.1.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH, RACH, and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.3. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 640 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 320 bit payload and 20 ms TTI.
- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 2048 kbps PS RAB on the DSCH has a 640 bit payload and 10 ms TTI.
- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.
- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.4.3.1.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for USCH – 320 bit payload& 20 ms TTI:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH – 640 bit payload & 10 ms TTI:

| | | **DTCH RAB Subflow#4** | **SHCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x657 | 0x169 |
| | TF1, bits | 1x657 | 1x169 |
| | TF2, bits | 2x657 | N/A |
| | TF3, bits | 4x657 | N/A |
| | TF4, bits | 8x657 | N/A |
| | TF5, bits | 12x657 | N/A |
| | TF6, bits | 16x657 | N/A |
| | TF7, bits | 20x657 | N/A |
| | TF8, bits | 24x657 | N/A |
| | TF9, bits | 28x657 | N/A |
| | TF10,bits | 30x657 | N/A |

Downlink TFCS for DSCH – 640 bit payload & 10 ms TTI:

| TFCI | 2048 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0) |
| DL_DSCH_TFC7 | (TF7, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0), |
| DL_DSCH_TFC9 | (TF9, TF0), |
| DL_DSCH_TFC10 | (TF10, TF0), |
| DL_DSCH_TFC11 | (TF0, TF1), |
| DL_DSCH_TFC12 | (TF1, TF1), |
| DL_DSCH_TFC13 | (TF2, TF1), |
| DL_DSCH_TFC14 | (TF3, TF1), |
| DL_DSCH_TFC15 | (TF4, TF1), |
| DL_DSCH_TFC16 | (TF5, TF1), |
| DL_DSCH_TFC17 | (TF6, TF1), |
| DL_DSCH_TFC18 | (TF7, TF1), |
| DL_DSCH_TFC19 | (TF8, TF1), |
| DL_DSCH_TFC20 | (TF9, TF1) |

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(320x1)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632<br>(1x640) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(320x1)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(1x640) - 8 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(320x2)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:1272<br>(2x640) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(320x2)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(2x640) - 8 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2872<br>(3x320)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:2552<br>(4x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2872<br>(3x320)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x640) - 8 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(8x640) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(8x640) - 8 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:7672<br>(12x640) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(12x640) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(4x320)x8 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:10228<br>(16x640) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(4x320)x8 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:10228<br>(16x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(4x320)x10 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:12792<br>(20x640) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(4x320)x10 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:12792<br>(20x640) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(4x320)x12 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:15352<br>(24x640) - 8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(4x320)x12 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:15352<br>(24x640) - 8 |
| 19 | DL_TFC1,<br>DL_DSCH_TFC9 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(4x320)x14 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:17912<br>(28x640) - 8 |
| 20 | DL_TFC2,<br>DL_DSCH_TFC9 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(4x320)x14 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:17912<br>(28x640) - 8 |
| 21 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:19192<br>(4x320)x15 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:19192<br>(30x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:19192<br>(4x320)x15 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:19192<br>(30x640) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.3.1.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x337)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
   - for sub-test 13,15,17,19,21: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 14,16,18,20,22: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS

- for sub-test 3, 5, 9,11,13,15,17,19 and 21: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 4, 6, 10, 12, 14, 16,18, 20, 22: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

- for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

### 18.3.4.3.2 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64 (128 bit payload - 20 ms TTI) DL: 2048 kbps (640 bit payload - 10 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.3.4.3.2.1 Conformance requirement

See 18.3.2.4.1

#### 18.3.4.3.2.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.3. Test is designed for the downlink shared channel (DSCH) 10 ms TTI case and 640 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background 2048 kbps PS RAB on the DSCH has a 640 bit payload and 10 ms TTI. (TBS).

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.4.3.2.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH - 145 bit payload & 20 ms TTI:

See comparable table in 18.3.4.1.2.3

Uplink TFCS for USCH – 145 bit payload & 20 ms TTI:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH – 10 ms TTI:

See comparable table in 18.3.4.3.1.3

Downlink TFCS for DSCH – 10 ms TTI:

See comparable table in 18.3.4.3.1.3

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(128x1)x5 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:632<br>(1x640) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0<br>UL_USCH_TFC1<br>UL_USCH_TFC5<br>UL_USCH_TFC6<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(128x1)x5 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(1x640) - 8 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1528<br>(128x3)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(2x640) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1528<br>(128x3)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(2x640) - 8 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2680<br>(128x7)x3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:2552<br>(4x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2680<br>(128x7)x3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x640) - 8 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(128x10)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:5112<br>(8x640) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(128x10)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(8x640) - 8 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(128x10)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:7672<br>(12x640) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>128(x10)x6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(12x640) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10232<br>(128x10)x8 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#3:No data<br>Subflow#4:10232<br>(16x640) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4: 10232<br>(128x10)x8 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:10232<br>(16x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(128x10)x10 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:12792<br>(20x640) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(128x10)x10 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:12792<br>(20x640) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(128x10)x12 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:15352<br>(24x640) - 8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(128x10)x12 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:15352<br>(24x640) - 8 |
| 19 | DL_TFC1,<br>DL_DSCH_TFC9 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(128x10)x14 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:17912<br>(28x640) - 8 |
| 20 | DL_TFC2,<br>DL_DSCH_TFC9 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(128x10)x14 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:17912<br>(28x640) - 8 |
| 21 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:19192<br>(128x10)x15 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:19192<br>(30x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:19192<br>(128x10)x15 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:19192<br>(30x640) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.3.2.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1(1x145)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x145)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (3x145)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (3x145)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (7x145)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (7x145)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)
   - for sub-test 13,15,17,19,21: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 14,16,18,20,22: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)
4. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.
   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS

- for sub-test 3, 9,11,13,15,17,19 and 21: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 4, 10, 12, 14, 16,18, 20, 22: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

- for sub-test 5: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

- for sub-test 6: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

- for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

- for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

### 18.3.4.3.3 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(320 bit payload – 20 ms TTI) DL: 2048 kbps (640 bit payload - 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

#### 18.3.4.3.3.1 Conformance requirement

See 18.3.2.4.1

#### 18.3.4.3.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH, RACH, and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.3. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 640 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps UL PS RAB channel has a 337 bit Transport Block Size (TBS).

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 2048 kbps DL PS RAB channel has a 657 bit Transport Block Size (TBS).

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

18.3.4.3.3.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for USCH:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH – 20 ms TTI:

| | | **DTCH RAB Subflow#4** | **SHCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x657 | 0x169 |
| | TF1, bits | 1x657 | 1x169 |
| | TF2, bits | 2x657 | N/A |
| | TF3, bits | 4x657 | N/A |
| | TF4, bits | 8x657 | N/A |
| | TF5, bits | 12x657 | N/A |
| | TF6, bits | 16x657 | N/A |
| | TF7, bits | 20x657 | N/A |
| | TF8, bits | 24x657 | N/A |
| | TF9, bits | 28x657 | N/A |
| | TF10,bits | 32x657 | N/A |
| | TF11,bits | 36x657 | N/A |
| | TF12,bits | 40x657 | N/A |
| | TF13,bits | 44x657 | N/A |
| | TF14,bits | 48x657 | N/A |
| | TF15,bits | 52x657 | N/A |
| | TF16,bits | 56x657 | N/A |
| | TF17,bits | 60x657 | N/A |
| | TF17,bits | 64x657 | N/A |

Downlink TFCS for DSCH –20 ms TTI:

| TFCI | 2048 kbps RAB DTCH & SHCCH |
|---|---|
| DL_DSCH_TFC0 | (TF0, TF0), |
| DL_DSCH_TFC1 | (TF1, TF0), |
| DL_DSCH_TFC2 | (TF2, TF0), |
| DL_DSCH_TFC3 | (TF3, TF0), |
| DL_DSCH_TFC4 | (TF4, TF0), |
| DL_DSCH_TFC5 | (TF5, TF0), |
| DL_DSCH_TFC6 | (TF6, TF0) |
| DL_DSCH_TFC7 | (TF7, TF0), |
| DL_DSCH_TFC8 | (TF8, TF0), |
| DL_DSCH_TFC9 | (TF9, TF0), |
| DL_DSCH_TFC10 | (TF10, TF0), |
| DL_DSCH_TFC11 | (TF11, TF0), |
| DL_DSCH_TFC12 | (TF12, TF0), |
| DL_DSCH_TFC13 | (TF13, TF0), |
| DL_DSCH_TFC14 | (TF14, TF0), |
| DL_DSCH_TFC15 | (TF15, TF0), |
| DL_DSCH_TFC16 | (TF16, TF0), |
| DL_DSCH_TFC17 | (TF17, TF0), |
| DL_DSCH_TFC18 | (TF18, TF0), |
| DL_DSCH_TFC19 | (TF0, TF1), |
| DL_DSCH_TFC20 | (TF1, TF1), |
| DL_DSCH_TFC21 | (TF2, TF1), |
| DL_DSCH_TFC22 | (TF3, TF1), |
| DL_DSCH_TFC23 | (TF4, TF1), |
| DL_DSCH_TFC24 | (TF5, TF1), |
| DL_DSCH_TFC25 | (TF6, TF1), |
| DL_DSCH_TFC26 | (TF7, TF1), |
| DL_DSCH_TFC27 | (TF8, TF1), |
| DL_DSCH_TFC28 | (TF9, TF1) |
| DL_DSCH_TFC29 | (TF10, TF1), |
| DL_DSCH_TFC30 | (TF11, TF1), |
| DL_DSCH_TFC31 | (TF12, TF1), |
| DL_DSCH_TFC32 | (TF13, TF1), |
| DL_DSCH_TFC33 | (TF14, TF1), |
| DL_DSCH_TFC34 | (TF15, TF1), |
| DL_DSCH_TFC35 | (TF16, TF1), |
| DL_DSCH_TFC36 | (TF17, TF1), |
| DL_DSCH_TFC37 | (TF17, TF1), |

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:312 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(320x1)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:632<br>(1x640) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(320x1)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(1x640) - 8 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(320x2)x2 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(2x640) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(320x2)x2 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(2x640) - 8 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3, | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2872<br>(3x320) x 3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:2552<br>(4x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2872<br>(3x320) x 3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x640) - 8 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320) x 4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:5112<br>(8x640) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(4x320) x 4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(8x640) - 8 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:7672<br>(12x640) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(4x320)x6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(12x640) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(4x320)x8 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:10228<br>(16x640) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(4x320)x8 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:10228<br>(16x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(4x320)x10 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:12792<br>(20x640) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(4x320)x10 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:12792<br>(20x640) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(4x320)x12 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:15352<br>(24x640) - 8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(4x320)x12 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:15352<br>(24x640) - 8 |
| 19 | DL_TFC1,<br>DL_DSCH_TFC9 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(4x320)x14 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:17912<br>(28x640) - 8 |
| 20 | DL_TFC2,<br>DL_DSCH_TFC9 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(4x320)x14 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:17912<br>(28x640) - 8 |
| 21 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 20472<br>(4x320)x16 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:20472<br>(32x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 20472<br>(4x320)x16 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:20472<br>(32x640) - 8 |
| 23 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 23032<br>(4x320)x18 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:23032<br>(36x640) - 8 |
| 24 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 23032<br>(4x320)x18 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:23032<br>(36x640) - 8 |
| 25 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 25592<br>(4x320)x20 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:25592<br>(40x640) - 8 |
| 26 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 25592<br>(4x320)x20 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:25592<br>(40x640) - 8 |
| 27 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 28152<br>(4x320)x22 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:28152<br>(44x640) - 8 |
| 28 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:28152<br>(4x320)x22 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:28152<br>(44x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 29 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:30712<br>(4x320)x24 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:30712<br>(48x640) - 8 |
| 30 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:30712<br>(4x320)x24 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:30712<br>(48x640) - 8 |
| 31 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:33272<br>(4x320)x26 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:33272<br>(52x640) - 8 |
| 32 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:33272<br>(4x320)x26 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:33272<br>(52x640) - 8 |
| 33 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:35832<br>(4x320)x28 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:35832<br>(56x640) - 8 |
| 34 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:35832<br>(4x320)x28 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:35832<br>(56x640) - 8 |
| 35 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:38392<br>(4x320)x30 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:38392<br>(60x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 36 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:38392<br>(4x320)x30 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:38392<br>(60x640) - 8 |
| 37 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:40952<br>(4x320)x32 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:40952<br>(64x640) - 8 |
| 38 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:40952<br>(4x320)x32 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:40952<br>(64x640) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.3.3.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1 (1x337)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1 (1x337)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (2x337)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2 (2x337)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (3x337)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (3x337)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)

- for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)

- for sub-test 13,15,17,19,21,23,25,27,29,31,33,35, and 37: Subflow#1/TF1 (1x39); Subflow#4/TF4 (4x337)

- for sub-test 14,16,18,20,22,24,26,28,30,32,34,36,and 38: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (4x337)

4. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.

   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS

   - for sub-test 3, 5, 9,11,13,15,17,19,21,23,25,27,29,31,33,35, and 37: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 4, 6, 10, 12, 14, 16,18, 20, 22,24,26,28,30,32,34,36, and 38: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

#### 18.3.4.3.4 Conversational / speech / UL: 12.2 DL: 12.2 kbps / CS RAB + UL: 3.4 DL: 3.4 kbps SRBs for DCCH + Interactive or background / UL: 64(128 bit payload - 20 ms TTI) DL: 2048 kbps (640 bit payload - 20 ms TTI) / PS RAB + UL: 16.8 kbps SRBs for CCCH and SHCCH + DL: 33.6 kbps SRBs for CCCH SHCCH and BCCH

##### 18.3.4.3.3.1 Conformance requirement

See 18.3.2.4.1

##### 18.3.4.3.3.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration for three UL transport channels (USCH , RACH , and DCH) and three DL transport channels (DSCH, FACH, and DCH) as specified in TS 34.108, clause 6.11.6.4.3.3. Test is designed for the downlink shared channel (DSCH) 20 ms TTI case and 640 bit payload for the Interactive/Background PS RAB.

On the UL

- The USCH channel can carry combinations of the Interactive/Background 64 kbps UL PS RAB and 16.8 kbps SHCCH. The Interactive/Background 64 kbps PS RAB on the USCH has a 145 bit payload and 20 ms TTI.

- The RACH channel can carry combinations of the 16.8 kbps signalling Radio Bearers for CCCH and SHCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH.

On the DL

- The DSCH can carry combinations of the Interactive/Background 2048 kbps PS RAB and the 16.8 kbps SHCCH. The Interactive/Background PS RAB on the DSCH has a 20 ms TTI. The Interactive/Background 2048 kbps PS RAB on the DSCH has a 640 bit payload and 20 ms TTI. (TBS).

- The FACH can carry combinations of the signalling 33.6 kbps Radio Bearer for CCCH, BCCH and SCCH.

- The DCH channel can carry combinations of the 12.2 kbps Conversational/Speech/CS and the 3.4 kbps DCCH

To be able to test the downlink radio bearer on the DSCH and the DCH, the UE loopback function is used on the uplink radio bearer on the USCH.

#### 18.3.4.3.3.3 Method of test

Uplink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Uplink TFS for USCH:

See comparable table in 18.3.4.1.1.3

Uplink TFCS for USCH:

See comparable table in 18.3.4.1.1.3

TFS for RACH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for DCH:

See comparable table in 18.3.4.1.1.3

Downlink TFS for DSCH – 640 bit payload & 20 ms TTI:

See comparable table in 18.3.4.3.3.3

Downlink TFCS for DSCH – 640 bit payload & 20 ms TTI:

See comparable table in 18.3.4.3.3.3

Downlink TFS for FACH – 32 kbps:

See comparable table in 18.3.4.1.1.3

Downlink TFCS for FACH– 32 kbps:

See comparable table in 18.3.4.1.1.3

Sub-tests – USCH:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs (NOTE 1) | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC1 | UL_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:No data |
| 2 | DL_TFC2 | UL_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:128 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:No data |
| 3 | DL_TFC1,<br>DL_DSCH_TFC1 | UL_TFC1,<br>UL_USCH_TFC1 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(128x1)x5 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:632<br>(1x640) - 8 |
| 4 | DL_TFC2,<br>DL_DSCH_TFC1 | UL_TFC2,<br>UL_USCH_TFC1 | DL_DSCH_TFC0<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC5,<br>UL_USCH_TFC6,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(128x1)x5 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:632<br>(1x640) - 8 |
| 5 | DL_TFC1,<br>DL_DSCH_TFC2 | UL_TFC1,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1528<br>(128x3)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:1272<br>(2x640) - 8 |
| 6 | DL_TFC2,<br>DL_DSCH_TFC2 | UL_TFC2,<br>UL_USCH_TFC2 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC2,<br>UL_USCH_TFC5,<br>UL_USCH_TFC7,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1528<br>(128x3)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:1272<br>(2x640) - 8 |
| 7 | DL_TFC1,<br>DL_DSCH_TFC3 | UL_TFC1,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2680<br>(128x7) x 3 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:2552<br>(4x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 8 | DL_TFC2,<br>DL_DSCH_TFC3 | UL_TFC2,<br>UL_USCH_TFC3 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC3,<br>UL_USCH_TFC5,<br>UL_USCH_TFC8,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2680<br>(128x7) x 3 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:2552<br>(4x640) - 8 |
| 9 | DL_TFC1,<br>DL_DSCH_TFC4 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:5112<br>(8x640) - 8 |
| 10 | DL_TFC2,<br>DL_DSCH_TFC4 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(10x128)x4 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:5112<br>(8x640) - 8 |
| 11 | DL_TFC1,<br>DL_DSCH_TFC5 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(10x128)x6 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:7672<br>(12x640) - 8 |
| 12 | DL_TFC2,<br>DL_DSCH_TFC5 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(10x128)x6 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:7672<br>(12x640) - 8 |
| 13 | DL_TFC1,<br>DL_DSCH_TFC6 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(10x128)x8 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:10228<br>(16x640) - 8 |
| 14 | DL_TFC2,<br>DL_DSCH_TFC6 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:10228<br>(10x128)x8 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:10228<br>(16x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 15 | DL_TFC1,<br>DL_DSCH_TFC7 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(10x1280)x10 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:12792<br>(20x640) - 8 |
| 16 | DL_TFC2,<br>DL_DSCH_TFC7 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:12792<br>(10x128)x10 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:12792<br>(20x640) - 8 |
| 17 | DL_TFC1,<br>DL_DSCH_TFC8 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(10x128)x12 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:15352<br>(24x640) - 8 |
| 18 | DL_TFC2,<br>DL_DSCH_TFC8 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:15352<br>(10x128)x12 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:15352<br>(24x640) - 8 |
| 19 | DL_TFC1,<br>DL_DSCH_TFC9 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(10x128)x14 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:17912<br>(28x640) - 8 |
| 20 | DL_TFC2,<br>DL_DSCH_TFC9 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:17912<br>(10x128)x14 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:17912<br>(28x640) - 8 |
| 21 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 20472<br>(10x128)x16 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:20472<br>(32x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 22 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:20472<br>(10x128)x16 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:20472<br>(32x640) - 8 |
| 23 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:23032<br>(10x128)x18 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:23032<br>(36x640) - 8 |
| 24 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:23032<br>(10x128)x18 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:23032<br>(36x640) - 8 |
| 25 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:25592<br>(10x128)x20 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:25592<br>(40x640) - 8 |
| 26 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 25592<br>(10x128)x20 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:25592<br>(40x640) - 8 |
| 27 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subfl#4: 28152<br>(10x128)x22 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:28152<br>(44x640) - 8 |
| 28 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:28152<br>(10x128)x22 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:28152<br>(44x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 29 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:30712<br>(10x128)x24 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:30712<br>(48x640) - 8 |
| 30 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:30712<br>(10x128)x24 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:30712<br>(48x640) - 8 |
| 31 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:33272<br>(10x128)x26 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:33272<br>(52x640) - 8 |
| 32 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:33272<br>(10x128)x26 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:33272<br>(52x640) - 8 |
| 33 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:35832<br>(10x128)x28 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:35832<br>(56x640) - 8 |
| 34 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:35832<br>(10x128)x28 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:35832<br>(56x640) - 8 |
| 35 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:38392<br>(10x128)x30 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:38392<br>(60x640) - 8 |

| | | | | | | |
|---|---|---|---|---|---|---|
| 36 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:38392<br>(10x128)x30 - 8 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflow#4:38392<br>(60x640) - 8 |
| 37 | DL_TFC1,<br>DL_DSCH_TFC10 | UL_TFC1,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC4 | Subflow#1:39<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:40952<br>(10x128)x32 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:40952<br>(64x640) - 8 |
| 38 | DL_TFC2,<br>DL_DSCH_TFC10 | UL_TFC2,<br>UL_USCH_TFC4 | DL_DSCH_TFC0,<br>DL_DSCH_TFC11,<br>UL_USCH_TFC0,<br>UL_USCH_TFC5,<br>DL_TFC0,<br>DL_TFC3,<br>UL_TFC0,<br>UL_TFC3 | UL_USCH_TFC0,<br>UL_USCH_TFC1,<br>UL_USCH_TFC4,<br>UL_USCH_TFC5,<br>UL_USCH_TFC9,<br>UL_TFC0,<br>UL_TFC1,<br>UL_TFC2,<br>UL_TFC3,<br>UL_TFC5 | Subflow#1:81<br>Subflow#2:103<br>Subflow#3:60<br>Subflw#4:40952<br>(10x128)x32 - 8 | Subflow#1:39<br>Subflow#2:No data<br>Subflow#1:No data<br>Subflow#4:40952<br>(64x640) - 8 |
| NOTE 1: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. | | | | | | |

See 18.3.1.3 for test procedure.

#### 18.3.4.3.3.4 Test requirements

See 18.3.1.3 for definition of step 10 and step 15.

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step A10i or B10b the UE shall send PUSCH CAPACITY REQUEST
3. At step 15 the UE transmitted transport format shall be
   - for sub-test 1: Subflow#1/TF1 (1x39).
   - for sub-test 2: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60)
   - for sub-test 3: Subflow#1/TF1 (1x39); Subflow#4/TF1(1x145)
   - for sub-test 4: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF1(1x145)
   - for sub-test 5: Subflow#1/TF1 (1x39); Subflow#4/TF2 (3x145)
   - for sub-test 6: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF2(3x145)
   - for sub-test 7: Subflow#1/TF1 (1x39); Subflow#4/TF3 (7x145)
   - for sub-test 8: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF3 (7x145)
   - for sub-test 9: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)
   - for sub-test 10: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)
   - for sub-test 11: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)

- for sub-test 12: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)

- for sub-test 13,15,17,19,21,23,2,5,27,29,31,33,35 and 37: Subflow#1/TF1 (1x39); Subflow#4/TF4 (10x145)

- for sub-test 14,16,18,20,22,24,26,28,30,32,34,36 and 38: Subflow#1/TF2 (1x81); Subflow#2/TF1 (1x103); and Subflow#3/TF1 (1x60); Subflow#4/TF4 (10x145)

4. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on Subflow#1 having the same content as sent by SS; and no data shall be received on Subflow#2 or Subflow#3.

   - for sub-test 2: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS

   - for sub-test 3, 9,11,13,15,17,19,21,23,25,27,29,31,33,35 and 37: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 4, 10, 12, 14, 16,18, 20, 22,24,26,28,30,32,34,36 and 38: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the same content as sent by SS

   - for sub-test 5: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

   - for sub-test 6: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 1272 bits equal to the content as sent by SS

   - for sub-test 7: an RLC SDU on Subflow#1 having the same content as sent by SS; no data shall be received on Subflow#2 or Subflow#3; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

   - for sub-test 8: an RLC SDU on each of Subflow#1, Subflow#2 and Subflow#3 having the same content as sent by SS; and an RLC SDU on Subflow#4 having the first 2552 bits equal to the content as sent by SS

## 18.3.4 Void

## 18.3.5 Combinations on SCCPCH

### 18.3.5.1 Stand-alone signalling RB for PCCH

#### 18.3.5.1.1 Stand-alone signalling RB for PCCH at 12 kbps

##### 18.3.5.1.1.1 Conformance requirement

See 18.3.2.4.1.

##### 18.3.5.1.1.2 Test Purpose

To verify establishment and data transfer of Paging 1 message which comprises IE "BCCH Modification Information", with the "Value Tag" different from the "MIB Value Tag" of the current Master Information Block. This test is specified in TS 34.108, clause 6.11.6.4.4.1. The SCCPCH carries the PCH at 12 kbps.

##### 18.3.5.1.1.3 Method of Test

The contents of the System Information Block type 5 are specified in clause 8.1.2.2.

Downlink TFS for PCCH:

| | | SRBs |
|---|---|---|
| TFS | TF0, bits | 0x240 |
| | TF1, bits | 1x240 |

Downlink TFCS for PCCH:

| TFCI | (SRB) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |

Sub-test:

See 18.3.1.1 for test procedure.

#### 18.3.5.1.1.4 Test Requirements

See 18.3.1.1 for definition of step 6

1. At step 6 the UE transmitted PAGING RESPONSE (DCCH) received at the SS shall complete the test and end gracefully.

### 18.3.5.1.2 Stand-alone signalling RB for PCCH at 8 kbps

#### 18.3.5.1.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.5.1.2.2 Test Purpose

To verify establishment and data transfer of Paging 1 message which comprises IE "BCCH Modification Information", with the "Value Tag" different from the "MIB Value Tag" of the current Master Information Block. This test specified in TS 34.108, clause 6.11.6.4.4.1. The SCCPCH carries the PCH at 8 kbps.

#### 18.3.5.1.2.3 Method of Test

The contents of the System Information Block type 5 is specified in clause 8.1.2.2.

Downlink TFS for PCCH:

| | | SRBs |
|---|---|---|
| TFS | TF0, bits | 0x80 |
| | TF1, bits | 1x80 |
| | TF2, bits | 2x80 |

Downlink TFCS:

| TFCI | (SRB) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |

Sub-tests:

See 18.3.1.1 for test procedure.

#### 18.3.5.1.2.4 Test Requirements

See 18.3.1.1 for definition of step 6

1. At step 6 the UE transmitted PAGING RESPONSE (DCCH) received at the SS shall complete the test and end gracefully.

### 18.3.5.2 Interactive/Background PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.4.2.

This radio bearer configuration is tested with three different SYSTEM INFORMATION (BCCH) configurations:

1. The contents of System Information Block type 5 and 6 as specified in TS 34.108, clause 6.1.1(TDD FFS).

   Two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for Interactive/Background PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 18.3.5.2.1.

2. The contents of System Information Block type 5 as specified in TS 34.108, clause 6.1.3 (TDD FFS).

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for Interactive/Background PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 18.3.5.2.2.

3. The contents of System Information Block type 5 and 6 as specified in TS 34.108, clause 6.1.2 (TDD FFS).

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

   This configuration is verified in test case 18.3.5.2.3.

#### 18.3.5.2.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

##### 18.3.5.2.1.1 Conformance requirement

See 18.3.2.4.1.

##### 18.3.5.2.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.6.4.4.2 and 6.11.6.4.5.2 for the case when two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.6.4.5.2(Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

##### 18.3.5.2.1.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.1 (TDD FFS).

Uplink TFS:

| | TFI | RB7+SRB (12.8 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1 x 170 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS for SCCPCH#2:

| | TFI | RB7 (32 kbps) | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3, bits | N/A | 3x171 |
| | TF4, bits | N/A | 4x171 |

Downlink TFCS for SCCPCH#2:

| TFCI | (RB7,SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF0, TF3) |
| DL_TFC4 | (TF0, TF4) |
| DL_TFC5 | (TF1, TF0) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF1, TF2) |
| DL_TFC8 | (TF2, TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (NOTE) | Test data size (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits | RB7: 312 bits |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits | RB7: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

### 18.3.5.2.1.4 Test Requirements

See 18.3.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.

- for sub-test 2: an RLC SDU on RB7 having the same content as the DL RLC SDU sent by the SS.

### 18.3.5.2.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.3.5.2.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.5.2.2.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.6.4.4.2 and 6.11.6.4.5.2 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.6.4.5.2 (Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.3.5.2.2.3 Method of Test

The contents of System Information Block type 5 shall be as specified in TS 34.108, clause 6.1.3 (TDD FFS).

Uplink TFS:

| | **TFI** | **RB7+SRB (12.8 kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| **TFCI** | **RB7+SRB** |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS (for SCCPCH#2 & SCCPCH#3):

| | **TFI** | **RB7 (32 kbps)** | **SRBs** |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3,bits | N/A | 3x171 |
| | TF4,bits | N/A | 4x171 |

Downlink TFCS (for SCCPCH#2 & SCCPCH#3):

| **TFCI** | **(RB7,SRB)** |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF0, TF3) |
| DL_TFC4 | (TF0, TF4) |
| DL_TFC5 | (TF1, TF0) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF1, TF2) |
| DL_TFC8 | (TF2, TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (NOTE) | Test data size (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits | RB7: 312 bits |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits | RB7: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

#### 18.3.5.2.2.4 Test Requirements

See 18.3.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB7 having the same content as the DL RLC SDU sent by the SS.

### 18.3.5.2.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.3.5.2.3.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.5.2.3.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.6.4.4.2 and 6.11.6.4.5.2 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.6.4.5.2 (Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.3.5.2.3.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.2 (TDD FFS).

Uplink TFS:

| | TFI | RB7+SRB (12.8 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1 x 170 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS for SCCPCH#3:

| | TFI | RB7 (32 kbps) | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3,bits | N/A | 3x171 |
| | TF4,bits | N/A | 4x171 |

Downlink TFCS for SCCPCH#3:

| TFCI | (SRB, RB7) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF0, TF3) |
| DL_TFC4 | (TF0, TF4) |
| DL_TFC5 | (TF1,TF0) |
| DL_TFC6 | (TF1,TF2) |
| DL_TFC7 | (TF1,TF3) |
| DL_TFC8 | (TF2,TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (NOTE) | Test data size (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits | RB7: 312 bits |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits | RB7: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

#### 18.3.5.2.3.4 Test Requirements

See 18.3.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB7 having the same content as the DL RLC SDU sent by the SS.

### 18.3.5.2a Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.4.2a.

This radio bearer configuration is tested with three different SYSTEM INFORMATION (BCCH) configurations:

1. The contents of System Information Block type 5 shall be as per the message specific content below.

   Two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 18.3.5.2a.1.

2. The contents of System Information Block type 5 as specified in TS 34.108, clause 6.1.3.

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

   This configuration is verified in test case 18.3.5.2a.2.

3. The contents of System Information Block type 5 and 6 as specified in TS 34.108, clause 6.1.2.

   Three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

   This configuration is verified in test case 18.3.5.2a.3.

Specific Message Content for Radio Bearer Setup message to be used for these test cases:

Use the RADIO BEARER SETUP message as defined in [9] TS 34.108 clause 9, with the following exceptions:

| Information Element | Value/remark |
|---|---|
| - RAB information for setup | |
| - RAB info | (AM DTCH for PS domain) |
| - RAB identity | 0000 0101B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 20 |
| - PDCP Info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 7 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |

| Information Element | Value/remark |
|---|---|
| - Number of downlink RLC logical channels<br>- Downlink transport channel type<br>- DL DCH Transport channel identity<br>- DL DSCH Transport channel identity<br>- Logical channel identity | 1<br>FACH<br>Not Present<br>Not Present<br>7 |
| - RAB identity | 0000 0110B<br>The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity. |
| - CN domain identity | PS domain |
| - NAS Synchronization Indicator | Not Present |
| - Re-establishment timer | useT315 |
| - RB information to setup | |
| - RB identity | 24 |
| - PDCP info | Not Present |
| - CHOICE RLC info type | RLC info |
| - CHOICE Uplink RLC mode | AM RLC |
| - Transmission RLC discard | |
| - CHOICE SDU discard mode | No Discard |
| - MAX_DAT | 15 |
| - Transmission window size | 128 |
| - Timer_RST | 500 |
| - Max_RST | 4 |
| - Polling info | |
| - Timer_poll_prohibit | 200 |
| - Timer_poll | 200 |
| - Poll_PDU | Not Present |
| - Poll_SDU | 1 |
| - Last transmission PDU poll | TRUE |
| - Last retransmission PDU poll | TRUE |
| - Poll_Windows | 99 |
| - Timer_poll_periodic | Not Present |
| - CHOICE Downlink RLC mode | AM RLC |
| - In-sequence delivery | TRUE |
| - Receiving window size | 128 |
| - Downlink RLC status info | |
| - Timer_status_prohibit | 200 |
| - Timer_EPC | Not Present |
| - Missing PDU indicator | TRUE |
| - Timer_STATUS_periodic | Not Present |
| - RB mapping info | |
| - Information for each multiplexing option | 2 RBMuxOptions |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | DCH |
| - UL Transport channel identity | 1 |
| - Logical channel identity | 10 |
| - CHOICE RLC size list | Configured |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | DCH |
| - DL DCH Transport channel identity | 6 |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 10 |
| - RLC logical channel mapping indicator | Not Present |
| - Number of uplink RLC logical channels | 1 |
| - Uplink transport channel type | RACH |
| - UL Transport channel identity | Not Present |
| - Logical channel identity | 10 |
| - CHOICE RLC size list | Explicit list |
| - RLC size index | Reference to TS34.108 clause 6 Parameter Set |
| - MAC logical channel priority | 8 |
| - Downlink RLC logical channel info | |

| Information Element | Value/remark |
|---|---|
| - Number of downlink RLC logical channels | 1 |
| - Downlink transport channel type | FACH |
| - DL DCH Transport channel identity | Not Present |
| - DL DSCH Transport channel identity | Not Present |
| - Logical channel identity | 10 |

## 18.3.5.2a.1 One SCCPCH: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

### 18.3.5.2a.1.1 Conformance requirement

See 18.3.2.4.1.

### 18.3.5.2a.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.4.2a and 6.11.6.4.5.3 for the case when two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.6.4.5.3.1 (Interactive/Background 12.8 kbps PS RAB + Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

### 18.3.5.2a.1.3 Method of Test

The contents of System Information Block type 5 per the specific message content below.

See 18.3.1.1 for test procedure.

NOTE: The test procedure for single radio bearer configurations is used as there are no uplink transport format combinations for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | **TFI** | **RB7+RB8+SRB (2x12.8 kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| **TFCI** | **RB7 + RB8** |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS for SCCPCH#2:

| | **TFI** | **RB7 + RB8 (2x32 kbps)** | **SRBs** |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3, bits | N/A | 3x171 |
| | TF4, bits | N/A | 4x171 |

Downlink TFCS for SCCPCH #2:

| TFCI | (RB7+RB8, SRB) |
|---|---|
| DL_TFC0 | (TF0,TF0) |
| DL_TFC1 | (TF0,TF1) |
| DL_TFC2 | (TF0,TF2) |
| DL_TFC3 | (TF0,TF3) |
| DL_TFC4 | (TF0,TF4) |
| DL_TFC5 | (TF1,TF0) |
| DL_TFC6 | (TF1,TF1) |
| DL_TFC7 | (TF1,TF2) |
| DL_TFC8 | (TF2,TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (NOTE) | Test data size (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits<br>RB8: 376 bits | RB7: 312 bits<br>RB8: No Data |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits<br>RB8: 632 bits | RB7: No Data<br>RB8: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

Specific Message Contents

Use the default parameter values for the system information block 5 with the same type specified in clause 6.1.1 of TS 34.108, with the following exceptions

| Information Element | Value/remark |
|---|---|
| - SIB6 indicator | FALSE |

See 18.3.1.1 for test procedure.

#### 18.3.5.2.3.4 Test Requirements

See 18.3.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB8 having the same content as the DL RLC SDU sent by the SS.

### 18.3.5.2a.2 Two SCCPCHs: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.3.5.2a.2. 1 Conformance requirement

See 18.3.2.4.1.

18.3.5.2a.2. 2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.6.4.4.2a and 6.11.6.4.5.3 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and both the second and third SCCPCHs carry the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.6.4.5.3.1 (Interactive/Background 12.8 kbps PS RAB + Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

18.3.5.2a.2.1.3 Method of Test

The contents of System Information Block type 5 shall be as specified in TS 34.108, clause 6.1.3.

See 18.3.1.1 for test procedure.

NOTE: The test procedure for single radio bearer configurations is used as there are no uplink transport format combinations for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | **TFI** | **RB7 + RB8 (2x12.8 kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| **TFCI** | **RB7 + RB8** |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | **TFI** | **RB7 + RB8 (2x32 kbps)** | **SRBs** |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3, bits | N/A | 3x171 |
| | TF4, bits | N/A | 4x171 |

Downlink TFCS for SCCPCH#2 & #3:

| **TFCI** | **(SRB, RB7+RB8)** |
|---|---|
| DL_TFC0 | (TF0,TF0) |
| DL_TFC1 | (TF0,TF1) |
| DL_TFC2 | (TF0,TF2) |
| DL_TFC3 | (TF0,TF3) |
| DL_TFC4 | (TF0,TF4) |
| DL_TFC5 | (TF1,TF0) |
| DL_TFC6 | (TF1,TF1) |
| DL_TFC7 | (TF1,TF2) |
| DL_TFC8 | (TF2,TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (NOTE) | Test data size (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits<br>RB8: 376 bits | RB7: 312 bits<br>RB8: No Data |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits<br>RB8: 632 bits | RB7: No Data<br>RB8: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

#### 18.3.5.2.3.4 Test Requirements

See 18.3.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 15 the UE shall return
   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.
   - for sub-test 2: an RLC SDU on RB8 having the same content as the DL RLC SDU sent by the SS.

### 18.3.5.2a.3 One SCCPCH/connected mode: Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRBs for CCCH + SRB for DCCH + SRB for BCCH

#### 18.3.5.2a.3.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.5.2a.3. 2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.10.2.4.3.2 and 6.10.2.4.4.2 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for two Interactive/Background 32 kbps PS RABs and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.10.2.4.4.2 (Interactive/Background 32 kbps PS RAB + Interactive/Background 32 kbps PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.3.5.2a.3.1.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.2.

See 18.3.1.1 for test procedure.

NOTE: The test procedure for single radio bearer configurations is used as there are no uplink transport format combinations for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | TFI | RB7+RB8+SRB (2x12.8 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | RB7 + RB8 |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS for SCCPCH #3:

| | TFI | RB7 + RB8 (2x32 kbps) | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x171 |
| | TF1, bits | 1x363 | 1x171 |
| | TF2, bits | 2x363 | 2x171 |
| | TF3, bits | N/A | 3x171 |
| | TF4, bits | N/A | 4x171 |

Downlink TFCS for third SCCPCH:

| TFCI | (SRB, RB7+RB8) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0,TF1) |
| DL_TFC2 | (TF0,TF2) |
| DL_TFC3 | (TF0,TF3) |
| DL_TFC4 | (TF0,TF4) |
| DL_TFC5 | (TF1,TF0) |
| DL_TFC6 | (TF1,TF1) |
| DL_TFC7 | (TF1,TF2) |
| DL_TFC8 | (TF2,TF0) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (NOTE) | Test data size (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 376 bits<br>RB8: 376 bits | RB7: 312 bits<br>RB8: No Data |
| 2 | DL_TFC8 | UL_TFC0 | DL_TFC0 | UL_TFC0 | RB7: 632 bits<br>RB8: 632 bits | RB7: No Data<br>RB8: 632 bits |

NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB7: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size.

See 18.3.1.1 for test procedure.

### 18.3.5.2.3.4 Test Requirements

See 18.3.1.1 for definition of step 15

1. At step 10 the UE shall send RADIO BEARER SETUP COMPLETE.

2. At step 15 the UE shall return

   - for sub-test 1: an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.

   - for sub-test 2: an RLC SDU on RB8 having the same content as the DL RLC SDU sent by the SS.

## 18.3.5.2b SRBs for CCCH + SRB for DCCH + SRB for BCCH

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.4.2b.

This radio bearer configuration is tested with one SYSTEM INFORMATION (BCCH) configuration:

1. The contents of System Information Block type 5 and 6 as specified in TS 34.108, clause 6.1.1 (TDD FSS).

   Two SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH and the second SCCPCH carries the FACH for SRBs on CCCH/ DCCH/ BCCH.

### 18.3.5.2b.1 Conformance requirement

See 18.3.2.4.1.

### 18.3.5.2b.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.4.2b and 6.11.6.4.5.1 for the case when one SCCPCH is used in this SYSTEM INFORMATION configuration. The SCCPCH carries the FACH for SRBs on CCCH/ DCCH/ BCCH.

### 18.3.5.2b.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.1(TDD FSS).

See 18.3.1.1 for test procedure.

NOTE: The test procedure for single radio bearer configurations is used as there are no uplink transport format combinations for simultaneous data transmission on the PS radio bearers, nor any transport format combination for simultaneous data transmission and signalling.

Uplink TFS:

| | **TFI** | **SRB** |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| **TFCI** | **SRB** |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS for SCCPCH:

| | **TFI** | **SRBs** |
|---|---|---|
| TFS | TF0, bits | 0x171 |
| | TF1, bits | 1x171 |
| | TF2, bits | 2x171 |
| | TF3, bits | 3x171 |
| | TF4, bits | 4x171 |

Downlink TFCS for SCCPCH:

| TFCI | (SRB) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |

#### 18.3.5.2b.4 Test Requirements

See 18.3.1.1 for definition of step 6

1. At step 6 the UE transmitted PAGING RESPONSE (DCCH) received at the SS shall complete the test and end gracefully.

### 18.3.5.3 Interactive/Background RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH

#### 18.3.5.3.1 Interactive/Background 32 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH

##### 18.3.5.3.1.1 Conformance requirement

See 18.3.2.4.1.

##### 18.3.5.3.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.6.4.4.3 and 6.11.6.4.5.2 for the case when one SCCPCH is used in this SYSTEM INFORMATION (BCCH) configuration. The SCCPCH carries the PCH, the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.6.4.5.2 (Interactive/Background - 12.2 kbps) PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

##### 18.3.5.3.1.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.0b.

Uplink TFS:

| | TFI | RB8 (12.8 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | RB8 |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | TFI | RB8 (32 kbps) | PCCH | SRBs |
|---|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x240 | 0x171 |
| | TF1, bits | 1x363 | 1x240 | 1x171 |
| | TF2, bits | 2x363 | N/A | 2x171 |
| | TF3, bits | N/A | N/A | 3x171 |
| | TF4, bits | N/A | N/A | 4x171 |

Downlink TFCS:

| TFCI | (RB8, PCCH, SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0), |
| DL_TFC1 | (TF0, TF0, TF1), |
| DL_TFC2 | (TF0, TF0, TF2), |
| DL_TFC3 | (TF0, TF0, TF3), |
| DL_TFC4 | (TF0, TF0, TF4), |
| DL_TFC5 | (TF0, TF1, TF0), |
| DL_TFC6 | (TF0, TF1, TF1), |
| DL_TFC7 | (TF0, TF1, TF2), |
| DL_TFC8 | (TF0, TF1, TF3), |
| DL_TFC9 | (TF0, TF1, TF4), |
| DL_TFC10 | (TF1, TF0, TF0), |
| DL_TFC11 | (TF1, TF0, TF1), |
| DL_TFC12 | (TF1, TF0, TF2), |
| DL_TFC13 | (TF1, TF0, TF3), |
| DL_TFC14 | (TF1, TF0, TF4), |
| DL_TFC15 | (TF1, TF1, TF0), |
| DL_TFC16 | (TF1, TF1, TF1), |
| DL_TFC17 | (TF1, TF1, TF2), |
| DL_TFC18 | (TF1, TF1, TF3), |
| DL_TFC19 | (TF1, TF1, TF4), |
| DL_TFC20 | (TF2, TF0, TF0), |
| DL_TFC21 | (TF2, TF0, TF1), |
| DL_TFC22 | (TF2, TF0, TF2), |
| DL_TFC23 | (TF2, TF0, TF3), |
| DL_TFC24 | (TF2, TF0, TF4), |
| DL_TFC25 | (TF2, TF1, TF0), |
| DL_TFC26 | (TF2, TF1, TF1), |
| DL_TFC27 | (TF2, TF1, TF2), |
| DL_TFC28 | (TF2, TF1, TF3), |
| DL_TFC29 | (TF2, TF1, TF4) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (NOTE) | Test data size (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC20 | UL_TFC1 | DL_TFC0, UL_TFC0 | UL_TFC0 | RB8:632 bits | RB8: 632 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). | | | | | | |

See 18.3.1.1 for test procedure.

### 18.3.5.3.1.4 Test requirements

See 18.3.1.1 for definition of step 15

1. At step 15 the UE shall return an RLC SDU on RB8 having the same content as sent by SS

### 18.3.5.3.2 Interactive/Background 16 kbps RAB + SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH

#### 18.3.5.3.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.5.3.2.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.6.4.4.3 and 6.11.6.4.5.2 for the case when one SCCPCH is used in this SYSTEM INFORMATION (BCCH) configuration. The SCCPCH carries the PCH, the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.6.4.5.2 (Interactive/Background - 12.2 kbps) PS RAB + SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.3.5.3.2.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.0b.

Uplink TFS:

| | **TFI** | **RB8 (12.8 kbps on RACH)** |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| **TFCI** | **RB8** |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | **TFI** | **RB8 (32 kbps)** | **PCCH** | **SRBs** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x363 | 0x80 | 0x171 |
| | TF1, bits | 1x363 | 1x80 | 1x171 |
| | TF2, bits | N/A | 2x80 | 2x171 |

Downlink TFCS:

| **TFCI** | **(SRB, PCCH,RB8)** |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0), |
| DL_TFC1 | (TF0, TF0, TF1), |
| DL_TFC2 | (TF0, TF0, TF2), |
| DL_TFC3 | (TF0, TF1, TF0), |
| DL_TFC4 | (TF0, TF1, TF1), |
| DL_TFC5 | (TF0, TF2, TF0), |
| DL_TFC6 | (TF0, TF2, TF1), |
| DL_TFC7 | (TF1, TF0, TF0) |

Sub-tests:

| Sub-test | Downlink TFCS under test | Uplink TFCS Under test | Implicitly tested | Restricted UL TFCIs | UL RLC SDU size (NOTE) | Test data size (NOTE) |
|---|---|---|---|---|---|---|
| 1 | DL_TFC7 | UL_TFC0 | DL_TFC0, UL_TFC0 | UL_TFC0 | RB8: 376 bits | RB8: 312 bits |
| NOTE: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB8: Test data size has been set to the payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit). The UL RLC SDU size parameter has been set to achieve verification of all test data sent by SS in downlink, i.e. UL RLC SDU size is set to nearest multiple of the payload size of the UL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit) which is equal or bigger than the test data size. | | | | | | |

See 18.3.1.1 for test procedure.

#### 18.3.5.3.2.4 Test requirements

See 18.3.1.1 for definition of step 15

1. At step 15 the UE shall return an RLC SDU on RB7 having the same content as 1 times plus 64 lsb's of the DL RLC SDU sent by the SS.

## 18.3.5.3a SRBs for PCCH + SRB for CCCH + SRB for DCCH + SRB for BCCH

### 18.3.5.3a.1 SRBs for PCCH at 12 kbps + SRB for CCCH + SRB for DCCH + SRB for BCCH at 32 kbps

#### 18.3.5.3a.1.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.5.3a.1.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause for the case when one SCCPCH is used in this SYSTEM INFORMATION (BCCH) configuration. The SCCPCH carries the PCH at 12 kbps and the FACH for SRBs on CCCH/ DCCH/ BCCH at 32 kbps.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.6.4.5.1 (SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.3.5.3a.1.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.0b.

Uplink TFS:

| | TFI | SRB |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | SRB |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | TFI | PCCH | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x240 | 0x171 |
| | TF1, bits | 1x240 | 1x171 |
| | TF2, bits | N/A | 2x171 |
| | TF3,bits | N/A | 3x171 |
| | TF4,bits | N/A | 4x171 |

Downlink TFCS:

| TFCI | (PCCH, SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF0, TF3) |
| DL_TFC4 | (TF0, TF4) |
| DL_TFC5 | (TF1, TF0) |
| DL_TFC6 | (TF1, TF1) |
| DL_TFC7 | (TF1, TF2) |
| DL_TFC8 | (TF1, TF3) |
| DL_TFC9 | (TF1, TF4) |

Sub-tests:

See 18.3.1.1 for test procedure.

#### 18.3.5.3a.1.4 Test requirements

See 18.3.1.1 for definition of step 6x

1. At step 6x the UE transmitted SECURITY MODE COMPLETE (DCCH) received at the SS shall complete the test and end gracefully.

### 18.3.5.3a.2 SRBs for PCCH at 8 kbps kbps + SRB for CCCH + SRB for DCCH + SRB for BCCH at 16 kbps

#### 18.3.5.3a.2.1 Conformance requirement

See 18.3.2.4.1.

#### 18.3.5.3a.2.2 Test purpose

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause for the case when one SCCPCH is used in this SYSTEM INFORMATION (BCCH) configuration. The SCCPCH carries the PCH at 8 kbps and the FACH for SRBs on CCCH/ DCCH/ BCCH at 16 kbps.

To be able to test the downlink radio bearer using the UE loopback function, the reference radio bearer configuration according to TS 34.108, clause 6.11.6.4.5.1 (SRB for CCCH + SRB for DCCH on PRACH) is used in uplink.

#### 18.3.5.3a.2.3 Method of Test

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.0b.

Uplink TFS:

| | TFI | SRB |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | SRB |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | TFI | PCCH | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x80 | 0x171 |
| | TF1, bits | 1x80 | 1x171 |
| | TF2, bits | 2x80 | 2x171 |

Downlink TFCS:

| TFCI | (PCCH, SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF1, TF0) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF0) |
| DL_TFC6 | (TF2, TF1) |

Sub-tests:

See 18.3.1.1 for test procedure.

#### 18.3.5.3a.2.4 Test requirements

See 18.3.1.1 for definition of step 6x

1. At step 6x the UE transmitted SECURITY MODE COMPLETE (DCCH) received at the SS shall complete the test and end gracefully.

### 18.3.5.4 RB for CTCH + SRB for CCCH +SRB for BCCH.

#### 18.3.5.4.1 Definition and applicability

Applicable only for a UE supporting Cell Broadcast Services (CBS) as a type of Broadcast/Multicast Services.

It shall be possible to indicate the reception of certain CBS message contents carried with certain activated CG message types in a clear way on UE side.

#### 18.3.5.4.2 Conformance Requirement

See 18.3.2.4.1 and 7.4.2.1.2.

#### 18.3.5.4.3 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.4.4 for the case when three SCCPCHs are used in this SYSTEM INFORMATION configuration. The first SCCPCH carries the PCH. The second SCCPCH carries the FACH for CTCH (Cell Broadcast Service) and the FACH for SRBs on CCCH/ BCCH for idle mode UEs. The third SCCPCH carries the FACH for Interactive/Background 32 kbps PS RAB and the FACH for SRBs on CCCH/ DCCH/ BCCH for connected mode UEs.

To verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clauses 6.11.6.4.4.3. Data transfer on CTCH is tested similar to testing BMC for a UE in idle mode as specified in TS 34.123-1, clause 7.4.2, data transfer on CCCH is tested by establishing a RRC connection.

18.3.5.4.4 Method of Test

18.3.5.4.4.1 Initial conditions:

The contents of System Information Block type 5 and 6 shall be as specified in TS 34.108, clause 6.1.2.

The UE is RRC idle mode, the BMC entity is established.

The CB message ID stored on the SIM shall be known for this test (parameter for CBS PDUs). The CBS data type shall be allocated and activated in the UE.

Related ICS/IXIT Statement(s):

As in clause 7.4.2.1.4

Uplink TFS:

| | TFI | RB7+SRB (32 kbps on RACH) |
|---|---|---|
| TFS | TF0, bits | 1x170 |

Uplink TFCS:

| TFCI | RB7+SRB |
|---|---|
| UL_TFC0 | TF0 |

Downlink TFS:

| | TFI | RB7 (16 kbps on CTCH) | SRBs |
|---|---|---|---|
| TFS | TF0, bits | 0x163 | 0x171 |
| | TF1, bits | 1x163 | 1x171 |
| | TF2, bits | 2x163 | 2x171 |

Downlink TFCS:

| TFCI | (RB7, SRB) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF0, TF1) |
| DL_TFC2 | (TF0, TF2) |
| DL_TFC3 | (TF1, TF0) |
| DL_TFC4 | (TF1, TF1) |
| DL_TFC5 | (TF2, TF0) |

18.3.5.4.4.2 Test Procedure:

a) The UE in RRC Idle mode is triggered to wait for the next system information. The UE is activated to receive CBS messages.

b) The UE and the SS have configured their RLC, MAC, and PHYs layers with all CB related system information.

c) The SS sends the CVS message containing an activated CGS message type accroding to CB-Data 1 to the UE; this shall be repeated for CPREP times (indicated by the parameter "repetition period").

d) The UE indicates in an unambigous way, that this message was received.

e) Steps 1a → 1d in the Expected sequence are followed by the steps 2 – 6 of the test procedure according to clause 18.3.1.1.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1a | ← | | SYSTEM INFORMATION | |
| 1b | | | | The SS waits for about 10 s to make sure, that the UE is configured to receive CBS data |
| 1c | ← | | BMC CBS Message | Activated CBS message with CB Data 1 message content as described by the manufacturer. This message shall be repeated "CPREP" times, Parameter:<br>- Message_ID,<br>- Serial-No,<br>- Data coding scheme,<br>- CB-Data 1, |
| 1d | | | | After having received the BMC CBS message the UE shall indicate the reception of CB Data 1 in a clear way. |

#### 18.3.5.4.5 Test Requirements

At step 1d in the table above, the UE shall store and decode a received activated CBS message.

At step 5 of the test procedure according to clause 18.3.1.1 the RRC Connection shall be established.

### 18.3.5.5 64.8kbps RB for MTCH with 80 ms TTI

#### 18.3.5.5.1 Conformance Requirement

The UE shall correctly receive user data on the MTCH from the peer to peer RLC entitity according to the configured MTCH.

Reference(s)

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

3GPP TS 25.331 (RRC)

#### 18.3.5.5.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.5.

#### 18.3.5.5.3 Method of Test

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (64.8 kbps) |
|---|---|---|
| TFS | TF0, bits | 0x665 |
| | TF1, bits | 1x665 |
| | TF2, bits | 2x665 |
| | TF3, bits | 3x665 |
| | TF4, bits | 4x665 |
| | TF5, bits | 5x665 |
| | TF6, bits | 6x665 |
| | TF7, bits | 7x665 |
| | TF8, bits | 8x665 |

Downlink TFCS:

| TFCI | RB for MTCH (64.8 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (NOTE 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

### 18.3.5.5.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE: For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

## 18.3.5.6 129.6 kbps RB for MTCH with 80 ms TTI

### 18.3.5.6.1 Conformance Requirement

See 18.3.5.5.1.

### 18.3.5.6.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.6.

### 18.3.5.6.3 Method of Test

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (129.6 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x664 |
| | TF1, bits | 1x664 |
| | TF2, bits | 2x664 |
| | TF3, bits | 3x664 |
| | TF4, bits | 4x664 |
| | TF5, bits | 5x664 |
| | TF6, bits | 6x664 |
| | TF7, bits | 7x664 |
| | TF8, bits | 8x664 |
| | TF9, bits | 9x664 |
| | TF10, bits | 10x664 |
| | TF11, bits | 11x664 |
| | TF12, bits | 12x664 |
| | TF13, bits | 13x664 |
| | TF14, bits | 14x664 |
| | TF15, bits | 15x664 |
| | TF16, bits | 16x664 |

Downlink TFCS:

| TFCI | RB for MTCH (129.6 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |
| DL_TFC9 | (TF9) |
| DL_TFC10 | (TF10) |
| DL_TFC11 | (TF11) |
| DL_TFC12 | (TF12) |
| DL_TFC13 | (TF13) |
| DL_TFC14 | (TF14) |
| DL_TFC15 | (TF15) |
| DL_TFC16 | (TF16) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (NOTE 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| 9 | DL_TFC9 | DL_TFC0 | 5824 |
| 10 | DL_TFC10 | DL_TFC0 | 6472 |
| 11 | DL_TFC11 | DL_TFC0 | 7120 |
| 12 | DL_TFC12 | DL_TFC0 | 7768 |
| 13 | DL_TFC13 | DL_TFC0 | 8416 |
| 14 | DL_TFC14 | DL_TFC0 | 9064 |
| 15 | DL_TFC15 | DL_TFC0 | 9712 |
| 16 | DL_TFC16 | DL_TFC0 | 10360 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.3.5.6.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE: For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

### 18.3.5.7 259.2 kbps RB for MTCH with 40 ms TTI

#### 18.3.5.7.1 Conformance Requirement

See 18.3.5.5.1.

#### 18.3.5.7.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.10.3.4.4.7.

#### 18.3.5.7.3 Method of Test

See 14.1.5 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (259.2 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x665 |
| | TF1, bits | 1x665 |
| | TF2, bits | 2x665 |
| | TF3, bits | 3x665 |
| | TF4, bits | 4x665 |
| | TF5, bits | 5x665 |
| | TF6, bits | 6x665 |
| | TF7, bits | 7x665 |
| | TF8, bits | 8x665 |
| | TF9, bits | 9x665 |
| | TF10, bits | 10x665 |
| | TF11, bits | 11x665 |
| | TF12, bits | 12x665 |
| | TF13, bits | 13x665 |
| | TF14, bits | 14x665 |
| | TF15, bits | 15x665 |
| | TF16, bits | 16x665 |

Downlink TFCS:

| TFCI | RB for MTCH (259.2 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |
| DL_TFC3 | (TF3) |
| DL_TFC4 | (TF4) |
| DL_TFC5 | (TF5) |
| DL_TFC6 | (TF6) |
| DL_TFC7 | (TF7) |
| DL_TFC8 | (TF8) |
| DL_TFC9 | (TF9) |
| DL_TFC10 | (TF10) |
| DL_TFC11 | (TF11) |
| DL_TFC12 | (TF12) |
| DL_TFC13 | (TF13) |
| DL_TFC14 | (TF14) |
| DL_TFC15 | (TF15) |
| DL_TFC16 | (TF16) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (NOTE 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 640 |
| 2 | DL_TFC2 | DL_TFC0 | 1288 |
| 3 | DL_TFC3 | DL_TFC0 | 1936 |
| 4 | DL_TFC4 | DL_TFC0 | 2584 |
| 5 | DL_TFC5 | DL_TFC0 | 3232 |
| 6 | DL_TFC6 | DL_TFC0 | 3880 |
| 7 | DL_TFC7 | DL_TFC0 | 4528 |
| 8 | DL_TFC8 | DL_TFC0 | 5176 |
| 9 | DL_TFC9 | DL_TFC0 | 5824 |
| 10 | DL_TFC10 | DL_TFC0 | 6472 |
| 11 | DL_TFC11 | DL_TFC0 | 7120 |
| 12 | DL_TFC12 | DL_TFC0 | 7768 |
| 13 | DL_TFC13 | DL_TFC0 | 8416 |
| 14 | DL_TFC14 | DL_TFC0 | 9064 |
| 15 | DL_TFC15 | DL_TFC0 | 9712 |
| 16 | DL_TFC16 | DL_TFC0 | 10360 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.3.5.7.4 Test Requirements

See 14.1.5 for definition of steps 8 and 12.

1. For the first sub-test: At step 8 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 12 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE: For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 14.1.5 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

### 18.3.5.8 124.4kbps RB for MBSFN MTCH with 80 ms TTI

#### 18.3.5.8.1 Conformance Requirement

The UE shall correctly receive user data on the MTCH from the peer to peer RLC entitity according to the configured MTCH.

Reference(s)

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

3GPP TS 25.331 (RRC)

#### 18.3.5.8.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.4.9.

#### 18.3.5.8.3 Method of Test

See subclause 18.3.1.6 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (124.4 kbps) |
|---|---|---|
| TFS | TF0, bits | 0x4993 |
| | TF1, bits | 1x4993 |
| | TF2, bits | 2x4993 |

Downlink TFCS:

| TFCI | RB for MTCH (124.4 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (NOTE 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 4960 |
| 2 | DL_TFC2 | DL_TFC0 | 9936 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 16 bits (size of 15 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.3.5.8.4 Test Requirements

See subclause 18.3.1.6 for definition of steps 9 and 13.

1. For the first sub-test: At step 9 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.
2. For the second and following sub-tests: At step 13 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE: For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 18.2.1.6 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

### 18.3.5.9 320.4 kbps RB for MBSFN MTCH with 80 ms TTI

#### 18.3.5.9.1 Conformance Requirement

See 18.3.5.8.1.

#### 18.3.5.9.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.4.10.

#### 18.3.5.9.3 Method of Test

See subclause 18.3.1.6 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (320.4 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x4289 |
| | TF1, bits | 1x4289 |
| | TF2, bits | 6x4289 |

Downlink TFCS:

| TFCI | RB for MTCH (320.4 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (NOTE 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 4256 |
| 2 | DL_TFC2 | DL_TFC0 | 25616 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 16 bits (size of 15 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.3.5.9.4 Test Requirements

See subclause 18.3.1.6 for definition of steps 9 and 13.

1. For the first sub-test: At step 9 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.

2. For the second and following sub-tests: At step 13 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE: For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 18.2.1.6 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

### 18.3.5.10 497.6 kbps RB for MBSFN MTCH with 80 ms TTI

#### 18.3.5.10.1 Conformance Requirement

See 18.3.5.8.1.

#### 18.3.5.10.2 Test purpose

Test to verify establishment and data transfer of reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.4.11.

#### 18.3.5.10.3 Method of Test

See subclause 18.3.1.6 for test procedure.

Downlink TFS:

| | TFI | RB for MTCH (497.6 kbps kbps) |
|---|---|---|
| TFS | TF0, bits | 0x4993 |
| | TF1, bits | 1x4993 |
| | TF2, bits | 8x4993 |

Downlink TFCS:

| TFCI | RB for MTCH (497.6 kbps) |
|---|---|
| DL_TFC0 | (TF0) |
| DL_TFC1 | (TF1) |
| DL_TFC2 | (TF2) |

Sub-tests:

| Sub-test | Downlink TFCS Under test | Implicitely tested | Test data size (bits) (NOTE 1) |
|---|---|---|---|
| 1 | DL_TFC1 | DL_TFC0 | 4960 |
| 2 | DL_TFC2 | DL_TFC0 | 39792 |
| NOTE 1: Test data size (=DL SDU size) has been set to the N*payload size of the DL TF under test minus 16 bits (size of 15 bit length indicator and expansion bit), where N is the number of transport blocks in the transport format combination under test. | | | |

#### 18.3.5.10.4 Test Requirements

See subclause 18.3.1.6 for definition of steps 9 and 13.

1. For the first sub-test: At step 9 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than zero.
2. For the second and following sub-tests: At step 13 the UE shall send a UE TEST LOOP MODE 3 RLC SDU COUNTER RESPONSE with a RLC SDU counter value greater than the reported value at previous sub-test.

NOTE: For UE in UE test loop mode 3 then the RLC SDU counter value is only reset upon reception of CLOSE UE TEST LOOP message configuring UE test loop mode 3. As the generic test procedure in section 18.2.1.6 runs through all sub-tests without deactivating the UE test mode then the SS needs to check the reported counter value against the value reported at the previous sub-test.

## 18.3.6 Combinations on PRACH

### 18.3.6.1 SRB for CCCH + SRB for DCCH

The reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.5.1 is implicitly tested by the test cases 18.3.5.2b.1.

### 18.3.6.2 Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH

The reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.5.2 is implicitly tested by the test cases 18.3.5.2.1, 18.3.5.2.2, 18.3.5.2.3 and 18.3.5.3.

### 18.3.6.3 Interactive/Background 12.8 kbps PS RAB + Interactive/Background 12.8 kbps PS RAB + SRB for CCCH + SRB for DCCH

The reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.5.3 is implicitly tested by the test cases 18.3.5.2a.1, 18.3.5.2a.2 and 18.3.5.2a.3.

## 18.3.7 Combinations on DPCH and HS-PDSCH

### 18.3.7.1 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.7.1.1 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size

##### 18.3.7.1.1.1 Conformance requirement

For HS-DSCH the transport block size is derived from the value signalled on the HS-SCCH. The mapping between the TFRI value and the transport block size for each mode is specified below:

Let $k$ be the signalled TFRI value, then the corresponding HS-DSCH transport block size $L_k$ is given by :

If $k$=1..510

$$L_k = \lfloor L_{\min} p^k \rfloor$$

$$p = \frac{33297}{32768}$$

$$L_{\min} = 57$$

If $k$ = 511

$$L_k = 204000$$

If $k$=0, $L_k$ indicates NULL and shall not be used to signal a transport block size in the TFRI.

Transport block sizes calculated by this formula shall equal the values indicated in Table 18.3.7.1.1.1.1

**Table 18.3.7.1.1.1.1: HSDPA Transport Block Sizes for 7.68 Mcps TDD**

| TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] | TB index (k) | TB size [bits] |
|---|---|---|---|---|---|---|---|
| 0 | NULL | 128 | 442 | 256 | 3438 | 384 | 26709 |
| 1 | 57 | 129 | 449 | 257 | 3494 | 385 | 27140 |
| 2 | 58 | 130 | 457 | 258 | 3550 | 386 | 27578 |
| 3 | 59 | 131 | 464 | 259 | 3607 | 387 | 28023 |
| 4 | 60 | 132 | 472 | 260 | 3666 | 388 | 28476 |
| 5 | 61 | 133 | 479 | 261 | 3725 | 389 | 28935 |
| 6 | 62 | 134 | 487 | 262 | 3785 | 390 | 29402 |
| 7 | 63 | 135 | 495 | 263 | 3846 | 391 | 29877 |
| 8 | 64 | 136 | 503 | 264 | 3908 | 392 | 30360 |
| 9 | 65 | 137 | 511 | 265 | 3971 | 393 | 30850 |
| 10 | 66 | 138 | 519 | 266 | 4035 | 394 | 31348 |
| 11 | 67 | 139 | 528 | 267 | 4101 | 395 | 31854 |
| 12 | 69 | 140 | 536 | 268 | 4167 | 396 | 32368 |
| 13 | 70 | 141 | 545 | 269 | 4234 | 397 | 32891 |
| 14 | 71 | 142 | 553 | 270 | 4302 | 398 | 33422 |
| 15 | 72 | 143 | 562 | 271 | 4372 | 399 | 33961 |
| 16 | 73 | 144 | 572 | 272 | 4443 | 400 | 34509 |
| 17 | 74 | 145 | 581 | 273 | 4514 | 401 | 35066 |
| 18 | 76 | 146 | 590 | 274 | 4587 | 402 | 35633 |
| 19 | 77 | 147 | 600 | 275 | 4661 | 403 | 36208 |
| 20 | 78 | 148 | 609 | 276 | 4736 | 404 | 36792 |
| 21 | 79 | 149 | 619 | 277 | 4813 | 405 | 37386 |
| 22 | 81 | 150 | 629 | 278 | 4891 | 406 | 37990 |
| 23 | 82 | 151 | 639 | 279 | 4970 | 407 | 38603 |
| 24 | 83 | 152 | 650 | 280 | 5050 | 408 | 39226 |
| 25 | 85 | 153 | 660 | 281 | 5131 | 409 | 39860 |
| 26 | 86 | 154 | 671 | 282 | 5214 | 410 | 40503 |
| 27 | 87 | 155 | 682 | 283 | 5298 | 411 | 41157 |
| 28 | 89 | 156 | 693 | 284 | 5384 | 412 | 41822 |
| 29 | 90 | 157 | 704 | 285 | 5471 | 413 | 42497 |
| 30 | 92 | 158 | 715 | 286 | 5559 | 414 | 43183 |
| 31 | 93 | 159 | 727 | 287 | 5649 | 415 | 43880 |
| 32 | 95 | 160 | 739 | 288 | 5740 | 416 | 44588 |
| 33 | 96 | 161 | 751 | 289 | 5833 | 417 | 45308 |
| 34 | 98 | 162 | 763 | 290 | 5927 | 418 | 46040 |
| 35 | 99 | 163 | 775 | 291 | 6023 | 419 | 46783 |
| 36 | 101 | 164 | 787 | 292 | 6120 | 420 | 47538 |
| 37 | 103 | 165 | 800 | 293 | 6219 | 421 | 48306 |
| 38 | 104 | 166 | 813 | 294 | 6319 | 422 | 49085 |
| 39 | 106 | 167 | 826 | 295 | 6421 | 423 | 49878 |
| 40 | 108 | 168 | 840 | 296 | 6525 | 424 | 50683 |
| 41 | 109 | 169 | 853 | 297 | 6630 | 425 | 51501 |
| 42 | 111 | 170 | 867 | 298 | 6737 | 426 | 52333 |
| 43 | 113 | 171 | 881 | 299 | 6846 | 427 | 53178 |
| 44 | 115 | 172 | 895 | 300 | 6957 | 428 | 54036 |
| 45 | 117 | 173 | 910 | 301 | 7069 | 429 | 54908 |
| 46 | 119 | 174 | 924 | 302 | 7183 | 430 | 55795 |
| 47 | 120 | 175 | 939 | 303 | 7299 | 431 | 56696 |
| 48 | 122 | 176 | 954 | 304 | 7417 | 432 | 57611 |
| 49 | 124 | 177 | 970 | 305 | 7537 | 433 | 58541 |
| 50 | 126 | 178 | 986 | 306 | 7658 | 434 | 59486 |
| 51 | 128 | 179 | 1001 | 307 | 7782 | 435 | 60446 |
| 52 | 131 | 180 | 1018 | 308 | 7908 | 436 | 61422 |
| 53 | 133 | 181 | 1034 | 309 | 8035 | 437 | 62414 |
| 54 | 135 | 182 | 1051 | 310 | 8165 | 438 | 63421 |
| 55 | 137 | 183 | 1068 | 311 | 8297 | 439 | 64445 |
| 56 | 139 | 184 | 1085 | 312 | 8431 | 440 | 65486 |
| 57 | 142 | 185 | 1103 | 313 | 8567 | 441 | 66543 |
| 58 | 144 | 186 | 1120 | 314 | 8705 | 442 | 67617 |
| 59 | 146 | 187 | 1138 | 315 | 8846 | 443 | 68709 |
| 60 | 148 | 188 | 1157 | 316 | 8988 | 444 | 69818 |
| 61 | 151 | 189 | 1175 | 317 | 9134 | 445 | 70945 |
| 62 | 153 | 190 | 1194 | 318 | 9281 | 446 | 72091 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 63 | 156 | 191 | 1214 | 319 | 9431 | 447 | 73254 |
| 64 | 158 | 192 | 1233 | 320 | 9583 | 448 | 74437 |
| 65 | 161 | 193 | 1253 | 321 | 9738 | 449 | 75639 |
| 66 | 164 | 194 | 1274 | 322 | 9895 | 450 | 76860 |
| 67 | 166 | 195 | 1294 | 323 | 10055 | 451 | 78101 |
| 68 | 169 | 196 | 1315 | 324 | 10217 | 452 | 79361 |
| 69 | 172 | 197 | 1336 | 325 | 10382 | 453 | 80643 |
| 70 | 174 | 198 | 1358 | 326 | 10550 | 454 | 81945 |
| 71 | 177 | 199 | 1380 | 327 | 10720 | 455 | 83267 |
| 72 | 180 | 200 | 1402 | 328 | 10893 | 456 | 84612 |
| 73 | 183 | 201 | 1425 | 329 | 11069 | 457 | 85978 |
| 74 | 186 | 202 | 1448 | 330 | 11248 | 458 | 87366 |
| 75 | 189 | 203 | 1471 | 331 | 11429 | 459 | 88776 |
| 76 | 192 | 204 | 1495 | 332 | 11614 | 460 | 90209 |
| 77 | 195 | 205 | 1519 | 333 | 11801 | 461 | 91666 |
| 78 | 198 | 206 | 1543 | 334 | 11992 | 462 | 93145 |
| 79 | 201 | 207 | 1568 | 335 | 12185 | 463 | 94649 |
| 80 | 205 | 208 | 1594 | 336 | 12382 | 464 | 96177 |
| 81 | 208 | 209 | 1619 | 337 | 12582 | 465 | 97730 |
| 82 | 211 | 210 | 1646 | 338 | 12785 | 466 | 99308 |
| 83 | 215 | 211 | 1672 | 339 | 12992 | 467 | 100911 |
| 84 | 218 | 212 | 1699 | 340 | 13201 | 468 | 102540 |
| 85 | 222 | 213 | 1727 | 341 | 13414 | 469 | 104195 |
| 86 | 225 | 214 | 1755 | 342 | 13631 | 470 | 105877 |
| 87 | 229 | 215 | 1783 | 343 | 13851 | 471 | 107587 |
| 88 | 233 | 216 | 1812 | 344 | 14075 | 472 | 109324 |
| 89 | 237 | 217 | 1841 | 345 | 14302 | 473 | 111088 |
| 90 | 240 | 218 | 1871 | 346 | 14533 | 474 | 112882 |
| 91 | 244 | 219 | 1901 | 347 | 14767 | 475 | 114704 |
| 92 | 248 | 220 | 1932 | 348 | 15006 | 476 | 116556 |
| 93 | 252 | 221 | 1963 | 349 | 15248 | 477 | 118438 |
| 94 | 256 | 222 | 1994 | 350 | 15494 | 478 | 120350 |
| 95 | 260 | 223 | 2027 | 351 | 15744 | 479 | 122293 |
| 96 | 265 | 224 | 2059 | 352 | 15999 | 480 | 124267 |
| 97 | 269 | 225 | 2093 | 353 | 16257 | 481 | 126273 |
| 98 | 273 | 226 | 2126 | 354 | 16519 | 482 | 128312 |
| 99 | 278 | 227 | 2161 | 355 | 16786 | 483 | 130383 |
| 100 | 282 | 228 | 2196 | 356 | 17057 | 484 | 132488 |
| 101 | 287 | 229 | 2231 | 357 | 17332 | 485 | 134627 |
| 102 | 291 | 230 | 2267 | 358 | 17612 | 486 | 136800 |
| 103 | 296 | 231 | 2304 | 359 | 17897 | 487 | 139009 |
| 104 | 301 | 232 | 2341 | 360 | 18185 | 488 | 141253 |
| 105 | 306 | 233 | 2379 | 361 | 18479 | 489 | 143533 |
| 106 | 311 | 234 | 2417 | 362 | 18777 | 490 | 145850 |
| 107 | 316 | 235 | 2456 | 363 | 19081 | 491 | 148205 |
| 108 | 321 | 236 | 2496 | 364 | 19389 | 492 | 150597 |
| 109 | 326 | 237 | 2536 | 365 | 19702 | 493 | 153029 |
| 110 | 331 | 238 | 2577 | 366 | 20020 | 494 | 155499 |
| 111 | 337 | 239 | 2619 | 367 | 20343 | 495 | 158010 |
| 112 | 342 | 240 | 2661 | 368 | 20671 | 496 | 160560 |
| 113 | 348 | 241 | 2704 | 369 | 21005 | 497 | 163152 |
| 114 | 353 | 242 | 2748 | 370 | 21344 | 498 | 165786 |
| 115 | 359 | 243 | 2792 | 371 | 21689 | 499 | 168463 |
| 116 | 365 | 244 | 2837 | 372 | 22039 | 500 | 171182 |
| 117 | 371 | 245 | 2883 | 373 | 22395 | 501 | 173946 |
| 118 | 377 | 246 | 2929 | 374 | 22756 | 502 | 176754 |
| 119 | 383 | 247 | 2977 | 375 | 23124 | 503 | 179608 |
| 120 | 389 | 248 | 3025 | 376 | 23497 | 504 | 182507 |
| 121 | 395 | 249 | 3074 | 377 | 23876 | 505 | 185454 |
| 122 | 402 | 250 | 3123 | 378 | 24262 | 506 | 188447 |
| 123 | 408 | 251 | 3174 | 379 | 24653 | 507 | 191490 |
| 124 | 415 | 252 | 3225 | 380 | 25051 | 508 | 194581 |
| 125 | 421 | 253 | 3277 | 381 | 25456 | 509 | 197722 |
| 126 | 428 | 254 | 3330 | 382 | 25867 | 510 | 200914 |
| 127 | 435 | 255 | 3384 | 383 | 26284 | 511 | 204000 |

Reference(s)

3GPP TS 25.321 Section 9.2.3.2a

#### 18.3.7.1.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.1 for the UL 336 bit block size case.

#### 18.3.7.1.1.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 3x336 | N/A |
| | TF4, bits | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 3 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 3 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 3 | 256 | 256 | | | | | |
| | 6 | 3 | 256 | 256 | | | | | |
| | 7 | 3 | 512 | 512 | | | | | |
| | 8 | 3 | 512 | 512 | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 |
| | 2 | 3 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.3.7.1.1.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).

- for sub-test 2: TF2 (2x336).
- for sub-test 3: TF3 (3x336).
- for sub-test 4: TF4 (4x336).

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.1.2 Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size

#### 18.3.7.1.2.1 Conformance requirement

See 18.3.7.1.1.1

#### 18.3.7.1.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.1 for the UL 144 bit block size case.

#### 18.3.7.1.2.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 3x144 | N/A |
| | TF3, bits | 7x144 | N/A |
| | TF4, bits | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 120 |
| | 2 | 3 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 376 |
| | 2 | 3 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 3 | 256 | 256 | | | | | |
| | 6 | 3 | 256 | 256 | | | | | |
| | 7 | 3 | 512 | 512 | | | | | |
| | 8 | 3 | 512 | 512 | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 888 |
| | 2 | 3 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.3.7.1.2.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x144).

- for sub-test 2: TF2 (3x144).
- for sub-test 3: TF3 (7x144).
- for sub-test 4: TF4 (10x144).

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 18.3.7.2 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.3.7.2.1 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size

#### 18.3.7.2.1.1 Conformance requirement

See 18.3.7.1.1.1.

#### 18.3.7.2.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.2 for the UL 336 bit block size case.

#### 18.3.7.2.1.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 |
| | 2 | 3 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 |
| | 2 | 3 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 3 | 256 | 256 | | | | | |
| | 6 | 3 | 256 | 256 | | | | | |
| | 7 | 3 | 512 | 512 | | | | | |
| | 8 | 3 | 512 | 512 | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1272 |
| | 2 | 3 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.3.7.2.1.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).

- for sub-test 2: TF2 (2x336).
- for sub-test 3: TF3 (4x336).
- for sub-test 4: TF4 (8x336).

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.2.2 Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size

#### 18.3.7.2.2.1 Conformance requirement

See 18.3.7.1.1.1.

#### 18.3.7.2.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.2 for the UL 144 bit block size case.

#### 18.3.7.2.2.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (128 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x144 | 0x148 |
| | TF1, bits | 1x144 | 1x148 |
| | TF2, bits | 7x144 | N/A |
| | TF3, bits | 14x144 | N/A |
| | TF4, bits | 20x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 120 |
| | 2 | 3 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 888 |
| | 2 | 3 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 3 | 256 | 256 | | | | | |
| | 6 | 3 | 256 | 256 | | | | | |
| | 7 | 3 | 512 | 512 | | | | | |
| | 8 | 3 | 512 | 512 | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 1784 |
| | 2 | 3 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 2552 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.3.7.2.2.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x144).

- for sub-test 2: TF2 (7x144).
- for sub-test 3: TF3 (14x144).
- for sub-test 4: TF4 (20x144).

3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 18.3.7.3 Interactive or background / UL:384 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

### 18.3.7.3.1 Conformance requirement

See 18.3.7.1.1.1.

### 18.3.7.3.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.3.

### 18.3.7.3.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (384 kbps, 10ms) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x336 | 0x148 |
| | TF1, bits | 1x336 | 1x148 |
| | TF2, bits | 2x336 | N/A |
| | TF3, bits | 4x336 | N/A |
| | TF4, bits | 8x336 | N/A |
| | TF5, bits | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Sub-tests:

| Sub-test | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | UL_TFC1 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 |
| | 2 | 3 | 512 | 128 | | | | | |
| | 3 | 3 | 512 | 128 | | | | | |
| | 4 | 3 | 512 | 128 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | UL_TFC2 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 |
| | 2 | 3 | 256 | 128 | | | | | |
| | 3 | 3 | 256 | 128 | | | | | |
| | 4 | 3 | 256 | 128 | | | | | |
| | 5 | 3 | 256 | 256 | | | | | |
| | 6 | 3 | 256 | 256 | | | | | |
| | 7 | 3 | 512 | 512 | | | | | |
| | 8 | 3 | 512 | 512 | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | UL_TFC3 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 |
| | 2 | 3 | 512 | 256 | | | | | |
| | 3 | 3 | 512 | 256 | | | | | |
| | 4 | 3 | 512 | 256 | | | | | |
| | 5 | 3 | 512 | 256 | | | | | |
| | 6 | 3 | 512 | 256 | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | UL_TFC4 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |
| 5 | 1 | 8 | 256 | 256 | 656 | UL_TFC5 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 3832 |
| | 2 | 8 | 256 | 256 | | | | | |
| | 3 | 8 | 256 | 256 | | | | | |
| | 4 | 8 | 256 | 256 | | | | | |
| | 5 | 8 | 256 | 256 | | | | | |
| | 6 | 8 | 256 | 256 | | | | | |
| | 7 | 8 | 512 | 512 | | | | | |
| | 8 | 8 | 512 | 512 | | | | | |
| | 9 | 8 | 1024 | 512 | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC5 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.

#### 18.3.7.3.4 Test requirements

See 14.1.3.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE transmitted transport format shall be
   - for sub-test 1: TF1 (1x336).
   - for sub-test 2: TF2 (2x336).
   - for sub-test 3: TF3 (4x336).
   - for sub-test 4: TF4 (8x336).
   - for sub-test 5: TF5 (12x336).
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.7.4.1 Conformance requirement

See 18.3.7.1.1.1.

#### 18.3.7.4.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.4.

#### 18.3.7.4.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (384 kbps, 10 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 4x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 8x336 | N/A |
| | TF5, bits | N/A | N/A | N/A | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF5, TF0) |
| UL_TFC16 | (TF1, TF0, TF0, TF5, TF0) |
| UL_TFC17 | (TF2, TF1, TF1, TF5, TF0) |
| UL_TFC18 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC30 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC31 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC32 | (TF2, TF1, TF1, TF4, TF1) |
| UL_TFC33 | (TF0, TF0, TF0, TF5, TF1) |
| UL_TFC34 | (TF1, TF0, TF0, TF5, TF1) |
| UL_TFC35 | (TF2, TF1, TF1, TF5, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:384 kbps radio bearer (RB8) has the highest number of transport formats (5 for TTI=10 ms and excluding TF0) then 5 sub-tests has been defined. The selected UL TFCI to achieve test coverage of TF1 to TF5 for RB8 and for the different speech transport formats are: UL_TFC4 for TF1, UL_TFC8 for TF2, UL_TFC11 for TF3, UL_TFC13 for TF4 and UL_TFC17 for TF5.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 256 | 336 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC18, UL_TFC22 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 256 | 656 | DL_TFC2 | UL_TFC8 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC18, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC2 | UL_TFC11 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC18, UL_TFC29 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC13 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC18, UL_TFC31 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 2552 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 5 | 1 | 3 | 256 | 256 | 656 | DL_TFC2 | UL_TFC17 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC18 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC17, UL_TFC18, UL_TFC35 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 3832 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC18 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.3.7.4.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.5 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.7.5.1 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB, UL 336bit block size

##### 18.3.7.5.1.1 Conformance requirement

See 18.3.7.1.1.1.

##### 18.3.7.5.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.5 for the UL 336 bit block size case.

##### 18.3.7.5.1.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x336 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x336 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 2x336 | N/A |
| | TF3, bits | N/A | N/A | N/A | 3x336 | N/A |
| | TF4, bits | N/A | N/A | N/A | 4x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB8) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB8 and for the different speech transport formats are: UL_TFC4 for TF1, UL_TFC8 for TF2, UL_TFC11 for TF3 and UL_TFC13 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See NOTE 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | DL_TFC2 | UL_TFC8 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 632 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See NOTE 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC2 | UL_TFC11 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC15, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 952 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC13 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See NOTE 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |

| | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 8 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.3.7.5.1.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.5.2 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL: 64 DL:[Bit rate depending on the UE category] / PS RAB, UL 144bit block size

#### 18.3.7.5.2.1 Conformance requirement

See 18.3.7.1.1.1.

#### 18.3.7.5.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.5 for the UL 144 bit block size case.

#### 18.3.7.5.2.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| RLC Transmission window size | See sub-test table |
| RLC Receiving window size | See sub-test table |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | RB8 (64 kbps, 20 ms TTI) | DCCH |
|---|---|---|---|---|---|---|
| TFS | TF0, bits | 0x81 | 0x103 | 0x60 | 0x144 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x144 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | 3x144 | N/A |
| | TF3, bits | N/A | N/A | N/A | 7x144 | N/A |
| | TF4, bits | N/A | N/A | N/A | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, RB7, RB8, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1, TF0) |
| UL_TFC4 | (TF1, TF0, TF0, TF1, TF0) |
| UL_TFC5 | (TF2, TF1, TF1, TF1, TF0) |
| UL_TFC6 | (TF0, TF0, TF0, TF2, TF0) |
| UL_TFC7 | (TF1, TF0, TF0, TF2, TF0) |
| UL_TFC8 | (TF2, TF1, TF1, TF2, TF0) |
| UL_TFC9 | (TF0, TF0, TF0, TF3, TF0) |
| UL_TFC10 | (TF1, TF0, TF0, TF3, TF0) |
| UL_TFC11 | (TF2, TF1, TF1, TF3, TF0) |
| UL_TFC12 | (TF0, TF0, TF0, TF4, TF0) |
| UL_TFC13 | (TF1, TF0, TF0, TF4, TF0) |
| UL_TFC14 | (TF2, TF1, TF1, TF4, TF0) |
| UL_TFC15 | (TF0, TF0, TF0, TF0, TF1) |
| UL_TFC16 | (TF1, TF0, TF0, TF0, TF1) |
| UL_TFC17 | (TF2, TF1, TF1, TF0, TF1) |
| UL_TFC18 | (TF0, TF0, TF0, TF1, TF1) |
| UL_TFC19 | (TF1, TF0, TF0, TF1, TF1) |
| UL_TFC20 | (TF2, TF1, TF1, TF1, TF1) |
| UL_TFC21 | (TF0, TF0, TF0, TF2, TF1) |
| UL_TFC22 | (TF1, TF0, TF0, TF2, TF1) |
| UL_TFC23 | (TF2, TF1, TF1, TF2, TF1) |
| UL_TFC24 | (TF0, TF0, TF0, TF3, TF1) |
| UL_TFC25 | (TF1, TF0, TF0, TF3, TF1) |
| UL_TFC26 | (TF2, TF1, TF1, TF3, TF1) |
| UL_TFC27 | (TF0, TF0, TF0, TF4, TF1) |
| UL_TFC28 | (TF1, TF0, TF0, TF4, TF1) |
| UL_TFC29 | (TF2, TF1, TF1, TF4, TF1) |

Downlink TFS:

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

Downlink TFCS:

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Speech and Interactive Background radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB8) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB8 and for the different speech transport formats are: UL_TFC4 for TF1, UL_TFC8 for TF2, UL_TFC11 for TF3 and UL_TFC13 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | DL_TFC1 | UL_TFC4 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4, UL_TFC15, UL_TFC19 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 120 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See NOTE 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | DL_TFC2 | UL_TFC8 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC8, UL_TFC15, UL_TFC23 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 376 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See NOTE 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC2 | UL_TFC11 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC11, UL_TFC15, UL_TFC26 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 888 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 8 | 256 | 256 | 656 | DL_TFC1 | UL_TFC13 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC15 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC13, UL_TFC15, UL_TFC28 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 1272 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: See NOTE 4 |
| | 2 | 8 | 256 | 256 | | | | | | | |
| | 3 | 8 | 256 | 256 | | | | | | | |
| | 4 | 8 | 256 | 256 | | | | | | | |
| | 5 | 8 | 256 | 256 | | | | | | | |
| | 6 | 8 | 256 | 256 | | | | | | | |
| | 7 | 8 | 512 | 512 | | | | | | | |
| | 8 | 8 | 512 | 512 | | | | | | | |

| | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 8 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3 and UL_TFC15 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB8: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB8 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.3.7.5.2.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.6 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.7.6.1 Conformance requirement

See 18.3.7.1.1.1.

#### 18.3.7.6.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.6.

#### 18.3.7.6.3 Method of test

##### 18.3.7.6.3.1 Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 384 kbps, 10 ms TTI) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |
| | TF5, bits | N/A | 12x336 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0,TF0,TF0) |
| UL_TFC1 | (TF1,TF0,TF0) |
| UL_TFC2 | (TF0,TF1,TF0) |
| UL_TFC3 | (TF1,TF1,TF0) |
| UL_TFC4 | (TF0,TF2,TF0) |
| UL_TFC5 | (TF1,TF2,TF0) |
| UL_TFC6 | (TF0,TF3,TF0) |
| UL_TFC7 | (TF1,TF3,TF0) |
| UL_TFC8 | (TF0,TF4,TF0) |
| UL_TFC9 | (TF1,TF4,TF0) |
| UL_TFC10 | (TF0,TF5,TF0) |
| UL_TFC11 | (TF1,TF5,TF0) |
| UL_TFC12 | (TF0,TF0,TF1) |
| UL_TFC13 | (TF1,TF0,TF1) |
| UL_TFC14 | (TF0,TF1,TF1) |
| UL_TFC15 | (TF1,TF1,TF1) |
| UL_TFC16 | (TF0,TF2,TF1) |
| UL_TFC17 | (TF1,TF2,TF1) |
| UL_TFC18 | (TF0,TF3,TF1) |
| UL_TFC19 | (TF1,TF3,TF1) |
| UL_TFC20 | (TF0,TF4,TF1) |
| UL_TFC21 | (TF1,TF4,TF1) |
| UL_TFC22 | (TF0,TF5,TF1) |
| UL_TFC23 | (TF1,TF5,TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:384 kbps radio bearer (RB6) has the highest number of transport formats (5 for TTI=10 ms and excluding TF0) then 5 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF5 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3, UL_TFC9 for TF4 and UL_TFC11 for TF5.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 256 | 336 | DL_TFC1 | UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC12, UL_TFC15 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC5 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC12, UL_TFC17 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC1 | UL_TFC7 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC7, UL_TFC12, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC9 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC12, UL_TFC21 | RB5: 640<br>RB6: 2552 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 5 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC11 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC12 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC11, UL_TFC12, UL_TFC23 | RB5: 640<br>RB6: 3832 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC12 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.3.7.6.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.7 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.7.7.1 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 336bit block size

##### 18.3.7.7.1.1 Conformance requirement

See 18.3.7.1.1.1.

##### 18.3.7.7.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.7 for the UL 336 bit block size case.

18.3.7.7.1.3 Method of test

18.3.7.7.1.3 Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC<br>TM RLC<br>Segmentation indication<br>Transmission RLC discard<br>CHOICE *SDU Discard Mode*<br>Timer based no explicit<br>Timer_discard | <br><br>FALSE<br><br><br><br>100ms |
| Downlink RLC<br>TM RLC<br>Segmentation indication | <br><br>FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | **TFI** | **RB5 (Conv. 64 kbps)** | **RB6 (I/B 64 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x336 | 0x148 |
| | TF1, bits | 4x640 | 1x336 | 1x148 |
| | TF2, bits | N/A | 2x336 | N/A |
| | TF3, bits | N/A | 3x336 | N/A |
| | TF4, bits | N/A | 4x336 | N/A |

Uplink TFCS:

| **TFCI** | **(RB5, RB6, DCCH)** |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF2, TF0) |
| UL_TFC5 | (TF1, TF2, TF0) |
| UL_TFC6 | (TF0, TF3, TF0) |
| UL_TFC7 | (TF1, TF3, TF0) |
| UL_TFC8 | (TF0, TF4, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF1, TF1) |
| UL_TFC14 | (TF0, TF2, TF1) |
| UL_TFC15 | (TF1, TF2, TF1) |
| UL_TFC16 | (TF0, TF3, TF1) |
| UL_TFC17 | (TF1, TF3, TF1) |
| UL_TFC18 | (TF0, TF4, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB6) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3 and UL_TFC9 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | DL_TFC1 | UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 312 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | DL_TFC1 | UL_TFC5 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 632 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC1 | UL_TFC7 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC7, UL_TFC10, UL_TFC17 | RB5: 640<br>RB6: 952 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC9 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC10, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.<br>NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.<br>NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5. | | | | | | | | | | | |

#### 18.3.7.7.1.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.7.2 Conversational / unknown / UL:64 DL:64 kbps / CS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 144bit block size

#### 18.3.7.7.2.1 Conformance requirement

See 18.3.7.1.1.1.

#### 18.3.7.7.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.7 for the UL 144 bit block size case.

#### 18.3.7.7.2.3 Method of test

##### 18.3.7.7.2.3.1 Initial Conditions

The following RLC Info parameter values shall be set by the SS for the Conversational / unknown / UL:64 DL:64 kbps / CS RAB (RB5):

| | **RB5 (Conv. 64 kbps)** |
|---|---|
| Uplink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| Transmission RLC discard | |
| CHOICE *SDU Discard Mode* | |
| Timer based no explicit | |
| Timer_discard | 100ms |
| Downlink RLC | |
| TM RLC | |
| Segmentation indication | FALSE |
| NOTE: Timer based discard without explicit signalling is used in uplink to secure that the UE will be able to return data for the case when the UE test loop function will not deliver all the SDUs in one and the same TTI . | |

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (Conv. 64 kbps) | RB6 (I/B 64 kbps) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x144 | 0x148 |
| | TF1, bits | 4x640 | 1x144 | 1x148 |
| | TF2, bits | N/A | 3x144 | N/A |
| | TF3, bits | N/A | 7x144 | N/A |
| | TF4, bits | N/A | 10x144 | N/A |

Uplink TFCS:

| TFCI | (RB5, RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF0, TF1, TF0) |
| UL_TFC3 | (TF1, TF1, TF0) |
| UL_TFC4 | (TF0, TF2, TF0) |
| UL_TFC5 | (TF1, TF2, TF0) |
| UL_TFC6 | (TF0, TF3, TF0) |
| UL_TFC7 | (TF1, TF3, TF0) |
| UL_TFC8 | (TF0, TF4, TF0) |
| UL_TFC9 | (TF1, TF4, TF0) |
| UL_TFC10 | (TF0, TF0, TF1) |
| UL_TFC11 | (TF1, TF0, TF1) |
| UL_TFC12 | (TF0, TF1, TF1) |
| UL_TFC13 | (TF1, TF1, TF1) |
| UL_TFC14 | (TF0, TF2, TF1) |
| UL_TFC15 | (TF1, TF2, TF1) |
| UL_TFC16 | (TF0, TF3, TF1) |
| UL_TFC17 | (TF1, TF3, TF1) |
| UL_TFC18 | (TF0, TF4, TF1) |
| UL_TFC19 | (TF1, TF4, TF1) |

Downlink TFS:

| | TFI | RB5 (Conv. 64 kbps) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x640 | 0x148 |
| | TF1, bits | 4x640 | 1x148 |

Downlink TFCS:

| TFCI | (RB5, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0) |
| DL_TFC1 | (TF1, TF0) |
| DL_TFC2 | (TF0, TF1) |
| DL_TFC3 | (TF1, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Conversational CS and Interactive Background PS radio bearer. As the Interactive Background UL:64 kbps radio bearer (RB6) has the highest number of transport formats (4 excluding TF0) then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB6 and for TF1 for RB5 are: UL_TFC3 for TF1, UL_TFC5 for TF2, UL_TFC7 for TF3 and UL_TFC9 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | DL_TFC1 | UL_TFC3 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC10, UL_TFC13 | RB5: 640<br>RB6: 120 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | DL_TFC1 | UL_TFC5 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC10, UL_TFC15 | RB5: 640<br>RB6: 376 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | DL_TFC1 | UL_TFC7 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC7, UL_TFC10, UL_TFC17 | RB5: 640<br>RB6: 888 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | DL_TFC1 | UL_TFC9 | DL_TFC0, DL_TFC2, UL_TFC0, UL_TFC10 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC9, UL_TFC10, UL_TFC19 | RB5: 640<br>RB6: 1272 | RB5: 4x640<br>RB6: See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.<br>NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.<br>NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5. | | | | | | | | | | | |

#### 18.3.7.7.2.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.8 Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:384 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.7.8.1 Conformance requirement

See 18.3.7.1.1.1.

#### 18.3.7.8.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.8.

#### 18.3.7.8.3 Method of test

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | **TFI** | **RB6 (I/B 384 kbps)** | **RB6 (I/B 384 kbps)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x340 | 0x340 | 0x148 |
| | TF1, bits | 1x340 | 1x340 | 1x148 |
| | TF2, bits | 2x340 | 2x340 | N/A |
| | TF3, bits | 4x340 | 4x340 | N/A |
| | TF4, bits | 8x340 | 8x340 | N/A |
| | TF5, bits | 12x340 | 12x340 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF5, TF0) |
| UL_TFC6 | (TF0, TF1) |
| UL_TFC7 | (TF1, TF1) |
| UL_TFC8 | (TF2, TF1) |
| UL_TFC9 | (TF3, TF1) |
| UL_TFC10 | (TF4, TF1) |
| UL_TFC11 | (TF5, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the 2 x Interactive Background PS radio bearer. As the 2 x Interactive Background UL:384 kbps radio bearer (RB5+RB6) have 5 transport formats then 5 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF5 for RB5+RB6 are: UL_TFC1 for TF1, UL_TFC2 for TF2, UL_TFC3 for TF3, UL_TFC4 for TF4 and UL_TFC5 for TF5.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC1 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC6, UL_TFC7 | RB5: 312 RB6: 312 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC2 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC6, UL_TFC8 | RB5: 632 RB6: 632 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC3 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC6, UL_TFC9 | RB5: 1272 RB6: 1272 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC4 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC6, UL_TFC10 | RB5: 2552 RB6: 2552 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 5 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC5 | UL_TFC0, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6, UL_TFC11 | RB5: 3832<br>RB6: 3832 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.
NOTE 2: UL_TFC0, UL_TFC1 and UL_TFC6 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.
NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.3.7.8.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.9 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.7.9.1 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 340bit block size

##### 18.3.7.9.1.1 Conformance requirement

See 18.3.7.1.1.1.

##### 18.3.7.9.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.9 for the UL 340 bit block size case.

##### 18.3.7.9.1.3 Method of test

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 + RB6 (64 kbps RAB, 20 ms TTI) | DCCH |
|---|---|---|---|
| TFS | TF0, bits | 0x340 | 0x148 |
| | TF1, bits | 1x340 | 1x148 |
| | TF2, bits | 2x340 | N/A |
| | TF3, bits | 3x340 | N/A |
| | TF4, bits | 4x340 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the 2 x Interactive Background PS radio bearer. As the 2 x Interactive Background UL:64 kbps radio bearer (RB5+RB6) has 4 transport formats then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB5+RB6 are: UL_TFC1 for TF1, UL_TFC2 for TF2, UL_TFC3 for TF3 and UL_TFC4 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | N/A | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 312 RB6: 312 | See NOTE 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | N/A | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 632 RB6: 632 | See NOTE 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 952 RB6: 952 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 RB6: 1272 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.<br>NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.<br>NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5. | | | | | | | | | | | |

#### 18.3.7.9.1.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.9.1 Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB + Interactive or background / UL:64 DL:[Bit rate depending on the UE category] / PS RAB, UL 148bit block size

#### 18.3.7.9.1.1 Conformance requirement

See 18.3.7.1.1.1.

#### 18.3.7.9.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.9 for the UL 148 bit block size case.

#### 18.3.7.9.1.3 Method of test

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | **TFI** | **RB5 + RB6 (64 kbps RAB, 20 ms TTI)** | **DCCH** |
|---|---|---|---|
| TFS | TF0, bits | 0x148 | 0x148 |
| | TF1, bits | 1x148 | 1x148 |
| | TF2, bits | 3x148 | N/A |
| | TF3, bits | 7x148 | N/A |
| | TF4, bits | 10x148 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0) |
| UL_TFC1 | (TF1, TF0) |
| UL_TFC2 | (TF2, TF0) |
| UL_TFC3 | (TF3, TF0) |
| UL_TFC4 | (TF4, TF0) |
| UL_TFC5 | (TF0, TF1) |
| UL_TFC6 | (TF1, TF1) |
| UL_TFC7 | (TF2, TF1) |
| UL_TFC8 | (TF3, TF1) |
| UL_TFC9 | (TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the 2 x Interactive Background PS radio bearer. As the 2 x Interactive Background UL:64 kbps radio bearer (RB5+RB6) has 4 transport formats then 4 sub-tests have been defined. The selected UL TFCI to achieve test coverage of TF1 to TF4 for RB5+RB6 are: UL_TFC1 for TF1, UL_TFC2 for TF2, UL_TFC3 for TF3 and UL_TFC4 for TF4.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | N/A | UL_TFC1 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC5, UL_TFC6 | RB5: 120 RB6: 120 | See NOTE 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | N/A | UL_TFC2 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC5, UL_TFC7 | RB5: 376 RB6: 376 | See NOTE 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC3 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC5, UL_TFC8 | RB5: 888 RB6: 888 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC4 | UL_TFC0, UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC9 | RB5: 1272 RB6: 1272 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.<br>NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2, and UL_TFC10 are part of minimum set of TFCIs.<br>NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.<br>RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.<br>NOTE 4: The test data size for RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5. | | | | | | | | | | | |

#### 18.3.7.9.1.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.10 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.7.10.1 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 336bit block size

##### 18.3.7.10.1.1 Conformance requirement

See 18.3.7.1.1.1.

##### 18.3.7.10.1.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.10 for the UL 336 bit block size case.

##### 18.3.7.10.1.3 Method of test

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | TFI | RB5 (Streaming 128 kbps, 20ms) | RB6 (I/B 128 kbps, 20ms) | DCCH |
|---|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x336 | 0x148 |
| | TF1, bits | 1x656 | 1x336 | 1x148 |
| | TF2, bits | 2x656 | 2x336 | N/A |
| | TF3, bits | 4x656 | 4x336 | N/A |
| | TF4, bits | N/A | 8x336 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF0, TF0) |
| UL_TFC3 | (TF3, TF0, TF0) |
| UL_TFC4 | (TF0, TF1, TF0) |
| UL_TFC5 | (TF1, TF1, TF0) |
| UL_TFC6 | (TF2, TF1, TF0) |
| UL_TFC7 | (TF3, TF1, TF0) |
| UL_TFC8 | (TF0, TF2, TF0) |
| UL_TFC9 | (TF1, TF2, TF0) |
| UL_TFC10 | (TF2, TF2, TF0) |
| UL_TFC11 | (TF3, TF2, TF0) |
| UL_TFC12 | (TF0, TF3, TF0) |
| UL_TFC13 | (TF1, TF3, TF0) |
| UL_TFC14 | (TF2, TF3, TF0) |
| UL_TFC15 | (TF3, TF3, TF0) |
| UL_TFC16 | (TF0, TF4, TF0) |
| UL_TFC17 | (TF1, TF4, TF0) |
| UL_TFC18 | (TF2, TF4, TF0) |
| UL_TFC19 | (TF3, TF4, TF0) |
| UL_TFC20 | (TF0, TF0, TF1) |
| UL_TFC21 | (TF1, TF0, TF1) |
| UL_TFC22 | (TF2, TF0, TF1) |
| UL_TFC23 | (TF3, TF0, TF1) |
| UL_TFC24 | (TF0, TF1, TF1) |
| UL_TFC25 | (TF1, TF1, TF1) |
| UL_TFC26 | (TF2, TF1, TF1) |
| UL_TFC27 | (TF3, TF1, TF1) |
| UL_TFC28 | (TF0, TF2, TF1) |
| UL_TFC29 | (TF1, TF2, TF1) |
| UL_TFC30 | (TF2, TF2, TF1) |
| UL_TFC31 | (TF3, TF2, TF1) |
| UL_TFC32 | (TF0, TF3, TF1) |
| UL_TFC33 | (TF1, TF3, TF1) |
| UL_TFC34 | (TF2, TF3, TF1) |
| UL_TFC35 | (TF3, TF3, TF1) |
| UL_TFC36 | (TF0, TF4, TF1) |
| UL_TFC37 | (TF1, TF4, TF1) |
| UL_TFC38 | (TF2, TF4, TF1) |
| UL_TFC39 | (TF3, TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Streaming + Interactive Background PS radio bearer. The Streaming UL:128 kbps + Interactive Background UL:128 kbps radio bearer (RB5+RB6) have 40 transport format combinations. As the transport formats where RB5, RB6 or DCCH has no data (TF0 for RB5, RB6 or DCCH) is considered as implicitely tested when the transport format combinations with data is tested then no specific sub-tests for those transport format combinations have been specified. The selected UL TFCI to achieve test coverage of TF1 to TF3 for RB5 and TF1 to TF4 for RB6 are: UL_TFC5 to UL_TFC7, UL_TFC9 to UL_TFC11, UL_TFC13 to UL_TFC15 and UL_TFC17 to UL_TFC19.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | N/A | UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC20, UL_TFC21 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC25 | RB5: 632<br>RB6: 312 | See NOTE 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | N/A | UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC26 | RB5: 1272<br>RB6: 312 | See NOTE 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC7 | UL_TFC0, UL_TFC3, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC7, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC27 | RB5: 2552<br>RB6: 312 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC9 | UL_TFC0, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC20, UL_TFC21, UL_TFC24, | RB5: 632<br>RB6: 632 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 3 | 1024 | 512 | | | | | UL_TFC29 | | |
| 5 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC30 | RB5: 1272 RB6: 632 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 6 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC11 | UL_TFC0, UL_TFC3, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC8, UL_TFC11, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC31 | RB5: 2552 RB6: 632 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 7 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC13 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC12, UL_TFC13, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC33 | RB5: 632 RB6: 1272 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 8 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC14 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC12, UL_TFC14, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC34 | RB5: 1272 RB6: 1272 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 9 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC12, UL_TFC4, UL_TFC20, | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC12, | RB5: 2552 RB6: 1272 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 6 | 3 | 512 | 256 | | | | UL_TFC6 | UL_TFC15, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC35 | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 10 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC16, UL_TFC17, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC37 | RB5: 632 RB6: 2552 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 11 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC18 | UL_TFC0, UL_TFC8, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC16, UL_TFC18, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC38 | RB5: 1272 RB6: 2552 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 12 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC19 | UL_TFC0, UL_TFC3, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC16, UL_TFC19, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC39 | RB5: 2552 RB6: 2552 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC4 and UL_TFC20 are part of minimum set of TFCIs. Also the transport format combinations UL_TFC21 and UL_TFC24 using TF1 on either RB5 or RB6 and TF1 on DCCH has been included in the allowed TFCs as those could happen during the sub-test.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.3.7.10.1.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

### 18.3.7.10.2 Streaming / unknown / UL:128 DL: [guaranteed 128, max bit rate depending on UE category] kbps / PS RAB + Interactive or background / UL:128 DL: [max bit rate depending on UE category] / PS RAB, UL 144bit block size

#### 18.3.7.10.2.1 Conformance requirement

See 18.3.7.1.1.1.

#### 18.3.7.10.2.2 Test purpose

To verify radio bearer establishment and correct data transfer for reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.6.10 for the UL 144 bit block size case.

#### 18.3.7.10.2.3 Method of test

The generic test procedure in 14.1.3.5 is run for each sub-test.

Uplink TFS:

| | **TFI** | **RB5 (Streaming 128 kbps, 20ms)** | **RB6 (I/B 128 kbps, 20ms)** | **DCCH** |
|---|---|---|---|---|
| TFS | TF0, bits | 0x656 | 0x144 | 0x148 |
| | TF1, bits | 1x656 | 1x144 | 1x148 |
| | TF2, bits | 2x656 | 7x144 | N/A |
| | TF3, bits | 4x656 | 14x144 | N/A |
| | TF4, bits | N/A | 20x144 | N/A |

Uplink TFCS:

| TFCI | (RB5 + RB6, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0) |
| UL_TFC2 | (TF2, TF0, TF0) |
| UL_TFC3 | (TF3, TF0, TF0) |
| UL_TFC4 | (TF0, TF1, TF0) |
| UL_TFC5 | (TF1, TF1, TF0) |
| UL_TFC6 | (TF2, TF1, TF0) |
| UL_TFC7 | (TF3, TF1, TF0) |
| UL_TFC8 | (TF0, TF2, TF0) |
| UL_TFC9 | (TF1, TF2, TF0) |
| UL_TFC10 | (TF2, TF2, TF0) |
| UL_TFC11 | (TF3, TF2, TF0) |
| UL_TFC12 | (TF0, TF3, TF0) |
| UL_TFC13 | (TF1, TF3, TF0) |
| UL_TFC14 | (TF2, TF3, TF0) |
| UL_TFC15 | (TF3, TF3, TF0) |
| UL_TFC16 | (TF0, TF4, TF0) |
| UL_TFC17 | (TF1, TF4, TF0) |
| UL_TFC18 | (TF2, TF4, TF0) |
| UL_TFC19 | (TF3, TF4, TF0) |
| UL_TFC20 | (TF0, TF0, TF1) |
| UL_TFC21 | (TF1, TF0, TF1) |
| UL_TFC22 | (TF2, TF0, TF1) |
| UL_TFC23 | (TF3, TF0, TF1) |
| UL_TFC24 | (TF0, TF1, TF1) |
| UL_TFC25 | (TF1, TF1, TF1) |
| UL_TFC26 | (TF2, TF1, TF1) |
| UL_TFC27 | (TF3, TF1, TF1) |
| UL_TFC28 | (TF0, TF2, TF1) |
| UL_TFC29 | (TF1, TF2, TF1) |
| UL_TFC30 | (TF2, TF2, TF1) |
| UL_TFC31 | (TF3, TF2, TF1) |
| UL_TFC32 | (TF0, TF3, TF1) |
| UL_TFC33 | (TF1, TF3, TF1) |
| UL_TFC34 | (TF2, TF3, TF1) |
| UL_TFC35 | (TF3, TF3, TF1) |
| UL_TFC36 | (TF0, TF4, TF1) |
| UL_TFC37 | (TF1, TF4, TF1) |
| UL_TFC38 | (TF2, TF4, TF1) |
| UL_TFC39 | (TF3, TF4, TF1) |

Sub-tests:

The principle used to select sub-tests has been to cover all uplink and downlink TFS for the Streaming + Interactive Background PS radio bearer. The Streaming UL:128 kbps + Interactive Background UL:128 kbps radio bearer (RB5+RB6) have 40 transport format combinations. As the transport formats where RB5, RB6 or DCCH has no data (TF0 for RB5, RB6 or DCCH) is considered as implicitely tested when the transport format combinations with data is tested then no specific sub-tests for those transport format combinations have been specified. The selected UL TFCI to achieve test coverage of TF1 to TF3 for RB5 and TF1 to TF4 for RB6 are: UL_TFC5 to UL_TFC7, UL_TFC9 to UL_TFC11, UL_TFC13 to UL_TFC15 and UL_TFC17 to UL_TFC19.

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 3 | 512 | 128 | 336 | N/A | UL_TFC5 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC20, UL_TFC21 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC5, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC25 | RB5: 632<br>RB6: 120 | See NOTE 4 |
| | 2 | 3 | 512 | 128 | | | | | | | |
| | 3 | 3 | 512 | 128 | | | | | | | |
| | 4 | 3 | 512 | 128 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 2 | 1 | 3 | 256 | 128 | 656 | N/A | UL_TFC6 | UL_TFC0, UL_TFC2, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC6, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC26 | RB5: 1272<br>RB6: 120 | See NOTE 4 |
| | 2 | 3 | 256 | 128 | | | | | | | |
| | 3 | 3 | 256 | 128 | | | | | | | |
| | 4 | 3 | 256 | 128 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 3 | 1 | 3 | 512 | 256 | 336 | N/A | UL_TFC7 | UL_TFC0, UL_TFC3, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC7, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC27 | RB5: 2552<br>RB6: 120 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 4 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC9 | UL_TFC0, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC9, UL_TFC20, UL_TFC21, UL_TFC24, | RB5: 632<br>RB6: 888 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 9 | 3 | 1024 | 512 | | | | | UL_TFC29 | | |
| 5 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC10 | UL_TFC0, UL_TFC2, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC8, UL_TFC10, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC30 | RB5: 1272 RB6: 888 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 6 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC11 | UL_TFC0, UL_TFC3, UL_TFC8, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC8, UL_TFC11, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC31 | RB5: 2552 RB6: 888 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 7 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC13 | UL_TFC0, UL_TFC1, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC12, UL_TFC13, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC33 | RB5: 632 RB6: 1784 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 8 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC14 | UL_TFC0, UL_TFC2, UL_TFC12, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC4, UL_TFC12, UL_TFC14, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC34 | RB5: 1272 RB6: 1784 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 9 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC15 | UL_TFC0, UL_TFC3, UL_TFC12, UL_TFC4, UL_TFC20, | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC12, | RB5: 2552 RB6: 1784 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |

| Sub-tes | UE Category | Number of HARQ processes | RLC Receiving window size (NOTE 1) | RLC Trans-mission window size (NOTE 1) | MAC-d PDU size (bits) | Downlink TFCS Under test | Uplink TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | UL RLC SDU size (bits) (NOTE 3) | Test data size (bits) (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | 6 | 3 | 512 | 256 | | | | UL_TFC6 | UL_TFC15, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC35 | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 10 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC17 | UL_TFC0, UL_TFC1, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC16, UL_TFC17, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC37 | RB5: 632 RB6: 2552 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |
| 11 | 1 | 3 | 512 | 256 | 656 | N/A | UL_TFC18 | UL_TFC0, UL_TFC8, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC4, UL_TFC8, UL_TFC16, UL_TFC18, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC38 | RB5: 1272 RB6: 2552 | See NOTE 4 |
| | 2 | 3 | 512 | 256 | | | | | | | |
| | 3 | 3 | 512 | 256 | | | | | | | |
| | 4 | 3 | 512 | 256 | | | | | | | |
| | 5 | 3 | 512 | 256 | | | | | | | |
| | 6 | 3 | 512 | 256 | | | | | | | |
| | 7 | 3 | 1536 | 512 | | | | | | | |
| | 8 | 3 | 1536 | 512 | | | | | | | |
| | 9 | 3 | 2047 | 512 | | | | | | | |
| 12 | 1 | 3 | 256 | 256 | 656 | N/A | UL_TFC19 | UL_TFC0, UL_TFC3, UL_TFC16, UL_TFC4, UL_TFC20, UL_TFC6 | UL_TFC0, UL_TFC1, UL_TFC3, UL_TFC4, UL_TFC16, UL_TFC19, UL_TFC20, UL_TFC21, UL_TFC24, UL_TFC39 | RB5: 2552 RB6: 2552 | See NOTE 4 |
| | 2 | 3 | 256 | 256 | | | | | | | |
| | 3 | 3 | 256 | 256 | | | | | | | |
| | 4 | 3 | 256 | 256 | | | | | | | |
| | 5 | 3 | 256 | 256 | | | | | | | |
| | 6 | 3 | 256 | 256 | | | | | | | |
| | 7 | 3 | 512 | 512 | | | | | | | |
| | 8 | 3 | 512 | 512 | | | | | | | |
| | 9 | 3 | 1024 | 512 | | | | | | | |

NOTE 1: The SS shall configure the RLC transmission and receiver window size depending on the UE category. The values are set to cope with the number of SDUs used in the sub-test and within the UE capabilities for the actual UE category under test.

NOTE 2: UL_TFC0, UL_TFC1, UL_TFC4 and UL_TFC20 are part of minimum set of TFCIs. Also the transport format combinations UL_TFC21 and UL_TFC24 using TF1 on either RB5 or RB6 and TF1 on DCCH has been included in the allowed TFCs as those could happen during the sub-test.

NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
RB5 and RB6: The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit) , where N is the number of transport blocks for the UL transport format under test. This will make the UE to return one RLC SDU per UL TTI.

NOTE 4: The test data size for RB5 and RB6 is dependent on the actual TFRC test point, see the generic test procedure in 14.1.3.5.

#### 18.3.7.10.2.4 Test requirements

See 14.1.3.5 for definition of the referenced step numbers.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the actual sub-test.
3. At step 18 and for each TFRC test point:

   If the downlink RLC SDU size is less than the configured UL RLC SDU for the actual sub-test then the UE shall return 4 RLC SDUs where the first bits of each SDU has the same content as the RLC SDUs sent by the SS in downlink. Otherwise the UE shall return 4 RLC SDUs where each SDU has the same content as the first bits of the RLC SDUs sent by the SS in downlink.

   NOTE: The generic test procedure as specified in 14.1.3.5.2 sends 4 SDUs of size ($N_{PDUs}$ * MAC-d PDU payload size) / 4 minus 8 bits (size of 7 bit length indicator and expansion bit). For the case when the downlink SDU size is less than the configured UL SDU size then all data is returned otherwise the returned data is truncated.

## 18.3.8 Combinations on DPCH, HS-DSCH and E-PUCH

### 18.3.8.1 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH on DCH

#### 18.3.8.1.1 Conformance requirement

The UE shall be able to establish the UTRAN requested radio bearers within the UE's signaled radio access capabilities.

The UE shall correctly transfer user data from peer to peer RLC entitities according to the requested radio bearer configuration.

Reference(s)

3GPP TS 25.331, clause 8.2.1

3GPP TS 25.2xx series (Physical Layer)

3GPP TS 25.321 (MAC)

3GPP TS 25.322 (RLC)

#### 18.3.8.1.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.7.1:

1. To verify that the UE is able to establish the radio bearer combination.
2. To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

#### 18.3.8.1.3 Method of test

The following parameters are specific for this test case:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 1536 |
| 5 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (NOTE 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number HS-DSCH timeslots | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 5 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 6 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 7 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 8 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 9 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 10 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 11 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 12 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 13 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 115 |

NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 18.3.7.1.1 (MAC-d PDU size=336) for recommended TFRC values for different transport block size.

The generic test procedure in 18.3.1.5 is run for each sub-test.

Sub-tests:

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (NOTE 1) | E-DPDCH Number of HARQ processes | UL RLC SDU size (NOTE 2) | Test data size (NOTE 3) |
|---|---|---|---|---|---|
| 1 | 1 to 7 | 10ms, Table 0 | 4 | 312 | 312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.
NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.
NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.

### 18.3.8.1.4 Test requirements

See 18.2.1.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU with same content as sent in downlink.

### 18.3.8.3 Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH

#### 18.3.8.3.1 Conformance requirement

See 18.3.8.1.1.

#### 18.3.8.3.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.7.3:

1. To verify that the UE is able to establish.teh radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

#### 18.3.8.3.3 Method of test

See 18.3.8.1.3.

#### 18.3.8.3.4 Test requirements

See 18.3.8.1.4.

### 18.3.8.4 Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH

#### 18.3.8.4.1 Conformance requirement

See 18.3.8.1.1.

#### 18.3.8.4.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.7.4:

1. To verify that the UE is able to establish the radio bearer combination.

2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH in combination with the possible TFCI of the conversional speech radio bearer.

#### 18.3.8.4.3 Method of test

The following parameters are specific for this test case:

**Uplink TFS:**

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

**Uplink TFCS:**

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| UL_TFC0 | (TF0, TF0, TF0, TF0) |
| UL_TFC1 | (TF1, TF0, TF0, TF0) |
| UL_TFC2 | (TF2, TF1, TF1, TF0) |
| UL_TFC3 | (TF0, TF0, TF0, TF1) |
| UL_TFC4 | (TF1, TF0, TF0, TF1) |
| UL_TFC5 | (TF2, TF1, TF1, TF1) |

**Downlink TFS:**

| | | RB5 (RAB subflow #1) | RB6 (RAB subflow #2) | RB7 (RAB subflow #3) | DCCH |
|---|---|---|---|---|---|
| TFS | TF0, bits | 1x0 | 0x103 | 0x60 | 0x148 |
| | TF1, bits | 1x39 | 1x103 | 1x60 | 1x148 |
| | TF2, bits | 1x81 | N/A | N/A | N/A |

**Downlink TFCS:**

| TFCI | (RB5, RB6, RB7, DCCH) |
|---|---|
| DL_TFC0 | (TF0, TF0, TF0, TF0) |
| DL_TFC1 | (TF1, TF0, TF0, TF0) |
| DL_TFC2 | (TF2, TF1, TF1, TF0) |
| DL_TFC3 | (TF0, TF0, TF0, TF1) |
| DL_TFC4 | (TF1, TF0, TF0, TF1) |
| DL_TFC5 | (TF2, TF1, TF1, TF1) |

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (NOTE 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number HS-DSCH timeslots | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 5 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 6 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 7 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 8 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 9 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 10 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 11 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 12 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 13 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 115 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 18.3.7.1.1 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | | |

The generic test procedure in 18.3.1.5 is run for each sub-test.

**Sub-tests:**

| Sub-test | Applicable E-DCH Category | E-DPDCH TTI and E-TFCI Table (NOTE 1) | E-DPDCH Number of HARQ processes | DCH | | | | UL RLC SDU size (NOTE 3) | Test data size (NOTE 4) |
|---|---|---|---|---|---|---|---|---|---|
| | | | | DL TFCS Under test | UL TFCS Under test | Implicitely tested | Restricted UL TFCIs (NOTE 2) | | |
| 1 | 1 to 7 | 10ms, Table 0 | 4 | DL_TFC1 | UL_TFC1 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC4 | RB5: 39<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 39<br>RB6: No data<br>RB7: No data<br>RB8: 312 |
| 2 | 1 to 7 | 10ms, Table 0 | 4 | DL_TFC2 | UL_TFC2 | DL_TFC0, DL_TFC3, UL_TFC0, UL_TFC3 | UL_TFC0, UL_TFC1, UL_TFC2, UL_TFC3, UL_TFC5 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 | RB5: 81<br>RB6: 103<br>RB7: 60<br>RB8: 312 |

NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.
NOTE 2: UL_TFC0, UL_TFC1, UL_TFC2 and UL_TFC3 are part of minimum set of TFCIs.
NOTE 3: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs.
The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.
NOTE 4: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested.

#### 18.3.8.4.4 Test requirements

See 18.2.1.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At steps 17 to 20 the UE transmitted transport format shall be within the set of restricted TFCIs as specified for the sub-test.
3. At step 18 and for each radio bearer where test data is sent in downlink the UE shall return a RLC SDU with same content as sent in downlink. For radio bearers where no data is sent in downlink then no data shall be received in uplink.

### 18.3.8.5 Streaming or interactive or background / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB + Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL:[max bit rate depending on UE category and TTI] DL:3.4 kbps SRBs for DCCH on E-DCH and DL DCH

#### 18.3.8.5.1 Conformance requirement

See 18.3.8.1.1.

#### 18.3.8.5.2 Test purpose

For the reference radio bearer configuration as specified in TS 34.108, clause 6.11.6.4.7.5:

1. To verify that the UE is able to establish the radio bearer combination.
2 To verify correct data transfer using all the possible MAC-d PDU sizes of the transport channel mapped to E-DCH.

#### 18.3.8.5.3 Method of test

The first Streaming or background or interactive / UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is refered to as RB5 and the second Streaming or interactive or background UL:[max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] kbps / PS RAB is referred to RB6.

The following parameters are specific for this test case and RB5 and RB6:

| Parameter | Value |
|---|---|
| MAC-hs receiver window size | 16 |
| HS-DSCH MAC-d PDU size | 336 |

| E-DCH Category | RLC Transmission window size |
|---|---|
| 1 | 512 |
| 2 | 512 |
| 3 | 512 |
| 4 | 512 |
| 5 | 1536 |
| 6 | 1536 |

| HS-DSCH Category | HS-PDSCH Number of HARQ processes | RLC Receiving window size | HS-PDSCH TFRC (NOTE 1) | | | | | |
|---|---|---|---|---|---|---|---|---|
| | | | Max MAC-d PDU size | Minimum TBS | Number of MAC-d PDUs | Modulation scheme | Number HS-DSCH timeslots | TFRI |
| 1 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 2 | 2 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 3 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 4 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 5 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 6 | 3 | 512 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 7 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 8 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 9 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 10 | 3 | 1536 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 11 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 12 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 115 |
| 13 | 3 | 2047 | 336 | 357 | 1 | QPSK | 1 | 115 |
| NOTE 1: The HS-PDSCH TFRC should be selected to enable all test data on DTCH on HS-DSCH to be transmitted in one TTI, i.e. such that the MAC-hs transport block size is bigger than the maximum MAC-d PDU size under test + MAC-hs header size (21 bits). See 18.3.7.1.1 (MAC-d PDU size=336) for recommended TFRC values for different transport block size. | | | | | | | | |

The generic test procedure in 18.3.1.5 is run for each sub-test.

Sub-tests:

| Sub-test | E-DCH Category | E-DPDCH TTI and E-TFCI Table (NOTE 1) | E-DPDCH Number of HARQ processes | UL RLC SDU size (NOTE 2) | Test data size (NOTE 2) |
|---|---|---|---|---|---|
| 1 | 1 to 7 | 10ms, Table 0 | 4 | RB5:312<br>RB6:312 | RB5:312<br>RB6:312 |
| NOTE 1: E-DPDCH TTI and E-TFCI table according to TS 25.321 Annex B.<br>NOTE 2: See TS 34.109 [10] clause 5.3.2.6.2 for details regarding loopback of RLC SDUs. The UL RLC SDU size is set to N*UL RLC payload size minus 8 bits (size of 7 bit length indicator and expansion bit), where N is the number of transport blocks for the UL transport format under test. This will enable the UE to return th data within one UL TTI.<br>NOTE 3: The test data size is for DTCH mapped to E-DCH selected according to the MAC-d PDU size to be tested. | | | | | |

### 18.3.8.5.4 Test requirements

See 18.2.1.5 for definition of step 12 and step 18.

1. At step 12 the UE shall send RADIO BEARER SETUP COMPLETE.
2. At step 18 the UE shall return a RLC SDU on RB5 and RB6 with same content as sent in downlink.

# Annex A (normative): Default RRC Message Contents

The default RRC message contents are provided in clause 9 of 3GPP TS 34.108 [9].

# Annex B (informative):
# Void

# Annex C (normative): Generic Test Procedures to Check UE's State

This section described procedures to check the state of UE. These procedures will only be used in the final step of all RRC test cases. All procedures described in this section shall return an indication to the calling test entity whether or not the UE is in the designated state. In order to use these procedures, the test entity shall call for the test procedure in the test sequence. The test entity shall use the following syntax to call for the desire test procedure:

Call [test procedure index]

where the values of *test procedure index* are defined as:-

C.1 indicates generic test procedure to test that UE is in Idle Mode state.

C.2 indicates generic test procedure to test that UE is in CELL_FACH state.

C.3 indicates generic test procedure to test that UE is in CELL_DCH state.

C.4 indicates generic test procedure to test that UE is in CELL_PCH state.

C.5 indicates generic test procedure to test that UE is in URA_PCH state.

## C.1 Verify that UE is in Idle Mode State

### C.1.1 Conformance requirement

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions.

When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in idle mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a CN identity:

2> compare the IE "UE identity" with all of its allocated CN UE identities:

2> if one match is found:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "UE identity" and the IE "Paging cause" to the upper layers.

1> otherwise:

2> ignore that paging record.

In the UE, the initial direct transfer procedure shall be initiated, when the upper layers request establishment of a signalling connection. This request also includes a request for the transfer of a NAS message.

Upon initiation of the initial direct transfer procedure when the UE is in idle mode, the UE shall:

…

1> perform an RRC connection establishment procedure;

…

The UE shall initiate the procedure when upper layers in the UE requests the establishment of a signalling connection and the UE is in idle mode (no RRC connection exists...

Upon initiation of the procedure, the UE shall:

…

1> submit the RRC CONNECTION REQUEST message for transmission on the uplink CCCH;

…

### C.1.2 Reference

3GPP TS 25.331 clause 8.1.2.3, 8.1.3.2 and 8.1.8.2.

### C.1.3 Test purpose

To test the UE is in idle mode state by confirming that UE responds with RRC CONNECTION REQUEST message after SS pages UE using UE's CN domain identity.

#### Test Procedure

SS sends a PAGING TYPE 1 using CN domain identity. If UE is in idle mode state, UE shall respond with RRC CONNECTION REQUEST message. Then SS shall transmit RRC CONNECTION SETUP message to request UE to move to CELL_DCH. UE shall configure the delicated channels and then transmit RRC CONNECTION SETUP COMPLETE message. UE shall then transmit INITIAL DIRECT TRANSFER message. Then SS transmit RRC CONNECTION RELEASE message to UE. UE shall transmit RRC CONNECTION RELEASE COMPLETE message to SS.

#### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | PAGING TYPE 1 (PCCH) | Using CN domain identity as stored in the TEST USIM |
| 2 | → | | RRC CONNECTION REQUEST (CCCH) | |
| 3 | | ← | RRC CONNECTION SETUP (CCCH) | Transit to CELL_DCH state |
| 4 | → | | RRC CONNECTION SETUP COMPLETE (DCCH) | |
| 4a | → | | MBMS MODIFICATION REQUEST | Note 1 |
| 5 | UE | | | UE transmits RR (PAGING RESPONSE)<br>Or<br>GMM (Service Request) |
| 6 | | ← | RRC CONNECTION RELEASE (DCCH) | |
| 7 | → | | RRC CONNECTION RELEASE COMPLETE (DCCH) | The UE shall enter idle state. |
| Note 1: This message is applicable only for MBMS Selected Services and shall be received at any point after receiving RRC CONNECTION SETUP COMPLETE message and before step 6. | | | | |

#### Specific message contents

MBMS MODIFICATION REQUEST (step 4a)

| Information Element | Value/remark |
|---|---|
| MBMS preferred frequency request | Check that the IE is not present |
| MBMS RB list requested to be released | Check that the IE is not present |
| MBMS Selected Service Info | |
| - CHOICE Status | Some |
| - MBMS Selected Services Full | |
| - MBMS Selected Service ID | |
| - MBMS Service ID | MBMS service ID of the activated MBMS service |
| - CHOICE PLMN identity | Check to see that one of the below choice element is present |
| - SameAs-MIB | (no data) |
| - explicitPLMN_Id | Check to see if it is set to the same value as "PLMN ID" in the Master Information block transmitted for the current serving cell. |

### C.1.4 Test result

If the UE transmits a RRC CONNECTION REQUEST message in step 2, the UE is in idle mode state prior to the start of this test procedure, otherwise UE is not in idle mode state.

## C.2 Verify that UE is in CELL_FACH State

### C.2.1 Conformance requirement

The UE shall receive and act on an RRC CONNECTION RELEASE message in states CELL_DCH and CELL_FACH.

When the UE receives the first RRC CONNECTION RELEASE message; and

1> if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or

1> if the message is received on DCCH:

the UE shall:

1> in state CELL_FACH:

2> if the RRC CONNECTION RELEASE message was received on the DCCH:

3> set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS;

3> submit an RRC CONNECTION RELEASE COMPLETE message to the lower layers for transmission using AM RLC on the DCCH to the UTRAN.

3> when the successful transmission of the RRC CONNECTION RELEASE COMPLETE message has been confirmed by the lower layers:

4> release all its radio resources; and

4> indicate the release of the established signalling connections (as stored in the variable ESTABLISHED_SIGNALLING_CONNECTIONS) and established radio access bearers (as stored in the variable ESTABLISHED_RABS) to upper layers; and

4> clear any entry for the RRC CONNECTION RELEASE message in the tables "Accepted transactions" and "Rejected transactions" in the variable TRANSACTIONS;

4> clear the variable ESTABLISHED_SIGNALLING_CONNECTIONS;

4> clear the variable ESTABLISHED_RABS;

4> pass the value of the IE "Release cause" received in the RRC CONNECTION RELEASE message to upper layers;

4> enter idle mode;

4> perform the actions specified in TS 25.331 subclause 8.5.2 when entering idle mode.

3> and the procedure ends.

### C.2.2 Reference

3GPP TS 25.331 clause 8.1.4.3.

### C.2.3 Test purpose

To test that the UE is in CELL_FACH state by confirming that UE transmits RRC CONNECTION RELEASE COMPLETE using AM RLC on the UL DCCH when it receives a RRC CONNECTION RELEASE sent by SS using UM RLC on the DL DCCH.

Test Procedure

SS sends an RRC CONNECTION RELEASE using UM RLC on the DL DCCH. UE shall respond with RRC CONNECTION RELEASE COMPLETE using AM RLC on the UL DCCH

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RRC CONNECTION RELEASE (DCCH) | |
| 2 | → | | RRC CONNECTION RELEASE COMPLETE (DCCH-AM) | The UE shall enter idle state. |

Specific message contents

None.

### C.2.4 Test result

If UE transmits a RRC CONNECTION RELEASE COMPLETE message using AM RLC in step 2, the UE is in CELL_FACH state prior to the start of this procedure, otherwise, the UE is not in CELL_FACH state.

## C.3 Verify that UE is in CELL_DCH State

### C.3.1 Conformance requirement

The UE shall receive and act on an RRC CONNECTION RELEASE message in states CELL_DCH and CELL_FACH.

When the UE receives the first RRC CONNECTION RELEASE message; and

1> if the message is received on the CCCH, and IE "U-RNTI" is present and has the same value as the variable U_RNTI; or

1> if the message is received on DCCH:

the UE shall:

1> in state CELL_DCH:

2> initialise the counter V308 to zero;

2> set the IE "RRC transaction identifier" in the RRC CONNECTION RELEASE COMPLETE message to the value of "RRC transaction identifier" in the entry for the RRC CONNECTION RELEASE message in the table "Accepted transactions" in the variable TRANSACTIONS;

2> submit an RRC CONNECTION RELEASE COMPLETE message to the lower layers for transmission using UM RLC on the DCCH to the UTRAN;

2> if the IE "Rplmn information" is present:

3> the UE may:

4> store the IE on the ME together with the PLMN id for which it applies;

3> the UE may then:

4> utilise this information, typically indicating where a number of BCCH frequency ranges of a RAT may be expected to be found, during subsequent Rplmn selections of the indicated PLMN.

2> start timer T308 when the RRC CONNECTION RELEASE COMPLETE message is sent on the radio interface.

### C.3.2 Reference

3GPP TS 25.331 clause 8.1.4.3.

### C.3.3 Test purpose

To test that the UE is in CELL_DCH state by confirming that UE transmits RRC CONNECTION RELEASE COMPLETE using UM RLC on the UL DCCH when it receives a RRC CONNECTION RELEASE sent by SS using UM RLC on the DL DCCH.

Test Procedure

SS sends an RRC CONNECTION RELEASE using UM RLC on the DL DCCH. UE shall respond with RRC CONNECTION RELEASE COMPLETE using UM RLC on the UL DCCH.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | ← | | RRC CONNECTION RELEASE (DCCH) | |
| 2 | → | | RRC CONNECTION RELEASE COMPLETE (DCCH-UM) | The UE shall enter idle state. |

Specific message contents

None.

### C.3.4 Test result

If UE transmits a RRC CONNECTION RELEASE COMPLETE message using UM RLC in step 2, the UE is in CELL_DCH state prior to the start of this procedure, otherwise, the UE is not in CELL_DCH state.

## C.4 Verify that UE is in CELL_PCH State

### C.4.1 Conformance requirement

A UE in URA_PCH state shall initiate the URA update procedure in the following cases:

1> URA reselection:

2> if the UE detects that the current URA assigned to the UE, stored in the variable URA_IDENTITY, is not present in the list of URA identities in system information block type 2 …

| System information block | Area scope | UE mode/state when block is valid | UE mode/state when block is read | Scheduling information | Modification of system information | Additional comment |
|---|---|---|---|---|---|---|
| System information block type 2 | Cell | URA_PCH | URA_PCH | Specified by the IE "Scheduling information" | Value tag | |

…

A UE in idle mode, CELL_PCH state or URA_PCH state shall receive the paging information for all its monitored paging occasions. When the UE receives a PAGING TYPE 1 message, it shall perform the actions as specified below.

If the UE is in connected mode, for each occurrence of the IE "Paging record" included in the message the UE shall:

1> if the IE "Used paging identity" is a UTRAN identity and if this U-RNTI is the same as the U-RNTI allocated to the UE:

2> if the optional IE "CN originated page to connected mode UE" is included:

3> indicate reception of paging; and

3> forward the IE "CN domain identity", the IE "Paging cause" and the IE "Paging record type identifier" to the upper layers.

2> otherwise:

3> perform a cell update procedure with cause "paging response".

2> ignore any other remaining IE "Paging record" that may be present in the message.

1> otherwise:

2> ignore that paging record.

### C.4.2 Reference

3GPP TS 25.331 clause 7.2.2, 8.3.1.2, 8.1.1.1.2.

### C.4.3 Test purpose

To confirm that the UE does not read SIB 2 when it receives a PAGING TYPE 1 message that notifies the UE about the modification of the system information.

Subsequently, to confirm that the UE performs a cell update procedure after receiving a PAGING TYPE 1 message containing UE's UTRAN identity.

#### Test Procedure

Firstly, SS shall modify the URA identity in the SIB 2. Then SS shall transmit a PAGING TYPE 1 message to UE to notify UE of the modification of the system information. Then SS wait for x seconds to see if UE send any uplink messages. Next SS shall transmit a PAGING TYPE 1 message to page UE. UE shall transmit a CELL UPDATE message. When SS receives the CELL UPDATE message, SS sends RRC CONNECTION RELEASE message to UE on downlink CCCH.

#### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | SYSTEM INFORMATION BLOCK TYPE 2 | SS changes the URA identity to be different from the one stored in the UE. |
| 2 | | ← | PAGING TYPE 1 | If UE replies to this message, the test fails. SS monitors the uplink activities for 15 s( See Note). |
| 3 | | ← | PAGING TYPE 1 | This message contains the UTRAN identity of the UE. |
| 4 | | → | CELL UPDATE | Check that the cell update cause is set to "paging response". |
| 5 | | ← | RRC CONNECTION RELEASE (CCCH) | |

Note: The SS shall wait until UE can read all SIBs and can listen to the PCCH on the paging occasion.

SIB Repetition (1280 ms in TS34.108) * 2 + Maximum DRX cycle length( 2^9 * 10 ms) * 2 = 2.56 + 10.24 < 15 s

#### Specific message contents

System Information Block type 2 (Step 1)

| Information Element | Value/remark |
|---|---|
| - URA identity list<br>- URA identity | Set to a value different from the one store in the UE. |

PAGING TYPE 1 (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not Present |
| BCCH modification info | |
| - MIB Value Tag | A valid value (as defined in TS 25.331) that is different from the previous MIB. |
| - BCCH modification time | Not Present |

PAGING TYPE 1 (Step 3)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | |
| - Paging record | |
| - CHOICE Used paging identity | UTRAN identity |
| - U-RNTI | Same as the identity of the UE. |
| - CN originated page to connected mode UE | Not Present |
| BCCH modification info | Not Present |

CELL UPDATE (Step 4)

Use the same message sub-type found in clause 9 of TS 34.108, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| Cell Update Cause | Check to see if set to 'utran paging response' |
| Establishment cause | Checked to see if it is absent |

RRC CONNECTION RELEASE (Step 5)

Use the same message sub-type found in clause 9 of TS 34.108.

### C.4.4 Test result

After step 2, the UE shall not transmit URA UPDATE message to indicate to the SS of the change in the URA identity, otherwise the UE is not is CELL_PCH state.

After step 3, the UE shall transmit CELL UPDATE message with cell update cause set to “utran paging response” to SS, otherwise the UE is not is CELL_PCH state.

## C.5 Verify that UE is in URA_PCH State

### C.5.1 Conformance requirement

A UE in URA_PCH state shall initiate the URA update procedure in the following cases:

1> URA reselection:

3> if the UE detects that the current URA assigned to the UE, stored in the variable URA_IDENTITY, is not present in the list of URA identities in system information block type 2 …

| System information block | Area scope | UE mode/state when block is valid | UE mode/state when block is read | Scheduling information | Modification of system information | Additional comment |
|---|---|---|---|---|---|---|
| System information block type 2 | Cell | URA_PCH | URA_PCH | Specified by the IE "Scheduling information" | Value tag | |

### C.5.2 Reference

3GPP TS 25.331 clause 7.2.2, 8.3.1.2, 8.1.1.1.2.

### C.5.3 Test purpose

To confirm that the UE reads SIB 2 when it receives a PAGING TYPE 1 message that notifies the UE about the modification of the system information.

#### Test Procedure

Firstly, SS shall modify the URA identity in the SIB 2. Then SS shall transmit a PAGING TYPE 1 message to UE to notify UE of the modification of the system information. UE shall transmit a URA UPDATE message. When SS receives the URA UPDATE message, SS sends RRC CONNECTION RELEASE message to UE on downlink CCCH.

#### Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | | ← | SYSTEM INFORMATION BLOCK TYPE 2 | SS changes the URA identity to be different from the one stored in the UE. |
| 2 | | ← | PAGING TYPE 1 | |
| 3 | | → | URA UPDATE | Check that the URA update cause is set to “change of URA”. |
| 4 | | ← | RRC CONNECTION RELEASE (CCCH) | |

#### Specific message contents

System Information Block type 2 (Step 1)

| Information Element | Value/remark |
|---|---|
| - URA identity list | |
| - URA identity | Set to a value different from the one store in the UE. |

PAGING TYPE 1 (Step 2)

| Information Element | Value/remark |
|---|---|
| Message Type | |
| Paging record list | Not Present |
| BCCH modification info | |
| - MIB Value Tag | A valid value (as defined in TS 25.331) that is different from the previous MIB. |
| - BCCH modification time | Not Present |

URA UPDATE (Step 3)

Use the same message sub-type found in clause 9 of TS 34.108, with the exception of the following IEs:

| Information Element | Value/remark |
|---|---|
| URA Update Cause | Check to see if set to 'change of URA' |

RRC CONNECTION RELEASE (Step 4)

Use the same message sub-type found in clause 9 of TS 34.108.

### C.5.4 Test result

After step 2, the UE shall transmit URA UPDATE message with URA update cause set to “change of URA” to SS, otherwise the UE is not is URA_PCH state.

# Annex D (normative): Generic procedure to use before and following inter-RAT handover/cell change order signalling test cases

Please note that the following procedures are applicable the default NMO in GERAN (NMO1) and UTRAN (NMO1).

## D.1 Preamble for UTRAN to GERAN test cases

Before running inter-RAT test cases, radio conditions should be such that the mobile has to select the cell of the intented original RAT. The following steps should be used before running UTRAN to GERAN test cases.

GERAN cell is powered OFF. The default radio conditions for a suitable UTRAN cell (in a single cell environment) are used, as defined in 34.108 clause 6.1.5. This step is performed while the UE is still switched OFF.

UE is switched ON and performs registration and attach

1. The GSM cell is powered ON with an RF level such that the cell is suitable, using the RF conditions defined in 34.108 clause 6.1.7 for the suitable neighbor cell, so that the UE will not re-select the GSM cell.

## D.2 Postamble to be used following for inter-RAT handover / cell change order test cases

The following procedure is used after inter-RAT handover or cell change order test cases (UTRAN to GERAN) in case the test needs to be performed multiple times in a loop.

### D.2.1 UTRAN to GERAN handover in CS

These test cases are defined in 34.123-1 clause 8.3.7.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | --> | | ROUTING AREA UPDATE REQUEST | GMM - Update type = 'RA updating'. This is only performed for GPRS Class A mobiles. |
| 2 | <-- | | ROUTING AREA UPDATE ACCEPT | GMM. This step only applies for GPRS Class A mobiles. P-TMSI is included. |
| 3 | --> | | ROUTING AREA UPDATE COMPLETE | |
| 4 | | | | The call is terminated. SS releases the RR connection. |
| 5 | --> | | ROUTING AREA UPDATE REQUEST | GMM - "update type" = 'combined RA/LA updating' or 'combined RA/LA updating with IMSI attach'. This step is performed by both class A and B mobiles. Note: CS only mobiles will perform LAU procedure. |
| 6 | <-- | | ROUTING AREA UPDATE ACCEPT | GMM. P-TMSI is included. |
| 7 | --> | | ROUTING AREA UPDATE COMPLETE | |
| 8 | | | | SS releases the RR connection |
| 9 | | | | UE is powered OFF |

## D.2.2 UTRAN to GERAN handover in CS+PS

These test cases are defined in 34.123-1 clause 8.3.7.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | --> | | ROUTING AREA UPDATE REQUEST | GMM - Update type = 'RA updating'. This is only performed for GPRS Class A mobiles. |
| 2 | <-- | | ROUTING AREA UPDATE ACCEPT | GMM. P-TMSI is included |
| 3 | --> | | ROUTING AREA UPDATE COMPLETE | |
| 4 | | | | The call and the PS session are terminated. SS releases the RR connection. |
| 5 | --> | | ROUTING AREA UPDATE REQUEST | GMM - "update type" = 'combined RA/LA updating' or 'combined RA/LA updating with IMSI attach' |
| 6 | <-- | | ROUTING AREA UPDATE ACCEPT | GMM. P-TMSI is included |
| 7 | --> | | ROUTING AREA UPDATE COMPLETE | |
| 8 | | | | SS releases the RR connection |
| 9 | | | | UE is powered OFF |

## D.2.3 UTRAN to GERAN cell change in PS (in PMM-CONNECTED)

These test cases are defined in 34.123-1 clause 8.3.11.

Expected sequence

| Step | Direction | | Message | Comments |
|---|---|---|---|---|
| | UE | SS | | |
| 1 | --> | | ROUTING AREA UPDATE REQUEST | MM - "update type" = 'combined RA/LA updating' for class A or B mobiles, and 'RA updating' for class C mobiles. Follow-on request is made |
| 2 | <-- | | ROUTING AREA UPDATE ACCEPT | GMM. P-TMSI is included |
| 3 | --> | | ROUTING AREA UPDATE COMPLETE | |
| 4 | | | | UE is powered OFF |

# Annex E (informative): Change history

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-08 | | | | Approval of the specification | | 2.0.0 | 3.0.0 | |
| TP-09 | TP-000135 | 001 | | Idle mode test cases | F | 3.0.0 | 3.1.0 | T1-000165 |
| TP-09 | TP-000135 | 002 | | Section 8, RRC Tests: RLCSize | C | 3.0.0 | 3.1.0 | T1-000169 |
| TP-09 | TP-000135 | 003 | | Section 8, RRC Tests: HFN | C | 3.0.0 | 3.1.0 | T1-000170 |
| TP-09 | TP-000135 | 004 | | Section 8, RRC Tests: RLCParam | C | 3.0.0 | 3.1.0 | T1-000171 |
| TP-09 | TP-000135 | 005 | | Section 8, RRC Tests: RBIdentity | C | 3.0.0 | 3.1.0 | T1-000172 |
| TP-09 | TP-000135 | 006 | | Section 8, RRC Tests: TrCHParam | C | 3.0.0 | 3.1.0 | T1-000173 |
| TP-09 | TP-000135 | 007 | | Section 8, RRC Tests: UECapability | C | 3.0.0 | 3.1.0 | T1-000174 |
| TP-09 | TP-000135 | 008 | | Section 8, RRC Tests: RBMapping | C | 3.0.0 | 3.1.0 | T1-000175 |
| TP-09 | TP-000135 | 009 | | Section 8, RRC Tests: PagingCause | C | 3.0.0 | 3.1.0 | T1-000176 |
| TP-09 | TP-000135 | 010 | | Section 8, RRC Tests: RRCConnRelease-TM | B | 3.0.0 | 3.1.0 | T1-000177 |
| TP-09 | TP-000135 | 011 | | Section 8, RRC Tests: SignallingRelease | B | 3.0.0 | 3.1.0 | T1-000178 |
| TP-09 | TP-000135 | 012 | | Section 8, RRC Tests: CipheringAndIntegrity | C | 3.0.0 | 3.1.0 | T1-000179 |
| TP-09 | TP-000135 | 013 | | Section 8, RRC Tests: Countercheck_rev | B | 3.0.0 | 3.1.0 | T1-000180 |
| TP-09 | TP-000135 | 014 | | Section 8, RRC Tests: RLCInfo | C | 3.0.0 | 3.1.0 | T1-000181 |
| TP-09 | TP-000135 | 015 | | Section 8, RRC Tests: CompressedMode | C | 3.0.0 | 3.1.0 | T1-000182 |
| TP-09 | TP-000135 | 016 | | Section 8, RRC Tests: SIB | F | 3.0.0 | 3.1.0 | T1-000183 |
| TP-09 | TP-000135 | 017 | | Section 8, RRC Tests: PhyCH | D | 3.0.0 | 3.1.0 | T1-000184 |
| TP-09 | TP-000135 | 018 | | Section 8, RRC Tests: Measurement | C | 3.0.0 | 3.1.0 | T1-000185 |
| TP-09 | TP-000135 | 019 | | Section 8, RRC Tests: FailureCases | C | 3.0.0 | 3.1.0 | T1-000186 |
| TP-09 | TP-000135 | 020 | | Section 8, RRC Tests: TFCS | C | 3.0.0 | 3.1.0 | T1-000187 |
| TP-09 | TP-000135 | 021 | | Section 8, RRC Tests: DPCHFrameOffset | C | 3.0.0 | 3.1.0 | T1-000188 |
| TP-09 | TP-000135 | 022 | | Section 8, RRC Tests: ReEstablishmentTimer | C | 3.0.0 | 3.1.0 | T1-000189 |
| TP-09 | TP-000135 | 023 | | Section 8, RRC Tests: InterFrequencyHardHandOver | F | 3.0.0 | 3.1.0 | T1-000206 |
| TP-09 | TP-000135 | 024 | | clause 12.4.1.5 "Routing area updating / abnormal cases / attempt counter check / miscellaneous reject causes" | C | 3.0.0 | 3.1.0 | T1-000211 |
| TP-09 | TP-000135 | 025 | | SM test cases | C | 3.0.0 | 3.1.0 | T1-000208 |
| TP-09 | TP-000135 | 026 | | MM: Authentication | F | 3.0.0 | 3.1.0 | T1-000207 |
| TP-09 | TP-000135 | 027 | | Update of radio bearer test cases (aligned to GSMA ISG version 1.3) | F | 3.0.0 | 3.1.0 | T1-000213 |
| TP-09 | TP-000135 | 028 | | MAC tests | B | 3.0.0 | 3.1.0 | T1-000218 |
| TP-09 | TP-000135 | 029 | | PDCP tests | B | 3.0.0 | 3.1.0 | T1-000166 |
| TP-09 | TP-000135 | 030 | | BMC tests | B | 3.0.0 | 3.1.0 | T1-000167 |
| TP-09 | TP-000135 | 031 | | RRC updates | F | 3.0.0 | 3.1.0 | T1-000168 |
| TP-09 | TP-000135 | 032 | | clause 12.6.1.2 "Authentication rejected" | F | 3.0.0 | 3.1.0 | T1-000210 |
| TP-09 | TP-000135 | 033 | | clause 12.6 "PS authentication and ciphering" | C | 3.0.0 | 3.1.0 | T1-000209 |
| TP-10 | TP-000218 | 034 | | Application of integrity mode protection to signalling message by default | F | 3.1.0 | 3.2.0 | T1-000297 |
| TP-10 | TP-000218 | 035 | | New teset cases for CS intersystem handover | B | 3.1.0 | 3.2.0 | T1-000300 |
| TP-10 | TP-000218 | 036 | | CR to 34.123-1, Annex B, Mapping of test cases to core specification versions | D | 3.1.0 | 3.2.0 | T1-000319 |
| TP-10 | TP-000218 | 037 | | Application of ciphering during conformance testing and changes to integrity mode protection related messages | C | 3.1.0 | 3.2.0 | T1-000286 |
| TP-10 | TP-000218 | 038 | | Idle Mode test cases in chapter 6 | F | 3.1.0 | 3.2.0 | T1-000288 |
| TP-10 | TP-000218 | 039 | | Update to RLC test cases | F | 3.1.0 | 3.2.0 | T1-000301 |
| TP-10 | TP-000218 | 040 | | Technical Corrections to RRC test cases in clause 8 | F | 3.1.0 | 3.2.0 | T1-000292 |
| TP-10 | TP-000218 | 041 | | Updates to clause 8 and Annex A due to RAN2 core specifications modifications | C | 3.1.0 | 3.2.0 | T1-000293 |
| TP-10 | TP-000218 | 042 | | Editorial modification for CC test cases (Clause 10) | D | 3.1.0 | 3.2.0 | T1-000289 |
| TP-10 | TP-000218 | 043 | | Update of radio bearer test cases | F | 3.1.0 | 3.2.0 | T1-000290 |
| TP-10 | TP-000218 | 044 | | Update of Session Management test cases | B | 3.1.0 | 3.2.0 | T1-000298 |
| TP-10 | TP-000218 | 045 | | Modification to the “Authentication rejected by the UE” test case | F | 3.1.0 | 3.2.0 | T1-000308 |
| TP-10 | TP-000218 | 046 | | Update to 16. SMS test specification | F | 3.1.0 | 3.2.0 | T1-000309 |
| TP-10 | TP-000218 | 047 | | Correction to MM tests | D | 3.1.0 | 3.2.0 | T1-000310 |
| TP-11 | TP-010021 | 048 | | Idle mode test cases | F | 3.2.0 | 3.3.0 | T1-010076 |
| TP-11 | TP-010021 | 049 | | Updates to clause 8 of TS 34.123-1 version 3.2.0 | F | 3.2.0 | 3.3.0 | T1-010106 |
| TP-11 | TP-010021 | 050 | | Update to GMM test case. | F | 3.2.0 | 3.3.0 | T1-010086 |
| TP-11 | TP-010021 | 051 | | Update to 16. SMS test specification | D | 3.2.0 | 3.3.0 | T1-010090 |
| TP-11 | TP-010021 | 052 | | Annex B: Update of versions of core specifications | F | 3.2.0 | 3.3.0 | T1-010091 |
| TP-12 | TP-010121 | 053 | | Idle mode tests | F | 3.3.0 | 3.4.0 | T1-010167 |
| TP-12 | TP-010121 | 054 | | Clause 7.2: Update of RLC tests to 25.322 v3.5.0 | F | 3.3.0 | 3.4.0 | T1-010170 |

| Meeting -1st- Level | Doc-1st- Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd- Level |
|---|---|---|---|---|---|---|---|---|
| TP-12 | TP-010121 | 055 | | Corrections to Clause 7.2: RLC test case updates | F | 3.3.0 | 3.4.0 | T1-010171 |
| TP-12 | TP-010121 | 056 | | Corrections to clause 7.3 PDCP | F | 3.3.0 | 3.4.0 | T1-010173 |
| TP-12 | TP-010121 | 057 | | Corrections to clause 7.4 BMC | F | 3.3.0 | 3.4.0 | T1-010174 |
| TP-12 | TP-010121 | 058 | | 7.1 Update to MAC test cases | F | 3.3.0 | 3.4.0 | T1-010175 |
| TP-12 | TP-010121 | 059 | | Modifications to the functional testing of CPCH related UE test cases | C | 3.3.0 | 3.4.0 | T1-010176 |
| TP-12 | TP-010121 | 060 | | Transmission RLC discard | F | 3.3.0 | 3.4.0 | T1-010178 |
| TP-12 | TP-010121 | 061 | | Updates to RRC test case | F | 3.3.0 | 3.4.0 | T1-010179 |
| TP-12 | TP-010121 | 062 | | Deletion of intersystem handover tests GERAN to UTRAN | F | 3.3.0 | 3.4.0 | T1-010181 |
| TP-12 | TP-010121 | 063 | | Corrections to CC test cases | F | 3.3.0 | 3.4.0 | T1-010183 |
| TP-12 | TP-010121 | 064 | | Corrections to Emergency call test cases | F | 3.3.0 | 3.4.0 | T1-010184 |
| TP-12 | TP-010121 | 065 | | Corrections to test of autocalling restrictions | F | 3.3.0 | 3.4.0 | T1-010185 |
| TP-12 | TP-010121 | 066 | | Corrections to call re-establishment tests in CC | F | 3.3.0 | 3.4.0 | T1-010187 |
| TP-12 | TP-010121 | 067 | | MM test case update | F | 3.3.0 | 3.4.0 | T1-010189 |
| TP-12 | TP-010121 | 068 | | CR to 34.123-1 | F | 3.3.0 | 3.4.0 | T1-010193 |
| TP-12 | TP-010121 | 069 | | SMS Update | F | 3.3.0 | 3.4.0 | T1-010194 |
| TP-12 | TP-010121 | 070 | | SMS test specification | F | 3.3.0 | 3.4.0 | T1-010196 |
| TP-12 | TP-010121 | 071 | | Update to GMM test cases | F | 3.3.0 | 3.4.0 | T1-010235 |
| TP-12 | TP-010121 | 072 | | GMM service request test cases | F | 3.3.0 | 3.4.0 | T1-010236 |
| TP-12 | TP-010121 | 073 | | GMM authentication reject test cases | F | 3.3.0 | 3.4.0 | T1-010237 |
| TP-12 | TP-010121 | 074 | | Modifications to Clause 12 (GMM) | F | 3.3.0 | 3.4.0 | T1-010202 |
| TP-12 | TP-010121 | 075 | | Correction in test case 11.1, because of problems in core-specs | F | 3.3.0 | 3.4.0 | T1-010203 |
| TP-12 | TP-010121 | 076 | | Procedure and Expected Sequence Corrections to 11.1.2. | F | 3.3.0 | 3.4.0 | T1-010204 |
| TP-12 | TP-010121 | 077 | | Adding section for multi-layer functional testing | D | 3.3.0 | 3.4.0 | T1-010207 |
| TP-12 | TP-010121 | 078 | | Update of interoperability radio bearer test cases | F | 3.3.0 | 3.4.0 | T1-010208 |
| TP-12 | TP-010121 | 079 | | CR to TS 34.123-1 Update of Table B/1 | D | 3.3.0 | 3.4.0 | T1-010217 |
| TP-13 | TP-010186 | 080 | | Parameters update and Editorial corrections in clauses 7.2.3.1, 7.2.3.2.1, 7.2.3.23, 7.2.3.24 | F | 3.4.0 | 3.5.0 | T1-010292 |
| TP-13 | TP-010186 | 081 | | Corrections to Clause 13 General Tests | F | 3.4.0 | 3.5.0 | T1-010293 |
| TP-13 | TP-010186 | 082 | | Modification in "Method of Test" for RBS test cases in Clause 14 | F | 3.4.0 | 3.5.0 | T1-010294 |
| TP-13 | TP-010186 | 083 | | Editorial modification for References | F | 3.4.0 | 3.5.0 | T1-010295 |
| TP-13 | TP-010186 | 084 | | Clause 7.3, PDCP tests | F | 3.4.0 | 3.5.0 | T1-010378 |
| TP-13 | TP-010186 | 085 | | Idle mode: Merge of T1S-010180 and 188 | F | 3.4.0 | 3.5.0 | T1-010297 |
| TP-13 | TP-010186 | 086 | | clause 7.4 BMC: editorial correction | F | 3.4.0 | 3.5.0 | T1-010379 |
| TP-13 | TP-010186 | 087 | | Clause 7.1, MAC test cases | F | 3.4.0 | 3.5.0 | T1-010299 |
| TP-13 | TP-010186 | 088 | | Corrections to RLC test case 7.2.2.2 | F | 3.4.0 | 3.5.0 | T1-010300 |
| TP-13 | TP-010186 | 089 | | Corrections to RLC test case 7.2.2.3 | F | 3.4.0 | 3.5.0 | T1-010301 |
| TP-13 | TP-010186 | 090 | | Corrections to RLC test case 7.2.2.8 | F | 3.4.0 | 3.5.0 | T1-010302 |
| TP-13 | TP-010186 | 091 | | Corrections to RLC test case 7.2.2.10 | F | 3.4.0 | 3.5.0 | T1-010303 |
| TP-13 | TP-010186 | 092 | | Corrections to RLC test case 7.2.2.9 | F | 3.4.0 | 3.5.0 | T1-010304 |
| TP-13 | TP-010186 | 093 | | Corrections to RLC test case 7.2.2.12 | F | 3.4.0 | 3.5.0 | T1-010305 |
| TP-13 | TP-010186 | 094 | | Corrections to RLC test case 7.2.2.29 | F | 3.4.0 | 3.5.0 | T1-010306 |
| TP-13 | TP-010186 | 095 | | Corrections to RLC test case 7.2.2.30 | F | 3.4.0 | 3.5.0 | T1-010307 |
| TP-13 | TP-010186 | 096 | | Corrections to RLC test case 7.2.2.33 | F | 3.4.0 | 3.5.0 | T1-010308 |
| TP-13 | TP-010186 | 097 | | Corrections to RLC test case 7.2.2.34 | F | 3.4.0 | 3.5.0 | T1-010309 |
| TP-13 | TP-010186 | 098 | | Updates to clause 8 and Annex A | F | 3.4.0 | 3.5.0 | T1-010310 |
| TP-13 | TP-010186 | 099 | | RRC tests (section 8) | F | 3.4.0 | 3.5.0 | T1-010311 |
| TP-13 | TP-010186 | 100 | | InterSystemHandover tests (section 8.3.7) | F | 3.4.0 | 3.5.0 | T1-010312 |
| TP-13 | TP-010186 | 101 | | Update on Mobility Management | F | 3.4.0 | 3.5.0 | T1-010313 |
| TP-13 | TP-010186 | 102 | | Addition of a SM test case for UE in GSM | F | 3.4.0 | 3.5.0 | T1-010314 |
| TP-13 | TP-010186 | 103 | | Clause 12 "Elementary procedure for Packet Switched Mobility Management"(GMM) | F | 3.4.0 | 3.5.0 | T1-010315 |
| TP-13 | TP-010186 | 104 | | Update of radio bearer test cases | F | 3.4.0 | 3.5.0 | T1-010316 |
| TP-13 | TP-010186 | 105 | | SMS test specification | F | 3.4.0 | 3.5.0 | T1-010317 |
| TP-13 | TP-010186 | 106 | | RACH Test Procedures for 1.28 Mcps TDD (Rel-4) | F | 3.4.0 | 4.0.0 | T1-010318 |
| TP-13 | TP-010186 | 107 | | Corrections to RLC test case 7.2.2.14 | F | 3.4.0 | 3.5.0 | T1-010319 |
| TP-13 | TP-010186 | 108 | | Corrections to RLC test case 7.2.2.7 and 7.2.2.13 | F | 3.4.0 | 3.5.0 | T1-010320 |
| TP-13 | TP-010186 | 109 | | RLC acknowledge mode test cases 7.2.3.14 and 7.2.3.34 | F | 3.4.0 | 3.5.0 | T1-010321 |
| TP-13 | TP-010186 | 110 | | Merging of Rel4 and R99 protocol test specifications | F | 3.4.0 | 4.0.0 | T1-010272 |
| TP-13 | TP-010189 | 112 | | Update of Annex B | F | 3.4.0 | 3.5.0 | ---- |
| TP-14 | TP-010261 | 113 | | Clause 7.3: PDCP testing: additional configuration information | F | 4.0.0 | 4.1.0 | T1-010406 |
| TP-14 | TP-010261 | 114 | | Clause 7.4: BMC testing: update for BMC testing | F | 4.0.0 | 4.1.0 | T1-010407 |
| TP-14 | TP-010261 | 115 | | Clause 7.2: Update of UM and AM RLC test cases | F | 4.0.0 | 4.1.0 | T1-010408 |
| TP-14 | TP-010261 | 116 | | Idle mode tests (34.123-1) | F | 4.0.0 | 4.1.0 | T1-010409 |
| TP-14 | TP-010261 | 117 | | Removal of TBD Power Levels in section 6 | F | 4.0.0 | 4.1.0 | T1-010410 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-14 | TP-010261 | 118 | | Idle Mode Test Parameters for Multi-mode environment (2G/3G) TDD | F | 4.0.0 | 4.1.0 | T1-010411 |
| TP-14 | TP-010261 | 119 | | Traffic Volume Measurement test cases (34.123-1 section 8.4) | F | 4.0.0 | 4.1.0 | T1-010412 |
| TP-14 | TP-010261 | 120 | | New interRAT test cases | F | 4.0.0 | 4.1.0 | T1-010413 |
| TP-14 | TP-010261 | 121 | | Corrections to Annex A | F | 4.0.0 | 4.1.0 | T1-010414 |
| TP-14 | TP-010261 | 122 | | Clause 12 Packet Switched Mobility Management | F | 4.0.0 | 4.1.0 | T1-010415 |
| TP-14 | TP-010261 | 123 | | Update to GMM test cases | F | 4.0.0 | 4.1.0 | T1-010416 |
| TP-14 | TP-010261 | 124 | | Update of interoperbility radio bearer test cases for FDD. | F | 4.0.0 | 4.1.0 | T1-010417 |
| TP-14 | TP-010261 | 125 | | Update to SMS test specification | F | 4.0.0 | 4.1.0 | T1-010418 |
| TP-14 | TP-010261 | 126 | | Corrections to RRC test cases | F | 4.0.0 | 4.1.0 | T1-010419 |
| TP-14 | TP-010261 | 127 | | RRC Connection Management Procedure Tests for the TDD options | F | 4.0.0 | 4.1.0 | T1-010420 |
| TP-14 | TP-010261 | 128 | | Annex A Default RRC Message Contents for 1.28Mcps TDD Mode | F | 4.0.0 | 4.1.0 | T1-010421 |
| TP-14 | TP-010261 | 129 | | Radio Bearer Tests for 1.28 Mcps TDD Mode | F | 4.0.0 | 4.1.0 | T1-010422 |
| TP-15 | TP-020041 | 130 | | Correction to Annex A | F | 4.1.0 | 4.2.0 | T1-020037 |
| TP-15 | TP-020041 | 131 | | Update of Idle mode tests | F | 4.1.0 | 4.2.0 | T1-020038 |
| TP-15 | TP-020041 | 132 | | Update to GMM test cases | F | 4.1.0 | 4.2.0 | T1-020039 |
| TP-15 | TP-020041 | 133 | | Corrections to RRC test cases, 8.2.2 onwards | F | 4.1.0 | 4.2.0 | T1-020040 |
| TP-15 | TP-020041 | 134 | | Corrections to Annex A | F | 4.1.0 | 4.2.0 | T1-020041 |
| TP-15 | TP-020041 | 135 | | Clause 7.3, PDCP testing: Update | F | 4.1.0 | 4.2.0 | T1-020042 |
| TP-15 | TP-020041 | 136 | | Corrections to clause 8.1 | F | 4.1.0 | 4.2.0 | T1-020043 |
| TP-15 | TP-020041 | 137 | | Correction to RRC test cases | F | 4.1.0 | 4.2.0 | T1-020044 |
| TP-15 | TP-020041 | 138 | | Corrections to Measurement test cases | F | 4.1.0 | 4.2.0 | T1-020045 |
| TP-15 | TP-020042 | 139 | | Additional test case for packet | F | 4.1.0 | 4.2.0 | T1-020046 |
| TP-15 | TP-020041 | 140 | | Changes to MAC conformance test 7.1.1.1 | F | 4.1.0 | 4.2.0 | T1-020047 |
| TP-15 | TP-020041 | 141 | | Changes to MAC conformance test 7.1.1.2 | F | 4.1.0 | 4.2.0 | T1-020048 |
| TP-15 | TP-020041 | 142 | | Changes to MAC conformance test 7.1.1.3 | F | 4.1.0 | 4.2.0 | T1-020049 |
| TP-15 | TP-020041 | 143 | | Changes to MAC conformance test 7.1.1.4 | F | 4.1.0 | 4.2.0 | T1-020050 |
| TP-15 | TP-020041 | 144 | | Changes to MAC conformance test 7.1.1.5 | F | 4.1.0 | 4.2.0 | T1-020051 |
| TP-15 | TP-020041 | 145 | | Changes to MAC conformance test 7.1.1.8 | F | 4.1.0 | 4.2.0 | T1-020052 |
| TP-15 | TP-020041 | 146 | | Changes to MAC conformance test 7.1.2.2.1 | F | 4.1.0 | 4.2.0 | T1-020053 |
| TP-15 | TP-020041 | 147 | | Changes to MAC conformance test 7.1.2.4 | F | 4.1.0 | 4.2.0 | T1-020054 |
| TP-15 | TP-020041 | 148 | | Changes to MAC conformance test 7.1.2.5 | F | 4.1.0 | 4.2.0 | T1-020055 |
| TP-15 | TP-020041 | 149 | | Changes to MAC conformance test 7.1.3.1 | F | 4.1.0 | 4.2.0 | T1-020056 |
| TP-15 | TP-020041 | 150 | | Changes to RLC conformance test 7.2.3.20 | F | 4.1.0 | 4.2.0 | T1-020057 |
| TP-15 | TP-020041 | 151 | | Changes to RLC conformance test 7.2.3.25 | F | 4.1.0 | 4.2.0 | T1-020058 |
| TP-15 | TP-020041 | 152 | | Modifications on Session Management test case 11.1.1.1 | F | 4.1.0 | 4.2.0 | T1-020059 |
| TP-15 | TP-020041 | 153 | | Modifications on Session Management test case 11.1.2 | F | 4.1.0 | 4.2.0 | T1-020060 |
| TP-15 | TP-020041 | 154 | | Section 8.1 Connection Management Procedure (TDD both modes) | F | 4.1.0 | 4.2.0 | T1-020061 |
| TP-15 | TP-020041 | 155 | | Modification on Session Management test case 11.1.3.2 | F | 4.1.0 | 4.2.0 | T1-020062 |
| TP-15 | TP-020041 | 156 | | Modifications of MM test cases | F | 4.1.0 | 4.2.0 | T1-020063 |
| TP-15 | TP-020042 | 157 | | Update of RB test cases | F | 4.1.0 | 4.2.0 | T1-020064 |
| TP-15 | TP-020041 | 158 | | Section 8.2 Radio Bearer Control Procedure (TDD both modes) | F | 4.1.0 | 4.2.0 | T1-020065 |
| TP-15 | TP-020041 | 159 | | Correction of MAC conformance test 7.1.2.1.1 | F | 4.1.0 | 4.2.0 | T1-020089 |
| TP-15 | TP-020041 | 160 | | Correction of MAC conformance test 7.1.2.3.1 | F | 4.1.0 | 4.2.0 | T1-020090 |
| TP-15 | TP-020042 | 161 | | Additional Measurement Control and Report test cases | F | 4.1.0 | 4.2.0 | T1-020111 |
| TP-15 | TP-020042 | 162 | | Clause 8.4.1 Measurement Control and Report | F | 4.1.0 | 4.2.0 | T1-020112 |
| TP-15 | TP-020042 | 163 | | Additional test cases for inter-RAT measurements and UE internal measurements | F | 4.1.0 | 4.2.0 | T1-020113 |
| TP-15 | TP-020042 | 164 | | Addition of test case for Inter-RAT measurement, event 3C, in CELL_DCH state using sparse compressed mode pattern | F | 4.1.0 | 4.2.0 | T1-020114 |
| TP-15 | TP-020042 | 165 | | Clause 6.1.2.8 Cell reselection : Equivalent PLMN | F | 4.1.0 | 4.2.0 | T1-020115 |
| TP-15 | TP-020042 | 166 | | Additional test cases for shared networks | F | 4.1.0 | 4.2.0 | T1-020116 |
| TP-15 | TP-020042 | 167 | | Deletion of Equivalent PLMN list in UE | F | 4.1.0 | 4.2.0 | T1-020117 |
| TP-15 | TP-020042 | 168 | | ePLMN list storage at power off | F | 4.1.0 | 4.2.0 | T1-020118 |
| TP-15 | TP-020042 | 169 | | Interaction of ePLMNs and forbidden PLMNs | F | 4.1.0 | 4.2.0 | T1-020119 |
| TP-15 | TP-020042 | 170 | | PLMN interaction with Manual Mode | F | 4.1.0 | 4.2.0 | T1-020120 |
| TP-15 | TP-020042 | 171 | | Clause 8.3 HCS cell reselection | F | 4.1.0 | 4.2.0 | T1-020121 |
| TP-15 | TP-020042 | 172 | | Clause 8.3.7.13 Inter system handover from UTRAN/To GSM/ success / call under establishment | F | 4.1.0 | 4.2.0 | T1-020122 |
| TP-15 | TP-020042 | 173 | | Additional test cases for Physical Channel | F | 4.1.0 | 4.2.0 | T1-020123 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | Reconfiguration from CELL_FACH to CELL_PCH or URA_PCH | | | | |
| TP-15 | TP-020042 | 174 | | Additional test cases for Transport channel Reconfiguration from CELL_FACH to CELL_PCH or URA_PCH | F | 4.1.0 | 4.2.0 | T1-020124 |
| TP-15 | TP-020042 | 175 | | Additional test case for RRC connection establishment on another frequency | F | 4.1.0 | 4.2.0 | T1-020125 |
| TP-15 | TP-020042 | 176 | | Additional test case for UE response to changes of System Information data and structure | F | 4.1.0 | 4.2.0 | T1-020126 |
| TP-16 | TP-020143 | 177 | | Modifications of MM test cases | F | 4.2.0 | 4.3.0 | T1-020302 |
| TP-16 | TP-020143 | 178 | | Update to GMM test cases | F | 4.2.0 | 4.3.0 | T1-020303 |
| TP-16 | TP-020143 | 179 | | Correction to clause 8.3 except for Package 1 of TS34.123-1 | F | 4.2.0 | 4.3.0 | T1-020304 |
| TP-16 | TP-020143 | 180 | | Update of L2/PDCP testing in alignment to March version 2002 | F | 4.2.0 | 4.3.0 | T1-020305 |
| TP-16 | TP-020142 | 181 | | Correction to MAC conformance test 7.1.2.4a | F | 4.2.0 | 4.3.0 | T1-020306 |
| TP-16 | TP-020142 | 182 | | Correction to MAC conformance test 7.1.2.5 | F | 4.2.0 | 4.3.0 | T1-020307 |
| TP-16 | TP-020142 | 183 | | Correction to MAC conformance test 7.1.2.1.1 | F | 4.2.0 | 4.3.0 | T1-020308 |
| TP-16 | TP-020142 | 184 | | Correction to MAC conformance test 7.1.1.1 | F | 4.2.0 | 4.3.0 | T1-020309 |
| TP-16 | TP-020142 | 185 | | General clarification of MAC testing conditions | F | 4.2.0 | 4.3.0 | T1-020310 |
| TP-16 | TP-020142 | 186 | | Correction to MAC conformance test 7.1.1.8 | F | 4.2.0 | 4.3.0 | T1-020311 |
| TP-16 | TP-020142 | 187 | | Correction to MAC conformance test 7.1.1.5 | F | 4.2.0 | 4.3.0 | T1-020312 |
| TP-16 | TP-020142 | 188 | | Correction to MAC conformance test 7.1.1.4 | F | 4.2.0 | 4.3.0 | T1-020313 |
| TP-16 | TP-020142 | 189 | | Correction to MAC conformance test 7.1.1.3 | F | 4.2.0 | 4.3.0 | T1-020314 |
| TP-16 | TP-020142 | 190 | | Correction to MAC conformance test 7.1.1.2 | F | 4.2.0 | 4.3.0 | T1-020315 |
| TP-16 | TP-020142 | 191 | | Correction to test 7.2.3.12 | F | 4.2.0 | 4.3.0 | T1-020316 |
| TP-16 | TP-020142 | 192 | | Correction to test 7.2.3.18 | F | 4.2.0 | 4.3.0 | T1-020317 |
| TP-16 | TP-020142 | 193 | | Correction to test 7.2.3.4 | D | 4.2.0 | 4.3.0 | T1-020318 |
| TP-16 | TP-020143 | 194 | | Correction to RLC test case 7.2.3.28 | F | 4.2.0 | 4.3.0 | T1-020319 |
| TP-16 | TP-020142 | 195 | | Clause 6; Updates to test cases for idle mode operations | F | 4.2.0 | 4.3.0 | T1-020320 |
| TP-16 | TP-020142 | 196 | | Correction to clause 8.2 for Package 1 of TS34.123-1 | F | 4.2.0 | 4.3.0 | T1-020321 |
| TP-16 | TP-020143 | 197 | | Clarification of messages sequences in MM test case 9.4.1. | F | 4.2.0 | 4.3.0 | T1-020322 |
| TP-16 | TP-020142 | 198 | | Correction to test cases 9.2.3 and 9.2.4 | F | 4.2.0 | 4.3.0 | T1-020323 |
| TP-16 | TP-020143 | 199 | | Update to CC test cases | F | 4.2.0 | 4.3.0 | T1-020324 |
| TP-16 | TP-020143 | 200 | | Removal of TC9.5.3 MM connection / establishment in non-security mode | F | 4.2.0 | 4.3.0 | T1-020325 |
| TP-16 | TP-020142 | 201 | | Correction of layer 2 setting for TM RBs , segmentation indication | F | 4.2.0 | 4.3.0 | T1-020326 |
| TP-16 | TP-020142 | 202 | | Clause 14: Update of radio bearer test cases 14.2.39.x and 14.2.40 (introducing new RB test method) | F | 4.2.0 | 4.3.0 | T1-020327 |
| TP-16 | TP-020142 | 203 | | Clause 14; Update of stand-alone signalling radio bearer test cases | F | 4.2.0 | 4.3.0 | T1-020328 |
| TP-16 | TP-020143 | 204 | | Correction of abbreviations reference | F | 4.2.0 | 4.3.0 | T1-020329 |
| TP-16 | TP-020143 | 205 | | Correction to clause 8.2 except for Package 1 of TS34.123-1 | F | 4.2.0 | 4.3.0 | T1-020330 |
| TP-16 | TP-020143 | 206 | | Correction to clause 8.4 except for Package 1 of TS34.123-1 | F | 4.2.0 | 4.3.0 | T1-020331 |
| TP-16 | TP-020143 | 207 | | Correction to Annex.A of TS34.123-1 | F | 4.2.0 | 4.3.0 | T1-020332 |
| TP-16 | TP-020143 | 208 | | Addition of generic test procedure to Annex C of TS 34.123-1 | F | 4.2.0 | 4.3.0 | T1-020333 |
| TP-16 | TP-020143 | 209 | | Additional test cases according to T1S-020098 Hard Handover | F | 4.2.0 | 4.3.0 | T1-020334 |
| TP-16 | TP-020143 | 210 | | Additional test cases according to T1S-020099 State Transition | F | 4.2.0 | 4.3.0 | T1-020335 |
| TP-16 | TP-020143 | 211 | | New test case for Incompatible Simultaneous Security Reconfiguration | F | 4.2.0 | 4.3.0 | T1-020336 |
| TP-16 | TP-020143 | 212 | | New test case for Signalling Connection Release test case | F | 4.2.0 | 4.3.0 | T1-020337 |
| TP-16 | TP-020143 | 213 | | Interfrequency Measurement for Events 2B and 2E – Correction to 8.4.1.25 | F | 4.2.0 | 4.3.0 | T1-020338 |
| TP-16 | TP-020143 | 214 | | Correction to HCS Cell Reseletion tests | F | 4.2.0 | 4.3.0 | T1-020339 |
| TP-16 | TP-020143 | 215 | | Changes to radio bearer tests in clause 14.4 Combinations on SCCPCH | F | 4.2.0 | 4.3.0 | T1-020340 |
| TP-16 | TP-020142 | 216 | | Section 8.3.1 Connection Mobility Procedure TDD | F | 4.2.0 | 4.3.0 | T1-020341 |
| TP-16 | TP-020143 | 217 | | Test case for approved new bearers | F | 4.2.0 | 4.3.0 | T1-020342 |
| TP-16 | TP-020142 | 218 | | Correction to clause 8.4 for Package 1 of TS34.123-1 | F | 4.2.0 | 4.3.0 | T1-020343 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-16 | TP-020142 | 219 | | Correction to clause 8.3 for Package 1 of TS34.123-1 | F | 4.2.0 | 4.3.0 | T1-020344 |
| TP-16 | TP-020142 | 220 | | Correction to clause 8.1 for package 1 of TS34.123-1 | F | 4.2.0 | 4.3.0 | T1-020345 |
| TP-16 | TP-020142 | 221 | | Corrections to GMM test cases | F | 4.2.0 | 4.3.0 | T1-020346 |
| TP-16 | TP-020142 | 222 | | Corrections to SM test cases | F | 4.2.0 | 4.3.0 | T1-020347 |
| TP-16 | TP-020143 | 223 | | CR to clause 3.1 | F | 4.2.0 | 4.3.0 | T1-020348 |
| TP-16 | TP-020143 | 224 | | Correction to RLC conformance test 7.2.2.1 | F | 4.2.0 | 4.3.0 | T1-020349 |
| TP-16 | TP-020142 | 225 | | Correction to RLC conformance test 7.2.2.3 | F | 4.2.0 | 4.3.0 | T1-020350 |
| TP-16 | TP-020142 | 226 | | Correction to RLC conformance test 7.2.2.6 | F | 4.2.0 | 4.3.0 | T1-020351 |
| TP-16 | TP-020142 | 227 | | Correction to RLC conformance test 7.2.2.7 | F | 4.2.0 | 4.3.0 | T1-020352 |
| TP-16 | TP-020142 | 228 | | Correction to RLC conformance test 7.2.3.5 | F | 4.2.0 | 4.3.0 | T1-020353 |
| TP-16 | TP-020142 | 229 | | Correction to RLC conformance test 7.2.3.13 | F | 4.2.0 | 4.3.0 | T1-020354 |
| TP-16 | TP-020142 | 230 | | Correction to RLC conformance test 7.2.3.6 | F | 4.2.0 | 4.3.0 | T1-020355 |
| TP-16 | TP-020142 | 231 | | Correction to RLC conformance test 7.2.3.12 | F | 4.2.0 | 4.3.0 | T1-020356 |
| TP-16 | TP-020142 | 232 | | Correction to RLC conformance test 7.2.3.14 | F | 4.2.0 | 4.3.0 | T1-020357 |
| TP-16 | TP-020142 | 233 | | Correction to RLC conformance test 7.2.3.16 | F | 4.2.0 | 4.3.0 | T1-020358 |
| TP-16 | TP-020142 | 234 | | Correction to RLC conformance test 7.2.3.17 | F | 4.2.0 | 4.3.0 | T1-020359 |
| TP-16 | TP-020142 | 235 | | Correction to RLC conformance test 7.2.3.19 | F | 4.2.0 | 4.3.0 | T1-020360 |
| TP-16 | TP-020142 | 236 | | Correction to RLC conformance test 7.2.3.20 | F | 4.2.0 | 4.3.0 | T1-020361 |
| TP-16 | TP-020142 | 237 | | Correction to RLC conformance test 7.2.3.23 | F | 4.2.0 | 4.3.0 | T1-020362 |
| TP-16 | TP-020142 | 238 | | Correction to RLC conformance test 7.2.3.24 | F | 4.2.0 | 4.3.0 | T1-020363 |
| TP-16 | TP-020142 | 239 | | Conformance test 7.2.3.15 | F | 4.2.0 | 4.3.0 | T1-020364 |
| TP-16 | TP-020142 | 240 | | Clause 7.2.3.18 RLC test case | F | 4.2.0 | 4.3.0 | T1-020365 |
| TP-16 | TP-020143 | 241 | | Clause 7.2.3.29 RLC test case | F | 4.2.0 | 4.3.0 | T1-020366 |
| TP-16 | TP-020143 | 242 | | Clause 7.2.3.30 RLC test case | F | 4.2.0 | 4.3.0 | T1-020367 |
| TP-16 | TP-020143 | 243 | | Clause 7.2.3.31 RLC test case | F | 4.2.0 | 4.3.0 | T1-020368 |
| TP-16 | TP-020142 | 244 | | Correction to RLC conformance test 7.2.3.33 | F | 4.2.0 | 4.3.0 | T1-020369 |
| TP-16 | TP-020143 | 245 | | Update of package 2: RB test cases according to new ref RB test method | F | 4.2.0 | 4.3.0 | T1-020414 |
| TP-16 | TP-020143 | 247 | | Update of clause 8.3.2 URA Update to be applicable to 3.84 Mcps TDD and 1.28 Mcps TDD | F | 4.2.0 | 4.3.0 | T1-020416 |
| TP-16 | TP-020143 | 248 | | New test for radio bearer | F | 4.2.0 | 4.3.0 | T1-020417 |
| TP-16 | TP-020143 | 249 | | Correction of conformance requirement in test case 11.1.4.3(34.123-1) | F | 4.2.0 | 4.3.0 | T1-020418 |
| TP-16 | TP-020143 | 250 | | Correction in test case 11.4.1 Error cases(34.123-1) | F | 4.2.0 | 4.3.0 | T1-020419 |
| TP-16 | TP-020142 | 251 | | Correction to MAC conformance test 7.1.1.2 | F | 4.2.0 | 4.3.0 | T1-020410 |
| TP-16 | TP-020142 | 252 | | Correction to MAC conformance test 7.1.1.8 | F | 4.2.0 | 4.3.0 | T1-020411 |
| TP-16 | TP-020142 | 253 | | Correction to RLC conformance test 7.2.3.34 | F | 4.2.0 | 4.3.0 | T1-020412 |
| TP-16 | TP-020142 | 254 | | Correction to MAC conformance test 7.1.2.3.1 | F | 4.2.0 | 4.3.0 | T1-020413 |
| TP-16 | TP-020164 | 255 | 1 | Section 16.1.6 & 16.2.6: Addition of test of short message type 0 (CS/PS) Rel5 | F | 4.2.0 | 5.0.0 | - |
| TP-16 | TP-020145 | 256 | | Creation of 34.123-1 REL-5 | F | 4.2.0 | 5.0.0 | T1-020404 |
| | | | | Correction of wrong heading in the specification | D | 5.0.0 | 5.0.1 | |
| TP-17 | TP-020193 | 258 | - | Corrections to Inter-frequency measurement test cases (8.4.1.24, 8.4.1.25, 8.4.1.26) | F | 5.0.1 | 5.1.0 | T1-020510 |
| TP-17 | TP-020193 | 259 | - | Change to test case 8.4.1.31 | F | 5.0.1 | 5.1.0 | T1-020511 |
| TP-17 | TP-020187 | 260 | - | Corrections to clause 6.1.1.4 for Package 1 (Idle Mode) | F | 5.0.1 | 5.1.0 | T1-020512 |
| TP-17 | TP-020193 | 261 | - | Corrections to clause 6.1.1.5 for Package 3 (Idle Mode) | F | 5.0.1 | 5.1.0 | T1-020513 |
| TP-17 | TP-020193 | 262 | - | Corrections to clause 6.1.1.1 and 6.1.1.2 (Idle Mode) | F | 5.0.1 | 5.1.0 | T1-020514 |
| TP-17 | TP-020187 | 263 | - | Addition of ITU Band 3 reference test frequencies to Table 6.3 | F | 5.0.1 | 5.1.0 | T1-020515 |
| TP-17 | TP-020193 | 264 | - | Correction to MAC clause 7.1.2.1 | F | 5.0.1 | 5.1.0 | T1-020516 |
| TP-17 | TP-020187 | 265 | - | Correction to MAC test cases 7.1.1.2 and 7.1.1.8 | F | 5.0.1 | 5.1.0 | T1-020517 |
| TP-17 | TP-020187 | 266 | - | Corrections to clause 7.2 for Package 1 test cases (RLC) | F | 5.0.1 | 5.1.0 | T1-020518 |
| TP-17 | TP-020187 | 267 | - | Corrections to package1 test cases in clause 8.1 as T1S-020352rev1 | F | 5.0.1 | 5.1.0 | T1-020519 |
| TP-17 | TP-020187 | 268 | - | CR to package1 clause 8.2 of TS34.123-1 | F | 5.0.1 | 5.1.0 | T1-020520 |
| TP-17 | TP-020187 | 269 | - | Corrections to package 1 TCs in clause 8.4 of TS 34.123-1 as T1S-020355rev1 | F | 5.0.1 | 5.1.0 | T1-020521 |
| TP-17 | TP-020187 | 270 | - | Corrections to Clause 8.1.10 for Package 2 (System Information) | F | 5.0.1 | 5.1.0 | T1-020522 |
| TP-17 | TP-020187 | 271 | - | Corrections to clause 8.3.7.1- 8.3.7.4 for Package 2 test cases (Inter System HO) | F | 5.0.1 | 5.1.0 | T1-020523 |
| TP-17 | TP-020193 | 272 | - | Corrections to non-package1&2 clause 8.1 | F | 5.0.1 | 5.1.0 | T1-020524 |
| TP-17 | TP-020193 | 273 | - | CR to non-package1&2 clause 8.2 of TS34.123-1 (merging T1S-020469 and TC 8.2.6.21 and 8.2.6.22 of T1S-020407) | F | 5.0.1 | 5.1.0 | T1-020525 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-17 | TP-020187 | 274 | - | Corrections to clause 6 for Package 2 (Idle Mode) | F | 5.0.1 | 5.1.0 | T1-020528 |
| TP-17 | TP-020187 | 275 | - | Correction of package 2 test case in clause 8.3.1.4, SS cell update waiting timer | F | 5.0.1 | 5.1.0 | T1-020531 |
| TP-17 | TP-020187 | 276 | - | Corrections to package1 test cases in clause 8.3 | F | 5.0.1 | 5.1.0 | T1-020532 |
| TP-17 | TP-020187 | 277 | - | CR to package2 clause 8.2 of TS34.123-1 | F | 5.0.1 | 5.1.0 | T1-020533 |
| TP-17 | TP-020193 | 278 | - | Corrections to non-package 1&2 TCs in clause 8.3 of TS 34.123-1 | F | 5.0.1 | 5.1.0 | T1-020534 |
| TP-17 | TP-020193 | 279 | - | Corrections to non-package 1&2 TCs in clause 8.4 of TS 34.123-1 (merging T1S-020458 and T1S-020363) | F | 5.0.1 | 5.1.0 | T1-020535 |
| TP-17 | TP-020193 | 280 | - | Additional test case for timing re-initialised inter-frequency handover | F | 5.0.1 | 5.1.0 | T1-020536 |
| TP-17 | TP-020193 | 281 | - | Corrections to reference compressed mode pattern | F | 5.0.1 | 5.1.0 | T1-020537 |
| TP-17 | TP-020193 | 282 | - | Introduction of test cases for additional reference configuration on S-CCPCH and PRACH | F | 5.0.1 | 5.1.0 | T1-020542 |
| TP-17 | TP-020193 | 283 | - | Removal of test cases for unidirectional streaming CS RABs above 64 kbps | F | 5.0.1 | 5.1.0 | T1-020543 |
| TP-17 | TP-020187 | 284 | - | Clarification of package 1 and 2 RB test cases. | F | 5.0.1 | 5.1.0 | T1-020545 |
| TP-17 | TP-020187 | 285 | - | Details of radio bearer tests in clause “14.4 Combinations on SCCPCH” and “14.5 Combinations on PRACH” | F | 5.0.1 | 5.1.0 | T1-020546 |
| TP-17 | TP-020193 | 286 | - | Corrections to package 3 RB test cases 14.2.43.1, 14.2.49.1 and 14.2.51.1. | F | 5.0.1 | 5.1.0 | T1-020547 |
| TP-17 | TP-020193 | 287 | - | Addition of details for package 3 RB test cases | F | 5.0.1 | 5.1.0 | T1-020548 |
| TP-17 | TP-020193 | 288 | - | Corrections to package 3 RB test cases 14.2.5a and 14.2.7a. | F | 5.0.1 | 5.1.0 | T1-020549 |
| TP-17 | TP-020193 | 289 | - | Update of radio bearer test cases as per new RB test method | F | 5.0.1 | 5.1.0 | T1-020550 |
| TP-17 | TP-020193 | 290 | - | Correction for test case 14.2.38.2 | F | 5.0.1 | 5.1.0 | T1-020551 |
| TP-17 | TP-020193 | 291 | - | Interactive or background / UL:32 DL:32 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH (40ms TTI). | F | 5.0.1 | 5.1.0 | T1-020552 |
| TP-17 | TP-020193 | 292 | - | New Tests for Radio Bearers 14.2.38d and 14.2.57. | F | 5.0.1 | 5.1.0 | T1-020553 |
| TP-17 | TP-020193 | 293 | - | New tests for radio bearers 23a, 38a, 38b, 38e, 51a & 51b | F | 5.0.1 | 5.1.0 | T1-020554 |
| TP-17 | TP-020194 | 294 | - | Clause 8, editorial changes to table format | D | 5.0.1 | 5.1.0 | T1-020555 |
| TP-17 | TP-020187 | 295 | - | Corrections and modifications to clause 9 of Package 2 test cases (MM) | F | 5.0.1 | 5.1.0 | T1-020556 |
| TP-17 | TP-020187 | 296 | - | Corrections to package 2 test cases in clause 8.3 (T1S-020494rev1) | F | 5.0.1 | 5.1.0 | T1-020557 |
| TP-17 | TP-020187 | 297 | - | Corrections to package 2 TCs in clause 8.4 of TS 34.123-1 (T1S-020495rev1) | F | 5.0.1 | 5.1.0 | T1-020558 |
| TP-17 | TP-020193 | 298 | - | Additional test cases in clause 8 of TS34.123-1 as T1S-020365rev1 | F | 5.0.1 | 5.1.0 | T1-020559 |
| TP-17 | TP-020187 | 299 | - | Update of Conformance requirement in test case 11.1.1.1 | F | 5.0.1 | 5.1.0 | T1-020560 |
| TP-17 | TP-020193 | 300 | - | Minor corrections and editorial modifications in clause 11.2 PDP context modification procedure | F | 5.0.1 | 5.1.0 | T1-020561 |
| TP-17 | TP-020193 | 301 | - | Addition of ICS/IXIT statement in Secondary PDP context activation procedures | F | 5.0.1 | 5.1.0 | T1-020563 |
| TP-17 | TP-020193 | 302 | - | Editorial corrections in test case 11.2.3.1. | F | 5.0.1 | 5.1.0 | T1-020564 |
| TP-17 | TP-020193 | 303 | - | Test case 11.1.2: Correction in ‘Test procedure’ | F | 5.0.1 | 5.1.0 | T1-020565 |
| TP-17 | TP-020187 | 304 | - | Modifications and corrections of GMM test case | F | 5.0.1 | 5.1.0 | T1-020566 |
| TP-17 | TP-020193 | 305 | - | Corrections to SMS test cases in clause 16. | F | 5.0.1 | 5.1.0 | T1-020567 |
| TP-17 | TP-020187 | 306 | - | Clarifications in PDP Context deactivation test cases (revision of T1S020450) | F | 5.0.1 | 5.1.0 | T1-020568 |
| TP-17 | TP-020193 | 307 | - | Update of clause 8.3 for TDD mode | F | 5.0.1 | 5.1.0 | T1-020579 |
| TP-17 | TP-020193 | 308 | - | New tests for radio bearers 38c, 56 and 58 | F | 5.0.1 | 5.1.0 | T1-020584 |
| TP-17 | TP-020193 | 309 | - | CR to section 16.1.6 & 16.2.6: Addition of test of short message type 0 (CS/PS) R99 and REL-4 | F | 5.0.1 | 5.1.0 | T1-020608 |
| | | | | Removal of revision marks and rename of history annex to 'annex D' | | 5.1.0 | 5.1.1 | |
| TP-18 | TP-020296 | 310 | - | Correction to package 1 test case 7.2.3.22 | F | 5.1.1 | 5.2.0 | T1-020659 |
| TP-18 | TP-020296 | 311 | - | Correction to package 1 test case 7.2.3.23 | F | 5.1.1 | 5.2.0 | T1-020660 |
| TP-18 | TP-020297 | 312 | - | Update to Broadcast of System Information in test case 8.1.10 | F | 5.1.1 | 5.2.0 | T1-020662 |
| TP-18 | TP-020297 | 313 | - | Correction of package 2 test case for Inter System HO | F | 5.1.1 | 5.2.0 | T1-020663 |
| TP-18 | TP-020296 | 314 | - | Corrections to generic setup procedure for radio bearer testing | F | 5.1.1 | 5.2.0 | T1-020664 |
| TP-18 | TP-020299 | 315 | - | Addition of Integrity protection test case | F | 5.1.1 | 5.2.0 | T1-020666 |
| TP-18 | TP-020297 | 316 | - | Corrections to package 2 MM test case 9.4.4 | F | 5.1.1 | 5.2.0 | T1-020667 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-18 | TP-020296 | 317 | - | Correction of package 1 test case 8.1.1.7 | F | 5.1.1 | 5.2.0 | T1-020668 |
| TP-18 | TP-020299 | 318 | - | Introduction of a new test case for the integrity protection of NAS signalling message | F | 5.1.1 | 5.2.0 | T1-020669 |
| TP-18 | TP-020296 | 319 | - | Modifications to package 1 RLC Test Cases | F | 5.1.1 | 5.2.0 | T1-020685 |
| TP-18 | TP-020298 | 320 | - | Corrections to title of radio bearer test cases 14.4.2a.1, 14.4.2a.2 and 14.4.2a.3 | F | 5.1.1 | 5.2.0 | T1-020688 |
| TP-18 | TP-020296 | 321 | - | Corrections to MAC Package 1 test cases 7.1.1.2, 7.1.1.3, 7.1.1.4,7.1.1.5 and 7.1.1.8 | F | 5.1.1 | 5.2.0 | T1-020689 |
| TP-18 | TP-020299 | 322 | - | Introduction of a new test case for the integrity protection of NAS signalling message | F | 5.1.1 | 5.2.0 | T1-020690 |
| TP-18 | TP-020296 | 323 | - | General corrections for clause 6 | F | 5.1.1 | 5.2.0 | T1-020691 |
| TP-18 | TP-020299 | 324 | - | Addition of cell reselection test case to verify use of cell status and cell reservations | F | 5.1.1 | 5.2.0 | T1-020692 |
| TP-18 | TP-020297 | 325 | - | Correction of package 2 test case on measurements (revision of T1S-020568) | F | 5.1.1 | 5.2.0 | T1-020697 |
| TP-18 | TP-020298 | 326 | - | Correction of test case for timing re-initialised inter-frequency handover (revision of T1S-020569) | F | 5.1.1 | 5.2.0 | T1-020698 |
| TP-18 | TP-020298 | 327 | - | Corrections to test cases 8.3.1.23, 8.3.1.24 and 8.3.2.13 (HCS Reselection) | F | 5.1.1 | 5.2.0 | T1-020699 |
| TP-18 | TP-020299 | 328 | - | Correction to test case 9.3.2 Handling of IMSI shorter than the maximum length | F | 5.1.1 | 5.2.0 | T1-020700 |
| TP-18 | TP-020299 | 329 | - | Correction to MM test 9.5.7.2 | F | 5.1.1 | 5.2.0 | T1-020701 |
| TP-18 | TP-020299 | 330 | - | Correction to the title of sub-clause 14.2.51b.2 | F | 5.1.1 | 5.2.0 | T1-020703 |
| TP-18 | TP-020296 | 331 | - | Correction to RLC P1 7.2.3.12 Correct use of Sequence Numbering | F | 5.1.1 | 5.2.0 | T1-020704 |
| TP-18 | TP-020296 | 332 | - | Correction to package 1 test case 7.2.3.13 and 7.2.3.14 | F | 5.1.1 | 5.2.0 | T1-020705 |
| TP-18 | TP-020296 | 333 | - | Correction to P1 TC8.1.9 SIGNALLING CONNECTION RELEASE INDICATION test case as T1S020674rev1 | F | 5.1.1 | 5.2.0 | T1-020706 |
| TP-18 | TP-020296 | 334 | - | Corrections to package 1 & 2 idle mode test cases | F | 5.1.1 | 5.2.0 | T1-020707 |
| TP-18 | TP-020296 | 335 | - | Correction to Package 1 test cases (revision of T1S-020677) | F | 5.1.1 | 5.2.0 | T1-020710 |
| TP-18 | TP-020297 | 336 | - | Correction to cell configuration | F | 5.1.1 | 5.2.0 | T1-020713 |
| TP-18 | TP-020296 | 337 | - | Clause 8.1 (Package 1) Rel-5: Correction from CRs approved in RP17meeting | F | 5.1.1 | 5.2.0 | T1-020784 |
| TP-18 | TP-020296 | 338 | - | CR to Package 1 TC 8.4.1.1: Correction from CRs approved in RP17meeting and T1S020726/727 (revision to T1S020750, T1S020856) | F | 5.1.1 | 5.2.0 | T1-020786 |
| TP-18 | TP-020296 | 339 | - | Clause 8.2 (Package 1) Rel-5: Correction from CRs approved in RP17meeting | F | 5.1.1 | 5.2.0 | T1-020787 |
| TP-18 | TP-020296 | 340 | - | Clause 8.3 (Package 1) Rel-5: Correction from CRs approved in RP17meeting | F | 5.1.1 | 5.2.0 | T1-020788 |
| TP-18 | TP-020296 | 341 | - | Clause 8.3 (Package 1) Rel-5: Correction from CRs approved in RP17meeting (Revision to T1S020737) | F | 5.1.1 | 5.2.0 | T1-020789 |
| TP-18 | TP-020296 | 342 | - | Update to clause 10 Circuit Switched Call Control tests as revision of T1S-020584 | F | 5.1.1 | 5.2.0 | T1-020790 |
| TP-18 | TP-020296 | 343 | - | Editorial corrections in test cases 11.1.1.1, 11.3.2 (Package 1) and 11.1.1.2.1 (Package 3). | F | 5.1.1 | 5.2.0 | T1-020792 |
| TP-18 | TP-020296 | 344 | - | Extension of 'Test purpose' in test case 11.3.1 (Package 1 test case). | F | 5.1.1 | 5.2.0 | T1-020793 |
| TP-18 | TP-020296 | 345 | - | Modifications and corrections of GMM test cases | F | 5.1.1 | 5.2.0 | T1-020794 |
| TP-18 | TP-020297 | 346 | - | Update to test cases 6.1.1.2, 6.1.1.5, 6.2.1.5 and 6.2.1.9, removal of test case 6.1.1.6 | F | 5.1.1 | 5.2.0 | T1-020795 |
| TP-18 | TP-020297 | 347 | - | Cell re-selection within RRC package 2 test case 8.2.2.18 on radio bearer reconfiguration (as T1S-020822rev1) | F | 5.1.1 | 5.2.0 | T1-020804 |
| TP-18 | TP-020297 | 348 | - | Specification of package 2 TC 8.2.2.11 Unsupported UE configuration (as T1S-020773rev1) | F | 5.1.1 | 5.2.0 | T1-020805 |
| TP-18 | TP-020297 | 349 | - | Corrections to package 2 test case 8.3.1.9 regarding timers | F | 5.1.1 | 5.2.0 | T1-020806 |
| TP-18 | TP-020297 | 350 | - | Update to package 2 RRC test case 8.3.2.1 to use two cells | F | 5.1.1 | 5.2.0 | T1-020807 |
| TP-18 | TP-020297 | 351 | - | Removal of the IE "New U-RNTI" in package 2 RRC test case 8.2.2.1 | F | 5.1.1 | 5.2.0 | T1-020808 |
| TP-18 | TP-020297 | 352 | - | Correction non-existing periodic RLC status timer value in package 2 and low priority RRC test cases | F | 5.1.1 | 5.2.0 | T1-020809 |
| TP-18 | TP-020297 | 353 | - | Correction to Package 2 RRC test cases (T1S020729rev1, T1S020808rev1, T1S020825rev1, T1S020833rev1) | F | 5.1.1 | 5.2.0 | T1-020810 |
| TP-18 | TP-020297 | 354 | - | Clause 8.2 (Package 2) Rel-5: Correction from CRs approved in RP17meeting (revision of T1S-020738) | F | 5.1.1 | 5.2.0 | T1-020811 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-18 | TP-020297 | 355 | - | Clause 8.3 (Package 2) Rel-5: Correction from CRs approved in RP17meeting | F | 5.1.1 | 5.2.0 | T1-020812 |
| TP-18 | TP-020297 | 356 | - | Corrections to Clause 8.4 Measurement Test Cases | F | 5.1.1 | 5.2.0 | T1-020813 |
| TP-18 | TP-020297 | 357 | - | Update of Test procedure in test case 9.4.2.5 (Package 2) | F | 5.1.1 | 5.2.0 | T1-020814 |
| TP-18 | TP-020297 | 358 | - | Clause 8.4 (Package 2) Rel-5: Correction from CRs approved in RP17meeting (revision to T1S020740) | F | 5.1.1 | 5.2.0 | T1-020816 |
| TP-18 | TP-020298 | 359 | - | Corrections to package 3 idle mode test cases | F | 5.1.1 | 5.2.0 | T1-020820 |
| TP-18 | TP-020298 | 360 | - | Corrections to package 3 RRC 8_1_x (Connection mgmt) as revision of T1S-020778. | F | 5.1.1 | 5.2.0 | T1-020821 |
| TP-18 | TP-020298 | 361 | - | Corrections to package 3 RRC 8_2_x (Radio Bearer procedure) as revision of T1S-020779. | F | 5.1.1 | 5.2.0 | T1-020822 |
| TP-18 | TP-020298 | 362 | - | Corrections to package 3 RRC 8_3_x (Connection mobility procedure) as revision of T1S-020780. | F | 5.1.1 | 5.2.0 | T1-020823 |
| TP-18 | TP-020298 | 363 | - | Corrections to package 3 Inter-RAT measurement test cases | F | 5.1.1 | 5.2.0 | T1-020824 |
| TP-18 | TP-020296 | 364 | - | Update to TC7.2.3.19( RLC PDU Continuous Transmission) | F | 5.1.1 | 5.2.0 | T1-020714 |
| TP-18 | TP-020299 | 365 | - | Addition of test cases for RBs for conversational/speech service based on TS 34.108 | F | 5.1.1 | 5.2.0 | T1-020676 |
| TP-18 | TP-020299 | 366 | - | Addition of test cases for RBs for conversational/unknown service based on TS 34.108 | F | 5.1.1 | 5.2.0 | T1-020677 |
| TP-18 | TP-020299 | 367 | - | Editorial correction and update for the existed RB test cases | F | 5.1.1 | 5.2.0 | T1-020678 |
| TP-18 | TP-020298 | 368 | - | Corrections and updates for Idle mode TCs (TDD) in a pure 3GPP environment | F | 5.1.1 | 5.2.0 | T1-020695 |
| TP-18 | TP-020297 | 369 | - | Corrections and updates for Idle mode TCs (TDD) in a 2G/3G environment | F | 5.1.1 | 5.2.0 | T1-020696 |
| TP-18 | TP-020296 | 370 | - | Corrections to 8.1.2 RRC Connection Establishment and 8.1.3 RRC Connection Release, TDD tests | F | 5.1.1 | 5.2.0 | T1-020825 |
| TP-18 | TP-020298 | 371 | - | New TDD test cases for 8.2.1 Radio Bearer Establishment and 8.2.2 Radio Bearer Reconfiguration. | F | 5.1.1 | 5.2.0 | T1-020826 |
| TP-18 | TP-020299 | 372 | - | Addition of test cases for RBs for symmetric streaming/unknown service based on TS 34.108 | F | 5.1.1 | 5.2.0 | T1-020828 |
| TP-18 | TP-020299 | 373 | - | Addition of test cases of for RBs for asymmetric atreaming/unknown service based on TS 34.108 | F | 5.1.1 | 5.2.0 | T1-020829 |
| TP-18 | TP-020299 | 374 | - | Addition of some test cases of for RBs for interactive/background service based on TS 34.108 | F | 5.1.1 | 5.2.0 | T1-020830 |
| TP-18 | TP-020299 | 375 | - | Correction of General information for radio bearer tests ( 1.28 Mcps TDD) | F | 5.1.1 | 5.2.0 | T1-020831 |
| TP-18 | TP-020299 | 376 | - | Idle mode test cases | F | 5.1.1 | 5.2.0 | T1-020833 |
| TP-18 | TP-020299 | 377 | - | Correction to TC8.1.6.3 Measurement Report on INITIAL DIRECT TRANSFER message and UPLINK DIRECT TRANSFER message | F | 5.1.1 | 5.2.0 | T1-020834 |
| TP-18 | TP-020298 | 378 | - | Correction to non-package 1&2 RRC test cases | F | 5.1.1 | 5.2.0 | T1-020836 |
| TP-18 | TP-020298 | 379 | - | Clause 8.1 (Non-package1&2) Rel-5: Correction from CRs approved in RP17meeting | F | 5.1.1 | 5.2.0 | T1-020837 |
| TP-18 | TP-020298 | 380 | - | Clause 8.4 (Non-package 1&2) Rel-5: Correction from CRs approved in RP17meeting | F | 5.1.1 | 5.2.0 | T1-020838 |
| TP-18 | TP-020298 | 381 | - | Corrections to package 3 Measurement test cases as revision of T1S-020781. | F | 5.1.1 | 5.2.0 | T1-020864 |
| TP-18 | TP-020296 | 382 | - | Corrections to radio bearer test cases in clause 14.2 | F | 5.1.1 | 5.2.0 | T1-020840 |
| TP-18 | TP-020299 | 383 | - | Conversational / speech / UL:(12.2 7.95 5.9 4.75) DL(12.2 7.95 5.9 4.75) kbps / CS RAB + Conversational / unknown / UL:64 DL:64 kbps / CS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH | F | 5.1.1 | 5.2.0 | T1-020842 |
| TP-18 | TP-020298 | 384 | - | Correction to package 3 MM test case 9.4.7 | F | 5.1.1 | 5.2.0 | T1-020845 |
| TP-18 | TP-020298 | 385 | - | Correction to package 3 SM test case 11.1.1.2.1 | F | 5.1.1 | 5.2.0 | T1-020846 |
| TP-18 | TP-020298 | 386 | - | Correction to package 3 test case 16.1.2 SMS mobile originated | F | 5.1.1 | 5.2.0 | T1-020847 |
| TP-18 | TP-020298 | 387 | - | Correction to package 3 test case 16.1.9 Multiple SMS mobile originated | F | 5.1.1 | 5.2.0 | T1-020848 |
| TP-18 | TP-020298 | 388 | - | Correction to package 3 test case 16.2.1 SMS mobile terminated | F | 5.1.1 | 5.2.0 | T1-020849 |
| TP-18 | TP-020298 | 389 | - | Correction to package 3 test case 16.2.2 SMS mobile originated | F | 5.1.1 | 5.2.0 | T1-020850 |
| TP-18 | TP-020299 | 390 | - | Update of Conformance requirement in test case 11.3.3.1 (low priority test case) | F | 5.1.1 | 5.2.0 | T1-020851 |
| TP-18 | TP-020299 | 391 | - | Updated PDCP conformance test cases, clause 7.3 | F | 5.1.1 | 5.2.0 | T1-020852 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-18 | TP-020298 | 392 | - | Test case for alternative RAB configuration agreed during T1/SIG #25 | F | 5.1.1 | 5.2.0 | T1-020853 |
| TP-18 | TP-020298 | 393 | - | Update to clause 13 Emergency call tests as revision of T1S-020759rev1 | F | 5.1.1 | 5.2.0 | T1-020854 |
| TP-18 | TP-020299 | 394 | - | Corrections to GCF “low priority” SMS test cases in 34.123-1, clause 16 | F | 5.1.1 | 5.2.0 | T1-020857 |
| TP-18 | TP-020298 | 395 | - | Correction to package 3 test case 16.2.10 Test of capabilities of simultaneously receiving an SM whilst sending an MO SM (as of T1S-020751rev1) | F | 5.1.1 | 5.2.0 | T1-020859 |
| TP-18 | TP-020298 | 396 | - | Correction to package 3 test case 16.1.10 Test of capabilities of simultaneously receiving an SM whilst sending an MO SM (as of T1S-020797rev1) | F | 5.1.1 | 5.2.0 | T1-020860 |
| TP-18 | TP-020299 | 397 | - | New GMM test cases for Service Request with Re-establishment of RABs (as of T1S-020829rev1) | F | 5.1.1 | 5.2.0 | T1-020861 |
| TP-18 | TP-020299 | 398 | - | Proposed new test case on additional measurements lis.t. As revision of T1S-020783. | F | 5.1.1 | 5.2.0 | T1-020862 |
| TP-18 | TP-020298 | 399 | - | Addition of new test case for RRC Connection Release following network authentication failure requested by upper layers | F | 5.1.1 | 5.2.0 | T1-020863 |
| TP-18 | TP-020299 | 400 | - | Clarification of expected sequence in test case 11.2.3.2 (low priority test case). | F | 5.1.1 | 5.2.0 | T1-020866 |
| TP-18 | TP-020298 | 401 | - | Clause 8.2 (Non-package 1&2) Rel-5: Correction from CRs approved in RP17meeting (T1S020742rev1) | F | 5.1.1 | 5.2.0 | T1-020867 |
| TP-18 | TP-020299 | 402 | - | Addition of test case for multi- RAB configurations | F | 5.1.1 | 5.2.0 | T1-020868 |
| TP-18 | TP-020299 | 403 | - | Addition of test case for compressed mode | F | 5.1.1 | 5.2.0 | T1-020869 |
| TP-18 | TP-020299 | 404 | - | CR to section 16.1.6a & 16.2.6a: Correction of Related ICS/IXIT Statements | F | 5.1.1 | 5.2.0 | T1-020855 |
| TP-18 | TP-020299 | 405 | - | Interactive or background / UL:32 DL:32kbps / PS RAB (20 ms TTI) + UL:3.4 DL:3.4 kbps SRBs for DCCH | F | 5.1.1 | 5.2.0 | T1-020841 |
| TP-18 | TP-020298 | 406 | - | Correction to package 3 test case 16.1.1 SMS mobile terminated (as of T1S-020791rev1) | F | 5.1.1 | 5.2.0 | T1-020858 |
| TP-18 | TP-020299 | 407 | - | Proposed new test case in clause 8.2.6 as revision of T1S-020784. | F | 5.1.1 | 5.2.0 | T1-020870 |
| TP-19 | TP-030049 | 408 | - | Corrections to GMM Package 1 test cases as T1S030012rev1 | F | 5.2.0 | 5.3.0 | T1-030032 |
| TP-19 | TP-030048 | 409 | - | Clause 8.3.1.1 Cell Update: cell reselection in CELL_FACH(Package1) as T1S0300015rev1 | F | 5.2.0 | 5.3.0 | T1-030033 |
| TP-19 | TP-030047 | 410 | - | Clause 7.2.3.24 Polling for status / Operation of timer Timer_Poll_Prohibit (Package 1) | F | 5.2.0 | 5.3.0 | T1-030034 |
| TP-19 | TP-030049 | 411 | - | on Correction to package 4 GMM test case 12.6.1.3.3 Authentication Rejected by the UE / fraudulent network | F | 5.2.0 | 5.3.0 | T1-030038 |
| TP-19 | TP-030047 | 412 | - | Corrections to package 4 idle mode test case 6.1.2.9 | F | 5.2.0 | 5.3.0 | T1-030064 |
| TP-19 | TP-030047 | 413 | - | Alignement of cell numbering for inter-RAT idle mode test case | F | 5.2.0 | 5.3.0 | T1-030065 |
| TP-19 | TP-030047 | 414 | - | Correction to package 1 RLC test case 7.2.3.18 | F | 5.2.0 | 5.3.0 | T1-030066 |
| TP-19 | TP-030047 | 415 | - | Correction to low prio RLC test cases 7.2.2.11, 7.2.3.31 and 7.2.3.32 | F | 5.2.0 | 5.3.0 | T1-030067 |
| TP-19 | TP-030047 | 416 | - | Clause 7.2.3.21 Polling for status / Operation of Timer_Poll timer / Timer expiry (Package 1) | F | 5.2.0 | 5.3.0 | T1-030068 |
| TP-19 | TP-030047 | 417 | - | Correction to low prio PDCP test cases 7.3.2.1.2, 7.3.2.2.2, 7.3.2.2.4 and 7.3.2.2.5 | F | 5.2.0 | 5.3.0 | T1-030069 |
| TP-19 | TP-030048 | 418 | - | Correction to package 1 RRC Test Case 8.1.1.1 | F | 5.2.0 | 5.3.0 | T1-030070 |
| TP-19 | TP-030048 | 419 | - | Correction to TS 34.123-1 Package1; Radio Bearer Establishment procedure | F | 5.2.0 | 5.3.0 | T1-030071 |
| TP-19 | TP-030048 | 420 | - | Corrections to Package 1 RRC test cases | F | 5.2.0 | 5.3.0 | T1-030072 |
| TP-19 | TP-030048 | 421 | - | Corrections to Package 2 RRC test cases | F | 5.2.0 | 5.3.0 | T1-030073 |
| TP-19 | TP-030048 | 422 | - | Update to test cases 8.2.4.3 and 8.2.4.4(Package 2) | F | 5.2.0 | 5.3.0 | T1-030074 |
| TP-19 | TP-030048 | 423 | - | Corrections to Early UE Specific Information in RRC Connection Request (Package 1) | F | 5.2.0 | 5.3.0 | T1-030075 |
| TP-19 | TP-030048 | 424 | - | Corrections to package 2 test case 8.1.10.1 | F | 5.2.0 | 5.3.0 | T1-030076 |
| TP-19 | TP-030048 | 425 | - | Corrections to package 3 RRC test case 8.4.1.40 | F | 5.2.0 | 5.3.0 | T1-030077 |
| TP-19 | TP-030048 | 426 | - | Corrections to package 4 test cases on Inter system handover | F | 5.2.0 | 5.3.0 | T1-030078 |
| TP-19 | TP-030048 | 427 | - | Corrections to package 4 test cases on RRC Direct transfer | F | 5.2.0 | 5.3.0 | T1-030079 |
| TP-19 | TP-030048 | 428 | - | Correction to package 1 RRC Test Case 8.1.1.7 | F | 5.2.0 | 5.3.0 | T1-030080 |
| TP-19 | TP-030048 | 429 | - | Corrections to package 4 test cases on RRC connection establishment and release | F | 5.2.0 | 5.3.0 | T1-030081 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-19 | TP-030048 | 430 | - | Corrections to package 4 test cases on Physical Channel Reconfiguration | F | 5.2.0 | 5.3.0 | T1-030082 |
| TP-19 | TP-030048 | 431 | - | Corrections to package 4 test cases on RB establishment | F | 5.2.0 | 5.3.0 | T1-030083 |
| TP-19 | TP-030048 | 432 | - | Corrections to package 4 test cases on TrCH reconfiguration | F | 5.2.0 | 5.3.0 | T1-030084 |
| TP-19 | TP-030048 | 433 | - | Corrections to package 4 test cases on RRC Connection mobility | F | 5.2.0 | 5.3.0 | T1-030085 |
| TP-19 | TP-030048 | 434 | - | New test cases for security | F | 5.2.0 | 5.3.0 | T1-030086 |
| TP-19 | TP-030048 | 435 | - | Removal of low priority RRC test cases with state transition | F | 5.2.0 | 5.3.0 | T1-030087 |
| TP-19 | TP-030048 | 436 | - | Corrections to clause 8.2.2.20 | F | 5.2.0 | 5.3.0 | T1-030088 |
| TP-19 | TP-030048 | 437 | - | Addition of re-run statements when it is failed in cell reselection | F | 5.2.0 | 5.3.0 | T1-030089 |
| TP-19 | TP-030048 | 438 | - | Corrections to package 4 test cases on RB release | F | 5.2.0 | 5.3.0 | T1-030090 |
| TP-19 | TP-030048 | 439 | - | Corrections to package 4 test cases on RB reconfiguration | F | 5.2.0 | 5.3.0 | T1-030091 |
| TP-19 | TP-030048 | 440 | - | Corrections to package 4 test cases on Measurements | F | 5.2.0 | 5.3.0 | T1-030092 |
| TP-19 | TP-030048 | 441 | - | Corrections to Low Priority RRC test cases | F | 5.2.0 | 5.3.0 | T1-030093 |
| TP-19 | TP-030048 | 442 | - | Correction to clause 8.1.6.4 and 8.1.9a/b as T1S-020628rev1 | F | 5.2.0 | 5.3.0 | T1-030094 |
| TP-19 | TP-030049 | 443 | - | Corrections to package 4 test cases on CC | F | 5.2.0 | 5.3.0 | T1-030095 |
| TP-19 | TP-030049 | 444 | - | Correction to Tables 10.1.3/2 and 10.1.3/4 | F | 5.2.0 | 5.3.0 | T1-030096 |
| TP-19 | TP-030049 | 445 | - | Corrections to package 4 test cases on MM | F | 5.2.0 | 5.3.0 | T1-030097 |
| TP-19 | TP-030049 | 446 | - | Correction to low priority TC 12.4.3.2 Periodic routing area updating / accepted / T3312 default value | F | 5.2.0 | 5.3.0 | T1-030098 |
| TP-19 | TP-030049 | 447 | - | Introduction of a new test case for a PSdetach procedure with the cause "PS services not allowed in this PLMN" | F | 5.2.0 | 5.3.0 | T1-030099 |
| TP-19 | TP-030049 | 448 | - | Corrections to package 4 test cases on GMM as T1S030221rev1 | F | 5.2.0 | 5.3.0 | T1-030100 |
| TP-19 | TP-030049 | 449 | - | Corrections to package 1 GMM Test Cases | F | 5.2.0 | 5.3.0 | T1-030101 |
| TP-19 | TP-030049 | 450 | - | Corrections to package 4 GMM test cases on RAB re-establishment | F | 5.2.0 | 5.3.0 | T1-030102 |
| TP-19 | TP-030048 | 451 | - | Corrections to package 4 test cases on RRC Security | F | 5.2.0 | 5.3.0 | T1-030103 |
| TP-19 | TP-030049 | 452 | - | Correction to Low Prio SM test case 11.2.3.2 | F | 5.2.0 | 5.3.0 | T1-030104 |
| TP-19 | TP-030049 | 453 | - | Maintenance of low priority test case 11.1.2 PDP context activation requested by the network, successful and unsuccessful | F | 5.2.0 | 5.3.0 | T1-030105 |
| TP-19 | TP-030049 | 454 | - | Correction to package 3 test case 16.1.2 SMS mobile originated | F | 5.2.0 | 5.3.0 | T1-030106 |
| TP-19 | TP-030047 | 455 | - | Corrections to generic setup procedure for radio bearer testing | F | 5.2.0 | 5.3.0 | T1-030108 |
| TP-19 | TP-030047 | 456 | - | Corrections to add minimum set of TFCIs to package 1 RB test cases | F | 5.2.0 | 5.3.0 | T1-030109 |
| TP-19 | TP-030047 | 457 | - | Corrections to add minimum set of TFCIs to package 2 RB test cases | F | 5.2.0 | 5.3.0 | T1-030110 |
| TP-19 | TP-030047 | 458 | - | Corrections to add minimum set of TFCIs to package 3 RB test cases | F | 5.2.0 | 5.3.0 | T1-030111 |
| TP-19 | TP-030047 | 459 | - | Generic procedure for radio bearer testing using the DSCH | F | 5.2.0 | 5.3.0 | T1-030112 |
| TP-19 | TP-030047 | 460 | - | Prose for the MultiRAB DSCH Radio bearers test cases | F | 5.2.0 | 5.3.0 | T1-030113 |
| TP-19 | TP-030049 | 461 | - | Update of Conformance requirement and Expected sequence in test case 11.1.1.2.1 (Package 3) as T1S030104rev1 | F | 5.2.0 | 5.3.0 | T1-030114 |
| TP-19 | TP-030049 | 462 | - | Update of Conformance requirement and Expected sequence in test case 11.1.1.2.2 (Package 4) as T1S030105rev1 | F | 5.2.0 | 5.3.0 | T1-030115 |
| TP-19 | TP-030047 | 463 | - | Inclusion of new test cases for intrafrequency Measurement Control and Report TDD | F | 5.2.0 | 5.3.0 | T1-030211 |
| TP-19 | TP-030047 | 464 | - | Inclusion of test case for events 1H and 1I (TDD) | F | 5.2.0 | 5.3.0 | T1-030212 |
| TP-19 | TP-030047 | 465 | - | Addition of test cases for RBs for Interactive or background service based on 34.108 | F | 5.2.0 | 5.3.0 | T1-030214 |
| TP-19 | TP-030047 | 466 | - | Addition of test cases for RBs for conversational/speech and interactive or background service based on 34.108 | F | 5.2.0 | 5.3.0 | T1-030215 |
| TP-19 | TP-030047 | 467 | - | Addition of test cases for RBs for conversational/speech and streaming/unknown or | F | 5.2.0 | 5.3.0 | T1-030216 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | conversational/Unknown service based on 34.108 | | | | |
| TP-19 | TP-030047 | 468 | - | Addition of test cases for RBs for conversational/unknown and Interactive or background service based on 34.108 | F | 5.2.0 | 5.3.0 | T1-030217 |
| TP-19 | TP-030047 | 469 | - | Addition of test case for RB for Interactive or/background and streaming/unknown service and test case for RB for combinations on S-CCPCH based on 34.108 | F | 5.2.0 | 5.3.0 | T1-030218 |
| TP-19 | TP-030049 | 470 | - | Correction to GMM Package 2 test cases | F | 5.2.0 | 5.3.0 | T1-030236 |
| TP-19 | TP-030048 | 471 | - | Correction to package 1 RRC Test Case 8.1.2.7 | F | 5.2.0 | 5.3.0 | T1-030242 |
| TP-20 | TP-030102 | 472 | - | Measurement Control and Report: Inter-frequency measurement for transitions (TDD) | F | 5.3.0 | 5.4.0 | T1-030510 |
| TP-20 | TP-030102 | 473 | - | Corrections of Measurement Control and Report: Intra-frequency measurement for transitions (TDD) | F | 5.3.0 | 5.4.0 | T1-030511 |
| TP-20 | TP-030102 | 474 | - | Update of Broadcast of system information test for TDD mode | F | 5.3.0 | 5.4.0 | T1-030512 |
| TP-20 | TP-030101 | 475 | - | Measurement Control and Report: Cell forbidden to affect reporting range (FDD only) | F | 5.3.0 | 5.4.0 | T1-030513 |
| TP-20 | TP-030102 | 476 | - | Measurement Control and Report: Traffic volume measurement for transitions, TDD update | F | 5.3.0 | 5.4.0 | T1-030514 |
| TP-20 | TP-030109 | 477 | - | Correction to low prio RLC test case 7.2.3.32 | F | 5.3.0 | 5.4.0 | T1-030519 |
| TP-20 | TP-030109 | 478 | - | Correction to package 1 RLC test case 7.2.3.33 | F | 5.3.0 | 5.4.0 | T1-030520 |
| TP-20 | TP-030109 | 479 | - | Removal of RAB test cases associated with recently void RABs in 34.108 | F | 5.3.0 | 5.4.0 | T1-030521 |
| TP-20 | TP-030102 | 480 | - | Corrections to Package 3 RRC test cases (clause 8.1) | F | 5.3.0 | 5.4.0 | T1-030527 |
| TP-20 | TP-030102 | 481 | - | Corrections to Package 4 RRC test cases (clause 8.2) | F | 5.3.0 | 5.4.0 | T1-030528 |
| TP-20 | TP-030109 | 482 | - | Introduction of a new test case 9.2.5 Authentication Rejected by the UE / fraudulent network | F | 5.3.0 | 5.4.0 | T1-030529 |
| TP-20 | TP-030109 | 483 | - | Correction to TC 9.3.2 | F | 5.3.0 | 5.4.0 | T1-030533 |
| TP-20 | TP-030101 | 484 | - | Update to clause 8 conformance requirements according to 25.331 CR1829 and CR1835 approved in RAN#19. | F | 5.3.0 | 5.4.0 | T1-030544 |
| TP-20 | TP-030102 | 485 | - | Removal of package 4 and low priority redundant RRC Reconfiguration failure cases | F | 5.3.0 | 5.4.0 | T1-030546 |
| TP-20 | TP-030101 | 486 | - | Usage of downlink CCCH vs DCCH for CELL UPDATE CONFIRM and URA UPDATE CONFIRM RRC messages | F | 5.3.0 | 5.4.0 | T1-030547 |
| TP-20 | TP-030102 | 487 | - | Correction to package 4 RRC test case 8.2.1.4 according to 25.331 CR 1820 | F | 5.3.0 | 5.4.0 | T1-030548 |
| TP-20 | TP-030101 | 488 | - | Correction of RRC test cases according to 25331 CR1823 | F | 5.3.0 | 5.4.0 | T1-030549 |
| TP-20 | TP-030102 | 489 | - | Corrections to Package 3 RRC test cases (clause 8.3) | F | 5.3.0 | 5.4.0 | T1-030560 |
| TP-20 | TP-030102 | 490 | - | Corrections to low priority RRC test cases (clause 8.2) | F | 5.3.0 | 5.4.0 | T1-030562 |
| TP-20 | TP-030102 | 491 | - | Corrections to low priority RRC test cases (clause 8.3) | F | 5.3.0 | 5.4.0 | T1-030563 |
| TP-20 | TP-030101 | 492 | - | Correction of RRC test cases according to 25331 CR1847 | F | 5.3.0 | 5.4.0 | T1-030633 |
| TP-20 | TP-030102 | 493 | - | Correction of package 4 RRC test cases 8.4.1.42 and 8.4.1.43 according to 25.331 CR1838 | F | 5.3.0 | 5.4.0 | T1-030634 |
| TP-20 | TP-030109 | 494 | - | Corrections to package 3 SMS test cases 16.1.9.1 and 16.1.9.2 (Multiple SMS mobile originated) | F | 5.3.0 | 5.4.0 | T1-030636 |
| TP-20 | TP-030101 | 496 | - | Corrections to Package 2 RRC test case 8.4.1.7 (revision of T1-030646) | F | 5.3.0 | 5.4.0 | T1-030652 |
| TP-20 | TP-030101 | 497 | - | Corrections to Package 2 RRC test cases (clause 8.4) (revision to T1-030559) | F | 5.3.0 | 5.4.0 | T1-030653 |
| TP-20 | TP-030102 | 498 | - | Corrections to Package 3 RRC test cases (clause 8.4) (revision to T1-030561) | F | 5.3.0 | 5.4.0 | T1-030663 |
| TP-20 | TP-030101 | 499 | - | Corrections to Package 2 RRC test cases 8.3.1.5 and 8.3.1.6 | F | 5.3.0 | 5.4.0 | T1-030666 |
| TP-20 | TP-030109 | 500 | - | Corrections to GMM P4 test case 12.9.6 | F | 5.3.0 | 5.4.0 | T1-030668 |
| TP-20 | TP-030109 | 501 | - | Modifications and corrections for GMM test cases | F | 5.3.0 | 5.4.0 | T1-030675 |
| TP-20 | TP-030101 | 502 | - | Correction to Package 1 RRC test case 8.1.1.7 (Revision of T1-030570) | F | 5.3.0 | 5.4.0 | T1-030676 |
| TP-20 | TP-030109 | 503 | - | Correction to package 2 idle mode test cases 6.2.1.7 and 6.2.1.8 | F | 5.3.0 | 5.4.0 | T1-030683 |
| TP-20 | TP-030109 | 504 | - | Correction to low priority idle mode test cases | F | 5.3.0 | 5.4.0 | T1-030684 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | 6.2.1.3 and 6.2.1.4 | | | | |
| TP-20 | TP-030101 | 505 | - | Corrections to Package 2 RRC test cases (clause 8.2) [revision to T1-030477] | F | 5.3.0 | 5.4.0 | T1-030690 |
| TP-20 | TP-030101 | 506 | - | Corrections to Package 2 RRC test cases (clause 8.3) [revision to T1-030558] | F | 5.3.0 | 5.4.0 | T1-030694 |
| TP-20 | TP-030101 | 507 | - | Correction to package 1 RRC test case 8.1.1.4 | F | 5.3.0 | 5.4.0 | T1-030695 |
| TP-20 | TP-030101 | 508 | - | Corrections to TC 8.3.2.3 (T1-030434rev1, T1-030481rev1) | F | 5.3.0 | 5.4.0 | T1-030696 |
| TP-20 | TP-030101 | 509 | - | Corrections to Package 1 RRC test cases (clause 8.3) | F | 5.3.0 | 5.4.0 | T1-030697 |
| TP-20 | TP-030102 | 510 | - | Corrections to low priority RRC test cases (clause 8.1) [revision to T1-030478] | F | 5.3.0 | 5.4.0 | T1-030702 |
| TP-20 | TP-030101 | 511 | - | Correction of IE “Measurement Command” from “Modify” to “Setup” for TVM [revision to T1-030566] | F | 5.3.0 | 5.4.0 | T1-030704 |
| TP-20 | TP-030102 | 512 | - | Removal of low-priority RRC test case 8.4.1.20 and 8.4.1.21 | F | 5.3.0 | 5.4.0 | T1-030705 |
| TP-20 | TP-030102 | 513 | - | Corrections to low priority test case 8.4.1.9 (Measurement) | F | 5.3.0 | 5.4.0 | T1-030706 |
| TP-20 | TP-030102 | 514 | - | Corrections to low priority test case 8.1.6.3. | F | 5.3.0 | 5.4.0 | T1-030707 |
| TP-20 | TP-030102 | 515 | - | Corrections to low priority test case 8.1.9a | F | 5.3.0 | 5.4.0 | T1-030708 |
| TP-20 | TP-030109 | 516 | - | Correction to low priority test cases 9.4.3.2, 9.4.3.3 and 9.4.3.4 (Revision of T1-030572) | F | 5.3.0 | 5.4.0 | T1-030710 |
| TP-20 | TP-030102 | 517 | - | URA identity for transition from CELL_FACH to URA_PCH | F | 5.3.0 | 5.4.0 | T1-030712 |
| TP-20 | TP-030109 | 518 | - | Corrections to package 4 GMM test cases 12.4.1.4c and 12.4.1.4.d | F | 5.3.0 | 5.4.0 | T1-030713 |
| TP-20 | TP-030109 | 519 | - | Modifications and corrections of GMM test case | F | 5.3.0 | 5.4.0 | T1-030717 |
| TP-20 | TP-030109 | 520 | - | Correction to low priority test cases 14.2.34.1, 14.2.45, 14.2.46, 14.2.54 and to sections 14.1.1 and 14.1.2 (Revision of T1-030573) | F | 5.3.0 | 5.4.0 | T1-030718 |
| TP-20 | TP-030102 | 521 | - | New RRC test cases for Inter-RAT cell reselection (PS) from UTRAN | B | 5.3.0 | 5.4.0 | T1-030719 |
| TP-20 | TP-030102 | 522 | - | New RRC test cases for Inter-RAT cell change order from UTRAN | B | 5.3.0 | 5.4.0 | T1-030720 |
| TP-20 | TP-030101 | 523 | - | Modification of RRC reconfiguration test cases due to updates to default messages as of T1-030714r1 | F | 5.3.0 | 5.4.0 | T1-030723 |
| TP-20 | TP-030101 | 524 | - | Corrections to Package 1 RRC test cases (clause 8.2) [revision to T1-030476, T1-030724] | F | 5.3.0 | 5.4.0 | T1-030726 |
| TP-20 | TP-030102 | 525 | - | New test cases for radio link failure [revision to T1-030565, T1-030725] | F | 5.3.0 | 5.4.0 | T1-030727 |
| TP-20 | TP-030101 | 526 | - | Correction to Package 1 RRC test cases 8.2.5.1, 8.3.4.3 (Revision of T1-030571 and T1-030681 and T1-030689) | F | 5.3.0 | 5.4.0 | T1-030730 |
| TP-20 | TP-030101 | 527 | - | Corrections to Package 1 RRC Test Cases 8.2.1.8 and 8.2.1.9 (Revision of T1-030700 and T1-030698) | F | 5.3.0 | 5.4.0 | T1-030736 |
| TP-20 | TP-030140 | 529 | - | Correction to clause 8.4.1.2 (Package 2 test case) (revision to T1-030564, T1-030664, T1-030701) | F | 5.3.0 | 5.4.0 | T1-030738 |
| TP-20 | TP-030140 | 528 | 1 | Corrections to Package 1 RRC test cases (clause 8.4) [T1-030557rev1, T1-030682rev1] | F | 5.3.0 | 5.4.0 | T1-030889 |
| TP-20 | TP-030140 | 530 | 1 | Modifications to Package 1 RRC measurement test cases | F | 5.3.0 | 5.4.0 | T1-030890 |
| TP-21 | TP-030192 | 531 | - | Corrections and updates on 8.2.1 Radio Bearer Establishment for TDD mode | F | 5.4.0 | 5.5.0 | T1-030801 |
| TP-21 | TP-030192 | 532 | - | Radio Bearer Reconfiguration from CELL_DCH to CELL_FACH test updated for TDD mode (clause 8.2.2.35), TS 34.123-1 | F | 5.4.0 | 5.5.0 | T1-030802 |
| TP-21 | TP-030192 | 534 | - | Correction to RLC testcases 7.2.3.21 and 7.2.3.22 | F | 5.4.0 | 5.5.0 | T1-030895 |
| TP-21 | TP-030192 | 535 | - | Inclusion of tests for combinations on SCCPCH for TDD 1.28 Mcps option | F | 5.4.0 | 5.5.0 | T1-030978 |
| TP-21 | TP-030192 | 536 | - | Inclusion of test for 34.123-1 for combination on PRACH for TDD 1.28 Mcps option, Rel-4 | F | 5.4.0 | 5.5.0 | T1-030979 |
| TP-21 | TP-030192 | 537 | - | CR to TS 34.123-1 [REL-5] Package 4 GMM test cases 12.4.1.2 and 12.4.1.4d | F | 5.4.0 | 5.5.0 | T1-030989 |
| TP-21 | TP-030192 | 538 | - | CR to TS 34.123-1 [REL-5] Package 1 RRC test cases in clause 8.1 | F | 5.4.0 | 5.5.0 | T1-030991 |
| TP-21 | TP-030192 | 539 | - | CR to TS 34.123-1 [REL-5] Low priority PDCP test case 7.3.3.1 | F | 5.4.0 | 5.5.0 | T1-030993 |
| TP-21 | TP-030192 | 540 | - | CR 34.123-1 Rel-5: Mobile identity field removed in TC 12.4.2.2 | F | 5.4.0 | 5.5.0 | T1-031039 |
| TP-21 | TP-030192 | 541 | - | CR to 34.123-1 REL-5; Removal of package 2 MAC | F | 5.4.0 | 5.5.0 | T1-031043 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | test case 7.1.2.2.1 | | | | |
| TP-21 | TP-030192 | 542 | - | Corrections to Package 1 RRC test case 8.1.2.2 | F | 5.4.0 | 5.5.0 | T1-031067 |
| TP-21 | TP-030192 | 543 | - | Corrections to P2 MM test case 9.4.2.2/test 2 | F | 5.4.0 | 5.5.0 | T1-031068 |
| TP-21 | TP-030192 | 544 | - | CR to 34.123-1 REL-5; Corrections to package 4 and low priority RRC test cases on Unsupported configuration | F | 5.4.0 | 5.5.0 | T1-031074 |
| TP-21 | TP-030192 | 545 | - | CR to TS 34.123-1 [REL-5] Package 2 MM test case 9.4.5.3 Location updating/ periodic normal/ test 2 | F | 5.4.0 | 5.5.0 | T1-031078 |
| TP-21 | TP-030192 | 546 | - | Corrections to 34.123-1 v5.4.0 Package 4 test case (8.2.3.11) | F | 5.4.0 | 5.5.0 | T1-031084 |
| TP-21 | TP-030192 | 547 | - | Corrections to 34.123-1 v5.4.0 Package 4 test case (8.2.6.11) | F | 5.4.0 | 5.5.0 | T1-031085 |
| TP-21 | TP-030192 | 548 | - | Corrections to 34.123-1 v5.4.0 Package 4 test case (8.2.6.12) | F | 5.4.0 | 5.5.0 | T1-031086 |
| TP-21 | TP-030192 | 549 | - | Corrections to 34.123-1 v5.4.0 low priority test case (8.2.6.14) | F | 5.4.0 | 5.5.0 | T1-031089 |
| TP-21 | TP-030192 | 550 | - | Corrections to 34.123-1 v5.4.0 low priority test case (8.3.1.23) | F | 5.4.0 | 5.5.0 | T1-031090 |
| TP-21 | TP-030192 | 551 | - | Corrections to 34.123-1 v5.4.0 low priority test case (8.3.4.5) | F | 5.4.0 | 5.5.0 | T1-031091 |
| TP-21 | TP-030192 | 552 | - | Correction to 34.123-1 v5.4.0 Low priority test case (8.4.1.22) | F | 5.4.0 | 5.5.0 | T1-031092 |
| TP-21 | TP-030192 | 553 | - | Corrections to 34.123-1 v5.4.0 low priority test case (8.4.1.39) | F | 5.4.0 | 5.5.0 | T1-031093 |
| TP-21 | TP-030192 | 554 | - | CR to 34.123-1 REL-5; Correction of Package 4 RRC test case 8.2.6.37 | F | 5.4.0 | 5.5.0 | T1-031099 |
| TP-21 | TP-030192 | 555 | - | Removal of test case 8.2.2.20 | F | 5.4.0 | 5.5.0 | T1-031135 |
| TP-21 | TP-030192 | 556 | - | CR to 34.123-1, Rel-5; correction to idle mode section according to RP-030289 | F | 5.4.0 | 5.5.0 | T1-031143 |
| TP-21 | TP-030192 | 557 | - | CR to 34.123-1, Rel-5; correction to package 1 RLC test case 7.2.3.18 according to RP-030292 | F | 5.4.0 | 5.5.0 | T1-031144 |
| TP-21 | TP-030192 | 558 | - | Correction to 34.123-1 v5.4.0 Package 1 test case (8.4.1.5) – Revision of T1-031080 | F | 5.4.0 | 5.5.0 | T1-031147 |
| TP-21 | TP-030192 | 559 | - | Corrections to 34.123-1 v5.4.0 Package 3 test case (8.4.1.24) – Revision of T1-031082 | F | 5.4.0 | 5.5.0 | T1-031148 |
| TP-21 | TP-030192 | 560 | - | Corrections to 34.123-1 v5.4.0 Package 4 test case (8.4.1.12) – Revision of T1-031088 | F | 5.4.0 | 5.5.0 | T1-031149 |
| TP-21 | TP-030192 | 561 | - | CR to TS 34.123-1 [REL-5] Package 4 RRC test cases: 8.1.3.5 and 8.3.1.15 | F | 5.4.0 | 5.5.0 | T1-031161 |
| TP-21 | TP-030192 | 562 | - | Corrections to 34.123-1 v5.4.0 Package 2 test cases (8.3.1.21 and 8.3.1.22) – Revision of T1-031081 | F | 5.4.0 | 5.5.0 | T1-031180 |
| TP-21 | TP-030192 | 563 | - | CR to TS 34.123-1 [REL-5] Low priority GMM test cases 12.2.2.8, 12.3.2.4 and 12.9.9 | F | 5.4.0 | 5.5.0 | T1-031199 |
| TP-21 | TP-030192 | 564 | - | Correction to 34.123-1, section 7.2.3.19 and 7.2.3.24 | F | 5.4.0 | 5.5.0 | T1-031200 |
| TP-21 | TP-030192 | 565 | - | Correction to GCF package 1 RLC testcases 7.2.3.26 and 7.2.3.27 | F | 5.4.0 | 5.5.0 | T1-031201 |
| TP-21 | TP-030192 | 566 | - | CR to TS 34.123-1 [REL-5] Package 1 RRC test cases 8.3.4.3 and 8.4.1.1 | F | 5.4.0 | 5.5.0 | T1-031203 |
| TP-21 | TP-030192 | 567 | - | CR to 34.123-1 REL-5; Periodical RLC STATUS PDU detection in RRC Radio Bearer Reconfiguration Package 2 and 3 test cases | F | 5.4.0 | 5.5.0 | T1-031204 |
| TP-21 | TP-030192 | 568 | - | CR to TS 34.123-1 [REL-5] Package 2 RRC test case 8.2.2.19 | F | 5.4.0 | 5.5.0 | T1-031209 |
| TP-21 | TP-030192 | 569 | - | CR to 34-123-1, Rel-5; URA Identity in Cell Update Confirm and URA Update Confirm | F | 5.4.0 | 5.5.0 | T1-031210 |
| TP-21 | TP-030192 | 570 | - | CR to 34.123-1 on Correction to C/T field value for test case 7.1.1.8 | F | 5.4.0 | 5.5.0 | T1-031212 |
| TP-21 | TP-030192 | 571 | - | CR to TS 34.123-1 [REL-5] Package 2 RRC test case 8.3.1.10 Cell Update: expiry of T307 timer after T305 expiry and being out of service area. | F | 5.4.0 | 5.5.0 | T1-031213 |
| TP-21 | TP-030192 | 572 | - | CR to 34.123-1 REL-5; Correction to CC test cases 10.1.2.2.1 (package 4), 10.1.2.2.2 (package 3) and 10.1.2.9.2 (low prio) | F | 5.4.0 | 5.5.0 | T1-031214 |
| TP-21 | TP-030192 | 573 | - | CR to TS 34.123-1 [REL-5] Package 2 GMM test case 12.4.2.2 | F | 5.4.0 | 5.5.0 | T1-031216 |
| TP-21 | TP-030192 | 574 | - | CR 34.123-1 Rel-5: TC 12.8 Ready Timer in use | F | 5.4.0 | 5.5.0 | T1-031218 |
| TP-21 | TP-030192 | 575 | - | CR to 34.123-1 REL-5; Correction to package 1 GMM test case 12.3.1.2 | F | 5.4.0 | 5.5.0 | T1-031244 |
| TP-21 | TP-030192 | 576 | - | Corrections to low priority Multi RAB test cases | F | 5.4.0 | 5.5.0 | T1-031069 |
| TP-21 | TP-030192 | 577 | - | Corrections to P3 Inter RAT measurement test case | F | 5.4.0 | 5.5.0 | T1-031219 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | 8.4.1.31 | | | | |
| TP-21 | TP-030192 | 578 | - | CR to 34.123-1 R5; Correction to Package 1 RRC test case 8.2.5.1 | F | 5.4.0 | 5.5.0 | T1-031254 |
| TP-21 | TP-030192 | 579 | - | CR to 34.123-1 REL-5; Correction to package 2 MAC test case 7.1.3.1 | F | 5.4.0 | 5.5.0 | T1-031256 |
| TP-21 | TP-030192 | 580 | - | Introduction of new test cases for a routing area updating procedure due to a change of DRX parameter IE | F | 5.4.0 | 5.5.0 | T1-031041 |
| TP-21 | TP-030192 | 581 | - | CR 34.123-1 Rel-5: TC 9.4.2.3 doesn't correspond to conformance claim | F | 5.4.0 | 5.5.0 | T1-031037 |
| TP-21 | TP-030192 | 582 | - | Corrections to 34.123-1 v5.4.0 low priority test case (8.2.3.26) | F | 5.4.0 | 5.5.0 | T1-031208 |
| TP-21 | TP-030192 | 583 | - | CR 34.123-1 Rel-5: Automatic MO SMS repeat at TP layer | F | 5.4.0 | 5.5.0 | T1-031279 |
| TP-22 | TP-030282 | 602 | | New RRC test cases on Paging | F | 5.5.0 | 5.6.0 | T1-031390 |
| TP-22 | TP-030282 | 614 | | CR to 34.123-1 R5; Delay between activation and deactivation of compressed mode in package 4 test case 8.4.1.43 | F | 5.5.0 | 5.6.0 | T1-031425 |
| TP-22 | TP-030282 | 617 | | CR 34.123-1 Rel-5: P3 TC 8.4.1.28 Measurement Control and Report: UE internal measurement for events 6F and 6G | F | 5.5.0 | 5.6.0 | T1-031442 |
| TP-22 | TP-030282 | 618 | | CR 34.123-1 Rel-5: Removal of P3 TC 10.1.3.3.3 Incoming call / U9 mobile terminating call confirmed / termination requested by the user | F | 5.5.0 | 5.6.0 | T1-031443 |
| TP-22 | TP-030282 | 619 | | General correction of CM TGD parameter | F | 5.5.0 | 5.6.0 | T1-031453 |
| TP-22 | TP-030282 | 624 | | Correction to GMM P2 test case 12.4.2.2 | F | 5.5.0 | 5.6.0 | T1-031474 |
| TP-22 | TP-030282 | 625 | | Correction to GMM P4 test case 12.4.1.4c | F | 5.5.0 | 5.6.0 | T1-031475 |
| TP-22 | TP-030282 | 592 | 1 | Maintenance of low priority test case 11.2.1 Network initiated PDP context modification | F | 5.5.0 | 5.6.0 | T1-031488 |
| TP-22 | TP-030282 | 628 | | Package 3 test case 8.3.2.11 | F | 5.5.0 | 5.6.0 | T1-031494 |
| TP-22 | TP-030282 | 630 | | Low priority test cases 8.2.5.4 | F | 5.5.0 | 5.6.0 | T1-031496 |
| TP-22 | TP-030282 | 632 | | Package 4 test case 8.2.1.26 | F | 5.5.0 | 5.6.0 | T1-031498 |
| TP-22 | TP-030282 | 633 | | Package 4 test case 9.5.7.1 | F | 5.5.0 | 5.6.0 | T1-031499 |
| TP-22 | TP-030282 | 634 | | Low priority test cases 8.2.3.26 | F | 5.5.0 | 5.6.0 | T1-031500 |
| TP-22 | TP-030282 | 636 | | Low priority test cases 8.3.1.29 and 8.3.1.30 | F | 5.5.0 | 5.6.0 | T1-031502 |
| TP-22 | TP-030282 | 637 | | Low priority test cases 8.3.1.26 and 8.3.1.28 | F | 5.5.0 | 5.6.0 | T1-031503 |
| TP-22 | TP-030282 | 640 | | Editorial Correction to RRC test case 8.3.2.13 | F | 5.5.0 | 5.6.0 | T1-031512 |
| TP-22 | TP-030282 | 644 | | Correction to clause 8.1.2.1 to match TTCN | F | 5.5.0 | 5.6.0 | T1-031525 |
| TP-22 | TP-030282 | 647 | | Correction to TC 8.4.1.5 (Package 1) | F | 5.5.0 | 5.6.0 | T1-031531 |
| TP-22 | TP-030282 | 622 | 1 | Correction to RRC P1 test case 8.1.1.8 | F | 5.5.0 | 5.6.0 | T1-031577 |
| TP-22 | TP-030282 | 642 | 1 | Correction to GMM Low Priority test case 12.4.3.3 | F | 5.5.0 | 5.6.0 | T1-031578 |
| TP-22 | TP-030282 | 631 | 1 | Traffic volume measurement test cases | F | 5.5.0 | 5.6.0 | T1-031582 |
| TP-22 | TP-030282 | 635 | 1 | Package 2 test case 8.4.1.14 | F | 5.5.0 | 5.6.0 | T1-031583 |
| TP-22 | TP-030282 | 607 | 1 | Corrections to RRC test cases affected by NAS timer T3317 | F | 5.5.0 | 5.6.0 | T1-031587 |
| TP-22 | TP-030282 | 603 | 1 | Removal of session management test cases on QoS negotiation (Package 3+4) | F | 5.5.0 | 5.6.0 | T1-031599 |
| TP-22 | TP-030282 | 638 | 1 | Package 2 test case 8.4.1.7 | F | 5.5.0 | 5.6.0 | T1-031630 |
| TP-22 | TP-030282 | 601 | 1 | New RLC test case on reconfiguration of RLC parameters by upper layers | F | 5.5.0 | 5.6.0 | T1-031631 |
| TP-22 | TP-030282 | 604 | 1 | Introduction of test cases on A-GPS positioning | F | 5.5.0 | 5.6.0 | T1-031632 |
| TP-22 | TP-030282 | 598 | 1 | P2 Idle Mode 6.2.1.1 | F | 5.5.0 | 5.6.0 | T1-031634 |
| TP-22 | TP-030282 | 608 | 1 | Updates to 6.2 series test cases | F | 5.5.0 | 5.6.0 | T1-031635 |
| TP-22 | TP-030282 | 643 | 1 | Correction to Package 1 test case 7.2.3.13. | F | 5.5.0 | 5.6.0 | T1-031638 |
| TP-22 | TP-030282 | 593 | 1 | P2 Inter-system handover | F | 5.5.0 | 5.6.0 | T1-031640 |
| TP-22 | TP-030282 | 594 | 1 | P4 Inter-system handover | F | 5.5.0 | 5.6.0 | T1-031641 |
| TP-22 | TP-030282 | 621 | 2 | Modification to RRC TC 8.3.3.1 – Assign different C-RNTI in UTRAN MOBILITY INFORMATION | F | 5.5.0 | 5.6.0 | T1-031642 |
| TP-22 | TP-030282 | 609 | 1 | Corrections and updates on 8.1 RRC Connection Management Procedure for TDD mode | F | 5.5.0 | 5.6.0 | T1-031646 |
| TP-22 | TP-030282 | 610 | 1 | Corrections and updates on 8.1.6 RRC Connection Management Procedure for TDD mode, Direct Transfer | F | 5.5.0 | 5.6.0 | T1-031647 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-22 | TP-030282 | 611 | 1 | Corrections and updates on 8.2.1 Radio Bearer control procedure, Radio Bearer Establishment for TDD mode | F | 5.5.0 | 5.6.0 | T1-031648 |
| TP-22 | TP-030282 | 612 | 1 | Corrections and updates on 8.2.2 Radio Bearer control procedure, Radio Bearer Reconfiguration for TDD mode | F | 5.5.0 | 5.6.0 | T1-031649 |
| TP-22 | TP-030282 | 613 | 1 | Correction of references for section 18, RAB testing of TDD 1.28 Mcps option | F | 5.5.0 | 5.6.0 | T1-031650 |
| TP-22 | TP-030282 | 626 | | CR for P1 test cases 8.3.4.1 and 8.4.1.1 | F | 5.5.0 | 5.6.0 | T1-031655 |
| TP-22 | TP-030282 | 646 | 1 | Removal of package 1 RRC test case 8.2.5.1 –NOT IMPLEMENTED-NOT AVAILABLE ON TIME- | F | 5.5.0 | 5.6.0 | T1-031656 |
| TP-22 | TP-030282 | 599 | 1 | CR 34.123-1 Rel-5: 12.4.2.4 Combined routing area updating / rejected / PLMN not allowed | F | 5.5.0 | 5.6.0 | T1-031657 |
| TP-22 | TP-030282 | 584 | 1 | Section 7.1.1: correction of coding of the Target Channel Type Field on FACH for TDD | F | 5.5.0 | 5.6.0 | T1-031667 |
| TP-22 | TP-030282 | 605 | 1 | Removal of Low priority RRC Measurement test cases | F | 5.5.0 | 5.6.0 | T1-031668 |
| TP-22 | TP-030282 | 606 | 1 | New RRC test case on soft handover for muliple radio links | F | 5.5.0 | 5.6.0 | T1-031672 |
| TP-22 | TP-030282 | 591 | 2 | Clarifications in low priority test case 11.1.2 PDP context activation requested by the network, successful and unsuccessful | F | 5.5.0 | 5.6.0 | T1-031679 |
| TP-22 | TP-030282 | 600 | 3 | CR 34.123-1 Rel-5: 12.4.2.5a Combined routing area updating / rejected / roaming not allowed in this location area | F | 5.5.0 | 5.6.0 | T1-031681 |
| TP-22 | TP-030282 | 595 | 1 | CR on Package 1 SM test case 11.1.1.1 Attach initiated by context activation/QoS Offered by Network is the QoS Requested | F | 5.5.0 | 5.6.0 | T1-031682 |
| TP-22 | TP-030282 | 648 | | General Modification to clause 9 – MM test cases – to be run only in NMOII | F | 5.5.0 | 5.6.0 | T1-031683 |
| TP-22 | TP-030282 | 645 | 2 | Correction to package 3 test case 14.2.51b | F | 5.5.0 | 5.6.0 | T1-031685 |
| TP-22 | TP-030282 | 623 | 2 | Correction to RRC P2 test case 8.4.1.17 | F | 5.5.0 | 5.6.0 | T1-031686 |
| TP-22 | TP-030282 | 629 | 2 | Package 1 test case 8.1.2.2 | F | 5.5.0 | 5.6.0 | T1-031688 |
| TP-22 | TP-030282 | 649 | | CR to P2 GMM TC 12.2.1.3 | F | 5.5.0 | 5.6.0 | T1-031689 |
| TP-22 | TP-030282 | 596 | 1 | CR on Package 1 SM test cases 11.3.1 PDP context deactivation initiated by the UE and 11.3.2 PDP context deactivation initiated by the UE | F | 5.5.0 | 5.6.0 | T1-031696 |
| TP-22 | TP-030282 | 616 | | Modification for GMM test cases | F | 5.5.0 | 5.6.0 | T1-031708 |
| TP-22 | TP-040040 | 260 | - | Correction to RLC test case 7.2.3.35 | F | 5.6.0 | 5.7.0 | T1-040065 |
| TP-23 | TP-040040 | 646 | 1 | Removal of package 1 RRC test case 8.2.5.1 | F | 5.6.0 | 5.7.0 | T1-031656 |
| TP-23 | TP-040040 | 652 | 2 | Corrections to prose for test case 7.1.1.1 | F | 5.6.0 | 5.7.0 | T1-040402 |
| TP-23 | TP-040040 | 653 | 1 | Corrections to prose for test cases 8.1.1.4, 8.1.1.5 and 8.1.1.6 | F | 5.6.0 | 5.7.0 | T1-040268 |
| TP-23 | TP-040040 | 654 | 1 | Clarification of Clause 8.3.1.1 | F | 5.6.0 | 5.7.0 | T1-040314 |
| TP-23 | TP-040040 | 655 | 1 | Corrections to prose for RRC test case 8.3.1.22 | F | 5.6.0 | 5.7.0 | T1-040315 |
| TP-23 | TP-040040 | 656 | 1 | Correction to prose for test case 8.3.2.7 | F | 5.6.0 | 5.7.0 | T1-040269 |
| TP-23 | TP-040040 | 658 | - | Correction to Multi PLMN MM test cases. | F | 5.6.0 | 5.7.0 | T1-040043 |
| TP-23 | TP-040040 | 659 | - | Correction to Multi PLMN GMM test cases. | F | 5.6.0 | 5.7.0 | T1-040044 |
| TP-23 | TP-040040 | 661 | - | Corrections to Package 1 RLC AM test cases to align with TTCN implementation and correct test case 7.2.3.33 (Revision of T1-040096) | F | 5.6.0 | 5.7.0 | T1-040262 |
| TP-23 | TP-040040 | 662 | - | Corrections to TMSI Status usage in GMM test cases | F | 5.6.0 | 5.7.0 | T1-040350 |
| TP-23 | TP-040040 | 663 | - | Correction to Package 2 Inter-system handover testcase 8.3.7.4 | F | 5.6.0 | 5.7.0 | T1-040054 |
| TP-23 | TP-040040 | 664 | - | Introduction of new test cases for lossless SRNS relocation in L2/PDCP, clause 7.3 | F | 5.6.0 | 5.7.0 | T1-040058 |
| TP-23 | TP-040040 | 665 | - | Clarification of initial condition for 8.1.1.1 | F | 5.6.0 | 5.7.0 | T1-040063 |
| TP-23 | TP-040040 | 666 | - | Correction to RLC test case 7.2.3.19 | F | 5.6.0 | 5.7.0 | T1-040064 |
| TP-23 | TP-040040 | 667 | - | New HSDPA radio bearer test cases | B | 5.6.0 | 5.7.0 | T1-040074 |
| TP-23 | TP-040040 | 668 | - | Corrections to package 2 test RRC tc 8_2_2_23-unclassified test RRC tc 8_1_3_6-unclassified test RRC tc 8_1_6_4-unclassified test RRC tc 8_2_6_36 | D | 5.6.0 | 5.7.0 | T1-040082 |
| TP-23 | TP-040040 | 669 | - | Correction to Unclassified tests RRC tc 8_3_1_29 | F | 5.6.0 | 5.7.0 | T1-040085 |
| TP-23 | TP-040040 | 670 | - | Correction to Unclassified tests RRC tc 8_3_7_10 | F | 5.6.0 | 5.7.0 | T1-040086 |
| TP-23 | TP-040040 | 670 | - | CR to 34.123-1 REL-5; Correction to Unclassified | F | 5.6.0 | 5.7.0 | T1-040086 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | tests RRC tc 8_3_7_10 | | | | |
| TP-23 | TP-040040 | 671 | - | Correction to Unclassified tests RRC tc 8_3_1_18 | F | 5.6.0 | 5.7.0 | T1-040089 |
| TP-23 | TP-040040 | 672 | - | Correction to package 4 RRC test case 8.3.2.2 | F | 5.6.0 | 5.7.0 | T1-040090 |
| TP-23 | TP-040040 | 673 | - | Correction of a test step number given in the Test Requirement for Package 1 test case 12.9.2 | F | 5.6.0 | 5.7.0 | T1-040101 |
| TP-23 | TP-040040 | 674 | - | Corrections to P3 Cell Selection (HCS) test cases. | F | 5.6.0 | 5.7.0 | T1-040110 |
| TP-23 | TP-040040 | 675 | - | Corrections to P1 RRC test cases 8.3.1.1 and 8.3.1.3 | F | 5.6.0 | 5.7.0 | T1-040112 |
| TP-23 | TP-040040 | 677 | - | Corrections to P2 RRC test case 8.3.1.4 | F | 5.6.0 | 5.7.0 | T1-040113 |
| TP-23 | TP-040040 | 678 | - | Correction to P2 RRC test case 8.3. 1.22 | F | 5.6.0 | 5.7.0 | T1-040114 |
| TP-23 | TP-040040 | 679 | - | Removal of low priority GMM test cases 12.4.1.1c and 12.4.2.3a | F | 5.6.0 | 5.7.0 | T1-040116 |
| TP-23 | TP-040040 | 680 | - | Correction to 8.4.1.41 (P4) | F | 5.6.0 | 5.7.0 | T1-040127 |
| TP-23 | TP-040040 | 681 | - | Correction to RRC P4 TC 8.4.1.41 due to RAN CR 2146. | F | 5.6.0 | 5.7.0 | T1-040132 |
| TP-23 | TP-040040 | 682 | - | Correction to RRC P1 TC 8.1.1.7 | F | 5.6.0 | 5.7.0 | T1-040135 |
| TP-23 | TP-040040 | 683 | - | Correction to Package 2 idle mode test cases 6.2.2.2 and 6.2.2.3 | F | 5.6.0 | 5.7.0 | T1-040159 |
| TP-23 | TP-040040 | 684 | - | Correction to 7.2.3.21 (P1) | F | 5.6.0 | 5.7.0 | T1-040170 |
| TP-23 | TP-040040 | 685 | - | Corrections to Package 2 MM Test Case 9.3.1 | F | 5.6.0 | 5.7.0 | T1-040173 |
| TP-23 | TP-040040 | 686 | - | Correction to Unclassified tests RRC test cases 8_2_6_6.. | F | 5.6.0 | 5.7.0 | T1-040183 |
| TP-23 | TP-040040 | 687 | - | Correction to low priority inter-RAT cell change order test cases 8.3.11.4 & 8.3.11.6. Merge of T1-040081 and T1-040115. | F | 5.6.0 | 5.7.0 | T1-040187 |
| TP-23 | TP-040040 | 688 | - | Future compatibility of RRC critical extension testing (Not implementable) | F | 5.6.0 | 5.7.0 | T1-040236 |
| TP-23 | TP-040040 | 689 | - | CR to 34.123-1 REL-5; Correction to Unclassified tests RRC tc 8_3_9_2 | F | 5.6.0 | 5.7.0 | T1-040237 |
| TP-23 | TP-040040 | 690 | - | CR to 34.123-1 REL-5; Correction to Unclassified tests RRC tc 8_3_9_4 | F | 5.6.0 | 5.7.0 | T1-040238 |
| TP-23 | TP-040040 | 691 | - | Correction to package 4 RRC test case 8.3.9.3 | F | 5.6.0 | 5.7.0 | T1-040239 |
| TP-23 | TP-040040 | 692 | - | Removal of 8.2.2.25 (P3) and correction to 8.2.2.10 (P2) for clarification | F | 5.6.0 | 5.7.0 | T1-040240 |
| TP-23 | TP-040040 | 693 | - | Corrections of 8.2.1.26 (P4) (Revision of T1-040266) | F | 5.6.0 | 5.7.0 | T1-040241 |
| TP-23 | TP-040040 | 694 | - | Correction to handling of EnteredParameter IE in package 1 test cases 8.1.1.1, 8.1.1.7, and 8.1.1.8; revision of T1-040060 | F | 5.6.0 | 5.7.0 | T1-040242 |
| TP-23 | TP-040040 | 695 | - | Corrections to TestCases 8.3.4.1 and 8.3.4.3 | F | 5.6.0 | 5.7.0 | T1-040243 |
| TP-23 | TP-040040 | 696 | - | Seamless SRNS relocation test cases for TS 34.123-1 v5.6.0 (Revision of T1-040129) | F | 5.6.0 | 5.7.0 | T1-040244 |
| TP-23 | TP-040040 | 697 | - | Corrections to the Package 1 TestCase 8.1.2.2 | F | 5.6.0 | 5.7.0 | T1-040245 |
| TP-23 | TP-040040 | 698 | - | Correction to package 2 RRC test case 8.1.10.1 | F | 5.6.0 | 5.7.0 | T1-040255 |
| TP-23 | TP-040040 | 699 | - | Correction to P2 MAC test case 7.1.3.1 | F | 5.6.0 | 5.7.0 | T1-040261 |
| TP-23 | TP-040040 | 700 | - | Correction to GCF package 1 RLC testcases 7.2.3.26 and 7.2.3.27 | F | 5.6.0 | 5.7.0 | T1-040264 |
| TP-23 | TP-040040 | 701 | - | Correction to 8.4.1.30 (P3) – Revision of T1-040125 | F | 5.6.0 | 5.7.0 | T1-040265 |
| TP-23 | TP-040040 | 702 | - | Correction to 8.3.1.30 (Low priority) – Revision of T1-040128 | F | 5.6.0 | 5.7.0 | T1-040267 |
| TP-23 | TP-040040 | 703 | - | Correction to RRC low priority TC 8.2.6.29 revision of T1-040182. | F | 5.6.0 | 5.7.0 | T1-040274 |
| TP-23 | TP-040040 | 704 | - | Correction to TestCase 8.1.2.3 | F | 5.6.0 | 5.7.0 | T1-040300 |
| TP-23 | TP-040040 | 705 | - | Corrections to TestCase 8.3.1.15 | F | 5.6.0 | 5.7.0 | T1-040301 |
| TP-23 | TP-040040 | 706 | - | Correction to TestCase 8.3.2.4 | F | 5.6.0 | 5.7.0 | T1-040302 |
| TP-23 | TP-040040 | 707 | - | Corrections to the testcase 8.2.2.35 | F | 5.6.0 | 5.7.0 | T1-040303 |
| TP-23 | TP-040040 | 708 | - | Corrections to the RRC Test cases 8.1.3.1, 8.1.3.2, 8.1.3.3, 8.1.3.4 & 8.1.3.5 | F | 5.6.0 | 5.7.0 | T1-040304 |
| TP-23 | TP-040040 | 709 | - | Correction to Package II MM test case 9.4.8 | F | 5.6.0 | 5.7.0 | T1-040305 |
| TP-23 | TP-040040 | 710 | - | Correction to handling of EnteredParameter IE in test cases 8.1.1.9, 8.3.1.5, and 8.3.1.6 | F | 5.6.0 | 5.7.0 | T1-040306 |
| TP-23 | TP-040040 | 711 | - | Modifications in clause 11.2 | F | 5.6.0 | 5.7.0 | T1-040310 |
| TP-23 | TP-040040 | 712 | - | Correction to RRC P4 TC 8.2.6.37 | F | 5.6.0 | 5.7.0 | T1-040351 |
| TP-23 | TP-040040 | 713 | - | Corrections to PDP context deactivation procedure test cases | F | 5.6.0 | 5.7.0 | T1-040353 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-23 | TP-040040 | 714 | - | Modification to NAS TC 12.3.2.1 to prevent an optional ATTACH REQUEST during the RRC connection release procedure. (Revision of T1-040059 and T1-040235) | F | 5.6.0 | 5.7.0 | T1-040355 |
| TP-23 | TP-040040 | 715 | - | Correction to GMM Package II test case 12.2.1.7 | F | 5.6.0 | 5.7.0 | T1-040356 |
| TP-23 | TP-040040 | 716 | - | Correction to package 4 test case 12.4.1.4b | F | 5.6.0 | 5.7.0 | T1-040359 |
| TP-23 | TP-040040 | 717 | - | Correction to GMM test case 12.4.2.1 | F | 5.6.0 | 5.7.0 | T1-040361 |
| TP-23 | TP-040040 | 718 | - | Correction to GMM test case 12.9.4 | F | 5.6.0 | 5.7.0 | T1-040362 |
| TP-23 | TP-040040 | 719 | - | Correction to Package 1 GMM test case 12.3.1.2 | F | 5.6.0 | 5.7.0 | T1-040363 |
| TP-23 | TP-040040 | 720 | - | Correction to GMM test case 12.4.1.1a | F | 5.6.0 | 5.7.0 | T1-040364 |
| TP-23 | TP-040040 | 721 | - | Correction to some of the GMM test cases to include CS registration | F | 5.6.0 | 5.7.0 | T1-040365 |
| TP-23 | TP-040040 | 722 | - | Correction to some of the GMM test cases | F | 5.6.0 | 5.7.0 | T1-040394 |
| TP-23 | TP-040040 | 723 | - | Corrections to add minimum set of TFCIs to RB test cases | F | 5.6.0 | 5.7.0 | T1-040396 |
| TP-23 | TP-040040 | 724 | - | New HSDPA MAC test cases | F | 5.6.0 | 5.7.0 | T1-040398 |
| TP-23 | TP-040040 | 725 | - | New HSDPA RRC test cases (as of T1-040072rev1) | F | 5.6.0 | 5.7.0 | T1-040399 |
| TP-23 | TP-040040 | 726 | - | New SM test case for QoS extension for rates above 8640 kbps | F | 5.6.0 | 5.7.0 | T1-040400 |
| TP-23 | TP-040040 | 727 | - | Splitting ISHO high data rate tests 8.3.7.2 and 8.3.7.3 (Revision of T1-040143 and T1-040357). | F | 5.6.0 | 5.7.0 | T1-040406 |
| TP-23 | TP-040040 | 728 | - | New test case for approved I/B UL:64 DL:768 kbps PS RAB (TTI=20ms option) – Revision of T1-040108 and T1-040395 | F | 5.6.0 | 5.7.0 | T1-040407 |
| TP-23 | TP-040040 | 729 | - | Correction to package 2 GMM test case 12.6.1.2 | F | 5.6.0 | 5.7.0 | T1-040410 |
| TP-23 | TP-040040 | 730 | - | Correction to CC test case 10.1.2.4.11 | F | 5.6.0 | 5.7.0 | T1-040415 |
| TP-23 | TP-040040 | 731 | - | Add 1.28 Mcps TDD content in clause 8.2.4.29 | F | 5.6.0 | 5.7.0 | T1-040375 |
| TP-23 | TP-040040 | 732 | - | Add 1.28 Mcps TDD content of Physical channel reconfiguration test case | F | 5.6.0 | 5.7.0 | T1-040376 |
| TP-23 | TP-040040 | 733 | - | Add 1.28 Mcps TDD content of Quality measurements clause 8.4.1.22 | F | 5.6.0 | 5.7.0 | T1-040377 |
| TP-23 | TP-040040 | 734 | - | Add 1.28 Mcps TDD content of Inter-frequency measurement for event 2A | F | 5.6.0 | 5.7.0 | T1-040378 |
| TP-23 | TP-040040 | 735 | - | Add 1.28 Mcps TDD content for internal measurement for event 6A and 6B | F | 5.6.0 | 5.7.0 | T1-040381 |
| TP-23 | TP-040040 | 736 | - | Add 1.28 Mcps TDD content for UE internal measurement t for event 6G | F | 5.6.0 | 5.7.0 | T1-040382 |
| TP-23 | TP-040040 | 737 | - | Add 1.28 Mcps TDD content for UE internal measurement t for event 6F | B | 5.6.0 | 5.7.0 | T1-040383 |
| TP-23 | TP-040040 | 738 | - | Add 1.28 Mcps TDD content for UE Traffic Volume measurement | F | 5.6.0 | 5.7.0 | T1-040384 |
| TP-23 | TP-040040 | 739 | - | Add 1.28 Mcps TDD content for UE internal measurement, event 6c | F | 5.6.0 | 5.7.0 | T1-040385 |
| TP-23 | TP-040040 | 740 | - | Add 1.28 Mcps TDD content for UE internal measurement, event 6d | F | 5.6.0 | 5.7.0 | T1-040386 |
| TP-23 | TP-040040 | 741 | - | Add 1.28 Mcps TDD content for UE internal measurement, event 6e | F | 5.6.0 | 5.7.0 | T1-040387 |
| TP-23 | TP-040040 | 742 | - | Add 1.28 Mcps TDD content for Intra-frequency measurement, event1H and 1I (TDD) | F | 5.6.0 | 5.7.0 | T1-040388 |
| TP-23 | TP-040040 | 743 | - | Add 1.28 Mcps TDD content of Intra-frequency measurement for transition from idle mode to CELL_DCH state (TDD) | F | 5.6.0 | 5.7.0 | T1-040390 |
| TP-23 | TP-040040 | 744 | - | Add 1.28 Mcps TDD content of Intra-frequency measurement transition from idle mode to CELL_FACH state (TDD) | F | 5.6.0 | 5.7.0 | T1-040391 |
| TP-23 | TP-040040 | 745 | - | Add 1.28 Mcps TDD content of Intra-frequency measurement transition from CELL_DCH to CELL_FACH state (TDD) | F | 5.6.0 | 5.7.0 | T1-040392 |
| TP-23 | TP-040040 | 746 | - | Correction to package 3 test cases 16.1.2 and 16.2.2package 3 test cases 16.1.2and 16.2.2 | F | 5.6.0 | 5.7.0 | T1-040175 |
| TP-23 | TP-040040 | 747 | - | Correction to package 2 GMM test case 12.4.2.2 package 2 GMM test case 12.4.2.2 | F | 5.6.0 | 5.7.0 | T1-040176 |
| TP-23 | TP-040040 | 748 | - | Corrections to SM QoS negotiation test cases negotiation test cases | F | 5.6.0 | 5.7.0 | T1-040366 |
| TP-23 | TP-040040 | 749 | - | Correct editorial errors and reference point for PRACH and UpPCH for 1.28 Mcps TDD in section 7.1.2.4 of TS34.123-17.1.2.4: Correct for PRACH and UpPCH | F | 5.6.0 | 5.7.0 | T1-040374 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-23 | TP-040040 | 750 | - | Add 1.28 Mcps TDD content of Inter-frequency measurement for event 2B and 2E | F | 5.6.0 | 5.7.0 | T1-040379 |
| TP-23 | TP-040040 | 751 | - | Add 1.28 Mcps TDD content of Inter-frequency measurement for event 2D and 2F | F | 5.6.0 | 5.7.0 | T1-040380 |
| TP-23 | TP-040040 | 752 | - | Adding of new test cases for events 1G for 1.28 Mcps TDD | B | 5.6.0 | 5.7.0 | T1-040389 |
| TP-23 | - | - | - | Adaptation of CR 688 in T1-040236 to 34.123-1 V.5.6.0 (was originally written against v.5.5.0) and editorial corrections on implementation of CRs in T1-040353, T1-040043, T1-040264, and T1-040314 | - | 5.7.0 | 5.7.1 | - |
| TP-24 | TP-040115 | 764 | - | 'Emergency call establishment' as one of the CM Service Type in 10.1.2.1.1 | F | 5.7.1 | 5.8.0 | T1-040557 |
| TP-24 | TP-040115 | 810 | - | Correction to Conformance Requirement for P3 CC NAS TCs regarding support for "Prolonged Clearing Procedure". | F | 5.7.1 | 5.8.0 | T1-040671 |
| TP-24 | TP-040115 | 838 | - | Correction to Package 1 SM TC 11.3.1 RAB release location | F | 5.7.1 | 5.8.0 | T1-040962 |
| TP-24 | TP-040115 | 839 | - | Correction to Package 1 SM TC 11.3.2 RAB release location | F | 5.7.1 | 5.8.0 | T1-040963 |
| TP-24 | TP-040115 | 851 | - | Correction to low priority TC 11.1.2 | F | 5.7.1 | 5.8.0 | T1-040980 |
| TP-24 | TP-040115 | 759 | - | Correction to low priority GMM TC 12.4.1.5 | F | 5.7.1 | 5.8.0 | T1-040527 |
| TP-24 | TP-040115 | 760 | - | Correction to P4 GMM TCs 12.2.1.5d and 12.4.1.4d | F | 5.7.1 | 5.8.0 | T1-040528 |
| TP-24 | TP-040115 | 855 | - | Correction to several GMM TCs to include equivalent PLMN IE | F | 5.7.1 | 5.8.0 | T1-040529 |
| TP-24 | TP-040115 | 831 | - | CR 34.123-1 Rel-5: Corrections to MM test cases to include GMM procedures | F | 5.7.1 | 5.8.0 | T1-040949 |
| TP-24 | TP-040115 | 832 | - | Correction to package 3 GMM test case 12.4.2.5a | F | 5.7.1 | 5.8.0 | T1-040950 |
| TP-24 | TP-040115 | 833 | - | Modification for GMM test cases (P4 and low priority test cases) | F | 5.7.1 | 5.8.0 | T1-040951 |
| TP-24 | TP-040115 | 841 | - | Correction to P4 GMM Test Case 12.4.1.1b | F | 5.7.1 | 5.8.0 | T1-040966 |
| TP-24 | TP-040115 | 768 | - | Corrections to prose for test cases 8.1.1.4, 8.1.1.5 and 8.1.1.6 | F | 5.7.1 | 5.8.0 | T1-040561 |
| TP-24 | TP-040115 | 769 | - | Editorial correction for 14.2.11, 14.2.39.2 | D | 5.7.1 | 5.8.0 | T1-040565 |
| TP-24 | TP-040115 | 773 | - | Addition of test case for Interactive or background / UL:64 DL:768 kbps / 10 ms TTI | F | 5.7.1 | 5.8.0 | T1-040570 |
| TP-24 | TP-040115 | 830 | - | Correction to low priority radio bearer test cases (minimum set of TFCS) | F | 5.7.1 | 5.8.0 | T1-040947 |
| TP-24 | TP-040115 | 843 | - | Correction to Package III SMS Test Case 16.2.1 (Revision of T1-040548) | F | 5.7.1 | 5.8.0 | T1-040968 |
| TP-24 | TP-040115 | 844 | - | CR 34.123-1 Rel-5: Correction to package 3 SMS test case 16.1.1 | F | 5.7.1 | 5.8.0 | T1-040969 |
| TP-24 | TP-040115 | 835 | - | CR to 34.123-1 Rel-5, New A-GPS test cases | F | 5.7.1 | 5.8.0 | T1-040955 |
| TP-24 | TP-040115 | 778 | - | Correction to initial conditions of Idle Mode test case 6.2.1.6 | F | 5.7.1 | 5.8.0 | T1-040585 |
| TP-24 | TP-040115 | 800 | - | General corrections to section 6 of 34.123-1 (idle mode) | F | 5.7.1 | 5.8.0 | T1-040647 |
| TP-24 | TP-040115 | 823 | - | Changes to test procedure of Idle Mode Cell Reselection test case 6.2.2.3 (Revision of T1-040587) | F | 5.7.1 | 5.8.0 | T1-040937 |
| TP-24 | TP-040115 | 845 | - | Corrections to P2 PLMN and RAT selection test cases in Multi-mode environment (2G/3G case) | F | 5.7.1 | 5.8.0 | T1-040971 |
| TP-24 | TP-040115 | 755 | - | Correction to HSDPA MAC-hs test cases | F | 5.7.1 | 5.8.0 | T1-040519 |
| TP-24 | TP-040115 | 756 | - | New HSDPA MAC-hs reset test case | F | 5.7.1 | 5.8.0 | T1-040520 |
| TP-24 | TP-040115 | 758 | - | Correction to HSDPA radio bearer test cases | F | 5.7.1 | 5.8.0 | T1-040521 |
| TP-24 | TP-040115 | 761 | - | Correction to package 1 MAC testcase 7.1.2.3.1 | F | 5.7.1 | 5.8.0 | T1-040549 |
| TP-24 | TP-040115 | 816 | - | Correction to prose for test case 7.1.1.1 | D | 5.7.1 | 5.8.0 | T1-040682 |
| TP-24 | TP-040115 | 824 | - | Re-instatement of Test Requirements to meet the Test Purpose in 7.2.3.24 and 7.2.3.27 (Merged with T1-040550 and revised from T1-040918) | F | 5.7.1 | 5.8.0 | T1-040938 |
| TP-24 | TP-040115 | 837 | - | CR 34.123-1 Rel-5: Correction to package 2 MAC test case 7.1.3.1 | F | 5.7.1 | 5.8.0 | T1-040958 |
| TP-24 | TP-040115 | 780 | - | Corrections to SRNS relocation PDCP test cases | F | 5.7.1 | 5.8.0 | T1-040973 |
| TP-24 | TP-040115 | 753 | - | CR to TS 34.123-1 R5, Correction to low priority RRC TCs 8.1.8.3 and 8.2.1.13. | F | 5.7.1 | 5.8.0 | T1-040509 |
| TP-24 | TP-040115 | 754 | - | CR to TS 34.123-1 R5, Correction to low priority RRC TCs TC 8.1.6.4, 8.1.9a and 8.1.9b. | F | 5.7.1 | 5.8.0 | T1-040513 |
| TP-24 | TP-040115 | 765 | - | Correction to package 1 test case 8.1.2.9 for BCCH Modification Time in Paging Type 1 message | F | 5.7.1 | 5.8.0 | T1-040558 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-24 | TP-040115 | 766 | - | Correction for RRC Transaction Identifier in test cases 8.1.5.1 and 8.1.5.4 | F | 5.7.1 | 5.8.0 | T1-040559 |
| TP-24 | TP-040115 | 767 | - | Editorial corrections for 8.3.1.1 | D | 5.7.1 | 5.8.0 | T1-040560 |
| TP-24 | TP-040115 | 770 | - | Future compatibility of RRC critical extension testing | F | 5.7.1 | 5.8.0 | T1-040566 |
| TP-24 | TP-040115 | 771 | - | Editorial correction for 8.3.1.31 | D | 5.7.1 | 5.8.0 | T1-040567 |
| TP-24 | TP-040115 | 772 | - | Corrections in Specific Message Contents for clause 8.3.1.5.4 and 8.3.1.6.4 | F | 5.7.1 | 5.8.0 | T1-040568 |
| TP-24 | TP-040115 | 774 | - | CR to 34.123-1 Rel-5, Correction to package 4 RRC test case 8.2.2.35 | F | 5.7.1 | 5.8.0 | T1-040575 |
| TP-24 | TP-040115 | 775 | - | CR to 34.123-1 Rel-5, Correction to package 4 RRC test case 8.2.3.29 | F | 5.7.1 | 5.8.0 | T1-040576 |
| TP-24 | TP-040115 | 776 | - | CR to 34.123-1 Rel-5, Correction to package 2 RRC test case 8.3.1.22 | F | 5.7.1 | 5.8.0 | T1-040577 |
| TP-24 | TP-040115 | 777 | - | Correction to package 1 RRC test case 8.2.4.1a | F | 5.7.1 | 5.8.0 | T1-040581 |
| TP-24 | TP-040115 | 779 | - | Changes to test procedure of Cell Reselection Case 8.3.9.3 | F | 5.7.1 | 5.8.0 | T1-040589 |
| TP-24 | TP-040115 | 781 | - | Correction to number of reported cells in RRC P2 test case 8.4.1.7 | F | 5.7.1 | 5.8.0 | T1-040625 |
| TP-24 | TP-040115 | 782 | - | Correction to Low Priority RRC Cell Change Order Test Cases | F | 5.7.1 | 5.8.0 | T1-040626 |
| TP-24 | TP-040115 | 783 | - | Removal of 8.2.1.26 (P4) | F | 5.7.1 | 5.8.0 | T1-040627 |
| TP-24 | TP-040115 | 784 | - | Correction to P4 RRC Cell Change Order Test Cases | F | 5.7.1 | 5.8.0 | T1-040628 |
| TP-24 | TP-040115 | 785 | - | Correction to P3 HCS test case 8.3.2.13 | F | 5.7.1 | 5.8.0 | T1-040629 |
| TP-24 | TP-040115 | 786 | - | Correction to P2 RRC test case 8.2.4.4 | F | 5.7.1 | 5.8.0 | T1-040630 |
| TP-24 | TP-040115 | 787 | - | Corrections to P4 RRC UTRAN to GERAN Cell Reselection test cases | F | 5.7.1 | 5.8.0 | T1-040631 |
| TP-24 | TP-040115 | 788 | - | Correction to Low Priority RRC Cell Reselection test cases | F | 5.7.1 | 5.8.0 | T1-040632 |
| TP-24 | TP-040115 | 789 | - | Corrections to P2 RRC test case 8.3.2.4 | F | 5.7.1 | 5.8.0 | T1-040633 |
| TP-24 | TP-040115 | 790 | - | Corrections to P2 RRC test case 8.3.2.1 | F | 5.7.1 | 5.8.0 | T1-040634 |
| TP-24 | TP-040115 | 791 | - | Correction to P2 test case 8.4.1.18 | F | 5.7.1 | 5.8.0 | T1-040635 |
| TP-24 | TP-040115 | 792 | - | Correction to P3 Inter Rat Measurement test cases | F | 5.7.1 | 5.8.0 | T1-040637 |
| TP-24 | TP-040115 | 793 | - | Errors correction in section 8.4.1.7A for TDD of TS34.123-1 | F | 5.7.1 | 5.8.0 | T1-040639 |
| TP-24 | TP-040115 | 794 | - | Errors correction in section 8.4.1.29 of TS34.123-1 | F | 5.7.1 | 5.8.0 | T1-040640 |
| TP-24 | TP-040115 | 795 | - | To add the description of "Primary CCPCH info" (for TDD) in 8.1.6.3. | F | 5.7.1 | 5.8.0 | T1-040641 |
| TP-24 | TP-040115 | 796 | - | To add the description of "Primary CCPCH info" (for TDD) in 8.2.6.8. | F | 5.7.1 | 5.8.0 | T1-040642 |
| TP-24 | TP-040115 | 797 | - | Errors correction in section 8.3.1.4.4of TS34.123-1 | F | 5.7.1 | 5.8.0 | T1-040644 |
| TP-24 | TP-040115 | 798 | - | Errors correction in section 8.4.1.2a of TS34.123-1 | F | 5.7.1 | 5.8.0 | T1-040645 |
| TP-24 | TP-040115 | 799 | - | Corrections to test case 8.2.1.27 (Low priority) | F | 5.7.1 | 5.8.0 | T1-040646 |
| TP-24 | TP-040115 | 801 | - | Corrections in Security Mode Command for 8.1.7.1 and 8.1.7.2 test cases. | F | 5.7.1 | 5.8.0 | T1-040648 |
| TP-24 | TP-040115 | 802 | - | CR to TS 34.123-1 R5, Correction to P1 RRC TC 8.4.1.1. | F | 5.7.1 | 5.8.0 | T1-040651 |
| TP-24 | TP-040115 | 803 | - | Add HCR TDD content of Inter-frequency measurement for event 2A | F | 5.7.1 | 5.8.0 | T1-040658 |
| TP-24 | TP-040115 | 804 | - | Add HCR TDD content of Inter-frequency measurement for event 2B and 2E | F | 5.7.1 | 5.8.0 | T1-040659 |
| TP-24 | TP-040115 | 805 | - | Add HCR TDD content for UE internal measurement, event 6c | F | 5.7.1 | 5.8.0 | T1-040661 |
| TP-24 | TP-040115 | 806 | - | Add HCR TDD content for UE internal measurement, event 6d | F | 5.7.1 | 5.8.0 | T1-040662 |
| TP-24 | TP-040115 | 807 | - | Add HCR TDD content for UE internal measurement, event 6e | F | 5.7.1 | 5.8.0 | T1-040663 |
| TP-24 | TP-040115 | 808 | - | Adding of new test cases for events 1G for HCR TDD | B | 5.7.1 | 5.8.0 | T1-040664 |
| TP-24 | TP-040115 | 809 | - | Tests for HCR TDD RAB combinations | F | 5.7.1 | 5.8.0 | T1-040666 |
| TP-24 | TP-040115 | 811 | - | Corrections to specific message contents of test case 8.1.2.9 to support CS Domain. | F | 5.7.1 | 5.8.0 | T1-040668 |
| TP-24 | TP-040115 | 812 | - | Correction to RRC Package 2 TC 8.4.1.17 on Measurement Reporting Interval. | F | 5.7.1 | 5.8.0 | T1-040674 |
| TP-24 | TP-040115 | 813 | - | Correction to 8.3.4.2 test case at Step 6 for Measurement Report Message | F | 5.7.1 | 5.8.0 | T1-040678 |
| TP-24 | TP-040115 | 814 | - | Correction for RRC Transaction Identifier in test | F | 5.7.1 | 5.8.0 | T1-040680 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | cases 8.1.6.1 and 8.1.6.2 | | | | |
| TP-24 | TP-040115 | 815 | - | Correction to New C-RNTI value at Step5 in 8.3.1.11 testcase. | F | 5.7.1 | 5.8.0 | T1-040681 |
| TP-24 | TP-040115 | 817 | - | Editorial correction to 8.2.3.22 (Low Priority) | F | 5.7.1 | 5.8.0 | T1-040710 |
| TP-24 | TP-040115 | 757 | - | Addition of new SRNS relocation (radio link failure) test cases | F | 5.7.1 | 5.8.0 | T1-040715 |
| TP-24 | TP-040115 | 819 | - | CR to 34.123-1 Rel-5: Correction to package 3 RRC test case 8.4.1.26 | F | 5.7.1 | 5.8.0 | T1-040731 |
| TP-24 | TP-040115 | 820 | - | CR to 34.123-1 Rel-5: Correction to package 3 RRC test case 8.2.4.1a | F | 5.7.1 | 5.8.0 | T1-040732 |
| TP-24 | TP-040115 | 853 | - | Correction to low priority TC 8.3.11.3 | F | 5.7.1 | 5.8.0 | T1-040758 |
| TP-24 | TP-040115 | 822 | - | Corrections to TC 8.3.1.30 (Low Priority) | F | 5.7.1 | 5.8.0 | T1-040919 |
| TP-24 | TP-040115 | 825 | - | System Information Block type 1 modification for FACH to DCH:T312 set to 2 seconds in connected mode | F | 5.7.1 | 5.8.0 | T1-040941 |
| TP-24 | TP-040115 | 826 | - | Corrections to Table 8.3.7-1 in relation to Package 2 test cases 8.3.7.x (Editorial Revision of T1-040669) | F | 5.7.1 | 5.8.0 | T1-040942 |
| TP-24 | TP-040115 | 827 | - | Revisions to Package 3 measurement test cases 8.4.1.31 and 8.4.1.40 (Revision of T1-040665) | F | 5.7.1 | 5.8.0 | T1-040943 |
| TP-24 | TP-040115 | 828 | - | Correction of test case description for test case 8.1.6.4 | F | 5.7.1 | 5.8.0 | T1-040944 |
| TP-24 | TP-040115 | 829 | - | CR to 34.123-1 Rel-5, Correction to package 4 RRC test cases 8.2.3.11, 8.2.6.11 and 8.2.6.12 | F | 5.7.1 | 5.8.0 | T1-040945 |
| TP-24 | TP-040115 | 854 | - | CR to 34.123-1 Rel 5: Correction to package 2 RRC test case 8.4.1.2 | F | 5.7.1 | 5.8.0 | T1-040959 |
| TP-24 | TP-040115 | 840 | - | Corrections to Package 2 test case 9.4.2.4 Procedure 2 | F | 5.7.1 | 5.8.0 | T1-040964 |
| TP-24 | TP-040115 | 842 | - | CR to 34.123-1 Rel-5, Corrections to HSDPA RRC test cases | F | 5.7.1 | 5.8.0 | T1-040967 |
| TP-24 | TP-040115 | 846 | - | CR to 34.123-1 Rel-5, New HSDPA RRC test cases | F | 5.7.1 | 5.8.0 | T1-040974 |
| TP-24 | TP-040115 | 847 | - | Corrections to Seamless SRNS relocation RRC test cases (Revision to T1-040712) | F | 5.7.1 | 5.8.0 | T1-040975 |
| TP-24 | TP-040115 | 848 | - | New SRNS relocation test cases (Revision of T1-040714) | F | 5.7.1 | 5.8.0 | T1-040976 |
| TP-24 | TP-040115 | 852 | - | Addition of 6 new Inter-RAT test cases. | F | 5.7.1 | 5.8.0 | T1-040977r1 |
| TP-24 | TP-040115 | 849 | - | Add HCR TDD content of Inter-frequency measurement for event 2D and 2F | F | 5.7.1 | 5.8.0 | T1-040978 |
| TP-24 | TP-040115 | 850 | - | Change to Test Requirement of Cell Reselection Case: 8.3.9.1(Revision of T1-040588) | F | 5.7.1 | 5.8.0 | T1-040979 |
| TP-24 | TP-040115 | 762 | - | Correction to package 2 MM testcase 9.4.2.1 to align with TTCN implementation. | F | 5.7.1 | 5.8.0 | T1-040552 |
| TP-24 | TP-040115 | 763 | - | Correction to package 2 MM testcase 9.4.4 | D | 5.7.1 | 5.8.0 | T1-040553 |
| TP-24 | TP-040115 | 818 | - | CR 34.123-1 Rel-5: Corrections to MM test cases to emergency call support and authentication procedures. | F | 5.7.1 | 5.8.0 | T1-040724 |
| TP-24 | TP-040115 | 821 | - | Correction of Test Requirement in Package 2 test case 9.3.1 | F | 5.7.1 | 5.8.0 | T1-040921 |
| TP-24 | TP-040115 | 834 | - | CR 34.123-1 Rel-5: Correction to package 2 MM test case 9.4.8 | F | 5.7.1 | 5.8.0 | T1-040954 |
| TP-24 | TP-040115 | 836 | - | Correction to package 2 MM testcase 9.1 to align with TTCN implementation.(Revision of T1-040551) | F | 5.7.1 | 5.8.0 | T1-040956 |
| TP-24 | TP-040115 | 856 | - | Correction to Package 2 test case 9.4.2.3 | F | 5.7.1 | 5.8.0 | T1-040961r2 |
| TP-25 | TP-040160 | 853 | - | Correction to package 3 RRC test case 8.2.4.1a | F | 5.8.0 | 5.9.0 | T1-041002 |
| TP-25 | TP-040160 | 854’ | - | System Information Block type 1 modification for FACH to DCH:T312 set to 2 seconds in connected mode | F | 5.8.0 | 5.9.0 | T1-041004 |
| TP-25 | TP-040160 | 855 | - | Correction to number of reported GSM cells in RRC P3 test case 8.4.1.36 | F | 5.8.0 | 5.9.0 | T1-041012 |
| TP-25 | TP-040160 | 856 | - | Correction to prose for Package 3 RRC test case 8.4.1.30 | F | 5.8.0 | 5.9.0 | T1-041019 |
| TP-25 | TP-040160 | 857 | - | Revisions to Package 3 measurement test cases 8.4.1.33 and 8.4.1.40 | F | 5.8.0 | 5.9.0 | T1-041020 |
| TP-25 | TP-040160 | 858 | - | Correction to Package 2 MM TC 9.4.9 – to remove EFLOCI, EFHPLMNwAcT and EFPLMNwAcT USIM field reference | F | 5.8.0 | 5.9.0 | T1-041021 |
| TP-25 | TP-040160 | 859 | - | Correction to Package 2 GMM TC 12.6.1.2 to remove ICS reference from test step. | F | 5.8.0 | 5.9.0 | T1-041023 |
| TP-25 | TP-040160 | 860 | - | Correction to UL and DL TFCS in Package 3 test case 14.2.38e. | F | 5.8.0 | 5.9.0 | T1-041024 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-25 | TP-040160 | 861 | - | Correction to Conformance Requirement for P4 CC NAS TC 10.1.2.7.1 regarding support for “Prolonged Clearing Procedure”. | F | 5.8.0 | 5.9.0 | T1-041026 |
| TP-25 | TP-040160 | 862 | - | Correction to Conformance Requirement for Low Priority CC NAS test cases regarding support for “Prolonged Clearing Procedure”. | F | 5.8.0 | 5.9.0 | T1-041027 |
| TP-25 | TP-040160 | 863 | - | Clarification of the Generic Test Procedure in Clause 14.1.2 of the Radio Bearer Tests | F | 5.8.0 | 5.9.0 | T1-041032 |
| TP-25 | TP-040160 | 864 | - | Editorial Correction to Package 3 Radio Bearer test case 14.2.49.1 | F | 5.8.0 | 5.9.0 | T1-041033 |
| TP-25 | TP-040160 | 865 | - | Removal of package 3 idle mode test case 6.1.2.7 | F | 5.8.0 | 5.9.0 | T1-041042 |
| TP-25 | TP-040160 | 866 | - | Corrections to 8.2.5.4 and 8.3.3.2 | F | 5.8.0 | 5.9.0 | T1-041045 |
| TP-25 | TP-040160 | 867 | - | Corrections to 8.1.9b | F | 5.8.0 | 5.9.0 | T1-041047 |
| TP-25 | TP-040160 | 945 | - | Correction to TC 8.3.7.1, 8.3.7.2 and 8.3.7.2a | F | 5.8.0 | 5. 9.0 | T1-041051 |
| TP-25 | TP-040160 | 868 | - | New MAC test case for TFC selection with extended TFCS. | F | 5.8.0 | 5.9.0 | T1-041052 |
| TP-25 | TP-040160 | 869 | - | Correction to TC 8.3.7.8, 8.3.7.10 and 8.3.7.11 | F | 5.8.0 | 5.9.0 | T1-041053 |
| TP-25 | TP-040160 | 870 | - | Correction of PLMN values for Idle Mode test case. | F | 5.8.0 | 5.9.0 | T1-041062 |
| TP-25 | TP-040160 | 871 | - | Corrections to GMM test cases | F | 5.8.0 | 5.9.0 | T1-041066 |
| TP-25 | TP-040160 | 872 | - | Correction to Inter-system hard handover from UTRAN to GSM overview table | F | 5.8.0 | 5.9.0 | T1-041079 |
| TP-25 | TP-040160 | 873 | - | CR to 34.123-1Rel-5: Correction of 7.1.1.1 for TDD | F | 5.8.0 | 5.9.0 | T1-041082 |
| TP-25 | TP-040160 | 874 | - | CR to 34.123-1 Rel-5: Adding Specific Contents for TDD in 7.1.1.2 | F | 5.8.0 | 5.9.0 | T1-041083 |
| TP-25 | TP-040160 | 875 | - | CR to 34.123-1 Rel-5: Adding Specific Message Contents for 1.28 Mcps TDD in 8.1.2.7 | F | 5.8.0 | 5.9.0 | T1-041085 |
| TP-25 | TP-040160 | 876 | - | CR to 34.123-1 Rel-5: Adding Specific Message Contents for 1.28 Mcps TDD in 8.1.5.1 | F | 5.8.0 | 5.9.0 | T1-041086 |
| TP-25 | TP-040160 | 877 | - | CR to 34.123-1 Rel-5: Adding Specific Message Contents for 1.28 Mcps TDD in 8.2.2.1 | F | 5.8.0 | 5.9.0 | T1-041087 |
| TP-25 | TP-040160 | 878 | - | CR 34.123-1 Rel-5: Corrections to SMS test cases 16.2.1 and 16.2.2 | F | 5.8.0 | 5.9.0 | T1-041101 |
| TP-25 | TP-040160 | 879 | - | Editorial Change in package 1 testcase 7.1.1.8 | D | 5.8.0 | 5.9.0 | T1-041116 |
| TP-25 | TP-040160 | 880 | - | Correction to Package 1 testcase 7.1.2.3.1 for N300 IE sent in SIB1 | F | 5.8.0 | 5.9.0 | T1-041117 |
| TP-25 | TP-040160 | 881 | - | P-TMSI expected in step 5 in package 4 GMM testcase 12.9.8 is incorrect. | D | 5.8.0 | 5.9.0 | T1-041120 |
| TP-25 | TP-040160 | 882 | - | Contradiction between test procedure and test requirement in Package 3 SMS testcase 16.1.1 | F | 5.8.0 | 5.9.0 | T1-041121 |
| TP-25 | TP-040160 | 883 | - | Correction in step 2 in package 2 MM testcase 9.4.2.1 | F | 5.8.0 | 5.9.0 | T1-041122 |
| TP-25 | TP-040160 | 884 | - | Modification in SIB5 content for package 2 testcase 14.4.2.1 | F | 5.8.0 | 5.9.0 | T1-041125 |
| TP-25 | TP-040160 | 885 | - | Changes to Initial Conditions of P4 Inter-RAT Cell Change Order from UTRAN test cases and Inter system cell reselection from UTRAN test cases. | F | 5.8.0 | 5.9.0 | T1-041129 |
| TP-25 | TP-040160 | 886 | - | Correction to P1 MAC test 7.1.1.2 | F | 5.8.0 | 5.9.0 | T1-041134 |
| TP-25 | TP-040160 | 887 | - | New test preamble and postamble for inter-RAT handover/cell change test cases (revision of T1-040779) | F | 5.8.0 | 5.9.0 | T1-041145 |
| TP-25 | TP-040160 | 888 | - | HSDPA Physical Channel Reconfiguration (Hard Handover) | F | 5.8.0 | 5.9.0 | T1-041146 |
| TP-25 | TP-040160 | 889 | - | HSDPA Active Set Update in Soft Handover | F | 5.8.0 | 5.9.0 | T1-041147 |
| TP-25 | TP-040160 | 890 | - | Correction to Package 1 RRC test cases 8.1.7.1 and 8.1.7.2 | F | 5.8.0 | 5.9.0 | T1-041157 |
| TP-25 | TP-040160 | 891 | - | Correction to GMM test cases 12.3.1.7 and 12.4.3.3 (Low Priority) | F | 5.8.0 | 5.9.0 | T1-041163 |
| TP-25 | TP-040160 | 892 | - | Handling of PS support in step 3 in Package 2 MM testcase 9.4.8. | F | 5.8.0 | 5.9.0 | T1-041170 |
| TP-25 | TP-040160 | 893 | - | Correction to Generic test procedure for testing multi-RB Combinations and Simultaneous Signalling | F | 5.8.0 | 5.9.0 | T1-041172 |
| TP-25 | TP-040160 | 894 | - | Correction to generic test procedure for single HS-DSCH radio bearer configurations | F | 5.8.0 | 5.9.0 | T1-041198 |
| TP-25 | TP-040160 | 895 | - | Correction to Package 1 GMM test case 12.9.1 to make step #9 void. | F | 5.8.0 | 5.9.0 | T1-041206 |
| TP-25 | TP-040160 | 896 | - | Addition of Specific Message Content for Radio Bearer Setup message in P3 Radio Bearer test case 14.2.57 | F | 5.8.0 | 5.9.0 | T1-041207 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-25 | TP-040160 | 897 | - | Corrections to CELL_DCH to CELL/URA_PCH state transition inconsistency in RRC test cases (package 1, 2 and low priority) | F | 5.8.0 | 5.9.0 | T1-041211 |
| TP-25 | TP-040160 | 898 | - | Corrections to GCF Package 2 MM test cases 9.2.2, 9.4.2.1, 9.4.2.2.1 and GCF Package 4 test case 9.5.7.1 | F | 5.8.0 | 5.9.0 | T1-041216 |
| TP-25 | TP-040160 | 899 | - | Corrections to approved RRC Package 1 TC 8.3.4.3 | F | 5.8.0 | 5.9.0 | T1-041221 |
| TP-25 | TP-040160 | 900 | - | Corrections to RRC Package 4 TC 8.2.6.38 | F | 5.8.0 | 5.9.0 | T1-041222 |
| TP-25 | TP-040160 | 901 | - | Corrections to approved RRC Package 2 TC 8.2.2.23 | F | 5.8.0 | 5.9.0 | T1-041225 |
| TP-25 | TP-040160 | 902 | - | Updated preambles used for PDCP testing | F | 5.8.0 | 5.9.0 | T1-041228 |
| TP-25 | TP-040160 | 903 | - | Add HCR TDD content of Inter-frequency measurement for event 2A | F | 5.8.0 | 5.9.0 | T1-041233 |
| TP-25 | TP-040160 | 904 | - | Add TDD content of Inter-frequency measurement for event 2D and 2F | F | 5.8.0 | 5.9.0 | T1-041234 |
| TP-25 | TP-040160 | 905 | - | Add to HCR TDD baseline IEs statement | F | 5.8.0 | 5.9.0 | T1-041236 |
| TP-25 | TP-040160 | 906 | - | Correct “time to trigger” for Measurement Report in Measurement Control Message | F | 5.8.0 | 5.9.0 | T1-041237 |
| TP-25 | TP-040160 | 907 | - | Errors corrected in section 8.4.1.29 of TS34.123-1 | F | 5.8.0 | 5.9.0 | T1-041238 |
| TP-25 | TP-040160 | 908 | - | Add HCR TDD S-CCPCH & PRACH tests sections | F | 5.8.0 | 5.9.0 | T1-041240 |
| TP-25 | TP-040160 | 909 | - | Correction to prose for Package 3 RRC test case 8.4.1.29 | F | 5.8.0 | 5.9.0 | T1-041242 |
| TP-25 | TP-040160 | 910 | - | Adding Specific Message Contents of SIB5 for 1.28 Mcps TDD in 8.1.1.4 | F | 5.8.0 | 5.9.0 | T1-041245 |
| TP-25 | TP-040160 | 911 | - | Adding Specific Message Contents for TDD 128 in 8.2.6.1 | F | 5.8.0 | 5.9.0 | T1-041247 |
| TP-25 | TP-040160 | 912 | - | Delay between CP-ACK and DISCONNECT in package 3 test case 16.1.1 | F | 5.8.0 | 5.9.0 | T1-041249 |
| TP-25 | TP-040160 | 913 | - | Correction to GCF P1 Test Case 8.1.2.2. | F | 5.8.0 | 5.9.0 | T1-041254 |
| TP-25 | TP-040160 | 914 | - | Correction to low priority RRC test case 8.3.4.7 | F | 5.8.0 | 5.9.0 | T1-041263 |
| TP-25 | TP-040160 | 915 | - | Correction to low priority RRC test case 8.4.1.15 | F | 5.8.0 | 5.9.0 | T1-041265 |
| TP-25 | TP-040160 | 916 | - | Correction of the Measurement Report control timer in the Generic Test Procedure in Clause 14.1.2 and 14.1.2a of the Radio Bearer Tests. | F | 5.8.0 | 5.9.0 | T1-041269 |
| TP-25 | TP-040160 | 917 | - | RoHC test case as part of PDCP conformance testing | B | 5.8.0 | 5.9.0 | T1-041270 |
| TP-25 | TP-040160 | 918 | - | Correction to Package 2 test case 8.3.1.22 | D | 5.8.0 | 5.9.0 | T1-041272 |
| TP-25 | TP-040160 | 919 | - | Correction to Package 2 test case 8.2.4.3 & 8.2.4.4 | F | 5.8.0 | 5.9.0 | T1-041274 |
| TP-25 | TP-040160 | 920 | - | Correction to P1 MAC test 7.1.2.4a | F | 5.8.0 | 5.9.0 | T1-041276 |
| TP-25 | TP-040160 | 921 | - | Correction to LP test case 8.2.3.27 | F | 5.8.0 | 5.9.0 | T1-041277 |
| TP-25 | TP-040160 | 922 | - | Correction to TC 8.2.6.39, 8.2.6.43, 8.2.6.44 and 8.3.3.3 | F | 5.8.0 | 5.9.0 | T1-041278 |
| TP-25 | TP-040160 | 923 | - | Correction to 8.3.9.X test cases | F | 5.8.0 | 5.9.0 | T1-041279 |
| TP-25 | TP-040160 | 852 | - | Corrections to 8.4.1.8 | F | 5.8.0 | 5.9.0 | T1-041280 |
| TP-25 | TP-040160 | 924 | - | Correction to Low Priority RRC test 8.1.3.6 | D | 5.8.0 | 5.9.0 | T1-041284 |
| TP-25 | TP-040160 | 925 | - | Correction to Low Priority RRC test 8.3.2.5 | F | 5.8.0 | 5.9.0 | T1-041285 |
| TP-25 | TP-040160 | 926 | - | Correction to Low Priority RRC test 8.3.4.4 | F | 5.8.0 | 5.9.0 | T1-041286 |
| TP-25 | TP-040160 | 927 | - | Addition of new test cases for Physical Channel Reconfiguration (radio link failure in old configuration) | F | 5.8.0 | 5.9.0 | T1-041288 |
| TP-25 | TP-040160 | 928 | - | Modify test cases 8.3.1.10 and 8.3.2.4 to allow dual mode UE time to camp on cell. | F | 5.8.0 | 5.9.0 | T1-041290 |
| TP-25 | TP-040160 | 929 | - | New radio bearer test case for the support of Wideband AMR speech service | F | 5.8.0 | 5.9.0 | T1-041292 |
| TP-25 | TP-040160 | 930 | - | Correction to low priority RRC test case 8.2.6.34 | F | 5.8.0 | 5.9.0 | T1-041294 |
| TP-25 | TP-040160 | 931 | - | Correction to low priority RRC test case 8.4.1.9 | F | 5.8.0 | 5.9.0 | T1-041295 |
| TP-25 | TP-040160 | 932 | - | Correction to P3 RRC test 8.4.1.39 | F | 5.8.0 | 5.9.0 | T1-041296 |
| TP-25 | TP-040160 | 933 | - | Update Package 2 test case 8.4.1.7 | F | 5.8.0 | 5.9.0 | T1-041297 |
| TP-25 | TP-040160 | 934 | - | New HSDPA RRC test cases | F | 5.8.0 | 5.9.0 | T1-041299 |
| TP-25 | TP-040160 | 935 | - | HSDPA Inter-RAT Cell Change Order | F | 5.8.0 | 5.9.0 | T1-041300 |
| TP-25 | TP-040160 | 936 | - | HSDPA Inter-RAT Handover Test Cases | F | 5.8.0 | 5.9.0 | T1-041412 |
| TP-25 | TP-040160 | 937 | - | Correction to Package 2 MM TC 9.4.2.2.4.1 - to remove checking of CKSN, LAI and Mobile Identity IEs | F | 5.8.0 | 5.9.0 | T1-041413 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-25 | TP-040160 | 938 | - | Changes done in step 20 in test procedure 2 for package 3 GMM testcase 12.4.2.5a | F | 5.8.0 | 5.9.0 | T1-041417 |
| TP-25 | TP-040160 | 939 | - | Correction to GMM test case 12.4.1.4c procedure2 | F | 5.8.0 | 5.9.0 | T1-041419 |
| TP-25 | TP-040160 | 940 | - | Correction to GMM test case 12.4.2.4 (P3) | F | 5.8.0 | 5.9.0 | T1-041420 |
| TP-25 | TP-040160 | 941 | - | Correction to low priority radio bearer test cases (minimum set of TFCS) for HCR TDD | F | 5.8.0 | 5.9.0 | T1-041429 |
| TP-25 | TP-040160 | 942 | - | CR to 34.123-1 REL-5: New test cases for A-GPS | F | 5.8.0 | 5.9.0 | T1-041430 |
| TP-25 | TP-040160 | 943 | - | Correction to prose for Package 2 IR_U test case 6.2.2.1 | F | 5.8.0 | 5.9.0 | T1-041434 |
| TP-25 | TP-040160 | 944 | - | Update to the Expected Sequences in the Generic Radio Bearer Test Procedures of clause 14.1.1 and 14.1.2 to align with the approved TTCN. | F | 5.8.0 | 5.9.0 | T1-041436 |
| TP-25 | TP-040160 | 949 | - | Correction to several GMM test cases – Mode C/A change | F | 5.8.0 | 5.9.0 | T1-041437 |
| TP-25 | TP-040160 | 946 | - | Update to the Generic Radio Bearer Test Procedures re: Use of Primary/Secondary Scrambling codes | F | 5.8.0 | 5.9.0 | T1-041438 |
| TP-25 | TP-040160 | 947 | - | Addition of new Inter-RAT test case. | F | 5.8.0 | 5.9.0 | T1-041442r1 |
| TP-25 | TP-040160 | 948 | - | Update to the Generic Radio Bearer Test Procedures re: RM Attribute values | F | 5.8.0 | 5.9.0 | T1-041468 |
| TP-26 | TP-040235 | 950 | - | Corrections to RRC Package 2 TC 8.2.4.3 | F | 5.9.0 | 5.10.0 | T1-041526 |
| TP-26 | TP-040235 | 951 | - | CR to 34.123-1 Rel-5: Correction to SIBs 3 and 4 for 3 MM test cases and 9 GMM test cases for cell selection | F | 5.9.0 | 5.10.0 | T1-041528 |
| TP-26 | TP-040235 | 952 | - | Clarification in test case 11.3.3.1. | F | 5.9.0 | 5.10.0 | T1-041538 |
| TP-26 | TP-040235 | 953 | - | Corrections to low priority RRC TCs 8.2.3.21, 8.2.6.26 and 8.2.6.32 | F | 5.9.0 | 5.10.0 | T1-041543 |
| TP-26 | TP-040235 | 954 | - | Correction to Low Priority NAS test case 12.2.1.5a.Proc2 | F | 5.9.0 | 5.10.0 | T1-041544 |
| TP-26 | TP-040235 | 955 | - | Correction to contents of SIB 11 and Cell Update in testcase 8.4.1.3 | F | 5.9.0 | 5.10.0 | T1-041545 |
| TP-26 | TP-040235 | 956 | - | Revisions to Package 3 measurement test cases 8.4.1.34, 8.4.1.35 and 8.4.1.36 | F | 5.9.0 | 5.10.0 | T1-041546 |
| TP-26 | TP-040235 | 957 | - | Correction to package 4 RRC test case 8.1.12 | F | 5.9.0 | 5.10.0 | T1-041547 |
| TP-26 | TP-040235 | 958 | - | Corrections to package 4 ISHO test case 8.3.7.12 | F | 5.9.0 | 5.10.0 | T1-041548 |
| TP-26 | TP-040235 | 959 | - | Correction to Low Priority RRC Test case 8.4.1.6 | F | 5.9.0 | 5.10.0 | T1-041554 |
| TP-26 | TP-040235 | 960 | - | Correction to P2 Inter-RAT cell reselection test cases 6.2.2.1 and 6.2.2.2 | F | 5.9.0 | 5.10.0 | T1-041560 |
| TP-26 | TP-040235 | 961 | - | CR to 34.123-1Rel-5: Correction of 8_4_1_1A for TDD | F | 5.9.0 | 5.10.0 | T1-041569 |
| TP-26 | TP-040235 | 962 | - | CR to 34.123-1Rel-5: Correction of 8_4_1_3A for TDD | F | 5.9.0 | 5.10.0 | T1-041570 |
| TP-26 | TP-040235 | 963 | - | CR to 34.123-1Rel-5: Correction of 8_4_1_5A for TDD | F | 5.9.0 | 5.10.0 | T1-041571 |
| TP-26 | TP-040235 | 964 | - | CR to 34.123-1Rel-5: Correction of 8_4_1_7A for TDD | F | 5.9.0 | 5.10.0 | T1-041572 |
| TP-26 | TP-040235 | 965 | - | CR to 34.123-1 Rel-5; Modification of low priority test case 8.2.4.24 to increase test coverage | F | 5.9.0 | 5.10.0 | T1-041587 |
| TP-26 | TP-040235 | 966 | - | CR to 34.123-1 Rel-5; New Rel-5 Measurement Test Case | B | 5.9.0 | 5.10.0 | T1-041588 |
| TP-26 | TP-040235 | 967 | - | Correction to package 2 approved RAB test case 14.2.29 | F | 5.9.0 | 5.10.0 | T1-041592 |
| TP-26 | TP-040235 | 968 | - | Correction to MAC-hs test cases | F | 5.9.0 | 5.10.0 | T1-041593 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-26 | TP-040235 | 969 | - | Correction to package 1 MAC approved test case 7.1.1.2 | F | 5.9.0 | 5.10.0 | T1-041596 |
| TP-26 | TP-040235 | 970 | - | Correction to package 2 RRC approved test case 8.3.1.22 | F | 5.9.0 | 5.10.0 | T1-041597 |
| TP-26 | TP-040235 | 971 | - | Add sections for tests on Shared Channels | F | 5.9.0 | 5.10.0 | T1-041602 |
| TP-26 | TP-040235 | 972 | - | Add generic test procedure for tests Shared Channels | F | 5.9.0 | 5.10.0 | T1-041603 |
| TP-26 | TP-040235 | 973 | - | Add to HCR TDD baseline IEs statement | F | 5.9.0 | 5.10.0 | T1-041604 |
| TP-26 | TP-040235 | 974 | - | Add HCR to TDD IEs of Measurement report in 8.4.1.29.4 | F | 5.9.0 | 5.10.0 | T1-041605 |
| TP-26 | TP-040235 | 975 | - | CR to 34.123-1 R5: New test cases for A-GPS failure cases | F | 5.9.0 | 5.10.0 | T1-041610 |
| TP-26 | TP-040235 | 976 | - | CR to 34.123-1 R5: Editorial corrections to A-GPS test cases | F | 5.9.0 | 5.10.0 | T1-041612 |
| TP-26 | TP-040235 | 977 | - | CR to 34.123-1 R5: Corrections to A-GPS test cases | F | 5.9.0 | 5.10.0 | T1-041613 |
| TP-26 | TP-040235 | 978 | - | Correction to low priority RRC test case 8.3.2.5 | F | 5.9.0 | 5.10.0 | T1-041632 |
| TP-26 | TP-040235 | 979 | - | Correction to package 2 GMM approved test case 12.4.2.2 | F | 5.9.0 | 5.10.0 | T1-041634 |
| TP-26 | TP-040235 | 980 | - | CR to 34.123-1 Rel-5: Correction to GCF Package 3 RRC test case 8.3.1.24 | F | 5.9.0 | 5.10.0 | T1-041639 |
| TP-26 | TP-040235 | 981 | - | CR to 34.123-1 Rel-5: Correction to GCF Package 4 RRC test case 8.2.2.4 | F | 5.9.0 | 5.10.0 | T1-041640 |
| TP-26 | TP-040235 | 982 | - | P-TMSI Change in RAU message (GPRS) for GCF Package 2 test case 12.8 | F | 5.9.0 | 5.10.0 | T1-041656 |
| TP-26 | TP-040235 | 983 | - | Correction of package 3 radio bearer test case 14.2.58 | F | 5.9.0 | 5.10.0 | T1-041688 |
| TP-26 | TP-040235 | 984 | - | Corrections to RB TCs 14.2.51a.1 (P3), 14.2.51a.2 (low-prio), 14.2.51b.1 (P3) and 14.2.51b.2 (low-prio) | F | 5.9.0 | 5.10.0 | T1-041691 |
| TP-26 | TP-040235 | 985 | - | Addition of radio bearer test case for PS streaming and downlink rate up to 128 kbps | F | 5.9.0 | 5.10.0 | T1-041692 |
| TP-26 | TP-040235 | 986 | - | CR to 34.123-1 Rel-5: Correction to prose for Package 2 MM test case 9.4.5.4.1<br><br>(Revision of T1-041527) | F | 5.9.0 | 5.10.0 | T1-041704 |
| TP-26 | TP-040235 | 987 | - | Correction to Package 4 RRC test case 8.1.7.1d | F | 5.9.0 | 5.10.0 | T1-041705 |
| TP-26 | TP-040235 | 988 | - | New HSDPA radio bearer test cases | F | 5.9.0 | 5.10.0 | T1-041733 |
| TP-26 | TP-040235 | 989 | - | Correction to GMM test case 12.9.7a | F | 5.9.0 | 5.10.0 | T1-041739 |
| TP-26 | TP-040235 | 990 | - | Corrections to RRC Package 4 test cases 8.4.1.42 & 8.4.1.43 (revision of T1-0401636) | F | 5.9.0 | 5.10.0 | T1-041760 |
| TP-26 | TP-040235 | 991 | - | Correction to Package 1 measurement test case 8.4.1.5 | F | 5.9.0 | 5.10.0 | T1-041783 |
| TP-26 | TP-040235 | 992 | - | Correction to prose for Package 2 MM test case 9.4.2.1 | F | 5.9.0 | 5.10.0 | T1-041784 |
| TP-26 | TP-040235 | 993 | - | Corrections to MM Package 2 TC 9.4.9 revision of T1-041539. | F | 5.9.0 | 5.10.0 | T1-041787 |
| TP-26 | TP-040235 | 994 | - | Correction to TC 8.2.4.1a | F | 5.9.0 | 5.10.0 | T1-041795 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-26 | TP-040235 | 995 | - | Correction to TC 8.2.6.44 | F | 5.9.0 | 5.10.0 | T1-041796 |
| TP-26 | TP-040235 | 996 | - | Correction to Package 3 Idle Mode test case 6.1.1.7 | F | 5.9.0 | 5.10.0 | T1-041807 |
| TP-26 | TP-040235 | 997 | - | Correction to Package 4 test case 8.1.2.4 | F | 5.9.0 | 5.10.0 | T1-041808 |
| TP-26 | TP-040235 | 998 | - | Correction to Inter-RAT idle mode Package 2 test case 6.2.1.8 | F | 5.9.0 | 5.10.0 | T1-041904 |
| TP-26 | TP-040235 | 999 | - | CR to 34.123-1 Rel-5: Correction to Radio Bearer Setup used for RLC testing | F | 5.9.0 | 5.10.0 | T1-041906 |
| TP-26 | TP-040235 | 1000 | - | Correction to Package 4 RRC test case 8.3.7.5 | F | 5.9.0 | 5.10.0 | T1-041907 |
| TP-26 | TP-040235 | 1001 | - | Correction to Package 4 RRC test case 8.1.3.9 | F | 5.9.0 | 5.10.0 | T1-041908 |
| TP-26 | TP-040235 | 1002 | - | Correction to Package 2 RRC test case 8.3.1.21 | F | 5.9.0 | 5.10.0 | T1-041909 |
| TP-26 | TP-040235 | 1003 | - | Correction to Package 3 RRC test case 8.3.2.11 | F | 5.9.0 | 5.10.0 | T1-041910 |
| TP-26 | TP-040235 | 1004 | - | Clarification in test case 11.2.2.2 | F | 5.9.0 | 5.10.0 | T1-041911 |
| TP-26 | TP-040235 | 1005 | - | Correction to Package 1 RRC test case 8.1.7.1b | F | 5.9.0 | 5.10.0 | T1-041912 |
| TP-26 | TP-040235 | 1006 | - | CR to 34.123-1 Rel-5: Correction to GCF Package 3 RAB test cases 14.2.51b.1 & 14.2.38c (Revision of T1-041644) | F | 5.9.0 | 5.10.0 | T1-041913 |
| TP-26 | TP-040235 | 1007 | - | Correction to prose for Package 4 RRC test case 8.1.7.1c | F | 5.9.0 | 5.10.0 | T1-041915 |
| TP-26 | TP-040235 | 1008 | - | Correction to P1 RRC test case 8.4.1.1 (Revision of T1-041553) | F | 5.9.0 | 5.10.0 | T1-041916 |
| TP-26 | TP-040235 | 1009 | - | CR to 34.123-1 Rel-5: Correction to prose for Package 3 MM test case 9.4.7 (revision of T1-041530) | F | 5.9.0 | 5.10.0 | T1-041917 |
| TP-26 | TP-040235 | 1010 | - | More alignment of IE Names used in Clause 12 to the core specification | D | 5.9.0 | 5.10.0 | T1-041921 |
| TP-26 | TP-040235 | 1011 | - | Correction to Approved GCF P4 NAS Test Case 12.9.7c | F | 5.9.0 | 5.10.0 | T1-041922 |
| TP-26 | TP-040235 | 1012 | - | Corrections to high priority GMM test case 12.9.9 | F | 5.9.0 | 5.10.0 | T1-041924 |
| TP-26 | TP-040235 | 1013 | - | CR to 34.123-1 Rel-5: Correction to GCF Package 1 GMM test cases 12.9.1.(Revision of T1-041642) | F | 5.9.0 | 5.10.0 | T1-041925 |
| TP-26 | TP-040235 | 1014 | - | Correction to GMM test cases in clause 12.9 (Revision of T1-041918) | F | 5.9.0 | 5.10.0 | T1-041928 |
| TP-26 | TP-040235 | 1015 | - | CR to 34.123-1 Rel-5; Corrections to HSDPA RRC test cases (revision of T1-041755) | F | 5.9.0 | 5.10.0 | T1-041929 |
| TP-26 | TP-040235 | 1016 | - | Correction to TC 12.9.8 (P4) | F | 5.9.0 | 5.10.0 | T1-041930 |
| TP-26 | TP-040235 | 1017 | - | New HSDPA RRC test cases (intra-frequency) (revision of T1-041799) | F | 5.9.0 | 5.10.0 | T1-041934 |
| TP-26 | TP-040235 | 1018 | - | New HSDPA RRC test cases (inter-frequency) (revision of T1-041800) | F | 5.9.0 | 5.10.0 | T1-041935 |
| TP-26 | TP-040235 | 1019 | - | Updating 'Conformance requirement' in test case 11.1.4.1 and addition of lower layer signalling. | F | 5.9.0 | 5.10.0 | T1-041946 |
| TP-26 | TP-040235 | 1020 | - | Addition of inter-RAT handover test case to 34.123-1 (Revision of T1-041582) | F | 5.9.0 | 5.10.0 | T1-041947 |
| TP-26 | TP-040235 | 1021 | - | Correction to low priority RRC test case 8.2.6.34 | F | 5.9.0 | 5.10.0 | T1-041949 |
| TP-26 | TP-040235 | 1022 | - | Alignment of IE values used in Clause 12 to the core | F | 5.9.0 | 5.10.0 | T1-041950 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | specification (Revision of T1-041561) | | | | |
| TP-26 | TP-040235 | 1023 | - | Correction to GCF P3 Test Case 8.4.1.29 | D | 5.9.0 | 5.10.0 | T1-041953 |
| TP-26 | TP-040235 | 1024 | - | New test cases for Location updating / periodic search for HPLMN or higher priority PLMN when in VPLMN | F | 5.9.0 | 5.10.0 | T1-041954 |
| TP-26 | TP-040235 | 1025 | - | Update of HSDPA radio bearer test cases 14.6.1 and 14.6.2 | F | 5.9.0 | 5.10.0 | T1-041955 |
| TP-26 | TP-040235 | 1026 | - | Correction to 14.1.2 (Revision of T1-041798) | F | 5.9.0 | 5.10.0 | T1-041956 |
| TP-26 | TP-040235 | 1027 | - | CR to 34.123-1 R5: New test cases for A-GPS transfer to third party | F | 5.9.0 | 5.10.0 | T1-041957 |
| TP-26 | TP-040235 | 1028 | - | CR to 34.123-1 R5: New test cases for A-GPS privacy options | F | 5.9.0 | 5.10.0 | T1-041958 |
| TP-26 | TP-040235 | 1029 | - | CR to 34.123-1 R5: Assistance data for UE-assisted A-GPS | F | 5.9.0 | 5.10.0 | T1-041959 |
| TP-26 | TP-040235 | 1030 | - | Update of radio bearer test case 14.2.62 for Wideband AMR | F | 5.9.0 | 5.10.0 | T1-041960 |
| TP-26 | TP-040235 | 1031 | - | CR to 34.123-1 Rel-5; New HSDPA RRC test cases (revision of T1-041589) | B | 5.9.0 | 5.10.0 | T1-041961 |
| TP-26 | TP-040235 | 1032 | - | New MAC-hs test case for transport format selection | F | 5.9.0 | 5.10.0 | T1-041962 |
| TP-26 | TP-040235 | 1033 | - | Removal of optional 'Follow-on request pending' indicator in SM test case 11.1.1.1. | F | 5.9.0 | 5.10.0 | T1-041966 |
| TP-26 | TP-040235 | 1034 | - | Removal of optional 'Follow-on request pending' indicator in SM test case 11.1.1.1a. | F | 5.9.0 | 5.10.0 | T1-041967 |
| TP-26 | TP-040235 | 1035 | - | CR to 34.123-1 Rel-5: Correction to GCF Package 4 RRC test case 8.3.1.18 | F | 5.9.0 | 5.10.0 | T1-041972 |
| TP-26 | TP-040235 | 1036 | - | Correction to Package 2 IR_U test case 12.8 | F | 5.9.0 | 5.10.0 | T1-041977 |
| TP-26 | TP-040235 | 1037 | - | Correction to Package 2 testcase 8.4.1.7 | F | 5.9.0 | 5.10.0 | T1-041902rev1 |
| TP-26 | TP-040235 | 1038 | - | Modification of SIB5 content for package 4 testcase 14.4.2a.1 and Addition of Specific Message Content for Radio Bearer Setup message in section 14.4.2a. | F | 5.9.0 | 5.10.0 | T1-041512 |
| TP-26 | TP-040235 | 1039 | - | CR to 34.123-1 Rel-5: Correction to GCF Package 3 RRC test case 8.3.2.13 | F | 5.9.0 | 5.10.0 | T1-041637 |
| TP-27 | TP-050052 | 1040 | | Modification of SIB5 content for 18.2.5.2a.1 and Addition of Specific Message Content for Radio Bearer Setup message in section 18.2.5.2a. | F | 5.10.0 | 5.11.0 | T1-050294 |
| TP-27 | TP-050052 | 1041 | | Correction to Package 2 RRC test case 8.4.1.19 (Revison of T1-050046, T1-050291) | F | 5.10.0 | 5.11.0 | T1-050427 |
| TP-27 | TP-050052 | 1042 | | CR to 34.123-1 R5: New GMM test case for verification of follow-on request pending indicator. | F | 5.10.0 | 5.11.0 | T1-050446 |
| TP-27 | TP-050052 | 1043 | | Corrections to A-GPS test cases | F | 5.10.0 | 5.11.0 | T1-050174 |
| TP-27 | TP-050052 | 1044 | | Addition of GPS scenario and A-GPS assistance data to 34.123 | F | 5.10.0 | 5.11.0 | T1-050457 |
| TP-27 | TP-050052 | 1045 | | Correction to Package 2 RRC test case 8.3.1.10 | F | 5.10.0 | 5.11.0 | T1-050002 |
| TP-27 | TP-050052 | 1046 | | Correction to Package 4 NAS test case 12.4.1.4a | F | 5.10.0 | 5.11.0 | T1-050006 |
| TP-27 | TP-050052 | 1047 | | Correction to Package 4 NAS test case 12.4.1.4d Proc 1 | F | 5.10.0 | 5.11.0 | T1-050007 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-27 | TP-050052 | 1048 | | Correction to Package 4 RRC test case 8.1.3.5 | F | 5.10.0 | 5.11.0 | T1-050008 |
| TP-27 | TP-050052 | 1049 | | Correction to Package 1 RRC test case 8.3.4.3 | F | 5.10.0 | 5.11.0 | T1-050010 |
| TP-27 | TP-050052 | 1050 | | Correction to Package 4 NAS test case 9.4.3.5 | D | 5.10.0 | 5.11.0 | T1-050011 |
| TP-27 | TP-050052 | 1051 | | Correction to Package 1 RRC test case 8.4.1.1 | F | 5.10.0 | 5.11.0 | T1-050015 |
| TP-27 | TP-050052 | 1052 | | Correction to Package 3 RRC test case 8.4.1.37 | D | 5.10.0 | 5.11.0 | T1-050016 |
| TP-27 | TP-050052 | 1053 | | Correction to Package 3 RRC test case 8.1.2.10 | D | 5.10.0 | 5.11.0 | T1-050017 |
| TP-27 | TP-050052 | 1054 | | Correction to GCF P4 RRC 8.3.1.18 | F | 5.10.0 | 5.11.0 | T1-050022 |
| TP-27 | TP-050052 | 1055 | | Correction to Package 1 RRC test case 8.1.2.2 | F | 5.10.0 | 5.11.0 | T1-050023 |
| TP-27 | TP-050052 | 1056 | | Correction to Package 4 RRC test case 8.4.1.26 | F | 5.10.0 | 5.11.0 | T1-050024 |
| TP-27 | TP-050052 | 1057 | | Correction to default contents of System Information Block 3 and 4 for Idle Mode test cases | F | 5.10.0 | 5.11.0 | T1-050025 |
| TP-27 | TP-050052 | 1058 | | Correction to GCF P4 IR_U 8.3.7.5 | F | 5.10.0 | 5.11.0 | T1-050030 |
| TP-27 | TP-050052 | 1059 | | Correction to Package 2 MultiRAT GMM test case 12.8 | F | 5.10.0 | 5.11.0 | T1-050032 |
| TP-27 | TP-050052 | 1060 | | Correction to Package 4 RAB test case 14.4.2a | F | 5.10.0 | 5.11.0 | T1-050041 |
| TP-27 | TP-050052 | 1061 | | Correction to NAS GMM test cases 12.4.2.6.1 and 12.4.2.6.2 (GCF Work Item 12) | F | 5.10.0 | 5.11.0 | T1-050044 |
| TP-27 | TP-050052 | 1062 | | Correction to P3 RRC test cases 8.4.1.40 | F | 5.10.0 | 5.11.0 | T1-050049 |
| TP-27 | TP-050052 | 1063 | | Correction of USIM HPLMN information in idle mode test cases | F | 5.10.0 | 5.11.0 | T1-050050 |
| TP-27 | TP-050052 | 1064 | | Correction of 'Test requirements' in high priority test case 14.2.32.2 (GCF WI -12) and in low priority test cases 14.2.31.1, 14.2.31.2, 14.2.35.1 and 14.2.35.2. | F | 5.10.0 | 5.11.0 | T1-050053 |
| TP-27 | TP-050052 | 1065 | | Corrections to GCF P3 test cases 14.2.51.1, 14.2.51a.1, 14.2.51b.1 and to low priority test cases 14.2.38d, 14.2.51a.2, 14.2.51b.2 | F | 5.10.0 | 5.11.0 | T1-050054 |
| TP-27 | TP-050052 | 1066 | | Correction to RAB test case 14.2.34.1 (GCF Work Item 12) | F | 5.10.0 | 5.11.0 | T1-050058 |
| TP-27 | TP-050052 | 1067 | | CR to 34.123-1Rel-5: Correction of 8_4_1_2A for TDD | F | 5.10.0 | 5.11.0 | T1-050060 |
| TP-27 | TP-050052 | 1068 | | CR to 34.123-1Rel-5: Correction of 8_4_1_4A for TDD | F | 5.10.0 | 5.11.0 | T1-050061 |
| TP-27 | TP-050052 | 1069 | | CR to 34.123-1Rel-5: Correction of 8_4_1_6A for TDD | F | 5.10.0 | 5.11.0 | T1-050062 |
| TP-27 | TP-050052 | 1070 | | CR to 34.123-1Rel-5: Correction of 8_4_1_8A for TDD | F | 5.10.0 | 5.11.0 | T1-050063 |
| TP-27 | TP-050052 | 1071 | | Corrections to Package 4 RRC test case 8.1.2.3 & Package 1 RRC test case 8.1.2.9 | F | 5.10.0 | 5.11.0 | T1-050071 |
| TP-27 | TP-050052 | 1072 | | Corrections to HSDPA RRC test cases 8.2.2.36, 8.2.2.37 & 8.2.2.38 | F | 5.10.0 | 5.11.0 | T1-050074 |
| TP-27 | TP-050052 | 1073 | | Corrections to Package 4 GMM test case 12.9.7c | F | 5.10.0 | 5.11.0 | T1-050098 |
| TP-27 | TP-050052 | 1074 | | Editorial correction to P1 GMM test case 12.9.1 | F | 5.10.0 | 5.11.0 | T1-050107 |
| TP-27 | TP-050052 | 1075 | | Correction to Package 2 MAC test case 7.1.3.1 | F | 5.10.0 | 5.11.0 | T1-050127 |
| TP-27 | TP-050052 | 1076 | | Correction to Radio Bearer Setup used for RLC | F | 5.10.0 | 5.11.0 | T1-050128 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | testing | | | | |
| TP-27 | TP-050052 | 1077 | | Correction to MAC test cases 7.1.3.2 | F | 5.10.0 | 5.11.0 | T1-050136 |
| TP-27 | TP-050052 | 1078 | | Correction to MAC-hs test cases 7.1.5.2 | F | 5.10.0 | 5.11.0 | T1-050137 |
| TP-27 | TP-050052 | 1079 | | Correction to GCF low priority RRC test cases | F | 5.10.0 | 5.11.0 | T1-050160 |
| TP-27 | TP-050052 | 1080 | | Correction to GCF high priority (WI-010) RRC test cases | F | 5.10.0 | 5.11.0 | T1-050161 |
| TP-27 | TP-050052 | 1081 | | Correction to GCF high priority (WI-12) RRC test cases | F | 5.10.0 | 5.11.0 | T1-050162 |
| TP-27 | TP-050052 | 1082 | | Correction to GCF high priority (WI-14) RRC test cases | F | 5.10.0 | 5.11.0 | T1-050163 |
| TP-27 | TP-050052 | 1083 | | Correction of 3rd party transfer A-GPS test cases | F | 5.10.0 | 5.11.0 | T1-050168 |
| TP-27 | TP-050052 | 1084 | | Correction of UE-assisted A-GPS test cases | F | 5.10.0 | 5.11.0 | T1-050170 |
| TP-27 | TP-050052 | 1085 | | Correction to Approved RRC Package 3 TC 8.4.1.33 | F | 5.10.0 | 5.11.0 | T1-050193 |
| TP-27 | TP-050052 | 1086 | | CR to TS 34.123-1 v5.a.0 - Correction to Package 2 Test Case 6.2.2.2 | F | 5.10.0 | 5.11.0 | T1-050203 |
| TP-27 | TP-050052 | 1087 | | CR to TS 34.123-1 v5.a.0 - Correction to Low-Priority Test Case TC 8.1.8.3 | F | 5.10.0 | 5.11.0 | T1-050204 |
| TP-27 | TP-050052 | 1088 | | CR to TS 34.123-1 v5.a.0 - Editorial corrections to Package 4 test case 8.3.7.5 and Package 3 test case 8.4.1.31 | F | 5.10.0 | 5.11.0 | T1-050206 |
| TP-27 | TP-050052 | 1089 | | Correction to 34.123, clause 6, idle mode test case 6.1.2.9 | F | 5.10.0 | 5.11.0 | T1-050232 |
| TP-27 | TP-050052 | 1091 | | Correction to Package 2 RRC test case 8.1.10.1 | F | 5.10.0 | 5.11.0 | T1-050272 |
| TP-27 | TP-050052 | 1092 | | Correction to RRC test case 8.1.1.10 (GCF Work Item 12) | F | 5.10.0 | 5.11.0 | T1-050273 |
| TP-27 | TP-050052 | 1093 | | Correction to NAS GMM test case 12.4.1.5 (GCF Work Item 12) | F | 5.10.0 | 5.11.0 | T1-050274 |
| TP-27 | TP-050052 | 1094 | | Correction to RRC test cases 8.1.2.11 and 8.2.1.24 (GCF Work Item 12) | F | 5.10.0 | 5.11.0 | T1-050275 |
| TP-27 | TP-050052 | 1095 | | Correction to Package 2 RRC test case 8.4.1.7 | F | 5.10.0 | 5.11.0 | T1-050276 |
| TP-27 | TP-050052 | 1096 | | Correction to NAS MM test case 9.4.2.4 (GCF Work Item 12) | F | 5.10.0 | 5.11.0 | T1-050277 |
| TP-27 | TP-050052 | 1097 | | Correction to Package 2 Testcase 8.2.4.1 | F | 5.10.0 | 5.11.0 | T1-050285 |
| TP-27 | TP-050052 | 1098 | | CR to 34.123-1 : Correction to P4 RRC test case 8.2.2.35 | F | 5.10.0 | 5.11.0 | T1-050287 |
| TP-27 | TP-050052 | 1099 | | Correction to Package 2 RRC test case 8.4.1.23 (Revision T1-050009) | F | 5.10.0 | 5.11.0 | T1-050290 |
| TP-27 | TP-050052 | 1100 | | Correction to GCF priority 2 (WI-010) RRC test case 8.4.1.14 | F | 5.10.0 | 5.11.0 | T1-050299 |
| TP-27 | TP-050052 | 1101 | | Correction to Approved RRC Package 3 TC 8.4.1.31 | F | 5.10.0 | 5.11.0 | T1-050402 |
| TP-27 | TP-050052 | 1102 | | Deletion of postamble of switch-off UE and detach in GMM test cases. | F | 5.10.0 | 5.11.0 | T1-050405 |
| TP-27 | TP-050052 | 1103 | | Correction to Package 2 RRC test case 8.3.1.31 (Revision of T1-050004) | F | 5.10.0 | 5.11.0 | T1-050407 |
| TP-27 | TP-050052 | 1104 | | Correction to Package 4 Inter-system handover test | F | 5.10.0 | 5.11.0 | T1-050410 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | case 8.3.7.12 | | | | |
| TP-27 | TP-050052 | 1105 | | Correction to Package 1 RRC test case 8.4.1.5 | F | 5.10.0 | 5.11.0 | T1-050411 |
| TP-27 | TP-050052 | 1106 | | CR to 34.123-1 Rel-5; Corrections to RRC test cases on seamless SRNS relocation (revision of T1-050084) | F | 5.10.0 | 5.11.0 | T1-050412 |
| TP-27 | TP-050052 | 1107 | | CR to 34.123-1 Rel-5; New RRC test case on seamless SRNS relocation using Radio Bearer Reconfiguration (revision of T1-050085) | B | 5.10.0 | 5.11.0 | T1-050413 |
| TP-27 | TP-050052 | 1108 | | CR to TS34.123-1; New RRC test cases for Radio Bearer Setup Procedure | F | 5.10.0 | 5.11.0 | T1-050414 |
| TP-27 | TP-050052 | 1109 | | Correction to WI-012 test case 8.1.6.3 | F | 5.10.0 | 5.11.0 | T1-050415 |
| TP-27 | TP-050052 | 1110 | | CR to 34.123-1 Rel-5: Correction to P4 RRC test case 8.3.11.4 | F | 5.10.0 | 5.11.0 | T1-050416 |
| TP-27 | TP-050052 | 1111 | | Correction to Package 4 NAS test cases 12.6.1.3.1 , 12.6.1.3.2 and 12.9.6 | F | 5.10.0 | 5.11.0 | T1-050417 |
| TP-27 | TP-050052 | 1112 | | Corrections to HSDPA RRC test case 8.2.2.39 (revision of T1-050270) | F | 5.10.0 | 5.11.0 | T1-050421 |
| TP-27 | TP-050052 | 1113 | | Correction to HSDPA generic radio bearer test procedure | F | 5.10.0 | 5.11.0 | T1-050425 |
| TP-27 | TP-050052 | 1114 | | Addition of inter-RAT handover test case (UE supporting DTM) to 34.123-1 | F | 5.10.0 | 5.11.0 | T1-050428 |
| TP-27 | TP-050052 | 1115 | | Correcting Initial Conditions of Inter-RAT 8.3.7. test cases | F | 5.10.0 | 5.11.0 | T1-050429 |
| TP-27 | TP-050052 | 1116 | | CR to TS34.123-1 Rel-5; Addition of new HSDPA test case (Revision of T1-050179, T1-050265) | F | 5.10.0 | 5.11.0 | T1-050430 |
| TP-27 | TP-050052 | 1117 | | CR to TS34.123-1 Rel-5; Correction to TC 8.2.4.36 (Revision of T1-050181, T1-050266) | F | 5.10.0 | 5.11.0 | T1-050431 |
| TP-27 | TP-050052 | 1118 | | Correction to GCF P4 IR_U 8.3.7.9 and 8.3.7.13 (Revision of T1-050031 & T1-050408) | F | 5.10.0 | 5.11.0 | T1-050432 |
| TP-27 | TP-050052 | 1119 | | Alignment of IE Names used in Clause 12 to the core specification (revision of T1-050021) | D | 5.10.0 | 5.11.0 | T1-050434 |
| TP-27 | TP-050052 | 1120 | | Correction to Package 4 NAS test case 12.4.1.4c Proc 2 (revision of T1-050040) | D | 5.10.0 | 5.11.0 | T1-050439 |
| TP-27 | TP-050052 | 1121 | | Corrections to Package 4 GMM test case 12.4.1.1b | F | 5.10.0 | 5.11.0 | T1-050440 |
| TP-27 | TP-050052 | 1122 | | Correction to NAS GMM test case 12.3.2.8 (GCF Work Item 12) | F | 5.10.0 | 5.11.0 | T1-050442 |
| TP-27 | TP-050052 | 1123 | | Correction to GMM clause | F | 5.10.0 | 5.11.0 | T1-050443 |
| TP-27 | TP-050052 | 1124 | | Correction to Package 4 NAS test case 12.9.3 | F | 5.10.0 | 5.11.0 | T1-050447 |
| TP-27 | TP-050052 | 1125 | | Corrections to Package 4 GMM test case 12.2.1.6.2. (Revision of T1-050097 & T1-050228). | F | 5.10.0 | 5.11.0 | T1-050448 |
| TP-27 | TP-050052 | 1126 | | Correction to Package 4 test case 12.2.1.5d (Revision of T1-050021) | F | 5.10.0 | 5.11.0 | T1-050449 |
| TP-27 | TP-050052 | 1127 | | Correction to Package 3 RB test case 14.2.51a.1 | F | 5.10.0 | 5.11.0 | T1-050453 |
| TP-27 | TP-050052 | 1128 | | Correction of A-GPS assistance data sets | F | 5.10.0 | 5.11.0 | T1-050454 |
| TP-27 | TP-050052 | 1129 | | CR to 34.123-1 Rel-5: Correction to P4 RRC test case 8.1.7.1d (Revision of T1-050249) | F | 5.10.0 | 5.11.0 | T1-050471r1 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| TP-27 | TP-050052 | 1130 | | CR to TS34.123-1 Rel-5; Correction to HSDPA test cases (Revision of T1-050182) | F | 5.10.0 | 5.11.0 | T1-050459 |
| TP-27 | TP-050052 | 1131 | | Corrections to HSDPA RRC test cases 8.2.1.28 & 8.2.3.34 (revision of T1-050073) | F | 5.10.0 | 5.11.0 | T1-050463 |
| TP-27 | TP-050052 | 1132 | | CR to 34.123-1 Rel-5; New HSDPA RRC test cases (revision of T1-050267) | B | 5.10.0 | 5.11.0 | T1-050465 |
| TP-27 | TP-050052 | 1133 | | Corrections to HSDPA RRC test case 8.2.2.40 (revision of T1-050271) | F | 5.10.0 | 5.11.0 | T1-050466 |
| TP-27 | TP-050052 | 1134 | | Correction to MAC-hs test cases 7.1.5.6 | F | 5.10.0 | 5.11.0 | T1-050470 |
| TP-27 | TP-050052 | 1135 | | CR to TS 34.123-1 v5.a.0 - Correction to GCF P3 Test Case 8.3.2.12 | F | 5.10.0 | 5.11.0 | T1-050205r1 |
| TP-27 | TP-050052 | 1136 | | Generic test procedure for HS-DSCH multi-RB combinations | F | 5.10.0 | 5.11.0 | T1-050467r1 |
| TP-27 | TP-050052 | 1137 | | Addition of details to HSDPA radio bearer test case 14.6.3a (new), 14.6.4, 14.6.4a (new), 14.6.5 and 14.6.5a (new) | F | 5.10.0 | 5.11.0 | T1-050475 |
| TP-27 | TP-050052 | 1138 | | Addition of details to HSDPA radio bearer test case 14.6.3 | F | 5.10.0 | 5.11.0 | T1-050468 |
| | | | | 2005-04: Cosmetic tidy up of clause styles; splits clause 8 into four files for easier manipulation. | | 5.11.0 | 5.11.1 | |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-28 | RP-050271 | 1139 | - | Correction to Package 2 IR_U test case 6.2.2.1 | F | 5.11.1 | 5.12.0 | R5-050636 |
| RP-28 | RP-050271 | 1140 | - | CR to 34.123-1: Addition of test frequencies for Band V and VI for idle mode testing | F | 5.11.1 | 5.12.0 | R5-050748 |
| RP-28 | RP-050271 | 1141 | - | Correction to GCF WI-10 Idle Mode Test Cases 6.1.1.7 and 6.1.2.8 | F | 5.11.1 | 5.12.0 | R5-050791 |
| RP-28 | RP-050271 | 1142 | - | FDD_Qmin values in cell reselection test cases 6.2.2.2 and 6.2.2.3 | F | 5.11.1 | 5.12.0 | R5-050807 |
| RP-28 | RP-050271 | 1143 | - | CR to 34.123-1 Rel-5; New cell reselection test case on HCS inter-frequency cell reselection | F | 5.11.1 | 5.12.0 | R5-050966 |
| RP-28 | RP-050271 | 1144 | - | Correction to Package 2 RRC test case 8.1.10.1 | F | 5.11.1 | 5.12.0 | R5-050504 |
| RP-28 | RP-050271 | 1145 | - | Correction to RRC test case 8.1.1.9 (GCF Work Item 12) | F | 5.11.1 | 5.12.0 | R5-050523 |
| RP-28 | RP-050271 | 1146 | - | Correcting initial conditions of Inter-RAT test cases 8.1.2.12 and 8.1.2.13 | F | 5.11.1 | 5.12.0 | R5-050545 |
| RP-28 | RP-050271 | 1147 | - | Corrections to P4 RRC test case 8.1.3.9 | F | 5.11.1 | 5.12.0 | R5-050607 |
| RP-28 | RP-050271 | 1148 | - | Correction to MIB, PLMN and Cell Value Tag Value Definition to 8.1 | F | 5.11.1 | 5.12.0 | R5-050609 |
| RP-28 | RP-050271 | 1149 | - | Addition of new Rel-5 RRC test cases to 34.123-1 for RRC Connection establishment using Default Radio Configurations | B | 5.11.1 | 5.12.0 | R5-050914 |
| RP-28 | RP-050271 | 1150 | - | Correction to RRC test case 8.1.1.10 (GCF Work Item 12) | F | 5.11.1 | 5.12.0 | R5-050915 |
| RP-28 | RP-050271 | 1151 | - | Correction to RRC Package 2 testcase 8.2.2.9 | F | 5.11.1 | 5.12.0 | R5-050555 |
| RP-28 | RP-050271 | 1152 | - | CR to 34.123-1 Rel-5; Correction to SRNS relocation test case 8.2.2.43 | F | 5.11.1 | 5.12.0 | R5-050623 |
| RP-28 | RP-050271 | 1153 | - | Correction to P4 RRC test case 8.2.6.38 | F | 5.11.1 | 5.12.0 | R5-050637 |
| RP-28 | RP-050271 | 1154 | - | Correction to Package 4 RRC test case 8.2.6.12 | F | 5.11.1 | 5.12.0 | R5-050766 |
| RP-28 | RP-050271 | 1155 | - | Correction to GCF WI-10 RRC Test Cases 8.2.4.10 | F | 5.11.1 | 5.12.0 | R5-050789 |
| RP-28 | RP-050271 | 1156 | - | Removal of TGPL2 from section 8.2 | F | 5.11.1 | 5.12.0 | R5-050928 |
| RP-28 | RP-050271 | 1157 | - | Correction of table number in Test 8.2.3.24 | D | 5.11.1 | 5.12.0 | R5-050653 |
| RP-28 | RP-050271 | 1158 | - | Correction to Package 2 RRC test case 8.3.1.21 | F | 5.11.1 | 5.12.0 | R5-050505 |
| RP-28 | RP-050272 | 1159 | - | Correction to Package 4 Inter system cell reselection test case 8.3.9.1 | F | 5.11.1 | 5.12.0 | R5-050506 |
| RP-28 | RP-050272 | 1160 | - | Correction to GCF WI-10 RRC Test Cases 8.3.1.3 | D | 5.11.1 | 5.12.0 | R5-050589 |
| RP-28 | RP-050272 | 1161 | - | Updation of Table 8.3.7-1 in section 8.3.7 | F | 5.11.1 | 5.12.0 | R5-050596 |
| RP-28 | RP-050272 | 1162 | - | Correction to MIB, PLMN and Cell Value Tag Value Definition to 8.3 | F | 5.11.1 | 5.12.0 | R5-050610 |
| RP-28 | RP-050272 | 1163 | - | Correction to RRC test case 8.3.11.4 (WI-010) | F | 5.11.1 | 5.12.0 | R5-050612 |
| RP-28 | RP-050272 | 1164 | - | Correction to GCF WI-010 test cases 8.3.1.10 and 8.3.2.4 | F | 5.11.1 | 5.12.0 | R5-050635 |
| RP-28 | RP-050272 | 1165 | - | CR to 34.123-1: Correction to GCF WI-012 RRC test case 8.3.1.30. | F | 5.11.1 | 5.12.0 | R5-050754 |
| RP-28 | RP-050272 | 1166 | - | Correction to RRC test case 8.3.1.18 (WI-010) | F | 5.11.1 | 5.12.0 | R5-050784 |
| RP-28 | RP-050272 | 1167 | - | Correction to RRC test cases 8.3.4.1, 8.3.4.2 (P1), 8.3.4.8 (WI-12), 8.3.4.4, 8.3.4.5 (Low priority) | F | 5.11.1 | 5.12.0 | R5-050790 |
| RP-28 | RP-050272 | 1168 | - | Corrections to GCF WI-010 (P4) approved test case 8.3.7.5 | F | 5.11.1 | 5.12.0 | R5-050800 |
| RP-28 | RP-050272 | 1169 | - | Correction to GCF WI-10 RRC Test Cases 8.3.7.13 | F | 5.11.1 | 5.12.0 | R5-050926 |
| RP-28 | RP-050272 | 1170 | - | Removal of TGPL2 for section 8.3 | F | 5.11.1 | 5.12.0 | R5-050927 |
| RP-28 | RP-050272 | 1171 | - | Correction to RRC Package 4 testcase 8.3.1.18 | F | 5.11.1 | 5.12.0 | R5-050930 |
| RP-28 | RP-050272 | 1172 | - | Correction to Package 4 Inter-system handover test case 8.3.7.12 | F | 5.11.1 | 5.12.0 | R5-050931 |
| RP-28 | RP-050272 | 1173 | - | Correction to GCF WI-10 Inter-RAT Test Case 8.3.7.12 | D | 5.11.1 | 5.12.0 | R5-050932 |
| RP-28 | RP-050272 | 1174 | - | Correction to Package 3 RRC test case 8.3.2.13 | F | 5.11.1 | 5.12.0 | R5-050937 |
| RP-28 | RP-050272 | 1175 | - | Addition of new Rel-5 RRC test cases to 34.123-1 for Inter-RAT Network Assisted Cell Change | B | 5.11.1 | 5.12.0 | R5-050940 |
| RP-28 | RP-050272 | 1176 | - | Addition of new Rel-5 test cases for CELL_FACH and CELL_PCH state specific handling of Treselection and Qhyst parameters in cell reselection to 34.123-1 | B | 5.11.1 | 5.12.0 | R5-050942 |
| RP-28 | RP-050272 | 1177 | - | Correction to Package 3 RRC test case 8.3.1.23 | F | 5.11.1 | 5.12.0 | R5-050944 |
| RP-28 | RP-050272 | 1178 | - | Correction to Package 3 RRC test case 8.3.1.24 | F | 5.11.1 | 5.12.0 | R5-050945 |
| RP-28 | RP-050273 | 1179 | - | CR to 34.123-1 Rel-5: Addition of SIB 12 contents to section 8.3.9 | F | 5.11.1 | 5.12.0 | R5-050974 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-28 | RP-050273 | 1180 | - | CR to 34.123-1 Rel-5: Correction to WI-010 P4 IR_U test case 8.3.9.1 | F | 5.11.1 | 5.12.0 | R5-050978 |
| RP-28 | RP-050273 | 1181 | - | CR to 34.123-1 Rel-5: Correction to WI-010 P4 IR_U test case 8.3.9.5 | F | 5.11.1 | 5.12.0 | R5-050979 |
| RP-28 | RP-050273 | 1182 | - | Correction to GCF WI-10 IR_U Test Cases 8.3.7.12 (approved) | F | 5.11.1 | 5.12.0 | R5-050934 |
| RP-28 | RP-050273 | 1183 | - | Correction to MIB, PLMN and Cell Value Tag Value Definition to 8.4 | F | 5.11.1 | 5.12.0 | R5-050611 |
| RP-28 | RP-050273 | 1184 | - | CR to 34.123-1 Rel-5; Removal of Release 5 test case 8.4.1.46 | F | 5.11.1 | 5.12.0 | R5-050624 |
| RP-28 | RP-050273 | 1185 | - | Corrections to GCF WI-010 (P2) approved test case 8.4.1.7 | F | 5.11.1 | 5.12.0 | R5-050634 |
| RP-28 | RP-050273 | 1186 | - | Correction to Package 4 RRC test case 8.4.1.41 | F | 5.11.1 | 5.12.0 | R5-050646 |
| RP-28 | RP-050273 | 1187 | - | CR to 34.123-1: Correction to GCF WI-012 RRC test case 8.4.1.6. | F | 5.11.1 | 5.12.0 | R5-050753 |
| RP-28 | RP-050273 | 1188 | - | Correction to GCF WI-10 RRC Test Cases 8.4.1.29 | F | 5.11.1 | 5.12.0 | R5-050792 |
| RP-28 | RP-050273 | 1189 | - | Correction to GCF WI-10 RRC Test Cases 8.4.1.25 | F | 5.11.1 | 5.12.0 | R5-050794 |
| RP-28 | RP-050273 | 1190 | - | Correction to GCF WI-10 Inter-RAT Test Cases 8.4.1.31, 8.4.1.33, 8.4.1.34, 8.4.1.35, 8.4.1.36, 8.4.1.40 (Revision of R5-050598) | F | 5.11.1 | 5.12.0 | R5-050795 |
| RP-28 | RP-050273 | 1191 | - | Removal of TGPL2 from section 8.4 | F | 5.11.1 | 5.12.0 | R5-050929 |
| RP-28 | RP-050273 | 1192 | - | Correction to Package 3 RRC test case 8.4.1.37 | F | 5.11.1 | 5.12.0 | R5-050935 |
| RP-28 | RP-050273 | 1193 | - | Clarification of Cell 3 CPICH level for “Measurement Control and Report: Intra-frequency measurement for transition from CELL_DCH to CELL_FACH state (FDD)”, Test 8.4.1.5 | F | 5.11.1 | 5.12.0 | R5-050642 |
| RP-28 | RP-050273 | 1194 | - | Correction to NAS MM test case 9.4.2.4 (GCF Work Item 12) | F | 5.11.1 | 5.12.0 | R5-050524 |
| RP-28 | RP-050273 | 1195 | - | Corrections to low priority MM test case 9.4.5.4.3 | F | 5.11.1 | 5.12.0 | R5-050659 |
| RP-28 | RP-050273 | 1196 | - | Correction to GCF WI-10 NAS Test Cases 9.2.2 | F | 5.11.1 | 5.12.0 | R5-050936 |
| RP-28 | RP-050273 | 1197 | - | Correction to GCF WI-12 MM Test Case 9.4.3.3 | F | 5.11.1 | 5.12.0 | R5-050946 |
| RP-28 | RP-050273 | 1198 | - | Correction to GCF WI-10 NAS Test Case 9.4.1 | F | 5.11.1 | 5.12.0 | R5-050952 |
| RP-28 | RP-050274 | 1199 | - | Correction to NAS GMM test case 12.3.2.7 (GCF Work Item 12) | F | 5.11.1 | 5.12.0 | R5-050509 |
| RP-28 | RP-050274 | 1200 | - | Correction to NAS GMM test case 12.9.9 (GCF Work Item 12) | F | 5.11.1 | 5.12.0 | R5-050510 |
| RP-28 | RP-050274 | 1201 | - | Correction to GCF WI-10 RRC Test Case 12.2.2.1 | F | 5.11.1 | 5.12.0 | R5-050569 |
| RP-28 | RP-050274 | 1202 | - | CR to 34.123-1 : Correction to WI-012 GMM test case 12.3.2.8 Proc1 | F | 5.11.1 | 5.12.0 | R5-050755 |
| RP-28 | RP-050274 | 1203 | - | Correction to Package 4 NAS test case 12.2.1.5d | F | 5.11.1 | 5.12.0 | R5-050780 |
| RP-28 | RP-050274 | 1204 | - | Correction to GCF WI-10 NAS Test Cases 12.4.1.4d | F | 5.11.1 | 5.12.0 | R5-050797 |
| RP-28 | RP-050274 | 1205 | - | Deletion of postamble of switch-off UE and detach in GMM test cases 12.3.x | F | 5.11.1 | 5.12.0 | R5-050805 |
| RP-28 | RP-050274 | 1206 | - | CR to 34.123-1:Corrections to GCF WI-010 RAB TC 14.2.43.1 and GCF WI-012 RAB TC 14.2.43.2. | F | 5.11.1 | 5.12.0 | R5-050949 |
| RP-28 | RP-050274 | 1207 | - | CR to 34.123-1:Correction to GCF WI-010 P3 RAB TC 14.2.58a | F | 5.11.1 | 5.12.0 | R5-050950 |
| RP-28 | RP-050274 | 1208 | - | Correction to test requirement of radio bearer test cases for multi radio bearer combinations (Section 14) | F | 5.11.1 | 5.12.0 | R5-050520 |
| RP-28 | RP-050274 | 1209 | - | Correction to GCF WI-10 SMS Test Cases 16.1.2, 16.1.9.1, 16.1.9.2 and 16.1.10 | D | 5.11.1 | 5.12.0 | R5-050798 |
| RP-28 | RP-050274 | 1210 | - | CR to 34.123-1 Rel-5: Correction to WI-010 SMS test cases 16.1.2, 16.1.10, 16.2.2 and 16.2.10 | F | 5.11.1 | 5.12.0 | R5-050951 |
| RP-28 | RP-050274 | 1211 | - | CR 34.123-1 Correction to A-GPS test case 17.2.4.10 | F | 5.11.1 | 5.12.0 | R5-050706 |
| RP-28 | RP-050274 | 1212 | - | CR 34.123-1 Correction to initial UE conditions for A-GPS MT-LR test cases | F | 5.11.1 | 5.12.0 | R5-050708 |
| RP-28 | RP-050274 | 1213 | - | Clarifications and editorial changes to A-GPS test cases | F | 5.11.1 | 5.12.0 | R5-050968 |
| RP-28 | RP-050274 | 1214 | - | Corrections to HSDPA radio bearer test cases | F | 5.11.1 | 5.12.0 | R5-050563 |
| RP-28 | RP-050274 | 1215 | - | Correction to GCF WI-014 RRC HSDPA test case 8.2.1.27 | F | 5.11.1 | 5.12.0 | R5-050601 |
| RP-28 | RP-050274 | 1216 | - | Correction to GCF WI-014 RRC HSDPA test case 8.2.1.31 | F | 5.11.1 | 5.12.0 | R5-050603 |
| RP-28 | RP-050274 | 1217 | - | Correction to GCF WI-014 RRC HSDPA test case 8.2.4.36 | F | 5.11.1 | 5.12.0 | R5-050605 |
| RP-28 | RP-050274 | 1218 | - | CR to 34.123-1: Correction to GCF WI-014 RRC | F | 5.11.1 | 5.12.0 | R5-050711 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | HSDPA test case 8.2.6.39a. | | | | |
| RP-28 | RP-050275 | 1219 | - | CR to 34.123-1: Correction to GCF WI-014 RRC HSDPA test case 8.3.1.32. | F | 5.11.1 | 5.12.0 | R5-050712 |
| RP-28 | RP-050275 | 1220 | - | CR to 34.123-1: Correction to GCF WI-014 RRC HSDPA test case 8.3.1.33. | F | 5.11.1 | 5.12.0 | R5-050713 |
| RP-28 | RP-050275 | 1221 | - | CR to 34.123-1: Correction to GCF WI-014 RRC HSDPA test case 8.3.1.34. | F | 5.11.1 | 5.12.0 | R5-050714 |
| RP-28 | RP-050275 | 1222 | - | CR to 34.123-1: Correction to GCF WI-014 RRC HSDPA test case 8.3.1.35. | F | 5.11.1 | 5.12.0 | R5-050715 |
| RP-28 | RP-050275 | 1223 | - | CR to 34.123-1: Correction to GCF WI-014 RRC HSDPA test case 8.3.1.36. | F | 5.11.1 | 5.12.0 | R5-050716 |
| RP-28 | RP-050275 | 1224 | - | CR to 34.123-1: Correction to GCF WI-014 RRC HSDPA test case 8.3.1.37. | F | 5.11.1 | 5.12.0 | R5-050717 |
| RP-28 | RP-050275 | 1225 | - | Correction to GCF WI-014 RRC HSDPA test case 8.2.1.28 | F | 5.11.1 | 5.12.0 | R5-050776 |
| RP-28 | RP-050275 | 1226 | - | CR to 34.123-1Rel-5: Message Content Correction for TDD in 8.4.1.24 | F | 5.11.1 | 5.12.0 | R5-050580 |
| RP-28 | RP-050275 | 1227 | - | CR to 34.123-1Rel-5: Message Content Correction for TDD in 8.4.1.25 | F | 5.11.1 | 5.12.0 | R5-050581 |
| RP-28 | RP-050275 | 1228 | - | CR to 34.123-1Rel-5: Message Content Correction for TDD in 8.4.1.26 | F | 5.11.1 | 5.12.0 | R5-050582 |
| RP-28 | RP-050275 | 1229 | - | CR to 34.123-1Rel-5: To Delete Test Case 7.1.2.2.3 of LCR TDD | F | 5.11.1 | 5.12.0 | R5-050925 |
| RP-28 | RP-050275 | 1230 | - | Correction of 8_4_1_2A for TDD | F | 5.11.1 | 5.12.0 | R5-050688 |
| RP-28 | RP-050275 | 1231 | - | Correction to MAC test cases 7.1.3.2 to add HCR TDD | F | 5.11.1 | 5.12.0 | R5-050689 |
| RP-28 | RP-050275 | 1232 | - | Correction to RRC test case 8.4.1.1A (TDD) | F | 5.11.1 | 5.12.0 | R5-050691 |
| RP-28 | RP-050275 | 1233 | - | Correction to RRC test case 8.4.1.5A (TDD) | F | 5.11.1 | 5.12.0 | R5-050693 |
| RP-28 | RP-050275 | 1234 | - | 8.2.2.43 RRC test case on seamless SRNS relocation using Radio Bearer Reconfiguration add TDD content | B | 5.11.1 | 5.12.0 | R5-050694 |
| RP-28 | RP-050275 | 1235 | - | Correction to 8.1.8.3 to add TDD to step 2 | F | 5.11.1 | 5.12.0 | R5-050695 |
| RP-28 | RP-050275 | 1236 | - | Add TDD to RRC test case 8.3.11.4 | F | 5.11.1 | 5.12.0 | R5-050696 |
| RP-28 | RP-050275 | 1237 | - | Correction to RAB test case 18.2.2.34.1 | F | 5.11.1 | 5.12.0 | R5-050698 |
| RP-28 | RP-050275 | 1238 | - | Correct RAB test case 18.2.5.2a Poll_SDU value (TDD) | F | 5.11.1 | 5.12.0 | R5-050699 |
| RP-28 | RP-050276 | 1239 | - | Tests for HCR TDD RAB combinations #38 thru #61 | F | 5.11.1 | 5.12.0 | R5-050700 |
| RP-28 | RP-050276 | 1240 | - | Add TDD to RRC test case 8.4.1.33 | F | 5.11.1 | 5.12.0 | R5-050957 |
| RP-28 | RP-050276 | 1241 | - | Correction to Package 4 RRC test case 8.4.1.26 to change TDD content | F | 5.11.1 | 5.12.0 | R5-050958 |
| RP-28 | RP-050276 | 1242 | - | Correction RRC test case 8.4.1.7A (TDD) | F | 5.11.1 | 5.12.0 | R5-050959 |
| RP-28 | RP-050276 | 1243 | - | Correction to Package 4 Inter system cell reselection test case 8.3.9.3 | F | 5.11.1 | 5.12.0 | R5-050954 |
| RP-28 | RP-050276 | 1244 | - | Correction to GCF WI-014 MAC-HS test case 7.1.5.1 | F | 5.11.1 | 5.12.0 | R5-050970 |
| RP-28 | RP-050276 | 1245 | - | Correction to GCF WI-014 MAC-HS test case 7.1.5.4 | F | 5.11.1 | 5.12.0 | R5-050971 |
| RP-28 | RP-050276 | 1246 | - | Correction to GCF WI-014 MAC-HS test case 7.1.5.5 | F | 5.11.1 | 5.12.0 | R5-050972 |
| RP-28 | RP-050276 | 1247 | - | Correction to GCF WI-10 NAS Test Cases 12.2.1.2, 12.2.1.5a Proc 1, 12.2.1.5a Proc 2, 12.3.2.7, 12.4.1.2 and 12.6.1.2 | F | 5.11.1 | 5.12.0 | R5-050985 |
| RP-28 | RP-050276 | 1248 | - | CR to 34.123-1 Rel-5: Correction to WI-012 RLC test case 7.2.3.28 | F | 5.11.1 | 5.12.0 | R5-050876 |
| RP-28 | RP-050276 | 1249 | - | Corrections to WI-10 P4 approved GMM test case 12.2.1.5a Test Procedures 1 & 2 | F | 5.11.1 | 5.12.0 | R5-050878 |
| RP-29 | RP-050519 | 1250 | - | Feature Clean Up: Removal of DRAC from RRC section 8.1 of 34.123-1 | F | 5.12.0 | 6.0.0 | R5-051313 |
| RP-29 | RP-050519 | 1251 | - | Feature Clean Up: Removal of DRAC from RRC section 8.2 of 34.123-1 | F | 5.12.0 | 6.0.0 | R5-051314 |
| RP-29 | RP-050519 | 1252 | - | Feature Clean Up: Removal of DRAC from RRC section 8.3 of 34.123-1 | F | 5.12.0 | 6.0.0 | R5-051315 |
| RP-29 | RP-050519 | 1253 | - | Feature Clean Up: Removal of DRAC from RRC section 8.4 of 34.123-1 | F | 5.12.0 | 6.0.0 | R5-051316 |
| RP-29 | RP-050519 | 1254 | - | Feature Clean Up: Removal of DSCH ( FDD mode) from 34.123-1 clause 7 | F | 5.12.0 | 6.0.0 | R5-051347 |
| RP-29 | RP-050519 | 1255 | - | Feature Clean Up: Removal of DSCH ( FDD mode) from 34.123-1 clause 8.1 | F | 5.12.0 | 6.0.0 | R5-051348 |
| RP-29 | RP-050519 | 1256 | - | Feature Clean Up: Removal of DSCH ( FDD mode) | F | 5.12.0 | 6.0.0 | R5-051349 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | from 34.123-1 clause 8.2 | | | | |
| RP-29 | RP-050519 | 1257 | - | Feature Clean Up: Removal of DSCH ( FDD mode) from 34.123-1 clause 8.3 | F | 5.12.0 | 6.0.0 | R5-051350 |
| RP-29 | RP-050519 | 1258 | - | Feature Clean Up: Removal of DSCH ( FDD mode) from 34.123-1 clause 8.4 | F | 5.12.0 | 6.0.0 | R5-051351 |
| RP-29 | RP-050519 | 1259 | - | Feature Clean Up: Removal of DSCH ( FDD mode) from 34.123-1 clause 14 | F | 5.12.0 | 6.0.0 | R5-051352 |
| RP-29 | RP-050519 | 1260 | - | Feature Clean Up: Removal of Observed time difference to GSM cell from 34.123-1 clause 8.3 | F | 5.12.0 | 6.0.0 | R5-051354 |
| RP-29 | RP-050519 | 1261 | - | Feature Clean Up: Removal of Observed time difference to GSM cell from 34.123-1 clause 8.4 | F | 5.12.0 | 6.0.0 | R5-051355 |
| RP-29 | RP-050519 | 1262 | - | Feature Clean Up: Removal of SSDT from 34.123-1 clause 8.1 | F | 5.12.0 | 6.0.0 | R5-051357 |
| RP-29 | RP-050519 | 1263 | - | Feature Clean Up: Removal of SSDT from 34.123-1 clause 8.2 | F | 5.12.0 | 6.0.0 | R5-051358 |
| RP-29 | RP-050519 | 1264 | - | Feature Clean Up: Removal of SSDT from 34.123-1 clause 8.3 | F | 5.12.0 | 6.0.0 | R5-051359 |
| RP-29 | RP-050519 | 1265 | - | Feature Clean Up: Removal of SSDT from 34.123-1 clause 8.4 | F | 5.12.0 | 6.0.0 | R5-051360 |
| RP-29 | RP-050519 | 1266 | - | Feature Clean Up: Removal of SSDT from 34.123-1 clause 14 | F | 5.12.0 | 6.0.0 | R5-051361 |
| RP-29 | RP-050519 | 1267 | - | Feature Clean Up: Removal of 80 ms TTI for DCH for all cases except when the UE supports SF512 from 34.123-1 | F | 5.12.0 | 6.0.0 | R5-051380 |
| RP-29 | RP-050519 | 1268 | - | Feature Clean Up: Removal of CPCH from MAC section 7.1 | F | 5.12.0 | 6.0.0 | R5-051540 |
| RP-29 | RP-050519 | 1269 | - | Feature Clean Up: Removal of CPCH from RRC section 8.2 | F | 5.12.0 | 6.0.0 | R5-051541 |
| RP-29 | RP-050520 | 1270 | - | Feature Clean Up: Removal of CPCH from RRC section 8.3 | F | 5.12.0 | 6.0.0 | R5-051542 |
| RP-29 | RP-050514 | 1271 | - | CR to 34.123-1Rel-5: Correction of testcase 8.2.1.4 for TDD | F | 5.12.0 | 6.0.0 | R5-051214 |
| RP-29 | RP-050514 | 1272 | - | CR to 34.123-1Rel-5: Correction of testcase 8.2.2.4 for TDD | F | 5.12.0 | 6.0.0 | R5-051215 |
| RP-29 | RP-050514 | 1273 | - | CR to 34.123-1Rel-5: Correction of testcase 8.2.6.6 for TDD | F | 5.12.0 | 6.0.0 | R5-051216 |
| RP-29 | RP-050520 | 1274 | - | Correction of WI-10 TC 6.1.2.1 (TTCN approved) | F | 5.12.0 | 6.0.0 | R5-051039 |
| RP-29 | RP-050520 | 1275 | - | Correction of WI-10 TC 6.1.2.8 (TTCN not approved) | F | 5.12.0 | 6.0.0 | R5-051040 |
| RP-29 | RP-050520 | 1276 | - | Change test method for 6.2.2.2 | F | 5.12.0 | 6.0.0 | R5-051303 |
| RP-29 | RP-050537 | 1277 | - | Addition of new test case: 6.1.1.8 PLMN selection in shared network environment, Automatic mode | F | 5.12.0 | 6.0.0 | R5-051383 |
| RP-29 | RP-050537 | 1278 | - | Addition of new test case: 6.2.1.10 Selection of PLMN and RAT in shared network environment, Automatic mode | F | 5.12.0 | 6.0.0 | R5-051382 |
| RP-29 | RP-050520 | 1279 | - | Correction to WI-010 MAC test case 7.1.2.4a | F | 5.12.0 | 6.0.0 | R5-051310 |
| RP-29 | RP-050520 | 1280 | - | Correction to Low Priority RRC test case 8.1.5.6 | F | 5.12.0 | 6.0.0 | R5-051149 |
| RP-29 | RP-050520 | 1281 | - | Correction to GCF WI-012 RRC test case 8.1.6.3 | F | 5.12.0 | 6.0.0 | R5-051187 |
| RP-29 | RP-050537 | 1282 | - | Addition of new test case: 8.1.1.11 Paging for Connection in idle mode (Shared Network environment) | F | 5.12.0 | 6.0.0 | R5-051374 |
| RP-29 | RP-050520 | 1283 | - | Addition of a new Rel-5 RRC test case to 34.123-1 for Establishment Cause in Direct Transfer Procedure. | F | 5.12.0 | 6.0.0 | R5-051384 |
| RP-29 | RP-050520 | 1284 | - | Correction to WI-10 RRC testcase 8.2.4.1 | F | 5.12.0 | 6.0.0 | R5-051009 |
| RP-29 | RP-050520 | 1285 | - | Correction to WI-12 RRC testcases 8.2.1.33 and 8.2.1.34 | F | 5.12.0 | 6.0.0 | R5-051019 |
| RP-29 | RP-050520 | 1286 | - | Correction to WI-10 RRC testcase 8.2.3.8 | F | 5.12.0 | 6.0.0 | R5-051061 |
| RP-29 | RP-050520 | 1287 | - | CR to 34.123-1: Correction to test case 8.2.6.29 (low priority) | F | 5.12.0 | 6.0.0 | R5-051105 |
| RP-29 | RP-050520 | 1288 | - | Corrections to GCF WI-010 (P4) RRC test case 8.2.6.38 | F | 5.12.0 | 6.0.0 | R5-051370 |
| RP-29 | RP-050520 | 1289 | - | Correction to GCF WI-012 RRC test cases 8.2.6.39 | F | 5.12.0 | 6.0.0 | R5-051376 |
| RP-29 | RP-050520 | 1290 | - | Timing Reinitialized Handover & Radio Link Timing Adjustment | F | 5.12.0 | 6.0.0 | R5-051385 |
| RP-29 | RP-050520 | 1291 | - | Correction to WI-10 RRC testcases 8.2.4.4 and 8.2.2.4 | F | 5.12.0 | 6.0.0 | R5-051392 |
| RP-29 | RP-050520 | 1292 | - | Correction to WI-10 RRC test cases 8.3.1.23, 8.3.1.24 and 8.3.2.13 | F | 5.12.0 | 6.0.0 | R5-051005 |
| RP-29 | RP-050520 | 1293 | - | Corrections to WI-10 test case 8.3.1.1 | F | 5.12.0 | 6.0.0 | R5-051006 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-29 | RP-050520 | 1294 | - | Correction to WI-12 RRC testcase 8.3.1.30 | F | 5.12.0 | 6.0.0 | R5-051011 |
| RP-29 | RP-050520 | 1295 | - | Correction to WI-10 RRC testcase 8.3.4.2 | F | 5.12.0 | 6.0.0 | R5-051020 |
| RP-29 | RP-050521 | 1296 | - | Correction to WI-10 InterRAT cell change order from UTRAN testcase 8.3.11.4 | F | 5.12.0 | 6.0.0 | R5-051323 |
| RP-29 | RP-050521 | 1297 | - | Invalid Fach Measurement Occassion and Ntti combinations used in WI10/2 Test Case 8.3.1.21, WI-13/1 Test Case 8.3.1.38. | F | 5.12.0 | 6.0.0 | R5-051333 |
| RP-29 | RP-050521 | 1298 | - | Correction to WI-10 Inter-system hard handover from UTRAN to GSM testcase 8.3.7.5 | F | 5.12.0 | 6.0.0 | R5-051386 |
| RP-29 | RP-050521 | 1299 | - | Addition of a new Rel-5 RRC test case to 34.123-1 for Establishment Cause in Cell Update Procedure. | F | 5.12.0 | 6.0.0 | R5-051387 |
| RP-29 | RP-050521 | 1300 | - | Correction to GCF high priority (WI-010) RRC test case 8.3.4.2 | F | 5.12.0 | 6.0.0 | R5-051394 |
| RP-29 | RP-050521 | 1301 | - | Correction to WI-10 RRC testcase 8.4.1.14 | F | 5.12.0 | 6.0.0 | R5-051042 |
| RP-29 | RP-050521 | 1302 | - | Correction to WI-10 RRC test cases 8.4.1.14 and 8.4.1.28 | F | 5.12.0 | 6.0.0 | R5-051045 |
| RP-29 | RP-050521 | 1303 | - | Corrections to GCF WI-010 (P4) RRC test case 8.4.1.42 | F | 5.12.0 | 6.0.0 | R5-051199 |
| RP-29 | RP-050521 | 1304 | - | Correction to GCF WI-010/2 RRC test case 8.4.1.23 | F | 5.12.0 | 6.0.0 | R5-051255 |
| RP-29 | RP-050521 | 1305 | - | Correction to WI-10 Inter-RAT measurement in CELL_DCH testcase 8.4.1.31 | F | 5.12.0 | 6.0.0 | R5-051261 |
| RP-29 | RP-050521 | 1306 | - | Corrections to WI-10 test case 8.4.1.5 | F | 5.12.0 | 6.0.0 | R5-051388 |
| RP-29 | RP-050521 | 1307 | - | Correction to GCF WI-10 RRC test case 8.4.1.2, 8.4.1.24, 8.4.1.25 | F | 5.12.0 | 6.0.0 | R5-051389 |
| RP-29 | RP-050521 | 1308 | - | Corrections to GCF WI-010 (P2) RRC test case 8.4.1.8 | F | 5.12.0 | 6.0.0 | R5-051390 |
| RP-29 | RP-050521 | 1309 | - | Addition of a new Rel-5 RRC test case to 34.123-1 for RRC event-triggered periodic measurements for Event 1B. | F | 5.12.0 | 6.0.0 | R5-051391 |
| RP-29 | RP-050521 | 1310 | - | Invalid Fach Measurement Occassion and Ntti combinations used in WI-12/1 Test Case 8.4.1.6. | F | 5.12.0 | 6.0.0 | R5-051395 |
| RP-29 | RP-050521 | 1311 | - | Correction to WI-10 RRC testcases 8.4.1.23 and 8.4.1.16 | F | 5.12.0 | 6.0.0 | R5-051507 |
| RP-29 | RP-050521 | 1312 | - | Correction to WI-12 MM testcase 9.4.2.4.4 | F | 5.12.0 | 6.0.0 | R5-051341 |
| RP-29 | RP-050521 | 1313 | - | Corrections to GCF WI-12 NAS Test Case 9.4.5.4.6 | F | 5.12.0 | 6.0.0 | R5-051396 |
| RP-29 | RP-050521 | 1314 | - | Correction required for WI-010 P2 NAS Testcase 9.4.2.3. | F | 5.12.0 | 6.0.0 | R5-051397 |
| RP-29 | RP-050521 | 1315 | - | Correction to WI-010 GMM test case 12.4.1.4b | F | 5.12.0 | 6.0.0 | R5-051147 |
| RP-29 | RP-050522 | 1316 | - | Corrections to GCF WI-10 NAS Test Case 12.4.1.4d Proc 2 | F | 5.12.0 | 6.0.0 | R5-051284 |
| RP-29 | RP-050522 | 1317 | - | Correction to GMM test case clause 12.4.1.4a (GCF WI-10) (Revision of R5-051145) | F | 5.12.0 | 6.0.0 | R5-051398 |
| RP-29 | RP-050522 | 1318 | - | Correction to WI-12 test case 12.9.7a | F | 5.12.0 | 6.0.0 | R5-051399 |
| RP-29 | RP-050522 | 1319 | - | Correction to NAS test cases 12.4.1.4c, 12.2.1.5d, 12.3.2.8 | F | 5.12.0 | 6.0.0 | R5-051506 |
| RP-29 | RP-050522 | 1320 | - | Correction to WI-10 and WI-12 MultiRAB test cases 14.238c, 14.2.38f, 14.2.40, 14.2.41, 14.2.43.1, 14.2.43.2, 14.2.51.1, 14.2.51b.1, 14.2.58, 14.2.58a | F | 5.12.0 | 6.0.0 | R5-051320 |
| RP-29 | RP-050522 | 1321 | - | Correction to NB AMR Radio Bearer Test Cases | F | 5.12.0 | 6.0.0 | R5-051508 |
| RP-29 | RP-050522 | 1322 | - | Editorial Corrections to A-GPS Test Cases 17.2.3.4 and 17.2.3.9 | F | 5.12.0 | 6.0.0 | R5-051188 |
| RP-29 | RP-050522 | 1323 | - | Correction to Message Type IE in Supplementary Services Messages for A-GPS Test Cases | F | 5.12.0 | 6.0.0 | R5-051189 |
| RP-29 | RP-050522 | 1324 | - | Correction of WI-14 HSDPA test case 8.2.1.29 | F | 5.12.0 | 6.0.0 | R5-051012 |
| RP-29 | RP-050522 | 1325 | - | Correction of WI-14 HSDPA test case 8.2.1.31 | F | 5.12.0 | 6.0.0 | R5-051013 |
| RP-29 | RP-050522 | 1326 | - | Correction to WI-14 MAC-Hs test case 7.1.5.1 and 7.1.5.5 | F | 5.12.0 | 6.0.0 | R5-051021 |
| RP-29 | RP-050522 | 1327 | - | Correction to WI-14 HSDPA RRC testcase 8.3.1.32 | F | 5.12.0 | 6.0.0 | R5-051023 |
| RP-29 | RP-050513 | 1328 | - | Cor Correction to HSDPA RAB test cases (WI-014) | F | 5.12.0 | 6.0.0 | R5-051151 |
| RP-29 | RP-050513 | 1329 | - | Correction to MAC-hs test case 7.1.5.2 (WI-014) | F | 5.12.0 | 6.0.0 | R5-051162 |
| RP-29 | RP-050522 | 1330 | - | Correction of WI-14 HSDPA test case 8.2.1.27 | F | 5.12.0 | 6.0.0 | R5-051167 |
| RP-29 | RP-050522 | 1331 | - | Correction of WI-14 HSDPA test case 8.2.1.30 | F | 5.12.0 | 6.0.0 | R5-051168 |
| RP-29 | RP-050522 | 1332 | - | Correction of WI-14 HSDPA test case 8.2.2.40 | F | 5.12.0 | 6.0.0 | R5-051172 |
| RP-29 | RP-050522 | 1333 | - | Correction of WI-14 HSDPA test case 8.3.1.32 | F | 5.12.0 | 6.0.0 | R5-051173 |
| RP-29 | RP-050522 | 1334 | - | Correction of WI-14 HSDPA test case 8.3.1.33 | F | 5.12.0 | 6.0.0 | R5-051174 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-29 | RP-050522 | 1335 | - | Correction of WI-14 HSDPA test case 8.3.1.34 (not approved) | F | 5.12.0 | 6.0.0 | R5-051175 |
| RP-29 | RP-050522 | 1336 | - | Correction of WI14 HSDPA test case 8.3.1.35 (not approved) | F | 5.12.0 | 6.0.0 | R5-051176 |
| RP-29 | RP-050522 | 1337 | - | Correction to GCF WI-014/1 RRC HSDPA test case 8.2.3.35 | F | 5.12.0 | 6.0.0 | R5-051186 |
| RP-29 | RP-050523 | 1338 | - | Correction to 8.2.1.28 | F | 5.12.0 | 6.0.0 | R5-051253 |
| RP-29 | RP-050523 | 1339 | - | Correction to 8.2.4.36 | F | 5.12.0 | 6.0.0 | R5-051254 |
| RP-29 | RP-050523 | 1340 | - | Correction of WI-14 HSDPA test case 8.2.2.38 | F | 5.12.0 | 6.0.0 | R5-051328 |
| RP-29 | RP-050523 | 1341 | - | Correction of WI-14 HSDPA test case 8.2.2.39 (non approved test case) | F | 5.12.0 | 6.0.0 | R5-051329 |
| RP-29 | RP-050523 | 1342 | - | Correction to GCF WI-014/1 RRC HSDPA test cases 8.2.6.39a & 8.2.6.39b | F | 5.12.0 | 6.0.0 | R5-051336 |
| RP-29 | RP-050523 | 1343 | - | Correction to WI-14 HSDPA RRC testcase 8.2.1.29 | F | 5.12.0 | 6.0.0 | R5-051340 |
| RP-29 | RP-050523 | 1344 | - | Editorial Correction to Test Case 8.2.1.29, 8.2.1.32 and 8.2.3.31 | F | 5.12.0 | 6.0.0 | R5-051362 |
| RP-29 | RP-050523 | 1345 | - | Correction to RRC Test Case 8.2.3.33, 8.2.6.39a and 8.2.6.39b | F | 5.12.0 | 6.0.0 | R5-051363 |
| RP-29 | RP-050523 | 1346 | - | Correction to MAC Test Case 7.1.5.6 | F | 5.12.0 | 6.0.0 | R5-051364 |
| RP-29 | RP-050523 | 1347 | - | Correction to GCF WI-014/2 RRC HSDPA test case 8.2.3.34 | F | 5.12.0 | 6.0.0 | R5-051377 |
| RP-29 | RP-050523 | 1348 | - | Correction to RRC HSDPA WI-14 test case 8.2.2.36. | F | 5.12.0 | 6.0.0 | R5-051509 |
| RP-29 | RP-050523 | 1349 | - | Correction of WI-14 HSDPA test case 8.2.1.32 | F | 5.12.0 | 6.0.0 | R5-051511 |
| RP-29 | RP-050523 | 1350 | - | Correction of WI-14 HSDPA test case 8.3.1.36 (not approved). | F | 5.12.0 | 6.0.0 | R5-051515 |
| RP-29 | RP-050523 | 1351 | - | Correction of WI-14 HSDPA test case 8.3.1.37 (not approved) | F | 5.12.0 | 6.0.0 | R5-051516 |
| RP-29 | RP-050523 | 1352 | - | Secondary scrambling code in RADIO BEARER RELEASE messages in HSDPA RAB test cases | F | 5.12.0 | 6.0.0 | R5-051517 |
| RP-29 | RP-050523 | 1353 | - | Correction to GCF WI-014/2 RRC HSDPA test case 8.2.3.31 | F | 5.12.0 | 6.0.0 | R5-051518 |
| RP-29 | RP-050523 | 1354 | - | Correction to GCF WI-014/2 RRC HSDPA test case 8.2.3.32 | F | 5.12.0 | 6.0.0 | R5-051519 |
| RP-29 | RP-050523 | 1355 | - | Correction to WI-14 HSDPA RRC testcase 8.2.2.40 | F | 5.12.0 | 6.0.0 | R5-051521 |
| RP-29 | RP-050523 | 1356 | - | Correction to WI-14 MAC-HS test case 7.1.5.3 | F | 5.12.0 | 6.0.0 | R5-051551 |
| RP-29 | RP-050523 | 1357 | - | Correction to WI-14 HSDPA RRC testcases 8.2.6.39a, 8.2.6.39b and 8.2.6.40 | F | 5.12.0 | 6.0.0 | R5-051552 |
| RP-29 | RP-050599 | 1358 | - | Correction to Annexure C.4 and C.5 | F | 5.12.0 | 6.0.0 | R5-051322 |
| RP-29 | RP-050599 | 1359 | - | Replacement of the technical content of 34.123-1 Rel-5 by a pointer to Rel-6 document | F | 5.12.0 | 6.0.0 | R5-051585 |
| RP-29 | RP-050599 | 1360 | - | Correction to idle WI-10 test case 6.2.2.3 (not approved) | F | 5.12.0 | 6.0.0 | R5-051587 |
| RP-29 | RP-050599 | 1361 | - | New test case for Inter-frequency and Inter-RAT measurements | F | 5.12.0 | 6.0.0 | R5-051591 |
| RP-29 | RP-050599 | 1362 | - | Correction to WI-13/1 Test Case 6.1.2.10 | F | 5.12.0 | 6.0.0 | R5-051592 |
| RP-29 | RP-050533 | 1367 | - | Correction to WI-10 Inter system cell reselection testcases 8.3.9.1, 8.3.9.3 and 8.3.9.5 | F | 5.12.0 | 6.0.0 | - |
| RP-30 | RP-050781 | 1368 | - | Correction to WI 14/1 HSDPA RRC testcase 8.2.2.40 | F | 6.0.0 | 6.1.0 | R5-051805 |
| RP-30 | RP-050781 | 1369 | - | Correction to WI 14/2 HSDPA RRC testcase 8.2.6.41 | F | 6.0.0 | 6.1.0 | R5-051806 |
| RP-30 | RP-050781 | 1370 | - | Correction to WI 14 HSDPA RRC testcases 8.3.1.34 and 8.3.1.36 | F | 6.0.0 | 6.1.0 | R5-051807 |
| RP-30 | RP-050781 | 1371 | - | Correction to WI 14/1 HSDPA RRC testcase 8.2.1.32 | F | 6.0.0 | 6.1.0 | R5-051808 |
| RP-30 | RP-050781 | 1372 | - | Correction to WI 14 Inter-RAT cell change order from UTRAN testcase 8.3.11.10 | F | 6.0.0 | 6.1.0 | R5-052130 |
| RP-30 | RP-050781 | 1373 | - | Correction to WI 14 HSDPA RRC testcases 8.2.1.30, 8.2.2.39, 8.2.2.42, 8.2.3.32, 8.2.3.33, 8.2.6.41, 8.2.6.42, 8.2.6.46. | F | 6.0.0 | 6.1.0 | R5-052153 |
| RP-30 | RP-050781 | 1374 | - | Correction to WI 14 HSDPA RRC testcase 8.3.1.33 | F | 6.0.0 | 6.1.0 | R5-052154 |
| RP-30 | RP-050781 | 1375 | - | Correction to WI 14/2 HSDPA RRC testcase 8.3.1.37 | F | 6.0.0 | 6.1.0 | R5-051850 |
| RP-30 | RP-050781 | 1376 | - | Correction to HSDPA generic radio bearer test procedure (section 14.1.3) | F | 6.0.0 | 6.1.0 | R5-051856 |
| RP-30 | RP-050781 | 1377 | - | Correction to WI-14/1 HSDPA test case 7.1.5.5 | F | 6.0.0 | 6.1.0 | R5-051947 |
| RP-30 | RP-050781 | 1378 | - | Correction to WI-14/2 HSDPA test case 8.2.6.46 | F | 6.0.0 | 6.1.0 | R5-051948 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-30 | RP-050781 | 1379 | - | Corrections to WI-14 test case 8.3.7.14 | F | 6.0.0 | 6.1.0 | R5-051952 |
| RP-30 | RP-050781 | 1380 | - | Correction to Testcase 8.2.2.41 | F | 6.0.0 | 6.1.0 | R5-051988 |
| RP-30 | RP-050781 | 1381 | - | Correction to Radio Bearer Release Testcases (with HS-DSCH) | F | 6.0.0 | 6.1.0 | R5-051989 |
| RP-30 | RP-050781 | 1382 | - | Correction to Testcase 8.3.4.9 | F | 6.0.0 | 6.1.0 | R5-052071 |
| RP-30 | RP-050781 | 1383 | - | Correction to Testcase 7.1.5.3 | F | 6.0.0 | 6.1.0 | R5-052098 |
| RP-30 | RP-050781 | 1384 | - | Correction to Testcase 7.1.5.4 | F | 6.0.0 | 6.1.0 | R5-052099 |
| RP-30 | RP-050781 | 1385 | - | Correction to Testcase 8.3.1.36 | F | 6.0.0 | 6.1.0 | R5-052184 |
| RP-30 | RP-050781 | 1386 | - | New radio bearer test cases for HSDPA WB AMR | F | 6.0.0 | 6.1.0 | R5-052052 |
| RP-30 | RP-050717 | 1387 | - | New test case: (6.1.2.11 Cell reselection in shared network environment) | F | 6.0.0 | 6.1.0 | R5-051811 |
| RP-30 | RP-050717 | 1388 | - | New RRC test case: 8.3.3.4 UTRAN Mobility Information: Shared Network | F | 6.0.0 | 6.1.0 | R5-052137 |
| RP-30 | RP-050716 | 1389 | - | Addition of RADIO BEARER SETUP test case for EDCH | F | 6.0.0 | 6.1.0 | R5-052113 |
| RP-30 | RP-050716 | 1390 | - | Addition of RADIO BEARER RELEASE test case for EDCH | F | 6.0.0 | 6.1.0 | R5-052166 |
| RP-30 | RP-050718 | 1391 | - | CR to TS34.123-1; Adding a new test case for DSAC | F | 6.0.0 | 6.1.0 | R5-052161 |
| RP-30 | RP-050718 | 1392 | - | Addition of new MM location updating test case for DSAC. | F | 6.0.0 | 6.1.0 | R5-052147 |
| RP-30 | RP-050718 | 1393 | - | Addition of new MM connection test case for DSAC. | F | 6.0.0 | 6.1.0 | R5-052148 |
| RP-30 | RP-050718 | 1394 | - | Introduction of new GMM test cases for Domain Specific Access Control in a network that operates in mode II. | F | 6.0.0 | 6.1.0 | R5-052180 |
| RP-30 | RP-050718 | 1395 | - | Introduction of new GMM test cases for Domain Specific Access Control in a network that operates in mode I. | F | 6.0.0 | 6.1.0 | R5-052164 |
| RP-30 | RP-050777 | 1396 | - | Change the System Information 11 (TDD) in 8.1.2.10. | F | 6.0.0 | 6.1.0 | R5-052063 |
| RP-30 | RP-050777 | 1397 | - | Change the cell 1 power (TDD) at T1 and T2 in 8.3.1.21 | F | 6.0.0 | 6.1.0 | R5-052064 |
| RP-30 | RP-050777 | 1398 | - | Change Request to TC 8.3.1.22 | F | 6.0.0 | 6.1.0 | R5-052065 |
| RP-30 | RP-050777 | 1399 | - | Change the context of TRANSPORT CHANNEL RECONFIGURATION(TDD) in TC 8.2.4.1 | F | 6.0.0 | 6.1.0 | R5-052066 |
| RP-30 | RP-050777 | 1400 | - | Add the context of TRANSPORT CHANNEL RECONFIGURATION (TDD) in TC 8.2.4.1a, 8.2.4.3, 8.2.4.4, 8.2.4.10 | F | 6.0.0 | 6.1.0 | R5-052067 |
| RP-30 | RP-050777 | 1401 | - | Add P-CCPCH power for TDD in TC 8.3.11.6 | F | 6.0.0 | 6.1.0 | R5-052068 |
| RP-30 | RP-050771 | 1402 | - | Corrections to WI-10 test case 6.1.1.4 | F | 6.0.0 | 6.1.0 | R5-052080 |
| RP-30 | RP-050771 | 1403 | - | CR to 34.123-1: Correction to WI-010 (P2) test case 6.2.2.3 | F | 6.0.0 | 6.1.0 | R5-052126 |
| RP-30 | RP-050771 | 1404 | - | Editorial correction of missing generic test procedures to check UE's state according to Annex C. | F | 6.0.0 | 6.1.0 | R5-052127 |
| RP-30 | RP-050771 | 1405 | - | Correction to WI 10 and WI 12 RRC testcases 8.1.2.4, 8.1.2.10, 8.1.2.11, 8.1.10.1 | F | 6.0.0 | 6.1.0 | R5-052156 |
| RP-30 | RP-050771 | 1406 | - | Correction to WI 10/4 RRC test case 8.1.3.9 | F | 6.0.0 | 6.1.0 | R5-051830 |
| RP-30 | RP-050771 | 1407 | - | Corrections to WI-10 test case 8.1.10.1 | F | 6.0.0 | 6.1.0 | R5-052087 |
| RP-30 | RP-050771 | 1408 | - | Correction of WI-12 InterRAT test cases 8.1.2.12 and 8.1.2.13 | F | 6.0.0 | 6.1.0 | R5-051949 |
| RP-30 | RP-050777 | 1409 | - | Correction to Testcase 8.1.2.14 | F | 6.0.0 | 6.1.0 | R5-052168 |
| RP-30 | RP-050777 | 1410 | - | Correction to Testcase 8.1.2.15 | F | 6.0.0 | 6.1.0 | R5-052169 |
| RP-30 | RP-050771 | 1411 | - | Correction to WI 10 and WI 12 RRC testcases 8.2.1.24, 8.2.1.34, 8.2.2.31, 8.2.2.43, 8.2.6.37, 8.2.6.38 | F | 6.0.0 | 6.1.0 | R5-052151 |
| RP-30 | RP-050771 | 1412 | - | Corrections to WI-10 test case 8.2.2.35 | F | 6.0.0 | 6.1.0 | R5-052183 |
| RP-30 | RP-050771 | 1413 | - | Correction to WI-010 RRC test case 8.2.6.37 | F | 6.0.0 | 6.1.0 | R5-051916 |
| RP-30 | RP-050771 | 1414 | - | Correction to WI-12 test case 8.2.6.44 | F | 6.0.0 | 6.1.0 | R5-052075 |
| RP-30 | RP-050771 | 1415 | - | Correction to WI 10/4 Inter-RAT cell change order from UTRAN testcase 8.3.11.4 | F | 6.0.0 | 6.1.0 | R5-052129 |
| RP-30 | RP-050771 | 1416 | - | Correction to WI 10/4 Inter-system Handover from UTRAN to GSM testcase 8.3.7.12 | F | 6.0.0 | 6.1.0 | R5-052131 |
| RP-30 | RP-050771 | 1417 | - | Corrections to WI-10 test case 8.3.1.21 | F | 6.0.0 | 6.1.0 | R5-052082 |
| RP-30 | RP-050771 | 1418 | - | Corrections to WI-10 test case 8.3.2.13 | F | 6.0.0 | 6.1.0 | R5-052132 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-30 | RP-050777 | 1419 | - | Correction to WI-013 test case 8.3.1.40 | F | 6.0.0 | 6.1.0 | R5-051918 |
| RP-30 | RP-050771 | 1420 | - | Correction of WI-10 InterRAT test cases 8.3.7.x | F | 6.0.0 | 6.1.0 | R5-051950 |
| RP-30 | RP-050771 | 1421 | - | Corrections to WI-10 test case 8.3.1.18 | F | 6.0.0 | 6.1.0 | R5-051951 |
| RP-30 | RP-050771 | 1422 | - | Correction to WI-10/4 InterRAT test cases 8.3.11.1, 8.3.11.4 | F | 6.0.0 | 6.1.0 | R5-051972 |
| RP-30 | RP-050777 | 1423 | - | Correction to WI-13 InterRAT test cases 8.3.11.12, 8.3.11.13 | F | 6.0.0 | 6.1.0 | R5-051973 |
| RP-30 | RP-050771 | 1424 | - | Correction to WI-10/4 InterRAT test cases 8.3.9.1, 8.3.9.3, 8.3.9.5 | F | 6.0.0 | 6.1.0 | R5-051975 |
| RP-30 | RP-050771 | 1425 | - | Correction to WI-12 RRC test case 8.3.1.30 | F | 6.0.0 | 6.1.0 | R5-052133 |
| RP-30 | RP-050772 | 1426 | - | Correction to WI 10 and WI 12 RRC testcases 8.4.1.2, 8.4.1.6, 8.4.1.8, 8.4.1.25, 8.4.1.42, 8.4.1.43 | F | 6.0.0 | 6.1.0 | R5-052152 |
| RP-30 | RP-050772 | 1427 | - | Correction to WI 12 RRC testcase 8.4.1.6 | F | 6.0.0 | 6.1.0 | R5-051829 |
| RP-30 | RP-050772 | 1428 | - | Corrections to WI-12 test case 8.4.1.14 | F | 6.0.0 | 6.1.0 | R5-052084 |
| RP-30 | RP-050772 | 1429 | - | Corrections to WI-10 test case 8.4.1.3 | F | 6.0.0 | 6.1.0 | R5-052085 |
| RP-30 | RP-050772 | 1430 | - | Corrections to WI-10 test case 8.4.1.41 | F | 6.0.0 | 6.1.0 | R5-051866 |
| RP-30 | RP-050772 | 1431 | - | Corrections to WI-12 test case 8.4.1.6 | F | 6.0.0 | 6.1.0 | R5-052134 |
| RP-30 | RP-050772 | 1432 | - | Corrections to WI-10 test case 8.4.1.7 | F | 6.0.0 | 6.1.0 | R5-051868 |
| RP-30 | RP-050772 | 1433 | - | Correction to WI-10/3 InterRAT test cases 8.4.1.31, 8.4.1.33, 8.4.1.34, 8.4.1.35, 8.4.1.36, 8.4.1.40 | F | 6.0.0 | 6.1.0 | R5-051969 |
| RP-30 | RP-050772 | 1434 | - | Corrections to WI-010 test cases 8.4.1.33, 8.4.1.34, 8.4.1.35, 8.4.1.36, 8.4.1.37, 8.4.1.38, 8.4.1.39 and 8.4.1.40 | F | 6.0.0 | 6.1.0 | R5-051984 |
| RP-30 | RP-050772 | 1435 | - | Correction of RRC test cases 8.4.1.6 and 8.4.1.7 | F | 6.0.0 | 6.1.0 | R5-052027 |
| RP-30 | RP-050772 | 1436 | - | Correction of test case 8.4.1.8 | F | 6.0.0 | 6.1.0 | R5-052058 |
| RP-30 | RP-050772 | 1437 | - | Correction to MM section 9 to clarify test procedure for the PS registration in case of manual attach UE | F | 6.0.0 | 6.1.0 | R5-051804 |
| RP-30 | RP-050772 | 1438 | - | Correction to WI 12 NAS test case 9.4.3.3 | F | 6.0.0 | 6.1.0 | R5-052142 |
| RP-30 | RP-050772 | 1439 | - | Correction of MM test case 9.4.2.4 | F | 6.0.0 | 6.1.0 | R5-052076 |
| RP-30 | RP-050772 | 1440 | - | Correction to WI 10 NAS test cases 12.9.12, 12.9.13 & 12.9.14 | F | 6.0.0 | 6.1.0 | R5-051831 |
| RP-30 | RP-050772 | 1441 | - | Correction to GMM test cases in clause12 | F | 6.0.0 | 6.1.0 | R5-051870 |
| RP-30 | RP-050772 | 1442 | - | Correction to WI-12 GMM test case 12.3.2.7 | F | 6.0.0 | 6.1.0 | R5-052143 |
| RP-30 | RP-050772 | 1443 | - | Correction to DPCCH Power Offset IE in RADIO BEARER SETUP message: AM or UM (Packet to CELL_DCH from CELL_DCH in PS). | F | 6.0.0 | 6.1.0 | R5-051822 |
| RP-30 | RP-050772 | 1444 | - | Correction to WI 10/3 RB CTCH test case 14.4.4 | F | 6.0.0 | 6.1.0 | R5-051842 |
| RP-30 | RP-050772 | 1445 | - | Corrections to WI-12 test case 14.2.9 | F | 6.0.0 | 6.1.0 | R5-051953 |
| RP-30 | RP-050772 | 1446 | - | Corrections to low priority test cases 14.2.10 and 14.2.11 | F | 6.0.0 | 6.1.0 | R5-051954 |
| RP-30 | RP-050776 | 1447 | - | Addition of test case for multi-rate AMR-NB configuration using SRB#5 | F | 6.0.0 | 6.1.0 | R5-052177 |
| RP-30 | RP-050772 | 1448 | - | Correction to WI 12 Short message service cell broadcast test case 16.3 | F | 6.0.0 | 6.1.0 | R5-052170 |
| RP-30 | RP-050771 | 1449 | - | Corrections to GCF WI-15 test case 17.2.4.10 | F | 6.0.0 | 6.1.0 | R5-052173 |
| RP-30 | RP-050781 | 1450 | - | New radio bearer test cases for HSDPA streaming | F | 6.0.0 | 6.1.0 | R5-052051 |
| RP-30 | RP-050771 | 1451 | - | Corrections to WI-10 NAS test case 9.4.5.4.1 | F | 6.0.0 | 6.1.0 | R5-052157 |
| RP-30 | RP-050777 | 1452 | - | Correction to GCF WI-10 RLC test cases 7.1.3.1, 7.2.2.2, 7.2.2.3, 7.2.2.4, 7.2.2.5, 7.2.2.6 and 7.2.2.7 | F | 6.0.0 | 6.1.0 | R5-052207 |
| RP-30 | RP-050781 | 1453 | - | Correction to RAB HSDPA generic procedure. | F | 6.0.0 | 6.1.0 | R5-052199 |
| RP-31 | RP-060145 | 1454 | - | New test cases for MAC-es/e E-TFC selection | F | 6.1.0 | 6.2.0 | R5-060551 |
| RP-31 | RP-060156 | 1455 | - | Correction to WI-12 GMM test case 12.3.2.8.1 | F | 6.1.0 | 6.2.0 | R5-060562 |
| RP-31 | RP-060156 | 1456 | - | Corrections to GCF WI-10 and 12 test case RRC Test Case 8.2.6.37, 8.2.6.38, 8.4.1.2, 8.4.1.6, 8.4.1.8, 8.4.1.24, 8.4.1.25, 8.4.1.42, 8.4.1.43 | F | 6.1.0 | 6.2.0 | R5-060500 |
| RP-31 | RP-060156 | 1457 | - | Corrections to GCF WI-010 RRC test case 8.4.1.23 | F | 6.1.0 | 6.2.0 | R5-060398 |
| RP-31 | RP-060164 | 1458 | - | Correction to Testcase 8.4.1.47 | F | 6.1.0 | 6.2.0 | R5-060538 |
| RP-31 | RP-060145 | 1459 | - | New test case for MAC-es/e transport block size selection | F | 6.1.0 | 6.2.0 | R5-060553 |
| RP-31 | RP-060145 | 1460 | - | CR to 34.123-1;Adding new test cases for Enhanced Uplink | F | 6.1.0 | 6.2.0 | R5-060555 |
| RP-31 | RP-060145 | 1461 | - | New test cases for MAC-es/e E-DCH retransmissions | F | 6.1.0 | 6.2.0 | R5-060552 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-31 | RP-060145 | 1462 | - | New test cases for MAC-es/e scheduling | F | 6.1.0 | 6.2.0 | R5-060550 |
| RP-31 | RP-060145 | 1463 | - | New test cases for MAC-es/e multiplexing | F | 6.1.0 | 6.2.0 | R5-060549 |
| RP-31 | RP-060145 | 1464 | - | New Radio Bearer Reconfiguration test cases for Enhanced uplink | F | 6.1.0 | 6.2.0 | R5-060374 |
| RP-31 | RP-060145 | 1465 | - | Addition of a new FDD Enhanced Uplink Physical Channel Reconfiguration test case | F | 6.1.0 | 6.2.0 | R5-060372 |
| RP-31 | RP-060145 | 1466 | - | Addition of two Cell Update test cases for FDD Enhanced Uplink testing | F | 6.1.0 | 6.2.0 | R5-060337 |
| RP-31 | RP-060145 | 1467 | - | Addition of one test case about Physical Channel Reconfiguration for FDD Enhanced Uplink | F | 6.1.0 | 6.2.0 | R5-060548 |
| RP-31 | RP-060150 | 1468 | - | New test case: 6.2.2.4 Cell reselection in multi-mode shared network environment | F | 6.1.0 | 6.2.0 | R5-060387 |
| RP-31 | RP-060150 | 1469 | - | New test case: 6.2.1.11 Selection of PLMN and RAT in shared network environment, Manual mode | F | 6.1.0 | 6.2.0 | R5-060386 |
| RP-31 | RP-060150 | 1470 | - | New test case: 6.1.1.9 PLMN selection in shared network environment, Manual Mode | F | 6.1.0 | 6.2.0 | R5-060385 |
| RP-31 | RP-060147 | 1471 | - | Corrections to HSDPA RB test cases 14.6.8 | F | 6.1.0 | 6.2.0 | R5-060369 |
| RP-31 | RP-060156 | 1472 | - | Corrections to GCF WI-10 NAS test case 12.4.1.4c Proc 1 | F | 6.1.0 | 6.2.0 | R5-060539 |
| RP-31 | RP-060156 | 1473 | - | Correction of initial condition of TC 8.1.1.1 and TC 8.1.1.9 for CS domain | F | 6.1.0 | 6.2.0 | R5-060541 |
| RP-31 | RP-060150 | 1474 | - | Correction of initial condition of TC 8.1.1.11 for CS domain | F | 6.1.0 | 6.2.0 | R5-060540 |
| RP-31 | RP-060147 | 1475 | - | Correction to the HS-SCCH channelisation code used in the Radio Bearer control procedure test cases | F | 6.1.0 | 6.2.0 | R5-060325 |
| RP-31 | RP-060145 | 1476 | - | Generic test procedure for E-DCH radio bearer testing | F | 6.1.0 | 6.2.0 | R5-060366 |
| RP-31 | RP-060145 | 1477 | - | New E-DCH radio bearer test cases 14.7.5 | F | 6.1.0 | 6.2.0 | R5-060330 |
| RP-31 | RP-060145 | 1478 | - | New E-DCH radio bearer test cases 14.7.4 | F | 6.1.0 | 6.2.0 | R5-060329 |
| RP-31 | RP-060145 | 1479 | - | New EDCH Physical Channel Reconfiguration test case for transition from CELL_DCH to CELL_DCH: Success (with ongoing E-DCH transmission) | F | 6.1.0 | 6.2.0 | R5-060382 |
| RP-31 | RP-060145 | 1480 | - | New E-DCH radio bearer test cases 14.7.1, 14.7.2 and 14.7.3 | F | 6.1.0 | 6.2.0 | R5-060379 |
| RP-31 | RP-060156 | 1481 | - | Corrections to GCF WI-10 RRC test case 8.3.2.13 | F | 6.1.0 | 6.2.0 | R5-060397 |
| RP-31 | RP-060147 | 1482 | - | Correction to GCF WI 14/2 Inter-system hard handover from UTRAN to GSM test case 8.3.7.14 | F | 6.1.0 | 6.2.0 | R5-060228 |
| RP-31 | RP-060156 | 1483 | - | Correction to GCF WI-012 MM test case 9.4.5.4.6 | F | 6.1.0 | 6.2.0 | R5-060509 |
| RP-31 | RP-060156 | 1484 | - | Correction to GCF WI 10/4 NAS test case 12.4.1.1b | F | 6.1.0 | 6.2.0 | R5-060080 |
| RP-31 | RP-060156 | 1485 | - | Correction to RRC test cases 8.1.1.1, 8.1.1.9 and 8.1.1.11 | F | 6.1.0 | 6.2.0 | R5-060504 |
| RP-31 | RP-060156 | 1486 | - | Correction to approved WI-10 test case 8.3.7.5 | F | 6.1.0 | 6.2.0 | R5-060209 |
| RP-31 | RP-060156 | 1487 | - | Correction to approved WI-10 test case 8.4.1.31 | F | 6.1.0 | 6.2.0 | R5-060208 |
| RP-31 | RP-060156 | 1488 | - | Correction of WI-10 InterRAT test cases 6.2.X.X | F | 6.1.0 | 6.2.0 | R5-060051 |
| RP-31 | RP-060156 | 1489 | - | CR to 34.123-1: Correction to WI-010 (P2) test case 6.2.2.3 | F | 6.1.0 | 6.2.0 | R5-060009 |
| RP-31 | RP-060145 | 1490 | - | New Physical Channel Reconfiguration test case for Enhanced uplink | F | 6.1.0 | 6.2.0 | R5-060376 |
| RP-31 | RP-060145 | 1491 | - | Addition of two new FDD Enhanced Uplink Radio Bearer Reconfiguration test cases | F | 6.1.0 | 6.2.0 | R5-060371 |
| RP-31 | RP-060147 | 1492 | - | Downlink compressed mode method when using HS-DSCH | F | 6.1.0 | 6.2.0 | R5-060503 |
| RP-31 | RP-060147 | 1493 | - | Corrections to HSDPA RB test cases 14.6.6 and 14.6.7 | F | 6.1.0 | 6.2.0 | R5-060169 |
| RP-31 | RP-060156 | 1494 | - | Correction to testcase 14.2.58a and 14.2.51b.1 | F | 6.1.0 | 6.2.0 | R5-060231 |
| RP-31 | RP-060156 | 1495 | - | Correction to approved GMM test case 12.4.2.4 | F | 6.1.0 | 6.2.0 | R5-060223 |
| RP-31 | RP-060156 | 1496 | - | Correction to GCF WI-12/1 NAS test case 12.3.2.7 | F | 6.1.0 | 6.2.0 | R5-060347 |
| RP-31 | RP-060156 | 1497 | - | Corrections to GCF WI-10 test case 12.4.1.4c.1 | F | 6.1.0 | 6.2.0 | R5-060067 |
| RP-31 | RP-060156 | 1498 | - | Correction to approved MM test case 9.4.3.3 | F | 6.1.0 | 6.2.0 | R5-060226 |
| RP-31 | RP-060156 | 1499 | - | Correction to TC 9.4.5.4.1 | F | 6.1.0 | 6.2.0 | R5-060136 |
| RP-31 | RP-060156 | 1500 | - | Corrections to testcases 8.2.1.24 & 8.2.1.34 | F | 6.1.0 | 6.2.0 | R5-060342 |
| RP-31 | RP-060156 | 1501 | - | Correction to approved RRC test case 8.3.4.2 | F | 6.1.0 | 6.2.0 | R5-060225 |
| RP-31 | RP-060157 | 1502 | - | Correction to approved WI-10 test case 8.1.7.1d | F | 6.1.0 | 6.2.0 | R5-060204 |
| RP-31 | RP-060157 | 1503 | - | Corrections to GCF WI-10 RRC test case 8.4.1.14 | F | 6.1.0 | 6.2.0 | R5-060108 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-31 | RP-060157 | 1504 | - | Corrections to GCF WI-12 RRC_ActSetUpdate test case 8.3.4.8 | F | 6.1.0 | 6.2.0 | R5-060071 |
| RP-31 | RP-060157 | 1505 | - | Correction of WI-10/3 Inter-RAT test case 8.4.1.31 | F | 6.1.0 | 6.2.0 | R5-060068 |
| RP-31 | RP-060157 | 1506 | - | Corrections to GCF WI-010 RRC test case 8.3.1.24 | F | 6.1.0 | 6.2.0 | R5-060061 |
| RP-31 | RP-060157 | 1507 | - | Corrections to GCF WI-010 RRC test case 8.3.1.18 | F | 6.1.0 | 6.2.0 | R5-060060 |
| RP-31 | RP-060157 | 1508 | - | Correction to WI-10/3 RRC testcase 8.4.1.36 | F | 6.1.0 | 6.2.0 | R5-060052 |
| RP-31 | RP-060164 | 1509 | - | Corrections to GCF WI-13/1 test case 8.3.1.40 | F | 6.1.0 | 6.2.0 | R5-060346 |
| RP-31 | RP-060157 | 1510 | - | Corrections to GCF WI-010/4 test case 8.3.11.4 | F | 6.1.0 | 6.2.0 | R5-060345 |
| RP-31 | RP-060157 | 1511 | - | Corrections to GCF WI-10/4 test case 8.3.7.12 | F | 6.1.0 | 6.2.0 | R5-060344 |
| RP-31 | RP-060157 | 1512 | - | Corrections to approved GCF WI-10 test case 7.1.2.4a | F | 6.1.0 | 6.2.0 | R5-060343 |
| RP-31 | RP-060157 | 1513 | - | Corrections to GCF WI-10 test case 7.2.3.21 and 7.2.3.22 | F | 6.1.0 | 6.2.0 | R5-060058 |
| RP-31 | RP-060157 | 1514 | - | Corrections to GCF WI-10/1 Idle Mode test case 6.1.2.1 | F | 6.1.0 | 6.2.0 | R5-060278 |
| RP-31 | RP-060157 | 1515 | - | Correction to GCF WI-010 Idle Mode test case 6.1.1.4 | F | 6.1.0 | 6.2.0 | R5-060199 |
| RP-31 | RP-060157 | 1516 | - | Corrections to GCF WI-10/2 Idle Mode test case 6.1.2.8 | F | 6.1.0 | 6.2.0 | R5-060050 |
| RP-31 | RP-060166 | 1517 | - | CR to TS34.123-1; Correction to DSAC test cases at clause 12. | F | 6.1.0 | 6.2.0 | R5-060219 |
| RP-31 | RP-060166 | 1518 | - | CR to TS34.123-1; Correction to the applicability in 9.4.3.6 and 9.5.9. | F | 6.1.0 | 6.2.0 | R5-060390 |
| RP-31 | RP-060166 | 1519 | - | CR to TS34.123-1; Correction to RRC test case 8.1.2.16 | F | 6.1.0 | 6.2.0 | R5-060217 |
| RP-31 | RP-060157 | 1520 | - | Corrections to GCF WI-010/1 Idle Mode test case 6.1.2.2 | F | 6.1.0 | 6.2.0 | R5-060134 |
| RP-31 | RP-060157 | 1521 | - | Correction to GCF WI-010 HCS idle mode test cases 6.1.2.3, 6.1.2.4 and 6.1.2.5 | F | 6.1.0 | 6.2.0 | R5-060120 |
| RP-31 | RP-060164 | 1522 | - | Correction to GCF WI-013 HCS idle mode test case 6.1.2.10 | F | 6.1.0 | 6.2.0 | R5-060121 |
| RP-31 | RP-060164 | 1523 | - | Correction to GCF WI-013 RAB test case 14.2.62 | F | 6.1.0 | 6.2.0 | R5-060076 |
| RP-31 | RP-060163 | 1524 | - | Update of GCF WI-013 RB test case 14.2.4b | F | 6.1.0 | 6.2.0 | R5-060126 |
| RP-31 | RP-060150 | 1525 | - | Removal of all references to TDD in 34.123-1 | F | 6.1.0 | 6.2.0 | R5-060148 |
| RP-31 | RP-060150 | 1526 | - | Corrections to broadcasted PLMN codes in idle mode tests (Network Sharing) | F | 6.1.0 | 6.2.0 | R5-060147 |
| RP-31 | RP-060147 | 1527 | - | CR to TS34.123-1:New test case for HSDPA RAB combination with uplink 128 kpbs | F | 6.1.0 | 6.2.0 | R5-060300 |
| RP-31 | RP-060147 | 1528 | - | Correction to testcase 14.6.5 | F | 6.1.0 | 6.2.0 | R5-060361 |
| RP-31 | RP-060147 | 1529 | - | Correction to Testcase 7.1.5.2 | F | 6.1.0 | 6.2.0 | R5-060252 |
| RP-31 | RP-060147 | 1530 | - | Corrections to testcases 8.2.3.33, 8.2.6.39a & 8.2.6.39b | F | 6.1.0 | 6.2.0 | R5-060232 |
| RP-31 | RP-060147 | 1531 | - | Correction to GCF WI 14/2 Inter-RAT cell change order from UTRAN test case 8.3.11.10 | F | 6.1.0 | 6.2.0 | R5-060227 |
| RP-31 | RP-060147 | 1532 | - | Corrections to WI-14 HSDPA UL 64 kbps RAB test cases | F | 6.1.0 | 6.2.0 | R5-060207 |
| RP-31 | RP-060147 | 1533 | - | Correction to WI-14 test case 8.3.11.10 | F | 6.1.0 | 6.2.0 | R5-060205 |
| RP-31 | RP-060147 | 1534 | - | Introduction of generic test procedure for testing of HSDPA radio bearers in combination with AMR using SRB#5 for TFC control | F | 6.1.0 | 6.2.0 | R5-060202 |
| RP-31 | RP-060147 | 1535 | - | Correction to GCF WI 14/2 RRC testcase 8.2.3.33 | F | 6.1.0 | 6.2.0 | R5-060334 |
| RP-31 | RP-060147 | 1536 | - | Correction to GCF WI 14/2 RRC testcase 8.2.2.42 | F | 6.1.0 | 6.2.0 | R5-060079 |
| RP-31 | RP-060147 | 1537 | - | Correction to GCF WI 14/2 RRC test case 8.3.4.9 | F | 6.1.0 | 6.2.0 | R5-060078 |
| RP-31 | RP-060157 | 1538 | - | Addition of T309 timer value | F | 6.1.0 | 6.2.0 | R5-060567 |
| RP-31 | RP-060157 | 1539 | - | Corrections to GCF WI-010 RRC test case 8.4.1.43 | F | 6.1.0 | 6.2.0 | R5-060558 |
| RP-31 | RP-060157 | 1540 | - | Corrections to GCF WI-12/1 InterRAT test case 8.4.1.48 | F | 6.1.0 | 6.2.0 | R5-060559 |
| - | - | - | - | File 34123-1-320_s13_s15.doc crashes MS Word2000 - repaired by ETSI MCC | - | 6.2.0 | 6.2.1 | - |
| RP-32 | RP-060337 | 1541 | - | Correction to the table 8.3.7-1 for GCF WI 14/2 Inter-system hard handover from UTRAN to GSM test case 8.3.7.14 | F | 6.2.1 | 6.3.0 | R5-061030 |
| RP-32 | RP-060337 | 1542 | - | Corrections to GCF WI-014 HSENH test case 8.2.6.39b | F | 6.2.1 | 6.3.0 | R5-061296 |
| RP-32 | RP-060337 | 1543 | - | Correction to testcase 8.2.6.48 | F | 6.2.1 | 6.3.0 | R5-061297 |
| RP-32 | RP-060337 | 1544 | - | Corrections to WI-14 HSDPA UL 64 kbps RAB test | F | 6.2.1 | 6.3.0 | R5-061298 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | cases | | | | |
| RP-32 | RP-060337 | 1545 | - | Correction to the initial conditions for mac-hs testcases | F | 6.2.1 | 6.3.0 | R5-061301 |
| RP-32 | RP-060337 | 1546 | - | Correction to the generic test procedure for HS-DSCH radio bearer combinations with AMR RB configurations using SRB#5 for TFC control | F | 6.2.1 | 6.3.0 | R5-061331 |
| RP-32 | RP-060337 | 1547 | - | Correction to GCF WI-14 radio bearer test case 14.6.5 | F | 6.2.1 | 6.3.0 | R5-061199 |
| RP-32 | RP-060337 | 1548 | - | Correction to GCF WI-014 test case 7.1.5.6 | F | 6.2.1 | 6.3.0 | R5-061394 |
| RP-32 | RP-060337 | 1549 | - | Correction to GCF WI 14/2 RRC testcase 8.2.6.48 | F | 6.2.1 | 6.3.0 | R5-061280 |
| RP-32 | RP-060338 | 1550 | - | Contents addition for LCR TDD in 8.2.1.32 | F | 6.2.1 | 6.3.0 | R5-061039 |
| RP-32 | RP-060338 | 1551 | - | CR for 34.123-1:Addition of the test case of 8.2.1.27a for LCR TDD | F | 6.2.1 | 6.3.0 | R5-061055 |
| RP-32 | RP-060338 | 1552 | - | CR for 34.123-1:Contents addition for LCR TDD in 8.2.1.28 | F | 6.2.1 | 6.3.0 | R5-061056 |
| RP-32 | RP-060338 | 1553 | - | CR for 34.123-1:Contents addition for LCR TDD in 8.2.2.36 | F | 6.2.1 | 6.3.0 | R5-061057 |
| RP-32 | RP-060338 | 1554 | - | CR for 34.123-1:Contents addition for LCR TDD in 8.2.2.37 | F | 6.2.1 | 6.3.0 | R5-061058 |
| RP-32 | RP-060338 | 1555 | - | CR for 34.123-1:Contents addition for LCR TDD in 8.2.2.38 | F | 6.2.1 | 6.3.0 | R5-061059 |
| RP-32 | RP-060338 | 1556 | - | CR for 34.123-1:Contents addition for LCR TDD in 8.2.2.41 | F | 6.2.1 | 6.3.0 | R5-061060 |
| RP-32 | RP-060338 | 1557 | - | CR for 34.123-1:Contents addition for LCR TDD in 8.2.3.30 | F | 6.2.1 | 6.3.0 | R5-061292 |
| RP-32 | RP-060338 | 1558 | - | CR for 34.123-1:Contents addition for LCR TDD in 8.2.3.31 | F | 6.2.1 | 6.3.0 | R5-061062 |
| RP-32 | RP-060338 | 1559 | - | CR for 34.123-1:Contents addition for LCR TDD in 8.2.3.35 | F | 6.2.1 | 6.3.0 | R5-061063 |
| RP-32 | RP-060338 | 1560 | - | CR for 34.123-1:Contents Addition for LCR TDD in 8.3.1.32 | F | 6.2.1 | 6.3.0 | R5-061064 |
| RP-32 | RP-060338 | 1561 | - | CR for 34.123-1:Contents Addition for LCR TDD in 8.3.1.35 | F | 6.2.1 | 6.3.0 | R5-061065 |
| RP-32 | RP-060338 | 1562 | - | CR for 34.123-1:Addition of test cases of the combinations on DPCH and HS-PDSCH for LCR TDD | F | 6.2.1 | 6.3.0 | R5-061066 |
| RP-32 | RP-060338 | 1563 | - | Contents addition for LCR TDD in 8.2.1.31 | F | 6.2.1 | 6.3.0 | R5-061154 |
| RP-32 | RP-060332 | 1564 | - | New Enhanced Uplink RRC test case for Active Set Update With Serving Cell Change | F | 6.2.1 | 6.3.0 | R5-061351 |
| RP-32 | RP-060332 | 1565 | - | Correction to Enhanced uplink RRC test case 8.2.6.51 on MAC-d flow multiplexing | F | 6.2.1 | 6.3.0 | R5-061304 |
| RP-32 | RP-060332 | 1566 | - | New Radio Bearer Reconfiguration test cases for Enhanced uplink | F | 6.2.1 | 6.3.0 | R5-061382 |
| RP-32 | RP-060332 | 1567 | - | Generalize E-DCH radio bearer names | F | 6.2.1 | 6.3.0 | R5-061159 |
| RP-32 | RP-060332 | 1568 | - | Addition of details to E-DCH radio bearer test case 14.7.5 | F | 6.2.1 | 6.3.0 | R5-061316 |
| RP-32 | RP-060332 | 1569 | - | Introduction of test cases for conversational radio bearer combinations for E-DCH/HS-DSCH testing | F | 6.2.1 | 6.3.0 | R5-061317 |
| RP-32 | RP-060333 | 1570 | - | Test case 7.1.6.2.1 for MAC-es/e scheduling | F | 6.2.1 | 6.3.0 | R5-061343 |
| RP-32 | RP-060333 | 1571 | - | New MAC-es/e combined non-scheduled and scheduled transmissions test case | F | 6.2.1 | 6.3.0 | R5-061513 |
| RP-32 | RP-060333 | 1572 | - | Correction to Enhanced Uplink DCH test case | F | 6.2.1 | 6.3.0 | R5-061306 |
| RP-32 | RP-060333 | 1573 | - | New Mac-es/e test case de-activation and re-activation of HARQ processes | F | 6.2.1 | 6.3.0 | R5-061307 |
| RP-32 | RP-060333 | 1574 | - | New Mac-es/e test case correct handling of absolute grants | F | 6.2.1 | 6.3.0 | R5-061308 |
| RP-32 | RP-060333 | 1575 | - | New Mac-es/e test case correct handling of relative grants | F | 6.2.1 | 6.3.0 | R5-061309 |
| RP-32 | RP-060333 | 1576 | - | E-HICH/E-RGCH and E-AGCH codes used in Physical Channel Reconfiguration test cases | F | 6.2.1 | 6.3.0 | R5-061247 |
| RP-32 | RP-060333 | 1577 | - | Introduction of test case for WB-AMR RAB combination for E-DCH/HS-DSCH testing | F | 6.2.1 | 6.3.0 | R5-061340 |
| RP-32 | RP-060331 | 1578 | - | Correction to GMM test cases in sub clause 12.4.2.11, 12.4.2.12 | F | 6.2.1 | 6.3.0 | R5-061077 |
| RP-32 | RP-060322 | 1579 | - | Corrections to GCF WI-010 RRC test cases 6.1.2.4 and 6.1.2.5 . | F | 6.2.1 | 6.3.0 | R5-061319 |
| RP-32 | RP-060329 | 1580 | - | Corrections to GCF WI-013 Idle Mode test case 6.1.2.10 | F | 6.2.1 | 6.3.0 | R5-061320 |
| RP-32 | RP-060322 | 1582 | - | Correction to GCF WI 10/3 Idle mode testcase 6.1.2.6 | F | 6.2.1 | 6.3.0 | R5-061378 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-32 | RP-060322 | 1583 | - | Correction to GCF WI-10/2 InterRAT test case 6.2.2.1 | F | 6.2.1 | 6.3.0 | R5-061099 |
| RP-32 | RP-060322 | 1584 | - | Correction to GCF WI-10/2 InterRAT test case 6.2.2.2 | F | 6.2.1 | 6.3.0 | R5-061102 |
| RP-32 | RP-060329 | 1585 | - | Correction to GCF WI 13/1 RRC testcase 8.4.1.47 | F | 6.2.1 | 6.3.0 | R5-061029 |
| RP-32 | RP-060323 | 1586 | - | Corrections to GCF WI-010 RRC test case 8.4.1.25. | F | 6.2.1 | 6.3.0 | R5-061370 |
| RP-32 | RP-060329 | 1587 | - | Correction to WI-13 RRC test case 8.4.1.47 | F | 6.2.1 | 6.3.0 | R5-061071 |
| RP-32 | RP-060323 | 1588 | - | Corrections to GCF WI 10 and WI 12 RRC test case 8.1.1.1 and 8.1.1.9 | F | 6.2.1 | 6.3.0 | R5-061078 |
| RP-32 | RP-060323 | 1589 | - | Correction to GCF WI 12/1 RRC testcase 8.2.6.44 | F | 6.2.1 | 6.3.0 | R5-061323 |
| RP-32 | RP-060323 | 1590 | - | Correction to GCF WI 12/1 RRC testcase 8.2.6.39 | F | 6.2.1 | 6.3.0 | R5-061324 |
| RP-32 | RP-060323 | 1591 | - | Editorial Corrections to GCF WI-10/3 InterRAT test case 8.4.1.33 | F | 6.2.1 | 6.3.0 | R5-061122 |
| RP-32 | RP-060323 | 1592 | - | Editorial correction to GCF WI-10/3 InterRAT test case 8.4.1.34 | F | 6.2.1 | 6.3.0 | R5-061125 |
| RP-32 | RP-060323 | 1593 | - | Editorial correction to GCF WI-10/3 InterRAT test case 8.4.1.35 | F | 6.2.1 | 6.3.0 | R5-061127 |
| RP-32 | RP-060323 | 1594 | - | Editorial correction to GCF WI-10/3 InterRAT test case 8.4.1.36 | F | 6.2.1 | 6.3.0 | R5-061128 |
| RP-32 | RP-060323 | 1595 | - | Editorial Correction to GCF WI-10/3 InterRAT test case 8.4.1.40 | F | 6.2.1 | 6.3.0 | R5-061129 |
| RP-32 | RP-060323 | 1596 | - | Editorial Correction to GCF WI-12/1 InterRAT test case 8.4.1.48 | F | 6.2.1 | 6.3.0 | R5-061130 |
| RP-32 | RP-060323 | 1597 | - | 34.123-1 Section 8.1 - Corrections to the values for IE based on calculated ASN.1 value. | F | 6.2.1 | 6.3.0 | R5-061325 |
| RP-32 | RP-060323 | 1598 | - | 34.123-1 Section 8.2 - Corrections to the values for IE based on calculated ASN.1 value. | F | 6.2.1 | 6.3.0 | R5-061132 |
| RP-32 | RP-060323 | 1599 | - | 34.123-1 Section 8.3 - Corrections to the values for IE based on calculated ASN.1 value. | F | 6.2.1 | 6.3.0 | R5-061353 |
| RP-32 | RP-060323 | 1600 | - | Corrections to values for IEs based on calculated ASN.1 | F | 6.2.1 | 6.3.0 | R5-061326 |
| RP-32 | RP-060329 | 1601 | - | Correction to testcase 8.4.1.47 | F | 6.2.1 | 6.3.0 | R5-061327 |
| RP-32 | RP-060329 | 1602 | - | Correction to GCF WI-13 Inter-RAT cell change order from UTRAN test case 8.3.11.12 and 8.3.11.13 | F | 6.2.1 | 6.3.0 | R5-061371 |
| RP-32 | RP-060323 | 1603 | - | Correction to WI-012 RRC test case 8.4.1.48 | F | 6.2.1 | 6.3.0 | R5-061170 |
| RP-32 | RP-060323 | 1604 | - | Correction to WI-12 RRC test case 8.3.1.30 | F | 6.2.1 | 6.3.0 | R5-061302 |
| RP-32 | RP-060323 | 1605 | - | Correction to GCF WI-12 test case 8.3.1.30 | F | 6.2.1 | 6.3.0 | R5-061222 |
| RP-32 | RP-060323 | 1606 | - | Correction to GCF WI-10 test case 8.4.1.35 | F | 6.2.1 | 6.3.0 | R5-061239 |
| RP-32 | RP-060323 | 1607 | - | Correction to testcase 9.4.3.3 | F | 6.2.1 | 6.3.0 | R5-061360 |
| RP-32 | RP-060323 | 1608 | - | Correction to approved GMM TC 12.4.1.4a | F | 6.2.1 | 6.3.0 | R5-061275 |
| RP-32 | RP-060324 | 1609 | - | Correction to GCF WI-10 GMM test case 12.4.1.4b | F | 6.2.1 | 6.3.0 | R5-061137 |
| RP-32 | RP-060324 | 1610 | - | Correction to approved GMM TC 12.9.7b | F | 6.2.1 | 6.3.0 | R5-061352 |
| RP-32 | RP-060324 | 1611 | - | Correction to GCF WI-12 GMM test case 12.4.1.1b | F | 6.2.1 | 6.3.0 | R5-061328 |
| RP-32 | RP-060324 | 1612 | - | Correction to testcase 14.2.40 and 14.2.41 | F | 6.2.1 | 6.3.0 | R5-061329 |
| RP-32 | RP-060328 | 1613 | - | Correction to the generic radio bearer test procedure for standalone AMR RB configurations using SRB#5 for TFC control | F | 6.2.1 | 6.3.0 | R5-061330 |
| RP-33 | RP-060568 | 1614 | - | CR to 34.123-1: Contents Addition for LCR TDD in 8.2.1.30 | F | 6.3.0 | 6.4.0 | R5-062073 |
| RP-33 | RP-060568 | 1615 | - | CR to 34.123-1: Contents Addition for LCR TDD in 8.2.2.39 | F | 6.3.0 | 6.4.0 | R5-062074 |
| RP-33 | RP-060568 | 1616 | - | CR to 34.123-1: Contents Addition for LCR TDD in 8.2.2.42 | F | 6.3.0 | 6.4.0 | R5-062075 |
| RP-33 | RP-060568 | 1617 | - | CR to 34.123-1: Contents Addition for LCR TDD in 8.2.3.32 | F | 6.3.0 | 6.4.0 | R5-062076 |
| RP-33 | RP-060568 | 1618 | - | CR to 34.123-1: Contents Addition for LCR TDD in 8.3.1.33 | F | 6.3.0 | 6.4.0 | R5-062078 |
| RP-33 | RP-060568 | 1619 | - | CR to 34.123-1: Contents Addition for LCR TDD in 8.3.1.34 | F | 6.3.0 | 6.4.0 | R5-062399 |
| RP-33 | RP-060568 | 1620 | - | CR to 34.123-1: Contents Addition for LCR TDD in 8.3.1.36 | F | 6.3.0 | 6.4.0 | R5-062080 |
| RP-33 | RP-060568 | 1621 | - | CR to 34.123-1: Contents Addition for LCR TDD in 8.3.1.37 | F | 6.3.0 | 6.4.0 | R5-062081 |
| RP-33 | RP-060568 | 1622 | - | CR to 34.123-1: Addition of LCR TDD contents to testcase 8.2.1.29 | F | 6.3.0 | 6.4.0 | R5-062500 |
| RP-33 | RP-060568 | 1623 | - | CR to 34.123-1: Addition of TDD contents to | F | 6.3.0 | 6.4.0 | R5-062501 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | testcase 8.2.1.32 | | | | |
| RP-33 | RP-060568 | 1624 | - | CR to 34.123-1: Addition of LCR TDD contents to testcase 8.2.2.40 | F | 6.3.0 | 6.4.0 | R5-062502 |
| RP-33 | RP-060568 | 1625 | - | CR to 34.123-1: Addition of LCR TDD contents to testcase 8.2.3.33 | F | 6.3.0 | 6.4.0 | R5-062503 |
| RP-33 | RP-060568 | 1626 | - | CR to 34.123-1: Addition of LCR TDD contents to testcase 8.2.3.34 | F | 6.3.0 | 6.4.0 | R5-062114 |
| RP-33 | RP-060568 | 1627 | - | CR to 34.123-1: Addition of LCR TDD contents to testcase 8.2.4.36 | F | 6.3.0 | 6.4.0 | R5-062504 |
| RP-33 | RP-060568 | 1628 | - | CR to 34.123-1: Addition of TDD part for testcase 8.2.6.42 | F | 6.3.0 | 6.4.0 | R5-062505 |
| RP-33 | RP-060568 | 1629 | - | CR to 34.123-1: Addition of LCR TDD contents to testcase 8.2.6.46 | F | 6.3.0 | 6.4.0 | R5-062506 |
| RP-33 | RP-060568 | 1630 | - | CR to 34.123-1: Addition of LCR TDD contents to testcase 8.2.6.49 | F | 6.3.0 | 6.4.0 | R5-062507 |
| RP-33 | RP-060568 | 1631 | - | CR to 34.123-1: Contents Addition for LCR TDD in 8.3.11.9, 8.3.11.10 and 8.3.7.14 | F | 6.3.0 | 6.4.0 | R5-062508 |
| RP-33 | RP-060568 | 1632 | - | CR to 34.123-1: New test case addition of 8.2.6.40a to LCR TDD | F | 6.3.0 | 6.4.0 | R5-062509 |
| RP-33 | RP-060566 | 1634 | - | Addition of 3.84 Mcps TDD MAC-hs transport block size selection to HS-DSCH MAC-hs Tests | F | 6.3.0 | 6.4.0 | R5-062542 |
| RP-33 | RP-060566 | 1635 | - | Addition of combinations on DPCH and HS-PDSCH for interoperability radio bearer tests for 3.84 Mcps TDD | F | 6.3.0 | 6.4.0 | R5-062384 |
| RP-33 | RP-060566 | 1636 | - | Addition of test: Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, serving HS-DSCH cell change) for 3.84 Mcps TDD | F | 6.3.0 | 6.4.0 | R5-062385 |
| RP-33 | RP-060566 | 1637 | - | Addition of TFRC test points for HS-DSCH radio bearer testing in 3.84 Mcps | F | 6.3.0 | 6.4.0 | R5-062386 |
| RP-33 | RP-060566 | 1638 | - | Update of test: Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH (Hard handover to another frequency with timing re-initialised. Serving HS-DSCH cell change): Failure (Physical channel failure and reversion to old channel) to include 3.84 Mcps TDD | F | 6.3.0 | 6.4.0 | R5-062258 |
| RP-33 | RP-060566 | 1639 | - | Update of test: Radio Bearer Establishment for transition from CELL_FACH to CELL_DCH: Success (Start of HS-DSCH reception) to include 3.84Mcps TDD | F | 6.3.0 | 6.4.0 | R5-062261 |
| RP-33 | RP-060566 | 1640 | - | Update of test: Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of HS-DSCH reception) to include 3.84 Mcps TDD | F | 6.3.0 | 6.4.0 | R5-062262 |
| RP-33 | RP-060566 | 1641 | - | Update of test: Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_FACH and from CELL_FACH to CELL_DCH: Success (start and stop of HS-DSCH reception) to include 3.84 Mcps TDD | F | 6.3.0 | 6.4.0 | R5-062263 |
| RP-33 | RP-060566 | 1642 | - | Update of test: Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (stop of HS-DSCH reception) to include 3.84 Mcps TDD | F | 6.3.0 | 6.4.0 | R5-062265 |
| RP-33 | RP-060567 | 1643 | - | Correction to the generic test procedure for HS-DSCH radio bearer combinations with AMR RB configurations using SRB#5 for TFC control | F | 6.3.0 | 6.4.0 | R5-062312 |
| RP-33 | RP-060567 | 1644 | - | Corrections to HSDPA test case 8.2.6.39a | F | 6.3.0 | 6.4.0 | R5-062313 |
| RP-33 | RP-060567 | 1645 | - | Corrections to HSDPA test case 8.2.6.39b | F | 6.3.0 | 6.4.0 | R5-062314 |
| RP-33 | RP-060567 | 1646 | - | Correction to GCF WI-14 HSDPA Test Cases 8.3.1.35 and 8.3.1.37 | F | 6.3.0 | 6.4.0 | R5-062294 |
| RP-33 | RP-060567 | 1647 | - | Corrections to GCF WI-014 (HSDPA) RAB test case 14.6.4 | F | 6.3.0 | 6.4.0 | R5-062170 |
| RP-33 | RP-060567 | 1648 | - | Corrections to GCF WI-014 (HSDPA) RAB test case 14.6.4a | F | 6.3.0 | 6.4.0 | R5-062171 |
| RP-33 | RP-060567 | 1649 | - | Correction to HS-SCCH code allocation | F | 6.3.0 | 6.4.0 | R5-062212 |
| RP-33 | RP-060567 | 1650 | - | Corrections to GCF WI-014 MAC-HS test case 7.1.5.6 | F | 6.3.0 | 6.4.0 | R5-062239 |
| RP-33 | RP-060567 | 1651 | - | Enhancement of GCF WI-014 IRAT test case 8.3.7.14 | F | 6.3.0 | 6.4.0 | R5-062316 |
| RP-33 | RP-060567 | 1652 | - | Correction to GCF WI-014 test cases 8.3.11.9 and 8.3.11.10 | F | 6.3.0 | 6.4.0 | R5-062303 |
| RP-33 | RP-060562 | 1653 | - | Introduction of generic test procedure for AMR RB | F | 6.3.0 | 6.4.0 | R5-062317 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | configurations using SRB#5 for TFC control in combination with HS-DSCH/E-DCH radio bearers | | | | |
| RP-33 | RP-060562 | 1654 | - | Addition of details to E-DCH/WB AMR radio bearer test case 14.7.8 | F | 6.3.0 | 6.4.0 | R5-062321 |
| RP-33 | RP-060562 | 1655 | - | Correction to E-DCH radio bearer test case 14.7.4 | F | 6.3.0 | 6.4.0 | R5-062296 |
| RP-33 | RP-060562 | 1656 | - | Addition of details to radio bearer test cases 14.7.6 | F | 6.3.0 | 6.4.0 | R5-062318 |
| RP-33 | RP-060562 | 1657 | - | Addition of details to radio bearer test cases 14.7.7 | F | 6.3.0 | 6.4.0 | R5-062319 |
| RP-33 | RP-060562 | 1658 | - | Correction to E-DCH radio bearer test case 14.7.5 | F | 6.3.0 | 6.4.0 | R5-062065 |
| RP-33 | RP-060562 | 1659 | - | Correction to E-DCH radio bearer test case 14.7.1 | F | 6.3.0 | 6.4.0 | R5-062066 |
| RP-33 | RP-060562 | 1660 | - | Corrections to Enhanced uplink test case 8.2.6.51 | F | 6.3.0 | 6.4.0 | R5-062326 |
| RP-33 | RP-060563 | 1661 | - | Corrections to Enhanced uplink test case 8.3.4.10 | F | 6.3.0 | 6.4.0 | R5-062354 |
| RP-33 | RP-060563 | 1662 | - | New Mac-es/e test case on Correct handling of HARQ profile power offsets | F | 6.3.0 | 6.4.0 | R5-062514 |
| RP-33 | RP-060563 | 1663 | - | New Mac-es/e test case on Correct handling of minimum set of E-TFCI | F | 6.3.0 | 6.4.0 | R5-062531 |
| RP-33 | RP-060563 | 1664 | - | Correction to testcase 8.2.6.50 | F | 6.3.0 | 6.4.0 | R5-062154 |
| RP-33 | RP-060563 | 1665 | - | Correction to testcase 8.3.1.41 | F | 6.3.0 | 6.4.0 | R5-062327 |
| RP-33 | RP-060563 | 1666 | - | Corrections to MAC-E/Es test case 7.1.6.1.1 | F | 6.3.0 | 6.4.0 | R5-062333 |
| RP-33 | RP-060563 | 1667 | - | Corrections to MAC-E/Es test case 7.1.6.1.2 | F | 6.3.0 | 6.4.0 | R5-062334 |
| RP-33 | RP-060563 | 1668 | - | Corrections to MAC-E/Es test case 7.1.6.1.3 | F | 6.3.0 | 6.4.0 | R5-062335 |
| RP-33 | RP-060563 | 1669 | - | Corrections to MAC-E/Es test case 7.1.6.2.1 | F | 6.3.0 | 6.4.0 | R5-062336 |
| RP-33 | RP-060563 | 1670 | - | Corrections to MAC-E/Es test case 7.1.6.2.3 | F | 6.3.0 | 6.4.0 | R5-062338 |
| RP-33 | RP-060563 | 1671 | - | Corrections to MAC-E/Es test case 7.1.6.2.4 | F | 6.3.0 | 6.4.0 | R5-062339 |
| RP-33 | RP-060563 | 1672 | - | Corrections to MAC-E/Es test case 7.1.6.2.5 | F | 6.3.0 | 6.4.0 | R5-062340 |
| RP-33 | RP-060563 | 1673 | - | Corrections to MAC-E/Es test case 7.1.6.2.6 | F | 6.3.0 | 6.4.0 | R5-062341 |
| RP-33 | RP-060563 | 1674 | - | Corrections to MAC-E/Es test case 7.1.6.2.7 | F | 6.3.0 | 6.4.0 | R5-062342 |
| RP-33 | RP-060563 | 1675 | - | Corrections to MAC-E/Es test case 7.1.6.2.8 | F | 6.3.0 | 6.4.0 | R5-062343 |
| RP-33 | RP-060563 | 1676 | - | Corrections to MAC-E/Es test case 7.1.6.3.1 | F | 6.3.0 | 6.4.0 | R5-062344 |
| RP-33 | RP-060563 | 1677 | - | Corrections to MAC-E/Es test case 7.1.6.3.2 | F | 6.3.0 | 6.4.0 | R5-062345 |
| RP-33 | RP-060563 | 1678 | - | Corrections and extensions to MAC-E/Es test case 7.1.6.4.1 | F | 6.3.0 | 6.4.0 | R5-062392 |
| RP-33 | RP-060563 | 1679 | - | Corrections to MAC-E/Es test case 7.1.6.4.2 | F | 6.3.0 | 6.4.0 | R5-062347 |
| RP-33 | RP-060563 | 1680 | - | Correction TC 8.2.6.52: Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success | F | 6.3.0 | 6.4.0 | R5-062329 |
| RP-33 | RP-060564 | 1681 | - | Addition of a new E-DCH RRC test case to 34.123 for Hard Handover fallback with active E-DCH transmission | F | 6.3.0 | 6.4.0 | R5-062330 |
| RP-33 | RP-060564 | 1682 | - | Addition of a new E-DCH RRC test case to 34.123 for Radio Link Failure during active E-DCH transmission | F | 6.3.0 | 6.4.0 | R5-062331 |
| RP-33 | RP-060564 | 1683 | - | Addition of a new E-DCH RRC test case to 34.123 for Cell Change Order From UTRAN with stop of E-DCH transmission | F | 6.3.0 | 6.4.0 | R5-062379 |
| RP-33 | RP-060564 | 1684 | - | Enhancement of GCF WI-025 MACes/e test case 7.1.6.2.2 | F | 6.3.0 | 6.4.0 | R5-062378 |
| RP-33 | RP-060564 | 1685 | - | New Mac-es/e test case on Correct handling of MAC-es/e reset | F | 6.3.0 | 6.4.0 | R5-062516 |
| RP-33 | RP-060560 | 1686 | - | Correction to testcase 9.4.3.6 & 9.5.9 | F | 6.3.0 | 6.4.0 | R5-062156 |
| RP-33 | RP-060560 | 1687 | - | Correction to Idle mode test case 6.1.1.8 (Network Sharing) | F | 6.3.0 | 6.4.0 | R5-062523 |
| RP-33 | RP-060560 | 1688 | - | Correction to Idle mode test case 6.1.1.9 (Network Sharing) | F | 6.3.0 | 6.4.0 | R5-062367 |
| RP-33 | RP-060550 | 1689 | - | Correction to GCF WI-10 Inter-RAT Test Case 6.2.2.3 | F | 6.3.0 | 6.4.0 | R5-062099 |
| RP-33 | RP-060550 | 1690 | - | Correction to GCF WI-010 HCS idle mode test case 6.1.2.4 | F | 6.3.0 | 6.4.0 | R5-062521 |
| RP-33 | RP-060550 | 1691 | - | Correction to GCF WI-010 HCS idle mode test case 6.1.2.5 | F | 6.3.0 | 6.4.0 | R5-062522 |
| RP-33 | RP-060550 | 1692 | - | Correction to GCF WI 10/1 Idle mode test case 6.1.1.4 | F | 6.3.0 | 6.4.0 | R5-062351 |
| RP-33 | RP-060560 | 1693 | - | New test case: 6.2.2.5 Cell reselection using SIB18; UTRAN to GSM | F | 6.3.0 | 6.4.0 | R5-062519 |
| RP-33 | RP-060550 | 1694 | - | Correction to 34.123-1 Section 6 : Defines the uplink UARFCN for test frequencies of Band IV | F | 6.3.0 | 6.4.0 | R5-062277 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-33 | RP-060550 | 1695 | - | Correction to InterRAT Idle Mode frequency lists | F | 6.3.0 | 6.4.0 | R5-062310 |
| RP-33 | RP-060550 | 1696 | - | Correction to GCF WI 10/1 MAC testcase 7.1.2.3.1 | F | 6.3.0 | 6.4.0 | R5-062159 |
| RP-33 | RP-060550 | 1697 | - | Correction to 34.123-1 Section 7: Inclusion of System Information Block Type 5bis | F | 6.3.0 | 6.4.0 | R5-062278 |
| RP-33 | RP-060560 | 1698 | - | Frequency band extension for GSM 710, GSM 750 and T-GSM 810 bands in interRAT tests | F | 6.3.0 | 6.4.0 | R5-062394 |
| RP-33 | RP-060553 | 1699 | - | Correction to GCF WI-13 Test Cases 8.3.1.38 and 8.3.1.39 | F | 6.3.0 | 6.4.0 | R5-062095 |
| RP-33 | RP-060550 | 1700 | - | Corrections to GCF WI-012 RRC test case 8.3.1.30 | F | 6.3.0 | 6.4.0 | R5-062097 |
| RP-33 | RP-060550 | 1701 | - | Corrections to GCF WI-010 RRC test case 8.3.1.10 and 8.3.2.4 | F | 6.3.0 | 6.4.0 | R5-062098 |
| RP-33 | RP-060550 | 1702 | - | Correction to GCF WI 10/2 RRC testcase 8.4.1.8 | F | 6.3.0 | 6.4.0 | R5-062160 |
| RP-33 | RP-060550 | 1703 | - | Correction to GCF WI-010/2 InterRAT test case 8.3.7.4 | F | 6.3.0 | 6.4.0 | R5-062297 |
| RP-33 | RP-060550 | 1704 | - | Correction to GCF WI-010/4 InterRAT test case 8.3.7.13 | F | 6.3.0 | 6.4.0 | R5-062298 |
| RP-33 | RP-060550 | 1705 | - | 34.123-1 Section 8.1 - Corrections to the values for IE based on calculated ASN.1 value. | F | 6.3.0 | 6.4.0 | R5-062192 |
| RP-33 | RP-060550 | 1706 | - | Correction to GCF WI-10 RRC Hard Handover Test Case 8.2.6.37 | F | 6.3.0 | 6.4.0 | R5-062396 |
| RP-33 | RP-060550 | 1707 | - | Correction to 34.123-1 Section 8.1: Inclusion of System Information Block Type 5bis | F | 6.3.0 | 6.4.0 | R5-062397 |
| RP-33 | RP-060550 | 1708 | - | Correction to 34.123-1 Section 8.2: Inclusion of System Information Block Type 5bis | F | 6.3.0 | 6.4.0 | R5-062280 |
| RP-33 | RP-060550 | 1709 | - | Corrections to GCF WI-12 test case 8.4.1.48 | F | 6.3.0 | 6.4.0 | R5-062284 |
| RP-33 | RP-060550 | 1710 | - | Correction to GCF WI-10 test Case 9.4.5.2 | F | 6.3.0 | 6.4.0 | R5-062356 |
| RP-33 | RP-060550 | 1711 | - | Correction to WI-012 GMM test case 12.3.2.8 Proc1 | F | 6.3.0 | 6.4.0 | R5-062315 |
| RP-33 | RP-060551 | 1712 | - | Correction to GCF WI-10 NAS Test Case 12.4.2.4 | F | 6.3.0 | 6.4.0 | R5-062094 |
| RP-33 | RP-060551 | 1713 | - | Correction to GCF WI 10 GMM testcase 12.9.7c | F | 6.3.0 | 6.4.0 | R5-062391 |
| RP-33 | RP-060551 | 1714 | - | Correction to GCF WI-012/1 test case 12.3.2.7 | F | 6.3.0 | 6.4.0 | R5-062191 |
| RP-33 | RP-060551 | 1715 | - | Correction to 34.123-1 Section 14: Inclusion of System Information Block Type 5bis | F | 6.3.0 | 6.4.0 | R5-062281 |
| RP-33 | RP-060551 | 1716 | - | CR to 34.123-1: Corrections to SMS TC 16.1.1 and 16.1.2 | F | 6.3.0 | 6.4.0 | R5-062050 |
| RP-34 | RP-060732 | 1717 | - | CR to 34.123-1: Correction test requirement for LCR TDD in 8.1.1.4, 8.1.1.5, 8.1.1.6. | F | 6.4.0 | 6.5.0 | R5-063293 |
| RP-34 | RP-060732 | 1718 | - | Corrections to RRC test case 8.4.1.8A | F | 6.4.0 | 6.5.0 | R5-063273 |
| RP-34 | RP-060747 | 1719 | - | Update of 8.2.1.30 to include HCR TDD | F | 6.4.0 | 6.5.0 | R5-063210 |
| RP-34 | RP-060747 | 1720 | - | Update of 8.2.4.36 to include HCR TDD | F | 6.4.0 | 6.5.0 | R5-063212 |
| RP-34 | RP-060747 | 1721 | - | Update of 8.2.6.39a to include HCR TDD | F | 6.4.0 | 6.5.0 | R5-063519 |
| RP-34 | RP-060747 | 1722 | - | Update of 8.2.6.39b for HCR TDD | F | 6.4.0 | 6.5.0 | R5-063520 |
| RP-34 | RP-060747 | 1723 | - | Update of 8.3.1.32 for HCR TDD | F | 6.4.0 | 6.5.0 | R5-063215 |
| RP-34 | RP-060747 | 1724 | - | Update of 8.3.1.33 for HCR TDD | F | 6.4.0 | 6.5.0 | R5-063216 |
| RP-34 | RP-060743 | 1725 | - | Correction to GCF WI 25 RRC test case 8.2.6.50 | F | 6.4.0 | 6.5.0 | R5-063051 |
| RP-34 | RP-060743 | 1726 | - | Corrections to Enhanced uplink RRC test case 8.2.2.45 | F | 6.4.0 | 6.5.0 | R5-063081 |
| RP-34 | RP-060743 | 1727 | - | Corrections to Enhanced uplink RRC test case 8.2.2.47 | F | 6.4.0 | 6.5.0 | R5-063082 |
| RP-34 | RP-060744 | 1728 | - | Corrections to Enhanced uplink RRC test case 8.2.2.49 | F | 6.4.0 | 6.5.0 | R5-063083 |
| RP-34 | RP-060744 | 1729 | - | Extension of Mac-es/e test case 7.1.6.2.6 to cover correct handling of Maximum_Serving_Grant and Non_Serving_RG_Timer | F | 6.4.0 | 6.5.0 | R5-063568 |
| RP-34 | RP-060744 | 1730 | - | Update of conformance requirement for Mac-es/e test cases 7.1.6.2.5 and 7.1.6.2.7 | F | 6.4.0 | 6.5.0 | R5-063138 |
| RP-34 | RP-060744 | 1731 | - | Corrections to GCF WI-25/1 test case 7.1.6.1.1 | F | 6.4.0 | 6.5.0 | R5-063309 |
| RP-34 | RP-060744 | 1732 | - | Corrections to GCF WI-25/1 test case 7.1.6.4.1 | F | 6.4.0 | 6.5.0 | R5-063310 |
| RP-34 | RP-060744 | 1733 | - | Corrections to GCF WI-25/1 test case 8.2.2.46 | F | 6.4.0 | 6.5.0 | R5-063311 |
| RP-34 | RP-060744 | 1734 | - | Corrections to GCF WI-25/1 test case 8.2.2.48 | F | 6.4.0 | 6.5.0 | R5-063312 |
| RP-34 | RP-060744 | 1735 | - | Correction to testcase 8.2.6.52 | F | 6.4.0 | 6.5.0 | R5-063361 |
| RP-34 | RP-060744 | 1736 | - | Correction to GCF WI 25 MAC test case 7.1.6.2.7 | F | 6.4.0 | 6.5.0 | R5-063202 |
| RP-34 | RP-060744 | 1737 | - | Correction to GCF WI 25 MAC test case 7.1.6.2.4 | F | 6.4.0 | 6.5.0 | R5-063333 |
| RP-34 | RP-060744 | 1738 | - | Correction to E-DCH radio bearer test case 14.7.7 | F | 6.4.0 | 6.5.0 | R5-063313 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-34 | RP-060744 | 1739 | - | Deletion of EDCH test case 8.2.6.53 | F | 6.4.0 | 6.5.0 | R5-063238 |
| RP-34 | RP-060744 | 1740 | - | Correction to testcase 8.2.6.54 | F | 6.4.0 | 6.5.0 | R5-063360 |
| RP-34 | RP-060744 | 1741 | - | Correction to E-DCH radio bearer test case 7.1.6.4.2 | F | 6.4.0 | 6.5.0 | R5-063322 |
| RP-34 | RP-060744 | 1742 | - | Correction to E-DCH radio bearer test case 7.1.6.2.10 | F | 6.4.0 | 6.5.0 | R5-063323 |
| RP-34 | RP-060742 | 1743 | - | Addition of RoHC Performance TC 7.3.6.6: Compressor response to single lost packets in O-mode | F | 6.4.0 | 6.5.0 | R5-063131 |
| RP-34 | RP-060742 | 1744 | - | Addition of RoHC Performance TC 7.3.6.2: Base test of ROHC RTP O-mode compressor | F | 6.4.0 | 6.5.0 | R5-063318 |
| RP-34 | RP-060742 | 1745 | - | Addition of RoHC Performance TC 7.3.6.3 Base test of ROHC RTP R-mode compressor | F | 6.4.0 | 6.5.0 | R5-063554 |
| RP-34 | RP-060750 | 1746 | - | New MBMS test case: Session start in CELL_FACH state | F | 6.4.0 | 6.5.0 | R5-063503 |
| RP-34 | RP-060750 | 1747 | - | New MBMS test case: Session start in CELL_DCH state, MCCH notification | F | 6.4.0 | 6.5.0 | R5-063548 |
| RP-34 | RP-060750 | 1748 | - | New MBMS test case: MBMS Session Start in CELL_DCH when entering into an MBMS cell | F | 6.4.0 | 6.5.0 | R5-063549 |
| RP-34 | RP-060750 | 1749 | - | New MBMS test case: MBMS serving cell reselection in CELL_FACH state during ongoing session | F | 6.4.0 | 6.5.0 | R5-063506 |
| RP-34 | RP-060750 | 1750 | - | New MBMS test case for Session stop – Frequency Layer Dispersion - no previous Frequency layer present (URA_PCH) | F | 6.4.0 | 6.5.0 | R5-063507 |
| RP-34 | RP-060750 | 1751 | - | New MBMS test case for Session stop – Frequency Layer Dispersion - no previous Frequency layer present (CELL_FACH) | F | 6.4.0 | 6.5.0 | R5-063508 |
| RP-34 | RP-060750 | 1752 | - | New MBMS test case for MTCH RLC duplicate avoidance and reordering | F | 6.4.0 | 6.5.0 | R5-063509 |
| RP-34 | RP-060750 | 1753 | - | New MBMS test case for MCCH RLC Out Of Sequence Delivery handling | F | 6.4.0 | 6.5.0 | R5-063510 |
| RP-34 | RP-060750 | 1754 | - | Addition of a MBMS Signaling test case: Service request procedure not accepted by the network | F | 6.4.0 | 6.5.0 | R5-063511 |
| RP-34 | RP-060750 | 1755 | - | Addition of a MBMS Signaling test case: Service Request procedure collision with Routing Area Update | F | 6.4.0 | 6.5.0 | R5-063512 |
| RP-34 | RP-060750 | 1756 | - | Addition of a MBMS Signaling test case: Test Network Feature Support IE | F | 6.4.0 | 6.5.0 | R5-063513 |
| RP-34 | RP-060750 | 1757 | - | New MBMS Test Case - SERVICE REQUEST /counting / MBMS multicast service | F | 6.4.0 | 6.5.0 | R5-063531 |
| RP-34 | RP-060750 | 1758 | - | New MBMS Test Case - SERVICE REQUEST / point to point RBs / MBMS multicast service | F | 6.4.0 | 6.5.0 | R5-063532 |
| RP-34 | RP-060750 | 1759 | - | New MBMS test case – Service Request/Accepted/Handling of MBMS context status information | F | 6.4.0 | 6.5.0 | R5-063533 |
| RP-34 | RP-060750 | 1760 | - | New MBMS test cases – MBMS Context Activation requested by the network, Successful procedure | F | 6.4.0 | 6.5.0 | R5-063534 |
| RP-34 | RP-060750 | 1761 | - | Addition of TC 8.5.1.1: MBMS Session Start in Idle mode | F | 6.4.0 | 6.5.0 | R5-063535 |
| RP-34 | RP-060750 | 1762 | - | Addition of TC 8.5.3.1: MBMS Session Start (FLC)/Session Stop (FLD) in Idle mode | F | 6.4.0 | 6.5.0 | R5-063536 |
| RP-34 | RP-060750 | 1763 | - | Addition of TC 8.5.5.1: MBMS Counting in Idle Mode for Joined Services | F | 6.4.0 | 6.5.0 | R5-063537 |
| RP-34 | RP-060750 | 1764 | - | Addition of TC 8.5.5.3: MBMS No Counting in CELL_DCH for Joined Services | F | 6.4.0 | 6.5.0 | R5-063538 |
| RP-34 | RP-060751 | 1765 | - | Addition of TC 8.5.5.4: MBMS Counting in Cell_PCH for Selected Services | F | 6.4.0 | 6.5.0 | R5-063539 |
| RP-34 | RP-060751 | 1766 | - | Addition of TC 11.6.1: MBMS Context deactivation requested by the network, Successful | F | 6.4.0 | 6.5.0 | R5-063540 |
| RP-34 | RP-060751 | 1767 | - | Addition of TC 12.4.1.1d: Routing Area Updating/Accepted/Handling of MBMS context status information | F | 6.4.0 | 6.5.0 | R5-063541 |
| RP-34 | RP-060749 | 1768 | - | Introduction of new interband test case 8.2.1.24a | F | 6.4.0 | 6.5.0 | R5-063514 |
| RP-34 | RP-060749 | 1769 | - | Introduction of new interband test case 8.2.1.34a | F | 6.4.0 | 6.5.0 | R5-063515 |
| RP-34 | RP-060749 | 1770 | - | Introduction of new interband test case 8.3.1.1a | F | 6.4.0 | 6.5.0 | R5-063555 |
| RP-34 | RP-060749 | 1771 | - | Introduction of new interband test case 8.3.2.1a | F | 6.4.0 | 6.5.0 | R5-063320 |
| RP-34 | RP-060749 | 1772 | - | Introduction of new interband test case 8.2.6.37b | F | 6.4.0 | 6.5.0 | R5-063517 |
| RP-34 | RP-060749 | 1773 | - | Introduction of test case 6.1.2.1a Cell reselection for inter-band operation | F | 6.4.0 | 6.5.0 | R5-063256 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-34 | RP-060749 | 1774 | - | Introduction of test case 6.1.2.10a HCS inter-frequency cell reselection for inter-band operation | F | 6.4.0 | 6.5.0 | R5-063257 |
| RP-34 | RP-060749 | 1775 | - | Introduction of measurement test case 8.4.1.2B for Inter-Band FDD testing | F | 6.4.0 | 6.5.0 | R5-063305 |
| RP-34 | RP-060749 | 1776 | - | Introduction of measurement test case 8.4.1.24A for Inter-Band FDD testing | F | 6.4.0 | 6.5.0 | R5-063306 |
| RP-34 | RP-060749 | 1777 | - | Introduction of measurement test case 8.4.1.25A for Inter-Band FDD testing | F | 6.4.0 | 6.5.0 | R5-063307 |
| RP-34 | RP-060739 | 1778 | - | Correction to GCF WI-24 DSAC Test Case 12.9.15 | F | 6.4.0 | 6.5.0 | R5-063374 |
| RP-34 | RP-060739 | 1779 | - | Correction to idle mode test case 6.1.1.9 (Network Sharing) | F | 6.4.0 | 6.5.0 | R5-063334 |
| RP-34 | RP-060732 | 1780 | - | Correction to network sharing test case 6.2.1.11 Selection of PLMN and RAT in shared network environment, Manual Mode | F | 6.4.0 | 6.5.0 | R5-063168 |
| RP-34 | RP-060735 | 1781 | - | Correction to GCF WI-14 InterRAT test case 8.3.7.14 | F | 6.4.0 | 6.5.0 | R5-063501 |
| RP-34 | RP-060735 | 1782 | - | Correction to test case 7.1.5.6 | F | 6.4.0 | 6.5.0 | R5-063335 |
| RP-34 | RP-060735 | 1783 | - | Corrections to GCF WI-14 test case 14.6.8 | F | 6.4.0 | 6.5.0 | R5-063336 |
| RP-34 | RP-060735 | 1784 | - | Corrections to GCF WI-14/1 test case 8.2.3.35 | F | 6.4.0 | 6.5.0 | R5-063337 |
| RP-34 | RP-060735 | 1785 | - | Correction to GCF WI 14/2 RRC test case 8.3.1.37 | F | 6.4.0 | 6.5.0 | R5-063338 |
| RP-34 | RP-060732 | 1786 | - | Correction to GCF WI-10 Idle Mode Test Case 6.1.2.4 | F | 6.4.0 | 6.5.0 | R5-063074 |
| RP-34 | RP-060732 | 1787 | - | Correction to GCF WI-10 Test Cases 6.2.1.1, 6.2.1.2, 6.2.1.3, 6.2.1.4, 6.2.1.6, 6.2.1.7, 6.2.1.8 and 6.2.1.10 | F | 6.4.0 | 6.5.0 | R5-063348 |
| RP-34 | RP-060732 | 1788 | - | Corrections to GCF WI-10/3 test case 6.1.2.6 | F | 6.4.0 | 6.5.0 | R5-063349 |
| RP-34 | RP-060732 | 1789 | - | Correction of test channels for idle mode testing | F | 6.4.0 | 6.5.0 | R5-063350 |
| RP-34 | RP-060732 | 1790 | - | Correction to Idle mode test case 6.1.1.1 (low priority TC) | F | 6.4.0 | 6.5.0 | R5-063351 |
| RP-34 | RP-060732 | 1791 | - | Addition of R99 Idle Mode Test Case 6.1.2.9a and 6.1.2.9b | F | 6.4.0 | 6.5.0 | R5-063579 |
| RP-34 | RP-060732 | 1792 | - | Correction to GCF WI10/1 MAC testcase 7.1.2.4a | F | 6.4.0 | 6.5.0 | R5-063080 |
| RP-34 | RP-060732 | 1793 | - | Correction to WI-010 test cases 7.1.1.2, 7.1.1.3, 7.1.1.4 and 7.1.1.8 | F | 6.4.0 | 6.5.0 | R5-063380 |
| RP-34 | RP-060732 | 1794 | - | Corrections to GCF WI-012 RRC test cases 8.2.6.39 and 8.2.6.44 | F | 6.4.0 | 6.5.0 | R5-063316 |
| RP-34 | RP-060732 | 1795 | - | Correction to WI-12/1 RRC test case 8.3.1.30 | F | 6.4.0 | 6.5.0 | R5-063040 |
| RP-34 | RP-060732 | 1796 | - | Correction to GCF WI 10/3 RRC testcase 8.1.10.1 | F | 6.4.0 | 6.5.0 | R5-063049 |
| RP-34 | RP-060732 | 1797 | - | Correction to GCF WI10/4 RRC testcase 8.2.6.38 | F | 6.4.0 | 6.5.0 | R5-063050 |
| RP-34 | RP-060732 | 1798 | - | Correction to GCF WI 10/3 RRC testcase 8.4.1.28 | F | 6.4.0 | 6.5.0 | R5-063347 |
| RP-34 | RP-060841 | 1799 | - | Correction to GCF WI 12 InterRAT test case 8.4.1.48 | F | 6.4.0 | 6.5.0 | R5-063054 |
| RP-34 | RP-060841 | 1800 | - | Correction to GCF WI-10 RRC Test Case 8.4.1.8 | F | 6.4.0 | 6.5.0 | R5-063301 |
| RP-34 | RP-060841 | 1801 | - | Correction to GCF Low Priority Test Case 8.3.1.28 | F | 6.4.0 | 6.5.0 | R5-063352 |
| RP-34 | RP-060841 | 1802 | - | Corrections to GCF WI-10/2 test case 8.3.1.9 | F | 6.4.0 | 6.5.0 | R5-063353 |
| RP-34 | RP-060841 | 1803 | - | Correction to RRC testcases 8.1.1.4, 8.1.1.5 and 8.1.1.6 | F | 6.4.0 | 6.5.0 | R5-063354 |
| RP-34 | RP-060841 | 1804 | - | Correction to RRC testcases 8.1.2.2 and 8.1.2.9 | F | 6.4.0 | 6.5.0 | R5-063159 |
| RP-34 | RP-060841 | 1805 | - | Correction to IRAT RRC TC 8.4.1.31 | F | 6.4.0 | 6.5.0 | R5-063342 |
| RP-34 | RP-060841 | 1806 | - | Corrections to WI-010 test cases 8.1.1.4, 8.1.1.5 and 8.1.1.6 | F | 6.4.0 | 6.5.0 | R5-063355 |
| RP-34 | RP-060841 | 1807 | - | Correction to WI-010 test case 8.1.2.4 | F | 6.4.0 | 6.5.0 | R5-063265 |
| RP-34 | RP-060841 | 1808 | - | Correction to GCF WI-10 RRC Test Case 8.4.1.25 and WI-12 RRC Test Case 8.4.1.48 | F | 6.4.0 | 6.5.0 | R5-063302 |
| RP-34 | RP-060841 | 1809 | - | Correction of GCF WI-010/2 MM test case 9.4.5.4.1 | F | 6.4.0 | 6.5.0 | R5-063356 |
| RP-34 | RP-060841 | 1810 | - | Correction to GCF WI-12 NAS Test Case 12.9.9 | F | 6.4.0 | 6.5.0 | R5-063357 |
| RP-34 | RP-060841 | 1811 | - | Correction to GMM IRAT TC 12.8 | F | 6.4.0 | 6.5.0 | R5-063343 |
| RP-34 | RP-060841 | 1812 | - | Correction to WI-010 test case 12.2.1.10 | F | 6.4.0 | 6.5.0 | R5-063266 |
| RP-34 | RP-060841 | 1813 | - | Correction to testcase 14.2.58 | F | 6.4.0 | 6.5.0 | R5-063358 |
| RP-34 | RP-060841 | 1814 | - | Editorial corrections to GCF WI-010/3 test case 14.2.43.1 | F | 6.4.0 | 6.5.0 | R5-063359 |
| RP-34 | RP-060841 | 1815 | - | Correction to SMS testcases 16.1.9.1 and 16.1.9.2 | F | 6.4.0 | 6.5.0 | R5-063156 |
| RP-34 | RP-060841 | 1816 | - | Correction to GCF WI-10 test case 6.1.2.1 and 6.1.2.9 | F | 6.4.0 | 6.5.0 | R5-063163 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-34 | RP-060749 | 1817 | - | Introduction of test case 8.1.2.10a for Inter-band testing | F | 6.4.0 | 6.5.0 | R5-063161 |
| RP-35 | RP-070104 | 1818 | - | Addition of LCR TDD contents in testcase 8.4.1.31, 8.4.1.33, 8.4.1.44, 8.4.1.45 and 8.4.1.46 | F | 6.5.0 | 6.6.0 | R5-070108 |
| RP-35 | RP-070104 | 1819 | - | Change the Message Content of Testcase 8.1.5.1 | F | 6.5.0 | 6.6.0 | R5-070354 |
| RP-35 | RP-070111 | 1820 | - | Supplement to HS-DSCH radio bearer test parameters in TDD | F | 6.5.0 | 6.6.0 | R5-070355 |
| RP-35 | RP-070097 | 1821 | - | Correction to GCF WI-25 MAC Test Case 7.1.6.4.2 | F | 6.5.0 | 6.6.0 | R5-070042 |
| RP-35 | RP-070097 | 1822 | - | Correction to GCF WI 25 MAC test cases 7.1.6.1.1, 7.1.6.1.2, 7.1.6.1.3, 7.1.6.2.1, 7.1.6.2.8, 7.1.6.2.9, 7.1.6.3.1, 7.1.6.4.1, 7.1.6.4.2 | D | 6.5.0 | 6.6.0 | R5-070043 |
| RP-35 | RP-070097 | 1823 | - | Correction to GCF WI 25 RRC test case 8.2.2.45 | F | 6.5.0 | 6.6.0 | R5-070044 |
| RP-35 | RP-070097 | 1824 | - | Correction to generic test procedure for HS-DSCH and E-DCH radio bearer combinations | F | 6.5.0 | 6.6.0 | R5-070479 |
| RP-35 | RP-070097 | 1825 | - | Correction of RADIO BEARER RECONFIGURATION message used in E-DCH RRC TC 8.2.2.46 & 8.2.2.48 | F | 6.5.0 | 6.6.0 | R5-070052 |
| RP-35 | RP-070097 | 1826 | - | Correction of Generic test procedure for HS-DSCH & HS-DSCH / E-DCH radio bearer combinations in 14.1.3 & 14.1.4 | F | 6.5.0 | 6.6.0 | R5-070053 |
| RP-35 | RP-070097 | 1827 | - | TC-8.2.6.52 - IE “Uplink channel requirement” in Physical channel reconfiguration message is replaced with “Uplink DPCH info”. | F | 6.5.0 | 6.6.0 | R5-070403 |
| RP-35 | RP-070097 | 1828 | - | Correction to E-DCH radio bearer test case 14.7.8 | F | 6.5.0 | 6.6.0 | R5-070143 |
| RP-35 | RP-070097 | 1829 | - | Addition of new test case for RRC connection establishment using the default configuration for HS-DSCH / E-DCH signalling bearers. | F | 6.5.0 | 6.6.0 | R5-070360 |
| RP-35 | RP-070097 | 1830 | - | Introduction of test scenario for Stand-alone SRBs for DCCH on E-DCH and HS-DSCH | F | 6.5.0 | 6.6.0 | R5-070361 |
| RP-35 | RP-070097 | 1831 | - | Correction to test case 14.7.4 | F | 6.5.0 | 6.6.0 | R5-070362 |
| RP-35 | RP-070097 | 1832 | - | Correction to GCF WI 25 HSUPA RAB test case 14.7.8 | F | 6.5.0 | 6.6.0 | R5-070278 |
| RP-35 | RP-070097 | 1833 | - | Corrections to GCF WI-25 test case 7.1.6.2.10 | F | 6.5.0 | 6.6.0 | R5-070307 |
| RP-35 | RP-070097 | 1834 | - | Correction to GCF WI 25 MAC test case 7.1.6.2.9 | F | 6.5.0 | 6.6.0 | R5-070331 |
| RP-35 | RP-070097 | 1835 | - | Correction to MAC test cases 7.1.6.2.2, 7.1.6.4.1, 7.1.6.4.2 and 7.1.6.4.3 | F | 6.5.0 | 6.6.0 | R5-070470 |
| RP-35 | RP-070095 | 1836 | - | Addition of RoHC Performance TC 7.3.6.5 Re-establishment of TS function after DTX in R-mode | F | 6.5.0 | 6.6.0 | R5-070363 |
| RP-35 | RP-070095 | 1837 | - | Addition of RoHC Performance TC 7.3.6.7 Compressor response to single lost packets in R-mode | F | 6.5.0 | 6.6.0 | R5-070229 |
| RP-35 | RP-070095 | 1838 | - | Addition of RoHC Performance TC 7.3.6.9 TS function during DTX with varying delta in R-mode | F | 6.5.0 | 6.6.0 | R5-070364 |
| RP-35 | RP-070095 | 1839 | - | Addition of a new RoHC Performance Test Case. | F | 6.5.0 | 6.6.0 | R5-070365 |
| RP-35 | RP-070095 | 1840 | - | Addition of RoHC Performance TC 7.3.6.8: TS function during DTX with varying delta in O-mode | F | 6.5.0 | 6.6.0 | R5-070366 |
| RP-35 | RP-070086 | 1841 | - | Correction to MBMS GMM test case 12.9.18 | F | 6.5.0 | 6.6.0 | R5-070069 |
| RP-35 | RP-070086 | 1842 | - | Generic test procedure for MBMS radio bearer test cases | F | 6.5.0 | 6.6.0 | R5-070431 |
| RP-35 | RP-070086 | 1843 | - | New MBMS radio bearer test cases | F | 6.5.0 | 6.6.0 | R5-070432 |
| RP-35 | RP-070086 | 1844 | - | Corrections to MBMS RLC test cases | F | 6.5.0 | 6.6.0 | R5-070473 |
| RP-35 | RP-070086 | 1845 | - | Corrections to MBMS test cases 8.5.3.5 and 8.5.3.6 | F | 6.5.0 | 6.6.0 | R5-070475 |
| RP-35 | RP-070086 | 1846 | - | New MBMS test case for Modification of the list of MBMS Selected Service whilst in Cell_PCH, URA_PCH & Cell_FACH | F | 6.5.0 | 6.6.0 | R5-070466 |
| RP-35 | RP-070086 | 1847 | - | Correction to MBMS Test Cases 11.5.1, 11.5.2.1 and 11.5.2.2 | F | 6.5.0 | 6.6.0 | R5-070436 |
| RP-35 | RP-070086 | 1848 | - | New MBMS RRC Test Case: MBMS session Start at Notification via DCCH in CELL_DCH | F | 6.5.0 | 6.6.0 | R5-070465 |
| RP-35 | RP-070086 | 1849 | - | New MBMS RRC Test Case: Transmission of the MBMS Selected Services Information when entering RRC connected mode | F | 6.5.0 | 6.6.0 | R5-070406 |
| RP-35 | RP-070086 | 1850 | - | New MBMS RRC Test Case: MBMS Serving Cell Reselection in CELL_DCH during ongoing Session | F | 6.5.0 | 6.6.0 | R5-070437 |
| RP-35 | RP-070086 | 1851 | - | New MBMS RRC Test Case: MBMS Serving Cell Reselection in CELL_PCH during ongoing Session | F | 6.5.0 | 6.6.0 | R5-070438 |
| RP-35 | RP-070086 | 1852 | - | Correction of TC 8.5.1.1: MBMS Session Start in Idle mode | F | 6.5.0 | 6.6.0 | R5-070439 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-35 | RP-070086 | 1853 | - | Addition of TC 8.5.1.2: MBMS session start at notification in CELL_PCH | F | 6.5.0 | 6.6.0 | R5-070440 |
| RP-35 | RP-070086 | 1854 | - | Addition of TC 8.5.3.2: MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in CELL_PCH | F | 6.5.0 | 6.6.0 | R5-070443 |
| RP-35 | RP-070086 | 1855 | - | Addition of TC 8.5.1.6: MBMS session start at MCCH acquisition in CELL_DCH (for a MBMS service) when entering into an MBMS cell (UE capable of MBMS p-t-m reception in CELL_DCH) | F | 6.5.0 | 6.6.0 | R5-070441 |
| RP-35 | RP-070086 | 1856 | - | Addition of TC 8.5.3.3: MBMS Session Start (Frequency Layer Convergence)/Session Stop (Frequency Layer Dispersion) in CELL_FACH | F | 6.5.0 | 6.6.0 | R5-070442 |
| RP-35 | RP-070086 | 1857 | - | Addition of TC 8.5.5.5: P-t-p Request in Idle Mode | F | 6.5.0 | 6.6.0 | R5-070444 |
| RP-35 | RP-070087 | 1858 | - | Addition of TC “MBMS Cell reselection - Idle mode - Frequency Layer Convergence – HCS Not Used” | F | 6.5.0 | 6.6.0 | R5-070457 |
| RP-35 | RP-070087 | 1859 | - | Addition of TC 8.5.5.6: P-t-p Request in URA_PCH, CELL_PCH or CELL_FACH | F | 6.5.0 | 6.6.0 | R5-070445 |
| RP-35 | RP-070087 | 1860 | - | Addition of TC 8.5.2.2: MBMS Session Stop at Notification, reception via MCCH | F | 6.5.0 | 6.6.0 | R5-070458 |
| RP-35 | RP-070087 | 1861 | - | Addition of TC 8.5.3.4: MBMS session stop with frequency layer dispersion - no previous frequency layer available (Idle Mode) | F | 6.5.0 | 6.6.0 | R5-070480 |
| RP-35 | RP-070087 | 1862 | - | Update of TC 8.5.5.1: MBMS Counting in Idle Mode to cover Selected services. | F | 6.5.0 | 6.6.0 | R5-070459 |
| RP-35 | RP-070087 | 1863 | - | Update of TC 8.5.5.3: MBMS No Counting in CELL_DCH to cover Selected services. | F | 6.5.0 | 6.6.0 | R5-070280 |
| RP-35 | RP-070087 | 1864 | - | Update of TC 8.5.5.4: MBMS Counting in CELL_PCH to cover Selected services. | F | 6.5.0 | 6.6.0 | R5-070281 |
| RP-35 | RP-070087 | 1865 | - | Addition of TC 8.5.5.2: MBMS Counting in CELL_FACH | F | 6.5.0 | 6.6.0 | R5-070380 |
| RP-35 | RP-070087 | 1866 | - | Update to MBMS test cases 11.6.1 and 11.7 | F | 6.5.0 | 6.6.0 | R5-070396 |
| RP-35 | RP-070101 | 1867 | - | Add a note in clause 6 | F | 6.5.0 | 6.6.0 | R5-070058 |
| RP-35 | RP-070101 | 1868 | - | Correction to GCF WI-10 Inter-RAT Test Case 6.2.2.3 | F | 6.5.0 | 6.6.0 | R5-070082 |
| RP-35 | RP-070101 | 1869 | - | Correction to WI-010 test case 7.1.1.3 | F | 6.5.0 | 6.6.0 | R5-070288 |
| RP-35 | RP-070105 | 1870 | - | Correction of RRC HSDPA test case 8.3.1.35 | F | 6.5.0 | 6.6.0 | R5-070386 |
| RP-35 | RP-070105 | 1871 | - | Correction of RRC test case 8.4.1.47 | F | 6.5.0 | 6.6.0 | R5-070387 |
| RP-35 | RP-070105 | 1872 | - | Correction of RRC test case 8.3.4.9 | F | 6.5.0 | 6.6.0 | R5-070388 |
| RP-35 | RP-070105 | 1873 | - | Correction to GCF WI 13/1 RRC test case 8.4.1.47 | F | 6.5.0 | 6.6.0 | R5-070078 |
| RP-35 | RP-070101 | 1874 | - | Correction to GCF WI 10 RRC test case 8.2.4.1 | F | 6.5.0 | 6.6.0 | R5-070079 |
| RP-35 | RP-070101 | 1875 | - | Correction to WI-10/3 RRC test case 8.4.1.29 | F | 6.5.0 | 6.6.0 | R5-070373 |
| RP-35 | RP-070101 | 1876 | - | Correction to RRC test case 8.4.1.14 | F | 6.5.0 | 6.6.0 | R5-070085 |
| RP-35 | RP-070101 | 1877 | - | Change in the phrase "Frequency band modification" to “Frequency modification” in RRC cases | F | 6.5.0 | 6.6.0 | R5-070086 |
| RP-35 | RP-070101 | 1878 | - | Correction to GCF WI 10 RRC test case 8.1.2.2 | F | 6.5.0 | 6.6.0 | R5-070089 |
| RP-35 | RP-070101 | 1879 | - | Correction to GCF WI 10/4 Inter system cell reselection from UTRAN test case 8.3.9.1 | F | 6.5.0 | 6.6.0 | R5-070090 |
| RP-35 | RP-070111 | 1880 | - | Addition of new test case for Radio Bearer Establishment using Specification Mode = Preconfiguration | F | 6.5.0 | 6.6.0 | R5-070375 |
| RP-35 | RP-070101 | 1881 | - | Update to test case 8.1.2.15 for Rel-6 | F | 6.5.0 | 6.6.0 | R5-070477 |
| RP-35 | RP-070102 | 1882 | - | Correction to RRC test case 8.2.6.37 | F | 6.5.0 | 6.6.0 | R5-070377 |
| RP-35 | RP-070102 | 1883 | - | Correction to test cases 8.4.1.2 and 8.4.1.24 | F | 6.5.0 | 6.6.0 | R5-070376 |
| RP-35 | RP-070102 | 1884 | - | Correction to GCF WI 10/2 RRC test case 8.1.10.1 | F | 6.5.0 | 6.6.0 | R5-070277 |
| RP-35 | RP-070102 | 1885 | - | Corrections to test cases in Section 8 | F | 6.5.0 | 6.6.0 | R5-070378 |
| RP-35 | RP-070102 | 1886 | - | Correction to GCF WI-10 RRC test case 8.4.1.28 | F | 6.5.0 | 6.6.0 | R5-070332 |
| RP-35 | RP-070102 | 1887 | - | Correction to GCF WI 10 MM test case 9.2.2 | F | 6.5.0 | 6.6.0 | R5-070077 |
| RP-35 | RP-070102 | 1888 | - | Corrections to GCF WI-10/4 test cases 9.4.3.5 and 9.5.7.1 | F | 6.5.0 | 6.6.0 | R5-070402 |
| RP-35 | RP-070102 | 1889 | - | Correction to GCF WI-012 test case 12.3.2.7 | F | 6.5.0 | 6.6.0 | R5-070046 |
| RP-35 | RP-070102 | 1890 | - | Correction of GMM test case 12.4.1.4b | F | 6.5.0 | 6.6.0 | R5-070064 |
| RP-35 | RP-070102 | 1891 | - | Correction to GCF WI 10/4 GMM test case 12.9.13 | F | 6.5.0 | 6.6.0 | R5-070068 |
| RP-35 | RP-070111 | 1892 | - | Correction to GMM test cases in sub clause 12.4.2.11, 12.4.2.12 | F | 6.5.0 | 6.6.0 | R5-070349 |
| RP-35 | RP-070102 | 1893 | - | Correction to GCF WI-10 RAB Test Case 14.2.58 | F | 6.5.0 | 6.6.0 | R5-070047 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-35 | RP-070105 | 1894 | - | Correction to GCF WI-14 RAB Test Case 14.6.1a and 14.6.2 | D | 6.5.0 | 6.6.0 | R5-070048 |
| RP-35 | RP-070105 | 1895 | - | Correction to GCF WI 14/3 HSDPA test case 14.6.7 | F | 6.5.0 | 6.6.0 | R5-070049 |
| RP-35 | RP-070105 | 1896 | - | Correction to GCF WI13/1 RAB testcase 14.2.4b and 14.2.62 | F | 6.5.0 | 6.6.0 | R5-070050 |
| RP-35 | RP-070105 | 1897 | - | Correction to GCF WI 14/3 HSDPA test case 14.6.8 | F | 6.5.0 | 6.6.0 | R5-070051 |
| RP-35 | RP-070105 | 1898 | - | Correction to HSDPA radio bearer test case 14.6.8 | F | 6.5.0 | 6.6.0 | R5-070142 |
| RP-35 | RP-070105 | 1899 | - | Corrections to GCF WI-14 test case 14.6.8 | F | 6.5.0 | 6.6.0 | R5-070287 |
| RP-35 | RP-070097 | 1900 | - | Correction to GCF WI-25 test case 8.3.4.10 | F | 6.5.0 | 6.6.0 | R5-070435 |
| RP-35 | RP-070095 | 1901 | - | Addition of RoHC Performance TC 7.3.6.10: SRNS relocation for ROHC RTP O-mode compressor | F | 6.5.0 | 6.6.0 | R5-070248r1 |
| RP-35 | RP-070102 | 1902 | - | Correction of SMS test case 16.1.2 | F | 6.5.0 | 6.6.0 | R5-070478r1 |
| RP-36 | RP-070360 | 1903 | - | Correction to MBMS Test Case 8.5.3.3 | F | 6.6.0 | 6.7.0 | R5-071471 |
| RP-36 | RP-070344 | 1904 | - | Correction to testcase 8.4.1.42. | F | 6.6.0 | 6.7.0 | R5-071494 |
| RP-36 | RP-070360 | 1905 | - | Correction to MBMS Test Case 8.5.3.2 | F | 6.6.0 | 6.7.0 | R5-071470 |
| RP-36 | RP-070360 | 1906 | - | Corrections to MBMS RRC test cases | F | 6.6.0 | 6.7.0 | R5-071534 |
| RP-36 | RP-070350 | 1907 | - | Correction to GCF WI-14 RAB Test Case 14.6.1 and 14.6.1a | F | 6.6.0 | 6.7.0 | R5-071037 |
| RP-36 | RP-070344 | 1908 | - | Removal of GCF WI-10 Idle Mode Test Case 6.1.2.9 | F | 6.6.0 | 6.7.0 | R5-071038 |
| RP-36 | RP-070344 | 1909 | - | Correction to GCF WI-10 RRC Testcases 8.2.6.38 and 8.4.1.8 | F | 6.6.0 | 6.7.0 | R5-071040 |
| RP-36 | RP-070357 | 1910 | - | Correction of index of absolute grant for max bit rate | F | 6.6.0 | 6.7.0 | R5-071043 |
| RP-36 | RP-070357 | 1911 | - | Correction to GCF WI-25 HSUPA Testcase 8.2.3.36 | F | 6.6.0 | 6.7.0 | R5-071049 |
| RP-36 | RP-070344 | 1912 | - | Correction to SMS test cases | F | 6.6.0 | 6.7.0 | R5-071050 |
| RP-36 | RP-070358 | 1913 | - | Correction to GCF WI-25 HSUPA test case 8.3.1.41 | F | 6.6.0 | 6.7.0 | R5-071076 |
| RP-36 | RP-070344 | 1914 | - | Correction to GCF WI-10 RRC test case 8.2.6.37 | F | 6.6.0 | 6.7.0 | R5-071077 |
| RP-36 | RP-070360 | 1915 | - | Editorial corrections to section 8.5 text styles and missing clause | F | 6.6.0 | 6.7.0 | R5-071100 |
| RP-36 | RP-070367 | 1916 | - | Addition of LCR TDD part of 8.5.1.1 | F | 6.6.0 | 6.7.0 | R5-071108 |
| RP-36 | RP-070367 | 1917 | - | Addition of LCR TDD part of 8.5.1.4 | F | 6.6.0 | 6.7.0 | R5-071109 |
| RP-36 | RP-070367 | 1918 | - | Addition of LCR TDD part of 8.5.1.5 | F | 6.6.0 | 6.7.0 | R5-071110 |
| RP-36 | RP-070367 | 1919 | - | Addition of LCR TDD part of 8.5.1.6 | F | 6.6.0 | 6.7.0 | R5-071111 |
| RP-36 | RP-070367 | 1920 | - | Addition of LCR TDD part of 8.5.3.4 | F | 6.6.0 | 6.7.0 | R5-071112 |
| RP-36 | RP-070367 | 1921 | - | Addition of LCR TDD part of 8.5.3.5 | F | 6.6.0 | 6.7.0 | R5-071113 |
| RP-36 | RP-070367 | 1922 | - | Addition of LCR TDD part of 8.5.3.6 | F | 6.6.0 | 6.7.0 | R5-071114 |
| RP-36 | RP-070367 | 1923 | - | Addition of LCR TDD part of 8.5.6.1 | F | 6.6.0 | 6.7.0 | R5-071115 |
| RP-36 | RP-070367 | 1924 | - | Addition of LCR TDD part of 8.5.6.2 | F | 6.6.0 | 6.7.0 | R5-071116 |
| RP-36 | RP-070367 | 1925 | - | Addition of LCR TDD part of 8.5.6.3 | F | 6.6.0 | 6.7.0 | R5-071117 |
| RP-36 | RP-070367 | 1926 | - | Addition of LCR TDD part of 8.5.6.5 | F | 6.6.0 | 6.7.0 | R5-071118 |
| RP-36 | RP-070349 | 1927 | - | Addition of LCR TDD part of 8.4.1.41 | F | 6.6.0 | 6.7.0 | R5-071121 |
| RP-36 | RP-070345 | 1928 | - | Correction to GCF Testcase 8.4.1.25 | F | 6.6.0 | 6.7.0 | R5-071133 |
| RP-36 | RP-070345 | 1929 | - | Correction to GCF WI 10 Inter system cell reselection from UTRAN test case 8.3.9.3 | F | 6.6.0 | 6.7.0 | R5-071147 |
| RP-36 | RP-070350 | 1930 | - | Correction to Generic radio bearer test procedure for standalone AMR RB configurations in 14.1.1a | F | 6.6.0 | 6.7.0 | R5-071152 |
| RP-36 | RP-070358 | 1931 | - | Correction to GCF WI 25 EDCH RRC test case 8.1.2.17 and 8.1.2.18 | F | 6.6.0 | 6.7.0 | R5-071154 |
| RP-36 | RP-070360 | 1932 | - | "MBMS serving cell reselection" terminology | F | 6.6.0 | 6.7.0 | R5-071164 |
| RP-36 | RP-070345 | 1933 | - | Correction to GCF WI-010 test case 6.1.2.6 | F | 6.6.0 | 6.7.0 | R5-071170 |
| RP-36 | RP-070345 | 1934 | - | Correction to low priority Radio Bearer Release test cases | F | 6.6.0 | 6.7.0 | R5-071172 |
| RP-36 | RP-070345 | 1935 | - | Correction to low priority Physical Channel Reconfiguration test case 8.2.6.25 | F | 6.6.0 | 6.7.0 | R5-071173 |
| RP-36 | RP-070356 | 1936 | - | Introduction of FDD Mode Test frequencies for Operating Band X (Extended 1.7/2.1 GHz) in clause 6 | F | 6.6.0 | 6.7.0 | R5-071175 |
| RP-36 | RP-070356 | 1937 | - | Introduction of FDD Mode Test frequencies for Operating Band X (Extended 1.7/2.1 GHz) in clause 8 | F | 6.6.0 | 6.7.0 | R5-071176 |
| RP-36 | RP-070345 | 1938 | - | Correction to TC 6.1.1.7 | F | 6.6.0 | 6.7.0 | R5-071185 |
| RP-36 | RP-070354 | 1939 | - | Correction to TCs 6.1.1.9 and 6.2.1.11 | F | 6.6.0 | 6.7.0 | R5-071186 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-36 | RP-070350 | 1940 | - | Update of ROHC test cases 7.3.6.8, 7.3.6.9. | F | 6.6.0 | 6.7.0 | R5-071208 |
| RP-36 | RP-070351 | 1941 | - | Update of ROHC test cases 7.3.6.2, 7.3.6.3, 7.3.6.4, 7.3.6.5 and 7.3.6.10. | F | 6.6.0 | 6.7.0 | R5-071209 |
| RP-36 | RP-070345 | 1942 | - | Correction to testcase 8.2.6.37 | F | 6.6.0 | 6.7.0 | R5-071259 |
| RP-36 | RP-070364 | 1943 | - | Addition of 7.68Mcps TDD tests to measurement procedure tests | F | 6.6.0 | 7.0.0 | R5-071271 |
| RP-36 | RP-070364 | 1944 | - | Addition of 7.68Mcps TDD tests to radio bearer establishment tests defined in 8.2.4, 8.2.5, 8.2.6 of 34-123 | F | 6.6.0 | 7.0.0 | R5-071273 |
| RP-36 | RP-070364 | 1945 | - | Addition of 7.68Mcps TDD tests to RRC connection management procedure tests (section 8.1) | F | 6.6.0 | 7.0.0 | R5-071275 |
| RP-36 | RP-070364 | 1946 | - | Addition of 7.68Mcps TDD tests to RRC connection mobility procedure tests | F | 6.6.0 | 7.0.0 | R5-071276 |
| RP-36 | RP-070364 | 1947 | - | Addition of MAC-hs transport block size selection test for 7.68Mcps TDD | F | 6.6.0 | 7.0.0 | R5-071282 |
| RP-36 | RP-070364 | 1948 | - | Addition of radio bearer tests for 7.68Mcps TDD to 34.123-1 | F | 6.6.0 | 7.0.0 | R5-071283 |
| RP-36 | RP-070351 | 1949 | - | Correction of RRC test case 8.4.1.47 | F | 6.6.0 | 6.7.0 | R5-071306 |
| RP-36 | RP-070351 | 1950 | - | Correction to WI 14 HSDPA RRC testcase 8.2.2.42 | F | 6.6.0 | 6.7.0 | R5-071307 |
| RP-36 | RP-070364 | 1951 | - | Addition of 7.68Mcps TDD tests to radio bearer establishment tests defined in 8.2.1, 8.2.2, 8.2.3 of 34-123 | F | 6.6.0 | 7.0.0 | R5-071311 |
| RP-36 | RP-070345 | 1952 | - | Correction to GCF WI-10 RRC Testcase 8.4.1.14 | F | 6.6.0 | 6.7.0 | R5-071314 |
| RP-36 | RP-070349 | 1953 | - | Clarify a test condition to testcase 9.4.7 | F | 6.6.0 | 6.7.0 | R5-071422 |
| RP-36 | RP-070351 | 1954 | - | Modification of HS-DSCH TB size for LCR TDD | F | 6.6.0 | 6.7.0 | R5-071424 |
| RP-36 | RP-070358 | 1955 | - | Correction of 8.3.4.10 modifying A12 to A13 | F | 6.6.0 | 6.7.0 | R5-071430 |
| RP-36 | RP-070358 | 1956 | - | Correction to GCF WI 25 EDCH MAC test case 7.1.6.2.2 | F | 6.6.0 | 6.7.0 | R5-071431 |
| RP-36 | RP-070358 | 1957 | - | Correction to testcase 7.1.6.4.3 | F | 6.6.0 | 6.7.0 | R5-071432 |
| RP-36 | RP-070351 | 1958 | - | Correction to GCF WI-14 MAC Test Case 7.1.5.2 | F | 6.6.0 | 6.7.0 | R5-071451 |
| RP-36 | RP-070345 | 1959 | - | Correction to GCF WI 10 RRC test case 8.4.1.42 | F | 6.6.0 | 6.7.0 | R5-071452 |
| RP-36 | RP-070345 | 1960 | - | Correction to Inter-band test case 8.3.2.1a | F | 6.6.0 | 6.7.0 | R5-071453 |
| RP-36 | RP-070345 | 1961 | - | Correction to test case 8.3.9.1 for FDD II and FDD VIII | F | 6.6.0 | 6.7.0 | R5-071454 |
| RP-36 | RP-070345 | 1962 | - | Correction to test case 12.4.1.4a | F | 6.6.0 | 6.7.0 | R5-071455 |
| RP-36 | RP-070345 | 1963 | - | Corrections to Interoperability Radio Bearer Test case 14.4.1 | F | 6.6.0 | 6.7.0 | R5-071456 |
| RP-36 | RP-070345 | 1964 | - | Correction to the RRC testcase 8.3.11.4 | F | 6.6.0 | 6.7.0 | R5-071463 |
| RP-36 | RP-070360 | 1965 | - | Correction to MBMS Test Case 8.5.3.1. | F | 6.6.0 | 6.7.0 | R5-071472 |
| RP-36 | RP-070360 | 1966 | - | Update of TC 8.5.5.3: MBMS No Counting in CELL_DCH | F | 6.6.0 | 6.7.0 | R5-071475 |
| RP-36 | RP-070360 | 1967 | - | Update of TC 8.5.5.1: MBMS Counting in Idle Mode | F | 6.6.0 | 6.7.0 | R5-071476 |
| RP-36 | RP-070360 | 1968 | - | Update of TC 8.5.5.2: MBMS Counting in CELL_FACH | F | 6.6.0 | 6.7.0 | R5-071477 |
| RP-36 | RP-070360 | 1969 | - | Extension of MBMS test case 8.5.1.8 | F | 6.6.0 | 6.7.0 | R5-071480 |
| RP-36 | RP-070360 | 1970 | - | Update of TC 8.5.5.4: MBMS Counting in CELL_PCH | F | 6.6.0 | 6.7.0 | R5-071481 |
| RP-36 | RP-070360 | 1971 | - | Addition of new MBMS Test Case 8.5.2.3 | F | 6.6.0 | 6.7.0 | R5-071482 |
| RP-36 | RP-070360 | 1972 | - | Correction to MBMS Test Case 8.5.6.1 | F | 6.6.0 | 6.7.0 | R5-071483 |
| RP-36 | RP-070360 | 1973 | - | Correction to MBMS test case 7.2.4.3 | F | 6.6.0 | 6.7.0 | R5-071485 |
| RP-36 | RP-070345 | 1974 | - | Correction to Inter-band test case 8.3.1.1a | F | 6.6.0 | 6.7.0 | R5-071491 |
| RP-36 | RP-070345 | 1975 | - | Correction to testcase 8.4.1.2 and 8.4.1.6 | F | 6.6.0 | 6.7.0 | R5-071492 |
| RP-36 | RP-070360 | 1976 | - | Correction to MBMS RLC test case 7.2.4.2 | F | 6.6.0 | 6.7.0 | R5-071504 |
| RP-36 | RP-070361 | 1977 | - | Correction to MBMS NAS test cases | F | 6.6.0 | 6.7.0 | R5-071505 |
| RP-36 | RP-070361 | 1978 | - | Correction to Generic test procedure for radio bearers on MTCH | F | 6.6.0 | 6.7.0 | R5-071506 |
| RP-36 | RP-070358 | 1979 | - | Correction to Radio Bearer Establishment Test case 8.2.1.36 | F | 6.6.0 | 6.7.0 | R5-071509 |
| RP-36 | RP-070345 | 1980 | - | Correction to GCF WI 10 RRC test case 8.4.1.24 | F | 6.6.0 | 6.7.0 | R5-071512 |
| RP-36 | RP-070345 | 1981 | - | Correction to GCF WI-10 Inter-RAT test case 6.2.1.6 | F | 6.6.0 | 6.7.0 | R5-071513 |
| RP-36 | RP-070361 | 1982 | - | Correction to clause numbering of MBMS service request test cases | F | 6.6.0 | 6.7.0 | R5-071523 |
| RP-36 | RP-070354 | 1983 | - | 34.123-1 Pointer version 6.7.0 | F | 6.6.0 | 6.7.0 | R5-071525 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-36 | RP-070358 | 1984 | - | Addition of new E-DCH test case 8.4.1.49 for E-DCH measurement event 1J | F | 6.6.0 | 6.7.0 | R5-071527 |
| RP-36 | RP-070358 | 1985 | - | Correction to GCF WI 25 EDCH MAC test case 7.1.6.2.1 | F | 6.6.0 | 6.7.0 | R5-071533 |
| RP-36 | RP-070361 | 1986 | - | Addition of new MBMS Test Case 8.5.6.4 | F | 6.6.0 | 6.7.0 | R5-071539 |
| RP-36 | RP-070361 | 1987 | - | Correction to MBMS Test Case 8.5.3.4 | F | 6.6.0 | 6.7.0 | R5-071540 |
| RP-36 | RP-070345 | 1988 | - | Improvement to test case 6.2.2.3 | F | 6.6.0 | 6.7.0 | R5-071450r1 |
| RP-36 | RP-070345 | 1989 | - | Correction to GCF WI 12 MAC test case 7.1.3.2 | F | 6.6.0 | 6.7.0 | R5-071522 |
| RP-36 | RP-070351 | 1990 | - | Addition of test scenario for Paging for notification of Synchronised BCCH modification in idle mode using BCCH modification time | F | 6.6.0 | 6.7.0 | R5-071537 |
| RP-36 | RP-070361 | 1991 | - | Addition of new MBMS Test Case 8.5.2.1 | F | 6.6.0 | 6.7.0 | R5-071550r1 |
| RP-36 | RP-070354 | 1992 | - | Editorial corrections in the reference list | F | 6.6.0 | 6.7.0 | R5-071445 |
| RP-37 | RP-070609 | 1994 | - | Addition of MTCH tests to radio bearer tests for 3.84 Mcps TDD | F | 7.0.0 | 7.1.0 | R5-072298 |
| RP-37 | RP-070609 | 1995 | - | Generic test procedure for radio bearers on MTCH for 3.84 Mcps TDD | F | 7.0.0 | 7.1.0 | R5-072303 |
| RP-37 | RP-070609 | 1996 | - | Generic test procedure for radio bearers on MTCH for 7.68 Mcps TDD | F | 7.0.0 | 7.1.0 | R5-072305 |
| RP-37 | RP-070601 | 1997 | - | Correction to GCF WI 25 E-DCH RRC test case 8.2.3.36 | F | 7.0.0 | 7.1.0 | R5-072121 |
| RP-37 | RP-070601 | 1998 | - | Correction to GCF WI 25 E-DCH RRC test case 8.2.6.51 | F | 7.0.0 | 7.1.0 | R5-072122 |
| RP-37 | RP-070601 | 1999 | - | Correction to GCF WI-25 test case 7.1.6.2.1 | F | 7.0.0 | 7.1.0 | R5-072188 |
| RP-37 | RP-070602 | 2000 | - | Correction to Radio Bearer Setup test case 8.2.1.36 | F | 7.0.0 | 7.1.0 | R5-072284 |
| RP-37 | RP-070604 | 2001 | - | Correction of MBMS test case 12.4.1.1d | F | 7.0.0 | 7.1.0 | R5-072043 |
| RP-37 | RP-070604 | 2002 | - | Corrections of MBMS test cases 12.9.16, 12.9.17, 12.9.18 | F | 7.0.0 | 7.1.0 | R5-072044 |
| RP-37 | RP-070604 | 2003 | - | MBMS RAB TC split for broadcast / multicast | F | 7.0.0 | 7.1.0 | R5-072046 |
| RP-37 | RP-070604 | 2004 | - | MBMS RLC TC split for broadcast / multicast | F | 7.0.0 | 7.1.0 | R5-072063 |
| RP-37 | RP-070604 | 2005 | - | Technical corrections to FLC/FLD TC in section 8.5.3 | F | 7.0.0 | 7.1.0 | R5-072090 |
| RP-37 | RP-070604 | 2006 | - | Technical correction to test case 7.2.4.2 | F | 7.0.0 | 7.1.0 | R5-072094 |
| RP-37 | RP-070604 | 2007 | - | Update of Test Case 8.5.2.2 and addition new Test Case 8.5.2.2m. | F | 7.0.0 | 7.1.0 | R5-072238 |
| RP-37 | RP-070604 | 2008 | - | Movement of MBMS RRC test cases 8.5.5.5 and 8.5.5.6 to clause 8.5.1 and split of test case 8.5.5.6 | F | 7.0.0 | 7.1.0 | R5-072248 |
| RP-37 | RP-070604 | 2009 | - | Update of Test Case 8.5.1.3 | F | 7.0.0 | 7.1.0 | R5-072485 |
| RP-37 | RP-070593 | 2010 | - | Correction to WI-13 and WI-47 Idle Mode testcases 6.1.2.10 and 6.1.2.10a | F | 7.0.0 | 7.1.0 | R5-072032 |
| RP-37 | RP-070597 | 2011 | - | Corrrection to testcase 6.2.2.4 | F | 7.0.0 | 7.1.0 | R5-072345 |
| RP-37 | RP-070593 | 2012 | - | Correction to GCF WI 14 MAC test case 7.1.5.2 | F | 7.0.0 | 7.1.0 | R5-072120 |
| RP-37 | RP-070588 | 2013 | - | Corrrection to testcase 7.1.3.2 | F | 7.0.0 | 7.1.0 | R5-072285 |
| RP-37 | RP-070588 | 2014 | - | Corrections to GCF WI-010 RRC test cases 8.3.1.22 and 8.3.2.12 | F | 7.0.0 | 7.1.0 | R5-072033 |
| RP-37 | RP-070588 | 2015 | - | Correction to GCF WI-47 RRC test case 8.3.1.1a | F | 7.0.0 | 7.1.0 | R5-072099 |
| RP-37 | RP-070588 | 2016 | - | Correction to GCF WI 10 RRC test case 8.4.1.7 | F | 7.0.0 | 7.1.0 | R5-072123 |
| RP-37 | RP-070588 | 2017 | - | Correction to GCF WI-010 test case 8.4.1.42 | F | 7.0.0 | 7.1.0 | R5-072165 |
| RP-37 | RP-070593 | 2018 | - | Correction to GCF WI-014 test case 8.2.6.48 | F | 7.0.0 | 7.1.0 | R5-072168 |
| RP-37 | RP-070588 | 2019 | - | Correction to GCF WI 10 RRC test case 8.2.6.37 | F | 7.0.0 | 7.1.0 | R5-072224 |
| RP-37 | RP-070588 | 2020 | - | Corrrection to testcase 8.2.6.37 | F | 7.0.0 | 7.1.0 | R5-072287 |
| RP-37 | RP-070588 | 2021 | - | Correction of GCF WI-010 test case 6.1.2.4 (AP#35.05) | F | 7.0.0 | 7.1.0 | R5-072068 |
| RP-37 | RP-070588 | 2022 | - | Correction to GCF WI-010 GMM test cases 12.2.1.5a Proc1, 12.4.1.4d Proc1, 12.4.2.5a Proc1 & 12.9.7b and GCF WI-012 GMM test case 12.3.2.7 | F | 7.0.0 | 7.1.0 | R5-072035 |
| RP-37 | RP-070588 | 2023 | - | Correction to GCF WI-15 AGPS test case 17.2.4.6 | F | 7.0.0 | 7.1.0 | R5-072097 |
| RP-37 | RP-070588 | 2024 | - | Correction to GCF WI-15 AGPS test case 17.2.4.7 | F | 7.0.0 | 7.1.0 | R5-072098 |
| RP-37 | RP-070588 | 2025 | - | Correction to GCF WI-15 AGPS test case 17.2.3.3 | F | 7.0.0 | 7.1.0 | R5-072348 |
| RP-37 | RP-070588 | 2026 | - | Correction to GCF WI-15 AGPS test case 17.2.3.8 | F | 7.0.0 | 7.1.0 | R5-072349 |
| RP-37 | RP-070609 | 2027 | - | Addition of MTCH tests to radio bearer tests for 7.68 Mcps TDD | F | 7.0.0 | 7.1.0 | R5-072483 |
| RP-37 | RP-070602 | 2028 | - | Correction to testcase 8.2.2.49 | F | 7.0.0 | 7.1.0 | R5-072456 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-37 | RP-070602 | 2029 | - | Correction to testcase 8.3.1.42 | F | 7.0.0 | 7.1.0 | R5-072457 |
| RP-37 | RP-070604 | 2030 | - | Clarification on the use of compression in 8.5.1.4 | F | 7.0.0 | 7.1.0 | R5-072473 |
| RP-37 | RP-070604 | 2031 | - | Technical corrections and extension of controlling cell change TCs in section 8.5.6 | F | 7.0.0 | 7.1.0 | R5-072474 |
| RP-37 | RP-070604 | 2032 | - | Addition of new test case 8.5.2.4 ( MBMS PTM Session Reconfiguration – MTCH data rate change ) | F | 7.0.0 | 7.1.0 | R5-072475 |
| RP-37 | RP-070604 | 2033 | - | Corrections to MBMS RRC test cases | F | 7.0.0 | 7.1.0 | R5-072476 |
| RP-37 | RP-070605 | 2034 | - | New MBMS RRC test case: Testing of the Selected Services indication from the network whilst in CELL_DCH / MBMS Selected Service | F | 7.0.0 | 7.1.0 | R5-072477 |
| RP-37 | RP-070605 | 2035 | - | Correction of Test Case 8.5.1.1 and addition new Test Case 8.5.1.1m. | F | 7.0.0 | 7.1.0 | R5-072488 |
| RP-37 | RP-070605 | 2036 | - | Correction of Test Case 8.5.1.6. | F | 7.0.0 | 7.1.0 | R5-072490 |
| RP-37 | RP-070605 | 2037 | - | Correction of Test Case 8.5.2.3 and addition new Test Case 8.5.2.3m. | F | 7.0.0 | 7.1.0 | R5-072493 |
| RP-37 | RP-070605 | 2038 | - | Update of Test Cases from RRC section 8.5.5. | F | 7.0.0 | 7.1.0 | R5-072494 |
| RP-37 | RP-070605 | 2039 | - | Addition of new MBMS test cases 8.5.5.7, 8.5.5.7m, 8.5.5.8 & 8.5.5.8m | F | 7.0.0 | 7.1.0 | R5-072463 |
| RP-37 | RP-070605 | 2040 | - | Generic test procedure for New MBMS PTP HS radio bearer testing | F | 7.0.0 | 7.1.0 | R5-072498 |
| RP-37 | RP-070593 | 2042 | - | Correction to the support statement of RoHC | F | 7.0.0 | 7.1.0 | R5-072487 |
| RP-37 | RP-070593 | 2043 | - | Update to references for Robust Header Compression (RFC3095) | F | 7.0.0 | 7.1.0 | R5-072459 |
| RP-37 | RP-070593 | 2044 | - | Update of Radio Bearer setup used in Rohc generic procedure. | F | 7.0.0 | 7.1.0 | R5-072528 |
| RP-37 | RP-070588 | 2045 | - | Clarification of default value for the measurment tests | F | 7.0.0 | 7.1.0 | R5-072478 |
| RP-37 | RP-070588 | 2046 | - | Correction to GCF WI-47 RRC test case 8.3.2.1a | F | 7.0.0 | 7.1.0 | R5-072461 |
| RP-37 | RP-070589 | 2047 | - | Correction to GCF WI-010 MM test case 9.4.2.4 | F | 7.0.0 | 7.1.0 | R5-072312 |
| RP-37 | RP-070593 | 2048 | - | Correction to GCF WI-14 RAB Test Case 14.6.7 | F | 7.0.0 | 7.1.0 | R5-072333 |
| RP-37 | RP-070600 | 2049 | - | Editorial corrections to section 18.2 of 34.123-1 | F | 7.0.0 | 7.1.0 | R5-072467 |
| RP-37 | RP-070600 | 2050 | - | Editorial corrections to section 18.3 of 34.123-1 | F | 7.0.0 | 7.1.0 | R5-072512 |
| RP-37 | RP-070611 | 2051 | - | Generic test procedure for LCR TDD MBMS radio bearer test cases | F | 7.0.0 | 7.1.0 | R5-072536 |
| RP-37 | RP-070611 | 2052 | - | New MBMS radio bearer test cases for LCR TDD | F | 7.0.0 | 7.1.0 | R5-072533 |
| RP-37 | RP-070605 | 2053 | - | MBMS GMM TC split for broadcast / multicast | F | 7.0.0 | 7.1.0 | R5-072470 |
| RP-37 | RP-070605 | 2054 | - | MBMS SM TC split for broadcast / multicast | F | 7.0.0 | 7.1.0 | R5-072503 |
| RP-37 | RP-070605 | 2055 | - | MBMS RRC section 8 split for broadcast / multicast | F | 7.0.0 | 7.1.0 | R5-072554 |
| RP-37 | RP-070605 | 2056 | - | Update of Test Case 8.5.1.2 and addition new Test Case 8.5.1.2m.. | F | 7.0.0 | 7.1.0 | R5-072557 |
| RP-37 | RP-070605 | 2057 | - | Correction of Test Case 8.5.2.1. | F | 7.0.0 | 7.1.0 | R5-072558 |
| RP-37 | RP-070605 | 2058 | - | New MBMS PTP HS radio bearer test cases | F | 7.0.0 | 7.1.0 | R5-072523 |
| RP-37 | RP-070593 | 2059 | - | New test case for radio bearer reconfiguration from speech to speech plus PS data with modification of downlink spreading factor | F | 7.0.0 | 7.1.0 | R5-072539 |
| RP-37 | RP-070589 | 2060 | - | Clarification test step of test case 12.4.1.3 | F | 7.0.0 | 7.1.0 | R5-072527 |
| RP-37 | RP-070589 | 2061 | - | Correction of SMS testcases 16.2.1 and 16.2.2 | F | 7.0.0 | 7.1.0 | R5-072462 |
| RP-37 | RP-070605 | 2062 | - | Addition of new test case 8.5.1.9 ( MBMS PTM Session Start at MCCH Notification in Idle ) | F | 7.0.0 | 7.1.0 | R5-072562 |
| RP-37 | RP-070602 | 2063 | - | Modification of applicability for F-DPCH test cases | F | 7.0.0 | 7.1.0 | R5-072500 |
| RP-37 | RP-070602 | 2064 | - | Correction to E-DCH RAB test prcoedure | F | 7.0.0 | 7.1.0 | R5-072531 |
| RP-37 | RP-070589 | 2065 | - | Correction to RRC test cases 8.2.6.39a, 8.2.6.39b, 8.2.6.51, 8.4.1.1 and 8.4.1.45 | F | 7.0.0 | 7.1.0 | R5-072529 |
| RP-37 | RP-070593 | 2066 | - | Correction to HSDPA RAB test prcoedure | F | 7.0.0 | 7.1.0 | R5-072530 |
| RP-37 | RP-070602 | 2067 | - | Correction to GCF WI-025 HSUPA test cases 8.4.1.49 | F | 7.0.0 | 7.1.0 | R5-072516 |
| RP-37 | RP-070602 | 2068 | - | Modification of test case 8.2.2.49, to remove dependency on support of F-DPCH | F | 7.0.0 | 7.1.0 | R5-072537 |
| RP-37 | RP-070602 | 2069 | - | Correction to RRC Test case 8.2.2.47 and addition of new Testcase 8.2.2.47a | F | 7.0.0 | 7.1.0 | R5-072552 |
| RP-37 | RP-070602 | 2070 | - | Correction RRC Testcase 8.3.1.42 and addition of new Testcase 8.3.1.42a | F | 7.0.0 | 7.1.0 | R5-072551r1 |
| RP-37 | RP-070602 | 2071 | - | Correction to GCF WI-25 EDCH RRC Test case 8.2.1.36 and addition of new test case 8.2.1.36a | F | 7.0.0 | 7.1.0 | R5-072556 |
| RP-37 | RP-070602 | 2072 | - | Correction to GCF WI-25 EDCH RRC Test case | F | 7.0.0 | 7.1.0 | R5-072555 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | 8.2.2.44 and addition of new test case 8.2.2.44a | | | | |
| RP-37 | RP-070605 | 2073 | - | Corrections of MBMS Session Management test cases | F | 7.0.0 | 7.1.0 | R5-072513r1 |
| RP-37 | RP-070600 | 2074 | - | Production of 34.123-1 Rel-7 pointer version to point to Rel-8 of the spec | F | 7.0.0 | 7.1.0 | R5-072593 |
| RP-37 | RP-070599 | 2041 | - | Introduction of Test frequencies for FDD Mode Operating Band XI (UMTS 1500) | F | 7.0.0 | 8.0.0 | R5-072458 |
| RP-38 | RP-070879 | 2075 | | Correction to some parameters of Both MEASUREMENT CONTROL(1.28Mcps TDD) and MEASUREMENT REPORT (1.28Mcps TDD) in 8.5.1.4 | F | 8.0.0 | 8.1.0 | R5-073129 |
| RP-38 | RP-070879 | 2076 | | Correction to the parameter of PHYSICAL CHANNEL RECONFIGURATION (1.28McpsTDD) in 8.5.1.5 | F | 8.0.0 | 8.1.0 | R5-073130 |
| RP-38 | RP-070879 | 2077 | | Correction of the test case 8.5.2.4 for LCR TDD | F | 8.0.0 | 8.1.0 | R5-073131 |
| RP-38 | RP-070879 | 2078 | | Addition of LCR TDD part of 8.5.3.3 | F | 8.0.0 | 8.1.0 | R5-073132 |
| RP-38 | RP-070879 | 2079 | | Addition of LCR TDD part of 8.5.6.4 | F | 8.0.0 | 8.1.0 | R5-073133 |
| RP-38 | RP-070879 | 2080 | | Correction to some parameters of PHYSICAL CHANNEL RECONFIGURATION (1.28Mcps TDD) in 8.5.6.5 | F | 8.0.0 | 8.1.0 | R5-073134 |
| RP-38 | RP-070880 | 2081 | | Modification of section 8.5 of 34.123-1 to deal with 3.84Mcps and 7.68Mcps TDD | F | 8.0.0 | 8.1.0 | R5-073477 |
| RP-38 | RP-070887 | 2082 | | Addition of AM RLC test case for flexible RLC PDU sizes | F | 8.0.0 | 8.1.0 | R5-073301 |
| RP-38 | RP-070887 | 2083 | | Addition of new generic test procedure for radio bearer tests utilizing improved L2 | F | 8.0.0 | 8.1.0 | R5-073455 |
| RP-38 | RP-070887 | 2084 | | New test case for MAC-ehs transport block size selection | F | 8.0.0 | 8.1.0 | R5-073407 |
| RP-38 | RP-070887 | 2085 | | Introduction of new MAC-ehs test cases | F | 8.0.0 | 8.1.0 | R5-073408 |
| RP-38 | RP-070887 | 2086 | | Introduction of new MAC-ehs test case | F | 8.0.0 | 8.1.0 | R5-073422 |
| RP-38 | RP-070885 | 2087 | | New CPC test case for physical channel reconfiguration with DTX_DRX_STATUS variable and corresponding actions | F | 8.0.0 | 8.1.0 | R5-073485 |
| RP-38 | RP-070885 | 2088 | | New CPC test case for physical channel reconfiguration with HS_SCCH_LESS_STATUS variable and corresponding actions. | F | 8.0.0 | 8.1.0 | R5-073486 |
| RP-38 | RP-070885 | 2089 | | New MAC test case for grant monitoring in discontinuous downlink reception operation | F | 8.0.0 | 8.1.0 | R5-073411 |
| RP-38 | RP-070885 | 2090 | | New CPC test case for RB establishment with start of DTX | F | 8.0.0 | 8.1.0 | R5-073410 |
| RP-38 | RP-070885 | 2091 | | New CPC test case for RB establishment with start of HS-SCCH less operation | F | 8.0.0 | 8.1.0 | R5-073409 |
| RP-38 | RP-070885 | 2092 | | MAC E-TFCI Selection for CPC | F | 8.0.0 | 8.1.0 | R5-073474 |
| RP-38 | RP-070885 | 2093 | | MAC HS-SCCH Less Operation for CPC | F | 8.0.0 | 8.1.0 | R5-073475 |
| RP-38 | RP-070872 | 2094 | | Add references of MBMS Relevant Specifications | F | 8.0.0 | 8.1.0 | R5-073309 |
| RP-38 | RP-070859 | 2095 | | Correction to GCF WI 10 Idle mode test case 6.1.1.4 | F | 8.0.0 | 8.1.0 | R5-073196 |
| RP-38 | RP-070872 | 2096 | | Correction to GCF WI-24 Idle mode testcases 6.1.1.8 and 6.1.1.9 | F | 8.0.0 | 8.1.0 | R5-073197 |
| RP-38 | RP-070869 | 2097 | | Correction to MAC-hs test case 7.1.5.5 | F | 8.0.0 | 8.1.0 | R5-073166 |
| RP-38 | RP-070872 | 2098 | | Correction to GCF WI-25 HSUPA test case 8.3.4.10 | F | 8.0.0 | 8.1.0 | R5-073416 |
| RP-38 | RP-070859 | 2099 | | Correction to GCF WI 10 RRC test case 8.3.1.22 | F | 8.0.0 | 8.1.0 | R5-073057 |
| RP-38 | RP-070859 | 2100 | | Correction to GCF WI 10 RRC testcases 8.4.1.23 and 8.4.1.28 | F | 8.0.0 | 8.1.0 | R5-073058 |
| RP-38 | RP-070872 | 2101 | | Correction to GCF WI-24 RRC testcase 8.1.1.11 | F | 8.0.0 | 8.1.0 | R5-073095 |
| RP-38 | RP-070872 | 2102 | | Correction of Test Cases 8.5.2.2 and 8.5.2.2m | F | 8.0.0 | 8.1.0 | R5-073097 |
| RP-38 | RP-070872 | 2103 | | Correction of Test Cases 8.5.1.3 and 8.5.1.3m | F | 8.0.0 | 8.1.0 | R5-073098 |
| RP-38 | RP-070872 | 2104 | | Removal of Test Cases 8.5.1.6 and 8.5.1.6m | F | 8.0.0 | 8.1.0 | R5-073099 |
| RP-38 | RP-070872 | 2105 | | Update of Test Cases from RRC section 8.5.5. | F | 8.0.0 | 8.1.0 | R5-073100 |
| RP-38 | RP-070872 | 2106 | | Update of MBMS RRC test cases to add references to the RB Setup PtP message | F | 8.0.0 | 8.1.0 | R5-073417 |
| RP-38 | RP-070872 | 2107 | | Correction to INITIAL DIRECT TRANSFER message contents in MBMS test cases | F | 8.0.0 | 8.1.0 | R5-073415 |
| RP-38 | RP-070873 | 2108 | | Correction to specific message content for MBMS MODIFICATION REQUEST message | F | 8.0.0 | 8.1.0 | R5-073111 |
| RP-38 | RP-070859 | 2109 | | Correcting prose for WI-10 test case 8.2.3.29: removing multi call reference | F | 8.0.0 | 8.1.0 | R5-073115 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-38 | RP-070859 | 2110 | | Correcting prose for non GCF test case 8.4.1.43: removing multi call reference | F | 8.0.0 | 8.1.0 | R5-073116 |
| RP-38 | RP-070869 | 2111 | | Correction to RRC test case 8.2.2.50 | F | 8.0.0 | 8.1.0 | R5-073163 |
| RP-38 | RP-070873 | 2112 | | Corrections to MBMS test Case 8.5.2.1 | F | 8.0.0 | 8.1.0 | R5-073216 |
| RP-38 | RP-070873 | 2113 | | Corrections to MBMS test cases 8.5.5.7, 8.5.5.7m, 8.5.5.8 & 8.5.5.8m | F | 8.0.0 | 8.1.0 | R5-073217 |
| RP-38 | RP-070859 | 2114 | | Correction to WI-010 test case 8.3.1.31 | F | 8.0.0 | 8.1.0 | R5-073405 |
| RP-38 | RP-070859 | 2115 | | Corrrection to testcase 8.1.10.1 | F | 8.0.0 | 8.1.0 | R5-073426 |
| RP-38 | RP-070859 | 2116 | | Corrections to RRC testcases 8.2.6.37, 8.2.6.38, 8.2.6.48 & 8.4.1.42. | F | 8.0.0 | 8.1.0 | R5-073443 |
| RP-38 | RP-070873 | 2117 | | Correction to testcase 8.3.1.42a | F | 8.0.0 | 8.1.0 | R5-073427 |
| RP-38 | RP-070869 | 2118 | | Correction to the new WI-024 paging test case 8.1.1.6a | F | 8.0.0 | 8.1.0 | R5-073428 |
| RP-38 | RP-070859 | 2119 | | Correction to RRC test case 8.4.1.23 | F | 8.0.0 | 8.1.0 | R5-073456 |
| RP-38 | RP-070873 | 2120 | | Correction to RRC test case 8.4.1.49 | F | 8.0.0 | 8.1.0 | R5-073457 |
| RP-38 | RP-070873 | 2121 | | Corrections to MBMS FLC/FLD test cases | F | 8.0.0 | 8.1.0 | R5-073265 |
| RP-38 | RP-070873 | 2122 | | Corrections to MBMS controlling cell change test cases | F | 8.0.0 | 8.1.0 | R5-073266 |
| RP-38 | RP-070873 | 2123 | | Minor corrections to MBMS RRC sections | F | 8.0.0 | 8.1.0 | R5-073267 |
| RP-38 | RP-070860 | 2124 | | Correction to GCF WI-10 test case 8.4.1.31 | F | 8.0.0 | 8.1.0 | R5-073299 |
| RP-38 | RP-070873 | 2125 | | Correction of Test Case 8.5.2.1 | F | 8.0.0 | 8.1.0 | R5-073434 |
| RP-38 | RP-070860 | 2126 | | Correction to GCF WI-10 MM test case 9.4.2.4 | F | 8.0.0 | 8.1.0 | R5-073051 |
| RP-38 | RP-070873 | 2127 | | Correction in DSAC testcase 9.5.9. | F | 8.0.0 | 8.1.0 | R5-073452 |
| RP-38 | RP-070860 | 2128 | | Clarification added to test case 9.5.2 | F | 8.0.0 | 8.1.0 | R5-073453 |
| RP-38 | RP-070873 | 2129 | | Addition of optional test path for DSAC testcase 12.9.15. | F | 8.0.0 | 8.1.0 | R5-073451 |
| RP-38 | RP-070860 | 2130 | | Correction in GMM testcase 12.4.1.1b | F | 8.0.0 | 8.1.0 | R5-073432 |
| RP-38 | RP-070873 | 2131 | | Correction to MBMS RAB test case 14.4.5, 14.4.6 and 14.4.7 | F | 8.0.0 | 8.1.0 | R5-073059 |
| RP-38 | RP-070860 | 2132 | | Correction to Generic Radio Bearer test procedure for Cell FACH test cases | F | 8.0.0 | 8.1.0 | R5-073186 |
| RP-38 | RP-070871 | 2133 | | Update of MBMS PTP HS radio bearer test cases | F | 8.0.0 | 8.1.0 | R5-073462r1 |
| RP-38 | RP-070873 | 2134 | | Addition of details for generic test procedure for MBMS PTP HS radio bearer test cases | F | 8.0.0 | 8.1.0 | R5-073461 |
| RP-39 | RP-080106 | 2135 | | Addition of MAC-es/e tests for 3.84Mcps and 7.68Mcps TDD to section 7 of 34.123-1 | F | 8.1.0 | 8.2.0 | R5-080377 |
| RP-39 | RP-080106 | 2136 | | Update of Radio bearer control procedure tests to include E-DCH test for 3.84Mcps and 7.68Mcps TDD | F | 8.1.0 | 8.2.0 | R5-080596 |
| RP-39 | RP-080102 | 2137 | | New test case 8.1.2.1a addition to verify the UE supporting the features and operation of multi-frequency and UpPCH Shifting for LCR TDD. | F | 8.1.0 | 8.2.0 | R5-080193 |
| RP-39 | RP-080102 | 2138 | | New test case addition to verify the UE supporting the features and operation of multi-frequency and UpPCH Shifting for LCR TDD. | F | 8.1.0 | 8.2.0 | R5-080610 |
| RP-39 | RP-080102 | 2139 | | New test case addition to verify the UE supporting the features and operation of multi-frequency and UpPCH Shifting for LCR TDD. | F | 8.1.0 | 8.2.0 | R5-080195 |
| RP-39 | RP-080102 | 2140 | | New test case addition to verify the UE supporting the feature of UpPCH Shifting for LCR TDD. | F | 8.1.0 | 8.2.0 | R5-080196 |
| RP-39 | RP-080102 | 2141 | | NEW test case addition to verify the UE supporting the feature of UpPCH Shifting for LCR TDD. | F | 8.1.0 | 8.2.0 | R5-080197 |
| RP-39 | RP-080108 | 2142 | | New MAC Test Case for UL 16QAM | F | 8.1.0 | 8.2.0 | R5-080481 |
| RP-39 | RP-080108 | 2143 | | New Radio Bearer Test Cases for UL 16 QAM | F | 8.1.0 | 8.2.0 | R5-080593 |
| RP-39 | RP-080108 | 2144 | | Update of existing E-DCH radio bearer test cases in section 14.7 for Rel-7 UE HS_DSCH physical layer categories 13 to 18 and E-DCH category 7. | F | 8.1.0 | 8.2.0 | R5-080524 |
| RP-39 | RP-080107 | 2145 | | Addition of MAC-ehs TB size selection test case for 64QAM | F | 8.1.0 | 8.2.0 | R5-080260 |
| RP-39 | RP-080107 | 2146 | | New Rel-7 HSPA IB radio bearer test case for enhanced L2 and 64QAM | F | 8.1.0 | 8.2.0 | R5-080371 |
| RP-39 | RP-080107 | 2147 | | New Rel-7 HSPA streaming radio bearer test case for enhanced L2 and 64QAM | F | 8.1.0 | 8.2.0 | R5-080338 |
| RP-39 | RP-080109 | 2148 | | Addition of a new test case for DL Improved Layer2: Reconfiguration between fixed and flexible AM RLC, Serving HS-DSCH cell change between MAC-hs | F | 8.1.0 | 8.2.0 | R5-080605 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | and MAC-ehs. | | | | |
| RP-39 | RP-080109 | 2149 | | Addition of generic test procedure for MAC-ehs TB size selection test cases | F | 8.1.0 | 8.2.0 | R5-080535 |
| RP-39 | RP-080109 | 2150 | | Addition of MAC-ehs TB size selection test case for QPSK and 16QAM | F | 8.1.0 | 8.2.0 | R5-080360 |
| RP-39 | RP-080109 | 2151 | | Update of RLC test case 7.2.3.36 for Flexible handling of RLC PDU sizes for AM RLC | F | 8.1.0 | 8.2.0 | R5-080509 |
| RP-39 | RP-080109 | 2152 | | Addition of RLC test case for Flexible handling of RLC PDU sizes for UM RLC in downlink | F | 8.1.0 | 8.2.0 | R5-080563 |
| RP-39 | RP-080109 | 2153 | | Correction to generic test procedure for Enhanced L2 radio bearer test cases | F | 8.1.0 | 8.2.0 | R5-080511 |
| RP-39 | RP-080109 | 2154 | | Update of existing HSDPA radio bearer test cases in section 14.6 for Rel-7 UE HS_DSCH physical layer categories 13 to 18. | F | 8.1.0 | 8.2.0 | R5-080330 |
| RP-39 | RP-080109 | 2155 | | New Rel-7 HSPA IB radio bearer test case for enhanced L2, QPSK and 16QAM | F | 8.1.0 | 8.2.0 | R5-080331 |
| RP-39 | RP-080109 | 2156 | | New Rel-7 HSPA streaming radio bearer test case for enhanced L2, QPSK and 16QAM | F | 8.1.0 | 8.2.0 | R5-080337 |
| RP-39 | RP-080109 | 2157 | | New Rel-7 HSPA conversational radio bearer test case using SRBs with flexible RLC | F | 8.1.0 | 8.2.0 | R5-080564 |
| RP-39 | RP-080111 | 2158 | | Addition of a new test case for CPC: CQI reporting in UL. | F | 8.1.0 | 8.2.0 | R5-080599 |
| RP-39 | RP-080111 | 2159 | | Addition of a new test case for CPC: UL DPCCH slot format #4 | F | 8.1.0 | 8.2.0 | R5-080592 |
| RP-39 | RP-080111 | 2160 | | New CPC test case for Radio Bearer Release for transition from CELL_DCH to CELL_DCH: Success (frequency modification, stop of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080487 |
| RP-39 | RP-080111 | 2161 | | New CPC test case for Physical Channel Reconfiguration for transition from CELL_DCH to URA_PCH: Success (frequency modification, stop of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080516 |
| RP-39 | RP-080111 | 2162 | | New CPC test case for Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (serving E-DCH cell change with discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080488 |
| RP-39 | RP-080111 | 2163 | | New CPC test case for Physical channel reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Timing re-initialized hard handover to another frequency, Serving E-DCH cell change with discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080489 |
| RP-39 | RP-080111 | 2164 | | New CPC test case for Physical Channel Reconfiguration for transition from CELL_DCH to CELL_DCH: Failure (Timing re-initialized hard handover, Serving E-DCH cell change with discontinuous uplink transmission, physical channel failure and reversion to old channel) | F | 8.1.0 | 8.2.0 | R5-080491 |
| RP-39 | RP-080111 | 2165 | | New CPC test case for Cell Update: Transition from URA_PCH to CELL_DCH: Success (start of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080490 |
| RP-39 | RP-080111 | 2166 | | New CPC test case for Cell Update: Transition from CELL_PCH to CELL_DCH: Success (frequency modification, start of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080492 |
| RP-39 | RP-080111 | 2167 | | New CPC test case for Cell Update: Radio Link Failure, with active discontinuous uplink transmission | F | 8.1.0 | 8.2.0 | R5-080493 |
| RP-39 | RP-080111 | 2168 | | New CPC test case for Inter-RAT Cell Change Order from UTRAN to GPRS/CELL_DCH/Success (stop of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080517 |
| RP-39 | RP-080111 | 2169 | | Corrections to CPC RRC test cases | F | 8.1.0 | 8.2.0 | R5-080494 |
| RP-39 | RP-080111 | 2170 | | New CPC test case: RRC Connection Establishment for transition from Idle Mode to CELL_DCH: Success (start of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080495 |
| RP-39 | RP-080111 | 2171 | | New CPC test case: Radio Bearer Reconfiguration from CELL_DCH to CELL_DCH: Success (With active discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080514 |
| RP-39 | RP-080111 | 2172 | | New CPC test case: Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (start and stop of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080496 |
| RP-39 | RP-080111 | 2173 | | New CPC test case: Radio Bearer Reconfiguration | F | 8.1.0 | 8.2.0 | R5-080497 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | for transition from CELL_DCH to CELL_DCH: Success (hard handover to another frequency, start and stop of discontinuous uplink transmission) | | | | |
| RP-39 | RP-080111 | 2174 | | New CPC test case: Radio Bearer Reconfiguration for transition from CELL_FACH to CELL_DCH and CELL_DCH to CELL_FACH: Success (frequency modification, start and stop of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080498 |
| RP-39 | RP-080111 | 2175 | | New CPC test case: Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_DCH: Success (Start and stop of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080499 |
| RP-39 | RP-080112 | 2176 | | New CPC test case: Radio Bearer Reconfiguration for transition from CELL_DCH to CELL_PCH: Success (stop of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080500 |
| RP-39 | RP-080112 | 2177 | | New CPC test case: Radio Bearer Establishment for transition from CELL_DCH to CELL_DCH: Success (hard handover to another frequency, start of discontinuous uplink transmission) | F | 8.1.0 | 8.2.0 | R5-080515 |
| RP-39 | RP-080112 | 2178 | | New CPC test case: Active set update in soft handover: Radio Link addition and serving HS-DSCH / E-DCH cell change, with discontinuous uplink transmission. | F | 8.1.0 | 8.2.0 | R5-080501 |
| RP-39 | RP-080105 | 2179 | | New Rel-7 HSPA IB radio bearer test case for enhanced L2 and MIMO | F | 8.1.0 | 8.2.0 | R5-080520 |
| RP-39 | RP-080105 | 2180 | | New Rel-7 HSPA streaming radio bearer test case for enhanced L2 and MIMO | F | 8.1.0 | 8.2.0 | R5-080339 |
| RP-39 | RP-080096 | 2181 | | Correction to GCF WI-24 Network Sharing Testcase 6.2.2.4 | F | 8.1.0 | 8.2.0 | R5-080522 |
| RP-39 | RP-080096 | 2182 | | Correction to GCF WI 24 Idle Mode test cases 6.1.1.8 and 6.1.1.9 | F | 8.1.0 | 8.2.0 | R5-080158 |
| RP-39 | RP-080096 | 2183 | | Correction to GCF WI 24 Idle Mode test case 6.1.2.11, 6.2.1.10 and 6.2.1.11 | F | 8.1.0 | 8.2.0 | R5-080159 |
| RP-39 | RP-080096 | 2184 | | Correction to GCF WI 25 E-DCH MAC testcase 7.1.6.2.1 | F | 8.1.0 | 8.2.0 | R5-080153 |
| RP-39 | RP-080093 | 2185 | | Corrections to RoHC performance test cases | F | 8.1.0 | 8.2.0 | R5-080551 |
| RP-39 | RP-080096 | 2186 | | Correction to testcase 7.1.6.4.1 | F | 8.1.0 | 8.2.0 | R5-080267 |
| RP-39 | RP-080091 | 2187 | | Correction to 8.3.1.30 | F | 8.1.0 | 8.2.0 | R5-080553 |
| RP-39 | RP-080096 | 2188 | | Correction in test case 8.2.3.36 | F | 8.1.0 | 8.2.0 | R5-080038 |
| RP-39 | RP-080096 | 2189 | | Removal of RRC Test Case 8.2.1.37 | F | 8.1.0 | 8.2.0 | R5-080055 |
| RP-39 | RP-080096 | 2190 | | Correction of Test Case 8.5.2.1 | F | 8.1.0 | 8.2.0 | R5-080057 |
| RP-39 | RP-080096 | 2191 | | Correction of MBMS Test Cases | F | 8.1.0 | 8.2.0 | R5-080532 |
| RP-39 | RP-080096 | 2192 | | Correction to GCF WI-24 Network Sharing Testcase 8.3.3.4 | F | 8.1.0 | 8.2.0 | R5-080528 |
| RP-39 | RP-080096 | 2193 | | Correction to GCF WI-25 test cases 8.3.1.42 and 8.3.1.42a | F | 8.1.0 | 8.2.0 | R5-080376 |
| RP-39 | RP-080096 | 2194 | | Correction to GCF WI 25 E-DCH RRC testcase 8.4.1.49 | F | 8.1.0 | 8.2.0 | R5-080154 |
| RP-39 | RP-080096 | 2195 | | Correction to GCF WI 25 E-DCH RRC test case 8.2.6.51 | F | 8.1.0 | 8.2.0 | R5-080155 |
| RP-39 | RP-080096 | 2196 | | Correction to GCF WI 25 E-DCH RRC test case 8.2.6.52 | F | 8.1.0 | 8.2.0 | R5-080156 |
| RP-39 | RP-080091 | 2197 | | Correction to the GCF WI 10 RRC testcase 8.3.2.12 | F | 8.1.0 | 8.2.0 | R5-080157 |
| RP-39 | RP-080096 | 2198 | | Corrections to GCF WI 49 MBMS RRC test cases 8.5.1.2 and 8.5.1.13 | F | 8.1.0 | 8.2.0 | R5-080163 |
| RP-39 | RP-080096 | 2199 | | Corrections to GCF WI 49 MBMS RRC test case 8.5.1.12 | F | 8.1.0 | 8.2.0 | R5-080164 |
| RP-39 | RP-080096 | 2200 | | Correction to GCF WI 49 MBMS RRC test case 8.5.1.4 | F | 8.1.0 | 8.2.0 | R5-080165 |
| RP-39 | RP-080096 | 2201 | | Correction to MBMS RRC test case 8.5.2.2 and 8.5.2.2m | F | 8.1.0 | 8.2.0 | R5-080529 |
| RP-39 | RP-080096 | 2202 | | Removal of MBMS test cases 8.5.1.7 and 8.5.1.7m | F | 8.1.0 | 8.2.0 | R5-080178 |
| RP-39 | RP-080096 | 2203 | | Correction to GCF WI 49 MBMS RRC test case 8.5.3.2 | F | 8.1.0 | 8.2.0 | R5-080229 |
| RP-39 | RP-080097 | 2204 | | Corrections to GCF WI 49 MBMS RRC test case 8.5.4.2 | F | 8.1.0 | 8.2.0 | R5-080230 |
| RP-39 | RP-080097 | 2205 | | Corrections to GCF WI 49 MBMS RRC test case 8.5.4.3 | F | 8.1.0 | 8.2.0 | R5-080232 |
| RP-39 | RP-080097 | 2206 | | Corrections to MBMS RRC test case 8.5.5.4 and | F | 8.1.0 | 8.2.0 | R5-080233 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | 8.5.5.4m | | | | |
| RP-39 | RP-080097 | 2207 | | Correction to MBMS test cases for INITIAL DIRECT TRANSFER message | F | 8.1.0 | 8.2.0 | R5-080234 |
| RP-39 | RP-080097 | 2208 | | Minor corrections to MBMS RRC test cases | F | 8.1.0 | 8.2.0 | R5-080290 |
| RP-39 | RP-080097 | 2209 | | Correction to MBMS test case 8.5.2.4 | F | 8.1.0 | 8.2.0 | R5-080291 |
| RP-39 | RP-080097 | 2210 | | Correction to E-DCH test case 8.2.2.49 | F | 8.1.0 | 8.2.0 | R5-080292 |
| RP-39 | RP-080091 | 2211 | | Correction to testcase 8.4.1.40 | F | 8.1.0 | 8.2.0 | R5-080533 |
| RP-39 | RP-080097 | 2212 | | Correction of MEASUREMENT REPORT in GCF WI-25 HSUPA test case 8.3.4.10 | F | 8.1.0 | 8.2.0 | R5-080308 |
| RP-39 | RP-080097 | 2213 | | Correction of Test Case 8.5.1.1 | F | 8.1.0 | 8.2.0 | R5-080608 |
| RP-39 | RP-080097 | 2214 | | Correction in DSAC test case 9.4.3.6 | F | 8.1.0 | 8.2.0 | R5-080035 |
| RP-39 | RP-080097 | 2215 | | Corrections to MBMS NAS test cases 11.8.2 and 11.8.2m | F | 8.1.0 | 8.2.0 | R5-080152 |
| RP-39 | RP-080091 | 2216 | | Correction to the GCF WI 10 GMM test case 12.4.1.4b | F | 8.1.0 | 8.2.0 | R5-080150 |
| RP-39 | RP-080097 | 2217 | | Corrections to MBMS GMM test cases 12.9.16, 12.9.16m, 12.9.17 and 12.9.17m | F | 8.1.0 | 8.2.0 | R5-080537 |
| RP-39 | RP-080091 | 2218 | | Correction in GMM testcase 12.9.9 | F | 8.1.0 | 8.2.0 | R5-080609 |
| RP-39 | RP-080091 | 2219 | | Correction to test case 12.4.1.1b | F | 8.1.0 | 8.2.0 | R5-080538 |
| RP-39 | RP-080097 | 2220 | | Correction to generic test procedure for MBMS HS PTP radio bearer test cases | F | 8.1.0 | 8.2.0 | R5-080536 |
| RP-39 | RP-080091 | 2221 | | Addition of clearing of stored data in 17.2.3.9 and 17.2.4.3 | F | 8.1.0 | 8.2.0 | R5-080539 |
| RP-39 | RP-080097 | 2222 | | Correction to generic C1 procedure to handle MBMS Modification Request message in case of MBMS Selected Service | F | 8.1.0 | 8.2.0 | R5-080540 |
| RP-39 | RP-080091 | 2223 | | Editorial correction to the procedure (C.1) for checking the UE in Idle mode state. | F | 8.1.0 | 8.2.0 | R5-080270 |
| RP-39 | RP-080091 | 2224 | | Correction to TestCase 6.2.2.3 | F | 8.1.0 | 8.2.0 | R5-080606 |
| RP-39 | RP-080097 | 2225 | | Corrections to test case 7.1.6.2.6 | F | 8.1.0 | 8.2.0 | R5-080594 |
| RP-39 | RP-080097 | 2226 | | Create a new test case 8.3.7.1a with A5/3 usage | F | 8.1.0 | 8.2.0 | R5-080581 |
| RP-39 | RP-080091 | 2227 | | Clarification of execution of radio bearer test cases in sections 14 and 18 | F | 8.1.0 | 8.2.0 | R5-080550 |
| RP-40 | RP-080371 | 2228 | | Addition of section 7.1.6a.2.3 to provide test for scheduled transmissions in E-DCH MAC-ese for 3.84Mcps and 7.68Mcps TDD | | 8.2.0 | 8.3.0 | R5-081376 |
| RP-40 | RP-080371 | 2229 | | Update of 7.1.6a.2.1 and addition of new test for the case where the scheduling delay timer expires in 7.1.6a.2.2 | | 8.2.0 | 8.3.0 | R5-081338 |
| RP-40 | RP-080371 | 2230 | | Correction to RRC test case 8.3.1.1 | | 8.2.0 | 8.3.0 | R5-081340 |
| RP-40 | RP-080377 | 2231 | | CR for 34.123-1:Contents addtion for LCR TDD in 7.1.6.1.1 | | 8.2.0 | 8.3.0 | R5-081107 |
| RP-40 | RP-080377 | 2232 | | CR for 34.123-1:Contents addtion for LCR TDD in 7.1.6.1.2 | | 8.2.0 | 8.3.0 | R5-081108 |
| RP-40 | RP-080377 | 2233 | | CR for 34.123-1:Contents addtion for LCR TDD in 7.1.6.1.3 | | 8.2.0 | 8.3.0 | R5-081109 |
| RP-40 | RP-080377 | 2234 | | CR for 34.123-1:Contents addtion for LCR TDD in 7.1.6.2.1 | | 8.2.0 | 8.3.0 | R5-081110 |
| RP-40 | RP-080377 | 2235 | | CR for 34.123-1:Contents addtion for LCR TDD in 7.1.6.2.3 | | 8.2.0 | 8.3.0 | R5-081111 |
| RP-40 | RP-080377 | 2236 | | CR for 34.123-1:Contents addtion for LCR TDD in 7.1.6.2.4 | | 8.2.0 | 8.3.0 | R5-081112 |
| RP-40 | RP-080377 | 2237 | | CR for 34.123-1:Contents addtion for LCR TDD in 7.1.6.3.1 | | 8.2.0 | 8.3.0 | R5-081113 |
| RP-40 | RP-080377 | 2238 | | CR for 34.123-1:Contents addtion for LCR TDD in 7.1.6.4.1 | | 8.2.0 | 8.3.0 | R5-081114 |
| RP-40 | RP-080377 | 2239 | | CR for 34.123-1:Contents addtion for LCR TDD in 7.1.6.4.2 | | 8.2.0 | 8.3.0 | R5-081115 |
| RP-40 | RP-080377 | 2240 | | CR for 34.123-1:Contents addition of LCR TDD part of 8.3.1.41 | | 8.2.0 | 8.3.0 | R5-081161 |
| RP-40 | RP-080377 | 2241 | | CR for 34.123-1:Contents addition of LCR TDD part of 8.3.1.42 | | 8.2.0 | 8.3.0 | R5-081163 |
| RP-40 | RP-080377 | 2242 | | CR for 34.123-1:Contents addition of LCR TDD part of 8.3.1.43 | | 8.2.0 | 8.3.0 | R5-081164 |
| RP-40 | RP-080365 | 2243 | | New test case addition for verifying features multi-frequency and UpPCH shifting of LCR TDD: 8.2.2.11a | | 8.2.0 | 8.3.0 | R5-081118 |
| RP-40 | RP-080365 | 2244 | | New test case addition for verifying features multi- | | 8.2.0 | 8.3.0 | R5-081119 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | frequency and UpPCH shifting of LCR TDD: 8.2.4.10a | | | | |
| RP-40 | RP-080365 | 2245 | | New test case addition for verifying features multi-frequency and UpPCH shifting of LCR TDD: 8.2.6.1a | | 8.2.0 | 8.3.0 | R5-081120 |
| RP-40 | RP-080365 | 2246 | | New test case addition for verifying features multi-frequency and UpPCH shifting of LCR TDD: 8.3.1.3a | | 8.2.0 | 8.3.0 | R5-081121 |
| RP-40 | RP-080365 | 2247 | | New test case addition for verifying features multi-frequency and UpPCH shifting of LCR TDD: 8.2.4.4a | | 8.2.0 | 8.3.0 | R5-081122 |
| RP-40 | RP-080365 | 2248 | | New test case addition for verifying features multi-frequency and UpPCH shifting of LCR TDD: 8.2.6.9a | | 8.2.0 | 8.3.0 | R5-081123 |
| RP-40 | RP-080378 | 2249 | | CR TS 34.123-1 LRPLMN selection | | 8.2.0 | 8.3.0 | R5-081378 |
| RP-40 | RP-080378 | 2250 | | Addition of test case Presentation of additional information during PLMN selection: Manual mode | | 8.2.0 | 8.3.0 | R5-081383 |
| RP-40 | RP-080374 | 2251 | | Enhanced CELL_FACH: New test case for RRC Connection Establishment for transition from Idle Mode to CELL_FACH: Success (Start of HS-DSCH Reception in CELL_FACH state) | | 8.2.0 | 8.3.0 | R5-081385 |
| RP-40 | RP-080373 | 2253 | | Correction to Rel-7 MAC test case 7.1.5b.1 | | 8.2.0 | 8.3.0 | R5-081603 |
| RP-40 | RP-080373 | 2254 | | Correction to Rel-7 MAC test case 7.1.6.2.11 | | 8.2.0 | 8.3.0 | R5-081579 |
| RP-40 | RP-080373 | 2255 | | Correction to Rel-7 MAC test case 7.1.6.3.3 | | 8.2.0 | 8.3.0 | R5-081235 |
| RP-40 | RP-080373 | 2256 | | Correction to Rel-7 MAC test case 7.1.6.4.3 | | 8.2.0 | 8.3.0 | R5-081389 |
| RP-40 | RP-080373 | 2257 | | CPC: Corrections to RRC Connection Establishment test case 8.1.2.19 | | 8.2.0 | 8.3.0 | R5-081309 |
| RP-40 | RP-080373 | 2258 | | CPC: Corrections to Radio Bearer Establishment and Reconfiguration test cases in section 8.2.1.x – 8.2.3.x | | 8.2.0 | 8.3.0 | R5-081605 |
| RP-40 | RP-080373 | 2259 | | CPC: Corrections to Physical Channel Reconfiguration test cases in section 8.2.6.x | | 8.2.0 | 8.3.0 | R5-081399 |
| RP-40 | RP-080373 | 2260 | | CPC: Correction to Cell Update and Active Set Update test cases in sections 8.3.1.x and 8.3.4.11 | | 8.2.0 | 8.3.0 | R5-081312 |
| RP-40 | RP-080380 | 2261 | | Correction of Default PDCP Message Contents | | 8.2.0 | 8.3.0 | R5-081391 |
| RP-40 | RP-080380 | 2262 | | Addition of a new test case for PDCP AMR Data PDU testing | | 8.2.0 | 8.3.0 | R5-081392 |
| RP-40 | RP-080364 | 2263 | | Network sharing: Correction to test case 6.1.2.11 | | 8.2.0 | 8.3.0 | R5-081611 |
| RP-40 | RP-080363 | 2264 | | Correction to Idle mode test cases | | 8.2.0 | 8.3.0 | R5-081395 |
| RP-40 | RP-080370 | 2265 | | Introduction of Operating Bands XII, XIII and XIV (UMTS700 MHz) in section 6 | | 8.2.0 | 8.3.0 | R5-081396 |
| RP-40 | RP-080365 | 2266 | | Correction to Rel-7 RLC UM test case 7.2.2.14 | | 8.2.0 | 8.3.0 | R5-081503 |
| RP-40 | RP-080365 | 2267 | | Correction to Rel-7 MAC test case 7.1.5a.1 | | 8.2.0 | 8.3.0 | R5-081226 |
| RP-40 | RP-080365 | 2268 | | Correction to Rel7 MAC test case 7.1.5a.2 | | 8.2.0 | 8.3.0 | R5-081227 |
| RP-40 | RP-080365 | 2269 | | Correction to Rel7 MAC test case 7.1.5a.3 | | 8.2.0 | 8.3.0 | R5-081228 |
| RP-40 | RP-080365 | 2270 | | Correction to Rel7 MAC test case 7.1.5a.4 | | 8.2.0 | 8.3.0 | R5-081229 |
| RP-40 | RP-080365 | 2271 | | Correction to Rel-7 MAC generc test procedure 7.1.5a.5.1 | | 8.2.0 | 8.3.0 | R5-081230 |
| RP-40 | RP-080430 | 2272 | | Correction to Rel-7 MAC test case 7.1.5a.5.2 | | 8.2.0 | 8.3.0 | R5-081231 |
| RP-40 | RP-080430 | 2273 | | Correction to Rel-7 MAC test case 7.1.5a.5.3 | | 8.2.0 | 8.3.0 | R5-081232 |
| RP-40 | RP-080430 | 2274 | | Correction to RLC AM test case 7.2.3.36 | | 8.2.0 | 8.3.0 | R5-081246 |
| RP-40 | RP-080364 | 2275 | | Correction to GCF WI-25 MACTestcase 7.1.6.2.6 | | 8.2.0 | 8.3.0 | R5-081504 |
| RP-40 | RP-080430 | 2276 | | Create a new test case 8.3.7.1b with UEA/2 and A5/3 usage | | 8.2.0 | 8.3.0 | R5-081601 |
| RP-40 | RP-080363 | 2277 | | Correction to GCF WI-10 RRC Test Case 8.2.6.37 | | 8.2.0 | 8.3.0 | R5-081377 |
| RP-40 | RP-080429 | 2278 | | Correction to GCF WI-25 HSU Test case 8.2.6.51 | | 8.2.0 | 8.3.0 | R5-081210 |
| RP-40 | RP-080363 | 2279 | | Correction in test case 8.1.1.9 | | 8.2.0 | 8.3.0 | R5-081241 |
| RP-40 | RP-080427 | 2280 | | Correction to RRC testcase 8.2.2.50 | | 8.2.0 | 8.3.0 | R5-081305 |
| RP-40 | RP-080430 | 2281 | | UEA2/UIA2: New Security Mode Command test cases to verify new ciphering and integrity protection algorithms in Rel-7. | | 8.2.0 | 8.3.0 | R5-081506 |
| RP-40 | RP-080430 | 2282 | | UEA2/UIA2: New Radio Bearer Reconfiguration test cases to verify new ciphering and integrity protection algorithms in Rel-7. | | 8.2.0 | 8.3.0 | R5-081507 |
| RP-40 | RP-080429 | 2283 | | MBMS: corrections to RRC FLD test cases – removal of MBMS dispersion indicator. | | 8.2.0 | 8.3.0 | R5-081317 |
| RP-40 | RP-080429 | 2284 | | MBMS: correction to test cases 8.5.2.2 and 8.5.4.1. | | 8.2.0 | 8.3.0 | R5-081319 |
| RP-40 | RP-080363 | 2285 | | R99: Correction to test case 8.3.2.12 | | 8.2.0 | 8.3.0 | R5-081322 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version -Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-40 | RP-080429 | 2286 | | Correction to GCF WI 49 MBMS test case 8.5.2.2 | | 8.2.0 | 8.3.0 | R5-081326 |
| RP-40 | RP-080429 | 2287 | | Correction to GCF WI 49 MBMS test case 8.5.3.1 | | 8.2.0 | 8.3.0 | R5-081327 |
| RP-40 | RP-080429 | 2288 | | Correction to GCF WI 49 MBMS test case 8.5.6.1 | | 8.2.0 | 8.3.0 | R5-081334 |
| RP-40 | RP-080429 | 2289 | | Correction to GCF WI 49 MBMS test case 8.5.3.3 | | 8.2.0 | 8.3.0 | R5-081341 |
| RP-40 | RP-080363 | 2290 | | Correction of definition for UTRA RF Channel Number in RRC test cases | | 8.2.0 | 8.3.0 | R5-081581 |
| RP-40 | RP-080429 | 2291 | | Corrections to MBMS RRC test cases 8.5.6.1, 8.5.6.2, 8.5.6.3 and 8.5.6.4 | | 8.2.0 | 8.3.0 | R5-081374 |
| RP-40 | RP-080429 | 2292 | | Correction to GCF WI 49 MBMS test case 8.5.3.6 | | 8.2.0 | 8.3.0 | R5-081518 |
| RP-40 | RP-080363 | 2293 | | Correction to GCF work item 10 InterRAT testcase 8.3.7.16 | | 8.2.0 | 8.3.0 | R5-081549 |
| RP-40 | RP-080427 | 2294 | | Correction in 8.2.x test cases | | 8.2.0 | 8.3.0 | R5-081598 |
| RP-40 | RP-080427 | 2295 | | Editorial corrections to test cases 9.5.2 and 9.5.9 | | 8.2.0 | 8.3.0 | R5-081243 |
| RP-40 | RP-080429 | 2296 | | Corrections to MBMS NAS test cases 11.8.2 and 11.8.2m | | 8.2.0 | 8.3.0 | R5-081511 |
| RP-40 | RP-080429 | 2297 | | Correction of generic test procedure for MBMS HS PtP radio bearer test cases | | 8.2.0 | 8.3.0 | R5-081512 |
| RP-40 | RP-080429 | 2298 | | Correction of MBMS PtP RAB test cases 14.6.9 and 14.6.10 | | 8.2.0 | 8.3.0 | R5-081032 |
| RP-40 | RP-080430 | 2299 | | Update of RB test case 14.7.6b | | 8.2.0 | 8.3.0 | R5-081198 |
| RP-40 | RP-080429 | 2300 | | Correction to GCF WI 25 E-DCH RAB test case 14.7.6 | | 8.2.0 | 8.3.0 | R5-081329 |
| RP-40 | RP-080429 | 2301 | | Correction to GCF WI 25 E-DCH RAB test case 14.7.7 | | 8.2.0 | 8.3.0 | R5-081332 |
| RP-40 | RP-080430 | 2302 | | Correction to RAB test case 14.7.6a and 14.7.6b | | 8.2.0 | 8.3.0 | R5-081502 |
| RP-40 | RP-080428 | 2303 | | Corrections to timers in GPS Notification test cases | | 8.2.0 | 8.3.0 | R5-081570 |
| RP-40 | RP-080363 | 2304 | | Corrections wrt clearing stored GPS assistance data in section 17 | | 8.2.0 | 8.3.0 | R5-081516 |
| RP-40 | RP-080363 | 2305 | | Various editorial corrections | | 8.2.0 | 8.3.0 | R5-081520 |
| RP-41 | RP-080554 | 2306 | | Correction to CS+PS RRC 8.2.x test cases | F | 8.3.0 | 8.4.0 | R5-083045 |
| RP-41 | RP-080554 | 2307 | | Correction to CS+PS RRC 8.3.x test cases | F | 8.3.0 | 8.4.0 | R5-083046 |
| RP-41 | RP-080555 | 2308 | | Correction to CS+PS test cases in HSD ATS | F | 8.3.0 | 8.4.0 | R5-083047 |
| RP-41 | RP-080562 | 2309 | | Enhanced CELL_FACH: New test case for Cell Update: cell reselection in CELL_FACH (Reselection between cell not supporting HS-PDSCH in CELL_FACH and cell supporting HS-PDSCH is CELL_FACH) | F | 8.3.0 | 8.4.0 | R5-083062 |
| RP-41 | RP-080565 | 2310 | | CR for 34.123-1:Contents addition for LCR TDD in 8.2.6.50 | F | 8.3.0 | 8.4.0 | R5-083066 |
| RP-41 | RP-080565 | 2311 | | CR for 34.123-1:Contents addition for LCR TDD in 8.2.6.51 | F | 8.3.0 | 8.4.0 | R5-083067 |
| RP-41 | RP-080565 | 2312 | | CR for 34.123-1:Contents addition for LCR TDD in 8.2.6.54 | F | 8.3.0 | 8.4.0 | R5-083068 |
| RP-41 | RP-080565 | 2313 | | CR for 34.123-1:Contents addition for LCR TDD in 8.3.4.10 | F | 8.3.0 | 8.4.0 | R5-083069 |
| RP-41 | RP-080561 | 2314 | | CR for 34.123-1:Contents addition for LCR TDD in 8.3.11.14 | F | 8.3.0 | 8.4.0 | R5-083070 |
| RP-41 | RP-080561 | 2315 | | Addition of combinations on DPCH, HS-DSCH and E-PUCH to radio bearer tests for for 3.84Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083076 |
| RP-41 | RP-080561 | 2316 | | Addition of combinations on DPCH, HS-DSCH and E-PUCH to radio bearer tests for for 7.68Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083077 |
| RP-41 | RP-080561 | 2317 | | Addition of generic information for radio bearer tests for E-DCH and HS-DSCH for 3.84Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083078 |
| RP-41 | RP-080561 | 2318 | | Addition of generic information for radio bearer tests for E-DCH and HS-DSCH for 7.68Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083079 |
| RP-41 | RP-080561 | 2319 | | Addition of new MAC tests for E-DCH operation of 3.84Mcps and 7.68Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083080 |
| RP-41 | RP-080561 | 2320 | | Update of physical channel reconfiguration tests for E-DCH to include 3.84Mcps and 7.68Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083081 |
| RP-41 | RP-080561 | 2321 | | Update of radio bearer reconfiguration tests for E-DCH to include 3.84Mcps and 7.68Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083082 |
| RP-41 | RP-080558 | 2322 | | Update of RRC connection mobility procedure tests for E-DCH to include 3.84Mcps and 7.68Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083083 |
| RP-41 | RP-080558 | 2323 | | Clarification to MAC transport block size selection test cases for HSDPA | F | 8.3.0 | 8.4.0 | R5-083084 |
| RP-41 | RP-080558 | 2324 | | Clarification to HSDPA RB test cases | F | 8.3.0 | 8.4.0 | R5-083086 |
| RP-41 | RP-08xxxx | 2325 | | Clarification to E-DCH RB test cases | F | 8.3.0 | 8.4.0 | R5-083087 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| RP-41 | RP-080558 | 2326 | | Resubmission of email agreed CRs after RAN5#39 | F | 8.3.0 | 8.4.0 | R5-083089 |
| RP-41 | RP--080740 | 2327 | | Clarification to MAC transport block size selection test cases for E-DCH | F | 8.3.0 | 8.4.0 | R5-083090 |
| RP-41 | RP-080558 | 2328 | | Correction to GCF WI 24 Network Sharing test case 6.2.1.11 | F | 8.3.0 | 8.4.0 | R5-083191 |
| RP-41 | RP-080555 | 2329 | | Correction to Rel7 Improved L2 MAC-ehs test case 7.1.5a.4 | F | 8.3.0 | 8.4.0 | R5-083206 |
| RP-41 | RP-080554 | 2330 | | Correction to GCF WI-014 HSD test case 8.2.6.48 | F | 8.3.0 | 8.4.0 | R5-083207 |
| RP-41 | RP-080565 | 2331 | | Correction to GCF WI-010 test case 8.2.6.37 and 8.2.6.38 | F | 8.3.0 | 8.4.0 | R5-083208 |
| RP-41 | RP-080565 | 2332 | | Contents addition for LCR TDD in 7.1.6.2.8 | F | 8.3.0 | 8.4.0 | R5-083277 |
| RP-41 | RP-080565 | 2333 | | New testcase for LCR TDD E-DCH 7.1.6.2.9a | F | 8.3.0 | 8.4.0 | R5-083279 |
| RP-41 | RP-080565 | 2334 | | New testcase for LCR TDD E-DCH E-TFC 7.1.6.2.10a | F | 8.3.0 | 8.4.0 | R5-083280 |
| RP-41 | RP-080565 | 2335 | | New testcase for LCR TDD E-DCH 7.1.6.3.5 | F | 8.3.0 | 8.4.0 | R5-083281 |
| RP-41 | RP-080565 | 2336 | | Contents addition for LCR TDD in 8.1.2.17 | F | 8.3.0 | 8.4.0 | R5-083282 |
| RP-41 | RP-080565 | 2337 | | Contents addition for LCR TDD in 8.1.2.18 | F | 8.3.0 | 8.4.0 | R5-083283 |
| RP-41 | RP-080565 | 2338 | | Contents addition for LCR TDD in 8.2.1.35 | F | 8.3.0 | 8.4.0 | R5-083284 |
| RP-41 | RP-080565 | 2339 | | Contents addition for LCR TDD in 8.2.1.36 | F | 8.3.0 | 8.4.0 | R5-083285 |
| RP-41 | RP-080565 | 2340 | | Contents addition for LCR TDD in 8.2.2.44 | F | 8.3.0 | 8.4.0 | R5-083286 |
| RP-41 | RP-080565 | 2341 | | Contents addition for LCR TDD in 8.2.2.45 | F | 8.3.0 | 8.4.0 | R5-083287 |
| RP-41 | RP-080565 | 2342 | | Contents addition for LCR TDD in 8.2.2.46 | F | 8.3.0 | 8.4.0 | R5-083288 |
| RP-41 | RP-080565 | 2343 | | Contents addition for LCR TDD in 8.2.2.47 | F | 8.3.0 | 8.4.0 | R5-083289 |
| RP-41 | RP-080565 | 2344 | | Contents addition for LCR TDD in 8.2.2.48 | F | 8.3.0 | 8.4.0 | R5-083290 |
| RP-41 | RP-080565 | 2345 | | Contents addition for LCR TDD in 8.2.2.49 | F | 8.3.0 | 8.4.0 | R5-083291 |
| RP-41 | RP-080565 | 2346 | | Contents addition for LCR TDD in 8.2.3.36 | F | 8.3.0 | 8.4.0 | R5-083292 |
| RP-41 | RP-080565 | 2347 | | Addition of general information interoperability radio bearer tests for E-DCH and HS-DSCH combinations for LCR TDD in 18.1.1.4 | F | 8.3.0 | 8.4.0 | R5-083293 |
| RP-41 | RP-080558 | 2348 | | 5 New testcases for LCR TDD RAB | F | 8.3.0 | 8.4.0 | R5-083294 |
| RP-41 | RP-080558 | 2349 | | Introduction and test case addition 8.4.1.2a to verify the UE supporting the features and operation of multi-frequency and UpPCH Shifting for LCR TDD | F | 8.3.0 | 8.4.0 | R5-083295 |
| RP-41 | RP-080558 | 2350 | | Correction to CPC test case 8.2.2.53 | F | 8.3.0 | 8.4.0 | R5-083346 |
| RP-41 | RP-080558 | 2351 | | Correction to enhanced L2 test case 8.2.2.57 | F | 8.3.0 | 8.4.0 | R5-083353 |
| RP-41 | RP-080567 | 2352 | | Correction to Rel7 RAB test cases | F | 8.3.0 | 8.4.0 | R5-083356 |
| RP-41 | RP--080740 | 2353 | | New Radio Bearer test cases for CS-HSPA RABS | F | 8.3.0 | 8.4.0 | R5-083362 |
| RP-41 | RP-080568 | 2354 | | Correction to 8.3.1.42 | F | 8.3.0 | 8.4.0 | R5-083401 |
| RP-41 | RP-080568 | 2355 | | Add generic RB test procedure for 3.84 Mcps TDD MBSFN | F | 8.3.0 | 8.4.0 | R5-083443 |
| RP-41 | RP-080568 | 2356 | | Add generic RB test procedure for 7.68 Mcps TDD MBSFN | F | 8.3.0 | 8.4.0 | R5-083446 |
| RP-41 | RP-080568 | 2357 | | Addition to clause 18.2.5 of test cases for MBSFN RABs for 3.84 Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083448 |
| RP-41 | RP-080568 | 2358 | | Addition to clause 18.3.5 of test cases for MBSFN RABs for 7.68 Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083450 |
| RP-41 | RP-080568 | 2359 | | MAC and RLC test cases for HCR and VHCR TDD MBSFN | F | 8.3.0 | 8.4.0 | R5-083451 |
| RP-41 | RP-080568 | 2360 | | Addition of MBSFN cluster selection test cases for 3.48 and 7.68 Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083455 |
| RP-41 | RP-080561 | 2361 | | Addition of MBSFN RRC test cases for 3.84 and 7.68 Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083456 |
| RP-41 | RP-080561 | 2362 | | Update of RRC connection establishment tests for E-DCH to include 3.84Mcps and 7.68Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083457 |
| RP-41 | RP-080567 | 2363 | | Update of implementation and conformance statement to include E-DCH tests for 3.84Mcps TDD and 7.68Mcps TDD | F | 8.3.0 | 8.4.0 | R5-083458 |
| RP-41 | RP-080567 | 2364 | | Addition of new CS Voice over HSPA test case for transitions between CS over DCH and CS over HSPA | F | 8.3.0 | 8.4.0 | R5-083485 |
| RP-41 | RP-080558 | 2365 | | Update of PDCP test case 7.3.7.1 | F | 8.3.0 | 8.4.0 | R5-083486 |
| RP-41 | RP-080567 | 2366 | | CPC: Corrections to Cell update test case 8.3.1.45 | F | 8.3.0 | 8.4.0 | R5-083500 |
| RP-41 | RP-080566 | 2367 | | Correction to RLC AM test case 7.2.3.36 | F | 8.3.0 | 8.4.0 | R5-083516 |
| RP-41 | RP-080566 | 2368 | | Addition of Common Test Sequence for PDCP | F | 8.3.0 | 8.4.0 | R5-083524 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | Setup a UE terminated CS session in UM RLC | | | | |
| RP-41 | RP-080562 | 2369 | | New test case for Network Selection Enhancements: Exception in manual network selection mode when HPLMN is available at power-on (6.1.1.5) | F | 8.3.0 | 8.4.0 | R5-083535 |
| RP-41 | RP-080562 | 2370 | | NW selection mode at switch-on | F | 8.3.0 | 8.4.0 | R5-083536 |
| RP-41 | RP-080562 | 2371 | | Enhanced CELL_FACH: New test case for Measurement reporting when moving from CELL_PCH to CELL_FACH | F | 8.3.0 | 8.4.0 | R5-083538 |
| RP-41 | RP-080562 | 2372 | | Enhanced CELL_FACH: New test case for Reconfiguration between FACH/E-FACH | F | 8.3.0 | 8.4.0 | R5-083539 |
| RP-41 | RP--080740 | 2373 | | New test case for Enhanced CELL_FACH: Radio Bearer Reconfiguration for transition between E-DCH/FACH states with ongoing HS-DSCH reception | F | 8.3.0 | 8.4.0 | R5-083544 |
| RP-41 | RP-080558 | 2374 | | Addition of new Enhanced CELL_FACH test case for paging without HS-SCCH in CELL_PCH | F | 8.3.0 | 8.4.0 | R5-083545 |
| RP-41 | RP-080558 | 2375 | | Correction to WI-10 test case 6.2.2.3 | F | 8.3.0 | 8.4.0 | R5-083564 |
| RP-41 | RP-080555 | 2376 | | Correction to GCF WI 25 HSUPA MAC test case 7.1.6.2.6 | F | 8.3.0 | 8.4.0 | R5-083567 |
| RP-41 | RP-080555 | 2377 | | Correction to Rel7 Improved L2 MAC-ehs test case 7.1.5a.1 and 7.1.5a.2 | F | 8.3.0 | 8.4.0 | R5-083568 |
| RP-41 | RP--080740 | 2378 | | Correction to Improved L2 Flexible RLC test case 7.2.3.36 | F | 8.3.0 | 8.4.0 | R5-083569 |
| RP-41 | RP--080740 | 2379 | | Correction to test cases 8.3.1.34, 8.3.1.35, 8.3.1.36 and 8.3.1.37 | F | 8.3.0 | 8.4.0 | R5-083570 |
| RP-41 | RP-080558 | 2380 | | Add two new interRAT TC from UEA2/UIA2 to GEA2 or GEA3 | F | 8.3.0 | 8.4.0 | R5-083571 |
| RP-41 | RP-080558 | 2381 | | Correction to GCF WI 25 HSUPA test cases 8.3.1.42 and 8.3.1.42a | F | 8.3.0 | 8.4.0 | R5-083577 |
| RP-41 | RP-080558 | 2382 | | Correction to WI-49 MBMS test case 12.9.17 | F | 8.3.0 | 8.4.0 | R5-083579 |
| RP-41 | RP-080558 | 2383 | | Correction to generic test procedure for Enhanced L2 radio bearer test cases | F | 8.3.0 | 8.4.0 | R5-083580 |
| RP-41 | RP-080566 | 2384 | | Correction to HSPA RB test cases 14.6.1d and 14.6.6c | F | 8.3.0 | 8.4.0 | R5-083581 |
| RP-41 | RP-080566 | 2385 | | Correction to 14.7.6b for mac-ehs header size, TBS and associated TFRI | F | 8.3.0 | 8.4.0 | R5-083582 |
| RP-41 | RP-080554 | 2386 | | Clarification to generic radio bearer test procedure regarding the use of octet aligned or bit aligned HS-DSCH Transport Block Size Table for FDD | F | 8.3.0 | 8.4.0 | R5-083590 |
| RP-41 | RP-080554 | 2387 | | Addition of new test case: Steering of Roaming | F | 8.3.0 | 8.4.0 | R5-083647 |
| RP-41 | RP-080555 | 2388 | | Addition of new test case: Displaying EHPLMNs in manual mode | F | 8.3.0 | 8.4.0 | R5-083648 |
| RP-41 | RP-080558 | 2389 | | CPC: Corrections to Physical Channel Reconfiguration test cases in section 8.2.6.x | F | 8.3.0 | 8.4.0 | R5-083660 |
| RP-42 | RP-080965 | 2390 | | Enhanced CELL_FACH: New test case for Reconfiguration between FACH/E-FACH | F | 8.4.0 | 8.5.0 | R5-083537 |
| RP-42 | RP-080952 | 2391 | | Correction to E-DCH TC 8.2.6.51 for 3.84Mcps and 7.68Mcps TDD | F | 8.4.0 | 8.5.0 | R5-085036 |
| RP-42 | RP-080954 | 2392 | | Correction to test case 8.2.6.52 | F | 8.4.0 | 8.5.0 | R5-085038 |
| RP-42 | RP-080954 | 2393 | | Correction to testcases 8.5.1.2, 8.5.1.12, 8.5.1.13 | F | 8.4.0 | 8.5.0 | R5-085062 |
| RP-42 | RP-080955 | 2394 | | Correction to GCF Rel7 Improved L2 test case 7.1.5a.4 | F | 8.4.0 | 8.5.0 | R5-085069 |
| RP-42 | RP-080955 | 2395 | | Correction to Rel7 CPC test case 8.2.1.38 | F | 8.4.0 | 8.5.0 | R5-085070 |
| RP-42 | RP-080955 | 2396 | | Correction to GCF Rel7 CPC test case 8.2.2.52 | F | 8.4.0 | 8.5.0 | R5-085071 |
| RP-42 | RP-080955 | 2397 | | Correction of Rel-7 CPC test case 8.2.6.61 | F | 8.4.0 | 8.5.0 | R5-085072 |
| RP-42 | RP-080955 | 2398 | | Correction of Rel-7 CPC test case 8.3.11.15 | F | 8.4.0 | 8.5.0 | R5-085073 |
| RP-42 | RP-080952 | 2399 | | Correction to RRC connection establishment test case in section 8.1.2.10 for LCR TDD | F | 8.4.0 | 8.5.0 | R5-085128 |
| RP-42 | RP-080955 | 2400 | 1 | New testcase 8.2.1.27b to verify the features and operation of multi-frequency and UpPCH Shifting for LCR TDD | F | 8.4.0 | 8.5.0 | R5-085134 |
| RP-42 | RP-080955 | 2401 | 1 | New testcase 8.2.2.36a to verify the features and operation of multi-frequency and UpPCH Shifting for LCR TDD | F | 8.4.0 | 8.5.0 | R5-085135 |
| RP-42 | RP-080955 | 2402 | 1 | New testcase 8.2.3.31a to verify the features and operation of multi-frequency and UpPCH Shifting for | F | 8.4.0 | 8.5.0 | R5-085136 |

| Meeting -1st-Level | Doc-1st-Level | CR | Rev | Subject | Cat | Version - Current | Version -New | Doc-2nd-Level |
|---|---|---|---|---|---|---|---|---|
| | | | | LCR TDD | | | | |
| RP-42 | RP-080955 | 2403 | 1 | New testcase 8.3.1.1b to verify the features and operation of multi-frequency and UpPCH Shifting for LCR TDD | F | 8.4.0 | 8.5.0 | R5-085137 |
| RP-42 | RP-080955 | 2404 | 1 | Modification of testcase 8.4.1.1a to verify the features and operation of multi-frequency and UpPCH Shifting for LCR TDD | F | 8.4.0 | 8.5.0 | R5-085138 |
| RP-42 | RP-080955 | 2405 | 1 | New testcase 18.1.2.4a to verify the features and operation of multi-frequency and UpPCH Shifting for LCR TDD | F | 8.4.0 | 8.5.0 | R5-085139 |
| RP-42 | RP-080955 | 2406 | 1 | New testcase 18.1.2.13.1a to verify the features and operation of multi-frequency and UpPCH Shifting for LCR TDD | F | 8.4.0 | 8.5.0 | R5-085140 |
| RP-42 | RP-080955 | 2407 | 1 | New testcase 8.2.4.36a to verify the features and operation of multi-frequency and UpPCH Shifting for LCR TDD | F | 8.4.0 | 8.5.0 | R5-085141 |
| RP-42 | RP-080955 | 2408 | 1 | New testcase 8.2.6.39c to verify the features and operation of multi-frequency and UpPCH Shifting for LCR TDD | F | 8.4.0 | 8.5.0 | R5-085142 |
| RP-42 | RP-080955 | 2409 | 1 | New testcase 8.3.1.33a to verify the features and operation of multi-frequency and UpPCH Shifting for LCR TDD | F | 8.4.0 | 8.5.0 | R5-085143 |
| RP-42 | RP-080967 | 2410 | 3 | New RLC test case for Flexible handling of RLC PDU sizes for UM RLC in uplink (7.2.2.15) | F | 8.4.0 | 8.5.0 | R5-085166 |
| RP-42 | RP-080955 | 2411 | | CR to 34.123-1: Contents addition for LCR TDD in 7.1.6.4.3 | F | 8.4.0 | 8.5.0 | R5-085183 |
| RP-42 | RP-080952 | 2412 | | Correction to WI-10 test case 6.1.2.2 | F | 8.4.0 | 8.5.0 | R5-085248 |
| RP-42 | RP-080956 | 2413 | | Correction to test case 7.1.6.3.3 | F | 8.4.0 | 8.5.0 | R5-085285 |
| RP-42 | RP-080956 | 2414 | | Correction to UL DPCCH Slot Format for UL DTX/DRX Test cases | F | 8.4.0 | 8.5.0 | R5-085286 |
| RP-42 | RP-080956 | 2415 | | Correction to DTX-DRX Parameters for CPC test cases | F | 8.4.0 | 8.5.0 | R5-085287 |
| RP-42 | RP-080952 | 2416 | | Modification of cell powers in TC 8.3.4.8 | F | 8.4.0 | 8.5.0 | R5-085288 |
| RP-42 | RP-080952 | 2417 | | Removal of PICS information USIM removal possible without powering down from NAS test cases 12.4.1.4b and 12.4.2.5b | F | 8.4.0 | 8.5.0 | R5-085289 |
| RP-42 | RP-080952 | 2418 | | Correction to GCF WI-24 MM testcase 9.4.8 | F | 8.4.0 | 8.5.0 | R5-085298 |
| RP-42 | RP-080952 | 2419 | | Correction to MRAT Idle mode testcase 6.2.1.1, 6.2.1.6, 6.2.1.7 and 6.2.1.8 | F | 8.4.0 | 8.5.0 | R5-085303 |
| RP-42 | RP-080953 | 2420 | | Correction to GCF WI-14 HSDPA RRC testcase 8.3.1.37 | F | 8.4.0 | 8.5.0 | R5-085319 |
| RP-42 | RP-080952 | 2421 | | Inconsistent applicability concerning MT-LR test cases | F | 8.4.0 | 8.5.0 | R5-085332 |
| RP-42 | RP-080956 | 2422 | 2 | Correction to TB test points and generic test procedure for Enhanced L2 radio bearer test cases | F | 8.4.0 | 8.5.0 | R5-085396 |
| RP-42 | RP-080967 | 2423 | | New RLC test case for Flexible handling of RLC PDU sizes for AM RLC in uplink (7.2.3.38) | F | 8.4.0 | 8.5.0 | R5-085423 |
| RP-42 | RP-080968 | 2424 | | Addition 1.28 Mcps TDD contents in 8.5.1.14 and 8.5.1.15 | F | 8.4.0 | 8.5.0 | R5-085466 |
| RP-42 | RP-080952 | 2425 | | Correction to network selection enhancements test case 6.1.1.12 | F | 8.4.0 | 8.5.0 | R5-085504 |
| RP-42 | RP-080965 | 2426 | | Enhanced CELL_FACH: New Test Case for UE Identification on HS-SCCH in CELL_FACH | F | 8.4.0 | 8.5.0 | R5-085505 |
| RP-42 | RP-080953 | 2427 | | Correction to No. of HARQ Process for HSDPA CAT 10 in RAB test cases | F | 8.4.0 | 8.5.0 | R5-085536 |
| RP-42 | RP-080953 | 2428 | | Corrections to HSDPA test case 11.1.1.1a | F | 8.4.0 | 8.5.0 | R5-085557 |

# History

| Document history | | |
|---|---|---|
| V8.0.0 | October 2007 | Publication |
| V8.1.0 | January 2008 | Publication |
| V8.2.0 | May 2008 | Publication |
| V8.3.0 | July 2008 | Publication |
| V8.4.0 | October 2008 | Publication |
| V8.5.0 | January 2009 | Publication |